


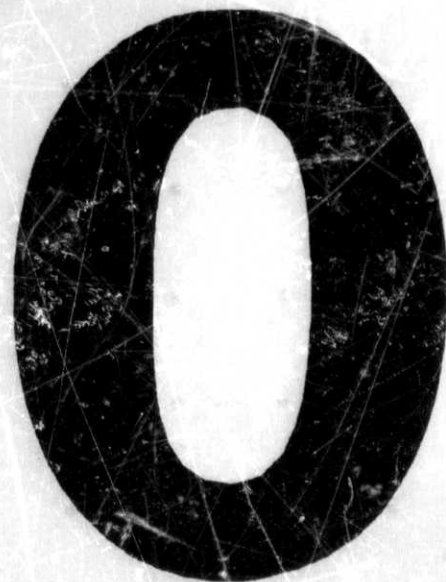

Allmänt
General
Allgemeines
Généralités
Generalidades

1-A02

RESERVDELSKATALOG

SPARE PARTS CATALOGUE

ERSATZTEILE-KATALOG

CATALOGUE DES PIECES DE RECHANGE

CATALOGO DE PIEZAS DE RECAMBIO

SAAB 900

MODEL 1979-1980

Ordering No. 851844

SAAB-SCANIA AKTIEBOLAG
Saab Car Division

NYKÖPING SWEDEN
Copyright SAAB-SCANIA

Allmänt, Satser
General, Complete sets
Allgemeines, Komplette Sätze
Généralités, Jeux complets
Generalidades, Juegos completos

Verktyg
Tools
Werkzeuge
Outils
Herramientas

Motor
Engine
Motor
Moteur
Motor

Elektriskt system, Instrument
Electrical system, Instruments
Elektrisches System, Instrumente
Équipement électrique, Instruments
Sistema eléctrico, Instrumentos

Kraftöverföring
Transmission
Kraftübertragung
Transmisión
Transmisión

Bromsar
Brakes
Bremsen
Freins
Frenos

Framvagn, Styrinrättning
Front assembly, Steering
Vorderwagen, Lenkung
Train-avant, Direction
Tren delantero, Dirección

Fjädringssystem, Hjul
Suspension, Wheels
Federung, Räder
Suspension, Roues
Suspensión, Ruedas

Karos
Body
Karosserie
Carrosserie
Carrocería

Tillbehör
Accessories
Zubehör
Accessoires
Accesorios

Numerregister
Numerical register
Nummer-Verzeichnis
Index numérique
Índice numérico

0

1

2

3

4

5

6

7

8

9

10

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

GENERAL

	Page
Introduction	1-A05
Direction	1-A06
Abbreviations	1-A12
Chassis numbers	1-A13
Engine and gearbox numbers	1-A15
Stock holding level	1-A18
Complete sets	1-F02

ALLGEMEINES

	Seite
Einleitung	1-C01
Anweisungen	1-C02
Verkürzungen	1-C08
Chassisnummern	1-C09
Motor- und Getriebenummer	1-C11
Lagerhaltungsniveau	1-C14
Komplette Sätze	1-F02

GENERALIDADES

	Página
Introducción	1-E01
Instrucciones	1-E02
Abreviaciones	1-E08
Núm. de chasis	1-E09
Núm. de motor y de caja de cambios	1-E11
Nivel de almacenaje	1-F14

ALLMÄNT

	Sida
Inledning	1-B01
Anvisningar	1-B02
Förkortningar	1-B08
Chassinummer	1-B09
Motor- och växellådsnummer	1-B11
Lagerhållningsnivå	1-B14
Satser	1-F02

GENERALITES

	Page
Introduction	1-D01
Instructions	1-D02
Abbreviations	1-D03
Numéro de châssis	1-D09
No. de moteur et de boîte de vitesses	1-D11
Niveau de magasinage	1-D14
Jeux complets	1-F02

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

This spare parts catalogue is valid for Saab 900 year models 1979-1980. The catalogue is divided into groups 0-10. Group 0 includes General and Complete sets, group 1 includes Tools, i.e. special tools intended for maintenance and repair work. Group 10 includes numerical index. The catalogue is divided into groups according to recommendations given by the Swedish Automobile Servicing and Retailing Employers' Association in respect of spare parts catalogues, workshop manuals, etc. On the following pages you will find further information about the handling and the usage of this catalogue.


The spare parts catalogue is supplied only in microfiche edition. The ordering number is 651844 and the catalogue is kept up-to-date by additional and replacement fiches. When necessary, special "Spare Parts Information" will be sent out.

When ordering spare parts for a certain Saab car always state the chassis number and/or engine- or gearbox number of the particular car. The illustration, page 1-A13, shows where to find these numbers in the car, either punched or stated on signs.

MICROFICHE LAYOUT


Microfiche cards are reproduced with a reduction of 42 times. Each microfiche contains a maximum of 288 illustration and text pages in a grid system of 12 x 12 squares.

Catalogue information may be obtained from a microfiche in the following way.

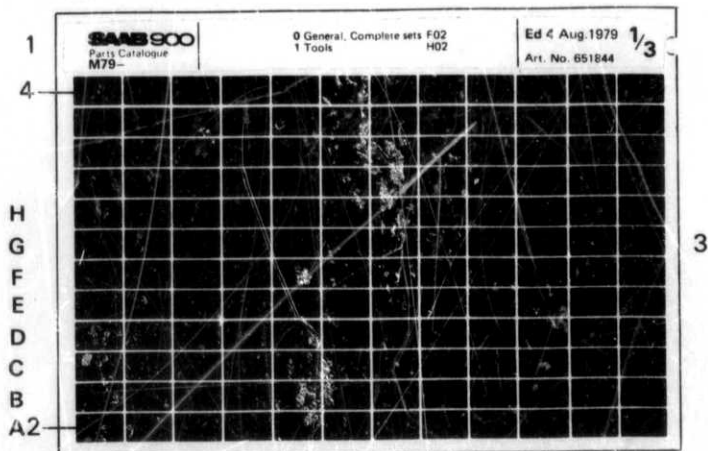

1. Heading section
2. Introduction (first fiche in each batch)
3. Illustration and text pages
4. Numerical index (last fiche in each batch)

1. Heading section

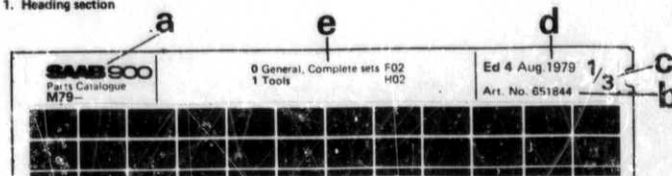


- a. Type designation
- b. Catalogue number
- c. Microfiche number: e.g. card number 1 of four is written 1/4
- d. Date of issue
- e. List of catalogue groups contained on the fiche with references to microfiche coordinates
- f. List of catalogue groups contained on the fiche with references to microfiche coordinates

2. General

The general part of the catalogue always starts on fiche card 1 line A-E. It contains introduction, directions, chassis numbers, etc.

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

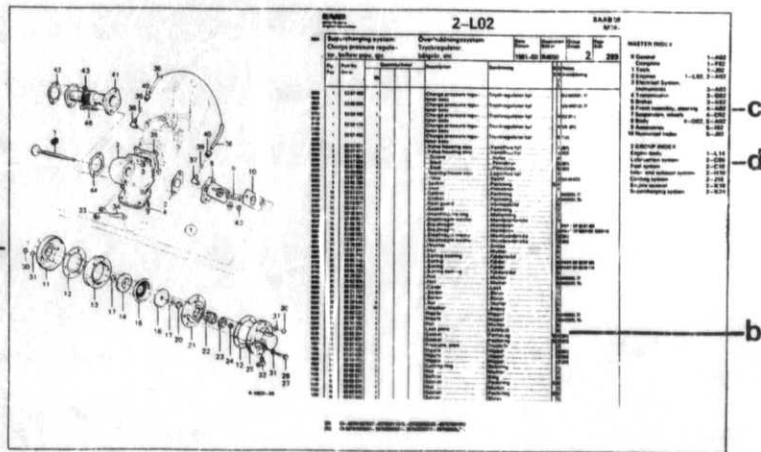

Lines F,G,H and upwards contain all catalogue information arranged at the coordinates indicated by the list of contents.

Each microfiche square contains the following information.

- a Illustration page
- b Text page
- c Master index
- d Group index

a Illustration page

The pictures on the illustration page consist of exploded views. Each part is assigned a figure number for reference to the corresponding numbers on the text page. Figure numbers, referring to assemblies or units are encircled on the exploded view. The illustration page is repeated as often as is required to cover the full text of each section.

b Text page

The layout of the text pages is shown on the opposite picture. The numbers on the picture refer to corresponding numbers in the text below.

- 1 Microfiche coordinate for grid system
- 2 Section internal code for computer system
- 3 Sub group e.g. FUEL SYSTEM main group 2
- 4 Section e.g. Twin carburetor
- 5 Date date of issue
- 6 Picture number picture on corresponding left hand page
- 7 Main group e.g. 2 Engine
- 8 Page page number within main group
- 9 Line number internal code for computer system

900 M79-
Maj -82

- 10 * indicates change made at last page updating
- 11 Fig. figure number for part on exploded view
- 12 Part No. part number and check digit
- 13 quantity per car
- 14 Description description in English
- 15 Benämning description in Swedish
- 16 * dot indicates that components are subparts to a part in the next level of the taxonomical structure; e.g. fig. 3 etc. are subparts to fig. 1 and are included if fig. 1 is ordered
- 17 K (Swedish) sets (kit) indicates that part belongs to a kit
- 18 SR/L stock holding level
- 19 Notes abbreviations, references, measurements etc., e.g. 828355/863 where 863 is read 8283863
- 20 (0000000) part number that has been deleted or replaced by a new part number will be displaced from the catalogue three years after that Saab-Scania have delivered the last part. The old number is written in brackets to make it possible for you to identify deleted parts.
- 21) 9, 10) foot note reference

2-D08

SAAB 99
M74-

Fuel system		Bränslesystem		Date	Illustration	Group	Page
Twin carburetor		Två-förgasare		Datum	Bild nr	Grupp	Sida
engine 2.0 1975-76		motor 2.0 1975-76		1981-08	R3896	2	103
Fig. Pos.	Part No. Art nr	Quantity/Antal	Description	Benämning	Notes		
11	12	13	14	15	16	17	18
0020	1	1	Carburetor assy front	Förgasare kpl främre	5(9)	21	
0040	1	1	Carburetor assy front	Förgasare kpl främre	10		
0080	2	1	Carburetor assy rear	Förgasare kpl bakre	5(9)		
0080	2	1	Carburetor assy rear	Förgasare kpl bakre	10		
0100	3	1	Spindle throttle	Spjällaxel	5 PART OF 83 55 372		
0120	4	1	Spindle throttle	Spjällaxel	5 PART OF 83 55 380		
0150	5	1	Stop arm	Stopparm	5 PART OF 83 55 372		
0180	6	1	Stop arm	Stopparm	5 PART OF 83 55 380		
0200	6	1	Stop arm	Stopparm	5 PART OF 83 55 372		
0220	7	1	Nut	Skruvmutter	5 PART OF 83 55 380		
0240	8	1	Joint nut	Returfjäder	5 PART OF 83 55 372		
0260	8	1	Spring, throttle return	Returfjäder	5 PART OF 83 55 380		
0280	8	1	Spring, throttle return	Returfjäder	5 PART OF 83 55 372		
0300	9	1	Spring, throttle return	Returfjäder	5 PART OF 83 55 380		
0320	9	1	Throttle	Spjäll	5 PART OF 83 55 372		
0340	10	1	Screw, throttle	Skruv, spjäll	5 PART OF 83 55 380		
0360	11	2	Choke	Choke	5 PART OF 83 55 372		
0380	12	1	Choke	Choke	5 PART OF 83 55 380		
0400	12	1	Choke	Choke	5 PART OF 83 55 372		
0420	12	1	Choke	Choke	5 PART OF 83 55 380		
0440	13	2	Screw, choke	Skruv, choke	5 PART OF 83 55 372		
0460	14	1	Float	Flötdr	5		
0500					5 (0000000)	20	

- 9. Ch.-99752041733.-/9756016176.-99757006197.
- 10. Ch. 9975200001.-9976600001.-99767000001.-

900 M79-
Maj -82

- 0 General 1-A02
- 1 Tools 1-M02
- 2 Engine 2-A02
- 3 Electrical system, instruments 2-F02
- 4 Transmission 2-J02
- 5 Brakes 3-A02
- 6 Front assembly, steering 3-B02
- 7 Suspension, wheels 3-C02
- 8 Body 3-D02
- 9 Accessories, labels 3-L02
- 10 Numerical register 4-A02

c Master index

The catalogue is divided into ten main groups.

- 0 General, Complete sets
- 1 Tools
- 2 Engine
- 3 Electrical system, Instruments
- 4 Transmission
- 5 Brakes
- 6 Front assembly, Steering
- 7 Suspension, Wheels
- 8 Body
- 9 Accessories
- 10 Numerical index

Each microfiche square has a Master index listing the coordinates at which each main group commences.

d Group index

The master index is divided into subgroups. The first page of each main group contains a list of contents indicating the pages on which larger units or assemblies may be found.

The group index is located on each microfiche square immediately below the master index. The group index lists the coordinates at which each subgroup commences.

4. Numerical index

New and discontinued parts index

The last fiche in each microfiche batch always contains the catalogue numerical index. The index is in tabular form and divided into column "Part No.", "Gr", "Page" and "Grid". Part numbers are listed in numerical sequence with references to the catalogue group and page and microfiche coordinates where the part can be found. The numerical index is especially useful in cases where only the part number is known, but additional information is required for ordering numbers.

When the catalogue is revised and updated (microfiche cards are exchanged), a list is given of all the parts which have been added to or deleted from the catalogue since the previous revision. This list is located immediately after the numerical index and contains "New articles" and "Deleted parts" in numerical sequence together with page references and fiche coordinates.

COORDINATE CODE

3-J02

SAB 55
M74-

Electrical system	Elektriskt system	Grid Guben	Group Grupp	Page Sida
		1961-09	3-J	02

The coordinate code is divided into three parts

Consecutive fiche number 3-J02

Horizontal fiche axis 3-J 02

Vertical fiche axis 3-J 02

All text pages and page references are provided with coordinate codes.

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

How to read the microfiche


Select the microfiche whose heading indicates the desired information.

Place fiche in holder with heading text towards you and display a square at random on the screen.

Select the relevant main or sub-group from the main index and note coordinates.

Position fiche holder arrow on the desired coordinate reference and check screen.

Select the relevant section or unit from the list of contents to ensure that the coordinate on this text page is correct.

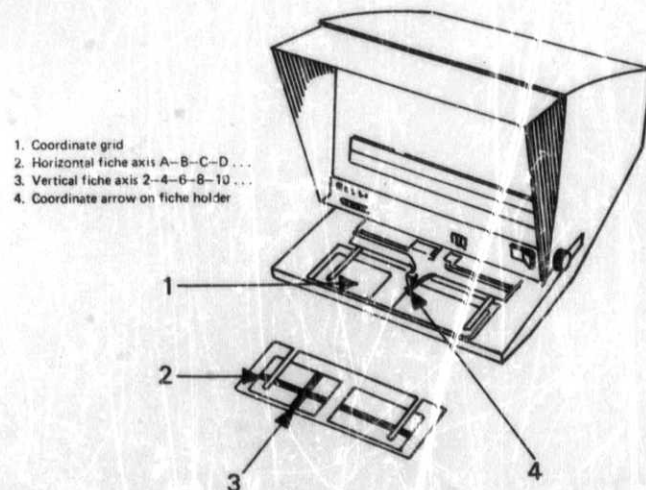

-1979	Up to and incl. model 1979
1980-	As from model 1980
5-speed	Five-speed gearbox
A	Automatic transmission
AC	Air Conditioning
C	Carburetor
T	Twin carburetors
CK	Combi Coupé, 3 or 5 CK
Ch.-xxxxxxxxxx	Up to and including chassis number
Ch.xxxxxxxxxxx-	From and including chassis number
EGR	Exhaust Gas Recirculation
ELCD	Evaporative Loss Control Device
EMS	Injection, Manual transmission, Special
Engine - xxxxx	Up to and including engine number
Engine xxxxx-	From and including engine number
Gearbox -xxxxx	Up to and including gearbox number
Gearbox xxxxx-	From and including gearbox number
I	Injection
LH	Left Hand
LHD	Left Hand Driven
M	Manual transmission
PO	Police cars
PS	Power Steering
RH	Right Hand
RHD	Right Hand Driven
S	Sets
SI	Service Information
SR	Sun Roof
X	Quantity as required
On-off	"on-off" exhaust gas recirculation system
Proportional (Prop.)	Proportional exhaust gas recirculation system
Pulse air	Pulsing air injection system
AU	Australia
BE	Belgium
CA	Canada
CZ	Czechoslovakia
DK	Denmark
EU	Europe
FR	France
GB	Great Britain
IT	Italy
JA	Japan
ME	Middle East
NO	Norway
SF	Finland
SW	Sweden
UC	USA-Californien
UF	USA-Federal
US	USA

MASTER INDEX

0	General	1-A/2
1	Tools	1-F02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B/2
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02


0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02



Gearbox number,
automatic transmission
Växellådsnummer,
automatisk växellåda



Gearbox number,
manual transmission
Växellådsnummer,
manuell växellåda

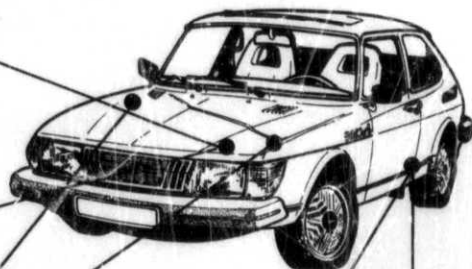


R 3784-000



Engine number
Motornummer



Chassis number
Trim colour code
Car colour code
Chassinummer
Klädelskod
Färgkod

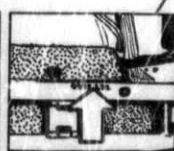

Chassis number punched
in car body, 3-door model
(Placed under back seat
cushion)
Chassinumret instansat i
kaross, 3-dörrarsversion
(placerat under baksetets
sittdyna)



Chassis number punched
in car body, 5-door model
(Placed under back seat
cushion)
Chassinumret instansat i
kaross, 5-dörrarsversion
(placerat under baksetets
sittdyna)

Saab 900 1979 90791000001-90791034858
90792000001-90792004463
90796000001-90796004675

Saab 900 1980 90801000001-90801035325
90802000001-90802010522
90806000001-90806005128

Type

Year model

Production place:

1 } Trollhättan
2 }
6 } Finland

Numerical chassis number

Typ

Årmodell

Tillverkningsort:

1 } Trollhättan
2 }
6 } Finland

Öppande chassinr

90 XX X XXXXXX

M 1979

Engine type:
"B" — gasoline engine, carburetor
"B1" — gasoline engine, mechanical injection
"BT" — gasoline engine, twin carburetors
"BSI" — gasoline engine, mechanical injection, Turbo
Cylinder volume in dl
"P04" designed for manual transmission (B, BT) Europe
"P05" designed for automatic transmission (BT) Europe
"P06" designed for automatic transmission (BT) Sweden
"P08" designed for manual transmission (BI) Europe
"P09" designed for automatic transmission (BI) Europe
"P10" designed for automatic transmission (BI) UF
"P11" designed for manual transmission (BI) UC
"P12" designed for automatic transmission (BI) UC
"P13" designed for manual transmission (BI) UF
"P14" designed for manual transmission (BI) Sweden
"P01" designed for manual transmission (BSI) Europe
"P02" designed for manual transmission (BSI) US
Serial number 6 figures

Motortyp:
"B" — bensinmotor, förgasare
"B1" — bensinmotor, mekanisk insprutning
"BT" — bensinmotor, två förgasare
"BSI" — bensinmotor, mekanisk insprutning, Turbo
Slagvolym i dl
"P04" avsedd för manuell växellåda (B, BT) Europa
"P05" avsedd för automatisk växellåda (BT) Europa
"P06" avsedd för automatisk växellåda (BT) Sverige
"P08" avsedd för manuell växellåda (BI) Europa
"P09" avsedd för automatisk växellåda (BI) Europa
"P10" avsedd för automatisk växellåda (BI) UF
"P11" avsedd för manuell växellåda (BI) UC
"P12" avsedd för automatisk växellåda (BI) UC
"P13" avsedd för manuell växellåda (BI) UF
"P14" avsedd för manuell växellåda (BI) Sverige
"P01" avsedd för manuell växellåda (BSI) Europa
"P02" avsedd för manuell växellåda (BSI) US
6-siffrigt löpnummer

B 20 P0X 000 000

M 1980

Engine type:
"B" — gasoline engine, carburetor
"B1" — gasoline engine, mechanical injection
"BT" — gasoline engine, twin carburetors
"BSI" — gasoline engine, mechanical injection, Turbo
Cylinder volume in dl
"P04" designed for manual transmission (B, BT) Europe
"P05" designed for automatic transmission (BT) Europe
"P06" designed for automatic transmission (BT) Sweden
"P08" designed for manual transmission (BI) Europe
"P09" designed for automatic transmission (BI) Europe
"P11" designed for manual transmission (BI) US
"P12" designed for automatic transmission (BI) US
"P14" designed for manual transmission (BI) Sweden
"P01" designed for manual transmission (BSI) Europe
"P02" designed for manual transmission (BSI) US
Serial number 6 figures

Motortyp:
"B" — bensinmotor, förgasare
"B1" — bensinmotor, mekanisk insprutning
"BT" — bensinmotor, två förgasare
"BSI" — bensinmotor, mekanisk insprutning, Turbo
Slagvolym i dl
"P04" avsedd för manuell växellåda (B, BT) Europa
"P05" avsedd för automatisk växellåda (BT) Europa
"P06" avsedd för automatisk växellåda (BT) Sverige
"P08" avsedd för manuell växellåda (BI) Europa
"P09" avsedd för automatisk växellåda (BI) Europa
"P11" avsedd för manuell växellåda (BI) US
"P12" avsedd för automatisk växellåda (BI) US
"P14" avsedd för manuell växellåda (BI) Sverige
"P01" avsedd för manuell växellåda (BSI) Europa
"P02" avsedd för manuell växellåda (BSI) US
6-siffrigt löpnummer

B 20 P0X 000 000

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

Below are stated first and last production numbers for engines and gearboxes within year model resp.

Här nedan anges första och sista tillverkningsnummer för motorer och växellådor inom respektive årsmodeller.

M 1979

Engine number	Gearbox number
B 20P04 000101-006800	Manual standard G 344 02
BT 20P04 000136-010420	Manual Turbo (Europe) G 446 02
BT 20P05 000126-001960	Manual Turbo US G 445 02
BT 20P06 000126-002300	Automatic 489 1001-
BI 20P06 000126-002445	
BI 20P08 000126-001685	
BI 20P10 000126-001800	
BI 20P11 000126-002270	
BI 20P12 000126-000990	
BI 20P13 000126-004435	
BI 20P14 000101-001537	
BSI20P01-003301-009845	
BSI20P02 003801-007191	

M 1980

Engine number	Gearbox number
B 20P04 006801-19854	Manual 4-speed 57501-111293
BT 20P04 010421-14267	Manual 5-speed 400001-418347
BT 20P05 002116-3386	
BT 20P06 002326-4375	
BI 20P06 002632-5882	Automatic 487 48900500-48912196
BI 20P09 001701-3231	Automatic 37 1001-1750
BI 20P11 002301-6837	
BI 20P12 001101-3533	
BI 20P14 001581-2900	
BSI20P01 010601-18315	
BSI20P02 007201-13700	

Recommended spare parts stockholding level

The stockholding level is indicated by a digit between 1-6 in the SR/L column below.

Stockholding level 1	Parts for service and maintenance
Stockholding level 2	Parts for minor repairs
Stockholding level 3	Parts for major repairs
Stockholding level 4	Heavy and slow-moving parts
Stockholding level 5	Engine assemblies, cylinder heads, transmission units, etc.
Stockholding level 6	Extremely slow-moving parts

The stockholding level is connected to the retail outlet level.

Outlet level 1	Minor dealers, small workshops and petrol stations carrying out simple service work mainly using parts from recommended stockholding level 1.
Outlet level 2	Medium-size dealers and more comprehensive workshop carrying out service work and some repair work mainly using parts from recommended stockholding levels 1-2.
Outlet level 3	Major dealers carrying out service work and all kinds of repair work, using parts from recommended stockholding levels 1-3.
Outlet level 4	Major distributorships (export market) and some major dealers using parts from recommended stockholding levels 1-4.
Outlet level 5	Importers stocking parts from recommended stockholding levels 1-5.
Outlet level 6	Saab Car Division's central warehouse in Nyköping Sweden.

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

Denna reservdelskatalog gäller för Saab 900 årsmodellerna 1979-1980. Katalogen är indelad i grupperna 0-10. Grupp 0 upptar Allmänt och Satsar, grupp 1 Verktyg, dvs specialverktyg avsedda för tillsyns- och reparationsarbeten. Grupp 10 upptar nummerregister. Katalogens indelning motsvarar den rekommendation som Motorbranschens Arbetsgivareförbund givit för reservdelskataloger och service-litteratur.


Reservdelskatalogen utges i form av microfiche med beställningsnummer 651844 och den hålls aktuell genom utgivning av nya fiche. Vid behov lämnas även speciella upplysningar beträffande reservdelar via "Spare Parts Information".

Vid beställning av reservdelar till viss bil skall alltid chassinummer och/eller motor- eller växellådsnummer anges. Illustrationen, sid 1-309, visar var dessa nummer finns i bilen, antingen instansade eller angivna på skyltar.


FICHEKORTENS UPPBYGGNAD

Fichekortet är förminskade 42 gånger från A4-format. Varje fichekort kan maximalt innehålla 288 bild- och textsidor utlagda i ett koordinatmönster på 12x12 rutor.

Kataloginformationen återfinns i fichekortet på följande sätt.

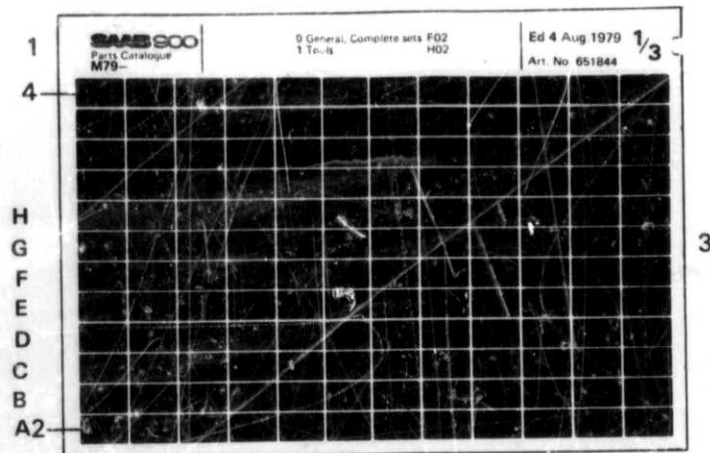

1. Rubrikfält
2. Allmänt (första fichen i satsen)
3. Bild- och textsidor
4. Nummerregister (sista fichen i satsen)

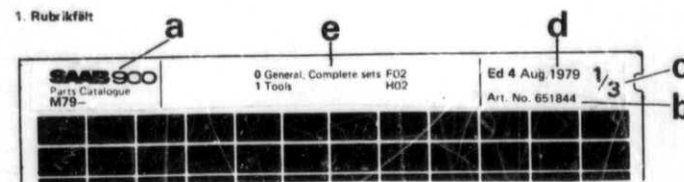


- a. Typbeteckning
- b. Katalognummer
- c. Fichekortets nummer. Ex kort nr 1 av 4 skrives 1/4
- d. Utgåva, datum
- e. Förteckning över de kataloggrupper som finns på kortet med hänvisning till fichekoordinat.

2. Allmänt
- Katalogens allmänna del med förord, anvisningar, chassi/motornummer etc, börjar alltid på raderna A-E, fichekort 1

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

3. Bild- och textsidor

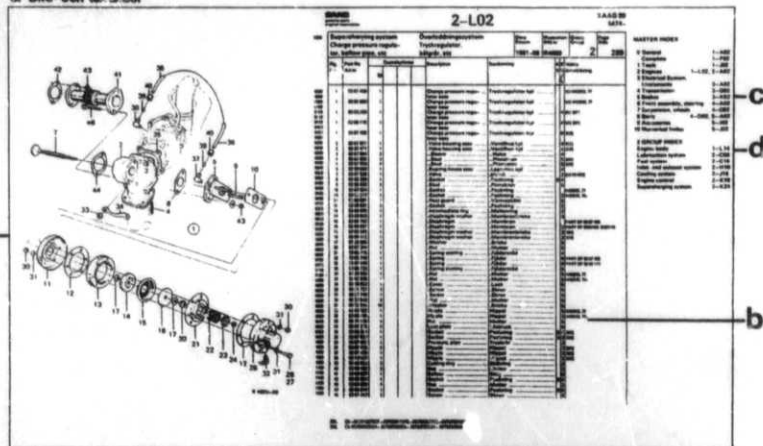

På rederna F, G, H och upplåt återfinns all kataloginformation utlagd på de koordinater som innehållsförteckningen utvisar.

Varje ficheruta innehåller följande information.

- a Bildside
- b Textside
- c Master index - huvudgruppreger
- d Group index - undergruppreger

a Bildside

Bildsidans illustrationer utgörs av perspektivteckningar. De illustrerade artiklarnas positionsnummer återfinns i numerärordning på motsstående textside. Positionsnumren för en komplett enhet markeras med en ring runt positionsnumret. Bildsidan upprepas så länge respektive textavsnitt varar.

b Textside

Textsidan är indelad enligt omstående bild. Siffrorna på bilden hänvisar till motsvarande rutor i nedanstående text.

- 1 Fichekoordinat för söksystemet
- 2 Avsnitt intern beteckning för datasystemet
- 3 Undergrupp ex BRÄNSLESYSTEM huvudgrupp 2
- 4 Avsnitt ex Två-förgasare
- 5 Datum utgivningsdatum
- 6 Bild nr bild på motsvarande vänstersida
- 7 Huvudgrupp ex 2 Motor
- 8 Side sidnr inom huvudgruppen
- 9 Radnummer intern beteckning för datasystemet

900 M79-
Maj -82

- 10 *
- 11 Pos
- 12 Art nr
- 13 Description
- 14 engelsk benämning
- 15 svensk benämning
- 16 punktmarkering anger att artiklarna ingår i närmast överordnad artikel, ex pos 3 etc. ingår i pos 1 och medförjer vid köp av pos 1.
- 17 S
- 18 SR/L
- 19 förkortningar, hänvisningar, dimensioner, m m, ex 8263655/863, "863" läses 8263863
- 20 artikelnummer som utgått eller ersatts av nytt artikelnummer tas bort ur katalogen först tre år efter det Saab-Scania slikt slut på artikeln. För att ni skall ha möjlighet att identifiera utgånga reservdelar skrivs det gamla numret ut inom parentes.
- 21 9, 10)

markerar förändringar sedan föregående utgåva
positionsnummer på den illustrerade artikeln på bildsidan
artikelnummer
antal per bil
engelsk benämning
svensk benämning
punktmarkering anger att artiklarna ingår i närmast överordnad artikel, ex pos 3 etc. ingår i pos 1 och medförjer vid köp av pos 1.
sats, markerar att artikeln ingår i en sats
lagerhållningsnivå
förkortningar, hänvisningar, dimensioner, m m, ex 8263655/863, "863" läses 8263863
artikelnummer som utgått eller ersatts av nytt artikelnummer tas bort ur katalogen först tre år efter det Saab-Scania slikt slut på artikeln. För att ni skall ha möjlighet att identifiera utgånga reservdelar skrivs det gamla numret ut inom parentes.
fotnoter

SAAB genuine parts original reservdelar		2-D08		SAAB 99 M74-	
1100		3 Bränslesystem		Date Datum 5	
Fuel system		Twin carburetor		Illustration Bild nr 6	
engine 2,0 1975-76		4 Två-förgasare		Group Grupp 7	
		motor 2,0 1975-76		Page Side 8	
103					
Fig. Pos. 11	Part No Art nr 12	Quantity/Amount 13	Description 14	Benämning 15	Notes 16
0020	1 83 55 372	1	Carburetor assy front	Förgasare kpl främre	5 8)
0040	1 83 60 570	1	Carburetor assy front	Förgasare kpl främre	10) 21
0060	2 83 55 380	1	Carburetor assy rear	Förgasare kpl bakre	5 9)
0080	2 83 63 129	1	Carburetor assy rear	Förgasare kpl bakre	10) (83 60 448)
0100	3 83 61 404	1	Spindle throttle	Spjällaxel	6 PART OF 83 55 372
0120	4 83 61 412	1	Stop arm	Stopparm	6 PART OF 83 60 570
0140	5 83 61 420	1	Stop arm	Stopparm	6 PART OF 83 55 380
0160	6 83 61 719	1	Stop arm	Stopparm	6 PART OF 83 60 448
0180	6 83 61 438	1	Stop arm	Stopparm	5 PART OF 83 55 372
0200	6 83 61 851	1	Stop arm	Stopparm	5 PART OF 83 55 380
0220	7 83 61 446	1	Nut	Mutter	5 PART OF 83 55 372
0240	8 83 61 453	1	Joint nut	Skarvmutter	5 PART OF 83 55 380
0260	8 83 61 461	1	Spring, throttle	Returfjäder	5 PART OF 83 55 372
0280			return		83 55 380
0300	9 83 61 685	1	Spring, throttle	Returfjäder	5 PART OF 83 60 448
0320			return		83 60 570
0340	10 83 61 479	1	Throttle	Spjäll	8
0360	11 83 61 487	2	Screw, throttle	Skruv, spjäll	5
0380	12 83 61 495	1	Choke	Choke	4 PART OF 83 55 372
0400	12 83 64 085	1	Choke	Choke	4 PART OF 83 55 380
0420	12 83 61 633	1	Choke	Choke	4 PART OF 83 60 448
0440	12 83 61 701	1	Choke	Choke	4 PART OF 83 60 570
0460	13 83 05 476	2	Screw, choke	Skruv, choke	5
0480	14 83 10 393	1	Float	Flottör	5 (0000000) 20)

- 21 9. Ch.-99752041733.-99756016176.-99757006197.
- 10. Ch. 99752000001.-99766000001.-99767000001.-

900 M79 -
Maj -82

MASTER INDEX

- 0 General 1-A02
- 1 Tools 1-H02
- 2 Engine 2-A02
- 3 Electrical system, Instruments 2-F02
- 4 Transmission 2-J02
- 5 Brakes 3-A02
- 6 Front assembly, Steering 3-B02
- 7 Suspension, Wheels 3-C02
- 8 Body 3-D02
- 9 Accessories, Labels 3-L02
- 10 Numerical register 4-A02

c Master index -- huvudgruppregister

Katalogen är indelad i tio huvudgrupper.

- 0 Allmänt, Setser
- 1 Verktyg
- 2 Motor
- 3 Elektriskt system, Instrument
- 4 Kraftöverföring
- 5 Bromsar
- 6 Framvagn, Styrinrättning
- 7 Fjädringssystem, Hjul
- 8 Kaross
- 9 Tillbehör
- 10 Nummerregister

"Master index" återfinns på samtliga ficherutor och koordinater anger var huvudgruppen börjar.

d Group index -- undergruppregister

Huvudgruppregistret är indelat i undergrupper. På första sidan inom varje huvudgrupp finns en innehållsförteckning, som visar på vilken sida och koordinat de större artikelenheterna återfinns.

"Group index" återfinns på varje ficheruta omedelbart under "Master index" och koordinater anger var undergrupperna börjar.

4. Nummerregister

Register för nytillkomna och utgående artiklar

På sista fidekortet i varje fichesats återfinns alltid katalogens nummerregister. Registret är uppställt i tabellform och indelat i kolumnerna "Art nr", "Gr", "Sida" och "Koörd". Artikelnumren är upptagna i nummerordning. Numret hänvisar till den grupp, sida och koordinat där artikeln är upptagen. Nummerregistret kommer särskilt till användning då man endast vet en artikels nummer och vill ha övriga beställingsdata.

I samband med ändring av en katalog (utbyte av fichesats) utlistas alla artiklar, som tillkommit i katalogen respektive utgått sedan föregående utgivning. Denna lista upptar numren i nummerordning med sidnr respektive koordinater angivna och återfinns efter det ordinarie nummerregistret under respektive rubriker "Nya artiklar", "Utgående artiklar".

KOORDINATNUMMER

3-J02

SAAB 95
M74-

Electrical system	Elektriskt system	From Edition	Group Enhet	Page Sida
		1961-09	3	1

Koordinatnumret består av 3 delar

- Fidekortets löpnummer 3-J02
- Vägrät ficherad 3-J02
- Lodrat ficherad 3-J02

Samtliga textsidor och sidhänvisningar är försedda med koordinatnummer.

MASTER INDEX

0 General	1-A02
1 Tools	1-H02
2 Engine	2-A02
3 Electrical system, Instruments	2-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly, Steering	3-B02
7 Suspension, Wheels	3-C02
8 Body	3-D02
9 Accessories, Labels	3-L02
10 Numerical register	4-A02

Hur man läser mikrofiche

Tag fram det fichekort som enligt rubrikfältet innehåller den sökta informationen.


Placera fichekortet i fichehållaren med rubriktexten mot Dig och tag fram valfri ruta på bildskärmen.

Sök i "Main index" efter den huvudgrupp eller undergrupp som skall innehålla sökt information och läs av koordinatnumret.

Ställ in fichehållarens pil på angivet koordinatnummer och kontrollera på bildskärmen att rätt koordinat är angivet på textsidan.

Sök i innehållsförteckningen rätt på önskat avsnitt eller större enhet där den sökta informationen skall finnas.

1. Koordinatplatta
2. Vågrät ficherad A-B-C-D...
3. Lodrät ficherad 2-4-6-8-10...
4. Fichehållarens koordinatpil

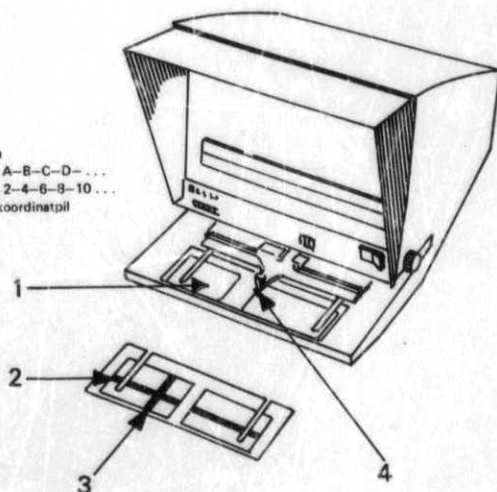

—1979	To m årsmodell 1979
1980—	Fr o m årsmodell 1980
5-speed	Femväxlad växellåda
A	Automatic transmission (Automatisk växellåda)
AC	Air Conditioning (Luftkonditionering)
C	Carburetor (Förgasare)
T	Twin carburetors (Två förgasare)
CK	Combi Coupé, 3 eller 5 CK
Ch. —xxxxxxxx	To m chassinummer
Ch. xxxxxxxxxxx	Fr o m chassinummer
EGR	Exhaust Gas Recirculation (Avgasrecirkulation)
ELCD	Evaporative Loss Control Device (Slutet bränslesystem)
EMS	Injection, Manual transmission, Special
Engine —xxxxx	To m motornummer
Engine xxxxxx—	Fr o m motornummer
Gearbox —xxxxx	To m växellådsnummer
Gearbox xxxxxx—	Fr o m växellådsnummer
I	Injection (Motor med bränsleinsprutning)
LH	Left Hand (Vänster sida)
LHD	Left Hand Driven (Vänsterstyrning)
M	Manual transmission (Manuell växellåda)
PO	Polisbil
PS	Power Steering (Servostyrning)
RH	Right Hand (Höger sida)
RHD	Right Hand Driven (Högerstyrning)
S	Sats
SI	Service Information
SR	Sun Roof (Soltak)
X	Quantity as required (Antal efter behov)
On-off	"till-från" avgasrecirkulation
Proportional (Prop.)	Proportionellt avgasrecirkulationssystem
Pulse air	Pulserande luftinblåsningssystem
AU	Australien
BE	Belgien
CA	Canada
CZ	Tjeckoslovakien
DK	Danmark
EU	Europa
FR	Frankrike
GB	England
IT	Italien
JA	Japan
ME	Mellersta Östern
NO	Norge
SF	Finland
SW	Sverige
UC	USA-Californien
UF	USA-Federalt
US	USA


0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02



Gearbox number,
automatic transmission
Växellådsnummer,
automatisk växellåda



Gearbox number,
manual transmission
Växellådsnummer,
manuell växellåda

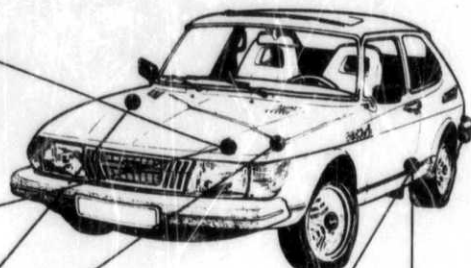


R 3784 - 900



Engine number
Motornummer



Chassis number
Trim colour code
Car colour code
Chassinummer
Klädseffkod
Färgkod

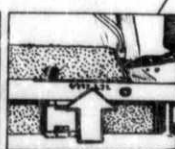

Chassis number punched
in car body, 3-door model
(Placed under back seat
cushion)
Chassinumret instansat i
kaross, 3-dörrarsversion
(placerat under baksätets
sittdyna)



Chassis number punched
in car body, 5-door model
(Placed under back seat
cushion)
Chassinumret instansat i
kaross, 5-dörrarsversion
(placerat under baksätets
sittdyna)

Saab 900 1979 90791000001-90791034858
90792000001-90792004463
90796000001-90796004675

Saab 900 1980 90801000001-90801035325
90802000001-90802010522
90806000001-90806005128

Type
Year model

Production place:
1 } Trollhättan
2 }
6 } Finland

Numerical chassis number

Typ 90 XX X XXXXXX
Årsmodell
Tillverkningsort:
1 } Trollhättan
2 }
6 } Finland
Löpande chassinr

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

M 1979

Engine type:
"B" — gasoline engine, carburetor
"BI" — gasoline engine, mechanical injection
"BT" — gasoline engine, twin carburetors
"BSI" — gasoline engine, mechanical injection, Turbo
Cylinder volume in dl
"P04" — designed for manual transmission (B, BT) Europe
"P05" — designed for automatic transmission (BT) Europe
"P06" — designed for automatic transmission (BT) Sweden
"P08" — designed for manual transmission (BI) Europe
"P09" — designed for automatic transmission (BI) Europe
"P10" — designed for automatic transmission (BI) US
"P11" — designed for manual transmission (BI) US
"P12" — designed for automatic transmission (BI) US
"P13" — designed for manual transmission (BI) US
"P14" — designed for manual transmission (BI) Sweden
"P01" — designed for manual transmission (BSI) Europe
"P02" — designed for manual transmission (BSI) US
Serial number 6 figures

Motortyp:
"B" — bensinmotor, förgasare
"BI" — bensinmotor, mekanisk insprutning
"BT" — bensinmotor, två förgasare
"BSI" — bensinmotor, mekanisk insprutning, Turbo
Slagvolym i dl
"P04" — avsedd för manuell växellåda (B, BT) Europa
"P05" — avsedd för automatisk växellåda (BT) Europa
"P06" — avsedd för automatisk växellåda (BT) Sverige
"P08" — avsedd för manuell växellåda (BI) Europa
"P09" — avsedd för automatisk växellåda (BI) Europa
"P10" — avsedd för automatisk växellåda (BI) US
"P11" — avsedd för manuell växellåda (BI) US
"P12" — avsedd för automatisk växellåda (BI) US
"P13" — avsedd för manuell växellåda (BI) US
"P14" — avsedd för manuell växellåda (BI) Sverige
"P01" — avsedd för manuell växellåda (BSI) Europa
"P02" — avsedd för manuell växellåda (BSI) US
6-siffrigt löpnummer

B 20 P0X 000 000

M 1980

Engine type:
"B" — gasoline engine, carburetor
"BI" — gasoline engine, mechanical injection
"BT" — gasoline engine, twin carburetors
"BSI" — gasoline engine, mechanical injection, Turbo
Cylinder volume in dl
"P04" — designed for manual transmission (B, BT) Europe
"P05" — designed for automatic transmission (BT) Europe
"P06" — designed for automatic transmission (BT) Sweden
"P08" — designed for manual transmission (BI) Europe
"P09" — designed for automatic transmission (BI) Europe
"P11" — designed for manual transmission (BI) US
"P12" — designed for automatic transmission (BI) US
"P14" — designed for manual transmission (BI) Sweden
"P01" — designed for manual transmission (BSI) Europe
"P02" — designed for manual transmission (BSI) US
Serial number 6 figures

Motortyp:
"B" — bensinmotor, förgasare
"BI" — bensinmotor, mekanisk insprutning
"BT" — bensinmotor, två förgasare
"BSI" — bensinmotor, mekanisk insprutning, Turbo
Slagvolym i dl
"P04" — avsedd för manuell växellåda (B, BT) Europa
"P05" — avsedd för automatisk växellåda (BT) Europa
"P06" — avsedd för automatisk växellåda (BT) Sverige
"P08" — avsedd för manuell växellåda (BI) Europa
"P09" — avsedd för automatisk växellåda (BI) Europa
"P11" — avsedd för manuell växellåda (BI) US
"P12" — avsedd för automatisk växellåda (BI) US
"P14" — avsedd för manuell växellåda (BI) Sverige
"P01" — avsedd för manuell växellåda (BSI) Europa
"P02" — avsedd för manuell växellåda (BSI) US
6-siffrigt löpnummer

B 20 P0X 000 000

Below are stated first and last production numbers for engines and gearboxes within year model resp.

Här nedan anges första och sista tillverkningsnummer för motorer och växellådor inom respektive årsmodeller.

M 1979

Engine number	Gearbox number
B 20P04 000101-006800	Manual standard G 344 02
BT 20P04 000136-010420	Manual Turbo (Europe) G 446 02
BT 20P05 000126-001960	Manual Turbo US G 445 02
BT 20P06 000126-002300	Automatic 489 1001-
BI 20P08 000126-002445	
BI 20P09 000126-001685	
BI 20P10 000126-001800	
BI 20P11 000126-002270	
BI 20P12 000126-000990	
BI 20P13 000126-004435	
BI 20P14 000101-001537	
BSI20P01-003301-009645	
BSI20P02 003301-007191	

M 1980

Engine number	Gearbox number
B 20P04 006801-19854	4-växl. 57501 111293
BT 20P04 010421-14267	5-växl. 400 001-418347
BT 20P05 002116-3366	Automat 487 48900500-48912196
BT 20P06 002326-4375	" 37 1001-1750
BI 20P08 002532-5862	
BI 20P09 001701-3231	
BI 20P11 002301-6837	
BI 20P12 001101-3533	
BI 20P14 001581-2900	
BSI20P01 010601-18315	
BSI20P02 007201-13700	

Lagerhållningsnivån anges med en siffra mellan 1 och 6 i kolumn SR/L, enligt nedan.

Lagerhållningsnivå 1	Artiklar för service och underhåll
Lagerhållningsnivå 2	Artiklar för enklare reparationer
Lagerhållningsnivå 3	Artiklar för större reparationer
Lagerhållningsnivå 4	Tunga artiklar och artiklar med mindre omsättning
Lagerhållningsnivå 5	Komplatta motorer, cylinderlock, växellådor, etc
Lagerhållningsnivå 6	Extremt lågfrekventa artiklar

Lagerhållningsnivån är kopplad till återförsäljarnivån.

Återförsäljarnivå 1	Verkstäder och bensinstationer, som utför enklare servicearbeten och som huvudsakligen använder artiklar ur lagerhållningsnivå 1.
Återförsäljarnivå 2	Medelstora åf och mera mångsidiga verkstäder, som utför servicearbeten och vissa reparationsarbeten och som huvudsakligen använder artiklar av lagerhållningsnivå 1 och 2.
Återförsäljarnivå 3	Stora åf, som utför servicearbeten samt alla slags reparationsarbeten och använder delar av lagerhållningsnivå 1-3.
Återförsäljarnivå 4	Stora distributörer (exportmarknaderna) och vissa stora åf, som använder delar av lagerhållningsnivå 1-4.
Återförsäljarnivå 5	Importörer som lagerhåller delar av lagerhållningsnivå 1-5.
Återförsäljarnivå 6	Saabs centrallager i Nyköping.

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

Dieser Ersatzteil-Katalog gilt für Saab 900 Bauserien 1979-1980. Der Katalog ist in die Gruppen 0-10 eingeteilt. Die Gruppe 0 enthält "Allgemeines und komplette Sätze", die Gruppe 1 "Werkzeuge", d.h. Spezialwerkzeuge für Inspektions- und Reparaturarbeiten. Die Gruppe 10 enthält Nummernverzeichnis. Die Einleitung des Katalogs entspricht den Empfehlungen des schwedischen Arbeitsgüterverbandes für Kraftfahrzeuggewerbe und Handel, die dieser für Ersatzteil-Kataloge und Serviceliteratur herausgegeben hat. Bezüglich der Benutzung des Katalogs weisen wir auf die Anweisungblätter hin.


Der Ersatzteil-Katalog ist nur als Microficheauflage mit Bestellnummer 651844 ausgegeben. Er wird durch neue Microficheauflagen auf dem Laufenden gehalten. Bei Bedarf wird Sonderauskunft über Ersatzteile via "Spare Parts Information" gegeben.

Bei Bestellung von Ersatzteilen für einen bestimmten Wagen ist stets die Typenbezeichnung, Fahrgestellnummer und/oder Motor- oder Getriebeummer anzugeben. Die Illustration, Seite 1-C09, zeigt wo man diese Nummer im Wagen finden kann, entweder eingestanzt oder auf einem Schild angegeben.

AUFBAU DER MIKROFICHES


Die Mikrofiche-Karten stellen eine 42-fache Verkleinerung des DIN-Formats A4 dar. Jedes Mikrofiche kann maximal 288 Einzelbild- und Textfelder enthalten, die in einem Raster angeordnet sind, daß 12x12 Bildfelder enthält.

Die Katalogangaben sind folgenderweise auf dem Mikrofiche angeordnet:

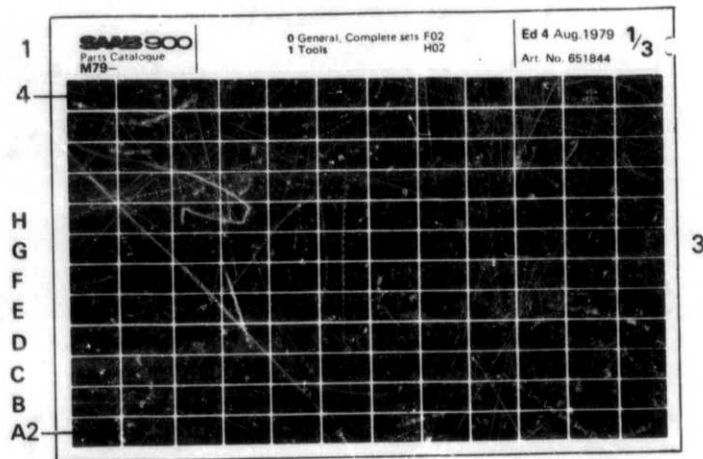

1. Titelfeld
2. Allgemeines (erstes Mikrofiche im Satz)
3. Bild- und Textseite
4. Nummernregister (letztes Mikrofiche im Satz)

1. Titelfeld

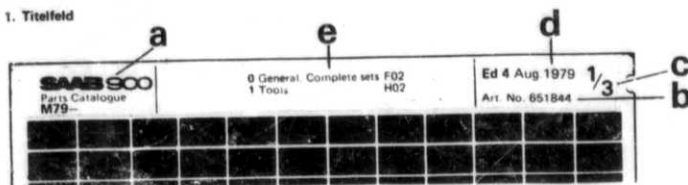

- a. Typenbezeichnung
- b. Katalognummer
- c. Mikrofiche-Nummer. Beispiel: Mikrofiche Nr. 1 von 4 wird 1/4 bezeichnet
- d. Ausgabedatum
- e. Verzeichnis der auf dem Mikrofiche abgebildeten Kataloggruppen mit Hinweis auf die Rasterkoordinate. Diese Angaben sind nur in englischer Sprache aufgeführt.


2. Allgemeines

Das allgemeine Teil des Katalogs enthält Vorwort, Anweisungen, Fahrgestellnummern u.s.w. Es beginnt immer an die Reihen A-E, bei Mikrofiche 1

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrial system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3. Bild- und Textseiten

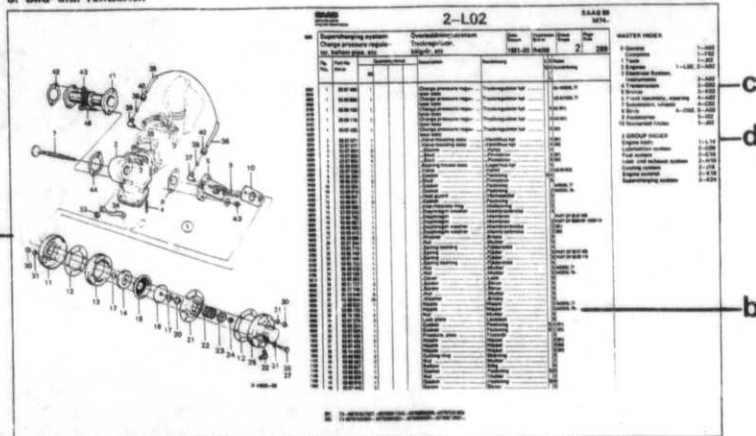

In den Bildreihen F,G,H und aufwärts ist die gesamte Kataloginformation abgebildet, die aus den Koordinaten des Inhaltsverzeichnisses hervorgehen.

Jedes Einzelbild enthält folgende Information.

- a Bildseite
- b Textseite
- c Hauptgruppenregister (Master index)
- d Untergruppenregister (Group index)

a Bildseite

Die Bildseiten bestehen aus Perspektivzeichnungen. Die Positionsnummern der abgebildeten Artikel sind in der gleichen numerischen Reihenfolge in der gegenüberliegenden Textseite aufgeführt. Positionsnummern für komplette Einheiten stehen in einem Kreis. Die Bildseite wird so oft wiederholt, wie für den dazugehörigen Textabschnitt erforderlich ist.

b Textseite

Die Einteilung der Textseite ist unsymmetrisch dargestellt, wobei die Bedeutung der einzelnen Felder nachstehend erläutert ist:

- 1 Koordinate zum Suchsystem des Mikroficherasters
- 2 Abschnitt Internbezeichnung für das Datensystem
- 3 Untergruppe z.B. KRAFTSTOFFANLAGE, Hauptgruppe 2
- 4 Abschnitt z.B. Zweivergaser-Motor
- 5 Datum Ausgabedatum
- 6 Bild-Nr. Bild auf der entsprechenden Linksseite
- 7 Hauptgruppe z.B. 2 Motor
- 8 Seite Seiten-Nr. innerhalb der Hauptgruppe
- 9 Zeilen-Nr. Internbezeichnung für das Datensystem

- 10 * bezeichnet Veränderungen beim letzten Seitenaustausch
- 11 Pos. Positions-Nr. des auf der Bildseite abgebildeten Teils
- 12 Art. Nr. Ersatzteil-Nr.
- 13 Anzahl
- 14 Description Englische Bezeichnung
- 15 Benämning Schwedische Bezeichnung
- 16 * der Punkt gibt an, daß die Teile zum unmittelbar vorstehendem Teil gehören, z.B. Pos. 3 u.s.w. gehören zu Pos. 1 und werden bei Bestellung von Pos. 1 mitgeliefert
- 17 S Satz, bezeichnet, daß das Teil Bestandteil eines Satzes ist
- 18 SR/L Lagerhaltungsniveau
- 19 Hinweis Abkürzungen, Hinweise, Abmessungen u.s.w., z.B. 8283855/863, geist 8283863
- 20 (0000000) Eine Artikelnummer die herausgezogen wird oder durch einer neuen Artikelnummer ersetzt wird, entfernt man aus dem Ersatzteilkatalog, 3 Jahre nach dem Saab-Scania den Artikel verkauft hat. Um die alten Ersatzteile identifizieren zu können, wird die alte Ersatzteilnummer ausgeschrieben und in Klammer gesetzt. Hinweis auf Fußnote
- 21 9, 10)

2-D08

SAAB 99
M74-

Fuel system

Twin carburetor

engine 2,0 l 1975-76

Bränslesystem

Två-förgasare

motor 2,0 l 1975-76

Date

Datum

1981-08

Illustration

Bild nr

R3898

Group

Grupp

2

Page

Sida

103

Fig. Pos.	Part No Art nr	Quantity/ Antal	Description	Benämning	K/S	Notes
(11)	(12)	(13)	(14)	(15)	(17)	(18)
						(19)
0020	1	83 55 372	1	Carburetor assy front	Förgasare kpl främre	5 (9)
0040	1	83 60 570	1	Carburetor assy front	Förgasare kpl främre	5 (10)
0060	2	83 55 380	1	Carburetor assy rear	Förgasare kpl bakre	5 (9)
0080	2	83 63 129	1	Carburetor assy rear	Förgasare kpl bakre	10 (83 60 448)
0100	3	83 61 404	1	Spindle throttle	Spjällaxel	6 PART OF 83 55 372
0110	4	83 61 412	1	Spindle throttle	Spjällaxel	6 PART OF 83 55 380
0140	5	83 61 420	1	Stop arm	Stopparm	6 PART OF 83 55 372
0180	5	83 61 719	1	Stop arm	Stopparm	6 PART OF 83 60 372
0180	6	83 61 438	1	Stop arm	Stopparm	6 PART OF 83 55 380
0200	6	83 61 651	1	Stop arm	Stopparm	6 PART OF 83 60 448
0220	7	83 61 446	1	Nut	Mutter	5 PART OF 83 55 372
0240	8	83 61 453	1	Joint nut	Skarvmutter	5 PART OF 83 55 380
0260	9	83 61 461	1	Spring, throttle return	Returfjäder	5 PART OF 83 55 372, 83 55 380
0280	9	83 61 665	1	Spring, throttle return	Returfjäder	5 PART OF 83 60 448, 83 60 570
0300				Throttle	Spjäll	8
0320	10	83 61 479	1	Screw, throttle	Skruv, spjäll	5
0340	11	83 61 487	2	Choke	Choke	4 PART OF 83 55 372
0360	12	83 61 495	1	Choke	Choke	4 PART OF 83 55 380
0400	12	83 64 085	1	Choke	Choke	4 PART OF 83 60 448
0420	12	83 61 653	1	Choke	Choke	4 PART OF 83 60 570
0440	13	83 61 701	1	Screw, choke	Skruv, choke	5
0460	14	83 10 353	1	Float	Flötdör	5 (0000000)
0500						

9. Ch. 99752041733-99755016176-99757006197.
10. Ch. 99762000001-99766000001-99767000001.

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

c Master index – Hauptgruppenregister

Die Ersatzteilliste in zehn Hauptgruppen eingeteilt.

- 0 Allgemeines, Satzlieferungen
- 1 Werkzeug
- 2 Motor
- 3 Elektrische Anlage, Instrumente
- 4 Kraftübertragung
- 5 Bremsen
- 6 Vorderradaufhängung, Lenkung
- 7 Federung, Räder
- 8 Karosserie
- 9 Zubehör
- 10 Nummernregister

Das Hauptgruppenregister ist auf sämtlichen Mikrofiches angegeben und bezeichnet, mit welcher Koordinate jede Hauptgruppe beginnt.

d Group index – Untergruppenregister

Das Hauptgruppenregister ist in Untergruppen aufgeteilt. Die erste Seite jeder Hauptgruppe hat ein Inhaltsverzeichnis, aus dem hervorgeht, auf welcher Seite und Koordinate die größeren Artikeleinheiten angegeben sind.

Das Untergruppenregister ist auf jedem Mikrofiche unmittelbar unter dem Hauptgruppenregister angegeben und bezeichnet, mit welchen Koordinaten die Untergruppen beginnen.

4. Nummernregister

Register für neu hinzugekommene und entfallende Artikel

Das letzte Mikrofiche in jedem Mikrofichesatz enthält immer das Nummernregister der Ersatzteilliste. Das Register ist tabellarisch aufgebaut und in die Spalten „Art.Nr.“, „Gr.“, „Seite“ und „Koord.“ eingeteilt. Die Best.-Nummern sind in numerischer Reihenfolge aufgeführt, und die Nummer verweist auf die Gruppe und Seite der Ersatzteilliste sowie die Mikrofichekoordinate, wo das jeweilige Teil zu finden ist. Das Nummernregister kommt besonders dann zur Anwendung, wenn lediglich die Best.-Nr. eines Teils bekannt ist und die übrigen Bestelldaten benötigt werden.

Im Zusammenhang mit Änderung von einer Ersatzteilliste (Austausch des Mikrofichesatzes) werden sämtliche Artikel aufgeführt, die seit der vorherigen Ausgabe entweder neu hinzugekommen oder entfallen sind. Diese Liste hat ebenfalls numerische Reihenfolge mit Angabe von Seiten-Nr. bzw. Koordinaten, und sie ist im Anschluß an das normale Bestellnummernregister unter den jeweiligen Titeln „Neue Artikel“, „Entfallende Artikel“ aufgeführt.

KOORDINATENNUMMERN

3-J02

SAAB 06
M79–

060	Electrical system	Elektriskt system	Art. Nr.	Gr. Nr.	Seite	Koord.
			1961-03	3	1	1

Die Koordinatennummer besteht aus 3 Teilen

- Laufende Nummer des Mikrofiches 3-J02
- Waagrechte Bildreihe 3-J 02
- Senkrechte Bildreihe 3-J 02

Sämtliche Textseiten und Seitenhinweise sind mit einer Koordinatennummer versehen.

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

So liest man ein Mikrofiche

Das Mikrofiche heraussuchen, das lt. Titelfeld die gesuchte Information enthält.


Das Mikrofiche auf den Halter mit dem Titel nach außen gerichtet anbringen und ein beliebiges Bildfeld auf dem Bildschirm zeigen.

Die Haupt- oder Untergruppe suchen, die die erwünschte Information enthalten soll, dann die Koordinatennummer ablesen.

Den Pfeil des Mikrofichehalters auf die Koordinatennummer einstellen und auf dem Bildschirm kontrollieren, daß die richtige Koordinate auf der Textseite angegeben ist.

Im Inhaltsverzeichnis den gewünschten Abschnitt oder die gewünschte größere Einheit suchen, wo die erforderliche Information vorhanden sein soll.

1. Koordinatenplatte
2. Waagrechte Bildreihe A-B-C-D...
3. Senkrechte Bildreihe 2-4-6-8-10...
4. Koordinatenpfeil am Mikrofichehalter

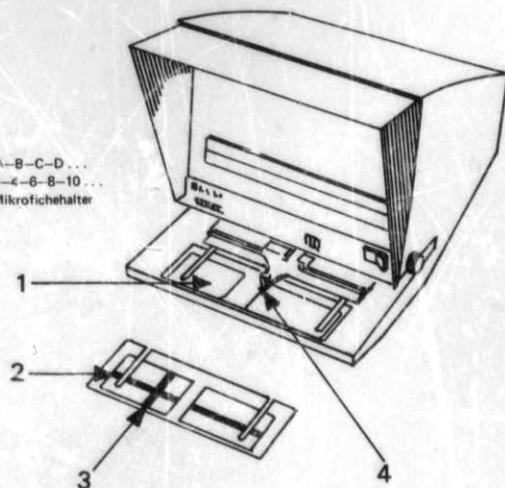

-1979	Bis Baujahr 1979
1980-	Ab Baujahr 1980
5-speed	Fünfganggetriebe
A	Automatic transmission (Automatisches Getriebe)
AC	Air Conditioning (Klimatisierung)
C	Carburetor (Vergaser)
T	Twin carburetors (zwei Vergaser)
CK	Combi Coupé, 3 oder 5 CK
Ch. -xxxxxxxxxx	Bis einschl. Fahrgestellnummer
Ch. xxxxxxxxxxxx-	Ab Fahrgestellnummer
EGR	Exhaust Gas Recirculation (Abgasrezirkulation)
ELCD	Evaporative Loss Control Device (Geschlossenes Kraftstoffsystem)
EMS	Injection, Manual transmission, Special
Engine -xxxxx	Bis einschl. Motornummer
Engine xxxxxx-	Ab Motornummer
Gearbox -xxxxx	Bis einschl. Getriebe Nr.
Gearbox xxxxxx-	Ab Getriebe Nr.
I	Injection (Motor mit Einspritzung)
LH	Left Hand (Links)
LHD	Left Hand Driven (Linksgesteuert)
M	Manual transmission (Handschaltgetriebe)
PO	Polizeauto
PS	Power Steering (Servolenkung)
RH	Right Hand (Rechts)
RHD	Right Hand Driven (Rechtsgesteuert)
S	Sitze
SI	Service Information
SR	Sun Roof (Schiebedach)
X	Quantity as required (Anzahl nach Gebrauch)

On-off	"Auf-zu" Abgasrezirkulationssystem
Proportional (Prop.)	Proportional Abgasrezirkulation
Pulse air	Pulzierender Lufteinblasungssystem

AU	Australien
BE	Belgien
CA	Kanada
CZ	Tschechoslowakei
DK	Dänemark
EU	Europa
FR	Frankreich
GB	Großbritannien
IT	Italien
JA	Japan
ME	Mittlere Osten
NO	Norwegen
SF	Finnland
SW	Schweden
UC	USA-California
UF	USA außer California
US	USA

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02


0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02



Gearbox number,
automatic transmission
Växellådsnummer,
automatisk växellåda




Gearbox number,
manual transmission
Växellådsnummer,
manuell växellåda

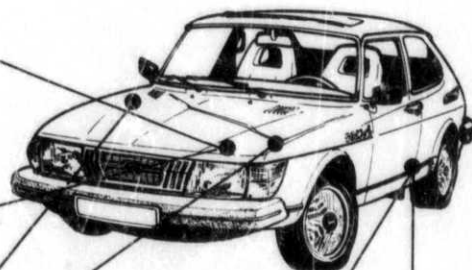


R 3784- 900



Engine number
Motornummer

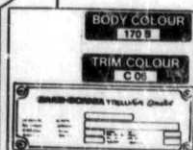

Chassis number
Trim colour code
Car colour code
Chassinummer
Klädselkod
Färgkod

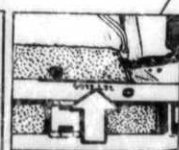

Chassis number punched
in car body, 3-door model
(Placed under back seat
cushion)
Chassinumret instanset i
kaross, 3-dörrarsversion
(placerat under baksätets
sittdyna)



Chassis number punched
in car body, 5-door model
(Placed under back seat
cushion)
Chassinumret instanset i
kaross, 5-dörrarsversion
(placerat under baksätets
sittdyna)

Saab 900

1979

90791000001-90791034858
90792000001-90792004453
90796000001-90796004675

Saab 900

1980

90501000001-90801035325
90802000001-90802010522
90806000001-90806005128

Type

Year model

Production place:

1 } Trollhättan
2 }
6 } Finland

Numerical chassis number

Typ

Årsmodell

Tillverkningsort:

1 } Trollhättan
2 }
6 } Finland

Löpande chassinr

90 XX X XXXXXX

M 1979

Engine type:
"B" — gasoline engine, carburetor
"BI" — gasoline engine, mechanical injection
"BT" — gasoline engine, twin carburetors
"BSI" — gasoline engine, mechanical injection, Turbo
Cylinder volume in dl
"P04" designed for manual transmission (B, BT) Europe
"P05" designed for automatic transmission (BT) Europe
"P06" designed for automatic transmission (BT) Sweden
"P08" designed for manual transmission (BI) Europe
"P09" designed for automatic transmission (BI) Europe
"P10" designed for automatic transmission (BI) UF
"P11" designed for manual transmission (BI) UC
"P12" designed for automatic transmission (BI) UC
"P13" designed for manual transmission (BI) UF
"P14" designed for manual transmission (BI) Sweden
"P01" designed for manual transmission (BSI) Europe
"P02" designed for manual transmission (BSI) US
Serial number 6 figures

Motortyp:
"B" — bensinmotor, förgasare
"BI" — bensinmotor, mekanisk insprutning
"BT" — bensinmotor, två förgasare
"BSI" — bensinmotor, mekanisk insprutning, Turbo
Slagvolym i dl
"P04" avsedd för manuell växellåda (B, BT) Europa
"P05" avsedd för automatisk växellåda (BT) Europa
"P06" avsedd för automatisk växellåda (BT) Sverige
"P08" avsedd för manuell växellåda (BI) Europa
"P09" avsedd för automatisk växellåda (BI) Europa
"P10" avsedd för automatisk växellåda (BI) UF
"P11" avsedd för manuell växellåda (BI) UC
"P12" avsedd för automatisk växellåda (BI) UC
"P13" avsedd för manuell växellåda (BI) UF
"P14" avsedd för manuell växellåda (BI) Sverige
"P01" avsedd för manuell växellåda (BSI) Europa
"P02" avsedd för manuell växellåda (BSI) US
6-siffrigt löpnummer

B 20 P0X 000 000

M 1980

Engine type:
"B" — gasoline engine, carburetor
"BI" — gasoline engine, mechanical injection
"BT" — gasoline engine, twin carburetors
"BSI" — gasoline engine, mechanical injection, Turbo
Cylinder volume in dl
"P04" designed for manual transmission (B, BT) Europe
"P05" designed for automatic transmission (BT) Europe
"P06" designed for automatic transmission (BT) Sweden
"P08" designed for manual transmission (BI) Europe
"P09" designed for automatic transmission (BI) Europe
"P11" designed for manual transmission (BI) US
"P12" designed for automatic transmission (BI) US
"P14" designed for manual transmission (BI) Sweden
"P01" designed for manual transmission (BSI) Europe
"P02" designed for manual transmission (BSI) US
Serial number 6 figures

Motortyp:
"B" — bensinmotor, förgasare
"BI" — bensinmotor, mekanisk insprutning
"BT" — bensinmotor, två förgasare
"BSI" — bensinmotor, mekanisk insprutning, Turbo
Slagvolym i dl
"P04" avsedd för manuell växellåda (B, BT) Europa
"P05" avsedd för automatisk växellåda (BT) Europa
"P06" avsedd för automatisk växellåda (BT) Sverige
"P08" avsedd för manuell växellåda (BI) Europa
"P09" avsedd för automatisk växellåda (BI) Europa
"P11" avsedd för manuell växellåda (BI) US
"P12" avsedd för automatisk växellåda (BI) US
"P14" avsedd för manuell växellåda (BI) Sverige
"P01" avsedd för manuell växellåda (BSI) Europa
"P02" avsedd för manuell växellåda (BSI) US
6-siffrigt löpnummer

B 20 P0X 000 000

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

Below are stated first and last production numbers for engines and gearboxes within year model resp.

Här nedan anges första och sista tillverkningsnummer för motorer och växellådor inom respektive årsmodeller.

M 1979

Engine number

B 20P04 000101-006800
BT 20P04 000136-010420
BT 20P05 000126-001960
BT 20P06 000126-002300
BI 20P08 000126-002445
BI 20P09 000126-001885
BI 20P10 000126-001800
BI 20P11 000126-002270
BI 20P12 000126-000990
BI 20P13 000126-004435
BI 20P14 000101-001537
BSI20P01-003301-009645
BSI20P02 003801-007191

Gearbox number

Manual standard G 344 02
Manual Turbo (Europe) G 446 02
Manual Turbo US G 445 02
Automatic 489 1001-
001-57500

M 1980

Engine number

B 20P04 006801-19864
BT 20P04 010421-14267
BT 20P05 002118-3366
BT 20P06 002326-4375
BI 20P08 002532-5862
BI 20P09 001701-3231
BI 20P11 002301-6837
BI 20P12 001101-3533
BI 20P14 001581-2900
BSI20P01 010601-18315
BSI20P02 007201-13700

Gearbox number

4-växl 57501-111293
5-växl 400 001-418347
Automat 487 48908500-48912196
" 37 1001-1750

Lagerhaltungsniveau

Das Lagerhaltungsniveau ist in der Spalte SR/L mit einer der Ziffern 1-6 gem. folgender Aufschlüsselung angegeben:

Lagerhaltungsniveau 1 Artikel für Service und Unterhaltsarbeiten

Lagerhaltungsniveau 2 Artikel für einfachere Reparaturen

Lagerhaltungsniveau 3 Artikel für umfangreichere Reparaturen

Lagerhaltungsniveau 4 Schwere Artikel und Artikel mit geringerem Umsatz

Lagerhaltungsniveau 5 Komplette Motoren, Zylinderköpfe, Getriebe usw.

Lagerhaltungsniveau 6 Extra umsatztrüge Artikel

Das Lagerhaltungsniveau ist mit dem Händlerniveau koordiniert.

Händlerniveau 1 Werkstätten und Tankstellen, die einfachere Wartungsarbeiten ausführen und hauptsächlich Artikel gem. Lagerhaltungsniveau 1 verwenden.

Händlerniveau 2 Mittelgroße Händler und vielseitigere Werkstätten, die Wartungsarbeiten und gewisse Reparaturen ausführen und hauptsächlich Artikel gem. Lagerhaltungsniveau 1-2 verwenden.

Händlerniveau 3 Große Händler, die Wartungsarbeiten und Reparaturen aller Art ausführen und Artikel gem. Lagerhaltungsniveau 1-3 verwenden.

Händlerniveau 4 Sehr große Händler (einschließlich Exportmärkte: Generalagenten) die Artikel gem. Lagerhaltungsniveau 1-4 verwenden.

Händlerniveau 5 Importeure, die Artikel gem. Lagerhaltungsniveau 1-5 im Lager führen.

Händlerniveau 6 Das Saab-Zentrallager in Nyköping, Schweden.

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

Ce catalogue de pièces de rechange est valable pour la Saab 900 des modèles des années 1979 et 1980. Le catalogue comprend les groupes 0-10. Le groupe 0 comporte Généralités et Jeux complets, le groupe 1, Outillage c'est-à-dire les outils spéciaux destinés aux travaux d'inspection et de réparation. Le groupe 10 contient l'index numérique. Le principe de division du catalogue est conforme aux recommandations de la Fédération Patronale Suédoise de l'Entretien et du Commerce de l'Automobile en ce qui concerne les catalogues de pièces de rechange et la littérature d'orientation du service.


Le catalogue des pièces de rechange est distribué sous forme de microfiche. Il a le No. de commande 651844, et il est tenu à jour par la distribution de nouvelles microfiches. L'information spéciale Nécessaire sera transmise par le moyen des "Spare Parts Information".

Lors de la commande de pièces de rechange pour une voiture donnée, il convient de toujours spécifier le numéro de châssis et/ou le numéro de moteur et/ou le numéro de boîte de vitesses. Sur l'illustration, page 1-D09, il est indiqué l'emplacement de ces numéros sur la voiture.

STRUCTURE DE LA FICHE

Les fiches ont un coefficient de réduction de 42/1 par rapport au format A-4. La capacité maximum d'une fiche est de 288 pages à text et illustrations disposées en coordonnées de 12 x 12 carreaux.


L'information du catalogue figure sur la fiche de la façon suivante:

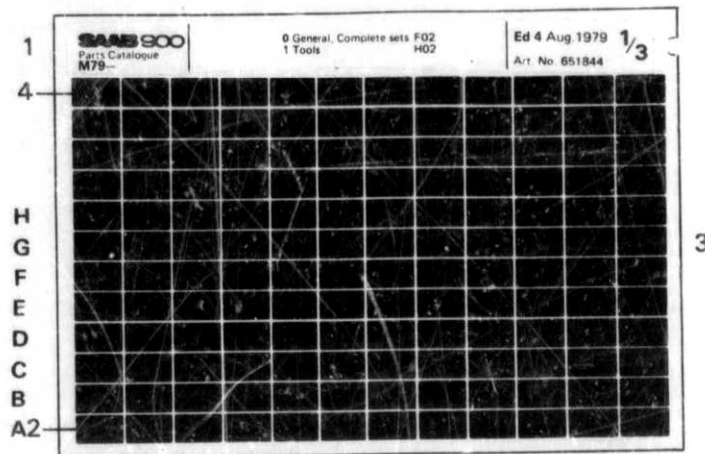

1. Espace à rubrique
2. Généralités (la première fiche du jeu)

3. Pages à text et illustrées
4. Index numérique (la dernière fiche du jeu)

1. Espace à rubrique

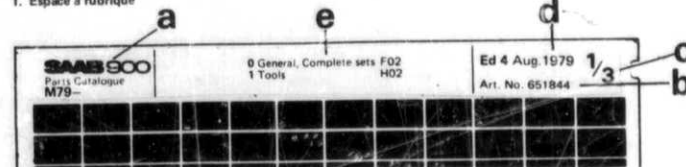

- a. Dénomination de type
- b. Numéro du catalogue
- c. Numéro de la fiche. Exemple: fiche No. 1 de 4 est transcrit 1/4

- d. Edition, date
- e. Relation des groupes du catalogue figurant sur la fiche et des coordonnées de localisation


2. Généralités

Les parties générales du catalogue avec introduction, instructions, nos. de châssis et de moteur, etc. commencent toujours dans les lignes A-E de la fiche 1.

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3. Pages à illustrations et à texte

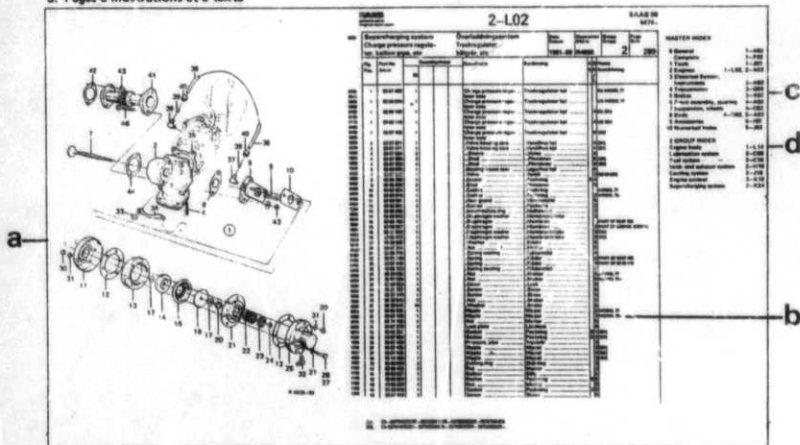

Sur les lignes F, G, H et supérieures, il est exposé toute l'information contenue dans les coordonnées indiquées sur la table des matières.

Chaque fiche contient l'information ci-après:

- a Page à illustrations
- b Page à texte
- c Master index — index des groupes
- d Group index — index des sous-groupes

a Page à illustrations

Les illustrations consistent en des dessins en perspective. Les numéros de position des articles illustrés sont pris en ordre numérique sur la page à texte opposée. Les numéros de position des ensembles complets sont entourés d'un cercle. La même page illustrée est répétée tant des fois qu'il y ait besoin de nouvelles pages à texte pour sa description.

b Page à texte

La page à texte est divisée selon la fig. ci-dessous. Les chiffres de la fig. renvoient aux chiffres correspondantes du texte ci-dessous.

- | | |
|---------------------------|--|
| 1 Coordonnées de la fiche | pour la localisation des coordonnées de la fiche |
| 2 Section | référence interne du système ordinateur |
| 3 Sous-groupe | exemple: SYSTEME DE CARBURANT, groupe 2 |
| 4 Section | exemple: Deux carburateurs |
| 5 Date | date de publication |
| 6 No. de la figure | illustration correspondante côté gauche |
| 7 Groupe | exemple: Moteur |
| 8 Page | No. de la page dans le groupe |
| 9 No. de ligne | référence interne du système ordinateur |

INSTRUCTIONS

- | | | |
|----|---------------|---|
| 10 | " | indique les modifications de la dernière édition |
| 11 | Pos. | No. de position de l'article illustré sur la page à illustrations |
| 12 | No. d'article | No. d'article |
| 13 | | quantité par voiture |
| 14 | Description | terminologie en anglais |
| 15 | Dénomination | terminologie en suédois |
| 16 | " | un point devant un nom indique que les pièces font partie de l'article principal qui les précède, p.ex.: les pos. 3 etc. font partie de la pos. 1 et elles constituent un même envoi lors de l'achat de la pos. 1. |
| 17 | S | jeu, indique que l'article fait partie d'un jeu |
| 18 | SR/L | niveau de magasinage |
| 19 | Observations | abréviations, indications, dimensions, etc. P.ex. 8283855/863, "863" signifie 8283863 |
| 20 | (0000000) | Lorsqu'un numéro d'article est supprimé ou remplacé, son élimination du catalogue n'a lieu que trois ans après la vente, de part de Saab-Scania, de la dernière pièce portant l'ancien numéro.
Pour faciliter l'identification des pièces supprimées, leur ancien numéro figure entre parenthèse.. |
| 21 | 9, 10) | rappels |

2-D08

SAAB 99
M74-

1100	Fuel system		3		Bränslesystem		Date		Illustration		Group		Page	
	Twin carburetor		4		Tvä-förgasare		Datum		Bild nr		Grupp		Sida	
	engine 2,0 l 1975-76				motor 2,0 l 1975-76		1981-08		R3898		7		2 8 103	
Fig. Pos.		Part No	Quantity/Antal		Description		Benämning		KS		Notes			
11		12	99 13		14		15		17		18		19	
(9)														
0026	1	33 55 372	1		Carburetor assy front	Förgasare kpl främre	5	10	(21)					
0046	2	83 61 578	1		Carburetor assy front	Förgasare kpl främre	5	10						
0080	2	83 55 380	1		Carburetor assy rear	Förgasare kpl bakre	5	10	(13 60 448)					
0100	2	83 63 129	1		Carburetor assy rear	Förgasare kpl bakre	5	10						
0102	4	83 61 404	1		Spindle throttle	Spjällaxel	5	10						
0124	4	83 61 412	1		Spindle throttle	Spjällaxel	5	10						
0160	5	83 61 420	1		Stop arm	Stopparm	5	10						
0160	5	83 61 719	1		Stop arm	Stopparm	5	10						
0200	6	83 61 436	1		Stop arm	Stopparm	5	10						
0200	6	83 61 651	1		Stop arm	Stopparm	5	10						
0220	7	83 61 446	1		Nut	Mutter	5	10						
0240	8	83 61 453	1		Joint nut	Skruvmutter	5	10						
0260	9	83 61 461	1		Spring, throttle	Returfjäder	5	10						
0260	9	83 61 585	1		Spring, throttle return	Returfjäder	5	10						
0320	10	83 61 479	1		Spring, throttle return	Returfjäder	5	10						
0340	10	83 61 487	1		Throttle	Spjäll	5	10						
0360	11	83 61 487	2		Screw, throttle	Skruv, spjäll	5	10						
0380	12	83 61 495	1		Choke	Choke	5	10						
0400	12	83 64 065	1		Choke	Choke	5	10						
0420	12	83 61 693	1		Choke	Choke	5	10						
0440	12	83 61 701	1		Choke	Choke	5	10						
0460	13	83 05 476	2		Screw, choke	Skruv, choke	5	10						
0480	14	83 10 393	1		Floet	Floetör	5	10						

- ② 9. Ch.-99752041733.-99756016176.-99757006197.
10. Ch. 99762000001.-99766000001.-99767000001.

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

c Master index — index des groupes

Le catalogue est divisé en 10 groupes.

- 0 Généralités, jeux
- 1 Outillage
- 2 Moteur
- 3 Equipement électrique, instruments
- 4 Transmission
- 5 Freins
- 6 Trein AV, direction
- 7 Suspension, roues
- 8 Carrosserie
- 9 Accessoires
- 10 Index numérique

Le "Master index" se retrouve sur tous les carreaux des fiches et les coordonnées indiquent où commencent les groupes.

d Group index — index des sous-groupes

Le registre des groupes est divisé en sous-groupes. Une table des matières sur la première page de chaque groupe indique les pages et les coordonnées du groupe de localisation des grands ensembles d'articles.

Le "Group index" se retrouve sur tous les carreaux des fiches, immédiatement au-dessous du "Master index", et les coordonnées indiquent où commencent les sous-groupes.

4. Index numérique

Régitre d'articles nouveaux et d'articles supprimés

La dernière des fiches de chaque ensemble constituant le catalogue est toujours destinée à l'index numérique du catalogue. L'index est en forme de table et divisé dans les colonnes "Art. nr.", "Gr.", "Sida" et "Koord.". Les numéros d'article sont placés en ordre numérique. Le numéro renvoi au groupe, page et coordonnées où l'article en question est catalogué. L'index numérique est d'utilité lorsque seulement le numéro de l'article est connu et que d'autres informations sont désirées pour la commande.

Lors du renouvellement du catalogue (remplacement d'un jeu de fiches), tous les articles qui depuis la dernière édition y ont été inclus ou exclus, sont reportés dans une liste. Cette liste suit l'ordre numérique des articles que comporte, avec mention du numéro de la page et des coordonnées leur correspondant. Elle est placée après l'index numérique ordinaire, sous les titres respectifs "Nya artiklar" (articles nouveaux), "Utgående artiklar" (articles supprimés).

NUMERO DE COORDINATION

		3-J02		SAAB 55 M74-	
000	Electrical system	Elektriskt system	First Edition	Group (in pt)	Page Side
			1961-09	3-J	02

Le numéro de coordination se compose de trois parties

- Le numéro d'ordre de la fiche 3-J02
- La ligne verticale de la fiche 3-J 02
- La ligne horizontale de la fiche 3-J 02

Toutes les pages à texte et toutes références à page sont accompagnées du numéro de coordination.

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

Comment lire la microfiche

Prendre la fiche qui, selon la rubrique, contient l'information désirée.


Placer la fiche dans le chariot avec la rubrique orientée vers l'opérateur et projeter sur l'écran carreau désiré.

Chercher dans le "Main index" le groupe ou le sous-groupe contenant l'information désirée et noter le numéro de coordination.

Placer l'index du chariot sur le numéro de coordination indiqué, et contrôler dans l'image projetée sur l'écran que le numéro de coordination de la page à texte soit correct.

Chercher dans la table des matières la section désirée ou l'ensemble où l'information désirée doit se trouver.

1. Plaque coordonnée
2. Ligne de fiche verticale A-B-C-D...
3. Ligne de fiche horizontale 2-4-6-8-10...
4. Index du chariot

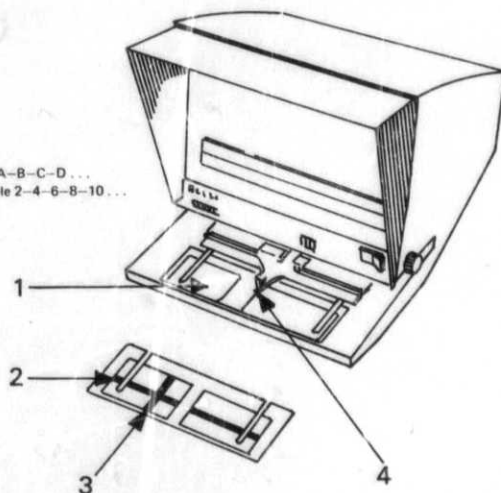

900 M79-
April 79

—1979	Jusqu'au modèle de l'année 1979
1980—	A partir du modèle de l'année 1980
5-Speed	Cinq vitesses
A	Automatic transmission (Boîte de vitesses automatique)
AC	Air Conditioning (Conditionnement d'air)
C	Carburetor (Carburateur)
T	Twin carburetors (Carburateurs jumelés)
CK	Combi coupé, 3 ou 5 CK
Ch. —xxxxxxxxxx	Jusqu'au No. de châssis
Ch. xxxxxxxxxxxx—	A partir du No. de châssis
EGR	Exhaust Gas Recirculation (Récirculation des gaz d'échappement)
ELC/D	Evaporative Loss Control Device (Système de carburant fermé)
EMS	Electronic fuel injection, Manual transmission, Special (Injection électronique, Boîte de vitesses manuelle, Spécial)
Engine —xxxxx	Jusqu'au No. de moteur
Engine xxxxx—	A partir du No. de moteur
Gearbox —xxxxx	Jusqu'au No. de boîte de vitesses
Gearbox xxxxx—	A partir du No. de boîte de vitesses
I	Injection (Moteur à injection)
LH	Left Hand (Côté gauche)
LHD	Left Hand Driven (D. à G.)
M	Manual transmission (Boîte de vitesses manuelle)
PO	Voiture de police
PS	Power Steering (Servo-direction)
RH	Right Hand (Côté droit)
RHD	Right Hand Driven (D. à D.)
S	Jeux
SI	Service Information
SR	Sun Roof (Toit ouvrant)
X	Quantity as required (Quantité d'après besoin)
On-off	Système EGR "deux positions"
Proportional (Prop.)	Système Proportionnel de récirculation des gaz d'échappement
Pulse air	Injection d'air pulsatoire
AU	Australie
BE	Belgique
CA	Canada
CZ	Tchécoslovaquie
DK	Danemark
EU	Europe
FR	France
GB	Grande-Bretagne
IT	Italie
JA	Japon
ME	Prochain Orient
NO	Norvège
SF	Finlande
SW	Suède
UC	USA, Californie
UF	USA, Fédéral
US	USA

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

900 M79-
Aug 79

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02



Gearbox number,
automatic transmission
Växellådsnummer,
automatisk växellåda




Gearbox number,
manual transmission
Växellådsnummer,
manuell växellåda



Engine number
Motornummer




Chassis number
Trim colour code
Car colour code
Chassinummer
Klädselekt
Färgkod

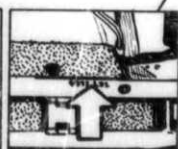

Chassis number punched
in car body, 3-door model
(Placed under back seat
cushion)
Chassinumret instansat i
kaross, 3-dörrarsversion
(placerat under baksätets
sittdyna)



Chassis number punched
in car body, 5-door model
(Placed under back seat
cushion)
Chassinumret instansat i
kaross, 5-dörrarsversion
(placerat under baksätets
sittdyna)

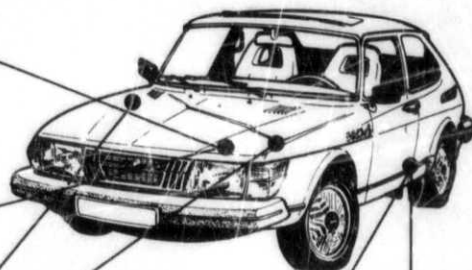

R 3784-900

Saab 900 1979 90791000001-90791034858
90792000001-90792004463
90796000001-90796004675

Saab 900 1980 90801000001-90801035325
90802000001-90802010522
90806000001-90806005128

Type

Year model

Production place:

1 } Trollhättan
2 }
6 Finland

Numerical chassis number

Typ

Årsmodell

Tillverkningsort:

1 } Trollhättan
2 }
6 Finland

Löpande chassinr

90 XX X XXXXXX

M 1979

Engine type:
"B" — gasoline engine, carburetor
"B1" — gasoline engine, mechanical injection
"BT" — gasoline engine, twin carburetors
"BS1" — gasoline engine, mechanical injection, Turbo
Cylinder volume in dl
"P04" designed for manual transmission (B, BT) Europe
"P05" designed for automatic transmission (BT) Europe
"P06" designed for automatic transmission (BT) Sweden
"P08" designed for manual transmission (B1) Europe
"P09" designed for automatic transmission (B1) Europe
"P10" designed for automatic transmission (B1) UF
"P11" designed for manual transmission (B1) UC
"P12" designed for automatic transmission (B1) UC
"P13" designed for manual transmission (B1) UF
"P14" designed for manual transmission (B1) Sweden
"P01" designed for manual transmission (BS1) Europe
"P02" designed for manual transmission (BS1) US
Serial number 6 figures

Motortyp:
"B" — bensinmotor, förgasare
"B1" — bensinmotor, mekanisk insprutning
"BT" — bensinmotor, två förgasare
"BS1" — bensinmotor, mekanisk insprutning, Turbo
Slagvolym i dl
"P04" avsedd för manuell växellåda (B, BT) Europa
"P05" avsedd för automatisk växellåda (BT) Europa
"P06" avsedd för automatisk växellåda (BT) Sverige
"P08" avsedd för manuell växellåda (B1) Europa
"P09" avsedd för automatisk växellåda (B1) Europa
"P10" avsedd för automatisk växellåda (B1) UF
"P11" avsedd för manuell växellåda (B1) UC
"P12" avsedd för automatisk växellåda (B1) UC
"P13" avsedd för manuell växellåda (B1) UF
"P14" avsedd för manuell växellåda (B1) Sverige
"P01" avsedd för manuell växellåda (BS1) Europa
"P02" avsedd för manuell växellåda (BS1) US
6-siffrigt löpnummer

B 20 P0X 000 000

M 1980

Engine type:
"B" — gasoline engine, carburetor
"B1" — gasoline engine, mechanical injection
"BT" — gasoline engine, twin carburetors
"BS1" — gasoline engine, mechanical injection, Turbo
Cylinder volume in dl
"P04" designed for manual transmission (B, BT) Europe
"P05" designed for automatic transmission (BT) Europe
"P06" designed for automatic transmission (BT) Sweden
"P08" designed for manual transmission (B1) Europe
"P09" designed for automatic transmission (B1) Europe
"P11" designed for manual transmission (B1) US
"P12" designed for automatic transmission (B1) US
"P14" designed for manual transmission (B1) Sweden
"P01" designed for manual transmission (BS1) Europe
"P02" designed for manual transmission (BS1) US
Serial number 6 figures

Motortyp:
"B" — bensinmotor, förgasare
"B1" — bensinmotor, mekanisk insprutning
"BT" — bensinmotor, två förgasare
"BS1" — bensinmotor, mekanisk insprutning, Turbo
Slagvolym i dl
"P04" avsedd för manuell växellåda (B, BT) Europa
"P05" avsedd för automatisk växellåda (BT) Europa
"P06" avsedd för automatisk växellåda (BT) Sverige
"P08" avsedd för manuell växellåda (B1) Europa
"P09" avsedd för automatisk växellåda (B1) Europa
"P11" avsedd för manuell växellåda (B1) US
"P12" avsedd för automatisk växellåda (B1) US
"P14" avsedd för manuell växellåda (B1) Sverige
"P01" avsedd för manuell växellåda (BS1) Europa
"P02" avsedd för manuell växellåda (BS1) US
6-siffrigt löpnummer

B 20 P0X 000 000

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

Below are stated first and last production numbers for engines and gearboxes within year model resp.

Här nedan anges första och sista tillverkningsnummer för motorer och växellådor inom respektive årsmodeller.

M 1979

Engine number	Gearbox number
B 20P04 000101-006800	Manual standard G 344 02
BT 20P04 000136-010420	Manual Turbo (Europe) G 446 02
BT 20P05 000125-001960	Manual Turbo US G 445 02
BT 20P06 000126-002300	Automatic 489 1091-
BI 20P08 000126-002445	
BI 20P09 000126-001885	
BI 20P10 000126-001800	
BI 20P11 000126-002270	
BI 20P12 000126-000990	
BI 20P13 000126-004435	
BI 20P14 000101-001537	
BSI20P01 000301-009645	
BSI20P02 000301-007191	

M 1980

Engine number	Gearbox number
B 20P04 006801-19854	Manual 4-speed 57501-111293
BT 20P04 010421-14267	Manual 5-speed 400001-418347
BT 20P05 002116-3365	
BT 20P06 002326-4375	Automatic 487 48908500-48912190
BI 20P08 002532-5862	Automatic 37 1001-1750
BI 20P09 001701-3231	
BI 20P11 002301-9837	
BI 20P12 001101-3533	
BI 20P14 001581-2900	
BSI20P01 010601-18315	
BSI20P02 007201-13700	

Niveau de magasinage

Le niveau de magasinage est indiqué sur la colonne SR/L par un chiffre entre 1-6, représentant les concepts ci-après:

Niveau 1	Articles de service et entretien
Niveau 2	Articles pour des réparations peu importantes
Niveau 3	Articles pour des réparations importantes
Niveau 4	Articles lourds et articles peu mouvementés
Niveau 5	Moteurs complets, culasses, boîtes de vitesses, etc.
Niveau 6	Articles extrêmement peu mouvementés

Niveau de concessionnaire

Le niveau de magasinage et le niveau de concessionnaire sont en rapport de la façon suivante:

Niveau 1	Garages et pompes de distribution d'essence. Capacités pour simples travaux de service ne demandant qu'un stock principalement constitué par les articles niveau 1.
Niveau 2	Concessionnaires d'importance moyenne disposant d'atelier mieux équipé que les précédents. Capacités pour le service et la réparation dont le stock nécessaire est principalement composé par des articles niveaux 1-2.
Niveau 3	Concessionnaires importants pouvant réaliser toute sorte de travaux de service et de réparation. Stock principalement composé des articles niveaux 1-3.
Niveau 4	Grands distributeurs (marché d'exportation) et quelques concessionnaires très importants dont le stock se compose d'articles des niveaux 1-4.
Niveau 5	Importeur dont le stock correspond aux niveaux 1-5.
Niveau 6	Dépôt central à Nyköping.

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

Esta catálogo de piezas de recambio es válido para el Saab 900 de los modelos de los años 1979 y 1980 y comprende los grupos 0-10. El grupo 0 comporta Generalidades y Juegos completos, el grupo 1, Herramientas, es decir, las herramientas especiales destinadas a los trabajos de inspección y reparación. El grupo 10 contiene el Índice numérico. La división del catálogo corresponde a las recomendaciones que la Asociación Patronal Sueca del Comercio de Automóviles ha dado para los catálogos de piezas de recambio y literatura de orientación del servicio.


El catálogo de piezas de recambio es distribuido en forma de microficha y tiene el número de requisición 651844. El catálogo será mantenido al día por distribución de nuevas microfichas. La información complementaria de carácter especial que pueda resultar necesaria será comunicada mediante los "Spare Parts information".

Para la demanda de piezas de recambio destinadas a un coche determinado, indicar siempre el número de chasis y/o el número de motor y/o el número de caja de cambios. La ilustración, página 1-E09, indica la ubicación de estos números en el coche.

ESTRUCTURA DE LA FICHA


En relación al formato A-4, la ficha tiene una reducción de 42/1. Su máxima capacidad es de 288 páginas de texto e ilustradas dispuestas en coordenadas de 12 x 12 cuadros

La información del catálogo figura en la ficha de la manera siguiente:

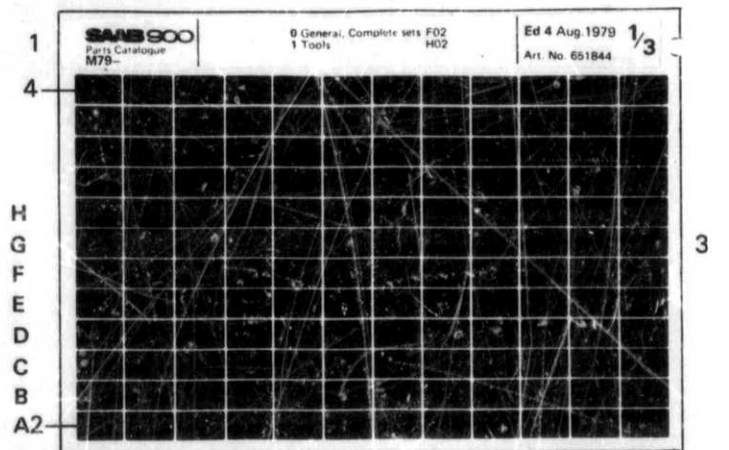

1. Espacio titular
2. Generalidades (la primera ficha del juego)
3. Páginas de texto e ilustradas
4. Índice numérico (última ficha del juego)

1. Espacio titular

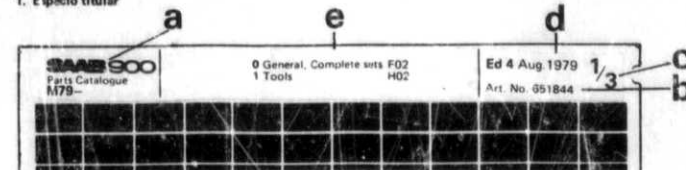

- a. Denominación de tipo
- b. Número del catálogo
- c. Número de la ficha. Ejemplo: ficha Num. 1 de 4 se transcribe 1/4
- d. Edición, fecha
- e. Relación de los grupos del catálogo que figuran en la ficha y de las coordenadas de localización


2. Generalidades

Las partes generales del catálogo con introducción, instrucciones, núms. de chasis y de motor, etc. comienzan siempre en las líneas A - E de la ficha 1.

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3. Páginas ilustradas y de texto

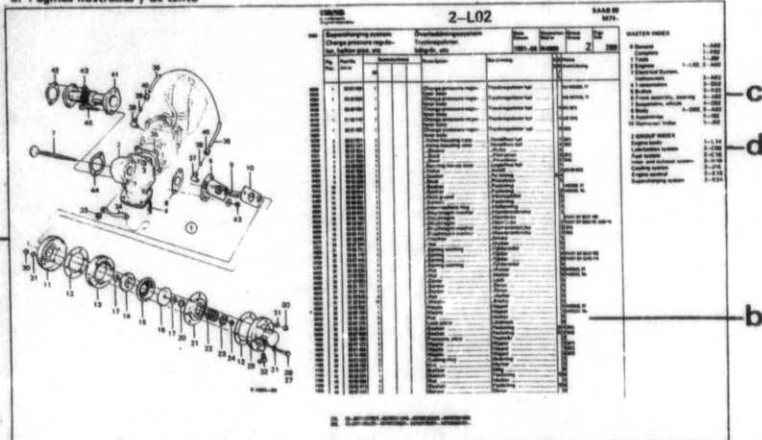

En las líneas F,G,H y superiores está expuesta toda la información contenida en las coordenadas dadas en el sumario.

Cada ficha contiene la siguiente información:

- a Página ilustrada
- b Página de texto
- c Master index - índice de grupos
- d Group index - índice de subgrupos

a Página ilustrada

Las ilustraciones están constituidas por dibujos en perspectiva. Los núms. de posición de los artículos ilustrados figuran en orden numérico en la página de texto opuesta. Los núms. de posición de los conjuntos completos van dentro de un círculo. La misma pág. ilustrada se repite tantas veces como páginas de texto se necesitan para describirla.

b Página de texto

La página de texto está dividida según la fig. más abajo. Las cifras de la fig. se refieren a las correspondientes del texto siguiente:

- | | | |
|---|-------------------------|--|
| 1 | Coordenadas de la ficha | para localizar las coordenadas de la ficha |
| 2 | Sección | referencia interna del sistema ordenador |
| 3 | Subgrupo | ejemplo: SISTEMA DE COMBUSTIBLE, grupo 2 |
| 4 | Sacción | ejemplo: Dos carburadores |
| 5 | Fecha | fecha de publicación |
| 6 | Núm. de la figura | ilustración correspondiente lado izquierdo |
| 7 | Grupo | ejemplo: motor |
| 8 | Página | núm. de la página en el grupo |
| 9 | Núm. de línea | referencia interna del sistema ordenador |

900 M79-
Maj -82

- 10
- 11 Pos.
- 12 Núm. de artículo
- 13 Descripción
- 14 Denominación
- 15
- 16
- 17 S
- 18 SR/L
- 19 Observaciones
- 20 (0000000)
- 21 9, 10)

indica las modificaciones de la última edición
núm. de posición del artículo en la página ilustrada
núm. de artículo
cantidad por coche
terminología en inglés
terminología en sueco
un punto delante de un nombre indica que las piezas forma parte del artículo principal que le precede, p.ej.: las posiciones 3 etc. forman parte de la posición 1 y constituyen el mismo envío cuando se compra la posición 1
juego, indica que el artículo forma parte de un juego
nivel de almacenaje
abreviaciones, indicaciones, dimensiones, etc., p.ej. 8283855/8R3, "863" significa 8283863
Los núms. de artículo suprimidos o cambiados, son eliminados del catálogo tres años después de la venta, por parte de Saab-Scania, de la última pieza portador del número antiguo.
Para facilitar la identificación de las piezas suprimidas, su número antiguo figura entre paréntesis.
llamada al pie de la página

2-D08

SAAB 99
M74-

Fuel system		Bränslesystem		Date	Illustration	Group	Page
Twin carburetor		Två-förgasare		Datum	Bild nr	Grupp	Sida
engine 2,0 1975-76		motor 2,0 1975-76		1981-08	R3898	2	103
Fig. Pos.	Part No	Quantity/Antal	Description	Benämning	K/S	Notes	
11	12	13	14	15	17	18	19
0020	1	83 55 372	1	Carburetor assy front	Förgasare kpl främre	5 9	
0040	1	83 80 570	1	Carburetor assy front	Förgasare kpl främre	10	(21)
0060	2	83 55 380	1	Carburetor assy rear	Förgasare kpl bakre	5 9	
0080	2	83 55 129	1	Carburetor assy rear	Förgasare kpl bakre	10	(83 80 448)
0100	3	83 61 404	1	Spindle throttle	Spjällaxel	6	PART OF 83 55 372
0120	4	83 61 412	1	Spindle throttle	Spjällaxel	6	PART OF 83 55 380
0140	5	83 61 420	1	Stop arm	Stopperm	6	PART OF 83 55 372
0160	5	83 61 719	1	Stop arm	Stopperm	6	PART OF 83 80 570
0180	6	83 61 436	1	Stop arm	Stopperm	6	PART OF 83 55 380
0200	6	83 61 651	1	Stop arm	Stopperm	6	PART OF 83 80 448
0220	7	83 61 446	1	Nut	Mutter	5	PART OF 83 55 372
0240	8	83 61 453	1	Joint nut	Skruvmutter	5	PART OF 83 55 380
0260	9	83 61 461	1	Spring, throttle return	Returfjäder	5	PART OF 83 55 372
0280							83 55 380
0300	9	83 61 685	1	Spring, throttle return	Returfjäder	5	PART OF 83 80 448
0320							83 80 570
0340	10	83 61 479	1	Throttle	Spjäll	6	
0360	11	83 61 487	2	Screw, throttle	Skruv, spjäll	5	
0380	12	83 61 495	1	Choke	Choke	4	PART OF 83 55 372
0400	12	83 64 085	1	Choke	Choke	4	PART OF 83 55 380
0420	12	83 61 653	1	Choke	Choke	4	PART OF 83 80 448
0440	12	83 61 701	1	Choke	Choke	4	PART OF 83 80 570
0460	13	83 05 475	2	Screw, choke	Skruv, choke	5	
0480	14	83 10 393	1	Float	Flottör	5	(10000000)

- (21) 9. Ch.-99752041733 -99756016176 -99757006187.
- 10. Ch. 99782000001.-99786000001.-99787000001.-

900 M79-
Maj -82

MASTER INDEX

- | | | |
|----|--------------------------------|-------|
| 0 | General | 1-A02 |
| 1 | Tools | 1-H02 |
| 2 | Engine | 2-A02 |
| 3 | Electrical system, Instruments | 2-F02 |
| 4 | Transmission | 2-J02 |
| 5 | Brakes | 3-A02 |
| 6 | Front assembly, Steering | 3-B02 |
| 7 | Suspension, Wheels | 3-C02 |
| 8 | Body | 3-D02 |
| 9 | Accessories, Labels | 3-L02 |
| 10 | Numerical register | 4-A02 |

c Master index -- índice de grupos

El catálogo está dividido en 10 grupos.

- 0 Generalidades, juegos
- 1 Herramientas
- 2 Motor
- 3 Sistema eléctrico
- 4 Transmisión
- 5 Frenos
- 6 Tren delantero, dirección
- 7 Suspensión, ruedas
- 8 Carrocería
- 9 Accesorios
- 10 Índice numérico

El "Master index" figura sobre todos los cuadros de las fichas y las coordenadas indican dónde comienzan los grupos.

d Group index -- índice de subgrupos

El índice de grupos está dividido en subgrupos. En el sumario de la primera página de cada grupo se indican las páginas y las coordenadas de localización los grandes conjuntos de artículos.

El "Group index" figura en todos los cuadros de las fichas, inmediatamente debajo del "Master index", y las coordenadas indican dónde comienzan los subgrupos.

4. Índice numérico

Registro de artículos nuevos y de artículos suprimidos

La última ficha de cada juego se destina siempre al índice numérico del catálogo. El índice se presenta en forma de tabla y está dividido en las columnas siguientes: "Art nr", "Gr", "Sida" y "Koord". Los números de artículo siguen el orden numérico. El número indica el grupo, la página y las coordenadas de catalogación del artículo de referencia. El índice numérico se utiliza cuando sólo se conoce el número del artículo y se desean otras informaciones para el pedido.

Al renovar el catálogo (cambio de un juego de fichas), todos los artículos que después de la última edición han sido incluidos o excluidos, se relacionan en la lista. Esta lista sigue el orden numérico de los artículos que contiene, con mención del número de la página y de las coordenadas que les corresponden, y está situada después del índice ordinario, bajo los títulos respectivos de "Nya artiklar" (nuevos artículos) y "Utgående artiklar" (artículos suprimidos).

NUMERO DE COORDINACION

3-J02

SAAB 55
M74-

Electrical system	Elektriskt system	Page Ordre	Group Grupp	Page Sida
		1961-09	3	02

El número de coordinación consta de tres partes

- El número de orden de la ficha 3-J02
- La línea vertical de la ficha 3-102
- La línea horizontal de la ficha 3-J02

Todas las páginas de texto y todas las referencias a página van acompañadas del número de coordinación.

MASTER INDEX

0 General	1-A02
1 Tools	1-H02
2 Engine	2-A02
3 Electrical system, Instruments	2-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly, Steering	3-B02
7 Suspension, Wheels	3-C02
8 Body	3-D02
9 Accessories, Labels	3-L02
10 Numerical register	4-A02

Cómo leer la microficha


Tomar la ficha que, según el título, contiene la información buscada.

Situar la ficha en el carro con el título orientado hacia el operador y proyectar sobre la pantalla el cuadro deseado.

Buscar en el "Main index" el grupo o el subgrupo que contiene la información necesitada y tomar nota del número de coordinación.

Colocar la flecha del carro en el número de coordinación anotado y controlar en la imagen proyectada en la pantalla que el número de coordinación de la página de texto es el correcto.

Buscar en el sumario la sección deseada o el conjunto en donde la información necesitada debe encontrarse.

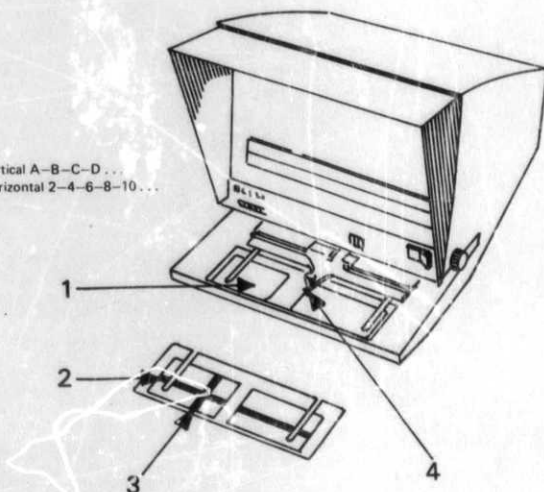

1. Placa coordenada
2. Línea de ficha vertical A-B-C-D...
3. Línea de ficha horizontal 2-4-6-8-10...
4. Flecha del carro

-1979	Hasta el modelo del año 1979
1980-	Desde el modelo del año 1980
5-Speed	Cinco marchas
A	Automatic transmission (Caja de cambios Automática)
AC	Air Conditioning (Aire acondicionado)
C	Carburetor (Carburador)
T	Twin Carburetors (Carburadores gemelos)
CK	Combi coupé, 3 & 5 CK
Ch. -xxxxxxxxxxxx	Hasta el chasis número
Ch. xxxxxxxxxxxxxx-	Desde el chasis número
EGR	Exhaust Gas Recirculation (Recirculación de gas de escape)
ELCD	Evaporative Loss Control Device (Sistema de combustible cerrado)
ELMS	Electronic fuel injection, Manual transmission, Special (Inyección electrónica, caja de cambios manual, Especial)
Engine -xxxxx	Hasta el motor número
Engine xxxxxx -	Desde el motor número
Gearbox -xxxxx	Hasta la caja de cambios número
Gearbox xxxxxx -	Desde la caja de cambios número
I	Injection (Motor de inyección)
LH	Left Hand (Lado izquierdo)
LHD	Left Hand Driven (Volante a la izquierda)
M	Manual transmission (Caja de cambios manual)
PO	Coche policía
PS	Power Steering (Servodirección)
RH	Right Hand (Lado derecho)
RHD	Right Hand Driven (Volante a la derecha)
S	Juegos
SI	Service Information
SR	Sun Roof (Techo corredizo)
X	Quantity as required (Cantidad según necesidad)
On-off 1	Sistema EGR "dos posiciones"
Proportional (Prop.)	Sistema proporcional de recirculación de gases de escape
Pulse air	Inyección pulsatoria de aire
AU	Australia
BE	Bélgica
CA	Canadá
CZ	Checoslovaquia
DK	Dinamarca
EU	Europa
FR	Francia
GB	Gran Bretaña
IT	Italia
JA	Japón
MG	Próximo Oriente
NO	Noruega
SF	Finlandia
SW	Suecia
UC	EE.UU., California
UF	EE.UU., Federal
US	EE.UU.

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02


0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02



Gearbox number,
automatic transmission
Växellådsnummer,
automatisk växellåda



Gearbox number,
manual transmission
Växellådsnummer,
manuell växellåda

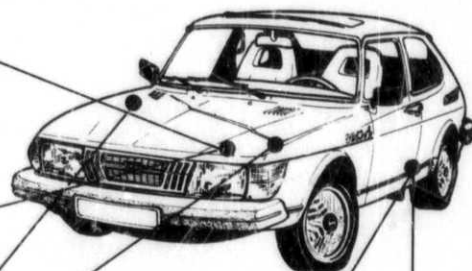


R 3784-900



Engine number
Motornummer



Chassis number
Trim colour code
Car colour code
Chassinummer
Kärlsfärgkod
Färgkod

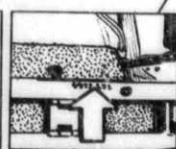

Chassis number punched
in car body, 3-door model
(Placed under back seat
cushion)
Chassinumret instansat i
kaross, 3-dörrarsversion
(placerat under baksätets
sittdyna)



Chassis number punched
in car body, 5-door model
(Placed under back seat
cushion)
Chassinumret instansat i
kaross, 5-dörrarsversion
(placerat under baksätets
sittdyna)

Saab 900 1979 90791000001-90791034858
90792000001-90792004463
90796000001-90796004675

Saab 900 1980 90801000001-90801035325
90802000001-90802010522
90806000001-90806005128



M 1979

Engine type:
"B" — gasoline engine, carburetor
"BI" — gasoline engine, mechanical injection
"BT" — gasoline engine, twin carburetors
"BSI" — gasoline engine, mechanical injection, Turbo
Cylinder volume in dl
"P04" designed for manual transmission (B, BT) Europe
"P05" designed for automatic transmission (BT) Europe
"P06" designed for automatic transmission (BT) Sweden
"P08" designed for manual transmission (BI) Europe
"P09" designed for automatic transmission (BI) Europe
"P10" designed for automatic transmission (BI) UF
"P11" designed for manual transmission (BI) UC
"P12" designed for automatic transmission (BI) UC
"P13" designed for manual transmission (BI) UF
"P14" designed for manual transmission (BI) Sweden
"P01" designed for manual transmission (BSI) Europe
"P02" designed for manual transmission (BSI) US
Serial number 6 figures

Motortyp:
"B" — bensinmotor, förgasare
"BI" — bensinmotor, mekanisk insprutning
"BT" — bensinmotor, två förgasare
"BSI" — bensinmotor, mekanisk insprutning, Turbo
Slagvolym i dl
"P04" avsedd för manuell växellåda (B, BT) Europa
"P05" avsedd för automatisk växellåda (BT) Europa
"P06" avsedd för automatisk växellåda (BT) Sverige
"P08" avsedd för manuell växellåda (BI) Europa
"P09" avsedd för automatisk växellåda (BI) Europa
"P10" avsedd för automatisk växellåda (BI) UF
"P11" avsedd för manuell växellåda (BI) UC
"P12" avsedd för automatisk växellåda (BI) UC
"P13" avsedd för manuell växellåda (BI) UF
"P14" avsedd för manuell växellåda (BI) Sverige
"P01" avsedd för manuell växellåda (BSI) Europa
"P02" avsedd för manuell växellåda (BSI) US
6-siffrigt löpnummer

B 20 POX 000 000

M 1980

Engine type:
"B" — gasoline engine, carburetor
"BI" — gasoline engine, mechanical injection
"BT" — gasoline engine, twin carburetors
"BSI" — gasoline engine, mechanical injection, Turbo
Cylinder volume in dl
"P04" designed for manual transmission (B, BT) Europe
"P05" designed for automatic transmission (BT) Europe
"P06" designed for automatic transmission (BT) Sweden
"P08" designed for manual transmission (BI) Europe
"P09" designed for automatic transmission (BI) Europe
"P11" designed for manual transmission (BI) US
"P12" designed for automatic transmission (BI) US
"P14" designed for manual transmission (BI) Sweden
"P01" designed for manual transmission (BSI) Europe
"P02" designed for manual transmission (BSI) US
Serial number 6 figures

Motortyp:
"B" — bensinmotor, förgasare
"BI" — bensinmotor, mekanisk insprutning
"BT" — bensinmotor, två förgasare
"BSI" — bensinmotor, mekanisk insprutning, Turbo
Slagvolym i dl
"P04" avsedd för manuell växellåda (B, BT) Europa
"P05" avsedd för automatisk växellåda (BT) Europa
"P06" avsedd för automatisk växellåda (BT) Sverige
"P08" avsedd för manuell växellåda (BI) Europa
"P09" avsedd för automatisk växellåda (BI) Europa
"P11" avsedd för manuell växellåda (BI) US
"P12" avsedd för automatisk växellåda (BI) US
"P14" avsedd för manuell växellåda (BI) Sverige
"P01" avsedd för manuell växellåda (BSI) Europa
"P02" avsedd för manuell växellåda (BSI) US
6-siffrigt löpnummer

B 20 POX 000 000

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

Below are stated first and last production numbers for engines and gearboxes within year model resp.

Här nedan anges första och sista tillverkningsnummer för motorer och växellådor inom respektive årsmodeller.

M 1979

Engine number	Gearbox number
B 20P04 000101-006800	Manual standard G 344 02
BT 20P04 000136-010420	Manual Turbo (Europe) G 446 02
BT 20P05 000126-001960	Manual Turbo US G 445 02
BT 20P06 000126-001300	Automatic 489 1001-57500
BI 20P08 000126-002445	
BI 20P09 000126-001685	
BI 20P10 000126-001800	
BI 20P11 000126-002270	
BI 20P12 000126-000990	
BI 20P13 000126-004435	
BI 20P14 000101-001537	
BSI20P01-003301-009645	
BSI20P02 003801-007191	

M 1980

Engine number	Gearbox number
B 20P04 006901-19854	Manual 4-speed 57501-111293
BT 20P04 010421-14267	Manual 5-speed 400001-418347
BT 20P05 002116-3366	
BT 20P06 002326-4375	
BI 20P08 002532-6862	Automatic 487 48908500-48912196
BI 20P09 001701-3231	Automatic 37 1001-1750
BI 20P11 002301-6837	
BI 20P12 001101-3533	
BI 20P14 001581-2900	
BSI20P01 010601-18315	
BSI20P02 007201-13700	

Nivel de almacenaje

El nivel de almacenaje se indica en la columna SR/Lcon una cifra del 1 al 6 que representa los conceptos siguientes:

Nivel 1	Artículos de servicio y mantenimiento
Nivel 2	Artículos para reparaciones poco importantes
Nivel 3	Artículos para reparaciones importantes
Nivel 4	Artículos pesados y artículos de poco movimiento
Nivel 5	Motores completos, culatas, cajas de cambio, etc.
Nivel 6	Artículos de poco movimiento en grado extremo.

Nivel de concesionario

El nivel de almacenaje y el de concesionario están en relación de la manera siguiente:

Nivel 1	Talleres y bombas de combustible con capacidad para trabajos de reparación y de servicio sencillos. Almacén generalmente compuesto de artículos nivel 1.
Nivel 2	Concesionarios de importancia media con taller mejor equipado que los precedentes, con capacidad para servicio y reparaciones que requieren artículos principalmente compuestos por los de los niveles 1-2.
Nivel 3	Concesionarios importantes capacitados para toda clase de reparaciones y trabajos de servicio. Almacén principalmente constituido por los artículos de los niveles 1-3.
Nivel 4	Grandes distribuidores (mercado de exportación) y algunos concesionarios muy importantes cuyos almacenes se componen de artículos de los niveles 1-4.
Nivel 5	Importador cuyo almacén corresponde a los niveles 1-5.
Nivel 6	Almacén central en Nyköping.

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

0050	Complete sets	Satser	Date Datum	Group Grupp	Page Sida
			1987-10	0	1
0020	CONTENTS				
0040	Complete sets:				
0060	Engine	0 : 2	1-F03		
0080	Electrical system, instruments	0 : 11	1-F12		
0100	Transmission	0 : 12	1-F13		
0120	Brakes	0 : 18	1-F19		
0140	Front wheel suspension, steering device	0 : 20	1-F21		
0160	Suspension system, wheels	0 : 22	1-F23		
0180	Car body	0 : 24	1-G01		
0200	INNEHÅLLSFÖRTECKNING				
0220	Satser:				
0240	Motor	0 : 2	1-F03		
0260	Elektriskt system, instrument	0 : 11	1-F12		
0280	Kraftöverföring	0 : 12	1-F13		
0300	Bromsar	0 : 18	1-F19		
0320	Främre vagn, styrinrättning	0 : 20	1-F21		
0340	Fjädringssystem, hjul	0 : 22	1-F23		
0360	Kaross	0 : 24	1-G01		
0380	INHALTSVERZEICHNIS				
0400	Komplete Sätze:				
0420	Motor	0 : 2	1-F03		
0440	Elektrisches System, Instrumente	0 : 11	1-F12		
0460	Kraftübertragung	0 : 12	1-F13		
0480	Bremsen	0 : 18	1-F19		
0500	Vordergestell, Lenkung	0 : 20	1-F21		
0520	Federung, Räder	0 : 22	1-F23		
0540	Karosserie	0 : 24	1-G01		
0560	TABLE DES MATIERES				
0580	Jeux complets				
0600	Moteur	0 : 2	1-F03		
0620	Équipement électrique, instruments	0 : 11	1-F12		
0640	Transmission	0 : 12	1-F13		
0660	Freins	0 : 18	1-F19		
0680	Train AV, direction	0 : 20	1-F21		
0700	Suspension roues	0 : 22	1-F23		
0720	Carrosserie	0 : 24	1-G01		
0740	SUMARIO				
0760	Juegos completos				
0780	Motor	0 : 2	1-F03		
0800	Sistema eléctrico, instrumentos	0 : 11	1-F12		
0820	Transmisión	0 : 12	1-F13		
0840	Frenos	0 : 18	1-F19		
0860	Mecanismos delanteros, dirección, cambio en el volante	0 : 20	1-F21		
0880	Suspensión ruedas	0 : 22	1-F23		
0900	Carrocería	0 : 24	1-G01		

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02
0 GROUP INDEX		
Engine		1-F03
Electrical system, instruments		1-F12
Transmission		1-F13
Brakes		1-F19
Front wheel suspension, steering device		1-F21
Suspension system, wheels		1-F23
Car body		1-G01

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

0 GROUP INDEX

Engine	1-F03
Electrical system, instruments	1-F12
Transmission	1-F13
Brakes	1-F19
Front wheel suspension, steering device	1-F21
Suspension system, wheels	1-F23
Car body	1-G01

Complete sets		Satsler		Date	Illustration	Group	Page
Engine		Motor		Datum	Bild nr	Grupp	Sida
				1987-10	BLANK	0	2

Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S	Notes
		900	US		S/R	Anmärkning
0020	93 37 304	X	Gasket set engine	Packningssats, motor	1	C,T
0030	93 58 780	1	Gasket, cyl. head	Packning, cyl. lock	2	
0040	93 05 970	1	Gasket, valve cover	Packning, ventilkåpa	1	
0050	93 59 341	1	Gasket end plate	Packning, gavelplatta	2	
0060	75 88 882	1	Gasket, transmission cover	Packning, transmissionskåpa	2	
0070	75 88 890	1	Gasket, transmission cover	Packning, transmissionskåpa	2	
0080	53 48 526	1	Gasket, inlet manifold	Packning, insugningsrör	3	
0100	83 56 933	1	Gasket, exhaust manifold	Packning, avgassamlare	2	(83 49 045)
0120	83 47 635	1	Gasket oil pump	Packning oljepump	4	
0130	83 49 631	1	Gasket vent housing	Packning, ventilationshus	4	
0140	83 68 672	1	Gasket, flange cyl. blok	Packning, fläns cyl. blok	2	(83 49 730)
0160	83 68 334	1	Washer, insulating	Isolerbricka	4	C
0180	83 59 788	2	Washer, insulating	Isolerbricka	4	T
0200	83 74 639	1	Gasket, air cleaner	Packning, luftrenare	4	C
0220	83 36 877	2	Gasket, air cleaner	Packning, luftrenare	4	T
0240	83 50 156	1	Seal ring	Tätningarring	3	
0260	83 00 204	1	Seal ring	Tätningarring	2	
0280	81 19 422	1	O-ring	O-ring	2	
0300	93 37 312	X	X Gasket set, engine	Packningssats, motor	1	
0320	93 58 780	1	1. Gasket, cyl. head	Packning, cyl. lock	2	
0340	93 05 970	1	1. Gasket, valve cover	Packning, ventilkåpa	1	
0360	93 59 341	1	1. Gasket, end plate	Packning, gavelplatta	2	
0380	83 53 732	1	1. Seal ring	Tätningarring	3	(83 49 060)
0400	33 09 204	1	1. Seal ring	Tätningarring	2	
0420	75 88 882	1	1. Gasket, transmission cover	Packning, transmissionskåpa	2	
0440	83 59 333	1	1. Gasket, transmission cover	Packning, transmissionskåpa	2	
0460	83 48 518	1	1. Gasket, inlet manifold	Packning, insugningsrör	3	
0480	83 56 933	1	1. Gasket, exhaust manifold	Packning, avgassamlare	2	(83 49 045)
0500	83 47 635	1	1. Gasket oil pump	Packning oljepump	4	
0520	81 19 422	1	1. O-ring	O-ring	2	
0540	83 49 631	1	1. Gasket, vent housing	Packning, ventilationshus	4	
0560	93 37 288	X	Gasket set, »decarb»	Packningssats, »sot»	1	C,T
0580	93 58 780	1	Gasket, cyl. head	Packning, cyl. lock	2	
0600	93 05 970	1	Gasket, valve cover	Packning, ventilkåpa	1	
0620	75 88 882	1	Gasket, inlet manifold	Packning, insugningsrör	3	(83 48 526)
0640	83 56 933	1	Gasket, exhaust manifold	Packning, avgassamlare	2	
0660	75 88 981	1	Washer, insulating	Isolerbricka	4	C, (83 68 334)
0680	75 88 916	2	Washer, insulating	Isolerbricka	4	T, (83 69 788)
0700	83 74 639	1	Gasket, air cleaner	Packning, luftrenare	4	C
0720	83 36 877	2	Gasket, air cleaner	Packning, luftrenare	4	T
0740	93 37 296	X	X Gasket set, »decarb»	Packningssats, »sot»	1	
0760	93 58 780	1	1. Gasket, cyl. head	Packning, cyl. lock	2	
0780	93 05 970	1	1. Gasket, valve cover	Packning, ventilkåpa	1	
0800	75 88 882	1	1. Gasket, inlet manifold	Packning, insugningsrör	3	

Complete sets		Satsler		Date	Illustration	Group	Page
Engine		Motor		Datum	Bild nr	Grupp	Sida
				1987-10	BLANK	0	3

Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S	Notes
		900	US		S/R	Anmärkning
	83 56 933	1	1. Gasket, exhaust manifold	Packning, avgassamlare	2	
	93 20 748	X	X Gasket set, »decarb»	Packningssats, »sot»	2	TURBO
	83 58 780	1	1. Gasket, cyl. head	Packning, cyl. lock	2	
	93 05 970	1	1. Gasket, valve cover	Packning, ventilkåpa	1	
	75 88 882	1	1. Gasket, inlet manifold	Packning, insugningsrör	3	
	83 56 933	1	1. Gasket, exhaust manifold	Packning, avgassamlare	2	
	83 66 924	1	1. Gasket, bellows pipe	Packning, bälgrör	0	
	83 66 916	1	1. Gasket, bellows pipe	Packning, bälgrör	0	
	83 66 262	1	1. Gasket, turbo-exhaust manifold	Packning, turbo-avgassamlare	2	
	83 66 254	1	1. Gasket, wastegate-housing-turbo	Packning, wastegate-housing-turbo	4	
	83 66 288	1	1. Gasket, wastegate-housing-valve housing	Packning, wastegate-housing-valve housing	4	
	81 24 141	1	1. Gasket, guide tube-exhaust manifold	Packning, styrör-avgassamlare	3	
	83 61 842	2	2. Gasket, exhaust manifold	Packning, avgassamlare	1	
	83 61 859	1	1. Gasket, exhaust manifold	Packning, avgassamlare	1	
	83 64 234	X	Gasket set, carburetor	Packningssats, för-gasare	4	C
	83 51 346	1	1. Washer	Bricka	5	
	83 05 419	1	1. Washer	Bricka	5	
	83 05 336	2	2. Washer	Bricka	4	
	83 08 052	2	2. Gasket	Packning	5	
	83 09 098	1	1. Washer	Bricka	4	
	83 06 064	1	1. Washer	Bricka	4	
	83 09 072	1	1. Washer	Bricka	4	
	83 05 773	1	1. O-ring	O-ring	2	
	33 05 849	1	1. Gasket, float chamber	Packning, flottörhus	4	
	33 05 823	1	1. Washer, needle valve	Bricka, nålventil	4	
	83 66 843	1	1. Gasket	Packning	4	
	83 05 484	1	1. Washer	Bricka	5	
	33 66 850	1	1. O-ring	O-ring	2	
	83 66 868	1	1. Retainer ring, damp piston	Hållarring, dämpkolv	4	
	83 66 676	1	1. Washer	Bricka	4	
	83 64 267	X	Gasket set, carburetor	Packningssats, för-gasare	4	T
	83 64 259	X	Gasket set, carburetor	Packningssats, för-gasare	4	C
	83 08 652	1	1. Gasket	Packning	4	
	83 09 064	1	1. Lock washer	Låsbricka	4	
	83 09 072	1	1. Lock washer	Låsbricka	4	
	83 05 823	1	1. Washer, needle valve	Bricka, nålventil	4	
	83 05 575	1	1. O-ring	O-ring	2	
	83 05 849	1	1. Gasket, float chamber	Packning, flottörhus	4	
	83 08 678	1	1. Diaphragm	Membran	4	
	83 52 494	1	1. Seal	Tätning	5	
	83 51 413	1	1. Needle valve	Nålventil	3	
	83 61 594	X	Gasket set, carburetor	Packningssats, för-gasare	4	T
	83 05 823	1	1. Washer, needle valve	Bricka, nålventil	4	
	83 05 773	1	1. O-ring	O-ring	2	
	83 05 849	1	1. Gasket, float chamber	Packning, flottörhus	4	
	83 08 652	1	1. Gasket	Packning	4	
	83 09 064	1	1. Seal washer	Tätningbricka	4	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

0 GROUP INDEX

Engine	1-F03
Electrical system, instruments	1-F12
Transmission	1-F13
Brakes	1-F19
Front wheel suspension, steering device	1-F21
Suspension system, wheels	1-F23
Car body	1-G01

Complete sets		Sats		Date		Illustration		Group		Page	
Engine		Motor		Datum		Bild nr		Grupp		Sida	
				1987-10		BLANK		0		4	
Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S	Notes	Illustration	Group	Page	Side	
		900	US		S/R	Anmärkning					
1300	83 09 072	1	.Seal washer	.Tätningsskiva							
1310	83 09 098	1	.Washer	.Bricka							
1320	83 05 484	1	.Washer	.Bricka							
1330	83 64 242	X	Gasket set, carburetor	Packningssats, för-gasare							
1340	83 05 823	1	.Washer, needle valve	.Bricka, nålventil							
1350	83 05 773	1	.O-ring	.O-ring							
1360	83 05 849	1	.Gasket, float chamber	.Packning, flottörhus							
1400	88 18 785	X	Repair kit carburetor	Reparations-sats, för-gasare							
1410	83 05 849	2	.Gasket	.Packning							
1420	75 88 916	2	.Gasket	.Packning							
1430	83 08 892	8	.Screw	.Skruv							
1440	83 36 877	2	.Gasket	.Packning							
1450	83 59 788	2	.Gasket	.Packning							
1460	83 54 192	2	.Clip	.Clips							
1461	83 61 537	1	.Diaphragm	.Membran							
1470	83 85 843	2	.Jet	.Munstycke							
1480	83 85 577	2	.Fuel needle	.Bränslenål							
1490	83 89 647	2	.Gasket	.Packning							
1500	93 08 792	2	.Adjusting screw	.Juster-skruv							
1510	83 63 806	X	Needle valve set, carburetor	Nålventilsats, för-gasare							
1520	83 63 798	1	.Needle valve	.Nålventil							
1530	83 05 823	1	.Washer	.Bricka							
1540	83 61 644	X	Needle valve set, carburetor	Nålventilsats, för-gasare							
1550	83 51 413	1	.Needle valve	.Nålventil							
1560	83 05 823	1	.Washer	.Bricka							
1610	88 17 256	X	Kit, fuel hose	Sats, bränsleslang							
1620	93 63 359	1	.Hose	.Slang							
1630	79 73 431	4	.Hose clamp	.Slangklämma							
1650	88 17 728	X	X Valve adjustment set	Ventiljustersats							
1660	83 92 003	3	.Plastic box	.Plastlåda							
1670	83 08 215	5	.Adjusting pallet	.Justerbricka							
1680	83 08 223	5	.Adjusting pallet	.Justerbricka							
1690	83 08 231	5	.Adjusting pallet	.Justerbricka							
1700	83 08 249	5	.Adjusting pallet	.Justerbricka							
1710	83 08 256	5	.Adjusting pallet	.Justerbricka							
1720	83 08 264	5	.Adjusting pallet	.Justerbricka							
1730	83 08 272	5	.Adjusting pallet	.Justerbricka							
1740	83 08 280	5	.Adjusting pallet	.Justerbricka							
1750	83 08 298	5	.Adjusting pallet	.Justerbricka							
1760	83 08 306	5	.Adjusting pallet	.Justerbricka							
1770	75 24 275	5	.Adjusting pallet	.Justerbricka							
1780	75 24 291	5	.Adjusting pallet	.Justerbricka							
1790	75 24 317	5	.Adjusting pallet	.Justerbricka							
1800	75 24 333	5	.Adjusting pallet	.Justerbricka							
1810	75 24 358	5	.Adjusting pallet	.Justerbricka							
1820	75 24 374	5	.Adjusting pallet	.Justerbricka							
1830	75 24 390	5	.Adjusting pallet	.Justerbricka							
1840	75 24 416	5	.Adjusting pallet	.Justerbricka							
1850	75 24 432	5	.Adjusting pallet	.Justerbricka							
1860	75 24 457	5	.Adjusting pallet	.Justerbricka							
1870	75 24 473	5	.Adjusting pallet	.Justerbricka							
1880	75 24 499	5	.Adjusting pallet	.Justerbricka							

1. Not as a separate spare part

Complete sets		Sats		Date		Illustration		Group		Page	
Engine		Motor		Datum		Bild nr		Grupp		Sida	
				1987-10		BLANK		0		5	
Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S	Notes	Illustration	Group	Page	Side	
		900	US		S/R	Anmärkning					
	75 24 515	5	.Adjusting pallet	.Justerbricka							
	75 24 531	5	.Adjusting pallet	.Justerbricka							
	75 24 556	5	.Adjusting pallet	.Justerbricka							
	75 24 572	5	.Adjusting pallet	.Justerbricka							
	75 24 596	5	.Adjusting pallet	.Justerbricka							
	75 24 614	5	.Adjusting pallet	.Justerbricka							
	75 24 630	5	.Adjusting pallet	.Justerbricka							
	75 24 655	5	.Adjusting pallet	.Justerbricka							
	75 24 671	5	.Adjusting pallet	.Justerbricka							
	75 24 697	5	.Adjusting pallet	.Justerbricka							
	75 24 713	5	.Adjusting pallet	.Justerbricka							
	75 24 739	5	.Adjusting pallet	.Justerbricka							
	75 24 754	5	.Adjusting pallet	.Justerbricka							
	75 24 770	5	.Adjusting pallet	.Justerbricka							
	75 24 798	5	.Adjusting pallet	.Justerbricka							
	75 24 812	5	.Adjusting pallet	.Justerbricka							
	75 24 838	5	.Adjusting pallet	.Justerbricka							
	75 24 853	5	.Adjusting pallet	.Justerbricka							
	83 20 961	X	X Kit, exhaust manifold	Sats, avgassamlare							
	83 57 592	1	1. Exhaust manifold	.Avgassamlare							
	83 64 770	2	2. Plug	.Plugg							
	13 94 527	1	1. Plug	.Plugg							
	83 33 395	X	X Kit, heat guard front	Sats, värmesköld, för-ljuddämpare							
	83 33 106	1	1. Heat guard	.Värmesköld							
	83 33 148	1	3. Clamp	.Klamma							
	83 33 155	3	3. Clamp	.Klamma							
	80 59 610	3	3. Screw	.Skruv							
	88 17 835	X	X Kit, front muffler	Sats, främre ljud-dämpare							
	75 33 615	1	1. Muffler, front	.Ljuddämpare, främre							
	83 86 450	2	2. Clamp	.Klamma							
	83 87 672	1	1. Gasket	.Packning							
	88 18 213	X	Kit, front muffler	Sats, främre ljud-dämpare							
	75 35 362	1	.Muffler, front	.Ljuddämpare, främre							
	83 36 406	2	.Clamp	.Klamma							
	93 16 407	1	.Seal ring	.Tätningssring							
			.Mounting instruction	.Monteringsanvisning							
	88 17 868	X	X Kit, rear muffler	Sats, bakre ljud-dämpare							
	75 33 631	1	1. Muffler, rear	.Ljuddämpare, bakre							
	75 33 623	1	1. Exhaust pipe	.Avgasrör							
	93 17 405	1	1. Exhaust pipe, rear	.Avgasrör, bakre							
	83 86 450	2	2. Clamp	.Klamma							
	83 84 323	1	1. Clamp	.Klamma							
	75 33 623	1	1. Exhaust pipe	.Avgasrör							
	93 28 105	2	2. Rubber suspension	.Gummiupphängning							
	83 70 207	1	1. Rubber suspension	.Gummiupphängning							
			.Mounting instruction	.Monteringsanvisning							
	88 18 221	X	Kit, rear muffler	Sats, bakre ljud-dämpare							
	75 35 370	1	.Exhaust pipe	.Avgasrör							
	75 35 388	1	.Rear muffler	.Bakre ljuddämpare							
	93 03 322	1	.Rear exhaust pipe	.Bakre avgasrör							
	83 36 422	1	.Clamp	.Klamma							
	83 36 406	2	.Clamp	.Klamma							
	93 28 105	2	.Rubber suspension, muffler	.Gummiupphängning, ljuddämpare							

Complete sets		Sats		Date		Illustration		Group		Page	
Engine		Motor		Datum		Bild nr		Grupp		Sida	
				1987-10		BLANK		0		6	
Fig. Pos.	Part No Art. nr	Quantity/Antal			Description	Benämning	K/S S/R /	Notes Anmärkning			
		900						U3			
	83 70 207	1			.Rubber suspension, exhaust pipe	.Gummiupphängning, luddämpare					
		1			.Mounting instruction	.Monteringsanvisning				75/661595	
	88 18 171	X		X	Mounting kit, rear muffler and pipe	Monteringsatts bakre luddämpare och rör	2			NOT TURBO	
	83 86 450	2		1	.Clamp	.Klamma	1				
	83 84 323	1		1	.Clamp	.Klamma	1				
	93 28 105	2		2	.Rubber suspension	.Gummiupphängning	1			(83 86 476)	
	83 70 207	1		1	.Rubber suspension	.Gummiupphängning	1				
	88 17 371	X		X	Kit, bracket exhaust pipe	Sats, fäste avgasrör				1979-1980, TURBO	
	75 14 189	1		1	.Bracket	.Fäste	5				
	93 17 058	1		1	.Yoke	.Bygel	5				
	80 82 953	2		2	.Nut	.Mutter	5				
	80 82 992	3		3	.Screw	.Skruv	5				
	75 14 631	1		1	.Lock plate	.Låsbleck	5				
	87 18 785	1		1	.Gasket	.Packning	3				
	80 82 935	2		2	.Screw	.Skruv	5				
	68 17 397	1		1	.Mounting instruction	.Monteringsanvisning					
	38 18 197				Mounting kit, front	Monteringsatts				NOT TURBO AND I	
					Muffler	Främre luddämpare					
	83 86 450	2			.Clamp	.Klamma					
	33 87 672	2			.Gasket	.Packning					
	83 37 139	X		X	Mounting kit, rear muffler	Monteringsatts, bakre luddämpare	2			TURBO	
	83 36 406	1		1	.Clamp assy	.Klamma kpl	1				
	83 36 422	1		1	.Clamp assy	.Klamma kpl	1				
	83 21 105	2		2	.Rubber suspension	.Gummiupphängning	1				
	83 70 207	1		1	.Rubber suspension	.Gummiupphängning	1			-1980	
	79 65 775	2		2	.Nut	.Mutter	3			1981-1982	
	93 65 434	1		1	.Rubber suspension	.Gummiupphängning	1			1983-	
	93 37 461	X		X	Set, screw, exhaust manifold	Sats, skruv, avgas- samlare				1979-1980	
	93 50 588	4		4	.Stud	.Pinnskruv	5				
	93 06 804	3		3	.Stud	.Pinnskruv	5				
	83 06 796	1		1	.Stud	.Pinnskruv	5			ALT. 75 21 080	
	93 06 820	7		7	.Nut	.Mutter	3				
	80 73 249	1		7	.Washer	.Bricka	5				
	93 06 812	4		4	.Spacer sleeve	.Distanshylsa	3				
	83 56 933	1		1	.Gasket	.Packning					
	88 17 272	X		X	Gasket set, Turbo charger	Packningsatts, Turbo aggregat	2			1979-1980	
	83 66 924	1		1	.Gasket	.Packning	2				
	83 66 262	1		1	.Gasket	.Packning	2				
	83 66 916	1		1	.Gasket	.Packning	2				
	93 00 476	1		1	.Gasket	.Packning	4				
	23 03 279	1		1	.Gasket	.Packning	4				
	83 66 254	1		1	.Gasket	.Packning	2				
	93 07 000	1		1	.Gasket	.Packning	2				
	93 01 706	X		X	Plombe kit	Plomberingsatts	2			TURBO	
	93 01 722	1		1	.Wire	.Tråd	2			1)	
	93 50 505	1		1	.Retaining ring	.Spärryttare	2			1)	
	93 01 714	1		1	.Plombe	.Plomb	2			1)	

1. Not as a separate spare part

Complete sets		Sater		Date		Illustration		Group		Page	
Engine		Motor		Datum		Bild nr		Grupp		Sida	
				1987-10		BLANK		0		7	
Fig. Pos.	Part No Art nr	Quantity/Antal		Description		Benämning		K/S	Notes	SR Anmärkning	
		900	US								
	93 37 536	X		X	Repair kit, water pump	Reparationssats, vattenpump		3			
	83 04 271	1		1	Sealing	Tätning		3			
	83 04 255	1		1	Sealing ring	Tätningssring		5			
	80 47 722	1		1	Lock ring	Låsring		5			
	83 04 206	1		1	Bearing	Lager		5			
	93 01 771	X		X	Kit, water oil cooler, automatic transmission	Sats, vattenoljekylare, automatväxellåda		4	A		
	93 01 367	1		1	Hose	Slang		5			
	93 01 359	1		1	Hose	Slang		5			
	79 70 130	2		2	Clamp	Klamma		5			
	93 01 383	2		2	Rubber ring	Gummiring		4			
	93 01 375	2		2	Retainer	Hållare		5			
	93 03 694	2		2	Nipple	Nippel		5			
	79 22 891	2		2	Screw	Skruv		5			
	83 26 712	1		1	Seal ring	Tätningssring		3			
	93 03 702	1		1	Oil cooler	Oljekylare		4			
	93 29 707	1		1	Hose	Slang		4			
	93 01 409	1		1	Hose	Slang		4			
	93 01 532	1		1	Banjo screw	Banjoskruv		5			
	93 30 432	X		X	Kit, water oil cooler, automatic transmission	Sats, vattenoljekylare, automatväxellåda		4	A		
	93 01 367	1		1	Hose	Slang		5			
	93 01 359	1		1	Hose	Slang		5			
	79 70 130	2		2	Clamp	Klamma		5			
	93 01 383	2		2	Rubber ring	Gummiring		4			
	93 01 375	2		2	Retainer	Hållare		5			
	93 03 694	1		1	Nipple	Nippel		5			
	79 22 891	2		2	Screw	Skruv		5			
	83 26 712	1		1	Seal ring	Tätningssring		3			
	93 03 702	1		1	Oil cooler	Oljekylare		4			
	93 31 695	1		1	Oil hose	Oljeslang		4			
	93 30 499	1		1	Oil hose	Oljeslang		4			
	93 01 789	X		X	Kit, water oil cooler, engine	Sats, vattenoljekylare, motor		4			
	93 01 367	1		1	Hose	Slang		5			
	93 01 359	1		1	Hose	Slang		5			
	79 70 130	2		2	Hose clamp	Slangklamma		5			
	93 01 383	2		2	Rubber ring	Gummiring		4			
	93 01 375	2		2	Retainer	Hållare		5			
	93 03 678	2		2	Nipple	Nippel		5			
	83 14 395	2		2	Seal washer	Tätningssbricka		4			
	79 22 891	2		2	Screw	Skruv		5			
	93 03 702	1		1	Oil cooler	Oljekylare		4			
	93 01 417	1		1	Hose	Hydraulslang		4			
	93 01 425	1		1	Hose	Hydraulslang		4			
	83 14 445	1		1	Adapter	Adapter		5			
	83 14 452	1		1	Screw	Skruv		5			
	79 67 912	1		1	Seal ring	Tätningssring		2			
	93 20 268	X		X	Conversion kit, water oil cooler, from automatic transmission oil cooler into engine oil cooler	Konverteringssats, vattenoljekylare, från automatväxellådskylare till motoroljekylare		0			
	83 14 395	2		2	Gasket	Packning		4			
	93 03 678	2		2	Nipple	Nippel		5			
	79 67 912	1		1	Gasket	Packning		2			
	83 14 445	1		1	Adapter	Adapter		5			

Complete sets		Satser		Date		Illustration		Group		Page	
Engine		Motor		Datum		Bild nr		Grupp		Sida	
				1987-10		BLANK		0		8	
Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S	Notes	SR	Notes	SR	Notes	SR
		900	US								
3810	83 14 452	1	1. Adapter screw	.Adapterskruv	5						
3820	93 01 425	1	1. Hose	.Slang	4						
3830											
3840	93 01 474	X	X Kit, air oil cooler automatic transmission	Sats, luftoljekylare, automatväxellåda	4	A)					
3850											
3860											
3870	93 01 482	1	1. Oil cooler	.Oljekylare	4						
3880	93 00 864	1	1. Thermostat	.Termostat	3						
3890	93 00 914	2	2. Banjo screw	.Banjoskruv	5						
3900	83 26 712	6	6. Sealing ring	.Tättningsring	3						
3910	93 01 508	2	2. Sealing ring	.Tättningsring	5						
3920	93 01 532	2	2. Banjo screw	.Banjoskruv	5						
3930	93 01 524	2	2. Hose	.Hydraulslang	4						
3940	79 22 420	4	4. Screw	.Skruv	5						
3950											
3960	93 30 671	X	X Kit, air oil cooler automatic transmission	Sats, luftoljekylare, automatväxellåda	4	A)					
3970											
3980	93 30 663	1	1. Oil hose	.Oljeslang	4						
3990	93 30 705	1	1. Oil hose	.Oljeslang	4						
4000	93 32 438	1	1. Pipe	.Rör	5						
4010	93 30 713	1	1. Banjo screw	.Banjoskruv	5						
4020	93 30 569	1	1. Banjo screw	.Banjoskruv	5						
4030	83 26 712	6	6. Sealing ring	.Tättningsring	3						
4040	93 01 508	5	5. Sealing ring	.Tättningsring	4						
4050	93 01 532	2	2. Banjo screw	.Banjoskruv	5						
4060	93 01 482	1	1. Oil cooler	.Oljekylare	4						
4070	79 22 420	4	4. Screw	.Skruv	5						
4080	93 00 864	1	1. Thermostat	.Termostat	3						
4090	93 00 914	1	1. Banjo screw	.Banjoskruv	5						
4100											
4110	93 01 961	X	X Kit, air oil cooler, engine	Sats, luftoljekylare, motor	4	TURBO					
4120											
4130	93 01 482	1	1. Oil cooler	.Oljekylare	4						
4140	93 01 532	2	2. Banjo screw	.Banjoskruv	5						
4150	83 26 712	2	2. Sealing ring	.Tättningsring	3						
4160	93 01 516	2	2. Hose	.Hydraulslang	4						
4170	93 00 567	1	1. Adapter	.Adapter	5						
4180	79 67 912	1	1. Sealing ring	.Tättningsring	2						
4190	83 14 452	1	1. Screw	.Skruv	5						
4200	79 22 420	4	4. Screw	.Skruv	5						
4210											
4220	83 89 066	X	X Set, piston ring std.	Kolvringssats std.	3	WHOLE ENGINE					
4230	83 47 361	4	4. Compr. ring, upper	.Kompr. ring, övre	6	1)					
4240	83 47 379	4	4. Compr. ring, lower	.Kompr. ring, nedre	6	1)					
4250	83 49 771	8	8. Oil scraper	.Oljeskrapering	6	1)					
4260	83 49 789	4	4. Oil scraper	.Oljeskrapering	6	1)					
4270											
4280											
4290	83 89 447	X	X Kit, piston rings std.	Sats kolvringar std.	3						
4300	83 47 361	1	1. Compr. ring, upper	.Kompr. ring, övre	6	1)					
4310	83 47 379	1	1. Compr. ring, lower	.Kompr. ring, nedre	6	1)					
4320	83 49 771	2	2. Oil scraper	.Oljeskrapering	6	1)					
4330	83 49 789	1	1. Oil scraper	.Oljeskrapering	6	1)					
4340											
4350	83 89 454	X	Kit, piston rings oversize 0.50 mm	Sats kolvringar öd 0,50 mm	3	C, T					
4360											
4370	83 51 926	1	1. Compr. ring, upper oversize 0.50mm	.Kompr. ring, övre ÖD 0,50mm	6	1)					
4380	83 51 942	1	1. Compr. ring, lower oversize 0.50mm	.Kompr. ring, nedre ÖD 0,50mm	6	1)					
4390											
4400											

1. Not as a separate spare part

Complete sets		Satser		Date		Illustration		Group		Page	
Engine		Motor		Datum		Bild nr		Grupp		Sida	
				1987-10		BLANK		0		9	
Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S	Notes	SR	Notes	SR	Notes	SR
		900	US								
	83 52 056	1	.Kit, oil scraper assy oversize 0.50mm.	.Sats, oljeskrapering kpl. ÖD. 0.50mm.	0	1)					
	83 39 637	X	X Kit, piston rings oversize 0.50 mm	Sats kolvringar ÖD 0,50 mm	1	TA					
	83 64 440	1	1. Compr. ring, upper oversize 0.50 mm	.Kompr. ring, övre ÖD 0,50 mm	1)						
	83 64 481	1	1. Compr. ring, lower oversize 0.50 mm	.Kompr. ring, nedre ÖD 0,50 mm	1)						
	83 52 056	1	1. Kit, oil scraper assy oversize 0.50 mm	.Sats, oljeskrapering kpl. ÖD 0,50 mm	1)						
	83 89 462	X	Kit, piston rings oversize 1.0 mm	Sats kolvringar ÖD 1,0 mm	3	C, T					
	83 51 934	1	1. Compr. ring, upper oversize 1.0 mm	.Kompr. ring övre ÖD 1,0 mm	6	1)					
	83 51 959	1	1. Compr. ring, lower oversize 1.0 mm	.Kompr. ring, nedre ÖD 1,0 mm	6	1)					
	83 52 064	1	1. Kit, oil scraper assy oversize 1.0 mm	.Sats, oljeskrapering kpl. ÖD 1,0 mm	0	1)					
	83 89 645	X	X Kit, piston rings oversize 1.0 mm	Sats kolvringar ÖD 1,0 mm	1	TA					
	83 64 457	1	1. Compr. ring, upper oversize 1.0 mm	.Kompr. ring, övre ÖD 1,0 mm	1)						
	83 64 499	1	1. Compr. ring, lower oversize 1.0 mm	.Kompr. ring, nedre ÖD 1,0 mm	1)						
	83 52 064	1	1. Kit, oil scraper assy oversize 1.0 mm	.Sats, oljeskrapering kpl. ÖD 1,0 mm	1)						
	93 20 003	X	X Kit, piston rings std.	Kolvringssats std.	3	TURBO WHOLE ENGINE					
	83 55 992	4	4. Compr. ring, upper	.Kompr. ring, övre	6	1)					
	83 47 379	4	4. Compr. ring, lower	.Kompr. ring, nedre	6	1)					
	83 49 771	8	8. Oil scraper	.Oljeskrapering	6	1)					
	83 49 789	4	4. Oil scraper	.Oljeskrapering	6	1)					
	83 89 900	X	X Kit, piston rings std.	Kolvringssats std.	3	TURBO					
	83 55 992	1	1. Compr. ring, upper	.Kompr. ring, övre	6	1)					
	83 47 379	1	1. Compr. ring, lower	.Kompr. ring, nedre	6	1)					
	83 49 771	2	2. Oil scraper	.Oljeskrapering	6	1)					
	83 49 789	1	1. Oil scraper	.Oljeskrapering	6	1)					
	83 89 918	X	X Kit, piston rings, oversize 0.50 mm.	Kolvringssats, ÖD. 0.50 mm.	3	TURBO					
	83 56 008	1	1. Compr. ring, upper	.Kompr. ring, övre	6	1)					
	83 51 942	1	1. Compr. ring, lower	.Kompr. ring, nedre	6	1)					
	83 52 066	1	1. Kit, oil scraper	.Sats, oljeskrapering	0	1)					
	83 89 926	X	X Set, piston rings, oversize 1.0 mm.	Kolvringssats, ÖD 1,0 mm.	3	TURBO					
	83 56 016	1	1. Compr. ring, upper	.Kompr. ring, övre	6	1)					
	83 51 959	1	1. Compr. ring, lower	.Kompr. ring, nedre	6	1)					
	83 52 064	1	1. Kit, oil scraper	.Sats, oljeskrapering	0	1)					
	83 89 512	X	X Kit, thermostat 89 degrees C.	Sats, termostat, 89 grader C.	1						
	83 62 352	1	1. Thermostat 89 degrees C.	.Termostat 89 grader C.	6	1)					
	83 52 692	1	1. Gasket	.Packingning	2						

1. Not as a separate spare part

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02
0 GROUP INDEX		
Engine	1-F09	
Electrical system, instruments	1-F12	
Transmission	1-F13	
Brakes	1-F19	
Front wheel suspension, steering device	1-F21	
Suspension system, wheels	1-F23	
Car body	1-G01	

Complete sets				Sats		Date		Illustration		Group		Page	
Engine				Motor		Datum		Bild nr		Grupp		Sida	
						1987-10		BLANK		0		10	
Fig. Pos.	Part No Art nr	Quantity/ Antal			Description	Benämning	K/S	Notes	S	R	Anmärkning	L	
		900		US									
	93 20 284	X			X Kit, thermostat, 52 degrees C	Sats, termostat 52 grader C	2	COLD MARKETS, NOT TURBO					
	93 16 662	1			1. Thermostat, 52 degrees C	1. Termostat 52 grader C	2	1)					
	83 52 692	1			1. Gasket	1. Packning	2						
	93 37 551	X			X Kit, thermostat, 82 degrees C	Sats, termostat, 82 grader C	2	1980- TURBO FOR EU					
	75 02 297	1			1. Thermostat 82 degrees C	1. Termostat 82 grader C	2	1)					
	83 52 692	1			1. Gasket	1. Packning	2						
	88 17 579	X			X Mounting kit, radiator	Monteringsatts, kylare	4	C, T, I					
	75 13 724	2			2. Rubber bushing	2. Gummibussning	4						
	75 13 716	2			2. Tubular spacer	2. Distansrör	4						
	79 75 436	2			2. Screw	2. Skruv	5						
	79 75 469	2			2. Washer	2. Bricka	5						
	75 41 857	1			1. Sealing strip	1. Tätningsslist	5						
	75 43 911	3			3. Clamp	3. Klamma	5						
	79 71 658	2			2. Nut	2. Mutter	5						
		1			1. Mounting instruction	1. Monteringsanvisning		75/661173					
	93 37 544	X			X Service package	Servicepaket	1	(93 20 417)					
	93 09 576	1			1. Oil filter	1. Oljefilter	1						
	93 59 597	1			1. Contact set	1. Kontaktsats	1	(63 55 919)					
	78 72 443	1			1. Grease	1. Fett	1						
	87 18 439	1			1. Gasket	1. Packning	4						
	83 50 076	4			4. Spark plug	4. Tändstift	4	40/236 160 008					
		1			1. Mounting instruction	1. Monteringsanvisning		75/661181					
	88 17 306	X			X Service package	Servicepaket	1	TURBO					
	93 09 576	1			1. Oil filter	1. Oljefilter	1						
	87 18 439	1			1. Gasket	1. Packning	4						
	93 13 057	4			4. Spark plug	4. Tändstift	4	40/236 161 006					
	93 31 780	X			X Kit, engine bracket	Sats, motorfäste	4	AC					
	93 16 126	1			1. Bracket	1. Fäste	4						
	93 16 118	1			1. Console	1. Konsol	4						
	80 74 106	2			2. Nut	2. Mutter	5						
	79 65 569	1			1. Screw	1. Skruv	5						
	80 84 014	1			1. Screw	1. Skruv	5						
	80 29 985	1			1. Washer	1. Bricka	5						

1. Not as a separate spare part

Complete sets		Sats		Date		Illustration		Group		Page	
Electrical system		Elektriskt system		Datum		Bild nr		Grupp		Sida	
				1987-10		BLANK		0		11	
Fig. Pos.	Part no Art nr	Quantity/Amount		Description	Benämning	K/S	Notes				
		900	US			S/R	Anmärkning				
						L					
	93 37 338	X	X	Set, ignition cables	Sats, tändkablar						
	93 25 465	1		1. Ignition cable, distributor-coil	1. Tändkabel, fördelare-spole		3				
	83 69 845	2		2. Ignition cable, cyl 1 and 2	2. Tändkabel, cyl 1 och 2		3				
	83 69 852	2		2. Ignition cable, cyl 3 and 4	2. Tändkabel, cyl 3 och 4		3				
	85 47 499	X	X	Kit, wiper blade	Sats, torkarblad		6	WINDSHIELD WIPER			
	85 57 490	2		2. Wiper blade	Torkarblad		1				
	85 46 319	X	X	Set, rubber profile	Sats, gummiprofil						
	85 53 844	2		2. Rubber profile	Gummiprofil						
	85 46 327	X		Set, wiper blade	Sats, torkarblad			HEADLIGHT WIPERS			
	85 52 119	2		2. Wiper blade	Torkarblad						
	93 20 250	X	X	Kit, retainer spring and screw	Sats, hållfjädrar och skruvar		5	TURBO			
	93 05 038	1		1. Retainer spring	1. Hållfjäder		6				
	93 09 956	1		1. Retainer spring	1. Hållfjäder		6				
	93 05 045	3		3. Screw	3. Skruv		5				
	93 05 053	1		1. Screw	1. Skruv		5				
	78 74 209	X	X	Repair kit, distributor	Reparationssats, tändfördelare		5	1978-1980			
	93 09 915	1		1. Cable terminal	1. Kabelanslutning		6				
	93 05 111	1		1. Lock yoke	1. Låsbygel		6				
	93 05 137	1		1. Seal	1. Packning		6				
	93 05 053	1		1. Screw	1. Skruv		5				
	83 55 919	X		Contact set, distributor	Kontaktsats, fördelare		1	BOSCH			
	85 50 097	X		Brush set, alternator	Borstsats, generator		3				
	85 52 432	X	X	Brush set, alternator	Borstsats, generator		4				
	93 20 789	X	X	Brush set, starter	Borstsats, startmotor						
	85 46 202	X	X	Kit, door switch	Sats, dörrkontakt		3				
	95 77 793	1		1. Door switch	1. Dörrkontakt		3				
	85 68 883	1		1. Cover	1. Skydd		4				
	79 21 885	1		1. Screw	1. Skruv		5				
	85 79 989	1		1. Cable	1. Kabel						
	83 89 942	X	X	Set of washers, starter	Bricksats, startmotor		6	1984			
	93 23 924	1		1. Set of washers	Bricksats						
	83 89 959	1		1. Gasket set	Packningssets						
	85 47 606	X	X	Kit, dome light	Sats, taklampa		4	7)			
	79 22 636	1		1. Screw	1. Skruv		5				
	85 41 229	1		1. Insulation	1. Isolering		5				
	85 47 580	1		1. Dome light	Taklampa		4				
	95 67 215	1		1. Cable network	Ledningsnät		5				

7. For cars with centre mounted dome light

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

0 GROUP INDEX

Engine	1-F03
Electrical system, instruments	1-F12
Transmission	1-F13
Brakes	1-F19
Front wheel suspension, steering device	1-F21
Suspension system, wheels	1-F23
Car body	1-G01

Complete sets		Sätsar		Date	Illustration	Group	Page
Transmission		Kraftöverföring		Datum	Bild nr	Grupp	Sida
				1987-10	BLANK	0	12

Fig. Pos.	Part No Art nr	Quantity/Åntal		Description	Benämning	K/S	Notes
		900	US			S/R	Anmärkning
0020	89 93 156	X		X Repair kit, master cyl. clutch	Reparationsats, huvudcyl. koppling	1	5), (8910341)
0040	89 03 304	1		1 .Gasket	.Packning	5	
0060	89 30 034	1		1 .Gasket	.Packning	5	
0080	73 13 182	1		1 .Washer	.Bricka	5	
0100	73 13 240	1		1 .Seal bellows	.Tätningståg	6	
0120	89 93 156	X		X Repair kit, master cyl. clutch	Reparationsats, huvudcyl. koppling	1	5)
0140	89 03 304	1		1 .Gasket	.Packning	5	PART OF 89 35 363
0160	89 45 248	1		1 .Gasket	.Packning	5	PART OF 89 44 977
0180	73 13 182	1		1 .Washer	.Bricka	5	PART OF 89 35 363
0200	89 45 255	1		1 .Washer	.Bricka	5	PART OF 89 44 977
0220	89 46 789	1		1 .Gasket	.Packning	5	
0240	73 13 240	1		1 .Seal bellows	.Tätningståg	6	
0260	89 93 073	X		X Kit, rubber bellows, inner universal joint	Gummibälgsats, inner knut	3	
0280	89 41 270	1		1 .Rubber bellows	.Gummibalg	3	
0300	79 70 163	1		1 .Hose clamp	.Slangklämma	5	
0320	70 46 465	1		1 .Strap	.Bandjäm	5	
0340	70 48 473	1		1 .Clamp	.Klamma	3	
0360	89 93 065	X		X Rubber bellows, outer universal joint assy.	Gummibalg, yttre drivknut kpl	2	(8993065)
0380	89 42 323	1		1 .Rubber bellows	.Gummibalg	6	1)
0400	71 67 117	2		2 .Strap	.Bandjäm	3	
0420	70 48 473	2		2 .Clamp	.Klamma	3	
0440	83 80 314	X		X Clutch disk lining set with rivets	Lamellbeläggsats kpl. med nit	0	
0460	83 07 488	2		2 .Clutch disk lining	.Lamellbelägg	5	1)
0480	83 00 89	20		20 .Rivet	.Nit	5	
0500	87 70 833	X		X Kit, sealing slave cylinder	Tätningssats, slavcylinder	3	1979
0520	87 11 235	1		1 .O-ring	.O-ring	3	
0540	87 11 079	1		1 .O-ring	.O-ring	2	
0560	87 11 806	1		1 .O-ring	.O-ring	2	
0580	87 11 855	1		1 .Rubber sealing	.Gummitätning	3	
0600	87 81 007	X		X Kit, sealing slave cylinder	Tätningssats, slavcylinder	1	1980
0620	87 11 285	1		1 .O-ring	.O-ring	3	
0640	87 11 079	1		1 .O-ring	.O-ring	2	
0660	87 11 806	1		1 .O-ring	.O-ring	2	
0680	87 11 855	1		1 .Rubber sealing	.Gummitätning	3	
0700	87 14 412	1		1 .Sealing sleeve	.Tätningshylsa	2	
0720	87 14 420	1		1 .Lock ring	.Låsring	5	
0740	86 11 262	X		X Repair kit, clutch	Rep. sats, koppling	2	
0760	87 11 881	1		1 .Seal ring	.Tätningssring	2	
0780	83 41 507	1		1 .O-ring	.O-ring	3	
0800	87 14 777	1		1 .Lock ring	.Låsring	5	
0820	87 11 285	1		1 .O-ring	.O-ring	3	
0840	87 11 079	1		1 .O-ring	.O-ring	2	
0860	87 11 806	1		1 .O-ring	.O-ring	2	
0880	87 11 855	1		1 .Rubber seal	.Gummitätning	3	
0900	87 14 412	1		1 .Sealing	.Tätning	3	
0920	87 14 420	1		1 .Lock ring	.Låsring	5	

1. Not as a separate spare part
5. Ch 90801027399 - 9080209098
6. Ch 90801027400 - 9080208100

Complete sets		Sätsar		Date	Illustration	Group	Page
Transmission		Kraftöverföring		Datum	Bild nr	Grupp	Sida
				1987-10	BLANK	0	13

Fig. Pos.	Part No Art nr	Quantity/Åntal		Description	Benämning	K/S	Notes
		900	US			S/R	Anmärkning
	87 13 216	1		1 .Gasket	.Packning	4	
	93 20 185	X		X Reconditioning kit, clutch	Renoveringsats, koppling	2	4-SPEED
	87 04 116	1		1 .Pressure plate	.Tryckskena	2	
	83 07 498	1		1 .Clutch disk	.Lamell	2	
	87 10 725	1		1 .Sealing ring	.Tätningssring	2	
	87 04 728	1		1 .Clutch bearing	.Kopplingslager	2	
	87 11 285	1		1 .O-ring	.O-ring	3	
	87 11 855	1		1 .Rubber seal	.Gummitätning	3	
	87 11 806	1		1 .O-ring	.O-ring	2	
	87 11 079	1		1 .O-ring	.O-ring	2	
	83 40 507	1		1 .O-ring	.O-ring	2	
	83 43 832	1		1 .Lock ring	.Låsring	5	
	87 10 881	1		1 .Seal	.Tätning	2	
	87 04 777	1		1 .Lock ring	.Låsring	5	
	93 21 340	X		X Reconditioning kit, clutch	Renoveringsats, koppling	2	5-SPEED
	87 04 116	1		1 .Pressure plate	.Tryckskena	2	
	87 15 252	1		1 .Clutch disk	.Lamell	2	
	87 10 881	1		1 .Sealing ring	.Tätningssring	2	
	87 04 728	1		1 .Clutch bearing	.Kopplingslager	2	
	87 81 007	1		1 .Kit, sealing slave cyl	.Tätningssats, slavcyl	1	
	92 21 357	X		X Reconditioning kit, clutch	Renoveringsats, koppling	2	TURBO 4-SPEED
	87 12 036	1		1 .Pressure plate	.Tryckskena	2	
	87 12 044	1		1 .Clutch disk	.Lamell	2	
	87 10 881	1		1 .Sealing ring	.Tätningssring	2	
	87 04 728	1		1 .Clutch bearing	.Kopplingslager	2	
	87 81 007	1		1 .Kit, sealing slave cyl	.Tätningssats, slavcyl	1	
	93 21 365	X		X Reconditioning kit, clutch	Renoveringsats, koppling	2	TURBO 5-SPEED, 1980-
	87 12 036	1		1 .Pressure plate	.Tryckskena	2	
	87 15 260	1		1 .Clutch disk	.Lamell	2	
	87 10 881	1		1 .Sealing ring	.Tätningssring	2	
	87 04 728	1		1 .Clutch bearing	.Kopplingslager	2	
	87 81 007	1		1 .Kit, sealing slave cyl	.Tätningssats, slavcyl	1	
	88 18 080	X		X Kit, clutch	Sats, koppling	4	4-SPEED
	87 04 116	1		1 .Pressure plate	.Tryckskena	2	
	83 07 498	1		1 .Clutch disc	.Lamell	2	
	88 18 106	X		X Kit, clutch	Sats, koppling	4	4-SPEED TURBO, NOT SW
	87 12 036	1		1 .Pressure plate	.Tryckskena	2	
	87 12 044	1		1 .Clutch disc	.Lamell	2	
	87 61 221	X		X Kit, clutch	Sats, koppling	4	4-SPEED TURBO, SW
	87 24 841	1		1 .Pressure plate	.Tryckskena	2	
	87 26 713	1		1 .Clutch disc	.Lamell	2	
	88 18 114	X		X Kit, clutch	Sats, koppling	5	5-SPEED TURBO
	87 12 036	1		1 .Pressure plate	.Tryckskena	2	
	87 15 260	1		1 .Clutch disc	.Lamell	2	
	87 81 031	X		X Synchronizing kit	Synkroniseringsats	5	1978-1993 GEARBOX NUMBERS -480052 -523813 -180480
	87 20 468	1		1 .Gear, 2nd	.Kugghjul, 2 an	4	
	87 20 476	1		1 .Gear, 3rd	.Kugghjul, 3 an	4	
	87 20 419	2		2 .Synchronizing muff	.Synkroniseringsmuff	5	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-302
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

0 GROUP INDEX

Engine	1-F03
Electrical system, instruments	1-F-2
Transmission	1-F13
Brakes	1-F19
Front wheel suspension, steering device	1-F21
Suspension system, wheels	1-F23
Car body	1-G0

Complete sets		Sats		Date	Illustration	Group	Page
Transmission		Kraftöverföring		Datum	Bild nr	Grupp	Sida
				1987-10	BLANK	0	14
Fig. Pos.	Part No Art nr	Quantity/Anst	Description	Benämning	K/S	Notes	
		900	US			SR	Anmärkning
1230	87 19 924	2	2. Synchronizing ring	.Synkroniseringsring	3		
1240	87 04 108	1	1. Nut	.Mutter	5	4-SPEED	
1250	87 18 371	1	1. Nut	.Mutter	5	5-SPEED	
1260	87 12 770	1	1. Nut	.Mutter	5	5-SPEED	
1270	87 13 216	1	1. Gasket	.Packning	4		
1280	87 12 903	1	1. Gasket	.Packning	3		
1290	87 18 785	1	1. Gasket	.Packning	3		
1300	87 15 393	1	1. Gasket	.Packning	3		
1310	87 12 986	1	1. Gasket	.Packning	4	5-SPEED	
1320	87 03 001	1	1. Gasket	.Packning	3		
1330							
1340	87 80 645	X	X Kit, o-ring and seal- ing, automatic gear box	Sats, o-ring och tät- ningar, automatväxel- låda	3		
1350							
1360							
1370	87 06 129	2	2. O-ring	.O-ring	2		
1380	87 06 327	1	1. O-ring	.O-ring	2		
1390	87 05 808	1	1. O-ring	.O-ring	2		
1400	87 05 816	1	1. O-ring	.O-ring	2		
1410	87 06 725	1	1. O-ring	.O-ring	2		
1420	87 05 733	1	1. O-ring	.O-ring	2		
1430	87 07 382	1	1. O-ring	.O-ring	2		
1440	83 42 701	2	2. O-ring	.O-ring	2		
1450	83 25 144	2	2. O-ring	.O-ring	2		
1460	83 25 151	1	1. O-ring	.O-ring	2		
1470	87 09 510	1	1. O-ring	.O-ring	2		
1480	87 06 111	1	1. O-ring	.O-ring	2		
1490	87 11 707	1	1. O-ring	.O-ring	2		
1500	87 06 616	1	1. Seal ring	.Tättningsring	3		
1510	87 06 335	1	1. Seal ring	.Tättningsring	3		
1520	87 07 176	1	1. Seal ring	.Tättningsring	2		
1530	93 46 602	1	1. Seal ring	.Tättningsring	3		
1540	87 06 764	2	2. Seal ring	.Tättningsring	3		
1550	93 61 551	2	2. Seal ring	.Tättningsring	3		
1560	87 08 638	2	2. Seal ring	.Tättningsring	3		
1570	83 25 136	1	1. Seal ring	.Tättningsring	2		
1580	93 35 696	1	1. Seal ring	.Tättningsring	2		
1590	87 04 238	2	2. Seal ring	.Tättningsring	2		
1600	87 06 707	6	6. Seal ring	.Tättningsring	2		
1610	83 88 191	2	2. Seal ring	.Tättningsring	2		
1620	87 06 893	1	1. Rubber washer	.Gummilämsning	5		
1630	87 07 580	1	1. Lock washer	.Låsbricka	5		
1640	87 06 855	2	2. Lock washer	.Låsbricka	5		
1650							
1660	87 80 652	X	X Kit, shim, automatic gear box	Sats, shim, automat- växellåda	4		
1670							
1680	87 80 660	1	1. Box	.Låda	4		
1690	87 08 729	6	6. Shim	.Shim	4		
1700	87 08 703	6	6. Shim	.Shim	4		
1710	87 07 317	6	6. Shim	.Shim	4		
1720	87 07 325	6	6. Shim	.Shim	5		
1730	87 07 323	6	6. Shim	.Shim	5		
1740	87 07 461	6	6. Shim	.Shim	5		
1750	87 07 499	6	6. Shim	.Shim	5		
1760	87 07 507	6	6. Shim	.Shim	5		
1770	83 41 604	6	6. Shim	.Shim	5		
1780	83 41 612	6	6. Shim	.Shim	5		
1790	83 41 620	6	6. Shim	.Shim	5		
1800	83 41 638	6	6. Shim	.Shim	5		
1810	87 09 354	6	6. Shim	.Shim	5		
1820	87 09 362	6	6. Shim	.Shim	5		
1830	87 09 370	6	6. Shim	.Shim	5		
1840	87 08 703	6	6. Shim	.Shim	4		

Complete sets		Sats		Date	Illustration	Group	Page
Transmission		Kraftöverföring		Datum	Bild nr	Grupp	Sida
				1987-10	BLANK	0	15
Fig. Pos.	Part No Art nr	Quantity/Anst	Description	Benämning	K/S	Notes	
		900	US			SR	Anmärkning
	75 43 051	6	6 Front clutch plate kit, automatic gear box	Lamellisats främre, automatväxellåda	2	(8780066)	
	87 06 378	1	1. Thrust washer	.Tryckplatta	1)		
	87 06 384	4	4. Clutch plate, inner	.Lamell, inre	1)	ALTERNATIVE	
	87 06 392	4	4. Clutch plate, inner	.Lamell, inre	1)	ALTERNATIVE	
	87 06 400	4	4. Clutch plate, inner	.Lamell, inre	1)	ALTERNATIVE	
	87 06 413	3	3. Clutch plate, outer	.Lamell, yttre	1)	ALTERNATIVE	
	87 06 428	3	3. Clutch plate, outer	.Lamell, yttre	1)	ALTERNATIVE	
	87 06 327	1	1. O-ring	.O-ring	2		
	87 06 335	1	1. Seal ring	.Tättningsring	3		
	93 03 751	1	1. Spring	.Fjäder	5		
	87 06 388	1	1. Lock ring	.Låsring	5		
	93 03 710	X	X Front clutch plate kit, automatic gear box	Lamellisats främre, automatväxellåda	2		
	87 06 378	1	1. Thrust washer	.Tryckplatta	1)		
	87 06 384	4	4. Clutch plate, inner	.Lamell, inre	1)	ALTERNATIVE	
	87 06 392	4	4. Clutch plate, inner	.Lamell, inre	1)	ALTERNATIVE	
	87 06 400	4	4. Clutch plate, inner	.Lamell, inre	1)	ALTERNATIVE	
	83 88 472	4	4. Clutch plate, inner	.Lamell, inre	1)	ALTERNATIVE	
	93 44 235	4	4. Clutch plate, inner	.Lamell, inre	1)	ALTERNATIVE	
	87 06 418	3	3. Clutch plate, outer	.Lamell, yttre	1)	ALTERNATIVE	
	87 06 428	3	3. Clutch plate, outer	.Lamell, yttre	1)	ALTERNATIVE	
	93 44 094	3	3. Clutch plate, outer	.Lamell, yttre	1)	ALTERNATIVE	
	87 06 327	1	1. O-ring	.O-ring	2		
	87 06 335	1	1. Seal ring	.Tättningsring	3		
	93 03 751	1	1. Spring	.Fjäder	5		
	87 06 491	1	1. Lock ring	.Låsring	5		
	87 80 058	X	X Thrust washer kit, automatic gear box	Tryckbrickasats, auto- matväxellåda	5		
	87 06 442	1	1. Thrust washer	.Tryckbricka	5	ALTERNATIVE	
	87 06 715	1	1. Thrust washer	.Tryckbricka	5	ALTERNATIVE	
	87 06 723	1	1. Thrust washer	.Tryckbricka	5	ALTERNATIVE	
	87 06 731	1	1. Thrust washer	.Tryckbricka	5		
	87 05 798	2	2. Needle thrust bearing	.Axialnållager	5		
	87 07 069	1	1. Plate, needle bearing	.Nållagerbricka	5		
	87 07 485	3	3. Needle thrust bearing	.Axialnållager	5		
	87 08 703	3	3. Shim	.Shim	4		
	87 80 124	X	X Spring set, valve bodies automatic gear box	Fjädersats, ventilhus automatväxellåda	6		
	87 07 648	1	1. Spring	.Fjäder	6	ALTERNATIVE	
	87 07 655	1	1. Spring	.Fjäder	6	ALTERNATIVE	
	87 07 671	1	1. Spring	.Fjäder	6	ALTERNATIVE	
	87 07 721	1	1. Spring	.Fjäder	6	ALTERNATIVE	
	87 07 739	1	1. Spring	.Fjäder	6	ALTERNATIVE	
	87 07 754	1	1. Spring	.Fjäder	6	ALTERNATIVE	
	87 07 762	1	1. Spring	.Fjäder	6	ALTERNATIVE	
	87 07 788	2	2. Spring	.Fjäder	6	ALTERNATIVE	
	87 07 829	1	1. Spring	.Fjäder	6	ALTERNATIVE	
	87 07 952	1	1. Spring	.Fjäder	6		
	87 80 637	X	X Gasket kit, automatic gear box	Packningsats, auto- matväxellåda	2		
	75 14 946	1	1. Gasket	.Packning	4		
	87 08 406	1	1. Gasket	.Packning	3		
	87 08 455	1	1. Gasket	.Packning	3		
	87 08 471	1	1. Gasket	.Packning	3		

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	2-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

0 GROUP INDEX

Engine	1-F03
Electrical system, instruments	1-F12
Transmission	1-F13
Brakes	1-F19
Front wheel suspension, steering device	1-F21
Suspension system, wheels	1-F23
Car body	1-G01

Complete sets Transmission		Satser Kraftöverföring		Date Datum	Illustration Bild nr	Group Grupp	Page Sida
				1987-10	BLANK	0	16
Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S S/R	Notes Anmärkning	
		900					
		US					
2490	87 08 968	1	1 Gasket	1 Packing	2		
2490	87 08 430	1	1 Gasket	1 Packing	3		
2500	87 05 885	1	1 Gasket	1 Packing	3		
2510	87 18 439	1	1 Gasket	1 Packing	4		
2520	87 05 204	1	1 Seal washer	1 Tättningsbricka	3		
2530	87 08 398	1	1 Washer	1 Bricka	4		
2540	88 49 614	1	1 Gasket	1 Packing			
2550	87 03 464	1	1 Gasket	1 Packing			
2560	93 45 984	X	X Kit, outer race, automatic gear box	Sats, yttre frihjulsbroms, automatväxellåda	6	(8705212)	
2680							
2700							
2710	87 05 162	1	1 Race	1 Frihjulsbana	1)		
2720	87 05 170	1	1 Locking wire	1 Låstråd	5		
2730							
2740	87 09 545	X	X Kit, planetary gear, automatic gear box	Sats, planetväxel, automatväxellåda	6		
2750							
2760	87 09 339	1	1 Forward sun	1 Solhjul	6		
2770	87 09 206	1	1 Planetary	1 Planetväxel	6		
2780	87 09 347	1	1 Needle thrust bearing	1 Axialnållager	5		
2790	87 07 069	1	1 Plate needle bearing	1 Nållagerbricka	5		
2800							
2810	93 20 193	X	X Kit, cog wheel gear lever lock	Sats, kugghjul växel-spaklås	3	1979	
2820							
2830	83 25 797	1	1 Cog wheel	1 Kugghjul	1)		
2840	93 30 440	1	1 Gear	1 Drev	6		
2850	83 25 805	1	1 Lock arm	1 Låstunga	1)		
2860	83 25 789	1	1 Pin	1 Tapp	1)		
2870	83 25 797	1	1 Pin	1 Tapp	1)		
2880	83 75 974	1	1 Spring	1 Fjäder			
2890	79 51 353	1	1 Lockring	1 Låsring			
2900							
2910	93 20 987	X	X Kit, cog wheel gear lever lock	Sats, kugghjul växel-spaklås	3	1980-	
2920							
2930	83 25 797	1	1 Cog wheel	1 Kugghjul	1)		
2940	93 30 440	1	1 Gear	1 Drev	6		
2950	75 48 910	1	1 Lock arm	1 Låstunga	3		
2960	93 42 734	1	1 Pin	1 Tapp	1)		
2970	83 78 275	1	1 Pin	1 Tapp	0		
2980	83 75 974	1	1 Spring	1 Fjäder			
2990	79 51 353	1	1 Lockring	1 Låsring			
3000							
3010	93 20 288		Converting kit, transmission cooling into engine cooling(water)	Konverteringssats, växelåldskyl till motoroljekyl (vatten)	0		
3020							
3030							
3040	93 01 425	1	1 Hydraulic hose	1 Hydraulslang	4		
3050	83 14 395	2	2 Gasket	2 Packning	4		
3060	93 03 678	2	2 Nipple	2 Nippel	5		
3070	79 67 912	1	1 Gasket	1 Packning	5		
3080	83 14 445	1	1 Adapter	1 Adapter	5		
3090	83 14 452	1	1 Adapter screw	1 Adapter skruv	5		
3100							
3110	93 01 771	X	X Kit, water oil cooler	Vattenoljekylare	4		
3120	93 01 367	1	1 Hose	1 Slang	5		
3130	93 01 359	1	1 Hose	1 Slang	5		
3140	79 10 130	2	2 Hose clamp	2 Slangklämma	5		
3150	93 11 383	2	2 Rubber	2 Gummi	4		
3160	93 11 375	2	2 Holder	2 Hållare	5		
3170	83 13 694	1	1 Nipple	1 Nippel	5		
3180	75 22 891	2	2 Screw	2 Skruv	5		
3190	93 01 490	3	3 Sealing	3 Tätning	3		
3200	93 03 702	1	1 Oil cooler	1 Oljekylare	4		

Complete sets Transmission		Satser Kraftöverföring		Date Datum	Illustration Bild nr	Group Grupp	Page Sida
				1987-10	BLANK	0	17
Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S S/R	Notes Anmärkning	
		900					
		US					
	93 29 707	1	1 Hose	1 Slang	4		
	93 01 409	1	1 Hose	1 Slang	4		
	93 01 532	1	1 Banjo screw	1 Banjoskruv	5		
	87 80 454	X	BEARING KIT FOR MANUAL GEAR BOX	LAGERSATS FÖR MANUELL VÄXELLÅDA	5		
	87 03 530	1	1 Tension sleeve	1 Spännhyssa	4		
	07 02 359	1	1 Nut	1 Mutter	3		
	87 24 890		1 Bearing + race	1 Lager + bans			

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

0 GROUP INDEX

Engine	1-F03
Electrical system, instruments	1-F12
Transmission	1-F19
Brakes	1-F19
Front wheel suspension, steering device	1-F21
Suspension system, wheels	1-F23
Car body	1-G01

Complete sets		Satsar		Date		Illustration		Group		Page	
Brakes		Bromsar		Datum		Bild nr		Grupp		Sida	
1987-10		BLANK		0		18					
Fig. Pos.	Part No Art nr	Quantity/Antal		Description		Benämning		K/S Notes		S/R Anmärkning	
		900	US								
0620	89 94 998	X		X Brake pad set, front		Bromsklotssats, fram		1 3)			
0940	89 39 894	2		2 Brake pad		.Bromsklots		6 1)			
0960	89 93 107	X		X Brake pad set, front		Bromsklotssats, fram		1 4)			
1000	89 41 916	2		2 Brake pad		.Bromsklots		6 1)			
1020											
1280	89 94 832	X		X Brake pad set, rear		Bromsklotssats, bak		1			
1300	89 32 287	4		4 Brake pad		.Bromsklots		1 1)			
1320											
1340	89 94 709	X		X Set, retaining spring		Sats, hållfjäder,					
1360						rear					
1380	89 08 543	2		2 Retaining spring		.Hållfjäder		1)			
1400											
1420	89 94 626	X		X Set, lock pin		Sats, låspinne					
1440	89 08 766	4		4 Lock pin		.Låspinne		1)			
1460											
1480	78 74 548	X		X Set, holder brake		Sats, hållare broms-		(78 73 698)			
1500						pads, front					
1520	89 30 448	2		2 Damper plate		.Dämpplåt		2			
1540	89 25 067	2		2 Clip		.Clip		5			
1560	89 90 194	2		2 U-pin		.U-pinne		1			
1580	89 30 463	2		2 Spring		.Fjäder		2			
2180											
2180	89 94 972	X		X Kit, sealing main		Sats, tätning		2			
2200						cylinder					
2220	89 28 251	2		2 Seal ring		.Tätningring		2 1)			
2240	89 28 228	2		2 Seal ring		.Tätningring		4 1)			
2260	89 28 236	2		2 Support washer		.Stödbricka		3 1)			
2280	89 28 210	2		2 Support ring		.Stödtring					
2300	89 28 376	1		1 Lock ring		.Låsring					
2320	89 28 434	1		1 Stop pin		.Stoppinne		4			
2340	89 28 426	2		2 Gasket		.Packning		4			
2480											
2500	89 94 519	X		X Kit, sealing front		Sats, tätningar		2			
2520						brake					
2540	89 25 547	2		2 Seal retainer		.Tätningshållare		2 1)			
2560	89 85 533	2		2 Main seal		.Huvudtätning		4 1)			
2580	89 25 539	2		2 Seal, piston		.Tätning kolv		3 1)			
2680	89 25 562	1		1 Seal, push rod		.Tätning tryckstång		3 1)			
2720											
2740	89 94 840	X		X Kit, sealing rear		Sats, tätningar		4			
2760						brake					
2780	89 32 246	2		2 Seal ring		.Tätningring		1)			
2800	89 32 279	2		2 Main seal		.Huvudtätning		1)			
2820	89 08 527	2		2 Seal retainer		.Tätningshållare		1)			
2840											
2860	89 94 535	X		X Set, sealing		Sats, tätningar,		2			
2880						hand brake					
2900	89 25 828	2		2 Seal		.Tätning		2			
2920	89 25 869	2		2 Seal		.Tätning		2 1)			
2940	89 25 851	2		2 Seal		.Tätning		2 1)			
2960											
2980	89 10 705	X		X Repair kit, power		Reparationssats,		2			
3000						brake					
3020	89 29 010	1		1 Seal		.Tätning		6			
3040	89 28 996	1		1 Air filter		.Luftfilter		1)			
3060	89 29 002	1		1 Muffler		.Ljuddämpare		1)			
3080	89 28 541	1		1 Rubber bellows		.Gummibälga		6 1)			

- Not as a separate spare part
- To be fitted to the outer side of the brake disc
- To be fitted to the inner side of the brake disc

Complete sets		Satsar		Date		Illustration		Group		Page	
Brakes		Bromsar		Datum		Bild nr		Grupp		Sida	
1987-10		BLANK		0		19					
Fig. Pos.	Part No Art nr	Quantity/Antal		Description		Benämning		K/S Notes		S/R Anmärkning	
		900	US								
	89 93 115	X		X Kit, non-return valve		Sats, backventil		4			
	91 03 474	X		X KIT, PISTON FRONT BRAKE		SATS, KOLV FRAM-BROMS		4			
	80 25 745	1		1 Piston		.Kolv		4 1)			
	89 25 521	1		1 Push rod		.Tryckstång		4 1)			

- Not as a separate spare part

0300

Complete sets			Sats		Date		Illustration		Group		Page	
Front wheel suspension steering device			Framvagn och styrinrättning		Datum		Bild nr		Grupp		Sida	
					1987-10		BLANK		0		20	
Fig. Pos.	Part No Art nr	Quantity/Antal	Description		Benämning		K/S	Notes				
		900		US			S/R	Anmärkning				
							/	L				
	78 72 963	X	X	Retro fit kit, power steering	Sats, servostyrning		4					
	89 36 460	1	1	Power steering gear assy	.Servostyrväxel kpl		1					
	80 73 546	2	2	Nut	.Mutter		3					
	89 43 359	1	1	Hydraulic pump	.Hydraulpump		3					
	80 37 468	1	1	Hose	.Slang		4					
	80 37 559	1	1	Hose	.Slang		4					
	89 29 044	1	1	Clamp	.Klamma		5					
	89 28 818	2	2	Bushing	.Bussning		5					
	79 22 891	1	1	Screw	.Skruv		5					
	70 70 049	1	1	Hose clamp	.Slangklamra		5					
	93 31 588	1	1	Bracket	.Fäste		3					
	93 04 676	1	1	Stay	.Stag		3					
	93 04 650	1	1	Bracket	.Fäste		3					
	80 83 123	4	4	Screw	.Skruv		5					
	79 67 938	1	1	Screw	.Skruv		5					
	80 29 779	1	1	Nut	.Mutter		5					
	93 00 971	1	1	Belt pulley	.Remskiva		3					
	83 39 749	2	2	Cage	.Hylsa		4					
	83 39 921	1	1	V-belt	.Kilrem		1					
	80 84 063	1	1	Screw	.Skruv		5					
	79 16 505	1	1	Washer	.Bricka		5					
	78 72 971	1	1	Oil	.Olja			45/3009800				
	78 73 037	X	X	Retro fit kit, power steering	Sats, servostyrning		4	RHD				
	89 38 813	1	1	Power steering gear assy	.Servostyrväxel kpl		1					
	80 73 546	2	2	Nut	.Mutter		3					
	89 43 359	1	1	Hydraulic pump	.Hydraulpump		3					
	89 37 468	1	1	Hose	.Slang		4					
	89 42 849	1	1	Hose	.Slang		4					
	89 29 044	1	1	Clamp	.Klamma		5					
	89 28 848	2	2	Bushing	.Bussning		5					
	79 22 891	1	1	Screw	.Skruv		5					
	93 31 588	1	1	Bracket	.Fäste		3					
	93 04 676	1	1	Stay	.Stag		3					
	93 04 650	1	1	Bracket	.Fäste		3					
	80 83 123	4	4	Screw	.Skruv		5					
	79 67 938	1	1	Screw	.Skruv		5					
	80 29 779	1	1	Nut	.Mutter		5					
	93 00 971	1	1	Belt pulley	.Remskiva		3					
	83 39 749	2	2	Cage	.Hylsa		4					
	83 39 921	1	1	V-belt	.Kilrem		1					
	80 84 063	1	1	Screw	.Skruv		5					
	79 16 505	1	1	Washer	.Bricka		5					
	78 72 971	1	1	Oil	.Olja			45/3009800				
	89 93 321	X	X	Kit, end piece	Sats, ändstycke		2					
	89 85 384	1	1	End piece	.Ändstycke		1)					
	80 73 124	1	1	Washer	.Bricka		5					
	79 18 733	1	1	Nut	.Mutter		3					
	79 18 717	2	2	Nut	.Mutter		3					
	89 93 354	X	X	Kit, tie rod end	Sats, styrstagsände							
	89 85 160	1	1	Tie rod end	.Styrstagsände							
	80 73 546	1	1	Nut	.Mutter		3					
				REPAIR SETS, STEERING GEAR,	REPARATIONSSATSER, STYRVÄXEL, SE							

1. Not as a separate spare part

Complete sets				Satsar		Date Datum	Illustration Bild nr	Group Grupp	Page Side
Front wheel suspension steering device				Framvagn och styrinrättning		1987-10	BLANK	0	21
Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K S R Notes Anmärkning			
		900		US					
				SEE GROUP 6	GRUPP 6				

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

0 GROUP INDEX

Engine	1-F03
Electrical system, instruments	1-F13
Transmission	1-F13
Brakes	1-F19
Front wheel suspension, steering device	1-F21
Suspension system, wheels	1-F23
Car body	1-F01

Complete sets		Satser		Date	Illustration	Group	Page
Suspension system, wheels		Fjädringssystem, hjul		Datum	Bild nr	Grupp	Sida
				1987-10	BLANK	0	22
Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S	Notes	
		900			S/R	Anmärkning	
0020	89 33 381	X	X Kit, shock absorber, front	Sats, stötdämpare, främre	1	EMS, PO	
0040	89 51 093	1	1 Shock absorber with bushings	Stötdämpare med bussning	1	(893407)	
0100	89 20 019	1	1 Washer	Bricka	5		
0120	71 39 341	1	1 Nut	Sexkantmutter	5		
0140	79 04 089	1	1 Bushing, lower	Bussning, nedre	1		
0160	89 39 423	1	1 Bushing, upper	Bussning, övre	1		
0180	83 15 558	2	2 Nut	Sexkantmutter	5		
0200	89 39 449	2	2 Washer	Bricka	5		
0220	89 33 434	X	X Kit, shock absorber, rear	Sats, stötdämpare, bakre	1	1979, (8933008)	
0240	89 51 093	1	1 Shock absorber with bushings	Stötdämpare med bussning	1		
0260	89 20 019	1	1 Washer	Bricka	5		
0280	71 39 341	1	1 Nut	Sexkantmutter	5		
0300	79 04 089	1	1 Bushing, lower	Bussning, nedre	1		
0320	89 39 423	1	1 Bushing, upper	Bussning, övre	1		
0340	83 15 558	2	2 Nut	Sexkantmutter	5		
0360	89 39 449	2	2 Washer	Bricka	5		
0380	89 33 123	X	X Kit, shock absorber, front	Sats, stötdämpare, främre	1	1980-	
0400	89 42 864	1	1 Shock absorber with bushing	Stötdämpare med bussning	1		
0420	89 20 019	1	1 Washer	Bricka	5		
0440	71 39 341	1	1 Nut	Mutter	5		
0460	79 04 089	1	1 Bushing, lower	Bussning, nedre	1		
0480	89 39 423	1	1 Bushing, upper	Bussning, övre	1		
0500	83 15 558	2	2 Nut	Mutter	5		
0520	89 39 449	2	2 Washer	Bricka	5		
0540	89 33 438	X	X Kit, shock absorber, rear	Sats, stötdämpare, bakre	1	1980-, 5 CK TUBO, (8942948)	
0560	89 51 093	1	1 Shock absorber with bushing	Stötdämpare med bussning	1		
0580	89 20 019	2	2 Washer	Bricka	5		
0600	79 15 705	2	2 Washer	Bricka	5		
0620	79 04 089	2	2 Nut	Mutter	5		
0640	89 39 423	2	2 Bushing	Bussning	1		
0660	89 39 415	2	2 Bushing	Bussning	1		
0680	89 39 449	4	4 Washer	Bricka	5		
0700	83 15 558	2	2 Nut	Mutter	5		
0720	89 42 989	X	X Kit, shock absorber, front	Sats, stötdämpare, främre	1	1980-, GLE	
0740	89 51 093	1	1 Shock absorber with bushing	Stötdämpare med bussning	1		
0760	89 20 019	2	2 Washer	Bricka	5		
0780	79 15 705	2	2 Washer	Bricka	5		
0800	79 04 089	2	2 Nut	Mutter	5		
0820	89 39 423	2	2 Bushing	Bussning	1		
0840	89 39 449	4	4 Washer	Bricka	5		
0860	83 15 558	2	2 Nut	Mutter	5		

Complete sets		Satser		Date	Illustration	Group	Page
Suspension system, wheels		Fjädringssystem, hjul		Datum	Bild nr	Grupp	Sida
				1987-10	BLANK	0	23
Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S	Notes	
		900			S/R	Anmärkning	
89 93 446	X		X Kit, shock absorber, rear	Sats, stötdämpare, bakre	1	EMS, PO, (893399)	
89 51 101	1		1 Shock absorber with bushings	Stötdämpare med bussning	1		
89 38 486	1		1 Screw	Skruv	5		
80 73 546	1		1 Nut	Sexkantmutter	5		
89 39 431	1		1 Washer, lower	Bricka, nedre	5		
89 39 423	1		1 Bushing, lower	Bussning, nedre	1		
89 39 415	1		1 Bushing, upper	Bussning, övre	1		
89 39 446	1		1 Washer, upper	Bricka, övre	5		
83 15 558	2		2 Nut	Sexkantmutter	5		
89 93 024	X		X Kit shock absorber, rear	Sats, stötdämpare, bakre	1	1979	
89 39 548	1		1 Shock absorber with bushings	Stötdämpare med bussning	1		
89 38 486	1		1 Screw	Sexkantskruv	5		
80 73 546	1		1 Nut	Sexkantmutter	5		
89 39 423	1		1 Bushing, lower	Bussning, nedre	1		
89 39 415	1		1 Bushing, upper	Bussning, övre	1		
89 39 449	2		2 Washer	Bricka	5		
83 15 558	2		2 Nut	Sexkantmutter	5		
89 13 032	X		X Kit, shock absorber, rear	Sats, stötdämpare, bakre	1		
89 33 093	1		1 Shock absorber with bushings	Stötdämpare med bussning	1		
89 38 486	1		1 Screw	Sexkantskruv	5		
80 73 546	1		1 Nut	Sexkantmutter	5		
89 39 423	1		1 Bushing, lower	Bussning, nedre	1		
89 39 415	1		1 Bushing, upper	Bussning, övre	1		
89 39 449	2		2 Washer	Bricka	5		
83 15 558	2		2 Nut	Sexkantmutter	5		
89 93 412	X		X Kit, shock absorber, rear	Sats, stötdämpare, bakre	1	1980-, (8993131)	
89 51 123	1		1 Shock absorber with bushing	Stötdämpare med bussning	1		
89 39 416	1		1 Nut	Mutter	5		
80 73 546	1		1 Nut	Mutter	5		
89 39 423	1		1 Bushing, lower	Bussning nedre	1		
89 39 415	1		1 Bushing, upper	Bussning övre	1		
83 15 558	2		2 Nut	Mutter	5		
89 39 449	2		2 Washer	Bricka	5		
89 93 446	X		X Kit, shock absorber, rear	Sats, stötdämpare, bakre	1	1980-, 5 CK TUBO, GLE (8942963, 8944003)	
89 51 101	1		1 Shock absorber with bushing	Stötdämpare med bussning	1		
89 38 486	2		2 Screw	Skruv	5		
80 73 546	2		2 Nut	Mutter	5		
89 39 423	2		2 Bushing	Bussning	1		
89 39 415	2		2 Bushing	Bussning	1		
89 39 449	2		2 Washer	Bricka	5		
83 15 558	4		4 Nut	Mutter	5		

Complete sets			Sätsar			Date	Illustration	Group	Page
Car body			Kaross			Datum	Bild nr	Grupp	Sida
						1987-10	BLANK	0	24
Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S	Notes		
		900	US			SR	Anmärkning		
						/			
	82 09 681	X		X Kit, rivet inner plate, door	Sats, nit innerplåt, dörr	6			
	79 81 634	20		20 Rivet	Nit	5			
	82 36 645	6		6 Rivet	Nit	3	(76 65 980)		
	84 12 256	20		20 Clamp	Klammer	5			
	78 73 771	X		X Mounting kit, front spoiler	Monteringssats, främre spoiler				
	79 22 354	4		4 Screw	Skruv				
	79 68 901	4		4 Clip nut	Clipsmutter				
	82 66 835	2		2 Washer	Bricka				
	32 88 812	1		1 Kit, bracket with screw	Stödinkelsats				
		1		1 Mounting instruction	Monteringsanvisning		76/853063		
	78 73 788	X		X Kit, spoiler rear	Spoilersats bak				
	92 88 523	1		1 Spoiler	Spoiler		CK 1)		
	79 22 354	14		14 Screw	Skruv				
	92 26 255	14		14 Plastic washer	Plastbricka				
	82 64 962	2		2 Rubber plug	Gummipugg				
		1		1 Mounting instruction	Monteringsanvisning		75/855407		
	97 48 994	X		X Kit, control wheel, heating and ventilation	Sats, ratt, värme och ventilation				
		1		1 Control wheel	Ratt	3			
	94 31 425	1		1 Retaining ring	Spärring	5			
	94 20 043	1		1 Ball	Kula	5			
	94 20 035	1		1 Spring	Fjäder	5			
	94 25 844	1		1 Washer	Bricka	6	Air SUPPLY CONTROL		
	79 72 078	1		1 O-ring	O-ring	5	TEMPERATURE CONTROL		
	84 86 425	X		X Kit, mirror LH convex glass	Sats, backspegel V konvext glas	3	1978		
	84 96 770	1		1 External mirror	Utvändig backspegel	4	1)		
	84 97 711	1		1 Gasket	Packning	5			
	79 71 542	2		2 Screw	Skruv	5			
	84 87 176	X		X Kit, mirror LH convex glass	Sats, backspegel V konvext glas	3	1980-		
	94 64 751	1		1 External mirror	Utvändig backspegel	4	1)		
	84 97 711	1		1 Gasket	Packning	5			
	79 72 185	2		2 Screw	Skruv	5			
	84 66 433	X		X Kit, mirror RH convex glass	Sats, backspegel H konvext glas	3	1979		
	84 96 788	1		1 External mirror	Utvändig backspegel	4	1)		
	84 97 711	1		1 Gasket	Packning	5			
	79 71 542	2		2 Screw	Skruv	5			
	84 87 183	X		X Kit, mirror RH convex glass	Sats, backspegel H konvext glas	3	1980-		
	84 64 799	1		1 External mirror	Utvändig backspegel	4	1)		
	84 97 711	1		1 Gasket	Packning	5			
	79 72 185	2		2 Screw	Skruv	5			
	84 86 441	X		X Kit, mirror LH flat glass	Sats, backspegel V plant glas	3	1979		
	84 96 796	1		1 External mirror	Utvändig backspegel	4	1)		
	84 97 711	1		1 Gasket	Packning	5			
	79 71 542	2		2 Screw	Skruv	5			

1. Not as a separate spare part

Complete sets				Sätsar		Date		Illustration		Group		Page	
Car body				Kaross		Datum		Bild nr		Grupp		Sida	
						1987-10		BLANK		0		25	
Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S	Notes						
		900	US			S/R	Anmärkning						
	84 87 191	X		X Kit, mirror LH flat	Sats, backspegel V	3	1980-						
				glass	plant glas								
	94 64 777	1		1 External mirror	Utvändig backspegel	4	1)						
	84 97 711	1		1 Gasket	Packning	5							
	79 72 185	2		2 Screw	Skruv	5							
	84 86 458	X		X Kit, mirror RH flat	Sats, backspegel H	3	1979						
				glass	plant glas								
	84 96 804	1		1 External mirror	Utvändig backspegel	4	1)						
	84 97 711	1		1 Gasket	Packning	5							
	79 71 542	2		2 Screw	Skruv	5							
	84 87 209	X		X Kit, mirror RH flat	Sats, backspegel H	3	1980-						
				glass	plant glas								
	94 64 785	1		1 External mirror	Utvändig backspegel	4	1)						
	84 97 711	1		1 Gasket	Packning	5							
	79 72 185	2		2 Screw	Skruv	5							
	82 31 795	X		X Kit, gas spring	Sats, gasfjäder	3	(8258071)						
	82 33 777	1		1 Gas spring	Gasfjäder	3							
	82 08 969	4		4 Washer	Bricka	5							
	85 45 428	X		X Kit, electric mirrors	Sats, elbackspegel	4							
				flat glass	plant glas								
	84 83 778	1		1 External mirror LH	Utvändig backspegel	4							
				V									
	84 83 786	1		1 External mirror RH	Utvändig backspegel	4							
				H									
	85 31 204	2		2 Switch	Strömställare	3							
	73 09 370	5		5 Grommet	Genomföring	5							
	85 53 687	2		2 Cable network	Ledningsnät	5							
	85 45 410	1		1 Cable network	Ledningsnät	5							
	84 83 794	1		1 Gasket LH	Packning V	5							
	84 83 802	1		1 Gasket RH	Packning H	5							
	79 21 486	4		4 Screw	Skruv	5							
	85 79 482	2		2 Knob	Knapp	5							
	85 28 358	2		2 Nut	Mutter	5							
	85 41 856	2		2 Retainer	Hållare	5							
	85 31 212	1		1 Cover	Täckbricka	5							
				1 Mounting instruction	Monteringsanvisning		75/852131						
	96 52 851	X		X Basic kit, air con-	Grundsat, klimat-		VIR TYPE						
				dition system AC	system AC		40/206 700 008						
	94 20 225	1		1 Throttle	Spjäll	5							
	79 65 809	1		1 Clip	Clips	5							
	94 20 241	1		1 Shaft	Åxel	5							
	94 00 896	1		1 Lever	Hävarm	5							
	94 20 286	1		1 Servo unit	Vakuum servo	5							
	79 40 398	2		2 Nut	Mutter	5							
	94 41 221	1		1 Clip	Clips	5							
	94 20 274	1		1 Spring	Fjäder	5							
	80 50 248	3		3 Screw	Skruv	5							
	80 73 496	3		3 Lock nut	Låsmutter	5							
	94 38 250	1		1 Plate	Mothållsplåt	5							
	94 22 403	1		1 Bearing	Lagring	5							
	94 20 282	1		1 Bracket	Konsol	5							
	85 52 788	1		1 Switch	Kontakt	5							
	85 53 877	1		1 Clamp	Klamma	5							
	85 52 770	1		1 Thermo switch	Termobrytare	4							
	85 53 885	1		1 Gasket	Packning	5							
	80 59 404	2		2 Screw	Spårskruv	5							
	80 29 944	2		2 Washer	Bricka, plan	5							

1. Not as a separate spare part

0 General	1-A02
1 Tools	1-H02
2 Engine	2-A02
3 Electrical system,	
Instruments	2-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly,	
Steering	3-B02
7 Suspension,	
Wheels	3-C02
8 Body	3-D02
9 Accessories,	
Labels	3-L02
10 Numerical	
register	4-A02
0 GROUP INDEX	
Engine	1-F03
Electrical system, instruments	1-F12
Transmission	1-F13
Brakes	1-F19
Front wheel suspension, ste-	
ering device	1-F21
Suspension system, wheels	1-F23
Car body	1-G0

Complete sets	Satser	Date	Illustration	Group	Page
Car body	Kaross	Datum	Bild nr	Grupp	Sida
		1987-10	BLANK	0	26

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR	Notes Anmärkning
		900	US				
1980	79 15 556	2		2. Washer	.Bricka, tandem	5	
1980	80 50 593	2		2. Nut	.Mutter	5	
2000	94 01 894	1		1. Evaporator with	.Förångare med	5	
2010				VIR - unit	.VIR - enhet	5	
2020	94 01 951	1		1. Condenser	.Kondensator	5	
2040	80 59 578	2		2. Screw	.Skruv	5	
2060	79 22 420	2		2. Screw	.Skruv	5	
2080	80 29 951	2		2. Washer	.Bricka	5	
2100	94 01 977	1		1. Hose, VIR - unit -	.Slang, VIR - enhet -	5	
2120				compressor	.kompressor	5	
2140	94 02 017	1		1. Hose, compressor -	.Slang, kompressor -	5	
2160				condenser	.kondensor	5	
2180	94 02 074	1		1. Hose, condenser - VIR	.Slang, kondensor -	5	
2200				unit	.VIR - enhet	5	
2220	94 31 024	1		1. Clamp	.Klamma	5	
2240	85 15 280	1		1. Pressure contact	.Tryckkontakt	4	
2260	85 15 288	1		1. Pressure contact	.Tryckkontakt	4	
2280	71 55 104	1		1. Connector	.Skravhus	4	
2300	71 55 096	1		1. Connector	.Skravhus	4	
2320	94 20 308	1		1. Vacuum hose	.Vakuumslang	4	
2340	94 40 447	1		1. Vacuum hose	.Vakuumslang	4	
2360	94 79 501	1		1. Compressor assy	.Kompressor kpl	0	(9422957), USED TOGETHER WITH 8098261
2370							
2380	94 35 389	1		1. Connection, compressor	.Anslutning, kompressor	5	
2400	79 60 959	1		1. Screw	.Skruv	5	
2420	79 15 697	1		1. Lock washer	.Låsbricka	5	
2440	83 16 126	1		1. Engine support, front	.Motorfäste, framdel	4	
2460	93 16 118	1		1. Bracket	.Konsol	4	
2480	80 74 106	2		2. Nut	.Mutter	5	
2500	93 15 076	1		1. Engine stay, RH assy.	.Motorstag H kpl	5	
2520	86 17 104	1		1. Strap	.Spännband	4	
2540	79 71 880	1		1. Strap	.Spännband	4	
2560	85 52 754	1		1. Cable network, AC	.Ledningsnät, AC -	6	
2580				compressor	.kompressor	5	
2600	93 16 183	1		1. Lever assy	.Spännarm kpl	5	
2620	83 34 302	1		1. Bracket	.Konsol	0	
2640	93 03 983	1		1. Washer	.Bricka	0	
2660	93 03 975	1		1. Spacer washer	.Distansbricka	0	
2680	79 33 194	1		1. Washer	.Bricka, vägg	5	
2700	80 83 123	1		1. Screw	.Skruv	5	
2720	79 87 938	1		1. Flange screw	.Flänskruv	5	
2740	80 04 022	1		1. Screw	.Skruv	5	
2760	83 68 839	1		1. Belt pulley	.Remskiva	4	
2780	83 39 939	1		1. V-bolt	.Kilrem	4	
2800	80 19 895	3		3. Screw	.Skruv	5	
2820	80 29 951	3		3. Washer	.Bricka	5	
2840	79 05 593	3		3. Screw	.Skruv	5	
2860	80 83 941	2		2. Screw	.Skruv	5	
2880	80 19 929	2		2. Screw	.Skruv	5	
2900	80 29 555	1		1. Nut	.Mutter	5	
2920	93 02 969	1		1. Cover for AC assy.	.Skydd för AC kpl	6	
2940	93 16 480	1		1. Bracket	.Fäste	5	
2960	80 82 935	2		2. Screw	.Skruv	5	
2980	80 29 985	3		3. Washer	.Bricka	5	
3000	80 84 014	1		1. Screw	.Skruv	5	
3020	93 15 406	1		1. Valve, idling -	.Ventil, tomgång -	0	
3040				compressor AC	.kompressor AC	5	
3060	83 17 828	1		1. Nipple	.Nippel	2	
3080	93 03 991	1		1. T-coupling	.T-koppling	5	
3100	83 63 376	1		1. Hose	.Slang	4	
3120	79 70 064	6		6. Hose clamp	.Slangklamra	5	
3140	79 71 823	1		1. Screw	.Skruv	5	
3160	83 57 501	1		1. Hose	.Slang	4	
3180	79 33 518	1		1. Protective bushing	.Skyddsbussning	5	
3200	79 71 880	2		2. Strap	.Spännband	4	

Complete sets	Satser	Date	Illustration	Group	Page
Car body	Kaross	Datum	Bild nr	Grupp	Sida
		1987-10	BLANK	0	27

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR	Notes Anmärkning
		900	US				
	85 86 135	3		3. Cable clips	.Kabelklips	5	
	85 52 796	1		1. Fuse	.Säkring	1	
	79 22 271	1		1. Screw	.Skruv	5	
	79 68 555	1		1. Clip nut	.Clipsmutter	3	
	85 80 187	1		1. Cable network	.Ledningsnät	6	
	85 52 828	1		1. Drilling template	.Bormall	5	
	94 49 489	1		1. AC-SIGN	.AC-DEKAL	6	
	94 49 919	1		1. Sign warning	.Varningsdekal	6	
	85 52 636	1		1. Installation in-	.Monteringsanvisning	5	
				struction			
	80 59 578	1		1. Screw	.Skruv	5	
	80 73 512	1		1. Nut	.Mutter	5	
	85 66 143	1		1. Clamp	.Klamma	0	
	94 22 775	1		1. Bracket cpl	.Konsol kpl	5	
	94 02 157	1		1. Clamp	.Klamma	5	
	80 59 578	2		2. Screw	.Skruv	5	
				1. Guide	.Guide	5	
	86 53 503	X		X Basic kit, air	Grundsaats, klimat-		CYCLING CLUTCH TYPE
				conditioning (AC)	system (AC)		40/205 750 003
	94 20 225	1		1. Throttle	.Spjäll	5	
	79 65 809	1		1. Clip	.Klip	5	
	94 20 241	1		1. Shaft	.Axel	6	
	94 00 896	1		1. Lever	.Hävarm	6	
	94 20 266	1		1. Servo unit	.Vakuumservo	5	
	79 40 398	2		2. Nut	.Mutter	5	
	94 41 221	1		1. Clamp	.Klammer	5	
	94 20 274	1		1. Spring	.Fjäder	5	
	80 59 248	3		3. Screw	.Skruv	5	
	80 73 496	3		3. Nut	.Mutter	5	
	94 38 250	1		1. Plate	.Plåt	6	
	94 22 403	1		1. Bearing	.Lagring	5	
	94 20 282	1		1. Bracket	.Konsol	6	
	94 61 880	1		1. Compressor assy	.Kompressor kpl	5	
	94 51 915	1		1. Evaporator with	.Förångare med	5	
				expansion valve	.expansionsventil		
	94 61 088	1		1. Clamp	.Klamma	5	
	94 51 881	1		1. Freon container	.Freonbehållare	4	
	80 82 968	1		1. Screw	.Skruv	5	
	80 74 106	1		1. Nut	.Mutter	5	
	94 49 919	1		1. Warning sign	.Varningsskylt	6	
	94 49 489	1		1. Sign AC	.Skylt AC	5	
	94 01 951	1		1. Condenser	.Kondensor	5	
	80 59 578	2		2. Screw	.Skruv	5	
	79 22 420	2		2. Screw	.Skruv	5	
	80 29 951	2		2. Washer	.Bricka	5	
	94 51 808	1		1. Hose, expansion valve	.Slang, expansions-	5	
				compressor	ventil - kompressor		
	94 02 017	1		1. Hose, compressor -	.Slang, kompressor -	5	
				condenser	.kondensor		
	94 51 758	1		1. Hose, condenser -	.Slang, kondensor -	5	
				container	.behållare		
	94 51 774	1		1. Hose, container -	.Slang, behållare -	5	
				expansion valve	.expansionsventil		
	80 82 935	1		1. Screw	.Skruv	5	
	94 64 736	1		1. Clamp	.Klamma	5	
	80 74 106	1		1. Nut	.Mutter	5	
	94 20 308	1		1. Vacuum hose	.Vakuumslang	4	
	94 40 447	1		1. Vacuum hose	.Vakuumslang	4	
	94 60 742	1		1. Bushing	.Bussning	5	
	94 51 840	1		1. Connection, compressor	.Anslutning, kompressor	5	
	79 33 896	1		1. Washer	.Bricka	5	
	80 98 261	1		1. Screw	.Skruv	5	
	93 16 126	1		1. Engine bracket, front	.Motorfäste, framdel	4	
				RH	.H		

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02
0 GROUP INDEX		
Engine		
Electrical system, instruments		1-F03
Transmission		1-F12
Brakes		1-F19
Front wheel suspension, steering device		1-F21
Suspension system, wheels		1-F23
Car body		1-G01

Complete sets		Sats		Date	Illustration	Group	Page
Car body		Kaross		Datum	Bild nr	Grupp	Sida
				1987-10	BLANK	0	28
Fig. Pos.	Part No Art nr	Quantity/Åntal	Description	Benämning	K/S	Notes	
		900	US			Anmärkning	
4520	93 16 118	1	1. Bracket	.Konsol	4		
4540	80 84 014	1	1. Screw	.Skruv	5		
4560	93 14 105	2	2. Nut	.Mutter	5		
4580	93 16 076	1	1. Engine stay assy RH	.Motorstag kpl H	5		
4600	93 16 183	1	1. Tightener	.Spännarm	5		
4620	83 34 302	1	1. Bracket	.Konsol	5		
4640	93 03 983	1	1. Washer	.Bricka	5		
4660	93 03 975	1	1. Spacer	.Distans	0		
4700	80 83 123	1	1. Screw	.Skruv	5		
4720	79 67 938	1	1. Screw	.Skruv	5		
4740	80 84 022	1	1. Screw	.Skruv	5		
4760	83 58 839	1	1. Belt pulley	.Remskiva	4		
4780	83 39 939	1	1. V-belt	.Kilrem	5		
4800	80 19 896	3	3. Screw	.Skruv	5		
4820	80 29 951	3	3. Washer	.Bricka	5		
4840	79 65 569	3	3. Screw	.Skruv	5		
4860	80 83 941	1	1. Screw	.Skruv	5		
4880	80 19 929	2	2. Screw	.Skruv	5		
4900	80 29 555	1	1. Nut	.Mutter	5		
4920	93 02 969	1	1. Protection AC	.Skydd AC	6		
4940	93 16 461	1	1. Stay assy	.Stag kpl	5		
4950	80 82 935	2	2. Screw	.Skruv	5		
4960	80 29 986	2	2. Washer	.Bricka	5		
5000	85 66 143	1	1. Clamp	.Klammer	5		
5020	83 34 005	1	1. Valve AC	.Ventil AC	0		
5040	83 17 828	1	1. Nipple	.Nippel	2		
5060	93 38 567	1	1. T-nipple	.T-nippel	5		
5080	93 39 342	1	1. Hose	.Slang	4		
5100	79 70 064	6	6. Hose clamp	.Slangklämma	5		
5120	85 82 728	1	1. Fan unit 10 A	.Fläktenhet 10 A	4		
5140	83 37 859	1	1. Fan ring	.Fläktring	4		
5200	80 29 548	3	3. Nut	.Mutter	5		
5220	80 29 944	3	3. Washer	.Bricka	5		
5240	79 22 735	3	3. Screw	.Skruv	5		
5260	71 55 500	1	1. Clamp	.Klammer	5		
5280	93 31 059	1	1. Tube assy	.Rör kpl	5		
5300	83 30 258	1	1. Seal ring	.Tätningssring	5		
5320	79 70 106	2	2. Hose clamp	.Slangklämma	5		
5340	71 55 104	1	1. Connector	.Skarvhus	5		
5360	85 66 549	1	1. Cable network	.Ledningsnät	6		
5380			AC-compressor	.AC-kompressor	6		
5400	85 66 580	1	1. Cable network, AC	.Ledningsnät AC	6		
5420	85 72 331	1	1. Thermoswitch	.Termobrytare	4		
5440	79 71 880	6	6. Strap	.Spännband	4		
5460	71 55 409	6	6. Cable clip	.Kabelclip	5		
5480	85 22 310	1	1. Relay	.Relä	3		
5500	85 52 788	1	1. Vacuum switch	.Vakuumbrytare	3		
5520	85 53 877	1	1. Clamp	.Klammer	5		
5540	80 59 404	1	1. Screw	.Skruv	5		
5560	79 15 556	1	1. Washer	.Bricka	5		
5580	80 50 593	1	1. Nut	.Mutter	5		
5600	85 65 483	1	1. Thermoswitch	.Termobrytare	4		
5620	85 65 598	1	1. Nut	.Mutter	5		
5640	85 15 296	1	1. Pressure switch	.Tryckkontakt	4		
5700	71 55 096	1	1. Connector	.Skarvhus	5		
5720			1. Assembly instruction	.Monteringsanvisning	4		
5740			1. Instruction book	.Instruktionsbok	4		
5760	86 53 255	1	1. Warranty note	.Garantisedel	4		
5780							
5800	86 52 869	X	Kit, cable network	.Sats, ledningsnät			
5820			AC				
5840	85 59 965	1	1. Cable network	.Ledningsnät	0		
5860							

AC VIR TYPE
SUPPLEMENTARY 1, NOTUS
40/205 706 005

Complete sets		Sats		Date	Illustration	Group	Page
Car body		Kaross		Datum	Bild nr	Grupp	Sida
				1987-10	BLANK	0	29
Fig. Pos.	Part No Art nr	Quantity/Åntal	Description	Benämning	K/S	Notes	
		900	US			Anmärkning	
	86 52 877	X	X Kit, cut out AC at 115 degrees C	.Sats, bortkoppling AC vid 115 grader C	2)	AC VIR TYPE SUPPLEMENTARY 2	
	83 30 268	1	1. seal ring		5	40/205 701 006	
	79 70 106	2	2. Hose clamp	.Slangklämma	5		
	79 33 443	5	5. Clamp	.Klamma	5		
	85 72 331	1	1. Thermo contact AC	.Termokontakt: AC	4		
	85 58 629	1	1. Cable network	.Ledningsnät termo-kontakt	6		
	86 52 865	X	X Kit, extra cooling fan	.Sats, extra kylfläkt fan		AC VIR TYPE SUPPLEMENTARY 3, US AND HOT MARKETS	
	85 22 310	1	1. Relay	.Relä	3	40/205 704 000	
	85 82 728	1	1. Fan unit 10 A assy.	.Fläktenhet 10 A kpl	4		
	79 22 735	3	3. Screw	.Skruv	5		
	83 37 859	1	1. Fan ring	.Fläktring	4		
	80 29 548	3	3. Nut	.Mutter	5		
	80 29 944	3	3. Washer	.Bricka	5		
	71 55 500	1	1. Clamp	.Klamma	5		
	71 55 104	1	1. Connector	.Skarvhus	4		
	86 52 893	X	X Kit, cut-out AC at acceleration	.Sats, bortkoppling		AC VIR TYPE SUPPLEMENTARY 4, IA	
	85 58 272	1	1. Timing relay	.Tidrelä	4	40/205 702 704	
	83 63 467	1	1. Lever	.Hävarm	0		
	83 63 202	1	1. Bracket	.Fäste	5		
	93 08 719	2	2. Screw	.Skruv	5		
	93 23 940	1	1. Micro switch	.Microströmställare	3		
	80 59 115	2	2. Screw	.Skruv	5		
	93 07 935	1	1. Spring	.Fjäder	5		
	86 52 901	X	Kit, idling increase	.Sats, tomgångshöjning		AC VIR TYPE, C.T NOT SW SUPPLEMENTARY 5	
	83 36 655	1	1. Solenoid	.Solenoid	5	40/205 705 007	
	93 00 468	1	1. Connector	.Skarvhus	5		
	80 30 017	1	1. Nut	.Mutter	4		
	85 41 237	1	1. Washer	.Bricka	5		
	93 07 804	1	1. Cable, deceleration valve	.Kabel, decelerations-ventil	5		
	80 19 896	2	2. Bracket	.Fäste	4		
	85 02 643	1	1. Screw	.Skruv	5		
	85 02 643	1	1. Cable clip	.Kabelclips	5		
	86 53 511	X	Supplementary kit AC	.Tilläggsats AC		AC CYCLING CLUTCH TYPE NOT US AND CA	
	85 66 572	1	1. Cable network, fuse box	.Ledningsnät, el-central	6	40/205 752 009	
	79 71 880	4	4. Strap	.Spännband	4		
	71 55 112	1	1. Connector	.Skarvhus	5		
	85 41 047	1	1. Switch	.Strömställare	3		
	85 66 453	1	1. Button	.Knapp	5		
	85 67 919	1	1. Cable network, switch	.Ledningsnät, ström-ställare	5		
	85 21 668	1	1. Connection	.Överkoppling	3		
	71 55 096	1	1. Connector	.Skarvhus	4		
	71 55 104	1	1. Connector	.Skarvhus	4		

2. Automatic all markets. Manual cars (not USA) markets with cool climate. Manual cars with towing device USA and markets with hot climate.

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02
0 GROUP INDEX		
Engine		1-F03
Electrical system, instruments		1-F12
Transmission		1-F13
Brakes		1-F19
Front wheel suspension, steering device		1-F21
Suspension system, wheels		1-F23
Car body		1-G01

Complete sets		Satser		Date		Illustration		Group		Page	
Car body		Kaross		Datum		Bild nr		Grupp		Sida	
				1987-10		BLANK		0		30	
Fig. Pos.	Part No Art nr	Quantity/Antal		Description		Benämning		K/S Notes		SR Anmärkning	
		900	US								
7060	86 53 529	X		X	Supplementary kit AC	Tilläggsatts AC		AC CYCLING CLUTCH TYPE			
7100	83 33 487	1		1	Lever	Hävarm	8	1A, 40/206 751 001			
7120	83 83 202	1		1	Bracket	Fäste	5				
7140	93 08 719	2		2	Screw	Skruv	5				
7160	93 23 940	1		1	Micro switch	Mikroströmställare	3				
7180	93 07 935	1		1	Spring	Fjäder	5				
7200	80 59 115	2		2	Screw	Skruv	5				
7220	85 58 272	1		1	Time relay	Tidrelä	4				
7240											
7260	78 73 243	X		X	Kit, mud guard LH and RH	Sats, stänkskydd V och höger	3				
7280											
7300	92 21 011	1		1	Mud guard LH	Stänkskydd V	3 (1)				
7320	92 21 029	1		1	Mud guard RH	Stänkskydd H	3 (1)				
7340	82 69 227	2		2	Support plate	Stödplåt	3				
7360	82 27 738	2		2	Support plate	Stödplåt	3				
7380	79 22 974	4		4	Screw	Skruv	5				
7400	79 22 982	6		6	Screw	Skruv	5				
7420											
7430	78 74 340	X		X	Kit, mud guard	Sats, stänkskydd	3				
7431	92 90 933	1		1	Mud guard LH	Stänkskydd V	1)				
7432	92 90 941	1		1	Mud guard RH	Stänkskydd H	1)				
7434	79 22 982	10			Screw	Skruv	5				
7435	92 22 613	2			Support plate	Stödplåt	3				
7436	82 27 738	2			Support plate	Stödplåt	3				
7437											
7440	78 73 565	X		X	Kit, mud guard LH	Sats, stänkskydd V	3 (7873250)				
7440	82 69 078	1		1	Mud guard LH	Stänkskydd V	3 (1)				
7480	79 22 974	2		2	Screw	Skruv	5				
7500	79 22 982	3		3	Screw	Skruv	5				
7520											
7540	78 73 573	X		X	Kit, mud guard RH	Sats, stänkskydd H	3 (7873268)				
7560	82 69 086	1		1	Mud guard RH	Stänkskydd H	3 (1)				
7580	79 22 974	2		2	Screw	Skruv	5				
7600	79 22 982	3		3	Screw	Skruv	5				
7620											
7630	97 46 272	X		X	Kit, water protective paper, front door	Sats, vattenavledande papper, främre dörr	5 3 CK				
7640											
7650	92 84 399	2		2	Water drainage	Vattenavledare	1)				
7660	92 31 150	2		2	Water drainage	Vattenavledare	1)				
7670											
7680	97 46 280	X		X	Kit, water protective paper, front and rear doors	Sats, vattenavledande papper, fram och bakhörrar	5 5 CK				
7690											
7700											
7710	92 31 044	2		2	Water drainage	Vattenavledare	1)				
7720	92 31 101	2		2	Water drainage	Vattenavledare	1)				
7730											
7750	97 46 322	X		X	Kit, water valve	Sats, värmekran	4				
7760	94 80 997	1		1	Water valve assy	Värmekran kpl	2				
7800	94 79 213	1		1	O-ring	O-ring	2				
7820	94 79 221	1		1	O-ring	O-ring	2				
7840	80 97 750	4		4	Screw	Skruv	5				
7860											
7870	85 46 483	X		X	Kit, el. contr window regulator, rear door	Sats, el-manövrerad fönsterhiss, bakhörr	1980-				
7880	95 95 935	4		4	Switch, el. windowlift	Strömställare el. hiss					
7890	95 95 943	1		1	Safety switch	Säkerhetsströmställ					
7900	85 53 893	1		1	Relay	Relä	5				
7910	79 22 818	1		1	Screw	Skruv	5				
7920	95 95 927	1		1	Cable network, distribution	Ledningsnät, el-central	6				
7930	95 95 919	1		1	Cable network, switch	Ledningsnät, ströms					

1. Not as a separate spare part

Complete sets		Satser		Date		Illustration		Group		Page	
Car body		Kaross		Datum		Bild nr		Grupp		Sida	
				1987-10		BLANK		0		31	
Fig. Pos.	Part No Art nr	Quantity/Antal		Description		Benämning		K/S Notes		SR Anmärkning	
		900	US								
	95 95 901	2		2	Cable network, rear doors	Ledningsnät, bakhörrar					
	92 89 372	1		1	El. contr window regulator, rear LH	El. fönsterhiss V bakhörr					
	92 89 380	1		1	El. contr window regulator, rear RH	El. fönsterhiss H bakhörr					
	79 72 441	10		10	Screw	Skruv	5				
	79 33 443	6		6	Clip	Clip	5				
	80 59 578	2		2	Screw	Skruv	5				
	84 10 961	2		2	Screw	Skruv	5				
	79 71 658	2		2	Nut	Mutter					

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

0 GROUP INDEX

Engine	1-F03
Electrical system, instruments	1-F12
Transmission	1-F13
Brakes	1-F19
Front wheel suspension, steering device	1-F21
Suspension system, wheels	1-F23
Car body	1-G01



Verktug
Tools
Werkzeuge
Outillage
Herramientas

SAAB
genuine parts
original reservdelar

1-H02

SAAB 900
M79-80

Special tools	Specialverktug	Date Datum	Group Grupp	Page Sida
		1987-10	1	1
TABLE OF CONTENTS				
SPECIAL TOOLS				
Special tools classifying				
Special tools, engine part 1	1: 5	1-H06		
Special tools, engine part 2	1: 7	1-H08		
Special tools, engine part 3	1: 11	1-H12		
Special tools, transmission (man. gear box) part 1	1: 13	1-H14		
Special tools, transmission (man. gear box) part 2	1: 17	1-H18		
Special tools, transmission (man. gear box) part 3	1: 21	1-H22		
Special tools, transmission (aut. gear box)	1: 23	1-H24		
Special tools, chassis	1: 27	1-I04		
Special tools, car body part 1	1: 33	1-I10		
Special tools, car body part 2	1: 37	1-I14		
Special tools, miscellaneous	1: 39	1-I18		
INNEHÅLLSFÖRTECKNING				
SPECIALVERKTYG				
Specialverktygsklassificering				
Specialverktug, motor del 1	1: 5	1-H06		
Specialverktug, motor del 2	1: 7	1-H08		
Specialverktug, motor del 3	1: 11	1-H12		
Specialverktug, kraftöverföring (man. växellåda) del 1	1: 13	1-H14		
Specialverktug, kraftöverföring (man. växellåda) del 2	1: 17	1-H18		
Specialverktug, kraftöverföring (man. växellåda) del 3	1: 21	1-H22		
Specialverktug, kraftöverföring (aut. växellåda)	1: 23	1-H24		
Specialverktug, chassis	1: 27	1-I04		
Specialverktug, kaross del 1	1: 33	1-I10		
Specialverktug, kaross del 2	1: 37	1-I14		
Specialverktug, övriga	1: 39	1-I18		
INHALTSVERZEICHNIS				
SPEZIALWERKZEUGE				
Spezialwerkzeuge, Klassenordnung				
Spezialwerkzeuge, Motor Teil 1	1: 5	1-H06		
Spezialwerkzeuge, Motor Teil 2	1: 7	1-H08		
Spezialwerkzeuge, Motor Teil 3	1: 11	1-H12		
Spezialwerkzeuge, Kraftübertragung (Mne. Getriebe)				
Teil 1	1: 13	1-H14		
Spezialwerkzeuge, Kraftübertragung (Mne. Getriebe)				
Teil 2	1: 17	1-H18		
Spezialwerkzeuge, Kraftübertragung (Mne. Getriebe)				
Teil 3	1: 21	1-H22		
Spezialwerkzeuge, Kraftübertragung (Atm. Getriebe)	1: 23	1-H24		
Spezialwerkzeuge, Fahrgestell	1: 27	1-I04		
Spezialwerkzeuge, karosserie teil 1	1: 33	1-I10		
Spezialwerkzeuge, karosserie teil 2	1: 37	1-I14		
Spezialwerkzeuge, Übriges	1: 39	1-I18		

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

1 GROUP INDEX

Special tools, engine part 1	1-H06
Special tools, engine part 2	1-H08
Special tools, engine part 3	1-H12
Special tools, transmission	
(man. gear box) part 1	1-H14
Special tools, transmission	
(man. gear box) part 2	1-H18
Special tools, transmission	
(man. gear box) part 3	1-H22
Special tools, transmission	
(aut. gear box)	1-H24
Special tools, chassis	1-I04
Special tools, car body part 1	1-I10
Special tools, car body part 2	1-I14
Special tools, miscellaneous	1-I18


Page Sida	Group Grupp	Date Datum	Special tools	Specialverktyg
2	1	1967-10		
TABLE DES MATIERS				
OUTILAGE SPÉCIAL				
1200			Classification de l'outillage spécial	
1220			Outillage spécial, moteur 1ère partie	1: 5 1-H06
1240			Outillage spécial, moteur 2ème partie	1: 7 1-H08
1260			Outillage spécial, moteur 3ème partie	1: 11 1-H12
1280			Outillage spécial, transmission (boîte de vitesses	
1300			manuelle 1ère partie	1: 13 1-H14
1420			Outillage spécial, transmission (boîte de vitesses	
1440			manuelle 2ème partie	1: 17 1-H18
1460			Outillage spécial, transmission (boîte de vitesses	
1480			manuelle 3ème partie	1: 21 1-H22
1500			Outillage spécial, transmission (boîte de vitesses	
1520			automatique	1: 23 1-H24
1540			Outillage spécial, de chassis	1: 27 1-I04
1560			Outillage spécial, de carrosserie, 1ère partie	1: 33 1-I10
1570			Outillage spécial, de carrosserie, 2ème partie	1: 37 1-I14
1580			Outillage spécial, autres	1: 39 1-I16
1600				
1620				
1640				
1660				
1680				
1700				
1720				
SUMARIO				
HERRAMIENTAS ESPECIALES				
1740			Clasificación de las herramientas especiales	
1760			Herramientas especiales, motor 1a parte	1: 5 1-H06
1780			Herramientas especiales, motor 2a parte	1: 7 1-H08
1800			Herramientas especiales, motor 3a parte	1: 11 1-H12
1820			Herramientas especiales, transmisión (caja de cambios	
1840			manual) 1a parte	1: 13 1-H14
1860			Herramientas especiales, transmisión (caja de cambios	
1880			manual) 2a parte	1: 17 1-H18
1900			Herramientas especiales, transmisión (caja de cambios	
1920			manual) 3a parte	1: 21 1-H22
1940			Herramientas especiales, transmisión (caja de cambios	
1960			automatica	1: 23 1-H24
1980			Herramientas especiales, de chassis	1: 27 1-I04
2000			Herramientas especiales, carrocería 1a parte	1: 33 1-I10
2010			Herramientas especiales, carrocería 2a parte	1: 37 1-I14
2020			Herramientas especiales, otros	1: 39 1-I16
2040				

Special tools	Specialverktyg	Date Datum	Group Grupp	Page Sida
		1967-10	1	3
Special tools classifying				
The special tools in the list are classified as follows:				
Tools for engine-, transmission- and chassis works.				
AO-1 = Tools for high frequent maintenance works				
(E.g. adjustment of timing)				
AO-2 = Tools for frequent maintenance works				
(E.g. replacement of brake pads)				
A1 = Tools required for simpler repairs				
(E.g. replacement of clutch, replacement of valves)				
A2 = Tools required for qualified repairs				
(E.g. reconditioning of transmission)				
A3 = Tools mainly motivated by rationalization reasons				
Tools for body works				
B1 = Tools required for simpler body works				
(e.g. replacement of front fender)				
B2 = Tools required for qualified body works				
(E.g. works in aligning bench)				
B3 = Tools mainly motivated by rationalization reasons.				
Specialverktygsklassificering				
Specialverktygen är i förteckning klassificerade				
enligt följande:				
Verktyg för motor-, växellåds- och chassiarbeten.				
AO-1 = Verktyg för högfrekventa tillsynsarbeten				
(Ex tändir ställning)				
AO-2 = Verktyg för frekventa underhållsarbeten (Ex byte				
av broms klotsar)				
A1 = Verktyg nödvändiga för enklare reparationer				
(Ex byte av koppling, byte av ventiler)				
A2 = Verktyg nödvändiga för kvalificerade reparationer				
(Ex renovering av växellåda)				
A3 = Verktyg huvudsakligen motiverade av				
rationaliseringstekniska skäl.				
Verktyg för plåtarbeten				
B1 = Verktyg nödvändiga för enklare plåtarbeten				
(Ex byte av framskärm)				
B2 = Verktyg nödvändiga för kvalificerade plåtarbeten				
(Ex riksbänksarbeten)				
B3 = Verktyg huvudsakligen motiverade av				
rationaliseringstekniska skäl.				

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

1 GROUP INDEX

Special tools, engine part 1	1-H06
Special tools, engine part 2	1-H08
Special tools, engine part 3	1-H12
Special tools, transmission	
(man.gear box) part 1	1-H14
Special tools, transmission	
(man.gear box) part 2	1-H18
Special tools, transmission	
(man.gear box) part 3	1-H22
Special tools, transmission	
(aut.gear box)	1-H24
Special tools, chassis	1-I04
Special tools, car body part 1	1-I10
Special tools, car body part 2	1-I14
Special tools, miscellaneous	1-I16

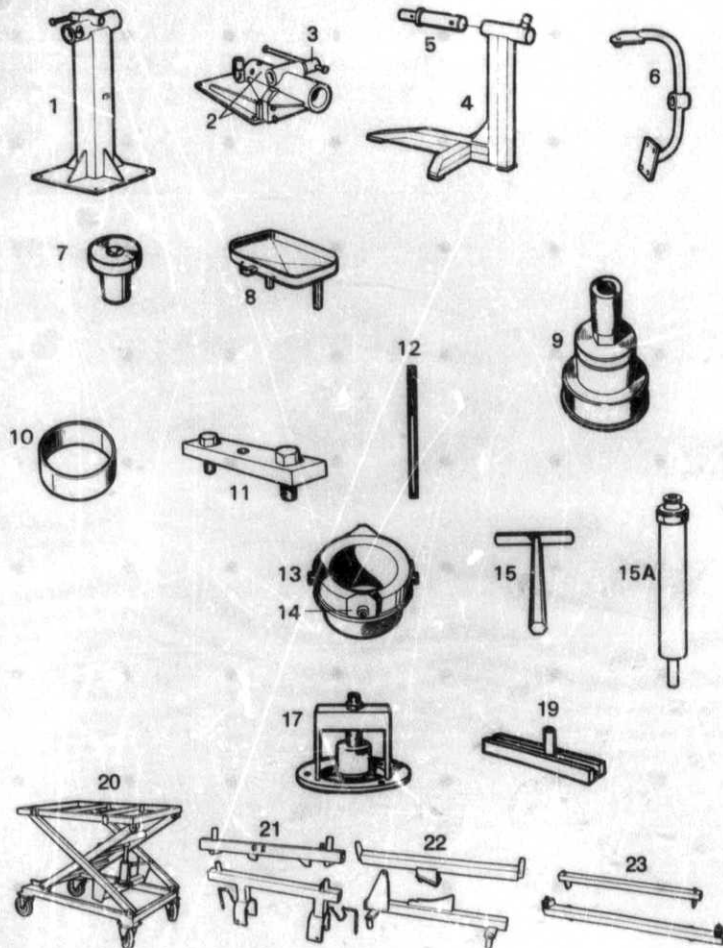

0100

Tools
Engine part 1

Verktyg
Motor del 1

Date Datum	Illustration Bild nr	Group Grupp	Page Sida
1987-10	R9316	1	5

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S S/R L	Notes Anmärkning
		900		US				
0020	1 78 60 794	1			1 Floor stand	Golvstativ		1/A2 ALTERNATIVE STANDS
0040	2 78 60 885	1			1 Bench stand	Bänkstativ		1/A2 ALTERNATIVE STANDS
0060	3 78 60 885	1			1 Vise stand	Skruvstyckastativ		1/A2 ALTERNATIVE STANDS
0080	4 78 31 478	1			1 Stand	Stativ		1/A2 ALTERNATIVE STANDS
0100	5 83 90 478	1			1 Axle for stand	Axel för stativ		1/A2
0120	6 83 92 169	1			1 Holder, engine	Hållare motor		A2 FOR 7861478, 7860877, 7860794, 7860885
0140	7 83 91 849	1			1 Plunger	Plunge		A1
0160	8 78 60 802	1			1 Oil pan	Oljetrög		1/A2
0200	9 83 92 540	1			1 Guide sleeve, crank- shaft seal flywheel- side	Styrhylsa, vevaxel- tätning, svänghjuls- sida		A1
0220	10 83 91 153	1			1 Piston installing tool oversize	Kolvmonteringsverktyg ÖD		A3
0240	10 78 62 287	1			1 Piston installing tool	Kolvmonteringsverktyg tool		A3
0260	11 83 91 146	1			1 Puller, belt pulley	Avdragare, remskiva		A3
0280	11 83 92 151	1			1 Puller, belt pulley	Avdragare, remskiva		A3
0300	12 83 92 288	1			1 Reamer, valve guide styrning	Brotsch, ventil- styrning		A2
0320	13 83 92 474	1			1 Centering tool	Centreringsverktyg		A2
0340	14 83 92 623	4			1 Shim	Shim		
0360	15 83 92 482	1			1 Key, C0-value	Nyckel, C0-värde		A0-1
0380	15A 83 93 225	1			1 Nipple, C0-checking	Nippel, C0-kontroll		A0-1, USED ON CARS WITH CATALYTIC REACTOR
0400	17 83 92 649	1			1 Installing and remo- ving tool, water pump	Monterings och demon- teringsverktyg, vattenpump		A2
0420	19 83 92 672	1			1 Dolly, water pump handling trolley	Mothåll, vattenpump transportvagn		A2
0440	20 88 18 726	1			1 Bracket	Hållare		
0460	21 88 18 734	1			1 Bracket	Hållare		
0480	22 88 18 742	1			1 Bracket	Hållare		
0500	23 88 18 758	1			1 Bracket	Hållare		

R 9316-900

1. Also for automatic transmission

0 General	1-A02
1 Tools	1-H02
2 Engine	2-A02
3 Electrical system, instruments	2-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly, steering	3-B02
7 Suspension, wheels	3-C02
8 Body	3-D02
9 Accessories, labels	3-L02
10 Numerical register	4-A02

1 GROUP INDEX

Special tools, engine part 1	1-H06
Special tools, engine part 2	1-H08
Special tools, engine part 3	1-H12
Special tools, transmission (man.gear box) part 1	1-H14
Special tools, transmission (man.gear box) part 2	1-H18
Special tools, transmission (man.gear box) part 3	1-H22
Special tools, transmission (aut.gear box)	1-H24
Special tools, chassis	1-I04
Special tools, car body part 1	1-I10
Special tools, car body part 2	1-I14
Special tools, miscellaneous	1-I16

0150

Tools
Engine part 2

Verktyg
Motor del 2

Date Datum	Illustration Bild nr	Group Grupp	Page Sida
1987-10	R9317	1	7


Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0020	1 83 90 338	1		1 Tool, water pump	Verktyg, vattenpump	A2	
0040	2 83 90 536	1		1. Sleeve	.Hylsa		
0060	3 83 90 544	1		1. Dolly	.Mothåll		
0080	4 83 90 551	1		1. Sleeve	.Hylsa		
0100	5 83 90 585	1		1. Handle	.Skaft		
0110	5A 83 93 217	1		1 Adapter, pressure test, cooling system	Adapter, trycktest, kylsystem		
0120	6 83 92 409	1		1 Lifting yoke, engine and power plant	Lyftkrok, motor och drivaggregat	A1	
0180	7 83 91 260	1		1 Crank	.Vax	A3	
0180	8 83 93 209	1		1 Spacer, engine	Mellanlägg, motor	(8393167)	
0200	9 83 91 450	1		1 Measuring tool, valve	Mätverktyg, ventilspel	AO-2	
0220	10 83 92 250	1		1. Measuring point	.Måtpets		
0240	11 83 91 633	1		1 Measuring plate, valve clearance adjustment	Måtplatta, justering av ventilspel	AO-2	
0280	12 83 91 419	1		1 Feeler gauge set	Tolkåtsåts. ventilspel	AO-1	
0300	13 83 91 989	1		1 Wrench, distributor	Nyckel, tändfördelare	AO-1	
0340	14 83 92 045	1		1 Adapter cpl. ignition setting	Adapter kpl tändinställning	AO-1	
0360	15 78 40 622	1		1 Dial indicator cpl.	Indikatorlocke kpl.	AO-2	
0400	16 78 14 908	1		1. Point 100 mm	.Måtpets 100 mm		
0420	17 78 14 916	1		1. Point 40 mm	.Måtpets 40 mm		
0440	18 83 91 401	1		1 Magnet tool	Magnetverktyg	A3	
0470	19 83 92 185	1		1 Key, crankshaft screw	Nyckel, vaxelskruv	AO-1	
0480	20 83 92 557	2		1 Spacing piece, synchro-tester	Mellanstycke, synkro-tester	AO-2	
0520	21 83 92 193	1		1 Valve seat cutter	Ventilsätesfräs kpl	A2	
0540	22 78 61 032	1		1. Cutter 75grad	.Fräs 75grad		
0560	22 83 92 201	1		1. Cutter 75grad	.Fräs 75grad		
0580	23 78 61 040	1		1. Cutter 11-45grad	.Fräs 11-45grad		
0620	23 83 92 219	1		1. Cutter 11-45grad	.Fräs 11-45grad		
0640	24 78 61 057	1		1. Guide spindle	.Styrspindel		
0660	25 78 61 065	1		1. T-key	.T-nyckel		
0680	26 78 62 014	1		1 Key, oil filter	Nyckel, oljefilter	AO-1	
0700	27 83 92 126	2		2 Guide pin, cylinder head	Styrapp, cylinderlock	A1	
0720	28 83 92 789	1		1 Mandrel, fuel jet carburetor, engine	Dorn, bränslemunstycke, förgasare, motor	A1	
0740	29 83 92 631	1		1 Removal and installation tools, valve guide	Demonterings och monteringsverktyg, ventilstyrning	A2	
0780	30 83 91 997	1		1 Drift, flywheel bearing	Dorn, svänghjulsleger	A3	
0800	31 83 92 326	1		1 Air nipple, spark plug	Luftnippel för tändstift	A3	
0820	32 83 92 953	1		1 Adjusting tool, carburetor, setting	Justerverktyg, förgasarinställning	AO-1	
0840	33 83 92 433	1		1 Key, fuel pump bracket	Nyckel, bränslepumpfäste	AO-2	
0860	34 83 93 183	1		1 Hose, volumetering, fuel pump, engine	Slang, mångdmätning, bränslepump, motor	A3-C1	
0880	35 83 92 516	1		1 Pressure testing equipment	Tryckmätutrustning	AO-2	
0900	36 83 92 607	1		1. Hose	.Slang		
0920	37 83 92 615	1		1. Nipple	.Nippel		
0940	38 78 60 513	X		X Loctite stud lock	Loctite skruvlåning		
0960	38 X	X		X Loctite 270	Loctite 270	45/3007218	
0980	38 X	X		X Loctite quickset	Loctite quickset	45/3007226	
1000	39 X	X		X Tikatit, can 1 pound	Tikatit, burk 1/2 kg	45/3007176	
1020	40 X	X		X Loquic activator grade 1	Loquic activator	45/3009590	
1040	41	X		X Plastigauge, measure bearing clearance	Plastigauge, för mätning av lagerspel	45/3006558	

R 9317-900

0 General	1-A02
1 Tools	1-H02
2 Engine	2-A02
3 Electrical system, instruments	2-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly, steering	3-B02
7 Suspension, wheels	3-C02
8 Body	3-D02
9 Accessories, labels	3-L02
10 Numerical register	4-A02

1 GROUP INDEX

Special tools, engine part 1	1-H06
Special tools, engine part 2	1-H08
Special tools, engine part 3	1-H12
Special tools, transmission (man. gear box) part 1	1-H14
Special tools, transmission (man. gear box) part 2	1-H18
Special tools, transmission (man. gear box) part 3	1-H22
Special tools, transmission (aut. gear box)	1-H24
Special tools, chassis	1-H04
Special tools, car body part 1	1-I10
Special tools, car body part 2	1-I14
Special tools, miscellaneous	1-I16

1280 •

Special tools.engine part 1	1-H06
Special tools.engine part 2	1-H08
Special tools.engine part 3	1-H12
Special tools. transmission (man.gear box) part 1	1-H14
Special tools.transmission (man.gear box) part 2	1-H18
Special tools.transmission (man.gear box) part 3	1-H22
Special tools.transmission (aut.gear box)	1-H24
Special tools.chassis	1-H04
Special tools. car body part 1	1-H10
Special tools. car body part 2	1-H14
Special tools. miscellaneous	1-H16

0200

Tools
Engine part 3

Verktyg
Motor del 3


Date
Datum
1987-10

Illustration
B id nr
R9318

Group
Grupp
1

Page
Sida
11

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR / L	Notes Anmärkning
		900	US				
0020	1 83 92 806	1		1 Guide spindle, valve seat cutter	Styrspindel, ventil-sättsfräs		A2 TURBO
0040	2 83 92 813	1		1 Pressure gauge, charging pressure	Måtarutrustning för laddningstryck		A1 TURBO
0080	3 83 92 912	1		1 Sealing pliers assy.	Pliombringsstång kpl.		A1 TURBO
0100	4 83 92 938	1		1 Punch with text	Stans med text		A1 TURBO
0120	5 83 93 126	1		1 Driving device, fuel transmitter	Drivanordning, bränsle givare		A1 TURBO
0140	6 83 93 159	1		1 Driving pin	Drivpinne		A1 TURBO
0160	7 83 92 961	1		1 Ring key	Ringnyckel		A1
0180	8 83 92 979	1		1 Pressure sleeve	Tryckhylsa		A1
0200	9 83 94 033	1		1 Lever clutch shaft engine	Hävtång, lamellaxel motor		A1
0220	10 83 94 306	1		1 Hook	Hake		A1
0240	11 83 92 987	1		1 Fly wheel stop	Svänghjulstopp		A1
0260	12 83 92 995	1		1 Adjusting tool, carburetor	Justerfixtur, förgasare		
0280	13 83 93 001	1		1 Adapter	Adaptor		AO-1
0295	14 83 93 019	1		1 Feeler gauge set	Bladmåttsets		AO-1
0267	15 83 93 027	1		1 Adjusting plunger	Inställningsstolk		AO-1
0270	16 83 93 035	1		1 Adjusting tool	Inställningsverktyg		AO-1
0280	17 83 93 043	1		1 Adapter	Adaptor		AO-1
0280	18 83 93 050	1		1 Fixture, valve removing and installing	Fixtur, ventildemont och montering		A2
0400	19 83 93 068	1		1 Base fixture	Grundfixtur		A2
0420	20 83 93 076	1		1 Lever	Hävtång		A2
0440	21 83 93 084	1		1 Valve, spring pressure	Ventiltjädertryckare		A2
0460	22 83 93 092	1		1 Fixing point	Fixerdubb		A2
0480	23 83 93 597	1		1 Pulse relation meter	Taktmätare		A1, LAMBDA SÖNDES SYSTEM

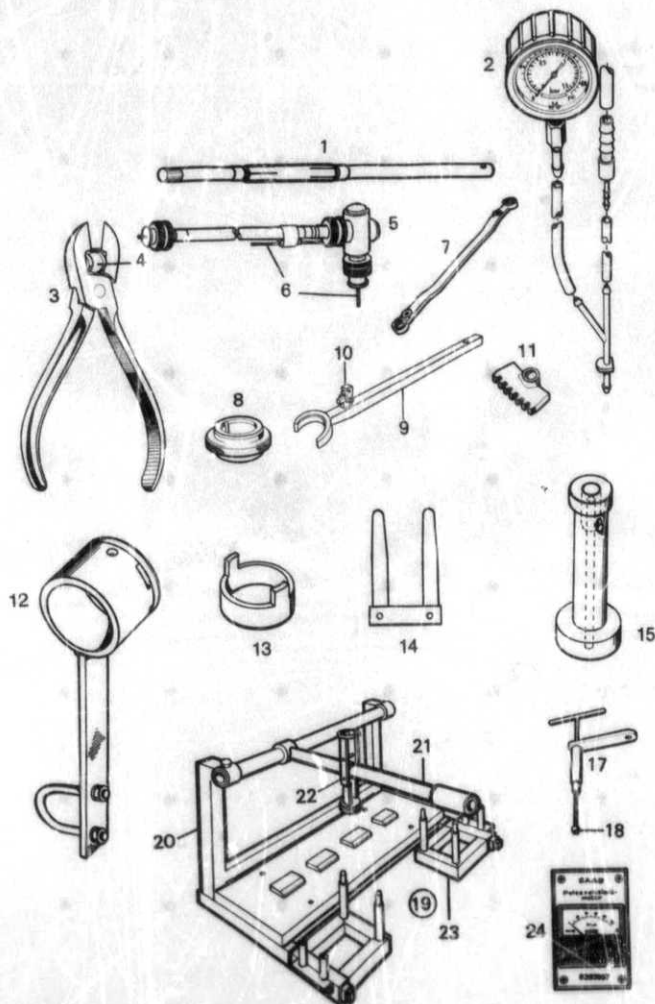

R 9318-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

1 GROUP INDEX

Special tools, engine part 1	1-H06
Special tools, engine part 2	1-H08
Special tools, engine part 3	1-H12
Special tools, transmission (man.gear box) part 1	1-H14
Special tools, transmission (man.gear box) part 2	1-H18
Special tools, transmission (man.gear box) part 3	1-H22
Special tools, transmission (aut.gear box)	1-H24
Special tools, chassis	1-I04
Special tools, car body part 1	1-I10
Special tools, car body part 2	1-I14
Special tools, miscellaneous	1-I16

0250

Tools
Transmission
manual gear box part 1

Verktyg
Kraftöverföring
manuell växellåda del 1

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10


R4692

1

13

Fig. Pos.	Part No Art nr	Quantity/Amtal	Description	Benämning	Notes Anmärkning
		900	US		
0020	1 83 90 155	1	1 Measuring tool cpl pinion (incl box)	Mätverktyg kpl pinjong (inkl låda)	1)A2
0040	2 83 90 130	1	1 Dynamometer cpl. (incl lacing)	Dynamometer kpl. (inkl snöre)	A2
0080	3 83 92 060	1	1 Centering arbor, clutch	Centreringsdorn, lemell	A3
0100	4 83 90 197	1	1 Hook wrench, intermediate shaft	Haknyckel, mellanaxel	A2
0120	5 83 90 114	1	1 Sleeve installation of 4th gear, bearing housing outer ring pinion and pinion shaft unit	Hylsa, montering av 4-ans drev, ytterring lagerhus, pinjong och pinjongaxel enhet	A2
0140	6 83 90 213	1	1 Ring, removal of 4th gear with bearing	Ring, demontering av 4-ans drev med lager	A2
0160	7 87 90 818	1	1 Drift, differential bearing	Dorn, differential-lager	A2
0200	8 83 90 312	1	1 Drift, installation of differential housing outer bearing ring, steering knuckle housing outer ring and steering knuckle housing seal ring	Dorn, montering av ytterring differentialhuslager ytterring styrspindelhus och tätningaring styrspindelhus	1)A2
0240	9 83 90 270	1	1 Tapping-out hammer	Slaghammare	A1
0241	10 83 90 858	1	1 End piece	Ändstopp	
0280	10A 87 90 917	1	1 Adapter	Adapter	5-SPEED
0300	11 87 90 529	1	1 Joint, removal of clutch shaft	Knut, demontering av lamellaxel	A1 M8
0320	12 83 90 098	1	1 Dolly, installation and removal of primary gear, primary gear bearing, primary gear wheel bearing, fourth gear bearing, pinion bearing housing outer roller bearing rings, and pinion shaft	Mothäll, montering och demontering av primärväxeldrev, lager primärväxeldrev, lager primärväxelhjul, lager ingående drev 4-ans, rullagens ytterringar pinjonglagerhus samt pinjong-Axel	A2
0340	13 83 90 205	1	1 Ring removal of primary gear roller bearing and installation of intermediate shaft inner ring and outer bearing	Ring, demontering av rullager primärväxelmontering av inre lager och yttre lager mellanaxel	A2
0360	14 83 90 262	1	1 Aligning arbor, installation of intermediate shaft	Styrdorn montering av mellanaxel	A2
0380	15 83 90 106	1	1 Drift, removal of pinion roller bearing outer ring and installation of primary gear housing roller bearing	Dorn, demontering av rullager ytterring pinjong och montering av rullager primärväxelhus	A2
0400	16 83 90 291	1	1 Washer, removal of bearing seat outer ring	Bricka, demontering av ytterring lagersäte	1)A2
0420	17 87 90 305	1	1 Installing- and removing tool, free wheel hub	Monterings- och demonteringsverktyg, frihjulsnäv	A2
0440	18 87 90 313	1	1 Sleeve	Hylsa	
0460	19 87 90 321	1	1 Key	Nyckel	

1. Also for automatic transmission

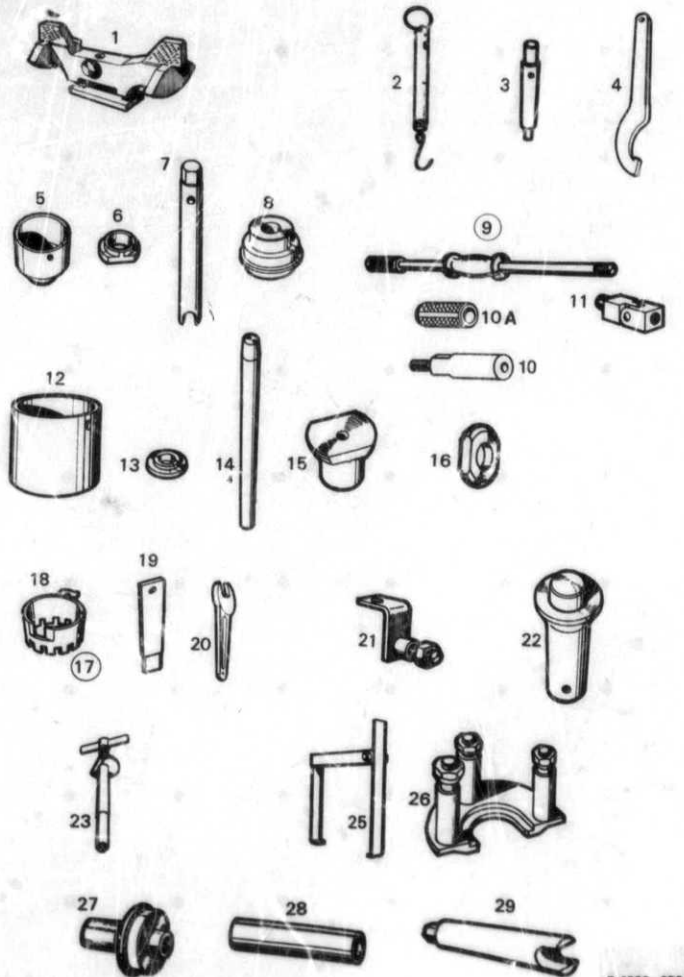

R 4692-900

0250

Tools Transmission manual gear box part 1				Verktyg Kraftöverföring manuell växellåda del 1				Date Datum	Illustration Bild nr	Group Grupp	Page Sida
								1987-10	R4692	1	15
Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning		Notes Anmärkning				
		900	US								
1180	20	83 90 072	1	1 Open-ended wrench.	Fäst nyckel.	mutter					
1200	21	83 90 288	1	1 Dial indicator retaining tool, back lash differential	pinjongaxel	Hållare indikator					
1220					klocka, mätning av						
1240					flankspel, differen-						
1260					tial						
1270											
1280	22	83 90 320	1	1 Drift, installation of differential bearing seat seal, and primary gear roller bearing, clutch shaft seal	Dorn, montering av	tätning differential-lagersäte, rullager primärväxeldrev, la-mellaxeltätning	1)A2				
1300											
1320											
1340											
1360											
1370											
1380	23	83 90 049	1	1 Puller, installation and removal of reverse gear shaft and intermediate shaft	Avdragare, montering och demontering av	backväxelaxel och mellanaxel	A2				
1400											
1420											
1440											
1460	25	87 90 776	1	1 Puller, removal of differential bearing seat	Avdragare, demontering	av differentialsätesätet	1) A1				
1480											
1500											
1520											
1540	26	87 90 768	1	1 Puller, removal of differential bearing ring	Avdragare, demontering	av differentialsätesätet	A2				
1560											
1580											
1600	27	78 41 141	1	1 Sleeve, pressing in ball bearing, differential bearing cap	Hylsa, inpresning	kullager, differential-lagersköld	A2				
1620											
1640											
1660	28	78 41 067	1	1 Sleeve, removal of ball bearing, differential bearing cap	Hylsa, demontering av	kullager differential-lagersköld, montering av	2)A2				
1680											
1700											
1720											
1740											
1760											
1770											
1780	29	87 90 818	1	1 Driver, differential bearing	Medbringare, differential-lager		A2				
1800											

1. Also for automatic transmission
2. Not as separate spare part

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

1 GROUP INDEX

Special tools, engine part 1	1-H06
Special tools, engine part 2	1-H08
Special tools, engine part 3	1-H12
Special tools, transmission (man. gear box) part 1	1-H14
Special tools, transmission (man. gear box) part 2	1-H18
Special tools, transmission (man. gear box) part 3	1-H22
Special tools, transmission (aut. gear box)	1-H24
Special tools, chassis	1-I04
Special tools, car body part 1	1-I10
Special tools, car body part 2	1-I14
Special tools, miscellaneous	1-I16

R 4692-900

0300

Tools
Transmission
manual gear box part 2

Verktyg
Kraftöverföring
manuell växellåda del 2

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1987-10 R4276

1

17

Fig. Pos.	Par No Art nr	Quantity/Åntal		Description	Benämning	K/S SR L	Notes Anmärkning
		900	US				
0020	1 87 90 412	1		1 Guide pin, clutch	Styrapp, koppling		A1 FOR 8392078
0040	2 83 91 229	1		1 Arbor, fitting reverse gear retaining spring	Dorn, montering av backspärrsfjäder		A3
0100	3 87 90 420	1		1 Wrench, transmission drain plug	Nyckel, avtappningsplugg växellåda		A0-1
0120	4 87 90 800	1		1 Arbor, seal inner driver	Dorn, inre medbringartätning		A2
0180	5 37 90 370	1		1 Wrench, special nut in gear lever housing	Nyckel, specialmutter växelspårhus		1)A1
0200	6 83 90 148	1		1 Sleeve, installation of pinion shaft unit, inner roller bearing, primary gear housing	Hylsa, montering av pinjongaxelenhet, inre rullager, pinjongrullager primär-växelhus, inerring och yttre lager mellanaxel, demontering av rullager primär-växeldrev		A2
0220				1 Roller bearing, bearing housing outer rings, intermediate shaft inner ring and clutch shaft seal	Yttre ringar lagerhus, inring mellanaxel		
0240				1 Drift, installation of bearing housing outer ring (pinion) and ball bearing on 4th gear, and removal of primary gear with bearing from bearing housing	Dorn, montering av yttre ring (pinjong), kullager på 4-ans drev, demontering av primärväxel-drev med lager ur lagerhus		A2
0260	7 83 90 122	1		2 Protective cover, inner drive shaft	Skyddlock, inre drivaxel		A1
0280	8 89 16 967	2		1 Key, oil fitting plug	Nyckel, oljepåfyllningsplugg		A0-1
0300	10 87 90 438	2		2 Guide pin, pinion bearing housing	Styrpinne pinjong-lagerhus		A2
0320	11 87 90 446	1		1 Retainer, pinion shaft	Hållare, pinjongaxel		A2
0340	12 87 90 636	1		1 Fixture, removal and installation of bearing from pinion	Fixtur, demontering och montering av lager från pinjong		A2 SEE ALSO AUTOMATIC GEAR BOX
0360	13 87 90 669	1		1 Puller ring	Avdragarring		NOT USED FOR MANUAL GEAR BOX
0380	14 87 90 651	1		1 Puller ring	Avdragarring		NOT USED FOR MANUAL GEAR BOX
0400	15 87 90 644	1		1 Installing ring	Monteringsring		5-SPEED
0420	14 87 90 933	1		1 Puller ring	Avdragarring		5-SPEED
0440	15 87 90 926	1		1 Installing ring	Monteringsring		A2
0460	16 87 90 453	1		1 Key, pinion shaft nut	Nyckel, pinjongaxelmutter		A2
0480	17 87 90 461	1		1 Washer, ring pinion	Bricka, ring pinjong-lagerhus		A2
0500	18 87 90 479	1		1 Washer, wheel primary gear	Bricka, hjul primär-växel		A2
0520	19 87 90 487	1		1 Sleeve, bearing differential case	Hylsa, lager differentialhus		A2
0540	20 87 90 503	1		1 Catch, back wheel	Spärr, backhjul		A2
0560	21 87 90 511	1		1 Puller, pinion shaft	Avdragare pinjongaxel		A2
0580	22 78 40 853	1		1 Screw	Skruv		5-SPEED
0600	22A 87 90 909	4		4 Spacer screw	Distansskruv		


1. Also for automatic transmission

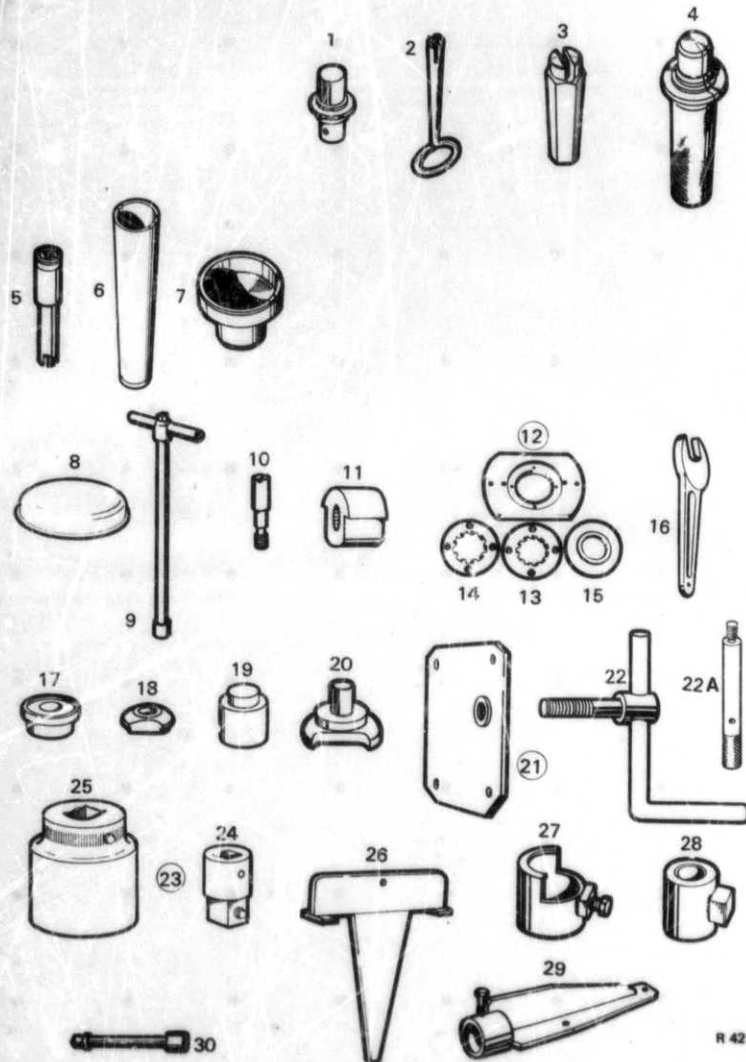

R 4276-900

0300

Tools				Verktyg		Date	Illustration	Group	Page
Transmission				Kraftöverföring		Datum	Bild nr	Grupp	Sida
manual gear box part 2				manuell växellåda del 2		1987-10	R4276	1	19
Fig. Pos.	Part No Art nr	Quantity/Amount			Description	Benämning	K S	Notes	
		900		US				S R	Anmärkning
1190	23	87 90 560	1		1 Sleeve assy, end nut	Hylsa kpl, ändmutter		A2	
1200					pinion shaft	pinjongaxel			
1220	24	83 90 684			Spacing piece, 3/4"	Mellanstycke, 3/4"			
1240					1/2"	1/2"			
1260	25	87 90 578	1		1 Sleeve, 42 mm	Hylsa, 42 mm			
1280	26	87 90 552	1		1 Measuring device,	Inställningsmätt,		A2	
1300					synchronizing	synkronisering			
1320	27	87 90 677	1		1 Puller, seal ring gear	Avdragare, tätningss-		A1	
1340					shift shaft	ring växelföraxel			
1360	28	87 90 685	1		1 Installing tool, seal	Monteringsverktyg,		A1	
1380					ring gear shift shaft	tätningssring växel-			
1400						föraxel			
1420	29	83 90 460	1		1 Holder, gear box	Hållare, växellåda		A2 FOR 7861478, 7860794, 7860677, 7860685	
1440								1) A1	
1460	30	78 61 081	1		1 Square pin, oil	Fyrkantnapp, oljeplugg			
1480					draining plug				

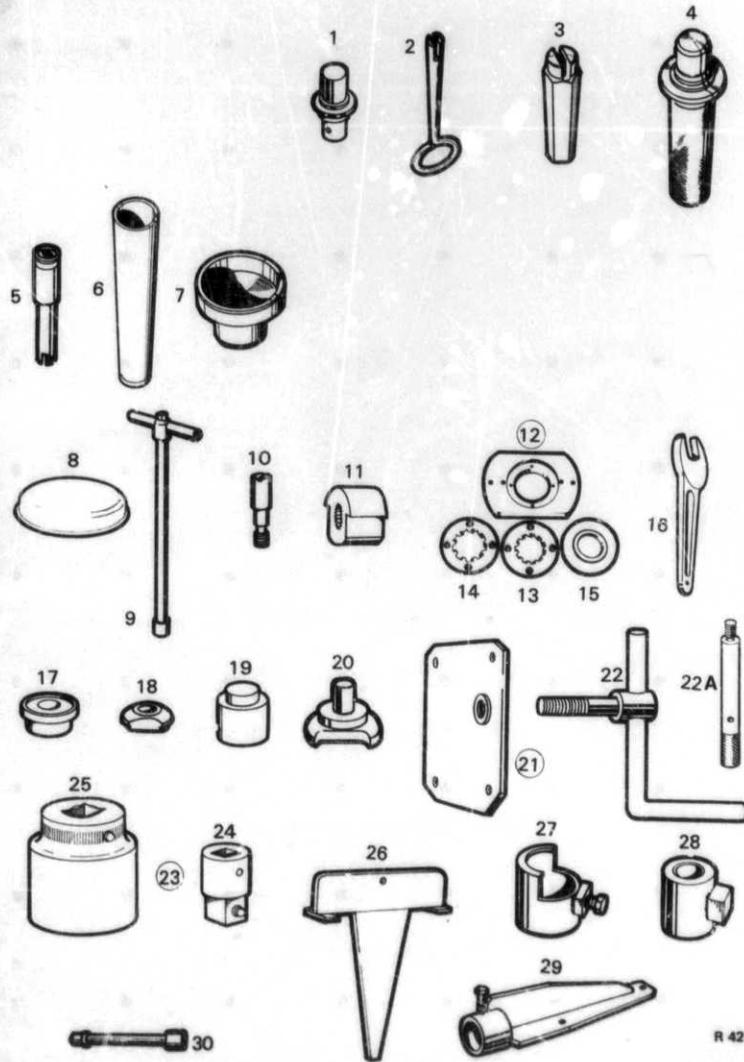






R 4276-900

1. Also for automatic transmission

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

1 GROUP INDEX

Special tools, engine part 1	1-H06
Special tools, engine part 2	1-H06
Special tools, engine part 3	1-H12
Special tools, transmission	
(man. gear box) part 1	1-H14
Special tools, transmission	
(man. gear box) part 2	1-H18
Special tools, transmission	
(man. gear box) part 3	1-H22
Special tools, transmission	
(aut. gear box)	1-H24
Special tools, chassis	1-H04
Special tools, car body part 1	1-H10
Special tools, car body part 2	1-H14
Special tools, miscellaneous	1-H16

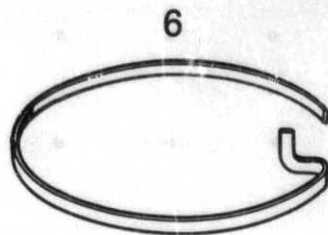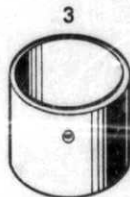

R 9319-900

SAAB
genuine parts
original reservdelar

1-H22

SAAB 900
M79-80

0350


Tools				Verktyg		Date	Illustration	Group	Page
Transmission				Kraftöverföring		Datum	Bild nr	Grupp	Sida
manual gear box part 3				manuell växellåda del 3		1987-10	R9319	1	21
Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S S/R	Notes	
		900		US				Anmärkning	
0020	1 87 90 891	1			1 Extractor - pressing sleeve, for sprocket in primary gear	Avdragare - presshylsa, kedjedrev primärväxel		A2	
0040	3 87 90 859	1			1 Sieve, fitting bearing in primary gear	Presshylsa, montering av rullager i primär-växeldrev		A2 TURBO	
0060	4 87 90 867	1			1 Installation ring, fitting bearing onto input shaft in gear-box	Monteringsring för rullager ingående axel, växellåda		A2 TURBO	
0140	5 87 91 576	1			1 Lock pin	Låspinne		A2	
0180	6 87 91 618	1			1 Spacer	Mellanlägg		A1	
0200									
0220									
0240									
0250									
0270									
0290									

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

1 GROUP INDEX

Special tools.engine part 1	1-H06
Special tools.engine part 2	1-H08
Special tools.engine part 3	1-H12
Special tools, transmission (man.gear box) part 1	1-H14
Special tools.transmission (man.gear box) part 2	1-H18
Special tools.transmission (man.gear box) part 3	1-H22
Special tools.transmission (aut.gear box)	1-H24
Special tools.chassis	1-I04
Special tools, car body part 1	1-I10
Special tools, car body part 2	1-I14
Special tools, miscellaneous	1-I16

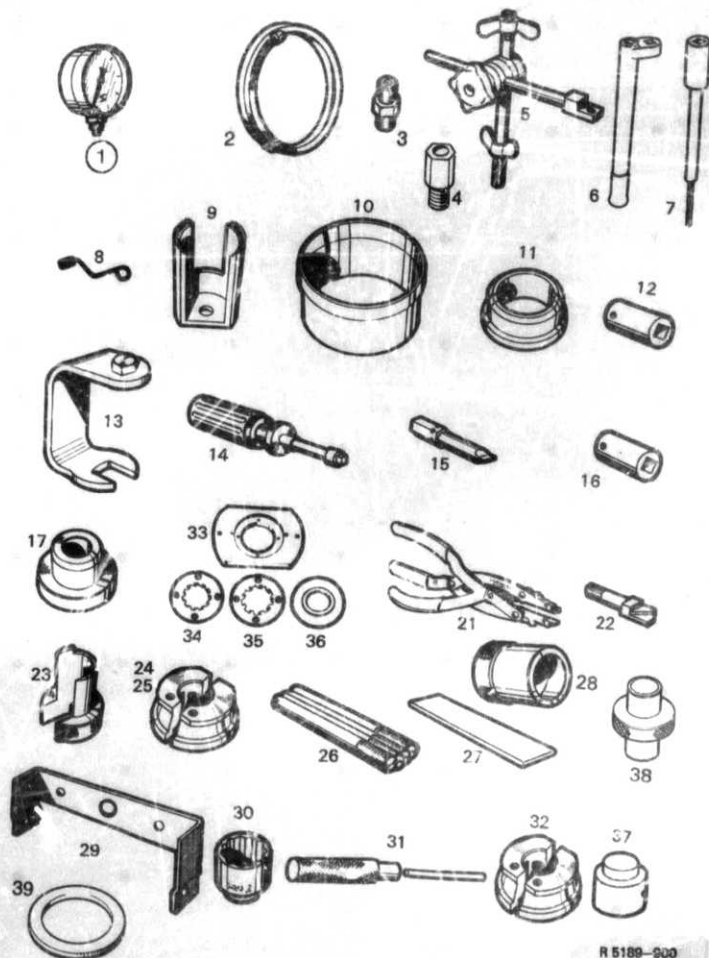

R 5189-900

900

Tools		Verktyg		Date	Illustration	Group	Page
Transmission		Kraftöverföring		Datum	Bild nr	Grupp	Sida
automatic gear box		automatisk växellåda		1937-10	R5189	1	23
Fig. Pos.	Part No. Art nr	Quantity/Amtel	Description	Benämning	Notes		
		900	U.		S/R	Anmärkning	
0060	1 87 91 055	1	1	Manometer	Männometer	(87 90 347)	
0170	2 87 91 071	1	1	1. Hose	Slang	(87 90 040)	
0120	3 87 91 089	1	1	1. Adapter	Adapter	(87 90 073)	
0130	4 87 91 105	1	1	1. Spreading plate	Mellanstycke		
0140	5 87 90 727	1	1	1. Support assy, end play check, gear train and gear backlash	Fäste kpl, mätning av spel i planetväxel samt mätning av flänspel		
0180							
0200							
0220	6 87 90 875	1	1	1. Adjusting key	Justernyckel	A-2	
0240	7 87 90 883	1	1	1. Hexagon key, adjuster selector	Hexagonnyckel, justering växelskärare	A1	
0260							
0280	3 87 90 113	1	1	1. Front band spacer gauge	Mellanlängd justering av främre band	2)	
0300							
0320	9 87 90 081	1	1	1. Sleeve, spring compressor rear clutch	Hylsa, montering och demontering av fjäder bakre koppling		
0340							
0360							
0380	10 87 90 893	1	1	1. Sleeve, rear clutch piston replacer	Hylsa, montering av kolv, bakre koppling		
0400							
0420	11 87 90 107	1	1	1. Sleeve, front clutch piston replacer	Hylsa, montering av kolv, främre koppling		
0440							
0460	12 87 90 115	1	1	1. Sleeve, rear servo (adapter) socket	Hylsa, justering av bakre band	2)	
0480							
0500	13 87 90 123	1	1	1. Key, inhibitor switch lock nut	Nyckel, lås nutter på kontakt, tändning och backlås		
0520							
0540							
0560	14 87 50 131	1	1	1. Spintorque screw driver	Momentnyckel	3)	
0580							
0600	15 87 90 140	1	1	1. Screwdriver, adapter	Skruvmejsel, adapter		
0620	16 87 90 156	1	1	1. Socket, front servo adjusting	Hylsa, justering av främre band		
0640							
0660	17 87 90 164	1	1	1. Sleeve, pinion housing oil seal replacer	Hylsa, demontering och montering av oljetätning pinjonghus		
0680							
0700							
0720	21 87 90	1	1	1. Pliers	Tång		
0740	22 87 90	1	2	2. Set of jaws	Kär		
0760	23 87 90 3	1	1	1. Cliprod terminal spring replacer	Demoneringsverktyg, växelvälljarsvare		
0780							
0800	24 87 90 537	1	1	1. Ring, removal and installation of outer ring, rear pinion bearing	Ring, montering och demontering av ytterring, bakre pinjong-lager		
0820							
0840							
0860	25 87 90 214	1	1	1. Ring, removal and installation of front pinion bearing	Ring, montering och demontering av främre pinjong-lager		
0880							
0900							
0920	26 87 90 222	1	1	1. Pinion housing guide	Stödjare, pinjonghus		
0940							
0960	27 87 90 230	1	1	1. Primary drive sprocket guide	Motör, drag primärväxel		
0980							
1000	28 87 90 248	1	1	1. Support, centraliser pump and oil pump	Centreringshylsa oljepump		
1020							
1040	29 87 90 255	1	1	1. Transport bracket, converter	Transportstöd, momentomvandlare		
1060	30 87 90 263	1	1	1. Sleeve 2", pinion nut socket	Hylsa 2", mutter pinjong-lager		
1080							
1100	31 87 90 510	1	1	1. Mandrel, removal of ring gear	Dorn, demontering av ringhjul		
1120							
1140	32 87 90 206	1	1	1. Ring, removal and installation of outer ring pinion bearing	Ring, montering och demontering av ytterring, bakre pinjong-lager		
1160							
1180							
1200							
1220							

2. Not as separate spare part

0	General	1-A02
1	Tools	1-H23
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly Steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, Luggage	3-L02
10	Numerical register	4-A02

1 GROUP INDEX

Special tools, engine part 1	1-H00
Special tools, engine part 2	1-H03
Special tools, engine part 3	1-H12
Special tools, transmission (man gear box) part 1	1-H10
Special tools, transmission (man gear box) part 2	1-H18
Special tools, transmission (man gear box) part 3	1-H22
Special tools, transmission (auto gear box)	1-H23
Special tools, chassis	1-H04
Special tools, car body part 1	1-H10
Special tools, car body part 2	1-H14
Special tools, miscellaneous	1-H16

0400

Tools
Transmission
automatic gear box

Varktyg
Kraftöverföring
automatisk växellåda


Date
Datum
1987-10

Illustration
Bild nr
R5189

Group
Grupp
1

Page
Sida
25

Fig. Bil.	Part No Art nr	Quantity/Antal		Description	Benämning	Notes	
		900	US			K/S	Anmärkning
1220	33	87 90 636	1	1 Fixture, removal and installation of bearing on pinion	Fixtur, demontering och montering av lager på pinjong		A2 SEE ALSO MANUAL GEARBOX
1340	34	87 90 669	1	1 Puller ring	Avdragarring		
1340	35	87 90 851	1	1 Puller ring	Avdragarring		
1320	36	87 90 844	1	1 Installing ring	Monteringsring		
1340	37	87 90 487	1	1 Sleeve, bearing differential case	Hyssa, lager differentialhus		A2 ALSO FOR MANUAL GEARBOX
1360	38	87 90 941	1	1 Mandrel, installation of seal ring in oil pump	Pressdon, montering av tättningsring i oljepump		A2
1400	39	87 91 022	1	1 Spacer ring	Distansring		USE WITH 87 90 164 AND 83 90 445

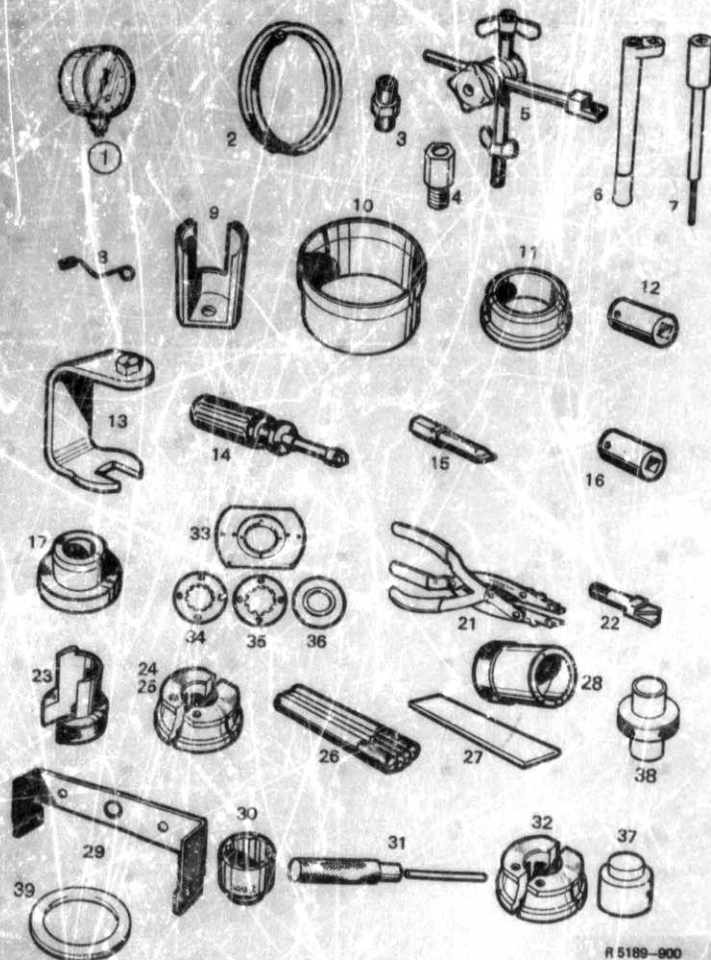


R 5189-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-P02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

1 GROUP INDEX

Special tools, engine part 1	1-H06
Special tools, engine part 2	1-H08
Special tools, engine part 3	1-H12
Special tools, transmission (man. gear box) part 1	1-H14
Special tools, transmission (man. gear box) part 2	1-H18
Special tools, transmission (man. gear box) part 3	1-H22
Special tools, transmission (aut. gear box)	1-H24
Special tools, chassis	1-I04
Special tools, car body part 1	1-I10
Special tools, car body part 2	1-I14
Special tools, miscellaneous	1-I16

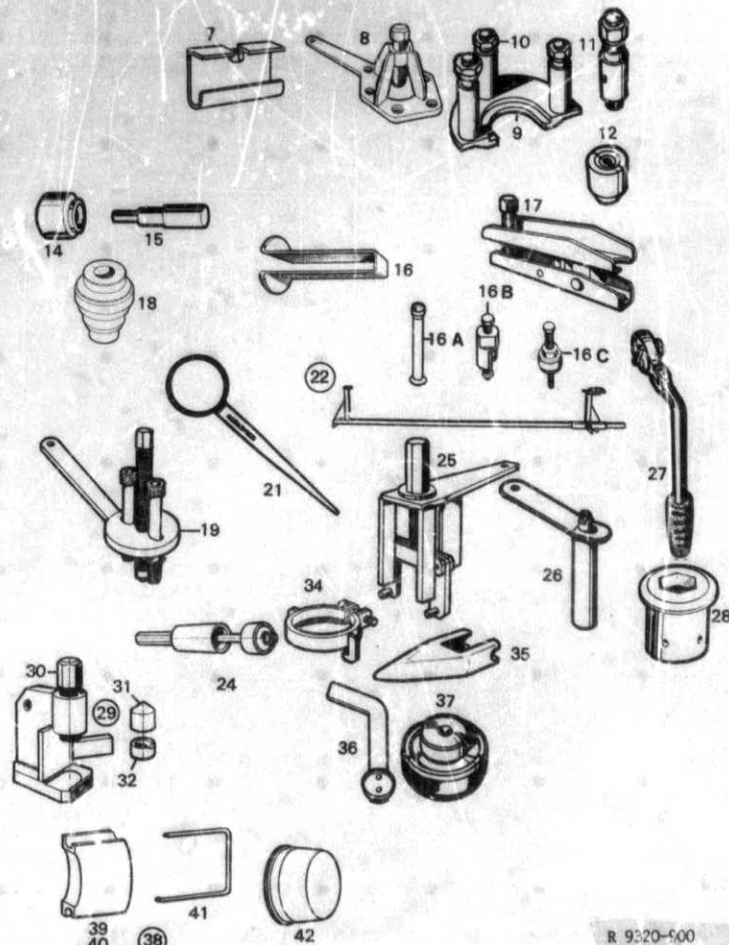

R 9320-500

0450

Tools
Chassis, part 1

Verktyg
Chassi, del 1

Date
Datum
1987-10

Illustration
Bild nr
R9320

Group
Grupp
1

Page
Sida
27

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S S/R	Notes Anmärkning
		900		US				
0180	7 89 96 175	1			1 Removing tool, u-pin	Demonteringsverktyg, u-pinne		A0-2
0220	7 89 96 183	1			1 Removing tool, u-pin	Demonteringsverktyg, u-pinne		A0-2
0240	8 89 96 084	1			1 Puller, removal of front and rear axle hubs, front axle outer bearing ring, outer drive shaft, gearbox differential housing bearing ring and engine chain wheel	Avdragare, demontering av nav fram och bakaxel, yttre lager-ring framaxel, yttre drivaxel, lagring differentialhus växelåda, kedjedrev, motor		A2 ALSO FOR AUTOMATIC TRANSMISSION, SEE TRANSMISSION TOOLS
0400	9 89 95 250	1			1 Puller, removal of front wheel hub bearings, gear box differential housing bearing ring, and engine chain wheel	Avdragare, demontering av lager framhjulsnä, lagring differentialhus växelåda, kedjedrev, motor		A2 ALSO FOR AUTOMATIC TRANSMISSION, SEE TRANSMISSION TOOLS
0401	10 89 09 145	3			3 Wheel nut	Hjulnutt		A2, SEE TRANSMISSION TOOLS
0420	11 89 95 243	2			2 Spacer bolt, removal of front axle hub	Distansbult, demontering av nav framaxel		A2
0440	12 89 95 177	1			1 Dolly, removal of front axle hub and gearbox differential housing bearing ring	Möthåll, demontering av nav framaxel och lagring differentialhus växelåda		A2, ALSO FOR AUTOMATIC TRANSMISSION, SEE TRANSMISSION TOOLS
0460	14 78 41 331	1			1 Installing tool, bushing upper control arm	Monteringsverktyg, bushning övre sväng-arm		A3
0480	15 78 41 349	1			1 Installing tool, bushing lower control arm	Monteringsverktyg, bushning nedre sväng-arm		A3
0500	16 89 96 395	1			1 Removing yoke, power steering gear, chassis	Demontering byg, servostyrväxel, chassi		A2
0501	16A 89 96 407	1			1 Pressing sleeve, end piece, power steering	Presshylsa, ändstycke, servostyrning		A2
0520	16B 89 96 415	1			1 Installing tool, belt pulley, power steering	Monteringsverktyg, remskiva, servostyrning		A2
0540	16C 89 96 423	1			1 Puller, belt pulley, power steering	Avdragare, remskiva, servostyrning		A2
0560	17 89 95 409	1			1 Puller, removal of tie rod ends and ball bolts	Avdragare, demontering av styrstags-ändar och kulbultar		A1
0580	18 89 95 241	1			1 Mandrel, rear wheel hub, chassis	Pressdorn, bakhjulsnä, chassi		A2
0600	19 89 96 258	1			1 Steering wheel puller	Rattavdragare, chassi		A02
0620	21 89 95 807	1			1 Brake spring tool	Bromsfjädersverktyg, montering och demontering av bromsfjädrar		A0-2
0640	22 98 19 013	1			1 Tool for measuring toe-in	Verktyg för uppmätning av toe-in		A2
0660	24 89 96 274	1			1 Tool for rear axle chassis	Verktyg för bakaxel, chassi		A3
0680	25 89 95 771	1			1 Removing tool, brake pad	Demonteringsverktyg, bromsklotts		A3
0700	26 89 95 755	1			1 Bleeding wrench	Urluftningsnyckel		A0-2
0720	27 89 95 763	1			1 Ratchet wrench	Spärnnyckel, framvagnsjustering		A0-2
0740	28 89 95 805	1			1 Sleeve, wheel nut	Hylsa hjulnutt		A0-1
0760	29 89 95 820	1			1 Tool, wheel screw	Verktyg, hjulskruv		A3
0780	30 89 95 581	1			1 Screw	Skruv		


0 General	1-A02
1 Tools	1-H02
2 Engine	2-A02
3 Electrical system, Instruments	2-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly, Steering	3-B02
7 Suspension, Wheels	3-C02
8 Body	3-D02
9 Accessories, Labels	3-L02
10 Numerical register	4-A02

1 GROUP INDEX

Special tools, engine part 1	1-H06
Special tools, engine part 2	1-H08
Special tools, engine part 3	1-H12
Special tools, transmission (man.gear box) part 1	1-H14
Special tools, transmission (man.gear box) part 2	1-H18
Special tools, transmission (man.gear box) part 3	1-H22
Special tools, transmission (aut.gear box)	1-H24
Special tools, chassis	1-I04
Special tools, car body part 1	1-I10
Special tools, car body part 2	1-I14
Special tools, miscellaneous	1-I16

0480

Tools		Verktyg		Date	Illustration	Group	Page
Chassis, part 1		Chassi, del 1		Datum	Bild nr	Grupp	Sida
				1987-10	R9320	1	29
Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	Notes	
		900	US			K/S	Anmärkning
						S/R	
1460	31 89 95 896	1		1. Installing sleeve	Monteringshylsa		
1480	32 89 95 904	1		1. Removing sleeve	Demoneringshylsa		
1540	34 89 95 797	1		1. Puller, brake disc	Avdragare bromskiva	A3	
1560	35 89 95 813	1		1. Installing tool, bellows steering wheel shaft	Monteringsverktyg, damask rättstång	A3	
1600							
1620	36 89 96 043	1		1. Key, brake piston	Nyckel, bromskolv	1) AO-2	
1640	37 89 96 088	1		1. Pressing in drift	Införningsdon	1) A2	
1660	38 89 96 191	1		1. Grinding set, brake disc	Slipsets, bromsskiva	A1	
1680							
1700	39 89 82 201	1		1. Grinding pad LH	Slipklots V	A1	
1720	40 89 96 217	1		1. Grinding pad RH	Slipklots H	A1	
1740	41 89 96 225	1		1. U-pin	U-pinna	A-1	
1760	42 89 96 233	1		1. Wheel bolt guard	Hjulbultskydd	A-1	

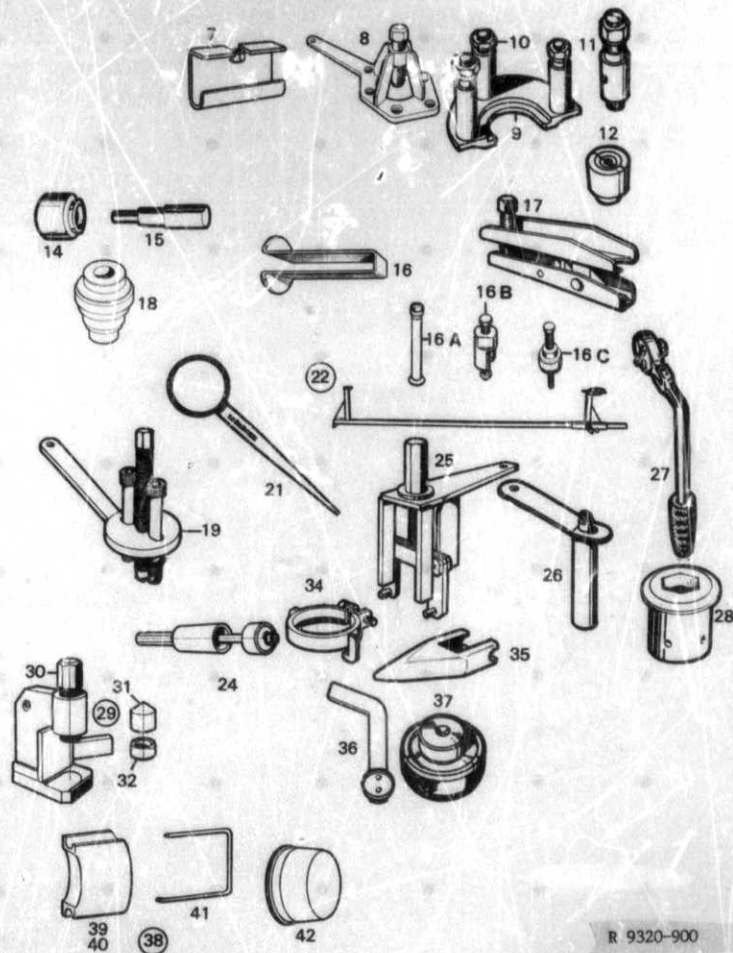


R 9320-900

1. Also for automatic transmission

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

1 GROUP INDEX

Special tools, engine part 1	1-H05
Special tools, engine part 2	1-H06
Special tools, engine part 3	1-H12
Special tools, transmission	
(man. gear box) part 1	1-H14
Special tools, transmission	
(man. gear box) part 2	1-H18
Special tools, transmission	
(man. gear box) part 3	1-H22
Special tools, transmission	
(aut. gear box)	1-H24
Special tools, chassis	1-I04
Special tools, car body part 1	1-I10
Special tools, car body part 2	1-I14
Special tools, miscellaneous	1-I16

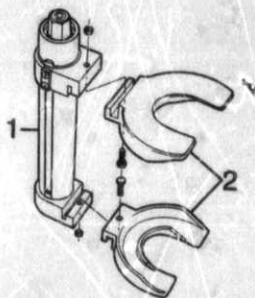

R 9321-900

SAAB
genuine parts
original reservdelar

1-108

SAAB 900
M79-80

MASTER INDEX

0475

Tools
Chassis, part 2

Verktyg
Chassi, del 2

Date
Datum

1987-10

Illustration
Bild nr

R9321

Group
Grupp

1

Page
Sida


31

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S S/R	Notes Anmärkning
		900						
0020	1	88 18 791	1		Spring press	Fjäderpress		
0030	2	88 18 809	1		Holder	Hållare		

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

1 GROUP INDEX

Special tools.engine part 1	1-H06
Special tools.engine part 2	1-H08
Special tools.engine part 3	1-H12
Special tools.transmission (man.gear box) part 1	1-H14
Special tools.transmission (man.gear box) part 2	1-H10
Special tools.transmission (man.gear box) part 3	1-H22
Special tools.transmission (aut.gear box)	1-H24
Special tools.chassis	1-I04
Special tools, car body part 1	1-I10
Special tools, car body part 2	1-I14
Special tools, miscellaneous	1-I16

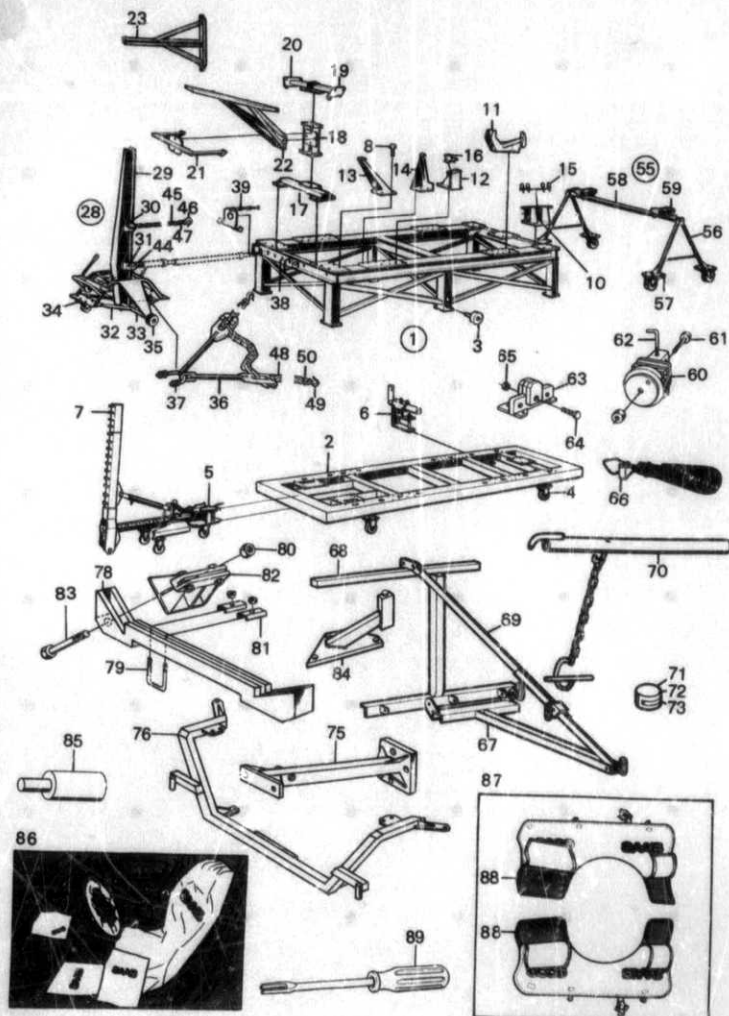

R 9322-900

SAAB
genuine parts
original reservdelar

1-110

SAAB 900
M79-80

MASTER INDEX

6500

Tools
Car body, part 1

Verktyg
Kaross, del 1

Date
Datum
1987-10

Illustration
Bild nr
R9322

Group
Grupp
1


Page
Sida
33

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0020	1 82 90 140	1		1 Aligning bench	Riktbank kpl		B2 CONCERNING HYDRAULIC EQUIPMENT ALIGNING BENCH / DRIVING ALIGNER IS DELETED
0040							B2 ALTERN TO 82 90 140
0050							PART OF 82 90 140
0080	2 82 91 908	1		1 Aligning bench	Riktbank		PART OF 82 91 908
0100	3 82 90 157	2		2 Wheel	Hjul		PART OF 82 91 908
0120	4 82 91 874	4		4 Wheel	Hjul		PART OF 82 91 908
0140	5 82 91 890	1		1 U-attachment, driving aligner	U-fäste, dragriktare		PART OF 82 91 908
0180	6 82 92 088	1		1 Attachment, tension bellow	Fäste, dragning nedåt		PART OF 82 91 908
0190							PART OF 82 91 908
0200	7 82 92 153	1		1 Extension, driving aligner	Förlängningsdel, dragriktare		PART OF 82 91 908
0210							
0230	8 70 61 558	20		20 Screw	Fästskruv		
0240	10 82 92 302	1		1 Front support LH	Främre stöd V		
0250	10 82 92 310	1		1 Front support RH	Främre stöd H		
0260	11 82 90 298	1		1 Couff support LH	Tröskelstöd V		
0270	11 82 90 306	1		1 Couff support RH	Tröskelstöd H		
0280	12 82 90 223	1		1 Support, middle floor LH	Stöd mittre golv V		
0290							
0300	12 82 90 231	1		1 Support, middle floor RH	Stöd mittre golv H		
0310							
0320	13 82 90 421	1		1 Support, rear floor	Stöd bakre golv		
0330	14 82 90 470	1		1 Support, rear wheel housing	Stöd bakre hjulhus V		
0340							
0350	14 82 90 470	1		1 Support, rear wheel housing RH	Stöd bakre hjulhus H		
0360							
0370	15 82 90 439	1		1 Check support, front LH	Kontrollstöd, fram V		
0380							
0390	15 82 90 447	1		1 Check support, front RH	Kontrollstöd, fram H		
0400							
0410	16 82 90 185	2		2 Check support, rear	Kontrollstöd, bak		
0420	17 82 90 852	1		1 Intermediate piece	Mellanstycke		
0430	18 82 90 680	1		1 Pillar	Pelare		
0440							
0450	19 82 92 328	1		1 Support, front bearing bracket LH	Stöd, främre lagerkonsol V		
0460							
0470	20 82 92 336	1		1 Support, front bearing bracket RH	Stöd, främre lagerkonsol H		
0480							
0490	21 82 91 718	1		1 Fixture, steering gear bracket	Fixtur, styrväxelinfästning		
0500							
0510	22 82 91 742	1		1 Fixture, front floor	Fixtur, främre golv		
0520	23 82 90 728	1		1 Fixture, engine support	Fixtur, motorfästen		
0530							
0540	28 82 91 973	1		1 Driving aligner assy	Dragriktare kpl		B2 (82 90 322)
0550	29 82 90 801	1		1 Lever	Hävarm		PART OF 82 90 140
0560	30 82 90 256	1		1 Driver head	Draghuvud		PART OF 82 90 140
0570	31 82 90 330	1		1 Pressure head	Tryckhuvud		PART OF 82 90 140
0580	32 82 90 284	1		1 Trolley	Vagn		PART OF 82 90 140
0590	33 82 90 371	1		1 Shaft	Åxel		PART OF 82 90 140
0600	34 82 90 520	2		2 Link roller	Länkrulle		PART OF 82 90 140
0610	35 82 90 538	2		2 Iron wheel	Järnhjul		PART OF 82 90 140
0620	36 82 90 405	2		2 Anchorage head	Förankringshuvud		PART OF 82 90 140
0630	37 82 91 288	1		1 Fastening yoke	Förankringsbygel		PART OF 82 90 140
0640	38 82 90 173	1		1 Pressure piece	Tryckbalk		PART OF 82 90 140
0650	39 82 91 270	1		1 Safety chain	Säkerhetskedja		PART OF 82 90 140
0660	44 82 90 389	1		1 Sleeve for ball and needle hydraulic equipment	Hylsa för bäl och nål hydraulisk utrustning		B2 PART OF 82 90 140
0670							
0680	45 82 91 320	1		1 Pulling chain	Dragkätting		B2 PART OF 82 90 140
0690	46 82 91 338	1		1 Hook	Krok		B2 PART OF 82 90 140
0700	47 82 91 346	1		1 Link	Hammerlock länk		B2 PART OF 82 90 140
0710	48 82 91 361	2		2 Anchorage chain	Förankringskätting		B2
0720	48 82 91 379	2		2 Hook	Krok		B2 PART OF 82 90 140
0730	50 82 91 387	2		2 Link	Hammerlock länk		B2 PART OF 82 90 140

0 General	1-A02
1 Tools	1-H02
2 Engine	2-A02
3 Electrical system, instruments	2-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly, steering	3-B02
7 Suspension, wheels	3-C02
8 Body	3-D02
9 Accessories, labels	3-L02
10 Numerical register	4-A02

1 GROUP INDEX

Special tools, engine part 1	1-H06
Special tools, engine part 2	1-H08
Special tools, engine part 3	1-H12
Special tools, transmission (man.gear box) part 1	1-H14
Special tools, transmission (man.gear box) part 2	1-H18
Special tools, transmission (man.gear box) part 3	1-H22
Special tools, transmission (aut.gear box)	1-H24
Special tools, chassis	1-H04
Special tools, car body part 1	1-110
Special tools, car body part 2	1-114
Special tools, miscellaneous	1-116

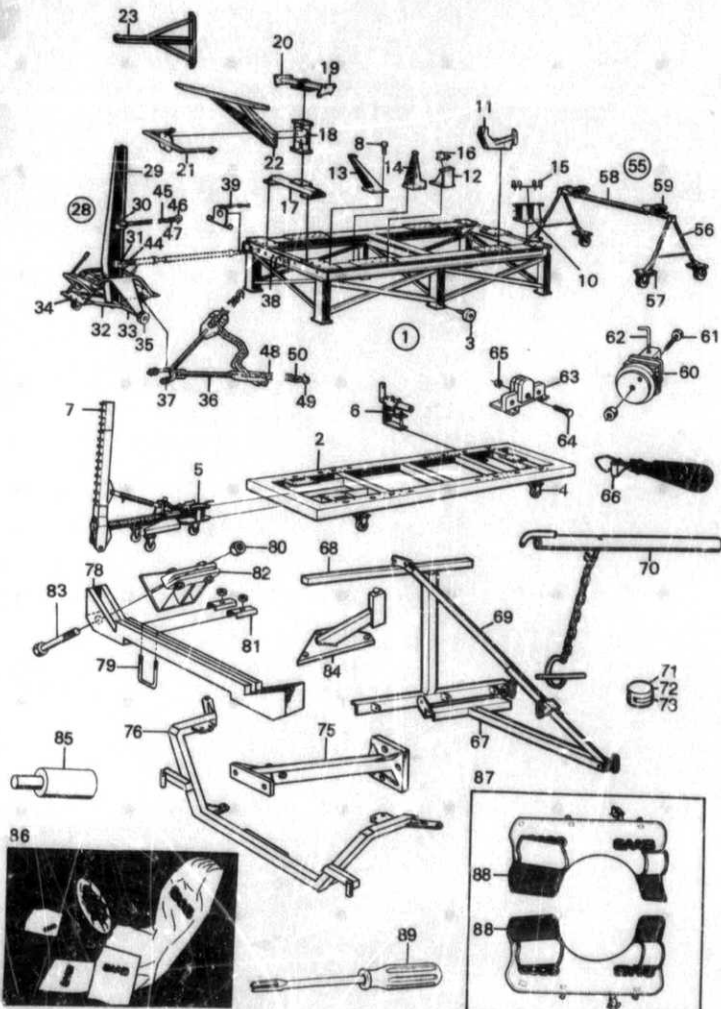

R 9322-900

SAAB
genuine parts
original reservdelar

1-112

SAAB 900
M79-80

MASTER INDEX

Tools
Car body, part 1

Verktyg
Kaross, del 1

Date
Datum
1987-10

Illustration
Bild nr
R9322

Group
Grupp
1

Page
Sida
35

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
1300	55 82 90 272	1		1 Trestle assy.set	Pallbock kpl.sats		B2, IS DELETED
1320	56 82 90 594	4		4 Trestle	.Benstativ		PART OF 8290140
1340	57 82 90 546	8		8 Link roll	.Länkrulle		PART OF 8290140
1360	58 82 90 702	2		2 Yoke	.Ök		PART OF 8290140
1380	59 82 90 230	4		4 Wood plate	.Träplatta		PART OF 8290140
1400	60 82 92 161	1		1 Aligner bracket	.Dragriktfäste		B2
1420	61 82 92 179	1		1 Screw	.Skruv		
1440	62 82 97 187	1		1 Lock pin	.Låspinne		
1460	63 82 92 237	1		1 Aligner bracket	.Dragriktfäste		
1480	64 82 92 260	1		1 Screw	.Skruv		
1500	65 82 92 278	1		1 Nut	.Mutter		
1520	66 82 91 023	1		1 Installing tool, window moulding	.Monteringsverktyg, dekorationslist, gläsruta		A2
1540							
1560	67 78 84 166	1		1 Holder door	.Hållare dörr		B3
1580	68 82 90 561	1		1 Holder door	.Hållare dörr		B3
1600	69 78 84 182	1		1 Stay holder door	.Stag, hållare, dörr		B3
1620	70 82 91 577	1		1 Tool spring, trunk lid	.Verktøj, bagage-lucksfjäder		A2
1640							
1660	71 82 91 767	1		1 Pad, front window	.Mellanlägg, frontruta		A2
1680	72 82 91 775	1		1 Pad, side window	.Mellanlägg, sidoruta		A2
1700	73 82 91 561	1		1 Pad, rear window	.Mellanlägg, bakruta		A2
1800	75 82 92 344	1		1 Intermediate piece, front fixture	.Mellanstycke, framdelsfixtur		
1820	76 82 92 351	1		1 Front fixture	.Framdelsfixtur		
1840	77 82 92 369	1		1 Anchorage member	.Förankringsbelk		
1860	78 82 92 377	1		1 Yoke	.Bygel		
1880	80 80 74 148	1		1 Nut	.Mutter		
1900	81 82 92 385	1		1 Yoke	.Ök		
1920	82 82 92 393	1		1 Clamp	.Karosklämma		
1940	83 80 21 073	1		1 Screw	.Skruv		
1960	84 82 92 427	1		1 Support	.Tröskelstöd V		B2
1980							
1990	84 82 92 435	1		1 Support	.Tröskelstöd H		B2
2000	85 85 80 060	1		1 scuff plate LH			A1
2010	86 88 18 650	1		1 scuff plate RH			
2020							
2030							
2040							
2050	87 88 18 684	1		1 Punching tool	.Håltagare		
2060	88 88 18 692	2		1 Set, guards	.Sats, skydd		
2070	89 84 71 096	1		1 Seat guard	.Sittskydd		2)
2080							
				1 Carpet guard	.Mattskydd		2)
				1 Steering wheel guard	.Rattskydd		2)
				1 Napkin paper	.Servett		2)
				1 Set, fender guard	.Sats, skärmskydd		
				2 Guard	.Skydd		
				1 Mounting tool, upholstery hook	.Monteringsverktyg, klädselkrok		A3

2. Not as separate spare part

0 General	1-A02
1 Tools	1-H02
2 Engine	2-A02
3 Electrical system, Instruments	2-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly, Steering	3-B02
7 Suspension, Wheels	3-C02
8 Body	3-D02
9 Accessories, Labels	3-L02
10 Numerical register	4-A02

1 GROUP INDEX

Special tools, engine part 1	1-H06
Special tools, engine part 2	1-H08
Special tools, engine part 3	1-H12
Special tools, transmission (man.gear box) part 1	1-H14
Special tools, transmission (man.gear box) part 2	1-H16
Special tools, transmission (man.gear box) part 3	1-H22
Special tools, transmission (aut.gear box)	1-H24
Special tools, chassis	1-I04
Special tools, car body part 1	1-I10
Special tools, car body part 2	1-I14
Special tools, miscellaneous	1-I16

0625

Tools
Car body, part 2

Verktyg
Kaross, del 2



Date
Datum
1987-10

Illustration
Bild nr
R4378

Group
Grupp
1

Page
Sida
37

Fig. Pos.	Part No Art nr	Quantity/Amtal			Description	Benämning	K/S S/R L	Notes Anmärkning
		900		US				
0020	1	83 93 233	1		1 Fixture, AC -	Fixtur, AC -		A2, AC
0040	2	83 93 241	1		compressor	kompressor		
0060	3	83 93 258	1		1 Sleeve, long	Hyssa, lång		AC
0080	4	83 93 268	1		1 Puller	Avdragare		AC
0100	5	83 93 274	1		1 Hook wrench	Haknyckel		AC
0110	6	83 93 282	1		1 Puller	Avdragare		AC
0120	7	83 93 290	1		1 Guide	Styrning		AC
0140	8	83 93 308	1		1 Mandrel	Pressdorn		AC
0160	9	83 93 316	1		1 Installing tool	Pådragare		AC
0180					1 Bearing	Lager		AC



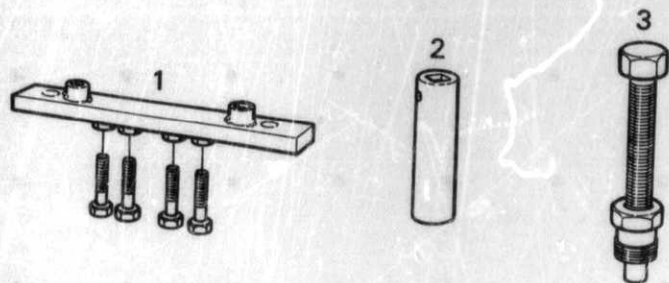


R 4378 - 900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

1 GROUP INDEX

Special tools, engine part 1	1-H06
Special tools, engine part 2	1-H08
Special tools, engine part 3	1-H12
Special tools, transmission	
(man. gear box) part 1	1-H14
Special tools, transmission	
(man. gear box) part 2	1-H18
Special tools, transmission	
(man. gear box) part 3	1-H22
Special tools, transmission	
(aut. gear box)	1-H24
Special tools, chassis	1-I04
Special tools, car body part 1	1-I10
Special tools, car body part 2	1-I14
Special tools, miscellaneous	1-I16

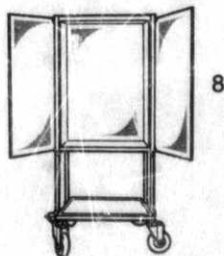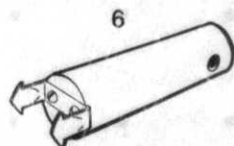

R 9323-900

SAAB
genuine parts
original reservdelar

1-116

SAAB 900
M79-80

0650

Tools		Verktyg			Date	Illustration	Group	Page
Miscellaneous		Övriga			Datum	Bild nr	Grupp	Sida
					1987-10	R9323		1
Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S S/R	Notes Anmärkning
		900		US			L	
1	78 43 303	1			1 Pliers,hose clamp	Tång,slangklämma		A1
2	78 40 937	1			1 Pliers for splice crimping	Tång för kontakt-pressning		A1
3	78 80 695	1			1 Pliers for uninsu- lated cable terminals	Tång för oisolerade kabelakor		A1
4	78 80 703	1			1 Pliers for uninsu- lated douglas plug	Tång för oisolerade rundstift		A1
5	84 71 054	1			1 Screwdriver, removing water valve	insexmejsel för byte av värmekran		
6	85 80 037	1			1 Removing tool switch, instrument panel	Demonteringsverktyg, strömställare, instrumentpanel		
7	88 94 782	X			X Grease, front wheel brake	Fett, framhjulsbroms		
7	84 86 276	X			X Grease, door lock	Fett, dörrlås		45/2006824
8	88 18 908	X			X Toll trolley	Verktygsvagn		

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

1 GROUP INDEX

Special tools, engine part 1	1-H06
Special tools, engine part 2	1-H08
Special tools, engine part 3	1-H12
Special tools, transmission (man.gear box) part 1	1-H14
Special tools, transmission (man.gear box) part 2	1-H18
Special tools, transmission (man.gear box) part 3	1-H22
Special tools, transmission (aut.gear box)	1-H24
Special tools, chassis	1-I04
Special tools, car body part 1	1-I10
Special tools, car body part 2	1-I14
Special tools, miscellaneous	1-I16



Motor
Engine
Motor
Moteur
Motor

SAAB
genuine parts
original reservdelar

2-A02

SAAB 900
M79-80

Engine	Motor	Date Datum	Group Grupp	Page Side
		1987-10	2	1
TABLE OF CONTENTS				
Engine body				
Engine suspension		2:7	2-A08	
Cylinder head		2:9	2-A10	
Cylinder block		2:13	2-A14	
Short engine		2:15	2-A16	
Transmission		2:19	2-A20	
Crankshaft, connecting rod, piston, flywheel		2:21	2-A22	
Lubrication system				
Oil pump, oil filter		2:25	2-B02	
Oil pipes, etc, turbo		2:27	2-B04	
Fuel system				
Carburetor		2:29	2-B06	
Twin carburetor		2:33	2-B10	
Air cleaner, carburetor engine		2:37	2-B14	
Air cleaner, injection engine		2:39	2-B16	
Fuel pump		2:41	2-B18	
Fuel tank, lines and hoses, carburetor engine		2:43	2-B20	
Fuel tank, lines and hoses, fuel pump, etc, injection engine -1979		2:47	2-B24	
Fuel tank, lines and hoses, fuel pump, etc, injection engine 1980-		2:51	2-C04	
Mixing regulator, injection engine		2:55	2-C08	
Evaporative loss control device (ELCD)		2:59	2-C12	
Enrichment device, turbo		2:61	2-C14	
Inlet and exhaust system				
Inlet manifold, etc, carb engine		2:63	2-C16	
Inlet manifold, etc, injection engine		2:65	2-C18	
Throttle valve housing, auxiliary air regulator, etc, injection engine		2:67	2-C20	
Throttle valve housing, auxiliary air regulator, etc, Turbo		2:71	2-C24	
Exhaust manifold, etc		2:75	2-D04	
Exhaust manifold, etc, turbo		2:79	2-D08	
Exhaust gas recirculation (EGR)		2:81	2-D10	
Pulse-air system		2:83	2-D12	
Lambda-sond system		2:85	2-D14	
Mufflers, exhaust pipe, etc		2:87	2-D16	
Mufflers, exhaust pipe, catalytic converter, etc, UC, Turbo also US		2:89	2-D18	
Cooling system				
Radiator, fan		2:91	2-D20	
Air oil cooler, engine, automatic transmission		2:95	2-D24	
Water oil cooler, engine, automatic transmission		2:97	2-E02	
Water pump		2:99	2-E04	
Thermostat		2:101	2-E06	
Engine control				
Accelerator control		2:103	2-E08	
Supercharging system				
Turbocharger, inlet tube, pressure tube, etc		2:107	2-E12	
Charge pressure regulator, bellow pipe, etc		2:109	2-E14	

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

Page Sida	Group Grupp	Date Datum	Engine	Motor
2	2	1987-10		
INNEHÅLLSFÖRTECKNING				
Motor				
1100			Motorupphängning	2: 7 2-A08
1120			Cylinderlock	2: 9 2-A10
1140			Cylinderblock	2: 13 2-A14
1180			Grundmotor	2: 15 2-A16
1200			Transmission	2: 19 2-A20
1220			Vevaxel, vevstake, kolv, svänghjul	2: 21 2-A22
Smörjsystem				
1240			Oljepump, oljefilter	2: 25 2-B02
1280			Oljörör, etc, Turbo	2: 27 2-B04
Bränslesystem				
1320			Förgasare	2: 29 2-B06
1340			Två-förgasare	2: 33 2-B10
1360			Luftrenare, förgasarmotor	2: 37 2-B14
1380			Luftrenare, insprutningsmotor	2: 39 2-B16
1400			Bränslepump	2: 41 2-B18
1420			Bränsletank, bränsleledningar, förgasarmotor	2: 43 2-B20
1440			Bränsletank, bränsleledningar, bränslepump, etc, insprutningsmotor	2: 47 2-B24
1460			Bränsletank, bränsleledningar, bränslepump, etc, insprutningsmotor	2: 51 2-C04
1480			Blandningsregulator, insprutningsmotor	2: 55 2-C08
1500			Slutet bränslesystem (ELCD)	2: 59 2-C12
1520			Fullastuppkörning, Turbo	2: 61 2-C14
Inlopps- och avgassystem				
1540			Insugningsrör, etc, förgasarmotor	2: 63 2-C16
1560			Insugningsrör, etc, insprutningsmotor	2: 65 2-C18
1580			Spjällhus, tillsatsluftslid, etc, insprutningsmotor	2: 67 2-C20
1600			Spjällhus, tillsatsluftslid, etc, Turbo	2: 71 2-C24
1620			Avgassamlare, etc	2: 75 2-D04
1640			Avgassamlare, etc, Turbo	2: 79 2-D08
1660			Avgasrecirkulation (EGR)	2: 81 2-D10
1680			Luftinblåsningssystem	2: 83 2-D12
1700			Lambda-sond system	2: 85 2-D14
1720			Ljuddämpare, avgasrör, etc	2: 87 2-D16
1740			Ljuddämpare, avgasrör, katalytisk reaktor, etc, UC, Turbo även US	2: 89 2-D18
Kylsystem				
1760			Kylare, fläkt	2: 91 2-D20
1800			Luftoljekylare, motor, automatväxellåda	2: 95 2-D24
1820			Vattenoljekylare, motor, automatväxellåda	2: 97 2-E02
1840			Vattenpump	2: 101 2-E06
1860			Termostät	
1880			Motorreglage	2: 103 2-E08
1900			Gasreglage	
Overladdningssystem				
1920			Turbokompressor, inloppsrör, tryckrör, etc	2: 107 2-E12
1940			Tryckregulator, blågrör, etc	2: 109 2-E14

Engine	Motor	Date Datum	Group Grupp	Page Sida
		1987-10	2	3
Inhaltsverzeichnis				
Motor				
Motorrumpf				
Motoraufhängung	2: 7	2-A08		
Zylinderkopf	2: 9	2-A10		
Zylinderblock	2: 13	2-A14		
Grundmotor	2: 15	2-A16		
Stirnräder	2: 19	2-A20		
Kurbelwelle, Pleuelstangen, Kolben, Schwungrad	2: 21	2-A22		
Schmieresystem				
Ölpumpe, ÖlfILTER	2: 25	2-B02		
Ölrohr, usw, Turbo	2: 27	2-B04		
Kraftstoffsystem				
Vergaser	2: 29	2-B06		
Zwei-vergaser	2: 33	2-B10		
Luftfilter, Vergasermotor	2: 37	2-B14		
Luftfilter, Einspritzmotor	2: 39	2-B16		
Kraftstoffpumpe	2: 41	2-B18		
Kraftstofftank, Kraftstoffleitungen, Vergasermotor	2: 43	2-B20		
Kraftstofftank, Kraftstoffleitungen, Kraftstoffpumpe, usw, Einspritzmotor -1979	2: 47	2-B24		
Kraftstofftank, Kraftstoffleitungen, Kraftstoffpumpe, usw, Einspritzmotor 1980-	2: 51	2-C04		
Gemischregler, Einspritzmotor	2: 55	2-C08		
Geschlossenes Kraftstoffsystem (ELCD)	2: 59	2-C12		
Kraftstoffanreicherungsanlage, Turbo	2: 61	2-C14		
Einlass- und Auspuffsystem				
Einsaugrohr, usw, Vergasermotor	2: 63	2-C16		
Einsaugrohr, usw, Einspritzmotor	2: 65	2-C18		
Drosselklappegehäuse, Zusatzluftschieber, usw, Einspritzmotor	2: 67	2-C20		
Drosselklappegehäuse, Zusatzluftschieber, usw, Turbo	2: 71	2-C24		
Auspuffkrümmer, usw	2: 75	2-D04		
Auspuffkrümmer, usw, Turbo	2: 79	2-D08		
Abgasrecirkulation (EGR)	2: 81	2-D10		
Luftpumpe, »pulse-air system«	2: 83	2-D12		
System »Lambda-sonde«	2: 85	2-D14		
Geräuschdämpfer, Auspuffrohr, usw	2: 87	2-D16		
Geräuschdämpfer, Auspuffrohr, katalytisch reaktor, usw, US, Turbo auch US	2: 89	2-D18		
Kühlsystem				
Kühler, Lüfter	2: 91	2-D20		
Luftkühler, Motor, automatische Getriebe	2: 95	2-D24		
Wasserkühler, Motor, automatische Getriebe	2: 97	2-E02		
Wasserpumpe	2: 99	2-E04		
Thermostät	2: 101	2-E06		
Motorbedienungsorgane				
Gasgestänge	2: 103	2-E08		
Aufladungssystem				
Turbolader, Einlassrohr, Druckrohr, usw	2: 107	2-E12		
Ladedruckregler, Federrohr, usw	2: 109	2-E14		


0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

Page Sida	Group Grupp	Date Datum	Engine	Motor
4	2	1987-10		
TABLE DE matieres				
Corps de moteur				
2900		2:7	2-A08	
2920		2:9	2-A10	
2940		2:13	2-A14	
2960		2:15	2-A16	
2980		2:19	2-A20	
3000		2:21	2-A22	
3020				
3040		2:25	2-B02	
3060		2:27	2-B04	
3080				
3100		2:29	2-B06	
3120		2:33	2-B10	
3140		2:37	2-B14	
3160		2:39	2-B16	
3180		2:41	2-B18	
3200		2:43	2-B20	
3220		2:47	2-B24	
3240				
3260		2:51	2-C04	
3280		2:55	2-C08	
3300		2:59	2-C12	
3320		2:61	2-C14	
3340		2:63	2-C16	
3360		2:65	2-C18	
3380		2:67	2-C20	
3400		2:71	2-C24	
3420		2:75	2-D04	
3440		2:79	2-D08	
3460		2:81	2-D10	
3480		2:83	2-D12	
3500		2:85	2-D14	
3520		2:87	2-D16	
3540		2:89	2-D18	
3560				
3580				
3600		2:91	2-D20	
3620		2:95	2-D24	
3640		2:97	2-E02	
3660		2:99	2-E04	
3680		2:101	2-E06	
3700				
3720		2:103	2-E08	
3740				
3760		2:107	2-E12	
3780		2:109	2-E14	
3800				

Engine	Motor	Date Datum	Group Grupp	Page Sida
		1987-10	2	5
SUMARIO				
Cuerpo del motor				
		2:7	2-A08	
		2:9	2-A10	
		2:13	2-A14	
		2:15	2-A16	
		2:19	2-A20	
		2:21	2-A22	
Sistema de engrase				
		2:25	2-B02	
		2:27	2-B04	
Sistema de combustible				
		2:29	2-B06	
		2:33	2-B10	
		2:37	2-B14	
		2:39	2-B16	
		2:41	2-B18	
		2:43	2-B20	
		2:47	2-B24	
		2:51	2-C04	
		2:55	2-C08	
		2:59	2-C12	
		2:61	2-C14	
Sistema de admisión y de escape				
		2:63	2-C16	
		2:65	2-C18	
		2:67	2-C20	
		2:71	2-C24	
		2:75	2-D04	
		2:79	2-D08	
		2:81	2-D10	
		2:83	2-D12	
		2:85	2-D14	
		2:87	2-D16	
		2:89	2-D18	
Sistema de refrigeración				
		2:91	2-D20	
		2:95	2-D24	
		2:97	2-E02	
		2:99	2-E04	
		2:101	2-E06	
Mandos del motor				
		2:103	2-E08	
Sistema de sobrealimentación				
		2:107	2-E12	
		2:109	2-E14	

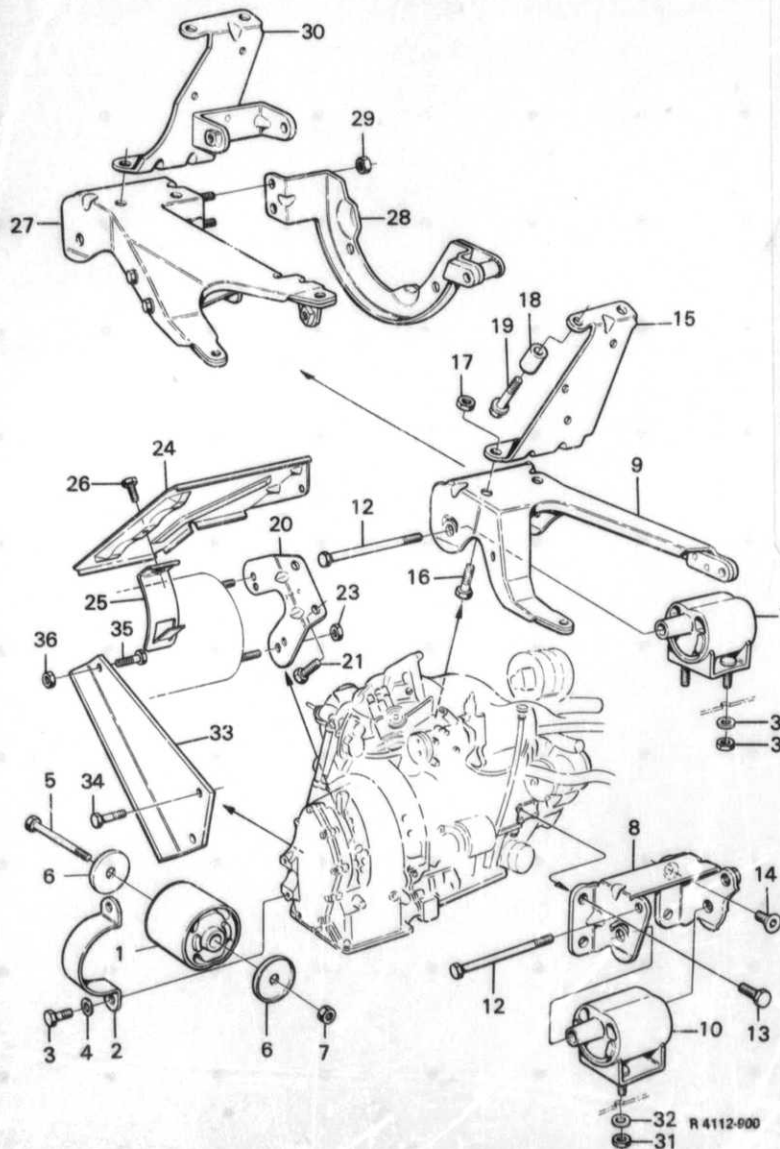

0100


Engine body Engine suspension		Motorkropp Motorupphängning		Date Datum	Illustration Bild nr	Group Grupp	Page Sida
				1987-10	R4112	2	7
Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
1	83 39 908	1		1 Front engine cushion	Främre motorkudde	3	
2	83 39 632	1		1 Clamp	Överfall	6	
3	80 83 941	2		2 Screw	Skruv	5	
4	80 29 985	2		2 Washer	Bricka	5	
5	79 72 375	1		1 Screw	Skruv	5	
6	93 19 294	2		2 Washer	Bricka	5	
7	79 67 979	1		1 Nut	Mutter	3	
8	93 04 593	1		1 Engine support LH	Motorfäste V	5	
9	93 24 930	1		1 Engine support RH	Motorfäste H	4	(9304619)
10	93 89 307	1		1 Engine cushion LH	Motorkudde V	5	(9317587)
11	93 89 315	1		1 Engine cushion RH	Motorkudde H	5	(9317596)
12	80 84 248	1		2 Screw	Skruv	5	
13	79 67 946	2		2 Screw	Skruv	5	
14	93 16 522	2		2 Internal hexagon screw	Insexskruv	5	
15	93 04 635	1		1 Engine stay	Motorstag	4	
16	80 83 123	2		2 Screw	Skruv	5	
17	80 29 779	2		2 Nut	Mutter	5	
18	83 34 641	2		2 Spacer sleeve	Distanshylsa	3	
19	79 71 609	2		2 Flange screw	Flänsskruv	5	
20	83 21 911	1		1 Stay starter	Startmotorstag	5	
21	80 82 935	2		2 Screw	Skruv	5	
23	80 29 555	2		2 Nut	Mutter	5	
24	83 33 742	1		1 Cover starter	Kåpa startmotor	5	
25	83 33 759	1		1 Clip	Klip	5	
26	79 71 641	1		1 Screw	Skruv	4	AC
27	93 16 126	1		1 Engine support RH	Motorfäste H	4	AC
28	93 16 118	1		1 Support	Konsol	5	AC
29	80 74 106	2		2 Nut	Mutter	5	AC
30	93 16 076	1		1 Engine stay	Motorstag	5	AC
31	80 74 106	4		4 Nut	Mutter	5	
32	80 29 985	4		4 Washer	Bricka	5	
33		1		1 Stay, exhaust	Stag, avgassamlare	4	(8336127), TURBO SEE PAGE 2-107, 2-E12
34	80 83 941	2		2 Screw	Skruv	5	TURBO
35	80 83 156	1		1 Screw	Skruv	5	TURBO
36	80 73 959	1		1 Nut	Mutter	5	TURBO

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E06
Supercharging system	2-E12

R 4112-900

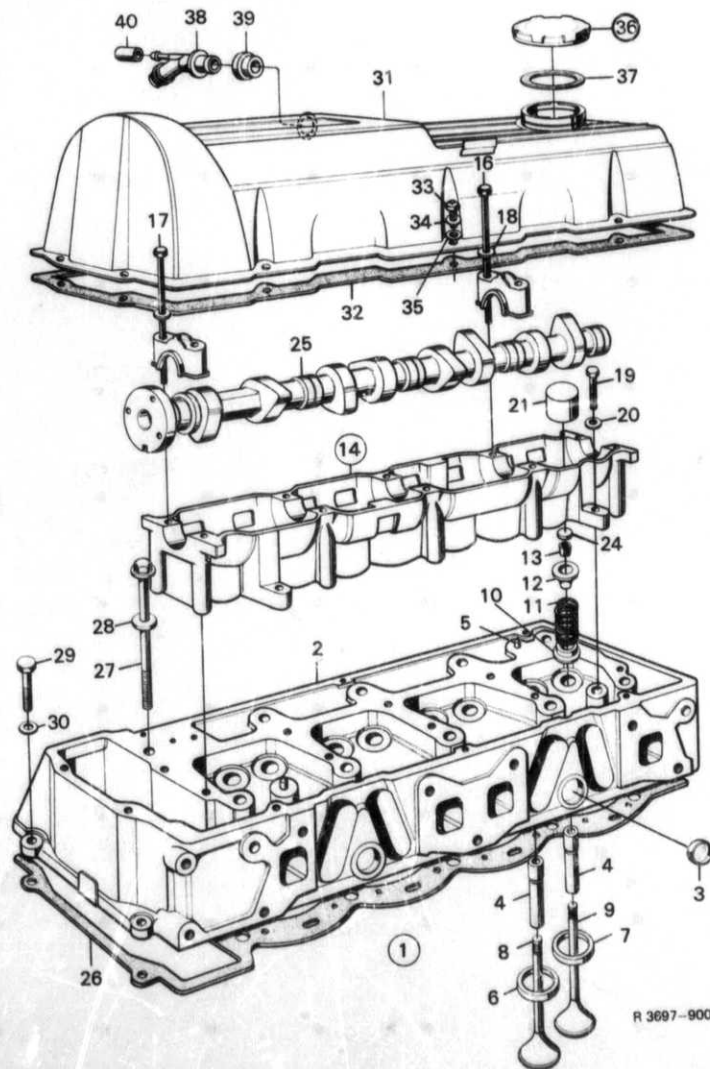

0150

Engine body
Cylinder head

Motorkropp
Cylinderlock

Date
Datum
1987-10

Illustration
Bild nr
R3697

Group
Grupp
2

Page
Sida
9


Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K S S R	Notes Anmärkning
		900	US				
0020	1 83 65 462	1		1 Cylinder head assy with sodium filled valves	Cylinderlock kpl med natriumfyllda venti- ler	5	1) I
0040	1 83 63 624	1		1 Cylinder head assy with valves	Cylinderlock kpl med ventiler	5	C AND T ALSO I FOR UF
0060	1 75 22 345	1		1 Cylinder head assy with sodium filled valves	Cylinderlock kpl med natriumfyllda venti- ler	5	1) TURBO, (8367526)
0080	2 83 63 632	1		1..Cylinder head assy	..Cylinderlock kpl	5	
0100	3 83 48 005	2		2..Seal washer	..Tätningbricka	3	
0120	4 83 50 944	8		8..Valve guide	..Ventilstyrning	3	
0140	5 80 34 862	2		2..Pin	..Pinne	3	
0160	6 83 47 684	4		4..Valve seat, intake	..Ventilsäte, inlopp	5	
0180	7 83 47 692	4		4..Valve seat, exhaust	..Ventilsäte, avgas	5	
0200	7 93 09 691	4		4..Valve seat, exhaust	..Ventilsäte, avgas	5	1) TURBO FOR US
0220	8 83 46 884	4		4..Intake valve	..Ventil, inlopp	3	
0240	8 83 64 350	4		4..Intake valve	..Ventil, inlopp	3	PART OF 83 67 526
0260	9 83 62 295	4		4..Exhaust valve	..Ventil, avlopp	2	PART OF 83 63 624
0280	9 83 07 356	4		4..Sodium filled exhaust valve	..Natriumfylld ventil, avlopp	2	PART OF 83 65 462, 83 67 526
0300	10 83 46 900	8		8..Retainer lower	..Ventilfjäderbricka, undre	4	
0320	11 93 51 800	8		8..Valve spring	..Ventilfjäder	3	(8358467)
0340	12 83 46 926	8		8..Retainer	..Ventilfjäderbricka	4	
0360	13 83 47 262	16		16..Lock	..Ventilknaster	2	
0380	14 83 08 453	8		1..Camshaft bearing assy	..Kamaxelbrygga kpl	5	(8356719)
0400	15 83 48 401	8		8..Screw	..Skruv	5	
0420	16 83 56 396	2		2..Screw	..Skruv	5	
0440	17 80 29 985	2		2..Washer	..Bricka	5	
0460	18 80 29 985	2		2..Screw	..Skruv	5	
0480	19 80 29 985	2		2..Washer	..Bricka	5	
0500	20 80 29 985	2		2..Valve depressor	..Ventiltryckare	3	
0520	21 83 46 942	X		X Adjusting pallet,	Justerbricka, 0,070"	2	
0540	22 83 08 215	X		X Adjusting pallet,	Justerbricka, 0,070"	2	
0560	23 83 08 223	X		X Adjusting pallet,	Justerbricka, 0,072"	2	
0580	24 83 08 231	X		X Adjusting pallet,	Justerbricka, 0,072"	2	
0600	25 83 08 249	X		X Adjusting pallet,	Justerbricka, 0,074"	2	
0620	26 83 08 256	X		X Adjusting pallet,	Justerbricka, 0,074"	2	
0640	27 83 08 264	X		X Adjusting pallet,	Justerbricka, 0,076"	2	
0660	28 83 08 272	X		X Adjusting pallet,	Justerbricka, 0,076"	2	
0680	29 83 08 280	X		X Adjusting pallet,	Justerbricka, 0,078"	2	
0700	30 83 08 288	X		X Adjusting pallet,	Justerbricka, 0,078"	2	
0720	31 83 08 296	X		X Adjusting pallet,	Justerbricka, 0,080"	2	
0740	32 83 08 306	X		X Adjusting pallet,	Justerbricka, 0,080"	2	
0760	33 83 08 314	X		X Adjusting pallet,	Justerbricka, 0,082"	2	
0780	34 83 08 322	X		X Adjusting pallet,	Justerbricka, 0,082"	2	
0800	35 83 08 330	X		X Adjusting pallet,	Justerbricka, 0,084"	2	
0820	36 83 08 338	X		X Adjusting pallet,	Justerbricka, 0,084"	2	
0840	37 83 08 346	X		X Adjusting pallet,	Justerbricka, 0,086"	2	
0860	38 83 08 354	X		X Adjusting pallet,	Justerbricka, 0,086"	2	
0880	39 83 08 362	X		X Adjusting pallet,	Justerbricka, 0,088"	2	
0900	40 83 08 370	X		X Adjusting pallet,	Justerbricka, 0,088"	2	
0920	41 83 08 378	X		X Adjusting pallet,	Justerbricka, 0,090"	2	
0940	42 83 08 386	X		X Adjusting pallet,	Justerbricka, 0,090"	2	
0960	43 83 08 394	X		X Adjusting pallet,	Justerbricka, 0,092"	2	
0980	44 83 08 402	X		X Adjusting pallet,	Justerbricka, 0,092"	2	
1000	45 83 08 410	X		X Adjusting pallet,	Justerbricka, 0,093"	2	
1020	46 83 08 418	X		X Adjusting pallet,	Justerbricka, 0,093"	2	
1040	47 83 08 426	X		X Adjusting pallet,	Justerbricka, 0,095"	2	
1060	48 83 08 434	X		X Adjusting pallet,	Justerbricka, 0,095"	2	
1080	49 83 08 442	X		X Adjusting pallet,	Justerbricka, 0,096"	2	
1100	50 83 08 450	X		X Adjusting pallet,	Justerbricka, 0,096"	2	
1120	51 83 08 458	X		X Adjusting pallet,	Justerbricka, 0,096"	2	
1140	52 83 08 466	X		X Adjusting pallet,	Justerbricka, 0,096"	2	
1160	53 83 08 474	X		X Adjusting pallet,	Justerbricka, 0,096"	2	
1180	54 83 08 482	X		X Adjusting pallet,	Justerbricka, 0,096"	2	
1200	55 83 08 490	X		X Adjusting pallet,	Justerbricka, 0,096"	2	
1220	56 83 08 498	X		X Adjusting pallet,	Justerbricka, 0,096"	2	

1. Scrapping of sodium-filled exhaust valves, see section 214 Service Manual

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

2 GROUP INDEX

Engine body	2-A00
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

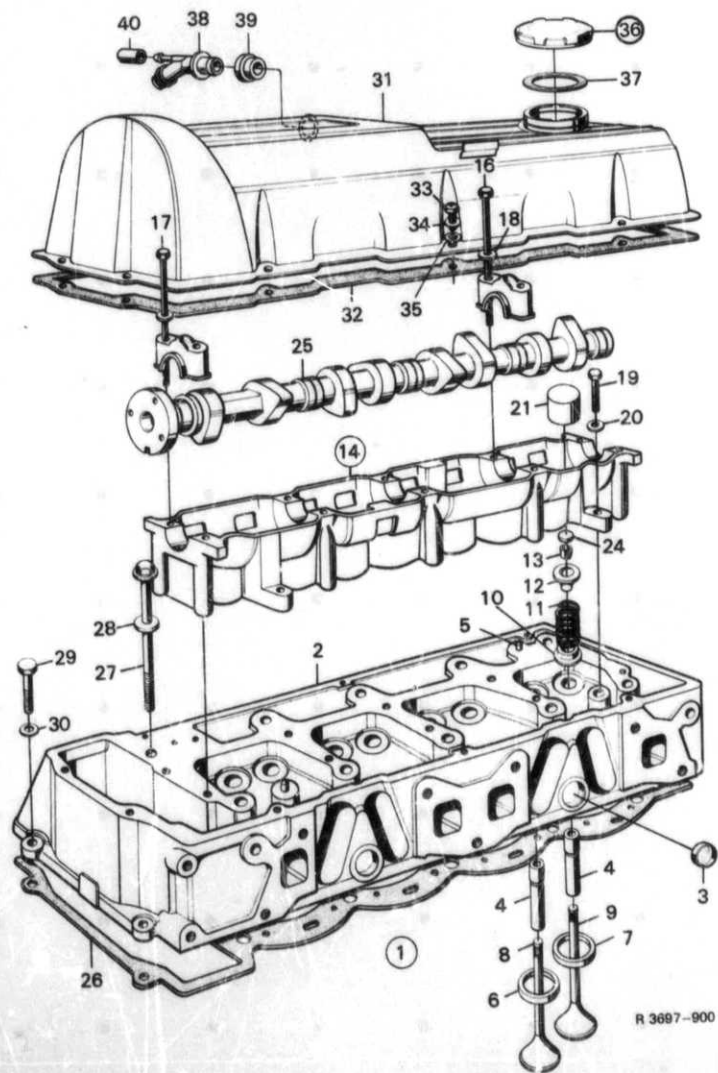

R 3697-900

SAAB
genuine parts
original reservdelar

2-A12

SAAB 900
M79-80

MASTER INDEX

0150

Engine body
Cylinder head

Motorropp
Cylinderlock

Date
Datum
1987-10

Illustration
Bild nr
R3697

Group
Grupp
2

Page
Sida
11

Fig. Pos.	Part No Art nr	Quantity/Åntal	Description	Benämning	K/S SR	Notes Anmärkning
		900	US			
1240	24 83 49 268	X	X Adjusting pallet, 0,098" (2,49 mm)	Justerbricka, 0,098"	2	
1280	24 83 49 284	X	X Adjusting pallet, 0,100" (2,53 mm)	Justerbricka, 0,100"	2	
1320	24 83 49 300	X	X Adjusting pallet, 0,101" (2,57 mm)	Justerbricka, 0,101"	2	
1340	24 83 49 326	X	X Adjusting pallet, 0,102" (2,61 mm)	Justerbricka, 0,102"	2	
1360	24 83 49 342	X	X Adjusting pallet, 0,104" (2,65 mm)	Justerbricka, 0,104"	2	
1420	24 83 49 367	X	X Adjusting pallet, 0,106" (2,69 mm)	Justerbricka, 0,106"	2	
1440	24 83 49 383	X	X Adjusting pallet, 0,107" (2,73 mm)	Justerbricka, 0,107"	2	
1460	24 83 55 042	X	X Adjusting pallet, 0,109" (2,77 mm)	Justerbricka, 0,109"	2	
1480	24 83 55 067	X	X Adjusting pallet, 0,111" (2,81 mm)	Justerbricka, 0,111"	2	
1500	24 83 55 083	X	X Adjusting pallet, 0,112" (2,85 mm)	Justerbricka, 0,112"	2	
1502	24 83 03 141	X	X Adjusting pallet, 0,114" (2,90 mm)	Justerbricka, 0,114"	2	
1504	25 83 58 186	1	Camshaft	Kamaxel	5	C AND T
1506	25 83 56 057	1	Camshaft	Kamaxel	5	
1508	25 83 66 361	1	Camshaft	Kamaxel	5	TURBO
1510	26 83 58 780	1	Gasket, cylinder head	Packning, cyl lock	2	
1512	27 93 54 596	10	Screw	Skruv	5	(9350877)
1520	28 80 73 272	10	Washer	Bricka	5	
1540	29 80 83 933	2	Screw	Skruv	5	
1560	30 80 29 985	2	Washer	Bricka	5	
1580	31 93 06 954	1	Valve cover	Ventilkåpa	5	
1600	32 93 05 970	1	Gasket, valve cover	Packning, ventilkåpa	1	
1620	33 93 05 968	8	Screw	Skruv	5	
1640	34 93 06 002	8	Washer	Bricka	5	
1660	35 93 06 996	8	Washer	Bricka	5	
1680	36 83 48 948	1	Cap Assy valve cover	Lock kpi ventilkåpa	3	
1700	37 83 50 530	1	Gasket	Packning	2	
1720	38 83 60 240	1	Nipple	Nippel	5	
1740	39 83 60 257	1	Bushing	Bussning	5	
1760	40 83 60 463	1	Plug	Plugg	5	TURBO
1780	93 37 304	X	Gasket set	Packningsatts	3	C, T WHOLE ENGINE
1800	93 37 312	X	Gasket set	Packningsatts	3	I WHOLE ENGINE
1820	93 37 286	X	Gasket set	Packningsatts	2	C, T DECARBONIZATION
1840	93 37 296	X	Gasket set	Packningsatts	2	I DECARBONIZATION
1860	93 20 748	X	Gasket set	Packningsatts	2	DECARBONIZATION TURBO
1880	88 17 728	X	Sat, valve adjustment	Ventiljusteringsatts	2	(8308314)

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

0200

Engine body
Cylinder block

Motorropp
Cylinderblock


Date
Datum
1987-10

Illustration
Bild nr
R4334

Group
Grupp
2

Page
Sida
13

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR/L	Notes Anmärkning
		900	US				
0020	1 83 82 198	1		1 Cylinder block assy	Cylinderblock kpl	6	TURBO
0040	1 83 67 237	1		1 Cylinder block assy	Cylinderblock kpl	3	
0050	2 83 86 908	1		1 Plug	Plugg	3	
0080	3 83 52 502	10		10 Screw	Skruv	5	
0080	5 83 48 005	1		1 Seal washer	Tätningbricka	3	
0100	6 83 47 999	3		3 Seal washer	Tätningbricka	5	
0120	7 83 48 047	1		1 Plug	Propp	5	
0140	9 83 48 470	2		2 Guide sleeve	Styrhylsa	5	
0180	10 83 52 589	1		1 End plate	Gavelplatta	5	
0180	11 80 28 985	3		3 Washer	Bricka	5	
0200	12 83 58 341	1		1 Gasket, end plate	Packning, gavelplatta	5/2	(8353732)
0220	13 83 86 007	4		4 Pin	Pinne	5	
0240	14 80 82 943	10		10 Screw	Skruv	5	
0280	15 80 28 985	7		7 Washer	Bricka	5	
0280	19 22 48 718	2		2 Screw	Skruv	5	
0300	20 93 50 158	1		1 Sealing ring	Tätningring	5/2	
0320	21 83 48 089	1		1 Plug	Propp	3	
0340	22 93 48 864	1		1 Gasket plug	Packning propp	3	
0380	28 83 54 581	1		1 Flange	Fläns	3	
0330	29 80 91 738	2		2 Screw	Skruv	5	
0400	30 83 48 631	1		1 Gasket	Packning	5/4	C
0420	33 83 48 070	1		1 Flange	Fläns	3/1	
0440	35 83 56 578	1		1 Flange	Fläns	3/1	
0460	36 80 82 943	2		2 Screw	Skruv	5/1	
0480	37 80 28 985	2		2 Washer	Bricka	5/1	
0500	38 83 68 672	1		1 Gasket flange	Packning fläns	5/2	
0520	40 83 48 047	1		1 Plug	Plugg	5	
0540	41 23 79 786	1		1 Gasket	Packning	4	
0560	42 93 05 589	1		1 Nipple	Nippel	5	
0580	43 80 91 738	2		2 Screw	Skruv	5/1	

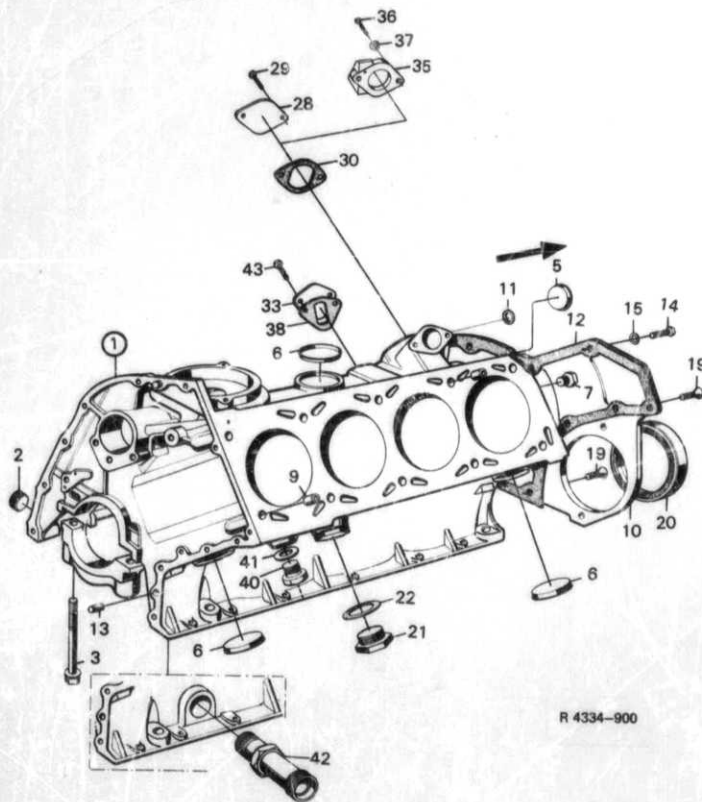

R 4334-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A00
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

0250

Engine body
Short engine

Motorkropp
Grundmotor

Date
Datum
1987-10

Illustration
Bild nr
BLANK

Group
Grupp
2

Page
Sida
15

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	KS SR	Notes Anmärkning
		900	US				
0090	93 06 564	1		1 Short engine	Grundmotor	6	
0110	93 06 572			1 Short engine	Grundmotor	6 UC	
0120	93 06 580	1		1 Short engine	Grundmotor	6 TURBO	
0130				.Cylinder block	.Cylinderblock		
0140				.Main bearing half	.Ramlagerhalva		
0160				.Washer, crankshaft	.Tryckbricka, vevaxel		
0180				.End plate	.Gavelplatta		
0200				.Gasket, end plate	.Packing, gavelplatta		
0220				.Bracket	.Hållare		
0240				.Pin, guide, trans-	.Pinne, styrning		
0260				mission cover	transmissionskåpa		
0280				.Screw, end plate	.Skruv, gavelplatta		
0340				.Sealing, crankshaft	.Tätning, vevaxel		
0360				.Plug	.Propp		
0380				.Gasket, plug	.Packing, propp		
0400				.Seat	.Säte		
0420				.Cock	.Kran		
0440				.Gasket, cock	.Packing, kran		
0460				.Cover, transmission	Transmissionskåpa		
0480				.Seal ring, trans-	Tätningring, trans-		
0500				mission cover	missionskåpa		
0520				.Gasket, trans-	Packing, trans-		
0540				mission cover	missionskåpa		
0560				.Screw, trans-	Skruv, transmissions-		
0580				cover	kåpa		
0600				.Washer, screw trans-	Bricka, skruv trans-		
0620				mission cover	missionskåpa		
0640				.Bracket, alternator	.Fäste generator		
0660				.Spacer sleeve, alter-	.Distansrör, genera-		
0680				nator bracket	torfäste		
0700				.Screw, alternator	.Skruv, generatorfäste		
0720				.Bracket			
0740				.Nut, alternator	.Mutter, generator-		
0760				bracket	fäste		
0780				.Crankshaft	.Vevaxel		
0800				.Belt pulley	.Remskiva		
0820				.Screw	.Flänsskruv		
0840				.Piston	.Kolv		
0860				.Connecting rod	.Vevstaka		
0880				.Connecting rod bea-	.Vevstakalager		
0900				ring			
0920				.Chain wheel	.Kedjehjul		
0940				.Nut, chain wheel	.Mutter, kedjehjul		
0960				.Woodruff key, chain	.Woodruffkyl, kedje-		
0980				wheel	hjul		
1000				.Chain	.Kedja		
1020				.Chain tensioner	.Kedjesträckare		
1040				.Distance, plate	.Distansplatta		
1060				.Screw, chain tensioner	.Skruv, kedjesträckare		
1080				.Washer, screw chain	.Bricka, skruv kedje-		
1100				tensioner	sträckare		
1120				.Chain guide	.Kedjestyrning		
1140				.Screw, chain guide	.Skruv, kedjestyrning		
1160				.Washer, screw chain	.Bricka, skruv kedje-		
1180				guide	styrning		
1200				.Mounting plate, chain	.Fästplatta kedjehjul		
1220				wheel			
1240				.Screw, mounting plate	.Skruv, fästplatta		
1260				chain wheel	kedjehjul		
1280				.Washer, screw moun-	.Bricka, skruv, fäst-		
1300				ting plate	platta		
1320				.Idler shaft	.Aggregataxel		
1340				.Pin, idler shaft	.Pinne aggregataxel		
1360				.Screw, chain wheel	.Skruv, kedjehjul		

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A09
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

0250

Engine body
Short engine

Motorkropp
Grundmotor

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

BLANK

2

17

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S S/R	Notes Anmärkning
		900		US				
1380					.Lock washer, screw	.Låsbricka, skruv		
1400					.Chain wheel	.Kedjehjul		
1420					.Keep plate	.Fixerplatta		
1440					.Screw, keep plate	.Sk-uv, fixerplatta		
1460					.Spacing piece, oil	.Mellanstycke, olje- pump		
1480					.Extension pipe, spe- cing piece	.Skarvrör, mellan- stycke		
1500					.Gasket, spacing piece	.Päckning mellanstycke		
1520					.Pin, spacing piece	.Pinne, mellanstycke		
1540					.Screw, spacing piece	.Skruv, mellanstycke		
1560					.Washer, screw spacing piece	.Bricka, skruvmellan- stycke		
1580					.Oil pump assy	.Oljepump kpl		
1600					.O-ring, oil pump	.O-ring oljepump		
1620					.Screw, oil pump	.Skruv, oljepump		
1640					.Washer, sckew oil pump	.Bricka, skruv oljepump		
1660					.Oil filter	.Oljefilter		
1680					.Water pump assy	.Vattenpump kpl		
1690					.Cover, water pump	.Lock, vattenpump		
1700					.Gasket, cover water pump	.Päckning, lock vattenpump		
1720					.Screw, cover water pump	.Skruv, lock vatten- pump		
1740					.Washer, screw cover water pump	.Bricka, skruvlock vattenpump		
1760					.Flange, cyl block	.Fläns, cyl block		
1780								
1800								
1820								
1840								
1860								
1880								

MASTER INDEX

0	General	1-A02
1	Tools	1-I02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A00
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E06
Supercharging system	2-E12

0300

Engine body
Transmission

Motorkropp
Transmission


Date
Datum
1987-10

Illustration
Bild nr
R4568

Group
Grupp
2

Page
Sida
19

Fig. Pos.	Part No Art nr	Quantity/Åntal	Description	Benämning	KS SR L	Notes Anmärkning
		900	US			
0040	1 83 56 867	1	1 Transmission cover	Transmissionskåpa	5	
0070	2 83 09 204	1	1 Sealing ring	Tätningring	5	(8349000)
0080	3 83 03 325	1	1 Gasket, transmission cover	Packning, transmissionskåpa	2	
0100						
0120	4 83 59 333	1	1 Gasket, transmission cover	Packning, transmissionskåpa	2	
0140						
0150	5 83 56 917	1	1 Flange screw	Flänsskruv	5	
0160	6 83 46 354	3	1 Screw	Skruv	5	(8033966)
0200	7 80 83 941	2	2 Screw	Skruv	5	
0220	8 80 83 990	1	1 Screw	Skruv	5	
0240	9 80 84 006	2	2 Screw	Skruv	5	
0260	10 80 29 985	8	8 Washer	Bricka	5	
0280	11 83 46 785	1	1 Chain, worm crank-shaft	Kedjehjul, vevaxel	3	
0300						
0320	12 83 46 793	1	1 Chain wheel	Kedjehjul	4	
0330	13 83 46 801	1	1 Chain wheel	Kedjehjul	4	
0360	14 83 60 026	1	1 Centre nut	Centrumnutt	4	
0400	17 83 47 122	1	1 Woodruff key	Woodruffkyl	5	
0430	18 78 71 403	1	1 Chain	Kedja	3	
0450	19 83 47 718	1	1 Chain guide	Kedjestyrning	3	
0460	20 83 47 726	1	1 Chain guide	Kedjestyrning	3	
0480	21 83 47 874	1	1 Chain tensioner	Kedjes träckare	3	
0500	22 83 49 516	1	1 Distance plate	Distansplatta	6	
0520	23 80 21 925	2	2 Screw	Skruv	5	
0540	24 80 29 951	2	2 Washer	Bricka	5	
0560	25 80 19 896	2	2 Screw	Skruv	5	
0580	26 80 29 951	2	2 Washer	Bricka	5	
0600	27 83 47 734	1	1 Mounting plate	Fästplatta	5	
0620	28 80 91 738	2	2 Screw	Skruv	5	
0640	29 80 29 985	2	2 Washer	Bricka	5	
0660	30 80 82 935	3	3 Screw	Skruv	5	
0680	31 80 34 456	1	1 Pin	Pinne	5	
0720	32 83 58 509	1	1 Idler shaft	Aggregataxel	4	
0740	33 83 58 487	1	1 Screw	Skruv	5	
0800	35 83 47 163	1	1 Keep plate	Fixeringsplatta	2	
0820	36 22 46 718	2	2 Screw	Skruv	5	
0840	37 83 68 821	1	1 Belt pulley	Remskiva	4	
0860	38 83 48 534	1	1 Screw	Flänsskruv	4	
0880	39 83 68 839	1	1 Belt pulley	Remskiva	4	AC
0900	40 80 29 951	3	3 Washer	Bricka	5	AC
0920	41 80 19 896	3	3 Screw	Skruv	5	AC

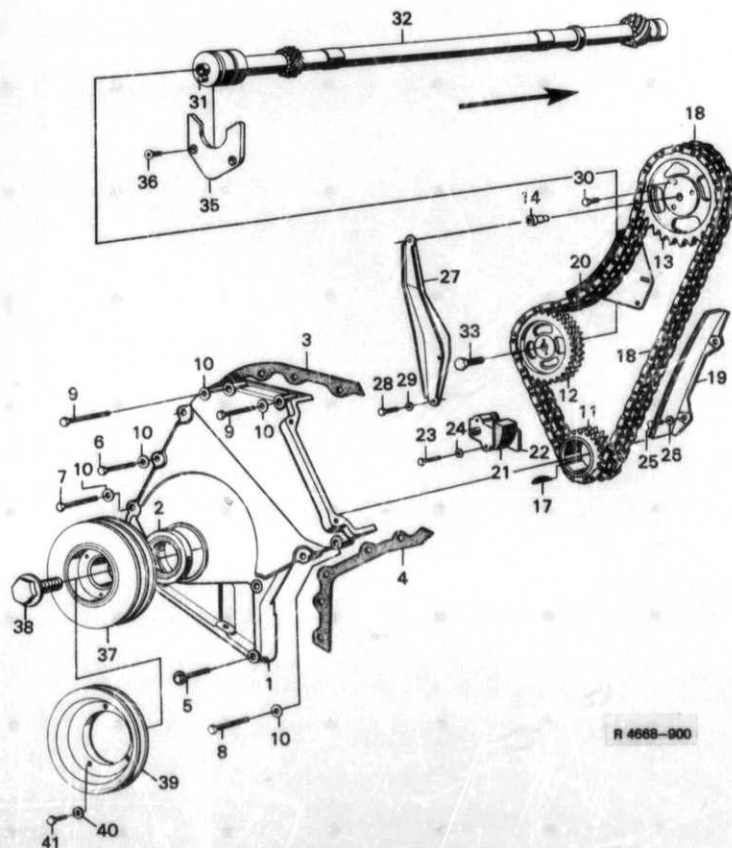


R 4568-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

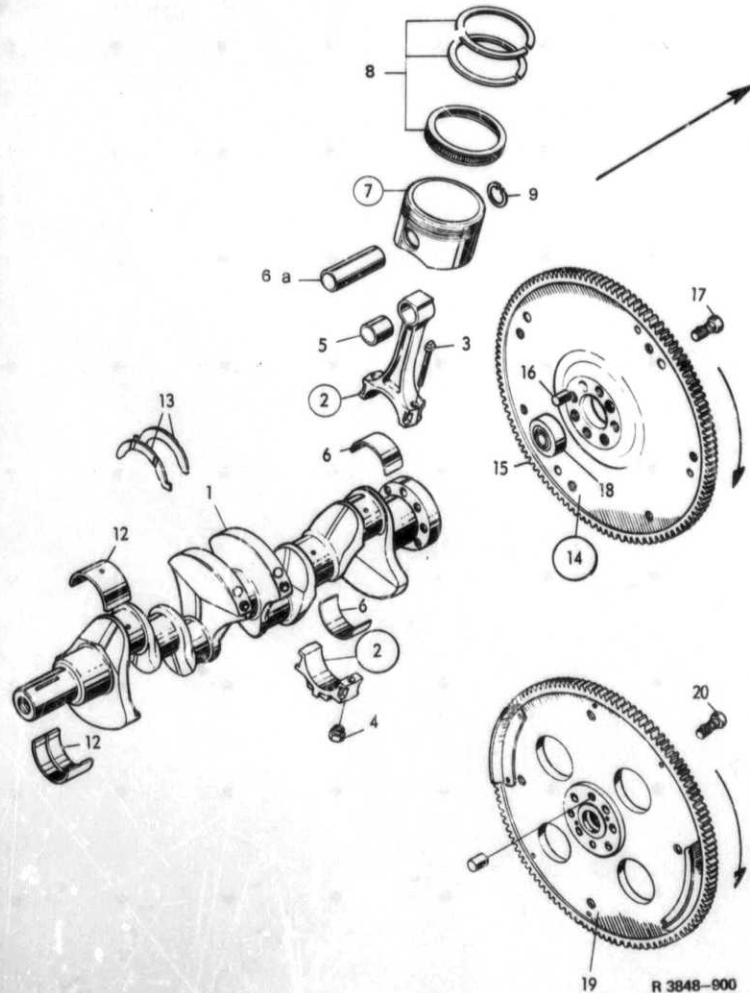

0350

Engine body
Crankshaft, connecting
rod, piston, flywheel

Motorkropp
Vevaxel, vevstake
kolv, svänghjul

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10 R3848

2

21


Fig. Pos.	Part No Art nr	Quantity/Åntal		Description	Benämning	KS S/L	Notes Anmärkning
		900	US				
0020	1 83 51 595	1		1 Crankshaft	Vevaxel	6	
0040	2 83 47 098	4		4 Connecting rod assy	Vevstake kpl	5	
0060	3 83 47 106	8		8 Connecting rod bolt	Vevstaksbult	5	
0080	4 75 00 739	8		8 Nut	Mutter	5	(8347114)
0100	5 83 52 734	4		4 Bushing	Bussning	5	
0120	6 83 47 650	8		8 Connecting rod bearing, red	Vevstakslager, röd	4	
0140							
0160	6 83 55 349	8		8 Connecting rod bearing, blue	Vevstakslager, blå	4	
0180							
0200	6 83 49 938	8		8 Connecting rod bearing, undersize 0,25 mm, yellow	Vevstakslager, underdim 0,25 mm, gul	4	
0220							
0240	6 83 55 356	8		8 Connecting rod bearing, undersize 0,25 mm, green	Vevstakslager, underdim 0,25 mm, grön	4	
0260							
0280	6 83 49 946	8		8 Connecting rod bearing, undersize 0,50 mm, white	Vevstakslager, underdim 0,50 mm, vit	4	
0300							
0320	6 83 55 364	8		8 Connecting rod bearing, undersize 0,50 mm, brown	Vevstakslager, underdim 0,50 mm, brun	4	
0340							
0360	6 83 49 953	8		8 Connecting rod bearing, undersize 0,75 mm	Vevstakslager, underdim 0,75 mm	4	
0380							
0400	6 83 49 961	8		8 Connecting rod bearing, undersize 1,0 mm	Vevstakslager, underdim 1,0 mm	4	
0420							
0440	6A 23 46 983	4		4 Piston tap	Kolvstapp	5	
0460	7 83 58 336	4		4 Piston assy, class AB	Kolv kpl, klass AB	5	-1979 C AND T
0480							
0500	7 83 58 335	4		4 Piston assy, class AB	Kolv kpl, klass AB	5	1980-1 AND TA
0520							
0540	7 83 62 238	4		4 Piston assy, class AB	Kolv kpl, klass AB	5	-1979 I FOR UF
0560							
0580	7 83 62 238	4		4 Piston assy, class AB	Kolv kpl, klass AB	5	1980- C AND TM
0600							
0620	7 83 60 711	4		4 Piston assy, class AB	Kolv kpl, klass AB	5	-1979 UC
0640							
0660	7 83 67 559	4		4 Piston assy, class AB	Kolv kpl, klass AB	5	TURBO
0680							
0700	7 83 62 246	4		4 Piston assy, class B	Kolv kpl, klass B	5	1980- C AND TM
0720							
0740	7 83 58 343	4		4 Piston assy, class B	Kolv kpl, klass B	5	1980-1 AND TA
0760							
0780	7 83 67 567	4		4 Piston assy, class C	Kolv kpl, klass C	5	27-1379 C AND T
0800							
0820	7 83 58 350	4		4 Piston assy, class C	Kolv kpl, klass C	5	27-1980-1 AND TA
0840							
0860	7 83 62 253	4		4 Piston assy, class C	Kolv kpl, klass C	5	27-1379 I FOR UF
0880							
0900	7 83 62 253	4		4 Piston assy, class C	Kolv kpl, klass C	5	27-1980- C AND TM
0920							
0940	7 83 60 737	4		4 Piston assy, class C	Kolv kpl, klass C	5	27-1979 UC
0960							
0980	7 83 67 575	4		4 Piston assy, class C	Kolv kpl, klass C	5	27-1980- C AND T
1000							
1020	8 83 89 447	4		4 Kit, piston rings std	Sats kolvringer std	5	TURBO
1040							
1060	8 83 89 900	4		4 Kit, piston rings std	Sats kolvringer std	5	
1080							
1100	9 83 47 577	4		9 Lock ring	Lårring	5	27-1979 C AND T
1120							
1140	7 83 58 368	4		4 Piston assy, oversize 0,50 mm	Kolv kpl, ÖD 0,50 mm	5	27-1980-1 AND TA
1160							
1180	7 83 62 261	4		4 Piston assy, oversize 0,50 mm	Kolv kpl, ÖD 0,50 mm	5	27-1979 I FOR UF
1200							
1220	7 83 62 261	4		4 Piston assy, oversize 0,50 mm	Kolv kpl, ÖD 0,50 mm	5	27-1980- C AND TM
1240							

27. Piston assy without piston tap

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Non-serial register	4-A02

2 GROUP INDEX

Engine body	2-A06
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

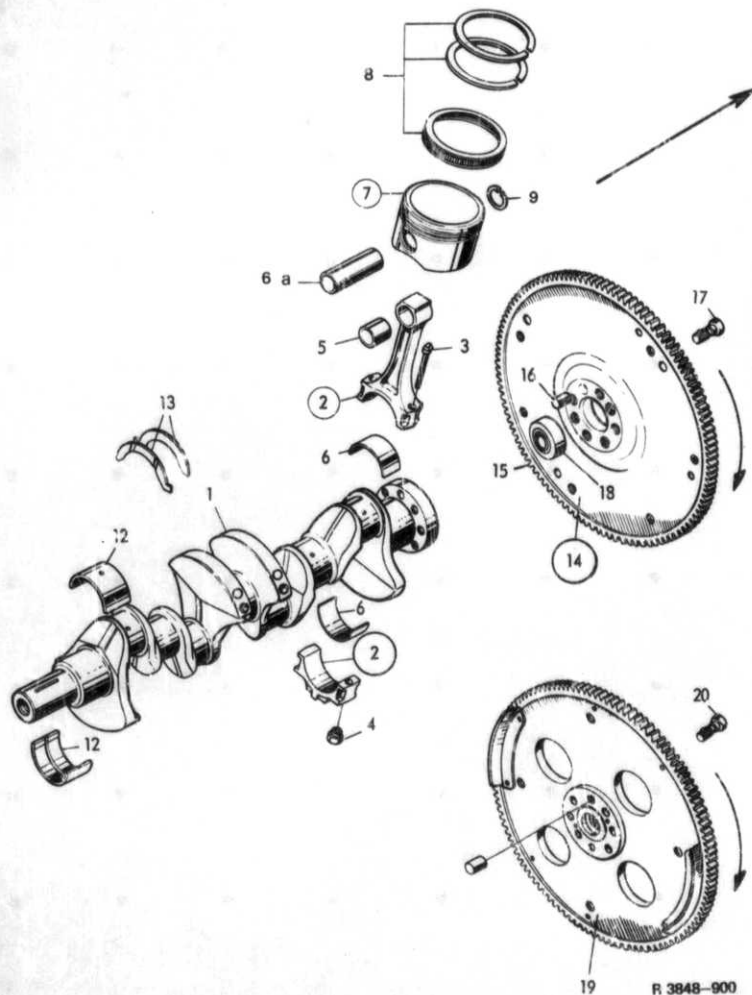

SAAB
genuine parts
original res-värlar

2-A24

SAAB 900
M79-80

MASTER INDEX

0350

Engine body
Crankshaft, connecting
rod, piston, flywheel

Motorkropp
Vevaxel, vevstake
kolv, svänghjul

Date
Datum
1987-10

Illustration
Bild nr
R3848

Group
Grupp
2

Page
Sida
23

Fig. Pos.	Part No Art nr	Quantity/Amount 900	US	Description	Benämning	K/S SR / L	Notes Anmärkning
1240	7 83 62 281			4 Piston assy, oversize 0,50 mm	Kolv kpl, ÖD 0,50 mm	5	27) -1979 UC, (8360745)
1280	7 83 67 583	4		4 Piston assy, oversize 0,50 mm	Kolv kpl, ÖD 0,50 mm	5	27) TURBO
1300	8 83 89 454	4		4 Kit, piston rings oversize 0,50 mm	Sats, kolvringar ÖD 0,50 mm	3	C AND T
1320	8 83 89 637	4		4 Kit, piston rings oversize 0,50 mm	Sats, kolvringar ÖD 0,50 mm	3	I AND TA
1350	8 83 99 918	4		4 Kit piston rings oversize 0,50 mm	Sats, kolvringar ÖD 0,50 mm	3	TURBO
1380	9 83 47 577	8		8 Lock ring	Låsring	5	
1400	7 83 58 37	4		4 Piston assy, oversize 1,0 mm	Kolv kpl, ÖD 1,0 mm	5	27) -1979 C AND T
1420	7 83 58 376	4		4 Piston assy, oversize 1,0 mm	Kolv kpl, ÖD 1,0 mm	5	27) 1980- I AND TA
1440	7 83 62 279			4 Piston assy, oversize 1,0 mm	Kolv kpl, ÖD 1,0 mm	5	27) -1979 I FOR UF
1460	7 83 62 279	4		4 Piston assy, oversize 1,0 mm	Kolv kpl, ÖD 1,0 mm	5	27) 1980- C AND T
1480	7 83 60 752			4 Piston assy, oversize 1,0 mm	Kolv kpl, ÖD 1,0 mm	5	27) -1979 UC
1500	7 83 67 591	4		4 Piston assy, oversize 1,0 mm	Kolv kpl, ÖD 1,0 mm	5	27) TURBO
1520	8 83 89 462	4		4 Kit, piston rings oversize 1,0 mm	Sats, kolvringar ÖD 1,0 mm	3	C AND T
1540	8 83 89 645	4		4 Kit, piston rings oversize 1,0 mm	Sats, kolvringar ÖD 1,0 mm	3	I AND TA
1560	8 83 89 926	4		4 Kit, piston rings oversize 1,0 mm	Sats, kolvringar ÖD 1,0 mm	3	TURBO
1580	9 83 47 577	8		8 Lock ring	Låsring	5	
1600	12 83 50 936	10		10 Main bearing half, red	Ramlagerhalva, röd	5	
1620	12 83 55 315	10		10 Main bearing half, blue	Ramlagerhalva, blå	5	
1640	12 83 50 977	10		10 Main bearing half, undersize 0,25 mm, yellow	Ramlagerhalva, underdim 0,25 mm, gul	5	
1660	12 83 55 323	10		10 Main bearing half, undersize 0,25 mm, green	Ramlagerhalva, underdim 0,25 mm, grön	5	
1680	12 83 50 985	10		10 Main bearing half, undersize 0,50 mm, white	Ramlagerhalva, underdim 0,50 mm, vit	5	
1700	12 83 55 331	10		10 Main bearing half, undersize 0,50 mm, brown	Ramlagerhalva, underdim 0,50 mm, brun	5	
1720	12 83 50 993	10		10 Main bearing half, undersize 0,75 mm	Ramlagerhalva, underdim 0,75 mm	5	
1740	12 83 51 009	10		10 Main bearing half, undersize 1,0 mm	Ramlagerhalva, underdim 1,0 mm	5	
1760	13 83 47 270	2		2 Thrust washer	Tryckbricka	4	
1780	14 83 62 300	1		1 Flywheel assy	Svänghjul kpl	5	
1800	15 83 85 099	1		1 Ring gear	Starttrans	5	(8385058)
1820	16 80 24 910	1		1 Pin	Pinns	5	
1840	17 75 61 749	7		7 Screw	Skruv	5	(9312273)
1860	18 83 46 886	1		1 Ball bearing	Kullager	4	
1880	19 75 61 186	1		1 Driver disc	Medbringarskiva	4	A, (8362402)
1900	20 83 63 377	7		7 Screw	Skruv	5	A
1920	20 75 61 749	7		7 Screw	Skruv	5	A T T (8360612)
1940	83 59 086	1		1 Set, piston rings std	Kolvringsats, std	13	
1960	93 20 003	1		1 Set, piston rings std	Kolvringsats, std	13	TURBO

27. Piston assy without piston tap

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A01
6	Front assembly, Steering	3-E02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A03
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

0400

Lubrication system
Oilpump oilfilter

Smörjsystem
Oljepump oljefilter



Date
Datum
1987-10

Illustration
Bild nr
R4669

Group
Grupp
2

Page
Sida
25

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0020	1 83 61 347	1		1 Oil pump assy	Oljepump kpl	4	
0040	2 83 51 496	1		1 Outer rotor and shaft	Yttre rotor och axel	5	
0060	3 83 62 089	1		1 Piston relief valve	Kolv reduceringsvent	6	
0080	4 83 62 097	1		1 Cover relief valve	Kåpa reduceringsvent	5	
0100	5 83 62 121	1		1 Spring relief valve	Fjäder reducerings- ventil	5	
0120							
0140	6 83 62 105	1		1 O-ring	O-ring	2	
0160	7 83 62 113	1		1 O-ring	O-ring	2	
0180	8 83 51 546	1		1 Split pine	Saxpinne	3	
0200	9 83 51 353	2		2 Screw	Skruv	5	
0220	10 81 19 422	1		1 O-ring	O-ring	2	
0240	11 80 83 932	4		4 Screw	Skruv	5	
0260	12 80 29 985	4		4 Washer	Bricka	5	
0280	13 83 56 893	1		1 Spacing piece	Mellanstycke	6	
0300	13 83 61 867	1		1 Spacing piece	Mellanstycke	6	TURBO
0320	14 83 47 635	1		1 Gasket	Packning	4	S
0340	15 80 34 647	2		2 Pin	Pinne	5	
0360	16 80 84 048	2		2 Screw	Skruv	5	
0380	17 80 83 941	2		2 Screw	Skruv	5	
0400	18 80 29 985	4		4 Washer	Bricka	5	
0420	19 83 48 609	1		1 Extension pipe	Skarvrör	6	
0440	20 83 12 241	1		1 Oil suction line	Oljesugrör	6	M
0460	20 93 00 310	1		1 Oil suction line	Oljesugrör	4	25) A
0480	20 93 00 009	1		1 Oil suction line	Oljesugrör	4	26) A
0480	21 83 47 543	1		1 Gasket	Packning	4	
0500	22 80 82 543	2		2 Screw	Skruv	5	
0520	23 80 28 805	2		2 Washer	Bricka	5	
0540	24 83 50 571	1		1 Oil warning contact	Oljetryckvakt	2	
0560	25 93 09 576	1		1 Oil filter	Oljefilter	1	

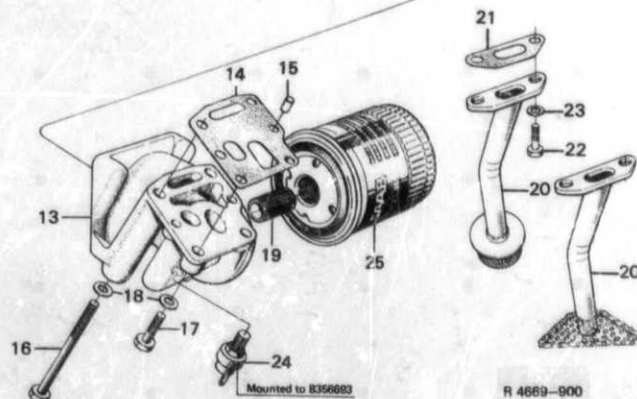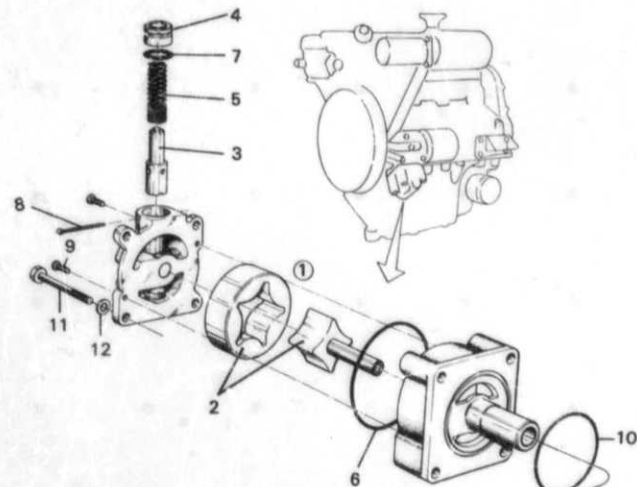

R 4669-900

25. Ch -90801034047 -90802010135 -90806004438.
26. Ch 90801034048 -90802010136 -90806004439.

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

0450

Lubrication system
Oil pipes etc TURBO

Smörjsystem
Oljerör etc TURBO


Date
Datum
1987-10

Illustration
Bild nr
R4335

Group
Grupp
2

Page
Sida
27

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	KS SR / L	Notes Anmärkning
		900		US				
0020	1 83 89 191	1			1 Oil pipe	Oljerör	5	
0040	2 23 03 279	1			1 Gasket	Packning	4	
0060	3 80 82 968	2			2 Screw	Skruv	5	
0080	4 80 29 985	2			2 Washer	Bricka	5	
0100	5 83 89 876	1			1 Banjo screw	Banjoskruv	6	
0120	6 23 79 766	2			2 Gasket	Packning	4	
0140	9 17 54 506	2			2 Clamp	Klamma	9	
0160	10 83 67 732	1			1 Sleeve	Hylsa	5	
0180	11 80 84 048	1			1 Screw	Skruv	5	
0200	12 80 29 985	1			1 Washer	Bricka	5	
0220	13 93 16 571	1			1 Oil pipe, return assy	Oljerör, retur kpl	4	
0360	23 93 00 476	1			1 Gasket	Packning	4	
0380	24 79 70 908	2			2 Stud	Pinnskruv	5	
0400	25 80 73 942	2			2 Nut	Mutter	5	

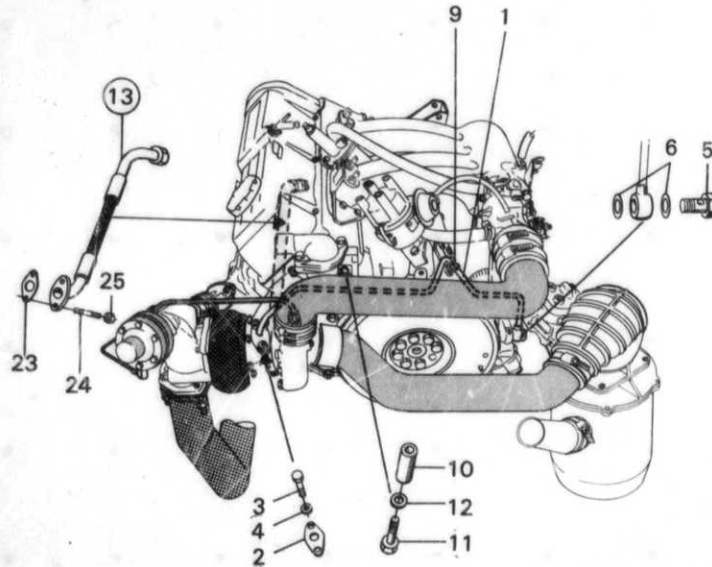

R 4335-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

0500

Fuel system
Carburetor

Bränslesystem
Förgasare

Date
Datum
1987-10

Illustration
Bild nr
R5197

Group
Grupp
2

Page
Sida
29


Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR	Notes Anmärkning
		900	US				
0030	1 83 10 038	1		Carburetor assy	Förgasare kpl	5	(8366692)
0040	2 83 69 894	1		Float chamber	Flötdrhus	5	
0060	3 83 10 393	1		Float	Flöttör	5	
0080	4 83 05 807	1		Spindle, float	Axel, flöttör	6	
0100	7 83 65 850	1		Jet	Munstycke	4	
0120	9 83 66 809	1		Washer	Bricks	5	
0140	10 83 61 743	1		Idling screw	Tomgångsskruv	5	
0160	11 83 61 798	1		Spring	Fjäder	5	
0180	12 83 61 735	1		Bushing	Bussning	5	
0200	13 83 66 411	1		Lever	Hävarm	5	
0220	14 83 6 776	1		Lock ring	Låsring	5	
0240	15 93 0 117	1		Vacuum piston assy	Vakuumpölv kpl	5	
0260	16 83 68 670	1		Diaphragm	Membran	1	
0280	17 83 51 330	1		Retainer, diaphragm	Hållare, membran	6	
0300	18 83 05 633	1		Lock washer, diaphragm	Låsbricka, membran	6	
0320	18 83 05 641	4		Screw	Skruv	5	
0340	20 83 66 312	1		Fuel needle	Bränslenål	4	
0360	21 83 64 200	1		Screw, fuel needle	Skruv, bränslenål	5	
0380	22 93 08 792	1		Needle adjusting screw	Justerskruv, bränsle- nål	3	
0400							
0420	23 83 64 192	1		Retaining clip	Låsclip	3	
0440	24 83 05 328	1		Washer	Bricks	5	
0460	25 83 05 344	1		Nut	Mutter	5	
0485	26 83 55 777	1		Spindle	Axel	6	
0470	27 83 55 114	1		Washer	Bricks	5	
0480	28 83 64 176	1		Choke	Choke	4	
0500	29 83 05 504	2		Screw, choke	Skruv, choke	5	
0520	30 83 64 069	1		Lock nut	Låsmutter	3	
0540	31 83 64 051	1		Adjusting screw	Justerskruv	5	
0560	37 83 69 902	6		Screw with washer	Skruv med bricks	5	
0580	36 83 05 658	1		Spring	Fjäder	6	
0600	39 83 05 866	1		Cover	Lock	6	
0620	40 83 08 892	4		Screw with washer	Skruv med bricks	5	
0640	41 93 59 142	1		Oil damper	Dämpkölv	5	(8308918)
0660	43 83 61 802	1		Spindle, throttle	Spjällaxel	6	
0680	44 83 05 351	1		Throttle	Spjäll	6	
0700	45 83 05 369	2		Screw, throttle	Skruv, spjäll	5	
0720	47 83 22 174	1		Bracket, starter control	Hållare, kallstart- reglage	5	
0740							
0760	48 83 52 395	1		Clip	Clip	5	
0780	49 83 22 364	1		Screw	Skruv	5	
0800	50 83 65 678	1		Stop arm	Stopparm	5	
0820	51 83 05 294	1		Idling screw	Tomgångjusterskruv	5	
0840	52 83 05 302	1		Nut	Mutter	5	
0860	53 83 66 304	1		Spring, throttle return	Returfjäder	5	
0880							
0900	56 83 08 883	2		Screw with washer	Skruv med bricks	5	
0920	57 83 09 031	1		Screw	Skruv	5	
0940	63 93 07 778	1		Temperature compensator	Temperaturkompensator	5	
0960							
0980	64 83 09 080	1		Screw	Skruv	5	
1000	66 83 65 546	1		Dec valve	Dec ventil	5	EXPORT ONLY TOGETHER WITH 8366692
1020							
1040	72 83 69 654	3		Screw	Skruv	5	SW
1060	74 83 69 910	1		Spring retainer	Fjäderhållare	6	SW
1100	75 83 08 652	1		Gasket	Peckning	4	SW
1120	76 83 69 654	3		Screw	Skruv	5	
1130	77 93 10 186	1		Clip	Clips	5	
1140	78 83 15 392	1		Sleeve	Hylsa	5	
1160	79 83 05 026	1		Spring	Fjäder	5	
1180	80 83 66 023	1		Lever	Hävarm	6	
1200	81 93 09 261	1		Cam plate	Kamplatta	5	
1220	82 80 74 288	1		Nut	Mutter	5	
1240	83 83 68 334	1		Washer, insulating	Isoleringsbricka	4	
1260	85 80 74 106	4		Nut	Mutter	5	

R 5197-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E06
Supercharging system	2-E12

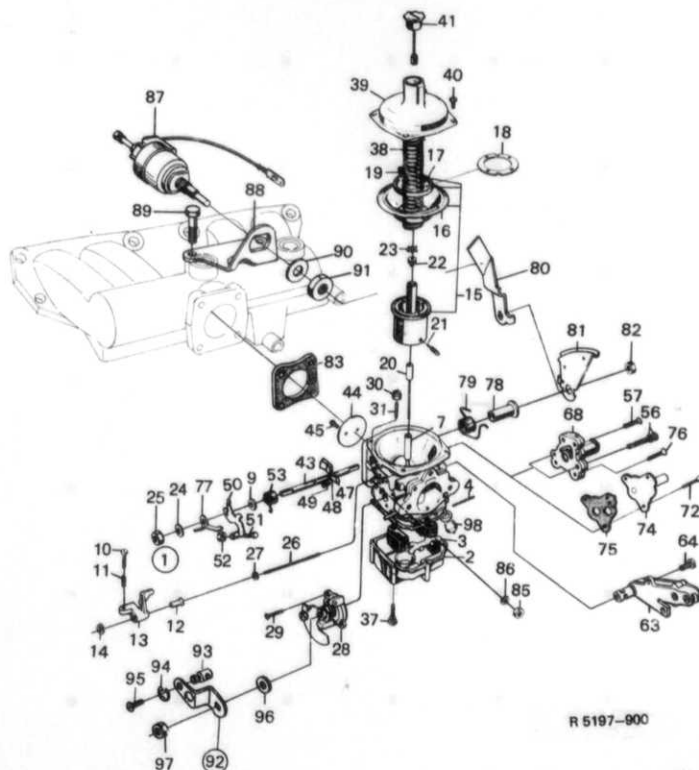

0500

Fuel system
Carburetor

Bränslesystem
Förgasare


Date
Datum
1987-10

Illustration
Bild nr
R5197

Group
Grupp
2

Page
Sida
31

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R / L	Notes Anmärkning
		900	US				
1280	86	80 29 985	4	Washer	Bricks	5	
1300	87	83 35 655	1	Solenoid	Solenoid	5	ONLY SW
1320	88	83 37 537	1	Bracket	Konsol	6	ONLY SW
1340	89	80 19 895	2	Screw	Skruv	5	ONLY SW
1360	90	80 30 017	1	Washer	Bricks	5	ONLY SW
1380	91	79 04 089	1	Nut	Mutter	5	ONLY SW
1400	92	83 22 141	1	Lever assy	Hävarm kpl	5	
1420	93	83 22 186	1	Sleeve	Hylsa	5	
1440	94	79 38 016	1	Lock washer	Spärryttare	5	
1460	95	80 19 531	1	Screw	Skruv	5	
1480	96	83 05 526	1	Washer	Bricks	5	
1500	97	93 13 008	1	Nut	Mutter	5	
1520	98	83 61 644	1	Needle valve set	Nålventilsats	3	
1540	93	84 234	X	Gasket set	Packningssats	4	
1560	83	84 242	X	Gasket set	Packningssats	4	
1580	83	84 258	X	Gasket set	Packningssats	4	
1600							

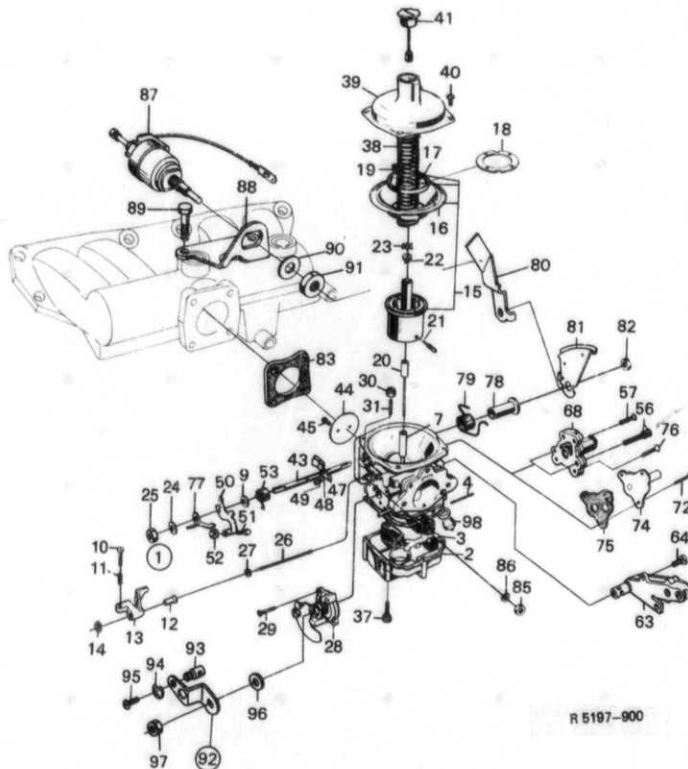

R 5197-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D02
Engine control	2-E06
Supercharging system	2-E12

0550

Fuel system
Twin carburetor

Bränslesystem
Två-förgasare

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R5911

2

33

Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S SR	Notes Anmärkning
		900	US			
0020	1 83 68 862	1	Carburettor Assy front	Förgasare kpl främre	5	
0030	2 83 68 742	1	Carburettor Assy rear	Förgasare kpl bakre	5	SW, AU
0040	3 83 68 944	1	Spindle throttle	Spjällaxel	5	EXP. I
0120	4 83 69 969	1	Spindle throttle	Spjällaxel	6	PART OF 83 66 832
0140	5 83 61 719	1	Stop arm	Stopparm	6	PART OF 83 66 742, 83 66 832
0160	6 83 69 977	1	Stop arm	Stopparm	5	
0170	7 83 05 302	1	Nut	Mutter	5	
0200	8 83 05 294	1	Idling screw	Tomgångsskruv	5	
0240	9 83 61 446	2	Nut	Mutter	5	
0300	10 83 61 686	2	Spring, throttle return	Returfjäder	5	
0320						
0340	11 83 61 479	2	Throttle	Spjäll	6	
0360	12 83 61 487	4	Screw, throttle	Skruv, spjäll	5	
0380	13 75 11 566	1	Choke	Choke	4	PART OF 83 66 742, 83 66 870
0400	13 75 11 558	1	Choke	Choke	4	PART OF 83 66 532
0420	14 83 61 504	4	Screw, choke	Skruv, choke	5	
0440	15 83 10 393	2	Float	Flottör	5	
0460	16 83 06 677	2	Spindle, float	Axel, flottör	6	
0480	17 93 08 792	2	Needle adjusting screw	Justerskruv, bränslenål	3	
0500						
0520	18 83 64 192	2	Retaining clip	Låscip	3	
0540	19 83 69 954	3	Screw	Skruv	5	SW
0560	20 83 08 049	3	Washer	Bricka	5	SW
0580	21 83 69 639	1	Blind flange	Blindfläns	4	SW
0600	22 83 66 843	2	Jet	Munstycke	5	
0620	23 83 64 051	1	Adjusting screw	Justerskruv	5	
0640	25 83 61 503	1	Screw	Skruv	5	
0660	27 83 61 511	1	Nut	Mutter	5	
0740	28 83 06 567	1	Idling screw	Tomgångsskruv	5	
0760	30 83 64 283	1	Spring	Fjäder	5	
0820	32 83 61 529	2	Temperature compensator	Temperaturkompensator	5	
0840						
0860	33 83 09 080	2	Screw	Skruv	5	
0880	34 83 69 894	2	Float chamber	Flottörhus	6	
0900	37 83 69 902	12	Screw with washer	Skruv med bricka	5	
0920	38 93 06 325	9	Vacuum piston Assy	Vacuumpölv kpl	5	
0940	39 83 61 537	2	Diaphragm	Membran	1	
1000	40 83 61 545	2	Lock washer	Låsbricka	5	
1020	41 83 05 641	8	Screw	Skruv	5	
1040	42 83 08 892	8	Screw with washer	Skruv med bricka	5	
1060	43 93 59 134	2	Oil damper	Dämpkölv	5	
1080	44 83 64 200	2	Screw, fuel needle	Skruv, bränslenål	5	
1100	45 83 61 560	2	Spring	Fjäder	5	
1140	46 83 66 577	2	Fuel needle	Bränslenål	4	
1220	50 83 63 840	2	Cover	Lock	6	
1240	51 83 64 089	2	Lock nut	Låsmutter	3	
1260	52 83 61 727	1	Lever	Hävarm	5	
1280	53 83 51 735	1	Bushing	Bussning	5	
1300	54 83 06 867	1	Stopping screw	Stoppskruv	5	
1320	55 83 61 776	1	Lock ring	Låsring	5	
1340	56 83 65 546	1	Overflow valve	Överströmningsventil	5	PART OF 83 66 742
1380	57 83 66 767	1	Gasket	Packning	4	PART OF 83 66 742
1420	58 83 08 983	2	Screw with washer	Skruv med bricka	5	PART OF 83 66 742
1440	59 83 09 031	1	Screw	Skruv	5	PART OF 83 66 742
1460	60 83 08 049	1	Washer	Bricka	5	PART OF 83 66 742
1540	64 93 10 178	2	Clip	Clips	5	
1600	67 83 63 856	1	Plastic sleeve	Plasthylsa	5	
1620	68 83 60 493	1	Plug	Propp	5	
1640	69 83 62 485	1	Lever	Hävarm	5	
1660	70 83 57 071	1	Cam plate	Kamskiva	5	M
1680	70 83 57 535	1	Cam plate	Kamskiva	5	A
1700	71 81 12 989	1	Washer	Bricka	5	
1720	72 80 50 619	1	Nut	Mutter	5	

R 5911-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A06
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

0550

Fuel system
Twin carburetor

Bränslesystem
Två-förgasare


Date
Datum
1987-10

Illustration
Bild nr
R5911

Group
Grupp
2

Page
Sida
35

Fig. Pos.	Part No Art nr	Quantity/Åntal		Description	Benämning	K/S	Notes
		900	US			SR	Anmärkning
1740	73 83 56 602	1		Spring	Fjäder	5	
1760	74 83 59 788	2		Washer, insulating	Isoleringsbricka	4	
1780	75 93 12 570	1		Plug	Plugg	4	1980-
1800	76 83 36 677	2		Gasket	Packning	4	
1900	81 83 22 174	1		Bracket	Konsol	5	
1920	82 83 22 364	1		Screw	Skruv	5	
*940	83 83 52 395	1		Clip	Clip	5	
1960	84 80 74 106	4		Nut	Mutter	5	
1980	85 80 29 985	4		Washer	Bricka	5	ONLY SW, EU
2000	86 83 35 655	1		Solenoid	Solenoid	5	ONLY SW, EU
2020	88 80 30 017	1		Washer	Bricka	5	ONLY SW, EU
2040	89 79 04 089	1		Nut	Mutter	5	ONLY SW, EU (8069031)
2060	90 93 07 504	1		Bracket	Fäste	4	ONLY SW, EU
2080	91 80 19 895	2		Screw	Skruv	5	ONLY SW, EU
2090	92 83 63 806	1		Needle valve set	Nålventilsats	3	
2100	83 64 242	X		Gasket set	Packningssats	4	
2120	83 64 267	X		Gasket set	Packningssats	4	
2140	83 61 594	X		Gasket set	Packningssats	4	

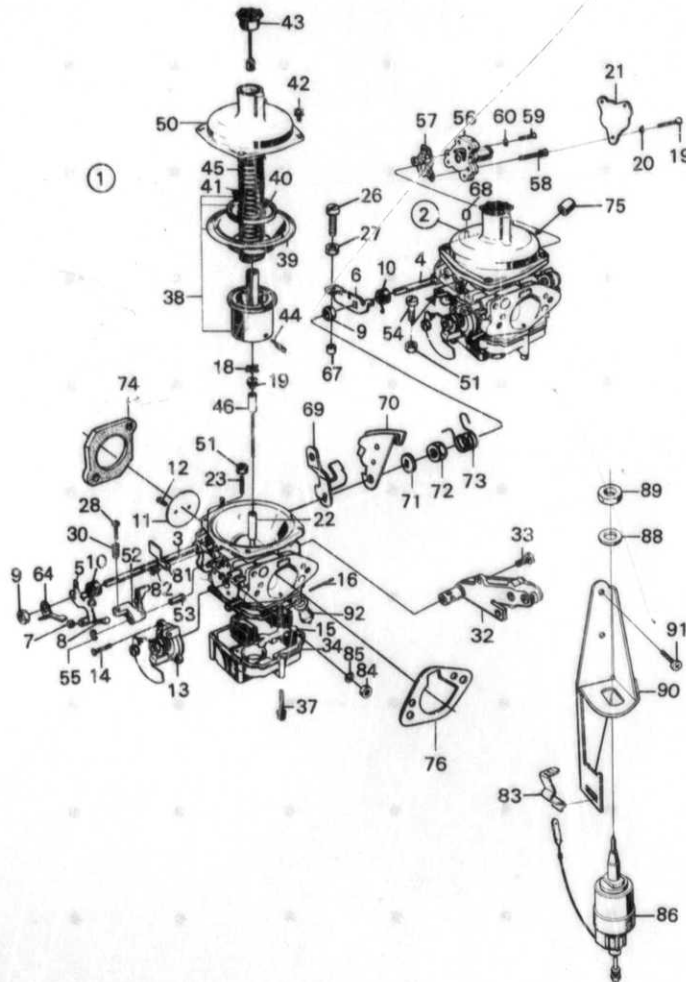

R 5911-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A00
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

0600

Fuel system
Air cleaner, carburetor
engine

Bränslesystem
Luftrenare, förgasar-
motor

Date
Datum
1987-10

Illustration
Bild nr
R5199

Group
Grupp
2

Page
Sida
37


Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR	Notes Anmärkning
		900	US				
0020	1 83 17 853	1		Air cleaner assy	Luftrenare kpl	5	
0040	2 93 18 502	1		Insert	Insats	1	
0060	3 83 27 578	1		Cover	Lock	6	
0080	4 83 18 339	3		Clamp	Klamme	5	
0090	5 83 17 919	1		Insert part	Insatsdel	6	
0100	6 83 34 534	1		Preheater valve unit	Spjällhus	5	
0120	7 93 15 144	1		Air tube	Lufttrör	5	
0140	8 93 19 526	4		Clip	Klammer	5	
0160	9 93 47 493	1		Hose	Slang	4	(8385791)
0180	8 83 85 759	1		Hose	Slang	4	T
0200	10 83 03 207	1		Sleeve	Stos	4	
0220	13 93 17 991	1		Preheater hose	Förvärmslang	3	
0240	14 79 70 130	2		Clamp	Klamme	5	
0260	15 79 70 148	2		Clamp	Klamme	5	
0280	16 79 70 163	1		Clamp	Klamme	5	
0300	17 83 27 561	1		Clamp	Klamme	5	T
0320	18 83 27 561	1		Clamp	Klamme	5	
0340	19 93 31 265	1		Clamp	Klamme	5	
0360	20 83 23 480	1		Hose	Slang	4	
0400	21 79 70 064	1		Hose clamp	Slangklamme	5	
0410	22 79 70 072	1		Hose clamp	Slangklamme	5	
0420	25 83 21 044	1		Strap, front	Spännband främre	5	
0440	26 83 21 051	1		Strap, rear	Spännband bakre	5	
0460	27 80 19 945	1		Screw	Skruv	5	
0480	28 93 03 298	1		Lower part, air box	Underdel samlingslåda	5	T
0500	29 83 19 329	4		Sleeve	Hylsa	6	-1979 T
0520	30 83 85 932	1		Upper part, air box	Överdel, samlingslåda	5	T
0540	31 83 21 689	1		Sealing strip	Tätningsslist	5	T
0560	32 83 19 162	4		Clamp	Klamme	5	T
0580	33 83 25 581	2		Plate	Platta	6	T
0600	34 83 25 326	4		Screw	Skruv	5	T
0620	35 79 63 390	4		Lock nut	Låsmutter	3	T
0640	36 93 03 249	1		Dust protective	Smutskydd	5	T
0660	37 80 59 396	3		Screw	Skruv	5	T
0680	38 79 33 815	3		Washer	Bricka	5	T
0700	39 79 72 607	1		Screw	Skruv	5	
0720	40 80 29 951	1		Washer	Bricka	5	
0740	41 83 79 026	1		Ring fastener	Fästning	6	C
0760	42 79 62 434	3		Screw	Skruv	5	C
0780	43 83 74 639	2		Gasket	Packning	4	C

R 5199-900

0	General	1-A02
1	Tools	1-HC2
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

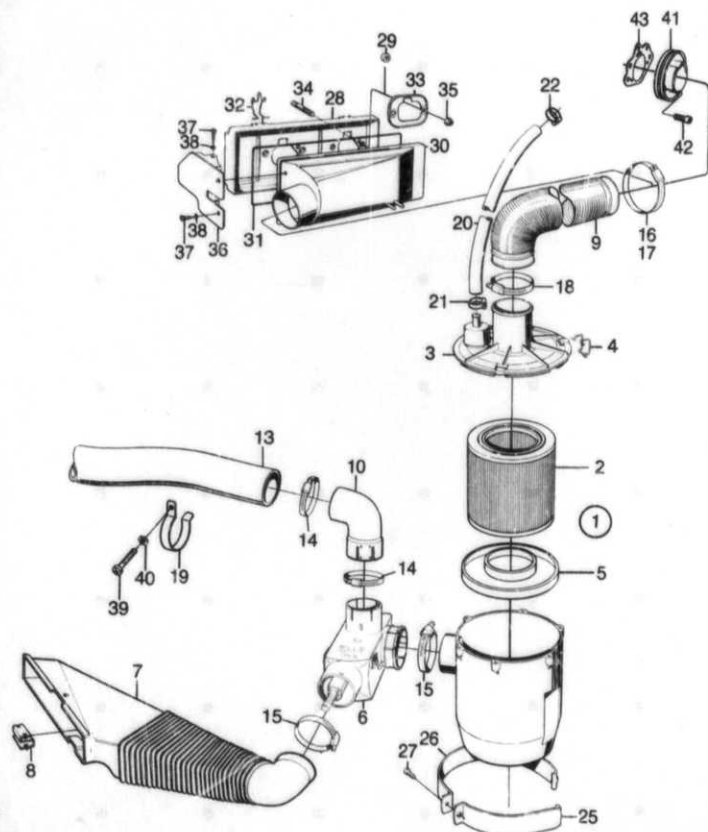

0650

Fuel system
Air cleaner, injection
engine

Bränslesystem
Luftrenare, insprutnings-
motor

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R5200

2

39


Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	KS SR	Notes
		900		US				Anmärkning
1	83 34 542	1			Air cleaner assy	Luftrenare kpl	5	
1	83 34 542				Air cleaner assy	Luftrenare kpl	5	1980 US
1	93 03 894				Air cleaner assy	Luftrenare kpl	5	CA, AU
1	93 03 894				Air cleaner assy	Luftrenare kpl	5	1978 US
1	93 18 333	1			Air cleaner assy	Luftrenare kpl	5	1979- TURBO FOR CA AND AU
1	83 32 785				Air cleaner assy	Luftrenare kpl	5	1979 TURBO
1	93 18 338				Air cleaner assy	Luftrenare kpl	5	1979 TURBO FOR US
1	83 32 785	1			Air cleaner assy	Luftrenare kpl	5	1980- TURBO
2	93 18 502				Insert	Insats	1	
3	93 17 919				Insert part	Insatsdel	6	
4	93 03 892	1			Adapter	Mellandel	5	PART OF 93 03 894
4	93 18 353	1			Adapter	Mellandel	5	PART OF 93 18 338
4	83 34 831	1			Adapter	Mellandel	5	PART OF 83 34 542
4	83 32 793	1			Adapter	Mellandel	5	PART OF 83 32 785
5	83 32 165				Nipple	Nippel	6	PART OF 83 32 793
6	83 60 257	1			Bushing	Bussning	5	PART OF 83 32 793
8	83 26 621	1			Rubber angle	Gummivinkel	5	PART OF 93 18 353, 93 03 892
9	93 25 656	1			Bushings	Bussning	5	PART OF 93 18 353, 93 03 892
10	93 03 900				Nipple	Nippel	5	US AND CA
11	79 22 370	6			Screw	Skruv	5	
12	93 15 144	1			Air tube	Lufttrör	5	
13	93 18 526	4			Clip	Klammer	5	
14	79 70 148	2			Clamp	Klamme	5	
14	79 70 148	3			Clamp	Klamme	5	TURBO
15	83 86 351	1			Air supply tube	Luftanslutning	4	
16	83 34 955	1			Air supply tube	Luftanslutning	6	TURBO
16	83 34 948	1			Air supply tube	Luftanslutning	6	TURBO FOR US AND CA
17	79 70 189	1			Clamp	Klamme	5	
18	79 70 163	1			Clamp	Klamme	5	
19	83 32 918	1			Snorkel	Snorkel	5	AU
20	79 70 155	1			Clamp	Klamme	5	(7963614), AU
21	83 21 044	1			Strap, front	Spännband, främre	5	
22	83 21 051	1			Strap, rear	Spännband, bakre	5	
23	80 19 945				Screw	Skruv	5	
24	83 34 534	1			Preheater valve unit	Spjällhus	5	
25	93 03 207	1			Sleeve	Stos	4	
26	79 70 130	2			Clamp	Klamme	5	
27	93 17 991	1			Preheater hose	Förvärmslång	3	
27	93 31 174	1			Preheater hose	Förvärmslång	3	1980- I FOR SW, SF AND CA
27	93 17 744				Preheater hose	Förvärmslång	3	-1979 UC
27	93 31 182	1			Preheater hose	Förvärmslång	3	1980- US AND JA
27	93 03 215	1			Preheater hose	Förvärmslång	3	TURBO
28	83 03 181	1			Preheater valve unit	Spjällhus	5	TURBO
30	93 31 265	1			Clamp	Klamme	5	
31	79 72 807	1			Screw	Skruv	5	
32	80 29 951	1			Washer	Bricka	5	
33	83 26 480	1			Hose	Slang	4	

R 5200-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A06
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

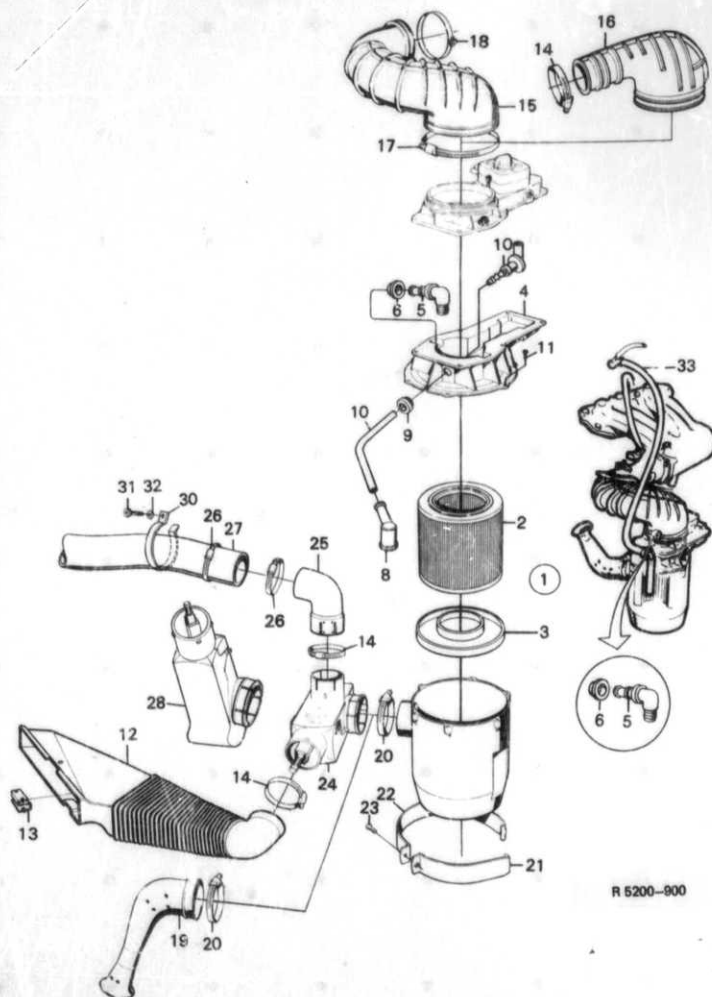

0700

Fuel system
Fuel pump

Bränslesystem
Bränslepump


Date
Datum
1987-10

Illustration
Bild nr
R3708

Group
Grupp
2

Page
Side
41

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R /L	Notes Anmärkning
		900		US			
0020	1 93 14 055	1		Fuel pump assy	Bränslepump kpl	2	ALT TO 83 48 617
0040	2 83 51 447	1		Cover	Lock	6	
0060	3 83 51 421	1		Screw, cover	Skruv, lock	5	
0080	4 83 51 439	1		Washer, cover	Bricka, lock	5	
0100	5 83 51 454	1		Filter	Filter	4	
0120	6 83 51 462	1		Gasket	Packning	2	
0140	7 83 51 488	1		Spring	Fjäder	5	
0160	8 83 68 672	1		Gasket	Packning	2	
0180	9 80 82 943	2		Screw	Skruv	5	
0200	10 80 29 985	2		Washer	Bricka	5	

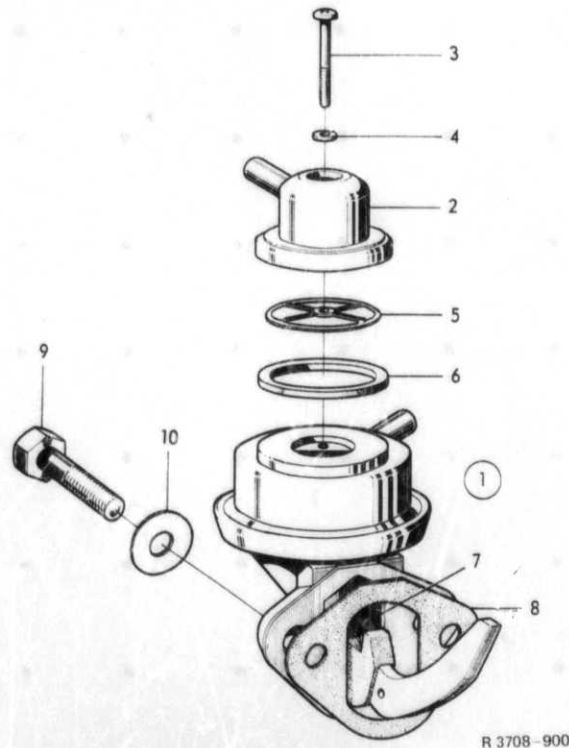

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A06
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

0750

Fuel system
Fuel tank, lines and
hose carb engine


Bränslesystem
Bränsletank, bränsle-
ledning förg-motor

Date
Datum
1987-10

Illustration
Bild nr
R4297

Group
Grupp
2

Page
Sida
43

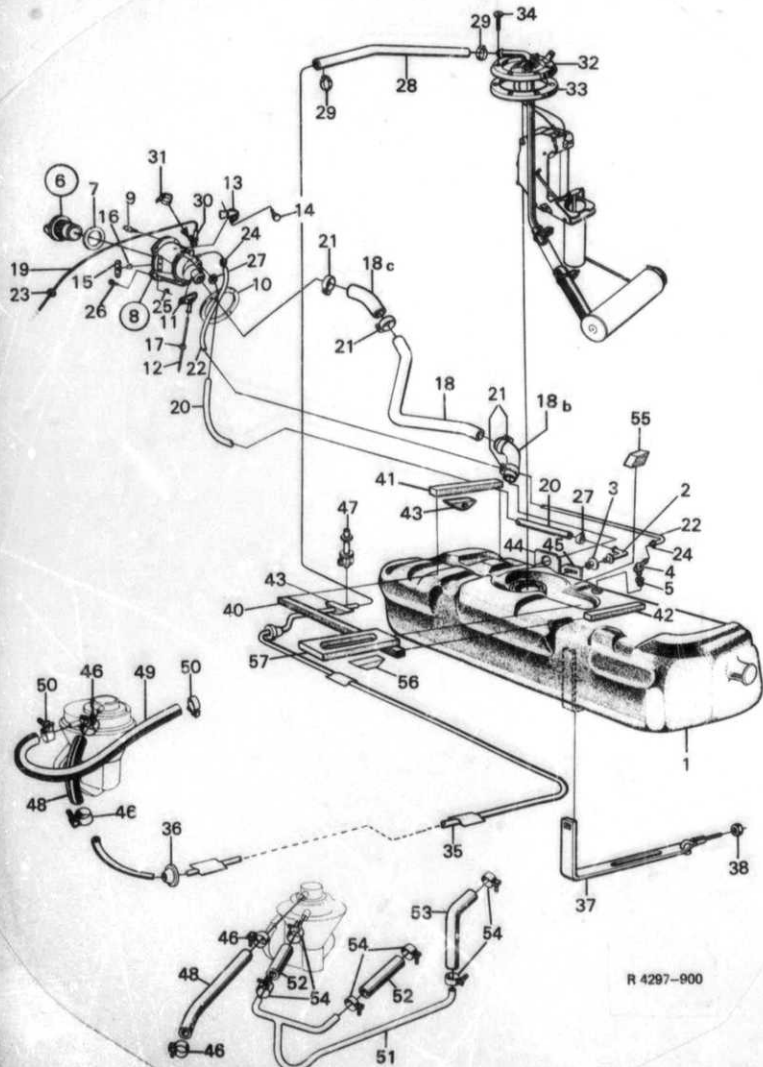

R 4297-900

Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S SR / L	Notes Anmärkning
		900				
		US				
0020	1 83 39 574	1	Fuel tank assy	Bränsletank kpl	6	
0040	2 93 15 904	1	Hose connection	Slanganslutning	4	
0060	3 93 26 649	1	Bushing	Bussning	5	
0080	4 93 28 857	1	Hose connection	Slanganslutning	4	
0100	5 83 26 656	1	Bushing	Bussning	6	
0120	6 83 22 729	1	Filler cap assy	Tanklock kpl	2	
0140	7 83 28 098	1	Gasket	Packning	2	
0160	8 83 87 508	1	Filler pipe assy	Påfyllningsrör kpl	5	
0180	9 83 15 475	2	Rubber stop	Gummistopp	5	
0200	10 93 48 838	1	Gasket	Packning	5	(830898)
0220	11 83 23 412	1	Rubber connection	Gumminslutning	4	
0240	12 83 23 941	1	Drain pipe	Dräneringsrör	6	
0250	13 93 18 346	1	Valve	Ventil	5	
0255	14 83 87 573	1	Sealing	Tätning	5	
0260	15 83 86 783	1	Spring nut	Fjädrermutter	5	
0280	16 79 35 471	1	Rivet	Hålnit	5	
0300	17 79 61 329	1	Grommet	Genomföringsbussning	5	
0325	18 93 22 562	1	Filler pipe	Påfyllningsrör	4	
0330	18B 76 27 421	1	Extension hose	Skarvslang	5	(8322983)
0335	18C 93 22 975	1	Extension hose	Skarvslang	5	
0340	19 87 34 161	1	Drain hose	Dränerings slang	5 (23)	
0350	19 93 34 301	1	Drain hose	Dränerings slang	5 (24)	
0360	20 75 12 338	1	Ventilation hose	Urluftnings slang	3	
0380	21 93 47 808	4	Hose clamp	Slangklämma	5	
0400	22 83 32 074	1	Ventilation hose	Urluftnings slang	5	
0420	23 83 32 157	1	Grommet	Genomföringsbussning	6	
0440	24 83 32 827	2	Hose clamp	Slangklämma	5	
0460	25 83 15 467	4	Clip	Clip	5	
0480	26 79 68 207	4	Screw	Skruv	5	
0500	27 79 63 531	2	Hose clamp	Slangklämma	5	
0520	28 93 63 250	1	Fuel line L = 520 mm	Bränsleledning L = 520 mm	4 (31), (8316234)	
0530						
0540	29 79 68 308	2	Hose clamp	Slangklämma	5	
0560	30 83 34 880	1	Extension hose	Skarvslang	5	
0580	31 79 68 308	1	Hose clamp	Slangklämma	5	
0600	32 83 26 209	1	Fuel lever trans-	Bränslenivågivare	3	
0620			mitter			
0640	33 83 26 720	1	Rubber gasket	Gummipackning	3	
0660	34 80 19 531	6	Screw	Skruv	5	
0680	35 83 29 104	1	Fuel line	Bränsleledning	4	
0700	36 83 28 346	1	Grommet	Genomföringsbussning	6	
0720	37 83 29 817	1	Strap	Spännband	6	
0740	38 80 14 288	2	Nut	Mutter	5	
0760	40 83 28 791	1	Sealing strip	Tätningalist	5	
0780	41 83 28 809	1	Sealing strip	Tätningalist	5	
0800	42 83 28 817	1	Sealing strip	Tätningalist	5	
0820	43 83 28 825	2	Sealing	Tätning	5	
0840	44 83 85 189	1	Rubber seal	Gummitätning	5	
0860	45 93 27 545	1	Rubber sealing	Gummitätning	6	
0880	46 79 68 308	4	Hose clamp	Slangklämma	5	
0900	47 79 63 896	1	Pipe clip	Rörclip	4	
0920	48 93 63 276	2	Fuel hose L = 190 mm	Bränsleslang L = 190mm	5 (31), (8324907)	
0940	49 82 16 382	1	Fuel hose L = 235 mm	Bränsleslang L = 235mm	5 (3)	
0960	50 83 59 275	2	Hose clamp	Slangklämma	5	
0980	51 83 59 291	1	Tube	Rör	6 (T)	
1000	52 93 63 284	2	Hose L = 45 mm	Slang L = 45 mm	4 (31), T	
1020	53 93 63 268	1	Hose	Slang	5 (31), T	
1040	54 83 59 275	2	Hose clamp	Slangklämma	5 (T)	
1060	55 93 27 562	1	Rubber sealing	Gummitätning	5	

3. Manufactured by 93 63 250
23. Ch -90801034662 -90802010185 -90806005434.
24. Ch 90801034663 -90802010186 -86000001-
31. Manufactured by 93 62 781.

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A06
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

0750

Fuel system
Fuel tank, lines and
hose carb engine

Bränslesystem
Bränsletank, bränsle-
ledning förg-motor

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1987-10

R4297

2

45

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
1070	56	83 87 177	2	Sealing	Tätning	5	
1080	57	83 87 185	1	Sealing	Tätning	5	
1100		93 62 781	X	Hose 10 m	Slang 10 m	2	

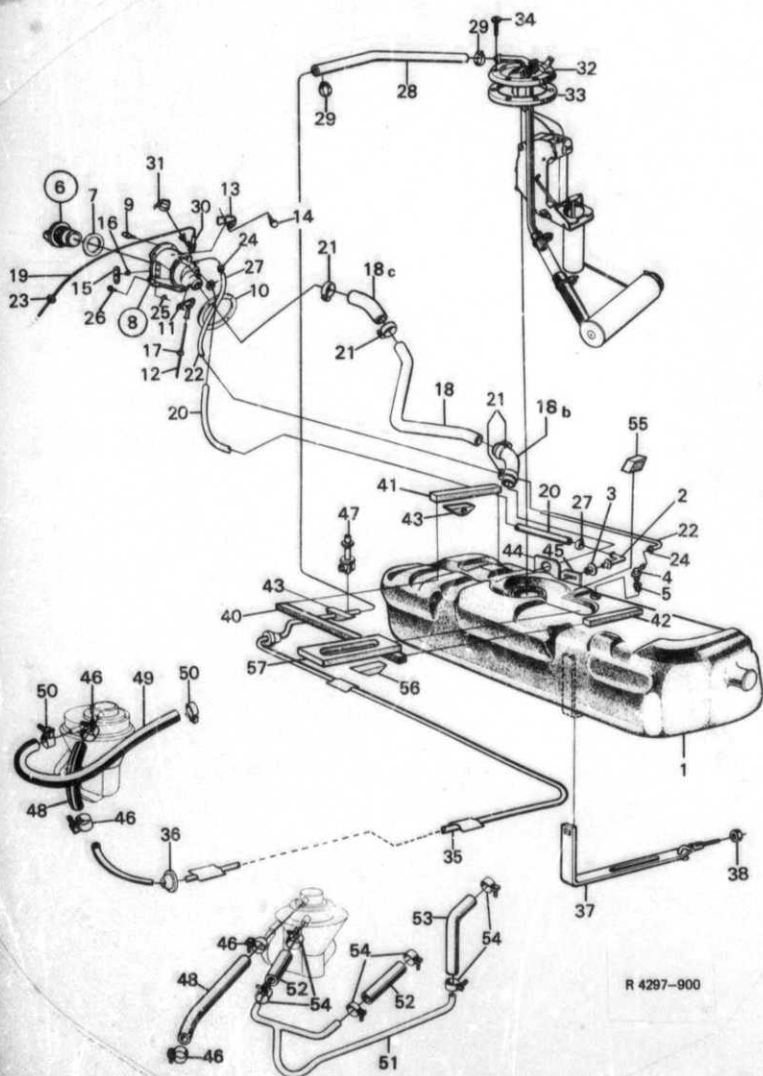

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A06
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

0800

Fuel system
Fuel tank, lines and hose
pump, i engine -1979

Bränslesystem
Bränsletank, bränsleledn.
pump, i motor -1979

Date
1987-10

Illustration
R5101

Group
2

Page
47

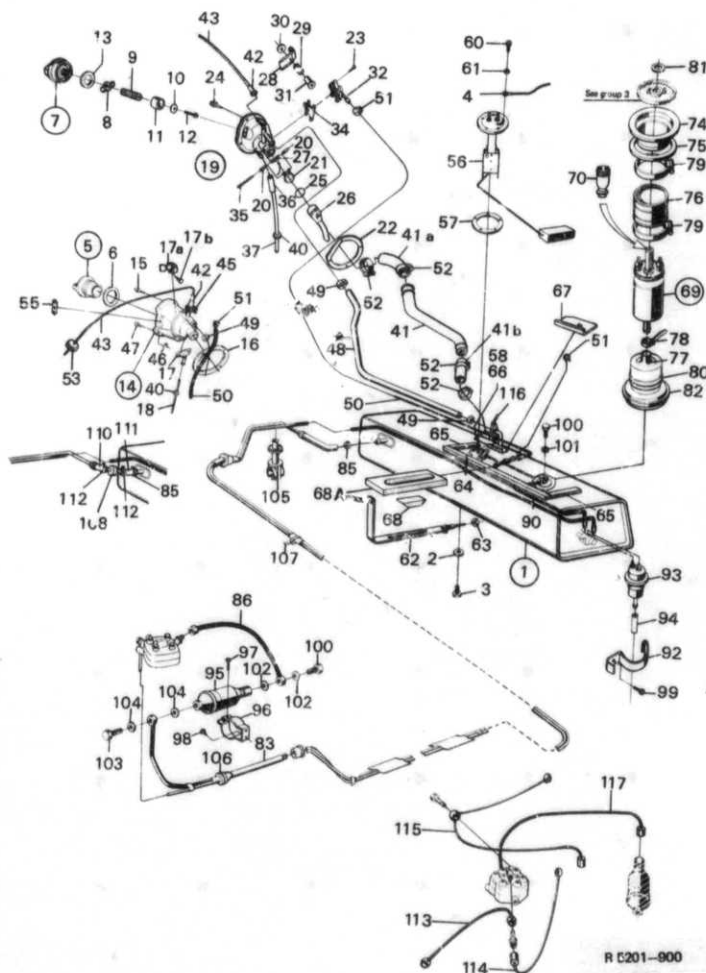


Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S	Notes
		900	US		SR	Anmärkning
0020	1	1	1	Fuel tank assy	Bränsletank kpl	6
0040	2	1	1	Seal washer	Tättningsbricka	5
0060	3	1	1	Plug	Plugg	4
0080	4	1	1	Ground cable	Jordningskabel	6
0100	5	1	1	Filler cap assy	Tanklock kpl	2
0110	5	1	1	Filler cap assy	Tanklock kpl	2 29) UF AND CA
0120	6	1	1	Gasket	Packning	2
0140	7	1	1	Filler cap assy	Tanklock kpl	2 UC
0150	7	1	1	Filler cap assy	Tanklock kpl	2 30) UF AND CA
0160	8	1	1	Lock washer	Låsbricka	6
0180	9	1	1	Spring	Fjäder	6
0200	10	1	1	Washer	Bricka	5
0220	11	1	1	End piece	Ändstycke	4
0240	12	1	1	Screw	Skruv	4
0260	13	1	1	Gasket	Packning	4
0280	14	1	1	Filler pipe assy	Påfyllningsrör kpl	5
0290	14	1	1	Filler pipe assy	Påfyllningsrör kpl	5 29) UF AND CA
0300	15	1	1	Rubber stop	Gummistopp	5
0320	16	1	1	Gasket	Packning	5 (838888)
0340	17	1	1	Rubber connection	Gummianslutning	4
0345	17A	1	1	Valve	Ventil	5
0350	17B	1	1	Sealing	Tätning	5
0360	18	1	1	Drain pipe	Dräneringsrör	6
0380	19	1	1	Filler pipe assy	Påfyllningsrör kpl	5 UC
0390	19	1	1	Filler pipe assy	Påfyllningsrör kpl	5 30) UF AND CA
0400	20	1	1	Spacer tube	Disansrör	5 UC
0420	21	1	1	Flap	Kleff	5 UC
0440	22	1	1	Rubber gasket	Gummipackning	5 US AND CA
0460	23	1	1	Screw	Skruv	5 US AND CA
0480	24	2	2	Rubber stop	Gummistopp	5 US AND CA
0500	25	1	1	Rubber case	Gummihiysa	5 US AND CA
0520	26	1	1	Guide pipe	Styrör	6 US AND CA
0540	27	1	1	Flap	Kleff	5 UC
0560	28	1	1	Spring	Fjäder	5 US AND CA
0580	29	1	1	Sealing	Tätning	5 US AND CA
0600	30	1	1	Spring guide	Fjäderstyrning	5 US AND CA
0620	31	1	1	Nipple	Nippel	4 US AND CA
0640	32	1	1	Gasket	Packning	4 US AND CA
0660	33	1	1	Shaft	Åxel	5 UC
0680	34	1	1	Hose	Slang	4 31) US AND CA
0700	35	1	1	Drain pipe	Dräneringsrör	6 US AND CA
0720	36	1	1	Grommet	Genomföringsbussning	5
0740	37	1	1	Filler pipe	Påfyllningsrör	4
0760	40	1	1	Extension hose	Skarvslang	5
0780	41	1	1	Extension hose	Skarvslang	5 (9322963)
0790	41A	1	1	Extension hose	Skarvslang	5
0810	42	1	1	Extension hose	Skarvslang	5
0830	43	1	1	Drain hose	Dräneringsslang	5
0840	45	1	1	Hose clamp	Slangklämma	5
0860	46	1	1	Clip	Clips	5
0880	47	4	4	Screw	Skruv	5
0900	48	1	1	Ventilation hose	Urfyllnings slang	3
0920	49	2	2	Hose clamp	Slangklämma	5 (7935240)
0940	50	1	1	Ventilation hose	Urfyllnings slang	5 3) US AND CA
0960	50	1	1	Ventilation hose	Urfyllnings slang	5
0970	51	2	2	Hose clamp	Slangklämma	5
0990	52	4	4	Hose clamp	Slangklämma	5
1000	53	1	1	Grommet	Genomföringsbussning	6
1020	53	1	1	Grommet	Genomföringsbussning	6

3. Manufactured by 93 R3 250
20. Ch. -90791025988. -90792002429.
30. Ch. -90791025988. -90792002430.
31. Manufactured by 93 R3 731.

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
12	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

0800

Fuel system
Fuel tank, lines and hose
pump, i engine -1979

Bränslesystem
Bränsletank, bränsleledn,
pump, i motor -1979

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R5201

2

49

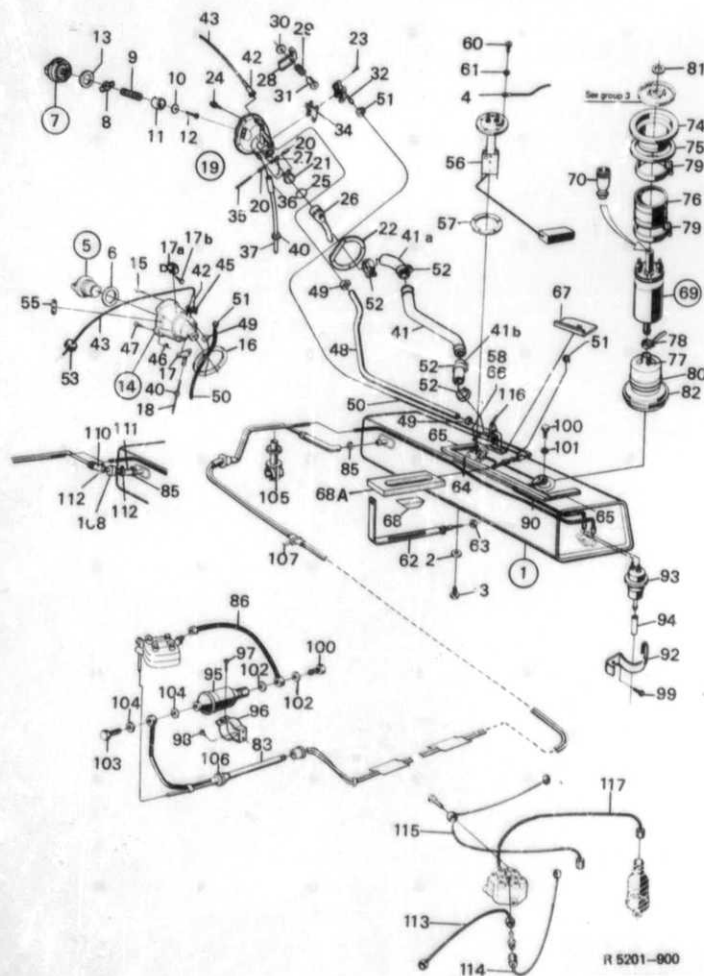


Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S SR	Notes Anmärkning
		900				
		US				
1060	55 83 39 244	1	1 Nut washer	Mutterbricka	5	
1080	56 83 86 858	1	1 Fuel level transmit- ter	Bränslenivågivare	3	
1100						
1120	57 83 28 345	1	1 Gasket	Packning	3	
1130	58 93 19 922	1	1 Rubber protective	Gummiskydd	5	
1140	60 93 00 534	5	5 Screw	Skruv	5	
1160	61 70 36 726	5	5 Washer	Bricka	5	
1180	62 83 85 452	2	2 Strap	Spännband	5	
1200	63 90 74 288	2	2 Lock nut	Låsmutter	5	
1220	64 83 28 643	1	1 Sealing	Tätning	5	
1240	65 83 28 650	2	2 Sealing	Tätning	5	
1260	66 83 85 189	1	1 Sealing	Tätning	5	
1280	67 93 27 545	1	1 Sealing	Tätning	5	
1300	68 83 87 177	2	2 Sealing	Tätning	5	
1310	68A 83 87 185	1	1 Sealing	Tätning	5	
1320	69 83 34 997	1	1 Fuel pump assy	Bränslepump kpl	2	
1340	70 93 19 799	1	1 Non-return valve	Backventil	3	SUPERSEDED BY 9361015 AND 9361668
1360	71 93 37 510	1	1 Non-return valve	Backventil	3	USED WITH 8334997
1380	74 83 86 286	1	1 Mounting	Pumpfäste	5	USED WITH 9361015
1400	75 83 85 528	1	1 O-ring	O-ring	5	
1420	76 83 21 762	1	1 Hose	Slang	5	
1440	77 83 31 217	1	1 Hose	Slang	5	
1460	78 85 17 104	1	1 Strap	Spännband	5	
1480	79 83 27 579	2	2 Hose clamp	Slangklämma	5	
1500	80 83 74 357	2	2 Hose clamp	Slangklämma	5	
1520	81 83 24 048	1	1 Gasket	Packning	4	
1540	82 83 31 159	1	1 Strainer	Sugfilter	4	
1560	83 93 02 159	1	1 Fuel line	Bränsleledning	5	US
1580	83 93 02 142	1	1 Fuel line	Bränsleledning	5	NOT US
1600	85 79 68 308	1	1 Hose clamp	Slangklämma	5	
1620	86 93 02 183	1	1 Fuel line	Bränsleledning	5	SW AND EU
1640	90 83 19 675	1	1 Fuel line	Bränsleledning	5	
1720	92 83 39 105	1	1 Clamp	Klämma	5	
1740	93 93 17 769	1	1 Fuel accumulator	Bränsleackumulator	5	
1760	94 83 34 099	1	1 Hose	Slang	5	
1780	95 83 39 731	1	1 Fuel filter	Bränslefilter	2	
1800	96 93 00 369	1	1 Bracket	Fäste	5	
1820	97 79 22 362	1	1 Screw	Skruv	5	
1840	98 79 22 490	2	2 Blind rivet	Blindnit	5	
1860	99 79 22 388	1	1 Screw	Skruv	5	
1880	100 83 19 915	2	2 Banjo screw	Banjoskruv	5	
1900	101 83 24 048	1	1 Gasket	Packning	4	
1920	102 83 26 704	2	2 Seal ring	Tättningsring	3	
1940	103 83 22 927	1	1 Banjo screw	Banjoskruv	5	
1960	104 83 26 712	2	2 Gasket	Packning	5	
1980	105 83 20 749	1	1 Pipe clip	Rörclips	5	
2000	106 83 28 346	1	1 Pipe retainer	Rörhållare	5	
2020	107 83 79 265	1	1 Strap	Spännband	5	
2040	108 83 28 601	1	1 Non-return valve	Backventil	3	
2060	110 83 30 656	1	1 Fuel line	Bränsleledning	5	FOR ELCD SYSTEM
2080	111 93 18 411	1	1 Hose	Slang	5	
2100	112 79 68 308	2	2 Clamp	Klämma	5	
2120	113 93 03 389	1	1 Fuel line, mixing reg magnetic valve	Bränsleledning, mängd mätare-magnetventil	5	TURBO
2140						
2160	114 93 03 397	1	1 Fuel line, mixing reg warm up reg	Bränsleledning, mängd -mätare-styrtrycks- ventil	5	TURBO
2180						
2200						
2220	115 83 36 919	1	1 Fuel line, pressure reg mixing reg warm up reg	Bränsleledning, tryck regulator mængdmätare styrtrycksventil	5	
2240						
2260						
2280	116 79 71 872	2	2 Strap	Spännband	5	
2300	117 93 02 878	1	1 Fuel line	Bränsleledning	5	TURBO FOR EU AND SW
	93 62 781	X	X Hose 10 m	Slang 10 m	2	(8315681)

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A06
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

0825

Fuel system
Fuel tank, pump, etc
engine i 1980-

Bränslesystem
Bränsletank, pump, etc
motor i 1980-

Date
Datum:

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R5912


2

51

Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S S/R	Notes Anmärkning
		900				
0020	1 93 22 819	1	1 Fuel tank assy	Bränsletank kpl.	6 21)	
0025	1 93 33 766	1	1 Fuel tank assy	Bränsletank kpl.	6 22)	
0030	1 93 33 766	1	1 Fuel tank assy	Bränsletank kpl.	6 US, CA AND JA	
0040	2 93 29 806	1	1 Hose connection	Slanganslutning	4	
0060	3 93 28 857	1	1 Hose connection	Slanganslutning	4	PART OF 93 22 819
0070	3 93 32 891	1	1 Hose connection	Slanganslutning	4	PART OF 93 33 766
0080	4 93 24 138	1	1 Return line	Returledning	6	
0100	5 93 24 021	1	1 Bushing	Bussning	5	
0120	6 83 25 856	2	1 Bushing	Bussning	5	
0140	7 83 34 997	1	1 Fuel pump	Bränslepump	2	SUPERSEDED BY 9361015 AND 9361668
0142	8 93 19 799	1	1 Non-return valve	Backventil	3	USED WITH 8334997
0152	8 93 37 510	1	1 Non-return valve	Backventil	3	USED WITH 9361015
0160	9 93 19 963	1	1 Pump support	Pumpstöd	5	SUPERSEDED BY 9348087 AND 9348103
0181	10 93 19 971	1	1 Seal collar	Tätningsskrage	5	
0186	11 93 19 955	1	1 Bellows	Bälg	5	
0200	14 83 31 159	1	1 Strainer	Sugfilter	4	
0240	15 85 17 104	1	1 Strap	Spännband	5	
0260	16 83 74 357	1	1 Strap	Spännband	5	
0280	17 93 23 445	1	1 Container	Behållare	5	
0300	18 93 24 211	1	1 Clip	Clip	5	
0320	19 93 24 781	1	1 Fuel line	Bränsleledning	5	
0340	20 83 19 815	1	1 Banjo bolt	Hålbult	5	
0360	21 83 24 048	2	2 Gasket	Packning	4	
0380	25 93 31 554	1	1 Clamp	Klamma	5	
0400	26 93 24 740	1	1 Hose	Slang	5	
0420	27 79 08 308	5	5 Clamp	Klamma	5	
0440	28 83 26 209	1	1 Fuel level trans- mitter	Bränselnivågivare	3	
0480	29 83 26 720	1	1 Gasket	Packning	3	
0520	30 80 19 531	8	8 Screw	Skruv	5	
0520	31 93 25 820	1	1 Plug	Plugg	5	
0540	32 93 29 830	1	1 Sealing	Tätning	5	
0560	33 93 29 848	2	2 Sealing	Tätning	5	
0580	34 93 29 855	1	1 Sealing	Tätning	5	
0600	38 93 27 552	1	1 Sealing	Tätning	5	
0620	39 93 27 545	1	1 Sealing	Tätning	5	
0630	39 93 32 883	1	1 Sealing	Tätning	5	
0640	40 83 05 189	1	1 Sealing	Tätning	5	
0660	41 83 87 185	1	1 Sealing	Tätning	5	
0680	42 83 29 617	2	2 Strap	Spännband	5	
0700	43 80 74 288	2	2 Nut	Mutter	5	
0720	44 83 87 508	1	1 Filler pipe assy	Påfyllningsrör kpl	5	CA
0740	45 93 28 428	1	1 Filler pipe assy	Påfyllningsrör kpl	5	US
0760	45 93 26 356	1	1 Filler pipe assy	Påfyllningsrör kpl	5	(8386989)
0780	46 93 48 838	1	1 Gasket	Packning	5	
0800	47 83 15 475	2	2 Rubber stop	Gummistopp	5	
0820	48 83 39 244	1	1 Spring nut	Fjädermutter	5	
0840	49 83 23 412	1	1 Rubber connection	Gummianslutning	4	
0860	50 83 23 941	1	1 Drain pipe	Dräneringsrör	5	
0880	51 83 87 573	1	1 Sealing	Tätning	5	
0900	52 93 18 346	1	1 Valve	Ventil	4	US AND CA
0920	53 93 16 896	1	1 Nipple	Nippel	4	US AND CA
0940	54 93 42 635	1	1 Gasket	Packning	5	US AND CA
0960	58 79 71 443	4	4 Screw	Skruv	5	US AND CA
0980	59 93 16 720	1	1 Spring	Fjäder	5	US AND CA
1000	60 93 16 712	1	1 Spring guide	Fjäderstyrning	5	US AND CA
1020	61 93 16 704	1	1 Flap	Kläff	5	US AND CA
1040	62 83 39 012	1	1 Guide pipe	Styrrör	6	US AND CA
1060	63 93 25 994	1	1 Sleeve	Hylsa	5	US AND CA

R 5912-900

21. Ch -90801009719 - 90802003119 - 90806000841.
22. Ch 90801009720 - 90802003120 - 90806000842 -

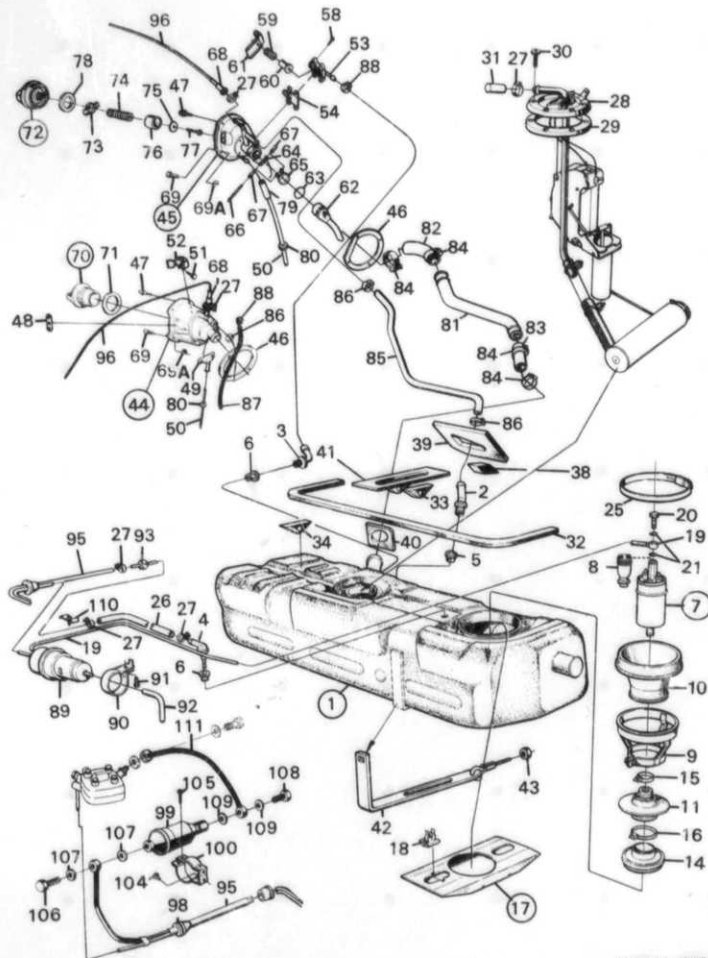

0625

Fuel system
Fuel tank, pump, etc
engine i 1980-

Bränslesystem
Bränsletank, pump, etc
motor i 1980-

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R5912


2

53

Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S SR / L	Notes Anmärkning
		900	US			
1080	64 83 35 721		1 Spring ...	Fjäder	5	ONLY US
1100	65 83 30 387		1 Flap ...	Kloff	5	ONLY US
1120	86 83 36 554		1 Shaft ...	Åxel	5	ONLY US
1140	87 83 37 834		2 Spacer tube	Distansrör	5	ONLY US
1160	88 83 34 880	1	1 Extension hose	Skravslang	5	
1180	69 79 69 207	4	4 Screw	Skruv	5	
1200	68A 83 15 467	4	4 Clip	Clip	5	
1220	70 83 22 729	1	1 Filler cap assy	Tanklock kpl	2	
1240	71 83 28 098	1	1 Gasket	Packning	2	
1260	72 83 18 072	1	1 Filler cap assy	Tanklock kpl	2	US AND CA
1280	73 83 18 098	1	1 Lock washer	Låsbricka	5	US AND CA
1300	74 93 31 380	1	1 Spring	Fjäder	5	US AND CA
1320	75 93 18 106	1	1 Washer	Bricka	5	US AND CA
1340	76 83 35 937	1	1 End piece	Ändstycke	5	US AND CA
1360	77 79 22 859	1	1 Screw	Skruv	4	US AND CA
1380	78 83 35 960	1	1 Gasket	Packning	4	US AND CA
1400	79 93 63 284	1	1 Hose	Slang	5	US AND CA
1420	80 79 61 329	1	1 Bushing	Bussning	5	31), US AND CA
1440	81 93 22 852	1	1 Pipe	Rör	4	
1460	81 93 23 478	1	1 Pipe	Rör	4	US AND CA
1480	82 93 22 975	1	1 Hose	Slang	5	
1500	83 75 25 421	1	1 Hose	Slang	5	(9322983)
1520	84 93 47 808	4	4 Clamp	Klamra	5	
1550	85 75 12 338	1	1 Ventilation hose	Urluftnings slang	5	
1580	86 79 70 072	2	2 Clamp	Klamra	5	
1600	87 93 33 676	1	1 Ventilation hose	Urluftnings slang	5	3) US, CA AND JA
1620			L = 720 mm		5	
1640	87 93 02 530	1	1 Ventilation hose	Urluftnings slang	6	3,21)
1660			L = 1060 mm		5	
1680	87 93 33 683	1	1 Ventilation hose	Urluftnings slang	3	3,22)
1700			L = 800 mm		5	
1720	88 83 32 567	2	2 Clamp	Klamra	5	
1740	89 93 17 769	1	1 Fuel accumulator	Bränsleackumulator	5	
1760	90 93 24 815	1	1 Clamp	Klamra	5	
1780	91 79 72 585	1	1 Screw	Skruv	5	
1800	92 93 26 899	1	1 Hose	Slang	6	
1820	93 83 28 601	1	1 Non-return valve	Backventil	3	US AND JA
1840	95 93 24 716	1	1 Fuel line	Bränsleledning	5	
1860	95 93 28 319	1	1 Fuel line	Bränsleledning	5	CA
1880	95 93 29 236	1	1 Fuel line	Bränsleledning	5	US
1900	96 83 34 161	1	1 Hose	Slang	5	23)
1920	96 93 34 301	1	1 Hose	Slang	5	24)
1940	96 93 23 601	1	1 Hose	Slang	5	24) EU AND GB
1960	98 83 28 346	1	1 Pipe retainer	Rörhållare	6	
1980	99 83 39 731	1	1 Fuel filter	Bränslefilter	2	
2000	99 93 28 519	1	1 Fuel filter	Bränslefilter	2	US
2020	100 93 00 369	1	1 Bracket	Fäste	5	
2040	100 93 28 210	1	1 Bracket	Fäste	5	US
2060	104 79 72 490	2	2 Blind rivet	Blindnýt	5	
2080	105 79 22 362	1	1 Screw	Skruv	5	
2100	106 83 22 927	1	1 Bar jo bolt	Hålbult	5	
2120	107 83 26 712	2	2 Gasket	Packning	3	
2140	108 83 19 915	1	1 Banjo bolt	Hålbult	5	
2160	109 83 26 704	2	2 Gasket	Packning	3	
2180	110 83 20 749	1	1 Bracket	Fäste	5	
2200	111 93 27 321	1	1 Fuel line	Bränsleledning	5	
2220	111 93 27 644	1	1 Fuel line	Bränsleledning	5	TURBO FOR EU AND AU

R 5912-900


3. Manufactured by 93 63 250
21. Ch -90801009719 - 90802003119 - 90806000841.
22. Ch 90801009720 - 90802003120 - 90806000842.
23. Ch -90901034662 - 90902010185 - 90906000543.
24. Ch 90801034663 - 90802010186 - 909000001.
31. Manufactured by 93 62 781.

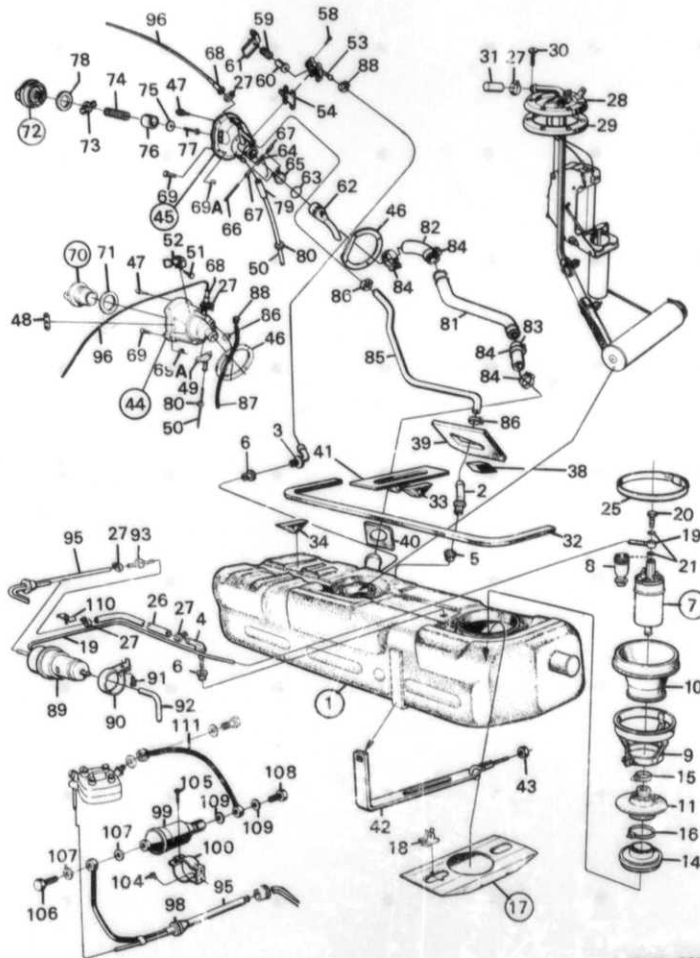

- 0 General 1-A02
- 1 Tools 1-H02
- 2 Engine 2-A02
- 3 Electrical system, instruments 2-F02
- 4 Transmission 2-J02
- 5 Brakes 3-A02
- 6 Front assembly, steering 3-B02
- 7 Suspension, wheels 3-C02
- 8 Body 3-D02
- 9 Accessories, labels 3-L02
- 10 Numerical register 4-A02

2 GROUP INDEX

- Engine body 2-A08
- Lubrication system 2-B02
- Fuel system 2-B06
- Inlet and exhaust system 2-C16
- Cooling system 2-D20
- Engine control 2-E08
- Supercharging system 2-E12

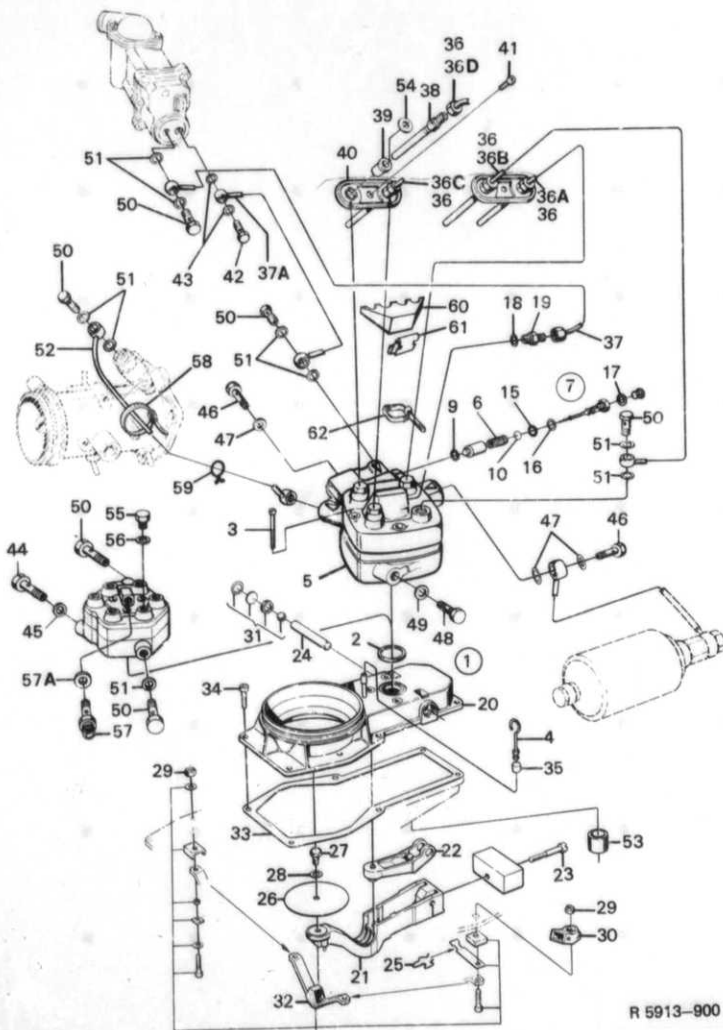

0850

Fuel system
Mixing regulator,
injection engine

Bränslesystem
Blandningsregulator,
insprutningsmotor

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R5913

2

55

Fig. Pos.	Part No Art nr	Quantity/Åntal	Description	Benämning	K/S SR	Notes Anmärkning
		900				
0020	1 83 38 923	1	1 Mixing regulator	Blandningsregulator	5	UC AND TURBO FOR US AND
0040	1 83 38 527	1	1 Mixing regulator	Blandningsregulator	5	CA
0050						
0060	1 83 35 887	1	1 Mixing regulator	Blandningsregulator	5	TURBO
0100	2 93 15 151	1	1 Sealing ring	Tätningssring	4	PART OF 8335887
0120	2 93 17 231	1	1 Sealing ring	Tätningssring	3	
0140	3 83 22 380	3	3 Screw	Skruv	5	PART OF 8335887
0160	3 93 17 249	3	3 Screw	Skruv	5	TURBO FOR US
0180	4 83 23 438	4	4 Plug	Plugg	5	
0200	5 93 02 938	1	1 Fuel distributor	Bränslemängdmätare	4	PART OF 8338527
0220	5 93 15 169	1	1 Fuel distributor	Bränslemängdmätare	4	PART OF 8335887 (9317256)
0240	5 93 26 976	1	1 Fuel distributor	Bränslemängdmätare	5	
0250	6 93 15 185	1	1 Spring	Fjäder	5	PART OF 8335887
0260	6 75 11 488	1	1 Spring	Fjäder	5	
0280	7 93 15 177	1	1 Valve assy	Ventil kpl	3	
0320	9 75 11 413	1	1 O-ring	O-ring	3	
0340	10 93 15 193	X	X Shim 0,1 mm	Shim 0,1 mm	3	
0360	10 93 15 201	X	X Shim 0,15 mm	Shim 0,15 mm	3	
0380	10 93 15 219	X	X Shim 0,3 mm	Shim 0,3 mm	3	
0400	10 93 15 227	X	X Shim 0,4 mm	Shim 0,4 mm	3	
0420	10 93 15 235	X	X Shim 0,5 mm	Shim 0,5 mm	3	
0440	15 93 15 243	X	X O-ring	O-ring	3	
0460	16 75 11 421	1	1 Sealing	Tätning	3	
0480	17 83 24 006	1	1 Sealing ring	Tätningssring	3	
0500	18 83 22 471	1	1 Plunge	Plunge	3	(8322489)
0520	19 75 25 231	1	1 Air flow sensor	Luftmängdmätare	5	PART OF 8338527
0540	20 93 02 944	1	1 Air flow sensor	Luftmängdmätare	5	PART OF 8335887
0560	20 93 15 276	1	1 Air flow sensor	Luftmängdmätare	6	PART OF 8338923 8335887
0580	20 93 17 272	1	1 Lever	Håvarm	6	PART OF 8335827
0600	21 93 02 951	1	1 Lever	Håvarm	5	
0620	21 83 15 284	1	1 Lever	Gaffelarm	5	
0640	22 83 38 394	1	1 Screw	Skruv	5	
0660	23 83 38 402	1	1 Cyl pin	Cyl pinne	5	
0680	24 83 22 539	1	1 Clamp	Klamme	5	
0700	25 83 38 410	1	1 Valve disc	Ventilskiva	6	PART OF 8338923 8338527
0720	26 83 22 554	1	1 Valve disc	Ventilskiva	5	
0740	26 93 15 292	1	1 Screw	Skruv	5	
0760	27 83 38 436	1	1 Spring washer	Fjäderbricka	5	
0780	28 83 22 570	1	2 Nut	Mutter	5	
0800	29 83 22 589	2	1 El-connection	El-anslutning	5	
0820	30 83 22 596	1	1 Bearing	Lager	6	
0840	31 83 22 604	1	1 Yoke	Bygel	6	
0860	32 93 22 612	1	1 Gasket	Packning	3	
0880	33 83 23 024	1	6 Screw	Skruv	5	
0900	34 80 59 594	6	1 Plug	Plugg	5	RED MARKED
0920	35 83 33 700	1	4 Injection pipe	Insprutningsledning	3	BLACK MARKED USA FED
0940	35 83 34 187	1	1 Injection pipe	Insprutningsledning	3	1979
0960	36 83 19 485	4	1 Injection pipe	Insprutningsledning	5	1980-
0980	36A 93 27 016	1	1 Injection pipe	Insprutningsledning	5	1980-
0990	36B 93 27 032	1	1 Injection pipe	Insprutningsledning	5	1980-
1000	36C 93 27 073	1	1 Injection pipe	Insprutningsledning	5	1980-
1010	36D 93 27 057	1	1 Fuel line	Bränsleledning	5	1980- TURBO
1020	37 83 19 725	1	1 Fuel line	Bränsleledning	5	1979 SW, EU, AU AND UF
1030	37 83 27 669	1	1 Fuel line	Bränsleledning	5	SEE LAMDA SYSTEM
1040	37 83 27 206	1	1 Fuel line	Bränsleledning	2	1979
	37A 83 38 584	1	1 Fuel line	Bränsleledning	2	1980-
	37A 93 27 255	1	1 Fuel line	Bränsleledning	2	
	37A 83 57 840	4	4 Injection valve	Insprutningsventil	2	
	38 93 10 152	4	4 Injection valve	Insprutningsventil	2	
	39 83 57 709	4	4 Bushing	Bussning	2	
	40 83 57 691	2	2 Bracket	Fäste	6	

0850

Fuel system
Mixing regulator,
injection engine

Bränslesystem
Blandningsregulator,
insprutningsmotor

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1987-10

R5913

2

57

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR / L	Notes Anmärkning
		900	US				
1060	41	80 98 048	2	2 Screw	Skruv	5	(8059750)
1080	42	83 20 301	1	1 Banjo bolt	Hålbult	5	
1100	43	83 24 030	2	2 Gasket	Packning	3	
1120	44	83 19 915	2	2 Banjo bolt	Hålbult	3	TURBO EU
1140	45	83 26 704	4	4 Gasket	Packning	3	TURBO EU
1160	46	83 19 915	2	2 Banjo bolt	Hålbult	5	
1180	47	83 26 704	4	4 Gasket	Packning	3	
1200	48	83 20 319	1	1 Banjo bolt	Hålbult	2	UC AND TURBO FOR US
1220	49	83 24 022	2	2 Gasket	Packning	2	UC AND TURBO FOR US
1240	50	83 20 319	8	8 Banjo bolt	Hålbult	5	
1260	51	83 24 022	16	16 Gasket	Packning	2	
1285	52	83 38 626	1	1 Fuel line	Bränsleledning	5	-1979
1270	52	93 27 685	1	1 Fuel line	Bränsleledning	5	1980- TURBO FOR EU
1275	52	93 27 230	1	1 Fuel line	Bränsleledning	5	1980-
1280	53	93 00 625	1	1 Plug	Plugg	5	
1300	54	80 29 985	2	2 Washer	Bricka	5	
1320	55	83 37 743	2	2 Screw	Skruv	5	TURBO FOR EU
1340	56	83 24 022	2	2 Gasket	Packning	2	TURBO FOR EU
1360	57	93 03 371	1	1 Nipple	Nippel	5	-1979 TURBO FOR EU
1370	57	75 25 231	1	1 Nipple	Nippel	3	1980- TURBO FOR EU AND AU, (8322489)
1372	57A	83 22 471	1	1 Gasket	Packning	3	1980- TURBO FOR EU AND AU
1375							
1377							
1380	58	79 71 872	1	1 Strap	Spännband	5	TURBO
1400	59	85 11 085	2	2 Cable clip	Kabelclips	5	1980- TURBO
1420	60	93 27 339	1	1 Clip	Clips	5	1980-
1440	61	93 27 735	1	1 Clip	Clips	5	1980-
1460	62	79 71 864	1	1 Strap	Spännband	5	1980- TURBO FOR US, CA AND JA
1470							

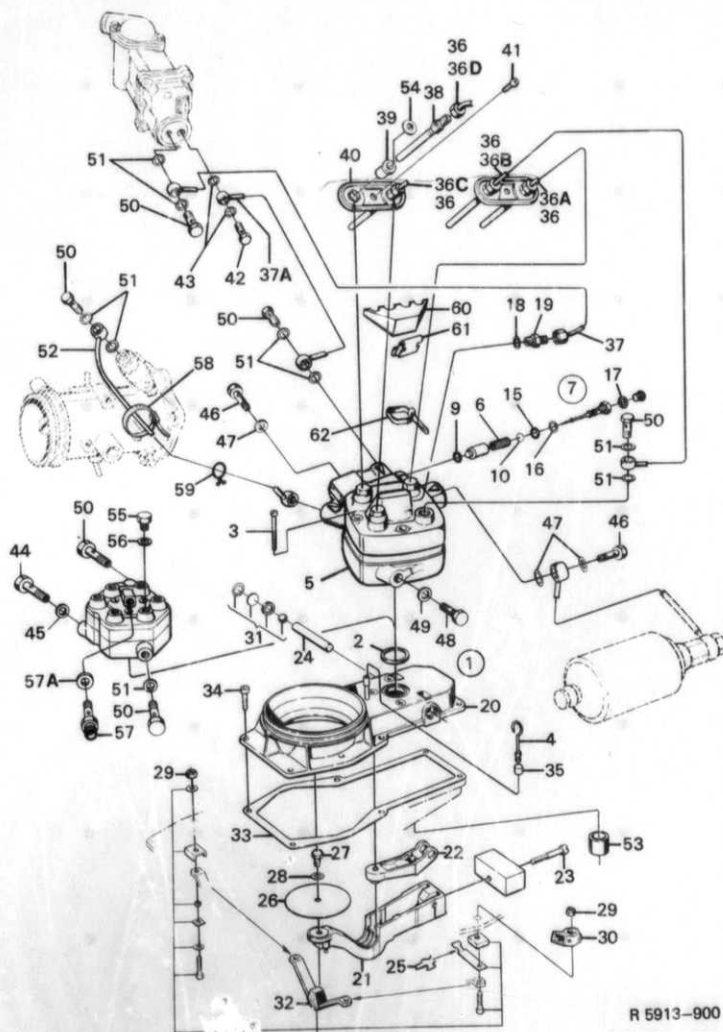

R 5913-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

0900

Fuel system
Evaporative loss control
device (ELCD)

Bränslesystem
Slutet bränslesystem
(ELCD)


Date
Datum
1987-10

Illustration
Bild nr
R4674

Group
Grupp
2

Page
Sida
59

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR / L	Notes Anmärkning
		900	US				
0020	1 83 32 629	1		Hose	Slang	5	CA AND AU
0040	1 93 16 433			Hose	Slang	5	US
0060	1 93 04 775	1		Hose	Slang	5	SR, UF, CA AND AU
0080	1 83 38 966	1		Hose	Slang	5	SR
0090	1 93 04 775	1		Hose	Slang	5	1980- TURBO FOR AU
0100	3 93 03 413	1		1 Extension hose	Skarvslang	5	(5 14)
0110	3 83 33 320	1		1 Extension hose	Skarvslang	5	(5 15)
0120	4 93 18 361	1		1 Valve	Ventil	5	
0140	5 79 68 308	4		4 Hose clamp	Slangklämma	5	
0180	6 79 22 354	2		2 Screw, valve	Skruv, ventil	5	
0200	7 93 29 004	1		1 Hose	Slang	5	1980-
0220	8 83 34 896	1		1 Extension hose	Skarvslang	5	
0240	9 79 61 337	1		1 Grommet	Genomföringsbussning	6	(8377686)
0280	10 79 33 443	2		2 Clip	Clips	5	
0290	11 79 60 282	1		1 Clamp	Klamme	5	1980-
0320	12 93 26 430			1 Carbon filter assy	Kolfilter kpl	3	US
0340	13 83 23 008	1		1 Carbon filter assy	Kolfilter kpl	3	
0390	14 83 14 464	1		1 Filter	Filter	3	
0410	16 93 00 302	1		1 Mounting rail	Fästskena	5	
0420	17 79 61 691	2		2 Blind rivet	Blindnit	5	
0440	18 83 34 880			3 Extension hose	Skarvslang	5	UF
0560	21 93 03 462	1		1 Pressure valve	Tryckventil	6	
0620	25 83 32 678			1 Hose	Slang	5	US
0640	26 83 33 007	1		1 Cover	Kåpa	5	
0660	27 79 22 347	2		2 Screw	Skruv	5	
0580	28 83 32 799	1		1 Isolating	Isolering	3	
0700	31 93 02 E34			1 Label, unleaded, fuel only	Etikett, blyfri bensin, endast bensin, endast	5	(8330953), UC
0720				1 Label, unleaded, fuel only	Etikett, blyfri bensin, endast bensin, endast	5	TURBO FOR CA
0740	31 85 37 J29	1		1 Hose 10 m	Slang 10 m	2	
0780	83 1E 673	X		X			

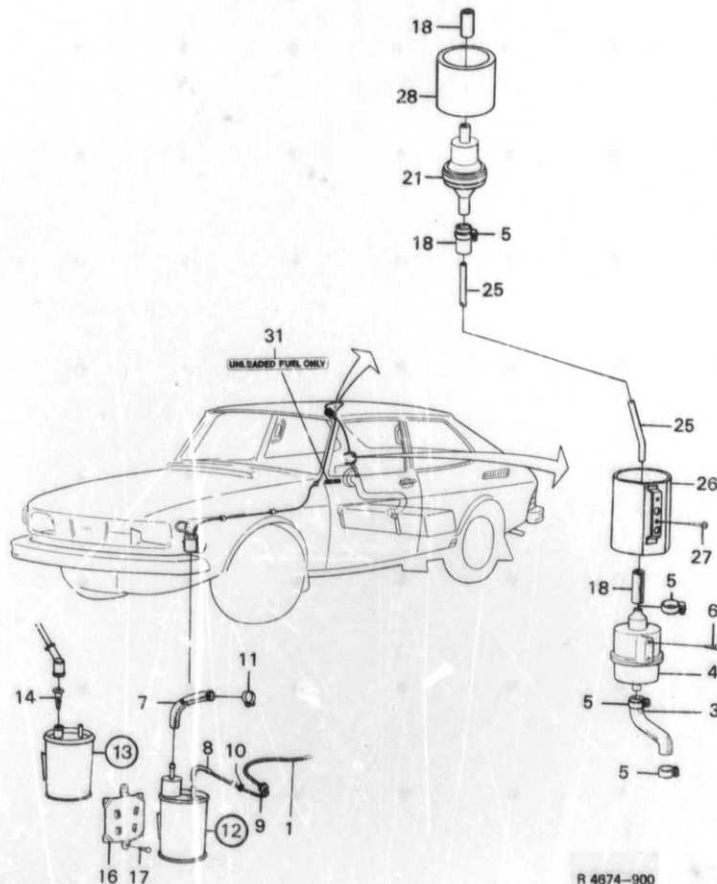

R 4674-900

14. Ch -90791030371 -90792003375.
15. Ch 90791030372 - 90792003376.


0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A06
Lubrication system	2-E02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E06
Supercharging system	2-E12

0660

Fuel system		Bränslesystem		Date	Illustration	Group	Page
Enrichment device Turbo		Fullastupprikning Turbo		Datum	Bild nr	Grupp	Sida
				1987-10	R4282	2	61
Fig. Pos.	Part No Art nr	Quantity/Äntal		Description	Benämning	KS Notes	
		900	US			S	R Anmärkning
0020	2 93 01 052	1		Bracket	Fäste	5	-1979
0040	3 83 37 446	1		Magnetic valve	Magnetventil	4	-1979
0060	4 79 22 495	2		Screw	Skruv	5	-1079
0080	5 83 37 297	1		Fuel line	Bränsleledning	4	-1079
0100	6 83 20 301	1		Banjo bolt	Hålbult	5	-1979
0120	7 83 24 030	2		Gasket	Packning	3	-1979
0140	8 83 37 453	1		Pressure regulator	Tryckregulator	5	-1979
0160	12 79 65 783	1		Nut	Mutter	5	-1979
0180	13 83 37 305	1		Hose	Slang	4	-1979
0200	14 83 20 301	1		Banjo bolt	Hålbult	5	-1979
0220	15 83 24 030	2		Gasket	Packning	3	-1979
0240	16 79 72 369	2		Screw	Skruv	5	-1979
0260	17 83 86 724	1		Vakuum tank	Vakuumtank	5	-1980-
0280	18 93 39 375	1		El-valve	El-ventil	4	-1980- (9326745)
0300	19 83 23 362	1		Delay valve	Fördröjningsventil	2	-1980-
0320	20 93 26 752	1		Non-return valve	Backventil	3	-1980-
0340	21 93 25 598	1		Bracket	Fäste	5	-1980-
0360	22 80 29 555	2		Nut	Mutter	5	-1980-
0380	23 80 29 951	2		Washer	Bricka	5	-1980-
0400	24 79 72 359	2		Screw	Skruv	5	-1980-
0420	25 83 66 791	2		T-tube	T-rör	4	-1980-
0440	26 93 25 564	1		Hose	Slang	5	-1980-
0460	27 93 25 572	2		Hose	Slang	5	-1980-
0480	28 83 27 843	1		Hose	Slang	5	-1980-
0500	29 83 27 868	2		Hose	Slang	5	-1980-
0520	30 93 25 549	1		Hose-throttle valve housing	Slang-spjällhus	5	-1980-
0540	31 93 25 556	1		Hose-warming up regulator	Slang- varmkörningsregulator	5	-1980-
0560	32 79 72 849	3		Clamp	Klamme	5	-1980-

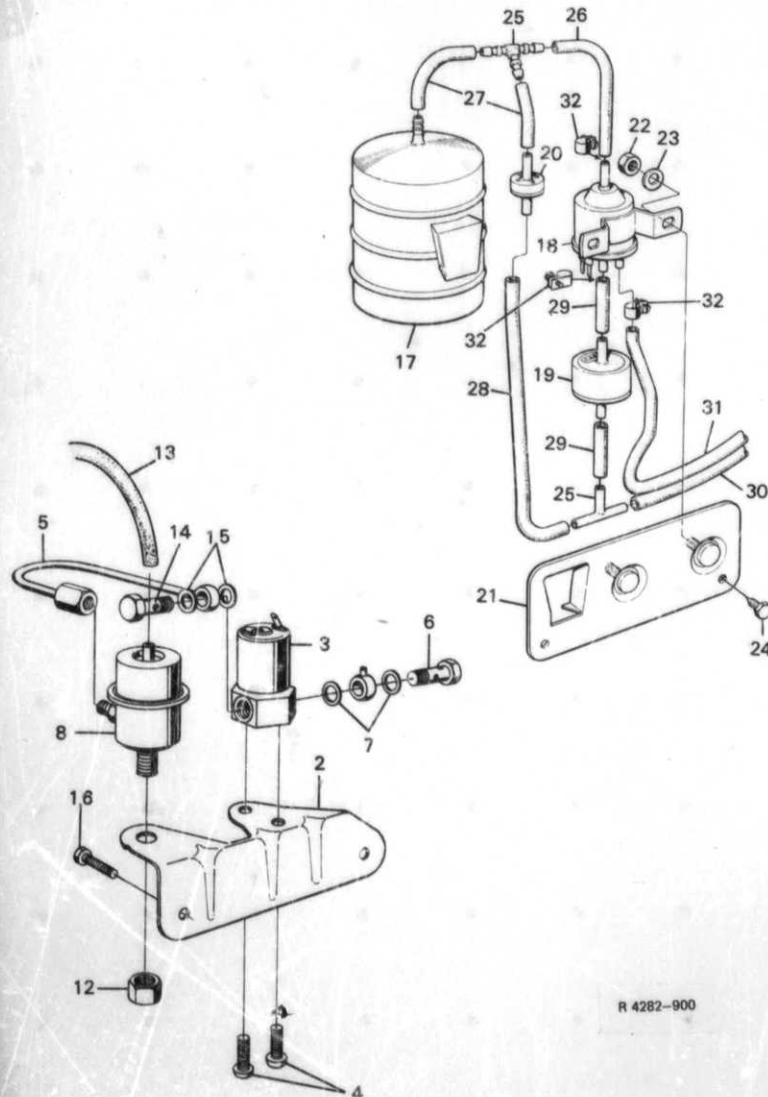

R 4282-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

1000

Inlet-and exhaust system
Inlet manifold, etc,
carburetor engine

Inlopps och avgassystem
Insugningsrör, etc,
förgasarmotor

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1987-10

R4338

2

63

Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S SR / L	Notes Anmärkning
		900	US			
0020	1 93 14 786	1	Inlet manifold	Insugningsrör	6	-1979, (8369316)
0030	1 93 14 786	1	Inlet manifold	Insugningsrör	6	1980-, (8311457)
0040	2 83 89 324	1	Inlet manifold	Insugningsrör	6	T
0060	2 83 89 332	1	Inlet manifold	Insugningsrör	6	T, A SW
0070	3 93 12 547	1	Plug	Plugg	4	1980- PART OF 9311457
0080	4 83 48 005	1	Seal washer	Tättningsbricka	3	
0100	5 81 23 198	1	Seal washer	Tättningsbricka	4	
0120	6 80 05 951	4	Screw	Skruv	3	
0140	7 83 48 528	1	Gasket	Packning	5	S
0160	8 80 83 933	6	Screw	Skruv	5	
0180	9 80 29 985	8	Washer	Bricka	5	
0200	10 83 50 050	1	Lifting eye	Lyftögla	6	
0220	11 80 83 941	2	Screw	Skruv	5	
0240	12 93 12 802	1	Nipple	Nippel	4	-1979, (8361396)
0250	12 93 12 802	1	Nipple	Nippel	4	1980-
0260	13 83 60 513	1	Hose	Slang	4	TA EGR
0280	14 83 60 521	1	Hose	Slang	4	TA EGR
0300	15 83 08 850	1	Nipple	Nippel	5	
0320	17 83 59 937	1	Nipple	Nippel	5	
0340	18 83 47 569	1	Bushing	Bussning	5	
0360	19 93 31 034	1	Protective hose	Skyddsslang	4	C
0380	19 93 29 350	1	Protective hose	Skyddsslang	4	T

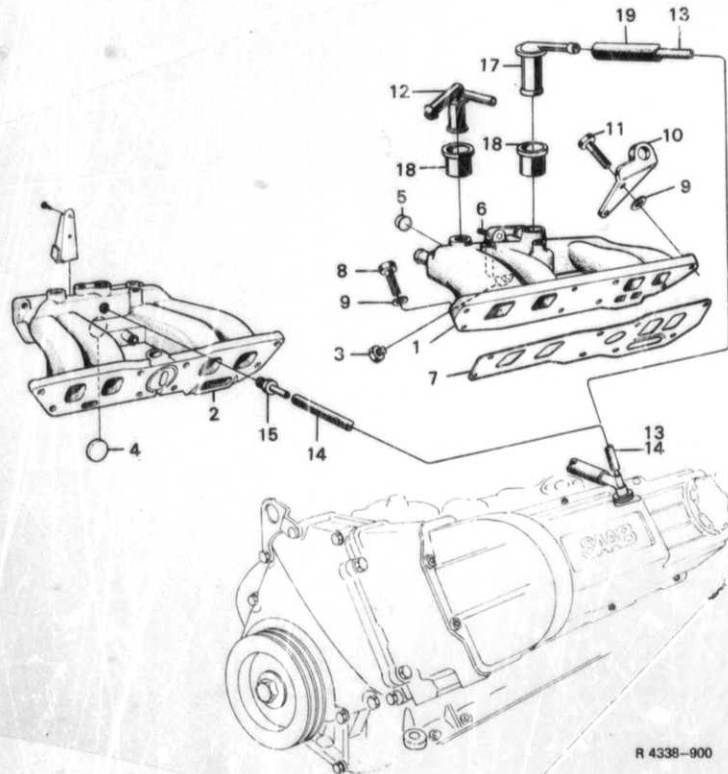

R 4338-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

1050

Inlet and exhaust system
Inlet manifold, etc,
injection engine

Inlopps-och avgassystem
Insugningsrör, etc,
insprutningsmotor

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1987-10

R4339

2

65

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR / L	Notes Anmärkning
		900	US				
0040	83 69 340	1		1 Inlet manifold	Insugningsrör	6	-1979 EU AND M FOR US ALSO TURBO M FOR US AND EU
0042	93 10 905	1		1 Inlet manifold	Insugningsrör	6	1980-
0044	83 69 357	1		1 Inlet manifold	Insugningsrör	6	-1979 UF AND A FOR SW
0050	93 10 913	1		1 Inlet manifold	Insugningsrör	6	1980- A FOR SW
0060	83 58 937	1		1 Nipple	Nippel	5	17)
0070	93 12 802	3		1 Nipple	Nippel	5	-1979 US AND TURBO FOR US, (8361398)
0080	83 57 543	1		1 Nipple	Nippel	5	UF AND TURBO FOR EU
0095	93 12 802	1		1 Nipple	Nippel	4	1980-
0100	83 47 589	2		2 Bushing	Busaning	5	
0120	83 48 518	1		1 Gasket	Packning	3	
0140	80 83 933	4		4 Screw	Skruv	5	
0160	80 83 941	2		2 Screw	Skruv	5	
0200	80 29 865	8		8 Washer	Bricka	5	
0220	83 50 050	1		1 Lifting eye	Liftögla	6	
0240	80 83 941	2		2 Screw	Skruv	5	
0260	83 61 382	1		1 Thermocontact	Termotidkontakt	3	
0320	93 33 758	1		1 Protective hose	Skyddslang	4	
0330	83 84 416	1		1 Hose, inlet manifold valve cover	Slang, insugningsrör ventilkåpa	2	16)
0340	83 60 539	1		1 Hose, inlet manifold valve cover	Slang, insugningsrör ventilkåpa	4	17)
0360	93 15 953	1		1 Pressure impulse contact	Tryckinpulskontakt	5	US
0370	83 37 305	1		1 Hose	Slang	4	US ALSO TURBO
0400	83 63 343	1		1 Bracket	Hållare	5	-1979
0420	83 63 350	1		1 Nipple	Nippel	4	
0440	83 68 276	1		1 Valve assy	Ventil kpl	3	-1979
0460	80 48 837	1		1 O-ring	O-ring	2	-1979
0480	93 01 189	1		1 Pressure impulse contact	Tryckinpulskontakt	3	TURBO FOR US
0500	93 01 177	1		1 Bracket	Fäste	3	TURBO FOR US
0520	79 22 727	2		2 Screw	Skruv	5	TURBO FOR US
0540	83 68 086	1		1 Plug	Plugg	4	-1979 TURBO
0560	83 66 791	1		1 Nipple	Nippel	4	US
0580	83 27 988	1		1 Hose	Slang	5	US

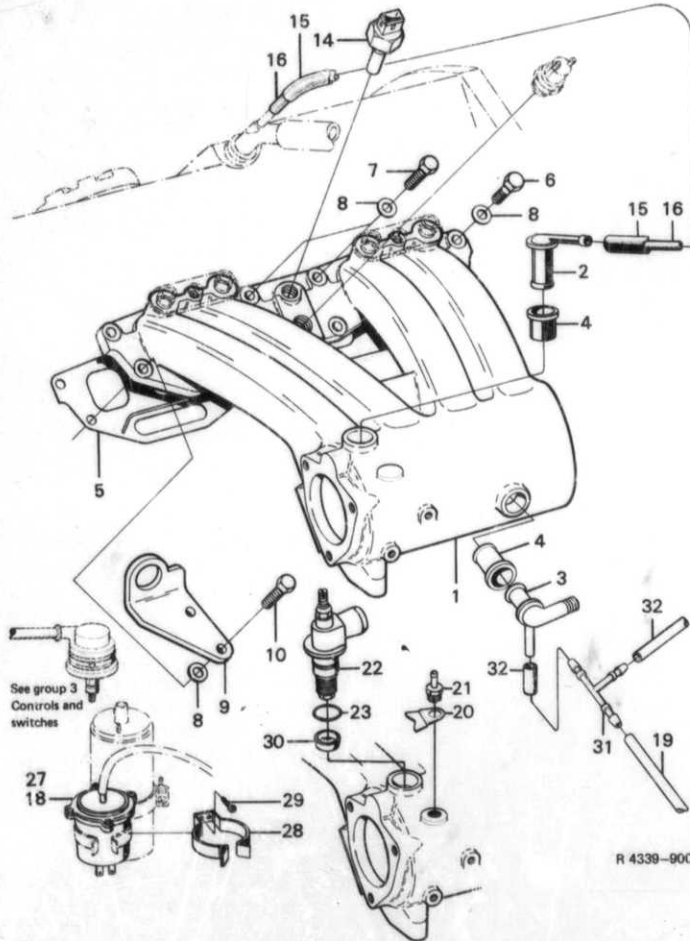


16. Engine -B120P04 010450, -B120P08 004125, -B120P09 002852, -B120P11 003667, -B120P12 002251, -B120P14 002350, -B120P01 013848, -B120P02 008711, -B120P05 000925.
17. Engine -B120P04 010451, -B120P08 004126, -B120P09 002853, -B120P11 003668, -B120P12 002252, -B120P14 002351, -B120P01 013849, -B120P02 008712, -B120P05 000926.

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-D16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

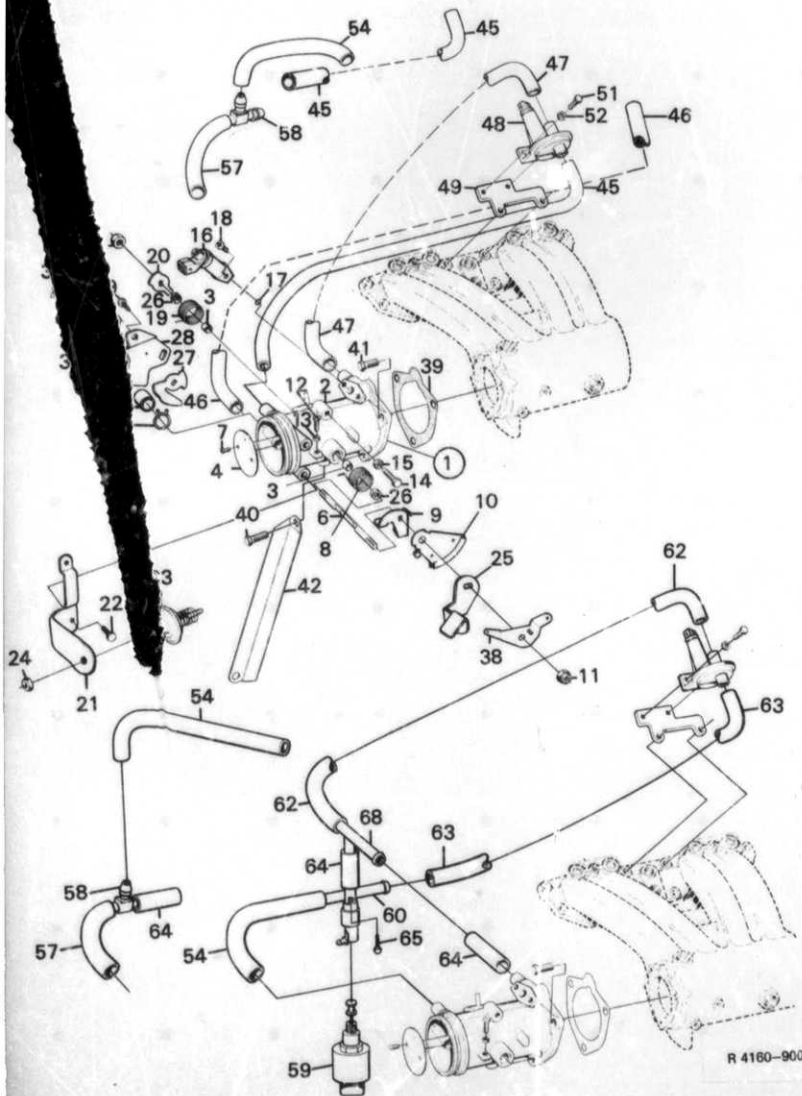

R 4160-900

SAAB
genuine parts
original reservdelar

2-C20

SAAB 900
M79-80

MASTER INDEX

1100

Inlet and exhaust system
Throttle valve housing,
injection engine

Inlopps- och avgassystem
Spjällhus, etc
insprutningsmotor

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R4160

2

67

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S SR /L	Notes Anmärkning
		900		US				
0020	1 83 58 756	1			Throttle valve housing assy	Spjällhus kpl	5	-1979,6) M FOR EU
0040	1 83 60 265	1			Throttle valve housing assy	Spjällhus kpl	6	-1979 A FOR EU
0060	1 93 10 939	1			Throttle valve housing assy	Spjällhus kpl	6	1980- M FOR EU
0100	1 93 10 947	1			Throttle valve housing assy	Spjällhus kpl	5	1980- A FOR EU
0120	1 83 66 858	1			Throttle valve housing assy	Spjällhus kpl	5	-1979 A FOR SW AND UF
0140	1 93 10 970	1			Throttle valve housing assy	Spjällhus kpl	5	1980- A FOR SW
0160	1 83 66 886	1			Throttle valve housing assy	Spjällhus kpl	6	-1979 M FOR UF
0200	1 83 63 426	1			Throttle valve housing assy	Spjällhus kpl	5	-1979 M FOR UC
0220	1 93 10 954	1			Throttle valve housing assy	Spjällhus kpl	5	1980- M FOR US
0240	1 83 63 459	1			Throttle valve housing assy	Spjällhus kpl	5	-1979 A FOR UC
0260	1 93 10 962	1			Throttle valve housing assy	Spjällhus kpl	5	1980- A FOR US
0280	2 83 66 874	1			Throttle valve housing with bushings	Spjällhus med bussningar	5	PART OF 8366858, 8366866 9310970
0300	2 93 06 418	1			Throttle valve housing with bushings	Spjällhus med bussningar	6	PART OF 8363426, 8363459 8358756, 8360285
0320	2 93 11 150	1			Throttle valve housing with bushings	Spjällhus med bussningar	6	1980- US
0340	2 93 11 143	1			Throttle valve housing with bushings	Spjällhus med bussningar	6	PART OF 9310939, 9310947
0360	2 93 11 150	1			Throttle valve housing with bushings	Spjällhus med bussningar	6	PART OF 9310954, 9310962
0380	3 83 46 841	2			Bushings	Bussningar	5	
0400	4 83 53 484	1			Throttle valve	Spjäll	6	
0420	6 83 57 311	1			Shaft	Axel	6	
0440	7 80 59 073	2			Screw	Skruv	5	
0460	8 93 06 184	1			Spring	Fjäder	5	
0480	9 83 57 329	1			Lever	Hävarm	5	
0500	10 83 09 261	1			Cam plate	Kamskiva	5	
0520	11 80 74 288	2			Nut	Mutter	5	
0540	12 80 07 486	1			Screw	Skruv	5	
0560	13 80 50 593	1			Nut	Mutter	5	
0580	14 83 57 378	1			Screw	Skruv	5	
0600	15 80 29 555	1			Nut	Mutter	5	(8050601)
0620	16 83 57 857	1			Cold start valve	Kallstartventil	4	
0640	17 01 09 548	1			O-ring	O-ring	5	
0660	18 83 65 090	2			Screw	Skruv	5	
0680	19 93 06 192	1			Spring	Fjäder	5	
0700	20 83 57 337	1			Lever	Hävarm	6	
0720	21 93 11 879	1			Bracket	Konsol	6	1980-
0740	22 01 29 876	2			Screw	Skruv	5	1980-, (8367492)
0760	23 93 11 895	1			Damper	Dämpare	3	1980-
0780	24 80 69 015	1			Nut	Mutter	5	1980-
0800	25 93 11 887	1			Lever	Hävarm	6	1980-
0820	26 83 57 345	1			Sealing ring	Tätningarring	5	PART OF 8363426, 8363459
0840	27 83 63 467	1			Lever	Hävarm	6	PART OF 8363426, 8363459
0860	28 83 63 202	1			Bracket	Fäste	5	PART OF 8363426, 8363459
0880	29 93 08 719	1			Screw	Skruv	5	PART OF 8363426, 8363459
0900	30 83 63 210	1			Micro switch	Mikroströmställare	3	PART OF 8363426, 8363459
0920	30 93 23 940	1			Micro switch	Mikroströmställare	3	A FOR UC WITH AC
0940	31 80 59 115	2			Screw	Skruv	5	PART OF 8363426
0960	31 80 82 943	2			Screw	Skruv	5	PART OF 8363459

6. For cars with automatic transmission. Used pos 30 or 31.

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A06
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E'12

1100

Inlet and exhaust system
Throttle valve housing,
injection engine

Inlopps-och avgassystem
Spjällhus, etc
insprutningsmotor

Date
Datum
1987-10

Illustration
Bild nr
R4160

Group
Grupp
2


Page
Sida
69

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR / L	Notes Anmärkning
		900	US				
1280	32	93 07 935		1 Spring	Fjäder	5	PART OF 8363426, 8363459
1300	38	83 60 059	1	1 Lever	Hävarm	8	A
1320	39	83 57 489	1	1 Gasket	Packning	4	
1340	40	80 82 950	1	1 Screw	Skruv	5	
1360	41	80 82 943	2	2 Screw	Skruv	5	
1380	42	83 56 590	1	1 Support, throttle valve-oil pump	Stöd, spjällhus-oljepump	5	
1400							
1420	45	83 83 384	1	1 Hose	Slang	4	-1979
1430	45	83 60 582	1	1 Hose	Slang	4	1980-
1440	45	83 60 414	1	1 Hose	Slang	4	
1460	47	83 60 588	1	1 Hose	Slang	4	
1480	48	83 57 832	1	1 Auxiliary air reg.	Tillsatsluftslid	4	
1500	49	83 80 299	1	1 Bracket	Fäste	6	
1520	51	80 59 545	2	2 Washer	Skruv	5	
1540	52	80 29 951	2	2 Washer	Bricks	5	
1580	54	83 63 376	1	1 Hose, throttle valve-housing Dec valve	Slang, spjällhus dec-ventil	4	-1979 ALSO AC
1600							
1620	54	83 63 376	1	1 Hose	Slang	4	1980- AC
1640	55	93 00 625	1	1 Plug	Plugg	5	
1660	56	79 35 208	1	1 Clamp	Klamma	5	
1680	57	83 63 382	1	1 Hose	Slang	4	-1979
1700	58	83 03 392	1	1 Nipple	Nippel	5	-1979
1720	59	83 15 486	1	1 Valve	Ventil	3	AC
1740	60	93 03 991	1	1 T-coupling	T-koppling	5	AC
1760	62	83 32 421	1	1 Hose	Slang	5	AC
1780	63	83 32 447	1	1 Hose	Slang	5	AC
1800	64	83 32 454	2	2 Hose	Slang	5	1980- AC
1820	64	83 32 454	3	3 Hose	Slang	5	-1979 AC
1840	65	79 71 823	1	1 Screw	Skruv	5	AC
1860	68	83 17 828	1	1 Nipple	Nippel	2	


0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

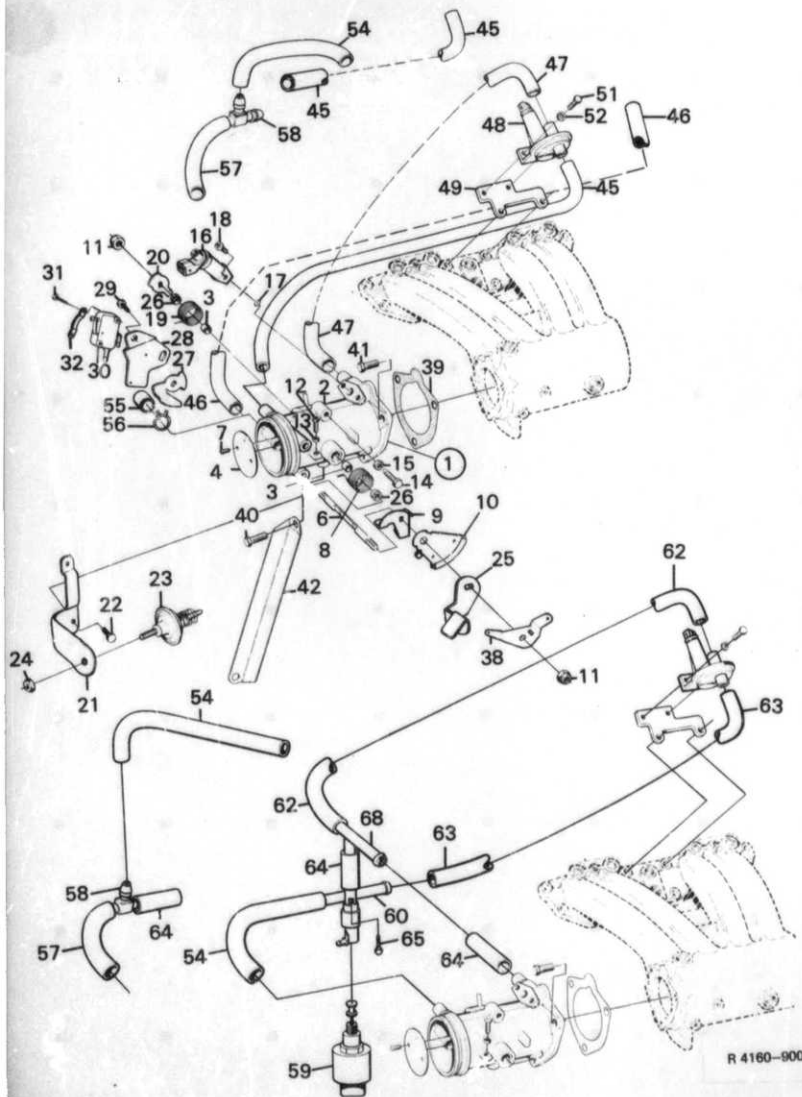

R 4160-900

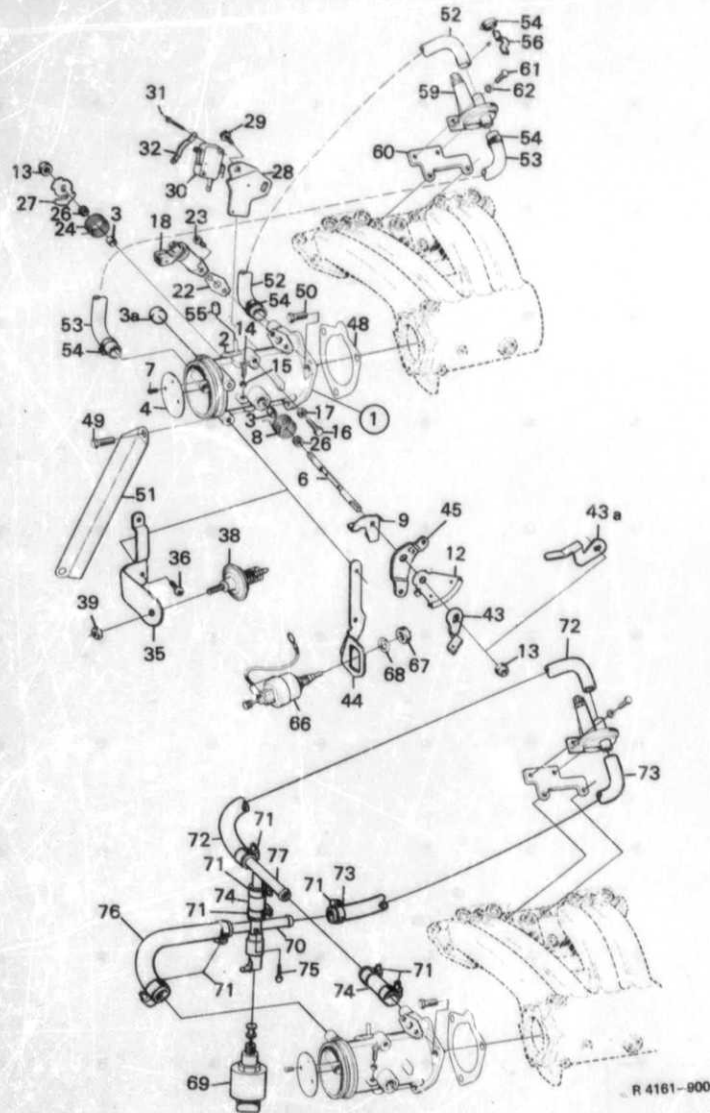

SAAB
genuine parts
original reservdelar

2-D02

SAAB 900
M79-80

MASTER INDEX

1150

Inlet-and exhaust system
Throttle valve housing,
etc, model Turbo

Inlopps-och avgassystem
Spjällhus etc,
modell Turbo

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10 R4161

2

73

Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S S/R	Notes Anmärkning
		900				
		US				
1380	62 80 29 951	2	2 Washer	Bricka	5	
1380	66 83 35 655		1 Solenoid	Solenoid	5	- 1979 US
1400	67 93 00 468		1 Nut	Mutter	5	- 1979 US
1420	68 80 30 017		1 Washer	Bricka	5	- 1979 US
1440	69 93 15 466	1	1 Valve	Ventil	3	AC
1460	70 93 03 991	1	1 T-coupling	T-koppling	5	AC
1480	71 75 70 064	8	8 Hose clamp	Slangklemma	5	AC
1500	72 83 32 421	1	1 Hose	Slang	5	AC
1520	73 83 32 447	1	1 Hose	Slang	5	AC
1540	74 83 32 454	2	2 Hose	Slang	5	AC
1560	75 79 71 823	1	1 Screw	Skruv	5	AC
1580	76 83 57 501	1	1 Hose	Slang	4	AC
1600	77 83 17 826	1	1 Nipple	Nippel	2	AC

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

? GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

1200

Inlet and exhaust system
Exhaust manifold, etc

Inlopps-och avgassystem
Avgassamlare, etc

Date
Datum
1987-10

Illustration
Bild nr
R4285

Group
Grupp
2


Page
Sida
75

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR /L	Notes Anmärkning
		900	US				
0020	2 83 56 420	1		1 Exhaust manifold	Avgassamlare	3	
0040	3 93 20 961	1		1 Exhaust manifold	Avgassamlare	3	
0060	3 83 57 592	1		1 Exhaust manifold	Avgassamlare	3	EGR »ON-OFF» SW A
0080	4 83 59 945	1		1 Exhaust manifold	Avgassamlare	3	EGR + AIR INJECTION
0100	2 83 56 461	1		1 Exhaust manifold	Avgassamlare	3	-1979 EGR FOR UF
0120	3 83 57 600	1		1 Exhaust manifold	Avgassamlare	3	-1979 EGR FOR UF
0140	3 83 56 453	1		1 Exhaust manifold	Avgassamlare	3	-1979 EGR TWO-STEPS FOR UF
0150	4 83 61 990	1		1 Exhaust manifold	Avgassamlare	3	-1979 UC
0160	4 83 61 990	1		1 Exhaust manifold	Avgassamlare	3	UC
0180	5 83 56 933	1		1 Gasket	Packning	2	
0200	6 93 06 804	3		3 Screw	Skruv	5	
0220	7 93 50 588	4		4 Screw	Skruv	5	(9306758)
0240	8 93 06 812	4		4 Spacer sleeve	Distanshylsa	3	
0260	9 13 24 144	7		7 Washer	Bricks	5	
0280	10 93 06 820	7		7 Lock nut	Låsmutter	5	
0290	11 82 62 343	4		4 Screw	Skruv	5	
0320	13 80 00 440	3		3 Screw	Skruv	5	EGR + AIR INJECTION
0340	14 83 23 214	1		1 Preheater casing	Förvärmärkäpa	5	
0360	14 93 30 978	1		1 Preheater casing	Förvärmärkäpa	5	1980- I
0380	14A 93 29 442	1		1 Shield	Skärm	4	1980-
0400	15 80 21 917	3		3 Screw	Skruv	5	1980- I
0420	15 80 19 978	3		3 Screw	Skruv	5	
0440	16 80 29 555	1		1 Nut	Mutter	5	
0460	17 83 57 741	1		1 Tube	Rör	5	EGR
0480	18 83 29 666	1		1 Tube	Rör	5	I A EGR
0500	19 83 23 263	1		1 Tube	Rör	5	TA EGR
0520	20 83 25 896	1		1 Cover	Käpa	5	TA EGR
0540	21 83 63 012	1		1 Bracket	Fäste	6	TA EGR »ON-OFF»
0560	22 13 94 527	1		1 Plug	Plugg	5	
0580	23 81 32 235	2		2 Cutting ring	Skärring	5	(8357808)
0600	24 83 29 120	1		1 Nipple	Nippel	5	EGR
0620	25 83 57 790	1		1 Nut	Mutter	5	
0640	26 83 57 766	1		1 Clamp	Klamma	6	
0660	27 79 71 294	1		1 Screw	Skruv	5	EGR
0670	28 83 64 770	2		2 Plug	Plugg	4	
0680	35 93 25 762	1		1 Label, exhaust emission control device	Etikett, avgasreningssystem	4	-1979 UF
0700	35 93 27 933	1		1 Label, exhaust emission control device	Etikett, avgasreningssystem	4	1980- UF
0720	35 93 27 941	1		1 Label, exhaust emission control device	Etikett, avgasreningssystem	4	1980- TURBO FOR UF
0740	35 93 03 629	1		1 Label, exhaust emission control device	Etikett, avgasreningssystem	4	-1979 UC
0760	35 93 27 917	1		1 Label, exhaust emission control device	Etikett, avgasreningssystem	4	1980- UC
0780	35 93 23 056	1		1 Label, exhaust emission control device	Etikett, avgasreningssystem	4	-1979 I FOR SW
0800	35 93 27 883	1		1 Label, exhaust emission control device	Etikett, avgasreningssystem	4	1980- I FOR SW
0820	35 93 23 387	1		1 Label, exhaust emission control device	Etikett, avgasreningssystem	4	-1979 C AND T FOR SW (9323064)
0840	35 93 27 875	1		1 Label, exhaust emission control device	Etikett, avgasreningssystem	4	1980- C AND T FOR SW
0860	35 93 23 965	1		1 Label, exhaust emission control device	Etikett, avgasreningssystem	4	-1979 CA
0880	35 93 27 784	1		1 Label, exhaust emission control device	Etikett, avgasreningssystem	4	1980- CA
0900	35 93 28 550	1		1 Label, exhaust emission control device	Etikett, avgasreningssystem	4	-1979 AU
0920	35 93 27 768	1		1 Label, exhaust emission control device	Etikett, avgasreningssystem	4	1980- AU
0940	35 93 24 013	1		1 Label, exhaust emission control device	Etikett, avgasreningssystem	4	-1979 TURBO FOR AU

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

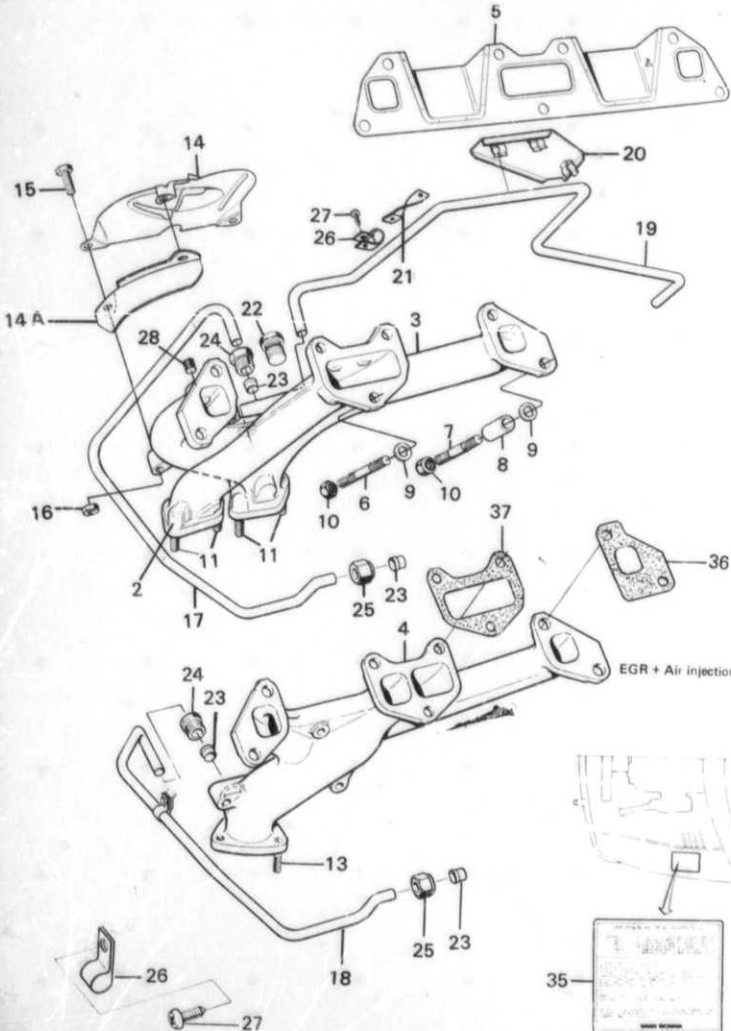

1200

Inlet-and exhaust system
Exhaust manifold, etc

Inlopps-och avgassystem
Avgassamlare, etc

Date
Datum
1987-10

Illustration
Bild nr
R4285

Group
Grupp
2


Page
Sida
77

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S SR	Notes Anmärkning
		900		US				
1240	35	93 27 776	1		Label, exhaust emission control device	Etikett, avgasreningssystem	4	1980- TURBO FOR AU
1280	35	93 23 072	1		Label, exhaust emission control device	Etikett, avgasreningssystem	4	-1979 TURBO FOR SW
1300	35	93 27 861	1		Label, exhaust emission control device	Etikett, avgasreningssystem	4	1980- TURBO FOR SW
1320	35	93 23 981	1		Label, exhaust emission control device	Etikett, avgasreningssystem	4	-1979 TURBO FOR CA
1340	35	93 27 792	1		Label, exhaust emission control device	Etikett, avgasreningssystem	4	1980- TURBO FOR CA
1360	35	93 27 925	1		Label, exhaust emission control device	Etikett, avgasreningssystem	4	1980- TURBO FOR UC AND
1380	36	83 61 842	2		Gasket	Packning	1	7)
1400	37	83 61 859	1		Gasket	Packning	1	7)
1420		88 17 280	X		Set, screw and gasket for exhaust manifold	Sats, skruv och packningar för avgassaml	6	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A06
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E06
Supercharging system	2-E12

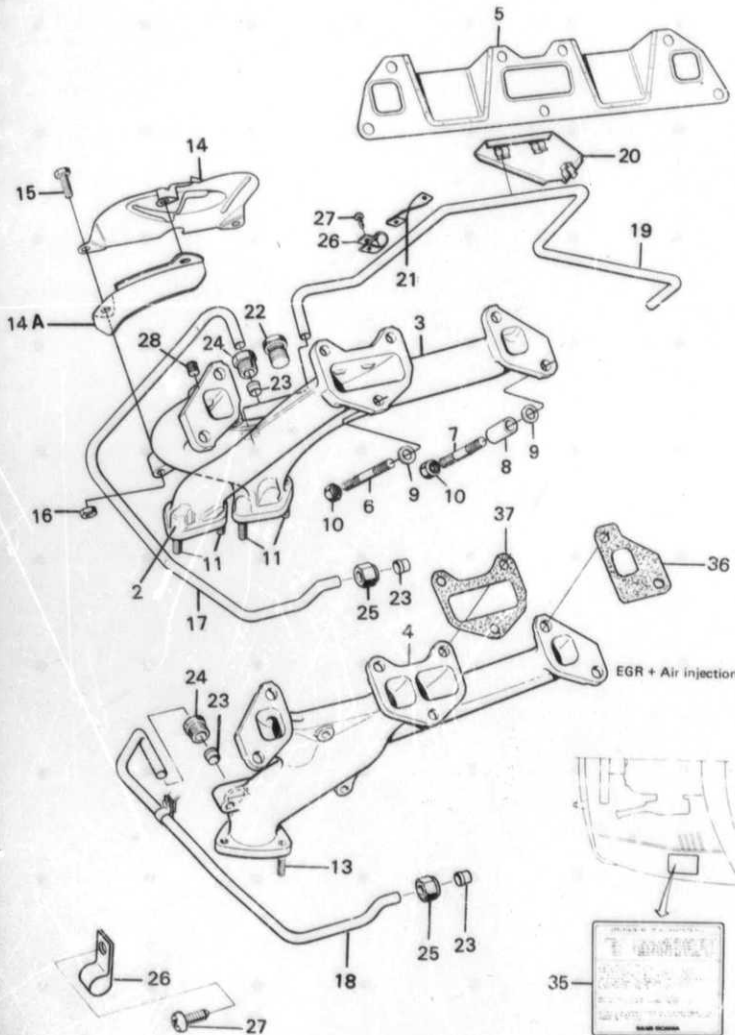

R 4285-900

7. To be used together with gasket 83 56 933 at beamssmly

1250

Inlet-and exhaust system
Exhaust manifold etc,
Turbo

Inlopps och avgassystem
Avgassamlare etc,
Turbo

Date
Datum

Illustration
Bild nr

Group
Grupp


Page
Sida

1987-10

R3719

2

79

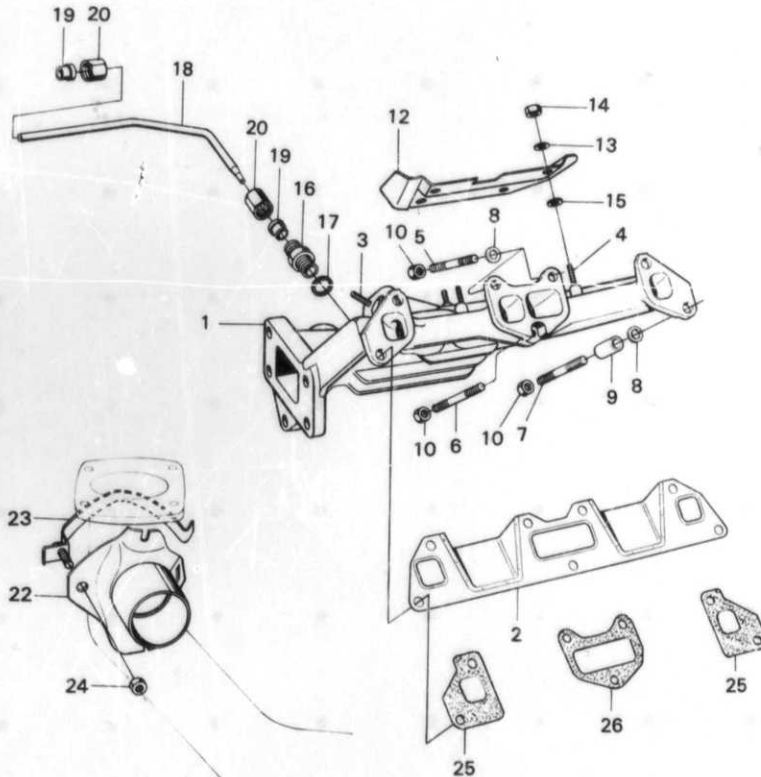

R 3719-900


Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0020	1	83 66 239	1	Exhaust manifold	Avgassamlare	3	EU
0040	1	83 66 569		Exhaust manifold	Avgassamlare	3	US
0060	2	83 56 933	1	Gasket	Packning	2	
0080	3	93 57 138	2	Stud	Pinnskruv	5	
0100	4	80 00 440	4	Stud	Pinnskruv	5	
0120	5	93 06 804	2	Stud	Pinnskruv	5	
0140	6	93 50 588	1	Stud	Pinnskruv	5	(9306788)
0160	7	93 06 796	4	Stud	Pinnskruv	5	
0180	8	80 73 249	7	Washer	Bricka	5	
0200	9	93 06 812	4	Spacer sleeve	Distanshylsa	3	
0220	10	93 06 820	7	Lock nut	Låsmutter	3	
0240	12	83 69 621	1	Heat guard	Strålningskydd	3	
0260	13	80 73 249	4	Washer	Bricka	5	
0280	14	80 74 106	4	Nut	Mutter	5	
0300	15	80 29 985	4	Washer	Bricka	5	
0320	16	83 69 142	1	Nipple	Nippel	4	
0340	17	81 24 141	1	Gasket	Packning	3	-1979
0360	18	93 11 418	1	Pressure pipe	Tryckrör	3	(9307018)
0380	19	19 12 070	2	Cutting ring	Skarring	3	
0400	20	19 12 104	2	Nut	Mutter	3	
0420	22	93 01 748	1	Preheater casing	Fövärmärkäpe	6	
0440	23	93 02 225	1	Clamp	Bygel	5	
0460	24	79 71 658	1	Nut	Mutter	5	
0480	25	83 61 842	2	Gasket	Packning	1	7)
0500	26	83 61 858	1	Gasket	Packning	1	7)

7. To be used together with gasket 83 56 933 at beassembly

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E06
Supercharging system	2-E12

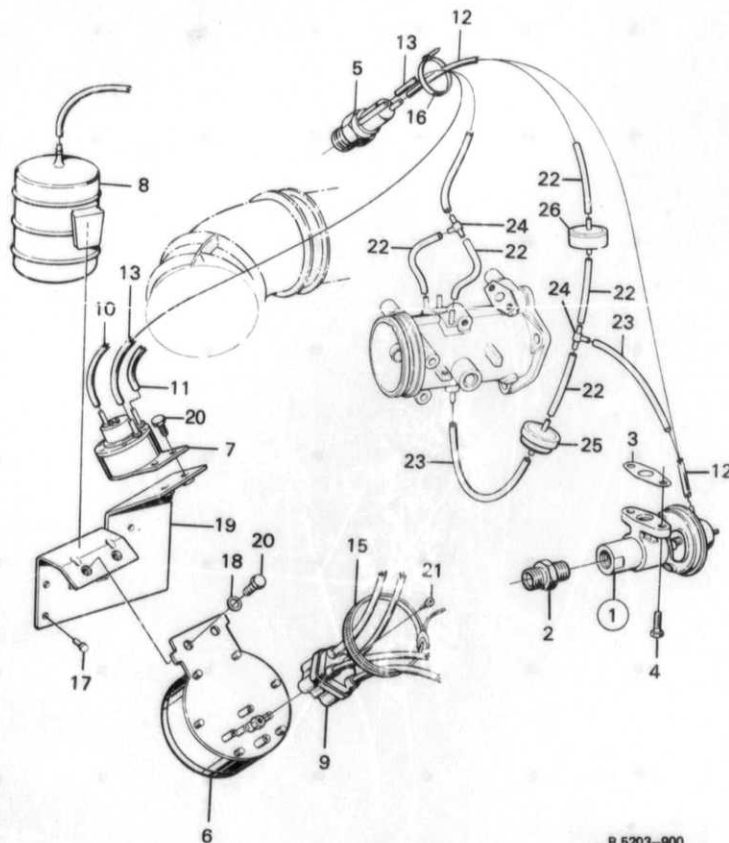

R 5203-900

SAAB
genuine parts
original reservdelar

2-D10

SAAB 900
M79-80

MASTER INDEX

1300

Inlet and exhaust system
Exhaust gas recir-
culation (EGR)

Inlopps-och avgassystem
Avgasrecirkulation
(EGR)

Date
Datum
1987-10

Illustration
Bild nr
R5203

Group
Grupp
2

Page
Sida
81

Fig. Pos.	Part No Art nr	Quantity/Amtal			Description	Benämning	K/S SR /L	Notes Anmärkning
		900		US				
0020	1 93 07 364	1			1 Exhaust gas re- circulation valve	Avgasrecirkulations- ventil	3	TA FOR SW, IA FOR UF AND CA
0040	1 93 07 372	1			1 Exhaust gas re- circulation valve	Avgasrecirkulations- ventil	3	IM FOR UF AND CA, IA FOR SW
0060	2 83 57 782	1			1 Nipple	Nippel	4	
0120	3 83 57 485	1			1 Gasket	Packning	2	
0140	4 80 91 720	2			2 Screw	Skruv	5	TA
0160	4 80 19 911	2			2 Screw	Skruv	5	
0180	5 83 57 873	1			1 Air valve	Luftventil	3	
0220	6 83 32 405	1			1 Vacuum amplifier	Vakuumförstärkare	5	M
0240	6 83 86 949	1			1 Vacuum amplifier	Vakuumförstärkare	5	A
0260	7 83 86 831	1			1 Signal cut off	Signalbortkopplare	5	
0280	8 83 86 724	1			1 Vacuum tank	Vakuumtank	5	
0300	9 83 86 872	1			1 Collecting piece	Samlingsstycke	6	
0320	10 83 86 856	1			1 Vacuum hose	Vakuumslang	5	WHITE
0340	11 83 86 864	1			1 Vacuum hose	Vakuumslang	5	BLUE
0360	12 83 20 962	1			1 Hose	Slang	5	
0380	12 83 86 906	1			1 Hose	Slang	5	TA
0400	13 83 20 970	1			1 Hose	Slang	5	
0420	13 83 86 906	1			1 Hose	Slang	5	TA
0440	15 85 17 104	3			3 Strap	Spännband	4	
0460	15 85 17 104	1			1 Strap	Spännband	4	
0480	17 83 86 930	1			1 Blind rivet	Blindnät	5	
0500	18 83 29 944	2			2 Washer	Bricka	5	
0520	18 83 86 716	1			1 Bracket	Fäste	6	
0540	19 80 19 887	4			4 Screw	Skruv	5	
0560	21 79 22 297	1			1 Screw	Skruv	5	
0580	22 93 06 077	5			5 Hose	Slang	5	
0600	23 93 06 085	2			2 Hose	Slang	5	
0620	24 83 86 791	2			2 T-tube	T-rör	4	
0640	25 83 86 015	1			1 Valve	Ventil	4	
0660	26 83 23 382	1			1 Delay valve	Fördröjningsventil	2	

0 General	1-A02
1 Tools	1-H02
2 Engine	2-A02
3 Electrical system, Instruments	2-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly, Steering	3-B02
7 Suspension, Wheels	3-C02
8 Body	3-D02
9 Accessories, Labels	3-L02
10 Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E06
Supercharging system	2-E12

1350

Inlet-and exhaust system
Pulse-air system

Inlopps-och avgassystem
Luftinblåsningssystem


Date
Datum
1987-10

Illustration
Bild nr
R3857

Group
Grupp
2

Page
Sida
83

Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S S/R L	Notes Anmärkning
		900	US			
0020	1 83 30 003		1 Tube	Rör	5	
0040	2 83 29 997		1 Tube	Rör	5	
0060	3 83 57 444		4 Nut	Mutter	5	
0080	4 83 57 451		4 Cutting ring	Skärring	5	
0100	5 83 57 436		4 Nipple	Nippel	4	
0120	6 83 57 089		4 Tube	Rör	5	
0140	7 83 29 389		2 Valve	Ventil	5	
0160	8 83 29 567		1 Hose	Slang	5	
0180	9 83 34 195		2 Extension tube	Skarvrör	5	
0200	10 79 70 072		3 Hose clamp	Slangklamma	5	
0240	12 83 34 203		1 Hose	Slang	5	
0260	13 83 30 516		1 Bracket	Stag	6	
0280	14 83 30 318		1 Spacer	Distans	5	
0300	15 80 83 958		1 Screw	Skruv	5	
0320	16 83 30 300		1 Retainer	Hållare	6	
0340	17 80 59 610		1 Screw	Skruv	5	
0360	18 83 34 211		1 Hose	Slang	5	

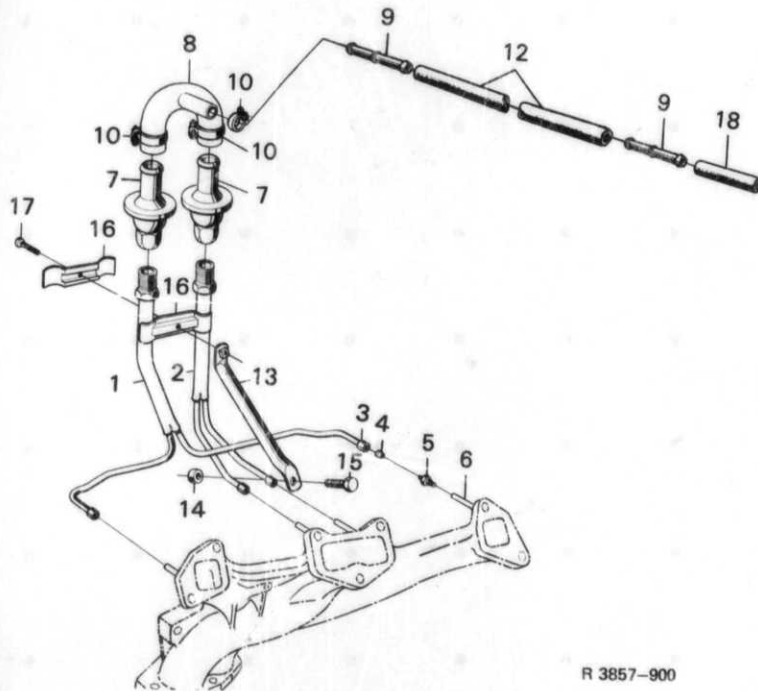

R 3857-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A06
Lubrication system	2-B06
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

1400

Inlet and exhaust system
Lambda-sonde system

INLOPPS-OCH avgassystem
Lambda-sond system


Date
Datum
1987-10

Illustration
Bild nr
R3722

Group
Grupp
2

Page
Sida
85

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR / L	Notes Anmärkning
		900	US				
0020	1 93 17 751	1		1 Lambda-sonde	Lambda-sond	4	
0040	2 93 28 841	1		1 Electronic unit	Elektronikenhet	5	-1979
0050	2 93 26 307	1		1 Electronic unit	Elektronikenhet	5	1980-
0060	2 93 39 285	1		1 Electronic unit	Elektronikenhet	5	-1979 TURBO
0070	2 93 26 315	1		1 Electronic unit	Elektronikenhet	5	1980- TURBO
0080	3 93 30 748	1		1 Kick plate	Sparkskydd	5	
0100	4 93 28 981	1		1 Bracket	Fäste	6	
0120	5 79 16 489	3		3 Washer	Bricka	5	
0140	6 79 22 362	2		2 Screw	Skruv	5	
0160	7 79 46 734	2		2 Screw	Skruv	5	
0180	8 93 28 783	1		1 Timing valve	Taktventil	4	
0200	9 93 29 153	1		1 Suspension pad	Upphångningskudde	5	
0220	11 93 38 535	1		1 Fuel line assy	Bränsleledning kpl	5	1978 UC
0230	11 93 27 156	1		1 Fuel line assy	Bränsleledning kpl	5	1980
0240	12 93 02 748	1		1 Fuel line assy	Bränsleledning kpl	5	-1979
0250	12 93 27 271	1		1 Fuel line assy	Bränsleledning kpl	5	1980-
0260	13 93 00 047	1		1 Heat guard	Värmesköld	6	TURBO

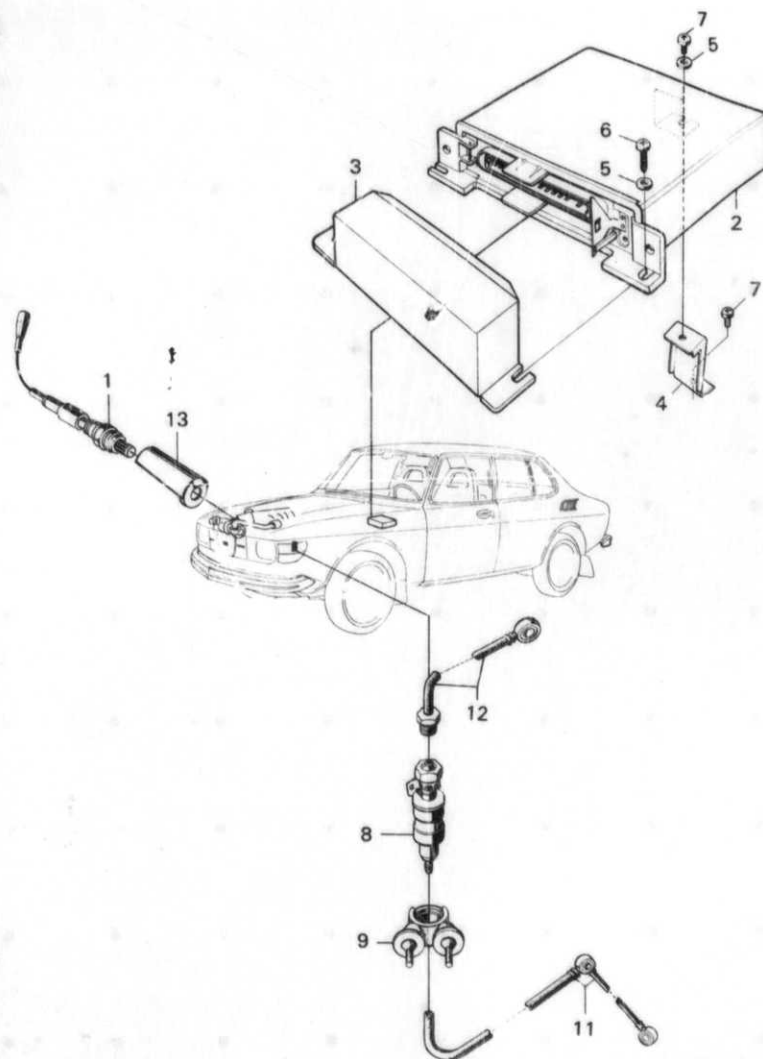

R 3722-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02


2 GROUP INDEX



Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-D16
Cooling system	2-D20
Engine control	2-E05
Supercharging system	2-E12

1450

Exhaust system				Avgassystem				Date	Illustration	Group	Page
Mufflers, exhaust pipe, etc				Ljuddämpare, avgas- rör, etc				Datum	Bild nr	Grupp	Sida
								1987-10	R5914	2	87
Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S		Notes			
		900	US			S	R	Anmärkning			
0020	1 83 39 814	1		Muffler front	Ljuddämpare främre	1					
0040	2 93 00 740	1		Muffler front	Ljuddämpare främre	1					
0060	3 83 86 229	1		Muffler rear	Ljuddämpare bakre	1					
0070	3 93 26 448	1		Muffler rear	Ljuddämpare bakre	1					
0080	3 83 36 034	1		Muffler rear	Ljuddämpare bakre	1					
0090	3 93 26 463	1		Muffler rear	Ljuddämpare bakre	1					
G130	4 93 17 405	1		Exhaust pipe rear	Avgasrör bakre	1					
0120	4 93 03 322	1		Exhaust pipe rear	Avgasrör bakre	1					
0140	5 83 87 672	2		Gasket	Packning	1					
0160	6 93 16 407	1		Seal ring	Tätningssring	3					
0180	10 79 67 870	4		Nut	Mutter	5					
0200	11 79 65 767	4		Nut	Mutter	5					
0220	12 83 86 450	1		Clamp assy	Klamme kpl	S	1				
0240	13 80 84 014	1		Screw	Skruv	5					
0250	14 93 19 047	2		Washer	Bricka	5					
0290	15 80 73 942	1		Nut	Mutter	5					
0300	16 83 94 323	1		Clamp assy	Klamme kpl	S	1				
0320	17 80 84 006	1		Screw	Skruv	5					
0340	18 93 19 047	2		Washer	Bricka	5					
0360	19 80 73 942	1		Nut	Mutter	5					
0380	12 83 36 406	1		Clamp assy	Klamme kpl	1					
0400	13 80 84 030	1		Screw	Skruv	5					
0410	14 93 19 047	2		Washer	Bricka	5					
0440	15 80 74 106	1		Nut	Mutter	5					
0460	16 83 36 422	1		Clamp assy	Klamme kpl	1					
0480	17 80 84 014	1		Screw	Skruv	5					
0500	18 93 19 047	2		Washer	Bricka	5					
0520	19 80 74 106	1		Nut	Mutter	5					
0540	22 83 70 207	1		Rubber suspension	Gummiupphängning	S	1				
0580	23 83 28 105	2		Rubber suspension	Gummiupphängning	1					
0600	24 83 84 844	1		Suspension yoke	Upphångningsbygel	5					
0620	25 80 82 935	1		Screw	Skruv	5					
0640	26 83 19 047	1		Washer	Bricka	5					
0660	27 79 65 767	1		Nut	Mutter	5					
0680	28 76 15 636	1		Bracket	Fäste	5					
0700	29 75 14 169	1		Stay	Stag	S	5				
0720	30 93 17 058	1		Clamp	Bygel	S	5				
0740	31 79 67 953	2		Nut	Mutter	S	5				
0780	32 75 14 631	1		Lock plate	Låsbleck	S	5				
0800	33 83 33 106	1		Heat guard	Värmesköld	S	3				
0820	34 83 33 155	3		Bracket	Fäste	S	1				
0840	35 83 33 148	3		Bracket	Fäste	S	1				
0860	36 80 59 810	3		Screw	Skruv	S	5				
0900	37 80 82 952	3		Screw	Skruv	S	5				
0920	83 86 504	X		Mounting kit, muffler	Mont sats, ljuddämp	2					
0930	93 37 569	X		Mounting kit, muffler	Mont sats, ljuddämp	2					
0940	83 33 395	X		Kit, heat guard	Sats, värmesköld	5					
0960	93 37 320	X		Kit, stay	Sats, stag	2					
0980	93 20 979	X		Kit, muffler rear	Sats, ljuddämpare bak	2					
0990	88 17 371	X		Kit, exhaust pipe bracket	Sats, avgasrörsfäste	2					
1000											

R 5914-900

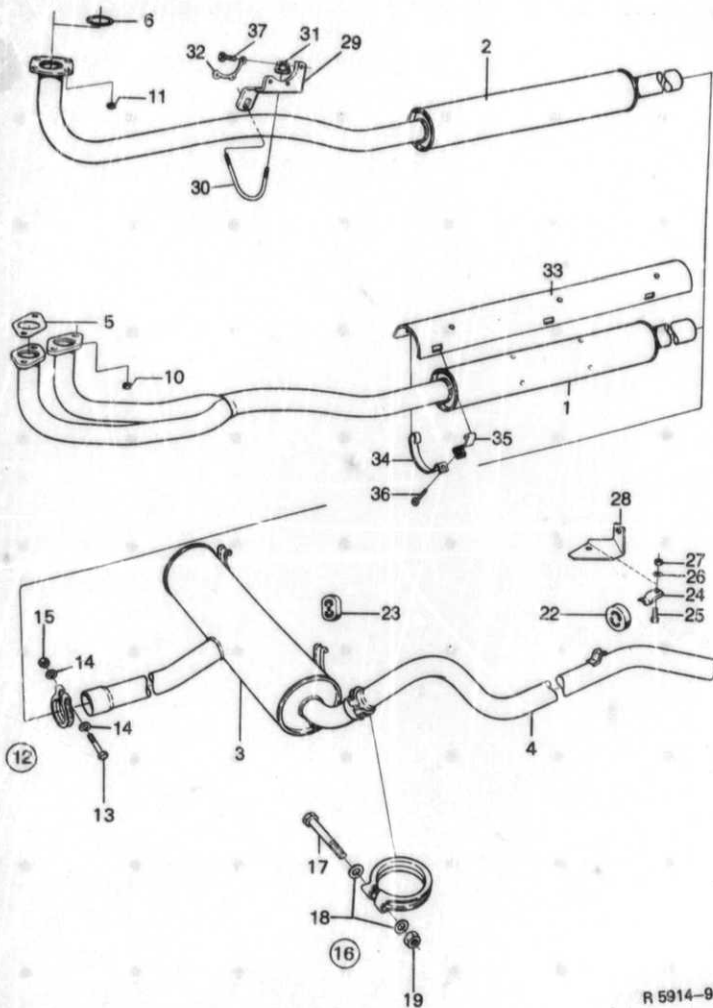

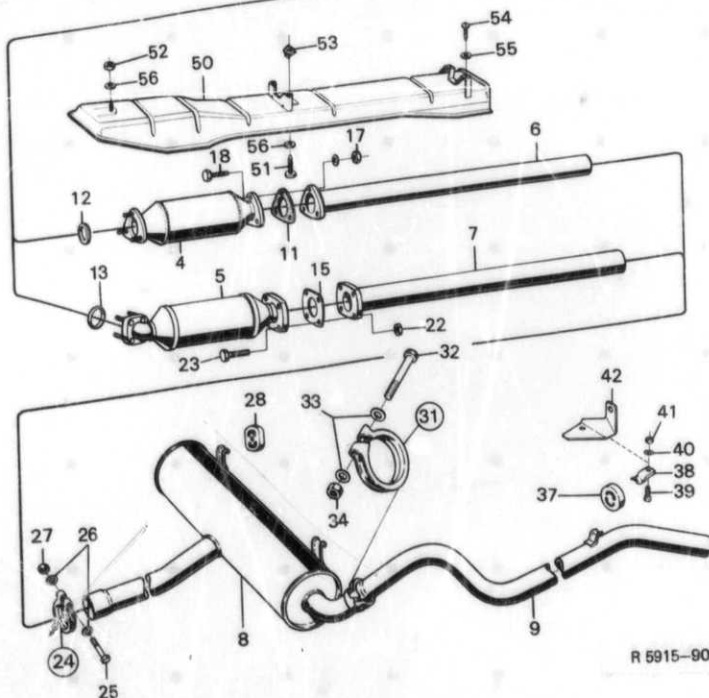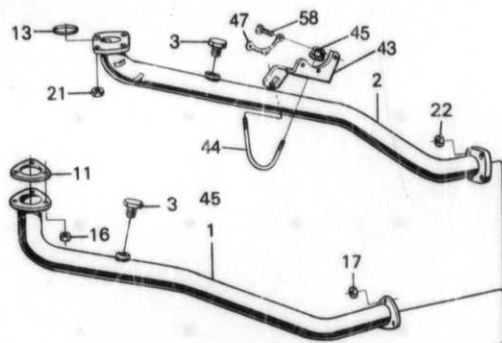

R 5915-900

1500

Exhaust system
Catalytic converter, etc.
USA

Avgasssystem
Catalytisk reaktor,
USA

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R5915

2


89

Fig. Pos.	Part No Art nr	Quantity/Amount 900	US	Description	Benämning	KS SR	Notes Anmärkning
0020	1 75 14 250			1 Exhaust pipe front	Avgasrör främre	2	
0060	2 93 00 773			1 Exhaust pipe front	Avgasrör främre	2	-1979 TURBO
0060	2 93 30 531			1 Exhaust pipe front	Avgasrör främre	2	1980- TURBO
0100	3 93 25 852			1 Plug	Plugg	4	PART OF 8330531, 8326471
0120	4 93 31 406			1 Catalytic converter	Katalytisk reaktor	4	
0140	5 83 38 352			1 Catalytic converter	Katalytisk reaktor	4	TURBO
0160	6 83 28 759			1 Exhaust pipe center	Avgasrör mitre	1	
0190	7 83 35 283			1 Exhaust pipe center	Avgasrör mitre	1	TURBO
0200	8 83 86 229			1 Muffler rear	Ljuddämpare bakre	1	-1979
0220	8 93 26 448			1 Muffler rear	Ljuddämpare bakre	1	1980-
0240	8 93 36 034			1 Muffler rear	Ljuddämpare bakre	1	-1979 TURBO
0260	8 93 28 463			1 Muffler rear	Ljuddämpare bakre	1	1980- TURBO
0280	9 93 17 405			1 Exhaust pipe rear	Avgasrör bakre	1	
0320	9 93 03 322			1 Exhaust pipe rear	Avgasrör bakre	1	TURBO
0340	11 83 87 052			2 Gasket	Packning	1	
0360	12 83 28 726			1 Seal ring	Tätningssring	5	
0380	13 93 16 407			1 Seal ring	Tätningssring	3	TURBO
0420	15 83 34 963			1 Gasket	Packning	5	TURBO
0440	16 80 70 296			3 Nut	Mutter	5	
0460	17 80 74 106			6 Nut	Mutter	5	
0480	18 80 83 941			3 Screw	Skruv	5	
0500	21 79 65 767			4 Nut	Mutter	5	TURBO
0520	22 80 74 106			8 Nut	Mutter	5	TURBO
0540	23 80 83 941			4 Screw	Skruv	5	TURBO
0560	24 83 86 450			1 Clamp assy	Klamme kpl	5	
0580	25 80 84 014			1 Screw	Skruv	5	
0590	26 93 19 047			2 Washer	Bricka	5	
0620	27 80 73 942			1 Nut	Mutter	5	
0640	24 83 36 406			1 Clamp assy	Klamme kpl	1	TURBO
0660	25 80 84 030			1 Screw	Skruv	5	TURBO
0680	26 93 19 047			2 Washer	Bricka	5	TURBO
0700	27 80 74 106			1 Nut	Mutter	5	TURBO
0740	28 93 28 105			2 Rubber suspension	Gummiupphängning	5	
0760	31 83 84 323			1 Clamp assy	Klamme kpl	5	
0780	32 80 84 006			1 Screw	Skruv	5	
0790	33 93 19 047			2 Washer	Bricka	5	
0820	34 80 73 942			1 Nut	Mutter	5	
0840	31 83 36 422			1 Clamp assy	Klamme kpl	1	TURBO
0860	32 80 84 014			1 Screw	Skruv	5	TURBO
0880	33 93 19 047			2 Washer	Bricka	5	TURBO
0900	34 80 74 106			1 Nut	Mutter	5	TURBO
0920	37 83 70 207			1 Rubber suspension	Gummiupphängning	5	
0940	38 83 84 544			1 Suspension yoke	Upphängningsbygel	5	
0960	39 80 82 935			1 Screw	Skruv	5	
0980	40 93 19 047			1 Washer	Bricka	5	
1000	41 79 65 767			1 Nut	Mutter	5	
1020	42 76 15 636			1 Bracket	Fäste	5	
1040	43 75 14 169			1 Stay	Stag	5	TURBO
1060	44 93 17 058			1 Clamp	Bygel	5	TURBO
1080	45 79 10 853			2 Nut	Mutter	5	TURBO
1100	47 75 14 631			1 Lock plate	Låsbleck	5	TURBO
1120	50 83 28 148			1 Heat guard	Värmesköld	3	
1140	51 83 28 197			2 Screw	Skruv	5	
1160	52 80 74 106			1 Nut	Mutter	5	
1180	53 79 70 429			2 Nut	Mutter	5	
1200	54 79 22 503			2 Screw	Skruv	5	
1220	55 79 10 540			2 Washer	Bricka	5	
1240	56 79 10 557			3 Washer	Bricka	5	
1260	80 82 992			3 Screw	Skruv	5	TURBO
1280	83 89 504			X Mounting kit, muffler	Mont sats, ljuddämp	2	
1290	93 37 589			X Mounting kit, muffler	Mont sats, ljuddämp	2	TURBO
1300	93 37 320			X Kit, stay	Sats, stag	2	TURBO
1320	93 20 979			X Kit, muffler rear	Sats, ljuddämpare bak	2	1979
1330	86 17 371			X Kit, exhaust pipe bracket	Sats, avgasrörsfäste	2	TURBO

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

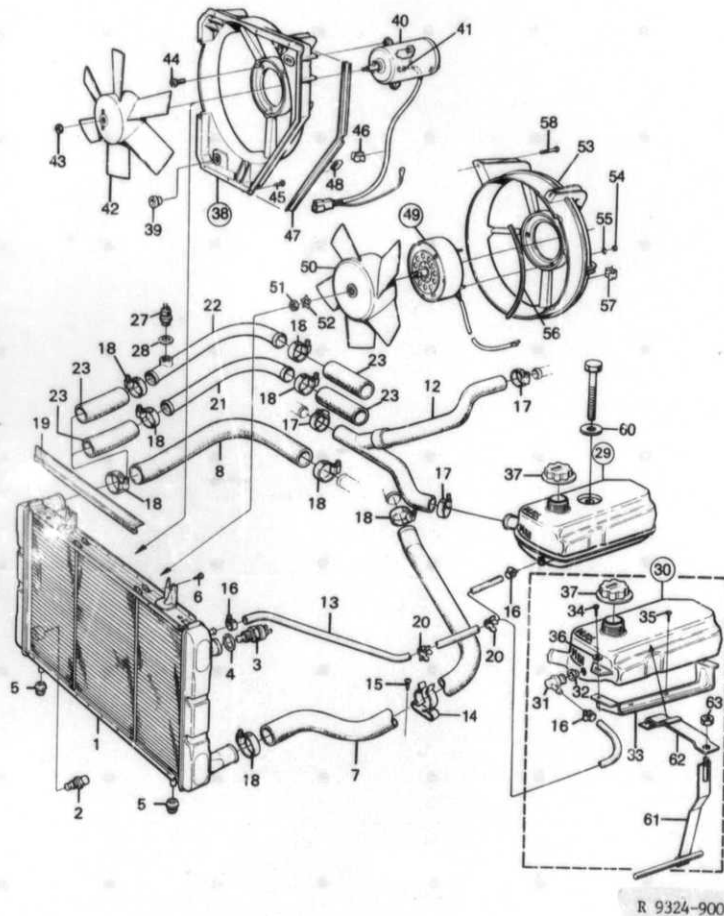

1550 Cooling system
Radiator, fan

Kylsystem
Kylare, fläkt

Date 1987-10 Illustration Bild nr R9324 Group Grupp 2 Page Side 91

Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S SR / L	Notes Anmärkning
		900				
		US				
0040	1 75 41 063	1	1 Radiator	Kylare	4	TURBO
0060	1 75 41 071	1	1 Radiator	Kylare	5	
0080	2 93 18 304	1	1 Drain cock	Avtagnings kran	5	
0100	3 85 61 387	1	1 Thermo-contact	Termokontakt	2	
0120	4 83 30 288	1	1 Gasket	Packning	5	
0140	5 83 39 857	2	2 Rubber bushing	Gummibussning	5	
0160	6 79 22 891	2	2 Screw	Skruv	5	
0180	7 93 01 507	1	1 Water hose	Vattenslang	3	8) NOT TURBO AND AC
0200	8 93 01 598	1	1 Water hose	Vattenslang	2	
0220	12 93 39 896	1	1 Water hose	Vattenslang	3	
0240	13 93 30 515	1	1 Water hose	Vattenslang	3	
0260	14 93 01 375	1	1 Bracket	Fäste	5	8)
0280	15 79 22 591	1	1 Screw	Skruv	5	8)
0300	16 79 70 331	2	2 Hose clamp	Slangklämma	5	
0320	17 79 70 080	3	3 Hose clamp	Slangklämma	5	(7970098)
0340	18 79 70 106	4	4 Hose clamp	Slangklämma	5	
0350	18 79 70 106	4	4 Hose clamp	Slangklämma	5	TURBO, AC
0360	19 93 02 829	1	1 Seal strip	Tätninglist	5	
0380	20 85 36 419	2	2 Clip	Clips	5	
0400	21 93 03 801	1	1 Cooler tube	Kylarrör	5	TURBO
0420	22 93 16 894	1	1 Cooler tube	Kylarrör	5	-1979 AC
0430	22 93 31 059	1	1 Cooler tube	Kylarrör	5	1980- AC
0440	23 93 03 793	2	2 Water hose	Vattenslang	5	TURBO, AC
0520	27 95 52 878	1	1 Thermo-contact	Termokontakt	4	AC
0540	28 83 30 288	1	1 Gasket	Packning	5	AC
0550	29 93 26 786	1	1 Expansion tank assy	Expansionstank kpl	3	20)
0560	30 83 39 483	1	1 Expansion tank assy	Expansionstank kpl	3	19)
0580	31 93 28 857	1	1 Hose connection	Slanganslutning	4	19)
0600	32 93 24 542	1	1 Bushing	Bussning	4	19)
0620	33 93 00 526	1	1 Bracket	Konsol	6	19)
0640	34 79 22 438	2	2 Screw	Skruv	5	19)
0645	35 79 22 831	2	2 Screw	Skruv	5	19)
0650	36 79 18 499	2	2 Washer	Bricka	5	19)
0660	37 83 35 069	1	1 Cap	Lock	3	
0680	38 83 19 931	1	1 Fan housing assy	Fläktkåpa kpl	6	
0700	39 83 84 174	1	1 Bushing	Bussning	4	
0720	40 85 10 562	1	1 Fan motor assy	Fläktmotor kpl	4	
0740	41 86 05 040	2	2 Carbon-brush	Kolborste	4	
0760	42 83 30 896	1	1 Fan	Fläkt	5	
0800	43 79 14 880	1	1 Nut	Mutter	5	
0820	44 79 34 783	3	3 Screw	Skruv	5	
0840	45 79 22 735	6	6 Screw	Skruv	5	
0860	46 71 55 500	1	1 Clip	Clips	5	
0880	47 83 37 875	1	1 Strip	List	6	
0900	48 93 02 737	2	2 Clip	Clips	3	
0920	49 85 82 894	1	1 Fan motor assy	Fläktmotor kpl	4	TURBO
0940	49 85 82 728	1	1 Fan motor assy	Fläktmotor kpl	4	AC
0960	50 85 35 819	1	1 Fan wheel	Fläktjul	4	TURBO, AC
0985	51 85 46 129	1	1 Nut	Mutter	5	TURBO, AC
0970	52 85 46 137	1	1 Washer	Bricka	5	TURBO, AC
0980	53 83 37 859	1	1 Fan ring RH	Fläkttring H	4	TURBO
0990	53 83 37 859	1	1 Fan ring LH	Fläkttring V	4	AC
1000	54 80 29 548	3	3 Nut	Mutter	5	TURBO, AC
1020	55 80 29 944	3	3 Washer	Bricka	5	TURBO, AC
1040	56 93 02 803	1	1 Strip	List	5	TURBO
1060	57 71 55 500	1	1 Clip	Clips	5	TURBO, AC
1080	58 79 22 735	3	3 Screw	Skruv	5	TURBO, AC
1120	60 83 71 650	1	1 Washer	Bricka	5	20)
1180	61 93 23 395	1	1 Tension	Spännare	5	19)
1200	62 93 23 403	1	1 Tension	Spännare	5	19)

8. Not for cars with water oil cooler
19. Ch 90801028786 - 90802008843.
20. Ch 90801028787 - 90802008844.

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A06
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

1550

Cooling system
Radiator, fan

Kylsystem
Kylare, fläkt

Date
Datum
1987-10


Illustration
Bild nr
R9324

Group
Grupp
2

Page
Sida
93

1220

Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S S/R	Notes Anmärkning
		900	US			
63	80 73 942	1	1 Nut	Mutter	5	19)

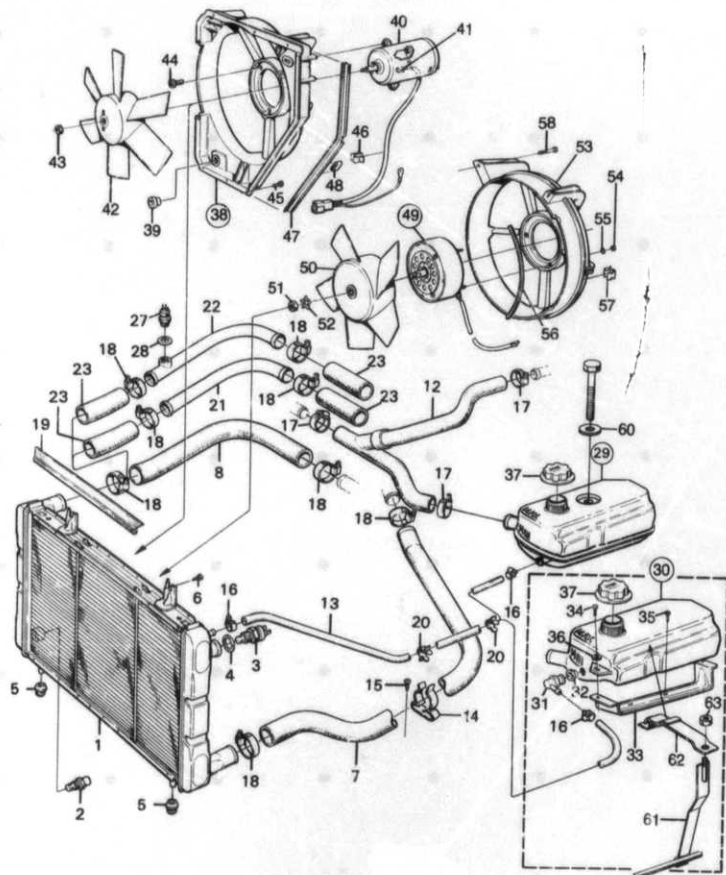


R 9324-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

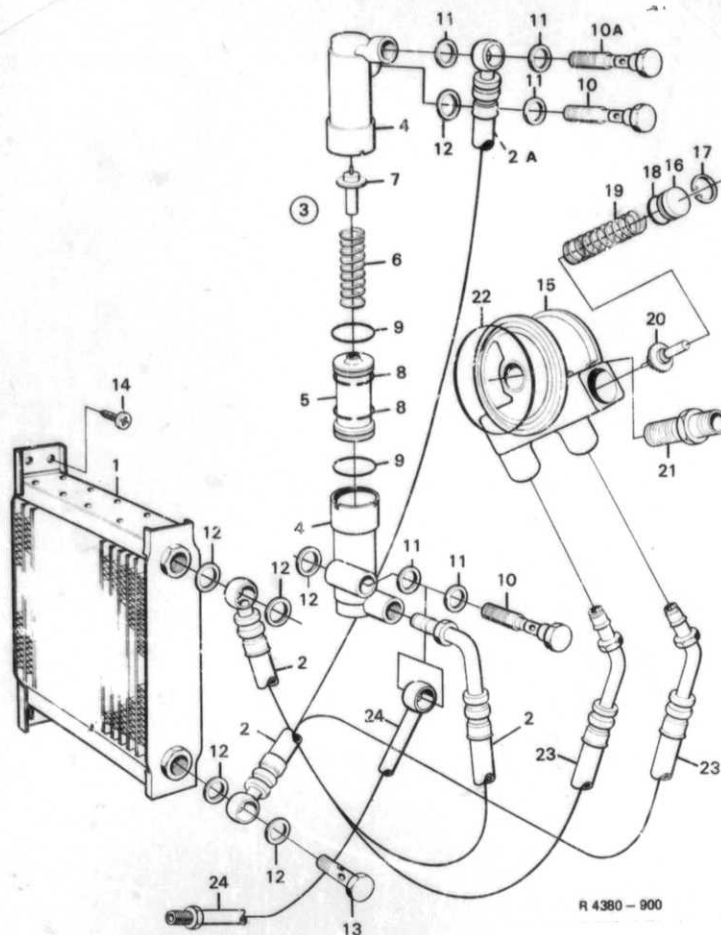

1600

Cooling system
Air oil cooler, engine,
automatic transmission

Kylsystem
Luftoljekylare, motor,
automatväxellåda

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R4380

2

95

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Börjning	K/S S/R	Notes Anmärkning
		900	US				
0020	1 93 01 482	1		1 Oil cooler	Oljekylare	S 4	
0040	2 93 01 524	2		2 Oil hose	Oljeslang	S 4 (26)	
0045	2 93 30 705	1		1 Oil hose	Oljeslang	S 4 (26)	
0050	2A 93 30 883	1		1 Oil hose	Oljeslang	S 4 (26)	
0060	3 93 00 864	1		1 Thermostat assy	Termostat kpl	S 3	
0090	4 93 00 872	2		2 Thermostat house	Termostathus	S 5	
0100	5 93 00 880	1		1 Sleeve	Hylls	S 4	
0120	6 93 00 891	1		1 Spring	Fjäder	S 5	
0140	7 93 01 540	1		1 Thermostat	Termostat	S 2	
0160	8 93 01 557	2		2 Clamping ring	Spännring	S 5	
0170	9 79 71 987	2		2 O-ring	O-ring	S 3	
0200	10 93 00 914	2		2 Screw	Skruv	S 5 (26)	
0205	10 93 00 914	1		1 Screw upper	Skruv övre	S 5 (26)	
0210	10 93 30 689	1		1 Screw lower	Skruv nedre	S 5 (26)	
0215	10A 93 30 713	1		1 Screw	Skruv	S 5 (26)	
0220	11 93 01 508	2		2 Seal ring	Tätningaring	S 4 (26)	
0230	11 93 01 508	5		5 Seal ring	Tätningaring	S 4 (26)	
0240	12 83 26 712	6		6 Seal ring	Tätningaring	S 3	
0260	12 83 26 712	4		4 Seal ring	Tätningaring	S 3	
0280	13 93 01 532	2		2 Screw	Skruv	S 5	
0300	14 79 22 420	4		4 Screw	Skruv	S 5	
0320	15 93 00 567	1		1 Adapter assy	Adapter kpl	S 5	
0340	16 93 00 563	1		1 Plug	Plugg	S 5	
0360	17 79 14 898	1		1 Lock ring	Låsring	S 5	
0380	18 79 72 037	1		1 Seal ring	Tätningaring	S 4	
0400	19 93 00 591	1		1 Spring	Fjäder	S 5	
0420	20 93 01 540	1		1 Thermostat	Termostat	S 2	
0440	21 83 14 452	1		1 Screw	Skruv	S 5	
0460	22 79 67 912	1		1 O-ring	O-ring	S 2	
0480	23 93 01 516	2		2 Oil hose	Oljeslang	S 4	
0490	83 32 436	1		1 Pipe	Rör	S 5 (26)	
0500	93 01 474	1		1 Kit, air oil cooler	Sats, luftolj-kylare	S 4 (26) A	
0520	93 01 981	1		1 Kit, air oil cooler	Sats, luftolj-kylare	S 4 (26) A	
0540	93 30 671	1		1 Kit, air oil cooler	Sats, luftolj-kylare	S 4 (26) A	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

1650

Cooling system
Water oil cooler, engine
automatic transmission

Kylsystem
Vattenoljekylare, motor,
automatväxellåda


Date
Datum
1987-10

Illustration
Bild nr
R4381

Group
Grupp
2

Page
Sida
97

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K S	Notes Anmärkning
		900	US				
0020	1 93 03 702	1		1 Oil cooler	Oljekylare	S 4	
0040	2 93 01 387	1		1 Water hose	Vattenslang	S 5	
0060	3 93 01 359	1		1 Water hose	Vattenslang	S 5	
0080	4 79 70 130	2		2 Hose clamp	Slangklamma	S 6	
0100	5 93 01 375	2		2 Bracket	Hållare	S 5	
0120	6 93 01 383	2		2 Rubber	Gummi	S 4	
0140	7 79 22 891	2		2 Screw	Skruv	S 5	
0160	8 83 14 445	1		1 Adapter	Adapter	S 5	
0180	9 83 14 452	1		1 Screw	Skruv	S 5	
0200	10 79 67 912	1		1 O-ring	O-ring	S 2	
0220	11 93 01 417	1		1 Oil hose	Oljeslang	S 4	
0240	12 93 01 425	1		1 Oil hose	Oljeslang	S 4	
0260	13 93 01 409	1		1 Oil hose	Oljeslang	S 4 25	
0280	14 93 30 499	1		1 Oil hose	Oljeslang	S 4 26	
0300	15 93 29 707	1		1 Oil hose	Oljeslang	S 4 25	
0320	16 93 31 695	1		1 Oil hose	Oljeslang	S 4 26	
0340	17 93 03 694	1		1 Nipple	Nippel	S 5	
0360	18 93 03 678	2		2 Nipple	Nippel	S 5	
0380	19 93 01 532	1		1 Banjo screw	Banjoskruv	S 5 25	
0400	20 83 26 712	3		3 Sealing ring	Tättningsring	S 3 25	
0420	1 83 14 395	2		2 Sealing ring	Tättningsring	S 3 26	
0440	93 01 771	1		1 Kit, water oil cooler	Sats, vattenoljekyl	S 4 25	
0460	93 01 789	1		1 Kit, water oil cooler	Sats, vattenoljekyl	S 4 26	ENGINE
0480	93 30 432	1		1 Kit, oil hose	Sats, oljeslang	S 3 10	
0520	93 20 268	1		1 Kit, oil hose	Sats, oljeslang	S 3 10	

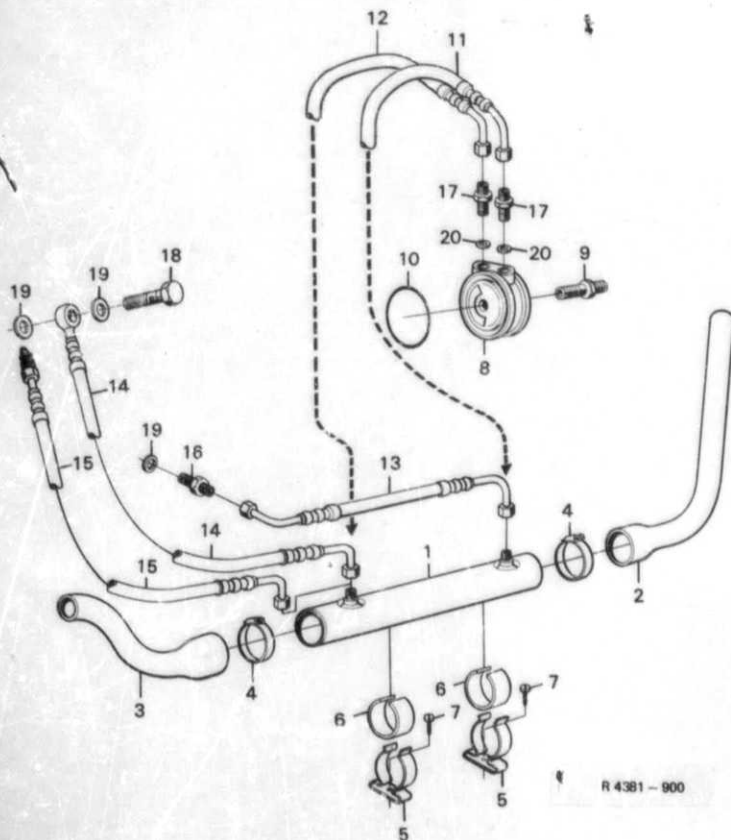

R 4381 - 900

10. To be used at rebuilding of transmission oil cooler to engine oil cooler
25. Ch 90801034047 - 90802010135 - 90806004439
26. Ch 90801034048 - 90802010136 - 90806004439

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-R02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B08
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

1700

Cooling system
Water pump

Kylsystem
Vattenpump

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1987-10

R3728

2

99

Fig. Pos.	Part No Art nr	Quantity/Amtal			Description	Benämning	K/S SR / L	Notes Anmärkning
		900		US				
0020	1	83 67 674	1		1 Water pump assy	Vattenpump kpl	2	
0040	2	83 61 883	1		1 Shaft, water pump	Åxel, vattenpump	5	
0060	4	83 04 206	1		1 Ball bearing	Kullager	5	
0080	5	80 47 722	1		1 Lock ring	Spärring	5	
0100	9	83 04 255	1		1 Seal ring	Tätningssring	4	
0120	11	83 04 271	1		1 Seal ring	Tätningssring	3	
0160	13	83 61 917	1		1 Impeller	Skovelhjul	4	
0180	17	83 68 560	1		1 Pump cover	Pumplock	4	
0200	18	83 46 090	1		1 Gasket	Packning	2	
0220	19	80 91 738	1		1 Screw	Skruv	5	
0240	20	80 83 941	2		2 Screw	Skruv	5	
0260	21	80 29 985	1		1 Washer	Bricka	5	
0270		93 37 535	X		X Repair kit, water pump	Rep-sats, vattenpump	3	

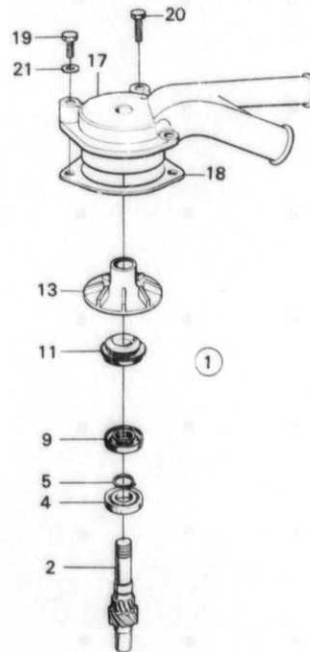


R 3728-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharger system	2-E12

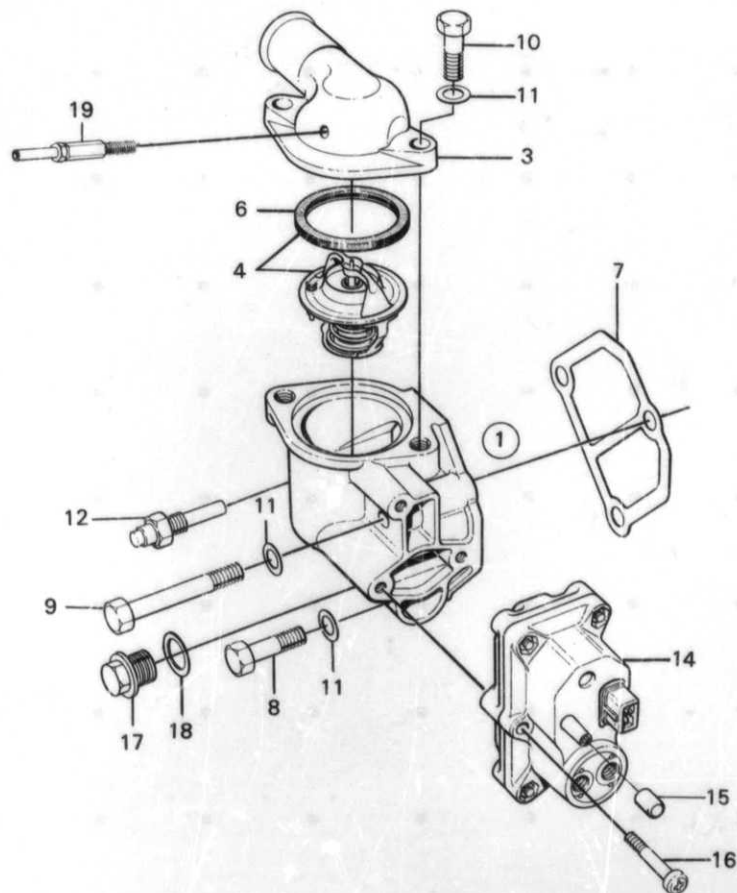

R 9325-900

SAAB
genuine parts
original reservdelar

2-E06

SAAB 900
M79-80

MASTER INDEX

1750

Cooling system
Thermostat

Kylsystem
Termostat

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R9325

2


101

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0020	1	83 82 634	1	1 Thermostat housing	Termostathus	5	
0040	3	83 89 985	1	1 Cover	Lock	5	
0060	4	93 20 284	1	1 Kit, thermostat	Sats, termostat	1	COLD MARKETS NOT TURBO
0080				92 degrees C	92 grader C		
0100	4	83 89 512	1	1 Kit, thermostat	Sats, termostat	1	
0120				89 degrees C	89 grader C		
0140	4	93 37 551	1	1 Kit, thermostat	Sats, termostat	1	TURBO FOR EU
0142				82 degrees C	82 grader C		
0180	6	83 52 692	1	1 Gasket	Packning	5	
0180	7	83 52 659	1	1 Gasket	Packning	5	
0220	8	80 83 941	2	2 Screw	Skruv	5	
0240	9	80 83 990	1	1 Screw	Skruv	5	
0280	10	80 82 968	2	2 Screw	Skruv	5	
0280	11	80 29 985	5	5 Washer	Bricka	5	
0300	12	88 00 914	1	1 Temperature transmitter	Temperaturgivare	2	
0320				Warming up regulator	Styrtrycksventil	3	EU AND SW
0360	14	83 62 998	1	1 Warming up regulator	Styrtrycksventil	3	-1979 UF AND TURBO FOR EU AND SW
0370	14	83 62 998	1	1 Warming up regulator	Styrtrycksventil	3	-1979 UC
0375				Warming up regulator	Styrtrycksventil	3	1990- US
0380	14	83 63 004	1	1 Warming up regulator	Styrtrycksventil	3	TURBO US
0390	14	83 63 004	1	1 Warming up regulator	Styrtrycksventil	3	1980 TURBO FOR EU AND SW
0400	14	83 69 373	1	1 Warming up regulator	Styrtrycksventil	3	1980 TURBO FOR EU
0405	14	93 14 303	1	1 Warming up regulator	Styrtrycksventil	3	1973
0410	15	93 12 042	1	1 Plug	Plugg	5	1980 TURBO FOR EU
0420	16	75 16 537	2	2 Screw	Skruv	5	1980 TURBO FOR EU
0430	16	93 50 687	2	2 Screw	Skruv	5	FOR CARS WITH PARKING HEATER
0440	17	81 23 747	1	1 Plug	Propp	5	
0480	18	83 65 769	1	1 Gasket	Packning	5	
0470	19	93 07 497	1	1 Drain tap	Kran	5	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

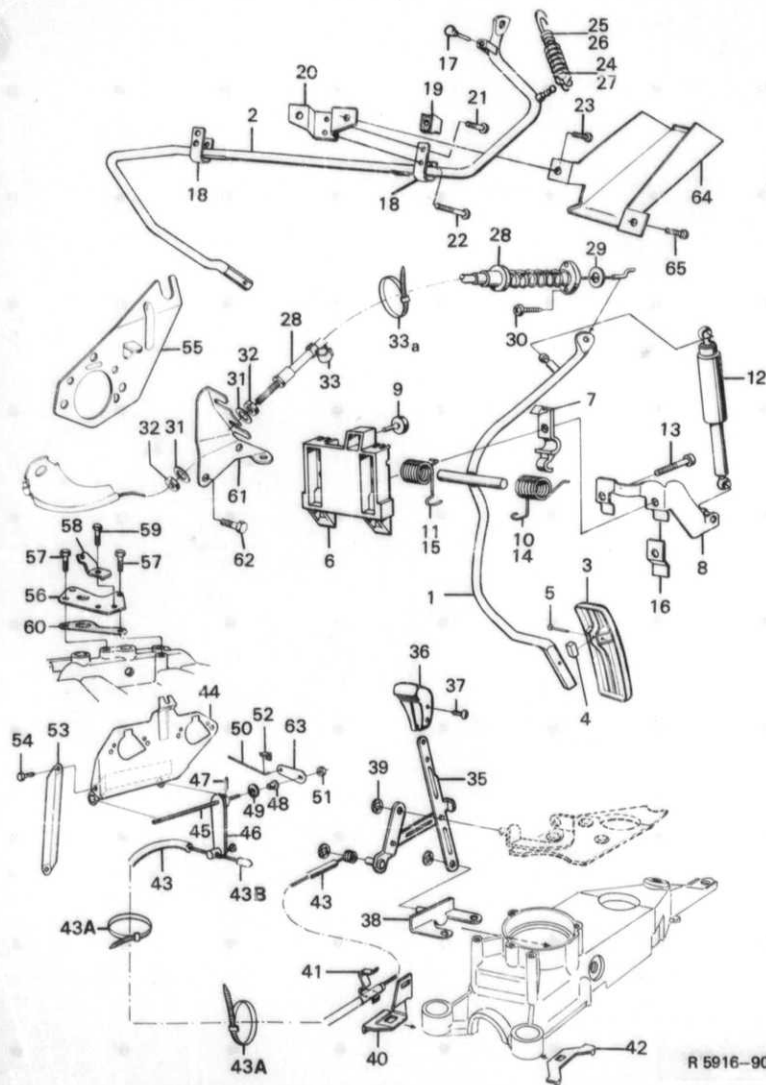

R 5916-900

1800

Engine control
Accelerator control

Motorreglage
Gasreglage

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R5916

2

103


Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0020	1 89 35 652	1		1 Accelerator pedal	Gaspedal	6	
0040	2 89 41 381	1		Accelerator pedal	Gaspedal RHD	6	
0080	3 71 83 965	1		1 Pedal plate accelerator	Platta gaspedal	5	
0100	4 71 83 973	1		1 Shim	Mellanslag	6	
0120	5 79 58 770	1		1 Hollow rivet	Hålnit	6	
0140	6 89 35 389	1		1 Bracket	Konsol	6	
0180	7 89 35 387	2		2 Clamp	Överfall	6	
0200	8 89 40 587	1		1 Damper bracket	Dämparkonsol	6 12), (8935579)	
0220	9 82 06 203	1		1 Rubber plug	Gummiplugg	5	
0240	10 89 41 601	1		1 Spring	Fjäder	5 M	
0260	11 89 41 619	1		1 Spring	Fjäder	5 M	
0280	12 83 81 915	1		1 Throttle control damper	Gasreglagedämpare	5 12)	
0300	13 80 97 833	2		2 Screw	Skruv	5	
0320	14 89 39 480	1		1 Spring	Fjäder	3 A	
0340	15 89 39 438	1		1 Spring	Fjäder	3 A	
0360	16 89 40 587	2		2 Clamp	Bygel	6 13)	
0400	17 70 35 801	1		1 Rubber plug RHD	Gummiplugg RHD	3	
0420	18 89 41 528	2		2 Clamp RHD	Bygel RHD	6	
0440	19 89 41 536	2		2 Support neck RHD	Stödklack RHD	6	
0480	20 89 41 155	1		1 Bracket RHD	Fäste RHD	6	
0480	21 79 22 891	1		1 Screw RHD	Skruv RHD	5	
0500	22 79 22 933	1		1 Screw RHD	Skruv RHD	5	
0520	23 80 59 552	2		2 Screw RHD	Skruv RHD	5	
0540	24 89 41 544	1		1 Spring RHD	Fjäder RHD	5 M	
0560	25 89 41 551	1		1 Spring RHD	Fjäder RHD	5 M	
0580	26 89 41 589	1		1 Spring RHD	Fjäder RHD	5 A	
0600	27 89 41 577	1		1 Spring RHD	Fjäder RHD	5 A	
0620	28 83 35 986	1		1 Wire	Wire	7	
0640	28 83 39 896	1		1 Wire	Wire	3 1A	
0660	29 93 18 142	1		1 Sealing	Tätning	5	
0680	30 79 22 503	2		2 Screw	Skruv	5	
0700	31 79 16 497	2		2 Washer	Bricka	5	
0720	32 80 73 942	2		2 Nut	Mutter	5	
0740	33 83 15 343	1		1 Clamp	Klamma	5	
0760	33A 79 71 864	1		1 Strap	Spännband	5	
0800	35 83 04 916	1		1 Control system	Reglagesystem	3 15/79	
0820	36 83 04 999	1		1 Knob	Knapp	3 1980-	
0830	36 83 31 323	1		1 Knob	Knapp	3 1980-	
0840	37 79 22 208	2		2 Screw	Skruv	5	
0880	38 93 16 274	1		1 Bracket	Fäste	6	
0880	39 93 23 098	3		3 Clip	Clips	4	
0900	40 93 25 846	1		1 Adjustment washer	Justerbricka	5	
0920	41 83 52 395	1		1 Clip	Clips	5	
0940	42 93 16 225	1		1 Adjustment washer	Justerbricka	5	
0960	43 83 04 940	1		1 Cold start wire	Kallstartwire	3	
0970	43A 79 71 880	2		2 Strap	Spännband	4 C T	
0975	43B 93 26 687	1		1 Hood	Huv	5	
0980	44 83 25 565	1		1 Bracket	Konsol	6 T	
1000	45 93 16 828	1		1 Shaft	Axel	5 -1979 T, (8316365)	
1010	45 93 16 828	1		1 Shaft assy	Axel kpl	5 1980- T	
1020	46 93 16 828	1		1 Lever	Hävarm	5 -1979 T, (8216357)	
1040	47 79 56 055	1		1 Pin-spring	Rörpinne	5 -1979 T	
1060	48 83 22 109	2		2 Bushing	Bussning	5 T	
1080	49 79 33 518	2		2 Grommet	Genomföringsbussning	5 T	
1100	50 83 22 133	2		2 Stay	Stag	6 T	
1120	51 80 29 555	2		2 Nut	Mutter	5 T	
1140	52 83 22 331	2		2 Clip	Clips	5 T	
1160	53 83 50 746	1		1 Stay	Stag	5 T	

12. Ch -90791018952 -90792000891. SEE SI section 271-
13. Ch 90791018953 -90792000892-

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	2-F02
	Instruments	2-J02
4	Transmission	3-A02
5	Brakes	
6	Front assembly,	3-B02
	Steering	
7	Suspension,	3-C02
	Wheels	3-D02
8	Body	
9	Accessories,	3-L02
	Labels	
10	Numerical	4-A02
	register	

2 GROUP INDEX

Engine body	2-A06
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

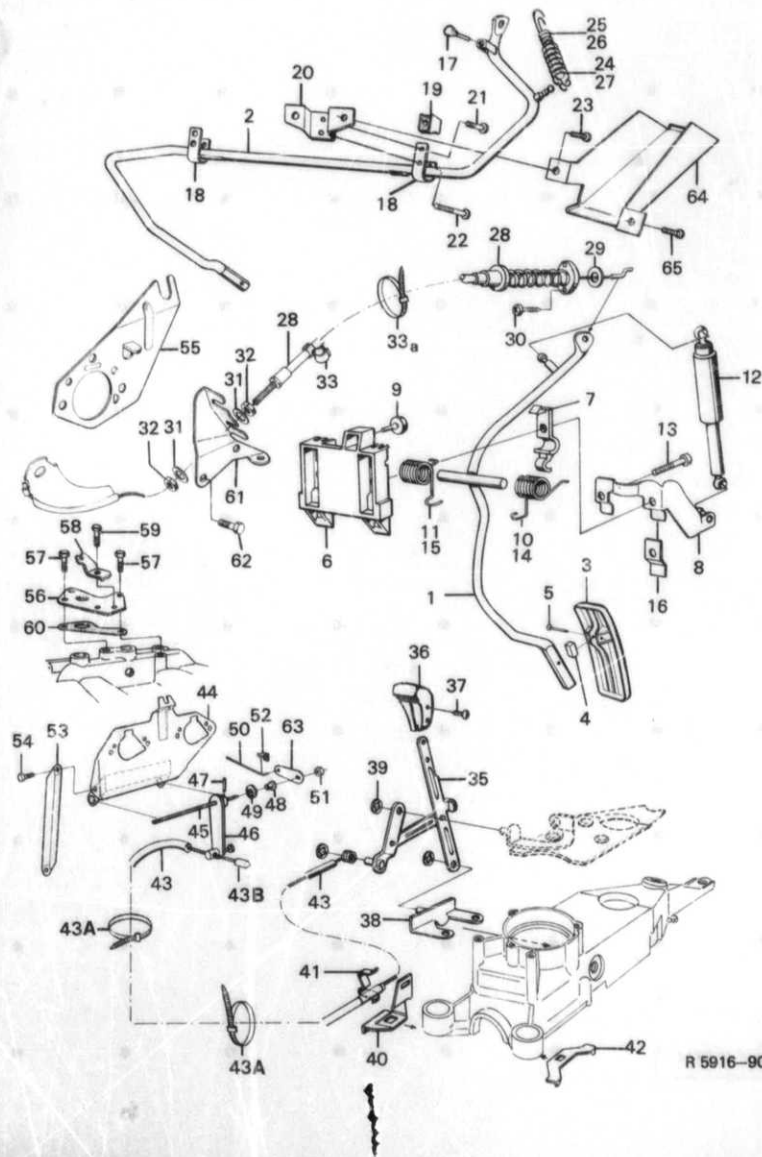

R 5916-900

1800

Engine control
Accelerator control

Motorreglage
Gasreglage

Date
Datum
1987-10

Illustration
Bild nr
R5916

Group
Grupp
2

Page
Sida
105

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	KS SR / L	Notes Anmärkning
		900	US				
1180	54	80 82 919	1	Screw	Skruv	5	T
1200	55	83 15 608	1	Bracket	Hållare	8	
1220	56	83 83 194	1	Bracket	Konsol	6	TA EGR
1240	57	80 19 903	2	Screw	Skruv	5	TA EGR
1260	58	83 83 186	1	Bracket	Fäste	6	TA EGR
1280	59	80 19 887	1	Screw	Skruv	5	TA EGR
1300	60	83 61 115	1	Gasket	Packning	5	TA EGR
1320	61	75 00 846	1	Bracket	Fäste	6	I, (8360067)
1340	62	80 19 895	2	Screw	Skruv	5	
1360	63	83 22 125	2	Lever	Hävarm	6	T
1380	64	89 43 391	1	Protective plate RHD	Skyddsplåt RHD	6	
1400	65	79 22 420	1	Screw	Skruv	5	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

1850

Supercharging system
Turbocharger, inlet tube
pressure tube etc

Överladdningssystem
Turbokompressor, in-
loppsrör, tryckrör etc

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10 R5207

2



107

Fig. Pos.	Part No Art nr	Quantity/Amount 900	Description US	Benämning	K/S SR / L	Notes Anmärkning
0020	1 83 66 197	1	1 Turbocharger assy	Turbokompressor kpl	4	
0040	2 27 39 583	2	2 Stud	Pinnskruv	5	
0060	3 83 66 213	2	2 Stud	Pinnskruv	5	
0080	4 83 66 282	1	1 Gasket	Packning	2	
0100	5 80 84 139	3	3 Screw	Skruv	5	
0120	6 80 84 154	1	1 Screw	Skruv	5	
0140	7 80 29 779	4	4 Nut	Mutter	5	
0160	8 80 73 108	8	8 Washer	Bricka	5	
0165	9 75 13 682	1	1 Stay	Stag	6	1980- M, (9326840)
0170	9 75 13 674	1	1 Stay	Stag	6	1980- A, (9329533)
0180	12 93 02 738	1	1 Inlet tube	Inloppsrör	5	
0200	13 83 30 920	1	1 Hose	Slang	2	
0220	14 79 70 148	3	3 Hose clamp	Slangklämma	5	(7963606)
0240	15 83 66 395	1	1 Pressure tube	Tryckrör	6	
0260	16 83 67 187	1	1 Hose	Slang	2	
0280	17 79 70 155	2	2 Hose clamp	Slangklämma	5	(7963614)
0300	18 83 67 179	1	1 Hose	Slang	2	
0320	19 79 70 183	2	2 Hose clamp	Slangklämma	5	(7963598)
0340	22 93 11 598	1	1 Lock plate	Låsbleck	3	
0360	23 81 29 876	1	1 Screw	Skruv	5	(8367492)
0400	34 83 39 020	1	1 Heat protector	Värmesköld	3	
0420	35 79 22 206	2	2 Screw	Skruv	5	
0440	36 80 73 090	2	2 Washer	Bricka	5	
0460	37 84 26 264	2	2 Clip	Clip	5	
0480	38 80 29 555	2	2 Nut	Mutter	5	
0500	39 80 29 951	2	2 Washer	Bricka	5	
0510	40 93 62 419	1	1 Label	Etikett	5	SWEDISH TEXT
0520	40 93 62 427	1	1 Label	Etikett	5	ENGLISH TEXT
0530	40 93 62 435	1	1 Label	Etikett	5	GERMAN TEXT
0540	40 93 62 443	1	1 Label	Etikett	5	FINNISH TEXT
0550	40 93 62 450	1	1 Label	Etikett	5	FRENCH TEXT
0560	40 93 62 468	1	1 Label	Etikett	5	ITALIAN TEXT
0570	40 93 69 364	1	1 Label	Etikett	5	SPANISH TEXT
0580	88 17 272	X	X Gasket set	Packningssats	2	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A08
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E08
Supercharging system	2-E12

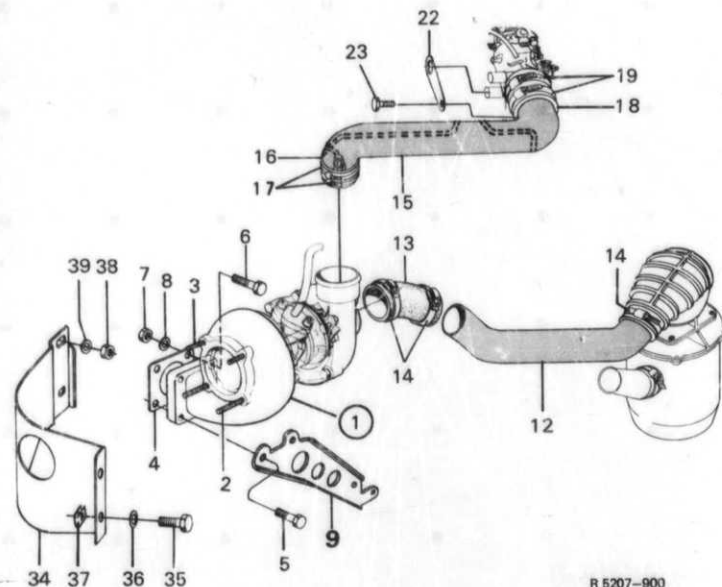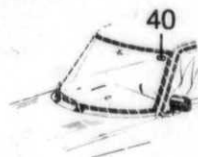

R 5207-900

1900

Super charging system
Charge pressure regula-
tor, bellow pipe, etc

Överladdningssystem
Tryckregulator,
bälgrör, etc

Date
Datum

Illustration
Bild nr


Group
Grupp

Page
Sida

1987-10 R5917

2

109

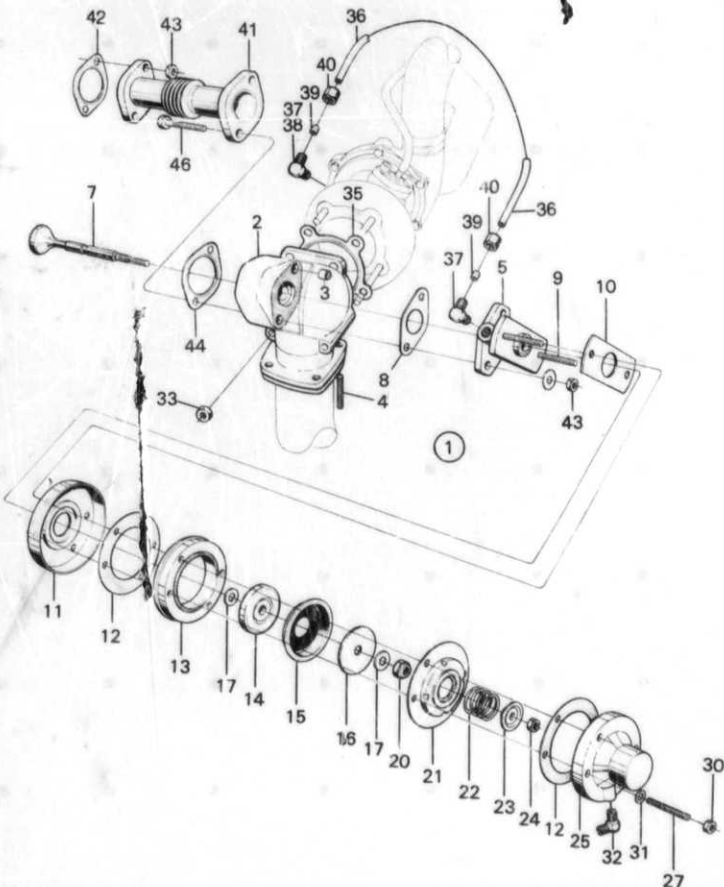

R 5917-900

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R L	Notes Anmärkning
		900	US				
0100	1 93 11 010	1		Charge pressure regu- lator assy	Tryckregulator kpl	4	EU
0120							
0140	1 93 11 028	1		Charge pressure regu- lator assy	Tryckregulator kpl	4	US
0160							
0180	2 93 07 471	1		1. Valve housing assy	Ventilhus kpl	4	
0200	3 83 67 864	2		2. Sleeve	Hylsa	4	
0220	4 83 67 856	4		4. Stud	Pinnskruv	5	
0240	5 83 69 068	1		1. Bearing house assy	Lagerhus kpl	4	
0260	7 93 07 538	1		1. Valve	Ventil	4	
0300	8 83 66 288	1		1. Gasket	Packning	4	
0320	9 80 95 820	2		2. Stud	Pinnskruv	5	
0360	10 83 69 019	1		1. Gasket	Packning	2	
0380	11 83 69 001	1		1. Heat guard	Värmesköld	5	
0420	12 93 11 929	2		2. Gasket	Packning	2	
0440	13 93 11 903	1		1. Intermediate ring	Mellanring	2	
0460	14 83 69 043	1		1. Diaphragm washer	Membranbricka	3	
0500	15 83 68 967	1		1. Diaphragm	Membran	2	
0520	16 93 08 412	1		1. Diaphragm washer	Membranbricka	3	
0540	17 80 29 985	2		2. Washer	Bricka	5	
0560	20 83 67 344	1		1. Nut	Mutter	5	
0580	21 93 11 911	1		1. Spring seating	Fjäderstöd	4	
0600	22 93 05 749	1		1. Spring	Fjäder	3	PART OF 93 11 010
0620	22 93 07 448	1		1. Spring	Fjäder	3	PART OF 93 11 028
0640	23 93 05 723	1		1. Spring seating	Fjäderstöd	5	
0660	24 26 02 936	1		1. Nut	Mutter	5	
0700	25 83 68 953	1		1. Cover	Lock	5	-1979
0710	25 93 11 200	1		1. Cover	Lock	5	1980-
0720	27 80 21 727	3		3. Screw	Skruv	5	-1979
0740	27 80 27 740	1		1. Screw	Skruv	5	-1979
0750	27 80 00 143	2		2. Screw	Skruv	5	1980-
0760	30 80 29 548	6		6. Nut	Mutter	5	-1979
0770	30 80 29 548	4		4. Nut	Mutter	5	1980-
0780	31 80 29 944	10		10. Washer	Bricka	5	-1979
0800	31 80 29 944	4		4. Washer	Bricka	5	1980-
0820	32 83 69 159	1		1. Nipple	Nippel	3	
0840	33 93 08 820	4		4. Nut	Mutter	3	
0880	35 93 07 000	1		1. Gasket	Packning	2	
0900	36 93 07 430	1		1. Pressure pipe	Tryckrör	3	
0910	37 83 67 435	2		2. Nipple	Nippel	3	-1979
0920	37 83 67 435	1		1. Nipple	Nippel	3	1980-
0930	38 93 14 493	1		1. Nipple	Nippel	3	1980-
0940	39 83 68 508	2		2. Cutting ring	Skärring	3	
0960	40 83 68 482	2		2. Nut	Mutter	2	
0980	41 93 09 527	1		1. Bellow	Bälgrör	3	
1000	42 83 66 924	1		1. Gasket	Packning	4	
1040	43 93 08 820	4		4. Nut	Mutter	3	
1060	44 83 66 916	1		1. Gasket	Packning	4	
1100	46 83 67 443	2		2. Screw	Skruv	5	
1140	93 01 706	X		X Seal, wastgate	Plomb, tryckregulator	2	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

2 GROUP INDEX

Engine body	2-A06
Lubrication system	2-B02
Fuel system	2-B06
Inlet and exhaust system	2-C16
Cooling system	2-D20
Engine control	2-E06
Supercharging system	2-E12



Elektriskt system, Instrument
Electrical system, Instruments
Elektrisches system, Instrumente
Équipement électrique, Instruments
Sistema eléctrico, Instrumentos

SAAB
genuine parts
original reservdelar

2-F02

SAAB 900
M75-80

Electrical system	Elektriskt system	Date Datum	Group Grupp	Page Sida
		1987-10	3	1

TABLE OF CONTENTS

Battery and battery cables	3:7	2-F08
Alternator and charging regulator, Bosch	3:9	2-F10
Alternator and charging regulator, Motorola	3:11	2-F12
Starter	3:13	2-F14
Ignition system		
Ignition coil, cables, spark plugs	3:15	2-F16
Distributor Bosch	3:17	2-F18
Distributor Bosch, breakerless system	3:19	2-F20
Lighting		
Headlights	3:21	2-F22
Headlights, US	3:23	2-F24
Direction indic/parking lights	3:25	2-G02
Tail light, license plate light -1979	3:27	2-G04
Tail light, license plate light 1980-	3:29	2-G06
Other lights, loudspeakers	3:31	2-G08
Electrical equipment, other		
Signal horn	3:33	2-G10
Signal button, upholstery etc	3:35	2-G12
Windshield wipers	3:37	2-G14
Headlight wipers	3:39	2-G16
Windshield- and headlight wipers	3:41	2-G18
Switches	3:43	2-G20
Control switches	3:45	2-G22
Wiring and fuses		
Wiring	3:49	2-H02
Connectors, cable terminals etc	3:57	2-H10
Replacement cable terminals	3:73	2-I02
Fuse box, fuses	3:85	2-I14
Instruments	3:87	2-I16

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

Page Sida	Group Grupp	Date Datum	Electrical system	Elektriskt system
2	3	1987-10		
INNEHÅLLSFÖRTECKNING				
0700			Batteri och batterikablar	3:7 2-F08
0720			Generator och laddningsregulator, Bosch	3:9 2-F10
0740			Generator och laddningsregulator, Motorola	3:11 2-F12
0750			Startmotor	3:13 2-F14
0760			Tändsystem	
0780			Tändspole, tändkablar, tändstift	3:15 2-F16
0800			Tändfordelare Bosch	3:17 2-F18
0820			Tändfordelare Bosch, brytarlöst system	3:19 2-F20
0840			Belysning	
0860			Strålkastare	3:21 2-F22
0880			Strålkastare, US	3:23 2-F24
0900			Blink- och parkerlykta	3:25 2-G02
0920			Baklykta, nummerplåtbelysning - 1979	3:27 2-G04
0940			Baklykta, nummerplåtbelysning 1980-	3:29 2-G06
0960			Övrig belysning, hogtalare	3:31 2-G08
0980			Övrig elektrisk utrustning	
1000			Signalhorn	3:33 2-G10
1020			Signalkontakt, stötskydd etc	3:35 2-G12
1040			Vindrutetorkare	3:37 2-G14
1060			Strålkastartorkare	3:39 2-G16
1080			Vindrute- och strålkastarspolare	3:41 2-G18
1100			Strömställare	3:43 2-G20
1120			Manöverdon	3:45 2-G22
1140			Ledningar och säkringar	
1160			Ledningar	3:47 2-H02
1180			Kontaktus, ledningskor etc	3:57 2-H10
1200			Kompletteringskabelkor	3:73 2-I02
1220			Säkringsdosa, säkringar	3:85 2-I14
1240			Instrument	3:87 2-I16

Electrical system	Elektriskt system	Date Datum	Group Grupp	Page Sida
		1987-10	3	3
INHALTSVERZEICHNIS				
Batterie, Batterieleitungen	3:7 2-F08			
Lichtmaschine, Reglerschalter, Bosch	3:9 2-F10			
Lichtmaschine, Reglerschalter, Motorola	3:11 2-F12			
Anlasser	3:13 2-F14			
Zündsystem				
Zündspole, Zündkabeln, Zündkerzen	3:15 2-F16			
Zündverteiler Bosch	3:17 2-F18			
Zündverteiler Bosch, Kontaktlose Zündanlage	3:19 2-F20			
Beleuchtung				
Scheinwerfer	3:21 2-F22			
Scheinwerfer, US	3:23 2-F24			
Blink- und Parkerleuchte	3:25 2-G02			
Schlussleuchte, Kennzeichenleuchte - 1979	3:27 2-G04			
Schlussleuchte, Kennzeichenleuchte 1980-	3:29 2-G06			
Übrige Beleuchtung, Lautsprecher	3:31 2-G08			
Sonstige elektrisch Ausrüstung				
Signalhupe	3:33 2-G10			
Signalkontakte, Strasse dämpfer usw	3:35 2-G12			
Scheibenwischer	3:37 2-G14			
Scheinwerferwischer	3:39 2-G16			
Scheibenwascher - Scheinwerferwascher	3:41 2-G18			
Ausschalter	3:43 2-G20			
Steuergerät	3:45 2-G22			
Leitungen und Sicherungen				
Leitungen	3:47 2-H02			
Kontaktgehäuse, Kabelverbinder usw	3:57 2-H10			
Ersetzen Kabelschue	3:73 2-I02			
Sicherungsdose, sicherungen	3:85 2-I14			
Instrumente	3:87 2-I16			

0	General	1-A32
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-H02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02


3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

0050

Page Sida	Group Grupp	Date Datum	Electrical system	Elektriskt system
4	3	1987-10		
TABLE DES MATIERES				
			Batterie et câbles de batterie	3:7 2-F08
			Alternateur et régulateur de charge, Bosch	3:9 2-F10
			Alternateur et régulateur de charge, Motorola	3:11 2-F12
			Démarrreur	3:13 2-F14
			Système d'allumage	
			Bobine, câbles, bougies	3:15 2-F16
			Distributeur d'allumage, Bosch	3:17 2-F18
			Allumeur, Bosch, système sans rupteur	3:19 2-F20
			Eclairage	
			Phares	3:21 2-F22
			Phares, US	3:23 2-F24
			Clignotant/feu stationnement	3:25 2-G02
			Lanterne AR, éclairage plaque de police -1979	3:27 2-G04
			Lanterne AR, éclairage plaque de police 1980-	3:29 2-G06
			Autre éclairage, haut parleur	3:31 2-G08
			Autre équipement électrique	
			Avertisseur sonore	3:33 2-G10
			Contact d'avertisseur, rembourrage, etc	3:35 2-G12
			Essuie-glace	3:37 2-G14
			Essuie-phares	3:39 2-G16
			Lave-glace et lave-phares	3:41 2-G18
			Contacts	3:43 2-G20
			Dispositifs de commande	3:45 2-G22
			Conduites et fusibles	
			Conduites	3:49 2-H02
			Connecteurs, coses de cable etc	3:57 2-H10
			Cosses de cable AMP	3:73 2-I02
			Boite à fusibles, fusibles	3:85 2-I14
			Instruments	3:87 2-I16

Electrical system	Elektriskt system	Date Datum	Group Grupp	Page Sida
		1987-10	3	5
SUMARIO				
	Bateria y cables de batería	3:7	2-F08	
	Alternador y regulador de tensión, Bosch	3:9	2-F10	
	Alternador y regulador de tensión, Motorola	3:11	2-F12	
	Motor de arranque	3:13	2-F14	
	Sistema de encendido			
	Bobina, cables, bujías	3:15	2-F16	
	Distribuidor de encendido Bosch	3:17	2-F18	
	Distribuidor, Bosch, sistema sin ruptor	3:19	2-F20	
	Alumbrado			
	Faros	3:21	2-F22	
	Faros, EE UU	3:23	2-F24	
	Intermitente/luz aparcamiento	3:25	2-G02	
	Luz de cola, de matrícula -1979	3:27	2-G04	
	Luz de cola, de matrícula 1980-	3:29	2-G06	
	Otro alumbrado, altavoz	3:31	2-G08	
	Otro equipo eléctrico			
	Señal acústica	3:33	2-G10	
	Contacto de señal acústica, acolchado etc	3:35	2-G12	
	Limpiaaparabrisas	3:37	2-G14	
	Limpia cristales de faro	3:39	2-G16	
	Lavaaparabrisas y lavacristales de faro	3:41	2-G18	
	Contacts	3:43	2-G20	
	Dispositivos de mando	3:45	2-G22	
	Conductos y fusibles			
	Conductos	3:49	2-H02	
	Contactores, terminales de cable	3:57	2-H10	
	Terminales de cable AMP	3:73	2-I02	
	Caja de fusibles, fusibles	3:85	2-I14	
	Instrumentos	3:87	2-I16	

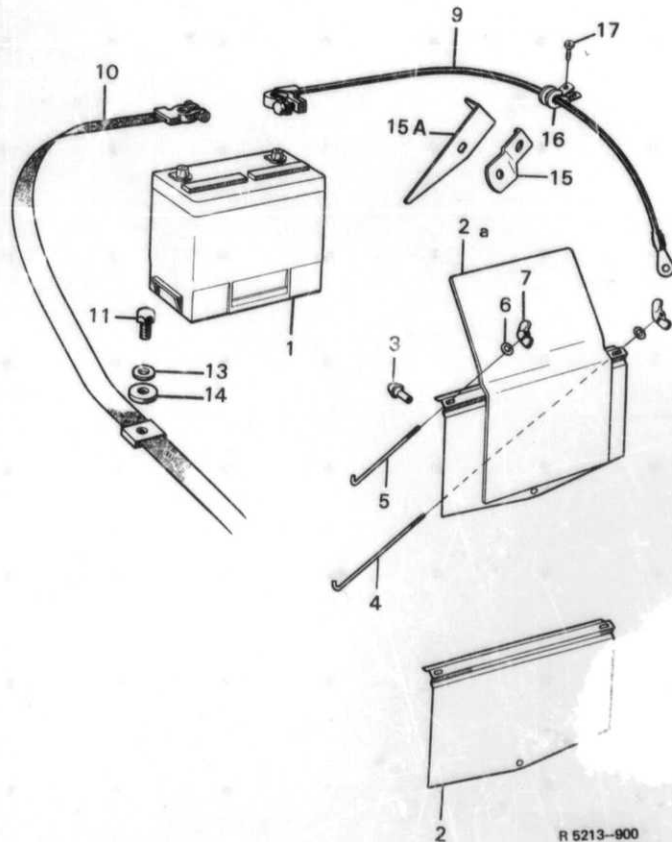

R 5213--900

0103

Battery and battery cables

Batterioch batterikablar

Date
Datum
1987-

Illustration	Bild nr
0	R5213


n	Group Grupp
---	----------------

Page
Sida
3 7

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S SR /L	Notes Anmärkning
		900		US				
0020	1	85 79 245	1		Battery	Batteri		
0060	1	85 44 330	1	1	Battery	Batteri		US AND TURBO
0080	2	85 51 582	1	1	Heat guard	Strålningskydd	5	
0090	2A	85 66 325	1	1	Heat guard	Strålningskydd	5	TURBO
0100	3	71 13 970	1	1	.Buffer	.Buffert	5	
0120	4	85 51 616	1	1	Hook, rear	Hake, bakre	5	
0140	* 5	85 72 745	1	1	Hook, front	Hake, främre	5	
0160	6	79 15 564	2	2	Washer	Bricks	5	
0180	7	79 20 460	2	2	Wing nut	Vingnutter	5	
0220	9	85 52 614	1	1	Cable +	Kabel +	5	
0250	9	85 66 168	1	1	Cable +	Kabel +	5	US AND TURBO
0260	* 10	85 94 152	1	1	Earth cable	Jordkabel	4	-1979
0270	10	85 66 382	1	1	Earth cable	Jordkabel	4	1980-
0280	11	85 84 696	1	1	Screw	Skruv	5	
0320	13	85 84 674	1	1	Washer	Bricks	5	
0340	14	85 84 682	1	1	Washer	Bricks	5	
0360	15	85 52 630	1	1	Retainer	Hållare	5	
0370	15A	85 85 996	1	1	Retainer	Hållare	5	
0420	16	85 66 135	1	1	Clamp	Klamma	5	
0440	16	85 66 143	1	1	Clamp	Klamma	5	AC
0460	17	80 19 929	1	1	Screw	Skruv	5	

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

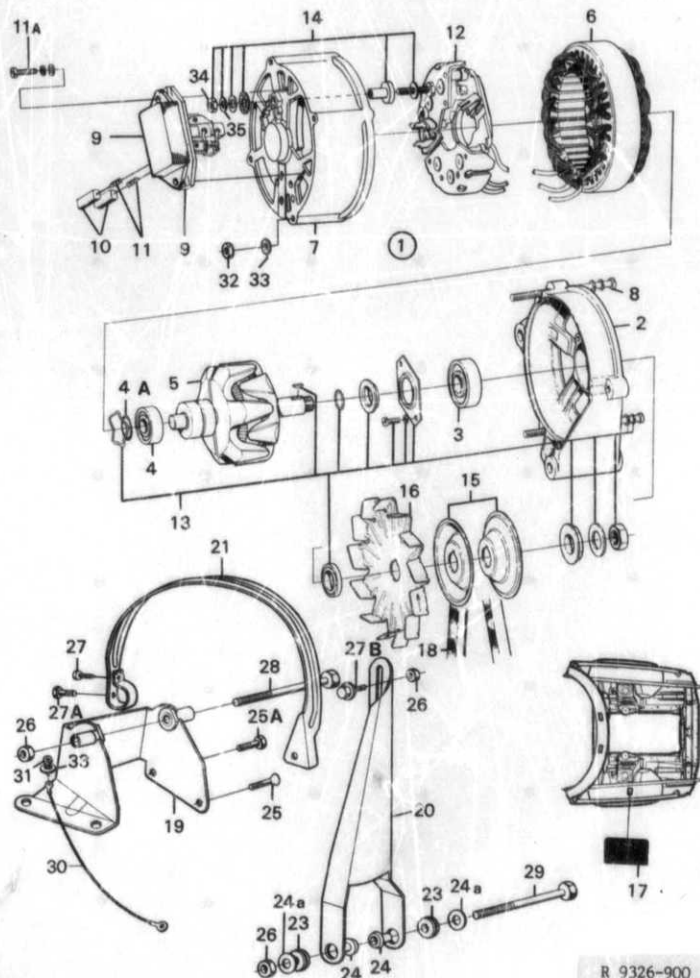

R 9326-900

SAAB
genuine parts
original reservdelar

2-F10

SAAB 900
M79-80

MASTER INDEX

0150

Alternator, Bosch

Generator, Bosch

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R9326

3

9

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR	Notes Anmärkning
		000	US				
0020	1 85 57 448	1		Alternator assy 55A	Generator kpi 55A	5	
0040	1 85 57 456	1		Alternator assy 65A	Generator kpi 65A	5	
0060	2 85 59 791	1		Drive end with bearing	Drivlager	6	PART OF 85 57 440
0100	2 85 59 841	1		Drive end with bearing	Drivlager	6	PART OF 85 57 456
0120							
0140	3 78 48 088	1		Bearing	Kullager	3	
0160	4 85 72 034	1		Bearing	Kullager	6	
0180	4A 85 85 590	1		O-ring	O-ring	4	
0180	5 85 59 809	1		Rotor	Rotor	6	PART OF 8557449
0200	5 85 59 858	1		Rotor	Rotor	6	PART OF 8557456
0220	6 85 50 048	1		Stator	Stator	6	PART OF 8557449
0240	6 85 58 470	1		Stator	Stator	6	PART OF 8557456
0260	7 85 59 817	1		Slip ring bearing	Släpplingslager	6	PART OF 8557449
0280	7 85 59 868	1		Slip ring bearing	Släpplingslager	6	PART OF 8557456
0300	8 85 59 833	4		Screw	Skruv	2	
0320	9 85 59 577	1		Charging regulator	Laddningsregulator	2	PART OF 8557449
0340	9 85 59 585	1		Charging regulator	Laddningsregulator	2	PART OF 8557456
0360	10 85 50 097	1		Brush set	Borstsats	3	
0380	11 85 50 105	2		Spring	Fjäder	6	
0390	11A 85 71 986	2		Screw	Skruv	5	
0400	12 85 71 903	1		Rectifier unit	Likriktarenhet	6	PART OF 8557449
0420	12 85 71 903	1		Rectifier unit	Likriktarenhet	6	PART OF 8557456
0440	13 85 72 653	1		Part kit rotor	Delsats rotor	6	
0460	14 85 51 073	1		Part kit connec- tion B	Delsats anslutning B	5	
0480	15 85 59 783	1		Belt pulley	Remskiva	5	
0500	16 85 50 147	1		Fan disc	Fläktskiva	6	
0540	17 85 06 941	1		Warning label Swedish - English	Varningsetikett	5	
0560	17 85 06 925	1		Warning label Swedish - Finnish	Varningsetikett	5	
0600	18 83 84 927	1		Swedish - Finnish	Svensk - Finsk	1	
0620	18 83 05 293	1		V-belt	Kilrem	4	
0660	20 83 05 368	1		Bracket	Fäste	5	
0700	21 83 39 640	1		Bar	Stag	5	
0740	23 93 05 376	2		Cover	Skydd	4	
0760	24 93 05 384	2		Bushing	Bussning	4	
0770	24A 73 11 772	2		Sleeve	Hylsa	4	
0780	25 93 05 392	1		Washer	Bricka	5	
0790	25A 90 84 006	1		Screw	Skruv	5	
0800	26 80 74 106	1		Screw	Skruv	5	
0820	27 79 22 891	1		Nut	Mutter	5	
0825	27A 79 22 836	1		Screw	Skruv	5	
0830	27B 79 70 015	1		Screw	Skruv	5	
0840	28 80 84 071	1		Screw	Skruv	5	
0860	29 80 83 081	1		Screw	Skruv	5	
0880	30 85 53 448	1		Grounding cable	Jordkabel	6	
0900	31 80 19 705	1		Screw	Skruv	5	
0920	32 80 29 548	1		Nut	Mutter	5	
0940	33 79 33 815	2		Washer	Bricka	5	
0960	34 80 29 555	1		Nut	Mutter	5	
0980	35 79 10 540	1		Washer	Bricka	5	
1000	85 50 121	1		Mounting kit, fan disc -belt pulley	Monteringsatts, fläktskiva-remskiva	6	
1020							

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02
3 GROUP INDEX		
	Battery	2-F08
	Ignition system	2-F16
	Lighting	2-F22
	Electrical equipment, other	2-G10
	Wiring and fuses	2-H02

0200

Alternator, Motorola

Generator, Motorola

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1987-10 R9327

3

11

Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S S/R	Notes Anmärkning
		900	US			
0020	1 85 57 043	1	1 Alternator assy	Generator kpl.	5	
0040	2 85 59 688	1	1 End shield, rear	Lagersköld, bakre	6	
0060	3 85 52 405	1	1 Bearing, rear	Lager, bakre	6	
0080	4 85 59 684	1	1 End shield, front	Lagersköld, främre	6	
0100	5 85 52 531	1	1 Bearing, front	Lager, främre	3	
0120	6 85 59 650	1	1 Stator	Stator	6	
0140	7 85 59 635	1	1 Rotor	Rotor	6	
0160	8 85 59 627	1	1 Diode plate	Diodplatta	6	
0180	9 85 59 619	1	1 Charging regulator	Laddningsregulator	2	
0200	10 85 52 432	1	1 Brush unit, set	Borsthållare sats	4	
0220	11 85 59 676	1	1 O-ring	O-ring	6	
0240	12 85 52 556	1	1 Fan disc	Fläktskiva	6	
0260	13 85 59 692	1	1 Belt pulley	Remskiva	5	
0280	14 85 59 643	1	1 Spacer	Distans	4	
0300	15 85 52 572	1	1 Mounting parts,	Monteringsdetaljer,	6	
0320			fan	fläkt		
0340	17 85 06 941	1	1 Warning label,	Varningsetikett,	5	
0360			Swedish- English	Svensk- Engelsk		
0380	17 85 06 925	1	1 Warning label,	Varningsetikett,	5	
0400			Swedish- Finish	Svensk- Finsk		
0420	18 83 84 927	1	1 V-belt	Kilrem	1	
0440	19 93 05 293	1	1 Bracket	Fäste	4	
0460	20 93 05 368	1	1 Bar	Stag	5	
0480	21 83 39 640	1	1 Cover	Skydd	5	
0500	23 93 05 376	2	2 Bushing	Bussning	4	
0540	24 93 05 304	2	2 Sleeve	Hylsa	4	
0550	24A 73 11 772	2	2 Washer	Bricka	5	
0560	25 93 05 392	1	1 Screw	Skruv	5	
0570	25A 80 84 006	1	1 Screw	Skruv	5	
0580	26 80 74 106	3	3 Nut	Mutter	5	
0600	27 79 22 891	1	1 Screw	Skruv	5	
0605	27A 79 22 836	1	1 Screw	Skruv	5	
0610	27B 79 70 015	1	1 Screw	Skruv	5	
0620	28 80 94 071	1	1 Screw	Skruv	5	
0640	29 80 83 081	1	1 Screw	Skruv	5	
0660	30 85 53 448	1	1 Grounding cable	Jordkabel	6	
0680	31 80 19 705	1	1 Screw	Skruv	5	
0700	32 80 29 548	1	1 Nut	Mutter	5	
0720	33 79 33 815	2	2 Washer	Bricka	5	
0740	34 80 29 555	1	1 Nut	Mutter	5	
0760	35 79 10 540	1	1 Washer	Bricka	5	


R 9327-900

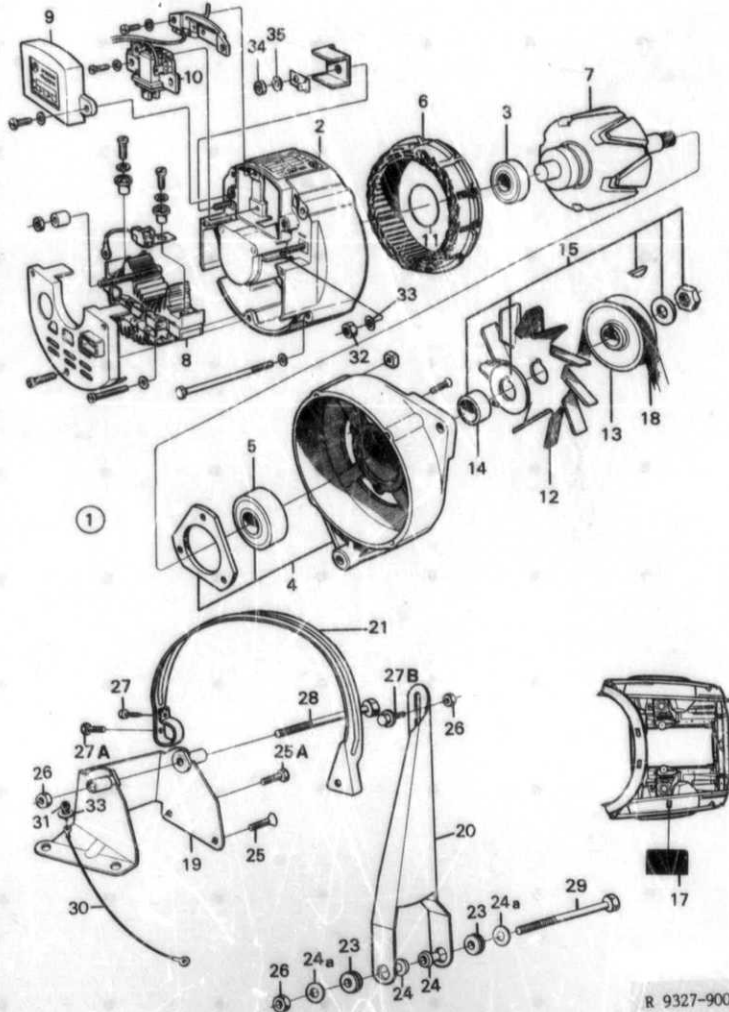

0 General	1-A02
1 Tools	1-H02
2 Engine	2-A02
3 Electrical system, Instruments	2-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly, Steering	3-B02
7 Suspension, Wheels	3-C02
8 Body	3-D02
9 Accessories, Labels	3-L02
10 Numerical registor	4-A02
3 GROUP INDEX	
Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

0250

Starter		Startmotor		Date Datum	Illustration Bild nr	Group Grupp	Page Sida
				1987-10	R3736	3	13
Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K S R	Notes Anmärkning
		900	US				
0070	1 83 19 618	1		1 Starter assy	Startmotor kpl	5	BOSCH 0 001 311 108
0040	2 93 23 833	1		1 Drive end bracket assy	..Drevhus kpl	6	
0060	3 83 22 216	1		1 ..Bearing bushing	..Lagerbussning	3	
0100	4 83 22 224	1		1 ..Field winding	..Fältindning	6	
0120	5 93 23 841	4		4 ..Screw	..Skruv	5	
0140	6 83 23 858	1		1 ..Brush plate	..Borstplatta	6	
0180	7 93 20 789	1		1 ..Brush set	..Borstsets	6	
0180	8 93 23 874	4		4 ..Brush spring	..Borsttjäder	6	
0200	9 93 23 882	1		1 Commutator bearing assy	..Kommutatorlager	6	
0220	10 93 23 890	1		1 ..Bearing bushing	..Lagerbussning	3	
0240	11 78 54 912	1		1 ..Cover cap	..Kapsel	6	
0280	11 78 54 912	1		1 ..Screw	..Skruv	5	
0300	13 83 04 875	1		2 ..Screw	..Skruv	5	
0320	14 83 22 273	2		2 ..Washer	..Bricka	5	
0346	15 83 88 589	2		1 Rotor	..Rotor	5	
0360	16 83 22 281	1		1 Starter drive assy	..Startmotordrev kpl	3	
0380	17 83 32 934	1		2 ..Bearing bushing	..Lagerbussning	5	
0400	18 93 23 916	2		1 ..Screw	..Skruv	5	
0420	19 83 04 941	1		1 ..Bricka	..Bricka	5	
0440	20 79 89 975	1		1 Nut	..Mutter	5	
0460	21 80 29 555	1		1 Engaging lever arm	..Kopplingsarm	6	
0480	22 83 22 307	1		1 Starter solenoid	..Manövermagnet	3	
0500	23 83 22 315	1		1 Washer	..Bricka	5	
0520	24 79 10 557	1		1 Nut	..Mutter	5	
0540	25 80 73 942	1		2 ..Screw	..Skruv	5	
0560	26 83 22 323	2		1 Set of washers	..Bricksats	6	
0580	27 83 89 942	1		1 Nut	..Mutter	5	
0600	28 80 74 106	1		1 Washer	..Bricka	5	
0620	29 79 10 557	1		2 Screw	..Skruv	5	
0660	30 79 62 624	2		2 Nut	..Mutter	5	
0680	31 79 14 716	2		1 Clip	..Clip	5	
0700	32 85 02 728	1		2 Washer	..Bricka	5	
0720	33 79 33 858	2		1 Washer	..Bricka	5	
0740	34 85 06 602	1		1 Gasket set	..Packningssats	5	
0760	83 89 959	1					

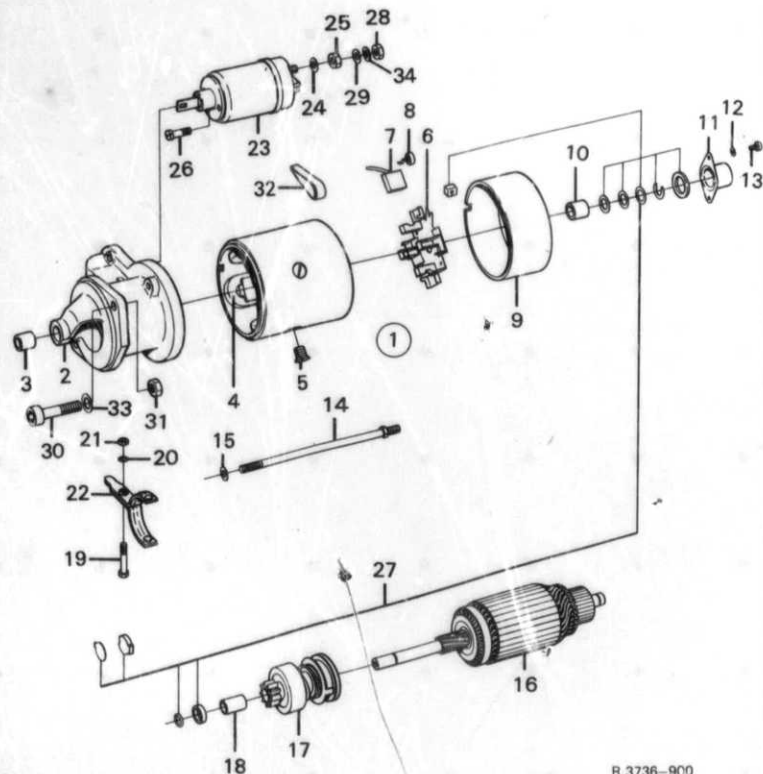

R 3736-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

0300

Ignition system

Ignition coil, cables,
spark plugs

Tändsystem

Tändspole, kablar,
tändstift

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1987-10

R4697

3

15


Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S S/R	Notes Anmärkning
		900	US			
0020	1 85 22 328	1	Ignition coil	Tändspole	4	
0040	1 85 39 835	1	Ignition coil	Tändspole	4	BREAKERLESS SYSTEM
0060	2 85 98 374	1	Cover	Skydd	4	BREAKERLESS SYSTEM
0080	3 85 52 598	1	Bracket	Fäste	5	
0100	4 80 19 945	1	Screw	Skruv	5	
0140	5 93 25 457	1	Ignition cable, distributor-coil	Tändkabel, fördelare-spole	3	TURBO
0160	5 93 25 465	1	Ignition cable, distributor-coil	Tändkabel, fördelare-spole	3	TURBO
0200	6 83 63 947	2	Ignition cable, cyl 1 and 2	Tändkabel cyl 1 och 2	3	
0220	6 83 69 845	2	Ignition cable, cyl 1 and 2	Tändkabel cyl 1 och 2	3	TURBO
0240	7 83 63 954	2	Ignition cable, cyl 3 and 4	Tändkabel cyl 3 och 4	3	
0260	7 83 69 852	2	Ignition cable, cyl 3 and 4	Tändkabel cyl 3 och 4	3	TURBO
0300	8 83 49 797	2	Ignition cable retainer	Tändkabelhållare	2	
0320	8 83 69 167	1	Ignition cable retainer	Tändkabelhållare	5	TURBO
0340	9 83 88 514	4	Spark plug	Tändstift		BOSCH W 175 T30
0360	9 83 88 514	4	Spark plug	Tändstift		40/234 107 001
0380	9 83 88 514	4	Spark plug	Tändstift		NGK BP-6 ES
0400	9 83 88 514	4	Spark plug	Tändstift		40/236 180 008
0420	9 83 88 514	4	Spark plug	Tändstift		TURBO EU, NGK BP-7 ES
0440	9 83 88 514	4	Spark plug	Tändstift		40/236161008
0460	9 83 88 514	4	Spark plug	Tändstift		AUTOLITE AG 22
0480	9 83 88 514	4	Spark plug	Tändstift		40/230121006
0500	10 85 67 505	1	Ignition and starter switch	Tänd och startkontakt	4	
0520	11 79 34 300	2	Screw	Skruv	5	
0540	12 85 40 023	1	Electronic unit	Elektronikenhet	5	BREAKERLESS SYSTEM
0560	13 79 72 359	3	Screw	Skruv	5	BREAKERLESS SYSTEM
0580	14 85 42 375	1	Resistance	Motstånd	5	BREAKERLESS SYSTEM
0600	15 79 72 003	1	Clip	Clip	5	BREAKERLESS SYSTEM
0620	16 79 22 271	1	Screw	Skruv	5	BREAKERLESS SYSTEM
0640	17 85 40 981	1	Label	Etikett	0	BREAKERLESS SYSTEM
0660	93 37 338	X	Set, ignition cables	Sats, tändkablar		

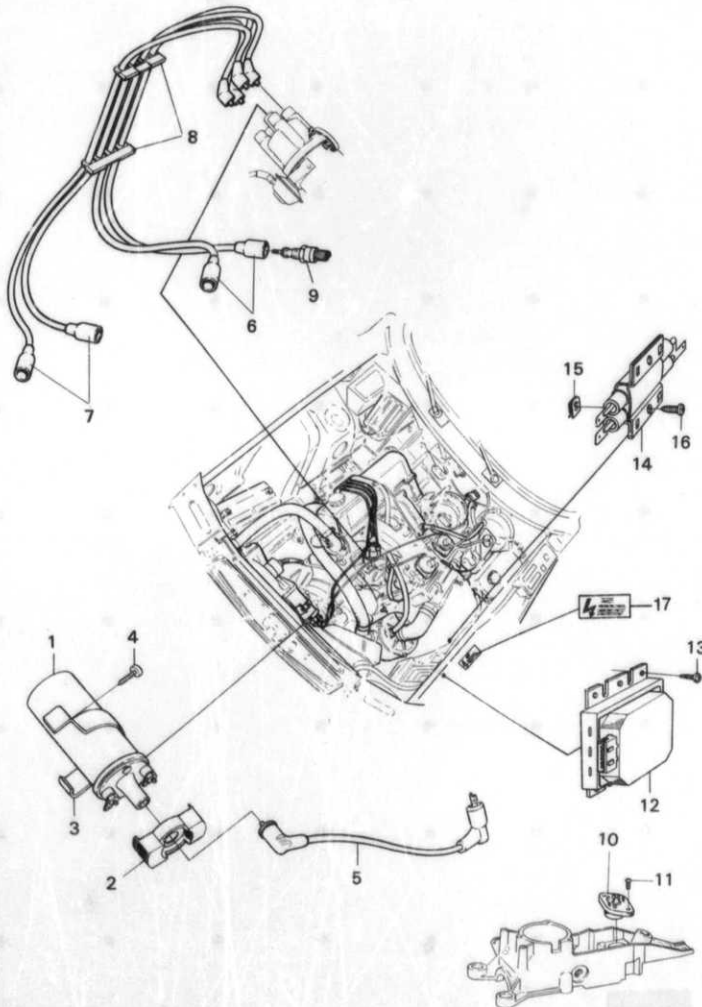

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

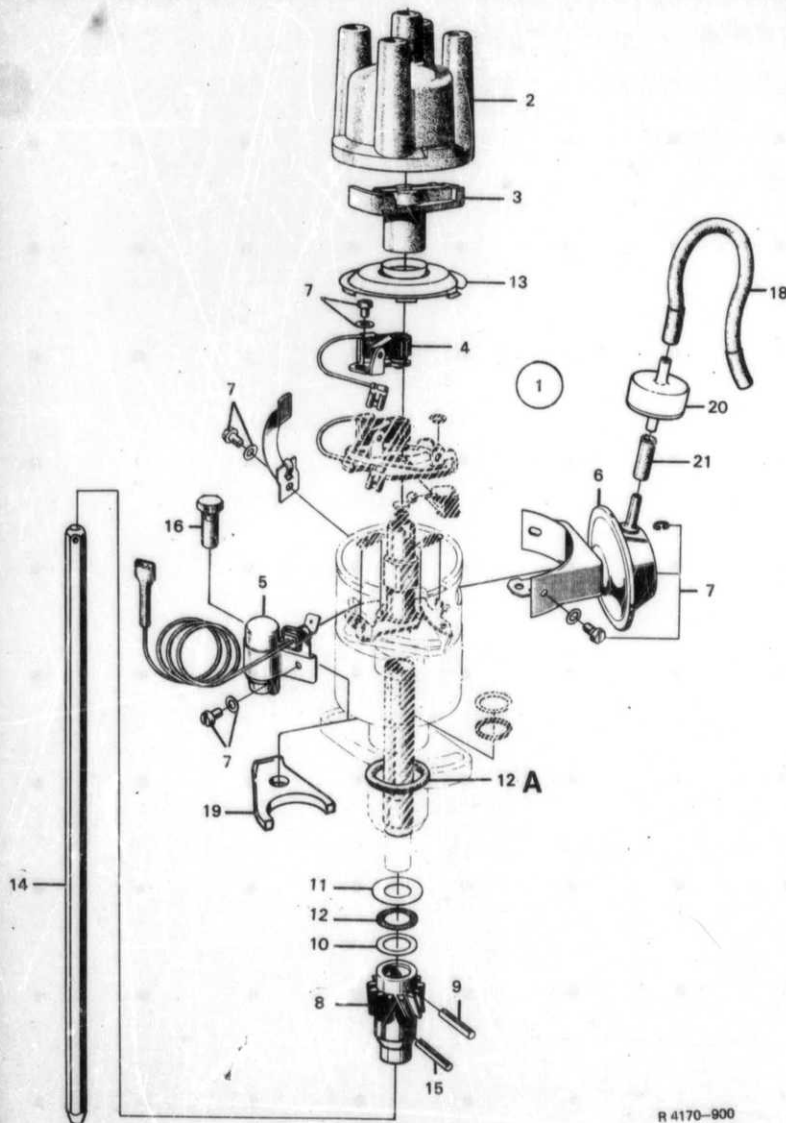

R 4170-900

SAAB
genuine parts
original reservdelar

2-F18

SAAB 900
M79-80

MASTER INDEX

0350

Ignition system
Distributor

Tändsystem
Tändfördelare

Date
Datum
1987-10

Illustration
Bild nr
R4170

Group
Grupp
3


Page
Sida
17

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR / L	Notes Anmärkning
		900	US				
0020	1	83 62 311	1	Distributor assy	Tändfördelare kpl	5	BOSCH 0231170197
0040	2	75 01 218	1	Distributor cap	Fördelarlock	2	(83 55 950)
0080	3	93 06 697	1	Rotor	Rotor	1	
0080	4	83 55 919	1	Contact set	Kontaktsats	1	
0100	5	83 65 553	1	Capacitor	Kondensator	2	
0120	6	83 65 488	1	Vacuum control unit	Vakuumregulator	4	
0140	7	83 80 438	1	Part kit	Detalsats	5	
0160	8	83 61 172	1	Drive gear	Kugghjul	5	
0180	9	80 49 447	1	Pin	Pinne	5	
0200	10	83 50 290	X	Washer 0.2 mm	Bricka 0.2 mm	6	
0220	11	83 50 282	X	Washer 0.5 mm	Bricka 0.5 mm	6	
0240	12	83 49 714	X	Washer 0.8 mm	Bricka 0.8 mm	6	
0250	12A	78 08 504	1	Seal ring	Tättningsring	2	
0280	13	93 09 907	1	Dust protective cover	Dammskyddsluck	6	
0270	14	83 62 300	1	Shaft	Axel	4	
0300	15	80 49 348	1	Pin	Pinne	5	
0320	16	80 82 950	1	Screw	Skruv	5	
0340	18	83 27 850	1	Hose	Slang	5	C
0360	18	83 27 843	1	Hose	Slang	5	T, I
0380	19	83 62 287	1	Holder	Hållare	5	
0400	20	83 23 362	1	Delay valve	Fördröjningsventil	2	M
0410				(White, 6 sec.)	(Vit, 6 sek.)		
0420	21	83 27 868	1	Extension hose	Skarvslang	5	M

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

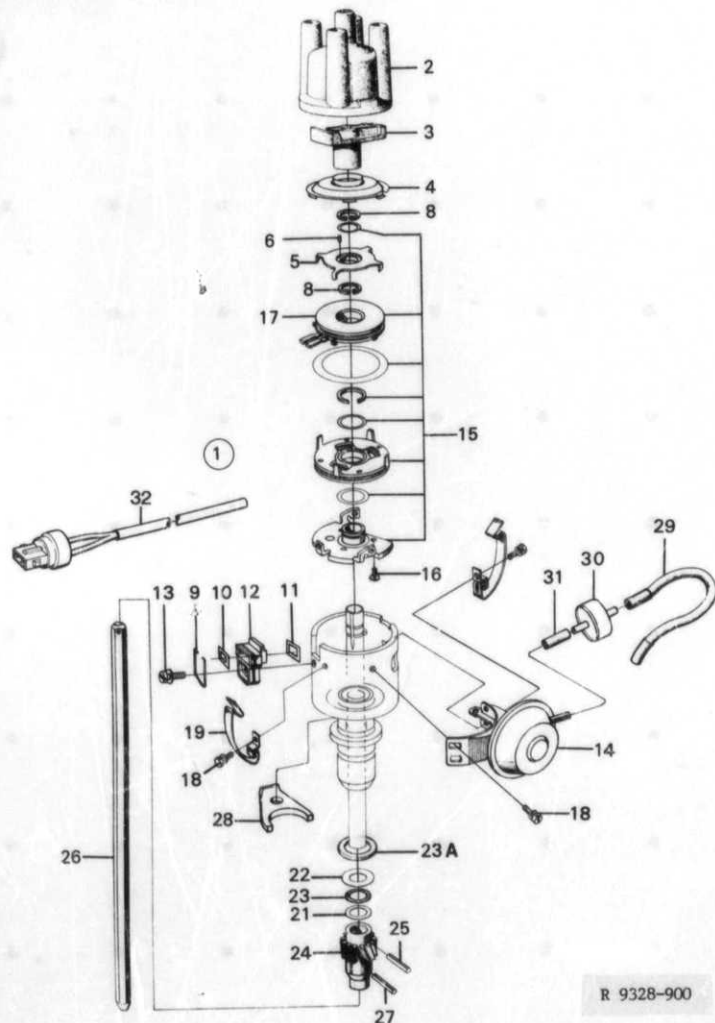

R 9328-900

SAAB
genuine parts
original reservdelar

2-F20

SAAB 900
M79-80

MASTER INDEX

0400

Ignition system
Distributor,
breakerless system

Tändsystem
Tändfördelare,
brytarlöst system

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10 R9328

3

19

Fig. Pos.	Part No Art nr	Quantity/Åntal	Description	Benämning	K/S SR	Notes Anmärkning
		900				
0020	1 93 07 307	1	Distributor assy	Tändfördelare kpl	5	TURBO EU
0040	1 93 07 331	1	Distributor assy	Tändfördelare kpl	5	TURBO US
0050	1 83 66 122	1	Distributor assy	Tändfördelare kpl	5	US, AU
0060	2 75 01 216	1	Distributor cap	Fördelarlock	2	
0070	3 93 05 202	1	Distributor arm	Fördelararm	3	TURBO EU
0090	3 93 06 697	1	Distributor arm	Fördelararm	3	US, AU
0100	4 93 09 807	1	Dust protective	Dammskydd	6	
0120	5 93 51 644	1	Rotor plate	Rotorskiva	3	
0140	6 93 05 087	1	Lock pin	Låspinne	5	
0180	8 93 05 103	2	Lock ring	Låsring	5	
0200	9 93 05 111	1	Lock yoke	Låsbygel	5	
0220	10 93 05 129	1	Pad	Mellanlägg	6	
0240	11 93 05 137	1	Seal	Tätning	5	
0260	12 93 09 916	1	Cable terminal	Kabelanslutning	5	
0280	13 93 05 053	1	Screw	Skruv	5	
0300	14 93 09 931	1	Vacuum control unit	Vakuumregulator	4	TURBO
0310	14 93 05 160	1	Vacuum control unit	Vakuumregulator	4	US, AU
0320	15 93 51 693	1	Impulse transmitter	Pulsgivare	0	
0340	16 93 05 186	3	Screw	Skruv	5	
0360	17 93 51 701	1	Induction coil	Impulslindning	6	
0380	18 93 05 061	1	Screw	Skruv	5	
0400	19 93 20 250	1	Set, spring clips	Sats, hållfjädrar	5	
0420	21 83 50 290	X	Washer, 0.2 mm	Bricka 0.2 mm	6	
0440	22 83 50 282	X	Washer, 0.5 mm	Bricka 0.5 mm	6	
0460	23 83 49 714	X	Washer, 0.8 mm	Bricka 0.8 mm	6	
0470	23A 78 08 504	1	Seal ring	Tätningssring	2	
0480	24 83 61 172	1	Gear	Kugghjul	5	
0500	25 80 49 447	1	Pin	Pinne	5	
0520	26 83 62 360	1	Shaft	Åxel	4	
0540	27 80 49 348	1	Pin	Pinne	5	
0560	28 83 62 267	1	Holder	Hållare	5	
0580	29 83 27 843	1	Hose	Slang	5	
0600	30 93 16 740	1	Delay valve (Green, 20 sec.)	Fördröjningsventil (Grön, 20 sek.)	2	TURBO EU, AU
0610	31 83 27 868	1	Extension hose	Skarvsång	5	TURBO EU, AU
0630	32 85 40 049	1	Screen hose cable	Kabel, skärmad	6	US, JP, TURBO
0640	78 74 209	X	Repair kit	Reparationsats	5	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

0450

Lighting
Headlights


Belysning
Strålkastare

Date
Datum
1987-10

Illustration
Bild nr
R9329

Group
Grupp
3

Page
Sida
21

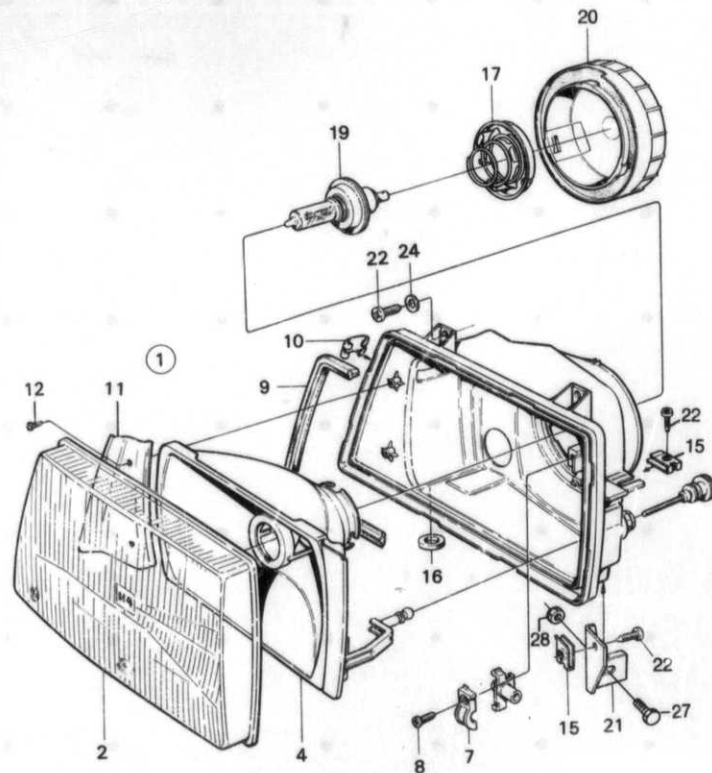

R 9329-900

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR / L	Notes Anmärkning
		900	US				
0020	1 85 39 595	1		Headlight assy L.H.	Strålkastare kpl V	3	HELLA
0040	1 85 39 603	1		Headlight assy R.H.	Strålkastare kpl H	3	HELLA
0080	1 85 41 575	1		Headlight assy L.H.	Strålkastare kpl V	3	LH TRAFFIC
0080	1 85 41 583	1		Headlight assy R.H.	Strålkastare kpl H	3	LH TRAFFIC
0100	2 85 39 611	1		Glass L.H.	Glas V	2	
0120	2 85 39 629	1		Glass R.H.	Glas H	2	
0140	2 85 52 390	1		Glass L.H.	Glas V	2	LH TRAFFIC
0160	2 85 52 408	1		Glass R.H.	Glas H	2	LH TRAFFIC
0260	4 85 50 857	1		Reflector L.H.	Reflektor V	3	
0290	4 85 50 865	1		Reflector R.H.	Reflektor H	3	
0300	4 95 52 639	1		Reflector L.H.	Reflektor V	3	LH TRAFFIC
0320	4 95 52 647	1		Reflector R.H.	Reflektor H	3	LH TRAFFIC
0340	7 85 50 915	1		Clamp L.H.	Överfall V	6	
0350	7 85 50 949	1		Clamp R.H.	Överfall H	6	
0360	8 85 50 923	2		Screw	Skruv	5	
0380	9 85 65 947	2		Sealing	Tätning	3	
0400	10 85 39 702	16		Clip	Clips	5	
0405	11 85 50 873	1		Plate LH	Blände V	5	
0410	11 85 50 881	1		Plate RH	Blände H	5	
0415	12 79 22 727	2		Screw	Skruv	5	
0420	15 85 50 824	2		Clip nut	Clipsmutter	3	
0440	16 85 50 840	2		Support bushing	Stödbussning	3	
0460	17 85 10 836	2		Bayonet ring	Bajonettring	3	
0470	19			with spring	med fjäder		
0500	19	2		Bulb H4	Glödlampa H4	4	40/238210009
0520	20 85 39 710	2		Seal cap	Tätningsskåpa	6	
0540	21 85 50 808	1		Angle bracket LH	Fästvinkel V	6	
0560	21 85 50 816	1		Angle bracket RH	Fästvinkel H	6	
0580	22 79 22 438	8		Screw	Skruv	5	
0620	24 80 29 951	4		Washer	Bricks	5	
0640	27 79 69 223	2		Screw	Skruv	5	
0660	28 79 71 658	2		Nut	Mutter	5	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system.	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

0500

Lighting
Headlights US, CA

Belysning
Strålkastare US, CA


Date
Datum
1987-10

Illustration
Bild nr
R5192

Group
Grupp
3

Page
Sida
23

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S S/R	Notes Anmärkning
		900		US				
0020	1 85 74 253	2			2 Headlight insert assy	Strålkastarinsats kpl	4	
0040	2 85 74 253	2			2 Insert sealed beam	Insats sealed beam	1	
0060	3 85 50 998	2			2 Retaining ring	Hållarring	4	
0080	4 85 50 972	8			8 Screw	Skruv	5	
0100	5 85 41 591	1			1 Retainer frame L H	Fästarm V	3	
0120	5 85 41 009	1			1 Retainer frame R H	Fästarm H	3	
0140	6 85 51 681	4			4 Setting screw	Inställningskruv	2	
0160	7 85 58 510	2			2 Spring	Fjäder	4	
0180	8 79 22 436	6			6 Screw	Skruv	5	
0200	9 80 29 951	4			4 Washer	Bricka	5	
0220	10 79 69 223	2			2 Screw	Skruv	5	
0240	11 79 69 272	2			2 Clip nut	Clipsmutter	3	
0260	12 79 22 727	8			8 Screw	Skruv	5	
0300	14 79 71 641	2			2 Screw	Skruv	5	
0320	15 79 71 658	2			2 Nut	Mutter	5	

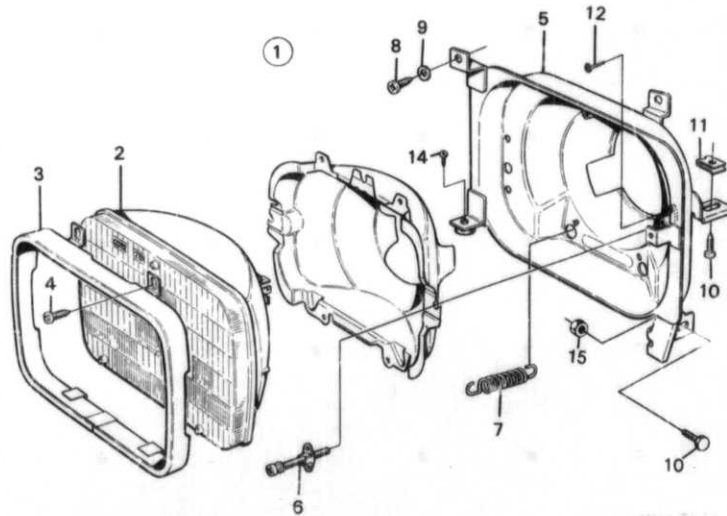

R 5192-900


0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

0550

Lighting		Belysning		Date	Illustration	Group	Page
Combination light		Kombinationslykta		Datum	Bild nr	Grupp	Sida
				1987-10	R4173	3	25
Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR / L	Notes Anmärkning
		900	US				
1	85 39 736	1		Combination light LH	Kombinationslykta V	2	
1	85 39 744	1		Combination light RH	Kombinationslykta H	2	
1	85 39 981	1		Combination light LH	Kombinationslykta V	2	EU, NO, SF, AU, ME
1	85 40 007	1		Combination light RH	Kombinationslykta H	2	EU, NO, SF, AU, ME
1	85 41 013	1		Combination light LH	Kombinationslykta V	2	US, CA
1	85 41 021	1		Combination light RH	Kombinationslykta H	2	US, CA
2	85 39 751	1		.Glass L H	.Glas V	1	
2	85 39 769	1		.Glass R H	.Glas H	1	
2	85 83 510	1		.Glass L H	.Glas V	1	US, CA
2	85 83 528	1		.Glass R H	.Glas H	1	US, CA
3	85 40 528	8		8..Screw	..Skruv	5	
3A	85 65 940	8		8..Washer	..Bricka	5	
8	85 32 756	4		4..Bulb, direction indicator and position light	..Glödlampa, blinkljus och positionsljus	5	40/238 900 006
9	85 35 692	2		2..Bulb, side back-up light	..Glödlampa, sidoback-ljus	5	40/238 900 013
10	79 71 841	4		4..Screw	Skruv	5	
11	79 16 489	4		4..Washer	Bricka	5	
12	79 22 439	2		2..Screw	Skruv	5	
13	85 44 801	2		2..Washer	Bricka	3	
14	85 50 824	2		2..Clip nut	Clips mutter	3	

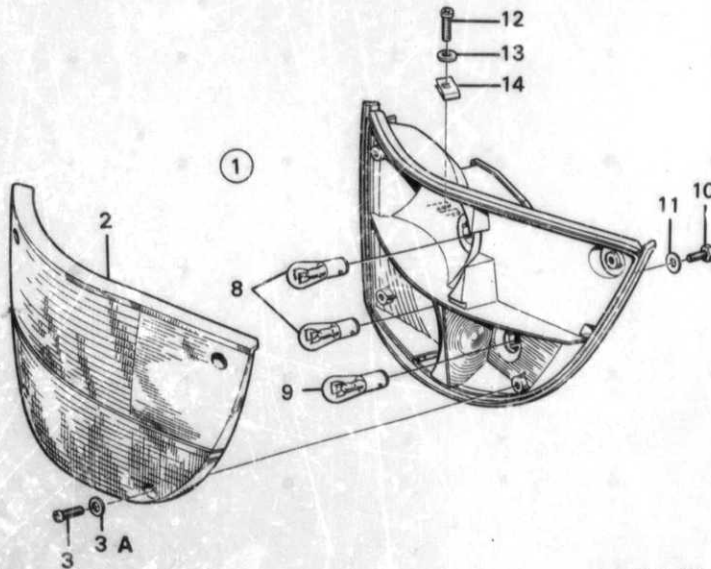

R 4173-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

0600

Lighting
Tail light, license
plate light - 1979

Belysning
Baklykta, nummerplåts-
belysning - 1979


Date
Datum
1987-10

Illustration
Bild nr
R4698

Group
Grupp
3

Page
Sida
27

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S S/R L	Notes Anmärkning
		900		US				
0020	1	85 15 512	1		Tail light assy LH	Baklykta kpl V	3	
0040	1	85 15 520	1		Tail light assy RH	Baklykta kpl H	3	
0060	1	85 14 333	1		Tail light assy LH	Baklykta kpl V	3	US
0080	1	85 14 341	1		Tail light assy RH	Baklykta kpl H	3	US
0180	3	85 10 395	1		Glass LH	Glas V	2	
0200	3	85 16 403	1		Glass RH	Glas H	2	
0220	3	85 16 437	1		Glass LH	Glas V	2	US
0240	3	85 16 445	1		Glass RH	Glas H	2	US
0260	4	85 16 338	8		Screw	Skruv	5	
0280	5	85 16 502	8		Washer	Bricka	5	
0300	6	85 16 476	1		Seal LH	Tätning V	5	
0320	6	85 16 486	1		Seal RH	Tätning H	5	
0340	7	71 54 719	3		Bulb	Glödlampa	5	40/238 290 001
0360	8	71 54 727	1		Bulb	Glödlampa	5	40/238 254 007
0380	10	80 29 555	4		Nut	Mutter	5	
0400	11	80 29 951	4		Washer	Bricka	5	
0420	15	85 15 553	1		License plate light assy	Nummerplåtbelysning kpl	5	GB
0440	15	85 58 751	1		License plate light assy	Nummerplåtbelysning kpl	5	GB
0445								
0460	16	85 15 710	1		Lamp housing	Lamphus	5	
0480	17	85 58 314	2		Seal	Tätning	0	IS DELETED
0500	18	85 16 262	1		Frame	Ram	5	
0520	19	85 16 270	1		Glass LH	Glas V	3	
0540	20	85 16 288	1		Glass RH	Glas H	3	
0560	21	85 16 361	4		Screw	Skruv	5	
0580	22		2		Bulb	Glödlampa	5	40/238251002
0600	23	85 16 312	1		Seal	Tätning	5	
0610	23	85 58 785	1		Seal	Tätning	5	GB
0620	24	85 15 629	1		Push button assy	Trycke kpl	3	
0640	25	85 15 652	1		Operating plate	Manöverplatta	5	
0660	26	85 15 680	1		Spring	Fjäder	5	
0680	27	85 16 338	1		Screw	Skruv	5	
0700	28	85 16 346	1		Washer	Bricka	5	
0720	29	85 15 886	1		Rod	Åxel	5	
0740	30	85 15 702	1		Spring	Vridfjäder	5	
0760	31	80 29 548	4		Nut	Mutter	5	
0780	32	80 29 944	4		Washer	Bricka	5	
0800	33	82 74 896	1		Handle assy	Handtag kpl	5	GB
0840	35	82 74 979	1		Spring	Fjäder	5	GB
0860	36	79 22 214	1		Screw	Skruv	5	GB
0880	37	80 29 936	1		Washer	Bricka	5	GB
0900	40	85 58 793	1		Cover	Täcklock	5	GB, PART OF 85 58 751

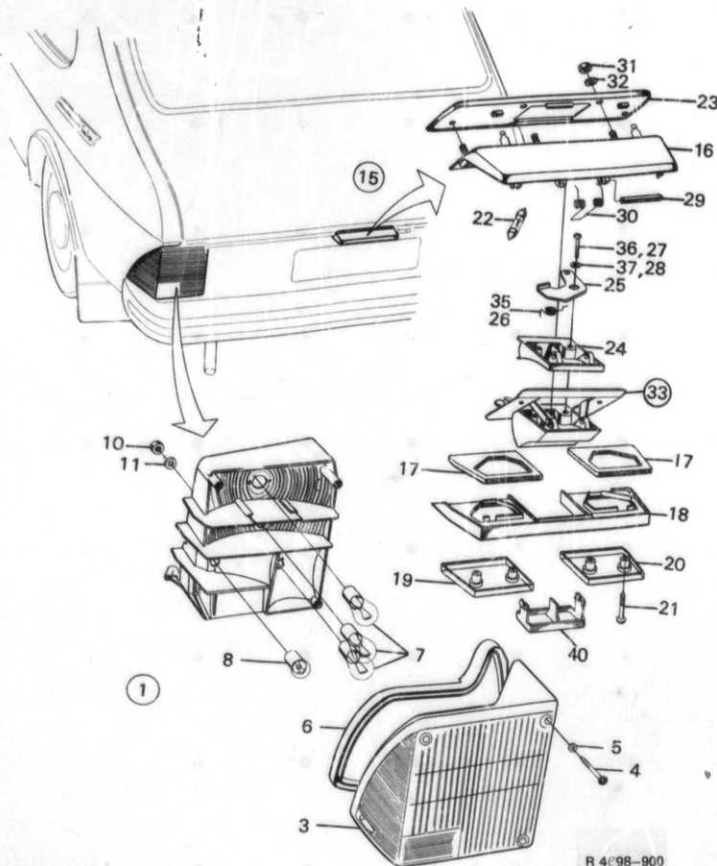

R 4-98-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

0625

Lighting
Tail light, license
plate light 1980

Belysning
Baklykta, nummerplåts-
belysning 1980


Date
Datum
1987-10

Illustration
Bild nr
R5923

Group
Grupp
3

Page
Sida
29

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0020	1 85 85 333	1		Tail light assy LH	Baklykta kpl V	3	
0040	1 85 59 361	1		Tail light assy RH	Baklykta kpl H	3	
0060	1 85 85 358	1		Tail light assy LH	Baklykta kpl V	3	US, CA, JA
0080	1 85 85 366	1		Tail light assy RH	Baklykta kpl H	3	US, CA, JA
0090	2 85 61 284	2		Sealing	Tätning	2	
0100	3 85 59 536	1		Glass LH	Glas V	2	
0120	3 85 85 424	1		Glass RH	Glas H	2	
0140	3 85 85 432	1		Glass LH	Glas V	2	US, CA, JA
0160	3 85 62 142	1		Glass RH	Glas H	2	US, CA, JA
0180	5 79 74 025	8		Screw	Skruv	6	
0200	6 85 60 591	1		Washer	Bricka	5	
0220	7 71 54 719	4		Bulb	Glödlampa	40/238 290 001	
0240	8 85 37 672	2		Bulb	Glödlampa	40/238 900 005	
0250	9 80 29 555	4		Nut	Mutter	5	
0255	10 80 29 951	4		Washer	Bricka	5	
0260	11 85 85 374	1		Rear door lamp LH	Lykta, bakdörr V	3	
0280	11 85 59 429	1		Rear door lamp RH	Lykta, bakdörr H	3	
0290	11 85 85 390	1		Rear door lamp LH	Lykta, bakdörr V	3	EU
0295	11 85 85 408	1		Rear door lamp RH	Lykta, bakdörr H	3	EU
0300	11 85 59 395	1		Rear door lamp LH	Lykta, bakdörr V	3	GB
0305	11 85 59 403	1		Rear door lamp RH	Lykta, bakdörr H	3	GB
0310	12 85 67 513	1		Glass LH	Glas V	2	
0315	12 85 67 521	1		Glass RH	Glas H	2	
0340	12 85 59 551	1		Glass LH	Glas V	2	GB
0360	12 85 59 569	1		Glass RH	Glas H	2	GB
0365	12 85 85 473	1		Glass LH	Glas V	2	EU
0370	12 85 85 491	1		Glass RH	Glas H	2	EU
0380	13 85 60 583	8		Screw	Skruv	6	
0400	14 85 60 591	8		Washer	Bricka	5	
0420	15 71 54 719	2		Bulb	Glödlampa	40/238 290 001	
0440	16 71 54 727	2		Bulb	Glödlampa	40/238 254 007	
0460	17 85 22 385	8		Screw	Skruv	6	
0480	18 79 72 573	8		Clip	Clip	3	
0500	19 85 62 126	1		Number plate light	Nummerplåtsbelysning	5	
0520	20 85 63 918	1		Spring	Fjäder	5	
0540	21 85 63 942	2		Glass	Glas	3	
0570	22 70 84 197	2		Bulb	Glödlampa	40/238 261 002	
0580	23 80 29 548	5		Nut	Mutter	5	
0600	24 70 88 073	3		Washer	Bricka	5	

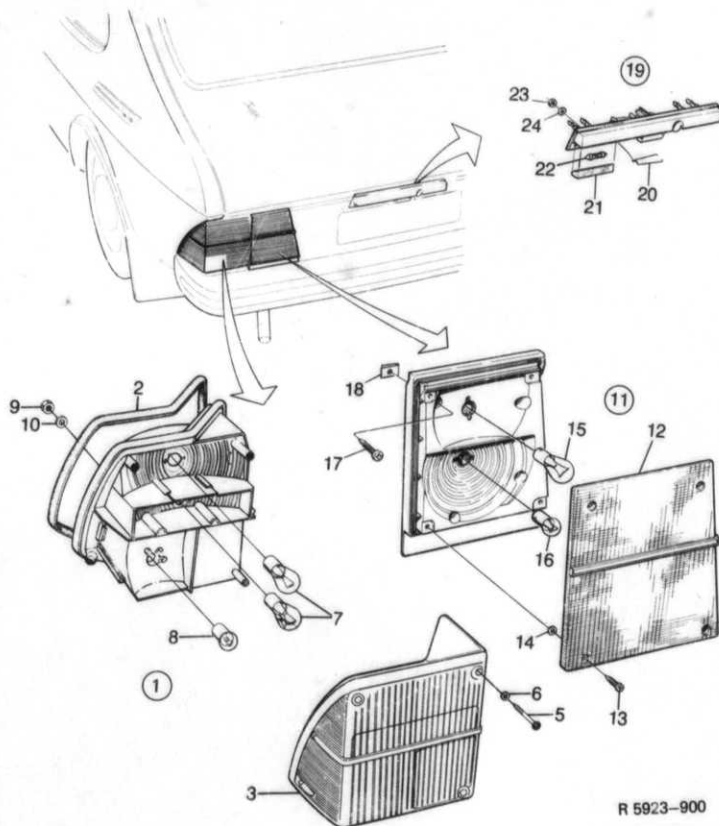

R 5923-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

0650

Lighting
Other lights, loud-
speaker

Belysning
Övrig belysning, hög-
talare



Date
Datum
1987-10

Illustration
Bild nr
R9330

Group
Grupp
3

Page
Sida
31

Fig. Pos.	Part No Art nr	Quantity/Anat	Description	Benämning	KS SR L	Notes Anmärkning
		900	US			
0020	1 85 18 367	1	1 Dome light, interior	Taklampa	4	
0040	2 79 70 346	2	2 Screw	Skruv	5	
0060	3	1	1 Bulb	Glödlampa	3	40/238265003
0080	4 72 46 622	1	1 Bulb socket ignition lock light	Lamphållare, tändlås- belysning	3	
0100						
0120	5	1	1 Bulb	Glödlampa	5	40/238271001
0140	6 85 06 263	1	1 Rear view mirror lamp	Backspegellampa kpl	5	
0160						
0200	7 70 84 197	1	1 Bulb	Glödlampa	5	40/238 261 002
0220	8 80 59 271	1	1 Screw	Skruv	5	
0240	9 85 63 593	2	1 Reflector	Dörreflex	5	
0260	9 85 63 593	1	1 Reflector, LH rear door	Dörreflex, V baktörr	5	
0300	10 85 18 367	1	1 Light, luggage compart ment	Bagagerumslampa	4	
0320						
0340	11 85 01 264	1	1 Bulb	Glödlampa	5	40/238 265 003
0360	12 79 70 346	2	2 Screw	Skruv	5	
0380	13 79 33 658	2	2 Clip nut	Clipsmutter	4	US, CA
0400	14 85 77 108	2	2 Loudspeaker	Högtalare	5	US, CA
0420	15 85 60 435	8	8 Clip	Clip	5	US, CA
0440	16 85 57 514	2	2 Spacer	Distans	5	US, CA
0460	17 85 53 794	1	1 Light, glove box	Belysning, handskfack	4	
0480	18 70 84 197	1	1 Bulb	Glödlampa	4	
0500	19 85 61 409	2	Position light	Positionslys	4	DK
0520	20 71 54 727	2	Bulb	Glödlampa	6	DK 40/238 254 007
0540	21 85 61 375	1	Bracket LH	Fäste V	6	DK
0560	21 85 61 383	1	Bracket RH	Fäste H	6	DK
0580	22 80 74 106	2	Nut	Mutter	5	DK
0590	23 85 47 580	1	1 Dome light, interior	Taklampa	4	29
0600	24 95 03 152	1	1 Lens	Glas	6	29
0610	25 85 01 264	1	1 Bulb	Glödlampa	2	29
0620	26 79 22 636	1	1 Screw	Skruv	5	29, EARTH
0630					4	29
0640	85 47 606	X	X Kit, dome light interior	Sats, taklampa		SEE PAGE 0-11, 1-F12

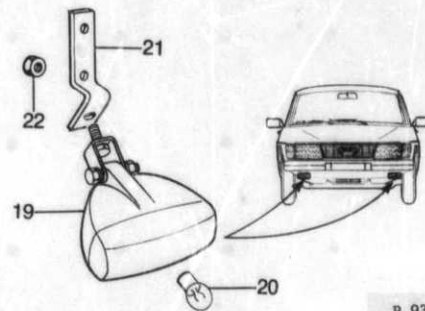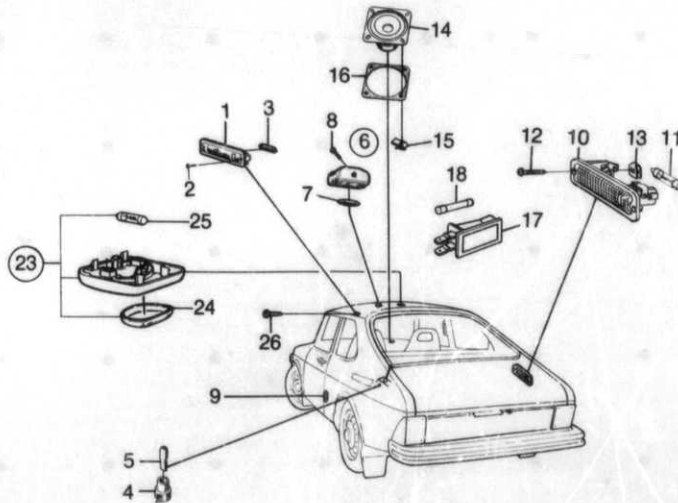

R 9330-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

0700

Electric equipment
Signalhorn

Elektrisk utrustning
Signalhorn

Date
Datum
1987-10

Illustration
Bild nr
R3744

Group
Grupp
3


Page
Sida
33

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		910	US				
0020	1 85 60 809	1		1 Horn assy	Signalhorn kpl	4	
0040	2 85 55 237	2		2 Bracket	Fäste	5	
0060	3 85 55 294	1		1 Nut	Mutter	5	
0080	4 85 55 302	1		1 Washer	Bricka	5	
0100	5 80 82 919	1		1 Screw	Skruv	5	
0120	8 85 55 260	1		1 Horn assy	Signalhorn kpl	4	
0140	9 85 55 237	2		2 Bracket	Fäste	5	
0160	10 85 55 294	1		1 Nut	Mutter	5	
0180	11 85 55 302	1		1 Washer	Bricka	5	
0200	12 85 53 257	1		1 Spacer sleeve	Distansrör	5	
0220	13 80 82 968	1		1 Screw	Skruv	5	
0240	14 80 74 106	1		1 Nut	Mutter	5	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

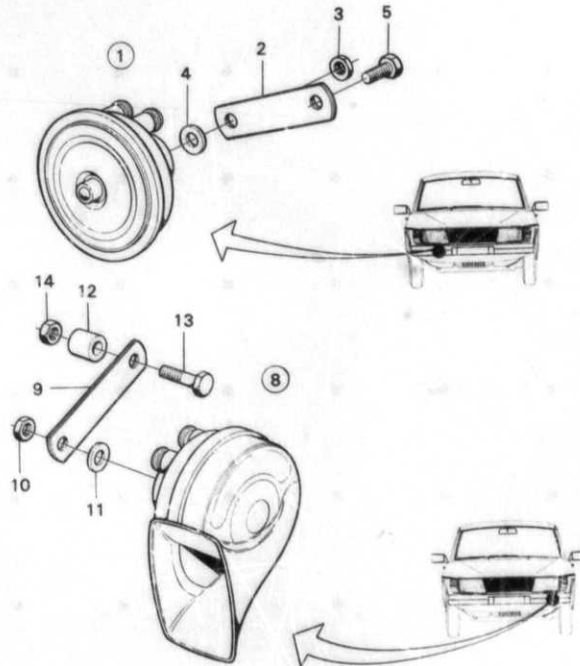

R 3744-900

0750

Electric equipment
Signal button

Elektrisk utrustning
Signalkontakt

Date
Datum
1987-10

Illustration
Bild nr
R4349

Group
Grupp
3

Page
Sida
35


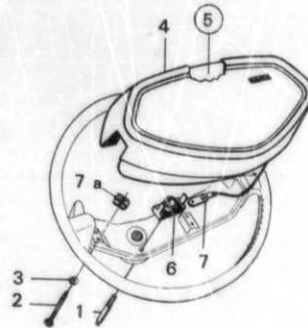


Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR /L	Notes Anmärkning
		900	US				
0020	1 85 21 262	1		1 Contact holder	Kontakthållare	2	
0040	2 79 22 339	4		1 Screw	Skruv	5	
0060	3 79 10 516	4		4 Washer	Bricka	5	
0080	4 89 32 147	1		1 Cover	Kåpa	5	
0100	5 89 32 154	1		1 Signal contact	Signalkontakt	3	
0120	6 89 32 501	1		1 Connector	Kontekthus	5	
0140	7 85 22 542	1		1 Contact clip	Kontaktbleck	3	
0150	7A 89 42 385	4		4 Clip	Clip	3	
0160	8 89 38 076	1		1 Contact	Kontakt	6	EMS, TURBO
0180	9 89 39 084	1		1 Cable	Kabel	3	EMS, TURBO
0200	10 89 39 082	1		1 Foam pad	Rettkudde	3	EMS, TURBO
0220	11 89 39 100	1		1 Washer	Bricka	5	EMS, TURBO
0240	12 89 39 118	1		1 Spring	Fjäder	5	EMS, TURBO
0260	13 89 39 126	1		1 Cup	Kopp	5	EMS, TURBO

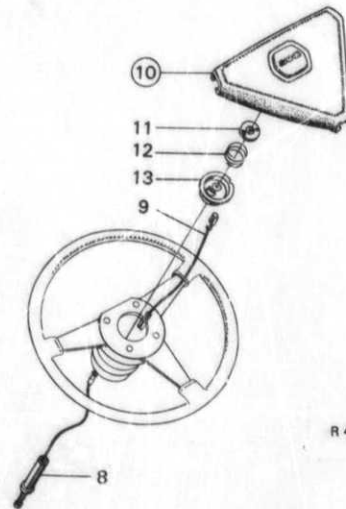


R 4349-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

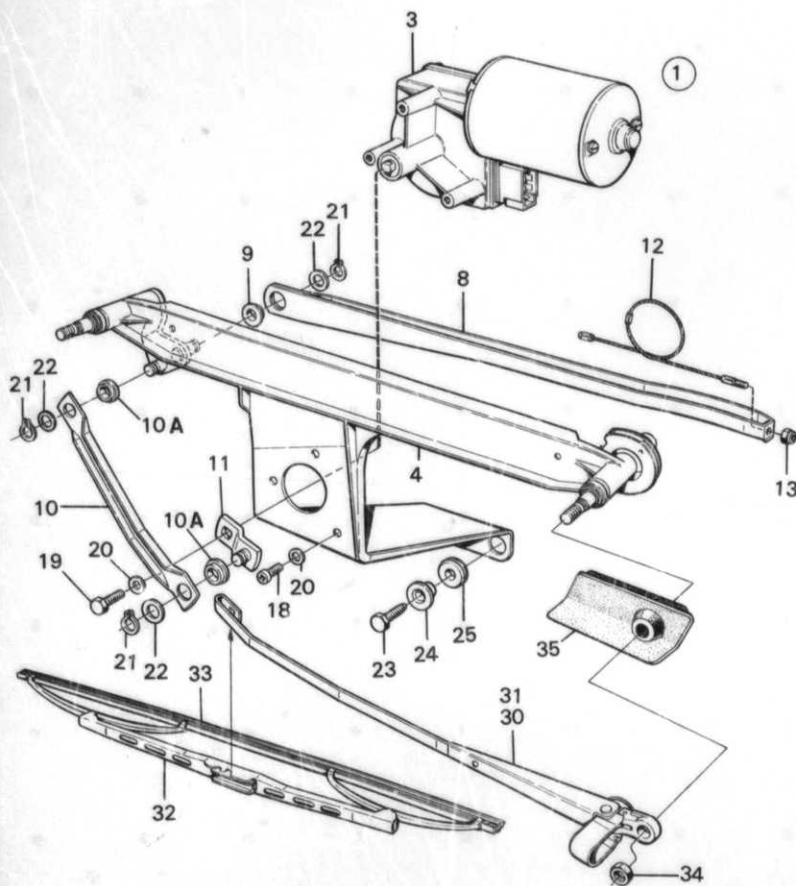


R 4078-900

0800	Electric equipment		Elektrisk utrustning		Date Datum	Illustration Bild nr	Group Grupp	Page Sida
	Windshield wiper		Vindrutetorkare					
					1987-10	R4078	3	37
Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	KS SR	Notes Anmärkning
		900		US				
0020	1	85 44 482	1		1 Motor Assy	Motor kpl	4	
0080	3	85 44 586	1		1 Gear	Dräv	5	
0120	7	85 44 470	1		1 Member	Balk	5	
0140	4	85 58 124	1		1 Member	Balk	5	RHD
0160	8	85 44 504	1		1 Companion arm	Medbringarm	5	
0180	8	85 58 132	1		1 Companion arm	Medbringarm	5	RHD
0200	9	85 04 029	1		1 Bushing	Bussning	5	
0220	10	85 44 512	1		1 Connecting rod	Vevstake	5	
0240	10	85 58 140	1		1 Connecting rod	Vevstake	5	RHD
0260	10A	85 58 120	1		2 Bushing	Bussning	3	
0280	11	85 44 520	1		1 Crank arm	Vevarm	5	
0270	11	85 61 466	1		1 Crank arm	Vevarm	5	RHD
0280	12	85 44 538	1		1 Cable	Lina	3	
0300	13	80 74 270	1		1 Nut	Mutter	5	
0320	18	80 59 396	3		3 Screw	Skruv	5	
0340	19	80 19 895	1		1 Screw	Skruv	5	
0360	20	80 29 951	4		4 Washer	Bricka	5	
0380	21	79 63 135	3		3 Retaining ring	Spärrytare	3	(79 41 115)
0400	22	85 44 702	1		1 Washer	Bricka	5	
0420	23	85 58 074	4		4 Screw	Skruv	5	
0440	24	85 44 413	4		4 Sleeve	Hylsa	5	
0460	25	85 44 421	2		2 Bushing	Bussning	3	
0480	30	85 53 810	1		1 Wiper arm LH	Torkarm V	3	
0500	31	85 53 828	1		1 Wiper arm RH	Torkarm H	3	
0520	30	85 58 090	1		1 Wiper arm LH	Torkarm V	3	RHD
0540	31	85 58 108	1		1 Wiper arm RH	Torkarm H	3	RHD
0560	32	85 57 480	2		2 Wiper blade Assy	Torkarblad kpl	1	
0580	33	85 53 842	2		2 Rubber profile	Gummiprofil	S2	
0600	34	80 74 106	2		2 Nut	Mutter	5	
0620	35	85 44 438	1		1 Cover LH	Täcklock V	4	
0640	36	85 44 438	1		1 Cover RH	Täcklock H	4	
0660		85 46 319	X		X Set, rubber profile	Sats, gummiprofil		
0670		85 47 499	X		X Set, wiper blade	Sats, torkarblad	6	

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

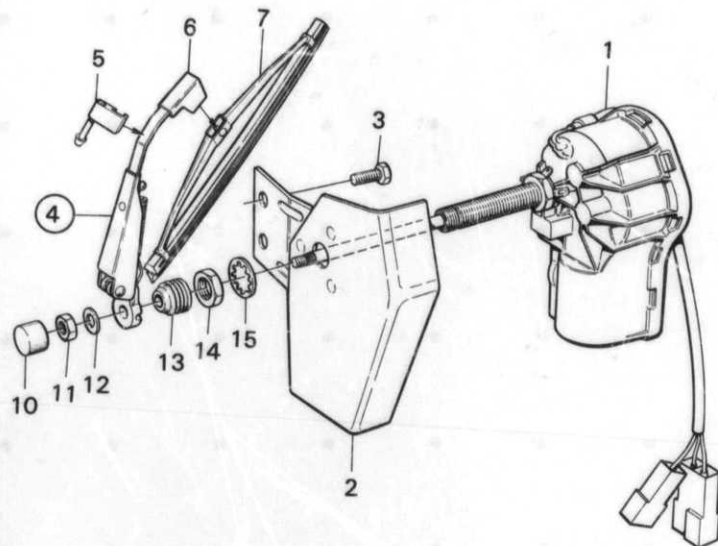

R 5212-900

0950

Electric equipment
Headlight wipers

Elektrisk utrustning
Strålkastartorkare

Date
Datum

Illustrat	
Bild nr	

n	Group Grupp
---	----------------

Page
Sida

1987-10

0 R5212

3

39

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K S R /	Notes Anmärkning
		900		US				
0020	1	85 52 176	1		Wiper motor LH	Torkarmotor V	3	
0040	1	85 52 218	1		Wiper motor RH	Torkarmotor H	3	
0060	2	85 52 366	1		Bracket LH	Fäste V	5	
0080	2	85 52 308	1		Bracket RH	Fäste H	5	
0100	3	80 19 895	1		Screw	Skrut	5	
0120	4	85 52 051	1		Wiper arm assy L.H	Torkarmarm kpl V	3	
0140	4	85 52 069	1		Wiper arm assy R.H	Torkarmarm kpl H	3	
0160	5	85 59 593	1		.Washer nozzle LH	.Spolarmunstycke	2	
0180	5	85 58 901	1		.Washer nozzle RH	.Spolarmunstycke	2	
0200	6	85 46 368	1		Anchorage	Fäste	5	
0220	7	85 52 119	2		Wiper blade	Torkarblad	5/2	
0210	10	85 52 077	2		Cover	Kåpa	3	
0220	11	80 29 548	2		Nut	Mutter	5	
0240	12	79 68 514	2		Washer	Bricka	5	
0260	13	85 72 604	2		Sealing	Tätning	4	
0280	14	85 52 194	2		Nut	Mutter	5	
0300	15	79 72 284	2		Washer	Bricka	5	
0320		85 46 327	X		Set, wiper blade	Sats, torkarblad		

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

0900

Electric equipment
Washer device

Elektrisk utrustning
Spolaranläggning


Date
Datum
1967-10

Illustration
Bild nr
R4699

Group
Grupp
3

Page
Sida
41

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S S/R /L	Notes Anmärkning
		900		US				
0020	1 85 44 744	1			1 Container	Behållare	3	
0040	2 85 18 557	1			1 Cap	Lock	2	
0050	2A 85 60 181	1			1 Filter	Filter	4 (8)	
0060	3 85 51 137	1			1 Bracket	Fäste	5	
0080	4 85 35 452	1			1 Pad	Mellanlägg	4	
0100	5 80 19 903	1			1 Screw	Skruv	5	
0120	6 85 44 587	1			1 Washer pump	Spolarpump	2	
0140	7 85 36 609	1			1 Rubber bushing	Gummibussning	3	
0180	12 85 33 457	1			1 Hose	Slang	5	
0180	13 85 60 757	1			1 Hose	Slang	5	
0190	13A 85 11 388	1			1 Back valve	Backventil	3	
0200	14 85 52 044	3			1 Hose	Slang	5	
0220	15 85 60 740	1			1 Hose	Slang	5	
0240	16 85 44 785	1			1 Hose	Slang	5	
0260	17 85 44 793	1			1 Hose	Slang	5	
0280	18 85 09 002	2			1 Piping Y	Grenrör Y	2	
0300	19 85 44 680	1			1 Piping T	Grenrör T	2	
0320	25 85 44 595	1			1 Pressure valve	Tryckventil	3	
0340	26 85 04 144	1			1 Washer nozzle	Spolarmunstycke	2	
0360	27 85 44 728	1			1 Washer nozzle	Spolarmunstycke	2	
0380	28 71 56 409	2			2 Clip	Clips	5	
0420	30 85 08 392	2			2 Holder	Hållare	5	
0440	31 85 08 848	1			1 Extension pipe	Skarvrör	2 (2)	
0460	32 79 33 443	2			2 Clip	Clip	5 (2)	

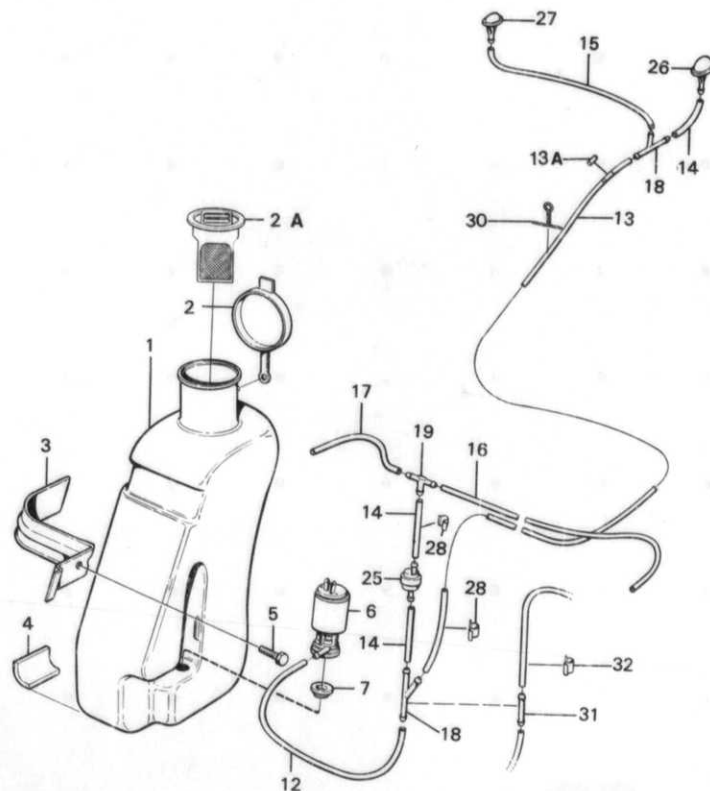

R 4699-900

2. For cars without headlight wipers
Ch 90791022463-; 90792001506-

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

0950

Electric equipment
Switches


Elektrisk utrustning
Strömställare

Date
Datum
1987-10

Illustration
Bild nr
R5193

Group
Grupp
3

Page
Sida
43

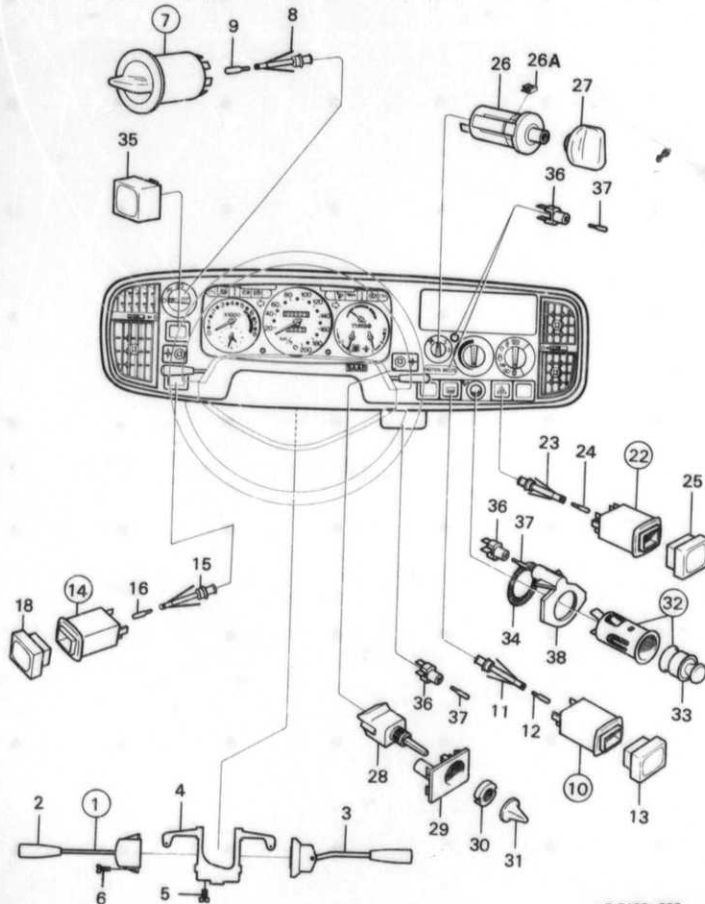

R 5193-900

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	KS SR /L	Notes Anmärkning
		900	US				
0020	1 85 42 268	1		Switch, direction in-	Strömställare, blink-	2	
0040				indicator assy	ers kpl		
0060	1 85 42 276	1		1 Switch, direction in-	Strömställare, blink-	2	US, CA
0080				indicator assy	ers kpl		
0100	2 85 30 891	1		1 Knob	Knapp	5	
0120	3 85 42 260	1		1 Switch, windshield	Strömställare, vind-	3	
0140				wiper	rutetorkare		
0160	4 85 53 927	1		1 Bracket	Konsol	6	
0180	5 79 22 347	1		1 Screw	Skruv	5	
0200	6 79 72 219	4		4 Screw	Skruv		
0220	7 85 46 186	1		1 Switch, light assy	Strömställare, ljus	3	
0240				kpl			
0260	8 85 53 356	1		1 Bulb socket	Lamphållare	4	
0280	9 85 00 613	1		1 Bulb	Lampa	4	40/238 286 009
0300	10 85 68 479	1		1 Switch, rear demist	Strömställare, elbak-	3	(85 41 047)
0320				ruta			
0340	11 85 53 315	1		1 Bulb socket	Lamphållare	4	
0360	12 85 00 613	1		1 Bulb	Lampa	4	40/238 286 009
0380	13 85 42 862	1		1 Knob, rear demist	Knapp, elbakruta	5	
0400	14 85 66 762	1		Switch, rear fog	Strömställare,	3	(85 41 047)
0420				light assy	dimbakljus kpl		
0440	15 85 53 315	1		Bulb socket	Lamphållare	4	
0460				Bulb	Lampa	4	40/238 286 009
0480	16 95 00 613	1		Knob, rear fog light	Knapp, dimbakljus	5	-1979
0500	17 85 53 430	1		Knob, rear fog light	Knapp, dimbakljus	5	(15) 1980-
0520	18 85 66 764	1		Switch, warning	Strömställare,	4	(85 41 054)
0540				flasher	varningsblikker		
0560	23 85 53 315	1		1 Bulb socket	Lamphållare	4	
0580	24 85 00 613	1		1 Bulb	Lampa	4	40/238 286 009
0600	25 85 53 414	1		1 Knob, warning flasher	Knapp, varningsblikker	5	(15)
0620	26 85 50 360	1		Switch, fan	Strömställare, fläkt	3	
0640	27 72 86 271	1		1 Clip	Clip	5	
0660	28 94 25 166	1		1 Knob, fan	Knapp, fläkt	5	
0680	29 85 31 204	2		2 Switch, mirror assy	Strömställare, back-	3	GLE, TURBO
0700				spiegel kpl			
0720	30 85 41 856	2		2 Retainer	Hållare	5	GLE, TURBO
0740	31 85 28 358	2		2 Ring nut	Ringmutter	5	GLE, TURBO
0760	32 85 79 492	2		2 Knob	Knopp	5	
0780	33 95 07 773	1		1 Cigarette lighter	Cigarettändare kpl	4	
0800				assy			
0820	34 85 59 213	1		1 Lighter unit	Tändarenhet	4	
0840	35 85 32 426	1		1 Clip	Clip	5	
0860	36 85 42 912	4		4 Blind knob	Blindknopp	5	
0880	37 85 09 697	4		4 Bulb socket	Lamphållare	5	
0900	38 85 00 613	4		4 Bulb	Lampa	5	40/238 286 009
0920	39 85 41 864	1		1 Illumination, lighter	Belysning, tändare	6	

0 General	1-A02
1 Tools	1-H02
2 Engine	2-A02
3 Electrical system,	
Instruments	2-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly,	
Steering	3-B02
7 Suspension,	
Wheels	3-C02
8 Body	3-D02
9 Accessories,	
Labels	3-L02
10 Numerical	
register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F15
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

1000

Electric equipment
Operating device

Elektrisk utrustning
Manöverdon

Date
Datum
1987-10

Illustration
Bild nr
R4700

Group
Grupp
3

Page
Sida
45

Fig. Pos.	Part No Art. nr	Quantity/Åntal Stk	Description	Benämning	K/S SR	Notes Anmärkning
0020	1 85 30 792	1	1 Brake light contact	Bromsljuskontakt	3	-1979
0030	1A 85 66 358	1	1 Brake light contact assy	Bromsljuskontakt kpl	3	1980-
0040	2 85 41 482	1	1 Bracket	Konsol	6	-1979
0060	3 80 82 919	1	1 Screw	Skruv	5	
0080	4 79 04 162	1	1 Nut	Mutter	5	-1979
0100	5 79 15 713	1	1 Washer	Bricka	5	-1979
0120	6 85 46 202	2	2 Door switch	Dörrkontakt	3	
0140	7 85 68 883	2	2 Cover	Skydd	4	
0160	8 79 21 885	2	2 Screw	Skruv	5	
0180	9 85 22 492	2	2 Door switch, rear door	Dörrkontakt bakdörr	3	-1979, 5 CK
0200	9 85 22 492	1	1 Switch, trunk door	Kontakt, bagagerums- dörr	3	
0220	10 85 22 492	1	1 Switch, handbrake	Kontakt handbroms	3	
0240	11 85 53 935	1	1 Bracket	Konsol	6	
0260	12 79 22 289	2	2 Screw	Skruv	5	
0300	13 79 19 574	1	1 Clip	Clip	3	
0320	14 85 40 106	1	1 Switch, back-up light	Kontakt, backljus	3	-1979
0330	14 85 40 106	1	1 Switch, back-up light	Kontakt, backljus	3	1980-, M
0350	14B 85 61 482	1	1 Switch, back-up light	Kontakt, backljus	3	1980-, A
0370	14C 80 59 545	2	2 Screw	Skruv	5	1980-, A
0390	15 85 57 431	1	1 Switch, choke	Kontakt, choke	5	
0410	16 85 06 198	1	1 Switch	Strömställare	3	
0430	17 85 83 627	1	1 Flasher unit	Blinkrelä	2	
0450	20 85 55 666	1	1 Contact, buzzer	Kontakt, summer	5	US, CA
0470	21 85 74 931	1	1 Buzzer	Summer	5	US, CA
0490	22 79 22 354	1	1 Screw	Skruv	5	US, CA
0510	23 79 15 556	1	1 Washer	Bricka	5	US, CA
0530	24 79 19 582	2	2 Clip nut	Clipsmutter	3	US, CA
0550	24A 85 33 010	1	1 Relay seat belt warning	Relä, bältesvarning	5	
0570	24B 79 22 354	1	1 Screw	Skruv	5	
0590	24C 79 15 556	1	1 Washer	Bricka	5	
0610	25 85 45 527	1	1 Pressure switch	Tryckvakt	0	11) TURBO
0630	25A 85 79 963	1	1 Pressure switch	Tryckvakt	12	TURBO
0650	29 85 45 519	1	1 Pressure switch	Tryckvakt	2	11) TURBO US, CA
0670	29A 85 79 971	1	1 Pressure switch	Tryckvakt	12	TURBO US, CA, JA (8565830)
0690	29B 85 65 855	1	1 Clip	Clip	5	11) TURBO
0710	30 85 42 920	1	1 Retainer	Fäste	6	11) TURBO
0730	31 85 56 706	1	1 Plate angle	Fästvinkel	11	11) TURBO
0750	32 79 55 001	2	2 Clip nut	Clipsmutter	5	11) TURBO
0770	33 79 22 354	2	2 Screw	Skruv	5	11) TURBO
0790	34 85 33 432	1	1 Hose, inlet manifold- pressure switch	Slang, insugningsrör- tryckvakt	5	11) TURBO
0810	34A 85 33 465	1	1 Hose	Slang	12	SEE PAGE 3-87, 2-116
0830	34B 85 33 465	1	1 Hose, inlet manifold	Slang, insugningsrör	5	11) TURBO
0850	35 83 74 367	1	1 Strap	Spännband	6	A
0870	36 85 02 892	1	1 Bracket	Hållare	4	A
0890	37 71 71 846	1	1 Bulb socket	Lampfällare	4	A
0910	38 71 32 616	1	1 Bulb	Lampa	4	13) AC
0930	39 85 52 770	1	1 Thermostat	Termostat	14	AC
0950	39A 85 65 483	1	1 Thermostat switch	Termobrytare	3	AC
0970	39B 85 66 598	1	1 Nut	Mutter	5	13) AC
0990	40 85 52 788	1	1 Vacuum switch	Vakuumkontakt	5	AC
1010	41 85 53 677	1	1 Clamp	Klämma	5	AC
1030	42 85 53 695	1	1 Gasket	Packning	5	AC
1050	43 80 59 404	2	2 Screw	Skruv	5	AC
1070	44 80 29 944	2	2 Washer	Bricka	5	AC
1090	45 79 15 556	2	2 Washer	Bricka	5	AC


R 4700-900

- Ch. -90801018848, -90802005649, -90806002137.
- Ch. 90801018849, -90802005650, -90806002138-.
- Ch. -90801013494.
- Ch. 90801013495-.

- General 1-A02
- Tools 1-H02
- Engine 2-A02
- Electrical system, Instruments 2-F02
- Transmission 2-J02
- Brakes 3-A02
- Front assembly, Steering 3-B02
- Suspension, Wheels 3-C02
- Body 3-D02
- Accessories, Labels 3-L02
- Numerical register 4-A02

3 GROUP INDEX

- Battery 2-F06
Ignition system 2-F16
Lighting 2-F22
Electrical equipment, other 2-G10
Wiring and fuses 2-H02

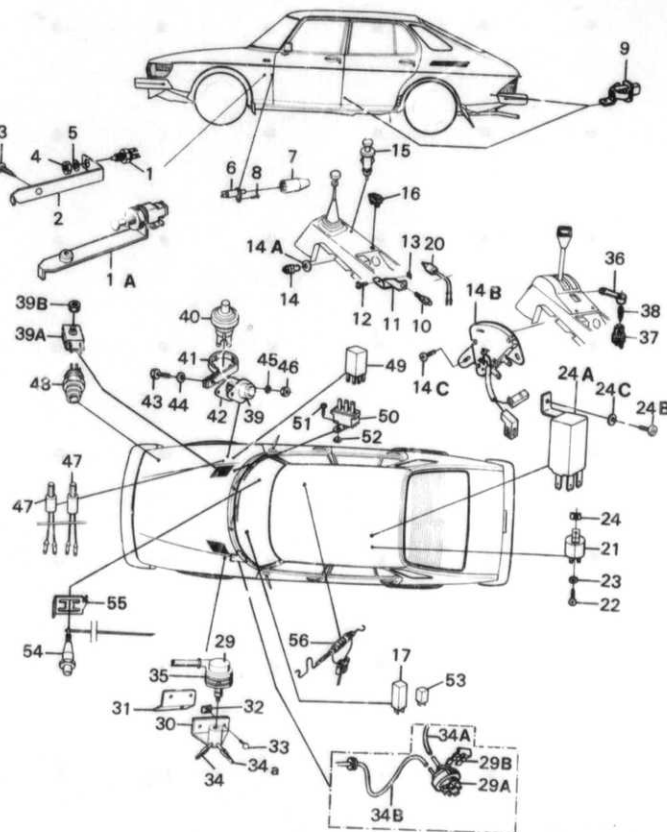

1000

Electric equipment
Operating device

Elektrisk utrustning
Manöverdon


Date
Datum
1987-10

Illustration
Bild nr
R4700

Group
Grupp
3

Page
Sida
47

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR /L	Notes Anmärkning
		900	US				
1000	46	80 50 583	2	2 Nut	Mutter	5	AC
1020	47	85 15 280	1	1 Pressure switch, AC-compressor	Tryckkontakt, AC-kompressor	5	13) AC
1040	47	85 15 298	1	1 Pressure switch, cooling fan relay	Tryckkontakt, kylfläktrelä	4	AC
1060	48	85 52 878	1	1 Thermo-contact	Termokontakt	4	AC, A
1100	49	85 53 272	1	1 Time relay	Tidrelä	4	AC, A
1140	50	85 52 796	1	1 Fuse, compressor	Säkring, kompressor	1	13) AC
1180	51	79 22 271	1	1 Screw	Skruv	5	AC
1200	52	79 68 555	1	1 Clip nut	Clipsmutter	3	AC
1220	53	85 53 463	1	1 Interval relay	Intervallrelä	3	
1240	54	85 58 296	1	1 Contact	Kontakt	3	
1260	55	85 58 304	1	1 Clip	Clip	5	
1280	56	85 19 670	1	1 Switch, seat	Sitskontakt	5	
1290	56	85 30 600	1	1 Switch, seat	Sitskontakt	5	GLE

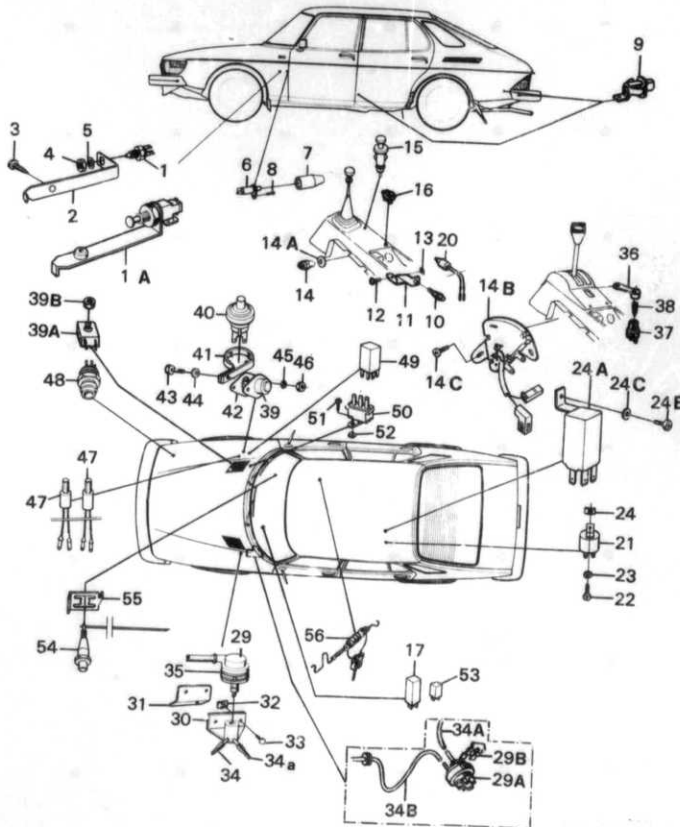


R 4700-900

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

0 General	1-A02
1 Tools	1-M02
2 Engine	2-A02
3 Electrical system, instruments	2-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly, steering	3-B02
7 Suspension, wheels	3-C02
8 Body	3-D02
9 Accessories, labels	3-L02
10 Numerical register	4-A02

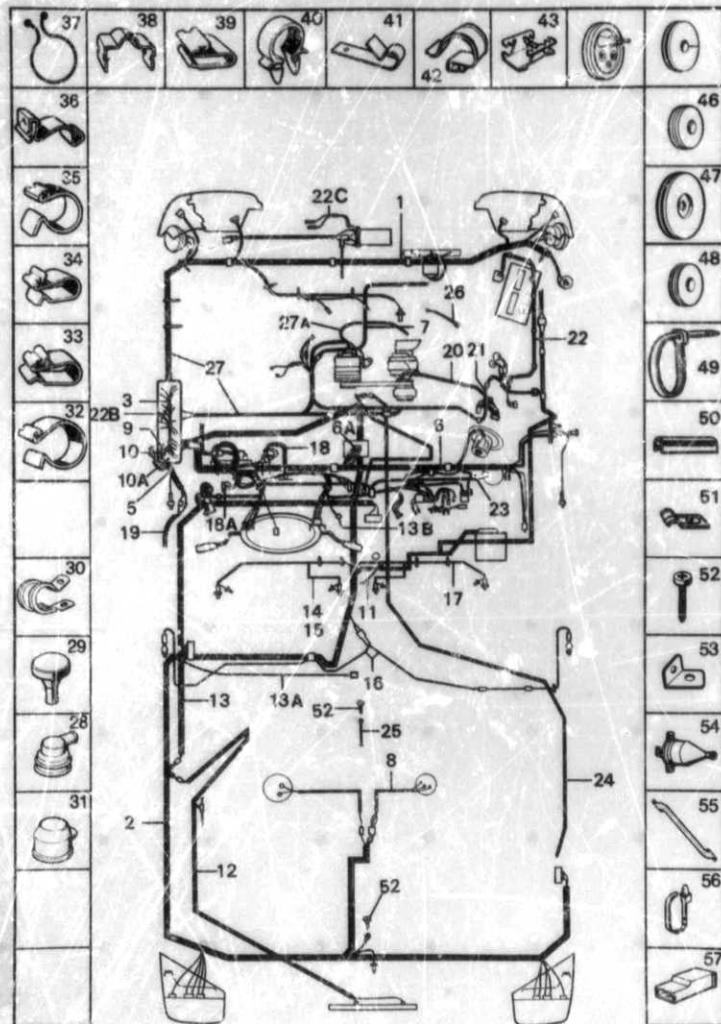

R 9331-900

SAAB
genuine parts
original reservdelar

2-H02

SAAB 900
M79-80

MASTER INDEX

1100

Wiring and fuses
Wiring etc

Ledningar och säkringar
Ledningar etc

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R9331

3

49


Fig. Pos.	Part No Art nr	Quantity/Amount 900	US	Description	Benämning	Notes Anmärkning
0020	1 85 51 857	1		Cable network, front	Ledningsnät, främre	5-1979
0060	1 85 53 504	1		Cable network, front	Ledningsnät, främre	5-1979, UF
0200	1 85 53 520	1		Cable network, front	Ledningsnät, främre	5-1979, UC
0100	1 85 55 796	1		Cable network, front	Ledningsnät, främre	5-1979, CA
0160	1 85 53 812	1		Cable network, front	Ledningsnät, främre	5-1979, TURBO
0200	1 85 51 152	1		Cable network, front	Ledningsnät, främre	5-1979, TURBO US, CA
0205	1 85 51 573	1		Cable network, front	Ledningsnät, främre	5-1980-
0210	1 85 52 050	1		Cable network, front	Ledningsnät, främre	5-1980-, US
0212	1 85 51 951	1		Cable network, front	Ledningsnät, främre	5-1980-, CA
0215	1 85 51 581	1		Cable network, front	Ledningsnät, främre	5-1980-, 11) TURBO
0218	1 85 58 503	1		Cable network, front	Ledningsnät, främre	5-12) TURBO
0220	1 85 51 938	1		Cable network, front	Ledningsnät, främre	5-1980-, 11) TURBO US, CA
0230	1 85 52 050	1		Cable network, front	Ledningsnät, främre	5-12) TURBO US, CA
0240	2 85 51 186	1		Cable network, rear	Ledningsnät, bakre	5-1979
0380	2 85 51 434	1		Cable network, rear	Ledningsnät, bakre	5-1979, UF, CA
0400	2 85 51 426	1		Cable network, rear	Ledningsnät, bakre	5-1979, UC
0420	2 85 51 426	1		Cable network, rear	Ledningsnät, bakre	5-1979, TURBO US, CA
0422	2 85 51 853	1		Cable network, rear	Ledningsnät, bakre	5-1980-
0425	2 85 51 920	1		Cable network, rear	Ledningsnät, bakre	5-1980-, GL, EU, GB
0427	2 35 51 680	1		Cable network, rear	Ledningsnät, bakre	5-1980-, EMS, GLE, TURBO
0430	2 85 51 680	1		Cable network, rear	Ledningsnät, bakre	5-1980-, GLAU
0432	2 85 51 599	1		Cable network, rear	Ledningsnät, bakre	5-1980-, EMS, GLE, TURBO, EU, GB
0433	2 85 51 898	1		Cable network, rear	Ledningsnät, bakre	5-1980-, US
0450	2 85 55 523	1		Cable network, rear	Ledningsnät, bakre	5-1980-, CA, GL, EMS, GLE
0452	2 85 51 598	1		Cable network, rear	Ledningsnät, bakre	5-1980-, CA, TURBO
0460	3 85 52 036	1		Cable network, fuses-relays	Ledningsnät, säkringar	5-1979
0480	3 85 51 896	1		Cable network, fuses-relays	Ledningsnät, säkringar	5-1980-, C, T
0500	3 85 51 821	1		Cable network, fuses-relays	Ledningsnät, säkringar	5-1980-, I
0520	5 85 51 145	1		Cable network, distribution box	Ledningsnät, elcentral	5-1979, GL, EMS, 3CK TURBO
0560	5 85 53 703	1		Cable network, distribution box	Ledningsnät, elcentral	5-1979, GL, EMS, 3CK TURBO, FOR NO, SF
0600	5 85 51 442	1		Cable network, distribution box	Ledningsnät, elcentral	5-1979, GLE, 3CK TURBO
0660	5 85 53 711	1		Cable network, distribution box	Ledningsnät, elcentral	5-1979, GLE, 5 CK TURBO
0720	5 85 51 904	1		Cable network, distribution box	Ledningsnät, elcentral	5-1980-, C, T
0740	5 85 51 813	1		Cable network, distribution box	Ledningsnät, elcentral	5-1980-, C, T, EU, GB
0770	5 85 51 813	1		Cable network, distribution box	Ledningsnät, elcentral	5-1980-, I, WITHOUT ELECTRIC MIRROR
0800	5 85 51 813	1		Cable network, distribution box	Ledningsnät, elcentral	5-1980-, I, WITH ELECTRIC MIRROR
0820	6 85 52 168	1		Cable network, instruments	Ledningsnät, instrument	5-1979, GL, EMS, 3CK TURBO
0840	6 85 53 653	1		Cable network, instruments	Ledningsnät, instrument	5-1979, GL, EMS, 3 CK TURBO, AU, GB
0860	6 85 53 646	1		Cable network, instruments	Ledningsnät, instrument	5-1979, GL, EMS, US, CA
0880	6 85 53 638	1		Cable network, instruments	Ledningsnät, instrument	5-1979, GLE, 5 CK TURBO
0900	6 85 53 661	1		Cable network, instruments	Ledningsnät, instrument	5-1979, GLE
0920	6 85 51 178	1		Cable network, instruments	Ledningsnät, instrument	5-5 CK TURBO, AU, GB
0940						5-1979, GLE, TURBO, US, CA
0960						
0980						
1000						
1020						
1040						
1060						
1080						
1100						
1120						

11. Ch. -90801018648- -90802005643- -90806002137.
12. Ch. 90801018648- -90802005650- -90806002138-.

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

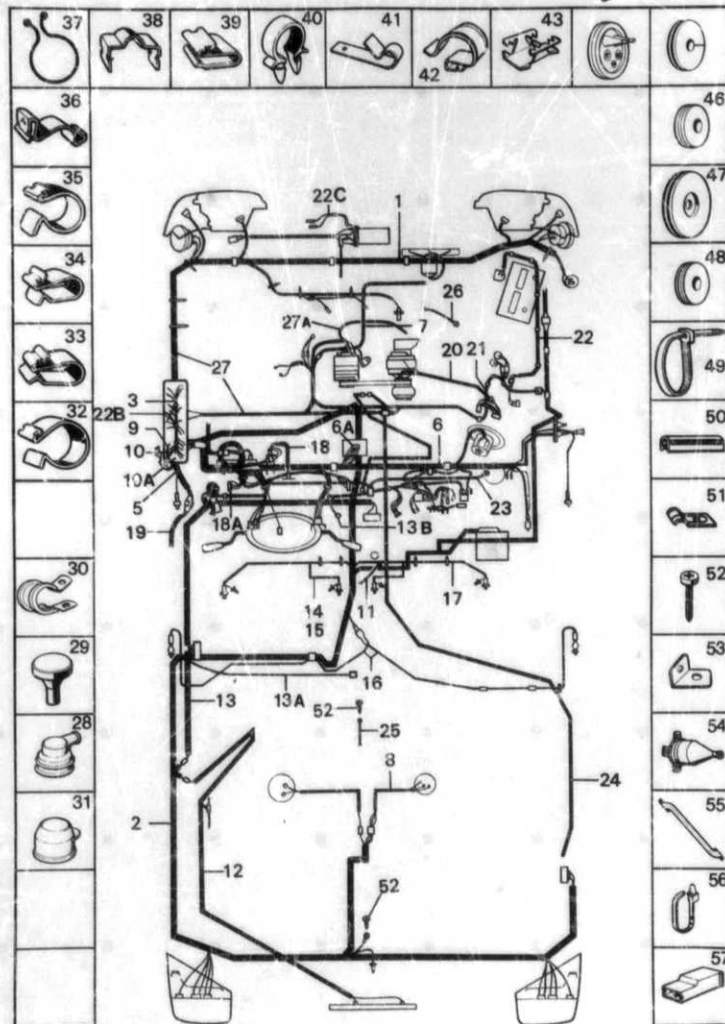

R 9331-900

SAAB
genuine parts
original reservdelar

2-H04

SAAB 900
M79-80

MASTER INDEX

1100

Wiring and fuses
Wiring etc

Ledningar och säkringar
Ledningar etc

Date
Datum
1987-10

Illustration
Bild nr
R9331

Group
Grupp
3

Page
Sida
51

Fig. Pos.	Part No Art nr	Quantity/Amtal		Description	Beräkning	KS Notes
		900	US			SR Anmärkning
1140	6 85 51 847	1		Cable network, instruments	Ledningsnät, instrument	5 1980-, GL, EMS, 3 CK TURBO
1160	6 85 61 672	1		Cable network, instruments	Ledningsnät, instrument	5 1980-, GL, EMS, 3 CK TURBO, EU
1200	6 85 61 870	1		Cable network, instruments	Ledningsnät, instrument	5 1980-, GL, EMS, 3 CK TURBO, GB, AU
1220	6 85 61 854	1		Cable network, instruments	Ledningsnät, instrument	5 91980- GLEMS, GLE, US, CA
1240	6 85 61 722	1		Cable network, instruments	Ledningsnät, instrument	5 1980-, GLE, 5 CK TURBO
1260	6 85 61 706	1		Cable network, instruments	Ledningsnät, instrument	5 1980-, GLE, 5 CK TURBO, EU
1280	6 85 61 888	1		Cable network, instruments	Ledningsnät, instrument	5 1980-, GLE, 5 CK TURBO, GB, AU
1300	6 85 61 382	1		Cable network, instruments	Ledningsnät, instrument	5 101 GLE, TURBO, US, CA
1320	85 78 320	1		Cable network, micro switch, selector	Ledningsnät, mikro- brytare, selektor	
1340	7 85 51 574	1		Cable network, engine	Ledningsnät, motor	3 -1979, CM, TM
1360	7 85 52 150	1		Cable network, engine	Ledningsnät, motor	3 -1979, TA
1380	7 85 53 547	1		Cable network, engine	Ledningsnät, motor	5 -1979, IA
1400	7 85 65 275	1		Cable network, engine	Ledningsnät, motor	3 -1979, TURBO, IM
1420	7 85 51 474	1		Cable network, engine	Ledningsnät, motor	3 1980-, C, T
1440	7 85 66 150	1		Cable network, engine	Ledningsnät, motor	3 1980-, I
1460	7 85 66 218	1		Cable network, engine	Ledningsnät, motor	3 1980-, I FOR US
1480	8 85 38 068	1		Cable network, fuel transmitter	Ledningsnät, tankgivare	6 C.T
1500	8 85 38 027	1		Cable network, fuel transmitter	Ledningsnät, tankgivare	6 I
1520	9 85 57 050	1		Cable network, fuel pump relay	Ledningsnät, bensin- pumpsrelä	6 TURBO, US, CA
1540	10 85 55 849	1		Cable network, automatic transmission	Ledningsnät, automat- läda	5 -1979
1560	10A 85 65 863	1		Cable network, pressure switch	Ledningsnät, tryck- vakt	12)
1580	11 85 09 507	1		Cable network, gear indicator	Ledningsnät, växel- indikator	6 A
1600	12 85 22 909	1		Cable network, trunk door	Ledningsnät, bagage- dörr	6 -1979
1620	12 85 62 001	1		Cable network, trunk door	Ledningsnät, bagage- dörr	6 1980-
1640	12 85 61 532	1		Cable network, trunk door	Ledningsnät, bagage- dörr	6 1980-
1660	13 85 22 997	1		Cable network, inner light	Ledningsnät, inner- belysning	5
1680	13A 95 67 215	1		Cable network, inner light	Ledningsnät, inner- belysning	5 29)
1700	13B 85 29 265	1		Cable network, ash-tray lighting	Ledningsnät, ask- kopsbelysning	5
1720	14 85 52 242	1		Cable network, electrical pad	Ledningsnät, elslits	5 GLEMS, 3CK TURBO
1740	15 85 52 259	1		Cable network, electrical pad	Ledningsnät, elslits	5 GLE, 5CK TURBO
1760	16 85 11 875	1		Cable network, door switches	Ledningsnät, dörr- kontakter	5 -1979
1780	17 85 33 564	1		Cable network, seat belt warning	Ledningsnät, bältes- varning	6
1800	18 85 53 695	1		Cable network, speed transmitter	Ledningsnät, hastighetsgivare	6
2200						

9. Without electric mirror

10. With electric mirror


12. Ch. 90801018849 - 90802005650 - 90806002138 -

29. For cars with centre mounted dome light

- 0 General 1-A02
- 1 Tools 1-H02
- 2 Engine 2-A02
- 3 Electrical system, Instruments 2-F02
- 4 Transmission 2-J02
- 5 Brakes 3-A02
- 6 Front assembly, Steering 3-B02
- 7 Suspension, Wheels 3-C02
- 8 Body 3-D02
- 9 Accessories, Labels 3-L02
- 10 Numerical register 4-A02

3 GROUP INDEX

- Battery 2-F08
- Ignition system 2-F16
- Lighting 2-F22
- Electrical equipment, other 2-G10
- Wiring and fuses 2-H02

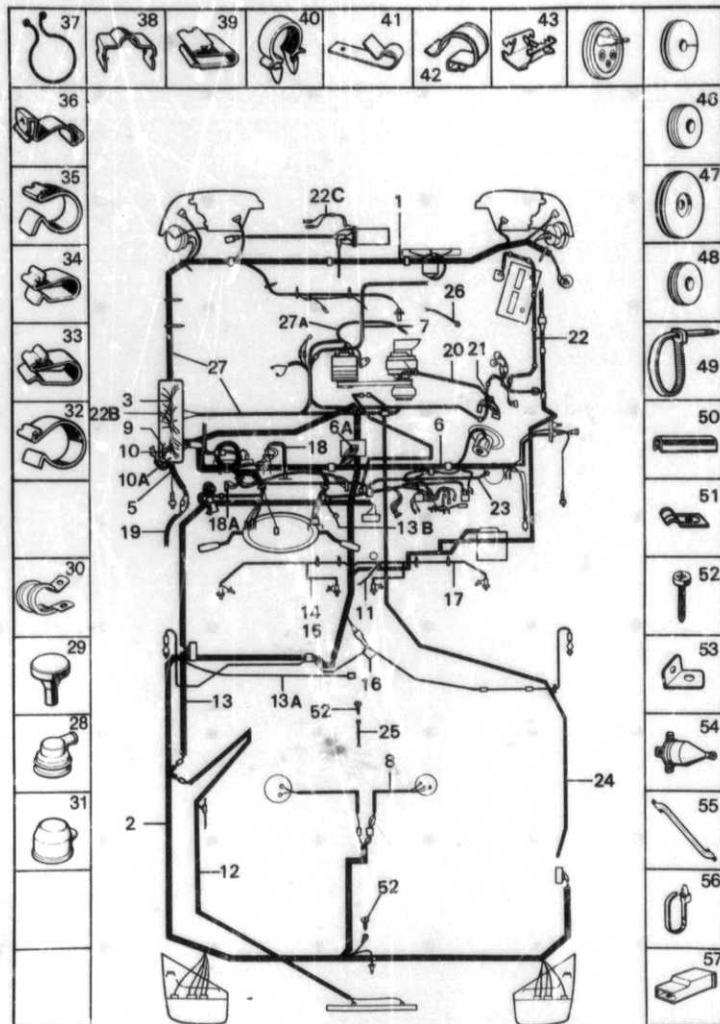

R 9331-900

SAAB
genuine parts
original reserved

2-H06

SAAB 900
M79-80

MASTER INDEX

1100

Wiring and fuses
Wiring etc

Ledningar och säkringar
Ledningar etc

Date
Datum
1987-10

Illustration
Bild nr
R9331

Group
Grupp
3

Page
Sida
53


Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR L	Notes Anmärkning
		900	US				
2220	18 85 53 729	1		Cable network, speed transmitter	Ledningsnät, hastighetsgivare	6	AU, G9
2240	18A 85 66 871	1		Cable network, pressure switch	Ledningsnät, tryckvakt	12)	
2250	19 85 53 687	2		Cable network, electric mirror	Ledningsnät, elspegel	5	
2260	20 85 52 754	1		Cable network, AC-compressor - fuse	Ledningsnät, AC-kompressor - säkring	6	13)
2280	20 85 66 549	1		Cable network, AC-compressor - fuse	Ledningsnät, AC-kompressor - säkring	14)	
2320	21 85 52 762	1		Cable network, AC	Ledningsnät, AC	6	13) M
2330	21 85 66 556	1		Cable network, AC	Ledningsnät, AC	14) M	
2331	21 85 58 611	1		Cable network, AC	Ledningsnät, AC	6	13) A
2350	21 85 66 564	1		Cable network, AC	Ledningsnät, AC	14) A	
2380	22 85 58 629	1		Cable network, thermo-contact	Ledningsnät, termo-kontakt	6	13)
2400	22A 85 61 359	1		Cable network, position light	Ledningsnät, positionsljus	0	DK
2420	22B 85 64 957	1		Cable network, day-lights	Ledningsnät, varsel-ljus	6	1980-, NO, SF
2440	22C 85 65 749	1		Cable, ignition coil	Ledning, tändspole	6	1980, ME
2490	23 85 57 639	1		Cable, speaker	Ledning, högtalare	6	1)
2500	24 85 57 647	1		Aerial-cable	Antennkabel	5	1)
2520	25 85 19 286	1		Grounding cable, trunk door	Jordningskabel, bagage-rumsdörr	5	
2540	26 85 55 196	1		Grounding cable, lambda	Jordningskabel, lambda	6	-1979
2550	27 85 66 572	1		Cable network, AC, fuse box	Ledningsnät, AC, el-central	14)	ME
2560	27A 95 66 720	1		Cable B +	Kabel B +	5	GENERATOR-STARTER
2620	28 85 40 213	1		Rubber casing	Gummikåpa	4	PRESSURE SWITCH
2640	29 94 92 455	1		Plug	Plugg	3	HEATGUARD EXHAUST SYSTEM
2645	30 85 66 135	1		Clip, battery cable	Clip, batterikabel	5	TO BE USED WITH 8566135
2650	30A 00 19 929	1		Screw	Skruv	5	TO BE USED WITH 8566135
2660	30B 80 29 555	1		Nut	Mutter	5	TO BE USED WITH 8566135
2700	31 85 30 851	1		Rubber cover	Gummikåpa	5	THERMO-SWITCH
2730	32 85 53 737	1		Clip, front member	Clip, frontbalk	5	
2740	32 85 09 127	2		Clip, front member	Clip, frontbalk	5	
2760	33 71 56 409	2		Clip, cooler member	Clip, kylarbalk	5	
2780	33 71 56 409	1		Clip, front floor	Clip, främre golv	5	
2800	33 71 56 409	1		Clip, thermo-contact	Clip, termokontakt	5	AC, A
2820	34 79 51 783	1		Clip, door	Clip, dörr	5	GLE, T
2840	34 71 56 409	2		Clip, rear seat	Clip, baksäte	5	
2860	34 71 56 409	1		Clip, lambda sonde	Clip, lambdasond	5	
2880	35 79 33 443	2		Clip, sonde cable	Clip, sondkabel	5	
2900	36 86 02 526	3		Clip, wheel housing LH	Clip, hjulhus V	5	CK
2920	36 85 58 066	2		Clip, rear cable	Clip, bakre ledningsnät	5	
2940	36 85 52 192	1		Clip, seat	Clip, stol	5	1980-
2960	37 85 11 065	2		Clip, seat	Clip, stol	5	
3000	38 85 52 192	1		Clip, seat	Clip, stol	0	-1979
3020	39 85 02 643	2		Clip, door switch cable	Clip, dörrkontakt	5	-1979, 5 CK
3040	40 85 30 917	1		Clip, ignition coil	Clip, tändspolekabel	5	
3060	41 85 28 564	3		Clip, dash panel	Clip, torped	5	
3080	42 85 53 737	2		Clip, power brake	Clip, bromsservo	5	
3100	42 85 53 737	3		Clip, instrument member	Clip, instrumentbalk	5	
3120							
3140							
3160							

1. EMS, GLE, TURBO and US, CA
12. Ch. 90801018849- 90802005650- 90806002138-.
13. Ch. -90801013494.
14. Ch. 90801013495-.

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

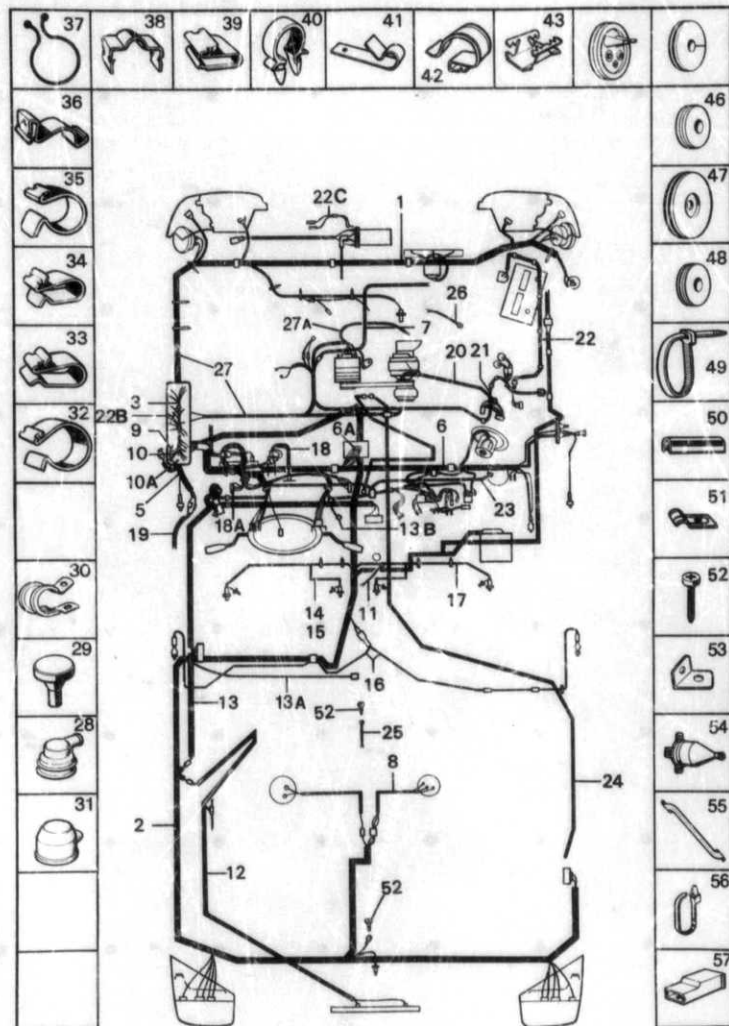

R 9331-900

SAAB
genuine parts
original reservdelar

2-H08

SAAB 900
M79-80

MASTER INDEX

1100

Wiring and fuses
Wiring etc

Ledningar och säkringar
Ledningar etc

Date
Datum
1987-10

Illustration
Bild nr
R9331

Group
Grupp
3

Page
Sida
55

Fig. Pos.	Part No Art nr	Quantity/Ansl		Description	Benämning	K/S S/R L	Notes Anmärkning
		900	US				
3180	43	73 92 772	1	1 Clip, speaker	Clip, högtalare	5	
3200	44	85 52 713	1	1 Grommet, wheel house RH	Bussning, hjulhus H	5	
3220	45	73 09 370	6	6 Grommet, door	Bussning, dörr	5	-1979, GLE, TURBO
3260	45	79 61 998	2	2 Bushing	Bussning, dörr	5	1980-, GLE, TURBO
3280	45	79 33 464	1	1 Grommet, trunk door	Bussning, bagagerumsdörr	3	
3300	47	79 51 980	1	1 Grommet, trunk door	Bussning, bagagerumsdörr	5	
3320	47	79 51 980	4	4 Grommet, door	Bussning, dörr	5	-1979
3340	48	79 33 518	1	1 Grommet	Bussning	5	AC
3380	49	79 71 880	3	3 Strap	Spännband	4	
3400	49	55 17 104	1	1 Strap	Spännband	4	AC
3440	50	84 97 471	1	1 Strip, rear seat	List, baksäte	6	SCK
3460	51	83 71 551	1	1 Clamp, trunk door	Klamma, bagagerumsdörr	0	
3500	52	79 22 347	1	1 Screw, earth cable, trunk door	Skruv, jordkabel, bagagerumsdörr	5	
3520	52	79 22 818	2	2 Screw, earth cable, trunk door	Skruv, jordkabel, bagagerumsdörr	5	
3540	53	85 52 655	1	1 Retainer	Hållare	6	
3560	54	85 52 721	4	4 Cover	Skydd	5	PART OF CABLE NETWORK FRONT
3580	55	85 61 433	1	1 Grommet	Bussning	6	PART OF CABLE NETWORK TRUNKDOOR
3600	56	85 52 663	2	2 Strap	Spännband	4	L=200 MM
3620	57	85 41 229	1	1 Insulation	Isolering	5	29)

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

29. For cars with centre mounted dome light

1110

Wiring and fuses
Connectors, cable
terminals, 1979

Ledningar och säkringar
Kontakthus, ledningsskor,
1979

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R9332

3

57


Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	Notes Anmärkning
		900	US		
0010	1 71 55 112	X	X Contact housing, female, 1-pole	Kontakthus, hylsa, 1-polig	4 JOINT, STARTER
0020	1A 79 72 029	X	X Cable terminal	Ledningssko	5 AREA, 1.0-2.5 MM2
0040	1A 85 03 476	X	X Cable terminal	Ledningssko	5 AREA, 1.0-2.5 MM2
0050	2 71 55 120	X	X Contact housing, male, 1-pole	Kontakthus, stift, 1-polig	4 FUSE BOX, GROUND TANK
0060	2A 85 22 542	X	X Cable terminal	Ledningssko	5 AREA, 1.5 MM2
0070	2A 71 55 724	X	X Cable terminal	Ledningssko	5 AREA, 0.8-2.5 MM2 FOR DISTRIBUTOR
0080	3 85 30 115	X	X Insulation, male, 1-pole	Isolering, stift, 1-polig	4
0090	3A 85 30 107	X	X Cable terminal	Ledningssko	3 AREA, 0.5-1.0 MM2
0100	4 71 55 096	X	X Contact housing, female, 2-pole	Kontakthus, hylsa, 2-polig	4 FAN UNIT, REAR DEMIST, NUMBER PLATE LIGHT, JOINT, RADIO, PRESSURE SWITCH, THERMO SWITCH
0110	4A 79 72 029	X	X Cable terminal	Ledningssko	5 AREA, 1.0-2.5 MM2
0120	5 71 55 104	X	X Contact housing, male, 2-pole	Kontakthus, stift, 2-polig	4 ASH TRAY LIGHT, JOINT
0130	5A 85 22 542	X	X Cable terminal	Ledningssko	5 AREA, 1.5 MM2
0140	6 85 04 771	X	X Contact housing, female, 2-pole	Kontakthus, hylsa, 2-polig	4 KEY WARNING
0150	6A 85 03 153	X	X Cable terminal	Ledningssko	5 AREA, 0.5-1.0 MM2
0160	7 85 04 789	X	X Contact housing, male, 2-pole	Kontakthus, stift, 2-polig	4 ELECTRIC PAD, SWITCH SEAT, SAFETY BELT SWITCH
0170	7A 85 16 817	X	X Cable terminal	Ledningssko	5 AREA, 0.5-1.0 MM2
0180	8 85 21 601	X	X Contact housing, male, 2-pole	Kontakthus, stift, 2-polig	4 AUXILIARY AIR VALVE, GUIDE PRESSURE VALVE, THERMO TIME SWITCH
0190	8A 85 22 617	X	X Cable terminal	Ledningssko	5 AREA, 1.0 MM2
0200	8B 85 21 619	X	X Rubber protection	Gummiskydd	4
0210	9 85 33 721	X	X Contact housing, female, 2-pole	Kontakthus, hylsa, 2-polig	4 TIMING VALVE, STARTER VALVE
0220	9A 85 22 617	X	X Cable terminal	Ledningssko	5 AREA, 1.0 MM2
0230	9B 85 21 619	X	X Rubber protection	Gummiskydd	4
0240	10 85 53 869	X	X Contact housing, female, 2-pole	Kontakthus, hylsa, 2-polig	4 SPEED SENSOR INSTRUMENTS
0250	10A 85 03 179	X	X Cable terminal	Ledningssko	5 AREA, 1.0-2.5 MM2
0260	11 85 56 896	X	X Contact housing, female, 2-pole	Kontakthus, hylsa, 2-polig	4 VACUUM SWITCH
0270	11A 79 72 029	X	X Cable terminal	Ledningssko	5 AREA, 1.0-2.5 MM2
0280	12 85 56 904	X	X Contact housing, female, 2-pole	Kontakthus, hylsa, 2-polig	4 THERMO SWITCH
0290	12A 79 72 029	X	X Cable terminal	Ledningssko	5 AREA, 1.0-2.5 MM2
0300	13 85 58 538	X	X Contact housing, female, 2-pole	Kontakthus, hylsa, 2-polig	4 WASHER PUMP, HEADLIGHT WIPER MOTOR
0310	13A 79 72 029	X	X Cable terminal	Ledningssko	5 AREA, 1.0-2.5 MM2
0320	14 85 58 546	X	X Contact housing, male, 2-pole	Kontakthus, stift, 2-polig	4 JOINT
0330	14A 79 72 029	X	X Cable terminal	Ledningssko	5 AREA, 1.5 MM2

R 9332-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

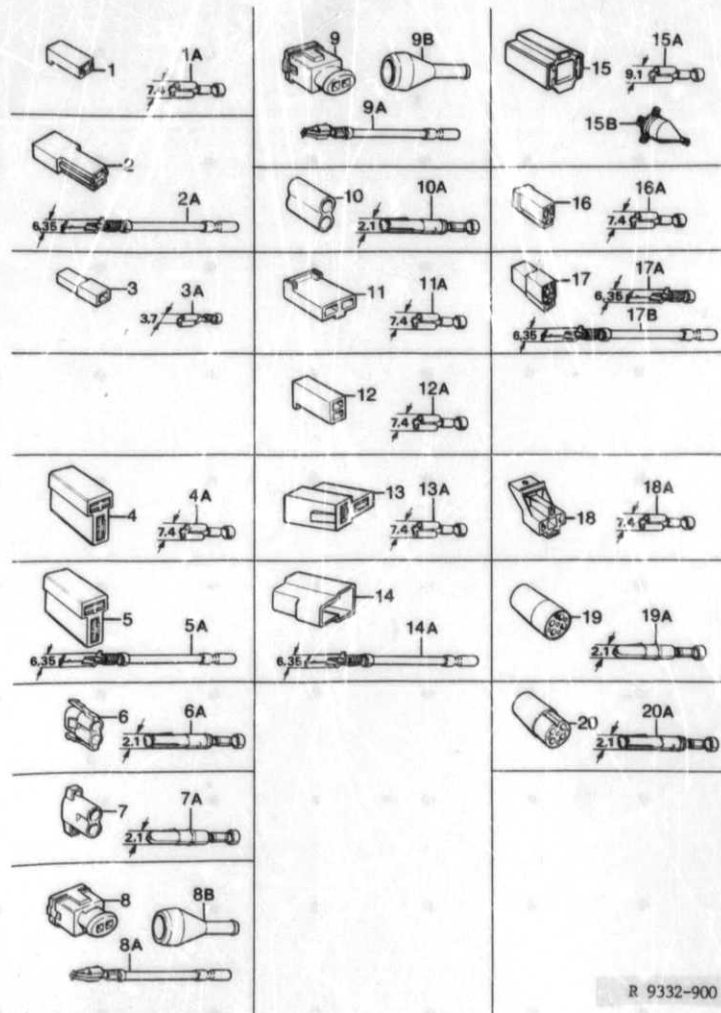

R 9332-900

1110

Wiring and fuses
Connectors, cable
terminals, 1979

Ledningar och säkringar
Kontakthus, ledningsskor,
1979

Date
Datum
1987-10

Illustration
Bild nr
R9332

Group
Grupp
3


Page
Sida
59

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S S/R L	Notes Anmärkning
		900						
				US				
0630	15	71 55 021	X		X Contact housing, female, 3-pole	Kontakthus, hylsa, 3-polig	4	HEADLIGHT
0640	15A	71 55 013	X		X Cable terminal	Ledningssko	5	AREA, 1,3-3,4 MM2
0660	15B	85 52 721	X		X Rubber protection	Gummskydd	4	
0670	16	73 42 892	X		X Contact housing, female, 3-pole	Kontakthus, hylsa, 3-polig	4	INTERIOR LIGHT, JOINT
0680	16A	79 72 029	X		X Cable terminal	Ledningssko	5	AREA, 1,0-2,5 MM2
0690	17	73 42 900	X		X Contact housing, male, 3-pole	Kontakthus, stift, 3-polig	4	FUEL LEVEL TRANSMITTER, JOINT
0700	17A	85 16 957	X		X Cable terminal	Ledningssko	5	AREA, 4,0-6,0 MM2
0710	17B	85 22 542	X		X Cable terminal	Ledningssko	5	AREA, 1,5 MM2
0720	18	85 03 484	X		X Contact housing, female, 4-pole	Kontakthus, hylsa, 4-polig	4	SAFETY BELT WARNING, DOOR SWITCH
0730	18A	79 72 029	X		X Cable terminal	Ledningssko	5	AREA, 1,0-2,5 MM2
0740	18A	79 68 068	X		X Cable terminal	Ledningssko	5	AREA, 4,0-6,0 MM2
0750	19	85 30 081	X		X Contact housing, male, 4-pole	Kontakthus, stift, 4-polig	4	ELECTRIC MIRROR
0760	19A	85 16 817	X		X Cable terminal	Ledningssko	5	AREA, 0,5-1,0 MM2
0770	20	85 30 099	X		X Contact housing, female, 4-pole	Kontakthus, hylsa, 4-polig	4	ELECTRIC MIRROR
0780	20A	85 03 153	X		X Cable terminal	Ledningssko	5	AREA, 0,5-1,0 MM2
0790					CONTINUED ON NEXT PAGE	FORTSÄTTNING PÅ NÄSTA SIDA		

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

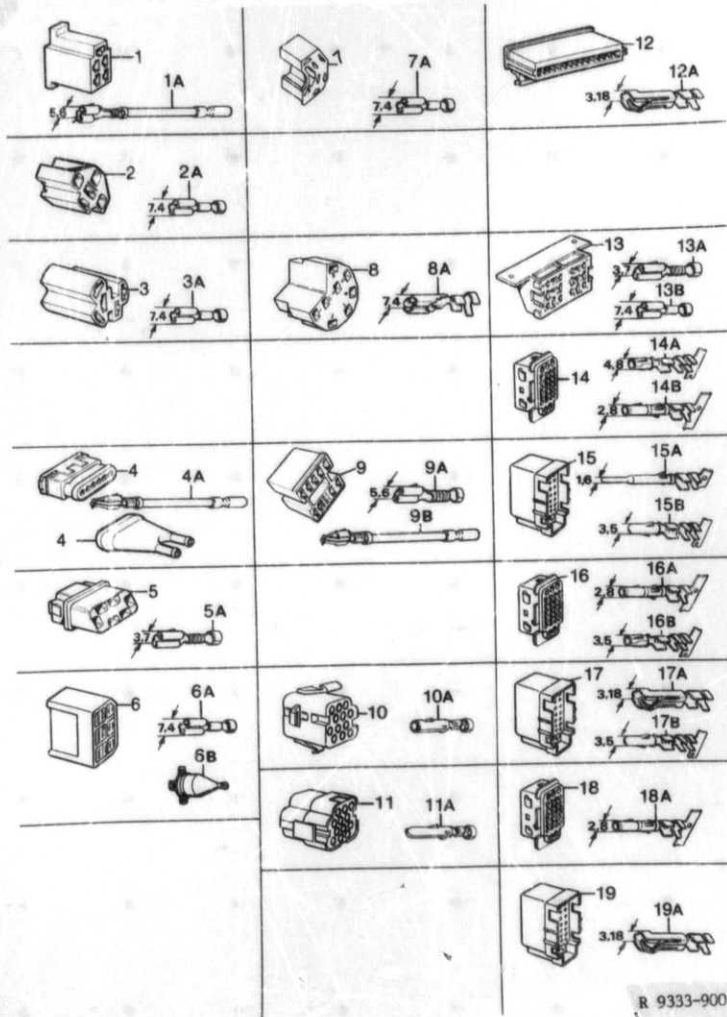

R 9333-900

1120

Wiring and fuses
Connectors, cable
terminals, 1979

Ledningar och säkringar
Kontakthus, ledningsskor,
1979

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10


R9333

3

61

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	Notes Anmärkning
		900	US			
0010	1 85 16 890	X		X Contact housing, female, 5-pole	Kontakthus, hylsa, 5-polig	4 WINDSHIELD WIPER MOTOR
0020	1A 85 22 567	X		X Cable terminal	Ledningssko	5 AREA, 0.25-1.6 MM2
0030	2 85 33 697	X		X Contact housing, female, 5-pole	Kontakthus, hylsa, 5-polig	4 RESISTOR FAN UNIT
0040	2A 79 72 029	X		X Cable terminal	Ledningssko	5 AREA, 1.0-2.5 MM2
0050	2A 79 68 068	X		X Cable terminal	Ledningssko	5 AREA, 4.0-6.0 MM2
0060	3 85 44 397	X		X Contact housing, female, 5-pole	Kontakthus, hylsa, 5-polig	4 SWITCH HEATING FAN
0070	3A 79 72 029	X		X Cable terminal	Ledningssko	5 AREA, 1.0-2.5 MM2
0080	4 85 39 983	X		X Contact housing, female, 6-pole	Kontakthus, hylsa, 6-polig	4 ELECTRONIC UNIT, IGNITION COIL
0090	4A 85 22 617	X		X Cable terminal	Ledningssko	5 AREA, 1.0-2.5 MM2
0100	4B 85 40 015	X		X Rubber protection	Gummiskydd	4
0110	5 85 40 569	X		X Contact housing, female, 6-pole	Kontakthus, hylsa, 6-polig	4 SWITCH ELECTRIC MIRROR
0120	5A 85 09 846	X		X Cable terminal	Ledningssko	5 AREA, 0.5-1.4 MM2
0130	6 85 52 200	X		X Contact housing, female, 6-pole	Kontakthus, hylsa, 6-polig	4 INDICATOR LIGHT, SPEED TRANSMITTER
0140	6A 79 72 029	X		X Cable terminal	Ledningssko	5 AREA, 1.0-2.5 MM2
0150	6B 85 52 721	X		X Rubber protection	Gummiskydd	4
0160	7 85 33 705	X		X Contact housing, female, 7-pole	Kontakthus, hylsa, 7-polig	4 SWITCH WINDSHIELD WIPER
0170	7A 79 72 029	X		X Cable terminal	Ledningssko	5 AREA, 1.0-2.5 MM2
0180	7A 79 68 068	X		X Cable terminal	Ledningssko	5 AREA, 4.0-6.0 MM2
0190	8 85 44 363	X		X Contact housing, female, 8-pole	Kontakthus, hylsa, 8-polig	4 SWITCH LIGHT
0200	8A 85 41 203	X		X Cable terminal	Ledningssko	5 AREA, 0.5-1.5 MM2
0210	9 85 44 371	X		X Contact housing, female, 10-pole	Kontakthus, hylsa, 10-polig	4 SWITCH REAR DEMIST, SWITCH WARNING FLASHER
0220	9A 85 44 389	X		X Cable terminal	Ledningssko	5 AREA, 0.5-1.5 MM2
0230	9B 85 22 617	X		X Cable terminal	Ledningssko	5 AREA, 1.0-2.8 MM2
0240	10 85 53 497	X		X Contact housing, female, 12-pole	Kontakthus, hylsa, 12-polig	4 COWL
0250	10A 85 44 298	X		X Cable terminal	Ledningssko	5 AREA, 0.5-2.0 MM2
0260	11 85 53 505	X		X Contact housing, male, 11-pole	Kontakthus, stift, 11-polig	4 COWL
0270	11A 85 44 314	X		X Cable terminal	Ledningssko	5 AREA, 0.5-2.0 MM2
0280	12 85 44 348	X		X Contact housing, female, 14-pole	Kontakthus, hylsa, 14-polig	4 INSTRUMENTS
0290	12A 85 60 278	X		X Cable terminal	Ledningssko	5 AREA, 0.5-1.0 MM2
0300	13 85 51 865	X		X Contact housing, female, 18-pole	Kontakthus, hylsa, 18-polig	4 FLASHER, INTERVAL RELAY
0310	13A 85 09 846	X		X Cable terminal	Ledningssko	5 AREA, 0.5-1.4 MM2
0320	13B 79 72 029	X		X Cable terminal	Ledningssko	5 AREA, 1.0-2.5 MM2
0330	14 85 44 207	X		X Contact housing, female, 20-pole	Kontakthus, hylsa, 20-polig	4 COWL WHITE
0340	14A 85 44 306	X		X Cable terminal	Ledningssko	5 AREA, 2.0-4.0 MM2
0350	14B 85 21 726	X		X Cable terminal	Ledningssko	5 AREA, 0.5-1.5 MM2

0 General	1-A02
1 Tools	1-H02
2 Engine	2-A02
3 Electrical system, Instruments	2-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly, Steering	3-B02
7 Suspension, Wheels	3-C02
8 Body	3-D02
9 Accessories, Labels	3-L02
10 Numerical register	4-A02
3 GROUP INDEX	
Battery	2-F08
Ignition system	2-F15
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

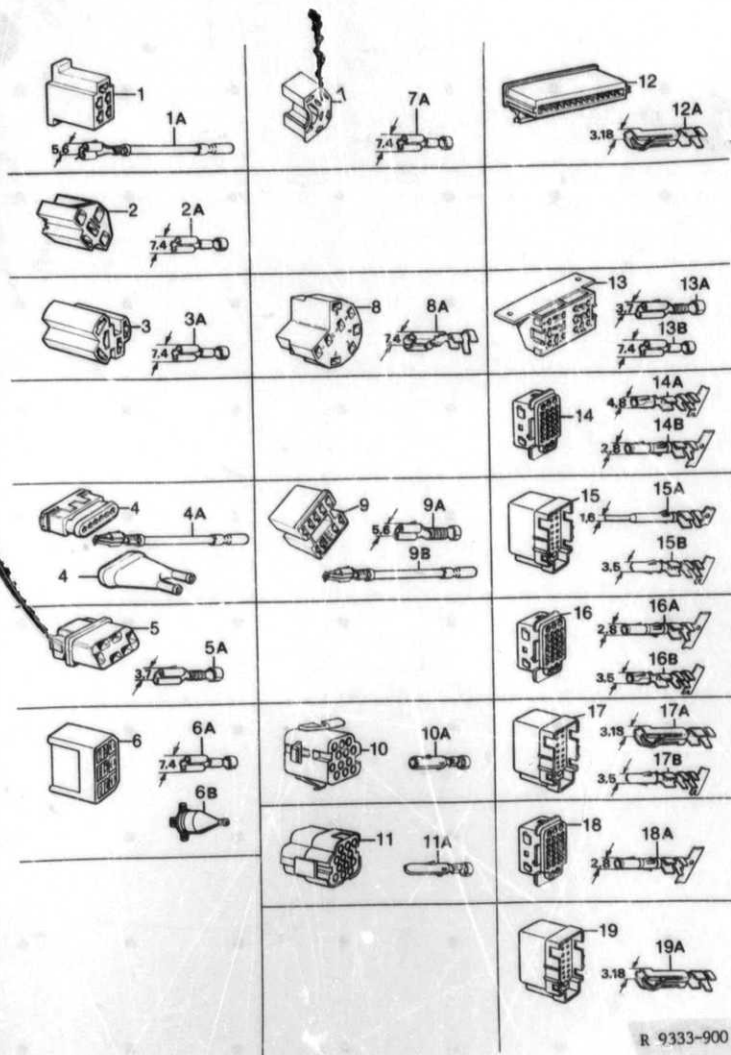

R 9333-900

1120

Wiring and fuses
Connectors, cable
terminals, 1979

Ledningar och säkringar
Kontakthus, ledningsskor,
1979

Date
Datum
1987-10

Illustration
Bild nr
R9333

Group
Grupp
3


Page
Sida
63

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K S SR /	Notes Anmärkning
		900		US				
0710	15	85 44 215	X		X Contact housing, male, 29-pole	Kontakthus, stift, 29-polig	4	COWL, WHITE
0720	15A	85 44 272	X		X Cable terminal	Ledningssko	5	AREA, 0.5-1.5 MM2
0730	15B	85 44 322	X		X Cable terminal	Ledningssko	5	AREA, 2.0-4.0 MM2
0750	16	85 44 223	X		X Contact housing, female, 29-pole	Kontakthus, hylsa, 29-polig	4	COWL, RED
0760	16A	85 21 726	X		X Cable terminal	Ledningssko	5	AREA, 0.5-1.5 MM2
0770	16B	85 44 306	X		X Cable terminal	Ledningssko	5	AREA, 2.0-4.0 MM2
0780	17	85 44 231	X		X Contact housing, male, 29-pole	Kontakthus, stift, 29-polig	4	COWL, RED
0790	17A	85 60 278	X		X Cable terminal	Ledningssko	5	AREA, 0.5-1.0 MM2
0810	17B	85 44 322	X		X Cable terminal	Ledningssko	5	AREA, 2.0-4.0 MM2
0820	18	85 44 249	X		X Contact housing, female, 29-pole	Kontakthus, hylsa, 29-polig	4	COWL, BLACK
0830	18A	85 21 726	X		X Cable terminal	Ledningssko	5	AREA, 0.5-1.5 MM2
0840	19	85 44 256	X		X Contact housing, male, 29-pole	Kontakthus, stift, 29-polig	4	COWL, BLACK
0850	19A	85 60 278	X		X Cable terminal	Ledningssko	5	AREA, 0.5-1.0 MM2

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

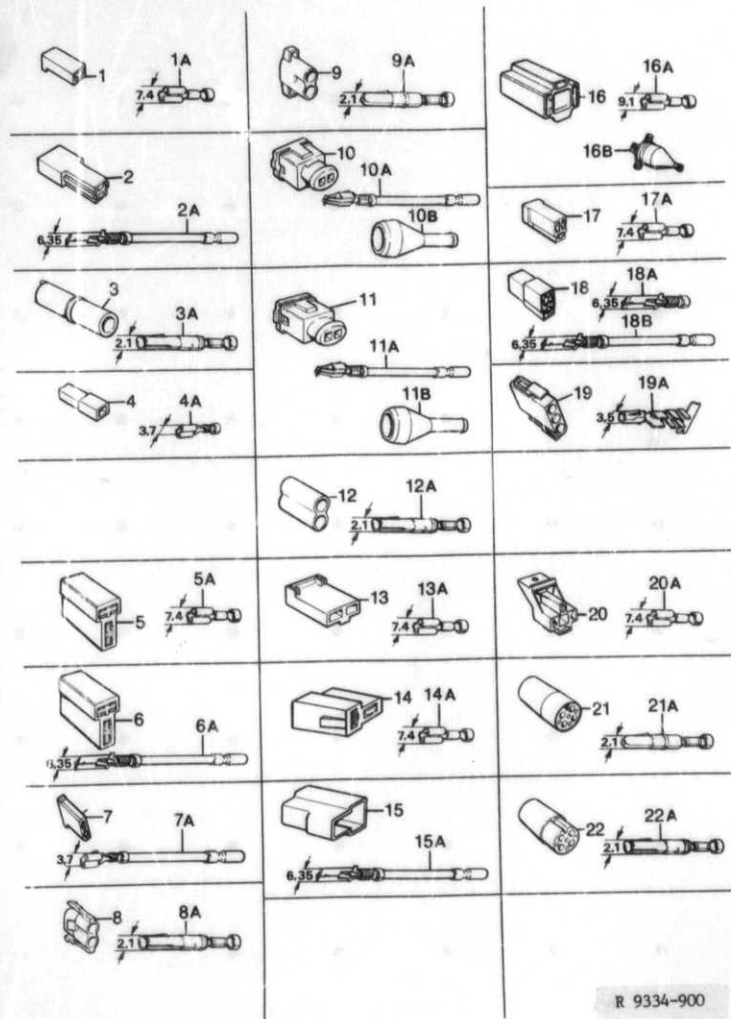

R 9334-900

1130

Wiring and fuses
Connectors, cable
terminals, 1980

Ledningar och säkringar
Kontakthus, ledningskor,
1980

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R9334

3


65

Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	Notes Anmärkning
		900	US		
0010	1 71 55 112	X	X Contact housing, female, 1-pole	Kontakthus, hylsa, 1-polig	4 JOINT, STARTER
0020	1A 79 72 029	X	X Cable terminal	Ledningssko	5 AREA, 1,0-2,5 MM2
0040	1A 85 03 476	X	X Cable terminal	Ledningssko	5 AREA, 1,0-2,5 MM2
0050					
0060	2 71 55 120	X	X Contact housing, male, 1-pole	Kontakthus, stift, 1-polig	4 GROUND TANK, JOINT, PRESSURE SWITCH
0070	2A 85 22 542	X	X Cable terminal	Ledningssko	5 AREA, 1,5 MM2
0080					
0090	3 85 16 932	X	X Contact housing, female, 1-pole	Kontakthus, hylsa, 1-polig	4 SAFETY BELT WARNING
0092	3A 85 03 153	X	X Cable terminal	Ledningssko	5 AREA, 0,5-1,0 MM2
0093					
0094					
0095					
0100	4 85 30 115	X	X Insulation, male, 1-pole	Isolering, stift, 1-polig	4
0110	4A 85 30 107	X	X Cable terminal	Ledningssko	3 AREA, 0,5-1,0
0120					
0130					
0140	5 71 55 096	X	X Contact housing, female, 2-pole	Kontakthus, hylsa, 2-polig	4 FAN UNIT, ASH TRAY, JOINT, RADIO
0150					
0160					
0180	5A 79 72 029	X	X Cable terminal	Ledningssko	5 AREA, 1,0-2,5 MM2
0190					
0200	6 71 55 104	X	X Contact housing, male, 2-pole	Kontakthus, stift, 2-polig	4 PRESSURE SWITCH AC, JOINT
0210	6A 85 22 542	X	X Cable terminal	Ledningssko	5 AREA, 1,5 MM2
0220					
0230	7 83 78 630	X	X Contact housing, female, 2-pole	Kontakthus, hylsa, 2-polig	4 SOLENOID VALVE
0232					
0233	7A 85 22 575	X	X Cable terminal	Ledningssko	5 AREA, 0,25-1,6 MM2
0234					
0235					
0240	8 85 04 771	X	X Contact housing, female, 2-pole	Kontakthus, hylsa, 2-polig	4 KEY WARNING
0250					
0260	8A 85 03 153	X	X Cable terminal	Ledningssko	5 AREA, 0,5-1,0 MM2
0270					
0280					
0290	9 85 04 789	X	X Contact housing, male, 2-pole	Kontakthus, stift, 2-polig	4 ELECTRIC PAD, SWITCH SEAT
0300	9A 85 16 817	X	X Cable terminal	Ledningssko	5 AREA, 0,5-1,0 MM2
0310					
0320	10 85 21 601	X	X Contact housing, male, 2-pole	Kontakthus, stift, 2-polig	4 AUXILIARY AIR VALVE, GUIDE PRESSURE VALVE, THERMO TIME SWITCH
0330					
0340					
0350	10A 85 22 617	X	X Cable terminal	Ledningssko	5 AREA, 1,0 MM2
0360	10B 85 21 619	X	X Rubber protection	Gummiskydd	4
0370					
0380	11 85 33 721	X	X Contact housing, female, 2-pole	Kontakthus, hylsa, 2-polig	4 TIMING VALVE, STARTER VALVE
0390					
0400	11A 85 22 617	X	X Cable terminal	Ledningssko	5 AREA, 1,0 MM2
0410	11B 85 21 619	X	X Rubber protection	Gummiskydd	4
0420					
0430	12 85 53 869	X	X Contact housing, female, 2-pole	Kontakthus, hylsa, 2-polig	4 SPEED SENSOR INSTRUMENTS
0440					
0450	12A 85 03 179	X	X Cable terminal	Ledningssko	5 AREA, 1,0-2,5 MM2
0460					
0470	13 85 56 896	X	X Contact housing, female, 2-pole	Kontakthus, hylsa, 2-polig	4 VACUUM SWITCH
0480					
0490	13A 79 72 029	X	X Cable terminal	Ledningssko	5 AREA, 1,0-2,5 MM2
0500					
0550	14 85 58 538	X	X Contact housing, female, 2-pole	Kontakthus, hylsa, 2-polig	4 WASHER PUMP, HEADLIGHT WIPER MOTOR
0560					
0570	14A 79 72 029	X	X Cable terminal	Ledningssko	5 AREA, 1,0-2,5 MM2
0580					

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

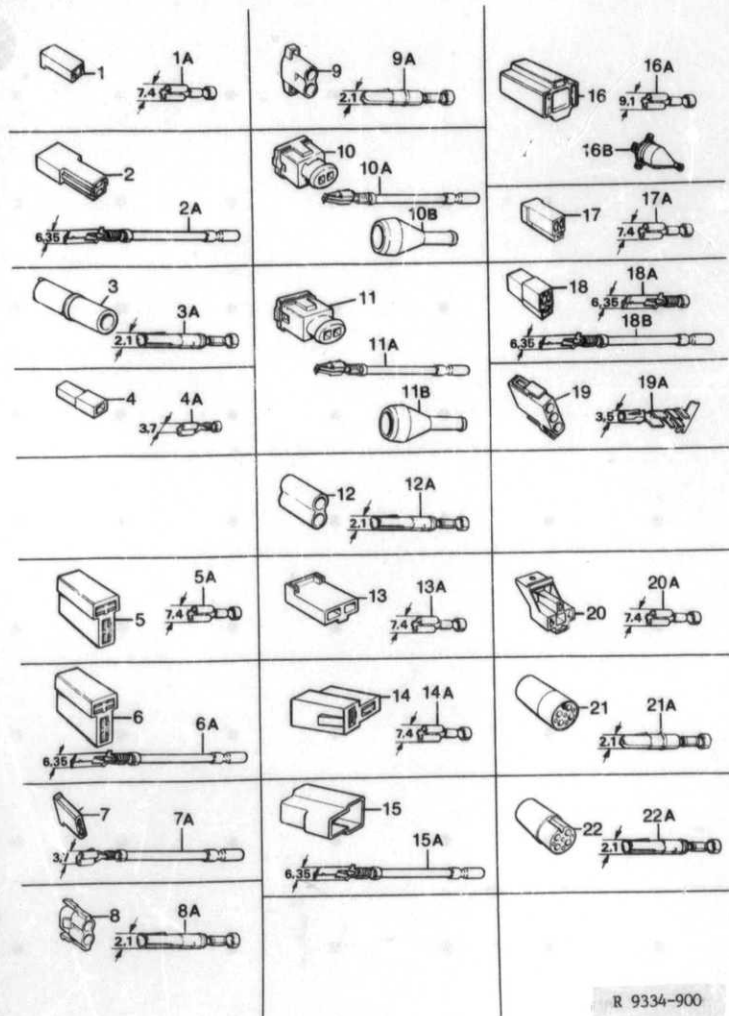

R 9334-900

1130

Wiring and fuses
Connectors, cable
terminals, 1980

Ledningar och säkringar
Kontakthus, ledningsskor,
1980

Date
Datum
1987-10

Illustration
Bild nr
R9334

Group
Grupp
3


Page
Sida
67

Fig. Pos.	Part No Art nr	Quantity/Åntal	Description	Benämning	KS SR	Notes Anmärkning
		900	US			
0560	15	85 58 546	X	X Contact housing, male, 2-pole	Kontakthus, stift, 2-polig	4 JOINT
0602	15A	79 72 029	X	X Cable terminal	Ledningssko	5 AREA, 1.5 MM2
0610	16	71 55 021	X	X Contact housing, female, 3-pole	Kontakthus, hylsa, 3-polig	4 HEADLIGHT
0620	16A	71 55 013	X	X Cable terminal	Ledningssko	5 AREA, 1.3-3.4 MM2
0630	16B	85 52 721	X	X Rubber protection	Gummiskydd	4
0640	17	73 42 892	X	X Contact housing, female, 3-pole	Kontakthus, hylsa, 3-polig	4 INTERIOR LIGHT, JOINT, WIPER MOTOR
0650	17A	79 72 029	X	X Cable terminal	Ledningssko	5 AREA, 1.0-2.5 MM2
0660	18	73 42 900	X	X Contact housing, male, 3-pole	Kontakthus, stift, 3-polig	4 FUEL LEVEL TRANSMITTER, JOINT, ALTERNATOR
0670	18A	85 16 957	X	X Cable terminal	Ledningssko	5 AREA, 4.0-6.0 MM2
0680	18B	85 22 542	X	X Cable terminal	Ledningssko	5 AREA, 1.5 MM2
0690	19	85 64 916	X	X Contact housing, female, 3-pole	Kontakthus, hylsa, 3-polig	4 SAFETY BELT WARNING
0700	19A	85 44 298	X	X Cable terminal	Ledningssko	5 AREA, 0.5-2.0 MM2
0710	20	85 03 484	X	X Contact housing, female, 4-pole	Kontakthus, hylsa, 4-polig	4 DOOR SWITCH
0720	20A	79 72 029	X	X Cable terminal	Ledningssko	5 AREA, 1.0-2.5 MM2
0730	20A	79 68 068	X	X Cable terminal	Ledningssko	5 AREA, 4.0-6.0 MM2
0740	21	85 30 081	X	X Contact housing, male, 4-pole	Kontakthus, stift, 4-polig	4 ELECTRIC MIRROR
0750	21A	85 16 817	X	X Cable terminal	Ledningssko	5 AREA, 0.5-1.0 MM2
0760	22	85 30 099	X	X Contact housing, female, 4-pole	Kontakthus, hylsa, 4-polig	4 ELECTRIC MIRROR
0770	22A	85 03 153	X	X Cable terminal	Ledningssko	5 AREA, 0.5-1.0 MM2
0780				CONTINUED ON NEXT PAGE	FORTSÄTTNING PÅ NÄSTA SIDA	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

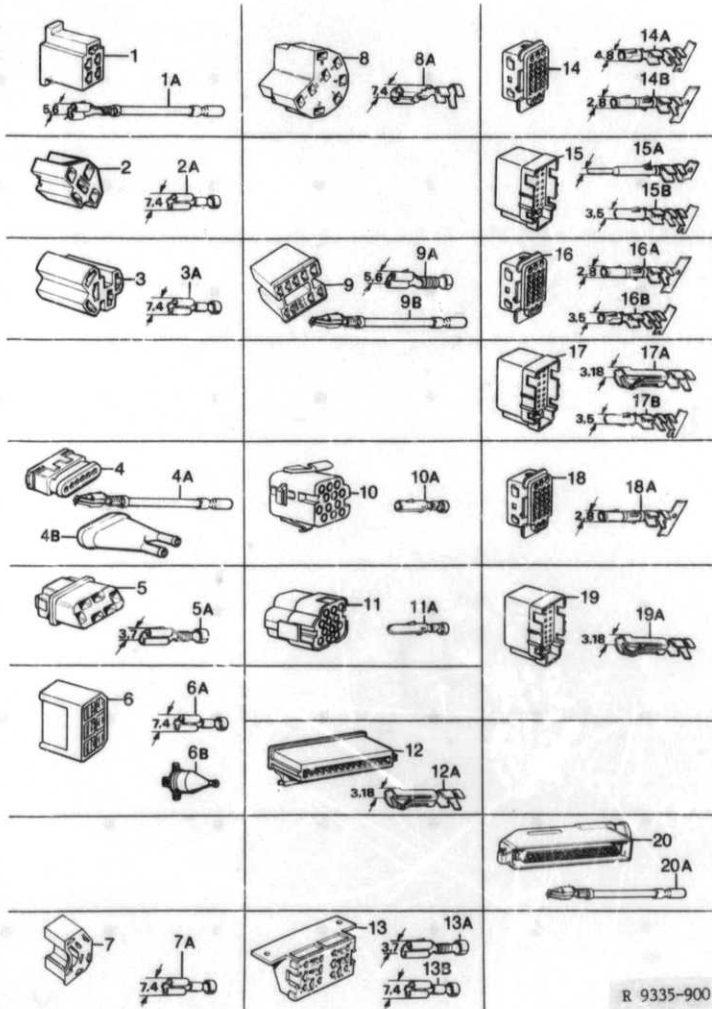

R 9335-900

1140

Wiring and fuses
Connectors, cable
terminals, 1980

Ledningar och säkringar
Kontakthus, ledningsskor,
1980

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1987-10 R9335

3

69

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR	Notes Anmärkning
		900	US				
0010	1	85 16 890	X	X Contact housing, female, 5-pole	Kontakthus, hylsa, 5-polig	4	WINDSHIELD WIPER MOTOR
0020	1A	85 22 567	X	X Cable terminal	Ledningssko	5	AREA, 0.25-1.6 MM2
0030	2	85 33 697	X	X Contact housing, female, 5-pole	Kontakthus, hylsa, 5-polig	4	RESISTOR FAN UNIT, DELAY VALVE AC
0040	2A	79 72 029	X	X Cable terminal	Ledningssko	5	AREA, 1.0-2.5 MM2
0050	2A	79 68 068	X	X Cable terminal	Ledningssko	5	AREA, 4.0-6.0 MM2
0060	3	85 44 397	X	X Contact housing, female, 5-pole	Kontakthus, hylsa, 5-polig	4	SWITCH HEATING FAN
0070	3A	79 72 029	X	X Cable terminal	Ledningssko	5	AREA, 1.0-2.5 MM2
0080	4	85 39 983	X	X Contact housing, female, 6-pole	Kontakthus, hylsa, 6-polig	4	ELECTRONIC UNIT
0090	4A	85 22 617	X	X Cable terminal	Ledningssko	5	AREA, 1.0-2.5 MM2
0100	4B	85 40 015	X	X Rubber protection	Gummiskydd	4	
0110	5	85 40 569	X	X Contact housing, female, 6-pole	Kontakthus, hylsa, 6-polig	4	SWITCH ELECTRIC MIRROR
0120	5A	85 09 846	X	X Cable terminal	Ledningssko	5	AREA, 0.5-1.4 MM2
0130	6	85 52 200	X	X Contact housing, female, 6-pole	Kontakthus, hylsa, 6-polig	4	INDICATOR LIGHT, SPEED TRANSMITTER
0140	6A	79 72 029	X	X Cable terminal	Ledningssko	5	AREA, 1.0-2.5 MM2
0150	6B	85 52 721	X	X Rubber protection	Gummiskydd	4	
0160	7	85 33 705	X	X Contact housing, female, 7-pole	Kontakthus, hylsa, 7-polig	4	SWITCH WINDSHIELD WIPER
0170	7A	79 72 029	X	X Cable terminal	Ledningssko	5	AREA, 1.0-2.5 MM2
0180	7A	79 68 068	X	X Cable terminal	Ledningssko	5	AREA, 4.0-6.0 MM2
0190	8	85 44 363	X	X Contact housing, female, 8-pole	Kontakthus, hylsa, 8-polig	4	SWITCH LIGHT
0200	8A	85 41 203	X	X Cable terminal	Ledningssko	5	AREA, 0.5-1.5 MM2
0210	9	85 44 371	X	X Contact housing, female, 10-pole	Kontakthus, hylsa, 10-polig	4	SWITCH REAR DEMIST, SWITCH WARNING FLASHER, SWITCH FOG LIGHT
0220	9A	85 44 389	X	X Cable terminal	Ledningssko	5	AREA, 0.5-1.5 MM2
0230	9B	85 22 617	X	X Cable terminal	Ledningssko	5	AREA, 1.0-2.5 MM2
0240	10	85 53 497	X	X Contact housing, female, 12-pole	Kontakthus, hylsa, 12-polig	4	COWL
0250	10A	85 44 298	X	X Cable terminal	Ledningssko	5	AREA, 0.5-2.0 MM2
0260	11	85 53 505	X	X Contact housing, male, 11A	Kontakthus, stift, 11A	4	COWL
0270	11A	85 44 314	X	X Cable terminal	Ledningssko	5	AREA, 0.5-2.0 MM2
0280	12	85 44 348	X	X Contact housing, female, 14-pole	Kontakthus, hylsa, 14-polig	4	INSTRUMENTS
0290	12A	85 60 278	X	X Cable terminal	Ledningssko	5	AREA, 0.5-1.0 MM2
0300	13	85 51 665	X	X Contact housing, female, 18-pole	Kontakthus, hylsa, 18-polig	4	FLASHER, INTERVAL RELAY
0310	13A	85 39 846	X	X Cable terminal	Ledningssko	5	AREA, 0.5-1.4 MM2
0320	13B	79 72 029	X	X Cable terminal	Ledningssko	5	AREA, 1.0-2.5 MM2
0330	14	85 44 207	X	X Contact housing, female, 29-pole	Kontakthus, hylsa, 29-polig	4	COWL, WHITE
0340	14A	85 44 306	X	X Cable terminal	Ledningssko	5	AREA, 2.0-4.0 MM2
0350	14B	85 21 726	X	X Cable terminal	Ledningssko	5	AREA, 0.5-1.5 MM2

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02
3 GROUP INDEX		
Battery		2-F08
Ignition system		2-F16
Lighting		2-F22
Electrical equipment, other		2-G10
Wiring and fuses		2-H02

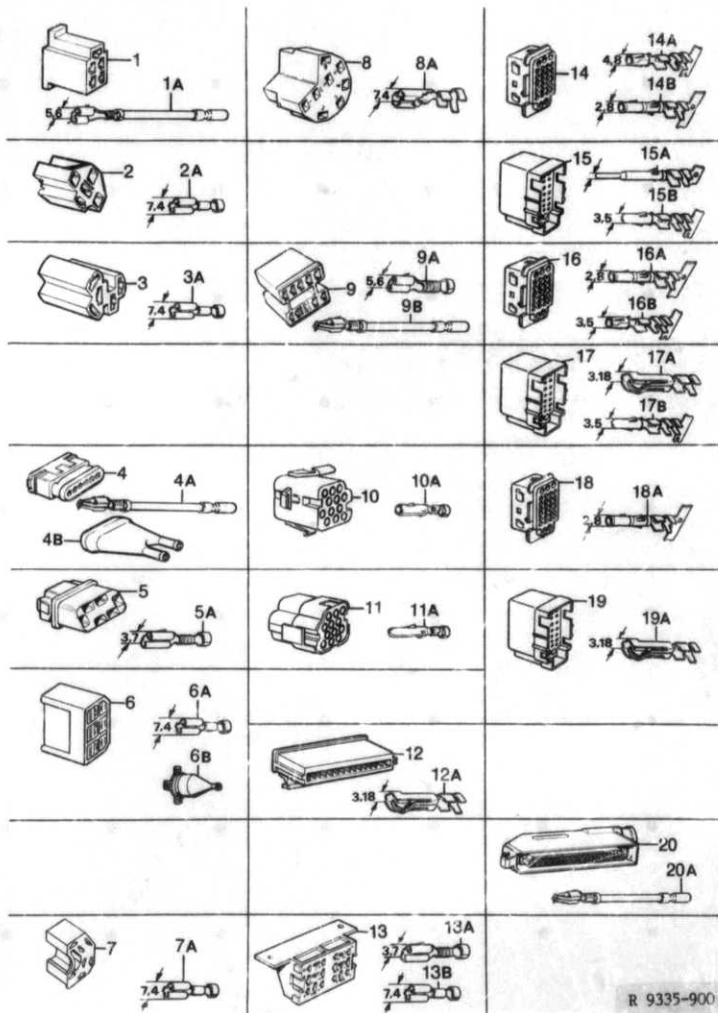

R 9335-900

1140

Wiring and fuses
Connectors, cable
terminals, 1980

Ledningar och säkringar
Kontakthus, ledningsskor,
1980

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R9335

3

71

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	Notes Anmärkning
		900	US			
0710	15 85 44 215	X		X Contact housing, male, 29-pole	Kontakthus, stift, 29-polig	4 COWL, WHITE
0730	15A 85 44 272	X		X Cable terminal	Ledningssko	5 AREA, 0.5-1.5 MM2
0750	15B 85 44 322	X		X Cable terminal	Ledningssko	5 AREA, 2.0-4.0 MM2
0760						
0770	16 85 44 223	X		X Contact housing, female, 29-pole	Kontakthus, hylsa, 29-polig	4 COWL, RED
0780	16A 85 21 726	X		X Cable terminal	Ledningssko	3 AREA, 0.5-1.5 MM2
0790	16B 85 44 306	X		X Cable terminal	Ledningssko	5 AREA, 2.0-4.0 MM2
0810						
0820	17 85 44 231	X		X Contact housing, male, 29-pole	Kontakthus, stift, 29-polig	4 COWL, RED
0830	17A 85 60 278	X		X Cable terminal	Ledningssko	5 AREA, 0.5-1.0 MM2
0840	17B 85 44 322	X		X Cable terminal	Ledningssko	5 AREA, 2.0-4.0 MM2
0850						
0860	18 85 44 249	X		X Contact housing, female, 29-pole	Kontakthus, hylsa, 29-polig	4 COWL, BLACK
0870	18A 85 21 726	X		X Cable terminal	Ledningssko	5 AREA, 0.5-1.5 MM2
0880						
0890	19 85 44 256	X		X Contact housing, male, 29-pole	Kontakthus, stift, 29-polig	4 COWL, BLACK
0900	19A 85 60 278	X		X Cable terminal	Ledningssko	5 AREA, 0.5-1.0 MM2
0910						
0920	20 85 39 363	X		X Contact housing, male, 35-pole	Kontakthus, stift, 35-polig	4 LAMBDA UNIT
0930	20A 85 22 617	X		X Cable terminal	Ledningssko	5 AREA, 1.0-2.6 MM2
0940						
0950						
0960						
0970						
0980						
0990						

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

1150

Wiring and fuses
Replacement cable
terminals 1979

Ledningar och säkringar
Kompletteringslednings-
skor 1979

Date
1987-10

Illustration
Bild nr
R9336

Group
Grupp
3

Page
Sida
73

Fig. Pc.	Part No Art nr	Quantity/Amtal	Description	Benämning	K/S SR /	Notes Anmärkning
		900	US			
0010	1 71 55 211	X	X Cable terminal M4	Ledningssko M4	5	3) 40/253 152 003
0020	2 71 55 220	X	X Cable terminal M5	Ledningssko M5	5	3) 40/253 153 001
0030	3 71 55 237	X	X Cable terminal M4	Ledningssko M4	5	4) 40/253 172 001
0040	4 71 17 880	X	X Cable terminal M5	Ledningssko M5	5	4) 40/253 173 001
0050	5 78 29 617	X	X Cable terminal M6	Ledningssko M6	5	4) 40/253 174 007
0060	6 71 55 658	X	X Cable terminal M5	Ledningssko M5	5	5) 40/253 210 009
0070	7 78 29 668	X	X Cable terminal M6	Ledningssko M6	5	5) 40/253 211 007
0080	8 78 29 674	X	X Cable terminal M8	Ledningssko M8	5	6) 40/253 212 006
0090	10 71 55 013	X	X Cable terminal	Ledningssko	5	18) IN CONTACT HOUSING 7155021
0100	11 71 55 716	X	X Cable terminal	Ledningssko	5	19) FOR BRAKE LEVEL THERMOSTAT, PRESSURE SWITCH, IGNITION LOCK LIGHT, RESISTOR, NUMBER PLATE LIGHT, DOME LIGHT
0110					5	20) FOR THERMOSTAT, JOINT, REAR DOOR SWITCH
0120					3	3) 40/253 168 009
0130					3	4) 40/253 195 002
0140					3	4) 40/253 197 008, FOR HEADLIGHT
0150	12 71 96 710	X	X Cable terminal	Ledningssko	5	5) 40/253 228 005
0160					5	18) IN CONTACT HOUSING 8503484, 8533697, 8533705
0170	13 78 29 809	X	X Cable terminal	Ledningssko	5	17) IN FUSE BOX, BACK-UP RELAY, FOR CONTACT HOUSING 7155096, 7155112
0180	14 78 29 625	X	X Cable terminal	Ledningssko	5	7342882, 8503484, 8533697
0190	15 78 29 633	X	X Cable terminal	Ledningssko	5	8533705, 8544397, 8551085
0200					5	8552200, 8556886, 8556904
0210	17 78 29 682	X	X Cable terminal	Ledningssko	5	8556939
0220	18 79 88 068	X	X Cable terminal	Ledningssko	5	20) FOR CONTACT HOUSING 8504771, 8530099
0230					5	17) FOR CONTACT HOUSING 8553869
0240	19 79 72 029	X	X Cable terminal	Ledningssko	5	17) FOR CONTACT HOUSING 7155112
0250					5	22) FOR CONTACT HOUSING 8540568, 8551085
0260	20 85 03 153	X	X Cable terminal	Ledningssko	5	21) FOR CONTACT HOUSING 8504789, 8530081
0270					5	18) FOR CONTACT HOUSING 7342900
0280	21 85 03 179	X	X Cable terminal	Ledningssko	5	18) FOR IGNITION COIL, IGNITION SWITCH, BACK-UP LIGHT, REAR VIEW MIRROR LAMP
0290					5	17) FOR IGNITION SWITCH, BACK-UP LIGHT, SWITCHAC
0300	22 85 03 476	X	X Cable terminal	Ledningssko	5	24) FOR FUSE BOX, FOR CONTACT HOUSING 854207
0310						
0320	23 85 09 846	X	X Cable terminal	Ledningssko		
0330						
0340	24 85 16 817	X	X Cable terminal	Ledningssko		
0350						
0360	25 85 16 957	X	X Cable terminal	Ledningssko		
0370						
0380	26 85 21 676	X	X Cable terminal	Ledningssko		
0390						
0400	27 85 21 694	X	X Cable terminal	Ledningssko		
0410						
0420	28 85 21 726	X	X Cable terminal	Ledningssko		
0430						
0440						
0450						
0460						
0470						
0480						
0490						
0495						
0496						


3. Red colour code (area 0.5-1.5 mm²)
4. Blue colour code (area 1.5-2.5 mm²)
5. Yellow colour code (area 3-6 mm²)
16. Area 4.0-6.0 MM²
17. Area 1.0-3.5 MM²
18. Area 1.3-3.4 MM²
19. Area 0.4-1.0 MM²
20. Area 0.8-3.4 MM²
21. Area 0.5-1.0 MM²
22. Area 0.5-1.4 MM²
24. Area 0.5-1.5 MM²

R 9336-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

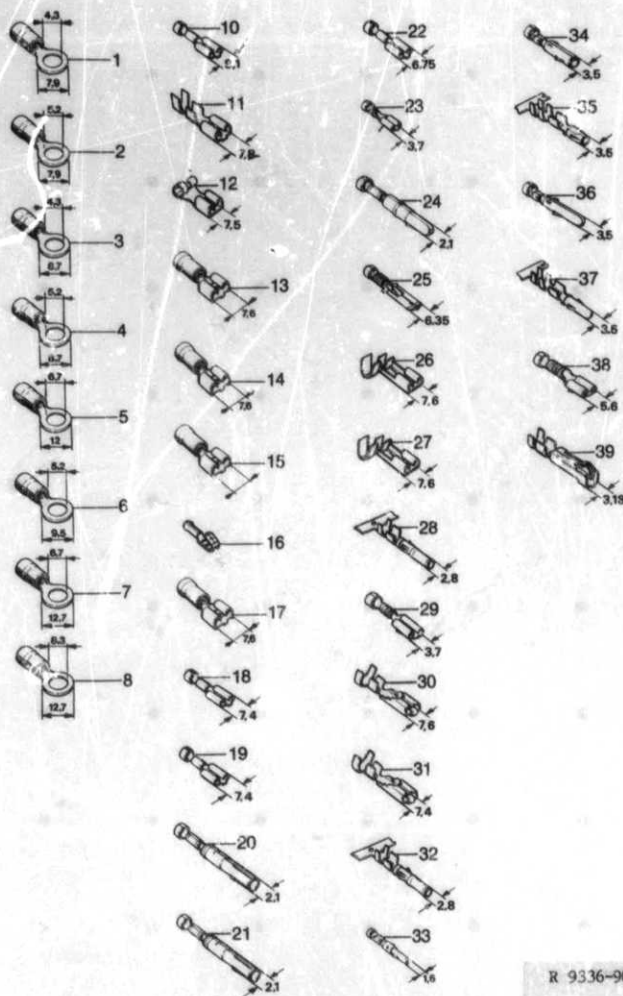

R 9336-900

Wiring and fuses
Replacement cable
terminals 1979

Ledningar och säkringar

Kompletteringslednings- skor 1979

Date Datum	1987-
---------------	-------

Illustration Bild nr	R9336
-------------------------	-------

Group Grupp	3
----------------	---

Page
Side
75

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	KS SR	Notes Anmärkning
		900	US				
0497 0500 0510 0520 0530 0540 0550 0560 0570 0580 0590 0600 0610 0620 0630 0640 0650 0660 0670	29 85 30 107	X		X Cable terminal	Ledningssko		8544223, 8544249 5 21) FOR CONTACT HOUSING 8530115
0680 0690 0700 0710 0720 0730 0735 0736 0740 0750 0760 0770 0780 0790 0800 0810 0820 0830 0840 0850 0860 0870	30 85 41 203	X		X Cable terminal	Ledningssko		5 21) FOR GENERATOR, FUSE BOX, IGNITION COIL, HEADLIGHT WIPERS, TAIL LIGHT, LUGGAGE COMPART- MENT LIGHT, DOOR SWITCH, JOINT, HAND BRAKE, EL- ECTRIC PAD, STOP LIGHT SWITCH, ASH TRAY LIGHT, GLOVE BOX LIGHT, LIGHT CONTROL, LIGHT SAFETY BELT WARNING, CIGARETTE LIGHTER, DIRECTION INDI- CATOR, EARTH, HOMELAMP, SOLENOID VALVE, THROTTLE SWITCH, FOR CONTACT HOUSING 8544313
0880 0890 0900 0910 0920 0930 0940 0950 0960 0970 0980 0990 1000 1010 1020 1030 1040 1050 1060 1070 1080 1090 1100 1110 1120 1130 1140 1150 1160 1170 1180 1190 1200 1210 1220 1230 1240 1250 1260 1270 1280 1290 1300 1310 1320 1330 1340 1350 1360 1370 1380 1390 1400 1410 1420 1430 1440 1450 1460 1470 1480 1490 1500 1510 1520 1530 1540 1550 1560 1570 1580 1590 1600 1610 1620 1630 1640 1650 1660 1670 1680 1690 1700 1710 1720 1730 1740 1750 1760 1770 1780 1790 1800 1810 1820 1830 1840 1850 1860 1870 1880 1890 1900 1910 1920 1930 1940 1950 1960 1970 1980 1990 2000 2010 2020 2030 2040 2050 2060 2070 2080 2090 2100 2110 2120 2130 2140 2150 2160 2170 2180 2190 2200 2210 2220 2230 2240 2250 2260 2270 2280 2290 2300 2310 2320 2330 2340 2350 2360 2370 2380 2390 2400 2410 2420 2430 2440 2450 2460 2470 2480 2490 2500 2510 2520 2530 2540 2550 2560 2570 2580 2590 2600 2610 2620 2630 2640 2650 2660 2670 2680 2690 2700 2710 2720 2730 2740 2750 2760 2770 2780 2790 2800 2810 2820 2830 2840 2850 2860 2870 2880 2890 2900 2910 2920 2930 2940 2950 2960 2970 2980 2990 3000 3010 3020 3030 3040 3050 3060 3070 3080 3090 3100 3110 3120 3130 3140 3150 3160 3170 3180 3190 3200 3210 3220 3230 3240 3250 3260 3270 3280 3290 3300 3310 3320 3330 3340 3350 3360 3370 3380 3390 3400 3410 3420 3430 3440 3450 3460 3470 3480 3490 3500 3510 3520 3530 3540 3550 3560 3570 3580 3590 3600 3610 3620 3630 3640 3650 3660 3670 3680 3690 3700 3710 3720 3730 3740 3750 3760 3770 3780 3790 3800 3810 3820 3830 3840 3850 3860 3870 3880 3890 3900 3910 3920 3930 3940 3950 3960 3970 3980 3990 4000 4010 4020 4030 4040 4050 4060 4070 4080 4090 4100 4110 4120 4130 4140 4150 4160 4170 4180 4190 4200 4210 4220 4230 4240 4250 4260 4270 4280 4290 4300 4310 4320 4330 4340 4350 4360 4370 4380 4390 4400 4410 4420 4430 4440 4450 4460 4470 4480 4490 4500 4510 4520 4530 4540 4550 4560 4570 4580 4590 4600 4610 4620 4630 4640 4650 4660 4670 4680 4690 4700 4710 4720 4730 4740 4750 4760 4770 4780 4790 4800 4810 4820 4830 4840 4850 4860 4870 4880 4890 4900 4910 4920 4930 4940 4950 4960 4970 4980 4990 5000 5010 5020 5030 5040 5050 5060 5070 5080 5090 5100 5110 5120 5130 5140 5150 5160 5170 5180 5190 5200 5210 5220 5230 5240 5250 5260 5270 5280 5290 5300 5310 5320 5330 5340 5350 5360 5370 5380 5390 5400 5410 5420 5430 5440 5450 5460 5470 5480 5490 5500 5510 5520 5530 5540 5550 5560 5570 5580 5590 5600 5610 5620 5630 5640 5650 5660 5670 5680 5690 5700 5710 5720 5730 5740 5750 5760 5770 5780 5790 5800 5810 5820 5830 5840 5850 5860 5870 5880 5890 5900 5910 5920 5930 5940 5950 5960 5970 5980 5990 6000 6010 6020 6030 6040 6050 6060 6070 6080 6090 6100 6110 6120 6130 6140 6150 6160 6170 6180 6190 6200 6210 6220 6230 6240 6250 6260 6270 6280 6290 6300 6310 6320 6330 6340 6350 6360 6370 6380 6390 6400 6410 6420 6430 6440 6450 6460 6470 6480 6490 6500 6510 6520 6530 6540 6550 6560 6570 6580 6590 6600 6610 6620 6630 6640 6650 6660 6670 6680 6690 6700 6710 6720 6730 6740 6750 6760 6770 6780 6790 6800 6810 6820 6830 6840 6850 6860 6870 6880 6890 6900 6910 6920 6930 6940 6950 6960 6970 6980 6990 7000 7010 7020 7030 7040 7050 7060 7070 7080 7090 7100 7110 7120 7130 7140 7150 7160 7170 7180 7190 7200 7210 7220 7230 7240 7250 7260 7270 7280 7290 7300 7310 7320 7330 7340 7350 7360 7370 7380 7390 7400 7410 7420 7430 7440 7450 7460 7470 7480 7490 7500 7510 7520 7530 7540 7550 7560 7570 7580 7590 7600 7610 7620 7630 7640 7650 7660 7670 7680 7690 7700 7710 7720 7730 7740 7750 7760 7770 7780 7790 7800 7810 7820 7830 7840 7850 7860 7870 7880 7890 7900 7910 7920 7930 7940 7950 7960 7970 7980 7990 8000 8010 8020 8030 8040 8050 8060 8070 8080 8090 8100 8110 8120 8130 8140 8150 8160 8170 8180 8190 8200 8210 8220 8230 8240 8250 8260 8270 8280 8290 8300 8310 8320 8330 8340 8350 8360 8370 8380 8390 8400 8410 8420 8430 8440 8450 8460 8470 8480 8490 8500 8510 8520 8530 8540 8550 8560 8570 8580 8590 8600 8610 8620 8630 8640 8650 8660 8670 8680 8690 8700 8710 8720 8730 8740 8750 8760 8770 8780 8790 8800 8810 8820 8830 8840 8850 8860 8870 8880 8890 8900 8910 8920 8930 8940 8950 8960 8970 8980 8990 9000 9010 9020 9030 9040 9050 9060 9070 9080 9090 9100 9110 9120 9130 9140 9150 9160 9170 9180 9190 9200 9210 9220 9230 9240 9250 9260 9270 9280 9290 9300 9310 9320 9330 9340 9350 9360 9370 9380 9390 9400 9410 9420 9430 9440 9450 9460 9470 9480 9490 9500 9510 9520 9530 9540 9550 9560 9570 9580 9590 9600 9610 9620 9630 9640 9650 9660 9670 9680 9690 9700 9710 9720 9730 9740 9750 9760 9770 9780 9790 9800 9810 9820 9830 9840 9850 9860 9870 9880 9890 9900 9910 9920 9930 9940 9950 9960 9970 9980 9990 10000	31 85 41 211	X		X Cable terminal	Ledningssko		5 23), FOR FUSE BOX IGNITION COIL, TAIL LIGHT SWITCH AC, DIRECTION IN- DICATOR, GLOVE BOX LIGHT, FUEL PUMP 5 17), FOR FUSE BOX 5 24), FOR CONTACT HOUSING 8544215 5 25), FOR CONTACT HOUSING 8553487 5 26), FOR CONTACT HOUSING 8544207, 8544223 5 25), FOR CONTACT HOUSING 8553506 5 25), FOR CONTACT HOUSING 8544215, 8544231 5 24), FOR CONTACT HOUSING 8544371 5 21), FOR CONTACT HOUSING 8544231, 8544256, 8544348
9920 9930 9940 9950 9960 9970 9980 9990 10000				CONTINUED ON NEXT PAGE	FORTSÄTTNING PÅ NÄSTA SIDA		

17. Area 1,0-2,5 MM2
21. Area 0,5-1,0 MM2
23. Area 2,5-4,0 MM2
24. Area 0,5-1,5 MM2
25. Area 0,5-2,0 MM2
26. Area 2,0-4,0 MM2

- 0 General
- 1 Tools
- 2 Engine
- 3 Electrical system,
Instruments
- 4 Transmission
- 5 Brakes
- 6 Front assembly.

3 GROUP INDEX

Battery	2-F06
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G16
Wiring and fuses	2-H02

1155

Wiring and fuses
Replacement cable
terminals 1979

Ledningar och säkringar
Kompletteringslednings-
skor 1979

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1987-10

R9337

3

77

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0020	1 71 55 179	X		X Cable terminal	Ledningssko	3 (27)	
0021	2 79 59 349	X		X Cable terminal	Ledningssko	3 (17)	
0022	3 79 59 231	X		X Cable terminal	Ledningssko	3 (28)	
0023	4 85 22 518	X		X Cable terminal	Ledningssko	3 (7)	
0024	5 85 22 526	X		X Cable terminal	Ledningssko	3 (7)	
0030	6 85 22 534	X		X Cable terminal	Ledningssko	3 (7)	
0040	7 85 22 542	X		X Cable terminal	Ledningssko	3 (7)	
0045							3 (7) FOR JOINT, FOR CONTACT HOUSING 715104, 7155120, 7342900, 855947-46
0048	8 85 22 559	X		X Cable terminal	Ledningssko	3 (7)	
0050	9 85 22 567	X		X Cable terminal	Ledningssko	3 (6)	
0070							3 (6) FOR CONTACT HOUSING 8516890
0080	10 85 22 575	X		X Cable terminal	Ledningssko	3 (6)	
0090	11 85 22 809	X		X Cable terminal	Ledningssko	3 (6)	
0100	12 85 22 817	X		X Cable terminal	Ledningssko	3 (7)	FOR CONTACT HOUSING 8521601, 8531721, 8539983
0110							8544371
0115	13 71 55 146	X		X Joint sleeve	Skarvhylsa	5 (4)	40/253 168 007
0130	14 71 55 203	X		X Joint sleeve	Skarvhylsa	5 (3)	40/253 164 008
0140	15 71 55 633	X		X Joint sleeve	Skarvhylsa	5 (5)	40/253 221 006
0150	16 85 21 668	X		X Bridge connector	Ledningsöverkoppling	2	AREA 0,8-2,1 MM2
0160	17 85 06 123	X		X Connector	Skarvhus	5	
0170	18 85 41 229	X		X Connector	Skarvhus	5	

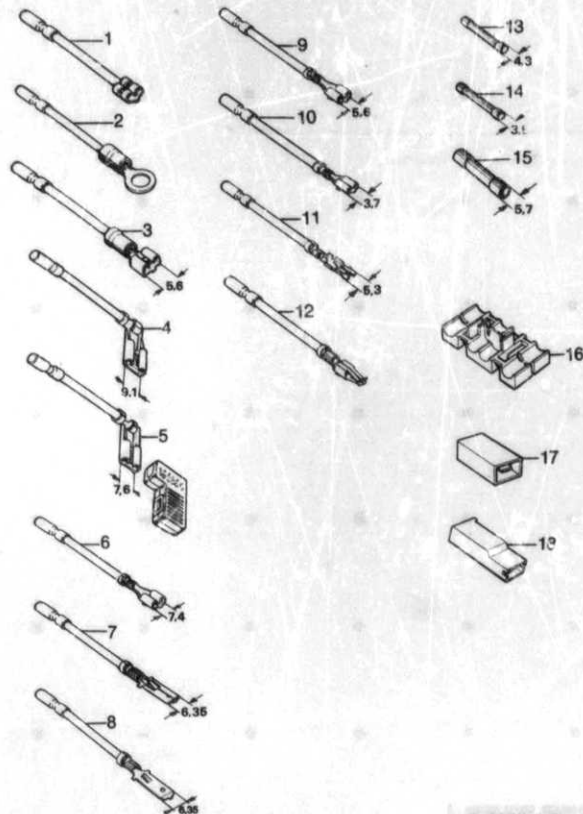


R 9337-900

- 3. Red colour code (area 0.5-1.5 mm2)
- 5. Yellow colour code (area 3-6 mm2)
- 6. Blue colour code (area 1.0 mm2)
- 7. Green colour code (area 1.5 mm2)
- 17. Area 1.0-2.5 MM2
- 27. Area 0.75-1.5 MM2
- 28. Area 1.0-3.4 MM2

0	General	1-A02
1	Tools	1-M02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-M02
5	Exhaust	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

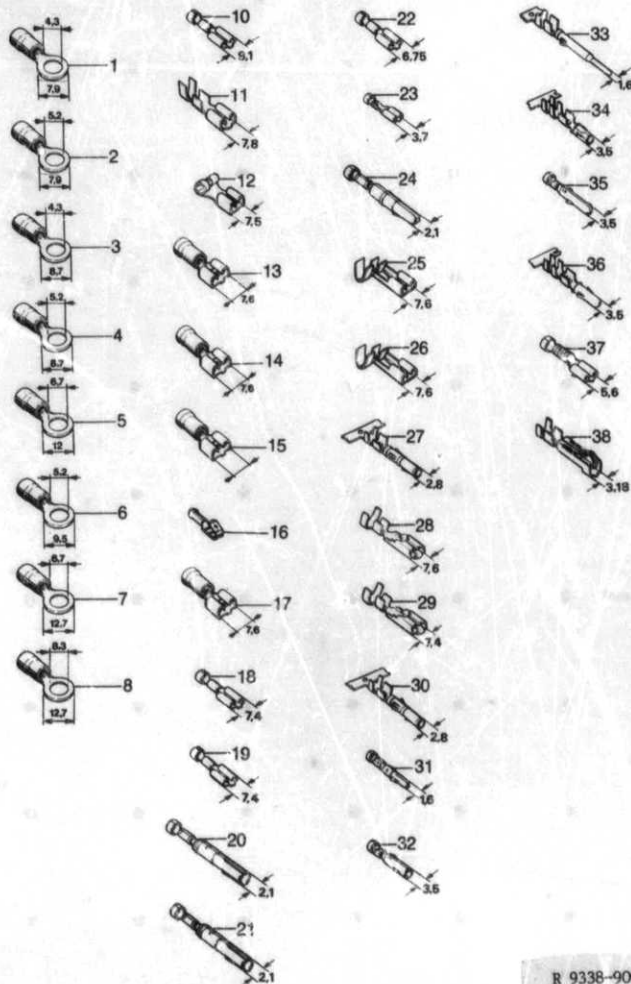

R 9338-900

SAAB
genuine parts
original reservdelar

2-108

SAAB 900
M79-80

MASTER INDEX

1190

Wiring and fuses
Replacement cable
terminals 1980

Ledningar och säkringar
Kompletteringslednings-
skor 1980

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R9338

3

79

Fig. Pos.	Part No Art nr	Quantity/Åntal		Description	Benämning	K/S SR L	Notes Anmärkning
		900	US				
0010	1 71 55 211	X		X Cable terminal M4	Ledningssko M4		3) 40/253 152 003
0020	2 71 55 229	X		X Cable terminal M5	Ledningssko M5		3) 40/253 153 001
0030	3 71 55 237	X		X Cable terminal M4	Ledningssko M4		4) 40/253 172 001
0040	4 71 17 880	X		X Cable terminal M5	Ledningssko M5		4) 40/253 173 009
0050	5 78 29 617	X		X Cable terminal M6	Ledningssko M6		4) 40/253 174 007
0060	6 71 55 658	X		X Cable terminal M5	Ledningssko M5		5) 40/253 210 009
0070	7 78 29 666	X		X Cable terminal M6	Ledningssko M6		5) 40/253 211 007
0080	8 78 29 674	X		X Cable terminal M6	Ledningssko M6		5) 40/253 212 005
0100	10 71 55 013	X		X Cable terminal	Ledningssko		5) 18) IN CONTACT HOUSING 7155021
0110	11 71 55 716	X		X Cable terminal	Ledningssko		5) 19) FOR BRAKE LEVEL, THERMO SWITCH, PRESSURE SWITCH, IGNITION LOCK LIGHT, FUEL LEVEL TRANSMITTER, JOINT
0120							
0130							
0140							
0150							
0160							
0170	12 71 96 710	X		X Cable terminal	Ledningssko		5) 20) FOR THERMOSTAT, THERMO SWITCH
0190	13 78 29 609	X		X Cable terminal	Ledningssko		3) 3) 40/253 168 009
0200	14 78 29 625	X		X Cable terminal	Ledningssko		3) 4) 40/253 195 002
0210	15 78 29 633	X		X Cable terminal	Ledningssko		3) 4) 40/253 197 008, FOR HEADLIGHT
0220	17 78 29 682	X		X Cable terminal	Ledningssko		3) 5) 40/253 225 005
0230	18 78 68 063	X		X Cable terminal	Ledningssko		5) 16) FOR RESISTOR HEATING FAN, EL-CENTRAL, FOR CONTACT HOUSING 8503484
0250							
0260							
0270	19 79 72 029	X		X Cable terminal	Ledningssko		5) 17) IN FUSE BOX, RELAY AC, PRESSURE SWITCH, FOR CONTACT HOUSING 7155096, 7342892, 8503484
0280							8533897, 8533705, 8544397
0290							8561865, 8552200, 8559538
0300							
0310							
0320							
0350	20 85 03 153	X		X Cable terminal	Ledningssko		5) 20) FOR CONTACT HOUSING 7155096, 8504771, 8518932
0360							8530099, 8558538
0370							
0380	21 85 03 179	X		X Cable terminal	Ledningssko		5) 17) FOR CONTACT HOUSING 8563869
0390							
0400	22 85 03 476	X		X Cable terminal	Ledningssko		5) 17) FOR CONTACT HOUSING 7155112
0410							
0420	23 85 09 846	X		X Cable terminal	Ledningssko		5) 22) FOR CONTACT HOUSING 8540569, 8551865
0430							
0440	24 85 16 817	X		X Cable terminal	Ledningssko		5) 21) FOR CONTACT HOUSING 8504789, 8530061
0450							
0460	25 85 21 676	X		X Cable terminal	Ledningssko		5) 18) FOR IGNITION COIL, IGNITION SWITCH, BACK-UP LIGHT, REAR VIEW MIRROR LAMP, TAIL LAMP
0470							
0480							
0490							
0500	26 85 21 684	X		X Cable terminal	Ledningssko		5) 17) FOR IGNITION SWITCH, BACK-UP LIGHT
0510							
0520	27 85 21 726	X		X Cable terminal	Ledningssko		5) 24) FOR FUSE BOX, FOR CONTACT HOUSING 8544207, 8544223, 8544248
0530							
0540							

3. Red colour code (area 0,5-1,5 mm²)
4. Blue colour code (area 1,5-2,5 mm²)
5. Yellow colour code (area 3-6 mm²)
16. Area 4,0-6,0 mm²
17. Area 1,0-2,5 mm²
18. Area 1,3-3,4 mm²
19. Area 0,4-1,0 mm²
20. Area 0,9-3,4 mm²
21. Area 0,5-1,0 mm²
22. Area 0,5-1,4 mm²
24. Area 0,5-1,5 mm²

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

1160

Wiring and fuses
Replacement cable
terminals 1980

Ledningar och säkringar
Kompletteringslednings-
skor 1980

Date
Datum
1987-10

Illustration
Bild nr
R9338

Group
Grupp
3

Page
Sida
81

Fig. Pos.	Part No Art nr	Quantity/Amount 000	Description US	Benämning	K/S SR /L	Notes Anmärkning
0570 0580 0590 0600 0610 0620 0630 0640 0650 0660 0670 0680 0690 0700 0710 0720 0730 0740 0750 0760 0770 0780 0790 0800 0810 0820 0830 0840 0845 0850 0855 0860 0865 0870 0880 0890 0900 0910 0920 0930 0940 0950 0960 0970 0980 0990 1000 1010	28 85 41 203	X	X Cable terminal	Ledningssko	5	21) FOR FUSE BOX, TAIL LIGHT, LUGGAGE COMPARTMENT LIGHT, DOOR SWITCH, HANDBRAKE, ELECTRIC PAD, ASH TRAY LIGHT, GLOVE BOX LIGHT, LIGHT CONTROL LIGHT SAFETY BELT WARNING, CIGARETTE LIGHTER, DIRECTION INDICATOR, EARTH, DOME LAMP, SOLENOID VALVE, THROTTLE SWITCH, FUSE AC, THERMOSTAT AC, LICENSE PLATE LIGHT, FUEL LEVEL TRANSMITTER, FOR CONTACT HOUSING 8544383
	29 85 41 211	X	X Cable terminal	Ledningssko	5	23) FOR FUSE BOX, TAIL LIGHT, SWITCH AC, DIRECTION INDICATOR, GLOVE BOX LIGHT, FUEL PUMP, FUSE AC, EARTH, LIGHT CIGARETTE LIGHTER, FAN UNIT
	30 85 44 284	X	X Cable terminal	Ledningssko	5	17) FOR FUSE BOX, FOR CONTACT HOUSING 8544207
	31 85 44 272	X	X Cable terminal	Ledningssko	5	24) FOR PRESSURE SWITCH, FOR CONTACT HOUSING 8544231, 8544256
	32 85 44 280	X	X Cable terminal	Ledningssko	5	17) FOR CONTACT HOUSING 8544215
	33 85 44 298	X	X Cable terminal	Ledningssko	5	25) FOR CONTACT HOUSING 8544207, 8553497, 8554918
	34 85 44 306	X	X Cable terminal	Ledningssko	5	26) FOR EL-CENTRAL, FOR CONTACT HOUSING 8544207, 8544220, 8554918
	35 85 44 314	X	X Cable terminal	Ledningssko	5	25) FOR CONTACT HOUSING 8544215, 8553506
	36 85 44 322	X	X Cable terminal	Ledningssko	5	25) FOR CONTACT HOUSING 8544215, 8544231
	37 85 44 389	X	X Cable terminal	Ledningssko	5	24) FOR CONTACT HOUSING 8544371
	38 85 60 278	X	X Cable terminal	Ledningssko	5	21) FOR CONTACT HOUSING 8544348
			CONTINUED ON NEXT PAGE	FORTSÄTTNING PÅ NÄSTA SIDA		

R 9338-900

17. Area 1.0-2.5 MM2
21. Area 0.5-1.0 MM2
23. Area 2.5-4.0 MM2
24. Area 0.5-1.5 MM2
25. Area 0.5-2.0 MM2
26. Area 2.0-4.0 MM2

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F02
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

1165

Wiring and fuses
Replacement cable
terminals 1980

Ledningar och säkringar
Kompletteringslednings-
skor 1980


Date
Datum
1987-10

Illustration
Bild nr
R9339

Group
Grupp
3

Page
Sida
83

Fig. Pos.	Part No Art nr	Quantity/Amount			Description	Benämning	KS SR / L	Notes Anmärkning
		900		US				
0020	1	71 55 179	X		X Cable terminal	Ledningssko	3 27	
0021	2	79 89 349	X		X Cable terminal	Ledningssko	3 17	
0022	3	79 89 231	X		X Cable terminal	Ledningssko	3 28	
0023	4	85 22 118	X		X Cable terminal	Ledningssko	3 7	
0024	5	85 22 526	X		X Cable terminal	Ledningssko	3 7	
0030	6	85 22 534	X		X Cable terminal	Ledningssko	3 7	
0040	7	85 22 542	X		X Cable terminal	Ledningssko	3 7	
0046								
0048								
0050	8	85 22 559	X		X Cable terminal	Ledningssko	3 7	
0060	9	85 22 567	X		X Cable terminal	Ledningssko	3 6	FOR CONTACT HOUSING
0070								851890
0080	10	85 22 575	X		X Cable terminal	Ledningssko	3 6	FOR CONTACT HOUSING
0085								8378930
0090	11	85 22 809	X		X Cable terminal	Ledningssko	3 6	
0100	12	85 22 617	X		X Cable terminal	Ledningssko	3 7	FOR CONTACT HOUSING
0110								8521801, 8533721, 8539383
0115								853983
0117	13	85 29 307	X		X Cable terminal	Ledningssko	3 6	PRESSURE SWITCH
0120	14	71 55 146	X		X Joint sleeve	Skarvhylsa	5 4	40/253 188 007
0130	15	71 55 203	X		X Joint sleeve	Skarvhylsa	5 3	40/253 184 008
0140	16	71 55 633	X		X Joint sleeve	Skarvhylsa	5 5	40/253 221 006
0150	17	85 21 668	X		X Bridge connector	Ledningsöverkoppling	3	AREA 0,6-2,1 MM2
0160	18	85 06 123	X		X Connector	Skarvhus	5	
0170	19	85 41 228	X		X Connector	Skarvhus	5	

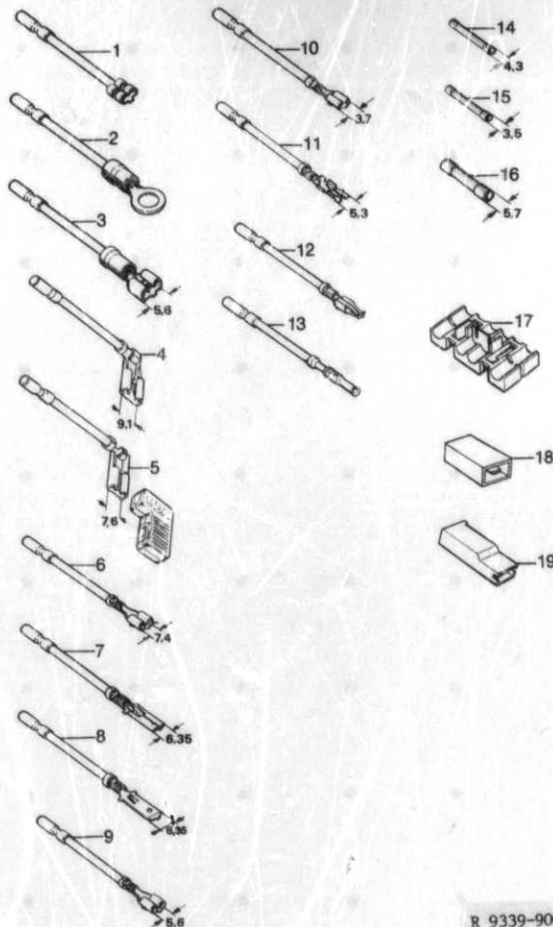

R 9339-900

- 3. Red colour code (area 0,5-1,5 mm2)
- 4. Blue colour code (area 1,5-2,5 mm2)
- 5. Yellow colour code (area 3-6 mm2)
- 6. Blue colour code (area 1,0 mm2)
- 7. Green colour code (area 1,5 mm2)
- 17. Area 1,0-2,5 MM2
- 27. Area 0,75-1,5 MM2
- 28. Area 1,0-3,4 MM2

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02
3 GROUP INDEX		
	Battery	2-F08
	Ignition system	2-F16
	Lighting	2-F22
	Electrical equipment, other	2-G10
	Wiring and fuses	2-H02

1250

Wiring and fuses
Distribution box, relays

Ledningar och säkringar
Elcentral, reläer


Date
Datum
1987-10

Illustration
Bild nr
R5938

Group
Grupp
3

Page
Sida
85


Fig. Pos.	Part No Art nr	Quantity/ Antal	Description	Benämning	K/S S/R	Notes Anmärkning
		900	US			
0020	1 85 40 882	1	1 Lower part, distribution box	Underdel, elcentral	5	
0040	2 85 40 890	1	1 Cover, distribution box	Lock, elcentral	5 -1979	
0060	2 85 63 256	1	1 Cover, distribution box	Lock, elcentral	5 1980- (83 63 264)	
0091	3 85 53 265	1	1 Sealing	Tätning	6	
0110	3A 85 53 273	2	2 Screw	Skruv	0	
0120	4 85 52 671	1	1 Sealing	Tätning	6	
0140	5 85 46 947	1	1 Fuse holder assy	Säkringshållare kpl	6 -1979	
0150	5 85 63 231	1	1 Fuse holder assy	Säkringshållare	6 1980-	
0160	6 85 28 135	6	6 Fuse 5 A	Säkring 5A	1	
0180	6	15	15 Fuse 8 A	Säkring 8A	40/241250000	
0200	6 85 28 150	6	6 Fuse 16 A	Säkring 16A	1	
0210	6 85 28 168	2	2 Fuse 25A	Säkring 25A	1	
0215	6A 79 22 420	2	2 Screw	Skruv	5	
0220	7 85 51 392	1	1 Sealing	Tätning	6	
0240	8 80 29 555	1	1 Nut	Mutter	5	
0250	8A 85 37 623	2	2 Sealing washer	Tätningssbricka	3	
0260	9 71 16 452	1	1 Drain plug	Dräneringsplugg	5	
0280	10 79 61 352	1	1 Bushing	Bussning	6	
0320	12 95 60 888	1	1 Relay light	Relä, ljus	2 (85 52 609)	
0340	13 85 33 176	1	1 Relay, ignition lock	Relä, tändlås	3	
0360	14 85 22 310	1	1 Relay, cooling fan	Relä, kylfläkt	3	
0380	15 85 22 310	1	1 Relay, rear demist	Relä, elbakruta	3	
0400	16 85 22 310	1	1 Relay, back-up light	Relä, backljus	3A, -1979	
0420	17 85 39 728	1	1 Relay, fuel pump	Relä, bränslepump	3	
0440	18 35 36 401	1	1 Relay, lambda-system	Relä, lambda-system	3 UC	
0460	19 85 36 401	1	1 Relay, start stop	Relä, startspärr	3 US AND TURBO	
0480	19 85 33 176	1	1 Relay, start stop	Relä, startspärr	3A, -1979	
0500	20 35 59 999	1	1 Relay, fuel pump	Relä, bränslepump	3 TURBO FOR US, CA, JA	
0520	21 85 22 310	1	1 Relay, cooling fan	Relä, kylfläkt	3 AC	
0540	22 85 36 328	1	1 Connector joint	Överkopplingsdon	3	
0560	23 85 85 549	1	1 Relay, ignition lock	Relä, tändlås	3 S1 364-221	

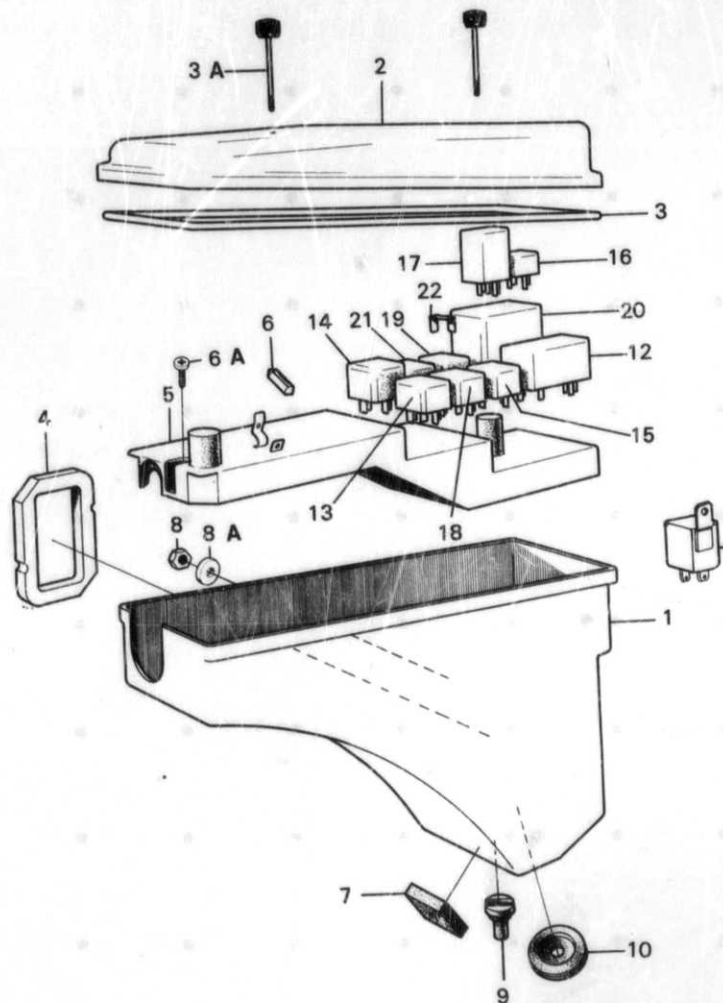

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F06
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

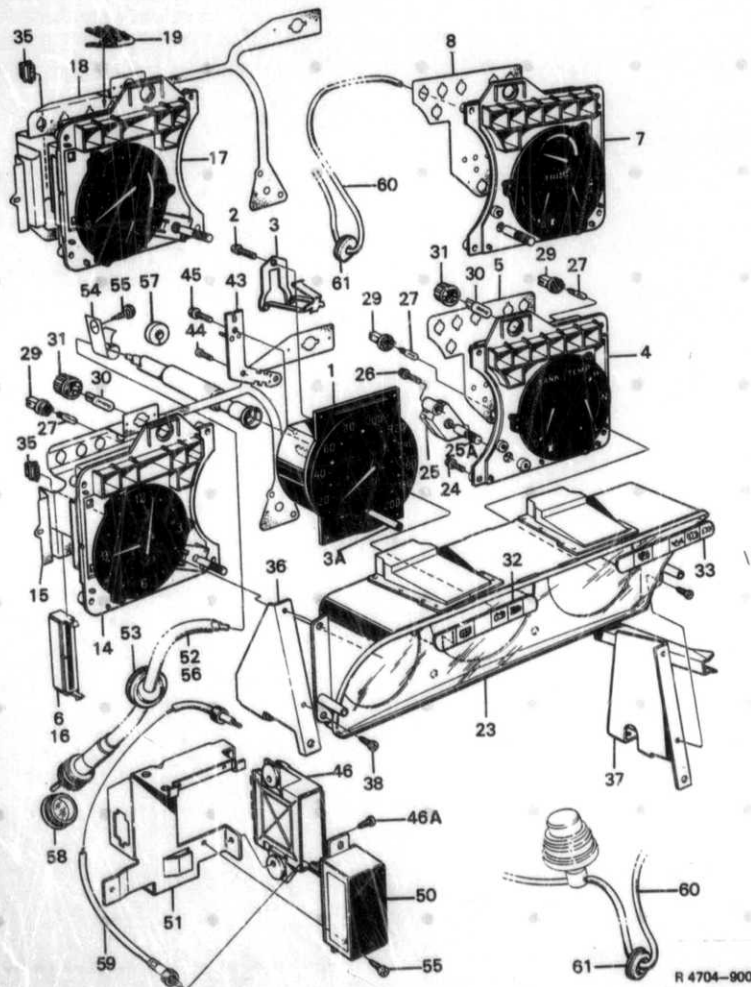

SAAB
genuine parts
original reserved

2-116

SAAB 900
M79-80

MASTER INDEX

1300


Instruments		Instrument		Date Datum	Illustration Bild nr	Group Grupp	Page Sida
				1987-10	R4704	3	87
Fig. Pos.	Part No Art nr	Quantity/Antal		Description		Benämning	Notes Anmärkning
		900	US				
0020	1 85 44 959	1		Speedometer	Hastighetsmätare	4 -1979	
0040	1 85 44 981	1		Speedometer	Hastighetsmätare	4 -1979, US AND GB	
0060	1 85 58 920	1		Speedometer	Hastighetsmätare	4 -1979, TURBO	
0100	1 85 58 938	1		Speedometer	Hastighetsmätare	4 -1979, TURBO US AND GB	
0120	1 85 64 486	1		Speedometer	Hastighetsmätare	4 1980-, GL AND GLE	
0121	1 85 64 908	1		Speedometer	Hastighetsmätare	4 1980-, EMS	
0122	1 85 64 312	1		Speedometer	Hastighetsmätare	4 1980-, TURBO	
0124	1 85 64 304	1		Speedometer	Hastighetsmätare	4 1980-, GB, GL, EMS, GLE	
0125	1 85 64 320	1		Speedometer	Hastighetsmätare	4 1980-, GB, TURBO	
0128	1 85 60 419	1		Speedometer	Hastighetsmätare	4 1980-, US	
0127	1 85 64 940	1		Speedometer	Hastighetsmätare	4 1980-, CA, GLE	
0128	1 85 74 857	1		Speedometer	Hastighetsmätare	4 1980-, CA, TURBO	
0129	1 85 64 387	1		Speedometer	Hastighetsmätare	4 1990-, JA, GLE, TURBO	
0140	2 79 07 892	1		1. Screw	.Skruv	5	
0160	3 85 50 786	1		1. Spring	.Fjäder	5	
0170	3A 85 50 774	1		1. Knob	.Knapp	5	
0180	4 85 44 934	1		1. Combined instrument	Kombinationsinstru- ment kpl	4 -1979	
0200				1. Combined instrument	Kombinationsinstru- ment kpl	4 1980-	
0210	4 85 64 338	1		1. Electric foil with	.El-folie med diod	0	
0220	5 85 51 012	1		1. Connecting house	.Kontakthus	4	
0240				1. Combined instrument	Kombinationsinstru- ment kpl	4 -1979, TURBO	
0260	6 85 52 382	1		1. Combined instrument	Kombinationsinstru- ment kpl	4 1980-, TURBO	
0280	7 85 44 942	1		1. Electric foil with	.El-folie med diod	0	
0300				1. Clock assy	Klocka kpl	6	
0310	7 85 64 346	1		1. Electric foil	.El-folie	0	
0311				1. Connecting house	.Kontakthus	4	
0320	8 85 51 012	1		1. Tachometer with clock	Varvräknare med kloc- ka kpl	4 EMS, TURBO	
0340				1. Electric foil	.El-folie	0	
0360	14 85 50 022	1		1. Clamp	.Klamma	5	
0380	15 85 50 782	1		1. Housing	.Hus	5	
0400	16 85 52 382	1		8. Screw	.Skruv	5	
0420	17 85 50 030	1		1. Reostat	.Reostat	3	
0440				1. Knob	.Knapp	3	
0460	18 85 51 053	1		2. Screw	.Skruv	5	
0480	19 85 58 298	1		9. Bulb	.Lampa	4 (85 00 613)	
0500	23 85 39 298	1		1. Bulb, charge warning	Lampa, laddning	40/238 286 C 17	
0520	24 79 07 892	8		11. Bulb socket	Lamphållare	4	
0540	25 85 51 472	1		2. Bulb	.Lampa	4	
0550	25A 85 52 275	1		2. Bulb socket	Lamphållare	4	
0560	26 79 07 918	2		1. Symbol plate LH	Symbolplatta V	6	
0580	27 85 68 853	9		1. Symbol plate RH	Symbolplatta H	6	
0600	28 85 61 425	1		1. Clamp	.Klamma	5	
0620	29 85 68 853	11		1. Bracket LH	Fäste V	5	
0640	30 85 53 772	2		1. Bracket LH	Fäste V	5	
0660	31 85 52 291	2		1. Bracket RH	Fäste H	5	
0682	32 85 65 004	1		1. Bracket RH	Fäste H	5	
0684	33 85 64 909	1		4. Screw	.Skruv	5	
0686	33 85 64 981	1		1. Impulse transmitter	Impulsgivare	5	
0680	35 85 52 283	1		2. Screw	.Skruv	5	
0700	36 85 50 519	1		2. Screw	.Skruv	5	
0720	36 85 51 111	1		1. Speed switch	Hastighetskontakt	5	
0740	37 85 50 527	1		1. Speed switch	Hastighetskontakt	5	
0760	37 85 51 129	1		2. Screw	.Skruv	5	
0780	38 79 22 347	4		1. Counter unit	Räkneenhet	5	
0800	43 85 52 002	1		1. Counter unit	Räkneenhet	5	
0820	44 85 55 807	1				6 -1976, UC	
0840	45 79 07 892	2				6 1980-, US	
0860	46 85 52 226	1					
0880	46 85 52 234	1					
0890	46A 79 22 818	2					
0900	50 85 22 104						
0910	50 85 63 215						

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

R 4704-900

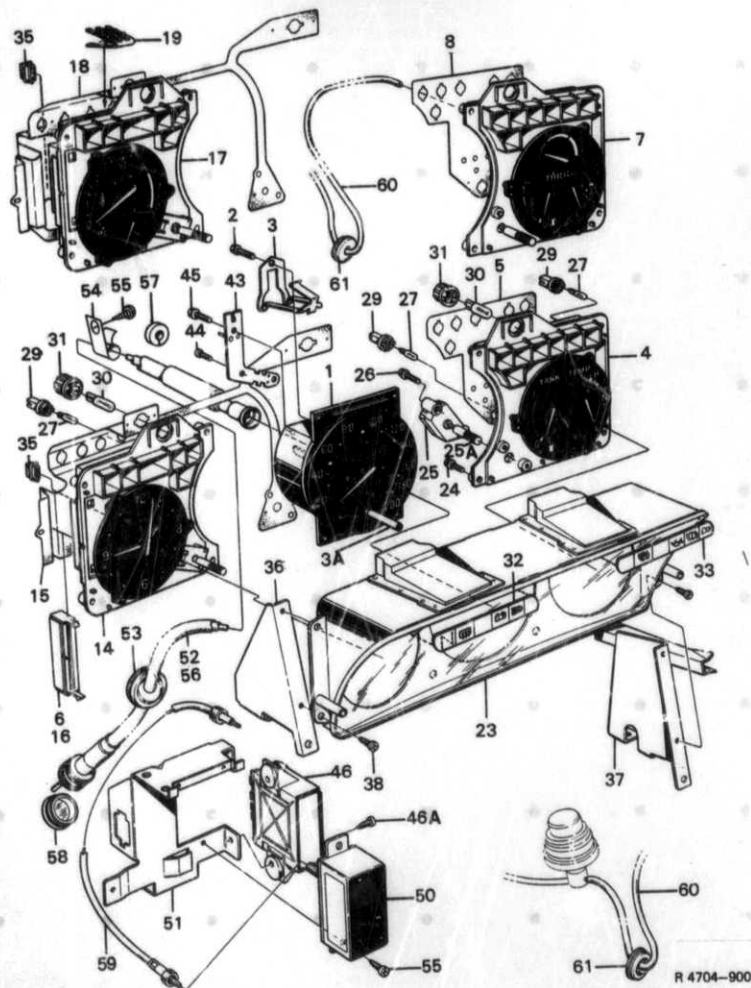

1300

Instruments		Instrument			Date Datum	Illustration Bild nr	Group Grupp	Page Sida
					1987-10	R4704	3	89
Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S S/R L	Notes Anmärkning
		900		US				
51	85 85 176	1		1	Bracket	Konsol	6	11)
51	85 86 845	1		1	Bracket	Konsol	12)	
52	85 61 979	1		1	Speedometer wire	Hastighetsmätarkabel	2	1979-
53	85 59 478	1		1	Grommet	Genomföring	6	
54	85 60 799	1		1	Clip	Clips	6	
55	79 22 347	2		2	Screw	Skruv	5	
56	85 50 352	1		1	Speedometer wire	Hastighetsmätarkabel	2	R H D
57	85 61 029	1		1	Spacer ring	Distansring	5	
58	82 41 325	1		1	Rubber plug	Gummiplugg	5	
59	85 51 095	1		1	Wire counter unit	Kabel räkneenhet	4	UC
60	85 33 465	1		1	Hose	Slang	5	11) TURBO
60	85 33 374	1		1	Hose	Slang	12)	TURBO
60	85 33 473	1		1	Hose	Slang	5	11) TURBO R H D
60	85 33 465	1		1	Hose	Slang	12)	TURBO R H D
61	79 61 337	1		1	Grommet	Genomföring	5	TURBO

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

3 GROUP INDEX

Battery	2-F08
Ignition system	2-F16
Lighting	2-F22
Electrical equipment, other	2-G10
Wiring and fuses	2-H02

11. Ch. -90801018848 - 90802005649 - 90806002137.
12. Ch. 90801018849 - 90802005650 - 90806002138 -



Kraftöverföring
Transmission
Kraftübertragung
Transmission
Transmisión

SAAB
genuine parts
original tillbehör

2-J02

SAAB 900
M79-80
MAKER INDEX

0050

Transmission	Kraftöverföring	Date Datum	Group Grupp	Page Sida
		1987-10	4	1
TABLE OF CONTENTS				
Clutch				
Clutch, clutch disc, clutch cover		4:5	2-J06	
Clutch control				
Pedal, master cylinder		4:7	2-J08	
Gear box, manual				
Gear box assy		4:9	2-J10	
Primary gear case		4:11	2-J12	
Gear box case, oil pan		4:13	2-J14	
Primary gear case, 5-Speed		4:15	2-J16	
Gear box case, oil pan, 5-Speed		4:17	2-J18	
Release bearing		4:19	2-J20	
Shafts, gears, gears shift bars		4:21	2-J22	
Shafts, gears, gears shift bars, 5-Speed		4:25	2-K02	
Differential, inner universal joint		4:29	2-K06	
Gear box control, manual				
Gear shift lever, -housing and -rod		4:33	2-K10	
Drive shafts, outer universal joint		4:37	2-K14	
Gear box, automatic				
Converter, converter housing, covers, etc		4:39	2-K16	
Gear box case with servos, covers, plugs etc		4:41	2-K18	
Primary gear, planetary gear, pinion and crown wheel		4:43	2-K20	
Valve bodies, control system		4:45	2-K22	
Controls in gear box housing		4:49	2-L02	
Differential, inner universal joint see		4:53	2-L06	
Gear box control, automatic		4:29	2-K06	
Gear selector lever, -housing and -cable		4:55	2-L08	
Drive shafts, outer universal joint see		4:37	2-K14	
Rear axle, see group 7				

INNEHÅLLSFÖRTECKNING

Koppling		4:5	2-J06
Kopplingen anövrering			
Pedal, huvudcylinder		4:7	2-J08
Växellåda, manuell			
Växellåda: kpl		4:9	2-J10
Primärväxelhus		4:11	2-J12
Växellåda: hus, oljekar		4:13	2-J14
Primärväxelhus, 1-växlad		4:15	2-J16
Växellåda: hus, oljekar, 5-växlad		4:17	2-J18
Utrangeringsläger, slävcylinder		4:19	2-J20
Axlar, kuggjul, växel förare		4:21	2-J22
Axlar, kuggjul, växel förare, 5-växlad		4:25	2-K02
Differential, inre knut		4:29	2-K06
Växellåda: anövrering, manuell			
Växellåda: växel förare		4:33	2-K10
Drivaxlar yttre knut		4:37	2-K14
Växellåda: automatisk			
Växellåda: kpl		4:39	2-K16
Momentomvandlare, momentomvandlare, kåpor etc		4:41	2-K18
Växellåda: utmod servo, kåpor, pluggar etc		4:43	2-K20
Primärväxel, planetväxel, pinjong och kronhjula		4:45	2-K22
Växelhus kontrollsystem		4:49	2-L02
Rogglager, växel förare		4:53	2-L06
Differential, inre knut se		4:29	2-K06
Växellåda: anövrering, automatisk			
Växellåda: sk, hus och kabel		4:55	2-L08
Drivaxlar, yttre knut		4:37	2-K14
Bakaxel, se grupp 7			

9	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly	
	Steering	3-B02
7	Suspension	
	Wheels	3-C02
8	Body	3-D02
9	Accessories	
	Labels	3-L02
10	Numerical register	4-A02

4 GROUP INDEX

Clutch	2-J06
Clutch control	2-J08
Gear box, manual	2-J10
Gear box control, manual	2-K10
Gear box, automatic	2-K16
Gear box control, automatic	2-L08

Page Sida	Group Grupp	Date Datum	Transmission	Kraftöverföring
2	4	1987-10		

INHALTVERZEICHNIS

Kupplung	4:5	2-J06
Kupplungsmechanismus	4:7	2-J08
Pedale, Hauptzylinder	4:9	2-J10
Getriebe, manuell	4:11	2-J12
Getriebe kpl	4:13	2-J14
Primärtriebsgehäuse	4:15	2-J16
Getriebegehäuse, Ölwanne	4:17	2-J18
Primärtriebshäuser, 5-Gang-Getriebe	4:19	2-J20
Getriebegehäuse, Ölwanne, 5-Gang-Getriebe	4:21	2-J22
Ausrücklager, Nebenzylinder	4:23	2-K02
Wellen, Zahnräder, Schaltführungen	4:25	2-K04
Wellen, Zahnräder, Schaltführungen, 5-Gang-Getriebe	4:27	2-K06
Differential, inneres Antriebsgelenk	4:33	2-K10
Getriebe, manuell	4:37	2-K14
Schalthebel, Schalthebelgehäuse, Schaltstange	4:39	2-K16
Antriebsachse, äusseres Antriebsgelenk	4:41	2-K18
Getriebe, automatisch	4:43	2-K20
Getriebe kpl	4:45	2-K22
Drehmomentwandler, Drehmomentwandlergehäuse, Keppen	4:47	2-L02
Getriebegehäuse mit Servo, Hauben, Pfropfen etc	4:49	2-L04
Primärtrieb, Planetengetriebe, Kegelrad, und Tell	4:51	2-L06
Ventilgehäuse, Kontrollsystem	4:53	2-L08
Regulierung im Getriebegehäuse	4:55	2-L10
Differential, inneres Antriebsgelenk Siehe	4:57	2-K14
Getriebe, automatisch	4:59	2-L08
Wählhebel, Wählhebelgehäuse, Schaltwählkabel	4:61	2-L10
Antriebsachse, äusseres Antriebsgelenk Siehe	4:63	2-K14
Hinterachse, siehe Grupp 7		

TABLE DE MATIERES

Embrayage	4:5	2-J06
Embrayage, disque, Carter	4:7	2-J08
Commande d'embrayage	4:9	2-J10
Pedale, maître-cylindre	4:11	2-J12
Boîte de vitesses, manuelle	4:13	2-J14
Boîte de vitesses, compl.	4:15	2-J16
Carter de engrenage primaire	4:17	2-J18
Carter de boîte de vitesses, Carter inférieur	4:19	2-J20
Carter de engrenage primaire, 5-Vitesses	4:21	2-J22
Carter de boîte de vitesses, Carter inférieur, 5-Vitesses	4:23	2-K02
Butes d'embrayage, cylindre esclave	4:25	2-K04
Arbres, pignons, fourchettes entraine-vitesses	4:27	2-K06
Arbres, pignons, fourchettes entraine-vitesses, 5-Vitesses	4:29	2-K08
Differential, joint, cardan intérieur	4:33	2-K10
Commande de boîte de vitesses, manuelle	4:37	2-K14
Lévior, boîte et tringle de changement de vitesses	4:39	2-K16
Arbre d'entraînement, joint cardan extérieur	4:41	2-K18
Boîte de vitesses, automatique	4:43	2-K20
Boîte de vitesses, compl.	4:45	2-K22
Convertisseur, Carter de convertisseur de couple, couvercles	4:47	2-L02
Carter de boîte de vitesses avec servoaide, couvercles, bouchons, etc	4:49	2-L04
Engrenage principal, engrenages planétaires, pignon d'attaque et couronne	4:51	2-L06
Carter de soupapes, système de contrôle	4:53	2-L08
Commande en boîte de vitesses	4:55	2-L10
Differential et joint-cardan intérieur Voir	4:57	2-K14
Commande de boîte de vitesses, automatique	4:59	2-L08
Lévior sélecteur, couvercle et câble	4:61	2-L10
Arbres d'entraînement, joint-cardan extérieur Voir	4:63	2-K14
Essai arrière, voir group 7		

Transmission	Kraftöverföring	Date Datum	Group Grupp	Page Sida
		1987-10	4	3

SUMARIO

Embrague	4:5	2-J06
Embrague, disco de embrague, tapa de embrague	4:7	2-J08
Mando de embrague	4:9	2-J10
Pedal, cilindro principal	4:11	2-J12
Cambio, manual	4:13	2-J14
Caja de cambios, compl.	4:15	2-J16
Caja de engranaje primario	4:17	2-J18
Carter de caja	4:19	2-J20
Caja de engranaje primario, 5-Velocidades	4:21	2-J22
Carter de caja de cambios, 5-Velocidades	4:23	2-K02
Cajinete de empuje, cilindro esclavo	4:25	2-K04
Ejes, engranajes, horquillas de mando de velocidades, 5-Velocidades	4:27	2-K06
Diferencial, junta homocinética interior	4:33	2-K10
Mandos del cambio, manual	4:37	2-K14
Palanca, caja y barra de cambios	4:39	2-K16
Eje de accionamiento, junta homocinética exterior	4:41	2-K18
Caja de cambios, automática	4:43	2-K20
Convertidor, Carter de convertidor de par, tapas, etc	4:45	2-K22
Carter de caja de cambios con servoaide, tapas, tapones, etc	4:47	2-L02
Engranaje principal, engranajes planetarios, piñón de ataque y corona	4:49	2-L04
Carter de válvulas, sistema de control	4:51	2-L06
Mando de caja de cambios	4:53	2-L08
Diferencial y junta homocinética interior ver	4:55	2-L10
Mando de caja de cambios	4:57	2-K14
Palanca selector, caja y cable	4:59	2-L08
Eje de accionamiento, junta homocinética exterior ver	4:61	2-L10
Eje trasero, ver grupo 7	4:63	2-K14

0	General	1-A02
1	Tools	1-102
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

4 GROUP INDEX

Clutch	2-J06
Clutch control	2-J08
Gear box, manual	2-J10
Gear box control, manual	2-K10
Gear box, automatic	2-K14
Gear box control, automatic	2-L08

0100

Clutch
Clutch, clutch disc,
clutch cover

Koppling
Koppling, lamell, kopp-
lingskåpa

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Side


1987-10

R3757

4

5

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR	Notes Anmärkning
		900	US				
0020	1 87 04 116	1		1 Pressure plate	Trycksiva	S/2	
0040	1 87 12 036	1		1 Pressure plate	Trycksiva	S/2	
0060	2 83 07 498	1		1 Clutch disc	Lamell	S/2	TURBO
0070	2 87 15 252	1		1 Clutch disc	Lamell	S/2	5-SPEED
0080	2 87 12 044	1		1 Clutch disc	Lamell	S/2	TURBO, NOT SW
0085	2 87 26 713	1		1 Clutch disc	Lamell	S/2	TURBO, SW
0090	2 87 15 280	1		1 Clutch disc	Lamell	S/2	TURBO 5-SPEED
0100	3 83 00 469	20		20 Rivet	Nit	S/5	
0120	4 83 07 407	3		3 Guide pin	Styrstift	5	
0140	5 80 82 968	6		6 Screw	Skruv	5	
0160	6 83 80 962	6		6 Washer	Bricka	5	
0180	7 83 31 712	1		1 Clutch cover	Kopplingskåpa	5	-1979
0181	7 93 29 715	1		1 Clutch cover	Kopplingskåpa	5	1980-
0200	8 80 98 055	3		3 Screw	Skruv	5	
0220	9 80 29 985	3		3 Washer	Bricka	5	
0240	10 83 38 899	1		1 Cover	Lock	5	
0260	11 85 52 655	1		1 Bracket	Fästöra	6	
0280	11 83 80 214	1		1 Clutch disc lining	Lamellbeläggssats med nit	5	
0300							
0320	93 20 185	1		1 Repair kit, clutch	Kopplingsatts	2	
0325	88 18 080	1		1 Repair kit, clutch	Kopplingsatts	2	TURBO, NOT SW
0340	93 21 357	1		1 Repair kit, clutch	Kopplingsatts	2	TURBO, NOT SW
0345	88 18 106	1		1 Repair kit, clutch	Kopplingsatts	2	TURBO SW
0350	87 81 221	1		1 Repair kit, clutch	Kopplingsatts	2	5-SPEED
0360	93 21 340	1		1 Repair kit, clutch	Kopplingsatts	2	5-SPEED TURBO
0380	93 21 385	1		1 Repair kit, clutch	Kopplingsatts	2	5-SPEED TURBO
0385	88 18 114	1		1 Repair kit, clutch	Kopplingsatts	2	
0400							
0420	88 18 262	X		X Repair kit, clutch	Rep. sats, koppling	2	

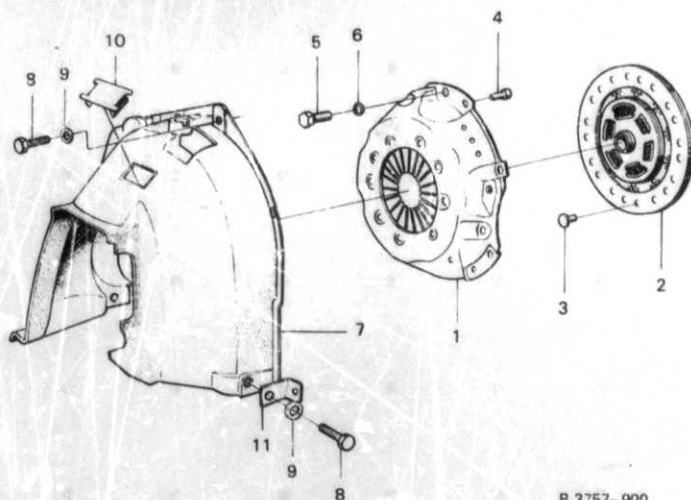

R 3757-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

4 GROUP INDEX

Clutch	2-J06
Clutch control	2-J08
Gear box, manual	2-J10
Gear box control, manual	2-K10
Gear box, automatic	2-K18
Gear box control, automatic	2-L08

0150

Clutch control
Pedal, master cylinder

Kopplingsmanövrering
Pedal, huvudcylinder


Date
Datum
1987-10

Illustration
Bild nr
R3758

Group
Grupp
4

Page
Sida
7

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0320	1 89 39 910	1		1 Clutch pedal assy	Kopplingspedal kpl	6	
0340	2 89 38 185	1		1 Clutch pedal assy	Kopplingspedal kpl	6	
0060				R.H.D.	R.H.D.		
0080	3 89 16 272	1		1 Pedal rubber	Pedalgummi	5	
0100	4 84 07 983	1		1 Bushing	Bussning	4	
0120	5 89 24 490	1		1 Distance tube	Distansrör	4	
0140	6 89 48 051	2		2 Bushing	Bussning	4	
0160	7 80 94 150	1		1 Screw	Skruv	5	
0180	8 60 73 538	1		1 Nut	Mutter	3	
0200	9 89 35 751	1		1 Spring	Fjäder	3	
0221	10 89 44 977	1		1 Master cylinder assy	Huvudcylinder kpl	2	(8335363)
0240	11 73 13 158	1		1 Spring	Fjäder	3	(5)
0241	11 89 88 622	1		1 Spring	Fjäder	3	(6), (8945123)
0260	12 73 13 186	1		1 Spring retainer	Fjäderhållare	5	(5)
0261	12 89 45 156	1		1 Spring retainer	Fjäderhållare	5	(6)
0280	13 89 03 304	1		1 Gasket	Packning	5	(5) S
0281	13 89 45 246	1		1 Gasket	Packning	5	(6) S
0300	14 73 13 182	1		1 Washer	Bricka	5	(5) S
0301	14 89 45 255	1		1 Washer	Bricka	5	(6) S
0320	15 89 30 182	1		1 Piston	Kolv	6	(6) S
0321	15 89 45 263	1		1 Piston	Kolv	6	(6)
0340	16 89 40 769	1		1 Seal	Packning	5	S
0360	17 99 35 371	1		1 Push rod	Stödstång	5	
0380	18 73 13 232	1		1 Lock ring	Låsring	5	
0400	19 73 13 240	1		1 Seal bellows	Tätningståg	5	S
0420	20 79 63 387	1		1 Pipe clip	Rörclips	5	
0440	21 80 74 105	2		2 Nut	Mutter	5	
0480	22 79 33 849	2		2 Washer	Bricka	5	
0480	23 79 09 986	1		1 Shaft bolt	Åxelbult	5	
0500	24 79 04 394	1		1 Split pin	Saxpinne	3	
0520	25 80 29 985	1		1 Washer	Bricka	5	
0540	26 89 27 139	1		1 Hose, intake	Slang, inlopp	5	
0560	27 85 35 124	1		1 Hose	Slang	5	
0580	28 89 40 829	2		2 Pipe clip	Rörclips	5	
0600	29 83 71 551	1		1 Clamp	Klämme	5	
0620	30 79 22 891	1		1 Screw	Skruv	5	
0640	31 89 93 156	1		1 Repair kit, master cylinder	Reparationsset, huvudcylinder	1	(8910341)
0660	32 89 41 478	1		1 Gasket	Packning	5	
0700	33 79 63 135	1		1 Lock ring RHD	Spärring RHD	5	A
0720	34 80 29 983	1		1 Washer RHD	Bricka RHD	5	A
0740	35 89 41 312	1		1 Spring R.H.D.	Fjäder R.H.D.	3	

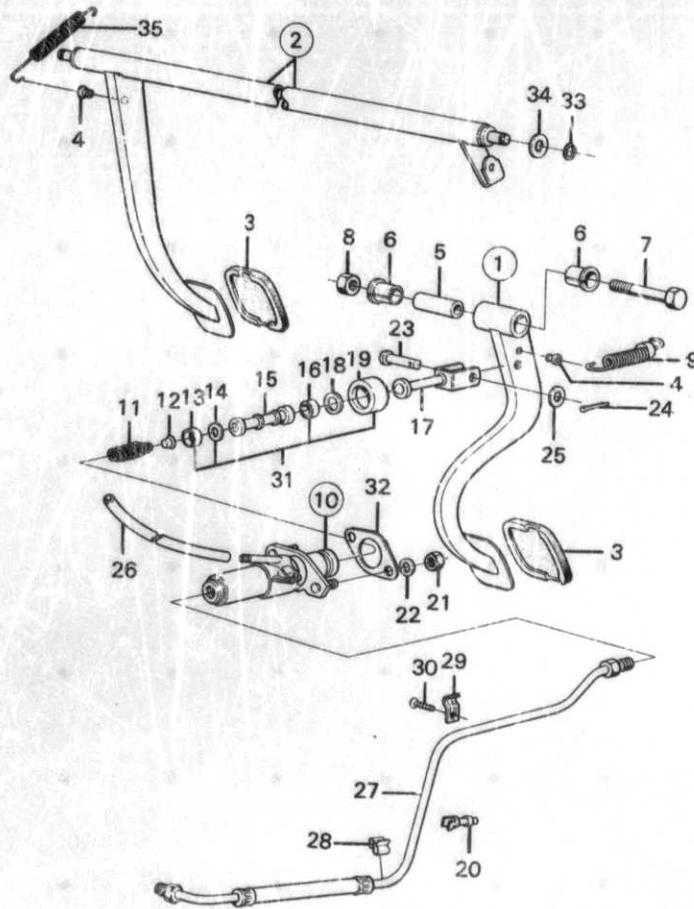

R 3758-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

4 GROUP INDEX

Clutch	2-J06
Clutch control	2-J08
Gear box, manual	2-J10
Gear box control, manual	2-K10
Gear box, automatic	2-K16
Gear box control, automatic	2-L08

0175

Gear box assy
Manual

Växellåda kpl
Manuell


Date
Datum
1987-10

Illustration
Bild nr
R5924

Group
Grupp
4

Page
Sida
9

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S S/R	Notes Anmärkning
		900		US				
0020					4-SPEED	4-VÄXLAD		
0040								
0080	1 87 12 366	1			1 Gear box assy	Växellåda kpl	5	MARKED-G 34402
0100	1 87 13 984	1			1 Gear box assy	Växellåda kpl	5	TURBO MARKED-G 446/32
0120	1 87 12 416	1			1 Gear box assy	Växellåda kpl	5	TURBO USA AND CA MARKED-G 446/2
0140								
0160					5-SPEED	5-VÄXLAD		
0200								
0220	1 87 13 679	1			1 Gear box assy	Växellåda kpl	5	MARKED-G 46702

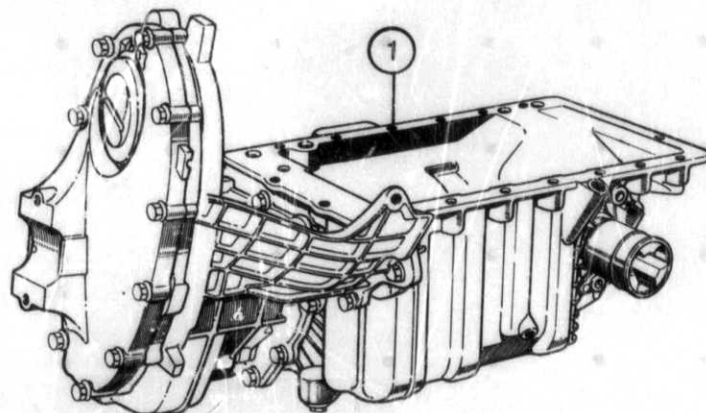

R 5924-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A/2
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

4 GROUP INDEX

Clutch	2-J06
Clutch control	2-J08
Gear box, manual	2-J10
Gear box control, manual	2-K10
Gear box, automatic	2-K18
Gear box control, automatic	2-L08

0199

Gear box, 4-speed
Primary gear case

Växellåda, 4-växlad
Primärväxelhus


Date
Datum
1987-10

Illustration
Bild nr
R9340

Group
Grupp
4

Page
Sida
11

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S	Notes Anmärkning
		87	87	87			SR	
		12	12	12			/	
		366	984	416			L	
0020	87 12 366	1			Gear box assy	Växellåda kpl	5	
0040	87 13 984		1		Gear box assy	Växellåda kpl	5	
0060	87 12 416		1	1	Gear box assy	Växellåda kpl	5	TURBO
0080	87 04 504	1	1	1	Primary gear case	Primärväxelhus	6	TURBO, US AND CA
0100	87 10 303	1	1	1	Yoke	Bygel	5	
0120	87 10 956	1	1	1	Cover, clutch shaft	Lock, lamellaxel	4	
0140	87 13 216	1	1	1	Gasket	Packning	4	
0160	87 12 317	1	1	1	Primary gear cover	Primärväxellock	5	
0200	87 14 750	1	1	1	Oil collector	Oljeuppsamlare	5	(8712333)
0220	80 83 958	11	11	11	Screw	Skruv	5	
0240	80 29 985	11	11	11	Washer	Bricka	5	
0260	87 12 903	1	1	1	Gasket	Packning	4	
0280	80 83 933	10	10	10	Screw	Skruv	5	
0300	80 29 985	10	10	10	Washer	Bricka	5	
0320	87 00 775	1	1	1	Bearing support	Lagerstöd	6	
0340	87 03 852	4	4	4	Screw	Skruv	5	

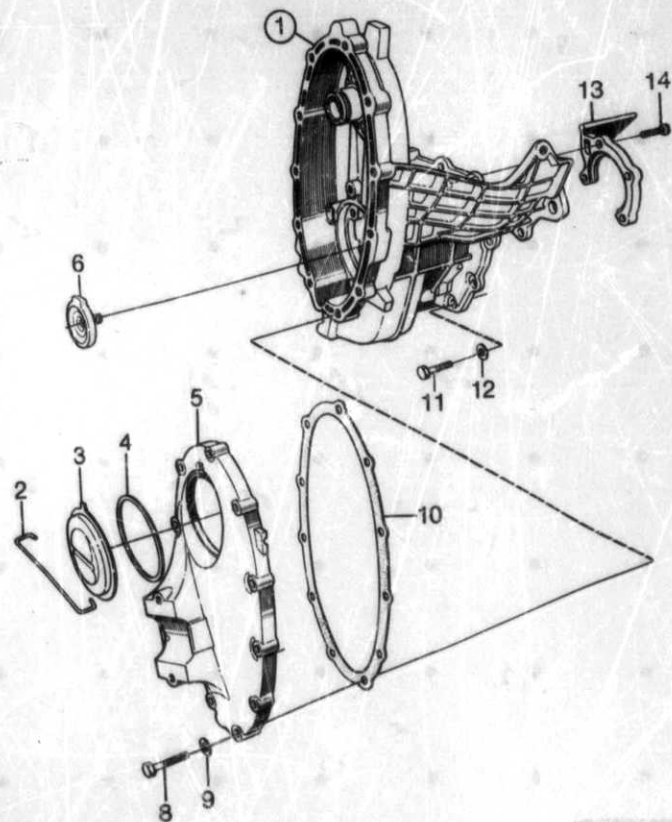


R 9340-900

0	General	1-A02
1	Tools	1-M02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

4 GROUP INDEX

Clutch	2-J06
Clutch control	2-J08
Gear box, manual	2-J10
Gear box control, manual	2-K10
Gear box, automatic	2-K16
Gear box control, automatic	2-L08

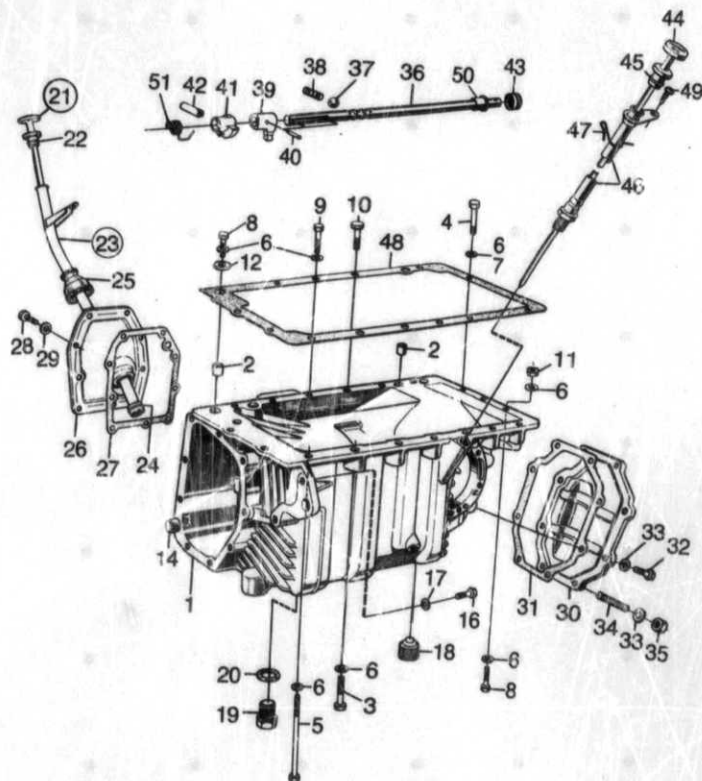

R 9341-900

020

Gear box, 4-speed
Gear boxcase oil pan

Växellåda, 4-växlad
Växellådshus, oljesump

Date
Datum
1987-

Illustration	Bild nr
D	R9341

n	Group Grupp
---	----------------

Page	13
Sida	

Fig. Pos.	Part No Art nr	Quantity/Antal				Description	Benämning	KS S/R	Notes Anmärkning
		87	87	87					
		12	13	12					
		366	804	816					
	87 12 366	1				Gear box assy	Växellåda kpl	5	
	87 13 984		1			Gear box assy	Växellåda kpl	5	TURBO
	87 12 416			1		Gear box assy	Växellåda kpl	5	TURBO, US AND CA
1	87 15 424					Gear box case	Växellåddushus	6	(8712390)
2	83 00 725	2	2	2		Guide bushing	Styrbushning	4	
3	80 83 958	6	6	6		Screw	Skruv	5	
4	80 98 089	1	1	1		Screw	Skruv	5	
5	79 65 569	1	1	1		Screw	Skruv	5	
6	80 29 985	12	12	12		Washer	Bricka	5	
7	83 80 982	1	1	1		Washer	Bricka	5	
8	83 46 354	1	1	1		Screw	Skruv	5	(E083086)
9	80 83 933	6	6	6		Screw	Skruv	5	
10	80 83 941	1	1	1		Screw	Skruv	0	
11	80 74 106	1	1	1		Nut	Mutter	5	
12	70 61 328	1	1	1		Washer	Bricka	5	(8300055)
14	83 42 594	2	2	2		Cylinder pin	Cylinder pinne	5	
16	80 82 998	1	1	1		Screw	Skruv	5	
17	80 29 985	1	1	1		Washer	Bricka	5	
18	87 03 399	1	1	1		Drain plug, gear box	Avtappningsplugg, växellåda	1	
19	87 11 871	1	1	1		Drain plug, engine	Avtappningsplugg, motor	1	(849606)
20	88 49 614	1	1	1		Gasket	Packning	3	
21	93 36 579	1	1	1		Dipstick assy	Oljemätsticka kpl	1	
22	79 71 948	1	1	1		.O-ring	.O-ring	2	
23	75 42 939	1				Tube, dipstick assy	Rör, oljemätsticka kpl	5	(8334484)
	75 42 921	1				Tube, dipstick assy	Rör, oljemätsticka kpl	6	PARTED EXHAUST MANIFOLD (8334500)
23	75 42 947	1	1	1		Tube, dipstick assy	Rör, oljemätsticka kpl	6	(9317082)
24	79 71 930	1	1	1		.O-ring	.O-ring	2	
25	83 34 401	1	1	1		Cup	.Kopp	5	
26	87 12 077	1	1	1		Cover	Kåpa	2	
27	87 25 814	1	1	1		Gasket	Packning	2	(8703001)
28	80 82 943	9	9	9		Screw	Skruv	5	
29	80 29 985	9	9	9		Washer	Bricka	5	
30	87 11 616	1	1	1		Cover, rear	Kåpa, bakre	5	
31	87 18 785	1	1	1		Gasket	Packning	3	
31	87 25 033	1	1	1		Gasket	Packning	4	(8713968)
32	80 82 943	8	8	8		Screw	Skruv	5	
33	80 29 985	8	8	8		Washer	Bricka	5	
34	87 13 950	1	1	1		Screw	Pinnskruv	5	
35	80 74 106	2	2	2		Nut	Mutter	5	
36	87 12 192	1	1	1		Gear selector rod	Växelväljerstång	5	
37	83 41 257	1	1	1		Ball	Kula	5	
38	87 19 775	1	1	1		Spring	Fjäder	5	
39	83 43 014	1	1	1		Driver	Medbringare	5	
40	80 49 553	2	2	2		Tension pin	Spännstift	5	(7966337)
41	87 12 200	1	1	1		Detent	Spärr	5	
42	87 13 952	1	1	1		Guide pin	Styrstapp	3	
43	83 44 335	1	1	1		Seal ring	Tätningssring	4	
44	83 34 872	1	1	1		Dipstick assy	Oljemätsticka kpl	3	
45	79 87 573	1	1	1		.O-ring	.O-ring	2	
46	83 11 482	1	1	1		Tube, dipstick	Rör, oljemätsticka	6	
47	83 21 804	1	1	1		Hook, tube	Krok, rör	5	
48	75 14 946	1	1	1		Gasket	Packning	3	(814502)
	75 10 258	X	X	X		Sealing compound for	Tätningssmedel för	3	TUBE 310 ML DIRKO TYPE 45 NO 3021243
	75 4943	1	1	1		Screw	751 4946	5	
49	87 11 608	1	1	1		Bushing	Bussning	4	
51	87 12 184	1	1	1		Spring	Fjäder	3	

4 GROUP INDEX

Clutch	2-J06
Clutch control	2-J08
Gear box, manual	2-J10
Gear box control, manual	2-K10
Gear box, automatic	2-K16
Gear box control, automatic	2-L08

0224

Gear box, 5-speed
Primary gear case

Växellåda, 5-växlad
Primärväxelhus


Date
Datum
1987-10

Illustration
Bild nr
R9342

Group
Grupp
4

Page
Sida
15

Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	KS SR / L	Notes Anmärkning
0020	1 87 13 679	1	Gear box assy	Växellåda kpl	5	
0100	1 87 13 612	1	Primary gear case	Primärväxelhus	5	
0180	4 87 10 303	1	Yoke	Bygel	5	
0180	5 87 10 958	1	Cover, clutch shaft	Lock, lamellaxel	4	
0200	6 87 13 216	1	Gasket	Packning	4	
0220	7 87 12 317	1	Primary gear cover	Primärväxellock	5	
0280	8 87 14 750	1	Oil collector	Oljeuppsamlare	5	
0300	9 87 14 743	1	Lock ring	Låsring	5	
0320	10 80 53 958	11	Screw	Skruv	5	
0340	11 80 29 985	11	Washer	Bricka	5	
0360	12 87 12 903	1	Gasket	Packning	4	
0380	13 80 83 933	10	Screw	Skruv	5	
0400	14 80 29 985	10	Washer	Bricka	5	
0420	15 37 00 775	1	Bearing support	Lagerstöd	6	
0440	16 87 03 852	4	Screw	Skruv	5	
0490	17 87 12 978	1	Cover	Lock	5	
0480	18 87 12 986	1	Gasket	Packning	4	
0500	19 80 83 933	9	Screw	Skruv	5	
0520	20 80 29 985	9	Washer	Bricka	5	

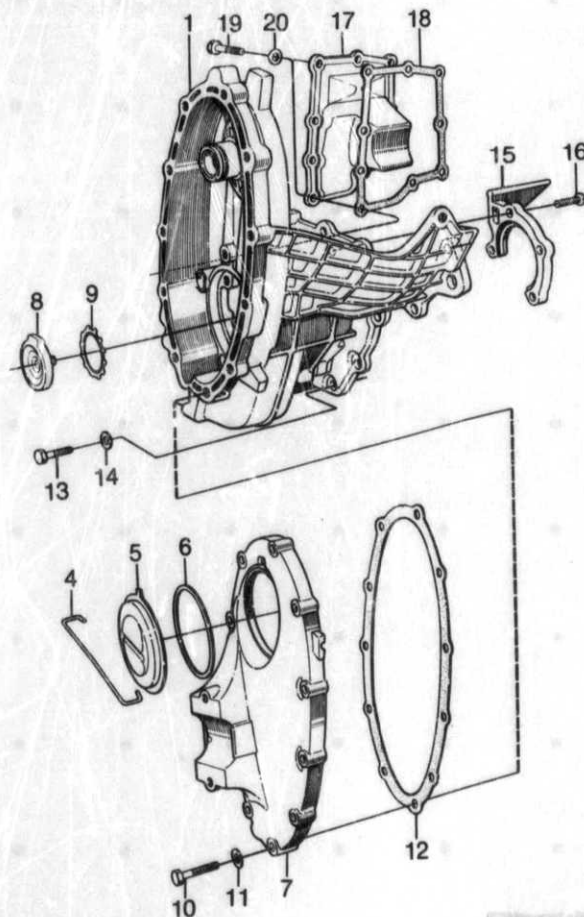

R 9342-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

4 GROUP INDEX

Clutch	2-J06
Clutch control	2-J08
Gear box, manual	2-J10
Gear box control, manual	2-K10
Gear box, automatic	2-K16
Gear box control, automatic	2-L08

0225

Gear box, 5-speed
Gear box case, oil pan


Växellåda, 5-växlad
Växellådshus, oljesump

Date
Datum
1987-10

Illustration
Bild nr
R9343

Group
Grupp
4

Page
Sida
17

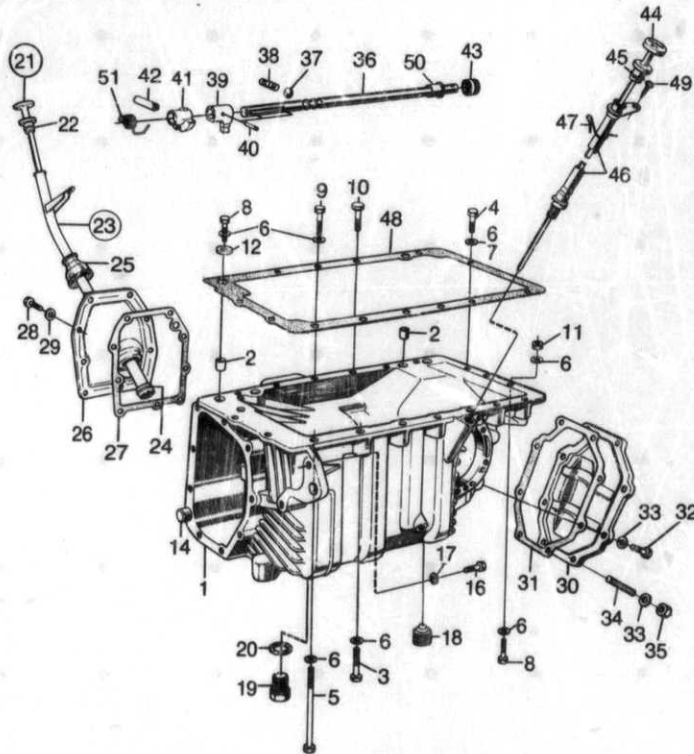

R 9343-900

Fig. Pos.	Part No Art nr	Quantity/Amt	Description	Benämning	K/S SR /L	Notes Anmärkning
0040	87 13 679	1	Gear box assy	Växellåda kpl	5	
0060	87 12 390	1	Gear box case	Växellådshus	6	
0080	83 00 725	2	Guide bushing	Styrbusning	4	
0100	80 93 956	6	Screw	Skruv	5	
0120	80 96 089	1	Screw	Skruv	5	
0140	79 65 569	1	Screw	Skruv	5	
0160	80 29 985	12	Washer	Bricka	5	
0180	83 80 982	1	Washer	Bricka	5	
0200	93 46 354	1	Screw	Skruv	5	(8083966)
0220	80 83 933	6	Screw	Skruv	5	
0240	80 83 941	1	Screw	Skruv	5	
0260	80 74 106	1	Nut	Mutter	5	
0280	70 61 328	1	Washer	Bricka	5	(8300055)
0320	83 42 594	2	Cylindrical pin	Cylindrisk pinne	5	
0360	80 82 968	1	Screw	Skruv	5	
0380	80 29 985	1	Washer	Bricka	5	
0400	87 03 399	1	Drain plug, gear box	Avtappningsplugg, växellåda	3	
0420	87 11 871	1	Drain plug, engine	Avtappningsplugg, motor	1	(8849606)
0440	88 49 614	1	Gasket	Packning	1	
0460	93 36 579	1	Dipstick assy	Oljemätsticka kpl	3	
0480	79 71 948	1	O-ring	O-ring	2	
0780	75 42 947	1	Tube, dipstick assy	Rör, oljemätsticka kpl	6	(9317082)
0800	79 71 930	1	O-ring	O-ring	2	
0820	83 34 401	1	Cup	Kåpa	5	
0840	87 12 077	1	Cover	Kåpa	5	
0900	87 25 814	1	Gasket	Packning	5	(8703001)
1000	80 82 935	9	Screw	Skruv	5	
1020	80 29 985	9	Washer	Bricka	5	
1040	87 11 618	1	Cover, rear	Kåpa, bakre	5	
1060	87 18 785	1	Gasket	Packning	4	
1080	80 82 943	6	Screw	Skruv	5	
1100	80 29 985	6	Washer	Bricka	5	
1120	87 13 950	2	Stud	Pinnskruv	5	
1140	80 74 106	2	Nut	Mutter	5	
1160	87 12 192	1	Gear selector rod	Växelväljarestång	5	
1180	83 41 257	1	Ball	Kula	5	
1200	87 19 775	1	Spring	Fjäder	5	
1220	83 43 014	1	Driver	Medbringare	5	
1240	80 49 553	2	Tension pin	Spännstift	5	(7956337)
1260	87 12 945	1	Detent	Spärr	5	
1300	87 12 952	1	Guide pin	Styrapp	5	
1320	83 44 335	1	Seal ring	Tätningaring	4	
1340	83 34 872	1	Dipstick assy	Oljemätsticka kpl	3	
1360	79 67 573	1	O-ring	O-ring	2	
1380	83 11 482	1	Hook, tube	Rör, oljemätsticka	5	
1400	83 21 804	1	Gasket	Krok, rör	5	
1420	75 14 946	1	Sealing compound for	Packning	3	(8314502)
1430	75 10 258	X	Sealing compound for	Tätningemedel för	3	TUBE 310 ML DIRKO TYPE
1431			7514946	7514946	45	NO 3021243
1440	79 22 420	1	Screw	Skruv	5	
1460	87 11 608	1	Bushing	Bussning	4	
1480	87 13 186	1	Spring	Fjäder	5	


0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

4 GROUP INDEX

Clutch	2-J06
Clutch control	2-J06
Gear box, manual	2-J10
Gear box control, manual	2-K10
Gear box, automatic	2-K10
Gear box control, automatic	2-L06

0250

Gear box Release bearing, slave cylinder				Växellåda Urtrampningslager, slavcylinder		Date Datum	Illustration Bild nr	Group Grupp	Page Sida
						1987-10	R4178	4	19
Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R		Notes Anmärkning	
		900	US						
0040	2 87 04 728	1		1 Release bearing	Urtrampningslager	2			
0060	3 87 11 533	1		1 Slave cylinder assy	Slavcylinder kpl	2			
0080	4 87 11 285	1		1 ..O-ring	..O-ring	S3			
0100	5 87 04 801	2		2 ..Lock ring	..Spärring	5	-1979		
0101	5 87 04 801	1		1 ..Lock ring	..Spärring	5	1980		
0121	6 87 14 263	1		1 ..Cylinder housing	..Cylinderhus	4	(8710550)		
0140	7 87 10 568	1		1 ..Sleeve	..Hylsa	4			
0160	9 87 11 806	1		1 ..O-ring	..O-ring	S2			
0180	10 87 04 702	1		1 ..Piston	..Kolv	6			
0200	11 87 11 855	1		1 ..Rubber seal	..Gummitätning	S3			
0220	12 87 11 053	1		1 ..Bleeding nipple	..Urluftsningippel	6			
0240	13 80 97 925	3		3 Screw	Skruv	5			
0260	14 80 29 951	3		3 Washer	Bricka	5			
0280	15 87 14 412	1		1 Sealing sleeve	Tätningshylsa	S2	1980-		
0270	16 87 14 420	1		1 Lock ring	Spärring	S5	1980-		
0300	87 70 893	1		1 Repair kit, slave cylinder	Reparationssats, slav- cylinder	3	-1979		
0320				1 Repair kit, slave cylinder	Reparationssats, slav- cylinder	3	1980-		
0340	87 81 007	1							

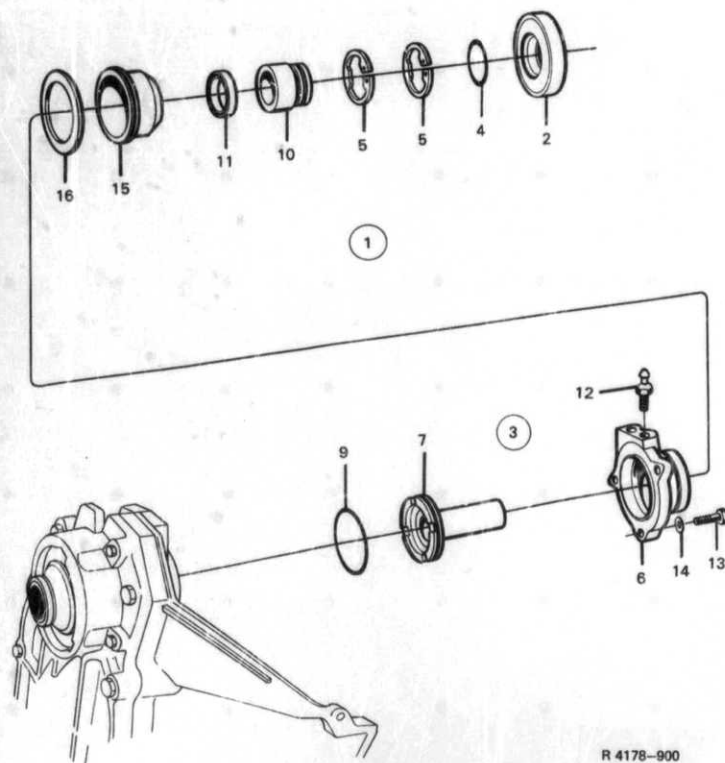


R 4178-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

4 GROUP INDEX

Clutch	2-J06
Clutch control	2-J08
Gear box, manual	2-J10
Gear box control, manual	2-K10
Gear box, automatic	2-K16
Gear box control, automatic	2-L08

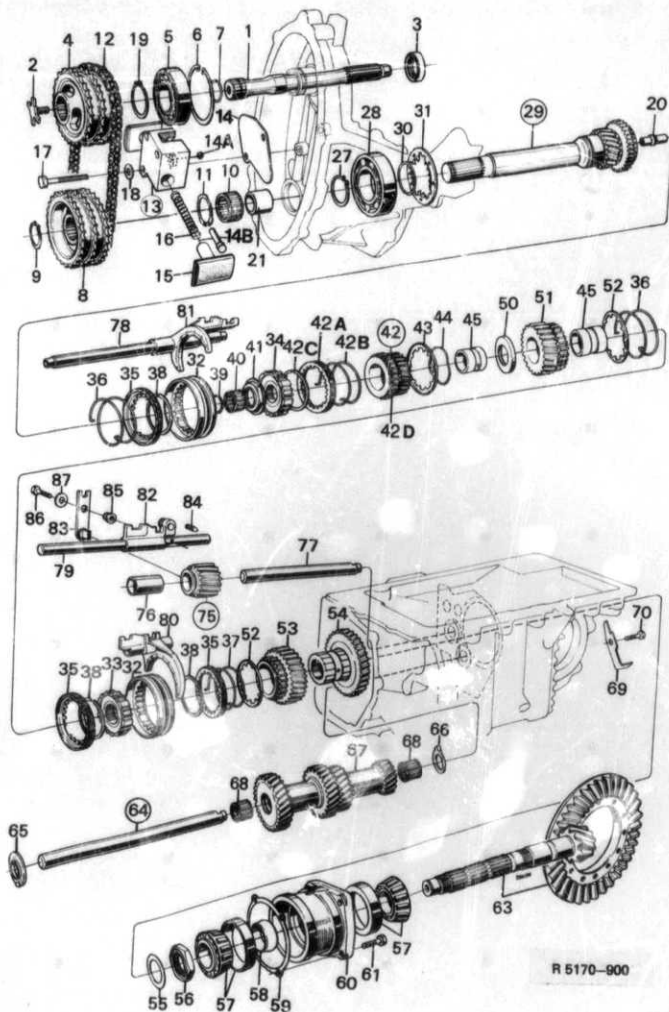

0000

Gear box, 4-speed
Shafts, gears, gear shift
bars

Växellåda, 4-växlad
Axlar, kuggghjul,
växelförare

Date
Datum

Illustration
Bild nr

Group
Grupp


Page
Side

Fig. Pos.	Part No Art nr	Quantity/Åntal				Description	Benämning	K/S S/R	Notes Anmärkning
		87 366	87 984	87 12	87 16				
0020	1	87 11 350	1	1	1	Clutch shaft	Lamellaxel	3	
0040	2	87 11 038	1	1	1	Screw	Skruv	3	
0060	3	87 10 881	1	1	1	Seal ring	Tätningssring	2	
0080	4	87 11 343	1	1	1	Chain wheel, upper	Kedjehjul, övre	5	
0100	5	87 11 582	1	1	1	Chain wheel, upper	Kedjehjul, övre	5	
0120	5	87 10 865	1	1	1	Roller bearing	Rullelager	3	
0140	6	87 11 376	1	1	1	Lock ring	Spärring	4	
0160	7	87 04 777	1	1	1	Lock ring	Läkring	3	
0180	8	87 11 301	1	1	1	Chain wheel, lower	Kedjehjul, nedre	5	
0200	8	87 13 778	1	1	1	Chain wheel, lower	Kedjehjul, nedre	5	
0220	8	87 11 400	1	1	1	Chain wheel, lower	Kedjehjul, nedre	5	
0240	9	79 15 168	1	1	1	Lock ring	Läkring	5	INSIDE DIAM 22.2 MM
0242	9	87 14 677	1	1	1	Lock ring	Läkring	5	INSIDE DIAM 20.5 MM. ALT. TO 7915188
0243									
0280	10	87 11 384	1	1	1	Needle bearing	Nålager	4	
0280	11	87 11 547	1	1	1	Lock ring	Läkring	4	
0300	12	87 10 964	3	1	1	Chain	Kedja	5	
0320	12	87 11 590	1	3	3	Chain	Kedja	5	TURBO
0341	13	87 13 471	1	1	1	Chain tensioner assy	Kedjesträckare kpl	5	TURBO (8711673)
0361	13	87 13 570	1	1	1	Chain tensioner assy	Kedjesträckare kpl	5	
0381	14	87 13 513	1	1	1	Spacer plate	Distansplatta	4	
0390	14A	87 13 554	1	1	1	Ball	Kula	5 (2)	
0391	14B	87 13 539	1	1	1	Plug	Plugg	3 (2)	
0401	15	87 13 497	2	2	2	Tightener shoe	Sträckarsko	5	
0421	16	87 13 521	1	1	1	Spring	Fjäder	5	
0440	17	80 83 982	2	2	2	Screw	Skruv	5	
0460	18	80 29 985	2	2	2	Washer	Bricka	5	
0480	19	80 47 839	1	1	1	Lock ring	Läkring	5	
0500	20	87 13 158	1	1	1	Connecting pipe	Förbindelserör	6 (8711382)	
0505	21	87 04 611	1	1	1	Inner ring	Innerring	4	
0520	27	80 47 854	1	1	1	Lock ring	Spärring	5 (7915267)	
0540	28	87 00 767	1	1	1	Ball bearing	Kullager	3	
0560	29	87 11 434	1	1	1	Input shaft assy	Ingående axel kpl	6	
0565	29	87 12 465	1	1	1	Input shaft assy	Ingående axel kpl	6	
0580	30	87 10 410	1	1	1	Lock ring	Läkring	3	
0590	30	87 13 224	1	1	1	Lock ring	Läkring	3	
0600	31	87 04 041	1	1	1	Guide ring	Styrning	4	
0610	31	87 11 954	1	1	1	Guide ring	Styrning	0	
0620	32	87 00 411	2	2	2	Synchronizing muff	Synkroniseringsmuff	5	(6700403)
0640	33	87 12 283	1	1	1	Synchronizing hub	Synkroniseringsnav	5 (9704090)	
0660	34	87 12 283	1	1	1	Synchronizing hub	Synkroniseringsnav	3	
0680	35	87 12 135	3	3	3	Synchronizing ring	Spärrfjäder	4	
0700	36	87 00 429	1	1	1	Catch spring	Spärrfjäder	4	
0720	37	87 11 103	1	1	1	Catch spring	Spärrfjäder	4	
0740	38	87 04 942	3	3	3	Lock ring	Läkring	4	
0760	39	79 51 437	1	1	1	Lock ring	Spärring	5	
0780	40	87 00 478	1	1	1	Needle bearing	Nålager	5	
0800	41	87 04 108	1	1	1	Nut	Mutter	5	
0840	42	87 11 632	1	1	1	Gear, 3rd assy	Kuggghjul 3:an kpl	4	
0845	42A	87 12 135	1	1	1	Synchronizing ring	Synkroniseringsring	3	
0849	42B	87 00 429	1	1	1	Catch spring	Spärrfjäder	4	
0857	42C	87 04 942	1	1	1	Lock ring	Läkring	4	
0848	42D	87 11 640	1	1	1	Gear, 3rd	Kuggghjul 3:an	4	
0880	43	87 02 730	1	1	1	Guide ring	Styrning	4	
0880	44	87 02 722	1	1	1	Lock ring	Läkring	5	
0900	45	87 00 20F	2	2	2	Bushing	Bussning	4	
0920	50	87 00 239	1	1	1	Thrust washer	Tryckbricka	4	
0940	51	87 01 773	1	1	1	Gear, 2nd	Kuggghjul, 2:an	4	
0960	52	87 00 361	2	2	2	Guide ring	Styrning	4	
0980	53	87 03 761	1	1	1	Gear, 1st	Kuggghjul, 1:an	4	
1000	54	87 04 207	1	1	1	Reverse gear	Backdrav	4	
1020	55	87 03 340	X	X	X	Shim 0.3 mm	Shim 0.3 mm	5	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

4 GROUP INDEX

Clutch	2-J04
Clutch control	2-J08
Gear box, manual	2-J10
Gear box control, manual	2-K10
Gear box, automatic	2-K16
Gear box control, automatic	2-L08

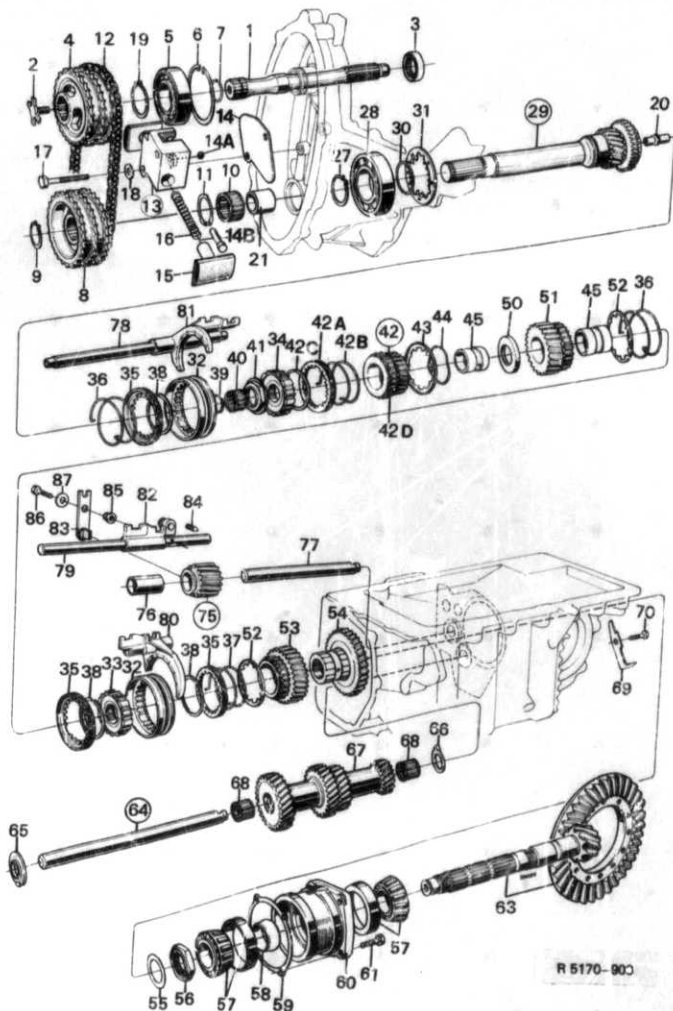

0300

Gear box, 4-speed
Shafts, gears, gear shift
bars

Växellåda, 4-växlad
Axlar, kugghjul,
växelförare

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10 R5170

4


23

Fig. Pos.	Part No Art nr	Quantity/Antal				Description	Benämning	K/S SR	Notes Anmärkning
		57 386	87 984	87 12	87 13				
1040	55 87 03 357	X	X	X		Shim 0,4 mm	Shim 0,4 mm	5	
1060	55 87 03 358	X	X	X		Shim 0,5 mm	Shim 0,5 mm	5	
1070	56 87 02 359	1	1	1		Nut	Mutter	3	
1100	57 83 41 034	2	2	2		Roller bearing	Rullager	5	
1120	58 87 03 530	1	1	1		Collapsible spacer	Spännhylla	5	
1140	59 83 41 752	X	X	X		Shim 0,10 mm	Shim 0,10 mm	5	
1160	59 83 41 760	X	X	X		Shim 0,15 mm	Shim 0,15 mm	5	
1180	59 83 41 778	X	X	X		Shim 0,30 mm	Shim 0,30 mm	5	
1200	59 83 44 723	X	X	X		Shim 0,50 mm	Shim 0,50 mm	5	
1220	60 87 12 309	1	1	1		Bearing house	Lagerhus	5	
1240	61 81 25 189	1	1	1		Screw	Skruv	5	
1260	63 87 03 639	1	1	1		Pinion and crown wheel	Pinjong och kronhjul	5	
1280									
1300	64 93 21 241	1	1	1		Shaft, intermediate gear assy	Axel, mellandrev kpl	5	(8711509)
1320									
1340	65 87 11 327	1	1	1		Thrust washer	Tryckbricka	4	
1360	66 87 12 325	1	1	1		Thrust washer	Tryckbricka	4	
1400	67 87 03 738	1	1	1		Intermediate gear	Mellandrev	5	
1420	67 87 11 905	1	1	1		Intermediate gear	Mellandrev	5	
1440	68 87 12 382	2	2	2		Needle bearing	Nålager	5	
1460	69 87 00 114	1	1	1		Lock plate	Låsplatta	3	
1480	70 80 82 935	1	1	1		Screw	Skruv	5	
1500	75 87 04 348	1	1	1		Sliding reverse gear	Backdrev skjutbart	5	
1520									
1540	76 87 15 223	1	1	1		assy	kpl	4	(8703332)
1560	77 87 00 130	1	1	1		Bushings	Slussning	5	
1580	78 87 00 585	1	1	1		Shaft, reverse gear	Axel, backdrev	5	
1600	79 87 01 989	1	1	1		Gear shift shaft	Växelförarsaxel	6	
1620									
1640	80 87 13 091	1	1	1		Gear shift shaft, re-verse gear	Växelförarsaxel, backdrev	6	
1660	81 87 00 619	1	1	1		Gear shift fork 1-2	Växelförargaffel 1-2	5	(8700601)
1680	82 87 14 792	1	1	1		Gear shift fork 3-4	Växelförargaffel 3-4	5	
1700	83 87 02 045	1	1	1		Gear shift fork R	Växelförargaffel B	5	(8702094)
1720	84 87 18 835	1	1	1		Lever	Hävarm	5	(7905320)
1740	85 87 02 086	1	1	1		Screw	Skruv	4	
1760	86 80 19 829	1	1	1		Sleeve	Hylsa	5	
1780	87 80 29 969	1	1	1		Screw	Skruv	5	
1800	87 80 454	1	1	1		Washer	Bricka	5	
	87 81 031	X	X	X		Bearing kit	Lagersats	5	
						Synchronizing kit	Synkroniseringsassats	5	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

GROUP INDEX

Clutch	2-J06
Clutch control	2-J08
Gear box, manual	2-J10
Gear box control, manual	2-K10
Gear box, automatic	2-K16
Gear box control, automatic	2-L08

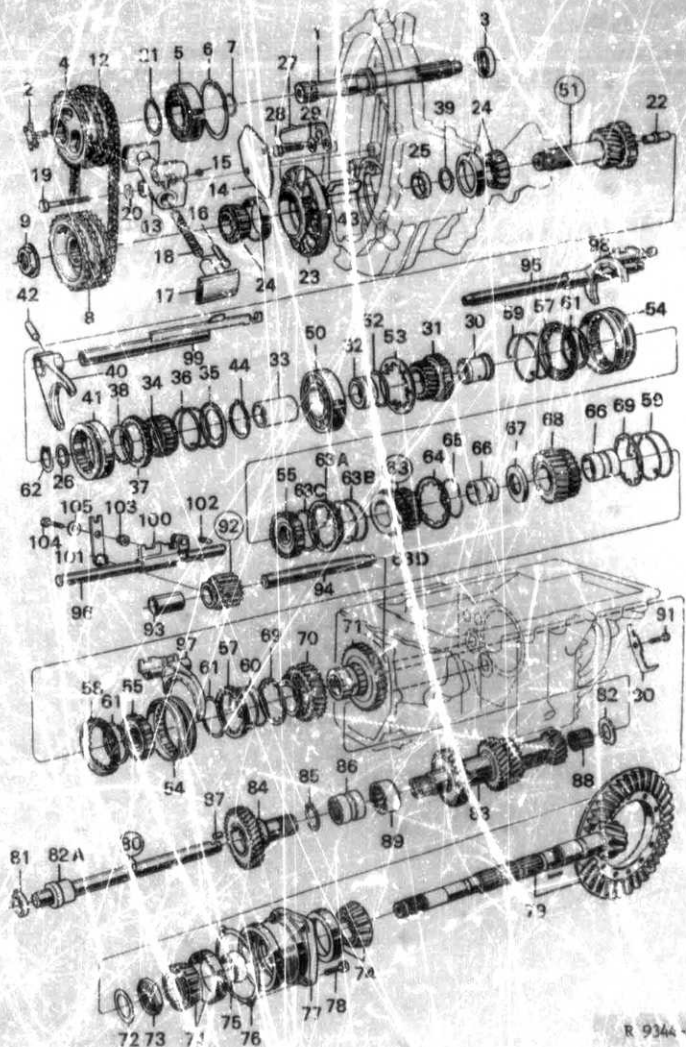

R 9344-900

SAAB

genuine parts
original manufacturer

2-K02

SAAB 900

M7S-80

MASTER INDEX

Gear box, 5-speed
Shafts, gears, gear shift
bars

Växellåda, 5-växlad
Axlar, kugghjul,
växelförarna

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R9344

4

25

Fig. Pos.	Part No Art nr	Quantity/Avst Stk	Description	Benämning	K/S S/R	No's Annärkning
0020	1 87 11 350	1	Clutch shaft	Lamvaxel	3	
0040	2 87 11 038	1	Screw	Skruv	3	
0060	3 87 10 881	1	Seal ring	Tätningssring	2	
0080	4 87 13 190	1	Chain wheel, upper	Kedjehjul, övre	5	
0100	5 87 10 885	1	Roller bearing	Rullbärg	3	
0140	6 87 11 376	1	Lock ring	Spärring	4	
0160	7 87 04 777	1	Chain wheel, lower	Kedjehjul, nedre	5	
0200	8 87 13 208	1	Nut	Mutter	4	
0220	9 87 12 770	1	Chain	Kedja	5	
0240	12 87 11 590	3	Chain tensioner assy	Kedjes träckare kpl	5	
0260	13 87 13 570	1	Spacer plate	Distans platta	5	
0280	14 87 13 513	1	Ball	Kula	5	
0300	15 87 13 554	1	Plug	Plugg	3	
0320	16 87 13 539	1	Tightener shoe	Sträcka sko	3	
0340	17 87 13 487	2	Spring	Fjäder	3	
0360	18 87 13 521	2	Screw	Skruv	3	
0380	19 87 03 502	2	Washer	Bricka	5	
0400	20 87 29 985	1	Lock ring	Låsring	5	
0420	21 87 13 539	1	Connecting pipe	Förbindels rör	5	
0440	22 87 13 158	1	Bearing house	Lagerhus	5	
0460	23 87 12 997	1	Roller bearing	Rullbärg	3	
0480	24 87 12 838	2	Spacer ring 0,08 mm	Distansring 0,08 mm	5	
0500	25 87 15 013	X	Spacer ring 0,09 mm	Distansring 0,09 mm	5	
0520	26 87 16 021	X	Spacer ring 0,10 mm	Distansring 0,10 mm	5	
0540	27 87 15 088	X	Spacer ring 0,11 mm	Distansring 0,11 mm	5	
0560	28 87 15 096	X	Shim 0,30 mm	Shim 0,30 mm	5	
0580	29 87 14 631	X	Shim 0,40 mm	Shim 0,40 mm	5	
0600	26 87 14 969	X	Oil catcher	Oljeskopa	5	
0620	27 87 13 583	1	Screw	Skruv	3	
0640	28 87 03 933	3	Washer	Bricka	5	
0660	29 87 29 985	2	Bushing	Lagerbussning	5	
0680	30 87 13 538	1	Gear 4th	Kugghjul 4:e	5	
0700	31 87 14 503	1	Spacer ring	Distansring	5	
0720	32 87 12 767	1	Spacer sleeve	Distanshylsa	5	
0740	33 87 13 406	1	Clutch hub	Kopplingsnav	5	
0760	34 87 12 572	1	Guide ring, 1st	Styrning 1:e	5	
0780	35 87 11 598	1	Spring, 1st	Spärrfjäder 1:e	5	
0800	36 87 11 005	1	Synchronizing ring	Synkroniseringsring	5	
0820	37 33 44 772	1	Lock ring	Låsring	5	
0840	38 87 12 605	1	Shim 0,20 mm	Shim 0,20 mm	5	
0860	39 87 12 594	1	Shim 0,25 mm	Shim 0,25 mm	5	
0880	40 87 13 448	X	Shim 0,30 mm	Shim 0,30 mm	5	
0900	39 87 13 455	X	Gear shift fork	Växlingsgaffel	5	
0920	41 87 14 701	1	Synchronizing ruff	Synkroniseringsruff	5	
0940	42 87 12 580	1	Cylindrical pin	Cylindrisk pinne	5	
0960	43 87 13 538	1	Oil collector	Oljesamlare	5	
0980	44 87 13 538	1	Lock ring	Spärring	5	
1000	45 87 14 814	1	Ball bearing	Kullager	5	
1020	50 87 00 767	1	Input shaft assy	Ingående axel kpl	5	
1040	51 87 14 511	1	Lock ring	Låsring	5	
1060	52 87 10 410	1	Guide ring	Styrning	5	
1080	53 87 04 041	1	Synchronizing muff	Synkroniseringsmuff	5	
1100	54 87 00 411	2	Synchronizing hub	Synkroniseringsnav	5	
1120	55 87 12 283	2	Synchronizing ring	Synkroniseringsring	5	
1140	56 87 14 446	2	Synchronizing ring	Synkroniseringsring	5	
1160	57 87 15 120	2	Catch spring	Spärrfjäder	5	
1180	58 87 11 103	2	Catch spring	Spärrfjäder	5	
1200	61 87 04 942	3	Lock ring	Låsring	5	
1220	62 87 14 677	1	Lock ring	Spärring	5	
1240	63 87 11 632	1	Gear, 3rd assy	Kugghjul 3:e kpl	5	
1260	63A 87 12 135	1	Synchronizing ring	Synkroniseringsring	5	
1280	63B 87 00 439	1	Catch spring	Spärrfjäder	5	
1300	63C 87 04 342	1	Lock ring	Låsring	5	

0	General	1-A02
1	Tools	1-A02
2	Engine	2-A02
3	Electrical system, Instruments	2-A02
4	Transmission	2-A02
5	Brakes	3-A02
6	Front assembly, Steering	3-A02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02
A GROUP INDEX		
	Clutch	2-J06
	Clutch control	2-J03
	Gear box, manual	2-J10
	Gear box control, manual	2-K10
	Gear box, automatic	2-K16
	Gear box control, automatic	2-L08

(700403)

0-05

Gear box, 5-speed
Shafts, gears, gear shift
hars

Växellåda, 5-växlad
År, kuggghjul,
växelförare

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1987-10

R9324

4

7

Fig. Pos.	Part No. Art nr	Quantity/Anst	Description	Benämning	K/S S/F	Notes Anmärkning
1305	63D 87 11 840	1	Gear, 3rd	Kuggghjul 1:3 an	4	
1320	64 87 02 730	1	Guide ring	Styrning	4	
1340	65 87 02 722	1	Lock ring	Låsring	5	
1360	66 87 00 305	2	Bushing	Bussning	4	
1380	67 87 00 239	1	Thrust washer	Tryckbricka	4	
1400	68 87 01 773	1	Gear, 2nd	Kuggghjul, 2 an	4	
1420	69 87 00 361	2	Guide ring	Styrning	4	
1440	70 87 03 761	1	Gear, 1st	Kuggghjul, 1:1 an	4	
1460	71 87 04 207	1	Reverse gear	Backdrev	4	
1480	72 87 03 340	X	Shim 0,3 mm	Shim 0,3 mm	5	
1500	72 87 03 357	X	Shim 0,4 mm	Shim 0,4 mm	5	
1520	72 87 03 365	X	Shim 0,5 mm	Shim 0,5 mm	5	
1540	73 87 02 369	1	Nut	Mutter	3	
1560	74 83 41 034	2	Roller bearing	Rullager	S3	
1580	75 87 03 530	1	Collapsible spacer	Spännhylsa	S4	
1600	76 83 41 752	X	Shim 0,10 mm	Shim 0,10 mm	5	
1620	76 83 41 760	X	Shim 0,15 mm	Shim 0,15 mm	5	
1640	76 83 41 778	X	Shim 0,30 mm	Shim 0,30 mm	5	
1660	76 83 41 723	X	Shim 0,50 mm	Shim 0,50 mm	5	
1680	77 87 20 732	1	Bearing house	Lagerhus	5	(8704215)
1700	78 81 25 189	1	Screw	Skruv	5	
1720	79 87 12 566	1	Pinion and crown wheel	Pinjong och kronhjul	5	
1740	80 93 21 758	1	Shaft, intermediate gear	Åxel, mellandrev kpl	6	(8712630)
1760	81 87 14 885	1	Thrust washer	Tryckbricka	4	
1780	82 87 12 897	1	Thrust washer	Tryckbricka	4	
1800	82A 87 18 945	1	Inner ring	Innerring	4	FOR GEAR 8718629
1820	83 87 19 015	1	Intermediate gear	Mellandrev	4	(8714495)
1840	84 87 11 629	1	Gear	Kuggghjul	4	(8714528), USE TOGETHER WITH 8718645 AND 8714611
1860	85 87 12 911	1	Lock ring	Spärring	5	
1880	86 87 12 865	1	Sleeve	Hylsa	4	
1900	87 87 14 883	11	Roller	Rulle	4	
1920	88 87 12 382	1	Needle bearing	Nållager	3	FCR GEAR 8718629
1940	88 87 18 690	1	Needle bearing	Nållager	3	DIA M. 26 MM
1960	89 87 12 853	1	Needle bearing	Nållager	4	DIA M. 28 MM ALT. TO 8712312
1980	90 87 00 114	1	Lock plate	Låsplatta	3	
2000	91 80 82 935	1	Screw	Skruv	5	
2020	92 87 04 349	1	Sliding reverse gear	Backdrev skjutbart	5	
2040	93 87 15 229	1	assy	kpl	4	(8703332)
2060	94 87 00 130	1	Bushing	Bussning	6	
2080	95 87 00 595	1	Shaft, reverse gear	Åxel, backdrev	6	
2100	96 87 12 927	1	Gear shift shaft	Växelförarsaxel	6	
2120	97 87 13 091	1	Gear shift shaft, reverse gear	Växelförarsaxel, backdrev	6	
2140	98 87 00 619	1	Gear shift fork 1-2	Växelförargaffel 1-2	5	
2160	99 87 13 638	1	Gear shift fork 3-4	Växelförargaffel 3-4	5	
2180	100 87 12 829	1	Gear shift fork 5th	Växelförargaffel 5 an	5	
2200	101 87 02 045	1	Gear shift fork B	Växelförargaffel B	5	
2220	102 87 18 835	1	Lever	Hövarm	5	
2240	103 37 13 000	1	Screw	Skruv	4	(7985320)
2260	104 87 15 052	1	Sieve	Hylsa	4	
2280	105 87 15 052	1	Screw	Skruv	5	
2300	87 19 484	1	Washer	Bricka	5	
2320	87 21 031	X	Bearing kit	Lagersats	5	
2340	87 21 031	X	Synchronising kit	Synkroniseringssett	5	

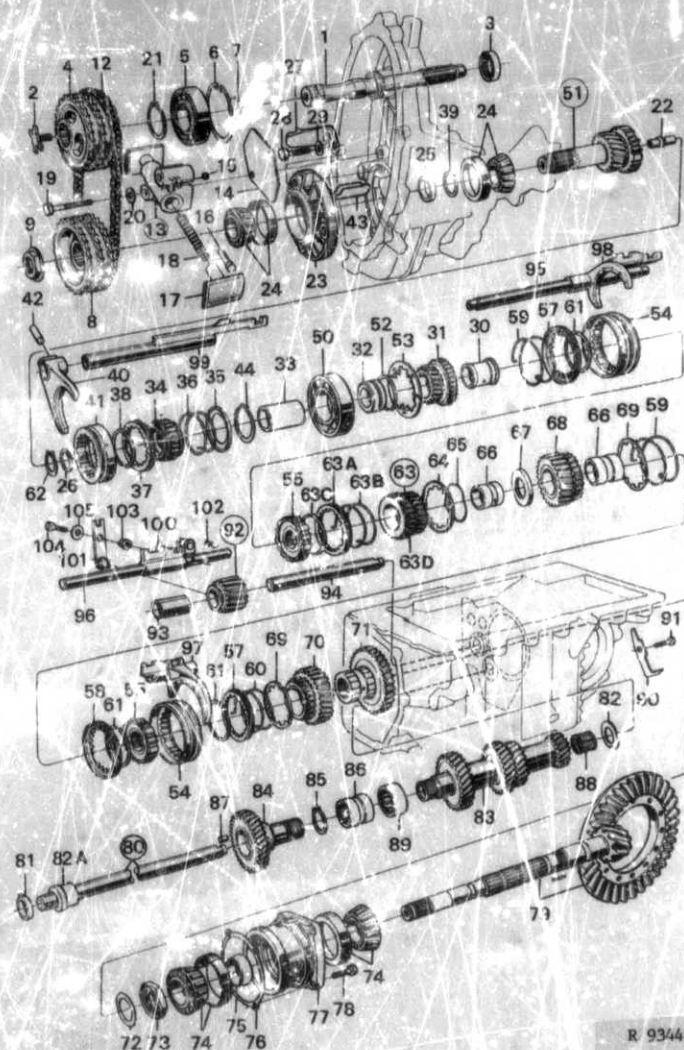

R 9344-900

0390

Gear box
Differential, inner uni-
versal joint**Växellåda**
Differential, inre knutData
DatumIllustration
Bild nrGroup
GruppPage
Sida

1987-10

R3762

4

29

Fig. Pos.	Part No Art nr	Quantity/Total					Description	Benämning	K/S SR	Notes Anmärkning
		87	87	87	87	87				
		12	13	12	18	18				
		366	984	416	837					
0020	1	87 04 330	1	1	1	1	Differential case	Differentialhus	5	
0040	2	87 03 472	1	1	1	1	Shaft	Åxel	5	
0060	3	87 03 274	2	2	2	2	Differential pinion	Differentialdriv	4	
0080	4	87 04 363	2	2	2	2	Differential side gear	Differentialhjul	4	
0100	6	87 04 371	2	2	2	2	Thrust washer	Slitbricka	3	
0120	7	87 03 282	2	2	2	2	Thrust washer	Slitbricka	3	
0140	8	80 47 722	2	2	2	2	Lock ring	Spärring	5	
0160	11	87 03 241	12	12	12	12	Screw	Skruv	5	
0180	12	87 08 836	2	2	2	2	Roller bearing	Rullager	3	
0200	14	87 11 160	1	1	1	1	Bearing seat L.H.	Lagersäte V	5	
0220	15	87 04 280	1	1	1	1	Bearing seat R.H.	Lagersäte H	5	
0240	20	83 41 604	X	X	X	X	X Shim 0,10 mm	Shim 0,10 mm	5	
0260	20	83 41 612	X	X	X	X	X Shim 0,15 mm	Shim 0,15 mm	5	
0300	20	83 41 620	X	X	X	X	X Shim 0,30 mm	Shim 0,30 mm	5	
0320	20	83 41 638	X	X	X	X	X Shim 0,50 mm	Shim 0,50 mm	5	
0340	21	80 29 985	12	12	12	12	Washer	Bricka	5	
0360	22	80 83 941	9	9	9	9	Screw	Skruv	5	
0380	23	80 83 974	1	1	1	1	Screw	Skruv	5	
0400	24	80 83 941	2	2	2	2	Screw	Skruv	5	
0420	25	83 42 701	2	2	2	2	O-ring	O-ring	5	
0440	30	87 04 421	1	1	1	1	Lock ring	Stoppring	5	
0460	31	87 04 298	2	2	2	2	Seal ring	Tätningssring	2	
0480	32	87 04 306	2	2	2	2	Ball bearing	Kullager	3	
0500	33	80 47 813	2	2	2	2	Lock ring	Lärring	5	
0520	34	87 10 360	1	1	1	1	Washer	Bricka	5	
0540	35	87 04 314	2	2	2	2	Spring	Fjäder	5	
0560	36	87 04 322	2	2	2	2	Plunger	Pjunge	5	
0580	37	87 04 413	1	1	1	1	Speedometer drive gear	Hastighetsmätardrev	5	
0600	38	87 04 264	2	2	2	2	Driver inner	Medbringare, inre	4	
0620	44	87 13 034	1	1	1	1	Guide sleeve	Styrhylsa	5	
0640	45	87 11 707	1	1	1	1	O-ring	O-ring	4	
0660	46	87 13 042	1	1	1	1	Seal ring	Kuggghjul	4	
0700	47	87 13 463	1	1	1	1	Seal ring	Tätningssring	4	
0740	49	87 11 723	1	1	1	1	Lock plate	Läsplåt	6	
0760										
0780										
0800										
0820										
0840										

CONTINUED ON NEXT
PAGEFortsättning på
nästa sida

R 3762-900

0375

Gear box
Differential, inner uni-
versal joint

Växellåda
Differential, inre knut

Date
Datum
1987-10

Illustration
Bild nr
R3762

Group
Grupp
4



Page
Sida
31

Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S SR	Notes Anmärkning
		17 3 6 9				
0020	1 87 04 330	1	Differential case	Differentialhus	5	
0040	2 87 03 472	1	Shaft	Axel	5	
0060	3 87 03 274	2	Differential pinion	Differentialdräv	4	
0080	4 87 04 363	2	Differential side gear	Differentialhjul	4	
0100						
0120	6 87 04 371	2	Thrust washer	Slitbricka	3	
0140	7 87 03 282	2	Thrust washer	Slitbricka	3	
0160	8 80 47 722	2	Lock ring	Spärring	4	
0180	11 87 03 241	12	Screw	Skruv	5	
0200	13 87 06 836	2	Roller bearing	Rulllag	3	
0220	14 87 11 160	1	Bearing seat L.H.	Lagersäte V	5	
0240	15 87 04 280	1	Bearing seat R.H.	Lagersäte H	5	
0260	20 83 41 604	X	Shim 0,10 mm	Shim 0,10 mm	5	
0280	20 83 41 612	X	Shim 0,15 mm	Shim 0,15 mm	5	
0300	20 83 41 620	X	Shim 0,30 mm	Shim 0,30 mm	5	
0320	20 83 41 630	X	Shim 0,50 mm	Shim 0,50 mm	5	
0340	21 80 29 985	12	Washer	Bricka	6	
0360	22 87 83 941	9	Screw	Skruv	5	
0380	23 87 83 974	1	Screw	Skruv	5	
0400	24 80 83 941	2	Screw	Skruv	5	
0420	25 83 42 701	2	O-ring	O-ring	5	
0440	30 87 04 421	1	Lock ring	Stöppring	5	
0460	31 87 04 288	2	Seal ring	Tätningssring	2	
0480	32 87 04 306	2	Ball bearing	Kullager	3	
0500	33 80 47 813	2	Lock ring	Låkring	6	(79152C3)
0520	34 87 10 360	1	Washer	Bricka	5	
0540	35 87 04 314	2	Spring	Fjäder	5	
0560	36 87 04 322	2	Plunger	Plunge	5	
0580	37 87 04 413	1	Speedometer drive gear	Hastighetsmätardrev	5	
0600						
0620	38 87 04 264	2	Driver inner	Medbringare, inre	4	
0640	44 87 13 034	1	Guide sleeve	Styrhylsa	4	
0660	45 87 11 707	1	O-ring	O-ring	4	
0680	46 87 13 042	1	Gear	Kugghjul	4	
0700	47 87 13 463	1	Seal ring	Tätningssring	4	
0740	48 87 11 723	1	Lock plate	Låsplåt	6	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-I.02
10	Numerical register	4-A02

4 GROUP INDEX

Clutch	2-J06
Clutch control	2-J08
Gear box, manual	2-J10
Gear box control, manual	2-K10
Gear box, automatic	2-K16
Gear box control, automatic	2-L08

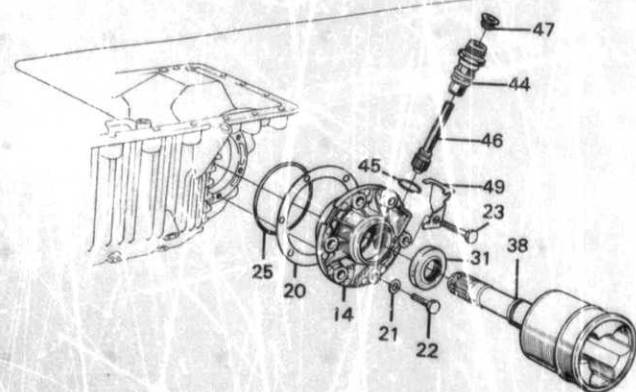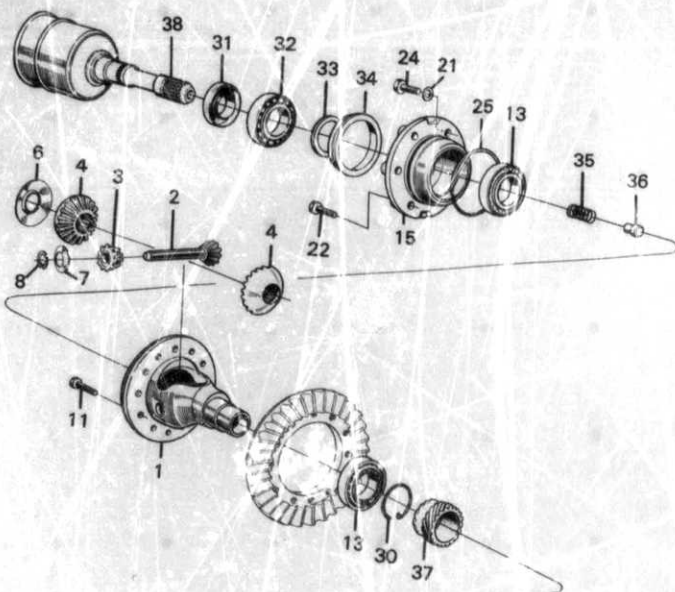

R 3762-800

0400

Gear box control
Gear shift lever

Växellådsmanövrering
Växelspak

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10


R9345

4

33

Fig. Pos.	Part No Art nr	Quantity/Amount 900	Description	Benämning	K/S SR / L	Notes Anmärkning
0020	1 93 47 816	1	1 Gear lever housing, upper	Växelspaks-hus, övre	5	(8333262, 9332942)
0030	2 83 29 229	1	1 Gear lever housing, lower	Växelspaks-hus, nedre	5	-1979
0070	2 93 19 724	1	1 Gear lever housing, lower	Växelspaks-hus, nedre	5	1980-
0080	2A 93 22 736	1	1 Gear lever housing, lower	Växelspaks-hus, nedre	5	5-SPEED
0110	3 83 33 213	1	1 Gear shift lever	Växelspak	5	
0120	4 79 41 115	1	1 Lock ring	Spärring	3	
0130	5 83 22 182	1	1 Knob	Knopp	5	
0140	6 83 33 197	1	1 Pawl rod	Spärrstång	3	
0160	7 93 31 539	1	1 Carrier	Medbringare	5	(8333056), USE TOGETHER WITH 9331547
0161						
0170	8 83 85 064	1	1 Rubber bushing	Gummbussning	3	
0180	9 83 17 596	1	1 Washer	Bricka	5	
0190	10 83 33 221	1	1 Tube	Rör	5	
0200	11 79 15 077	1	1 Lock ring	Spärring	3	
0210	12 83 11 904	1	1 Washer	Bricka	5	
0220	13 83 11 920	1	1 Rubber bushing	Gummbussning	3	
0230	14 83 11 896	1	1 Washer	Bricka	5	
0240	15 79 14 849	1	1 Stop ring	Stoppring	5	
0250	16 83 33 206	1	1 Ratchet pin	Spärrtapp	4	-1979
0260	18 93 19 696	1	1 Ratchet pin	Spärrtapp	4	1980-
0270	20 83 39 970	1	1 Gear shift rod	Växelstång	5	-1979
0280	20 93 19 690	1	1 Gear shift rod	Växelstång	5	1980-
0290	20 93 24 288	1	1 Gear shift rod	Växelstång	5	5-SPEED
0300	21 83 36 940	1	1 Carrier	Medbringare	3	-1979
0310	21 93 30 540	1	1 Carrier	Medbringare	3	1980-
0320	22 83 77 970	1	1 Spring	Fjäder	5	
0330	23 83 75 024	1	1 Pin	Pinne	5	
0340	24 87 01 385	1	1 Spring	Fjäder	5	
0350	25 83 75 990	1	1 Bearing	Lager	5	
0360	26 83 76 006	1	1 Lever bearing	Spek-lager	5	
0370	27 83 33 528	1	1 Cover bearing	Lock-lager	5	
0380	28 79 89 975	3	3 Washer	Bricka	5	
0390	29 79 34 607	3	3 Screw	Skruv	5	
0400	30 83 75 156	1	1 Rubber bushing	Gummbussning	5	
0410	31 83 73 078	1	1 Bearing	Lager	5	
0420	32 83 74 585	1	1 Tap	Tapp	5	
0430	33 93 31 547	1	1 Rubber bellows	Gummidämsk	5	(8333379), USE TOGETHER WITH 9331539
0431						
0460	34 93 20 987	1	1 Set of gears, gear shift lever	Sats kugghjul, växel-späkslås	3	
0470						
0480	36 79 51 353	2	2 Lock ring	Låsring	5	
0490	37 80 29 965	1	1 Washer	Bricka	5	
0510	38 83 75 974	2	2 Spring	Fjäder	3	-1979
0520	39 83 75 974	1	1 Spring	Fjäder	3	1980-
0530	40 93 17 223	1	1 Bracket	Fäste	3	1980-US, CA, JA (8317296)
0540	41 93 17 322	1	1 Trip	Tapp	4	1980-US, CA, JA
0550	42 93 24 260	1	1 Steering unit assy	Styrenhet kpl	3	5-SPEED
0560	42A 93 24 153	1	1 Spring	Fjäder	3	5-SPEED
0570	43 79 71 443	2	2 Screw	Skruv	5	5-SPEED
0580	44 80 73 090	2	2 Washer	Bricka	5	5-SPEED
0590	50 83 75 339	1	1 Cover	Lock	5	-1979
0600	50 93 16 431	1	1 Cover	Lock	5	1980-
0620	51 80 59 487	3	3 Screw	Skruv	5	(7934672), USE TOGETHER WITH 9361163
0625						
0630	51 80 59 487	2	2 Screw	Skruv	5	5-SPEED
0640	51A 80 59 487	1	1 Screw	Skruv	5	5-SPEED
0650	52 93 61 163	3	3 Nut	Mutter	5	(8331786), USE TOGETHER WITH 8059487
0660						
0690	53 82 83 798	1	1 Lock cylinder with 2 keys	Låscylinder med 2 nycklar	2	(8315862)
0700						
0710	54 83 74 753	2	2 Adjustment washer	Justerbricka	4	

R 9345-900

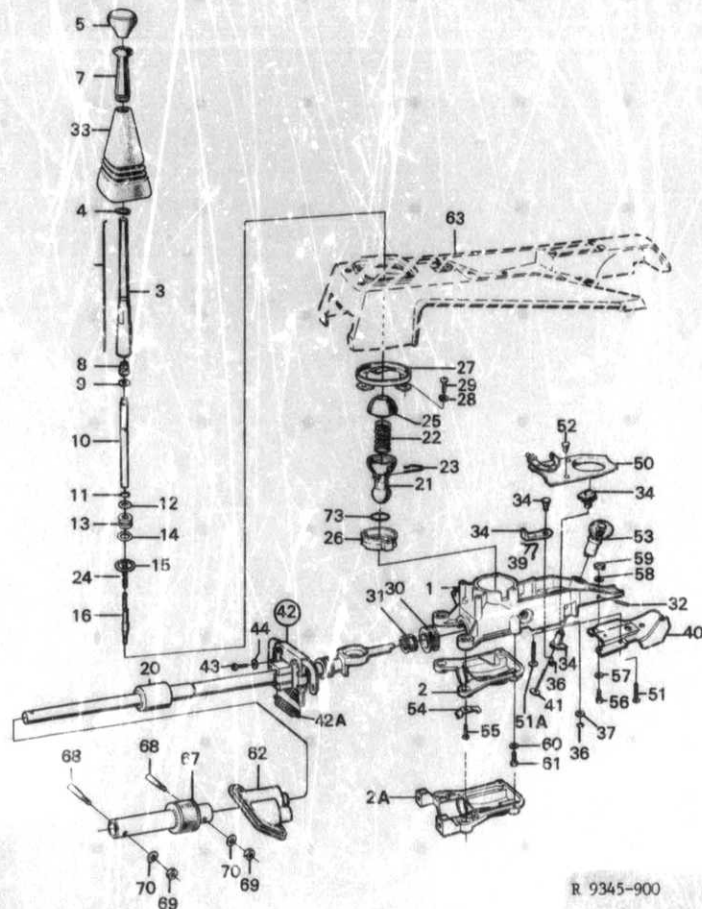

0 General	1-A02
1 Tools	1-H02
2 Engine	2-A02
3 Electrical system, instruments	2-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly, Steering	3-B02
7 Suspension, Wheels	3-C02
8 Body	3-D02
9 Accessories, Labels	3-L02
10 Numerical register	4-A02
4 GROUP INDEX	
Clutch	2-J06
Clutch control	2-J08
Gear box, manual	2-J10
Gear box control, manual	2-K10
Gear box, automatic	2-K16
Gear box control, automatic	2-L08

0400

Gear box control
Gear shift lever

Växellådsmanövrering
Växelspak


Date
Datum
1987-10

Illustration
Bild nr
R9345

Group
Grupp
4

Page
Sida
35

Fig Pict.	Part No Art nr	Quantity/Amount		Description	Benämning	K/S SR/L	Notes Anmärkning
		900	US				
0720	55 93 22 785	2		2 Screw	Skruv	5	SEE PAGE 8-35, 3-E12
0730	56 93 24 708	1		1 Screw	Skruv	5	
0740	57 70 61 328	1		1 Washer	Bricka	5	
0750	58 79 33 823	3		3 Washer	Bricka	5	
0760	59 83 73 714	3		3 Nut	Mutter	5	
0770	60 79 33 823	2		2 Washer	Bricka	5	
0780	61 79 34 787	2		2 Screw	Skruv	5	
0790	62 93 16 910	1		1 Rubber bellows	Gummidamask	5	
0800	63			1 Cover	Kåpa	5	
0810	67 93 18 007	1		1 Joints, gear shift rod	Växelspångsknut	5	
0830							
0860	68 83 75 172	2		2 Pin	Pinne	3	
0910	69 83 35 002	2		2 Nut	Mutter	5	
0920	70 80 29 944	2		2 Washer	Bricka	5	
0970	73 83 38 758	1		1 O-ring	O-ring	5	

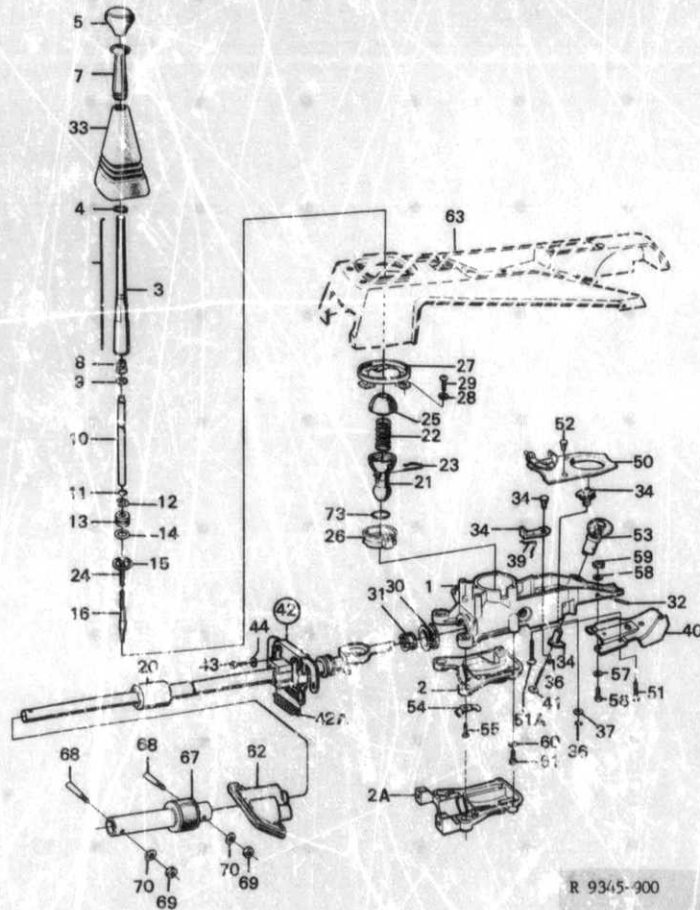

4 GROUP INDEX

Clutch	2-J08
Clutch control	2-J08
Gear box, manual	2-J10
Gear box control, manual	2-K10
Gear box, automatic	2-K16
Gear box control, automatic	2-L08

0450

**Drive shafts, outer
universal joint**

Drivaxlar, yttre knut

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R3764

4



37

Fig Pos.	Part No Art nr	Quantity/Amtal	Description	Benämning	K/S S/R / L	Notes Anmärkning
		900	US			
0020	1 89 21 728	2	2 Outer universal joint	Yttre knut	4	
0040	2 69 21 793	2	2 Cone ring	Konring	5	
0060	2 89 40 504	2	2 Cone ring	Konring	5	TURBO (19) 224 67
0080	3 89 21 785	2	2 Lock nut	Låsmutter	3	
0100	4 89 45 420	1	1 Drive shaft, inner L.H.	Drivaxel, inre V	5	(8934382), USE TOGETHER WITH 8945735 AND 8945727
0120	4 89 45 430	1	1 Drive shaft, inner R.H.	Drivaxel, inre H	5	(8934390), USE TOGETHER WITH 8945735 AND 8945727
0140	5 89 45 735	2	2 Driver	Medbringare	3	(8920076)
0160	6 89 16 975	4	4 Lock ring	Låsring	5	FOR 8945420 AND 8945435
0180	6 89 45 727	2	2 Lock ring	Låsring	5	-1979
0200	7 89 22 510	4	2 Stop ring	Stoppring	5	-1979
0220	8 89 21 504	2	4 Cup spring	Tallriksfjäder	4	-1979
0240	9 89 21 512	2	2 Ring	Ring	4	-1979
0260	10 89 21 520	2	2 Lock ring	Låsring	5	
0280	11 89 93 073	2	2 Rubber bellows assy	Gummibälg kpl	3	
0300	12 70 70 163	2	2 Clamp	Klamma	S3	
0320	13 70 48 465	2	2 Strap	Bandjärn	S5	
0340	14 70 48 473	2	2 Clamp	Klamma	S3	
0360	15 89 93 149	2	2 Rubber bellows assy	Gummibälg kpl	2	(8993065)
0380	16 71 67 117	4	4 Strap	Bandjärn	S3	
0400	17 70 48 473	4	4 Clamp	Klamma	S3	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

4 GROUP INDEX

Clutch	2-J06
Clutch control	2-J08
Gear box, manual	2-J10
Gear box, control, manual	2-K10
Gear box, automatic	2-K16
Gear box control, automatic	2-L08

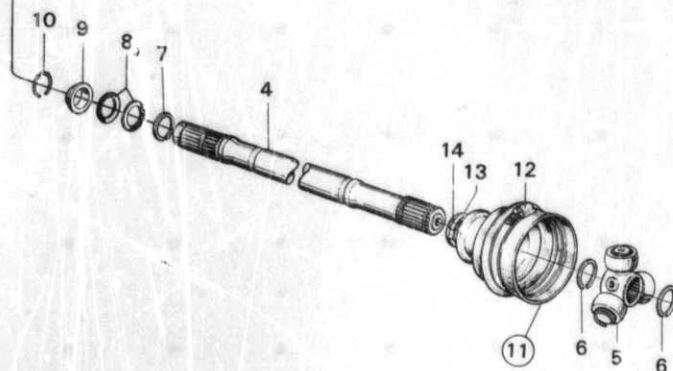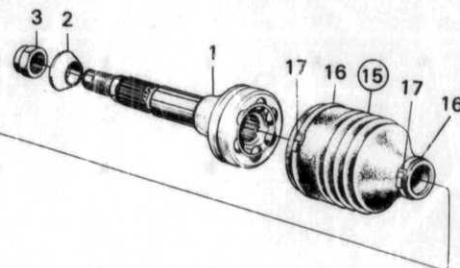

R 3764-900

0475

Gear box assy
Automatic

Växellåda kpl
Automatisk

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R5926

4

35


0020
0040

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900					
1	93 16 837	1		1 Automatic gear box assy	Automatväxellåda kpl	5	MARKED-BW 489 D

0	General	1-A02
1	Tools	1-H02
2	Engines	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

4 GROUP INDEX

Clutch	2-J06
Clutch control	2-J08
Gear box, manual	2-J10
Gear box control, manual	2-K10
Gear box, automatic	2-K16
Gear box control, automatic	2-L08

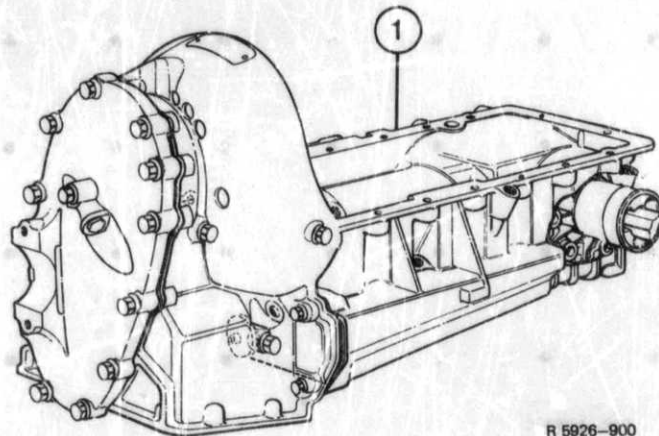

R 5926-900

0500

Gear box, automatic
Converter,
converter housing

Växellåda automatisk
Momentomvandlerare,
momentomvandlerhus

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1987-10

R3765

4

41

Fig. Pos.	Part No Art nr	Quantity/Amtal	Description	Benämning	K/S SR	Notes Anmärkning
	93 16 837	1	Automatic gearbox	Automatväxellåda kpl	5	BW 4:8 D
0620	93 16 837	1	assy			
0640	1 93 23 148	1	Housing, converter	Hus, momentomvand-	5	
0100			assy	lare kpl		
0120	2 87 06 386	2	Nipple	.Nippel	6	
0140	3 87 08 778	1	Pulley, cable	.Brytskiva, kabel	6	
0160	4 87 06 428	1	Pin, pulley	.Axel brytskiva	6	
0180	5 93 34 590	1	Pivot pin	.Lagertapp	5	
0200	6 70 31 306	1	Ball bearing	.Kullager	2	
0220	7 87 06 444	1	Lock ring	.Låsring	5	
0240	8 93 34 574	1	Spacer sleeve	.Distanshylsa	5	
0260	9 93 34 582	1	Lock ring	.Låsring	5	
0280	12 93 22 803	1	Converter	Momentomvandlerare	5	
0300	13 83 33 776	1	Cover converter	Kåpa, momentomvand-	5	
0400				lare		
0420	14 87 06 477	1	Tube	.Rör	6	
0440	15 80 82 966	5	Screw	.Skruv	5	
0460	16 80 82 992	2	Screw	.Skruv	5	
0480	17 80 82 984	3	Screw	.Skruv	5	
0510	18 93 00 252	1	Front cover	.Framre lock	5	
0520	19 87 08 968	1	Gasket	.Packning	5	
0540	20 80 82 918	11	Screw	.Skruv	5	
0600	23 87 08 358	1	Oil pan, front	.Oljesump, främre	5	
0620	24 87 08 380	1	Drain plug, gear box	.Avtappningsplugg,	5	
0640				växellåda		
0660	25 87 38 398	1	Washer	.Bricka	5	
0680	26 87 08 406	1	Gasket	.Packning	5	
0700	27 87 06 087	10	Screw	.Skruv	5	
0720	28 79 10 557	21	Washer	.Bricka	5	
0740	29 83 44 186	1	Oil filler neck	.Oljepåfyllningsrör	6	-1979
0760	29 93 31 729	1	Oil filler neck	.Oljepåfyllningsrör	6	1980-
0800	30 83 34 922	1	Dipstick, gearbox	.Oljemätsticka,	3	
0820	31 83 08 371	1	O-ring	.O-ring	2	
0840	33 80 82 936	1	Screw	.Skruv	5	
0860	34 80 83 115	4	Screw	.Skruv	5	
0880	37 80 98 056	2	Screw	.Skruv	5	
0900	38 80 29 985	1	Washer	.Bricka	5	
0920	39 83 85 320	1	Bushing	.Jussning	4	
1000	40 93 17 165	1	Plug	.Plugg	5	(8705488)

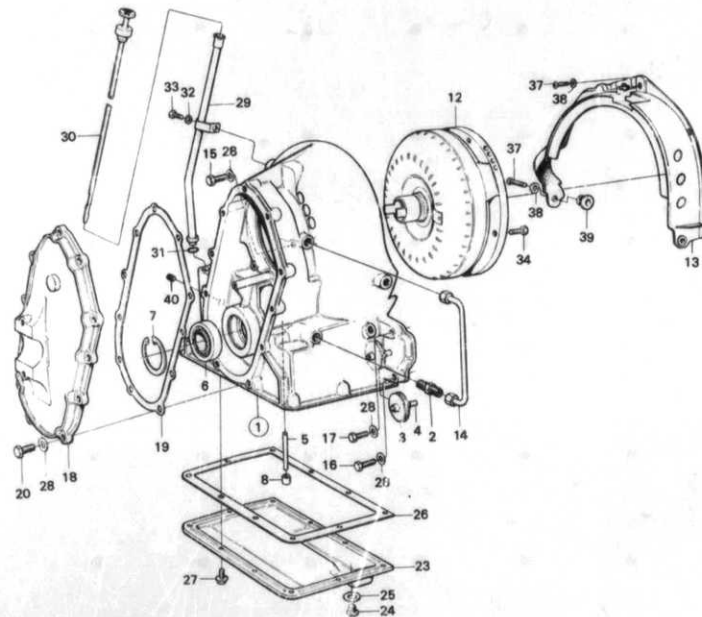

R 3765-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

4 GROUP INDEX

Clutch	2-J06
Clutch control	2-J06
Gear box, manual	2-J10
Gear box control, manual	2-K10
Gear box, automatic	2-K16
Gear box control, automatic	2-L08

Gear box, automatic
Gear box with servos,
covers, plugs, etc.

Växellåda, automatisk
Växellådshus med servo,
kåpor, pluggar, etc.

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R4113

4


43

Fig. Pos.	Part No Art nr	Quantity/Amtal	Description	Benämning	K/S	Notes Anmärkning
		93 16 837			S R L	
1	93 26 935	1	Gear box case with servos assy.	Växellådshus med servo kpl.	6	
2	87 09 057	1	Piston kit, front servo	.Kolvsets, främre servo	5	
3	83 25 144	2	O-ring	.O-ring	S2	
4	83 25 151	1	O-ring	.O-ring	S2	
5	87 05 998	1	Spring	.Fjäder	5	
6	87 06 012	1	Piston	.Kolv	5	
7	87 06 020	1	Lock ring	.Låsring	5	
8	87 09 196	1	Piston	.Kolv	5	
9	87 09 610	1	O-ring	.O-ring	S2	
10	87 03 129	1	O-ring	.O-ring	S2	
11	87 05 885	1	Gasket	Packning	S3	
12	87 08 448	1	Oil pan, rear	Oljesump bakre	5	
13	87 08 455	1	Gasket	Packning	S3	
14	87 06 087	12	Screw	Skruv	5	
15	87 03 399	1	Drain plug, final drive	Avtappningsplugg, driv	3	
16	87 11 871	1	Drain plug, engine motor	Avtappningsplugg motor	3	(849606)
17	88 49 614	1	Gasket	Packning	S4	
18	87 10 857	1	Level plug	Nivåplugg	3	
19	87 08 422	1	Cover, side	Sidolucka	5	
20	87 08 430	1	Gasket	Packning	S1	
21	87 06 087	5	Screw	Skruv	5	
22	87 08 463	1	Gasket	Packning	5	
23	87 08 471	1	Cover, inspection	Inspektionslucka	5	
24	87 08 489	2	Screw	Skruv	5	
25	87 04 157	1	Cover rear	Kåpa, bakre	5	
26	87 25 822	1	Gasket	Packning	3	(703484)
27	80 82 943	9	Screw	Skruv	5	
28	80 82 935	10	Screw	Skruv	5	
29	80 29 985	1	Washer	Bricka	5	
30	83 11 433	1	Dipstick, engine	Oljemätsticka, motor	6	
31	83 11 482	1	Tube, dipstick	Rör, oljemätsticka	6	
32	83 11 425	1	Tube, dipstick	Rör, oljemätsticka	6	
33	75 14 946	1	Gasket	Packning	S3	(8314502)
34	75 10 258	X	Sealing compound for 7514946	Tätningmedel för 7514946	3	TUBE 310 ML DIRKO TYPE 45 NO 3021243
35	83 00 725	2	Guide bushing	Styrbussning	4	
36	80 83 858	6	Screw	Skruv	5	
37	80 29 985	13	Washer	Bricka	5	
38	80 83 974	1	Screw	Skruv	5	
39	70 61 328	1	Washer	Bricka	5	(8300065)
40	80 98 089	1	Screw	Skruv	5	
41	83 46 354	1	Screw	Skruv	5	(8083966)
42	80 74 106	1	Nut	Mutter	5	
43	80 83 933	5	Screw	Skruv	5	
44	80 83 941	1	Screw	Skruv	5	
45	79 72 342	1	Screw	Skruv	5	
46	80 83 941	2	Screw	Skruv	5	FOR CARS WITH AC
47	80 83 958	1	Screw	Skruv	5	
48	83 80 982	3	Washer	Bricka	5	
49	79 22 420	2	Screw	Skruv	5	
50	83 21 804	X	Hook, tube	Krok, rör	5	T.
51	87 80 637	X	Gasket kit	Packnings- ats	2	(8705238)
	87 80 637	X	Gasket kit	Packnings- ats	2	ALTERN. TO 87 05 238

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

4 GROUP INDEX

Clutch	2-J06
Clutch control	2-J06
Gear box, manual	2-J19
Gear box control, manual	2-K10
Gear box, automatic	2-K16
Gear box control, automatic	2-L08

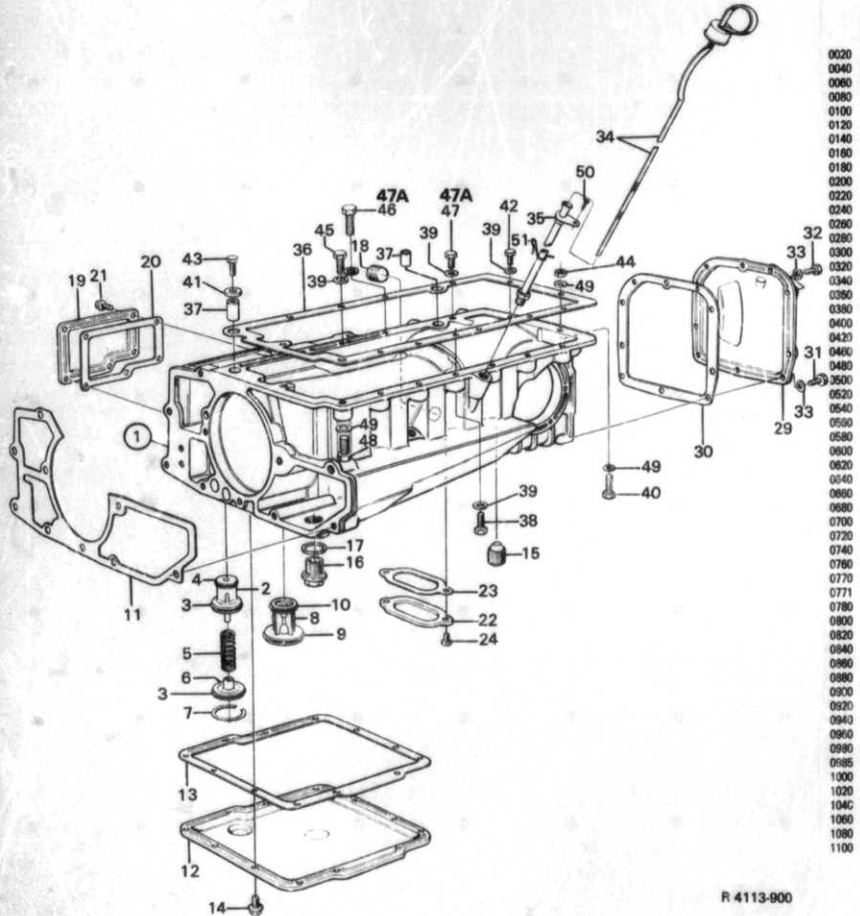

0600

Gear box automatic
Primary gear, gear,
pinion and crown wheel

Växellåda, automatisk
Primärdrev, planetväxel,
pinjong och kronhjul

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R5939

4

45


Fig. Pos.	Part No Art nr	Quantity/Amount Antal	Description	Benämning	K/S S/R	Notes Anmärkning
		93 16 837				
0041	1	83 17 837	Oil pump assy	Oljepump kpl	5	
0041	2	83 35 858	Seal ring	Tätningssring	2	(8317860)
0100	3	87 05 859	Screw	Skruv	5	
0120	4	87 05 867	Screw	Skruv	5	
0140	5	87 05 875	Shaft, turbine assy	Axel, turbin kpl	2	
0180	6	70 31 305	Ball bearing	Kullager	2	(8705430)
0180	7	87 05 444	Lock ring	Låsring	5	
0200	8	87 05 725	O-ring	O-ring	S2	
0220	9	80 82 943	Screw	Skruv	5	
0240	10	87 09 255	Sprocket turbine shaft	Kedjehjul, turbinaxel	5	
0280	11	87 07 564	Washer	Bricka	5	
0300	12	87 07 572	Screw	Skruv	5	
0320	13	87 09 271	Chain	Kedja	4	
0340	14	87 09 263	Sprocket, input shaft	Kedjehjul ingående axel	5	
0360	15	87 07 590	Lock washer	Låsbricka	5	
0380	16	87 07 598	Nut	Mutter	5	
0420	19	87 07 523	Washer	Bricka	5	
0440	20	87 05 790	Plate, end sealing	Tätningsskiva	5	
0460	21	87 05 808	O-ring	O-ring	S2	
0480	22	87 05 816	O-ring	O-ring	S2	
0500	23	87 06 467	Shaft, input	Axel, ingående	5	
0520	24	87 06 536	Seal ring	Tätningssring	S3	
0540	25	87 06 491	Lock ring	Låsring	5	
0560	26	87 06 442	Thrust washer	Tryckbricka	S5	
0580	27	87 09 446	Clutch hub, front	Kopplingsnav, främre	5	
0600	28	93 03 710	Front clutch plate kit	Lamellats, främre	2	
0620	29	87 08 729	Shim	Shim	S4	
0640	34	87 06 319	Cylinder	Cylinder	5	
0660	35	87 06 786	Piston and valve	Kolv och ventill	5	
0700	36	87 06 327	O-ring	O-ring	S2	
0720	37	87 06 335	Sealing ring	Tätningssring	S3	
0740	38	87 06 343	Ring	Ring	5	
0760	39	93 03 751	Spring	Fjäder	S5	(8706350)
0780	40	87 06 388	Lock ring	Låsring	S5	
0800	41	83 28 544	Brake lining assy front	Bromsband kpl., främre	3	
0820	42	83 25 003	Brake lining assy rear	Bromsband kpl., bakre	3	
0840	43	93 17 934	Kit front drum	Sats, främre trumma	5	
0860	44	83 33 023	Front drum	Främre trumma	5	
0880	45	87 08 794	Piston and reed	Kolv med ventill	5	
0900	46	87 06 129	O-ring	O-ring	S2	
0920	47	87 06 616	Sealing ring	Tätningssring	S3	
0940	48	83 23 254	Rear clutch plate kit	Lamellats, bakre	2	
0960	49A	83 19 153	Spacer washer	Distansbricka	5	
1000	49	87 06 491	Lock ring	Låsring	5	
1020	50	87 06 865	Spring	Fjäder	5	
1040	51	87 06 873	Seat	Säte	5	
1060	52	87 06 681	Lock ring	Låsring	5	
1080	53	87 06 715	Thrust washer	Tryckbricka	S5	
1100	54	87 06 731	Thrust washer	Tryckbricka	S5	
1120	55	87 06 707	Sealing ring	Tätningssring	S3	
1140	56	87 06 582	Needle bearing	Nålåger	5	
1160	60	87 09 339	Forward sun gear assy	Solhjul kpl	S8	
1180	61	87 06 764	Sealing ring	Tätningssring	S3	
1200	62	87 06 772	Sealing ring	Tätningssring	S3	
1220	63	87 06 798	Needle thrust bearing	Axelnålåger	S5	
1240	64	87 06 806	Support bearing	Stödlager	5	
1260	65	87 06 830	Screw	Skruv	5	
1280	66	87 06 848	Screw	Skruv	5	
1300	67	87 06 855	Lock washer	Låsbricka	5	
1320	68	87 06 855	Lock washer	Låsbricka	5	


R 5939-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

4 GROUP INDEX

Clutch	2-J06
Clutch control	2-J08
Gear box, manual	2-J10
Gear box control, manual	2-K10
Gear box, automatic	2-K16
Gear box control, automatic	2-L08

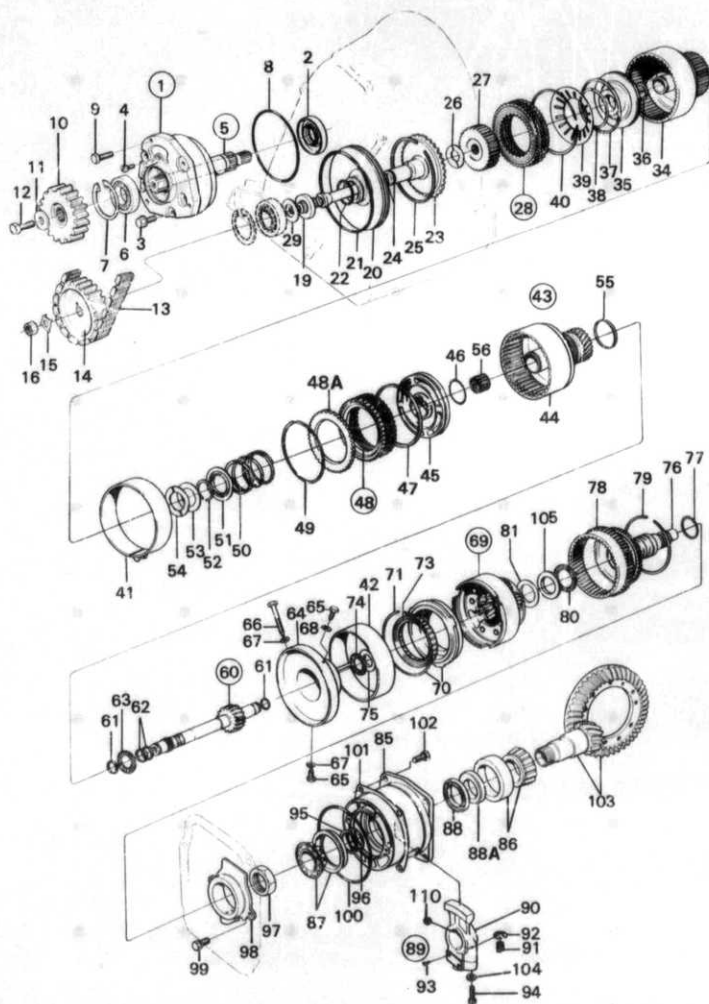

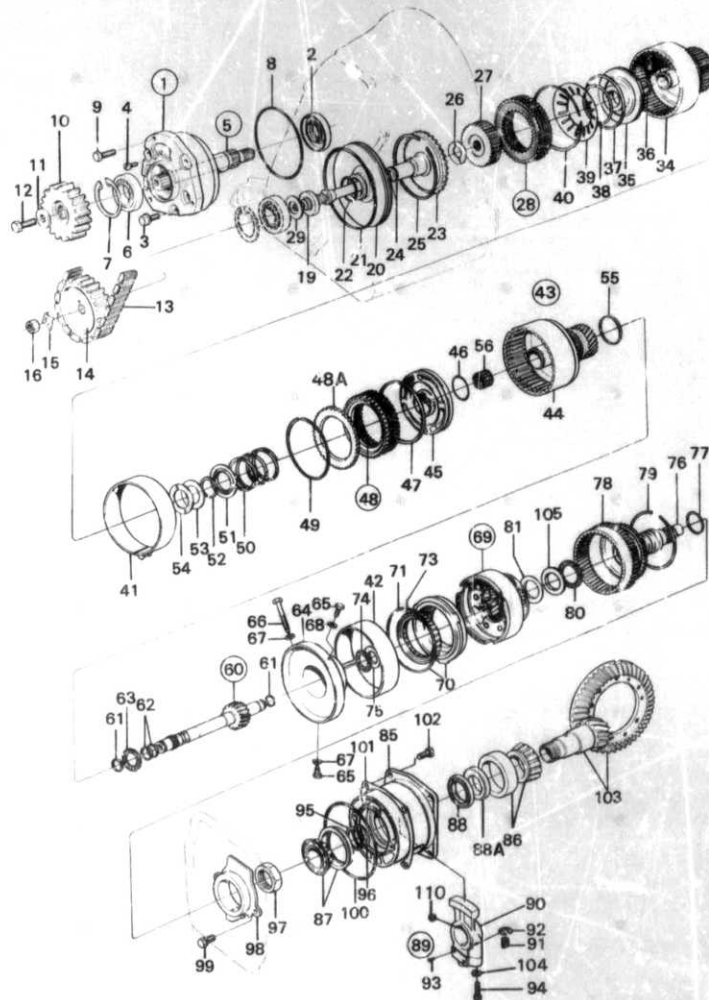

R 5939-900

0000

Gear box automatic
Primary gear, gear,
pinion and crown wheel

Växellåda, automatisk
Primärdrev, planetväxel,
pinjong och kronhjul

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10


R5933

4

47

Fig. Pos.	Part No Art nr	Quantity/Åntal	Description	Benämning	Notes Anmärkning
		93 18 837			
1240	69 87 09 208	1	Planetary gear assy	Planetväxel kpl	
1360	70 93 45 984	1	Kit outor race assy	Sats, yttre frihjul	
1380				hans kpl	8 (8705212)
1400	71 87 05 170	1	Locking wire	Låstråd	
1420	73 87 07 051	1	One way clutch	Frihjul	
1440	74 87 09 347	1	Needle thrust bearing	Axialstiftlager	
1460	75 87 07 089	1	Piste needle bearing	Nålagerbricka	
1480	76 87 09 461	1	Driven shaft	Utgående axel	
1500	77 87 06 107	3	Seal-ig ring	Tätningaring	
1520	78 87 07 440	1	Ring gear	Ringhjul	
1540	79 87 07 457	1	Lock ring	Låsring	
1560	80 83 25 334	1	Needle thrust bearing	Axialstiftlager	
1580	81 87 08 703	X	Shim 0,010" (0,25mm)	Shim 0,010" (0,25 mm)	MAX 3 OFF. S
1600	85 87 09 222	1	Housing, pinion bearing	Pinjonglagerhus	
1620					
1640	86 87 08 838	1	Pinion bearing	Pinjonglager	
1660	87 87 07 188	1	Pinion bearing	Pinjonglager	
1680	88 87 07 176	1	Sealing ring	Tätningaring	
1690	88A 93 46 602	1	Sealing ring	Tätningaring	
1720	89 83 25 270	1	Governor assy	Regulator kpl	
1780	90 83 25 312	1	Governor, service unit	Regulator, service-enhet	
1800					
1840	91 83 28 304	1	Spring	Fjäder	
1860	92 87 08 851	1	Lock ring	Spännring	
1880	93 87 07 275	2	Screw	Skruv	
1900	94 83 25 722	2	Screw	Skruv	
1920	95 87 08 889	2	Spacer washer	Distansbricka	
1940	96 87 07 317	X	Shim 0,012" (0,30mm)	Shim 0,012" (0,30 mm)	
1960	96 87 07 325	X	Shim 0,004" (0,1mm)	Shim 0,004" (0,10 mm)	
1980	96 87 07 333	X	Shim 0,006" (0,15mm)	Shim 0,006" (0,15 mm)	
2000	97 87 08 877	1	Nut	Mutter	
2020	98 87 09 153	1	Housing, sealing ring	Tätninghus	
2040	99 87 07 374	2	Screw	Skruv	
2060	100 87 07 382	1	O-ring	O-ring	
2080	101 87 09 354	X	Shim 0,004" (0,10mm)	Shim 0,004" (0,10 mm)	
2100	101 87 09 362	X	Shim 0,006" (0,15mm)	Shim 0,006" (0,15 mm)	
2120	101 87 09 370	X	Shim 0,012" (0,30mm)	Shim 0,012" (0,30 mm)	
2140	102 87 07 515	4	Screw	Skruv	
2160	103 87 03 563	1	Pinion and crown wheel	Pinjong och kronhjul	
2180					
2200	104 79 33 823	2	Washer	Bricka	
2220	105 83 25 342	1	Washer	Bricka	
2240	110 97 05 891	1	Ball	Kula	
2260	87 80 058	1	Thrust washer kit	Tryckbrickasats	
2280	87 80 652	1	Kit, shim	Shimsats	
2300	87 09 545	1	Kit, planetary gear	Sats, planetväxel	
2400	87 80 645	1	Rubber ring and oil seal kit	Gummi- och tätningssringsats	
2420					

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Print assembly, Steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02
4 GROUP INDEX		
	Clutch	2-J04
	Clutch control	2-J00
	Gear box, manual	2-J10
	Gear box control, manual	2-K10
	Gear box, automatic	2-K16
	Gear box control, automatic	2-L16

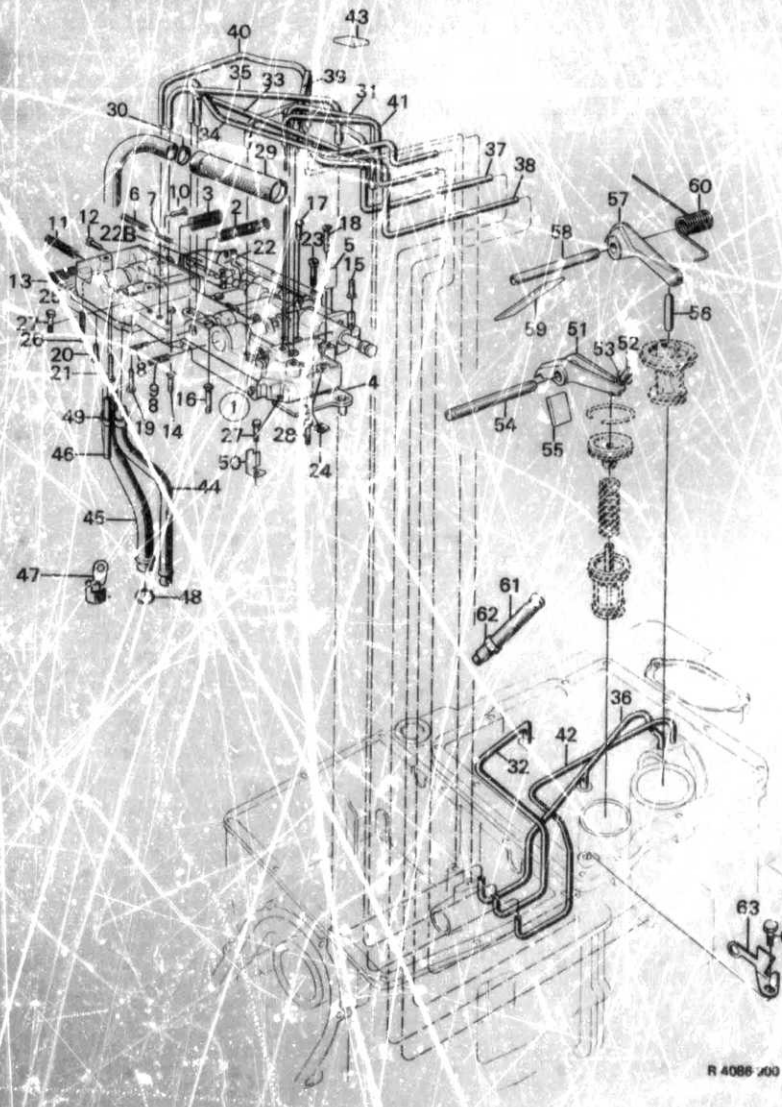

9650

Gear box, automatic
Valve bodies,
control system

Växellåda, automatisk
Ventilhus,
kontrollsystem

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R4086

4

41

Fig. Pos.	Part No Art nr	Quantity/Amount Mtg	Description	Benämning	K.S. No.	Remarks Anmärkning
1	83 23 262	1	Valve bodies assy	Ventilhus kp1	5	(93 17 81)
2	87 07 646	1	Spring	Fjäder	5	
3	87 07 671	1	Spring	Fjäder	5	
4	87 05 620	1	Retainer	Fjäder	5	
5	87 07 747	1	Stop	Stopp	5	
6	87 07 721	1	Spring	Fjäder	5	
7	87 07 754	1	Spring	Fjäder	5	
8	87 07 788	1	Spring	Fjäder	5	
9	87 09 985	1	Spring	Fjäder	5	
10	87 07 837	2	Screw	Skruv	5	
11	87 07 823	2	Spring	Fjäder	5	
12	87 07 886	6	Screw	Skruv	5	
13	87 08 893	1	Plate	Skivplatta	5	
14	87 08 026	5	Screw	Skruv	5	
15	87 07 887	2	Screw	Skruv	5	
16	87 08 034	1	Screw	Skruv	5	
17	87 08 026	1	Screw	Skruv	5	
18	87 08 475	2	Screw	Skruv	5	
19	87 08 028	1	Screw	Skruv	5	
20	87 07 687	6	Screw	Skruv	5	
22	83 00 286	1	Cam, kick-down	Kam, fack-down	4	
23	75 11 371	1	Bracket	Korsl	6	(8300401)
24	93 84 431	2	Screw	Skruv	5	(8317421)
25	83 17 439	1	Nut	Mutter	5	
26	83 18 339	1	Spring	Fjäder	5	
27	87 03 681	1	Ball	Kula	5	
28	87 08 687	2	Screw	Skruv	5	
29	87 08 195	1	Screw	Skruv	5	
30	87 20 632	1	Oil filter assy	Oljefilter kp1	3	
31	83 17 348	1	Seal ring	Tätningssring	3	
32	87 09 422	1	Tube, rear clutch-converter	Rör, bakre koppling-momentomvandlarhus	6	
33	87 08 224	1	Tube, rear clutch-transmission case	Rör, bakre koppling-växellåda	6	
34	87 08 927	1	Tube, front servo, apply	Rör, främre servo, ansättning	6	
35	87 08 240	1	Tube, front servo, release	Rör, främre servo, urkoppling	6	
36	87 08 257	1	Tube, converter housing	Rör, momentomvandlarhus	6	
37	87 08 936	1	Tube, transmission case	Rör, växellåda	6	
38	87 08 943	1	Tube, rear servo, upper	Rör, bakre servo, övre	6	
39	87 08 281	1	Tube, rear servo, lower	Rör, bakre servo, undre	6	
40	87 03 299	1	Tube, front clutch regulator	Rör, främre koppl. + regulator	6	
41	87 06 579	1	Tube, front tube	Rör, främre smörjning	6	
42	87 08 586	1	Tube, return, governor-transmission case	Rör, retur, regulator-momentomvandlarhus	6	
43	87 08 414	1	Magnet	Magnet	5	
44	87 08 164	1	Tube	Rör	4	
45	87 08 581	1	Tube	Rör	4	
46	87 05 786	1	Tube	Rör	4	
47	83 32 605	1	Clip	Clip	5	
48	87 05 733	1	O-ring	O-ring	5	
49	87 06 760	1	Clip	Clip	5	
50	87 03 181	1	Retainer	Fjäder	5	
51	87 08 036	1	Leak-off screw	Läckerskruv	5	
52	87 08 045	1	Spring	Fjäder	5	
53	87 08 053	1	Spring	Fjäder	5	

R 4086-100

3	General	1-A02
1	Tires	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

4 GROUP INDEX

Clutch control	2-J06
Clutch box, manual	2-J10
Gear box control, manual	2-K10
Gear box, automatic	2-K16
Gear box control, automatic	2-L08

0050

Gear box, automatic
Valve bodies,
control system

Växellåda, automatisk
Ventilhus,
kontrollsystem

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

1R4016

4


51

Fig. Pos.	Part No Art nr	Quantity/Amtal	Description	Benämning	Notes Anmärkning
		93 18 637			
1280	54 87 06 061	1	Pivot pin	Axel	
1280	55 87 07 119	1	Thrust link, front	Trycklänk, främre	
1300	56 87 06 103	1	Rod	Stöstång	
1370	57 87 06 137	1	Lever	Hävarm	
1340	58 87 06 061	1	Pivot pin	Axel	
1350	59 87 05 220	1	Thrust link, rear	Trycklänk, bakre	
1380	60 75 44 844	1	Spring	Fjäder	
1400	61 87 06 152	1	Adjusting screw	Justerskruv	
1420	62 87 06 180	1	Nut	Mutter	
1440	63 87 06 008	1	Cam plate	Kamplåt	
1460	64 87 06 087	1	Screw	Skruv	
1480	87 09 552	1	Tube, kit return	Rörsats, returledning	
1500			pipe governor	regulator	
1520	87 80 124	1	Spring set, valve	Fjädersats, ventilhus	
1540			bodies		
1560	93 20 060	1	Set, oil suction tube	Sats, oljesugrör	
1580			filter	filter	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-AC2
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

4 GROUP INDEX

Clutch	2-J05
Clutch control	2-J05
Gear box, manual	2-J10
Gear box control, manual	2-K10
Gear box, automatic	2-K10
Gear box control, automatic	2-L08

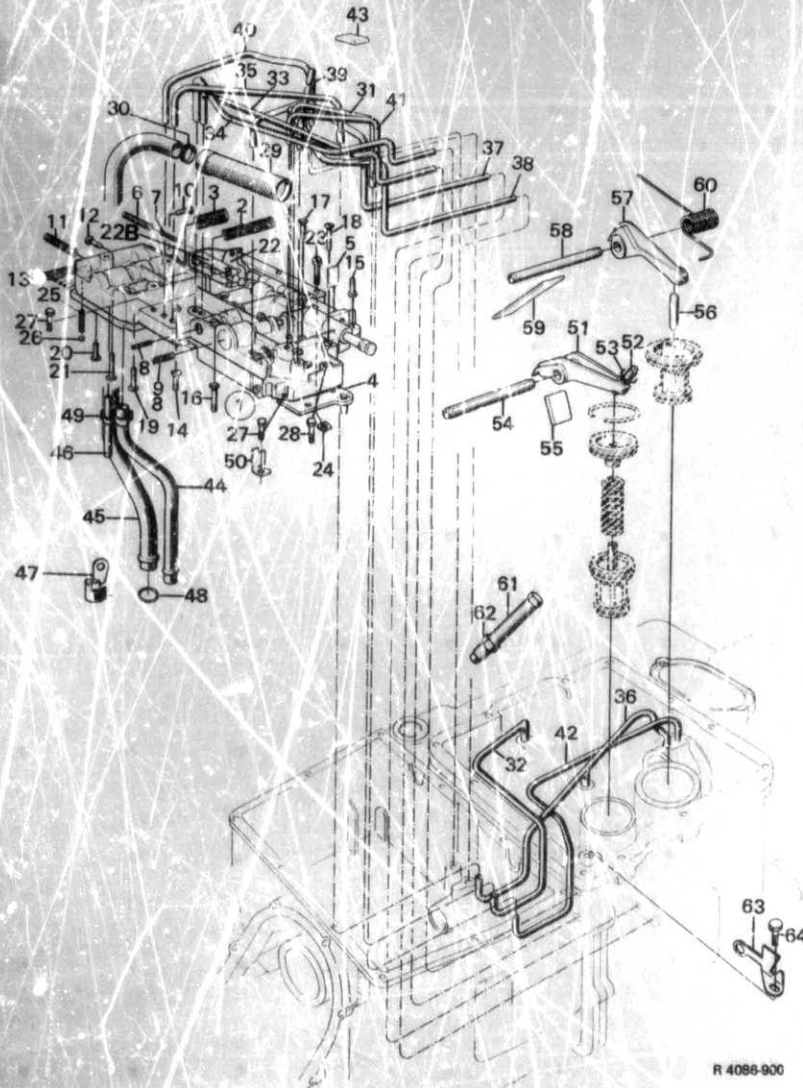

0700

Gear box, automatic
Controls in: gear box
housing

Växellåda, automatisk
Reglage i växellådashus

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1987-10

R4181

4

53

Fig. Pos.	Part No Art nr	Quantity/Anst.		Description	Benämning	KS SR	Notes Anmärkning
		93 18 837					
0020	1	87 09 107	1	Throttle cable	Trottelkabel	4	
0040	2	85 88 191	2	Washer, fibre	Bricks, fiber	5	(8708497)
0060	3	87 06 451	1	Switch, start inhibi-	Start- och backljus-	3	-1979
0080				tor light assy	kontakt kpl		
0100	4	87 06 889	1	Nut	Mutter	5	-1979
0105	4A	93 11 224	1	Plug	Plugg	5	1980-
0106	4B	80 20 017	1	Washer	Bricks	3	1980-
0120	5	93 00 260	1	Selector rod assy.	Väljarstång kpl kort	5	
0140				short			
0160	5	93 17 886	1	Selector rod assy.	Väljarstång kpl lång	5	
0180				long			
0200	6	87 06 210	1	Tension pin	Spännstift	5	
0220	7	93 17 894	1	Pin	Pinne	5	
0240	8	93 17 785	1	Spring	Fjädar	5	
0260	9	93 17 783	1	Sleeve	Hylsa	5	
0280	10	93 17 801	1	Pin	Pinne	5	
0300	11	87 06 238	1	Pin	Pinne	5	
0320	12	87 06 139	1	Parking brake pawl	Parkeringspierr	4	
0340	13	87 06 244	1	Spring	Fjädar	5	
0360	14	93 08 369	1	Clip	Clips	5	
0380	15	87 06 824	1	Cam	Kam	5	
0400	16	87 06 395	1	Cable stop	Kabelstopp	5	
0420	17	83 80 191	1	Washer, fibre	Bricks, fiber	5	
0440	18	83 74 357	1	Strap	Spännband	5	

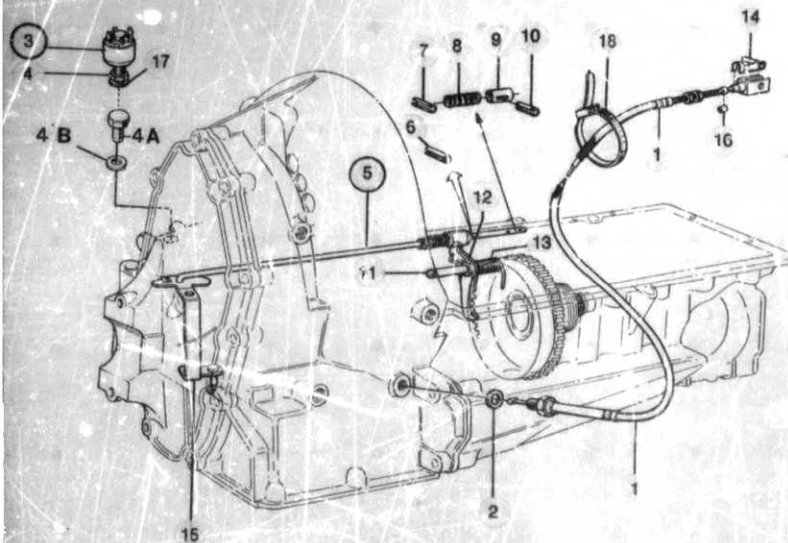

R 4181-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02


4 GROUP INDEX

Clutch	2-J06
Clutch control	2-J0P
Gear box, manual	2-J10
Gear box control, manual	2-K10
Gear box, automatic	2-K16
Gear box control, automatic	2-L08

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

4 GROUP INDEX

Clutch	2-J06
Clutch control	2-J08
Gear box, manual	2-J10
Gear box control, manual	2-K10
Gear box, automatic	2-K16
Gear box control, automatic	2-L08

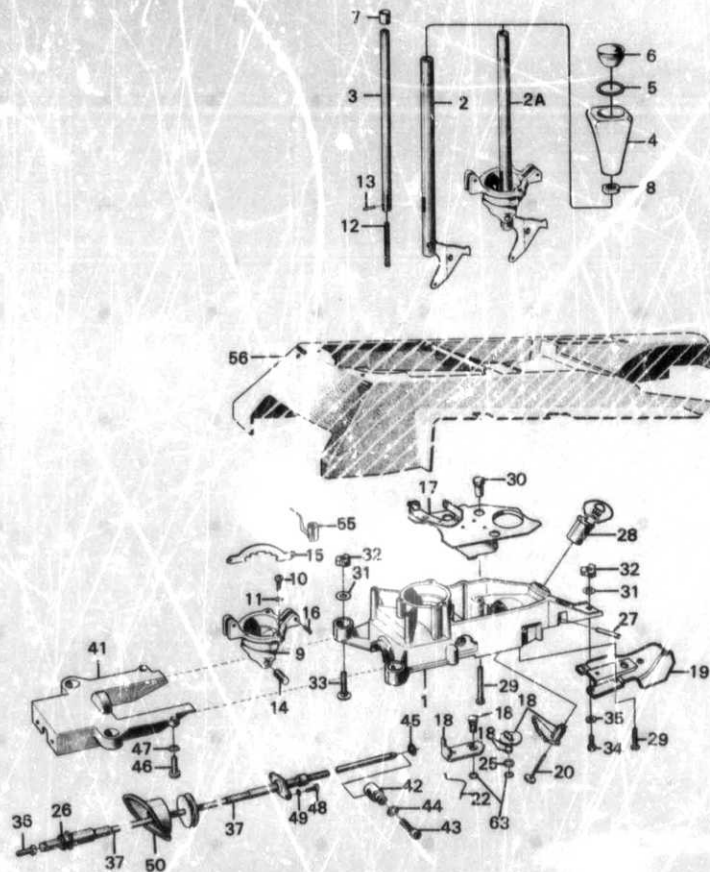

R 9346-900

0750

Gear box control
Gear selector lever

Växellådsmanövrering
Växelväljarspak

Date
Datum
1987-10

Illustration
Bild nr
R9346

Group
Grupp
4

Page
Sida
55

Fig. Pos.	Part No Art.nr	Quantity/Antal		Description	Benämning	K S /	Notes Anmärkning
		900	US				
1	93 47 816	1		1 Gear lever housing	Växelspaksbox	5	(8333252, 9322942)
2	93 00 195	1		1 Gear selector lever tube, outer	Växelväljarspaksrör, yttre	5	-1979
2A	93 21 717	1		1 Gear selector lever tube, outer	Växelväljarspaksrör, yttre	5	1980-
3	93 01 797	1		1 Gear selector lever tube, inner	Växelväljarspaksrör, inre	5	
4	83 17 869	1		1 Knob, gear selector lever	Knapp, växelväljarspak	5	
5	83 31 786	1		1 O-ring	O-ring	5	
6	93 31 521	1		1 Catch button	Spärrknapp	4	
7	83 71 825	1		1 Tolerance ring	Toleransring	3	
8	93 41 564	1		1 Nut	Mutter	3	(8375478)
9	93 21 764	1		1 Bearing, gear selector lever	Lagering, växelväljarspak	5	-1979 (9301258)
10	73 31 618	3		3 Screw	Skruv	5	
11	79 61 975	3		3 Washer	Bricka	5	
12	93 01 631	1		1 Spring	Fjäder	5	
13	83 11 197	1		1 Pin	Pinne	6	
14	79 43 828	1		1 Pin	Pinne	5	-1979
15	93 01 711	1		1 Ratch sector	Spärrsektor	5	
16	79 51 100	2		2 Tension pin	Spännstift	5	
17	83 11 045	1		1 Cover	Lock	4	
18	83 71 404	1		1 Cover	Lock	6	1980- 1
18	93 21 193	1		1 Set of gears, gear shift lever	Sats kuggghjul växelspåkåsa	3	-1979
18	93 21 987	1		1 Set of gears, gear shift lever	Sats kuggghjul växelspåkåsa	3	1980-
19	93 17 223	1		1 Bracket	Fäste	3	US, CA, JA (9317295)
20	93 17 322	1		1 Tap	Tapp	4	US, CA, JA
22	83 71 974	2		2 Spring	Fjäder	3	-1979
22	83 71 974	1		1 Spring	Fjäder	3	1980-
25	80 25 885	1		1 Washer	Bricka	5	
26	79 35 825	1		1 O-ring	O-ring	5	
27	83 74 555	1		1 Tap	Tapp	5	
28	82 63 798	1		1 Lock cylinder with 2 keys	Låscylinder med 2 nycklar	5	(8315582)
29	80 59 187	3		3 Screw	Skruv	5	(7934672), USE TOGETHER WITH 9361163
30	93 61 133	3		3 Nut	Mutter	5	(8331780), USE TOGETHER WITH 9050487
31	79 33 123	3		3 Washer	Bricka	5	
32	83 73 114	3		3 Nut	Mutter	5	
33	93 22 785	2		2 Screw	Skruv	5	
34	79 35 189	1		1 Screw	Skruv	5	
34	93 24 708	1		1 Screw	Skruv	5	1980- 1
35	79 16 437	1		1 Washer	Bricka	5	
36	79 35 189	1		1 Screw	Skruv	5	
37	93 39 213	1		1 Gear selector cable assy	Växelväljarkabel kpl	3	(9300427)
41	93 01 618	1		1 Bracket, gear selector cable	Fäste, växelväljarkabel	3	
42	93 00 213	1		1 Nipple	Nippel	3	
43	93 18 918	1		1 Stop screw	Stoppskruv	5	
44	79 36 018	1		1 Lock ring	Spärryttare	5	
45	79 35 964	1		1 Lock ring	Spärryttare	5	
46	79 34 771	2		2 Screw	Skruv	5	
47	79 33 821	2		2 Washer	Bricka	5	
48	79 34 311	2		2 Screw	Skruv	5	
49	79 33 807	2		2 Washer	Bricka	5	
50	93 61 977	1		1 Rubber bellows	Gummimdåsk	5	
55	83 44 731	1		1 Pointer gear position	Visare, växelläge	3	
56				1 Cover	Kåpa	5	SEE PAGE 8-35, 3-E12
63	79 51 353	2		2 Lock ring	Låsring	5	



Bromsar
Brakes
Bremsen
Freins
Frenos

SAAB
genuine parts
original reservdelar

3-A02

SAAB 900
M79-80 MASTER INDEX

BRAKES	BROMSAR	Date Datum	Group Grupp	Page Sida
		1987-10	5	1
TABLE OF CONTENTS				
BRAKES				
Front wheel brake	5:3	3-A04		
Rear wheel brake	5:5	3-A06		
Footbrake system				
Master cylinder and power brake unit	5:7	3-A08		
Brake lines	5:9	3-A10		
Brake operation	5:11	3-A12		
Handbrake system	5:13	3-A14		
INNEHÅLLSFÖRTECKNING				
BROMSAR				
Framhjulsbroms	5:3	3-A04		
Bakhjulsbroms	5:5	3-A06		
Fotbromssystem				
Huvudcylinder och vacuumservo	5:7	3-A08		
Bromsledningar	5:9	3-A10		
Bromsmanövrering	5:11	3-A12		
Handbromssystem	5:13	3-A14		
INHALTSVERZEICHNIS				
BREMSEN				
Vorderradbremse	5:3	3-A04		
Hinterradbremse	5:5	3-A06		
Fussbremssystem				
Hauptbremszylinder und unterdruckservo	5:7	3-A08		
Bremsleitungen	5:9	3-A10		
Bedienungsorgan	5:11	3-A12		
Handbremsystem	5:13	3-A14		
TABLE des matieres				
FREINS				
Freins AV	5:3	3-A04		
Freins AR	5:5	3-A06		
Circuit de frein au pied				
Maître-cylindre et assistance à vide	5:7	3-A08		
Conduites de frein	5:9	3-A10		
Commande du frein au pied	5:11	3-A12		
Système de frein à main	5:13	3-A14		
SUMARIO				
FRENOS				
Freno del	5:3	3-A04		
Freno tras	5:5	3-A06		
Sistema de freno de pie				
Cilindro principal y servoasistencia	5:7	3-A08		
Conductos de freno	5:9	3-A10		
Mando de freno de pie	5:11	3-A12		
Sistema de freno de mano	5:13	3-A14		

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

5 GROUP INDEX

Front wheel brake	3-A04
Rear wheel brake	3-A06
Footbrake system	3-A08
Handbrake system	3-A14

0100

Front wheel brake

Framhjulsbroms


Date
Datum
1987-10

Illustration
Bild nr
R9347

Group
Grupp
5

Page
Sida
3

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0020	1	89 39 357	2	2 Wheel hub assy	Hjulnav kpl	5	
0040	2	39 28 137	8	8 Wheel screw	Hjulskruv	2	
0080	3	89 34 036	2	2 Brake disc	Bromsskiva	3	
0100	4	89 27 303	8	8 Screw	Skruv	5	
0120	5	89 27 931	4	4 Lock plate	Låsplåt	3	
0140	6	78 74 720	1	1 Brake housing assy	Bromshus kpl V	4	(8939605)
0160				LH			
0180	6	78 74 738	1	1 Brake housing assy	Bromshus kpl H	4	(8939613)
0200				RH			
0220	7	91 03 474	2	2 Kit, piston	Kolvsets	4	
0240	10	89 31 933	1	1 Piston LH	Kolv V	3	
0260	10	89 31 941	1	1 Piston RH	Kolv H	3	
0300	11	89 94 519	2	2 Gasket set	Packningssats	2	
0320	12	89 41 965	2	2 Spring	Fjäder	3	
0360	13	89 90 194	2	2 U-pin	U-pinne	1	(8941585)
0380	14	89 25 067	2	2 Clip	Clip	2	
0400	15	89 25 034	2	2 Bleeding screw	Luftningsskruv	3	
0420	16	89 25 042	2	2 Protective cover	Skyddsskåpa	3	
0440	17	65 94 535	2	2 Seal kit, hand brake	Sats tätningar, handbroms	2	
0460				LH			
0480	18	89 25 372	1	1 Spring, hand brake	Fjäder, handbroms V	4	
0500				RH			
0520	18	89 25 380	1	1 Spring, hand brake	Fjäder, handbroms H	4	
0540				RH			
0560	19	89 25 414	1	1 Lever, hand brake	Hävarm, handbroms V	3	
0580				LH			
0600	19	89 25 422	1	1 Lever, hand brake	Hävarm, handbroms H	3	
0620				RH			
0640	20	89 30 448	2	2 Damper plate	Dämpplåt	2	
0660	21	89 30 463	2	2 Spring	Fjäder	2	
0720	22	89 93 297	1	1 Brake pad set	Bromsklotsats	1	(8993107,8994998)
0820	23	89 26 214	1	1 Brake hose bracket	Bromslångkonsol V	6	
0840				LH			
0860	23	89 26 222	1	1 Brake hose bracket	Bromslångkonsol H	6	
0880				RH			
0900	24	89 26 198	4	4 Screw	Skruv	5	
0920	25	89 38 110	2	2 Lock plate	Låsplåt	3	
0921	26	79 33 856	2	2 Washer	Bricka	5	(7958480)
0922	27	83 15 556	2	2 Nut	Mutter	5	
0940	28	89 28 230	1	1 Brake pipe LH	Bromsrör V	4	
0960	28	89 26 248	1	1 Brake pipe RH	Bromsrör H	4	
0980	29	89 22 478	1	1 Protective plate LH	Skyddsplåt V	6	
1000	29	89 22 486	1	1 Protective plate RH	Skyddsplåt H	6	
1020	30	80 19 887	8	8 Screw	Skruv	5	
1040		78 74 548	X	X Repair set brake pad	Rep-sats bromsklots	1	(7873698)

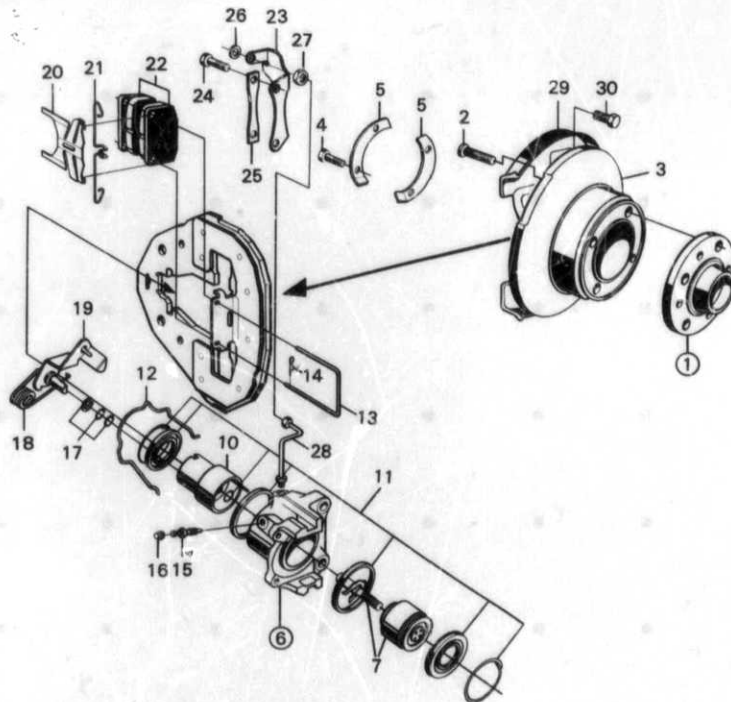

R 9347-900

5 GROUP INDEX

Front wheel brake	3-A04
Rear wheel brake	3-A06
Footbrake system	3-A08
Handbrake system	3-A14

0 General	1-A02
1 Tools	1-A02
2 Engine	2-A02
3 Electrical system, Instruments	2-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly, Steering	3-B02
7 Suspension, Wheels	3-C02
8 Body	3-D02
9 Accessories, Labels	3-L02
10 Numerical register	4-A02

0150

Rear wheel brake

Bakhjulsbroms

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1987-10

R3772

5

5

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR	Notes Anmärkning
		900	US				
0020	1 89 35 868	2		2 Wheel hub with screw	Hjulnav med skruv	5	
0040	2 89 07 941	8		2 Wheel screw	Hjulskruv	2	
0060	3 89 34 622	2		2 Roller bearing, conical	Rullager, koniskt	2	
0080							
0100	4 89 34 655	2		2 Roller bearing, conical	Rullager, koniskt	2	
0120							
0140	5 89 34 689	2		2 Sealing ring	Tätningssring	2	
0160	6 89 35 975	2		2 Cap	Kapsel	2	
0180	7 89 04 575	2		2 Brake disc	Bromsskiva	6	
0200	8 89 55 598	4		4 Screw	Skruv	5	
0220	9 89 34 739	1		1 Protective plate LH	Skyddsplåt V	6	
0240	9 89 34 747	1		1 Protective plate RH	Skyddsplåt H	6	
0260	10 89 19 887	4		4 Screw	Skruv	5	
0280	11 89 34 838	2		2 Guide ring	Styrring	4	
0300	12 89 32 196	1		1 Brake housing assy LH	Bromshus kpl V	5	
0320							
0340	12 89 32 204	1		1 Brake housing assy RH	Bromshus kpl H	5	
0360							
0380	14 89 32 238	4		4 Piston	Kolv	5	
0400	15 89 08 568	2		2 Bleeding screw	Luftningsskruv	2	
0420	16 89 08 576	2		2 Protective cover	Skyddsskåpa	3	
0440	17 89 94 840	2		2 Gasket set	Packningssats	4	
0460	18 89 94 832	1		1 Brake pad set	Bromsklotssats	1	
0480	19 89 11 737	2		2 Twist stop LH	Vridstopp V	3	
0500	19 89 11 745	2		2 Twist stop RH	Vridstopp H	3	
0510	20 78 74 530	1		1 Kit, lock pin and retaining spring	Sats, låspinne och hållfjäder	2	
0520							
0540	21 89 08 786	4		4 Lock pin	Låspinne	2	
0560	22 89 08 543	2		2 Retaining spring	Hållfjäder	3	
0580	23 89 24 755	4		4 Screw	Skruv	5	
0590	24 89 34 770	2		2 Lock plate	Låsplåt	3	

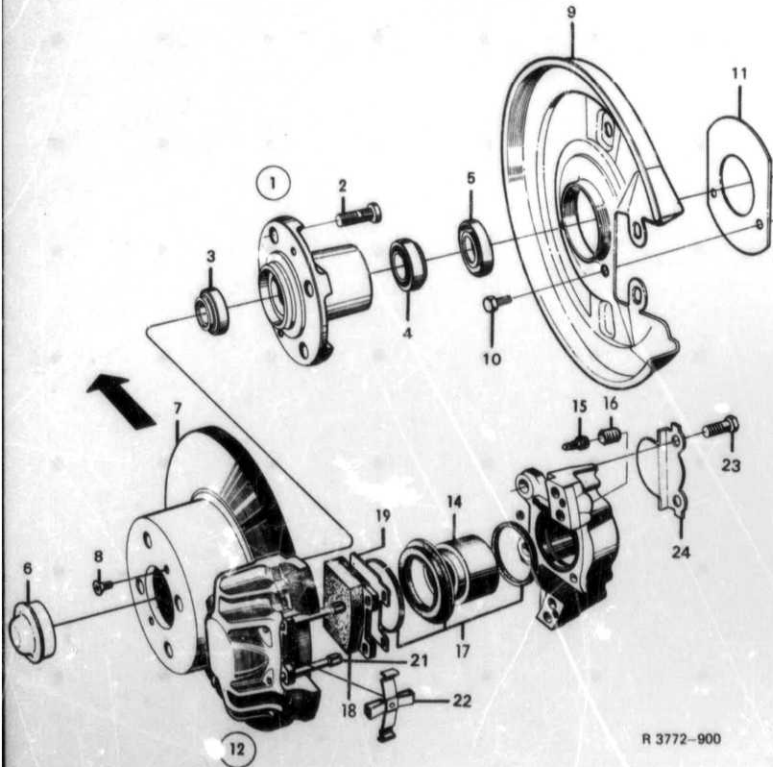

R 3772-900

0	General	1-A02
1	Tools	1-H02
2	Engines	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

5 GROUP INDEX

Front wheel brake	3-A04
Rear wheel brake	3-A06
Footbrake system	3-A08
Handbrake system	3-A14

0200

Footbrake system
Mastercylinder and power
brake unit etc

Fotbromssystem
Huvudcylinder och
vakuumservo etc


Date
Datum
1987-10

Illustration
Bild nr
R5928

Group
Grupp
5

Page
Sida
7

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S S/R /L	Notes Anmärkning
		900		US				
0020	1 89 35 934	1			1 Master cylinder with power brake unit	Huvudcylinder med vakuumservo	5	
0040	2 89 35 439	1			1 Master cylinder	Huvudcylinder	4	
0060	3 89 94 964	1			1 Container assy	Behållare kpl	5	
0100	4 89 36 080	1			1 Level gauge	Nivåvarnare	5	
0120	5 89 36 106	1			1 Sealing	Tätning	5	
0180	7 89 28 426	2			2 Gasket	Packning	4	
0180	8 89 37 831	2			2 Retaining pin	Fästpinne	4	
0200	9 89 94 972	1			1 Seal kit	Sats tätningar	2	
0220	10 89 28 434	1			1 Stop pin	Stoppinne	4	
0240	11 89 42 609	1			1 Power brake	Vakuumservo	5	
0260	12 89 93 115	1			1 Kit, non-return valve	Sats, backventil	4	
0280	13 89 28 541	1			1 Rubber bellows	Gummibälg	6	
0300	14 89 29 010	1			1 Seal	Tätning	6	
0320	15 89 10 705	1			1 Seal kit	Sats tätningar	2	
0340	16 79 10 565	2			2 Washer	Bricks	5	
0360	17 80 73 942	2			2 Nut	Mutter	5	
0380	18 80 74 288	4			4 Nut	Mutter	5	
0400	19 89 39 993	1			Vacuum hose	Vakuumslang	5	
0420	19 89 42 302	1			Vacuum hose	Vakuumslang	5	T, 1
0440	19 89 31 743	1			Vacuum hose RHD	Vakuumslang RHD	5	

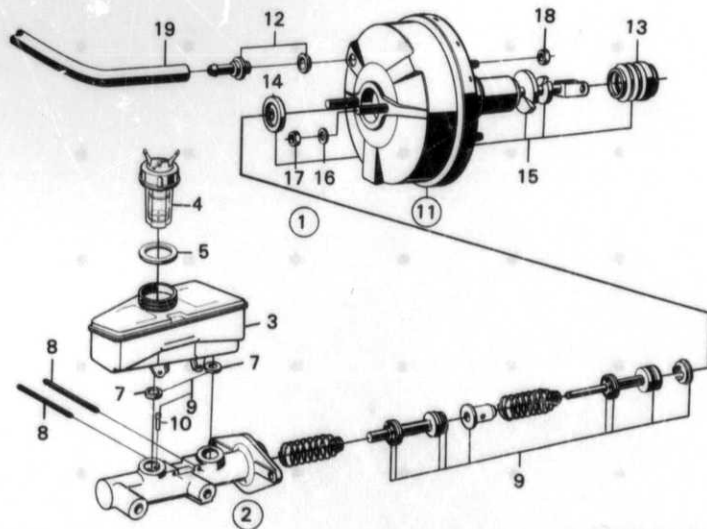

R 5928-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

5 GROUP INDEX

Front wheel brake	3-A04
Rear wheel brake	3-A06
Footbrake system	3-A08
Handbrake system	3-A14

0250

Footbrake system
Brake lines etc

Fotbromssystem
Bromsledningar etc


Date
Datum
1987-10

Illustration
Bild nr
R3774

Group
Grupp
5

Page
Sida
9

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR /	Notes Anmärkning
		900	US				
0020	1 89 40 819	2		2 Brake hose	Bromsslang	4	
0040	2 89 31 784	2		2 Brake hose	Bromsslang	4	
0060	3 89 46 014	1		1 Brake pipe LH wheel house	Bromsrör V hjulhus	5	(8940074)
0100	4 89 40 108	1		1 Brake pipe RH wheel house	Bromsrör H hjulhus	5	
0120	5 89 40 185	1		1 Brake pipe LH	Bromsrör V	6	
0140	6 89 40 199	1		1 Brake pipe RH	Bromsrör H	6	
0160	7 89 40 744	1		1 Brake pipe LH	Bromsrör V	3	
0200	8 89 40 751	1		1 Brake pipe RH	Bromsrör H	3	
0240	9 89 40 009	1		1 Brake pipe	Bromsrör	6	
0280	10 89 45 974	1		1 Brake pipe	Bromsrör	6	(8940041)
0300	11 89 28 947	1		1 Inlet nipple	Genomföringsnippel	5	
0320	12 89 29 671	1		1 Stiffening plate	Förstyvningsplåt	5	
0340	13 80 97 859	1		1 Screw	Skruv	5	
0360	14 89 33 335	1		1 Seal washer	Tättningsbricka	5	
0380	15 89 28 756	2		2 Nipple	Nippel	5	
0400	16 89 08 182	15		15 Pipe retainer	Rörhållare	5	
0420	17 89 19 490	3		3 Pipe retainer	Rörhållare	5	
0440	18 89 07 966	3		3 Clamp	Klamme	5	
0460	19 89 40 132	2		2 Clamp	Klamme	5	
0480	20 89 40 652	2		2 Yoke	Bygel	5	
0500	21 79 22 891	3		3 Screw	Skruv	5	
0520	22 83 15 558	2		2 Nut	Mutter	5	
0540	23 79 33 856	2		2 Washer	Bricka	5	
0560	24 89 23 250	1		1 Retainer, brake hose	Hållare, bromsslang	6	
0580	25 89 29 655	1		1 Lock plate	Låsplåt	6	
0600	26 89 31 461	1		1 Clamp	Klammer	5	
0620	27 79 22 891	4		4 Screw	Skruv	5	
0640	28 89 38 670	1		1 Clamp LHD	Klamme LHD	5	

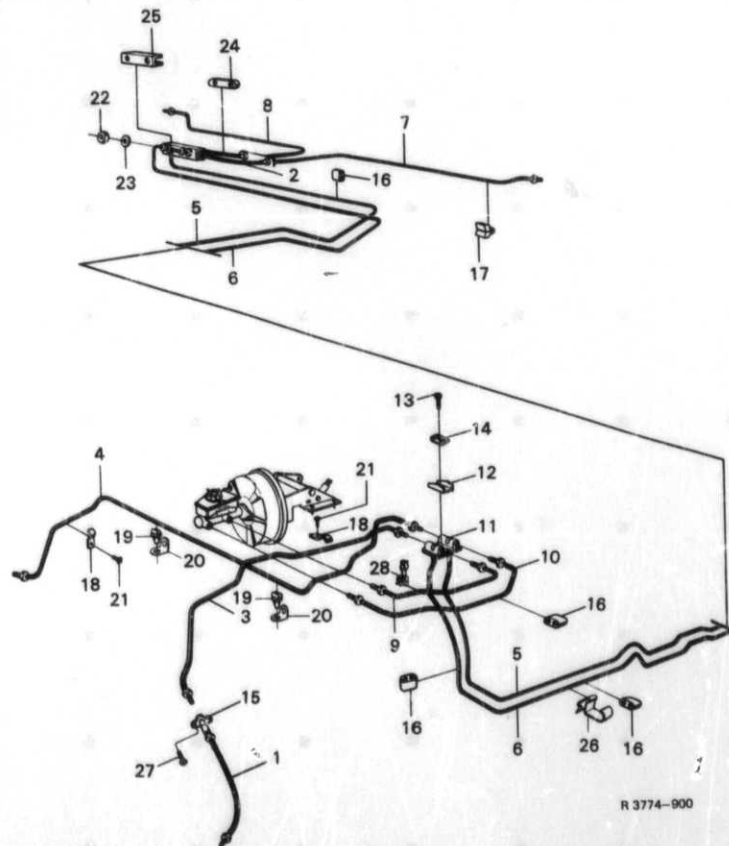

R 3774-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

5 GROUP INDEX

Front wheel brake	3-A04
Rear wheel brake	3-A06
Footbrake system	3-A08
Handbrake system	3-A14

0300

Footbrake system
Brake operation

Fotbromssystem
Bromsmanövrering


Date
Datum
1987-10

Illustration
Bild nr
R9348

Group
Grupp
5

Page
Sida
11

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR	Notes Anmärkning
		900	US				
0020	1 89 91 473	1		1 Brake pedal assy	Bromspedal kpl	6	(8935181)
0040	1 89 40 314	1		1 Brake pedal assy	Bromspedal kpl	6	A
0060	2 84 07 983	1		1 Bushing	Bussning	4	
0080	3 89 38 136	1		1 Brake pedal assy	Bromspedal kpl RHD	6	
0100				RHD			
0120	3 89 41 635	1		1 Brake pedal assy	Bromspedal kpl RHD	6	A
0140				RHD			
0160	4 89 16 272	1		1 Pedal rubber	Pedalgummi	5	PART OF 8935181, 8938136
0180	4 89 40 033	1		1 Pedal rubber	Pedalgummi	5	PART OF 8940314, 8941635
0200	5 89 35 167	1		1 Bracket	Konsol	6	
0220	6 80 84 246	1		1 Screw	Skruv	6	
0240	7 89 35 132	1		1 Distance tube	Distansrör	5	
0260	8 89 48 051	2		2 Bushing	Bussning	4	(8924516)
0280	9 80 73 538	1		1 Nut	Mutter	3	
0300	10 89 41 320	1		1 Spring, RHD	Fjäder RHD	6	
0320	11 89 29 531	2		2 Washer	Bricka	5	
0340	12 79 71 922	2		2 Nut	Mutter	3	
0360	13 80 74 288	1		6 Nut	Mutter	5	
0380	14 89 37 633	1		1 Bracket LH, RHD	Konsol V, RHD	6	
0382	14A 89 12 115	1		1 Bushing	Bussning	6	
0384	14B 89 37 625	1		1 Bushing	Bussning	4	
0400	15 89 38 359	1		1 Bracket RH, RHD	Konsol H, RHD	6	
0402	15A 89 12 115	1		1 Bushing	Bussning	4	
0404	15B 89 37 625	1		1 Bushing	Bussning	4	
0420	16 80 30 066	1		1 Washer RHD	Bricka RHD	5	
0440	17 80 47 722	1		1 Retaining ring RHD	Spärrring RHD	5	
0460	18 89 24 557	1		1 Fork end RHD	Gaffelända RHD	6	
0480	19 80 73 942	1		1 Nut RHD	Mutter RHD	5	
0500	20 89 38 284	1		1 Draw rod assy RHD	Dragstång kpl RHD	6	
0520	21 89 33 509	2		2 Lock pin RHD	Låsbygel RHD	5	
0540	22 82 52 553	2		2 Lock clip, RHD	Låsclips RHD	5	
0560	23 79 09 989	1		1 Shaft bolt	Axelbult	5	
0580	24 79 04 394	1		1 Split pin	Saxpinne	3	
0600	25 89 38 318	1		1 Intermediate shaft, RHD	Mellanaxel i RHD	6	
0640	26 89 29 531	3		3 Washer, RHD	Bricka, RHD	5	
0660	27 79 71 922	3		3 Nut RHD	Mutter RHD	3	
0680	28 80 29 985	1		1 Washer	Bricka	5	
0700	29 89 35 751	1		1 Spring, brake pedal	Fjäder, bromspedal	3	
0740	31 71 62 308	3		3 Rubber plug	Gummiplugg	5	
0760	32 89 28 899	1		1 Rubber plug	Gummiplugg	5	A
0780	33 89 29 531	2		2 Gasket	Packning	5	A
0800	34 89 42 021	1		1 Cover plate	Täckplåt	2	
0820	35 89 41 478	1		1 Gasket	Packning	5	A

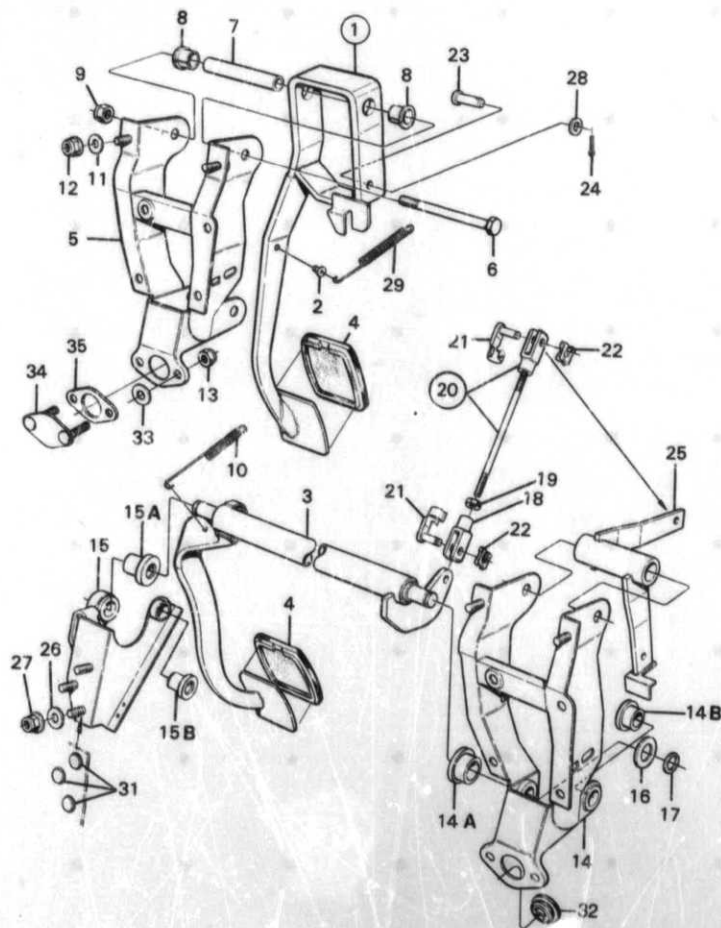


R 9348-900

0 General	1-A02
1 Tools	1-H02
2 Engine	2-A02
3 Electrical system, Instruments	2-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly, Steering	3-B02
7 Suspension, Wheels	3-C02
8 Body	3-D02
9 Accessories, Labels	3-L02
10 Numerical register	4-A02

5 GROUP INDEX

Front wheel brake	3-A04
Rear wheel brake	3-A06
Footbrake system	3-A08
Handbrake system	3-A14

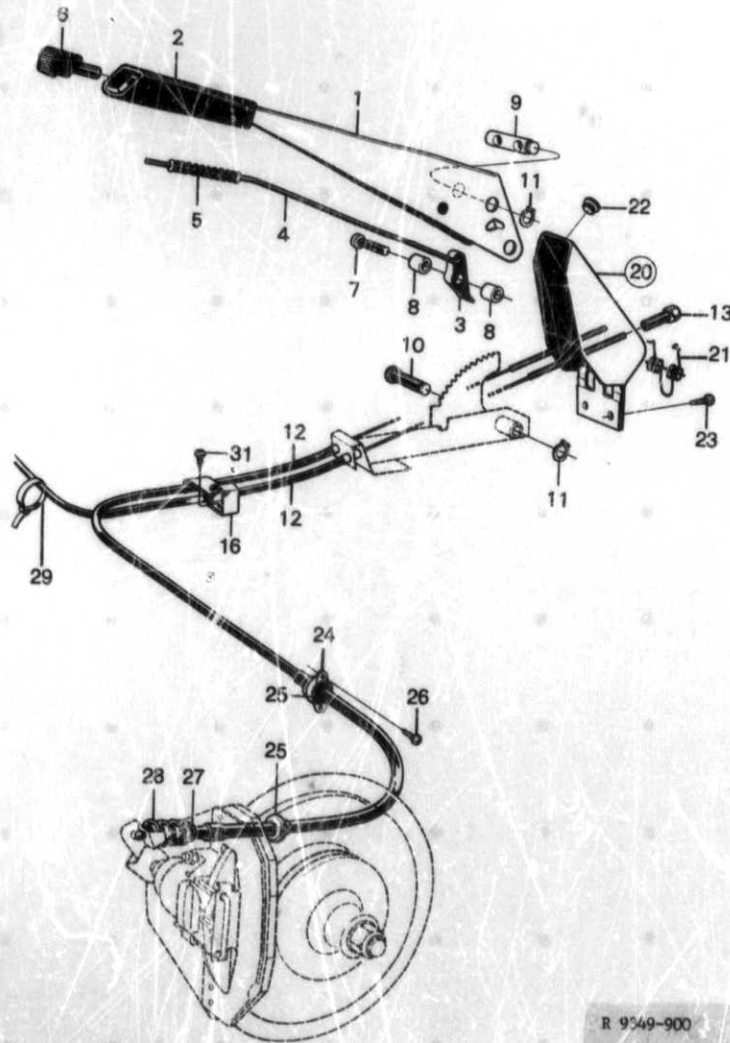

R 9349-900

0350

Handbrake system

Handbromssystem

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R9349

5

13

Fig Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/P	Notes Anmärkning
		900	US				
0020	1 89 27 758	1		1 Lever with washer	Spåk med bricka	5	
0040	2 89 17 791	1		1 Handle	Handtag	5	
0060	3 89 27 782	1		1 Ratchet pawl	Spärr	5	
0080	4 89 27 774	1		1 Pawl rod	Spärrstång	5	
0100	5 71 80 607	1		1 Spring	Fjäder	5	
0120	6 89 17 809	1		1 Button	Tryckknapp	5	
0140	7 89 27 790	1		1 Shaft rivet	Åxelnit	5	
0160	8 89 27 815	2		2 Spacer sleeve	Distanshylsa	5	
0180	9 89 27 906	1		1 Shaft	Åxel	5	
0200	10 89 03 783	1		1 Shaft bolt	Åxelbult	5	
0220	11 79 15 093	2		2 Retaining ring	Spärring	5	
0240	12 89 37 898	2		2 Handbrake cable	Handbromskabel	4	
0260	13 89 85 459	2		2 Adjusting nut	Justermutter	3 (8927881)	
0310	16 89 47 574	1		1 Clamp	Klamma	6 (0944290)	
0320	20 84 75 659	1		1 Cover assy hand- brake lever	Kåpa kpl handbroms- spåk	4	
0340							
0360	21 84 10 102	1		1 Spring	Fjäder	5	
0380	22 71 83 088	1		1 Rubber plug	Gummiplugg	5	
0400	23 88 40 088	2		2 Screw	Skruv	5	
0420	24 89 08 121	2		2 Retainer	Hållare	4	
0440	25 89 08 139	4		4 Ring	Ring	4	
0460	26 79 22 891	4		4 Screw	Skruv	5	
0480	27 79 15 093	2		2 Retaining ring	Spärring	5	
0500	28 89 27 823	2		2 Friction bellows	Skyddsbälte	4	
0520	29 79 71 850	2		2 Strap	Spännband	4	
0540	31 79 22 800	1		1 Screw	Skruv	5 3)	
0560	31 79 72 905	1		1 Screw	Skruv	5 4)	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

5 GROUP INDEX

Front wheel brake	3-A04
Rear wheel brake	3-A06
Footbrake system	3-A08
Handbrake system	3-A14



Framvagn, Styrinrättning
Front assembly, Steering
Vorderwagen, Lenkung
Train-avant, Direction
Tren delantero, Dirección

SAAB
genuine parts
original reservdelar

3-B02

SAAB 900
M79-80

MASTER INDEX

Front wheel suspension,
STEERING DEVICE

Framvagn, styrinrättning

Date
Datum
1987-10

Group
Grupp
6

Page
Sida
1

TABLE OF CONTENTS

Front wheel suspension, steering device	6:3	3-B04
Front wheel suspension		
Steering device	6:5	3-B06
Steering wheel, column tube, steering wheel shaft	6:7	3-B08
Steering gear	6:9	3-B10
Power steering gear, pump etc		

INNEHÅLLSFÖRTECKNING

Framvagn, styrinrättning	6:3	3-B04
Framvagn		
Styrinrättning	6:5	3-B06
Ratt, rattstång, rattstäng	6:7	3-B08
Styrväxel	6:9	3-B10
Servostyrväxel, pump etc		

INHALTVERZEICHNIS

Forderwagen, Lenkungen	6:3	3-B04
Vorderwagen		
Lenkung	6:5	3-B06
Lenkrad, Lenksäulenlagerung, Lenksäule	6:7	3-B08
Lenkgetriebe	6:9	3-B10
Servolenkgetriebe, Pumpe usw		

TABLE DES MATIERES

Train avant, direction	6:3	3-B04
Train avant		
Direction	6:5	3-B06
Volant, tube enveloppe, colonne de direction	6:7	3-B08
Mécanisme de direction	6:9	3-B10
Servomécanisme de direction		


SUMARIO

Tren delantero, direcci	6:3	3-B04
Tren delantero		
Dirección	6:5	3-B06
Volante, tubo funda, columna de dirección	6:7	3-B08
Mecanismo de dirección	6:9	3-B10
Servomecanismo de dirección, bomba		

0 General	1-A02
1 Tools	1-H02
2 Engine	2-A02
3 Electrical system,	
Instruments	2-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly,	
Steering	3-B02
7 Suspension,	
Wheels	3-C02
8 Body	3-D02
9 Accessories,	
Labels	3-L02
10 Numerical	
register	4-A02

6 GROUP INDEX

Front wheel suspension,	3-B04
steering device	
Steering device	3-B06

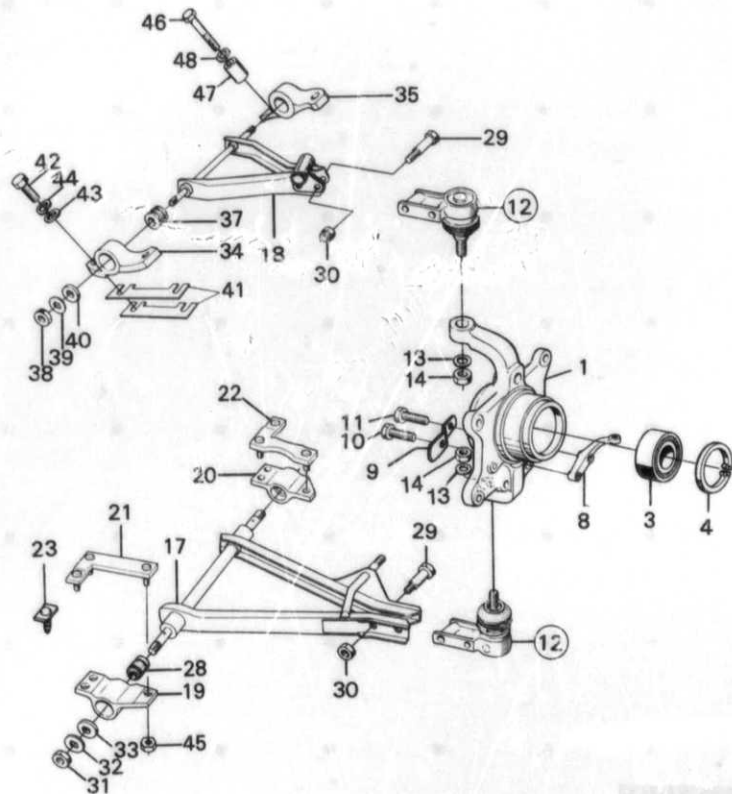

k 9311-900

SAAB
genuine parts
original reserved

3-B04

SAAB 900
M79-80

MASTER INDEX

0100

Front wheel suspension

Framvagn

Date
Datum
1987-10

Illustration
Bild nr
R9311

Group
Grupp
6

Page
Sida
3

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR	Notes Anmärkning
		900	US				
0020	1	89 22 700	2	2 Steering knuckle housing	Styrspindelhus	5	
0040	3	89 22 205	2	2 Ball bearing	Kullager	2	
0080	4	89 22 734	2	2 Retaining ring	Spärring	5	
0100	8	89 22 858	1	1 Steering arm LH	StyrmarmV	5	
0120	8	89 22 886	1	1 Steering arm RH	StyrmarmH	5	
0140	9	89 21 546	2	2 Lock plate	Låsplåt	5	
0180	10	89 26 180	2	2 Screw	Skruv	5	
0180	11	89 26 172	2	2 Screw	Skruv	5	
0200	12	89 33 321	4	4 End piece assy	Ändstycke kpl	2	(8905416)
0220	13	80 73 124	4	4 Washer	Bricka	5	
0240	14	79 18 733	4	4 Nut	Mutter	3	S
0300	17	89 34 788	1	1 Control arm lower LH	Svängarm nedreV	4	
0320	17	89 34 796	1	1 Control arm lower RH	Svängarm nedreH	4	
0340	18	89 41 015	1	1 Control arm upper LH	Svängarm övreV	4	
0360	18	89 41 023	1	1 Control arm upper RH	Svängarm övreH	4	
0380	19	89 33 970	1	1 Bearing front LH	Lager främreV	5	
0400	19	89 33 986	1	1 Bearing front RH	Lager främreH	5	
0420	20	89 34 002	1	1 Bearing rear LH	Lager bakreV	5	
0440	20	89 34 010	1	1 Bearing rear RH	Lager bakreH	5	
0460	21	89 39 274	1	1 Bracket front LH	Fäste främreV	5	
0480	21	89 39 282	1	1 Bracket front RH	Fäste främreH	5	
0500	22	89 35 736	1	1 Bracket assy rear LH	Fäste kpl bakre V	6	
0520	22	89 35 744	1	1 Bracket assy rear RH	Fäste kpl bakre H	6	
0525	23	82 67 908	1	1 Bearing rear RH	Fäste främre H	5	
0530	23	82 62 941	1	1 Bearing rear LH	Fäste främre V	5	
0540	28	71 84 443	4	4 Bushing	Bussning	2	
0560	29	89 90 012	8	8 Screw	Skruv	3	
0580	30	79 69 306	8	8 Nut	Mutter	3	
0600	31	79 04 113	4	4 Nut	Mutter	5	
0620	32	70 71 939	4	4 Washer	Bricka	5	
0640	33	70 70 642	4	4 Washer	Bricka	5	
0660	34	71 75 441	1	1 Bearing front LH	Lager främreV	5	
0680	35	71 75 433	1	1 Bearing rear LH	Lager bakreV	5	ALTERNATIVE TO 7175433
0700	35	73 37 330	1	1 Bearing front RH	Lager främreH	5	
0720	34	71 75 433	1	1 Bearing rear RH	Lager bakreH	5	
0740	35	71 75 441	1	1 Bearing rear RH	Lager bakreH	5	
0760	35	73 37 348	1	1 Bearing rear RH	Lager bakreH	5	ALTERNATIVE TO 7175441
0780	37	71 63 603	4	4 Bushing	Bussning	2	
0800	38	79 04 097	4	4 Nut	Mutter	5	
0820	39	70 70 626	4	4 Washer	Bricka	5	
0840	40	70 70 667	4	4 Washer	Bricka	5	
0860	41	70 71 061	X	X Spacer 0,5 mm	Mellanlägg 0,5 mm	5	
0880	41	70 71 079	X	X Spacer 1,0 mm	Mellanlägg 1,0 mm	5	
0900	41	70 71 087	X	X Spacer 2,0 mm	Mellanlägg 2,0 mm	5	
0920	42	80 83 180	7	7 Screw	Skruv	5	
0940	43	80 73 108	7	7 Washer	Bricka	5	
0960	44	88 02 175	7	7 Washer	Bricka	5	
0980	45	79 71 765	12	12 Nut	Mutter	5	
1000	46	80 83 222	1	1 Screw	Skruv	5	
1020	47	89 41 403	1	1 Spacer sleeve	Distanshylsa	5	
1040	48	88 02 175	1	1 Washer	Bricka	5	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

6 GROUP INDEX

Front wheel suspension,	3-B04
steering device	3-B06
Steering device	3-B06

0150

Steering device
Steering wheel steering
wheel shaft etc


Styrinrättning
Ratt rattstång etc

Date
Datum
1987-10

Illustration
Bild nr
R9312

Group
Grupp
6

Page
Sida
5

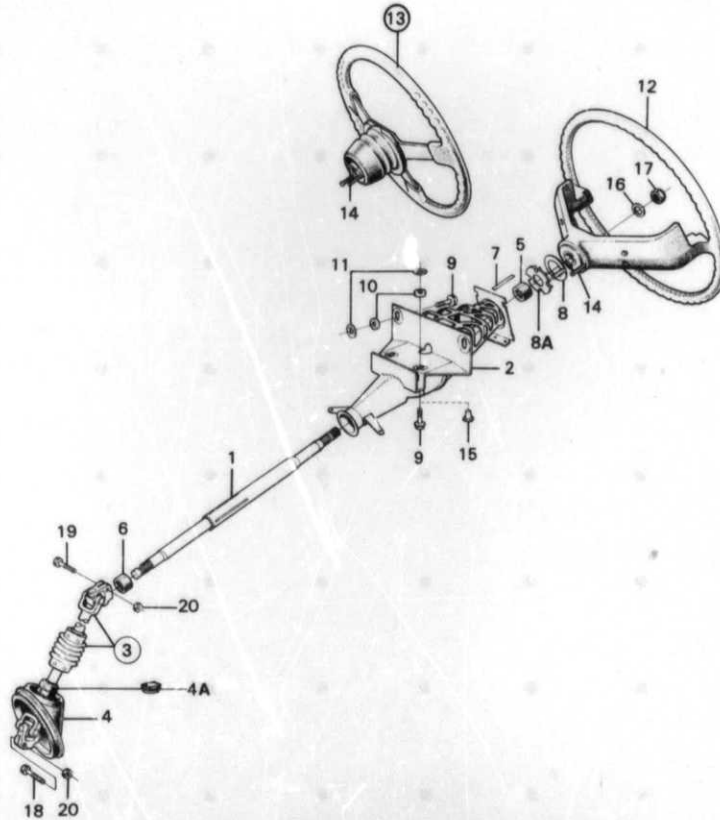


R 9312-900

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR L	Notes Anmärkning
		900	US				
0020	1 78 05 256	1		1 Steering wheel shaft	Rattstång	5	
0040	2 68 34 952	1		1 Steering column base	Rattstälisbur	6	
0080	3 89 48 044	1		1 Intermediate shaft	Meilanaxel kpl	5	(8934903)
0100	4 89 47 970	1		1 Rubber bellows	Gummibälg	5	(8934408)
0120	4A 89 47 988	1		1 Bearing	Lagring	3	
0140	5 89 35 025	1		1 Needle bearing, upper	Nållager, övre	5	
0160	6 89 36 163	1		1 Needle bearing, lower	Nållager, nedre	5	
0180	7 89 40 645	1		1 Earthing foil	Jordbleck	5	
0200	8 89 38 411	1		1 Contact ring	Kontakt-ring	5	
0210	8A 89 38 403	1		1 Bracket	Hållare	5	
0220	9 89 39 340	4		4 Screw	Skruv	5	
0240	10 89 39 332	4		4 Washer	Bricka	3	
0260	11 89 41 114	4		4 Rubber ring	Gummiring	3	
0280	12 89 35 454	1		1 Steering wheel assy	Ratt kpl	5	
0300	13 89 40 249	1		1 Steering wheel assy	Ratt kpl	5	EMS
0320	14 89 39 886	4		4 Return pin	Återgångsstift	3	
0340	15 89 41 205	4		4 Seal plug	Tätningsslugg	5	
0360	16 79 33 872	1		1 Washer	Bricka	5	
0380	17 89 42 716	1		1 Lock nut	Låsmutter	5	
0400	18 79 72 334	1		1 Screw	Skruv	5	
0420	19 79 67 789	1		1 Screw	Skruv	5	
0440	20 79 68 415	2		2 Nut	Mutter	3	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

6 GROUP INDEX

Front wheel suspension, steering device	3-B04
Steering device	3-B06

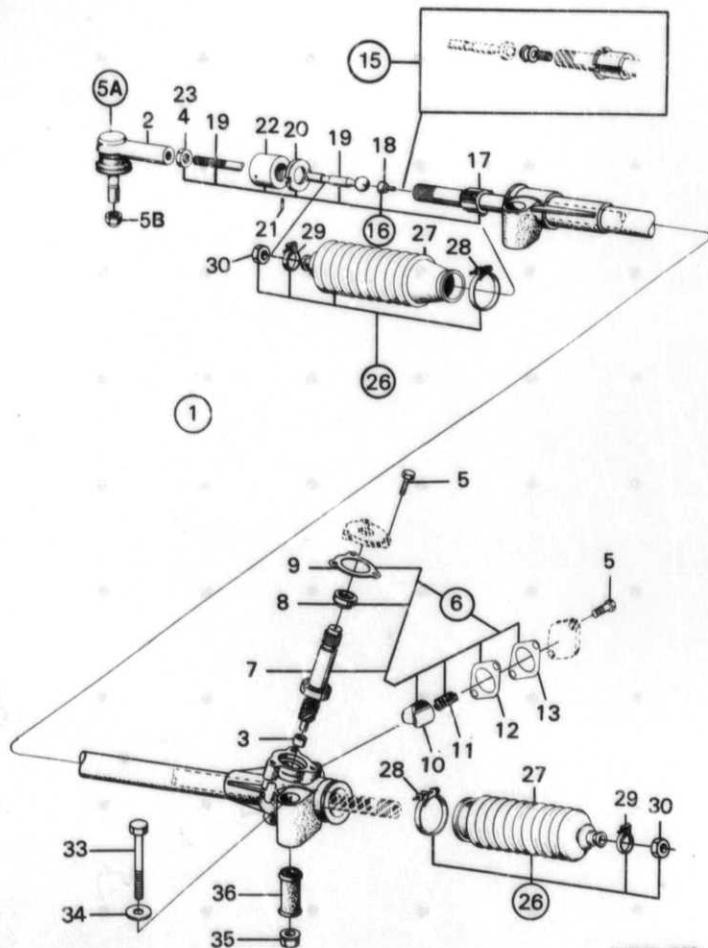

0200

Steering device
Steering gear

Styrinrättning
Styrväxel

Date
Datum
1987-10

Illustration
Bild nr
R5929

Group
Grupp
6

Page
Sida
7


Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR /	Notes Anmärkning
		900	US				
0020	1 89 85 129	1		1 Steering gear with tie rods assy	Styrväxel med stag kpl	4	(8936171, 8938557)
0021	1 89 36 189	1		Steering gear with tie rods assy RHD	Styrväxel med stag kpl R H D	4	
0060	1 89 38 565	1		Steering gear with tie rods assy RHD	Styrväxel med stag kpl R H D	4	-1979 EMS
0070	2 89 85 160	2		2 Tie rod end assy	Styrstagsända kpl	2	1) (8924177)
0080	3 89 34 135	1		1 Needle bearing	Nållager	4	
0090	4 89 24 169	2		2 Lock nut	Låsmutter	4	
0100	5 80 82 950	6		5 Screw	Skruv	5	
0110	5A 89 93 354	1		1 Kit, tie rod end	Sats, styrstagsända	2	
0120	5B 80 73 546	1		1 Nut	Mutter	3	
0130	6 89 44 761	X		X Repair kit, pinion	Reparationssats, pinjong	4	
0140	6 89 44 746	X		X Repair kit, pinion	Reparationssats, pinjong	4	EMS
0150	6 89 44 779	X		Repair kit, pinion RHD	Reparationssats, pinjong RHD	4	
0160	6 89 44 753	X		Repair kit, pinion RHD	Reparationssats, pinjong RHD	4	EMS
0170	7 89 34 200	1		1 Pinion	Kuggdrev	1)	
0180	8 89 34 192	1		1 Seal ring	Tättningsring	1)	
0190	9 89 33 087	1		1 Gasket	Peckning	1)	
0200	10 89 42 104	1		1 Plunge	Fjäder	1)	
0210	11 89 26 844	2		2 Shim 0,044-0,056 mm	Shim 0,044-0,056 mm	4	
0220	12 89 26 651	2		2 Shim 0,127 mm	Shim 0,127 mm	4	
0230	12 89 26 669	2		2 Shim 0,254 mm	Shim 0,254 mm	4	
0240	13 89 26 685	1		1 Gasket	Peckning	1)	
0250	15 89 48 291	X		X Repair kit, inner ball joint	Reparationssats, inre kullad	4	
0260	89 26 545	1		1 Bushing	Bussning	1)	
0270	89 20 796	2		2 Spring	Fjäder	1)	
0280	89 26 701	2		2 Washer	Bricka	1)	
0290	89 26 693	2		2 Bearing cup, inner	Lagerskål, inre	1)	
0300	89 15 787	2		2 Lock pin	Låsstift	1)	
0310	16 89 44 787	X		X Repair kit, tie rod	Reparationssats, styrtag	3	
0320	17 89 26 545	1		1 Bushing	Bussning	1)	
0330	18 89 26 693	1		1 Bearing cup, inner	Lagerskål, inre	1)	
0340	19 89 34 234	1		1 Tie rod	Styrstag	1)	
0350	20 89 26 727	1		1 Lock nut	Låsmutter	1)	
0360	21 89 15 787	1		1 Lock pin	Låsstift	5	
0370	22 89 40 801	1		1 Bearing cup, outer	Lagerskål, yttre	5	
0380	23 89 24 169	1		1 Lock nut	Låsmutter	5	
0390	26 89 44 720	X		X Kit, bellows	Sats, bälg	2	
0400	27 89 26 743	1		1 Bellows	Bälg	1)	
0410	28 89 26 768	1		1 Clamp	Klamme	1)	
0420	29 89 20 183	1		1 Clamp	Klamme	5	
0430	30 89 24 169	1		1 Lock nut	Låsmutter	5	
0440	33 89 34 242	2		2 Screw	Skruv	5	
0450	34 89 34 258	2		2 Washer	Bricka	5	
0460	35 79 71 705	2		2 Nut	Mutter	5	
0470	36 89 34 119	2		2 Bushing	Bussning	3	

1. Not separate spare part

0 General	1-A02
1 Tools	1-H02
2 Engine	2-A02
3 Electrical system, Instruments	2-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly, Steering	3-B02
7 Suspension, kpl R H D	3-C02
8 Body	3-D02
9 Accessories, Labels	3-L02
10 Numerical register	4-A02

6 GROUP INDEX

Front wheel suspension, steering device	3-B04
Steering device	3-B06

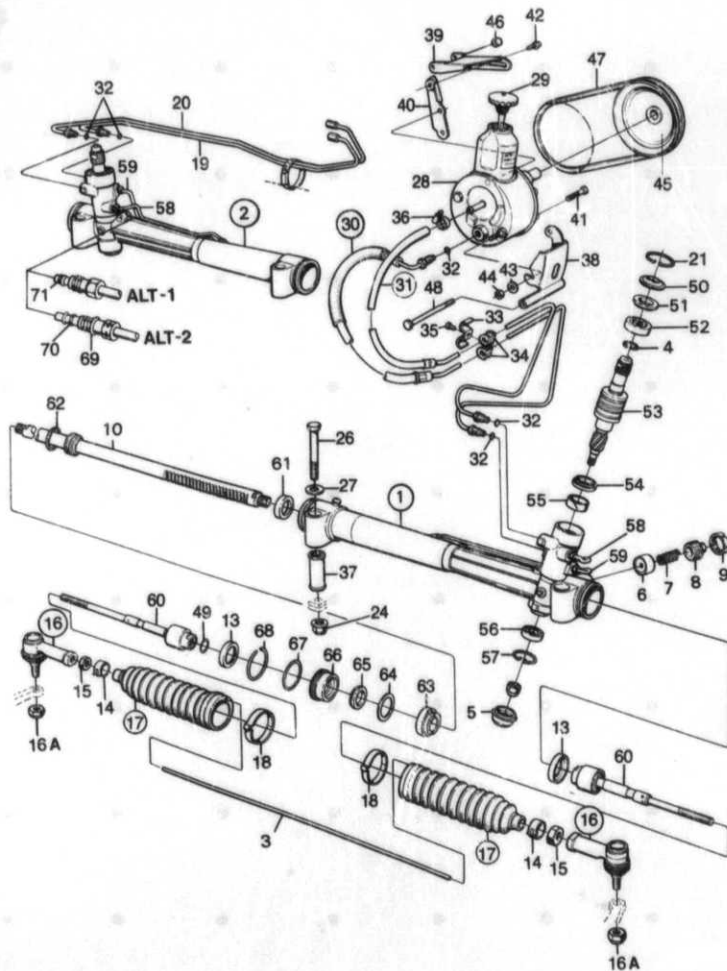

R 9313-900

0250

Steering device
Power steering gear,
pump etc

Styrinrättning
Servostyrväxel, pump etc

Date	Illustration	Group	Page
Datum	Bild nr	Grupp	Sida
1987-10	R9313	6	9


Fig. Pos.	Part No Art nr	Quantity/ / Antal		Description	Benämning	K/S	Notes
		900	US				
0020	1 88 36 460	1		1 Power steering gear with tie rods assy	Servostyrväxel med stag kpl	4	
0040	2 88 38 813	1		Power steering gear with tie rods assy R H D	Servostyrväxel med stag kpl R H D	4	
0090	3 88 36 700	1		1 Tube breather	..Utjämningrör	4	
0080	4 88 36 890	1		1 Lock ring	..Låsring	S 5	
0100	5 88 36 890	1		1 Cap	..Kapsel	2	
0120	6 88 37 005	1		1 Plunger	..Plunge	4	
0140	7 88 37 013	1		1 Spring	..Fjäder	6	
0160	8 88 37 021	1		1 Adjusting screw	..Ställskruv	5	
0180	9 88 37 039	1		1 Lock nut	..Låsmutter	3	
0200	10 88 37 047	1		1 Rack	..Kuggetång	6	
0220	13 88 36 884	2		2 Shock absorber ring	..Stötdämperring	S 4	
0240	14 88 37 161	2		2 Clamp	..Klämma	5	
0260	15 88 37 975	2		2 Nut	..Mutter	2	
0280	16 88 37 354	2		2 Tie rod end assy	..Styrstagsänd kpl	2 (8924177)	
0300	16A 80 73 546	2		2 Nut	..Mutter	S 3	
0320	17 80 73 546	2		2 Bellows assy	..Bälg kpl	S 3	
0340	18 88 37 153	2		2 Clamp	..Klämma	S 3	
0360	19 88 40 678	1		1 Pressure pipe RHD	..Tryckrör RHD	4	
0380	20 88 40 702	1		1 Return pipe RHD	..Returrör RHD	4	
0400	21 88 36 808	1		1 Flange ring	..Flänsring	S 5	
0420	24 78 71 785	2		2 Flange nut	..Flänsmutter	3	
0440	26 88 34 242	2		2 Screw	..Sexkantkruv	5	
0460	27 88 34 259	2		2 Washer	..Bricka	5	
0480	28 88 36 288	1		1 Steering pump	..Hydralpump	3 (2,5)	
0500	28 88 43 359	1		1 Steering pump	..Hydralpump	3 (3)	
0520	29 88 37 419	1		1 Cover	..Lock	4	
0540	30 88 37 468	1		1 Pressure hose assy	..Tryckslang kpl	4	
0560	31 88 37 559	1		1 Return hose assy	..Returslang kpl	4	
0580	31 88 42 849	1		1 Return hose assy RHD	..Returslang kpl RHD	4	
0600	32 88 37 500	3		3 O-ring	..O-ring	S 3	
0620	33 88 29 044	1		1 Clamp	..Klämma	5	
0640	34 88 28 848	2		2 Rubber bushing	..Gummibussning	5	
0660	35 78 22 891	1		1 Screw	..Skruv	5	
0680	36 78 63 507	1		1 Hose clamp	..Slängklämma	5	
0700	37 88 34 119	2		2 Rubber bushing	..Gummibussning	5	
0720	38 93 04 843	1		1 Pump bracket	..Pumpfäste	3 (2)	
0740	38 93 31 588	1		1 Pump bracket	..Pumpfäste	3 (3)	
0760	39 93 04 676	1		1 Support	..Spännstag	3	
0780	40 93 04 650	1		1 Bracket	..Fäste	3	
0800	41 78 35 901	4		4 Screw	..Skruv	5 (2)	
0820	41 80 R3 123	4		4 Screw	..Skruv	5 (3)	
0840	42 78 63 538	1		1 Flange screw	..Flänskruv	5	
0860	43 78 16 505	1		1 Washer	..Bricka	5	
0880	44 78 14 716	1		1 Nut	..Mutter	5 (2)	
0900	44 80 29 779	1		1 Nut	..Mutter	5 (3)	
0920	45 93 00 971	1		1 Belt pulley	..Remskiva	3	
0940	46 83 39 749	2		2 Sleeve	..Hylsa	4	
0960	47 83 39 921	1		1 V-belt	..Kilrem	1	
0980	48 80 84 063	1		1 Screw	..Skruv	5	
1000	48 88 46 380	2		2 Washer	..Bricka	5	SEE SERVICE MANUAL, GR 6

2 Ch -90801011973- -90802003663- -90806001430.
3 Ch 90801011974- -90802003664- -90806001431-
5 Superseded by 8943359

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

6 GROUP INDEX

Front wheel suspension, steering device	3-B04
Steering device	3-B06

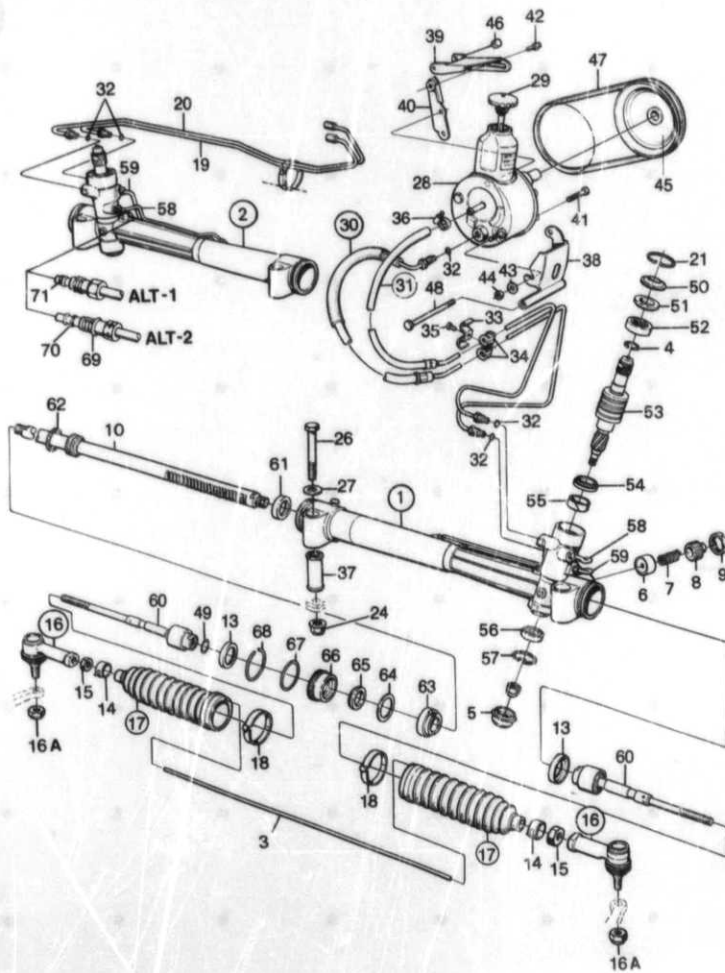

R 9313-900

0250

Steering device
Power steering gear,
pump etc

Styrinrättning
Servostyrväxel, pump etc

Date
Datum 1987-10
Illustration
Bild nr R9313
Group
Grupp 6
Page
Sida 11


Fig. Pos.	Part No Art nr	Quantity/ Antal		Description	Benämning	K/S SR	Notes Anmärkning
		900	US				
1140	89 43 201	1		1 Gasket set, rack	Packningsatts, kuggstång	3	
1180	18 89 37 153	1		1 Clamp	Klamma	S 5	
1200	61 89 36 627	1		1 Sealing	Tätning	S 1)	
1220	62 89 37 070	1		1 Piston ring	Kolvring	S 1)	
1240	65 89 36 635	1		1 Sealing	Tätning	S 1)	
1260	67 89 36 668	1		1 O-ring	O-ring	S 1)	
1300	68 89 36 676	1		1 Lock ring	Låsring	S 1)	
1320	89 43 219	1		1 Gasket set, end	Packningsatts, gavel	3	
1340	18 89 37 153	1		1 Clamp	Klamma	S 5	
1360	65 89 36 635	1		1 Sealing	Tätning	S 1)	
1380	67 89 36 668	1		1 O-ring	O-ring	S 1)	
1400	68 89 36 676	1		1 Lock ring	Låsring	S 1)	
1420	89 43 227	1		1 Set, ball bearing, pinion	Sats, kullager, pinjong	4	
1440	21 89 36 908	1		1 Lock ring	Låsring	S 5	
1460	50 89 36 916	1		1 Dust sealing	Dammtätning	S 1)	
1480	51 89 36 924	1		1 Sealing ring	Tätningssring	S 1)	
1500	50 89 36 916	1		1 Sealing	Tätning	S 1)	
1520	54 89 36 985	1		1 Ball bearing	Kullager	S 1)	
1540	50 89 36 916	1		1 Sealing set, pinion	Tätningssats, pinjong	3	
1560	21 89 36 908	1		1 Lock ring	Låsring	S 5	
1580	50 89 36 916	1		1 Dust sealing	Dammtätning	S 1)	
1600	51 89 36 924	1		1 Sealing ring	Tätningssring	S 1)	
1620	89 43 243	1		1 Sealing set, pinion	Packningsatts, pinjong	3	
1640	50 89 36 916	1		1 Dust sealing	Dammtätning	S 1)	
1660	51 89 36 924	1		1 Sealing ring	Tätningssring	S 1)	
1680	54 89 36 935	1		1 Sealing	Tätning	S 1)	
1700	55 89 36 619	1		1 Bushing	Bussning	S 1)	
1720	89 43 250	1		1 Set, needle bearing, pinion	Sats, nållager, pinjong	4	
1740	50 89 36 916	1		1 Dust sealing	Dammtätning	S 1)	
1760	51 89 36 924	1		1 Sealing ring	Tätningssring	S 1)	
1780	54 89 36 935	1		1 Needle bearing	Nållager	S 1)	
1800	55 89 36 619	1		1 Sealing	Tätning	S 1)	
1820	89 43 268	1		1 Repair kit, tie rod	Reparationsatts, styrstag	4	
1840	13 89 36 684	1		1 Shock absorber ring	Stötdämparring	S 4	
1860	18 89 37 153	1		1 Clamp	Klamma	S 5	
1880	60 89 37 088	1		1 Tie rod	Styrstag	S 1)	
1900	89 93 089	1		1 Bellows assy	Bälgs kpl	3	
1920	89 37 146	1		1 Bellows	Bälgs	S 1)	
1940	18 89 37 153	1		1 Clamp	Klamma	S 5	
1960	89 43 276	1		1 Repair kit, end	Reparationsatts, gavel	4	
1980	18 89 37 153	1		1 Clamp	Klamma	S 5	
2000	63 89 36 643	1		1 End inner	Gavel inre	S 1)	
2020	64 89 40 579	1		1 Washer wavy	Bricks vågig	S 1)	
2040	65 89 36 635	1		1 Sealing	Tätning	S 1)	
2060	66 89 36 995	1		1 End outer	Gavel yttre	S 1)	
2080	67 89 36 668	1		1 O-ring	O-ring	S 1)	
2100	68 89 36 676	1		1 Lock ring	Låsring	S 1)	
2120							
2140							
2160							
2180							
2200							
2220							
2240							
2260							
2280							
2300							
2320							
2340							
2360							

1. Not separate spare part

0 General	1-A02
1 Tools	1-H02
2 Engine	2-A02
3 Electrical system, Instruments	2-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly, Steering	3-B02
7 Suspension, Wheels	3-C02
8 Body	3-D02
9 Accessories, Labels	3-L02
10 Numerical register	4-A02

6 GROUP INDEX

Front wheel suspension, steering device	3-B04
Steering device	3-E06

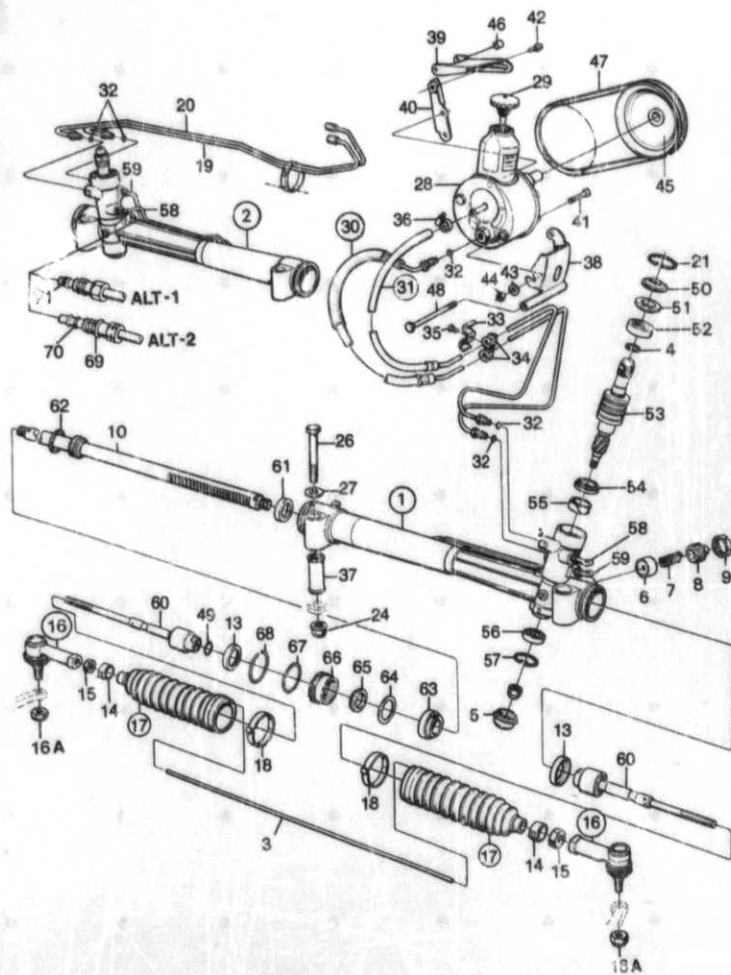

9313-900

SAAB
genuine parts
original reservdelar

3-B14

SAAB 900
M79-80

MASTER INDEX

0250

Steering device
Power steering gear,
pump etc

Styrinrättning
Servostyrväxel, pump etc

Date
Datum

Illustration
Bilo nr

Group
Grupp

Page
Sida

13

Fig. Pos.	Part No Art nr	Quantity/Amount 900	US	Description	Benämning	K/S S/R	Notes Anmärkning
2380	89 43 284	1		1 Lock ring, pinion	Låsring, pinjong	4	
2400	89 36 973	1		1 Lock ring	Låsring	S 1)	
2420							
2440	89 43 282	1		1 Repair kit, pinion	Reparationssats, pinjong	4 L H D	
2460							
2480	89 36 890	1		1 Lock ring	Låsring	S 5	
2500	89 36 916	1		1 Dust sealing	Damm tätning	S 1)	
2520	89 36 924	1		1 Sealing ring	Tätningssring	S 1)	
2540	89 36 701	1		1 Pinion with valve	Pinjong med ventil	S 1)	
2560	89 36 635	1		1 Sealing	Tätning	S 1)	
2580	89 36 619	1		1 Bushing	Bussning	S 1)	
2600							
2720	89 43 300	1		1 Kit, pipe long	Sats, rör långt	4 L H D ALT-1	
2640	89 85 376	2		2 O-ring	O-ring	S 3	
2660	89 36 718	1		1 Pipe long	Rör långt	S 1)	
2700							
2720	89 47 079	1		1 Kit, pipe long	Sats, rör långt	4 L H D ALT-2	
2740	89 46 345	2		2 O-ring	O-ring	S 3	
2760	89 46 352	2		2 O-ring	O-ring	S 3	
2800							
2820	89 43 315	1		1 Kit, pipe short	Sats, rör kort	4 L H D ALT-1	
2840	89 85 376	2		2 O-ring	O-ring	S 3	
2860	89 36 759	1		1 Pipe short	Rör kort	S 1)	
2880							
2900	89 47 027	1		1 Kit, pipe short	Sats, rör kort	4 L H D ALT-2	
2920	89 43 345	2		2 O-ring	O-ring	S 3	
2940	89 46 352	2		2 O-ring	O-ring	S 3	
2960							
2980	89 43 326	1		1 Repair kit, pinion	Reparationssats, pinjong	4 R H D	
3000							
3020	89 36 890	1		1 Lock ring	Låsring	S 5	
3040	89 36 916	1		1 Dust sealing	Damm tätning	S 1)	
3060	89 36 924	1		1 Sealing ring	Tätningssring	S 1)	
3080	89 36 175	1		1 Pinion with valve	Pinjong med ventil	S 1)	
3100	89 36 635	1		1 Sealing	Tätning	S 1)	
3120	89 36 619	1		1 Bushing	Bussning	S 1)	
3140							
3160	89 43 334	1		1 Kit, pipe long	Sats, rör långt	4 R H D ALT-1	
3180	89 85 376	2		2 O-ring	O-ring	S 3	
3200	89 39 134	1		1 Pipe long	Rör långt	S 1)	
3220							
3240	89 47 095	1		1 Kit, pipe long	Sats, rör långt	4 R H D ALT-2	
3260	89 46 345	2		2 O-ring	O-ring	S 3	
3280	89 46 352	2		2 O-ring	O-ring	S 3	
3300							
3320							
3340	89 43 342	1		1 Kit, pipe short	Sats, rör kort	4 R H D ALT-1	
3360	89 85 376	2		2 O-ring	O-ring	S 3	
3380	89 39 159	1		1 Pipe short	Rör kort	S 1)	
3400							
3420	89 47 103	1		1 Kit, pipe short	Sats, rör kort	4 R H D ALT-2	
3440	89 46 345	2		2 O-ring	O-ring	S 3	
3460	89 46 352	2		2 O-ring	O-ring	S 3	
3480							
3500							
3505	89 89 640	X		X Gasket set, steering pump	Puckningssets,hydraul-pump	4	
3506							
3507							
3520	78 72 983	X		X Retrofit kit, power steering gear	Ombyggnadsats, servostyrväxel	4	
3540							
3560	78 73 037	X		X Retrofit kit, steering gear RHD	Ombyggnadsats, servostyrväxel RHD	4	
3580							

1. Not separate spare part

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

6 GROUP INDEX

Front wheel suspension,	3-B04
steering device	
Steering device	3-B06

7

Fjädringssystem, Hjul
Suspension, Wheels
Federung, Räder
Suspension, Roues
Suspensión, Ruedas

SAAB
genuine parts
originalt reservdelar

3-C02

SAAB 900
M79-80

MASTER INDEX

Suspension system, wheels Fjädringssystem, hjul

Date
Datum
1987-10

Group
Grupp
7

Page
Sida
1

TABLE OF CONTENTS

Front suspension, wheels	7:3	3-C04
Rear suspension	7:7	3-C08
Rear axle	7:9	3-C10

INNEHÅLLSFÖRTECKNING

Främre fjädring, hjul	7:3	3-C04
Bakre fjädring	7:7	3-C08
Bakaxel	7:9	3-C10

INHALTSVERZEICHNIS

Vorderradfederung, Räder	7:3	3-C04
Hintere Federung	7:7	3-C08
Hinterrachse	7:9	3-C10

TABLE DES MATIERES

Suspension AV, roues	7:3	3-C04
Suspension AR	7:7	3-C08
Essieu AR	7:9	3-C10

SUMARIO

Suspensión Del, ruedas	7:3	3-C04
Suspensión Tras	7:7	3-C08
Eje Tras	7:9	3-C10

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

7 GROUP INDEX

Front suspension, wheels	3-C04
Rear suspension	3-C08
Rear axle	3-C10

0100

Front suspension, wheels

Främre fjädring, hjul

Date

Illustration

Group

Page

1987-10

R4682

7

3

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR	Notes Anmärkning
		900	US				
0020	1	89 45 776	2	2 Spring	Fjäder	5	(8941486)
0040	2	89 13 404	2	2 Kit, shock absorber	Sats, stötdämpare	1	- 1979 (8993008)
0050	2	89 33 123	2	2 Kit, shock absorber	Sats, stötdämpare	1	1980-
0060	2	89 93 016	2	2 Kit, shock absorber	Sats, stötdämpare	1	ALT TO 89 93 008
0080	2	89 39 381	2	2 Kit, shock absorber	Sats, stötdämpare	7	EMS, TURBO 3CK
0082				(gasfilled)	(gasfyllda)		
0084	2	89 42 989	2	2 Kit, shock absorber	Sats, stötdämpare	1	1980- GLE
0086				(gasfilled)	(gasfyllda)		
0088	2	89 42 948	2	2 Kit, shock absorber	Sats, stötdämpare	1	1980- TURBO 5 CK
0090				(gasfilled)	(gasfyllda)		(8942948)
0100	3	89 32 840	2	2 Bushing	Bussning	4	
0120	4	89 20 019	2	2 Washer	Bricka	5	
0140	5	79 15 705	2	2 Washer	Bricka	5	
0160	6	79 04 089	2	2 Nut	Mutter	5	
0180	7	89 39 423	2	2 Bushing, lower	Bussning, nedre	5	
0200	8	89 39 415	2	2 Bushing, upper	Bussning, övre	5	
0220	9	89 39 449	2	2 Washer	Bricka	5	
0240	10	83 15 558	2	4 Nut	Mutter	5	
0260	11	89 19 847	2	2 Rubber buffer, upper	Gummibuffert, övre	5	
0280	12	89 19 862	2	2 Support ring	Stödtring	6	
0300	12	89 21 106	2	2 Support ring	Stödtring	6	3)
0320	13	89 33 889	2	2 Spacer ring	Distansring	6	
0340	14	89 19 870	2	2 Spring support	Fjäderstöd	6	
0361				undre			
0380	15	89 31 974	2	2 Bushing	Bussning	3	
0386	16	79 33 743	2	2 Screw	Skruv	3	
0400	17	79 40 463	2	2 Nut	Mutter	4	
0420	18	89 54 820	5	5 Wheel	Hjul	4	
0440	19	89 36 472	4	4 Wheel	Hjul	4	EMS (19) 223 18
0460	20	89 36 262	5	5 Wheel	Hjul	4	TURBO (19) 22970
0480	21	89 39 662	4	4 Wheel	Hjul	4	TURBO (19) 223 43
0490	21A	89 42 815	1	1 Spare wheel assy	Reservhjul kpl	5	2) NOT AU, GB
0492	21B	89 42 096	1	1 Spare tyre	Reservdäck	6	2) (80) 110171 NOT AU, GB
0494	21C	89 42 233	1	1 Label	Etikett	5	2) NOT AU, GB
0500	22	89 30 323	5	5 Valve	Ventil	4	(60) 900 084
0520	23	89 39 555	4	4 Valve	Ventil	4	TURBO
0540	24	89 39 555	5	5 Valve	Ventil	4	TURBO (80) 900043
0560	25	89 39 944	4	4 Emblem cap	Emblemkapsel	2	TURBO (40) 105119101
0580	26	89 09 145	16	16 Nut	Mutter	2	
0600	27	89 19 856	16	16 Nut	Mutter	2	EMS (40) 105118103
0620	28	89 39 787	16	16 Nut	Mutter	2	TURBO (19) 229 88
0630	29	89 35 819	4	4 Hub cap	Hjulkapsel	2	
0640	29A	89 35 835	4	4 Hub cap	Hjulkapsel	2	GLE
0650	29B	89 43 672	2	2 Clip	Clips	2	
0660	30	89 43 029	16	16 Clip	Clips	2	(8935827)
0680	31	89 44 415	4	4 Hub cap	Hjulkapsel	2	TURBO (40) 105120000
0700	32	89 38 458	4	4 Tensioner ring	Spännring	2	TURBO
0720	33	89 41 452	X	4 Trim, wheel	Dekorring, hjul	3	US
0730	33A	89 43 432	X	16 Clip	Clips	2	
0740	34	89 38 631	4	4 Emblem	Emblem	2	EMS, GLE (40) 105118509
0760	35	89 38 056	4	4 Tensioner ring	Spännring	2	(19) 22 335
0780	36	89 40 143	X	X Counter weight 10 g	Balanseringsvikt 10 g	2	(45) 3009768
0786	36	89 48 150	X	X Counter weight 20 g	Balanseringsvikt 20 g	2	(45) 3006384
0800	36	89 17 395	X	X Counter weight 30 g	Balanseringsvikt 30 g	2	(45) 3006382
0820	36	89 17 403	X	X Counter weight 40 g	Balanseringsvikt 40 g	2	(45) 3006418
0825	36	89 48 176	X	X Counter weight 50 g	Balanseringsvikt 50 g	2	(45) 3006426
0840	36	89 17 411	X	X Counter weight 60 g	Balanseringsvikt 60 g	2	(45) 3006434
0850	37	89 47 788	X	X Counter weight 10 g	Balanseringsvikt 10 g	2	(45) 3021052
0860	37	89 47 806	X	X Counter weight 20 g	Balanseringsvikt 20 g	2	(45) 3021076

R 4682-900

- 2 Ch 90791024933... 90792002096...
- 3 All cars with A and 5D with M.
- 4 For steel wheel
- 5 For aluminium wheel

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

7 GROUP INDEX

Front suspension, wheels	3-C04
Rear suspension	3-C08
Rear axle	3-C10

0100

Front suspension, wheels

Främre fjädring, hjul

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1987-10

R4682

7

5

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR /L	Notes Anmärkning
		900		US			
0890	37 89 47 814	X		X Counter weight 30 g	Balanseringsvikt 30 g	2 5	(45)3021094
0900	37 89 47 822	X		X Counter weight 40 g	Balanseringsvikt 40 g	2 5	(45)3021110
0910	37 89 47 830	X		X Counter weight 50 g	Balanseringsvikt 50 g	2 5	(45)3021138
0920	37 89 47 848	X		X Counter weight 60 g	Balanseringsvikt 60 g	2 5	(45)3021151

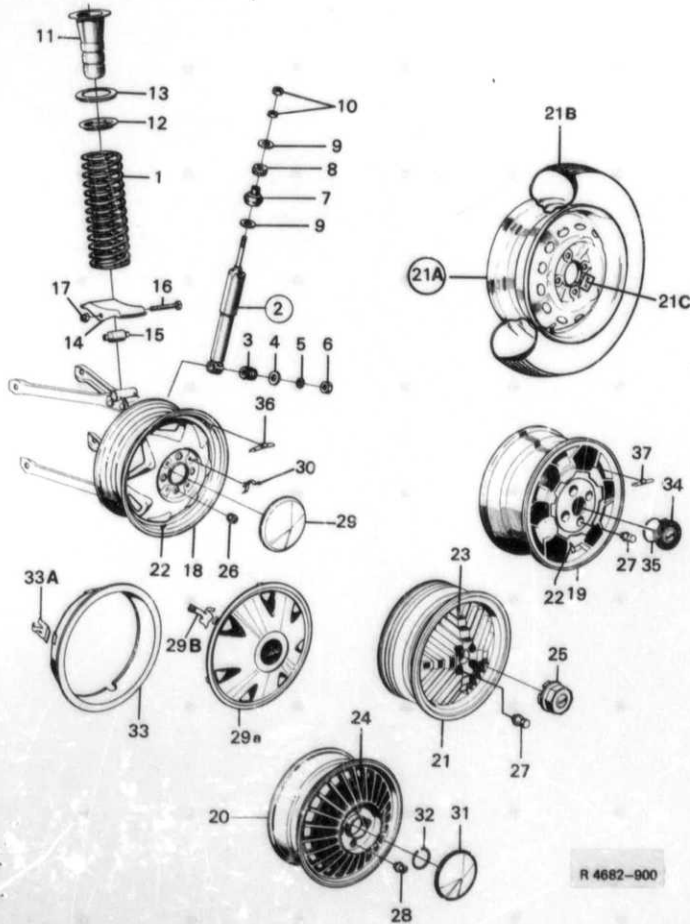

R 4682-900

5. For aluminium wheel

7 GROUP INDEX

Front suspension, wheels	3-C04
Rear suspension	3-C08
Rear axle	3-C10

0 General	1-A02
1 Tools	1-H02
2 Engine	2-A02
3 Electrical system, Instruments	2-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly, Steering	3-B02
7 Suspension, Wheels	3-C02
8 Body	3-D02
9 Accessories, Labels	3-L02
10 Numerical register	4-A02

0150

Rear suspension

Bakre fjädring

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R4091

7


7

Fig. Pos.	Part No Art nr	Quantity/Amtal		Description	Benämning	K/S SR	Notes Anmärkning
		900	US				
0020	1 89 41 734	2		2 Spring	Fjäder	5	
0030	1 89 41 502	2		2 Spring	Fjäder	5	EMS, TURBO
0040	1A 89 93 024	2		2 Kit, shock absorber	Sats, stötdämpare	1	-1979
0050	1A 89 93 412	2		2 Kit, shock absorber	Sats, stötdämpare	1	1980-(8993131)
0060	1A 89 93 032	2		2 Kit, shock absorber	Sats, stötdämpare	1	ALT TO 89 93 024
0080	1A 89 93 448	2		2 Kit, shock absorber (gasfilled)	Sats, stötdämpare (gasfyllda)	1	EMS, TURBO, CK, GLE (8939399, 8942963, 8943003)
0082							
0083							
0100	2 89 39 464	2		2 Bearing bushing	Lagerbussning	4	
0120	3 89 38 486	2		2 Screw	Skruv	5	
0140	4 80 73 546	2		2 Nut	Mutter	5	
0160	5 89 39 423	2		2 Bushing, lower	Bussning, nedre	5	
0180	6 89 39 415	2		2 Bushing, upper	Bussning, övre	5	
0200	7 89 39 449	4		4 Washer	Bricka	5	
0220	8 83 15 558	4		4 Nut	Mutter	5	
0240	9 89 38 406	2		2 Screw	Skruv	5	PART OF 89 39 399
0260	10 89 39 431	2		2 Washer, lower	Bricka, nedre	5	PART OF 89 39 399
0280	11 89 39 449	2		2 Washer, upper	Bricka, övre	5	PART OF 89 39 399
0320	13 89 33 897	2		2 Spacer ring	Distansring	4	
0340	14 89 22 445	2		2 Rubber buffer	Gummibuffert	5	
0360	15 79 10 599	2		2 Washer	Bricka	5	
0380	16 80 98 030	2		2 Screw	Skruv	5	
0400	17 89 47 210	2		2 Spring link	Fjäderlänk	4	(6936304)
0420	18 80 84 410	2		2 Screw	Skruv	5	
0440	19 80 73 546	2		2 Lock nut	Låsmutter	3	
0460	20 89 35 314	2		2 Bearing, front	Lager, främre	5	
0480	21 89 35 298	2		2 Bushing	Bussning	3	
0500	22 92 32 935	2		2 Reinforcement	Förstärkning	6	(8239782)
0520	23 79 85 429	4		4 Nut	Mutter	3	
0540	24 80 84 386	2		2 Screw	Skruv	5	
0560	25 80 73 546	2		2 Nut	Mutter	3	
0580	26 89 35 330	4		4 Spring support	Fjäderstöd	4	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

7 GROUP INDEX


Front suspension, wheels	3-C04
Rear suspension	3-C08
Rear axle	3-C10

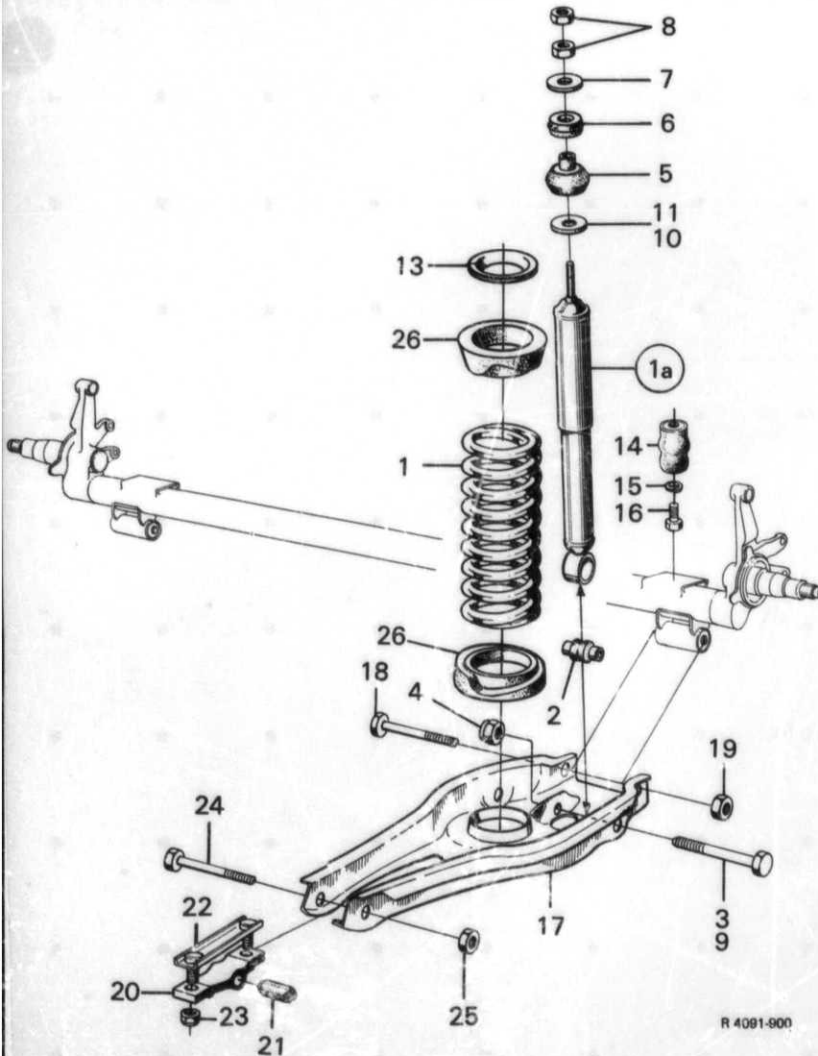

R 4091-900

0200

Rear axle		Bakaxel			Date Datum	Illustration Bild nr	Group Grupp	Page Sida
					1987-10	R9314	7	9
Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S S/R /L	Notes Anmärkning
		900		US				
1	89 34 499	1			1 Rear axle	Bakaxel	4	
2	89 28 046	2			2 Screw	Skruv	5	
3	89 35 306	2			2 Bushing	Bussning	3	
4	89 32 786	2			2 Link	Länk	4	
5	89 32 741	2			2 Bushing	Bussning	3	
6	89 08 675	2			2 Bushing	Bussning	4	
7	89 09 632	2			2 Washer	Bricka	5	
8	89 33 293	2			2 Screw	Skruv	5	
9	79 40 455	2			2 Nut	Mutter	3	
10	89 32 071	1			1 Cross bar	Tvåståg	5	
11	89 32 014	1			1 Bushing	Bussning	4	
12	89 30 307	1			1 Bushing	Bussning	4	
13	89 42 005	1			1 Screw	Skruv	5	
13A	89 30 299	1			1 Screw	Skruv	5	
14	79 40 455	2			2 Nut	Mutter	3	
15	79 63 418	2			2 Nut	Mutter	3	
16	89 34 705	2			2 Washer	Bricka	5	
17	89 34 697	2			2 Lock nut	Låsmutter	3	

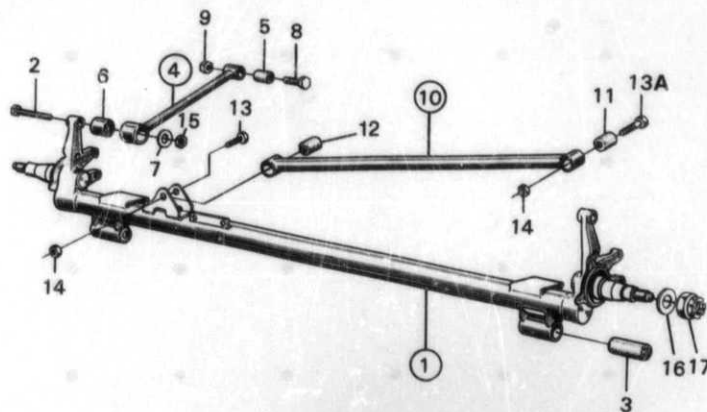


R 9314-900

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

7 GROUP INDEX

Front suspension, wheels	3-C04
Rear suspension	3-C06
Rear axle	3-C10

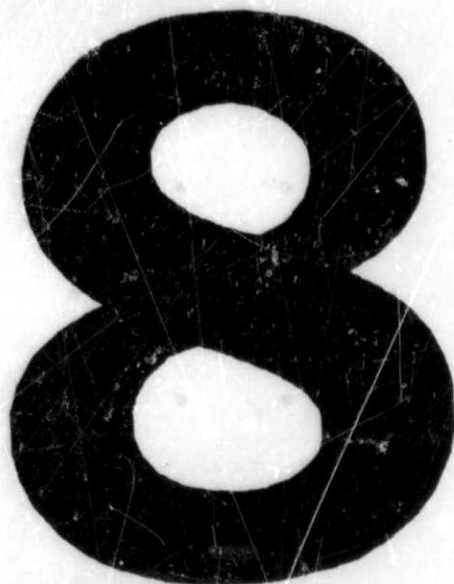

Kaross
Body
Karosserie
Carrosserie
Carrocería

SAAB
genuine parts
original manufacturer

3-D02

SAAB 900
M79-80

0050

Car body	Kaross	Date Datum	Group Grupp	Page Sida
		1987-10	8	1
TABLE OF CONTENTS				
Main body				
Floor		8: 9	3-D10	
Roof		8: 13	3-D14	
Sun roof		8: 15	3-D16	
Dash panel and front wheel housings		8: 19	3-D20	
Rear wheel housings		8: 21	3-D22	
Valances, model 3Ck		8: 23	3-D24	
Valances, model 5Ck		8: 25	3-E02	
Door- and windshield pillars		8: 27	3-E04	
Instrument panel				
Instrument panel, panel upper, instrument plate		8: 29	3-E06	
Instrument panel, panel lower, panel outlet		8: 31	3-E08	
Cover, gear shift lever		8: 35	3-E12	
Hood, front, fenders				
Hood, hood hinges and hood lock		8: 37	3-E14	
Front member, grille		8: 39	3-E16	
Front fenders		8: 41	3-E18	
Doors, trunk lid				
Doors incl hinges, lock, etc, 3Ck		8: 43	3-E20	
Doors incl hinges, lock, etc, 5Ck		8: 47	3-E24	
Trunk door, hinges, lock		8: 55	3-F08	
Outside handle, lock cylinder		8: 59	3-F12	
Lock- and lock cylinder sets		8: 61	3-F14	
External details, glass, sealings				
Emblem		8: 63	3-F16	
Mouldings		8: 65	3-F18	
Spoiler		8: 69	3-F22	
Mirror		8: 71	3-F24	
Glass and sealings, 3Ck		8: 75	3-G04	
Glass and sealings, 5Ck		8: 81	3-G10	
Outer sealings, mud guards, 3Ck		8: 85	3-G14	
Outer sealings, mud guards, 5Ck		8: 89	3-G18	
Upholstery, interior equipment and touch-up paint				
Insulation		8: 95	3-G24	
Upholstery, 3Ck		8: 99	3-H04	
Upholstery, 5Ck		8: 109	3-H14	
Wheel housing lining carpets etc		8: 117	3-H22	
Headlining, pillar lining, etc		8: 121	3-I02	
Front seats Part 1		8: 123	3-I04	
Front seats Part 2		8: 127	3-I08	
Front seats Part 3		8: 129	3-I10	
Rear seat, 3Ck		8: 131	3-I12	
Rear seat, 5Ck		8: 135	3-I16	
Equipment luggage compartment		8: 139	3-I20	
Scuff plate protector		8: 141	3-I22	
Other interior equipment		8: 143	3-I24	
Shelf		8: 145	3-J02	
Automatic safety belt, front		8: 147	3-J04	
Automatic safety belt, rear		8: 151	3-J08	
Touch-up paint		8: 155	3-J12	
Touch-up paint, two-components		8: 159	3-J16	
Trim colour code sign		8: 163	3-J20	
Colour code sign		8: 165	3-J22	
Heating and ventilation system				
Heater core, water valve etc		8: 167	3-J24	
Fan unit, air filter etc		8: 169	3-K02	
Draft channels, control etc Part 1		8: 171	3-K04	
Draft channels, control etc Part 2		8: 173	3-K06	
Vacuum system		8: 175	3-K08	
Air conditioning (AC), UP to and incl ch. - 90801013494.		8: 177	3-K10	
Air conditioning (AC), AS from ch. 90801013495-		8: 181	3-K14	
Bumpers				
Bumper, front		8: 185	3-K18	
Bumper, rear		8: 187	3-K20	

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details,	
glass, sealings	3-F16
Upholstery, interior	
equipment and	
touch-up paint	3-G24
Heating and	
ventilation system	3-J24
Bumpers	3-K18

Page Sida	Group Grupp	Date Datum	Car body Kaross
2	8	1987-10	
INNEHÅLLSFÖRTECKNING			
Karosseristomme			
Golv	8:9	3-D10	
Tak	8:13	3-D14	
Soltak	8:15	3-D16	
Torpedplåt och hjulhus, främre	8:19	3-D20	
Hjulhus, bakre	8:21	3-D22	
Sidoplatår, modell 3CK	8:23	3-D24	
Sidoplatår, modell 5CK	8:25	3-E02	
Dörr och vindrutorstolpar	8:27	3-E04	
Instrumentpanel			
Instrumentpanel, panel övre, instrumentplatta	8:29	3-E06	
Instrumentpanel, underdel, panelutsläpp	8:31	3-E08	
Kåpa, växelspak	8:35	3-E12	
Motorhuv, front, skärmar			
Motorhuv, huvgångjärn och huvlås	8:37	3-E14	
Frontbalk, grill	8:39	3-E16	
Framskärmar	8:41	3-E18	
Dörrar, bagagerumslucka			
Dörrar inkl gångjärn, lås, etc. 3CK	8:43	3-E20	
Dörrar inkl gångjärn, lås, etc. 5CK	8:47	3-E24	
Bagagerumsdörr, gångjärn, lås	8:55	3-F08	
Yttre handtag, låscylinder	8:59	3-F12	
Lås- och låscylindersatser	8:61	3-F14	
Utvändig detaljer, glas, tätningsslister			
Emblem	8:63	3-F16	
Dekorlister	8:65	3-F18	
Spoiler	8:69	3-F22	
Backspeglar	8:71	3-F24	
Glas och tätningsslister, 3CK	8:75	3-G04	
Glas och tätningsslister, stänkskydd, 3CK	8:81	3-G10	
Övriga tätningsslister, stänkskydd, 5CK	8:85	3-G14	
Klädsel, invändig utrustning och bättringsfärg			
Isolering	8:85	3-G24	
Klädsel, 3CK	8:99	3-H04	
Klädsel, 5CK	8:109	3-H14	
Hjulhusklädsel, mattor, etc	8:117	3-H22	
Takklädsel, stolklädsel, etc	8:121	3-I02	
Stolar Del 1	8:123	3-I04	
Stolar Del 2	8:127	3-I08	
Stolar Del 3	8:129	3-I10	
Baksäte, 3CK	8:131	3-I12	
Baksäte, 5CK	8:135	3-I16	
Utrustning bagagerum	8:139	3-I20	
Tröskelskydd	8:141	3-I24	
Övrig invändig utrustning	8:143	3-I24	
Hattnylla	8:145	3-J02	
Automatbälte, främre	8:147	3-J04	
Automatbälte, bakre	8:151	3-J08	
Bättringsfärg	8:155	3-J12	
Bättringsfärg, tvåkomponent	8:159	3-J16	
Klädselkodskylt	8:163	3-J20	
Färgkodskylt	8:165	3-J22	
Värme- och ventilationsystem			
Värmeväxlare, värmebränna etc	8:167	3-J24	
Fläktenhet, luftfilter etc	8:169	3-K02	
Fördelningskanaler, reglage etc del 1	8:171	3-K04	
Fördelningskanaler, reglage etc del 2	8:173	3-K06	
Vacuumsystem	8:175	3-K08	
Luftkonditionering (AC), t.o.m. ch. -90801013494	8:177	3-K10	
Luftkonditionering (AC), fr.o.m. ch. 90801013495	8:181	3-K14	
Stötfångare			
Stötfångare, främre	8:185	3-K18	
Stötfångare, bakre	8:187	3-K20	

Page Sida	Group Grupp	Date Datum	Car body Kaross
2	8	1987-10	3
INHALTSVERZEICHNIS			
Karosseriekörper			
Bodenstück	8:9	3-D10	
Dach	8:13	3-D14	
Schiebedach	8:15	3-D16	
Stirnwand und Radkästen, vorn	8:19	3-D20	
Radkästen, hinten	8:21	3-D22	
Seitenbleche, Modell 3CK	8:23	3-D24	
Seitenbleche, Modell 5CH	8:25	3-E02	
Tür- und Windschutzscheibepfosten	8:27	3-E04	
Armaturen Brett			
Armaturen Brett, Brett obere, armaturenplatte	8:29	3-E06	
Armaturen Brett, unterteil, panelauslass	8:31	3-E08	
Abdeckung, schalthebel	8:35	3-E12	
Motorhaube, Frontblech, Kotflügel			
Motorhaube, Haubenscharniere und Haubenverschluss	8:37	3-E14	
Frontbalken, Frontblech	8:39	3-E16	
Vordere Kotflügel	8:41	3-E18	
Türen, Kofferraumdeckel			
Türen, einschl Scharnieren, Schlösser, etc. 3CK	8:43	3-E20	
Türen, einschl Scharnieren, Schlösser, etc. 5CK	8:47	3-E24	
Kofferraumtür, Scharnieren, Schlösser	8:55	3-F08	
Aussengriff, Schlosszylindersätze	8:59	3-F12	
Schloss- und Schlosszylindersätze	8:61	3-F14	
Embleme	8:63	3-F16	
Zierstreifen usw	8:65	3-F18	
Spoiler	8:69	3-F22	
Rückblicks Spiegel	8:71	3-F24	
Auswendige Teile	8:75	3-G04	
Fenster, Dichtungseisen, 3CK	8:81	3-G10	
Fenster, Dichtungseisen, 5CK	8:85	3-G14	
Übrige Dichtungseisen, 3CK	8:89	3-G18	
Innenverkleidung, Innenausstattung, und Ausbesserungsfarbe			
Isolierung	8:95	3-G24	
Innenverkleidung, 3CK	8:99	3-H04	
Innenverkleidung, 5CK	8:109	3-H14	
Radkastenverkleidung, Matten, usw	8:117	3-H22	
Himmel- und Türpfostenverkleidung, usw	8:121	3-I02	
Vordersitze Teil 1	8:123	3-I04	
Vordersitze Teil 2	8:127	3-I08	
Vordersitze Teil 3	8:129	3-I10	
Rücksitz, 3CK	8:131	3-I12	
Rücksitz, 5CK	8:135	3-I16	
Ausrüstung Gepäckraum	8:139	3-I20	
Türschwellenschutz	8:141	3-I24	
Übrige Innenausstattung	8:143	3-I24	
Hutablage	8:145	3-J02	
Automatischer Gurt, vordere	8:147	3-J04	
Automatischer Gurt, hintere	8:151	3-J08	
Ausbesserungsfarbe	8:155	3-J12	
Ausbesserungsfarbe, Zweikomponente	8:159	3-J16	
Polsternummerschild	8:163	3-J20	
Lacknummerschild	8:165	3-J22	
Heizungs- und Frischluftsystem			
Heizelement, Heizungsventil usw	8:167	3-J24	
Lüfter, Luftfilter usw	8:169	3-K02	
Verteilungskanäle, Regulierung usw Teil 1	8:171	3-K04	
Verteilungskanäle, Regulierung usw Teil 2	8:173	3-K06	
Vakuum system	8:175	3-K08	
Klimaanlage (AC), bis ch.Nr -90801013494	8:177	3-K10	
Klimaanlage (AC), ab ch.Nr 90801013495	8:181	3-K14	
Stoßstange			
Stoßstange, vordere	8:185	3-K18	
Stoßstange, hintere	8:187	3-K20	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02
8 GROUP INDEX		
Main body	3-D10	
Instrument panel	3-E06	
Hood, front, fenders	3-E14	
Doors, trunk lid	3-E20	
External details, glass, sealings	3-F16	
Upholstery, interior equipment and touch-up paint	3-G24	
Heating and ventilation system	3-J24	
Bumpers	3-K18	

0050

Page Sida	Group Grupp	Date Datum	Car body	Kaross
4	8	1987-10		

TABLE DES MATIERES

Corps de carrosserie

Plancher	8: 9	3-D10
Pauillon	8: 13	3-D14
Toit ouvrant	8: 15	3-D16
Tablier et rotondes de roue, AV	8: 19	3-D20
Rotondes de roue, AR	8: 21	3-D22
Tôles latérales, modèle, 3Ck	8: 23	3-D24
Tôles latérales, modèle, 5Ck	8: 25	3-E02
Montants de porte et de parebrises	8: 27	3-E04
Panneau d'instruments		
Panneau d'instruments, panneau supérieur, plaque d'instruments	8: 29	3-E06
Panneau d'instruments, partie inférieure, buse de panneau	8: 31	3-E08
Cartier de levier de vitesses	8: 35	3-E12
Capot, tôle frontale, ailes		
Capot, charnière de capot et verrouillage de capot	8: 37	3-E14
Longeron AV, grille	8: 39	3-E16
Ailes AV	8: 41	3-E18

Portières, couvercle de coffre

Portières avec charnières, serrures, etc, 3Ck	8: 43	3-E20
Portières avec charnières, serrures, etc, 5Ck	8: 47	3-E24
Hailon, charnières, serrure	8: 55	3-F08
Poignées extérieures, barillet de serrure	8: 59	3-F12
Serrures et barillet de serrure	8: 61	3-F14

Éléments extérieurs, glaces, joints

Emblemes	8: 63	3-F16
Enjoliveurs	8: 65	3-F18
Spoilers	8: 69	3-F22
Éléments extérieurs	8: 71	3-F24
Retroviseurs	8: 71	3-F24
Glaces et joints, 3Ck	8: 75	3-G04
Glaces et joints, 5Ck	8: 81	3-G10
Autres joints, bavettes, 3Ck	8: 85	3-G14
Autres joints, bavettes, 5Ck	8: 89	3-G18

Garnitures, équipement intérieur et peinture de retouche

Isolément	8: 95	3-G24
Garnitures intérieures, 3Ck	8: 99	3-H04
Garnitures intérieures, 5Ck	8: 109	3-H14
Garnitures de rotondes de roue, tapis, etc	8: 117	3-H22
Garnitures du toit, des montants, etc	8: 121	3-I02
Sièges AV 1ère partie	8: 123	3-I04
Sièges AV 2ème partie	8: 127	3-I08
Sièges AV 3ème partie	8: 129	3-I10
Banquette AR, modèle, 3Ck	8: 131	3-I12
Banquette AR, modèle, 5Ck	8: 135	3-I16
Compartiment pour équipement	8: 139	3-I20
Protection de seuil	8: 141	3-I22
Autre équipement intérieur	8: 143	3-I24
Tablette ar	8: 145	3-J02
Ceinture automatique, AV	8: 147	3-J04
Ceinture automatique, AR	8: 151	3-J08
Peinture de retouche	8: 155	3-J12
Peinture de retouche, deux composants	8: 159	3-J16
Code couleur, garnitures	8: 163	3-J20
Code couleur, carrosserie	8: 165	3-J22

Système de chauffage et d'élévation

Echangeur de chaleur, robinet de chauffage etc	8: 167	3-J24
Ventilateur de la soufflerie, filtre à air etc	8: 169	3-K02
Canaux distributeurs, commandes etc 1ère partie	8: 171	3-K04
Canaux distributeurs, commandes etc 2ème partie	8: 173	3-K06
Système à vide	8: 175	3-K08
Climatisation (AC), JUSQU'au No de ch. -90801013494	8: 177	3-K10
Climatisation (AC), À partir du no de ch 90801013495-	8: 181	3-K14

Pare-chocs

Pare-chocs, AV	8: 185	3-K18
----------------	--------	-------

0050

Car body	Kaross	Date Datum	Group Grupp	Page Sida
		1987-10	8	5

Pare-chocs, AR 8: 187 3-K20

SUMARIO

Cuerpo de la carrocería

Piso	8: 9	3-D10
Techo	8: 13	3-D14
Techo corridizo	8: 15	3-D16
Salpicadero y huecos de rueda, Del	8: 19	3-D20
Huecos de rueda Tras	8: 21	3-D22
Placas laterales, modelo, 3Ck	8: 23	3-D24
Placas laterales, modelo, 5Ck	8: 25	3-E02
Montantes de puertas y de parabrisas	8: 27	3-E04

Tablero de instrumentos

Tablero de instrumentos, panel superior, place de instrumentos	8: 29	3-E06
Tablero de instrumentos, parte inferior, b-ouille de panel	8: 31	3-E08
Tapa de palanca de cambios	8: 35	3-E12

Capot, plancha frontal, guardabarros

Capot, bisagras de capot y cerradura de capot	8: 37	3-E14
Viga del, parilla	8: 39	3-E16
Guardabarros del	8: 41	3-E18

Puertas, tapa de cofre

Puertas con bisagras, cerraduras, etc, 3Ck	8: 43	3-E20
Puertas con bisagras, cerraduras, etc, 5Ck	8: 47	3-E24
Puerta trasera, bisagras, cerradura	8: 55	3-F08
Empuñaduras exteriores, cilindros de cerradura	8: 59	3-F12
Cerraduras y cilindros de cerradura	8: 61	3-F14

Detalles exteriores, vidrios, juntas

Emblemas	8: 63	3-F16
Embellecedores	8: 65	3-F18
Espoliers	8: 69	3-F22
Espes retrovisores	8: 71	3-F24
Vidrios y juntas, 3Ck	8: 75	3-G04
Vidrios y juntas, 5Ck	8: 81	3-G10
Otras juntas, faldones, 3Ck	8: 85	3-G14
Otras juntas, faldones, 5Ck	8: 89	3-G18

Tapicería, equipo interior y pintura de retoque

Aislamiento	8: 95	3-G24
Tapicería, 3Ck	8: 99	3-H04
Tapicería, 5Ck	8: 109	3-H14
Tapicería, el de huecos de rueda, alfombras, etc	8: 117	3-H22
Tapicería del techo, de los montantes, etc	8: 121	3-I02
Asientos Del 1a parte	8: 123	3-I04
Asientos Del 2a parte	8: 127	3-I08
Asientos Del 3a parte	8: 129	3-I10
Asientos Tras, 3Ck	8: 131	3-I12
Asientos Tras, 5Ck	8: 135	3-I16
Compartimento para equipo	8: 139	3-I20
Protección de umbral	8: 141	3-I22
Otro equipo interior	8: 143	3-I24
Tablilla trasera	8: 145	3-J02
Cinturón automático, Del	8: 147	3-J04
Cinturón automático, Tras	8: 151	3-J08
Pintura de retoque	8: 155	3-J12
Pintura de retoque, dos componentes	8: 159	3-J16
Placa de código de tapicería	8: 163	3-J20
Placa de código de color	8: 165	3-J22

Sistema de calefacción y ventilación

Cambiador de calor, válvula de agua etc	8: 167	3-J24
Ventilador de la calefacción, filtro de aire	8: 169	3-K02
Canales de distribución, del piso etc 1a parte	8: 171	3-K04
Canales de distribución, del piso etc 2a parte	8: 173	3-K06
Sistema de vacío	8: 175	3-K08
Aire acondicionado (AC), HASTA el núm. de ch. -90801013494.	8: 177	3-K10
Aire acondicionado (AC), DESTA el núm. de ch. 90801013495-	8: 181	3-K14

Parachoques

Parachoques, Del	8: 185	3-K18
------------------	--------	-------

0	General	1-A02
1	Tools	1-I02
2	Engines	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

B GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

MASTER INDEX

0	General	1-A02
1	To-Is	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F18
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

0050

Page Side	Group Grupp	Date Datum	Car body	Kaross
6	8	1987-10		

5300

Parachoques, Tras 8:187 3-K20

0100

Main body
Floor

Karosseristomme
Golv

Date
Datum
1987-10


Illustration
Bild nr
R9367

Group
Grupp
8

Page
Sida
9

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR	Notes Anmärkning
		900	US				
0020	82 06 454	1		1 Body	Karoskrov	6	12) 3&CK
0020	82 06 462	1		1 Body	Karoskrov	6	12) 5&CK
0040	82 74 490	1		1 Floor, front LH	Golv, främre V	4	
0050	82 74 508	1		1 Floor, front RH	Golv, främre H	4	
0060	82 74 383	1		1 Floor, front center	Golv, främre mittre	6	
0070	82 74 391	1		1 Engine member assy	Motorbalk kpl	4	
0080	82 77 204	1		1 Engine support, front	Motorfäste, främre	4	
0090	82 74 599	1		1 Scuff plate, inner	Tröskel, innerdel V	6	
0110	82 74 607	1		1 Scuff plate, inner	Tröskel, innerdel H	6	
0120	82 74 615	1		1 Scuff plate, outer	Tröskel, ytterdel V	6	3CK
0140	82 74 613	1		1 Scuff plate, outer	Tröskel, ytterdel V	6	5CK
0150	82 74 623	1		1 Scuff plate, outer	Tröskel, ytterdel H	6	3CK
0160	82 74 623	1		1 Scuff plate, outer	Tröskel, ytterdel H	6	5CK
0180	82 74 821	1		1 Reinforcement member	Förstärkningsbalk V	6	
0200	82 74 771	1		1 Reinforcement member	Förstärkningsbalk H	6	
0210	82 74 789	1		1 Reinforcement member	Förstärkningsbalk H	6	
0220	82 77 220	2		2 Jack support, front	Domkraftfäste, främre	6	
0230	82 04 836	1		1 Jack support rear	Domkraftfäste, bakre	6	
0240	82 04 844	1		1 Jack support, rear	Domkraftfäste, bakre	6	
0250	82 07 304	1		1 Floor, rear, assy	Bakre golv kpl	6	-1979
0260	82 07 304	1		1 Floor, rear, assy	Bakre golv kpl	6	1980-
0270	82 02 485	1		1 Jack support	Domkraftstöd	6	
0280	82 01 383	1		1 Bracket, cross bar	Fäste, tvärbalk	6	(82 09 882)
0290	82 06 411	2		2 Hook	Upphållningskrok	6	-1979
0300	82 06 387	1		1 Hook	Upphållningskrok	6	1980-
0310	82 25 872	2		2 Bracket, fuel tank	Fäste, bränsletank	6	
0320	92 92 640	1		1 Cross member	Tvärbalk	6	(8236721, 8289050)
0330	82 74 714	1		1 Panel, rear assy	Plåt, bakre kpl	5	
0340	82 76 727	1		1 Plate, rear	Plåt, bakre	5	(82 03 384)
0350	76 01 651	1		1 Bracket LH	Fäste, V	5	(82 02 017)
0360	76 01 644	1		1 Bracket RH	Fäste, H	5	(82 50 995)
0370	76 01 495	1		1 Scuff plate, rear	Tröskel, bakre	5	(82 50 417)
0380	76 01 461	1		1 Spare wheel well	Reservhjulsbälja	6	(82 50 383)
0390	76 01 479	1		1 Joint plate	Skarvplåt	5	(82 50 391)
0400	76 01 701	1		1 Support plate LH	Stödplåt V	6	(82 52 918)
0410	76 01 719	1		1 Support plate RH	Stödplåt H	6	(82 52 262)
0420	76 01 594	1		1 Support plate LH	Stödplåt V	6	(82 50 839)
0430	76 01 735	2		2 Bracket	Fäste	6	(82 53 714)
0440	84 59 513	3		3 Rubber plug	Gummiplugg	5	
0450	82 89 587	1		1 Seat member, front	Stolbalk, främre	6	(8274658)
0460	82 89 605	1		1 Seat member, front	Stolbalk, främre	6	(8274722)
0470	82 21 855	1		1 Bracket, center	Konsol, mittre	6	
0480	82 21 862	1		1 Bracket, center RHD	Konsol, mittre RHD	6	
0490	82 05 338	1		1 Bracket, outer LH	Konsol, yttre V	6	
0500	76 02 501	1		1 Bracket, outer LH	Konsol, yttre V	6	(8221871)
0510	76 02 519	1		1 Bracket, outer RH	Konsol, yttre H	6	(8221889)
0520	82 05 346	1		1 Bracket, outer RH	Konsol, yttre H	6	
0530	82 79 226	1		1 Bracket LH	Fäste V	6	
0540	82 78 178	1		1 Bracket RH	Fäste H	6	
0550	82 79 457	1		1 Support	Stag	6	

12. Only latest design. State car colour code

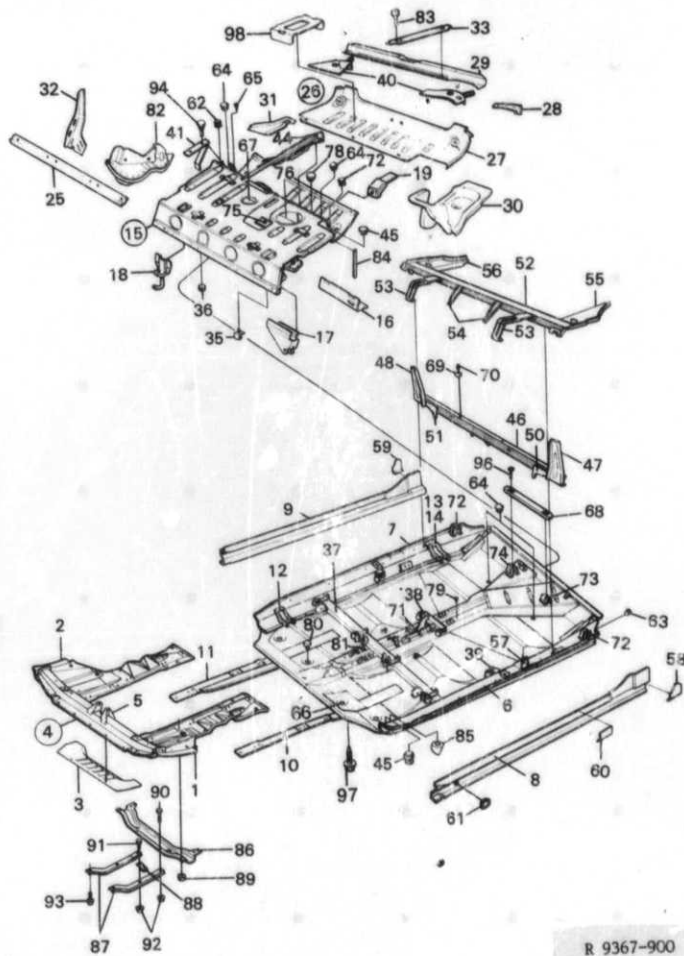

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

0100


Main body Floor		Karosseristomme Golv		Date Datum	Illustration Bild nr	Group Grupp	Page Sida
				1987-10	R9367	8	11
Fig. Pos.	Part No Art nr	Quantity/Antal		Description		Benämning	K/S Notes Anmärkning
		900	US				
0670	44 82 74 581	1		1 Support member, center		Stödbalk, mittre	6
0680	45 82 06 096	5		5 Rubber plug		Gummiplugg	5
0700	46 82 09 983	1		1 Seat member		Sitsbalk	6 3C
0710	47 82 09 991	1		1 Support plate LH		Stödspått V	6 3C
0720	48 82 10 007	1		1 Support plate RH		Stödspått H	6 3C
0730	50 82 83 517	1		1 Attachment plate, outer LH		Fästplåt, yttre V	6 3C
0740	51 82 83 525	1		1 Attachment plate, outer RH		Fästplåt, yttre H	6 3C
0750	52 76 02 394	1		1 Seat member		Sitsbalk	6 3C (8242067)
0760	53 82 42 471	2		2 Support		Stöd	6 3C
0790	54 82 83 947	2		2 Stay		Stag	6 (824083)
0800	55 82 42 081	1		1 Attachment plate LH		Anslutningsplåt V	6 5C
0810	56 82 42 109	1		1 Attachment plate RH		Anslutningsplåt H	6 5C
0820	57 82 83 533	2		2 Bracket, safety belt		Konsol, säkerhetsbälte	6 5C
0830	58 82 42 398	1		1 Attachment plate LH		Anslutningsplåt V	6 5C
0840	59 82 42 406	1		1 Attachment plate RH		Anslutningsplåt H	6 5C
0850	60 82 42 554	2		2 Filling plate		Fyllnadspått	6 5C
0870	61 82 04 661	4		4 Rubber plug		Gummiplugg	5 5C
0880	62 71 53 096	11		11 Rubber plug		Gummiplugg	5
0890	63 71 53 074	4		4 Rubber plug		Gummiplugg	5
0900	64 82 04 760	4		4 Rubber plug		Gummiplugg	5
0910	65 71 51 452	3		3 Rubber plug		Gummiplugg	5
0920	66 73 13 752	4		4 Cover		Lock	4
0930	67 82 07 326	1		1 Cover		Lock	4
0940	68 76 03 459	1		1 Cover plate		Täckplåt	6 (8211195)
0950	69 82 11 574	2		2 Rubber plug		Gummiplugg	5
0960	70 82 87 666	2		2 Blind rivet		Blindnit	3 (82 15 683)
0970	71 92 32 349	1		1 Segment, handbrake		Segment, handbroms	5 (76 02 386)
0980	72 82 05 452	2		2 Support, seat cushion LH		Stöd, sittdyna V	6
0990	73 82 05 981	1		1 Support, seat cushion RH		Stöd, sittdyna H	6
1000	74 82 05 999	1		1 Nut		Mutter	3
1010	75 79 65 635	2		2 Seal cover		Tätningsslock	6
1020	76 82 28 702	1		1 Rubber plug		Gummiplugg	5
1030	77 81 62 308	1		1 Rubber plug		Gummiplugg	5
1040	78 82 67 296	2		2 Rubber plug		Gummiplugg	5 (82 39 154)
1050	79 82 35 182	2		2 Rubber plug		Gummiplugg	5
1060	80 82 39 170	2		2 Rubber plug		Gummiplugg	5
1070	81 82 09 876	1		1 Spring support LH		Fjäderstöd V	6
1080	82 82 09 894	1		1 Spring support RH		Fjäderstöd H	6
1090	83 82 47 181	1		1 Rubber plug		Gummiplugg	5
1100	84 82 62 974	1		1 Protective strip		Skyddslinje	6
1110	85 82 06 076	2		2 Rubber plug		Gummiplugg	5
1120	86 82 30 079	1		1 Floor member		Golvbalk	4 (8255291)
1130	87 82 30 095	2		2 Member		Balk	4 (8259038)
1140	88 82 59 061	1		1 Cover plate		Täckplåt	6
1150	89 79 69 306	2		2 Nut		Mutter	3
1160	90 80 82 943	2		2 Screw		Skruv	5
1170	91 80 82 935	1		1 Screw		Skruv	5
1180	92 79 67 953	3		3 Nut		Mutter	5
1190	93 82 62 956	2		2 Screw		Skruv	5
1200	94 82 78 392	1		1 Rubber plug		Gummiplugg	5
1210	95 79 72 474	2		2 Blind rivet		Blindnit	3
1220	96 82 67 049	2		2 Screw		Skruv	5
1230	97 82 28 131	1		1 Bracket, warning triangle		Hållare, varningstriangel	6

R 9367-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E05
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumlers	3-K18

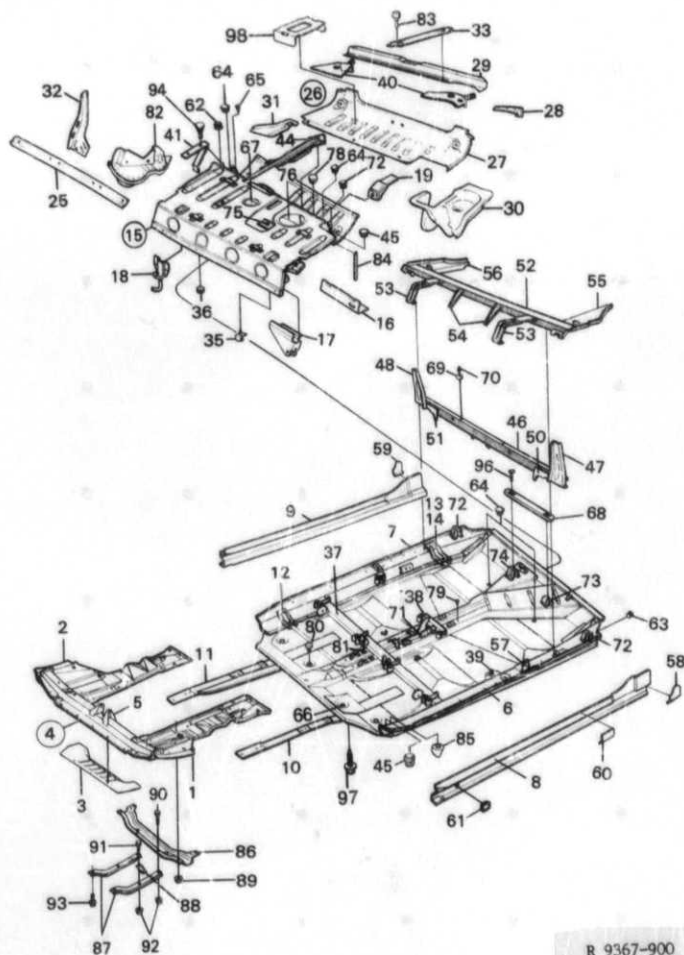

0150

Main body
Roof

Karosseristomme
Tak

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1S87-10

R4358

8

13

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0020	1 82 74 425	1		1 Roof panel	Takplåt	5	
0040	2 76 00 885	1		1 Roof member, front	Takbalk, främre	5	(82 19 833)
0050	4 92 29 949	1		1 Roof member, rear	Takbalk, bakre	6	- 1979 (8250458)
0061	4 82 87 070	1		1 Roof member, rear	Takbalk, bakre	6	1980-
0080	5 76 00 729	1		1 Water channel LH	Takränna V	5	(82 01 774)
0100	5 76 00 737	1		1 Water channel RH	Takränna H	5	(82 01 782)
0120	5 76 01 313	1		1 Water channel LH	Takränna V	5	5CK (82 42 232)
0140	5 76 01 321	1		1 Water channel RH	Takränna H	5	5CK (82 42 240)
0180	6 82 09 525	1		1 Side member LH	Sidobalk V	6	3CK
0190	6 82 09 834	1		1 Side member RH	Sidobalk H	6	3CK
0240	6 82 49 872	1		1 Side member LH	Sidobalk V	6	5CK
0280	6 82 49 880	1		1 Side member RH	Sidobalk H	6	5CK
0280	7 92 23 926	1		1 Windshield member assy	Vindrutebalk kpl assy	6	(8274375)
0300							
0340	10 82 09 967	4		4 Bracket, curve handle	Fäste, kurvhandtag	6	
0360	11 82 28 843	1		1 Air deflector	Skärmsplåt	5	
0380	12 82 33 886	1		1 Seal strip	Tätningsslist	3	
0400	13 79 61 691	2		2 Blind rivet	Blindnit	5	

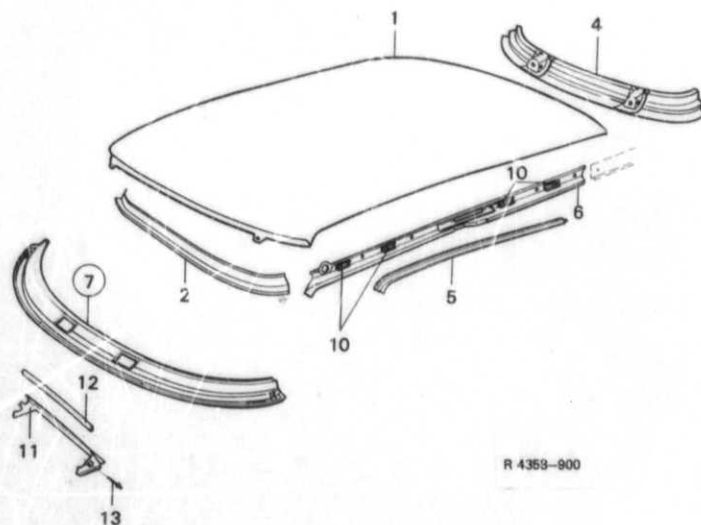


R 4359-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K16

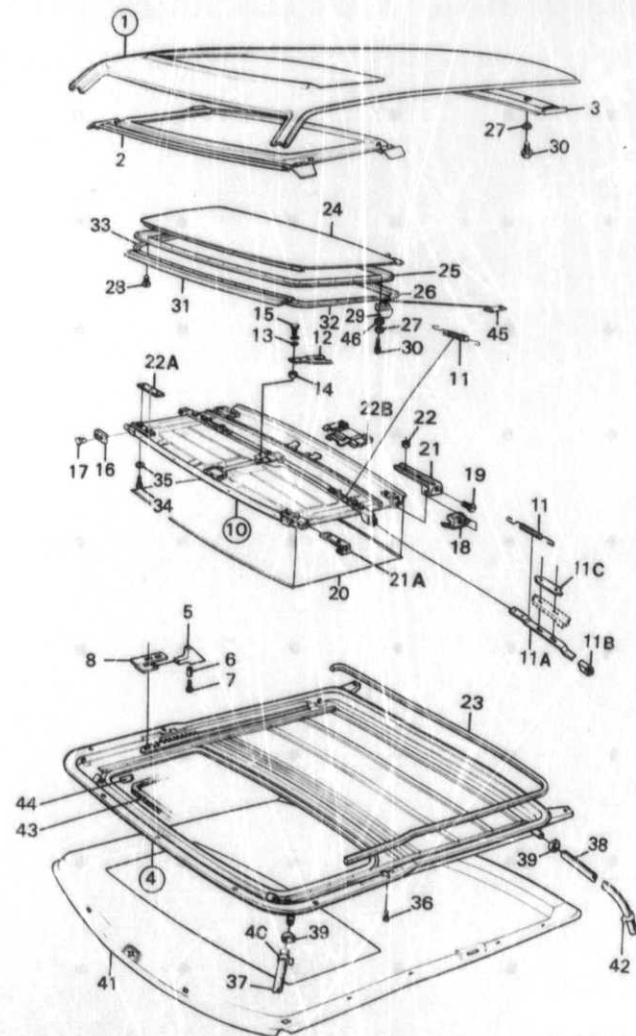

R 9368-900

0200

Main body
Sun roof

Karosseristomme
Soltak

Date
Datum
1987-10

Illustration
Bild nr
R9368

Group
Grupp
8

Page
Sida
15


Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0020	1	82 74 433	1	1 Roof panel assy	Takplåt kpl	5	
0030	2	82 83 590	1	1 Frame	Ram	5	
0040	3	82 83 808	1	1 Rib	Spant	5	
0050	4	82 49 005	1	1 Frame assy	Ram kpl	5	
0060	5	82 48 528	2	2 Bracket	Konsol	5	
0070	6	82 49 625	2	2 Bushing	Bussning	0	
0080	7	82 49 833	2	2 Screw	Skruv	5	
0090	8	82 48 270	1	1 Spring LH	Fjäder V	5	
0100	9	82 48 288	1	1 Spring RH	Fjäder H	5	
0110	10	92 30 301	1	1 Panel assy	Panel kpl	5	(8249237,8286510)
0130	11	82 48 577	2	2 Spring	Fjäder	5	
0140	11A	82 48 775	2	2 Catch	Spärr	5	
0150	11B	82 48 437	2	2 Slide cam lock	Glidlås	5	
0180	11C	82 88 599	2	2 Lock plate	Låsplåt	5	
0170	12	82 48 585	1	1 Lock arm	Låsarm	5	
0180	13	82 49 724	9	6 Washer	Bricka	5	
0190	14	82 48 132	2	2 Nut	Mutter	5	-1979
0200	14	82 49 682	2	2 Nut	Mutter	5	1980-
0210	15	82 49 740	2	2 Screw	Skruv	5	
0220	16	82 48 379	2	2 Stop	Stopp	5	
0230	17	82 48 593	4	4 Rivet	Nit	5	
0240	18	82 48 452	1	1 Slide cam	Glidkam	5	
0250	19	82 49 765	1	1 Screw	Skruv	5	
0260	20	82 64 202	2	1 Upholstery	Kläddesl	5	
0270	21	82 29 865	4	1 Sliding support	Glidstöd	5	-1979(8248262)
0280	21	82 88 425	2	2 Sliding support	Glidstöd	5	1980-
0290	21A	82 48 282	2	2 Sliding support	Glidstöd	5	1980-
0410	22	82 88 029	4	4 Nut	Mutter	5	
0420	22A	82 86 429	2	2 Washer	Bricka	5	1980-
0430	22B	82 88 193	2	2 Spring	Fjäder	5	1980-
0440	23	82 49 526	1	1 Seal strip	Tätningslist	5	
0450	24	82 49 583	1	1 Lid	Lucks	5	
0460	25	92 31 853	1	1 Seal strip	Tätningallist	0	(8288401,8276396)
0480	26	82 49 476	1	1 Seal retainer	Hållarlist	5	
0490	27	79 15 549	4	4 Washer	Bricka	5	
0500	28	79 39 804	38	38 Screw	Skruv	5	
0510	29	82 48 619	2	2 Bracket	Konsol	5	
0520	30	80 97 586	4	4 Screw	Skruv	5	
0530	31	82 49 435	1	1 Seal retainer, front	Hållarlist, främre	5	
0540	32	82 49 450	1	1 Seal retainer LH	Hållarlist V	5	
0550	33	82 49 468	1	1 Seal retainer RH	Hållarlist H	5	
0560	34	82 69 052	4	4 Screw	Skruv	5	
0570	35	82 49 567	4	4 Washer	Bricka	5	65
0580	36	79 71 757	9	9 Screw	Skruv	5	
0590	37	82 49 542	2	2 Draintube, front	Dräneringsslang, främre	5	22
0600	37	82 86 213	2	2 Draintube, front	Dräneringsslang, främre	5	23
0610	38	82 64 707	2	2 Draintube, rear	Dräneringsslang, bakre	5	3CK
0620	38	82 49 559	2	2 Draintube, rear	Dräneringsslang, bakre	5	5CK
0630	38	82 49 559	2	2 Draintube, rear	Dräneringsslang, bakre	5	5CK
0640	38	82 49 559	2	2 Draintube, rear	Dräneringsslang, bakre	5	5CK
0650	38	82 49 559	2	2 Draintube, rear	Dräneringsslang, bakre	5	5CK
0660	38	82 49 559	2	2 Draintube, rear	Dräneringsslang, bakre	5	5CK
0670	39	79 70 056	4	4 Hose clamp	Slangklamma	5	
0680	40	82 56 778	2	2 Clip	Clip	5	
0690	41	94 26 917	1	1 Headlining	Takkläddesl	5	3CK
0700	41	94 26 933	1	1 Headlining	Takkläddesl	5	5CK
0710	42	82 66 843	2	2 Hose clamp	Slangklamma	5	
0720	43	94 21 736	1	1 Strip	List	5	
0730	44	94 26 420	4	4 Clip	Clip	5	
0740	45	82 67 932	X	X Spacer	Mellanlägg	5	

22. Ch.-90791008161.
23. Ch.-90791008162.
65. Ch.-90801013450.

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

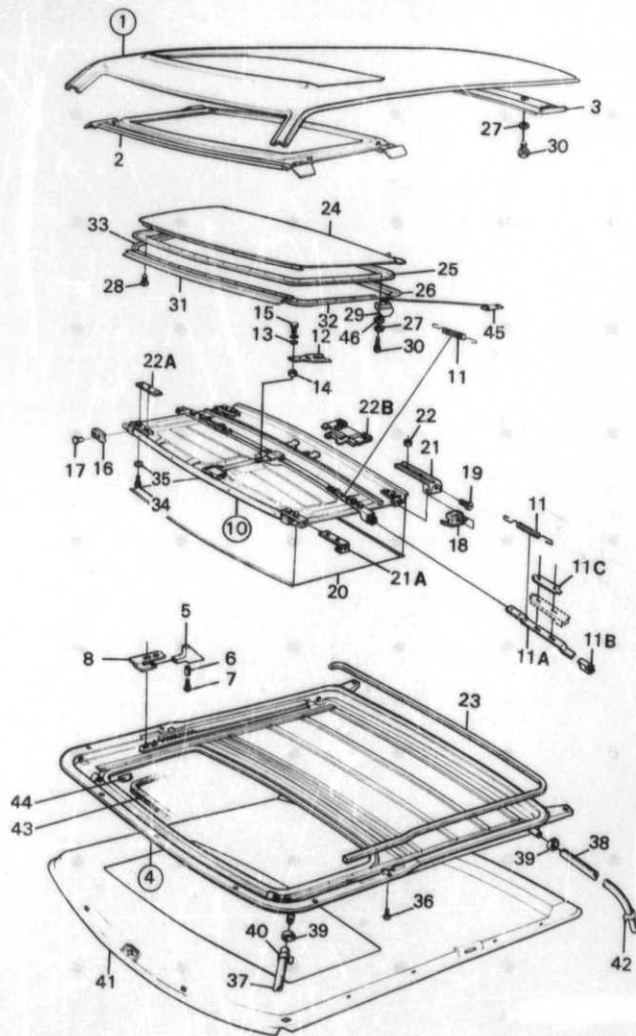

R 9368-900

SAAB
genuine parts
original reservdelar

3-D18

SAAB 900
M79-80

0200

Main body
Sun roof

Karosseristomme
Soltak

Date
Datum

1987-10

Illustration
Bild nr

R9368

Group
Grupp

8

Page
Sida

17

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K S R L	Notes Anmärkning
		900					
0750	46		X	X Washer	Bricka	5	ALT. TO 82 67 932
0760	47		2	2 Bushing	Bussning	5	

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

0250

Main body
Dash panel and front
wheel housing

Karosseristomme
Torpedplåt och hjulhus,
främre

Date
Datum
1987-10

Illustration
Bild nr
R5932

Group
Grupp
8

Page
Sida
19


Fig. Pos.	Part No Art nr	Quantity/Åntal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0020	1 82 74 219	1		1 Dash panel	Torpedplåt	6	
0040	2 82 74 227	1		1 Bracket	Fäste, torkare	5	
0060	3 82 74 235	1		1 Bracket	Plåtvinkel	5	
0080	4 82 74 243	1		1 Washer	Fästbricka	5	
0100	5 82 74 250	1		1 Wheel housing, inner assy LH	Hjulhus, inner kpl V	5	
0120							
0140	5 82 74 268	1		1 Wheel housing, inner assy RH	Hjulhus, inner kpl H	5	
0160	5B 82 75 398	1		1 Plate, inner wheel housing LH	..Inre hjulhusplåt V	5	
0170							
0171	5B 82 75 406	1		1 Plate, inner wheel housing RH	..Inre hjulhusplåt H	5	
0172							
0173	5C 78 74 175	1		1 ..Front part, wheel housing LH	..Främre del, hjulhus V	5	
0174							
0175	5C 78 74 183	1		1 ..Front part, wheel housing RH	..Främre del, hjulhus H	5	
0176							
0177	6 89 12 364	1		1 Bracket, bumper LH	..Stötfångarbalk V	3	(8274292)
0180	6 89 12 380	1		1 Bracket, bumper RH	..Stötfångarbalk H	3	(8274300)
0200							
0220	7 82 74 318	1		1 Bearing bracket LH	..Lagerkonsol V	5	
0240	7 82 74 326	1		1 Bearing bracket RH	..Lagerkonsol H	5	
0300	9 82 74 359	1		1 Wheel housing, outer LH	Hjulhus, yttre V	3	
0320							
0340	9 82 74 367	1		1 Wheel housing, outer RH	Hjulhus, yttre H	3	
0360							
0385	9A 78 74 142	2		2 Wheel housing edge	..Hjulhuskant	3	
0390	10 82 74 755	1		1 Crash member LH	Krockbalk V	5	
0400	10 82 74 706	1		1 Crash member RH	Krockbalk H	5	
0500	13 82 61 547	1		1 Beam, steering wheel	Rattbalk	6	
0520	14 82 76 057	1		1 Link LH	Länk V	5	US
0540	14 82 76 085	1		1 Link RH	Länk H	5	US
0560	15 82 76 107	2		2 Bracket	Fäste	5	US
0580	16 80 97 883	4		4 Screw	Skruv	5	US
0600	17 82 60 747	2		2 Washer	Bricka	5	
0620	18 82 62 966	4		4 Screw	Skruv	5	
0640	19 82 62 008	2		2 Washer	Bricka	5	
0660	20 89 39 761	1		1 Cover	Täcklock	0	
0670	20A 94 36 478	1		1 Insulation	Isolering	6	
0680	21 82 06 096	4		4 Rubber plug	Gummiplugg	5	
0700	22 82 72 494	1		1 Rubber plug	Gummiplugg	5	
0720	23 82 86 146	1		1 Bracket	Hållare	5	(8277212)
0820	27 82 72 493	2		2 Seal washer	Tätningabricka	2	
0840	28 82 86 395	1		1 Bracket, lower hinge LH	Konsol, nedre gångjärn V	4	
0860							
0880	28 82 86 403	1		1 Bracket, lower hinge RH	Konsol, nedre gångjärn H	4	
0900							
0920	29 82 88 789	1		1 Bracket LH	Konsol V	4	1980-
0940	30 82 89 423	2		2 Cover, plastic	Täcklock, plast	5	
0960	31 82 62 354	1		2 Reinforcement	Förstärkning		
0980	32 79 67 953	4		4 Nut	Mutter		


R 5932-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details,	
glass, sealings	3-F16
Upholstery, interior	
equipment and	
touch-up paint	3-G24
Heating and	
ventilation system	3-J24
Bumpers	3-K18

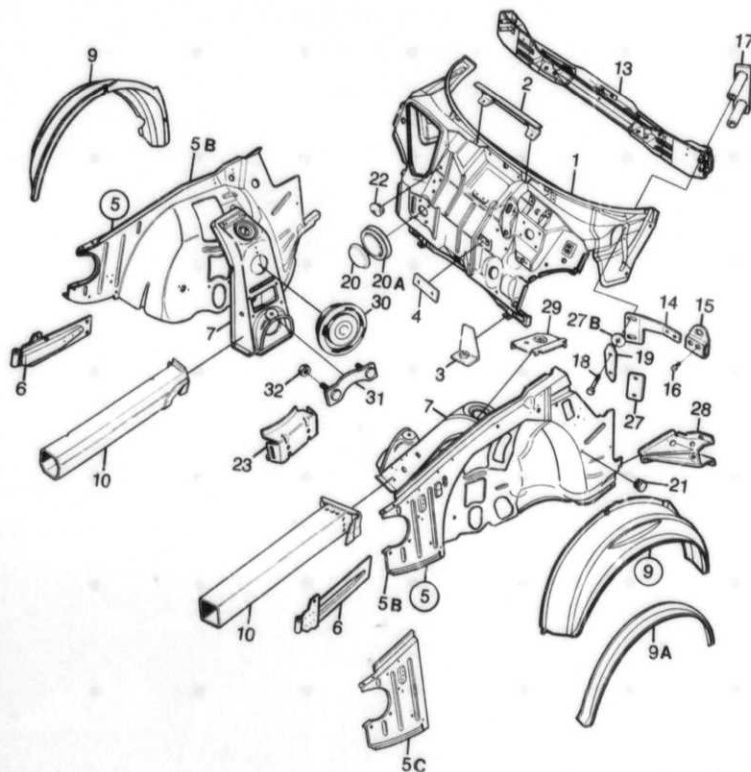

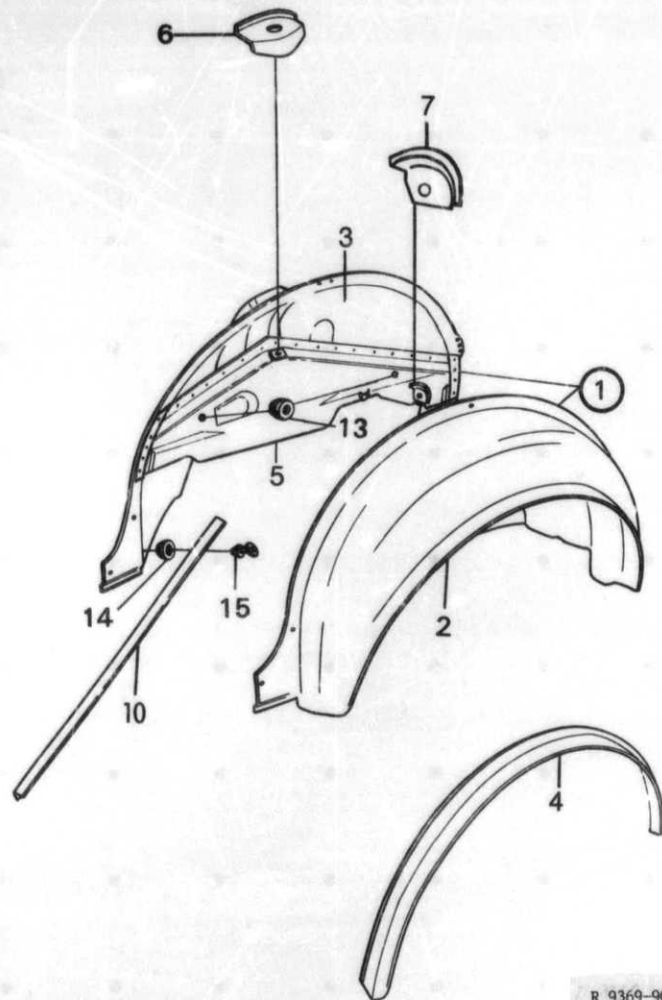

R 9369-900

SAAB
genuine parts
original reserved

3-D22

SAAB 900
M79-80

MASTER INDEX

0300

Main body
Rear wheel housing

Karosseristomme
Hjulhus, bakre

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R9369

8

21

Fig. Pos.	Part No Art nr	Quantity/Amount				Description	Benämning	K S R	Notes Anmärkning
		900			US				
0020	1	82 72 197	1			1 Wheel housing assy, rear LH	Hjulhus kpl, bakre V	6	
0040	1	82 72 205	1			1 Wheel housing assy, rear RH	Hjulhus kpl, bakre H	6	
0080	2	82 74 631	1			1 Wheel housing plate, outer LH	Hjulhusplåt, yttre V	5	
0100	2	82 74 648	1			1 Wheel housing plate, outer RH	Hjulhusplåt, yttre H	5	
0140	3	69 10 806	1			1 Wheel housing plate, inner LH	Hjulhusplåt, inre V	6	
0180	3	69 10 814	1			1 Wheel housing plate, inner RH	Hjulhusplåt, inre H	6	
0181	4	78 74 159	1			1 Wheel housing edge LH	Hjulhuskant V	5	
0182	4	78 74 167	1			1 Wheel housing edge RH	Hjulhuskant H	5	
0183	5	82 74 797	1			1 Wheel housing bracket LH	Hjulhuskonsol V	6	
0184	5	82 74 805	1			1 Wheel housing bracket RH	Hjulhuskonsol H	6	
0200	6	92 86 253	1			1 Reinforcement LH	Förstärkning V	5	
0220	6	92 86 261	1			1 Reinforcement RH	Förstärkning H	5	
0240	7	92 81 973	1			1 Bracket LH	Konsol V	5	
0250	7	92 81 981	1			1 Bracket RH	Konsol H	5	
0256	10	92 28 271	1			1 Stay	Stag	8	(82 18 661)
0480	13	84 59 439	4			4 Rubber plug	Gummiplugg	5	
0520	14	84 59 497	2			2 Rubber plug	Gummiplugg	5	
0540	15	85 07 973	2			2 Rubber plug	Gummiplugg	5	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

0350

Main body
Valances, model 3CK

Karossärstörms
Sidoplatår, modell 3CK

Date
Datum
1987-10

Illustration
Bild nr
R5934

Group
Grupp
8

Page
Sida
23

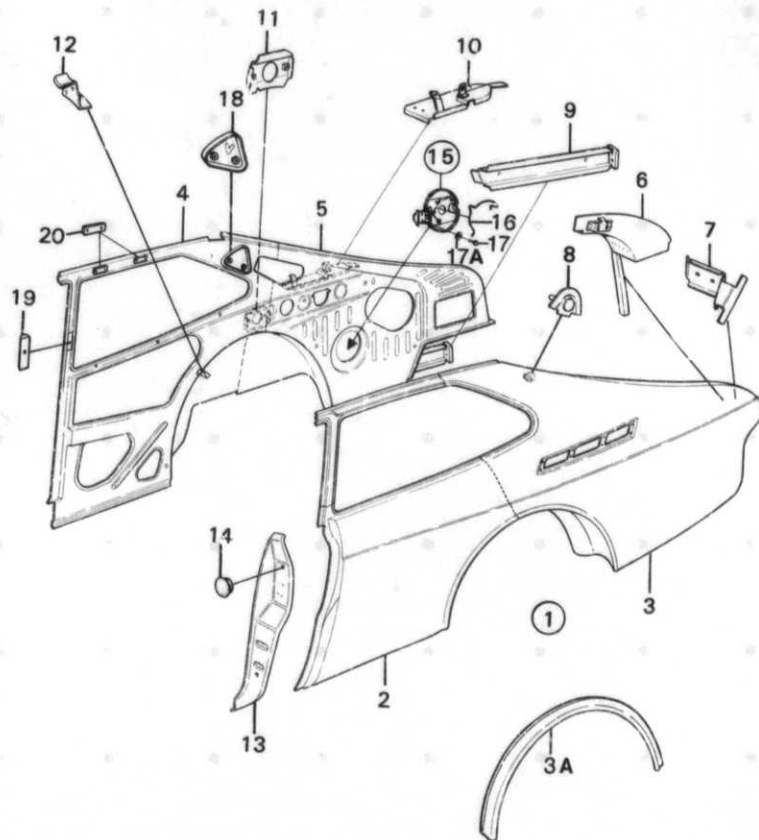



Fig. Pos.	Part No Art nr	Quantity/Ämtal		Description	Benämning	K/S SR	Notes Anmärkning
		900	US				
0020	1 92 29 717	1		1 Valance assy, outer LH	Sidoplat kpl, yttre V	4	(76 01 448)
0040	1 92 29 725	1		1 Valance assy, outer RH	Sidoplat kpl, yttre H	4	(76 01 453)
0060	2 82 53 130	2		2 Valance part, front LH	Främre del, sidoplat V	4	
0100	2 82 53 148	1		1 Valance part, front RH	Främre del, sidoplat H	4	
0120	3 82 53 155	1		1 Valance part, rear LH	Bakre del, sidoplat V	4	
0140	3 82 53 163	1		1 Valance part, rear RH	Bakre del, sidoplat H	4	
0160	3A 78 74 118	2		2 Fender edge	Skärmkant	3	
0180	4 R2 56 786	1		1 Valance inner, front part LH	Sidoplat inre, främre del V	4	
0200	4 82 56 794	1		1 Valance inner, front part RH	Sidoplat inre, främre del H	4	
0220	5 82 53 239	1		1 Valance inner, rear part LH	Sidoplat inre, bakre del V	6	
0240	5 82 55 242	1		1 Valance inner, rear part RH	Sidoplat inre, bakre del H	6	(8253247)
0260	6 82 50 573	1		1 Joint plate LH	Skarvplåt V	5	
0280	6 82 50 581	1		1 Joint plate RH	Skarvplåt H	5	
0300	7 82 36 654	1		1 Bracket LH	Fäste V	5	(82 23 777)
0320	7 82 36 662	1		1 Bracket RH	Fäste H	5	(82 23 786)
0340	8 82 83 665	2		2 Bracket	Fäste	5	
0360	9 82 21 955	1		1 Reinforcement LH	Förstärkning V	6	(76 01 578, 82 87 997)
0380	9 82 22 001	1		1 Reinforcement RH	Förstärkning H	6	(76 01 586, 82 88 003)
0400	10 82 09 942	1		1 Bracket LH	Konsol V	6	
0420	10 82 09 959	1		1 Bracket RH	Konsol H	6	
0440	11 76 01 685	1		1 Bracket LH	Fäste V	6	(82 52 512)
0460	11 76 01 693	1		1 Bracket RH	Fäste H	6	(82 52 520)
0480	12 76 01 727	1		1 Bracket	Konsol	5	(82 53 296)
0500	13 76 00 828	1		1 Plate, rear pillar LH	Plåt, bakre stolpe V	5	(8210148)
0520	13 76 00 836	1		1 Plate, rear pillar RH	Plåt, bakre stolpe H	5	(8210155)
0540	14 70 36 342	1		1 Rubber plug	Gummiplugg	5	
0560	15 R2 86 304	1		1 Cover assy, fuel filling	Täcklock kpl, bränslefläktning	5	
0580	16 82 82 537	1		1 Spring	Fjäder	0	
0600	17 79 72 508	2		2 Screw	Skruv	5	(825-096)
0620	17A 80 73 090	2		2 Washer	Bricka	5	
0640	18 76 01 552	1		1 Reinforcement LH	Förstärkning V	6	(82 50 755)
0660	18 76 01 560	1		1 Reinforcement RH	Förstärkning H	6	(8250763)
0680	19 76 01 545	2		2 Nut washer	Mutterbricka	5	(82 50 730)
0700	20 82 09 967	4		4 Bracket, curve handle	Fäste, ku-rhandtag	6	

R 5934-900

0 General	1-A02
1 Tool	1-H02
2 Engine	2-A02
3 Electrical system, Instruments	3-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly, Steering	3-B02
7 Suspension, wheels	3-C02
8 Body	3-D02
9 Accessories, Labels	3-L02
10 Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K16

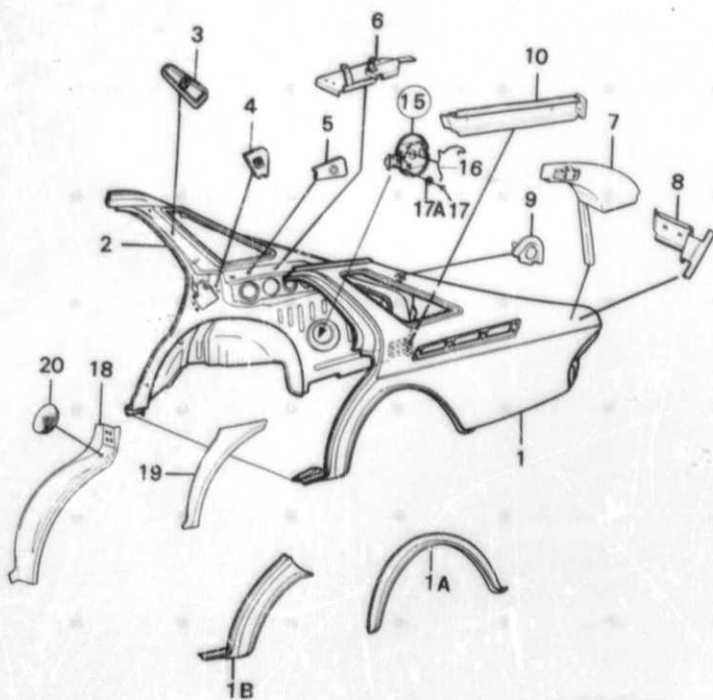

R 5935-900

SAB
genuine parts
original reservdelar

3-E02


SAA 900
M79-80 MASTER INDEX

0400

Main body		Karosseristomme		Date	Illustration	Group	Page
Valances, model 5CK		Sidoplåtar, modell 5CK		Datum	Bild nr	Grupp	Sida
				1587-10	R5935	8	25

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S	Notes
		900	US				
0020	1 82 28 214	1		1 Valance, outer LH	Sidoplåt, yttre V	4	(76 01 750)
0040	1 82 28 222	1		1 Valance, outer RH	Sidoplåt, yttre H	4	(76 01 788)
0045	1A 78 74 118	2		2 Fender edge	Skärmkant	3	
0050	1B 78 74 126	1		1 Part of valance, outer LH	Del av sidoplåt, yttre V	5	
0051				1 Part of valance, outer RH	Del av sidoplåt, yttre H	5	
0052	1B 78 74 134	1		1 Valance, inner LH	Sidoplåt, inre V	6	(82 60 119)
0053	2 76 01 782	1		1 Valance, inner RH	Sidoplåt, inre H	6	(82 60 127)
0059	2 76 01 890	1		2 Bracket	Fäste	6	
0100	3 82 60 192	2		1 Bracket LH	Fäste V	6	
0120	4 82 60 218	1		1 Bracket RH	Fäste H	6	
0140	4 82 60 226	1		2 Bracket LH	Fäste V	6	
0160	5 82 60 234	2		2 Bracket RH	Fäste H	6	
0180	5 82 60 242	2		1 Bracket LH	Konsol V	6	
0200	6 82 60 416	1		1 Bracket RH	Konsol H	6	
0220	6 82 60 424	1		1 Joint plate LH	Skarvplåt V	5	
0240	7 82 60 573	1		1 Joint plate RH	Skarvplåt H	5	
0260	7 82 60 581	1		1 Bracket LH	Fäste V	5	(8223777)
0301	8 92 55 651	1		1 Bracket RH	Fäste H	5	(8223785)
0302	8 92 56 652	1		2 Bracket	Fäste	5	
0320	9 82 53 896	2		1 Reinforcement LH	Förstärkning V	6	(76 01 578, 52 87 997)
0340	10 92 21 995	1		1 Reinforcement RH	Förstärkning H	6	(76 01 506, 52 88 003)
0360	10 92 22 001	1		1 Cover assy, fuel filling	Täcklock kpl, bränslefylning	5	
0410	15 82 88 304	1		1 Spring	Fjäder	5	
0420	16 82 62 537	1		2 Screw	Skruv	5	(8254666)
0440	17 79 72 508	2		2 Washer	Bricka	5	
0460	17A 80 73 090	2		1 Plate, rear pillar LH	Plåt, bakre stolpe V	5	(82 42 497)
0480	18 76 01 370	1		1 Plate, rear pillar RH	Plåt, bakre stolpe H	5	(82 42 505)
0500	18 76 01 388	1		1 Attachment plate LH	Anslutningsplåt V	6	(82 42 614)
0520	19 76 01 354	1		1 Attachment plate RH	Anslutningsplåt H	6	(82 42 612)
0540	19 76 01 362	1		2 Rubber plug	Gummiplugg	5	
0560	19 76 01 362	1					
0580	20 82 45 886	2					

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02
8 GROUP INDEX		
Main body		
	Instrument panel	3-D10
	Hood, front fenders	3-E06
	Doors, trunk lid	3-E14
	External details, glass, sealings	3-E20
	Upholstery, interior equipment and touch-up paint	3-F16
	Heating and ventilation system	3-G24
	Bumpers	3-J24
		3-K18

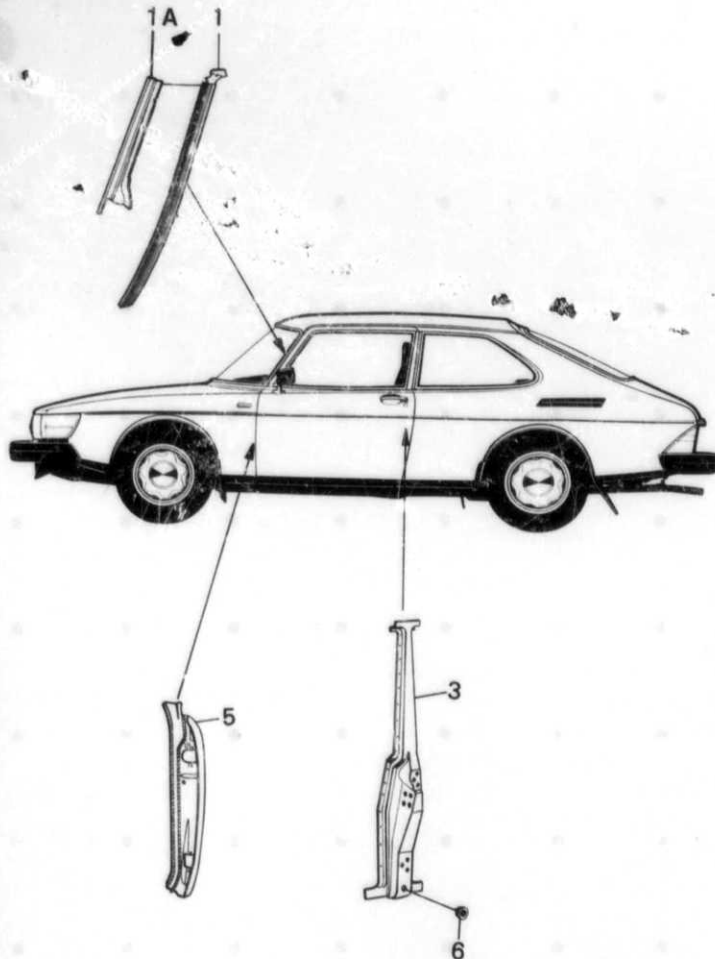

0450

Main body				Karosseristomme		Date	Illustration	Group	Page
Door- and windshield pillars				Dörr- och vindrutestolpar		Datum	Bild nr	Grupp	Sida
						1987-10	R5936	8	27
Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S		Notes	
		900	US			S	R	Anmärkning	
0020	1 82 74 516	1		1 Pillar, front LH	Stolpe, främre V	6			
0040	1 69 26 901	1		1 Pillar, front RH	Stolpe, främre H	6		88) (8274524)	
0041	1 92 25 467	1		1 Pillar, front RH	Stolpe, främre H	6		89)	
0051	1A 92 93 358	1		1 Sealing plate LH	Tättningsplåt V	6			
0052	1A 92 93 366	1		1 Sealing plate RH	Tättningsplåt H	6			
0100	3 92 33 297	1		1 Pillar LH	Stolpe V	6		SCK (76 01 271)	
0120	3 92 33 305	1		1 Pillar RH	Stolpe H	6		SCK (76 01 289)	
0160	5 82 74 334	1		1 Plate, front pillar LH	Plåt, främre stolpe V	6			
0200	5 82 74 342	1		1 Plate, front pillar RH	Plåt, främre stolpe H	6			
0220	6 84 59 505	2		2 Rubber plug	Gummiplugg	5		SCK	

R 5936-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

0500

Instrument panel
Panel upper,
instrument plate

Instrumentpanel
Panel övre,
instrumentplatta

Date
Datum


Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10 R9370 8 29

Fig. Pos.	Part No Art nr	Quantity/Åntal	Description	Benämning	K/S S/R	Notes Anmärkning
		900	US			
0020	1 98 06 829	1	1 Panel upper, assy	Panel övre, kpl	6	(9421866)
0040	1 98 06 837	1	1 Panel upper, assy	Panel övre, kpl	6	(9423463)
0060			RHD	RHD		
0080	3 94 25 380	2	2..Clip	..Fäst	5	
0100	4 94 25 851	5	5..Felt	..Filt	5	
0120	5 94 25 889	2	2..Buffer	..Gummidämpare	5	
0140	6 94 34 499	2	2..Glove compartment lid	..Handskfacklucka	5	(9421843)
0180	7 94 85 574	1	1..Glove compartment lid	..Handskfacklucka RHD	5	
0190	7 94 25 506	1	1..Glove compartment lid	..Handskfacklucka RHD	5	
0200			RHD	RHD		
0220	8 82 62 602	1	1..Glove compartment lock	..Handskfacklåås	3	
0240			lock	lock		
0260	9 82 62 610	1	1..Clip	..Fäst	5	
0280	10 94 22 908	1	1..Hinge LH	..Gångjärn V	4	
0300	11 94 21 793	1	1..Hinge RH	..Gångjärn H	4	
0320	10 94 21 793	1	1..Hinge LH RHD	..Gångjärn V RHD	4	
0340	11 94 22 908	1	1..Hinge RH RHD	..Gångjärn H RHD	4	
0360	12 79 61 634	4	4..Blind rivet	..Blindnit	5	
0380	13 94 25 398	4	4..Screw	..Skruv	5	
0400	14 79 34 102	4	4..Washer	..Bricka	5	
0420	15 94 25 877	1	1..Lock plate	..Låsblock	5	
0440	16 79 22 289	2	2..Screw	..Skruv	5	
0460	20 94 21 785	1	1..Instrument plate assy	..Instrumentplatta kpl	6	
0480	20 94 25 604	1	1..Instrument plate assy	..Instrumentplatta kpl	6	
0500			RHD	RHD		
0520	21 94 11 711	1	1..Instrument plate	..Instrumentplatta	6	
0540	21 94 25 646	1	1..Instrument plate RHD	..Instrumentplatta RHD	6	
0560	22 94 25 109	1	1..Control panel assy	..Reglageplatta kpl	5	- 1979
0580	22 94 25 109	1	1..Control panel assy	..Reglageplatta kpl	5	1980 - (9458720)
0590	23 94 25 125	1	1..Symbol plate, distribution	..Symbolbricka, distribution	5	- 1979
0600			1..Symbol plate, temp	..Symbolbricka, temp	5	- 1979
0620	24 94 25 133	1	1..Symbol plate, fan	..Symbolbricka, fläkt	5	- 1979
0640	25 94 25 141	1	1..Symbol plate, fasten	..Symbolbricka, fasten	5	- 1979
0660	26 94 25 158	1	1..Symbol plate, fasten	..Symbolbricka, fasten	5	- 1979
0680			belts	belts		
0700	27 94 81 425	2	2..Control wheel	..Ratt	3	(9425000)
0720	28 94 20 035	2	2..Spring	..Fjäder	5	
0740	29 94 20 043	2	2..Ball	..Kula	5	
0760	30 79 36 008	2	2..Retaining ring	..Spärring	5	(7963886)
0770	30A 75 72 078	2	2..O-ring	..O-ring	5	
0780	31 94 25 844	1	1..Washer	..Bricka	6	
0800	32 94 22 874	1	1..Guide sleeve	..Styrhylsa	5	
0820	33 94 22 882	1	1..Guide sleeve	..Styrhylsa	5	
0840	34 94 22 890	1	1..Guide sleeve	..Styrhylsa	5	
0860	35 94 29 721	1	1..Guide sleeve	..Styrhylsa	5	
0880	37 94 25 703	1	1..Upholstery	..Beklädnad	5	
0900	37 94 35 751	1	1..Upholstery RHD	..Beklädnad RHD	5	
0920	38 79 71 393	2	2..Screw	..Skruv	5	
0940	39 94 25 695	1	1..Keeping box	..Förvaringsfack	5	
0960	45 94 25 679	1	1..Sign »UFO»	..Textbricka »UFO»	5	
0980	46 94 22 023	1	1..Emblem »CL»	..Emblem »GL»	3	
1000	46 93 34 475	1	1..Emblem »GL» RHD	..Emblem »GL» RHD	3	
1020	46 94 34 689	1	1..Emblem »GLE»	..Emblem »GLE»	3	
1040	46 94 25 554	1	1..Emblem »GLE» RHD	..Emblem »GLE» RHD	3	
1060	46 94 34 671	1	1..Emblem »EMS»	..Emblem »EMS»	3	
1080	46 94 34 481	1	1..Emblem »EMS» RHD	..Emblem »EMS» RHD	3	
1100	46 94 34 663	1	1..Emblem »Turbo»	..Emblem »Turbo»	3	
1120	46 94 34 485	1	1..Emblem »Turbo»	..Emblem »Turbo»	3	
1140			RHD	RHD		
1160	47 94 34 606	1	1..Screw	..Skruv	5	
1180	48 94 34 614	1	1..Screw	..Skruv	5	
1200	49 94 34 622	1	1..Screw	..Skruv	5	
1220	50 94 22 858	1	1..Screw	..Skruv	5	
1240	51 94 23 666	4	4..Washer	..Bricka	5	- 1979

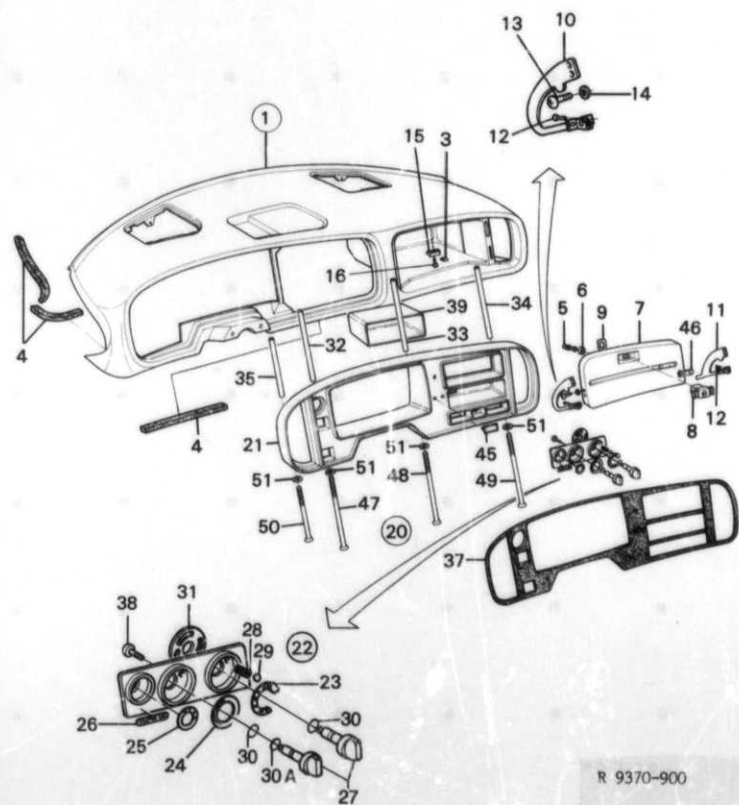

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheel	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

0525

Instrument panel
Panel lower,
panel outlet

Instrumentpanel
Underdel, panel-
utsläpp

Date
Datum
1987-10


Illustration
Bild nr
R5178

Group
Grupp
8

Page
Sida
31

Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S S/R	Notes Anmärkning
		900				
0020	1 94 01 357	1	Panel outlet assy LH	Panelutsläpp kpl V	5	PART OF 94 21 785
0040	1 94 20 415	1	Panel outlet assy RH RHD	Panelutsläpp kpl H RHD	5	PART OF 94 25 604
0080	2 94 18 237	1	Air guide LH	Luftledare V	5	
0100	2 94 20 431	1	Air guide RH RHD	Luftledare H RHD	5	
0120	3 94 18 328	1	Seal	Tätning	5	
0130	4 94 18 310	1	Valve disc LH	Spjällskiva V	5	LHD-CARS ONLY
0140	5 94 18 476	1	Panel outlet assy center	Panelutsläpp kpl mittre	5	PART OF 94 21 785, 94 25 604
0180	6 94 18 559	1	Air guide, center, lower	Luftledare, mittre, nedre	5	
0200	6 94 18 492	1	Air guide, center, lower RHD	Luftledare, mittre, nedre RHD	5	
0240	7 94 18 492	1	Air guide, center, upper	Luftledare, mittre, övre	5	
0280	7 94 18 559	1	Air guide, center, upper RHD	Luftledare, mittre, övre RHD	5	
0300	8 94 19 060	1	Seal, center	Tätning, mittre	5	
0340	10 94 01 381	1	Panel outlet assy RH	Panelutsläpp kpl H	5	
0380	10 94 20 340	1	Panel outlet assy LH RHD	Panelutsläpp kpl V RHD	5	
0400	11 94 18 351	1	Air guide RH	Luftledare H	5	
0420	11 94 20 365	1	Air guide LH RHD	Luftledare V RHD	5	
0440	12 94 18 435	1	Seal	Tätning	5	
0460	13 94 18 427	1	Valve disc RH	Spjällskiva H	5	LHD-CARS ONLY
0480	15 94 22 031	1	Grille, loud speaker LH	Galler, högtalare V	5	
0500	15 94 25 562	1	Grille, loud speaker LH RHD	Galler, högtalare V RHD	5	
0520	16 94 22 677	1	Air jet LH	Munstycke V	5	
0540	17 94 22 056	2	Clip	Clip	5	
0560	17A 94 61 047	1	Clip	Clip	5	
0580	18 94 22 084	1	Grille, loud speaker, RH	Galler, högtalare RH	5	
0600	18 94 25 588	1	Grille, loud speaker, RH RHD	Galler, högtalare H RHD	5	
0620	19 94 22 674	1	Air jet RH	Munstycke H	5	
0640	20 94 22 056	2	Clip	Clip	5	
0660	20A 94 61 047	1	Clip	Clip	5	
0680	21 94 61 435	1	Clip nut	Clipsmutter	5	(7933666)
0700	22 79 68 084	4	Screw	Skruv	5	
0720	23 94 25 828	1	Casing, steering column	Käpa, rattlagring	6	
0740	23 94 36 015	1	Casing, steering column RHD	Käpa, rattlagring RHD	6	
0760	24 79 72 193	2	Screw	Skruv	5	
0780	25 94 23 666	2	Washer	Bricka	5	
0800	26 94 23 658	1	Screw	Skruv	5	
0820	27 84 52 898	1	Quick nut	Snabbmutter	5	
0840	28 94 17 551	1	Ashtay	Askopp	5	
0860	30 94 25 406	1	Bracket, glove compartment side	Fäste, handskfack-sida	5	
0880	30 94 25 612	1	Bracket, glove compartment side RHD	Fäste, handskfack-sida RHD	5	
0900	31 79 61 642	6	Blind rivet	Blindnit	5	
0920	32 79 61 691	4	Blind rivet	Blindnit	5	
0940	33 94 25 414	1	Bracket	Fäste	5	
0960	34 94 25 422	2	Bracket, dash panel	Fäste, torped	5	
0980	35 94 27 014	4	Clip nut	Clipsmutter	3	
1000	36 79 22 354	2	Screw	Skruv	5	
1020	36A 79 22 370	2	Screw	Skruv	5	
1040	37 79 16 489	4	Washer	Bricka	5	
1060	39 94 38 516	1	Panel lower assy bordeaux red	Panel undre kpl bordeauxröd	6	EMS, GLE, TURBO TRIM CO-LOUR C07

R 5178-900

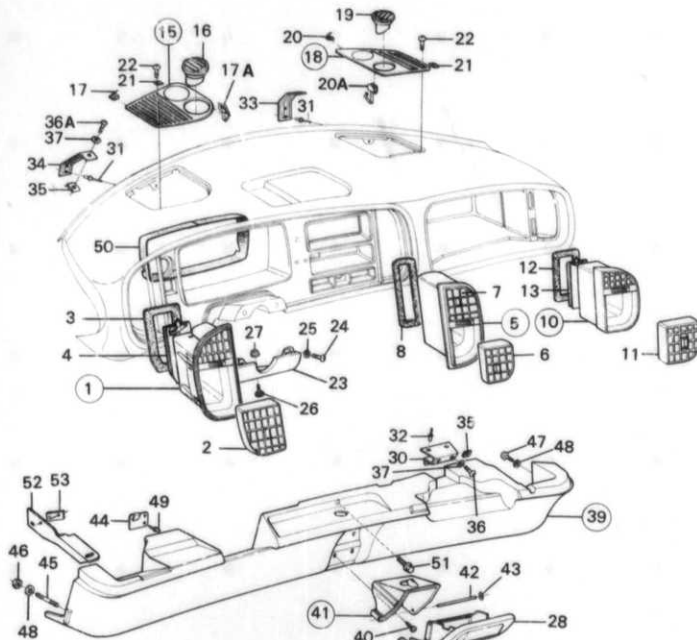

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

0525

Instrument panel
Panel lower,
panel outlet

Instrumentpanel
Underdel, panel-
utsläpp

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1987-10

R5178

8

33

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR	Notes Anmärkning
		900	US				
1200	39 94 38 730	1		Panel lower assy bordeaux red RHD	Panel undre kpl bordeauxröd RHD	6	EMS, GLE, TURBO TRIM CO- LOUR CO7
1220	39 94 38 524	1		Panel lower assy teddy brown	Panel undre kpl teddybrun	6	GL TRIM COLOUR CO1, CO4
1260	39 94 38 748	1		Panel lower assy teddy brown RHD	Panel undre kpl teddybrun RHD	6	GL TRIM COLOUR CO1, CO4
1300	39 94 38 532	1		Panel lower assy sable grey	Panel undre kpl sobelgrå	6	GL TRIM COLOUR CO2, CO5
1320	39 94 38 755	1		Panel lower assy sable grey RHD	Panel undre kpl sobelgrå RHD	6	GL TRIM COLOUR CO2, CO5
1340	39 94 38 540	1		Panel lower assy reseda green	Panel undre kpl resedagrön	6	GLEMS, GLE, TURBO TRIM COLOUR CO3, CO6
1360	39 94 38 763	1		Panel lower assy reseda green RHD	Panel undre kpl resedagrön RHD	6	GLEMS, GLE, TURBO TRIM COLOUR CO3, CO6
1400	39 94 38 557	1		Panel lower assy lavender blue	Panel undre kpl lavendelblå	6	EMS, GLE, TURBO TRIM COLOUR CO8
1420	39 94 38 771	1		Panel lower assy lavender blue RHD	Panel undre kpl lavendelblå RHD	6	EMS, GLE, TURBO TRIM COLOUR CO8
1440	40 79 22 818	4		4. Screw	4. Skruv	5	
1460	41 94 11 661	1		1. Housing ashtray assy	1. Askkoppskphus kpl	5	
1480	42 94 23 528	1		1. Axle	1. Axel	5	
1500	43 94 45 875	2		2. Washer	2. Bricka	5	
1520	44 94 25 430	1		1 Bracket LH	1 Fäste V	5	
1540	44 94 26 495	1		1 Bracket RH	1 Fäste H	5	
1560	45 94 46 881	1		1 Stud	1 Pinnskruv	5	
1580	46 80 29 555	1		1 Nut	1 Mutter	5	
1600	47 80 19 911	1		1 Screw	1 Skruv	5	(9445859)
1620	48 79 16 497	1		1 Washer	1 Bricka	5	
1640	49 79 61 691	4		4 Blind rivet	4 Bländnit	5	
1660	50 94 45 990	1		1 Seal	1 Tätning	5	
1680	51 82 86 296	2		2 Screw	2 Skruv	5	
1700	52 94 57 585	1		1 Bracket, panel LH	1 Fäste, panel V	5 (75)	
1720	52 94 58 894	1		1 Bracket, panel RH	1 Fäste, panel H.RHD	5 (75)	
1740	53 94 59 025	1		1 Washer	1 Bricka	5 (75)	

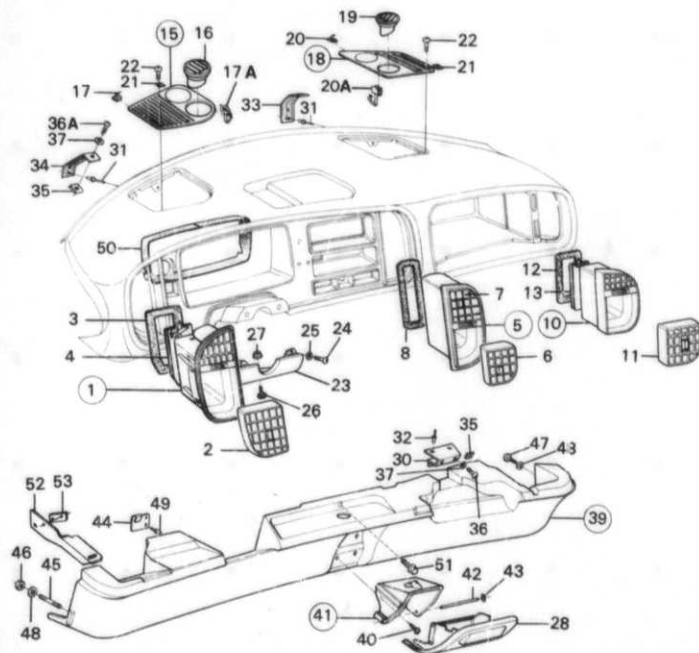

R 5178-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

0540

Instrument panel
Cover, gear shift lever

Instrumentpanel
Kåpa, växelspak

Date
Datum
1987-10

Illustration
Bild nr
R9371

Group
Grupp
8

Page
Sida
35

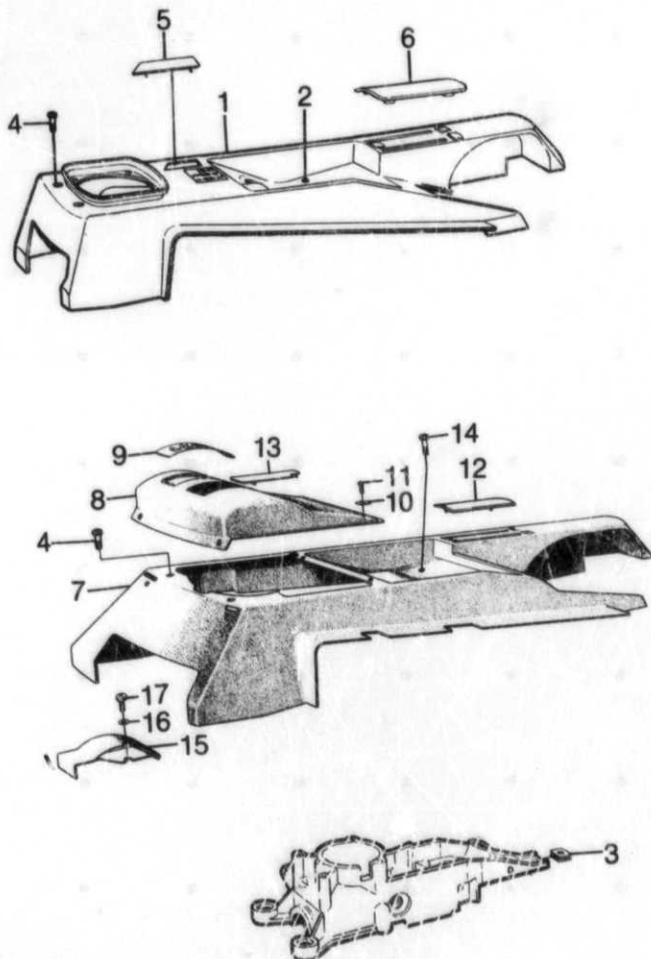


Fig. Fos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0020	1 94 27 105	1		1 Cover	Kåpa	6	1979
0040	1 94 59 314	1		1 Cover	Kåpa	6	1980-
0060	1 94 46 162	1		1 Cover	Kåpa	6	5-SPEED
0080	2 79 71 831	1		1 Screw	Skruv	5	1979
0100	2 79 70 636	1		1 Screw	Skruv	5	1980-
0120	3 79 62 251	1		1 Clip	Clip	3	1979
0140	3 79 68 001	1		1 Clip	Clip	3	1980-
0160	4 79 34 318	2		2 Screw	Skruv	6	
0180	5 94 27 170	1		1 Cover plate, cold start control	Täckbricka, kallstartreglage	6	
0200							
0220	6 84 37 253	1		1 Cover plate, heating control	Täckbricka, värmereg- lage	6	
0240							
0260	7 94 27 071	1		1 Cover	Kåpa	6	1979, A
0280	7 94 59 322	1		1 Cover	Kåpa	6	1980-, A
0300	8 94 27 067	1		1 Indicator cover	Indikatoråpa	6	A
0320	9 66 03 326	1		1 Scale, gear selector lever	Skala, växelväljare	3	A
0340							
0360	10 79 62 251	4		4 Clip	Clip	3	
0380	11 79 71 526	4		4 Screw	Skruv	5	
0400	12 84 37 253	1		1 Cover plate, heating control	Täckbricka, värmereg- lage	6	
0420							
0440	13 94 27 188	1		1 Cover plate, cold start control	Täckbricka, kallstart- reglage	6	
0460							
0480	14 79 71 831	1		1 Screw	Skruv	5	
0500	15 84 22 032	1		1 Guide for lighting	Ljusledare	3	
0520	16 79 69 975	3		3 Washer	Bricka	5	
0540	17 73 34 618	3		3 Screw	Skruv	5	

R 9371-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K16

0550

Hood, front, fenders
Hood, hood hinges and
hood lock

Motorhuv, front, skärmar
Motorhuv, huvgångjärn och
huvlås

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R4096

8

37

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0020	1	82 86 942	1	1 Hood assy	Motorhuv kpl	3	
0040	2	82 88 903	1	1 Cross member, front	Spann, främre	3	
0060	3	82 83 550	1	1 Cover plate	Täckplåt	3	
0080	4	79 22 347	6	6 Screw	Skruv	5	
0100	5	92 37 009	2	2 Roll	Rulle	5	(8258012)
0120	6	79 71 724	2	2 Screw	Skruv	5	
0140	7	79 71 858	2	2 Nut	Mutter	5	
0160	8	82 67 601	1	1 Hinge	Gångjärn	3	
0180	9	82 55 911	1	1 Spring LH	Fjäder V	4	
0200	9	82 55 929	1	1 Spring RH	Fjäder H	4	
0220	10	82 61 289	2	2 Tap	Tapp	5	
0240	11	79 67 953	2	2 Nut	Mutter	5	
0260	12	79 56 238	2	2 Cylindr pin	Pinne, cylinder	5	
0280	13	79 72 144	2	2 Screw	Skruv	5	
0300	14	82 78 343	2	2 Rubber stop	Gummistopp	4	
0320	15	82 86 017	1	1 Bracket, hinge LH	Fäste, gångjärn V	5	
0340	15	82 86 025	1	1 Bracket, hinge RH	Fäste, gångjärn H	5	
0360	16	80 82 943	2	2 Screw	Skruv	5	
0380	17	80 74 288	2	2 Nut	Mutter	5	
0400	18	79 33 849	2	2 Washer	Bricka	5	
0420	19	82 86 528	2	2 Adjusting screw	Ställskruv	5	(8265324)
0440	20	82 76 743	1	1 Locking pin	Låstapp	4	
0460	21	73 11 764	1	1 Washer	Bricka	5	
0480	22	82 58 872	1	1 Hook	Hake	3	
0500	23	80 59 552	2	2 Screw	Skruv	5	
0520	24	82 74 846	1	1 Hood lock	Huvlås	3	
0540	25	82 61 354	1	1 Guide plate	Styrplåt	5	
0560	26	82 64 681	1	1 Control cable	Reglagwire	2 19	
0580	26	82 89 191	1	1 Control cable assy	Reglagewire kpl	2 20	
0600	26A	79 61 311	1	1 Bushing	Bussning	5 20	
0620	27	82 64 657	1	1 Arm	Arm	5 19	
0640	27A	82 78 509	1	1 Arm	Arm	5 20	
0660	28	82 64 665	1	1 Handle	Handtag	3 19	
0680	29	80 59 560	2	2 Screw	Skruv	5 19	
0700	30	79 22 891	3	3 Screw	Skruv	5 20	
0720	31	82 75 877	1	1 Spring	Fjäder	5	
0740	32	82 72 791	1	1 Clamp	Överfall	5	
0760	33	79 22 909	2	2 Screw	Skruv	5	
	34	79 33 443	1	1 Clip	Clip	5	
	35	82 86 296	2	2 Screw	Skruv	5	
	36	82 77 246	5	5 Clip	Clip	5	
	37	82 78 558	2	2 Slide guard	Slitskydd	5	


R 4096-900

19. Ch. 90791019038 - 90792000721 - 907980004506.
20. Ch. 90791019039 - 90792000722 - 907980004507.

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E00
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

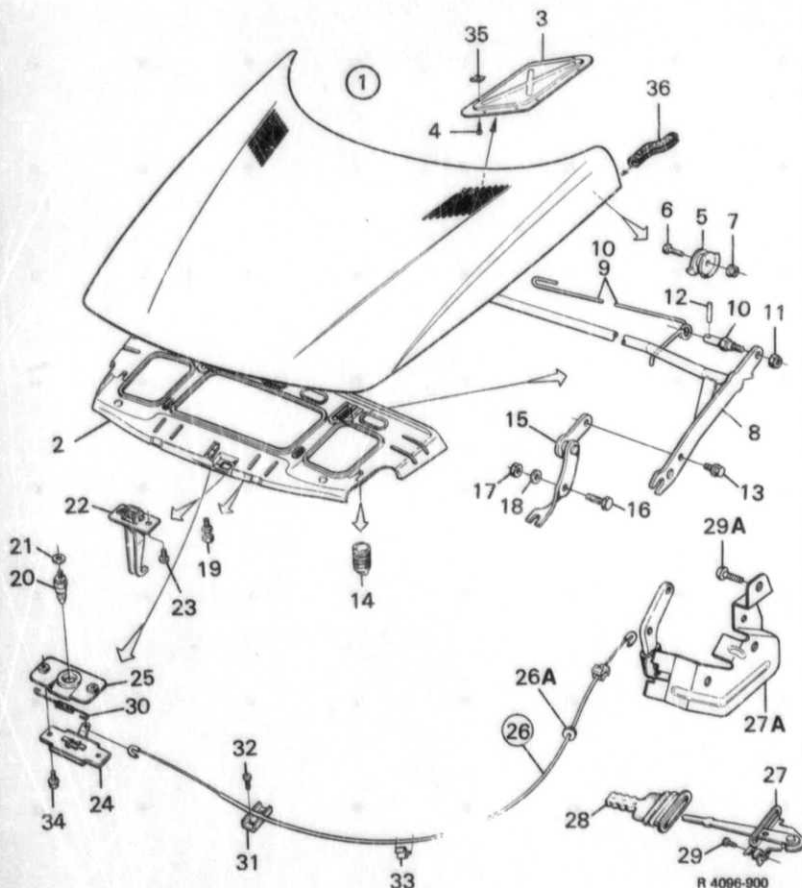

0600

Hood, front, fenders
Front member, grille

Motorhuv, front, skärmar
Frontbalk, grill

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1987-10

R4188

8

39

Fig. Pos.	Part No Art nr	Quantity/Amtal		Description	Benämning	K/S SR	Notes Anmärkning
		900	US				
0010	1	82 64 376	1	1 Member, upper	Balk, övre	3	
0020	1	89 37 254	1	1 Member, upper	Balk, övre	3	
0030		89 37 262	X	X Mounting kit	Monteringsatts	3	ALT
0040	2	82 74 185	2	2 Rubber buffer	Gummibuffert	5	FOR MEMBER 8937254
0050	3	82 66 926	1	1 Slide guard	Slitskydd	6	
0060	4	82 39 733	3	3 Pop rivet	Blindnit	3	
0070	5	82 68 518	2	2 Spacer tube	Distansrör	4	
0080	6	82 35 178	2	2 Blind rivet	Blindnit	3	
0090	7	79 67 938	6	6 Screw	Skruv	5	
0100	8	79 67 953	6	6 Nut	Mutter	5	
0110	9	92 32 899	4	4 Screw	Skruv	5	(82 66 918)
0120	9	92 32 899	3	3 Screw	Skruv	5	(82 66 918) WITHOUT OIL-COOLER
0130						5	
0140	10	79 69 223	4	4 Screw	Skruv	5	
0150	11	79 71 658	4	4 Nut	Mutter	5	
0160	12	82 58 919	1	1 Grille assy	Grill kpl	3	-1979 GL
0170	12	82 69 856	1	1 Grille assy	Grill kpl	3	-1979 GLE
0180	13	82 26 440	1	1 Grille assy	Grill kpl	3	-1979 EMS, TURBO
0185						3	(8262115)
0190	13	82 26 440	1	1 Grille assy	Grill kpl	3	1980- (8262115)
0200	14	82 56 273	3	3 Spacer clip	Distansclips	3	
0210	15	82 58 810	1	1 Dekor frame	Dekorram	3	-1979 GL, GLE
0220	16	82 76 131	5	5 Clamp	Klammer	5	-1979 GL, GLE
0230	17	82 26 432	1	1 Emblem »SAAB»	Emblem »SAAB»	3	(82 35 111)
0240	18	79 19 483	2	2 Clamp	Klammer	5	
0250	19	79 22 354	3	3 Screw	Skruv	5	
0260	20	82 57 495		1 Grille, outer part	Grill, yttre del V	3	US
0270				LH			
0280	21	82 57 503		1 Grille, outer part	Grill, yttre del H	3	US
0290				RH			
0300	22	79 21 307	2	2 Screw	Skruv	5	
0310	23	82 73 302	1	1 Emblem »EMS»	Emblem »EMS»	3	
0320	24	82 69 672	1	1 Emblem »GLE»	Emblem »GLE»	3	
0330	25	82 69 706	1	1 Emblem »TURBO»	Emblem »TURBO»	3	
0340	26	82 73 815	3	3 Plate	Platta	5	
0350	27	79 19 483	6	6 Clamp	Klammer	5	

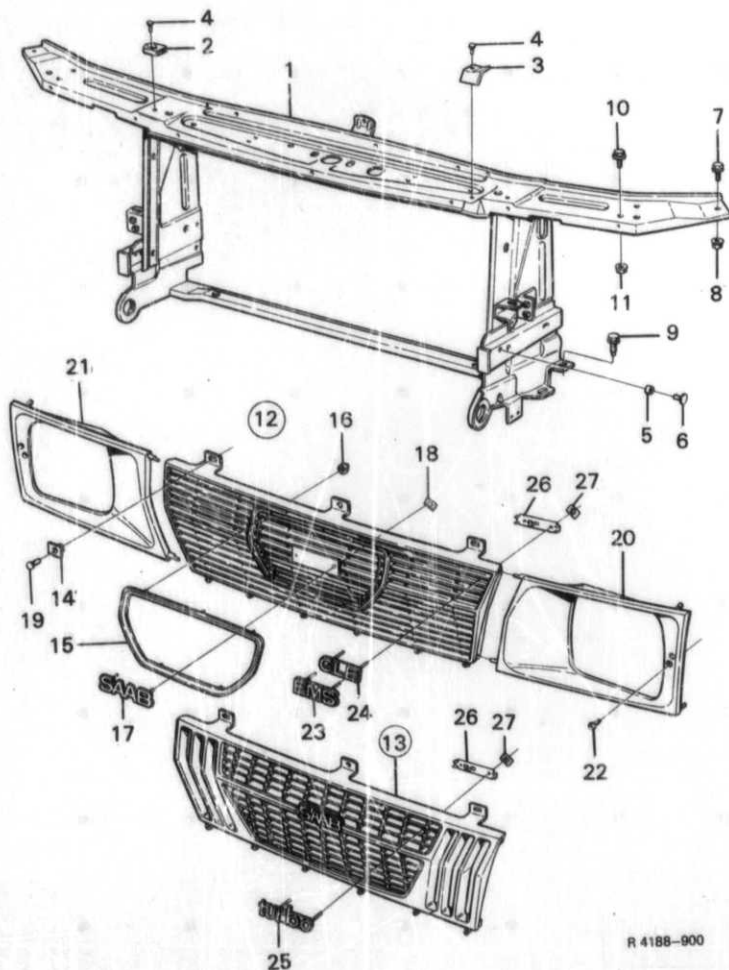

R 4188-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02
8 GROUP INDEX		
	Main body	3-D10
	Instrument panel	3-E06
	Hood, front, fenders	3-E14
	Doors, trunk lid	3-E20
	External details, glass, sealings	3-F16
	Upholstery, interior equipment and touch-up paint	3-G24
	Heating and ventilation system	3-J24
	Bumpers	3-K18

0650

Hood, front fenders
Front fenders

Motorhuv, front, skärmar
Franskärmar


Date
Datum
1987-10

Illustration
Bild nr
R5937

Group
Grupp
8

Page
Sida
41

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR	Notes Anmärkning
		900	US				
0020	1 92 37 363	1		1 Front fender Assy LH	Franskärm kpl V	3	(8274532)
0040	2 92 37 371	1		1 Front fender Assy RH	Franskärm kpl H	3	(8274540)
0060	3 82 74 854	1		1 Fender part, front LH	Skärmdel, främre V	3	
0100	4 82 74 862	1		1 Fender part, front RH	Skärmdel, främre H	3	
0120	5 92 37 389	1		1 Fender part, rear LH	Skärmdel, bakre V	5	(8274870)
0140	6 92 37 397	1		1 Fender part, rear RH	Skärmdel, bakre H	5	(8274888)
0160	6A 78 74 118	2		2 Fender edge	Skärnkant	3	
0180	7 92 34 378	1		1 Guide bar LH	Styrskena V	5	(8274557)
0200	7A 92 33 473	1		1 Attaching plate LH	Fästplåt V	4	
0220	8 92 34 386	1		1 Guide bar RH	Styrskena H	5	(8274566)
0240	8A 92 33 481	1		1 Attaching plate RH	Fästplåt H	4	
0260	9 82 67 395	4		4 Rubber buffer	Gummibuffert	5	
0280	10 82 87 666	4		4 Blind rivet	Blindnit	3	(82 15 683)
0300	11 82 78 558	2		2 Slide guard	Slitskydd	3	(8264970)
0320	12 82 11 294	2		2 Rubber buffer	Gummibuffert	3	
0340							
0400							

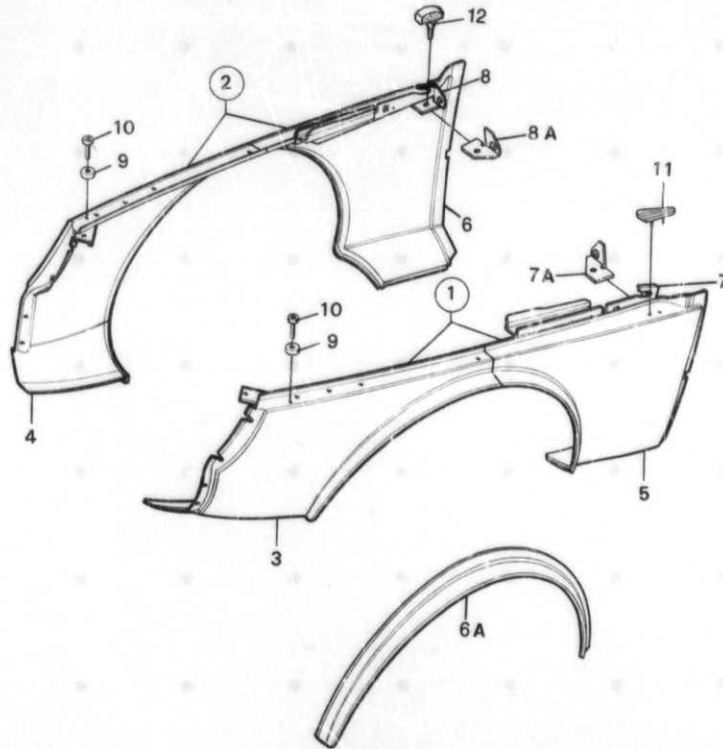

F. 5937-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

0700

Doors, trunk lid
Doors incl hinges, lock,
etc 3CK

Dörrar, bagagerumslucka
Dörrar inkl gångjärn, lås
etc 3CK

Date
Datum

Illustration
Bild nr

Group
Grupp


Page
Sida

1987-10

R9372

8

43

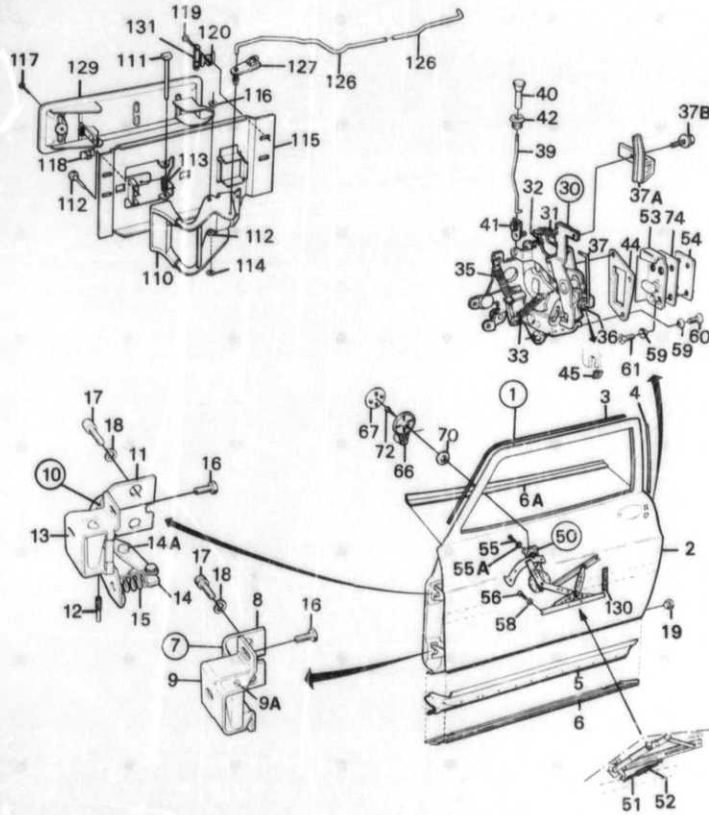

R 9372-900

Fig. Pos.	Part No Art nr	Quantity/Amtal		Description	Benämning	K/S SR / L	Notes Anmärkning
		900	US				
0020	1	82 88 096	1	1 Door assy LH	Dörr kpl V	4	
0040	1	82 49 989	1	1 Door assy RH	Dörr kpl H	4	
0060	2	82 88 714	1	1 Outer plate LH	Ytterplåt V	3 (76 02 022)	
0080	2	82 88 722	1	1 Outer plate RH	Ytterplåt H	3 (76 02 030)	
0100	3	82 24 917	1	1 Plate channel, door	Plåtskena, dörr-	5	
0120				seal LH	tätning V		
0140	3	82 24 925	1	1 Plate channel, door	Plåtskena, dörr-	5	
0160				seal RH	tätning H		
0180	4	82 24 933	2	2 Plate channel, door	Plåtskena, dörr-	5	
0200				seal	tätning		
0220	5	82 17 432	1	1 Part of inner plate,	Del av innerplåt,	5	
0240				lower, door LH	nedre, dörr V		
0260	5	82 17 440	1	1 Part of inner plate,	Del av innerplåt,	5	
0280				lower, door RH	nedre, dörr H		
0300	6	82 15 899	1	1 Part of outer plate,	Del av ytterplåt,	5	
0320				lower, door LH	nedre, dörr V		
0340	6	82 15 907	1	1 Part of outer plate,	Del av ytterplåt,	5	
0360				lower door RH	nedre, dörr H		
0370	6A	78 73 508	1	1 Part of outer plate,	Del av ytterplåt,	5	
0371				upper, door LH	övre, dörr V		
0372	6A	78 73 516	1	1 Part of outer plate,	Del av ytterplåt,	5	
0373				upper, door RH	övre, dörr H		
0375	7	69 12 570	1	1 Hinge, lower	Gångjärn, nedre	5	
0376				assy, LH	kpl V		
0377	7	69 12 588	1	1 Hinge, lower	Gångjärn, nedre	5	
0378				assy, RH	kpl H		
0380	8	82 36 390	2	2 Hinge, lower	Gångjärn, nedre	4	
0400	9	82 05 908	2	2 Hinge half, lower	Gångjärnshalva, nedre	3 (8205858)	
0420	9A	82 43 578	2	2 Hinge pin	Gångjärnstapp	3	
0430	10	69 12 596	1	1 Hinge, upper	Gångjärn, övre	5	
0431				assy, LH	kpl V		
0432	10	69 12 604	1	1 Hinge, upper	Gångjärn, övre	5	
0433				assy, RH	kpl H		
0440	11	69 12 596	1	1 Hinge half, upper	Gångjärnshalva, övre	4 (82 36 457)	
0460				assy, LH	kpl V		
0480	11	69 12 604	1	1 Hinge half, upper	Gångjärnshalva, övre	4 (82 36 405)	
0500				assy, RH	kpl H		
0520	12	82 06 393	2	2 Pin	..Tapp	3	
0540	13	82 04 095	1	1 Hinge half with stop	Gångjärnshalva med	4	
0560				stop V			
0580	13	82 64 103	1	1 Hinge half with stop	Gångjärnshalva med	4	
0600				RH	stop H		
0620	14	82 07 573	1	1 Lever assy LH	..Håvarm kpl V	6	
0640	14	82 07 581	1	1 Lever assy RH	..Håvarm kpl H	6	
0660	14A	82 06 476	2	2 Pin	..Tapp	3	
0680	15	82 06 369	2	2 Spring	..Fjäder	3	
0700	16	79 75 212	12	12 Screw	Skruv	5 (8262958)	
0720	17	82 35 698	12	12 Washer	Bricka	5	
0740	18	79 10 557	12	12 Rubber plug	Gummiplugg	5	
0760	19	70 38 342	2	2 Door lock, assy LH	Dörrlås, kpl V	4 (8256729)	
0780	30	92 93 895	1	1 Door lock, assy RH	Dörrlås, kpl H	4 (8256737)	
0800	30	92 93 903	1	2 Spring	..Fjäder	5	
0820	31	82 36 606	2	2 Spring	..Fjäder	5	
0840	32	84 57 566	2	2 Spring	..Fjäder	5	
0860	33	82 87 138	2	2 Spring	..Fjäder	5 (8256638)	
0870	35	82 87 138	2	2 Spring	..Fjäder	5 (8256554)	
0900	36	84 51 825	2	2 Bushing	..Bussning	4	
0920	37	84 51 817	2	2 Link	..Länk	5 (8470577)	
0925	37A	82 56 372	1	1 Adjusting link LH	..Justerlänk V	5	
0926	37A	82 56 380	1	1 Adjusting link RH	..Justerlänk H	5	
0927	37B	92 24 544	2	2 Screw	Skruv	5	
0960	39	84 58 713	1	1 Link LH	Länk V	5	
1000	39	84 58 721	1	1 Link RH	Länk H	5	
1020	39	84 51 478	1	1 Link LH	Länk V	5	
1040	39	84 51 486	1	1 Link RH	Länk H	5	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

0700

Doors, trunk lid
Doors incl hinges, lock,
etc 3CK

Dörrar, bagagerumslucka
Dörrar inkl gångjärn, lås
etc 3CK

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R9372

8

45

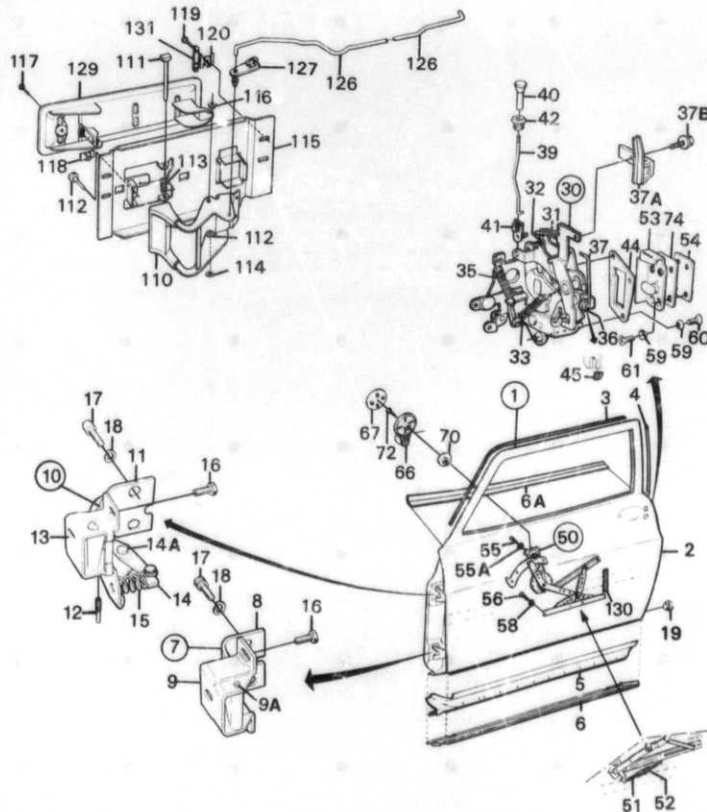


Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR	Notes Anmärkning
		900	US				
1000	40	94 46 022	2	2 Knob	Knapp	3	
1000	41	84 61 675	2	2 Clip	Clip	5	
1100	42	84 56 592	2	2 Bushing	Bussning	4	
1140	44	84 56 006	2	2 Spacer	Mellanlägg	4	
1160	45	84 56 808	2	2 Damper	Dämpare	4	
1180	50	82 72 692	1	1 Window regulator assy LH	Fönsterhiss, kpl V	5 (38)	
1200	50	82 72 700	1	1 Window regulator, as- sy RH	Fönsterhiss, kpl H	5 (38)	
1220	50	82 74 011	1	1 Window regulator LH	Fönsterhiss, kpl V	5 (39)	
1240	50	82 74 029	1	1 Window regulator RH	Fönsterhiss, kpl H	5 (38)	
1241	51	84 03 438	2	2 Spring	Fjäder	5 (38)	
1280	52	84 03 446	2	2 Rubber hose	Gummislang	5 (38)	
1300	53	82 62 750	1	1 Striker plate LH	Stutblock V	5 (8453250)	
1320	53	82 62 768	1	1 Striker plate RH	Stutblock H	5 (8453268)	
1340	54	82 41 994	2	2 Nut plate	Brickmutter	5 (38)	
1360	55	79 66 639	10	10 Screw	Skruv	5 (38)	
1361	55	79 72 441	8	8 Screw	Skruv	5 (39)	
1370	55A	79 16 497	2	2 Washer	Bricka	5 (68)	
1380	56	79 34 730	4	4 Screw	Skruv	5 (38)	
1381	56	80 59 529	4	4 Screw	Skruv	5 (39)	
1420	58	78 15 564	4	4 Washer	Bricka	5 (38)	
1421	58	79 58 506	4	4 Washer	Bricka	5 (39) - 1979	
1422	58	79 10 540	4	4 Washer	Bricka	5 (1980)	
1440	59	79 34 136	14	14 Washer	Bricka	5 (38)	
1460	60	80 55 980	6	6 Screw	Skruv	5 (38)	
1461	61	79 37 964	8	8 Screw	Skruv	5 (38)	
1500	66	94 45 351	2	2 Crank, window regula- tor assy	Hissvev kpl	4	
1540	67	84 76 301	2	2 Cover, crank	Lock, hissvev	4	
1560	69	73 39 393	2	2 Spacer	Mellanlägg	5 (38)	
1570	70	84 02 190	2	2 Washer	Bricka	5 (38)	
1600	72	80 59 420	2	2 Screw	Skruv	5 (39)	
1601	72	94 61 096	2	2 Screw	Skruv	5 (39)	
1620	74	84 74 553	4	4 Spacer	Mellanlägg	4	
1880	110	94 03 056	1	1 Handle assy LH	Handtag kpl V	5 (38)	
1900	110	94 03 064	1	1 Handle assy RH	Handtag kpl H	5 (38)	
1920	111	94 03 072	2	2 Shaft	Axel	5 (38)	
1940	112	84 25 174	2	2 Rubber plug	Gummipugg	5 (38)	
1960	113	94 03 080	1	1 Spring LH	Fjäder V	5 (38)	
1980	113	94 16 793	1	1 Spring RH	Fjäder H	5 (38)	
2000	114	79 68 076	2	2 Clip	Clip	5 (38)	
2020	115	94 07 453	1	1 Bracket LH	Konsol V	5 (38)	
2040	115	94 07 461	1	1 Bracket RH	Konsol H	5 (38)	
2060	116	94 11 232	4	4 Bushing	Bussning	4	
2080	117	79 67 581	2	2 Screw	Skruv	5 (38)	
2100	118	84 54 358	2	2 Clip	Clip	5 (38)	
2120	119	79 22 239	8	8 Screw	Skruv	5 (7822297)	
2140	120	86 01 91C	8	8 Clip	Clip	5 (38)	
2181	126	82 77 519	1	1 Rod, door lock LH	Stång, dörrlås V	5 (8247603)	
2182	126	82 77 527	1	1 Rod, door lock RH	Stång, dörrlås H	5 (8247611)	
2200	127	84 53 756	4	4 Clip	Clip	5 (38)	
2220	129	94 03 098	1	1 Close handle LH	Stängningshandtag V	5 (38)	
2240	129	94 03 106	1	1 Close handle RH	Stängningshandtag H	5 (38)	
2260	130	82 47 777	4	4 Spacer	Mellanlägg	5 (38)	
2280	131	94 26 404	4	4 Washer	Bricka	5 (38)	

R 9372-900

38. Ch. 90791024796 - 90792001986 - 90796003834.
39. Ch. 90791024797 - 90792001987 - 90796003835 -
68. Ch. 90791024797 - 90792001987 - 90796003835 -

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18



0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D16
Instrument panel	3-E06
Hood, front fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K15

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S	Notes SR / L	Anmärkning
		900	US					
0020	1	82 68 138	1	1 Door, front assy LH	Dörr, främre kpl V	4		
0040	1	82 46 720	1	1 Door, front assy RH	Dörr, främre kpl H	4		
0060	2	82 88 763	1	1 Outer plate LH	Ytterplåt V	3	(76 02 048)	
0080	2	82 88 771	1	1 Outer plate RH	Ytterplåt H	3	(76 02 055)	
0091	2A	78 73 508	1	1 Part of outer plate, upper, door LH	Del av ytterplåt, övre, dörr V	5		
0092	2A	78 73 516	1	1 Part of outer plate, upper, door RH	Del av ytterplåt, övre, dörr H	5		
0100	3	82 17 432	1	1 Inner plate, door LH	Innerplåt, dörr V	5		
0140	3	82 17 440	1	1 Inner plate, door RH	Innerplåt, dörr H	5		
0180	4	82 24 917	1	1 Plate channel, door seal LH	Plåtskena, dörr-tätning V	5		
0200	4	82 24 925	1	1 Plate channel, door seal RH	Plåtskena, dörr-tätning H	5		
0240	5	82 24 933	2	2 Plate channel, door seal	Plåtskena, dörr-tätning	5		
0321	6	69 25 853	1	1 Door rear assy LH	Dörr bakre kpl V	5	(8298155)	
0322	6	69 25 861	1	1 Door rear assy RH	Dörr bakre kpl H	5	(8298163)	
0361	7	82 86 833	1	1 Outer plate LH	Ytterplåt V	5		
0362	7	82 86 841	1	1 Outer plate RH	Ytterplåt H	5		
0380	8	82 43 990	1	1 Plate channel, door seal LH	Plåtskena, dörr-tätning V	5		
0420	8	82 44 005	1	1 Plate channel, door seal RH	Plåtskena, dörr-tätning H	5		
0460	9	82 24 933	2	2 Plate channel, door seal	Plåtskena, dörr-tätning	5		
0480	10	69 12 570	1	1 Hinge, lower assy, LH	Gångjärn, nedre kpl V	5		
0481	10	69 12 588	1	1 Hinge, lower assy, RH	Gångjärn, nedre kpl H	5		
0500	11	82 38 390	2	2 Hinge, lower	Gångjärn, nedre	4		
0520	12	82 05 908	2	2 Hinge half, lower	Gångjärnshalva, nedre	4		
0540	12A	82 43 578	2	2 Hinge pin	Gångjärnstapp	3	(8205856)	
0550	13	69 12 596	1	1 Hinge, upper assy, LH	Gångjärn, övre kpl V	5		
0552	13	69 12 604	1	1 Hinge, upper assy, RH	Gångjärn, övre kpl H	5		
0550	14	69 12 596	1	1 Hinge half, upper assy LH	Gångjärnshalva, övre kpl V	4	(82 36 457)	
0550	14	69 12 604	1	1 Hinge half, upper assy RH	Gångjärnshalva, övre kpl H	4	(82 36 465)	
0640	15	82 06 393	2	2 Pin	Tapp	3		
0660	16	82 64 095	1	1 Hinge half with stop assy LH	Gångjärnshalva med stopp kpl V	4		
0700	16	82 64 103	1	1 Hinge half with stop assy RH	Gångjärnshalva med stopp kpl H	4		
0740	17	82 07 573	1	1 Lever assy LH	Håvarm kpl V	6		
0760	17	82 07 581	1	1 Lever assy RH	Håvarm kpl H	6		
0780	17A	82 06 476	2	2 Pin	Tapp	3		
0800	18	82 06 369	2	2 Spring	Fjäder	3		
0820	19	78 75 212	12	12 Screw	Skruv	5	(8282958)	
0840	20	80 29 985	12	12 Washer	Bricka	5		
0860	21	80 29 985	12	12 Washer	Bricka	5		
0880	22	82 35 699	12	12 Screw	Skruv	5		
0900	24	79 10 557	12	12 Washer	Bricka	5		
0920	25	82 81 775	1	1 Hinge, upper assy LH	Gångjärn, övre kpl V	4	(82 41 036)	
0940	25	82 81 783	1	1 Hinge, upper assy RH	Gångjärn, övre kpl H	4	(82 41 044)	
0960	26	82 43 578	2	2 Pin	Tapp	3		
1000	27	82 41 083	6	6 Screw	Skruv	5		
1020	28	82 73 796	1	1 Hinge, lower assy LH	Gångjärn, nedre kpl V	4		

0750

Doors, trunk lid
doors incl hinges, lock,
5CK

Dörrar, bagagerumslucka
dörrar incl gångjärn, lås
5CK

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R5901

8


49

Fig. Pos.	Part No Art nr	Quantity/Åntal 900	US	Description	Benämning	K/S R/L	Notes Anmärkning
1080	28 82 73 907	1		1 Hinge, lower assy	Gångjärn, nedre kpl	4	
1100				RH	H		
1120	29 82 43 578	2		2 Pin	.Tapp	3	
1140	30 82 41 101	6		6 Screw	.Skruv	5	
1160	31 92 92 971	1		1 Bracket LH	.Fäste V	3	(82 43 594)
1180	31 92 82 989	1		1 Bracket RH	.Fäste H	6	(82 43 602)
1200	32 52 43 651	1		1 Spring	.Fjäder	5	
1220	33 82 43 689	4		4 Knurled bolt	.Räffelsbult	5	
1240	34 79 64 711	12		12 Nut	.Mutter	3	
1260	35 82 41 291	2		2 Washer, lower	.Bricka, nedre	5	
1280	36 82 41 119	2		2 Washer, upper	.Bricka, övre	5	
1300	38 79 68 613	10		10 Screw	.Skruv	5	
1320	39 70 35 342	4		4 Rubber plug	.Gummiplugg	5	
1340	45 76 03 103	1		1 Channel assy front	.Styrprofil kpl fram-	6	
1360				door LH	dörr V		
1380	45 76 03 111	1		1 Channel assy front	.Styrprofil kpl fram-	6	
1400				door RH	dörr H		
1420	46 76 15 485	1		1 Channel, rear door,	.Styrprofil, bakdörr,	5	(82 41 457)
1440				upper LH	övre V		
1460	46 76 15 511	1		1 Channel, rear door,	.Styrprofil, bakdörr,	5	(82 41 465)
1480				upper RH	övre H		
1500	47 76 15 545	1		1 Channel, rear door,	.Styrprofil, bakdörr,	5	(82 41 978)
1520				lower LH	nedre V		
1540	47 76 15 552	1		1 Channel, rear door,	.Styrprofil, bakdörr,	5	(82 41 988)
1560				lower RH	nedre H		
1580	48 79 71 294	4		4 Screw	.Skruv	5	
1600	49 79 36 180	4		4 Screw	.Skruv	5	(98)
1620	50 79 34 433	4		4 Screw	.Skruv	5	
1640	51 70 85 073	4		4 Washer	.Bricka	5	
1660	52 82 04 780	2		2 Rubber plug	.Gummiplugg	5	
1680	53 92 93 853	1		1 Door lock, front door	.Dörrlås, framdörr,	4	(82 56 745)
1700				assy LH	kpl V		
1720	53 92 93 861	1		1 Door lock, front door	.Dörrlås, framdörr,	4	(82 56 752)
1740				assy RH	kpl H		
1760	54 82 36 605	2		2 Spring	.Fjäder	5	
1780	55 84 57 566	2		2 Spring	.Fjäder	5	
1800	56 82 87 138	2		2 Spring	.Fjäder	5	(82 56 638)
1820	57 82 87 138	2		2 Spring	.Fjäder	5	(82 56 554)
1840	58 84 51 825	2		2 Bushing	.Bussning	5	
1860	59 84 51 817	2		2 Link	.Länk	5	(84 706 77)
1880	59 84 51 817	2		2 Link	.Länk	5	
1900	59 84 51 817	2		2 Link	.Länk	5	
1920	59 84 51 817	2		2 Link	.Länk	5	
1940	59 84 51 817	2		2 Link	.Länk	5	
1960	59 84 51 817	2		2 Link	.Länk	5	
1980	59 84 51 817	2		2 Link	.Länk	5	
2000	59 84 51 817	2		2 Link	.Länk	5	
2020	59 84 51 817	2		2 Link	.Länk	5	
2040	59 84 51 817	2		2 Link	.Länk	5	
2060	59 84 51 817	2		2 Link	.Länk	5	
2080	59 84 51 817	2		2 Link	.Länk	5	
2100	59 84 51 817	2		2 Link	.Länk	5	

R 5901-900

41. Ch. 90791025823 - 90796004127.
42. Ch. 90791025824 - 90796004128 -
98. Is deleted

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02
8 GROUP INDEX		
	Main body	3-D10
	Instrument panel	3-E06
	Hood, front, fenders	3-E14
	Doors, trunk lid	3-E20
	External details, glass, sealings	3-F16
	Upholstery, interior equipment and touch-up paint	3-G24
	Heating and ventilation system	3-J24
	Bumpers	3-K18

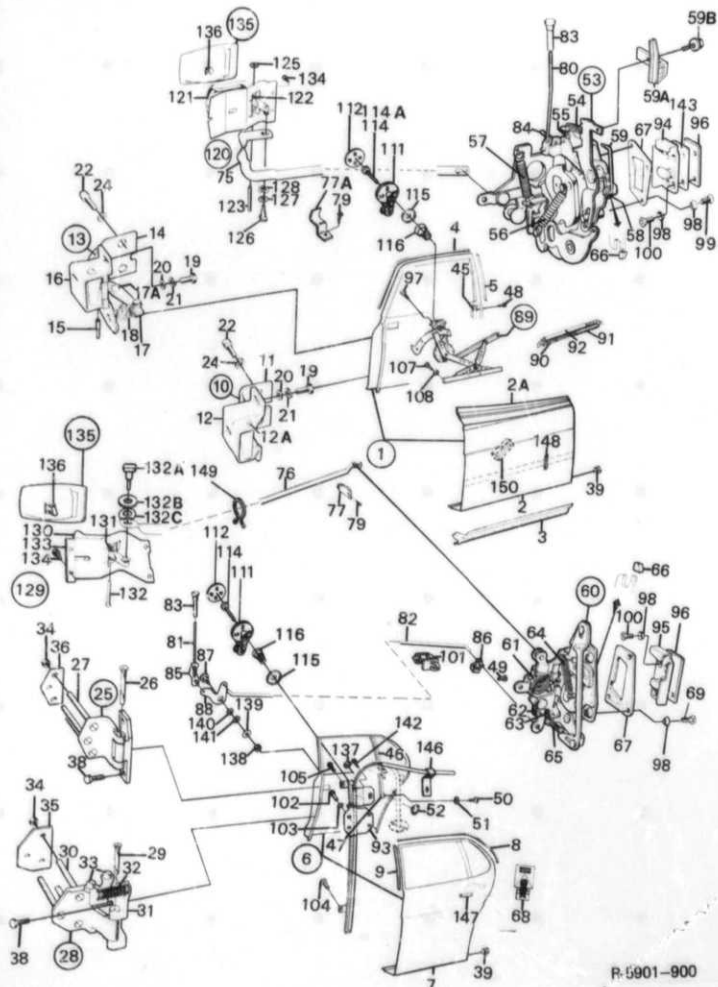

R-5901-900

SAAB
genuine parts
original reservdelar

3-F04

SAAB 900
M79-80

MASTER INDEX

Doors, trunk lid
doors incl hinges, lock,
5CK

Dörrar, bagagerumslucka
dörrar incl gångjärn, lås
5CK

Date
Datum
1987-10

Illustration
Bild nr
R5901

Group
Grupp
8

Page
Sida
51

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
2120	69	79 73 472	6	6 Screw	Skruv	5	(80 55 972)
2140	75	92 23 256	1	1 Operating link, front door LH	Manöverlänk, främrdörr V	5	15) (8477291)
2160	75	92 23 264	1	1 Operating link, front door RH	Manöverlänk, främrdörr H	5	15) (8477309)
2200	75	92 23 256	1	1 Operating link, front door LH	Manöverlänk, främrdörr V	5	16) (8275794)
2201	75	92 23 264	1	1 Operating link, front door RH	Manöverlänk, främrdörr H	5	16) (8275802)
2202	75	92 23 264	1	1 Operating link, front door LH	Manöverlänk, främrdörr V	5	
2203	75	92 23 264	1	1 Operating link, front door RH	Manöverlänk, främrdörr H	5	
2220	76	82 71 611	1	1 Operating link, rear door LH	Manöverlänk, bakdörr V	5	
2240	76	82 71 629	1	1 Operating link, rear door RH	Manöverlänk, bakdörr H	5	
2260	77	84 02 067	2	2 Retainer, rear door	Stödklack, bakdörr	6	
2310	77A	82 49 997	2	2 Retainer, front door	Stödklack, främrdörr	6	
2320	79	79 22 263	2	4 Screw	Skruv	5	
2340	80	82 69 375	1	1 Link, front door LH	Länk, främrdörr V	5	
2360	80	82 69 383	1	1 Link, front door RH	Länk, främrdörr H	5	
2380	81	82 67 130	2	2 Link, rear door	Länk, bakdörr	5	
2400	82	84 15 929	2	2 Link, rear door	Länk, bakdörr	5	
2420	83	94 46 022	4	4 Knob	Knapp	3	
2440	84	84 61 675	2	2 Clip	Clip	5	
2460	85	71 53 895	4	4 Clip	Clip	5	
2480	86	84 53 755	2	2 Clip	Clip	5	
2500	87	84 41 925	2	2 Screw	Skruv	6	
2520	88	97 07 217	1	1 Lever arm LH	Hisvarm V	6	
2540	88	84 15 887	1	1 Lever arm RH	Hisvarm H	6	
2560	89	82 72 676	1	1 Window regulator assy front door LH	Fönsterhiss kpl främrdörr V	5	38)
2600	89	82 72 684	1	1 Window regulator assy front door RH	Fönsterhiss kpl främrdörr H	5	38)
2620	89	82 74 037	1	1 Window regulator, front door LH	Fönsterhiss, främrdörr V	5	39)
2622	89	82 74 045	1	1 Window regulator, front door RH	Fönsterhiss, främrdörr H	5	39)
2624	90	84 03 081	4	4 Spring	Fjäder	5	38)
2640	91	84 03 446	2	2 Rubber hose	Gummislang	5	38)
2660	92	84 23 444	2	2 Rubber hose	Gummislang	5	38)
2680	93	82 49 013	1	1 Window regulator, rear door LH	Fönsterhiss, bakdörr V	5	
2700	93	82 49 013	1	1 Window regulator, rear door RH	Fönsterhiss, bakdörr H	5	
2720	94	82 62 750	1	1 Striker plate, front door LH	Slutbleck, främrdörr V	5	
2740	94	82 62 768	1	1 Striker plate, front door RH	Slutbleck, främrdörr H	5	
2760	95	82 62 750	1	1 Striker plate, rear door LH	Slutbleck, bakdörr V	5	
2780	95	82 62 768	1	1 Striker plate, rear door RH	Slutbleck, bakdörr H	5	
2800	96	82 41 994	4	4 Nut plate	Brickmutter	5	
2820	97	79 68 639	10	10 Screw	Skruv	5	38)
2840	97	79 72 441	3	8 Screw	Skruv	5	39)
2860	98	79 34 136	28	28 Washer	Bricka	5	
2880	99	80 55 980	12	12 Screw	Skruv	5	
2900	100	79 37 956	16	16 Screw	Skruv	5	
2920	101	84 44 614	2	2 Guide	Styrning	5	
3000	102	79 34 433	4	4 Screw	Skruv	5	
3060	103	79 16 489	4	4 Washer	Bricka	5	

15. Ch. 90791015864 - 90796003380.

16. Ch. 90791015865 - 90796003381.

38. Ch. 90791024796 - 90792001986 - 90796003834.

39. Ch. 90791024797 - 90792001987 - 90796003835.

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

9 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

0750

Doors, trunk lid
doors incl hinges, lock,
5CK

Dörrar, bagagerumslucka
dörrar incl gångjärn, lås
5CK

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

8

53

Fig. Pos.	Part No Art nr	Quantity/Amount		Description	Benämning	K/S SR	Notes Anmärkning
		900	US				
3100	104	2		2 Screw	Skruv	5	
3121	105	2		6 Screw	Skruv	5	
3140	107	4		4 Screw	Skruv	5 (38)	
3141	107	4		4 Screw	Skruv	5 (39)	
3180	108	4		4 Washer	Bricka	5 (38)	
3181	108	4		4 Washer	Bricka	5 (39) -1979	
3182	108	4		4 Washer	Bricka	5 1990-	
3180	111	4		4 Crank window regulat-	Hissvev	4	
3200				or			
3220	112	4		4 Cover, crank	Lock, hissvev	4	
3240	114	4		4 Screw	Skruv	5 (39)	
3241	114A	4		4 Screw	Skruv	5 (39)	
3260	115	4		4 Spacer	Mellanlägg	5	
3280	116	4		4 Spring	Fjäder	5 (13)	
3281	116	4		4 Spring	Fjäder	5 (14)	
3305	120	1		1 Door handle, inner	Innerhandtag kpl	5 (8403321)	
3306				assy front door LH	framdörr V		
3385	120	1		1 Door handle, inner	Innerhandtag kpl	5 (8403339)	
3386				assy front door RH	framdörr H		
3380	121	1		1 Handle	Handtag	5 (76)	
3381	121	2		2 Handle	Handtag	5 (77)	
3400	122	2		2 Spring	Fjäder	5	
3420	123	2		2 Rivet pin	Nitstift	3	
3440	125	2		2 Washer	Bricka	5	
3480	128	2		2 Rivet	Nit	5	
3500	127	2		2 Washer	Bricka	5	
3520	128	2		2 Washer	Bricka	5	
3605	129	1		1 Door handle, inner	Innerhandtag kpl bak-	5 (8415937)	
3606				assy rear door LH	dörr V		
3607	129	1		1 Door handle, inner	Innerhandtag kpl bak-	5 (8415945)	
3608				assy rear door RH	dörr H		
3620	130	2		2 Handle	Handtag	5 (76)	
3621	130	2		2 Handle	Handtag	5 (77)	
3640	131	2		2 Spring	Fjäder	5	
3660	132	2		2 Rivet pin	Nitstift	3	
3670	132A	2		2 Rivet	Nit	5	
3671	132B	2		2 Washer	Bricka	5	
3672	132C	2		2 Washer	Bricka	5	
3680	133	1		1 Bottom plate LH	Bottenplatta V	5	
3700	133	1		1 Bottom plate RH	Bottenplatta H	5 (98)	
3720	134	14		14 Screw	Skruv	5	
3740	135	4		4 Cover assy	Kåpa kpl	4	
3760	136	4		4 Clip	Clip	5	
3780	137	2		2 Washer	Bricka	5	
3800	138	2		2 Nut	Mutter	5	
3820	139	2		2 Washer	Bricka	5	
3840	140	2		2 Washer	Bricka	5	
3860	141	4		4 Plastic washer	Plastbricka	5	
3880	142	2		2 Screw	Skruv	5	
3900	143	2		2 Spacer	Mellanlägg	4	
3920	146	2		2 Clip	Clip	5	
3940	147	2		2 Chattering cover	Skrammelskydd	3 (8260796)	
3960	148	2		2 Spacer	Mellanlägg	5 (38)	
3980	149	2		2 Clip	Clip	5	
4000	150	2		2 Spacer RHD	Distans RHD	5	

13. Ch.-90791014646. -90796004463.
14. Ch.-90791014647. -90796004464.
38. Ch.-90791024796. -90792001986. -90796003834.
39. Ch.-90791024797. -90792001987. -90796003835.
76. Ch.-90801021884.
77. Ch.-90801021885.
98. Is deleted

R 5901-900

- 0 General 1-A02
1 Tools 1-H02
2 Engine 2-A02
3 Electrical system, Instruments 2-F02
4 Transmission 2-J02
5 Brakes 3-A02
6 Front assembly, Steering 3-B02
7 Suspension, Wheels 3-C02
8 Body 3-D02
9 Accessories, Labels 3-L02
10 Numerical register 4-A02

8 GROUP INDEX

- Main body 3-D10
Instrument panel 3-E06
Hood, front. fenders 3-E14
Doors, trunk lid 3-E20
External details, glass, sealings 3-F16
Upholstery, interior equipment and touch-up paint 3-G24
Heating and ventilation system 3-J24
Bumpers 3-K18

0800

Doors, trunk lid
Trunk door, hinges, lock

Dörrar, bagagerumslucka
Bagagerumsdörr, gångjärn
lås

Date
Datum
1987-10


Illustration
Bild nr
R5902

Group
Grupp
8

Page
Sida
55

Fig. Pos.	Part No Art nr	Quantity/Åntal	Description	Benämning	K/S SR	Notes Anmärkning
		900				
		US				
0020	1	76 17 418	1	1 Trunk door	Bagagerumsdörr	4 - 1979
0040	1	69 27 032	1	1 Trunk door	Bagagerumsdörr	4 1980 - (8278889)
0060	2	82 51 217	2	2 Hinge	Gångjärn	5
0080	3	82 52 888	2	2 Axle	Axel	5
0120	4	82 88 144	4	4 Bushing	Bussning	3 (8252397)
0140	5	80 29 985	2	2 Washer	Bricka	5 (7904394)
0160	6	73 19 007	2	2 Cotter pin	Saxpinne	5
0180	7	82 52 314	2	2 Washer	Bricka	5 (8097883)
0200	8	92 33 719	4	4 Screw	Skruv	3 (8258071)
0220	10	92 31 796	2	2 Gas spring set	Sats gasfjäder	5
0240	11	82 52 363	8	8 Washer	Bricka	5
0260	12	82 52 553	4	4 Clip	Säkring	5
0300	7	82 86 072	2	2 Locating piece	Styrklock	5
0340	16	80 97 719	4	4 Screw	Skruv	5
0360	20	84 64 505	1	1 Door lock	Dörrlås	5 - 1979
0380	20	82 78 218	1	1 Door lock	Dörrlås	5 1980 -
0400	21	82 57 016	1	1 Tie rod	Dragstäng	5 - 1979 ALT TO 9225459 64)
0420	21	92 25 459	1	1 Tie rod	Dragstäng	5 - 1979 ALT TO 8257016 64)
0440	21	82 78 863	1	1 Tie rod	Dragstäng	5 1980 -
0460	22	84 60 172	1	1 Adjustment nut	Justermutter	5
0480	23	73 58 300	1	1 Bushing	Bussning	4 99)
0490	23	82 85 843	1	1 Bushing	Bussning	4 100)
0500	24	84 61 675	1	1 Clip	Clip	5
0520	25	80 97 883	1	1 Screw	Skruv	5
0540	26	80 29 989	2	2 Washer	Bricka	5
0560	27	84 51 825	1	1 Bushing	Bussning	4
0580	28	84 60 149	1	1 Tie rod	Manöverstäng	5 - 1979
0600	28	82 79 812	1	1 Tie rod	Manöverstäng	5 1980 -
0620	29	84 64 539	1	1 Striker plate	Slutbleck	5
0640	30	80 55 998	3	3 Screw	Skruv	5
0660	31	84 70 429	1	1 Lock cylinder assy	Låscylinder kpl	3 - 1979
0680	31A	82 83 772	1	1 Lock cylinder assy	Låscylinder kpl	5 1980 -
0700	32	84 86 409	1	1 Lock cylinder	Låscylinder	5 - 1979 (8486417)
0720	32	82 83 780	1	1 Lock cylinder	Låscylinder	5 1980 -
0740	33	84 61 436	1	1 Spring	Fjäder	5 - 1979
0760	33	84 51 957	1	1 Spring	Fjäder	5 1980 -
0780	34	84 61 451	1	1 Operating link	Manöverlänk	5 - 1979
0800	34	82 86 551	1	1 Operating link	Manöverlänk	5 1980 -
0820	35	84 61 469	1	1 Driver	Medbringare	3 - 1979
0840	35	84 51 973	1	1 Driver	Medbringare	3 1980 -
0860	36	84 61 386	1	1 Pad	Mellanlägg	4 - 1979
0880	37	84 51 981	1	1 Ring	Säkringsring	4
0900	37A	84 52 252	1	1 Seal ring	Tättningsring	4 1980 -
0920	38	80 59 388	2	2 Screw	Skruv	5 - 1979
0940	39	84 70 787	X	X Key blank	Nyckelämne	3
0960	40	71 62 308	2	2 Rubber plug	Gummiplugg	5
0980	41	82 53 395	2	2 Seal	Tätning	5
1000	42	82 53 411	4	4 Washer	Bricka	5
1020	43	79 21 281	4	4 Screw	Skruv	5
1040	44	82 53 932	4	4 Bracket	Fäste	5 SEE SI SECTION 850-
1060	45	71 63 066	2	2 Rubber plug	Gummiplugg	5
1080	46	82 06 203	2	2 Rubber plug	Gummiplugg	5
1100	47	82 87 112	1	1 Nut washer	Mutterbricka	5
1140	48	82 60 606	2	2 Buffer, shelf	Buffert, hatthylla	5
1160	49	79 22 347	2	2 Screw	Skruv	5
1180	50	82 23 371	2	2 Cover	Lock	3 (8412934)
1200	51	94 89 303	1	1 Catch, shelf	Spärr, hatthylla	5 (9412388)
1220	52	94 12 636	1	1 Plug	Plugg	5
1240	53	79 74 025	2	2 Screw	Skruv	5 (7970536)
1260	54	92 37 991	1	1 Edge guard LH	Kantskydd V	3 GB (8279770, 8279697)

54. See si section 830-
99. Ch. - 90791032120, - 90792003854, - 90796004465
100. Ch. 90791032121, - 90792003855, - 90796004466 -

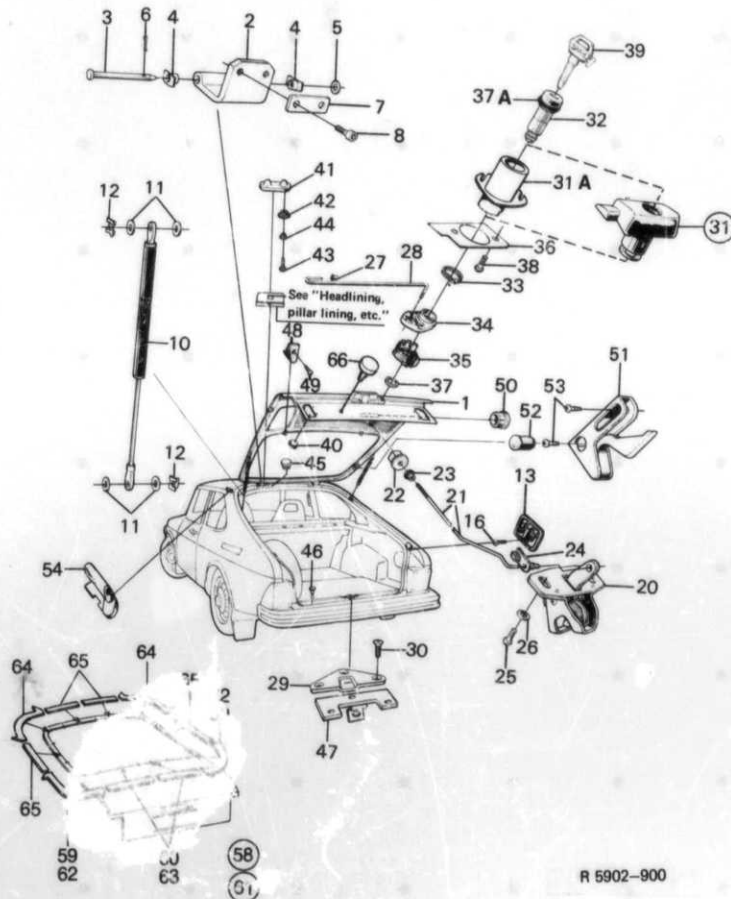

R 5902-900

0800

Doors, trunk lid
Trunk door, hinges, lock

Dörrar, bagagerumslucka
Bagagerumsdörr, gångjärn
lås


Date
Datum
1987-10

Illustration
Bild nr
R5902

Group
Grupp
8

Page
Sida
57

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R L	Notes Anmärkning
		900	US				
1280	54 92 38 007	1		1 Edge guard RH	Kantskydd H	3	GB (8279789,8279705)
1300	58 78 73 714	1		1 Repair kit, trunk door	Reparationssats, bagagerumsdörr	5	
1310							
1320	59 92 84 498	2		2 Flange plate, lower	Flänsplåt, nedre	5	
1330	60 92 84 514	2		2 Flange plate, lower	Flänsplåt, nedre	5	
1340	61 78 73 722	1		1 Repair kit, trunk door	Reparationssats, bagagerumsdörr	5	
1350							
1360	62 92 84 498	2		2 Flange plate, lower	Flänsplåt, nedre	5	
1370	63 92 84 514	2		2 Flange plate, lower	Flänsplåt, nedre	5	
1380	64 92 84 490	2		2 Flange plate, upper corner	Flänsplåt, övre hörn	5	
1390							
1400	65 92 84 506	4		4 Flange plate, side + upper	Flänsplåt, sida + övre	5	
1410							
1420	66 92 21 987			2 Plug	Plugg	5	(9231168) US

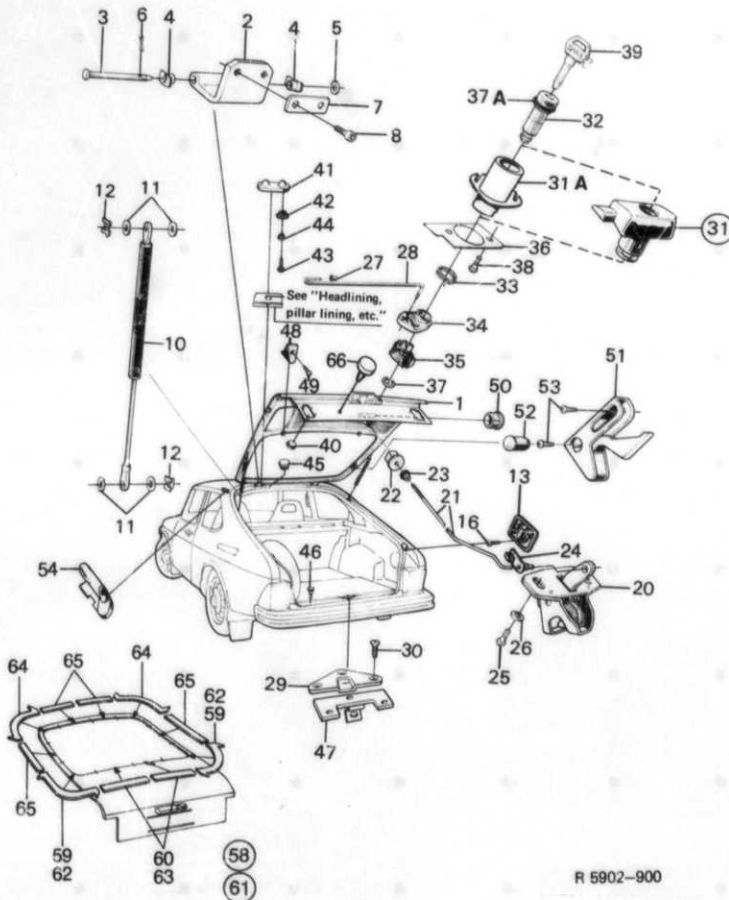

R 5902-900

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

0890

Doors, trunk lid
Outside handle, lock
cylinder

Dörrar, bagagerumslucka
Yttre handtag, låscylinder

Date
Datum

Illustration
Bild nr




Group
Grupp

Page
Sida


59

Fig. Pos.	Part No Art nr	Quantity/Amount		Description	Benämning	K/S SR	Notes Anmärkning
		900	US				
0020	1	82 49 161	2	2 Outside handle assy	Yttre handtag kpl	5	
0040	2	84 78 364	2	2 Spring	Fjäder	5	
0060	3	82 49 914	2	2 Clasp	Trycke	5	
0080	4	82 38 107	2	2 Sliding plane	Glidbana	5	
0100	5	82 49 922	2	2 Sliding block	Glidklack	5	
0120	6	82 38 099	2	2 Guide	Styrning	4	
0140	7	82 38 115	1	1 Bearing LH	Lager V	4	
0160	7	82 38 123	1	1 Bearing RH	Lager H	4	
0180	8	82 37 323	2	2 Pad	Mellanlägg	4	
0200	9	84 08 270	1	1 Retainer LH	Hållare V	5	
0220	9	84 08 286	1	1 Retainer RH	Hållare H	5	
0240	9	82 45 904	1	1 Retainer LH	Hållare V	5	5 SCK
0260	9	82 45 896	1	1 Retainer RH	Hållare H	5	5 SCK
0280	10	84 29 441	2	2 Pad	Mellanlägg	4	
0300	11	80 19 531	2	2 Screw	Skruv	5	
0320	12	79 10 524	2	2 Washer	Bricka	5	
0340	13	70 88 073	2	2 Washer	Bricka	5	5 SCK
0360	14	79 34 797	2	2 Screw	Skruv	5	5 SCK
0380	14	80 59 578	2	2 Screw	Skruv	5	5 SCK
0400	15	79 10 540	2	2 Washer	Bricka	5	
0420	22	84 70 353	1	1 Door lock cylinder	Dörrlåscylinder kpl	3	
0440				assy with 2 keys LH	med 2 nycklar V		
0460	22	84 70 361	1	1 Door lock cylinder	Dörrlåscylinder kpl	3	
0480				assy with 2 keys RH	med 2 nycklar H		
0500	23	84 06 409	2	2 Lock cylinder with 2	Låscylinder med 2	3	
0520				keys	nycklar		
0540	24	84 52 252	2	2 Seal ring	Tätningssring	4	
0560	25	84 51 981	2	2 Ring	Säkringsring	4	
0580	26	84 51 957	2	2 Spring	Fjäder	5	
0600	27	84 51 973	2	2 Driver	Medbringare	3	
0620	28	84 51 965	2	2 Plastic link	Plastlänk	3	
0640	29	84 08 361	2	2 Gasket	Packning	4	
0660	30	84 53 227	2	2 Clip	Clip	5	
0680	31	84 70 767	X	X Key blank	Nyckelämne	3	
0700	33	82 49 161	2	2 Outside handle assy	Yttre handtag kpl	5	
0720				rear door	bakdörr		5 SCK
0740	34	84 78 364	2	2 Spring	Fjäder	5	5 SCK
0760	35	82 49 914	2	2 Clasp	Trycke	5	5 SCK
0780	36	82 38 107	2	2 Sliding plane	Glidbana	5	5 SCK
0800	37	82 49 922	2	2 Sliding block	Glidklack	5	5 SCK
0820	38	82 38 099	2	2 Guide	Styrning	4	5 SCK
0840	39	82 38 115	1	1 Bearing LH	Lager V	4	5 SCK
0860	39	82 38 123	1	1 Bearing RH	Lager H	4	5 SCK
0880	40	82 37 323	2	2 Pad	Mellanlägg	4	5 SCK
0900	41	82 43 966	2	2 Retainer	Hållare	5	5 (1) SCK
0920	41	82 86 858	2	2 Retainer	Hållare	5	5 (2) SCK
0940	42	84 29 441	2	2 Pad	Mellanlägg	4	5 SCK
0960	43	80 59 230	2	2 Screw	Skruv	5	5 SCK
0980	44	79 10 524	2	2 Washer	Bricka	5	5 SCK
1000	46	80 55 980	2	2 Washer	Bricka	5	5 SCK
1020	47	79 34 136	2	2 Washer	Bricka	5	5 SCK

R 3799-900

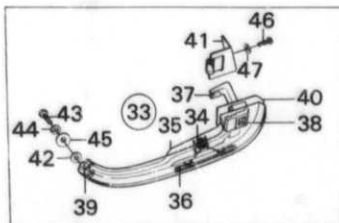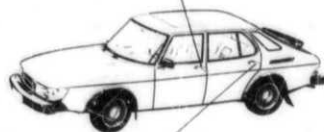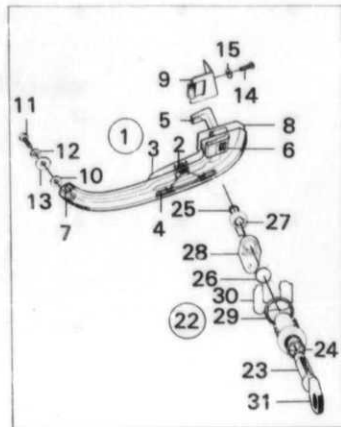

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02
2 GROUP INDEX		
Main body		3-D10
Instrument panel		3-E06
Hood, front, fenders		3-E14
Doors, trunk lid		3-E20
External details, glass, sealings		3-F16
Upholstery, interior equipment and touch-up paint		3-G24
Heating and ventilation system		3-J24
Bumpers		3-K18

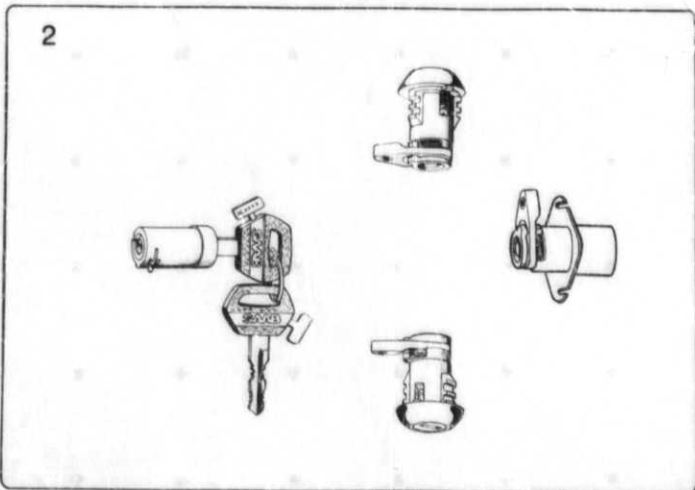

R 5903-900

SAB
genuine parts
original reservdelas

3-F14

SAAB 900
M79-80

MASTER INDEX

0200

Doors, trunk lid
Lock-and-lock cylinder
details

Dörrar, bagagerumslucka
Lås- och låscylindersats

Date Datum	1987-
---------------	-------

Illustration Bild nr	R5903
-------------------------	-------

	Group Grupp
--	----------------

Page	61
Sida	



0020
0040
0060
0080
0081
0082
0083
0084
0100
0110
0120
0130
0140
0150
0160
0180
0200
0220
0240
0260
0280
0300
0320
0340
0360
0380
0381
0382
0400
0420
0421
0422
0440

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S SR /	Notes Anmärkning
		900		US				
1	82 62 586	1			1 Lock set (door LH and RH + ignition + trunk door)	Låssats (dörr V och H + tändning + бага- gerumsdörr)	5 -1979	
2	82 85 710	1			1 Lock set (door LH and RH + ignition + trunk door)	Låssats (dörr V och H + tändning + бага- gerumsdörr)	5 1980-	
F11					Lock cylinders may be ordered to match original equipment locks. Use the part number listed below, stating the key code as additional in- formation. These cylinders are deliv- ered without keys.	För att behålla samma nyckel till bilens samtliga lås kan följande låsdetaljer tillverkas efter upp- givande av nyckel- nummer. Levereras utan nycklar		
	84 51 916	X			X Door lock cylinder LH	Dörrlås-cylinder V	3	
	84 51 924	X			X Door lock cylinder RH	Dörrlås-cylinder H	3	
	84 61 394	X			X Lock cylinder, trunk door	Låscylinder, бага- gerumsdörr	5 -1979	
	82 85 744	X			X Lock cylinder, trunk door	Låscylinder, бага- gerumsdörr	5 1980-	
	93 29 483	X			X Lock cylinder, igni- tion	Låscylinder, tändning	3 -1979 (8470346)	
	93 29 483	X			X Lock cylinder, igni- tion	Låscylinder, tändning	3 1980-	
	84 78 554	X			X Spare key	Reservnyckel	5	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F19
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

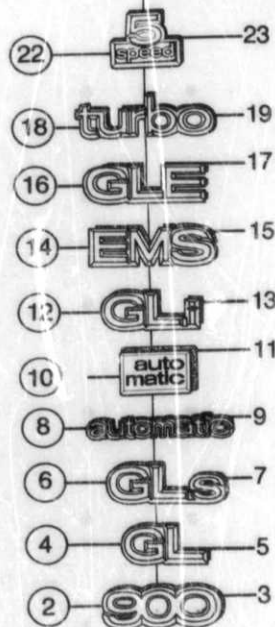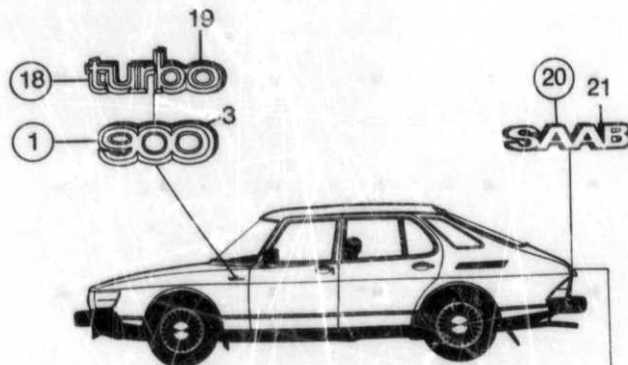

R 9373-900

SAAB
genuine parts
original reserved

3-F16

SAAB 900
M79-80

0915

External details, glass

Sealings

Emblem

Glas, tätningslister, ut-

vändiga detaljer

Emblem

Date

Datum

Illustration

Bild nr

Group

Grupp

Page

Sida

1987-10

R9373

8

63

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR L	Notes Anmärkning
		900	US				
0020	1	82 72 114	2	2 Emblem 900	Emblem 900	3	
0040	2	82 80 256	1	1 Emblem 900	Emblem 900	3	(8272148)
0060	3	82 72 130	3	3 Tape	Tape	3	
0080	4	82 80 231	1	1 Emblem GL	Emblem GL	3	(8269268)
0100	5	82 80 284	1	1 Tape	Tape	3	
0120	6	82 80 199	1	1 Emblem GLS	Emblem GLS	3	(8269177)
0140	7	82 80 193	1	1 Tape	Tape	3	
0160	8	82 72 351	1	1 Emblem »automatic»	Emblem »automatic»	3	-1979
0180	9	82 72 387	1	1 Tape	Tape	3	-1979
0200	10	82 87 278	1	1 Emblem »automatic»	Emblem »automatic»	3	1980-
0220	11	82 87 252	1	1 Tape	Tape	3	1980-
0240	12	82 89 235	1	1 Emblem GLI	Emblem GLI	3	
0260	13	82 89 250	1	1 Tape	Tape	3	
0280	14	82 80 272	1	1 Emblem EMS	Emblem EMS	3	(8272163)
0300	15	82 72 189	1	1 Tape	Tape	3	
0320	16	82 88 525	1	1 Emblem GLE	Emblem GLE	3	
0340	17	82 88 542	1	1 Tape	Tape	3	
0360	18	82 80 298	1	1 Emblem turbo	Emblem turbo	3	(8276784)
0380	19	82 80 330	2	2 Emblem turbo	Emblem turbo	3	(8276750)
0400	20	82 76 776	3	3 Tape	Tape	3	
0420	21	82 80 173	1	1 Emblem SAAB	Emblem SAAB	3	(8269961)
0440	22	82 69 987	1	1 Tape	Tape	3	
0460	23	82 87 245	1	1 Emblem »5-speed»	Emblem »5-speed»	3	1980-
0480	24	82 87 229	1	1 Tape	Tape	3	1980-
0500	25	82 83 715	X	X Tape for emblem	Tape för emblem	3	1 COIL = 3 M (N08283715)

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details,	
glass, sealings	3-F16
Upholstery, interior	
equipment and	
touch-up paint	3-G24
Heating and	
ventilation system	3-J24
Bumpers	3-K18

0925

External details, glass sealings
Mouldings

Glas, tätningslister, utvändig detaljer
Dekorlister

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10


R9374

8

65

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0220	1	82 74 151	2	2 Moulding, front	Dekorlist, framskärm	2	
0240				fender			
0080	1	92 57 262	2	2 Moulding, front	Dekorlist, framskärm	2	EMS, TURBO(8274169)
0100				fender			
0120	1	92 57 262	2	2 Moulding, front	Dekorlist, framskärm	2	-1979 GLE(8274169)
0140				fender			
0180	2	82 76 925	2	2 Moulding, front	Dekorlist, framskärm	2	1980 - GLE
0190				fender			
0200	2	82 76 917	2	2 Moulding, valance	Dekorlist, sidoplåt	2	EMS, TURBO
0220	2	82 76 917	2	2 Moulding, valance	Dekorlist, sidoplåt	2	-1979 GLE
0240	2	82 76 925	2	2 Moulding, valance	Dekorlist, sidoplåt	2	1980 - GLE
0280	2A	82 51 514	1	1 Decor frame, air out-	Dekorram, luftutsläpp	3	86(8253437) ALSO USE
0280				let LH	V	8253429	
0300	2A	82 51 522	1	1 Decor frame, air out-	Dekorram, luftutsläpp	3	86(8253445) ALSO USE
0320				let RH	H	8253429	
0420	3	82 87 179	1	1 Decor frame, air out-	Dekorram, luftutsläpp	3	67(8262479)
0440				let LH	V		
0460	3	82 87 187	1	1 Decor frame, air out-	Dekorram, luftutsläpp	3	87(8262487)
0480				let RH	H		
0500		82 53 429	2	2 Moulding	Dekorlist	2	86
0520	4	82 62 453	2	2 moulding	dekorlist	2	86(8253429) TURBO
0540	5	79 68 084	16	16 screw	skruv	5	
0560	6	92 21 680	16	16 clip	clip	5	(82 51 748)
0580	7	82 52 470	1	1 Moulding, trunk door	Dekorlist, bag-rums-	3	-1979
0600				LH	dörr V		
0620	7	82 78 434	1	1 Moulding, trunk door	Dekorlist, bag-rums-	3	1980-
0640				LH	dörr V		
0660	8	82 52 462	1	1 Moulding, trunk door	Dekorlist, bag-rums-	3	-1979
0680				RH	dörr H		
0700	8	82 78 426	1	1 Moulding, trunk door	Dekorlist, bag-rums-	3	1980-
0720				RH	dörr H		
0740	9	82 52 611	6	6 Clip	Clip	5	-1979
0760	10	82 53 171		1 Bracket, number plate	Hållare, nummerskylt	5	-1979 US
0780	10	82 77 626		1 Bracket, number plate	Hållare, nummerskylt	5	1980 - US
0800	11	79 28 997		4 Screw	Skruv	5	US
0820	12	80 59 560		2 Screw	Skruv	5	US
0840	13	83 75 198	4	4 Washer	Bricka	5	1980-
0860	14	80 29 548		4 Nut	Mutter	5	1980-
0880	15	82 61 810	1	1 Moulding, front	Dekorlist, framskärm,	2	
0900				fender, front part	främre del V		
0920				LH			
0940	15	82 61 828	1	1 Moulding, front	Dekorlist, framskärm,	2	
0960				fender, front part	främre del H		
0980				RH			
1000	16	82 61 679	1	1 Moulding, front	Dekorlist, framskärm	2	
1020				fender, rear part LH	bakre del V		
1040	16	82 61 687	1	1 Moulding, front	Dekorlist, framskärm,	2	
1060				fender, rear part RH	bakre del H		
1080	17	82 61 331	1	1 Moulding, front door	Dekorlist, främrdörr	2	3CK
1100				LH	V		
1120	17	82 61 349	1	1 Moulding, front door	Dekorlist, främrdörr	2	3CK
1140				RH	H		
1160	17	82 61 133	2	2 Moulding, front door	Dekorlist, främrdörr	2	5CK
1180	18	82 61 232	1	1 Moulding, rear door	Dekorlist, bakhörr V	2	5CK
1200				LH			
1220	18	82 61 240	1	1 Moulding, rear door	Dekorlist, bakhörr H	2	5CK
1240				RH			
1260	18	82 62 057	1	1 Moulding, valance	Dekorlist, sidoplåt,	2	3CK
1280				front part LH	främre del V		

R 9374-900

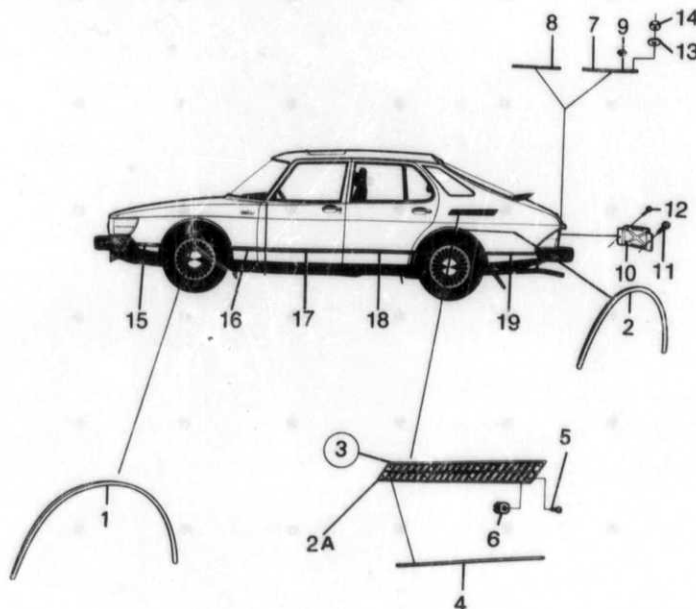

0925

**External details, glass
sealings
Mouldings**

**Glas, tätningslister, ut-
vändiga detaljer
Dekorlister**

Date
Datum

Illustration
Bild nr

Group
Grupp


Page
Sida

1987-10 R9374

8

67

Fig. Pos.	Part No Art nr	Quantity/Amount			Description	Benämning	K/S S/R	Notes Anmärkning
		900		US				
1300	18	82 62 065	1		1 Moulding valance, front part RH	Dekorlist, sidoplåt, främre del H	2	3CK
1320	19	82 61 935	1		1 Moulding, valance, rear part LH	Dekorlist, sidoplåt, bakre del V	2	
1340	19	82 61 943	1		1 Moulding, valance, rear part RH	Dekorlist, sidoplåt, bakre del H	2	

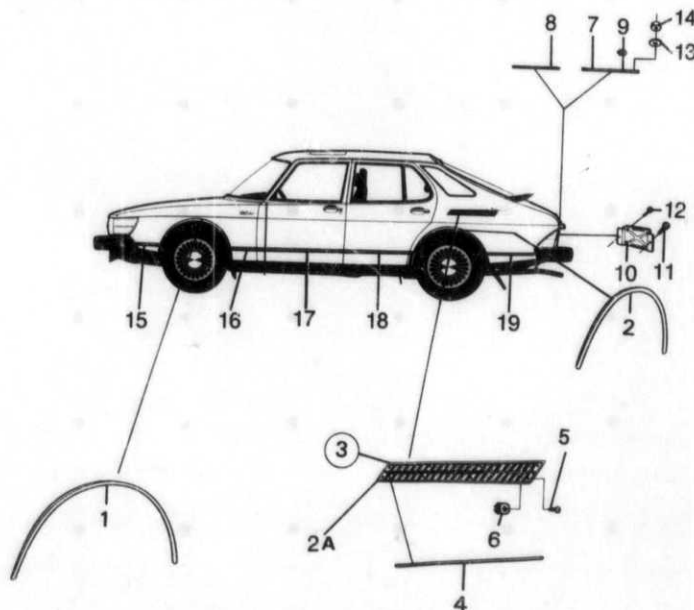


R 9374-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

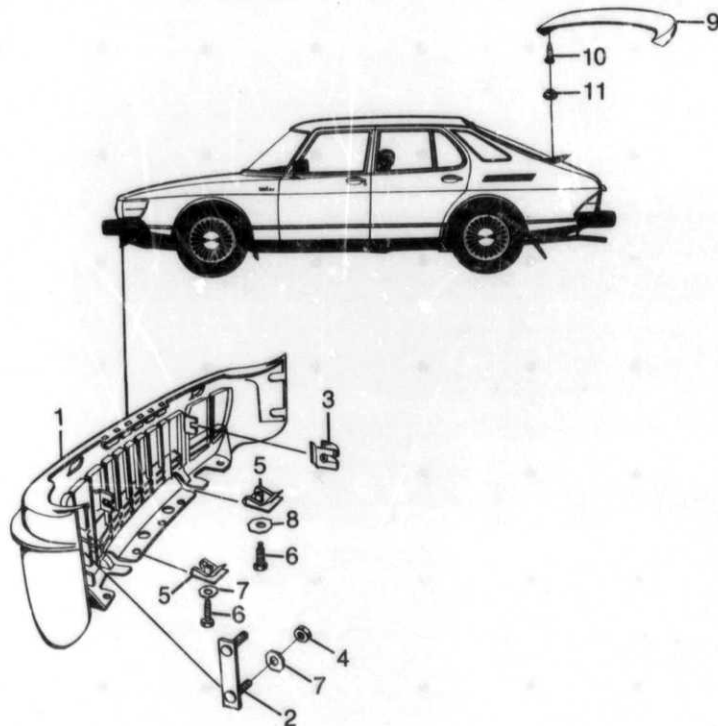

R 9375-900

SAAB
genuine parts
original reservdelar

3-F22

SAAB 900
M79-8C

MASTER INDEX

0935

External details, glass
sealings
Spoiler

Glas, tätningslister, ut-
vändiga detaljer
Spoiler

Date
Datum
1987-10

Illustration
Bild nr
R9375

Group
Grupp
8

Page
Sida
69

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0020	1 82 55 267	1		1 Spoiler	Spoiler	3	
0040	2 82 66 884	2		2 Bracket	Fäste	6	
0060	3 82 68 500	2		2 Clip	Clip	5	
0080	4 80 29 555	4		4 Nut	Mutter	5	
0100	5 82 67 058	5		5 Clip	Clip	5	
0120	6 82 67 205	7		7 Screw	Skruv	5	
0140	7 82 66 835	5		5 Washer	Bricka	5	
0160	8 82 73 468	2		2 Washer	Bricka	5	
0180	9 78 73 789	1		1 Spoiler, rear	Spoiler, bak	3	TURBO(8264848)
0200	10 79 22 354	14		14 Screw	Skruv	5	TURBO
0220	11 82 64 862	2		2 Rubber plug	Gummiplugg	5	TURBO

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

9950

External details, glass
sealings
Mirrors

Glas, tätningsslistor, ut-
vändiga detaljer
Bakspeglar

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10


RS376


8

71

Fig. Pos.	Part No Art nr	Quantity/Åntal			Description	Benämning	K/S S/R	Notes Anmärkning
		900		US				
0780	1 84 86 425	1			Mirror assy convex glass LH	Bakspegel kpl kon- vext glas V	3	-1979
0800	1 84 86 433	1			Mirror assy convex glass RH	Bakspegel kpl kon- vext glas H	3	-1979
0820	1 84 87 175	1			Mirror assy convex glass, black foot LH	Bakspegel kpl kon- vext glas, svart fot V	3	1980-
0841	1 84 87 183	1			Mirror assy convex glass, black foot RH	Bakspegel kpl kon- vext glas, svart fot H	3	1980-
0842	1 84 86 441	1			Mirror assy flat glass LH	Bakspegel kpl plant glas V	3	-1979
0843	1 84 86 458	1			Mirror assy flat glass RH	Bakspegel kpl plant glas H	3	-1979
0844	1 84 87 191	1			Mirror assy flat glass, black foot LH	Bakspegel kpl plant glas, svart fot V	3	1980-
0845	1 84 87 209	1			Mirror assy flat glass, black foot RH	Bakspegel kpl plant glas, svart fot H	3	1980-
0846	2 94 00 292	2			Convex glass with ring	Konvext glas med ring	3	
0880	2 94 00 300	2			Flat glass with ring	Plant glas med ring	3	
0900	3 84 97 711	2			Gasket	Mellanlägg	5	
0920	4 79 71 542	4			Screw	Skruv	5	-1979
0921	4 79 72 185	4			Screw	Skruv	5	1980-
0922	5 94 00 375	2			Washer	Bricka	3	
0923	6 79 61 883	2			Pop rivet	Popnit	5	
0940	7 84 83 146	1			Mirror assy with el motor, convex glass LH	Bakspegel kpl med el motor, konvext glas V	4	-1979 GLE. ALSO FOR 3CK JA
0960	7 84 83 653	1			Mirror assy with el motor, convex glass RH	Bakspegel kpl med el motor, konvext glas H	4	-1979 GLE. ALSO FOR 3CK JA
1000	7 94 61 898	1			Mirror assy with el motor, convex glass, black foot LH	Bakspegel kpl med el motor, konvext glas, svart fot V	4	1980- GLE. ALSO FOR 3CK JA
1020	7 94 61 906	1			Mirror assy with el motor, convex glass, black foot RH	Bakspegel kpl med el motor, konvext glas, svart fot H	4	1980- GLE. ALSO FOR 3CK JA
1040	7 84 83 778	1			Mirror assy with el motor, flat glass LH	Bakspegel kpl med el motor, plant glas V	4	-1979 GLE, TURBO US, CA
1060	7 84 83 786	1			Mirror assy with el motor, flat glass RH	Bakspegel kpl med el motor, plant glas H	4	-1979 GLE, TURBO US, CA
1080	7 94 61 930	1			Mirror assy with el motor, flat glass, black foot LH	Bakspegel kpl med el motor, plant glas, svart fot V	4	1980- GLE, TURBO US, CA
1100	7 94 61 948	1			Mirror assy with el motor, flat glass, black foot RH	Bakspegel kpl med el motor, plant glas, svart fot H	4	1980- GLE, TURBO US, CA
1120	7 84 84 198	1			Mirror assy, with el motor, flat glass LH RHD	Bakspegel kpl med el motor, plant glas V, RHD	4	-1979 GLE
1140	7 84 84 206	1			Mirror assy with el motor, flat glass RH RHD	Bakspegel kpl med el motor, plant glas H, RHD	4	-1979 GLE
1160	7 94 61 914	1			Mirror assy with el motor, flat glass, black foot LH RHD	Bakspegel kpl med el motor, plant glas, svart fot V RHD	4	1980- GLE
1180	7 94 61 922	1			Mirror assy with el motor, flat glass, black foot RH RHD	Bakspegel kpl med el motor, plant glas, svart fot H RHD	4	1980- GLE
1200	8 84 83 711	2			Glass, convex	Glas, konvext	3	GLE
1220	8 84 83 729	2			Glass, flat	Glas, plant	3	GLE, TURBO US
1240	8 84 83 687	2			Gasket LH	List	5	-1979 GLE, TURBO US
1260	10 84 83 704	1			Gasket RH	Mellanlägg	5	GLE, TURBO US
1280	10 84 83 802	1			Gasket LH	Mellanlägg	5	GLE, TURBO US
1300					Gasket RH	Mellanlägg	5	GLE, TURBO US

R 9376-900

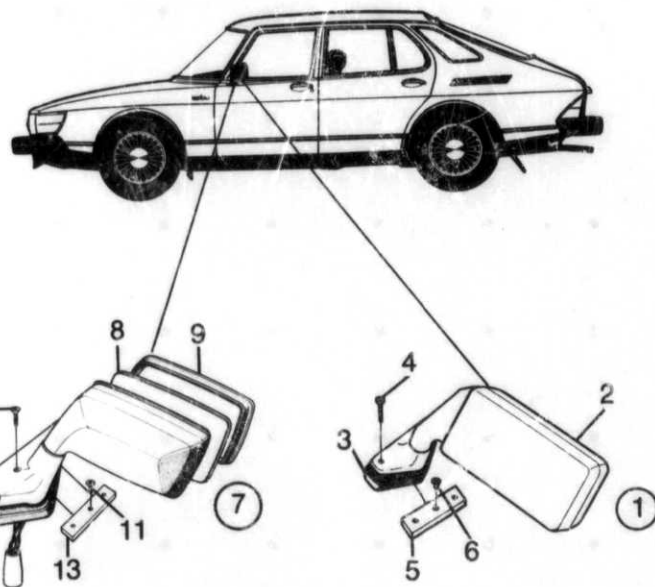

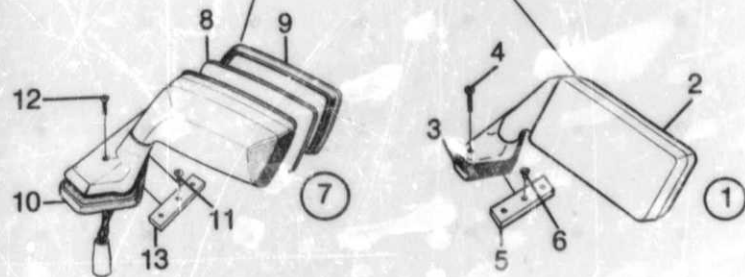

R 9376-900

SAAB
genuine parts
original reserved

3--G02

SAAB 900
M79-80

0950

External details, glass
sealings
Mirrors

Glas, tätningssister, ut-
vändiga detaljer
Backspeglar

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R9376

8

73

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
1530	11 80 59 388	2		2 Screw	Skruv	5	GLE, TURBO US
1520	12 84 84 727	4		4 Screw	Skruv	5	-1979 GLE, TURBO US
1521	12 91 85 584	4		4 Screw	Skruv	5	1980- GLE, TURBO US
1540	13 84 83 810	2		2 Washer	Bricka	5	GLE, TURBO US
1500	43 82 52 470	1		1 Moulding, trunk door	Dekorlist, bag-rums-	3	-1979

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

1000

External details, glass
sealings
Glass, sealings 3CK

Utvändiga detaljer, glas,
tättningslistor
Glas, tätn.listor 3CK

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R4361


8

75

Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S SR / L	Notes Anmärkning
		900	US			
0020	1 82 57 511	1	1 Glass, windshield	Glas, vindruta	3	
0040	1 82 57 529	1	1 Glass, windshield, green	Glas, vindruta, grön	3	
0060	2 82 75 273	1	1 Glass, door window, LH	Glas, dörruta V	4	
0100	2 82 75 299	1	1 Glass, door window, green LH	Glas, dörruta, grön V	4 9)	
0120	2 82 75 281	1	1 Glass, door window, RH	Glas, dörruta H	4	
0140	2 82 75 307	1	1 Glass, door window, green RH	Glas, dörruta, grön H	4 9)	
0160	3 82 51 274	1	1 Glass, side window, LH	Glas, sidoruta V	5 80)	
0180	3 82 51 282	1	1 Glass, side window, RH	Glas, sidoruta H	5 80)	
0200	3 82 87 732	1	1 Glass, side window, LH	Glas, sidoruta V	5 81)	
0220	3 82 87 740	1	1 Glass, side window, RH	Glas, sidoruta H	5 81)	
0240	4 82 51 613	1	1 Opening rear side window assy LH	Öppningsbar sidoruta kpl V	5 82)	
0260	4 82 51 621	1	1 Opening rear side window assy RH	Öppningsbar sidoruta kpl H	5 82)	
0280	4 92 21 276	1	1 Opening rear side window assy LH	Öppningsbar sidoruta kpl V	5 83)	
0300	4 92 21 284	1	1 Opening rear side window assy RH	Öppningsbar sidoruta kpl H	5 83)	
0320	4 82 69 615	1	1 Opening rear side window assy LH	Öppningsbar sidoruta kpl V	5 82) TURBO,AU	
0340	4 82 69 623	1	1 Opening rear side window assy RH	Öppningsbar sidoruta kpl H	5 82) TURBO,AU	
0360	4 82 53 635	1	1 Opening rear side window assy green glass LH	Öppningsbar sidoruta kpl grönt glas V	5 9,82)	
0380	4 82 53 643	1	1 Opening rear side window assy green glass RH	Öppningsbar sidoruta kpl grönt glas H	5 9,82)	
0400	4 92 21 292	1	1 Opening rear side window assy green glass LH	Öppningsbar sidoruta kpl grönt glas V	5 9,83)	
0420	4 92 21 300	1	1 Opening rear side window assy green glass RH	Öppningsbar sidoruta kpl grönt glas H	5 9,83)	
0440	4 82 69 631	1	1 Opening rear side window assy green glass LH	Öppningsbar sidoruta kpl grönt glas V	5 82) TURBO	
0460	4 82 69 649	1	1 Opening rear side window assy green glass RH	Öppningsbar sidoruta kpl grönt glas H	5 82) TURBO	
0480	4 92 21 334	1	1 Opening rear side window assy green glass, black frame LH	Öppningsbar sidoruta kpl. grönt glas, svart ram V	5 83)	

9. Alternative
80. Ch.-90801022281.-90802006812.-90806002481.
81. Ch.-90801022282.-90802006813.-90806002482.-
82. Ch.-90802007152.-90801024090.
83. Ch.90802007153.-90801024091.-

R 4361-900

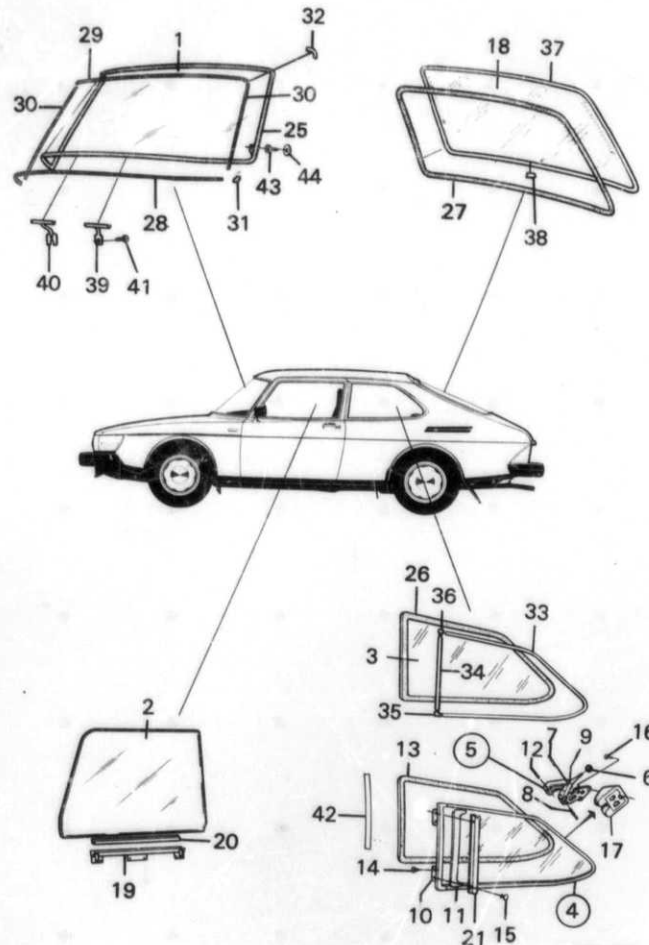

1000

External details, glass
sealings
Glass, sealings 3CK

Utvändiga detaljer, glas,
tätningsslistor
Glas, tätn.listor 3CK

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R4361


8

77

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR	Notes Anmärkning
		900	US				
0709	4 92 21 342	1		1 Opening rear: side window assy green glass, black frame RH	Öppningsbar sidoruta kpl grönt glas, svart ram H	5	(83)
0710	5 84 01 150	2		2 Lock assy	Lås kpl	4	
0711	6 73 40 839	2		2 Ball	Kula	5	
0712	7 79 18 279	2		2 Tension pin	Spännstift	5	
0720	8 79 18 253	2		2 Tension pin	Spännstift	5	
0740	9 79 48 995	2		2 Washer	Bricks	5	
0760	10 82 53 197	4		4 Hinge plate	Gångjärnsplåt	5	
0780	11 84 01 093	1		1 Moulding LH	Dekorationslist V	4	(82)
0800	11 84 01 101	1		1 Moulding RH	Dekorationslist H	4	(82)
0820	11 82 86 973	1		1 Moulding LH	Dekorationslist V	4	(83)
0840	11 82 86 981	1		1 Moulding RH	Dekorationslist H	4	(83)
0860	11 82 89 557	1		1 Moulding LH	Dekorationslist V	4	(82) TURBO
0880	11 82 89 565	1		1 Moulding RH	Dekorationslist H	4	(82) TURBO
0900	11 82 86 516	1		1 Moulding LH black	Dekorationslist V svart	4	(83)
0920	11 82 86 524	1		1 Moulding RH black	Dekorationslist H svart	4	(83)
0940	12 79 18 279	2		2 Tension pin	Spännstift	5	
0960	13 82 51 639	2		2 Washer strip	Tätningsslist	5	
0980	14 79 22 420	8		8 Screw	Skruv	5	
1000	15 82 87 674	6		6 Blind rivet	Blindnit	5	(8264285)
1020	16 79 22 446	6		6 Screw	Skruv	5	
1040	17 73 44 476	2		2 Padding	Stötskydd	5	
1060	18 82 75 240	1		1 Glass, trunk door	Glas, bagagerumsdörr	4	(8258766)
1080	18 82 75 257	1		1 Glass, trunk door, green	Glas, bagagerumsdörr, grön	4	(8258774)
1100	19 82 25 930	1		1 Glass retainer LH	Rutfäste V	5	(38)
1120	19 82 25 948	1		1 Glass retainer RH	Rutfäste H	5	(38)
1140	20 82 77 485	2		2 Glass retainer	Rutfäste	5	(38)
1160	20 82 54 414	2		2 Pad, door window	Mellanlägg, dörruta	5	(38)
1180	20 92 87 111	2		2 Pad, door window	Mellanlägg, dörruta	5	(39)(8277501)
1200	21 76 16 675	2		2 Fixing strip	Skena	5	(8253254)
1220	25 92 31 259	1		1 Weather strip, wind-shield	Gummilist, vindruta	4	(8266637)
1240	26 82 51 290	1		1 Weather strip, side window LH	Gummilist, sidoruta V	5	(80)
1260	26 82 51 308	1		1 Weather strip, side window RH	Gummilist, sidoruta H	5	(80)
1280	26 92 88 192	1		1 Weather strip, side window LH	Gummilist, sidoruta V	5	(81)(8287716)
1300	26 92 88 200	1		1 Weather strip, side window RH	Gummilist, sidoruta H	5	(81)(8287724)
1320	27 92 31 499	1		1 Weather strip, rear window	Gummilist, bakruta	4	(8258006)
1340	28 82 67 015	1		1 Moulding, windshield, lower	Dekorationslist, vindruta, nedre	3	-1978
1360	28 92 26 481	1		1 Moulding, windshield, lower	Dekorationslist, vindruta, nedre	3	1979-
1380	28 82 89 433	1		1 Moulding, windshield, lower	Dekorationslist, vindruta, nedre	3	TURBO
1400	29 82 36 762	1		1 Moulding, windshield, upper	Dekorationslist, vindruta, övre	3	

9. Alternative
38. Ch.-90791024796-90792001986-90796003834.
39. Ch.90791024797-90792001987-90796003835-
80. Ch.-90801022281-90802006812-90806002481.
81. Ch.90801022282-90802006813-90806002482-
82. Ch.-90802007152-90801024090
83. Ch.90802007153-90801024091-

R 4361-900

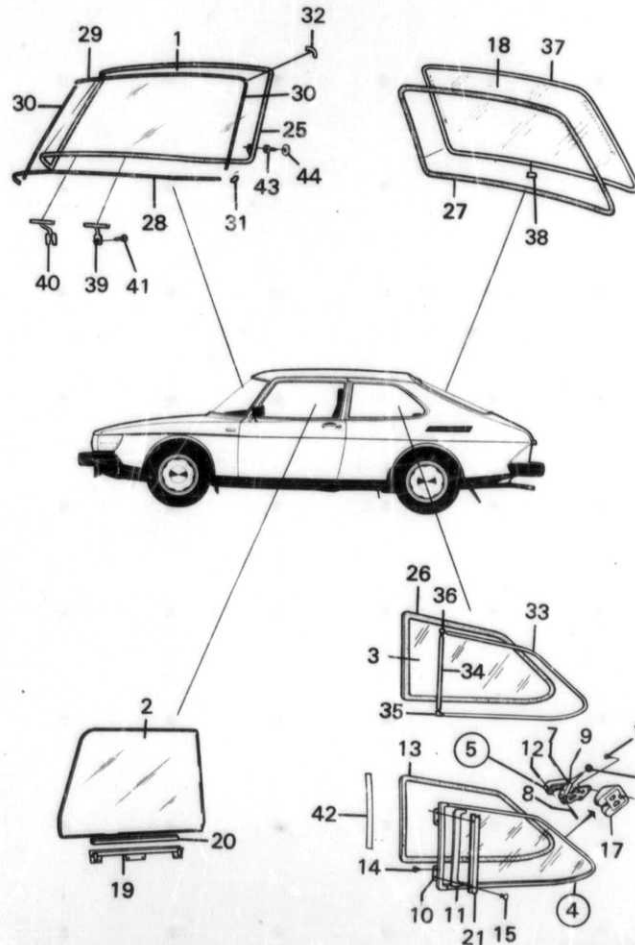

1000

External details, glass sealings
Glas, tätning 3CK

Utvändiga detaljer, glas, tätning
Glas, tätning 3CK

Date
Datum


Illustration
Bild nr

Group
Grupp

Page
Sida


79

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
1440	29	82 37 285	1	1 Moulding, windshield, upper	Dekorationslist, vindruta, övre	3	TURBO
1460	30	82 67 007	2	2 Moulding, windshield, vindruta	Dekorationslist, vindruta	3	-1978
1480	30	92 26 499	2	2 Moulding, windshield	Dekorationslist, vindruta	3	1979-
1500	30	82 69 425	2	2 Moulding, windshield	Dekorationslist, vindruta	3	TURBO
1505	31	82 66 852	2	2 Joint piece, windshield, lower	Skarvstycke, vindruta nedre	3	
1510	31	82 69 458	2	2 Joint piece, windshield, lower	Skarvstycke, vindruta nedre	3	TURBO
1520	32	82 36 747	2	2 Joint piece, windshield, upper	Skarvstycke, vindruta övre	3	
1540	32	82 37 299	2	2 Joint piece, windshield, upper	Skarvstycke, vindruta övre	3	TURBO
1560	33	82 51 431	1	1 Moulding, side window LH	Dekorationslist, sidoruta V	4	(80)
1580	33	82 51 449	1	1 Moulding, side window RH	Dekorationslist, sidoruta H	4	(80)
1600	33	82 87 773	1	1 Moulding, side window LH	Dekorationslist, sidoruta V	4	(81)
1620	33	82 87 781	1	1 Moulding, side window RH	Dekorationslist, sidoruta H	4	(81)
1640	34	84 09 575	2	2 Moulding, side window	Dekorationslist, sidoruta	4	(80)
1660	34	82 87 799	2	2 Moulding, side window	Dekorationslist, sidoruta	4	(81)
1680	35	84 02 988	2	2 Joint piece, lower	Skarvstycke, nedre	3	(80)
1700	35	82 87 765	2	2 Joint piece, lower	Skarvstycke, nedre	3	(81)
1720	36	84 02 976	2	2 Joint piece, upper	Skarvstycke, övre	3	(80)
1740	36	82 87 757	2	2 Joint piece, upper	Skarvstycke, övre	3	(81)
1760	37	82 51 407	1	1 Moulding, rear window	Dekorationslist, bakruta	3	
1780	37	82 67 221	1	1 Moulding, rear window	Dekorationslist, bakruta	3	TURBO
1800	38	84 01 291	1	1 Joint piece	Skarvstycke	3	
1820	38	82 22 663	1	1 Joint piece	Skarvstycke	3	TURBO
1840	39	82 75 885	2	2 Glass holder, outer	Glashållare, yttre	4	US
1860	40	82 75 893	2	2 Glass holder, middle	Glashållare, mittre	4	US
1880	41	79 22 420	2	2 Screw	Skruv	5	US
1900	42	82 86 312	2	2 Tape	Tape	5	US
1920	43	79 67 771	2	2 Screw	Skruv	5	US
1940	44	70 88 073	2	2 Washer	Bricka	5	US

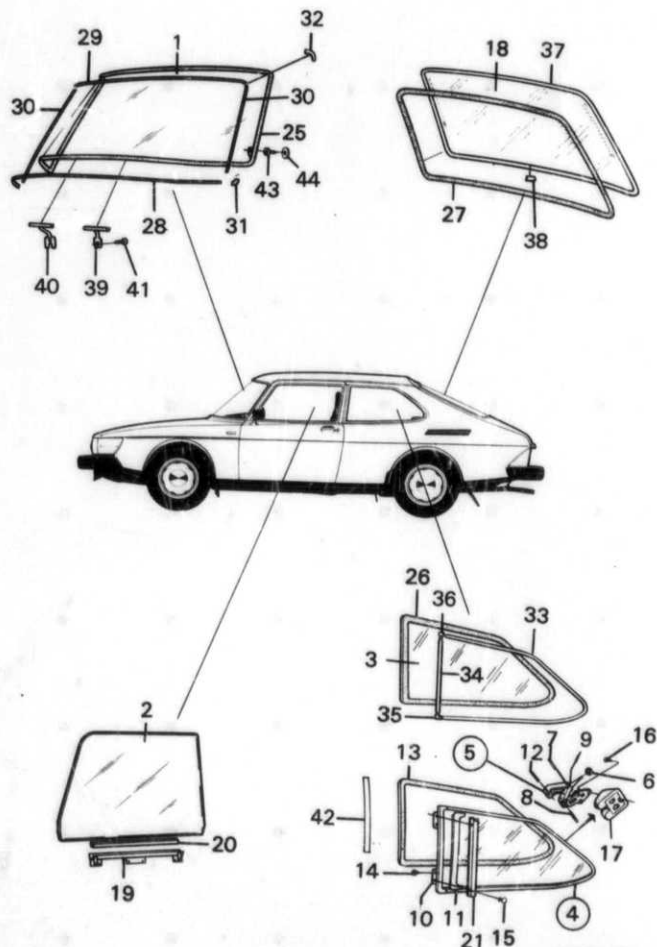

R 4361-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-P02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02
8 GROUP INDEX		
	Main body	3-D10
	Instrument panel	3-E06
	Hood, front, fenders	3-E14
	Doors, trunk lid	3-E20
	External details, glass, sealings	3-F16
	Upholstery, interior equipment and touch-up paint	3-G24
	Heating and ventilation system	3-J24
	Bumpers	3-K18

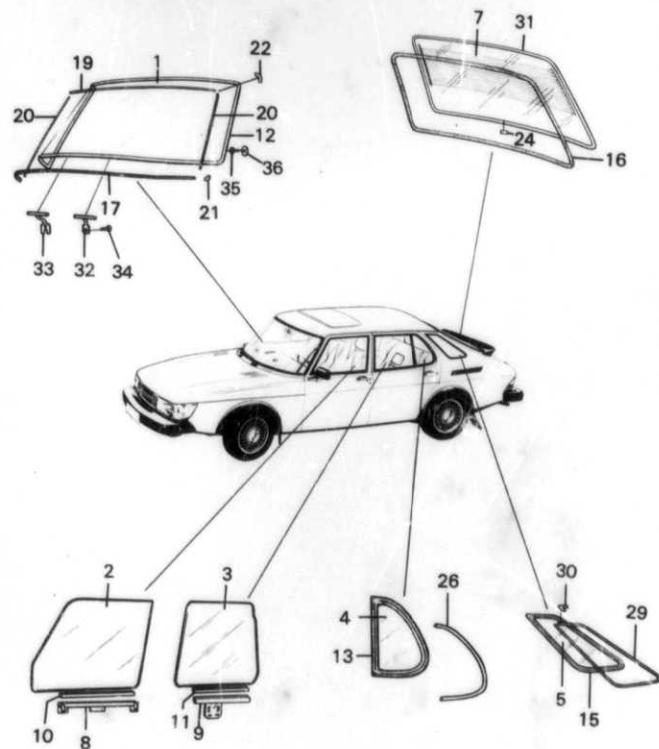

R 4362-900

050

External details, glass
sealings
Glass and sealings 5CK

Utvändiga detaljer, glas
tätningssiter
Glas, tätningssiter 5CK

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R4362

8

81

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0020	1 82 57 511	1		1 Glass, windshield	Glas, vindruta	3	
0040	1 82 57 529	1		1 Glass, windshield, green	Glas, vindruta, grön	3 9)	
0060	2 82 75 315	1		1 Glass, door window LH	Glas, dörruta V	4 10)	
0080	2 82 75 331	1		1 Glass, door window green LH	Glas, dörruta grön V	4 9,10)	
0100	2 82 75 323	1		1 Glass, door window RH	Glas, dörruta H	4 10)	
0120	2 82 75 349	1		1 Glass, door window green RH	Glas, dörruta grön H	4 9,10)	
0140	3 82 75 356	1		1 Glass, door window LH	Glas, dörruta V	5 11)	
0160	3 82 75 372	1		1 Glass, door window green LH	Glas, dörruta grön V	5 9,11)	
0180	3 82 75 364	1		1 Glass, door window RH	Glas, dörruta H	5 11)	
0200	3 82 75 380	1		1 Glass, door window green RH	Glas, dörruta grön H	5 9,11)	
0220	4 82 61 638	1		1 Glass, door window fixed LH	Glas, dörruta fast del V	5 11)	
0240	4 82 61 646	1		1 Glass, door window fixed RH	Glas, dörruta fast del H	5 11)	
0260	4 82 61 653	1		1 Glass, door window fixed, green LH	Glas, dörruta fast del, grön V	5 9,11)	
0280	4 82 61 661	1		1 Glass, door window fixed, green RH	Glas, dörruta fast del, grön H	5 9,11)	
0300	5 82 60 135	1		1 Glass, side window, LH	Glas, sidoruta V	5	
0320	5 82 60 143	1		1 Glass, side window, RH	Glas, sidoruta H	5	
0340	5 82 60 390	1		1 Glass, side window, green LH	Glas, sidoruta grön V	5 9)	
0360	5 82 60 408	1		1 Glass, side window, green RH	Glas, sidoruta grön H	5 9)	
0380	7 82 75 240	1		1 Glass, trunk door	Glas, bagagerumsdörr	4 (8258766)	
0400	7 82 75 257	1		1 Glass, trunk door, green	Glas, bagagerumsdörr, grön	4 9) (8258774)	
0420	8 82 25 955	1		1 Glass retainer LH	Rutfäste V	5 10,47)	
0440	8 82 25 963	1		1 Glass retainer RH	Rutfäste H	5 10,47)	
0460	8 82 77 485	2		2 Glass retainer	Rutfäste	5 10,48)	
0480	9 82 25 971	1		1 Glass retainer LH	Rutfäste V	5 11)	
0500	9 82 25 989	1		1 Glass retainer RH	Rutfäste H	5 11)	
0520	10 82 75 414	2		2 Pad, door window	Mellanlägg, dörruta	5 10,47)	
0540	10 82 87 111	2		2 Pad, door window	Mellanlägg, dörruta	5 10,48) (8277501)	
0560	11 82 87 111	2		2 Pad, door window	Mellanlägg, dörruta	5 11) (8275422)	
0580	12 92 31 259	1		1 Weatherstrip, windshield	Gummilist, vindruta	4 (8269637)	
0600	13 82 49 955	1		1 Weatherstrip, fixed door window LH	Gummilist, fast dörruta V	5 11)	
0620	13 82 49 963	1		1 Weatherstrip, fixed door window RH	Gummilist, fast dörruta H	5 11)	
0640	15 82 60 150	1		1 Weatherstrip, side window LH	Gummilist, sidoruta V	5	
0660	15 82 60 168	1		1 Weatherstrip, side window RH	Gummilist, sidoruta H	5	

9. Alternative
10. Front door
11. Rear door
47. Ch. 90791024175 - 90796003805.
48. Ch. 90791024176 - 90796003806.

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

1050

External details, glass
sealings
Glass and sealings 5CK

Utvändiga detaljer, glas
tätningsslistor
Glas, tätningsslistor 5CK

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1987-10

R4362

8

83

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
1100	92 31 499	1		1 Weatherstrip, rear window	Gummilist, bakruta	4	(0258006)
1120							
1140	82 67 015	1		1 Moulding, windshield, lower	Dekorationslist, vindruta, nedre	3	-1978
1160							
1165	92 25 481	1		1 Moulding, windshield, lower	Dekorationslist, vindruta, nedre	3	1978-
1170							
1180	82 69 433	1		1 Moulding, windshield, lower	Dekorationslist, vindruta, nedre	3	TURBO
1200							
1220	82 36 762	1		1 Moulding, windshield, upper	Dekorationslist, vindruta, övre	3	
1240							
1260	82 37 265	1		1 Moulding, windshield, upper	Dekorationslist, vindruta, övre	3	TURBO
1280							
1300	82 67 007	2		2 Moulding, windshield	Dekorationslist, vindruta	3	-1978
1320							
1325	92 26 499	2		2 Moulding, windshield	Dekorationslist, vindruta	3	1971-
1330							
1340	82 69 425	2		2 Moulding, windshield	Dekorationslist, vindruta	2	TURBO
1360							
1380	82 68 652	2		2 Joint piece, windshield, lower	Skarvstycke, vindruta nedre	3	
1400							
1420	82 69 458	2		2 Joint piece, windshield, lower	Skarvstycke, vindruta nedre	3	TURBO
1440							
1460	82 36 747	2		2 Joint piece, windshield, upper	Skarvstycke, vindruta övre	3	
1480							
1500	82 37 299	2		2 Joint piece, windshield, upper	Skarvstycke, vindruta övre	3	TURBO
1520							
1540	84 01 291	1		1 Joint piece	Skarvstycke	3	
1560							
1580	82 22 663	1		1 Joint piece	Skarvstycke	3	TURBO
1600	82 59 855	1		1 Moulding rear, door window LH	Dekorationslist bakre dörruta V	3	11)
1620							
1640	82 59 863	1		1 Moulding rear, door window RH	Dekorationslist bakre dörruta H	3	11)
1660							
1680	82 68 914	1		1 Moulding rear, door window LH	Dekorationslist bakre dörruta V	3	11) TURBO
1700							
1720	82 68 922	1		1 Moulding rear, door window RH	Dekorationslist bakre dörruta H	3	11) TURBO
1740							
1765	92 23 439	2		2 Moulding, side window	Dekorationslist, sidoruta	4	(8261374)
1786							
1790	82 67 890	2		2 Moulding, side window	Dekorationslist, sidoruta	4	TURBO
1810							
1820	92 23 447	2		2 Joint piece, side window	Skarvstycke, sidoruta	3	(8261457)
1840							
1860	82 72 643	2		2 Joint piece, side window	Skarvstycke, sidoruta	3	TURBO
1880							
1910	82 51 407	1		1 Moulding, rear window	Dekorationslist, bakruta	3	
1930							
1940	82 67 221	1		1 Moulding, rear window	Dekorationslist, bakruta	3	TURBO
1960							
1980	82 75 885	2		2 Glass holder, outer	Glashållare, yttre	4	US
2000	82 75 893	1		1 Glass holder, middle	Glashållare, mittre	4	US
2020	79 22 420	2		2 Screw	Skruv	5	US
2040	79 67 771	2		2 Screw	Skruv	5	US
2060	70 88 073	2		2 Washer	Bricka	5	US

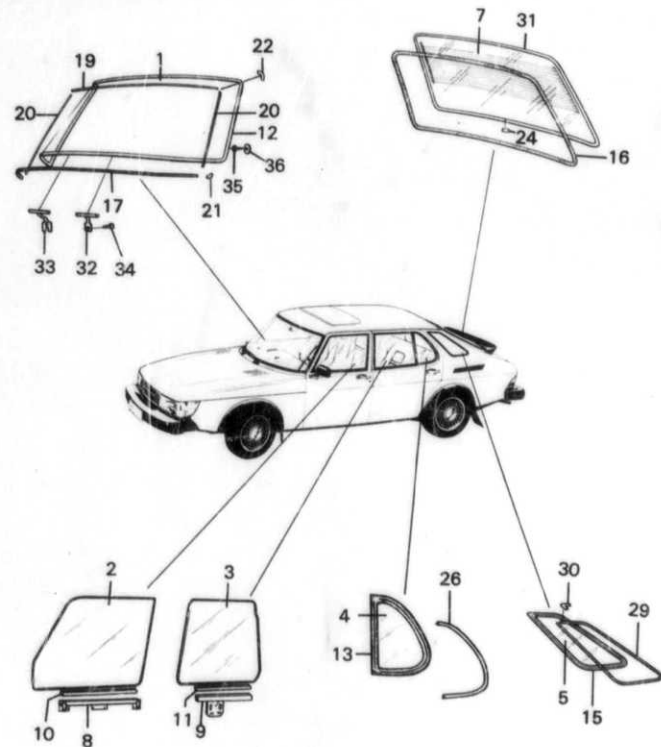

R 4362-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02
8 GROUP INDEX		
Main body		
	Instrument panel	3-D10
	Hood, front, fenders	3-E06
	Doors, trunk lid	3-E14
	External details, glass, sealings	3-E20
	Upholstery, interior equipment and touch-up paint	3-F16
	Heating and ventilation system	3-G24
	Bumpers	3-K18

1100

External details, glass
sealings
Other sealings 3CK

Utvändiga detaljer, glas
tättningslister
Övriga tätn.lister 3CK

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R5905


8

85

Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S SR / L	Notes Anmärkning
		900				
		US				
0020	1 82 64 236	1	1 Moulding and rubber seal assy outer LH	Dekor- och gummlist kpl yttre V	4	
0040	1 82 64 244	1	1 Moulding and rubber seal assy outer RH	Dekor- och gummlist kpl yttre H	4	
0060	1 82 68 690	1	1 Moulding and rubber seal assy outer LH	Dekor- och gummlist kpl yttre V	4	TURBO
0100	1 82 68 708	1	1 Moulding and rubber seal assy outer RH	Dekor- och gummlist kpl yttre H	4	TURBO
0120	3 82 67 270	18	18 Clip	Clip	4	
0140	4 82 73 245	2	2 Seal assy, inner	Tätning kpl.inre	4	
0160	5 82 44 964	6	6 Clip	Clip	4	
0180	6 92 84 191	1	1 Moulding, rear LH	Dekorationslist bakre V	3	(8268583)
0200	6 92 84 209	1	1 Moulding, rear RH	Dekorationslist, bakre H	3	(8268591)
0220	6 92 39 336	1	1 Moulding, rear LH	Dekorationslist, bakre V	3	TURBO (8268732)
0240	6 92 39 344	1	1 Moulding, rear RH	Dekorationslist, bakre H	3	TURBO (8268740)
0260	7 82 66 678	1	1 Moulding, front LH	Dekorationslist, främre V	3	
0280	7 82 66 686	1	1 Moulding, front RH	Dekorationslist, främre H	3	
0300	7 82 68 757	1	1 Moulding, front LH	Dekorationslist, främre V	3	TURBO
0320	7 82 68 765	1	1 Moulding front RH	Dekorationslist, främre H	3	TURBO
0340	8 82 59 251	1	1 Cover plate LH	Täckplåt V	3	
0360	8 82 59 289	1	1 Cover plate RH	Täckplåt H	3	
0380	10 82 76 461	2	2 Seal, door frame, front	Tätning, dörrbåge, främre	4	
0400	11 82 76 479	2	2 Seal, door frame, rear	Tätning, dörrbåge, bakre	4	
0420	12 82 73 054	2	2 Seal strip, door opening	Tätningelst, dörröppning	3	
0440	12A 69 11 820	2	2 Seal strip, door opening, front	Tätningelst, dörröppning, främre	3	1979(8248302)
0460	15 82 39 295	1	1 Door seal assy LH	Dörrtättningslist kpl V	3	
0480	15 82 39 287	1	1 Door seal assy RH	Dörrtättningslist kpl H	3	
0500	16 84 12 256	80	80 Clip	Clip	5	
0520	17 82 69 748	2	2 Protective strip	Skyddsläst	3	
0540	18 82 35 178	12	12 Blind rivet	Blindniet	3	
0560	19 92 82 104	1	1 Hood seal	Huvttätning	3	(8402885)
0580	20 84 07 488	5	5 Clip	Clip	5	
0600	22 82 78 459	1	1 Seal, trunk door	Tätning, bagagerumsdörr	4	
0620	23 78 73 565	1	1 Kit, mud guard rear LH	Sats, stänkskydd bakre V	3	(78 73 250)
0640	23 78 73 573	1	1 Kit, mud guard rear RH	Sats, stänkskydd bakre H	3	(78 73 268)
0660	23 78 74 340	1	1 Kit, mud guard rear assy, LH, RH	Sats, stänkskydd bakre kpl, V, H	3	
0680	24 78 22 974	4	4 Screw	Skruv	5	
0700	25 78 22 962	6	6 Screw	Skruv	5	
0720	26 82 22 613	2	2 Support plate	Stödpått	3	(8269227)
0740	27 82 27 738	2	2 Mud guard, front LH	Stänkskydd, främre V	4	(62)
0760	29 82 61 984	1	1 Mud guard, front RH	Stänkskydd, främre H	4	(62)
0780	29 82 88 151	1	1 Mud guard, front LH	Stänkskydd, främre V	4	(63)

R 5905-900

62. Ch.-90801001501.-90802003233.-90803003299.-90806002233.
63. Ch.90801001502.-90802003234.-90803003300.-90806002294.-

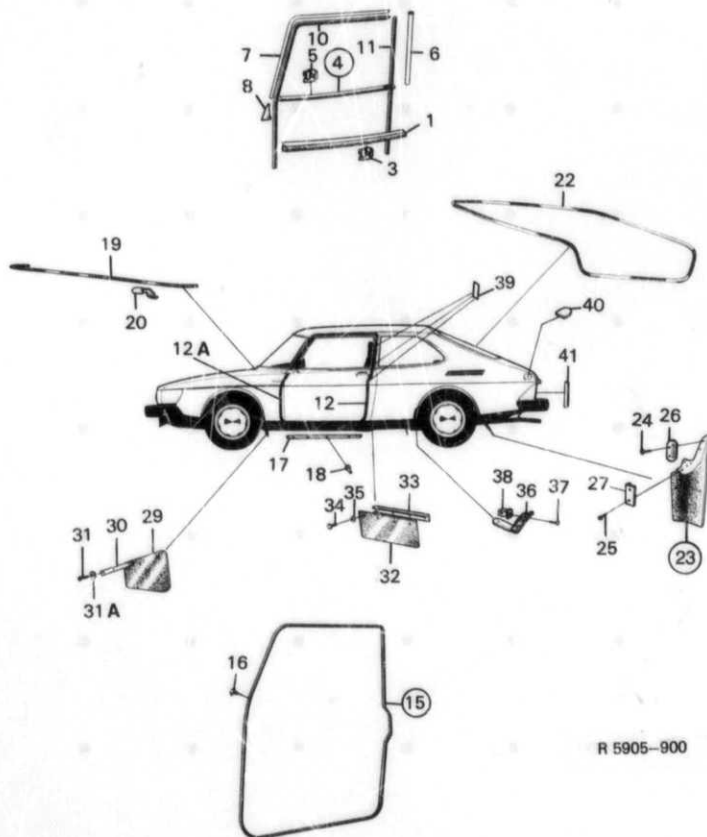

1100

External details, glass
sealings
Other sealings 3CK

Utvändiga detaljer, glas
tättningslister
Övriga tätn.lister 3CK

Date
Datum

Illustration
Bild nr

Group
Grupp


Page
Sida

1987-10 R5905

8

87

Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S S/R	Notes Anmärkning
		900	US			
1066	29 82 88 189	1	1 Mud guard, front RH	Stänkskydd, främre H	4 (63)	
1080	30 82 81 968	2	2 Attachment plate	Fästplåt	5 (62)	
1100	31 79 22 982	6	6 Screw	Skruv	5 (62)	
1105	31 79 22 495	6	6 Screw	Skruv	5 (63)	
1110	31A 79 16 497	6	6 Washer	Bricka	5 (63)	
1120	32 82 89 266	2	2 Mud guard, middle	Stänkskydd, mittre	5 (82 09 405)	
1140	33 82 09 413	2	2 Bracket	Fäste	5	
1160	34 79 22 982	8	8 Screw	Skruv	5	
1180	35 79 16 497	6	6 Washer	Bricka	5	
1200	36 82 21 012	1	1 Rubber protection LH	Gummiskydd V	3	
1220	36 82 21 020	1	1 Rubber protection RH	Gummiskydd H	3	
1250	37 79 72 185	6	6 Screw	Skruv	5	
1280	38 82 56 323	6	6 Clip	Clip	5	
1300	39 84 06 142	X	X Tape double side adhesive	Tape, dubbelhäftande	6 1 COIL - 50M (NO 8406142)	
1320	40 92 97 458	2	2 Pad	Mollanlägg	4 (8247801)	
1340	41 92 21 581	2	2 Seal strip	List	4	

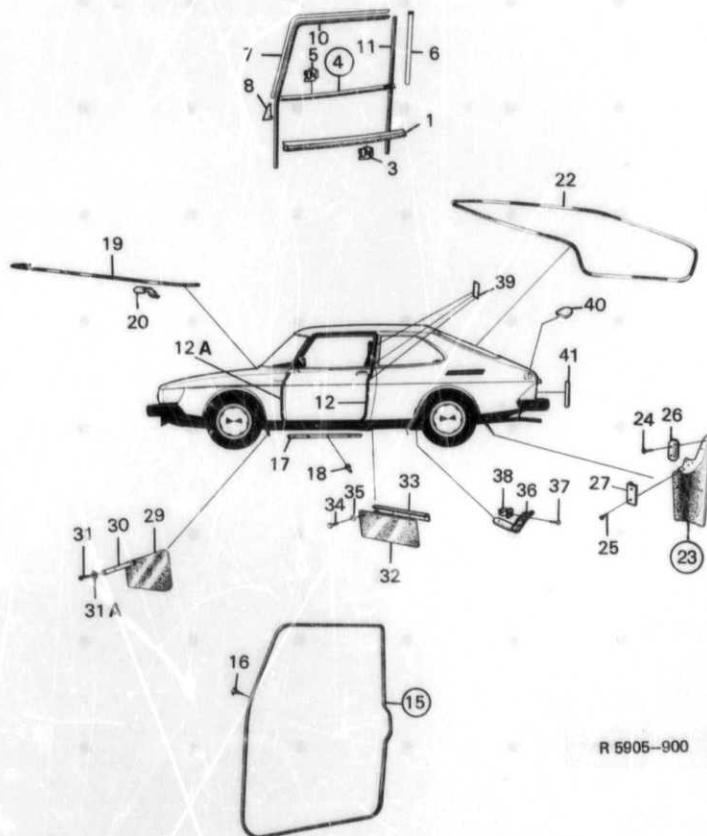

1150

External details, glass
sealings
Other sealings 5CK

Utvändiga detaljer, glas,
tätningssister
Övriga tätn.lister 5CK

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10


R5906

8

89

Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S S/R	Notes Anmärkning
		900	US			
0020	1 82 59 236	1	1 Moulding and rubber seal assy outer LH	Dekor och gummlist kpl yttre V	4	10)
0021	1 82 59 244	1	1 Moulding and rubber seal assy outer RH	Dekor och gummlist kpl yttre H	4	10)
0040	1 82 68 930	1	1 Moulding and rubber seal assy outer LH	Dekor och gummlist kpl yttre V	4	10) TURBO
0060	1 82 68 948	1	1 Moulding and rubber seal assy outer RH	Dekor och gummlist kpl yttre H	4	10) TURBO
0070	3 82 67 270	14	14 Clip	Clip	4	10)
0080	4 82 74 847	2	2 Seal, assy., inner	Tätning kpl, inre	4	10)
0130	5 82 74 573	8	8 Clip	Clip	4	10)
0150	6 82 59 194	1	1 Moulding, rear LH	Dekorationslist, bakre V	3	10)
0170	6 82 84 100	1	1 Moulding, rear RH	Dekorationslist, bakre H	3	10)(8259202)
0180	6 92 38 294	1	1 Moulding, rear LH	Dekorationslist, bakre V	3	10) TURBO(8268971)
0190	6 92 39 302	1	1 Moulding, rear RH	Dekorationslist, bakre H	3	10) TURBO(8268989)
0200	7 82 59 178	1	1 Moulding, front LH	Dekorationslist, främre V	3	10)
0210	7 82 59 186	1	1 Moulding, front RH	Dekorationslist, främre H	3	10)
0220	7 82 68 011	1	1 Moulding, front LH	Dekorationslist, främre V	3	10) TURBO
0230	7 82 69 029	1	1 Moulding, front RH	Dekorationslist, främre H	3	10) TURBO
0240	8 82 59 251	1	1 Cover plate LH	Täckplåt V	3	10)
0250	8 82 59 269	1	1 Cover plate RH	Täckplåt H	3	10)
0260	10 82 76 487	2	2 Seal, door frame, front	Tätning, dörrbåge, främre	4	10)
0270	11 82 76 479	2	2 Seal, door frame, rear	Tätning, dörrbåge, bakre	4	10)
0280	12 82 73 047	2	2 Seal strip, door opening, rear	Tätningsslist, dörröppning, bakre	3	10)
0290	12A 69 11 820	2	2 Seal strip, door opening, front	Tätningsslist, dörröppning, främre	3	(8249302)
0300	15 82 46 555	1	1 Door seal assy LH	Dörrtätningsslist kpl V	3	10) -1979
0310	15 82 46 563	1	1 Door seal assy RH	Dörrtätningsslist kpl H	3	10) -1979
0320	15 82 86 791	1	1 Door seal assy LH	Dörrtätningsslist kpl V	3	10) 1980-
0330	15 82 86 809	1	1 Door seal assy RH	Dörrtätningsslist kpl H	3	10) 1980-
0340	16 84 12 256	72	72 Clip	Clip	5	10)
0350	17 92 91 436	2	2 Protective strip	Skyddsslist	3	10)(8269763)
0360	18 82 35 178	12	12 Blind rivet	Blindnit	3	10)
0370	20 82 59 376	1	1 Moulding and rubber seal assy outer LH	Dekor och gummlist kpl yttre V	4	11)
0380	20 82 59 384	1	1 Moulding and rubber seal assy outer RH	Dekor och gummlist kpl yttre H	4	11)
0390	20 82 68 773	1	1 Moulding and rubber seal assy outer LH	Dekor och gummlist kpl yttre V	4	11) TURBO
0400	20 82 68 781	1	1 Moulding and rubber seal assy outer RH	Dekor och gummlist kpl yttre H	4	11) TURBO
0410	22 82 67 270	12	12 Clip	Clip	4	11)
0420	23 82 74 839	2	2 Seal assy, inner	Tätning kpl, inre	4	11)
0430	24 82 74 573	8	8 Clip	Clip	4	11)
0440	25 69 11 671	1	1 Moulding, front LH	Dekorationslist, främre V	3	11)(8259293)

10. Front door
11. Rear door

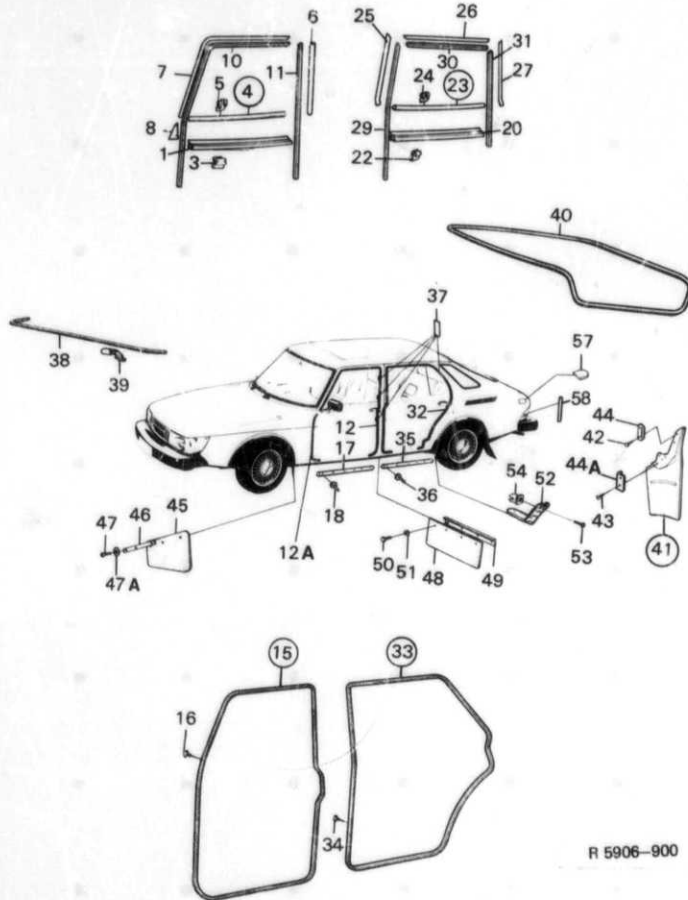


R 5906-900

0 General	1-A02
1 Tools	1-H02
2 Engine	2-A02
3 Electrical system, Instruments	2-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly, Steering	3-B02
7 Suspension, Wheels	3-C02
8 Body	3-D02
9 Accessories, Labels	3-L02
10 Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

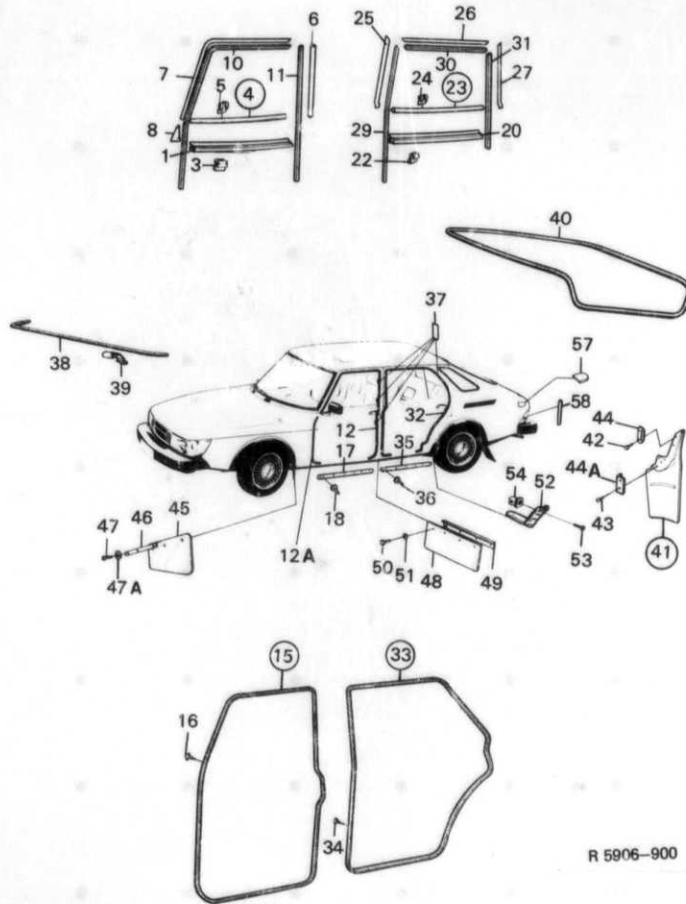

R 5906-900

1150

External details, glass
sealings
Other sealings 5CK

Utvändiga detaljer, glas,
tätningsslistor
Övriga tätn.listor 5CK

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R5906

8

91

Fig. Pos.	Part No Art nr	Quantity/Åntal		Description	Benämning	K/S SR / L	Notes Anmärkning
		900	US				
0830	25 69 11 689	1		1 Moulding, front RH	Dekorationslist, främre H	3 11)	(8259301)
0840	25 69 11 687	1		1 Moulding, front LH	Dekorationslist, främre V	3 11)	TURBO (8258831)
0850	25 69 11 705	1		1 Moulding, front RH	Dekorationslist, främre H	3 11)	TURBO (8258849)
0860	26 92 84 118	1		1 Moulding upper LH	Dekorationslist, övre V	3 11)	(8259319)
0870	26 92 84 126	1		1 Moulding upper RH	Dekorationslist, övre H	3 11)	(8259327)
0880	26 92 39 518	1		1 Moulding upper LH	Dekorationslist, övre V	3 11)	TURBO (8258856)
0890	26 92 39 526	1		1 Moulding upper RH	Dekorationslist, övre H	3 11)	TURBO (8258864)
0900	27 92 84 159	1		1 Moulding, rear LH	Dekorationslist, bakre V	3 11)	(8259335)
0910	27 92 84 167	1		1 Moulding, rear RH	Dekorationslist, bakre H	3 11)	(8259343)
0920	27 92 39 716	1		1 Moulding, rear LH	Dekorationslist, bakre V	3 11)	TURBO (8258872)
0930	27 92 39 724	1		1 Moulding, rear RH	Dekorationslist, bakre H	3 11)	TURBO (8258880)
0940	29 82 76 503	2		2 Seal, door frame, front	Tätning, dörrbåge	4 11)	
0950	30 82 76 511	2		2 Seal, door frame, upper	Tätning, dörrbåge	4 11)	
0960	31 82 76 529	2		2 Seal, rear	Tätning, bakre	4 11)	
0970	32 82 67 163	2		2 Seal strip, door-opening	Tätningsslist, dörr- öppning	3 11)	(8246290)
0980	33 82 86 759	1		1 Door seal assy. LH	Dörrtätningsslist kpl	3 11)	(8246639)
0990	33 82 86 767	1		1 Door seal assy. RH	Dörrtätningsslist kpl	3 11)	(8246647)
1000	34 84 12 256	74		74 .Clip	.Clip	5 11)	
1010	35 82 86 890	2		2 Protective strip	Skyddsslist	11)	(8269755)
1020	36 82 35 178	8		8 Blind rivet	Blindnit	3 11)	
1030	37 84 06 142	X		X Tape, double side adhesive	Tape, dubbelhäftande	6 1	COIL - 50M (NO 840524)
1040	38 92 82 104	1		1 Hood seal	Huvttätning	3	(8402885)
1050	39 84 07 468	5		5 Clip	Clip	4	(8247348)
1060	40 82 78 459	1		1 Seal, trunk door	Tätning, bagagerums- dörr	3	(78 73 250)
1070	41 78 73 565	1		1 Kit, mud guard, rear LH	Sats, stänkskydd	3	(78 73 268)
1080	41 78 73 573	1		1 Kit, mud guard, rear RH	Sats, stänkskydd	3	
1090	41 78 74 340	1		1 Kit, mud guard rear assy, LH, RH	Sats, stänkskydd bakre kpl, V, H	3	
1100	42 79 22 974	4		4 .Screw	.Skruv	5	
1110	43 79 22 982	4		4 .Screw	.Skruv	5	
1120	44 92 22 613	2		2 Support plate	Stödplåt	3	(8269227)
1130	44A 82 27 738	2		2 Support plate	Stödplåt	3	
1140	45 82 61 976	1		1 Mud guard, front LH	Stänkskydd, främre V	4	(62)
1150	45 82 61 984	1		1 Mud guard, front RH	Stänkskydd, främre H	4	(63)
1160	45 82 88 151	1		1 Mud guard, front LH	Stänkskydd, främre V	4	(63)
1170	45 82 88 169	1		1 Mud guard, front RH	Stänkskydd, främre H	4	(63)
1180	46 82 61 968	2		2 Attachment plate	Fästplåt	5	(62)
1190	47 79 22 982	6		6 Screw	Skruv	5	(62)
1200	47 79 22 495	6		6 Screw	Skruv	5	(63)
1210	47A 79 16 497	6		6 Washer	Bricka	5	(63)

11. Rear door
62. Ch.-90801001501.-90802003233.-90803003299.-90806002283.
63. Ch.90801001502.-90802003234.-90803003300.-90806002294.-

0 General	1-A02
1 Tools	1-H02
2 Engine	2-A02
3 Electrical system,	2-F02
Instruments	2-J02
4 Transmission	3-A02
5 Brakes	3-B02
6 Front assembly,	3-C02
Steering	3-D02
7 Suspension,	3-L02
Wheels	4-A02
8 Body	
9 Accessories,	
Labels	
10 Numerical	
register	

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details,	3-F16
glass, sealings	
Upholstery, interior	3-G24
equipment and	
touch-up paint	
Heating and	3-J24
ventilation system	
Bumpers	3-K18

1150

External details, glass
sealings
Other sealings 5CK

Utvändiga detaljer, glas,
tätningssister
Övriga tätn.lister 5CK

Date
Datum

Illustration
Bild nr

Group
Grupp


Page
Sida

1987-10 R5906

8

93

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R / L	Notes Anmärkning
		900	US				
1580	48 82 89 266	2		2 Mud guard, middle	Stänkskydd, mittre	5	(82 09 405)
1590	49 82 09 413	2		2 Bracket	Fäste	5	
1600	50 79 22 982	8		8 Screw	Skruv	5	
1610	51 79 16 497	8		8 Washer	Bricka	5	
1620	52 82 21 012	1		1 Rubber protection	Gunmiskydd V	3	
1630				LH			
1640	52 82 21 020	1		1 Rubber protection	Gummiskydd H	3	
1650				RH			
1660	53 79 72 185	6		6 Screw	Skruv	5	
1670	54 82 56 323	6		6 Clip	Clip	5	
1680	57 92 97 456	2		2 Pad	Mellanlägg	4	(8247801)
1690	58 92 21 581	2		2 Seal strip	List	4	

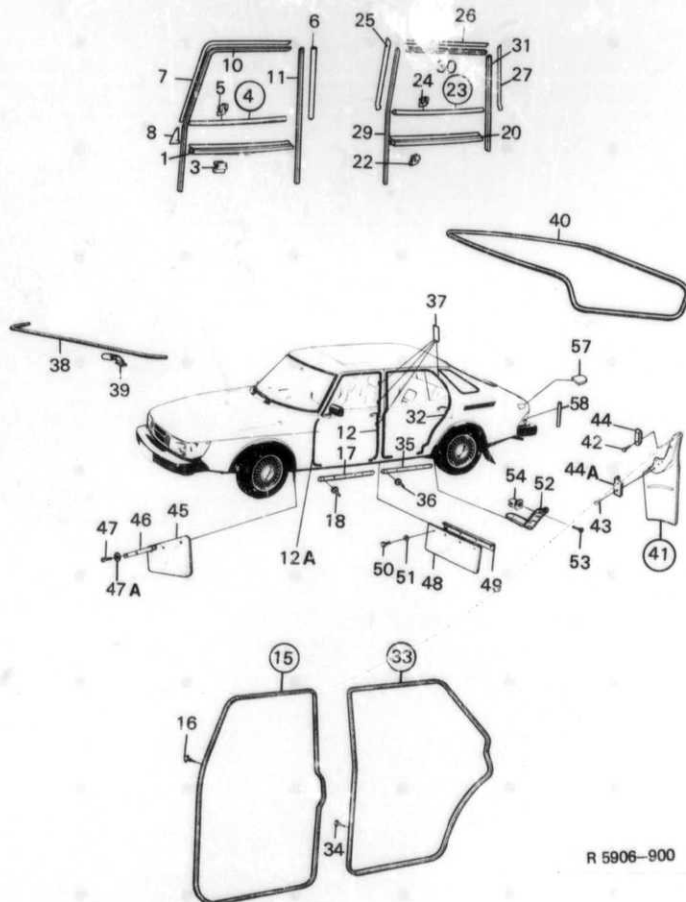

R 5906-900

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

1200

Upholstery, interior equip-
ment, touch-up paint
Insulation

Klädsel, invändig utrust-
ning, bättringsfärg
Isolering

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10


R5907

8


95

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0020	1 94 38 193	1		1 Insul. mat, front	Isoleringsmatta,	6	
0040				fråmre LH	fråmre golv V		
0060	2 94 38 201	1		1 Insul. mat, front	Isoleringsmatta,	6	
0080				floor RH	fråmre golv H		
0100	3 94 35 124	1		1 Floor insul. L/H	Golvisolering V	6	
0110	3A 94 49 778	1		1 Floor insul. LH	Golvisolering V	6 33,51	
0120	4 94 35 132	1		1 Floor insul. RH	Golvisolering H	6	
0130	4A 94 49 786	1		1 Floor insul. RH	Golvisolering H	6 33,51	
0140	5 84 90 583	1		1 Insul. mat, center	Isoleringsmatta,	6 3 CK	
0160				floor LH	mittre golv V		
0180	5 84 90 609	1		1 Insul. mat, center	Isoleringsmatta,	6 5 CK	
0200				floor LH	mittre golv V		
0210	5A 94 49 802	1		1 Insul. mat, center	Isoleringsmatta,	6 33,51	
0211				floor LH	mittre golv V		
0220	6 84 90 591	1		1 Insul. mat, center	Isoleringsmatta,	6 3 CK	
0240				floor RH	mittre golv H		
0260	6 84 90 617	1		1 Insul. mat, center	Isoleringsmatta,	6 5 CK	
0280				floor RH	mittre golv H		
0290	6A 94 49 810	1		1 Insul. mat, center	Isoleringsmatta,	6 33,51	
0291				floor RH	mittre golv H		
0300	7 84 90 674	1		1 Insul. mat, luggage	Isoleringsmatta,	6	
0320				compartment LH	bagagerum V		
0340	8 84 90 682	1		1 Insul. mat, luggage	Isoleringsmatta,	6	
0360				compartment RH	bagagerum H		
0400	9 84 90 633	1		1 Insul. mat, tunnel	Isoleringsmatta,	6 3 CK	
0420	10 84 90 625	1		1 Insul. mat, tunnel,	Isoleringsmatta,	6 5	
0440				front	tunnel, fråmre		
0450	10A 94 49 794	1		1 Insul. mat, tunnel,	Isoleringsmatta,	6 33,51	
0451				front	tunnel, fråmre		
0460	11 84 90 641	1		1 Insul. mat, tunnel,	Isoleringsmatta,	6 5 CK	
0480				rear	tunnel, bakre		
0490	11A 94 49 828	1		1 Insul. mat, tunnel,	Isoleringsmatta,	6 33,51	
0491				rear	tunnel, bakre		
0500	12 84 90 708	2		2 Insul. board upper,	Pappskiva övre, dörr	5 3 CK	
0520				door			
0540	13 84 90 716	4		4 Insul. board center	Pappskiva mittre och	5 3 CK	
0560				and lower, door	nedre, dörr		
0580	14 84 90 708	2		2 Insul board upper,	Pappskiva övre,	5 5 CK	
0600				front door	fråmrdörr		
0620	15 84 90 716	4		4 Insul. board center	Pappskiva mittre och	5 6 CK	
0640				and lower, front door	nedre, fråmrdörr		
0660	16 84 90 708	6		6 Insul. board upper,	Pappskiva övre,	5 5 CK	
0680				center and lower,	mittre och nedre		
0700				rear door	bakdörr		
0720	18 84 38 400	2		2 Insul. board, valance	Pappskiva, sidoplat	6 3 CK	
0740	19 84 61 063	2		2 Insul. board, luggage	Pappskiva, sidoplat	6	
0760				compartment side	bagagerum		
0780	21 84 38 376	2		2 Insul. mat, roof	Isoleringsmatta, tak	5 WITHOUT SUN ROOF	
0800	22 94 25 653	1		1 Insul. mat, wheel	Isoleringsmatta,	6	
0820				housing LH	hjulhus V		
0840	22 94 25 661	1		1 Insul. mat, wheel	Isoleringsmatta,	6	
0860				housing RH	hjulhus H		
0870	22A 94 49 844	1		1 Insul. mat, wheel	Isoleringsmatta,	6 33,51	
0871				housing LH	hjulhus V		
0872	22A 94 49 851	1		1 Insul. mat, wheel	Isoleringsmatta,	6 33,51	
0873				housing RH	hjulhus H		
0874	22B 94 49 877	1		1 Insul. mat, side	Isoleringsmatta,	6 33,51	
0875				plate LH	sidoplat V		
0876	22B 94 49 885	1		1 Insul. mat, side	Isoleringsmatta,	6 33,51	
0877				plate RH	sidoplat H		

33. Ch. 90781019117 - 90796003687 - GLE
51. EMS, TURBO from model 1985 -

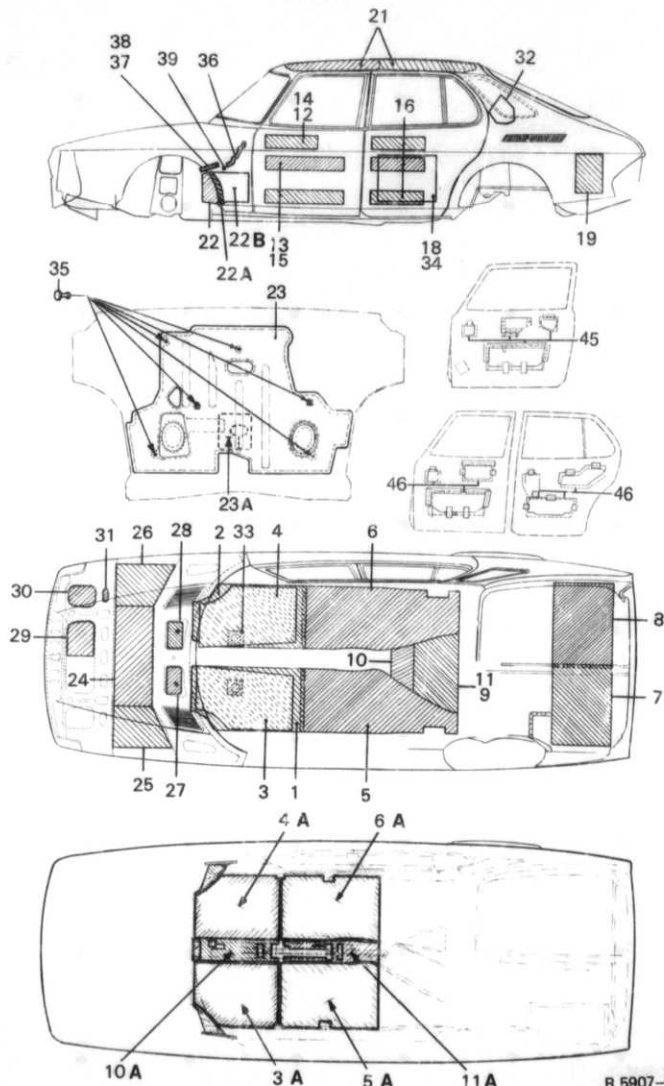

R 5907-900

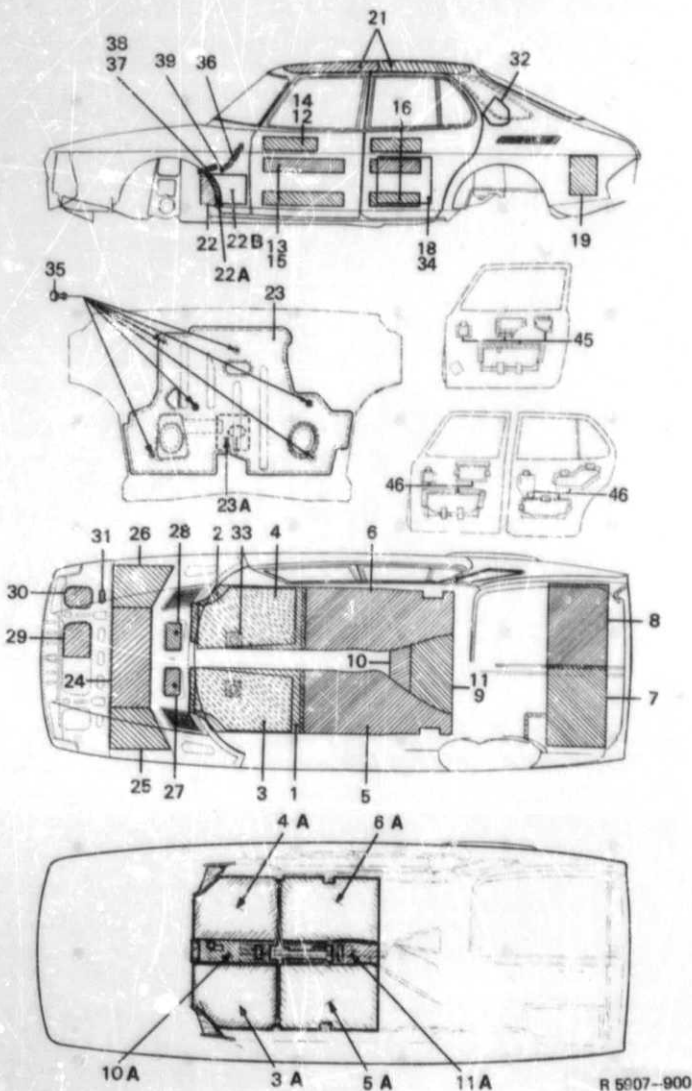

R 5907-900

SAAB
genuine parts
original reseller

3-H02

SAAB 900
M79-80

MASTER INDEX

1209

Upholstery, interior equip-
ment, touch-up paint
Insulation

Klädsel, invändig utrust-
ning, bättningsfärg
Isolering

Date
Datum

Illustration
Bild nr

Group
Grupp


Page
Sida

97

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0990	23	94 22 478	1	1 Insul. mat, dash panel	Isoleringsmatta, torped	6	
0980	23A	94 58 796	1	1 Insul. mat, center, dash panel	Isoleringsmatta, mittre, torped	6	33,51)
0910	24	94 36 617	1	1 Insul. mat, hood, center	Isoleringsmatta, huv, mittre	3	
0940	25	94 36 825	1	1 Insul. mat, hood, outer LH	Isoleringsmatta, huv, yttre V	3	
0960	26	94 36 856	1	1 Insul. mat, hood, outer RH	Isoleringsmatta, huv, yttre H	3	
1000	27	94 36 833	1	1 Insul. mat, hood, LH	Isoleringsmatta, huv V	3	
1020	28	94 36 841	1	1 Insul. mat, hood, RH	Isoleringsmatta, huv H	3	
1040	29	94 38 037	1	1 Insul. mat, hood, center	Isoleringsmatta, huv mittre	3	TURBO
1120	30	94 38 046	1	1 Insul. mat, hood, RH	Isoleringsmatta, huv H	3	TURBO
1140	31	94 38 052	1	1 Insul. mat, hood	Isoleringsmatta, huv	3	TURBO
1180	32	94 28 211	1	1 Insul. mat LH	Isoleringsmatta V	6	3 CK
1200	32	94 28 237	1	1 Insul. mat RH	Isoleringsmatta H	6	3 CK
1220	33	94 90 576	2	2 Insul. mat	Isoleringsmatta	6	
1240	35	94 43 920	7	7 Blind rivet	Blindnit	5	
1260	36	94 50 974	2	2 Foam plastic, panel lower	Skumplast, panel nedre	6	33,51)
1300	37	94 50 016	1	1 Insul. mat LH	Isolering V	6	33,51)
1320	38	94 50 024	1	1 Insul. mat RH	Isolering H	6	33,51)
1400	39	94 50 230	1	1 Sealing	Isolering	6	33,51)
1420	45	97 46 272	1	1 Kit, water protective paper, front door	Sats, vattenavledande papper, främrdör	5	3CK
1500	46	97 46 280	1	1 Kit, water protective paper, front- and rear door	Sats, vattenavledande papper, fram- och bakdör	5	5CK

33. Ch. 90791019117-, 90796003687-, GLE
51. EMS.TURBO from model 1980-

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02
8 GROUP INDEX		
Main body		
Instrument panel		3-D10
Hood, front. fenders		3-E06
Doors, trunk lid		3-E14
External details, glass, sealings		3-E20
Upholstery, interior equipment and touch-up paint		3-F16
Heating and ventilation system		3-G24
Bumpers		3-J24
		3-K18

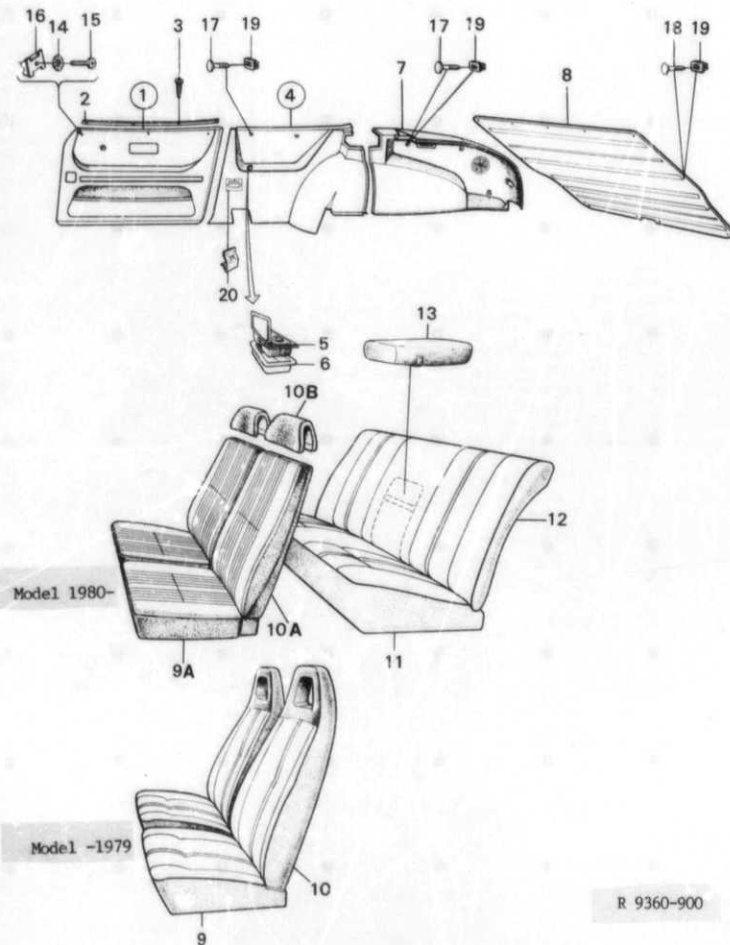

R 9360-900

SAAB
genuine parts
original reservdelar

3-H04

SAAB 900
M79-80

MASTER INDEX

1250

Upholstery, interior equip
ment, touch-up paint
Upholstery 3CK

Klädsel, invändig
utrustning, bättringsfärg
Klädsel 3 CK

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R9360

8

99


Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0020	1 94 37 070	1		1 Door trim assy L H, brown	Dörrklädsel kpl V, brun	6	TRIM COLOUR C04
0040	1 94 37 088	1		1 Door trim assy R H, brown	Dörrklädsel kpl H, brun	6	TRIM COLOUR C04
0080	1 94 37 096	1		1 Door trim assy L H, grey	Dörrklädsel kpl V, grå	6	TRIM COLOUR C05
0100	1 94 37 104	1		1 Door trim assy R H, grey	Dörrklädsel kpl H, grå	6	TRIM COLOUR C05
0120	1 94 37 112	1		1 Door trim assy L H, green	Dörrklädsel kpl V, grön	6	TRIM COLOUR C06
0140	1 94 37 120	1		1 Door trim assy R H, green	Dörrklädsel kpl H, grön	6	TRIM COLOUR C06
0160	1 94 37 054	1		1 Door trim assy LH, bordeaux	Dörrklädsel kpl V, bordeaux	6	TRIM COLOUR C07
0180	1 94 37 062	1		1 Door trim assy R H, bordeaux	Dörrklädsel kpl H, bordeaux	6	TRIM COLOUR C07
0200	1 94 37 138	1		1 Door trim assy L H, blue	Dörrklädsel kpl V, blå	6	TRIM COLOUR C08
0220	1 94 37 146	1		1 Door trim assy R H, blue	Dörrklädsel kpl H, blå	6	TRIM COLOUR C08
0240	2 84 67 094	1		1 Strip, upper L H	List, övre V	6	
0260	2 84 67 102	1		1 Strip, upper R H	List, övre H	6	
0280	3 94 25 232	6		6 Screw	Skruv	5	
0300	4 94 40 470	1		1 Side trim assy LH, brown	Sidklädsel kpl V, brun	6	TRIM COLOUR C04
0320	4 94 40 488	1		1 Side trim assy R H, brown	Sidklädsel kpl H, brun	6	TRIM COLOUR C04
0340	4 94 40 496	1		1 Side trim assy L H, grey	Sidklädsel kpl V, grå	6	TRIM COLOUR C05
0360	4 94 40 504	1		1 Side trim assy R H, grey	Sidklädsel kpl H, grå	6	TRIM COLOUR C05
0380	4 94 40 512	1		1 Side trim assy L H, green	Sidklädsel kpl V, grön	6	TRIM COLOUR C06
0400	4 94 40 520	1		1 Side trim assy R H, green	Sidklädsel kpl H, grön	6	TRIM COLOUR C06
0420	4 94 40 132	1		1 Side trim assy L H, bordeaux	Sidklädsel kpl V, bordeaux	6	TRIM COLOUR C07
0440	4 94 40 140	1		1 Side trim assy R H, bordeaux	Sidklädsel kpl H, bordeaux	6	TRIM COLOUR C07
0460	4 94 40 538	1		1 Side trim assy L H, blue	Sidklädsel kpl V, blå	6	TRIM COLOUR C08
0480	4 94 40 546	1		1 Side trim assy R H, blue	Sidklädsel kpl H, blå	6	TRIM COLOUR C08
0500	5 84 36 933	1		1 Ashtray L H	Askkopp V	5 (9440089)	
0520	5 84 36 941	1		1 Ashtray R H	Askkopp H	5 (9440097)	
0540	6 84 21 323	1		1 Cover L H	Käpa V	6	
0560	6 84 14 856	1		1 Cover R H	Käpa H	6	
0580	7 94 40 900	1		1 Side trim, luggage compartment L H, brown	Sidklädsel bagagerum V brun	6	TRIM COLOUR C04
0600	7 94 58 514	1		1 Side trim, luggage compartment LH brown	Sidklädsel bagagerum V brun	6 (40)	TRIM COLOUR C04
0620	7 94 40 918	1		1 Side trim, luggage compartment R H, brown	Sidklädsel, bagagerum H brun	6	TRIM COLOUR C04
0640	7 94 40 926	1		1 Side trim, luggage compartment L H, grey	Sidklädsel, bagagerum V grå	6	TRIM COLOUR C05
0660	7 94 58 522	1		1 Side trim, luggage compartment LH grey	Sidklädsel bagagerum V grå	6 (40)	TRIM COLOUR C05

40. For cars with mini spare wheel

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

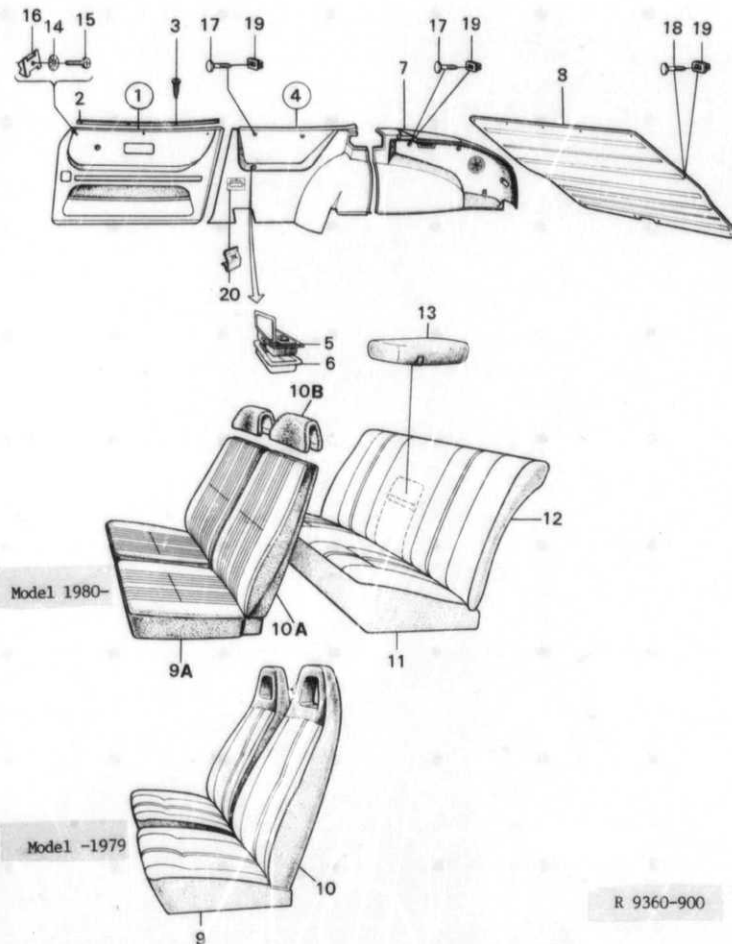

1250

Upholstery, interior equip-
ment, touch-up paint
Upholstery 3CK

Klädsel, invändig
utrustning, bättringsfärg
Klädsel 3 CK

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Side

1987-10

R9360

8

101

Fig. Pos.	Part No Art nr	Quantity/ Antal	Description	Benämning	K/S SR	Notes Anmärkning
		900	US			
1140	7 94 40 934	1	1 Side trim, luggage compartment R H grey	Sidklädsel, bagagerum H grå	6	TRIM COLOUR C05
1180	7 94 40 942	1	1 Side trim, luggage compartment L H green	Sidklädsel, bagagerum V grön	6	TRIM COLOUR C06
1200	7 94 58 530	1	1 Side trim, luggage compartment LH green	Sidklädsel bagagerum V grön	6	40) TRIM COLOUR C06
1220	7 94 40 959	1	1 Side trim, luggage compartment R H green	Sidklädsel, bagagerum H grön	6	TRIM COLOUR C06
1240	7 94 07 412	1	1 Side trim, luggage compartment L H bordeaux	Sidklädsel, bagagerum V bordeaux	6	TRIM COLOUR C07
1242	7 94 58 506	1	1 Side trim, luggage compartment LH bordeaux	Sidklädsel bagagerum V bordeaux	6	40) TRIM COLOUR C07
1280	7 94 07 420	1	1 Side trim, luggage compartment R H bordeaux	Sidklädsel, bagagerum H bordeaux	6	TRIM COLOUR C07
1280	7 94 40 967	1	1 Side trim, luggage compartment L H blue	Sidklädsel, bagagerum V blå	6	TRIM COLOUR C08
1300	7 94 58 548	1	1 Side trim, luggage compartment LH blue	Sidklädsel bagagerum V blå	6	40) TRIM COLOUR C08
1320	7 94 40 975	1	1 Side trim, luggage compartment R H blue	Sidklädsel, bagagerum H blå	6	TRIM COLOUR C08
1340	8 84 62 913	1	1 Door trim, trunk door brown	Dörrklädsel, bagage-rumsdörr, brun	6	FOR ALL COLOURS
1360	9 94 32 311	2	2 Upholstery, seat, front seat, brown	Sitspåse, framstol, brun	6	
1362	10 94 32 329	2	2 Upholstery, back rest front seat, brown	Ryggpåse, framstol, brun	6	-1979. TRIM COLOUR C04
1380	11 94 31 107	1	1 Upholstery, seat rear seat, brown	Sitspåse, baksäte, brun	6	
1400	12 94 31 149	1	1 Upholstery, back rest rear seat, brown	Ryggpåse, baksäte, brun	6	
1420	9A 94 48 499	2	2 Upholstery, seat, front seat, brown	Sitspåse, framstol, brun	6	
1440	10A 94 48 507	2	2 Upholstery, back rest front seat, brown	Ryggpåse, framstol, brun	6	1980-. TRIM COLOUR C04
1460	10B 94 61 519	2	2 Upholstery, neck guard, brown	Klädselpåse, nack-skydd, brun	6	
1480	11 94 55 817	1	1 Upholstery seat rear seat, brown	Sitspåse, baksäte, brun	6	
1482	12 94 55 825	1	1 Upholstery, back rest rear seat, brown	Ryggpåse, baksäte, brun	6	
1500	9 94 32 337	2	2 Upholstery, seat front seat, grey	Sitspåse, framstol, grå	6	
1520	10 94 32 345	2	2 Upholstery, back rest front seat, grey	Ryggpåse, framstol, grå	6	-1979. TRIM COLOUR C05
1540	11 94 31 115	1	1 Upholstery, seat rear seat, grey	Sitspåse, baksäte, grå	6	
1560	12 94 31 156	1	1 Upholstery, back rest rear seat, grey	Ryggpåse, baksäte, grå	6	
1580	9A 94 48 515	2	2 Upholstery, seat, front seat, grey	Sitspåse, framstol, grå	6	1980-. TRIM COLOUR C05

40. For cars with mini spare wheel

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Supercharger, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

1250

Upholstery, interior equip-
ment, touch-up paint
Upholstery 3CK

Klädsel, invändig
utrustning, bättringsfärg
Klädsel 3 CK

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


103

1987-10

R9360

8

103

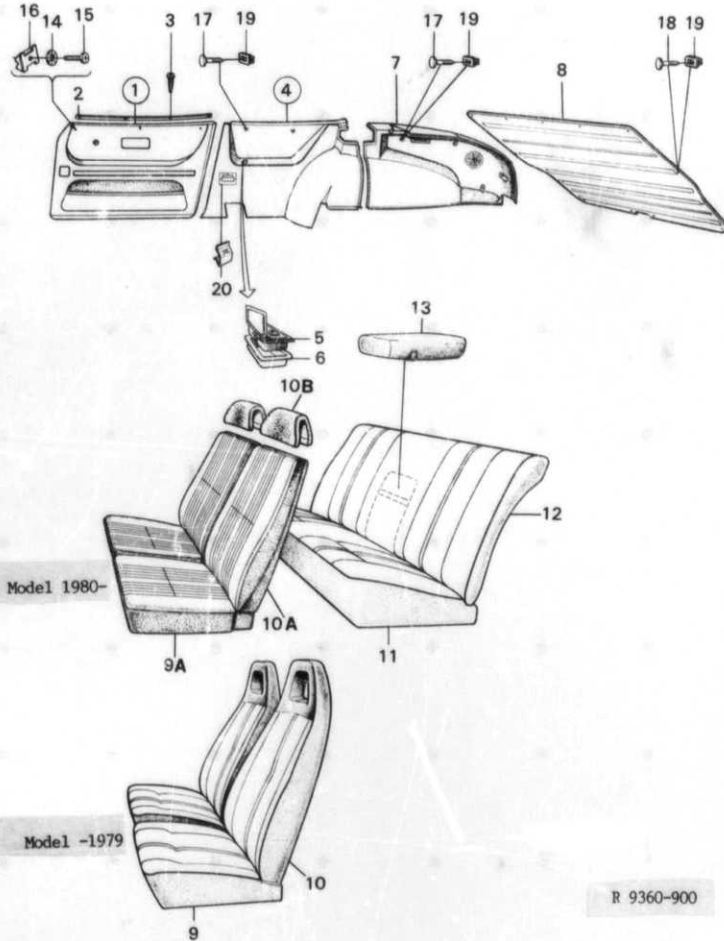

R 9360-900

Fig. Pos.	Part No Art nr	Quantity/Amount		Description	Benämning	K/S SR /	Notes Anmärkning
		900	US				
1983	10A 94 48 523	2		2 Upholstery, back rest	Ryggpåse, framstol,	6	1980-. TRIM COLOUR C05
1984	10B 94 51 527	2		front seat, grey	grå	6	
1985				2 Upholstery, neck	Klädselpåse, nack-	6	
1986				guard, grey	skydd, grå	6	
1987	11 94 55 833	1		1 Upholstery, seat	Sitspåse, baksäte,	6	
1988				rear seat, grey	grå	6	
1989	12 94 55 841	1		1 Upholstery, back rest	Ryggpåse, baksäte,	6	
1970				rear seat, grey	grå	6	
1971							
1980	9 94 32 352	2		2 Upholstery, seat	Sitspåse, framstol,	6	
2000				front seat, green	grön	6	
2020	10 94 32 360	2		2 Upholstery, back rest	Ryggpåse, framstol,	6	-1979. TRIM COLOUR C06
2040				front seat, green	grön	6	
2060	11 94 31 123	1		1 Upholstery, seat	Sitspåse, baksäte,	6	
2080				rear seat, green	grön	6	
2100	12 94 31 164	1		1 Upholstery, back rest	Ryggpåse, baksäte,	6	
2120				rear seat, green	grön	6	
2140							
2141	9A 94 48 531	2		2 Upholstery, seat	Sitspåse, framstol,	6	
2142				front seat, green	grön	6	
2143	10A 94 48 549	2		2 Upholstery, back rest	Ryggpåse, framstol,	6	1980-. TRIM COLOUR C06
2144				front seat, green	grön	6	
2145	10B 94 51 535	2		2 Upholstery, neck	Klädselpåse, nack-	6	
2146				guard, green	skydd, grön	6	
2147	11 94 55 858	1		1 Upholstery, seat	Sitspåse, baksäte,	6	
2148				rear seat, green	grön	6	
2149	12 94 55 866	1		1 Upholstery, back rest	Ryggpåse, baksäte,	6	
2150				rear seat, green	grön	6	
2151							
2160	9 94 33 186	2		2 Upholstery, seat	Sitspåse, framsäte,	6	
2180				front seat, green	grön	6	
2200	10 94 33 194	2		2 Upholstery, back rest	Ryggpåse, framsäte,	6	
2220				front seat, green	grön	6	-1979. EMS, TURBO, TRIM
2240	11 94 31 198	1		1 Upholstery, seat	Sitspåse, baksäte,	6	COLOUR C06
2260				rear seat, green	grön	6	
2280	12 94 31 834	1		1 Upholstery, back rest	Ryggpåse, baksäte,	6	
2300				rear seat, green	grön	6	
2320							
2321	9A 94 48 598	2		2 Upholstery, seat	Sitspåse, framsäte,	6	
2322				front seat, green	grön	6	
2323	10A 94 48 606	2		2 Upholstery, back rest	Ryggpåse, framsäte,	6	
2324				front seat, green	grön	6	
2325	10B 94 51 568	2		2 Upholstery, neck	Klädselpåse, nack-	6	1980-. EMS, TURBO, TRIM
2326				guard, green	skydd, grön	6	COLOUR C06
2327	11 94 31 198	1		1 Upholstery, seat	Sitspåse, baksäte,	6	
2328				rear seat, green	grön	6	
2329	12 94 31 834	1		1 Upholstery, back rest	Ryggpåse, baksäte,	6	
2330				rear seat, green	grön	6	
2331							
2340	9 94 33 160	2		2 Upholstery, seat	Sitspåse, framsäte,	6	
2360				front seat, bordeaux	bordeaux	6	
2380	10 94 33 178	2		2 Upholstery, back rest	Ryggpåse, framsäte,	6	-1979. TRIM COLOUR C07
2400				front seat, bordeaux	bordeaux	6	
2420	11 94 31 180	1		1 Upholstery, seat	Sitspåse, baksäte,	6	
2440				rear seat, bordeaux	bordeaux	6	
2460	12 94 31 826	1		1 Upholstery, back rest	Ryggpåse, baksäte,	6	
2480				rear seat, bordeaux	bordeaux	6	
2500							
2501	9A 94 48 572	2		2 Upholstery, seat	Sitspåse, framsäte,	6	
2502				front seat, bordeaux	bordeaux	6	
2503	10A 94 48 580	2		2 Upholstery, back rest	Ryggpåse, framsäte,	6	
2504				front seat, bordeaux	bordeaux	6	
2505	10B 94 51 550	2		2 Upholstery, neck	Klädselpåse, nack-	6	1980-. EMS, TURBO, TRIM
2506				guard, bordeaux	skydd, bordeaux	6	COLOUR C07

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02
8 GROUP INDEX		
	Main body	3-D10
	Instrument panel	3-E06
	Hood, front, fenders	3-E14
	Doors, trunk lid	3-E20
	External details,	
	glass, sealings	3-F16
	Upholstery, interior	
	equipment and	
	touch-up paint	3-G24
	Heating and	
	ventilation system	3-J24
	Bumpers	3-K18

1250

**Upholstery, interior equip-
ment, touch-up paint**
Upholstery 3CK

**Klädsel, invändig
utrustning, bättringsfärg**
Klädsel 3 CK

Date
Datum

Illustration
Bild nr

Group
Grupp


Page
Sida

1987-10

R9360

8

105

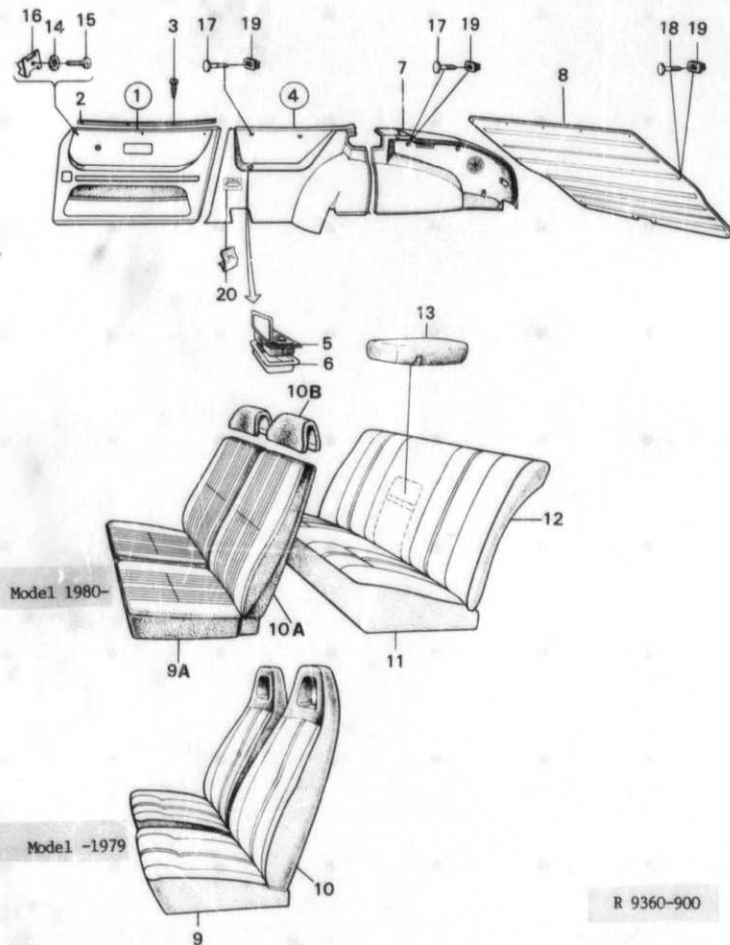


R 9360-900

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
2507	11 94 31 180	1		1 Upholstery, seat, rear seat, bordeaux	Sitspåse, baksäte, bordeaux	6	1980- EMS, TURBO, TRIM COLOUR C07
2508	12 94 31 826	1		1 Upholstery, back rest rear seat, bordeaux	Ryggpåse, baksäte, bordeaux	6	
2510	9 94 33 202	2		2 Upholstery, seat front seat, blue	Sitspåse, framstol, blå	6	
2520	10 94 33 210	2		2 Upholstery, back rest front seat, blue	Ryggpåse, framstol, blå	6	-1979 TRIM COLOUR C08
2540	11 94 31 800	1		1 Upholstery, seat rear seat, blue	Sitspåse, baksäte, blå	6	
2580	12 94 31 842	1		1 Upholstery, back rest rear seat, blue	Ryggpåse, baksäte, blå	6	
2600	9A 94 48 614	2		2 Upholstery, seat, front seat, blue	Sitspåse, framstol, blå	6	
2680	10A 94 48 622	2		2 Upholstery, back rest front seat, blue	Ryggpåse, framstol, blå	6	
2681	10B 94 51 576	2		2 Upholstery, neck guard, blue	Klädselpåse, nack-skydd, blå	6	1980- EMS, TURBO, TRIM COLOUR C08
2682	11 94 31 800	1		1 Upholstery, seat, rear seat, blue	Sitspåse, baksäte, blå	6	
2683	12 94 31 842	1		1 Upholstery, back rest rear seat, blue	Ryggpåse, baksäte, blå	6	
2684	13 94 40 389	1		1 Cloth cover, arm rest green	Klädselpåse, armstöd, grön	6	TRIM COLOUR C06
2685	13 94 24 383	1		1 Cloth cover, arm rest bordeaux	Klädselpåse, armstöd, bordeaux	6	TRIM COLOUR C07
2686	13 94 40 397	1		1 Cloth cover, arm rest blue	Klädselpåse, armstöd, blå	6	TRIM COLOUR C08
2687	14 94 37 617	10		10 Plastic washer, brown	Plastbricka, brun	5	
2688	14 94 37 625	10		10 Plastic washer, grey	Plastbricka, grå	5	
2689	14 94 37 633	10		10 Plastic washer, green	Plastbricka, grön	5	
2690	14 84 98 909	10		10 Plastic washer, bordeaux	Plastbricka, bordeaux	5	
2691	14 94 37 641	10		10 Plastic washer, blue	Plastbricka, blå	5	
2700	15 79 72 201	10		10 Screw	Skruv	5	
2720	16 86 01 916	10		10 Nut clip	Mutterclip	5	
2740	17 94 23 732	16		16 Quick screw, side trim, brown	Snabbskruv, sidklädsel, brun	5	
2780	17 94 23 740	16		16 Quick screw, side trim, grey	Snabbskruv, sidklädsel, grå	5	
2800	17 94 23 757	16		16 Quick screw, side trim, green	Snabbskruv, sidklädsel, grön	5	
3060	17 84 98 891	16		16 Quick screw, side trim, bordeaux	Snabbskruv, sidklädsel, bordeaux	5	
3100	17 94 23 765	16		16 Quick screw, side trim, blue	Snabbskruv, sidklädsel, blå	5	
3120	18 84 63 622	13		13 Quick screw, trunk door trim, brown	Snabbskruv, klädsel bagagerumsdörr, brun	5	
3140	19 94 52 898	29		29 Quick nut	Snabbmutter	5	
3160	20 94 00 334	6		6 Clip	Clip	3	
3180	3220 94 23 294	X		X Cloth, brown	Tyg brunt	6	TRIM COLOUR C04
3200	3230 94 29 218	X		X Cloth, grey	Tyg grått	6	TRIM COLOUR C05
3220	3240 94 23 229	X		X Cloth, green	Tyg grönt	6	TRIM COLOUR C06
3240	3260 94 23 252	X		X Cloth, green	Tyg grönt	6	EMS, GLE, TURBO, TRIM COLOUR C06
3260	3340 94 29 127	X		X Cloth, bordeaux	Tyg, bordeaux	6	TRIM COLOUR C07
3280	3360 94 23 278	X		X Cloth, blue	Tyg, blått	6	TRIM COLOUR C08
3300	3380 94 23 096	X		X Coated fabric, brown	Vävpåst, brun	6	TRIM COLOUR C04
3320	3400 94 29 150	X		X Coated fabric, grey	Vävpåst, grå	6	TRIM COLOUR C05
3340	3420 94 28 947	X		X Coated fabric, green	Vävpåst, grön	6	TRIM COLOUR C06
3360	3440 84 97 562	X		X Coated fabric, bordeaux	Vävpåst, bordeaux	6	TRIM COLOUR C07

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

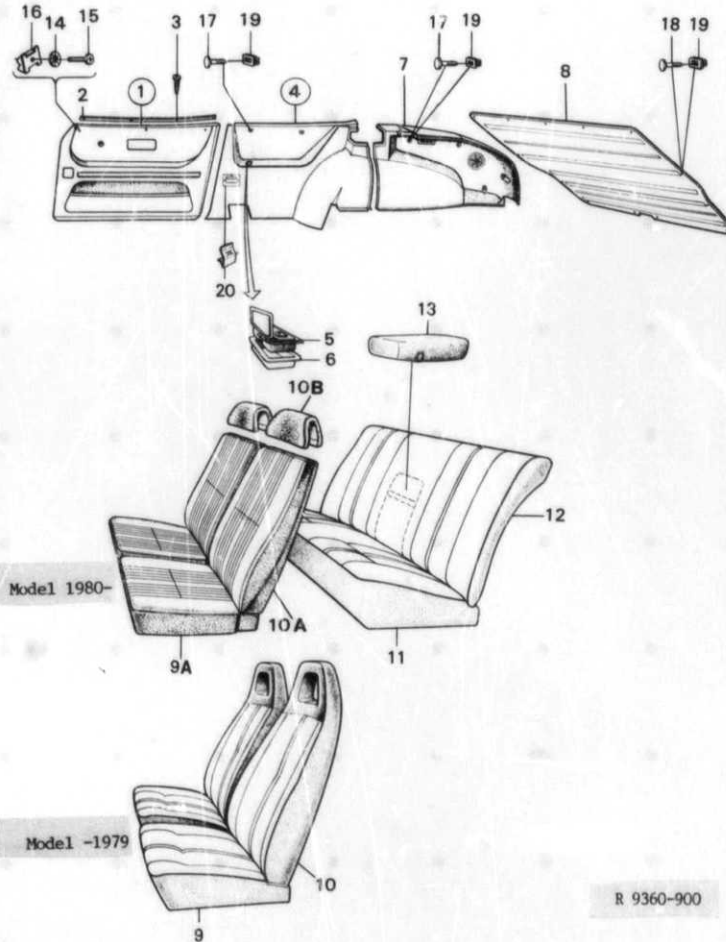

R 9360-900

1250

Upholstery, interior equipment, touch-up paint
Upholstery 3CK

Klädsel, invändig utrustning, bättringsfärg
Klädsel 3 CK

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R9360

8

107

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
3480	94 23 088	X		X Coated fabric, blue	Vävpåst, blå	6	TRIM COLOUR C08
3500	94 32 642	X		X Plastic strip for covers, brown	Kederlist för klädselpåsar, brun	6	
3520	94 32 656	X		X Plastic strip for covers, grey	Kederlist för klädselpåsar grå	6	
3560	94 32 667	X		X Plastic strip for covers, green	Kederlist för klädselpåsar grön	6	
3600	73 77 344	X		X Plastic strip for covers, bordeaux	Kederlist för klädselpåsar, bordeaux	6	
3620	94 32 675	X		X Plastic strip for covers, blue	Kederlist för klädselpåsar, blå	6	
3640							
3660							
3680							
3700							
3720							
3740							
3760							
3780							
3800							
3820							
3840							
3860							
3880							
3900							
3920							
3940							
3960							
3980							
4000							
4020							
4040							


THE UPHOLSTERY ARE EXPECTED TO BE KEPT IN STOCK AT LEAST TWO YEARS AFTER WE HAVE CEASED MOUNTING THE PARTICULAR UPHOLSTERY IN THE SERIAL PRODUCTION. CLOTH, COATED FABRICS AND PLASTIC STRIPS, HOWEVER, WILL STILL BE STOCKED AND AVAILABLE FOR PURCHASE BY THE METER.

KIÄDSLARNÄRÄKNAS FINNAS I LAGER MINST TVÅ ÅR EFTER DET VI SLUTAT MONTERA DEM I SERIEPRODUKTIONEN. TYG, PLAST OCH KEDER KOMMER DÖCK ATT LAGERFÖRAS SÅ SOM METERVÄRÄ.

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

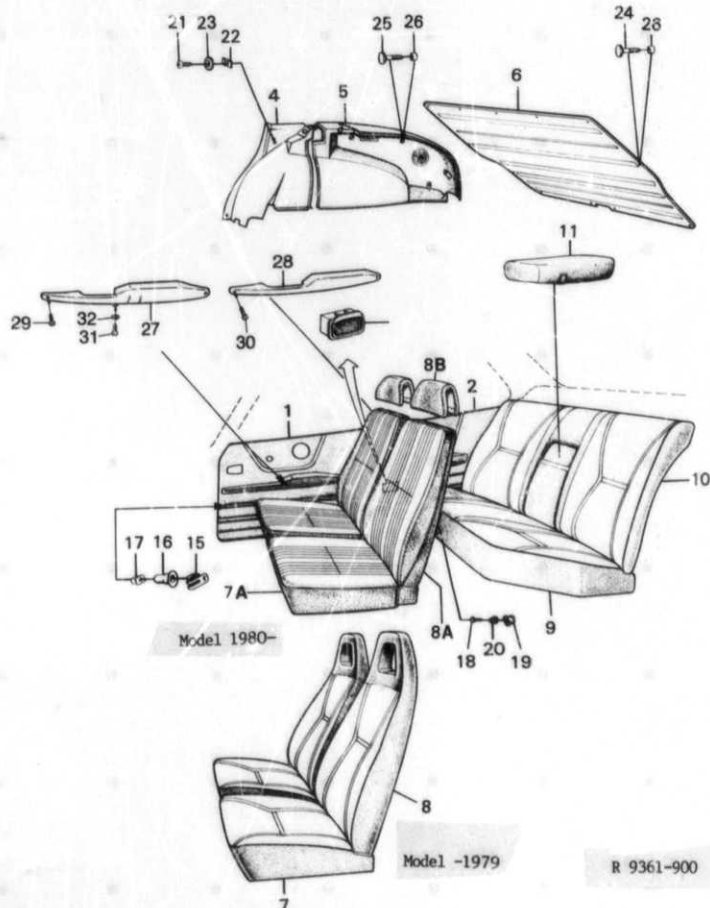

1300

Upholstery, interior equip-
ment, touch-up paint
Upholstery, 5Ck

Klädsel, invändig utrust-
ning, bättringsfärg
Klädsel 5Ck

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10 RS351

8

109


Fig. Pos.	Part No Art nr	Quantity/Åntal		Description	Benämning	K S	Notes Anmärkning
		900	US				
0010	1 94 27 436	1		1 Door trim LH brown	Dörrklädsel V, brun	6	
0020	1 94 27 451	1		1 Door trim RH brown	Dörrklädsel H, brun	6	
0030	2 94 27 477	1		1 Door trim LH brown	Dörrklädsel V, brun	6	TRIM COLOUR C04
0040	2 94 27 493	1		1 Door trim RH brown	Dörrklädsel H, brun	6	
0050	1 94 27 519	1		1 Door trim LH grey	Dörrklädsel V, grå	6	
0070	1 94 27 535	1		1 Door trim RH grey	Dörrklädsel H, grå	6	TRIM COLOUR C05
0080	2 94 27 550	1		1 Door trim LH grey	Dörrklädsel V, grå	6	
0090	2 94 27 576	1		1 Door trim RH grey	Dörrklädsel H, grå	6	
0100	1 94 27 592	1		1 Door trim LH green	Dörrklädsel V, grön	6	
0110	1 94 27 618	1		1 Door trim RH green	Dörrklädsel H, grön	6	TRIM COLOUR C06
0130	2 94 27 634	1		1 Door trim LH green	Dörrklädsel V, grön	6	
0140	2 94 27 659	1		1 Door trim RH green	Dörrklädsel H, grön	6	
0150	1 94 28 152	1		1 Door trim LH green	Dörrklädsel V, grön	6	
0160	1 94 28 180	1		1 Door trim RH green	Dörrklädsel H, grön	6	GLE TURBO TRIM
0170	2 94 30 034	1		1 Door trim LH green	Dörrklädsel V, grön	6	COLOUR C06
0180	2 94 30 042	1		1 Door trim RH green	Dörrklädsel H, grön	6	
0200	1 94 28 137	1		1 Door trim LH bordeaux	Dörrklädsel V bordeaux	6	
0210	1 94 28 145	1		1 Door trim RH bordeaux	Dörrklädsel H bordeaux	6	GLE TURBO TRIM
0240	2 94 30 018	1		1 Door trim LH bordeaux	Dörrklädsel V bordeaux	6	COLOUR C07
0250	2 94 30 026	1		1 Door trim RH bordeaux	Dörrklädsel H bordeaux	6	
0270	1 94 28 178	1		1 Door trim LH blue	Dörrklädsel V blå	6	
0280	1 94 28 186	1		1 Door trim RH blue	Dörrklädsel H blå	6	GLE TURBO TRIM
0300	2 94 30 059	1		1 Door trim LH blue	Dörrklädsel V blå	6	COLOUR C08
0320	2 94 30 067	1		1 Door trim RH blue	Dörrklädsel H blå	6	
0340	3 94 21 520	2		2 Ashtray	Askköpp	5	
0360	4 84 88 553	1		1 Side trim LH brown	Sidklädsel V brun	6 (31)	
0370	4 84 88 561	1		1 Side trim RH brown	Sidklädsel H brun	6 (31)	
0380	4 94 42 484	1		1 Side trim LH	Sidklädsel V brun	6 (32)	
0390	4 94 42 492	1		1 Side trim RH	Sidklädsel H brun	6 (32)	
0400	5 84 62 530	1		1 Side trim, luggage compartment LH brown	Sidklädsel, bagagerum V brun	6	
0420	5 84 62 848	1		1 Side trim, luggage compartment RH brown	Sidklädsel, bagagerum H brun	6	FOR ALL COLOURS
0430	5 94 58 498	1		1 Side trim, luggage compartment LH brown	Sidklädsel, bagagerum V brun	6 (40)	FOR ALL COLOURS
0440	6 84 62 913	1		1 Door trim, trunk door, brown	Dörrklädsel, bagage- rumsdörr brun	6	
0470	7 94 32 311	2		2 Upholstery, seat, front seat, brown	Sitspåse, framstol brun	6	
0480	8 94 32 329	2		2 Upholstery, back rest front seat, brown	Ryggpåse, framstol brun	6	-1979. TRIM COLOUR C04
0500	9 94 23 708	1		1 Upholstery, seat, rear seat, brown	Sitspåse, baksäte, brun	6	
0510	10 94 34 721	1		1 Upholstery, back rest rear seat, brown	Ryggpåse, baksäte brun	6	
0520	7A 94 48 499	2		2 Upholstery, seat, front seat, brown	Sitspåse, framstol, brun	6	1980- TRIM COLOUR C04

31. Ch. -90791021315 - 90796003873.
32. Ch. 90791021320 - 90796003874-..
40. For cars with mini spare wheel

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front. fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

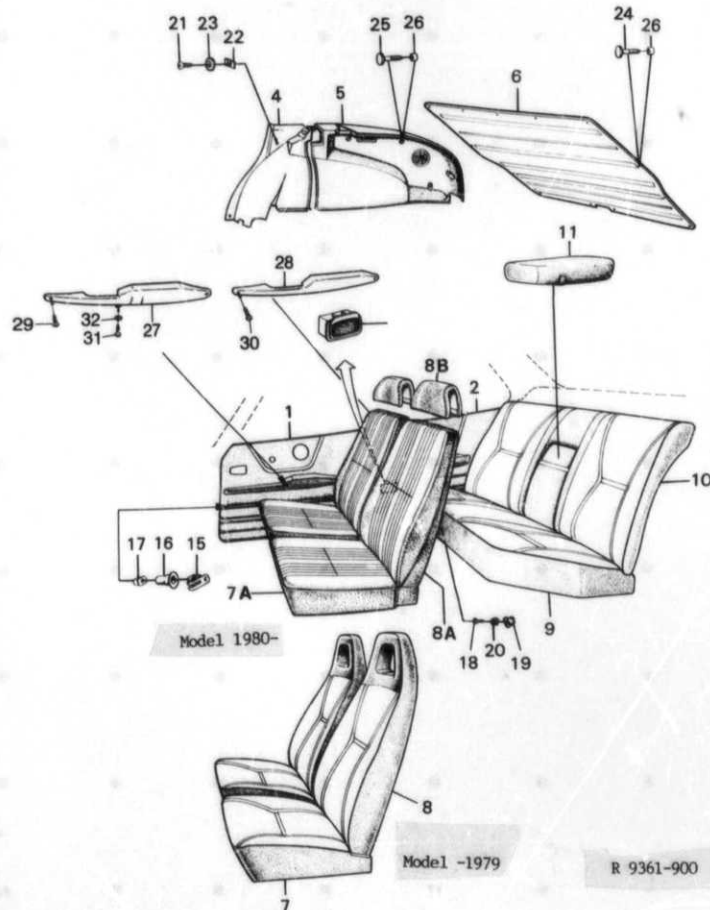

1300

**Upholstery, interior equip-
ment, touch-up paint**
Upholstery, 5Ck

**Klädsel, invändig utrust-
ning, bättringsfärg**
Klädsel 5Ck

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R9361

8


111

Fig. Pos.	Part No Art nr	Quantity/Åntal		Description	Benämning	K/S S/L	Notes Anmärkning
		900	US				
0610	8A 94 48 507	2		2 Upholstery, back rest front seat, brown	Ryggpåse, framstol, brun	6	
0620	8B 94 51 519	2		2 Upholstery, neck guard, brown	Klädselpåse, nack- skydd, brun	6	1980- TRIM COLOUR C04
0640	9 94 55 916	1		1 Upholstery, seat, rear seat, brown	Sitspåse, baksäte, brun	6	
0670	10 94 55 924	1		1 Upholstery, back rest rear seat, brown	Ryggpåse, baksäte, brun	6	
0690							
0700	7 94 32 337	2		2 Upholstery, seat, front seat, grey	Sitspåse, framstol, grå	6	
0710	8 94 32 345	2		2 Upholstery, back rest front seat, grey	Ryggpåse, framstol, grå	6	-1979- TRIM COLOUR C05
0720							
0730	9 94 23 716	1		1 Upholstery, seat, rear seat, grey	Sitspåse, baksäte, grå	6	
0740							
0750	10 94 34 739	1		1 Upholstery, back rest rear seat, grey	Ryggpåse, baksäte, grå	6	
0760							
0770							
0780							
0790	7A 94 48 515	2		2 Upholstery, seat, front seat, grey	Sitspåse, framstol, grå	6	
0800							
0810	8A 94 48 523	2		2 Upholstery, back rest front seat, grey	Ryggpåse, framstol, grå	6	
0820							
0830	8S 94 51 527	2		2 Upholstery, neck guard, grey	Klädselpåse, nack- skydd, brun	6	1980- TRIM COLOUR C05
0840							
0850	9 94 55 932	1		1 Upholstery, seat, rear seat, grey	Sitspåse, baksäte, grå	6	
0860							
0870	10 94 55 940	1		1 Upholstery, back rest rear seat, grey	Ryggpåse, baksäte, grå	6	
0880							
0890							
0900	7 94 32 352	2		2 Upholstery, seat, front seat, green	Sitspåse, framstol, grön	6	
0910							
0920	8 94 32 360	2		2 Upholstery, back rest front seat, green	Ryggpåse, framstol, grön	6	-1979- TRIM COLOUR C06
0930							
0940	9 94 23 724	1		1 Upholstery, seat, rear seat, green	Sitspåse, baksäte, grön	6	
0950							
0960	10 94 34 747	1		1 Upholstery, back rest rear seat, green	Ryggpåse, baksäte, grön	6	
0970							
0980							
0990	7A 94 48 531	2		2 Upholstery, seat, front seat, green	Sitspåse, framstol, grön	6	
1000							
1010	8A 94 48 549	2		2 Upholstery, back rest front seat, green	Ryggpåse, framstol, grön	6	
1020							
1030	8B 94 51 535	2		2 Upholstery, neck guard, green	Klädselpåse, nack- skydd, grön	6	1980- TRIM COLOUR C06
1040							
1050	9 94 55 957	1		1 Upholstery, seat, rear seat, green	Sitspåse, baksäte, grön	6	
1060							
1070	10 94 55 965	1		1 Upholstery, back rest rear seat, green	Ryggpåse, baksäte, grön	6	
1080							
1090							
1100	7 94 30 828	2		2 Upholstery, seat, front seat, green	Sitspåse, framstol, grön	6	
1110							
1120	8 94 30 820	2		2 Upholstery, back rest front seat, green	Ryggpåse, framstol, grön	6	-1979 GLE, TURBO TRIM COLOUR C06
1130							
1140	9 94 31 875	1		1 Upholstery, seat, rear seat, green	Sitspåse, baksäte, grön	6	
1150							
1160	10 94 31 917	1		1 Upholstery, back rest rear seat, green	Ryggpåse, baksäte, grön	6	
1170							
1180							
1190	7A 94 30 828	2		2 Upholstery, seat, front seat, green	Sitspåse, framstol, grön	6	
1200							
1210	8A 94 48 689	2		2 Upholstery, back rest front seat, green	Ryggpåse, framstol, grön	6	
1220							
1230	8B 94 51 568	2		2 Upholstery, neck guard, green	Klädselpåse, nack- skydd, grön	6	1980- GLE, TURBO TRIM COLOUR C06
1240							

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

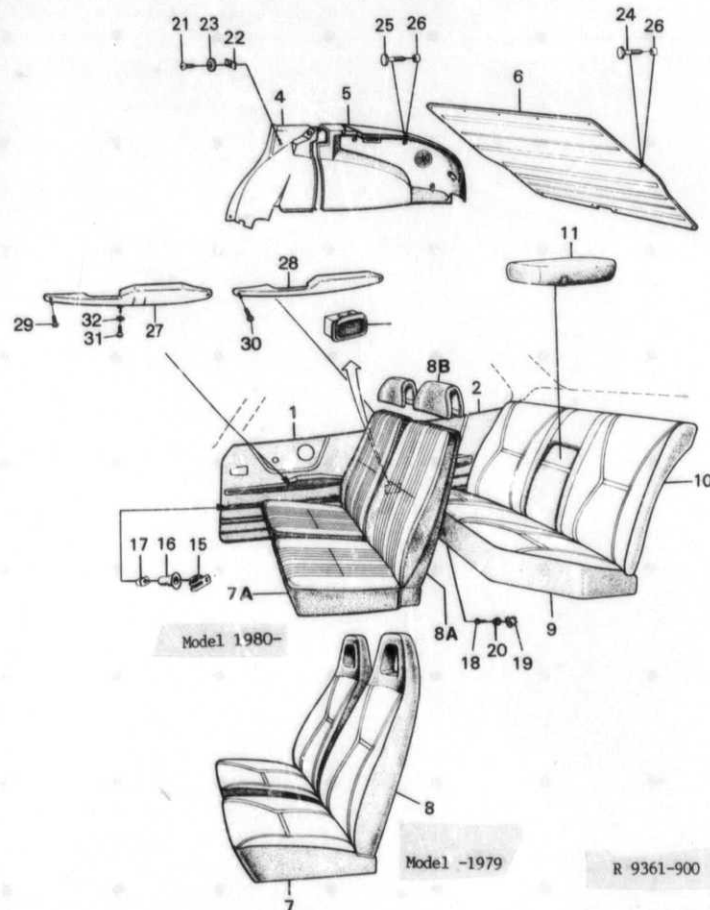

1300

**Upholstery, interior equip-
ment, touch-up paint**
Upholstery, 5Ck

**Klädsel, invändig utrust-
ning, bättringsfärg**
Klädsel 5Ck

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R9361

8


113

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S S/R /L	Notes Anmärkning
		900		US				
1250	9 94 31 875	1			1 Upholstery, seat, rear seat, green	Sitspåse, baksäte, grön	6	1980- GLE, TURBO TRIM COLOUR C06
1260	10 94 31 917	1			1 Upholstery, back rest rear seat, green	Ryggpåse, baksäte, grön	6	
1270								
1280								
1290	7 94 30 810	2			2 Upholstery, seat, front seat, bordeaux	Sitspåse, framstol, bordeaux	6	
1310								
1320	8 94 30 612	2			2 Upholstery, back rest front seat, bordeaux	Ryggpåse, framstol, bordeaux	6	
1330								
1340	9 94 31 867	1			1 Upholstery, seat, rear seat, bordeaux	Sitspåse, baksäte, bordeaux	6	-1979, GLE, TURBO, TRIM COLOUR C07
1350								
1360	10 94 31 909	1			1 Upholstery, back rest rear seat, bordeaux	Ryggpåse, baksäte, bordeaux	6	
1370								
1380								
1390	7A 94 30 810	2			2 Upholstery, seat, front seat, bordeaux	Sitspåse, framstol, bordeaux	6	
1400								
1410	8A 94 48 863	2			2 Upholstery, back rest front seat, bordeaux	Ryggpåse, framstol, bordeaux	6	
1420								
1430	8B 94 51 550	2			2 Upholstery, neck guard, bordeaux	Klädselpåse, nack-skydd, bordeaux	6	1980- GLE, TURBO, TRIM COLOUR C07
1440								
1450	9 94 31 867	1			1 Upholstery, seat, rear seat, bordeaux	Sitspåse, baksäte, bordeaux	6	
1460								
1470	10 94 31 909	1			1 Upholstery, back rest rear seat, bordeaux	Ryggpåse, baksäte, bordeaux	6	
1480								
1490								
1500	7 94 30 836	2			2 Upholstery, seat front seat, blue	Sitspåse, framstol, blå	6	
1510								
1520	8 94 30 638	2			2 Upholstery, back rest front seat, blue	Ryggpåse, framstol, blå	6	-1979, GLE, TURBO, TRIM COLOUR C08
1530								
1540	9 94 31 883	1			1 Upholstery, seat, rear seat, blue	Sitspåse, baksäte, blå	6	
1550								
1560	10 94 31 925	1			1 Upholstery, back rest rear seat, blue	Ryggpåse, baksäte, blå	6	
1570								
1580								
1590	7A 94 30 836	2			2 Upholstery, seat, front seat, blue	Sitspåse, framstol, blå	6	
1600								
1610	8A 94 48 705	2			2 Upholstery, back rest front seat, blue	Ryggpåse, framstol, blå	6	
1620								
1630	8B 94 51 576	2			2 Upholstery, neck guard, blue	Klädselpåse, nack-skydd, blå	6	1980- GLE, TURBO, TRIM COLOUR C06
1640								
1650	9 94 31 883	1			1 Upholstery, seat, rear seat, blue	Sitspåse, baksäte, blå	6	
1660								
1670	10 94 31 925	1			1 Upholstery, back rest rear seat, blue	Ryggpåse, baksäte, blå	6	
1680								
1690								
1700	11 94 36 839	1			1 Cloth cover, arm rest, green	Klädselpåse, armstöd, grön	6	GLE, TURBO TRIM COLOUR C08
1710								
1720	11 94 38 821	1			1 Cloth cover, arm rest, bordeaux	Klädselpåse, armstöd, bordeaux	6	GLE, TURBO, TRIM COLOUR C07
1730								
1740	11 94 38 847	1			1 Cloth cover, arm rest, blue	Klädselpåse, armstöd, blå	6	GLE, TURBO, TRIM COLOUR C08
1750								
1760	15 84 06 118	36			36 Clip, door trim front and rear door	Clip, dörrklädsel, fram- och bakdörr	5	
1770								
1780	16 84 34 078	36			36 Sleeve, door trim front and rear door	Hylsa, dörrklädsel, fram- och bakdörr	5	
1790								
1800	17 84 24 442	4			4 Bushing, door trim	Bussning, dörrklädsel	5	
1810	18 84 10 961	4			4 Screw	Skruv	5	
1820	19 86 01 916	4			4 Clip	Clip	5	
1830	20 84 13 429	4			4 Washer	Bricka	5 (43)	
1840	20 94 37 617	2			2 Plastic washer, brown	Plastbricka, brun	5 (44)	
1850	20 94 37 625	2			2 Plastic washer, grey	Plastbricka, grå	5 (44)	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

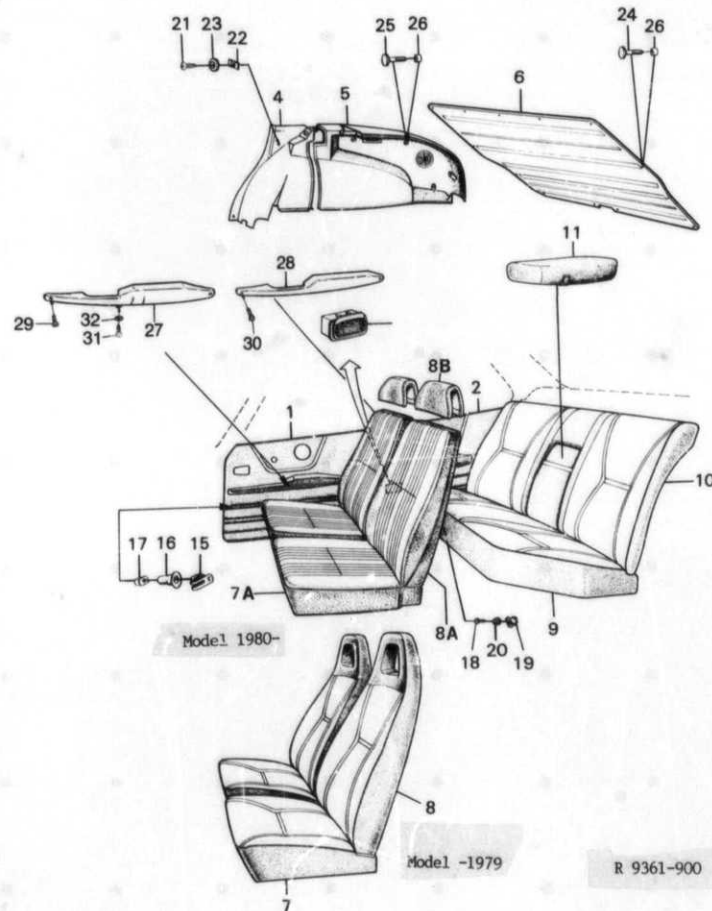

1300

**Upholstery, interior equip-
ment, touch-up paint**
Upholstery, 5Ck

**Klädsel, invändig utrust-
ning, bättringsfärg**
Klädsel 5Ck

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

8

115

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
1880	20 94 37 633	2		2 Plastic washer, green	Plastbricka, grön	5	44)
1870	20 94 37 641	2		2 Plastic washer, blue	Plastbricka, blå	5	44)
1880	20 84 98 909	2		2 Plastic washer, bordeaux	Plastbricka, bordeaux	5	44)
1890							
1900	21 79 69 207	4		4 Screw	Skruv	5	
1910	22 86 01 916	4		4 Clip	Clip	5	
1920	23 84 64 382	4		4 Plastic washer, brown	Plastbricka, brun	5	
1930	24 84 63 622	13		13 Quick screw, trunk door trim, brown	Snabbskruv, klädsel bagagerumsdörr, brun	5	
1940							
1950	25 84 78 463	8		8 Quick screw, brown	Snabbskruv, brun	5	
1960	25 84 52 898	21		21 Quick nut	Snabbmutter	5	
1970							
2080	27 94 38 698	1		1 Arm rest, front door LH	Armstöd, framdörr V	6	
2090							
2100	27 94 38 706	1		1 Arm rest, front door RH	Armstöd, framdörr H	6	
2110							
2120	28 94 38 714	1		1 Arm rest, rear door LH	Armstöd, bakdörr V	6	
2130							
2140	28 94 38 722	1		1 Arm rest, rear door RH	Armstöd, bakdörr H	6	
2150							
2160	29 79 72 458	4		4 Screw, front door	Skruv, framdörr	5	
2170	30 79 22 396	4		4 Screw, rear door	Skruv, bakre dörr	5	
2180	31 79 34 797	2		2 Screw	Skruv	5	
2190	32 79 15 564	2		2 Washer	Bricka	5	
2195							
2197							
2200							
2210							
2220							
2230							
2240							
				Cloth, coated fabric and plastic strips for upholstery cover, see section: upholstery 3Ck	Tyg, vävplast och kederlister för klädselpåsar, se avsnitt: klädsel 3Ck		

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E05
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

1350

Upholstery, interior equipment, touch-up paint
Lining, carpets, etc.

Klädsel, invändig utrustning, bättringsfärg
Hjulhusklädsel, mattor

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1987-10

R4395

8

117

Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S S/R	Notes Anmärkning
		900	US			
0020	1 94 38 615	1	1 Carpet, front, brown	Matta, främre, brun	6 19)	
0021	1 94 57 946	1	1 Carpet, front, brown	Matta, främre, brun	6 20) - 1979	
0022	1 94 59 553	1	1 Carpet, front, brown	Matta, främre, brun	6 1980 - 78)	
0023	1 94 71 939	1	1 Carpet, front, brown	Matta, främre, brun	6 79)	
0040	1 94 57 953	1	1 Carpet, front, brown	Matta, främre, brun	6 - 1979	
0060			RHD	RHD		
0061	1 94 59 561	1	1 Carpet, front, brown	Matta, främre, brun	6 1980 - 78)	
0062			RHD	RHD		
0065	1 94 71 996	1	1 Carpet, front, brown	Matta, främre, brun	6 79)	
0066			RHD	RHD		
0080	1 94 38 631	1	1 Carpet, front, grey	Matta, främre, grå	6 19)	
0081	1 94 57 987	1	1 Carpet, front, grey	Matta, främre, grå	6 20) - 1979	
0082	1 94 59 595	1	1 Carpet, front, grey	Matta, främre, grå	6 1980 - 78)	
0083	1 94 71 947	1	1 Carpet, front, grey	Matta, främre, grå	6 79)	
0100	1 94 57 995	1	1 Carpet, front, grey	Matta, främre, grå	6 - 1979	
0120			RHD	RHD		
0121	1 94 59 603	1	1 Carpet, front, grey	Matta, främre, grå	6 1980 - 78)	
0122			RHD	RHD		
0125	1 94 72 002	1	1 Carpet, front, grey	Matta, främre, grå	6 79)	
0126			RHD	RHD		
0140	1 94 38 656	1	1 Carpet, front, green	Matta, främre, grön	6 19)	
0141	1 94 58 027	1	1 Carpet, front, green	Matta, främre, grön	6 20) - 1979	
0142	1 94 59 637	1	1 Carpet, front, green	Matta, främre, grön	6 1980 - 78)	
0143	1 94 71 954	1	1 Carpet, front, green	Matta, främre, grön	6 79)	
0160	1 94 58 035	1	1 Carpet, front, green	Matta, främre, grön	6 - 1979	
0180			RHD	RHD		
0181	1 94 59 645	1	1 Carpet, front, green	Matta, främre, grön	6 1980 - 78)	
0182			RHD	RHD		
0185	1 94 72 010	1	1 Carpet, front, green	Matta, främre, grön	6 79)	
0186			RHD	RHD		
0200	1 94 38 599	1	1 Carpet, front, bordeaux	Matta, främre, bordeaux	6 19)	
0220	1 94 57 904	1	1 Carpet, front, bordeaux	Matta, främre, bordeaux	6 20) - 1979	
0222	1 94 59 512	1	1 Carpet, front, bordeaux	Matta, främre, bordeaux	6 1980 - 78)	
0224			bordeaux	bordeaux		
0230	1 94 71 921	1	1 Carpet, front, bordeaux	Matta, främre, bordeaux	6 79)	
0231			bordeaux	bordeaux		
0240	1 94 57 912	1	1 Carpet, front, bordeaux RHD	Matta, främre, bordeaux RHD	6 - 1979	
0260			RHD	RHD		
0261	1 94 59 520	1	1 Carpet, front, bordeaux RHD	Matta, främre, bordeaux RHD	6 1980 - 78)	
0262			RHD	RHD		
0265	1 94 71 988	1	1 Carpet, front, bordeaux RHD	Matta, främre, bordeaux RHD	6 79)	
0266			RHD	RHD		
0280	1 94 38 672	1	1 Carpet, front, blue	Matta, främre, blå	6 19)	
0281	1 94 58 068	1	1 Carpet, front, blue	Matta, främre, blå	6 20) - 1979	
0282	1 94 58 076	1	1 Carpet, front, blue	Matta, främre, blå	6 1980 - 78)	
0283	1 94 71 962	1	1 Carpet, front, blue	Matta, främre, blå	6 79)	
0300	1 94 58 076	1	1 Carpet, front, blue	Matta, främre, blå	6 - 1979	
0320			RHD	RHD		
0321	1 94 59 686	1	1 Carpet, front, blue	Matta, främre, blå	6 1980 - 78)	
0322			RHD	RHD		
0325	1 94 72 028	1	1 Carpet, front, blue	Matta, främre, blå	6 79)	
0326			RHD	RHD		
0340	2 94 33 822	1	1 Carpet, rear, brown	Matta, bakre, brun	6 3CK	
0360	2 94 33 780	1	1 Carpet, rear, brown	Matta, bakre, brun	6 5CK	
0380	2 94 33 830	1	1 Carpet, rear, grey	Matta, bakre, grå	6 3CK	
0400	2 94 33 798	1	1 Carpet, rear, grey	Matta, bakre, grå	6 5CK	
0420	2 94 33 648	1	1 Carpet, rear, green	Matta, bakre, grön	6 3CK	

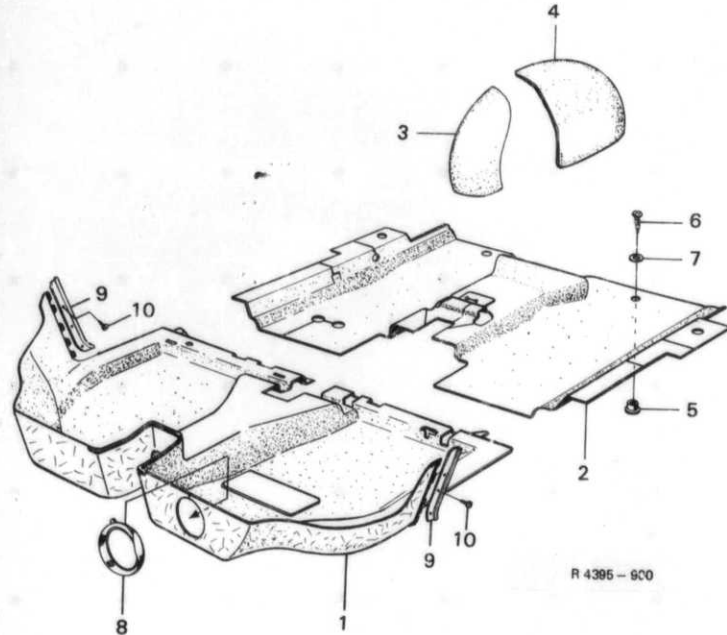

R 4395 - 900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

1350

**Upholstery, interior equip-
ment, touch-up paint**
Lining, carpets, etc.

**Klädsel, invändig utrust-
ning, bättringsfärg**
Hjulhusklädsel, mattor

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1387-10

R4395

8

119


Fig. Pos.	Part No Art nr	Quantity/Amtal			Description	Benämning	K/S S/P	Notes Anmärkning
		900		US				
0440	2 94 33 806	1			1 Carpet, rear, green	Matta, bakre, grön	5	5CK
0450	2 94 09 715	1			1 Carpet, rear, bordeaux	Matta, bakre, bordeaux	6	3CK
0460								
0500	2 94 96 727	1			1 Carpet, rear, bordeaux	Matta, bakre, bordeaux	5	5CK
0520								
0540	2 94 33 855	1			1 Carpet, rear, blue	Matta, bakre, blå	3	3CK
0560	2 94 33 814	1			1 Carpet, rear, blue	Matta, bakre, blå	5	5CK
0580	3 84 68 175	1			1 Rear wheel housing lining, front part LH	Bakre hjulhusklädsel, främre del V	6	
0620	3 84 68 163	1			1 Rear wheel housing lining, front part RH	Bakre hjulhusklädsel, främre del H	6	
0640								
0660	4 84 68 191	1			1 Rear wheel housing lining, rear part LH	Bakre hjulhusklädsel, bakre del V	6	
0680								
0700	4 84 68 209	1			1 Rear wheel housing lining, rear part RH	Bakre hjulhusklädsel, bakre del H	6	
0720								
0740	5 73 45 232	2			2 Carpet retainer	Mattfäste	5	3CK
0760	6 79 22 206	2			2 Screw	Skruv	5	3CK
0780	7 70 88 073	2			2 Washer	Bricka	5	3CK
0800	8 94 32 030	1			1 Carpet retainer	Matthållare	5	
0820	8 94 32 048	1			1 Carpet retainer RHL	Matthållare RHD	5	
0840	9 94 71 897	1			1 Attachment plate LH	Fästplåt V	5	79
0860	9 94 71 905	1			1 Attachment plate RH	Fästplåt H	5	79
0880								
0900	10 79 70 312	6			6 Screw	Skruv	5	79

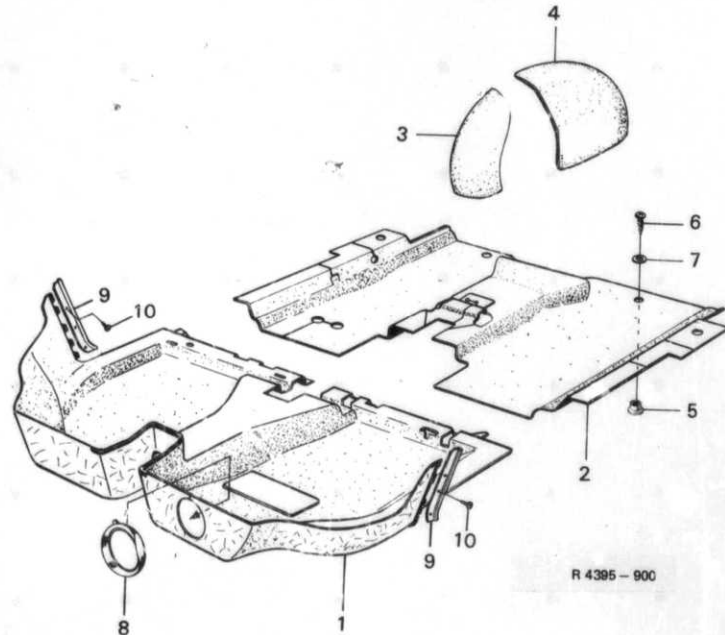

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, wiring	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

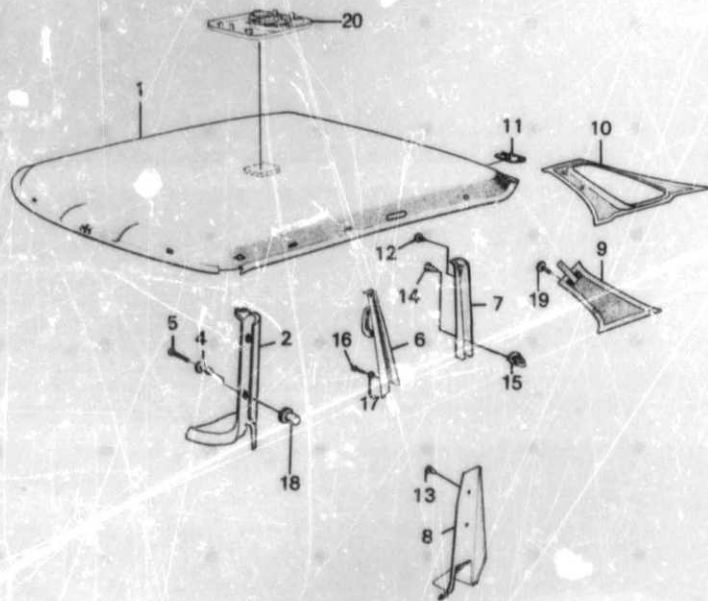

R 9362-900

SAAB
genuine parts
original reservdelar

3-102

SAAB 900
M79-80

MASTER INDEX

1400

**Upholstery, interior equip-
ment, touch-up paint**
Headling, pillar lining

**Klädsel, invändig utrust-
ning, bättringsfärg**
Takklädsel, stolpklädsel

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10 R9362

8

121

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR /L	Notes Anmärkning
		900	US				
0020	1 94 22 734	1		1 Headlining	Takklädsel	6	3CK
0040	1 94 22 809	1		1 Headlining	Takklädsel	6	5CK
0060	2 94 04 708	1		1 Upholstery, wind- shield pillar LH	Stötskydd, vindrute- stolpe V	6	
0100	2 94 04 716	1		1 Upholstery, wind- shield pillar RH	Stötskydd, vindrute- stolpe H	6	
0120				1 Upholstery, wind- shield pillar LH	Stötskydd, vindrute- stolpe V RHD	6	
0140	2 94 13 071	1		1 Upholstery, wind- shield pillar LH	Stötskydd, vindrute- stolpe V RHD	6	
0160				1 Upholstery, wind- shield pillar RH	Stötskydd, vindrute- stolpe H RHD	6	
0200	2 94 13 089	1		1 Upholstery, wind- shield pillar RH	Stötskydd, vindrute- stolpe H RHD	6	
0220				1 Rivet	Nit	5	
0240	4 84 76 061	4		4 Clip	Tapp	5	
0260	4 84 76 061	6		6 Rivet	Stötskydd, dörr- stolpe V	6	3CK
0300	5 84 76 079	6		5 Upholstery, door pillar LH	Stötskydd, dörr- stolpe H	6	3CK
0320	6 94 00 169	1		1 Upholstery, door pillar RH	Stötskydd, dörr- stolpe V	6	5CK
0340	7 84 44 390	1		1 Upholstery, door pillar LH	Stötskydd, dörr- stolpe H	6	5CK
0360	7 84 44 408	1		1 Upholstery, door pillar RH	Stötskydd, nedre dörrstolpe V	6	5CK
0400	3 94 05 770	1		1 Upholstery, lower door pillar LH	Stötskydd, nedre dörrstolpe H	6	5CK
0420	8 94 05 788	1		1 Upholstery, lower door pillar RH	Stötskydd V	6	3CK
0440	9 94 15 183	1		1 Upholstery LH	Stötskydd H	6	3CK
0460	9 94 15 191	1		1 Upholstery RH	Stötskydd V	6	1) 3CK
0480	9 94 15 468	1		1 Upholstery LH	Stötskydd H	6	1) 3CK
0500	9 94 15 506	1		1 Upholstery RH	Stötskydd V	6	5CK
0520	10 84 65 775	1		1 Upholstery LH	Stötskydd H	6	5CK
0540	10 84 65 783	1		1 Upholstery RH	Stötskydd H	6	5CK
0560	11 84 77 119	2		2 Cover	Täcklock	5	
0580	12 84 26 198	2		2 Screw	Skruv	5	3CK
0600	13 97 30 965	4		4 Clip	Clip	5	5CK (8440661)
0620	14 73 50 432	2		2 Plastic plug	Plastplugg	5	5CK
0640	15 84 05 870	2		2 Clip	Clip	5	5CK
0660	16 84 10 961	2		2 Screw	Skruv	5	3CK
0680	17 84 13 429	2		2 Washer	Bricka	5	3CK
0700	18 82 77 667	4		4 Sleeve	Hyssa	5	21)
0720	19 84 54 522	2		2 Quick screw	Snabbskruv	5	3CK
0740	20 85 47 806	X		X Kit, dome light	Sats, taklampe	4	102)

SEE PAGE 0-11, 1-F12

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

1. Öppnning rear side window
21. Ch.90791010980-
102. For cars with centre mounted dome light

1460

**Upholstery, interior equip-
ment, touch-up paint**
Front seats Part 1

**Klädsel, invändig utrust-
ning, bättringsfärg**
Stolar Del 1

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R9350


8

123

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR	Notes Anmärkning
		900	US				
0020	1 94 32 543	1		1 Seat assy with elec- tric pad LH	Stol kpl med elvärme- sits V	6 2)	-1979 3CK
0040	1 94 46 246	1		1 Seat assy with elec- tric pad LH	Stol kpl med elvärme- sits V	6 2)	1980-3CK
0060	1 94 32 584	1		1 Seat assy RH	Stol kpl H	6 2)	-1979 3CK
0061	1 94 46 360	1		1 Seat assy RH	Stol kpl H	6 2)	1980-3CK
0080	1 94 32 592	1		1 Seat assy LH, RHD	Stol kpl V, RHD	6 2)	-1979 3CK
0081	1 94 46 378	1		1 Seat assy LH, RHD	Stol kpl V, RHD	6 2)	1980-3CK
0100	1 94 32 550	1		1 Seat assy with elec- tric pad RH, RHD	Stol kpl med elvärme- sits H, RHD	6 2)	-1979 3CK
0120	1 94 46 253	1		1 Seat assy with elec- tric pad RH, RHD	Stol kpl med elvärme- sits H, RHD	6 2)	1980-3CK
0122	1 94 32 568	1		1 Seat assy with elec- tric pad LH	Stol kpl med elvärme- sits V	6 2)	-1979 5CK
0160	1 94 46 261	1		1 Seat assy with elec- tric pad LH	Stol kpl med elvärme- sits V	6 2)	1980-5CK
0180	1 94 32 600	1		1 Seat assy RH	Stol kpl H	6 2)	-1979 5CK
0181	1 94 46 386	1		1 Seat assy RH	Stol kpl H	6 2)	1980-5CK
0200	1 94 32 618	1		1 Seat assy LH, RHD	Stol kpl V, RHD	6 2)	-1979 5CK
0201	1 94 46 394	1		1 Seat assy LH, RHD	Stol kpl V, RHD	6 2)	1980-5CK
0220	1 94 32 576	1		1 Seat assy with elec- tric pad RH, RHD	Stol kpl med elvärme- sits H, RHD	6 2)	-1979 5CK
0241	1 94 46 279	1		1 Seat assy with elec- tric pad RH, RHD	Stol kpl med elvärme- sits H, RHD	6 2)	1980-5CK
0242	1 94 33 020	1		1 Seat assy with elec- tric pad LH	Stol kpl med elvärme- sits V	6 2)	-1973.3CK,EMS,TURBO
0280	1 94 46 287	1		1 Seat assy with elec- tric pad LH	Stol kpl med elvärme- sits V	6 2)	1980-3CK,EMS,TURBO
0281	1 94 33 038	1		1 Seat assy RH	Stol kpl H	6 2)	-1979.3CK,EMS,TURBO
0282	1 94 46 931	1		1 Seat assy RH	Stol kpl H	6 2)	1980-3CK,EMS,TURBO
0291	1 94 33 053	1		1 Seat assy LH, RHD	Stol kpl V, RHD	6 2)	-1979.3CK,EMS,TURBO
0300	1 94 46 949	1		1 Seat assy LH, RHD	Stol kpl V, RHD	6 2)	1980-3CK,EMS,TURBO
0301	1 94 33 046	1		1 Seat assy with elec- tric pad RH, RHD	Stol kpl med elvärme- sits H, RHD	6 2)	-1979.3CK,EMS,TURBO
0340	1 94 46 295	1		1 Seat assy with elec- tric pad RH, RHD	Stol kpl med elvärme- sits H, RHD	6 2)	1980-3CK,EMS,TURBO
0341	1 94 30 455	1		1 Seat assy with elec- tric pad LH	Stol kpl med elvärme- sits V	6 2)	-1979.5CK,GLE,TURBO
0342	1 94 46 303	1		1 Seat assy with elec- tric pad LH	Stol kpl med elvärme- sits V	6 2)	1980.5CK,GLE,TURBO
0360	1 94 30 554	1		1 Seat assy with elec- tric pad RH	Stol kpl med elvärme- sits H	6 2)	1979.5CK,GLE,TURBO
0390	1 94 46 956	1		1 Seat assy with elec- tric pad RH	Stol kpl med elvärme- sits H	6 2)	1980-5CK,GLE,TURBO
0391	1 94 30 604	1		1 Seat assy with elec- tric pad LH, RHD	Stol kpl med elvärme- sits V, RHD	6 2)	-1979.5CK,GLE,TURBO
0392	1 94 46 964	1		1 Seat assy with elec- tric pad LH, RHD	Stol kpl med elvärme- sits V, RHD	6 2)	1980-5CK,GLE,TURBO
0400	1 94 30 505	1		1 Seat assy with elec- tric pad RH, RHD	Stol kpl med elvärme- sits H, RHD	6 2)	-1979.5CK,GLE,TURBO
0420	1 94 46 311	1		1 Seat assy with elec- tric pad RH, RHD	Stol kpl med elvärme- sits H, RHD	6 2)	1980-5CK,GLE,TURBO
0421	1 94 32 519	1		1 Seat assy without electric pad LH,LHD	Stol kpl utan elvärme- sits V, LHD	6 2)	-1979 3CK
0422	1 94 46 329	1		1 Seat assy without electric pad LH,LHD	Stol kpl utan elvärme- sits V, LHD	6 2)	1980-3CK
0440	1 94 32 527	1		1 Seat assy without electric pad RH,RHD	Stol kpl utan elvärme- sits H, RHD	6 2)	-1979 3CK
0461	1 94 46 337	1		1 Seat assy without electric pad RH,RHD	Stol kpl utan elvärme- sits H, RHD	6 2)	1980-3CK
0480	1 94 32 535	1		1 Seat assy without electric pad LH,LHD	Stol kpl utan elvärme- sits V, LHD	6 2)	-1979 5CK

R 9350-900

2. State upholstery colour and car colour code

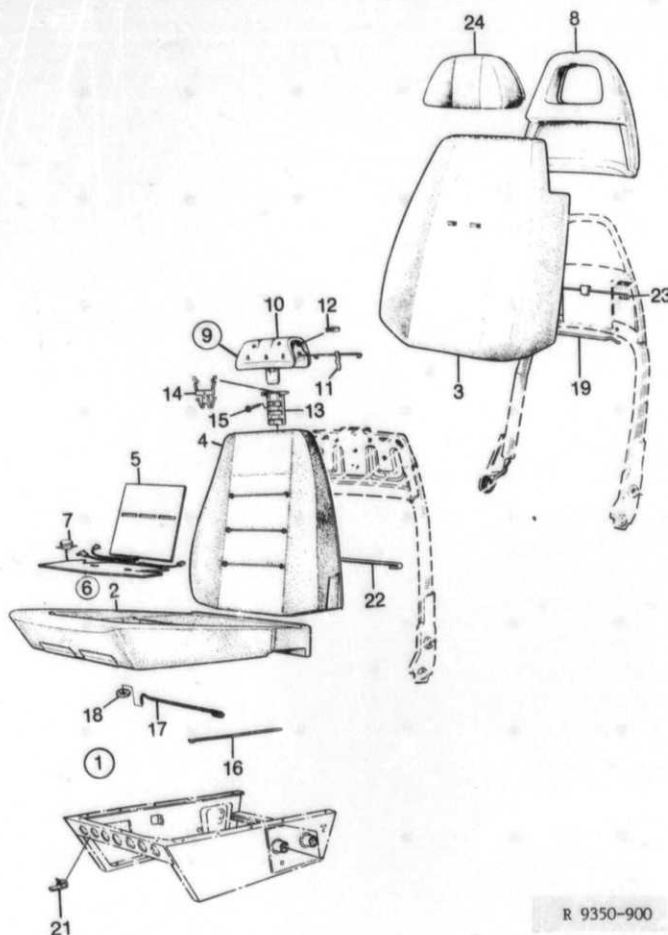

1460

Upholstery, interior equip-
ment, touch-up paint
Front seats Part 1

Klädsel, invändig utrust-
ning, bättringsfärg
Stolar Del 1

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1987-10

R9350

8


125

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR / L	Notes Anmärkning
		900	US				
0621	1 94 46 345	1		1 Seat assy without electric pad LH,LHD	Stol kpl utan elvärme sits V, LHD	6	2) 1980- 5CK
0622	1 94 36 163	1		1 Seat assy without electric pad RH,RHD	Stol kpl utan elvärme sits kpl H, RHD	6	2) -1979 5CK
0640	1 94 46 352	1		1 Seat assy without electric pad RH,RHD	Stol kpl utan elvärme sits kpl H, RHD	6	2) 1980- 5CK
0652	2 96 82 006	1		1 Seat cushion	Sittdyna	6	(8478562)
0760	3 94 16 611	1		1 Back cushion	Ryggdyna	6	1979
0800	4 96 88 458	1		1 Back cushion	Ryggdyna	6	1980 (9450289)
0820	5 84 58 176	1		1 Electric pad, back cushion	El värmedyyna rygg	4	
0840	6 84 58 168	1		1 Electric pad, seat cushion	El värmedyyna, sits	4	
0920	7 95 24 745	1		1 Thermostat	Termostat	3	-1979 (8511016)
0940	7 85 13 632	1		1 Thermostat	Termostat	3	1980-
1000	8 84 53 680	1		1 Neck guard cushion	Nackskyddsdyna	6	-1979
1020	9 94 58 872	1		1 Neck guard assy	Nackskydd kpl	6	2) 1980- (9451584, 9453960)
1040	10 98 09 690	1		1 Body	Stomme	6	1980- (9457029)
1060	11 94 59 868	2		2 Yoke	Bygel	5	1980-
1080	12 94 59 975	4		4 U-clip	U-clip	5	1980-
1100	13 94 57 540	1		1 Guide sleeve	Styrhylsa	5	1980-
1120	14 94 57 557	1		1 Spring	Fjäder	5	1980-
1140	15 79 22 396	1		1 Screw	Skruv	5	
1160	16 94 03 312	2		2 Upholstery bow	Klädselbåge	5	
1180	17 94 20 332	2		2 Wire yoke	Trådbygel	5	
1200	18 94 21 195	X		X Clamp	Klamme	5	
1220	19 94 25 349	1		1 Wire yoke	Trådbygel	5	
1240	21 84 00 350	10		10 Clip	Clip	5	
1260	22 94 25 240	X		X Trim rod	Trådrän	5	
1280	23 84 57 723	1		1 Trim rod	Trådrän	5	
1300	24	2		2 Cushion, neck guard	Kudde, nackskydd	5	1979
1320							SEE ACCESSORIES CATALOGUE
1340							
1360							

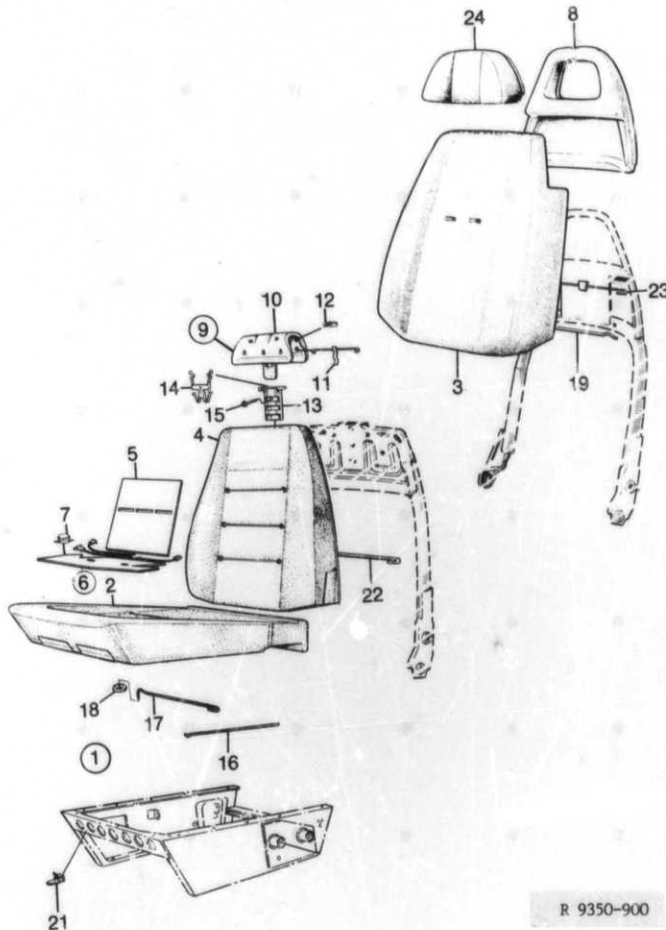

R 9350-900

2. State upholstery colour and car colour code

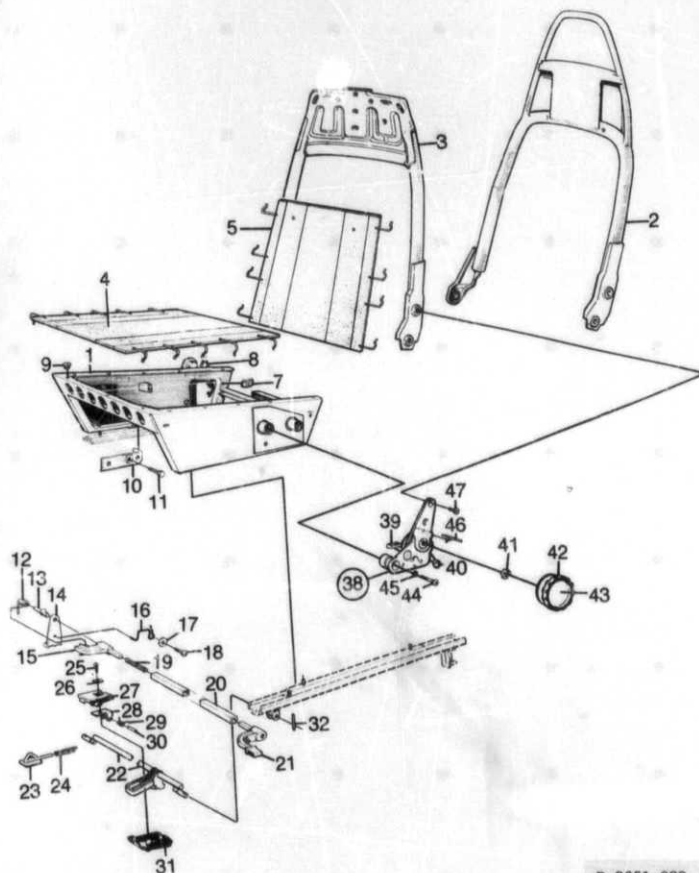

R 9351-900

SAAB
genuine parts
original reservdelar

3-108

SAAB 900
M79-80 MASTER INDEX

1470

Upholstery, interior equip-
ment, touch-up paint
Front seats Part 2

Klädsel, invändig utrust-
ning, bättringsfärg
Stolar Del 2

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10 R9351

8


127

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S SR	Notes Anmärkning
		900		US				
0020					Seat assy	Stol kpl		
0040	1	94 36 700	1		1. Seat frame LH	.Sitsram V	6	
0060	1	94 36 718	1		1. Seat frame RH	.Sitsram H	6	
0080	2	94 32 626	1		1. Back rest frame LH	.Ryggram V	6	1979
0100	2	94 32 634	1		1. Back rest frame RH	.Ryggram H	6	1979
0120	3	94 52 053	1		1. Back rest frame LH	.Ryggram V	6	1980
0140	3	94 52 061	1		1. Back rest frame RH	.Ryggram H	6	1980
0160	4	94 04 807	1		1. Rubber cushion plat- form	.Gummiduk	6	
0180								
0200	5	94 35 785	1		1. Rubber cushion plat- form	.Gummiduk	6	
0220								
0240	7	79 19 509	2		2. Clip	.Clip	5	
0280	8	94 45 446	1		1. Lock ring	.Låsring	5	(7963176)
0300	9	84 07 983	10		10. Bushing	.Bussning	4	
0320	10	84 29 177	1		1. Support plate LH	.Stödplåt V	5	
0340	10	84 29 185	1		1. Support plate RH	.Stödplåt H	5	
0360	11	84 29 235	1		4. Screw	.Skruv	5	
0380	12	84 29 037	1		1. Spring LH	.Fjäder V	5	
0400	12	84 29 045	1		1. Spring RH	.Fjäder H	5	
0420	13	84 34 839	2		2. Eccentric shaft	.Excenter	6	
0440	14	84 34 912	2		2. Lock arm with bushing	.Låsram med bussning	6	
0460	15	84 23 147	1		1. Turnable sleeve	.Vridhylsa	5	
0480	16	84 35 315	1		1. Spring LH	.Fjäder V	5	
0500	16	84 35 323	1		1. Spring RH	.Fjäder H	5	
0520	17	84 33 237	2		2. Washer	.Bricka	5	
0540	18	79 22 283	2		2. Screw	.Skruv	5	
0560	19	84 21 778	1		1. Spring	.Fjäder	5	
0580	20	84 21 786	1		1. Middle tube	.Mellanrör	6	
0600	21	84 19 327	1		1. Control arm	.Reglagearm	5	
0620	22	94 36 940	1		1. Adjustment shaft	.Justeraxel	6	
0640	23	94 62 961	1		1. Catch	.Spärr	6	
0660	24	94 20 522	1		1. Spring	.Fjäder	5	
0680	25	79 22 933	1		1. Screw	.Skruv	5	
0700	26	84 25 126	1		1. Washer	.Bricka	5	
0720	27	84 25 035	1		1. Upper part	.Överhalva	6	
0740	28	84 25 100	1		1. Key lever	.Tangentarm	6	
0760	29	84 25 118	1		1. Spring	.Fjäder	5	
0780	30	84 26 173	1		1. Pin	.Pinne	5	
0800	31	94 25 043	1		1. Lower part	.Underhalva	5	
0820	32	79 56 212	2		2. Tension pin	.Spännstift	5	
0840	38	94 36 973	1		1. Reclining control LH	.Liggsitsbeslag V	6	3CK
0860	38	94 36 981	1		1. Reclining control RH	.Liggsitsbeslag H	6	3CK
0880	38	94 36 989	1		1. Reclining control LH	.Liggsitsbeslag V	6	5CK
0900	38	94 37 005	1		1. Reclining control RH	.Liggsitsbeslag H	6	5CK
0920	39	84 72 672	1		1. Knob	.Knapp	3	
0940	40	84 78 182	1		1. Knob	.Knapp	3	
0960	41	94 41 270	1		1. Lock washer	.Låsbricka	5	
0980	42	94 37 013	1		1. Hand wheel	.Ratt	5	
1000	43	94 37 021	1		1. Cover	.Lock	6	
1020	44	79 71 799	2		2. Screw	.Skruv	5	
1040	45	79 34 144	2		2. Washer	.Bricka	5	
1060	46	84 57 749	2		2. Hook	.Krok	5	
1080	47	79 71 781	2		2. Screw	.Skruv	5	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

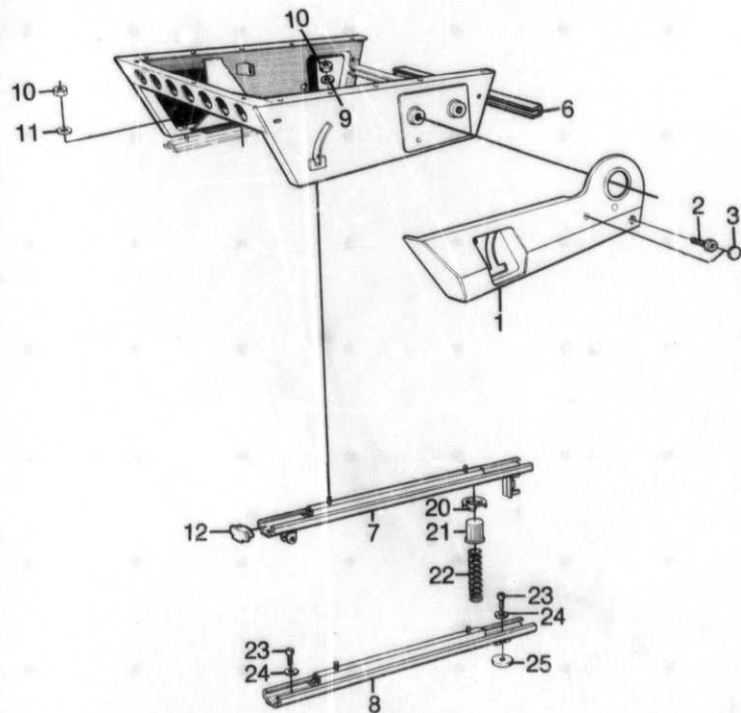

R 9352-900

SAAB
genuine parts
original reservdelar

3-110

SAAB 900
M79-80

MASTER INDEX

1480

**Upholstery, interior equip-
ment, touch-up paint**
Front seats Part 3

**Klädsel, invändig utrust-
ning, bättringsfärg**
Stolar Del 3

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R9352

8

129

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S	Notes Anmärkning
		900		US				
0620					Seat Assy	Stol kpl		
0640	1 94 24 284	1			1. Cover LH	.Kåpa V	6	3CK
0660	1 94 24 292	1			1. Cover RH	.Kåpa H	6	3CK
0680	1 94 26 024	1			1. Cover LH	.Kåpa V	6	5CK
0100	1 94 26 032	1			1. Cover RH	.Kåpa H	6	5CK
0120	2 79 70 536	2			2. Screw	.Skruv	5	
0140	3 94 36 395	2			2. Cover	.Täcklock	3	
0160	6 94 04 831	1			1. Upholstery	.Stötskydd	6	
0180	7 84 35 331	1			1. Runner LH	.Stolskena V	6	DRIVER SEAT
0200	7 84 35 349	1			1. Runner RH	.Stolskena V	6	DRIVER SEAT
0220	8 84 35 356	1			1. Runner LH	.Stolskena V	6	PASSANGER SEAT
0240	8 84 35 364	1			1. Runner RH	.Stolskena H	6	PASSANGER SEAT
0260	9 84 99 675	2			2. Washer	.Bricka	5	PASSANGER SEAT
0280	10 79 14 690	4			4. Nut	.Mutter	5	
0300	11 84 99 667	4			4. Washer	.Bricka	5	DRIVER SEAT
0320	12 84 19 343	4			4. Plug	.Plugg	5	
0500	20 94 20 530	2			2. Clip	.Clip	5	
0520	21 94 20 546	2			2. Plunger	.Plunge	5	
0540	22 84 08 072	2			2. Spring	.Fjäder	5	
0560	23 94 20 555	4			4. Screw	.Skruv	5	PASSANGER SEAT
0580	24 80 29 985	4			4. Washer	.Bricka	5	PASSANGER SEAT
0600	25 94 20 563	2			2. Nut washer	.Mutterbricka	5	PASSANGER SEAT

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

1500

Upholstery, interior equip-
ment, touch-up paint
Rear seat model 3CK

Klädsel, invändig utrust-
ning, bättringsfärg
Baksäte modell 3CK

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

131


Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0020	1	94 26 057	1	1 Seat cushion assy	Sittdyna kpl	6	2) -1979
0021	1	94 55 718	1	1 Seat cushion assy	Sittdyna kpl	6	2) 1980-
0040	1	94 31 032	1	1 Cushion assy	Sittdyna kpl	6	2) EMS, TURBO
0230	2	94 26 107	1	1 Spring housing	Resårhus	6	
0280	3	94 83 174	2	2 hinge	Gångjärn	6	
0290	4	79 21 483	2	2 screw	Skruv	5	
0300	5	84 14 955	1	1 Striker plate	Låslack	6	
0320	6	79 22 370	2	2 screw	Skruv	5	
0340	7	79 15 556	2	2 washer	Bricka	5	
0360	8	80 29 889	4	4 washer	Bricka	5	
0400	10	79 14 690	2	2 nut	Mutter	5	
0420	11	84 74 678	2	2 wear protection	Slitskydd	5	
0440	12	79 22 370	2	2 screw	Skruv	5	
0480	14	79 34 771	2	2 screw	Skruv	5	
0500	15	79 10 540	2	2 washer	Bricka	5	
0520	16	79 35 786	2	2 caged nut	Korgmutter	5	
0540	17	84 14 914	1	1 lock	Lås	5	
0560	18	84 14 963	1	1 knob	Knapp	3	
0580	19	79 34 748	2	2 screw	Skruv	5	
0600	20	79 15 564	2	2 Washer	Bricka	5	
1045	25	94 26 065	1	1 Back cushion assy	Ryggdyna kpl	6	2) -1979
1046	25	94 55 742	1	1 Back cushion assy	Ryggdyna kpl	6	2) 1980-
1050	25	94 31 065	1	1 Back cushion assy	Ryggdyna kpl	6	2) EMS, TURBO
1055	25	94 31 750	1	1 Back cushion assy	Ryggdyna kpl	6	2) EMS, TURBO, AU
1086	26	84 23 136	1	1 Spring housing	Resårhus	6	
1120	27	84 83 141	1	1 rear part	Bakstycke	6	
1160	28	76 02 204	1	1 member assy	Balk kpl	6	
1180	28	84 86 714	1	1 member assy	Balk kpl	6	AU
1220	29	94 17 791	1	1 Control rod	Reglerstång	5	
1240	29	94 20 324	1	1 Control rod	Reglerstång	5	AU
1260	30	84 41 396	1	1 lock	Lås	5	
1280	30	84 68 431	1	1 lock	Lås	5	AU
1300	31	73 59 300	1	1 grommet	Genomföring	4	
1320	32	79 65 989	4	4 screw	Skruv	5	
1340	33	79 22 800	8	8 screw	Skruv	5	
1360	34	84 62 210	1	1 covering	Beklädnad	6	
1400	35	84 07 579	3	3 slide block	Glidlack	5	
1420	36	84 10 961	3	3 screw	Skruv	5	
1440	37	79 69 215	6	6 screw	Skruv	5	(84 09 708)
1460	38	84 73 993	6	6 washer	Bricka	5	
1500	39	84 83 372	2	2 hinge	Gångjärn	6	
1540	40	84 83 380	4	4 pressure plate	Tryckplatta	5	
1580	41	79 70 262	8	8 screw	Skruv	5	
1620	42	84 66 104	1	1 lever	Hävarm	5	-1979
1621	42	94 52 160	1	1 Lever	Hävarm	5	1980-
1660	43	84 67 805	1	1 bracket	Fäste	5	-1979
1661	43	94 59 710	1	1 Bracket	Fäste	5	1980-
1700	45	79 61 891	1	2 Blind rivet	Blindnål	5	
1760	47	84 67 821	4	4 grommet	Genomföring	5	-1979
1781	47	94 52 145	4	4 Grommet	Genomföring	5	1980-
1780	48	84 03 560	2	2 strap	Stopp	5	
1800	49	79 70 320	2	2 screw	Skruv	5	
1820	50	84 77 325	2	2 washer	Bricka	5	
1841	51	94 51 006	1	1 Upholstery, member	Klädsel, balk	6	-1979
1842	51	94 52 129	1	1 Upholstery, member	Klädsel, balk	6	1980-
1850	51	84 69 050	1	1 Upholstery, member	Klädsel, balk	6	(45) AUSTRALIA
1851	51	94 51 022	1	1 Upholstery, member	Klädsel, balk	6	(46) -1979 AUSTRALIA
1852	51	94 52 137	1	1 Upholstery, member	Klädsel, balk	6	1980- AUSTRALIA
1860	52	79 69 504	11	11 screw	Skruv	5	
1880	53	84 73 993	11	11 washer	Bricka	5	

2. State upholstery colour and car colour code
45. Ch.-/80791026039.
46. Ch.80791026040-.

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

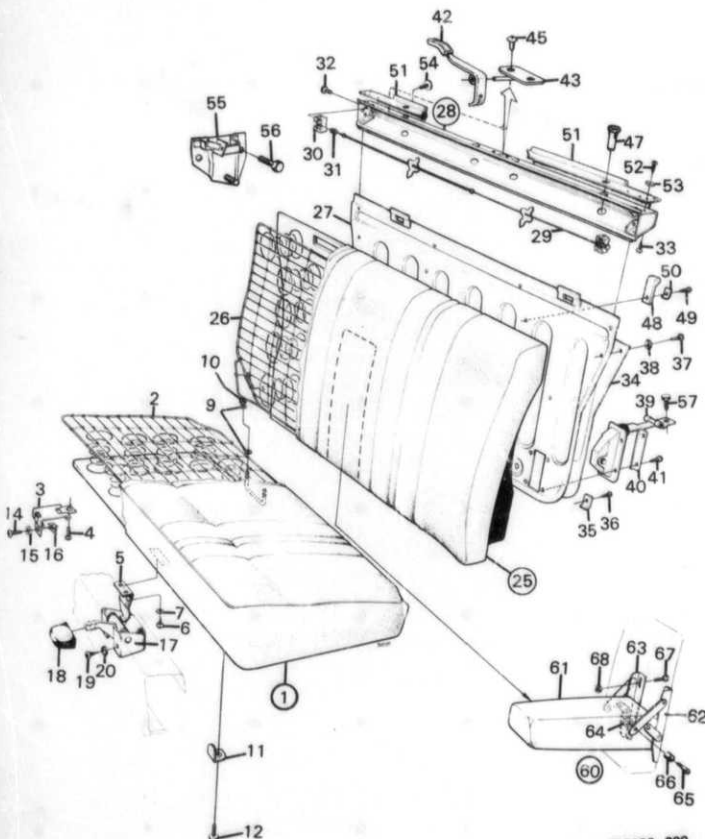

R 5196-900

1500

**Upholstery, interior equip-
ment, touch-up paint**
Rear seat model 3CK

**Klädsöl, invändig utrust-
ning, bättringsfärg**
Baksäte modell 3CK

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Side

1987-10

75196


8

133

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR / L	Notes Anmärkning
		900	US				
1900	54 84 68 068	3		plug	Plugg	5	-1979 AU
1901	54 84 52 186	3		Plug	Plugg	5	1980- AU
2080	55 94 23 062	1		1 bracket, back cushion L.H.	Konsol, ryggdyna V	5	
2100							
2120	55 94 23 070	1		1 bracket, back cushion R.H.	Konsol, ryggdyna H	5	
2140							
2160	55 94 23 161	1		bracket, back cushion L.H.	Konsol, ryggdyna V	5	AU
2180							
2200	55 94 23 179	1		bracket, back cushion R.H.	Konsol, ryggdyna H	5	AU
2220							
2260	56 84 99 204	4		4 screw	Skruv	5	
2280	57 79 35 901	2		2 screw	Skruv	5	
2300	60 94 40 355	1		1 Arm rest assy	Armstöd kpl	6	2) EMS, TURBO
2320	61 94 40 363	1		1 Arm rest	Armstöd	6	EMS, TURBO
2340	62 84 54 795	1		1 linkage system L.H.	Länksystem V	6	EMS, TURBO
2360	63 84 54 803	1		1 linkage system R.H.	Länksystem H	6	EMS, TURBO
2380	64 84 57 541	4		4 washer	Bricka	5	EMS, TURBO
2400	65 84 74 207	4		4 screw	Skruv	5	EMS, TURBO
2420	66 84 58 598	4		4 spacer sleeve	Distanshylsa	5	EMS, TURBO
2440	67 94 44 688	4		4 screw	Skruv	5	EMS, TURBO
2450	68 80 29 555	4		4 Nut	Mutter	5	EMS, TURBO (8073512)

8 GROUP INDEX

Main body	3-D10
instrument panel	3-E06
Hood, front fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Numbers	3-K18

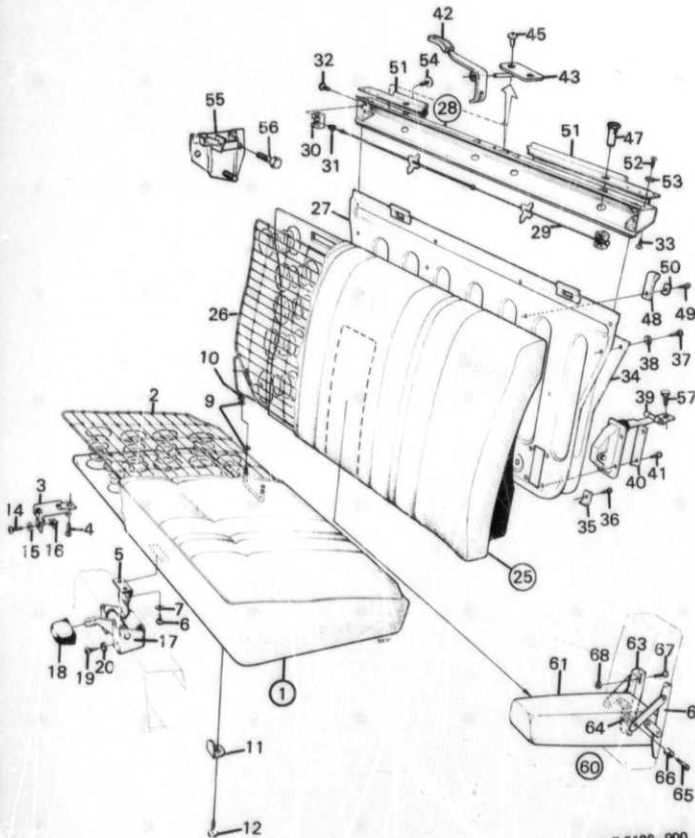

R 5196-900

1550

Upholstery, interior equip-
ment, touch-up paint
Rear seat 5CK

Klädsel, invändig utrust-
ning, bättringsfärg
Baksäte 5CK

Date
Datum

Illustration
Bild nr

Group
Grupp


Page
Sida

1987-10

R3813

8

135

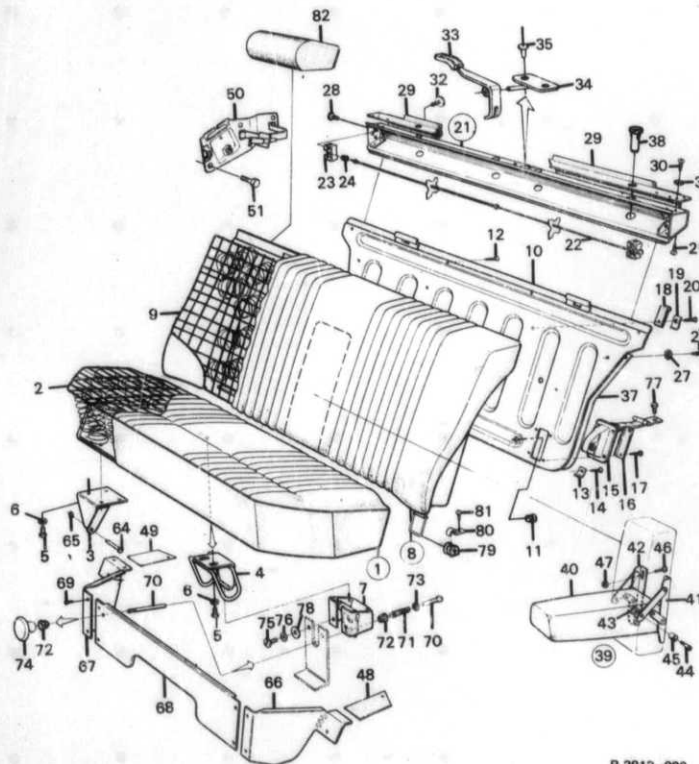

R 3813-900

Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S S/R	Notes Anmärkning
		900	US			
0020	1 94 23 674	1	1 Seat cushion assy	Sittdyna kpl	6	2) -1979
0021	1 94 55 726	1	1 Seat cushion assy	Sittdyna kpl	6	2) 1980-
0040	1 94 31 040	1	1 Seat cushion assy	Sittdyna kpl	6	2) GLE, TURBO
0060	2 94 30 950	1	1 Spring housing	Resårhus	6	
0080	3 84 40 380	2	2 Hinge	Gångjärn	6	
0100	4 94 89 287	1	1 Striker plate	Låsklack	6	(7603384)
0120	5 79 72 672	10	10 Screw	Skruv	5	(7922370)
0140	6 79 10 557	10	10 Washer	Bricka	5	
0160	7 84 41 386	1	1 Lock assy	Lås kpl	5	
0180	8 94 34 697	1	1 Back cushion assy	Ryggdyna kpl	6	2) -1979
0181	8 94 55 759	1	1 Back cushion assy	Ryggdyna kpl	6	2) 1980-
0200	8 94 31 073	1	1 Back cushion assy	Ryggdyna kpl	6	2) GLE, TURBO
0220	8 94 31 057	1	1 Back cushion assy	Ryggdyna kpl	6	2) -1979 AUSTRALIA
0221	8 94 55 767	1	1 Back cushion assy	Ryggdyna kpl	6	2) 1980- AUSTRALIA
0240	9 84 31 081	1	1 Back cushion assy	Ryggdyna kpl	6	2) GLE, TURBO, AUSTRALIA
0260	9 94 30 430	1	1 Spring housing	Resårhus	6	
0280	9 94 30 885	1	1 Spring housing	Resårhus	6	GLE, TURBO
0300	10 84 83 141	1	1 Rear part	Bakstycke	6	
0320	11 84 04 006	2	2 Rubber plug	Gummplugg	5	
0340	12 79 22 370	8	8 Screw	Skruv	5	
0360	13 84 07 579	3	3 Slide block	Glidklack	5	
0380	14 84 10 961	3	3 Screw	Skruv	5	
0400	15 84 83 372	2	2 Hinge	Gångjärn	6	
0420	16 84 83 380	4	4 Pressure plate	Tryckplatta	5	
0440	17 79 70 262	8	8 Screw	Skruv	5	
0460	18 84 03 560	2	2 Strap	Stropp	5	
0480	19 84 77 325	2	2 Washer	Bricka	5	
0500	20 79 69 215	2	2 Screw	Skruv	5	
0520	21 76 02 204	1	1 Member assy	Balk kpl	6	(8466146)
0540	21 84 86 714	1	1 Member assy	Balk kpl	5	AUSTRALIA
0560	22 94 17 791	1	1 Control rod	Reglerstäng	5	
0580	22 94 20 324	1	1 Control rod	Reglerstäng	5	AUSTRALIA
0600	23 84 41 396	1	1 Lock	Lås	5	
0620	23 84 68 431	1	1 Lock	Lås	5	AUSTRALIA
0640	24 73 59 003	1	1 Grommet	Genomföring	5	
0660	25 79 22 800	8	8 Screw	Skruv	5	
0680	26 84 09 708	4	4 Screw	Skruv	5	
0700	27 84 73 993	11	11 Washer	Bricka	5	
0720	28 79 65 998	4	4 Screw	Skruv	5	
0741	29 94 51 006	1	1 Upholstery, member	Klädsel, balk	6	-1979
0742	29 94 52 129	1	1 Upholstery, member	Klädsel, balk	6	1980-
0760	29 84 68 050	1	1 Upholstery, member	Klädsel, balk	6	45) AUSTRALIA
0761	29 94 51 022	1	1 Upholstery, member	Klädsel, balk	6	46) -1979 AUSTRALIA
0762	29 94 52 137	1	1 Upholstery, member	Klädsel, balk	6	1980- AUSTRALIA
0780	30 79 69 504	11	11 Screw	Skruv	5	
0800	31 84 73 993	11	11 Washer	Bricka	5	
0820	32 84 68 068	3	3 Plug	Plugg	5	-1979 AUSTRALIA
0821	32 94 52 186	3	3 Plug	Plugg	5	1980- AUSTRALIA
0840	33 84 66 104	1	1 Lever	Hävarm	5	-1979
0841	33 94 52 160	1	1 Lever	Hävarm	5	1980-
0860	34 84 67 805	1	1 Bracket	Fäste	5	-1979
0881	34 94 59 710	1	1 Bracket	Fäste	5	1980-
0880	35 79 61 691	2	2 Blind rivet	Blindnit	5	
0900	37 84 62 210	1	1 Covering	Beklädnad	5	
0920	38 84 67 821	4	4 Grommet	Genomföring	5	-1979
0921	38 94 52 145	4	4 Grommet	Genomföring	5	1980-
0940	39 94 38 789	1	1 Arm rest assy	Armstöd kpl	6	2) GLE, TURBO
0960	40 94 38 813	1	1 Arm rest	Armstöd	6	GLE, TURBO
0980	41 84 54 795	1	1 Linkage system LH	Länksystem V	6	GLE, TURBO
1000	42 84 54 803	1	1 Linkage system RH	Länksystem H	6	GLE, TURBO

2. State upholstery colour and car colour code

45. Ch.90791026039.

46. Ch.90791026040-

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

1550

Upholstery, interior equip-
ment, touch-up paint
Rear seat 5CK

Klädsel, invändig utrust-
ning, bättringsfärg
Baksäte 5CK

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Side

1987-10


R3813

8

137

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R /L	Notes Anmärkning
		900	US				
1020	43 84 57 541	4		4. Washer	.Bricka	5	GLE, TURBO
1040	44 84 74 207	4		4. Screw	.Skruv	5	GLE, TURBO
1060	45 84 58 598	4		4. Spacer sleeve	.Distanshylsa	5	GLE, TURBO
1080	46 94 44 888	4		4. Screw	.Skruv	5	GLE, TURBO
1100	47 80 29 555	4		4. Nut	.Mutter	5	GLE, TURBO (80 73 512)
1120	48 84 48 177	1		1. Covering plate LH	Maskeringsbricka V	5	GLE, TURBO
1140	49 34 88 140	1		1. Covering plate RH	Maskeringsbricka H	5	GLE, TURBO
1160	50 84 66 294	1		1. Lock, back cushion LH	Lås, ryggdyna V	5	
1180	50 84 66 302	1		1. Lock, back cushion RH	Lås, ryggdyna H	5	
1200	50 84 68 597	1		1. Lock, back cushion LH	Lås, ryggdyna V	5	AUSTRALIA
1220	50 84 68 605	1		1. Lock, back cushion RH	Lås, ryggdyna H	5	AUSTRALIA
1240	51 84 98 204	6		6. Screw	.Skruv	5	
1260	64 84 40 802	2		2. Shaft bolt	.Axelbult	5	
1280	65 79 35 992	2		2. Lock washer	.Spärryttare	5	
1300	66 84 40 638	1		1. Cover plate LH	Täckplåt V	5	
1320	67 84 40 646	1		1. Cover plate RH	Täckplåt H	5	
1340	68 84 40 653	1		1. Cover plate, middle	Täckplåt, mitre	5	
1360	69 84 41 503	10		10. Screw	.Skruv	5	-1979
1380	69 79 70 304	10		10. Screw	.Skruv	5	1980-
1400	70 84 41 420	1		1. Control arm	.Manöverarm	5	
1420	71 84 41 438	1		1. Spring	.Fjäder	5	
1440	72 73 59 300	2		2. Bushing	.Bussning	4	
1460	73 80 29 936	1		1. Washer	.Bricka	5	
1480	74 84 06 862	1		1. Knob	.Knapp	3	
1500	75 79 34 755	2		2. Screw	.Skruv	5	
1520	76 79 15 564	2		2. Washer	.Bricka	5	
1540	77 79 35 901	2		2. Screw	.Skruv	5	
1560	78 79 16 497	2		2. Washer	.Bricka	5	
1580	79 73 11 327	2		2. Rubber bushing	.Gummibussning	5	
1600	80 73 11 335	2		2. Clamp	.Klamra	5	
1620	81 79 22 891	2		2. Screw	.Skruv	5	
1640	82	X		X. Cushion	.Kudde	5	

SEE ACCESSORIES
CATALOGUE

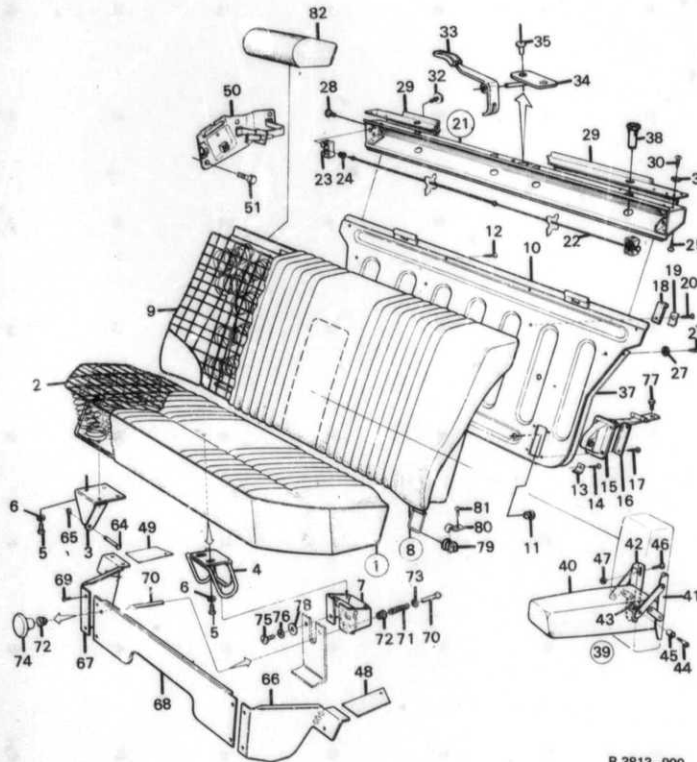

R 3813-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

1600

Upholstery, interior equip-
ment, touch-up paint
Equipment lugg. compartm.

Klädsel, invändig utrust-
ning, bättringsfärg
Utrustning bagagerum

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10 R9363


8

139

Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S S/R / L	Notes Anmärkning
		900	US			
0010	1 94 35 439	1	1 Front floor assy., luggage compartment	Lastrumsgolv kpl	5	
0020	1 94 58 563	1	1 Front floor assy., luggage compartment	Lastrumsgolv kpl	5 40)	
0040	2 94 02 983	4	4 Spring	Fjäder	5	
0060	3 79 71 633	4	4 Screw	Skruv	5	
0070	4 84 67 409	2	2 Rubber holder	Gummistropp	5	
0080	5 79 71 633	2	2 Screw	Skruv	5	
0090	6 84 13 429	2	2 Washer	Bricka	5	
0100	7 94 35 470	1	1 Rear floor assy., luggage compartment	Lastrumsgolv kpl	5 27)	
0110	7 94 51 618	1	1 Rear floor assy., luggage compartment	Lastrumsgolv kpl.	1 28,98) -1979.	
0130	7 94 57 862	1	1 Rear floor assy., luggage compartment	Lastrumsgolv kpl.	5 1980-	
0140	7 94 58 639	1	1 Rear floor assy., luggage compartment	Lastrumsgolv kpl.	5 40)	
0160	8 84 63 440	2	2 Clip	Clip	5	
0180	9 79 70 304	4	4 Screw	Skruv	5	
0190	10 84 63 457	1	1 Strap	Stropp	5	
0200	11 79 71 633	1	1 Screw	Skruv	5	
0210	12 84 13 429	1	1 Washer	Bricka	5	
0220	13 82 17 889	2	2 Knob	Knapp	3	
0230	14 79 71 286	2	2 Screw	Skruv	5	
0240	15 84 63 358	1	1 Spare wheel cover, brown	Reservhjulsskydd brun	6	
0260	15 94 58 217	1	1 Spare wheel cover	Reservhjulsskydd	8 40)	
0270	16 84 63 077	1	1 Lock strap, spare wheel	Låsband, reservhjul	5	
0280	17 94 60 759	1	1 Bracket, spare wheel	Stöd, nödhjul	6 40)	
0290	18 94 58 928	1	1 Hook assy.	Krok kpl	5 40)	
0300	19 79 70 478	1	1 Wing nut	Vingmutter	5 40)	
0310	20 79 16 489	1	1 Washer	Bricka	5 40)	
0320	21 82 11 674	1	1 Rubber buffer	Gummibuffert	5 40)	
0330	22 84 61 998	1	1 Bracket, spare wheel	Stöd, reservhjul	6	
0340	23 79 22 339	1	1 Screw	Skruv	5	
0350	24 79 16 489	1	1 Washer	Bricka	5	
0360	25 86 01 916	1	1 Clip	Clip	5	
0370	26 84 99 659	1	1 Protective cover	Skyddsskåpa	6	
0380	27 79 22 891	1	1 Screw	Skruv	5	
0390	28 84 68 134	2	2 Clip	Clip	5 31) 5CK	
0400	29 84 61 196	1	1 Air outlet	Luftutsläpp	5 -1979	
0410	30 79 19 509	1	1 Clip	Clip	5 -1979	
0420	31 84 61 493	1	1 Spring	Fjäder	5 -1979	
0430	32 94 15 969	1	1 Cover LH	Kåpa V	5 -1979 3CK	
0440	32 94 15 977	1	1 Cover RH	Kåpa H	5 -1979 3CK	
0450	32 94 57 409	1	1 Cover LH	Kåpa V	5 1980- 3CK	
0460	32 84 57 417	1	1 Cover RH	Kåpa H	5 1980- 3CK	
0470	32 84 65 932	1	1 Cover LH	Kåpa V	5 31)	
0480	32 84 65 940	1	1 Cover RH	Kåpa H	5 31)	
0490	33 84 62 228	2	2 Rubber buffer	Gummibuffert	5	
0500	33 94 62 615	2	2 Rubber buffer	Gummibuffert	5 AU	
0510	34 94 15 520	4	4 Screw	Skruv	5 (7922271)	
0520	34 79 85 338	4	4 Screw	Skruv	5 5CK	
0530	35 84 64 828	2	2 Clip	Clip	5	
0540	36 89 30 224	1	1 Label, »capacity and tires»	Etikett, »lastförmåga och däck»	5 US	

R 9363-900

27. Ch.-90791003249.
28. Ch.90791003250-90792000001-
31. Ch.-90791021319.-90796003873.
40. For cars with mini spare wheel
is deleted

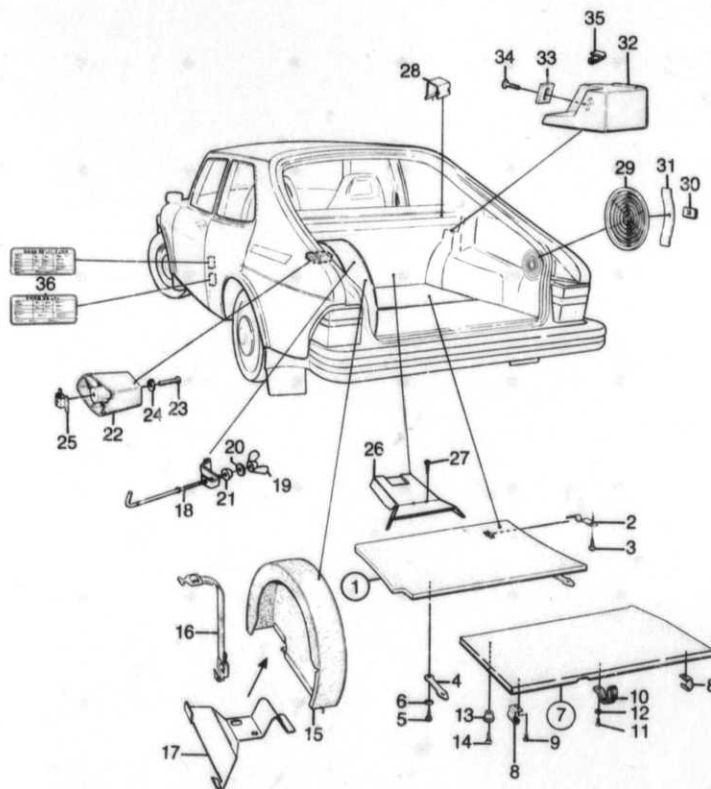

1610

**Upholstery, interior equip-
ment, touch-up paint**
Scuff plate protector

**Klädsel, invändig utrust-
ning, bättringsfärg**
Tröskelskydd

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1987-10

R9364

8

141

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S SR / L	Notes Anmärkning
		000		US				
0010	1	94 21 926	1		1 Scuff plate protec- tor LH	Tröskelskydd V	5	3CK
0020	1	94 21 934	1		1 Scuff plate protec- tor RH	Tröskelskydd H	5	3CK
0030	2	94 21 942	1		1 Scuff plate protec- tor, front door LH	Tröskelskydd fram- dörr V	5	5CK
0040	2	94 21 959	1		1 Scuff plate protec- tor, front door RH	Tröskelskydd fram- dörr H	5	5CK
0050	3	84 82 218	1		1 Scuff plate protec- tor, rear door LH	Tröskelskydd bak- dörr V	5	5CK
0060	3	84 82 226	1		1 Scuff plate protec- tor, rear door RH	Tröskelskydd bak- dörr H	5	5CK
0070	4	79 70 320	8		8 Screw	Skruv	5	3CK
0080	5	79 70 320	10		10 Screw	Skruv	5	5CK
0090	6	94 36 882	1		1 Support strip LH	Stödlist V	5	3CK
0100	6	94 36 890	1		1 Support strip RH	Stödlist H	5	3CK
0110	7	84 53 136	10		10 Clip	Clip	5	3CK
0120	8	94 15 480	1		1 Scuff plate protector	Tröskelskydd	5	

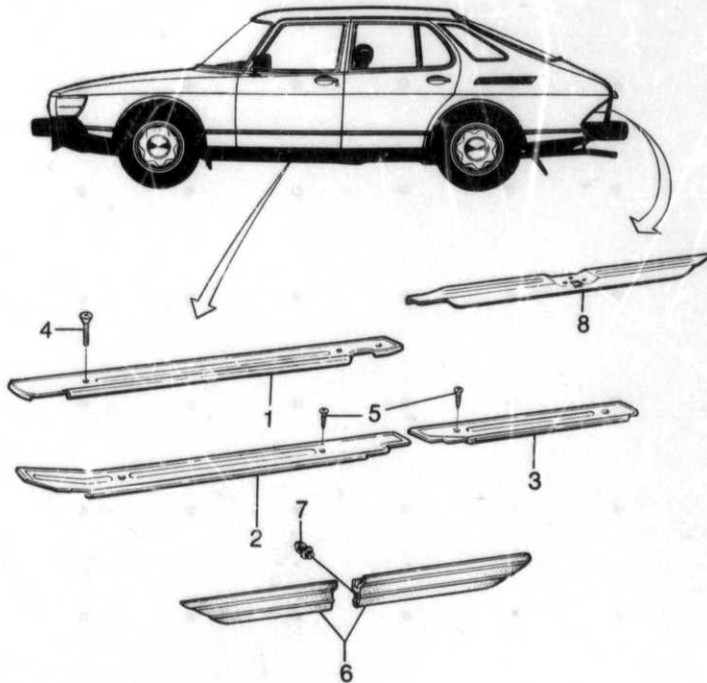

R 9364-900

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F15
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

1620

Upholstery, interior equip-
ment, touch-up paint
Other interior equipment

Klädsel, invändig utrust-
ning, bättringsfärg
Övrig invän. utrustning


Date
Datum: 1987-10

Illustration
Bild nr: R9365

Group
Grupp: 8

Page
Side: 143

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0010	1 94 03 833	1		1 Sun visor LH	Solskydd V	5	
0120	1 94 03 886	1		1 Sun visor with mirror RH	Solskydd med spegel H	5	
0630	1 94 03 841	1		1 Sun visor without mirror RH	Solskydd utan spegel H	5	JP
0060	1 94 03 858	1		1 Sun visor with mirror LH RHD	Solskydd med spegel V RHD	5	
0070	1 94 03 833	1		1 Sun visor with mirror LH RHD	Solskydd utan spegel V RHD	5	AU
0080	1 94 03 841	1		1 Sun visor RH RHD	Solskydd H RHD	5	
0100	2 94 16 520	6		6 Screw	Skruv	5	
0120	3 94 08 402	1		1 Support LH	Stöd V	5	
0130	3 94 08 410	1		1 Support RH	Stöd H	5	
0140	4 98 33 997	1		1 Mirror	Spegel	4	(9404138)
0150	5 98 33 997	1		1 Arm with bracket	Arm med spegelfot	4	(8473986)
0160	6 85 01 710	1		1 Screw	Skruv	5	
0170	7 79 69 215	2		2 Screw	Skruv	5	
0180	8 84 62 772	1		1 Cover frame	Täckram	6	
0190	9 94 08 089	2		2 Clothes hook	Klädkrok	6	
0200	10 79 22 362	2		2 Screw	Skruv	5	
0210	11 94 08 295	2		2 Sleeve	Hylsa	6	
0220	12 94 26 123	1		1 Curve handle, front	Kurvhandtag, främre	5	
0230	12 94 11 582	1		1 Curve handle, front	Kurvhandtag, främre	5	3)
0240	13 94 26 115	2		2 Curve handle, rear	Kurvhandtag, bakre	5	5 SCK
0250	13 94 03 726	2		2 Curve handle, rear	Kurvhandtag, bakre	5	3)
0260	14 94 03 759	2		2 Cover, curve handle	Kåpa kurvhandtag	5	
0270	15 94 03 759	4		4 Cover, curve handle	Kåpa kurvhandtag	5	5 SCK
0280	16 94 07 974	2		2 Spacer	Distans	6	
0290	17 94 07 966	2		2 Cover	Kåpa	6	
0300	18 79 73 969	8		8 Screw	Skruv	5	(7922404)
0310	19 79 73 969	8		8 Screw	Skruv	5	5 SCK (7922404)

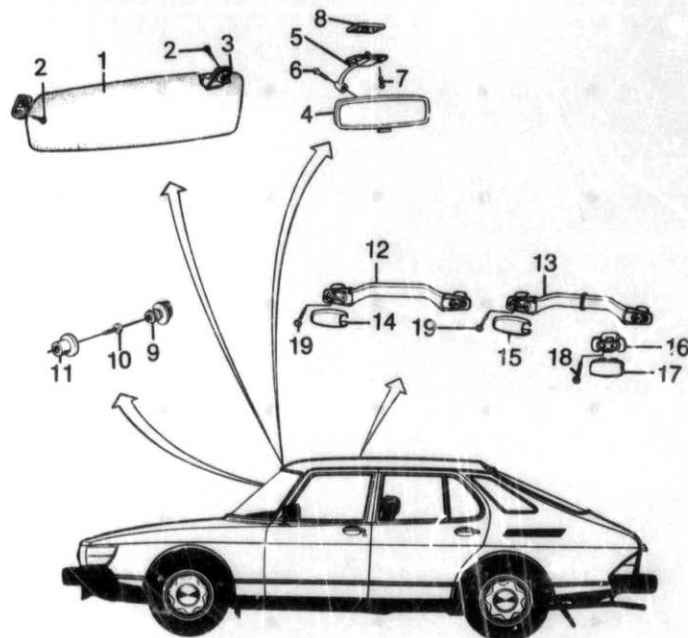

R 9365-900

3. For cars with sun roof

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details,	
glass, sealings	3-F16
Upholstery, interior	
equipment and	
touch-up paint	3-G24
Heating and	
ventilation system	3-J24
Bumpers	3-K18

1630

Upholstery, interior equip-
ment, touch-up paint
Shelf

Klädsol, invändig utrust-
ning, bättringsfärg
Hatthylla


Date
Datum
1987-10

Illustration
Bild nr
R9366

Group
Grupp
8

Page
Sida
145

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR / L	Notes Anmärkning
		900	US				
0010	1	64 65 965	1	1 Shelf	Hatthylla	5	-1979
0020	1	94 72 133	1	1 Shelf	Hatthylla	5	1980- (94 52 194)
0030	2	94 04 286	2	2, Stop	Stopp	5	-1979
0040	2	94 69 650	2	2, Stop	Stopp	5	1980-
0050	3	94 10 961	4	4, Screw	Skruv	5	
0060	4	84 67 870	1	1 Support LH	Stöd V	5	
0070	5	84 67 888	1	1 Support RH	Stöd H	5	
0080	3	79 65 776	4	4 Nut	Mutter	3	
0090	7	62 67 395	4	4 Rubber buffer	Gummibuffert	5	26)
0100	5	64 27 941	4	4 Screw	Skruv	5	26)

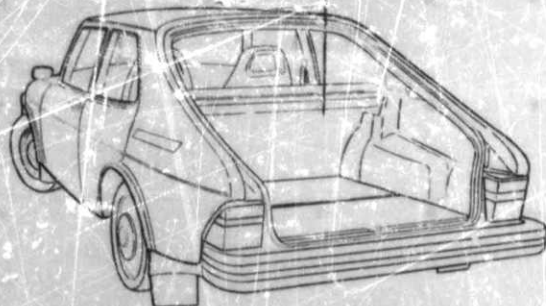

R 9366-900

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Burners	3-K16

1650

Equipment, etc
Automatic safety belt,
front

Utrustning etc
Automatbälte, främre

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida


1987-10

R5184

8

147

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K S R	Notes Anmärkning
		900		US				
0000	1 94 62 185	1			1 Automatic safety belt LH	Automatbälte V	3	CK(9400417)
0070	1 94 62 193	1			1 Automatic safety belt RH	Automatbälte H	3	CK(9400425)
0080	1 94 62 185	1			Kit, automatic safety belt LH	Sets, automatbälte V	3	67) 3CK GB
0110	1 94 62 193	1			Kit, automatic safety belt RH	Sets, automatbälte H	3	67) 3CK GB
0120	1 94 00 417	1			Automatic safety belt LH	Automatbälte V	3	61) 3CK AU
0130	1 94 00 425	1			Automatic safety belt RH	Automatbälte H	3	61) 3CK AU
0140	1 94 04 104	1			1 Automatic safety belt LH	Automatbälte V	3	24) 5CK
0150	1 94 04 112	1			1 Automatic safety belt RH	Automatbälte H	3	24) 5CK
0180	1 94 50 750	1			1 Automatic safety belt LH	Automatbälte V	3	25) 5CK
0210	1 94 50 768	1			1 Automatic safety belt RH	Automatbälte H	3	25) 5CK
0220	1 94 04 104	1			Automatic safety belt LH	Automatbälte V	3	25) 5CK, AU
0230	1 94 04 112	1			Automatic safety belt RH	Automatbälte H	3	25) 5CK, AU
0240	1 94 50 750	1			Kit, automatic safety belt LH	Sets, automatbälte V	3	67) 5CK GB
0250	1 94 50 768	1			Kit, automatic safety belt RH	Sets, automatbälte H	3	67) 5CK GB
0260	2 94 38 276	1			Kit, automatic safety belt LH	Sets, automatbälte V	3	66) 3CK GB
0270	2 94 38 284	1			Kit, automatic safety belt RH	Sets, automatbälte H	3	66) 3CK GB
0280	2 94 50 750	1			Kit, automatic safety belt LH	Sets, automatbälte V	3	13) 5CK GB (9438342)
0290	2 94 50 768	1			Kit, automatic safety belt RH	Sets, automatbälte H	3	13,90) 5CK GB (9438359)
0310	2 94 50 750	1			Kit, automatic safety belt LH	Sets, automatbälte V	3	14,66) 5CK GB (9459132)
0320	2 94 50 768	1			Kit, automatic safety belt RH	Sets, automatbälte H	3	14,66) 5CK GB
0330	3 84 99 238	2			2 .Screw	.Skruv	5	6"CK
0340	4 84 89 056	2			2 .Screw	.Skruv	5	
0350	5 84 76 673	4			4 .Bearing	.Lagring	5	
0360	5 94 22 346	2			2 .Bearing	.Lagring	5	25) PART OF 9450750/768
0370	6 73 50 424	2			2 .Washer	.Bricka	5	
0380	7 84 15 580	2			2 .Spacer	.Distans	5	3"CK
0390	8 84 15 580	2			2 .Spacer	.Distans	5	5"CK
0400	8 84 99 196	2			2 .Screw	.Skruv	5	3CK
0410	9 84 76 681	2			2 .Spacer	.Distans	5	3"CK
0420	10 80 30 017	2			2 .Washer	.Bricka	5	5"CK
0430	11 84 99 196	2			2 .Screw	.Skruv	5	5"CK
0440	11A 73 30 194	2			2 .Spacer sleeve	.Distanshylsa	5	5CK
0450	12 84 76 681	2			2 .Spacer ring	.Distansring	5	5"CK
0460	13 94 50 990	2			2 .Cover	.Kåpa	4	25) PART OF 9450750/768
0470	14 73 85 539	2			2 .Screw	.Skruv	5	

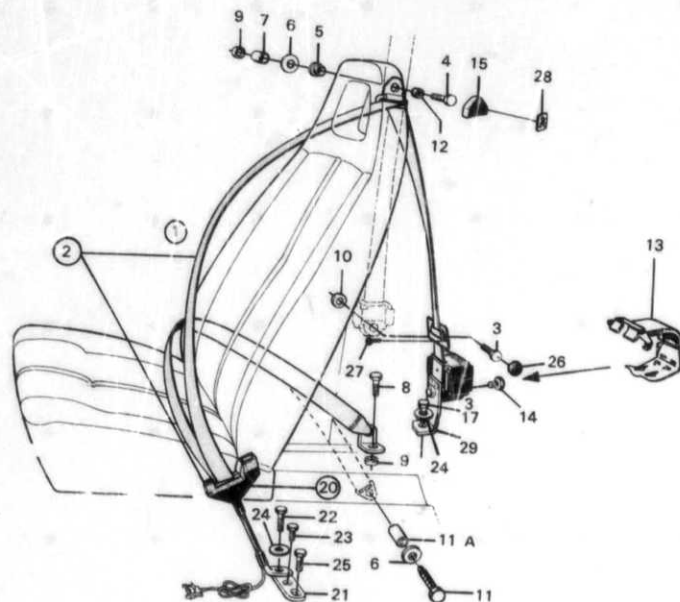

R 5184-900

13. Ch.-90791014646.-90796004463.
14. Ch.90791014647.-90796004464.-
24. Ch.-90791019182.
25. Ch.90791019183.-
61. Ch.90801007456.-90802002256.-90806000744.-
66. Ch.-90801008542.-90802003340.
67. Ch.90801008543.-90802003341.-
98. Is deleted

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

1650

Equipment, etc
Automatic safety belt,
front

Utrustning etc
Automatbälte, främre


Date
Datum
1987-10

Illustration
Bild nr
R5184

Group
Grupp
8

Page
Sida
149

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S S/R / L	Notes Anmärkning
		900		US				
0610	15	94 50 784	2		2 Cover	Kåpa	4	(8458226)
0620	17	84 99 204	2		2 Screw	Skruv	5	
0630	20	84 97 323	2		2 Belt lock	Kläfflås	5	56) NOT GB
0640	20	94 58 969	2		2 Belt lock	Kläfflås	5	57) NOT GB
0650	20	84 97 323	2		2 Belt lock	Kläfflås	5	57) AU
0660	20	94 58 969	2		2 Belt lock	Kläfflås	5	57) GB
0670	20	94 48 056	2		2 Belt lock, lengthened assy	Kläfflås, förlängt kpl	5	ALT TO 8497323
0680	20	94 58 969			1 Belt lock, LH	Kläfflås V	5	56) US (8497323)
0700	20	73 88 218			1 Belt lock, RH	Kläfflås H	5	56) US
0710	20	94 58 969			1 Belt lock, LH	Kläfflås V	5	57) US
0720	20	94 59 009			1 Belt lock, RH	Kläfflås H	5	57) US
0730	21	84 72 359	1		1 Pad	Mellanlägg	5	
0740	22	84 89 056	2		2 Screw	Skruv	5	(8489238)
0750	23	84 99 204	2		2 Screw	Skruv	5	(8436610)
0760	24	80 30 017	2		2 Washer	Waska	5	
0770	25	84 89 056	2		2 Screw	Skruv	5	(8489238)
0780	26	84 48 847	2		2 Cover cap	Täcklock	4	5°CK
0790	27	84 10 961	4		4 Screw	Skruv	5	
0800	28	84 84 123	2		2 Label, safety belt	Etikett, bilbälte	5	SCANDINAVIA AND AUSTRALIA
0810	29	94 00 250	1		1 Bracket LH	Fästjärn V	6	60) 3 CK
0820	29	94 00 268	1		1 Bracket RH	Fästjärn H	6	60) 3 CK
0830	29	94 00 250	1		1 Bracket LH	Fästjärn V	6	61) 3CK AU
0840	29	94 00 268	1		1 Bracket RH	Fästjärn H	6	61) 3CK AU

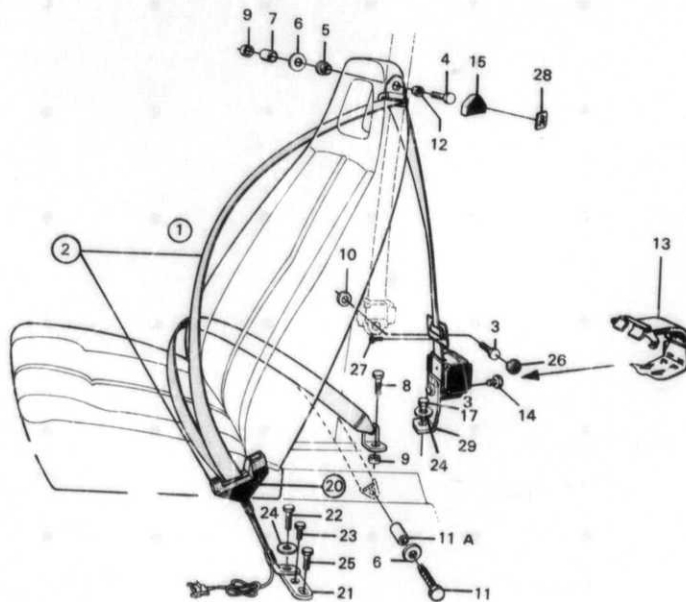

R 5184-900

56. Ch. 90801000834 - 90802000034 - 90806000068.
57. Ch. 90801000835 - 90802000035 - 90806000069.
60. Ch. 90801007457 - 90802002256 - 90806000743.
61. Ch. 90801007458 - 90802002256 - 90806000744.
67. Ch. 90801008543 - 90802003341 -

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K16

1700

Equipment, etc
Automatic safety belt
rear

Utrustning, etc
Automatbälte, bakre

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10 R4293

8

151

Fig. Pos.	Part No Art nr	Quantity/Åntal		Description	Benämning	K S	Notes Anmärkning
		900	US				
0010	1 94 62 698	1		1 Automatic safety belt LH	Automatbälte V	5	3*CK (8467276)
0020							
0030	1 94 62 706	1		1 Automatic safety belt RH	Automatbälte H	5	3*CK (8467284)
0040							
0050	1 94 02 439	1		1 Automatic safety belt LH	Automatbälte V	5	60) 5 CK
0060							
0070	1 94 02 447	1		1 Automatic safety belt RH	Automatbälte H	5	58) 5 CK
0080							
0090	1 94 22 296	1		1 Automatic safety belt LH	Automatbälte V	5	5,6,7,58) 5 CK
0100							
0110	1 94 22 304	1		1 Automatic safety belt RH	Automatbälte H	5	5,6,7,58) 5 CK
0120							
0130	1 94 65 414	1		1 Automatic safety belt LH	Automatbälte V	5	7,59) 5 CK
0140							
0150	1 94 68 422	1		1 Automatic safety belt RH	Automatbälte H	5	7,59) 5 CK
0160							
0170	1 94 22 296	1		1 Automatic safety belt LH	Automatbälte V	5	7,59) 5 CK, AU
0180							
0190	1 94 22 304	1		1 Automatic safety belt RH	Automatbälte H	5	7,59) 5 CK, AU
0200							
0202	1 94 86 267	1		1 Automatic safety belt LH	Automatbälte V	5	-1979, GLE, 5CK, GB, USE WITH 9489477 (9438409)
0204							
0206	1 94 86 275	1		1 Automatic safety belt RH	Automatbälte H	5	-1979, GLE, 5CK, GB, USE WITH 9489477 (9438417)
0208							
0210	2 94 38 425	1		1 Kit, automatic safety belt LH	Sats, automatbälte V	5	-1979 EMS, 3CK, GE
0220							
0230	2 94 38 433	1		1 Kit, automatic safety belt RH	Sats, automatbälte H	5	-1979 EMS, 3CK, GE
0240							
0250	3 84 44 440	2		2 .Screw	.Skruv	5	
0260	3 84 99 238	2		2 .Screw	.Skruv	5	PART OF 9422296/304
0270	4 80 30 017	2		2 .Washer	.Bricka	5	
0280	4A 94 57 490	2		2 .Spacer sleeve	.Distanshylsa	5	
0290	5 84 99 186	2		2 .Screw	.Skruv	5	(8476087)
0300	5 84 89 058	2		2 .Screw	.Skruv	5	PART OF 9422296/304
0310	6 84 76 673	2		2 .Bearing	.Lagring	5	
0320	6 94 22 346	2		2 .Bearing	.Lagring	5	PART OF 9422296/304
0330	7 84 76 681	2		2 .Spacer	.Distans	5	
0340	8 73 50 424	2		2 .Washer	.Bricka	5	
0350	9 84 29 128	2		2 .Spacer	.Distans	5	
0360	9 73 50 194	2		2 .Spacer	.Distans	5	5*CK
0370	10 84 15 580	2		2 .Spacer	.Distans	5	
0380	11 73 85 339	4		4 .Screw	.Skruv	5	
0390	12 84 88 991	1		1 Strap with lock, hip	Band med lås, höft	5	
0400	13 94 38 375	1		1 Kit, automatic safety belt	Sats, automatbälte	6	-1979 EMS, GLE, GB
0410							
0420	14 84 44 440	1		1 .Screw	.Skruv	5	
0430	15 80 30 017	1		1 .Washer	.Bricka	5	
0440	16 84 88 389	2		2 Strap with lock	Band med lås	5	
0450	16 94 22 015	2		2 Strap with lock	Band med lås	5	6,7,58) 5CK, ALTERN. TO 8488389
0460							
0470	16 94 68 554	2		2 Strap with lock	Band med lås	5	7,59) 5CK
0480	16 94 22 015	2		2 Strap with lock	Band med lås	5	7,59) 5CK, AU
0485	16 94 89 477	2		2 Strap with lock	Band med lås	5	USE WITH 9488267, 9486275
0490	17 84 44 440	2		2 .Screw	.Skruv	5	
0500	17 04 99 204	2		2 .Screw	.Skruv	5	PART OF 9438409/417
0510	18 80 30 017	2		2 .Washer	.Bricka	5	
0520	19 84 89 007	1		1 Hip belt	Höftbälte	5	
0530	20 84 44 440	1		1 .Screw	.Skruv	5	

5. Alternative to 9402439/447


6. Skandinavien och Australien

7. All belts are marked with Saab part nos

58. Ch. 90801005715.. 90801006545.. 90806001616.

59. Ch. 90801005716.. 90801006546.. 90806001617..

R 4293-900

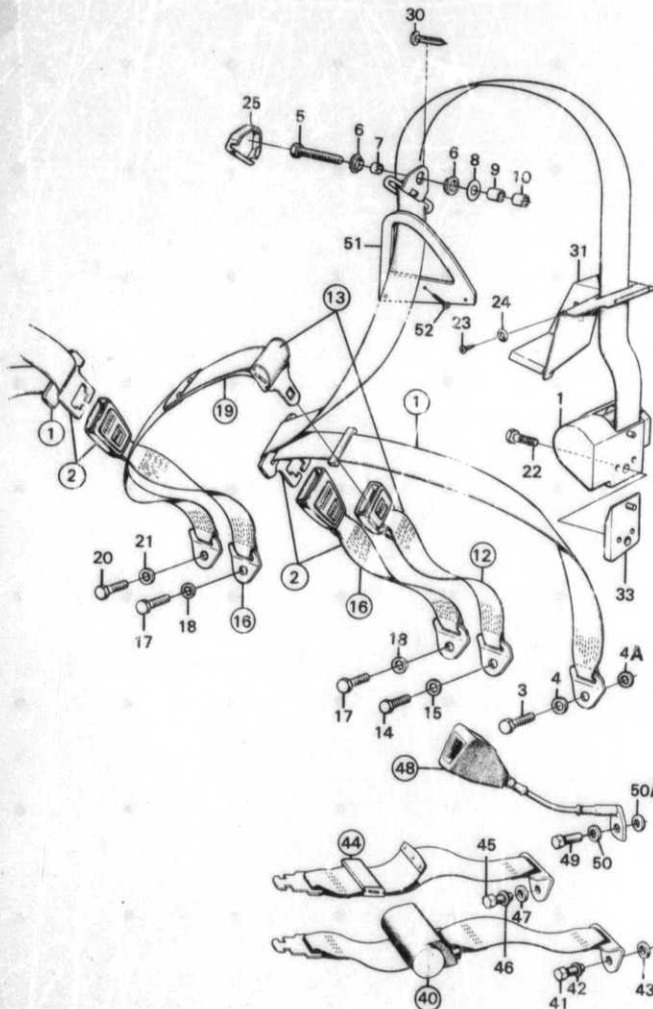

1700

Equipment, etc
Automatic safety belt
rear

Utrustning, etc
Automatbälte, bakra


Date
Datum
1987-10

Illustration
Bild nr
R4293

Group
Grupp
8

Page
Sida
153

Fig. Pos.	Part No Art nr	Quantity/Åntal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0540	21	80 30 017	1	1. Washer	.Bricka	5	
0550	22	84 26 283	2	2. Screw	.Skruv	5	PART OF 9422296/304
0560	23	84 98 238	2	2. Screw	.Skruv	5	
0570	23	79 21 331	4	4. Screw	.Skruv	5	
0580	24	84 13 429	4	4. Washer	.Bricka	5	
0590	25	94 50 784	2	2. Cover	.Kåpa	4	(8458226)
0600	30	84 79 123	2	2. Plastic plug	.Plastplugg	5	(8)
0610	31	94 15 989	1	1. Cover LH	.Kåpa V	4	(8)
0620	31	94 15 977	1	1. Cover RH	.Kåpa H	4	(8)
0630	33	94 22 411	2	2. Spacer washer	.Distansbricka	5	PART OF 9422296/304
0640	40	94 03 403	2	2. Retractor belt	.Retractorbälte	5	US, CA, JA
0650	41	84 44 440	2	2. Screw	.Skruv	5	US, CA, JA
0660	42	80 30 017	2	2. Washer	.Bricka	5	US, CA, JA
0670	43	94 57 490	2	2. Spacer sleeve	.Distanshylsa	5	US, CA, JA
0680	44	84 79 214	1	1. Hip belt	.Höftbälte	5	US, CA, JA
0690	45	84 44 420	1	1. Screw	.Skruv	5	US, CA, JA
0700	46	79 15 706	1	1. Washer	.Bricka	5	US, CA, JA
0710	47	73 38 981	1	1. Washer	.Bricka	5	US, CA, JA
0720	48	73 81 924	3	3. Belt lock	.Bälteslås	6	US, CA, JA
0730	49	84 44 440	3	3. Screw	.Skruv	5	US, CA, JA
0740	50	80 30 017	3	3. Washer	.Bricka	5	US, CA, JA
0750	50A	94 57 490	3	3. Spacer sleeve	.Distanshylsa	5	US, CA, JA
0760	51	84 68 476	1	1. Safety belt guide LH	.Bältesledare V	5	-1978-3CK
0770	51	84 68 484	1	1. Safety belt guide RH	.Bältesledare H	5	-1978-3CK
0780	51	94 57 425	1	1. Safety belt guide LH	.Bältesledare V	5	1980-3CK
0790	51	94 57 433	1	1. Safety belt guide RH	.Bältesledare H	5	1980-3CK
0800	52	84 41 503	4	4. Screw	.Skruv	5	3"CK

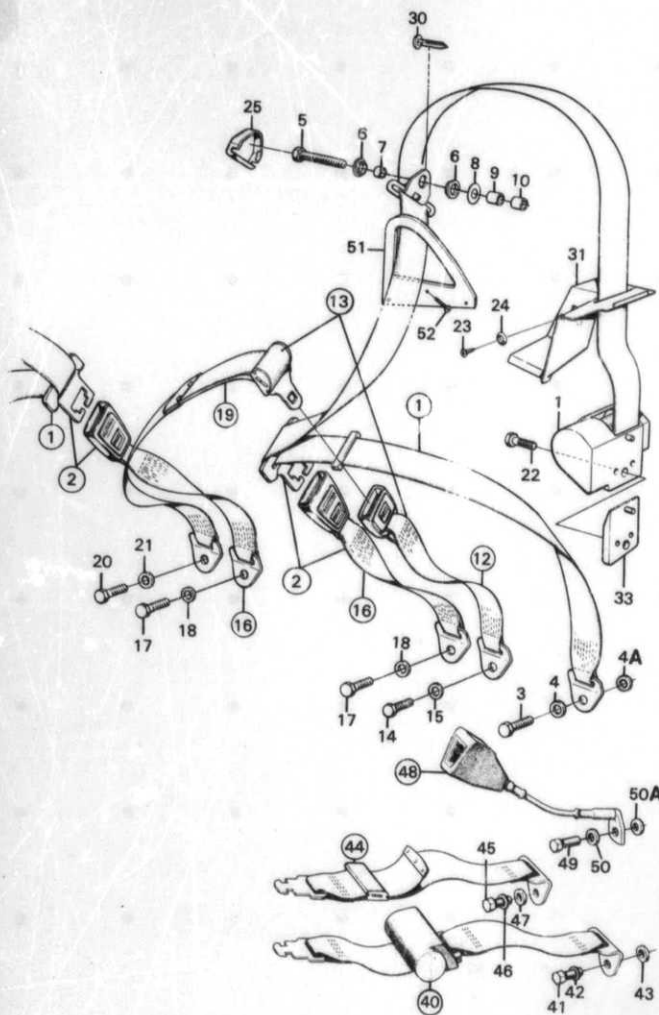

R 4293-900

8. US and cars without rear safety belt

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
4	Instruments	2-F02
5	Transmission	2-J02
6	Brakes	3-A02
7	Front assembly,	
8	Steering	3-B02
9	Suspension,	
10	Wheels	3-C02
11	Body	3-D02
12	Accessories,	
13	Labels	3-L02
14	Numerical	
15	register	4-A02
8 GROUP INDEX		
16	Main body	3-D10
17	instrument panel	3-E06
18	Hood, front. fenders	3-E14
19	Doors, trunk lid	3-E20
20	External details,	
21	glass, sealings	3-F16
22	Upholstery, interior	
23	equipment and	
24	touch-up paint	3-G24
25	Leating and	
26	ventilation system	3-J24
27	Bumbers	3-K18

1750

Upholstery, interior equip-
ment, touch-up paint
Enamel

Klädsel, invändig utrust-
ning, bättringsfärg
Färg

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

BLANK

8

155

Fig. Pos.	Part No Art nr	Quantity/Åntal			Description	Benämning	K S	Notes Anmärkning
		900		US				
0010					FINISHING COAT:	TÄCKFÄRG(KUNSTHARZ)		
0020	1L 78 20 228	X			X Black, 170	Svart, 170	3	L - LITER
0040	1/4L 78 20 244	X			X Black, 170	Svart, 170	3	
0060	1L 84 86 656	X			X Doradobrown, 165	Doradobrun, 165	3	
0080	1/4L 84 86 664	X			X Doradobrown, 165	Doradobrun, 165	3	
0100	1L 88 15 948	X			X Yellow, taxi 185	Gul, taxi 185	3	
0120	1/4L 88 15 953	X			X Yellow, taxi 185	Gul, taxi 185	3	
0140	1L 84 70 676	X			X Cinnabar red, 121	Cinnaberröd, 121	3	
0160	1/4L 84 70 684	X			X Cinnabar red, 121	Cinnaberröd, 121	3	
0180	1L 84 87 084	X			X Marble white, 152	Marmorvit, 152	3	
0200	1/4L 84 87 092	X			X Marble white, 152	Marmorvit, 152	3	
0205	1L 84 87 563	X			X Polis blue, 132	Polisblå, 132	3	
0206	1/4L 84 87 571	X			X Polis blue, 132	Polisblå, 132	3	
0220	1L 84 87 027	X			X Midnight blue, 136	Midnattsblå, 136	3	
0240	1/4L 84 87 035	X			X Midnight blue, 136	Midnattsblå, 136	3	
0245	1L 84 87 415	X			X Safir blue, 138	Safirblå, 138	3	
0246	1/4L 84 87 423	X			X Safir blue, 138	Safirblå, 138	3	
0280	1L 84 86 961	X			X Alabaster yellow, 187	Alabastergul, 187	3	
0280	1/4L 84 86 979	X			X Alabaster yellow, 187	Alabastergul, 187	3	
0300	1L 84 86 995	X			X Chamotte brown, 167	Chamottebrun, 167	3	
0320	1/4L 84 87 001	X			X Chamotte brown, 167	Chamottebrun, 167	3	
0340	1L 84 86 722	X			X Cardinal red	Cardinalröd	3	-1979
0360					metallic, 123	metallic, 123	3	-1979
0380	1/4L 84 86 730	X			X Cardinal red	Cardinalröd	3	-1979
0400					metallic, 123	metallic, 123	3	-1980
0401	1L 84 87 142	X			X Carmine red	Carminröd	3	-1980
0402					metallic, 124	Carminröd	3	-1980
0403	1/4L 84 87 159	X			X Carmine red	Carminröd	3	-1980
0404					metallic, 124	Carminröd	3	-1980
0420	1L 84 87 050	X			X Acacia green	Akaciagrön	3	
0440					metallic, 148	metallic, 148	3	
0460	1/4L 84 87 068	X			X Acacia green	Akaciagrön	3	
0480					metallic, 148	metallic, 148	3	
0500	1L 84 87 118	X			X Aquamarine blue	Akvamarinblå	3	
0520					metallic, 137	metallic, 137	3	
0540	1/4L 84 87 126	X			X Aquamarine blue	Akvamarinblå	3	
0560					metallic, 137	metallic, 137	3	
0580	1L 84 86 680	X			X Charcoal grey	Antracitgrå	3	-1980
0600					metallic, 111	metallic, 111	3	-1980
0620	1/4L 84 86 698	X			X Charcoal grey	Antracitgrå	3	-1980
0640					metallic, 111	metallic, 111	3	-1980
0660	1/4L 97 46 256	X			X Grey metallic 114	Grå metallic 114	3	FOR SPOILER
0670								
0680					PRIMER:	GRUNDFÄRG:		
0700	3L 84 87 639	X			X Reaktionsprimer	Reaktionsprimer	6	
0720	1,5L 84 87 647	X			X Zusatzlösung	Zusatzlösung	6	
0740								
0760					UNDERCOAT:	MELLANFÄRG:		
0780	1L 84 87 720	X			X EP Grundierfüller	EP Grundierfüller	6	
0800					inkl EP Härter	inkl. EP Härter		
0820					THINNER:	FÖRTUNNING:		
0840					X Verdünnung 11012	Verdünnung 11012	5	FOR 8487720
0860	1L 84 86 318	X			X Verdünnung 11012	Verdünnung 11012	5	FOR 8487720
0880	5L 84 86 326	X			X Kunstharz-Verdün-	Kunstharz-Verdün-	5	FOR ALL FINISHING COAT
0900	1L 84 87 753	X			nung 11015	nung 11015		
0920					X Kunstharz-Verdün-	Kunstharz-Verdün-	5	FOR ALL FINISHING COAT
0940	5L 84 87 761	X			nung 11016	nung 11016		
0960								
0980					DEGREASING AGENTS	AVFETTNINGS OCH		
1000					AND CLEANER:	RENGÖRINGSMEDEL		
1020	5L 84 87 779	X			X Silikonentremover	Silikonentbortagare	6	
1040					11130	11130		
1060	5L 84 87 787	X			X Nitro thinner	Nitro förtunning	6	
1080								
1100								

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

1750

**Upholstery, interior equip-
ment, touch-up paint**
Enamel

**Klädsel, invändig utrust-
ning, bättringsfärg**
Färg

Date
Datum
1987-10

Illustration
Bild nr
BLANK

Group
Grupp
3

Page
Sida
157

Fig. Pos.	Part No Art nr	Quantity/Amount			Description	Benämning	K/S S/R	Notes Anmärkning
		900		US				
1120	2KG 84 87 613	X			FILLER:	SPACKEL:		
1140					X Stopper	Pist och juster-	8	
1180	1L 84 87 621	X			X Spray filler	spackel		
1200						Sprutspackel	6	
1220	X				HARDENER:	Härdare:		
1240	5L 88 16 415	X			X Standox härter	Standox härter	5	
1260	X				20-80 degrees C	20-80 grader C		
1280	5L 88 16 423	X			X Standox 80 degrees C	Standox 80 grader C	5	
1300					härterlack	härterlack		

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, steering	3-B02
7	Suspension, wheels	3-C02
8	Body	3-D02
9	Accessories, labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

1800

**Upholstery, interior equip-
ment, touch-up paint,
Two-components**

**Klädsel, invändig utrust-
ning, bättringsfärg,
Tvåkomponent**

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

BLANK

8

159

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K/S SR	Notes Anmärkning
		900		US				
0020					FINISHING COAT	TÄCKFÄRG		
0030	1L 84 86 482	X			X Cinnabar red, 121	X Cinnaberröd, 121	3	L=LITER
0040	1L 84 87 431	X			X Safir blue, 136	X Safirblå, 136	3	
0050	1L 84 86 672	X			X Dorado brown, 165	X Doradobrun, 165	3	
0060	1L 84 86 748	X			X Cardinal red	X Kardinalröd	3	-1979
0070					metallic, 123	metallic, 123		
0080	1L 84 87 167	X			X Carmine red	X Carminröd	3	1980-
0090					metallic, 124	metallic, 124		
0100	1L 84 86 987	X			X Alabaster yellow, 187	X Alabastergul, 187	3	
0110	1L 84 87 100	X			X Marble white, 152	X Marmorvit, 152	3	
0120	1L 84 87 589	X			X Polis blue, 132	X Polisblå, 132	3	
0130	1L 84 87 043	X			X Midnight blue, 136	X Midnattblå, 136	3	
0140	1L 84 87 134	X			X Aquamarine blue	X Akvamarinblå	3	
0150					metallic, 137	metallic, 137		
0160	1L 84 87 076	X			X Acacia green	X Akaciagrön	3	
0170					metallic, 148	metallic, 148		
0180	1L 84 87 019	X			X Chamotte brown, 167	X Chamottebrun, 167	3	
0190	1L 84 86 706	X			X Charcoal grey	X Antracitgrå	3	1980-
0200					metallic, 111	metallic, 111		
0205	1L 97 46 264	X			X Black, 170	X Svart, 170	3	
0210	1L 84 87 217	X			X Silver metallic, 172	X Silver metallic, 172	3	1980
0215	1/4L 97 46 835	X			X Charcoal grey 176	X Antracitgrå 176	3	FOR PLASTIC
0217	1/4L 97 46 843	X			X Black 177	X Svart 177	3	FOR PLASTIC
0220	1L 97 46 256	X			X Retouch paint for spoiler, grey met. 114	X Bättringsfärg för spoiler, grå met. 114	3	
0230								
0235								
0240					CLEAR COAT	KLARLACK		
0250	1L 84 87 225	X			X 2K-Standocryl	X 2K-Standocryl	3	FOR 8487217
0260	1L 84 86 292	X			X Hardener	X Härdare	5	FOR ALL FINISHING COAT AND 8487712
0270	.5L 84 86 300	X			X 2K-Spezial-Härter	X Härdare	5	FOR ALL FINISHING COAT AND 8487712
0280								
0290								
0300								
0310					PRIMER:	GRUNDFÄRG:		
0320	3L 84 87 639	X			X Reaktionsprimer	X Reaktionsprimer	6	
0325	1L 97 46 306	X			X Kunststoff-Haftprimer, for plastic material	X Kunststoff-Haftprimer, för plastmaterial	6	
0330	1.5L 31 87 647	X			X Zusatzlösung	X Zusatzlösung	6	FOR 8487639
0340	1L 84 87 654	X			X 1:1 Füllprimer	X 1:1 Füllprimer	6	
0350	1L 84 87 662	X			X 1:1 Härte-lösung	X 1:1 Härte-lösung	6	FOR 8487654
0360								
0370					UNDER coat	MELLANFÄRG		
0380	1L 84 87 670	X			X 2k-Sealer (shaded)	X 2k-Sealer(nyanserad)	6	
0390	.5L 84 87 688	X			X 2k-Sealer (shaded)	X 2k-Sealer(nyanserad)	6	
0400	1L 84 87 696	X			X 2k-Sealer-Härter	X 2k-Sealer-Härter	6	
0410	2.5L 84 87 704	X			X 2k-Sealer-Härter	X 2k-Sealer-Härter	6	
0420	1L 84 87 712	X			X 2k-Fillsealer	X 2k-Fillsealer (in- färgningsbar)	95)	
0430								
0440	1L 84 87 795	X			X 2k-Lösung 11031 scharf	X 2k-lösung 11031 scharf	6	97)
0450								
0460								
0470					THINNER	FÖRTUNNING		
0480	1L 84 86 318	X			X Verdünnung 11012	X Verdünnung 11012	5	96)
0490	.5L 84 86 326	X			X Verdünnung 11012	X Verdünnung 11012	5	96)
0500					DEGREASING AGENTS	AVFETTNINGS- AND		
0510					AND CLEANER	RENGÖRINGSMEDEL		
0520	.5L 84 87 779	X			X Siliconremover, 11130	X Siliconborttagare, 11130	6	
0530								
0540	.5L 84 87 787	X			X Nitro thinner	X Nitrofortunning	6	
0550								

95. Finishing coat and hardener 8486292 or 8486300 must be added

96. For all finishing coats and undercoats

97. For engrossing with 2-k-fillsealer

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

1800

**Upholstery, interior equip-
ment. touch-up paint.
Two-components**

**Klädsel, invändig utrust-
ning. bättringsfärg.
Tvåkomponent**

Date
Datum
1987-10

Illustration
Bild nr
BLANK

Group
Grupp
8

Page
Sida
161

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	Notes Anmärkning		
		900			US		K S R	L	
0660	2K3	84 87 013	X			FILLER	SPACKEL	6	
0670	1L	84 87 621	X			X Stopper	Plåt o. Juserspackel	6	
0680		97 46 298	X			X Spray filler	Sprutspackel	6	
0690						X Stopper, for plastic	Spackel, för plast-	6	
0691						material	material		
0692						PLASTICIZER	MJUKGÖRARE		
0700	1L	97 46 314	X			X 2K-Weichmacher,	2K-Weichmacher,	6	
0720						for plastic material	för plastmaterial		
0721									

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front. fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

1830

**Upholstery, interior
equipment**
Trim colour code sign

**Klädsel, invändig utrust-
ning**
Klädselkodskylt

Date
Datum
1937-10

Illustration
Bild nr
BLANK

Group
Grupp
8

Page
Sida
163

Fig. Pos.	Part No Art nr	Quantity/Antal			Description	Benämning	K S R L	Notes Anmärkning
		900		US				
0020	82 71 834	1			1 Label, trim code	Etikett, klädselkod	6	C01
0040	82 71 842	1			1 Label, trim code	Etikett, klädselkod	6	C02
0060	82 71 859	1			1 Label, trim code	Etikett, klädselkod	6	C03
0080	82 71 867	1			1 Label, trim code	Etikett, klädselkod	6	C04
0100	82 71 875	1			1 Label, trim code	Etikett, klädselkod	6	C05
0120	82 71 883	1			1 Label, trim code	Etikett, klädselkod	6	C06
0140	82 71 891	1			1 Label, trim code	Etikett, klädselkod	6	C07
0160	82 72 007	1			1 Label, trim code	Etikett, klädselkod	6	C08
0180	94 82 125	1			1 Label, trim code	Etikett, klädselkod	6	C16
0200	94 82 133	1			1 Label, trim code	Etikett, klädselkod	6	C17
0220	97 03 216	1			1 Label, trim code	Etikett, klädselkod	6	C18

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Burners	3-K18

1840

**Upholstery, interior
equipment**
Colour code sign

**Klädsel, invändig
utrustning**
Färgkodskylt

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

BLANK

8

165


Fig. Pos.	Part No. Art nr	Quantity/Antal			Description	Benämning	K/S SR	Notes Anmärkning
		900		US			L	
0020	82 88 938	1			1 Label, colour code	Etikett, färgkod		111 B
0040	82 71 819	1			1 Label, colour code	Etikett, färgkod		121 B
0060	82 71 827	1			1 Label, colour code	Etikett, färgkod		123 B
0080	82 88 177	1			1 Label, colour code	Etikett, färgkod		124 B
0100	82 71 843	1			1 Label, colour code	Etikett, färgkod		136 H
0120	82 71 850	1			1 Label, colour code	Etikett, färgkod		137 B
0140	82 71 868	1			1 Label, colour code	Etikett, färgkod		148 B
0160	82 71 876	1			1 Label, colour code	Etikett, färgkod		152 G
0180	82 71 884	1			1 Label, colour code	Etikett, färgkod		165 B
0200	82 71 892	1			1 Label, colour code	Etikett, färgkod		167 H
0220	82 71 900	1			1 Label, colour code	Etikett, färgkod		170 B
0240	82 25 871	1			1 Label, colour code	Etikett, färgkod		172 H
0260	82 71 918	1			1 Label, colour code	Etikett, färgkod		184 B
0280	82 71 926	1			1 Label, colour code	Etikett, färgkod		187 B

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

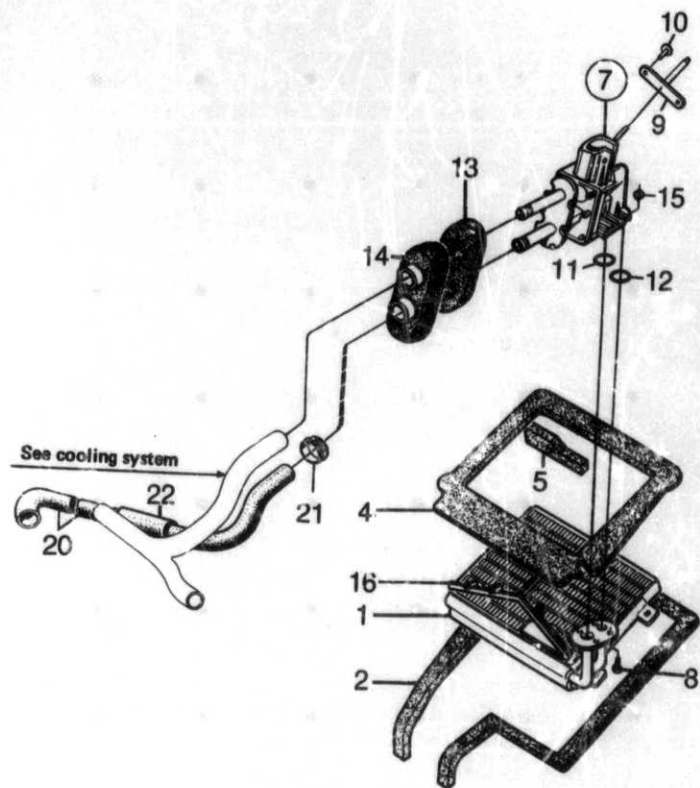

R 9353-900

SAAB
genuine parts
original reserved

3-J24

SAAB 900
M79-80

MASTER INDEX

1851

Heating and ventilation
Heater core, water
valve etc.

Värme och ventilation
Värmeväxlare, värmekran
etc.

Date
Datum
1987-1C

Illustration
Bild nr
R9353

Group
Grupp
8

Page
Sida
167

Fig. Pos.	Part No Art nr	Quantity/Anst	Description	Benämning	K/S SR	Notes Anmärkning
0010	1 94 81 722	1	1 Heater core	Värmeväxlare	4	71) (9401019) USE TOGETHER WITH 9409156 SEE PAGE 8-171, 3-K04
0015						
0100	1 94 65 279	1	1 Heater core	Värmeväxlare	4	72)
0040	2 94 18 039	1	1 Seal	Tätning	5	
0100	4 94 01 001	1	1 Seal	Tätning	5	
0120	5 94 01 084	1	1 Seal	Tätning	5	
0140	7 97 45 322	1	1 Kit, water valve	Sats, värmekran	4	73) (9401035)
0160	7 94 59 751	1	1 Water valve assy	Värmekran kpl	4	74)
0162	8 00 97 750	4	4 Screw	Skruv	5	
0180	9 94 80 401	1	1 Shaft	Åxel	4	PART OF 9759751
0200	10 94 80 419	2	2 Rivet	Nit	5	PART OF 9759751
0220	11 79 72 227	1	1 O-ring	O-ring	2	
0240	12 94 79 221	1	1 O-ring	O-ring	2	(7972235)
0260	13 94 45 438	1	1 Insulation	Isolering	5	
0280	14 94 01 076	1	1 Seal, dash panel	Tätning, torped	5	
0290	15 94 41 288	4	4 Nut	Mutter	5	73)
0295	16 94 01 068	1	1 Clip	Clip	5	73)
0300	20		Water hose	Vattenslang	5	SEE GROUP 2, HOSES
0320	21 79 70 098	2	2 Hose clamp	Slangklämma	5	(7963556)
0340	22 93 30 838	1	1 Hose	Skavsdyd	4	
0360						

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details,	
glass, sealings	3-F16
Upholstery, interior	
equipment and	
touch-up paint	3-G24
Heating and	
ventilation system	3-J24
Bumpers	3-K16

71. Ch. 90801025512, -90802007593, -90806001922.
72. Ch. 90801025513, -90802007591, -90806001923.
73. Ch. 90801014998, -90802004753.
74. Ch. 90801015000, -90802004754.

1985

Heating and ventilation
Fan unit, air filter etc

Värme och ventilation
Fläktenhet, luftfilter
etc.

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R9354

8

169

Fig Pos	Part No Art nr	Quantity/ Antal	Description	Benämning	K/S SR	Notes Anmärkning
0020	1 94 00 623	1	1 Air intake	Luftintag	5	
0040	2 79 22 354	4	4 Screw	Skruv	5	
0070	3 94 28 909	4	4 Clip nut	Clipsmutter	3	
0080	4 94 44 525	1	1 Lock ring	Låsering	6	
0100	5 94 00 672	1	1 Housing assy	Hus kp	5	
0140	6 94 00 714	1	1 Bracket LH	Konsol V	6	
0160	7 94 17 886	1	1 Bracket RH	Konsol H	6	
0180	8 94 17 874	1	1 Plate LH	Plåt V	6	
0200	9 94 17 892	1	1 Plate RH	Plåt H	6	
0210	10 79 72 052	5	5 Rivet	Nit	5	
0240	11 94 17 916	1	1 Seal	Tätning	5	
0250	12 94 22 787	1	1 Valve disc	Spjällskiva	5	
0300	14 94 26 006	1	1 Plate	Plåt	6	
0320	15 79 72 046	2	2 Rivet	Nit	5	
0340	16 51 00 805	1	1 Bearing	Lagering	5	
0360	17 94 42 203	1	1 Clamp	Klemmer	5	
0380	18 94 17 040	1	1 Cover	Täcklock	5	
0400	19 94 01 287	1	1 Bracket	Konsol	6	
0420	20 94 38 219	2	2 Plug	Plugg	5	
0440	21 94 17 908	1	1 Valve flap	Spjällskiva	5	
0460	23 94 27 003	1	1 Seal	Tätning	5	
0470	24 54 82 415	1	1 Fan unit	Fläktmotor	4	(855C295, 8568024)
0520	25 85 38 272	1	1 Impeller	Fläkt hjul	5	
0540	26 80 73 512	4	4 Nut	Mutter	5	
0560	27 79 22 735	3	3 Screw	Skruv	5	
0580	28 72 28 657	3	3 Clip nut	Clipsmutter	3	
0600	29 85 69 070	1	1 Resistance	Motstånd	5	
0620	30 85 57 001	1	1 Tube	Slang	6	
0630	31 94 18 070	1	1 Seal	Tätning	5	
0640	32	5	5 Vacuum servo	Vakuum servo	5	SEE PAGE 8-175, 3-K08
0700	38 94 41 238	5	5 Clip nut	Clipsmutter	3	
0780	39 94 79 981	1	1 Air filter assy	Luftfilter	2	(2403486)
0820	40 94 01 126	1	1 Filter media	Filtermaterial	2	
0840	41 94 18 054	1	1 Seal	Tätning	5	
0860	42 54 01 142	1	1 Seal	Tätning	4	
0900	43 94 18 062	1	1 Cover	Täcklock	5	
0920	45 80 59 578	4	4 Screw	Skruv	5	(34)
0940	46 79 22 396	4	4 Screw	Skruv	5	(35) (7922370)
0960	48 94 40 710	1	4 Clip nut	Clipsmutter	3	(34)
0980	49 94 51 014	4	4 Clip	Clip	5	(35)
0990	47 94 01 159	1	1 Seal	Tätning	5	
1000	49 94 79 676	1	1 Insulation	Isolering	6	(9435918)
1020	49 94 01 187	1	1 Drain tube	Dräneringsrör	5	
1040	50 79 33 482	1	1 Clip nut	Clipsmutter	3	
1060	51 80 53 375	3	3 Screw	Skruv	5	
1080	52 94 32 954	1	1 Bracket	Konsol	5	
1100	53 02 08 009	1	1 Rubber cushion	Gummikudde	5	
1120	54 79 61 709	2	2 Blind rivet	Blindnit	5	

R 9354-900

34. Ch. 90791002326.
35. Ch. 90791002327.

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system	
	Instruments	2-F02
4	Transmissi...	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	1-B02
7	Suspension, V/hwheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

1830

Heating and ventilation
Draft channels,
controls etc. Part 1

Värme och ventilation
Fördelningskanaler,
reglage etc. Del 1

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Side

1987-10


R9355

8

171

Fig. Pos.	Part No Art nr	Quantity/Amount	Description	Benämning	K/S S/R	Notes Anmärkning
0220	1 94 45 370	1	1 Heater channel	Värmekanal	6	-1979
040	1 94 59 876	1	1 Heater channel	Värmekanal	6	1980-
0080	2 94 01 286	1	1 Channel, front	Golvkanal främre	6	
0080	3 94 18 088	1	1 Seal	Tätning	5	
0100	4 79 22 362	2	2 Screw	Skruv	5	
0120	5 94 36 965	2	2 Bushing	Bussning	5	
0140	6 80 59 578	3	3 Screw	Skruv	5	
0160	7 80 29 951	3	3 Washer	Bricka	5	
0180	8 79 33 682	2	2 Clip nut	Clipsmutter	3	
0200	9 85 85 176	1	1 Bracket	Konsol	6	(8422213)
0220	10 79 22 347	2	2 Screw	Skruv	5	
0240	11 94 00 946	1	1 Lower part	Underdel	6	
0260	12 94 40 405	1	1 Seal	Tätning	5	
0280	13 79 22 354	2	2 Screw	Skruv	5	(29)
0300	14 80 29 951	5	5 Washer	Bricka	5	(8029944)
0320	15 79 22 370	7	7 Screw	Skruv	5	
0340	16 94 61 070	2	2 Clip	Clip	5	(29)
0360	18 94 45 131	2	2 Connection	Anslutning	5	
0400	20 94 00 961	1	1 Valve disc	Spjällskiva	5	
0440	21 94 00 979	1	1 Seal	Tätning	5	
0480	22 94 45 800	1	1 Seal	Tätning	5	
0500	22 94 69 164	1	1 Seal	Tätning	5	(72)
0520	23 94 45 388	2	2 Guide edge	Ledskena	6	(71)
0540	23 94 69 156	2	2 Guide edge	Ledskena	6	(72)
0560	24 79 70 411	3	3 Nut	Mutter	5	
0580	25 94 18 021	1	1 Seal	Tätning	6	
0600	26 94 18 013	1	1 Valve disc	Spjällskiva	5	
0620	27 94 00 987	1	1 Shaft	Åxel	6	
0640	28 94 17 981	1	1 Washer	Bricka	5	
0660	29		1 Vacuum servo	Vakuumservo	5	
0720	35 86 02 542	1	1 Spacer	Mellanlägg	5	(90)

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02
8 GROUP INDEX		
	Main body	3-D10
	Instrument panel	3-E06
	Hood, front, fenders	3-E14
	Doors, trunk lid	3-E20
	External details,	
	glass, sealings	3-F16
	Upholstery, interior	
	equipment and	
	touch-up paint	3-G24
	Heating and	
	ventilation system	3-J24
	Bumpers	3-K18

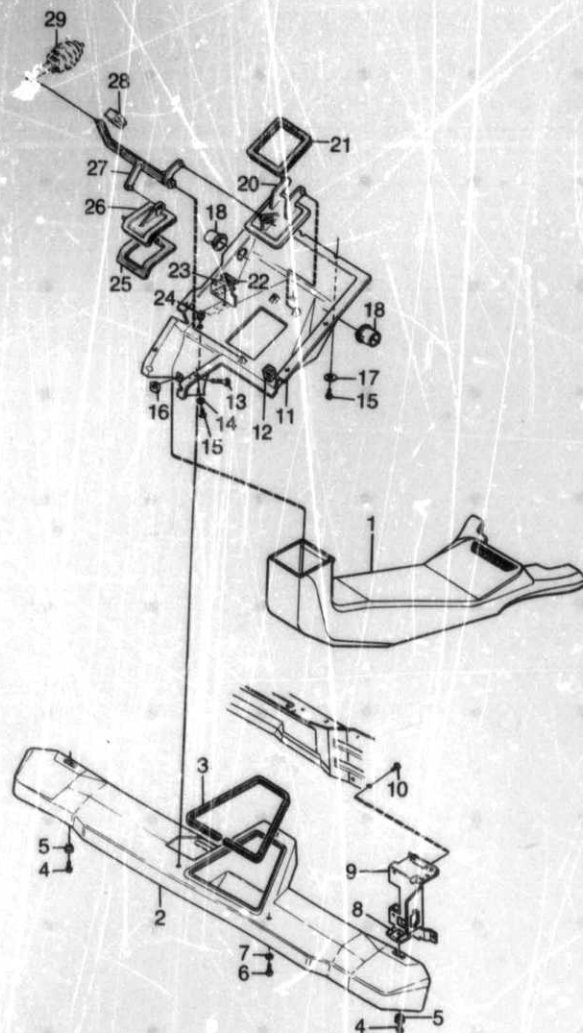

29 Ch. 90791021224 - 90792001202 - 90796013574 -
71 Ch. -90801025512 - 90802007583 - 90806001822 -
72 Ch. 90801025513 - 90802007594 - 90806001823 -
90 Ch. -90806002431 -

R 9355-900

1800

Heating and ventilation
Draft channels,
controls etc. Part 2

Värme och ventilation
Fördelningskanaler,
reglage etc. Del 2

Date
Datum

Illustration
Bild nr

Group
Grupp


Page
Sida

1987-10 R9356

8

173

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR /L	Notes Anmärkning
		900	US				
0010	1	94 18 139	1	1 Valve house LH	Spjällhus V	6	
0020	2	94 18 146	1	1 Valve house RH	Spjällhus H	6	
0030	3	94 01 712	2	2 Seal	Tätning	5	
0040	4	94 23 112	1	1 Shaft	Axel	5	
0050	5	79 22 420	4	4 Screw	Skruv	5	
0060	6	94 01 332	1	1 Hose, defr LH	Slang defr V	6	
0070	7	94 01 340	1	1 Hose, defr RH	Slang defr H	6	
0080	8	94 26 792	1	1 Connection LH	Anslutning V	6	
0090	8	94 45 776	1	1 Connection LH RHD	Anslutning V RHD	6	
0100	9	94 26 784	1	1 Connection RH	Anslutning H	6	
0110	9	94 26 792	1	1 Connection RH RHD	Anslutning H RHD	6	
0120	10	80 29 951	4	4 Washer	Bricka	5	
0130	11	94 18 344	1	1 Air channel LH	Luftkanal V	5	
0140	11	94 20 399	1	1 Air channel LH RHD	Luftkanal V RHD	5	
0150	12	94 18 450	1	1 Air channel RH	Luftkanal H	5	
0160	12	94 20 464	1	1 Air channel RH RHD	Luftkanal H RHD	5	
0170	13	94 01 373	1	1 Seal LH	Tätning V	5	
0180	13	94 20 407	1	1 Seal LH RHD	Tätning V RHD	5	
0190	14	94 18 468	1	1 Seal RH	Tätning H	5	
0200	14	94 20 472	1	1 Seal RH RHD	Tätning H RHD	5	
0210	14A	94 26 883	1	1 Seal LH	Tätning V	5	
0220	14B	94 26 891	1	1 Seal RH	Tätning H	5	
0230	14C	94 42 211	1	1 Seal LH	Tätning V	5	
0240	14D	94 42 229	1	1 Seal RH	Tätning H	5	
0250	15	94 42 237	2	2 Seal	Tätning	5	
0260	16	80 29 951	6	6 Washer	Bricka	5	
0270	17	94 41 213	6	6 Screw	Skruv	5	
0280	18	94 01 423	1	1 Connection	Anslutning	6	
0290	18	94 44 670	1	1 Connection RHD	Anslutning RHD	6	
0300	19	94 01 431	1	1 Seal, centre	Tätning, mittre	5	
0310	19A	94 18 076	1	1 Seal	Tätning	5	
0320	20	94 01 449	1	1 Bracket	Konsol	5	
0330	21	79 72 045	5	5 Rivet	Nit	5	
0340	21A	94 41 247	1	1 Guide edge	Ledskena	6	LHD ONLY
0350	22	79 22 420	2	2 Screw	Skruv	5	
0360	23	94 22 965	1	1 Control shaft	Reglageaxel	5	
0370	23	94 44 738	1	1 Control shaft RHD	Reglageaxel RHD	5	
0380	24	94 73 919	1	1 Valve disc LH	Spjällskiva V	5	(9401639)
0410	25	94 73 901	1	1 Valve disc RH	Spjällskiva H	5	(9401746)
0420	26	94 73 943	2	2 Spacer	Distans	5	(91)
0430	27	94 01 647	1	1 Seal LH	Tätning V	5	(90)
0440	28	94 01 753	1	1 Seal RH	Tätning H	5	(90)
0450	29	94 26 214	1	1 Bearing LH	Lägring V	5	
0460	30	94 26 206	1	1 Bearing RH	Lägring H	5	
0470	31	80 98 030	2	2 Screw	Skruv	5	
0480	32	94 26 693	1	1 Cover LH	Lock V	5	
0490	33	94 26 701	1	1 Cover RH	Lock H	5	
0500	34	94 26 727	2	2 Seal	Tätning	5	
0510	35	92 88 170	1	1 Evacuatingbox assy LH	Evakueringslåda kpl V	5	(8461873)
0520	35	92 88 168	1	1 Evacuatingbox assy RH	Evakueringslåda kpl H	5	(8461881)
0530	36	84 60 974	2	2 Seal	Tätning	5	
0540	37	94 22 833	2	2 Seal plug	Tätningsslugg	5	(30)
0550	38	94 79 160	2	2 Channel	Kanal	5	(9418195)
0560	39	94 48 986	2	2 Clip	Clip	5	

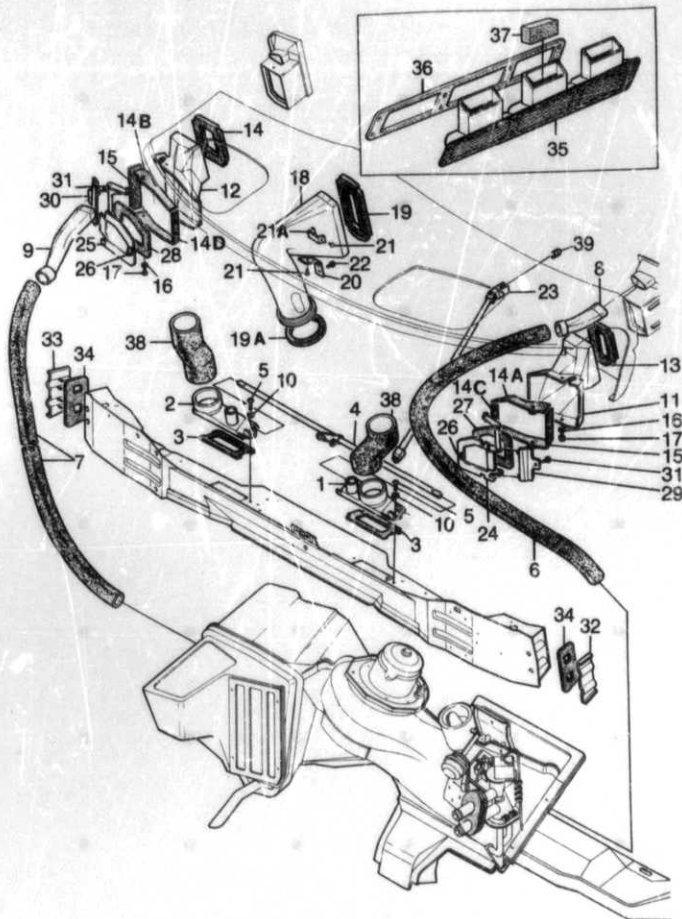

R 9356-900

30. Ch.-90791020924 -90792001155 -90796003731.
90. Ch.-90806002431.
91. Ch.90806002432-

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

1910

Heating and ventilation
Vacuum system


Värme och ventilation
Vacuumsystem

Date
Datum 1987-10

Illustration
Bild nr R9357

Group
Grupp 8

Page
Sida 175

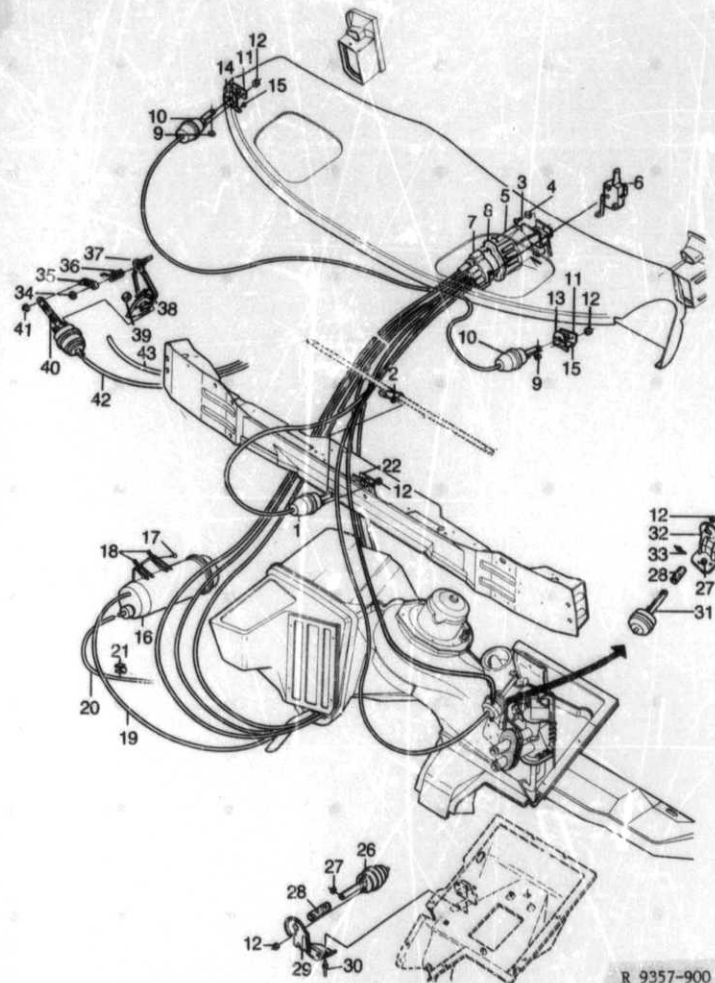

R 9357-900

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0010	1 94 20 290	1		1 Vacuum servo	Vakuumservo	5	
0020	2 94 41 221	1		1 Clamp	Klammer	5	
0030	3 79 71 393	1		1 Screw	Skruv	5	
0040	4 79 18 489	1		1 Washer	Bricka	5	
0050	5 94 19 185	1		1 Selector assy	Selektor kpl	5	
0060	6 85 68 032	2		2 Micro switch	Mikrobrytare	3	(8563745)
0070	7 94 26 198	1		1 Vacuum cables	Vakuumbakblage	5	
0080	8 94 44 605	1		1 Washer	Bricka	5	
0090	9 94 41 221	2		2 Clamp	Klammer	5	
0100	10 94 30 968	2		2 Vacuum servo	Vakuumservo	5	
0110	11 94 50 487	2		2 Protective sleeve	Skydd	5	(9444811)
0120	12 79 40 406	6		6 Nut	Mutter	5	
0130	13 94 26 651	1		1 Bracket LH	Konsol V	5	
0140	14 94 26 644	1		1 Bracket RH	Konsol H	5	
0150	15 79 61 709	4		4 Rivet	Nit	5	
0160	16 94 37 906	1		1 Vacuum tank	Vakuumtank	5	
0170	17 79 22 891	2		2 Screw	Skruv	5	
0180	18 94 37 955	2		2 Clip nut	Clipsmutter	3	
0190	19 94 20 092	1		1 Vacuum hose	Vakuumslang	4	
0200	20 93 25 531	1		1 Vacuum hose	Vakuumslang	4	
0210	21 93 18 205	1		1 Vacuum hose	Vakuumslang	4	
0220	22 79 33 443	4		4 Clamp	Klammer	5	
0230	23 94 73 828	1		1 Protective cover	Skyddsskäpa	5	(9450487)
0240	24 94 22 940	1		1 Vacuum servo	Vakuumservo	5	
0250	25 94 41 221	2		2 Clamp	Klammer	5	
0260	26 94 44 811	2		2 Protective sleeve	Skydd	5	
0270	27 94 17 973	1		1 Bracket	Konsol	5	
0280	28 79 72 326	2		2 Rivet	Nit	5	
0290	29 94 17 957	1		1 Vacuum servo	Vakuumservo	5	
0300	30 94 17 924	1		1 Bracket	Konsol	5	
0310	31 79 72 046	2		2 Rivet	Nit	5	
0320	32 79 65 809	1		1 Clip	Clip	5	AC
0330	33 94 00 896	1		1 Lever	Hävarm	5	AC
0340	34 94 20 274	1		1 Spring	Fjäder	5	AC
0350	35 94 20 282	1		1 Bracket	Konsol	5	AC
0360	36 79 72 326	3		3 Rivet	Nit	5	AC
0370	37 79 40 398	1		2 Nut	Mutter	5	AC
0380	38 94 20 266	2		1 Vacuum servo	Vakuumservo	5	AC
0390	39 94 41 221	1		1 Clip	Clip	5	AC
0400	40 94 20 308	1		1 Vacuum hose	Vakuumslang	4	AC
0410	41 94 40 447	1		1 Vacuum hose	Vakuumslang	4	AC

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system,	
	Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-B02
7	Suspension,	
	Wheels	3-C02
8	Body	3-D02
9	Accessories,	
	Labels	3-L02
10	Numerical	
	register	4-A02
9 GROUP INDEX		
	Main body	3-D10
	Instrument panel	3-E06
	Hood, front, fenders	3-E14
	Doors, trunk lid	3-E20
	External details,	
	glass, sealings	3-F16
	Upholstery, interior	
	equipment and	
	touch-up print	3-G24
	Heating and	
	ventilation system	3-J24
	Bumpers	3-K18

1980

Heating and ventilation
Air conditioning (AC)
Vir system, see note 69)

Värme och ventilation
Luftkonditionering (AC)
Vir-system, se fotnot 69)

Date
Datum

Illustration
Bild nr

Group
Grupp


Page
Sida

1987-10

R9358

8

177

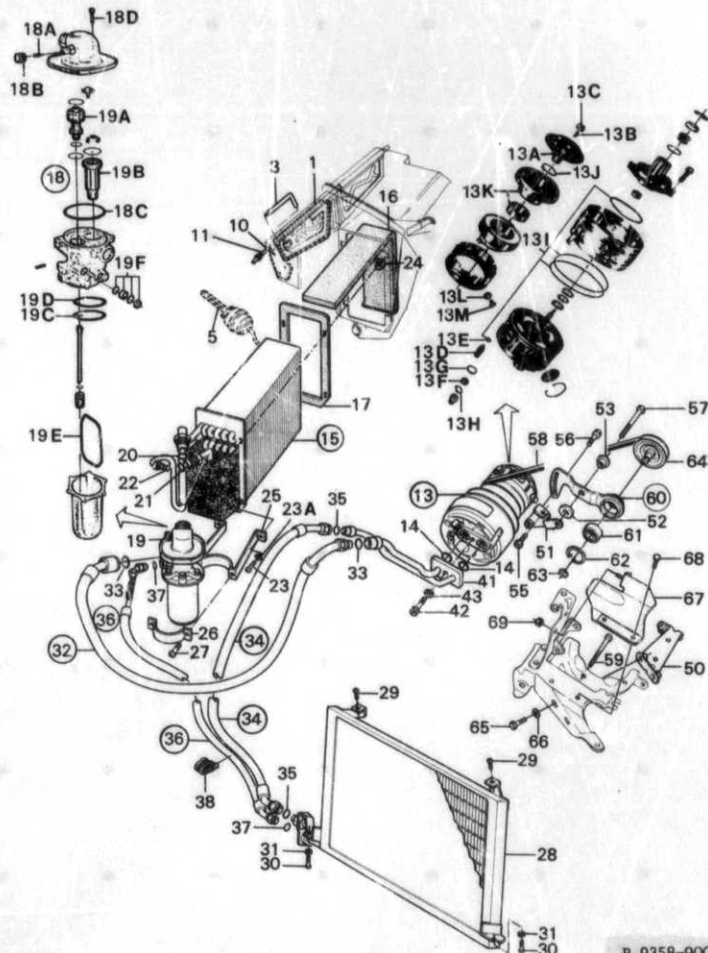

R 9358-900


Fig. Pos.	Part No Art nr	Quantity/Antal	Description	Benämning	K/S SR	Notes Anmärkning
		900	US			
0620	1	94 20 225	1	Recirculation flap	Recirkulationsspjäll	5 (69)
0660	3	94 20 241	1	Shaft	Axel	6
0200	10	94 38 250	1	Plate	Mothållsplåt	6
0220	11	94 22 403	1	Bearing	Lagring	6
0280	13	94 78 601	1	Compressor assy	Kompressor kpl	5 (9422857) USE TOGETHER WITH 8098261
0280	13A	94 73 159	1	Clutch drive	Koppling	5
0320	13B	94 78 007	1	Key, clutch hub	Kil	5
0340	13C	94 78 015	1	Nut, shaft	Mutter	5
0380	13D	94 79 023	1	Valve, press relief	Ventil	5
0380	13E	94 79 031	1	O-ring	O-ring	2
0400	13F	94 79 049	1	Switch, super heat	Tryckkontakt	5
0420	13G	94 62 056	1	O-ring	O-ring	5
0435	13H	94 62 064	1	Lock ring	Spärring	5 (101) SUPERSEDED BY 9479510
0440	13I	94 79 056	1	Kit, o-ring	O-ringsats	2
0445	13J	94 79 312	1	Lock ring	Låsring	5
0480	13K	94 79 304	1	Rotor	Rotor	5
0500	13L	94 79 411	1	Lock washer	Låsbricka	5
0520	13M	94 79 403	1	Screw	Skruv	5
0560	14	79 72 318	2	O-ring	O-ring	2
0590	15	94 01 802	1	Evaporator assy	Förångare kpl	5
0600	16	94 01 828	2	Seal	Tätning	4
0620	17	94 01 142	1	Seal	Tätning	4
0640	18	94 01 910	1	VIR-UNIT assy	VIR-ENHET kpl	4
0660	18A	94 79 064	1	Valve core	Service ventil	6
0680	18B	94 79 072	1	Cap. valve	Förlutningsmutter	6
0700	19C	94 79 080	1	O-ring	O-ring	2
0720	18C	94 79 098	1	Screw	Skruv	5
0740	19	94 79 106	1	Screw	Skruv	5
0760	19A	94 79 114	1	Expansion valve	Expansionsventil	5
0780	19B	94 79 122	1	Valve, POA capsule kit	Sugtrycksregulator	5
0800	19C	94 79 130	1	O-ring, lower	O-ring, undre	2
0820	19D	94 79 148	1	O-ring, upper	O-ring, övre	2
0840	19E	94 79 155	1	Drier kit	Torkmedelsats	5
0860	19F	94 79 163	1	Sight glass	Siktglas	6
0880	20	79 72 102	1	O-ring	O-ring	2
0900	21	79 72 094	1	O-ring	O-ring	2
0920	22	79 72 078	1	O-ring	O-ring	2
0940	23	80 59 578	4	Screw	Skruv	5 (34)
0960	23	79 22 370	4	Screw	Skruv	5 (35)
1000	23A	80 29 951	2	Washer	Bricka	5
1020	24	94 40 710	4	Clip nut	Clipsmutter	5 (34)
1040	24	94 51 014	4	Clip	Clip	5 (35)
1060	25	94 22 775	1	Bracket	Konsol	6
1080	26	94 02 157	1	Clamp	Klamma	5
1100	27	80 59 578	2	Screw	Skruv	5
1120	28	94 01 951	1	Condenser	Kondensor	5
1140	29	80 59 578	2	Screw	Skruv	5
1160	30	79 22 420	2	Screw	Skruv	5
1180	31	80 29 951	2	Washer	Bricka	5
1200	32	94 01 977	1	Hose VIR - compressor assy	Slang, vir - kompres-sor kpl	5
1220	33	79 72 102	2	O-ring	O-ring	2
1240	34	94 02 017	1	Hose, compressor-condenser, assy	Slang, kompressor-kondensor, kpl	5
1260	35	79 72 094	2	O-ring	O-ring	2

34. Ch. 90791002326.
35. Ch. 90791002327.
69. Ch. 90801013494.
101. Not as separate part

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K16

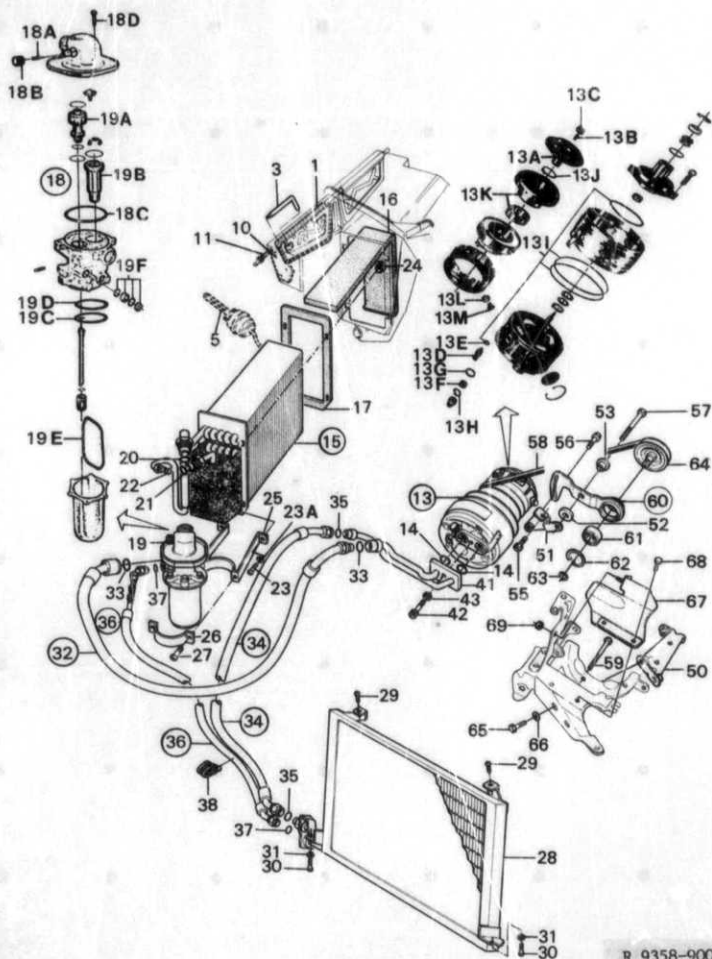

R 9358-900

SAAB
genuine parts
original reservdelar

3-K12

SAAB 900
M79-80

MASTER INDEX

1950

Heating and ventilation
Air conditioning (AC)
Vir system, see note 69)

Värme och ventilation
Luftkonditionering (AC)
Vir-system, se fotnot 69)

Date
Datum

Illustration
Bild nr


Group
Grupp

Page
Sida

8 **179**

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
1320	36	94 02 074	1	1 Hose condenser-VIR	Slang, kondensor-VIR	5	
1340				Assy	Kpl	5	
1360	37	79 72 086	2	2 O-ring	O-ring	2	
1380	38	94 31 024	1	1 Clamp	Klamma	5	
1440	41	94 35 389	1	1 Connection, com-pressor	Anslutning, kom-pressor	5	
1460				1 Screw	Skruv	5	FOR COMPRESSOR MARKED 1131001
1480	42	79 60 669	1	1 Screw	Skruv	5	FOR COMPRESSOR MARKED 1131223
1500				1 Screw	Skruv	5	FOR COMPRESSOR MARKED 1131223
1520	42	80 98 261	1	1 Screw	Skruv	5	FOR COMPRESSOR 9479001
1540				1 Screw	Skruv	5	
1550	42	80 98 261	1	1 Washer	Bricka	5	
1560	43	79 15 697	1	1 Stay	Stag	5	
1580	50	93 16 480	1	1 Bracket	Fäste	5	
1600	51	83 34 302	1	1 Washer	Bricka	5	
1620	52	93 03 983	1	1 Spacer	Distans	5	
1640	53	93 03 975	1	1 Screw	Skruv	5	
1660	55	80 83 123	1	1 Screw	Skruv	5	
1680	56	79 67 938	1	1 Screw	Skruv	5	
1700	57	80 84 022	1	1 Fan belt	Kilrem	4	
1720	58	83 39 939	1	3 Screw	Skruv	5	-1979
1740	59	80 84 048	3	3 Screw	Skruv	5	1980-
1750	59	79 95 569	3	3 Tension arm assy	Spännarm kpl	5	
1780	60	93 16 183	1	1 Bearing	Lager	6	
1800	61	93 17 215	1	1 Retaining ring	Spärring	5	
1820	62	79 14 922	1	1 Retaining ring	Spärring	5	
1840	63	79 15 101	1	1 Belt pulley	Remskiva	6	
1860	64	93 00 724	1	2 Screw	Skruv	5	
1880	65	80 82 935	2	2 Washer	Bricka	5	
1900	66	80 29 985	2	1 Cover, compressor	Skydd, kompressor	6	
1920	67	53 02 969	1	2 Screw	Skruv	5	
1940	68	80 19 829	2	3 Nut	Mutter	5	
1960	69	80 29 955	3			5	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02
8 GROUP INDEX		
	Main body	3-D10
	Instrument panel	3-E05
	Hood, front, fenders	3-E14
	Doors, trunk lid	3-E20
	External details, glass, sealings	3-F16
	Upholstery, interior equipment and touch-up paint	3-G24
	Heating and ventilation system	3-J24
	Bumpers	3-K18

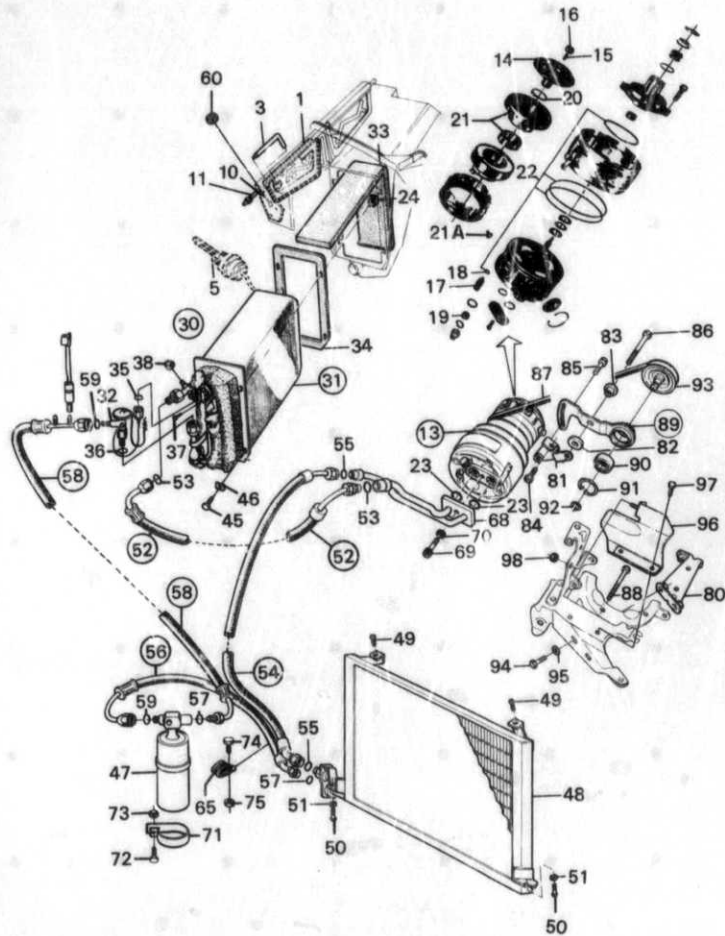

R 9359-900

SAAB
genuine parts
original reservdelar

3-K14

SAAB 900
M79-80

MASTER INDEX

1975

Heating and ventilation
Air conditionin.g.cycling
clutch-system, note 70)

Värme och ventilation
Luftkondition. cycling
clutch-system, se not 70)

Date
Datum

Illustration
Bild nr

Group
Grupp

Page
Sida

1987-10

R9359

8

181

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
0020	1	94 20 225	1	1 Recirculation flap	Recirkulationsspjäll	5	
0060	3	94 20 241	1	1 Shaft	Axel	6	
0200	10	94 38 250	1	1 Plate	Mothållsplåt	6	
0220	11	94 22 403	1	1 Bearing	Lagring	5	
0260	13	94 61 880	1	1 Compressor assy	Kompressor kpl	5	MAILED 113/1331
0280	14	94 73 158	1	1 Clutch drive	Koppling	6	
0300	15	94 79 007	1	1 Key, clutch hub	Kil	5	
0320	16	94 79 015	1	1 Nut, shaft	Mutter	5	
0340	17	94 79 023	1	1 Valve, press relief	Ventil	5	
0360	18	94 79 031	1	1 O-ring	O-ring	2	
0380	19	94 79 510	1	1 Switch, super heat	Tryckkontakt	5	
0400	20	94 79 312	1	1 Lock ring	Låsring	5	
0420	21	94 79 304	1	1 Rotor	Rotor	5	
0425	21A	94 79 403	1	1 Screw	Skruv	5	
0440	22	94 79 056	1	1 Kit, o-ring	O-ringsats	5	
0460	23	79 72 316	2	1 O-ring	O-ring	2	
0480	30	94 51 915	1	1 Evaporator with exp. valve assy.	Förångare med exp.ventil kpl.	5	
0500	31	94 51 923	1	1 Evaporator	Förångare	5	
0520	32	94 51 899	1	1 Expansion valve	Expansionsventil	5	
0560	33	94 01 928	1	1 Seal	Tätning	4	
0580	34	94 01 142	1	1 Seal	Tätning	4	
0600	35	79 72 078	1	1 O-ring	O-ring	2	
0620	36	79 72 094	1	1 O-ring	O-ring	2	
0640	37	79 61 949	1	1 Screw	Skruv	5	
0660	38	94 45 743	1	1 Brass cap	Mässingkapsel	5	
0680	45	79 22 461	4	4 Screw	Skruv	5	
0700	46	94 05 600	4	4 Clip	Clip	3	
0720	47	94 51 881	1	1 Drier reciever	Freonbehållare	4	
0740	48	94 01 951	1	1 Condenser	Kondensor	5	
0760	49	80 59 576	2	2 Screw	Skruv	5	
0780	50	79 22 420	2	2 Screw	Skruv	5	
0800	51	80 23 951	2	2 Washer	Bricka	5	
0820	52	94 51 808	1	1 Hose, exp. valve - compressor assy.	Slang, exp.ventil - kompressor kpl.	5	
0840	53	79 72 482	2	2 O-ring	O-ring	2	
0860	54	94 02 017	1	1 Hose, compressor - condenser, assy	Slang, kompressor - kondensor, kpl	5	
0900	55	79 72 094	2	2 O-ring	O-ring	2	
0920	56	94 51 758	1	1 Hose, condenser - drier reciever, assy	Slang, kondensor - freonbehållare	5	
0940	57	79 72 086	2	2 O-ring	O-ring	2	
0960	58	94 51 774	1	1 Hose, drier reciever - exp. valve assy.	Slang, freonbehållare - exp.ventil kpl.	5	
1000	59	79 72 086	2	2 O-ring	O-ring	2	
1020	60	94 60 742	1	1 Protective cover	Skyddsbussning	5	
1040	61	94 64 736	1	1 Clamp	Klamme	5	
1060	62	94 51 840	1	1 Connection, compressor, com-	Anslutning, kompressor	5	
1080	63	80 98 261	1	1 Screw	Skruv	5	
1100	64	79 33 856	1	1 Washer	Bricka	5	
1120	65	94 61 088	1	1 Clamp	Klamme	5	
1140	66	80 82 943	1	1 Screw	Skruv	5	
1160	67	80 74 106	1	1 Nut	Mutter	5	
1180	68	80 82 919	1	1 Screw	Skruv	5	
1200	69	80 74 106	1	1 Nut	Mutter	5	
1220	70	83 16 480	1	1 Stay	Stag	5	
1240	71	83 34 302	1	1 Bracket	Fäste	5	
1260	72	93 03 983	1	1 Washer	Bricka	5	
1280	73	93 03 975	1	1 Spacer	Distans	5	
1300	74	80 83 123	1	1 Screw	Skruv	5	
1320	75	79 67 938	1	1 Screw	Skruv	5	

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	2-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

1975

Heating and ventilation
Air conditioning, cycling
clutch-system, note 70)

Värme och ventilation
Luftkondition, cycling
clutch-system, se not 70)

Date
Datum

Illustration
Bild nr

Group
Grupp


Page
Sida

1987-10 R9359

8

183

Fig. Pos.	Part No Art nr	Quantity/Åantal		Description	Benämning	K/S S/R	Notes Anmärkning
		900	US				
1440	86 80 84 022	1		1 Screw	Skruv	5	
1460	87 83 36 939	1		1 Fan belt	Kilrem	4	
1480	88 79 65 569	2		3 Screw	Skruv	5	
1500	89 93 16 183	1		1 Tension arm assy	Spännarm kpl	5	
1520	90 93 17 215	1		1 Bearing	Lager	6	
1540	91 79 14 322	1		1 Retaining ring	Spärring	5	
1560	92 79 15 101	1		1 Retaining ring	Spärring	5	
1580	93 83 00 724	1		1 Belt pulley	Remskiva	6	
1600	94 80 82 935	2		2 Screw	Skruv	5	
1620	95 80 29 935	2		2 Washer	Bricka	5	
1640	96 93 02 969	1		1 Cover, compressor	Skydd, kompressor	6	
1660	97 63 19 929	2		2 Screw	Skruv	5	
1680	98 80 29 555	3		3 Nut	Mutter	5	

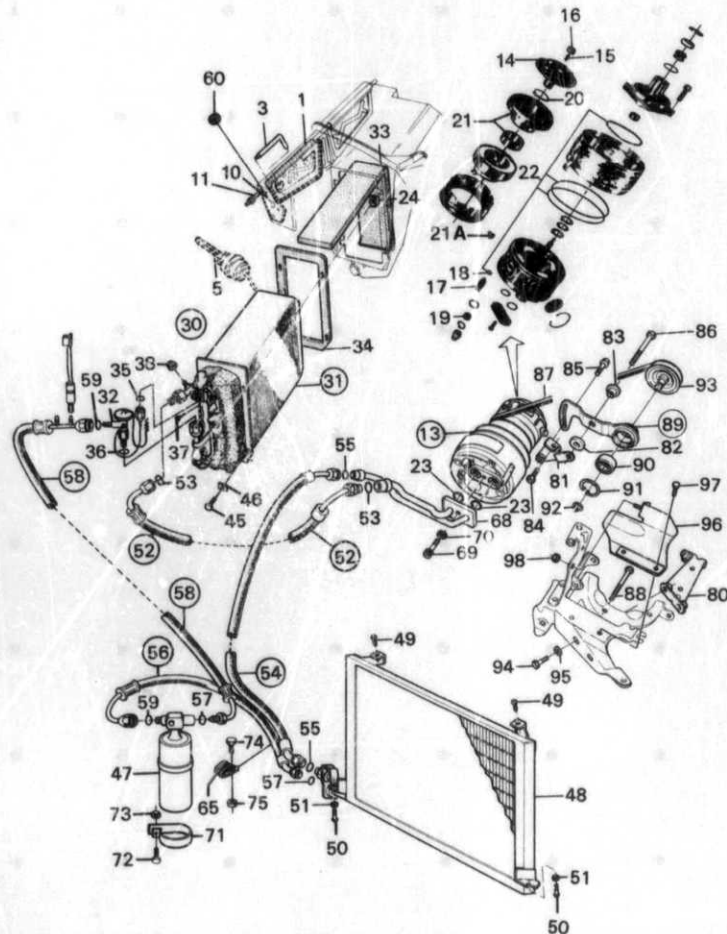

R 9359-900

70. Ch.90801013495-

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K16

2000

Bumpers
Bumper, front

Stötfångare
Stötfångare, främre

Date
Datum

Illustration
Bild nr

Group
Grupp


Page
Sida

1987-10 R5187

8

185

Fig. Pos.	Part No Art nr	Quantity/Antal		Description	Benämning	K/S SR / L	Notes Anmärkning
		900	US				
0020	1 82 58 461	1		1 Bumper, front assy	Stötfångare, främre	3	
0040				kpl			
0060	2 82 58 279	1		1 Bar	Skans	5	
0080	3 92 92 236	1		1 Cell section LH	Cellblock V	5	(8258311)
0100	4 92 92 244	1		1 Cell section RH	Cellblock H	5	(8258329)
0120	5 82 58 836	2		2 Cell section, center	Cellblock, mitre	5	
0140	6 82 58 295	2		2 Cell section	Cellblock	5	
0160	7 82 58 303	2		2 Cell section	Cellblock	5	
0180	8 82 58 378	2		2 Support bar	Stödskena	5	
0200	9 82 58 360	1		1 Support bar, center	Stödskena, mitre	5	
0220	10 82 58 386	1		1 Attachment bar center	Fästskena, mitre	6	
0240							
0260	11 82 58 394	1		1 Attachment bar, outer LH	Fästskena, yttre V	6	
0280							
0300	12 82 58 402	1		1 Attachment bar, outer RH	Fästskena, yttre H	6	
0320							
0340	13 92 37 165	1		1 Protective cover	Skyddshölje	3	(8249377) USE WITH 92 63 946
0360	14 78 22 420	23		23 Screw	Skruv	5	
0380	15 82 58 410	2		2 Decor strip	Dekorlist	3	FOR OLD DESIGNED BUMPER
0390	15 92 83 946	2		2 Decor strip	Dekorlist	3	USE WITH 92 37 165
0400	16 82 58 238	4		4 End part	Ändstycke	3	
0420	17 82 66 777	1		1 Bracket LH	Fäste V	5	
0440	17 82 66 785	1		1 Bracket RH	Fäste H	5	
0460	18 82 66 744	2		2 Bracket	Fäste	5	
0480	19 82 66 579	2		2 Spacer	Mellanlägg	5	
0500	20 78 67 953	8		8 Nut	Mutter	5	
0501	20A 82 78 517			1 Rubber buffer LH	Gummibuffert V	5	US
0502	20A 82 78 525			1 Rubber buffer RH	Gummibuffert H	5	US
0510	20B 82 58 352	2		2 Nut plate	Mutterplatta	5	
0520	21 82 78 020	2		2 Rubber buffer	Gummibuffert	5	(8268001)
0540	22 82 66 900	2		2 Screw	Skruv	5	
0560	23 82 58 428	1		1 Bracket, number plate	Hållare, nummerplåt	3	
0570	23A 79 70 403	2		2 Cage nut	Korgmutter	5	
0580	24 82 62 388			1 Bracket, number plate	Hållare, nummerplåt	3	US
0600	25 80 59 578	4		4 Screw	Skruv	5	

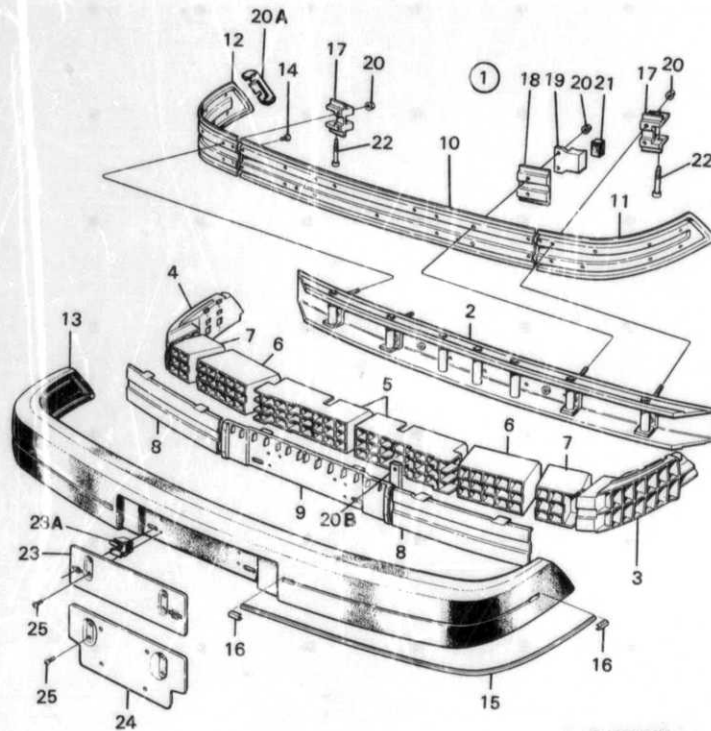

R 5187-900

0 General	1-A02
1 Tools	1-H02
2 Engine	2-A02
3 Electrical system, Instruments	2-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly, Steering	3-B02
7 Suspension, Wheels	3-C02
8 Body	3-D02
9 Accessories, Labels	3-L02
10 Numerical register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details, glass, sealings	3-F16
Upholstery, interior equipment and touch-up paint	3-G24
Heating and ventilation system	3-J24
Bumpers	3-K18

2050


Bumpers Bumper rear		Stötfångare Stötfångare, bakre		Date Datum	Illustration Bild nr	Group Grupp	Page Sida
				1987-10	R3893	8	187
Fig. Pos.	Part No Art nr	Quantity/Antal		Description		Benämning	K/S S/R Anmärkning
		900	US				
0020	1 92 84 753	1		1 Bumper, rear assy	Stötfångare, bakre	4 (8286686) USE WITH	
0040					lpl	8283953	
0060	2 82 83 352	1		1 Bar	Skena	5	
0080	3 92 24 676	6		6 Cell section, inner	Cellblock, inre	5 (8247695)	
0100	4 92 83 573	1		1 Cell section LH	Cellblock V	5 (8258196)	
0120	4 92 92 269	1		1 Cell section RH	Cellblock H	5 (8258204)	
0140	5 82 58 212	2		2 Support profile	Stödprofil	5	
0160	6 92 37 173	1		1 Protective cover	Skyddshölje	3 (8248031) USE WITH	
0170						82 83 963	
0180	7 82 47 553	1		1 Attachment bar, cent-	Fästskena, mittre	6	
0200				er			
0220	8 82 49 310	1		1 Attachment bar, outer	Fästskena, yttre V	6	
0240				LH			
0260	8 82 49 328	1		1 Attachment bar, outer	Fästskena, yttre H	6	
0280				RH			
0300	9 79 22 420	19		19 Screw	Skruv	5	
0320	10 82 58 220	1		1 Decor strip	Dekorlist	3 FOR OLD DESIGNED BUMPER	
0330	10 92 83 953	1		1 Decor strip	Dekorlist	3 USE WITH 92 37 173	
0340	11 82 58 238	2		2 End part	Ändstycke	3	
0360	12 92 88 515	2		2 Spacer	Mellanlägg	5 (8257487)	
0380	13 82 48 049	1		1 Rubber buffer	Gummibuffert	4	
0400	14 82 48 015	1		1 Bracket LH	Fäste V	4	
0420	14 82 48 023	1		1 Bracket RH	Fäste H	4	
0440	14 82 66 553	1		1 Bracket LH	Fäste V	4 US	
0460	14 82 66 561	1		1 Bracket RH	Fäste H	4 US	
0480	15 79 67 953	4		4 Nut	Mutter	5	
0500	16 82 51 944	2		2 Seal washer	Tättningsbricka	5	
0520	17 92 31 408	2		2 Seal washer	Tättningsbricka	5 (8276149)	
0540	18 79 67 979	6		6 Nut	Mutter	3	
0560	19 82 63 915			2 Damper, outer	Dämpare, yttre	5 US	
0580	20 80 73 959			4 Nut	Mutter	5 US	
0600	22 82 63 998			1 Spacer sleeve	Distanshylsa	5 US	
0620	23 82 63 949			1 Bracket, center	Fäste, mittre	4 US	
0640	24 82 68 088			2 Screw	Skruv	5 US	
0660	25 80 73 959			2 Nut	Mutter	5 US	
0680	26 82 66 793			1 Damper	Dämpare	6 US	
0700	27 82 63 956			1 Push rod	Stöstång	4 US	
0720	28 82 71 860			1 Clevis pin	Bult	5 US	
0740	29 82 71 852			1 Clevis pin	Bult	5 US	
0760	30 82 71 676			2 Clip	Clip	5 US	
0780	31 82 66 738			1 Seal	Tätning	5 US	
0800	32 82 66 579			1 Spacer	Mellanlägg	5 US	
0820	33 80 83 941			2 Screw	Skruv	5 US	
0840	34 82 58 832	1		Cover plate LH	Täckplåt V	3	
0860	34 82 58 840	1		Cover plate RH	Täckplåt H	3	
0880	35 82 58 253	2		Bracket	Fäste	5	
0900	36 79 22 206	4		Screw	Skruv	5	
0920	37 70 45 776	4		Washer	Bricka	5	
0940	38 92 30 905			1 Cover	Skydd	5 US (8267584)	
0960	39 82 68 021			1 Cover LH	Skydd V	5 US	
0980	39 82 68 039			1 Cover RH	Skydd H	5 US	
1000	40 82 67 981			1 Bracket LH	Fäste V	5 US	
1020	40 82 67 999			1 Bracket RH	Fäste H	5 US	
1040	41 82 68 005			1 Bracket LH	Fäste V	5 US	
1060	41 82 68 013			1 Bracket RH	Fäste H	5 US	
1080	42 79 69 314			6 Screw	Skruv	5 US (7822382)	
1100	43 70 88 073			2 Washer	Bricka	5 US	
1120	44 82 38 305			4 Clip	Clip	3 US	
1140	45 92 38 528	1		1 Seal washer	Tättningsbricka	5 (8277188)	

R 3893-900

0 General	1-A02
1 Tools	1-H02
2 Engine	2-A02
3 Electrical system,	
Instruments	2-F02
4 Transmission	2-J02
5 Brakes	3-A02
6 Front assembly,	
Steering	3-B02
7 Suspension,	
Wheels	3-C02
8 Body	3-D02
9 Accessories,	
Labels	3-L02
10 Numerical	
register	4-A02

8 GROUP INDEX

Main body	3-D10
Instrument panel	3-E06
Hood, front, fenders	3-E14
Doors, trunk lid	3-E20
External details,	
glass, sealings	3-F16
Upholstery, interior	
equipment and	
touch-up paint	3-G24
Heating and	
ventilation system	3-J24
Bumpers	3-K18

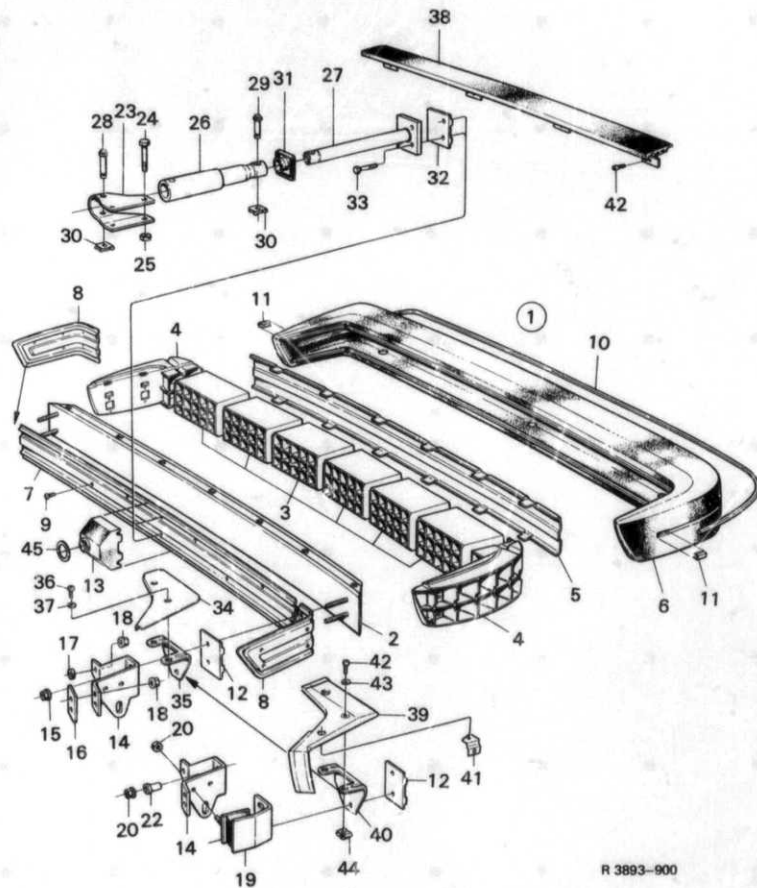



Tillbehör, Etiketter
Accessories, Labels
Zubehör, Etiketten
Accessoires, Etiquettes
Accesorios, Etiquetas

SAAB
genuine parts
original reserved

3-L02

SAAB 900
M79-80

MASTER INDEX

0050

Accessories

Tillbehör

Date
Datum

Group
Grupp

Page
Sida

1987-10

5

1

CONTENTS.

Tool kit 9:3 3-L04

INNEHÅLLSFÖRTECKNING.

Verktygssets 9:3 3-L04

INHALTSVERZEICHNIS.

Werkzeugesatz 9:3 3-L04

TABLE DES MATIERES.

Trouse à outils 9:3 3-L04

SUMARIO.

Bolsa de herramientas 9:3 3-L04

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

9 GROUP INDEX

Tool kit	3-L04
----------	-------


0100

Tool kit		Verktygssats			Date Datum	Illustration Bild nr	Group Grupp	Page Sida
					1987-10	R9315	9	3
Fig. Pos.	Part No Art nr	Quantity/Amtal		Description	Benämning		Notes Anmärkning	
		900	US					
0023	1 89 94 934	1		1 Tool kit with bag	Verktygssats med			
0040	2 73 05 931	1		1 Tool bag	Väska, verktyg			
0080	4 89 61 732	1		1 Polygrip pliers	Polygriptång			
0100	5 89 91 549	1		1 Screw driver, torx	Skruvmejsel, torx			
0120	5A 91 01 056	1		1 Adapter, cross-recess	Mejselapets, krysspår			
0140	6 70 37 492	1		1 Screw driver	Skruvmejsel			
0160	8 73 48 287	1		1 Sleeve wrench, wheel nut	Hylsnyckel, hjulmutter			
0200	9 89 31 196	1		1 Sleeve, spark plug	Hylsa, tändstift			
0220	10 89 17 494	1		1 Hexagon wrench, front seat	Sexkantnyckel, stol			
0240								
0260	11 89 61 740	1		1 Jack cpl with bag	Domkraft kpl med säck		4 (89 15942)	
0280	12 89 11 100	1		1 Bag	Säck			
0300	13 89 35 959	1		1 Crank	Vev			
0320	14 85 39 900	1		1 Warning triangle	Varningstriangel			

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

9 GROUP INDEX

Tool kit 3-L04

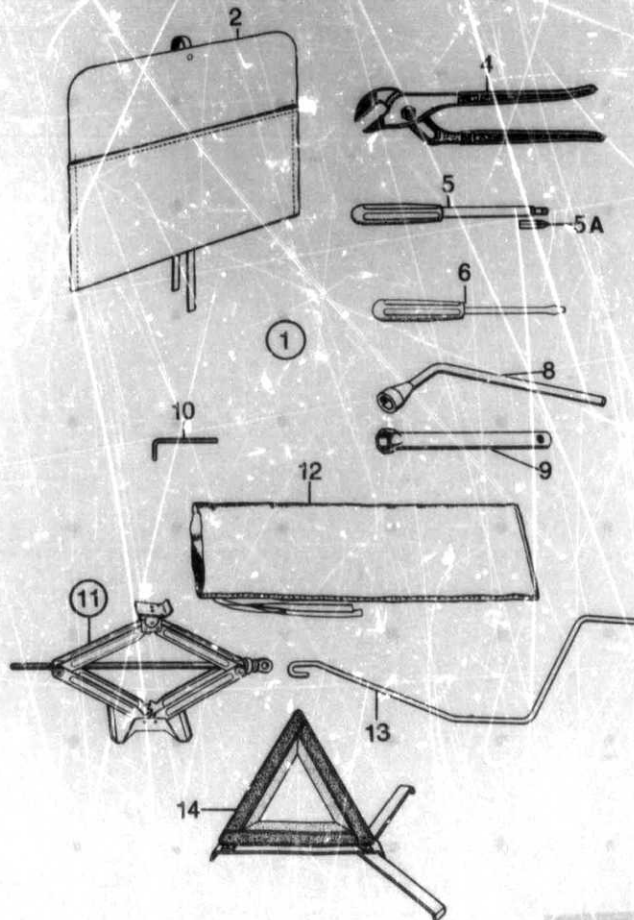

R 9315-900

10

Nummerregister
Numerical register
Nummern- Verzeichnis
Index numérique
Indice numérico

SAAB
genuine parts
original register

4-A02

SAAB 900
M79-80

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

NUMERICAL REGISTER				NUMMERREGISTER				Date Datum	Group Grupp				Page Sida						
								1987-10				10A				1			
Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord				
13 24 144	2	75	2-D04	70 71 061	6	3	3-B04	71 55 237	3	79	2-I08	73 40 839	8	77	3-G06				
13 94 527	0	5	1-F06	70 71 079	6	3	3-B04	71 55 500	0	28	1-G05	73 42 892	3	59	2-H12				
13 94 527	2	75	2-D04	70 71 087	6	3	3-B04	71 55 500	0	29	1-G06	73 42 892	3	67	2-H20				
17 54 506	2	27	2-B04	70 71 939	6	3	3-B04	71 55 500	2	91	2-D20	73 42 900	3	59	2-H12				
19 12 070	2	79	2-D06	70 84 197	3	29	2-G06	71 55 633	3	77	2-I06	73 42 900	3	67	2-H20				
19 12 104	2	79	2-D06	70 84 197	3	31	2-G08	71 55 633	3	83	2-I12	73 44 476	8	77	3-G06				
22 46 718	2	13	2-A14	70 88 073	3	29	2-G06	71 55 658	3	73	2-I02	73 46 232	8	119	3-H24				
22 46 718	2	19	2-A20	70 88 073	8	49	3-F02	71 56 658	3	79	2-I08	73 48 287	9	3	3-L04				
23 03 279	0	6	1-F07	70 88 073	8	59	3-F12	71 55 716	3	73	2-I02	73 50 424	8	147	3-J04				
23 03 279	2	27	2-B04	70 88 073	8	79	3-G08	71 55 716	3	79	2-I08	73 50 424	8	151	3-J08				
23 79 766	2	13	2-A14	70 88 073	8	83	3-G12	71 55 724	3	57	2-H10	73 50 432	8	121	3-I02				
23 79 766	2	27	2-B04	70 88 073	8	119	3-H24	71 56 409	0	28	1-G05	73 59 003	8	135	3-I16				
26 02 936	2	109	2-E14	70 88 073	8	187	3-K20	71 56 409	3	41	2-G18	73 59 300	8	55	3-F08				
27 39 563	2	107	2-E12	71 06 341	0	22	1-F23	71 56 409	3	53	2-H06	73 59 300	8	131	3-I12				
69 10 606	8	21	3-D22	71 13 970	3	7	2-F08	71 62 308	5	11	3-A12	73 59 300	8	137	3-I18				
69 10 814	8	21	3-D22	71 16 452	3	85	2-I14	71 62 308	8	11	3-D12	73 77 344	8	107	3-H12				
69 11 671	8	89	3-G18	71 16 452	8	11	3-D12	71 62 308	8	55	3-F08	73 81 924	8	153	3-J10				
69 11 689	8	91	3-G20	71 17 880	3	73	2-I02	71 63 066	5	13	3-A14	73 85 339	8	147	3-J04				
69 11 697	8	91	3-G20	71 17 880	3	79	2-I08	71 63 066	8	11	3-D12	73 85 339	8	151	3-J08				
69 11 705	8	91	3-G20	71 32 616	3	45	2-G22	71 63 066	8	55	3-F08	73 88 218	8	148	3-J06				
69 11 820	8	85	3-G14	71 52 796	8	53	3-F06	71 63 074	8	11	3-D12	73 92 772	3	55	2-H08				
69 11 820	8	88	3-G18	71 53 695	8	51	3-F04	71 63 603	0	3	3-B04	75 00 738	2	21	2-A22				
69 12 364	8	19	3-D20	71 54 719	3	27	2-G04	71 67 117	0	12	1-F13	75 00 846	2	106	2-E10				
69 12 380	8	19	3-D20	71 54 719	3	29	2-G06	71 67 117	4	37	2-K14	75 01 216	3	17	2-F18				
69 12 570	8	43	3-E20	71 54 727	3	27	2-G04	71 71 846	3	45	2-G22	75 01 216	3	19	2-F20				
69 12 570	8	47	3-E24	71 54 727	3	29	2-G06	71 75 433	6	3	3-B04	75 02 297	0	10	1-F11				
69 12 586	0	43	3-E20	71 54 727	3	31	2-G06	71 75 433	6	3	3-B04	75 02 258	4	13	2-J14				
69 12 586	8	47	3-E24	71 55 013	3	69	2-H12	71 80 607	5	13	3-A14	75 02 258	4	17	2-H18				
69 12 596	8	43	3-E20	71 55 013	3	67	2-H20	71 83 965	2	103	2-E08	75 02 258	4	43	2-K20				
69 12 596	8	47	3-E24	71 55 013	3	73	2-I02	71 83 973	2	103	2-E08	75 11 371	4	49	2-L02				
69 12 604	8	43	3-E20	71 55 013	3	79	2-I08	71 84 443	6	3	3-B04	75 11 413	2	55	2-C08				
69 12 604	8	47	3-E24	71 55 021	3	59	2-H12	71 96 710	3	73	2-I02	75 11 421	2	55	2-C08				
69 25 853	8	47	3-E24	71 55 021	3	67	2-H20	71 96 710	3	79	2-I08	75 11 488	2	55	2-C08				
69 25 981	8	47	3-E24	71 55 096	0	26	1-G03	72 46 622	3	31	2-G08	75 12 338	2	43	2-B20				
69 26 901	8	27	3-E04	71 55 096	0	28	1-G05	72 86 271	3	43	2-G20	75 12 338	2	47	2-B24				
69 27 032	8	55	3-F08	71 55 096	0	29	1-G06	73 05 951	9	3	3-L04	75 12 338	2	53	2-C06				
69 37 254	8	39	3-E16	71 55 096	0	57	2-H10	73 09 370	0	25	1-G02	75 13 674	2	10	2-E12				
69 37 262	8	39	3-E16	71 55 096	3	65	2-H18	73 09 370	3	55	2-H08	75 13 682	2	107	2-E12				
70 12 305	8	53	3-F06	71 55 104	0	26	1-G03	73 11 327	8	137	3-I18	75 13 716	0	10	1-F11				
70 31 305	4	41	2-K18	71 55 104	0	28	1-G05	73 11 335	8	137	3-I18	75 13 724	0	10	1-F11				
70 31 305	4	45	2-K22	71 55 104	0	29	1-G06	73 11 764	8	37	3-E14	75 14 169	0	6	1-F07				
70 35 801	2	103	2-E08	71 55 104	3	57	2-H10	73 11 772	3	9	2-F10	75 14 169	2	87	2-D16				
70 36 726	2	49	2-C02	71 55 104	3	65	2-H18	73 11 772	3	11	2-F12	75 14 169	2	89	2-D18				
70 37 492	3	3	3-L04	71 55 112	0	29	1-G06	73 13 158	4	7	2-J08	75 14 250	2	89	2-D18				
70 38 342	8	23	3-D24	71 55 112	3	57	2-H10	73 13 166	4	7	2-J08	75 14 631	0	6	1-F07				
70 38 342	8	43	3-E20	71 55 112	3	65	2-H18	73 13 182	0	12	1-F13	75 14 631	2	87	2-D18				
70 38 342	8	49	3-F02	71 55 120	0	29	1-G06	73 13 182	4	7	2-J08	75 14 631	2	89	2-D18				
70 45 776	8	187	3-K20	71 55 120	3	57	2-H10	73 13 232	4	7	2-J08	75 14 946	0	15	1-F16				
70 48 465	0	12	1-F13	71 55 120	3	65	2-H18	73 13 240	0	12	1-F13	75 14 946	4	13	2-J14				
70 48 465	4	37	2-K14	71 55 146	3	77	2-I06	73 13 240	4	7	2-J08	75 14 946	4	17	2-J18				
70 48 473	0	12	1-F13	71 55 146	3	83	2-I12	73 13 752	8	11	3-D12	75 14 946	4	43	2-K20				
70 48 473	4	37	2-K14	71 55 179	3	77	2-I06	73 19 007	8	55	3-F08	75 16 537	2	101	2-E06				
70 61 328	4	13	2-J14	71 55 179	3	83	2-I12	73 30 194	8	147	3-J04	75 18 558	2	33	2-B10				
70 61 328	4	17	2-J18	71 55 203	3	77	2-I06	73 30 194	8	151	3-J08	75 18 566	2	33	2-B10				
70 61 328	4	35	2-K12	71 55 203	3	83	2-I12	73 34 618	4	55	2-L08	75 22 345	2	9	2-A10				
70 61 328	4	43	2-K20	71 55 211	3	73	2-I02	73 34 618	8	35	3-E12	75 24 275	0	4	1-F05				
70 61 559	1	33	1-I10	71 55 211	3	79	2-I08	73 37 330	6	3	3-B04	75 24 291	0	4	1-F05				
70 70 626	6	3	3-B04	71 55 229	3	73	2-I02	73 37 348	6	3	3-B04	75 24 317	0	4	1-F05				
70 70 642	6	3	3-B04	71 55 229	3	79	2-I08	73 39 981	8	153	3-J10	75 24 333	0	4	1-F05				
70 70 667	6	3	3-B04	71 55 237	3	73	2-I02	73 39 993	8	45	3-E22	75 24 358	0	4	1-F05				

Page Side	Group Grupp	Date Datum	NUMERICAL REGISTER				NUMMERREGISTER				
2	10A	1987-10									
Part No Art nr	Gr Gr	Page Grid Sida Koord	Part No Art nr	Gr Gr	Page Grid Sida Koord	Part No Art nr	Gr Gr	Page Grid Sida Koord	Part No Art nr	Gr Gr	Page Grid Sida Koord
75 24 374	0	4 1-F05	76 00 836	8	23 3-D24	78 29 674	3	79 2-108	78 74 183	8	19 3-D20
75 24 390	0	4 1-F05	76 00 886	8	13 3-D14	78 29 682	3	73 2-102	78 74 209	0	11 1-F12
75 24 416	0	4 1-F05	76 01 313	8	13 3-D14	78 29 682	3	79 2-108	78 74 209	3	19 2-F20
75 24 432	0	4 1-F05	76 01 321	8	13 3-D14	78 40 622	1	7 1-H08	78 74 340	0	30 1-G07
75 24 457	0	4 1-F05	76 01 354	8	26 3-E02	78 40 853	1	17 1-H18	78 74 340	8	85 3-G14
75 24 473	0	4 1-F05	76 01 362	8	25 3-E02	78 40 937	1	39 1-I16	78 74 340	8	91 3-G20
75 24 499	0	4 1-F05	76 01 370	8	25 3-E02	78 41 067	1	15 1-H18	78 74 530	5	5 3-A06
75 24 515	0	5 1-F06	76 01 388	8	25 3-E02	78 41 141	1	15 1-H16	78 74 548	0	18 1-F19
75 24 531	0	5 1-F06	76 01 461	8	9 3-D10	78 41 331	1	27 1-I04	78 74 548	5	3 3-A04
75 24 556	0	5 1-F06	76 01 479	8	9 3-D10	78 41 349	1	27 1-I04	78 74 720	5	3 3-A04
75 24 572	0	5 1-F06	76 01 495	8	9 3-D10	78 43 303	1	39 1-I16	78 74 738	5	3 3-A04
75 24 598	0	5 1-F06	76 01 545	8	23 3-D24	78 48 088	3	9 2-F10	78 84 166	1	35 1-I12
75 24 614	0	5 1-F06	76 01 552	8	23 3-D24	78 54 912	3	13 2-F14	78 84 182	1	35 1-I12
75 24 630	0	5 1-F06	76 01 560	8	23 3-D24	78 60 513	1	7 1-H08	79 03 743	7	3 3-C04
75 24 655	0	5 1-F06	76 01 594	8	9 3-D10	78 60 695	1	39 1-I16	79 04 089	0	22 1-F23
75 24 671	0	5 1-F06	76 01 644	8	9 3-D10	78 60 703	1	39 1-I16	79 04 089	2	31 2-B08
75 24 697	0	5 1-F06	76 01 651	8	9 3-D10	78 60 794	1	5 1-H08	79 04 089	2	35 2-B12
75 24 713	0	5 1-F06	76 01 685	8	23 3-D24	78 60 802	1	5 1-H08	79 04 089	7	3 3-C04
75 24 739	0	5 1-F06	76 01 693	8	23 3-D24	78 60 877	1	5 1-H08	79 04 097	6	3 3-B04
75 24 754	0	5 1-F06	76 01 701	8	9 3-D10	78 60 885	1	5 1-H08	79 04 113	6	3 3-B04
75 24 770	0	5 1-F06	76 01 719	8	9 3-D10	78 61 032	1	7 1-H08	79 04 162	3	45 2-G22
75 24 796	0	5 1-F06	76 01 727	8	23 3-D24	78 61 040	1	7 1-H08	79 04 394	4	7 2-J06
75 24 812	0	5 1-F06	76 01 735	8	9 3-D10	78 61 057	1	7 1-H08	79 04 394	5	11 3-A12
75 24 838	0	5 1-F06	76 01 792	8	25 3-E02	78 61 065	1	7 1-H08	79 07 892	3	87 2-I18
75 24 853	0	5 1-F06	76 01 800	8	25 3-E02	78 61 081	1	19 1-H20	79 07 918	3	87 2-I18
75 25 231	2	55 2-C08	76 02 204	8	131 3-I12	78 61 479	1	5 1-H06	79 09 989	4	7 2-J08
75 25 231	2	57 2-C10	76 02 204	8	135 3-I16	78 62 014	1	7 1-H08	79 09 989	5	11 3-A12
75 25 421	2	43 2-B20	76 02 394	8	11 3-D12	78 62 287	1	5 1-H06	79 10 474	8	53 3-F03
75 25 421	2	47 2-B24	76 02 485	8	9 3-D10	78 71 403	2	19 2-A20	79 10 516	3	35 3-G12
75 25 421	2	53 2-C06	76 02 501	8	9 3-D10	78 72 443	0	10 1-F11	79 10 524	8	59 3-F12
75 33 615	0	5 1-F06	76 02 519	8	9 3-D10	78 72 963	0	20 1-F21	79 10 540	2	89 2-D18
75 33 623	0	5 1-F06	76 03 103	8	49 3-F02	78 72 963	6	13 3-B14	79 10 540	3	9 2-F10
75 33 631	0	5 1-F06	76 03 111	8	49 3-F02	78 72 971	0	20 1-F21	79 10 540	3	11 2-F12
75 35 362	0	5 1-F06	76 03 459	8	11 3-D12	78 73 037	0	20 1-F21	79 10 540	8	45 3-E22
75 35 370	0	5 1-F06	76 05 256	8	5 3-B06	78 73 037	6	13 3-B14	79 10 540	8	53 3-F06
75 35 388	0	5 1-F06	76 15 495	8	49 3-F02	78 73 243	0	30 1-G07	79 10 540	8	59 3-F12
75 41 063	2	91 2-D20	76 15 511	8	49 3-F02	78 73 508	8	43 3-E20	79 10 540	6	131 3-F12
75 41 071	2	91 2-D20	76 15 545	8	49 3-F02	78 73 508	8	47 3-E24	79 10 557	2	89 2-D18
75 41 857	0	10 1-F11	76 15 552	8	49 3-F02	78 73 516	8	43 3-E20	79 10 557	3	13 2-F14
75 42 921	4	13 2-J14	76 15 636	2	87 2-D13	78 73 516	8	47 3-E24	79 10 557	4	41 2-K18
75 42 939	4	13 2-J14	76 15 636	2	89 2-D19	78 73 565	0	30 1-G07	79 10 557	8	43 3-E20
75 42 947	4	13 2-J14	76 16 675	8	77 3-G06	78 73 565	8	85 3-G14	79 10 557	8	47 3-E24
75 42 947	4	17 2-H18	76 17 418	8	55 3-F08	78 73 565	8	91 3-G20	79 10 557	8	135 3-I16
75 43 051	0	15 1-F16	78 08 504	3	17 2-F18	78 73 573	0	30 1-G07	79 10 565	5	7 3-A08
75 43 911	0	10 1-F11	78 08 504	3	19 2-F20	78 73 573	8	85 3-G14	79 10 599	7	7 3-C08
75 44 844	4	51 2-L04	78 14 908	1	7 1-H03	78 73 573	8	91 3-G20	79 14 690	2	91 2-D20
75 48 910	0	16 1-F17	78 14 916	1	7 1-H08	78 73 714	8	57 3-F10	79 14 690	8	129 3-I10
75 61 186	2	23 2-A24	78 20 228	8	155 3-J12	78 73 722	8	57 3-F10	79 14 690	8	131 3-I12
75 61 749	2	23 2-A24	78 20 244	8	155 3-J12	78 73 771	0	24 1-G01	79 14 718	3	13 2-F14
75 88 858	0	2 1-F03	78 29 609	3	73 2-I02	78 73 789	0	24 1-G01	79 14 718	6	9 3-B10
75 88 858	0	3 1-F04	78 29 609	3	79 2-I08	78 73 789	8	69 3-F22	79 14 849	4	33 2-K10
75 88 866	0	2 1-F03	78 29 617	3	73 2-I02	78 74 118	8	23 3-D24	79 14 898	2	95 2-D24
75 88 862	0	2 1-F03	78 29 617	3	79 2-I08	78 74 118	8	25 3-E02	79 14 822	8	179 3-K12
75 88 890	0	2 1-F03	78 29 625	3	73 2-I02	78 74 118	8	41 3-E18	79 14 922	8	183 3-K16
75 88 916	0	2 1-F03	78 29 625	3	79 2-I08	78 74 126	8	25 3-E02	79 15 077	4	33 2-K10
75 88 916	0	4 1-F05	78 29 633	3	73 2-I02	78 74 134	8	25 3-E02	79 15 093	5	13 3-A14
75 88 981	0	2 1-F03	78 29 633	3	79 2-I08	78 74 142	8	19 3-D20	79 15 101	8	179 3-K12
76 00 729	8	13 3-D14	78 29 666	3	73 2-I02	78 74 159	8	21 3-D22	79 15 101	8	183 3-K16
76 00 737	8	13 3-D14	78 29 666	3	79 2-I08	78 74 167	8	21 3-D22	79 15 168	4	21 2-J22
76 00 828	8	23 3-D24	78 29 674	3	73 2-I02	78 74 175	8	19 3-D20	79 15 549	8	15 3-D16

NUMERICAL REGISTER					NUMMERREGISTER					Date Datum		Group Grupp		Page Sida	
										1987-10		10A		3	
Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord
79 15 556	0	26	1-G03	79 22 271	3	47	2-G24	79 22 446	8	77	3-G06	79 33 443	8	37	3-E14
79 15 556	0	28	1-G05	79 22 289	3	45	2-G22	79 22 461	8	181	3-K14	79 33 443	8	175	3-K08
79 15 556	3	45	2-G22	79 22 289	8	29	3-E06	79 22 495	2	61	2-C14	79 33 484	3	55	2-H08
79 15 556	8	131	3-I12	79 22 289	8	45	3-E22	79 22 495	8	87	3-G18	79 33 518	0	26	1-G03
79 15 564	3	7	2-F08	79 22 297	2	81	2-D10	79 22 495	8	91	3-G20	79 33 518	2	103	2-E08
79 15 564	8	45	3-E22	79 22 339	3	35	2-G12	79 22 503	2	89	2-D18	79 33 518	3	55	2-H08
79 15 564	8	53	3-F06	79 22 339	8	139	3-G20	79 22 503	2	103	2-E08	79 33 558	3	31	2-G08
79 15 564	8	115	3-H20	79 22 347	2	59	2-C12	79 22 636	0	11	1-F12	79 33 682	8	169	3-K02
79 15 564	8	131	3-I12	79 22 347	3	43	2-G20	79 22 636	3	9	2-F10	79 33 682	8	171	3-K04
79 15 564	8	137	3-I18	79 22 347	3	55	2-H08	79 22 636	3	11	2-F12	79 33 807	4	55	2-L08
79 15 663	8	53	3-F06	79 22 347	3	87	2-I16	79 22 636	3	31	2-G08	79 33 815	2	37	2-B14
79 15 687	0	26	1-G03	79 22 347	3	89	2-I18	79 22 727	2	65	2-C18	79 33 815	3	9	2-F10
79 15 687	8	179	3-K12	79 22 347	8	37	3-E14	79 22 727	3	21	2-F22	79 33 815	3	11	2-F12
79 15 705	0	22	1-F23	79 22 347	8	55	3-F08	79 22 727	3	23	2-F24	79 33 815	8	53	3-F06
79 15 705	7	3	3-C04	79 22 347	8	171	3-K04	79 22 735	0	28	1-G05	79 33 823	4	35	2-K12
79 15 705	8	153	3-J10	79 22 354	0	24	1-G01	79 22 735	0	29	1-G06	79 33 823	4	47	2-K24
79 15 713	3	45	2-G22	79 22 354	2	59	2-C12	79 22 735	2	91	2-D20	79 33 823	4	55	2-L08
79 16 489	2	85	2-D14	79 22 354	3	45	2-G22	79 22 735	6	169	3-K02	79 33 823	8	53	3-F06
79 16 489	2	91	2-D20	79 22 354	8	31	3-E08	79 22 800	5	13	3-A14	79 33 849	4	7	2-J08
79 16 489	3	25	2-G02	79 22 354	8	39	3-E16	79 22 800	8	131	3-I12	79 33 849	8	37	3-E14
79 16 489	8	31	3-F08	79 22 354	8	69	3-F22	79 22 800	8	135	3-I18	79 33 856	0	27	1-G04
79 16 489	8	51	3-E04	79 22 354	8	169	3-K02	79 22 818	0	30	1-G07	79 33 856	3	13	2-F10
79 16 489	8	139	3-I20	79 22 354	8	171	3-K04	79 22 818	3	55	2-H08	79 33 856	3	3	3-A04
79 16 489	8	175	3-K08	79 22 362	2	49	2-C02	79 22 818	3	87	2-I16	79 33 856	5	9	3-A04
79 16 497	2	103	2-E08	79 22 362	2	53	2-C06	79 22 818	8	33	3-E10	79 33 856	8	181	3-K04
79 16 497	4	55	2-L08	79 22 362	2	85	2-D14	79 22 859	2	47	2-B24	79 33 864	0	26	1-G03
79 16 497	8	33	3-E22	79 22 362	8	143	3-I24	79 22 859	2	53	2-C06	79 33 872	6	5	2-B06
79 16 497	8	45	3-E10	79 22 362	8	171	3-K04	79 22 891	0	7	1-F08	79 34 102	6	39	3-E08
79 16 497	8	87	3-G16	79 22 370	2	39	2-B16	79 22 891	0	16	1-F17	79 34 136	8	45	3-E22
79 16 497	8	91	3-G20	79 22 370	8	31	3-E08	79 22 891	0	20	1-F21	79 34 136	8	51	3-F04
79 16 497	8	93	3-G22	79 22 370	8	131	3-I12	79 22 891	2	91	2-D20	79 34 136	8	59	3-F12
79 16 497	8	137	3-I18	79 22 370	8	135	3-I16	79 22 891	2	97	2-E02	79 34 144	8	127	3-K08
79 16 505	0	20	1-F21	79 22 370	8	171	3-K04	79 22 891	2	103	2-E08	79 34 300	3	15	2-F10
79 16 506	6	9	3-B10	79 22 370	8	177	3-K10	79 22 891	3	9	2-F10	79 34 318	4	55	2-L08
79 16 523	8	77	3-G06	79 22 388	2	43	2-C02	79 22 891	3	11	2-F12	79 34 318	8	35	3-E12
79 18 279	8	77	3-G06	79 22 396	8	115	3-H20	79 22 891	4	7	2-J08	79 34 433	8	49	3-F02
79 18 717	0	20	1-F21	79 22 396	8	125	3-I06	79 22 891	5	9	3-A10	79 34 433	8	51	3-F04
79 18 733	0	20	1-F21	79 22 396	8	169	3-K02	79 22 891	5	13	3-A14	79 34 607	4	33	2-K10
79 18 733	6	3	3-B04	79 22 420	0	8	1-F09	79 22 891	6	9	3-B10	79 34 730	8	45	3-E22
79 19 480	8	39	3-E16	79 22 420	0	26	1-G03	79 22 891	8	37	3-E14	79 34 730	8	53	3-F06
79 19 506	8	127	3-I06	79 22 420	0	27	1-G04	79 22 891	8	137	3-I18	79 34 748	8	131	3-I12
79 19 509	8	139	3-I20	79 22 420	2	95	2-D24	79 22 891	8	139	3-I20	79 34 755	8	137	3-I18
79 19 574	3	45	2-G22	79 22 420	2	105	2-E10	79 22 891	8	175	3-K08	79 34 763	2	91	2-D02
79 19 582	3	45	2-G22	79 22 420	3	85	2-I14	79 22 909	8	37	3-E14	79 34 763	8	53	3-F06
79 21 281	8	55	3-F08	79 22 420	4	13	2-J14	79 22 933	2	103	2-E08	79 34 771	4	55	2-L08
79 21 307	8	39	3-E16	79 22 420	4	17	2-I18	79 22 933	8	127	3-K08	79 34 771	8	131	3-I12
79 21 331	8	153	3-I10	79 22 420	4	43	2-K20	79 22 974	0	30	1-G07	79 34 797	4	35	2-K12
79 21 463	8	131	3-I12	79 22 420	8	53	3-F06	79 22 974	8	85	3-G14	79 34 797	8	59	3-F12
79 21 489	0	25	1-G02	79 22 420	8	77	3-G06	79 22 974	8	91	3-G20	79 34 797	8	115	3-K08
79 21 686	0	11	1-F12	79 22 420	8	79	3-G08	79 22 982	0	30	1-G07	79 35 208	2	69	2-C22
79 21 885	3	45	2-G22	79 22 420	8	83	3-G12	79 22 982	8	85	3-G14	79 35 471	2	43	2-B20
79 22 206	2	103	2-E08	79 22 420	8	173	3-K06	79 22 982	8	87	3-G16	79 35 786	8	131	3-I12
79 22 206	2	107	2-E12	79 22 420	8	177	3-K10	79 22 982	8	91	3-G20	79 35 869	4	55	2-L08
79 22 206	8	119	3-I24	79 22 420	8	181	3-K14	79 22 982	8	93	3-G22	79 35 901	6	8	3-B10
79 22 206	8	187	3-K20	79 22 420	8	185	3-K18	79 28 997	8	85	3-F18	79 35 901	8	133	3-I14
79 22 214	3	27	2-G04	79 22 420	8	187	3-K20	79 33 443	0	29	1-G06	79 35 901	8	137	3-I18
79 22 263	8	51	3-F04	79 22 420	2	91	2-D20	79 33 443	0	31	1-G08	79 35 984	4	55	2-L06
79 22 263	8	127	3-I06	79 22 438	3	21	2-F22	79 33 443	2	59	2-C12	79 35 992	8	137	3-I18
79 22 271	0	27	1-G04	79 22 438	3	23	2-F24	79 33 443	3	41	2-G18	79 36 008	0	24	1-G02
79 22 271	3	15	2-F16	79 22 438	3	25	2-G02	79 33 443	3	53	2-H06	79 36 008	8	29	3-E06

Page Sida	Group Grupp	Date Datum	NUMERICAL REGISTER												NUMMERREGISTER														
4		10A		1987-10																									
Part No Art nr	Gr Sida	Page Grid Sida Koord	Part No Art nr	Gr Sida	Page Grid Sida Koord	Part No Art nr	Gr Sida	Page Grid Sida Koord	Part No Art nr	Gr Sida	Page Grid Sida Koord	Part No Art nr	Gr Sida	Page Grid Sida Koord	Part No Art nr	Gr Sida	Page Grid Sida Koord												
79 36 016	2	31 2-B08	79 63 523	2	71 2-C24	79 68 068	3	59 2-H12	79 70 080	2	91 2-D20	79 36 016	4	55 2-L08	79 70 098	8	167 3-J24												
79 36 180	8	49 3-F02	79 63 887	4	7 2-J08	79 68 068	3	67 2-H20	79 70 106	0	28 1-G05	79 36 956	8	51 3-F04	79 70 106	0	29 1-G06												
79 37 956	8	45 3-E22	79 64 711	8	49 3-F20	79 68 068	3	73 2-H02	79 70 106	2	91 2-D20	79 37 964	8	15 3-D16	79 70 130	0	7 1-F08												
79 39 804	8	15 3-D16	79 65 338	8	139 3-I02	79 68 068	3	79 2-L08	79 70 130	0	7 1-F08	79 40 398	0	25 1-G02	79 70 130	0	16 1-F14												
79 40 398	0	27 1-G04	79 65 429	7	7 3-C08	79 68 078	8	45 3-E22	79 70 130	2	37 2-B14	79 40 398	8	175 3-K08	79 70 130	2	39 2-B16												
79 40 406	8	175 3-K08	79 65 569	0	28 1-G05	79 68 282	2	59 2-C12	79 70 130	2	97 2-E02	79 40 455	7	9 3-C10	79 70 148	2	37 2-B14												
79 40 455	7	9 3-C10	79 65 569	4	13 2-J14	79 68 308	2	43 2-B20	79 70 148	2	39 2-B16	79 40 463	7	3 3-C04	79 70 148	2	107 2-E12												
79 40 463	7	3 3-C04	79 65 569	4	17 2-J18	79 68 308	2	49 2-C02	79 70 155	2	39 2-B16	79 41 115	4	33 2-K10	79 70 155	2	107 2-E12												
79 41 115	4	33 2-K10	79 65 569	8	179 3-K12	79 68 308	2	51 2-C04	79 70 155	2	107 2-E12	79 46 734	2	85 2-D14	79 70 155	2	107 2-E12												
79 46 734	2	85 2-D14	79 65 569	8	183 3-K16	79 68 308	2	59 2-C12	79 70 163	0	12 1-F13	79 48 995	8	77 3-G06	79 70 163	2	37 2-B14												
79 48 995	8	77 3-G06	79 65 636	8	11 3-D12	79 68 415	6	5 3-B06	79 70 163	2	37 2-B14	79 49 928	4	55 2-L08	79 70 163	2	39 2-B16												
79 49 928	4	55 2-L08	79 65 767	2	87 2-D16	79 68 506	8	45 3-E22	79 70 189	2	39 2-B16	79 51 353	0	16 1-F17	79 70 262	8	131 3-I12												
79 51 353	0	16 1-F17	79 65 767	2	89 2-D18	79 68 506	8	53 3-F06	79 70 262	8	135 3-I16	79 51 353	4	33 2-K10	79 70 286	2	89 2-D18												
79 51 353	4	33 2-K10	79 65 775	0	6 1-F07	79 68 514	3	39 2-G16	79 70 304	8	137 3-I18	79 51 353	4	55 2-L08	79 70 304	8	137 3-I18												
79 51 353	4	55 2-L08	79 65 775	8	145 3-J02	79 68 555	0	27 1-G04	79 70 320	8	139 3-I20	79 51 437	4	21 2-J22	79 70 320	8	139 3-I20												
79 51 437	4	21 2-J22	79 65 783	2	61 2-C14	79 68 555	3	47 2-G24	79 70 346	3	31 2-G08	79 51 783	3	53 2-H06	79 70 346	3	31 2-G08												
79 51 783	3	53 2-H06	79 65 809	0	25 1-G02	79 68 613	8	49 3-F02	79 70 403	8	185 3-K18	79 56 055	2	103 2-E08	79 70 411	8	171 3-K04												
79 56 055	2	103 2-E08	79 65 809	0	27 1-G04	79 68 639	8	45 3-E22	79 70 429	2	89 2-D18	79 56 105	4	55 2-L08	79 70 460	3	7 2-F08												
79 56 105	4	55 2-L08	79 65 825	4	55 2-L08	79 68 639	8	51 3-F04	79 70 478	8	139 3-I20	79 56 212	8	127 3-K08	79 70 536	8	35 3-E12												
79 56 212	8	127 3-K08	79 65 999	8	131 3-I12	79 69 207	2	43 2-B20	79 70 536	8	129 3-I10	79 56 238	8	37 3-E14	79 70 908	2	27 2-B04												
79 56 238	8	37 3-E14	79 65 999	8	135 3-I16	79 69 207	2	53 2-C06	79 71 286	8	139 3-I20	79 58 770	2	103 2-E08	79 71 294	8	49 3-F02												
79 58 770	2	103 2-E08	79 67 573	4	13 2-J14	79 69 207	8	115 3-H20	79 71 393	8	175 3-K08	79 59 349	3	77 2-J08	79 71 443	2	51 2-C04												
79 59 349	3	83 2-H12	79 67 573	4	17 2-J18	79 69 215	8	131 3-I12	79 71 443	2	51 2-C04	79 59 349	3	83 2-H12	79 71 443	2	51 2-C04												
79 60 669	0	29 1-G03	79 67 581	8	45 3-E22	79 69 215	8	131 3-I12	79 71 443	2	51 2-C04	79 60 669	8	171 3-K12	79 71 443	2	51 2-C04												
79 60 669	8	171 3-K12	79 67 581	8	79 3-G08	79 69 215	8	131 3-I12	79 71 443	2	51 2-C04	79 61 311	8	37 3-E14	79 71 443	2	51 2-C04												
79 61 311	8	37 3-E14	79 67 771	8	83 3-G12	79 69 215	8	131 3-I12	79 71 443	2	51 2-C04	79 61 329	2	43 2-B20	79 71 443	2	51 2-C04												
79 61 329	2	43 2-B20	79 67 789	6	5 3-B06	79 69 223	3	21 2-F22	79 71 443	2	51 2-C04	79 61 329	2	47 2-B24	79 71 443	2	51 2-C04												
79 61 329	2	47 2-B24	79 67 870	2	87 2-D16	79 69 223	3	23 2-F24	79 71 443	2	51 2-C04	79 61 329	2	53 2-C06	79 71 443	2	51 2-C04												
79 61 329	2	53 2-C06	79 67 912	0	7 1-F08	79 69 223	3	39 3-E16	79 71 443	2	51 2-C04	79 61 337	2	53 2-C12	79 71 443	2	51 2-C04												
79 61 337	2	53 2-C12	79 67 912	0	8 1-F09	79 69 223	3	77 2-H08	79 71 443	2	51 2-C04	79 61 337	3	89 2-I18	79 71 443	2	51 2-C04												
79 61 337	3	89 2-I18	79 67 912	0	16 1-F17	79 69 223	3	83 2-H12	79 71 443	2	51 2-C04	79 61 352	2	85 2-I14	79 71 443	2	51 2-C04												
79 61 352	2	85 2-I14	79 67 912	2	95 2-D24	79 69 272	3	23 2-F24	79 71 443	2	51 2-C04	79 61 634	0	24 1-G01	79 71 443	2	51 2-C04												
79 61 634	0	24 1-G01	79 67 912	2	97 2-E02	79 69 306	6	3 3-B04	79 71 443	2	51 2-C04	79 61 634	8	29 3-E06	79 71 443	2	51 2-C04												
79 61 634	8	29 3-E06	79 67 938	0	20 1-F21	79 69 306	6	11 3-D12	79 71 443	2	51 2-C04	79 61 642	8	31 3-E08	79 71 443	2	51 2-C04												
79 61 642	8	31 3-E08	79 67 938	0	26 1-G03	79 69 306	6	3 3-B04	79 71 443	2	51 2-C04	79 61 683	0	71 3-F24	79 71 443	2	51 2-C04												
79 61 683	0	71 3-F24	79 67 938	0	28 1-G05	79 69 314	8	167 3-K20	79 71 443	2	51 2-C04	79 61 691	2	59 2-C12	79 71 443	2	51 2-C04												
79 61 691	2	59 2-C12	79 67 938	8	9 3-B10	79 69 504	8	135 3-I16	79 71 443	2	51 2-C04	79 61 691	8	13 3-D14	79 71 443	2	51 2-C04												
79 61 691	8	13 3-D14	79 67 938	8	39 3-E16	79 69 504	8	135 3-I16	79 71 443	2	51 2-C04	79 61 691	8	31 3-E08	79 71 443	2	51 2-C04												
79 61 691	8	31 3-E08	79 67 938	8	179 3-K12	79 69 975	3	13 2-F14	79 71 443	2	51 2-C04	79 61 691	8	33 3-E10	79 71 443	2	51 2-C04												
79 61 691	8	33 3-E10	79 67 938	8	181 3-K14	79 69 975	4	33 2-K10	79 71 443	2	51 2-C04	79 61 691	8	33 3-E10	79 71 443	2	51 2-C04												
79 61 691	8	33 3-E10	79 67 938	8	181 3-K14	79 69 975	4	33 2-K10	79 71 443	2	51 2-C04	79 61 691	8	33 3-E10	79 71 443	2	51 2-C04												
79 61 691	8	33 3-E10	79 67 938	8	181 3-K14	79 69 975	4	33 2-K10	79 71 443	2	51 2-C04	79 61 691	8	33 3-E10	79 71 443	2	51 2-C04												
79 61 691	8	33 3-E10	79 67 938	8	181 3-K14	79 69 975	4	33 2-K10	79 71 443	2	51 2-C04	79 61 691	8	33 3-E10	79 71 443	2	51 2-C04												
79 61 691	8	33 3-E10	79 67 938	8	181 3-K14	79 69 975	4	33 2-K10	79 71 443	2	51 2-C04	79 61 691	8	33 3-E10	79 71 443	2	51 2-C04												
79 61 691	8	33 3-E10	79 67 938	8	181 3-K14	79 69 975	4	33 2-K10	79 71 443	2	51 2-C04	79 61 691	8	33 3-E10	79 71 443	2	51 2-C04												
79 61 691	8	33 3-E10	79 67 938	8	181 3-K14	79 69 975	4	33 2-K10	79 71 443	2	51 2-C04	79 61 691	8	33 3-E10	79 71 443	2	51 2-C04												
79 61 691	8	33 3-E10	79 67 938	8	181 3-K14	79 69 975	4	33 2-K10	79 71 443	2	51 2-C04	79 61 691	8	33 3-E10	79 71 443	2	51 2-C04												
79 61 691	8	33 3-E10	79 67 938	8	181 3-K14	79 69 975	4	33 2-K10	79 71 443	2	51 2-C04	79 61 691	8	33 3-E10	79 71 443	2	51 2-C04												
79 61 691	8	33 3-E10	79 67 938	8	181 3-K14	79 69 975	4	33 2-K10	79 71 443	2	51 2-C04	79 61 691	8	33 3-E10	79 71 443	2	51 2-C04												
79 61 691	8	33 3-E10	79 67 938	8	181 3-K14	79 69 975	4	33 2-K10	79 71 443	2	51 2-C04	79 61 691	8	33 3-E10	79 71 443	2	51 2-C04												
79 61 691	8	33 3-E10	79 67 938	8	181 3-K14	79 69 975	4	33 2-K10	79 71 443	2	51 2-C04	79 61 691	8	33 3-E10	79 71 443	2	51 2-C04												
79 61 691	8	33 3-E10	79 67 938	8	181 3-K14	79 69 975	4	33 2-K10	79 71 443	2	51 2-C04	79 61 691	8	33 3-E10	79 71 443	2	51 2-C04												
79 61 691	8	33 3-E10	79 67 938	8	181 3-K14	79 69 975	4	33 2-K10	79 71 443	2	51 2-C04	79 61 691	8	33 3-E10	79 71 443	2	51 2-C04												
79 61 691	8	33 3-E10	79 67 938	8	181 3-K14	79 69 975	4	33 2-K10	79 71 443	2	51 2-C04	79 61 691	8	33 3-E10	79 71 443	2	51 2-C04												
79 61 691	8	33 3-E10	79 67 938	8	181 3-K14	79 69 975	4	33 2-K10	79 71 443	2	51 2-C04	79 61 691	8	33 3-E10	79 71 443	2	51 2-C04												
79 61 691	8	33 3-E10	79 67 938	8	181 3-K14	79 69 975	4	33 2-K10	79 71 443	2	51 2-C04	79 61 691	8	33 3-E10	79 71 443	2	51 2-C04												
79 61 691	8	33 3-E10	79 67 938	8	181 3-K14	79 69 975	4	33 2-K10	79 71 443	2	51 2-C04	79 61 691	8	33 3-E10	79 71 443	2	51 2-C04												
79 61 691	8	33 3-E10	79 67 938	8	181 3-K14	79 69 975	4	33 2-K10	79 71 443	2	51 2-C04	79 61 691	8	33 3-E10	79 71 443	2	51 2-C04												
79 61 691	8	33 3-E10	79 67 938	8	181 3-K14	79 69 975	4	33 2-K10	79 71 443	2	51 2-C04	79 61 691	8	33 3-E10	79 71 443	2	51 2-C04												
79 61 691	8	33 3-E10	79 67 938	8	181 3-K14	79 69 975	4	33 2-K10	79 71 443	2	51 2-C04	79 61 691	8	33 3-E10	79 71 443	2	51 2-C04												
79 61 691	8	33 3-E10	79 67 938	8	181 3-K14	79 69 975	4	33 2-K10	79 71 443	2	51 2-C04	79 61 691	8	33 3-E10	79 71 443	2	51 2-C04												
79 61 691	8	33 3-E10	79 67 938	8	181 3-K14</																								

NUMERICAL REGISTER						NUMMERREGISTER						Date Datum		Group Grupp		Page Sida	
												1987-10		10A		5	
Part No Art nr	Gr	Page Grid Sida Koord	Part No Art nr	Gr	Page Grid Sida Koord	Part No Art nr	Gr	Page Grid Sida Koord	Part No Art nr	Gr	Page Grid Sida Koord	Part No Art nr	Gr	Page Grid Sida Koord	Part No Art nr	Gr	Page Grid Sida Koord
79 71 858	8	37 3-E14	79 72 219	3	43 2-G20	80 19 895	3	37 2-G14	80 29 936	8	137 3-I18						
79 71 858	8	39 3-E16	79 72 227	8	167 3-J24	80 19 895	3	39 2-G16	80 29 944	0	25 1-G02						
79 71 724	8	37 3-E14	79 72 284	3	39 2-G18	80 19 903	2	105 2-E10	80 29 944	0	28 1-G05						
79 71 757	8	15 3-D16	79 72 318	8	177 3-K10	80 19 903	3	41 2-G16	80 29 944	0	29 1-G06						
79 71 755	6	3 3-B04	79 72 318	8	181 3-K14	80 19 911	2	81 2-D10	80 29 944	2	81 2-D10						
79 71 765	6	7 3-B08	79 72 326	8	175 3-K08	80 19 911	8	33 3-E10	80 29 944	2	91 2-D20						
79 71 765	6	9 3-B10	79 72 334	6	5 3-B08	80 19 929	0	26 1-G03	80 29 944	2	109 2-E14						
79 71 781	8	127 3-K08	79 72 342	4	43 2-K20	80 19 929	0	28 1-G05	80 29 944	3	27 2-G04						
79 71 799	8	127 3-K08	79 72 356	2	61 2-C14	80 19 929	3	7 2-F08	80 29 944	3	45 2-G22						
79 71 823	0	26 1-G03	79 72 356	3	15 2-F16	80 19 929	3	53 2-H06	80 29 944	4	35 2-K12						
79 71 823	2	69 2-C22	79 72 375	2	7 2-A08	80 19 929	4	23 2-J24	80 29 951	0	26 1-G03						
79 71 823	2	73 2-D02	79 72 441	0	31 1-G08	80 19 929	8	179 3-K12	80 29 951	0	27 1-G04						
79 71 831	8	35 3-E12	79 72 441	8	45 3-E22	80 19 929	8	183 3-K16	80 29 951	0	28 1-G05						
79 71 864	2	57 2-C10	79 72 441	8	51 3-F04	80 19 945	2	37 2-B14	80 29 951	2	19 2-A20						
79 71 864	2	103 2-E08	79 72 458	8	115 3-H20	80 19 945	2	39 2-B16	80 29 951	2	37 2-B14						
79 71 872	2	49 2-C02	79 72 474	8	11 3-D12	80 19 945	3	15 2-F16	80 29 951	2	39 2-B16						
79 71 872	2	57 2-C10	79 72 482	8	181 3-K14	80 19 978	2	75 2-D04	80 29 951	2	61 2-C14						
79 71 880	0	26 1-G03	79 72 480	2	49 2-C02	80 21 073	1	35 1-I12	80 29 951	2	69 2-C22						
79 71 880	0	28 1-G05	79 72 490	2	53 2-C06	80 21 727	2	109 2-E14	80 29 951	2	73 2-D02						
79 71 880	0	29 1-G06	79 72 508	8	23 3-D24	80 21 917	2	75 2-D04	80 29 951	2	107 2-E12						
79 71 880	2	103 2-E08	79 72 508	8	25 3-E02	80 21 925	2	19 2-A20	80 29 951	3	21 2-F22						
79 71 880	3	55 2-H08	79 72 565	2	53 2-C06	80 27 740	2	109 2-E14	80 29 951	3	23 2-F24						
79 71 880	5	13 3-A14	79 72 573	3	29 2-G06	80 29 548	0	28 1-G05	80 29 951	3	27 2-G04						
79 71 922	5	11 3-A12	79 72 607	2	37 2-B14	80 29 548	0	29 1-G06	80 29 951	3	29 2-G06						
79 71 930	4	13 2-J14	79 72 607	2	39 2-B16	80 29 548	2	91 2-D20	80 29 951	3	37 2-A14						
79 71 938	4	17 2-J18	79 72 649	2	61 2-C14	80 29 548	2	109 2-E14	80 29 951	4	19 2-J20						
79 71 940	4	13 2-J14	79 72 672	8	135 3-I16	80 29 548	3	9 2-F10	80 29 951	8	171 3-K04						
79 71 948	4	17 2-J18	79 72 805	5	13 3-A14	80 29 548	3	11 2-F12	80 29 951	8	173 3-K06						
79 71 997	2	95 2-D24	79 73 431	0	4 1-F05	80 29 548	3	27 2-G04	80 29 951	8	177 3-K10						
79 72 003	3	15 2-F16	79 73 472	8	51 3-F04	80 29 548	3	29 2-G06	80 29 951	8	181 3-K14						
79 72 029	3	57 2-H10	79 73 969	8	143 3-I24	80 29 548	3	38 2-G16	80 29 969	4	23 2-J24						
79 72 029	3	59 2-H12	79 74 025	3	29 2-G06	80 29 548	8	65 3-F18	80 29 969	4	27 2-K04						
79 72 029	3	61 2-H14	79 74 025	8	55 3-F08	80 29 555	0	28 1-G03	80 29 969	8	55 3-F08						
79 72 029	3	65 2-H18	79 75 213	8	43 3-E20	80 29 555	0	28 1-G05	80 29 969	8	131 3-I12						
79 72 029	3	67 2-H20	79 75 75	8	47 3-E24	80 29 555	2	7 2-A08	80 29 969	0	10 1-F11						
79 72 029	3	69 2-H22	79 75 436	0	10 1-F11	80 29 555	2	61 2-C14	80 29 969	0	26 1-G03						
79 72 029	3	73 2-H02	79 75 469	0	10 1-F11	80 29 555	2	67 2-C20	80 29 969	0	28 1-G05						
79 72 029	3	79 2-I08	80 00 143	2	109 2-E14	80 29 555	2	71 2-C24	80 29 969	2	7 2-A08						
79 72 037	2	95 2-D24	80 00 440	2	75 2-B04	80 29 555	2	75 2-D04	80 29 969	2	9 2-A10						
79 72 045	8	169 3-K02	80 00 440	2	79 2-D08	80 29 555	2	103 2-E08	80 29 969	2	11 2-A12						
79 72 045	8	173 3-K06	80 05 961	2	63 2-C10	80 29 555	2	107 2-E12	80 29 969	2	13 2-A14						
79 72 04	8	175 3-K08	80 07 486	2	67 2-C20	80 29 555	3	9 2-F10	80 29 969	2	19 2-A20						
79 72 052	8	169 3-K02	80 07 486	2	71 2-C24	80 29 555	3	11 2-F12	80 29 969	2	25 2-B02						
79 72 078	0	29 1-G01	80 19 531	3	31 2-B08	80 29 555	3	13 2-F14	80 29 969	2	27 2-B04						
79 72 078	8	29 3-E06	80 19 531	2	43 2-B20	80 29 555	3	27 2-G04	80 29 969	2	31 2-B06						
79 72 078	8	177 3-K10	80 19 531	2	51 2-C04	80 29 555	3	29 2-G06	80 29 969	2	35 2-B12						
79 72 078	8	131 3-K14	80 19 531	8	59 3-F12	80 29 555	3	53 2-H06	80 29 969	2	41 2-B18						
79 72 086	8	179 3-K12	80 19 705	3	9 2-F10	80 29 555	3	85 2-I14	80 29 969	2	57 2-C10						
79 72 086	8	191 3-K14	80 19 705	3	11 2-F12	80 29 555	6	33 3-E10	80 29 969	2	63 2-C16						
79 72 094	8	177 3-K10	80 19 867	2	81 2-C10	80 29 555	8	89 3-F22	80 29 969	2	65 2-B18						
79 72 094	8	181 3-K14	80 19 887	2	105 2-E10	80 25 555	8	133 3-I14	80 29 969	2	79 2-D08						
79 72 102	8	177 3-K10	80 19 887	5	3 3-A04	80 25 555	8	137 3-I18	80 29 969	2	89 2-E04						
79 72 144	8	27 3-E14	80 19 887	5	5 3-A06	80 25 555	5	179 3-K12	80 29 969	2	101 2-E22						
79 72 185	0	24 1-G01	80 19 985	0	26 1-G03	80 25 555	5	183 3-K16	80 29 969	2	109 2-A10						
79 72 185	0	25 1-G02	80 19 985	0	28 1-G05	80 29 779	0	20 2-F21	80 29 969	4	5 2-J06						
79 72 185	8	71 3-F24	80 19 895	0	29 1-G08	80 29 779	2	7 2-A08	80 29 969	4	7 2-A08						
79 72 185	8	79 3-G16	80 19 895	0	19 2-A20	80 29 779	2	107 2-E12	80 29 969	4	11 2-J12						
79 72 185	8	93 3-G22	80 19 895	2	31 2-B08	80 29 779	6	9 2-B10	80 29 969	4	13 2-J12						
79 72 193	8	31 3-E08	80 19 895	2	35 2-B12	80 29 936	3	27 2-G04	80 29 969	4	15 2-J18						
79 72 201	8	105 3-H10	80 19 895	2	105 2-E10	80 29 936	8	17 3-D18	80 29 969	4	17 2-J18						

Page Sida	Group Grupp	Date Datum	NUMERICAL REGISTER				NUMMERREGISTER				
6	10A	1987-10									
Part No Art nr	Gr Gr	Page Grid Sida Koord	Part No Art nr	Gr Gr	Page Grid Sida Koord	Part No Art nr	Gr Gr	Page Grid Sida Koord	Part No Art nr	Gr Gr	Page Grid Sida Koord
80 29 965	4	21 2-J22	80 59 073	2	71 2-C24	80 73 538	5	11 3-A12	80 82 935	2	89 2-D18
80 29 965	4	25 2-K02	80 59 115	0	29 1-G06	80 73 546	0	20 1-F21	80 82 935	4	17 2-J18
80 29 985	4	29 2-K06	80 59 115	0	30 1-G07	80 73 546	0	23 1-F24	80 82 935	4	23 2-J24
80 29 985	4	31 2-K08	80 59 115	2	67 2-C20	80 73 546	6	7 3-B08	80 82 935	4	27 2-K04
80 29 985	4	33 2-K10	80 59 115	2	71 2-C24	80 73 546	6	9 3-B10	80 82 935	4	41 2-K18
80 29 985	4	41 2-K18	80 59 230	8	59 3-F12	80 73 546	7	7 3-C08	80 82 935	4	43 2-K20
80 29 985	4	43 2-K20	80 59 248	0	25 1-G02	80 73 942	2	27 2-B04	80 82 935	8	11 3-D12
80 29 985	4	55 2-L08	80 59 248	0	27 1-G04	80 73 942	2	87 2-D16	80 82 935	8	179 3-K12
80 29 985	5	11 3-A12	80 59 271	3	31 2-G08	80 73 942	2	89 2-D18	80 82 935	8	183 3-K16
80 29 985	8	47 3-E24	80 59 388	8	55 3-F08	80 73 942	2	93 2-D22	80 82 943	2	13 2-A14
80 29 985	8	55 3-F08	80 59 388	8	73 3-G02	80 73 942	2	103 2-E08	80 82 943	2	25 2-B02
80 29 985	8	129 3-I10	80 59 396	2	37 2-B14	80 73 942	3	13 2-F14	80 82 943	2	41 2-E18
80 29 985	8	179 3-K12	80 59 396	3	37 2-G14	80 73 942	5	7 3-A08	80 82 943	2	67 2-C20
80 29 985	8	183 3-K16	80 59 404	0	25 1-G02	80 73 942	5	11 3-A12	80 82 943	2	69 2-D22
80 29 993	4	7 2-J08	80 59 404	0	28 1-G06	80 73 959	2	7 2-A08	80 82 943	2	71 2-C24
80 30 017	0	29 1-G06	80 59 404	3	45 2-G22	80 73 959	8	167 3-K20	80 82 943	4	13 2-J14
80 30 017	2	31 2-B08	80 59 420	8	45 3-E22	80 73 975	6	9 3-B10	80 82 943	4	17 2-D18
80 30 017	2	35 2-B12	80 59 420	8	53 3-F06	80 74 106	0	10 1-F21	80 82 943	4	43 2-K20
80 30 017	2	73 2-D02	80 59 487	4	33 2-K10	80 74 106	0	26 1-G03	80 82 943	4	45 2-K22
80 30 017	4	53 2-L06	80 59 487	4	55 2-L06	80 74 106	0	27 1-G04	80 82 943	8	11 3-D12
80 30 017	8	147 3-J04	80 59 529	8	45 3-E22	80 74 106	0	28 1-G05	80 82 943	8	37 3-E14
80 30 017	8	149 3-J06	80 59 529	8	53 3-F06	80 74 106	2	7 2-A08	80 82 943	8	181 3-K14
80 30 017	8	151 3-J08	80 59 545	2	69 2-C22	80 74 106	2	29 2-B06	80 82 950	2	69 2-C22
80 30 017	8	153 3-J10	80 59 545	2	71 2-C24	80 74 106	2	35 2-B12	80 82 950	2	71 2-C24
80 30 066	5	11 3-A12	80 59 545	3	45 2-G22	80 74 106	2	79 2-D08	80 82 950	3	17 2-F18
80 34 456	2	19 2-A20	80 59 552	2	103 2-E08	80 74 106	2	87 2-D16	80 82 950	6	7 3-B08
80 34 647	2	25 2-B02	80 59 552	8	37 3-E14	80 74 106	2	89 2-D18	80 82 968	0	27 1-G04
80 34 662	2	9 2-A10	80 59 560	8	37 3-E14	80 74 106	3	9 2-F10	80 82 968	2	27 2-B04
80 34 910	2	23 2-A24	80 59 560	8	65 3-F18	80 74 106	3	11 2-F12	80 82 968	2	101 2-E06
80 34 985	4	25 2-K02	80 59 578	0	26 1-G03	80 74 106	3	13 2-F14	80 82 968	3	33 2-G10
80 47 722	0	7 1-F08	80 59 578	0	27 1-G04	80 74 106	3	31 2-G08	80 82 968	4	5 2-J06
80 47 722	2	99 2-E04	80 59 578	0	31 1-G08	80 74 106	3	33 2-G10	80 82 968	4	13 2-J14
80 47 722	4	29 2-K08	80 59 578	8	59 3-F12	80 74 106	3	37 2-G14	80 82 968	4	17 2-D18
80 47 722	4	31 2-E08	80 59 578	8	169 3-K02	80 74 106	4	7 2-J06	80 82 968	4	41 2-K18
80 47 722	5	11 3-A12	80 59 578	8	171 3-K04	80 74 106	4	13 2-J14	80 82 968	4	41 2-K18
80 47 813	4	29 2-K06	80 59 578	8	177 3-K10	80 74 106	4	17 2-D16	80 82 992	0	6 1-F07
80 47 813	4	31 2-K08	80 59 578	8	181 3-K14	80 74 106	4	43 2-K20	80 82 992	2	87 2-D18
80 47 838	4	21 2-J22	80 59 578	8	185 3-K18	80 74 106	8	181 3-K14	80 82 992	2	89 2-D18
80 47 854	4	25 2-K02	80 59 594	2	55 2-C08	80 74 148	1	35 1-I12	80 82 992	4	41 2-K18
80 47 854	4	21 2-J22	80 59 610	0	5 1-F06	80 74 270	3	37 2-G14	80 83 081	3	9 2-F10
80 47 854	4	25 2-K02	80 59 610	2	83 2-D12	80 74 288	2	29 2-B06	80 83 081	3	11 2-F12
80 48 837	2	65 2-C18	80 59 610	2	87 2-D18	80 74 288	2	43 2-B20	80 83 115	4	41 2-K18
80 48 348	3	17 2-F18	80 59 615	2	67 2-C20	80 74 288	2	49 2-C02	80 83 123	0	20 1-F21
80 48 348	3	19 2-F20	80 59 615	2	71 2-C24	80 74 288	2	51 2-C04	80 83 123	0	26 1-G03
80 48 447	3	17 2-F18	80 73 090	2	107 2-E12	80 74 288	2	67 2-C20	80 83 123	0	28 1-G06
80 49 447	3	19 2-F20	80 73 090	4	33 2-K10	80 74 288	2	71 2-C24	80 83 123	2	7 2-A08
80 49 553	4	13 2-J14	80 73 090	8	23 3-D24	80 74 288	5	7 3-A08	80 83 123	6	9 3-B10
80 49 553	4	17 2-F18	80 73 090	8	25 3-E02	80 74 288	5	11 3-A12	80 83 123	8	179 3-K12
80 50 593	0	26 1-G03	80 73 108	2	107 2-E12	80 74 288	8	37 3-E14	80 83 123	8	181 3-K14
80 50 593	0	28 1-G05	80 73 108	6	3 3-B04	80 82 919	2	105 2-E10	80 83 156	2	7 2-A08
80 50 593	2	67 2-C20	80 73 124	0	20 1-F21	80 82 919	3	33 2-G10	80 83 160	6	3 3-B04
80 50 593	2	71 2-C24	80 73 124	6	3 3-B04	80 82 919	3	45 2-G22	80 83 222	6	3 3-B04
80 50 593	3	47 2-G24	80 73 249	0	6 1-F07	80 82 919	8	181 3-K14	80 83 933	2	9 2-A10
80 50 619	2	33 2-B10	80 73 249	2	79 2-D08	80 82 935	0	6 1-F07	80 83 933	2	11 2-E12
80 50 980	8	45 3-E22	80 73 272	2	11 2-A12	80 82 935	0	26 1-G03	80 83 933	2	63 2-C16
80 55 980	8	51 3-F04	80 73 496	0	25 1-G02	80 82 935	0	27 1-G04	80 83 933	2	65 2-B18
80 55 980	8	59 3-F12	80 73 496	0	27 1-G04	80 82 935	0	28 1-G05	80 83 933	4	11 2-J12
80 55 985	5	3 3-A06	80 73 512	0	27 1-G04	80 82 935	2	7 2-A08	80 83 933	4	13 2-A14
80 55 985	8	55 3-F08	80 73 512	8	169 3-K02	80 82 935	2	19 2-A20	80 83 933	4	15 2-B16
80 59 073	2	67 2-C20	80 73 538	4	7 2-J06	80 82 935	2	87 2-D16	80 83 933	4	17 2-D18

NUMERICAL REGISTER						NUMMERREGISTER						Date Datum		Group Grupp		Page Sida			
												1987-10		10A		7			
Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
80 83 933	4	25	2-K02	80 84 386	7	7	3-C08	82 06 393	3	43	3-E20	82 28 843	8	13	3-D14				
80 83 933	4	43	2-K20	80 84 410	7	7	3-C08	82 06 393	8	47	3-E24	82 33 645	0	24	1-G01				
80 83 941	0	26	1-G03	80 91 720	2	81	2-D10	82 06 476	8	43	3-E20	82 33 686	8	13	3-D14				
80 83 941	0	28	1-G05	80 91 738	2	13	2-A14	82 06 476	8	47	3-E24	82 35 178	8	39	3-G14				
80 83 941	2	7	2-A06	80 91 738	2	19	2-A20	82 07 326	8	11	3-D12	82 35 178	8	85	3-G14				
80 83 941	2	19	2-A20	80 91 738	2	99	2-E04	82 07 573	8	43	3-E20	82 35 178	8	89	3-G18				
80 83 941	2	25	2-B02	80 95 620	2	109	2-E14	82 07 573	8	47	3-E24	82 35 178	8	91	3-G20				
80 83 941	2	63	2-C16	80 97 586	8	15	3-D16	82 07 581	8	43	3-E20	82 35 699	8	43	3-G20				
80 83 941	2	65	2-C18	80 97 719	8	55	3-F08	82 07 581	8	47	3-E24	82 35 699	8	47	3-G20				
80 83 941	2	89	2-D18	80 97 750	0	30	1-G07	82 08 969	0	25	1-G02	82 36 390	8	43	3-E24				
80 83 941	2	99	2-E04	80 97 750	8	167	3-J24	82 09 078	8	169	3-K02	82 36 390	8	47	3-E24				
80 83 941	2	101	2-E06	80 97 859	5	9	3-A10	82 09 413	8	87	3-G16	82 36 606	8	43	3-E24				
80 83 941	4	13	2-J14	80 97 863	8	19	3-D20	82 09 413	8	93	3-G22	82 36 606	8	49	3-F02				
80 83 941	4	17	2-J18	80 97 863	8	55	3-F08	82 09 494	0	24	1-G01	82 36 747	8	79	3-G08				
80 83 941	4	29	2-K06	80 97 925	4	19	2-J20	82 09 876	8	11	3-D12	82 36 747	8	83	3-G12				
80 83 941	4	31	2-K08	80 97 933	2	103	2-E08	82 09 884	8	11	3-D12	82 36 762	8	77	3-G06				
80 83 941	4	43	2-K20	80 98 030	7	7	3-C08	82 09 926	8	13	3-D14	82 36 762	8	83	3-G12				
80 83 941	8	187	3-K20	80 98 030	8	173	3-K06	82 09 934	8	13	3-D14	82 37 265	8	79	3-G08				
80 83 958	2	83	2-D12	80 98 048	2	57	2-C10	82 09 942	8	23	3-D24	82 37 265	8	83	3-G12				
80 83 958	4	11	2-J12	80 98 055	4	5	2-J06	82 09 958	8	23	3-D24	82 37 299	8	79	3-G08				
80 83 958	4	13	2-J14	80 98 055	4	41	2-K18	82 09 967	8	13	3-D14	82 37 299	8	83	3-G12				
80 83 958	4	15	2-J16	80 98 089	4	13	2-J14	82 09 967	8	23	3-D24	82 37 323	8	59	3-F12				
80 83 958	4	17	2-J18	80 98 089	4	17	2-J18	82 09 983	8	11	3-D12	82 38 099	8	59	3-F12				
80 83 958	4	43	2-K20	80 98 089	4	43	2-K20	82 09 991	8	11	3-D12	82 38 107	8	59	3-F12				
80 83 974	4	29	2-K06	80 98 961	0	27	1-G04	82 10 007	8	11	3-D12	82 38 115	8	59	3-F12				
80 83 974	4	31	2-K08	80 98 261	8	179	3-K12	82 11 294	8	41	3-E18	82 38 123	8	59	3-F12				
80 83 974	4	43	2-K20	80 98 261	8	181	3-K14	82 11 674	8	11	3-D12	82 38 305	8	187	3-K20				
80 83 982	2	25	2-B02	81 09 548	2	67	2-C20	82 11 674	8	139	3-B10	82 39 162	8	11	3-D12				
80 83 982	4	21	2-J22	81 12 989	2	33	2-B10	82 15 899	8	43	3-E20	82 39 170	8	11	3-D14				
80 83 982	4	25	2-K02	81 19 422	0	2	1-F05	82 15 907	8	43	3-E20	82 39 287	8	85	3-G12				
80 83 990	2	19	2-A20	81 19 422	2	25	2-B02	82 17 432	8	43	3-E20	82 39 295	8	85	3-G14				
80 83 990	2	101	2-E06	81 23 150	2	71	2-C24	82 17 432	8	47	3-E24	82 39 733	8	39	3-E18				
80 84 006	2	19	2-A20	81 23 168	2	63	2-C16	82 17 440	8	43	3-E20	82 41 093	8	47	3-E24				
80 84 006	2	87	2-D16	81 23 747	2	101	2-E06	82 17 440	8	47	3-E24	82 41 101	8	49	3-F02				
80 84 006	2	89	2-D18	81 24 141	0	3	1-F04	82 17 689	8	139	3-I20	82 41 119	8	49	3-F02				
80 84 006	3	9	2-F10	81 24 141	2	79	2-D08	82 21 012	8	87	3-G16	82 41 291	8	49	3-F02				
80 84 006	3	11	2-F12	81 25 189	4	23	2-J24	82 21 012	8	93	3-G22	82 41 325	3	89	2-B12				
80 84 014	0	10	1-F11	81 25 189	4	27	2-K04	82 21 020	8	87	3-G16	82 41 994	8	45	3-E28				
80 84 014	0	26	1-G03	81 29 876	2	67	2-C20	82 21 020	8	93	3-G22	82 41 994	8	51	3-F04				
80 84 014	0	28	1-G05	81 29 876	2	71	2-C24	82 21 855	8	9	3-D10	82 42 091	8	11	3-D12				
80 84 014	2	87	2-D16	81 29 876	2	107	2-E12	82 21 863	8	9	3-D10	82 42 109	8	11	3-D12				
80 84 014	2	89	2-D18	81 32 236	2	75	2-D04	82 22 663	8	79	3-G08	82 42 396	8	11	3-D12				
80 84 022	0	26	1-G03	82 04 661	8	11	3-D12	82 22 663	8	83	3-G12	82 42 406	8	11	3-D12				
80 84 022	0	28	1-G05	82 04 760	8	11	3-D12	82 24 917	8	43	3-E20	82 42 471	8	11	3-D12				
80 84 022	8	179	3-K12	82 04 760	8	48	3-F02	82 24 917	8	47	3-E24	82 42 554	8	11	3-D12				
80 84 022	8	183	3-K16	82 04 636	8	5	3-D10	82 24 925	8	43	3-E20	82 43 578	8	43	3-E20				
80 84 030	2	87	2-D16	82 04 844	8	9	3-D10	82 24 925	8	47	3-E24	82 43 578	8	47	3-E24				
80 84 030	2	89	2-D18	82 05 338	8	9	3-D10	82 24 933	8	43	3-E20	82 43 578	8	49	3-F02				
80 84 048	2	25	2-B02	82 05 346	8	9	3-D10	82 24 933	8	47	3-E24	82 43 651	8	49	3-F02				
80 84 048	2	27	2-B04	82 05 452	8	11	3-D12	82 25 872	8	9	3-D10	82 43 659	8	49	3-F02				
80 84 048	8	179	3-K12	82 05 908	8	43	3-E20	82 25 930	8	77	3-G08	82 43 966	8	59	3-F12				
80 84 063	0	20	1-F21	82 05 908	8	47	3-E24	82 25 948	8	77	3-G08	82 43 990	8	47	3-E24				
80 84 063	8	9	3-B10	82 05 981	8	11	3-D12	82 25 955	8	81	3-G10	82 44 006	8	47	3-E24				
80 84 071	3	9	2-F10	82 05 989	8	11	3-D12	82 25 963	8	81	3-G10	82 44 303	8	49	3-F02				
80 84 071	3	11	2-F12	82 06 096	8	11	3-D12	82 25 971	8	81	3-G10	82 44 364	8	85	3-G14				
80 84 139	2	107	2-E12	82 06 096	8	19	3-D20	82 25 989	8	81	3-G10	82 45 888	8	25	3-E02				
80 84 154	2	107	2-E12	82 06 203	2	103	2-E08	82 27 738	0	30	1-G07	82 45 896	8	59	3-F12				
80 84 196	4	7	2-J06	82 06 203	8	55	3-F08	82 27 738	8	85	3-G14	82 45 904	8	59	3-F12				
80 84 246	2	7	2-A06	82 06 369	8	43	3-E20	82 27 738	8	91	3-G20	82 46 464	8	53	3-F06				
80 84 246	5	11	3-A12	82 06 369	8	47	3-E24	82 28 702	8	11	3-D12	82 46 555	8	89	3-G18				

Page Side	Group Grupp	Date Datum	NUMERICAL REGISTER				NUMMERREGISTER								
8	10A	1987-10													
Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
82 46 563	8	89	3-G18	82 51 290	8	77	3-G06	82 58 220	8	187	3-K20	82 61 687	8	65	3-F18
82 46 564	8	49	3-F02	82 51 308	8	77	3-G06	82 58 238	8	185	3-K18	82 61 810	8	65	3-F18
82 46 565	8	49	3-F02	82 51 407	8	79	3-G08	82 58 238	8	187	3-K20	82 61 828	8	65	3-F18
82 46 762	8	47	3-E24	82 51 407	8	83	3-G12	82 58 253	8	187	3-K20	82 61 835	8	67	3-F20
82 47 181	8	11	3-D12	82 51 431	8	79	3-G08	82 58 279	8	185	3-K18	82 61 943	8	67	3-F20
82 47 553	8	187	3-K20	82 51 449	8	79	3-G08	82 58 295	8	185	3-K18	82 61 968	8	87	3-G16
82 47 777	8	45	3-E22	82 51 514	8	65	3-F18	82 58 303	8	185	3-K18	82 61 968	8	91	3-G20
82 47 785	8	53	3-F06	82 51 522	8	65	3-F18	82 58 352	8	185	3-K18	82 61 976	8	85	3-G14
82 48 015	8	187	3-K20	82 51 613	8	75	3-G04	82 58 360	8	185	3-K18	82 61 976	8	91	3-G20
82 48 023	8	187	3-K20	82 51 621	8	75	3-G04	82 58 378	8	185	3-K18	82 61 984	8	85	3-G14
82 48 049	8	187	3-K20	82 51 639	8	77	3-G06	82 58 386	8	185	3-K18	82 61 984	8	91	3-G20
82 48 262	8	15	3-D16	82 51 944	8	187	3-K20	82 58 394	8	185	3-K18	82 62 008	8	19	3-D20
82 48 270	8	15	3-D16	82 52 314	8	55	3-F08	82 58 402	8	185	3-K18	82 62 057	8	65	3-F18
82 48 288	8	15	3-D16	82 52 363	8	55	3-F08	82 58 410	8	185	3-K18	82 62 065	8	67	3-F20
82 48 379	8	15	3-D16	82 52 462	8	55	3-F18	82 58 428	8	185	3-K18	82 62 354	8	19	3-D20
82 48 437	8	15	3-D16	82 52 470	8	65	3-F18	82 58 832	8	187	3-K20	82 62 388	8	185	3-K18
82 48 452	8	15	3-D16	82 52 470	8	73	3-G02	82 58 840	8	187	3-K20	82 62 453	8	65	3-F18
82 48 528	8	15	3-D16	82 52 553	8	11	3-A12	82 58 872	8	37	3-E14	82 62 537	8	23	3-D24
82 48 577	8	15	3-D16	82 52 553	8	55	3-F08	82 59 061	8	11	3-D12	82 62 537	8	25	3-E02
82 48 585	8	15	3-D16	82 52 611	8	65	3-F18	82 59 178	8	89	3-G18	82 62 586	8	61	3-F14
82 48 593	8	15	3-D16	82 52 868	8	55	3-F08	82 59 186	8	86	3-G18	82 62 602	8	29	3-E06
82 48 619	8	15	3-D16	82 53 130	8	23	3-D24	82 59 194	8	89	3-G18	82 62 610	8	29	3-E06
82 48 775	8	15	3-D16	82 53 148	8	23	3-D24	82 59 236	8	89	3-G18	82 62 750	8	45	3-E22
82 48 805	8	15	3-D16	82 53 156	8	23	3-D24	82 59 244	8	89	3-G18	82 62 750	8	51	3-F04
82 48 813	8	51	3-F04	82 53 163	8	23	3-D24	82 59 251	8	86	3-G14	82 62 768	8	45	3-E22
82 49 021	8	51	3-F04	82 53 171	8	65	3-F18	82 59 251	8	89	3-G18	82 62 768	8	51	3-F04
82 49 161	8	59	3-F12	82 53 197	8	77	3-G06	82 59 289	8	85	3-G14	82 62 941	8	3	3-B04
82 49 310	8	187	3-K20	82 53 239	8	23	3-D24	82 59 289	8	89	3-G18	82 62 958	8	11	3-D12
82 49 328	8	187	3-K20	82 53 395	8	55	3-F08	82 59 378	8	89	3-G18	82 62 966	8	19	3-D20
82 49 435	8	15	3-D16	82 53 411	8	55	3-F08	82 59 384	8	89	3-G18	82 62 974	8	11	3-D12
82 49 450	8	15	3-D16	82 53 429	8	65	3-F18	82 59 855	8	83	3-G12	82 63 352	8	187	3-K20
82 49 466	8	15	3-D16	82 53 635	8	75	3-G04	82 59 863	8	83	3-G12	82 63 550	8	37	3-E14
82 49 476	8	15	3-D16	82 53 643	8	75	3-G04	82 60 135	8	61	3-G10	82 63 915	8	187	3-K20
82 49 526	8	15	3-D16	82 53 832	8	55	3-F08	82 60 143	8	61	3-G10	82 63 949	8	187	3-K20
82 49 542	8	15	3-D16	82 55 242	8	23	3-D24	82 60 150	8	81	3-G10	82 63 956	8	187	3-K20
82 49 559	8	15	3-D16	82 55 267	8	69	3-F22	82 60 168	8	81	3-G10	82 63 998	8	187	3-K20
82 49 567	8	15	3-D16	82 55 911	8	37	3-E14	82 60 182	8	25	3-E02	82 64 095	8	43	3-E20
82 49 583	8	15	3-D16	82 55 929	8	37	3-E14	82 60 219	8	25	3-E02	82 64 095	8	47	3-E24
82 49 625	8	15	3-D16	82 56 273	8	39	3-E16	82 60 226	8	25	3-E02	82 64 103	8	43	3-E20
82 49 633	8	15	3-D16	82 56 323	8	87	3-G16	82 60 234	8	25	3-E02	82 64 103	8	47	3-E24
82 49 682	8	15	3-D16	82 56 323	8	93	3-G22	82 60 242	8	25	3-E02	82 64 202	8	15	3-D16
82 49 724	8	15	3-D16	82 56 372	8	43	3-E20	82 60 290	8	81	3-G10	82 64 236	8	85	3-G14
82 49 732	8	15	3-D16	82 56 372	8	49	3-F02	82 60 408	8	81	3-G10	82 64 244	8	85	3-G14
82 49 740	8	15	3-D16	82 56 380	8	43	3-E20	82 60 416	8	25	3-E02	82 64 376	8	39	3-F16
82 49 765	8	15	3-D16	82 56 380	8	49	3-F02	82 60 424	8	25	3-E02	82 64 657	8	37	3-E14
82 49 872	8	13	3-D14	82 56 778	8	15	3-D16	82 60 906	8	55	3-F08	82 64 665	8	37	3-E14
82 49 880	8	13	3-D14	82 56 785	8	23	3-D24	82 60 747	8	19	3-D20	82 64 681	8	37	3-E14
82 49 914	8	59	3-F12	82 56 794	8	23	3-D24	82 61 133	8	65	3-F18	82 64 707	8	15	3-D16
82 49 922	8	59	3-F12	82 56 810	8	39	3-E16	82 61 232	8	65	3-F18	82 64 962	8	24	3-G02
82 49 955	8	81	3-G10	82 56 836	8	185	3-K18	82 61 240	8	65	3-F18	82 64 962	8	69	1-F20
82 49 963	8	81	3-G10	82 56 919	8	39	3-E16	82 61 299	8	37	3-E14	82 66 017	8	37	3-E14
82 49 989	8	43	3-E20	82 57 016	8	55	3-F08	82 61 331	8	65	3-F18	82 66 025	8	37	3-E14
82 49 997	8	51	3-F04	82 57 401	8	185	3-K18	82 61 349	8	65	3-F18	82 66 454	8	9	3-D10
82 50 573	8	23	3-D24	82 57 496	8	39	3-E16	82 61 364	8	37	3-E14	82 66 462	8	9	3-D10
82 50 573	8	25	3-E02	82 57 503	8	39	3-E16	82 61 547	8	19	3-D20	82 66 553	8	187	3-K20
82 50 581	8	23	3-D24	82 57 511	8	75	3-G04	82 61 638	8	81	3-G10	82 66 561	8	187	3-K20
82 50 581	8	25	3-E02	82 57 511	8	81	3-G10	82 61 646	8	81	3-G10	82 66 579	8	185	3-K18
82 51 217	8	55	3-F08	82 57 529	8	75	3-G04	82 61 653	8	81	3-G10	82 66 579	8	187	3-K20
82 51 274	8	75	3-G04	82 57 529	8	81	3-G10	82 61 661	8	81	3-G10	82 66 652	8	79	3-G04
82 51 282	8	75	3-G04	82 58 212	8	187	3-K20	82 61 679	8	85	3-F18	82 66 652	8	83	3-G10

NUMERICAL REGISTER				NUMMERREGISTER				Date Datum				Group Grupp		Page Side	
								1987-10				10A		9	
Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
82 66 678	8	85	3-G14	82 69 011	8	89	3-G18	82 72 494	8	19	3-D20	82 74 862	8	41	3-E18
82 66 686	8	85	3-G14	82 69 029	8	89	3-G18	82 72 643	8	83	3-G12	82 74 896	3	27	2-G04
82 66 736	8	187	3-K20	82 69 052	8	15	3-D16	82 72 676	8	51	3-F04	82 74 946	8	37	3-E14
82 66 744	8	185	3-K18	82 69 078	0	30	1-G07	82 72 684	8	51	3-F04	82 74 979	3	27	2-G04
82 66 777	8	185	3-K18	82 69 086	0	30	1-G07	82 72 692	8	45	3-E22	82 75 240	8	77	3-G06
82 66 785	8	185	3-K18	82 69 193	8	63	3-F16	82 72 700	8	45	3-E22	82 75 240	8	81	3-G10
82 66 793	8	187	3-K20	82 69 227	0	30	1-G07	82 72 791	8	37	3-E14	82 75 257	8	77	3-G06
82 66 835	0	24	1-G01	82 69 235	8	63	3-F16	82 73 047	8	89	3-G18	82 75 257	8	81	3-G10
82 66 835	8	69	3-F22	82 69 250	8	63	3-F16	82 73 054	8	85	3-G14	82 75 273	8	75	3-G04
82 66 843	8	15	3-D16	82 69 264	8	63	3-F16	82 73 245	8	85	3-G14	82 75 281	8	75	3-G04
82 66 876	8	11	3-D12	82 69 375	8	51	3-F04	82 73 302	8	39	3-E16	82 75 299	8	75	3-G04
82 66 884	8	69	3-F22	82 69 383	8	51	3-F04	82 73 468	8	69	3-F22	82 75 307	8	75	3-G04
82 66 900	8	185	3-K18	82 69 425	8	79	3-G08	82 73 799	8	47	3-E24	82 75 315	8	81	3-G10
82 66 926	8	39	3-E16	82 69 425	8	83	3-G12	82 73 807	8	49	3-F02	82 75 323	8	81	3-G10
82 66 942	8	37	3-E14	82 69 433	8	77	3-G08	82 73 815	8	39	3-E16	82 75 331	8	81	3-G10
82 67 007	8	79	3-G08	82 69 433	8	83	3-G12	82 74 011	8	45	3-E22	82 75 349	8	81	3-G10
82 67 007	8	83	3-G12	82 69 450	8	79	3-G08	82 74 029	8	45	3-E22	82 75 356	8	81	3-G10
82 67 015	8	77	3-G06	82 69 458	8	83	3-G12	82 74 037	8	51	3-F04	82 75 364	8	81	3-G10
82 67 015	8	83	3-G12	82 69 557	8	77	3-G06	82 74 045	8	51	3-F04	82 75 372	8	81	3-G10
82 67 049	8	11	3-D12	82 69 565	8	77	3-G06	82 74 151	8	65	3-F18	82 75 380	8	81	3-G10
82 67 096	8	69	3-F22	82 69 615	8	75	3-G04	82 74 185	8	39	3-E16	82 75 398	8	19	3-D20
82 67 130	8	51	3-F04	82 69 623	8	75	3-G04	82 74 219	8	19	3-D20	82 75 406	8	19	3-D20
82 67 163	8	91	3-G20	82 69 631	8	75	3-G04	82 74 227	8	19	3-D20	82 75 414	8	77	3-G06
82 67 205	8	69	3-F22	82 69 649	8	75	3-G04	82 74 235	8	19	3-D20	82 75 414	8	81	3-G10
82 67 221	8	79	3-G08	82 69 656	8	39	3-E16	82 74 243	8	19	3-D20	82 75 477	8	37	3-E14
82 67 221	8	83	3-G12	82 69 672	8	39	3-E16	82 74 250	8	19	3-D20	82 75 885	8	79	3-G08
82 67 270	8	85	3-G14	82 69 705	8	39	3-E16	82 74 268	8	19	3-D20	82 75 885	8	83	3-G12
82 67 270	8	89	3-G18	82 69 748	8	85	3-G14	82 74 318	8	19	3-D20	82 75 893	8	79	3-G08
82 67 296	8	11	3-D12	82 69 987	8	63	3-F16	82 74 326	8	19	3-D20	82 75 893	8	83	3-G12
82 67 304	8	9	3-D10	82 71 611	8	51	3-F04	82 74 334	8	27	3-E04	82 76 057	8	19	3-D20
82 67 395	8	41	3-E18	82 71 629	8	51	3-F04	82 74 342	8	27	3-E04	82 76 065	8	19	3-D20
82 67 395	8	145	3-J02	82 71 652	8	187	3-K20	82 74 359	8	19	3-D20	82 76 107	8	19	3-D20
82 67 601	8	37	3-E14	82 71 660	8	187	3-K20	82 74 367	8	19	3-D20	82 76 131	8	39	3-E14
82 67 890	8	83	3-G12	82 71 678	8	187	3-K20	82 74 383	8	9	3-D10	82 76 461	8	65	3-G14
82 67 908	8	3	3-B04	82 71 819	8	165	3-J22	82 74 391	8	9	3-D10	82 76 479	8	85	3-G18
82 67 932	8	15	3-D16	82 71 827	8	165	3-J22	82 74 425	8	13	3-D14	82 76 479	8	89	3-G14
82 67 981	8	187	3-K20	82 71 843	8	165	3-J22	82 74 433	8	15	3-D16	82 76 487	8	89	3-G18
82 67 989	8	187	3-K20	82 71 850	8	165	3-J22	82 74 490	8	9	3-D10	82 76 503	8	91	3-G20
82 68 005	8	187	3-K20	82 71 868	8	165	3-J22	82 74 508	8	9	3-D10	82 76 511	8	91	3-G20
82 68 013	8	187	3-K20	82 71 876	8	165	3-J22	82 74 516	8	27	3-E04	82 76 529	8	91	3-G20
82 68 021	8	187	3-K20	82 71 884	8	165	3-J22	82 74 573	8	89	3-G18	82 76 727	8	9	3-D10
82 68 039	8	187	3-K20	82 71 892	8	165	3-J22	82 74 581	8	11	3-D12	82 76 743	8	37	3-E14
82 68 088	8	187	3-K20	82 71 900	8	165	3-J22	82 74 599	8	9	3-D10	82 76 776	8	63	3-E14
82 68 096	8	43	3-E20	82 71 918	8	165	3-J22	82 74 607	8	9	3-D10	82 76 917	8	65	3-F18
82 68 138	8	47	3-E24	82 71 926	8	165	3-J22	82 74 615	8	9	3-D10	82 76 925	8	65	3-F18
82 68 500	8	69	3-F22	82 71 934	8	163	3-J20	82 74 623	8	9	3-D10	82 77 204	8	9	3-D10
82 68 518	8	39	3-E16	82 71 942	8	163	3-J20	82 74 631	8	21	3-D22	82 77 220	8	9	3-D10
82 68 526	8	63	3-F16	82 71 959	8	163	3-J20	82 74 649	8	21	3-D22	82 77 246	8	37	3-E14
82 68 542	8	63	3-F16	82 71 967	8	163	3-J20	82 74 706	8	19	3-D20	82 77 485	8	77	3-G06
82 68 590	8	95	3-G14	82 71 975	8	163	3-J20	82 74 714	8	9	3-D10	82 77 485	8	81	3-G10
82 68 708	8	85	3-G14	82 71 983	8	163	3-J20	82 74 755	8	19	3-D20	82 77 493	8	19	3-D20
82 68 757	8	85	3-G14	82 71 991	8	163	3-J20	82 74 771	8	9	3-D10	82 77 512	8	45	3-E22
82 68 765	8	85	3-G14	82 72 007	8	163	3-J20	82 74 789	8	9	3-D10	82 77 527	8	45	3-E22
82 68 773	8	89	3-G18	82 72 114	8	63	3-F16	82 74 797	8	21	3-D22	82 77 626	8	95	3-F18
82 68 781	8	89	3-G18	82 72 130	8	63	3-F16	82 75 805	8	21	3-D22	82 77 667	8	12	1-K02
82 68 914	8	83	3-G12	82 72 189	8	63	3-F16	82 74 813	8	9	3-D10	82 78 020	8	185	3-K18
82 68 922	8	83	3-G12	82 72 197	8	21	3-D22	82 74 821	8	9	3-D10	82 78 178	8	9	3-D10
82 68 930	8	89	3-G18	82 72 205	8	21	3-D22	82 74 839	8	89	3-G18	82 78 343	8	37	3-E14
82 68 948	8	89	3-G18	82 72 261	8	63	3-F16	82 74 847	8	89	3-G18	82 78 392	8	11	3-D12
82 69 003	8	37	3-E14	82 72 387	8	63	3-F16	82 74 854	8	41	3-E18	82 78 426	8	85	3-F18

Page Side	Group Grupp	Date Datum	NUMERICAL REGISTER				NUMMERREGISTER				
10	10A	1987-10									
Part No	Gr	Page Grid	Part No	Gr	Page Grid	Part No	Gr	Page Grid	Part No	Gr	Page Grid
Art nr	Sida	Koord	Art nr	Sida	Koord	Art nr	Sida	Koord	Art nr	Sida	Koord
82 78 434	8	65 3-F18	82 87 179	8	65 3-F18	82 90 520	1	33 1-I10	83 04 271	2	99 2-E04
82 78 459	8	65 3-G14	82 87 187	8	65 3-F18	82 90 538	1	33 1-I10	83 04 875	3	13 2-F14
82 78 459	8	91 3-G20	82 87 229	8	63 3-F16	82 90 546	1	35 1-I12	83 04 941	3	13 2-F14
82 78 509	8	37 3-E14	82 87 245	8	63 3-F16	82 90 561	1	35 1-I12	83 05 294	2	29 2-B06
82 78 517	8	185 3-K18	82 87 252	8	63 3-F16	82 90 562	1	33 1-I10	83 05 294	2	33 2-B10
82 78 525	8	185 3-K18	82 87 278	8	63 3-F16	82 90 660	1	33 1-I10	83 05 302	2	29 2-B06
82 78 558	8	37 3-E14	82 87 666	8	11 3-D12	82 90 694	1	35 1-I12	83 05 302	2	33 2-B10
82 78 558	8	41 3-E18	82 87 666	8	41 3-E18	82 90 702	1	35 1-I12	83 05 328	2	29 2-B06
82 78 563	8	55 3-F08	82 87 674	8	77 3-G08	82 90 725	1	33 1-I10	83 05 336	0	3 1-F04
82 78 218	8	55 3-F08	82 87 732	8	75 3-G04	82 90 801	1	33 1-I10	83 05 344	2	29 2-B06
82 79 226	8	9 3-D10	82 87 740	8	75 3-G04	82 91 023	1	35 1-I12	83 05 351	2	29 2-B06
82 79 457	8	9 3-D10	82 87 757	8	79 3-G08	82 91 270	1	33 1-I10	83 05 368	2	29 2-B06
82 79 812	8	55 3-F08	82 87 765	8	79 3-G08	82 91 286	1	33 1-I10	83 05 419	0	3 1-F04
82 83 517	8	11 3-D12	82 87 773	8	79 3-G08	82 91 320	1	33 1-I10	83 05 484	0	3 1-F04
82 83 525	8	11 3-D12	82 87 781	8	79 3-G08	82 91 338	1	33 1-I10	83 05 484	0	4 1-F05
82 83 533	8	11 3-D12	82 87 799	8	79 3-G08	82 91 346	1	33 1-I10	83 05 526	2	31 2-B06
82 83 590	8	15 3-D16	82 88 029	8	15 3-D16	82 91 361	1	33 1-I10	83 05 567	2	33 2-B10
82 83 608	8	15 3-D16	82 88 144	8	55 3-F08	82 91 379	1	33 1-I10	83 05 575	0	3 1-F04
82 83 665	8	23 3-D24	82 88 151	8	85 3-G14	82 91 387	1	33 1-I10	83 05 633	2	29 2-B06
82 83 665	8	25 3-E02	82 88 151	8	91 3-G20	82 91 551	1	35 1-I12	83 05 641	2	29 2-B06
82 83 715	8	63 3-F16	82 88 166	8	87 3-G16	82 91 577	1	35 1-I12	83 05 641	2	33 2-B10
82 83 772	8	55 3-F08	82 88 169	8	91 3-G20	82 91 718	1	33 1-I10	83 05 658	2	29 2-B06
82 83 780	8	55 3-F08	82 88 177	8	165 3-J22	82 91 742	1	33 1-I10	83 05 666	2	29 2-B06
82 83 798	4	33 2-K10	82 88 193	8	15 3-D16	82 91 767	1	35 1-I12	83 05 773	0	3 1-F04
82 83 798	4	55 2-L08	82 88 425	8	15 3-D16	82 91 775	1	35 1-I12	83 05 773	0	4 1-F05
82 83 947	8	11 3-D12	82 89 516	8	77 3-G08	82 91 874	1	33 1-I10	83 05 807	2	29 2-B06
82 85 878	8	9 3-D10	82 88 524	8	77 3-G08	82 91 890	1	33 1-I10	83 05 807	2	33 2-B10
82 85 710	8	61 3-F14	82 88 598	8	15 3-D16	82 91 908	1	33 1-I10	83 05 823	0	3 1-F04
82 85 744	8	61 3-F14	82 88 714	8	43 3-E20	82 91 973	1	33 1-I10	83 05 823	0	4 1-F05
82 85 843	8	55 3-F08	82 88 722	8	43 3-E20	82 92 088	1	33 1-I10	83 05 849	0	3 1-F04
82 86 072	8	55 3-F08	82 88 733	8	47 3-E24	82 92 153	1	33 1-I10	83 05 849	0	4 1-F05
82 86 148	8	19 3-D20	82 88 771	8	47 3-E24	82 92 161	1	35 1-I12	83 07 407	4	5 2-J06
82 86 213	8	15 3-D16	82 88 789	8	19 3-D20	82 92 179	1	35 1-I12	83 07 498	0	13 1-F14
82 86 296	8	33 3-E10	82 88 788	8	165 3-J22	82 92 187	1	35 1-I12	83 07 498	4	5 2-J06
82 86 296	8	37 3-E14	82 89 191	8	37 3-E14	82 92 237	1	35 1-I12	83 07 888	0	12 1-F13
82 86 304	8	23 3-D24	82 89 266	8	87 3-G16	82 92 260	1	35 1-I12	83 08 215	0	4 1-F05
82 86 304	8	25 3-E02	82 89 268	8	93 3-G22	82 92 278	1	35 1-I12	83 08 215	2	9 2-A10
82 86 312	8	79 3-G08	82 89 423	8	19 3-D20	82 92 302	1	33 1-I10	83 08 223	0	4 1-F05
82 86 387	8	9 3-D10	82 89 507	8	9 3-D10	82 92 310	1	33 1-I10	83 08 223	0	9 2-A10
82 86 395	8	19 3-D20	82 89 806	8	9 3-D10	82 92 326	1	33 1-I10	83 08 231	0	4 1-F05
82 86 403	8	19 3-D20	82 90 140	1	33 1-I10	82 92 336	1	33 1-I10	83 08 231	2	9 2-A10
82 86 411	8	9 3-D10	82 90 157	1	33 1-I10	82 92 344	1	35 1-I12	83 08 249	0	4 1-F05
82 86 429	8	15 3-D16	82 90 165	1	33 1-I10	82 92 351	1	35 1-I12	83 08 249	2	9 2-A10
82 86 528	8	37 3-E14	82 90 173	1	33 1-I10	82 92 369	1	35 1-I12	83 08 256	0	4 1-F05
82 86 551	8	55 3-F08	82 90 223	1	33 1-I10	82 92 377	1	35 1-I12	83 08 256	2	9 2-A10
82 86 759	8	91 3-G20	82 90 231	1	33 1-I10	82 92 385	1	35 1-I12	83 08 264	0	4 1-F05
82 86 767	8	91 3-G20	82 90 255	1	33 1-I10	82 92 383	1	35 1-I12	83 08 264	2	9 2-A10
82 86 791	8	89 3-G18	82 90 264	1	33 1-I10	82 92 427	1	35 1-I12	83 08 272	0	4 1-F05
82 86 809	8	89 3-G18	82 90 272	1	35 1-I12	82 92 435	1	35 1-I12	83 08 272	2	9 2-A10
82 86 833	8	47 3-E24	82 90 280	1	35 1-I12	83 00 469	0	12 1-F13	83 08 280	0	4 1-F05
82 86 841	8	47 3-E24	82 90 298	1	33 1-I10	83 00 469	4	5 2-J06	83 08 280	2	9 2-A10
82 86 858	8	59 3-F12	82 90 306	1	33 1-I10	83 00 725	4	13 2-J14	83 08 298	0	4 1-F05
82 86 890	8	91 3-G20	82 90 330	1	33 1-I10	83 00 725	4	17 2-J18	83 08 298	2	9 2-A10
82 86 973	8	77 3-G06	82 90 371	1	33 1-I10	83 00 725	4	43 2-K20	83 08 306	0	4 1-F05
82 86 981	8	77 3-G06	82 90 389	1	33 1-I10	83 03 141	2	11 2-A12	83 08 306	2	9 2-A10
82 87 070	8	13 3-D14	82 90 405	1	33 1-I10	83 04 206	0	7 1-F08	83 08 371	4	41 2-K18
82 87 112	8	55 3-F08	82 90 421	1	33 1-I10	83 04 206	2	99 2-E04	83 08 389	4	53 2-L00
82 87 138	8	43 3-E20	82 90 439	1	33 1-I10	83 04 255	0	7 1-F08	83 08 652	0	3 1-F04
82 87 138	8	49 3-F02	82 90 447	1	33 1-I10	83 04 255	2	99 2-E04	83 08 652	2	29 2-B06
82 87 153	8	49 3-F02	82 90 470	1	33 1-I10	83 04 271	0	7 1-F08	83 08 678	0	3 1-F04

NUMERICAL REGISTER						NUMMERREGISTER						Date Datum	Group Grupp	Page Sida	
												1987-10	10A	11	
Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
83 08 850	2	63	2-C16	83 17 828	2	73	2-D02	83 22 604	2	55	2-C08	83 26 712	2	95	2-D24
83 08 892	0	4	1-F05	83 17 869	4	55	2-L08	83 22 612	2	55	2-C08	83 26 712	2	97	2-E02
83 08 892	2	29	2-B06	83 17 893	2	37	2-B14	83 22 729	2	43	2-B20	83 26 720	2	43	2-B20
83 08 892	2	33	2-B10	83 17 918	2	37	2-B14	83 22 729	2	47	2-B24	83 26 720	2	51	2-C04
83 08 983	2	29	2-B06	83 17 919	2	39	2-B16	83 22 729	2	53	2-C06	83 27 561	2	37	2-B14
83 08 983	2	33	2-B10	83 18 339	2	37	2-B14	83 22 927	2	49	2-C02	83 27 579	2	49	2-C02
83 09 031	2	29	2-B06	83 18 352	2	37	2-B14	83 22 927	2	53	2-C06	83 27 678	2	37	2-B14
83 09 031	2	33	2-B10	83 19 329	2	37	2-B14	83 23 008	2	59	2-C12	83 27 843	2	61	2-C14
83 09 049	2	33	2-B10	83 19 485	2	55	2-C08	83 23 024	2	55	2-C08	83 27 843	3	17	2-F18
83 09 064	0	3	1-F04	83 19 618	3	13	2-F14	83 23 214	2	75	2-D04	83 27 843	3	19	2-F20
83 09 072	0	3	1-F04	83 19 675	2	49	2-C02	83 23 263	2	75	2-D04	83 27 850	3	17	2-F18
83 09 072	0	4	1-F05	83 19 725	2	55	2-C06	83 23 362	2	61	2-C14	83 27 866	2	61	2-C14
83 09 080	2	29	2-B06	83 19 815	2	49	2-C02	83 23 362	2	81	2-D10	83 27 866	2	65	2-C18
83 09 080	2	33	2-B10	83 19 915	2	51	2-C04	83 23 362	3	17	2-F18	83 27 866	3	17	2-F18
83 09 080	2	33	2-B10	83 19 915	2	53	2-C06	83 23 412	2	43	2-B20	83 27 866	3	19	2-F20
83 09 098	0	3	1-F04	83 19 915	2	57	2-C10	83 23 412	2	47	2-B24	83 28 098	2	43	2-B20
83 09 098	0	4	1-F05	83 19 915	2	91	2-D20	83 23 412	2	51	2-C04	83 28 098	2	47	2-B24
83 10 353	2	29	2-B06	83 19 931	2	57	2-C10	83 23 438	2	55	2-C08	83 28 098	2	53	2-C08
83 10 393	2	33	2-B10	83 20 301	2	61	2-C14	83 23 917	2	47	2-B24	83 28 148	2	89	2-D18
83 11 425	4	43	2-K20	83 20 319	2	57	2-C10	83 23 941	2	43	2-B20	83 28 197	2	89	2-D18
83 11 433	4	43	2-K20	83 20 749	2	49	2-C02	83 23 941	2	47	2-B24	83 28 270	4	47	2-K24
83 11 482	4	13	2-J14	83 20 749	2	53	2-C06	83 23 941	2	51	2-C04	83 28 304	4	47	2-K24
83 11 482	4	17	2-J18	83 20 962	2	81	2-D10	83 24 006	2	55	2-C08	83 28 312	4	47	2-K24
83 11 482	4	43	2-K20	83 20 970	2	81	2-D10	83 24 022	2	57	2-C10	83 28 338	4	49	2-L02
83 11 896	4	33	2-K10	83 21 044	2	37	2-B14	83 24 030	2	57	2-C10	83 28 346	2	43	2-B20
83 11 904	4	33	2-K10	83 21 044	2	39	2-B16	83 24 030	2	61	2-C14	83 28 346	2	49	2-C02
83 11 920	4	33	2-K10	83 21 051	2	37	2-B14	83 24 048	2	49	2-C02	83 28 346	2	53	2-C06
83 12 241	2	25	2-B02	83 21 051	2	39	2-B16	83 24 048	2	51	2-C04	83 28 346	4	45	2-K22
83 14 395	0	7	1-F08	83 21 682	2	37	2-B14	83 25 003	4	45	2-K22	83 28 601	2	49	2-C02
83 14 395	0	16	1-F17	83 21 769	2	49	2-C02	83 25 136	0	14	1-F15	83 28 601	2	53	2-C06
83 14 395	2	97	2-E02	83 21 769	2	49	2-C02	83 25 136	0	14	1-F15	83 28 601	2	53	2-C06
83 14 445	0	7	1-F08	83 21 804	4	13	2-J14	83 25 144	0	14	1-F15	83 28 643	2	49	2-C02
83 14 445	0	16	1-F17	83 21 804	4	17	2-J18	83 25 144	4	43	2-K20	83 28 650	2	49	2-C02
83 14 445	2	97	2-E02	83 21 804	4	43	2-K20	83 25 151	0	14	1-F15	83 28 726	2	89	2-D18
83 14 452	0	7	1-F08	83 21 911	2	7	2-A08	83 25 151	4	43	2-K20	83 28 759	2	89	2-D18
83 14 452	0	6	1-F09	83 22 109	2	105	2-E08	83 25 326	2	37	2-B14	83 28 783	2	85	2-D14
83 14 452	0	16	1-F17	83 22 125	2	105	2-E10	83 25 334	4	47	2-K24	83 23 791	2	43	2-B20
83 14 452	2	96	2-D24	83 22 133	2	103	2-E08	83 25 342	4	47	2-K24	83 28 809	2	43	2-B20
83 14 452	2	97	2-E02	83 22 141	2	31	2-B08	83 25 565	2	103	2-E08	83 28 817	2	43	2-B20
83 14 494	2	59	2-C12	83 22 166	2	31	2-B08	83 25 581	2	37	2-B14	83 28 825	2	43	2-B20
83 15 343	2	103	2-E08	83 22 174	2	29	2-B06	83 25 649	2	43	2-B20	83 28 841	2	85	2-D14
83 15 392	2	29	2-B06	83 22 174	2	35	2-B12	83 25 656	2	39	2-B16	83 28 881	2	85	2-D14
83 15 467	2	43	2-B20	83 22 182	4	33	2-K10	83 25 656	2	43	2-B20	83 29 104	2	43	2-B20
83 15 467	2	47	2-B24	83 22 216	3	13	2-F14	83 25 656	2	51	2-C04	83 29 120	2	75	2-D04
83 15 467	2	53	2-C06	83 22 224	3	13	2-F14	83 25 722	4	47	2-K24	83 29 153	2	85	2-D14
83 15 475	2	43	2-B20	83 22 273	3	13	2-F14	83 25 789	0	16	1-F17	83 29 229	4	33	2-C10
83 15 475	2	47	2-B24	83 22 281	3	13	2-F14	83 25 797	0	16	1-F17	83 29 369	2	83	2-D12
83 15 475	2	51	2-C04	83 22 307	3	13	2-F14	83 25 805	0	16	1-F17	83 29 567	2	83	2-D12
83 15 558	0	22	1-F23	83 22 315	3	13	2-F14	83 25 896	2	75	2-D04	83 29 617	2	43	2-B20
83 15 558	0	23	1-F24	83 22 323	3	13	2-F14	83 26 209	2	43	2-B20	83 29 617	2	51	2-C04
83 15 558	5	3	3-A04	83 22 331	2	103	2-E08	83 26 209	2	51	2-C04	83 29 666	2	75	2-D04
83 15 558	5	9	3-A10	83 22 364	2	29	2-B06	83 26 480	2	37	2-B14	83 29 997	2	83	2-D12
83 15 558	7	3	3-C04	83 22 384	2	35	2-B12	83 26 480	2	39	2-B16	83 30 003	2	83	2-D12
83 15 558	7	7	3-C08	83 22 380	2	55	2-C08	83 26 621	2	39	2-B16	83 30 268	0	29	1-G05
83 15 608	2	105	2-E10	83 22 471	2	55	2-C08	83 26 704	2	49	2-C02	83 30 268	0	28	1-G06
83 15 673	2	59	2-C12	83 22 471	2	57	2-C10	83 26 704	2	53	2-C06	83 30 268	2	91	2-D20
83 16 382	2	13	2-B20	83 22 539	2	55	2-C08	83 26 704	2	57	2-C10	83 30 300	2	83	2-D12
83 17 596	4	26	3-K10	83 22 554	2	55	2-C08	83 26 712	0	7	1-F08	83 30 318	2	83	2-D12
83 17 828	4	33	3-G03	83 22 570	2	55	2-C08	83 26 712	0	8	1-F09	83 30 367	2	47	2-B21
83 17 828	0	28	1-G05	83 22 588	2	55	2-C08	83 26 712	2	49	2-C02	83 30 367	2	53	2-C06
83 17 828	2	69	2-C22	83 22 596	2	55	2-C08	83 26 712	2	53	2-C06	83 30 516	2	83	2-D12

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrial system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

0	General	1-A02
1	Tools	1-H02
2	Engines	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

Page Side	Group Grupp	Date Datum	NUMERICAL REGISTER				NUMMERREGISTER				
16	10A	1987-10									
Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
84 06 142	8	91	3-G20	84 26 264	2	107	2-E12	84 51 985	8	59	3-F12
84 06 662	8	137	3-G18	84 27 841	8	145	3-J02	84 51 973	8	55	3-F08
84 07 488	8	85	3-G14	84 28 211	8	97	3-H02	84 51 973	8	59	3-F12
84 07 488	8	91	3-G20	84 28 237	8	97	3-H02	84 51 981	8	55	3-F08
84 07 579	8	131	3-H12	84 29 037	8	127	3-J08	84 51 981	8	59	3-F12
84 07 579	8	135	3-I16	84 29 045	8	127	3-J08	84 52 252	8	55	3-F08
84 07 983	4	7	2-J08	84 29 128	8	151	3-J08	84 52 252	8	59	3-F12
84 07 983	5	11	3-A12	84 29 177	8	127	3-J08	84 52 898	8	31	3-E08
84 07 983	8	127	3-J08	84 29 185	8	127	3-J08	84 52 898	8	105	3-H10
84 08 072	8	129	3-I10	84 29 235	8	127	3-J08	84 52 898	8	115	3-H20
84 08 270	8	59	3-F12	84 29 441	8	59	3-F12	84 53 136	8	141	3-I22
84 08 286	8	59	3-F12	84 33 237	8	127	3-J08	84 53 227	8	59	3-F12
84 08 361	8	59	3-F12	84 34 078	8	113	3-H18	84 53 680	8	125	3-J08
84 08 480	8	53	3-F06	84 34 639	8	127	3-J08	84 53 755	8	45	3-E22
84 08 478	8	53	3-F06	84 34 912	8	127	3-J08	84 53 755	8	51	3-F04
84 09 575	8	79	3-G08	84 35 315	8	127	3-J08	84 54 258	8	45	3-E22
84 09 708	8	135	3-G16	84 35 323	8	127	3-J08	84 54 522	8	121	3-I02
84 10 102	5	13	3-A14	84 35 331	8	129	3-J10	84 54 522	8	129	3-I02
84 10 961	0	31	1-G08	84 35 349	8	129	3-J10	84 54 785	8	135	3-I16
84 10 961	8	113	3-H18	84 35 356	8	129	3-J10	84 54 803	8	133	3-I14
84 10 961	8	121	3-I02	84 35 394	8	129	3-J10	84 54 803	8	135	3-I16
84 10 961	8	131	3-I12	84 36 933	8	99	3-H04	84 56 006	8	45	3-E22
84 10 961	8	135	3-I16	84 36 941	8	99	3-H04	84 56 006	8	49	3-F02
84 10 961	8	145	3-J02	84 37 253	8	35	3-E12	84 56 592	8	45	3-E22
84 10 961	8	149	3-J06	84 38 376	8	95	3-G24	84 56 592	8	45	3-E22
84 12 256	0	24	1-G01	84 38 400	8	95	3-G24	84 56 808	8	46	3-F02
84 12 256	8	85	3-G14	84 40 380	8	135	3-I16	84 57 541	8	133	3-I14
84 12 256	8	89	3-G18	84 40 638	8	137	3-I18	84 57 541	8	137	3-I18
84 12 256	8	91	3-G20	84 40 648	8	137	3-I18	84 57 566	8	43	3-E20
84 13 429	8	113	3-H18	84 40 653	8	137	3-I18	84 57 566	8	49	3-F02
84 13 429	8	121	3-I02	84 40 802	8	137	3-I18	84 57 723	8	125	3-J08
84 13 429	8	139	3-I20	84 41 396	8	131	3-I12	84 57 748	8	127	3-J08
84 13 429	8	153	3-J10	84 41 396	8	135	3-I16	84 58 166	8	125	3-J08
84 13 742	8	53	3-F06	84 41 420	8	137	3-I18	84 58 176	8	125	3-J08
84 14 856	8	99	3-H04	84 41 438	8	137	3-I18	84 58 598	8	133	3-I14
84 14 914	8	131	3-I12	84 41 503	8	137	3-I18	84 58 598	8	137	3-I18
84 14 955	8	131	3-I12	84 41 503	8	153	3-J10	84 58 713	8	43	3-E20
84 14 963	8	131	3-I12	84 41 525	8	51	3-F04	84 58 721	8	43	3-E20
84 15 580	8	147	3-J04	84 44 360	8	121	3-I02	84 58 721	8	21	3-D22
84 15 580	8	151	3-J08	84 44 408	8	121	3-I02	84 59 487	8	21	3-D22
84 5 887	8	51	3-F04	84 44 440	8	151	3-J08	84 59 505	8	27	3-E04
84 5 929	8	51	3-F04	84 44 440	8	153	3-J10	84 59 513	8	9	3-D10
84 5 994	8	53	3-F06	84 44 614	8	51	3-F04	84 60 149	8	55	3-F08
84 16 000	8	53	3-F06	84 45 837	8	49	3-F02	84 60 172	8	55	3-F08
84 19 327	8	127	3-J08	84 45 785	8	53	3-F06	84 60 743	8	173	3-K06
84 19 343	8	129	3-J10	84 48 029	8	49	3-F02	84 61 063	8	95	3-G24
84 21 323	8	99	3-H04	84 48 189	8	53	3-F06	84 61 196	8	139	3-I20
84 21 778	8	127	3-J08	84 48 189	8	53	3-F06	84 61 386	8	55	3-F08
84 21 786	8	127	3-J08	84 48 247	8	149	3-J06	84 61 394	8	61	3-F14
84 22 032	8	35	3-E12	84 51 478	8	43	3-E20	84 61 396	8	55	3-F08
84 23 147	8	127	3-J08	84 51 486	8	43	3-E20	84 61 451	8	55	3-F06
84 23 444	8	51	3-F04	84 51 817	8	43	3-E20	84 61 469	8	55	3-F08
84 24 442	8	113	3-H18	84 51 817	8	49	3-F02	84 61 483	8	139	3-I20
84 25 035	8	127	3-J08	84 51 825	8	43	3-E20	84 61 675	8	55	3-F08
84 25 043	8	127	3-J08	84 51 825	8	49	3-F02	84 61 675	8	51	3-F04
84 25 100	8	127	3-J08	84 51 825	8	49	3-F02	84 61 675	8	55	3-F08
84 25 118	8	127	3-J08	84 51 825	8	49	3-F02	84 61 675	8	55	3-F08
84 25 126	8	127	3-J08	84 51 824	8	61	3-F14	84 62 210	8	139	3-I20
84 26 173	8	127	3-J08	84 51 957	8	55	3-F08	84 62 210	8	135	3-I16
84 26 199	8	121	3-I02	84 51 957	8	59	3-F12	84 62 228	8	139	3-I20
84 26 199	8	127	3-J08	84 51 825	8	49	3-F02	84 61 675	8	55	3-F08
84 26 199	8	127	3-J08	84 51 825	8	49	3-F02	84 61 675	8	55	3-F08
84 26 199	8	127	3-J08	84 51 824	8	61	3-F14	84 62 210	8	139	3-I20
84 26 199	8	127	3-J08	84 51 957	8	55	3-F08	84 62 210	8	135	3-I16
84 26 199	8	121	3-I02	84 51 957	8	59	3-F12	84 62 228	8	139	3-I20
84 26 199	8	127	3-J08	84 51 825	8	49	3-F02	84 61 675	8	55	3-F08
84 26 199	8	127	3-J08	84 51 825	8	49	3-F02	84 61 675	8	55	3-F08
84 26 199	8	127	3-J08	84 51 824	8	61	3-F14	84 62 210	8	139	3-I20
84 26 199	8	127	3-J08	84 51 957	8	55	3-F08	84 62 210	8	135	3-I16
84 26 199	8	121	3-I02	84 51 957	8	59	3-F12	84 62 228	8	139	3-I20
84 26 199	8	127	3-J08	84 51 825	8	49	3-F02	84 61 675	8	55	3-F08
84 26 199	8	127	3-J08	84 51 825	8	49	3-F02	84 61 675	8	55	3-F08
84 26 199	8	127	3-J08	84 51 824	8	61	3-F14	84 62 210	8	139	3-I20
84 26 199	8	127	3-J08	84 51 957	8	55	3-F08	84 62 210	8	135	3-I16
84 26 199	8	121	3-I02	84 51 957	8	59	3-F12	84 62 228	8	139	3-I20
84 26 199	8	127	3-J08	84 51 825	8	49	3-F02	84 61 675	8	55	3-F08
84 26 199	8	127	3-J08	84 51 825	8	49	3-F02	84 61 675	8	55	3-F08
84 26 199	8	127	3-J08	84 51 824	8	61	3-F14	84 62 210	8	139	3-I20
84 26 199	8	127	3-J08	84 51 957	8	55	3-F08	84 62 210	8	135	3-I16
84 26 199	8	121	3-I02	84 51 957	8	59	3-F12	84 62 228	8	139	3-I20
84 26 199	8	127	3-J08	84 51 825	8	49	3-F02	84 61 675	8	55	3-F08
84 26 199	8	127	3-J08	84 51 825	8	49	3-F02	84 61 675	8	55	3-F08
84 26 199	8	127	3-J08	84 51 824	8	61	3-F14	84 62 210	8	139	3-I20
84 26 199	8	127	3-J08	84 51 957	8	55	3-F08	84 62 210	8	135	3-I16
84 26 199	8	121	3-I02	84 51 957	8	59	3-F12	84 62 228	8	139	3-I20
84 26 199	8	127	3-J08	84 51 825	8	49	3-F02	84 61 675	8	55	3-F08
84 26 199	8	127	3-J08	84 51 825	8	49	3-F02	84 61 675	8	55	3-F08
84 26 199	8	127	3-J08	84 51 824	8	61	3-F14	84 62 210	8	139	3-I20
84 26 199	8	127	3-J08	84 51 957	8	55	3-F08	84 62 210	8	135	3-I16
84 26 199	8	121	3-I02	84 51 957	8	59	3-F12	84 62 228	8	139	3-I20
84 26 199	8	127	3-J08	84 51 825	8	49	3-F02	84 61 675	8	55	3-F08
84 26 199	8	127	3-J08	84 51 825	8	49	3-F02	84 61 675	8	55	3-F08
84 26 199	8	127	3-J08	84 51 824	8	61	3-F14	84 62 210	8	139	3-I20
84 26 199	8	127	3-J08	84 51 957	8	55	3-F08	84 62 210	8	135	3-I16
84 26 199	8	121	3-I02	84 51 957	8	59	3-F12	84 62 228	8	139	3-I20
84 26 199	8	127	3-J08	84 51 825	8	49	3-F02	84 61 675	8	55	3-F08
84 26 199	8	127	3-J08	84 51 825	8	49	3-F02	84 61 675	8	55	3-F08
84 26 199	8	127	3-J08	84 51 824	8	61	3-F14	84 62 210	8	139	3-I20
84 26 199	8	127	3-J08	84 51 957	8	55	3-F08	84 62 210	8	135	3-I16
84 26 199	8	121	3-I02	84 51 957	8	59	3-F12	84 62 228	8	139	3-I20
84 26 199	8	127	3-J08	84 51 825	8	49	3-F02	84 61 675	8	55	3-F08
84 26 199	8	127	3-J08	84 51 825	8	49	3-F02	84 61 675	8	55	3-F08
84 26 199	8	127	3-J08	84 51 824	8	61	3-F14	84 62 210	8	139	3-I20
84 26 199	8	127	3-J08	84 51 957	8	55	3-F08	84 62 210	8	135	3-I16
84 26 199	8	121	3-I02	84 51 957	8	59	3-F12	84 62 228	8	139	3-I20
84 26 199	8	127	3-J08	84 51 825	8	49	3-F02	84 61 675	8	55	3-F08
84 26 199	8	127	3-J08	84 51 825	8	49	3-F02	84 61 675	8	55	3-F08
84 26 199	8										

NUMERICAL REGISTER				NUMMERREGISTER				Date Datum	Group Grupp	Page Seite					
								1987-10	10A	17					
Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
84 74 207	8	133	3-I14	84 86 425	0	24	1-G01	84 87 621	8	161	3-J18	84 89 204	8	149	3-J06
84 74 207	8	137	3-I18	84 86 425	8	71	3-F24	84 87 639	8	155	3-J12	84 89 204	8	151	3-J08
84 74 553	8	45	E-322	84 86 433	0	24	1-G01	84 87 639	8	155	3-J12	84 89 238	8	147	3-J04
84 74 553	8	53	3-F06	84 86 433	8	71	3-F24	84 87 647	8	155	3-J12	84 89 238	8	151	3-J08
84 74 678	8	131	3-I12	84 86 441	0	24	1-G01	84 87 647	8	159	3-J16	84 89 238	8	153	3-J10
36 76 659	5	13	3-A14	84 86 441	8	71	3-F24	84 87 654	8	159	3-J16	84 89 659	8	139	3-I20
84 76 061	8	121	3-I02	84 86 458	0	25	1-G02	84 87 662	8	159	3-J16	84 89 667	8	129	3-I10
84 76 079	8	45	E-322	84 86 458	8	71	3-F24	84 87 670	8	159	3-J16	84 89 675	8	129	3-I10
84 76 301	8	45	E-322	84 86 482	8	159	3-J16	84 87 688	8	159	3-J16	85 00 613	3	43	2-G20
84 76 301	8	53	3-F06	84 86 65C	8	155	3-J12	84 87 696	8	159	3-J16	85 01 264	3	31	2-G08
84 76 673	8	147	3-J04	84 86 664	8	155	3-J12	84 87 704	8	159	3-J16	85 01 710	8	143	3-J12
84 76 673	8	151	3-J08	84 86 672	8	155	3-J16	84 87 712	8	159	3-J16	85 02 043	0	29	1-G06
84 76 681	8	147	3-J04	84 86 680	8	159	3-J12	84 87 720	8	155	3-J12	85 02 843	3	53	2-H06
84 76 681	8	151	3-J08	84 86 688	8	155	3-J12	84 87 753	8	155	3-J12	85 02 892	3	46	2-G22
84 77 119	8	121	3-I02	84 86 706	8	159	3-J16	84 87 761	8	155	3-J12	85 02 726	3	13	2-F14
84 77 325	8	131	3-I12	84 86 714	8	131	3-I12	84 87 779	8	155	3-J12	85 03 153	3	57	2-H10
84 77 325	8	135	3-I16	84 86 714	8	135	3-I16	84 87 779	8	159	3-J16	85 03 153	3	59	2-H12
84 78 182	8	127	3-I08	84 86 722	8	155	3-J12	84 87 787	8	155	3-J12	85 03 153	3	65	2-H18
84 78 364	8	59	F-112	84 86 730	8	155	3-J12	84 87 787	8	159	3-J16	85 03 153	3	67	2-H20
84 78 463	8	115	3-H20	84 86 748	8	159	3-J16	84 87 795	8	159	3-J16	85 03 153	3	73	2-H02
84 78 554	8	61	3-F14	84 86 961	8	155	3-J12	84 88 140	8	137	3-I18	85 03 153	3	79	2-H08
84 79 123	8	163	3-J10	84 86 979	8	155	3-J12	84 88 389	8	151	3-J08	85 03 179	3	57	2-H10
84 79 214	8	153	3-J10	84 86 987	8	159	3-J16	84 88 553	8	109	3-H14	85 03 179	3	65	2-H18
84 82 218	8	141	3-I22	84 86 995	8	155	3-J12	84 88 561	8	109	3-H14	85 03 179	3	73	2-H02
84 82 226	8	141	3-I22	84 87 001	8	155	3-J12	84 88 991	8	151	3-J08	85 03 179	3	79	2-H08
84 83 141	8	131	3-I12	84 87 019	8	159	3-J16	84 89 007	8	151	3-J08	85 03 476	3	57	2-H10
84 83 141	8	135	3-I16	84 87 027	8	155	3-J12	84 89 056	8	147	3-J04	85 03 476	3	65	2-H18
84 83 174	8	131	3-I12	84 87 035	8	155	3-J12	84 89 056	8	149	3-J06	85 03 476	3	73	2-H02
84 83 372	8	131	3-I12	84 87 043	8	159	3-J16	84 89 056	8	151	3-J08	85 03 476	3	79	2-H08
84 83 372	8	135	3-I16	84 87 050	8	155	3-J12	84 90 278	8	53	3-F06	85 03 484	3	59	2-H12
84 83 380	8	131	3-I12	84 87 068	8	155	3-J12	84 90 575	8	97	3-H02	85 03 484	3	67	2-H20
84 83 380	8	135	3-I16	84 87 076	8	159	3-J16	84 90 583	8	95	3-G24	85 04 029	3	37	2-G14
84 83 646	8	71	3-F24	84 87 084	8	155	3-J12	84 90 591	8	95	3-G24	85 04 144	3	41	2-G18
84 83 653	8	71	3-F24	84 87 092	8	155	3-J12	84 90 609	8	95	3-G24	85 04 771	3	57	2-H10
84 83 687	8	71	3-F24	84 87 100	8	159	3-J16	84 90 617	8	95	3-G24	85 04 771	3	65	2-H18
84 83 711	8	71	3-F24	84 87 118	8	155	3-J12	84 90 625	8	95	3-G24	85 04 789	3	57	2-H10
84 83 729	8	71	3-F24	84 87 126	8	155	3-J12	84 90 633	8	95	3-G24	85 04 789	3	65	2-H18
84 83 778	0	25	1-G02	84 87 134	8	159	3-J16	84 90 641	8	95	3-G24	85 06 123	3	77	2-H06
84 83 778	8	71	3-F24	84 87 142	8	155	3-J12	84 90 674	8	95	3-G24	85 06 123	3	83	2-H12
84 85 786	8	25	1-G02	84 87 159	8	155	3-J12	84 90 682	8	95	3-G24	85 06 198	3	46	2-G22
84 83 786	8	71	3-F24	84 87 167	8	159	3-J16	84 90 708	8	95	3-G24	85 06 263	3	31	2-G08
84 83 794	0	25	1-G02	84 87 175	0	24	1-G01	84 90 716	8	95	3-G24	85 06 602	3	13	2-F12
84 83 794	8	71	3-F24	84 87 175	8	71	3-F24	84 96 770	24	1-G01	85 06 925	3	9	2-G20	
84 83 802	0	25	1-G02	84 87 183	0	24	1-G01	84 96 785	0	24	1-G01	85 06 941	3	11	2-F12
84 83 802	8	71	3-F24	84 87 183	8	71	3-F24	84 96 798	0	24	1-G01	85 06 941	3	9	2-F10
84 83 810	8	73	3-G02	84 87 191	0	25	1-G02	84 96 804	0	25	1-G02	85 06 941	3	11	2-F12
84 84 123	8	149	3-J06	84 87 191	8	71	3-F24	84 97 323	8	149	3-J06	85 07 873	8	21	3-D22
84 84 188	8	71	3-F24	84 87 209	0	25	1-G02	84 97 331	3	55	2-H08	85 08 263	3	41	2-G18
84 84 206	8	71	3-F24	84 87 209	8	71	3-F24	84 97 562	8	105	3-H10	85 08 848	3	41	2-G18
84 84 362	8	115	3-H20	84 87 217	8	159	3-J16	84 97 711	0	24	1-G01	85 09 002	3	41	2-H18
84 84 727	8	73	3-G02	84 87 225	8	159	3-J16	84 97 711	0	25	1-G02	85 09 127	3	53	2-H06
84 86 276	8	35	3-I16	84 87 415	8	155	3-J12	84 97 711	8	71	3-F24	85 09 507	3	61	2-H04
84 86 282	8	159	3-J16	84 87 422	8	155	3-J12	84 98 727	8	119	3-H20	85 09 697	3	43	2-G20
84 86 300	8	159	3-J16	84 87 431	8	159	3-J16	84 98 891	8	105	3-H14	85 09 846	3	61	2-H18
84 86 318	8	155	3-J12	84 87 563	8	155	3-J12	84 98 909	8	105	3-H10	85 09 846	3	69	2-H22
84 86 318	8	159	3-J16	84 87 571	8	155	3-J12	84 98 909	8	115	3-H20	85 09 846	3	73	2-H02
84 86 326	8	155	3-J12	84 87 589	8	159	3-J16	84 98 196	8	147	3-J04	85 09 846	3	79	2-H08
84 86 328	8	159	3-J16	84 87 613	8	157	3-J14	84 98 196	8	151	3-J08	85 10 562	2	91	2-D20
84 86 409	8	55	3-F08	84 87 613	8	161	3-H18	84 99 204	8	133	3-I14	85 10 836	3	21	2-F22
84 86 409	8	59	3-F12	84 87 621	8	157	3-J14	84 99 204	8	137	3-I18	85 11 065	2	57	2-C12

Page Side	Group Grupp	Date Datum	NUMERICAL REGISTER				NUMMERREGISTER				
18	10A	1987-10									
Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
85 11 065	3	53	2-H06	85 21 619	3	85	2-H18	85 29 265	3	51	2-H04
85 11 388	3	41	2-G18	85 21 688	0	29	1-G06	85 29 307	3	83	2-H12
85 11 875	3	51	2-H04	85 21 688	3	77	2-H06	85 30 081	3	59	2-H12
85 13 574	8	53	3-F06	85 21 688	3	83	2-H12	85 30 081	3	67	2-H20
85 13 632	8	125	3-F06	85 21 676	3	73	2-H02	85 30 099	3	59	2-H12
85 14 333	3	27	2-G04	85 21 676	3	79	2-H02	85 30 099	3	67	2-H20
85 14 341	3	27	2-G04	85 21 684	3	73	2-H02	85 30 107	3	57	2-H10
85 15 280	0	26	1-G03	85 21 684	3	79	2-H02	85 30 107	3	65	2-H18
85 15 280	3	47	2-G24	85 21 726	3	61	2-H14	85 30 107	3	75	2-H04
85 15 298	0	26	1-G03	85 21 726	3	63	2-H16	85 30 115	3	57	2-H10
85 15 298	0	28	1-G05	85 21 726	3	69	2-H22	85 30 115	3	85	2-H16
85 15 298	3	47	2-G24	85 21 726	3	71	2-H24	85 30 651	3	53	2-H06
85 15 612	3	27	2-G04	85 21 726	3	73	2-H02	85 30 792	3	45	2-G22
85 15 620	3	27	2-G04	85 21 726	3	79	2-H08	85 30 800	3	47	2-G24
85 15 653	3	27	2-G04	85 22 104	3	87	2-H16	85 30 891	3	43	2-G20
85 15 629	3	27	2-G04	85 22 310	0	28	1-G05	85 30 917	3	53	2-H06
85 15 652	3	27	2-G04	85 22 310	0	29	1-G06	85 31 204	0	25	1-G02
85 15 680	3	27	2-G04	85 22 310	3	85	2-H14	85 31 204	3	43	2-G20
85 15 686	3	27	2-G04	85 22 328	3	15	2-F16	85 31 212	0	25	1-G02
85 15 702	3	27	2-G04	85 22 385	3	29	2-G06	85 32 428	3	43	2-G20
85 15 710	3	27	2-G04	85 22 482	3	45	2-G22	85 32 766	3	25	2-G02
85 16 262	3	27	2-G04	85 22 518	3	77	2-H06	85 33 010	3	45	2-G22
85 16 270	3	27	2-G04	85 22 518	3	83	2-H12	85 33 176	3	85	2-H14
85 16 288	3	27	2-G04	85 22 526	3	77	2-H06	85 33 374	3	89	2-H18
85 16 312	3	27	2-G04	85 22 526	3	83	2-H12	85 33 432	3	45	2-G22
85 16 338	3	27	2-G04	85 22 534	3	77	2-H06	85 33 457	3	41	2-G18
85 16 346	3	27	2-G04	85 22 534	3	83	2-H12	85 33 485	3	45	2-G22
85 16 361	3	27	2-G04	85 22 542	3	35	2-G12	85 33 511	3	89	2-H18
85 16 365	3	27	2-G04	85 22 542	3	57	2-H10	85 33 573	3	89	2-H18
85 16 403	3	27	2-G04	85 22 542	3	59	2-H12	85 33 644	3	51	2-H04
85 16 437	3	27	2-G04	85 22 542	3	65	2-H18	85 33 697	3	61	2-H14
85 16 445	3	27	2-G04	85 22 542	3	87	2-H20	85 33 697	3	69	2-H22
85 16 478	3	27	2-G04	85 22 542	3	77	2-H06	85 33 705	3	61	2-H14
85 16 486	3	27	2-G04	85 22 542	3	83	2-H12	85 33 705	3	69	2-H22
85 16 502	3	27	2-G04	85 22 559	3	77	2-H06	85 33 721	3	57	2-H10
85 16 817	3	57	2-H10	85 22 560	3	83	2-H12	85 33 721	3	65	2-H18
85 16 817	3	59	2-H12	85 22 567	3	61	2-H14	85 35 452	3	41	2-G18
85 16 817	3	65	2-H18	85 22 567	3	69	2-H22	85 35 682	3	25	2-G02
85 16 817	3	67	2-H20	85 22 567	3	77	2-H06	85 36 320	3	85	2-H14
85 16 817	3	73	2-H02	85 22 567	3	83	2-H12	85 36 401	3	85	2-H14
85 16 817	3	79	2-H08	85 22 575	3	65	2-H18	85 36 409	2	91	2-D20
85 16 890	3	61	2-H14	85 22 575	3	77	2-H06	85 36 619	3	41	2-G18
85 16 890	3	69	2-H22	85 22 575	3	83	2-H12	85 37 029	2	59	2-C12
85 16 932	3	65	2-H18	85 22 609	3	77	2-H06	85 37 623	3	85	2-H14
85 16 957	3	59	2-H12	85 22 609	3	83	2-H12	85 37 672	3	29	2-G06
85 16 957	3	67	2-H20	85 22 617	3	57	2-H10	85 38 027	3	51	2-H04
85 16 957	3	73	2-H02	85 22 617	3	61	2-H14	85 38 068	3	61	2-H04
85 17 104	0	26	1-G03	85 22 617	3	85	2-H18	85 39 272	8	169	3-K02
85 17 104	2	49	2-C02	85 22 617	3	69	2-H22	85 39 298	3	87	2-H16
85 17 104	2	51	2-C04	85 22 617	3	71	2-H24	85 39 363	3	71	2-H24
85 17 104	2	81	2-D10	85 22 617	3	77	2-H06	85 39 595	3	21	2-F22
85 17 104	3	55	2-H08	85 22 617	3	83	2-H12	85 39 603	3	21	2-F22
85 18 367	3	31	2-G08	85 22 997	3	51	2-H04	85 39 611	3	21	2-F22
85 18 557	3	41	2-G18	85 22 997	3	51	2-H04	85 39 629	3	21	2-F22
85 19 296	3	53	2-H06	85 23 135	3	85	2-H14	85 39 702	3	21	2-F22
85 19 670	3	47	2-G24	85 23 150	3	85	2-H14	85 39 710	3	21	2-F22
85 21 282	3	35	2-G12	85 23 168	0	29	1-G02	85 39 728	3	85	2-H14
85 21 601	3	57	2-H10	85 23 358	0	25	1-G02	85 39 736	3	25	2-G02
85 21 601	3	85	2-H18	85 23 358	3	43	2-G20	85 39 744	3	25	2-G02
85 21 619	3	57	2-H10	85 23 564	3	53	2-H06	85 39 751	3	25	2-G02

NUMERICAL REGISTER				NUMMERREGISTER				Date Datum	Group Grupp	Page Sida					
								1987-10	10A	19					
Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
85 44 256	3	71	2-H24	85 44 934	3	87	2-H16	85 51 111	3	87	2-H18	85 52 713	3	55	2-H08
85 44 264	3	75	2-H04	85 44 942	3	87	2-H18	85 51 129	3	87	2-H18	85 52 721	3	55	2-H04
85 44 264	3	81	2-H10	85 44 959	3	87	2-H16	85 51 137	3	41	2-G18	85 52 721	3	59	2-H12
85 44 272	3	83	2-H16	85 44 991	3	87	2-H16	85 51 145	3	49	2-H02	85 52 721	3	61	2-H14
85 44 272	3	71	2-H24	85 45 410	0	25	1-G02	85 51 152	3	49	2-H02	85 52 721	3	67	2-H24
85 44 272	3	75	2-H04	85 45 428	0	25	1-G02	85 51 178	3	49	2-H02	85 52 721	3	69	2-H02
85 44 272	3	81	2-H10	85 45 519	3	45	2-G22	85 51 186	3	49	2-H02	85 52 754	0	26	1-G03
85 44 280	3	61	2-H14	85 45 527	3	45	2-G22	85 51 392	3	85	2-H14	95 52 754	3	53	2-H06
85 44 298	3	67	2-H20	85 46 129	2	91	2-D20	85 51 426	3	49	2-H02	85 52 762	3	53	2-H06
85 44 298	3	67	2-H20	85 46 137	2	91	2-D20	85 51 434	3	49	2-H02	85 52 770	0	25	1-G02
85 44 298	3	69	2-H22	85 46 189	3	43	2-G20	85 51 442	3	49	2-H02	85 52 770	3	45	2-G22
85 44 298	3	75	2-H04	85 46 202	0	11	1-F12	85 51 574	3	51	2-H04	85 52 788	0	25	1-G02
85 44 298	3	81	2-H10	85 46 202	3	45	2-G22	85 51 582	3	7	2-F08	85 52 788	0	28	1-G05
85 44 306	3	61	2-H14	85 46 319	0	11	1-F12	85 51 616	3	7	2-F08	85 52 788	3	45	2-G22
85 44 306	3	63	2-H16	85 46 319	3	37	2-G14	85 51 657	3	49	2-H02	85 52 796	0	27	1-G04
85 44 306	3	69	2-H22	85 46 327	0	11	1-F12	85 51 665	3	61	2-H14	85 52 796	3	47	2-G24
85 44 306	3	71	2-H24	85 46 327	3	39	2-G16	85 51 665	3	69	2-H22	85 53 257	3	33	2-G10
85 44 306	3	75	2-H04	85 46 368	3	39	2-G16	85 51 673	3	9	2-F10	85 53 265	3	85	2-H14
85 44 306	3	81	2-H10	85 46 483	0	30	1-G07	85 51 681	3	23	2-F24	85 53 273	3	85	2-H14
85 44 314	3	61	2-H14	85 46 947	3	85	2-H14	85 52 002	3	87	2-H16	85 53 315	3	43	2-G20
85 44 314	3	69	2-H22	85 47 499	0	11	1-F12	85 52 036	3	49	2-H02	85 53 356	3	43	2-G20
85 44 314	3	75	2-H04	85 47 499	3	37	2-G14	85 52 044	3	41	2-H18	85 53 414	3	43	2-G20
85 44 314	3	81	2-H10	85 47 580	0	11	1-F12	85 52 051	3	39	2-G16	85 53 430	3	43	2-G20
85 44 322	3	63	2-H16	85 47 580	3	31	2-G08	85 52 069	3	39	2-G16	85 53 448	3	9	2-F10
85 44 322	3	71	2-H24	85 47 606	0	11	1-F12	85 52 077	3	39	2-G16	85 53 448	3	11	2-F12
85 44 322	3	75	2-H04	85 47 606	3	31	2-G08	85 52 119	0	11	1-F12	85 53 463	3	47	2-G24
85 44 332	3	81	2-H10	85 47 606	8	121	3-I02	85 52 119	3	39	2-G16	85 53 497	3	61	2-H14
85 44 330	3	7	2-F08	85 50 022	3	87	2-H16	85 52 150	3	51	2-H04	85 53 497	3	89	2-H22
85 44 348	3	61	2-H14	85 50 030	3	87	2-H16	85 52 168	3	49	2-H02	85 53 505	3	61	2-H14
85 44 348	3	69	2-H22	85 50 046	3	9	2-F10	85 52 176	3	39	2-H02	85 53 505	3	69	2-H22
85 44 353	3	61	2-H14	85 50 097	0	11	1-F12	85 52 184	3	39	2-G16	85 53 547	3	51	2-H04
85 44 363	3	69	2-H22	85 50 097	3	9	2-F10	85 52 192	3	53	2-H06	85 53 604	3	49	2-H02
85 44 371	3	61	2-H14	85 50 105	3	9	2-F10	85 52 200	3	61	2-H14	85 53 612	3	49	2-H02
85 44 371	3	69	2-H22	85 50 121	3	9	2-F10	85 52 200	3	69	2-H22	85 53 620	3	49	2-H02
85 44 389	3	61	2-H14	85 50 147	3	9	2-F10	85 52 218	3	39	2-G16	85 53 636	3	49	2-H02
85 44 389	3	69	2-H22	85 50 352	3	89	2-H18	85 52 226	3	87	2-H16	85 53 646	3	49	2-H02
85 44 389	3	75	2-H04	85 50 360	3	43	2-G20	85 52 234	3	87	2-H16	85 53 653	3	49	2-H02
85 44 389	3	81	2-H10	85 50 436	3	43	2-G20	85 52 242	3	51	2-H04	85 53 661	3	49	2-H02
85 44 397	3	61	2-H14	85 50 519	3	87	2-H16	85 52 259	3	51	2-H04	85 53 688	0	25	1-G02
85 44 397	3	69	2-H22	85 50 527	3	87	2-H16	85 52 275	3	87	2-H16	85 53 687	3	53	2-H06
85 44 413	3	37	2-G14	85 50 766	3	8		85 52 283	3	87	2-H16	85 53 695	3	51	2-H04
85 44 421	3	37	2-G14	85 50 772	3	87	2-H16	85 52 291	3	87	2-H16	85 53 703	3	49	2-H02
85 44 439	3	37	2-G14	85 50 784	3	87	2-H16	85 52 309	3	39	2-G16	85 53 711	3	49	2-H02
85 44 452	3	37	2-G14	85 50 808	3	21	2-F22	85 52 366	3	11	2-F12	85 53 729	3	53	2-H06
85 44 470	3	37	2-G14	85 50 816	3	21	2-F22	85 52 382	3	87	2-H16	85 53 737	3	53	2-H06
85 44 504	3	37	2-G14	85 50 824	3	21	2-F22	85 52 390	3	21	2-F22	85 53 794	3	31	2-G08
85 44 512	3	37	2-G14	85 50 824	3	25	2-G02	85 52 408	3	21	2-F22	85 53 810	3	37	2-H14
85 44 520	3	37	2-G14	85 50 840	3	21	2-F22	85 52 432	0	11	2-F12	85 53 824	3	25	2-H04
85 44 538	3	37	2-G14	85 50 857	3	21	2-F22	85 52 432	3	11	2-F12	85 53 844	0	11	1-F12
85 44 587	3	41	2-G18	85 50 965	3	21	2-F22	85 52 485	3	11	2-F12	85 53 844	3	37	2-H14
85 44 595	3	41	2-G18	85 50 873	3	21	2-F22	85 52 531	3	11	2-F12	85 53 869	3	57	2-H10
85 44 680	3	41	2-G18	85 50 881	3	21	2-F22	85 52 556	3	11	2-F12	85 53 869	3	85	2-H06
85 44 686	3	37	2-G14	85 50 915	3	21	2-F22	85 52 572	3	11	2-F12	85 53 876	0	25	1-G02
85 44 702	3	37	2-G14	85 50 923	3	21	2-F22	85 52 598	3	15	2-H18	85 53 877	0	28	1-G05
85 44 726	3	41	2-G18	85 50 949	3	21	2-F22	85 52 614	3	7	2-F08	85 53 877	3	45	2-G22
85 44 736	3	37	2-G14	85 50 972	3	23	2-F24	85 52 630	3	7	2-F08	85 53 885	0	25	1-G02
85 44 744	3	41	2-G18	85 50 980	3	23	2-F24	85 52 653	3	55	2-H06	85 53 885	3	45	2-G22
85 44 756	3	41	2-G18	85 51 012	3	87	2-H16	85 52 655	4	5	2-J06	85 53 893	0	30	1-G07
85 44 793	3	41	2-G18	85 51 053	3	87	2-H16	85 52 663	3	55	2-H06	85 53 927	3	43	2-G20
85 44 801	3	25	2-G02	85 51 095	3	89	2-H18	85 52 671	3	85	2-H14	85 53 935	3	45	2-G20

Page Side	Group Grupp	Date Datum	NUMERICAL REGISTER				NUMMERREGISTER				
20	10A	1987-10									
Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord
85 55 195	3	53	2-H06	85 59 551	3	29	2-G06	85 61 706	3	51	2-H04
85 55 237	3	33	2-G10	85 59 569	3	29	2-G06	85 61 722	3	51	2-H04
85 56 260	3	33	2-G10	85 59 577	3	9	2-F10	85 61 813	3	49	2-H02
85 56 294	3	33	2-G10	85 59 585	3	9	2-F10	85 61 821	3	49	2-H02
85 56 302	3	33	2-G10	85 59 593	3	39	2-G16	85 61 839	3	49	2-H02
85 56 866	3	45	2-G22	85 59 601	3	39	2-G16	85 61 847	3	51	2-H04
85 56 799	3	49	2-H02	85 59 619	3	11	2-F12	85 61 854	3	51	2-H04
85 56 807	3	87	2-H16	85 59 627	3	11	2-F12	85 61 862	3	51	2-H04
85 56 849	3	51	2-H04	85 59 635	3	11	2-F12	85 61 870	3	51	2-H04
85 56 706	3	45	2-G22	85 59 643	3	11	2-F12	85 61 888	3	51	2-H04
85 56 896	3	57	2-H10	85 59 650	3	11	2-F12	85 61 896	3	49	2-H02
85 56 896	3	57	2-H18	85 59 668	3	11	2-F12	85 61 904	3	49	2-H02
85 56 904	3	57	2-H10	85 59 676	3	11	2-F12	85 61 920	3	49	2-H02
85 56 920	3	87	2-H16	85 59 684	3	11	2-F12	85 61 938	3	49	2-H02
85 56 938	3	87	2-H16	85 59 692	3	11	2-F12	85 61 953	3	49	2-H02
85 57 001	8	169	3-K02	85 59 783	3	9	2-F10	85 61 961	3	49	2-H02
85 57 043	3	11	2-F12	85 59 791	3	9	2-F10	85 61 979	3	89	2-H18
85 57 050	3	51	2-H04	85 59 809	3	9	2-F10	85 62 001	3	51	2-H04
85 57 431	3	45	2-G22	85 59 817	3	9	2-F10	85 62 050	3	49	2-H02
85 57 449	3	9	2-F10	85 59 833	3	9	2-F10	85 62 126	3	29	2-G06
85 57 456	3	9	2-F10	85 59 841	3	9	2-F10	85 62 142	3	29	2-G06
85 57 460	0	11	2-F12	85 59 858	3	9	2-F10	85 62 215	3	87	2-H18
85 57 480	3	37	2-G14	85 59 866	3	9	2-F10	85 62 321	3	85	2-H14
85 57 514	3	31	2-G08	85 59 885	0	28	1-G05	85 62 356	3	85	2-H14
85 57 639	3	53	2-H06	85 59 899	3	85	2-H14	85 62 388	3	29	2-G06
85 57 647	3	53	2-H06	85 60 161	3	41	2-G18	85 62 942	3	29	2-G06
85 58 066	3	53	2-H06	85 60 177	0	27	-G04	85 63 043	3	87	2-H16
85 58 074	3	37	2-G14	85 60 180	3	61	2-H14	85 63 312	3	87	2-H16
85 58 080	3	37	2-G14	85 60 278	3	63	2-H16	85 63 320	3	87	2-H16
85 58 106	3	37	2-G14	85 60 278	3	69	2-H22	85 63 338	3	87	2-H16
85 58 124	3	37	2-G14	85 60 278	3	71	2-H24	85 63 348	3	87	2-H16
85 58 132	3	37	2-G14	85 60 278	3	75	2-H04	85 63 367	3	87	2-H16
85 58 140	3	37	2-G14	85 60 278	3	81	2-H10	85 63 408	3	87	2-H16
85 58 272	0	29	1-G06	85 60 419	3	87	2-H16	85 63 498	3	87	2-H16
85 58 272	0	30	1-G07	85 60 435	3	31	2-G08	85 64 916	3	87	2-H20
85 58 272	3	47	2-G24	85 60 583	3	29	2-G06	85 64 940	3	87	2-H16
85 58 298	3	87	2-H16	85 60 591	3	29	2-G06	85 64 957	3	53	2-H06
85 58 314	3	27	2-G04	85 60 609	3	33	2-G10	85 64 981	3	87	2-H16
85 58 470	3	9	2-F10	85 60 740	3	41	2-G18	85 64 999	3	87	2-H16
85 58 538	3	57	2-H10	85 60 757	3	41	2-G18	85 65 004	3	87	2-H16
85 58 538	3	65	2-H18	85 60 799	3	89	2-H18	85 65 483	0	28	1-G05
85 58 546	3	57	2-H10	85 61 023	3	89	2-H18	85 65 483	3	45	2-G22
85 58 546	3	67	2-H20	85 61 284	3	29	2-G06	85 65 590	3	9	2-F10
85 58 611	3	53	2-H06	85 61 359	3	53	2-H06	85 65 640	3	25	2-G02
85 58 629	0	29	1-G06	85 61 367	2	91	2-D20	85 65 749	3	53	2-H06
85 58 629	3	53	2-H06	85 61 375	3	31	2-G08	85 65 855	3	45	2-G22
85 58 751	3	27	2-G04	85 61 383	3	31	2-G08	85 65 863	3	51	2-H04
85 58 785	3	27	2-G04	85 61 409	3	31	2-G08	85 65 871	3	53	2-H06
85 58 793	3	27	2-G04	85 61 425	3	87	2-H16	85 65 947	3	21	2-F22
85 59 213	3	43	2-G20	85 61 433	3	55	2-H08	85 65 996	3	7	2-F08
85 59 296	3	47	2-G24	85 61 466	3	37	2-G14	85 66 135	0	27	1-G04
85 59 304	3	47	2-G24	85 61 474	3	51	2-H04	85 66 135	3	7	2-F08
85 59 320	3	37	2-G14	85 61 482	3	45	2-G22	85 66 135	3	53	2-H06
85 59 361	3	29	2-G06	85 61 532	3	51	2-H04	85 66 143	3	27	1-G04
85 59 395	3	29	2-G06	85 61 573	3	49	2-H02	85 66 143	0	28	1-G05
85 59 403	3	29	2-G08	85 61 581	3	49	2-H02	85 66 143	3	7	2-F08
85 59 429	3	29	2-G08	85 61 599	3	49	2-H02	85 66 150	3	51	2-H04
85 59 478	3	87	2-H16	85 61 672	3	51	2-H04	85 66 168	3	7	2-F08
85 59 510	3	23	2-F24	85 61 680	3	49	2-H02	85 66 218	3	51	2-H04
85 59 536	3	29	2-G06	85 61 698	3	49	2-H02	85 66 275	3	51	2-H04
85 59 593	3	45	2-G22	85 61 706	3	51	2-H04	85 66 275	3	51	2-H04
85 59 629	3	45	2-G22	85 61 714	3	51	2-H04	85 66 275	3	51	2-H04
85 59 659	3	45	2-G22	85 61 722	3	51	2-H04	85 66 275	3	51	2-H04
85 59 689	3	45	2-G22	85 61 730	3	51	2-H04	85 66 275	3	51	2-H04
85 59 719	3	45	2-G22	85 61 738	3	51	2-H04	85 66 275	3	51	2-H04
85 59 749	3	45	2-G22	85 61 746	3	51	2-H04	85 66 275	3	51	2-H04
85 59 779	3	45	2-G22	85 61 754	3	51	2-H04	85 66 275	3	51	2-H04
85 59 809	3	45	2-G22	85 61 762	3	51	2-H04	85 66 275	3	51	2-H04
85 59 839	3	45	2-G22	85 61 770	3	51	2-H04	85 66 275	3	51	2-H04
85 59 869	3	45	2-G22	85 61 778	3	51	2-H04	85 66 275	3	51	2-H04
85 59 899	3	45	2-G22	85 61 786	3	51	2-H04	85 66 275	3	51	2-H04
85 59 929	3	45	2-G22	85 61 794	3	51	2-H04	85 66 275	3	51	2-H04
85 59 959	3	45	2-G22	85 61 802	3	51	2-H04	85 66 275	3	51	2-H04
85 59 989	3	45	2-G22	85 61 810	3	51	2-H04	85 66 275	3	51	2-H04
85 60 019	3	45	2-G22	85 61 818	3	51	2-H04	85 66 275	3	51	2-H04
85 60 049	3	45	2-G22	85 61 826	3	51	2-H04	85 66 275	3	51	2-H04
85 60 079	3	45	2-G22	85 61 834	3	51	2-H04	85 66 275	3	51	2-H04
85 60 109	3	45	2-G22	85 61 842	3	51	2-H04	85 66 275	3	51	2-H04
85 60 139	3	45	2-G22	85 61 850	3	51	2-H04	85 66 275	3	51	2-H04
85 60 169	3	45	2-G22	85 61 858	3	51	2-H04	85 66 275	3	51	2-H04
85 60 199	3	45	2-G22	85 61 866	3	51	2-H04	85 66 275	3	51	2-H04
85 60 229	3	45	2-G22	85 61 874	3	51	2-H04	85 66 275	3	51	2-H04
85 60 259	3	45	2-G22	85 61 882	3	51	2-H04	85 66 275	3	51	2-H04
85 60 289	3	45	2-G22	85 61 890	3	51	2-H04	85 66 275	3	51	2-H04
85 60 319	3	45	2-G22	85 61 898	3	51	2-H04	85 66 275	3	51	2-H04
85 60 349	3	45	2-G22	85 61 906	3	51	2-H04	85 66 275	3	51	2-H04
85 60 379	3	45	2-G22	85 61 914	3	51	2-H04	85 66 275	3	51	2-H04
85 60 409	3	45	2-G22	85 61 922	3	51	2-H04	85 66 275	3	51	2-H04
85 60 439	3	45	2-G22	85 61 930	3	51	2-H04	85 66 275	3	51	2-H04
85 60 469	3	45	2-G22	85 61 938	3	51	2-H04	85 66 275	3	51	2-H04
85 60 499	3	45	2-G22	85 61 946	3	51	2-H04	85 66 275	3	51	2-H04
85 60 529	3	45	2-G22	85 61 954	3	51	2-H04	85 66 275	3	51	2-H04
85 60 559	3	45	2-G22	85 61 962	3	51	2-H04	85 66 275	3	51	2-H04
85 60 589	3	45	2-G22	85 61 970	3	51	2-H04	85 66 275	3	51	2-H04
85 60 619	3	45	2-G22	85 61 978	3	51	2-H04	85 66 275	3	51	2-H04
85 60 649	3	45	2-G22	85 61 986	3	51	2-H04	85 66 275	3	51	2-H04
85 60 679	3	45	2-G22	85 61 994	3	51	2-H04	85 66 275	3	51	2-H04
85 60 709	3	45	2-G22	85 62 002	3	51	2-H04	85 66 275	3	51	2-H04
85 60 739	3	45	2-G22	85 62 010	3	51	2-H04	85 66 275	3	51	2-H04
85 60 769	3	45	2-G22	85 62 018	3	51	2-H04	85 66 275	3	51	2-H04
85 60 799	3	45	2-G22	85 62 026	3	51	2-H04	85 66 275	3	51	2-H04
85 60 829	3	45	2-G22	85 62 034	3	51	2-H04	85 66 275	3	51	2-H04
85 60 859	3	45	2-G22	85 62 042	3	51	2-H04	85 66 275	3	51	2-H04
85 60 889	3	45	2-G22	85 62 050	3	51	2-H04	85 66 275	3	51	2-H04
85 60 919	3	45	2-G22	85 62 058	3	51	2-H04	85 66 275	3	51	2-H04
85 60 949	3	45	2-G22	85 62 066	3	51	2-H04	85 66 275	3	51	2-H04
85 60 979	3	45	2-G22	85 62 074	3	51	2-H04	85 66 275	3	51	2-H04
85 61 009	3	45	2-G22	85 62 082	3	51	2-H04	85 66 275	3	51	2-H04
85 61 039	3	45	2-G22	85 62 090	3	51	2-H04	85 66 275			

NUMERICAL REGISTER				NUMMERREGISTER				Date Datum	Group Grupp				Page Sida				
								1987-10	10A								21
Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord		
85 84 666	3	7	2-F08	87 00 775	4	15	2-J16	87 04 306	4	29	2-K06	87 05 899	4	53	2-L06		
85 84 674	3	7	2-F08	87 01 385	4	33	2-K10	87 04 306	4	31	2-K08	87 05 998	4	43	2-K20		
85 84 682	3	7	2-F08	87 01 773	4	21	2-J22	87 04 314	4	29	2-K06	87 06 012	4	43	2-K20		
85 85 176	3	89	2-H18	87 01 773	4	27	2-K04	87 04 314	4	31	2-K08	87 06 020	4	43	2-K20		
85 85 176	8	171	3-K04	87 01 989	4	23	2-J24	87 04 322	4	29	2-K06	87 06 038	4	49	2-L02		
85 85 333	3	29	2-G06	87 02 045	4	23	2-J24	87 04 322	4	31	2-K08	87 06 046	4	49	2-L02		
85 85 358	3	29	2-G06	87 02 045	4	27	2-K04	87 04 330	4	29	2-K06	87 06 053	4	49	2-L02		
85 85 366	3	29	2-G06	87 02 086	4	23	2-J24	87 04 330	4	31	2-K08	87 06 061	4	51	2-L04		
85 85 374	3	29	2-G06	87 02 359	0	17	-F18	87 04 348	4	23	2-J24	87 06 087	4	41	2-K18		
85 85 390	3	29	2-G06	87 02 359	4	23	2-J24	87 04 348	4	27	2-K04	87 06 087	4	43	2-K20		
85 85 408	3	29	2-G06	87 02 359	4	27	2-K04	87 04 363	4	29	2-K06	87 06 087	4	51	2-L04		
85 85 424	3	29	2-G06	87 02 722	4	21	2-J22	87 04 363	4	31	2-K08	87 06 103	4	51	2-L04		
85 85 432	3	29	2-G06	87 02 722	4	27	2-K04	87 04 371	4	29	2-K06	87 06 111	0	14	1-F15		
85 85 473	3	29	2-G06	87 02 730	4	21	2-J22	87 04 371	4	31	2-K08	87 06 129	0	14	1-F15		
85 85 481	3	29	2-G06	87 02 730	4	27	2-K04	87 04 413	4	29	2-K06	87 06 129	4	43	2-K20		
85 85 549	3	85	2-H14	87 03 001	0	14	1-F15	87 04 413	4	31	2-K08	87 06 129	4	45	2-K22		
85 84 152	3	7	2-F08	87 03 241	4	29	2-K06	87 04 421	4	29	2-K06	87 06 137	4	51	2-L04		
86 01 916	8	45	3-E22	87 03 241	4	31	2-K08	87 04 421	4	31	2-K08	87 06 152	4	51	2-L04		
86 01 916	8	105	3-H10	87 03 274	4	29	2-K06	87 04 504	4	11	2-J12	87 06 180	4	51	2-L04		
86 01 916	8	113	3-H18	87 03 274	4	31	2-K08	87 04 611	4	21	2-J22	87 06 210	4	53	2-L06		
86 01 916	8	115	3-H20	87 03 282	4	29	2-K06	87 04 702	4	19	2-J20	17 06 228	4	53	2-L06		
86 01 916	8	139	3-H20	87 03 282	4	31	2-K08	87 04 728	0	13	1-F14	17 06 244	4	53	2-L06		
86 02 526	3	171	3-K04	87 03 340	4	21	2-J22	87 04 728	4	19	2-J20	17 06 319	4	45	2-K22		
86 02 542	8	171	3-K04	87 03 340	4	27	2-K04	87 04 777	0	12	1-F13	17 06 327	0	14	1-F15		
86 03 326	8	35	3-E12	87 03 357	4	23	2-J24	87 04 777	0	13	1-F14	17 06 327	0	15	1-F18		
86 05 040	2	91	2-D20	87 03 357	4	27	2-K04	87 04 777	4	21	2-J22	87 06 327	4	45	2-K22		
86 52 828	0	27	1-G04	87 03 365	4	23	2-J24	87 04 777	4	25	2-K02	87 06 335	0	14	1-F15		
86 52 836	0	27	1-G04	87 03 365	4	27	2-K04	87 05 001	4	19	2-J20	87 06 335	0	15	1-F16		
86 52 851	0	25	1-G02	87 03 399	4	13	2-J14	87 04 942	4	21	2-J22	87 06 336	4	45	2-K22		
86 52 869	0	28	1-G05	87 03 399	4	17	2-J18	87 04 942	4	25	2-K02	87 06 343	4	45	2-K22		
86 52 877	0	29	1-G06	87 03 399	4	4	2-K20	87 05 139	4	53	2-L06	87 06 368	0	15	1-F16		
86 52 885	0	29	1-G06	87 03 464	0	16	1-F17	87 05 162	0	16	1-F17	87 06 368	4	45	2-K22		
86 52 893	0	29	1-G06	87 03 472	4	25	2-K08	87 05 170	0	16	1-F17	87 06 376	0	15	1-F16		
86 52 901	0	29	1-G06	87 03 472	4	31	2-K08	87 05 170	4	47	2-K24	87 06 394	0	15	1-F16		
86 53 265	0	28	1-G05	87 03 530	0	17	1-F18	87 05 204	0	16	1-F17	87 06 392	0	15	1-F16		
86 53 503	0	27	1-G04	87 03 530	4	23	2-J24	87 05 220	4	51	2-L04	87 06 400	0	15	1-F16		
86 53 511	0	29	1-G06	87 03 530	4	27	2-K04	87 05 386	4	41	2-K18	87 06 418	0	15	1-F16		
86 53 529	0	30	1-G07	87 03 563	4	47	2-K24	87 05 428	4	41	2-K18	87 06 426	0	15	1-F16		
87 00 114	4	23	2-J24	87 03 639	4	23	2-J24	87 05 444	4	41	2-K18	87 06 442	0	15	1-F16		
87 00 114	4	27	2-K04	87 03 738	4	23	2-J24	87 05 444	4	45	2-K22	87 06 442	4	45	2-K22		
87 00 130	4	23	2-J24	87 03 761	4	21	2-J22	87 05 451	4	53	2-L06	87 06 467	4	45	2-K22		
87 00 130	4	27	2-K04	87 03 761	4	27	2-K04	87 05 477	4	41	2-K18	87 06 491	0	15	1-F16		
87 00 205	4	21	2-J22	87 03 852	4	11	2-J12	87 05 498	4	45	2-K22	87 06 491	4	45	2-K22		
87 00 205	4	27	2-K04	87 03 852	4	15	2-J16	87 05 667	4	45	2-K22	87 06 522	4	45	2-K22		
87 00 239	4	21	2-J22	87 04 041	4	21	2-J22	87 05 675	4	45	2-K22	87 06 616	0	14	1-F15		
87 00 239	4	27	2-K04	87 04 041	4	25	2-K32	87 05 691	4	47	2-K24	87 06 616	4	45	2-K22		
87 00 361	4	21	2-K04	87 04 108	0	14	1-F15	87 05 691	4	49	2-L02	87 06 665	4	45	2-K22		
87 00 361	4	27	2-J22	87 04 108	4	21	2-J22	87 05 725	0	14	1-F15	87 06 673	4	45	2-K22		
87 00 411	4	21	2-J22	87 04 116	0	13	1-F14	87 05 725	4	45	2-K22	87 06 681	4	45	2-K22		
87 00 411	4	25	2-K02	87 04 116	4	5	2-J06	87 05 733	0	14	1-F15	87 06 707	0	14	1-F15		
87 00 429	4	21	2-J22	87 04 157	4	43	2-K20	87 05 733	4	49	2-L02	87 06 707	4	45	2-K22		
87 00 429	4	25	2-K02	87 04 207	4	21	2-J22	87 05 766	4	49	2-L02	87 06 707	4	47	2-K24		
87 00 478	4	21	2-J22	87 04 207	4	27	2-K04	87 05 790	4	45	2-K22	87 06 715	4	45	2-K22		
87 00 586	4	23	2-J24	87 04 264	4	29	2-K06	87 05 808	0	14	1-F15	87 06 715	4	45	2-K22		
87 00 586	4	27	2-K04	87 04 264	4	31	2-K08	87 05 808	4	45	2-K22	87 06 723	0	15	1-F16		
87 00 619	4	23	2-K04	87 04 284	4	29	2-K06	87 05 808	4	45	2-K22	87 06 731	0	15	1-F16		
87 00 619	4	27	2-K04	87 04 284	0	31	2-K08	87 05 816	4	45	2-K22	87 06 731	4	46	2-K22		
87 00 767	4	21	2-J22	87 04 298	0	14	1-F15	87 05 824	4	53	2-L02	87 06 784	0	14	1-F15		
87 00 767	4	25	2-K02	87 04 298	4	29	2-K06	87 05 865	0	16	1-F17	87 06 764	4	45	2-K22		
87 00 775	4	11	2-J12	87 04 298	4	31	2-K05	87 05 865	4	43	2-K20	87 06 772	4	45	2-K22		

Page Sida	Group Grupp	Date Datum	NUMERICAL REGISTER								NUMMERREGISTER							
22	10A	1987-10																
Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord			
87 06 798	0	15	1-F16	87 08 224	4	49	2-L02	87 09 271	4	45	2-K22	87 11 376	4	21	2-J22			
87 06 798	4	45	2-K22	87 08 240	4	49	2-L02	87 09 305	4	53	2-L06	87 11 376	4	25	2-K02			
87 06 806	4	45	2-K22	87 08 257	4	49	2-L02	87 09 338	0	16	1-F17	87 11 384	4	21	2-J22			
87 06 830	4	45	2-K22	87 08 281	4	49	2-L02	87 09 330	4	45	2-K22	87 11 400	4	21	2-J22			
87 06 848	4	45	2-K22	87 08 299	4	49	2-L02	87 09 347	0	16	1-F17	87 11 434	4	21	2-J22			
87 06 855	0	14	1-F15	87 08 356	4	41	2-K18	87 09 347	4	47	2-K24	87 11 533	4	19	2-J20			
87 06 855	4	45	2-K22	87 08 380	4	41	2-K18	87 09 354	0	14	1-F15	87 11 582	4	21	2-J22			
87 06 863	0	14	1-F15	87 08 398	0	16	1-F17	87 09 354	4	47	2-K24	87 11 580	4	21	2-J22			
87 07 051	4	47	2-K24	87 08 398	4	41	2-K18	87 09 362	0	14	1-F15	87 11 590	4	25	2-K02			
87 07 069	0	15	1-F16	87 08 406	0	15	1-F16	87 09 362	4	47	2-K24	87 11 608	4	13	2-J14			
87 07 069	0	16	1-F17	87 08 405	4	41	2-K18	87 09 370	0	14	1-F15	87 11 608	4	17	2-J18			
87 07 069	4	47	2-K24	87 08 414	4	49	2-L02	87 09 370	4	47	2-K24	87 11 616	4	13	2-J14			
87 07 119	4	51	2-L04	87 08 422	4	43	2-K20	87 09 412	4	49	2-L02	87 11 616	4	17	2-J18			
87 07 188	4	47	2-K24	87 08 430	0	16	1-F17	87 09 420	4	49	2-L02	87 11 632	4	21	2-J22			
87 07 176	0	14	1-F15	87 08 430	4	43	2-K20	87 09 446	4	45	2-K22	87 11 632	4	26	2-K02			
87 07 176	4	47	2-K24	87 08 448	4	43	2-K20	87 09 453	4	47	2-K24	87 11 640	4	21	2-J22			
87 07 275	4	47	2-K24	87 08 455	0	15	1-F16	87 09 461	4	47	2-K24	87 11 640	4	27	2-K06			
87 07 317	0	14	1-F15	87 08 465	4	43	2-K20	87 09 473	4	49	2-L02	87 11 707	0	14	1-F15			
87 07 317	4	47	2-K24	87 08 463	4	43	2-K20	87 09 545	0	16	1-F17	87 11 707	4	29	2-K06			
87 07 325	0	14	1-F15	87 08 471	0	15	1-F16	87 09 546	4	47	2-K24	87 11 707	4	31	2-K08			
87 07 325	4	47	2-K24	87 08 471	4	43	2-K20	87 09 552	4	51	2-L04	87 11 723	4	29	2-K06			
87 07 333	0	14	1-F15	87 08 488	4	43	2-K20	87 09 578	4	49	2-L02	87 11 723	4	31	2-K08			
87 07 333	4	47	2-K24	87 08 620	4	49	2-L02	87 09 586	4	49	2-L02	87 11 906	0	12	1-F13			
87 07 374	4	47	2-K24	87 08 638	0	14	1-F15	87 09 610	4	44	1-F15	87 11 806	0	13	1-F14			
87 07 382	0	14	1-F15	87 08 638	4	45	2-K22	87 09 610	4	43	2-K20	87 11 806	4	19	2-J20			
87 07 382	4	47	2-K24	87 08 687	4	49	2-L02	87 10 303	4	11	2-J12	87 11 855	0	12	1-F14			
87 07 440	4	47	2-K24	87 08 695	4	49	2-L02	87 10 303	4	15	2-J16	87 11 855	4	13	1-F14			
87 07 457	4	47	2-K24	87 08 703	0	14	1-F15	87 10 380	4	29	2-K08	87 11 855	4	19	2-J20			
87 07 485	0	15	1-F16	87 08 703	0	15	1-F16	87 10 360	4	31	2-K08	87 11 871	4	13	2-J14			
87 07 481	0	14	1-F15	87 08 703	4	47	2-K24	87 10 410	4	21	2-J22	87 11 871	4	17	2-J18			
87 07 489	0	14	1-F15	87 08 729	0	14	1-F15	87 10 410	4	25	2-K02	87 11 871	4	43	2-K20			
87 07 507	0	14	1-F15	87 08 729	4	45	2-K22	87 10 568	4	19	2-J20	87 11 906	4	23	2-J24			
87 07 515	4	47	2-K24	87 08 760	4	49	2-L02	87 10 725	0	13	1-F14	87 11 947	4	21	2-J22			
87 07 523	4	45	2-K22	87 08 778	4	41	2-K18	87 10 857	4	43	2-K20	87 11 954	4	21	2-J22			
87 07 564	4	45	2-K22	87 08 786	4	45	2-K22	87 10 865	4	21	2-J22	87 12 038	0	13	1-F14			
87 07 572	4	45	2-K22	87 08 794	4	45	2-K22	87 10 895	4	25	2-K02	87 12 036	4	5	2-J06			
87 07 580	0	14	1-F15	87 08 836	4	29	2-K06	87 10 881	0	12	1-F13	87 12 044	4	13	1-F14			
87 07 580	4	45	2-K22	87 08 836	4	31	2-K08	87 10 881	0	13	1-F14	87 12 044	4	5	2-J06			
87 07 588	4	45	2-K22	87 08 836	4	47	2-K24	87 10 881	4	21	2-J22	87 12 077	4	13	2-J14			
87 07 648	0	15	1-F16	87 08 851	4	47	2-K24	87 10 881	4	25	2-K02	87 12 077	4	17	2-J18			
87 07 648	4	49	2-L02	87 08 869	4	47	2-K24	87 10 956	4	11	2-J12	87 12 135	4	21	2-J22			
87 07 655	0	15	1-F16	87 08 877	4	47	2-K24	87 10 956	4	15	2-J16	87 12 135	4	25	2-K02			
87 07 671	0	15	1-F16	87 08 893	4	49	2-L02	87 10 964	4	21	2-J22	87 12 184	4	13	2-J14			
87 07 671	4	49	2-L02	87 08 927	4	49	2-L02	87 11 038	4	21	2-J22	87 12 192	4	13	2-J14			
87 07 721	0	15	1-F16	87 08 935	4	49	2-L02	87 11 038	4	25	2-K02	87 12 192	4	17	2-J18			
87 07 721	4	49	2-L02	87 08 943	4	49	2-L02	87 11 053	4	19	2-J20	87 12 200	4	13	2-J14			
87 07 739	0	15	1-F16	87 08 968	0	16	1-F17	87 11 079	0	12	1-F13	87 12 283	4	21	2-J22			
87 07 747	4	49	2-L02	87 08 968	4	41	2-K18	87 11 079	0	13	1-F14	87 12 283	4	25	2-K02			
87 07 754	4	49	2-L02	87 09 008	4	51	2-L04	87 11 103	4	21	2-J22	87 12 309	4	23	2-J24			
87 07 754	4	49	2-L02	87 09 057	4	43	2-K20	87 11 103	4	25	2-K02	87 12 317	4	11	2-J12			
87 07 762	0	15	1-F16	87 09 065	4	49	2-L02	87 11 180	4	29	2-K06	87 12 317	4	15	2-J16			
87 07 788	0	15	1-F16	87 09 081	4	45	2-L02	87 11 180	4	31	2-K08	87 12 325	4	23	2-K06			
87 07 788	4	49	2-L02	87 09 107	4	53	2-L06	87 11 285	0	12	1-F13	87 12 366	4	9	2-J12			
87 07 887	4	49	2-L02	87 09 164	4	19	2-L02	87 11 285	0	13	1-F14	87 12 366	4	11	2-J12			
87 07 925	0	15	1-F16	87 09 196	4	43	2-K20	87 11 285	4	19	2-J20	87 12 366	4	13	2-J14			
87 07 929	4	49	2-L02	87 09 206	0	16	1-F17	87 11 301	4	21	2-J22	87 12 382	4	23	2-J24			
87 07 952	0	15	1-F16	87 09 206	4	47	2-K24	87 11 327	4	23	2-J24	87 12 382	4	27	2-K06			
87 07 986	4	49	2-L02	87 09 222	4	47	2-K24	87 11 343	4	21	2-J22	87 12 390	4	17	2-J18			
87 08 026	4	49	2-L02	87 09 255	4	45	2-K22	87 11 350	4	21	2-J22	87 12 416	4	9	2-J10			
87 08 034	4	49	2-L02	87 09 263	4	45	2-K22	87 11 350	4	25	2-K02	87 12 416	4	11	2-J12			

NUMERICAL REGISTER				NUMMERREGISTER				Date Datum	Group Grupp	Page Sida					
								1987-10	10A	23					
Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
87 12 416	4	13	2-J14	87 13 554	4	21	2-J22	87 18 785	4	17	2-J18	87 90 263	1	23	1-H24
87 12 465	4	21	2-J22	87 13 554	4	25	2-K02	87 18 835	4	23	2-J24	87 90 297	1	23	1-H24
87 12 556	4	27	2-K04	87 13 570	4	21	2-J22	87 18 835	4	27	2-K04	87 90 305	1	13	1-H14
87 12 572	4	25	2-K02	87 13 570	4	25	2-K02	87 19 015	4	27	2-K04	87 90 313	1	13	1-H14
87 12 580	4	25	2-K02	87 13 588	4	25	2-K02	87 19 775	4	13	2-J14	87 90 321	1	13	1-H14
87 12 598	4	25	2-K02	87 13 596	4	25	2-K02	87 19 775	4	17	2-J18	87 90 370	1	17	1-H14
87 12 608	4	25	2-K02	87 13 612	4	15	2-J16	87 19 824	0	14	1-F15	87 90 380	1	23	1-H24
87 12 655	4	27	2-K04	87 13 636	4	27	2-K04	87 20 419	0	13	1-F14	87 90 412	1	17	1-H18
87 12 697	4	25	2-K02	87 13 679	4	9	2-J10	87 20 468	0	13	1-F14	87 90 420	1	17	1-H18
87 12 762	4	25	2-K02	87 13 679	4	15	2-J16	87 20 476	3	13	1-F14	87 90 438	1	17	1-H18
87 12 770	0	14	1-F15	87 13 679	4	17	2-J18	87 20 732	4	27	2-K04	87 90 446	1	17	1-H18
87 12 770	4	25	2-K02	87 13 778	4	21	2-J22	87 24 841	0	13	1-F14	87 90 453	1	17	1-H18
87 12 838	4	25	2-K02	87 13 960	4	13	2-J14	87 24 890	0	17	1-F18	87 90 461	1	17	1-H18
87 12 867	4	27	2-K04	87 13 950	4	17	2-J18	87 25 038	4	13	2-J14	87 90 479	1	17	1-H18
87 12 867	4	27	2-K04	87 13 984	4	9	2-J10	87 25 814	4	13	2-J14	87 90 487	1	17	1-H18
87 12 903	0	14	1-F15	87 13 984	4	11	2-J12	87 25 814	4	17	2-J18	87 90 487	1	25	1-I02
87 12 903	4	11	2-J12	87 13 984	4	13	2-J14	87 25 822	4	43	2-K20	87 90 503	1	17	1-H18
87 12 903	4	15	2-J16	87 14 283	4	13	2-J20	87 26 713	0	13	1-F14	87 90 511	1	17	1-H18
87 12 911	4	27	2-K04	87 14 412	0	12	1-F13	87 26 713	4	5	2-J06	87 90 529	1	13	1-H14
87 12 929	4	27	2-K04	87 14 412	4	19	2-J20	37 70 893	0	12	1-F13	87 90 537	1	23	1-H24
87 12 937	4	27	2-K04	87 14 420	0	12	1-F13	87 70 893	4	19	2-J20	87 90 552	1	19	1-H20
87 12 945	4	17	2-J18	87 14 420	4	19	2-J20	87 80 058	0	15	1-F16	87 90 560	1	19	1-H20
87 12 952	4	17	2-J18	87 14 446	4	25	2-K02	87 80 058	4	47	2-K24	87 90 578	1	19	1-H20
87 12 952	4	17	2-J18	87 14 503	4	25	2-K02	87 80 124	0	15	1-F16	87 90 610	1	23	1-H24
87 12 978	4	15	2-J16	87 14 511	4	25	2-K02	87 80 124	4	51	2-L04	87 90 636	1	17	1-H18
87 12 986	0	14	1-F15	87 14 651	4	25	2-K02	87 80 454	0	17	1-F18	87 90 636	1	25	1-I02
87 12 986	4	15	2-J16	87 14 669	4	25	2-K02	87 80 454	4	23	2-J24	87 90 644	1	17	1-H18
87 12 994	4	25	2-K02	87 14 677	4	21	2-J22	87 80 454	4	27	2-K04	87 90 644	1	25	1-I02
87 13 000	4	27	2-K04	87 14 677	4	23	2-K02	87 80 637	0	15	1-F16	87 90 651	1	17	1-H18
87 13 026	4	25	2-K02	87 14 685	4	27	2-K04	87 80 637	4	43	2-K20	87 90 651	1	25	1-I02
87 13 034	4	29	2-K06	87 14 693	4	27	2-K04	87 80 645	0	14	1-F15	87 90 669	1	17	1-H18
87 13 034	4	31	2-K08	87 14 701	4	25	2-K02	87 80 655	4	47	2-K24	87 90 669	1	25	1-I02
87 13 042	4	29	2-K06	87 14 743	4	15	2-J16	87 80 655	0	14	1-F15	87 90 677	1	19	1-H20
87 13 042	4	31	2-K08	87 14 750	4	11	2-J12	87 80 652	4	47	2-K24	87 90 685	1	19	1-H20
87 13 091	4	23	2-J24	87 14 750	4	15	2-J16	87 80 660	0	14	1-F15	87 90 685	1	23	1-H24
87 13 091	4	27	2-K04	87 14 792	4	23	2-J24	87 80 981	4	49	2-L02	87 90 727	1	23	1-H24
87 13 158	4	21	2-J22	87 15 005	4	25	2-K02	87 81 007	0	12	1-F13	87 90 743	1	17	1-H18
87 13 158	4	25	2-K02	87 15 013	4	25	2-K02	87 81 007	0	13	1-F14	87 90 748	1	15	1-H16
87 13 166	4	17	2-J18	87 15 021	4	25	2-K02	87 81 007	4	19	2-J20	87 90 776	1	15	1-H16
87 13 190	4	25	2-K02	87 15 062		27	2-K04	87 81 031	0	13	1-F14	87 90 800	1	17	1-H18
87 13 208	4	25	2-K02	87 15 088	4	25	2-K02	87 81 031	4	23	2-J24	87 90 819	1	13	1-H14
87 13 216	0	13	1-F14	87 15 096	4	25	2-K02	87 81 031	4	27	2-K04	87 90 818	1	15	1-H16
87 13 216	0	14	1-F15	87 15 120	4	27	2-K02	87 81 221	0	13	1-F14	87 90 869	1	21	1-H22
87 13 216	4	11	2-J12	87 15 223	4	23	2-J24	87 81 221	4	27	2-K04	87 90 884	1	21	1-H22
87 13 216	4	15	2-J16	87 15 229	4	27	2-K04	87 90 073	1	23	1-H24	87 90 875	1	23	1-H24
87 13 224	4	21	2-J22	87 15 252	0	13	1-F14	87 90 081	1	23	1-H24	87 90 860	1	23	1-H24
87 13 406	4	25	2-K02	87 15 252	4	5	2-J06	87 90 107	1	23	1-H24	87 90 851	1	21	1-H22
87 13 446	4	25	2-K02	87 15 260	0	13	1-F14	87 90 115	1	23	1-H24	87 90 861	1	17	1-H18
87 13 455	4	25	2-K02	87 15 260	4	5	2-J06	87 90 123	1	23	1-H24	47 90 917	1	13	1-H14
87 13 463	4	29	2-K06	87 15 393	0	14	1-F15	87 90 121	1	23	1-H24	87 90 925	1	17	1-H18
87 13 463	4	31	2-K08	87 15 484	4	13	2-J14	87 90 149	1	23	1-H24	87 90 933	1	17	1-H18
87 13 471	4	21	2-J22	87 15 371	0	14	1-F15	87 90 156	1	23	1-H24	87 90 941	1	25	1-I02
87 13 471	4	21	2-J22	87 15 439	0	11	1-F11	87 90 161	1	23	1-H24	87 90 922	1	25	1-I02
87 13 497	4	25	2-K02	87 18 439	0	16	1-F17	87 90 180	1	23	1-H24	87 91 055	1	23	1-H24
87 13 513	4	21	2-J22	87 18 629	4	27	2-K04	87 90 206	1	23	1-H24	87 91 071	1	23	1-H24
87 13 513	4	25	2-K02	87 18 945	4	27	2-K04	87 90 214	1	23	1-H24	87 91 089	1	23	1-H24
87 13 521	4	21	2-J22	87 18 090	4	27	2-K04	87 90 222	1	23	1-H24	87 91 105	1	23	1-H24
87 13 521	4	25	2-K02	87 18 785	0	6	1-F07	87 90 230	1	23	1-H24	87 91 576	1	21	1-H22
87 13 539	4	21	2-J22	87 18 785	0	14	1-F15	87 90 248	1	23	1-H24	87 91 618	1	21	1-H22
87 13 539	4	25	2-K02	87 18 785	4	13	2-J14	87 90 255	1	23	1-H24	88 00 914	2	101	2-E22

Page Side	Group Grupp		Date Datum	NUMERICAL REGISTER				NUMMERREGISTER			
24	10A		1987-10								
Part No Art.nr	Gr Gr	Page Grid Sida Koord	Part No Art.nr	Gr Gr	Page Grid Sida Koord	Part No Art.nr	Gr Gr	Page Grid Sida Koord	Part No Art.nr	Gr Gr	Page Grid Sida Koord
88 02 175	6	3 3-B04	88 06 527	0	18 1-F15	88 25 067	0	18 1-F19	88 29 002	0	18 1-F19
88 12 810	3	15 2-F16	88 08 543	0	18 1-F19	88 25 067	5	3 3-A04	88 29 010	0	18 1-F19
88 15 946	8	155 3-J12	88 08 543	5	5 3-A06	88 25 372	5	3 3-A04	88 29 010	5	7 3-A06
88 15 953	8	155 3-J12	88 08 568	5	5 3-A06	88 25 380	5	3 3-A04	88 29 044	0	20 1-F21
88 16 415	8	157 3-J14	88 08 576	5	5 3-A06	88 25 414	5	3 3-A04	88 29 044	6	9 3-B10
88 16 423	8	157 3-J14	88 08 675	7	9 3-C10	88 25 422	5	3 3-A04	88 29 259	5	9 3-A10
88 17 256	0	4 1-F05	88 08 766	0	18 1-F19	88 25 521	0	19 1-F20	88 29 313	5	11 3-A12
88 17 272	0	6 1-F07	88 08 766	5	5 3-A06	88 25 539	0	18 1-F19	88 29 355	5	9 3-A10
88 17 272	2	107 2-E12	88 09 145	1	27 1-I04	88 25 547	0	18 1-F19	88 29 371	5	9 3-A10
88 17 280	2	77 2-D06	88 09 145	7	3 3-C04	88 25 562	0	18 1-F19	88 30 034	0	12 1-F13
88 17 306	0	10 1-F11	88 09 632	7	9 3-C10	88 25 745	0	19 1-F20	88 30 182	4	7 2-J08
88 17 371	0	6 1-F07	88 10 705	0	18 1-F19	88 25 828	0	18 1-F19	88 30 224	8	139 3-I20
88 17 371	2	87 2-D18	88 10 705	5	7 3-A06	88 25 851	0	18 1-F19	88 30 299	7	9 3-C10
88 17 371	2	89 2-D18	88 11 190	9	3 3-L04	88 25 869	0	18 1-F19	88 30 307	7	9 3-C10
88 17 397	0	6 1-F07	88 11 737	5	5 3-A06	88 26 172	6	3 3-B04	88 30 323	7	3 3-C04
88 17 579	0	10 1-F11	88 11 745	5	5 3-A06	88 26 180	5	3 3-B04	88 30 448	0	18 1-F19
88 17 728	0	4 1-F05	88 12 115	5	11 3-A12	88 26 198	5	3 3-A04	88 30 448	5	3 3-A04
88 17 728	2	11 2-A12	88 12 115	6	7 3-B08	88 26 214	5	3 3-A04	88 30 463	0	18 1-F19
88 17 835	0	5 1-F06	88 16 272	4	7 2-J08	88 26 222	5	3 3-A04	88 30 463	5	3 3-A04
88 17 868	0	5 1-F06	88 16 272	5	11 3-A12	88 26 230	5	3 3-A04	88 31 198	9	3 3-L04
88 18 080	0	13 1-F14	88 16 967	1	17 1-H18	88 26 248	5	3 3-A04	88 31 461	5	9 3-A10
88 18 080	4	5 2-J06	88 16 975	4	37 2-K14	88 26 248	6	7 3-B08	88 31 743	5	7 3-A06
88 18 106	0	13 1-F14	88 17 396	7	3 3-C04	88 26 644	6	7 3-B08	88 31 784	5	9 3-A10
88 18 106	4	5 2-J06	88 17 403	7	3 3-C04	88 26 651	6	7 3-B08	88 31 933	5	3 3-A04
88 18 114	0	13 1-F14	88 17 411	7	3 3-C04	88 26 669	6	7 3-B08	88 31 941	5	3 3-A04
88 18 114	4	5 2-J06	88 17 494	9	3 3-L04	88 26 686	6	7 3-B08	88 31 974	7	3 3-C04
88 18 171	0	6 1-F07	88 17 781	5	13 3-A14	88 26 693	6	7 3-B08	88 32 014	7	9 3-C10
88 18 197	0	5 1-F07	88 17 800	5	13 3-A14	88 26 701	6	7 3-B08	88 32 071	7	9 3-C10
88 18 213	0	5 1-F06	88 19 490	5	9 3-A10	88 26 727	6	7 3-B08	88 32 147	3	35 2-G12
88 18 221	0	5 1-F06	88 19 656	7	3 3-C04	88 26 743	6	7 3-B08	88 32 154	3	35 2-G12
88 18 262	0	12 1-F13	88 19 847	7	3 3-C04	88 26 768	6	7 3-B08	88 32 196	5	5 3-A06
88 18 262	4	5 2-J06	88 19 862	7	3 3-C04	88 27 139	4	7 2-J08	88 32 204	5	5 3-A06
88 18 650	1	35 1-I12	88 19 870	7	3 3-C04	88 27 303	5	3 3-A04	88 32 238	5	5 3-A06
88 18 564	1	35 1-I12	88 20 019	0	22 1-F23	88 27 352	5	13 3-A14	88 32 246	0	18 1-F19
88 18 692	1	35 1-I12	88 20 019	7	3 3-C04	88 27 774	5	13 3-A14	88 32 279	0	18 1-F19
88 18 726	1	5 1-H06	88 20 183	6	7 3-B08	88 27 782	5	13 3-A14	88 32 287	0	18 1-F19
88 18 734	1	5 1-H06	88 20 795	6	7 3-B08	88 27 790	5	13 3-A14	88 32 501	3	35 2-G12
88 18 742	1	5 1-H06	88 21 108	7	3 3-C04	88 27 808	5	13 3-A14	88 32 741	7	9 3-C10
88 18 759	1	5 1-H06	88 21 504	4	37 2-K14	88 27 915	5	13 3-A14	88 32 786	7	9 3-C10
88 18 783	0	4 1-F05	88 21 512	4	37 2-K14	88 27 923	5	13 3-A14	88 32 840	7	3 3-C04
88 18 791	1	31 1-I08	88 21 520	4	37 2-K14	88 27 931	5	3 3-A04	88 33 067	6	7 3-B08
88 18 809	1	31 1-I08	88 21 546	6	3 3-B04	88 28 046	7	9 3-C10	88 33 283	7	9 3-C10
88 18 908	1	39 1-I16	88 21 728	4	37 2-K14	88 28 137	5	3 3-A04	88 33 335	5	9 3-A10
88 19 005	1	9 1-H10	88 21 785	4	37 2-K14	88 28 210	0	18 1-F19	88 33 509	5	11 3-A12
88 19 013	1	27 1-I04	88 21 793	4	37 2-K14	88 28 228	0	18 1-F19	88 33 889	7	3 3-C04
88 40 568	5	13 3-A14	88 22 205	6	3 3-B04	88 28 236	0	18 1-F19	88 33 897	7	7 3-C08
88 49 614	0	16 1-F17	88 22 445	7	7 3-C08	88 28 251	0	18 1-F19	88 33 970	6	3 3-B04
88 49 614	4	13 2-J14	88 22 478	5	3 3-A04	88 28 276	0	18 1-F19	88 33 988	6	3 3-B04
88 49 614	4	17 2-B18	88 22 486	5	3 3-A04	88 28 426	0	18 1-F19	88 34 002	6	3 3-B04
88 46 614	4	43 2-K20	88 22 510	4	37 2-K14	88 28 426	5	7 3-A08	88 34 010	6	3 3-B04
88 53 772	3	87 2-F16	88 22 700	6	3 3-B04	88 28 434	0	18 1-F19	88 34 036	5	3 3-A04
88 53 304	0	12 1-F13	88 22 734	6	3 3-B04	88 28 434	5	7 3-A08	88 34 119	6	7 3-B08
88 53 304	4	7 2-J08	88 22 858	6	3 3-B04	88 28 541	0	18 1-F19	88 34 119	6	9 3-B10
88 53 783	5	13 3-A14	88 22 866	6	3 3-B04	88 28 541	5	7 3-A08	88 34 135	6	7 3-B08
88 54 575	5	5 3-A06	88 24 169	6	7 3-B08	88 28 599	5	11 3-A12	88 34 192	6	7 3-B08
88 57 941	5	5 3-A06	88 24 490	4	7 2-J08	88 28 599	5	9 3-A10	88 34 200	6	7 3-B08
88 57 966	5	9 3-A10	88 24 557	5	11 3-A12	88 28 848	0	20 1-F21	88 34 234	6	7 3-B08
88 58 121	5	13 3-A14	88 24 755	5	5 3-A06	88 28 848	6	9 3-B10	88 34 242	6	7 3-B08
88 58 139	5	13 3-A14	88 25 034	5	3 3-A04	88 28 847	5	9 3-A10	88 34 242	6	9 3-B10
88 58 162	5	9 3-A10	88 25 042	5	3 3-A04	88 28 996	0	18 1-F19	88 34 259	6	7 3-B08

NUMERICAL REGISTER					NUMMERREGISTER					Date Datum		Group Grupp		Page Side			
												1987-10		10A		25	
Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord		
88 34 259	6		9 3-B10	88 36 718	6		13 3-B14	88 39 274	6		3 3-B04	88 41 023	6		3 3-B04		
88 34 499	7		9 3-C10	88 36 759	6		13 3-B14	88 39 282	6		3 3-B04	88 41 114	6		5 3-B06		
88 34 622	5		5 3-A06	88 36 791	6		13 3-B14	88 39 332	6		5 3-B06	88 41 155	2		103 2-E08		
88 34 655	5		5 3-A06	88 36 890	6		9 3-B10	88 39 340	6		5 3-B06	88 41 205	6		5 3-B06		
88 34 689	5		5 3-A06	88 36 890	6		13 3-B14	88 39 357	5		3 3-A04	88 41 270	0		12 1-F13		
88 34 697	7		9 3-C10	88 36 908	6		9 3-B10	88 39 381	0		22 1-F23	88 41 312	4		7 2-J08		
88 34 705	7		9 3-C10	88 36 908	6		11 3-B12	88 39 381	7		3 3-C04	88 41 320	5		11 3-A12		
88 34 739	5		5 3-A06	88 36 916	6		11 3-B12	88 39 415	0		22 1-F23	88 41 361	2		103 2-E08		
88 34 747	5		5 3-A06	88 36 916	6		13 3-B14	88 39 415	0		23 1-F24	88 41 403	6		3 3-B04		
88 34 770	5		5 3-A06	88 36 924	6		11 3-B12	88 39 415	7		3 3-C04	88 41 452	7		3 3-C04		
88 34 786	6		3 3-B04	88 36 924	6		13 3-B14	88 39 415	7		7 3-C08	88 41 478	4		7 2-J08		
88 34 786	6		3 3-B04	88 36 932	6		11 3-B12	88 39 423	0		22 1-F23	88 41 478	5		11 3-A12		
88 34 820	7		3 3-C04	88 36 966	6		11 3-B12	88 39 423	0		23 1-F24	88 41 502	7		7 3-C08		
88 34 836	5		5 3-A06	88 39 973	6		13 3-B14	88 39 423	7		3 3-C04	88 41 528	2		103 2-E08		
88 34 952	6		5 3-B06	88 39 999	6		9 3-B10	88 39 423	7		7 3-C08	88 41 536	2		103 2-E08		
88 35 025	6		5 3-B06	88 37 005	6		9 3-B10	88 39 431	0		23 1-F24	88 41 544	2		103 2-E08		
88 35 134	6		7 2-J08	88 37 013	6		9 3-B10	88 39 431	7		7 3-C08	88 41 551	2		103 2-E08		
88 35 132	5		11 3-A12	88 37 021	6		9 3-B10	88 39 449	0		22 1-F23	88 41 569	2		103 2-E08		
88 35 157	5		11 3-A12	88 37 039	6		9 3-B10	88 39 449	0		23 1-F24	88 41 577	2		103 2-E08		
88 35 298	7		7 3-C08	88 37 047	6		9 3-B10	88 39 449	7		3 3-C04	88 41 601	2		103 2-E08		
88 35 306	7		9 3-C10	88 37 070	6		11 3-B12	88 39 449	7		7 3-C08	88 41 619	2		103 2-E08		
88 35 314	7		7 3-C08	88 37 088	6		11 3-B12	88 39 464	7		7 3-C08	88 41 635	5		11 3-A12		
88 35 330	7		7 3-C08	88 37 146	6		11 3-B12	88 39 472	7		3 3-C04	88 41 734	7		7 3-C08		
88 35 371	4		7 2-J08	88 37 153	6		9 3-B10	88 39 480	2		103 2-E08	88 41 916	0		18 1-F19		
88 35 389	2		103 2-E08	88 37 153	6		11 3-B12	88 39 498	2		103 2-E08	88 41 965	5		3 3-A04		
88 35 397	2		103 2-E08	88 37 161	6		9 3-B10	88 39 548	0		23 1-F24	88 42 005	7		9 3-C10		
88 35 439	5		7 3-A06	88 37 169	6		9 3-B10	88 39 555	7		3 3-C04	88 42 021	5		11 3-A12		
88 35 454	6		5 3-B06	88 37 468	0		20 1-F21	88 39 562	7		3 3-C04	88 42 096	7		11 3-C04		
88 35 652	2		103 2-E08	88 37 468	6		9 3-B10	88 39 670	5		9 3-A10	88 42 104	6		7 3-B08		
88 35 736	6		3 3-B04	88 37 500	6		9 3-B10	88 39 696	0		23 1-F24	88 42 203	7		3 3-C04		
88 35 744	6		3 3-B04	88 37 555	0		20 1-F21	88 39 761	8		19 3-D20	88 42 302	5		7 3-A08		
88 35 751	4		7 2-J08	88 37 559	6		9 3-B10	88 39 787	7		3 3-C04	88 42 385	3		35 2-G12		
88 35 751	5		11 3-A12	88 37 625	5		11 3-A12	88 39 866	6		5 3-B06	88 42 609	5		7 3-A08		
88 35 819	7		3 3-C04	88 37 633	5		11 3-A12	88 39 894	0		18 1-F19	88 42 715	6		5 3-B06		
88 35 838	7		3 3-C04	88 37 831	5		7 3-A08	88 39 914	4		7 2-J08	88 42 815	7		3 3-C10		
88 35 855	5		5 3-A06	88 37 896	5		13 3-A14	88 39 944	7		3 3-C04	88 42 823	0		12 1-F13		
88 35 859	5		7 3-A08	88 38 110	5		3 3-A04	88 39 963	5		7 3-A08	88 42 849	0		20 1-F21		
88 35 934	9		3 3-L04	88 38 136	5		11 3-A12	88 40 009	5		9 3-A10	88 42 849	6		9 3-B10		
88 35 975	5		5 3-A08	88 38 185	4		7 2-J08	88 40 033	5		11 3-A12	88 42 864	0		22 1-F23		
88 36 080	5		7 3-A08	88 38 284	5		11 3-A12	88 40 108	5		9 3-A10	88 42 948	7		3 3-C04		
88 36 106	5		7 3-A08	88 38 318	5		11 3-A12	88 40 132	5		9 3-A10	88 42 989	0		22 1-F23		
88 36 163	6		5 3-B06	88 38 359	5		11 3-A12	88 40 165	5		9 3-A10	88 42 989	7		3 3-C04		
88 36 189	7		7 3-B08	88 38 458	7		3 3-C04	88 40 199	5		9 3-A10	88 43 029	7		3 3-C04		
88 36 262	7		3 3-C04	88 38 466	0		23 1-F24	88 40 249	6		5 3-B06	88 43 201	6		11 3-B12		
88 36 288	6		9 3-B10	88 38 466	7		7 3-C08	88 40 314	5		11 3-A12	88 43 219	6		11 3-B12		
88 36 403	6		5 3-B06	88 38 565	6		7 3-B08	88 40 504	4		37 2-K14	88 43 227	6		11 3-B12		
88 36 411	6		5 3-B06	88 38 631	7		3 3-C04	88 40 579	6		11 3-B12	88 43 235	6		11 3-B12		
88 36 460	0		20 1-F21	88 38 656	7		3 3-C04	88 40 582	2		103 2-E08	88 43 243	6		11 3-B12		
88 36 460	6		9 3-B10	88 38 813	0		20 1-F21	88 40 629	4		7 2-J08	88 43 250	6		11 3-B12		
88 36 619	6		11 3-B12	88 38 813	6		9 3-B10	88 40 645	6		5 3-B06	88 43 268	6		11 3-B12		
88 36 619	6		13 3-B14	88 38 995	6		11 3-B12	88 40 652	5		9 3-A10	88 43 276	6		11 3-B12		
88 36 627	6		11 3-B12	88 39 076	3		35 2-G12	88 40 678	6		9 3-B10	88 43 284	6		13 3-B14		
88 36 635	6		11 3-B12	88 39 084	3		35 2-G12	88 40 702	6		9 3-B10	88 43 292	6		13 3-B14		
88 36 635	6		13 3-B14	88 39 092	3		35 2-G12	88 40 744	5		9 3-A10	88 43 300	6		13 3-B14		
88 36 643	6		11 3-B12	88 39 100	3		35 2-G12	88 40 751	5		9 3-A10	88 43 318	6		13 3-B14		
88 36 648	6		11 3-B12	88 39 118	3		35 2-G12	88 40 769	0		12 1-F13	88 43 326	6		13 3-B14		
88 36 676	6		11 3-B12	88 39 126	3		35 2-G12	88 40 789	4		7 2-J08	88 43 334	6		13 3-B14		
88 36 684	5		9 3-B10	88 39 134	6		13 3-B14	88 40 801	6		7 3-B08	88 43 342	6		13 3-B14		
88 36 684	6		11 3-B12	88 39 159	6		13 3-B14	88 40 819	5		9 3-A10	88 43 359	0		20 1-F21		
88 36 700	6		9 3-B10	88 39 175	6		13 3-B14	88 40 815	6		3 3-B04	88 43 369	8		9 3-B12		

Page Side	Group Grupp	Date Datum	NUMERICAL REGISTER				NUMMERREGISTER				
26	10A	1987-10									
Part No Art nr	Gr	Page Grid Gr Sida Koord	Part No Art nr	Gr	Page Grid Gr Sida Koord	Part No Art nr	Gr	Page Grid Gr Sida Koord	Part No Art nr	Gr	Page Grid Gr Sida Koord
89 43 391	2	105 2-E10	89 88 123	0	23 1-F24	89 95 607	1	27 1-I04	92 25 467	8	27 3-E04
89 43 482	7	3 3-C04	89 89 840	6	13 3-B14	89 95 755	1	27 1-I04	92 25 871	8	165 3-J22
89 43 672	7	3 3-C04	89 90 012	6	3 3-B04	89 95 763	1	27 1-I04	92 26 432	8	39 3-E16
89 44 415	7	3 3-C04	89 90 184	0	18 1-F19	89 95 771	1	27 1-I04	92 26 440	8	39 3-E16
89 44 720	6	7 3-B08	89 90 194	5	3 3-A04	89 95 797	1	29 1-I06	92 26 481	8	77 3-G06
89 44 746	6	7 3-B06	89 91 093	0	22 1-F23	89 95 805	1	27 1-I04	92 26 488	8	83 3-G12
89 44 753	6	7 3-B08	89 91 101	0	23 1-F24	89 95 813	1	29 1-I06	92 26 489	8	79 3-G08
89 44 761	6	7 3-B08	89 91 473	5	11 3-A12	89 95 896	1	29 1-I06	92 26 498	8	83 3-G12
89 44 779	6	7 3-B08	89 91 549	9	3 3-L04	89 95 904	1	29 1-I06	92 26 511	8	11 3-D12
89 44 787	6	7 3-B08	89 93 016	7	3 3-C04	89 95 920	1	27 1-I04	92 26 234	8	25 3-E02
89 44 977	4	7 2-J08	89 93 024	0	23 1-F24	89 96 043	1	29 1-I06	92 28 222	8	25 3-E02
89 45 156	4	7 2-J08	89 93 024	7	7 3-C08	89 96 068	1	29 1-I06	92 28 255	0	24 1-G01
89 45 248	0	12 1-F13	89 93 032	0	23 1-F24	89 96 084	1	27 1-I04	92 28 271	8	21 3-D22
89 45 248	4	7 2-J08	89 93 032	7	7 3-C08	89 96 175	1	27 1-I04	92 29 717	8	23 3-D24
89 45 255	0	12 1-F13	89 93 065	0	12 1-F13	89 96 183	1	27 1-I04	92 29 725	8	23 3-D24
89 45 255	4	7 2-J08	89 93 073	0	12 1-F13	89 96 191	1	29 1-I06	92 29 865	8	15 3-D16
89 45 263	4	7 2-J08	89 93 073	4	37 2-K14	89 96 217	1	29 1-I06	92 29 949	8	13 3-D16
89 45 420	4	37 2-K14	89 93 089	6	11 3-B12	89 96 225	1	29 1-I06	92 30 079	8	11 3-D12
89 45 438	4	37 2-K14	89 93 107	0	18 1-F19	89 96 233	1	29 1-I06	92 30 095	8	11 3-D12
89 45 727	4	37 2-K14	89 93 115	0	19 1-F20	89 96 241	1	27 1-I04	92 30 301	8	15 3-D16
89 45 735	4	37 2-K14	89 93 115	5	7 3-A08	89 96 258	1	27 1-I04	92 30 305	8	187 3-K20
89 45 776	7	3 3-C04	89 93 123	0	22 1-F23	89 96 274	1	27 1-I04	92 31 044	0	30 1-G07
89 45 974	5	9 3-A10	89 93 123	7	3 3-C04	89 96 399	1	27 1-I04	92 31 101	0	30 1-G07
89 46 014	5	9 3-A10	89 93 149	4	37 2-K14	89 96 407	1	27 1-I04	92 31 150	0	30 1-G07
89 46 345	6	13 3-B14	89 93 156	0	12 1-F13	89 96 415	1	27 1-I04	92 31 259	8	77 3-G06
89 46 352	6	13 3-B14	89 93 156	4	7 2-J08	89 96 423	1	27 1-I04	92 31 259	8	81 3-G10
89 46 360	6	9 3-B10	89 93 297	5	3 3-A04	91 01 056	9	3 3-L04	92 31 406	8	187 3-K20
89 47 079	6	13 3-B14	89 93 321	0	20 1-F21	91 03 474	0	19 1-F20	92 31 499	8	77 3-G06
89 47 087	6	13 3-B14	89 93 321	6	3 3-B04	91 03 474	5	3 3-A04	92 31 499	8	83 3-G12
89 47 095	6	13 3-B14	89 93 354	0	20 1-F21	92 21 011	0	30 1-G07	92 31 796	0	25 1-G02
89 47 103	6	13 3-B14	89 93 354	6	7 3-B08	92 21 029	0	30 1-G07	92 31 796	8	55 3-F08
89 47 210	7	3 3-C08	89 93 354	6	9 3-B10	92 21 276	8	75 3-G04	92 31 853	8	15 3-D16
89 47 574	5	13 3-A14	89 93 404	0	22 1-F23	92 21 294	8	75 3-G04	92 32 349	8	11 3-D12
89 47 798	7	3 3-C04	89 93 404	7	3 3-C04	92 21 292	8	75 3-G04	92 32 935	7	7 3-C08
89 47 806	7	3 3-C04	89 93 412	0	23 1-F24	92 21 300	8	75 3-G04	92 33 297	8	27 3-E04
89 47 814	7	5 3-C06	89 93 412	7	7 3-C08	92 21 334	8	75 3-G04	92 33 305	8	27 3-E04
89 47 822	7	5 3-C06	89 93 438	0	22 1-F23	92 21 342	8	77 3-G06	92 33 719	8	65 3-F08
89 47 830	7	5 3-C06	89 93 446	0	23 1-F24	92 21 383	8	9 3-D10	92 33 727	0	25 1-G02
89 47 848	7	5 3-C06	89 93 446	7	7 3-C08	92 21 581	8	87 3-G16	92 34 376	8	41 3-E18
89 47 970	6	5 3-B06	89 94 519	0	18 1-F19	92 21 581	8	93 3-G22	92 34 388	8	41 3-E18
89 47 988	6	5 3-B06	89 94 519	5	3 3-A04	92 21 680	8	65 3-F18	92 36 654	8	23 3-D24
89 48 044	6	5 3-B06	89 94 535	0	18 1-F19	92 21 987	8	57 3-F10	92 36 654	8	25 3-E02
89 48 051	4	7 2-J08	89 94 535	5	3 3-A04	92 21 995	8	23 3-D24	92 36 662	8	23 3-D24
89 48 051	5	11 3-A12	89 94 626	0	18 1-F19	92 21 995	8	25 3-E02	92 36 662	8	25 3-E02
89 48 143	7	3 3-C04	89 94 634	9	3 3-L04	92 22 001	8	23 3-D24	92 36 670	8	49 3-F02
89 48 150	7	3 3-C04	89 94 709	0	18 1-F19	92 22 001	8	25 3-E02	92 36 688	8	49 3-F02
89 48 176	7	3 3-C04	89 94 782	1	39 1-I16	92 22 613	0	30 1-G07	92 37 009	8	37 3-E14
89 48 291	6	7 3-B08	89 94 832	0	18 1-F19	92 22 613	8	85 3-G14	92 37 165	8	185 3-K18
89 51 732	9	3 3-L04	89 94 832	5	5 3-A06	92 22 613	8	91 3-G20	92 37 173	8	187 3-K20
89 51 740	9	3 3-L04	89 94 840	0	18 1-F19	92 23 256	8	51 3-F04	92 37 363	8	41 3-E18
89 62 201	1	29 1-I06	89 94 840	5	5 3-A06	92 23 264	8	51 3-F04	92 37 371	8	41 3-E18
89 65 129	6	7 3-B08	89 94 964	5	7 3-A08	92 23 371	8	55 3-F08	92 37 389	8	41 3-E18
89 65 180	0	20 1-F21	89 94 972	0	18 1-F19	92 23 439	8	83 3-G12	92 37 397	8	41 3-E18
89 65 180	6	7 3-B08	89 94 972	5	7 3-A08	92 23 447	8	83 3-G12	92 37 991	8	55 3-F08
89 65 376	6	13 3-B14	89 94 998	0	18 1-F19	92 23 926	8	13 3-D14	92 38 007	8	57 3-F10
89 65 384	0	20 1-F21	89 95 177	1	27 1-I04	92 23 991	8	17 3-D18	92 38 528	8	187 3-K20
89 65 459	5	13 3-A14	89 95 243	1	27 1-I04	92 24 544	8	43 3-E20	92 39 294	8	89 3-G18
89 65 533	0	18 1-F19	89 95 250	1	27 1-I04	92 24 544	8	49 3-F02	92 39 302	8	89 3-G18
89 66 622	4	7 2-J08	89 95 409	1	27 1-I04	92 24 676	8	187 3-K20	92 39 336	8	85 3-G14
89 66 115	0	22 1-F23	89 95 581	1	27 1-I04	92 25 458	8	55 3-F08	92 39 344	8	85 3-G14

NUMERICAL REGISTER					NUMMERREGISTER					Date Datum	Group Grupp	Page Sida			
										1987-10	10A	27			
Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
92 39 518	8	91	3-G20	92 93 366	8	27	3-E04	93 01 409	0	7	1-F08	93 02 969	0	28	1-G05
92 39 526	8	91	3-G20	92 93 473	8	41	3-E18	93 01 409	0	17	1-F18	93 02 969	8	179	3-K12
92 39 716	8	91	3-G20	92 93 481	8	41	3-E18	93 01 409	2	97	2-E02	93 02 969	6	183	3-K16
92 39 774	8	91	3-G20	92 93 853	8	49	3-F02	93 01 417	0	7	1-F08	93 03 009	2	25	2-B02
92 57 262	8	65	3-F18	92 93 861	8	49	3-F02	93 01 417	2	97	2-E02	93 03 181	2	39	2-B16
92 80 173	8	63	3-F16	92 93 896	8	43	3-E20	93 01 425	0	7	1-F08	93 03 207	2	37	2-B14
92 80 199	8	63	3-F16	92 93 903	8	43	3-E20	93 01 425	0	8	1-F09	93 03 207	2	39	2-B16
92 80 231	8	63	3-F16	92 97 458	8	87	3-G16	93 01 425	0	16	1-F17	93 03 215	2	39	2-B16
92 80 256	8	63	3-F16	92 97 458	8	93	3-G22	93 01 425	2	97	2-E02	93 03 249	2	37	2-B14
92 80 272	8	63	3-F16	93 00 047	2	85	2-D14	93 01 474	0	8	1-F09	93 03 298	2	37	2-B14
92 80 298	8	63	3-F16	93 00 195	4	55	2-L08	93 01 474	2	96	2-D24	93 03 322	0	5	1-F06
92 80 330	8	63	3-F16	93 00 203	4	55	2-L08	93 01 482	0	8	1-F09	93 03 322	2	87	2-D16
92 81 130	6	49	3-F02	93 00 211	4	55	2-L08	93 01 482	2	96	2-D24	93 03 322	2	89	2-D18
92 81 346	8	53	3-F06	93 00 252	4	41	2-K18	93 01 490	0	16	1-F17	93 03 371	2	57	2-C10
92 81 775	8	47	3-E24	93 00 260	4	53	2-L06	93 01 508	0	8	1-F09	93 03 389	2	49	2-C02
92 81 783	8	47	3-E24	93 00 286	4	49	2-L02	93 01 508	2	96	2-D24	93 03 397	2	49	2-C02
92 81 973	8	21	3-D22	93 00 302	2	59	2-C12	93 01 516	0	8	1-F09	93 03 413	2	59	2-C12
92 81 981	8	21	3-D22	93 00 310	2	25	2-B02	93 01 516	2	96	2-D24	93 03 462	2	59	2-C12
92 82 104	8	85	3-G14	93 00 369	2	49	2-C02	93 01 524	0	8	1-F09	93 03 629	2	75	2-D04
92 82 104	8	91	3-G20	93 00 369	2	53	2-C06	93 01 524	2	96	2-D24	93 03 678	0	7	1-F08
92 82 971	8	49	3-F02	93 00 468	0	29	1-G06	93 01 532	0	7	1-F08	93 03 678	0	16	1-F17
92 82 989	8	49	3-F02	93 00 468	2	73	2-D02	93 01 532	0	8	1-F09	93 03 678	2	97	2-E02
92 83 573	8	187	3-K20	93 00 476	0	6	1-F07	93 01 532	0	17	1-F18	93 03 694	0	7	1-F08
92 83 946	8	185	3-K18	93 00 476	2	27	2-B04	93 01 532	2	96	2-D24	93 03 694	0	16	1-F17
92 83 953	8	187	3-K20	93 00 526	2	91	2-D20	93 01 532	2	97	2-E02	93 03 694	2	97	2-E02
92 84 100	8	89	3-G18	93 00 534	2	49	2-C02	93 01 540	4	96	2-D24	93 03 702	0	7	1-F08
92 84 118	8	91	3-G20	93 00 567	0	8	1-F08	93 01 552	2	96	2-D24	93 03 702	0	16	1-F17
92 84 126	8	91	3-G20	93 00 567	2	96	2-D24	93 01 599	2	91	2-D20	93 03 702	2	97	2-E02
92 84 159	8	91	3-G20	93 00 583	2	96	2-D24	93 01 607	2	91	2-D20	93 03 710	0	15	1-F16
92 84 167	8	91	3-G20	93 00 591	2	95	2-D24	93 01 631	4	55	2-L08	93 03 710	4	45	2-12
92 84 191	8	85	3-G14	93 00 625	2	57	2-C10	93 01 698	4	55	2-L08	93 03 751	0	15	1-F16
92 84 209	8	85	3-G14	93 00 625	2	69	2-C22	93 01 706	0	6	1-F07	93 03 751	4	45	2-K22
92 84 399	0	30	1-G07	93 00 724	8	179	3-K12	93 01 706	2	109	2-E14	93 03 793	2	91	2-D20
92 84 480	8	57	3-F10	93 00 724	8	183	3-K16	93 01 714	0	6	1-F07	93 03 801	2	91	2-D20
92 84 498	8	57	3-F10	93 00 740	2	87	2-D18	93 01 722	0	6	1-F07	93 03 884	2	39	2-B16
92 84 506	8	57	3-F10	93 00 773	2	89	2-D18	93 01 748	2	79	2-D08	93 03 892	2	39	2-B16
92 84 514	8	57	3-F10	93 00 864	0	8	1-F09	93 01 771	0	7	1-F08	93 03 900	2	39	2-B16
92 84 753	8	187	3-K20	93 00 864	2	96	2-D24	93 01 771	0	16	1-F17	93 03 975	0	26	1-G03
92 86 253	8	21	3-D22	93 00 872	2	96	2-D24	93 01 771	2	97	2-E02	93 03 975	0	28	1-G05
92 86 261	8	21	3-D22	93 00 880	2	95	2-D24	93 01 789	0	7	1-F08	93 03 975	8	179	3-K12
92 87 111	8	77	3-G06	93 00 914	0	8	1-F09	93 01 789	2	97	2-E02	93 03 975	8	181	3-K14
92 87 111	8	81	3-G10	93 00 914	2	96	2-D24	93 01 797	4	55	2-L08	93 03 983	0	26	1-G03
92 88 150	8	173	3-K06	93 00 971	0	20	1-E12	93 01 961	0	8	1-F09	93 03 983	0	28	1-G05
92 88 168	8	173	3-K06	93 00 971	6	9	3-B10	93 01 961	2	96	2-D24	93 03 983	8	179	3-K12
92 88 192	8	77	3-G06	93 01 052	2	61	2-C14	93 02 142	2	49	2-C02	93 03 983	8	181	3-K14
92 88 290	8	77	3-G06	93 01 169	2	65	2-C18	93 02 159	2	49	2-C02	93 03 991	0	26	1-G03
92 88 515	8	187	3-K20	93 01 177	2	65	2-C18	93 02 183	2	49	2-C02	93 03 991	2	69	2-D22
92 88 523	0	24	1-G01	93 01 359	0	7	1-F08	93 02 225	2	79	2-D08	93 03 991	2	73	2-C02
92 88 812	0	24	1-G01	93 01 359	0	16	1-F17	93 02 530	2	47	2-B24	93 04 593	2	7	2-A08
92 89 372	0	31	1-G08	93 01 359	2	97	2-E02	93 02 530	2	53	2-C06	93 04 635	2	7	2-A08
92 89 380	0	31	1-G08	93 01 367	0	7	1-F08	93 02 738	2	107	2-E12	93 04 643	6	9	3-B10
92 90 933	0	30	1-G07	93 01 367	0	16	1-F17	93 02 746	2	85	2-D14	93 04 650	0	20	1-F21
92 90 941	0	30	1-G07	93 01 367	2	97	2-E02	93 02 787	2	91	2-D20	93 04 650	6	9	3-B10
92 91 436	8	89	3-G18	93 01 375	0	7	1-F08	93 02 803	2	91	2-D20	93 04 676	0	20	1-F21
92 92 236	8	185	3-K18	93 01 375	0	16	1-F17	93 02 829	2	91	2-D20	93 04 676	6	9	3-B10
92 92 244	8	185	3-K18	93 01 375	2	91	2-D20	93 02 878	2	49	2-C02	93 04 775	2	59	2-C12
92 92 269	8	187	3-K20	93 01 375	2	97	2-E02	93 02 936	2	55	2-C08	93 04 916	2	103	2-E08
92 92 640	8	9	3-D10	93 01 383	0	7	1-F08	93 02 944	2	55	2-C08	93 04 940	2	103	2-E08
92 92 969	8	39	3-E16	93 01 383	0	16	1-F17	93 02 951	2	55	2-C08	93 04 999	2	103	2-E08
92 93 358	8	27	3-E04	93 01 383	2	97	2-E02	93 02 969	0	26	1-G03	93 05 038	0	11	1-F18

Page Sida	Group Grupp	Date Datum	NUMERICAL REGISTER				NUMMERREGISTER				
28	10A	1987-10									
Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord
93 05 046	0	11	1-F12	93 06 887	2	71	2-C24	93 10 988	2	71	2-C24
93 05 053	0	11	1-F12	93 07 000	0	6	1-F07	93 10 996	2	71	2-C24
93 05 053	3	19	2-F20	93 07 000	2	109	2-E14	93 11 010	2	109	2-E14
93 05 061	3	19	2-F20	93 07 075	2	71	2-C24	93 11 025	2	109	2-E14
93 05 067	3	19	2-F20	93 07 307	3	19	2-F20	93 11 143	2	67	2-C20
93 05 103	3	19	2-F20	93 07 331	3	19	2-F20	93 11 150	2	67	2-C20
93 05 111	0	11	1-F12	93 07 356	2	9	2-A10	93 11 168	2	71	2-C24
93 05 111	3	19	2-F20	93 07 364	2	81	2-D10	93 11 176	2	71	2-C24
93 05 129	3	19	2-F20	93 07 372	2	81	2-D10	93 11 200	2	109	2-E14
93 05 137	0	11	1-F12	93 07 430	2	109	2-E14	93 11 416	2	79	2-D08
93 05 137	3	19	2-F20	93 07 448	2	109	2-E14	93 11 564	2	71	2-C24
93 05 160	3	19	2-F20	93 07 471	2	109	2-E14	93 11 572	2	71	2-C24
93 05 186	3	19	2-F20	93 07 497	2	101	2-E06	93 11 598	2	107	2-E12
93 05 202	3	19	2-F20	93 07 539	2	109	2-E14	93 11 879	2	67	2-C20
93 05 283	3	9	2-F10	93 07 604	0	28	1-G06	93 11 879	2	71	2-C24
93 05 293	3	11	2-F12	93 07 604	2	35	2-B12	93 11 887	2	67	2-C20
93 05 368	3	9	2-F10	93 07 679	2	71	2-C24	93 11 887	2	71	2-C24
93 05 368	3	11	2-F12	93 07 778	2	29	2-B06	93 11 895	2	67	2-C20
93 05 376	3	9	2-F10	93 07 835	0	29	1-G06	93 11 895	2	71	2-C24
93 05 376	3	11	2-F12	93 07 835	0	30	1-G07	93 11 903	2	109	2-E14
93 05 384	3	9	2-F10	93 07 935	2	69	2-C22	93 11 911	2	109	2-E14
93 05 384	3	11	2-F12	93 07 935	2	71	2-C24	93 11 929	2	109	2-E14
93 05 392	3	9	2-F10	93 08 156	2	71	2-C24	93 12 042	2	101	2-E06
93 05 392	3	11	2-F12	93 08 164	2	71	2-C24	93 12 547	2	63	2-C16
93 05 418	2	67	2-C20	93 08 198	2	71	2-C24	93 12 570	2	35	2-B12
93 05 723	2	109	2-E14	93 08 412	2	109	2-E14	93 12 602	2	63	2-C16
93 05 749	2	109	2-E14	93 08 453	2	9	2-A10	93 12 802	2	65	2-C18
93 05 889	2	13	2-A14	93 08 719	0	29	1-G06	93 13 008	2	31	2-B08
93 05 954	2	11	2-A12	93 08 719	0	30	1-G07	93 13 057	0	10	1-F11
93 05 970	0	2	1-F03	93 08 719	2	67	2-C20	93 14 055	2	41	2-B18
93 05 970	0	3	1-F04	93 08 719	2	71	2-C24	93 14 303	2	101	2-E06
93 05 970	2	11	2-A12	93 08 792	0	4	1-F05	93 14 493	2	109	2-E14
93 05 988	2	11	2-A12	93 08 792	2	29	2-B06	93 14 766	2	63	2-C16
93 05 996	2	11	2-A12	93 08 792	2	33	2-B10	93 15 045	4	55	2-L08
93 06 002	2	11	2-A12	93 09 204	0	2	1-F03	93 15 144	2	37	2-B14
93 06 077	2	81	2-D10	93 09 204	2	19	2-A20	93 15 144	2	39	2-B16
93 06 085	2	81	2-D10	93 09 261	2	29	2-B06	93 15 151	2	55	2-C08
93 06 184	2	67	2-C20	93 09 261	2	67	2-C20	93 15 169	2	55	2-C08
93 06 184	2	71	2-C24	93 09 261	2	71	2-C24	93 15 177	2	55	2-C08
93 06 192	2	67	2-C20	93 09 527	2	109	2-E14	93 15 185	2	55	2-C08
93 06 192	2	71	2-C24	93 09 576	0	10	1-F11	93 15 193	2	55	2-C08
93 06 317	2	29	2-B06	93 09 576	2	25	2-B02	93 15 201	2	55	2-C08
93 06 325	2	33	2-B10	93 09 601	2	9	2-A10	93 15 219	2	55	2-C08
93 06 564	2	15	2-A16	93 09 907	3	17	2-F18	93 15 227	2	55	2-C08
93 06 572	2	15	2-A16	93 09 907	3	19	2-F20	93 15 235	2	55	2-C08
93 06 580	2	15	2-A16	93 09 915	0	11	1-F12	93 15 243	2	55	2-C08
93 06 697	3	17	2-F18	93 09 915	3	19	2-F20	93 15 276	2	55	2-C08
93 06 697	3	19	2-F20	93 09 931	3	19	2-F20	93 15 284	2	55	2-C08
93 06 796	0	6	1-F07	93 09 956	0	11	1-F12	93 15 292	2	55	2-C08
93 06 796	2	79	2-D08	93 10 038	2	29	2-B06	93 15 433	2	59	2-C12
93 06 804	0	6	1-F07	93 10 152	2	55	2-C08	93 15 465	0	26	1-G03
93 06 804	2	75	2-D04	93 10 178	2	33	2-B10	93 15 466	2	69	2-C22
93 06 804	2	79	2-D08	93 10 186	2	29	2-B06	93 15 466	2	73	2-D02
93 06 812	0	6	1-F07	93 10 905	2	65	2-C18	93 15 904	2	43	2-B20
93 06 812	2	75	2-D04	93 10 913	2	65	2-C18	93 15 953	2	65	2-C18
93 06 812	2	79	2-D08	93 10 939	2	67	2-C20	93 16 076	0	26	1-G03
93 06 820	0	6	1-F07	93 10 947	2	67	2-C20	93 16 076	0	28	1-G05
93 06 820	2	75	2-D04	93 10 954	2	67	2-C20	93 16 076	2	7	2-A08
93 06 820	2	79	2-D08	93 10 962	2	67	2-C20	93 16 118	0	10	1-F11
93 06 820	2	109	2-E14	93 10 970	2	67	2-C20	93 16 118	0	26	1-G03

NUMERICAL REGISTER								NUMMERREGISTER								Date Datum	Group Grupp	Page Seite
																1987-10	10A	29
Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord			
93 17 751	2	85	2-D14	93 20 284	2	101	2-E06	93 24 211	2	51	2-C04	93 27 735	2	57	2-C10			
93 17 789	2	49	2-C02	93 20 748	0	3	1-F04	93 24 280	4	33	2-C10	93 27 768	2	75	2-D04			
93 17 789	2	53	2-C06	93 20 748	2	11	2-A12	93 24 286	4	33	2-C10	93 27 776	2	77	2-D06			
93 17 785	4	53	2-L06	93 20 789	0	11	1-F12	93 24 542	2	91	2-D20	93 27 784	2	75	2-D06			
93 17 793	4	53	2-L06	93 20 789	3	13	2-F14	93 24 708	4	35	2-K12	93 27 792	2	77	2-D06			
93 17 801	4	53	2-L06	93 20 961	0	5	1-F06	93 24 708	4	55	2-L08	93 27 875	2	75	2-D04			
93 17 834	4	45	2-K22	93 20 961	2	75	2-D04	93 24 716	2	53	2-C06	93 27 883	2	75	2-D04			
93 17 991	2	37	2-B14	93 20 979	2	87	2-D16	93 24 740	2	51	2-C04	93 27 891	2	77	2-D06			
93 17 991	2	39	2-B16	93 20 979	2	89	2-D18	93 24 781	2	51	2-C04	93 27 917	2	75	2-D06			
93 18 007	4	35	2-K12	93 20 987	0	16	1-F17	93 24 815	2	53	2-C06	93 27 925	2	77	2-D06			
93 18 072	2	47	2-B24	93 20 987	4	33	2-K10	93 24 930	2	7	2-A08	93 27 933	2	75	2-D04			
93 18 072	2	53	2-C06	93 20 987	4	55	2-L08	93 25 457	3	15	2-F16	93 27 941	2	75	2-D04			
93 18 098	2	47	2-B24	93 21 241	4	23	2-J24	93 25 465	0	11	1-F12	93 28 105	0	5	1-F06			
93 18 098	2	53	2-C06	93 21 258	4	27	2-F04	93 25 465	3	15	2-F16	93 28 105	0	6	1-F06			
93 18 106	2	47	2-B24	93 21 340	0	13	1-F14	93 25 531	8	175	3-K08	93 28 105	2	87	2-D18			
93 18 106	2	53	2-C06	93 21 340	4	5	2-J06	93 25 549	2	61	2-C14	93 28 105	2	89	2-D16			
93 18 148	2	47	2-B24	93 21 357	0	13	1-F14	93 25 556	2	61	2-C14	93 28 345	2	49	2-C02			
93 18 197	4	55	2-L08	93 21 357	4	5	2-J06	93 25 564	2	61	2-C14	93 28 428	2	47	2-B24			
93 18 205	8	175	3-K08	93 21 365	0	13	1-F14	93 25 572	2	61	2-C14	93 28 428	2	51	2-C04			
93 18 304	2	91	2-D20	93 21 365	4	5	2-J06	93 25 598	2	61	2-C14	93 28 519	2	53	2-C06			
93 18 338	2	39	2-B16	93 22 803	4	41	2-K18	93 25 762	2	75	2-D04	93 28 550	2	75	2-D04			
93 18 346	2	43	2-B20	93 22 852	2	43	2-B20	93 25 820	2	51	2-C04	93 28 711	4	55	2-L08			
93 18 346	2	47	2-B24	93 22 852	2	47	2-B24	93 25 846	2	103	2-E08	93 28 857	2	43	2-B20			
93 18 346	2	51	2-C04	93 22 852	2	53	2-C06	93 25 911	2	47	2-B24	93 28 857	2	51	2-C04			
93 18 353	2	39	2-B16	93 22 736	4	33	2-K10	93 25 952	2	89	2-D18	93 28 857	2	91	2-D20			
93 18 361	2	59	2-C12	93 22 785	4	35	2-K12	93 25 994	2	47	2-B24	93 28 899	2	53	2-C06			
93 18 411	2	49	2-C02	93 22 785	4	55	2-L08	93 25 994	2	51	2-C04	93 29 004	2	59	2-C12			
93 18 502	2	37	2-B14	93 22 819	2	51	2-C04	93 26 307	2	85	2-D16	93 29 210	2	53	2-C06			
93 18 502	2	39	2-B16	93 22 975	2	43	2-B20	93 26 315	2	85	2-D14	93 29 236	2	53	2-C06			
93 18 508	4	55	2-L08	93 22 975	2	47	2-B24	93 26 356	2	47	2-B24	93 29 319	2	53	2-C06			
93 19 047	2	87	2-D16	93 22 975	2	53	2-C06	93 26 356	2	51	2-C04	93 29 350	2	63	2-C16			
93 19 047	2	89	2-D18	93 23 056	2	75	2-D04	93 26 430	2	59	2-C12	93 29 442	2	75	2-D04			
93 19 153	4	45	2-K22	93 23 072	2	77	2-D06	93 26 448	2	87	2-D16	93 29 483	8	61	3-F14			
93 19 294	2	7	2-A08	93 23 098	2	103	2-E08	93 26 448	2	89	2-D18	93 29 707	0	7	1-F08			
93 19 526	2	37	2-B14	93 23 148	4	41	2-K18	93 26 463	2	87	2-D16	93 29 707	0	17	1-F18			
93 19 526	2	39	2-B16	93 23 254	4	45	2-K22	93 26 463	2	89	2-D18	93 29 707	2	97	2-E02			
93 19 660	4	33	2-K10	93 23 262	4	49	2-L02	93 26 687	2	103	2-E08	93 29 715	4	5	2-J06			
93 19 686	4	33	2-K10	93 23 387	2	75	2-D04	93 26 752	2	61	2-C14	93 29 764	4	55	2-L08			
93 19 724	4	33	2-K10	93 23 395	2	91	2-D20	93 26 786	2	91	2-D20	93 29 806	2	51	2-C04			
93 19 740	3	19	2-F20	93 23 403	2	91	2-D20	93 26 935	4	43	2-K20	93 29 830	2	51	2-C04			
93 19 789	2	49	2-C02	93 23 445	2	51	2-C04	93 26 976	2	55	2-C08	93 29 848	2	51	2-C04			
93 19 789	2	51	2-C04	93 23 478	2	53	2-C06	93 27 016	2	55	2-C08	93 29 855	2	51	2-C04			
93 19 822	2	49	2-C02	93 23 601	2	53	2-C06	93 27 032	2	55	2-C08	93 30 432	0	7	1-F08			
93 19 955	2	51	2-C04	93 23 833	3	13	2-F14	93 27 057	2	55	2-C08	93 30 432	2	97	2-E02			
93 19 963	2	51	2-C04	93 23 841	3	13	2-F14	93 27 073	2	55	2-C08	93 30 440	0	16	1-F17			
93 19 971	2	51	2-C04	93 23 858	3	13	2-F14	93 27 156	2	85	2-D16	93 30 499	0	7	1-F06			
93 20 003	0	9	1-F10	93 23 874	3	13	2-F14	93 27 206	2	55	2-C08	93 30 499	2	97	2-E02			
93 20 003	2	23	2-A24	93 23 882	3	13	2-F14	93 27 230	2	57	2-C10	93 30 515	2	91	2-D20			
93 20 052	4	49	2-L02	93 23 890	3	13	2-F14	93 27 255	2	55	2-C08	93 30 531	2	89	2-D18			
93 20 260	4	51	2-L04	93 23 916	3	13	2-F14	93 27 271	2	85	2-D16	93 30 549	4	33	2-C10			
93 20 185	0	13	1-F14	93 23 924	0	11	1-F12	93 27 321	2	53	2-C06	93 30 863	0	8	1-F09			
93 20 185	4	5	2-J06	93 23 940	0	29	1-G06	93 27 339	2	57	2-C10	93 30 863	2	95	2-D24			
93 20 193	0	16	1-F17	93 23 940	0	30	1-G07	93 27 545	2	43	2-B20	93 30 871	0	8	1-F09			
93 20 193	4	55	2-L08	93 23 940	2	67	2-C20	93 27 545	2	49	2-D02	93 30 871	2	95	2-D24			
93 20 250	0	11	1-F12	93 23 965	2	75	2-D04	93 27 545	2	51	2-C04	93 30 889	0	6	1-F09			
93 20 250	3	19	2-F20	93 23 961	2	77	2-D06	93 27 552	2	43	2-B20	93 30 688	2	95	2-D24			
93 20 288	0	7	1-F08	93 24 013	2	75	2-D04	93 27 552	2	51	2-C04	93 30 705	0	8	1-F09			
93 20 288	0	16	1-F17	93 24 021	2	51	2-C04	93 27 644	2	53	2-C06	93 30 705	2	95	2-D24			
93 20 288	2	97	2-E02	93 24 138	4	51	2-C04	93 27 669	2	55	2-C08	93 30 713	0	8	1-F09			
93 20 264	0	10	1-F11	93 24 153	4	33	2-K10	93 27 685	2	57	2-C10	93 30 713	2	95	2-D24			

Page Sida	Group Grupp	Date Datum	NUMERICAL REGISTER				NUMMERREGISTER				
30	10A	1967-10									
Part No Art nr	Gr Sida	Page Grid Koord	Part No Art nr	Gr Sida	Page Grid Koord	Part No Art nr	Gr Sida	Page Grid Koord	Part No Art nr	Gr Sida	Page Grid Koord
93 30 838	8	167 3-J24	93 37 551	2	101 2-E06	93 62 781	2	45 2-B22	94 01 928	8	177 3-K10
93 30 978	2	76 2-D04	93 37 566	0	6 1-F07	93 62 781	2	49 2-C02	94 01 928	8	181 3-K14
93 31 034	2	63 2-C16	93 37 569	2	87 2-D16	93 63 250	2	43 2-B20	94 01 951	0	26 1-G03
93 31 059	0	28 1-G05	93 37 569	2	68 2-D18	93 63 268	2	43 2-B20	94 01 951	0	27 1-G04
93 31 059	2	91 2-D20	93 38 567	0	28 1-G05	93 63 278	2	43 2-B20	94 01 951	8	177 3-K10
93 31 174	2	39 2-B16	93 39 243	4	55 2-L08	93 63 284	2	43 2-B20	94 01 951	8	181 3-K14
93 31 182	2	39 2-B16	93 39 342	0	28 1-G05	93 63 284	2	47 2-B24	94 01 977	0	26 1-G03
93 31 224	4	53 2-L06	93 39 376	2	61 2-C14	93 63 284	2	53 2-C06	94 01 977	8	177 3-K10
93 31 255	2	37 2-B14	93 39 896	2	91 2-D20	93 63 359	0	4 1-F05	94 02 017	0	26 1-G03
93 31 265	2	39 2-B16	93 42 635	2	47 2-B24	93 64 431	4	49 2-L02	94 02 017	0	27 1-G04
93 31 323	2	103 2-E08	93 42 635	2	51 2-C04	93 65 404	0	6 1-F07	94 02 017	8	177 3-K10
93 31 380	2	53 2-C06	93 42 734	0	16 1-F17	93 69 307	2	7 2-A08	94 02 017	8	181 3-K14
93 31 406	2	89 2-D18	93 44 094	0	15 1-F16	93 69 315	2	7 2-A08	94 02 074	0	26 1-G03
93 31 521	4	55 2-L08	93 44 235	0	15 1-F16	93 69 364	2	107 2-E12	94 02 074	8	179 3-K12
93 31 539	4	33 2-K10	93 45 994	0	16 1-F17	94 00 169	8	121 3-I02	94 02 057	0	27 1-G04
93 31 547	4	33 2-K10	93 45 984	4	47 2-K24	94 00 250	8	149 3-J06	94 02 157	0	27 1-K10
93 31 554	2	51 2-C04	93 46 354	2	19 2-A30	94 00 268	8	149 3-J06	94 02 439	8	151 3-J08
93 31 588	0	20 1-F21	93 46 354	4	13 2-J14	94 00 292	8	71 3-F24	94 02 447	8	151 3-J08
93 31 588	6	9 1-B10	93 46 354	4	17 2-J18	94 00 300	8	71 3-F24	94 02 983	8	139 3-I20
93 31 695	0	7 1-F08	93 46 354	4	43 2-K20	94 00 334	8	105 3-H10	94 03 056	8	45 3-E22
93 31 695	2	97 2-E02	93 46 602	0	14 1-F15	94 00 375	8	71 3-F24	94 03 064	8	45 3-E22
93 31 729	4	31 2-K18	93 46 602	4	47 2-K24	94 00 417	8	147 3-J04	94 03 072	8	45 3-E22
93 31 760	0	10 1-F11	93 47 493	2	37 2-B14	94 00 425	8	147 3-J04	94 03 080	8	45 3-E22
93 32 438	0	8 1-F09	93 47 808	2	43 2-B20	94 00 428	8	169 3-K02	94 03 088	8	45 3-E22
93 32 438	2	95 2-D24	93 47 808	2	47 2-B24	94 00 672	8	169 3-K02	94 03 106	8	45 3-E22
93 32 883	2	51 2-C04	93 47 808	2	53 2-C06	94 00 714	8	169 3-K02	94 03 312	8	125 3-I06
93 32 891	2	51 2-C04	93 47 816	4	33 2-K10	94 00 806	8	169 3-K02	94 03 403	8	153 3-J10
93 33 675	2	53 2-C06	93 47 816	4	55 2-L08	94 00 896	0	25 1-G02	94 03 728	8	143 3-I24
93 33 683	2	53 2-C06	93 48 564	4	55 2-L08	94 00 896	0	27 1-G04	94 03 759	8	143 3-I24
93 33 756	2	65 2-C18	93 48 838	2	43 2-B20	94 00 896	8	175 3-K08	94 03 833	8	143 3-I24
93 33 766	2	51 2-C04	93 49 838	2	47 2-B24	94 00 946	8	171 3-K04	94 03 841	8	143 3-I24
93 34 301	2	43 2-B20	93 49 838	2	51 2-C04	94 00 961	8	171 3-K04	94 03 858	8	143 3-I24
93 34 301	2	53 2-C06	93 50 158	0	2 1-F03	94 00 979	8	171 3-K04	94 03 866	8	143 3-I24
93 34 475	8	29 3-E06	93 50 158	2	13 2-A14	94 00 987	8	171 3-K04	94 04 104	8	147 3-J04
93 34 574	4	41 2-K18	93 50 505	0	6 1-F07	94 01 001	8	167 3-J24	94 04 112	8	147 3-J04
93 34 582	4	41 2-K18	93 50 588	0	6 1-F07	94 01 068	8	167 3-J24	94 04 286	8	145 3-J02
93 34 590	4	41 2-K18	93 50 588	2	75 2-D04	94 01 076	8	167 3-J24	94 04 708	8	121 3-I02
93 35 696	0	14 1-F15	93 50 588	2	79 2-D08	94 01 084	8	167 3-J24	94 04 716	8	121 3-I02
93 35 696	4	45 2-K22	93 50 687	2	101 2-E06	94 01 126	8	169 3-K02	94 04 807	8	127 3-I08
93 36 579	4	13 2-J14	93 51 644	3	19 2-F20	94 01 142	8	169 3-K02	94 04 831	8	129 3-I10
93 36 579	4	17 2-J18	93 51 693	3	19 2-F20	94 01 142	8	177 3-K10	94 05 770	8	121 3-I02
93 37 288	0	2 1-F03	93 51 701	3	19 2-F20	94 01 142	8	181 3-K14	94 05 788	8	121 3-I02
93 37 288	2	11 2-A12	93 51 800	2	9 2-A10	94 01 159	8	169 3-K02	94 07 412	8	101 3-H06
93 37 296	0	2 1-F03	93 54 596	2	11 2-A12	94 01 167	8	169 3-K02	94 07 420	8	101 3-H06
93 37 296	2	11 2-A12	93 55 777	2	29 2-B06	94 01 266	8	171 3-K04	94 07 453	8	45 3-E22
93 37 304	0	2 1-F03	93 56 114	2	29 2-B06	94 01 282	8	169 3-K02	94 07 461	8	45 3-E22
93 37 304	2	11 2-A12	93 57 138	2	79 2-D08	94 01 332	8	173 3-K06	94 07 966	8	143 3-I24
93 37 312	0	2 1-F03	93 59 134	2	33 2-B10	94 01 340	8	173 3-K06	94 07 974	8	143 3-I24
93 37 312	2	11 2-A12	93 59 142	2	29 2-B06	94 01 357	8	31 3-E08	94 08 098	8	143 3-I24
93 37 320	2	87 2-D16	93 59 597	0	10 1-F11	94 01 373	8	173 3-K06	94 08 295	8	143 3-I24
93 37 320	2	89 2-D18	93 61 163	4	33 2-K10	94 01 381	8	31 3-E08	94 08 402	8	143 3-I24
93 37 338	0	11 1-F12	93 61 163	4	55 2-L08	94 01 423	8	173 3-K06	94 08 410	8	143 3-I24
93 37 338	3	15 2-F16	93 61 551	0	14 1-F15	94 01 431	8	173 3-K06	94 09 715	8	119 3-H24
93 37 460	0	6 1-F07	93 62 419	2	107 2-E12	94 01 449	8	173 3-K06	94 11 232	8	45 3-E22
93 37 510	2	49 2-C02	93 62 427	2	107 2-E12	94 01 647	8	173 3-K06	94 11 562	8	143 3-I24
93 37 510	2	51 2-C04	93 62 435	2	107 2-E12	94 01 712	8	173 3-K06	94 11 661	8	33 3-E10
93 37 536	0	7 1-F08	93 62 443	2	107 2-E12	94 01 753	8	173 3-K06	94 11 711	8	29 3-E06
93 37 536	2	99 2-E04	93 62 450	2	107 2-E12	94 01 894	0	26 1-G03	94 12 636	8	55 3-F08
93 37 544	0	10 1-F11	93 62 468	2	107 2-E12	94 01 902	8	177 3-K10	94 13 071	8	121 3-I02
93 37 551	0	10 1-F11	93 62 534	2	59 2-C12	94 01 910	8	177 3-K10	94 13 089	8	121 3-I02

NUMERICAL REGISTER			NUMMERREGISTER			Date Datum			Group Group			Page Side											
						1987-10						10A						31					
Part No Art nr	Gr Gr	Page Grid Side Koord	Part No Art nr	Gr Gr	Page Grid Side Koord	Part No Art nr	Gr Gr	Page Grid Side Koord	Part No Art nr	Gr Gr	Page Grid Side Koord	Part No Art nr	Gr Gr	Page Grid Side Koord	Part No Art nr	Gr Gr	Page Grid Side Koord						
94 15 193	8	121 3-I02	94 20 241	0	27 1-G04	94 22 775	0	27 1-G04	94 25 646	8	29 3-E06	94 25 646	8	29 3-E06	94 25 646	8	29 3-E06						
94 15 191	8	121 3-I02	94 20 241	8	177 3-K10	94 22 775	8	177 3-K10	94 25 653	8	95 3-G24	94 25 653	8	95 3-G24	94 25 653	8	95 3-G24						
94 15 480	8	141 3-I22	94 20 241	8	181 3-K14	94 22 808	8	121 3-I02	94 25 661	8	95 3-G24	94 25 661	8	95 3-G24	94 25 661	8	95 3-G24						
94 15 498	8	121 3-I02	94 20 266	0	25 1-G02	94 22 833	8	173 3-K06	94 25 679	8	29 3-E06	94 25 679	8	29 3-E06	94 25 679	8	29 3-E06						
94 15 506	8	121 3-I02	94 20 266	0	27 1-G04	94 22 858	8	29 3-E06	94 25 695	8	29 3-E06	94 25 695	8	29 3-E06	94 25 695	8	29 3-E06						
94 15 969	8	139 3-I20	94 20 266	8	175 3-K08	94 22 874	8	29 3-E06	94 25 703	8	29 3-E06	94 25 703	8	29 3-E06	94 25 703	8	29 3-E06						
94 15 969	8	153 3-J10	94 20 274	0	25 1-G02	94 22 882	8	29 3-E06	94 25 828	8	31 3-E08	94 25 828	8	31 3-E08	94 25 828	8	31 3-E08						
94 15 977	8	139 3-I20	94 20 274	0	27 1-G04	94 22 890	8	29 3-E06	94 25 844	0	24 1-G01	94 25 844	0	24 1-G01	94 25 844	0	24 1-G01						
94 15 977	8	153 3-J10	94 20 274	8	175 3-K08	94 22 908	8	29 3-E06	94 25 844	8	29 3-E06	94 25 844	8	29 3-E06	94 25 844	8	29 3-E06						
94 16 520	8	139 3-I20	94 20 282	0	25 1-G02	94 22 940	8	175 3-K08	94 25 851	8	29 3-E06	94 25 851	8	29 3-E06	94 25 851	8	29 3-E06						
94 16 520	8	143 3-I24	94 20 282	0	27 1-G04	94 22 965	8	173 3-K06	94 25 869	8	29 3-E06	94 25 869	8	29 3-E06	94 25 869	8	29 3-E06						
94 16 811	8	125 3-I06	94 20 282	8	175 3-K08	94 23 062	8	133 3-I14	94 25 877	8	29 3-E06	94 25 877	8	29 3-E06	94 25 877	8	29 3-E06						
94 16 793	8	45 3-E22	94 20 290	8	175 3-K08	94 23 070	8	133 3-I14	94 26 008	8	169 3-K02	94 26 008	8	169 3-K02	94 26 008	8	169 3-K02						
94 17 551	8	31 3-E08	94 20 308	0	26 1-G03	94 23 086	8	107 3-H12	94 26 024	8	129 3-I10	94 26 024	8	129 3-I10	94 26 024	8	129 3-I10						
94 17 791	8	131 3-I12	94 20 308	0	27 1-G04	94 23 096	8	106 3-H10	94 26 032	8	129 3-I10	94 26 032	8	129 3-I10	94 26 032	8	129 3-I10						
94 17 919	8	135 3-I16	94 20 308	8	175 3-K08	94 23 112	8	173 3-K06	94 26 057	8	131 3-I12	94 26 057	8	131 3-I12	94 26 057	8	131 3-I12						
94 17 866	8	166 3-K02	94 20 324	8	131 3-I12	94 23 138	8	131 3-I12	94 26 065	8	131 3-I12	94 26 065	8	131 3-I12	94 26 065	8	131 3-I12						
94 17 874	8	169 3-K02	94 20 324	8	135 3-I16	94 23 161	8	133 3-I14	94 26 107	8	131 3-I12	94 26 107	8	131 3-I12	94 26 107	8	131 3-I12						
94 17 882	8	169 3-K02	94 20 332	8	125 3-I06	94 23 179	8	133 3-I14	94 26 115	8	143 3-I24	94 26 115	8	143 3-I24	94 26 115	8	143 3-I24						
94 17 908	8	169 3-K02	94 20 340	8	31 3-E08	94 23 229	8	106 3-H10	94 26 123	8	143 3-I24	94 26 123	8	143 3-I24	94 26 123	8	143 3-I24						
94 17 916	8	169 3-K02	94 20 365	8	31 3-E08	94 23 252	8	105 3-H10	94 26 198	8	175 3-K08	94 26 198	8	175 3-K08	94 26 198	8	175 3-K08						
94 17 924	8	175 3-K08	94 20 399	8	173 3-K06	94 23 278	8	105 3-H10	94 26 206	8	173 3-K06	94 26 206	8	173 3-K06	94 26 206	8	173 3-K06						
94 17 940	8	169 3-K02	94 20 407	8	173 3-K06	94 23 294	8	105 3-H10	94 26 214	8	173 3-K06	94 26 214	8	173 3-K06	94 26 214	8	173 3-K06						
94 17 957	8	175 3-K08	94 20 415	8	31 3-E08	94 23 526	8	33 3-E10	94 26 263	8	153 3-J10	94 26 263	8	153 3-J10	94 26 263	8	153 3-J10						
94 17 973	8	175 3-K08	94 20 431	8	31 3-E08	94 23 558	8	31 3-E08	94 26 404	8	45 3-E22	94 26 404	8	45 3-E22	94 26 404	8	45 3-E22						
94 17 981	8	171 3-K04	94 20 464	8	173 3-K06	94 23 666	8	29 3-E06	94 26 420	8	15 3-D12	94 26 420	8	15 3-D12	94 26 420	8	15 3-D12						
94 18 013	8	171 3-K04	94 20 472	8	173 3-K06	94 23 666	8	31 3-E10	94 26 496	8	33 3-E10	94 26 496	8	33 3-E10	94 26 496	8	33 3-E10						
94 18 021	8	171 3-K04	94 20 522	8	127 3-K08	94 23 674	8	136 3-E16	94 26 644	8	175 3-K08	94 26 644	8	175 3-K08	94 26 644	8	175 3-K08						
94 18 039	8	167 3-J24	94 20 530	8	129 3-I10	94 23 708	8	109 3-H14	94 26 651	8	175 3-K08	94 26 651	8	175 3-K08	94 26 651	8	175 3-K08						
94 18 054	8	169 3-K02	94 20 548	8	129 3-I10	94 23 716	8	111 3-H18	94 26 693	8	173 3-K06	94 26 693	8	173 3-K06	94 26 693	8	173 3-K06						
94 18 062	8	169 3-K02	94 20 555	8	129 3-I10	94 23 724	8	111 3-H18	94 26 701	8	173 3-K06	94 26 701	8	173 3-K06	94 26 701	8	173 3-K06						
94 18 070	8	169 3-K02	94 20 563	8	129 3-I10	94 23 732	8	105 3-H10	94 26 727	8	173 3-K06	94 26 727	8	173 3-K06	94 26 727	8	173 3-K06						
94 18 088	8	171 3-K04	94 21 165	8	125 3-I06	94 23 740	8	105 3-H10	94 26 784	8	173 3-K06	94 26 784	8	173 3-K06	94 26 784	8	173 3-K06						
94 18 138	8	173 3-K06	94 21 520	8	109 3-H14	94 23 757	8	105 3-H10	94 26 792	8	173 3-K06	94 26 792	8	173 3-K06	94 26 792	8	173 3-K06						
94 18 146	8	173 3-K06	94 21 736	8	15 3-D16	94 23 765	8	105 3-H10	94 26 883	8	173 3-K06	94 26 883	8	173 3-K06	94 26 883	8	173 3-K06						
94 18 237	8	31 3-E08	94 21 785	8	29 3-E06	94 24 264	8	129 3-I10	94 26 891	8	173 3-K06	94 26 891	8	173 3-K06	94 26 891	8	173 3-K06						
94 18 310	8	31 3-E08	94 21 793	8	29 3-E06	94 24 292	8	129 3-I10	94 26 909	8	169 3-K02	94 26 909	8	169 3-K02	94 26 909	8	169 3-K02						
94 18 328	8	31 3-E08	94 21 826	8	141 3-I22	94 24 383	8	105 3-H10	94 26 917	8	15 3-D16	94 26 917	8	15 3-D16	94 26 917	8	15 3-D16						
94 18 344	8	173 3-K06	94 21 934	8	141 3-I22	94 25 109	8	29 3-E06	94 26 933	8	15 3-D16	94 26 933	8	15 3-D16	94 26 933	8	15 3-D16						
94 18 351	8	31 3-E08	94 21 942	8	141 3-I22	94 25 125	8	29 3-E06	94 27 014	8	31 3-E08	94 27 014	8	31 3-E08	94 27 014	8	31 3-E08						
94 18 427	8	31 3-E08	94 21 959	8	141 3-I22	94 25 133	8	29 3-E06	94 27 071	8	35 3-E12	94 27 071	8	35 3-E12	94 27 071	8	35 3-E12						
94 18 435	8	31 3-E08	94 22 015	8	151 3-J08	94 25 141	8	29 3-E06	94 27 097	8	35 3-E12	94 27 097	8	35 3-E12	94 27 097	8	35 3-E12						
94 18 450	8	173 3-K06	94 22 023	8	29 3-E06	94 25 158	8	29 3-E06	94 27 105	8	35 3-E12	94 27 105	8	35 3-E12	94 27 105	8	35 3-E12						
94 18 468	8	173 3-K06	94 22 031	8	31 3-E08	94 25 166	3	43 2-G20	94 27 170	8	35 3-E12	94 27 170	8	35 3-E12	94 27 170	8	35 3-E12						
94 18 476	8	31 3-E08	94 22 056	8	31 3-E08	94 25 174	8	45 3-E22	94 27 188	8	35 3-E12	94 27 188	8	35 3-E12	94 27 188	8	35 3-E12						
94 18 492	8	31 3-E08	94 22 064	8	31 3-E08	94 25 232	8	99 3-H04	94 27 436	8	109 3-H14	94 27 436	8	109 3-H14	94 27 436	8	109 3-H14						
94 18 559	8	31 3-E08	94 22 296	8	151 3-J08	94 25 240	8	125 3-I06	94 27 451	8	109 3-H14	94 27 451	8	109 3-H14	94 27 451	8	109 3-H14						
94 19 060	8	31 3-E08	94 22 304	8	151 3-J08	94 25 349	8	125 3-I06	94 27 477	8	109 3-H14	94 27 477	8	109 3-H14	94 27 477	8	109 3-H14						
94 19 078	8	173 3-K06	94 22 346	8	147 3-J04	94 25 380	8	29 3-E06	94 27 493	8	109 3-H14	94 27 493	8	109 3-H14	94 27 493	8	109 3-H14						
94 19 185	8	175 3-K08	94 22 346	8	151 3-J08	94 25 398	8	29 3-E06	94 27 519	8	109 3-H14	94 27 519	8	109 3-H14	94 27 519	8	109 3-H14						
94 20 035	0	24 1-G01	94 22 403	0	25 1-G02	94 25 406	8	31 3-E08	94 27 535	8	109 3-H14	94 27 535	8	109 3-H14	94 27 535	8	109 3-H14						
94 20 035	8	29 3-E06	94 22 403	0	27 1-G04	94 25 414	8	31 3-E08	94 27 550	8	109 3-H14	94 27 550	8	109 3-H14	94 27 550	8	109 3-H14						
94 20 043	0	24 1-G01	94 22 403	8	177 3-K10	94 25 422	8	31 3-E08	94 27 576	8	109 3-H14	94 27 576	8	109 3-H14	94 27 576	8	109 3-H14						
94 20 043	8	29 3-E06	94 22 403	8	181 3-K14	94 25 430	8	33 3-E10	94 27 592	8	109 3-H14	94 27 592	8	109 3-H14	94 27 592	8	109 3-H14						
94 20 082	8	175 3-K08	94 22 411	8	153 3-J10	94 25 505	8	29 3-E06	94 27 618	8	109 3-H14	94 27 618	8	109 3-H14	94 27 618	8	109 3-H14						
94 20 225	0	25 1-G02	94 22 478	8	97 3-H02	94 25 554	8	29 3-E06	94 27 634	8	109 3-H14	94 27 634	8	109 3-H14	94 27 634	8	109 3-H14						
94 20 225	0	27 1-G04	94 22 676	8	31 3-E08	94 25 562	8	31 3-E08	94 27 659	8	109 3-H14	94 27 659	8	109 3-H14	94 27 659	8	109 3-H14						
94 20 225	8	177 3-K10	94 22 684	8	31 3-E08	94 25 588	8	31 3-E08	94 28 137	8	109 3-H14	94 28 137	8	109 3-H14	94 28 137	8	109 3-H14						
94 20 225	8	181 3-K14	94 22 734	8	121 3-I02	94 25 604	8	29 3-E06	94 28 145	8	109 3-H14	94 28 145	8	109 3-H14	94 28 145	8	109 3-H14						
94 20 241	0	25 1-G02	94 22 767	8	169 3-K02	94 25 612	8	31 3-E08	94 28 152	8	109 3-H14	94 28 152	8	109 3-H14	94 28 152	8	109 3-H14						

Page Sida	Group Grupp	Date Datum	NUMERICAL REGISTER				NUMMERREGISTER				
32	10A	1987-10									
Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
94 26 160	8	109	3-H14	94 32 048	8	119	3-H24	94 34 739	8	111	3-H16
94 26 178	8	109	3-H14	94 32 311	8	101	3-H06	94 34 747	8	111	3-H16
94 26 186	8	109	3-H14	94 32 311	8	109	3-H14	94 35 124	8	95	3-G24
94 26 947	8	105	3-H10	94 32 329	8	101	3-H06	94 35 132	8	95	3-G24
94 26 127	8	105	3-H10	94 32 329	8	109	3-H14	94 35 389	0	26	1-G03
94 29 150	8	105	3-H10	94 32 337	8	101	3-H06	94 35 389	8	179	3-K12
94 29 218	8	105	3-H10	94 32 337	8	111	3-H16	94 35 439	8	139	3-J20
94 29 721	8	29	3-E06	94 32 345	8	101	3-H06	94 35 470	8	139	3-J20
94 30 018	8	109	3-H14	94 32 345	8	111	3-H16	94 35 751	8	29	3-E06
94 30 026	8	109	3-H14	94 32 352	8	103	3-H08	94 35 785	8	127	3-H08
94 30 034	8	109	3-H14	94 32 352	8	111	3-H16	94 36 015	8	31	3-E08
94 30 042	8	109	3-H14	94 32 360	8	103	3-H08	94 36 163	8	125	3-H08
94 30 059	8	109	3-H14	94 32 360	8	111	3-H16	94 36 395	8	129	3-H10
94 30 067	8	109	3-H14	94 32 519	8	123	3-H04	94 36 478	8	19	3-D20
94 30 430	8	135	3-H16	94 32 527	8	123	3-H04	94 36 700	8	127	3-H08
94 30 455	8	123	3-H04	94 32 535	8	123	3-H04	94 36 718	8	127	3-H08
94 30 505	8	123	3-H04	94 32 543	8	123	3-H04	94 36 817	8	97	3-H02
94 30 554	8	123	3-H04	94 32 550	8	123	3-H04	94 36 825	8	97	3-H02
94 30 604	8	123	3-H04	94 32 568	8	123	3-H04	94 36 833	8	97	3-H02
94 30 612	8	113	3-H18	94 32 576	8	123	3-H04	94 36 841	8	97	3-H02
94 30 620	8	111	3-H16	94 32 584	8	123	3-H04	94 36 858	8	97	3-H02
94 30 638	8	113	3-H18	94 32 592	8	123	3-H04	94 36 882	8	141	3-J22
94 30 610	8	113	3-H18	94 32 600	8	123	3-H04	94 36 890	8	141	3-J22
94 30 628	8	111	3-H16	94 32 618	8	123	3-H04	94 36 890	8	127	3-H08
94 30 636	8	113	3-H18	94 32 626	8	127	3-H08	94 36 965	8	171	3-K04
94 30 885	8	135	3-H16	94 32 634	8	127	3-H08	94 36 973	8	127	3-H08
94 30 950	8	135	3-H16	94 32 642	8	107	3-H12	94 36 981	8	127	3-H08
94 30 968	8	175	3-K08	94 32 650	8	107	3-H12	94 36 989	8	127	3-H08
94 31 024	0	26	1-G03	94 32 667	8	107	3-H12	94 37 005	8	127	3-H08
94 31 024	8	179	3-K12	94 32 675	8	107	3-H12	94 37 013	8	127	3-H08
94 31 032	8	131	3-H12	94 32 684	8	169	3-K02	94 37 021	8	127	3-H08
94 31 040	8	135	3-H16	94 33 020	8	123	3-H04	94 37 054	8	99	3-H04
94 31 057	8	135	3-H16	94 33 038	8	123	3-H04	94 37 062	8	99	3-H04
94 31 065	8	131	3-H12	94 33 046	8	123	3-H04	94 37 070	8	99	3-H04
94 31 073	8	135	3-H16	94 33 053	8	123	3-H04	94 37 088	8	99	3-H04
94 31 081	8	135	3-H16	94 33 106	8	103	3-H08	94 37 096	8	99	3-H04
94 31 107	8	101	3-H06	94 33 118	8	103	3-H08	94 37 104	8	99	3-H04
94 31 115	8	101	3-H06	94 33 186	8	103	3-H08	94 37 112	8	99	3-H04
94 31 123	8	103	3-H08	94 33 194	8	103	3-H08	94 37 120	8	99	3-H04
94 31 149	8	101	3-H06	94 33 202	8	105	3-H10	94 37 138	8	99	3-H04
94 31 156	8	101	3-H06	94 33 210	8	105	3-H10	94 37 146	8	99	3-H04
94 31 164	8	103	3-H08	94 33 280	8	117	3-H22	94 37 617	8	105	3-H10
94 31 180	8	103	3-H08	94 33 799	8	117	3-H22	94 37 617	8	113	3-H18
94 31 180	8	105	3-H10	94 33 806	8	119	3-H24	94 37 625	8	105	3-H10
94 31 198	8	103	3-H08	94 33 814	8	119	3-H24	94 37 625	8	113	3-H18
94 31 750	8	131	3-H12	94 33 822	8	117	3-H22	94 37 633	8	105	3-H10
94 31 800	8	105	3-H10	94 33 830	8	117	3-H22	94 37 633	8	115	3-H20
94 31 826	8	103	3-H08	94 33 848	8	117	3-H22	94 37 641	8	105	3-H10
94 31 826	8	105	3-H10	94 33 855	8	119	3-H24	94 37 641	8	115	3-H20
94 31 834	8	103	3-H08	94 34 865	8	29	3-E06	94 37 906	8	175	3-K08
94 31 842	8	105	3-H10	94 34 881	8	29	3-E06	94 37 955	8	175	3-K08
94 31 867	8	113	3-H16	94 34 899	8	29	3-E06	94 38 003	8	169	3-K02
94 31 875	8	111	3-H16	94 34 906	8	29	3-E06	94 38 037	8	97	3-H02
94 31 875	8	113	3-H18	94 34 914	8	29	3-E06	94 38 045	8	97	3-H02
94 31 883	8	113	3-H18	94 34 922	8	29	3-E06	94 38 052	8	97	3-H02
94 31 909	8	113	3-H18	94 34 963	8	29	3-E06	94 38 193	8	95	3-G24
94 31 917	8	111	3-H16	94 34 971	8	29	3-E06	94 38 201	8	95	3-G24
94 31 917	8	113	3-H18	94 34 989	8	29	3-E06	94 38 219	8	169	3-K02
94 31 925	8	113	3-H18	94 34 997	8	135	3-H16	94 38 250	0	25	1-G02
94 32 030	8	119	3-H24	94 34 721	8	109	3-H14	94 38 250	0	27	1-G04

NUMERICAL REGISTER				NUMMERREGISTER				Date Datum	Group Grupp	Page Sida					
								1987-10	10A	33					
Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
94 41 221	0	25	1-G02	94 48 499	8	109	3-H14	94 51 576	8	113	3-H18	94 57 887	8	117	3-H22
94 41 221	0	27	1-G04	94 48 507	8	101	3-H06	94 51 618	8	133	3-H20	94 57 995	8	117	3-H22
94 41 221	8	175	3-K08	94 48 507	8	111	3-H16	94 51 758	0	27	1-G04	94 58 027	8	117	3-H22
94 41 239	8	109	3-K02	94 48 515	8	101	3-H06	94 51 758	8	101	3-H14	94 58 035	8	117	3-H22
94 41 247	8	173	3-K06	94 48 515	8	111	3-H16	94 51 774	0	27	1-G04	94 58 068	8	117	3-H22
94 41 270	8	127	3-H08	94 48 523	8	103	3-H08	94 51 774	8	191	3-K14	94 58 076	8	117	3-H22
94 41 288	8	167	3-J24	94 48 523	8	111	3-H16	94 51 808	0	27	1-G04	94 58 217	8	139	3-H20
94 41 288	8	175	3-K02	94 48 531	8	103	3-H08	94 51 808	8	191	3-K14	94 58 498	8	109	3-H14
94 42 211	5	173	3-K06	94 48 531	8	111	3-H16	94 51 840	0	27	1-G04	94 58 506	8	101	3-H06
94 42 229	8	173	3-K06	94 48 549	8	103	3-H08	94 51 840	8	181	3-K14	94 58 514	8	99	3-H04
94 42 237	8	173	3-K06	94 48 549	8	111	3-H16	94 51 881	0	27	1-G04	94 58 522	8	99	3-H04
94 42 484	8	109	3-H14	94 48 572	8	103	3-H08	94 51 881	8	161	3-K14	94 58 530	8	101	3-H06
94 42 482	8	109	3-H14	94 48 580	8	103	3-H08	94 51 899	8	161	3-K14	94 58 548	8	101	3-H06
94 43 920	8	97	3-H02	94 48 598	8	103	3-H08	94 51 915	0	27	1-G04	94 58 563	8	139	3-H20
94 44 589	8	169	3-K02	94 48 606	8	103	3-H08	94 51 915	8	181	3-K14	94 58 599	8	139	3-H20
94 44 605	8	175	3-K08	94 48 614	8	105	3-H10	94 51 923	8	181	3-K14	94 58 795	8	97	3-H02
94 44 670	8	173	3-K06	94 48 622	8	105	3-H10	94 52 053	8	127	3-H08	94 58 878	8	53	3-F06
94 44 698	8	133	3-H14	94 48 663	8	113	3-H18	94 52 061	8	127	3-H08	94 58 894	8	33	3-E10
94 44 688	8	137	3-H18	94 48 689	8	111	3-H16	94 52 129	8	131	3-H12	94 58 928	8	130	3-H20
94 44 738	8	173	3-K06	94 48 705	8	113	3-H18	94 52 129	8	136	3-H16	94 58 969	8	148	3-J06
94 44 811	8	175	3-K08	94 48 986	8	173	3-K06	94 52 137	8	131	3-H12	94 59 009	8	148	3-J06
94 45 131	8	171	3-K04	94 49 489	0	27	1-G04	94 52 137	8	135	3-H16	94 59 025	8	33	3-E10
94 45 370	8	171	3-K04	94 49 778	8	95	3-G24	94 52 145	8	131	3-H12	94 59 140	8	147	3-K04
94 45 388	8	171	3-K04	94 49 786	8	95	3-G24	94 52 145	8	135	3-H16	94 59 314	8	35	3-E12
94 45 438	8	167	3-J24	94 49 794	8	95	3-G24	94 52 160	8	131	3-H12	94 59 322	8	35	3-E12
94 45 446	8	127	3-H08	94 49 802	8	95	3-G24	94 52 160	8	135	3-H16	94 59 512	8	117	3-H22
94 45 551	8	45	3-E22	94 49 810	8	95	3-G24	94 52 186	8	133	3-H14	94 59 520	8	117	3-H22
94 45 551	8	63	3-F06	94 49 828	8	95	3-G24	94 52 186	8	135	3-H16	94 59 563	8	117	3-H22
94 45 743	8	181	3-K14	94 49 844	8	95	3-G24	94 55 718	8	131	3-H12	94 59 561	8	117	3-H22
94 45 776	8	173	3-K06	94 49 851	8	95	3-G24	94 55 726	8	135	3-H16	94 59 595	8	117	3-H22
94 45 800	8	171	3-K04	94 49 877	8	95	3-G24	94 55 742	8	131	3-H12	94 59 603	8	117	3-H22
94 45 875	8	33	3-E10	94 49 885	8	95	3-G24	94 55 759	8	135	3-H16	94 59 637	8	117	3-H22
94 45 917	8	33	3-F06	94 49 919	0	27	1-G04	94 55 767	8	135	3-H16	94 59 645	8	117	3-H22
94 45 990	8	53	3-E10	94 50 016	8	97	3-H02	94 55 817	8	101	3-H06	94 59 678	8	117	3-H22
94 46 022	8	45	3-E22	94 50 024	8	97	3-H02	94 55 825	8	101	3-H06	94 59 686	8	117	3-H22
94 46 022	8	51	3-F04	94 50 230	8	97	3-H02	94 55 833	8	103	3-H08	94 59 710	8	131	3-H12
94 46 055	8	149	3-K06	94 50 487	8	175	3-K08	94 55 841	8	103	3-H08	94 59 710	8	135	3-H16
94 46 162	8	35	3-E12	94 50 750	8	147	3-J04	94 55 858	8	103	3-H08	94 59 751	8	167	3-J24
94 46 246	8	123	3-H04	94 50 766	8	147	3-J04	94 55 896	8	103	3-H08	94 59 850	8	146	3-J02
94 46 253	8	123	3-H04	94 50 784	8	149	3-J06	94 55 916	8	111	3-H16	94 59 866	8	125	3-K06
94 46 261	8	123	3-H04	94 50 784	8	153	3-J10	94 55 924	8	111	3-H16	94 59 876	8	171	3-K04
94 46 279	8	123	3-H04	94 50 974	8	137	3-H02	94 55 932	8	111	3-H16	94 59 975	8	125	3-K06
94 46 287	8	123	3-H04	94 50 990	8	147	3-J04	94 55 940	8	111	3-H16	94 60 742	0	27	1-G04
94 46 285	8	123	3-H04	94 51 006	8	131	3-H12	94 55 957	8	111	3-H16	94 60 742	8	181	3-K14
94 46 303	8	123	3-H04	94 51 006	8	135	3-H16	94 55 965	8	111	3-H16	94 60 759	8	139	3-H20
94 46 311	8	123	3-H04	94 51 014	8	169	3-K02	94 56 872	8	125	3-K06	94 61 047	8	31	3-E08
94 46 329	8	123	3-H04	94 51 014	8	177	3-K10	94 57 409	8	139	3-H20	94 61 070	8	171	3-K04
94 46 337	8	123	3-H04	94 51 022	8	131	3-H12	94 57 417	8	139	3-H20	94 61 084	8	27	1-G04
94 46 345	8	125	3-H06	94 51 022	8	135	3-H16	94 57 425	8	153	3-J10	94 61 086	8	181	3-K14
94 46 352	8	125	3-H06	94 51 519	8	101	3-H06	94 57 433	8	153	3-J10	94 61 098	8	45	3-E22
94 46 360	8	123	3-H04	94 51 519	8	111	3-H16	94 57 490	8	151	3-J06	94 61 096	8	53	3-F06
94 46 374	8	123	3-H04	94 51 527	8	103	3-H08	94 57 490	8	153	3-J10	94 61 435	8	31	3-E08
94 46 386	8	123	3-H04	94 51 527	8	111	3-H16	94 57 540	8	125	3-K06	94 61 880	0	27	1-G04
94 46 398	8	123	3-H04	94 51 535	8	103	3-H08	94 57 547	8	125	3-K06	94 61 880	8	181	3-K14
94 46 881	8	33	3-E10	94 51 535	8	111	3-H16	94 57 565	8	33	3-E10	94 61 896	8	71	3-F24
94 46 931	8	123	3-H04	94 51 550	8	103	3-H08	94 57 862	8	139	3-H20	94 61 908	8	71	3-F24
94 46 948	8	123	3-H04	94 51 550	8	113	3-H18	94 57 904	8	117	3-H22	94 61 914	8	71	3-F24
94 46 959	8	123	3-H04	94 51 568	8	103	3-H08	94 57 912	8	117	3-H22	94 61 922	8	71	3-F24
94 46 964	8	123	3-H04	94 51 568	8	111	3-H16	94 57 946	8	117	3-H22	94 61 930	8	71	3-F24
94 46 989	8	101	3-H06	94 51 576	8	105	3-H10	94 57 953	8	117	3-H22	94 61 948	8	71	3-F24

Page Sida	Group Grupp	Date Datum	NUMERICAL REGISTER				NUMMERREGISTER				
34	10A	1987-10									
Part No Art nr	Gr Gr	Page Grid Sida Koord	Part No Art nr	Gr Gr	Page Grid Sida Koord	Part No Art nr	Gr Gr	Page Grid Sida Koord	Part No Art nr	Gr Gr	Page Grid Sida Koord
94 62 185	8	147 3-J04	94 79 098	8	177 3-K10	97 07 217	8	51 3-F04			
94 62 193	8	147 3-J04	94 79 106	8	177 3-K10	97 07 217	8	53 3-F06			
94 62 615	8	139 3-J20	94 79 114	8	177 3-K10	97 30 995	8	121 3-I02			
94 62 656	8	177 3-K10	94 79 122	8	177 3-K10	97 46 256	8	155 3-J12			
94 62 684	8	177 3-K10	94 79 130	8	177 3-K10	97 46 256	8	159 3-J16			
94 62 698	8	151 3-J08	94 79 148	8	177 3-K10	97 46 264	8	159 3-J16			
94 62 706	8	151 3-J08	94 79 155	8	177 3-K10	97 46 272	0	30 1-G07			
94 62 961	8	127 3-J08	94 79 163	8	177 3-K10	97 46 282	8	97 3-H02			
94 64 736	0	27 1-G04	94 79 213	0	30 1-G07	97 46 280	0	30 1-G07			
94 64 736	8	161 3-K14	94 79 221	0	30 1-G07	97 46 280	8	97 3-H02			
94 64 751	0	24 1-G01	94 79 221	8	167 3-J24	97 46 298	8	161 3-J18			
94 64 769	0	24 1-G01	94 79 304	8	177 3-K10	97 46 306	8	159 3-J16			
94 64 777	0	25 1-G02	94 79 304	8	161 3-K14	97 46 314	8	161 3-J18			
94 64 785	0	25 1-G02	94 79 312	8	177 3-K10	97 46 322	0	30 1-G07			
94 65 113	8	53 3-F06	94 79 312	8	181 3-K14	97 46 322	8	167 3-J24			
94 65 121	8	53 3-F06	94 79 403	8	177 3-K10	97 46 894	0	24 1-G01			
94 65 139	8	53 3-F06	94 79 403	3	181 3-K14	97 46 835	8	159 3-J16			
94 65 279	8	167 3-J24	94 79 411	8	177 3-K10	97 46 843	8	159 3-J16			
94 65 584	8	73 3-G02	94 79 510	8	181 3-K14	98 06 829	8	29 3-E06			
94 65 600	8	181 3-K14	94 79 601	0	26 1-G03	98 06 837	8	29 3-E06			
94 68 414	8	151 3-J08	94 79 601	8	177 3-K10	98 09 690	8	125 3-I06			
94 68 422	8	151 3-J08	94 79 650	8	173 3-K06	98 33 997	8	143 3-J24			
94 68 554	8	151 3-J08	94 79 676	8	169 3-K02						
94 69 156	8	171 3-K04	94 79 841	8	29 3-E06						
94 69 164	8	171 3-K04	94 79 881	8	169 3-K02						
94 71 897	8	119 3-H24	94 80 401	8	167 3-J24						
94 71 905	8	119 3-H24	94 80 419	8	167 3-J24						
94 71 921	8	117 3-H22	94 80 997	0	30 1-G07						
94 71 939	8	117 3-H22	94 81 425	0	24 1-G01						
94 71 947	8	117 3-H22	94 81 425	8	29 3-E06						
94 71 954	8	117 3-H22	94 81 722	8	167 3-J24						
94 71 962	8	117 3-H22	94 82 415	8	169 3-K02						
94 71 988	8	117 3-H22	94 85 574	8	29 3-E06						
94 71 996	8	117 3-H22	94 86 267	8	151 3-J08						
94 72 002	8	117 3-H22	94 86 275	8	151 3-J08						
94 72 010	8	117 3-H22	94 89 287	8	135 3-F16						
94 72 026	8	117 3-H22	94 89 303	8	55 3-F08						
94 73 133	8	145 3-J02	94 89 477	8	151 3-J08						
94 73 158	8	177 3-K10	94 92 125	8	163 3-J20						
94 73 158	8	181 3-K14	94 92 133	8	163 3-J20						
94 73 802	8	53 3-F06	94 92 455	3	53 2-H08						
94 73 810	8	53 3-F06	95 03 152	3	31 2-G08						
94 73 818	8	175 3-K08	95 07 773	3	43 2-G20						
94 73 818	8	173 3-K06	95 24 745	8	125 3-I06						
94 73 919	8	173 3-K06	95 52 639	3	21 2-F22						
94 73 943	8	173 3-K06	95 52 647	3	21 2-F22						
94 79 007	8	177 3-K10	95 52 878	2	91 2-D20						
94 79 007	8	181 3-K14	95 52 878	3	47 2-G24						
94 79 015	8	177 3-K10	95 60 889	3	85 2-I14						
94 79 015	8	181 3-K14	95 66 720	3	53 2-H08						
94 79 023	8	177 3-K10	95 67 215	0	11 1-F12						
94 79 023	8	181 3-K14	95 67 215	3	51 2-H04						
94 79 031	8	177 3-K10	95 95 901	0	31 1-G08						
94 79 031	8	181 3-K14	95 95 919	0	30 1-G07						
94 79 049	8	177 3-K10	95 95 927	0	30 1-G07						
94 79 056	8	177 3-K10	95 95 935	0	30 1-G07						
94 79 056	8	181 3-K14	95 95 943	0	30 1-G07						
94 79 064	8	177 3-K10	95 92 008	8	125 3-I08						
94 79 072	8	177 3-K10	95 88 458	8	125 3-I06						
94 79 080	8	177 3-K10	97 03 216	8	163 3-J20						

NEW ARTICLES						NYA ARTIKLAR						Date Datum			Group Grupp			Page Sida					
															1987-10			10B			1		
Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
69 11 671	8	89	3-G18	75 24 556	0	5	1-F06	78 74 340	8	91	3-G20	84 36 933	8	99	3-H04								
69 11 686	8	91	3-G20	75 24 572	0	5	1-F06	78 74 530	5	5	3-A06	84 36 941	8	99	3-H04								
69 11 697	8	91	3-G20	75 24 598	0	5	1-F06	78 74 548	0	18	1-F19	84 71 096	1	35	1-I12								
69 11 705	8	91	3-G20	75 24 614	0	5	1-F06	78 74 548	5	3	3-A04	85 03 153	3	57	2-H10								
69 11 820	8	85	3-G14	75 24 630	0	5	1-F06	78 74 720	5	3	3-A04	85 03 153	3	59	2-H12								
69 11 820	8	89	3-G18	75 24 655	0	5	1-F06	78 74 738	5	3	3-A04	85 03 153	3	65	2-H18								
69 12 364	8	19	3-D20	75 24 671	0	5	1-F06	78 68 068	3	59	2-H12	85 03 153	3	67	2-H20								
69 12 380	8	19	3-D20	75 24 687	0	5	1-F06	78 68 068	3	61	2-H14	85 03 153	3	73	2-H02								
69 25 851	8	47	3-E24	75 24 713	0	5	1-F06	78 68 068	3	67	2-H20	85 03 153	3	79	2-H08								
69 25 863	8	47	3-E24	75 24 739	0	5	1-F06	78 68 068	3	69	2-H22	85 03 179	3	57	2-H10								
69 26 901	8	27	3-E04	75 24 754	0	5	1-F06	78 68 068	3	73	2-H02	85 03 179	3	65	2-H18								
69 27 032	8	55	3-F08	75 24 770	0	5	1-F06	78 68 068	3	79	2-H08	85 03 179	3	73	2-H12								
69 37 254	8	39	3-E16	75 24 796	0	5	1-F06	79 70 098	6	167	3-J24	85 03 179	3	79	2-H08								
69 37 262	8	39	3-E16	75 24 812	0	5	1-F06	79 70 155	2	39	2-B16	85 03 476	3	57	2-H10								
71 55 013	3	59	2-H12	75 24 838	0	5	1-F06	79 70 155	2	107	2-E12	85 03 476	3	65	2-H18								
71 55 013	3	67	2-H20	75 24 853	0	5	1-F06	79 72 029	3	57	2-H10	85 03 476	3	73	2-H02								
71 55 013	3	73	2-H02	75 25 231	2	55	2-C08	79 72 029	3	59	2-H12	85 03 476	3	79	2-H08								
71 55 013	3	79	2-H08	75 25 231	2	57	2-C10	79 72 029	3	61	2-H14	85 04 771	3	57	2-H10								
71 55 021	3	59	2-H12	75 25 421	2	43	2-B20	79 72 029	3	65	2-H18	85 04 771	3	65	2-H18								
71 55 021	3	67	2-H20	75 25 421	2	47	2-B24	79 72 029	3	67	2-H20	85 04 789	3	57	2-H10								
71 55 716	3	73	2-H02	75 25 421	2	53	2-C06	79 72 029	3	69	2-H22	85 04 789	3	65	2-H18								
71 55 716	3	79	2-H08	75 33 615	0	5	1-F06	79 72 029	3	73	2-H02	85 09 846	3	61	2-H14								
71 55 724	3	57	2-H10	75 33 623	0	5	1-F06	79 72 029	3	79	2-H08	85 09 846	3	69	2-H22								
71 96 710	3	73	2-H02	75 33 631	0	5	1-F06	79 73 431	0	4	1-F05	85 09 846	3	73	2-H02								
71 96 710	3	79	2-H08	75 35 362	0	5	1-F06	79 73 472	8	51	3-F04	85 09 846	3	79	2-H08								
75 00 739	2	21	2-A22	75 35 370	0	5	1-F06	79 73 969	8	143	3-J24	85 16 817	3	57	2-H10								
75 00 746	2	105	2-E10	75 35 388	0	5	1-F06	79 75 212	8	43	3-E20	85 16 817	3	59	2-H12								
75 01 216	3	17	2-F18	75 35 062	2	91	2-D20	79 75 212	8	47	3-E24	85 16 817	3	65	2-H18								
75 01 216	3	19	2-F20	75 41 071	2	91	2-D20	79 75 436	0	10	1-F11	85 16 817	3	67	2-H20								
75 10 258	4	13	2-J14	75 41 857	0	10	1-F11	79 75 469	0	10	1-F11	85 16 817	3	73	2-H02								
75 10 258	4	17	2-J18	75 42 921	4	13	2-J14	80 47 813	4	29	2-K08	85 16 817	3	79	2-H08								
75 10 258	4	43	2-K20	75 42 936	4	13	2-J14	80 47 813	4	31	2-K08	85 16 890	3	61	2-H14								
75 11 371	4	49	2-L02	75 42 947	4	13	2-J14	80 49 553	4	13	2-J14	85 16 890	3	69	2-H22								
75 13 674	2	107	2-E12	75 42 947	4	17	2-J18	80 49 553	4	17	2-J18	85 16 932	3	65	2-H18								
75 13 682	2	107	2-E12	75 43 051	0	15	1-F18	80 97 750	0	30	1-G07	85 16 957	3	59	2-H12								
75 13 716	0	10	1-F11	75 43 911	0	10	1-F11	80 97 750	8	167	3-J24	85 16 957	3	67	2-H20								
75 13 724	0	10	1-F11	75 44 844	4	51	2-L04	80 98 048	2	57	2-C10	85 16 957	3	73	2-H02								
75 14 250	2	89	2-D18	75 48 910	0	16	1-F17	81 32 235	2	75	2-D04	85 21 601	3	57	2-H10								
75 14 946	0	15	1-F16	75 61 186	2	23	2-A24	82 33 686	8	13	3-D14	85 21 601	3	65	2-H18								
75 14 946	4	13	2-J14	75 61 749	2	23	2-A24	82 51 514	8	85	3-F18	85 21 619	3	57	2-H10								
75 14 946	4	17	2-J18	75 68 858	0	2	1-F03	82 51 522	8	65	3-F18	85 21 619	3	65	2-H18								
75 14 946	4	43	2-K20	75 68 858	0	3	1-F04	82 67 296	8	11	3-D12	85 21 676	3	73	2-H02								
75 16 537	2	101	2-E06	75 68 866	0	2	1-F03	82 83 947	8	11	3-D12	85 21 676	3	79	2-H08								
75 16 558	2	33	2-B10	75 68 882	0	2	1-F03	82 85 343	8	55	3-F06	85 21 684	3	73	2-H02								
75 16 568	2	33	2-B10	75 68 890	0	2	1-F03	82 86 890	8	91	3-G20	85 21 684	3	79	2-H08								
75 22 345	2	8	2-A10	75 68 916	0	2	1-F03	82 87 666	8	11	3-D12	85 21 726	3	61	2-H14								
75 24 275	0	4	1-F05	75 68 916	0	4	1-F05	82 87 666	8	41	3-E18	85 21 726	3	63	2-H16								
75 24 291	0	4	1-F05	75 68 981	0	2	1-F03	82 88 714	8	43	3-E20	85 21 726	3	69	2-H22								
75 24 317	0	4	1-F05	75 615 636	2	87	2-D16	82 88 722	8	43	3-E20	85 21 726	3	71	2-H24								
75 24 333	0	4	1-F05	75 615 636	2	89	2-D18	82 88 763	8	47	3-E24	85 21 726	3	73	2-H02								
75 24 358	0	4	1-F05	76 16 675	8	77	3-G08	82 88 771	8	47	3-E24	85 21 726	3	79	2-H08								
75 24 374	0	4	1-F05	78 73 565	0	30	1-G07	82 89 266	8	87	3-G18	85 29 265	3	51	2-H04								
75 24 390	0	4	1-F05	78 73 565	8	85	3-G14	82 89 266	8	93	3-G22	85 30 107	3	57	2-H10								
75 24 416	0	4	1-F05	78 73 565	8	91	3-G20	82 92 427	1	35	1-I12	85 30 107	3	65	2-H18								
75 24 432	0	4	1-F05	78 73 573	0	30	1-G07	82 94 365	1	35	1-I12	85 30 107	3	75	2-H04								
75 24 457	0	4	1-F05	78 73 573	8	85	3-G14	82 95 066	2	23	2-A24	85 30 115	3	57	2-H10								
75 24 473	0	4	1-F05	78 73 573	8	91	3-G20	83 08 647	0	4	1-F05	85 30 115	3	65	2-H18								
75 24 498	0	4	1-F05	78 74 142	8	19	3-D20	83 78 630	3	65	2-H18	85 30 851	3	53	2-H06								
75 25 515	0	5	1-F06	78 74 340	0	30	1-G07	83 94 033	1	11	1-H12	85 33 897	3	61	2-H14								
75 24 531	0	5	1-F06	78 74 340	8	85	3-G14	83 94 306	1	11	1-H12	85 33 897	3	69	2-H22								

Page Sida	Group Grupp	Date Datum	NEW ARTICLES				NYA ARTIKLAR				
2	10B	1987-10									
Part No Art.nr	Gr Sida	Page Grid Sida Koord	Part No Art.nr	Gr Sida	Page Grid Sida Koord	Part No Art.nr	Gr Sida	Page Grid Sida Koord	Part No Art.nr	Gr Sida	Page Grid Sida Koord
85 39 363	3	71 2-H24	85 58 904	3	57 2-H10	87 19 824	0	14 1-F15	89 46 014	5	9 3-A10
85 39 983	3	81 2-H14	85 60 278	3	61 2-H14	87 20 419	0	13 1-F14	89 47 210	7	7 3-C08
85 39 983	3	89 2-H22	85 60 278	3	63 2-H16	87 20 468	0	13 1-F14	89 47 574	5	13 3-A14
85 40 015	3	61 2-H14	85 60 278	3	69 2-H22	87 20 476	0	13 1-F14	89 47 798	7	3 3-C04
85 40 015	3	89 2-H22	85 60 278	3	71 2-H24	87 20 732	4	27 2-K04	89 47 806	7	3 3-C04
85 40 049	3	19 2-F20	85 60 278	3	75 2-I04	87 24 841	0	13 1-F14	89 47 814	7	5 3-C06
85 40 213	3	53 2-H06	85 60 278	3	61 2-I10	87 24 890	0	17 1-F18	89 47 822	7	5 3-C06
85 40 589	3	61 2-H14	85 60 609	3	33 2-G10	87 25 036	4	13 2-J14	89 47 830	7	5 3-C06
85 40 589	3	89 2-H22	85 64 918	3	67 2-H20	87 25 814	4	13 2-J14	89 47 848	7	5 3-C06
85 41 211	3	75 2-I04	85 67 505	3	15 2-F16	87 26 732	4	17 2-J18	89 47 970	8	5 3-B06
85 41 211	3	81 2-I10	85 68 453	0	29 1-G06	87 25 822	4	43 2-K20	89 47 988	6	5 3-B06
85 44 223	3	63 2-H16	85 71 903	3	9 2-F10	87 26 713	0	13 1-F14	89 48 044	6	5 3-B06
85 44 223	3	71 2-H24	85 71 986	3	9 2-F10	87 26 713	4	5 2-J06	89 48 143	7	3 3-C04
85 44 231	3	63 2-H16	85 72 034	3	9 2-F10	87 26 713	0	13 1-F14	89 48 150	7	3 3-C04
85 44 231	3	71 2-H24	85 72 653	3	9 2-F10	87 26 713	4	23 2-J24	89 48 176	7	3 3-C04
85 44 249	3	63 2-H16	85 72 745	3	7 2-F09	87 26 713	4	27 2-K04	89 48 176	7	3 3-C04
85 44 249	3	71 2-H24	85 74 253	3	23 2-F24	87 26 713	4	13 1-F14	89 48 176	7	3 3-C04
85 44 256	3	63 2-H16	85 74 857	3	87 2-I18	87 26 713	4	5 2-J06	89 48 176	7	3 3-C04
85 44 256	3	71 2-H24	85 74 931	3	45 2-G22	87 26 713	4	17 1-H13	89 48 176	7	3 3-C04
85 44 256	3	75 2-I04	85 79 963	3	45 2-G22	87 26 713	4	21 1-H22	89 48 176	7	3 3-C04
85 44 264	3	81 2-I10	85 79 971	3	45 2-G22	87 26 713	4	21 1-H22	89 48 176	7	3 3-C04
85 44 280	3	81 2-H16	85 80 060	1	36 1-I12	87 26 713	0	4 1-F05	89 48 176	7	3 3-C04
85 44 306	3	61 2-H14	85 81 472	3	87 2-I18	87 26 713	0	10 1-F11	89 48 176	7	3 3-C04
85 44 306	3	63 2-H16	85 82 994	2	91 2-D20	87 26 713	0	4 1-F05	89 48 176	7	3 3-C04
85 44 306	3	69 2-H22	85 82 728	0	28 1-G05	87 26 713	2	11 2-A12	89 48 176	7	3 3-B06
85 44 306	3	71 2-H24	85 82 728	0	29 1-G06	87 26 713	0	5 1-F06	89 48 176	7	3 3-B06
85 44 306	3	75 2-I04	85 82 728	2	91 2-D20	87 26 713	0	5 1-F06	89 48 176	7	3 3-B06
85 44 306	3	81 2-H10	85 83 510	3	25 2-G02	87 26 713	0	13 1-F14	89 48 176	7	3 3-B06
85 44 322	3	63 2-H16	85 83 528	3	25 2-G02	87 26 713	0	5 2-J06	89 48 176	7	3 3-B06
85 44 322	3	71 2-H24	85 83 528	3	31 2-G08	87 26 713	0	13 1-F14	89 48 176	7	3 3-B06
85 44 322	3	75 2-I04	85 83 627	3	45 2-G22	87 26 713	4	5 2-J06	89 48 176	7	3 3-B06
85 44 322	3	81 2-H10	85 85 176	3	89 2-I18	87 26 713	4	13 1-F14	89 48 176	7	3 3-B06
85 44 348	3	61 2-H14	85 85 333	3	171 3-K04	87 26 713	4	5 2-J06	89 48 176	7	3 3-B06
85 44 348	3	69 2-H22	85 85 333	3	29 2-G06	87 26 713	0	6 1-F07	89 48 176	7	3 3-B06
85 44 363	3	61 2-H14	85 85 358	3	29 2-G06	87 26 713	0	6 1-F07	89 48 176	7	3 3-B06
85 44 363	3	69 2-H22	85 85 358	3	29 2-G06	87 26 713	0	6 1-F06	89 48 176	7	3 3-B06
85 44 389	3	81 2-H14	85 85 396	3	29 2-G06	87 26 713	0	6 1-F06	89 48 176	7	3 3-B06
85 44 389	3	69 2-H22	85 85 396	3	29 2-G06	87 26 713	0	12 1-F13	89 48 176	7	3 3-B06
85 44 389	3	75 2-I04	85 85 408	3	29 2-G06	87 26 713	4	5 2-J06	89 48 176	7	3 3-B06
85 44 389	3	81 2-H10	85 85 424	3	29 2-G06	87 26 713	1	35 1-I12	89 48 176	7	3 3-B06
85 44 397	3	81 2-H14	85 85 432	3	29 2-G06	87 26 713	1	35 1-I12	89 48 176	7	3 3-B06
85 44 397	3	69 2-H22	85 85 432	3	29 2-G06	87 26 713	1	35 1-I12	89 48 176	7	3 3-B06
85 45 519	3	45 2-G22	85 85 481	3	29 2-G06	87 26 713	1	5 1-H06	89 48 176	7	3 3-B06
85 45 527	3	45 2-G22	85 85 549	3	85 2-I14	87 26 713	1	5 1-H06	89 48 176	7	3 3-B06
85 46 186	3	43 2-G20	85 94 152	3	7 2-F08	87 26 713	1	5 1-H06	89 48 176	7	3 3-B06
85 46 947	3	85 2-I14	87 11 871	4	13 2-J14	87 26 713	1	5 1-H06	89 48 176	7	3 3-B06
85 47 499	0	11 1-F12	87 11 871	4	17 2-J18	87 26 713	0	4 1-F05	89 48 176	7	3 3-B06
85 47 499	3	37 2-G14	87 11 871	4	43 2-K20	87 26 713	1	31 1-I06	89 48 176	7	3 3-B06
85 47 580	0	11 1-F12	87 12 283	4	21 2-J22	87 26 713	1	31 1-I06	89 48 176	7	3 3-B06
85 47 580	3	31 2-G08	87 12 283	4	25 2-K02	87 26 713	1	39 1-I16	89 48 176	7	3 3-B06
85 47 606	0	11 1-F12	87 15 229	4	23 2-J24	87 26 713	1	9 1-H10	89 48 176	7	3 3-B06
85 47 606	3	31 2-G08	87 15 229	4	27 2-K04	87 26 713	1	27 1-I04	89 48 176	7	3 3-B06
85 47 606	6	121 3-I02	87 15 383	0	14 1-F15	87 26 713	1	12 1-F13	89 48 176	7	3 3-B06
85 51 685	3	61 2-H14	87 15 494	0	13 2-J14	87 26 713	1	3 3-C04	89 48 176	7	3 3-B06
85 51 685	3	69 2-H22	87 18 371	0	14 1-F15	87 26 713	1	37 2-K14	89 48 176	7	3 3-B06
85 51 973	3	9 2-F10	87 18 629	4	27 2-K04	87 26 713	1	37 2-K14	89 48 176	7	3 3-B06
85 53 889	3	57 2-H10	87 18 615	4	27 2-K04	87 26 713	1	37 2-K14	89 48 176	7	3 3-B06
85 53 889	3	65 2-H18	87 18 600	4	27 2-K04	87 26 713	1	37 2-K14	89 48 176	7	3 3-B06
85 56 896	3	57 2-H10	87 18 835	4	23 2-J24	87 26 713	1	3 3-C04	89 48 176	7	3 3-B06
85 56 896	3	65 2-H18	87 18 835	4	27 2-K04	87 26 713	1	3 3-A10	89 48 176	7	3 3-B06

NEW ARTICLES						NYA ARTIKLAR						Date Datum	Group Grupp	Page Sida
												1987-10	10B	3
Part No Art.nr	Gr Sida	Page Grid Sida Koord	Part No Art.nr	Gr Sida	Page Grid Sida Koord	Part No Art.nr	Gr Sida	Page Grid Sida Koord	Part No Art.nr	Gr Sida	Page Grid Sida Koord	Part No Art.nr	Gr Sida	Page Grid Sida Koord
92 26 499	8	79 3-G08	92 82 104	8	91 3-G20	93 46 354	4	13 2-J14	95 52 878	3	47 2-G24			
92 28 499	8	83 3-G12	92 82 871	8	49 3-F02	93 46 354	4	17 2-J18	95 60 889	3	85 2-I14			
92 28 131	6	11 3-D12	92 82 889	8	49 3-F02	93 46 354	4	43 3-K20	95 66 720	3	53 2-H06			
92 28 144	8	25 3-E02	92 83 573	8	187 3-K20	93 47 893	2	37 2-B14	95 67 215	0	11 1-F12			
92 28 222	8	25 3-E02	92 83 946	8	185 3-K18	93 47 816	4	33 2-K10	95 67 215	3	51 2-H06			
92 28 271	8	21 3-D22	92 83 953	8	187 3-K20	93 47 816	4	55 2-L08	96 82 006	8	125 3-J06			
92 29 717	8	23 3-D24	92 84 100	8	89 3-G18	93 47 816	4	55 2-L08	96 80 458	8	125 3-J06			
92 29 725	8	23 3-D24	92 84 118	8	91 3-G20	93 48 838	2	43 2-B20	97 30 995	8	121 3-K02			
92 29 865	8	15 3-D18	92 84 126	8	91 3-G20	93 48 838	2	47 2-E24	97 48 694	0	24 1-G01			
92 29 949	8	13 3-D14	92 84 159	8	91 3-G20	93 48 838	2	51 2-C04	97 48 635	8	159 3-J16			
92 30 079	6	11 3-D12	92 84 167	8	91 3-G20	93 50 158	0	2 1-F03	97 46 843	8	159 3-J16			
92 30 085	8	11 3-D12	92 84 191	8	85 3-G14	93 50 158	2	13 2-A17	98 06 829	8	29 3-E06			
92 30 301	8	15 3-D18	92 84 209	8	85 3-G14	93 50 505	0	6 1-F04	98 06 837	8	29 3-E06			
92 30 905	8	187 3-K20	92 84 753	8	187 3-K20	93 50 687	2	101 2-E06	98 09 690	8	125 3-J06			
92 31 259	8	77 3-G06	92 87 111	8	77 3-G06	93 51 644	3	19 2-F20	98 33 997	8	143 3-I24			
92 31 259	8	81 3-G10	92 87 111	8	81 3-G10	93 51 693	3	19 2-F20						
92 31 498	8	167 3-K20	92 88 150	8	173 3-K06	93 51 701	3	19 2-F20						
92 31 499	8	77 3-G06	92 88 168	8	173 3-K06	93 59 134	2	33 2-B10						
92 31 499	8	83 3-G12	92 88 192	8	77 3-G06	93 59 142	2	29 2-E06						
92 31 796	0	25 1-G02	92 88 200	8	77 3-G06	93 59 597	0	10 1-F11						
92 31 796	8	55 3-F06	92 89 372	0	31 1-G08	93 61 163	4	33 2-K10						
92 31 853	8	15 3-D18	92 89 380	0	31 1-G08	93 61 163	4	55 2-L08						
92 32 349	8	11 3-D12	92 90 933	0	30 1-G07	93 62 534	2	59 2-C12						
92 32 935	7	7 3-C08	92 90 941	0	30 1-G07	93 63 250	2	43 2-B20						
92 33 297	8	27 3-E04	92 91 436	8	89 3-G18	93 63 268	2	43 2-B20						
92 33 305	8	27 3-E04	92 92 236	8	185 3-K18	93 63 276	2	43 2-B20						
92 33 727	0	25 1-G02	92 92 244	8	185 3-K18	93 63 284	2	43 2-B20						
92 34 378	8	41 3-E18	92 92 269	8	187 3-K20	93 63 284	2	47 2-B24						
92 34 386	8	41 3-E18	92 92 640	8	9 3-D10	93 63 284	2	53 2-C06						
92 36 670	8	49 3-F02	92 92 699	8	39 3-E16	93 63 359	0	4 1-F05						
92 36 688	8	49 3-F02	92 93 853	8	49 3-F02	93 64 431	4	49 2-L02						
92 37 009	8	37 3-E14	92 93 861	8	49 3-F02	93 65 040	0	6 1-F07						
92 37 165	8	185 3-K16	92 93 895	8	43 3-E20	93 69 307	2	7 2-A08						
92 37 173	8	187 3-K20	92 93 903	8	43 3-E20	93 69 315	2	7 2-A08						
92 37 363	8	41 3-E18	92 97 458	8	87 3-G16	94 56 872	8	125 3-J06						
92 37 371	8	41 3-E18	92 97 458	8	93 3-G22	94 62 698	8	151 3-J08						
92 37 389	8	41 3-E18	93 03 629	2	75 2-D04	94 62 706	8	151 3-J08						
92 37 397	8	41 3-E18	93 07 497	2	101 2-E06	94 73 133	8	145 3-J02						
92 37 991	8	55 3-F08	93 08 453	2	9 2-A10	94 79 601	0	26 1-G03						
92 38 007	0	57 3-F10	93 14 766	2	63 2-C16	94 79 601	0	177 3-K10						
92 39 294	8	89 3-G18	93 17 165	4	41 2-K18	94 79 650	8	173 3-K06						
92 39 302	8	89 3-G18	93 17 223	4	33 2-K10	94 79 841	8	29 3-E06						
92 39 336	8	85 3-G14	93 17 223	4	55 2-L08	94 79 981	8	169 3-K02						
92 39 344	8	85 3-G14	93 18 539	4	75 2-D04	94 80 367	2	55 3-F08						
92 39 518	8	91 3-G20	93 23 924	0	11 1-F12	94 81 425	8	24 1-G01						
92 39 526	8	91 3-G20	93 24 153	4	33 2-K10	94 81 425	8	29 3-E06						
92 39 716	8	91 3-G20	93 24 930	2	7 2-A08	94 81 722	8	167 3-J24						
92 39 724	8	91 3-G20	93 31 539	4	33 2-K10	94 82 415	8	169 3-K02						
92 37 262	8	85 3-F18	93 31 547	4	33 2-K10	94 85 574	8	29 3-E06						
92 80 173	8	63 3-F16	93 35 696	0	14 1-F15	94 86 267	8	151 3-J08						
92 80 189	8	63 3-F16	93 35 696	4	45 2-K22	94 86 275	8	151 3-J08						
92 80 231	8	63 3-F16	93 37 510	2	49 2-C02	94 89 287	8	135 3-I16						
92 80 256	8	63 3-F16	93 37 510	2	51 2-C04	94 89 303	8	55 3-F08						
92 80 272	8	63 3-F16	93 37 544	0	10 1-F11	94 89 477	8	151 3-J08						
92 80 298	8	63 3-F16	93 39 243	4	55 2-L08	95 03 152	3	31 2-G08						
92 80 330	8	63 3-F16	93 39 375	2	61 2-C14	95 07 773	3	43 2-G20						
92 81 130	8	49 3-F02	93 42 734	0	16 1-F17	95 24 745	8	125 3-J06						
92 81 775	8	47 3-E24	93 45 984	0	16 1-F17	95 32 639	31	21 2-F22						
92 81 783	8	47 3-E24	93 45 984	4	47 2-K24	95 52 647	3	21 2-F22						
92 82 104	8	85 3-G14	93 46 354	2	19 2-A20	95 52 878	2	91 2-D20						

DELETED PARTS				UTGÅNGNA ARTIKLAR				Date Datum	Group Grupp	Page Sida
								1987-10	10C	1
Part No Art nr	Gr Gr	Page Grid Sida Koord		Part No Art nr	Gr Gr	Page Grid Sida Koord		Part No Art nr	Gr Gr	Page Grid Sida Koord
70 37 468				82 41 036				82 68 949		83 21 580
71 09 069				82 41 044				82 68 956		83 22 489
71 54 891				82 42 083				82 68 964		83 24 014
73 28 288				82 43 594				82 68 872		83 24 907
76 01 172				82 43 602				82 68 880		83 30 953
76 01 180				82 46 639				82 68 971		83 33 056
76 01 206				82 46 647				82 68 989		83 33 262
76 01 271				82 47 596				82 69 177		83 33 373
76 01 289				82 47 603				82 69 268		83 34 484
76 01 446				82 47 611				82 69 755		83 34 500
76 01 453				82 47 801				82 69 763		83 35 127
76 01 578				82 48 031				82 69 981		83 38 642
76 01 596				82 49 237				82 72 148		83 39 517
76 01 610				82 49 302				82 72 163		83 39 863
76 01 628				82 49 377				82 74 169		83 43 008
76 01 750				82 50 458				82 74 292		83 47 114
76 01 768				82 52 397				82 74 300		83 49 060
76 02 022				82 53 254				82 74 375		83 55 935
76 02 030				82 53 437				82 74 524		83 56 719
76 02 048				82 53 445				82 74 532		83 57 808
76 02 055				82 55 291				82 74 540		83 60 067
76 02 386				82 56 554				82 74 557		83 60 612
76 03 384				82 56 638				82 74 565		83 60 745
78 29 641				82 56 729				82 74 656		83 61 396
78 40 010				82 56 737				82 74 722		83 61 552
78 60 505				82 56 745				82 74 870		83 61 693
78 73 250				82 56 752				82 74 888		83 61 701
78 73 268				82 57 719				82 75 422		83 62 402
78 73 698				82 58 006				82 75 794		83 64 044
79 15 200				82 58 071				82 75 802		83 65 058
79 15 267				82 58 196				82 76 149		83 66 692
79 22 404				82 58 204				82 76 396		83 67 492
79 34 672				82 58 311				82 76 750		83 67 526
79 35 240				82 58 329				82 76 784		83 67 815
79 56 337				82 59 012				82 77 501		83 69 092
79 63 176				82 59 038				82 78 582		83 69 316
79 63 556				82 59 202				82 78 889		83 74 563
79 63 598				82 59 293				82 79 697		83 75 362
79 63 606				82 59 301				82 79 705		83 76 479
79 63 614				82 59 319				82 85 686		83 85 791
79 65 320				82 59 327				82 86 155		83 90 064
79 68 480				82 59 335				82 86 163		83 93 175
79 69 371				82 59 343				82 86 510		84 02 885
79 72 235				82 60 374				82 86 577		84 03 321
79 73 373				82 60 457				82 86 585		84 03 339
80 55 972				82 62 115				82 87 116		84 15 937
80 59 750				82 62 479				82 87 724		84 15 945
80 83 966				82 62 487				82 87 997		84 36 610
82 09 405				82 64 848				82 88 003		84 40 681
82 09 850				82 64 970				82 89 050		84 47 997
82 09 892				82 65 324				83 00 055		84 52 468
82 15 683				82 66 637				83 07 506		84 53 250
82 18 661				82 66 918				83 08 314		84 53 268
82 35 111				82 67 684				83 08 454		84 61 673
82 36 457				82 68 401				83 08 918		84 61 681
82 36 465				82 68 583				83 14 502		84 67 276
82 36 689				82 68 591				83 15 582		84 67 284
82 36 721				82 68 732				83 15 581		84 70 346
82 39 154				82 68 740				83 16 234		84 73 989
82 39 782				82 68 831				83 20 673		84 76 067

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02

Page Sida	Group Grupp	Date Datum	DELETED PARTS				UTGÅNGNA ARTIKLAR			
2	10C	1987-10								
Part No Art.nr	Gr Page Grid Gr Sida Koord	Part No Art.nr	Gr Page Grid Gr Sida Koord	Part No Art.nr	Gr Page Grid Gr Sida Koord	Part No Art.nr	Gr Page Grid Gr Sida Koord			
84 77 291		87 04 090		89 41 585		93 23 084				
84 77 309		87 04 215		89 42 872		93 24 310				
84 78 562		87 05 212		89 42 880		93 25 960				
84 86 417		87 05 238		89 42 898		93 26 471				
85 06 644		87 05 489		89 42 906		93 26 745				
85 08 640		87 06 145		89 42 914		93 26 840				
85 10 851		87 06 350		89 42 963		93 29 475				
85 10 869		87 10 394		89 43 003		93 29 633				
85 11 016		87 10 550		89 44 290		93 30 820				
85 11 057		87 11 459		89 45 123		93 31 798				
85 21 627		87 11 475		89 46 303		93 32 412				
85 21 635		87 11 491		89 46 311		93 36 215				
85 21 692		87 11 673		89 46 329		93 37 502				
85 28 143		87 12 333		89 46 337		94 01 019				
85 39 876		87 13 968		89 46 774		94 01 035				
85 39 884		87 14 529		89 93 008		94 01 639				
85 40 908		87 80 086		89 93 131		94 01 746				
85 41 005		88 03 867		89 95 128		94 03 486				
85 42 383		88 09 097		89 95 698		94 04 138				
85 50 113		88 49 606		89 95 714		94 12 388				
85 50 279		88 55 298		89 95 839		94 18 195				
85 50 535		89 03 589		89 95 854		94 21 843				
85 51 160		89 05 416		89 95 862		94 21 866				
85 51 293		89 05 432		89 96 076		94 22 213				
85 51 301		89 05 440		92 23 777		94 22 957				
85 51 624		89 07 818		92 23 785		94 25 000				
85 52 622		89 10 341		92 98 134		94 25 463				
85 52 648		89 17 387		92 98 142		94 38 342				
85 52 929		89 19 664		93 00 401		94 38 359				
85 52 952		89 19 672		93 00 427		94 38 408				
85 53 998		89 19 680		93 04 619		94 38 417				
85 55 211		89 19 698		93 05 004		94 46 089				
85 56 003		89 20 076		93 05 012		94 46 097				
85 58 512		89 24 177		93 05 020		94 46 899				
85 58 553		89 24 516		93 05 079		94 50 289				
85 58 694		89 25 554		93 05 178		94 51 584				
85 59 353		89 27 881		93 05 194		94 52 194				
85 59 379		89 34 382		93 06 788		94 53 960				
85 59 387		89 34 390		93 07 026		94 57 029				
85 59 411		89 34 408		93 07 034		94 58 720				
85 59 544		89 34 903		93 07 505		94 59 132				
85 59 825		89 35 181		93 07 513						
85 60 196		89 35 363		93 11 192						
85 61 623		89 35 579		93 11 457						
85 61 631		89 35 827		93 12 273						
85 62 100		89 35 942		93 16 357						
85 62 134		89 36 171		93 16 385						
85 62 225		89 36 304		93 17 082						
85 64 353		89 36 353		93 17 298						
85 64 965		89 38 557		93 17 421						
85 65 608		89 39 399		93 17 468						
85 65 830		89 39 407		93 17 567						
85 65 848		89 39 456		93 17 595						
85 66 879		89 39 506		93 17 660						
85 66 887		89 39 605		93 17 983						
85 67 331		89 39 813		93 18 122						
85 67 349		89 40 041		93 19 161						
85 68 024		89 40 074		93 20 417						
87 00 403		89 40 777		93 22 942						
87 03 332		89 41 486		93 22 983						

MASTER INDEX

0	General	1-A02
1	Tools	1-H02
2	Engine	2-A02
3	Electrical system, Instruments	2-F02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-B02
7	Suspension, Wheels	3-C02
8	Body	3-D02
9	Accessories, Labels	3-L02
10	Numerical register	4-A02