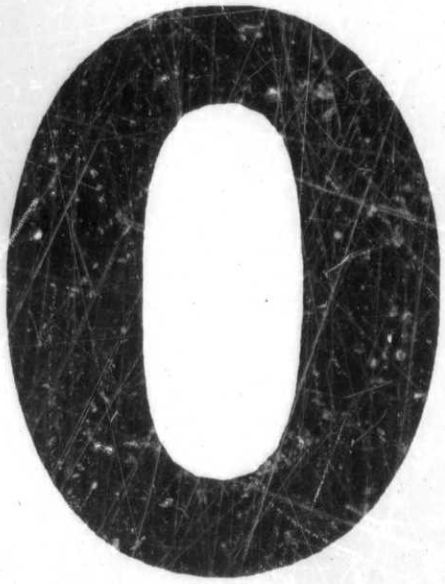


# General
# Allmänt
# Generalidades

# SAAB 900
## M 1986–1989

Parts catalogue
Reservdelskatalog
Catalogo de piezas de recambio

Art. No. 661637

© Saab-Scania AB 1990

MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

| | |
|---|---|
| 0 | General<br>Allmänt<br>Generalidades |
| 2 | Engine<br>Motor<br>Motor |
| 3 A B | Electrical system, instruments<br>Elektriskt system, instrument<br>Sistema elétrico, instrumentos |
| 4 | Transmission<br>Kraftöverföring<br>Transmisión |
| 5 | Brakes<br>Bromsar<br>Frenos |
| 6 | Front assembly, steering<br>Framvagn, styrinrättning<br>Tren delantero, dirección |
| 7 | Suspension, wheels<br>Fjädringssystem, hjul<br>Suspensión, ruedas |
| 8 A B C | Body<br>Kaross<br>Carocería |
| 9 | Tools, labels<br>Verktyg, etiketter<br>Herramientas, etiquetas |
| 10 | Numerical register<br>Nummerregister<br>Indice numérico |

GENERAL


Introduction ..... 1-A05
Abbreviations ..... 1-A06
Model identification ..... 1-A09
Chassis number ..... 1-A11
Engine and gearbox numbers ..... 1-A13
Stock-keeping level ..... 1-A14


ALLMÄNT


Inledning ..... 1-A05
Förkortningar ..... 1-A06
Modellidentifikation ..... 1-A09
Chassinummer ..... 1-A11
Motor- och växellådsnummer ..... 1-A13
Lagerhållningsnivå ..... 1-A15


GENERALIDADES


Introducción ..... 1-A05
Abreviaciones ..... 1-A06
Identificación del modelo ..... 1-A09
Núm. de chasis ..... 1-A11
Núm. de motor y de caja de cambios ..... 1-A13
Nivel de almacenaje ..... 1-A16


MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

# 1-A05

This Parts Catalogue is applicable to the 1986-1989 models of the Saab 900. It will be updated by new microfiches.
When ordering spare parts intended for specific cars, the chassis No. and/or the engine/transmission No. should be quoted. The car model and colour/upholstery code should be quoted when ordering upholstery.
Parts may be listed in this catalogue that are no longer available from SAAB warehouses, but of which importers or dealers may have stock. These articles are indicated by the term "No Longer Serviced" or **NLS** being included in the notes column. If there is a replacing part no. it is shown after NLS (NLS - use 7519132).

Denna reservdelskatalog för Saab 900 omfattar årsmodellerna 1986-1989. Den kommer att hållas aktuell genom att nya fiche ges ut.
Vid beställning av reservdelar till viss bil skall alltid chassinummer och/eller motor- eller växellådsnummer anges. Vid beställning av klädsel skall även bilens typ samt färg- och klädselkod anges.
I denna katalog kan finnas artiklar som inte längre finns tillgängliga från SAAB's lager men som kan finnas tillgängliga hos importör eller återförsäljare. Dessa artiklar är märkta i anmärkningskolumnen med **NLS** (No Longer Serviced). Finns ersättande artikel skrivs art.nr. efter NLS (NLS - use 7519132)

Este catálogo de piezas de recambio del Saab 900 comprende los modelos de los años 1986-1989, y será mantenido al corriente por la publicación de nuevas fichas.
Para encargar piezas destinadas a un coche determinado, hay que indicar siempre el núm. de chasis y/o el de la caja de cambios. Para encargar tapicería, hay , además, que indicar el tipo del coche clave color de la tapicería.
En este catálogo pueden existir artículos no existentes ya en la actualidad en el almacén de SAAB, pero disponibles todavía en algunos casos en las dependencias del importador o concesionario. Estos artículos han sido marcados con **NLS** (No Longer Serviced) en la columna dedicada a las observaciones. En caso de existir un artículo sustitutorio, el número del mismo se escribe inmediatamente después de NLS (NLS - use 7519132).

# 1-A06

| | | |
|---|---|---|
| **A** | Automatic transmission | Automatisk växellåda |
| **ABS** | Anti block system | Låsningsfria bromsar |
| **AC** | Air Conditioning | Luftkonditionering |
| **APC** | Automatic Performance Control | Automatisk laddtryckskontroll |
| **B201** | 2,0 l engine with single cam | 2,0 l motor med en kamaxel |
| **B202** | 2,0 l engine with twin cam | 2,0 l motor med två kamaxlar |
| **C** | Carburetor | Förgasare |
| **CK** | Combi Coupé, 3 or 5 D | Combi-Coupé, 3 eller 5 D |
| **CL** | Central locking | Centrallås |
| **CV** | Convertible | Cabriolet |
| **D** | Door | Dörr |
| **EAS** | Electrically adjustable seat | Elmanövrerad stol |
| **EGR** | Exhaust Gas Recirculation | Avgasrecirkulation |
| **ELCD** | Evaporative Loss Control Device | Slutet bränslesytem |
| **EM** | Electrical mirrors | Elmanövrerade backspeglar |
| **EW** | Electrical window regulators | Elmanövrerade fönsterhissar |
| **HP** | Horse Power | Hästkraft |
| **I** | Fuel injection | Motor med bränsleinsprutning |
| **KW** | Kilo Watt | Kilo Watt |
| **L** | Length | Längd |
| **LH** | Left hand | Vänster |
| **LHD** | Left hand drive | Vänsterstyrd |
| **M** | Manual transmission | Manuell växellåda |
| **MM** | Millimetre | Millimeter |
| **RH** | Right hand | Höger |
| **RHD** | Right hand drive | Högerstyrd |
| **SN** | Sedan, 2 or 4 D | Sedan, 2 eller 4 D |
| **SR** | Sun roof | Sollucka |
| **X** | Quantity as required | Antal efter behov |

| | |
|---|---|
| **A** | Caja de cambios automatico |
| **ABS** | Frenos antibloqueo |
| **AC** | Acondiciona miento de aire |
| **APC** | Control automatico de presion de alimentacion |
| **B201** | Motor de 2,0 litros con un eje de levas |
| **B202** | Motor de 2,0 litros con dos ejes de levas |
| **C** | Carburador |
| **CK** | Combi coupé, 3 ó 5 D |
| **CL** | Cerradura |
| **CV** | Cabriolet |
| **D** | Puerta |
| **EAS** | Asientos maniobra eléctrica |
| **EGR** | Recirculation de los gase de escape |
| **ELCD** | Sistema de combustible cerrado |
| **EM** | Espejos retrovisores elétricos |
| **EW** | Levantacristales eléctricos |
| **HP** | Caballo de vapor |
| **I** | Motor de inyeccion |
| **KW** | Kilowattio |
| **L** | Longitud |
| **LH** | Lado izquierdo |
| **LHD** | Tracción a la izquierda |
| **M** | Caja de cambios manual |
| **MM** | Millimetros |
| **RH** | Lado derecho |
| **RHD** | Volante a la derecha |
| **SN** | Sedan, 2 ó 4 D |
| **SR** | Techo corredizo |
| **X** | Cantidad segun necesidad |


MASTER INDEX


| | | |
|---|---|---|
| **0** | **General** | **1-A02** |
| **2** | **Engine** | **1-B02** |
| **3A** | **Electrical general** | **2-A02** |
| **3B** | **Electrical, contact housing** | **3-A02** |
| **4** | **Transmission** | **3-H02** |
| **5** | **Brakes** | **4-A02** |
| **6** | **Front assembly, Steering** | **4-C02** |
| **7** | **Suspension, Wheels** | **4-E02** |
| **8A** | **Body, external** | **5-A02** |
| **8B** | **Body, internal** | **6-A02** |
| **8C** | **Body, heating and ventilation** | **7-A02** |
| **9** | **Tools, labels** | **7-D02** |
| **10** | **Numerical register** | **7-E02** |


| | | | |
|---|---|---|---|
| **AU** | Australia | Australien | Australia |
| **BE** | Belgium | Belgien | Bélgica |
| **CA** | Canada | Canada | Canadá |
| **CH** | Switzerland | Schweiz | Suiza |
| **DK** | Denmark | Danmark | Dinamarca |
| **DT** | Germany | Tyskland | Alemania |
| **EU** | Europe | Europa | Europa |
| **FE** | Far East | Fjärran Östern | Extremo Oriente |
| **FI** | Finland | Finland | Finlandia |
| **FR** | France | Frankrike | Francia |
| **GB** | Great Britain | England | Gran Bretaña |
| **IT** | Italy | Italien | Italia |
| **JP** | Japan | Japan | Japón |
| **ME** | Middle East | Mellersta Östern | Próximo Oriente |
| **NO** | Norway | Norge | Noruega |
| **SE** | Sweden | Sverige | Suecia |
| **SG** | Singapore | Singapore | Singapur |
| **UC** | USA-California | USA-Californien | EE. UU., Californi |
| **UF** | USA-Federal | USA-Federalt | EE. UU., Federal |
| **US** | USA | USA | EE. UU. |

MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

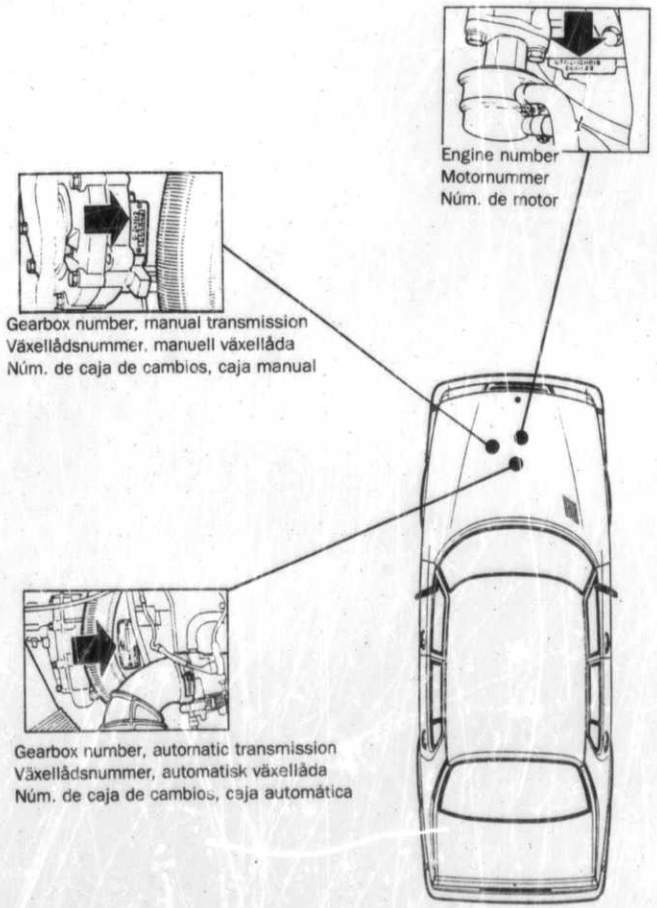

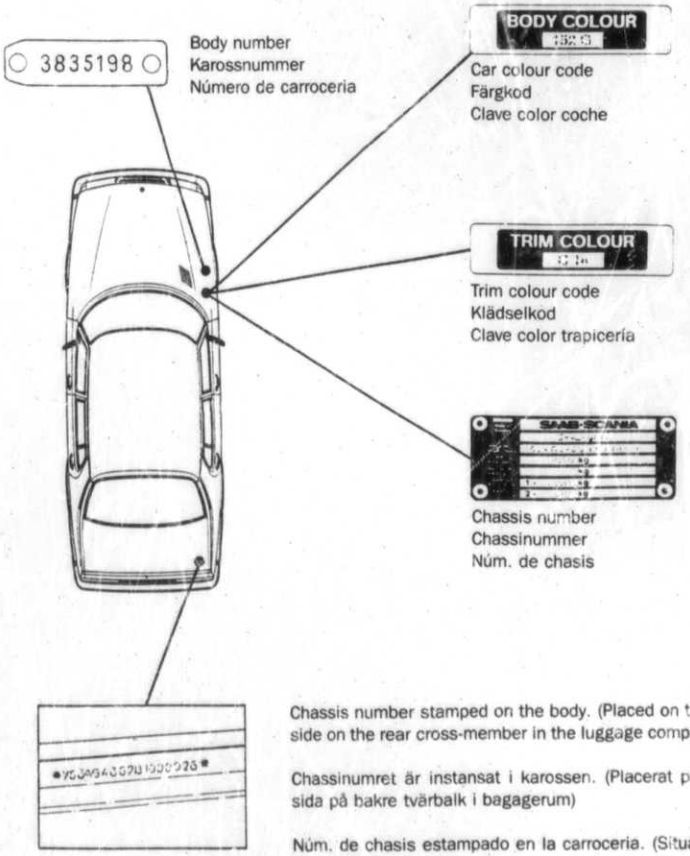



Chassis number stamped on the body. (Placed on the right side on the rear cross-member in the luggage compartment

Chassinumret är instansat i karossen. (Placerat på höger sida på bakre tvärbalk i bagagerum)

Núm. de chasis estampado en la carroceria. (Situado a la izquierda en la traviesa trasera, en el compartimento de equipaje)

MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

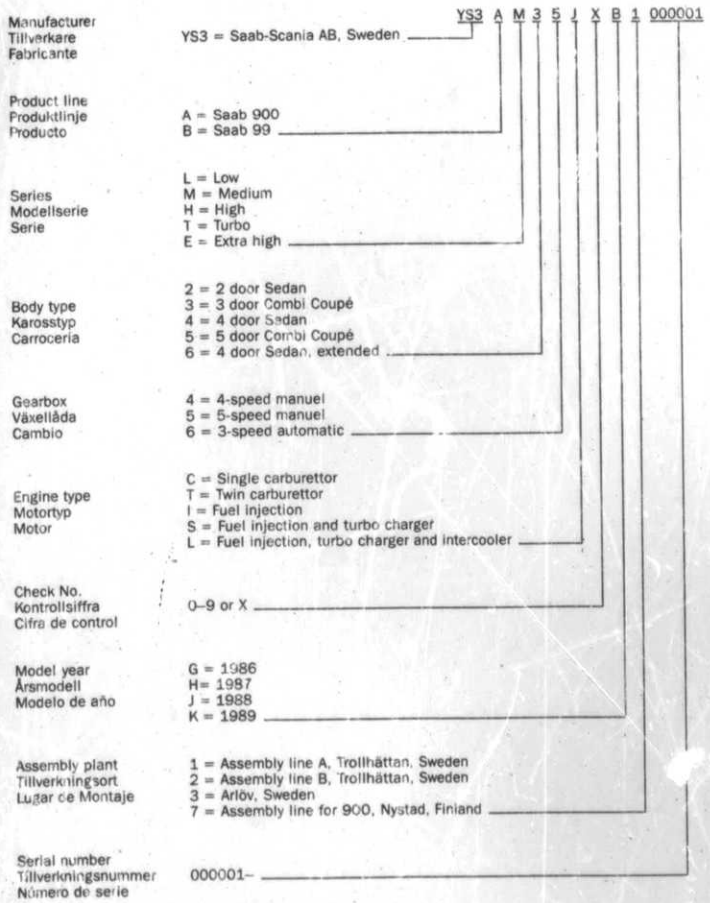




**1986**

YS3AB35JXG2000001–YS3AC45D8G2028473
YS3AD45S6G3000001–YS3AB35J6G3022054
YS3AB25J3G7000001–YS3AC46D5G7033647

**1987**

YS3AB55J3H2000001–YS3AS46D7H2025065
YS3AD35L0H3000001–YS3AS45D8H3022803
YS3AD75L0H7000001–YS3AT35L7H7038465

**1988**

YS3AB46J2J3000001–YS3AK35D7J3031007
YS3AD35L2J7000001–YS3AB55J4J7043125

**For SE 1988**


YS3AD46LXJ3040001–YS3AC35D9J3040191
YS3AB45J7J7050001–YS3AA25J4J7053333

**1989**

YS3AD35L1K3000001–YS3AS46D1K3024317
YS3AL35L2K5000001–YS3AS46D4K5000209
YS3AB46JXK7000001–YS3AD75L6K7035455

MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

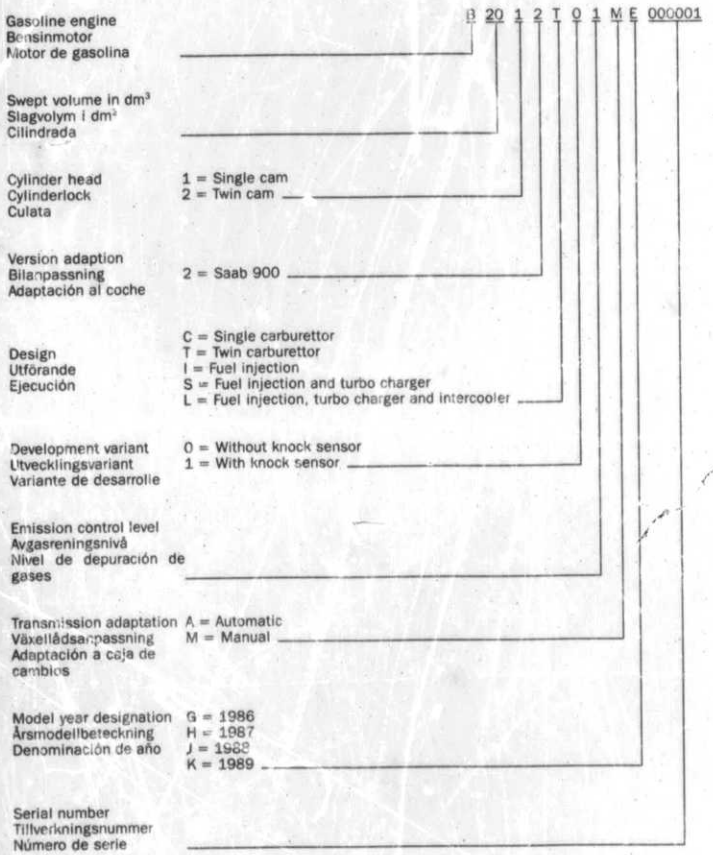




**Recommended spare parts stock-keeping level**

*The stock-keeping level is indicated by a digit between 1 and 6 in the SR/L column below.*

| | |
|---|---|
| Stock-keeping level 1 | Parts for service and maintenance |
| Stock-keeping level 2 | Parts for minor repairs |
| Stock-keeping level 3 | Parts for major repairs |
| Stock-keeping level 4 | Heavy and slow-moving parts |
| Stock-keeping level 5 | Engine assemblies, cylinder heads, transmission units, etc. |
| Stock-keeping level 6 | Extremely slow-moving parts |

*The stock-keeping level is related to the retail outlet level.*

| | |
|---|---|
| Outlet level 1 | Minor dealers, small workshops and petrol stations carrying out simple service work, mainly using parts from recommended stock-keeping level 1. |
| Outlet level 2 | Medium-size dealers and more comprehensive workshops carrying out service work and some repair work, mainly using parts from recommended stock-keeping levels 1–2. |
| Outlet level 3 | Major dealers carrying out service work and all kinds of repair work, using parts from recommended stock-keeping levels 1–3. |
| Outlet level 4 | Major distributorship (export market) and some major dealers using parts from recommended stock-keeping levels 1–4. |
| Outlet level 5 | Importers stocking parts from recommended stock-keeping levels 1–5. |
| Outlet level 6 | Saab Car division's central stores in Nyköping, Sweden. |

MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

**Rekommenderad lagerhållning av reservdelar**

*Lagerhållningsnivån anges med en siffra mellan 1 och 6 i kolumn SR/L, enligt nedan.*

| | |
|---|---|
| Lagerhållningsnivå 1 | Artiklar för service och underhåll |
| Lagerhållningsnivå 2 | Artiklar för enklare reparationer |
| Lagerhållningsnivå 3 | Artiklar för större reparationer |
| Lagerhållningsnivå 4 | Tunga artiklar och artiklar med mindre omsättning |
| Lagerhållningsnivå 5 | Kompletta motorer, cylinderlock, växellådor, etc. |
| Lagerhållningsnivå 6 | Extremt lågfrekventa artiklar |

*Lagerhållningsnivån är kopplad till återförsäljarnivån.*

| | |
|---|---|
| Återförsäljarnivå 1 | Verkstäder och bensinstationer, som utför enklare servicearbeten och som huvudsakligen använder artiklar ur lagerhållningsnivå 1. |
| Återförsäljarnivå 2 | Mellanstora åf och mera mångsidiga verkstäder, som utför servicearbeten och vissa reparationsarbeten och huvudsakligen använder artiklar av lagerhållningsnivå 1 och 2. |
| Återförsäljarnivå 3 | Stora åf, som utför servicearbeten samt alla slags reparationsarbeten och använder delar av lagerhållningsnivå 1–3. |
| Återförsäljarnivå 4 | Stora distributörer (exportmarknaderna) och vissa åf, som använder delar av lagerhållningsnivå 1–4. |
| Återförsäljarnivå 5 | Importörer som lagerhåller delar av lagerhållningsnivå 1–5. |
| Återförsäljarnivå 6 | Saabs centrallager i Nyköping. |



**Nivel de almacenaje**

*El nivel de almacenaje se indica en la columna SR/L con una cifra del 1 al 6 que representa los conceptos siguientes:*

| | |
|---|---|
| Nivel 1 | Artículos de servicio y mantenimiento |
| Nivel 2 | Artículos para reparaciones poco importantes |
| Nivel 3 | Artículos para reparaciones importantes |
| Nivel 4 | Artículos pesados y artículos de poco movimiento |
| Nivel 5 | Motores completos, culatas, cajas de cambio, etc. |
| Nivel 6 | Artículos de poco movimiento en grado extremo |

**Nivel de concesionario**

*El nivel de almacenaje y el de concesionario están en relación de la manera siguiente:*

| | |
|---|---|
| Nivel 1 | Talleres y bombas de combustible con capacidad para trabajos de reparación y de servicio sencillos. Almacén generalmente compuesto de artículos nivel 1. |
| Nivel 2 | Concesionarios de importancia media con taller mejor equipado que los precedente, con capacidad para servicio y reparaciones que requieren artículos principalmente compuestos por los de los niveles 1–2. |
| Nivel 3 | Concesionarios importantes capacitados para toda clase de reparaciones y trabajos de servicio. Almacén principalmente constituido por los artículos de los niveles 1–3. |
| Nivel 4 | Grandes distribuidores (mercado de exportación) y algunos concesionarios muy importantes cuyos almacenes se componen de artículos de los niveles 1–4. |
| Nivel 5 | Importador cuyo almacén corresponde a los niveles 1–5. |
| Nivel 6 | Almacén central en Nyköping. |

MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

# 1-B02



Engine
Motor
Motor

TABLE OF CONTENTS


| | | | |
|---|---|---|---|
| **Engine body** | | | |
| Engine suspension | | 2 : 9 | 1-B10 |
| Engine suspension, hydraulic | | 2 : 11 | 1-B12 |
| Cylinder head | | 2 : 13 | 1-B14 |
| Cylinder head B202 | | 2 : 17 | 1-B18 |
| Cylinder block | | 2 : 21 | 1-B22 |
| Short engine | | 2 : 23 | 1-B24 |
| Transmission cover, belt pulley | | 2 : 25 | 1-C02 |
| Transmission | | 2 : 27 | 1-C04 |
| Piston B201 | | 2 : 29 | 1-C06 |
| Piston B202 | | 2 : 33 | 1-C10 |
| Crankshaft, connecting rod, flywheel | | 2 : 35 | 1-C12 |
| **Lubrication system** | | | |
| Oil pump, oil filter | | 2 : 37 | 1-C14 |
| Oil pipes, etc, turbo | | 2 : 39 | 1-C16 |
| **Fuel system** | | | |
| Carburetor SOLEX | | 2 : 41 | 1-C18 |
| Carburetor PIERBURG | | 2 : 45 | 1-C22 |
| Air cleaner, carburetor engine | | 2 : 47 | 1-C24 |
| Air cleaner, injection engine B201 | | 2 : 49 | 1-D02 |
| Air cleaner B202 | | 2 : 53 | 1-D06 |
| Fuel pump, hoses, carburetor engine | | 2 : 55 | 1-D08 |
| Filler pipe, hoses, etc, | | 2 : 57 | 1-D10 |
| Fuel tank, lines and hoses, carburetor engine | | 2 : 59 | 1-D12 |
| Fuel tank, lines and hoses, etc, B201 injection engine -1988 | | 2 : 61 | 1-D14 |
| Fuel tank, lines and hoses, etc, B201 injection engine 1989- | | 2 : 67 | 1-D20 |
| Fuel tank, lines and hoses, etc, B202 | | 2 : 69 | 1-D22 |
| Fuel pump, B201I | | 2 : 75 | 1-E04 |
| Fuel pump, B202 Turbo 1986-, B20 2I -1988 | | 2 : 79 | 1-E08 |
| Fuel pump, B202I 1989- | | 2 : 81 | 1-E10 |
| Mixing regulator, B201 | | 2 : 83 | 1-E12 |
| Air mass meter, etc B202 | | 2 : 89 | 1-E18 |
| Evaporative loss control device (ELCD) | | 2 : 93 | 1-E22 |
| Enrichment device, turbo | | 2 : 95 | 1-E24 |
| **Inlet and exhaust system** | | | |
| Inlet manifold, etc, carb engine | | 2 : 97 | 1-F02 |
| Inlet manifold, etc, injection engine B201 | | 2 : 99 | 1-F04 |
| Inlet manifold, etc B202 | | 2 : 101 | 1-F06 |
| Throttle valve housing, etc, engine B201 I | | 2 : 103 | 1-F08 |
| Auxiliary air regulator, hoses, etc, engine B201 I | | 2 : 105 | 1-F10 |
| Throttle valve housing, etc, engine B201 Turbo | | 2 : 107 | 1-F12 |
| Auxiliary air regulator, hoses, etc, engine B201 Turbo | | 2 : 111 | 1-F16 |
| Throttle valve housing B202 | | 2 : 113 | 1-F18 |
| Auxiliary air, etc B202 | | 2 : 117 | 1-F22 |
| Automatic idling speed control system B202 | | 2 : 119 | 1-F24 |
| Exhaust manifold, etc, engine B201 | | 2 : 121 | 1-G02 |
| Exhaust manifold, etc, engine B201 Turbo | | 2 : 123 | 1-G04 |
| Exhaust manifold, etc, engine B202 I | | 2 : 125 | 1-G06 |
| Exhaust manifold, etc, engine B202 Turbo | | 2 : 127 | 1-G08 |
| Exhaust gas recirculation (EGR), B201, -1988 | | 2 : 129 | 1-G10 |
| Exhaust gas recirculation (EGR), B201C, 1989 | | 2 : 131 | 1-G12 |
| Exhaust gas recirculation (EGR) B202 | | 2 : 133 | 1-G14 |
| Lambda-sond system | | 2 : 135 | 1-G16 |
| Mufflers, exhaust pipe, engine B201 C and I | | 2 : 137 | 1-G18 |
| Mufflers, exhaust pipe, engine B201 I , NOT US, with catalytic converter | | 2 : 139 | 1-G20 |
| Mufflers, exhaust pipe, engine B201 I , US, with catalytic converter | | 2 : 143 | 1-G24 |
| Mufflers, exhaust pipe, engine B202 I | | 2 : 145 | 1-H02 |
| Mufflers, exhaust pipe, engine B202 I with catalytic converter | | 2 : 147 | 1-H04 |
| Mufflers, exhaust pipe, engine B201 and B202 Turbo | | 2 : 149 | 1-H06 |
| Mufflers, exhaust pipe,engine B201 and B202 Turbo with catalytic converter | | 2 : 151 | 1-H08 |




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-B03


**Cooling system**
- Radiator, hoses, etc — 2 : 153 — 1-H10
- Fan, etc — 2 : 157 — 1-H14
- Water hoses, etc B202 — 2 : 161 — 1-H18
- Air oil cooler, engine, automatic transmission — 2 : 163 — 1-H20
- Thermostat, oil hoses, etc, B202, automatic transmission — 2 : 167 — 1-H24
- Fluid oil cooler, engine, automatic transmission — 2 : 169 — 1-I02
- Charge cooler, etc — 2 : 171 — 1-I04
- Coolent pump — 2 : 173 — 1-I06
- Thermostat B201 — 2 : 175 — 1-I08
- Thermostat, water tube B202 — 2 : 177 — 1-I10

**Engine control**
- Accelerator control — 2 : 179 — 1-I12

**Supercharging system**
- Turbocharger, inlet tube, pressure tube, etc — 2 : 181 — 1-I14
- Turbocharger, engine B202 — 2 : 183 — 1-I16
- APC — 2 : 185 — 1-I18

**Complete sets**
- Engine — 2 : 187 — 1-I20




# 1-B04

INNEHÅLLSFÖRTECKNING


**Motorkropp**
- Motorupphängning — 2 : 9 — 1-B10
- Motorupphängning, hydraulisk — 2 : 11 — 1-B12
- Cylinderhuvud — 2 : 13 — 1-B14
- Cylinderhuvud B202 — 2 : 17 — 1-B18
- Cylinderblock — 2 : 21 — 1-B22
- Grundmotor — 2 : 23 — 1-B24
- Transmissionskåpa, remskiva — 2 : 25 — 1-C02
- Transmission — 2 : 27 — 1-C04
- Kolvar B201 — 2 : 29 — 1-C06
- Kolvar B202 — 2 : 33 — 1-C10
- Vevaxel, vevstake, svänghjul — 2 : 35 — 1-C12

**Smörjsystem**
- Oljepump, oljefilter — 2 : 37 — 1-C14
- Oljerör, etc, Turbo — 2 : 39 — 1-C16

**Bränslesystem**
- Förgasare SOLEX — 2 : 41 — 1-C18
- Förgasare PIERBURG — 2 : 45 — 1-C22
- Luftrenare, förgasarmotor — 2 : 47 — 1-C24
- Luftrenare, insprutningsmotor B201 — 2 : 49 — 1-D02
- Luftrenare, etc B202 — 2 : 53 — 1-D06
- Bränslepump, slangar, etc, förgasarmotor — 2 : 55 — 1-D08
- Påfyllningsrör, slangar, etc, — 2 : 57 — 1-D10
- Bränsletank, bränsleledningar, förgasarmotor — 2 : 59 — 1-D12
- Bränsletank, bränsleledningar, etc, B201 insprutningsmotor -1988 — 2 : 61 — 1-D14
- Bränsletank, bränsleledningar, etc, B201 insprutningsmotor 1989- — 2 : 67 — 1-D20
- Bränsletank, bränsleledningar, etc, B202 — 2 : 69 — 1-D22
- Bränslepump, B201I — 2 : 75 — 1-E04
- Bränslepump, B202 Turbo 1986-, B202I -1988 — 2 : 79 — 1-E08
- Bränslepump, B202I 1989- — 2 : 81 — 1-E10
- Blandningsregulator, B201 — 2 : 83 — 1-E12
- Luftmassamätare, etc B202 — 2 : 89 — 1-E18
- Slutet bränslesystem (ELCD) — 2 : 93 — 1-E22
- Fullastuppriktning, Turbo — 2 : 95 — 1-E24

**Inlopps- och avgassystem**
- Inloppsrör etc, förgasarmotor — 2 : 97 — 1-F02
- Inloppsrör etc, insprutningsmotor B201 — 2 : 99 — 1-F04
- Insugningsrör, etc B202 — 2 : 101 — 1-F06
- Spjällhus, etc, motor B201 I — 2 : 103 — 1-F08
- Tillsatsluftslid, slangar, etc, motor B201 I — 2 : 105 — 1-F10
- Spjällhus, etc, motor B201 Turbo — 2 : 107 — 1-F12
- Tillsatsluftslid, slangar, etc, motor B201 Turbo — 2 : 111 — 1-F16
- Spjällhus B202 — 2 : 113 — 1-F18
- Tillsatsluftslid, etc B202 — 2 : 117 — 1-F22
- Automatisk tomgångsreglering B202 — 2 : 119 — 1-F24
- Avgassamlare, etc, motor B201 — 2 : 121 — 1-G02
- Avgassamlare, etc, motor B201 Turbo — 2 : 123 — 1-G04
- Avgassamlare, etc, motor B202 I — 2 : 125 — 1-G06
- Avgassamlare, etc, motor B202 Turbo — 2 : 127 — 1-G08
- Avgasrecirculation (EGR), B201, -1988 — 2 : 129 — 1-G10
- Avgasrecirculation (EGR), B201C, 1989 — 2 : 131 — 1-G12
- Avgasrecirkulation (EGR) B202 — 2 : 133 — 1-G14
- Lambda-sond system — 2 : 135 — 1-G16
- Ljuddämpare, avgasrör, motor B201 C och I — 2 : 137 — 1-G18
- Ljuddämpare, avgasrör, motor B201 I med katalytisk reaktor, EJ US — 2 : 139 — 1-G20
- Ljuddämpare, avgasrör, motor B201 I med katalytisk reaktor, US — 2 : 143 — 1-G24
- Ljuddämpare, avgasrör, motor B202 I — 2 : 145 — 1-H02
- Ljuddämpare, avgasrör, motor B202 I med katalytisk reaktor — 2 : 147 — 1-H04
- Ljuddämpare, avgasrör, motor B201 och B202 Turbo — 2 : 149 — 1-H06
- Ljuddämpare, avgasrör, motor B201 och B202 Turbo med katalytisk reaktor — 2 : 151 — 1-H08




MASTER INDEX


- 0 General — 1-A02
- 2 Engine — 1-B02
- 3A Electrical general — 2-A02
- 3B Electrical, contact housing — 3-A02
- 4 Transmission — 3-H02
- 5 Brakes — 4-A02
- 6 Front assembly, Steering — 4-C02
- 7 Suspension, Wheels — 4-E02
- 8A Body, external — 5-A02
- 8B Body, internal — 6-A02
- 8C Body, heating and ventilation — 7-A02
- 9 Tools, labels — 7-D02
- 10 Numerical register — 7-E02


2 GROUP INDEX


- Engine body — 1-B10
- Lubrication system — 1-C14
- Fuel system — 1-C18
- Inlet and exhaust system — 1-F02
- Cooling system — 1-H10
- Engine control — 1-I12
- Supercharging system — 1-I14
- Complete sets — 1-I20

# 1-B05


**Kylsystem**
- Kylare, slangar, etc ... 2 : 153 1-H10
- Fläkt, etc ... 2 : 157 1-H14
- Vattenslangar, etc B202 ... 2 : 161 1-H18
- Luftoljekylare, motor, automatväxellåda ... 2 : 163 1-H20
- Termostat, oljeslangar, etc B202 automatväxellåda ... 2 : 167 1-H24
- Vätskeoljekylare, motor, automatväxellåda ... 2 : 169 1-I02
- Laddluftkylare, etc ... 2 : 171 1-I04
- Kylvätskepump ... 2 : 173 1-I06
- Termostat B201 ... 2 : 175 1-I08
- Termostat, vattenrör B202 ... 2 : 177 1-I10

**Motorreglage**
- Gasreglage ... 2 : 179 1-I12

**Överladdningssystem**
- Turbokompressor, inloppsrör, tryckrör, etc ... 2 : 181 1-I14
- Turbokompressor B202 ... 2 : 183 1-I16
- APC ... 2 : 185 1-I18

Satser
- Motor ... 2 : 187 1-I20






# 1-B06

SUMARIO


**Cuerpo del motor**
- Soportes del motor ... 2 : 9 1-B10
- Soportes del motor, hidraulico ... 2 : 11 1-B12
- Culata ... 2 : 13 1-B14
- Culata B202 ... 2 : 17 1-B18
- Bloque de cilindros ... 2 : 21 1-B22
- Motor de base ... 2 : 23 1-B24
- Tapa de distribucion, polea de correa ... 2 : 25 1-C02
- Distribucion ... 2 : 27 1-C04
- Pistones B201 ... 2 : 29 1-C06
- Pistones B202 ... 2 : 33 1-C10
- Ciguenal, bielas, volante ... 2 : 35 1-C12

**Sistema de engrase**
- Bomba de aceite, filtro de aceite ... 2 : 37 1-C14
- Tubo de aceite, etc, Turbo ... 2 : 39 1-C16

**Sistema de combustible**
- Carburador SOLEX ... 2 : 41 1-C18
- Carburador PIERBURG ... 2 : 45 1-C22
- Depurador de aire, motor de carburador ... 2 : 47 1-C24
- Depurador de aire, motor de inyeccion B201 ... 2 : 49 1-D02
- Depurador de aire B202 ... 2 : 53 1-D06
- Bomba de combustible, mangueras, etc ... 2 : 55 1-D08
- Tubo de llenado, mangueras, etc, ... 2 : 57 1-D10
- Desposito de combustible, conductos de combustible, motor de carburador ... 2 : 59 1-D12
- Desposito de combustible, conductos de cobustible, B201 I -1988 ... 2 : 61 1-D14
- Desposito de combustible, conductos de cobustible, B201 I 1989- ... 2 : 67 1-D20
- Desposito de combustible, conductos de cobustible, B202 ... 2 : 69 1-D22
- Bomba de combustible, B201I ... 2 : 75 1-E04
- Bomba de combustible B202 Turbo 1986-, B202I -1988 ... 2 : 79 1-E08
- Bomba de combustible B202I 1989- ... 2 : 81 1-E10
- Regulador de mezcla, B201 ... 2 : 83 1-E12
- Medidor de flujo de air B202 ... 2 : 89 1-E18
- Sistema cerrado de combustible (ELCD) ... 2 : 93 1-E22
- Combustible suplementario de plena carga, Turbo ... 2 : 95 1-E24

**Sistema de admision y de escape**
- Colector de admision, etc, motor de carburador ... 2 : 97 1-F02
- Colector de admision, etc, motor de inyeccion B201 ... 2 : 99 1-F04
- Colector de admision B202 ... 2 : 101 1-F06
- Caja de mariposa, etc, motor B201 I ... 2 : 103 1-F08
- Regulador de aire adicional, mangueras, etc, motor B201 I ... 2 : 105 1-F10
- Caja de mariposa, etc, motor B201 Turbo ... 2 : 107 1-F12
- Regulador de aire adicional, mangueras, etc, motor B201 Turbo ... 2 : 111 1-F16
- Caja de maripoa B202 ... 2 : 113 1-F18
- Teguiador de aire adicional B202 ... 2 : 117 1-F22
- Regulacion automatica de ralenti B202 ... 2 : 119 1-F24
- Colector de escape, etc, motor B201 ... 2 : 121 1-G02
- Colector de escape, etc, motor B201 Turbo ... 2 : 123 1-G04
- Colector de escape, etc, motor B202 I ... 2 : 125 1-G06
- Colector de escape, etc, motor B202 Turbo ... 2 : 127 1-G08
- Recirculation de gases de escape (EGR), B201, -1988 ... 2 : 129 1-G10
- Recirculation de gases de escape (EGR), B201C, 1989 ... 2 : 131 1-G12
- Recirculation de gases de escape (egr) B202 ... 2 : 133 1-G14
- Sistema de sonda lambda ... 2 : 135 1-G16
- Silencioso, tubo de escape, etc, motor B201 C y I ... 2 : 137 1-G18
- Silencioso, tubo de escape, motor B201 I reactor catalituco, NO US ... 2 : 139 1-G20
- Silencioso, tubo de escape, motor B201 I reactor catalituco, US ... 2 : 143 1-G24
- Silencioso, tubo de escape, motor B202 I ... 2 : 145 1-H02
- Silencioso, tubo de escape, motor B202 I reactor catalituco ... 2 : 147 1-H04
- Silencioso, tubo de escape, motor B201 y B202 Turbo ... 2 : 149 1-H06
- Silencioso, tubo de escape, motor B201 y B202 Turbo reactor catalituco ... 2 : 151 1-H08




## MASTER INDEX


0 General 1-A02
2 Engine 1-B02
3A Electrical general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 7-A02
9 Tools, labels 7-D02
10 Numerical register 7-E02


## 2 GROUP INDEX


Engine body 1-B10
Lubrication system 1-C14
Fuel system 1-C18
Inlet and exhaust system 1-F02
Cooling system 1-H10
Engine control 1-I12
Supercharging system 1-I14
Complete sets 1-I20

# 1-B07


0042
1440 **Sistema de refrigeracion**
1450 Radiador, mangueras, etc ..... 2 : 153 1-H10
1460 Ventilador, etc ..... 2 : 157 1-H14
1470 Mangueras de agua B202 ..... 2 : 161 1-H18
1480 Radiador de aceite a aire, motor, caja de cambios automatica ..... 2 : 163 1-H20
1490 Termostato, mangueras aceite, automatica B202 ..... 2 : 167 1-H24
1500 Radiador de aceite a agua, motor, caja de cambios automatica ..... 2 : 169 1-I02
1510 Radiador de aire de alimentacion ..... 2 : 171 1-I04
1520 Bomba de agua ..... 2 : 173 1-I06
1530 Termostato B201 ..... 2 : 175 1-I08
1540 Termostato, tubo de agua B202 ..... 2 : 177 1-I10
1550 **Mandos del motor**
1560 Mando de acelerador ..... 2 : 179 1-I12
1570 **Sistema de sobrealimentacion**
1580 Turbocompresor, tubo de admision, tubo de precion, etc ..... 2 : 181 1-I14
1590 Turbocompresor, motor B202 ..... 2 : 183 1-I16
1600 APC ..... 2 : 185 1-I18
1610 **Juegos completos**
1620 Motor ..... 2 : 187 1-I20





MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

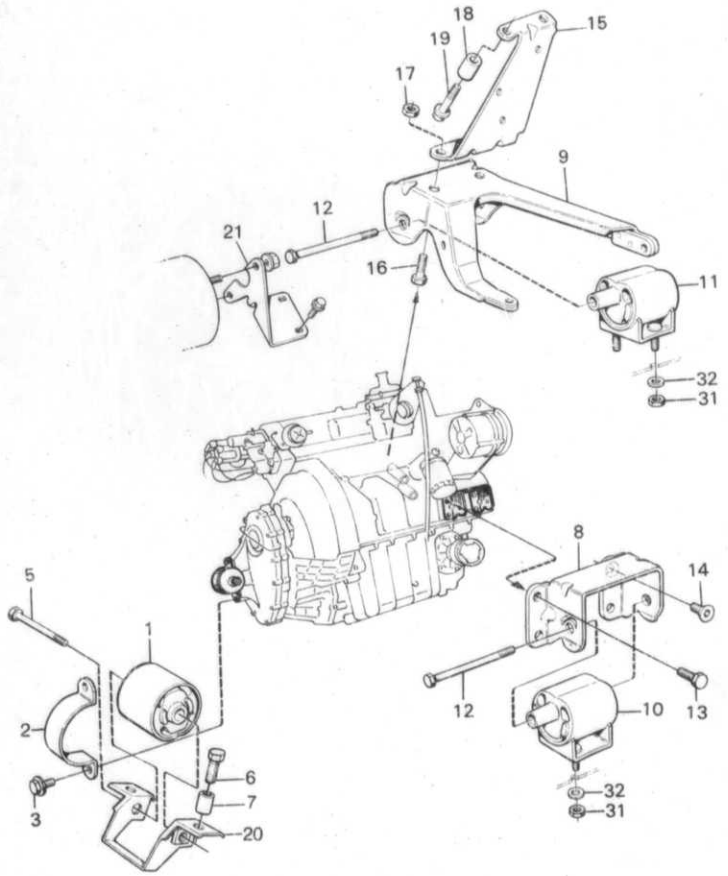


R 7380–900

| 0100 | Pos. | Part No/Art nr | K S | Notes/Anmärkningar | City/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 83 39 608 | | | 1 | Engine pad | Motorkudde | 3 |
| 0020 | 2 | 83 39 632 | | | 1 | Cap | Överfall | 6 |
| 0030 | 3 | 79 72 342 | | | 2 | Screw | Skruv | 5 |
| 0040 | 5 | 80 98 394 | | | 1 | Screw | Skruv | 5 |
| 0050 | 6 | 79 77 242 | | | 2 | Screw | Skruv | 5 |
| 0060 | 7 | 75 44 265 | | | 2 | Bushing | Bussning | 3 |
| 0070 | 8 | 93 23 759 | | LH | 1 | Engine anchorage | Motorfäste | |
| 0080 | 9 | 93 24 930 | | RH | 1 | Engine anchorage | Motorfäste | |
| 0090 | 9 | 93 67 988 | | RH, B202I | 1 | Engine anchorage | Motorfäste | 4 |
| 0100 | 10 | 93 69 307 | | LH | 1 | Engine pad | Motorkudde | 3 |
| 0110 | 10 | 75 43 408 | | LH, B202I | 1 | Engine pad | Motorkudde | |
| 0120 | 11 | 93 69 315 | | RH | 1 | Engine pad | Motorkudde | 3 |
| 0130 | 11 | 75 43 416 | | RH, B202I | 1 | Engine pad | Motorkudde | 3 |
| 0140 | 12 | 75 43 432 | | | 2 | Screw | Skruv | 5 |
| 0150 | 13 | 80 82 935 | | | 2 | Screw | Skruv | 5 |
| 0160 | 14 | 93 16 415 | | | 2 | Screw | Skruv | 5 |
| 0170 | 15 | 93 23 742 | | | 1 | Engine anchorage | Motorfäste | 5 |
| 0180 | 15 | 93 67 996 | | B202I | 1 | Engine anchorage | Motorfäste | 4 |
| 0190 | 16 | *80 83 123* | | -1988 NLS - USE 7379131 | 2 | Screw | Skruv | 5 |
| 0200 | 16 | 79 79 131 | | 500),1989- | 2 | Screw | Skruv | 5 |
| 0210 | 17 | *80 29 779* | | -1987 NLS - USE 8151243 | 2 | Nut | Mutter | 5 |
| 0220 | 17 | 81 51 243 | | 1988- | 2 | Nut | Mutter | 5 |
| 0230 | 18 | 83 56 859 | | | 2 | Sleeve | Hylsa | 6 |
| 0240 | 19 | 80 83 941 | | | 2 | Screw | Skruv | 5 |
| 0250 | 20 | *75 44 307* | | 118) NLS - USE 7549579 | 1 | Bracket | Fäste | 6 |
| 0260 | 20 | 75 49 579 | | 119) | 1 | Bracket | Fäste | 6 |
| 0270 | 21 | *75 13 823* | | 8) NLS - USE 7532161 | 1 | Stay | Stag | 6 |
| 0280 | 21 | 75 32 161 | | 9) | 1 | Stay | Stag | 6 |
| 0290 | 31 | 80 74 106 | | -1987 | 4 | Nut | Mutter | 5 |
| 0300 | 31 | 81 51 235 | | 1988- | 4 | Nut | Mutter | E |
| 0310 | 32 | 80 29 985 | | | 4 | Washer | Bricka | 5 |

8. Ch. -G2001761, -G3000801, -G7003780.
9. Ch. G2001762-, G3000802-, G7003781-.
118. Ch. -J3026523, -J7031707
119. Ch. J3026524-, J7031708-
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

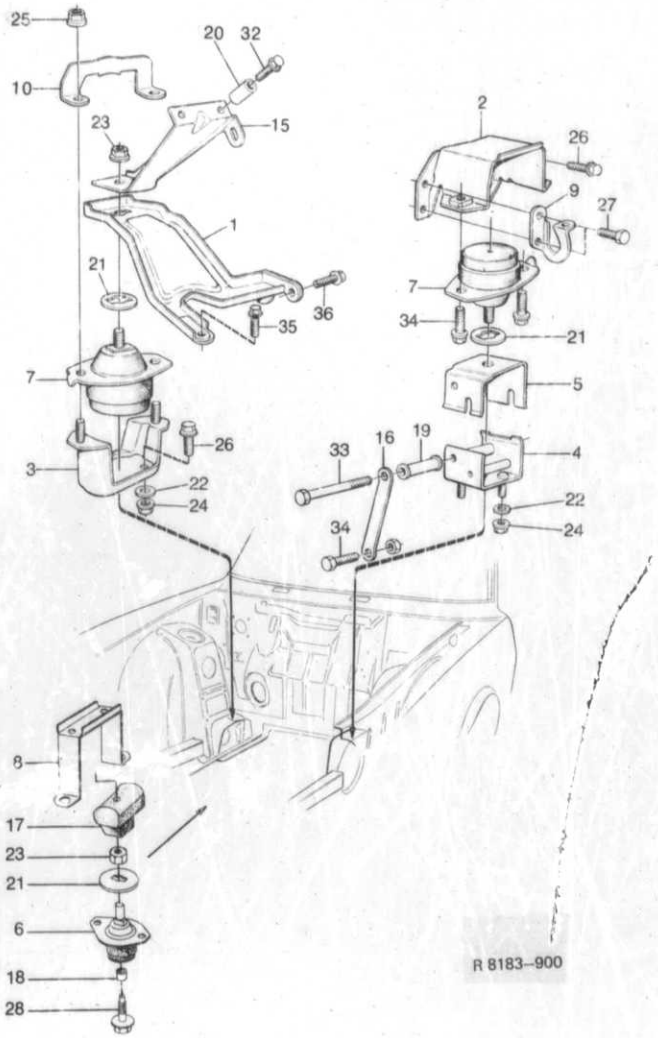


| 0120 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 47 284 | | RH, B201 | 1 | Bracket | Konsol | 4 |
| 0020 | 1 | 75 44 000 | | 47), RH, B20[illegible] | 1 | Bracket | Konsol | 4 |
| 0030 | 1 | 75 47 284 | | 48), RH, B202 | 1 | Bracket | Konsol | 4 |
| 0040 | 2 | 75 43 978 | | LH | 1 | Bracket | Konsol | 4 |
| 0050 | 3 | 75 44 026 | | RH | 1 | Bracket | Fäste | 5 |
| 0060 | 4 | 75 43 994 | | LH | 1 | Bracket | Fäste | 5 |
| 0070 | 5 | 75 43 986 | | | 1 | Attaching brace | Fästbygel | 6 |
| 0080 | 6 | 75 45 668 | | | 1 | Housing | Housing | 3 |
| 0090 | 7 | 75 45 650 | | | 2 | Housing | Isolator | 3 |
| 0100 | 8 | 75 44 042 | | | 1 | Limiter | Begränsare | 5 |
| 0110 | 9 | 75 44 901 | | US, CA | 1 | Limiter | Begränsare | 5 |
| 0120 | 10 | 75 44 034 | | US, CA | 1 | Limiter | Begränsare | 5 |
| 0130 | 15 | 75 44 992 | | B201 | 1 | Stay | Stag | 4 |
| 0140 | 15 | 75 44 018 | | B202 | 1 | Stay | Stag | 4 |
| 0150 | 16 | 75 44 893 | | US, CA | 1 | Stay | Stag | 5 |
| 0160 | 17 | 75 44 083 | | | 1 | Absorber | Dämpare | |
| 0170 | 18 | 75 44 265 | | | 2 | Bushing | Bussning | 3 |
| 0180 | 19 | 75 44 273 | | US, CA | 1 | Spacer | Distans | 3 |
| 0190 | 20 | 83 56 859 | | | 2 | Sleeve | Hylsa | 6 |
| 0200 | 21 | 75 47 656 | | | 4 | Washer | Bricka | 5 |
| 0210 | 22 | 80 29 985 | | | 4 | Washer | Bricka | 5 |
| 0220 | 23 | 79 71 765 | | | 3 | Nut | Mutter | 5 |
| 0230 | 24 | 80 74 106 | | -1987 | 4 | Nut | Mutter | 5 |
| 0240 | 24 | 81 51 235 | | 1988- | 4 | Nut | Mutter | 5 |
| 0250 | 25 | 79 69 306 | | | 2 | Lock nut | Låsmutter | 5 |
| 0260 | 26 | 79 67 938 | | | 4 | Screw | Skruv | 5 |
| 0270 | 26 | 79 67 938 | | US, CA | 2 | Screw | Skruv | 5 |
| 0280 | 27 | 79 73 779 | | US, CA | 2 | Screw | Skruv | 5 |
| 0290 | 28 | 79 77 242 | | | 2 | Screw | Skruv | 5 |
| 0300 | 32 | 80 83 941 | | | 2 | Screw | Skruv | 5 |
| 0310 | 33 | 79 77 473 | | US, CA | 1 | Screw | Skruv | 5 |
| 0320 | 33 | 79 77 267 | | | 1 | Screw | Skruv | 5 |
| 0330 | 34 | 79 70 353 | | US, CA | 2 | Screw | Skruv | 5 |
| 0340 | 34 | 79 70 353 | | | 2 | Screw | Skruv | 5 |
| 0350 | 35 | 93 46 370 | | | 1 | Screw | Skruv | 5 |
| 0360 | 36 | 83 56 917 | | | 1 | Screw | Skruv | 5 |
| 0370 | 37 | 79 72 748 | | US, CA | 1 | Screw | Skruv | 5 |

47. Ch. -G2028473, -G3022054, -H7000031.
48. Ch. H2000001-, H3000001-, H7000032-.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

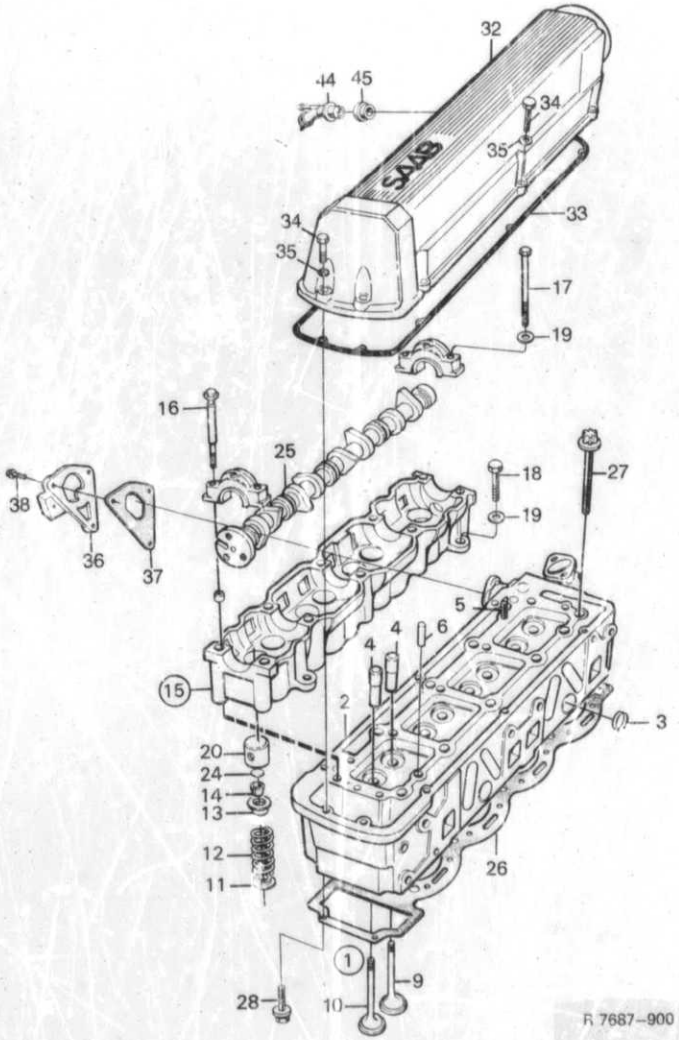


| 0150 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *75 21 180* | | 700),C NLS - USE 7896905 | 1 | Cylinder head | Cylinderlock | 6 |
| 0020 | | | | | | | | |
| 0030 | 1 | 75 22 360 | | 95,700), (9353830) | 1 | Cylinder head | Cylinderlock | 6 |
| 0040 | | | | | | | | |
| 0050 | 2 | 75 22 741 | | I | 1 | .Cylinder head | .Cylinderlock | 5 |
| 0060 | 2 | 75 21 198 | | C | 1 | .Cylinder head | .Cylinderlock | 5 |
| 0070 | 3 | 81 23 218 | | -1987 | 2 | ..Sealing washer | ..Tätningsbricka | 3 |
| 0080 | 3 | 75 88 320 | | 1988- | 2 | ..Sealing washer | ..Tätningsbricka | 3 |
| 0090 | 4 | 83 50 944 | | STD | 8 | ..Valve guide | ..Ventilstyrning | 2 |
| 0100 | 4 | 75 87 363 | | 202), -1988 | 8 | ..Valve guide | ..Ventilstyrning | 2 |
| 0110 | 4 | 91 19 934 | | 202,500), 1989- | 8 | ..Valve guide | ..Ventilstyrning | 2 |
| 0120 | 5 | 80 34 761 | | | 1 | ..Pin | ..Pinne | 5 |
| 0130 | 6 | 80 34 662 | | | 1 | ..Locating pin | ..Styrpinne | 3 |
| 0140 | 9 | 83 46 884 | | 203) | 4 | .Inlet valve | .Inloppsventil | 3 |
| 0150 | 9 | 83 64 390 | | 203), TURBO | 4 | .Inlet valve | .Inloppsventil | 3 |
| 0160 | 10 | 83 62 295 | | 204), C | 4 | .Valve | .Ventil | 2 |
| 0170 | 10 | 93 07 356 | | 95,204) | 4 | .Valve | .Ventil | 2 |
| 0180 | 11 | 83 46 900 | | | 8 | .Washer | .Bricka | 4 |
| 0190 | 12 | 93 51 800 | | | 8 | .Valve spring | .Ventilfjäder | 3 |
| 0200 | 13 | 83 46 926 | | | 8 | .Washer | .Bricka | 4 |
| 0210 | 14 | 83 47 262 | | | 16 | .Valve cone | .Knaster | 2 |
| 0220 | 15 | 93 08 453 | | | 1 | Camshaft bridge | Kamaxelbrygga | 5 |
| 0230 | 16 | 83 56 396 | | | 2 | .Screw | .Skruv | 5 |
| 0240 | 17 | 83 48 401 | | | 8 | .Screw | .Skruv | 5 |
| 0250 | 18 | 80 83 933 | | -1988 | 2 | .Screw | .Skruv | 5 |
| 0260 | 18 | *80 82 976* | | 500),1989- NLS - USE 8083933 | 2 | .Screw | .Skruv | 5 |
| 0270 | 19 | 80 29 985 | | | 10 | .Washer | .Bricka | 5 |
| 0280 | 20 | 83 46 942 | | | 8 | Tappet | Ventillyftare | |
| 0290 | 24 | 83 08 215 | | 1,78 MM | X | Adjusting washer | Justerbricka | 2 |
| 0300 | 24 | 83 08 223 | | 1,83 MM | X | Adjusting washer | Justerbricka | 2 |
| 0310 | 24 | 83 08 231 | | 1,88 MM | X | Adjusting washer | Justerbricka | 2 |
| 0320 | 24 | 83 08 249 | | 1,93 MM | X | Adjusting washer | Justerbricka | 2 |
| 0330 | 24 | 83 08 256 | | 1,98 MM | X | Adjusting washer | Justerbricka | 2 |
| 0340 | 24 | 83 08 264 | | 2,03 MM | X | Adjusting washer | Justerbricka | 2 |
| 0350 | 24 | 83 08 272 | | 2,08 MM | X | Adjusting washer | Justerbricka | 2 |
| 0360 | 24 | 83 08 280 | | 2,13 MM | X | Adjusting washer | Justerbricka | 2 |
| 0370 | 24 | 83 08 298 | | 2,18 MM | X | Adjusting washer | Justerbricka | 2 |
| 0380 | 24 | 83 08 306 | | 2,24 MM | X | Adjusting washer | Justerbricka | 2 |
| 0390 | 24 | 75 24 275 | | 2,27 MM | X | Adjusting washer | Justerbricka | 2 |
| 0400 | 24 | 75 24 291 | | 2,29 MM | X | Adjusting washer | Justerbricka | 2 |
| 0410 | 24 | 75 24 317 | | 2,31 MM | X | Adjusting washer | Justerbricka | 2 |
| 0420 | 24 | 75 24 333 | | 2,33 MM | X | Adjusting washer | Justerbricka | 2 |
| 0430 | 24 | 75 24 358 | | 2,35 MM | X | Adjusting washer | Justerbricka | 2 |
| 0440 | 24 | 75 24 374 | | 2,37 MM | X | Adjusting washer | Justerbricka | 2 |
| 0450 | 24 | 75 24 390 | | 2,39 MM | X | Adjusting washer | Justerbricka | 2 |
| 0460 | 24 | 75 24 416 | | 2,41 MM | X | Adjusting washer | Justerbricka | 2 |
| 0470 | 24 | 75 24 432 | | 2,43 MM | X | Adjusting washer | Justerbricka | 2 |
| 0480 | 24 | 75 24 457 | | 2,45 MM | X | Adjusting washer | Justerbricka | 2 |
| 0490 | 24 | 75 24 473 | | 2,47 MM | X | Adjusting washer | Justerbricka | 2 |
| 0500 | 24 | 75 24 499 | | 2,49 MM | X | Adjusting washer | Justerbricka | 2 |
| 0510 | 24 | 75 24 515 | | 2,51 MM | X | Adjusting washer | Justerbricka | 2 |
| 0520 | 24 | 75 24 531 | | 2,53 MM | X | Adjusting washer | Justerbricka | 2 |
| 0530 | 24 | 75 24 556 | | 2,55 MM | X | Adjusting washer | Justerbricka | 2 |
| 0540 | 24 | 75 24 572 | | 2,57 MM | X | Adjusting washer | Justerbricka | 2 |
| 0550 | 24 | 75 24 598 | | 2,59 MM | X | Adjusting washer | Justerbricka | 2 |

95. Scraping of Sodium-filled exhaust valves, see section 214 Service Manual. Skrotning av sodium-fyllda avgasventiler, se avsnitt 214 i Verkstadshandbok.
202. Oversize Överdimension
203. Intake Inlopp
204. Exhaust Avgas
500. Also valid for SE 1988B. Gäller även för SE 1988B.
700. Also available as exchange unit. Finns även som utbytesenhet.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

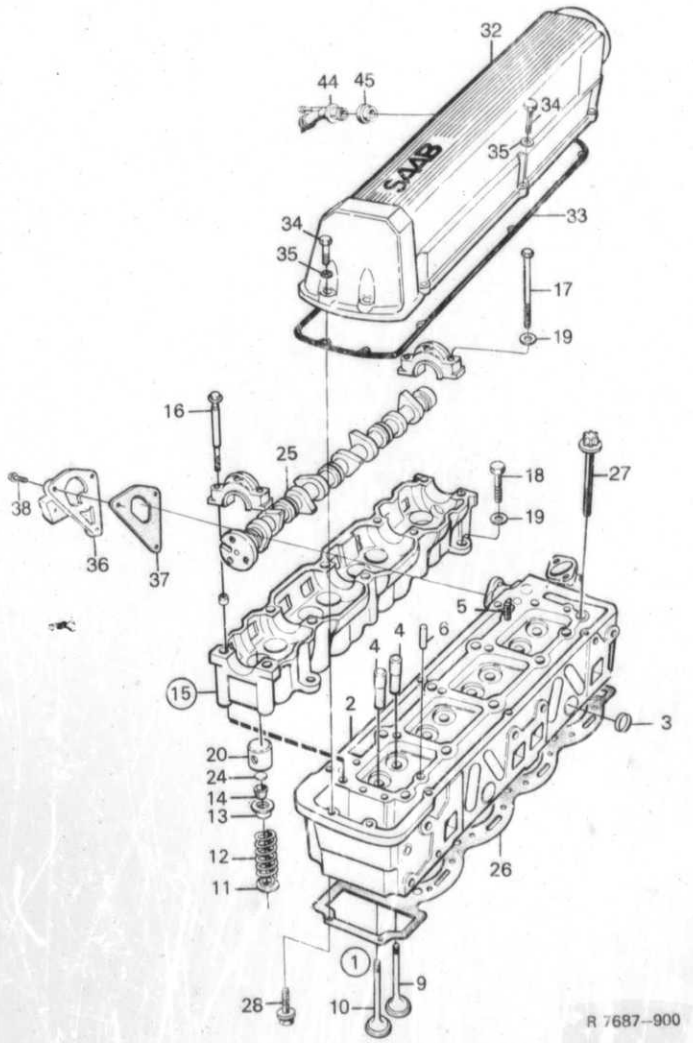


| 0150 | Pos | Part No/Art nr | K. S. | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S. L. |
|---|---|---|---|---|---|---|---|---|
| 0560 | 24 | 75 24 614 | | 2,61 MM | X | Adjusting washer | Justerbricka | 2 |
| 0570 | 24 | 75 24 630 | | 2,63 MM | X | Adjusting washer | Justerbricka | 2 |
| 0580 | 24 | 75 24 655 | | 2,65 MM | X | Adjusting washer | Justerbricka | 2 |
| 0590 | 24 | 75 24 671 | | 2,67 MM | X | Adjusting washer | Justerbricka | 2 |
| 0600 | 24 | 75 24 697 | | 2,69 MM | X | Adjusting washer | Justerbricka | 2 |
| 0610 | 24 | 75 24 713 | | 2,71 MM | X | Adjusting washer | Justerbricka | 2 |
| 0620 | 24 | 75 24 739 | | 2,73 MM | X | Adjusting washer | Justerbricka | 2 |
| 0630 | 24 | 75 24 754 | | 2,75 MM | X | Adjusting washer | Justerbricka | 2 |
| 0640 | 24 | 75 24 770 | | 2,77 MM | X | Adjusting washer | Justerbricka | 2 |
| 0650 | 24 | 75 24 796 | | 2,79 MM | X | Adjusting washer | Justerbricka | 2 |
| 0660 | 24 | 75 24 812 | | 2,81 MM | X | Adjusting washer | Justerbricka | 2 |
| 0670 | 24 | 75 24 838 | | 2,83 MM | X | Adjusting washer | Justerbricka | 2 |
| 0680 | 24 | 75 24 853 | | 2,85 MM | X | Adjusting washer | Justerbricka | 2 |
| 0690 | 25 | *93 54 705* | | 1986 NLS - USE 7563141 | 1 | Camshaft | Kamaxel | 5 |
| 0700 | 25 | 75 63 141 | | 1987- | 1 | Camshaft | Kamaxel | 5 |
| 0710 | 26 | *75 05 217* | | 1986 NLS - USE 7585037 | 1 | Gasket | Packning | |
| 0720 | 26 | 75 85 037 | | 1987- | 1 | Gasket | Packning | 2 |
| 0730 | 26 | *75 21 859* | | 1,7 MM NLS - USE 7856594 | 1 | Gasket | Packning | 2 |
| 0740 | 27 | 75 18 343 | | | 10 | Screw | Skruv | 5 |
| 0750 | 28 | 81 25 189 | | | 2 | Screw | Skruv | 5 |
| 0760 | 32 | 93 58 045 | | 83) | 1 | Valve cover | Ventilkåpa | 5 |
| 0770 | 32 | 74 86 780 | | 84,111) | 1 | Valve cover | Ventilkåpa | 5 |
| 0780 | 33 | 93 55 991 | | | 1 | Gasket | Packning | 1 |
| 0790 | 34 | 80 97 941 | | | 8 | Screw | Skruv | 5 |
| 0800 | 35 | 80 29 951 | | | 8 | Washer | Bricka | 5 |
| 0810 | 36 | 93 08 693 | | | 1 | Cover | Lock | 4 |
| 0820 | 37 | *93 06 721* | | 1986 NLS - USE 7566458 | 1 | Gasket | Packning | 2 |
| 0830 | 37 | 75 66 458 | | 1987- | 1 | Gasket | Packning | 2 |
| 0840 | 38 | 81 25 189 | | | 3 | Screw | Skruv | 5 |
| 0850 | 44 | 83 60 240 | | | 1 | Nipple | Nippel | 5 |
| 0860 | 44 | 75 17 048 | | 1987 , TURBO | 1 | Nipple | Nippel | 5 |
| 0870 | 45 | *83 60 257* | | 1986 NLS - USE 7515190 | 1 | Bushing | Bussning | 5 |
| 0880 | 45 | 75 15 190 | | 1987- | 1 | Bushing | Bussning | 5 |
| 0890 | | | | | | | | |
| 0900 | | 93 37 213 | | 206), C | X | Gasket kit | Packningsats | 3 |
| 0910 | | | | See page 2-187, 1-I20 | | | | |
| 0920 | | 93 37 221 | | 206), I | X | Gasket kit | Packningsats | 3 |
| 0930 | | | | See page 2-187, 1-I20 | | | | |
| 0940 | | 93 37 239 | | C | X | Gasket kit | Sotningssats | 2 |
| 0950 | | | | See page 2-187, 1-I20 | | | | |
| 0960 | | 93 37 247 | | I | X | Gasket kit | Sotningssats | |
| 0970 | | | | See page 2-187, 1-I20 | | | | |
| 0980 | | 93 37 254 | | TURBO | X | Gasket kit | Sotningssats | 2 |
| 0990 | | | | See page 2-187, 1-I20 | | | | |
| 1000 | | 88 17 728 | | See page 2-193, 1-J02 | X | Valve adjustment kit | Ventiljusteringssats | 2 |

83. Engine -J27456.
84. Engine J27457-.
111. For B201 Turbo use valve cover 9358015 between Engine J065871- J075911. For B201 I with catalytic converter use valve cover 9358015 between Engine J065781-J073752. For B201 I and C use valve cover 9358015 between Engine J066423-J098340. För B201 Turbo använd ventilkåpa 9358015 mellan Engine J065871-J075911. För B201 I utan katalysator använd ventilkåpa 9358015 mellan Engine J065781-J073752. För B201 I och C använd ventilkåpa 9358015 mellan Engine J066423-J098340.
206. Engine Motor




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

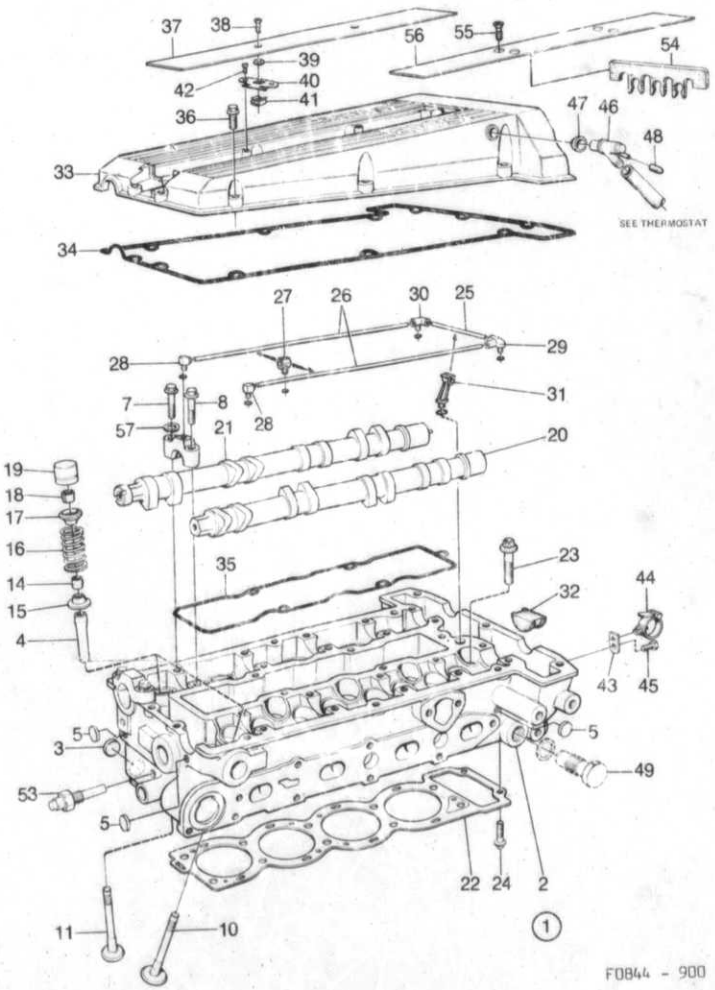


| 0175 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *75 61 988* | | 76,700),-1986 NLS | 1 | Cylinder head | Cylinderhuvud | 5 |
| 0020 | | | | | | | | |
| 0030 | 1 | *75 61 996* | | 105,700) NLS | 1 | Cylinder head | Cylinderhuvud | 5 |
| 0040 | | | | | | | | |
| 0050 | 1 | *75 86 134* | | 106,700) NLS - USE 9107376 | 1 | Cylinder head | Cylinderhuvud | 5 |
| 0060 | | | | | | | | |
| 0070 | 2 | *75 23 996* | | 105) NLS - USE 4161162, 7563042, 9107053 | 1 | .Cylinder head | .Cylinderlock | 5 |
| 0080 | 2 | *75 86 142* | | 106) NLS - USE 4161162, 7563042, 9107053 | 1 | .Cylinder head | .Cylinderlock | 5 |
| 0090 | 3 | 81 23 218 | | -1987 | 2 | ..Sealing washer | ..Tätningsbricka | 3 |
| 0100 | 3 | 75 88 320 | | 1988- | 2 | ..Sealing washer | ..Tätningsbricka | 3 |
| 0110 | 4 | 75 60 154 | | | 16 | ..Valve guide | ..Ventilstyrning | 4 |
| 0120 | 4 | 75 69 734 | | 202) | 16 | ..Valve guide | ..Ventilstyrning | 2 |
| 0130 | 5 | 81 23 143 | | 106) | 3 | ..Plug | ..Plugg | 3 |
| 0140 | 7 | 81 25 213 | | | 12 | ..Screw | ..Skruv | 5 |
| 0150 | 8 | 93 58 870 | | 196) | 8 | ..Screw | ..Skruv | 5 |
| 0160 | 8 | 75 85 847 | | 197) | 8 | ..Screw | ..Skruv | 5 |
| 0170 | 10 | *75 62 002* | | 203) NLS - USE 7484801 | 8 | .Inlet valve | .Inloppsventil | 3 |
| 0180 | 11 | *75 00 085* | | 204) NLS - USE 9136250 | 8 | .Exhaust valve | .Avgasventil | 2 |
| 0190 | 14 | 75 00 713 | | | 16 | .Seal | .Tätning | 3 |
| 0200 | 15 | 75 05 134 | | | 16 | .Washer | .Bricka | 4 |
| 0210 | 16 | *93 58 391* | | NLS - USE 9129651 | 16 | .Spring | .Fjäder | 3 |
| 0220 | 17 | 75 01 349 | | | 16 | .Washer | .Bricka | 4 |
| 0230 | 18 | 75 15 547 | | | 32 | .Valve cone | .Knaster | 2 |
| 0240 | 19 | *93 57 716* | | NLS - USE 9134420 | 16 | Tappet | Ventillyftare | |
| 0250 | 20 | *75 18 913* | | 76,203), -1986 NLS - USE 7509201 | 1 | Camshaft | Kamaxel | 5 |
| 0260 | 20 | 75 60 808 | | 203), TURBO | 1 | Camshaft | Kamaxel | 5 |
| 0270 | 20 | 75 61 467 | | 203), I | 1 | Camshaft | Kamaxel | 5 |
| 0280 | 21 | 75 60 964 | | 204) | 1 | Camshaft | Kamaxel | 5 |
| 0290 | 22 | 75 16 529 | | 1986 | 1 | Gasket | Packning | 2 |
| 0300 | 22 | *75 61 301* | | 1986, TURBO, SW NLS - USE 9169079 | 1 | Cylinder head gasket | Cylinderhuvudpackning | 2 |
| 0310 | 22 | *75 61 301* | | 1987- NLS - USE 9169079 | 1 | Cylinder head gasket | Cylinderhuvudpackning | 2 |
| 0320 | 23 | *75 18 335* | | NLS - USE 9129909 | 10 | Screw | Skruv | 5 |
| 0330 | 24 | 81 25 189 | | | 2 | Screw | Skruv | 5 |
| 0340 | 25 | 75 08 468 | | 105) | 1 | Pipe | Rör | 3 |
| 0350 | 26 | 75 08 476 | | 105) | 2 | Pipe | Rör | 3 |
| 0360 | 27 | *75 18 434* | | -1987 NLS - USE 7480429 | 6 | Nipple | Nippel | 3 |
| 0370 | 27 | 74 80 429 | | 1988-,105) | 6 | Nipple | Nippel | 3 |
| 0380 | 28 | *75 18 442* | | -1987 NLS - USE 7480437 | 2 | Nipple | Nippel | 3 |
| 0390 | 28 | 74 80 437 | | 1988-,105) | 2 | Nipple | Nippel | 3 |
| 0400 | 29 | *75 18 459* | | -1987 NLS - USE 7480445 | 1 | Nipple | Nippel | 3 |
| 0410 | 29 | 74 80 445 | | 1988-,105) | 1 | Nipple | Nippel | 3 |
| 0420 | 30 | *75 18 467* | | -1987 NLS - USE 7480452 | 1 | Nipple | Nippel | 3 |
| 0430 | 30 | 74 80 452 | | 1988-,105) | 1 | Nipple | Nippel | 3 |
| 0440 | 31 | *75 19 523* | | -1987 NLS - USE 7480460 | 1 | Nipple | Nippel | 3 |
| 0450 | 31 | 74 80 460 | | 1988-,105) | 1 | Nipple | Nippel | 3 |
| 0460 | 32 | 75 00 069 | | | 3 | Plug | Plugg | 2 |
| 0470 | 33 | 75 22 303 | | 63) | 1 | Valve cover | Ventilkåpa | 5 |

63. Engine -G110406.
76. For TURBO with catalytic converter. För TURBO med katalytisk reaktor.
105. Engine -J082585.
106. Engine J082586-.
196. Engine -J082585
197. Engine J082586-
202. Oversize Överdimension
203. Intake Inlopp
204. Exhaust Avgas
700. Also available as exchange unit. Finns även som utbytesenhet.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

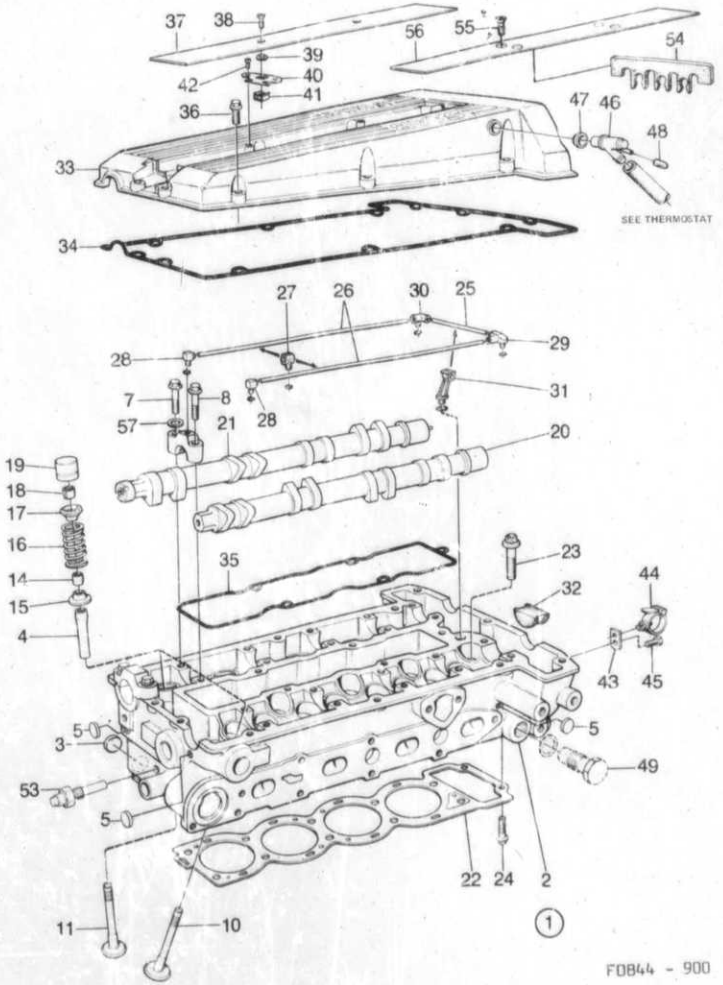


| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 33 | *75 23 939* | | 64,87) NLS - USE 7585532, 7585540, 7586837, 7858756 | 1 | Valve cover | Ventilkåpa | 5 |
| 33 | 75 86 308 | | 88,126) | 1 | Valve cover | Ventilkåpa | 5 |
| 33 | *91 15 973* | | 127,176) NLS - USE 7858756 | 1 | Valve cover | Ventilkåpa | 5 |
| 33 | *91 16 062* | | 177) NLS - USE 7858756 | 1 | Valve cover | Ventilkåpa | 5 |
| 34 | 75 20 360 | | 63) | 1 | Gasket | Packning | |
| 34 | *75 23 954* | | 64)-1987 NLS - USE 7569304 | 1 | Gasket | Packning | 1 |
| 34 | *75 88 056* | | 1988- NLS - USE 7569304 | 1 | Gasket | Packning | 1 |
| 35 | 93 59 647 | | 63) | 1 | Gasket | Packning | 1 |
| 35 | 75 23 962 | | 64) | 1 | Gasket | Packning | 1 |
| 36 | 75 60 931 | | | 16 | Screw | Skruv | 5 |
| 37 | 75 03 709 | | 87) | 1 | Cover | Lock | 3 |
| 38 | 75 22 790 | | 87) | 2 | ▪ Screw | ▪ Skruv | 5 |
| 39 | 75 61 673 | | 87) | 2 | ▪ E-circlip | ▪ Spårryttare | 5 |
| 40 | 75 03 469 | | 87) | 2 | Bracket | Fäste | 6 |
| 41 | 79 70 403 | | 87) | 2 | Cage nut | Korgmutter | 5 |
| 42 | 75 20 240 | | 87) | 4 | Screw | Skruv | 5 |
| 43 | 75 11 975 | | | 2 | Bracket | Konsol | 5 |
| 44 | 75 12 015 | | | 2 | Tensioning band | Spännband | 5 |
| 45 | *80 82 919* | | NLS - USE 8082935 | 2 | Screw | Skruv | 5 |
| 46 | 75 17 048 | | | 1 | Nipple | Nippel | 5 |
| 47 | *83 60 257* | | 1986 NLS - USE 7515190 | 1 | Bushing | Bussning | 5 |
| 47 | 75 15 190 | | 1987- | 1 | Bushing | Bussning | 5 |
| 48 | 83 35 614 | | | 1 | Plug | Propp | 4 |
| 49 | | | See page 2-027, 1-C04 | | Chain tensioner | Kedjesträckare | |
| 53 | *88 00 914* | | NLS - USE 9108291 | 1 | Sensor | Givare | 2 |
| 54 | | | See page 3-000, 0-000 | | Retainer | Hållare | |
| 55 | 75 86 837 | | 88) | 4 | Screw | Skruv | 5 |
| 56 | 75 85 532 | | 88) | 1 | Cover | Lock | 3 |
| 57 | 91 14 885 | | 1988- | 16 | Sealing washer | Tätningsbricka | 5 |
| | 88 17 512 | | 63) See page 2-187, 1-I20 | X | Gasket kit | Packningsats | 1 |
| | *88 18 254* | | 64) See page 2-187, 1-I20 | X | Gasket kit | Packningsats | 1 |
| | 88 18 007 | | NLS - USE 9321464 63) See page 2-187, 1-I20 | X | Gasket kit | Sotningssats | 2 |
| | 88 19 823 | | 64,104) See page 2-187, 1-I20 | X | Gasket kit | Sotningssats | 2 |
| | 88 19 831 | | 105) See page 2-187, 1-I20 | X | Gasket kit | Sotningssats | 2 |

63. Engine -G110406.
64. Engine G110407-.
87. Engine -J17250.
88. Engine J17251-.
104. Used together with 8976425, 8976433, 8976441, 8976458. Används tillsammans med 8976425, 8976433, 8976441, 8976458.
105. Engine -J982585.
126. Engine --J88085
127. Engine J88086--
176. Engine -K083010.
177. Engine K083011-.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

2 GROUP INDEX

| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

Engine body
# 1-B22
## *Cylinder block*

Motorkropp
## *Cylinderblock*

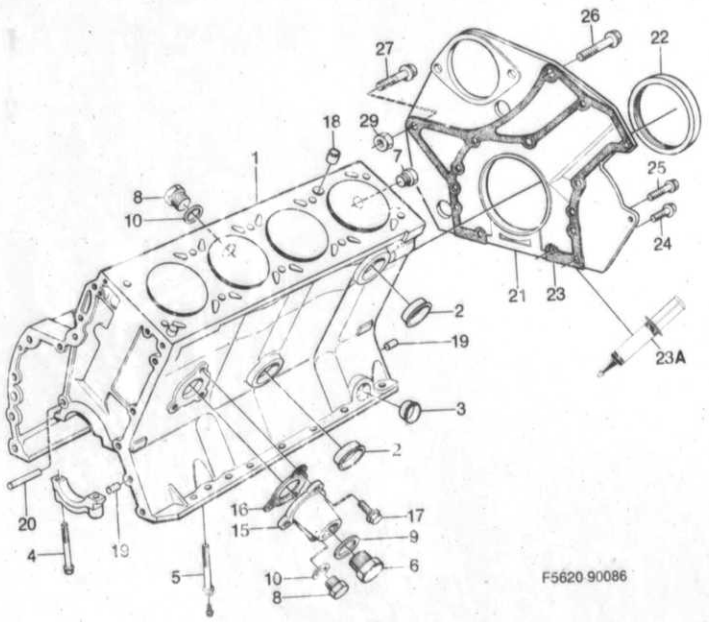


| 3225 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 16 826 | | | 1 | Cylinder block | Cylinderblock | 6 |
| 0020 | 1 | 75 16 834 | | TURBO | 1 | Cylinder block | Cylinderblock | 6 |
| 0030 | 2 | *83 47 999* | | -1987 NLS - USE 9116757 | 2 | .Sealing washer | .Tätningsbricka | 3 |
| 0040 | 2 | 75 88 338 | | 1988-,147) | 2 | .Sealing washer | .Tätningsbricka | 3 |
| 0050 | 2 | 91 16 757 | | 148) | 2 | .Sealing washer | .Tätningsbricka | 3 |
| 0060 | 3 | 81 23 218 | | -1987 | 1 | .Sealing washer | .Tätningsbricka | 3 |
| 0070 | 3 | 75 88 320 | | 1988- | 1 | .Sealing washer | .Tätningsbricka | 3 |
| 0080 | 4 | 83 52 502 | | | 6 | .Screw | .Skruv | 5 |
| 0090 | 5 | 93 08 537 | | 207) | 4 | .Screw | .Skruv | 5 |
| 0100 | 6 | *75 64 230* | | -1988 NLS - USE 8123788 | 1 | .Plug | .Propp | 5 |
| 0110 | 6 | 81 23 788 | | 1989- | 1 | .Plug | .Propp | 6 |
| 0120 | 7 | 83 40 047 | | | 1 | .Plug | .Propp | 5 |
| 0130 | 8 | *75 64 222* | | -1988 NLS - USE 7563042 | 2 | .Plug | .Propp | 5 |
| 0140 | 8 | *81 23 721* | | 1989- NLS - USE 7563042 | 2 | .Plug | .Propp | 5 |
| 0150 | 9 | *81 24 208* | | 141) NLS - USE 9116856 | 1 | .Gasket | .Packning | 4 |
| 0160 | 9 | 91 16 856 | | 142) | 1 | .Gasket | .Packning | 4 |
| 0170 | 10 | *83 26 712* | | NLS - USE 416 162 | 2 | .Seal | .Tätning | 5 |
| 0180 | 15 | *75 00 622* | | 1986 NLS - USE 9144684 | 1 | .Cover | .Lock | 3 |
| 0190 | 15 | *75 81 259* | | 1987- NLS - USE 9144684 | 1 | .Cover | .Lock | 3 |
| 0200 | 16 | *75 07 833* | | NLS - USE 7523897 | 1 | .Gasket | .Packning | 4 |
| 0210 | 17 | 81 25 189 | | | 3 | .Screw | .Skruv | 5 |
| 0220 | 18 | 83 46 470 | | | 2 | .Guide | .Styrning | |
| 0230 | 19 | 83 66 007 | | | 4 | .Guide | .Styrning | 5 |
| 0240 | 20 | | | See page 2-027, 1-C04 | 1 | .Pin | .Pinne | |
| 0250 | 21 | 75 16 255 | | | 1 | End piece | Gavelstycke | 5 |
| 0260 | 22 | *93 50 158* | | NLS - USE 8787764 | 1 | .Seal | .Tätning | 2 |
| 0270 | 23 | *75 16 586* | | 1986 NLS - USE 9321795 | 1 | Gasket | Packning | 2 |
| 0280 | 23 | *75 63 661* | | 1987- NLS - USE 9321795 | 1 | Gasket | Packning | 4 |
| 0285 | 23A | 93 21 795 | | 25 ML | X | Flange sealant | Flänstätning | 5 |
| 0290 | 24 | 81 25 189 | | | 9 | Screw | Skruv | 5 |
| 0300 | 25 | 81 25 197 | | | 2 | Screw | Skruv | 5 |
| 0310 | 26 | 81 25 551 | | -1987 | 1 | Screw | Skruv | 5 |
| 0320 | 26 | 81 50 500 | | 1988- | 1 | Screw | Skruv | 5 |
| 0330 | 27 | *81 25 585* | | -1987, C NLS - USE 8150534 | 1 | Screw | Skruv | 5 |
| 0340 | 27 | 81 50 534 | | 1988-, C | 1 | Screw | Skruv | 5 |
| 0350 | 27 | *81 25 601* | | -1987 NLS - USE 8150559 | 1 | Screw | Skruv | 5 |
| 0360 | 27 | 81 50 559 | | 1988- | 1 | Screw | Skruv | 5 |
| 0370 | 29 | *80 73 967* | | -1988 NLS - USE 8151086 | 1 | Nut | Mutter | 5 |
| 0380 | 29 | 81 51 086 | | 500),1989- | 1 | Nut | Mutter | 5 |

141. Engine -K J06621.
142. Engine K006622-
147. Engine -J083415.
148. Engine J083416-.
207. Main bearing 2 and 3 Ramlager 2 och 3
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

| 0250 | Pos | Part No/Art.nr | K $ | Notes/Anmärkningar | Qty/Antal | Description | Benämning | S |
|---|---|---|---|---|---|---|---|---|
| 0010 | | 75 69 452 | | -1988, B201 | 1 | Engine | Motor | 5 |
| 0020 | | 87 88 218 | | 1989-, B201 | 1 | Engine | Motor | 5 |
| 0030 | | *75 69 460* | | 75), 1988, B201 NLS - USE 8788236 | 1 | Engine | Motor | 5 |
| 0040 | | 87 88 226 | | 75),1989-, B201 | 1 | Engine | Motor | 5 |
| 0050 | | *75 69 478* | | -1988, B201 TURBO NLS - USE 8825234 | 1 | Engine | Motor | 5 |
| 0060 | | *87 88 234* | | 1989-, B201 TURBO NLS - USE 8825234 | 1 | Engine | Motor | 5 |
| 0070 | | *75 69 486* | | -1988, B202I NLS - USE 8788242 | 1 | Engine | Motor | 5 |
| 0080 | | 87 88 242 | | 1989-, B202I | 1 | Engine | Motor | 5 |
| 0090 | | *75 69 502* | | -1988, B202 TURBO NLS - USE 8788259 | 1 | Engine | Motor | 5 |
| 0100 | | 87 88 259 | | 1989-, B202 TURBO | 1 | Engine | Motor | 5 |
| 0110 | | *75 69 494* | | 76), 1988, B202 NLS | 1 | Engine | Motor | 5 |
| 0120 | | *75 69 502* | | 76), 1987-1988, B202 NLS - USE 8738259 | 1 | Engine | Motor | 5 |
| 0130 | | 87 88 259 | | 76), 1989, B202 | 1 | Engine | Motor | 5 |
| 0140 | | | | | | .Cylinder block | .Cylinderblock | |
| 0150 | | | | | | .Crankshaft | .Vevaxel | |
| 0160 | | | | | | .Connecting rod | .Vevstake | |
| 0170 | | | | | | .Piston | .Kolv | |
| 0180 | | | | | | .Timing gear casing | .Transmissionskåpa | |
| 0190 | | | | | | .Transmission | .Transmission | |
| 0200 | | | | | | .End plate | .Gavelplatta | |
| 0210 | | | | | | .Pulley | .Remskiva | |
| 0220 | | | | | | .Oil pump | .Oljepump | |
| 0230 | | | | | | .Coolant pump | .Kylvätskepump | |

75. For I with catalytic converter. För I med katalytisk reaktor.
76. For TURBO with catalytic converter. För TURBO med katalytisk reaktor.
700. Also available as exchange unit. Finns även som utbytesenhet.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-C02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

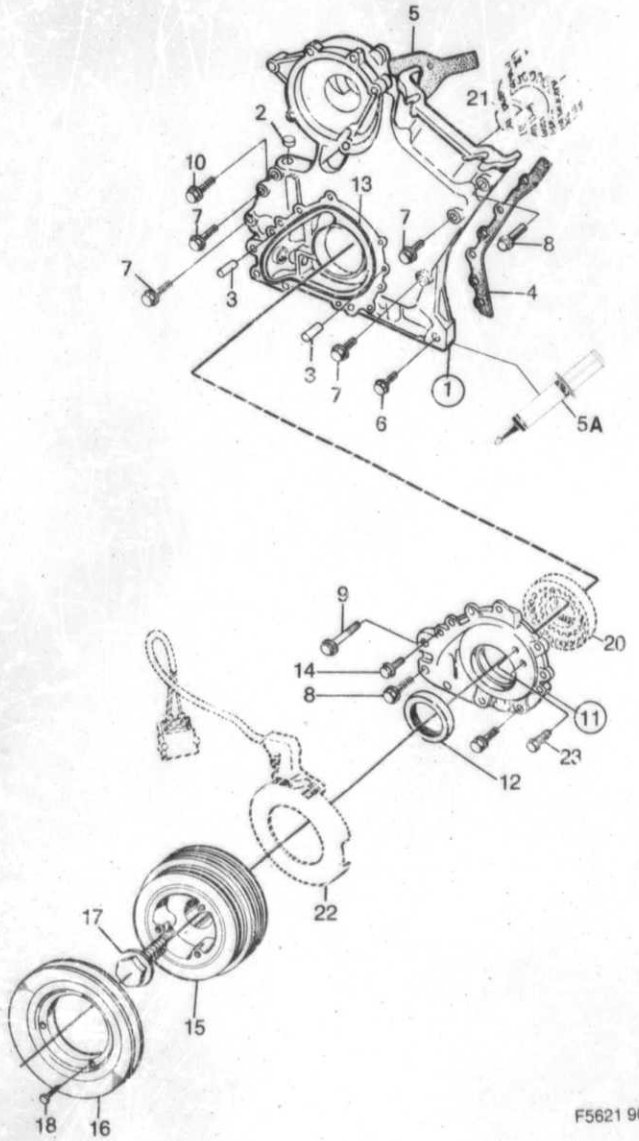


F5621 90086

| 0310 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 19 358 | | | 1 | Cover | Kåpa | 5 |
| 0020 | 2 | 81 23 176 | | | 1 | ▲Plug | ▲Plugg | 6 |
| 0030 | 3 | *80 34 456* | | NLS - USE 7949696 | 2 | Pin | Pinne | 5 |
| 0040 | 4 | *75 09 367* | | 1986 NLS - USE 9321795 | 1 | Gasket | Packning | 2 |
| 0050 | 4 | *75 63 646* | | 1987- NLS - USE 9321795 | 1 | Gasket | Packning | 2 |
| 0060 | 5 | *75 09 375* | | 1986 NLS - USE 9321795 | 1 | Gasket | Packning | 2 |
| 0070 | 5 | *75 63 653* | | 1987-,124) NLS - USE 9321795 | 1 | Gasket | Packning | 2 |
| 0080 | 5 | *91 17 060* | | 125) NLS - USE 9321795 | 1 | Gasket | Packning | 2 |
| 0085 | 5A | 93 21 795 | | 25 ML | X | Flange sealant | Flänstätning | 5 |
| 0090 | 6 | 83 56 917 | | | 1 | Screw | Skruv | 5 |
| 0100 | 7 | 81 25 239 | | | 4 | Screw | Skruv | 5 |
| 0110 | 8 | 81 25 247 | | | 2 | Screw | Skruv | 5 |
| 0120 | 9 | 81 25 262 | | | 1 | Screw | Skruv | 5 |
| 0130 | 10 | 93 54 960 | | | 1 | Screw | Skruv | 5 |
| 0140 | 11 | *75 18 848* | | -1988 NLS - USE 7586993, 9127432 | 1 | Oil pump housing | Oljepumphus | 6 |
| 0145 | 11 | *74 87 572* | | 1989-,174,500) NLS - USE 7586993, 9127432 | 1 | Oil pump housing | Oljepumphus | 6 |
| 0150 | 11 | 75 86 993 | | 1989-174,500), B202I | 1 | Oil pump housing | Oljepumphus | 6 |
| 0155 | 11 | 75 86 993 | | 175) | 1 | Oil pump housing | Oljepumphus | 6 |
| 0160 | 12 | 93 09 204 | | | 1 | ▲Seal | ▲Tätning | 2 |
| 0170 | 13 | *83 69 829* | | NLS - USE 9125824 | 1 | Seal | Tätning | 3 |
| 0180 | 14 | 81 25 049 | | | 8 | Screw | Skruv | 5 |
| 0190 | 15 | *75 19 390* | | NLS - USE 9107665 | 1 | Pulley | Remskiva | 4 |
| 0200 | 15 | *74 84 983* | | 75,500) 1989-, B202I NLS - USE 8789315, 9117201 | 1 | Pulley | Remskiva | 4 |
| 0210 | 16 | 93 30 184 | | AC | 1 | Pulley | Remskiva | 4 |
| 0220 | 17 | 83 48 534 | | | 1 | Screw | Skruv | 5 |
| 0230 | 18 | 80 19 945 | | AC | 3 | Screw | Skruv | 5 |
| 0240 | 20 | | | See page 2-037, 1-C14 | | Pump kit | Pumpsats | |
| 0250 | 21 | | | See page 2-027, 1-C04 | | Chain gear | Kedjehjul | |
| 0260 | 22 | | | See page 3A-023, 2-A24 | | Sensor | Givare | |
| 0270 | 23 | 87 88 150 | | 175) | 2 | Screw | Skruv | 5 |

75. For I with catalytic converter. För I med katalytisk reaktor.
124. Engine -J104285
125. Engine J104286-
174. Engine -K080212.
175. Engine K080213-.
500. Also valid for SE 19[illegible]. Gäller även för SE 1988B.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-C04

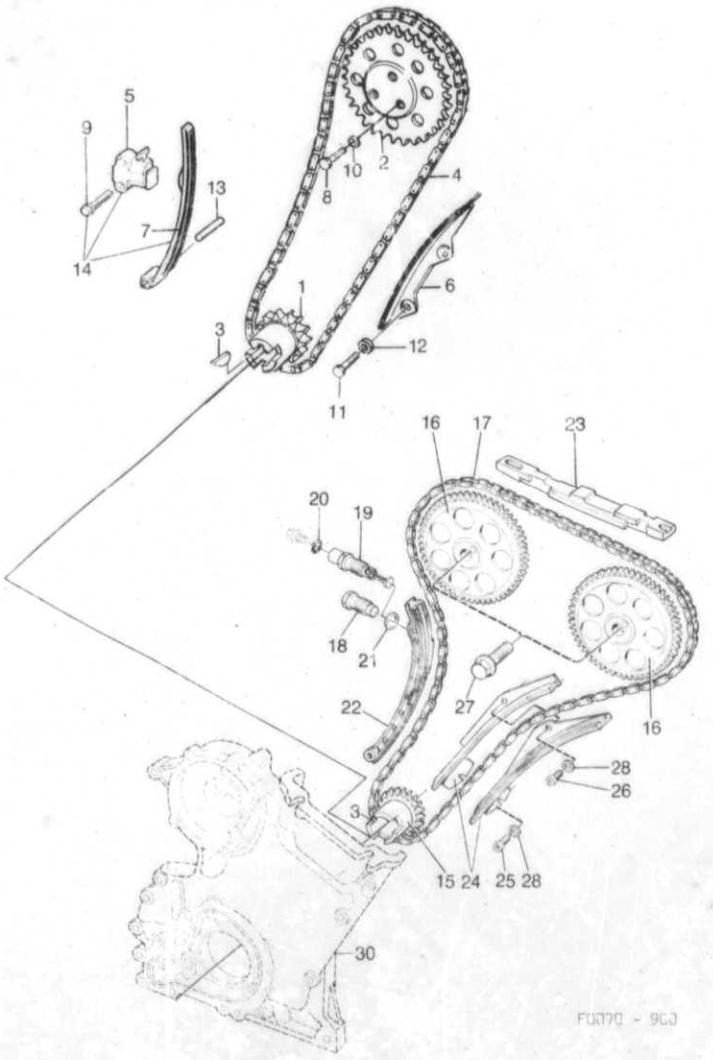


F0070 - 900

| 0330 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 18 632 | | B201 | 1 | Chain gear | Kedjehjul | 4 |
| 0020 | 2 | 93 06 747 | | 1986 B201 | 1 | Chain gear | Kedjehjul | 5 |
| 0030 | 2 | 75 63 166 | | 1987- B201 | 1 | Chain gear | Kedjehjul | 4 |
| 0040 | 3 | 83 47 122 | | | 1 | Key | Kil | 5 |
| 0050 | 4 | 93 59 779 | | B201 | 1 | Chain | Kedja | 3 |
| 0060 | 5 | 93 58 672 | | B201 | 1 | Chain tensioner | Kedjesträckare | 3 |
| 0070 | 6 | 75 07 155 | | B201 | 1 | Chain contro' | Kedjestyrning | 3 |
| 0080 | 7 | 93 58 680 | | B201 | 1 | Chain control | Kedjestyrning | 3 |
| 0090 | 8 | 80 82 935 | | B201 | 3 | Screw | Skruv | 5 |
| 0100 | 9 | 81 25 064 | | B201 | 2 | Screw | Skruv | 5 |
| 0110 | 10 | 80 29 985 | | B201 | 3 | Washer | Bricka | 5 |
| 0120 | 11 | 80 19 895 | | B201 | 4 | Screw | Skruv | 5 |
| 0130 | 12 | 80 29 951 | | B201 | 4 | Washer | Bricka | 5 |
| 0140 | 13 | 80 34 761 | | B201 | 1 | Pin | Pinne | 5 |
| 0150 | 14 | 88 17 405 | | B201 | X | Chain tensioner | Kedjesträckare | 3 |
| 0160 | | | | See page 2-193, 1-J02 | | | | |
| 0170 | 15 | 75 18 640 | | B202 | 1 | Chain gear | Kedjehjul | 4 |
| 0180 | 16 | 75 00 127 | | B202 | 2 | Chain gear | Kedjehjul | 5 |
| 0190 | 17 | 75 00 697 | | B202 | 1 | Chain | Kedja | 3 |
| 0200 | 17 | 93 21 837 | | B202, ALTERNATIV | 1 | Chain | Kedja | 3 |
| 0210 | | | | | | Open, with chain link | Öppen, med kedjelänk | |
| 0220 | | | | | | | | |
| 0230 | 18 | *93 58 854* | | 1986 B202 NLS - USE 7585086 | 1 | Chain tensioner | Kedjesträckare | 3 |
| 0240 | 19 | 75 85 086 | | 1987- B202 | 1 | Chain tensioner | Kedjesträckare | 3 |
| 0250 | 20 | *81 09 571* | | 1987- B202 NLS - USE 8048670 | 1 | O-ring | O-ring | 2 |
| 0260 | 21 | 75 08 690 | | B202 | 1 | Seal | Tätning | 5 |
| 0270 | 22 | *75 00 150* | | B202 NLS - USE 8858276 | 1 | Chain control | Kedjestyrning | 3 |
| 0280 | 23 | 75 05 845 | | 176), B202 | 1 | Chain control | Kedjestyrning | 3 |
| 0290 | 23 | 88 59 324 | | 189), B202 | 1 | Chain control | Kedjestyrning | 3 |
| 0300 | 24 | *75 60 253* | | 1986 B202, (7506199) NLS - USE 9133505, 9166299, 9166307 | 1 | Chain control | Kedjestyrning | 3 |
| 0310 | 24 | *75 20 315* | | 1987- B202 NLS - USE 9133505 | 1 | Chain control | Kedjestyrning | 3 |
| 0320 | 25 | 80 97 883 | | 1986 B202 | 1 | Screw | Skruv | 5 |
| 0330 | 25 | *80 19 929* | | 1987- B202 NLS - USE 9166299 | 1 | Screw | Skruv | 5 |
| 0340 | 26 | 80 97 883 | | 1986 B202 | 1 | Screw | Skruv | 5 |
| 0350 | 26 | *80 19 960* | | 1987- B202 NLS - USE 9166307 | 1 | Screw | Skruv | 5 |
| 0360 | 27 | 30 37 140 | | B202 | 2 | Screw | Skruv | 5 |
| 0370 | 28 | 80 29 951 | | B202 | 2 | Washer | Bricka | 5 |
| 0380 | 30 | | | See page 2-025, 1-C02 | 2 | Cover | Kåpa | |

176. Engine -K083010.
189. Engine K083011-




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A |
| 2 | Engine | 1-B |
| 3A | Electrical general | 2-A |
| 3B | Electrical, contact housing | 3-A |
| 4 | Transmission | 3-H |
| 5 | Brakes | 4-A |
| 6 | Front assembly, Steering | 4-C |
| 7 | Suspension, Wheels | 4-E |
| 8A | Body, external | 5-A |
| 8B | Body, internal | 6-A |
| 8C | Body, heating and ventilation | 7-A |
| 9 | Tools, labels | 7-D |
| 10 | Numerical register | 7-E |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B1 |
| Lubrication system | 1-C1 |
| Fuel system | 1-C1 |
| Inlet and exhaust system | 1-F0 |
| Cooling system | 1-H1 |
| Engine control | 1-I1 |
| Supercharging system | 1-I1 |
| Complete sets | 1-I2 |

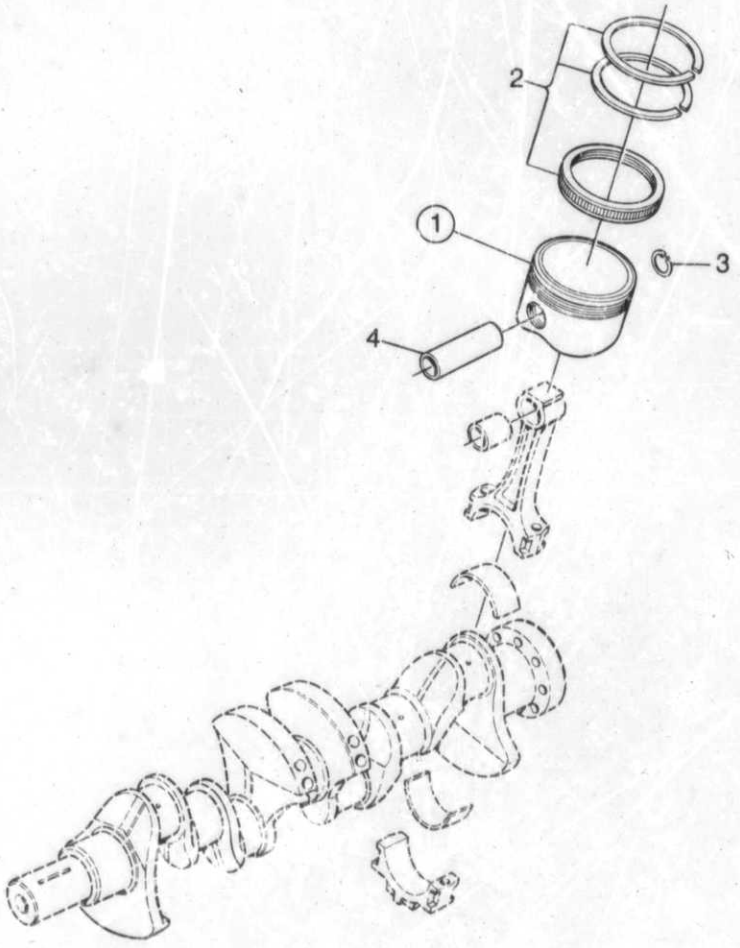


F2017 - 900

Engine body — Motorkropp

# 1-C06 Piston — Kolv

## B201 — B201

| 0350 | Pos | Part No/Art nr | K. | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *75 20 612* | | -1988,CLASS AB, C, MAHLE NLS - USE 9118233 | 4 | Piston | Kolv | 5 |
| 0020 | 1 | 91 18 233 | | 500),1989-,CLASS AB, C, MAHLE | 4 | Piston | Kolv | 5 |
| 0040 | 1 | 75 20 745 | | CLASS AB, I FOR SW, EU, HEPOLITE | 4 | Piston | Kolv | 5 |
| 0060 | 1 | *75 20 802* | | 75),-1988,CLASS AB,MAHLE NLS - USE 9118084 | 4 | Piston | Kolv | 5 |
| 0070 | 1 | *75 20 802* | | 1989-,US, CLASS AB,MAHLE NLS - USE 9118084 | 4 | Piston | Kolv | 5 |
| 0080 | 1 | 91 18 084 | | 75,500),1989-,CLASS AB, MAHLE | 4 | Piston | Kolv | 5 |
| 0100 | 1 | 75 20 869 | | CLASS AB, TURBO, MAHLE | 4 | Piston | Kolv | 5 |
| 0120 | 1 | *75 20 620* | | -1988, CLASS B, C, MAHLE NLS - USE 9118241 | 4 | Piston | Kolv | 5 |
| 0130 | 1 | 91 18 241 | | 500),-1989, CLASS B, C, MAHLE | 4 | Piston | Kolv | 5 |
| 0150 | 1 | 75 20 752 | | CLASS B, I FOR SW, EU, HEPOLITE | 4 | Piston | Kolv | 5 |
| 0170 | 1 | *75 20 810* | | 75),-1988,CLASS B,MAHLE NLS - USE 9118092 | 4 | Piston | Kolv | 5 |
| 0180 | 1 | *75 20 810* | | 1989-,US, CLASS B, MAHLE NLS - USE 9118092 | 4 | Piston | Kolv | 5 |
| 0190 | 1 | 91 18 092 | | 75,500),1989-,CLASS B, MAHLE | 4 | Piston | Kolv | 5 |
| 0210 | 1 | 75 20 877 | | CLASS B, TURBO, MAHLE | 4 | Piston | Kolv | 5 |
| 0230 | 1 | *75 20 638* | | -1988, CLASS C, C, MAHLE NLS - USE 9118258 | 4 | Piston | Kolv | 5 |
| 0240 | 1 | 91 18 258 | | 500),1989-, CLASS C, C, MAHLE | 4 | Piston | Kolv | 5 |
| 0260 | 1 | 75 20 760 | | CLASS C, I, SW, EU, HEPOLITE | 4 | Piston | Kolv | 5 |
| 0280 | 1 | *75 20 828* | | 75)-1988, CLASS C, MAHLE NLS - USE 9118100 | 4 | Piston | Kolv | 5 |
| 0290 | 1 | *75 20 828* | | 1989-, US, CLASS C,MAHLE NLS - USE 9118100 | 4 | Piston | Kolv | 5 |
| 0300 | 1 | 91 18 100 | | 75,500),1989-,CLASS C, MAHLE | 4 | Piston | Kolv | 5 |
| 0320 | 1 | 75 20 885 | | CLASS C, TURBO, MAHLE | 4 | Piston | Kolv | 5 |
| 0340 | 1 | *75 20 646* | | -1988,202), 0,50MM, C MAHLE NLS - USE 9118266 | 4 | Piston | Kolv | 5 |
| 0360 | 1 | 91 18 266 | | 500,202)1989-, 0,50 MM C, MAHLE | 4 | Piston | Kolv | 5 |
| 0380 | 1 | 75 20 703 | | 202), 0,50MM, I, KARL-SCHMIDT | 4 | Piston | Kolv | 5 |
| 0400 | 1 | *75 20 836* | | 75,202) 1988- 0,50MM MAHLE NLS - USE 9118118 | 4 | Piston | Kolv | 5 |
| 0420 | 1 | *75 20 836* | | 1989-,202), 0,50MM, US MAHLE NLS - USE 9118118 | 4 | Piston | Kolv | 5 |
| 0440 | 1 | 91 18 118 | | 75,202,500)1989-, 0,50MM MAHLE | 4 | Piston | Kolv | 5 |
| 0460 | 1 | 75 20 893 | | 202), 0,50MM, TURBO, MAHLE | 4 | Piston | Kolv | 5 |
| 0490 | 1 | *75 20 653* | | -1988,202), 1,0MM, C, MAHLE NLS - USE 9118274 | 4 | Piston | Kolv | 5 |

75. For I with catalytic converter. För I med katalytisk reaktor.
202. Oversize Överdimension
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

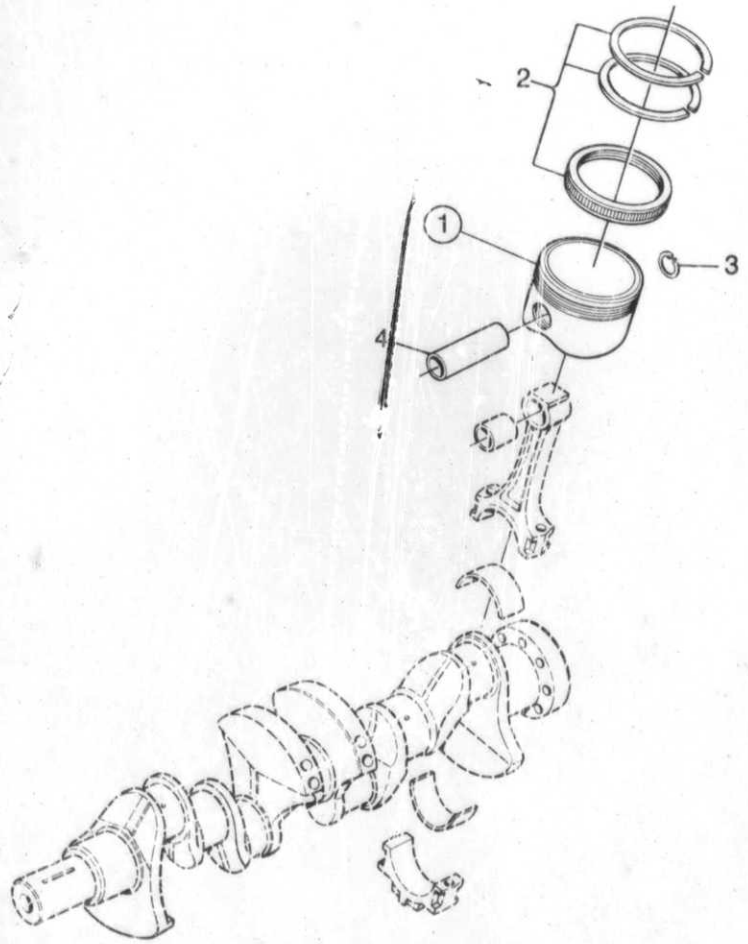


F2017 - 900

| 0350 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0510 | 1 | 91 18 274 | | 202,500)1989-, 1,0 MM, C, MAHLE | 4 | Piston | Kolv | 5 |
| 0530 | 1 | 75 20 711 | | 202), 1,0MM, I, KARL-SCHMIDT | 4 | Piston | Kolv | 5 |
| 0550 | 1 | 75 20 844 | | 75,202)-1988, 1,0MM MAHLE | 4 | Piston | Kolv | 5 |
| 0570 | 1 | 75 20 844 | | 1989-,202), 1,0MM, US MAHLE | 4 | Piston | Kolv | 5 |
| 0590 | 1 | 91 18 126 | | 75,202,500)1989-, 1,0 MM MAHLE | 4 | Piston | Kolv | 5 |
| 0610 | 1 | 75 20 901 | | 202),1,0MM, TURBO, MAHLE | 4 | Piston | Kolv | 5 |
| 0630 | | | | | | | | |
| 0640 | 2 | 75 20 513 | | STD | 4 | ▪Piston ring kit | ▪Kolvringsats | 3 |
| 0650 | 2 | 75 20 521 | | 202), 0,50MM | 4 | ▪Piston ring kit | ▪Kolvringsats | 3 |
| 0660 | 2 | 75 20 539 | | 202), 1,0MM | 4 | ▪Piston ring kit | ▪Kolvringsats | 3 |
| 0570 | | | | | | | | |
| 0580 | 3 | 83 47 577 | | | 8 | Lock ring | Låsring | 5 |
| 0690 | 4 | 83 46 983 | | L=73MM | 4 | Gudgeon pin | Kolvtapp | 5 |

75. For I with catalytic converter. För I med katalytisk reaktor.
202. Oversize Överdimension
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

2 GROUP INDEX

| | |
|---|---|
| Engine body | 1 B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

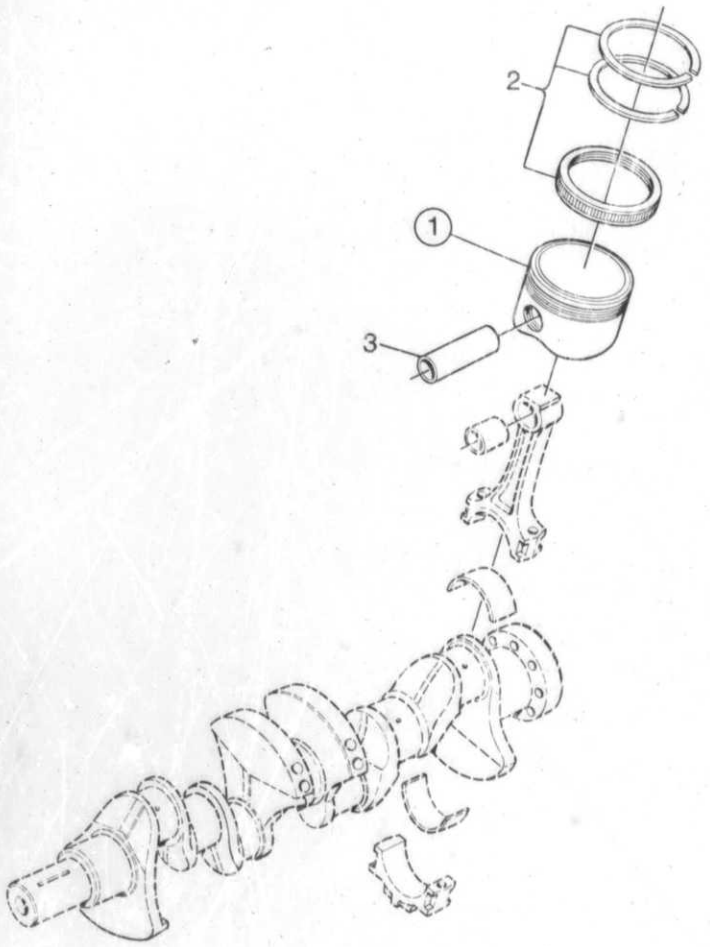


F0503 - 900

| 0360 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 24 895 | | CLASS AB, MAHLE, TURBO | 4 | Piston | Kolv | 5 |
| 0020 | 1 | 75 20 984 | | 1986,76), CLASS AB, | 4 | Piston | Kolv | 5 |
| 0030 | | | | MAHLE | | | | |
| 0040 | 1 | 75 24 895 | | 1987-,153,76), CLASS AB, | 4 | Piston | Kolv | 5 |
| 0050 | | | | MAHLE | | | | |
| 0060 | 1 | 91 15 841 | | 154,76), CLASS AB, | 4 | Piston | Kolv | 5 |
| 0070 | | | | HEPOLITE | | | | |
| 0080 | 1 | 75 20 927 | | 75), CLASS AB, I, MAHLE | 4 | Piston | Kolv | 5 |
| 0090 | | | | | | | | |
| 0100 | 1 | 75 24 903 | | CLASS B, MAHLE, TURBO | 4 | Piston | Kolv | 5 |
| 0110 | 1 | 75 20 992 | | 1986,76), CLASS B, | 4 | Piston | Kolv | 5 |
| 0120 | | | | MAHLE | | | | |
| 0130 | 1 | 75 24 903 | | 1987-,153,76), CLASS B, | 4 | Piston | Kolv | 5 |
| 0140 | | | | MAHLE | | | | |
| 0150 | 1 | 91 15 858 | | 154,76), CLASS B, | 4 | Piston | Kolv | 5 |
| 0160 | | | | HEPOLITE | | | | |
| 0170 | 1 | 75 20 935 | | 75), CLASS B, MAHLE | 4 | Piston | Kolv | 5 |
| 0180 | | | | | | | | |
| 0190 | 1 | 75 24 911 | | CLASS C, MAHLE, TURBO | 4 | Piston | Kolv | 5 |
| 0200 | 1 | 75 21 008 | | 1986,76), CLASS C, | 4 | Piston | Kolv | 5 |
| 0210 | | | | MAHLE | | | | |
| 0220 | 1 | 75 24 911 | | 1987-,153,76), CLASS C, | 4 | Piston | Kolv | 5 |
| 0230 | | | | MAHLE | | | | |
| 0240 | 1 | 91 15 866 | | 154,76), CLASS C, | 4 | Piston | Kolv | 5 |
| 0250 | | | | HEPOLITE | | | | |
| 0260 | 1 | 75 20 943 | | 75), CLASS C, MAHLE | 4 | Piston | Kolv | 5 |
| 0270 | | | | | | | | |
| 0280 | 1 | 75 24 929 | | 202), 0,50MM, MAHLE | 4 | Piston | Kolv | 5 |
| 0290 | | | | TURBO | | | | |
| 0300 | 1 | 75 21 016 | | 1986,76,202), 0,50 MM | 4 | Piston | Kolv | 5 |
| 0310 | | | | MAHLE | | | | |
| 0320 | 1 | 75 24 929 | | 1987-,153,76,202), | 4 | Piston | Kolv | 5 |
| 0330 | | | | 0,50 MM. MAHLE | | | | |
| 0340 | 1 | *91 15 874* | | 154,76,202), 0,50MM | 4 | Piston | Kolv | 5 |
| 0350 | | | | HEPOLITE NLS | | | | |
| 0360 | 1 | 75 20 950 | | 75,202), 0,50MM | 4 | Piston | Kolv | 5 |
| 0370 | | | | MAHLE | | | | |
| 0380 | | | | | | | | |
| 0390 | 1 | 75 24 937 | | 202), 1,0MM, MAHLE | 4 | Piston | Kolv | 5 |
| 0400 | | | | TURBO | | | | |
| 0410 | 1 | 75 21 024 | | 1986,76,202), 1,0 MM | 4 | Piston | Kolv | 5 |
| 0420 | | | | MAHLE | | | | |
| 0430 | 1 | 75 24 937 | | 1987-,153,76,202), | 4 | Piston | Kolv | 5 |
| 0440 | | | | 1,0 MM, MAHLE | | | | |
| 0450 | 1 | 91 15 882 | | 154,76,202), 1,0MM | 4 | Piston | Kolv | 5 |
| 0460 | | | | HEPOLITE | | | | |
| 0470 | 1 | 75 20 968 | | 202), 1,0MM, I, MAHLE | 4 | Piston | Kolv | 5 |
| 0480 | | | | | | | | |
| 0490 | 2 | 75 20 513 | | STD | 4 | Piston ring kit | Kolvringsats | 3 |
| 0500 | 2 | 75 20 521 | | 202), 0,50MM | 4 | Piston ring kit | Kolvringsats | 3 |
| 0510 | 2 | 75 20 539 | | 202), 1,0MM | 4 | Piston ring kit | Kolvringsats | 3 |
| 0520 | 3 | 83 46 983 | | L=73MM | 4 | Gudgeon pin | Kolvtapp | 5 |
| 0530 | 3 | 75 68 942 | | 155), L=68MM | 4 | Gudgeon pin | Kolvtapp | 5 |

75. For I with catalytic converter. För I med katalytisk reaktor.
76. For TURBO with catalytic converter. För TURBO med katalytisk reaktor.
153. Engine --K022321.
154. Engine K022322--
155. For pistons 9115841, 9115858, 9115866, 9115874, 9115882. För kolvar 9115841, 9115858, 9115866, 9115874, 9115882.
202. Oversize Överdimension



MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

Engine body

# 1-C12 Crankshaft, connecting rod, flywheel

Motorkropp

## Vevaxel, vevstake, svänghjul

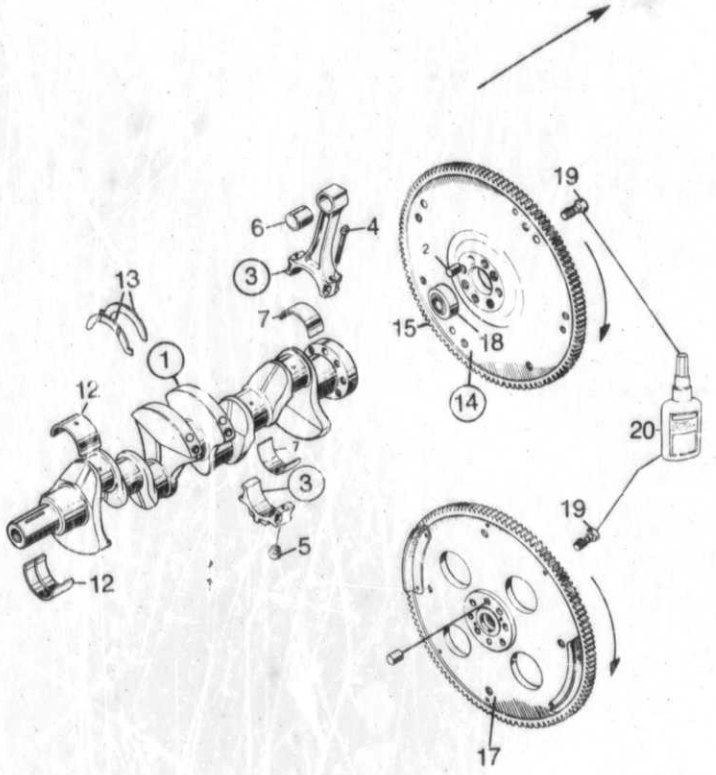


F5622 90086

| 03-5 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 24 978 | | 43) | 1 | Crankshaft | Vevaxel | 6 |
| 0020 | 1 | 93 21 589 | | 44) | 1 | Crankshaft | Vevaxel | 6 |
| 0030 | | 87 87 228 | | PART OF 9321589 | 1 | .Crankshaft | .Vevaxel | 6 |
| 0040 | | 78 56 172 | | PART OF 9321589 | 1 | .Spacer | .Distans | 5 |
| 0050 | | 91 16 443 | | PART OF 9321589 | 1 | .Screw | .Skruv | 5 |
| 0060 | | 91 16 864 | | PART OF 9321589 | 1 | .Key | .Kil | 5 |
| 0070 | 2 | 80 34 928 | | | 1 | Pin | Pinne | 5 |
| 0080 | 3 | 75 01 604 | | 43) | 4 | Connecting rod | Vevstake | 5 |
| 0090 | 3 | 75 62 259 | | 44) | 4 | Connecting rod | Vevstake | 5 |
| 0100 | 4 | 83 47 106 | | 43) | 8 | .Screw | .Skruv | 5 |
| 0110 | 4 | 75 21 255 | | 44) | 8 | .Screw | .Skruv | 5 |
| 0120 | 5 | 75 00 739 | | 43) | 8 | .Nut | .Mutter | 5 |
| 0130 | 5 | 75 62 275 | | 44) | 8 | .Nut | .Mutter | 5 |
| 0140 | 6 | *83 52 734* | | -1988 NLS - USE 8347676 | 4 | .Bushing | .Bussning | 5 |
| 0150 | 6 | 83 47 676 | | 1989- | 4 | .Bushing | .Bussning | 5 |
| 0160 | | | | | | | | |
| 0170 | 7 | 83 47 650 | | | 8 | Con.bearing | Vevstakslager | |
| 0180 | | | | | | Red | Röd | |
| 0190 | 7 | 83 55 349 | | | 8 | Con.bearing | Vevstakslager | |
| 0200 | | | | | | Blue | Blå | |
| 0210 | 7 | 83 49 938 | | 208), 0,25MM, | 8 | Con.bearing | Vevstakslager | 4 |
| 0220 | | | | | | Yellow | Gul | |
| 0230 | 7 | 83 55 356 | | 208), 0,25MM, | 8 | Con.bearing | Vevstakslager | |
| 0240 | | | | | | Green | Grön | |
| 0250 | 7 | 83 49 946 | | 208), 0,50MM, | 8 | Con.bearing | Vevstakslager | 4 |
| 0260 | | | | | | White | Vit | |
| 0270 | 7 | 83 55 364 | | 208), 0,50MM, | 8 | Con.bearing | Vevstakslager | 4 |
| 0280 | 7 | | | | | Brown | Brun | |
| 0290 | 7 | 83 49 953 | | 208), 0,75MM | 8 | Con.bearing | Vevstakslager | 4 |
| 0300 | 7 | 83 49 961 | | 208), 1,0MM | 8 | Con.bearing | Vevstakslager | 4 |
| 0310 | 12 | 83 50 936 | | | 10 | Main bearing | Ramlager | 5 |
| 0320 | | | | | | Red | Röd | |
| 0330 | 12 | 83 55 315 | | | 10 | Main bearing | Ramlager | 5 |
| 0340 | | | | | | Blue | Blå | |
| 0350 | 12 | 83 50 977 | | 208), 0,25MM, | 10 | Main bearing | Ramlager | 5 |
| 0360 | | | | | | Yellow | Gul | |
| 0370 | 12 | 83 55 323 | | 208), 0,25MM, | 10 | Main bearing | Ramlager | 5 |
| 0380 | | | | | | Green | Grön | |
| 0390 | 12 | 83 50 985 | | 208), 0,50MM, | 10 | Main bearing | Ramlager | 5 |
| 0400 | | | | | | White | Vit | |
| 0410 | 12 | 83 55 331 | | 208), 0,50MM, | 10 | Main bearing | Ramlager | 5 |
| 0420 | | | | | | Brown | Brun | |
| 0430 | 12 | 83 50 993 | | 208), 0,75MM | 10 | Main bearing | Ramlager | 5 |
| 0440 | 12 | 83 51 009 | | 208), 1,0MM | 10 | Main bearing | Ramlager | 5 |
| 0450 | | | | | | | | |
| 0460 | 13 | 83 47 270 | | | 2 | Thrust washer | Tryckbricka | 4 |
| 0470 | 14 | 83 62 386 | | | 1 | Flywheel | Svänghjul | 5 |
| 0480 | 15 | 83 65 058 | | | 1 | .Gear ring | .Kuggkrans | 5 |
| 0490 | 17 | 75 51 186 | | A | 1 | Companion disc | Medbringarskiva | 4 |
| 0500 | 18 | 83 46 868 | | | 1 | Ball bearing | Kullager | 4 |
| 0510 | 19 | 75 61 749 | | | 7 | Screw | Skruv | 5 |
| 0520 | 19 | *93 14 881* | | A NLS - USE 9059209 | 7 | Screw | Skruv | 2 |
| 0530 | 20 | 74 96 292 | | 50 ML | X | Nut lock | Gängsäkring | 5 |
| 0540 | | | | | | strong | stark | |
| 0550 | | | | | | red | röd | |

43. Engine -H004433.
44. Engine H004434-.
208. Undersize Underdimension



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-C14

## Oil pump, oil filter,
## Oljepump, oljefilter,

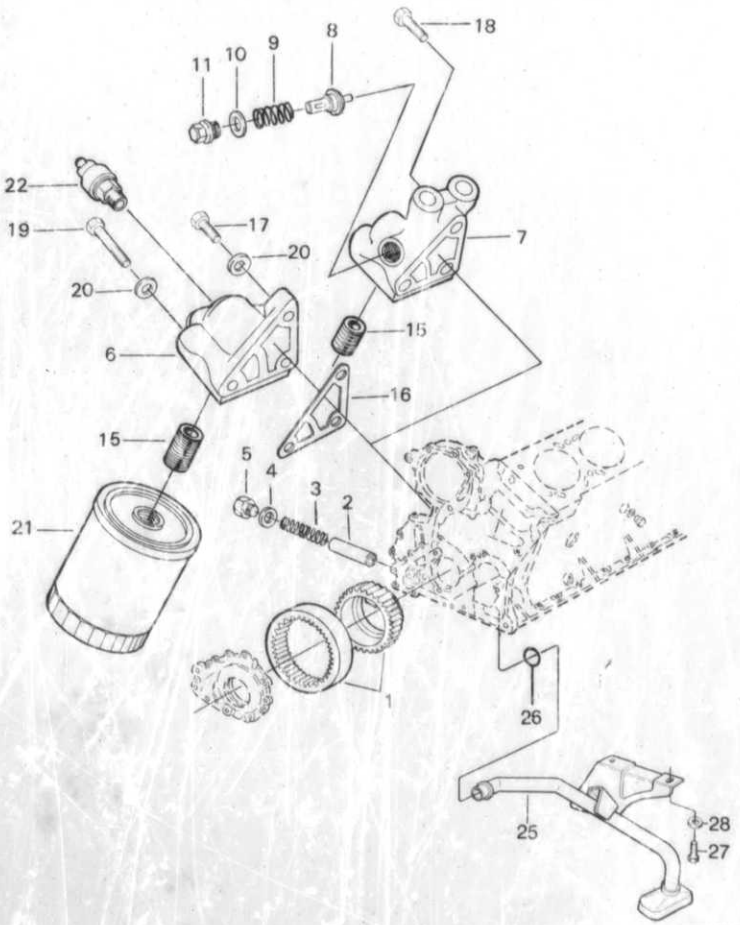


R 7713–900

| 0400 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *88 17 561* | | NLS - USE 9321779 | 1 | Pump kit | Pumpsats | 5 |
| 0020 | 2 | 75 08 328 | | | 1 | Brake piston | Bromskolv | 6 |
| 0030 | 3 | 93 09 998 | | | 1 | Spring | Fjäder | 6 |
| 0040 | 4 | 93 55 389 | | | 1 | Gasket | Packning | 4 |
| 0050 | 5 | 93 10 004 | | | 1 | Plug | Propp | 5 |
| 0060 | 6 | 75 60 048 | | | 1 | Intermediate section | Mellanstycke | 6 |
| 0070 | 7 | 75 05 464 | | 10), TURBO | 1 | Intermediate section | Mellanstycke | 6 |
| 0080 | 7 | 75 60 071 | | 11), TURBO | 1 | Intermediate section | Mellanstycke | 6 |
| 0090 | 8 | 93 01 540 | | | 1 | .Thermostat | .Termostat | 2 |
| 0100 | 9 | 93 00 591 | | | 1 | .Spring | .Fjäder | 5 |
| 0110 | 10 | *81 24 216* | | NLS - USE 9109182 | 1 | .Gasket | .Packning | 4 |
| 0120 | 11 | 75 20 172 | | | 1 | .Plug | .Propp | 5 |
| 0130 | 15 | 83 48 809 | | | 1 | .Junction pipe | .Skarvrör | 6 |
| 0140 | 16 | *93 08 180* | | 1986 NLS - USE 7566433 | 1 | Gasket | Packning | 4 |
| 0150 | 16 | 75 66 433 | | 1987- | 1 | Gasket | Packning | 4 |
| 0160 | 17 | 81 25 197 | | | 1 | Screw | Skruv | 5 |
| 0170 | 18 | 81 25 262 | | TURBO | 1 | Screw | Skruv | 5 |
| 0180 | 19 | 81 25 304 | | | 2 | Screw | Skruv | 5 |
| 0190 | 21 | *93 09 576* | | NLS - USE 9144445 | 1 | Filter | Filter | 1 |
| 0200 | 22 | *75 22 402* | | NLS - USE 9112459 | 1 | Oil pressure sensor | Oljetrycksgivare | 3 |
| 0210 | 22 | *93 09 386* | | 10), TURBO NLS - USE 8818528 | 1 | Oil pressure sensor | Oljetrycksgivare | 3 |
| 0220 | 22 | *75 22 402* | | 11), TURBO NLS - USE 9112459 | 1 | Oil pressure sensor | Oljetrycksgivare | 3 |
| 0230 | 25 | 75 26 874 | | M | 1 | Oil pipe | Oljesugrör | 6 |
| 0240 | 25 | 75 26 502 | | A | 1 | Oil pipe | Oljesugrör | 6 |
| 0250 | 26 | 75 72 698 | | | 1 | O-ring | O-ring | 2 |
| 0260 | 27 | *81 82 919* | | NLS - USE 8082935 | 2 | Screw | Skruv | 5 |
| 0270 | 28 | 79 16 497 | | | 2 | Washer | Bricka | 5 |
| 0280 | | | | | | | | |
| 0290 | | 88 18 528 | | 10), TURBO | X | Oil pressure sensor | Oljetrycksgivare | |
| 0300 | | | | See page 2-187, 1-I20 | | | | |
| 0310 | | 88 17 348 | | B20°C,I | X | Service kit | Servicesats | 1 |
| 0320 | | | | See page 2-197, 1-J06 | | | | |
| 0330 | | 88 17 678 | | B201TURBO | X | Service kit | Servicesats | 1 |
| 0340 | | | | See page 2-197, 1-J06 | | | | |
| 0350 | | 88 17 686 | | B202TURBO | X | Service kit | Servicesats | 1 |
| 0360 | | | | See page 2-197, 1-J06 | | | | |

10. Ch. -G2010830, -G3007909, -G7012542.
11. Ch. G2010831-, G3007910-, G7012543-



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-C16

## *Oil pipe engine TURBO*

## *Oljerör motor TURBO*

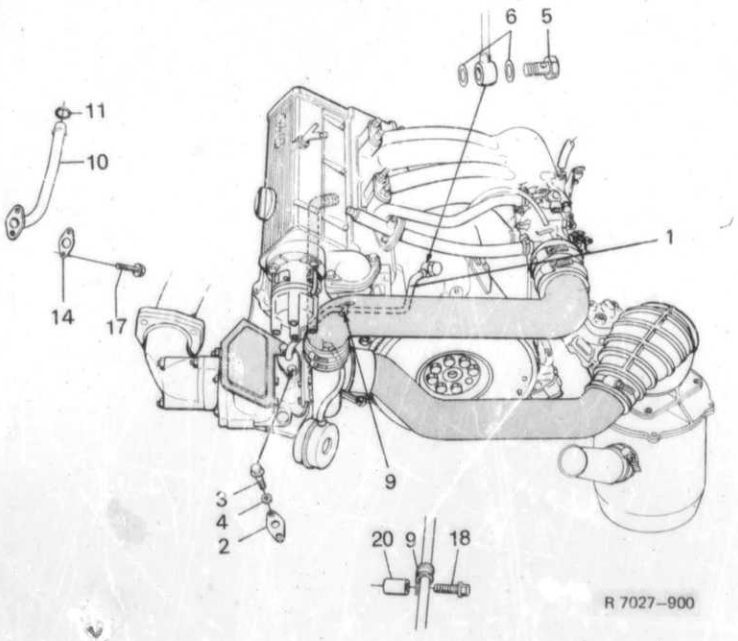



| 0450 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 17 568 | | | 1 | Tube | Rör | 5 |
| 0020 | 1 | *75 05 878* | | B202 NLS - USE 8859480 | 1 | Tube | Rör | 5 |
| 0030 | 2 | *23 03 279* | | 1986 NLS - USE 7507700 | 1 | Gasket | Packning | 4 |
| 0040 | 2 | 75 07 700 | | 1987- | 1 | Gasket | Packning | 4 |
| 0050 | 3 | 81 25 163 | | | 1 | Screw | Skruv | 5 |
| 0060 | 4 | 80 29 985 | | | 2 | Washer | Bricka | 5 |
| 0070 | 5 | 81 23 903 | | | 1 | Banjo screw | Banjoskruv | 5 |
| 0080 | 6 | 81 24 141 | | | 2 | Seal | Tätning | 5 |
| 0090 | 9 | 17 54 506 | | | 2 | Clamp | Klammer | 5 |
| 0100 | 10 | 75 05 258 | | | 1 | Oil pipe | Oljerör | 4 |
| 0110 | 11 | 75 02 263 | | | 1 | O-ring | O-ring | 2 |
| 0120 | 14 | 75 18 970 | | | 1 | Gasket | Packning | 4 |
| 0130 | 17 | 81 25 163 | | | 2 | Screw | Skruv | 5 |
| 0140 | 18 | 81 25 205 | | | 1 | Screw | Skruv | 5 |
| 0150 | 20 | 75 19 481 | | | 1 | Spacer sleeve | Distanshylsa | 5 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

2 GROUP INDEX

| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

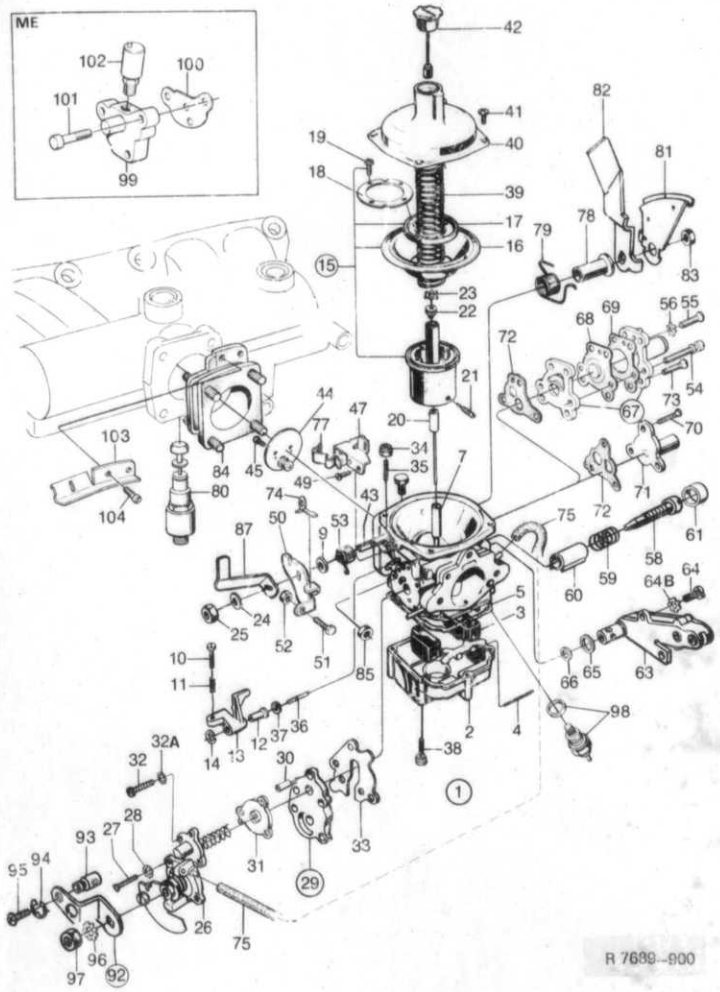


Fuel system

# 1-C18 Carburettor SOLEX

Bränslesystem

## Förgasare SOLEX

| 05:0 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 17 907 | | 34) | 1 | Carburettor | Förgasare | 5 |
| 0020 | 1 | 75 17 956 | | 35) | 1 | Carburettor | Förgasare | 5 |
| 0030 | 2 | 83 69 894 | | | 1 | .Float chamber | .Flottörhus | 6 |
| 0040 | 3 | 83 10 393 | | | 1 | .Float | .Flottör | 5 |
| 0050 | 4 | 83 05 807 | | | 1 | .Float spindle | .Flottöraxel | 6 |
| 0060 | 5 | *83 05 849* | | NLS - USE 9321613 | 1 | .Gasket | .Packning | 4 |
| 0070 | 7 | 83 65 850 | | | 1 | .Nozzle | .Munstycke | 4 |
| 0080 | 9 | *83 66 809* | | NLS | 1 | .Washer | .Bricka | 5 |
| 0090 | 10 | 83 61 743 | | | 1 | .Idle screw | .Tomgångsskruv | |
| 0100 | 11 | 83 61 768 | | | 1 | .Spring | .Fjäder | 5 |
| 0110 | 12 | 83 61 735 | | | 1 | .Bushing | .Bussning | 5 |
| 0120 | 13 | 83 66 411 | | | 1 | .Lever | .Hävarm | 5 |
| 0130 | 14 | 83 61 776 | | | 1 | .Lock ring | .Låsring | 5 |
| 0140 | 15 | 93 06 317 | | | 1 | .Piston | .Kolv | 5 |
| 0150 | 16 | 83 88 670 | | | 1 | ..Diaphragm | ..Membran | 1 |
| 0160 | 17 | *83 51 330* | | NLS | 1 | ..Bracket | ..Hållare | 6 |
| 0170 | 18 | 83 05 633 | | | 1 | ..Washer | ..Bricka | 6 |
| 0180 | 19 | 83 05 641 | | | 4 | ..Screw | ..Skruv | 5 |
| 0190 | 20 | 83 66 312 | | | 1 | .Metering needle | .Bränslenål | 4 |
| 0200 | 21 | 83 64 200 | | | 1 | .Lock screw | .Låsskruv | 5 |
| 0210 | 22 | 93 08 792 | | | 1 | .Screw | .Skruv | 3 |
| 0220 | 23 | 83 64 192 | | | 1 | .Lock ring | .Låsring | 3 |
| 0230 | 24 | *83 05 328* | | NLS | 1 | .Washer | .Bricka | 5 |
| 0240 | 25 | 83 05 344 | | | 1 | .Nut | .Mutter | 5 |
| 0250 | 26 | 75 21 669 | | | 1 | .Choke | .Choke | 6 |
| 0260 | 27 | 93 52 071 | | | 2 | .Screw | .Skruv | 5 |
| 0270 | 28 | *83 05 484* | | NLS - USE 8352387 | 2 | .Washer | .Bricka | 5 |
| 0280 | 29 | 75 21 651 | | | 1 | .Choke | .Choke | 6 |
| 0290 | 30 | 75 08 732 | | | 3 | ..Sleeve | ..Hylsa | 6 |
| 0300 | 31 | 75 09 136 | | | 1 | ..Diaphragm | ..Membran | 4 |
| 0310 | 32 | 79 72 789 | | | 3 | ..Screw | ..Skruv | 5 |
| 0320 | 32A | 75 15 802 | | | 3 | ..Washer | ..Bricka | 5 |
| 0330 | 33 | *75 08 203* | | NLS - USE 7588809 | 1 | .Gasket | .Packning | 4 |
| 0340 | 34 | 83 64 069 | | | 1 | .Nut | .Mutter | 3 |
| 0350 | 35 | 83 64 051 | | | 1 | .Screw | .Skruv | 5 |
| 0360 | 36 | 93 55 777 | | | 1 | .Shaft | .Axel | 6 |
| 0370 | 37 | 93 56 114 | | | 1 | .Washer | .Bricka | 5 |
| 0380 | 38 | 83 69 902 | | | 6 | .Screw | .Skruv | 5 |
| 0390 | 39 | 83 05 658 | | | 1 | .Return spring | .Returfjäder | 6 |
| 0400 | 40 | 83 05 666 | | | 1 | .Cover | .Lock | 6 |
| 0410 | 41 | 83 08 892 | | | 4 | .Screw | .Skruv | 5 |
| 0420 | 42 | 93 59 142 | | | 1 | .Damping piston | .Dämpkolv | 5 |
| 0430 | 43 | 83 61 602 | | | 1 | .Shutter shaft | .Spjällaxel | 6 |
| 0440 | 44 | 75 60 915 | | | 1 | .Throttle | .Trottel | 6 |
| 0450 | 45 | 83 05 369 | | | 2 | .Screw | .Skruv | 5 |
| 0460 | 47 | 75 61 491 | | | 1 | .Bracket | .Fäste | 6 |
| 0470 | 49 | 83 22 364 | | | 1 | .Screw | .Skruv | 5 |
| 0480 | 50 | 93 52 105 | | | 1 | .Stop arm | .Stopparm | 6 |
| 0490 | 51 | 83 05 294 | | | 1 | ..Idle screw | ..Tomgångsskruv | 5 |
| 0500 | 52 | 83 05 302 | | | 1 | ..Lock nut | ..Låsmutter | 5 |
| 0510 | 53 | 83 66 304 | | | 1 | .Return spring | .Returfjäder | 5 |
| 0520 | 54 | 83 08 983 | | 34) | 2 | .Screw | .Skruv | |
| 0530 | 55 | 83 09 031 | | 34) | 1 | .Screw | .Skruv | 5 |
| 0540 | 56 | *83 09 049* | | NLS | 1 | .Star washer | .Taggbricka | 5 |
| 0550 | 58 | 75 03 188 | | 35) | 1 | .Screw | .Skruv | 5 |
| 0560 | 59 | 75 02 958 | | 35) | 1 | .Spring | .Fjäder | 3 |
| 0570 | 60 | 75 02 966 | | 35) | 1 | .Sleeve | .Hylsa | 6 |
| 0580 | 61 | 75 02 974 | | CH | 1 | .Plug | .Plugg | 5 |
| 0590 | 63 | 93 07 778 | | | 1 | .Temperature compensator | .Temperaturkompensator | 5 |
| 0600 | 64 | 83 09 080 | | | 2 | .Screw | .Skruv | 5 |
| 0610 | 64A | 83 09 098 | | | 2 | .Star washer | .Taggbricka | 5 |

34. For cars without EGR. För bilar utan EGR.
35. For cars with EGR. För bilar med EGR.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

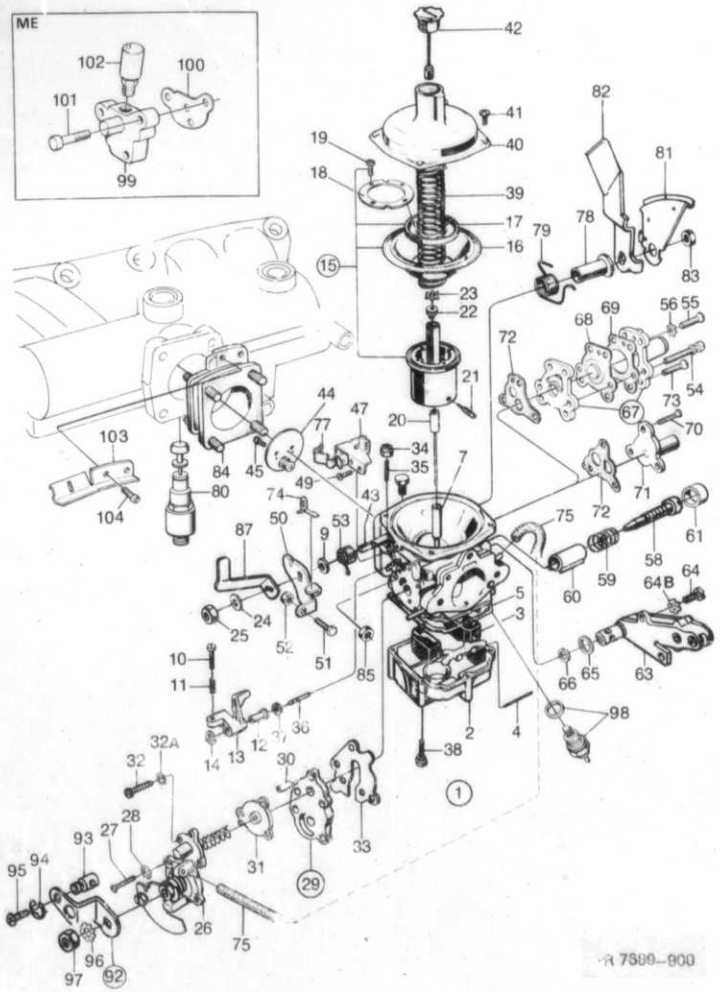


| 0500 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0620 | 65 | 83 09 064 | | | 1 | .Seal | .Tätning | 4 |
| 0630 | 66 | 83 09 072 | | | 1 | .Seal | .Tätning | 4 |
| 0640 | 67 | 83 65 546 | | 34) | 1 | .Valve | .Ventil | 5 |
| 0650 | 68 | 75 19 572 | | | 1 | ..Diaphragm | ..Membran | 1 |
| 0660 | 69 | 75 19 580 | | | 2 | ..Gasket | ..Packning | 4 |
| 0670 | 70 | 83 69 654 | | 35) | 3 | .Screw | .Skruv | 5 |
| 0680 | 71 | *83 69 910* | | 35) NLS | 1 | .Spring retainer | .Fjäderhållare | 6 |
| 0690 | 72 | 83 69 647 | | | 1 | .Gasket | .Packning | 4 |
| 0700 | 73 | 83 69 654 | | 34) | 3 | .Screw | .Skruv | 5 |
| 0710 | 74 | 93 10 186 | | | 1 | .Clip | .Clips | 5 |
| 0720 | 75 | 75 21 677 | | | 1 | Hose | Slang | 6 |
| 0730 | 77 | 83 52 395 | | | 1 | Clip | Clips | 5 |
| 0740 | 78 | 83 15 392 | | | 1 | Sleeve | Hylsa | 5 |
| 0750 | 79 | 83 55 026 | | | 1 | Spring | Fjäder | 5 |
| 0760 | 80 | 93 15 466 | | | 1 | Valve | Ventil | 3 |
| 0770 | 81 | 93 09 261 | | | 1 | Cam disc | Kamskiva | 5 |
| 0780 | 82 | 83 13 793 | | | 1 | Lever | Hävarm | 5 |
| 0790 | 83 | 80 74 288 | | | 1 | Nut | Mutter | 5 |
| 0800 | 84 | *75 62 077* | | NLS - USE 7581473, 8322364, 8352295 | 1 | Flange | Fläns | 6 |
| 0800 | | | | | | | | |
| 0810 | 85 | *81 25 882* | | NLS - USE 8151326 | 8 | Nut | Mutter | 5 |
| 0820 | 87 | 93 13 131 | | 35) | 1 | Lever | Hävarm | 5 |
| 0830 | 92 | 75 61 111 | | | 1 | Lever | Hävarm | 5 |
| 0840 | 93 | 83 22 166 | | | 1 | .Sleeve | .Hylsa | 5 |
| 0850 | 94 | *81 23 473* | | NLS - USE 7936016 | 1 | .E-circlip | .Spårryttare | 5 |
| 0860 | 95 | 80 19 531 | | | 1 | Screw | Skruv | 5 |
| 0870 | 96 | 83 51 405 | | | 1 | Washer | Bricka | 5 |
| 0880 | 97 | 93 13 008 | | | 1 | Nut | Mutter | 5 |
| 0890 | 98 | 83 61 644 | | | 1 | Needle valve set | Nålventilsats | 3 |
| 0900 | 99 | *75 21 453* | | AC NLS | 1 | Adapter | Adapter | 6 |
| 0910 | 100 | 83 69 647 | | AC | 1 | Gasket | Packning | 4 |
| 0920 | 101 | 83 08 983 | | AC | 3 | Screw | Skruv | |
| 0930 | 102 | 83 34 005 | | AC | 1 | Solenoid valve | Magnetventil | 3 |
| 0940 | 103 | 75 61 137 | | | 1 | Bracket | Konsol | 6 |
| 0950 | 104 | 80 97 859 | | | 2 | Screw | Skruv | 5 |
| 0960 | | | | | | | | |
| 0970 | | 83 64 234 | | See page 2-187, 1-I20 | X | Gasket kit | Packningsats | 4 |
| 0980 | | 83 64 242 | | See page 2-191, 1-I24 | X | Gasket kit | Packningsats | 4 |
| 0990 | | 83 64 259 | | See page 2-191, 1-I24 | X | Gasket kit | Packningsats | 4 |
| 1000 | | 75 09 128 | | See page 2-191, 1-I24 | X | Diaphragm | Membran | 4 |
| 1010 | | 88 18 767 | | See page 2-191, 1-I24 | X | Repair kit | Reparationssats | 6 |
| 1020 | | 83 61 644 | | See page 2-191, 1-I24 | X | Needle valve set | Nålventilsats | 3 |

34. For cars without EGR. För bilar utan EGR.
35. For cars with EGR. För bilar med EGR.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

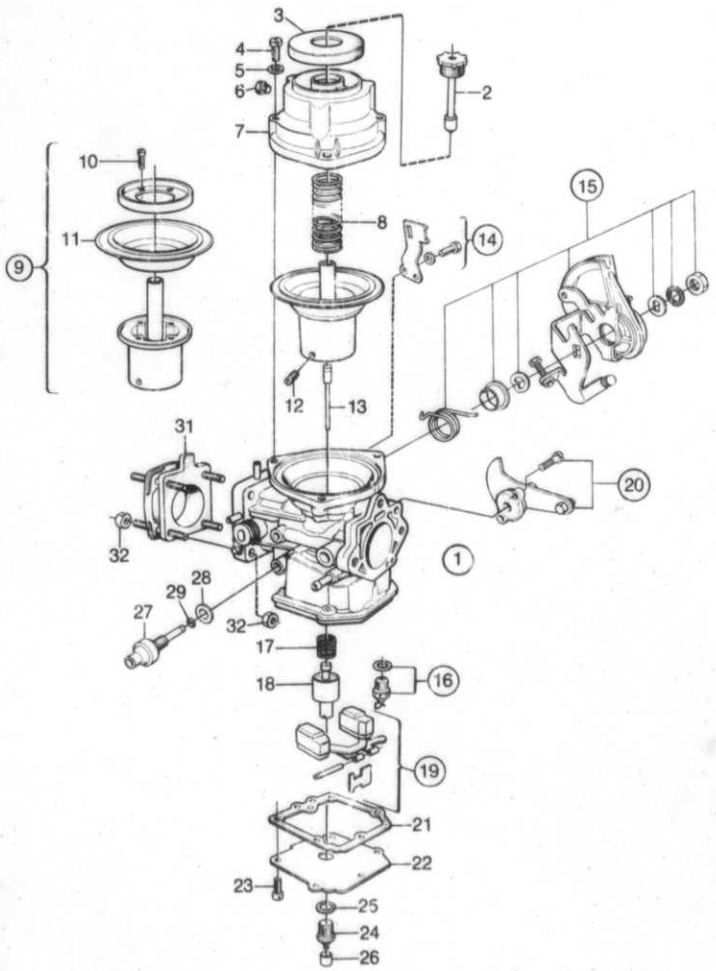


| 0510 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 81 033 | | | 1 | Carburettor | Förgasare | 5 |
| 0020 | 2 | 75 84 725 | | | 1 | .Damping piston | .Dämpkolv | 4 |
| 0030 | 3 | 75 84 717 | | | 1 | .Cover | .Lock | 6 |
| 0040 | 4 | 75 84 691 | | | 1 | .Screw | .Skruv | 5 |
| 0050 | 5 | 75 84 709 | | | 3 | .Washer | .Bricka | 5 |
| 0060 | 6 | 75 84 683 | | | 1 | .Screw | .Skruv | 5 |
| 0070 | 7 | 75 84 675 | | | 1 | .Carburettor cover | .Förgasarlock | 6 |
| 0080 | 8 | 75 84 667 | | | 1 | .Spring | .Fjäder | 6 |
| 0090 | 9 | 75 84 618 | | | 1 | .Piston | .Kolv | 5 |
| 0100 | 10 | 75 84 634 | | | 4 | ..Screw | ..Skruv | 5 |
| 0110 | 11 | 75 84 626 | | | 1 | ..Diaphragm | ..Membran | 1 |
| 0120 | 12 | 75 84 659 | | | 1 | .Screw | .Skruv | 5 |
| 0130 | 13 | 75 84 642 | | | 1 | .Metering needle | .Bränslenål | 4 |
| 0140 | 14 | 75 84 733 | | | 1 | .Bracket | .Fäste | 6 |
| 0150 | 15 | 75 84 493 | | | 1 | .Lever | .Hävarm | 5 |
| 0160 | 16 | 75 84 535 | | | 1 | .Float valve | .Flottörventil | 3 |
| 0170 | 17 | 75 84 519 | | | 1 | .Spring | .Fjäder | 3 |
| 0180 | 18 | 75 84 527 | | | 1 | .Nozzle | .Munstycke | 4 |
| 0190 | 19 | 75 84 543 | | | 1 | .Float | .Flottör | 5 |
| 0200 | 20 | 75 84 501 | | | 1 | .Choke | .Choke | 6 |
| 0210 | 21 | 75 84 550 | | | 1 | .Gasket | .Packning | 3 |
| 0220 | 22 | 75 84 568 | | | 1 | .Cover | .Lock | 6 |
| 0230 | 23 | 75 84 600 | | | 6 | .Screw | .Skruv | 5 |
| 0240 | 24 | 75 84 576 | | | 1 | .Adjustment screw | .Justerskruv | 3 |
| 0250 | 25 | 75 84 584 | | | 1 | .O-ring | .O-ring | 2 |
| 0260 | 26 | 75 37 806 | | | 1 | .Plug | .Plugg | 5 |
| 0270 | 27 | 75 84 741 | | | 1 | .Valve | .Ventil | 5 |
| 0280 | 28 | 75 84 758 | | | 1 | .Gasket | .Packning | 4 |
| 0290 | 29 | 75 84 766 | | | 1 | .O-ring | .O-ring | 2 |
| 0300 | 30 | 75 84 485 | | | 1 | .Fuel filter | .Bränslefilter | 5 |
| 0310 | 31 | 75 81 473 | | | 1 | Flange | Fläns | 6 |
| 0320 | 32 | *81 25 882* | | -1987 NLS - USE 8151326 | 8 | Nut | Mutter | 5 |
| 0330 | 32 | 81 51 326 | | 1988- | 8 | Nut | Mutter | 5 |
| 0340 | 33 | 93 15 466 | | | 1 | Valve | Ventil | 6 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX

| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-C24

## Air cleaner carburettor engine

## Luftrenare förgasarmotor

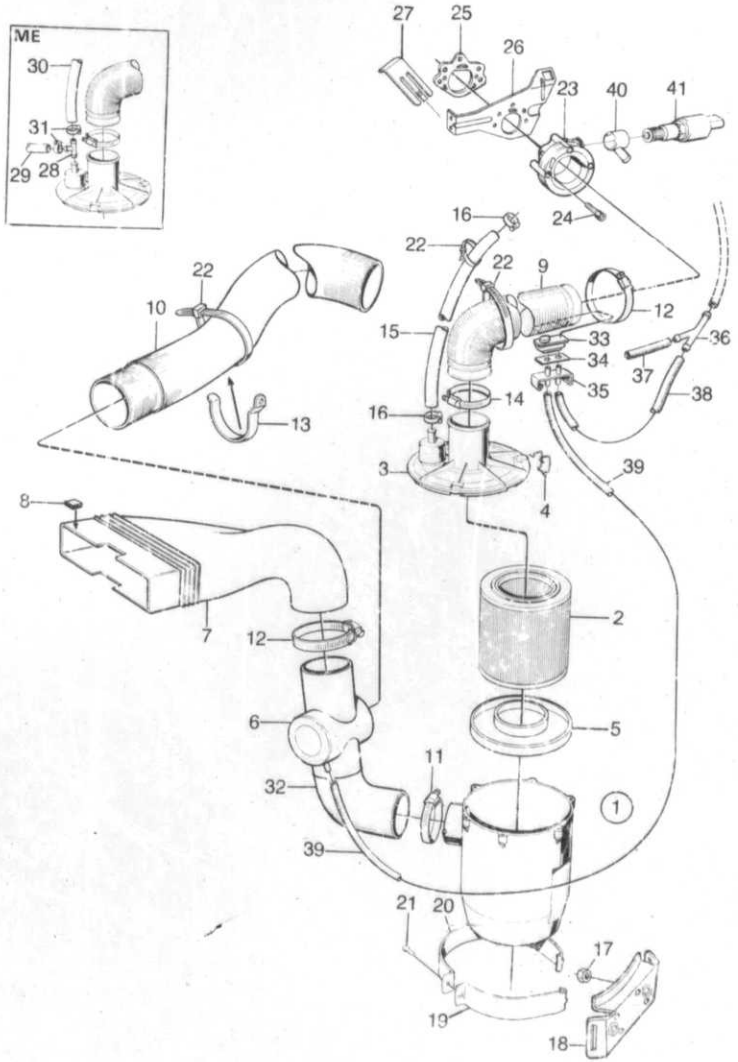


R 7893–900

| 0600 | Pos | Part No/Ärt nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | $ L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 83 17 893 | | | 1 | Air cleaner | Luftrenare | 5 |
| 0020 | 2 | 93 18 502 | | | 1 | . Air filter | . Luftfilter | 1 |
| 0030 | 3 | 83 27 678 | | | 1 | . Cover | . Lock | 6 |
| 0040 | 4 | 83 18 339 | | | 3 | . Clamp | . Klammer | 5 |
| 0050 | 5 | 83 17 919 | | | 1 | . Insert | . Insats | 6 |
| 0060 | 6 | 75 29 852 | | | 1 | Throttle body | Spjällhus | 5 |
| 0070 | 7 | 75 36 576 | | (7531197) | 1 | Tube | Rör | 5 |
| 0080 | 8 | 93 19 526 | | | 4 | Clamp | Klammer | 5 |
| 0090 | 9 | 75 28 598 | | | 1 | Pipe end | Stos | 5 |
| 0100 | 10 | 75 29 845 | | | 1 | Hose | Slang | 3 |
| 0110 | 10 | 75 29 183 | | EU, GB | 1 | Hose | Slang | 3 |
| 0120 | 11 | 79 70 148 | | | 2 | Hose clamp | Slangklamma | 5 |
| 0130 | 12 | 79 70 163 | | | 2 | Hose clamp | Slangklamma | 5 |
| 0140 | 13 | 93 41 173 | | | 1 | Clamp | Klammer | 5 |
| 0150 | 14 | 83 27 561 | | | 1 | Clamp | Klammer | 5 |
| 0160 | 15 | 83 26 480 | | | 1 | Hose | Slang | 4 |
| 0170 | 16 | 79 70 064 | | | 2 | Hose clamp | Slangklamma | 5 |
| 0180 | 17 | 80 29 555 | | -1987 | 2 | Nut | Mutter | 5 |
| 0190 | 17 | 81 51 227 | | 1988- | 2 | Nut | Mutter | 5 |
| 0200 | 18 | 92 88 432 | | | 1 | Bracket | Fäste | 5 |
| 0210 | 19 | 83 21 044 | | | 1 | Tensioning band | Spännband | 5 |
| 0220 | 20 | 83 21 051 | | | 1 | Tensioning band | Spännband | 5 |
| 0230 | 21 | 80 19 945 | | | 1 | Screw | Skruv | 5 |
| 0240 | 22 | 79 71 880 | | | 2 | Tensioning band | Spännband | 4 |
| 0250 | 23 | 83 79 020 | | 36) | 1 | Attaching ring | Fästring | 6 |
| 0260 | 23 | 75 80 244 | | 37) | 1 | Flange | Fläns | 6 |
| 0270 | 24 | 79 62 442 | | 36) | 3 | Screw | Skruv | 5 |
| 0280 | 24 | 80 98 139 | | 37) | 3 | Screw | Skruv | 5 |
| 0290 | 25 | 75 06 959 | | | 2 | Gasket | Packning | 4 |
| 0300 | 26 | 75 20 067 | | 36) | 1 | Bracket | Konsol | 6 |
| 0310 | 26 | 75 80 574 | | 37) | 1 | Bracket | Fäste | 6 |
| 0320 | 27 | 93 62 542 | | | 1 | Plate | Plåta | 6 |
| 0330 | 28 | 83 17 828 | | ME | 1 | Nipple | Nippel | 5 |
| 0340 | 29 | 75 26 429 | | ME | 1 | Hose | Slang | 4 |
| 0350 | 30 | 75 26 411 | | ME | 1 | Hose | Slang | 4 |
| 0360 | 31 | 79 76 543 | | ME | 2 | Hose clamp | Slangklamma | 5 |
| 0370 | 32 | 75 29 860 | | | 1 | Pipe end | Stos | 5 |
| 0380 | 33 | 75 29 878 | | 1986 | 1 | Vacuum valve | Vakuumventil | 5 |
| 0390 | 33 | 75 36 931 | | 1987- | 1 | Vacuum valve | Vakuumventil | 5 |
| 0400 | 34 | 75 29 886 | | | 1 | Seal | Tätning | 5 |
| 0410 | 35 | 75 29 894 | | | 1 | Clip | Clips | 5 |
| 0420 | 36 | 85 09 002 | | | 1 | Tube | Rör | 2 |
| 0430 | 37 | 91 36 243 | | L=40 MM | 1 | Vacuum hose | Vakuumslang | 5 |
| 0440 | 38 | 91 36 243 | | 1986, L=335 MM | 1 | Vacuum hose | Vakuumslang | 5 |
| 0450 | 38 | 91 36 243 | | 1987-, L=400 MM | 1 | Vacuum hose | Vakuumslang | 5 |
| 0460 | 39 | 91 36 243 | | L=670 MM | 1 | Vacuum hose | Vakuumslang | 5 |
| 0470 | 40 | 75 80 582 | | 37) | 1 | Nipple | Nippel | 5 |
| 0480 | 41 | 75 81 317 | | 37) | 1 | Solenoid valve | Magnetventil | 5 |
| 0490 | | | | | | | | |
| 0500 | | 91 36 243 | | L=5000 MM | X | Vacuum hose | Vakuumslang | 5 |

36. For cars with SOLEX carburettor. För bil med SOLEX förgasare.
37. For cars with PIERBURG carburetor. För bilar med PIERBURG-förgasare.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

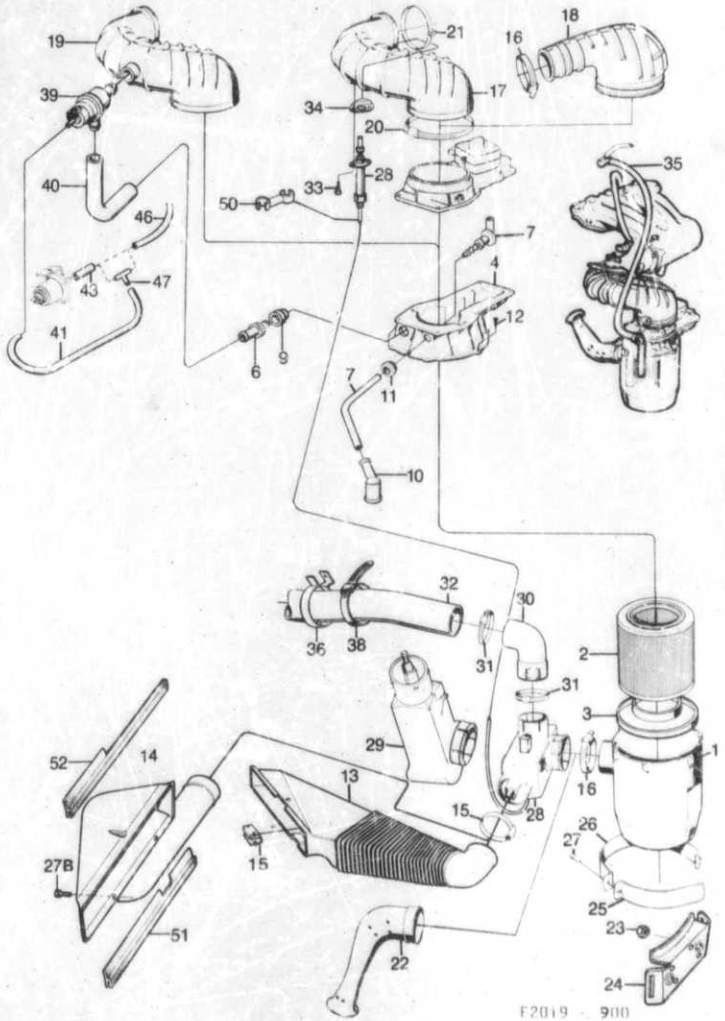


| 0650 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 12 999 | | | 1 | Air cleaner | Luftrenare | 6 |
| 0020 | 1 | 75 12 999 | | 42) | 1 | Air cleaner | Luftrenare | 6 |
| 0030 | 1 | 83 17 901 | | US | 1 | Air cleaner | Luftrenare | 6 |
| 0040 | 2 | 93 18 502 | | | 1 | Air filter | Luftfilter | 1 |
| 0050 | 3 | 83 17 919 | | | 1 | Insert | Insats | 6 |
| 0060 | 4 | 83 34 831 | | | 1 | Adapter | Mellandel | 3 |
| 0070 | 4 | 83 34 831 | | 75,76) | 1 | Adapter | Mellandel | 3 |
| 0080 | 4 | 93 03 892 | | TURBO | 1 | Adapter | Mellandel | 5 |
| 0090 | 7 | 93 03 900 | | | 1 | ▪Nipple | ▪Nippel | 5 |
| 0100 | 10 | 83 26 621 | | | 1 | ▪Rubber elbow | ▪Gummivinkel | 5 |
| 0110 | 11 | 83 25 656 | | | 1 | ▪Bushing | ▪Bussning | 4 |
| 0120 | 12 | 79 22 370 | | | 6 | Screw | Skruv | 5 |
| 0130 | 13 | 75 25 801 | | US | 1 | Tube | Rör | 5 |
| 0140 | 14 | 75 25 447 | | -1988 | 1 | Tube | Rör | 5 |
| 0150 | 14 | 89 78 306 | | 500) 1989- | 1 | Tube | Rör | 5 |
| 0160 | 15 | 93 19 526 | | | 4 | Clamp | Klammer | 5 |
| 0170 | 16 | 79 70 148 | | | 2 | Hose clamp | Slangklamma | 5 |
| 0180 | 17 | 93 32 081 | | | 1 | Air duct | Luftkanal | 4 |
| 0190 | 17 | 83 86 351 | | I, SW, EU | 1 | Connector | Anslutning | 5 |
| 0200 | 18 | 75 32 013 | | TURBO | 1 | Sleeve | Muff | 6 |
| 0210 | 18 | 75 36 642 | | 76) | 1 | Air duct | Lufttrumma | 5 |
| 0220 | 19 | 93 46 487 | | US | 1 | Air inlet | Luftintag | 4 |
| 0230 | 20 | 79 70 189 | | | 1 | Clamp | Klammer | 5 |
| 0240 | 21 | 79 70 155 | | | 1 | Hose clamp | Slangklamma | 5 |
| 0250 | 22 | 83 32 918 | | AU ALSO TURBO FOR AU | 1 | Snorkel | Snorkel | 5 |
| 0260 | 22 | 75 33 870 | | 42), I | 1 | Air inlet | Luftintag | 5 |
| 0270 | 23 | 80 29 555 | | -1987 | 2 | Nut | Mutter | 5 |
| 0280 | 23 | 81 51 227 | | 1988- | 2 | Nut | Mutter | 5 |
| 0290 | 24 | 92 88 432 | | | 1 | Bracket | Fäste | 5 |
| 0300 | 25 | 83 21 044 | | | 1 | Tensioning band | Spännband | 5 |
| 0310 | 26 | 83 21 051 | | | 1 | Tensioning band | Spännband | 5 |
| 0320 | 27 | 80 19 945 | | | 1 | Screw | Skruv | 5 |
| 0330 | 27B | *79 74 769* | | I, SW, EU NLS - USE 7972891 | 2 | Screw | Skruv | 5 |
| 0340 | 28 | 93 31 893 | | US, CA, JA, AU | 1 | Throttle body | Spjällhus | 5 |
| 0350 | 29 | 93 03 181 | | | 1 | Throttle body | Spjällhus | 5 |
| 0360 | 30 | 93 03 207 | | US, CA, JA, AU | 1 | Pipe end | Stos | 4 |
| 0370 | 31 | 79 70 130 | | | 2 | Hose clamp | Slangklamma | 5 |
| 0380 | 32 | 93 17 991 | | EU, GB | 1 | Hose | Slang | 3 |
| 0390 | 32 | 93 31 174 | | | 1 | Hose | Slang | 3 |
| 0400 | 32 | 75 29 191 | | US, CA, JA | 1 | Hose | Slang | 3 |
| 0410 | 33 | *79 22 289* | | NLS - USE 7965684 | 2 | Screw | Skruv | 5 |
| 0420 | 34 | 93 32 057 | | | 1 | Washer | Bricka | 5 |
| 0430 | 35 | 83 26 480 | | | 1 | Hose | Slang | 4 |
| 0440 | 36 | 93 41 173 | | | 1 | Clamp | Klammer | 5 |
| 0450 | 38 | 79 71 906 | | US | 1 | Tensioning band | Spännband | 5 |
| 0460 | 39 | 93 46 206 | | -1988, US | 1 | Vacuum valve | Vakuumventil | 4 |
| 0470 | 39 | 93 46 206 | | 132,500) 1989-, I, SW,EU | 1 | Vacuum valve | Vakuumventil | 4 |
| 0480 | 40 | 93 46 461 | | US | 1 | Hose | Slang | 4 |
| 0490 | 41 | 91 36 243 | | -1988, L=650MM,M, US, JA | 1 | Vaccum hose | Vakuumslang | 5 |
| 0500 | 43 | 91 36 243 | | -1988, L=30 MM, M, US,JA | 1 | Vaccum hose | Vakuumslang | 5 |
| 0510 | 46 | 91 36 243 | | -1988, L=240 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0520 | 46 | 75 12 346 | | 500,132) 1989-, L=500 MM | 1 | Hose | Slang | 5 |
| 0530 | 47 | 83 66 791 | | -1988 | 1 | Pipe | Rör | 4 |
| 0540 | 48 | 79 71 880 | | | 2 | Tensioning band | Spännband | 4 |
| 0550 | 50 | 93 45 257 | | | 2 | Clip | Clips | 5 |
| 0560 | 51 | *75 12 890* | | -1988, TURBO NLS | 1 | Seal | Tätning | 4 |
| 0570 | 51 | 75 39 125 | | 1989-, TURBO | 1 | Rubber moulding | Gummilist | 4 |

42. EU with US specification. EU med US-specifikation.
75. For I with catalytic converter. För I med katalytisk reaktor.
76. For TURBO with catalytic converter. För TURBO med katalytisk reaktor.
132. With catalytic converter. Med katalytisk reaktor.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly. Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1--D04

## Air cleaner B201 I

## Luftrenare B201 I

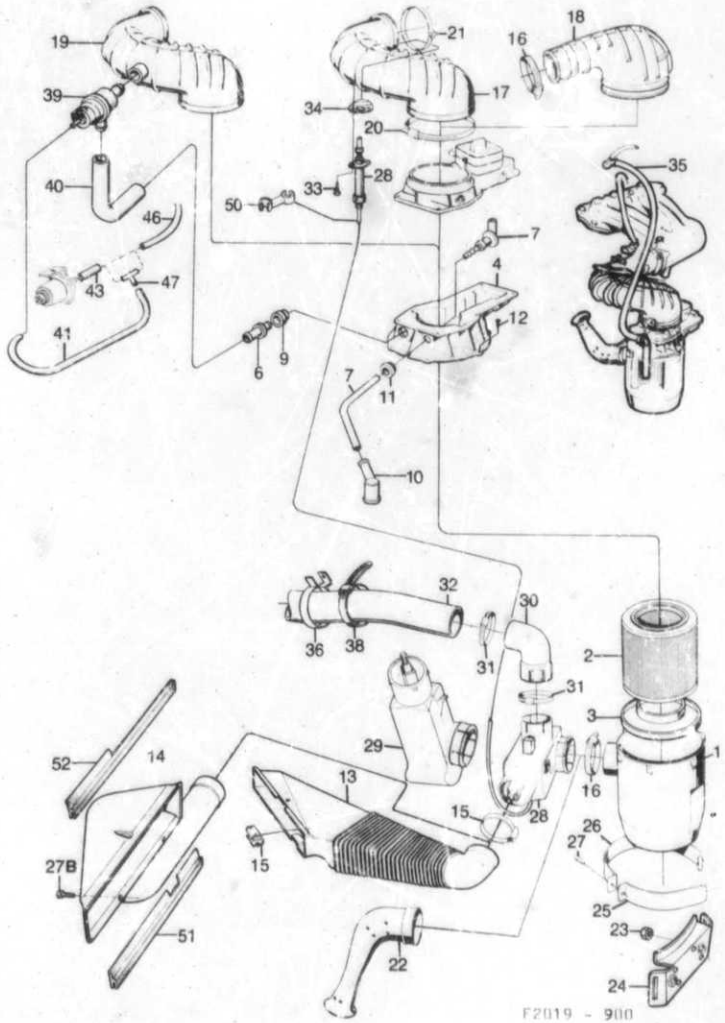



| 0650 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0580 | 52 | *75 12 916* | | -1988, TURBO NLS | 1 | Seal | Tätning | 4 |
| 0590 | 52 | 75 28 284 | | 1989-, TURBO | 1 | Rubber moulding | Gummilist | 4 |
| 0600 | | | | | | | | |
| 0610 | | 91 36 243 | | L=5000 MM | X | Vaccum hose | Vakuumslang | 5 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

2 GROUP INDEX

| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

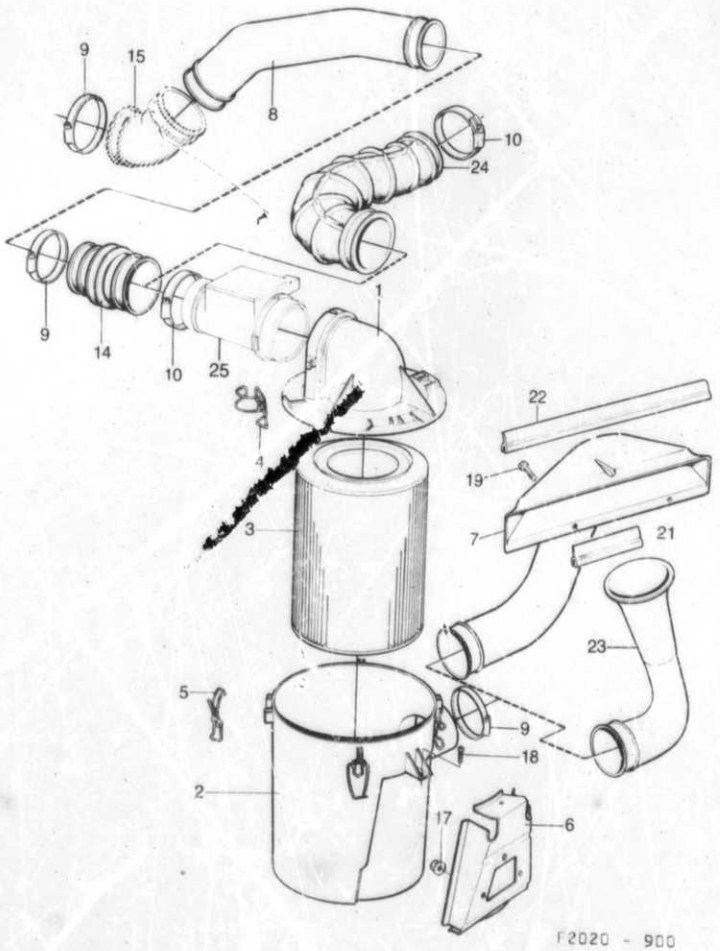


| 0675 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 12 957 | | | 1 | Air cleaner housing | Luftrenarhus | 6 |
| 0020 | 2 | 75 12 973 | | | 1 | Air cleaner housing | Luftrenarhus | 6 |
| 0030 | 3 | 75 14 722 | | | 1 | Air filter | Luftfilter | 1 |
| 0040 | 4 | 93 75 601 | | | 2 | Clamp | Klämmer | 6 |
| 0050 | 5 | 93 77 920 | | | 4 | Clamp | Klämmer | 6 |
| 0060 | 6 | *75 29 159* | | NLS - USE 8977803 | 1 | Retainer | Hållare | 5 |
| 0070 | 6 | 89 77 803 | | 500) 1989-, TURBO | 1 | Retainer | Hållare | 5 |
| 0080 | 7 | 75 25 447 | | -1988 TURBO | 1 | Tube | Rör | 5 |
| 0090 | 7 | 89 78 306 | | 500) 1989- TURBO | 1 | Tube | Rör | 5 |
| 0100 | 8 | 75 14 615 | | TURBO | 1 | Intake manifold | Inloppsrör | 5 |
| 0110 | 9 | 79 70 148 | | | 2 | Hose clamp | Slangklamma | 5 |
| 0120 | 10 | 79 70 155 | | | 2 | Hose clamp | Slangklamma | 5 |
| 0130 | 14 | 75 12 791 | | -1988 TURBO | 1 | Hose | Slang | 5 |
| 0140 | 14 | 89 77 795 | | 500) 1989-, TURBO | 1 | Hose | Slang | 5 |
| 0150 | 15 | | | See page 2-183, 1-I16 | | Hose | Slang | |
| 0160 | 17 | 80 29 555 | | -1987 | 3 | Nut | Mutter | 5 |
| 0170 | 17 | 81 51 227 | | 1988- | 3 | Nut | Mutter | 5 |
| 0180 | 18 | 79 72 839 | | | 1 | Screw | Skruv | 5 |
| 0190 | 19 | *79 74 769* | | TURBO NLS - USE 7922891 | 2 | Screw | Skruv | 5 |
| 0200 | 21 | *75 28 292* | | 55) NLS - USE 7539125 | 1 | Rubber moulding | Gummilist | 4 |
| 0210 | 21 | 75 39 125 | | 56) | 1 | Rubber moulding | Gummilist | 4 |
| 0220 | 22 | 75 28 342 | | TURBO | 1 | Rubber moulding | Gummilist | 4 |
| 0230 | 23 | 75 33 870 | | I | 1 | Air inlet | Luftintag | 5 |
| 0240 | 24 | 75 25 215 | | I | 1 | Hose | Slang | 4 |
| 0250 | 25 | | | See page 2-089, 1-E18 | | Mass air flow sensor | Luftmassamätare | |

55. Ch. -H3012133, -H7019005.
56. Ch. H3012134-, H7019006-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-D08

## *Fuel pump carburettor engine*

## *Bränslepump förgasarmotor*

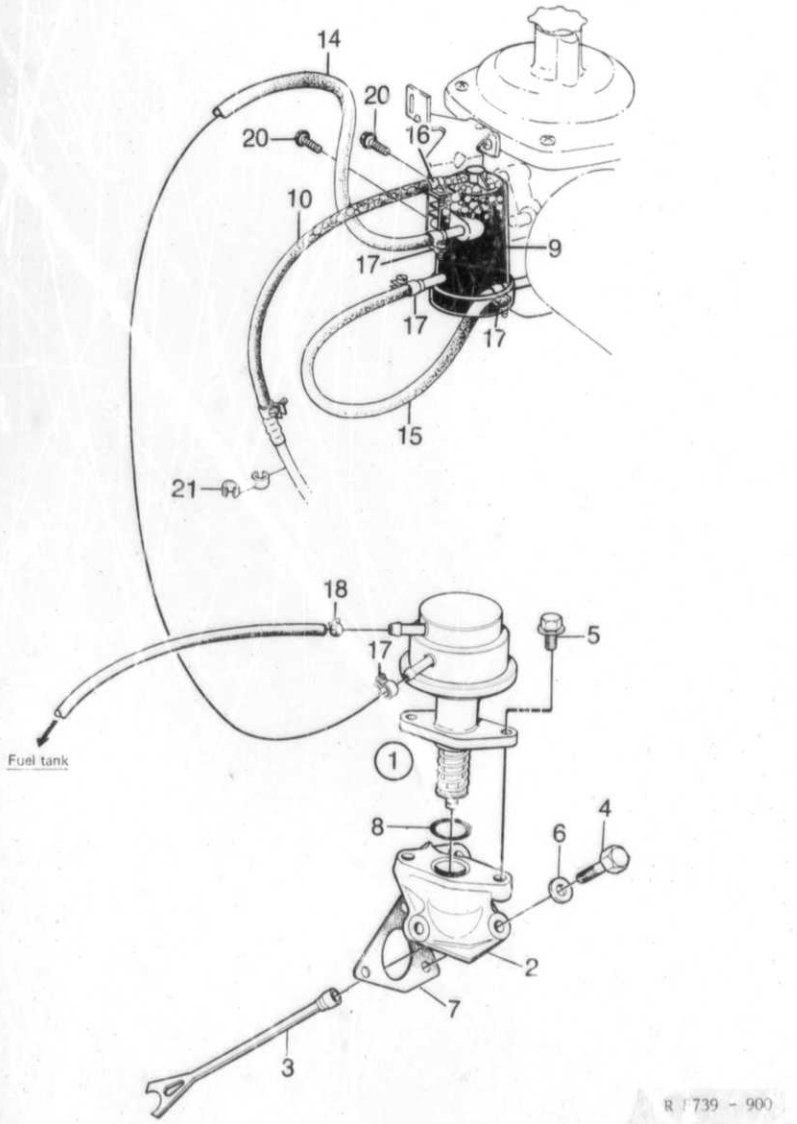


| 0700 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 22 733 | | | 1 | Fuel pump | Bränslepump | 2 |
| 0020 | 2 | 93 06 705 | | | 1 | Intermediate section | Mellanstycke | 6 |
| 0030 | 3 | 93 12 927 | | | 1 | Push rod | Tryckstång | 5 |
| 0040 | 4 | 80 82 968 | | | 3 | Screw | Skruv | 5 |
| 0050 | 5 | 81 25 163 | | | 2 | Screw | Skruv | 5 |
| 0060 | 6 | 80 29 985 | | | 3 | Washer | Bricka | 5 |
| 0070 | 7 | *93 06 721* | | 1986 NLS - USE 7566458 | 1 | Gasket | Packning | 2 |
| 0080 | 7 | 75 66 458 | | 1987- | 1 | Gasket | Packning | 2 |
| 0090 | 8 | 80 26 617 | | | 1 | Seal | Tätning | 3 |
| 0100 | 9 | 75 81 483 | | 36) | 1 | Separator | Avskiljare | 6 |
| 0110 | 9 | 75 86 795 | | 37), (7561325) | 1 | Separator | Avskiljare | 6 |
| 0120 | 10 | 93 63 284 | | | 1 | Hose | Slang | 4 |
| 0130 | 14 | 75 04 160 | | | 1 | Fuel hose | Bränsleslang | 4 |
| 0140 | 15 | 75 61 657 | | 36) | 1 | Hose | Slang | 4 |
| 0150 | 15 | *75 04 111* | | 37) NLS | 1 | Hose | Slang | 4 |
| 0160 | 16 | 83 59 275 | | | 2 | Hose clamp | Slangklamma | 5 |
| 0170 | 17 | 75 03 756 | | | 4 | Hose clamp | Slangklamma | 5 |
| 0180 | 18 | 79 68 308 | | | 1 | Hose clamp | Slangklamma | 5 |
| 0190 | 20 | 75 81 333 | | (7561707) | 2 | Screw | Skruv | 5 |
| 0200 | 21 | 93 45 257 | | 1987- | 1 | Clip | Clips | 5 |

36. For cars with SOLEX carburetor. För bilar med SOLEX-förgasare.
37. For cars with PIERBURG carburetor. För bilar med PIERBURG-förgasare.

R 8739 - 900




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

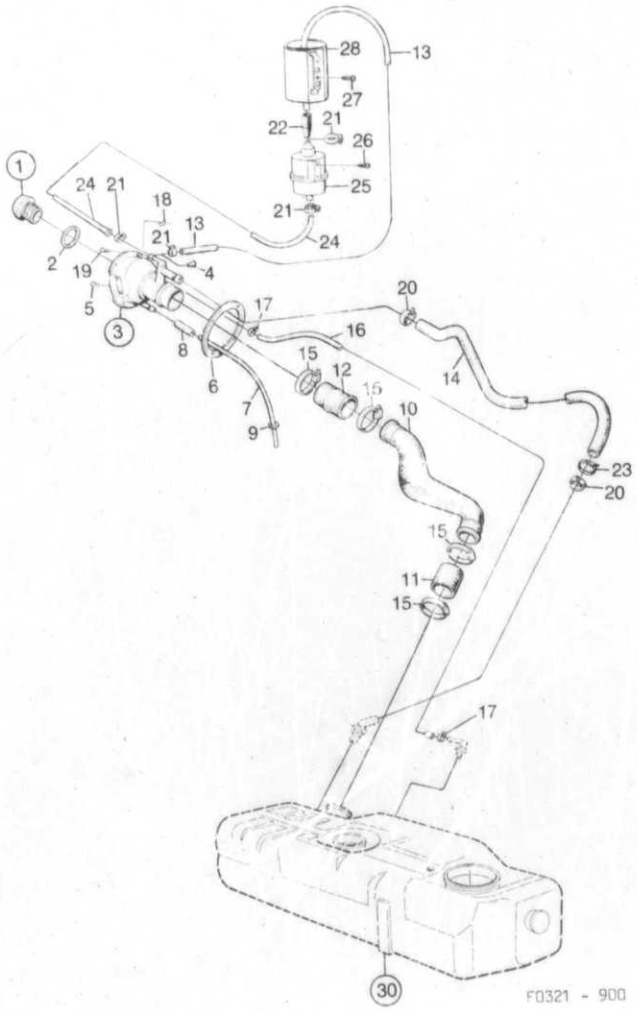


| 0760 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *93 92 705* | | 109), (7510530) NLS - USE 4391058 | 1 | Filler cap | Tanklock | 2 |
| 0020 | 1 | 89 77 837 | | 110)-1988 | 1 | Filler cap | Tanklock | 2 |
| 0030 | 1 | *89 82 209* | | 1989- NLS USE 4391058 | 1 | Filler cap | Tanklock | 2 |
| 0040 | 2 | 75 11 751 | | | 1 | .Gasket | .Packning | 4 |
| 0050 | 3 | 75 30 553 | | 135) | 1 | Filler pipe | Påfyllningsrör | 5 |
| 0060 | 3 | 93 35 118 | | 132) | 1 | Filler pipe | Påfyllningsrör | 5 |
| 0070 | 4 | 75 36 840 | | ELCD | 1 | .Plastic plug | .Plastplugg | 5 |
| 0080 | 5 | 93 15 475 | | | 2 | .Stop | .Stopp | 5 |
| 0090 | 6 | 93 49 838 | | | 1 | .Gasket | .Packning | 4 |
| 0100 | 7 | 83 23 941 | | | 1 | Draining pipe | Dräneringsrör | 6 |
| 0110 | 8 | 93 63 284 | | 2) L=52 MM | 1 | Hose | Slang | 4 |
| 0120 | 9 | 79 61 329 | | | 1 | Grommet | Genomföring | 5 |
| 0130 | 10 | 93 39 805 | | | 1 | Filler pipe | Påfyllningsrör | 5 |
| 0140 | 11 | 75 25 421 | | | 1 | Hose | Slang | 4 |
| 0150 | 12 | 75 25 439 | | | 1 | Hose | Slang | 4 |
| 0160 | 13 | 75 28 920 | | SN | 1 | Hose | Slang | 5 |
| 0170 | 13 | 75 28 912 | | CK | 1 | Hose | Slang | 5 |
| 0180 | 14 | 75 12 320 | | 71) | 1 | Hose | Slang | 5 |
| 0190 | 14 | 75 39 133 | | 72) | 1 | Hose | Slang | 5 |
| 0200 | 15 | *93 47 808* | | NLS - USE 4441689 | 4 | Hose clamp | Slangklamma | 5 |
| 0210 | 16 | 93 63 383 | | 2), L=950 MM | 1 | Hose | Slang | 5 |
| 0220 | 17 | 83 32 587 | | | 2 | Hose clamp | Slangklamma | 5 |
| 0230 | 18 | *83 15 467* | | -1988 NLS - USE 8978371 | 4 | Clip | Clips | 5 |
| 0240 | 18 | 89 78 371 | | 1989- | 4 | Nut | Mutter | 5 |
| 0250 | 19 | 79 70 536 | | | 4 | Screw | Skruv | 6 |
| 0260 | 20 | 79 70 072 | | | 2 | Hose clamp | Slangklamma | 5 |
| 0270 | 21 | 79 68 308 | | | 4 | Hose clamp | Slangklamma | 5 |
| 0280 | 22 | 83 34 880 | | 136) | 1 | Hose | Slang | 5 |
| 0290 | 23 | 79 71 872 | | | 1 | Tensioning band | Spännband | 5 |
| 0300 | 24 | *93 03 413* | | 73) CK NLS - USE 7539976 | 1 | Hose | Slang | 5 |
| 0310 | 24 | 75 39 976 | | 74) CK | 1 | Hose | Slang | 5 |
| 0320 | 24 | 93 63 243 | | SN | 1 | Hose | Slang | 5 |
| 0330 | 25 | 93 18 361 | | | 1 | Valve | Ventil | 5 |
| 0340 | 26 | *79 77 416* | | 170) NLS - USE 7922347 | 2 | Screw | Skruv | 5 |
| 0350 | 26 | 79 22 347 | | 171) | 2 | Screw | Skruv | 5 |
| 0360 | 27 | 79 72 359 | | | 2 | Screw | Skruv | 5 |
| 0370 | 28 | 83 33 007 | | | 1 | Protecting casing | Skyddskåpa | 5 |
| 0380 | 30 | | | | | SEE SECTION FUEL TANK | SE AVSNITT BRÄNSLETANK | |
| 0390 | | | | | | | | |
| 0400 | | 93 62 781 | | L=10M | X | Hose | Slang | 2 |
| 0410 | | 88 17 256 | | See page 2-191, 1-I24 | X | Fuel hose | Bränsleslang | 4 |

2. Manufactured by 93 62 781. Tillverkad av 93 62 781.
71. Ch -H2018264, -H7025946.
72. Ch H2018265-, H7025947-.
73. Ch -H7029732.
74. Ch H7029733-.
109. Ch. --J3019834, --J7026992.
110. Ch. J3019835-, J7026993-.
132. With catalytic converter. Med katalytisk reaktor.
135. Without catalytic converter. Utan katalytisk reaktor.
136. For cars with carbon filter. För bilar med kolfilter.
170. Ch. --K3016481, --K7020923.
171. Ch. K3016482-, K7020924-.



MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

Fuel system

# 1-D12 *Fuel tank carburettor engine*

Bränslesystem

***Bränsletank förgasarmotor***

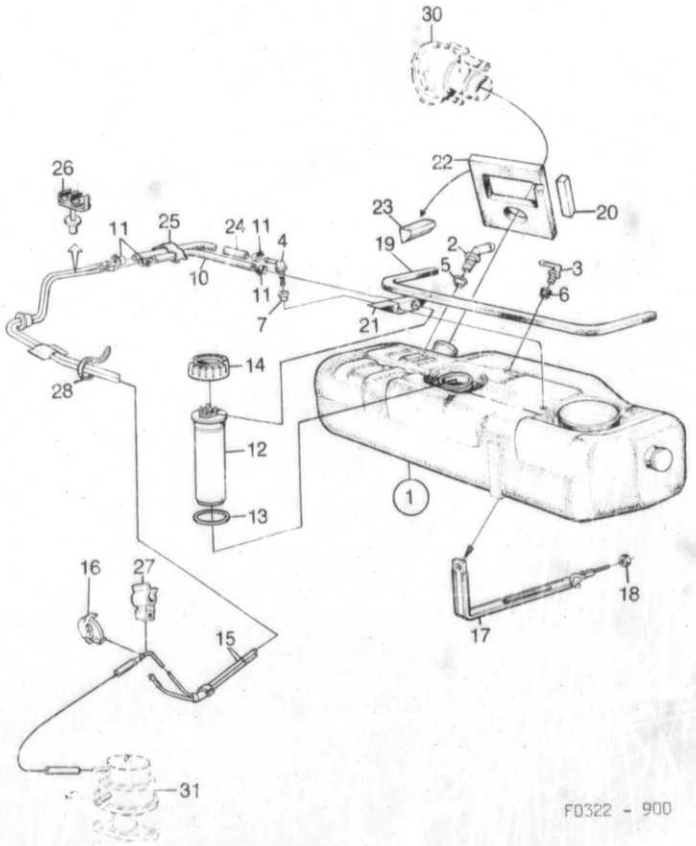


F0322 - 900

| 0770 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S i |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *75 10 076* | | 17) NLS - USE 7534639, 9392689 | 1 | Tank | Tank | 6 |
| 0020 | 1 | 75 34 639 | | 18,98) | 1 | Tank | Tank | 6 |
| 0030 | 1 | 89 76 458 | | 99) | 1 | Tank | Tank | 6 |
| 0040 | 2 | 93 29 491 | | | 1 | .Nipple | .Nippel | 4 |
| 0050 | 3 | 93 28 857 | | | 1 | .Connector | .Anslutning | 4 |
| 0060 | 4 | 93 28 873 | | 98) | 1 | .Nipple | .Nippel | 4 |
| 0070 | 4 | 93 78 357 | | 99) | 1 | .Nipple | .Nippel | 4 |
| 0080 | 5 | 93 24 021 | | | 1 | .Bushing | .Bussning | 5 |
| 0090 | 6 | 83 25 656 | | | 1 | .Bushing | .Bussning | 4 |
| 0100 | 7 | 83 25 696 | | 221) | 1 | .Bushing | .Bussning | 4 |
| 0110 | 7 | 93 24 021 | | | 1 | .Bushing | .Bussning | 5 |
| 0120 | 10 | 93 63 250 | | 2), L=520 MM | 1 | Hose | Slang | 5 |
| 0130 | 11 | 79 68 308 | | | 4 | Hose clamp | Slangklamma | 5 |
| 0140 | 12 | 93 61 957 | | | 1 | Fuel transmitter | Bränslegivare | 3 |
| 0150 | 13 | 93 68 846 | | 17) | 1 | Gasket | Packning | 3 |
| 0160 | 13 | 93 92 689 | | 18) | 1 | Gasket | Packning | 3 |
| 0170 | 14 | 93 93 950 | | | 1 | Nut | Mutter | 4 |
| 0180 | 15 | 75 34 522 | | 98) | 1 | Fuel pipe | Bränsleledning | 5 |
| 0190 | 15 | 89 76 417 | | 99) | 1 | Fuel pipe | Bränsleledning | 5 |
| 0200 | 16 | 93 28 346 | | | 1 | Bracket | Hållare | 6 |
| 0210 | 17 | 93 33 600 | | | 2 | Tensioning band | Spännband | 6 |
| 0220 | 18 | 80 74 288 | | | 2 | Nut | Mutter | 5 |
| 0230 | 19 | 93 49 929 | | | 1 | Seal | Tätning | 5 |
| 0240 | 20 | *85 72 752* | | NLS - USE 8585325 | 2 | Bracket | Hållare | 5 |
| 0250 | 21 | *93 29 855* | | NLS | 2 | Seal | Tätning | 5 |
| 0260 | 22 | 93 49 937 | | | 1 | Seal | Tätning | 5 |
| 0270 | 23 | *93 34 612* | | NLS | 1 | Seal | Tätning | 6 |
| 0280 | 24 | 93 63 [illegible] | | L=715 MM | 1 | Hose | Slang | 5 |
| 0290 | 25 | 93 49 94[illegible] | | | 2 | Clip | Clips | 5 |
| 0300 | 26 | 79 63 89[illegible] | | | 2 | Tube clamp | Rörklamma | 4 |
| 0310 | 27 | 75 11 256 | | | 1 | Clamp | Klammer | 5 |
| 0320 | 28 | 79 71 872 | | | 2 | Tensioning band | Spännband | 5 |
| 0330 | 30 | | | See page 2-057, 1-D10 | | Filler pipe | Påfyllningsrör | |
| 0340 | 31 | | | See page 2-055, 1-D08 | | Fuel pump | Bränslepump | |
| 0350 | | | | | | | | |
| 0360 | | 93 62 781 | | L=10M | X | Hose | Slang | 2 |
| 0170 | | 88 17 256 | | See page 2-191, 1-I24 | X | Fuel hose | Bränsleslang | 4 |

2. Manufactured by 93 62 781. Tillverkad av 93 62 781.
17. Ch. -G2015410, -G3010890, -G7015710.
18. Ch. G2015411-, G3010891-, G7015711-.
98. Ch. -J3003855, -J7004073.
99. Ch. J3003856-, J7004074-.
221. Part of 7510076, 7534639. Del av 7510076, 7534639.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX



| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

Fuel system

# 1-D14 Fuel tank -1988, engine B201I

Bränslesystem

**Bränsletank -1988, motor B201I**

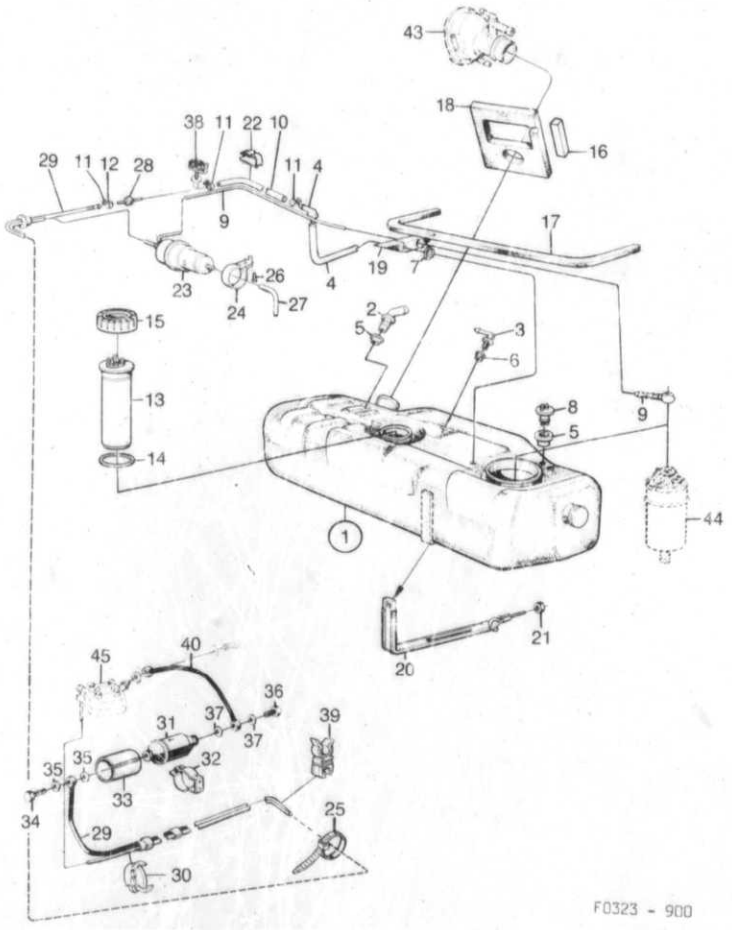


F0323 - 900

| 0790 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *75 27 542* | | 23), US, CA, JA, ME, FE NLS - USE 7534597, 9392689 | 1 | Tank | Tank | 6 |
| 0020 | 1 | 75 34 597 | | 24,100), US, CA, JA, ME, FE | 1 | Tank | Tank | 6 |
| 0040 | 1 | 89 76 425 | | 101), US, CA, JA, ME, FE | 1 | Tank | Tank | 6 |
| 0050 | 1 | *75 31 965* | | 21), AU NLS - USE 7534605, 9392689 | 1 | Tank | Tank | 6 |
| 0060 | 1 | 75 34 605 | | 22,100), AU | 1 | Tank | Tank | 6 |
| 0070 | 1 | 89 76 425 | | 101), AU | 1 | Tank | Tank | 6 |
| 0080 | 1 | 75 34 605 | | 132,102) | 1 | Tank | Tank | 6 |
| 0090 | 1 | 89 76 433 | | 132,103) | 1 | Tank | Tank | 6 |
| 0100 | 1 | *93 68 838* | | 19) NLS - USE 7534621, 9392689 | 1 | Tank | Tank | 6 |
| 0110 | 1 | 75 34 621 | | 20,96) | 1 | Tank | Tank | 6 |
| 0120 | 1 | 89 76 441 | | 97) | 1 | Tank | Tank | 6 |
| 0130 | 2 | 93 29 491 | | | 1 | .Nipple | .Nippel | 4 |
| 0140 | 3 | 93 28 857 | | | 1 | .Connector | .Anslutning | 4 |
| 0150 | 4 | 93 62 211 | | 209) | 1 | .Return pipe | .Returrör | 6 |
| 0160 | 4 | 93 24 138 | | 210) | 1 | .Nipple | .Nippel | 4 |
| 0170 | 4 | 89 77 159 | | 211) | 1 | .Nipple | .Nippel | 4 |
| 0180 | 4 | 89 76 961 | | 212) | 1 | .Nipple | .Nippel | 4 |
| 0190 | 5 | 93 24 021 | | | 2 | .Bushing | .Bussning | 5 |
| 0200 | 6 | 83 25 656 | | | 1 | .Bushing | .Bussning | 4 |
| 0210 | 7 | 83 25 656 | | 213) | 1 | .Bushing | .Bussning | 4 |
| 0220 | 7 | 93 24 021 | | | 1 | .Bushing | .Bussning | 5 |
| 0230 | 8 | 93 63 524 | | -1986 | 1 | .Connector | .Anslutning | 6 |
| 0240 | 8 | | | 1987- | 1 | Cable harness | Ledningsnät | |
| 0250 | | | | See page 3-000, 0-000 | | | | |
| 0260 | 9 | 75 13 972 | | | 1 | Fuel pipe | Bränsleledning | 5 |
| 0270 | 10 | 93 63 359 | | 2), L=715 MM | 1 | Hose | Slang | 5 |
| 0280 | 10 | 89 76 359 | | 104) | 1 | Fuel pipe | Bränsleledning | 5 |
| 0290 | 11 | 79 68 303 | | 96,100,102) | 3 | Hose clamp | Slangklamma | 5 |
| 0300 | 12 | 79 75 204 | | 96,100,102) | 1 | Hose clamp | Slangklamma | 5 |
| 0310 | 13 | 93 61 965 | | | 1 | Fuel transmitter | Bränslegivare | 3 |
| 0320 | 14 | 93 68 846 | | 19,21,23) | 1 | Gasket | Packning | 3 |
| 0330 | 14 | 93 92 689 | | 20,22,24) | 1 | Gasket | Packning | 3 |
| 0340 | 15 | 93 93 950 | | | 1 | Nut | Mutter | 4 |
| 0350 | 16 | *85 72 752* | | NLS - USE 8585325 | 2 | Bracket | Hållare | 5 |
| 0360 | 17 | 93 49 929 | | | 1 | Seal | Tätning | 5 |

2. Manufactured by 93 62 781. Tillverkad av 93 62 781.
19. Ch. -G2012680, -G3009463, -G7012942.
20. Ch. G2012681-, G3009464-, G7012943-.
21. Ch. -G2011239.
22. Ch. G2011240-.
23. Ch. -G2011367, -G3009405.
24. Ch. G2011368-, G3008406-.
96. Ch. --J3016429, --J7001819.
97. Ch. J3016430--, J7001820--.
100. Ch. --J3001527, --J7000897.
101. Ch. J3001528--, J7000898--.
102. Ch. --J3000891, --J7000828.
103. Ch. J3000892--, J7000829--.
104. Used together with 8976425, 8976433, 8976441, 8976458. Används tillsammans med 8976425, 8976433, 8976441, 8976458.
132. With catalytic converter. Med katalytisk reaktor.
209. Part of 75 27 542, 75 34 597. Del av 75 27 542, 75 34 597.
210. Part of 75 31 965, 75 34 605, 93 68 838, 75 34 621. Del av 75 31 965, 75 34 605, 93 68 838, 75 34 621.
211. Part of 89 76 433, 89 76 441. Del av 89 76 433, 89 76 441.
212. Part of 89 76 425. Del av 89 76 425.
213. Part of 75 27 542, 75 34 597, 75 31 965, 75 34 605, 93 68 838, 75 34 621. Del av 75 27 542, 75 34 597, 75 31 965, 75 34 605, 93 68 838, 75 34 621.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX



| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

Fuel system

# 1-D16 Fuel tank -1988, engine B201I

Bränslesystem

**Bränsletank -1988, motor B201I**

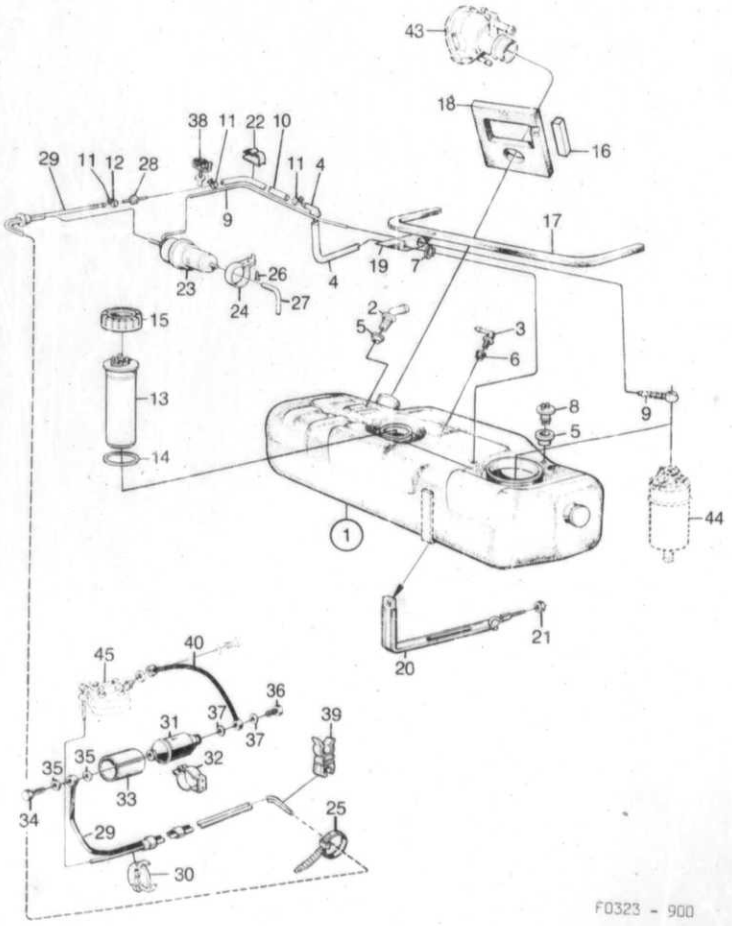


| 0790 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0370 | 18 | 93 49 937 | | | 1 | Seal | Tätning | 5 |
| 0380 | 19 | *93 29 855* | | NLS | 1 | Seal | Tätning | 5 |
| 0390 | 19 | 89 76 375 | | 214) | 1 | Seal | Tätning | 5 |
| 0400 | 20 | 93 33 600 | | | 2 | Tensioning band | Spännband | 6 |
| 0410 | 21 | 90 74 288 | | | 2 | Nut | Mutter | 5 |
| 0420 | 22 | 93 49 945 | | | 2 | Clip | Clips | 5 |
| 0430 | 23 | 75 25 181 | | | 1 | Fuel accumulator | Bränslackumulator | 5 |
| 0440 | 24 | 93 24 815 | | | 1 | Clamp | Klammer | 5 |
| 0450 | 25 | 79 71 872 | | | 3 | Tensioning band | Spännband | 5 |
| 0460 | 26 | *79 72 565* | | 61) NLS | 1 | Screw | Skruv | 5 |
| 0470 | 26 | 79 23 014 | | 62) | 1 | Screw | Skruv | 5 |
| 0480 | 27 | 93 28 899 | | | 1 | Protective pipe | Skyddsrör | 6 |
| 0490 | 28 | 75 25 124 | | 96,100,102) | 1 | Non-return valve | Backventil | 6 |
| 0500 | 29 | 75 27 039 | | 81,135) | 1 | Fuel pipe | Bränsleledning | 5 |
| 0510 | 29 | 89 76 391 | | 82,135) | 1 | Fuel pipe | Bränsleledning | 5 |
| 0520 | 29 | 75 27 047 | | 100), ME, FE | 1 | Fuel pipe | Bränsleledning | 5 |
| 0530 | 29 | 89 76 391 | | 101), ME, FE | 1 | Fuel pipe | Bränsleledning | 5 |
| 0540 | 29 | 75 26 783 | | 100,132) | 1 | Fuel pipe | Bränsleledning | 5 |
| 0550 | 29 | 89 76 383 | | 101,132) | 1 | Fuel pipe | Bränsleledning | 5 |
| 0560 | 30 | 83 28 346 | | | 1 | Bracket | Hållare | 6 |
| 0570 | 31 | 83 39 731 | | 49) | 1 | Fuel filter | Bränslefilter | 2 |
| 0580 | 31 | 93 28 519 | | 50,65) | 1 | Fuel filter | Bränslefilter | 2 |
| 0590 | 31 | 93 28 519 | | 132,65) | 1 | Fuel filter | Bränslefilter | 2 |
| 0600 | 31 | *93 33 790* | | 66,85) NLS - USE 4163853 | 1 | Fuel filter | Bränslefilter | 2 |
| 0610 | 31 | 89 78 561 | | 86) | 1 | Fuel filter | Bränslefilter | 2 |
| 0620 | 32 | 93 00 369 | | 49) | 1 | Bracket | Fäste | 6 |
| 0630 | 32 | 93 29 210 | | 50,65) | 1 | Bracket | Fäste | 6 |
| 0640 | 32 | 93 29 210 | | 132,65) | 1 | Bracket | Fäste | 6 |
| 0650 | 32 | 75 11 793 | | 66) | 1 | Bracket | Fäste | 6 |
| 0660 | 33 | *75 27 518* | | 49) NLS | 1 | Insulation | Isolering | 6 |
| 0670 | 34 | *83 22 927* | | NLS - USE 4374211 | 1 | Banjo bolt | Hålbult | 5 |
| 0680 | 35 | *83 26 712* | | 91) NLS - USE 4161162 | 2 | Seal | Tätning | 5 |
| 0690 | 35 | *89 77 365* | | 92,122) NLS - USE 4161162 | 2 | Seal | Tätning | 5 |
| 0700 | 35 | 89 81 961 | | 123) | 2 | Seal | Tätning | 5 |
| 0710 | 36 | *83 19 915* | | NLS - USE 4374203 | 1 | Banjo bolt | Hålbult | 5 |
| 0720 | 37 | *83 26 704* | | 91) NLS - USE 4443883 | 2 | Seal | Tätning | 5 |
| 0730 | 37 | *89 77 373* | | 92,122) NLS - USE 4443883 | 2 | Seal | Tätning | 5 |
| 0740 | 37 | *89 81 979* | | 123) NLS - USE 4443883 | 2 | Seal | Tätning | 5 |
| 0750 | 38 | 79 63 895 | | | 2 | Tube clamp | Rörklamma | 4 |
| 0760 | 39 | 75 11 256 | | | 1 | Clamp | Klammer | 5 |

49. Ch. -G3021451, -H2000676, -H7002160.
50. Ch. G3021452-, H2000677-, H7002161-.
61. Ch. -H2014003, -H3011528, -H7020563.
62. Ch. H2014004-, H3011529-, H7020564-.
65. Ch. -H2017192, -H3012361, -H7023610.
66. Ch. H2017193-, H3012362-, H7023611-.
81. Ch. -J3001527, -J7000897
82. Ch. J3001528-, J7000898-
85. Ch. -J3007496, -J7011211.
86. Ch. J3007497-, J7011212-.
91. Ch. -J3007293, -J7009835.
92. Ch. J3007294-, J7008836-.
96. Ch. --J3016429, --J7001819.
100. Ch. --J3001527, --J7000897.
101. Ch. J3001528--, J7000898--.
102. Ch. --J3000891, --J7000828.
122. Ch. --J3021711, --J7030129
123. Ch. J3021712--, J7030130--
132. With catalytic converter. Med katalytisk reaktor.
135. Without catalytic converter. Utan katalytisk reaktor.
214. Use together with 89 76 425, 89 76 433, 89 76 441. Används tillsammans med 89 76 425, 89 76 433, 89 76 441.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-D18

## Fuel tank -1988, engine B201I

## Bränsletank -1988, motor B201I

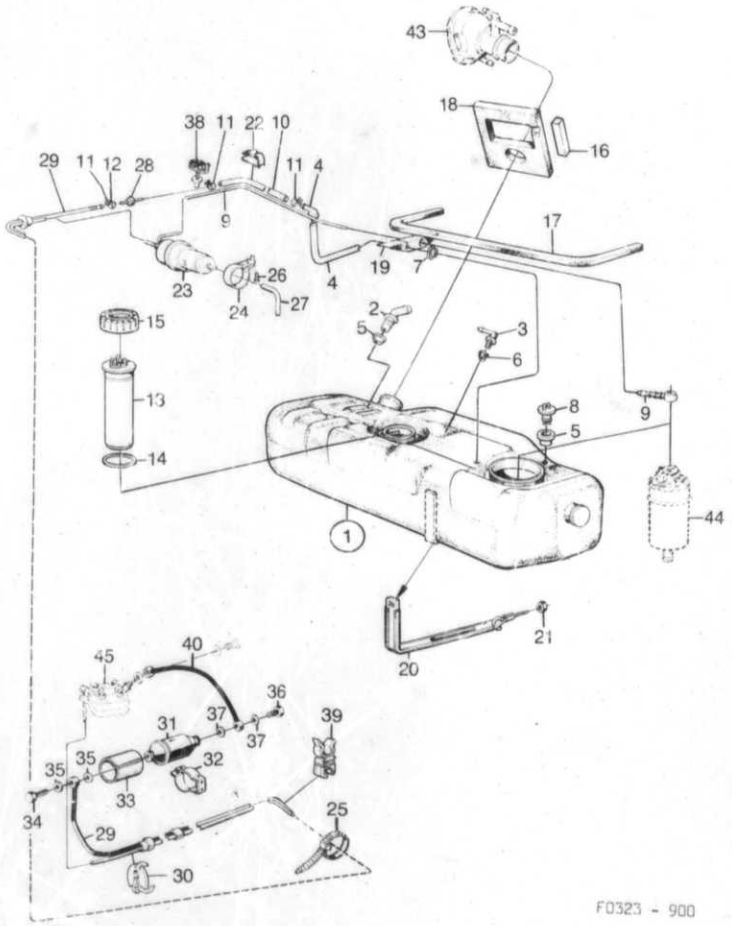


| 0790 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0770 | 40 | 75 26 833 | | I, TURBO FOR CA,US,JA | 1 | Fuel pipe | Bränsleledning | 5 |
| 0780 | 40 | 75 26 817 | | TURBO | 1 | Fuel pipe | Bränsleledning | 5 |
| 0790 | 43 | | | See page 2-057, 1-D10 | | Filler pipe | Påfyllningsrör | |
| 0800 | 44 | | | See page 2-075, 1-E04 | | Fuel pump | Bränslepump | |
| 0810 | 45 | | | See page 2-083, 1-E12 | | Fuel distributor | Bränslemängdmätare | |
| 0820 | | | | | | | | |
| 0830 | | 93 62 781 | | L=10M | X | Hose | Slang | 2 |
| 0840 | | 88 17 256 | | See page 2-191, 1-I24 | X | Fuel hose | Bränsleslang | 4 |




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

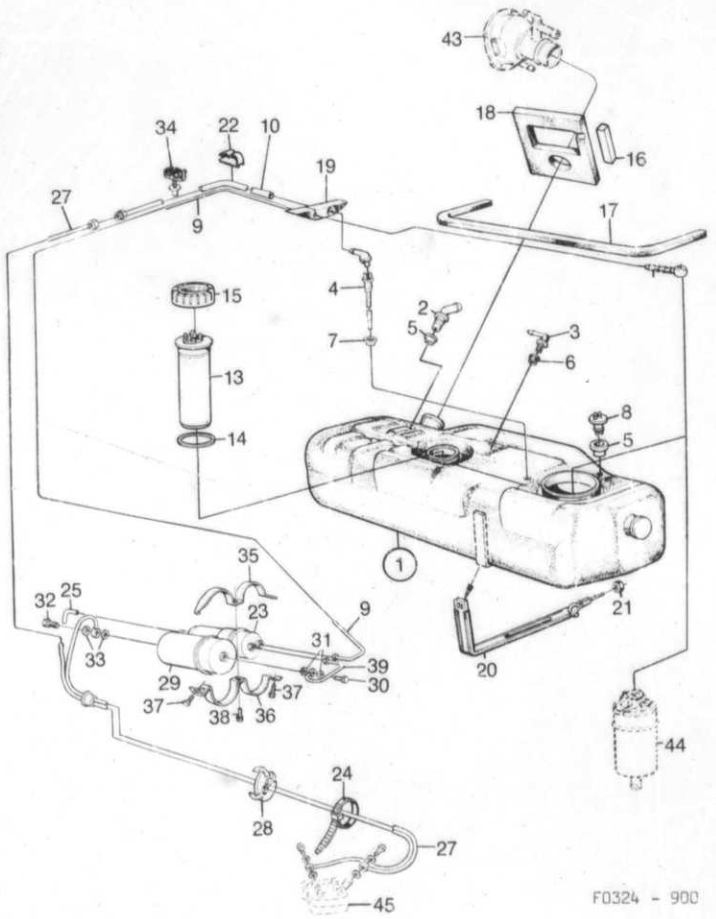


| 0800 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 89 76 425 | | FE | 1 | Tank | Tank | 6 |
| 0020 | 1 | 89 76 433 | | 132) | 1 | Tank | Tank | 6 |
| 0030 | 1 | 89 76 441 | | 135) | 1 | Tank | Tank | 6 |
| 0040 | 2 | 93 29 491 | | | 1 | .Nipple | .Nippel | 4 |
| 0050 | 3 | 93 28 857 | | | 1 | .Connector | .Anslutning | 4 |
| 0060 | 4 | 89 77 159 | | 211) | 1 | .Nipple | .Nippel | 4 |
| 0070 | 4 | 89 76 961 | | 212) | 1 | .Nipple | .Nippel | 4 |
| 0080 | 5 | 93 24 021 | | | 2 | .Bushing | .Bussning | 5 |
| 0090 | 6 | 83 25 656 | | | 1 | .Bushing | .Bussning | 4 |
| 0100 | 7 | 93 24 021 | | | 1 | .Bushing | .Bussning | 5 |
| 0110 | 8 | | | See page 3A-119, 2-E24 | | Cable harness | Ledningsnät | |
| 0120 | 9 | 89 77 308 | | | 1 | Fuel pipe | Bränsleledning | 5 |
| 0130 | 10 | 89 76 359 | | | 1 | Fuel pipe | Bränsleledning | 5 |
| 0140 | 13 | 89 80 393 | | | 1 | Fuel transmitter | Bränslegivare | 3 |
| 0150 | 14 | 93 92 689 | | | 1 | Gasket | Packning | 3 |
| 0160 | 15 | 93 93 950 | | | 1 | Nut | Mutter | 4 |
| 0170 | 16 | *85 72 752* | | NLS - USE 8585325 | 2 | Bracket | Hållare | 5 |
| 0180 | 17 | 93 49 929 | | | 1 | Seal | Tätning | 5 |
| 0190 | 18 | 93 49 937 | | | 1 | Seal | Tätning | 5 |
| 0200 | 19 | 89 76 375 | | | 1 | Seal | Tätning | 5 |
| 0210 | 20 | 93 33 600 | | | 2 | Tensioning band | Spännband | 6 |
| 0220 | 21 | 80 74 288 | | | 2 | Nut | Mutter | 5 |
| 0230 | 22 | 93 49 945 | | | 2 | Clip | Clips | 5 |
| 0240 | 23 | 75 25 181 | | | 1 | Fuel accumulator | Bränsleackumulator | 5 |
| 0250 | 24 | 79 71 872 | | | 3 | Tensioning band | Spännband | 5 |
| 0260 | 25 | 93 28 899 | | | 1 | Protective pipe | Skyddsrör | 6 |
| 0270 | 27 | 89 77 654 | | | 1 | Fuel pipe | Bränsleledning | 5 |
| 0280 | 28 | 83 28 346 | | | 1 | Bracket | Hållare | 6 |
| 0290 | 29 | 89 78 561 | | | 1 | Fuel filter | Bränslefilter | 2 |
| 0300 | 30 | *83 22 927* | | NLS - USE 4374211 | 1 | Banjo bolt | Hålbult | 5 |
| 0310 | 31 | 89 81 961 | | | 2 | Seal | Tätning | 5 |
| 0320 | 32 | *83 19 915* | | NLS - USE 4374203 | 1 | Banjo bolt | Hålbult | 5 |
| 0330 | 33 | *89 81 979* | | NLS - USE 4443883 | 2 | Seal | Tätning | 5 |
| 0340 | 34 | 79 63 895 | | | 2 | Tube clamp | Rörklamma | 4 |
| 0350 | 35 | 89 77 316 | | | 1 | Tensioning band | Spännband | 5 |
| 0360 | 36 | 89 77 324 | | | 1 | Tensioning band | Spännband | 5 |
| 0370 | 37 | 79 22 503 | | 170) | 2 | Screw | Skruv | 5 |
| 0380 | 37 | 79 23 014 | | 171) | 2 | Screw | Skruv | 5 |
| 0390 | 38 | 79 75 774 | | | 1 | Screw | Skruv | 5 |
| 0400 | 39 | 89 77 290 | | | 1 | Fuel pipe | Bränsleledning | 5 |
| 0410 | 43 | | | See page 2-057, 1-D10 | | Filler pipe | Påfyllningsrör | |
| 0420 | 44 | | | See page 2-075, 1-E04 | | Fuel pump | Bränslepump | |
| 0430 | 45 | | | See page 2-083, 1-E12 | | Fuel distributor | Bränslemängdmätare | |
| 0440 | | | | | | | | |
| 0450 | | 93 62 781 | | L=10M | X | Hose | Slang | 2 |
| 0460 | | 88 17 256 | | See page 2-191, 1-I24 | X | Fuel hose | Bränsleslang | 4 |

132. With catalytic converter. Med katalytisk reaktor.
135. Without catalytic converter. Utan katalytisk reaktor.
170. Ch. -K3016481, -K7020923.
171. Ch. K3016482-, K7020924-.
211. Part of 89 76 433, 89 76 441. Del av 89 76 433, 89 76 441.
212. Part of 89 76 425. Del av 89 76 425.
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

2 GROUP INDEX

| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

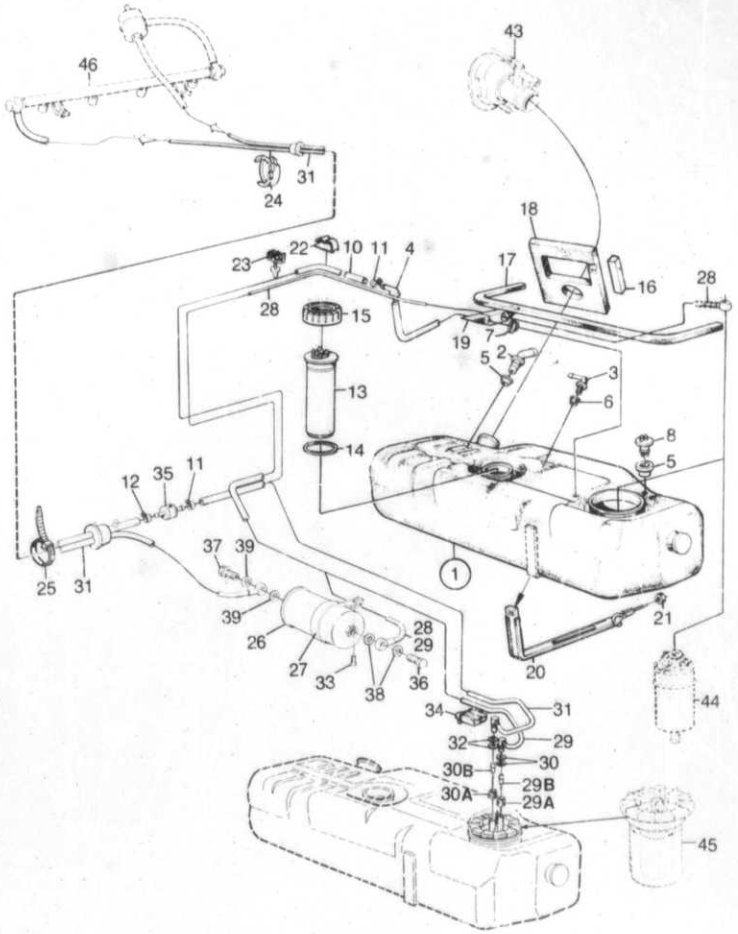


F2021 - 900

| 0807 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 89 77 431 | | 173), 1989- | 1 | Tank | Tank | 6 |
| 0020 | 1 | *75 27 542* | | 23), US, CA, JA, ME, FE | 1 | Tank | Tank | 6 |
| 0020 | | | | NLS - USE 7534597, | | | | |
| 0020 | | | | 9392689 | | | | |
| 0030 | 1 | 75 34 597 | | 24,100), US, CA, JA, | 1 | Tank | Tank | 6 |
| 0040 | | | | ME, FE | | | | |
| 0050 | 1 | 89 76 425 | | 101), US, CA, JA, ME, FE | 1 | Tank | Tank | 6 |
| 0060 | 1 | *75 31 965* | | 21), AU NLS - USE | 1 | Tank | Tank | 6 |
| 0060 | | | | 7534605, 9392689 | | | | |
| 0070 | 1 | 75 34 605 | | 22,100), AU | 1 | Tank | Tank | 6 |
| 0080 | 1 | 89 76 425 | | 101), AU | 1 | Tank | Tank | 6 |
| 0090 | 1 | 75 34 605 | | 132,102), SE, EU | 1 | Tank | Tank | 6 |
| 0100 | 1 | 89 76 433 | | 132,103), SE, EU | 1 | Tank | Tank | 6 |
| 0110 | 1 | *93 68 838* | | 19,135) NLS - USE | 1 | Tank | Tank | 6 |
| 0110 | | | | 7534621, 9392689 | | | | |
| 0120 | 1 | 75 34 621 | | 20,9F,135) | 1 | Tank | Tank | 6 |
| 0130 | 1 | 89 76 441 | | 97,135) | 1 | Tank | Tank | 6 |
| 0140 | 2 | 93 29 491 | | | 1 | .Nipple | .Nippel | 4 |
| 0150 | 3 | 93 28 857 | | | 1 | .Connector | .Anslutning | 4 |
| 0160 | 4 | 93 62 211 | | 209) | 1 | .Return pipe | .Returrör | 6 |
| 0170 | 4 | 93 24 138 | | 210) | 1 | .Nipple | .Nippel | 4 |
| 0180 | 4 | 89 77 159 | | 211) | 1 | .Nipple | .Nippel | 4 |
| 0190 | 4 | 89 76 961 | | 212) | 1 | .Nipple | .Nippel | 4 |
| 0200 | 5 | 93 24 021 | | | 2 | .Bushing | .Bussning | 5 |
| 0210 | 6 | 83 25 656 | | | 1 | .Bushing | .Bussning | 4 |
| 0220 | 7 | 83 25 656 | | 213) | 1 | .Bushing | .Bussning | 4 |
| 0230 | 7 | 93 24 021 | | | 1 | .Bushing | .Bussning | 5 |
| 0240 | 8 | 93 63 524 | | -1986 | 1 | .Connector | .Anslutning | 6 |
| 0250 | 8 | | | 1987- | 1 | Cable harness | Ledningsnät | |
| 0260 | | | | See page 3A-099, 2-E04 | | | | |
| 0270 | 10 | 93 63 359 | | 2), L=715 MM | 1 | Hose | Slang | 5 |
| 0280 | 10 | 89 76 359 | | 104) | 1 | Fuel pipe | Bränsleledning | 5 |
| 0290 | 11 | 79 68 308 | | 96,100,102) | 2 | Hose clamp | Slangklamma | 5 |
| 0300 | 12 | 79 75 204 | | 96,100,102) | 1 | Hose clamp | Slangklamma | 5 |
| 0310 | 13 | 93 61 965 | | -1988 | 1 | Fuel transmitter | Bränslegivare | 3 |
| 0320 | 13 | 89 80 393 | | 500) 1989- | 1 | Fuel transmitter | Bränslegivare | 3 |
| 0330 | 14 | 93 68 846 | | 19,21,23) | 1 | Gasket | Packning | 3 |
| 0340 | 14 | 93 92 689 | | 20,22,24) | 1 | Gasket | Packning | 3 |

2. Manufactured by 93 62 781. Tillverkad av 93 62 781.
19. Ch. -G2012680 -G3009463, -G7012942.
20. Ch. G2012681-, G3009464-, C7012943-.
21. Ch. -G2011239.
22. Ch. G2011240-.
23. Ch. -G2011367, -G3008405.
24. Ch. G2011368-, G3008406-.
96. Ch. --J3016429, --J7001819.
97. Ch. J3016430-, J7001820-.
100. Ch. --J3001527, --J7000897.
101. Ch. J3001528-, J7000898-.
102. Ch. --J3000891, --J7000828.
103. Ch. J3000892-, J7000629-.
104. Used together with 8976425, 8976433, 8976441, 8976458. Används tillsammans med 8976425, 8976433, 8976441, 8976458.
132. With catalytic converter. Med katalytisk reaktor.
135. Without catalytic converter. Utan katalytisk reaktor.
173. For cars with engine I and fuel pump with ejector. För bilar med I-motor och bränslepump med ejektor.
209. Part of 75 27 542, 75 34 597. Del av 75 27 542, 75 34 597.
210. Part of 75 31 965, 75 34 605, 93 68 838, 75 34 621. Del av 75 31 965, 75 34 605, 93 68 838, 75 34 621.
211. Part of 89 76 433, 89 76 441. Del av 89 76 433, 89 76 441.
212. Part of 89 76 425. Del av 89 76 425.
213. Part of 75 27 542, 75 34 597, 75 31 965, 75 34 605, 93 68 838, 75 34 621. Del av 75 27 542, 75 34 597, 75 31 965, 75 34 605, 93 68 838, 75 34 621.
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

2 GROUP INDEX

| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-H12 |
| Supercharging system | 1-H14 |
| Complete sets | 1-K20 |

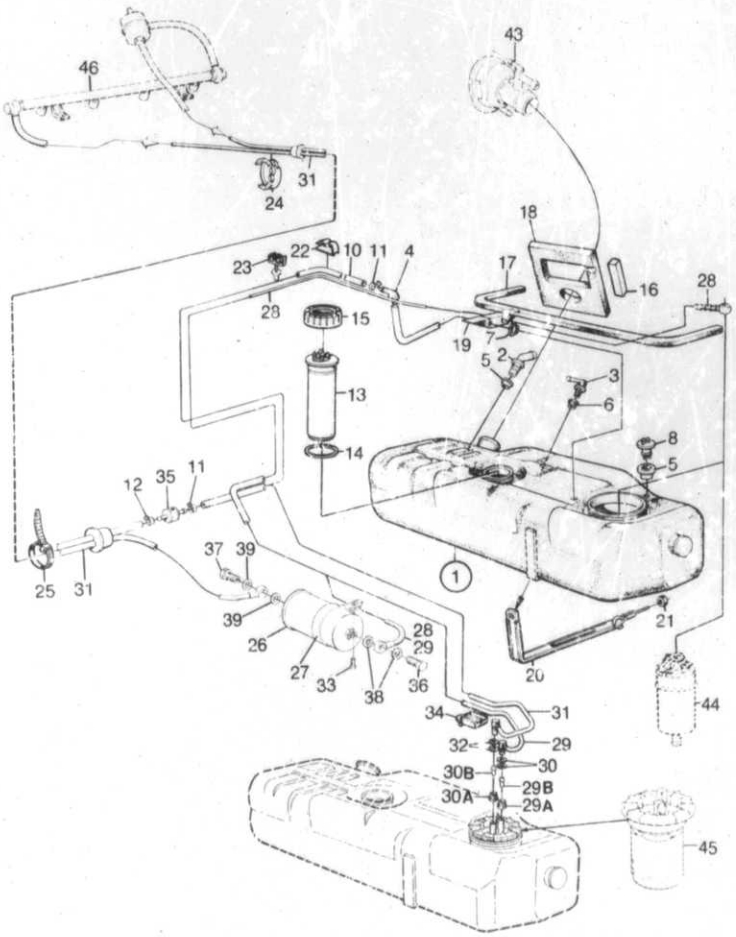


Fuel system

# 1-D24

## *Fuel tank engine B202*

Bränslesystem

## *Bränsletank motor B202*

| 0807 | Pos | Part No/Art.nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0350 | 15 | 93 93 950 | | | 1 | Nut | Mutter | 4 |
| 0360 | 16 | *85 72 752* | | NLS - USE 8585325 | 2 | Bracket | Hållare | 5 |
| 0370 | 17 | 93 49 929 | | | 1 | Seal | Tätning | 5 |
| 0380 | 18 | 93 49 937 | | | 1 | Seal | Tätning | 5 |
| 0390 | 19 | *93 29 855* | | NLS | 1 | Seal | Tätning | 5 |
| 0400 | 19 | 89 76 375 | | 214) | 1 | Seal | Tätning | 5 |
| 0410 | 20 | 93 33 600 | | | 2 | Tensioning band | Spännband | 6 |
| 0420 | 21 | 80 74 288 | | | 2 | Nut | Mutter | 5 |
| 0430 | 22 | 93 49 945 | | | 2 | Clip | Clips | 5 |
| 0440 | 23 | 79 63 895 | | | 2 | Tube clamp | Rörklamma | 4 |
| 0450 | 24 | 83 28 346 | | | 1 | Bracket | Hållare | 6 |
| 0460 | 25 | 79 71 872 | | | 2 | Tensioning band | Spännband | 5 |
| 0470 | 26 | *93 33 790* | | NLS - USE 4163853 | 1 | Fuel filter | Bränslefilter | 2 |
| 0480 | 27 | 75 26 650 | | | 1 | Bracket | Fäste | 6 |
| 0490 | 28 | 75 26 643 | | | 1 | Fuel pipe | Bränsleledning | 5 |
| 0500 | 29 | 89 76 110 | | 500,75) 1989- | 1 | Fuel pipe | Bränsleledning | 5 |
| 0510 | 29A | 89 77 779 | | | 1 | ▪Non-return valve | ▪Backventil | 6 |
| 0520 | 29B | 89 77 761 | | | 1 | ▪Valve peg | ▪Ventilkägla | 6 |
| 0530 | 30 | 79 74 546 | | | 2 | ▪O-ring | ▪O-ring | 2 |
| 0540 | 31 | 89 81 375 | | 500,75) 1989-, SW,EU,CA | 1 | Fuel pipe | Bränsleledning | 5 |
| 0550 | 31 | 89 81 540 | | 75) 1989-, US, JA, AU | 1 | Fuel pipe | Bränsleledning | 5 |
| 0560 | 31 | 89 81 540 | | 135) 1989-, I | 1 | Fuel pipe | Bränsleledning | 5 |
| 0570 | 31A | 89 77 779 | | | 1 | ▪Non-return valve | ▪Backventil | 6 |
| 0580 | 31B | 89 77 761 | | | 1 | ▪Valve peg | ▪Ventilkägla | 6 |
| 0590 | 31 | 75 25 660 | | 100) US, CA, AU, JA, ME, FE | 1 | Fuel pipe | Bränsleledning | 5 |
| 0600 | | | | | | | | |
| 0610 | 31 | 89 76 409 | | 101) US, CA, AU, JA, ME, FE | 1 | Fuel pipe | Bränsleledning | 5 |
| 0620 | | | | | | | | |
| 0630 | 31 | 75 26 627 | | 81) | 1 | Fuel pipe | Bränsleledning | 5 |
| 0640 | 31 | 89 76 409 | | 82) | 1 | Fuel pipe | Bränsleledning | 5 |
| 0650 | 32 | 79 74 546 | | 500,75) 1989- | 2 | ▪O-ring | ▪O-ring | 2 |
| 0660 | 33 | 79 23 014 | | | 1 | Screw | Skruv | 5 |
| 0670 | 34 | *93 82 870* | | 500,75) 1989- NLS - USE 8978827 | 3 | Clamp | Klamma | 5 |
| 0680 | 35 | 75 25 124 | | 100) | 1 | Non-return valve | Backventil | 6 |
| 0690 | 36 | *83 22 927* | | NLS - USE 4374211 | 1 | Banjo bolt | Hålbult | 5 |
| 0700 | 37 | *83 19 915* | | NLS - USE 4374203 | 1 | Banjo bolt | Hålbult | 5 |
| 0710 | 38 | *83 26 712* | | 91) NLS - USE 4161162 | 2 | Seal | Tätning | 5 |
| 0720 | 38 | *89 77 365* | | 92,122) NLS - USE 4161162 | 2 | Seal | Tätning | 5 |
| 0730 | 38 | 89 81 901 | | 123) | 2 | Seal | Tätning | 5 |
| 0740 | 39 | *83 26 704* | | 91) NLS - USE 4443883 | 2 | Seal | Tätning | 5 |
| 0750 | 39 | *89 77 373* | | 92,122) NLS - USE 4443883 | 2 | Seal | Tätning | 5 |
| 0760 | 39 | *89 81 979* | | 123) NLS - USE 4443883 | 2 | Seal | Tätning | 5 |
| 0770 | 43 | | | See page 2-057, 1-D10 | | Filler pipe | Påfyllningsrör | |
| 0780 | 44 | | | See page 2-079, 1-E08 | | Fuel pump | Bränslepump | |
| 0790 | 45 | | | See page 2-081, 1-E10 | | Fuel pump | Bränslepump | |
| 0800 | 46 | | | See page 2-089, 1-E18 | | Tube | Rör | |
| 0810 | | | | | | | | |
| 0820 | | 93 62 781 | | L=10M | X | Hose | Slang | 2 |

75. For I with catalytic converter. För I med katalytisk reaktor.
81. Ch. -J3001527, -J7000897
82. Ch. J3001528-, J7000896-
91. Ch. -J3007293, -J7008835.
92. Ch. J3007294-, J7008836-
100. Ch. --J3001527, --J7000897.
101. Ch. J3001528--, J7000896--
122. Ch. --J3021711, --J7030129
123. Ch. J3021712--, J7030130--
135. Without catalytic converter. Utan katalytisk reaktor.
214. Use together with 89 76 425, 89 76 433, 89 76 441. Används tillsammans med 89 76 425, 89 76 433, 89 76 441.
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Completa sets | 1-I20 |

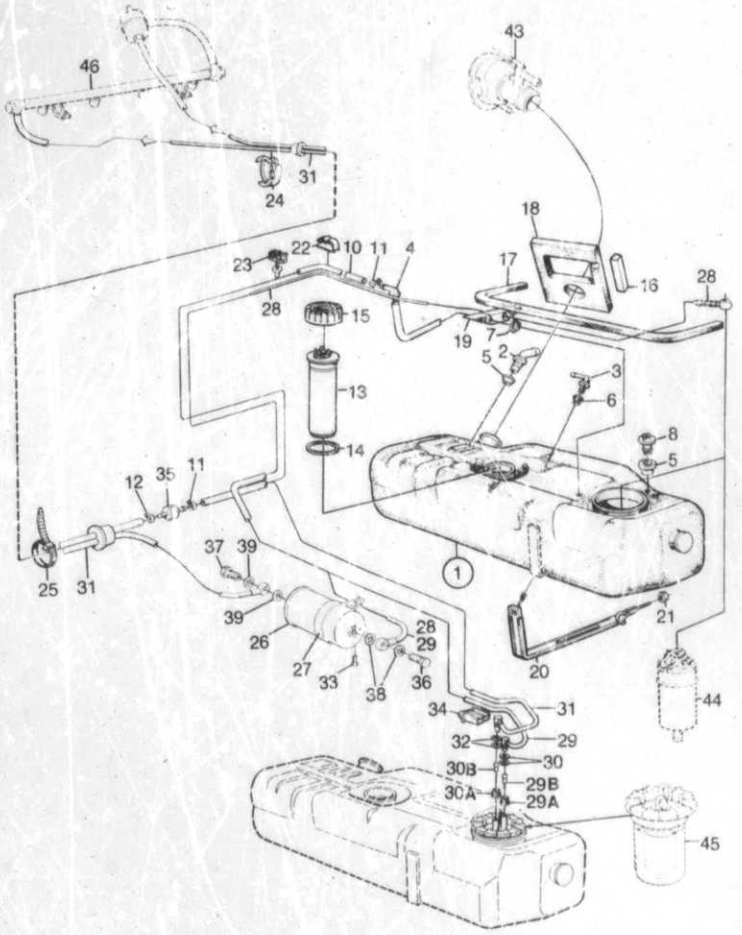



| 0807 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0830 | | 88 17 256 | | See page 2-191, 1-I24 | X | Fuel hose | Bränsleslang | 4 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

2 GROUP INDEX

| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

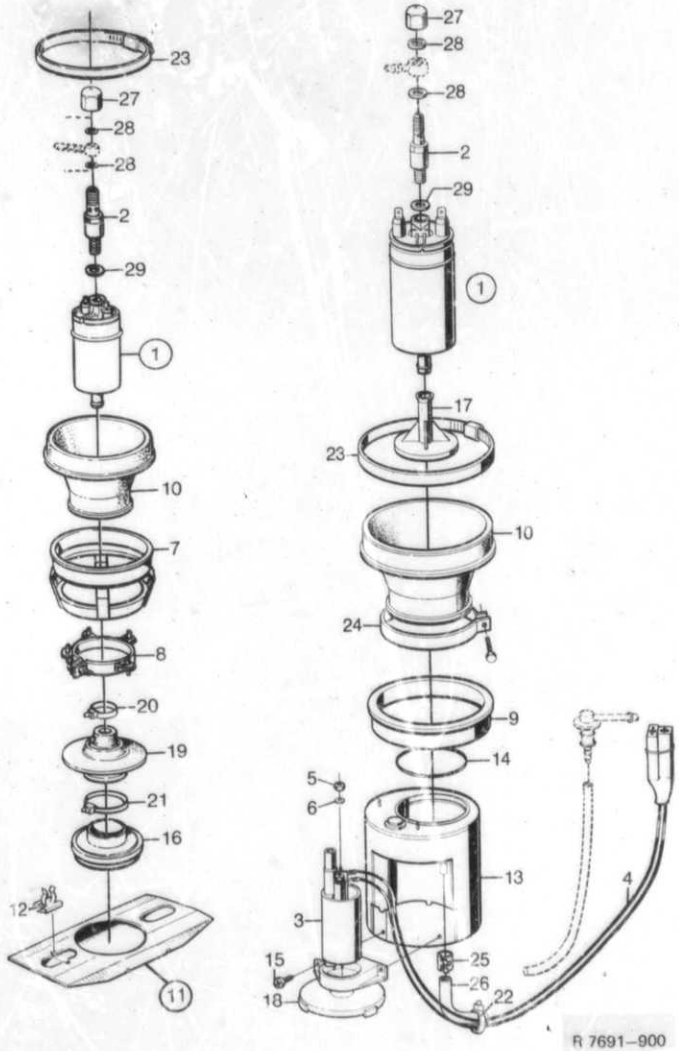


R 7691–900

Fuel system

# 1-E04 Fuel pump B201 I

Bränslesystem

# Bränslepump B201 I

| 0810 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 93 61 015 | | 1986- | 1 | Fuel pump | Bränslepump | 5 |
| 0020 | 1 | 75 36 923 | | 1987- | 1 | Fuel pump | Bränslepump | 5 |
| 0030 | 2 | 93 37 510 | | | 1 | .Valve | .Ventil | 3 |
| 0040 | 3 | *93 49 671* | | 15), US, CA, AU, JA, ME, FE NLS - USE 7526163 | 1 | Fuel pump | Bränslepump | 5 |
| 0060 | 3 | 75 26 163 | | 16,42), US, CA, AU, JA, ME, FE | 1 | Fuel pump | Bränslepump | 5 |
| 0080 | 4 | 93 63 540 | | 42,215), US, CA, AU, JA, ME, FE | 1 | .Cable harness | .Ledningsnät | 6 |
| 0100 | 5 | 79 73 993 | | 42,215), US, CA, AU, JA, ME, FE | 2 | .Nut | .Mutter | 5 |
| 0120 | 6 | 79 10 516 | | 42,215), US, CA, AU, JA, ME, FE | 2 | .Washer | .Bricka | 5 |
| 0140 | 7 | 93 48 103 | | | 1 | Pump bracket | Pumpfäste | 6 |
| 0150 | 8 | 93 48 087 | | | 1 | Clamp | Klämma | 5 |
| 0160 | 9 | 93 49 614 | | 42), US, CA, AU, JA, ME, FE | 1 | Support ring | Stödring | 6 |
| 0180 | 10 | 93 19 971 | | | 1 | Seal | Tätning | 5 |
| 0190 | 11 | 93 62 153 | | | 1 | Reservoir | Behållare | 5 |
| 0200 | 12 | 93 24 211 | | | 1 | .Clip | .Clips | 5 |
| 0210 | 13 | 75 13 666 | | 42), US, CA, AU, JA, ME, FE | 1 | Reservoir | Behållare | 5 |
| 0230 | 14 | 93 49 655 | | 42), US, CA, AU, JA, ME, FE | 1 | O-ring | O-ring | 2 |
| 0250 | 15 | 79 73 613 | | | 2 | Screw | Skruv | 5 |
| 0260 | 16 | 83 31 159 | | | 1 | Suction filter | Sugfilter | 4 |
| 0270 | 17 | 93 65 953 | | 42), US, CA, AU, JA, ME, FE | 1 | Strainer | Sil | 4 |
| 0290 | 18 | 93 86 491 | | 42), US, CA, AU, JA, ME, FE | 1 | Strainer | Sil | 4 |
| 0310 | 19 | 93 19 955 | | | 1 | Bellows | Bälg | 5 |
| 0320 | 20 | *85 17 104* | | -1988 NLS - USE 7971864 | 1 | Tensioning band | Spännband | 4 |
| 0330 | 20 | 79 71 864 | | 1989- | 1 | Tensioning band | Spännband | 5 |
| 0340 | 21 | *83 74 357* | | NLS - USE 7971880 | 1 | Tensioning band | Spännband | 5 |
| 0350 | 22 | 79 71 864 | | 42), US, CA, JA | 1 | Tensioning band | Spännband | 5 |
| 0360 | 22 | 79 71 864 | | 79), AU, ME, FE | 1 | Tensioning band | Spännband | 5 |
| 0370 | 23 | 93 31 554 | | | 1 | Hose clamp | Slangklamma | 5 |
| 0380 | 24 | 93 22 660 | | 42), US, CA, AU, JA, ME, FE | 1 | Clamp | Klämma | 5 |
| 0400 | 25 | 79 73 522 | | 42,59), US, CA, AU, JA, ME, FE | 2 | Hose clamp | Slangklamma | 5 |
| 0420 | 25 | 79 77 879 | | 42,60), US, CA, JA | 1 | Hose clamp | Slangklamma | 5 |
| 0430 | 25 | 79 77 879 | | 60,79), AU, ME, FE | 1 | Hose clamp | Slangklamma | 5 |
| 0440 | 26 | *93 62 260* | | 42,59), US, CA, AU, JA, ME, FE NLS - USE 8975484 | 1 | Return pipe | Returrör | 5 |
| 0460 | 26 | 89 75 484 | | 42,60), US, CA, JA | 1 | Return pipe | Returrör | 5 |
| 0470 | 26 | 89 75 484 | | 60,79), AU, ME, FE | 1 | Return pipe | Returrör | 5 |
| 0480 | 27 | 93 61 668 | | | 1 | Cap nut | Kupolmutter | 5 |
| 0490 | 28 | *83 26 704* | | 91) NLS - USE 4443883 | 2 | Seal | Tätning | 5 |
| 0500 | 28 | *89 77 373* | | 92,122) NLS - USE 4443883 | 2 | Seal | Tätning | 5 |
| 0500 | | | | | | | | |

15. Ch. -G2005865, -G3004065, -G7008424.
16. Ch. G2005866-, G3004066-, G7008425-.
42. EU with US specification. EU med US-specifikation.
59. Ch. -H2014387, -H3012187, -H7022321.
60. Ch. H2014388-, H3012188-, H7022322-.
79. Ch. -J3000891, -J7000828.
91. Ch. -J3007293, -J7008835.
92. Ch. J3007294-, J7008836-.
122. Ch. --J3021711, --J7030129
215. Part of 75 26 163. Del av 75 26 163.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

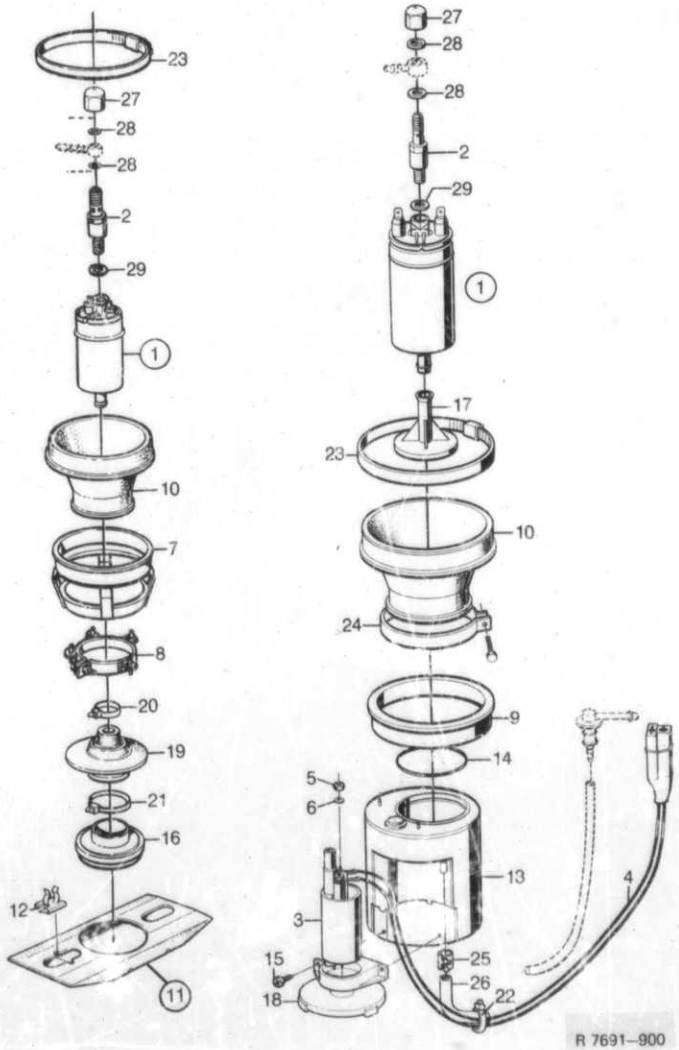


| 0810 | Pos | Part No Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0510 | 28 | *89 81 979* | | 123) NLS - USE 4443883 | 2 | Seal | Tätning | |
| 0520 | 29 | 93 37 528 | | | 1 | Washer | Bricka | |

123. Ch. J3021712–, J7030130–




MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

2 GROUP INDEX

| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-H12 |
| Supercharging system | 1-H14 |
| Complete sets | 1-I20 |

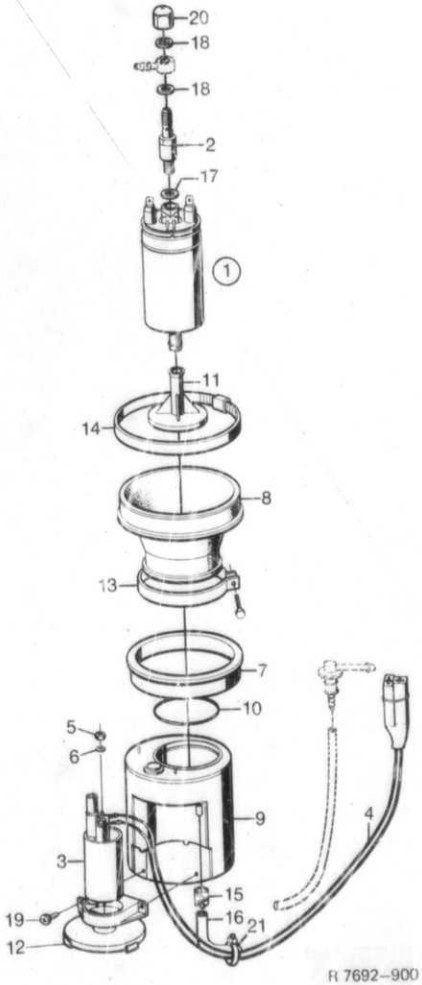

R 7692–900

| 0820 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *93 67 798* | | 30) NLS - USE 9392911 | 1 | Fuel pump | Bränslepump | 5 |
| 0020 | 1 | 93 92 911 | | 31), -1986 | 1 | Fuel pump | Bränslepump | 5 |
| 0030 | 1 | 93 93 935 | | 1987-1988, I | 1 | Fuel pump | Bränslepump | 5 |
| 0040 | 1 | 93 93 935 | | 1987-, TURBO | 1 | Fuel pump | Bränslepump | 5 |
| 0050 | 2 | 88 17 553 | | PART OF 9367798,9392911 | 1 | .Valve | .Ventil | 3 |
| 0060 | 2 | 93 37 510 | | PART OF 9393935 | 1 | .Valve | .Ventil | 3 |
| 0070 | 3 | *93 49 671* | | 15) NLS - USE 7526163 | 1 | Fuel pump | Bränslepump | 5 |
| 0080 | 3 | 75 26 163 | | 16) | 1 | Fuel pump | Bränslepump | 5 |
| 0090 | 4 | 93 63 540 | | 215) | 1 | .Cable harness | .Ledningsnät | 6 |
| 0100 | 5 | 79 73 993 | | 215) | 2 | .Nut | .Mutter | 5 |
| 0110 | 6 | 79 10 516 | | 215) | 2 | .Washer | .Bricka | 5 |
| 0120 | 7 | 93 49 614 | | | 1 | Support ring | Stödring | 6 |
| 0130 | 8 | 93 67 756 | | | 1 | Collar | Krage | 5 |
| 0140 | 9 | 93 86 798 | | | 1 | Reservoir | Behållare | 5 |
| 0150 | 10 | 93 93 522 | | | 1 | O-ring | O-ring | 2 |
| 0160 | 11 | 75 11 082 | | | 1 | Strainer | Sil | 4 |
| 0170 | 12 | 93 86 491 | | | 1 | Strainer | Sil | 4 |
| 0180 | 13 | 93 67 731 | | | 1 | Hose clamp | Slangklamma | 5 |
| 0190 | 14 | 93 31 554 | | | 1 | Hose clamp | Slangklamma | 5 |
| 0200 | 15 | 79 73 522 | | 59) | 1 | Hose clamp | Slangklamma | 5 |
| 0210 | 15 | 79 77 879 | | 60) | 1 | Hose clamp | Slangklamma | 5 |
| 0220 | 15 | 79 77 879 | | 60,79), US, CA, AU, JA, ME, FE | 1 | Hose clamp | Slangklamma | 5 |
| 0230 | | | | | | | | |
| 0240 | 16 | *93 62 260* | | 59) NLS - USE 8975484 | 1 | Return pipe | Returrör | 5 |
| 0250 | 16 | 89 75 484 | | 60) | 1 | Return pipe | Returrör | 5 |
| 0260 | 16 | 89 75 484 | | 60,79), US, CA, AU, JA, ME, FE | 1 | Return pipe | Returrör | 5 |
| 0270 | | | | | | | | |
| 0280 | 17 | 93 37 528 | | | 1 | Washer | Bricka | 5 |
| 0290 | 18 | *83 26 704* | | 91) NLS - USE 4443883 | 2 | Seal | Tätning | 5 |
| 0300 | 18 | *89 77 373* | | 92,122) NLS - USE 4443883 | 2 | Seal | Tätring | 5 |
| 0310 | 18 | *89 81 979* | | 123) NLS - USE 4443883 | 2 | Seal | Tätning | 5 |
| 0320 | 19 | 79 73 613 | | | 2 | Screw | Skruv | 5 |
| 0330 | 20 | 93 61 668 | | | 1 | Cap nut | Kupolmutter | 5 |
| 0340 | 21 | 79 71 864 | | | 1 | Tensioning band | Spännband | 5 |
| 0350 | 21 | 79 71 864 | | 79), US, CA, AU, JA, ME, FE | 1 | Tensioning band | Spännband | 5 |
| 0360 | | | | | | | | |

15. Ch. -G2005865, -G3004065, -G7008424.
16. Ch. G2005866-, G3004066-, G7008425-.
30. Ch. -G2016980.
31. Ch. G2016981-.
59. Ch. -H2014387, -H3012187, -H7022321.
60. Ch. H2014388-, H3012188-, H7022322-.
79. Ch. -J3000891, -J7000828.
91. Ch. -J3007293, -J7008835.
92. Ch. J3007294-, J7008836-.
122. Ch. --J3021711, --J7030129
123. Ch. J3021712--, J7030130--
215. Part of 75 26 163. Del av 75 26 163.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

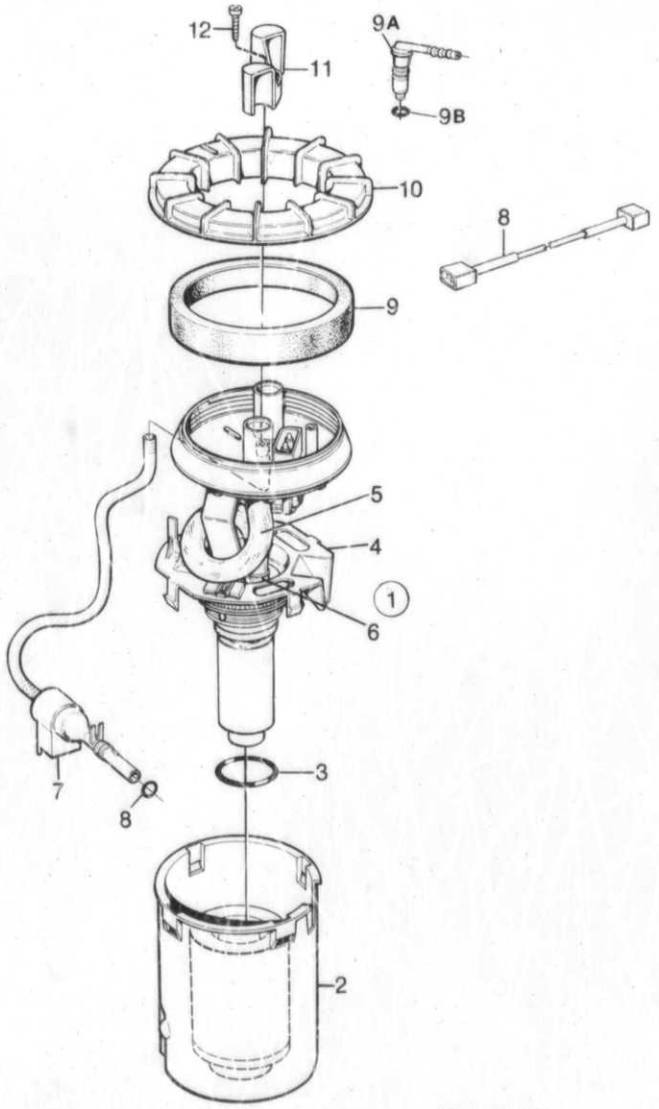


F5623 90086

Fuel system

# 1-E10

## *Fuel pump*

## *500), 1989-, engine B202I*

Bränslesystem

## *Bränslepump*

## *500), 1989-, motor B202I*

| 0830 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *89 81 664* | | -1988,I NLS - USE 4161493 | 1 | Fuel pump | Bränslepump | 5 |
| 0020 | 1 | 41 61 493 | | 1989,I | 1 | Fuel pump | Bränslepump | 5 |
| 0030 | 2 | 89 80 021 | | -1988,I | 1 | .Reservoir | .Behållare | 5 |
| 0040 | 3 | 75 91 902 | | -1988,I | 1 | ..O-ring | ..O-ring | 2 |
| 0050 | 4 | *89 80 039* | | 1),-1988,I NLS - USE 4161493 | 1 | .Fuel pump | .Bränslepump | 5 |
| 0060 | 5 | 40 19 998 | S | -1988,I | 1 | ..Hose | ..Slang | 5 |
| 0070 | 6 | 79 68 308 | S | -1988,I | 2 | ..Hose clamp | ..Slangklamma | 5 |
| 0080 | 7 | 89 80 047 | | -1988,I | 1 | .Ejector unit | .Ejektorenhet | 5 |
| 0090 | 8 | 93 94 602 | | -1988,I | 1 | ..O-ring | ..O-ring | 2 |
| 0100 | 8A | 43 93 476 | | PART OF 4161493 | 1 | .Connection | .Skarv | 5 |
| 0110 | 9 | 93 94 529 | | I | 1 | .Seal | .Tätning | 6 |
| 0120 | 9A | 41 61 766 | | 1989,I | 1 | .Non-return valve | .Backventil | 3 |
| 0130 | 9B | 79 74 546 | | 1989,I | 2 | .O-ring | .O-ring | 2 |
| 0140 | 10 | 93 94 503 | | I | 1 | Cover | Lock | 6 |
| 0150 | 11 | 93 94 628 | | I | 1 | Lock brace | Låsbygel | 5 |
| 0160 | 12 | 79 71 344 | | I | 1 | Screw | Skruv | 5 |
| 0170 | | | | | | | | |
| 0180 | | | | See page 2-197, 1-J06 | X | Hose kit | Slangsats | |

1. Not as separate spare part. Ej som separat reservdel.
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

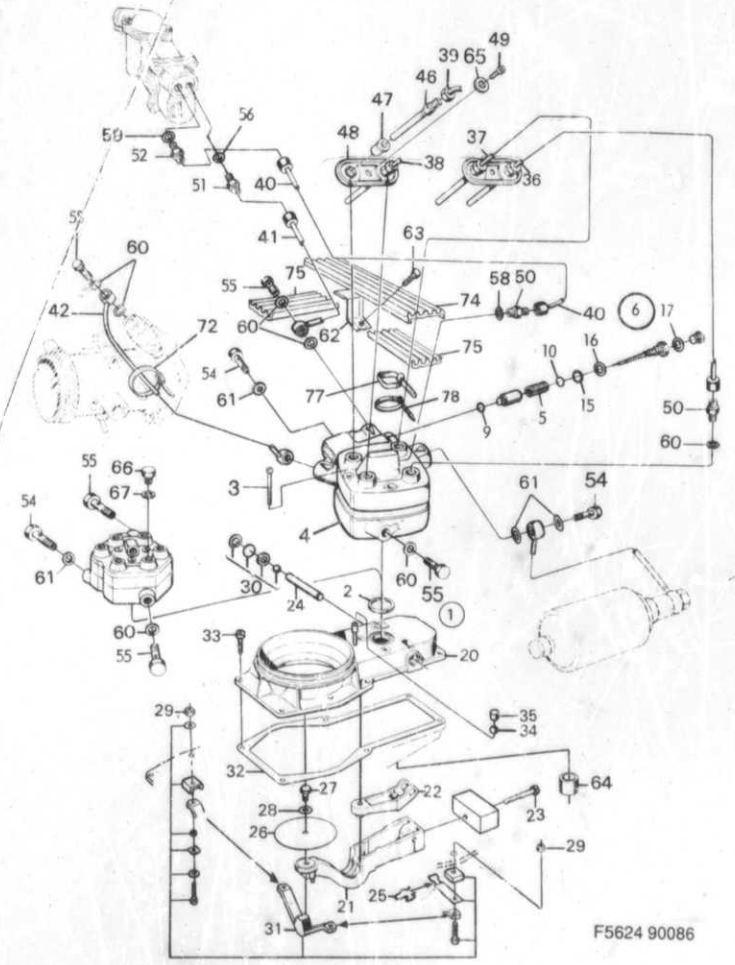


| 0850 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *83 38 923* | | 120) I NLS - USE 9302936, 9302944 | 1 | Volumeter | Mängdmätare | 5 |
| 0020 | 1 | *89 81 557* | | 1,121) I NLS - USE 8981565, 8981573 | 1 | Volumeter | Mängdmätare | 5 |
| 0030 | 1 | *83 35 887* | | TURBO NLS - USE 9317272, 9326976 | 1 | Volumeter | Mängdmätare | 5 |
| 0040 | 1 | *93 44 896* | | 132) NLS - USE 7525231, 8322380, 8981987, 9345778, 3345786 | 1 | Volumeter | Mängdmätare | |
| 0050 | 2 | 93 15 161 | | | 1 | .Seal | .Tätning | 4 |
| 0060 | 2 | 93 17 231 | | 216) | 1 | .Seal | .Tätning | 3 |
| 0070 | 3 | 83 22 380 | | | 3 | .Screw | .Skruv | 5 |
| 0080 | 3 | 93 17 249 | | 216) | 3 | .Screw | .Skruv | 5 |
| 0090 | 4 | 93 02 936 | | 120,700) | 1 | .Volumeter | .Mängdmätare | 4 |
| 0100 | 4 | 89 81 565 | | 121,700) | 1 | .Volumeter | .Mängdmätare | 4 |
| 0110 | 4 | 93 45 778 | | 217,700) | 1 | .Volumeter | .Mängdmätare | 4 |
| 0120 | 4 | *93 17 256* | | 216,700) NLS - USE 9326976 | 1 | .Volumeter | .Mängdmätare | 5 |
| 0130 | 5 | 93 15 185 | | | 1 | ..Spring | ..Fjäder | 5 |
| 0140 | 5 | 75 11 488 | | 216) | 1 | ..Compression spring | ..Tryckfjäder | 5 |
| 0150 | 6 | 93 15 177 | | | 1 | ..Valve | ..Ventil | 3 |
| 0160 | 9 | 75 11 413 | | | 1 | ...O-ring | ...O-ring | 2 |
| 0170 | 10 | 93 15 193 | | 0,1 MM | X | ...Washer | ...Bricka | 3 |
| 0180 | 10 | 93 15 201 | | 0,15 MM | X | ...Washer | ...Bricka | 3 |
| 0190 | 10 | 93 15 219 | | 0,3 MM | X | ...Washer | ...Bricka | 3 |
| 0200 | 10 | 93 15 227 | | 0,4 MM | X | ...Washer | ...Bricka | 3 |
| 0210 | 10 | 93 15 235 | | 0,5 MM | X | ...Washer | ...Bricka | 3 |
| 0220 | 15 | 93 15 243 | | | X | ...O-ring | ...O-ring | 3 |
| 0230 | 16 | 75 11 421 | | | 1 | ...Ring | ...Ring | 3 |
| 0240 | 17 | *83 24 006* | | NLS - USE 8981987 | 1 | ...Seal | ...Tätning | 5 |
| 0250 | 20 | 93 02 944 | | 120) | 1 | .Volumeter | .Mängdmätare | 5 |
| 0260 | 20 | 89 81 573 | | 121) | 1 | .Volumeter | .Mängdmätare | 5 |
| 0270 | 20 | 93 45 786 | | 217) | 1 | .Volumeter | .Mängdmätare | 5 |
| 0280 | 20 | 93 17 272 | | 216) | 1 | .Volumeter | .Mängdmätare | 5 |
| 0290 | 21 | *93 02 951* | | NLS | 1 | ..Lever | ..Hävarm | 6 |
| 0300 | 22 | 83 38 394 | | | 1 | ..Arm | ..Arm | 6 |
| 0310 | 23 | *83 38 402* | | NLS | 1 | ..Screw | ..Skruv | |
| 0320 | 24 | *83 22 539* | | NLS | 1 | ..Pin | ..Pinne | 5 |
| 0330 | 25 | 83 38 410 | | | 1 | ..Clamp | ..Klammer | 5 |
| 0340 | 26 | 83 22 554 | | | 1 | ..Valve disc | ..Ventilskiva | 6 |
| 0350 | 26 | 93 15 292 | | US | 1 | ..Valve disc | ..Ventilskiva | 6 |
| 0360 | 27 | 83 38 436 | | | 1 | ..Screw | ..Skruv | 5 |
| 0370 | 28 | 83 22 570 | | | 1 | ..Washer | ..Bricka | 5 |
| 0380 | 29 | *83 22 588* | | NLS | 2 | ..Nut | ..Mutter | 5 |
| 0390 | 30 | 83 22 604 | | | 1 | ..Bearing bushing | ..Lagerbussning | 6 |
| 0400 | 31 | 83 22 612 | | | 1 | ..Brace | ..Bygel | 6 |
| 0410 | 32 | 83 23 024 | | | 1 | Gasket | Packning | 3 |
| 0420 | 33 | 80 59 594 | | | 6 | Screw | Skruv | 5 |
| 0430 | 34 | 93 48 913 | | CA | 1 | Ball | Kula | 5 |
| 0440 | 35 | 83 33 700 | | 7) | 1 | Plug | Plugg | 5 |
| 0450 | | | | | 1 | Red | Röd | |
| 0460 | 35 | 83 34 187 | | 7), CA, AU, ME, TURBO FOR AU, ME | 1 | Plug | Plugg | 5 |
| 0470 | | | | | | Black | Svart | |

1. Not as separate spare part. Ej som separat reservdel.
7. See Service Manual. Se Verkstadshandbok.
120. Ch. -J3023673, -J7032934
121. Ch. J3023674-, J7032935-
132. With catalytic converter. Med katalytisk reaktor.
216. Part of 83 35 887. Del av 83 35 887.
217. Part of 93 44 896. Del av 93 44 896.
700. Also available as exchange unit. Finns även som utbytesenhet.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical genera. | 2 A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

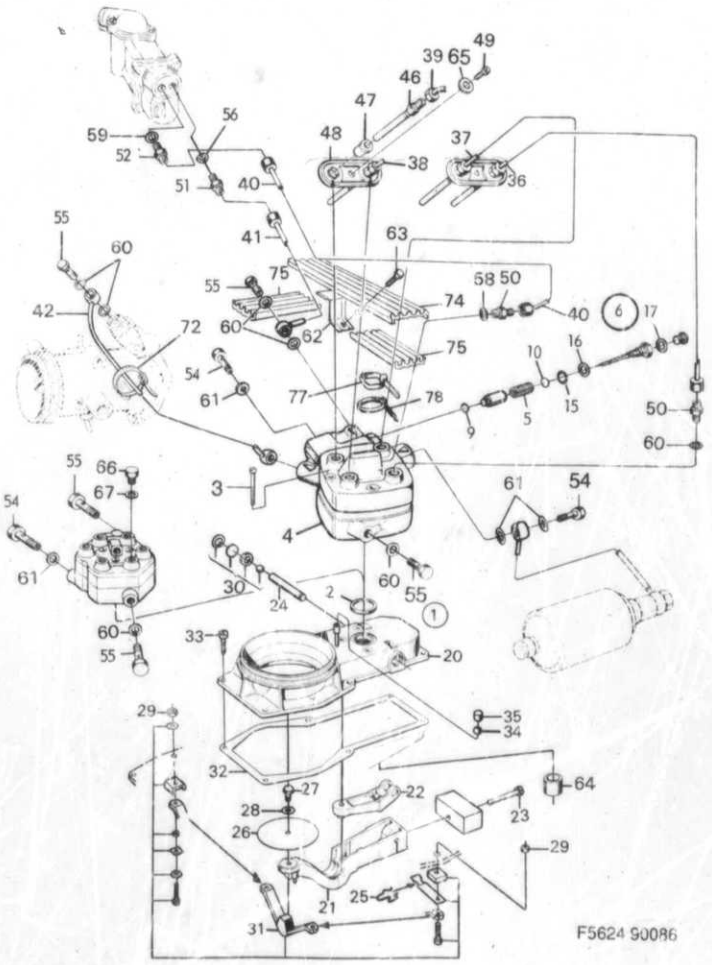


| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 35 | 93 37 734 | | 7,42), US, JA, CA | 1 | Plug | Plugg | 5 |
| | | | | | Black | Svart | |
| 36 | 93 46 685 | | 1986- | 1 | Injection pipe | Insprutningsledning | 5 |
| 36 | 75 35 040 | | 1987- | 1 | Injection pipe | Insprutningsledning | 3 |
| 37 | 93 46 693 | | 1986- | 1 | Injection pipe | Insprutningsledning | 5 |
| 37 | 75 35 057 | | 1987- | 1 | Injection pipe | Insprutningsledning | 5 |
| 38 | 93 46 701 | | 1986- | 1 | Injection pipe | Insprutningsledning | 5 |
| 38 | 75 35 065 | | 1987- | 1 | Injection pipe | Insprutningsledning | 5 |
| 39 | 93 46 719 | | 1986- | 1 | Injection pipe | Insprutningsledning | 3 |
| 39 | 75 35 073 | | 1987- | 1 | Injection pipe | Insprutningsledning | 5 |
| 40 | 93 41 629 | | 1986- | 1 | Fuel pipe | Bränsleledning | 5 |
| 40 | 93 41 637 | | 1986, TURBO | 1 | Fuel pipe | Bränsleledning | 5 |
| 40 | 93 41 629 | | 1986, TURBO FOR JA, CA | 1 | Fuel pipe | Bränsleledning | 5 |
| 40 | 75 35 180 | | 1987-, I | 1 | Fuel pipe | Bränsleledning | 5 |
| 40 | 75 35 180 | | 1987-, | 1 | Fuel pipe | Bränsleledning | 5 |
| 40 | 75 35 214 | | 76), 1987- | 1 | Fuel pipe | Bränsleledning | 5 |
| 41 | | | See page 2-135, 1-G16 | | Fuel pipe | Bränsleledning | |
| 41 | 93 48 731 | | 1986- | 1 | Fuel pipe | Bränsleledning | 5 |
| 41 | 75 35 198 | | 1987- | 1 | Fuel pipe | Bränsleledning | 5 |
| 42 | 93 63 656 | | 1986, I AND TURBO CA,JA | 1 | Fuel pipe | Bränsleledning | 5 |
| 42 | 93 41 652 | | 1986, TURBO EU, ME, AU | 1 | Fuel pipe | Bränsleledning | 5 |
| 42 | 75 35 172 | | 1987-, I | 1 | Fuel pipe | Bränsleledning | 5 |
| 42 | 75 35 172 | | 1987-,218) | 1 | Fuel pipe | Bränsleledning | 5 |
| 42 | 75 35 206 | | 1987-, TURBO | 1 | Fuel pipe | Bränsleledning | 5 |
| 46 | 93 10 152 | | | 4 | Injectionsvalve | Insprutningsventil | 2 |
| 47 | 83 57 709 | | | 4 | Bushing | Bussning | 2 |
| 48 | 83 57 691 | | | 2 | Bracket | Fäste | 6 |
| 49 | 80 98 048 | | | 2 | Screw | Skruv | 5 |
| 50 | 75 25 231 | | | 5 | Nipple | Nippel | 5 |
| 51 | 75 25 223 | | | 1 | Nipple | Nippel | 3 |
| 52 | 75 25 249 | | | 1 | Nipple | Nippel | 3 |
| 54 | *83 19 915* | | NLS - USE 4374203 | 3 | Banjo bolt | Hålbult | 5 |
| 55 | 83 20 319 | | US | 4 | Banjo bolt | Hålbult | 5 |
| 55 | 83 20 319 | | EU | 3 | Banjo bolt | Hålbult | 5 |
| 56 | 83 24 022 | | | 1 | Gasket | Packning | 2 |
| 58 | *83 24 006* | | NLS - USE 8981987 | 1 | Seal | Tätning | 5 |
| 59 | 83 24 030 | | | 1 | Gasket | Packning | 3 |
| 60 | *93 28 824* | | 91), US NLS - USE 8981987 | 12 | Seal | Tätning | 5 |
| 60 | 89 77 381 | | 92,122), US | 12 | Seal | Tätning | 5 |
| 60 | 89 81 987 | | 123), US | 12 | Seal | Tätning | 5 |
| 60 | *93 28 824* | | 91), EU NLS - USE 8981987 | 10 | Seal | Tätning | 5 |
| 60 | 89 77 381 | | 92,122), EU | 10 | Seal | Tätning | 5 |
| 60 | 89 81 987 | | 123), EU | 10 | Seal | Tätning | 5 |
| 61 | *83 26 704* | | 91) NLS - USE 4443883 | 6 | Seal | Tätning | 5 |
| 61 | *39 77 373* | | 92,122) NLS - USE 4443883 | 6 | Seal | Tätning | 5 |
| 61 | *89 81 979* | | 123) NLS - USE 4443883 | 6 | Seal | Tätning | 5 |
| 62 | 93 42 221 | | 1986- | 1 | Bracket | Hållare | 6 |
| 63 | 79 73 134 | | 1986- | 1 | Screw | Skruv | 5 |
| 64 | 93 00 625 | | | 1 | Plug | Plugg | 5 |
| 65 | 80 29 985 | | | 2 | Washer | Bricka | 5 |
| 66 | 83 37 743 | | TURBO EU | 2 | Screw | Skruv | 5 |

7. See Service Manual. Se Verkstadshandbok.
42. EU with US specification. EU med US-specifikation.
76. For TURBO with catalytic converter. För TURBO med katalytisk reaktor.
91. Ch. -J3007293, -J7008836.
92. Ch. J3007294-, J7008836-.
122. Ch. --J3021711, --J7030129
123. Ch. J3021712--, J7030130--
218. Turbo with catalytic converter. Turbo med katalytisk reaktor.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-E16

## *Mixing regulator B201 I*

## *Blandningsregulator B201 I*

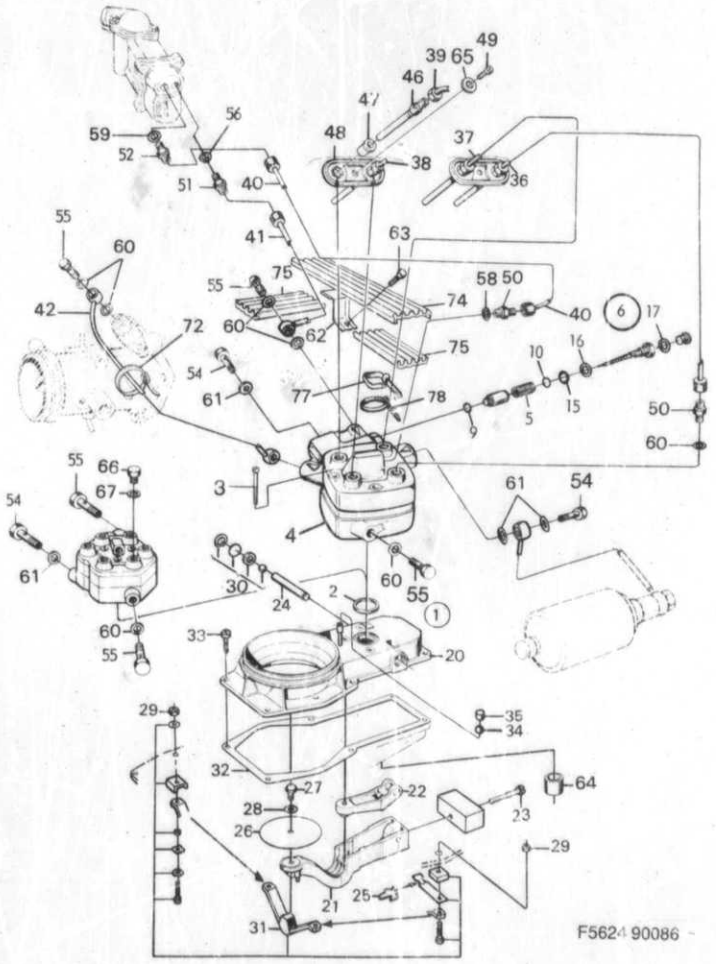


| 0850 | Pos | Part No/Art. nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0990 | 67 | 83 24 022 | | TURBO EU | 2 | Gasket | Packning | 2 |
| 1000 | 72 | 79 71 872 | | TURBO | 1 | Tensioning band | Spännband | 5 |
| 1010 | 74 | 93 41 793 | | | 1 | Clip | Clips | 5 |
| 1020 | 75 | 93 41 801 | | 1986- | 2 | Clip | Clips | 5 |
| 1030 | 75 | 75 35 032 | | 1987- | 2 | Tube clamp | Rörklamma | 5 |
| 1040 | 77 | 79 71 864 | | | 1 | Tensioning band | Spännband | 5 |
| 1050 | 78 | 79 71 872 | | 1986 | 1 | Tensioning band | Spännband | 5 |




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

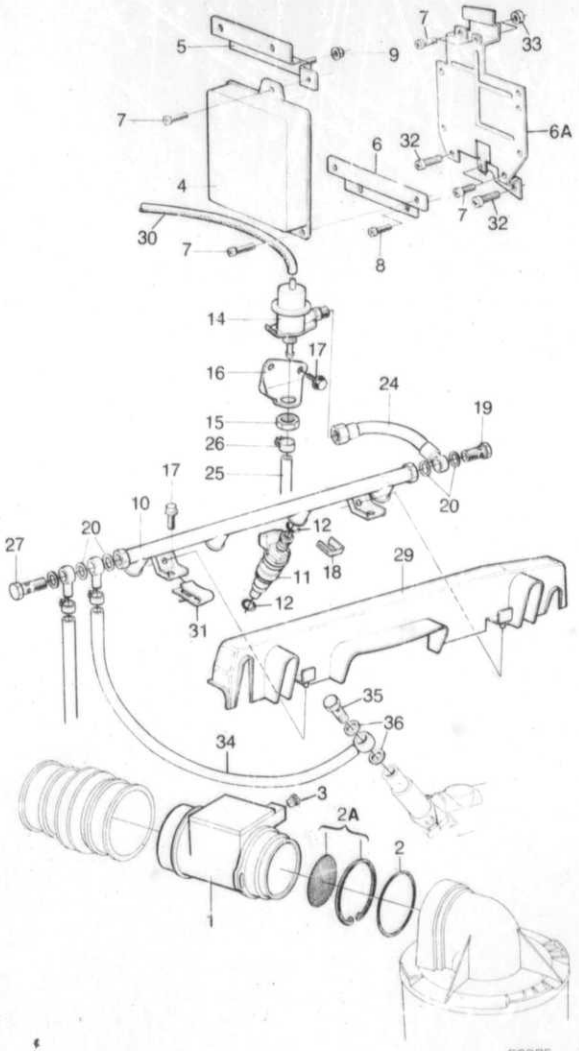


| 0860 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 93 75 643 | | 700),-1987 | 1 | Mass air flow sensor | Luftmassamätare | 4 |
| 0020 | 1 | 93 75 643 | | 700),1988, TURBO | 1 | Mass air flow sensor | Luftmassamätare | 4 |
| 0030 | 1 | 75 38 655 | | 75,700), 1988- | 1 | Mass air flow sensor | Luftmassamätare | 4 |
| 0040 | 1 | 75 38 655 | | 76,500,700) 1989- | 1 | Mass air flow sensor | Luftmassamätare | 4 |
| 0050 | 1 | 89 78 280 | | 151,152,700), 1989- | 1 | Mass air flow sensor | Luftmassamätare | 4 |
| 0060 | | | | | | | | |
| 0070 | 2A | 75 35 446 | | | 1 | Service kit | Servicesats | 5 |
| 0080 | 2 | 79 74 306 | | | 1 | O-ring | O-ring | 3 |
| 0090 | 3 | 75 25 710 | | | 1 | Plug | Plugg | 5 |
| 0100 | 3 | 93 83 076 | | -1987, US | 1 | Plug | Plugg | 5 |
| 0110 | | | | | | | | |
| 0120 | 4 | 75 29 092 | | 700), 1986, TURBO | 1 | Electronic unit | Elektronikenhet | 3 |
| 0130 | 4 | 75 36 683 | | 700), 1987-1988, TURBO | 1 | Electronic unit | Elektronikenhet | 3 |
| 0140 | 4 | 74 87 119 | | 700), 1989-, TURBO | 1 | Electronic unit | Elektronikenhet | 3 |
| 0150 | 4 | 75 32 146 | | 76,700), 1986 | 1 | Electronic unit | Elektronikenhet | 3 |
| 0160 | 4 | 75 36 709 | | 76,700), 1987-1988 | 1 | Electronic unit | Elektronikenhet | 3 |
| 0170 | 4 | 89 78 348 | | 76,500,700), 1989- | 1 | Electronic unit | Elektronikenhet | 3 |
| 0180 | 4 | 75 25 140 | | 75,700), -1987 | 1 | Electronic unit | Elektronikenhet | 3 |
| 0190 | 4 | 75 38 689 | | 75,700), 1988 | 1 | Electronic unit | Elektronikenhet | 3 |
| 0200 | 4 | 74 87 135 | | 75,500,700), 1989- | 1 | Electronic unit | Elektronikenhet | 3 |
| 0210 | 4 | 91 11 703 | | 700), 1989-, I, M | 1 | Electronic unit | Elektronikenhet | 3 |
| 0220 | 4 | 89 75 443 | | 700), 1989-, I, A | 1 | Electronic unit | Elektronikenhet | 3 |
| 0230 | | | | | | | | |
| 0240 | 5 | 75 11 694 | | -1987 | 1 | Bracket | Konsol | 6 |
| 0250 | 5 | 75 11 694 | | 1988, CV | 1 | Bracket | Konsol | 6 |
| 0260 | 5 | 75 11 694 | | 1988-, TURBO | 1 | Bracket | Konsol | 6 |
| 0270 | 6 | 75 11 686 | | -1987 | 1 | Bracket | Konsol | 6 |
| 0280 | 6 | 75 11 686 | | 1988, CV | 1 | Bracket | Konsol | 6 |
| 0290 | 6 | 75 11 686 | | 1988-, TURBO | 1 | Bracket | Konsol | 6 |
| 0300 | 6A | 75 36 691 | | 1988-, I | 1 | Bracket | Fäste | 5 |
| 0310 | 6A | 93 98 207 | | 1989-, CV | 1 | Bracket | Fäste | 6 |
| 0320 | 7 | 80 59 396 | | -1987 | 3 | Screw | Skruv | 5 |
| 0330 | 7 | 80 59 396 | | 1988- | 3 | Screw | Skruv | 5 |
| 0340 | 7 | 79 77 283 | | 75), 1988- | 4 | Screw | Skruv | 5 |
| 0350 | 7 | 79 77 283 | | 500,76) 1989- | 4 | Screw | Skruv | 5 |
| 0360 | 7 | 79 77 283 | | 1989-, I, | 3 | Screw | Skruv | 5 |
| 0370 | 8 | 79 75 048 | | | 2 | Screw | Skruv | 5 |
| 0380 | 9 | 79 73 365 | | | 2 | Nut | Mutter | 5 |
| 0390 | 10 | 75 06 611 | | | 1 | Tube | Rör | 6 |
| 0400 | | | | | | | | |
| 0410 | 11 | *75 09 862* | | 1986, TURBO NLS - USE 7560170 | 4 | Injectionsvalve | Insprutningsventil | 2 |
| 0420 | 11 | 75 60 170 | | 1987-1988, TURBO | 4 | Injectionsvalve | Insprutningsventil | 2 |
| 0430 | 11 | 74 87 010 | | 1989-, TURBO | 4 | Injectionsvalve | Insprutningsventil | 2 |
| 0440 | 11 | *75 09 862* | | 40,76) NLS - USE 7560170 | 4 | Injectionsvalve | Insprutningsventil | 2 |
| 0450 | 11 | 75 60 170 | | 27,76) -1988 | 4 | Injectionsvalve | Insprutningsventil | 2 |
| 0460 | 11 | 74 87 010 | | 500) 1989- | 4 | Injectionsvalve | Insprutningsventil | 2 |
| 0470 | 11 | 74 87 028 | | 1989- I | 4 | Injectionsvalve | Insprutningsventil | 2 |
| 0480 | 11 | *75 18 285* | | 40,75) NLS - USE 7560162 | 4 | Injectionsvalve | Insprutningsventil | 2 |
| 0490 | 11 | 75 60 162 | | 27,75) -1988 | 4 | Injectionsvalve | Insprutningsventil | 2 |
| 0500 | 11 | 74 87 028 | | 75,500) 1989- | 4 | Injectionsvalve | Insprutningsventil | 2 |
| 0510 | | | | | | | | |
| 0520 | 12 | 75 61 210 | | | 9 | O-ring | O-ring | 2 |
| 0530 | 14 | 75 64 131 | | 1986,135) | 1 | Regulator | Regulator | 5 |

27. Engine G073597-.
40. Engine -G073596
75. For I with catalytic converter. För I med katalytisk reaktor.
76. For TURBO with catalytic converter. För TURBO med katalytisk reaktor.
135. Without catalytic converter. Utan katalytisk reaktor.
151. For TURBO without catalytic converter. För TURBO utan katalytisk reaktor.
152. For I without catalytic converter. För I utan katalytisk reaktor.
500. Also valid for SE 1988B. Gäller även för SE 1988B.
700. Also available as exchange unit. Finns även som utbytesenhet.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

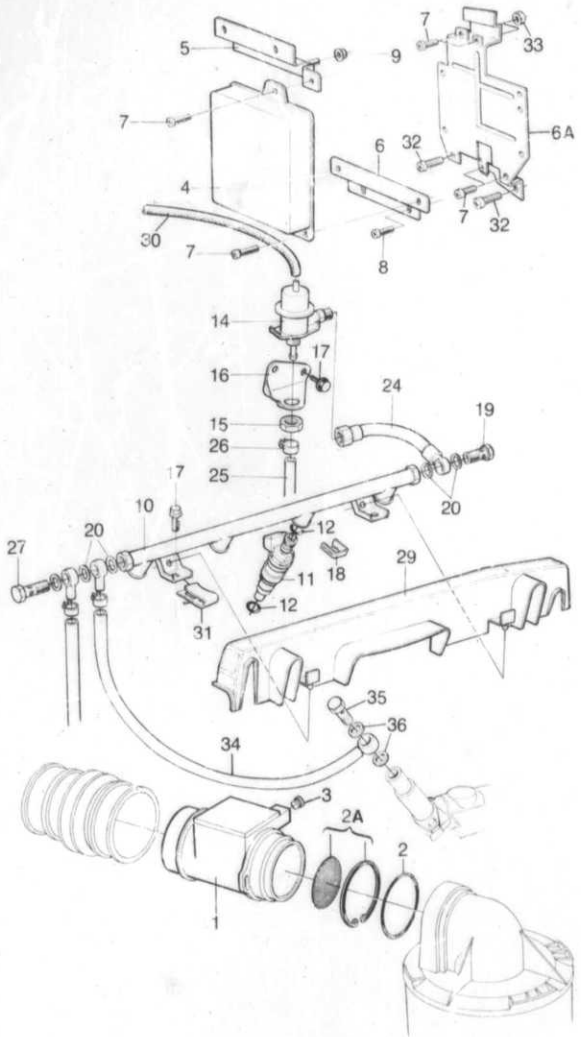


F0075 - 900

| 0860 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0540 | 14 | 75 68 041 | | 1987-,135) | 1 | Regulator | Regulator | 5 |
| 0550 | 14 | 75 64 123 | | 75) | 1 | Regulator | Regulator | 5 |
| 0560 | 14 | 75 64 131 | | 76) | 1 | Regulator | Regulator | 5 |
| 0570 | 15 | *80 50 767* | | -1988 NLS - USE 8151177 | 1 | Nut | Mutter | 5 |
| 0580 | 15 | 81 51 177 | | 1989- | 1 | Nut | Mutter | 5 |
| 0590 | 16 | 75 02 487 | | | 1 | Bracket | Konsol | 5 |
| 0600 | 17 | 81 25 148 | | | 4 | Screw | Skruv | 5 |
| 0610 | 18 | 93 56 486 | | | 4 | Clamp | Klammer | 5 |
| 0620 | 19 | 81 23 895 | | | 1 | Screw | Skruv | 5 |
| 0630 | 20 | *83 26 704* | | 91) NLS - USE 4443883 | 4 | Seal | Tätning | 5 |
| 0640 | 20 | *89 77 373* | | 92,122) NLS - USE 4443883 | 4 | Seal | Tätning | 5 |
| 0650 | 20 | *89 81 979* | | 123) NLS - USE 4443883 | 4 | Seal | Tätning | 5 |
| 0660 | 24 | *75 06 884* | | 1986 NLS - USE 7564339 | 1 | Hose | Slang | 5 |
| 0670 | 24 | *74 80 239* | | 1987-,57) NLS - USE 7564339 | 1 | Hose | Slang | 5 |
| 0680 | 24 | 75 64 339 | | 58) | 1 | Hose | Slang | 5 |
| 0690 | 25 | 75 11 702 | | | 1 | Hose | Slang | 5 |
| 0700 | 26 | 79 68 308 | | | 2 | Hose clamp | Slangklamma | 5 |
| 0710 | 27 | *83 19 915* | | NLS - USE 4374203 | 1 | Banjo bolt | Hålbult | 5 |
| 0720 | 29 | 75 31 510 | | 1986 | 1 | Cover | Kåpa | |
| 0730 | 30 | 91 36 243 | | 75), L=565 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0740 | 31 | 75 66 367 | | 1986 | 2 | Clamp | Klammer | 5 |
| 0750 | 32 | 79 22 818 | | | 2 | Screw | Skruv | 5 |
| 0760 | 33 | 79 73 365 | | | 2 | Nut | Mutter | 5 |
| 0770 | 34 | 89 81 342 | | 500,75) 1989- B202, SE EU, CA | 1 | Fuel pipe | Bränsleledning | 5 |
| 0790 | 35 | 83 20 319 | | 500,75) 1989- B202, SE EU, CA | 1 | Banjo bolt | Hålbult | 5 |
| 0810 | 36 | 89 81 987 | | 500,75) 1989- B202, SE EU, CA | 2 | Seal | Tätning | 5 |
| 0840 | | 91 36 243 | | L=5000 MM | X | Vaccum hose | Vakuumslang | 5 |

57. Engine -H060966.
58. Engine H060967-.
75. For I with catalytic converter. För I med katalytisk reaktor.
76. For TURBO with catalytic converter. För TURBO med katalytisk reaktor.
91. Ch. -J3007293, -J7008835.
92. Ch. J3007294-, J7008836-.
122. Ch. --J3021711, --J7030129
123. Ch. J3021712-, J7030130--
135. Without catalytic converter. Utan katalytisk reaktor.
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-E22

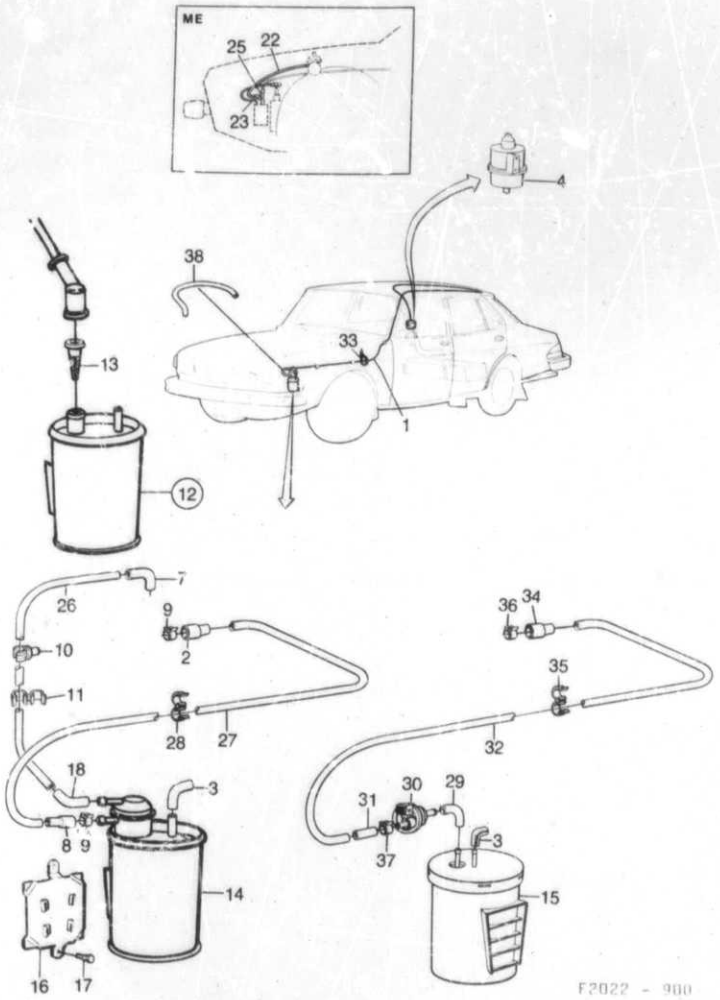


| 0900 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 93 04 775 | | | 1 | Hose | Slang | 5 |
| 0020 | 2 | 75 39 026 | | 108) -1988 | 1 | Hose | Slang | 5 |
| 0030 | 2 | 89 82 100 | | 500) 1989-, B201 | 1 | Hose | Slang | 5 |
| 0040 | 3 | *75 33 383* | | 200), -1988 NLS - USE 7539240 | 1 | Hose | Slang | 5 |
| 0040 | 3 | *40 18 586* | | 1989 NLS - USE 7539240 | 1 | Hose | Slang | 5 |
| 0060 | 3 | *89 27 139* | | 201), CV NLS - USE 4281531 | 1 | Hose | Slang | 5 |
| 0070 | 4 | | | See page 2-057, 1 D10 | | Valve | Ventil | |
| 0080 | 7 | *75 33 383* | | 108) NLS - USE 7539240 | 1 | Hose | Slang | 5 |
| 0090 | 8 | *89 34 898* | | 107) NLS - USE 7539026 | 1 | Hose | Slang | 5 |
| 0100 | 8 | 75 39 026 | | 108) -1988 | 1 | Hose | Slang | 5 |
| 0110 | 8 | 89 82 100 | | 500) 1989- 3201 | 1 | Hose | Slang | 5 |
| 0120 | 9 | 79 77 879 | | 500) 1989-, B201 | 2 | Hose clamp | Slangklamma | 5 |
| 0130 | 10 | 79 63 887 | | 500) 1989-, B201 TURBO | 1 | Tube clamp | Rörklamma | 5 |
| 0140 | 11 | 89 81 649 | | 500) 1989-, B201 I | 1 | Clamp | Klammer | 5 |
| 0150 | 12 | 83 23 008 | | C, ME | 1 | Carbon filter | Kolfilter | 3 |
| 0160 | 13 | *83 14 494* | | NLS | 1 | . Hose | . Slang | |
| 0170 | 14 | 75 32 054 | | | 1 | Carbon filter | Kolfilter | 3 |
| 0180 | 15 | 75 39 216 | | 1988, B202 I | 1 | Carbon filter | Kolfilter | 3 |
| 0190 | 15 | 75 39 216 | | 500) 1989-, B202 | 1 | Carbon filter | Kolfilter | 3 |
| 0200 | 16 | 93 00 302 | | | 1 | Bracket | Fäste | 5 |
| 0210 | 17 | 79 61 691 | | | 2 | Rivet | Nit | 5 |
| 0220 | 18 | *83 34 898* | | -1988 NLS - USE 7539026 | 1 | Hose | Slang | 5 |
| 0230 | 18 | *75 33 383* | | 500) 1989-, B201 NLS - USE 7539240 | 1 | Hose | Slang | 5 |
| 0240 | 22 | 75 34 430 | | ME | 1 | Hose | Slang | 5 |
| 0250 | 23 | 83 32 520 | | ME | 1 | . Manifold | . Grenrör | 4 |
| 0260 | 24 | 75 25 389 | | ME | 1 | Hose | Slang | 5 |
| 0270 | 26 | 75 33 680 | | 107) | 1 | Hose | Slang | 5 |
| 0280 | 26 | 75 38 986 | | 108) -1988 | 1 | Hose | Slang | 5 |
| 0290 | 26 | 89 81 599 | | 500) 1989-, B201 | 1 | Hose | Slang | 5 |
| 0300 | 27 | 75 33 318 | | 107) | 1 | Hose | Slang | 5 |
| 0310 | 27 | 75 38 960 | | 108) -1988, B201 | 1 | Hose | Slang | 5 |
| 0320 | 27 | 75 38 978 | | 108) -1988, B202 TURBO | 1 | Hose | Slang | 5 |
| 0330 | 27 | 89 81 870 | | 500) 1989-, B201 | 1 | Hose | Slang | 5 |
| 0340 | 28 | 73 98 464 | | 107) | 1 | Clamp | Klammer | 5 |
| 0350 | 28 | 75 39 984 | | 108) | 1 | Clamp | Klammer | 5 |
| 0360 | 29 | 75 39 240 | | 1988, B202 I | 1 | Hose | Slang | 5 |
| 0370 | 29 | *40 18 586* | | 500) 1989-, B202 NLS - USE 7539240 | 1 | Hose | Slang | 5 |
| 0380 | 30 | 75 39 257 | | 1988, B202 I | 1 | Tank ventilation valve | Tankurluftningsventil | 5 |
| 0390 | 30 | 75 39 257 | | 500) 1989-, B202 | 1 | Tank ventilation valve | Tankurluftningsventil | 5 |
| 0400 | 31 | 75 39 349 | | 1988, B202 I | 1 | Hose | Slang | 5 |
| 0410 | 31 | 75 39 349 | | 500) 1989-, B202 | 1 | Hose | Slang | 5 |
| 0420 | 32 | 75 39 414 | | 1988, B202 I | 1 | Tube | Rör | 4 |
| 0430 | 32 | 93 81 888 | | 500) 1989-, B202 | 1 | Tube | Rör | 4 |
| 0440 | 33 | 79 71 864 | | | 1 | Tensioning band | Spännband | 5 |
| 0450 | 34 | 75 39 026 | | 1988, B202 I | 1 | Hose | Slang | 5 |
| 0460 | 34 | 89 82 100 | | 500) 1989-, B202 | 1 | Hose | Slang | 5 |
| 0470 | 35 | 75 39 984 | | 1988, B202 I | 1 | Clamp | Klammer | 5 |
| 0480 | 35 | 75 39 984 | | 500) 1989- B202 | 1 | Clamp | Klammer | 5 |
| 0490 | 36 | 79 77 879 | | 500) 1989- B202 | 1 | Hose clamp | Slangklamma | 5 |
| 0500 | 37 | 79 73 522 | | 500) 1989- B202 | 1 | Hose clamp | Slangklamma | 5 |
| 0510 | 38 | 95 19 737 | | | 1 | Protecting moulding | Skyddslist | 5 |
| 0520 | | | | | | | | |
| 0530 | | 93 62 781 | | L=10 M | X | Hose | Slang | 2 |

107. Ch. -J3017681, -J7024689.
108. Ch. J3017682-, J7024690-.
200. Ch.-J7033873 CV.
201. Ch.J7033874-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-E24

## Enrichment device Turbo
## Fullastupprikning Turbo

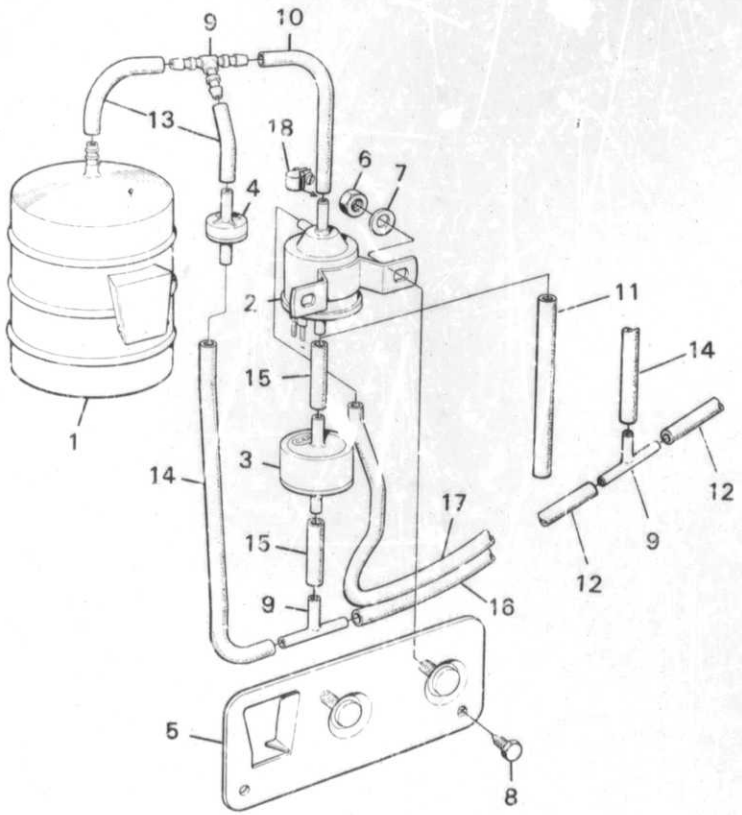


R 7041–900

| 0950 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 83 86 724 | | | 1 | Vacuum tank | Vakuumtank | 5 |
| 0020 | 2 | *93 39 375* | | NLS - USE 8591117 | 1 | Solenoid valve | Magnetventil | 4 |
| 0030 | 3 | 83 23 362 | | M | 1 | Valve | Ventil | 2 |
| 0040 | 4 | 93 26 752 | | | 1 | Non-return valve | Backventil | 5 |
| 0050 | 5 | 93 41 769 | | | 1 | Bracket | Fäste | 5 |
| 0060 | 6 | 80 29 555 | | -1987 | 2 | Nut | Mutter | 5 |
| 0070 | 6 | 81 51 227 | | 1988- | 2 | Nut | Mutter | 5 |
| 0080 | 7 | 80 29 951 | | | 2 | Washer | Bricka | 5 |
| 0090 | 8 | 79 72 359 | | | 2 | Screw | Skruv | 5 |
| 0100 | 9 | 83 66 791 | | M | 2 | Pipe | Rör | 4 |
| 0110 | 9 | 83 66 791 | | A | 3 | Pipe | Rör | 4 |
| 0120 | 10 | 91 36 243 | | L=90 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0130 | 11 | 93 25 481 | | A | 1 | Hose | Slang | 5 |
| 0140 | 12 | 93 41 215 | | A | 2 | Hose | Slang | 5 |
| 0150 | 13 | 91 36 243 | | L=55 MM | 2 | Vaccum hose | Vakuumslang | 5 |
| 0160 | 14 | 91 36 243 | | M, L=175 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0170 | 14 | 91 36 243 | | A, L=175 MM | 2 | Vaccum hose | Vakuumslang | 5 |
| 0180 | 15 | 91 36 243 | | M, L=30 MM | 2 | Vaccum hose | Vakuumslang | 5 |
| 0190 | 16 | 91 36 243 | | L=670 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0200 | 17 | 91 36 243 | | L=790 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0210 | | | | | | | | |
| 0220 | | 91 36 243 | | L=5000 MM | X | Vaccum hose | Vakuumslang | 5 |


MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

2 GROUP INDEX

| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1--F02 Inlet manifold B201 C / Inloppsrör B201 C

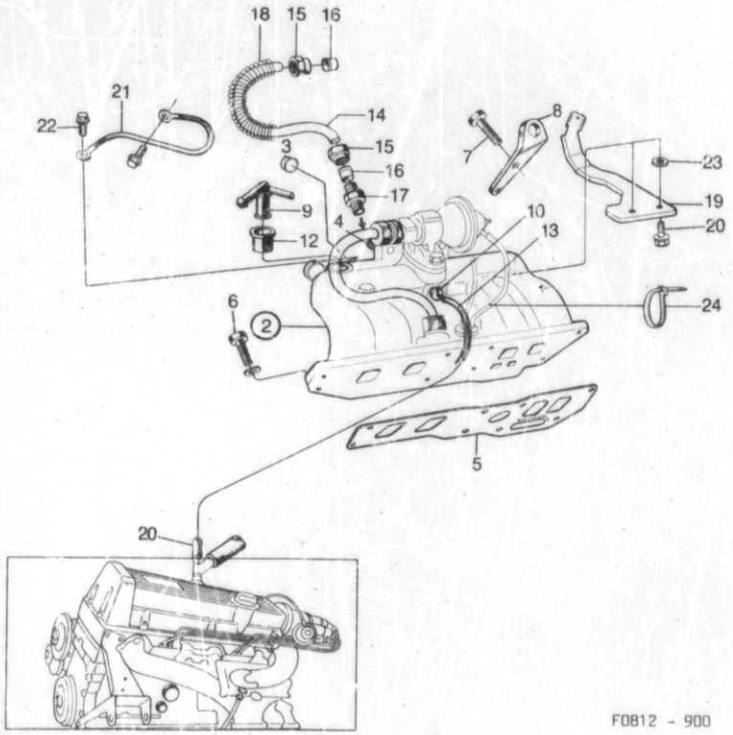


F0812 - 900

| 1000 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 2 | 75 62 440 | | 35,36) | 1 | Intake manifold | Inloppsrör | 6 |
| 0020 | 2 | *75 62 424* | | 34,36) NLS - USE 7562440, 8123168 | 1 | Intake manifold | Inloppsrör | 6 |
| 0030 | 2 | 75 81 440 | | 37) | 1 | Intake manifold | Inloppsrör | 6 |
| 0040 | 3 | 81 23 168 | | | 1 | Plug | Plugg | 4 |
| 0050 | 4 | 93 59 480 | | | 4 | Stud | Pinnskruv | 5 |
| 0060 | 5 | *93 07 257* | | 1986 NLS - USE 7569346 | 1 | Gasket | Packning | |
| 0070 | 5 | 75 69 346 | | 1987- | 1 | Gasket | Packning | 2 |
| 0080 | 6 | 81 25 197 | | | 6 | Screw | Skruv | 5 |
| 0090 | 7 | 81 25 205 | | | 2 | Screw | Skruv | 5 |
| 0100 | 8 | 75 61 509 | | | 1 | Lifting eye | Lyftögla | 5 |
| 0110 | 9 | 93 12 802 | | | 1 | Nipple | Nippel | 4 |
| 0120 | 10 | 83 08 850 | | | 1 | Nipple | Nippel | 5 |
| 0130 | 12 | 75 15 208 | | | 1 | Bushing | Bussning | 5 |
| 0140 | 13 | 91 36 243 | | L=215 MM | 1 | Vacuum hose | Vakuumslang | 5 |
| 0150 | 14 | 75 04 012 | | | 1 | EGR-pipe | EGR-rör | 5 |
| 0160 | 15 | *81 28 969* | | NLS - USE 8145559 | 2 | Nut | Mutter | |
| 0170 | 16 | 81 32 235 | | | 2 | Ferrule | Skärring | 5 |
| 0180 | 17 | 81 31 989 | | | 1 | Nipple | Nippel | 5 |
| 0190 | 18 | 75 04 046 | | | 1 | Protection | Skydd | 6 |
| 0200 | 19 | 75 64 057 | | 37) | 1 | Bracket | Konsol | 5 |
| 0210 | 20 | 81 25 007 | | 37) | 2 | Screw | Skruv | 5 |
| 0220 | 20 | 81 25 023 | | ALTERNATIVE, USE WITH 7585581 | 2 | Screw | Skruv | 5 |
| 0230 | | | | | | | | |
| 0240 | 21 | 75 64 859 | | 37) | 1 | Cable | Ledning | 6 |
| 0250 | 22 | 80 97 859 | | 37) | 1 | Screw | Skruv | 5 |
| 0260 | 23 | 75 85 581 | | | 2 | Spacer | Distans | 5 |
| 0270 | 24 | *18 00 259* | | NLS - USE 8153611 | 1 | Tensioning band | Spännband | 5 |
| 0280 | | | | | | | | |
| 0290 | | 91 36 243 | | L=5000 MM | X | Vaccum hose | Vakuumslang | 5 |

34. For cars without EGR. För bilar utan EGR.
35. For cars with EGR. För bilar med EGR.
36. For cars with SOLEX carburetor. För bilar med SOLEX-förgasare.
37. For cars with PIERBURG carburetor. För bilar med PIERBURG-förgasare.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-F04

## Inlet manifold
## B201 I

## Inloppsrör
## B201 I

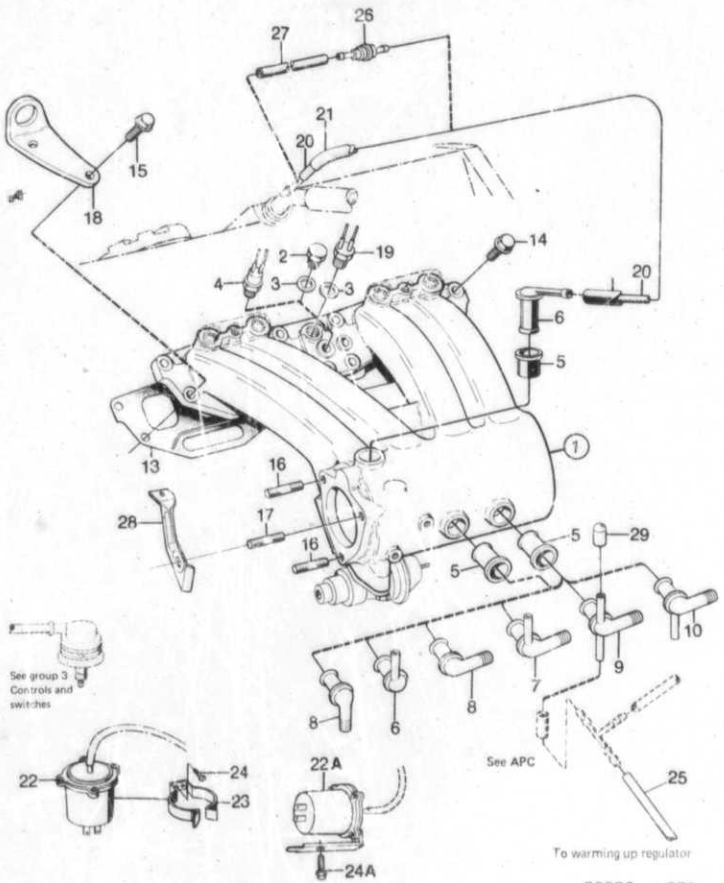


| 1050 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 62 242 | | 34,132) | 1 | Intake manifold | Inloppsrör | 6 |
| 0020 | 1 | *75 62 234* | | 28,35) NLS - USE 7581051 | 1 | Intake manifold | Inloppsrör | 6 |
| 0030 | 1 | 75 81 051 | | 29,35), -1988 | 1 | Intake manifold | Inloppsrör | 6 |
| 0040 | 1 | 75 81 051 | | 35), 1989-, TURBO | 1 | Intake manifold | Inloppsrör | 6 |
| 0050 | 1 | 75 62 242 | | 34), 1989-, TURBO, ME | 1 | Intake manifold | Inloppsrör | 6 |
| 0060 | 1 | 75 62 242 | | 34), 1989- I | 1 | Intake manifold | Inloppsrör | 6 |
| 0070 | 2 | *75 64 222* | | -1988, A NLS - USE 7563042 | 1 | Plug | Propp | 5 |
| 0080 | 2 | *81 23 721* | | 1989-, A NLS - USE 7563042 | 1 | Plug | Propp | 5 |
| 0090 | 3 | *83 26 712* | | NLS - USE 4161162 | 1 | Seal | Tätning | 5 |
| 0100 | 4 | 75 19 416 | | SHIFT-UP | 1 | Thermostat | Termostat | 5 |
| 0110 | 5 | 75 15 208 | | | 3 | Bushing | Bussning | 5 |
| 0120 | 6 | 83 59 937 | | | 2 | Nipple | Nippel | 4 |
| 0130 | 7 | 93 12 802 | | | 1 | Nipple | Nippel | 4 |
| 0140 | 8 | 83 57 543 | | | 1 | Nipple | Nippel | 4 |
| 0150 | 9 | 75 22 477 | | | 1 | Nipple | Nippel | 4 |
| 0160 | 10 | 74 87 556 | | | 1 | Nipple | Nippel | 4 |
| 0170 | 13 | *93 07 265* | | 1986 NLS - USE 7582315 | 1 | Gasket | Packning | 3 |
| 0180 | 13 | 75 82 315 | | 1987- | 1 | Gasket | Packning | 2 |
| 0190 | 14 | 81 25 197 | | | 6 | Screw | Skruv | 5 |
| 0200 | 15 | 81 25 205 | | | 2 | Screw | Skruv | 5 |
| 0210 | 15 | 90 83 933 | | -1988, AC | 2 | Screw | Skruv | 5 |
| 0220 | 15 | *80 82 976* | | 1989-, AC NLS - USE 8083933 | 2 | Screw | Skruv | 5 |
| 0230 | 16 | 80 05 928 | | | 2 | Stud | Pinnskruv | 5 |
| 0240 | 17 | 80 05 936 | | 1986 | 1 | Stud | Pinnskruv | 5 |
| 0250 | 17 | 80 05 910 | | 1987- | 1 | Stud | Pinnskruv | 5 |
| 0260 | 18 | 75 61 509 | | | 1 | Lifting eye | Lyftögla | 5 |
| 0270 | 19 | 75 06 322 | | US | 1 | Thermo contact | Termokontakt | 3 |
| 0280 | 19 | 75 06 322 | | 185), EU WITH CAT | 1 | Thermo contact | Termokontakt | 3 |
| 0290 | 20 | 91 36 243 | | L=410 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0300 | 20 | 91 36 243 | | TURBO, L=330 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0310 | 21 | 75 14 375 | | | 1 | Hose | Slang | 4 |
| 0320 | 21 | 75 22 295 | | TURBO | 1 | Hose | Slang | 4 |
| 0330 | 22 | 93 15 953 | | -1988 | 1 | Contact | Kontakt | 5 |
| 0340 | 22A | 89 79 189 | | 1989-,500) | 1 | Pressure impulse contact | Tryckimpulskontakt | 5 |
| 0350 | 22A | 89 79 189 | | 1989-,132,186,500) | 1 | Pressure impulse contact | Tryckimpulskontakt | 5 |
| 0360 | 22A | 40 19 352 | | 187,132) | 1 | Pressure impulse contact | Tryckimpulskontakt | 5 |
| 0370 | 23 | 93 01 177 | | -1988 | 1 | Bracket | Fäste | 3 |
| 0380 | 24 | 79 22 727 | | -1988 | 2 | Screw | Skruv | 5 |
| 0390 | 24A | 79 75 196 | | 500), 1989- | 1 | Screw | Skruv | 5 |
| 0400 | 25 | 75 12 346 | | | 1 | Hose | Slang | 5 |
| 0410 | 26 | 75 21 313 | | TURBO | 1 | Non-return valve | Backventil | 6 |
| 0420 | 27 | 91 36 243 | | TURBO, L=40 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0430 | 28 | 75 80 095 | | | 1 | Bracket | Fäste | 5 |
| 0440 | 29 | 83 35 614 | | -1987 | 1 | Plug | Propp | 4 |
| 0450 | | | | | | | | |
| 0460 | | 91 36 243 | | L=5000 MM | X | Vaccum hose | Vakuumslang | 5 |

28. Engine -G075453.
29. Engine G075454-.
34. For cars without EGR. För bilar utan EGR.
35. For cars with EGR. För bilar med EGR.
132. With catalytic converter. Med katalytisk reaktor.
185. Engine K083591-.
186. Ch. M = -K3018741, -K7022344, Ch. A = -K3019424, -K7022342.
187. Ch. M = K3018742-, K7022345-, Ch. A = K3019425-, K7022343-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX



| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

Inlet and exhaust system

# 1-F06 *Inlet manifold* *B202*

Inlopps- och avgassystem

# *Inloppsrör* *B202*

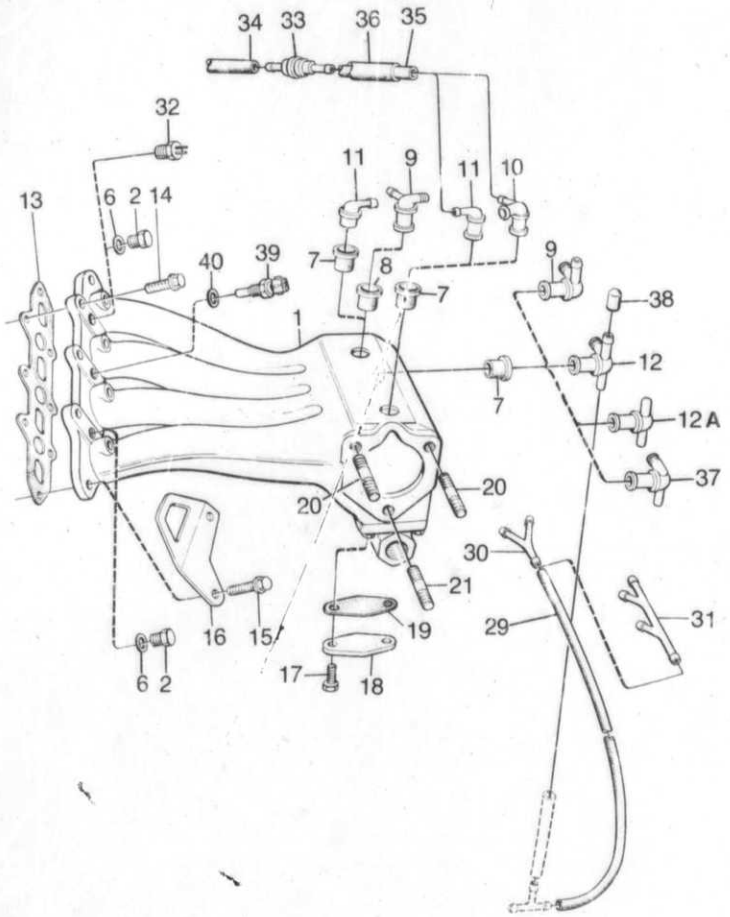


F0078 - 900

| 1075 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 62 218 | | 135), -1987 | 1 | Intake manifold | Inloppsrör | 6 |
| 0020 | 1 | 75 62 226 | | 132), -1987 | 1 | Intake manifold | Inloppsrör | 6 |
| 0030 | 1 | 75 87 553 | | 1988- | 1 | Intake manifold | Inloppsrör | 6 |
| 0040 | 2 | *75 64 222* | | 132), -1988, A NLS - USE 7563042 | 1 | ▪ Plug | ▪ Propp | 5 |
| 0050 | 2 | *81 23 721* | | 132), 1989-, A NLS - USE 7563042 | 1 | ▪ Plug | ▪ Propp | 5 |
| 0060 | 2 | *75 64 222* | | -1988 NLS - USE 7563042 | 2 | Plug | Propp | 5 |
| 0070 | 2 | *81 23 721* | | 1989- NLS - USE 7563042 | 2 | Plug | Propp | 5 |
| 0080 | 6 | 81 24 141 | | 160) | 2 | Seal | Tätning | 5 |
| 0090 | 6 | *83 26 712* | | 161) NLS - USE 4161162 | 2 | Seal | Tätning | 5 |
| 0100 | 7 | 75 15 208 | | | 2 | Bushing | Bussning | 5 |
| 0110 | 8 | 75 61 228 | | -1987 | 1 | Bushing | Bussning | 5 |
| 0120 | 8 | 75 61 228 | | 1988- | 1 | Bushing | Bussning | 5 |
| 0130 | 9 | 75 15 208 | | 132), 1988- | 1 | Bushing | Bussning | 5 |
| 0140 | 9 | 93 12 802 | | | 2 | Nipple | Nippel | 4 |
| 0150 | 10 | 75 23 038 | | | 1 | Nipple | Nippel | 4 |
| 0160 | 11 | 83 59 937 | | -1988 | 1 | Nipple | Nippel | 4 |
| 0170 | 12 | 75 22 477 | | -1988 | 1 | Nipple | Nippel | 4 |
| 0180 | 12A | 91 16 088 | | 1989- | 1 | Nipple | Nippel | 4 |
| 0190 | 13 | *75 15 885* | | -1987 NLS - USE 7584436 | 1 | Gasket | Packning | 2 |
| 0200 | 13 | 75 84 436 | | 1988- | 1 | Gasket | Packning | 2 |
| 0210 | 14 | 81 25 197 | | | 6 | Screw | Skruv | 5 |
| 0220 | 15 | 81 25 205 | | | 2 | Screw | Skruv | 5 |
| 0230 | 16 | 75 04 392 | | | 1 | Lifting eye | Lyftögla | 5 |
| 0240 | 17 | *80 19 903* | | 156) NLS - USE 9166281 | 2 | Screw | Skruv | 5 |
| 0250 | 17 | 80 19 895 | | 157) | 2 | Screw | Skruv | 5 |
| 0260 | 18 | 93 58 177 | | | 1 | Flange | Fläns | 6 |
| 0270 | 19 | *83 57 485* | | 1986 NLS - USE 7507973 | 1 | Gasket | Packning | 2 |
| 0280 | 19 | 75 07 973 | | 1987- | 1 | Gasket | Packning | 4 |
| 0290 | 20 | 80 05 928 | | | 2 | Stud | Pinnskruv | 5 |
| 0300 | 20 | 81 25 023 | | ALTERNATIVE, USE WITH WASHER 7585581 | 2 | Screw | Skruv | 5 |
| 0310 | | | | | | | | |
| 0320 | 21 | 80 05 936 | | 1986 | 1 | Stud | Pinnskruv | 5 |
| 0330 | 21 | 80 05 910 | | 1987- | 1 | Stud | Pinnskruv | 5 |
| 0340 | 29 | 91 36 243 | | L=670 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0350 | 30 | 85 09 002 | | | 1 | Tube | Rör | 2 |
| 0360 | 31 | 85 10 091 | | M, SE, US | 1 | Manifold | Grenrör | 2 |
| 0370 | 32 | 75 19 416 | | -1988 SHIFT-UP, US | 1 | Thermostat | Termostat | 5 |
| 0380 | 33 | 75 21 313 | | | 1 | Non-return valve | Backventil | 6 |
| 0390 | 34 | 91 36 243 | | -1988, L=40 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0400 | 34 | *83 64 416* | | 1989- NLS | 1 | Hose | Slang | 2 |
| 0410 | 35 | 91 36 243 | | L=410 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0420 | 35 | *83 64 416* | | TURBO NLS | 1 | Hose | Slang | 2 |
| 0430 | 36 | 75 14 375 | | | 1 | Hose | Slang | 4 |
| 0440 | 36 | 75 14 383 | | TURBO | 1 | Hose | Slang | 4 |
| 0450 | 37 | 74 87 556 | | | 1 | Nipple | Nippel | 4 |
| 0460 | 38 | 83 35 614 | | -1988 | 1 | Plug | Propp | 4 |
| 0470 | 38 | *83 60 463* | | 1989- NLS - USE 8335614 | 1 | Plug | Plugg | 6 |
| 0480 | 39 | 93 57 021 | | | 1 | Temperature sensor | Temperaturgivare | 2 |
| 0490 | 40 | *89 77 373* | | 122) NLS - USE 4443883 | 1 | Seal | Tätning | 5 |
| 0500 | 40 | *89 81 979* | | 123) NLS - USE 4443883 | 1 | Seal | Tätning | 5 |
| 0510 | | | | | | | | |
| 0520 | | 91 36 243 | | L=5000 MM | X | Vaccum hose | Vakuumslang | 5 |

122. Ch. -J3021711, -J7030129
123. Ch. J3021712-, J7030130-
132. With catalytic converter. Med katalytisk reaktor.
135. Without catalytic converter. Utan katalytisk reaktor.
156. Engine -K033690.
157. Engine K033691-.
160. Engine -K058587.
161. Engine K058588-.



## MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



## 2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-F08

## *Throttle valve housing*
*B201 I*

## *Spjällhus*
*B201 I*

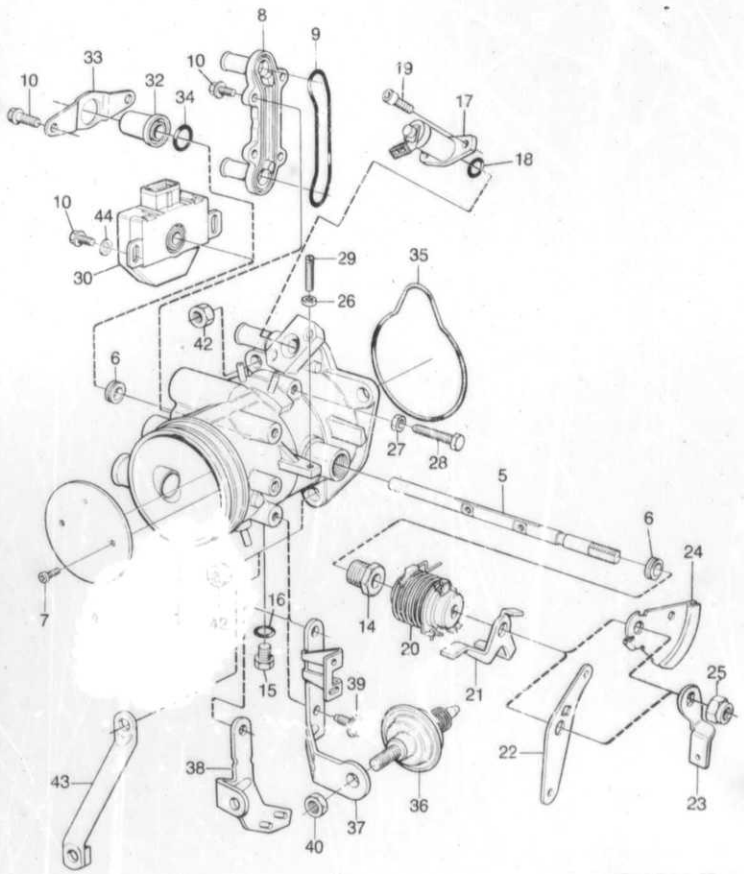


R 7697–900

| 1110 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 17 873 | | 1986,34) | 1 | Throttle body | Spjällhus | 6 |
| 0020 | 1 | 75 17 980 | | 1986,35) | 1 | Throttle body | Spjällhus | 6 |
| 0030 | 1 | 75 63 265 | | 1987-1988,35) | 1 | Throttle body | Spjällhus | 6 |
| 0040 | 1 | 74 84 694 | | 1989-,35) | 1 | Throttle body | Spjällhus | 6 |
| 0050 | 1 | 75 18 038 | | 1986,132) | 1 | Throttle body | Spjällhus | 6 |
| 0060 | 1 | 75 18 038 | | 1986, ME | 1 | Throttle body | Spjällhus | 6 |
| 0070 | 1 | *75 63 307* | | 132), 1987-1988 NLS - USE 7580707 | 1 | Throttle body | Spjällhus | 6 |
| 0080 | 1 | 75 80 707 | | 1987-1988, ME | 1 | Throttle body | Spjällhus | 6 |
| 0090 | 1 | 74 84 702 | | 132,500), 1989- | 1 | Throttle body | Spjällhus | 6 |
| 0100 | 4 | 83 53 484 | | | 1 | Shutter | Spjäll | 6 |
| 0110 | 5 | *75 04 673* | | NLS - USE 8057259, 9107624 | 1 | Shutter shaft | Spjällaxel | 6 |
| 0120 | 6 | 83 57 345 | | 132), A | 2 | Seal | Tätning | 5 |
| 0130 | 7 | 80 59 073 | | | 2 | Screw | Skruv | 5 |
| 0140 | 8 | 75 05 423 | | | 1 | Cover | Lock | 5 |
| 0150 | 9 | 75 06 264 | | | 1 | O-ring | O-ring | 2 |
| 0160 | 10 | 75 07 080 | | | 6 | Screw | Skruv | 5 |
| 0170 | 10 | 75 07 080 | | 132) | 4 | Screw | Skruv | 5 |
| 0180 | 14 | 93 59 050 | | | 1 | Plug | Plugg | 5 |
| 0190 | 15 | 75 62 739 | | | 1 | Plug | Plugg | 5 |
| 0200 | 16 | *81 09 563* | | 1986 NLS - USE 797 546 | 1 | O-ring | O-ring | 2 |
| 0210 | 16 | *80 46 559* | | 1987- NLS - USE 7974546 | 1 | O-ring | O-ring | 2 |
| 0220 | 17 | 93 12 471 | | | 1 | Starter valve | Startventil | 4 |
| 0230 | 18 | 81 09 548 | | 1986 | 1 | O-ring | O-ring | 4 |
| 0240 | 18 | 80 46 542 | | 1987- | 1 | O-ring | O-ring | 2 |
| 0250 | 19 | 75 07 072 | | | 2 | Screw | Skruv | 5 |
| 0260 | 20 | 75 16 974 | | | 1 | Return spring | Returfjäder | 5 |
| 0270 | 21 | *75 62 390* | | SE, EU NLS - USE 7583859 | 1 | Lever | Hävarm | 6 |
| 0280 | 22 | 75 64 396 | | A | 1 | Lever | Hävarm | 5 |
| 0290 | 23 | 75 62 010 | | | 1 | Lever | Hävarm | 6 |
| 0300 | 24 | 93 09 261 | | M | 1 | Cam disc | Kamskiva | 5 |
| 0310 | 25 | 80 74 288 | | | 1 | Nut | Mutter | 5 |
| 0320 | 26 | *80 50 593* | | -1987 NLS - USE 8151045 | 1 | Nut | Mutter | 5 |
| 0330 | 26 | 81 51 045 | | 1988- | 1 | Nut | Mutter | 5 |
| 0340 | 27 | *80 50 601* | | -1987 NLS - USE 8151052 | 1 | Nut | Mutter | 5 |
| 0350 | 27 | 81 51 052 | | 1988- | 1 | Nut | Mutter | 5 |
| 0360 | 28 | 83 57 378 | | | 1 | Screw | Skruv | 5 |
| 0370 | 29 | *80 07 486* | | NLS - USE 4087706 | 1 | Set screw | Stoppskruv | 5 |
| 0380 | 30 | 75 01 612 | | 132), A | 1 | Potentiometer | Potentiometer | 6 |
| 0390 | 32 | 75 07 098 | | | 1 | Cover | Lock | 5 |
| 0400 | 33 | 75 07 106 | | | 1 | Bracket | Fäste | 5 |
| 0410 | 34 | 80 48 829 | | | 1 | O-ring | O-ring | 2 |
| 0420 | 35 | 75 21 875 | | | 1 | O-ring | O-ring | 4 |
| 0430 | 36 | 93 11 895 | | | 1 | Absorber | Dämpare | 3 |
| 0440 | 37 | 75 18 889 | | | 1 | Bracket | Konsol | 5 |
| 0450 | 38 | 75 62 044 | | 132), M | 1 | Bracket | Konsol | 5 |
| 0460 | 39 | 81 29 876 | | 1986 | 2 | Screw | Skruv | 5 |
| 0470 | 39 | 79 71 294 | | 1987- | 2 | Screw | Skruv | 5 |
| 0480 | 40 | 80 69 015 | | | 1 | Nut | Mutter | 5 |
| 0490 | 42 | *81 25 882* | | -1987 NLS - USE 8151326 | 3 | Nut | Mutter | 5 |
| 0500 | 42 | 81 51 326 | | 1988- | 3 | Nut | Mutter | 5 |
| 0510 | 43 | 75 17 402 | | | 1 | Stay | Stag | 6 |
| 0520 | 44 | *80 29 936* | | 132) NLS - USE 9166356 | 2 | Washer | Bricka | 5 |

34. For cars without EGR. För bilar utan EGR.
35. For cars with EGR. För bilar med EGR.
132. With catalytic converter. Med katalytisk reaktor.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-F10

## Auxiliary air regulator
## B201 I

## Tillsatsluftslid
## B201 I

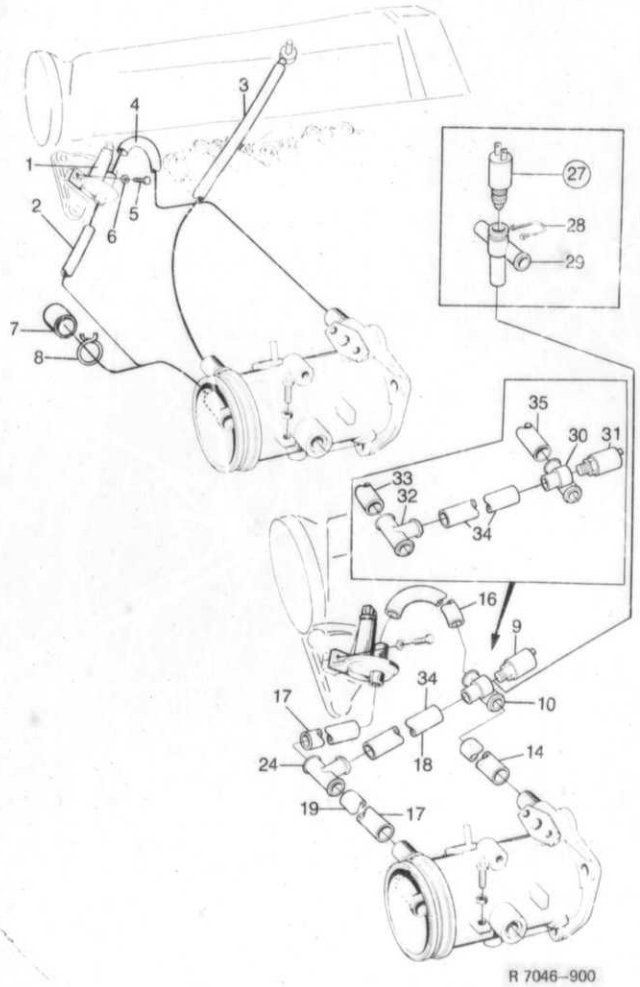


R 7046-900

| 1125 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 83 57 832 | | 120,135) | 1 | Air valve | Luftventil | 4 |
| 0020 | 1 | 91 14 869 | | 121,135) | 1 | Air valve | Luftventil | 4 |
| 0030 | 1 | 93 13 909 | | 164,132) | 1 | Air valve | Luftventil | 4 |
| 0040 | 1 | 91 14 859 | | 165,132) | 1 | Air valve | Luftventil | 4 |
| 0050 | 2 | 93 08 982 | | | 1 | Hose | Slang | 4 |
| 0060 | 3 | 83 60 414 | | | 1 | Hose | Slang | 4 |
| 0070 | 4 | 93 08 941 | | | 1 | Hose | Slang | 4 |
| 0080 | 5 | 93 50 653 | | | 2 | Screw | Skruv | 5 |
| 0090 | 6 | 80 29 951 | | | 2 | Washer | Bricka | 5 |
| 0100 | 7 | 93 00 625 | | | 1 | Plug | Plugg | 5 |
| 0110 | 8 | 79 35 208 | | | 1 | Hose clamp | Slangklamma | 5 |
| 0120 | 9 | 83 34 005 | | AC | 1 | Solenoid valve | Magnetventil | 3 |
| 0130 | 10 | 75 28 144 | | | 1 | T-pipe | T-rör | 5 |
| 0140 | 14 | 75 26 049 | | AC | 1 | Hose | Slang | 4 |
| 0150 | 14 | *75 27 597* | | A, ME, FE NLS | 1 | Hose | Slang | 4 |
| 0160 | 16 | 75 26 031 | | AC | 1 | Hose | Slang | 4 |
| 0170 | 17 | 75 26 056 | | AC | 1 | Hose | Slang | 4 |
| 0180 | 17 | 75 26 056 | | A, ME, FE | 2 | Hose | Slang | 4 |
| 0190 | 18 | 93 67 525 | | AC | 1 | Hose | Slang | 4 |
| 0200 | 19 | 75 26 064 | | AC | 1 | Hose | Slang | 4 |
| 0210 | 24 | 83 17 828 | | AC | 1 | Nipple | Nippel | 5 |
| 0220 | 27 | 88 20 722 | | 1986, AC CLARION | 1 | Solenoid valve | Magnetventil | 3 |
| 0230 | 28 | 88 20 748 | | 1986, AC CLARION | 1 | ,Clip | ,Clips | 5 |
| 0240 | 29 | 88 20 755 | | 1986, AC CLARION | 1 | ,T-pipe | ,T-rör | 5 |
| 0250 | 30 | 75 28 144 | | A, ME, FE | 1 | T-pipe | T-rör | 5 |
| 0260 | 31 | 83 34 005 | | A, ME, FE | 1 | Solenoid valve | Magnetventil | 3 |
| 0270 | 32 | 83 17 828 | | A, ME, FE | 1 | Nipple | Nippel | 5 |
| 0280 | 33 | 93 67 483 | | A, ME, FE | 1 | Hose | Slang | 4 |
| 0290 | 34 | 93 67 525 | | A, ME, FE | 2 | Hose | Slang | 4 |
| 0300 | 35 | *75 27 583* | | A, ME, FE NLS | 1 | Hose | Slang | 4 |

120. Ch. -J3023673, -J7032934
121. Ch. J3023674-, J7032935-
132. With catalytic converter. Med katalytisk reaktor.
135. Without catalytic converter. Utan katalytisk reaktor.
164. Engine -K071067.
165. Engine K071068-.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-F12

## Throttle valve housing
## B201 Turbo

## Spjällhus
## B201 Turbo

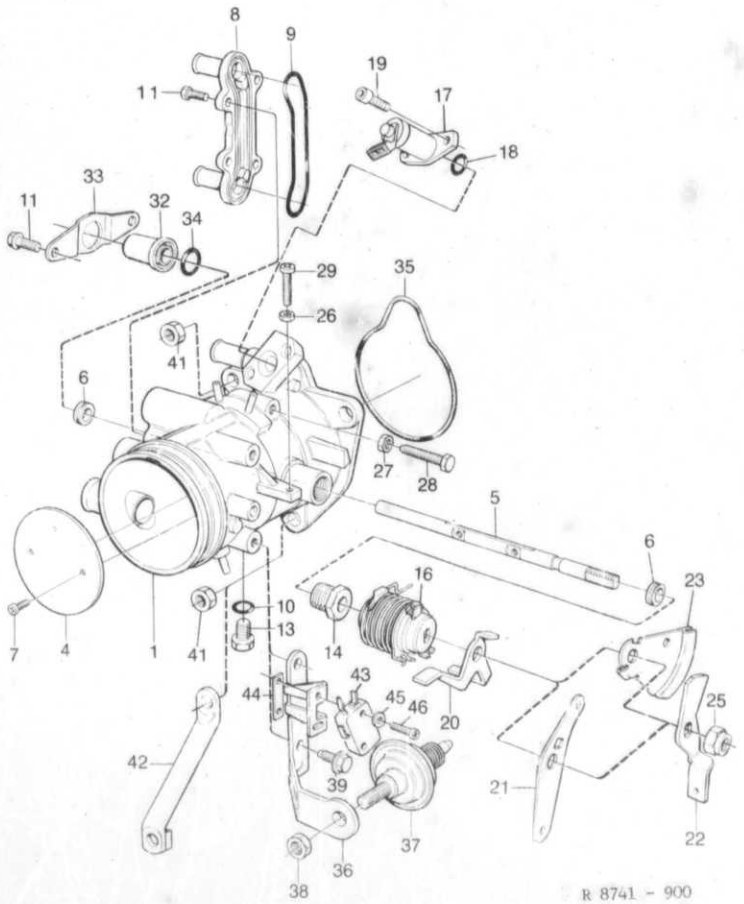


R 8741 - 900

| 1160 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 60 485 | | 1986,34) | 1 | Throttle body | Spjällhus | 6 |
| 0020 | 1 | *75 60 493* | | 1986,35) NLS - USE 7562739, 7563372, 7974546 | 1 | Throttle body | Spjällhus | 6 |
| 0030 | 1 | 75 64 032 | | 1987-1988,132) | 1 | Throttle body | Spjällhus | 6 |
| 0040 | 1 | 74 85 907 | | 1989-,500,132) | 1 | Throttle body | Spjällhus | 6 |
| 0050 | 1 | 75 63 372 | | 1987-1988,35) | 1 | Throttle body | Spjällhus | 6 |
| 0060 | 1 | 74 85 899 | | 1989-,35) | 1 | Throttle body | Spjällhus | 6 |
| 0070 | 1 | *75 63 984* | | 1986, ME NLS | 1 | Throttle body | Spjällhus | 6 |
| 0080 | 1 | 75 80 715 | | 1987-1988, ME | 1 | Throttle body | Spjällhus | 6 |
| 0090 | 4 | 83 53 484 | | | 1 | Shutter | Spjäll | 6 |
| 0100 | 5 | *75 04 673* | | NLS - USE 8057259, 9107624 | 1 | Shutter shaft | Spjällaxel | 6 |
| 0110 | 6 | 83 57 345 | | | 2 | Seal | Tätning | 5 |
| 0120 | 7 | 80 59 073 | | | 2 | Screw | Skruv | 5 |
| 0130 | 8 | 75 05 423 | | | 1 | Cover | Lock | 5 |
| 0140 | 9 | 75 06 264 | | | 1 | O-ring | O-ring | 2 |
| 0150 | 10 | *81 09 563* | | 1986 NLS - USE 7974546 | 1 | O-ring | O-ring | 2 |
| 0160 | 10 | *80 46 559* | | 1987- NLS - USE 7974546 | 1 | O-ring | O-ring | 2 |
| 0170 | 11 | 75 07 080 | | | 6 | Screw | Skruv | 5 |
| 0180 | 13 | 75 52 739 | | | 1 | Plug | Plugg | 5 |
| 0190 | 14 | 93 59 050 | | | 1 | Plug | Plugg | 5 |
| 0200 | 16 | 75 16 974 | | | 1 | Return spring | Returfjäder | 5 |
| 0210 | 17 | 93 12 471 | | | 1 | Starter valve | Startventil | 4 |
| 0220 | 18 | 81 09 548 | | 1986 | 1 | O-ring | O-ring | 4 |
| 0230 | 18 | 80 46 542 | | 1987- | 1 | O-ring | O-ring | 2 |
| 0240 | 19 | 75 07 072 | | | 2 | Screw | Skruv | 5 |
| 0250 | 20 | *75 05 415* | | 1986 NLS - USE 7583859 | 1 | Lever | Hävarm | 6 |
| 0260 | 20 | *75 62 390* | | 1987- NLS - USE 7583859 | 1 | Lever | Hävarm | 6 |
| 0270 | 21 | 75 64 396 | | A | 1 | Lever | Hävarm | 5 |
| 0280 | 22 | 75 18 897 | | | 1 | Lever | Hävarm | 6 |
| 0290 | 23 | 93 03 261 | | M | 1 | Cam disc | Kamskiva | 5 |
| 0300 | 25 | 80 74 288 | | | 1 | Nut | Mutter | 5 |
| 0310 | 26 | *80 50 593* | | -1987 NLS - USE 8151045 | 1 | Nut | Mutter | 5 |
| 0320 | 26 | 81 51 045 | | 1988- | 1 | Nut | Mutter | 5 |
| 0330 | 27 | *80 50 601* | | -1987 NLS - USE 8151052 | 1 | Nut | Mutter | 5 |
| 0340 | 27 | 81 51 052 | | 1988- | 1 | Nut | Mutter | 5 |
| 0350 | 28 | 83 57 378 | | | 1 | Screw | Skruv | 5 |
| 0360 | 29 | *80 07 486* | | NLS - USE 4087706 | 1 | Set screw | Stoppskruv | 5 |
| 0370 | 32 | 75 07 098 | | | 1 | Cover | Lock | 5 |
| 0380 | 33 | 75 07 106 | | | 1 | Bracket | Fäste | 5 |
| 0390 | 34 | 80 48 829 | | | 1 | O-ring | O-ring | 2 |
| 0400 | 35 | 75 21 875 | | | 1 | O-ring | O-ring | 4 |
| 0410 | 36 | 75 18 889 | | | 1 | Bracket | Konsol | 5 |
| 0420 | 37 | 93 11 895 | | | 1 | Absorber | Dämpare | 3 |
| 0430 | 38 | 80 69 015 | | | 1 | Nut | Mutter | 5 |
| 0440 | 39 | 81 29 576 | | 1986 | 2 | Screw | Skruv | 5 |
| 0450 | 39 | 79 71 294 | | 1987- | 2 | Screw | Skruv | 5 |
| 0460 | 41 | *81 25 882* | | -1987 NLS - USE 8151326 | 3 | Nut | Mutter | 5 |
| 0470 | 41 | 81 51 326 | | 1988- | 3 | Nut | Mutter | 5 |
| 0480 | 42 | 75 17 402 | | | 1 | Stay | Stag | 6 |
| 0490 | 43 | *75 13 815* | | 42,93), AC NLS - USE 7588270 | 1 | Switch | Strömställare | 3 |
| 0500 | 43 | 75 38 270 | | 42,94), AC | 1 | Switch | Strömställare | 3 |
| 0510 | 44 | 75 64 834 | | 42), AC | 1 | Bracket | Hållare | 5 |
| 0520 | 45 | 80 29 910 | | 42), AC | 2 | Washer | Bricka | 5 |

34. For cars without EGR. För bilar utan EGR.
35. For cars with EGR. För bilar med EGR.
42. EU with US specification. EU med US-specifikation.
93. Engine -J061479.
94. Engine J061480-.
132. With catalytic converter. Med katalytisk reaktor.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-F14

## Throttle valve housing
## B201 Turbo

## Spjällhus
## B201 Turbo

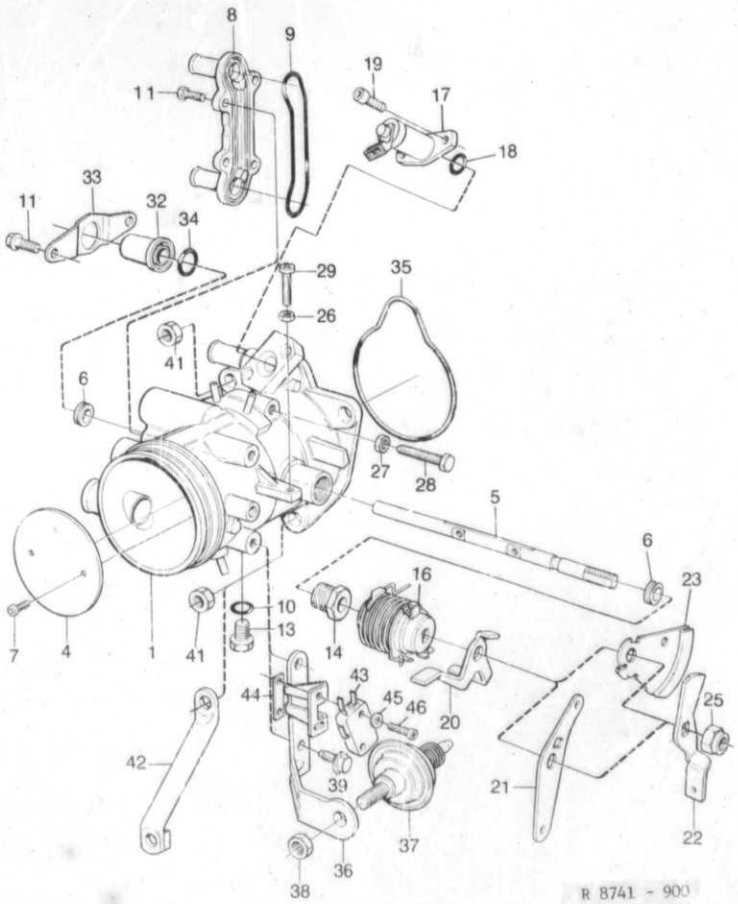


| 1160 | Pos | Part No/Art nr | K S | Notes/Anm.järkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0530 | 46 | 80 96 364 | | 42), AC | 2 | Screw | Skruv | 5 |

42. EU with US specification. EU med US-specifikation.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-F16

## Auxiliary air regulator
## B201 Turbo

## Tillsatsluftslid
## B201 Turbo

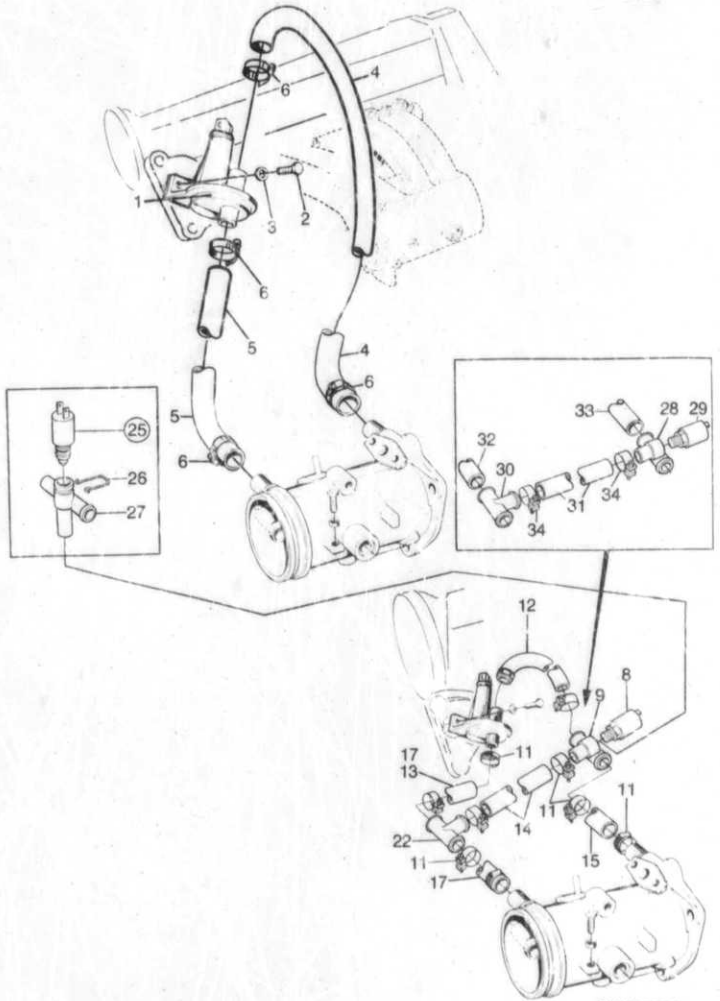


| 1175 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 83 57 832 | | M, EU, SW | 1 | Air valve | Luftventil | 4 |
| 0020 | 1 | 93 13 90 | | | 1 | Air valve | Luftventil | 4 |
| 0030 | 2 | 93 50 653 | | | 2 | Screw | Skruv | 5 |
| 0040 | 3 | 80 29 951 | | | 2 | Washer | Bricka | 5 |
| 0050 | 4 | 93 08 974 | | | 1 | Hose | Slang | 4 |
| 0060 | 5 | 75 17 915 | | | 1 | Hose | Slang | 4 |
| 0070 | 6 | 79 70 064 | | | 4 | Hose clamp | Slangklamma | 5 |
| 0080 | 8 | 83 34 005 | | AC | 1 | Solenoid valve | Magnetventil | 3 |
| 0090 | 9 | 75 26 144 | | AC | 1 | T-pipe | T-rör | 5 |
| 0100 | 11 | 79 75 543 | | | 6 | Hose clamp | Slangklamma | 5 |
| 0110 | 12 | 75 26 031 | | AC | 1 | Hose | Slang | 4 |
| 0120 | 12 | 75 27 569 | | A, ME, FE | 1 | Hose | Slang | 4 |
| 0130 | 13 | 75 26 056 | | AC | 1 | Hose | Slang | 4 |
| 0140 | 14 | 93 67 525 | | AC | 1 | Hose | Slang | 4 |
| 0150 | 15 | 75 26 049 | | AC | 1 | Hose | Slang | 4 |
| 0160 | 15 | *75 27 575* | | A, ME, FE NLS | 1 | Hose | Slang | 4 |
| 0170 | 17 | 75 26 064 | | AC | 1 | Hose | Slang | 4 |
| 0180 | 17 | 75 26 056 | | A, ME, FE | 2 | Hose | Slang | 4 |
| 0190 | 22 | 83 17 828 | | AC | 1 | Nipple | Nippel | 5 |
| 0200 | 25 | 88 20 722 | | 1986, AC CLARION | 1 | Solenoid valve | Magnetventil | 3 |
| 0210 | 26 | 88 20 748 | | 1986, AC CLARION | 1 | Clip | Clips | 5 |
| 0220 | 27 | 88 20 755 | | 1986, AC CLARION | 1 | T-pipe | T-rör | 5 |
| 0230 | 28 | 75 28 144 | | A, ME, FE | 1 | T-pipe | T-rör | 5 |
| 0240 | 29 | 83 34 005 | | A, ME, FE | 1 | Solenoid valve | Magnetventil | 3 |
| 0250 | 30 | 83 17 828 | | A, ME, FE | 1 | Nipple | Nippel | 5 |
| 0260 | 31 | 93 67 525 | | A, ME, FE | 1 | Hose | Slang | 4 |
| 0270 | 32 | 93 67 483 | | A, ME, FE | 1 | Hose | Slang | 4 |
| 0280 | 33 | *75 27 567* | | A, ME, FE NLS | 1 | Hose | Slang | 4 |
| 0290 | 34 | 79 75 543 | | A, ME, FE | 6 | Hose clamp | Slangklamma | 5 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX

| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-F18

## Throttle valve housing
B202

## Spjällhus
B202

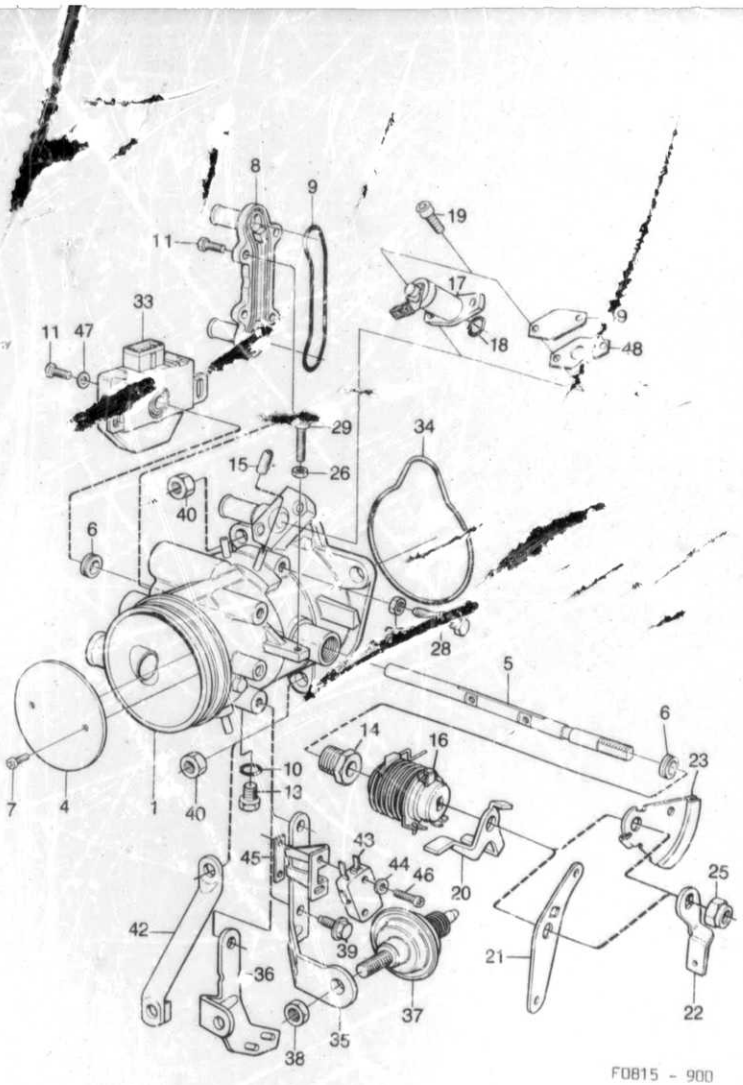


| 1176 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0010 1 | 75 22 444 | | 1986, TURBO M | 1 | Throttle body | Spjällhus | 6 |
| 0020 1 | 75 63 422 | | 1987-1988, TURBO M | 1 | Throttle body | Spjällhus | 6 |
| 0030 1 | 74 87 259 | | 1989-, TURBO M | 1 | Throttle body | Spjällhus | 6 |
| 0040 1 | 75 22 931 | | 1986, TURBO M, ME | 1 | Throttle body | Spjällhus | 6 |
| 0050 1 | 75 63 489 | | 1987-1988, TURBO M, ME | 1 | Throttle body | Spjällhus | 6 |
| 0060 1 | 74 87 275 | | 1989-, TURBO M, ME | 1 | Throttle body | Spjällhus | 6 |
| 0070 1 | 75 69 577 | | -1987,76), (7563463) | 1 | Throttle body | Spjällhus | 6 |
| 0080 1 | *75 88 023* | | 1988-,116,76) NLS - USE 7487705, 8151052, 8357378 | 1 | Throttle body | Spjällhus | 6 |
| 0090 1 | 74 87 705 | | 117,76), -1988 | 1 | Throttle body | Spjällhus | 6 |
| 0100 1 | *74 87 267* | | 1989-,500,76) NLS - USE 9109588 | 1 | Throttle body | Spjällhus | 6 |
| 0110 1 | 75 69 593 | | 75), -1987, (7518228) | 1 | Throttle body | Spjällhus | 6 |
| 0120 1 | 74 82 409 | | 75), 1988 | 1 | Throttle body | Spjällhus | 6 |
| 0130 1 | 74 84 710 | | 75,500), 1989- | 1 | Throttle body | Spjällhus | 6 |
| 0140 1 | 74 85 915 | | 135), 1989-, I | 1 | Throttle body | Spjällhus | 6 |
| 0150 1 | 91 14 596 | | 1989-, I, ME | 1 | Throttle body | Spjällhus | 6 |
| 0160 4 | 83 53 484 | | | 1 | Shutter | Spjäll | 6 |
| 0170 5 | *75 04 673* | | NLS - USE 8057259, 9107624 | 1 | Shutter shaft | Spjällaxel | 6 |
| 0180 6 | 83 57 345 | | | 2 | Seal | Tätning | 5 |
| 0190 7 | 80 59 073 | | | 2 | Screw | Skruv | 5 |
| 0200 8 | 75 05 423 | | | 1 | Cover | Lock | 5 |
| 0210 9 | 75 06 264 | | | 1 | O-ring | O-ring | 2 |
| 0220 10 | *81 07 563* | | 1986 NLS - USE 7974546 | 1 | O-ring | O-ring | 2 |
| 0230 10 | *80 46 559* | | 1987- NLS - USE 7974546 | 1 | O-ring | O-ring | 2 |
| 0240 11 | 75 07 480 | | | 6 | Screw | Skruv | 5 |
| 0250 13 | 75 62 739 | | | 1 | Plug | Plugg | 5 |
| 0260 14 | 91 59 650 | | | 1 | Plug | Plugg | 5 |
| 0270 15 | 83 35 614 | | US | 1 | Plug | Propp | 4 |
| 0280 16 | 75 16 974 | | | 1 | Return spring | Returfjäder | 5 |
| 0290 17 | 74 86 129 | | 500,75)1989-, SE, EU, CA | 1 | Starter valve | Startventil | 4 |
| 0300 18 | 80 46 542 | | 500,75)1989-, SE, EU, CA | 1 | O-ring | O-ring | 2 |
| 0310 19 | 75 07 072 | | 500), 1989- | 2 | Screw | Skruv | 5 |
| 0320 20 | *75 62 390* | | 1986 NLS - USE 75838 | 1 | Lever | Hävarm | 6 |
| 0330 20 | 75 83 859 | | 1987- | 1 | Lever | Hävarm | 6 |
| 0340 21 | 75 64 396 | | A | 1 | Lever | Hävarm | 5 |
| 0350 22 | 75 62 010 | | | 1 | Lever | Hävarm | 6 |
| 0360 23 | 93 09 261 | | M | 1 | Cam disc | Kamskiva | 5 |
| 0370 25 | 80 74 288 | | | 1 | Nut | Mutter | 5 |
| 0380 26 | *80 50 593* | | -1987 NLS - USE 751045 | 1 | Nut | Mutter | 5 |
| 0390 26 | 81 51 045 | | 1988- | 1 | Nut | Mutter | 5 |
| 0400 27 | *80 50 601* | | 1987, PART OF 7518228, 7563463 NLS - USE 8151052 | 1 | Nut | Mutter | 5 |
| 0420 27 | 81 51 052 | | 1988-, PART OF 7518228, 7563463, 7487705 | 1 | Nut | Mutter | 5 |
| 0440 28 | 83 57 378 | | PART OF 7518228, 7563463 AND 7487705 | 1 | Screw | Skruv | 5 |
| 0460 29 | *80 07 456* | | NLS - USE 4087706 | 1 | Set screw | Stoppskruv | 5 |
| 0470 33 | 75 01 612 | | | 1 | Potentiometer | Potentiometer | 6 |
| 0480 34 | 75 21 875 | | | 1 | O-ring | O-ring | 4 |
| 0490 35 | 75 18 889 | | | 1 | Bracket | Konsol | 5 |
| 0500 36 | 75 62 044 | | 1986, SE, ME | 1 | Bracket | Konsol | 5 |
| 0510 36 | 75 62 044 | | 1987-1988, SE, ME, US | 1 | Bracket | Konsol | 5 |
| 0520 36 | 75 62 044 | | 1989-, US | 1 | Bracket | Konsol | 5 |

75. For I with catalytic converter. För I med katalytisk reaktor.
76. For TURBO with catalytic converter. För TURBO med katalytisk reaktor
116. Engine -J090912.
117. Engine J090913-.
135. Without catalytic converter. Utan katalytisk reaktor.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-F20 Throttle valve housing B202

# Spjällhus B202

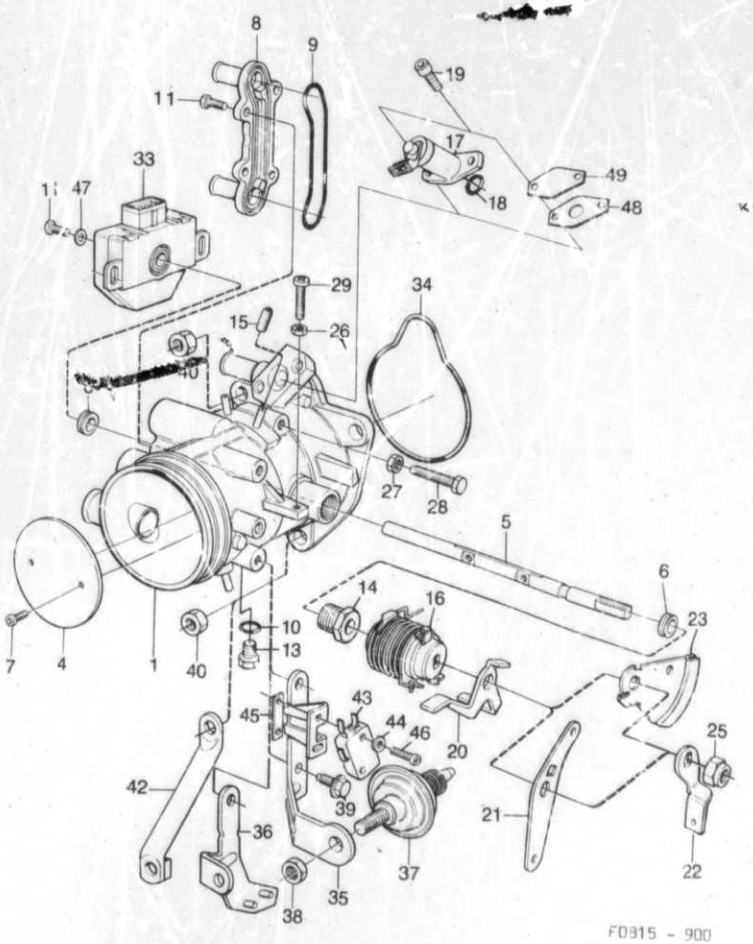


F0815 - 900

| 1178 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0530 | 36 | 91 14 752 | | 1989-182,500)SE, EU, ME | 1 | Bracket | Konsol | 5 |
| 0540 | 36 | 87 87 780 | | 183), EU, ME | 1 | Bracket | Konsol | 5 |
| 0550 | 37 | 93 14 501 | | | 1 | Absorber | Dämpare | 3 |
| 0560 | 38 | 80 69 015 | | -1987 | 1 | Nut | Mutter | 5 |
| 0570 | 39 | 81 29 876 | | 1986 | 2 | Screw | Skruv | 5 |
| 0580 | 39 | 79 71 294 | | 1987- | 2 | Screw | Skruv | 5 |
| 0590 | 40 | *81 25 882* | | -1987 NLS - USE 8151326 | 3 | Nut | Mutter | 5 |
| 0600 | 40 | 81 51 326 | | 1988- | 3 | Nut | Mutter | 5 |
| 0610 | 42 | 75 17 402 | | | 1 | Stay | Stag | 6 |
| 0620 | 43 | *75 13 815* | | 93), AC NLS - USE 7586270 | 1 | Switch | Strömställare | 3 |
| 0630 | 43 | 75 88 270 | | 94), -1988, AC | 1 | Switch | Strömställare | 3 |
| 0640 | 44 | 75 64 065 | | 25), AC | 2 | Washer | Bricka | 5 |
| 0650 | 44 | 75 64 065 | | 1988, US | 2 | Washer | Bricka | 5 |
| 0660 | 44 | 80 29 910 | | 26), -1987, AC | 2 | Washer | Bricka | 5 |
| 0670 | 44 | 80 29 910 | | 1988, US | 2 | Washer | Bricka | 5 |
| 0680 | 45 | 93 50 752 | | 25), AC | 1 | Bracket | Hållare | 6 |
| 0690 | 45 | 75 64 834 | | 26), -1988, AC | 1 | Bracket | Hållare | 5 |
| 0700 | 45 | 75 64 834 | | 1988, US | 1 | Bracket | Hållare | 5 |
| 0710 | 46 | 81 23 671 | | 25), AC | 2 | Screw | Skruv | 5 |
| 0720 | 46 | 80 96 364 | | 26), -1987, AC | 2 | Screw | Skruv | 5 |
| 0730 | 46 | 80 96 364 | | 1988, US | 2 | Screw | Skruv | 5 |
| 0740 | 47 | *80 29 936* | | US NLS - USE 9166356 | 2 | Washer | Bricka | 5 |
| 0750 | 48 | 75 86 878 | | 1989- | 1 | Gasket | Packning | 4 |
| 0760 | 49 | 75 86 860 | | 1989- | 1 | Flange | Fläns | 4 |

25. Engine -G009348.
26. Engine G009349-
93. Engine -J061479.
94. Engine J061480-.
182. Engine -K092105.
183. Engine K092106-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7 D02 |
| 10 | Numerical register | 7-E02 |



2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-F22

## *Auxiliary air regulator* / *Tillsatsluftslid*

*B202* / *B202*

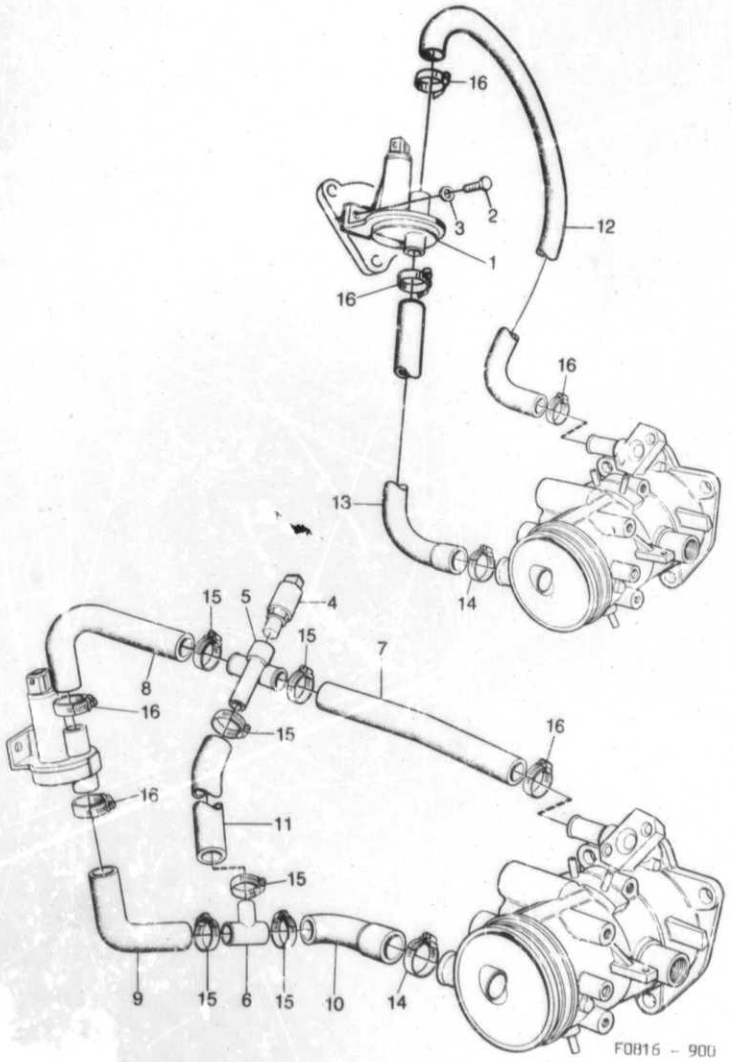


| 1180 | Pos | Part No/Anm. S | Notes/Anmärkningar | Qty/Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0010 | 1 | 83 57 832 | | 1 | Air valve | Luftventil | 4 |
| 0020 | 1 | 93 13 909 | 135), 1989-, I, EU | 1 | Air valve | Luftventil | 4 |
| 0030 | 2 | 93 50 653 | | 2 | Screw | Skruv | 5 |
| 0040 | 3 | 80 29 951 | | 2 | Washer | Bricka | 5 |
| 0050 | 4 | 83 34 005 | AC | 1 | Solenoid valve | Magnetventil | 3 |
| 0060 | 5 | 75 28 144 | AC | 1 | T-pipe | T-rör | 5 |
| 0070 | 6 | 83 17 828 | AC | 1 | Nipple | Nippel | 5 |
| 0080 | 7 | 75 26 361 | AC | 1 | Hose | Slang | 6 |
| 0090 | 8 | 75 26 379 | AC | 1 | Hose | Slang | 6 |
| 0100 | 9 | 75 26 346 | AC | 1 | Hose | Slang | 6 |
| 0110 | 10 | 75 25 353 | AC | 1 | Hose | Slang | 6 |
| 0120 | 11 | 75 26 338 | AC | 1 | Hose | Slang | 6 |
| 0130 | 12 | 75 02 800 | | 1 | Hose | Slang | 4 |
| 0140 | 13 | 75 02 818 | | 1 | Hose | Slang | 4 |
| 0150 | 14 | 79 70 072 | | 1 | Hose clamp | Slangklamma | 5 |
| 0160 | 15 | 79 75 543 | AC | 6 | Hose clamp | Slangklamma | 5 |
| 0170 | 16 | 79 70 064 | | 3 | Hose clamp | Slangklamma | 5 |
| 0180 | | | | | | | |
| 0190 | | 86 05 081 | 135), 1988-, B202 TURBO, SE, EU | 1 | Idling speed increase kit | Tomgångshöjningssats | 4 |
| 0200 | | | See page 8C-031, 7-B08 | | | | |
| 0210 | | | | | | | |

135. Without catalytic converter. Utan katalytisk reaktor.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

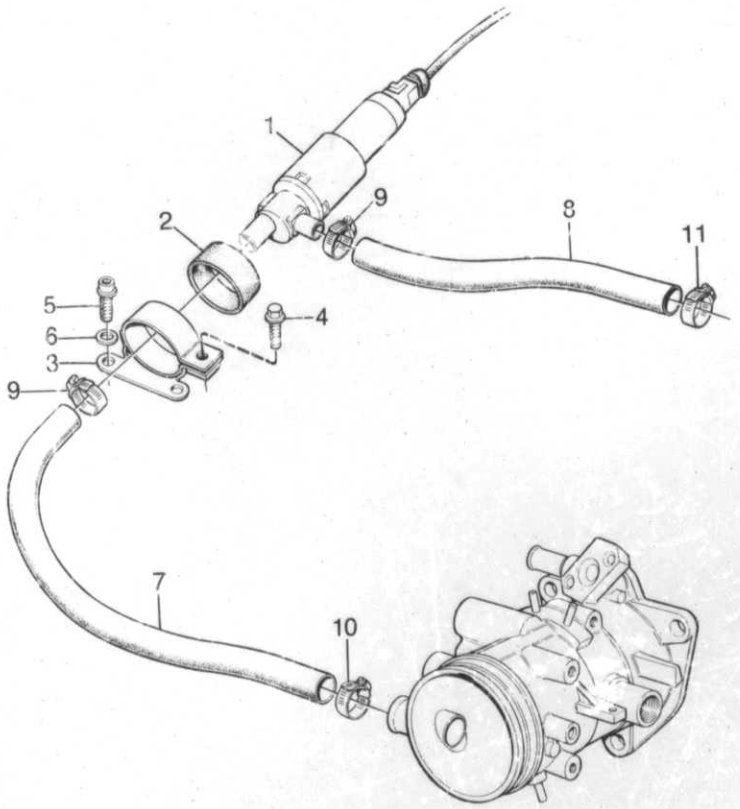


F0086 - 900

| 1190 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 16 792 | | -1987 | 1 | Control valve | Reglerventil | 4 |
| 0020 | 1 | 75 86 019 | | 1988, I | 1 | Control valve | Reglerventil | 4 |
| 0030 | 1 | 75 16 792 | | 1988, TURBO | 1 | Control valve | Reglerventil | 4 |
| 0040 | 1 | 75 86 019 | | 500), 1989- | 1 | Control valve | Reglerventil | 4 |
| 0050 | 2 | 75 65 351 | | -1987 | 1 | Ring | Ring | 5 |
| 0060 | 2 | 75 69 056 | | 1988, I | 1 | Rubber ring | Gummiring | 5 |
| 0070 | 2 | 75 65 351 | | 1988, TURBO | 1 | Ring | Ring | 5 |
| 0080 | 2 | 75 69 056 | | 500), 1989- | 1 | Rubber ring | Gummiring | 5 |
| 0090 | 3 | 75 17 733 | | -1987 | 1 | Bracket | Fäste | 6 |
| 0100 | 3 | 74 80 916 | | 1988, I | 1 | Bracket | Fäste | 6 |
| 0110 | 3 | 75 17 733 | | 1988, TURBO | 1 | Bracket | Fäste | 6 |
| 0120 | 3 | 74 80 916 | | 500), 1989- | 1 | Bracket | Fäste | 6 |
| 0130 | 4 | 81 25 023 | | | 1 | Screw | Skruv | 5 |
| 0140 | 5 | 93 50 653 | | | 2 | Screw | Skruv | 5 |
| 0150 | 6 | 80 29 951 | | | 2 | Washer | Bricka | 5 |
| 0160 | 7 | 75 17 923 | | -1987 | 1 | Hose | Slang | 4 |
| 0170 | 7 | *75 83 867* | | 1988, I NLS - USE 9128505 | 1 | Hose | Slang | 4 |
| 0180 | 7 | 75 17 923 | | 1988, TURBO | 1 | Hose | Slang | 4 |
| 0190 | 7 | *75 83 867* | | 500), 1989- NLS - USE 9128505 | 1 | Hose | Slang | 4 |
| 0200 | 8 | 75 24 176 | | -1987 | 1 | Hose | Slang | 4 |
| 0210 | 8 | 75 87 173 | | 1988, I | 1 | Hose | Slang | 4 |
| 0220 | 8 | 75 87 181 | | 1988, TURBO | 1 | Hose | Slang | 4 |
| 0230 | 8 | 75 87 173 | | 500), 1989- | 1 | Hose | Slang | 4 |
| 0240 | 9 | 79 63 531 | | -1988, TURBO | 2 | Hose clamp | Slangklamma | 5 |
| 0250 | 9 | *79 63 549* | | 1989-, TURBO NLS - USE 7970080 | 2 | Hose clamp | Slangklamma | 5 |
| 0260 | 10 | 79 63 531 | | TURBO | 1 | Hose clamp | Slangklamma | 5 |
| 0270 | 11 | 79 63 531 | | -1987, TURBO | 1 | Hose clamp | Slangklamma | 5 |
| 0280 | 11 | 79 63 523 | | 1988-, TURBO | 1 | Hose clamp | Slangklamma | 5 |

500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX

| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-G02

## Exhaust manifold
## B201 C and I

## Avgassamlare
## B201 C och I

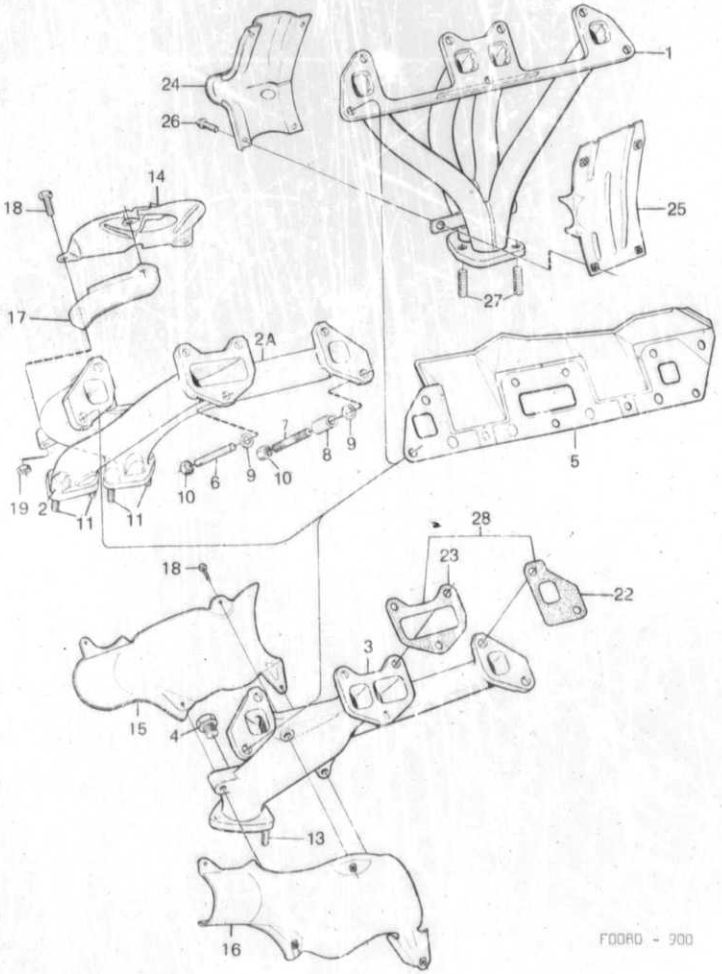


| 1200 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *75 62 911* | | 1986,35) NLS - USE 7483464 | 1 | Exhaust manifold | Avgassamlare | 3 |
| 0020 | 1 | 74 83 464 | | 1987-,35) | 1 | Exhaust manifold | Avgassamlare | 3 |
| 0030 | 1 | 74 83 464 | | 1988-,75,128) | 1 | Exhaust manifold | Avgassamlare | 3 |
| 0040 | 1 | 74 83 464 | | 75,159), A | 1 | Exhaust manifold | Avgassamlare | 3 |
| 0050 | 2 | 83 56 420 | | 34) | 1 | Exhaust manifold | Avgassamlare | 3 |
| 0060 | 2 | 83 56 420 | | 75,129,158) | 1 | Exhaust manifold | Avgassamlare | 3 |
| 0070 | 2 | 83 56 420 | | 75,159), M | 1 | Exhaust manifold | Avgassamlare | 3 |
| 0080 | 2A | 75 08 583 | | 34) | 1 | Exhaust manifold | Avgassamlare | 3 |
| 0090 | 2A | 75 08 583 | | 75,129) | 1 | Exhaust manifold | Avgassamlare | 3 |
| 0100 | 3 | 83 61 990 | | US, CA | 1 | Exhaust manifold | Avgassamlare | 3 |
| 0110 | 3 | 83 61 990 | | 75), -1987 | 1 | Exhaust manifold | Avgassamlare | 3 |
| 0120 | 4 | 93 10 004 | | M, CA | 1 | Plug | Propp | 5 |
| 0130 | 5 | 75 61 772 | | | 1 | Gasket | Packning | 2 |
| 0140 | 6 | *75 19 010* | | NLS - USE 7985146 | 3 | Stud screw | Pinnbult | 5 |
| 0150 | 7 | *93 50 586* | | NLS - USE 7985161 | 4 | Stud screw | Pinnbult | 5 |
| 0160 | 8 | 93 06 812 | | | 4 | Spacer sleeve | Distanshylsa | 3 |
| 0170 | 9 | *13 24 144* | | 1986 NLS - USE 8073249 | 7 | Washer | Bricka | 5 |
| 0180 | 9 | 80 73 249 | | 1987- | 7 | Washer | Bricka | 5 |
| 0190 | 10 | *93 06 820* | | NLS - USE 9169277 | 7 | Nut | Mutter | 3 |
| 0200 | 11 | 83 60 943 | | | 4 | Stud screw | Pinnbult | 5 |
| 0210 | 13 | 80 00 440 | | | 3 | Screw | Skruv | 5 |
| 0220 | 14 | 83 23 214 | | EU | 1 | Cover | Kåpa | 5 |
| 0230 | 15 | 93 31 596 | | I, US, CA | 1 | Pre-heater | Förvärmare | |
| 0240 | 16 | 93 31 612 | | I, US, CA | 1 | Pre-heater | Förvärmare | |
| 0250 | 17 | 93 29 442 | | EU | 1 | Splash guard | Stänkskydd | 4 |
| 0260 | 18 | 80 21 917 | | I | 3 | Screw | Skruv | 5 |
| 0270 | 18 | 80 19 978 | | | 3 | Screw | Skruv | 5 |
| 0280 | 19 | 80 29 555 | | -1987 | 1 | Nut | Mutter | 5 |
| 0290 | 19 | 81 51 227 | | 1988- | 1 | Nut | Mutter | 5 |
| 0300 | 22 | *83 61 842* | | -1987 NLS - USE 7588940 | 2 | Gasket | Packning | 2 |
| 0310 | 22 | *88 19 112* | | 1988- NLS - USE 7588940 | 2 | Gasket | Packning | 2 |
| 0320 | 23 | *83 61 859* | | -1987 NLS - USE 7588957 | 1 | Gasket | Packning | 2 |
| 0330 | 23 | *88 19 120* | | 1988- NLS - USE 7588957 | 1 | Gasket | Packning | 2 |
| 0340 | 24 | 75 34 456 | | 35), C | 1 | Cover | Kåpa | 3 |
| 0350 | 25 | 75 28 524 | | 35), C | 1 | Cover | Kåpa | 3 |
| 0360 | 26 | 79 72 623 | | 35), C | 4 | Screw | Skruv | 5 |
| 0370 | 27 | 80 00 622 | | | 3 | Stud | Pinnskruv | 5 |
| 0380 | | | | | | | | |
| 0390 | 28 | 88 19 146 | | 1988- | X | Gasket kit | Packningsats | 2 |
| 0400 | | | | See page 2-201, 1-J10 | | | | |
| 0410 | | 83 17 280 | | | X | Screw kit | Skruvsats | 5 |

34. For cars without EGR. För bilar utan EGR.
35. For cars with EGR. För bilar med EGR.
75. For I with catalytic converter. För I med katalytisk reaktor.
128. Engine --J103721
129. Engine J103722--
158. Engine --K057805.
159. Engine K057806--



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-G04

## *Exhaust manifold* / *Avgassamlare*

### *B201 Turbo* / *B201 Turbo*

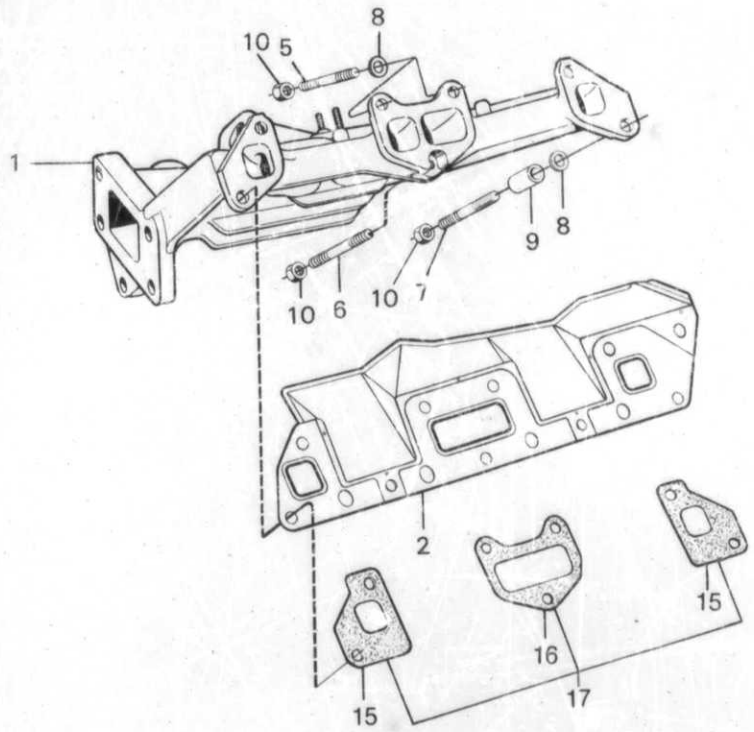


F0081 - 900

| 1250 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *75 16 917* | | 1986 NLS - USE 9118415 | 1 | Exhaust manifold | Avgassamlare | 3 |
| 0020 | 1 | *75 16 917* | | 1987-1988 NLS - USE 9118415 | 1 | Exhaust manifold | Avgassamlare | 3 |
| 0030 | 1 | 91 18 415 | | 1989- | 1 | Exhaust manifold | Avgassamlare | 3 |
| 0040 | 1 | *75 67 720* | | 132), 1987-1988 NLS - USE 9118423 | 1 | Exhaust manifold | Avgassamlare | 3 |
| 0050 | 1 | 91 18 423 | | 132,500), 1989- | 1 | Exhaust manifold | Avgassamlare | 3 |
| 0060 | 2 | 75 61 772 | | | 1 | Gasket | Packning | 2 |
| 0070 | 5 | *75 19 010* | | NLS - USE 7985146 | 2 | Stud screw | Pinnbult | 5 |
| 0080 | 6 | 75 21 061 | | | 1 | Stud | Pinnskruv | 5 |
| 0090 | 7 | *93 50 588* | | NLS - USE 7985161 | 4 | Stud screw | Pinnbult | 5 |
| 0100 | 8 | 80 73 249 | | | 7 | Washer | Bricka | 5 |
| 0110 | 9 | 93 06 812 | | | 4 | Spacer sleeve | Distanshylsa | 3 |
| 0120 | 10 | *93 06 820* | | NLS - USE 9169277 | 7 | Nut | Mutter | 3 |
| 0130 | 15 | *83 61 842* | | -1987 NLS - USE 7588940 | 2 | Gasket | Packning | 2 |
| 0140 | 15 | *88 19 112* | | 1988- NLS - USE 7588940 | 2 | Gasket | Packning | 2 |
| 0150 | 16 | *83 61 859* | | -1987 NLS - USE 7588957 | 1 | Gasket | Packning | 2 |
| 0160 | 16 | *88 19 120* | | 1988- NLS - USE 7588957 | 1 | Gasket | Packning | 2 |
| 0170 | | | | | | | | |
| 0180 | 17 | 88 19 146 | | 1988- | X | Gasket kit | Packningsats | 2 |
| 0190 | | | | See page 2-201, 1-J10 | | | | |

132. With catalytic converter. Med katalytisk reaktor.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-G06 Exhaust manifold / Avgassamlare

**B202 I**

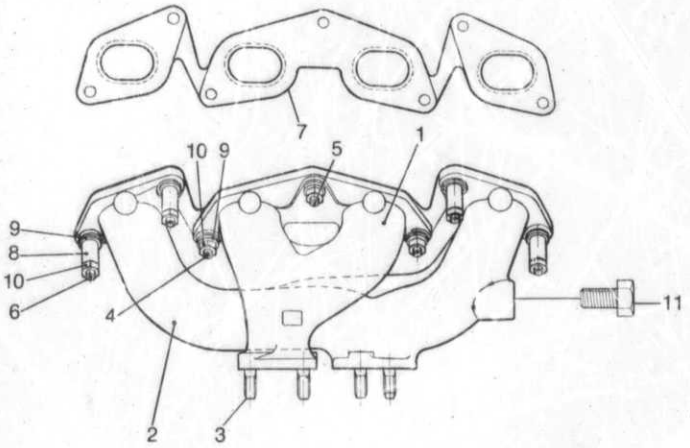


R 7350–900

| 1275 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 62 481 | | -1987 | 1 | Exhaust manifold | Avgassamlare | 3 |
| 0020 | 1 | 75 83 784 | | 1988- | 1 | Exhaust manifold | Avgassamlare | 3 |
| 0030 | 2 | 75 62 515 | | | 1 | Exhaust manifold | Avgassamlare | 3 |
| 0040 | 3 | 83 60 943 | | | 4 | ▲Stud screw | ▲Pinnbult | 5 |
| 0050 | 4 | *75 19 010* | | NLS - USE 7985146 | 2 | Stud screw | Pinnbult | 5 |
| 0060 | 5 | *75 19 010* | | NLS - USE 7985146 | 1 | Stud screw | Pinnbult | 5 |
| 0070 | 6 | *93 50 588* | | NLS - USE 7985161 | 4 | Stud screw | Pinnbult | 5 |
| 0080 | 7 | 75 18 996 | | | 1 | Gasket | Packning | 2 |
| 0090 | 8 | 93 06 812 | | | 4 | Spacer sleeve | Distanshylsa | 3 |
| 0100 | 9 | 80 73 249 | | | 7 | Washer | Bricka | 5 |
| 0110 | 10 | *93 06 820* | | NLS - USE 9169277 | 7 | Nut | Mutter | 3 |
| 0120 | 11 | 81 23 739 | | | 1 | Plug | Propp | 5 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX

| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-G08

## *Exhaust manifold*
## *B202 Turbo*

## *Avgassamlare*
## *B202 Turbo*

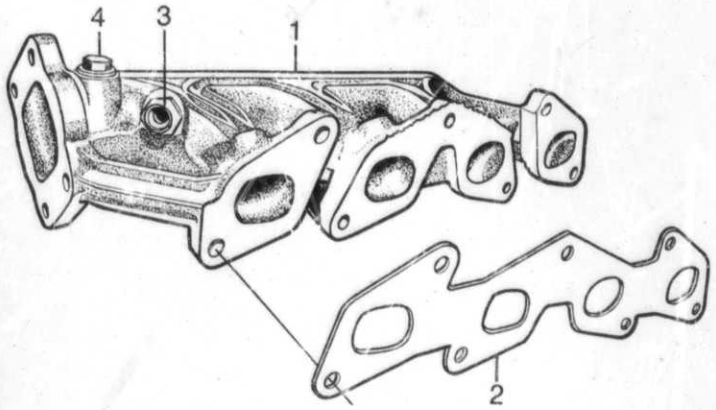


R 8184–900

| 1280 | Pos | Part No/Part nr | K/S | Notes/Anmärkningar | Qty/Antal | Description | Benämning | S/L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 16 115 | | | 1 | Exhaust manifold | Avgassamlare | 3 |
| 0020 | 2 | 75 18 996 | | | 1 | Gasket | Packning | 2 |
| 0030 | 3 | 81 23 739 | | | 1 | Plug | Propp | 5 |
| 0040 | 4 | 81 23 747 | | | 1 | Plug | Propp | 5 |

MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, connect housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-G10

## EGR system
## B201, -1988

## EGR-system
## B201, -1988

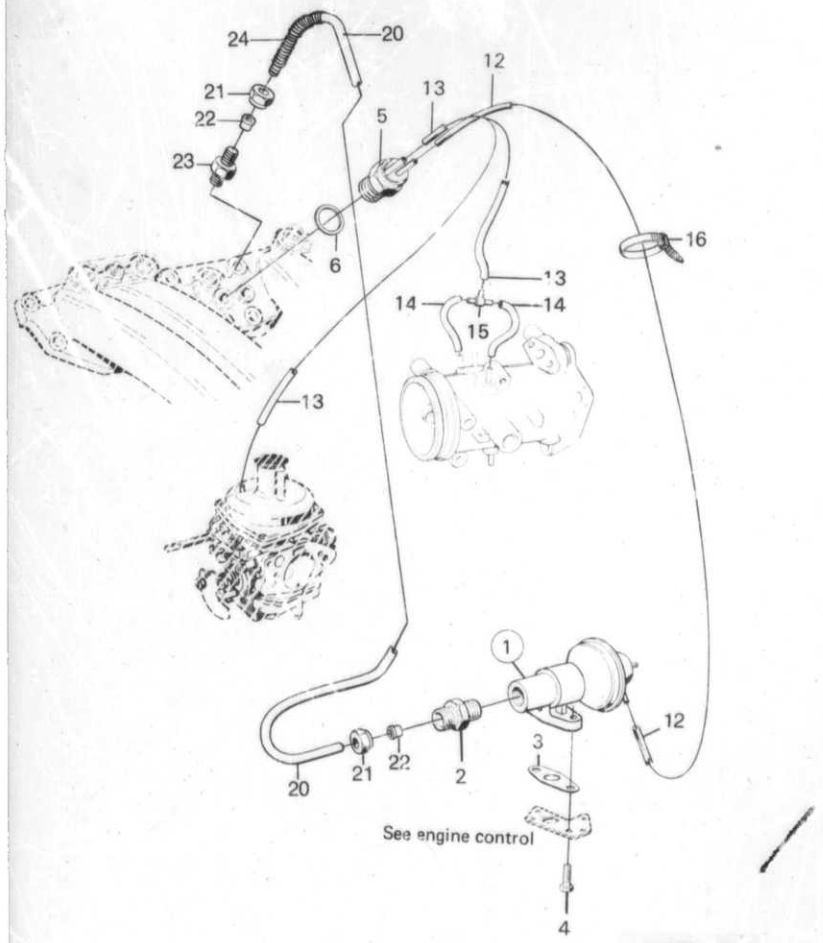


R 7351–900

| 1300 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0010 1 | *93 50 208* | | 225), A NLS - USE 8788721 | 1 | EGR-valve | EGR-ventil | 3 |
| 0020 1 | *93 50 216* | | 226) I, M NLS - USE 8859969 | 1 | EGR-valve | EGR-ventil | 3 |
| 0030 1 | 93 50 224 | | 227), TURBO M | 1 | EGR-valve | EGR-ventil | 3 |
| 0040 1 | 93 50 224 | | 227), C M | 1 | EGR-valve | EGR-ventil | 3 |
| 0050 2 | 93 51 495 | | TURBO M, SE | 1 | Nipple | Nippel | 6 |
| 0060 2 | 93 51 495 | | C M, SE | 1 | Nipple | Nippel | 6 |
| 0070 2 | 93 51 503 | | I, SE | 1 | Nipple | Nippel | 4 |
| 0080 3 | *83 57 485* | | NLS - USE 7507973 | 1 | Gasket | Packning | 2 |
| 0090 4 | *80 19 929* | | NLS - USE 9166299 | 2 | Screw | Skruv | 5 |
| 0100 5 | 93 14 162 | | | 1 | Valve | Ventil | 3 |
| 0110 6 | 51 24 141 | | | 1 | Seal | Tätning | 5 |
| 0120 12 | 91 36 243 | | C M, SE, L=170 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0130 12 | 91 36 243 | | I, TURBO, SE, L=375 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0140 13 | 91 36 243 | | L=360 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0150 13 | 91 36 243 | | C M, SE, L=290 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0160 14 | 91 36 243 | | L=60 MM | 2 | Vaccum hose | Vakuumslang | 5 |
| 0170 15 | 83 66 791 | | | 2 | Pipe | Rör | 4 |
| 0180 16 | 79 71 906 | | | 1 | Tensioning band | Spännband | 5 |
| 0190 20 | 75 19 325 | | | 1 | EGR-pipe | EGR-rör | 6 |
| 0200 21 | *81 28 969* | | NLS - USE 8145559 | 2 | Nut | Mutter | |
| 0210 22 | 81 32 235 | | | 2 | Ferrule | Skärring | 5 |
| 0220 23 | 81 31 989 | | | 1 | Nipple | Nippel | 5 |
| 0230 24 | 93 59 688 | | | 1 | Protection | Skydd | 6 |
| 0240 | | | | | | | |
| 0250 | 91 36 243 | | L=5000 MM | X | Vaccum hose | Vakuumslang | 5 |


225. Blue Blå
226. Red Röd
227. Green Grön

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

2 GROUP INDEX

| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete seals | 1-I20 |

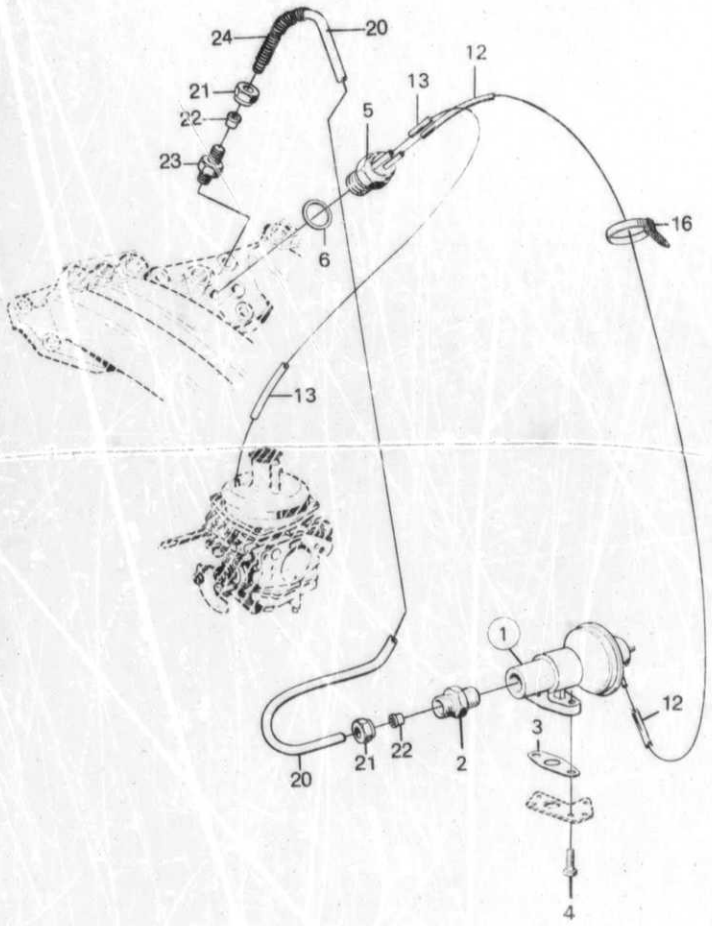


F2514 - 900


| 1310 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 93 50 224 | | | 1 | EGR-valve | EGR-ventil | 3 |
| 0020 | 2 | 93 51 495 | | | 1 | Nipple | Nippel | 6 |
| 0030 | 3 | 75 07 973 | | | 1 | Gasket | Packning | 4 |
| 0040 | 4 | *80 19 929* | | NLS - USE 9166299 | 2 | Screw | Skruv | 5 |
| 0050 | 5 | 93 14 162 | | | 1 | Valve | Ventil | 3 |
| 0060 | 6 | *83 26 712* | | NLS - USE 4161162 | 1 | Seal | Tätning | 5 |
| 0070 | 12 | 75 04 210 | | | 1 | Hose | Slang | 5 |
| 0080 | 13 | 75 04 053 | | | 1 | Hose | Slang | 5 |
| 0090 | 16 | *18 00 259* | | NLS - USE 8153611 | 1 | Tensioning band | Spännband | 5 |
| 0100 | 20 | 75 04 012 | | | 1 | EGR-pipe | EGR-rör | 5 |
| 0110 | 21 | 81 45 559 | | | 2 | Nut | Mutter | 5 |
| 0120 | 22 | 81 32 235 | | | 2 | Ferrule | Skärring | 5 |
| 0130 | 23 | 81 31 989 | | | 1 | Nipple | Nippel | 5 |
| 0140 | 24 | 75 04 046 | | | 1 | Protection | Skydd | 6 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

2 GROUP INDEX

| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

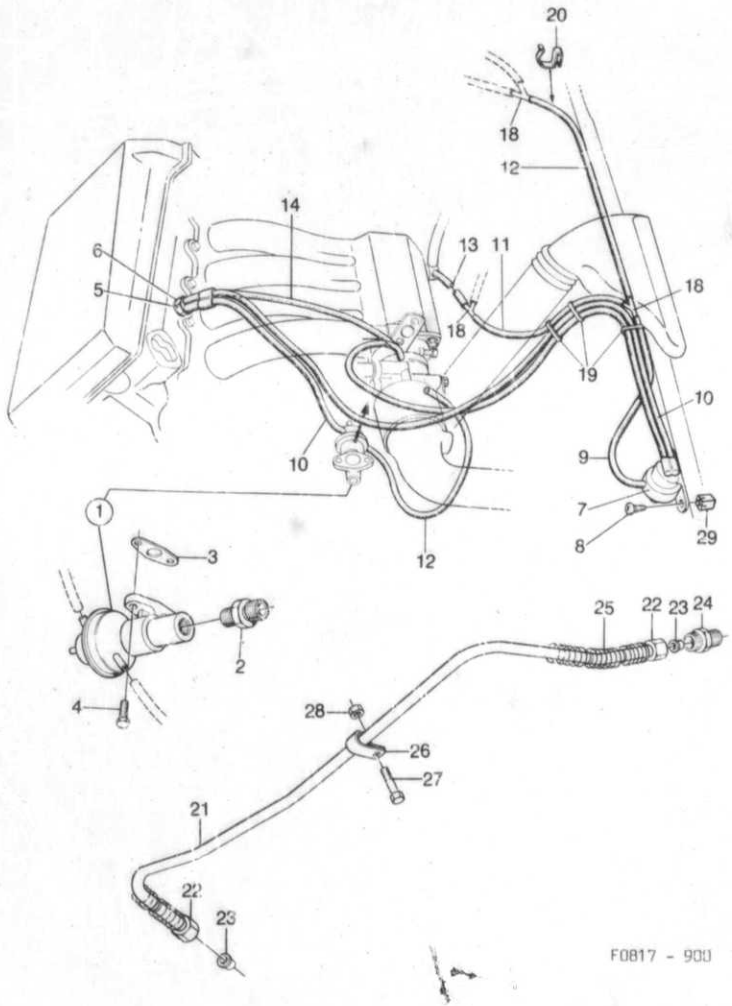


| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | 75 04 004 | | -1988 | 1 | EGR-valve | EGR-ventil | 3 |
| 1 | *93 50 216* | | 135), 1989-, I NLS - USE 8859969 | 1 | EGR-valve | EGR-ventil | 3 |
| 1 | 93 50 224 | | 135), 1989-, TURBO | 1 | EGR-valve | EGR-ventil | 3 |
| 2 | 75 20 141 | | -1988 | 1 | Nipple | Nippel | 6 |
| 2 | 91 14 679 | | 1989-, I | 1 | Nipple | Nippel | 6 |
| 2 | 75 06 652 | | 1989-, TURBO | 1 | Nipple | Nippel | 6 |
| 3 | *83 57 485* | | -1988 NLS - USE 7507873 | 1 | Gasket | Packning | 2 |
| 3 | 75 07 973 | | 1989- | 1 | Gasket | Packning | 4 |
| 4 | *80 19 929* | | NLS - USE 9166299 | 2 | Screw | Skruv | 5 |
| 5 | 75 04 897 | | | 1 | Valve | Ventil | 3 |
| 6 | 81 24 141 | | | 1 | Seal | Tätning | 5 |
| 7 | 75 28 425 | | | 1 | Signal transducer | Signalomvandlare | 5 |
| 8 | 80 59 412 | | | 2 | Screw | Skruv | 5 |
| 9 | 91 36 243 | | L=220 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 10 | 75 25 611 | | -1988 | 1 | Hose | Slang | 5 |
| 10 | 91 36 243 | | 1989-, L=330 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 11 | 93 41 215 | | | 1 | Hose | Slang | 5 |
| 12 | 91 36 243 | | L=410 MM | 2 | Vaccum hose | Vakuumslang | 5 |
| 13 | 91 36 243 | | L=40 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 14 | 91 36 243 | | 1989-, L=410 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 18 | 85 09 002 | | | 3 | Tube | Rör | 2 |
| 19 | 79 71 872 | | | 3 | Tensioning band | Spännband | 5 |
| 20 | 79 33 443 | | | 4 | Clip | Clips | 5 |
| 21 | 75 20 133 | | | 1 | EGR-pipe | EGR-rör | 6 |
| 21 | 74 87 168 | | 1989-, I | 1 | EGR-pipe | EGR-rör | 6 |
| 22 | *81 28 969* | | NLS - USE 8145559 | 2 | Nut | Mutter | |
| 23 | 81 32 235 | | | 2 | Ferrule | Skärring | 5 |
| 24 | 81 31 989 | | | 1 | Nipple | Nippel | 5 |
| 25 | 75 08 385 | | | 1 | Protection | Skydd | 6 |
| 26 | 75 15 836 | | | 1 | Clamp | Klämmer | 6 |
| 27 | *80 21 933* | | NLS - USE 9166315 | 1 | Screw | Skruv | 5 |
| 28 | 80 29 555 | | -1987 | 1 | Nut | Mutter | 5 |
| 28 | 81 51 227 | | 1988- | 1 | Nut | Mutter | 5 |
| 29 | 79 73 456 | | | 2 | Expanding nut | Expandermutter | 5 |
| | 91 36 243 | | L=5000 MM | X | Vaccum hose | Vakuumslang | 5 |

135. Without catalytic converter. Utan katalytisk reaktor.




MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

2 GROUP INDEX

| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-G16

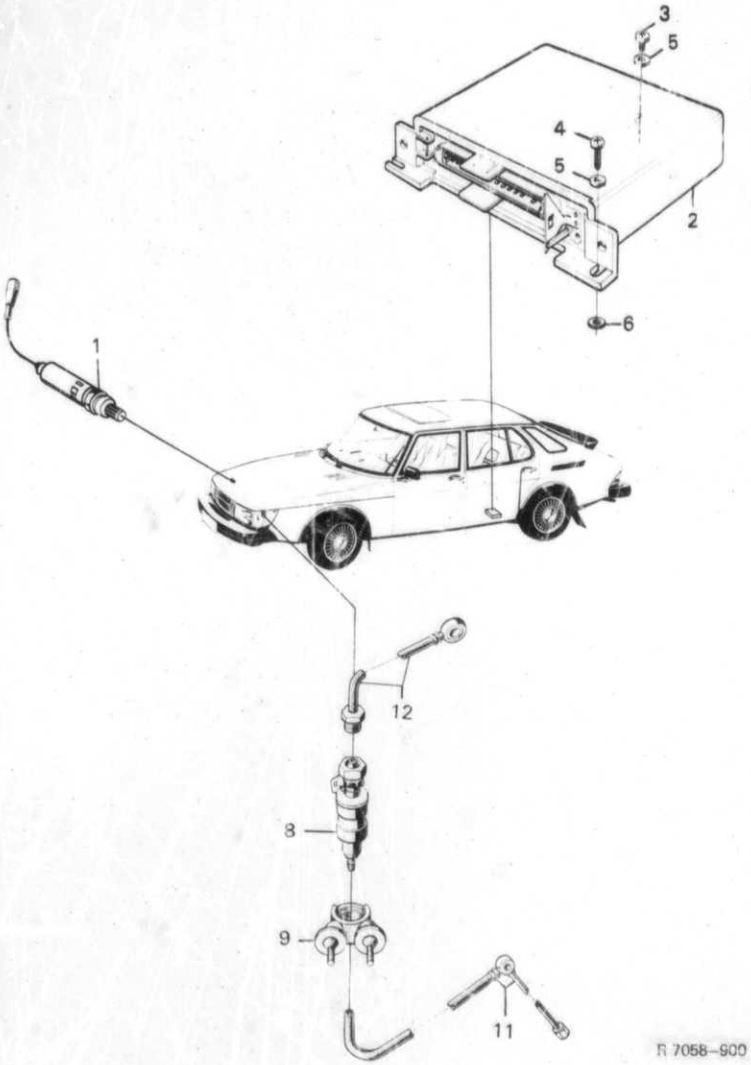


R 7058–900

| 1400 | Pos | Part No/Art nr | K S | Notes/Anmärkning | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 34 795 | | -1987 | 1 | Lambda sonde | Lambdasond | 4 |
| 0020 | 1 | 75 34 795 | | 1988, B201 TURBO | 1 | Lambda sonde | Lambdasond | 4 |
| 0030 | 1 | 93 92 762 | | 1988, B201I, SE, EU | 1 | Lambda sonde | Lambdasond | 4 |
| 0040 | 1 | 93 92 762 | | 500), 1989-, B201 | 1 | Lambda sonde | Lambdasond | 4 |
| 0050 | 1 | 75 25 603 | | 1988, B201I, US,CA,JP,AU | 1 | Lambda sonde | Lambdasond | 4 |
| 0070 | 1 | 93 92 762 | | B202 | 1 | Lambda sonde | Lambdasond | 4 |
| 0080 | 2 | 93 62 617 | | 1986- | 1 | Electronic unit | Elektroenhet | 3 |
| 0090 | 2 | 75 36 915 | | 1987- | 1 | Electronic unit | Elektroenhet | 3 |
| 0100 | 3 | 79 22 354 | | | 1 | Screw | Skruv | 5 |
| 0110 | 4 | 79 72 763 | | NLS | 2 | Screw | Skruv | 5 |
| 0120 | 5 | 79 16 489 | | | 3 | Washer | Bricka | 5 |
| 0130 | 6 | 92 30 293 | | | 3 | Washer | Bricka | 5 |
| 0140 | 8 | 83 28 783 | | | 1 | Timing valve | Taktventil | 4 |
| 0150 | 9 | 83 29 153 | | | 1 | Cushion | Kudde | 5 |
| 0160 | 11 | 75 26 791 | | 1986- | 1 | Fuel pipe | Bränsleledning | 5 |
| 0170 | 11 | 75 35 164 | | 1987- | 1 | Fuel pipe | Bränsleledning | 5 |
| 0180 | 12 | 75 26 809 | | | 1 | Fuel pipe | Bränsleledning | 5 |

500. Also valid for SE 1988B. Gäller även for SE 1988B.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-G18

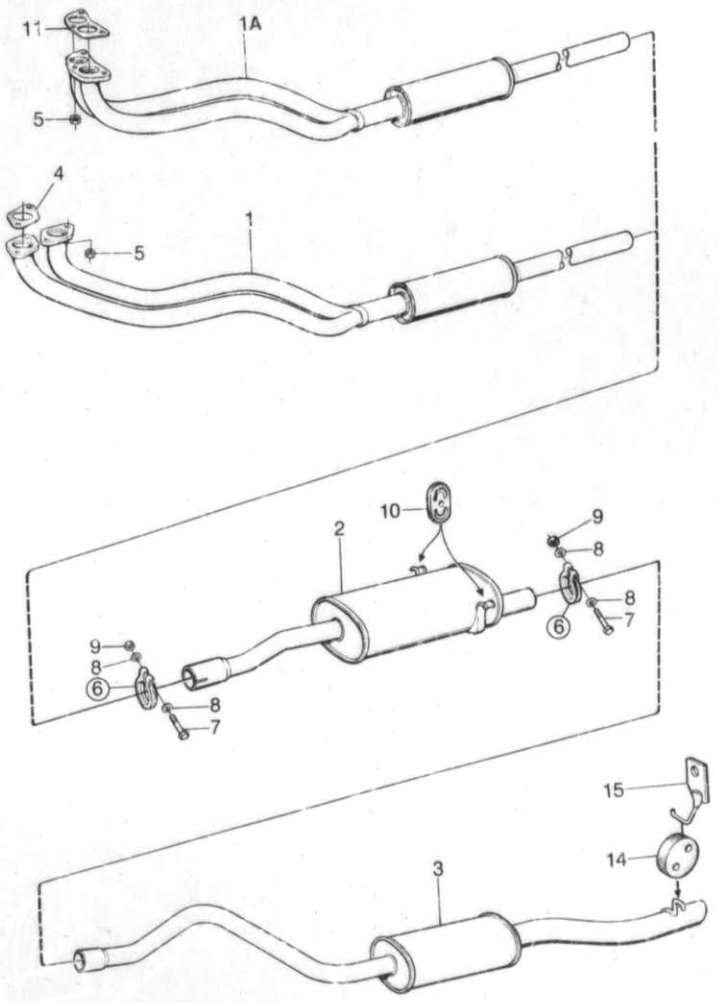


R 7896–900

| 1460 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 27 385 | | 34) | 1 | Silencer | Ljuddämpare | 1 |
| 0020 | 1A | 75 28 078 | | 35) | 1 | Silencer | Ljuddämpare | 1 |
| 0030 | 2 | 93 49 143 | | | 1 | Silencer | Ljuddämpare | 1 |
| 0040 | 3 | *93 49 176* | | 38) NLS - USE 7536196, 7538440 | 1 | Silencer | Ljuddämpare | 1 |
| 0040 | | | | | | | | |
| 0050 | 3 | 75 36 196 | | 39) | 1 | Silencer | Ljuddämpare | 1 |
| 0060 | 4 | 83 87 672 | | | 2 | Gasket | Packning | 1 |
| 0070 | 5 | *79 67 870* | | 34) NLS - USE 7979503 | 4 | Nut | Mutter | 5 |
| 0080 | 5 | *79 67 870* | | 35) NLS - USE 7979503 | 3 | Nut | Mutter | 5 |
| 0090 | 6 | 83 86 450 | | | 2 | Clamp | Klammer | 1 |
| 0100 | 7 | 80 84 014 | | | 1 | .Screw | .Skruv | 5 |
| 0110 | 8 | *93 19 047* | | NLS | 2 | .Washer | .Bricka | |
| 0120 | 9 | *80 73 942* | | -1987 NLS - USE 8151060 | 1 | .Nut | .Mutter | 5 |
| 0130 | 9 | 81 51 060 | | 1988- | 1 | .Nut | .Mutter | 5 |
| 0140 | 10 | 93 28 105 | | | 2 | Rubber mounting | Gummiupphängning | 1 |
| 0150 | 11 | 75 28 136 | | 35) | 1 | Gasket | Packning | 1 |
| 0160 | 14 | 93 65 404 | | | 1 | Rubber mounting | Gummiupphängning | 1 |
| 0170 | 15 | 93 68 093 | | 38) | 1 | Bracket | Konsol | 5 |
| 0180 | | | | | | | | |
| 0190 | | 88 19 690 | | See page 2-201, 1-J10 | X | Silencer kit | Ljuddämparsats | 2 |
| 0200 | | 75 38 440 | | See page 2-199, 1-J08 | X | Mounting kit | Monteringssats | 2 |
| 0205 | | 88 18 577 | | See page 2-199, 1-J08 | X | Mounting kit | Monteringssats | 2 |
| 0210 | | 93 21 555 | | See page 2-201, 1-J10 | X | Mounting kit | Monteringssats | 2 |

34. For cars without EGR. För bilar utan EGR.
35. For cars with EGR. För bilar med EGR.
38. Ch. -G2021146, -G3015680, -G7024051.
39. Ch. G2021147-, G3015681-, G7024052-.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

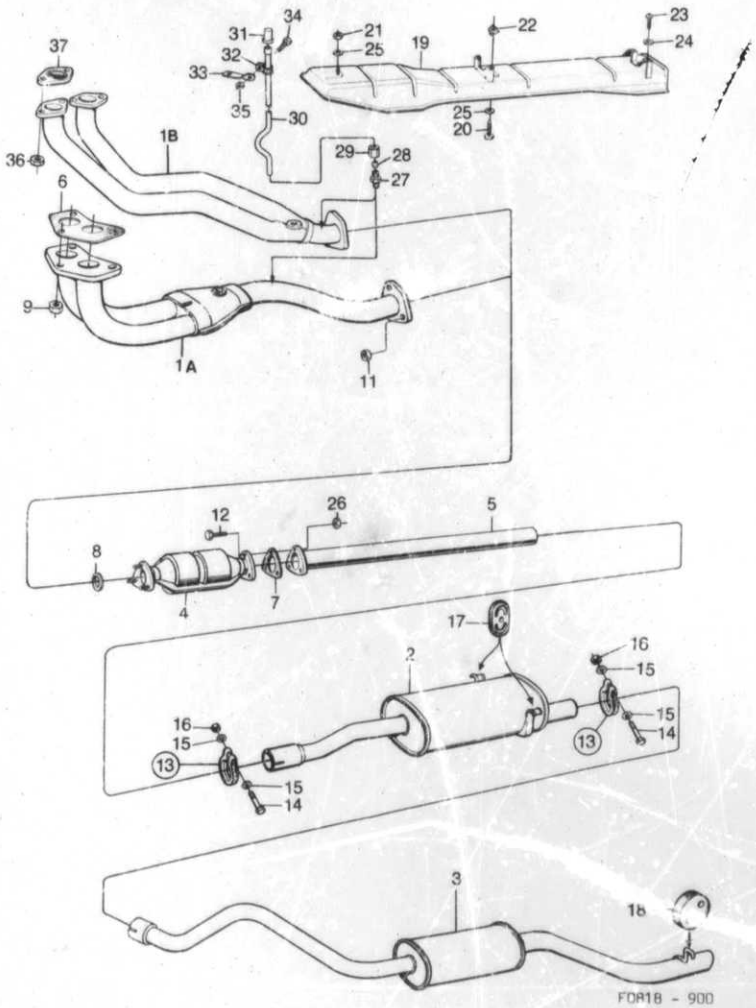


| 1500 | Pos | Part No/Artikelnr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1A | 75 39 117 | | 133) | 1 | Exhaust pipe | Avgasrör | 2 |
| 0020 | 1B | 89 80 278 | | 134,162) | 1 | Exhaust pipe | Avgasrör | 2 |
| 0030 | 1B | 89 80 278 | | 163), M | 1 | Exhaust pipe | Avgasrör | 2 |
| 0040 | 1A | 75 39 117 | | 163), A | 1 | Exhaust pipe | Avgasrör | 2 |
| 0050 | | | | | | | | |
| 0060 | 1A | 89 76 763 | | 133), CH | 1 | Exhaust pipe | Avgasrör | 2 |
| 0070 | 1B | 89 80 443 | | 134,162), CH | 1 | Exhaust pipe | Avgasrör | 2 |
| 0080 | 1B | 89 80 443 | | 163), M, CH | 1 | Exhaust pipe | Avgasrör | 2 |
| 0090 | 1A | 89 76 763 | | 163), A, CH | 1 | Exhaust pipe | Avgasrör | 2 |
| 0100 | | | | | | | | |
| 0110 | 2 | 93 49 143 | | | 1 | Silencer | Ljuddämpare | 1 |
| 0120 | 3 | 75 36 196 | | | 1 | Silencer | Ljuddämpare | 1 |
| 0130 | 4 | 93 32 461 | | | 1 | TW catalytic converter | Katalysator | 4 |
| 0135 | 4 | 44 40 081 | | IT | 1 | TW catalytic converter | Katalysator | 4 |
| 0140 | 5 | 93 33 840 | | | 1 | Exhaust pipe | Avgasrör | 1 |
| 0150 | 6 | 75 28 136 | | 133) | 1 | Gasket | Packning | 1 |
| 0160 | 6 | 75 28 136 | | 163), A | 1 | Gasket | Packning | 1 |
| 0170 | 7 | *83 87 052* | | NLS - USE 4024089 | 1 | Gasket | Packning | 3 |
| 0180 | 8 | 83 28 726 | | | 1 | Ring | Ring | 3 |
| 0190 | 9 | *79 67 870* | | 133) NLS - USE 7979503 | 3 | Nut | Mutter | 5 |
| 0200 | 9 | 79 79 503 | | 163), A | 3 | Nut | Mutter | 5 |
| 0210 | 11 | 80 74 106 | | -1987 | 3 | Nut | Mutter | 5 |
| 0220 | 11 | 81 51 235 | | 1988- | 3 | Nut | Mutter | 5 |
| 0230 | 12 | 79 67 789 | | | 3 | Screw | Skruv | 5 |
| 0240 | 13 | 83 86 450 | S | | 1 | Clamp | Klammer | 1 |
| 0250 | 14 | 80 84 014 | | | 1 | Screw | Skruv | 5 |
| 0260 | 15 | *93 19 047* | | NLS | 1 | Bracket | Bricka | |
| 0270 | 16 | *80 73 942* | | -1987 NLS - USE 8151030 | 1 | Nut | Mutter | 5 |
| 0280 | 16 | 81 51 060 | | 1988- | 1 | Nut | Mutter | 5 |
| 0290 | 17 | 93 28 105 | | | 2 | Rubber mounting | Gummiupphängning | 1 |
| 0300 | 18 | 93 65 404 | | | 1 | Rubber mounting | Gummiupphängning | 1 |
| 0310 | 19 | *93 49 804* | | JP, ME NLS - USE 4021598, 7119845, 7923014 | 1 | Heat shield | Värmesköld | 3 |
| 0310 | | | | | | | | |
| 0320 | 20 | 93 68 218 | | | 2 | Screw | Skruv | 5 |
| 0330 | 21 | 80 74 106 | | -1987 | 1 | Nut | Mutter | 5 |
| 0340 | 21 | 81 51 235 | | 1988- | 1 | Nut | Mutter | 5 |
| 0350 | 22 | 79 70 429 | | | 2 | Cage nut | Korgmutter | 5 |
| 0360 | 23 | 79 22 503 | | | 2 | Screw | Skruv | 5 |
| 0370 | 24 | 79 11 540 | | | 2 | Washer | Bricka | 5 |
| 0380 | 25 | 79 10 557 | | | 3 | Washer | Bricka | 5 |
| 0390 | 26 | 79 74 264 | | | 3 | Nut | Mutter | 5 |
| 0400 | 27 | 81 31 963 | | 1988-, CH | 1 | Nipple | Nippel | 5 |
| 0410 | 28 | 81 32 219 | | 1988-, CH | 1 | Ferrule | Skärring | 5 |
| 0420 | 29 | 81 45 534 | | 1988-, CH | 1 | Fitting nut | Kopplingsmutter | 5 |
| 0430 | 30 | 89 76 789 | | 1988-,133), CH | 1 | Tube | Rör | 9 |
| 0440 | 30 | *89 80 468* | | 134,162), CH NLS | 1 | Tube | Rör | 9 |
| 0450 | 30 | *89 80 468* | | 163), M, CH NLS | 1 | Tube | Rör | 9 |
| 0460 | 30 | 89 76 789 | | 163), A, CH | 1 | Tube | Rör | 9 |
| 0470 | 31 | 89 76 680 | | 1988-, CH | 1 | Cover | Huv | 3 |
| 0480 | 32 | 79 69 355 | | 1988-, CH | 1 | Clamp | Klammer | 5 |
| 0490 | 33 | 89 76 797 | | 1988-, CH | 1 | Bracket | Fäste | 5 |
| 0500 | 34 | 79 69 223 | | 1988-, CH | 1 | Screw | Skruv | 5 |
| 0510 | 35 | 79 71 658 | | 1988-, CH | 1 | Nut | Mutter | 5 |
| 0520 | 36 | 79 79 503 | | 134,-1988) | 4 | Nut | Mutter | 5 |
| 0530 | 36 | 79 78 620 | | 1989- | 4 | Nut | Mutter | 3 |
| 0540 | 37 | 89 80 328 | | 134,-1988) | 2 | Gasket | Packning | 1 |
| | 37 | 83 87 672 | | 1989- | 2 | Gasket | Packning | 1 |

133. Ch. -J3024715, -J7033064.
134. Ch. J3024716-, J7033065-.
162. Ch. -K301160-, -K7014706.
163. Ch. K3011607-, K7014707-.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

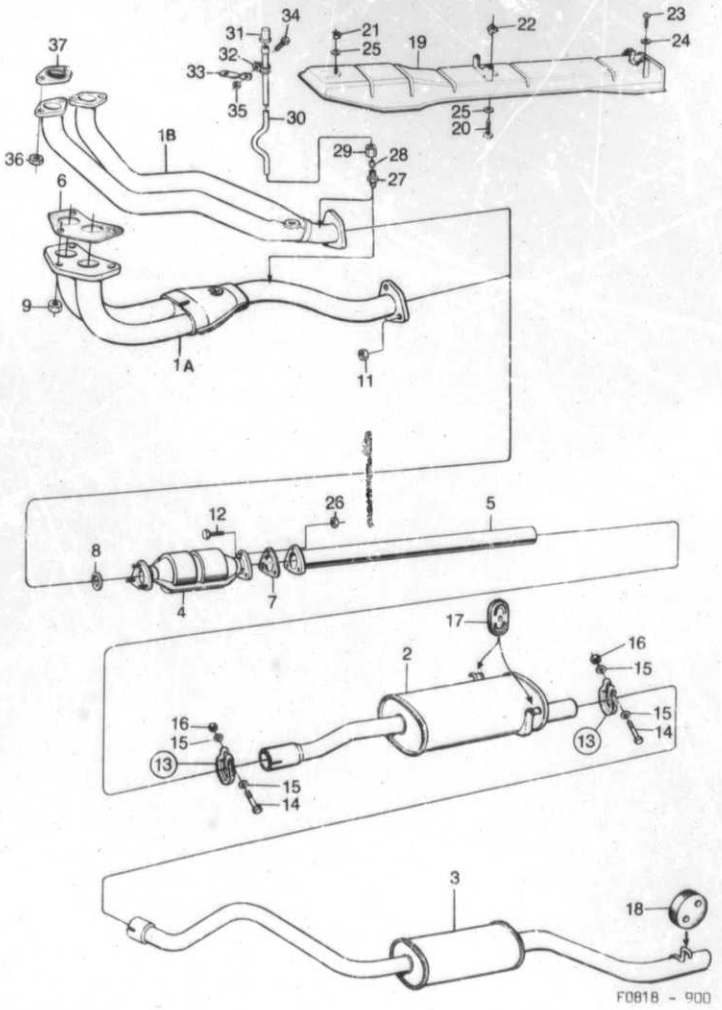



| 1500 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0565 | | 88 18 577 | | See page 2-199, 1-J08 | X | Mounting kit | Monteringssats | 2 |
| 0570 | | 88 18 590 | | See page 2-201, 1-J10 | X | Silencer kit | Ljuddämparsats | 2 |
| 0580 | | *88 19 229* | | 1986, B201C+I, EU | X | Catalytic converter kit | Katalysatorsats | 4 |
| 0590 | | | | See page 2-201, 1-J10 | | | | |
| 0590 | | | | NLS | | | | |
| 0600 | | 88 19 237 | | 1986, B201C+I, SE | X | Catalytic converter kit | Katalysatorsats | 4 |
| 0610 | | | | 1987-1988, B201C+I | | | | |
| 0620 | | | | See page 2-205, 1-J14 | | | | |
| 0630 | | 93 21 555 | | See page 2-201, 1-J10 | X | Mounting kit | Monteringssats | 2 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

2 GROUP INDEX

| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

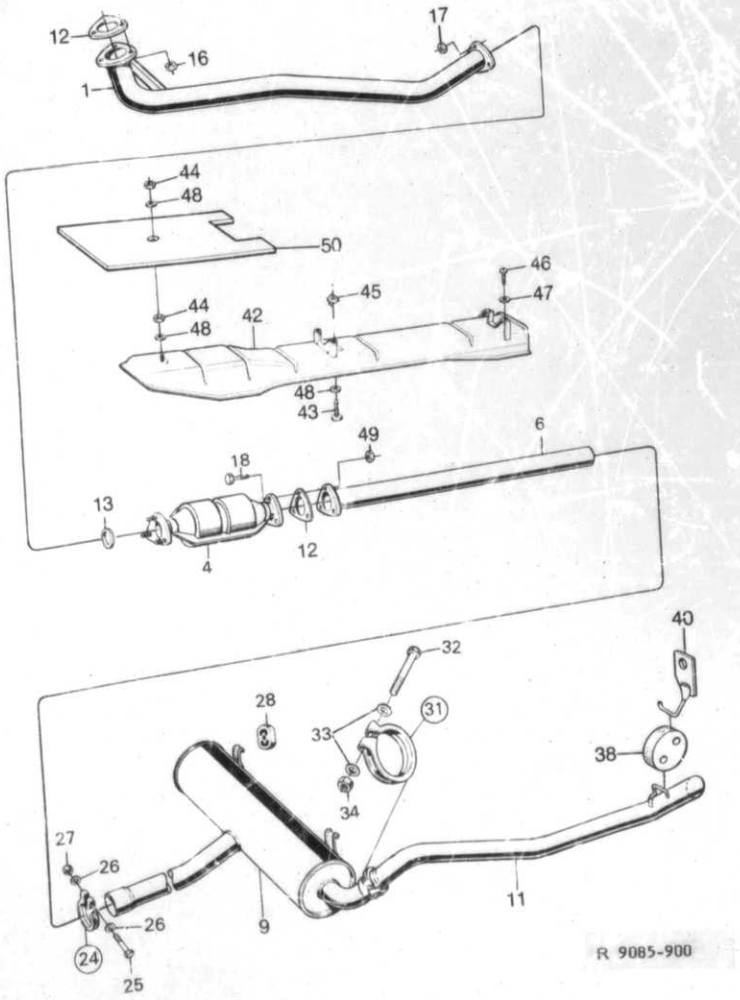


Exhaust system
# 1-G24
**B201I, US**
**With catalytic converter**

Avgassystem
**B201I, US**
**Med katalytisk reaktor**

| 1510 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 14 250 | | | 1 | Exhaust pipe | Avgasrör | 2 |
| 0020 | 4 | 93 32 461 | | | 1 | TW catalytic converter | Katalysator | 4 |
| 0030 | 6 | 93 33 840 | | | 1 | Exhaust pipe | Avgasrör | 1 |
| 0040 | 9 | *93 26 448* | | NLS - USE 7533623, 7533631 | 1 | Silencer | Ljuddämpare | 1 |
| 0040 | | | | | | | | |
| 0050 | 11 | 93 65 727 | | 38) | 1 | Exhaust pipe | Avgasrör | |
| 0060 | 11 | 75 36 097 | | 39) | 1 | Exhaust pipe | Avgasrör | 1 |
| 0070 | 12 | *83 87 052* | | NLS - USE 4024089 | 1 | Gasket | Packning | 3 |
| 0080 | 13 | 83 28 726 | | | 1 | Ring | Ring | 3 |
| 0090 | 16 | *79 70 296* | | 89) NLS - USE 7968415 | 3 | Lock nut | Låsmutter | 3 |
| 0100 | 16 | *79 65 767* | | 90) NLS - USE 7968415 | 3 | Lock nut | Låsmutter | 5 |
| 0110 | 17 | 80 74 106 | | -1987 | 3 | Nut | Mutter | 5 |
| 0120 | 17 | 81 51 235 | | 1988- | 3 | Nut | Mutter | 5 |
| 0130 | 18 | 79 67 789 | | | 3 | Screw | Skruv | 5 |
| 0140 | 24 | 83 86 450 | S | | 1 | Clamp | Klamma | 1 |
| 0150 | 25 | 80 84 014 | | | 1 | . Screw | . Skruv | 5 |
| 0160 | 26 | *93 19 047* | | NLS | 1 | . Washer | . Bricka | |
| 0170 | 27 | *80 73 942* | | -1987 NLS - USE 8151060 | 1 | . Nut | . Mutter | 5 |
| 0180 | 27 | 81 51 060 | | 1988- | 1 | . Nut | . Mutter | 5 |
| 0190 | 28 | 93 28 105 | | | 1 | Rubber mounting | Gummiupphängning | 1 |
| 0200 | 31 | 83 84 323 | S | | 1 | Clamp | Klammer | 1 |
| 0210 | 32 | 80 84 006 | | | 1 | . Screw | . Skruv | 5 |
| 0220 | 33 | *93 19 047* | | NLS | 1 | . Washer | . Bricka | |
| 0230 | 34 | *80 73 942* | | -1987 NLS - USE 8151060 | 1 | . Nut | . Mutter | 5 |
| 0240 | 34 | 81 51 060 | | 1988- | 1 | . Nut | . Mutter | 5 |
| 0250 | 38 | 93 65 404 | | | 1 | Rubber mounting | Gummiupphängning | 1 |
| 0260 | 40 | 93 68 093 | | 38) | 1 | Bracket | Konsol | 5 |
| 0270 | 42 | *93 49 804* | | NLS - USE 4021598, 7119845, 7923014 | 1 | Heat shield | Värmesköld | 3 |
| 0270 | | | | | | | | |
| 0280 | 43 | 93 68 218 | | | 1 | Screw | Skruv | 5 |
| 0290 | 44 | 80 74 106 | | -1987 | 1 | Nut | Mutter | 5 |
| 0300 | 44 | 81 51 235 | | 1988- | 1 | Nut | Mutter | 5 |
| 0310 | 45 | 79 70 429 | | | 1 | Cage nut | Korgmutter | 5 |
| 0320 | 46 | 79 22 503 | | | 1 | Screw | Skruv | 5 |
| 0330 | 47 | 79 10 540 | | | 1 | Washer | Bricka | 5 |
| 0340 | 48 | 79 10 557 | | | 1 | Washer | Bricka | 5 |
| 0350 | 49 | 79 74 264 | | | 3 | Nut | Mutter | 5 |
| 0360 | 50 | | | See page 8B-019, 6-A20 | 1 | Heat shield | Värmesköld | |
| 0370 | | | | | | | | |
| 0375 | | 88 18 577 | | See page 2-199, 1-J08 | X | Mounting kit | Monteringssats | 2 |
| 0380 | | 88 17 350 | | 38) | X | Silencer kit | Ljuddämpersats | 1 |
| 0390 | | | | See page 2-205, 1-J14 | | | | |
| 0400 | | 88 19 930 | | 39) | X | Silencer | Ljuddämpare | 1 |
| 0410 | | | | See page 2-205, 1-J14 | | | | |
| 0420 | | 75 38 440 | | 38) | X | Mounting kit | Monteringssats | 2 |
| 0430 | | | | See page 2-193, 1-J02 | | | | |

38. Ch. -G2021146, -G3015680, -G7024051.
39. Ch. G2021147-, G3015681-, G7024052-.
89. Ch. -J3011644, -J7016818.
90. Ch. J3011645-, J7016819




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-H02

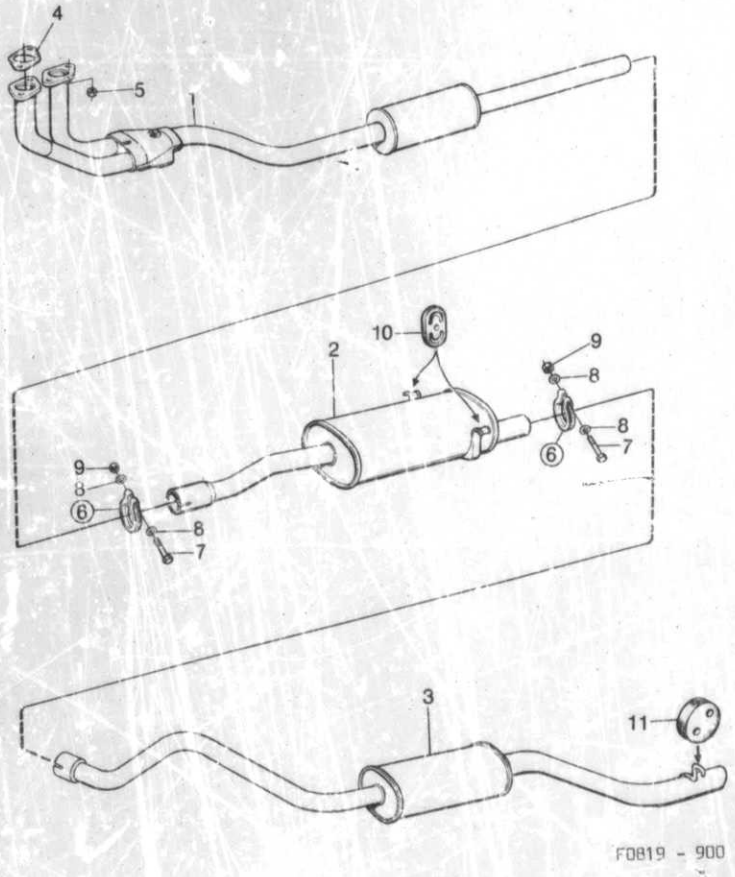


| 1515 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 93 63 631 | | | 1 | Silencer | Ljuddämpare | 1 |
| 0020 | 2 | 93 49 143 | | | 1 | Silencer | Ljuddämpare | 1 |
| 0030 | 3 | 75 36 196 | | | 1 | Silencer | Ljuddämpare | 1 |
| 0040 | 4 | 89 80 328 | | | 2 | Gasket | Packning | 1 |
| 0050 | 5 | *79 67 870* | | NLS - USE 7979503 | 4 | Nut | Mutter | 5 |
| 0060 | 6 | 83 86 450 | | | 2 | Clamp | Klammer | 1 |
| 0070 | 7 | 80 84 014 | | | 1 | ▪Screw | ▪Skruv | 5 |
| 0080 | 8 | *93 19 047* | | NLS | 2 | ▪Washer | ▪Bricka | |
| 0090 | 9 | 81 51 060 | | | 1 | ▪Nut | ▪Mutter | 5 |
| 0100 | 10 | 93 28 105 | | | 2 | Rubber mounting | Gummiupphängning | 1 |
| 0110 | 11 | 93 65 404 | | | 1 | Rubber mounting | Gummiupphängning | 1 |
| 0120 | | | | | | | | |
| 0125 | | 83 18 577 | | See page 2-199, 1-J08 | X | Mounting kit | Monteringssats | 2 |
| 0130 | | 83 19 690 | | See page 2-201, 1-J10 | X | Silencer kit | Ljuddämparsats | 2 |
| 0140 | | 93 21 555 | | See page 2-201, 1-J10 | X | Mounting kit | Monteringssats | 2 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-H04

## B202 I
## With catalytic converter

## B202 I
## Med katalytisk reaktor

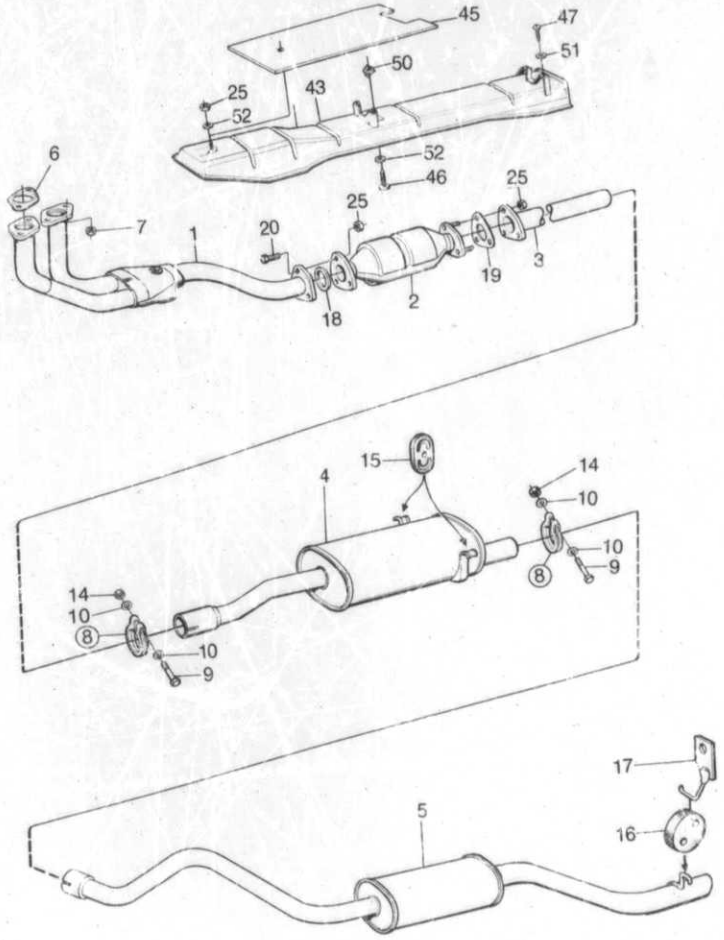


R 8744 - 900

| 1520 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 93 64 407 | | | 1 | Exhaust pipe | Avgasrör | 2 |
| 0020 | 2 | *75 33 532* | | NLS - USE 7533797 | 1 | TW catalytic converter | Katalysator | 4 |
| 0025 | 2 | 44 40 046 | | IT | 1 | TW catalytic converter | Katalysator | 4 |
| 0030 | 3 | 75 33 904 | | | 1 | Exhaust pipe | Avgasrör | 1 |
| 0040 | 4 | 93 49 143 | | | 1 | Silencer | Ljuddämpare | 1 |
| 0050 | 5 | *93 49 176* | | 38) NLS - USE 7536196, 7538440 | 1 | Silencer | Ljuddämpare | 1 |
| 0050 | | | | | | | | |
| 0060 | 5 | 75 36 196 | | 39) | 1 | Silencer | Ljuddämpare | 1 |
| 0070 | 6 | 93 68 572 | | 137) | 2 | Gasket | Packning | 1 |
| 0080 | 6 | 89 80 328 | | 138) | 2 | Gasket | Packning | 1 |
| 0090 | 7 | *79 67 870* | | NLS - USE 7979503 | 4 | Nut | Mutter | 5 |
| 0100 | 8 | 83 86 450 | | | 2 | Clamp | Klammer | 1 |
| 0110 | 9 | 80 84 014 | | | 1 | Screw | Skruv | 5 |
| 0120 | 10 | *93 19 047* | | NLS | 2 | Washer | Bricka | |
| 0130 | 14 | *80 73 942* | | -1987 NLS - USE 8151060 | 1 | Nut | Mutter | 5 |
| 0140 | 14 | 81 51 060 | | 1988- | 1 | Nut | Mutter | 5 |
| 0150 | 15 | 93 28 105 | | | 2 | Rubber mounting | Gummiupphängning | 1 |
| 0160 | 16 | 93 65 404 | | | 1 | Rubber mounting | Gummiupphängning | 1 |
| 0170 | 17 | 93 68 093 | | 38) | 1 | Bracket | Konsol | 5 |
| 0180 | 18 | 83 28 726 | | | 1 | Ring | Ring | 3 |
| 0190 | 19 | *83 87 052* | | NLS - USE 4024089 | 1 | Gasket | Packning | 3 |
| 0200 | 20 | 79 67 789 | | | 3 | Screw | Skruv | 5 |
| 0210 | 25 | 80 74 106 | | -1987 | 7 | Nut | Mutter | 5 |
| 0220 | 25 | 81 51 235 | | 1988- | 7 | Nut | Mutter | 5 |
| 0230 | 43 | *93 49 804* | | NLS - USE 4021598, 7119845, 7923014 | 1 | Heat shield | Värmesköld | 3 |
| 0230 | | | | | | | | |
| 0240 | 45 | | | See page 8B-023, 6-A24 | | Heat shield | Värmesköld | |
| 0250 | 46 | 93 68 218 | | | 2 | Screw | Skruv | 5 |
| 0260 | 47 | 79 22 503 | | | 2 | Screw | Skruv | 5 |
| 0270 | 50 | 79 70 437 | | | 2 | Cage nut | Korgmutter | 5 |
| 0280 | 51 | 80 29 951 | | | 2 | Washer | Bricka | 5 |
| 0290 | 52 | 80 29 985 | | | 3 | Washer | Bricka | 5 |
| 0300 | | | | | | | | |
| 0310 | | 88 19 690 | | See page 2-201, 1-J10 | X | Silencer kit | Ljuddämparsats | 2 |
| 0320 | | 75 38 440 | | See page 2-199, 1-J08 | X | Mounting kit | Monteringssats | 2 |
| 0325 | | 88 18 577 | | See page 2-199, 1-J08 | X | Mounting kit | Monteringssats | 2 |
| 0330 | | 93 21 555 | | See page 2-201, 1-J10 | X | Mounting kit | Monteringssats | 2 |

38. Ch. -G2021146, -G3015680, -G7024051.
39. Ch. G2021147-, G3015681-, G7024052-.
137. Ch. -J3026716, -J7033064.
138. Ch. J3026717-, J7033065-.

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX

| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

Exhaust system
*Turbo*

Avgassystem
*Turbo*

# 1-H06

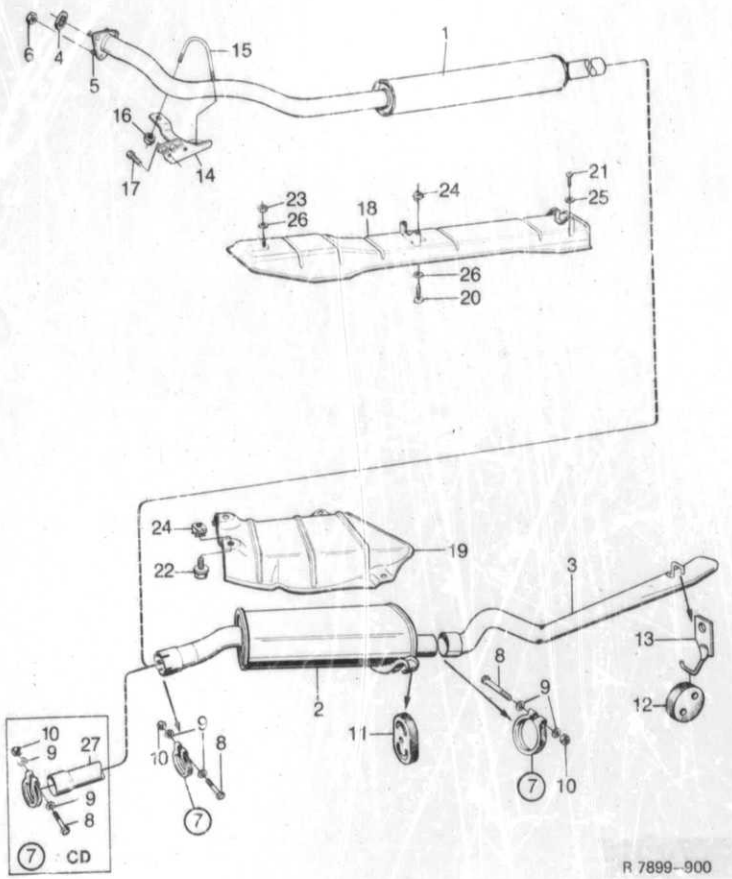


R 7899-900

| 1572 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 93 63 649 | | | 1 | Silencer | Ljuddämpare | 1 |
| 0020 | 2 | 93 49 192 | | | 1 | Silencer | Ljuddämpare | 1 |
| 0030 | 3 | *75 12 254* | | 38) NLS - USE 7535925, 7538440 | 1 | Exhaust pipe | Avgasrör | 1 |
| 0030 | | | | | | | | |
| 0040 | 3 | 75 35 925 | | 39) | 1 | Exhaust pipe | Avgasrör | |
| 0050 | 4 | 93 16 407 | | | 1 | Seal | Tätning | 3 |
| 0060 | 5 | *83 67 856* | | NLS - USE 7520224 | 3 | Stud | Pinnskruv | 5 |
| 0070 | 6 | *79 65 767* | | NLS - USE 7968415 | 3 | Lock nut | Låsmutter | 5 |
| 0080 | 7 | 83 36 406 | | | 2 | Clamp | Klammer | 1 |
| 0090 | 7 | 83 36 406 | | CD | 3 | Clamp | Klammer | 1 |
| 0100 | 8 | 80 84 030 | | | 1 | ▲Screw | ▲Skruv | 5 |
| 0110 | 9 | *93 19 047* | | NLS | 2 | ▲Washer | ▲Bricka | |
| 0120 | 10 | 80 74 106 | | -1987 | 1 | ▲Nut | ▲Mutter | 5 |
| 0130 | 10 | 81 51 235 | | 1988- | 1 | ▲Nut | ▲Mutter | 5 |
| 0140 | 11 | 93 28 105 | | | 2 | Rubber mounting | Gummiupphängning | 1 |
| 0150 | 12 | 93 65 404 | | | 1 | Rubber mounting | Gummiupphängning | 1 |
| 0160 | 13 | 93 68 093 | | 38) | 1 | Bracket | Konsol | 5 |
| 0170 | 14 | 75 26 916 | | 3) | 1 | Stay | Stag | 5 |
| 0180 | 15 | 93 17 058 | S | | 1 | Brace | Bygel | |
| 0190 | 16 | *79 65 767* | S | NLS - USE 7968415 | 2 | Lock nut | Låsmutter | 5 |
| 0200 | 17 | 80 82 968 | | | 2 | Screw | Skruv | 5 |
| 0210 | 18 | *93 45 804* | | JP, ME NLS - USE 4021998, 7119845, 7923014 | 1 | Heat shield | Värmesköld | 3 |
| 0210 | | | | | | | | |
| 0210 | | | | | | | | |
| 0220 | 19 | 75 11 645 | | | 1 | Heat shield | Värmesköld | 3 |
| 0230 | 20 | 93 68 218 | | | 2 | Screw | Skruv | 5 |
| 0240 | 21 | 79 22 503 | | | 2 | Screw | Skruv | 5 |
| 0250 | 22 | 75 28 953 | | | 4 | Screw | Skruv | 5 |
| 0260 | 23 | 80 74 106 | | -1987 | 1 | Nut | Mutter | 5 |
| 0270 | 23 | 81 51 235 | | 1988- | 1 | Nut | Mutter | 5 |
| 0280 | 24 | 79 70 429 | | | 6 | Cage nut | Korgmutter | 5 |
| 0290 | 25 | 80 29 951 | | | 2 | Washer | Bricka | 5 |
| 0300 | 26 | 80 29 985 | | | 3 | Washer | Bricka | 5 |
| 0310 | 27 | 93 97 845 | | CD | 1 | Extension | Förlängning | 7 |
| 0320 | | | | | | | | |
| 0330 | | 88 19 708 | | See page 2-201, 1-J10 | X | Silencer kit | Ljuddämparsats | 2 |
| 0340 | | 75 38 440 | | See page 2-199, 1-J08 | X | Mounting kit | Monteringssats | 2 |
| 0350 | | 93 21 563 | | See page 2-201, 1-J10 | X | Mounting kit | Monteringssats | 2 |

3. For service measure, use stay 7525264, lock plate 7514631 and screw 8082992. För serviceändamål, använd stag 7525264, låsplåt 751463* och skruv 8082992.
38. Ch. -G2021146, -G3015680, -G7024051.
39. Ch. G2021147-, G3015681-, G7024052-.



## MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


## 2 GROUP INDEX



| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

Exhaust system

# 1-H08 Turbo With catalytic converter

Avgassystem

**Turbo**
**Med katalytisk reaktor**

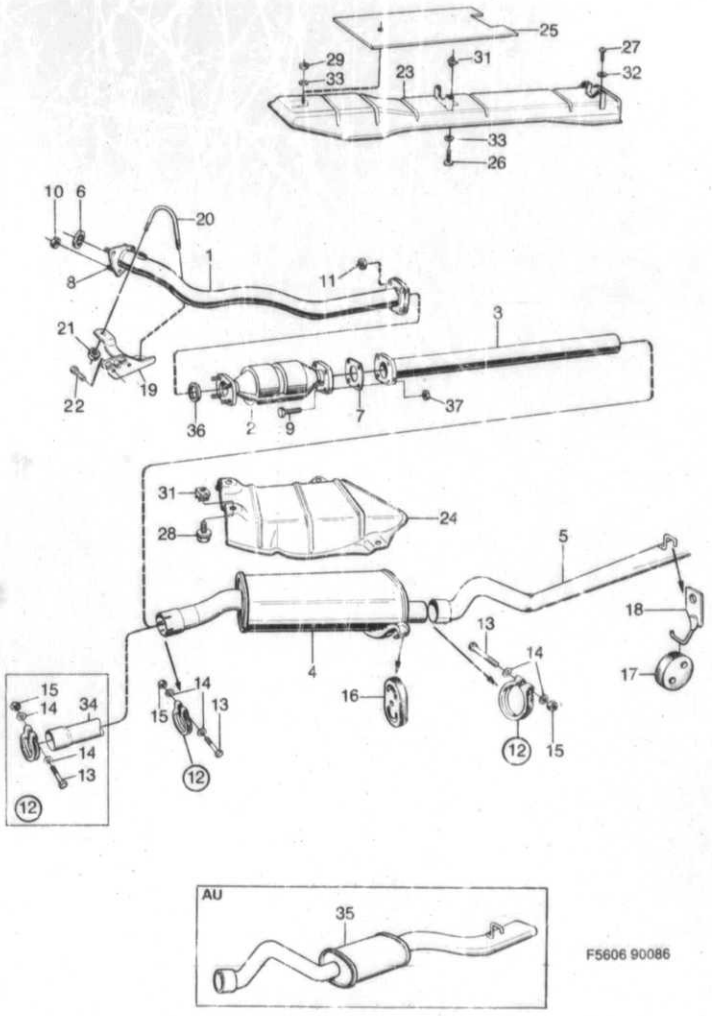


F5606 90086

| 1530 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 33 896 | | -1987 | 1 | Exhaust pipe | Avgasrör | 2 |
| 0020 | 1 | 75 33 896 | | 1988- | 1 | Exhaust pipe | Avgasrör | 2 |
| 0030 | 2 | 93 32 453 | | 42), B201 | 1 | TW catalytic converter | Katalysator | 4 |
| 0035 | 2 | 44 40 053 | | B20 , IT | 1 | TW catalytic converter | Katalysator | 4 |
| 0040 | 2 | 75 33 540 | | B202 | 1 | TW catalytic converter | Katalysator | 4 |
| 0045 | 2 | 44 40 038 | | B202, IT | 1 | TW catalytic converter | Katalysator | 4 |
| 0050 | 3 | 75 37 051 | | 42), B201 | 1 | Intermediate pipe | Mellanrör | 1 |
| 0060 | 3 | 93 33 857 | | B202 | 1 | Exhaust pipe | Avgasrör | 1 |
| 0070 | 4 | 93 49 192 | | | 1 | Silencer | Ljuddämpare | 1 |
| 0080 | 5 | *75 12 254* | | 38) NLS - USE 7535925, 7538440 | 1 | Exhaust pipe | Avgasrör | 1 |
| 0090 | 5 | 75 35 925 | | 39) | 1 | Exhaust pipe | Avgasrör | |
| 0100 | 6 | 93 16 407 | | | 1 | Seal | Tätning | 3 |
| 0110 | 7 | *83 34 963* | | NLS - USE 4024121 | 1 | Gasket | Packning | 1 |
| 0120 | 8 | *83 67 856* | | NLS - USE 7520224 | 3 | Stud | Pinnskruv | 5 |
| 0130 | 9 | 79 67 789 | | | 4 | Screw | Skruv | 5 |
| 0140 | 10 | *79 65 767* | | NLS - USE 7968415 | 3 | Lock nut | Låsmutter | 5 |
| 0150 | 11 | 80 74 106 | | -1987 | 4 | Nut | Mutter | 5 |
| 0160 | 11 | 81 51 235 | | 1988- | 4 | Nut | Mutter | 5 |
| 0170 | 12 | 83 36 406 | | | 2 | Clamp | Klammer | 1 |
| 0180 | 12 | 83 36 406 | | CD | 3 | Clamp | Klammer | 1 |
| 0190 | 13 | 80 84 030 | | | 1 | ▪Screw | ▪Skruv | 5 |
| 0200 | 14 | *93 19 047* | | NLS | 2 | ▪Washer | ▪Bricka | |
| 0210 | 15 | 80 74 106 | | -1987 | 1 | ▪Nut | ▪Mutter | 5 |
| 0220 | 15 | 81 51 235 | | 1988- | 1 | ▪Nut | ▪Mutter | 5 |
| 0230 | 16 | 93 28 105 | | | 2 | Rubber mounting | Gummiupphängning | 1 |
| 0240 | 17 | 93 65 404 | | | 1 | Rubber mounting | Gummiupphängning | 1 |
| 0250 | 18 | 93 63 093 | | 38) | 1 | Bracket | Konsol | 5 |
| 0260 | 19 | 75 26 916 | | 3) | 1 | Stay | Stag | 5 |
| 0270 | 20 | 93 17 058 | S | | 1 | Brace | Bygel | |
| 0280 | 21 | *79 65 767* | S | NLS - USE 7968415 | 2 | Lock nut | Låsmutter | 5 |
| 0290 | 22 | 80 82 968 | | | 2 | Screw | Skruv | 5 |
| 0300 | 23 | *93 49 804* | | NLS - USE 4021598, 7119845, 7923014 | 1 | Heat shield | Värmesköld | 3 |
| 0310 | 24 | 75 11 645 | | | 1 | Heat shield | Värmesköld | 3 |
| 0320 | 25 | | | See page 8B-019, 6-A20 | 1 | Heat shield | Värmesköld | |
| 0330 | 26 | 93 68 218 | | | 2 | Screw | Skruv | 5 |
| 0340 | 27 | 79 22 503 | | | 2 | Screw | Skruv | 5 |
| 0350 | 28 | 75 28 953 | | | 4 | Screw | Skruv | 5 |
| 0360 | 29 | 80 74 106 | | -1987 | 1 | Nut | Mutter | 5 |
| 0370 | 29 | 81 51 235 | | 1988- | 1 | Nut | Mutter | 5 |
| 0380 | 31 | 79 70 429 | | | 6 | Cage nut | Korgmutter | 5 |
| 0390 | 32 | 80 29 951 | | | 2 | Washer | Bricka | 5 |
| 0400 | 33 | 80 29 985 | | | 3 | Washer | Bricka | 5 |
| 0410 | 34 | 93 97 845 | | CD | 1 | Extension | Förlängning | 7 |
| 0420 | 35 | *75 14 979* | | 38), AU NLS - USE 7536063, 7538440 | 1 | Silencer | Ljuddämpare | 1 |
| 0430 | 35 | 75 36 063 | | 39), AU | 1 | Silencer | Ljuddämpare | 1 |
| 0440 | 36 | *83 34 971* | | NLS - USE 9316407 | 1 | Seal | Tätning | 3 |
| 0450 | 37 | 79 74 264 | | | 4 | Nut | Mutter | 5 |
| 0460 | | | | | | | | |
| 0470 | | 88 19 708 | | See page 2-201, 1-J10 | X | Silencer kit | Ljuddämparsats | 2 |
| 0480 | | 75 38 440 | | See page 2-199, 1-J08 | X | Mounting kit | Monteringssats | 2 |
| 0490 | | *88 19 203* | | 1986-1988 See page 2-201, 1-J10 NLS | X | Catalytic converter kit | Katalysatorsats | 4 |
| 0500 | | | | | | | | |
| 0510 | | 93 21 563 | | See page 2-201, 1-J10 | X | Mounting kit | Monteringssats | 2 |

3. For service measure, use stay 7525264, lock plate 7514631 and screw 8082992. För serviceändamål, använd stag 7525264, låsplåt 7514631 och skruv 8082992.
38. Ch. -G2021146, -G3015680, -G7024051.
39. Ch. G2021147-, G3015681-, G7024052-.
42. EU with US specification. EU med US-specifikation.

MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-H10

## Radiator, etc

## Kylare, etc

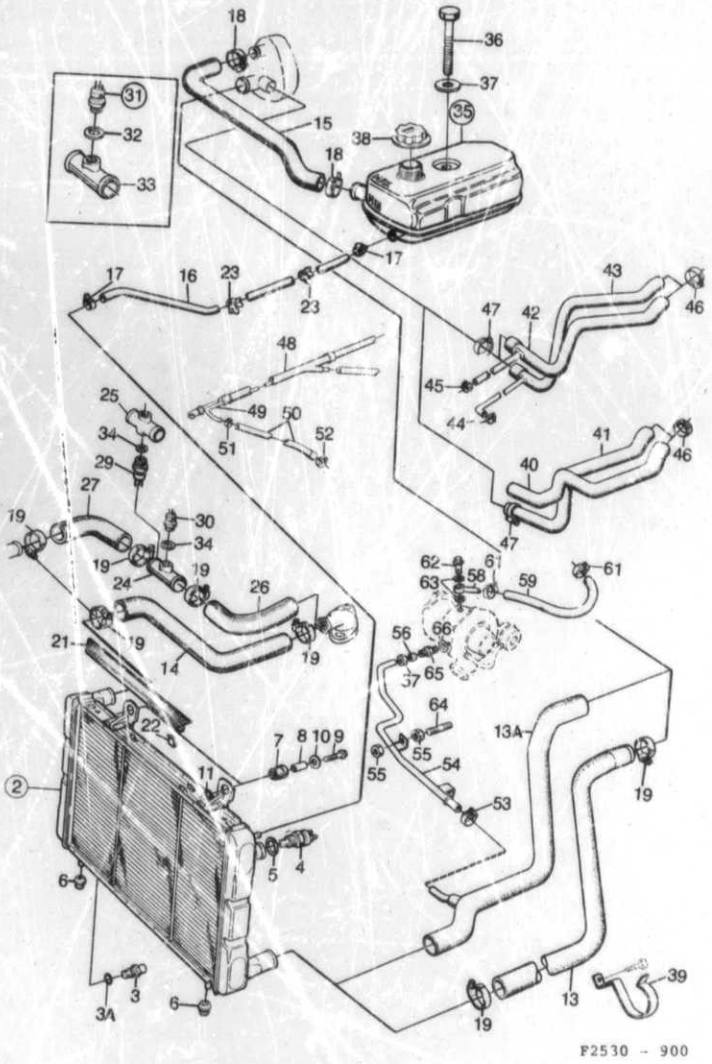


| 1550 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 2 | *75 41 063* | | 190) NLS - USE 7549280 | 1 | Radiator | Kylare | 4 |
| 0020 | 2 | 75 49 280 | | 191) | 1 | Radiator | Kylare | 4 |
| 0030 | 2 | *75 41 071* | | 190), TURBO NLS - USE 7549298 | 1 | Radiator | Kylare | 4 |
| 0040 | 2 | 75 49 298 | | 191), TURBO | 1 | Radiator | Kylare | 4 |
| 0050 | 3 | 93 18 304 | | 190) | 1 | .Drain valve | .Avtappningsventil | 5 |
| 0060 | 3 | 75 49 389 | | 191) | 1 | .Drain valve | .Avtappningsventil | 5 |
| 0070 | 3A | 79 75 725 | | 191) | 1 | ..O-ring | ..O-ring | 2 |
| 0080 | 4 | *85 69 238* | | 1986 NLS - USE 4086706, 8330268 | 1 | .Thermo contact | .Termokontakt | 2 |
| 0090 | 4 | 85 47 572 | | 1987 | 1 | .Thermo contact | .Termokontakt | 2 |
| 0100 | 4 | *95 26 518* | | 1988- NLS - USE 4086708 | 1 | .Thermo contact | .Termokontakt | 2 |
| 0110 | 5 | 83 30 268 | | | 1 | .Seal | .Tätning | 5 |
| 0120 | 6 | 83 39 657 | | | 2 | Rubber bushing | Gummibussning | 4 |
| 0130 | 7 | 75 13 724 | | | 2 | Rubber bushing | Gummibussning | 4 |
| 0140 | 8 | 75 13 716 | | | 2 | Spacer | Distans | 4 |
| 0150 | 9 | 79 75 436 | | | 2 | Screw | Skruv | 5 |
| 0160 | 10 | 79 75 469 | | | 2 | Washer | Bricka | 5 |
| 0170 | 11 | 79 71 658 | | | 2 | Nut | Mutter | 5 |
| 0180 | 13 | 93 64 795 | | | 1 | Hose | Slang | 3 |
| 0190 | 13 | 75 12 817 | | -1987, TURBO | 1 | Hose | Slang | 3 |
| 0200 | 13A | *75 48 837* | | 1988-, TURBO NLS - USE 4029849 | 1 | Hose | Slang | 3 |
| 0210 | 14 | 75 40 420 | | | 1 | Hose | Slang | 2 |
| 0220 | 15 | 93 49 382 | | | 1 | Hose | Slang | 3 |
| 0230 | 16 | *93 30 515* | | 192) NLS - USE 4029153 | 1 | Hose | Slang | 3 |
| 0240 | 16 | 40 29 153 | | 193) | 1 | Hose | Slang | 3 |
| 0250 | 17 | 79 70 031 | | | 2 | Hose clamp | Slangklamma | 5 |
| 0260 | 18 | 79 70 098 | | | 2 | Hose clamp | Slangklamma | 5 |
| 0270 | 19 | 79 70 106 | | | 4 | Hose clamp | Slangklamma | 5 |
| 0280 | 19 | 79 70 106 | | TURBO, AC | 2 | Hose clamp | Slangklamma | 5 |
| 0290 | 21 | 75 41 857 | | 192) | 1 | Sealing strip | Tätningslist | 4 |
| 0300 | 21 | 40 29 013 | | 193,219) | 1 | Sealing strip | Tätningslist | 4 |
| 0310 | 21 | 41 20 069 | | 220) | 2 | Sealing strip | Tätningslist | 4 |
| 0320 | 22 | 75 43 911 | | 192) | 3 | Clamp | Klammer | 5 |
| 0330 | 23 | 85 36 419 | | | 2 | Clip | Clips | 5 |
| 0340 | 24 | 93 32 826 | | AC | 1 | Pipe | Rör | 5 |
| 0350 | 25 | 93 45 091 | | ME | 1 | Tube | Rör | 5 |
| 0360 | 26 | 75 43 259 | | AC | 1 | Hose | Slang | 5 |
| 0370 | 27 | 93 32 818 | | AC | 1 | Hose | Slang | 2 |
| 0380 | 29 | *85 73 586* | | -1987, ME NLS - USE 4086716 | 1 | Contact | Kontakt | 2 |
| 0390 | 29 | 95 26 534 | | 1988-, ME | 1 | Thermo contact | Termokontakt | 2 |
| 0400 | 29 | *85 72 331* | | 1986, AC CLARION, ME NLS - USE 4086724 | 1 | Thermo contact | Termokontakt | 2 |
| 0410 | 29 | *95 52 878* | | -1987, B202, AC NLS - USE 4086724 | 1 | Contact | Kontakt | 2 |
| 0420 | 29 | *95 26 526* | | 1988-, B202, AC NLS - USE 4086724 | 1 | Thermo contact | Termokontakt | 2 |
| 0430 | 30 | *85 72 331* | | AC NLS - USE 4086724 | 1 | Thermo contact | Termokontakt | 2 |
| 0440 | 31 | 88 20 797 | | 1986, AC CLARION | 1 | Contact | Kontakt | 2 |
| 0450 | 32 | 88 20 813 | | 1986, AC CLARION | 1 | .Seal | .Tätning | 5 |
| 0460 | 33 | *88 20 821* | | 1986, AC CLARION NLS - USE 4086724, 8330268, 9332826 | 1 | .Pipe elbow | .Rörkrök | 5 |
| 0470 | 34 | 83 30 268 | | AC | 2 | Seal | Tätning | 5 |
| 0480 | 35 | *93 63 557* | | -1988 NLS - USE 7549876 | 1 | Expansion tank | Expansionstank | 3 |

190. Ch. --K3022368, --K7030345.
191. Ch. K3022369-, K7030346-.
192. Ch. --K3022368, --K7030345.
193. Ch. K3022369-, K7030346-.
219. Ch. --K3023014, --K7031595.
220. Ch. K3023015-, K7031596-.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-H12

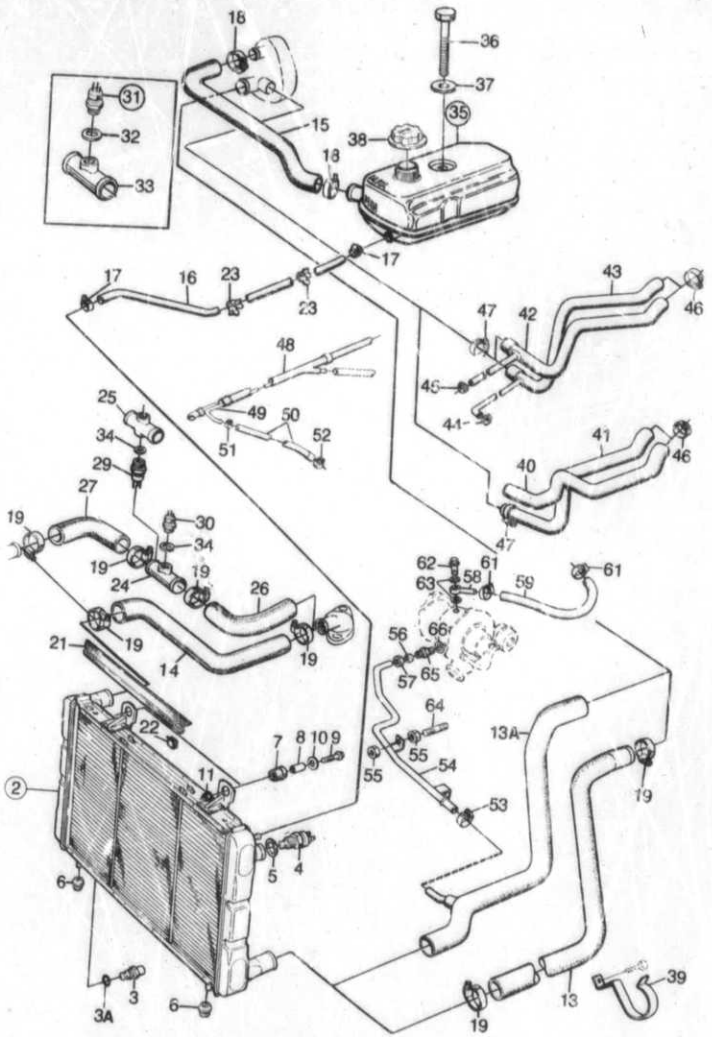


| 1550 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0490 | 35 | 75 49 876 | | 500), 1989- | 1 | Expansion tank | Expansionstank | 3 |
| 0500 | 36 | 80 84 055 | | | 1 | Screw | Skruv | |
| 0510 | 37 | 83 71 650 | | | 1 | Washer | Bricka | 5 |
| 0520 | 38 | *83 35 069* | | 45) NLS - USE 7577323 | 1 | Cover | Lock | 3 |
| 0530 | 38 | 75 77 323 | | 46) | 1 | Cover | Lock | 3 |
| 0540 | 39 | 93 44 524 | | M | 1 | Bracket | Hållare | 5 |
| 0550 | 40 | 93 24 658 | | 223), C | 1 | Hose | Slang | 3 |
| 0560 | 40 | 93 24 666 | | 223), I, US | 1 | Hose | Slang | 3 |
| 0570 | 41 | 93 24 609 | | 223), C, SE, EU, ME, FE I, US | 1 | Hose | Slang | 4 |
| 0580 | | | | | | | | |
| 0590 | 42 | 75 20 174 | | 42,223), I, SE, EU, ME, FE | 1 | Hose | Slang | 3 |
| 0600 | | | | | | | | |
| 0610 | 43 | 75 13 435 | | 223), I | 1 | Hose | Slang | 4 |
| 0630 | 43 | 75 41 527 | | 223), B201 TURBO | 1 | Hose | Slang | 4 |
| 0640 | 44 | 79 63 515 | | | 1 | Hose clamp | Slangklamma | 5 |
| 0650 | 45 | 79 70 049 | | -1988 | 1 | Hose clamp | Slangklamma | 5 |
| 0660 | 45 | 79 70 056 | | 1989- | 1 | Hose clamp | Slangklamma | 5 |
| 0670 | 46 | *79 63 556* | | NLS - USE 7970098 | 3 | Hose clamp | Slangklamma | 5 |
| 0680 | 47 | *79 63 549* | | NLS - USE 7970080 | 1 | Hose clamp | Slangklamma | 5 |
| 0690 | 48 | 75 60 360 | | TURBO, SE, EU | 1 | Hose | Slang | 4 |
| 0700 | 49 | *75 16 875* | | TURBO, SE, EU NLS - USE 8859548 | 1 | Tube | Rör | 5 |
| 0710 | 50 | 75 19 531 | | TURBO, SE, EU | 1 | Hose | Slang | 4 |
| 0720 | 51 | 79 63 515 | | TURBO, SE, EU | 1 | Hose clamp | Slangklamma | 5 |
| 0730 | 52 | 83 59 275 | | TURBO, SE, EU | 1 | Hose clamp | Slangklamma | 5 |
| 0740 | 53 | 79 70 056 | | 1988-, M | 1 | Hose clamp | Slangklamma | 5 |
| 0750 | 53 | 79 70 056 | | 1988, A | 1 | Hose clamp | Slangklamma | 5 |
| 0760 | 54 | *75 48 845* | | 1988-,112), TURBO M NLS - USE 7549918 | 1 | Tube | Rör | 5 |
| 0770 | 54 | 75 49 918 | | 113), TURBO M | 1 | Tube | Rör | 5 |
| 0780 | 54 | *75 48 852* | | 1988-,112), TURBO A NLS - USE 7549826 | 1 | Tube | Rör | 5 |
| 0790 | 54 | 75 49 926 | | 113)-1988, TURBO A | 1 | Tube | Rör | 5 |
| 0800 | 55 | 79 67 953 | | 1988-, M | 4 | Nut | Mutter | 5 |
| 0810 | 55 | 79 67 953 | | 1988, A | 4 | Nut | Mutter | 5 |
| 0820 | 56 | 81 32 227 | | 1988- | 1 | Ferrule | Skärring | 5 |
| 0830 | 57 | 81 45 542 | | 1988- | 1 | Nut | Mutter | 5 |
| 0840 | 58 | 75 88 718 | | 1988-, TURBO | 1 | Tube | Rör | 5 |
| 0850 | 59 | 75 88 122 | | 1988-, TURBO | 1 | Hose | Slang | 4 |
| 0860 | 61 | 79 63 515 | | 1988- | 2 | Hose clamp | Slangklamma | 5 |
| 0870 | 62 | 75 83 628 | | 1988- | 1 | Screw | Skruv | 5 |
| 0880 | 63 | 81 24 158 | | 1988- | 2 | Gasket | Packning | 2 |
| 0890 | 64 | 75 49 991 | | 1988-, M, (8005993) | 2 | Stud | Pinnskruv | 5 |
| 0900 | 64 | 75 99 509 | | 1988, A | 2 | Stud | Pinnskruv | 5 |
| 0910 | 65 | 75 84 790 | | 1988- | 1 | Nipple | Nippel | 5 |
| 0920 | 66 | 81 24 158 | | 1988- | 1 | Gasket | Packning | 2 |

42. EU with US specification. EU med US-specifikation.
45. Ch. -H2000403, -H3000907, -H7001509.
46. Ch. H2000404-, H3000908-, H7001510-.
112. Ch. -J3020298, -J7026676.
113. Ch. J3020299-, J7026677-.
223. For cars with by-pass valve, see SI No 854-043. För bilar med by-pass valve, se SI No 854-043.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

2 GROUP INDEX

| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-H14

## Fan, etc
## Fläkt, etc

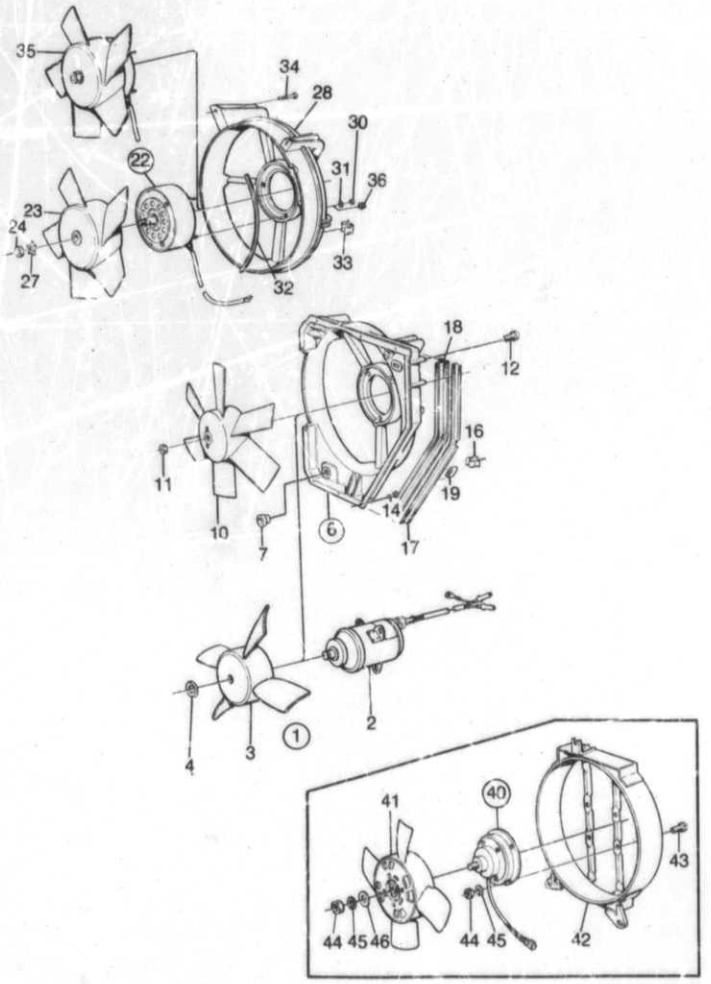


F2515 - 900

| 1560 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 42 772 | | 222,224), C, I, RH | 1 | Fan unit | Fläktenhet | 4 |
| 0020 | 2 | *75 41 717* | | 1,224) NLS - USE 7542772 | 1 | .Fan motor | .Fläktmotor | 4 |
| 0030 | 3 | 75 41 725 | | 1,224) | 1 | .Fan blade | .Fläktblad | 4 |
| 0040 | 4 | 75 41 733 | | 1,224) | 1 | .Clip | .Clips | 5 |
| 0050 | 6 | *83 19 931* | | 180), C, I, RH NLS - USE 4027777 | 1 | Fan shroud | Fläktkåpa | |
| 0060 | 6 | 40 27 777 | | 181), C, I, RH | 1 | Fan shroud | Fläktkåpa | 4 |
| 0070 | 7 | 83 84 174 | | PART OF 8319931 | 1 | .Bushing | .Bussning | 4 |
| 0080 | 10 | 85 30 896 | | | 1 | Fan unit | Fläktenhet | 4 |
| 0090 | 11 | 79 14 690 | | | 1 | Nut | Mutter | 5 |
| 0100 | 12 | 80 59 552 | | -1988 | 3 | Screw | Skruv | 5 |
| 0110 | 12 | 79 71 294 | | 1989- | 3 | Screw | Skruv | 5 |
| 0120 | 14 | 79 75 444 | | 180) | 6 | Screw | Skruv | 5 |
| 0130 | 14 | 40 27 660 | | 181) | 6 | Screw | Skruv | 5 |
| 0140 | 14 | 79 72 789 | | ME | 9 | Screw | Skruv | 5 |
| 0150 | 16 | 71 55 500 | | | 1 | Clamp | Klammer | 5 |
| 0160 | 17 | 83 37 875 | | | 1 | Strip | List | 6 |
| 0170 | 18 | 75 44 216 | | | 1 | Strip | List | 4 |
| 0180 | 19 | 93 02 787 | | | 2 | Clip | Clips | 3 |
| 0190 | 22 | 85 94 764 | | 143), TURBO | 1 | Fan unit | Fläktenhet | 4 |
| 0200 | 22 | 85 94 806 | | 145), AC | 1 | Fan motor | Fläktmotor | 4 |
| 0210 | 23 | 85 39 819 | | 143,145) | 1 | .Fan wheel | .Fläkthjul | 4 |
| 0220 | 24 | 85 46 129 | | 143,145) | 1 | .Nut | .Mutter | 5 |
| 0230 | 27 | 85 46 137 | | 143,145) | 1 | .Washer | .Bricka | 5 |
| 0240 | 28 | 83 37 859 | | 143), RH, TURBO | 1 | Fan shroud | Fläktkåpa | 4 |
| 0250 | 28 | 83 37 859 | | 143,145), LH, AC | 1 | Fan shroud | Fläktkåpa | 4 |
| 0260 | 28 | 75 48 688 | | 146), LH, C, I, AC | 1 | Fan shroud | Fläktkåpa | 4 |
| 0280 | 28 | 75 48 696 | | 144), RH, TURBO | 1 | Fan shroud | Fläktkåpa | 4 |
| 0290 | 28 | 75 48 688 | | 144), TURBO, AC | 2 | Fan shroud | Fläktkåpa | 4 |
| 0300 | 30 | 80 74 270 | | 143,145), TURBO, AC | 3 | Lock nut | Låsmutter | 3 |
| 0310 | 31 | 70 60 999 | | 143,145), TURBO, AC | 3 | Washer | Bricka | 5 |
| 0320 | 32 | 93 02 803 | | TURBO | 1 | Strip | List | 5 |
| 0330 | 33 | 71 55 500 | | 143,145), TURBO, AC | 1 | Clamp | Klammer | 5 |
| 0340 | 33 | *75 48 936* | | 144,146,194), TURBO NLS - USE 4029211 | 1 | Clamp | Klammer | 5 |
| 0345 | 33 | *75 48 936* | | 144,146,194), C, I, AC NLS - USE 4029211 | 1 | Clamp | Klammer | 5 |
| 0360 | 33 | 40 29 211 | | 195), TURBO | 1 | Clamp | Klammer | 5 |
| 0365 | 33 | 40 29 211 | | 195), C, I, AC | 1 | Clamp | Klammer | 5 |
| 0380 | 33 | *75 48 936* | | 144,146,194), TURBO, AC NLS - USE 4029211 | 2 | Clamp | Klammer | 5 |
| 0400 | 33 | 40 29 211 | | 195), TURBO, AC | 2 | Clamp | Klammer | 5 |
| 0410 | 34 | 79 75 444 | | 143,145), TURBO, AC | 3 | Screw | Skruv | 5 |
| 0420 | 34 | 79 75 444 | | 146), C, I, AC | 8 | Screw | Skruv | 5 |
| 0430 | 34 | 79 75 444 | | 144), TURBO | 2 | Screw | Skruv | 5 |
| 0440 | 34 | 79 75 444 | | 144,146), TURBO, AC | 4 | Screw | Skruv | 5 |
| 0450 | 34 | 79 72 789 | | TURBO, ME | 6 | Screw | Skruv | 5 |
| 0460 | 35 | 75 48 191 | | 144,146), TURBO | 1 | Fan unit | Fläktenhet | 4 |
| 0465 | 35 | 75 48 191 | | 144,146), C, I, AC | 1 | Fan unit | Fläktenhet | 4 |
| 0480 | 35 | 75 48 191 | | 144,146), TURBO, AC | 2 | Fan unit | Fläktenhet | 4 |

1. Not as separate spare part. Ej som separat reservdel.
143. Ch. --J3023202, --J7041972. TURBO
144. Ch. J3023203--, J7041973--. TURBO
145. Ch. --J3024974, --J7041972. AC
146. Ch. J3024975--, J7041973--. AC
180. Ch. --K3019032, --K8000838.
181. Ch. K3019033--, K8000839--.
194. Ch. --K3019692, --K7030345.
195. Ch. K3019693--, K7030346--.
222. Use together with screw 7971294. Används tillsammans med skruv 7971294.
224. Fan motor and blade are available only as factory balanced assembly. Fläktmotor och fläktblad finns endast tillgängliga som fabriksbalanserad komplettenhet.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3R | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-H16

## Fan, etc
## Fläkt, etc

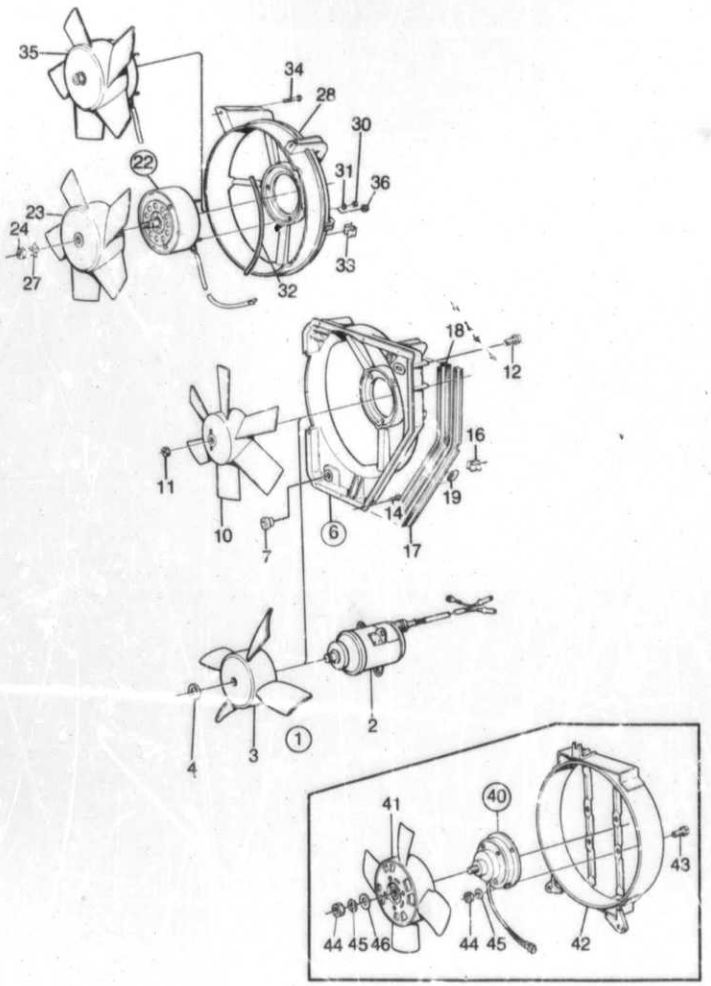


F2515 - 900

| 1560 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0490 | 36 | 79 71 658 | | 144,146,149), TURBO | 3 | Nut | Mutter | 5 |
| 0495 | 36 | 79 71 658 | | 144,146,149), C, I, AC | 3 | Nut | Mutter | 5 |
| 0510 | 36 | 79 74 298 | | 150), TURBO | 3 | Nut | Mutter | 5 |
| 0515 | 36 | 79 74 298 | | 150), C, I, AC | 3 | Nut | Mutter | 5 |
| 0530 | 36 | 79 71 658 | | 144,146,149), TURBO, AC | 6 | Nut | Mutter | 5 |
| 0550 | 36 | 79 74 298 | | 150), TURBO, AC | 6 | Nut | Mutter | 5 |
| 0560 | 40 | 88 20 235 | | 1986, AC CLARION | 1 | Fan | Fläkt | 5 |
| 0570 | 41 | 88 20 243 | | 1986, AC CLARION | 1 | .Radiator fan | .Kylarfläkt | 4 |
| 0580 | 42 | 88 20 268 | | 1986, AC CLARION | 1 | .Fan shroud | .Fläktkåpa | 6 |
| 0590 | 43 | *79 73 423* | | 1986, AC CLARION NLS - USE 7977283 | 4 | .Screw | .Skruv | 5 |
| 0600 | 44 | *80 50 593* | | 1986, AC CLARION NLS - USE 8151045 | 5 | .Nut | .Mutter | 5 |
| 0610 | 45 | 79 15 556 | | 1986, AC CLARION | 5 | .Star washer | .Tandbricka | 5 |
| 0620 | 46 | *88 20 300* | | 1986, AC CLARION NLS | 1 | .Washer | .Bricka | 5 |

144. Ch. J3023203–, J7041973–, TURBO
146. Ch. J3024975–, J7041973–, AC
149. Ch. –K3003736, – K7003246.
150. Ch. K3003737–, K7003247–,




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

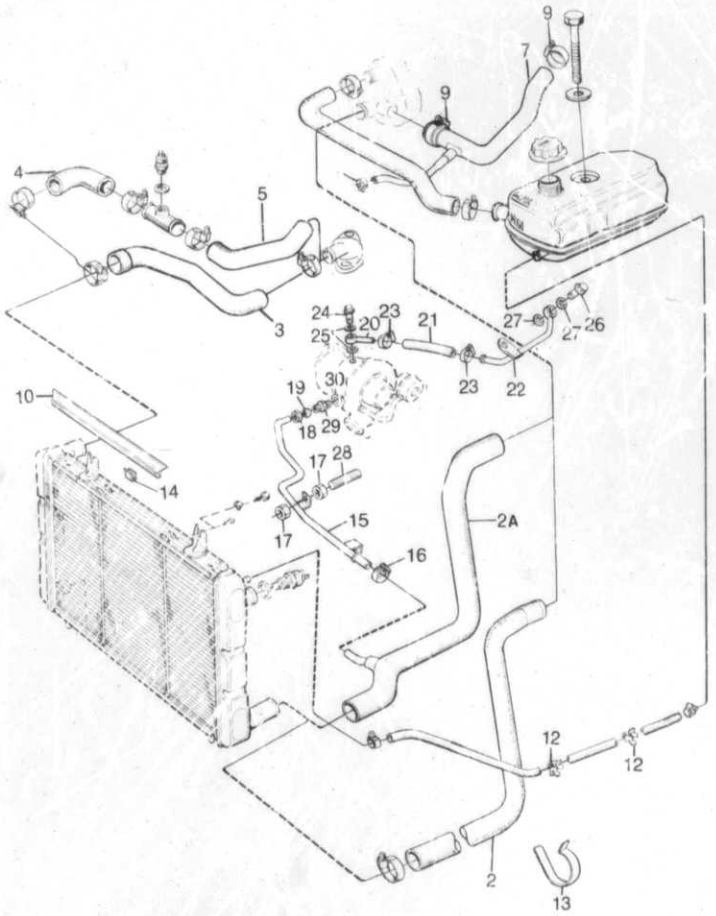


F0486 - 900

| 1575 | Pos | Part No/Art nr | K | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 2 | 75 12 817 | | -1987 | 1 | Hose | Slang | 3 |
| 0020 | 2 | 75 12 817 | | 1988-, I | 1 | Hose | Slang | 3 |
| 0030 | 2A | *75 48 837* | | 1988-, TURBO NLS - USE 4029849 | 1 | Hose | Slang | 3 |
| 0040 | 3 | 93 69 950 | | | 1 | Hose | Slang | 2 |
| 0050 | 4 | 75 46 161 | | AC | 1 | Hose | Slang | |
| 0060 | 5 | 75 46 179 | | AC | 1 | Hose | Slang | |
| 0070 | 7 | 75 41 527 | | 223) | 1 | Hose | Slang | 4 |
| 0080 | 7 | 75 13 435 | | 223), I FOR US | 1 | Hose | Slang | 4 |
| 0090 | 9 | 79 70 080 | | | 2 | Hose clamp | Slangklamma | 5 |
| 0100 | 10 | 75 41 865 | | 192) | 1 | Sealing strip | Tätningslist | 4 |
| 0110 | 10 | 40 29 013 | | 193,219) | 1 | Sealing strip | Tätningslist | 4 |
| 0120 | 10 | 41 20 069 | | 220) | 2 | Sealing strip | Tätningslist | 4 |
| 0130 | 12 | 85 36 419 | | | 1 | Clip | Clips | 5 |
| 0140 | 13 | 75 13 054 | | | 1 | Clamp | Klammer | 5 |
| 0150 | 14 | *75 41 873* | | NLS - USE 7543911 | 4 | Clamp | Klammer | 5 |
| 0160 | 15 | *75 48 845* | | 1988-,112), TURBO M NLS - USE 7549918 | 1 | Tube | Rör | 5 |
| 0170 | 15 | 75 49 918 | | 113), TURBO M | 1 | Tube | Rör | 5 |
| 0180 | 15 | *75 48 852* | | 1988-,112), TURBO A NLS - USE 7549926 | 1 | Tube | Rör | 5 |
| 0190 | 15 | 75 49 926 | | 113), TURBO A | 1 | Tube | Rör | 5 |
| 0200 | 16 | 79 70 049 | | 1988- | 1 | Hose clamp | Slangklamma | 5 |
| 0210 | 17 | 79 67 953 | | 1988- | 4 | Nut | Mutter | 5 |
| 0220 | 18 | 81 45 542 | | 1988- | 1 | Nut | Mutter | 5 |
| 0230 | 19 | 81 32 227 | | 1988- | 1 | Ferrule | Skärring | 5 |
| 0240 | 20 | 75 88 718 | | 1988-, TURBO | 1 | Tube | Rör | 5 |
| 0250 | 21 | 74 82 953 | | 1988-, TURBO | 1 | Hose | Slang | 5 |
| 0260 | 22 | 74 81 427 | | 1988-, TURBO | 1 | Water pipe | Vattenrör | 5 |
| 0270 | 23 | 79 63 515 | | 1988- | 2 | Hose clamp | Slangklamma | 5 |
| 0280 | 24 | 75 83 628 | | 1988- | 1 | Screw | Skruv | 5 |
| 0290 | 25 | 81 24 158 | | 1988- | 2 | Gasket | Packning | 2 |
| 0300 | 26 | 81 23 903 | | 1988- | 1 | Banjo screw | Banjoskruv | 5 |
| 0310 | 27 | 81 24 141 | | 1988- | 2 | Seal | Tätning | 5 |
| 0320 | 28 | 75 49 991 | | 1988-, M, (8005993) | 2 | Stud | Pinnskruv | 5 |
| 0330 | 28 | 75 99 509 | | 1988-, A | 2 | Stud | Pinnskruv | 5 |
| 0340 | 29 | 75 84 790 | | 1988- | 1 | Nipple | Nippel | 5 |
| 0350 | 30 | 81 24 158 | | 1988- | 1 | Gasket | Packning | 2 |

112. Ch. --J3020298, --J7026676.
113. Ch. J3020299--, J7026677--.
192. Ch. --K3022368, --K7030345.
193. Ch. K3022369--, K7030346--.
219. Ch. --K3023014, --K7031595.
220. Ch. K3023015--, K7031596--.
223. For cars with by-pass valve, see SI No 854-043. För bilar med by-pass valve, se SI No 854-043.




MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | ont assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

2 GROUP INDEX

| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

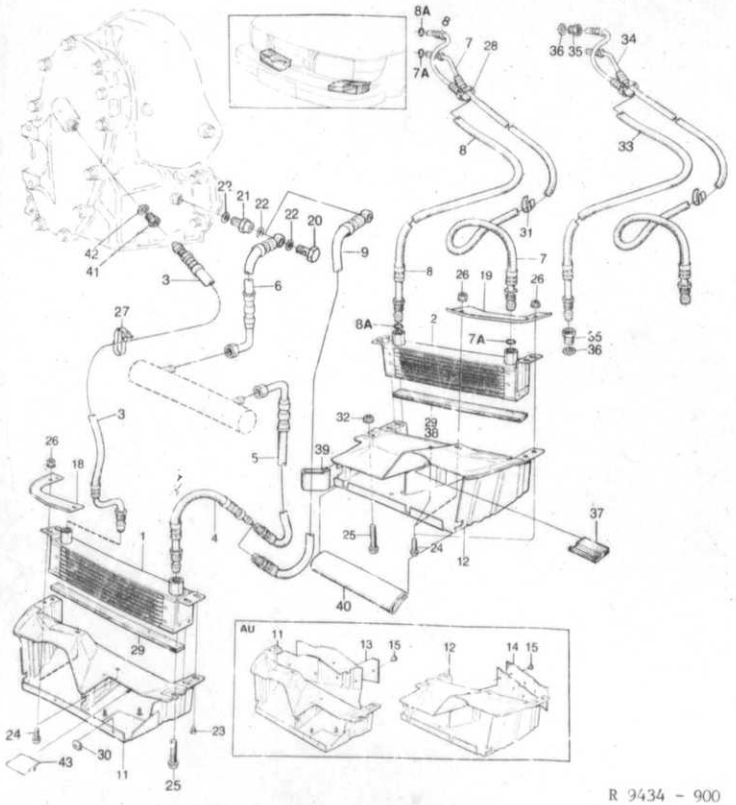


R 9434 - 900

| 1628 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 40 289 | | 51), A | 1 | Oil cooler | Oljekylare | 4 |
| 0020 | 1 | 75 46 963 | | 52), A | 1 | Oil cooler | Oljekylare | 4 |
| 0030 | 2 | 75 13 450 | | 10), ENGINE | 1 | Oil cooler | Oljekylare | 4 |
| 0040 | 2 | 75 46 567 | | 11), ENGINE | 1 | Oil cooler | Oljekylare | 4 |
| 0050 | 3 | 75 43 655 | | 1986, A | 1 | Hydraulic hose | Hydraulslang | 3 |
| 0060 | 3 | 75 47 706 | | 1987-, 51), A | 1 | Hydraulic hose | Hydraulslang | 3 |
| 0070 | 3 | *75 47 862* | | 52)-1987, A NLS - USE 7549868 | 1 | Hydraulic hose | Hydraulslang | 3 |
| 0080 | 3 | 75 49 868 | | 1988-, A | 1 | Hydraulic hose | Hydraulslang | 3 |
| 0090 | 4 | 75 43 663 | | 51), A | 1 | Hydraulic hose | Hydraulslang | 4 |
| 0100 | 4 | *75 47 847* | | 52), A NLS | 1 | Hydraulic hose | Hydraulslang | 3 |
| 0110 | 5 | 75 44 372 | | A | 1 | Hydraulic hose | Hydraulslang | 4 |
| 0120 | 6 | 75 46 385 | | A | 1 | Hydraulic hose | Hydraulslang | 4 |
| 0130 | 7 | 75 46 476 | | 11), ENGINE | 1 | Hydraulic hose | Hydraulslang | 3 |
| 0140 | 7A | 79 77 580 | | 11) | 2 | .O-ring | .O-ring | 2 |
| 0150 | 8 | 75 46 484 | | 11), ENGINE | 1 | Hydraulic hose | Hydraulslang | 3 |
| 0160 | 8A | 79 77 580 | | 11) | 2 | .O-ring | .O-ring | 2 |
| 0170 | 9 | 75 40 172 | | 51), A | 1 | Oil hose | Oljeslang | 3 |
| 0180 | 9 | 75 47 821 | | 52), A | 1 | Hydraulic hose | Hydraulslang | 3 |
| 0190 | 11 | 75 41 899 | | 1986, RH | 1 | Protecting casing | Skyddskåpa | |
| 0200 | 11 | 75 41 410 | | 1986, RH, AU | 1 | Protecting casing | Skyddskåpa | 5 |
| 0210 | 11 | 75 46 922 | | 1987-, RH | 1 | Cassette | Kassett | 5 |
| 0220 | 11 | 75 47 029 | | 1987-, RH, AU | 1 | Cassette | Kassett | 5 |
| 0230 | 12 | 75 41 881 | | 1986, LH | 1 | Protecting casing | Skyddskåpa | 5 |
| 0240 | 12 | 75 41 402 | | 1986, LH, AU | 1 | Protecting casing | Skyddskåpa | 5 |
| 0250 | 12 | 75 46 773 | | 1987-, LH | 1 | Cassette | Kassett | 5 |
| 0260 | 12 | 75 47 003 | | 1987-, LH, AU | 1 | Cassette | Kassett | 5 |
| 0270 | 13 | 75 44 448 | | PART OF 7541410, 7547029 | 1 | .Baffle | .Stänkskydd | |
| 0280 | 14 | 75 44 430 | | PART OF 7541402, 7547003 | 1 | .Baffle | .Stänkskydd | 4 |
| 0290 | 15 | *79 77 325* | | NLS - USE 8235178 | 8 | .Rivet | .Nit | 5 |
| 0300 | 18 | 75 40 313 | | A | 1 | Stiffening bar | Förstyvningsskena | 5 |
| 0310 | 19 | 75 40 305 | | ENGINE | 1 | Stiffening bar | Förstyvningsskena | 5 |
| 0320 | 20 | *93 01 532* | | NLS - USE 4374211 | 1 | Banjo screw | Banjoskruv | 5 |
| 0330 | 21 | 75 40 032 | | | 1 | Nipple | Nippel | 5 |
| 0340 | 22 | *83 26 712* | | 114) NLS - USE 4161102 | 3 | Seal | Tätning | 5 |
| 0350 | 22 | 89 81 961 | | 115) | 3 | Seal | Tätning | 5 |
| 0360 | 23 | 79 22 891 | | | 4 | Screw | Skruv | 5 |
| 0370 | 24 | 79 74 694 | | 1986 | 8 | Screw | Skruv | 5 |
| 0380 | 24 | 80 59 586 | | 1987- | 8 | Screw | Skruv | 5 |
| 0390 | 25 | 79 74 447 | | | 2 | Screw | Skruv | 5 |
| 0400 | 26 | 79 71 658 | | | 8 | Nut | Mutter | 5 |
| 0410 | 27 | 79 71 880 | | A | 3 | Tensioning band | Spännband | 4 |
| 0420 | 28 | 79 71 880 | | ENGINE | 1 | Tensioning band | Spännband | 4 |
| 0430 | 29 | 75 41 519 | | 1986 | 2 | Seal | Tätning | 4 |
| 0440 | 29 | 75 41 519 | | 1987- | 1 | Seal | Tätning | 4 |
| 0450 | 30 | 79 75 741 | | | 4 | Nut | Mutter | 5 |
| 0460 | 31 | 75 42 715 | | ENGINE | 1 | Clip | Clips | 5 |
| 0470 | 32 | 79 75 220 | | | 2 | Nut | Mutter | 5 |
| 0480 | 33 | 75 43 275 | | 10), ENGINE | 1 | Hydraulic hose | Hydraulslang | 3 |
| 0490 | 34 | 75 43 671 | | 10), ENGINE | 1 | Hydraulic hose | Hydraulslang | 3 |
| 0500 | 35 | 75 72 910 | | 10) | 2 | Nipple | Nippel | 6 |
| 0510 | 36 | 93 01 508 | | 10) | 2 | Seal | Tätning | 4 |
| 0520 | 37 | *75 46 757* | | 1986 NLS - USE 7548787 | 1 | Seal | Tätning | 4 |
| 0530 | 37 | 75 48 787 | | 1987- | 1 | Seal | Tätning | 4 |
| 0540 | 38 | 75 46 955 | | 1987- | 1 | Seal | Tätning | 4 |
| 0550 | 39 | 75 48 795 | | 1987- | 1 | Seal | Tätning | 4 |

10. Ch. -G2010830, -G3007909, -G7012542.
11. Ch. G2010831-, G3007910-, G7012543-.
51. Ch. -H2012507, -H3015247, -H7018677.
52. Ch. H2012508-, H3015248, H7018678-.
114. Ch. -J3021711, -J7030129.
115. Ch. J3021712-, J7030130-.



MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX

| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-H22

## Air oil cooler
## Engine and aut. transm.

## Luftoljekylare
## Motor och automatlåda

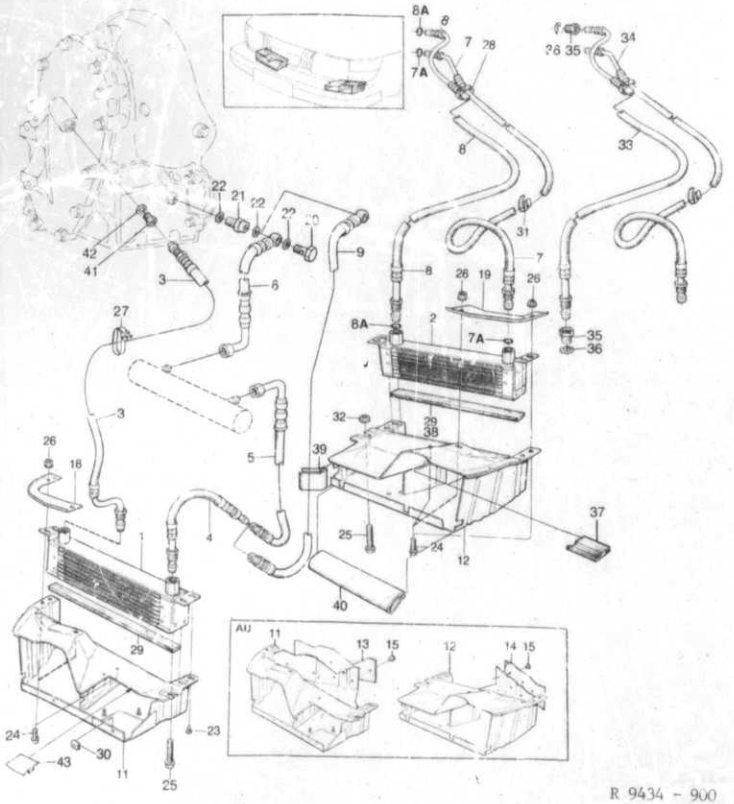


R 9434 - 900

| 1628 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0560 | 40 | 75 48 803 | | 1987- | 1 | Seal | Tätning | 4 |
| 0570 | 41 | 75 46 971 | | 52) | 1 | Nipple | Nippel | 5 |
| 0580 | 42 | 93 01 508 | | 52,-1988) | 1 | Seal | Tätning | 4 |
| 0590 | 42 | 75 99 426 | | 1989- | 1 | Seal | Tätning | 4 |
| 0600 | 43 | 75 48 787 | | 1987- | 1 | Seal | Tätning | 4 |
| 0610 | | | | | | | | |
| 0620 | | 75 40 297 | | 51), A | X | Oil cooler | Oljekylare | 4 |
| 0630 | | | | See page 4-079, 3-K08 | | | | |
| 0640 | | 93 37 270 | | ENGINE | X | Oil cooler kit | Oljekylarsats | 4 |
| 0650 | | | | See page 2-193, 1-J02 | | | | |
| 0660 | | 75 40 388 | | ENGINE, ME, FE AND B202 | X | Oil cooler | Oljekylare | 4 |
| 0670 | | | | See page 2-193, 1-J02 | | | | |
| 0680 | | *93 20 268* | | A | X | Conversion kit | Konverteringssats | 3 |
| 0690 | | | | See page 4-079, 3-K08 | | | | |
| 0690 | | | | NLS | | | | |

51. Ch. -H2012507, -H3015247, -H7018677.
52. Ch. H2012508-, H3015248, H7018678-.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-FC2 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-H24

## Thermostat, oil hoses
## B202, automatic

## Termostat, oljeslangar
## B202, automat

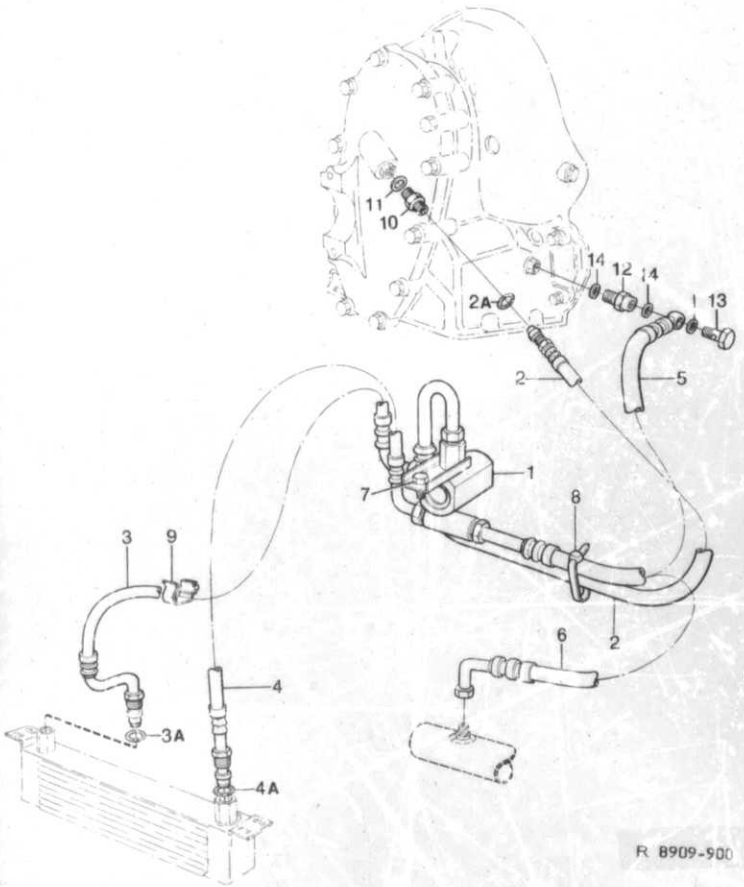


R 8909-900

| 1630 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 43 325 | | 51) | 1 | Thermostat | Termostat | 2 |
| 0020 | 1 | 75 46 930 | | 52) | 1 | Thermostat | Termostat | 2 |
| 0030 | 2 | 75 43 705 | | 51) | 1 | Hydraulic hose | Hydraulslang | 4 |
| 0040 | 2 | *75 46 849* | | 52), -1987 NLS - USE 7549850 | 1 | Hydraulic hose | Hydraulslang | 3 |
| 0040 | | | | | | | | |
| 0050 | 2 | 75 49 850 | | 1988- | 1 | Hydraulic hose | Hydraulslang | 3 |
| 0060 | 2A | 79 77 580 | | 52) | 2 | O-ring | O-ring | 2 |
| 0070 | 3 | 75 44 638 | | 1986 | 1 | Hydraulic hose | Hydraulslang | 3 |
| 0080 | 3 | 75 47 714 | | 1987-51) | 1 | Hydraulic hose | Hydraulslang | 3 |
| 0090 | 3 | 75 46 906 | | 52) | 1 | Hydraulic hose | Hydraulslang | 3 |
| 0100 | 3A | 79 77 580 | | 52) | 2 | O-ring | O-ring | 2 |
| 0110 | 4 | 75 44 620 | | 51) | 1 | Hydraulic hose | Hydraulslang | 3 |
| 0120 | 4 | 75 46 781 | | 52) | 1 | Hydraulic hose | Hydraulslang | 3 |
| 0130 | 4A | 79 77 580 | | 52) | 2 | O-ring | O-ring | 2 |
| 0140 | 5 | 75 43 739 | | 51) | 1 | Hydraulic hose | Hydraulslang | 4 |
| 0150 | 5 | 75 46 815 | | 52) | 1 | Hydraulic hose | Hydraulslang | 3 |
| 0160 | 6 | 75 44 364 | | | 1 | Hydraulic hose | Hydraulslang | 4 |
| 0170 | 7 | 79 69 223 | | | 1 | Screw | Skruv | 5 |
| 0180 | 8 | 79 71 880 | | | 2 | Tensioning band | Spännband | 4 |
| 0190 | 9 | 92 28 156 | | | 2 | Clip | Clips | 5 |
| 0200 | 10 | 75 46 371 | | 52) | 1 | Nipple | Nippel | 5 |
| 0210 | 11 | 93 01 508 | | 52,-1988) | 1 | Seal | Tätning | 4 |
| 0220 | 11 | 75 99 426 | | 1989- | 1 | Seal | Tätning | 4 |
| 0230 | 12 | 75 40 032 | | | 1 | Nipple | Nippel | 5 |
| 0240 | 13 | *93 01 532* | | NLS - USE 4374711 | 1 | Banjo screw | Banjoskruv | 5 |
| 0250 | 14 | *83 76 712* | | 114) NLS - USE 4161162 | 3 | Seal | Tätning | 5 |
| 0260 | 14 | 80 81 961 | | 115) | 3 | Seal | Tätning | 5 |

51. Ch. -H2012507, -H3015247, -H7018677.
52. Ch. H2012508-, H3015248, H7018678-.
114. Ch. -J3021711, -J7030129.
115. Ch. J3021712-, J7030130-.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B7 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-I02

## Coolant oil cooler
## Automatic transmission

## Kylvätskeoljekylare
## Automatisk växellåda

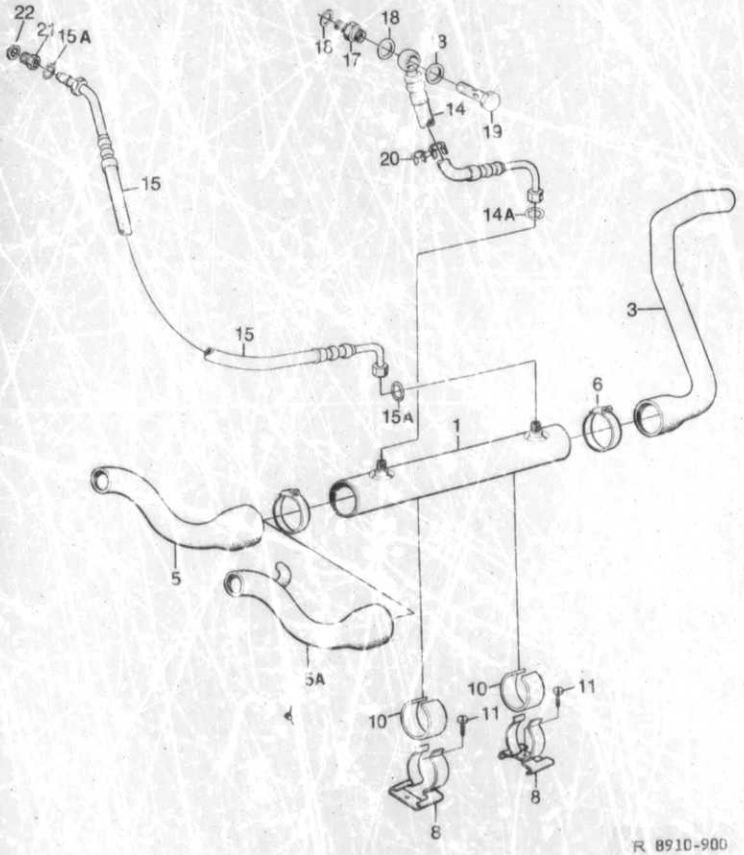


| 1650 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 93 62 997 | | 53) | 1 | Oil cooler | Oljekylare | 4 |
| 0020 | 1 | 75 47 730 | | 54) | 1 | Oil cooler | Oljekylare | 4 |
| 0030 | 3 | 93 63 615 | | | 1 | Hose | Slang | |
| 0040 | 5 | *75 46 393* | | -1987 NLS - USE 4121810 | 1 | Hose | Slang | 3 |
| 0050 | 5 | *75 46 393* | | 1988-,139), C AND I NLS - USE 4121810 | 1 | Hose | Slang | 3 |
| 0060 | 5 | *75 48 811* | | 140), C AND I NLS - USE 4121810 | 1 | Hose | Slang | 3 |
| 0070 | 5A | 75 48 829 | | 1988, TURBO | 1 | Hose | Slang | 3 |
| 0080 | 6 | 79 70 130 | S | | 2 | Hose clamp | Slangklamma | 5 |
| 0090 | 8 | 75 40 917 | | | 2 | Bracket | Hållare | 5 |
| 0100 | 10 | 93 01 383 | | | 2 | Rubber spacer | Gummimellanlägg | 4 |
| 0110 | 11 | 79 22 891 | | | 2 | Screw | Skruv | 5 |
| 0120 | 14 | 75 46 365 | | 53) | 1 | Hydraulic hose | Hydraulslang | 4 |
| 0130 | 14 | 75 47 813 | | 54) | 1 | Hydraulic hose | Hydraulslang | 3 |
| 0140 | 14A | 79 77 580 | | 54) | 2 | O-ring | O-ring | 2 |
| 0150 | 15 | 75 43 770 | | 12) | 1 | Hydraulic hose | Hydraulslang | 3 |
| 0160 | 15 | 75 47 292 | | 13,53) | 1 | Hydraulic hose | Hydraulslang | 4 |
| 0170 | 15 | 75 47 805 | | 54) | 1 | Hydraulic hose | Hydraulslang | 4 |
| 0180 | 15A | 79 77 580 | | 54) | 1 | O-ring | O-ring | 2 |
| 0190 | 17 | 75 40 032 | | | 1 | Nipple | Nippel | 5 |
| 0200 | 18 | *83 26 712* | | 114) NLS - USE 4161162 | 3 | Seal | Tätning | 5 |
| 0210 | 18 | 89 81 961 | | 115) | 3 | Seal | Tätning | 5 |
| 0220 | 19 | *93 01 532* | | NLS - USE 4374211 | 1 | Banjo screw | Banjoskruv | 5 |
| 0230 | 20 | *59 86 440* | | 77) NLS - USE 7593221 | 1 | Clamp | Klammer | 5 |
| 0240 | 20 | 75 59 768 | | 78) | 1 | Clip | Clips | 5 |
| 0250 | 21 | 75 46 971 | | 54) | 1 | Nipple | Nippel | 5 |
| 0260 | 22 | 93 01 508 | | 54,-1988) | 1 | Seal | Tätning | 4 |
| 0270 | 22 | 75 99 426 | | 1989- | 1 | Seal | Tätning | 4 |

12. Ch. -G2002513, -G3001999, -G7004266.
13. Ch. G2002514-, G3002000-, G7004267-.
53. Ch. -H2011502, -H3010155, -H7014614.
54. Ch. H2011503-, H3010156-, H7014615-.
77. Ch. -H2013749, -H3011691, -H7021652.
78. Ch. H2013750-, H3011692-, H7021653.
114. Ch. --J3021711, --J7030129.
115. Ch. J3021712-, J7030130-.
139. Ch. --J3029763, --J7035284.
140. Ch. J3029764-, J7035285-.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-I04

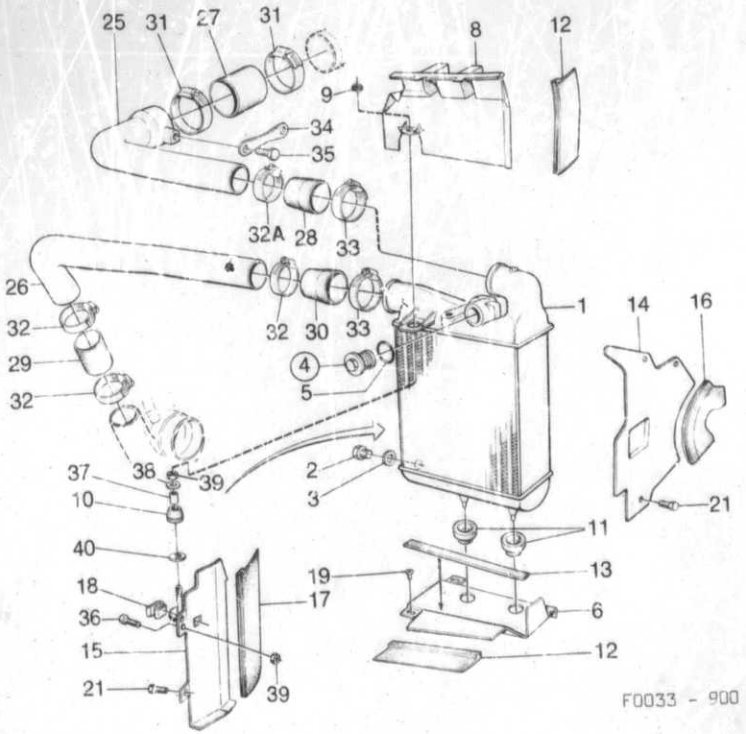


| 1660 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *75 43 887* | | 4) NLS - USE 7599418 | 1 | Radiator | Kylare | 4 |
| 0020 | 1 | 75 44 539 | | 5,178) | 1 | Radiator | Kylare | 4 |
| 0030 | 1 | 75 99 418 | | 179) | 1 | Charge air cooler | Laddluftkylare | 4 |
| 0040 | 2 | 75 40 610 | | | 1 | Plug | Plugg | 5 |
| 0050 | 3 | 75 40 628 | | | 1 | Gasket | Packning | 2 |
| 0060 | 4 | 75 50 023 | | | 1 | Valve | Ventil | 2 |
| 0070 | 5 | 79 72 797 | | | 1 | O-ring | O-ring | 2 |
| 0080 | 6 | 75 13 070 | | LOWER | 1 | Bracket | Fäste | 5 |
| 0090 | 8 | 75 44 505 | | | 1 | Bracket | Fäste | 5 |
| 0100 | 9 | 85 73 966 | | | 1 | Bushing | Bussning | 4 |
| 0110 | 10 | 75 43 762 | | | 1 | Rubber bushing | Gummibussning | 5 |
| 0120 | 11 | 75 12 593 | | | 2 | Rubber bushing | Gummibussning | 5 |
| 0130 | 12 | 75 13 096 | | | 2 | Seal | Tätning | 2 |
| 0140 | 13 | 75 13 112 | | | 1 | Seal | Tätning | 2 |
| 0150 | 14 | 75 12 676 | | 1986, OUTER | 1 | Plate | Plåt | 5 |
| 0160 | 14 | 75 47 623 | | 1987-, OUTER | 1 | Plate | Plåt | 5 |
| 0170 | 14 | 75 12 718 | | 1986, OUTER, US | 1 | Side plate | Sidoplåt | 5 |
| 0180 | 14 | 75 47 631 | | 1987-, OUTER, US | 1 | Plate | Plåt | 5 |
| 0190 | 15 | 75 43 846 | | INNER | 1 | Side plate | Sidoplåt | 5 |
| 0200 | 16 | 75 12 775 | | | 1 | Seal | Tätning | 2 |
| 0210 | 17 | 75 12 742 | | | 1 | Seal | Tätning | 2 |
| 0220 | 18 | 79 58 861 | | | 1 | Clamp | Klammer | 5 |
| 0230 | 19 | *79 72 045* | | 67) NLS - USE 7961659 | 3 | Rivet | Nit | 5 |
| 0240 | 19 | 79 61 659 | | 68,-1988) | 3 | Rivet | Nit | 5 |
| 0250 | 19 | 79 72 490 | | 1989- | 3 | Rivet | Nit | 5 |
| 0260 | 21 | 79 73 159 | | | 4 | Screw | Skruv | 5 |
| 0270 | 25 | 75 27 302 | | -1988 | 1 | Tube | Rör | 5 |
| 0280 | 25 | 89 77 787 | | 500) 1989- | 1 | Tube | Rör | 5 |
| 0290 | 26 | 75 27 310 | | -1988 | 1 | Tube | Rör | 5 |
| 0300 | 26 | 89 78 314 | | 500) 1989- | 1 | Tube | Rör | 5 |
| 0310 | 27 | 75 26 262 | | | 1 | Hose | Slang | 5 |
| 0320 | 28 | 93 87 697 | | -1988 | 1 | Hose | Slang | 5 |
| 0330 | 28 | 89 76 037 | | 500) 1989- | 1 | Hose | Slang | 5 |
| 0340 | 29 | 75 26 288 | | | 1 | Hose | Slang | 5 |
| 0350 | 30 | 75 26 841 | | | 1 | Hose | Slang | 5 |
| 0360 | 31 | 79 70 155 | | | 2 | Hose clamp | Slangklamma | 5 |
| 0370 | 32 | 79 70 130 | | | 3 | Hose clamp | Slangklamma | 5 |
| 0380 | 32A | 79 70 130 | | -1988 | 1 | Hose clamp | Slangklamma | 5 |
| 0390 | 32A | 79 70 148 | | 500) 1989- | 1 | Hose clamp | Slangklamma | 5 |
| 0400 | 33 | 79 70 148 | | | 2 | Hose clamp | Slangklamma | 5 |
| 0410 | 34 | 75 06 645 | | | 2 | Striker plate | Låsbleck | 3 |
| 0420 | 35 | 79 72 607 | | | 2 | Screw | Skruv | 5 |
| 0430 | 36 | 79 65 544 | | | 1 | Screw | Skruv | 5 |
| 0440 | 37 | 75 44 356 | | | 1 | Spacer tube | Distansrör | 5 |
| 0450 | 38 | 79 75 469 | | | 1 | Washer | Bricka | 5 |
| 0460 | 39 | 79 71 658 | | | 2 | Nut | Mutter | 5 |
| 0470 | 40 | 75 49 041 | | | 1 | Spacer washer | Distansbricka | 4 |

4. Ch. -G7000651, -G3002244.
5. Ch. G7000652-, G3002245-.
67. Ch. -H2019703.
68. Ch. H2019704-.
178. Ch. -K3019823, -K7026926.
179. Ch. K3019824-, K7026927-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

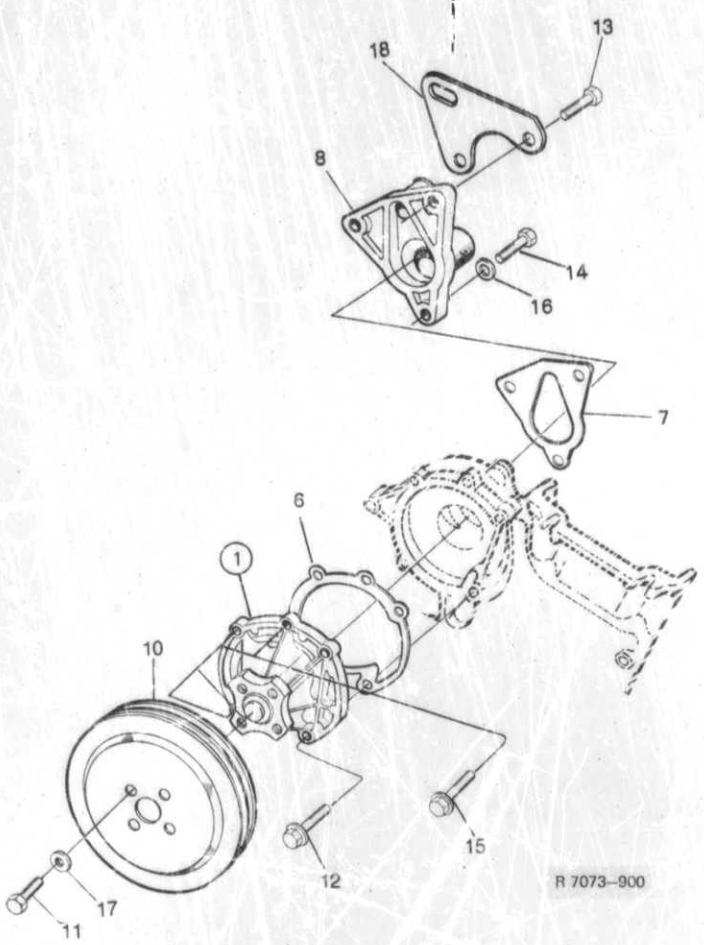


| 1700 | Pos | Part No/Art.nr | KS | Notes/Anmärkningar | Qty/Antal | Description | Benämning | SL |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 88 17 900 | | | 1 | Coolant pump | Kylvätskepump | 2 |
| 0020 | 6 | 93 53 442 | | 1986 NLS - USE 7566516 | 1 | .Gasket | .Packning | 2 |
| 0030 | 6 | 75 66 516 | | 1987- | 1 | .Gasket | .Packning | 2 |
| 0040 | 7 | 93 54 978 | | 1986 NLS - USE 7563887 | 1 | .Gasket | .Packning | 2 |
| 0050 | 7 | 75 63 687 | | 1987- | 1 | .Gasket | .Packning | 2 |
| 0060 | 8 | 93 55 181 | | | 1 | Cover | Lock | 4 |
| 0070 | 10 | 75 01 943 | | | 1 | Pulley | Remskiva | 6 |
| 0080 | 11 | 80 19 903 | | NLS - USE 9166281 | 4 | Screw | Skruv | 5 |
| 0090 | 12 | 81 25 262 | | | 2 | Screw | Skruv | 5 |
| 0100 | 13 | 80 83 941 | | | 2 | Screw | Skruv | 5 |
| 0110 | 14 | 80 83 933 | | -1988 | 1 | Screw | Skruv | 5 |
| 0120 | 14 | 80 82 976 | | 1989- NLS - USE 808 933 | 1 | Screw | Skruv | 5 |
| 0130 | 15 | 81 25 197 | | | 3 | Screw | Skruv | 5 |
| 0140 | 15 | 81 25 197 | | AC | 2 | Screw | Skruv | 5 |
| 0150 | 16 | 80 29 985 | | | 1 | Washer | Bricka | 5 |
| 0160 | 17 | 80 73 223 | | NLS - USE 9166380 | 4 | Washer | Bricka | 5 |
| 0170 | 18 | 93 13 222 | | | 1 | Brace | Bygel | 6 |




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

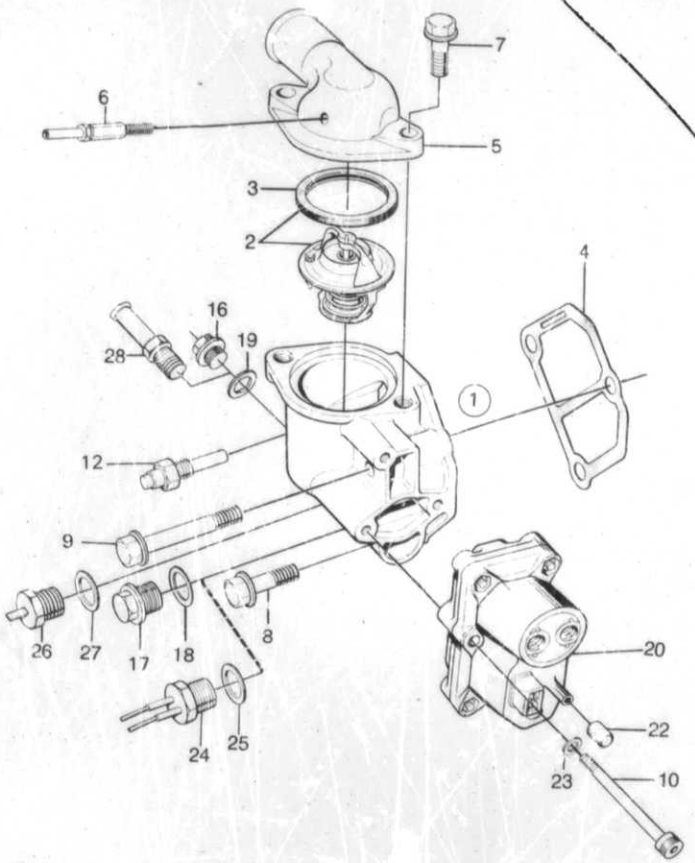


| 1750 | Pos | Part No/Art.nr | K S | Notes/Anmärkningar | Qty Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 93 11 481 | | 1986- | 1 | Thermostat housing | Termostathus | 5 |
| 0020 | 1 | 93 11 697 | | 1986, I FOR US | 1 | Thermostat housing | Termostathus | 5 |
| 0030 | 1 | 93 11 697 | | 1987- | 1 | Thermostat housing | Termostathus | 5 |
| 0040 | 1 | 93 11 697 | | 1988-, I | 1 | Thermostat housing | Termostathus | 5 |
| 0050 | 1 | 75 88 692 | | 1988-, TURBO | 1 | Thermostat housing | Termostathus | 5 |
| 0060 | 2 | 83 89 512 | | 89° C | 1 | Thermostat kit | Termostatsats | 1 |
| 0070 | 2 | 93 20 284 | | 92° C | 1 | Thermostat kit | Termostatsats | 8 |
| 0080 | | | | COLD MARKETS NOT TURBO | | | | |
| 0090 | 2 | 93 36 835 | | 82° C, ME, FE | 1 | Thermostat kit | Termostatsats | 2 |
| 0100 | 2 | 93 37 551 | | 82° C, TURBO FOR EU | 1 | Thermostat kit | Termostatsats | 1 |
| 0110 | 2 | 93 37 551 | | 82° C, US | 1 | Thermostat kit | Termostatsats | 1 |
| 0120 | 3 | 83 52 692 | S | | 1 | Gasket | Packning | 2 |
| 0130 | 4 | *75 61 202* | | 1986 NLS - USE 7566532 | 1 | Gasket | Packning | 2 |
| 0140 | 4 | 75 66 532 | | 1987- | 1 | Gasket | Packning | 2 |
| 0150 | 5 | 83 69 985 | | | 1 | Cover | Lock | 5 |
| 0160 | 6 | 93 07 497 | | | 1 | Valve | Ventil | 5 |
| 0170 | 7 | 80 82 968 | | | 2 | Screw | Skruv | 5 |
| 0180 | 8 | 81 25 205 | | | 2 | Screw | Skruv | 5 |
| 0190 | 9 | 81 25 262 | | | 1 | Screw | Skruv | 5 |
| 0200 | 10 | 93 50 661 | | | 2 | Screw | Skruv | 5 |
| 0210 | 10 | 75 16 537 | | US | 2 | Screw | Skruv | 5 |
| 0220 | 10 | 93 50 687 | | TURBO ALSO APC | 2 | Screw | Skruv | 5 |
| 0230 | 12 | *88 00 914* | | NLS - USE 9108291 | 1 | Sensor | Givare | 2 |
| 0240 | 16 | 83 48 047 | | 1986- | 1 | Plug | Propp | 5 |
| 0250 | 16 | *75 64 222* | | 1987-1988 NLS - USE 7563042 | 1 | Plug | Propp | 5 |
| 0260 | 16 | *81 23 721* | | 1989- NLS - USE 7563042 | 1 | Plug | Propp | 5 |
| 0270 | 17 | 93 10 004 | | 1986- | 1 | Plug | Propp | 5 |
| 0280 | 17 | *75 64 222* | | 1987-1988 NLS - USE 7563042 | 1 | Plug | Propp | 5 |
| 0290 | 17 | *81 23 721* | | 1989- NLS - USE 7563042 | 1 | Plug | Propp | 5 |
| 0300 | 18 | 83 15 769 | | 1986- | 1 | Gasket | Packning | 5 |
| 0310 | 19 | *83 41 849* | | 1986 NLS - USE 8124141 | 1 | Gasket | Packning | 2 |
| 0320 | 19 | 81 24 141 | | 1987- | 1 | Seal | Tätning | 5 |
| 0330 | 20 | 75 15 554 | | 132), -1988 | 1 | Regulator | Regulator | 3 |
| 0340 | 20 | 88 19 849 | | 1989-, 186, 132), I | 1 | Regulator | Regulator | 3 |
| 0350 | 20 | 91 14 877 | | 187, 132), I | 1 | Warming up regulator | Varmkörningsregulator | 3 |
| 0360 | 20 | 75 15 554 | | 132), 1989-, TURBO | 1 | Regulator | Regulator | 3 |
| 0370 | 20 | 93 51 438 | | 135), TURBO | 1 | Valve | Ventil | 3 |
| 0380 | 20 | 83 62 998 | | 120, 135), I | 1 | Regulator | Regulator | 3 |
| 0390 | 20 | 91 14 877 | | 121, 135), I | 1 | Warming up regulator | Varmkörningsregulator | 3 |
| 0400 | 22 | 93 12 042 | | TURBO FOR EU AND SE | 1 | Plug | Plugg | 5 |
| 0410 | 23 | 80 29 951 | | | 2 | Washer | Bricka | 5 |
| 0420 | 24 | 75 64 354 | | 164) | 1 | Thermo monitor | Temperaturvakt | 2 |
| 0430 | 24 | 88 57 443 | | 185) | 1 | Thermo monitor | Temperaturvakt | 2 |
| 0440 | 25 | 81 24 141 | | | 1 | Seal | Tätning | 5 |
| 0450 | 26 | 83 61 362 | | | 1 | Thermo time sensor | Termotidgivare | 3 |
| 0460 | 27 | 81 24 141 | | 1988- | 1 | Seal | Tätning | 5 |
| 0470 | 28 | 74 86 806 | | 1988- | 1 | Nipple | Nippel | 5 |

120. Ch. --J3023673, --J7032934
121. Ch. J3023674--, J7032935--
132. With catalytic converter. Med katalytisk reaktor.
135. Without catalytic converter. Utan katalytisk reaktor.
184. Engine --K083590.
185. Engine K083591--.
186. Ch. M = --K3018741, --K7022344. Ch. A = --K3019421, --K7022342.
187. Ch. M = K3018742--, K7022345--. Ch. A = K3019425-- K7022343--.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-DC2 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-H12 |
| Supercharging system | 1-H14 |
| Complete sets | 1-H20 |

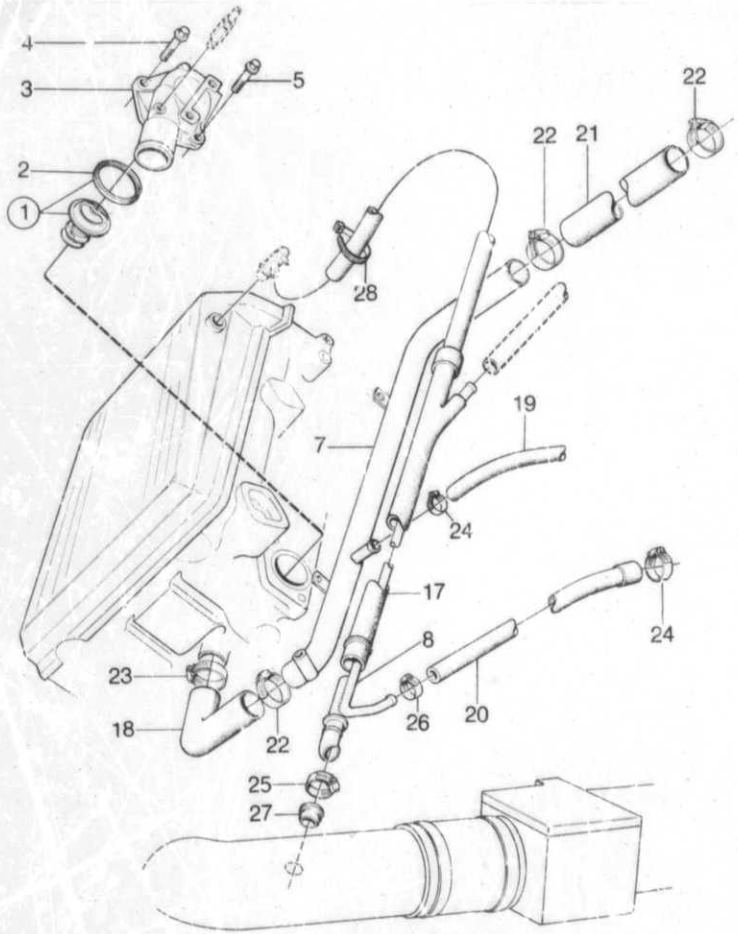


R 9719 - 900

| 1775 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 88 17 298 | | 89° C | 1 | Thermostat kit | Termostatsats | 1 |
| 0020 | 1 | 88 17 538 | | 82° C | 1 | Thermostat kit | Termostatsats | 1 |
| 0030 | 2 | 83 52 692 | | | 1 | Gasket | Packning | 2 |
| 0040 | 3 | *75 00 390* | | NLS - USE 9117516 | 1 | Cover | Lock | 5 |
| 0050 | 4 | 81 25 189 | | -1987 | 2 | Screw | Skruv | 5 |
| 0060 | 4 | 81 25 189 | | 1988-, I | 2 | Screw | Skruv | 5 |
| 0070 | 4 | 81 25 189 | | 1988-, TURBO | 1 | Screw | Skruv | 5 |
| 0080 | 5 | 81 25 197 | | 1988-, TURBO | 1 | Screw | Skruv | 5 |
| 0090 | 7 | 75 04 574 | | -1987 | 1 | Water pipe | Vattenrör | 5 |
| 0100 | 7 | 74 80 759 | | 1988- | 1 | Water pipe | Vattenrör | 5 |
| 0110 | 8 | *75 16 875* | | TURBO NLS - USE 8859548 | 1 | Tube | Rör | 5 |
| 0120 | 17 | 75 17 014 | | TURBO | 1 | Hose | Slang | 4 |
| 0130 | 17 | 75 23 913 | | I | 1 | Hose | Slang | 2 |
| 0140 | 18 | 75 04 624 | | | 1 | Hose | Slang | 5 |
| 0150 | 19 | 75 04 756 | | -1987 | 1 | Hose | Slang | 5 |
| 0160 | 19 | 74 82 953 | | 1988- | 1 | Hose | Slang | 5 |
| 0170 | 20 | 75 19 531 | | TURBO | 1 | Hose | Slang | 4 |
| 0180 | 21 | 75 45 544 | | 223) | 1 | Hose | Slang | 4 |
| 0190 | 22 | 79 70 080 | | | 3 | Hose clamp | Slangklamma | 5 |
| 0200 | 23 | 79 70 098 | | | 1 | Hose clamp | Slangklamma | 5 |
| 0210 | 24 | 79 70 056 | | TURBO | 3 | Hose clamp | Slangklamma | 5 |
| 0220 | 25 | 79 70 072 | | TURBO | 1 | Hose clamp | Slangklamma | 5 |
| 0230 | 26 | 79 70 049 | | TURBO | 1 | Hose clamp | Slangklamma | 5 |
| 0240 | 27 | 75 17 147 | | TURBO | 1 | Bushing | Bussning | 5 |
| 0250 | 23 | *18 00 259* | | NLS - USE 8153611 | 1 | Tensioning band | Spännband | 5 |

223. For cars with by-pass valve, see SI No 854-043. För bilar med by-pass valve, se Si No 854-043.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-I12

## Accelerator control
## Gasreglage

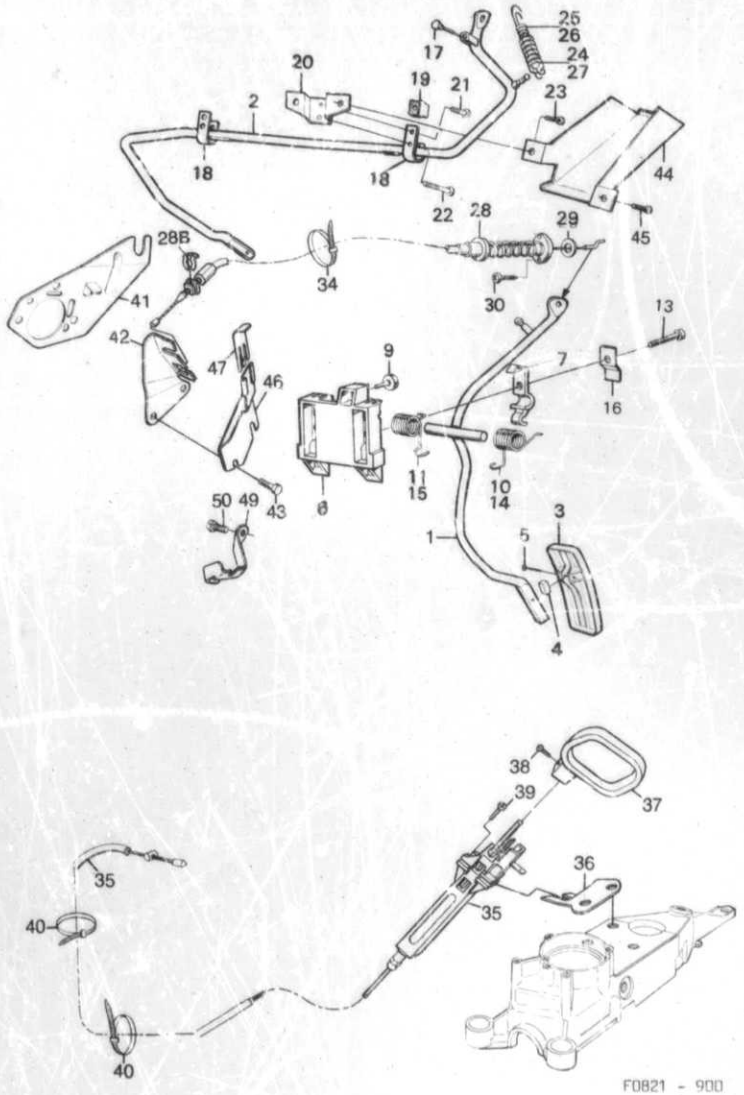


| 1800 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 89 90 913 | | | 1 | Accelerator arm | Gaspedalarm | 6 |
| 0020 | 2 | 89 86 192 | | RHD | 1 | Accelerator arm | Gaspedalarm | 6 |
| 0030 | 3 | 71 83 965 | | | 1 | Pedal plate | Pedalplatta | 5 |
| 0040 | 4 | 71 83 973 | | | 1 | Spacer | Mellanlägg | 6 |
| 0050 | 5 | 79 58 770 | | | 1 | Rivet | Nit | 5 |
| 0060 | 6 | 89 35 389 | | | 1 | Bracket | Konsol | 6 |
| 0070 | 7 | 89 35 397 | | | 2 | Cap | Överfall | 6 |
| 0080 | 9 | 82 06 203 | | | 1 | Plug | Plugg | 5 |
| 0090 | 10 | 89 41 601 | | M | 1 | Spring | Fjäder | |
| 0100 | 11 | 89 41 619 | | M | 1 | Spring | Fjäder | 5 |
| 0110 | 13 | 80 97 933 | | | 2 | Screw | Skruv | 5 |
| 0120 | 14 | 89 39 480 | | A | 1 | Spring | Fjäder | 5 |
| 0130 | 15 | 89 39 498 | | A | 1 | Spring | Fjäder | 5 |
| 0140 | 16 | 89 40 587 | | | 2 | Brace | Bygel | 6 |
| 0150 | 17 | 70 35 801 | | RHD | 1 | Buffer | Buffert | 3 |
| 0160 | 18 | *89 41 528* | | RHD NLS | 2 | Brace | Bygel | 6 |
| 0170 | 19 | 89 41 536 | | RHD | 2 | Lug | Klack | 6 |
| 0180 | 20 | *89 41 155* | | RHD NLS | 1 | Bracket | Fäste | 6 |
| 0190 | 21 | 79 22 891 | | RHD | 2 | Screw | Skruv | 5 |
| 0200 | 22 | 79 22 933 | | RHD | 2 | Screw | Skruv | 5 |
| 0210 | 23 | 80 59 552 | | RHD | 2 | Screw | Skruv | 5 |
| 0220 | 24 | 89 41 544 | | RHD, M | 1 | Spring | Fjäder | 5 |
| 0230 | 25 | *89 41 551* | | RHD, M NLS | 1 | Spring | Fjäder | 5 |
| 0240 | 26 | *89 41 569* | | RHD, A NLS | 1 | Spring | Fjäder | 5 |
| 0250 | 27 | *89 41 577* | | RHD, A NLS | 1 | Spring | Fjäder | 5 |
| 0260 | 28 | *75 25 686* | | 1986, M NLS - USE 7533102 | 1 | Cable | Kabel | 3 |
| 0270 | 28 | 75 33 102 | | 1987-, M | 1 | Cable | Kabel | 3 |
| 0280 | 28 | 75 37 525 | | 1987-, A | 1 | Cable | Kabel | 3 |
| 0290 | 28 | *75 25 694* | | 1986, A AND TURBO A NLS - USE 7533110 | 1 | Cable | Kabel | 3 |
| 0300 | 28 | 75 33 110 | | 1987-, A | 1 | Cable | Kabel | 3 |
| 0310 | 28B | 75 26 973 | | 1986- | 1 | Ring | Ring | 5 |
| 0320 | 28B | 75 33 136 | | 1987- | 1 | Lock ring | Säkringsring | 5 |
| 0330 | | 93 16 142 | | | 1 | Seal | Tätning | 6 |
| 0340 | 30 | 79 22 438 | | | 2 | Screw | Skruv | 5 |
| 0350 | 34 | 79 71 864 | | I | 1 | Tensioning band | Spännband | 5 |
| 0360 | 35 | 93 [illegible] 812 | | 1986 NLS - USE 7537269 | 1 | Choke control | Chokereglage | 3 |
| 0370 | 35 | 75 37 [illegible] | | 1987-1988 | 1 | Choke control | Chokereglage | 3 |
| 0380 | 35 | 75 37 269 | | 1989- | 1 | Choke control | Chokereglage | 3 |
| 0390 | 36 | 93 48 004 | | | 1 | Stay | Stag | 6 |
| 0400 | 37 | 93 47 956 | | | 1 | Handle | Handtag | |
| 0410 | 38 | 79 73 589 | | | 1 | Screw | Skruv | 5 |
| 0420 | 39 | 79 22 818 | | | 1 | Screw | Skruv | 5 |
| 0430 | 40 | 79 71 880 | | C | 2 | Tensioning band | Spännband | 4 |
| 0440 | 41 | 75 06 934 | | | 1 | Bracket | Hållare | 6 |
| 0450 | 42 | 75 20 349 | | I | 1 | Bracket | Fäste | 6 |
| 0460 | 43 | *80 19 903* | | NLS - USE 9186281 | 2 | Screw | Skruv | 5 |
| 0470 | 44 | 89 43 391 | | RHD | 1 | Plate | Plåt | 6 |
| 0480 | 45 | 79 22 420 | | | 1 | Screw | Skruv | 5 |
| 0490 | 46 | 75 21 123 | | | 1 | Bracket | Konsol | 5 |
| 0500 | 47 | | | See page 4-019, 3-H20 | | Plate | Platta | |
| 0510 | 49 | 75 21 370 | | 36), CA | 1 | Bracket | Fäste | 6 |
| 0520 | 49 | 79 81 432 | | 37), CA | 1 | Bracket | Fäste | 6 |
| 0530 | 50 | 80 97 875 | | CA | 2 | Screw | Skruv | 5 |

36. For cars with SOLEX carburetor. För bilar med SOLEX-förgasare.
37. For cars with PIERBURG carburetor. För bilar med PIERBURG-förgasare




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

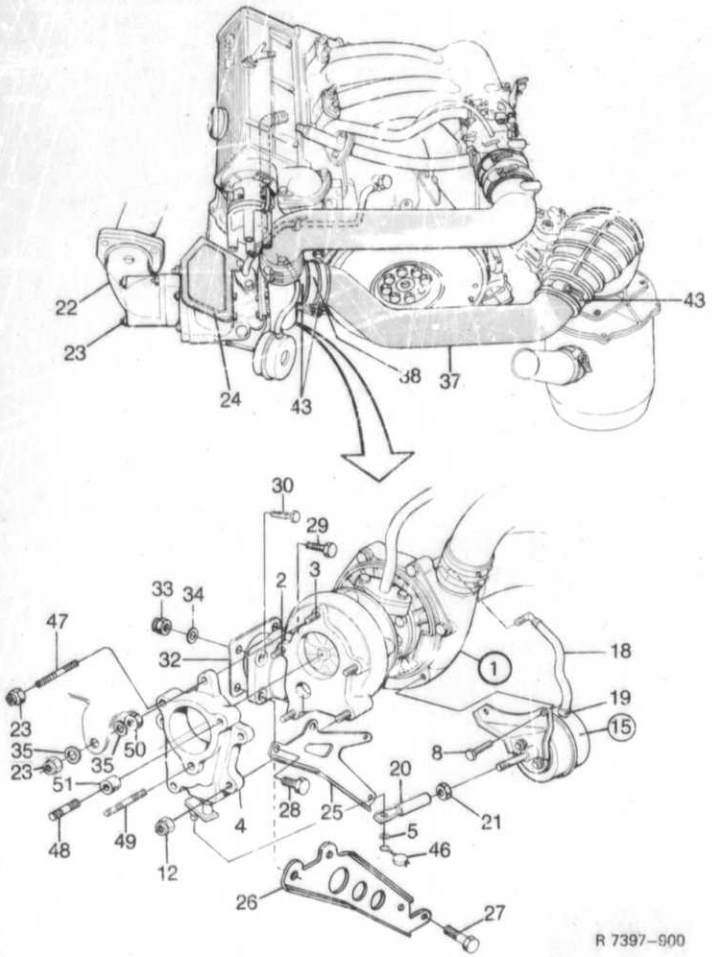


R 7397–900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | 75 24 200 | | 700), 1987- | 1 | Turbo unit | Turboaggregat | 4 |
| 1 | 75 67 589 | | 700), 1988- | 1 | Turbo unit | Turboaggregat | 4 |
| 2 | 75 65 665 | | | 1 | .Stud | .Pinnskruv | 5 |
| 3 | 75 55 716 | | | 1 | .Stud | .Pinnskruv | 5 |
| 4 | 93 56 304 | | | 1 | .Throttle body | .Spjällhus | 4 |
| 5 | 93 50 505 | | | 1 | .E-circlip | .Spårryttare | 2 |
| 8 | 93 50 471 | | | 6 | .Screw | .Skruv | 5 |
| 12 | 75 19 432 | | | 4 | .Nut | .Mutter | 5 |
| 15 | 93 56 312 | | | 1 | .Pressure regulator | .Tryckregulator | 4 |
| 18 | 93 50 372 | | | 1 | .Hose | .Slang | 3 |
| 19 | 93 50 380 | | | 2 | .Clamp | .Klammer | 5 |
| 20 | 93 56 338 | | | 1 | .End piece | .Ändstycke | 3 |
| 21 | 93 50 570 | | | 1 | .Nut | .Mutter | 5 |
| 22 | 75 17 378 | | | 1 | Flange coupling | Flänskoppling | 4 |
| 23 | 75 19 432 | | | 4 | Nut | Mutter | 5 |
| 24 | 93 14 048 | | | 1 | Heat shield | Strålningsskydd | 5 |
| 25 | 75 13 674 | | A | 1 | Stay | Stag | 5 |
| 26 | 75 13 682 | | M | 1 | Stay | Stag | 5 |
| 27 | 80 83 933 | | -1988, A | 2 | Screw | Skruv | 5 |
| 27 | *80 82 976* | | 1989-, A NLS - USE 8083933 | 2 | Screw | Skruv | 5 |
| 27 | 80 83 941 | | M | 2 | Screw | Skruv | 5 |
| 28 | *80 84 147* | | -1988 NLS - USE 7979156 | 2 | Screw | Skruv | 5 |
| 28 | 7 79 156 | | 1989- | 2 | Screw | Skruv | 5 |
| 29 | *80 84 154* | | -1988 NLS - USE 8148769 | 1 | Screw | Skruv | 5 |
| 29 | 81 48 769 | | 1989- | 1 | Screw | Skruv | 5 |
| 30 | *80 84 139* | | -1988 NLS - USE 7979156 | 1 | Screw | Skruv | 5 |
| 30 | 81 48 744 | | 1989- | 1 | Screw | Skruv | 5 |
| 32 | 83 66 262 | | | 1 | Gasket | Packning | 2 |
| 33 | 75 19 291 | | | 4 | Nut | Mutter | 5 |
| 34 | 80 73 108 | | | 4 | Washer | Bricka | 5 |
| 35 | 80 29 985 | | | 2 | Washer | Bricka | 5 |
| 37 | 75 32 120 | | | 1 | Intake manifold | Inloppsrör | 5 |
| 38 | 75 29 027 | | | 1 | Hose | Slang | 5 |
| 43 | 79 70 148 | | | 3 | Hose clamp | Slangklamma | 5 |
| 46 | 93 01 706 | | 1986- | X | Sealing | Plombering | 2 |
| | | | See page 2-187, 1-I20 | | | | |
| 46 | 88 18 569 | | 1987- | X | Sealing kit | Plomberingssats | 2 |
| | | | See page 2-187, 1-I20 | | | | |
| 47 | 75 20 216 | | | 1 | Screw | Skruv | 5 |
| 48 | 75 20 190 | | | 1 | Stud | Pinnskruv | 5 |
| 49 | 75 20 208 | | | 1 | Screw | Skruv | 5 |
| 50 | *80 73 942* | | -1987 NLS - USE 8151060 | 1 | Nut | Mutter | 5 |
| 50 | 81 51 060 | | 1988- | 1 | Nut | Mutter | 5 |
| 51 | 83 67 864 | | | 1 | Sleeve | Hylsa | 4 |
| | 88 17 264 | | | X | Gasket kit | Packningsats | 2 |

700. Also available as exchange unit. Finns även som utbytesenhet.



MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

Supercharging system

# 1-I16 Turbocharger B202

Överladdningssystem

**Turbokompressor B202**

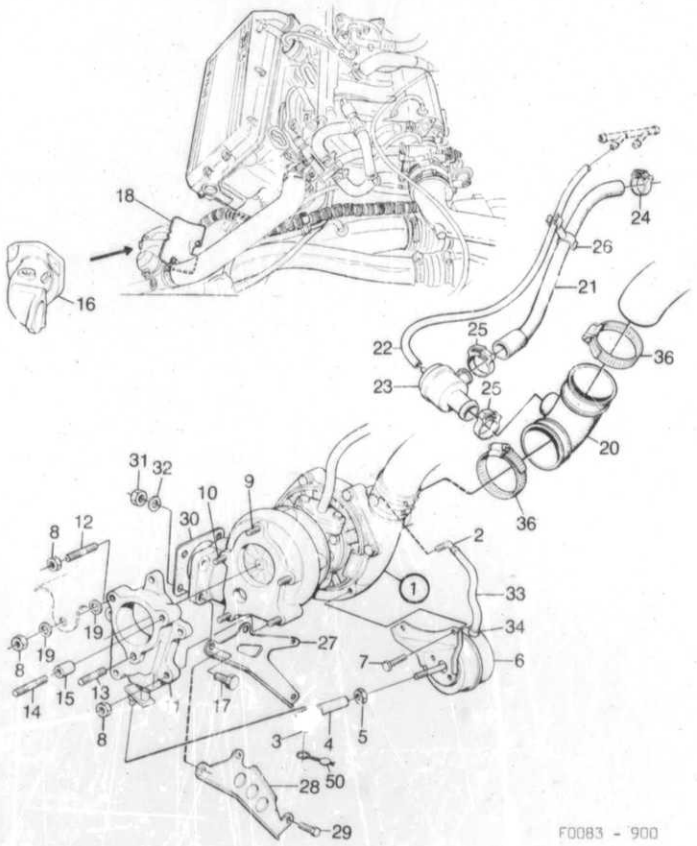


F0083 - 900

| 1860 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *75 09 953* | | 700), -1987 NLS - USE 7521404 | 1 | Turbo unit | Turboaggregat | 4 |
| 0020 | 1 | *75 67 746* | | 700), 1988 NLS - USE 7567761 | 1 | Turbo unit | Turboaggregat | 4 |
| 0030 | 1 | *74 86 020* | | 700), 1989- NLS - USE 7486038 | 1 | Turbo unit | Turboaggregat | 4 |
| 0040 | 1 | 75 21 404 | | 132,700), -1987 | 1 | Turbo unit | Turboaggregat | 4 |
| 0050 | 1 | 75 67 761 | | 132,700), 1988 | 1 | Turbo unit | Turboaggregat | 4 |
| 0060 | 1 | 74 86 038 | | 132,500,700), 1989 | 1 | Turbocharger | Turbokompressor | 4 |
| 0070 | 2 | 75 65 708 | | | 1 | .Nipple | .Nippel | 3 |
| 0080 | 3 | 93 50 505 | | | 1 | .E-circlip | .Spårryttare | 2 |
| 0090 | 4 | 93 56 338 | | | 1 | .End piece | .Ändstycke | 3 |
| 0100 | 5 | 93 50 570 | | | 1 | .Nut | .Mutter | 5 |
| 0110 | 6 | 93 56 312 | | | 1 | .Pressure regulator | .Tryckregulator | 4 |
| 0115 | 6 | 93 21 720 | | PART OF 7486038 | 1 | .Pressure regulator | .Tryckregulator | 4 |
| 0120 | 7 | 93 50 471 | | | 6 | .Screw | .Skruv | 5 |
| 0130 | 8 | 75 19 432 | | | 8 | .Nut | .Mutter | 5 |
| 0140 | 9 | 75 65 716 | | | 1 | .Stud | .Pinnskruv | 5 |
| 0150 | 10 | 75 65 658 | | | 4 | .Stud | .Pinnskruv | 5 |
| 0160 | 11 | 75 95 724 | | | 1 | .Cover | .Lock | 4 |
| 0170 | 12 | 75 20 216 | | | 1 | Screw | Skruv | 5 |
| 0180 | 13 | 75 20 208 | | | 1 | Screw | Skruv | 5 |
| 0190 | 14 | 75 20 190 | | | 1 | Stud | Pinnskruv | 5 |
| 0200 | 15 | 83 67 864 | | | 2 | Sleeve | Hylsa | 4 |
| 0210 | 16 | 75 17 378 | | | 1 | Flange coupling | Flänskoppling | 4 |
| 0220 | 16 | 75 24 168 | | US | 1 | Flange coupling | Flänskoppling | 4 |
| 0230 | 17 | *80 84 139* | | -1988 NLS - USE 7979156 | 4 | Screw | Skruv | 5 |
| 0240 | 17 | 81 48 744 | | 1989- | 4 | Screw | Skruv | 5 |
| 0250 | 18 | 75 17 089 | | | 1 | Heat shield | Strålningsskydd | 5 |
| 0260 | 19 | 80 29 985 | | | 2 | Washer | Bricka | 5 |
| 0270 | 20 | 75 23 995 | | | 1 | Hose | Slang | 5 |
| 0280 | 21 | 75 33 185 | | | 1 | Hose | Slang | 5 |
| 0290 | 22 | 91 36 243 | | 168), L=790 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0300 | 22 | 91 36 243 | | 169), L=670 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0310 | 23 | *93 90 022* | | NLS - USE 4391157 | 1 | Valve | Ventil | 2 |
| 0320 | 24 | 79 70 064 | | | 1 | Hose clamp | Slangklamma | 5 |
| 0330 | 25 | *79 77 234* | | NLS - USE 7970098 | 2 | Hose clamp | Slangklamma | 5 |
| 0340 | 26 | 73 98 233 | | | 1 | Clamp | Klammer | 5 |
| 0350 | 27 | 75 13 674 | | A | 1 | Stay | Stag | 5 |
| 0360 | 28 | 75 13 682 | | M | 1 | Stay | Stag | |
| 0370 | 29 | 80 83 933 | | -1988, A | 2 | Screw | Skruv | 5 |
| 0380 | 29 | *80 82 976* | | 1989-, A NLS - USE 8083933 | 2 | Screw | Skruv | 5 |
| 0390 | 29 | 80 83 941 | | M | 2 | Screw | Skruv | 5 |
| 0400 | 30 | 83 66 262 | | | 1 | Gasket | Packning | 2 |
| 0410 | 31 | 75 19 291 | | | 4 | Nut | Mutter | 5 |
| 0420 | 32 | 80 73 108 | | | 4 | Washer | Bricka | 5 |
| 0430 | 33 | 93 50 372 | | | 1 | Hose | Slang | 3 |
| 0440 | 34 | 93 50 380 | | | 2 | Clamp | Klammer | 5 |
| 0450 | 36 | 79 70 148 | | | 2 | Hose clamp | Slangklamma | 5 |
| 0460 | | | | | | | | |
| 0470 | 50 | 93 01 706 | | 1986 | 1 | Sealing | Plombering | 2 |
| 0480 | | | | See page 2-187, 1-I20 | | | | |
| 0490 | 50 | 88 18 569 | | 1987- | X | Sealing kit | Plomberingssats | 2 |
| 0500 | | | | See page 2-187, 1-I20 | | | | |
| 0510 | | | | | | | | |
| 0520 | | 91 36 243 | | L=5000 MM | X | Vaccum hose | Vakuumslang | 5 |

132. With catalytic converter. Med katalytisk reaktor.
168. Ch. --K3007351, --K7009042.
169. Ch. K3007352-, K7009043-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.
700. Also available as exchange unit. Finns även som utbytesenhet.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-I18

## APC system
## APC-system

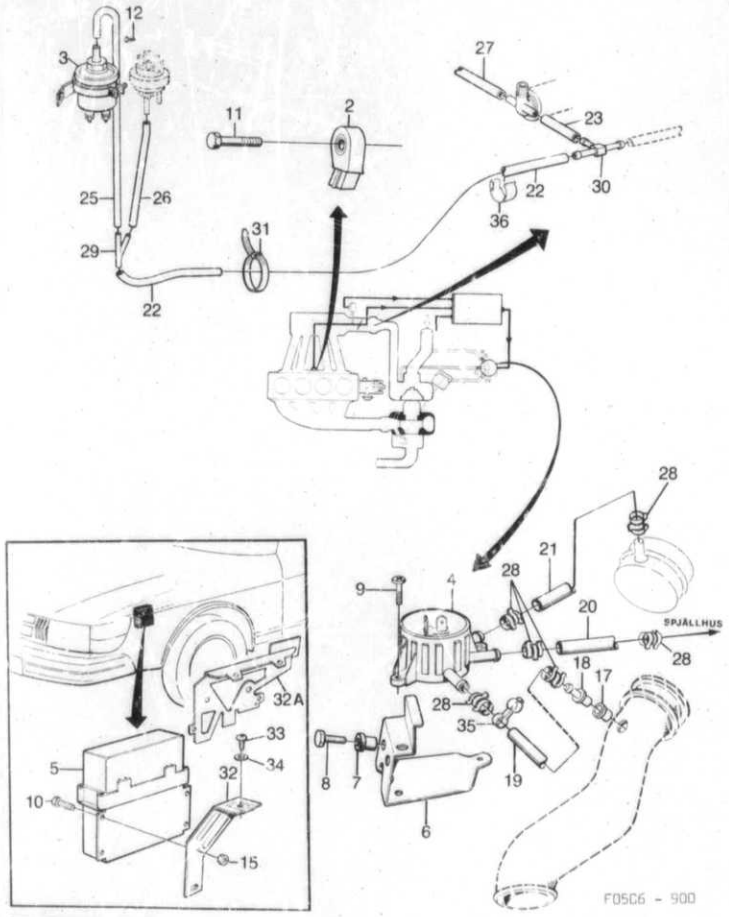


| 1900 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 2 | *93 58 037* | | 1986 NLS - USE 7568801, 8125197 | 1 | Knock sensor | Knacksensor | 3 |
| 0020 | 2 | 75 68 801 | | 1987- | 1 | Knock sensor | Knacksensor | 3 |
| 0030 | 3 | 93 42 064 | | | 1 | Pressure sensor | Tryckgivare | 3 |
| 0040 | 4 | 75 17 477 | | | 1 | Solenoid valve | Magnetventil | 3 |
| 0050 | 5 | 75 24 119 | | | 1 | Control device | Styrdon | 3 |
| 0060 | 5 | 75 67 704 | | 132), 1987-, B201 TURBO | 1 | Control device | Styrdon | 3 |
| 0080 | 5 | 75 24 127 | | B202 TURBO | 1 | Electronic unit | Elektronikenhet | 3 |
| 0090 | 5 | 75 24 135 | | 1986, B202 TURBO, US | 1 | Control device | Styrdon | 3 |
| 0100 | 5 | 75 66 599 | | 1987-, B202 TURBO, US | 1 | Electronic unit | Elektronikenhet | 3 |
| 0110 | 5 | 75 24 127 | | 1987-, ABSU, US, C | 1 | Electronic unit | Elektronikenhet | 3 |
| 0115 | 5 | 91 19 330 | | 1987-, BE, 157 HP(1[illegible]KW) | 1 | Electronic unit | Elektronikenhet | 3 |
| 0120 | 6 | 93 42 239 | | | 1 | Bracket | Konsol | 5 |
| 0130 | 7 | 79 73 456 | | | 2 | Expanding nut | Expandermutter | 5 |
| 0140 | 8 | 80 19 721 | | | 2 | Screw | Skruv | 5 |
| 0150 | 9 | 79 22 800 | | | 2 | Screw | Skruv | 5 |
| 0160 | 10 | 80 19 713 | | | 4 | Screw | Skruv | 5 |
| 0170 | 11 | 75 62 168 | | 1986 | 1 | Screw | Skruv | 5 |
| 0180 | 11 | 81 25 197 | | 1987- | 1 | Screw | Skruv | 5 |
| 0190 | 12 | 79 [illegible]2 359 | | | 2 | Screw | Skruv | 5 |
| 0200 | 15 | 79 73 365 | | | 4 | Nut | Mutter | 5 |
| 0210 | 17 | 83 25 656 | | | 1 | Bushing | Bussning | 4 |
| 0220 | 18 | *93 42 270* | | NLS - USE 4[illegible]0263 | 1 | Nipple | Nippel | 3 |
| 0230 | 19 | 75 25 777 | | | 1 | Hose | Slang | 3 |
| 0240 | 20 | 93 88 752 | | | 1 | Hose | Slang | 3 |
| 0250 | 20 | 75 10 266 | | B202 | 1 | Hose | Slang | 3 |
| 0260 | 21 | 93 42 619 | | | 1 | Hose | Slang | 3 |
| 0270 | 22 | 91 36 243 | | L=1160 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0280 | 22 | 91 36 243 | | B202, L=500 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0290 | 23 | 91 36 243 | | L=30 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0300 | 25 | 83 27 850 | | 41) | 1 | Hose | Slang | 5 |
| 0310 | 26 | 91 36 243 | | L=90 MM | 2 | Vaccum hose | Vakuumslang | 5 |
| 0320 | 27 | 91 36 243 | | L=1670 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0330 | 28 | 79 73 522 | | | 6 | Hose clamp | Slangklamma | 5 |
| 0340 | 29 | 85 09 002 | | | 1 | Tube | Rör | 2 |
| 0350 | 30 | 83 66 791 | | | 1 | Pipe | Rör | 4 |
| 0360 | 31 | 79 71 880 | | | 2 | Tensioning band | Spännband | 4 |
| 0370 | 32 | 75 25 744 | | | 2 | Bracket | Konsol | 6 |
| 0380 | 32A | | | ABS | 1 | Bracket | Fäste | |
| 0390 | | | | See page 3A-083, 2-D12 | | | | |
| 0400 | 33 | 80 59 396 | | | 2 | Screw | Skruv | 5 |
| 0410 | 34 | 80 29 944 | | | 2 | Washer | Bricka | 5 |
| 0420 | 35 | 73 98 399 | | | 1 | Clamp | Klammer | 5 |
| 0430 | 36 | 79 33 443 | | 1989- | 2 | Clip | Clips | 5 |
| 0440 | | | | | | | | |
| 0450 | | 91 36 243 | | L=5000 MM | X | Vaccum hose | Vakuumslang | 5 |

41. Ch. -G3013990, -G7020820.
132. With catalytic converter. Med katalytisk reaktor.




MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

2 GROUP INDEX

| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

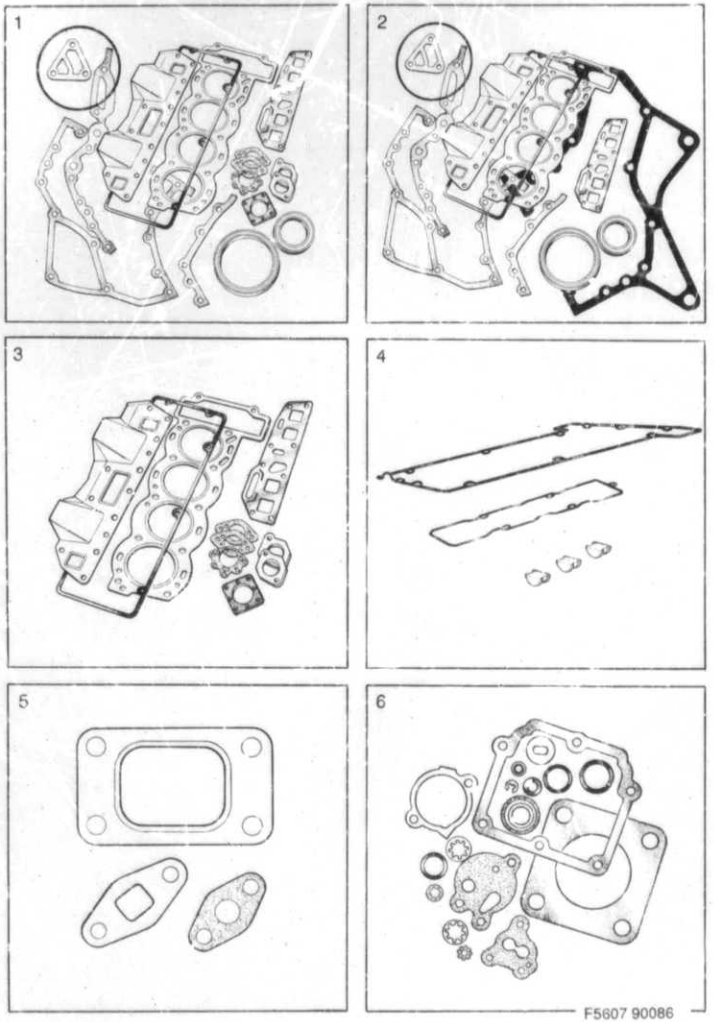


| 2500 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 93 37 213 | | C, T | X | Gasket kit | Packningssats | 3 |
| 0020 | | 75 85 037 | | | 1 | .Gasket | .Packning | 2 |
| 0030 | | 93 55 991 | | | 1 | .Gasket | .Packning | 1 |
| 0040 | | 75 89 039 | | | 1 | .Gasket | .Packning | 2 |
| 0050 | | *93 50 158* | | NLS - USE 8787764 | 1 | .Seal | .Tätning | 2 |
| 0060 | | 93 09 204 | | | 1 | .Seal | .Tätning | 2 |
| 0070 | | *75 63 646* | | NLS - USE 9321795 | 1 | .Gasket | .Packning | 2 |
| 0080 | | *91 17 839* | | NLS - USE 9321795 | 1 | .Gasket | .Packning | 2 |
| 0090 | | 75 69 346 | | | 1 | .Gasket | .Packning | 2 |
| 0100 | | 75 61 772 | | | 1 | .Gasket | .Packning | 2 |
| 0110 | | 75 66 433 | | | 1 | .Gasket | .Packning | 4 |
| 0120 | | *83 69 829* | | NLS - USE 9125824 | 1 | .Seal | .Tätning | 3 |
| 0130 | | 75 88 981 | | | 1 | .Gasket | .Packning | 4 |
| 0140 | | 75 88 916 | | T | 2 | .Gasket | .Packning | 4 |
| 0150 | | 83 74 639 | | C | 1 | .Gasket | .Packning | 4 |
| 0160 | | 83 36 877 | | T | 2 | .Gasket | .Packning | 4 |
| 0170 | | | | | | | | |
| 0180 | 2 | 93 37 221 | | B201TURBO, B201I | X | Gasket kit | Packningsats | 3 |
| 0190 | | 75 85 037 | | | 1 | .Gasket | .Packning | 2 |
| 0200 | | 93 55 991 | | (9306911) | 1 | .Gasket | .Packning | 1 |
| 0210 | | 75 89 039 | | | 1 | .Gasket | .Packning | 2 |
| 0220 | | *93 50 158* | | NLS - USE 8787764 | 1 | .Seal | .Tätning | 2 |
| 0230 | | 93 09 204 | | | 1 | .Seal | .Tätning | 2 |
| 0240 | | *75 63 653* | | (7509375) NLS - USE 9321795 | 1 | .Gasket | .Packning | 2 |
| 0250 | | *91 17 839* | | NLS - USE 9321795 | 1 | .Gasket | .Packning | 2 |
| 0255 | | *91 17 847* | | NLS - USE 9321795 | 1 | .Gasket | .Packning | 2 |
| 0260 | | 75 82 315 | | (9307265) | 1 | .Gasket | .Packning | 2 |
| 0270 | | 75 61 772 | | | 1 | .Gasket | .Packning | 2 |
| 0280 | | 75 66 433 | | (9308180) | 1 | .Gasket | .Packning | 4 |
| 0290 | | *83 69 829* | | NLS - USE 9125824 | 1 | .Seal | .Tätning | 3 |
| 0300 | | | | | | | | |
| 0310 | 3 | 93 37 239 | | C, T | X | Gasket kit | Sotningssats | 2 |
| 0320 | | 75 85 037 | | | 1 | .Gasket | .Packning | 2 |
| 0330 | | 93 55 991 | | (9306911) | 1 | .Gasket | .Packning | 1 |
| 0340 | | 75 69 346 | | | 1 | .Gasket | .Packning | 2 |
| 0350 | | 75 61 772 | | | 1 | .Gasket | .Packning | 2 |
| 0360 | | 75 88 981 | | C, (8368334) | 1 | .Gasket | .Packning | 4 |
| 0370 | | 75 88 915 | | T | 2 | .Gasket | .Packning | 4 |
| 0380 | | 83 74 639 | | C | 1 | .Gasket | .Packning | 4 |
| 0390 | | 83 36 877 | | T | 2 | .Gasket | .Packning | 4 |
| 0400 | | | | | | | | |
| 0410 | 3 | 93 37 247 | | B201I | X | Gasket kit | Sotningssats | |
| 0420 | | 75 85 037 | | | 1 | .Gasket | .Packning | 2 |
| 0430 | | 93 55 991 | | (9306911) | 1 | .Gasket | .Packning | 1 |
| 0440 | | 75 82 315 | | | 1 | .Gasket | .Packning | 2 |
| 0450 | | 75 61 772 | | | 1 | .Gasket | .Packning | 2 |
| 0460 | | | | | | | | |
| 0470 | 3 | 93 37 254 | | B201TURBO | X | Gasket kit | Sotningssats | 2 |
| 0480 | | 75 85 037 | | | 1 | .Gasket | .Packning | 2 |
| 0490 | | 93 55 991 | | (9306911) | 1 | .Gasket | .Packning | 1 |
| 0500 | | 75 82 315 | | (9307265) | 1 | .Gasket | .Packning | 2 |
| 0510 | | *93 14 139* | | NLS - USE 7561772 | 1 | .Gasket | .Packning | 2 |
| 0520 | | 83 66 262 | | TURBO | 1 | .Gasket | .Packning | 2 |
| 0530 | | 81 24 141 | | GUIDE TUBE | 1 | .Seal | .Tätning | 5 |
| 0540 | | *83 61 842* | | NLS - USE 7598540 | 2 | .Gasket | .Packning | 2 |
| 0550 | | *83 61 859* | | NLS - USE 7588557 | 1 | .Gasket | .Packning | 2 |
| 0560 | | | | | | | | |
| 0570 | 3 | 88 18 007 | | 63), B202 | X | Gasket kit | Sotningssats | 2 |
| 0580 | | 75 18 996 | | | 1 | .Gasket | .Packning | 2 |
| 0590 | | 75 85 045 | | | 1 | .Gasket | .Packning | 2 |
| 0600 | | 88 17 512 | | | 1 | .Gasket kit | .Packningsats | 1 |

63. Engine -G110406.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-I22

## Engine
## Motor

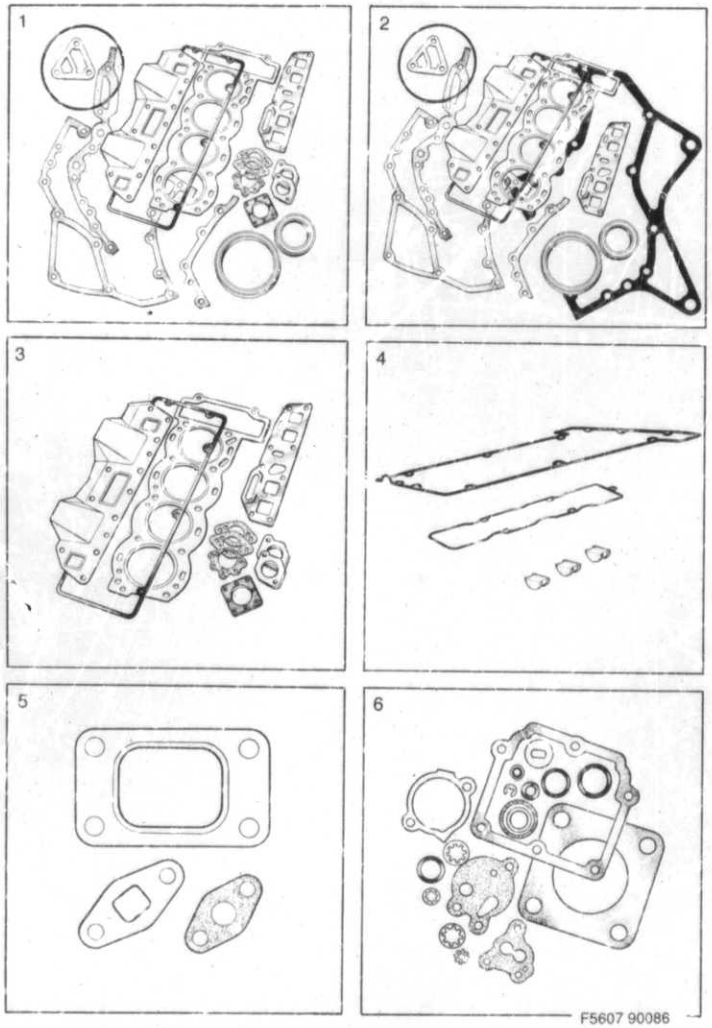


F5607 90086

| 2500 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0615 | | 75 15 190 | | | 1 | .Bushing | .Bussning | 5 |
| 0620 | | 74 80 429 | | | 6 | .Nipple | .Nippel | 3 |
| 0630 | | 74 80 437 | | | 2 | .Nipple | .Nippel | 3 |
| 0640 | | 74 80 445 | | | 1 | .Nipple | .Nippel | 3 |
| 0650 | | 74 80 452 | | | 1 | .Nipple | .Nippel | 3 |
| 0655 | | 74 80 460 | | | 1 | .Nipple | .Nippel | 3 |
| 0660 | | 75 84 436 | | | 1 | .Gasket | .Packning | 2 |
| 0670 | | | | | | | | |
| 0680 | 3 | 88 19 823 | | 64,105), B202 | X | Gasket kit | Sotningssats | 2 |
| 0690 | | 75 18 996 | | | 1 | .Gasket | .Packning | 2 |
| 0710 | | *88 18 254* | | NLS - USE 9321464 | 1 | .Gasket kit | .Packningsats | 1 |
| 0720 | | 75 84 436 | | | 1 | .Gasket | .Packning | 2 |
| 0730 | | 74 80 429 | | | 6 | .Nipple | .Nippel | 3 |
| 0740 | | 74 80 437 | | | 2 | .Nipple | .Nippel | 3 |
| 0750 | | 74 80 445 | | | 1 | .Nipple | .Nippel | 3 |
| 0760 | | 74 80 452 | | | 1 | .Nipple | .Nippel | 3 |
| 0765 | | 75 15 190 | | | 1 | .Bushing | .Bussning | 5 |
| 0770 | | *74 84 405* | | NLS - USE 9169079 | 1 | .Gasket | .Packning | 2 |
| 0780 | | | | | | | | |
| 0790 | 3 | 88 19 831 | | 106), B202 | X | Gasket kit | Sotningssats | 2 |
| 0800 | | 75 18 996 | | | 1 | .Gasket | .Packning | 2 |
| 0810 | | 75 84 436 | | | 1 | .Gasket | .Packning | 2 |
| 0820 | | *88 18 254* | | NLS - USE 9321464 | 1 | .Gasket kit | .Packningsats | 1 |
| 0830 | | 75 85 045 | | | 1 | .Gasket | .Packning | 2 |
| 0840 | | | | | | | | |
| 0850 | 4 | 88 17 512 | | 63), B202 | X | Gasket kit | Packningsats | 1 |
| 0860 | | 75 20 380 | | | 1 | .Gasket | .Packning | |
| 0870 | | 93 59 647 | | | 1 | .Gasket | .Packning | 1 |
| 0880 | | 75 00 069 | | | 3 | .Plug | .Plugg | 2 |
| 0890 | | | | | | | | |
| 0900 | 4 | *88 18 254* | | 64), B202 NLS - USE 9321464 | X | Gasket kit | Packningsats | 1 |
| 0910 | | 75 00 069 | | | 3 | .Plug | .Plugg | 2 |
| 0920 | | *75 88 056* | | NLS - USE 7569304 | 1 | .Gasket | .Packning | 1 |
| 0930 | | 75 23 962 | | | 1 | .Gasket | .Packning | 1 |
| 0940 | | | | | | | | |
| 0950 | 5 | 88 17 264 | | TURBO | X | Gasket kit | Packningsats | 2 |
| 0960 | | 83 66 262 | | | 1 | .Gasket | .Packning | 2 |
| 0970 | | *23 03 279* | | NLS - USE 7507700 | 1 | .Gasket | .Packning | 4 |
| 0980 | | *93 00 476* | | NLS - USE 7518970 | 1 | .Gasket | .Packning | |
| 0990 | | | | | | | | |
| 1000 | 6 | 83 64 234 | | C, (SOLEX) | X | Gasket kit | Packningsats | 4 |
| 1010 | | 83 51 348 | | | 1 | .Washer | .Bricka | |
| 1020 | | *83 05 419* | | NLS | 1 | .Washer | .Bricka | |
| 1030 | | *83 05 536* | | NLS | 2 | .Star washer | .Taggbricka | 5 |
| 1040 | | 83 03 652 | | | 1 | .Gasket | .Packning | 4 |
| 1050 | | 83 09 098 | | | 2 | .Star washer | .Taggbricka | 5 |
| 1060 | | 83 09 064 | | | 1 | .Seal | .Tätning | 4 |
| 1070 | | 83 09 072 | | | 1 | .Seal | .Tätning | 4 |
| 1080 | | 83 05 773 | | | 1 | .O-ring | .O-ring | 2 |
| 1090 | | *83 05 849* | | FLOAT CHAMBER NLS - USE 9321613 | 1 | .Gasket | .Packning | 4 |
| 1100 | | 83 05 823 | | NEEDLE VALVE | 1 | .Washer | .Bricka | 4 |
| 1110 | | 83 66 643 | | | 1 | .Gasket | .Packning | |
| 1120 | | *83 05 484* | | NLS - USE 8353387 | 1 | .Washer | .Bricka | 5 |
| 1130 | | 83 66 650 | | | 1 | .O-ring | .O-ring | |
| 1140 | | 83 66 668 | | DAMP PISTON | 1 | .Retaining ring | .Hållarring | |
| 1150 | | 83 66 676 | | | 1 | .Washer | .Bricka | |

63. Engine -G110406.
64. Engine G110407-.
105. Engine -J082585.
106. Engine J082586-.





MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-F02 |

2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

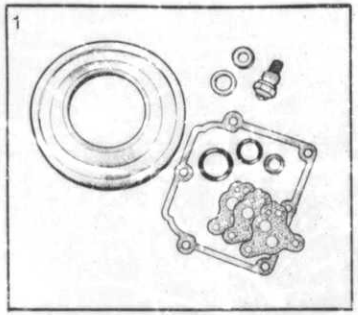


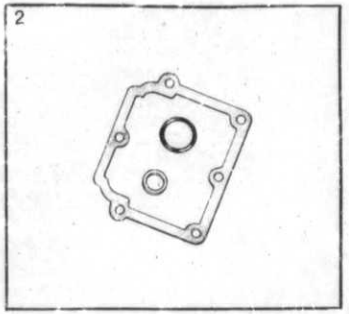






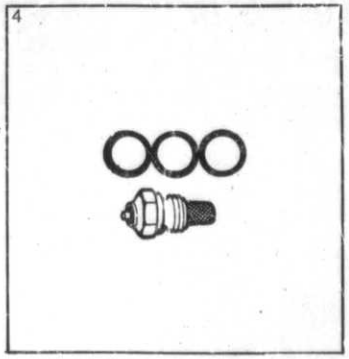

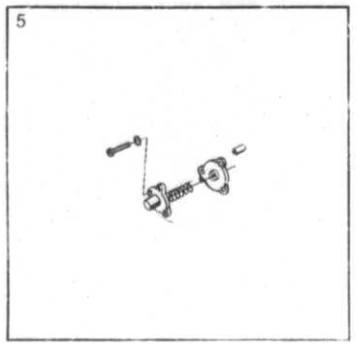

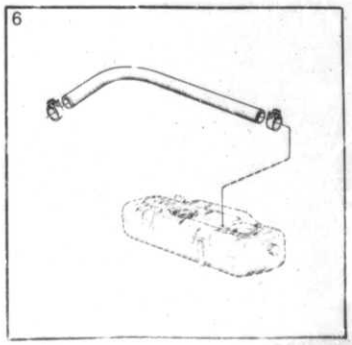R 8912-900

| 2550 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0010 1 | 83 64 259 | | C, (SOLEX) | X | Gasket kit | Packningssats | 4 |
| 0020 | 83 08 652 | | | 1 | .Gasket | .Packning | 4 |
| 0030 | 83 09 064 | | | 1 | .Seal | .Tätning | 4 |
| 0040 | 83 09 072 | | | 1 | .Seal | .Tätning | 4 |
| 0050 | 83 05 823 | | NEEDLE VALVE | 1 | .Washer | .Bricka | 4 |
| 0060 | 83 05 575 | | | 1 | .Spring | .Fjäder | 5 |
| 0070 | *83 05 849* | | FLOAT CHAMBER NLS - USE 9321613 | 1 | .Gasket | .Packning | 4 |
| 0080 | 83 08 678 | | | 1 | .Metering needle | .Bränslenål | 4 |
| 0090 | 83 52 494 | | | 1 | .Seal | .Tätning | 5 |
| 0100 | 83 51 413 | | | 1 | .Needle valve | .Nålventil | 3 |
| 0110 | | | | | | | |
| 0120 2 | 83 64 242 | | C, T, (SOLEX) | X | Gasket kit | Packningsats | 4 |
| 0130 | 83 05 823 | | NEEDLE VALVE | 1 | .Washer | .Bricka | 4 |
| 0140 | 83 05 773 | | | 1 | .O-ring | .O-ring | 2 |
| 0150 | *83 05 849* | | FLOAT CHAMBER NLS - USE 9321613 | 1 | .Gasket | .Packning | 4 |
| 0160 | | | | | | | |
| 0170 3 | 88 18 767 | | C, (SOLEX) | X | Repair kit | Reparationssats | 6 |
| 0180 | *75 08 203* | | NLS - USE 7588809 | 1 | .Gasket | .Packning | 4 |
| 0190 | *83 05 849* | | NLS - USE 9321613 | 1 | .Gasket | .Packning | 4 |
| 0200 | 83 08 892 | | | 1 | .Screw | .Skruv | 5 |
| 0210 | 83 09 064 | | | 1 | .Seal | .Tätning | 4 |
| 0220 | 83 09 072 | | | 1 | .Seal | .Tätning | 4 |
| 0230 | 83 64 192 | | | 1 | .Lock ring | .Låsring | 3 |
| 0240 | 83 65 850 | | | 1 | .Nozzle | .Munstycke | 4 |
| 0250 | 83 66 312 | | | 1 | .Metering needle | .Bränslenål | 4 |
| 0260 | 75 88 981 | | | 1 | .Gasket | .Packning | 4 |
| 0270 | 83 69 647 | | | 1 | .Gasket | .Packning | 4 |
| 0280 | 83 88 670 | | | 1 | .Diaphragm | .Membran | 1 |
| 0290 | 93 08 792 | | | 1 | .Screw | .Skruv | 3 |
| 0300 | | | | | | | |
| 0310 4 | 83 61 644 | | C, (SOLEX) | X | Needle valve set | Nålventilsats | 3 |
| 0320 | 83 51 413 | | 1) | 1 | .Needle valve | .Nålventil | 3 |
| 0330 | 83 05 823 | | | 1 | .Washer | .Bricka | 4 |
| 0340 | | | | | | | |
| 0350 5 | 75 09 128 | | C, T, (SOLEX) | X | Diaphragm | Membran | 4 |
| 0360 | 75 09 136 | | | 1 | .Diaphragm | .Membran | 4 |
| 0370 | 93 52 063 | | | 1 | .Cover | .Lock | 6 |
| 0380 | 93 52 055 | | | 1 | .Spring | .Fjäder | 6 |
| 0390 | 75 08 732 | | | 3 | .Sleeve | .Hylsa | 6 |
| 0400 | 79 72 789 | | | 3 | .Screw | .Skruv | 5 |
| 0410 | | | | | | | |
| 0420 6 | 88 17 256 | | | X | Fuel hose | Bränsleslang | 4 |
| 0430 | 93 63 359 | | | 1 | .Hose | .Slang | 5 |
| 0440 | 79 77 697 | | | 4 | .Hose clamp | .Slangklamma | 5 |

1. Not as separate spare part. Ej som separat reservdel.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |


# 1-J02


## Engine
## Motor

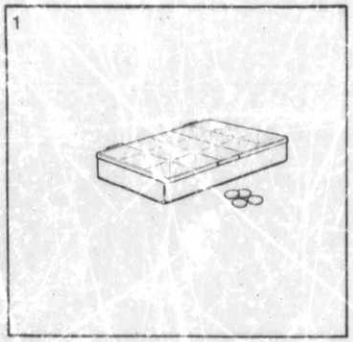


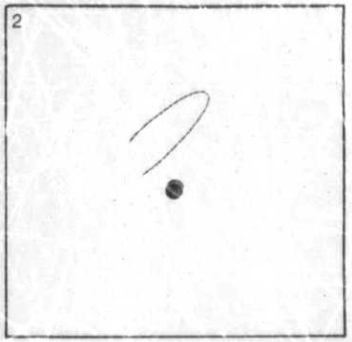
R 8913-900
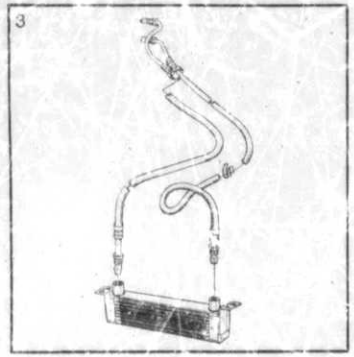
| 2600 | Pos | Part No/Art nr | K S | Notes Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 88 17 728 | | (9337502) | X | Valve adjustment kit | Ventiljusteringssats | 2 |
| 0020 | | 83 92 003 | | 1) | 3 | .Box | .Låda | 6 |
| 0030 | | 83 06 215 | | 1,78 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0040 | | 83 08 223 | | 1,83 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0050 | | 83 08 231 | | 1,88 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0060 | | 83 08 249 | | 1,93 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0070 | | 83 08 256 | | 1,98 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0080 | | 83 08 264 | | 2,03 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0090 | | 83 08 272 | | 2,08 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0100 | | 83 08 280 | | 2,13 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0110 | | 83 08 298 | | 2,18 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0120 | | 83 08 306 | | 2,24 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0130 | | 75 24 275 | | 2,27 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0140 | | 75 24 291 | | 2,29 MM, (8349169) | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0150 | | 75 24 317 | | 2,31 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0160 | | 75 24 333 | | 2,33 MM, (8349185) | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0170 | | 75 24 358 | | 2,35 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0180 | | 75 24 374 | | 2,37 MM, (8349201) | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0190 | | 75 24 390 | | 2,39 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0200 | | 75 24 416 | | 2,41 MM, (8349227) | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0210 | | 75 24 432 | | 2,43 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0220 | | 75 24 457 | | 2,45 MM, (8349243) | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0230 | | 75 24 473 | | 2,47 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0240 | | 75 24 499 | | 2,49 MM, (8349268) | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0250 | | 75 24 515 | | 2,51 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0260 | | 75 24 531 | | 2,53 MM, (8349284) | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0270 | | 75 24 556 | | 2,55 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0280 | | 75 24 572 | | 2,57 MM, (8349300) | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0290 | | 75 24 598 | | 2,59 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0300 | | 75 24 614 | | 2,61 MM, (8349326) | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0310 | | 75 24 630 | | 2,63 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0320 | | 75 24 655 | | 2,65 MM, (8349342) | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0330 | | 75 24 671 | | 2,67 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0340 | | 75 24 697 | | 2,69 MM, (8349367) | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0350 | | 75 24 713 | | 2,71 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0360 | | 75 24 739 | | 2,73 MM, (8349383) | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0370 | | 75 24 754 | | 2,75 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0380 | | 75 24 770 | | 2,77 MM, (8355042) | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0390 | | 75 24 796 | | 2,79 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0400 | | 75 24 812 | | 2,81 MM, (8355067) | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0410 | | 75 24 838 | | 2,83 MM | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0420 | | 75 24 853 | | 2,85 MM, (8355083) | 5 | .Adjusting washer | .Justerbricka | 2 |
| 0430 | | | | | | | | |
| 0440 | 2 | 93 01 706 | | 1986, TURBO | X | Sealing | Plombering | 2 |
| 0450 | | 93 01 722 | | 1) NLS - USE 8168352 | 1 | .Wire | .Tråd | 2 |
| 0460 | | 93 01 714 | | 1) | 1 | .Seal | .Plomb | 2 |
| 0470 | | 93 50 505 | | | 1 | .E-circlip | .Spårryttare | 2 |
| 0480 | | | | | | | | |
| 0490 | 2 | 88 18 569 | | 1987-, TURBO | X | Sealing kit | Plomberingssats | 2 |
| 0500 | | 81 17 020 | | 1) | 1 | .Sealing wire | .Plomberingstråd | 2 |
| 0510 | | 81 17 038 | | 1) | 1 | .Seal | .Plomb | 2 |
| 0520 | | | | | | | | |
| 0530 | 3 | 93 37 270 | | ENGINE | X | Oil cooler kit | Oljekylarsats | 4 |
| 0540 | | 93 01 482 | | | 1 | .Oil cooler | .Oljekylare | 4 |
| 0550 | | 89 01 532 | | NLS - USE 4374211 | 2 | .Banjo screw | .Banjoskruv | 5 |
| 0560 | | 89 77 365 | | (8326712) NLS - USE 4161162 | 4 | .Seal | .Tätning | 5 |
| 0570 | | 93 26 216 | | | 2 | .Hydraulic hose | .Hydraulslang | 3 |
| 0580 | | 75 05 464 | | (9308883) | 1 | .Intermediate section | .Mellanstycke | 6 |
| 0590 | | 75 66 433 | | (9308180) | 1 | .Gasket | .Packning | 4 |
| 0600 | | 79 22 420 | | | 4 | .Screw | .Skruv | 5 |
| 0610 | | 75 43 630 | | | 1 | .Hydraulic hose | .Hydraulslang | 4 |

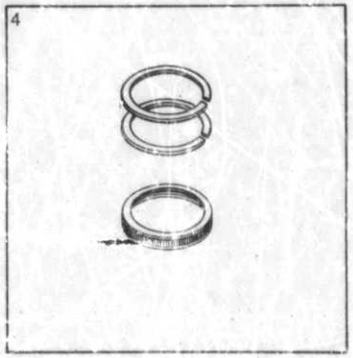1. Not as separate spare part. Ej som separat reservdel.

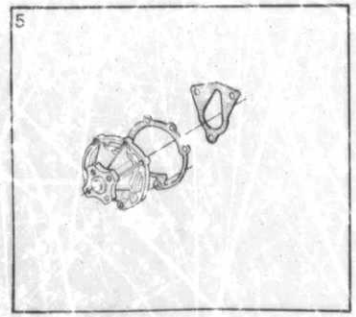

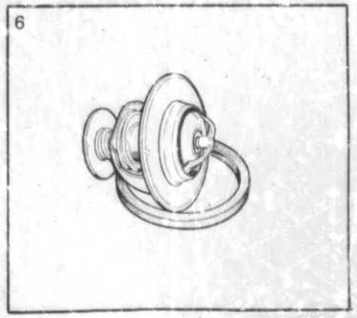MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



2 GROUP INDEX



| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |


# 1-J04


## *Engine*
## *Motor*

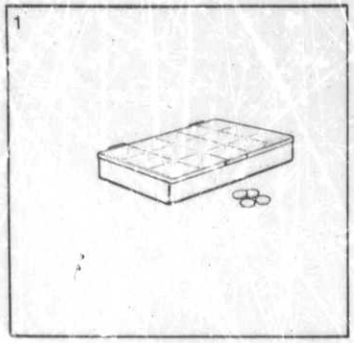


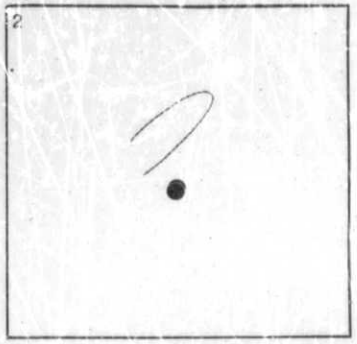
R 8913-500
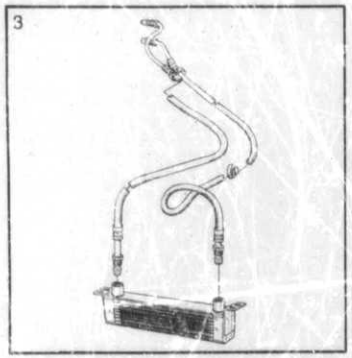
| 2600 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0620 | | 75 43 648 | | | 1 | .Hydraulic hose | .Hydraulslang | 4 |
| 0630 | | | | | | | | |
| 0640 | 3 | 75 40 388 | | ENGINE, ME, FE AND B202 | X | Oil cooler | Oljekylare | 4 |
| 0650 | | 75 13 450 | | | 1 | .Oil cooler | .Oljekylare | 4 |
| 0660 | | 75 41 381 | | | 1 | .Protecting casing | .Skyddskåpa | 5 |
| 0670 | | 75 43 671 | | | 1 | .Hydraulic hose | .Hydraulslang | 3 |
| 0680 | | 75 43 275 | | | 1 | .Hydraulic hose | .Hydraulslang | 3 |
| 0690 | | *79 74 769* | | NLS - USE 7922891 | 2 | .Screw | .Skruv | 5 |
| 0700 | | 79 22 891 | | | 1 | .Screw | .Skruv | 5 |
| 0710 | | 79 74 447 | | | 1 | .Screw | .Skruv | 5 |
| 0720 | | 79 71 658 | | | 4 | .Nut | .Mutter | 5 |
| 0730 | | 75 40 305 | | | 1 | .Stiffening bar | .Förstyvningsskena | 5 |
| 0740 | | 75 42 715 | | | 1 | .Clip | .Clips | 5 |
| 0750 | | 75 46 955 | | | 1 | .Seal | .Tätning | 4 |
| 0760 | | 79 75 220 | | | 1 | .Nut | .Mutter | 5 |
| 0770 | | 75 41 428 | | | 2 | .Clip | .Clips | 5 |
| 0780 | | 79 71 880 | | | 1 | .Tensioning band | .Spännband | 4 |
| 0970 | | | | | | | | |
| 0980 | 5 | 88 17 900 | | | X | Coolant pump | Kylvätskepump | 2 |
| 0990 | | *75 07 460* | | 1) NLS - USE 9127218 | 1 | .Coolant pump | .Kylvätskepump | 2 |
| 1000 | | *93 53 442* | | NLS - USE 7566516 | 1 | .Gasket | .Packning | 2 |
| 1010 | | *93 54 978* | | NLS - USE 7563677 | 1 | .Gasket | .Packning | 2 |
| 1020 | | | | | | | | |
| 1030 | 6 | 83 89 512 | | 89° C | X | Thermostat kit | Termostatsats | 1 |
| 1040 | | 83 62 352 | | 1) | 1 | .Thermostat | .Termostat | 6 |
| 1050 | | 83 52 692 | | | 1 | .Gasket | .Packning | 2 |
| 1060 | | | | | | | | |
| 1070 | 6 | 93 20 284 | | 92° C | X | Thermostat kit | Termostatsats | 6 |
| 1080 | | 93 16 662 | | 1) | 1 | .Thermostat | .Termostat | 2 |
| 1090 | | 83 52 692 | | | 1 | .Gasket | .Packning | 2 |
| 1100 | | | | | | | | |
| 1110 | 6 | 93 36 835 | | 82° C, ME, FE | X | Thermostat kit | Termostatsats | 2 |
| 1120 | | 93 12 059 | | 1) | 1 | .Thermostat | .Termostat | 2 |
| 1130 | | 83 52 692 | | | 1 | .Gasket | .Packning | 2 |
| 1140 | | | | | | | | |
| 1150 | 6 | 93 37 551 | | 82° C, US, TURBO FOR EU | X | Thermostat kit | Termostatsats | 1 |
| 1160 | | 75 02 297 | | 1) | 1 | .Thermostat | .Termostat | 2 |
| 1170 | | 83 52 692 | | | 1 | .Gasket | .Packning | 2 |
| 1180 | | | | | | | | |
| 1190 | 6 | 88 17 298 | | 89° C, B202 | X | Thermostat kit | Termostatsats | 1 |
| 1200 | | *75 05 241* | | 1) NLS - USE 9166687 | 1 | .Thermostat | .Termostat | 1 |
| 1210 | | 83 52 692 | | | 1 | .Gasket | .Packning | 2 |
| 1220 | | | | | | | | |
| 1230 | 6 | 88 17 538 | | 82° C, B202 | X | Thermostat kit | Termostatsats | 1 |
| 1240 | | 75 17 345 | | 1) | 1 | .Thermostat | .Termostat | 1 |
| 1250 | | 83 52 692 | | | 1 | .Gasket | .Packning | 2 |

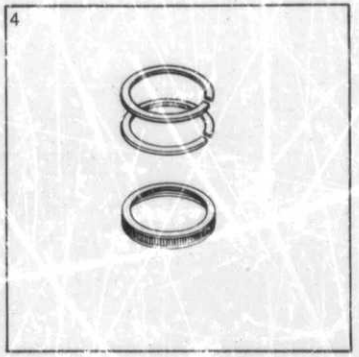1. Not as separate spare part. Ej som separat reservdel.

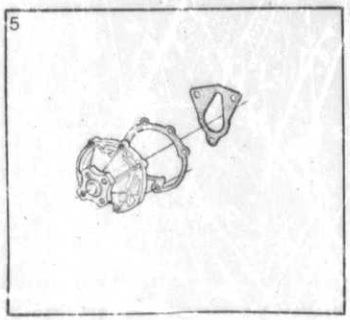

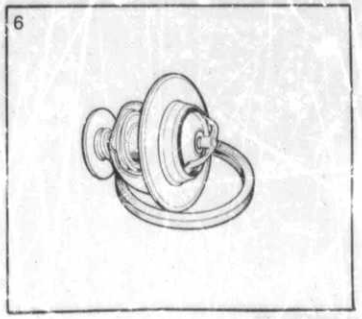MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C01 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

Kits
Satser

# 1-J06


## Engine
## Motor

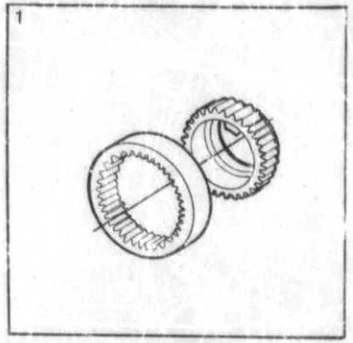







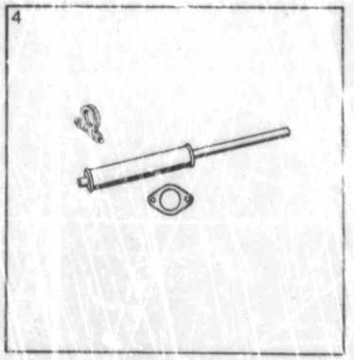


R 8914-900
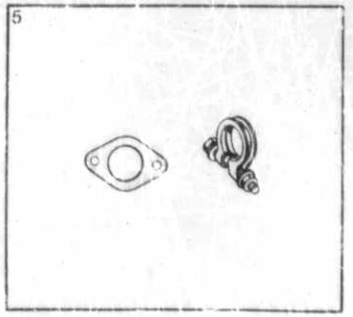
| 2650 | Pos | Part No/Art nr | K $ | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | $ L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *88 17 561* | | NLS - USE 9321779 | X | Pump kit | Pumpsats | 5 |
| 0020 | | 75 15 588 | | | 1 | . Pump rotor | . Pumphjul | 5 |
| 0030 | | *75 15 596* | | NLS - USE 9127366 | 1 | . Pump rotor | . Pumphjul | 5 |
| 0040 | | | | | | | | |
| 0050 | 2 | 88 17 348 | | | X | Service kit | Servicesats | 1 |
| 0060 | | *93 09 576* | | NLS - USE 9144445 | 1 | . Filter | . Filter | 1 |
| 0070 | | 87 18 439 | | | 1 | . Gasket | . Packning | 3 |
| 0080 | | 83 50 073 | | | 4 | . Spark plug | . Tändstift | 1 |
| 0090 | | | | | | | | |
| 0100 | 2 | *88 18 544* | | -1988, B202 I NLS - USE 8819284 | X | Service kit | Servicesats | 1 |
| 0110 | | 93 20 363 | | 1) | 1 | . Oil filter | . Oljefilter | 1 |
| 0120 | | 75 22 709 | | | 1 | . Gasket | . Packning | 1 |
| 0130 | | *75 05 142* | | 40/236183002 NLS - USE 8819294 | 4 | . Spark plug | . Tändstift | 1 |
| 0140 | | | | | | | | |
| 0150 | 2 | 88 19 864 | | 1989-, B202 I | X | Service kit | Servicesats | 1 |
| 0160 | | 93 20 383 | | 1) | 1 | . Oil filter | . Oljefilter | 1 |
| 0170 | | 87 18 439 | | | 1 | . Gasket | . Packning | 3 |
| 0180 | | 91 16 385 | | | 4 | . Spark plug | . Tändstift | 1 |
| 0190 | | | | | | | | |
| 0200 | 2 | 88 17 678 | | B201 TURBO | X | Service kit | Servicesats | 1 |
| 0210 | | 93 20 333 | | 1) | 1 | . Oil filter | . Oljefilter | 1 |
| 0220 | | 87 18 439 | | | 1 | . Gasket | . Packning | 3 |
| 0230 | | 88 19 328 | | | 4 | . Spark plug | . Tändstift | 1 |
| 0240 | | | | | | | | |
| 0250 | 2 | 88 17 686 | | B202 TURBO | X | Service kit | Servicesats | 1 |
| 0260 | | 93 20 383 | | 1) | 1 | . Oil filter | . Oljefilter | 1 |
| 0270 | | 87 18 439 | | | 1 | . Gasket | . Packning | 3 |
| 0275 | | 75 22 709 | | | 1 | . Gasket | . Packning | 1 |
| 0280 | | *75 68 900* | | NLS - USE 8819302 | 1 | . Spark plug kit | . Tändstiftsats | 1 |
| 0290 | | | | | | | | |
| 0300 | 3 | 93 36 868 | | | X | Fuel filter | Bränslefilter | 1 |
| 0310 | | *93 50 [illegible]* | | NLS | 1 | . Fuel filter | . Bränslefilter | 4 |
| 0320 | | 93 50 620 | | | 1 | . Gasket | . Packning | 2 |
| 0330 | | | | | | | | |
| 0340 | 4 | 88 17 835 | | | X | Silencer kit | Ljuddämparsats | 1 |
| 0350 | | 75 33 615 | | | 1 | . Silencer | . Ljuddämpare | 1 |
| 0360 | | 83 86 450 | | | 2 | . Clamp | . Klammer | |
| 0370 | | 83 87 672 | | | 2 | . Gasket | . Packning | |
| 0380 | | | | 75/651595 | 1 | . Assembly instruction | . Monteringsanvisning | |
| 0390 | | | | | | | | |
| 0400 | 5 | 88 18 197 | | C | X | Mounting kit | Monteringssats | 2 |
| 0410 | | 83 86 450 | | | 2 | . Clamp | . Klammer | 1 |
| 0420 | | 83 87 672 | | | 2 | . Gasket | . Packning | 1 |
| 0430 | | | | | | | | |
| 0440 | 6 | 88 17 850 | | C | X | Silencer kit | Ljuddämparsats | 1 |
| 0450 | | 75 33 631 | | | 1 | . Silencer | . Ljuddämpare | 1 |
| 0460 | | 75 33 623 | | | 1 | . Tube | . Rör | 2 |
| 0470 | | 83 86 450 | | | 2 | . Clamp | . Klammer | 1 |
| 0480 | | 83 84 323 | | | 1 | . Clamp | . Klammer | 1 |
| 0490 | | 93 20 105 | | | 2 | . Rubber mounting | . Gummiupphängning | 1 |
| 0500 | | 93 65 727 | | | 1 | . Exhaust pipe | . Avgasrör | |
| 0510 | | 93 65 404 | | | 1 | . Rubber mounting | . Gummiupphängning | 1 |
| 0520 | | 93 68 093 | | | 1 | . Bracket | . Konsol | 5 |
| 0530 | | | | 75/661595 | 1 | . Assembly instruction | . Monteringsanvisning | |

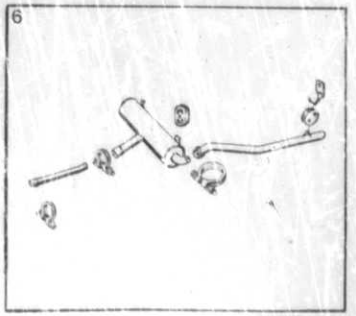1. Not as separate spare part. Ej som separat reservdel.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-J08




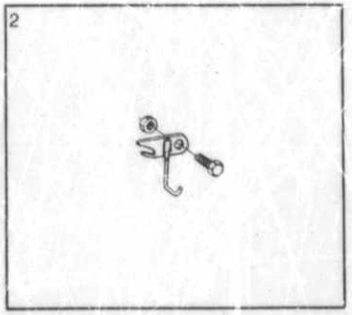

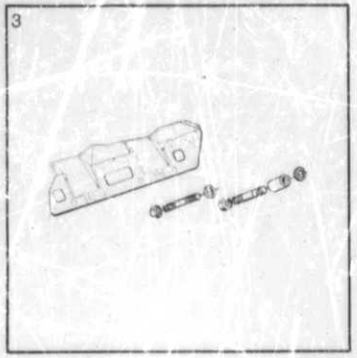





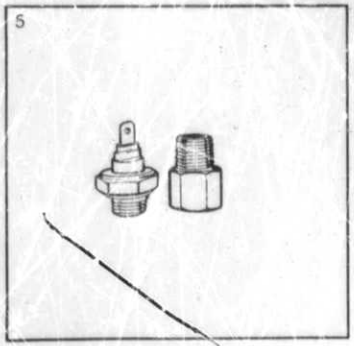

F0084 - 900

| Z700 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 88 18 577 | | | X | Mounting kit | Monteringssats | 2 |
| 0020 | | 83 86 460 | | | 2 | . Clamp | . Klammer | 1 |
| 0030 | | 83 84 323 | | | 1 | . Clamp | . Klammer | 1 |
| 0040 | | 93 28 105 | | | 2 | . Rubber mounting | . Gummiupphängning | 1 |
| 0050 | | 93 65 404 | | | 1 | . Rubber mounting | . Gummiupphängning | 1 |
| 0060 | | | | | | | | |
| 0070 | 2 | 75 38 440 | | 38) | X | Mounting kit | Monteringssats | 2 |
| 0080 | | 75 37 145 | | | 1 | . Bracket | . Upphängning | 5 |
| 0090 | | 79 70 353 | | | 2 | . Screw | . Skruv | 5 |
| 0100 | | 79 78 620 | | | 2 | . Nut | . Mutter | 3 |
| 0110 | | | | | | | | |
| 0120 | 3 | 88 17 280 | | | X | Screw kit | Skruvsats | 5 |
| 0130 | | *93 06 804* | | NLS - USE 7985146 | 3 | . Clamp | . Klammer | 5 |
| 0140 | | 75 21 081 | | ALT. 9306796 | 1 | . Stud | . Pinnskruv | 5 |
| 0150 | | *93 50 588* | | NLS - USE 7985161 | 4 | . Stud screw | . Pinnbult | 5 |
| 0160 | | *93 06 820* | | NLS - USE 9169277 | 7 | . Nut | . Mutter | 3 |
| 0170 | | 93 06 812 | | | 4 | . Spacer sleeve | . Distanshylsa | 3 |
| 0180 | | 80 73 249 | | | 7 | . Washer | . Bricka | 5 |
| 0190 | | 75 61 772 | | | 1 | . Gasket | . Packning | 2 |
| 0200 | | | | | | | | |
| 0210 | 4 | 88 17 405 | | | X | Chain tensioner | Kedjesträckare | 3 |
| 0220 | | 93 58 672 | | | 1 | . Chain tensioner | . Kedjesträckare | 3 |
| 0230 | | 93 58 680 | | | 1 | . Chain control | . Kedjestyrning | 3 |
| 0240 | | 81 25 064 | | | 2 | . Screw | . Skruv | 5 |
| 0250 | | | | | | | | |
| 0260 | 5 | 88 18 528 | | 10), TURBO | X | Oil pressure sensor | Oljetrycksgivare | |
| 0270 | | *75 32 402* | | NLS - USE 9112459 | 1 | . Oil pressure sensor | . Oljetrycksgivare | 3 |
| 0280 | | 75 64 248 | | | 1 | . Intermediate section | . Mellanstycke | 6 |
| 0290 | | | | | | | | |
| 0300 | 6 | 85 47 572 | | 1987 | X | Thermo contact | Termokontakt | 2 |
| 0310 | | *95 26 518* | | NLS - USE 4086708 | 1 | . Thermo contact | . Termokontakt | 2 |
| 0320 | | 83 30 268 | | | 3 | . Seal | . Tätning | 5 |

10. Ch. -G2010830, -G3007009, -G7012542.
38. Ch. -G2021146, -G3015680, -G7024051.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

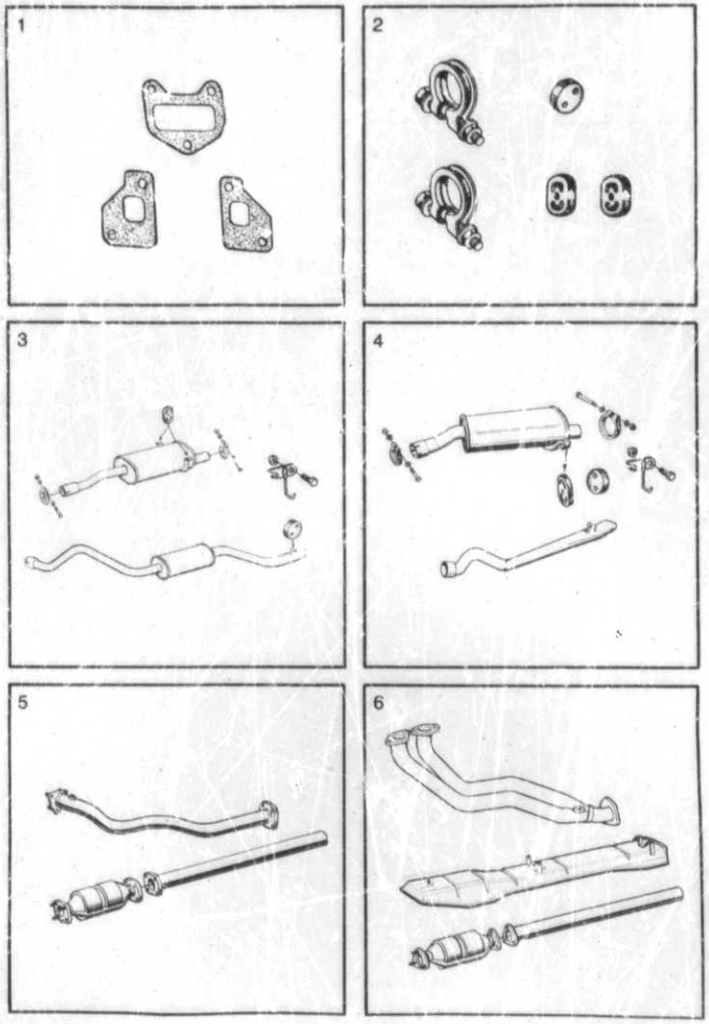


F5608 90086

| 2750 | Pos | Part No/Art nr | K S | Notes/Anm/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 88 19 146 | | 1988- | X | Gasket kit | Packningsats | 2 |
| 0020 | | *88 19 112* | | NLS - USE 7588940 | 2 | . Gasket | . Packning | 2 |
| 0030 | | *88 19 120* | | NLS - USE 7588957 | 1 | . Gasket | . Packning | 2 |
| 0040 | | | | | | | | |
| 0050 | 2 | 93 21 556 | | C, I | X | Mounting kit | Monteringssats | 2 |
| 0060 | | | | NOT B201I US | | | | |
| 0070 | | 83 86 450 | | | 2 | . Clamp | . Klammer | 1 |
| 0080 | | 93 28 105 | | | 2 | . Rubber mounting | . Gummiupphängning | 1 |
| 0090 | | 93 65 404 | | | 1 | . Rubber mounting | . Gummiupphängning | 1 |
| 0100 | | | | | | | | |
| 0110 | 2 | 93 21 563 | | TURBO | X | Mounting kit | Monteringssats | 2 |
| 0120 | | 83 36 406 | | | 2 | . Clamp | . Klammer | 1 |
| 0130 | | 93 28 105 | | | 2 | . Rubber mounting | . Gummiupphängning | 1 |
| 0140 | | 93 65 404 | | | 1 | . Rubber mounting | . Gummiupphängning | 1 |
| 0150 | | | | | | | | |
| 0160 | 3 | 88 19 690 | | C AND I, NOT B201I US | X | Silencer kit | Ljuddämparsats | 2 |
| 0170 | | 93 49 143 | | CENTER | 1 | . Silencer | . Ljuddämpare | 1 |
| 0180 | | 75 36 196 | | REAR | 1 | . Silencer | . Ljuddämpare | 1 |
| 0190 | | 75 38 440 | | | 1 | . Mounting kit | . Monteringssats | 2 |
| 0200 | | 75 37 145 | | | 1 | .. Bracket | .. Upphängning | 5 |
| 0210 | | 79 70 353 | | | 2 | .. Screw | .. Skruv | 5 |
| 0220 | | 79 78 620 | | | 2 | .. Nut | .. Mutter | 3 |
| 0230 | | 83 86 450 | | | 2 | . Clamp | . Klammer | 1 |
| 0240 | | 93 28 105 | | | 2 | . Rubber mounting | . Gummiupphängning | 1 |
| 0250 | | 93 65 404 | | | 1 | . Rubber mounting | . Gummiupphängning | 1 |
| 0260 | | 93 21 555 | | | 1 | . Mounting kit | . Monteringssats | 2 |
| 0270 | | 83 86 450 | | | 2 | .. Clamp | .. Klammer | 1 |
| 0280 | | 93 28 105 | | | 2 | .. Rubber mounting | .. Gummiupphängning | 1 |
| 0290 | | 93 65 404 | | | 1 | .. Rubber mounting | .. Gummiupphängning | 1 |
| 0300 | | | | | | | | |
| 0310 | 4 | 88 19 708 | | TURBO | X | Silencer kit | Ljuddämparsats | 2 |
| 0320 | | 93 49 192 | | REAR | 1 | . Silencer | . Ljuddämpare | 1 |
| 0330 | | 75 35 925 | | REAR | 1 | . Exhaust pipe | . Avgasrör | |
| 0340 | | 75 38 440 | | | 1 | . Mounting kit | . Monteringssats | 2 |
| 0350 | | 75 37 145 | | | 1 | .. Bracket | .. Upphängning | 5 |
| 0360 | | 79 70 353 | | | 2 | .. Screw | .. Skruv | 5 |
| 0370 | | 79 78 620 | | | 2 | .. Nut | .. Mutter | 3 |
| 0380 | | 83 36 406 | | | 2 | . Clamp | . Klammer | 1 |
| 0390 | | 93 28 105 | | | 2 | . Rubber mounting | . Gummiupphängning | 1 |
| 0400 | | 93 65 404 | | | 1 | . Rubber mounting | . Gummiupphängning | 1 |
| 0410 | | 93 21 563 | | | 1 | . Mounting kit | . Monteringssats | 2 |
| 0420 | | 83 36 406 | | | 2 | .. Clamp | .. Klammer | 1 |
| 0430 | | 93 28 105 | | | 2 | .. Rubber mounting | .. Gummiupphängning | 1 |
| 0440 | | 93 65 404 | | | 1 | .. Rubber mounting | .. Gummiupphängning | 1 |
| 0450 | | | | | | | | |
| 0460 | 5 | *88 19 203* | | 1987-1988, TURBO NLS | X | Catalytic converter kit | Katalysatorsats | 4 |
| 0470 | | 75 33 540 | | | 1 | . TW catalytic converter | . Katalysator | 4 |
| 0480 | | 89 76 821 | | FRONT | 1 | . Exhaust pipe | . Avgasrör | 2 |
| 0490 | | 75 37 764 | | "ENDAST BLYFRI BENSIN" | 1 | . Label | . Etikett | 4 |
| 0500 | | | | FOR FUEL TANK LID | | | | |
| 0510 | | 79 67 789 | | | 4 | . Screw | . Skruv | 5 |
| 0520 | | 79 68 415 | | | 3 | . Lock nut | . Låsmutter | 3 |
| 0530 | | 79 74 264 | | | 4 | . Nut | . Mutter | 5 |
| 0540 | | 80 74 106 | | | 4 | . Nut | . Mutter | 5 |
| 0550 | | 81 23 747 | | | 1 | . Plug | . Propp | 5 |
| 0560 | | *83 34 963* | | NLS - USE 4024121 | 1 | . Gasket | . Packning | 1 |
| 0570 | | *89 82 209* | | NLS - USE 4391058 | 1 | . Filler cap | . Tanklock | 2 |
| 0580 | | 93 16 407 | | | 1 | . Seal | . Tätning | 3 |
| 0590 | | 93 33 857 | | FRONT | 1 | . Exhaust pipe | . Avgasrör | 1 |
| 0600 | | 93 35 118 | | | 1 | . Filler pipe | . Påfyllningsrör | 5 |
| 0610 | | 95 40 774 | | | 1 | . Heat shield | . Värmeskköld | 3 |
| 0620 | | 96 82 535 | | "ENDAST BLYFRI BENSIN" | 1 | . Text plate | . Textskylt | 5 |
| 0630 | | | | FOR INSTRUMENT PANEL | | | | |
| 0640 | | | | | | | | |




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-J12

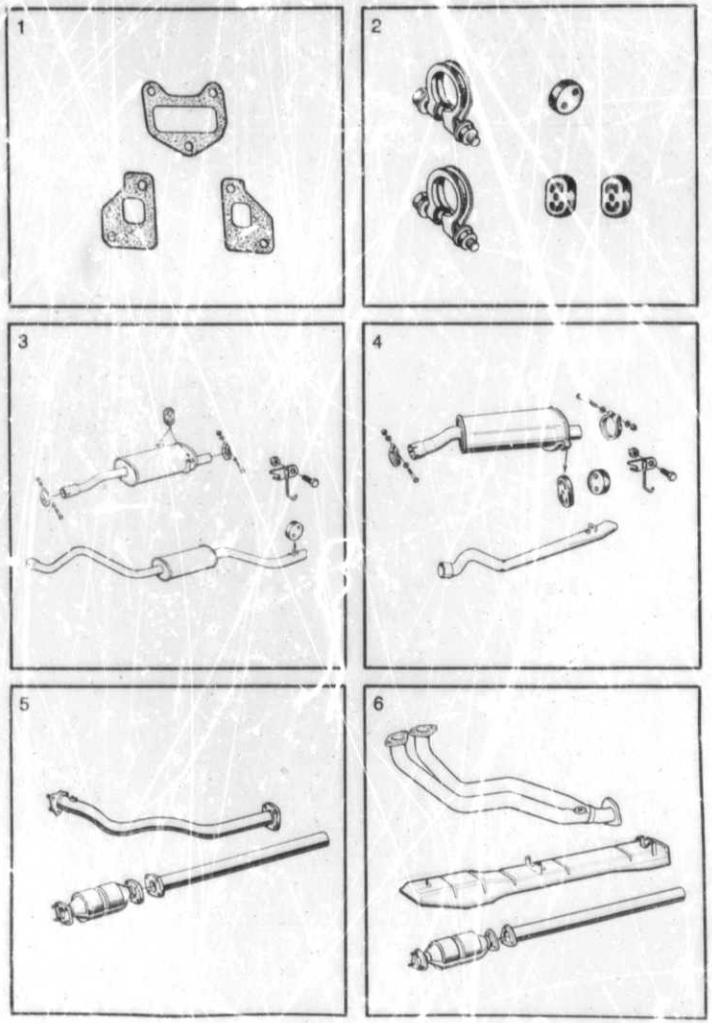


F5608 90 86

| 2750 | Pos | Part No Art.-nr | S/S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S/S |
|---|---|---|---|---|---|---|---|---|
| 0650 | 5 | *88 19 2? 9* | | 1986, B201C AND I, EU NLS | X | Catalytic converter kit | Katalysatorsats | 4 |
| 0660 | | 75 28 1 6 | | | 1 | .Gasket | .Packning | 1 |
| 0670 | | 75 33 7 7 | | | 1 | .TW catalytic converter | .Katalysator | 4 |
| 0680 | | 75 33 9 4 | | CENTRE | 1 | .Exhaust pipe | .Avgasrör | 1 |
| 0690 | | 75 37 7 4 | | "ENDAST BLYFRI BENSIN" FOR FUEL TANK LID | 1 | .Label | .Etikett | 4 |
| 0700 | | | | | | | | |
| 0710 | | 79 22 1 03 | | | 2 | .Screw | .Skruv | 5 |
| 0720 | | 79 67 7 89 | | | 3 | .Screw | .Skruv | 5 |
| 0730 | | *79 67 870* | | NLS - USE 7979503 | 3 | .Nut | .Mutter | 5 |
| 0740 | | 79 70 437 | | | 2 | .Cage nut | .Korgmutter | 5 |
| 0750 | | 79 78 620 | | | 4 | .Nut | .Mutter | 3 |
| 0760 | | 79 74 264 | | | 3 | .Nut | .Mutter | 5 |
| 0770 | | 80 2? 951 | | | 2 | .Washer | .Bricka | 5 |
| 0780 | | 30 29 985 | | | 2 | .Washer | .Bricka | 5 |
| 0790 | | 80 74 106 | | | 3 | .Nut | .Mutter | 5 |
| 0800 | | 81 23 747 | | | 1 | .Plug | .Propp | 5 |
| 0810 | | 83 28 726 | | | 1 | .Ring | .Ring | 3 |
| 0820 | | *83 87 052* | | NLS - USE 4024089 | 1 | .Gasket | .Packning | 3 |
| 0830 | | 83 87 672 | | | 2 | .Gasket | .Packning | 1 |
| 0840 | | 89 80 278 | | FRONT | 1 | .Exhaust pipe | .Avgasrör | 2 |
| 0850 | | *89 82 209* | | NLS - USE 4391058 | 1 | .Filler cap | .Tanklock | 2 |
| 0860 | | 93 35 118 | | | 1 | .Filler pipe | .Påfyllningsrör | 5 |
| 0870 | | *93 49 804* | | NLS - USE 4021598, 7119845, 7923014 | 1 | .Heat shield | .Värmesköld | 3 |
| 0880 | | 93 68 218 | | | 2 | .Screw | .Skruv | 5 |
| 0890 | | 94 92 471 | | | 1 | .Cover | .Täcklock | 3 |
| 0900 | | 95 40 774 | | | 1 | .Heat shield | .Värmesköld | 3 |
| 0910 | | 96 82 535 | | "ENDAST BLYFRI BENSIN" FOR INSTRUMENT PANEL | 1 | .Text plate | .Textskylt | 5 |
| 0920 | | | | | | | | |




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX



| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-I20 |

# 1-J14

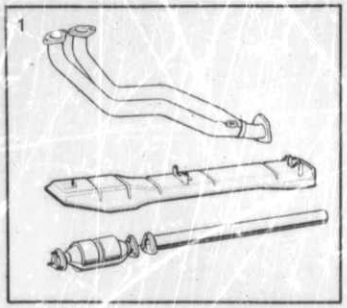







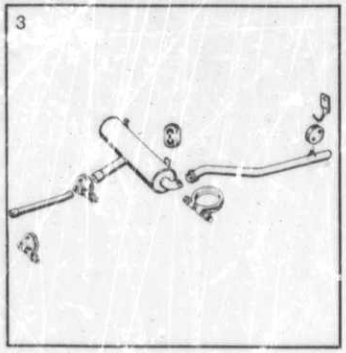





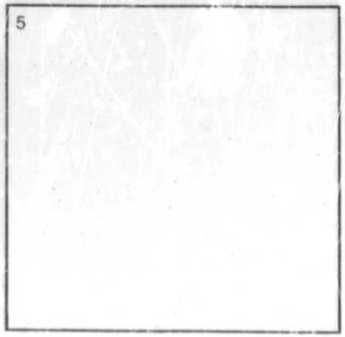

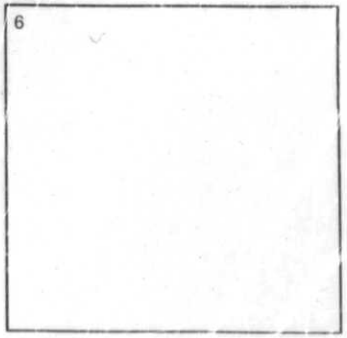
F5609 90086

| 2800 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 88 19 237 | | 1986, B201C+I, SW | X | Catalytic converter kit | Katalysatorsats | 4 |
| 002' | | | | 1987-1988, B201C+I | | | | |
| 0030 | | 75 28 136 | | | 1 | .Gasket | .Packning | 1 |
| 0040 | | 75 33 797 | | | 1 | .TW catalytic converter | .Katalysator | 4 |
| 0050 | | 75 33 904 | | CENTRE | 1 | .Exhaust pipe | .Avgasrör | 1 |
| 0060 | | 75 37 764 | | "ENDAST BLYFRI BENSIN" FOR FUEL TANK LID | 1 | .Label | .Etikett | 4 |
| 0070 | | | | | | | | |
| 0080 | | 75 39 117 | | FRONT | 1 | .Exhaust pipe | .Avgasrör | 2 |
| 0090 | | 79 22 503 | | | 2 | .Screw | .Skruv | 5 |
| 0100 | | 79 67 739 | | | 3 | .Screw | .Skruv | 5 |
| 0110 | | *79 67 870* | | NLS - USE 7979503 | 3 | .Nut | .Mutter | 5 |
| 0120 | | 79 70 437 | | | 2 | .Cage nut | .Korgmutter | 5 |
| 0130 | | 79 78 620 | | | 4 | .Nut | .Mutter | 3 |
| 0140 | | 79 74 264 | | | 3 | .Nut | .Mutter | 5 |
| 0150 | | 80 29 951 | | | 2 | .Washer | .Bricka | 5 |
| 0160 | | 80 29 985 | | | 2 | .Washer | .Bricka | 5 |
| 0170 | | 80 74 106 | | | 3 | .Nut | .Mutter | 5 |
| 0180 | | 81 23 747 | | | 1 | .Plug | .Propp | 5 |
| 0190 | | 93 28 726 | | | 1 | .Ring | .Ring | 3 |
| 0200 | | *83 87 052* | | NLS - USE 4024089 | 1 | .Gasket | .Packning | 3 |
| 0210 | | 83 87 672 | | | 2 | .Gasket | .Packning | 1 |
| 0220 | | *89 82 209* | | NLS - USE 4391058 | 1 | .Filler cap | .Tanklock | 2 |
| 0230 | | 93 35 118 | | | 1 | .Filler pipe | .Påfyllningsrör | 5 |
| 0240 | | *93 49 504* | | NLS - USE 4021598, 7119845, 7923014 | 1 | .Heat shield | .Värmesköld | 3 |
| 0250 | | 93 63 218 | | | 2 | .Screw | .Skruv | 5 |
| 0260 | | 94 92 471 | | | 1 | .Cover | .Täcklock | 3 |
| 0270 | | 95 40 774 | | | 1 | .Heat shield | .Värmesköld | 3 |
| 0280 | | 96 82 535 | | "ENDAST BLYFRI BENSIN" FOR INSTRUMENT PANEL | 1 | .Text plate | .Textskylt | 5 |
| 0290 | | | | | | | | |
| 0300 | | | | | | | | |
| 0310 | 2 | 40 20 843 | | | X | Hose kit | Slangsats | 5 |
| 0320 | | 40 19 988 | | | 1 | .Hose | .Slang | 5 |
| 0330 | | 79 68 318 | | | 2 | .Hose clamp | .Slangklamma | 5 |
| 0340 | | | | | | | | |
| 0350 | 3 | 88 17 350 | | 38) B201I, US | | Silencer kit | Ljuddämparsats | 1 |
| 036. | | 75 33 623 | | CENTRE | 1 | .Tube | .Rör | 2 |
| 0370 | | 75 36 631 | | | 1 | .Silencer | .Ljuddämpare | 1 |
| 0380 | | 83 84 323 | | | 1 | .Clamp | .Klammer | 1 |
| 0390 | | 83 86 450 | | | 2 | .Clamp | .Klammer | 1 |
| 0400 | | 93 28 105 | | FOR MUFFLER | 2 | .Rubber mounting | .Gummiupphängning | 1 |
| 0410 | | 93 65 404 | | FOR EXHAUST PIPE | 1 | .Rubber mounting | .Gummiupphängning | 1 |
| 0420 | | 93 65 727 | | REAR | 1 | .Exhaust pipe | .Avgasrör | |
| 0430 | | 93 68 093 | | | 1 | .Bracket | .Konsol | 5 |
| 0440 | | | | | | | | |
| 0450 | 3 | 88 19 930 | | 39), B201I, US | X | Silencer | Ljuddämpare | 1 |
| 0460 | | 75 33 623 | | CENTRE | 1 | .Tube | .Rör | 2 |
| 0470 | | 75 33 631 | | | 1 | .Silencer | .Ljuddämpare | 1 |
| 0480 | | 75 36 097 | | REAR | 1 | .Exhaust pipe | .Avgasrör | 1 |
| 0490 | | 83 84 323 | | | 1 | .Clamp | .Klammer | 1 |
| 050' | | 83 86 450 | | | 2 | .Clamp | .Klammer | 1 |
| 0510 | | 93 28 105 | | FOR MUFFLER | 2 | .Rubber mounting | .Gummiupphängning | 1 |
| 0520 | | 93 65 404 | | FOR EXHAUST PIPE | 1 | .Rubber mounting | .Gummiupphängning | 1 |

38. Ch. -G2021146, -G3015680, -G7024051.
39. Ch. G2021147-, G3015681-, G7024052-.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 1-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 5-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


2 GROUP INDEX


| | |
|---|---|
| Engine body | 1-B10 |
| Lubrication system | 1-C14 |
| Fuel system | 1-C18 |
| Inlet and exhaust system | 1-F02 |
| Cooling system | 1-H10 |
| Engine control | 1-I12 |
| Supercharging system | 1-I14 |
| Complete sets | 1-J20 |

# 2-A02

# 3A

Electrical, general
Elektriskt, allmänt
Electrico, generalidades

TABLE OF CONTENTS


| | | |
|---|---|---|
| **Battery** | | |
| Battery | 3A : 5 | 2-A06 |
| **Alternator** | | |
| Alternator, Bosch 70A | 3A : 7 | 2-A08 |
| Alternator, Bosch 90A | 3A : 9 | 2-A10 |
| **Starter** | | |
| Starter | 3A : 11 | 2-A12 |
| **Ignition system** | | |
| Ignition coil, cables, spark plugs etc | 3A : 13 | 2-A14 |
| Distributor Bosch, breakerless system, B201 | 3A : 19 | 2-A20 |
| Distributor Bosch, breakerless system, B202 I | 3A : 23 | 2-A24 |
| Distributor Bosch, breakerless system, B202 Turbo | 3A : 25 | 2-A27 |
| **Lighting** | | |
| Headlights | 3A : 27 | 2-B04 |
| Headlights, for 1987- cars with integrated bumpers | 3A : 29 | 2-B06 |
| Headlights, sealed beam 1986 | 3A : 31 | 2-B08 |
| Headlights, sealed beam 1987- | 3A : 33 | 2-B10 |
| Lamp cluster 1986 | 3A : 35 | 2-B12 |
| Lamp cluster 1987- with integrated bumpers | 3A : 37 | 2-B14 |
| Tail lamp, CK | 3A : 41 | 2-B18 |
| Tail lamp, SN | 3A : 45 | 2-B22 |
| Stop light, high mounted | 3A : 47 | 2-B24 |
| Other lights | 3A : 49 | 2-C02 |
| **Electrical equipment, other** | | |
| Signal horn | 3A : 51 | 2-C04 |
| Signal button | 3A : 53 | 2-C06 |
| Windshield wipers | 3A : 55 | 2-C08 |
| Headlight wipers | 3A : 57 | 2-C10 |
| Windshield- and headlight washer | 3A : 59 | 2-C12 |
| Central lock | 3A : 61 | 2-C14 |
| Switches | 3A : 63 | 2-C16 |
| Speed control system | 3A : 67 | 2-C20 |
| Operating device | 3A : 71 | 2-C24 |
| Motor aerial, loudspeaker | 3A : 77 | 2-D06 |
| Gear upshift system | 3A : 79 | 2-D08 |
| Theft alarm | 3A : 81 | 2-D10 |
| Electrical system, ABS | 3A : 83 | 2-D12 |
| **Wiring and fuses** | | |
| Wiring 1986 | 3A : 85 | 2-D14 |
| Wiring 1987 | 3A : 95 | 2-D24 |
| Wiring 1988 | 3A : 105 | 2-E10 |
| Wiring 1989 | 3A : 115 | 2-E20 |
| Bushing, clamps | 3A : 125 | 2-F06 |
| Bushing, clamps | 3A : 131 | 2-F12 |
| Distribution box, relays and fuses | 3A : 133 | 2-F14 |
| Instruments | 3A : 141 | 2-F22 |
| **Complete sets** | | |
| Electrical system | 3A : 147 | 2-G04 |


MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

INNEHÅLLSFÖRTECKNING


| | | |
|---|---|---|
| **Batteri** | | |
| Batteri | 3A : 5 | 2-A06 |
| **Generator** | | |
| Generator, Bosch 70A | 3A : 7 | 2-A08 |
| Generator, Bosch 80A | 3A : 9 | 2-A10 |
| **Startmotor** | | |
| Startmotor | 3A : 11 | 2-A12 |
| **Tändsystem** | | |
| Tändspole, tändkablar, tändstift etc | 3A : 13 | 2-A14 |
| Tändfördelare Bosch, brytarlöst system, B201 | 3A : 19 | 2-A20 |
| Tändfördelare Bosch, brytarlöst system, B202 I | 3A : 23 | 2-A24 |
| Tändfördelare Bosch, brytarlöst system, B202 Turbo | 3A : 25 | 2-B02 |
| **Belysning** | | |
| Strålkastare | 3A : 27 | 2-B04 |
| Strålkastare, bilar 1987- med integrerad stötfångare | 3A : 29 | 2-B06 |
| Strålkastare, sealed beam 1986 | 3A : 31 | 2-B08 |
| Strålkastare, sealed beam 1987- | 3A : 33 | 2-B10 |
| Kombinationslykta 1986 | 3A : 35 | 2-B12 |
| Kombinationslykta 1987-, med integrerade stötfångare | 3A : 37 | 2-B14 |
| Baklykta, CK | 3A : 41 | 2-B18 |
| Baklykta, SN | 3A : 45 | 2-B22 |
| Stopplykta, högt monterad | 3A : 47 | 2-B24 |
| Övrig belysning | 3A : 49 | 2-C02 |
| **Övrig elektrisk utrustning** | | |
| Signalhorn | 3A : 51 | 2-C04 |
| Signalkontakt | 3A : 53 | 2-C06 |
| Vindrutetorkare | 3A : 55 | 2-C08 |
| Strålkastartorkare | 3A : 57 | 2-C10 |
| Vindrute- och strålkastarspolare | 3A : 59 | 2-C12 |
| Centrallås | 3A : 61 | 2-C14 |
| Strömställare | 3A : 63 | 2-C16 |
| Farthållnings system | 3A : 67 | 2-C20 |
| Manöverdon | 3A : 71 | 2-C24 |
| Motorantenn, högtalare | 3A : 77 | 2-D06 |
| Växlingsindikering | 3A : 79 | 2-D08 |
| Stöldlarm | 3A : 81 | 2-D10 |
| Elektriskt system, ABS | 3A : 83 | 2-D12 |
| **Ledningar och säkringar** | | |
| Ledningar 1986 | 3A : 85 | 2-D14 |
| Ledningar 1987 | 3A : 95 | 2-D24 |
| Ledningar 1988 | 3A : 105 | 2-E10 |
| Ledningar 1989 | 3A : 115 | 2-E20 |
| Bussningar, klammer | 3A : 125 | 2-F06 |
| Bussningar, klammer | 3A : 131 | 2-F12 |
| El.central, reläer och säkringar | 3A : 133 | 2-F14 |
| Instrument | 3A : 141 | 2-F22 |
| **Satser** | | |
| Elektriskt system | 3A : 147 | 2-G04 |






SUMARIO


| | | |
|---|---|---|
| **Batteria** | | |
| Bateria | 3A : 5 | 2-A06 |
| **Alternador** | | |
| Alternador, Bosch 70A | 3A : 7 | 2-A08 |
| Alternador, Bosch 80A | 3A : 9 | 2-A10 |
| **Motor de arranque** | | |
| Motor de arranque | 3A : 11 | 2-A12 |
| **Sistema de encendido** | | |
| Bobina, cables, bujias etc | 3A : 13 | 2-A14 |
| Distribuidor, Bosch, sistema sin ruptor, B201 | 3A : 19 | 2-A20 |
| Distribuidor, Bosch, sistema sin ruptor, B202 I | 3A : 23 | 2-A24 |
| Distribuidor, Bosch, sistema sin ruptor, B202 Turbo | 3A : 25 | 2-B02 |
| **Alumbrado** | | |
| Faros | 3A : 27 | 2-B04 |
| Faros, | 3A : 29 | 2-B06 |
| Faros, sealed beam 1986 | 3A : 31 | 2-B08 |
| Faros, sealed beam 1987- | 3A : 33 | 2-B10 |
| Faro combinado 1986 | 3A : 35 | 2-B12 |
| Faro combinado 1987- parachoques integrante | 3A : 37 | 2-B14 |
| Piloto trasero, CK | 3A : 41 | 2-B18 |
| Piloto trasero, SN | 3A : 45 | 2-B22 |
| Lampara de paro montada | 3A : 47 | 2-B24 |
| Otro alumbrado | 3A : 49 | 2-C02 |
| **Otro equipo electrico** | | |
| Senal acustica | 3A : 51 | 2-C04 |
| Contacto de senal acustica | 3A : 53 | 2-C06 |
| Limpiaparabrisas | 3A : 55 | 2-C08 |
| Limpiacristales de faro | 3A : 57 | 2-C10 |
| Lavaparabrisas y lavacristales de faro | 3A : 59 | 2-C12 |
| Cerradura central | 3A : 61 | 2-C14 |
| Contactos | 3A : 63 | 2-C16 |
| Control de velocidad de crucero | 3A : 67 | 2-C20 |
| Dispositivos de mando | 3A : 71 | 2-C24 |
| Motor de antena, altavoz | 3A : 77 | 2-D06 |
| Indicacion de cambio | 3A : 79 | 2-D08 |
| Alarma antirobo | 3A : 81 | 2-D10 |
| Sistema electrico, ABS | 3A : 83 | 2-D12 |
| **Conductos y fusibles** | | |
| Conductos 1986 | 3A : 85 | 2-D14 |
| Conductos 1987 | 3A : 95 | 2-D24 |
| Conductos 1988 | 3A : 105 | 2-E10 |
| Conductos 1989 | 3A : 115 | 2-E20 |
| Manguitos, abrazaderas | 3A : 125 | 2-F06 |
| Manguitos, abrazaderas | 3A : 131 | 2-F12 |
| Central electrica, reles y fusibles | 3A : 133 | 2-F14 |
| Instrumentos | 3A : 141 | 2-F22 |
| **Juegos completos** | | |
| Sistema electrico | 3A : 147 | 2-G04 |





MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-A06 Battery Batteri

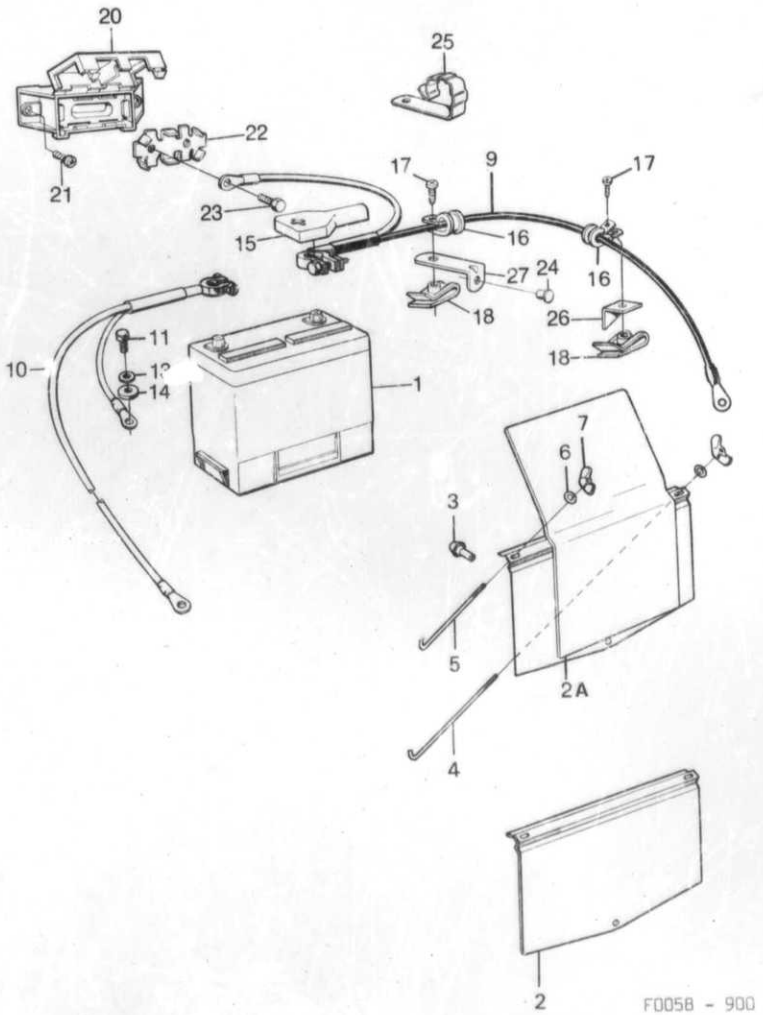


| 0100 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | | | | | Battery | Batteri | |
| 0020 | | | | | | SEE ACCESSORIES CATALOGUE | SE TILLBEHÖRSKATALOG | |
| 0030 | 2 | 85 51 582 | | | 1 | Protection | Skydd | 5 |
| 0040 | 2A | 85 94 897 | | TURBO | 1 | Heat shield | Strålningsskydd | 5 |
| 0050 | 3 | 71 13 970 | | | 1 | Plug | Plugg | 5 |
| 0060 | 4 | 85 72 737 | | | 1 | Catch | Hake | 5 |
| 0070 | 4 | 85 51 616 | | TURBO | 1 | Catch | Hake | 5 |
| 0080 | 5 | 85 72 745 | | | 1 | Catch | Hake | 5 |
| 0090 | 5 | 85 51 616 | | TURBO | 1 | Catch | Hake | 5 |
| 0100 | 6 | 79 15 564 | | | 2 | Star washer | Taggbricka | 5 |
| 0110 | 7 | 79 70 460 | | | 2 | Nut | Mutter | 5 |
| 0120 | 9 | 95 53 496 | | 53), M | 1 | Cable | Kabel | 5 |
| 0130 | 9 | 95 55 624 | | 54), M | 1 | Cable | Kabel | 5 |
| 0140 | 9 | 95 53 496 | | 55), A | 1 | Cable | Kabel | 5 |
| 0150 | 9 | 95 55 764 | | 56), A | 1 | Cable | Kabel | 5 |
| 0160 | 9 | 95 53 504 | | 53), TURBO, M | 1 | Cable | Kabel | 5 |
| 0170 | 9 | 95 55 632 | | 54), TURBO, M | 1 | Cable | Kabel | 5 |
| 0180 | 9 | 95 53 504 | | 55), TURBO, A | 1 | Cable | Kabel | 5 |
| 0190 | 9 | 95 55 772 | | 56), TURBO, A | 1 | Cable | Kabel | 5 |
| 0200 | 10 | 85 94 152 | | -1988 | 1 | Ground cable | Jordkabel | 4 |
| 0210 | 10 | 91 21 526 | | 500), 1989- | 1 | Ground cable | Jordkabel | 4 |
| 0220 | 11 | 85 84 666 | | | 1 | Screw | Skruv | 5 |
| 0230 | 13 | 85 84 674 | | | 1 | Washer | Bricka | 5 |
| 0240 | 14 | 85 84 682 | | | 1 | Washer | Bricka | 5 |
| 0250 | 15 | 95 18 424 | | 1987- | 1 | Cover | Kåpa | 6 |
| 0260 | 16 | 85 66 135 | | TURBO | 3 | Clamp | Klammer | 5 |
| 0270 | 16 | *85 66 143* | | AC NLS | 1 | Clamp | Klammer | 5 |
| 0280 | 17 | 82 86 296 | | | 3 | Screw | Skruv | 5 |
| 0290 | 17 | *82 67 205* | | TURBO NLS - USE 7972466 | 3 | Screw | Skruv | 5 |
| 0300 | 18 | 82 67 098 | | | 3 | Clip | Clips | 5 |
| 0310 | 20 | *95 03 046* | | -1988 NLS - USE 4061891 | 1 | Bracket | Hållare | 5 |
| 0320 | 20 | 40 61 891 | | 500), 1989- | 1 | Bracket | Hållare | 5 |
| 0330 | 21 | *79 74 769* | | NLS - USE 7922891 | 2 | Screw | Skruv | 5 |
| 0340 | 22 | 95 03 053 | | | 1 | Casing | Förgreningshus | 3 |
| 0350 | 23 | 80 19 895 | | | 2 | Screw | Skruv | 5 |
| 0360 | 24 | 79 22 891 | | -1986 | 2 | Screw | Skruv | 5 |
| 0370 | 24 | *79 77 375* | | 1987- NLS - USE 8235178 | 2 | Rivet | Nit | 5 |
| 0380 | 25 | 85 28 564 | | 1987- | 3 | Clamp | Klammer | 5 |
| 0390 | 26 | 85 94 368 | | 1987- | 1 | Bracket | Konsol | 6 |
| 0400 | 27 | 95 55 608 | | -1986 | 1 | Bracket | Konsol | 6 |
| 0410 | 27 | 95 59 782 | | 1987- | 2 | Bracket | Konsol | 6 |

53. Ch -H7037307, -J3002620.
54. Ch H7037308-, J3002621-.
55. Ch -H2023631, -H3021972, -H7037316.
56. Ch H2023632-, H3021973-, H7037317-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-A08

Generator
**Bosch 70A**

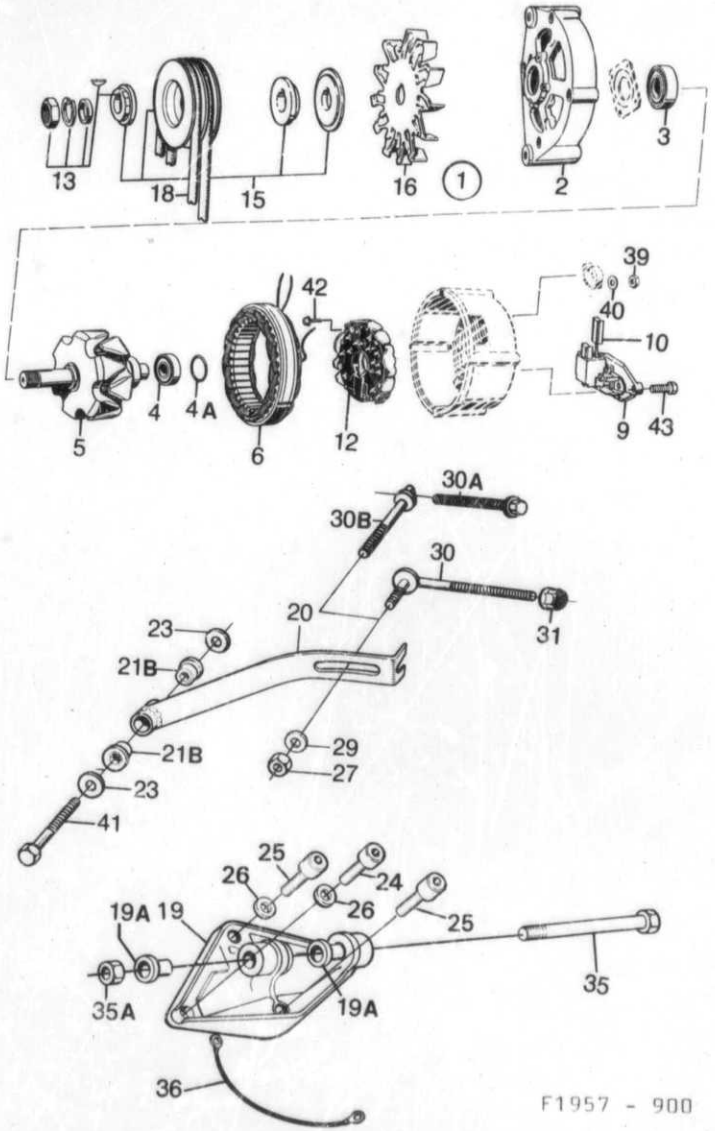


| 0160 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0030 | 1 | 95 55 251 | | 700), (8597924) | 1 | Generator | Generator | 5 |
| 0040 | 2 | 85 91 075 | | | 1 | .Bearing | .Drivlager | 6 |
| 0060 | 3 | 85 90 911 | | | 1 | .Ball bearing | .Kullager | 3 |
| 0080 | 4 | 85 72 034 | | | 1 | .Ball bearing | .Kullager | 6 |
| 0100 | 4A | 85 65 590 | | | 1 | .O-ring | .O-ring | 4 |
| 0120 | 5 | 85 71 887 | | | 1 | .Rotor | .Rotor | 6 |
| 0140 | 6 | 85 71 861 | | | 1 | .Stator | .Stator | 6 |
| 0180 | 9 | 85 90 549 | | | 1 | .Regulator | .Regulator | 2 |
| 0200 | 10 | *85 72 638* | | NLS - USE 9515180 | 1 | ..Brush set | ..Borstsats | 3 |
| 0230 | 12 | 95 55 301 | | (8598096) | 1 | .Rectifier | .Likriktare | 6 |
| 0240 | 13 | 85 90 994 | | | 1 | .Part kit rotor | .Delsats rotor | 6 |
| 0260 | 15 | *85 86 075* | | NLS - USE 9563412 | 1 | Pulley | Remskiva | 5 |
| 0280 | 16 | 85 87 248 | | | 1 | Fan disc | Fläktskiva | 6 |
| 0300 | 18 | 75 11 728 | | | 1 | V-belt | Kilrem | 1 |
| 0322 | 19 | 75 41 436 | | | 1 | Bracket | Fäste | 4 |
| 0335 | 19A | 75 41 451 | | | 2 | Rubber bushing | Gummibussning | 6 |
| 0340 | 20 | 75 06 272 | | | 1 | Stay | Stag | 5 |
| 0360 | 21B | 93 54 770 | | | 2 | Rubber bushing | Gummibussning | 4 |
| 0380 | 23 | 73 11 772 | | | 2 | Washer | Bricka | 5 |
| 0400 | 24 | 80 98 089 | | | 1 | Screw | Skruv | 5 |
| 0420 | 25 | 80 98 113 | | | 2 | Screw | Skruv | 5 |
| 0440 | 26 | 80 29 985 | | | 2 | Washer | Bricka | 5 |
| 0460 | 27 | *80 29 779* | | -1987 NLS - USE 8151243 | 1 | Nut | Mutter | 5 |
| 0480 | 27 | 81 51 243 | | 1988- | 1 | Nut | Mutter | 5 |
| 0500 | 29 | 80 73 108 | | -1988 | 2 | Washer | Bricka | 5 |
| 0520 | 30 | 75 12 106 | | -1988 | 1 | Adjustment screw | Justerskruv | 5 |
| 0521 | 30A | 73 99 769 | | 500), 1989- | 1 | Screw | Skruv | 5 |
| 0522 | 30B | 75 49 488 | | 500), 1989- | 1 | Adjustment screw | Justerskruv | 5 |
| 0540 | 31 | 79 71 922 | | -1988 | 1 | Nut | Mutter | 3 |
| 0560 | 35 | *80 84 253* | | -1988 NLS - USE 7979255 | 1 | Screw | Skruv | 5 |
| 0565 | 35 | 79 79 255 | | 500), 1989- | 1 | Screw | Skruv | 5 |
| 0570 | 35A | *80 29 779* | | -1987 NLS - USE 8151243 | 1 | Nut | Mutter | 5 |
| 0575 | 35A | 81 51 243 | | 1988- | 1 | Nut | Mutter | 5 |
| 0580 | 36 | 85 87 222 | | | 1 | Ground cable | Jordkabel | 6 |
| 0590 | 39 | 80 74 106 | | -1987 | 1 | Nut | Mutter | 5 |
| 0595 | 39 | 81 51 235 | | 1988- | 1 | Nut | Mutter | 5 |
| 0600 | 40 | 79 33 849 | | | 1 | Washer | Bricka | 5 |
| 0610 | 41 | 93 54 960 | | | 1 | Screw | Skruv | 5 |
| 0620 | 42 | 95 13 599 | | | 2 | Screw | Skruv | 5 |
| 0630 | 43 | 85 71 986 | | | 2 | Screw | Skruv | 5 |

500. Also valid for SE 1988B. Gäller även för SE 1988B.
700. Also available as exchange unit. Finns även som utbytesenhet.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-A10

Generator
Bosch 80A

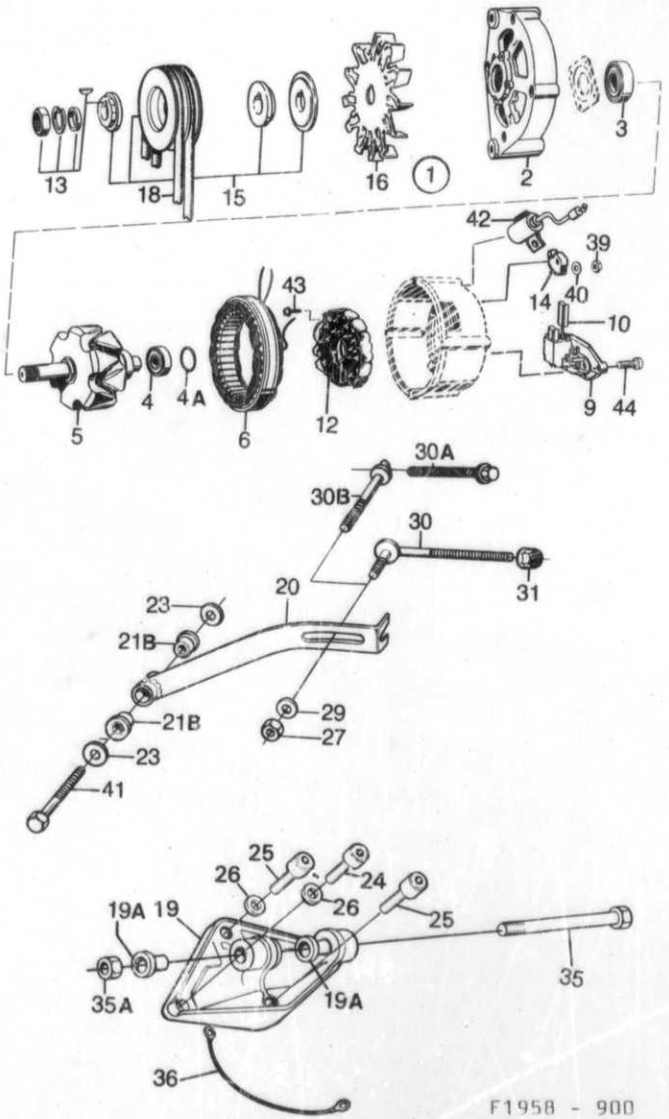


| 0175 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | *95 55 277* | | 8,700), (8587214) NLS - USE 9562752 | 1 | Generator | Generator | 5 |
| 0025 | 1 | 95 62 752 | | 49,700) | 1 | Generator | Generator | 5 |
| 0030 | 2 | *85 90 995* | | 48) NLS - USE 9513763 | 1 | .Bearing | .Drivlager | 6 |
| 0035 | 2 | 95 13 783 | | 49) | 1 | .Bearing | .Drivlager | 6 |
| 0040 | 3 | 85 90 911 | | 48) | 1 | .Ball bearing | .Kullager | 3 |
| 0045 | 3 | 95 13 128 | | 49) | 1 | .Ball bearing | .Kullager | 3 |
| 0050 | 4 | 85 90 929 | | 48) | 1 | .Ball bearing | .Kullager | 6 |
| 0055 | 4 | 95 13 185 | | 49) | 1 | .Ball bearing | .Kullager | 6 |
| 0060 | 4A | 85 90 986 | | 48) | 1 | .O-ring | .O-ring | 4 |
| 0065 | 4A | 95 13 193 | | 49) | 1 | .O-ring | .O-ring | 4 |
| 0070 | 5 | 85 90 903 | | 48) | 1 | .Rotor | .Rotor | 6 |
| 0075 | 5 | 95 13 144 | | 49) | 1 | .Rotor | .Rotor | 6 |
| 0080 | 6 | *85 90 887* | | 48) NLS - USE 9513169 | 1 | .Stator | .Stator | 6 |
| 0085 | 6 | 95 13 169 | | 49) | 1 | .Stator | .Stator | 6 |
| 0090 | 9 | 85 90 549 | | | 1 | .Regulator | .Regulator | 2 |
| 0100 | 10 | *85 72 638* | | 48) | 1 | ..Brush set | ..Borstsats | 3 |
| 0101 | | | | See page 3A-147, 2-G04 | | | | |
| 0101 | | | | NLS - USE 9515180 | | | | |
| 0105 | 10 | 95 15 180 | | 49) | 1 | ..Brush set | ..Borstsats | 3 |
| 0106 | | | | See page 3A-147, 2-G04 | | | | |
| 0110 | 12 | 95 55 293 | | 48), (8590945) | 1 | .Rectifier | .Likriktare | 6 |
| 0115 | 12 | 95 13 177 | | 49) | 1 | .Rectifier | .Likriktare | 6 |
| 0120 | 13 | 85 90 994 | | | 1 | .Part kit rotor | .Delsats rotor | 6 |
| 0125 | 14 | 85 93 329 | | B+ | 1 | .Protection | .Skydd | 6 |
| 0130 | 15 | *85 86 075* | | 48) NLS - USE 9563412 | 1 | Pulley | Remskiva | 5 |
| 0135 | 15 | 95 63 412 | | 49) | 1 | Pulley | Remskiva | 5 |
| 0140 | 16 | 85 87 248 | | | 1 | Fan disc | Fläktskiva | 6 |
| 0150 | 18 | 75 11 728 | | | 1 | V-belt | Kilrem | 1 |
| 0200 | 19 | 75 41 436 | | | 1 | Bracket | Fäste | 4 |
| 0230 | 19A | 75 41 451 | | | 2 | Rubber bushing | Gummibussning | 6 |
| 0280 | 20 | 75 06 272 | | | 1 | Stay | Stag | 5 |
| 0290 | 21B | 93 54 770 | | | 2 | Rubber bushing | Gummibussning | 4 |
| 0300 | 23 | 73 11 772 | | | 2 | Washer | Bricka | 5 |
| 0310 | 24 | 80 98 089 | | | 1 | Screw | Skruv | 5 |
| 0320 | 25 | 80 98 113 | | | 2 | Screw | Skruv | 5 |
| 0330 | 26 | 80 29 985 | | | 2 | Washer | Bricka | 5 |
| 0350 | 27 | *80 29 779* | | -1987 NLS - USE 8151243 | 1 | Nut | Mutter | 5 |
| 0360 | 27 | 81 51 243 | | 1988- | 1 | Nut | Mutter | 5 |
| 0380 | 29 | 80 73 108 | | -1988 | 1 | Washer | Bricka | 5 |
| 0400 | 30 | 75 12 106 | | -1988 | 1 | Adjustment screw | Justerskruv | 5 |
| 0401 | 30A | 73 99 769 | | 500), 1989- | 1 | Screw | Skruv | 5 |
| 0402 | 30B | 75 49 488 | | 500), 1989- | 1 | Adjustment screw | Justerskruv | 5 |
| 0410 | 31 | 79 71 922 | | -1988 | 1 | Nut | Mutter | 3 |
| 0440 | 35 | *80 84 253* | | -1988 NLS - USE 7979255 | 1 | Screw | Skruv | 5 |
| 0450 | 35 | 79 79 255 | | 1989- | 1 | Screw | Skruv | 5 |
| 0460 | 35A | *80 29 779* | | -1987 NLS - USE 8151243 | 1 | Nut | Mutter | 5 |
| 0465 | 35A | 81 51 243 | | 1988- | 1 | Nut | Mutter | 5 |
| 0470 | 36 | 85 87 222 | | | 1 | Ground cable | Jordkabel | 6 |
| 0480 | 39 | 80 74 106 | | -1987 | 1 | Nut | Mutter | 5 |
| 0485 | 39 | 81 51 235 | | 1988- | 1 | Nut | Mutter | 5 |
| 0490 | 40 | 79 33 849 | | | 1 | Washer | Bricka | 5 |
| 0500 | 41 | 93 54 960 | | | 1 | Screw | Skruv | 5 |
| 0510 | 42 | 95 23 184 | | 35) | 1 | Capacitor | Kondensator | 4 |
| 0520 | 43 | 95 13 599 | | | 6 | Screw | Skruv | 5 |
| 0530 | 44 | 85 71 986 | | | 2 | Screw | Skruv | 5 |

35. Ch G2012900–, G3010012–, G7017795–.
48. Ch –H2008686, –H3006971, –H7013654.
49. Ch H2008687–, H3006972– , H7013655–.
500. Also valid for SE 1988B. Gäller även för SE 1988B.
700. Also available as exchange unit. Finns även som utbytesenhet.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-A12 Starter motor Startmotor

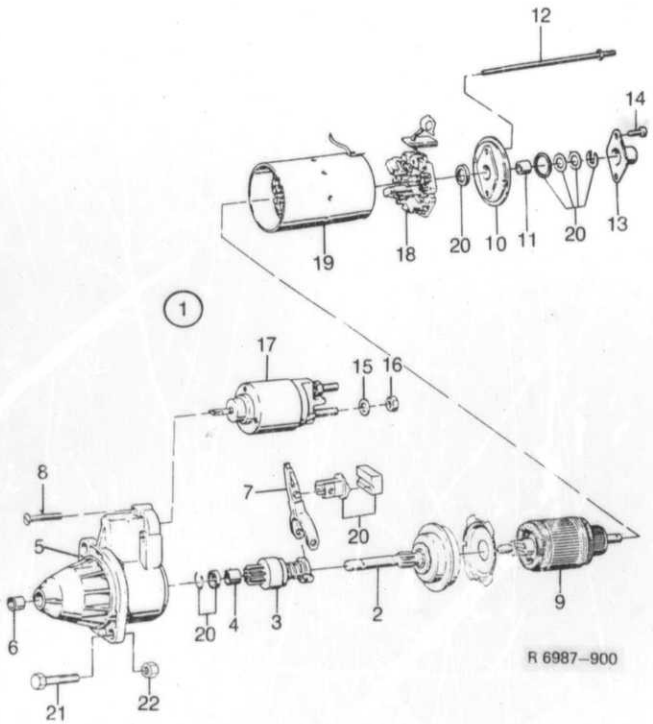


| 02:00 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | *93 76 799* | | 8,700) NLS - USE 4017299 | 1 | Starter motor | Startmotor | 5 |
| 0030 | 1 | *75 32 153* | | 9,91,700) NLS - USE 4017299 | 1 | Starter motor | Startmotor | 5 |
| 0035 | 1 | 40 17 299 | | 92,700) | 1 | Starter motor | Startmotor | 5 |
| 0040 | 2 | 75 27 716 | | 8) | 1 | .Planetary gear | .Planetväxel | 5 |
| 0050 | 2 | 75 35 255 | | 9) | 1 | .Planetary gear | .Planetväxel | 5 |
| 0060 | 3 | 75 27 724 | | 188) | 1 | .Drive gear | .Drev | 3 |
| 0070 | 3 | 41 60 099 | | 189) | 1 | .Drive gear | .Drev | 3 |
| 0080 | 4 | 75 27 732 | | | 2 | .Bearing bushing | .Lagerbussning | 5 |
| 0100 | 5 | 75 27 740 | | 8) | 1 | .Casing | .Hus | 6 |
| 0110 | 5 | 75 35 263 | | 9,188) | 1 | .Gear house | .Drevhus | 6 |
| 0115 | 5 | 41 60 149 | | 189) | 1 | .Gear house | .Drevhus | 6 |
| 0120 | 6 | 75 27 757 | | | 1 | .Bearing bushing | .Lagerbussning | 6 |
| 0140 | 7 | 75 27 765 | | | 1 | .Engagement lever | .Kopplingsarm | 6 |
| 0160 | 8 | 75 27 773 | | 8) | 3 | .Screw | .Skruv | 5 |
| 0170 | 8 | 75 35 271 | | 9) | 3 | .Screw | .Skruv | 5 |
| 0180 | 9 | *75 27 781* | | 8) NLS - USE 4160123 | 1 | .Rotor | .Rotor | 5 |
| 0190 | 9 | *75 35 289* | | 9,188) NLS - USE 4160123 | 1 | .Rotor | .Rotor | 5 |
| 0195 | 9 | 41 60 123 | | 189) | 1 | .Rotor | .Rotor | 5 |
| 0200 | 10 | 75 27 799 | | 8) | 1 | .Ball bearing | .Kullager | 6 |
| 0210 | 10 | 75 35 297 | | 9) | 1 | .Ball bearing | .Kullager | 6 |
| 0220 | 11 | 75 27 807 | | | 1 | .Bearing bushing | .Lagerbussning | 3 |
| 0240 | 12 | 75 27 815 | | 8) | 2 | .Screw | .Skruv | 5 |
| 0250 | 12 | 75 35 305 | | 9) | 2 | .Screw | .Skruv | 5 |
| 0260 | 13 | *75 27 823* | | 8) NLS - USE 7535313 | 1 | .Cap | .Kapsel | 6 |
| 0270 | 13 | 75 35 313 | | 9) | 1 | .Cap | .Kapsel | 6 |
| 0280 | 14 | *75 27 831* | | 8) NLS - USE 7535321 | 2 | .Screw | .Skruv | 5 |
| 0290 | 14 | 75 35 321 | | 9) | 2 | .Screw | .Skruv | 5 |
| 0300 | 15 | 75 27 849 | | | 1 | .Washer | .Bricka | 5 |
| 0320 | 16 | 78 14 619 | | 8) | 1 | .Nut | .Mutter | 5 |
| 0330 | 16 | 75 35 339 | | 9) | 1 | .Nut | .Mutter | 5 |
| 0340 | 17 | 75 27 856 | | | 1 | .Actuator solenoid | .Manövermagnet | 3 |
| 0360 | 18 | 75 27 864 | | | 1 | .Plate | .Platta | 6 |
| 0380 | 19 | 75 27 872 | | | 1 | .Casing | .Hus | 6 |
| 0400 | 20 | 75 27 880 | | | 1 | .Kit | .Sats | 6 |
| 0420 | 21 | 79 76 939 | | | 2 | Screw | Skruv | 5 |
| 0440 | 22 | 79 75 220 | | | 2 | Nut | Mutter | 5 |

8. Ch –G2001761, –G3000801, –G7003780.
9. Ch G2001762–, G3000802–, G7003781–.
91. Ch –K3014422, –K7017175.
92. Ch K3014423–, K7017176–.
188. Ch –K3014422, –K7017175.
189. Ch K3014423–, K7017176–.
700. Also available as exchange unit. Finns även som utbytesenhet.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 5-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX



| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

Ignition system

# 2-A14 Ignition coil, cables, spark plugs etc

Tändsystem

**Tändspole, kablar, tändstift etc**

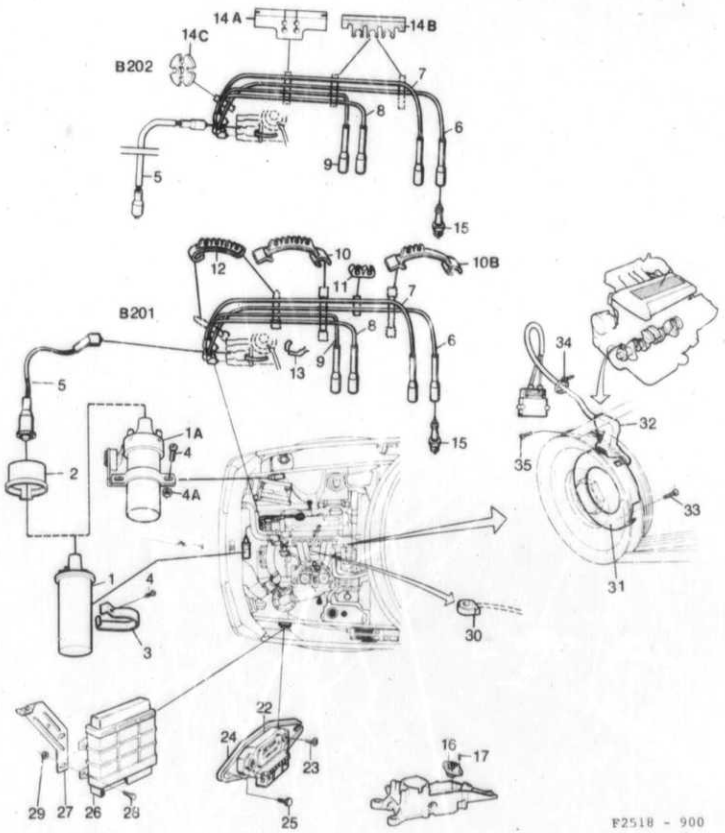


| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | 85 73 834 | | | 1 | Ignition coil | Tändspole | 4 |
| 1A | 75 38 796 | | 1988-, B202 I | 1 | Ignition coil | Tändspole | 4 |
| 2 | 85 66 374 | | | 1 | Protecting casing | Skyddskåpa | 4 |
| 3 | 85 52 598 | | | 1 | Bracket | Fäste | 5 |
| 4 | 80 19 945 | | | 1 | Screw | Skruv | 5 |
| 4A | 80 82 943 | | 1988-, B202 I, EZK | 2 | Screw | Skruv | 5 |
| 5 | 79 71 922 | | 1988-, B202 I, EZK | 2 | Nut | Mutter | 3 |
| 5 | 75 11 165 | | B201 I | 1 | Ignition lead<br>ignition coil | Tändkabel<br>tändspole | 3 |
| 5 | 75 11 157 | S | 181), B201 TURBO | 1 | Ignition lead<br>ignition coil | Tändkabel<br>tändspole | 3 |
| 5 | 75 10 548 | S | -1987, B202 | 1 | Ignition lead<br>ignition coil | Tändkabel<br>tändspole | 3 |
| 5 | 75 10 548 | S | 1988-, B202 TURBO | 1 | Ignition lead<br>ignition coil | Tändkabel<br>tändspole | 3 |
| 5 | 93 90 840 | S | 1988-, B202 I, EZK | 1 | Ignition lead<br>ignition coil | Tändkabel<br>tändspole | 3 |
| 6 | *93 55 884* | | -1986, B201 I<br>NLS - USE 7561061 | 1 | Ignition lead<br>cylinder 1 | Tändkabel<br>cylinder 1 | 3 |
| 6 | *93 55 926* | S | 182), -1986, B201 TURBO<br>NLS - USE 7561061 | 1 | Ignition lead<br>cylinder 1 | Tändkabel<br>cylinder 1 | 3 |
| 6 | 75 61 061 | | 1987-, B201 | 1 | Ignition lead<br>cylinder 1 | Tändkabel<br>cylinder 1 | 3 |
| 6 | 75 04 483 | S | B202 | 1 | Ignition lead<br>cylinder 1 | Tändkabel<br>cylinder 1 | 3 |
| 7 | *93 55 892* | | -1986, B201 I<br>NLS - USE 7561079 | 1 | Ignition lead<br>cylinder 2 | Tändkabel<br>cylinder 2 | 3 |
| 7 | *93 55 934* | S | 183), -1986, B201 TURBO<br>NLS - USE 7561079 | 1 | Ignition lead<br>cylinder 2 | Tändkabel<br>cylinder 2 | 3 |
| 7 | 75 61 079 | | 1987-, B201 | 1 | Ignition lead<br>cylinder 2 | Tändkabel<br>cylinder 2 | 3 |
| 7 | 75 04 491 | S | B202 | 1 | Ignition lead<br>cylinder 2 | Tändkabel<br>cylinder 2 | 3 |
| 8 | *93 55 900* | | -1986, B201<br>NLS - USE 7561087 | 1 | Ignition lead<br>cylinder 3 | Tändkabel<br>cylinder 3 | 3 |
| 8 | *93 55 942* | S | 184), -1986, B201 TURBO<br>NLS - USE 7561087 | 1 | Ignition lead<br>cylinder 3 | Tändkabel<br>cylinder 3 | 3 |
| 8 | 75 61 087 | | 1987-, B201 | 1 | Ignition lead<br>cylinder 3 | Tändkabel<br>cylinder 3 | 3 |
| 8 | 75 04 509 | S | B202 | 1 | Ignition lead<br>cylinder 3 | Tändkabel<br>cylinder 3 | 3 |
| 9 | *93 55 918* | | -1986, B201<br>NLS - USE 7561095 | 1 | Ignition lead<br>cylinder 4 | Tändkabel<br>cylinder 4 | 3 |
| 9 | *93 55 959* | S | 185), -1986, B201 TURBO<br>NLS - USE 7561095 | 1 | Ignition lead<br>cylinder 4 | Tändkabel<br>cylinder 4 | 3 |
| 9 | 75 61 095 | | 1987-, B201 | 1 | Ignition lead<br>cylinder 4 | Tändkabel<br>cylinder 4 | 3 |
| 9 | 75 04 517 | S | B202 | 1 | Ignition lead<br>cylinder 4 | Tändkabel<br>cylinder 4 | 3 |
| 10 | 93 58 086 | | | 1 | Retainer | Hållare | 2 |
| 10B | 93 58 094 | | | 1 | Retainer | Hållare | 2 |
| 11 | 93 53 673 | | | 1 | Bracket | Hållare | 2 |

181. Alternative for 75 11 165. Alternativ för 75 11 165.
182. Alternative for 93 55 884. Alternativ för 93 55 884.
183. Alternative for 93 55 892. Alternativ för 93 55 892.
184. Alternative for 93 55 900. Alternativ för 93 55 900.
185. Alternative for 93 55 918. Alternativ för 93 55 918.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |


Ignition system

# 2--A16

## *Ignition coil, cables, spark plugs etc*

Tändsystem

## *Tändspole, kablar, tändstift etc*

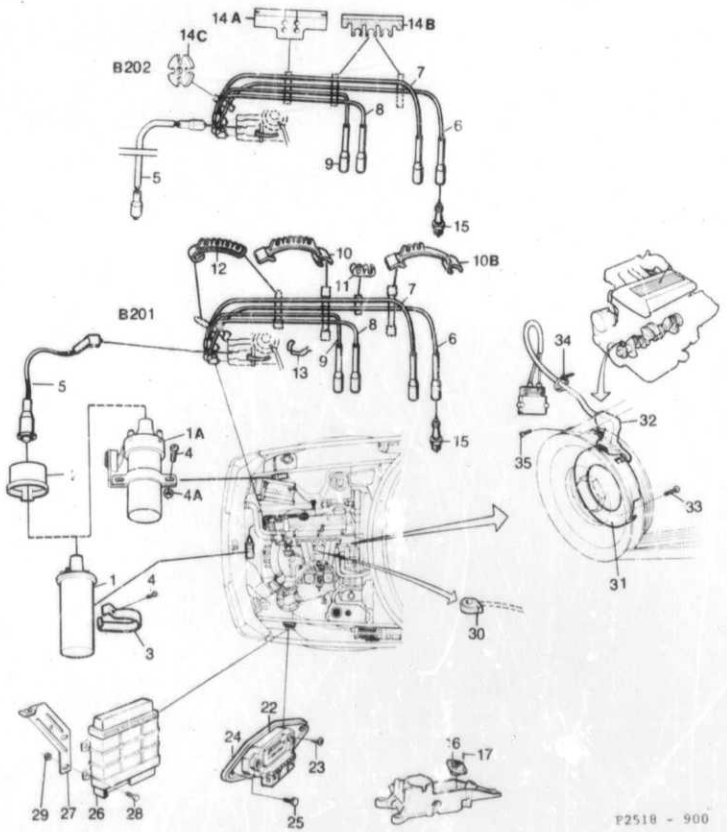


F2518 - 900

| 0300 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0420 | 12 | 93 58 102 | | | 2 | Retainer | Hållare | 2 |
| 0430 | 13 | 93 53 905 | | TURBO | 1 | Clamp | Klammer | 6 |
| 0440 | | | | | | | | |
| 0450 | 14A | 75 04 525 | | B202 | 1 | Retainer | Hållare | 2 |
| 0460 | 14B | 75 03 032 | | 59), B202 | 2 | Retainer | Hållare | 2 |
| 0470 | 14B | 75 85 640 | | 60), B202 | 2 | Retainer | Hållare | 2 |
| 0480 | 14C | 75 06 793 | | B202 | 1 | Retainer | Hållare | 2 |
| 0490 | | | | | | | | |
| 0520 | 15 | 83 50 076 | S | B201 I, C, NGK BP6ES | 4 | Spark plug | Tändstift | 1 |
| 0540 | 15 | 88 19 328 | | B201 TURBO, NGK BP7EV | 4 | Spark plug | Tändstift | 1 |
| 0545 | | | | | | | | |
| 0600 | 15 | 88 19 294 | | -1988, B202I, NGK BCP6ES | 4 | Spark plug | Tändstift | 1 |
| 0640 | 15 | 91 16 385 | | 500), 1989-, B202 I, NGK BCP5ES | 4 | Spark plug | Tändstift | 1 |
| 0650 | | | | | | | | |
| 0660 | | | | | | | | |
| 0661 | 15 | 88 19 302 | | B202 TURBO, NGK BCP7EV | 4 | Spark plug | Tändstift | 1 |
| 0662 | 15 | 86 19 310 | | B202 TURBO, US, NGK BCP6EV | 4 | Spark plug | Tändstift | 1 |
| 0663 | | | | | | | | |
| 0664 | | | | | | | | |
| 0670 | 16 | 85 67 505 | | | 1 | Contact starter switch | Kontakt tändningslås | 4 |
| 0680 | | | | | | | | |
| 0690 | 17 | 79 34 300 | | | 2 | Screw | Skruv | 5 |
| 0700 | 22 | 93 90 220 | | -1988 | 1 | Power unit | Effektsteg | 5 |
| 0710 | 22 | 89 80 534 | | 500), 1989- | 1 | Power unit | Effektsteg | 5 |
| 0720 | 22 | *75 03 600* | | -1987, B202 I, US NLS - USE 4023149 | 1 | Power unit | Effektsteg | 5 |
| 0730 | 23 | 79 [illegible] 381 | | -1988 | 2 | Screw | Skruv | 5 |
| 0740 | 24 | 85 [illegible] 816 | | -1988 | 1 | Cooling body | Kylkropp | 5 |
| 0750 | 25 | 79 73 [illegible]75 | | -1988 | 2 | Screw | Skruv | 5 |
| 0760 | 25 | 79 72 672 | | 500), 1989- | 2 | Screw | Skruv | 5 |
| 0770 | 26 | 75 03 592 | | 64,700), -1987, B202 I, EZK | 1 | Electronic unit | Elektronikenhet | 5 |
| 0780 | | | | | | | | |
| 0790 | 26 | 75 88 544 | | 64,700), 1988, B202 I, EZK | 1 | Electronic unit | Elektronikenhet | 5 |
| 0800 | | | | | | | | |
| 0810 | 26 | 74 84 504 | | 64,500,700), 1989-, B202 I, EZK | 1 | Electronic unit | Elektronikenhet | 5 |
| 0820 | | | | | | | | |
| 0830 | 26 | 74 84 512 | | 77,700),1989- B202 I, M, EZK | 1 | Electronic unit | Elektronikenhet | 5 |
| 0840 | | | | | | | | |
| 0850 | 26 | 74 84 520 | | 77,700),1989- B202 I, A, EZK | 1 | Electronic unit | Elektronikenhet | 5 |
| 0860 | | | | | | | | |
| 0870 | 27 | 75 25 744 | | B202, I | 2 | Bracket | Konsol | 6 |
| 0880 | 28 | 80 19 713 | | B202, I | 6 | Screw | Skruv | 5 |
| 0890 | 29 | 79 73 365 | | B202, I | 6 | Nut | Mutter | 5 |
| 0900 | 30 | | | See page 2-129, 1-G10 | | Knock sensor | Knacksensor | |
| 0910 | | | | | | | | |
| 0920 | 31 | *74 86 814* | | 1989-,64,117,500), b202I NLS - USE 9117979 | 1 | Aperture disc | Bländarskiva | 4 |
| 0930 | 31 | 91 17 979 | | 118), B202 I | 1 | Aperture disc | Bländarskiva | 4 |
| 0940 | 32 | 74 84 546 | | 64,500), 1989-, B202 I | 1 | Sensor | Givare | 4 |
| 0950 | | | | | | | | |
| 0960 | 33 | *74 82 490* | | 989-,64,93,500), B202 I NLS - USE 9127440 | 3 | Screw | Skruv | 5 |
| 0960 | | | | | | | | |

59. Engine --J017250.
60. Engine J017251--.
64. With catalytic converter. Med katalytisk reaktor.
77. Without catalytic converter. Utan katalytisk reaktor.
93. Engine --K055967.
117. Engine --K29841.
118. Engine K29842--.
500. Also valid for SE 1988B. Gäller även för SE 1988B.
700. Also available as exchange unit. Finns även som utbytesenhet.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

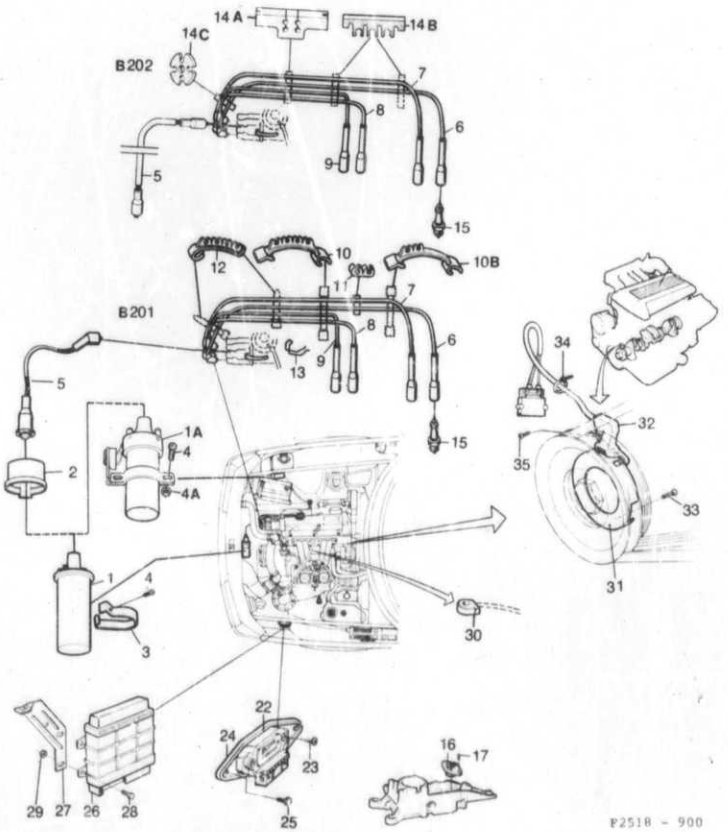


| 0360 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0970 | 33 | *91 14 455* | | 64,94), B202 I NLS - USE 9127440 | 3 | Screw | Skruv | 5 |
| 0980 | 34 | *18 00 259* | | 64,500), 1983-, B202 I NLS - USE 8153611 | 1 | Tensioning band | Spännband | 5 |
| 0990 | 35 | *75 87 298* | | 64,500), 1989-, B202 I NLS - USE 9127440 | 2 | Screw | Skruv | 5 |
| 1010 | | 93 37 346 | | See page 3A-147, 2-G04 | X | Kit ignition cables | Tändkabelsats | |
| 1020 | | 88 17 314 | | B202 | X | Kit ignition cables | Tändkabelsats | 3 |
| 1030 | | | | See page 3A-147, 2-G04 | | | | |
| 1050 | | 88 19 278 | | B201 I, C | X | Spark plug kit | Tändstiftsats | 1 |
| 1070 | | | | See page 3A-151, 2-G08 | | | | |

64. With catalytic converter. Med katalytisk reaktor.
94. Engine K055968-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

Ignition system

# 2-A20 *Ignition distributor* *B201*

Tändsystem

*Tändfördelare* *B201*

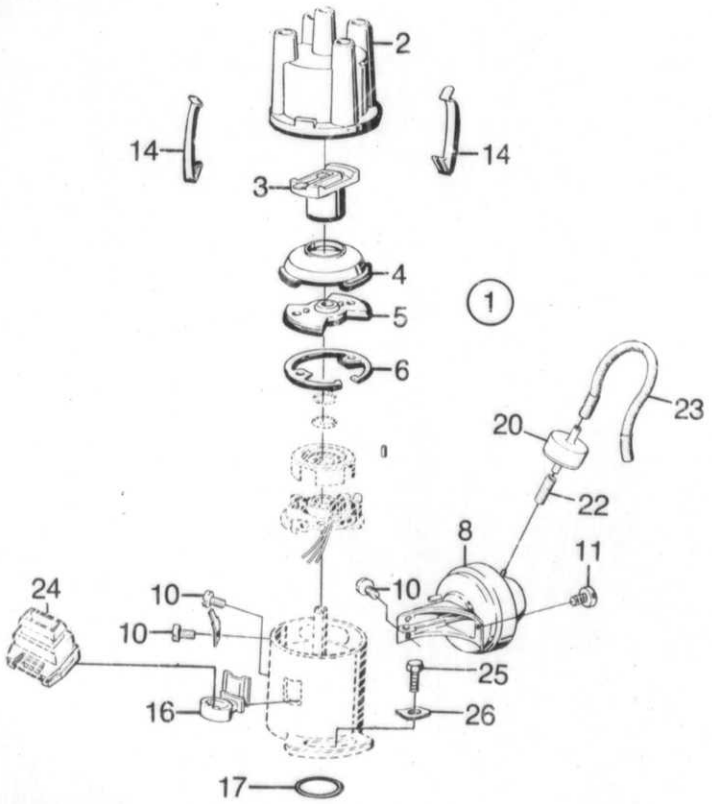


R 9398 - 900

| 0430 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 01 570 | | -1987 | 1 | Ignition distributor | Tändfördelare | 5 |
| 0020 | 1 | 74 80 593 | | 1988-,62) | 1 | Ignition distributor | Tändfördelare | 5 |
| 0030 | 1 | 74 80 593 | | 63) | 1 | Ignition distributor | Tändfördelare | 5 |
| 0040 | 1 | 74 80 593 | | 73), ME | 1 | Ignition distributor | Tändfördelare | 5 |
| 0050 | 1 | 74 85 774 | | 63), SE, EU | 1 | Ignition distributor | Tändfördelare | 5 |
| 0060 | 1 | 74 85 774 | | 74), ME | 1 | Ignition distributor | Tändfördelare | 5 |
| 0070 | 1 | 93 52 378 | | -1987, I, US | 1 | Ignition distributor | Tändfördelare | 5 |
| 0080 | 1 | 74 80 585 | | 1988-,62), I, US | 1 | Ignition distributor | Tändfördelare | 5 |
| 0090 | 1 | 74 85 766 | | 63,64,65), I, EU, US | 1 | Ignition distributor | Tändfördelare | 5 |
| 0100 | 1 | 74 80 585 | | 64,66,67), I, EU, US | 1 | Ignition distributor | Tändfördelare | 5 |
| 0110 | 1 | 74 85 766 | | 64,68), I, EU, US | 1 | Ignition distributor | Tändfördelare | 5 |
| 0120 | 1 | 75 62 184 | | TURBO | 1 | Ignition distributor | Tändfördelare | 5 |
| 0130 | 1 | 74 80 601 | | 1988-,62), TURBO, SE, EU | 1 | Ignition distributor | Tändfördelare | 5 |
| 0135 | 1 | 74 80 601 | | -1988,77), TURBO, SE, EU | 1 | Ignition distributor | Tändfördelare | 5 |
| 0137 | 1 | 74 85 782 | | 77,500), 1989-, TURBO, SE, EU | 1 | Ignition distributor | Tändfördelare | 5 |
| 0138 | | | | | | | | |
| 0140 | 1 | 74 85 782 | | 63,64,65) TURBO SE,ME,EU | 1 | Ignition distributor | Tändfördelare | 5 |
| 0150 | 1 | 74 80 601 | | 64,66,69) TURBO SE,ME,EU | 1 | Ignition distributor | Tändfördelare | 5 |
| 0160 | 1 | 74 85 782 | | 64,70), TURBO, SE, ME,EU | 1 | Ignition distributor | Tändfördelare | 5 |
| 0170 | | | | | | | | |
| 0180 | 2 | 75 01 216 | | | 1 | .Distributor cap | .Fördelarlock | 2 |
| 0190 | 3 | 93 55 488 | | | 1 | .Rotor | .Rotor | 3 |
| 0200 | 4 | 93 51 610 | | | 1 | .Dust cover | .Dammskydd | 3 |
| 0210 | 5 | *93 55 496* | | NLS - USE 7564800 | 1 | .Cap | .Överfall | 5 |
| 0220 | 5 | 75 64 800 | | 139) | 1 | .Bearing shield | .Lagersköld | 5 |
| 0230 | 6 | *93 51 636* | | NLS | 1 | .Lock ring | .Låsring | 5 |
| 0240 | 8 | 75 18 541 | | 140) | 1 | .Regulator | .Regulator | 4 |
| 0250 | 8 | 93 55 512 | | 141) | 1 | .Regulator | .Regulator | 4 |
| 0260 | 8 | 75 01 224 | | 142) | 1 | .Regulator | .Regulator | 4 |
| 0270 | 10 | 93 55 470 | | | 4 | .Screw | .Skruv | 5 |
| 0280 | 11 | 93 05 053 | | | 1 | .Screw | .Skruv | 5 |
| 0290 | 14 | 93 51 594 | | | 2 | .Spring | .Fjäder | 5 |
| 0300 | 16 | 93 55 504 | | -1987 | 1 | .Connection | .Kabelanslutning | 6 |
| 0310 | 17 | 93 51 750 | | | 1 | Seal | Tätning | 6 |
| 0320 | 20 | 93 44 276 | | 38)-1988, SE, CH, ME, EU, TURBO A, SE, AU, CH | 1 | Valve<br>brown, 2 sec. | Ventil<br>brun, 2 sek. | 2 |
| 0341 | 20 | 93 44 276 | | 38)-1988, SE, ME, TURBO A, SE | 1 | Valve<br>brown, 2 sec. | Ventil<br>brun, 2 sek. | 2 |
| 0343 | 20 | 93 44 276 | | 1989-, CH, EU, TURBO A, AU, CH | 1 | Valve<br>brown, 2 sec. | Ventil<br>brun, 2 sek. | 2 |
| 0350 | 22 | 91 36 243 | | -1988, L=30 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0360 | 22 | 91 36 243 | | -1988, I, SE,ME, L=30 MM, TURBO A, SE | 1 | Vaccum hose | Vakuumslang | 5 |
| 0370 | 22 | 91 36 243 | | 1989-, L=30 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0380 | 23 | *93 09 303* | | NLS | 1 | Hose | Slang | 5 |

38. Ch G2020301-, G3014950-, G7022489-.
62. Engine -J027456.
63. Engine J027457-.
64. With catalytic converter. Med katalytisk reaktor.
65. Engine -J065780.
66. Engine J065781-.
67. Engine -J073751.
68. Engine J073752-.
69. Engine -J075910.
70. Engine J075911-.
73. Engine -J098042.
74. Engine J098043-.
77. Without catalytic converter. Utan katalytisk reaktor.
139. Part of 75 62 184. Del av 75 62 184.
140. Part of 74 85 774 and 74 80 593. Del av 74 85 774 och 74 80 593.
141. Part of 74 85 766 and 74 80 585. Del av 74 85 766 och 74 80 585.
142. Part of 74 85 782 and 74 80 601. Del av 74 85 782 och 74 80 601.
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

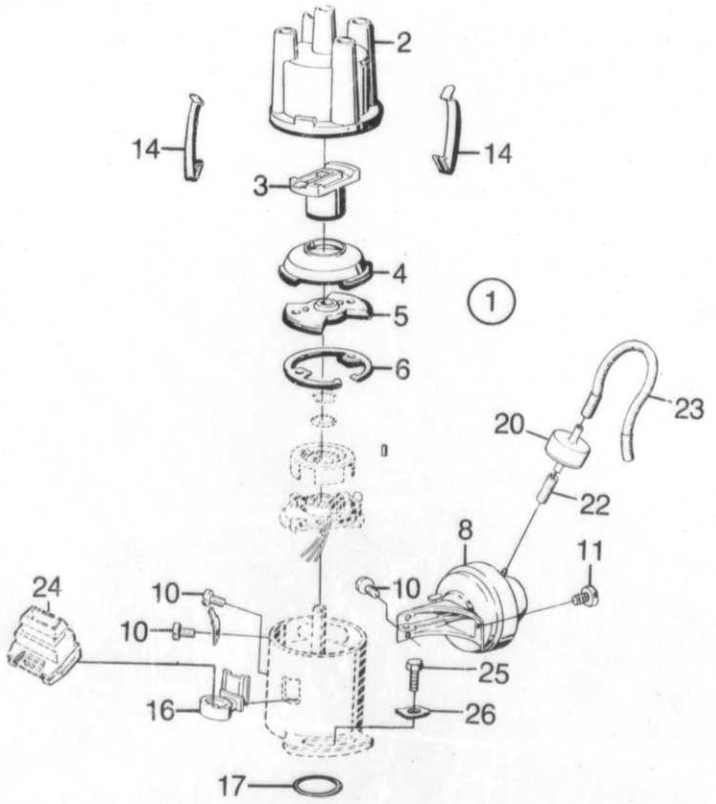


R 9398 - 900

| | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0390 | 24 | 85 74 097 | | -1987 | | Contact housing | Kontakthus | 4 |
| 0400 | | | | See page 3B-039, 3-B16 | | | | |
| 0410 | 24 | 85 93 907 | | 1988- | | Contact housing | Kontakthus | 4 |
| 0420 | | | | See page 3B-061, 3-C14 | | | | |
| 0425 | 24 | 93 21 761 | | 190), 1988- | | Connector housing | Kontakthus | 4 |
| 0430 | 25 | *80 19 929* | | NLS - USE 9166299 | 3 | Screw | Skruv | 5 |
| 0440 | 26 | 93 08 990 | | | 3 | Washer | Bricka | 6 |
| 0450 | | 93 59 605 | | See page 3A-147, 2-G04 | X | Repair kit | Reparationssats | 5 |
| 0470 | | 74 86 822 | | 1988-, SE, EU | X | Repair kit | Reparationssats | 5 |
| 0480 | | | | See page 3A-147, 2-G04 | | - | | |
| 0490 | | | | | | | | |
| 0500 | | 91 36 243 | | L=5000 MM | X | Vaccum hose | Vakuumslang | 5 |

190. For ignition distributor 74 85 774. För fördelare 74 85 774.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

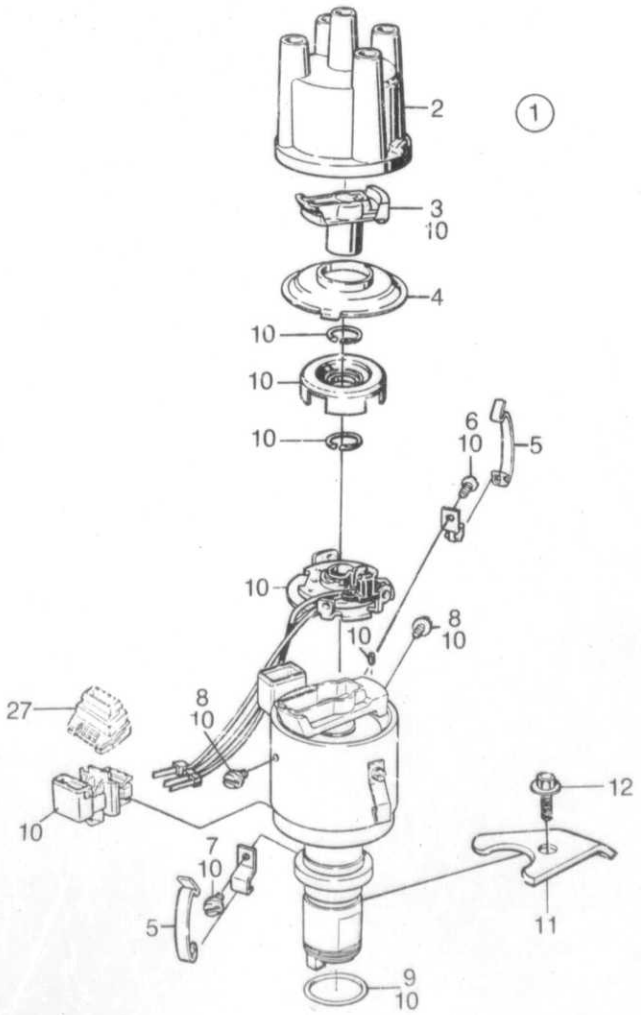


F0478 - 900

| 0435 | Pos | Part No/Art nr | K S- | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 75 61 798 | | -1987, US | 1 | Ignition distributor | Tändfördelare | 5 |
| 0030 | 1 | 74 81 385 | | 1988, SE, EU, US, ME | 1 | Ignition distributor | Tändfördelare | 5 |
| 0031 | 1 | 74 81 385 | | 1989-, EU, ME | 1 | Ignition distributor | Tändfördelare | 5 |
| 0032 | 1 | 74 84 439 | | 64,500), 1989- | 1 | Ignition distributor | Tändfördelare | 5 |
| 0060 | 2 | 75 01 216 | | | 1 | .Distributor cap | .Fördelarlock | 2 |
| 0080 | 3 | 75 64 420 | | | 1 | .Rotor | .Rotor | 3 |
| 0100 | 4 | 75 19 135 | | 1988-, SE, EU, US, ME | 1 | .Cover | .Lock | 6 |
| 0110 | 5 | 75 19 085 | | | 2 | .Spring | .Fjäder | 5 |
| 0200 | 6 | 74 84 868 | | 1988-, SE, EU, US, ME | 1 | .Screw | .Skruv | 5 |
| 0220 | 7 | 74 84 884 | | 1988-, SE, EU, US, ME | 1 | .Screw | .Skruv | 5 |
| 0240 | 8 | 74 84 876 | | 1988-, SE, EU, US, ME | 2 | .Screw | .Skruv | 5 |
| 0245 | 9 | 75 19 143 | | | 1 | .O-ring | .O-ring | 6 |
| 0250 | 10 | 74 84 892 | | 143), 1988-, SE, EU, US ME | X | Repair kit | Reparationssats | 5 |
| 0260 | | | | See page 3A-151, 2-G08 | | | | |
| 0270 | | | | | | | | |
| 0300 | 11 | 83 62 287 | | | 1 | Bracket | Hållare | 5 |
| 0320 | 12 | *80 82 950* | | NLS - USE 9166323 | 1 | Screw | Skruv | 5 |
| 0470 | 27 | 85 74 097 | | -1987 | | Contact housing | Kontakthus | 4 |
| 0475 | | | | See page 3B-039, 3-B16 | | | | |
| 0480 | 27 | 85 93 907 | | 1988- | | Contact housing | Kontakthus | 4 |
| 0485 | | | | See page 3B-061, 3-C14 | | | | |

64. With catalytic converter. Med katalytisk reaktor.
143. Part of 74 81 385. Del av 74 81 385.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-B02

## Ignition distributor
## B202 Turbo

## Tändfördelare
## B202 Turbo

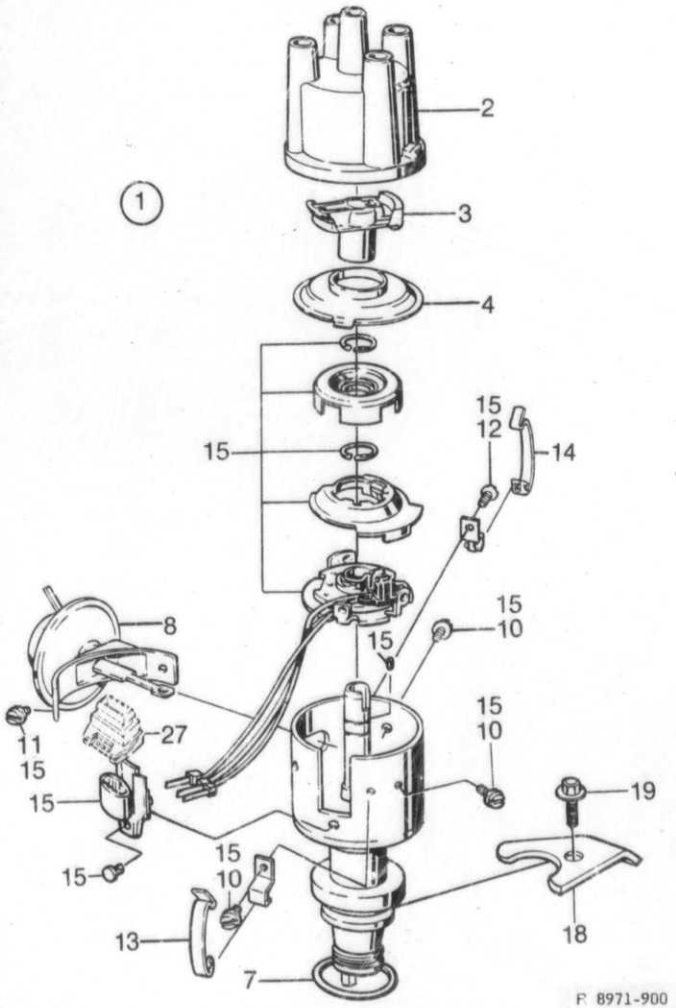


F 8971-900

| 0440 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | *75 61 806* | | 71) NLS - USE 7481393, 8579955, 8593907 | 1 | Ignition distributor | Tändfördelare | 5 |
| 0022 | 1 | *75 61 806* | | 72) NLS - USE 7481393, 8579955, 8593907 | 1 | Ignition distributor | Tändfördelare | 5 |
| 0025 | 1 | 74 81 393 | | 72), SE, EU, ME, US | 1 | Ignition distributor | Tändfördelare | 5 |
| 0060 | 2 | 75 01 216 | | | 1 | .Distributor cap | .Fördelarlock | 2 |
| 0080 | 3 | 75 64 420 | | | 1 | .Rotor | .Rotor | 3 |
| 0100 | 4 | 75 19 135 | | 144) | 1 | .Cover | .Lock | 6 |
| 0160 | 7 | 75 19 143 | | | 1 | .O-ring | .O-ring | 6 |
| 0180 | 8 | 75 64 438 | | | 1 | .Regulator | .Regulator | 4 |
| 0200 | 10 | 75 19 119 | | | 3 | .Screw | .Skruv | 5 |
| 0220 | 11 | 75 19 127 | | 144) | 1 | .Screw | .Skruv | 5 |
| 0230 | 11 | 91 19 561 | | 145) | 1 | .Screw | .Skruv | 5 |
| 0240 | 12 | 75 19 101 | | | 1 | .Screw | .Skruv | 5 |
| 0260 | 13 | 75 19 085 | | 144) | 1 | .Spring | .Fjäder | 5 |
| 0265 | 13 | 75 19 085 | | 145) | 2 | .Spring | .Fjäder | 5 |
| 0280 | 14 | 93 09 956 | | 144) | 1 | .Spring | .Fjäder | 6 |
| 0290 | 15 | 75 88 312 | | 144) | X | .Repair kit | .Reparationssats | 5 |
| 0295 | | | | See page 3A-147, 2-G04 | | | | |
| 0300 | 18 | 83 62 287 | | | 1 | Bracket | Hållare | 5 |
| 0320 | 19 | *80 82 950* | | NLS - USE 9166323 | 1 | Screw | Skruv | 5 |
| 0460 | 26 | *75 86 509* | | See page 3A-147, 2-G04 | X | Repair kit | Reparationssats | 5 |
| 0460 | | | | NLS | | | | |
| 0470 | 27 | 85 74 097 | | -1987 | | Contact housing | Kontakthus | 4 |
| 0475 | | | | See page 3B-039, 3-B16 | | | | |
| 0480 | 27 | 85 93 907 | | 1988- | | Contact housing | Kontakthus | 4 |
| 0485 | | | | See page 3B-061, 3-C14 | | | | |

71. Engine --J088764.
72. Engine J088765--.
144. Part of 75 61 806. Del av 75 61 806.
145. Part of 74 81 393. Del av 74 81 393.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-B04

## Headlamp
## Strålkastare

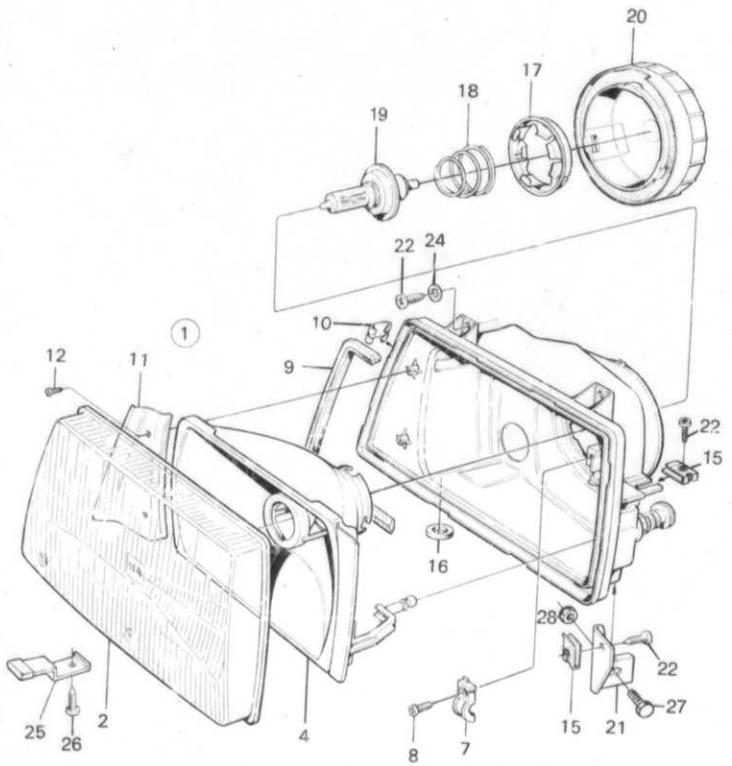


R 6991–900

| 0450 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 85 39 595 | | LH, HELLA | 1 | Headlamp | Strålkastare | |
| 0040 | 1 | 85 39 603 | | RH, HELLA | 1 | Headlamp | Strålkastare | |
| 0060 | 1 | 85 41 575 | | 146), LH | 1 | Headlamp | Strålkastare | |
| 0080 | 1 | 85 41 583 | | 146), RH | 1 | Headlamp | Strålkastare | |
| 0100 | 2 | 85 39 611 | | LH | 1 | .Glass | .Strålkastarglas | 2 |
| 0120 | 2 | 85 39 629 | | RH | 1 | .Glass | .Strålkastarglas | 2 |
| 0140 | 2 | 85 52 390 | | 146), LH | 1 | .Glass | .Strålkastarglas | 2 |
| 0160 | 2 | 85 52 408 | | 146), RH | 1 | .Glass | .Strålkastarglas | 2 |
| 0260 | 4 | 85 50 857 | | LH | 1 | .Reflector | .Reflektor | 3 |
| 0280 | 4 | 85 50 865 | | RH | 1 | .Reflector | .Reflektor | 3 |
| 0300 | 4 | 95 52 639 | | 146), LH | 1 | .Reflector | .Reflektor | 3 |
| 0320 | 4 | 95 52 647 | | 146), RH | 1 | .Reflector | .Reflektor | 3 |
| 0340 | 7 | 85 50 915 | | LH | 1 | .Cap | .Överfall | 6 |
| 0350 | 7 | 85 50 949 | | RH | 1 | .Cap | .Överfall | 6 |
| 0360 | 8 | 85 50 923 | | | 2 | .Screw | .Skruv | 5 |
| 0380 | 9 | 85 65 947 | | | 2 | .Seal | .Tätning | 3 |
| 0400 | 10 | 85 39 702 | | | 16 | .Clip | .Clips | 5 |
| 0405 | 11 | 85 50 873 | | LH | 1 | .Plate | .Blände | 5 |
| 0410 | 11 | 85 50 881 | | RH | 1 | .Plate | .Blände | 5 |
| 0415 | 12 | 79 22 727 | | | 2 | .Screw | .Skruv | 5 |
| 0420 | 15 | 85 50 824 | | | 2 | .Clip | .Clips | 3 |
| 0440 | 16 | 85 50 840 | | | 2 | .Bushing | .Bussning | 3 |
| 0460 | 17 | 85 10 836 | | | 2 | .Ring | .Ring | 3 |
| 0480 | 18 | *85 10 869* | | NLS - USE 8510836 | 2 | ..Spring | ..Fjäder | 3 |
| 0500 | 19 | 85 10 851 | | 40/238 210 009 | 2 | .Bulb | .Glödlampa | 9 |
| 0520 | 20 | 85 39 710 | | | 2 | Sealing cover | Tätningslock | 4 |
| 0540 | 21 | 85 50 808 | | LH | 1 | Attaching bracket | Fästvinkel | |
| 0560 | 21 | 85 50 816 | | RH | 1 | Attaching bracket | Fästvinkel | 6 |
| 0580 | 22 | 79 22 438 | | | 8 | Screw | Skruv | 5 |
| 0620 | 24 | 80 29 951 | | | 4 | Washer | Bricka | 5 |
| 0640 | 25 | 85 71 614 | | | 2 | Stop | Anslag | 3 |
| 0660 | 26 | 79 22 909 | | | 2 | Screw | Skruv | 5 |
| 0680 | 27 | 79 69 223 | | | 2 | Screw | Skruv | 5 |
| 0700 | 28 | 79 71 658 | | | 2 | Nut | Mutter | 5 |

146. For left hand traffic. För vänstertrafik.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX



| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-E04 |

Lighting

# 2-B06 Headlamp 36)

Belysning

## Strålkastare 36)

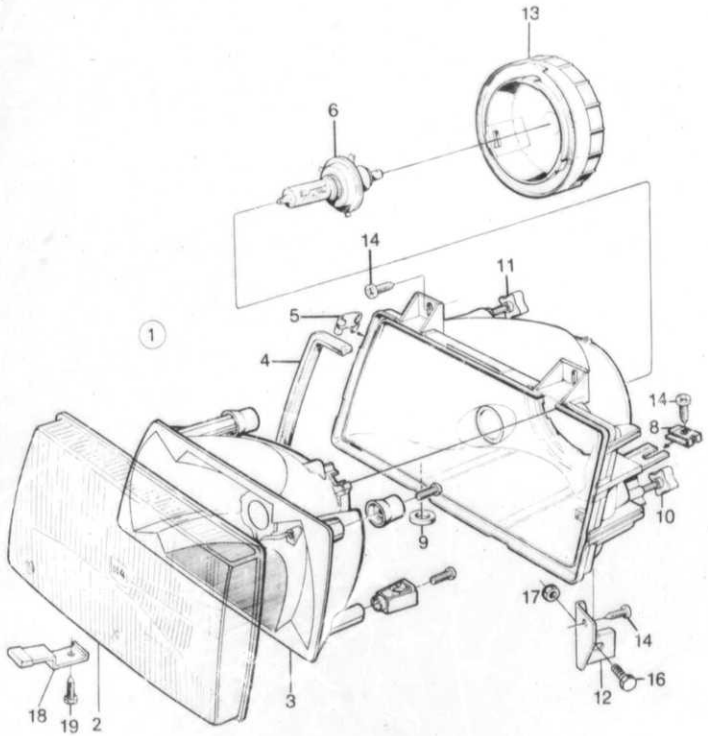


R 9724 - 900

| 0460 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | *95 55 970* | | 88), LH NLS - USE 9120130 | 1 | Headlamp | Strålkastare | 4 |
| 0025 | 1 | 91 20 130 | | 89,500), LH | 1 | Headlamp | Strålkastare | 4 |
| 0030 | 1 | *95 55 988* | | 88), RH NLS - USE 9120148 | 1 | Headlamp | Strålkastare | 4 |
| 0035 | 1 | 91 20 148 | | 89,500), RH | 1 | Headlamp | Strålkastare | 4 |
| 0040 | 1 | *95 55 996* | | 88,146), LH NLS - USE 9120155 | 1 | Headlamp | Strålkastare | 4 |
| 0045 | 1 | 91 20 155 | | 89,146), LH | 1 | Headlamp | Strålkastare | 4 |
| 0050 | 1 | *95 56 002* | | 88,146), RH NLS - USE 9120163 | 1 | Headlamp | Strålkastare | 4 |
| 0055 | 1 | 91 20 163 | | 89,146), RH | 1 | Headlamp | Strålkastare | 4 |
| 0060 | 2 | 95 56 655 | | LH | 1 | .Glass | .Strålkastarglas | 3 |
| 0070 | 2 | 95 56 663 | | RH | 1 | .Glass | .Strålkastarglas | 3 |
| 0080 | 2 | 95 58 032 | | 146), LH | 1 | .Glass | .Strålkastarglas | 3 |
| 0090 | 2 | 95 58 040 | | 146), RH | 1 | .Glass | .Strålkastarglas | 3 |
| 0100 | 3 | 95 56 671 | | 88), LH | 1 | .Reflector | .Reflektor | 3 |
| 0110 | 3 | 91 20 171 | | 89,500), LH | 1 | .Reflector | .Reflektor | 3 |
| 0115 | 3 | 95 56 689 | | 88), RH | 1 | .Reflector | .Reflektor | 3 |
| 0117 | 3 | 91 20 189 | | 89,500), RH | 1 | .Reflector | .Reflektor | 3 |
| 0120 | 3 | 95 58 057 | | 88,146), LH | 1 | .Reflector | .Reflektor | 3 |
| 0125 | 3 | 91 20 197 | | 89,146), LH | 1 | .Reflector | .Reflektor | 3 |
| 0130 | 3 | 95 58 065 | | 88,146), RH | 1 | .Reflector | .Reflektor | 3 |
| 0135 | 3 | 91 20 205 | | 89,146), RH | 1 | .Reflector | .Reflektor | 3 |
| 0140 | 4 | 95 56 697 | | | 1 | .Seal | .Tätning | 4 |
| 0150 | 5 | 95 56 705 | | | 9 | .Clip | .Clips | 5 |
| 0160 | 6 | 85 10 851 | | 40/23[illegible] 210 009 | 1 | .Bulb | .Glödlampa | 9 |
| 0180 | 8 | 85 50 824 | | | 2 | .Clip | .Clips | 3 |
| 0190 | 9 | 85 50 840 | | | 1 | .Bushing | .Bussning | 3 |
| 0200 | 10 | 95 56 713 | | | 1 | .Setting screw | .Inställningsskruv | 2 |
| 0210 | 11 | 95 56 721 | | | 1 | .Setting screw | .Inställningsskruv | 2 |
| 0220 | 12 | 95 56 812 | | LH | 1 | Attaching bracket | Fästvinkel | 3 |
| 0230 | 12 | 95 56 820 | | RH | 1 | Attaching bracket | Fästvinkel | 3 |
| 0240 | 13 | 85 39 710 | | | 2 | Sealing cover | Tätningslock | 4 |
| 0250 | 14 | 79 73 159 | | | 4 | Screw | Skruv | 5 |
| 0270 | 16 | 79 69 223 | | | 2 | Screw | Skruv | 5 |
| 0280 | 17 | 79 71 658 | | | 2 | Nut | Mutter | 5 |
| 0290 | 18 | 95 51 219 | | | 2 | Stop | Anslag | 5 |
| 0300 | 19 | 79 22 900 | | | 2 | Screw | Skruv | 5 |

36. For cars with integrated bumpers. För bilar med integrerade stötfångare.
88. Ch -K3004352, -K7003079.
89. Ch K3004353-, K7003080-.
146. For left hand traffic. För vänstertrafik.
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

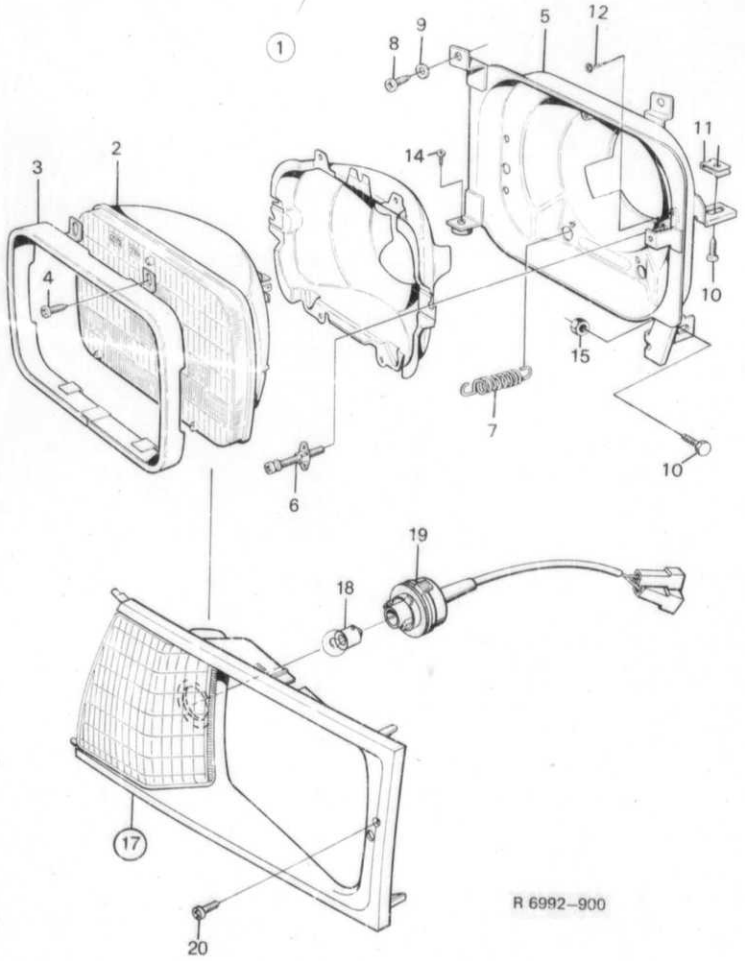


| 0500 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0015 | 1 | *85 50 279* | | NLS - USE 8574253 | 2 | Headlamp | Strålkastare | 4 |
| 0020 | 1 | 85 74 253 | | HALOGENE | 2 | Headlamp | Strålkastare | 4 |
| 0030 | 2 | *85 41 005* | | NLS - USE 8574253 | 2 | .Headlamp insert | .Strålkastarinsats | 3 |
| 0040 | 2 | *85 74 261* | | HALOGENE NLS - USE 8574253 | 2 | .Headlamp insert | .Strålkastarinsats | 3 |
| 0060 | 3 | 85 50 998 | | | 2 | .Ring | .Ring | 4 |
| 0080 | 4 | 85 50 972 | | | 8 | .Screw | .Skruv | 5 |
| 0100 | 5 | 85 41 591 | | LH | 1 | Attaching frame | Fästram | 3 |
| 0120 | 5 | 85 41 609 | | RH | 1 | Attaching frame | Fästram | 3 |
| 0140 | 6 | 85 51 681 | | | 4 | Screw | Skruv | 2 |
| 0160 | 7 | 85 59 510 | | | 2 | Spring | Fjäder | 4 |
| 0180 | 8 | 79 22 438 | | | 6 | Screw | Skruv | 5 |
| 0200 | 9 | 80 29 951 | | | 4 | Washer | Bricka | 5 |
| 0220 | 10 | 79 69 223 | | | 2 | Screw | Skruv | 5 |
| 0240 | 11 | 79 69 272 | | | 2 | Clip | Clips | 5 |
| 0260 | 12 | 79 22 727 | | | 6 | Screw | Skruv | 5 |
| 0300 | 14 | *79 71 641* | | NLS - USE 7972128 | 2 | Hexagon screw | Sexkantsskruv | 5 |
| 0320 | 15 | 79 71 658 | | | 2 | Nut | Mutter | 5 |
| 0410 | 17 | 85 93 253 | | LH, US | 1 | Bezel | Strålkastarsarg | 3 |
| 0412 | 17 | 85 93 261 | | RH, US | 1 | Bezel | Strålkastarsarg | 3 |
| 0420 | 18 | 85 52 325 | | 40/238 254 015 | 2 | .Bulb | .Glödlampa | 1 |
| 0440 | 19 | 85 79 716 | | | 2 | .Bulb socket | .Lamphållare | 6 |
| 0460 | 20 | *79 21 307* | | NLS | 2 | Screw | Skruv | 5 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX

| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-B10

## Headlamp, sealed beam 1987-

## Strålkastare, sealed beam 1987-

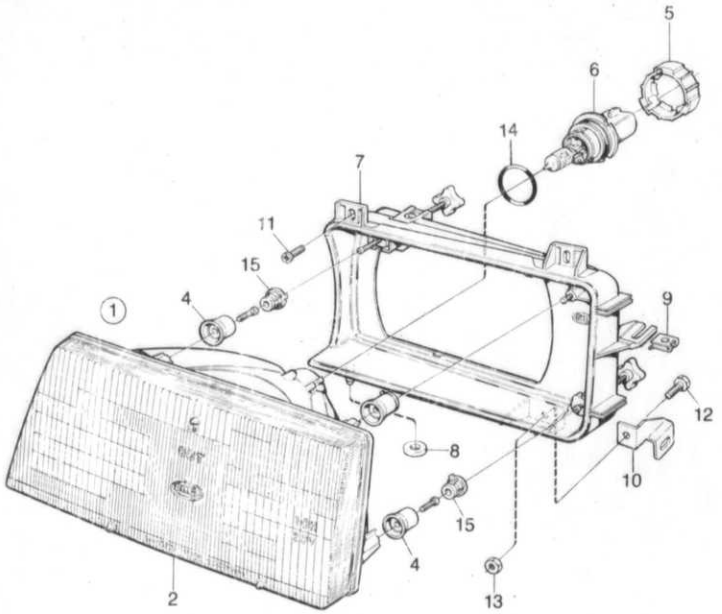


R 8687 - 900


| 0510 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 95 56 010 | | LH | 1 | Headlamp | Strålkastare | 4 |
| 0030 | 1 | 95 56 028 | | RH | 1 | Headlamp | Strålkastare | 4 |
| 0040 | 2 | 95 57 018 | | LH | 1 | .Headlamp insert | .Strålkastarinsats | 3 |
| 0050 | 2 | 95 57 026 | | RH | 1 | .Headlamp insert | .Strålkastarinsats | 3 |
| 0070 | 4 | 95 57 158 | | | 3 | ..Clamping sleeve | ..Klämhylsa | 3 |
| 0080 | 5 | 95 12 393 | | | 1 | .Lock ring | .Låsring | 3 |
| 0090 | 6 | 95 12 401 | | 40/238 301 006 | 1 | .Bulb | .Glödlampa | 1 |
| 0100 | 7 | 95 57 075 | | LH | 1 | .Attaching frame | .Fästram | 3 |
| 0110 | 7 | 95 57 083 | | RH | 1 | .Attaching frame | .Fästram | 3 |
| 0120 | 8 | 85 50 840 | | | 1 | .Bushing | .Bussning | 3 |
| 0130 | 9 | 85 50 824 | | | 1 | .Clip | .Clips | 3 |
| 0200 | 10 | 95 56 820 | | LH | 1 | Attaching bracket | Fästvinkel | 3 |
| 0210 | 10 | 95 56 812 | | RH | 1 | Attaching bracket | Fästvinkel | 3 |
| 0220 | 11 | 79 73 159 | | | 4 | Screw | Skruv | 5 |
| 0230 | 12 | 79 69 223 | | | 2 | Screw | Skruv | 5 |
| 0240 | 13 | 79 71 656 | | | 2 | Nut | Mutter | 5 |
| 0250 | 14 | 95 14 811 | | US | 2 | Protection | Skydd | 4 |
| 0260 | 15 | 95 12 328 | | | 3 | Bearing sleeve | Lagerhylsa | 3 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

3A GROUP INDEX

| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

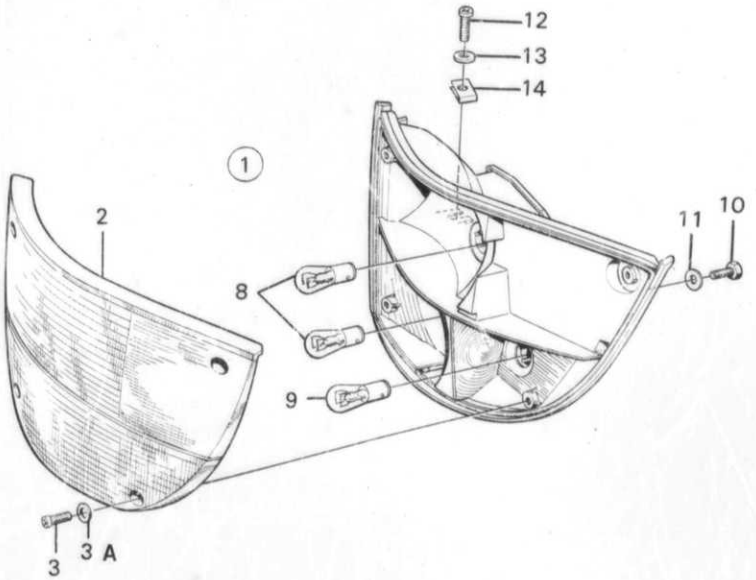


R 6993–900

| | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 85 82 231 | | LH | 1 | Direction indicator | Blinklykta | 2 |
| 0020 | | | | | | black moulding | svart dekor | |
| 0030 | 1 | 85 82 249 | | RH | 1 | Direction indicator | Blinklykta | 2 |
| 0040 | | | | | | black moulding | svart dekor | |
| 0050 | | | | | | | | |
| 0060 | 1 | 85 82 215 | | LH, GB | 1 | Direction indicator | Blinklykta | 2 |
| 0070 | | | | | | black moulding | svart dekor | |
| 0080 | 1 | 85 82 223 | | RH, GB | 1 | Direction indicator | Blinklykta | 2 |
| 0090 | | | | | | black moulding | svart dekor | |
| 0100 | | | | | | | | |
| 0110 | 1 | 85 74 717 | | LH, EU, AU, ME, FE | 1 | Direction indicator | Blinklykta | 2 |
| 0120 | | | | | | black moulding | svart dekor | |
| 0130 | 1 | 85 74 725 | | RH, EU, AU, ME, FE | 1 | Direction indicator | Blinklykta | 2 |
| 0140 | | | | | | black moulding | svart dekor | |
| 0150 | | | | | | | | |
| 0160 | 1 | 85 83 452 | | LH, US | 1 | Direction indicator | Blinklykta | 2 |
| 0161 | | | | | | black moulding | svart dekor | |
| 0170 | 1 | 85 83 460 | | RH, US | 1 | Direction indicator | Blinklykta | 2 |
| 0171 | | | | | | black moulding | svart dekor | |
| 0180 | | | | | | | | |
| 0200 | 1 | 85 74 733 | | LH, CA, JP | 1 | Direction indicator | Blinklykta | 2 |
| 0201 | | | | | | black moulding | svart dekor | |
| 0210 | 1 | 85 74 741 | | RH, CA, JP | 1 | Direction indicator | Blinklykta | 2 |
| 0211 | | | | | | black moulding | svart dekor | |
| 0220 | | | | | | | | |
| 0240 | 2 | 85 74 774 | | LH | 1 | .Lens | .Lyktglas | 1 |
| 0241 | | | | | | black moulding | svart dekor | |
| 0270 | 2 | 85 74 782 | | RH | 1 | .Lens | .Lyktglas | 1 |
| 0271 | | | | | | black moulding | svart dekor | |
| 0290 | | | | | | | | |
| 0300 | 2 | 85 83 510 | | LH, US, CA, JP | 1 | .Lens | .Lyktglas | 1 |
| 0310 | | | | | | black moulding | svart dekor | |
| 0330 | 2 | 85 83 528 | | RH, US, CA, JP | 1 | .Lens | .Lyktglas | 1 |
| 0340 | | | | | | black moulding | svart dekor | |
| 0350 | | | | | | | | |
| 0360 | 3 | 85 40 528 | | | 8 | .Screw | .Skruv | 5 |
| 0370 | 3A | 85 65 640 | | | 8 | .Washer | .Bricka | 5 |
| 0380 | 8 | 85 32 756 | | 40/238 291 009 | 4 | .Bulb | .Glödlampa | 1 |
| 0400 | | | | | | | | |
| 0410 | 9 | 85 35 692 | | 40/238 304 000 | 2 | .Bulb | .Glödlampa | 1 |
| 0420 | | | | | | | | |
| 0430 | 10 | *79 71 641* | | NLS - USE 7972128 | 4 | Hexagon screw | Sexkantsskruv | 5 |
| 0440 | 11 | 79 16 489 | | | 4 | Washer | Bricka | 5 |
| 0450 | 12 | 79 22 438 | | | 2 | Screw | Skruv | 5 |
| 0460 | 13 | 85 44 601 | | | 2 | Washer | Bricka | 3 |
| 0470 | 14 | 85 50 824 | | | 2 | Clip | Clips | 3 |




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

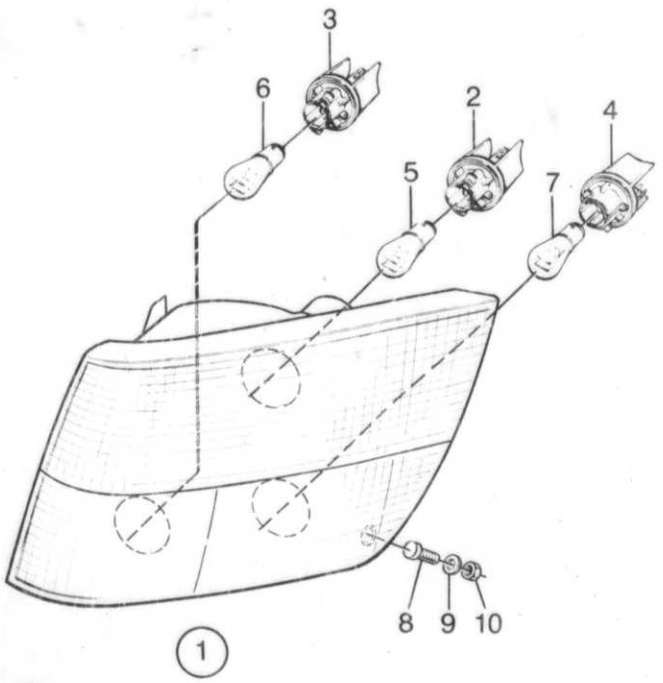


R 8190–900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | *95 56 051* | | -1988, LH, FI, GB, EU, ME, FE, AU NLS - USE 4014916 | 1 | Direction indicator | Blinklykta | 2 |
| 1 | *95 56 069* | | -1988, RH, FI, GB, EU, ME, FE, AU NLS - USE 4014924 | 1 | Direction indicator | Blinklykta | 2 |
| 1 | 40 14 916 | | 500), 1989-, LH | 1 | Direction indicator | Blinklykta | 2 |
| 1 | 40 14 924 | | 500), 1989-, RH | 1 | Direction indicator | Blinklykta | 2 |
| 1 | *95 56 077* | | -1988, LH, SE NLS - USE 4014932 | 1 | Direction indicator | Blinklykta | 2 |
| 1 | *95 56 085* | | -1988, RH, SE NLS - USE 4014940 | 1 | Direction indicator | Blinklykta | 2 |
| 1 | 40 14 932 | | 500), 1989-, LH | 1 | Direction indicator reverse lamp | Blinklykta backlampa | 2 |
| 1 | 40 14 940 | | 500), 1989-, RH | 1 | Direction indicator reverse lamp | Blinklykta backlampa | 2 |
| 1 | 95 56 093 | | -1988, LH, US, CA, JP | 1 | Direction indicator | Blinklykta | 2 |
| 1 | 95 56 101 | | -1988, RH, US, CA, JP | 1 | Direction indicator | Blinklykta | 2 |
| 1 | 40 14 957 | | 1989-, LH | 1 | Direction indicator position lamp | Blinklykta positionslykta | 2 |
| 1 | 40 14 965 | | 1989-, RH | 1 | Direction indicator position lamp | Blinklykta positionslykta | 2 |
| 2 | 95 56 986 | | -1988, SE, FI, GB, EU, ME, FE, AU | 2 | .Bulb socket 2-pole | .Lamphållare 2-polig | 6 |
| 2 | 95 56 986 | | 500), 1989- | 2 | .Bulb socket 2-pole | .Lamphållare 2-polig | 6 |
| 2 | 95 56 994 | | -1988, US, CA, JP | 2 | .Bulb socket 3-pole | .Lamphållare 3-polig | 6 |
| 2 | 95 56 994 | | 147), 1989- | 2 | .Bulb socket 3-pole | .Lamphållare 3-polig | 6 |
| 3 | 95 56 986 | | -1988, SE, FI, GB, EU, ME, FE, AU | 2 | .Bulb socket 2-pole | .Lamphållare 2-polig | 6 |
| 3 | 95 56 986 | | 500), 1989- | 2 | .Bulb socket 2-pole | .Lamphållare 2-polig | 6 |
| 3 | 95 56 994 | | -1988, US, CA, JP | 2 | .Bulb socket 3-pole | .Lamphållare 3-polig | 6 |
| 3 | 95 56 994 | | 147), 1989- | 2 | .Bulb socket 3-pole | .Lamphållare 3-polig | 6 |
| 4 | 95 56 986 | | | 2 | .Bulb socket 2-pole | .Lamphållare 2-polig | 6 |
| 5 | 71 54 719 | | -1988, SE, FI, GB, EU, ME,FE,AU, 40/238 290 001 | 2 | .Bulb direction indicator | .Glödlampa blinklykta | 1 |
| 5 | 71 54 719 | | 500), 1989-, 40/238 290 001 | 2 | .Bulb direction indicator | .Glödlampa blinklykta | 1 |
| 5 | 85 32 756 | | -1988, US, CA, JP 40/238 291 009 | 2 | .Bulb direction indicator | .Glödlampa blinklykta | 1 |
| 5 | 85 32 756 | | 147), 1989-, 40/238 291 009 | 2 | .Bulb direction indicator | .Glödlampa blinklykta | 1 |
| 6 | 71 54 727 | | -1988, SE, FI, GB, EU, ME,FE,AU, 40/238 254 007 | 2 | .Bulb position lamp | .Glödlampa positionslykta | 1 |
| 6 | 71 54 727 | | 500), 1989-, 40/238 254 007 | 2 | .Bulb position lamp | .Glödlampa positionslykta | 1 |

36. For cars with integrated bumpers. För bilar med integrerade stötfångare.
147. For 40 14 957 and 40 14 965. För 40 14 957 och 40 14 965.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

Lighting

# 2-B16


## *Lamp cluster*

*36)*

Belysning

## *Kombinationslykta*

*36)*

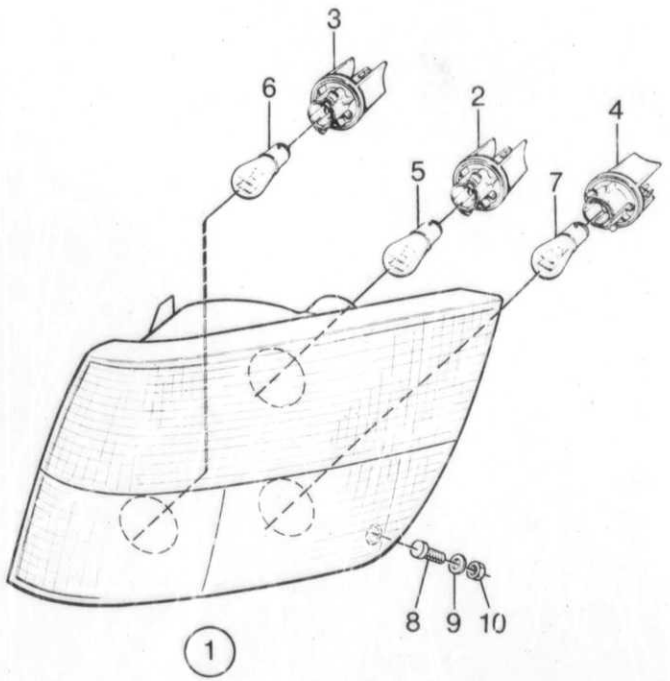


R 8190–900

| 0555 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0330 | 6 | 85 32 756 | | -1988, US, CA, JA, 40/238 291 009 | 2 | . Bulb position lamp | . Glödlampa positionslykta | 1 |
| 0340 | | | | | | | | |
| 0345 | 6 | 85 32 756 | | 147), 1989-, 40/238 291 009 | 2 | . Bulb position lamp | . Glödlampa positionslykta | 1 |
| 0347 | | | | | | | | |
| 0349 | | | | | | | | |
| 0350 | 7 | 71 54 719 | | -1988,SE, 40/238 291 009 | 2 | . Bulb reverse lamp | . Glödlampa backlampa | 1 |
| 0360 | | | | | | | | |
| 0365 | 7 | 71 54 719 | | 500), 1989-, 40/238 291 009 | 2 | . Bulb reverse lamp | . Glödlampa backlampa | 1 |
| 0366 | | | | | | | | |
| 0370 | 7 | 85 35 692 | | -1988, US, CA, JP 40/238 304 000 | 2 | . Bulb reverse lamp | . Glödlampa backlampa | 1 |
| 0380 | | | | | | | | |
| 0385 | 7 | 85 35 692 | | 147), 1989-, 40/238 304 000 | 2 | . Bulb reverse lamp | . Glödlampa backlampa | 1 |
| 0387 | | | | | | | | |
| 0390 | | | | | | | | |
| 0400 | 8 | 79 22 438 | | | 4 | Screw | Skruv | 5 |
| 0410 | 9 | 85 44 801 | | | 4 | Washer | Bricka | 3 |
| 0420 | 10 | 73 98 423 | | | 4 | Nut | Mutter | 5 |

36. For cars with integrated bumpers. För bilar med integrerade stötfångare.
147. For 40 14 957 and 40 14 965. För 40 14 957 och 40 14 965.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX



| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

Lighting

# 2-B18 *Tail lamp* *CK*

Belysning

*Baklykta* *CK*

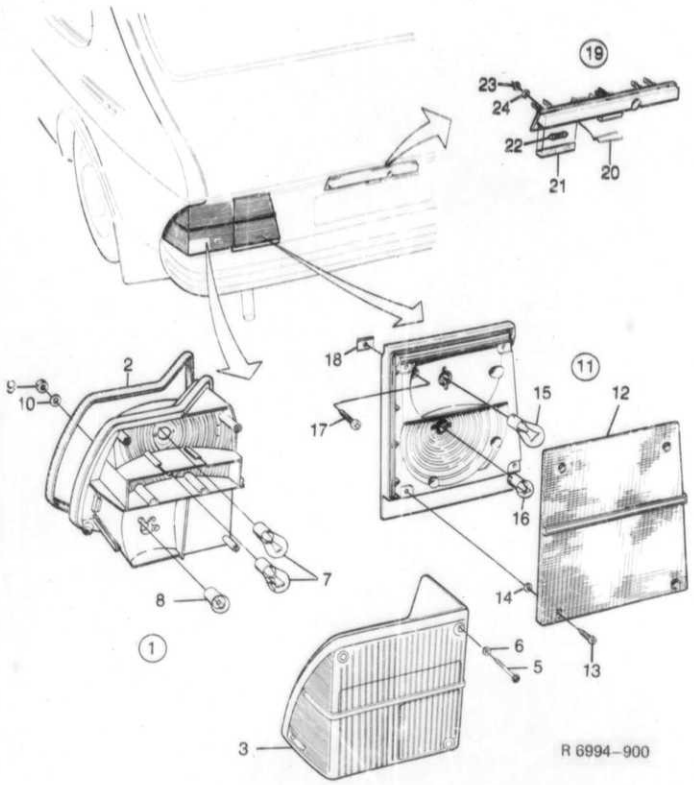


| 0600 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *85 85 333* | | LH NLS - USE 9122813 | 1 | Tail lamp | Baklykta | 3 |
| 0020 | 1 | *85 85 341* | | RH NLS - USE 9122821 | 1 | Tail lamp | Baklykta | 3 |
| 0030 | | | | | | | | |
| 0040 | 1 | *85 85 358* | | LH, US, CA, JP NLS - USE 9122839 | 1 | Tail lamp | Baklykta | 3 |
| 0050 | 1 | *85 85 366* | | RH, US, CA, JP NLS - USE 9122847 | 1 | Tail lamp | Baklykta | 3 |
| 0060 | 2 | 85 61 284 | | | 2 | .Seal | .Tätning | 5 |
| 0070 | 3 | *85 85 416* | | LH NLS - USE 9122995 | 1 | .Lens | .Lyktglas | 2 |
| 0080 | 3 | *85 85 424* | | RH NLS - USE 9123001 | 1 | .Lens | .Lyktglas | 2 |
| 0090 | 3 | *85 85 432* | | LH, US, CA, JP NLS - USE 9123019 | 1 | .Lens | .Lyktglas | 2 |
| 0100 | 3 | *85 85 440* | | RH, US, CA, JP NLS - USE 9123027 | 1 | .Lens | .Lyktglas | 2 |
| 0110 | 5 | 79 74 025 | | | 8 | ..Screw | ..Skruv | 5 |
| 0120 | 6 | 85 60 591 | | | 8 | ..Washer | ..Bricka | 5 |
| 0130 | 7 | 71 54 719 | | 40/238 290 001 | 4 | .Bulb | .Glödlampa | 1 |
| 0140 | 7 | 85 35 692 | | US, 40/238 304 000 | 4 | .Bulb | .Glödlampa | 1 |
| 0150 | 8 | *85 37 672* | | 40/238 292 007 NLS - USE 4320594 | 2 | .Bulb | .Glödlampa | 1 |
| 0160 | 8 | 85 32 756 | | US, 40/238 291 009 | 2 | .Bulb | .Glödlampa | 1 |
| 0170 | 9 | 80 29 555 | | -1987 | 4 | Nut | Mutter | 5 |
| 0180 | 9 | 81 51 227 | | 1988- | 4 | Nut | Mutter | 5 |
| 0190 | 10 | 80 29 951 | | | 4 | Washer | Bricka | 5 |
| 0200 | 11 | *85 85 374* | | -1988, LH NLS - USE 4060679 | 1 | Lamp rear door | Lykta bakdörr | 3 |
| 0220 | 11 | 40 60 679 | | 500), 1989-, LH | 1 | Lamp rear door | Lykta bakdörr | 3 |
| 0240 | 11 | *85 85 382* | | -1988, RH NLS - USE 4060687 | 1 | Lamp rear door | Lykta bakdörr | 3 |
| 0250 | 11 | 40 60 687 | | 500), 1989-, RH | 1 | Lamp rear door | Lykta bakdörr | 3 |
| 0270 | 11 | *85 85 390* | | 148), -1988, LH NLS - USE 4060695 | 1 | Lamp rear door | Lykta bakdörr | 3 |
| 0285 | 11 | 40 60 695 | | 148, 500), 1989-, LH | 1 | Lamp rear door | Lykta bakdörr | 3 |
| 0290 | 11 | *85 85 408* | | 148), -1988, RH NLS - USE 4060703 | 1 | Lamp rear door | Lykta bakdörr | 3 |
| 0305 | 11 | 40 60 703 | | 148,500), 1989-, RH | 1 | Lamp rear door | Lykta bakdörr | 3 |
| 0310 | 12 | 85 85 457 | | LH | 1 | .Lens | .Lyktglas | 2 |
| 0330 | 12 | 85 85 465 | | RH | 1 | .Lens | .Lyktglas | 2 |
| 0350 | 12 | 85 85 473 | | 148), LH | 1 | .Lens | .Lyktglas | 2 |
| 0370 | 12 | 85 85 481 | | 148), RH | 1 | .Lens | .Lyktglas | 2 |
| 0390 | 13 | 79 74 025 | | | 8 | ..Screw | ..Skruv | 5 |
| 0400 | 14 | 85 60 591 | | | 8 | ..Washer | ..Bricka | 5 |
| 0410 | 15 | 71 54 719 | | 40/238 290 001 | 2 | .Bulb | .Glödlampa | 1 |
| 0420 | 16 | 71 54 727 | | 40/238 254 007 | 2 | .Bulb | .Glödlampa | 1 |
| 0430 | 17 | 79 22 388 | | | 8 | Screw | Skruv | 5 |
| 0440 | 18 | 79 72 573 | | -1987 | 8 | Clip nut | Clipsmutter | 5 |
| 0450 | 18 | 94 27 014 | | 1988- | 8 | Clip nut | Clipsmutter | 3 |
| 0460 | 19 | *85 62 126* | | -1988 NLS - USE 4093381 | 1 | Lighting | Belysning | 5 |
| 0470 | 19 | *40 60 216* | | 500), 1989- NLS - USE 4093381 | 1 | Lighting | Belysning | 5 |
| 0480 | 20 | 85 63 918 | | | 1 | Spring | .Fjäder | 5 |
| 0490 | 21 | *85 63 942* | | -1988 NLS - USE 4060323 | 2 | .Glass | .Strålkastarglas | 3 |
| 0500 | 21 | 40 60 323 | | 500), 1989- | 2 | .Lens | .Lyktglas | 3 |
| 0510 | 22 | 70 84 197 | | | 2 | .Bulb | .Glödlampa | 1 |
| 0520 | 23 | 80 29 548 | | -1987 | 5 | Nut | Mutter | 5 |

148. With rear fog light. Med dimbaklykta.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-B20

## *Tail lamp*
## *CK*

## *Baklykta*
## *CK*

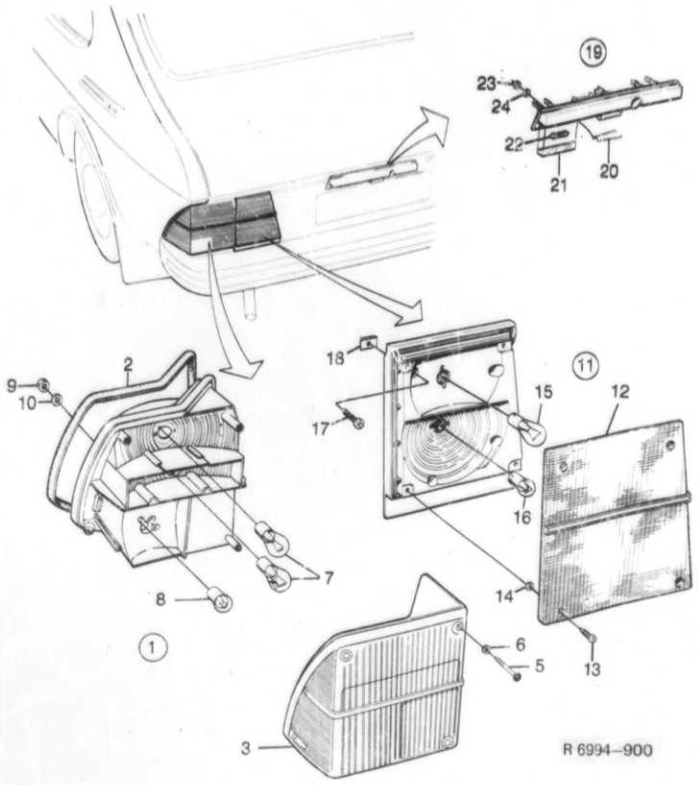


| 0600 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0530 | 23 | 81 51 219 | | 1988- | 5 | Nut | Mutter | 5 |
| 0540 | 24 | 70 88 073 | | | 3 | Washer | Bricka | 5 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX



| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

Lighting

# 2-B22 Tail lamp SN

Belysning

# Baklykta SN

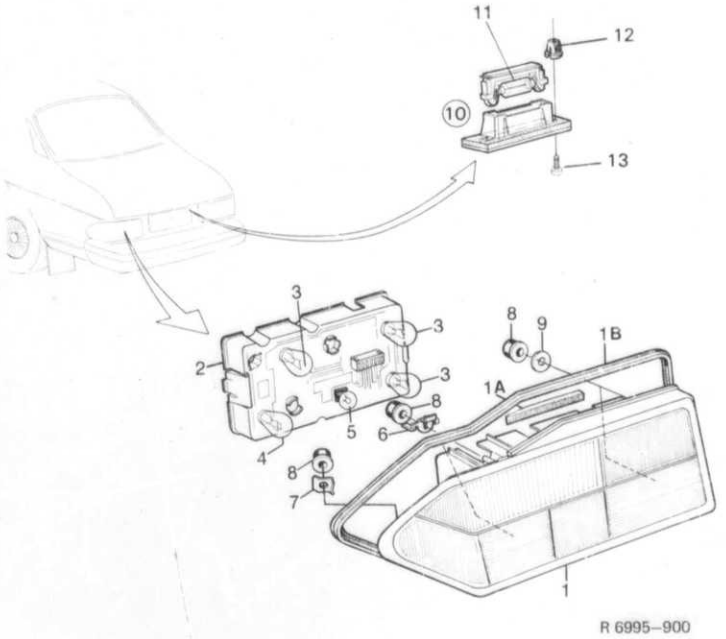


R 6995–900

| 0650 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 85 85 853 | | LH | 1 | Tail lamp | Baklykta | 3 |
| 0040 | 1 | 85 85 861 | | RH | 1 | Tail lamp | Baklykta | 3 |
| 0045 | 1 | 85 85 879 | | 148), LH | 1 | Tail lamp | Baklykta | 3 |
| 0050 | 1 | 85 85 887 | | 148), RH | 1 | Tail lamp | Baklykta | 3 |
| 0060 | 1 | 85 85 895 | | LH, US, CA, JP | 1 | Tail lamp | Baklykta | 3 |
| 0080 | 1 | 85 85 903 | | RH, US, CA, JP | 1 | Tail lamp | Baklykta | 3 |
| 0100 | 1A | 85 74 535 | | LH | 1 | ▪Seal | ▪Tätning | 5 |
| 0120 | 1A | 85 74 543 | | RH | 1 | ▪Seal | ▪Tätning | 5 |
| 0130 | 1B | 85 77 785 | | | 2 | ▪Seal | ▪Tätning | 5 |
| 0140 | 2 | 85 85 978 | | LH | 1 | Rear section | Bakstycke | 5 |
| 0160 | 2 | 85 85 986 | | RH | 1 | Rear section | Bakstycke | 5 |
| 0180 | 3 | 71 54 719 | | 40/238 290 001 | 3 | Bulb | Glödlampa | 1 |
| 0185 | 3 | 85 35 692 | | US, 40/238 304 000 | 1 | Bulb | Glödlampa | 1 |
| 0200 | 4 | *85 37 672* | | 40/238 292 007 NLS - USE 4320594 | 1 | Bulb | Glödlampa | 1 |
| 0205 | 4 | 85 32 756 | | US, 40/238 291 009 | 1 | Bulb | Glödlampa | 1 |
| 0220 | 5 | 71 54 727 | | 40/238 254 007 | 1 | Bulb | Glödlampa | 1 |
| 0235 | 5 | 85 52 325 | | US, 40/238 254 015 | 1 | Bulb | Glödlampa | 1 |
| 0240 | 6 | 85 66 416 | | | 4 | Bracket | Fäste | 6 |
| 0260 | 7 | 85 66 424 | | | 2 | Bracket | Fäste | 6 |
| 0300 | 8 | 79 73 365 | | | 10 | Nut | Mutter | 5 |
| 0320 | 9 | 79 16 489 | | | 4 | Washer | Bricka | 5 |
| 0340 | 10 | 85 67 653 | | | 2 | Lighting | Belysning | 5 |
| 0360 | 11 | 70 84 197 | | 40/238 261 002 | 1 | ▪Bulb | ▪Glödlampa | 1 |
| 0380 | 12 | 92 36 589 | | -1988 | 4 | Clip | Clips | 5 |
| 0385 | 12 | 40 13 165 | | 500), 1989- | 4 | Clip | Clips | 5 |
| 0400 | 13 | 79 22 230 | | | 4 | Screw | Skruv | 5 |

148. With rear fog light. Med dimbaklykta.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX



| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

Lighting

# 2-B24 Stop light High mounted

Belysning

**Stopplykta Högt monterad**

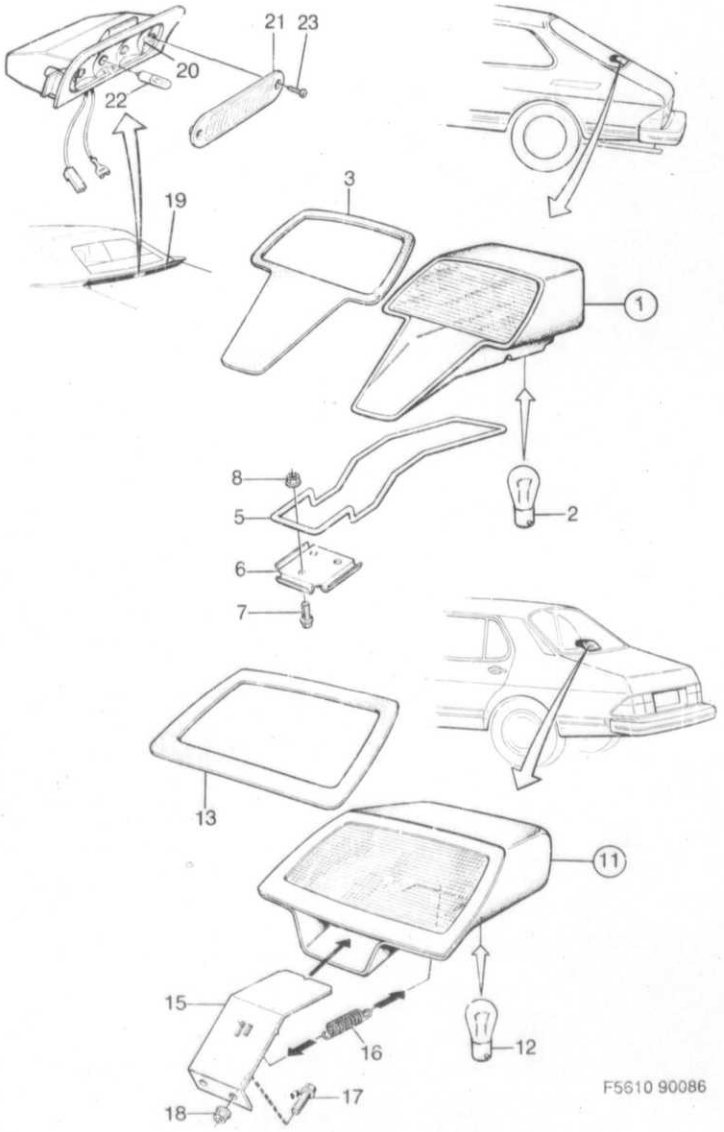


| 0675 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | *95 09 522* | | -1987, CK NLS - USE 9567223 | 1 | Stop lamp | Stoppljus | 3 |
| 0030 | 1 | 95 67 223 | | 1988-, CK | 1 | Stop light | Stopplykta | 3 |
| 0040 | 2 | 85 35 692 | | 40/238 304 000 | 1 | .Bulb | .Glödlampa | 1 |
| 0060 | 3 | 95 14 233 | | | 1 | .Seal | .Tätning | 3 |
| 0080 | 5 | 95 55 327 | | CK | 1 | Tensioner | Spännare | 6 |
| 0100 | 6 | 95 53 132 | | CK | 1 | Clamping-piece | Klämstycke | 6 |
| 0120 | 7 | 80 19 895 | | CK | 3 | Screw | Skruv | 5 |
| 0140 | 8 | 79 74 728 | | CK | 3 | Cage nut | Korgmutter | 5 |
| 0160 | | | | | | | | |
| 0180 | 11 | 85 98 286 | | SN | 1 | Stop light | Stopplykta | 3 |
| 0200 | 12 | 85 35 692 | | 40/238 304 000 | 1 | .Bulb | .Glödlampa | 1 |
| 0220 | 13 | 95 51 953 | | | 1 | .Seal | .Tätning | 3 |
| * 0240 | 15 | 85 51 979 | | SN | 1 | Bracket | Konsol | 6 |
| 0260 | 16 | 95 53 512 | | SN | 1 | Spring | Fjäder | 6 |
| 0280 | 17 | 82 86 296 | | SN, (7965544) | 2 | Screw | Skruv | 5 |
| 0300 | 18 | 79 74 728 | | SN | 2 | Cage nut | Korgmutter | 5 |
| 0305 | | | | | | | | |
| 0310 | 19 | | | CV | | Spoiler | Spoiler | |
| 0315 | | | | See page 8A-101, 5-E06 | | | | |
| 0320 | 20 | 69 36 306 | | | 1 | .Reflector | .Reflektor | 6 |
| 0330 | 21 | 69 97 183 | | | 1 | .Lens | .Lyktglas | 2 |
| 0350 | 22 | 95 12 880 | | 40/238 300 008 | 3 | .Bulb | .Glödlampa | 1 |
| 0360 | 23 | 69 36 314 | | | 2 | .Screw | .Skruv | 5 |




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-C02

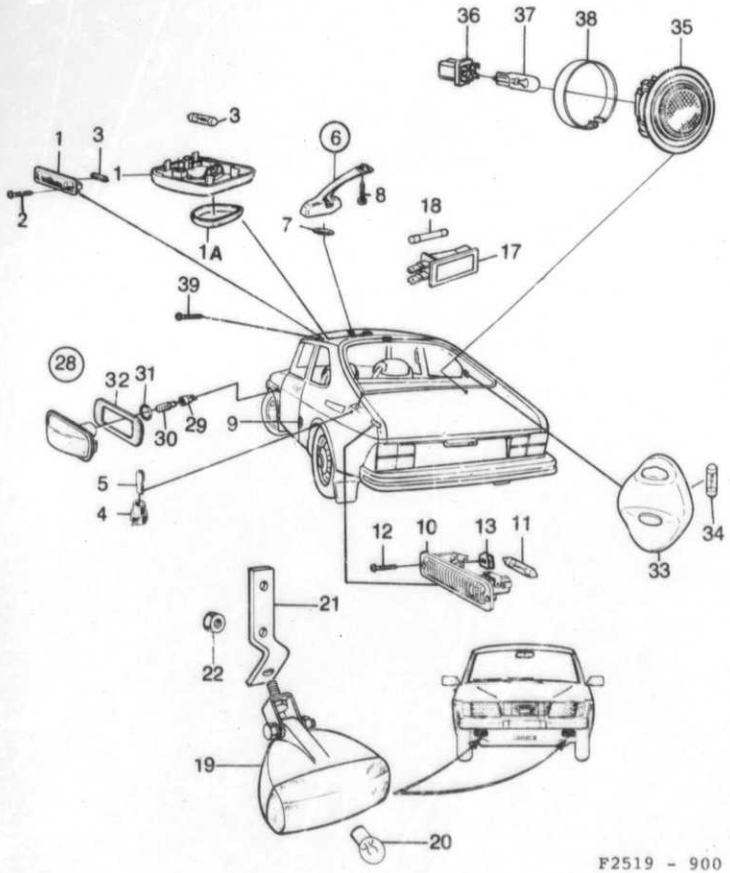


| 0700 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 85 47 580 | | 57), 1986 | 1 | Interior lighting | innerbelysning | 4 |
| 0025 | 1 | 85 18 367 | | 1986 | 1 | Lamp | Lampa | 4 |
| 0030 | 1 | 95 12 252 | | 1987-1988 | 1 | Dome lamp | Taklampa | A |
| 0033 | 1 | 40 60 398 | | 500), 1989- | 1 | Dome lamp | Taklampa | 4 |
| 0035 | 1A | *95 03 152* | | 57), 1986 NLS - USE 4060406 | 1 | .Lamp lens | .Lampglas | 6 |
| 0037 | 1A | *95 03 152* | | 1987-1988 NLS - USE 4060406 | 1 | .Lamp lens | .Lampglas | 6 |
| 0038 | 1A | 40 60 406 | | 500), 1989- | 1 | .Lamp lens | .Lampglas | 6 |
| 0040 | 2 | 79 70 346 | | 1986 | 2 | Screw | Skruv | 5 |
| 0060 | 3 | 85 01 264 | | 40/238 265 003 | 1 | Bulb | Glödlampa | 2 |
| 0110 | 4 | 85 09 697 | | | 1 | Bulb socket<br>starter switch | Lamphållare<br>tändningslås | 5 |
| 0130 | 5 | 85 00 613 | | 40/238 286 009 | 1 | Bulb | Glödlampa | 2 |
| 0140 | 6 | 85 06 263 | | 1986 | 1 | Lamp<br>rear view mirror | Lampa<br>backspegel | |
| 0170 | 6 | 95 54 411 | | 1987- | 1 | Lamp<br>rear view mirror | Lampa<br>backspegel | 5 |
| 0177 | 6 | 95 54 411 | | CV | 1 | Lamp<br>rear view mirror | Lampa<br>backspegel | 5 |
| 0180 | 7 | 70 84 197 | | 40/238 261 002 | 1 | .Bulb | .Glödlampa | 1 |
| 0210 | 8 | 80 59 248 | | 1986 | 1 | Screw | Skruv | 5 |
| 0220 | 8 | 79 75 329 | | 1987- | 1 | Screw | Skruv | 5 |
| 0240 | 9 | 85 83 593 | | | 2 | Reflex | Reflex | 5 |
| 0300 | 10 | 85 77 801 | | | 1 | Lamp<br>boot | Lampa<br>bagagerum | 3 |
| 0340 | 11 | 85 01 264 | | 40/238 265 003 | 1 | Bulb | Glödlampa | 2 |
| 0360 | 12 | 79 70 346 | | | 2 | Screw | Skruv | 5 |
| 0380 | 13 | 79 72 771 | | | 2 | Clip nut | Clipsmutter | 5 |
| 0460 | 17 | 95 09 639 | | -1988 | 1 | Lighting<br>glove compartment | Belysning<br>handskfack | 4 |
| 0470 | 17 | 95 69 948 | | 500), 1989- | 1 | Lighting<br>glove compartment | Belysning<br>handskfack | 4 |
| 0480 | 18 | 70 84 197 | | 40/238 261 002 | 1 | .Bulb | .Glödlampa | 1 |
| 0500 | 19 | *85 61 409* | | DK NLS | 2 | Position lamp | Positionslykta | 9 |
| 0520 | 20 | 71 54 727 | | 40/238 254 007 | 2 | Bulb | Glödlampa | 1 |
| 0540 | 21 | *85 61 375* | | LH, DK NLS | 1 | Bracket | Fäste | 6 |
| 0560 | 21 | *85 61 383* | | RH, DK NLS | 1 | Bracket | Fäste | 6 |
| 0580 | 22 | 80 74 106 | | -1987, DK | 2 | Nut | Mutter | 5 |
| 0600 | 22 | 81 51 235 | | 1988-, DK | 2 | Nut | Mutter | 5 |
| 0700 | 28 | *95 21 832* | | -1988, (9513227) NLS - USE 9124132 | 2 | Side light | Sidolampa | 3 |
| 0710 | 28 | 91 24 132 | | 500), 1989- | 2 | Side light | Sidolampa | 3 |
| 0720 | 29 | 95 21 857 | | (9512872) | 2 | .Bulb socket | .Lamphållare | 6 |
| 0740 | 30 | 95 12 880 | | 40/238 300 008 | 2 | .Bulb | .Glödlampa | 1 |
| 0760 | 31 | 95 12 898 | | | 2 | .Gasket | .Packning | 6 |
| 0780 | 32 | *95 12 906* | | -1988 NLS - USE 9124140 | 2 | .Seal | .Tätning | 6 |
| 0785 | 32 | 91 24 140 | | 500), 1989- | 2 | .Seal | .Tätning | 6 |
| 0820 | 33 | 95 00 273 | | 1986, CD | 2 | Lamp | Lampa | 4 |
| 0840 | 34 | 95 06 080 | | 1986, CD | 1 | .Bulb | .Glödlampa | 2 |
| 0850 | 35 | 98 23 683 | | CV | 2 | Lamp | Lampa | 6 |
| 0860 | 36 | 95 97 006 | | CV | 2 | Bracket | Hållare | 6 |
| 0870 | 37 | 95 12 880 | | CV, 40/238 300 008 | 2 | Bulb | Glödlampa | 1 |
| 0880 | 38 | 98 24 939 | | 1987-, CV | 2 | Clamp | Klammer | 5 |
| 0890 | 39 | 79 22 636 | | 57), 1986 | 1 | Screw<br>ground | Skruv<br>jord | 5 |
| 0900 | | 85 47 606 | | 57), 1986 | X | Interior lamp kit | Innerbelysningssats | 4 |
| 0910 | | | | See page 3A-151, 2-G08 | | | | |

57. For cars with centre mounted dome light. För bilar med mittmonterad taklampa.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3A GROUP INDEX



| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-C04

## *Horn*

## *Signalhorn*

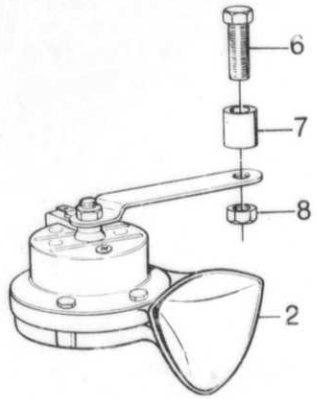

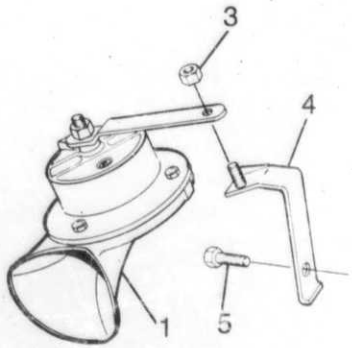
R 8192–900

| 0750 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 85 68 776 | | -1986 | 1 | Horn | Signalhorn | 4 |
| 0021 | | | | | | low tone | låg ton | |
| 0030 | 1 | *95 02 543* | | 1987-1988 | 1 | Horn | Signalhorn | 4 |
| 0031 | | | | NLS - USE 8548547, 9529421 | | low tone | låg ton | |
| 0031 | | | | | | | | |
| 0040 | 1 | 95 29 421 | | 500), 1989- | 1 | Horn | Signalhorn | 4 |
| 0041 | | | | | | low tone | låg ton | |
| 0120 | 2 | 85 68 792 | | -1986 | 1 | Horn | Signalhorn | 4 |
| 0121 | | | | | | high tone | hög ton | |
| 0130 | 2 | *95 02 535* | | 1987-1988 | 1 | Horn | Signalhorn | 4 |
| 0131 | | | | NLS - USE 8548547, 9529413 | | high tone | hög ton | |
| 0131 | | | | | | | | |
| 0140 | 2 | 95 29 413 | | 500), 1989- | 1 | Horn | Signalhorn | 4 |
| 0141 | | | | | | high tone | hög ton | |
| 0240 | 3 | 80 74 106 | | -1987 | 2 | Nut | Mutter | 5 |
| 0250 | 3 | 81 51 235 | | 1988- | 2 | Nut | Mutter | 5 |
| 0260 | 4 | *85 72 794* | | -1987 NLS - USE 9568064 | 1 | Bracket | Konsol | 6 |
| 0270 | 4 | 95 68 064 | | 1988- | 1 | Bracket | Konsol | 6 |
| 0280 | 5 | 80 19 895 | | | 1 | Screw | Skruv | 5 |
| 0290 | 6 | 79 70 015 | | 1987- | 1 | Screw | Skruv | 5 |
| 0300 | 7 | 95 57 885 | | 1987- | 1 | Spacer sleeve | Distanshylsa | 5 |
| 0310 | 8 | 80 74 288 | | 1987- | 1 | Nut | Mutter | 5 |

500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3A GROUP INDEX



| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-C06

## *Horn button*

## *Signalknapp*

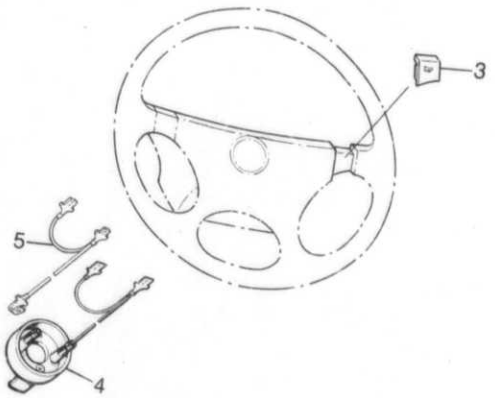

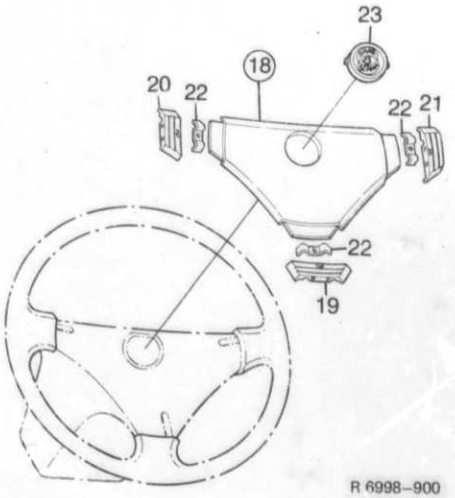
R 6998–900

| 0760 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0350 | 3 | 89 61 096 | | LH | 1 | Horn button | Signalknapp | 5 |
| 0352 | 3 | 89 61 104 | | RH | 1 | Horn button | Signalknapp | 5 |
| 0353 | 4 | 89 88 313 | | | 1 | Companion flange | Medbringare | 5 |
| 0354 | 5 | 89 88 420 | | | 1 | Ground cable | Jordkabel | 5 |
| 0600 | 18 | 89 90 376 | | | 1 | Steering wheel pad | Rattkudde | 3 |
| 0620 | 19 | 89 90 962 | | | 1 | .Horn button | .Signalknapp | 6 |
| 0640 | 20 | 89 90 970 | | | 1 | .Horn button | .Signalknapp | 6 |
| 0660 | 21 | 89 90 988 | | | 1 | .Horn button | .Signalknapp | 6 |
| 0670 | 22 | 89 87 406 | | | 3 | .Contact plate | .Kontaktplatta | 6 |
| 0680 | 23 | 89 90 103 | | | 1 | .Emblem | .Emblem | 3 |
| 0690 | | | | See page 6-007, 4-C08 | | Steering wheel | Ratt | |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX

| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-C08

## *Windscreen wiper*

## *Vindrutetorkare*

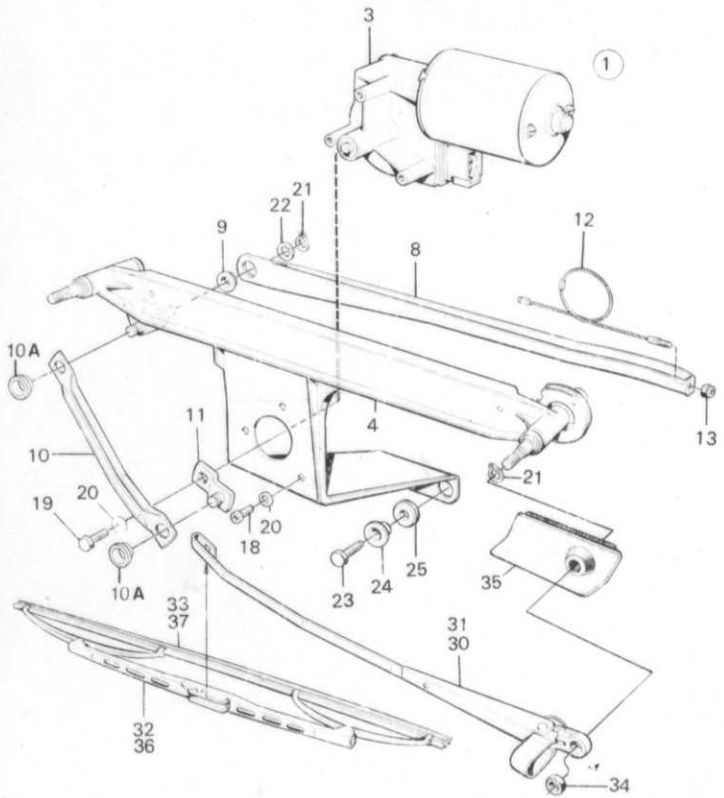


R 9750 - 900

| 0800 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 85 44 462 | | | 1 | Electric motor | Elmotor | 4 |
| 0020 | 3 | 85 44 686 | | | 1 | .Drive gear | .Drev | 5 |
| 0030 | 4 | 85 44 470 | | | 1 | Beam | Balk | 5 |
| 0040 | 4 | 85 58 124 | | RHD | 1 | Beam | Balk | 5 |
| 0050 | 8 | 85 44 504 | | | 1 | Carrier arm | Medbringararm | 5 |
| 0060 | 8 | 85 58 132 | | RHD | 1 | Carrier arm | Medbringararm | 5 |
| 0070 | 9 | 85 04 029 | | | 1 | .Bushing | .Bussning | 3 |
| 0080 | 10 | 85 44 512 | | | 1 | Connecting rod | Vevstake | 5 |
| 0090 | 10 | 85 58 140 | | RHD | 1 | Connecting rod | Vevstake | 5 |
| 0100 | 10A | 85 59 320 | | | 2 | .Bushing | .Bussning | 3 |
| 0110 | 11 | 85 44 520 | | | 1 | Crank arm | Vevarm | 5 |
| 0120 | 11 | 85 61 466 | | RHD | 1 | Crank arm | Vevarm | 5 |
| 0130 | 12 | 85 44 538 | | | 1 | Cable | Lina | 3 |
| 0140 | 13 | 80 74 270 | | | 1 | Lock nut | Låsmutter | 3 |
| 0150 | 18 | 80 59 396 | | | 3 | Screw | Skruv | 5 |
| 0160 | 19 | 80 19 895 | | | 1 | Screw | Skruv | 5 |
| 0170 | 20 | 80 29 951 | | | 4 | Washer | Bricka | 5 |
| 0180 | 21 | 79 63 135 | | | 3 | E-circlip | Spärryttare | 3 |
| 0190 | 22 | 85 44 702 | | | 1 | Washer | Bricka | 5 |
| 0200 | 23 | 85 58 074 | | | 4 | Screw | Skruv | 5 |
| 0210 | 24 | 85 44 413 | | | 4 | Sleeve | Hylsa | 5 |
| 0220 | 25 | 85 44 421 | | | 2 | Bushing | Bussning | 3 |
| 0230 | 30 | 85 53 810 | | LH | 1 | Wiper arm | Torkararm | 3 |
| 0240 | 31 | 85 53 828 | | RH | 1 | Wiper arm | Torkararm | 3 |
| 0250 | 30 | 85 58 090 | | LH, RHD | 1 | Wiper arm | Torkararm | 3 |
| 0260 | 30 | 95 53 306 | | LH, CV | 1 | Wiper arm | Torkararm | 3 |
| 0270 | 31 | 95 53 314 | | RH, CV | 1 | Wiper arm | Torkararm | 3 |
| 0280 | 31 | 85 58 108 | | RH, RHD | 1 | Wiper arm | Torkararm | 3 |
| 0290 | 30 | 95 59 352 | | 1987-, LH, RHD, CV | 1 | Wiper arm | Torkararm | 3 |
| 0300 | 31 | 95 59 345 | | 1987-, RH, RHD, CV | 1 | Wiper arm | Torkararm | 3 |
| 0310 | 32 | 45 21 209 | | (8557480) | 2 | Wiper blade | Torkarblad | |
| 0320 | 32 | 40 60 745 | | 86) | 2 | Wiper blade | Torkarblad | 1 |
| 0330 | 32 | 95 55 202 | | CV | 2 | Wiper blade | Torkarblad | 1 |
| 0340 | 33 | *85 53 844* | S | 1) NLS - USE 4250163 | 2 | .Profile | .Profil | 2 |
| 0350 | 33 | 40 60 752 | S | 1,86) | 2 | .Profile | .Profil | 2 |
| 0360 | 33 | 95 55 962 | S | 1), CV | 2 | .Profile | .Profil | 2 |
| 0370 | 34 | 80 74 106 | | -1987 | 2 | Nut | Mutter | 5 |
| 0380 | 34 | 81 51 235 | | 1988- | 2 | Nut | Mutter | 5 |
| 0390 | 35 | 85 44 439 | | LH | 1 | Cover | Täcklock | 4 |
| 0400 | 35 | 85 44 736 | | RH | 1 | Cover | Täcklock | 4 |
| 0410 | 36 | *85 47 499* | | See page 3A-147, 2-G04 | X | Wiper blade kit | Torkarbladssats | 1 |
| 0410 | | | | NLS - USE 8548216 | | | | |
| 0420 | 36 | 85 47 747 | | 86) | X | Wiper blade kit | Torkarbladssats | 6 |
| 0425 | | | | See page 3A-147, 2-G04 | | | | |
| 0430 | 37 | 85 46 319 | | See page 3A-147, 2-G04 | X | Profiled rubber kit | Gummiprofilsats | 2 |
| 0440 | 37 | 85 47 754 | | 86) | X | Profiled rubber kit | Gummiprofilsats | 2 |
| 0450 | | | | See page 3A-147, 2-G04 | | | | |
| 0460 | 37 | 85 47 655 | | CV | X | Profiled rubber kit | Gummiprofilsats | 2 |
| 0470 | | | | See page 3A-147, 2-G04 | | | | |

1. Not as separate spare part. Ej som separat reservdel.
86. Synthetic rubber. Syntetiskt gummi.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-C10

## *Headlamp wiper* — *Strålkastartorkare*

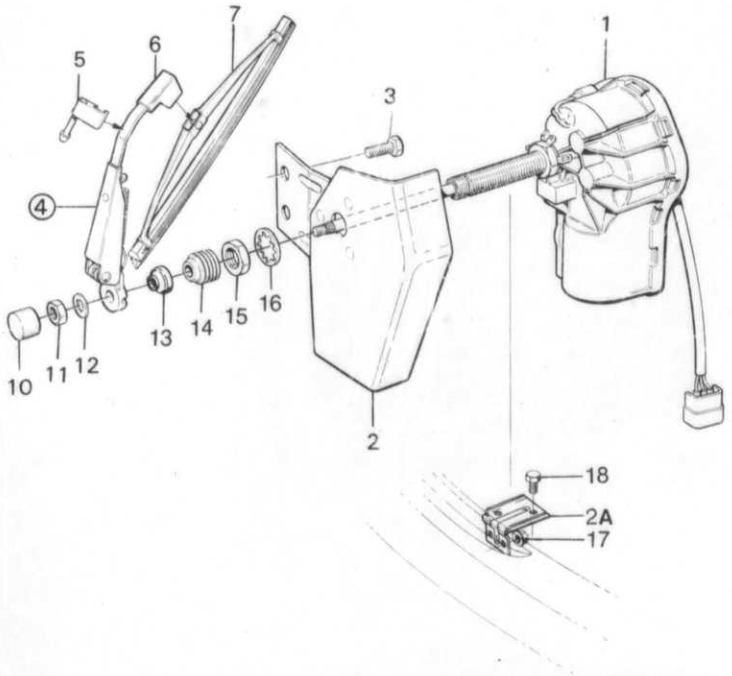


R 7863–900

| 0850 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0030 | 1 | 85 96 207 | S | LH | 1 | Wiper motor | Torkarmotor | 3 |
| 0050 | 1 | 85 96 215 | S | RH | 1 | Wiper motor | Torkarmotor | 3 |
| 0055 | 1 | *95 56 200* | | 36), LH NLS - USE 4095790 | 1 | Wiper motor | Torkarmotor | 3 |
| 0055 | | | | | | | | |
| 0057 | 1 | *95 56 218* | | 36), RH NLS - USE 4095816 | 1 | Wiper motor | Torkarmotor | 3 |
| 0057 | | | | | | | | |
| 0060 | 2 | 85 52 366 | | LH | 1 | Engine anchorage | Motorfäste | 5 |
| 0080 | 2 | 85 52 309 | | RH | 1 | Engine anchorage | Motorfäste | 5 |
| 0090 | 2A | 95 56 242 | | 36) | 2 | Bracket | Konsol | 5 |
| 0100 | 3 | 80 19 895 | | | 4 | Screw | Skruv | 5 |
| 0120 | 4 | 85 52 051 | | LH | 1 | Wiper arm | Torkararm | 4 |
| 0140 | 4 | 85 52 069 | | RH | 1 | Wiper arm | Torkararm | 4 |
| 0150 | 4 | 95 56 291 | | 36), LH | 1 | Wiper arm | Torkararm | 4 |
| 0155 | 4 | 95 56 283 | | 36), RH | 1 | Wiper arm | Torkararm | 4 |
| 0160 | 5 | 85 59 593 | | LH | 1 | ▪Nozzle | ▪Munstycke | 2 |
| 0180 | 5 | 85 59 601 | | RH | 1 | ▪Nozzle | ▪Munstycke | 2 |
| 0182 | 5 | 95 09 118 | | 36), LH | 1 | ▪Nozzle | ▪Munstycke | 2 |
| 0183 | 5 | 95 09 126 | | 36), RH | 1 | ▪Nozzle | ▪Munstycke | 2 |
| 0187 | 6 | 95 58 149 | | 36) | 2 | ▪Adapter | ▪Adapter | 5 |
| 0190 | 6 | 85 46 368 | | | 2 | Adapter | Adapter | 5 |
| 0200 | 7 | 85 52 119 | S | | 2 | Wiper blade | Torkarblad | 2 |
| 0205 | 7 | *95 56 309* | | 36)-1987 NLS - USE 9120882 | 2 | Wiper blade | Torkarblad | 2 |
| 0205 | | | | | | | | |
| 0207 | 7 | 91 20 882 | | 36), 1988- | 2 | Wiper blade | Torkarblad | 2 |
| 0210 | 10 | 85 52 077 | | | 2 | Cover | Kåpa | 3 |
| 0220 | 11 | 80 29 548 | | -1987 | 2 | Nut | Mutter | 5 |
| 0230 | 11 | 81 51 219 | | 1988- | 2 | Nut | Mutter | 5 |
| 0240 | 12 | 79 72 284 | | | 2 | Washer | Bricka | 5 |
| 0250 | 13 | 85 78 510 | S | | 2 | Seal | Tätning | 4 |
| 0260 | 14 | 85 72 604 | S | | 2 | Seal | Tätning | 4 |
| 0280 | 15 | 85 52 184 | | | 2 | Nut | Mutter | 5 |
| 0300 | 16 | 79 68 514 | | | 2 | Washer | Bricka | 5 |
| 0305 | 17 | 79 71 658 | | 36) | 4 | Nut | Mutter | 5 |
| 0310 | 18 | 80 19 895 | | 36) | 4 | Screw | Skruv | 5 |
| 0320 | | 85 46 327 | | | X | Wiper blade kit | Torkarbladssats | 2 |
| 0330 | | 85 47 408 | | 36) | X | Wiper blade kit | Torkarbladssats | 2 |
| 0335 | | | | See page 3A-147, 2-C04 | | | | |
| 0340 | | 85 48 133 | | LH | X | Wiper motor kit | Torkarmotorsats | 3 |
| 0350 | | | | See page 3A-151, 2-G08 | | | | |
| 0360 | | 85 48 141 | | RH | X | Wiper motor kit | Torkarmotorsats | 3 |
| 0370 | | | | See page 3A-151, 2-G08 | | | | |

36. For cars with integrated bumpers. För bilar med integrerade stötfångare.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-C12

## *Washer unit*

## *Spolaranläggning*

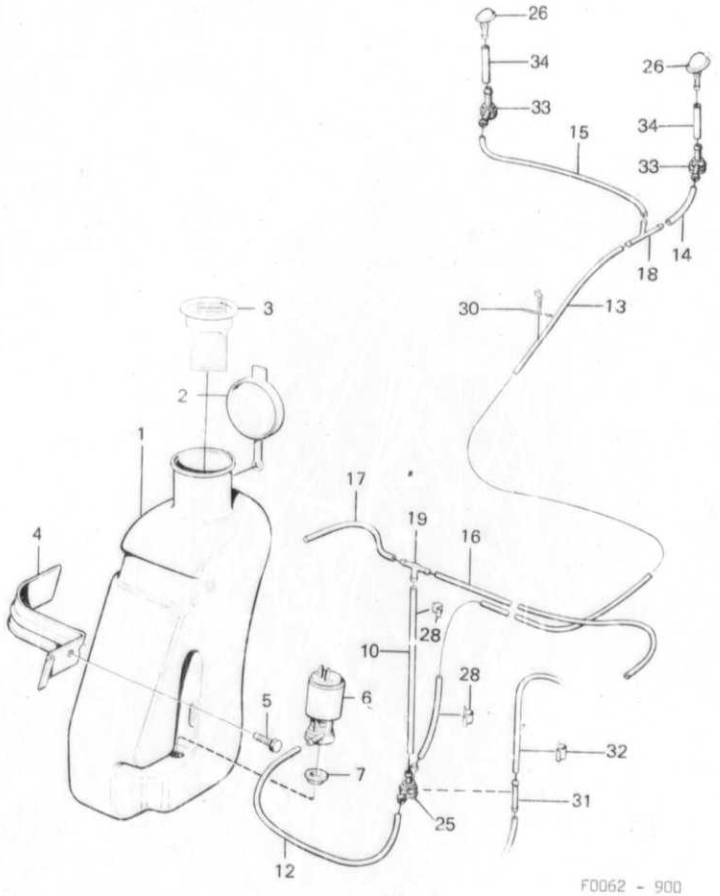


| 0900 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | *85 44 744* | | -1986 NLS - USE 4061867, 9557778 | 1 | Reservoir | Behållare | 3 |
| 0030 | 1 | *95 57 240* | | 1987 NLS - USE 4061867 | 1 | Washer fluid reservoir | Spolarburk | 3 |
| 0035 | 1 | 95 66 902 | | 1988- | 1 | Washer fluid reservoir | Spolarburk | 3 |
| 0040 | 2 | 85 18 557 | | -1987 | 1 | Cover | Lock | 2 |
| 0045 | 2 | 85 18 557 | | 149), 1988- | 1 | Cover | Lock | 2 |
| 0050 | 3 | *85 60 161* | | -1987 NLS - USE 9566332 | 1 | Filter | Filter | 4 |
| 0055 | 3 | 95 66 332 | | 149), 1988- | 1 | Filter | Filter | 4 |
| 0060 | 4 | 85 51 137 | | -1986 | 1 | Bracket | Fäste | 5 |
| 0070 | 4 | 95 57 778 | | 1987- | 1 | Bracket | Fäste | 5 |
| 0100 | 5 | 80 19 945 | | | 1 | Screw | Skruv | 5 |
| 0135 | 6 | 95 06 379 | | | 1 | Washer pump | Spolarpump | 2 |
| 0140 | 7 | *95 12 583* | | 46) NLS - USE 9528795 | 1 | Rubber bushing | Gummibussning | 3 |
| 0145 | 7 | 95 28 795 | | 47) | 1 | Rubber bushing | Gummibussning | 3 |
| 0150 | 10 | 85 33 341 | | | 1 | Hose | Slang | 5 |
| 0160 | 12 | 85 33 374 | | | 1 | Hose | Slang | 5 |
| 0180 | 13 | 85 60 732 | | | 1 | Hose | Slang | 5 |
| 0200 | 14 | 85 52 044 | | | 1 | Hose | Slang | 5 |
| 0220 | 15 | 85 60 740 | | | 1 | Hose | Slang | 5 |
| 0240 | 16 | 85 44 785 | | | 1 | Hose | Slang | 5 |
| 0260 | 17 | 85 44 793 | | | 1 | Hose | Slang | 5 |
| 0280 | 18 | 85 09 002 | | | 1 | Tube | Rör | 2 |
| 0300 | 19 | 85 44 660 | | | 1 | T-pipe | T-rör | 2 |
| 0320 | 25 | *85 73 651* | | -1988 NLS - USE 9569013 | 1 | Valve | Ventil | 3 |
| 0325 | 25 | 95 69 013 | | 500), 1989- | 1 | Valve | Ventil | 3 |
| 0340 | 26 | 85 04 144 | | 150) | 1 | Nozzle | Munstycke | 2 |
| 0360 | 26 | *85 44 728* | | 151) NLS - USE 4254645 | 1 | Nozzle | Munstycke | 2 |
| 0380 | 28 | 71 56 409 | | | 2 | Clamp | Klammer | 5 |
| 0420 | 30 | 85 08 392 | | | 2 | Bracket | Hållare | 5 |
| 0440 | 31 | 85 08 848 | | 2) | 1 | Junction pipe | Skarvrör | 5 |
| 0460 | 32 | 79 33 443 | | 2) | 2 | Clip | Clips | 5 |
| 0480 | 33 | 85 73 669 | | | 2 | Valve | Ventil | |
| 0500 | 34 | 85 73 677 | | | 2 | Hose | Slang | 5 |

2. For cars without headlight wipers. För bilar utan strålkastartorkare.
46. Ch --H2013459.
47. Ch H2013460--.
149. Part of 95 66 902. Del av 95 66 902.
150. With two holes. Med två hål.
151. With one hole. Med ett hål.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-C14

## Central lock
## Centrallås

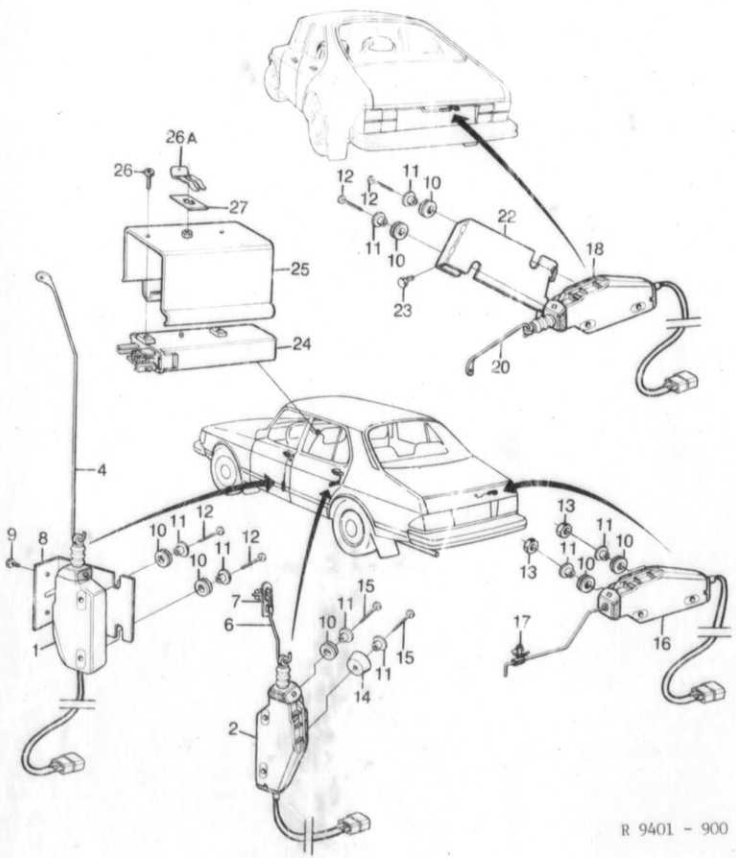


R 9401 - 900

| 0930 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 85 91 216 | | | 1 | Control device | Styrdon | 3 |
| 0040 | | | | See page 8A-075, 5-D04 | | Door lock | Dörrlås | |
| 0060 | 2 | 85 91 224 | | | 3 | Electric motor | Elmotor | 3 |
| 0090 | 4 | 85 98 245 | | LH | 1 | Pull rod | Dragstång | |
| 0091 | | | | | | front door | framdörr | |
| 0110 | 4 | 85 98 252 | | RH | 1 | Pull rod | Dragstång | |
| 0111 | | | | | | front door | framdörr | |
| 0120 | 6 | 85 78 221 | | | 2 | Pull rod | Dragstång | 5 |
| 0121 | | | | | | rear door | bakdörr | |
| 0140 | 7 | 84 61 675 | | | 2 | Clip | Clips | 5 |
| 0162 | 8 | 85 98 211 | | LH, 4SN, 5CK | 1 | Bracket | Konsol | 6 |
| 0164 | 8 | 95 51 151 | | RH, 4SN, 5CK | 1 | Bracket | Konsol | 6 |
| 0166 | 8 | 85 98 229 | | LH, 2SN, 3CK | 1 | Bracket | Konsol | 6 |
| 0168 | 8 | 85 98 237 | | RH, 2SN, 3CK | 1 | Bracket | Konsol | 6 |
| 0180 | 9 | 80 59 537 | | | 4 | Screw | Skruv | 5 |
| 0200 | 10 | 85 73 966 | | | 8 | Bushing | Bussning | 4 |
| 0220 | 11 | 85 73 958 | | | 8 | Sleeve | Hylsa | 5 |
| 0240 | 12 | 79 73 597 | | | 6 | Screw | Skruv | 5 |
| 0260 | 13 | 80 74 098 | | 4SN | 2 | Nut | Mutter | 5 |
| 0280 | 14 | 70 85 541 | | | 2 | Sleeve | Hylsa | 3 |
| 0300 | 15 | 79 73 597 | | | 4 | Screw | Skruv | 5 |
| 0320 | 16 | 85 91 232 | | 4SN | 1 | Electric motor | Elmotor | 3 |
| 0340 | 17 | 85 77 710 | | | 1 | ▪Clip | ▪Clips | 5 |
| 0360 | 18 | 85 91 224 | | CK | 1 | Electric motor | Elmotor | 3 |
| 0380 | 20 | 85 74 501 | | CK | 1 | Pull rod | Dragstång | 5 |
| 0400 | 22 | 85 75 391 | | CK | 1 | Bracket | Konsol | 6 |
| 0420 | 23 | 79 72 441 | | CK | 2 | Screw | Skruv | 5 |
| 0450 | 24 | *85 91 208* | | -1987 NLS - USE 8565855, 9529975, 9564170, 9564345 | 1 | Electronic unit | Elektronikenhet | 3 |
| 0450 | | | | | | | | |
| 0455 | 24 | 95 29 975 | | 1988- | 1 | Electronic unit | Elektronikenhet | 3 |
| 0460 | 25 | 85 91 414 | | -1987 | 1 | Attaching brace | Fästbygel | 6 |
| 0470 | 25 | 95 64 170 | | 1988- | 1 | Attaching brace | Fästbygel | 6 |
| 0480 | 26 | 79 71 344 | | -1987 | 2 | Screw | Skruv | 5 |
| 0490 | 26A | 85 65 855 | | 1988- | 1 | Clip | Clips | 6 |
| 0500 | 27 | 95 64 345 | | 1988- | 1 | Spacer washer | Distansbricka | 5 |
| 0510 | | | | See page 8A-083, 5-D12 | | Cover | Lock | |
| 0600 | | 85 47 085 | | C, 3CK | X | Central lock | Centrallås | 5 |
| 0620 | | | | See page 8A-173, 5-H06 | | | | |
| 0640 | | 85 47 127 | | I, 3CK | X | Central lock | Centrallås | 5 |
| 0660 | | | | See page 8A-173, 5-H06 | | | | |
| 0680 | | 85 47 093 | | C, 5CK | X | Central lock | Centrallås | 5 |
| 0700 | | | | See page 8A-173, 5-H06 | | | | |
| 0720 | | 85 47 135 | | I, 5CK | X | Central lock | Centrallås | 5 |
| 0740 | | | | See page 8A-173, 5-H06 | | | | |
| 0760 | | 85 47 101 | | C, 4SN | X | Central lock | Centrallås | 5 |
| 0780 | | | | See page 8A-173, 5-H06 | | | | |
| 0800 | | 85 47 143 | | I, 4SN | X | Central lock | Centrallås | 5 |
| 0820 | | | | See page 8A-173, 5-H06 | | | | |
| 0840 | | 85 47 119 | | C, 2SN | X | Central lock | Centrallås | 5 |
| 0860 | | | | See page 8A-173, 5-H06 | | | | |
| 0880 | | 85 47 150 | | I, 2SN | X | Central lock | Centrallås | 5 |
| 0900 | | | | See page 8A-173, 5-H06 | | | | |



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-C16

## Switch
## Strömställare

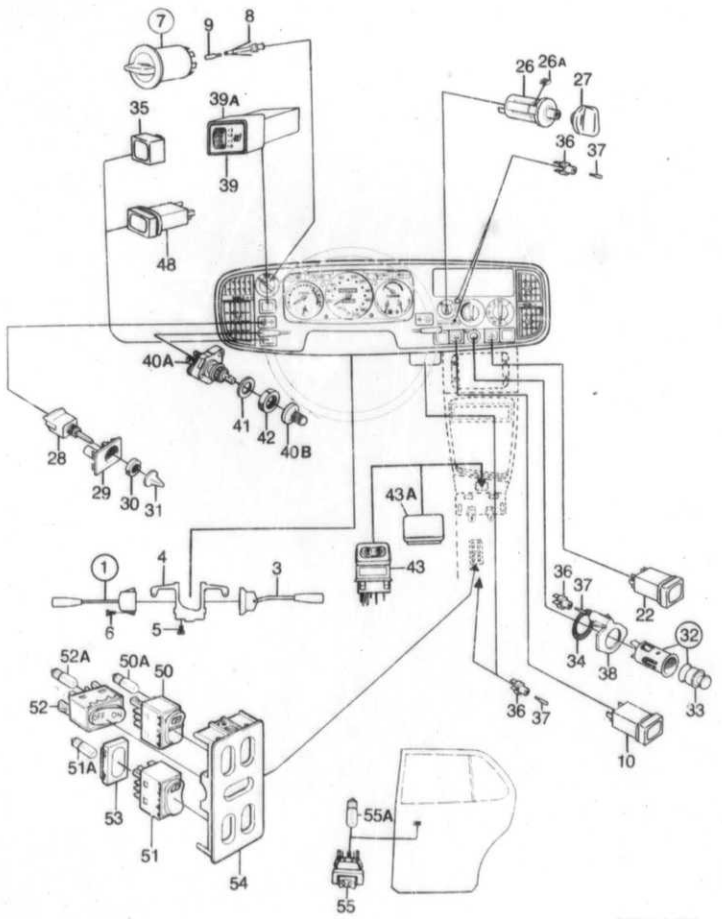


F5611 90086

| 0950 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *85 90 820* | | NLS - USE 8590812 | 1 | Switch | Strömställare | 2 |
| 0020 | | | | | | direction indicator | blinkers | |
| 0030 | 1 | 85 90 812 | | US, CA, JP | 1 | Switch | Strömställare | |
| 0040 | | | | | | direction indicator | blinkers | |
| 0050 | 1 | *85 83 536* | | 58), -1988 | 1 | Switch | Strömställare | 4 |
| 0060 | | | | NLS - USE 8547960 | | direction indicator | blinkers | |
| 0070 | 1 | 95 65 623 | | 58,500), 1989- | 1 | Switch | Strömställare | 4 |
| 0080 | | | | | | direction indicator | blinkers | |
| 0090 | | | | | | | | |
| 0100 | 3 | 85 90 853 | | | 1 | Switch | Strömställare | 3 |
| 0110 | | | | | | windscreen wiper | vindrutetorkare | |
| 0120 | 3 | 85 96 140 | | 152) | 1 | Switch | Strömställare | 3 |
| 0130 | | | | | | windscreen wiper | vindrutetorkare | |
| 0140 | 4 | 85 53 927 | | | 1 | Bracket | Konsol | 6 |
| 0150 | 5 | 79 22 347 | | -1988 | 2 | Screw | Skruv | 5 |
| 0160 | 5 | 79 22 800 | | 500), 1989- | 2 | Screw | Skruv | 5 |
| 0170 | 6 | 79 72 219 | | | 4 | Screw | Skruv | 5 |
| 0180 | 7 | 85 90 838 | | | 1 | Switch | Strömställare | 3 |
| 0190 | | | | | | light switch | ljusomkopplare | |
| 0200 | 8 | 95 53 356 | | | 1 | ▪Bracket | ▪Hållare | 4 |
| 0210 | 9 | 85 00 613 | | 40/238 286 009 | 1 | ▪Bulb | ▪Glödlampa | 2 |
| 0220 | 10 | 95 12 658 | | -1986 | 1 | Switch | Strömställare | 3 |
| 0230 | | | | | | rear window | bakruta | |
| 0240 | 10 | 95 23 721 | | 1987- | 1 | Switch | Strömställare | 3 |
| 0250 | | | | | | rear window | bakruta | |
| 0260 | 10 | *95 14 019* | | -1986, US, CA, JP, ME,FE | 1 | Switch | Strömställare | 3 |
| 0270 | | | | NLS - USE 9523820 | | rear window | bakruta | |
| 0280 | 10 | 95 23 820 | | 1987-, US, ME, FE | 1 | Switch | Strömställare | 3 |
| 0290 | | | | | | rear window | bakruta | |
| 0300 | 10 | *95 12 682* | | -1986, AC NLS - USE 9523788 | 1 | Switch | Strömställare | 3 |
| 0310 | 10 | 95 23 788 | | 1987-, AC | 1 | Switch | Strömställare | 3 |
| 0320 | 10 | *95 14 027* | | -1986 | 1 | Switch | Strömställare | 3 |
| 0330 | | | | NLS - USE 9523846 | | recirculation | recirkulation | |
| 0340 | 10 | 95 23 846 | | 1987- | 1 | Switch | Strömställare | 3 |
| 0350 | | | | | | recirculation | recirkulation | |
| 0360 | 22 | 95 12 641 | | | 1 | Switch | Strömställare | 3 |
| 0370 | | | | | | warning flasher | varningsblinklykta | |
| 0380 | 26 | 85 50 360 | | | 1 | Switch | Strömställare | 3 |
| 0390 | | | | | | fan | fläkt | |
| 0400 | 26A | 72 86 271 | | | 1 | Clip | Clips | 5 |
| 0410 | 27 | 94 79 866 | | | 1 | Knob | Vred | 5 |
| 0420 | | | | | | fan | fläkt | |
| 0430 | 28 | 85 31 204 | | EM | 2 | Switch | Strömställare | 3 |
| 0440 | 29 | 85 41 856 | | | 2 | Bracket | Hållare | 5 |
| 0450 | 30 | 85 28 358 | | | 2 | Nut | Mutter | 5 |
| 0460 | 31 | 85 79 492 | | | 2 | Button | Knapp | 5 |
| 0470 | 32 | 85 74 469 | | | 1 | Cigarette lighter | Cigarettändare | 4 |
| 0480 | 33 | *85 59 213* | | NLS - USE 8559221 | 1 | ▪Lighter unit | ▪Tändarenhet | 4 |
| 0490 | 34 | 85 32 426 | | | 1 | Clip | Clips | 5 |
| 0500 | 35 | *85 42 912* | | -1988 NLS - USE 9568122 | 4 | Button | Knapp | 5 |
| 0510 | 35 | 95 68 122 | | 500), 1989- | 4 | Button | Knapp | 5 |
| 0520 | 36 | 85 09 697 | | | 4 | Bulb socket | Lamphållare | 5 |
| 0530 | 37 | 85 00 613 | | 40/238 286 009 | 4 | Bulb | Glödlampa | 2 |
| 0540 | 38 | 85 41 864 | | | 1 | Lighting | Belysning | 6 |
| 0550 | | | | | | cigarette lighter | cigarettändare | |
| 0560 | 39 | 95 18 820 | | 153), 1987 | 1 | Switch | Strömställare | 3 |
| 0570 | | | | | | heating pad | värmedyna | |

58. With speed control system. Med fartkontrollsystem.
152. For cars without headlight wipers. För bilar utan strålkastartorkare.
153. Drivers side. Förarsida.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX

0 General 1-A02
2 Engine 1-B02
3A Electrical general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 7-A02
9 Tools, labels 7-D02
10 Numerical register 7-E02


3A GROUP INDEX

Battery 2-A06
Alternator 2-A08
Starter 2-A12
Ignition system 2-A14
Lighting 2-B04
Electrical equipment, other 2-C04
Wiring and fuses 2-D14
Complete sets 2-G04

# 2-C18

## *Switch*

## *Strömställare*

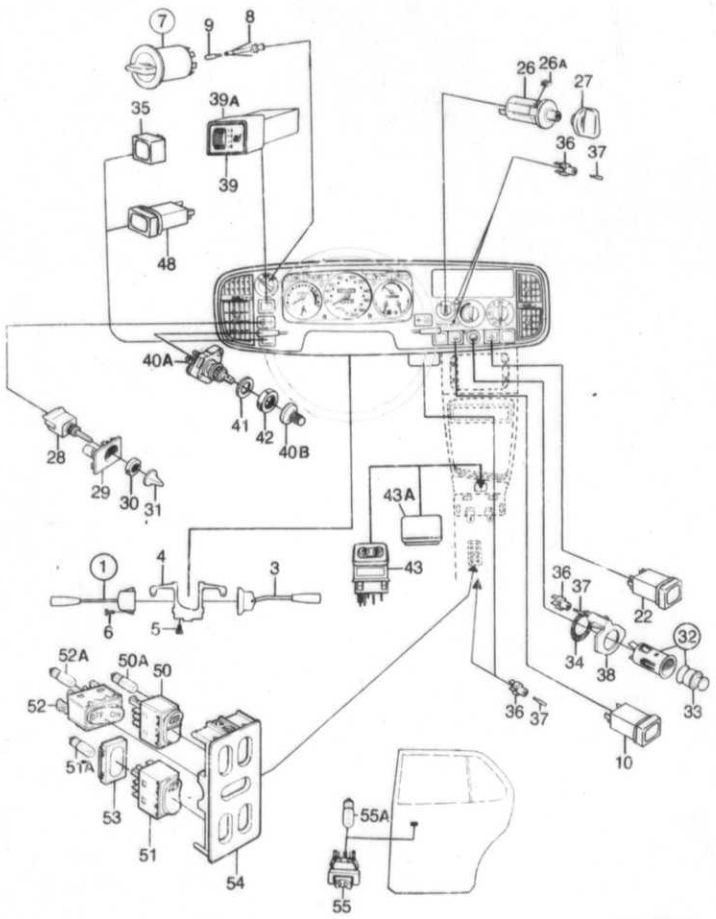


F5611 90086

| 0950 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0580 | 39 | *95 19 257* | | 153,154), 1987 | 1 | Switch | Strömställare | 3 |
| 0590 | | | | NLS - USE 4439014 | | heating pad | värmedyna | |
| 0600 | 39 | 95 18 820 | | 153), 1988- | 1 | Switch | Strömställare | 3 |
| 0610 | | | | | | heating pad | värmedyna | |
| 0615 | 39A | 40 84 554 | | 163), 1987- | X | Switch button | Strömställarknapp | 5 |
| 0616 | | | | See page 3A-151, 2-G08 | | kit | sats | |
| 0620 | 40A | 85 93 733 | | US, CA, JP, ME | 1 | Rheostat | Reostat | 3 |
| 0630 | 40B | 85 93 394 | | US, CA, JP, ME | 1 | Button | Knapp | 5 |
| 0640 | 41 | 85 81 068 | | US, CA, JP, ME | 1 | Washer | Bricka | 5 |
| 0650 | 42 | 85 79 898 | | US, CA, JP, ME | 1 | Nut | Mutter | 5 |
| 0660 | 43 | 95 50 617 | | EL-SR | 1 | Switch | Strömställare | 3 |
| 0670 | 43 | 95 97 386 | | CV | 1 | Switch | Strömställare | 3 |
| 0680 | | | | | | folding top | sufflett | |
| 0690 | 43A | 95 51 987 | | 155) | 1 | Cover | Täcklock | 5 |
| 0700 | 48 | *95 12 666* | | -1986 | 1 | Switch | Strömställare | 3 |
| 0710 | | | | NLS - USE 9523747 | | rear fog light | dimbaklykta | |
| 0720 | 48 | 95 23 747 | | 1987- | 1 | Switch | Strömställare | 3 |
| 0730 | | | | | | rear fog light | dimbaklykta | |
| 0740 | 48 | *95 12 674* | | -1986, US | 1 | Switch | Strömställare | 3 |
| 0750 | | | | NLS - USE 9523762 | | front fog light | dimstrålkastare | |
| 0760 | 48 | 95 23 762 | | 1987-, US | 1 | Switch | Strömställare | 3 |
| 0770 | | | | | | front fog light | dimstrålkastare | |
| 0780 | 48 | 95 23 804 | | US, CA | 1 | Switch | Strömställare | 3 |
| 0790 | | | | | | spotlight | exraljus | |
| 0800 | 50 | 95 12 310 | | LH | 1 | Switch | Strömställare | 3 |
| 0810 | | | | | | window lift | fönsterhiss | |
| 0820 | 50 | 95 01 859 | | RH | 1 | Switch | Strömställare | 3 |
| 0830 | | | | | | window lift | fönsterhiss | |
| 0840 | 50 | 95 01 859 | | LH, RHD | 1 | Switch | Strömställare | 3 |
| 0850 | | | | | | window lift | fönsterhiss | |
| 0860 | 50 | 95 12 310 | | RH, RHD | 1 | Switch | Strömställare | 3 |
| 0870 | | | | | | window lift | fönsterniss | |
| 0875 | 50A | 85 48 992 | | | 1 | . Bulb | . Glödlampa | 4 |
| 0880 | 51 | 95 01 867 | | | 2 | Switch | Strömställare | 3 |
| 0890 | | | | | | window lift | fönsterhiss | |
| 0895 | 51A | 85 48 992 | | | 1 | . Bulb | . Glödlampa | 4 |
| 0900 | 52 | 95 01 875 | | | 1 | Switch | Strömställare | 3 |
| 0910 | | | | | | window lift | fönsterhiss | |
| 0915 | 52A | 85 48 992 | | | 1 | . Bulb | . Glödlampa | 4 |
| 0920 | 53 | 95 01 891 | | -1988, 3CK | 3 | Cover washer | Täckbricka | 5 |
| 0930 | 53 | 91 25 212 | | 500), 1989-, 3CK | 3 | Cover washer | Täckbricka | 5 |
| 0940 | 54 | 95 01 917 | | | 1 | Frame | Ram | 6 |
| 0950 | 55 | 95 01 909 | | | 2 | Switch | Strömställare | 3 |
| 0960 | | | | | | window lift | fönsterhiss | |
| 0970 | 55A | 85 48 992 | | | 1 | . Bulb | . Glödlampa | 4 |

153. Drivers side. Förarsida.
154. For cars with leather covers. För bilar med läderklädsel.
155. For cars without el. sun roof. För bilar utan el. soltak.
163. Rheostat. Reostat.
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

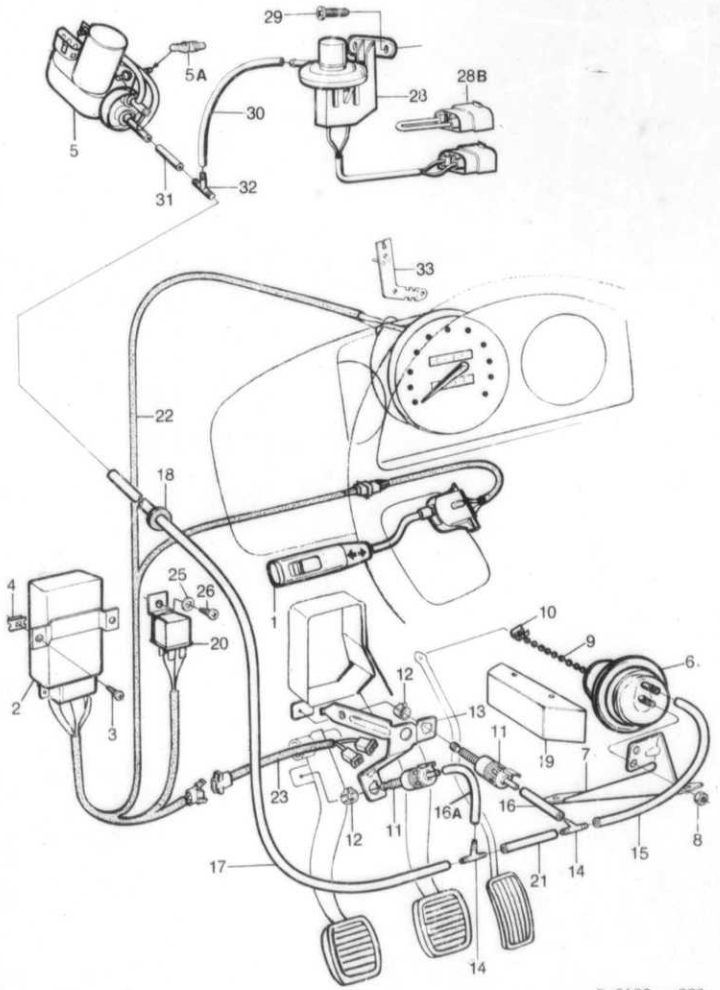


R 9402 - 900

| 0975 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | | | See page 3A-063, 2-C16 | 1 | Switch | Omkopplare | |
| 0020 | 2 | 85 87 016 | | -1986 | 1 | Electronic unit | Elektronikenhet | 5 |
| 0030 | 2 | 95 60 905 | | 1987- | 1 | Electronic unit | Elektronikenhet | 5 |
| 0040 | 3 | 79 22 354 | | -1988 | 2 | Screw | Skruv | 5 |
| 0045 | 3 | 79 22 818 | | 500), 1989- | 2 | Screw | Skruv | 5 |
| 0050 | 4 | 79 72 573 | | | 2 | Clip nut | Clipsmutter | 5 |
| 0060 | 5 | 85 87 024 | | | 1 | Vacuum pump | Vakuumpump | 5 |
| 0070 | 5A | 95 55 194 | | | 3 | ▲Bracket | ▲Upphängning | 6 |
| 0080 | 6 | 95 12 302 | | | 1 | Vacuum regulator | Vakuumregulator | 5 |
| 0090 | 7 | 85 87 040 | | -1988 | 1 | Bracket | Konsol | 6 |
| 0100 | 7 | 95 68 882 | | 500), 1989- | 1 | Bracket | Konsol | 6 |
| 0110 | 8 | 80 74 288 | | | 1 | Nut | Mutter | 5 |
| 0120 | 9 | 85 87 081 | | 83) | 1 | Chain | Kedja | 6 |
| 0125 | 9 | 40 61 909 | | 84) | 1 | Chain | Kedja | 6 |
| 0130 | 10 | *85 87 099* | | NLS - USE 4433827 | 1 | Clamp | Klammer | 6 |
| 0140 | 11 | 95 12 294 | | -1988 | 2 | Contact | Kontakt | 3 |
| 0150 | 11 | *95 22 855* | | 500), 1989- NLS - USE 4350443 | 2 | Contact | Kontakt | 3 |
| 0160 | 12 | 95 08 813 | | -1988 | 2 | Clip | Clips | 6 |
| 0170 | 12 | 85 30 917 | | 500), 1989- | 2 | Clip | Clips | 5 |
| 0180 | 13 | 85 98 054 | | -1988 | 1 | Bracket | Konsol | 6 |
| 0190 | 13 | 95 63 149 | | 500), 1989- | 1 | Bracket | Konsol | 6 |
| 0195 | 13 | 95 64 949 | | 85,135) | 1 | Bracket | Konsol | 6 |
| 0197 | 13 | 41 08 759 | | 136) | 1 | Bracket | Konsol | 6 |
| 0200 | 14 | 85 09 002 | | | 2 | Tube | Rör | 2 |
| 0210 | 15 | *85 90 689* | | -1987 NLS - USE 9566423 | 1 | Hose | Slang | 5 |
| 0220 | 15 | 95 66 415 | | 1988- | 1 | Hose | Slang | 5 |
| 0230 | 16 | *85 87 354* | | -1987 NLS - USE 9566381 | 2 | Hose | Slang | 5 |
| 0240 | 16 | 95 66 381 | | 1988- | 2 | Hose | Slang | 5 |
| 0250 | 16A | *85 87 354* | | -1987 NLS - USE 9566381 | 2 | Hose | Slang | 5 |
| 0260 | 16A | *85 87 354* | | 1988- NLS - USE 9566381 | 2 | Hose | Slang | 5 |
| 0270 | 16A | *85 87 354* | | 1988-, M NLS - USE 9566381 | 2 | Hose | Slang | 5 |
| 0280 | 17 | 85 87 362 | | -1986, L=1500 MM | 1 | Hose | Slang | 5 |
| 0290 | 17 | *85 99 458* | | 1987, L=1200 MM NLS - USE 9566548 | 1 | Hose | Slang | 5 |
| 0300 | 17 | 95 66 548 | | 1988-, L=1200 MM | 1 | Hose | Slang | 5 |
| 0310 | 18 | 79 61 345 | | -1988 | 1 | Bushing | Bussning | 5 |
| 0315 | 18 | 79 78 042 | | 500), 1989- | 1 | Bushing | Bussning | 6 |
| 0320 | 19 | 85 87 255 | | | 1 | Protection | Skydd | 6 |
| 0330 | 20 | 85 91 455 | | 44) | 1 | Relay | Relä | 5 |
| 0340 | 20 | 95 63 099 | | 45)-1988 | 1 | Relay | Relä | 5 |
| 0350 | 21 | *85 87 347* | | -1987 NLS - USE 9566399 | 1 | Hose | Slang | 5 |
| 0360 | 21 | *85 87 347* | | 1988- NLS - USE 9566399 | 1 | Hose | Slang | 5 |
| 0370 | 21 | 95 66 399 | | 1988-, M | 1 | Hose | Slang | 5 |
| 0380 | 22 | *85 89 277* | | -1987 NLS - USE 9562158 | 1 | Cable harness | Ledningsnät | 5 |
| 0400 | 22 | 95 62 141 | | 1988 | 1 | Cable harness | Ledningsnät | 5 |
| 0440 | 22 | 95 68 742 | | 500), 1989-, SE, FI, EU, | 1 | Cable harness | Ledningsnät | 5 |
| 0455 | 22 | 95 68 536 | | 1989-, US, CA, JP | 1 | Cable harness | Ledningsnät | 5 |
| 0460 | 22 | 85 91 406 | | -1987, RHD | 1 | Cable harness | Ledningsnät | 5 |
| 0480 | 22 | 95 62 158 | | 1988, RHD | 1 | Cable harness | Ledningsnät | 5 |
| 0500 | 22 | 95 62 158 | | 500), 1989-, RHD | 1 | Cable harness | Ledningsnät | 5 |
| 0520 | 22 | 95 68 759 | | 1989-, RHD, GB, FE, AU | 1 | Cable harness | Ledningsnät | 5 |
| 0530 | | | | | | | | |
| 0540 | 23 | 85 91 992 | | -1988, M | 1 | Cable harness | Ledningsnät | 5 |

44. Ch -H2013308.
45. Ch H2013309-.
83. Ch -K3001164, -K7000046.
84. Ch K3001165-, K7000047-.
85. For cars with ABS brake system. För bilar med ABS bromsar.
135. Ch -K7031373.
136. Ch K7031374-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

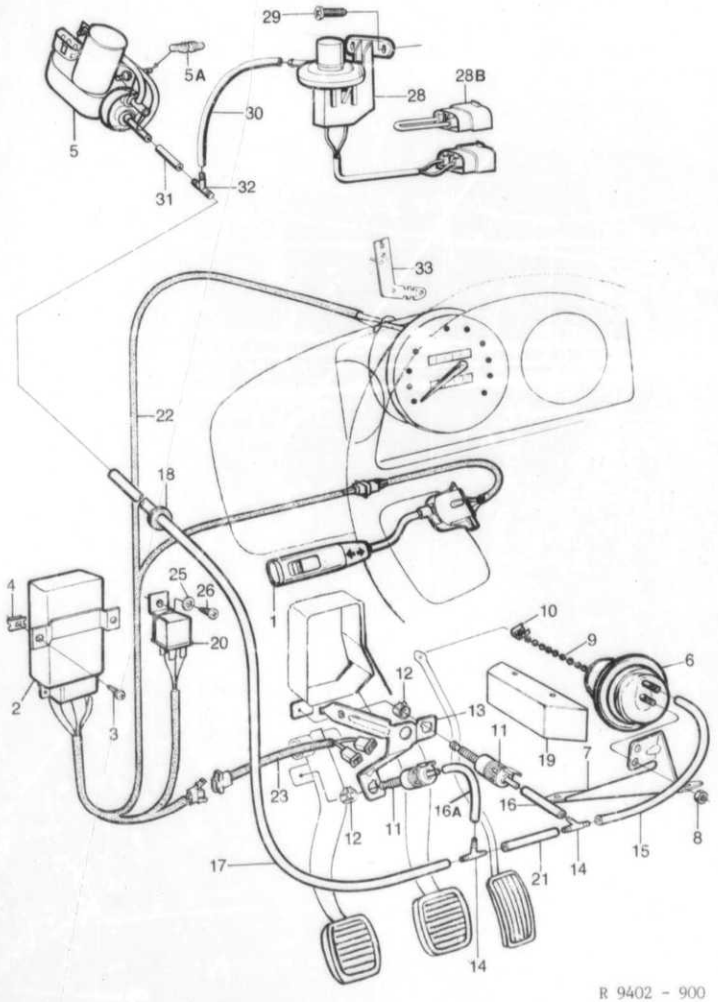


R 9402 - 900

Electric equipment, other

# 2-C22

## *Speed control system*

Övr. elektrisk utrustning

## *Farthållningssystem*

| 0975 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0560 | 23 | 91 20 239 | | 500), 1989-, M | 1 | Cable harness | Ledningsnät | 5 |
| 0580 | 23 | 85 91 984 | | -1988, A | 1 | Cable harness | Ledningsnät | 5 |
| 0600 | 23 | 91 20 247 | | 500), 1989-, A | 1 | Cable harness | Ledningsnät | 5 |
| 0610 | | | | | | | | |
| 0620 | 25 | 79 15 556 | | -1988 | 1 | Star washer | Taggbricka | 5 |
| 0630 | 26 | 79 22 347 | | -1988 | 1 | Screw | Skruv | 5 |
| 0640 | 28 | 85 98 195 | | -1987, B202 | 1 | Vacuum switch | Vakuumkontakt | 5 |
| 0650 | 28 | 85 98 195 | | 1988-, B202 | 1 | Vacuum switch | Vakuumkontakt | 5 |
| 0660 | 28 | 95 64 865 | | 1988-, B202, TURBO | 1 | Vacuum switch | Vakuumkontakt | 5 |
| 0670 | 28B | 85 98 526 | | 61), B202 | 1 | Cable harness | Ledningsnät | 4 |
| 0690 | 29 | 79 22 818 | | B202 | 2 | Screw | Skruv | 5 |
| 0700 | 30 | 91 36 243 | | -1988, B202, L=220 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0710 | 30 | 95 66 415 | | 500), 1989-, B202 | 1 | Hose | Slang | 5 |
| 0715 | 30 | 95 66 423 | | 500), 1989-, TURBO | 1 | Hose | Slang | 5 |
| 0720 | 31 | *85 87 354* | | -1987, B202 NLS - USE 9566381 | 1 | Hose | Slang | 5 |
| 0730 | 31 | *85 87 354* | | 1988-, B202 NLS - USE 9566381 | 1 | Hose | Slang | 5 |
| 0740 | 31 | 95 66 381 | | 1988-, TURBO | 1 | Hose | Slang | 5 |
| 0750 | 32 | 85 87 107 | | B202 | 1 | Manifold | Grenrör | 2 |
| 0760 | 33 | | | See page 3A-141, 2-F22 | | Impulse sensor | Impulsgivare | |
| 0780 | | | | | | | | |
| 0790 | | 91 36 243 | | L=5000 MM | X | Vaccum hose | Vakuumslang | 5 |

61. Without speed control system. Utan fartkontrollsystem.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2--C24

## *Actuator* — *Manöverdon*

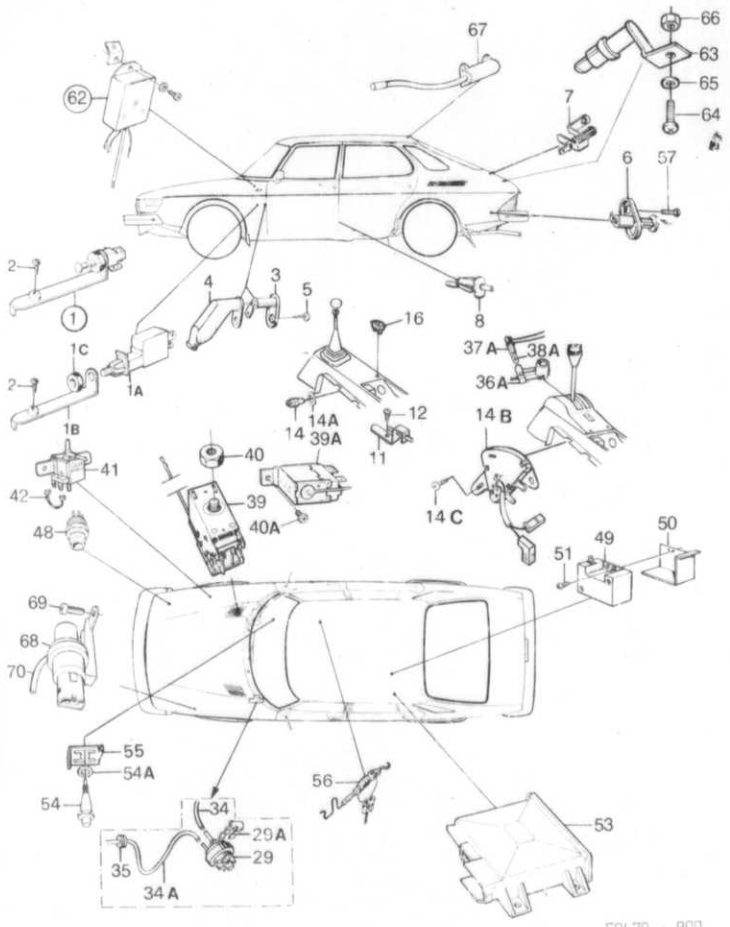


F0479 - 900

| 1000 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *85 77 736* | | -1986 NLS - USE 8561490, 8566259, 8577702 | 1 | Brake light switch | Bromsljuskontakt | 3 |
| 0020 | 1A | 85 77 702 | | 1987-1988 | 1 | Brake light switch | Bromsljuskontakt | 3 |
| 0025 | 1A | 85 48 802 | | 500), 1989-, (9505462) | 1 | Brake light switch | Bromsljuskontakt | 3 |
| 0030 | 1B | 85 61 490 | | 1987-1988 | 1 | Bracket | Konsol | 6 |
| 0035 | 1B | 95 68 809 | | 500), 1989- | 1 | Bracket | Hållare | 6 |
| 0037 | 1B | *95 68 783* | | 85,135) NLS - USE 4428330 | 1 | Bracket | Hållare | 6 |
| 0038 | 1B | 41 08 742 | | 136) | 1 | Bracket | Hållare | 6 |
| 0040 | 1C | 85 66 259 | | 1987-1988 | 1 | Nut | Mutter | 5 |
| 0050 | 2 | *79 71 757* | | NLS - USE 7528953 | 1 | Screw | Skruv | 5 |
| 0060 | 3 | 85 77 793 | | | 2 | Contact front door | Kontakt framdörr | 3 |
| 0070 | 4 | 85 68 883 | | | 2 | Protection | Skydd | 4 |
| 0080 | 5 | 79 21 885 | | | 2 | Plate screw | Plåtskruv | 5 |
| 0090 | 6 | 85 73 107 | | | 1 | Contact tail gate | Kontakt bagagerumsdörr | 3 |
| 0110 | 7 | 85 69 220 | | 4SN | 1 | Contact boot lid | Kontakt bagagerumslucka | 3 |
| 0120 | 8 | 85 22 402 | | | 1 | Contact rear door | Kontakt bakdörr | 3 |
| 0130 | 11 | 85 78 312 | | -1987 | 1 | Contact handbrake | Kontakt handbroms | 5 |
| 0140 | 11 | 85 22 492 | | 1988- | 1 | Contact handbrake | Kontakt handbroms | 3 |
| 0150 | 12 | 79 22 362 | | | 1 | Screw | Skruv | 5 |
| 0160 | 14 | 95 09 480 | | M | 1 | Contact reverse lamp | Kontakt backlampa | 3 |
| 0170 | 14A | 83 11 904 | | M | 1 | Washer | Bricka | 5 |
| 0180 | 14B | 85 83 585 | | 33), A, | 1 | Contact gear position | Kontakt växelläge | 3 |
| 0190 | 14B | 95 56 135 | | 34)-1987, A, US, CA, JP, ME, FE | 1 | Contact gear position | Kontakt växelläge | 3 |
| 0210 | 14B | 95 56 135 | | 1988, A, US, CA, JP, ME, FE | 1 | Contact gear position | Kontakt växelläge | 3 |
| 0230 | 14B | 95 56 135 | | 58), 1988, A, SE, FI, EU, GB | 1 | Contact gear position | Kontakt växelläge | 3 |
| 0245 | 14B | 95 56 135 | | 64,87,500),1989-, B201,A | 1 | Contact gear position | Kontakt växelläge | 3 |
| 0247 | 14B | 95 56 135 | | 7, 500), 1989-, B202, A | 1 | Contact gear position | Kontakt växelläge | 3 |
| 0250 | 14B | 95 56 143 | | 34)-1987, A, SE, FI, EU, GB, AU | 1 | Contact gear position | Kontakt växelläge | 3 |
| 0270 | 14B | 95 56 143 | | 1988, A, SE, FI, EU, GB, AU | 1 | Contact gear position | Kontakt växelläge | 3 |
| 0290 | 14B | 95 56 143 | | 61), 1988, A, SE, FI, EU, GB | 1 | Contact gear position | Kontakt växelläge | 3 |
| 0305 | 14B | 95 56 143 | | 61,77), 1989-, B201, A | 1 | Contact gear position | Kontakt växelläge | 3 |
| 0310 | 14B | 95 64 733 | | 64), B201 I, A | 1 | Contact gear position | Kontakt växelläge | 3 |

33. Ch --G202977, --G3017339, --G7021150.
34. Ch -G2020978-, G3017340-, G7021151-.
58. With speed control system. Med fartkontrollsystem.
61. Without speed control system. Utan fartkontrollsystem.
64. With catalytic converter. Med katalytisk reaktor.
77. Without catalytic converter. Utan katalytisk reaktor.
85. For cars with ABS brake system. För bilar med ABS bromsar.
87. For cars without catalytic converter and with speed control system. För bilar utan katalysator och med fartkontrollsystem.
135. Ch --K7031373.
136. Ch K7031374-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-D02

## *Actuator* — *Manöverdon*

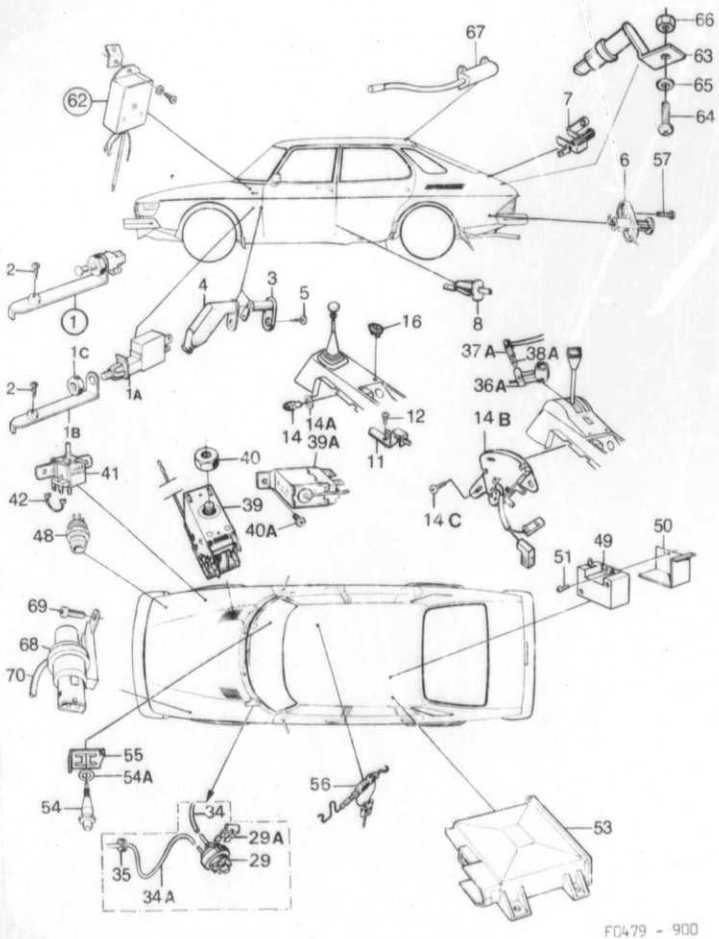


F0479 - 900

| 1000 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0315 | 14B | 95 64 733 | | 64,500), 1989-, B202, A | 1 | Contact | Kontakt | 3 |
| 0316 | | | | | | gear position | växelläge | |
| 0320 | 14C | 80 59 545 | | A | 2 | Screw | Skruv | 5 |
| 0330 | 16 | 95 51 904 | | -1986 | 1 | Switch | Strömställare | 3 |
| 0340 | | | | | | interior illum. | innerbelysning | |
| 0350 | 16 | 95 59 766 | | 1987- | 1 | Switch | Strömställare | 3 |
| 0360 | | | | | | interior illum. | innerbelysning | |
| 0410 | 29 | 85 79 963 | | TURBO | 1 | Pressure monitor | Tryckvakt | 2 |
| 0420 | 29 | 85 79 963 | | TURBO, APC | 1 | Pressure monitor | Tryckvakt | 2 |
| 0430 | 29 | 85 94 632 | | -1988, B202 | 1 | Pressure monitor | Tryckvakt | 2 |
| 0435 | 29 | 85 94 632 | | 77), 1989-, B202 | 1 | Pressure monitor | Tryckvakt | 2 |
| 0440 | 29A | 85 65 855 | | | 1 | Clip | Clips | 6 |
| 0450 | 34 | | | See page 3A-141, 2-F22 | | Pressure monitor | Tryckvakt | |
| 0470 | 34A | 85 33 358 | | 350 MM | 1 | Hose | Slang | 5 |
| 0490 | 35 | 79 61 337 | | | 1 | Bushing | Bussning | 6 |
| 0500 | 36A | *85 75 060* | | -1986, A NLS - USE | 1 | Retainer | Hållare | 6 |
| 0500 | | | | 9560962 | | | | |
| 0510 | 36A | 95 60 962 | | 1987-, A | 1 | Retainer | Hållare | 6 |
| 0520 | 37A | 85 78 775 | | A | 1 | Bulb socket | Lamphållare | 4 |
| 0530 | 38A | 85 00 613 | | A | 1 | Bulb | Glödlampa | 2 |
| 0540 | 39 | 85 93 766 | | AC, SANKYO | 1 | Switch | Brytare | 4 |
| 0550 | 39A | 88 20 532 | | -1986 AC, CLARION | 1 | Thermo contact | Termokontakt | 4 |
| 0560 | 40 | 85 66 598 | | AC, SANKYO | 1 | Nut | Mutter | 5 |
| 0570 | 40A | 80 59 230 | | -1986 AC, CLARION | 2 | Screw | Skruv | 5 |
| 0580 | 41 | 85 91 117 | | AC, SANKYO | 1 | Solenoid valve | Magnetventil | 4 |
| 0590 | 41 | 88 21 142 | | -1986 AC, CLARION | 1 | Solenoid valve | Magnetventil | 4 |
| 0600 | 42 | 95 50 468 | | | 1 | Resistor | Motstånd | 3 |
| 0610 | 48 | *85 72 331* | | AC NLS - USE 4086724 | 1 | Thermo contact | Termokontakt | 2 |
| 0620 | 49 | 95 59 840 | | 1987-,39), US | 1 | Contact | Kontakt | 5 |
| 0621 | | | | | | sensor | sensor | |
| 0630 | 50 | 95 59 931 | | 1987,39), US | 1 | Bracket | Konsol | 6 |
| 0631 | | | | | | sensor | sensor | |
| 0635 | 50 | 95 69 864 | | 1988-,39), US | 1 | Bracket | Konsol | 6 |
| 0636 | | | | | | sensor | sensor | |
| 0640 | 51 | 79 22 206 | | 1987-,39), US | 2 | Screw | Skruv | 5 |
| 0650 | 53 | 95 54 429 | | 1987-,39), US | 1 | Control device | Styrdon | 5 |
| 0660 | 54 | 85 59 296 | | | 1 | Contact | Kontakt | 3 |
| 0670 | 54A | 98 41 958 | | | 1 | Washer | Bricka | 5 |
| 0680 | 55 | *85 59 304* | | NLS | 1 | Clip | Clips | 5 |
| 0690 | 56 | 85 99 516 | | | 1 | Contact | Kontakt | 5 |
| 0691 | | | | | | front seat | framstol | |
| 0695 | 56 | 95 05 652 | | 39) | 1 | Contact | Kontakt | 5 |
| 0696 | | | | | | front seat | framstol | |
| 0700 | 57 | 79 21 885 | | | 1 | Plate screw | Plåtskruv | 5 |
| 0710 | 62 | 85 91 109 | | ME | 1 | Warning flare | Varningsfyr | 5 |
| 0720 | | | | | | | | |
| 0730 | 63 | 95 05 694 | | CV | 1 | Contact | Kontakt | 3 |
| 0731 | | | | | | boot lid | bagagerumslucka | |
| 0740 | 64 | 79 46 742 | | CV | 1 | Screw | Skruv | 5 |
| 0750 | 65 | 79 15 556 | | CV | 1 | Star washer | Taggbricka | 5 |
| 0760 | 66 | 79 72 573 | | CV | 1 | Clip nut | Clipsmutter | 5 |
| 0770 | 67 | *69 51 594* | | 191), CV NLS | 1 | Contact | Kontakt | 4 |
| 0780 | 68 | 95 61 366 | | 64), 1988-, B201, SE, EU | 1 | Pressure switch | Tryckkontakt | 3 |
| 0800 | 69 | 79 22 818 | | 1988- | 2 | Screw | Skruv | 5 |
| 0810 | 70 | 91 36 243 | | 64), 1988-, B201, TURBO, | 1 | Vaccum hose | Vakuumslang | 5 |
| 0820 | | | | L=600 MM | | | | |
| 0821 | | | | See page 3A-151, 2-G08 | X | Brake light switch | Bromsljuskontakt | |
| 0822 | | | | | | kit | sats | |

39. For cars with automatic belts. För bilar med passivt bälte.
64. With catalytic converter. Med katalytisk reaktor.
77. Without catalytic converter. Utan katalytisk reaktor.
191. Se SI 346-1387.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-D04

## *Actuator*
## *Manöverdon*

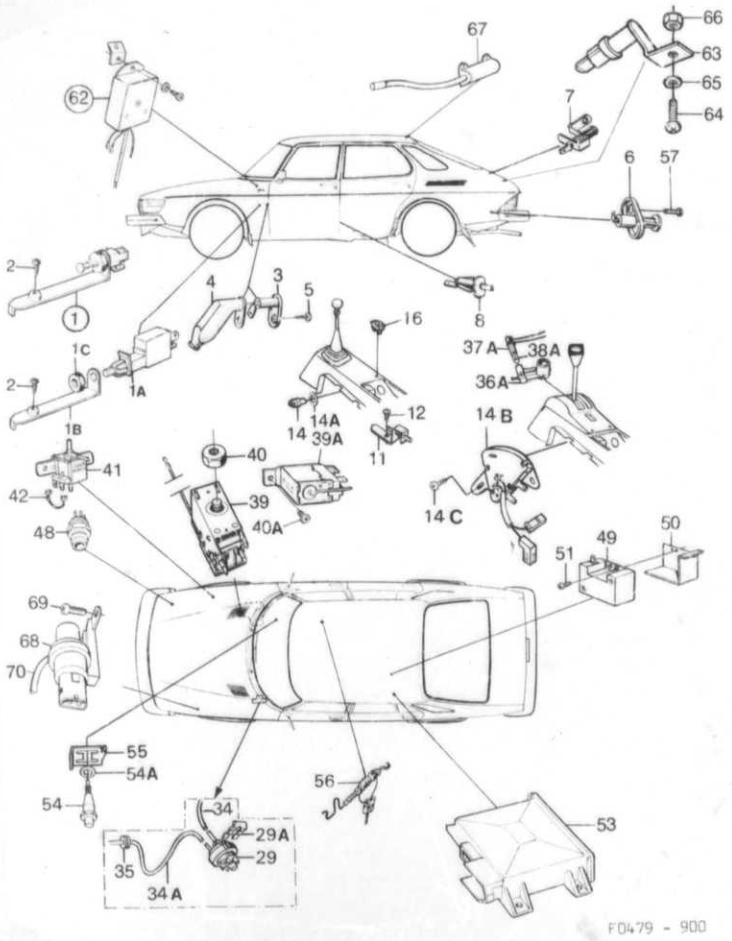


F0479 - 900

| 1000 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0823 | | | | | | | |
| 0840 | 91 36 243 | | L=5000 MM | X | Vaccum hose | Vakuumslang | 5 |



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-D06 Electrical aerial / Loudspeaker

# Motorantenn / Högtalare

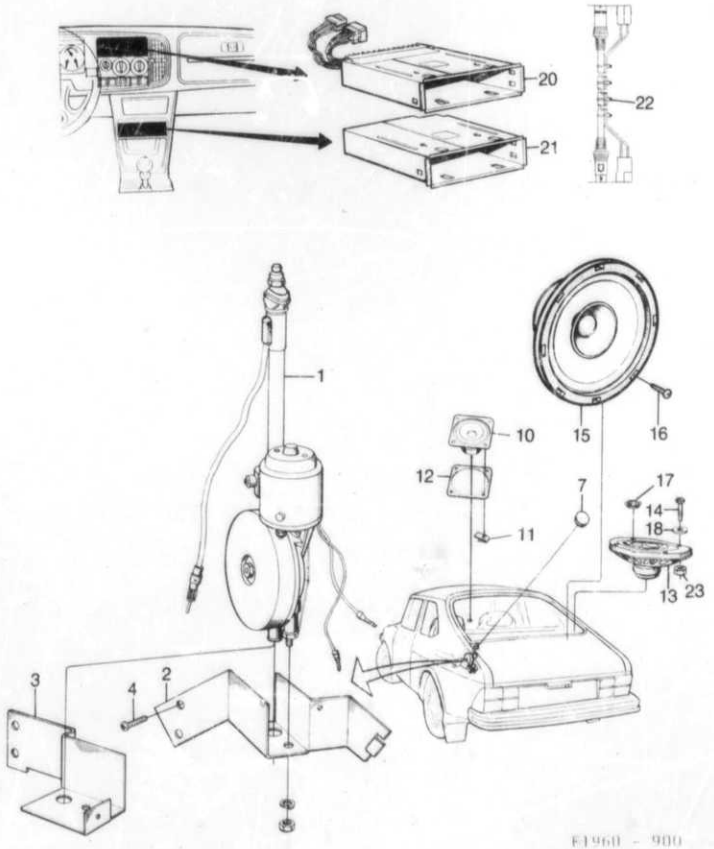


| 1015 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 85 94 335 | | -1987 | 1 | Antenna | Antenn | 5 |
| 0020 | 1 | 95 26 419 | | 1988- | 1 | Antenna | Antenn | 5 |
| 0030 | 2 | 85 94 350 | | CK | 1 | Bracket | Fäste | 5 |
| 0040 | 3 | 85 94 343 | | SN, CV | 1 | Bracket | Fäste | 5 |
| 0050 | 4 | 79 22 891 | | | 2 | Screw | Skruv | 5 |
| 0060 | 7 | 95 50 476 | | | 1 | Plug | Plugg | 5 |
| 0070 | 10 | 85 87 644 | | | 2 | Loudspeaker | Högtalare | 4 |
| 0075 | 10 | 85 87 644 | | 119), US | 2 | Loudspeaker | Högtalare | 4 |
| 0080 | 10 | 40 67 989 | | 120), US | 2 | Loudspeaker | Högtalare | 4 |
| 0090 | 10 | 95 97 204 | | 1987-, CV | 2 | Loudspeaker | Högtalare | 4 |
| 0095 | 10 | 85 87 644 | | 1989-, CV RHD | 2 | Loudspeaker | Högtalare | 4 |
| 0100 | 11 | 85 78 262 | | | 8 | Clip | Clips | 5 |
| 0110 | 12 | 95 09 076 | | | 2 | Spacer | Distans | 5 |
| 0120 | 13 | 85 99 441 | | 156), -1986, US, CA | 2 | Loudspeaker | Högtalare | 4 |
| 0130 | 13 | 85 99 441 | | 1987-,119,156), SN | 2 | Loudspeaker | Högtalare | 4 |
| 0140 | 13 | 95 51 235 | | 1987-,119,156), CK | 2 | Loudspeaker | Högtalare | 4 |
| 0145 | 13 | 95 51 235 | | 120,156), SN, CK | 2 | Loudspeaker | Högtalare | 4 |
| 0150 | 13 | 95 51 235 | | 1987-,119,156), CK, US | 2 | Loudspeaker | Högtalare | 4 |
| 0160 | 13 | 40 67 997 | | 120,156), CK, US | 2 | Loudspeaker | Högtalare | 4 |
| 0170 | 14 | 79 22 859 | | -1986, US, CA | 8 | Screw | Skruv | 5 |
| 0180 | 14 | 79 22 859 | | 1987-, SN | 8 | Screw | Skruv | 5 |
| 0190 | 14 | 80 19 572 | | 1987-, CK | 8 | Screw | Skruv | 5 |
| 0191 | 14 | 80 19 572 | | 1987-,119), CK, US | 8 | Screw | Skruv | 5 |
| 0193 | 14 | 80 19 598 | | 120), CK, US | 8 | Screw | Skruv | 5 |
| 0200 | 15 | 95 96 594 | | 156), -1986, CV | 2 | Loudspeaker | Högtalare | 4 |
| 0210 | 15 | 95 97 212 | | 156), 1987-, CV | 2 | Loudspeaker | Högtalare | 4 |
| 0220 | 16 | 79 65 684 | | -1986, CV | 8 | Screw | Skruv | 6 |
| 0230 | 16 | 79 67 581 | | 1987, CV | 8 | Screw | Skruv | 5 |
| 0240 | 16 | 79 71 500 | | 1988-, CV | 8 | Screw | Skruv | 5 |
| 0250 | 17 | 79 71 518 | | 1987-, CK | 8 | Lock washer | Spärrbricka | 5 |
| 0260 | 18 | 80 73 090 | | 1987-, CK | 8 | Washer | Bricka | 5 |
| 0270 | 20 | 95 28 209 | | 1988, US | 1 | Cage | Korg | 5 |
| 0280 | 20 | 95 27 961 | | 1988, US | 1 | Cage | Korg | 5 |
| 0281 | | | | | | with amplifier | med förstärkare | |
| 0290 | 20 | *40 65 397* | | 1989-, US | 1 | Cage | Korg | 5 |
| 0291 | | | | NLS - USE 4111100 | | with amplifier | med förstärkare | |
| 0300 | 20 | 40 65 405 | | 1989-, CV, US | 1 | Cage | Korg | 5 |
| 0310 | | | | | | with amplifier | med förstärkare | |
| 0320 | 21 | 95 27 979 | | 1988-, US | 1 | Cage | Korg | 5 |
| 0321 | | | | | | equalizer | equalizer | |
| 0330 | 22 | 95 28 217 | | 1988-, US | 1 | Cable | Kabel | 5 |
| 0331 | | | | | | radio-equalizer | radio-equalizer | |
| 0340 | 23 | 79 77 903 | | 120), CK, US | 8 | Nut | Mutter | 5 |

119. Ch -K3019784, -K7027230.
120. Ch K3019785-, K7027231-.
156. Rear. Bakre.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-D08

## *Gear indicator*

## *Växelindikator*

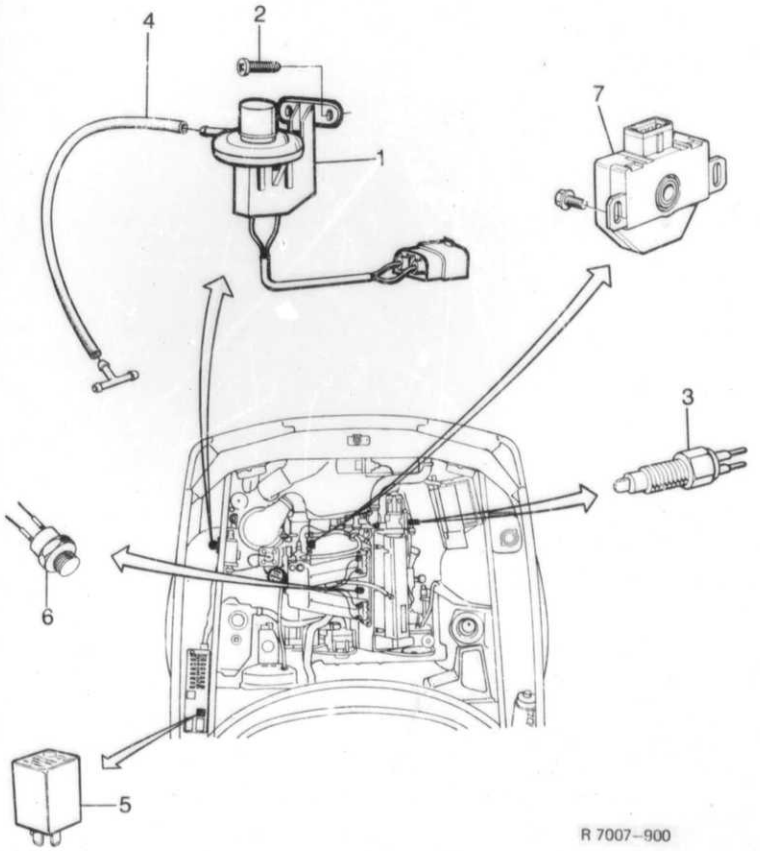


R 7007–900

| 1020 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0020 1 | *85 96 124* | | -1986 NLS - USE 9564857 | 1 | Contact | Kontakt | 5 |
| 0030 1 | 95 21 188 | | 1987 | 1 | Contact | Kontakt | 5 |
| 0035 1 | 95 64 857 | | 1988 | 1 | Contact | Kontakt | 5 |
| 0040 2 | 79 22 818 | | -1988 | 2 | Screw | Skruv | 5 |
| 0060 3 | *95 13 235* | | -1987 | 1 | Contact | Kontakt | 5 |
| 0080 | | | NLS - USE 9529355 | | gear indicator | växelindikator | |
| 0090 3 | 95 29 355 | | 1988 | 1 | Contact | Kontakt | 5 |
| 0095 | | | | | gear indicator | växelindikator | |
| 0100 4 | 91 36 243 | | L=310 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0120 5 | | | See page 3A-133, 2-F14 | | Relay | Relä | |
| 0160 6 | | | See page 2-101, 1-F06 | | Thermo contact | Termokontakt | |
| 0180 7 | | | See page 2-103, 1-F08 | | Shutter contact | Spjällkontakt | |
| 0190 | | | | | | | |
| 0200 | 91 36 243 | | L=5000 MM | X | Vaccum hose | Vakuumslang | 5 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX

| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-D10

## *Anti theft system* — *Stöldlarm*

## *Convertible* — *Cabriolet*

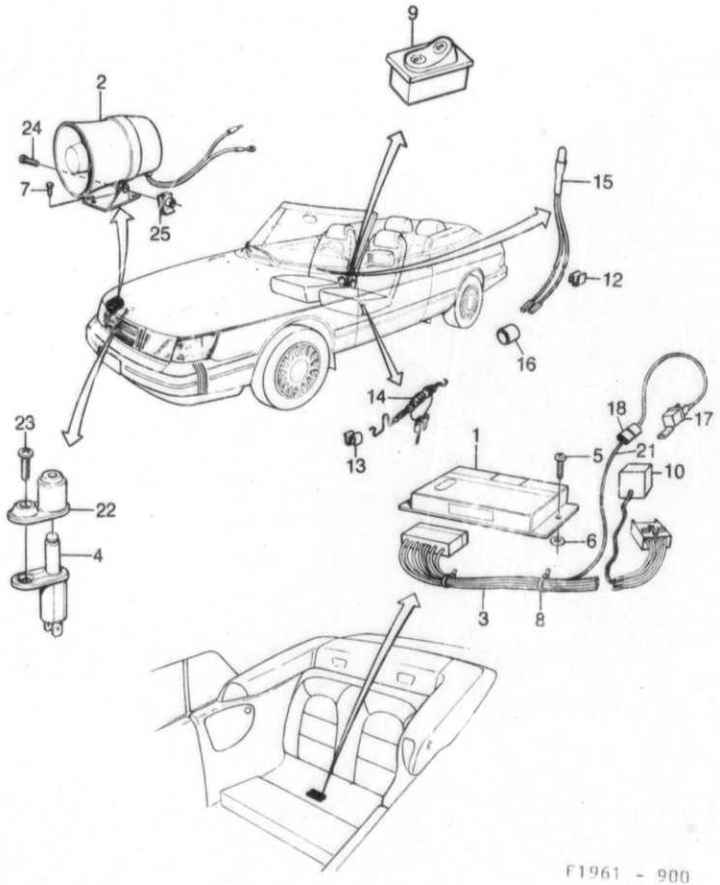


| 1030 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 95 96 891 | | | 1 | Electronic unit | Elektronikenhet | 5 |
| 0030 | 2 | 95 96 909 | | 137) | 1 | Horn | Signalhorn | 4 |
| 0035 | 2 | *95 98 103* | | 138) NLS - USE 9598541 | 1 | Horn | Signalhorn | 4 |
| 0040 | 3 | 95 96 917 | | -1986 | 1 | Cable harness | Ledningsnät | 5 |
| 0042 | 3 | 95 97 196 | | 1987-1988 | 1 | Cable harness | Ledningsnät | 5 |
| 0050 | 4 | 95 96 925 | | 186) | 1 | Contact | Kontakt | 5 |
| 0055 | 4 | 95 14 860 | | 187) | 1 | Contact | Kontakt | 3 |
| 0060 | 5 | 79 65 684 | | | 2 | Screw | Skruv | 6 |
| 0070 | 6 | 80 29 951 | | | 2 | Washer | Bricka | 5 |
| 0080 | 7 | 79 73 704 | | 137) | 2 | Screw | Skruv | 5 |
| 0090 | 8 | 79 71 864 | | | 3 | Tensioning band | Spännband | 5 |
| 0100 | 9 | 95 96 875 | | -1986 | 1 | Switch | Strömställare | 3 |
| 0110 | 9 | 95 97 147 | | 1987- | 1 | Switch | Strömställare | 3 |
| 0120 | 10 | 95 97 154 | | | 1 | Motion detector | Chockdetektor | 9 |
| 0130 | 11 | 79 71 880 | | 137) | 1 | Tensioning band | Spännband | 4 |
| 0140 | 12 | 85 02 643 | | 1987- | 1 | Clamp | Klämma | 5 |
| 0150 | 13 | 85 13 574 | | 1987- | 2 | Clip | Clips | 6 |
| 0160 | 14 | 85 99 516 | | 1987- | 2 | Contact | Kontakt | 5 |
| 0170 | 15 | 95 97 170 | | 1987- | 1 | Diode | Diod | 9 |
| 0180 | 16 | 95 97 188 | | 1987- | 1 | Bracket | Hållare | 0 |
| 0190 | 17 | 85 91 455 | | 40,51) | 1 | Relay | Relä | 5 |
| 0195 | 17 | 95 63 099 | | 52)-1988 | 1 | Relay | Relä | 5 |
| 0197 | 17 | | | 1989- | 1 | Relay | Relä | |
| 0198 | | | | See page 3A-133, 2-F14 | | | | |
| 0200 | 18 | 85 64 007 | | 40) | 1 | Fuse holder | Säkringshållare | 4 |
| 0220 | 19 | 79 15 556 | | 40) | 1 | Star washer | Taggbricka | 5 |
| 0225 | 20 | 79 73 704 | | 40) | 1 | Screw | Skruv | 5 |
| 0230 | 21 | 95 97 352 | | 40) | 1 | Cable harness | Ledningsnät | 6 |
| 0240 | 22 | 95 12 229 | | 1989- | 1 | Protection | Skyddshölje | 3 |
| 0250 | 23 | 79 22 891 | | 1989- | 1 | Screw | Skruv | 5 |
| 0260 | 24 | 97 78 952 | | 138) | 1 | Screw | Skruv | 5 |
| 0272 | 25 | 82 67 098 | | 139) | 1 | Clip | Clips | 5 |

40. Ch H7003142-.
51. Ch -H2013308, -H3013282, -H7025450.
52. Ch H2013309-, H3013283-, H7025451-.
137. Ch -K7034118.
138. Ch K7034119-.
186. Ch -J7011806.
187. Ch J7011807-.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-D12 Electrical system / Elektriskt system
## ABS

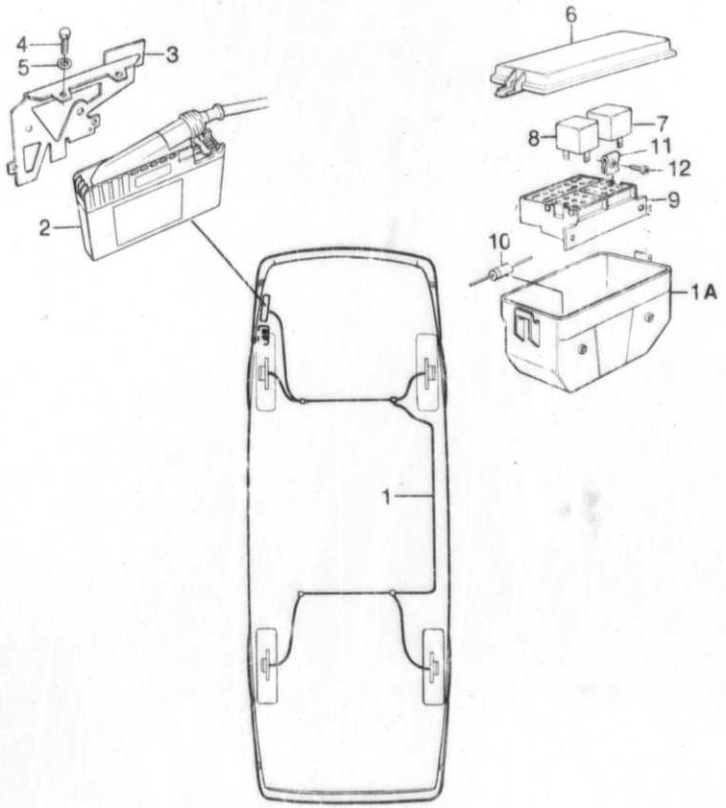


F5612 90086

| 1040 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 35 63 164 | | | 1 | Cable harness | Ledningsnät | 6 |
| 0020 | 1A | *95 19 695* | | NLS - USE 4111118 | | .Box | .Box | 4 |
| 0030 | 2 | 91 04 233 | | 700) | 1 | Electronic unit | Elektronikenhet | 4 |
| 0040 | 3 | 91 04 043 | | | 1 | Bracket | Konsol | 5 |
| 0050 | 4 | 80 59 396 | | | 3 | Screw | Skruv | 5 |
| 0060 | 5 | 80 29 944 | | | 2 | Washer | Bricka | 5 |
| 0070 | 6 | 91 24 611 | | | 1 | Cover | Lock | 5 |
| 0080 | 7 | 95 22 822 | | | 1 | Relay | Relä | 5 |
| 0081 | | | | | | pump | pump | |
| 0090 | 8 | 85 33 176 | | | 1 | Relay | Relä | 3 |
| 0091 | | | | | | main | huvud | |
| 0100 | 9 | 91 25 543 | | | 1 | Contact housing | Kontakthus | 4 |
| 0110 | 10 | 44 24 172 | | (8574881) | 2 | Diode | Diod | 5 |
| 0120 | 11 | 79 68 001 | | | 2 | Clip nut | Clipsmutter | 5 |
| 0130 | 12 | 79 70 601 | | | 2 | Screw | Skruv | 5 |

700. Also available as exchange unit. Finns även som utbytesenhet.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-D14

## Front and engine 1986

## Främre och motor 1986

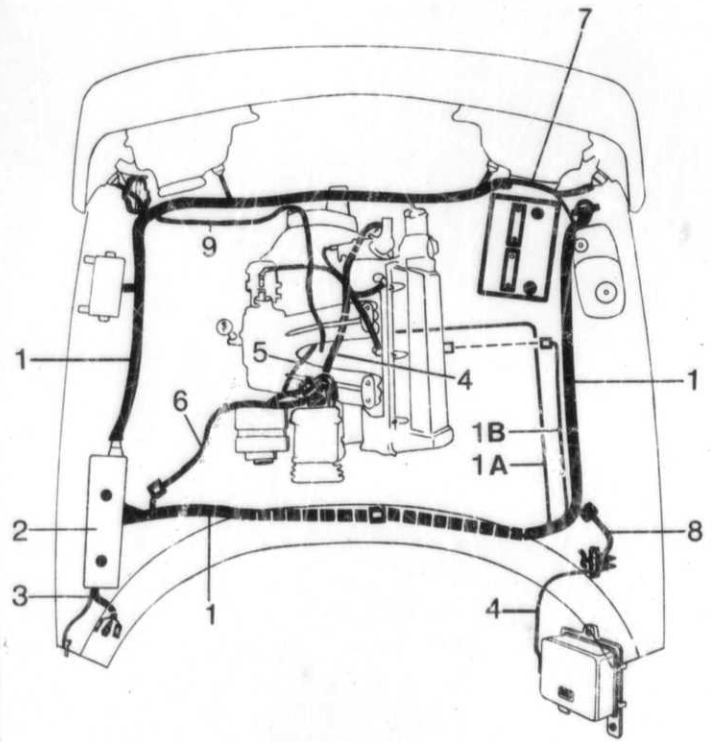


R 8976-900

| 1050 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 95 52 209 | | C FOR SE, FI, EU, GB | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0030 | 1 | 95 52 217 | | I FOR SE, FI, EU, GB | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0035 | 1 | 95 52 282 | | 64), I, EU | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0040 | 1 | 95 52 225 | | TURBO, SE, FI, EU, GB | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0060 | 1 | 95 52 233 | | B202 TURBO, SE, FI, EU, GB | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0120 | 1 | 95 52 290 | | B201, US | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0140 | 1 | 95 52 308 | | B202, US | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0160 | 1 | 95 52 316 | | B202 TURBO, US | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0200 | 1 | 95 52 324 | | I, AU, CA, JP | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0220 | 1 | 95 52 332 | | B202, AU, CA, JP | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0240 | 1 | 95 52 340 | | B202 TURBO, AU, CA, JP | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0300 | 1 | 95 52 241 | | C, ME, FE | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0310 | 1 | 95 52 258 | | I, ME, FE | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0315 | 1 | 95 52 266 | | TURBO, ME, FE | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0320 | 1 | 95 52 274 | | B202 TURBO, ME, FE | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0325 | 1A | 85 69 386 | | 64) | 1 | . Cable | . Ledning | 6 |
| 0330 | | 85 30 966 | | 64) | 1 | . Diode | . Diod | 5 |
| 0350 | 1B | 95 55 897 | | B201, US, CA, JP | 1 | Cable harness | Ledningsnät | 6 |
| 0360 | 2 | 95 53 140 | | B201 | 1 | Cable harness fuse-relay | Ledningsnät säkring-relä | 5 |
| 0400 | 2 | 95 53 157 | | B202 | 1 | Cable harness fuse-relay | Ledningsnät säkring-relä | 5 |
| 0430 | 2 | 95 97 089 | | CV | | Cable harness fuse-relay | Ledningsnät säkring-relä | 5 |
| 0460 | 3 | 95 53 173 | | B201 | 1 | Cable harness electrical distribut.unit | Ledningsnät elcentral | 5 |
| 0500 | 3 | 95 53 181 | | B202 | 1 | Cable harness electrical distribut.unit | Ledningsnät elcentral | 5 |
| 0660 | 4 | 95 53 199 | | B202 | 1 | Cable harness engine | Ledningsnät motor | 3 |
| 0680 | 4 | 95 53 207 | | 64), B202 | 1 | Cable harness engine | Ledningsnät motor | 3 |
| 0710 | 5 | 95 55 905 | | B+ | 1 | Cable | Kabel | 6 |
| 0720 | 6 | 85 94 467 | | B201, AC, SANKYO | 1 | Cable harness idling speed increase | Ledningsnät tomgångshöjning | 6 |
| 0760 | 6 | 88 21 019 | | -1986, AC, CLARION | 1 | Cable harness idling speed increase | Ledningsnät tomgångshöjning | 6 |

64. With catalytic converter. Med katalytisk reaktor.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

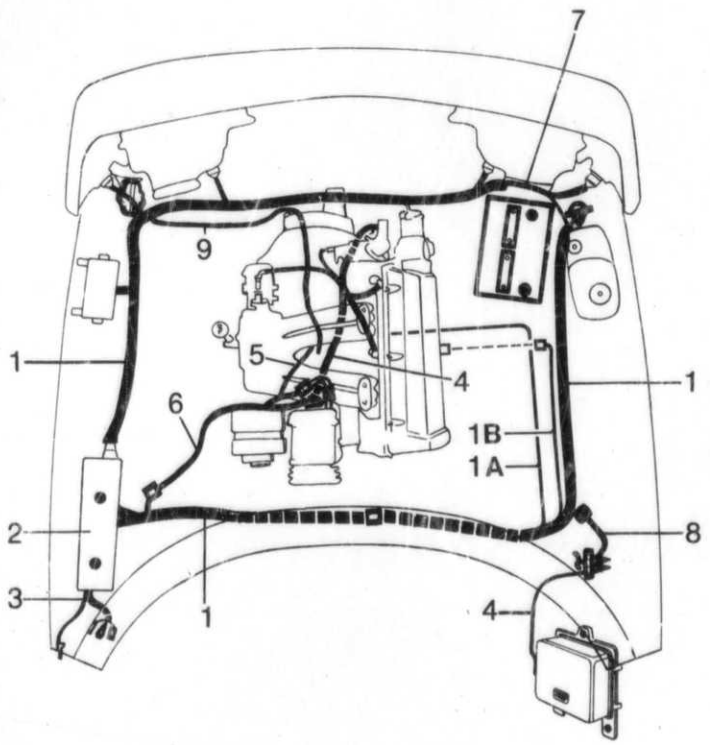


R 8976-900

| 1050 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0800 | 7 | 95 54 833 | | SANKYO, SE, FI, EU, GB | 1 | Cable harness | Ledningsnät | 5 |
| 0801 | | | | | | idling speed increase | tomgångshöjning | |
| 0820 | 7 | 88 21 290 | | -1986, AC, CLARION, EU | 1 | Cable harness | Ledningsnät | 6 |
| 0821 | | | | | | | | |
| 0840 | 8 | 95 54 841 | | 157), AC, SE, FI, EU, GB, AU, ME, FE | 1 | Cable harness switch | Ledningsnät strömställare | 5 |
| 0860 | | | | | | | | |
| 0880 | 8 | 95 54 858 | | 158), AC, SW, SF, EU, GB, AU, ME, FE | 1 | Cable harness switch | Ledningsnät strömställare | 5 |
| 0900 | | | | | | | | |
| 0920 | 8 | 88 21 308 | | -1986, AC, CLARION, NOT US, CA, JA | 1 | Cable harness switch | Ledningsnät strömställare | 6 |
| 0940 | | | | | | | | |
| 0941 | | | | | | | | |
| 0950 | 9 | 95 61 804 | | | 1 | Cable harness knock-sensor | Ledningsnät knacksensor | 6 |
| 0951 | | | | | | | | |
| 1000 | | *88 21 456* | | -1986 AC, CLARION NLS | 1 | Cable harness cooling fan | Ledningsnät kylfläkt | 6 |
| 1020 | | | | | | | | |

157. With recirculation. Med recirkulation.
158. Without recirculation. Utan recirkulation.



MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-D18

## *Instruments and rear* 1986

## *Instrument och bakre* 1986

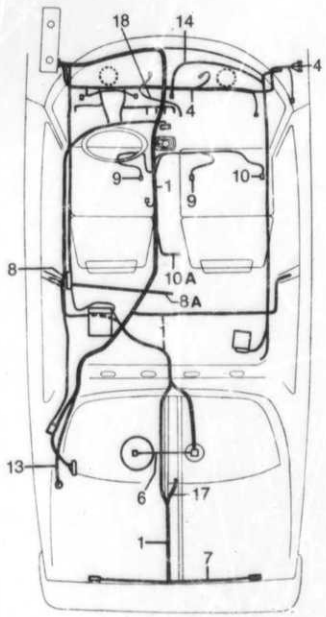

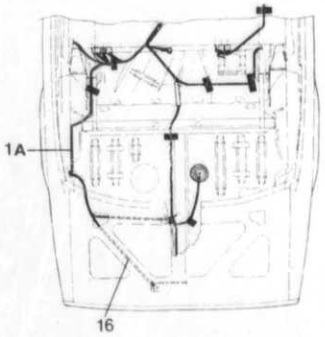
F5613 90086

| 1051 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0021 | 1 | 95 52 514 | | CK, SE, FI, EU, GB, AU, ME, FE | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0041 | 1 | 95 52 555 | | CK TURBO, SE, FI, EU, GB, AU, ME, FE | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0061 | 1 | 95 52 506 | | SN, SE, FI, EU, GB, AU, ME, FE | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0081 | 1 | 95 52 530 | | SN TURBO, SE, FI, EU, GB, AU, ME, FE | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0111 | 1 | 95 52 571 | | CK, US, CA, JP | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0121 | 1 | 95 52 605 | | B202 CK, US, CA, JP | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0131 | 1 | 95 52 563 | | SN, US, CA | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0140 | 1 | 95 52 597 | | B202 SN, US, CA, JP | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0151 | 1A | 95 96 578 | | CV | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0160 | 4 | 95 52 365 | | SE, FI, EU, ME | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0200 | 4 | 95 52 399 | | RHD | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0240 | 4 | 95 52 373 | | B202, SE, FI, EU, ME | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0280 | 4 | 95 52 407 | | B202, RHD | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0320 | 4 | 95 52 423 | | US, CA, JP | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0360 | 4 | 95 52 431 | | B202, US, CA, JP | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0400 | | 85 30 966 | | US,CA,JP(SE!M 26 ROMANS) | 1 | . Diode | . Diod | 5 |
| 0440 | 6 | 95 53 454 | | B201 | 1 | Cable harness fuel pump | Ledningsnät bränslepump | 6 |
| 0480 | 6 | 95 53 520 | | B202 | 1 | Cable harness fuel pump | Ledningsnät bränslepump | 6 |
| 0540 | 7 | 85 68 701 | | SN | 1 | Cable harness tail lamp | Ledningsnät baklykta | 6 |
| 0600 | 8 | 85 22 997 | | | 1 | Cable harness interior illum. | Ledningsnät innerbelysning | 5 |
| 0650 | 8A | 95 67 215 | | 57) | 1 | Cable harness interior illum. | Ledningsnät innerbelysning | 5 |
| 0660 | 9 | 85 70 210 | | 153) | 1 | Cable harness heating pad | Ledningsnät värmedyna | 5 |
| 0700 | 9 | 85 70 228 | | 159) | 1 | Cable harness heating pad | Ledningsnät värmedyna | 5 |
| 0760 | 10 | 85 70 236 | | | 1 | Cable harness seat belt warning | Ledningsnät bältesvarning | 6 |
| 0800 | 10A | 85 93 295 | | ME | 1 | Cable harness seat belt warning | Ledningsnät bältesvarning | 6 |
| 0880 | 13 | 85 74 139 | | | 1 | Cable harness antenna | Ledningsnät antenn | 5 |

57. For cars with centre mounted dome light. För bilar med mittmonterad taklampa.
153. Drivers side. Förarsida.
159. Drivers side and passenger side. Förarsida och passagerarsida.





MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

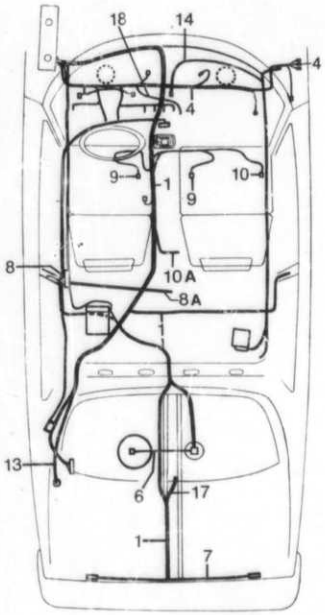

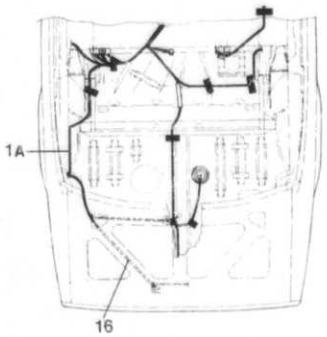
F5613 90086


| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 14 | | | See page 3A-067, 2-C20 | 1 | Cable harness speed control system | Ledningsnät farthållningssystem | |
| 16 | 95 96 586 | | CV | 1 | Cable harness licence plate light | Ledningsnät nummerskyltlykta | 6 |
| 17 | 95 53 553 | | SN | 1 | Cable harness high mounted stop light | Ledningsnät högt monterad stopplykta | 5 |
| 18 | 85 29 265 | | | 1 | Cable ashtray | Kabel askkopp | 6 |


MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

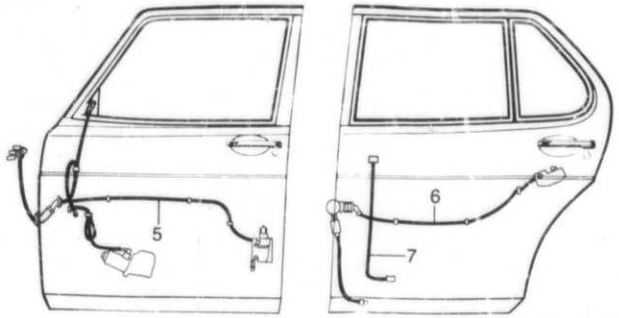

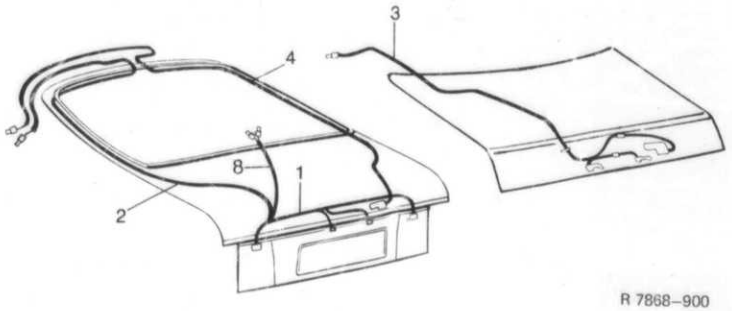
R 7868–900

| 1052 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0010 1 | 85 61 532 | | | 1 | Cable harness tail gate | Ledningsnät bagagerumsdörr | 6 |
| 0020 0030 2 | 85 62 001 | | | 1 | Cable harness tail gate | Ledningsnät bagagerumsdörr | 6 |
| 0040 0050 3 | 85 98 872 | | SN | 1 | Cable harness boot lid | Ledningsnät bagagerumslucka | 6 |
| 0060 0070 4 | 85 91 307 | | CK, CL | 1 | Cable harness | Ledningsnät | 5 |
| 0080 0090 5 | 85 91 257 | | 153), EM, EW, CL | 1 | Cable harness front door | Ledningsnät framdörr | 5 |
| 0100 0110 0120 5 | 95 97 063 | | 153), CV, EM, EW, CL | 1 | Cable harness front door | Ledningsnät framdörr | 5 |
| 0130 0140 0150 5 | 85 91 265 | | 160), EM, EW, CL | 1 | Cable harness front door | Ledningsnät framdörr | 5 |
| 0160 0170 0180 5 | 95 97 071 | | 160), CV, EM, EW, CL | 1 | Cable harness front door | Ledningsnät framdörr | 5 |
| 0190 0200 0210 6 | 85 91 281 | | CL | 2 | Cable harness rear door | Ledningsnät bakdörr | 5 |
| 0220 0230 0240 7 | 85 91 489 | | EW | 2 | Cable harness rear door | Ledningsnät bakdörr | 5 |
| 0250 0260 7 | 85 91 497 | | EW, CL | 2 | Cable harness rear door | Ledningsnät bakdörr | 5 |
| 0270 0280 0290 8 | 95 53 751 | | CK, US, CA | 1 | Cable harness high mounted stop light | Ledningsnät högt monterad stopplykta | 5 |
| 0300 | | | | | | | |

153. Drivers side. Förarsida.
160. Passenger side. Passagerarsida.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

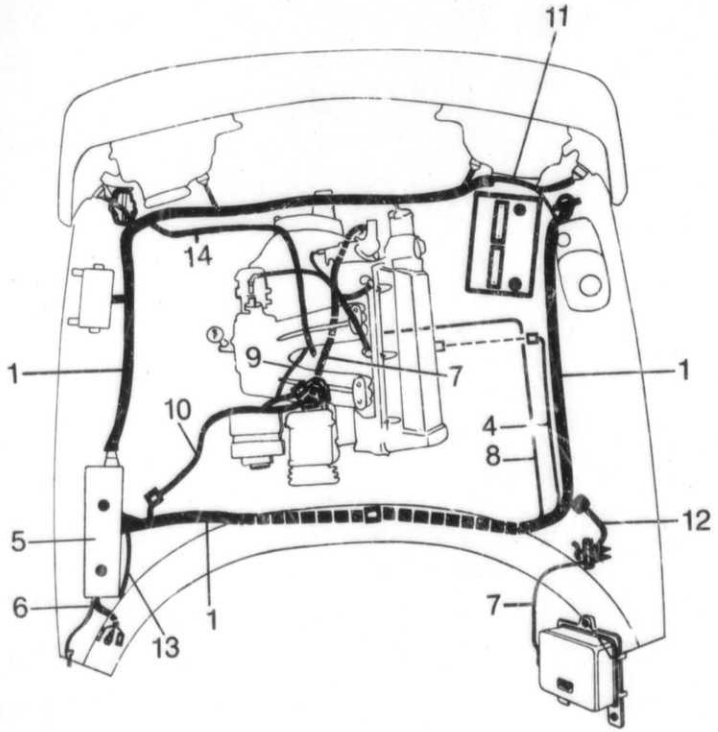


R 8977-900

# 2-D24

Wiring and fuses
**Front and engine**
**1987**

Ledningar och säkringar
**Främre och motor**
**1987**

| 1060 | Pos | Part No/Art nr | K S | ...tes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 95 57 265 | | C, SE, FI, EU, GB | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0023 | 1 | 95 57 257 | | 36), B201C, SE, FI, EU | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0030 | 1 | 95 57 281 | | B201 I TURBO, SE, FI, EU, GB | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0040 | 1 | 95 57 299 | | B202 TURBO, SE, FI, EU, GB | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0050 | 1 | 95 57 307 | | 64), B201 I, SE, EU | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0060 | 1 | 95 57 315 | | 64), B201 TURBO, SE, EU | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0080 | 1 | 95 57 398 | | B201 I, US | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0090 | 1 | 95 57 406 | | B202 I, US | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0100 | 1 | 95 57 414 | | B202 TURBO, US | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0120 | 1 | 95 57 422 | | B201 I, AU, CA, JP | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0130 | 1 | 95 57 430 | | B202 I, AU, CA, JP | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0140 | 1 | 95 57 448 | | B202 TURBO, AU, CA, JP | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0160 | 1 | 95 57 364 | | B201 I, ME, FE | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0170 | 1 | 95 57 372 | | B201 TURBO, ME, FE | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0180 | 1 | 95 57 380 | | B202 TURBO, ME, FE | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0230 | 4 | 95 55 897 | | B201, US, CA, JP | 1 | Cable harness | Ledningsnät | 6 |
| 0250 | 5 | 95 57 455 | | B201 | 1 | Cable harness fuse-relay | Ledningsnät säkring-relä | 5 |
| 0270 | 5 | 95 57 463 | | B202 | 1 | Cable harness fuse-relay | Ledningsnät säkring-relä | 5 |
| 0281 | 5 | 95 97 253 | | CV | 1 | Cable harness fuse-relay | Ledningsnät säkring-relä | 5 |
| 0300 | 6 | 95 57 471 | | B201 C I, SE, FI, EU, AU | 1 | Cable harness electrical distribut.unit | Ledningsnät elcentral | 5 |
| 0320 | 6 | 95 57 489 | | B201 I TURBO, GB, FE, US, CA, JP | 1 | Cable harness electrical distribut.unit | Ledningsnät elcentral | 5 |
| 0340 | 6 | 95 57 497 | | B202 | 1 | Cable harness electrical distribut.unit | Ledningsnät elcentral | 5 |
| 0420 | 7 | 95 53 199 | | B202 TURBO, SE, FI, EU, GB, ME, FE | 1 | Cable harness engine | Ledningsnät motor | 3 |
| 0440 | 7 | 95 53 207 | | 64), B202 TURBO, US, CA, CA, JP, AU, EU B202 I, US, CA, JP, AU | 1 | Cable harness engine | Ledningsnät motor | 3 |
| 0480 | 8 | 85 69 386 | | | 1 | Cable lambda sonde | Ledning lambdasond | 6 |
| 0500 | 9 | 95 55 905 | | B+ | 1 | Cable | Kabel | 6 |

36. For cars with integrated bumpers. För bilar med integrerade stötfångare.
64. With catalytic converter. Med katalytisk reaktor.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-E02

## Front and engine 1987

## Främre och motor 1987

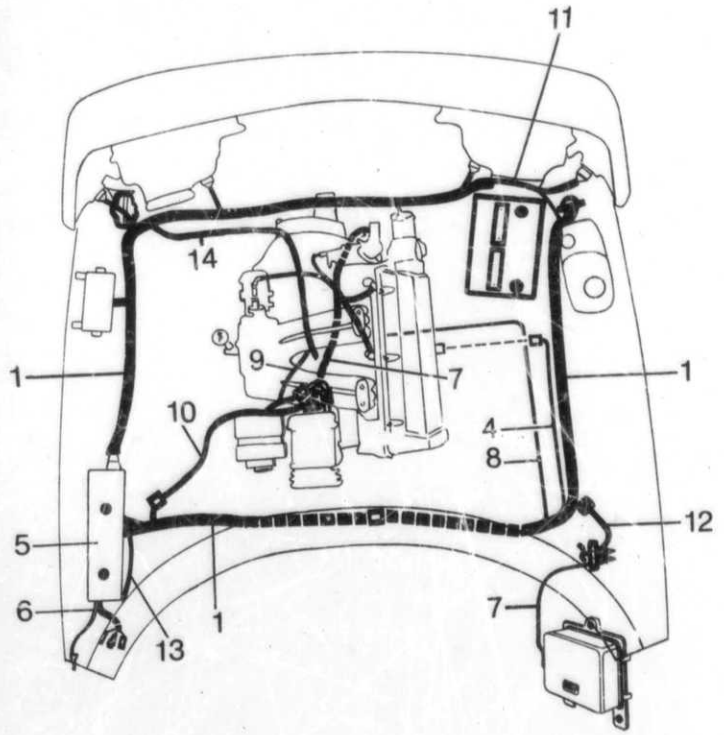


R 8977-900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 10 | 85 94 467 | | B201, AC | 1 | Cable harness<br>idling speed increase | Ledningsnät<br>tomgångshöjning | 6 |
| 11 | 95 57 505 | | AC, SE, FI, EU, GB | 1 | Cable harness<br>idling speed increase | Ledningsnät<br>tomgångshöjning | 5 |
| 12 | 95 54 841 | | 157), AC, SE, FI, EU, GB, AU, ME, FE | 1 | Cable harness<br>switch | Ledningsnät<br>strömställare | 5 |
| 12 | 95 54 858 | | 158), AC, SE, FI, EU, GB, AU, ME, FE | 1 | Cable harness<br>switch | Ledningsnät<br>strömställare | 5 |
| 13 | 95 60 301 | | 41), GB | 1 | Cable harness<br>dim-dip | Ledningsnät<br>dim-dip | 5 |
| 13 | 95 61 424 | | 42), GB | 1 | Cable harness<br>dim-dip | Ledningsnät<br>dim-dip | 5 |
| 14 | 95 61 804 | | | 1 | Cable harness<br>knock-sensor | Ledningsnät<br>knacksensor | 6 |

41. Ch --H3006326, --H7011733.
42. Ch H3006327--, H7011734--.
157. With recirculation. Med recirkulation.
158. Without recirculation. Utan recirkulation.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

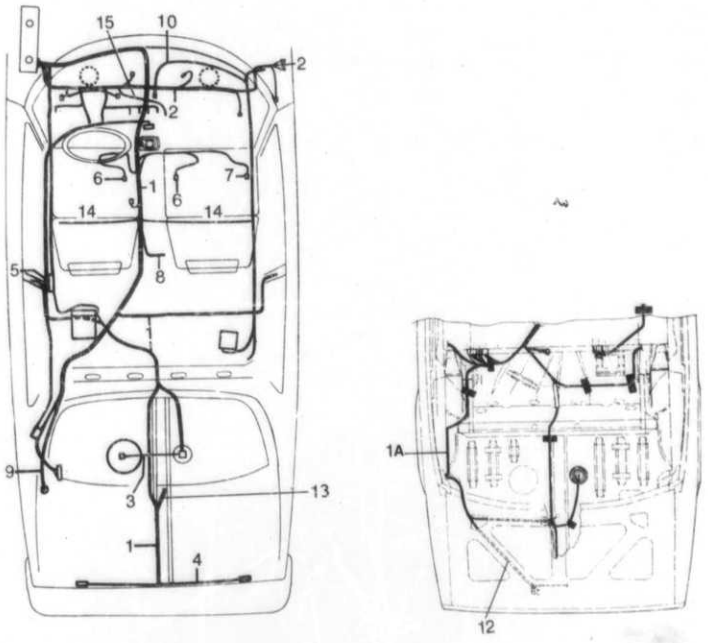


F5614 90086

| 1061 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 95 57 653 | | CK, SE, FI, EU, GB, ME, FE, AU | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0030 | 1 | 95 57 695 | | CK TURBO, SE, FI, EU, GB, ME, FE, AU | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0050 | 1 | 95 57 646 | | SN, SE, FI, EU, GB, ME, FE, AU | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0070 | 1 | 95 57 679 | | SN TURBO, SE, FI, EU, GB, ME, FE, AU | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0100 | 1 | 95 57 711 | | CK B201, US, CA | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0120 | 1 | 95 57 745 | | CK B202, US, CA | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0140 | 1 | 95 57 703 | | 4SN B201, US, CA | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0160 | 1 | 95 57 737 | | 4SN B201, JP 4SN B202, US, CA, JP | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0180 | 1 | 95 57 729 | | 2SN B201, JP 2SN B202, US, CA, JP | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0210 | 1 | 95 57 752 | | 39), 3CK B202, US | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0231 | 1A | 95 97 055 | | CV | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0233 | 1A | 95 97 048 | | CV, US, CA, JP | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0240 | 2 | 95 57 521 | | B201, SE, FI, EU, ME | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0260 | 2 | 95 57 554 | | B201, RHD | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0280 | 2 | 95 57 539 | | B202, SE, FI, EU, ME | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0300 | 2 | 95 57 562 | | B202, RHD | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0330 | 2 | 95 57 588 | | B201, US, CA, JP | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0350 | 2 | 95 57 596 | | B202, US, CA, JP | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0370 | | 85 30 966 | | US,CA,JP(SEIM 26 ROMANS) | 1 | Diode | Diod | 5 |
| 0390 | 3 | 95 59 386 | | 161) | 1 | Cable harness fuel pump | Ledningsnät bränslepump | 6 |
| 0410 | 3 | 95 59 378 | | 162) | 1 | Cable harness fuel pump | Ledningsnät bränslepump | 6 |
| 0440 | 4 | 85 68 701 | | SN | 1 | Cable harness tail lamp | Ledningsnät baklykta | 6 |
| 0470 | 5 | 95 57 760 | | | 1 | Cable harness interior illum. | Ledningsnät innerbelysning | 6 |
| 0500 | 6 | 85 70 210 | | 153) | 1 | Cable harness heating pad | Ledningsnät värmedyna | 5 |
| 0520 | 6 | 85 70 228 | | 159) | 1 | Cable harness heating pad | Ledningsnät värmedyna | 5 |

39. For cars with automatic belts. För bilar med passivt bälte.
153. Drivers side. Förarsida.
159. Drivers side and passenger side. Förarsida och passagerarsida.
161. With pre-pump. Med pre-pump.
162. Without pra-pump. Utan pre-pump.





MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

3A GROUP INDEX

| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

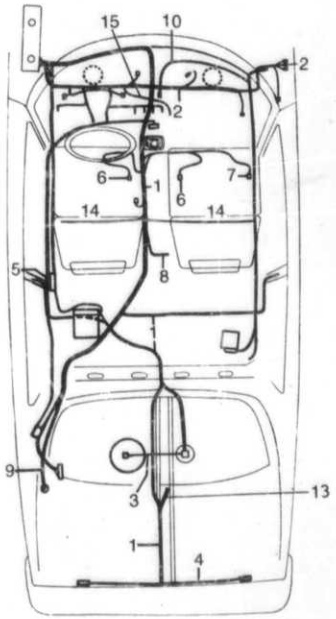

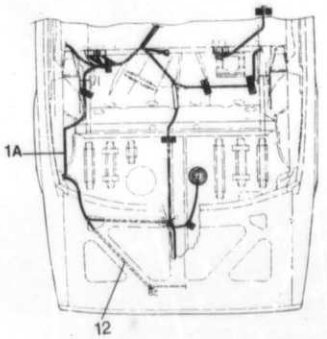
F5614 90.86

| 1061 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0540 | 6 | 95 57 935 | | 163) | 1 | Cable harness heating pad | Ledningsnät värmedyna | 5 |
| 0550 | | | | | | | | |
| 0560 | 6 | 95 60 343 | | 39,163), LH, US | 1 | Cable harness heating pad | Ledningsnät värmedyna | 5 |
| 0570 | | | | | | | | |
| 0580 | 6 | 95 60 350 | | 39,164), RH, US | 1 | Cable harness heating pad | Ledningsnät värmedyna | 5 |
| 0590 | | | | | | | | |
| 0600 | | | | | | | | |
| 0610 | 7 | 85 70 236 | | | 1 | Cable harness seat belt warning | Ledningsnät bältesvarning | 6 |
| 0620 | | | | | | | | |
| 0630 | 8 | 85 93 295 | | ME | 1 | Cable harness seat belt warning | Ledningsnät bältesvarning | 6 |
| 0640 | | | | | | | | |
| 0650 | | | | | | | | |
| 0660 | 9 | 85 74 139 | | | 1 | Cable harness antenna | Ledningsnät antenn | 5 |
| 0670 | | | | | | | | |
| 0680 | | | | | | | | |
| 0690 | 10 | | | See page 3A-067, 2-C20 | 1 | Cable harness speed control system | Ledningsnät farthållningssystem | |
| 0700 | | | | | | | | |
| 0710 | | | | | | | | |
| 0770 | 12 | 95 96 586 | | CV | 1 | Cable harness licence plate light | Ledningsnät nummerskyltlykta | 6 |
| 0780 | | | | | | | | |
| 0790 | | | | | | | | |
| 0800 | 13 | 95 53 553 | | SN | 1 | Cable harness high mounted stop light | Ledningsnät högt monterad stopplykta | 5 |
| 0810 | | | | | | | | |
| 0820 | | | | | | | | |
| 0830 | 14 | 95 57 919 | | 39), 3CK B202, US | 1 | Cable harness rear | Ledningsnät bakre | 6 |
| 0840 | | | | | | | | |
| 0850 | | | | | | | | |
| 0860 | 15 | 85 29 265 | | | 1 | Cable ashtray | Kabel askkopp | 6 |
| 0870 | | | | | | | | |

39. For cars with automatic belts. För bilar med passivt bälte.
163. Rheostat. Reostat.
164. Thermostat. Termostat.

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-E08

## Doors
1987

## Dörrar
1987

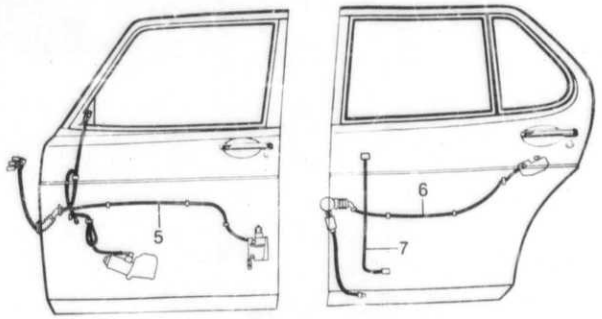

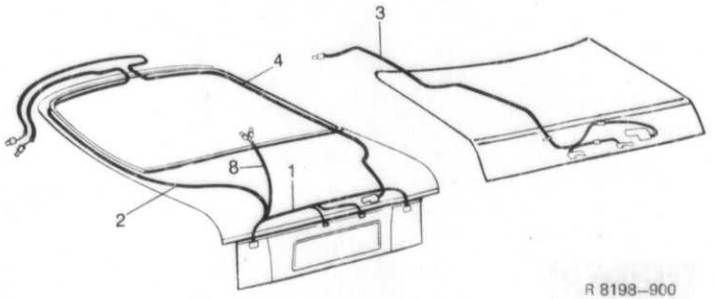
R 8198–900

| 1062 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 85 61 532 | | | 1 | Cable harness tail gate | Ledningsnät bagagerumsdörr | 6 |
| 0030 | | | | | | | | |
| 0031 | | | | | | | | |
| 0040 | 2 | 85 62 001 | | | 1 | Cable harness tail gate | Ledningsnät bagagerumsdörr | 6 |
| 0050 | | | | | | | | |
| 0051 | | | | | | | | |
| 0060 | 3 | 85 98 872 | | SN | 1 | Cable harness boot lid | Ledningsnät bagagerumslucka | 6 |
| 0070 | | | | | | | | |
| 0071 | | | | | | | | |
| 0080 | 4 | 85 91 307 | | CK, CL | 1 | Cable harness tail gate | Ledningsnät bagagerumsdörr | 5 |
| 0090 | | | | | | | | |
| 0091 | | | | | | | | |
| 0100 | 5 | 85 91 257 | | 153), EM, EW, CL | 1 | Cable harness front door | Ledningsnät framdörr | 5 |
| 0110 | | | | | | | | |
| 0140 | 5 | 95 57 893 | | 39,153), B202 I, EM, EW, CL, US | 1 | Cable harness front door | Ledningsnät framdörr | 5 |
| 0150 | | | | | | | | |
| 0180 | 5 | 95 97 360 | | 153), CV, EM, EW, CL | 1 | Cable harness front door | Ledningsnät framdörr | 5 |
| 0190 | | | | | | | | |
| 0220 | 5 | 85 91 265 | | 160), EM, EW, CL | 1 | Cable harness front door | Ledningsnät framdörr | 5 |
| 0230 | | | | | | | | |
| 0255 | 5 | 95 57 901 | | 39,160), B202 I, EM, EW, CL, US | 1 | Cable harness front door | Ledningsnät framdörr | 5 |
| 0260 | | | | | | | | |
| 0290 | 5 | 95 97 378 | | 160), CV, EM, EW, CL | 1 | Cable harness front door | Ledningsnät framdörr | 5 |
| 0300 | | | | | | | | |
| 0310 | | | | | | | | |
| 0330 | 6 | 85 91 281 | | CL | 2 | Cable harness rear door | Ledningsnät bakdörr | 5 |
| 0340 | | | | | | | | |
| 0350 | | | | | | | | |
| 0360 | 7 | 85 91 489 | | EW | 2 | Cable harness rear door | Ledningsnät bakdörr | 5 |
| 0370 | | | | | | | | |
| 0380 | 7 | 85 91 497 | | EW, CL | 2 | Cable harness rear door | Ledningsnät bakdörr | 5 |
| 0390 | | | | | | | | |
| 0400 | | | | | | | | |
| 0420 | 8 | 95 53 751 | | CK | 1 | Cable harness high mounted stop light | Ledningsnät högt monterad stopplykta | 5 |
| 0430 | | | | | | | | |

39. For cars with automatic belts. För bilar med passivt bälte.
153. Drivers side. Förarsida.
160. Passenger side. Passagerarsida.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

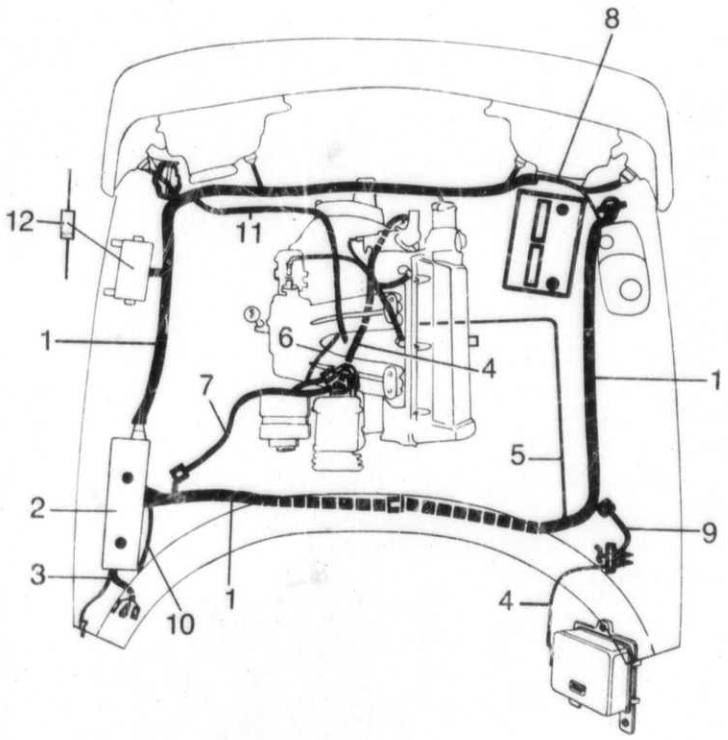


F0831 - 900

| 1070 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 95 61 143 | | C, SE, FI, EU, GB | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0023 | 1 | 95 61 150 | | 50), B201 C, SE, FI, EU | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0030 | 1 | 95 61 176 | | B201 I TURBO, SE, FI, EU, GB | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0040 | 1 | 95 61 184 | | B202 TURBO, SE, FI, EU, GB | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0050 | 1 | 95 61 192 | | 64), B201 I, SE, EU | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0060 | 1 | 95 61 200 | | 64), B201 TURBO, SE, EU | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0065 | 1 | 95 61 218 | | 64), B202 I, EU | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0080 | 1 | 95 61 267 | | B201 I, US | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0090 | 1 | 95 61 275 | | B202 I, US | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0100 | 1 | 95 61 283 | | B202 TURBO, US | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0120 | 1 | 95 61 291 | | B201 I, AU, CA, JP | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0130 | 1 | 95 61 309 | | B202 I, AU, CA, JP | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0140 | 1 | 95 61 317 | | B202 TURBO, AU, CA, JP | 1 | Cable harness | Ledningsnät | 5 |
| 0170 | 1 | 95 61 242 | | B201 I TURBO, ME, FE | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0180 | 1 | 95 61 259 | | B202 TURBO, ME, FE | 1 | Cable harness front | Ledningsnät främre | 5 |
| 0250 | 2 | 95 61 614 | | | 1 | Cable harness fuse-relay | Ledningsnät säkring-relä | 5 |
| 0300 | 3 | 95 61 630 | | B201 | 1 | Cable harness electrical distribut.unit | Ledningsnät elcentral | 5 |
| 0340 | 3 | 95 61 648 | | B202 | 1 | Cable harness electrical distribut.unit | Ledningsnät elcentral | 5 |
| 0351 | 3 | 95 97 436 | | CV | 1 | Cable harness electrical distribut.unit | Ledningsnät elcentral | 5 |
| 0420 | 4 | 95 53 199 | | B202 TURBO, SE, FI, EU, GB, ME, FE | 1 | Cable harness engine | Ledningsnät motor | 3 |
| 0435 | 4 | 95 61 135 | | 64), B202 I, US, CA, JP, AU, EU | 1 | Cable harness engine | Ledningsnät motor | 3 |
| 0440 | 4 | 95 62 125 | | 64), B202 TURBO, SE, EU, US, AU, CA, JP | 1 | Cable harness engine | Ledningsnät motor | 3 |
| 0480 | 5 | 85 69 386 | | | 1 | .Cable lambda sonde | .Ledning lambdasond | 6 |
| 0500 | 6 | 95 55 905 | | B+ | 1 | Cable | Kabel | 6 |
| 0520 | 7 | 85 94 467 | | B201, AC | 1 | Cable harness idling speed increase | Ledningsnät tomgångshöjning | 6 |
| 0540 | 8 | 95 57 505 | | AC, SE, FI, EU, GB | 1 | Cable harness idling speed increase | Ledningsnät tomgångshöjning | 5 |
| 0570 | 9 | 95 54 841 | | 157), AC, SE, FI, EU, GB, AU, ME, FE | 1 | Cable harness switch | Ledningsnät strömställare | 5 |

50. For cars without integrated bumpers. För bilar utan integrerade stötfångare.
64. With catalytic converter. Med katalytisk reaktor.
157. With recirculation. Med recirkulation.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

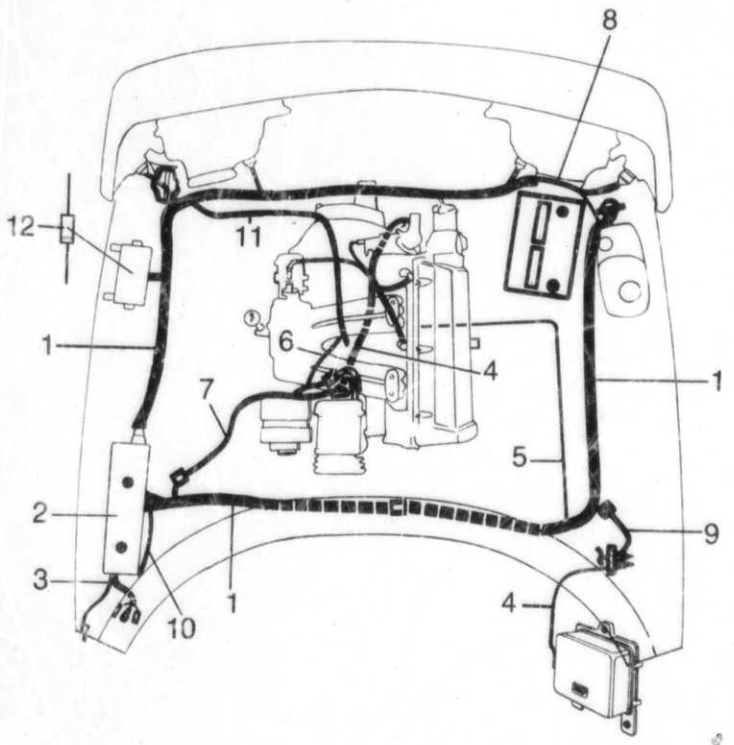


F0831 - 900

| 1070 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0590 | 9 | 95 61 655 | | 158), AC, SE, FI, EU, GB, AU, ME, FE | 1 | Cable harness switch | Ledningsnät strömställare | 5 |
| 0600 | | | | | | | | |
| 0601 | | | | | | | | |
| 0620 | 10 | 95 63 288 | | GB | 1 | Cable harness dim-dip | Ledningsnät dim-dip | 5 |
| 0621 | | | | | | | | |
| 0622 | | | | | | | | |
| 0630 | 11 | 95 61 804 | | | 1 | Cable harness knock-sensor | Ledningsnät knacksensor | 6 |
| 0631 | | | | | | | | |
| 0640 | 12 | 95 64 816 | | 64), B201 | 1 | Diode | Diod | 5 |

64. With catalytic converter. Med katalytisk reaktor.
158. Without recirculation. Utan recirkulation.



MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |


Wiring and fuses

# 2-E14 *Instruments and rear* *1988*

Ledningar och säkringar

# *Instrument och bakre* *1988*

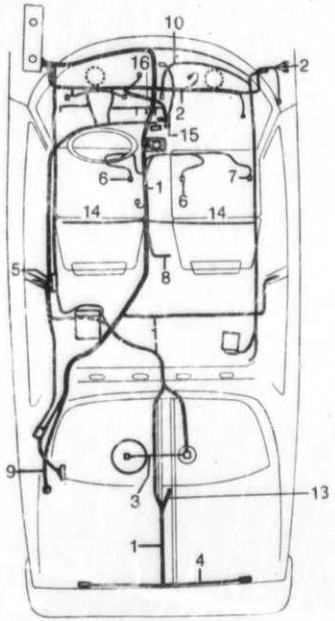

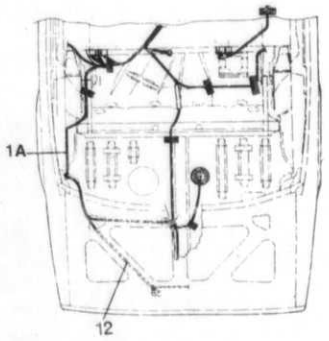
F5615 90086

| 1071 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 95 61 697 | | CK, SE, FI, EU, GB, ME, FE, AU | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0040 | 1 | 95 61 739 | | CK TURBO, SE, FI, EU, GB, ME, FE, AU | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0060 | 1 | 95 61 689 | | SN, SE, FI, EU, GB, ME, FE, AU | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0080 | 1 | 95 61 713 | | SN TURBO, SE, FI, EU, GB, ME, FE, AU | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0110 | 1 | 95 61 762 | | 2SN, US, CA, JP | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0120 | 1 | 95 61 770 | | 4SN, US, CA, JP | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0130 | 1 | 95 61 788 | | CK, US, CA, JP | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0140 | 1 | 95 61 796 | | 39), US, CA, JP | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0152 | 1A | 95 97 428 | | CV | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0154 | 1A | 95 97 410 | | CV, US, CA, JP | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0190 | 2 | 95 61 994 | | B201, SE, FI, EU, ME | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0210 | 2 | 95 62 026 | | B201 RHD, SE, GB, FE, AU | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0230 | 2 | 95 62 000 | | B202, SE, FI, EU, ME | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0250 | 2 | 95 62 034 | | B202, RHD, GB, FE, ME | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0280 | 2 | 95 62 042 | | B201, US, CA | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0300 | 2 | 95 62 067 | | B202, US, CA | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0315 | 2 | 95 62 059 | | B201, JP | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0325 | 2 | 95 62 067 | | B202, JP | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0340 | 3 | 95 59 386 | | 161) | 1 | Cable harness fuel pump | Ledningsnät bränslepump | 6 |
| 0360 | 3 | 95 59 378 | | 162) | 1 | Cable harness fuel pump | Ledningsnät bränslepump | 6 |
| 0390 | 4 | 85 68 701 | | SN | 1 | Cable harness tail lamp | Ledningsnät baklykta | 6 |
| 0420 | 5 | 95 57 760 | | | 1 | Cable harness interior illum. | Ledningsnät innerbelysning | 6 |
| 0450 | 6 | 85 70 210 | | 153) | 1 | Cable harness heating pad | Ledningsnät värmedyna | 5 |
| 0470 | 6 | 85 70 228 | | 159) | 1 | Cable harness heating pad | Ledningsnät värmedyna | 5 |

39. For cars with automatic belts. För bilar med passivt bälte.
153. Drivers side. Förarsida.
159. Drivers side and passenger side. Förarsida och passagerarsida.
161. With pre-pump. Med pre-pump.
162. Without pre-pump. Utan pre-pump.





MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

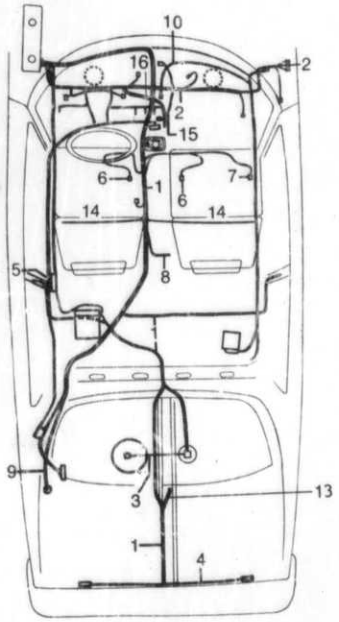

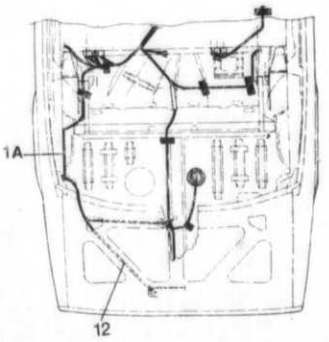
F5615 90086

| 1071 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0490 | 6 | 95 57 935 | | 163) | 1 | Cable harness heating pad | Ledningsnät värmedyna | 5 |
| 0500 | | | | | | | | |
| 0505 | 6 | 95 60 343 | | 39,163), LH, US | 1 | Cable harness heating pad | Ledningsnät värmedyna | 5 |
| 0510 | 6 | 95 60 350 | | 39,164), RH, US | 1 | Cable harness heating pad | Ledningsnät värmedyna | 5 |
| 0511 | | | | | | | | |
| 0515 | | | | | | | | |
| 0520 | 7 | 85 70 236 | | | 1 | Cable harness seat belt warning | Ledningsnät bältesvarning | 6 |
| 0530 | | | | | | | | |
| 0535 | | | | | | | | |
| 0540 | 8 | 85 93 295 | | ME | 1 | Cable harness seat belt warning | Ledningsnät bältesvarning | 6 |
| 0550 | | | | | | | | |
| 0560 | | | | | | | | |
| 0570 | 9 | 95 64 477 | | | 1 | Cable harness antenna | Ledningsnät antenn | 5 |
| 0575 | | | | | | | | |
| 0580 | | | | | | | | |
| 0590 | 10 | | | See page 3A-067, 2-C20 | 1 | Cable harness speed control system | Ledningsnät farthållningssystem | |
| 0600 | | | | | | | | |
| 0610 | | | | | | | | |
| 0630 | 12 | 95 96 586 | | CV | 1 | Cable harness licence plate light | Ledningsnät nummerskyltlykta | 6 |
| 0640 | | | | | | | | |
| 0641 | | | | | | | | |
| 0650 | 13 | 95 53 553 | | SN | 1 | Cable harness high mounted stop light | Ledningsnät högt monterad stopplykta | 5 |
| 0660 | | | | | | | | |
| 0661 | | | | | | | | |
| 0670 | 14 | 95 68 817 | | 39) 3CK B202, US | 1 | Cable harness rear | Ledningsnät bakre | 6 |
| 0671 | | | | | | | | |
| 0672 | | | | | | | | |
| 0680 | 15 | | | US | | Cable harness radio-equalizer | Ledningsnät radio-equalizer | |
| 0690 | | | | See page 3A-077, 2-D06 | | | | |
| 0691 | | | | | | | | |
| 0700 | 16 | 85 29 265 | | | 1 | Cable ashtray | Kabel askkopp | 6 |
| 0710 | | | | | | | | |

39. For cars with automatic belts. För bilar med passivt bälte.
163. Rheostat. Reostat.
164. Thermostat. Termostat.

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-E18

## *Doors* — *Dörrar*

*1988* — *1988*

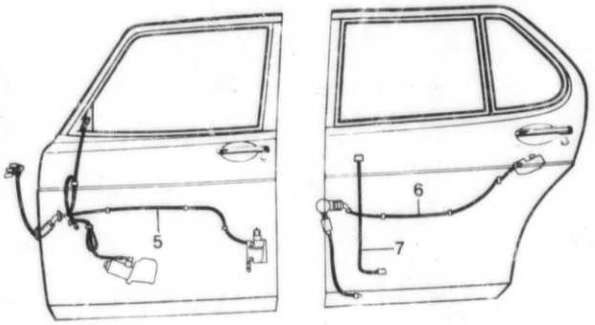

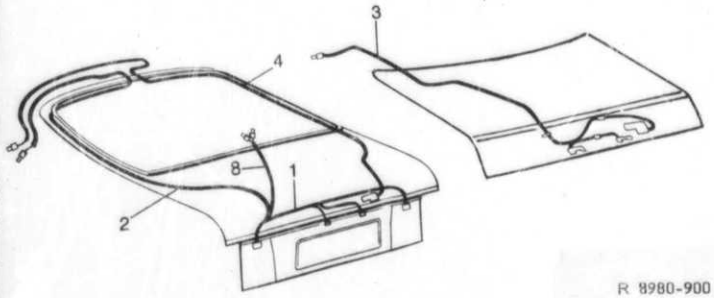
R 8980-900

| 1072 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 85 61 532 | | | 1 | Cable harness | Ledningsnät | 6 |
| 0020 | | | | | | tail gate | bagagerumsdörr | |
| 0030 | 2 | 85 62 001 | | | 1 | Cable harness | Ledningsnät | 6 |
| 0040 | | | | | | tail gate | bagagerumsdörr | |
| 0050 | 3 | 85 98 872 | | SN | 1 | Cable harness | Ledningsnät | 6 |
| 0060 | | | | | | boot lid | bagagerumslucka | |
| 0070 | 4 | 85 91 307 | | CK | 1 | Cable harness | Ledningsnät | 5 |
| 0080 | | | | | | tail gate | bagagerumsdörr | |
| 0081 | | | | | | | | |
| 0090 | 5 | 85 91 257 | | 153), EM, EW, CL | 1 | Cable harness | Ledningsnät | 5 |
| 0100 | | | | | | front door | framdörr | |
| 0130 | 5 | 95 64 675 | | 153,165), EM, EW, CL | 1 | Cable harness | Ledningsnät | 5 |
| 0140 | | | | | | front door | framdörr | |
| 0170 | 5 | *95 62 273* | | 39,153,165), B202 I, US, EM, EW, CL NLS - USE 9564691 | 1 | Cable harness | Ledningsnät | 5 |
| 0180 | | | | | | front door | framdörr | |
| 0180 | | | | | | | | |
| 0210 | 5 | 95 97 444 | | 153), CV, EM, EW, CL | 1 | Cable harness | Ledningsnät | 5 |
| 0220 | | | | | | front door | framdörr | |
| 0250 | 5 | 85 91 265 | | 160), EM, EW, CL | 1 | Cable harness | Ledningsnät | 5 |
| 0260 | | | | | | front door | framdörr | |
| 0290 | 5 | 95 64 683 | | 160,165), EM, EW, CL | 1 | Cable harness | Ledningsnät | 5 |
| 0300 | | | | | | front door | framdörr | |
| 0330 | 5 | *95 62 281* | | 39,160,165), B202 I,US, EM, EW, CL NLS - USE 9564709 | 1 | Cable harness | Ledningsnät | 5 |
| 0340 | | | | | | front door | framdörr | |
| 0340 | | | | | | | | |
| 0370 | 5 | 95 97 451 | | 160), CV, EM, EW, CL | 1 | Cable harness | Ledningsnät | 5 |
| 0380 | | | | | | front door | framdörr | |
| 0390 | | | | | | | | |
| 0410 | 6 | 85 91 281 | | CL | 2 | Cable harness | Ledningsnät | 5 |
| 0420 | | | | | | rear door | bakdörr | |
| 0430 | | | | | | | | |
| 0440 | 7 | 85 91 489 | | EW | 2 | Cable harness | Ledningsnät | 5 |
| 0450 | | | | | | rear door | bakdörr | |
| 0460 | 7 | 85 91 497 | | EW, CL | 2 | Cable harness | Ledningsnät | 5 |
| 0470 | | | | | | rear door | bakdörr | |
| 0480 | | | | | | | | |
| 0500 | 8 | 95 53 751 | | CK | 1 | Cable harness | Ledningsnät | 5 |
| 0510 | | | | | | high mounted stop light | högt monterad stopplykta | |

39. For cars with automatic belts. För bilar med passivt bälte.
153. Drivers side. Förarsida.
160. Passenger side. Passagerarsida.
165. Electrically heated EM. Eluppvärmd EM.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

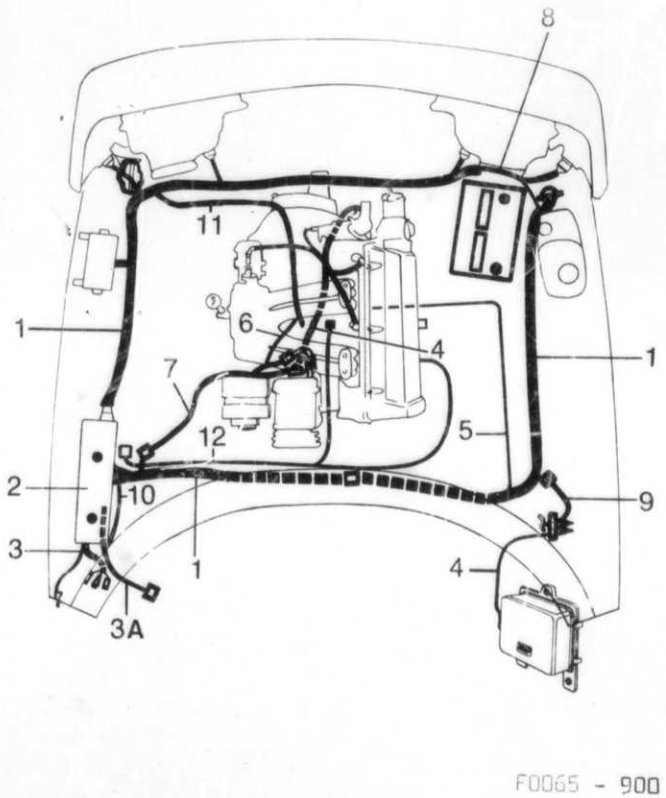


F0065 - 900

| 1075 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 95 68 353 | | B201 C, FI, EU, GB | 1 | Cable harness | Ledningsnät | 5 |
| 0011 | | | | | | front | främre | |
| 0020 | 1 | 95 68 346 | | 50), B201 C, FI, EU, GB | 1 | Cable harness | Ledningsnät | 5 |
| 0021 | | | | | | front | främre | |
| 0030 | 1 | 95 68 387 | | B201 I TURBO, FI, EU, GB | 1 | Cable harness | Ledningsnät | 5 |
| 0040 | | | | | | front | främre | |
| 0050 | 1 | 95 68 379 | | B202 I, FI, EU, GB | 1 | Cable harness | Ledningsnät | 5 |
| 0051 | | | | | | front | främre | |
| 0060 | 1 | 95 68 395 | | B202 TURBO, FI, EU, GB | 1 | Cable harness | Ledningsnät | 5 |
| 0061 | | | | | | front | främre | |
| 0070 | 1 | 95 68 403 | | 64), B201 I, SE, EU, GB | 1 | Cable harness | Ledningsnät | 5 |
| 0071 | | | | | | front | främre | |
| 0080 | 1 | 95 68 429 | | 64), B201 TURBO, SE, EU, GB | 1 | Cable harness | Ledningsnät | 5 |
| 0081 | | | | | | front | främre | |
| 0090 | 1 | 95 68 411 | | 64), B202 I, SE, EU, GB | 1 | Cable harness | Ledningsnät | 5 |
| 0091 | | | | | | front | främre | |
| 0100 | 1 | 95 68 510 | | 64), B202 TURBO, SE, EU, GB | 1 | Cable harness | Ledningsnät | 5 |
| 0101 | | | | | | front | främre | |
| 0110 | 1 | 95 68 478 | | B202 I, US | 1 | Cable harness | Ledningsnät | 5 |
| 0111 | | | | | | front | främre | |
| 0120 | 1 | 95 68 486 | | B202 TURBO, US | 1 | Cable harness | Ledningsnät | 5 |
| 0121 | | | | | | front | främre | |
| 0130 | 1 | 95 68 494 | | B202 I, AU, CA, JP | 1 | Cable harness | Ledningsnät | 5 |
| 0131 | | | | | | front | främre | |
| 0140 | 1 | 95 68 502 | | B202 TURBO, AU, CA, JP | 1 | Cable harness | Ledningsnät | 5 |
| 0141 | | | | | | front | främre | |
| 0150 | 1 | 95 68 445 | | B201 I, ME, FE | 1 | Cable harness | Ledningsnät | 5 |
| 0151 | | | | | | front | främre | |
| 0160 | 1 | 95 68 528 | | B202 I, ME, FE | 1 | Cable harness | Ledningsnät | 5 |
| 0161 | | | | | | front | främre | |
| 0170 | 1 | 95 68 452 | | B202 TURBO, ME, FE | 1 | Cable harness | Ledningsnät | 5 |
| 0171 | | | | | | front | främre | |
| 0180 | | | | | | | | |
| 0190 | 2 | 95 68 551 | | | 1 | Cable harness | Ledningsnät | 5 |
| 0200 | | | | | | fuse-relay | säkring-relä | |
| 0210 | | | | | | | | |
| 0220 | 3 | 95 68 577 | | B201 | 1 | Cable harness | Ledningsnät | 5 |
| 0230 | | | | | | electrical distribut.unit | elcentral | |
| 0240 | 3 | 95 68 585 | | B202 | 1 | Cable harness | Ledningsnät | 5 |
| 0250 | | | | | | electrical distribut.unit | elcentral | |
| 0255 | 3 | 95 68 726 | | 166), CA | 1 | Cable harness | Ledningsnät | 5 |
| 0256 | | | | | | electrical distribut.unit | elcentral | |
| 0260 | 3 | 95 97 550 | | CV | 1 | Cable harness | Ledningsnät | 5 |
| 0270 | | | | | | electrical distribut.unit | elcentral | |
| 0280 | | | | | | | | |
| 0350 | 4 | 95 68 833 | | B202 TURBO | 1 | Cable harness | Ledningsnät | 3 |
| 0351 | | | | | | engine | motor | |
| 0360 | 4 | 91 21 757 | | B202 I | 1 | Cable harness | Ledningsnät | 3 |
| 0361 | | | | | | engine | motor | |
| 0370 | 4 | 95 68 825 | | 64), B202 | 1 | Cable harness | Ledningsnat | 3 |
| 0371 | | | | | | engine | motor | |
| 0390 | 5 | 85 69 386 | | | 1 | ,Cable | ,Ledning | 6 |
| 0400 | | | | | | lambda sonde | lambdasond | |
| 0401 | | | | | | | | |
| 0410 | 6 | 95 55 905 | | B+ | 1 | Cable | Kabel | 6 |
| 0420 | | | | | | | | |
| 0430 | 7 | 85 94 467 | | B201, AC | 1 | Cable harness | Ledningsnät | 6 |
| 0440 | | | | | | idling speed increase | tomgångshöjning | |

50. For cars without integrated bumpers. För bilar utan integrerade stötfångare.
64. With catalytic converter. Med katalytisk reaktor.
166. Day driving light. Varsellius.
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

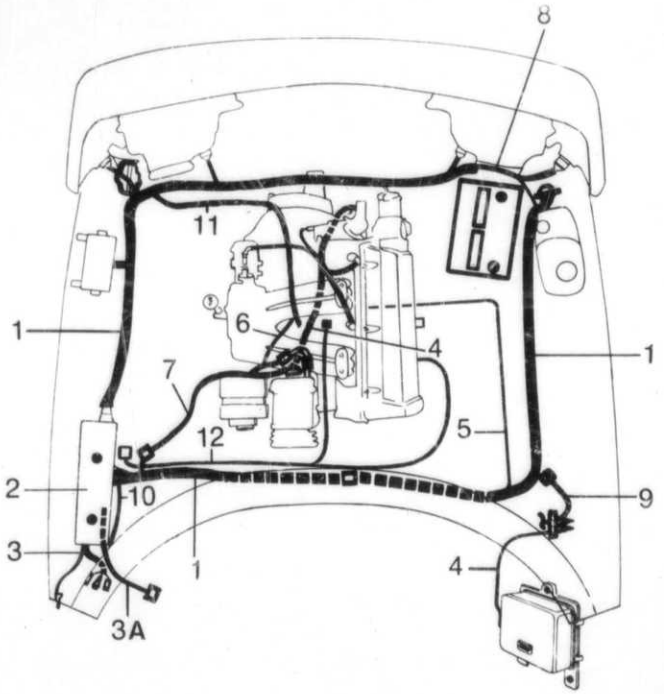


F0065 - 900

| Pos | Part No/Art nr | KS | Notes/Anmärkningar | Qty/Antal | Description | Benämning | SL |
|---|---|---|---|---|---|---|---|
| 8 | 95 57 505 | | AC, SE, FI, EU, GB | 1 | Cable harness<br>idling speed increase | Ledningsnät<br>tomgångshöjning | 5 |
| 9 | 95 54 841 | | 157), SE, FI, EU, GB, AU, ME, FE | 1 | Cable harness<br>switch | Ledningsnät<br>strömställare | 5 |
| 9 | 95 61 655 | | 158), SE, FI, EU, GB, AU, ME, FE | 1 | Cable harness<br>switch | Ledningsnät<br>strömställare | 5 |
| 10 | 95 68 288 | | GB | 1 | Cable harness<br>dim-dip | Ledningsnät<br>dim-dip | 5 |
| 11 | 95 61 804 | | | 1 | Cable harness<br>knock-sensor | Ledningsnät<br>knacksensor | 6 |
| 12 | 74 78 159 | | 77,167), LH2.2<br>See page 2-201, 1-J10 | 1 | Cable harness | Ledningsnät | 6 |

77. Without catalytic converter. Utan katalytisk reaktor.
157. With recirculation. Med recirkulation.
158. Without recirculation. Utan recirkulation.
167. Part of choke kit 89 82 423. Del av choke sats 89 82 423.
500. Also valid for SE 1988B. Gäller även för SE 1988B.





MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

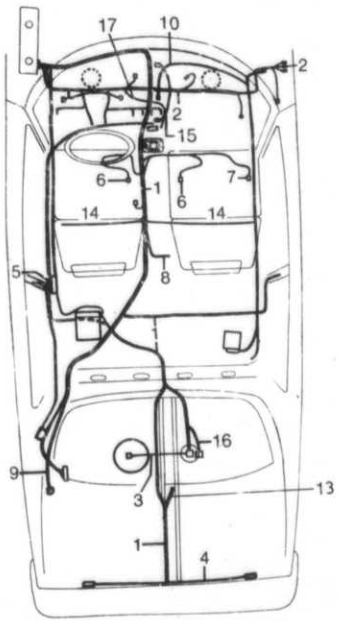

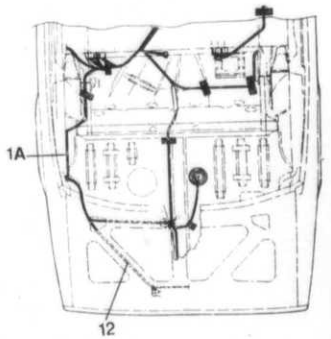
F5616 90086

| 1076 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 95 68 635 | | B201 C, I, CK, SE, FI, EU, GB, ME, FE | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0040 | 1 | 95 68 676 | | B201 TURBO, B202, CK, SE, FI, EU, GB, ME,FE,AU | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0060 | 1 | 95 68 627 | | B201 C, I, SN, SE, FI, EU, GB, ME, FE | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0080 | 1 | 95 68 650 | | B201 TURBO, B202, SN, SE, FI, EU, GB, ME,FE,AU | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0110 | 1 | 95 68 684 | | 2SN, JP | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0115 | 1 | 40 60 208 | | SN, RHD, JP | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0120 | 1 | 95 68 692 | | 4SN, US, CA, JP | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0130 | 1 | 95 68 700 | | CK, US, CA, JP | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0140 | 1 | 95 68 718 | | 39), US, CA, JP | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0151 | 1A | 95 97 576 | | CV | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0153 | 1A | 95 97 568 | | CV, US, CA, JA | 1 | Cable harness rear | Ledningsnät bakre | 5 |
| 0190 | 2 | 95 68 163 | | B201, SE, FI, EU, ME | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0210 | 2 | 95 68 197 | | B201, RHD, GB, FE | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0230 | 2 | 95 68 171 | | B202, SE, FI, EU, ME | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0250 | 2 | 95 68 205 | | B202, RHD, GB, FE, AU | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0300 | 2 | 95 68 239 | | B202, US, CA, JP | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0325 | 2 | 95 68 254 | | B202, RHD, JP | 1 | Cable harness instrument | Ledningsnät instrument | 5 |
| 0340 | 3 | 95 59 386 | | 161) | 1 | Cable harness fuel pump | Ledningsnät bränslepump | 6 |
| 0351 | 3 | 95 68 734 | | 161), B202 | 1 | Cable harness fuel pump | Ledningsnät bränslepump | 3 |
| 0360 | 3 | 95 59 378 | | 162) | 1 | Cable harness fuel pump | Ledningsnät bränslepump | 6 |
| 0390 | 4 | 85 68 701 | | SN | 1 | Cable harness tail lamp | Ledningsnät baklykta | 6 |
| 0420 | 5 | 95 57 760 | | | 1 | Cable harness interior illum. | Ledningsnät innerbelysning | 6 |
| 0450 | 6 | 85 70 210 | | 153) | 1 | Cable harness heating pad | Ledningsnät värmedyna | 5 |
| 0470 | 6 | 85 70 228 | | 125,159) | 1 | Cable harness heating pad | Ledningsnät värmedyna | 5 |

39. For cars with automatic belts. För bilar med passivt bälte.
125. CH --K3022751, --K7033879.
153. Drivers side. Förarsida.
159. Drivers side and passenger side. Förarsida och passagerarsida.
161. With pre-pump. Med pre-pump.
162. Without pre-pump. Utan pre-pump.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX



| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

Wiring and fuses

# 2-F02 *Instruments and rear 500), 1989*

Ledningar och säkringar

***Instrument och bakre 500), 1989***

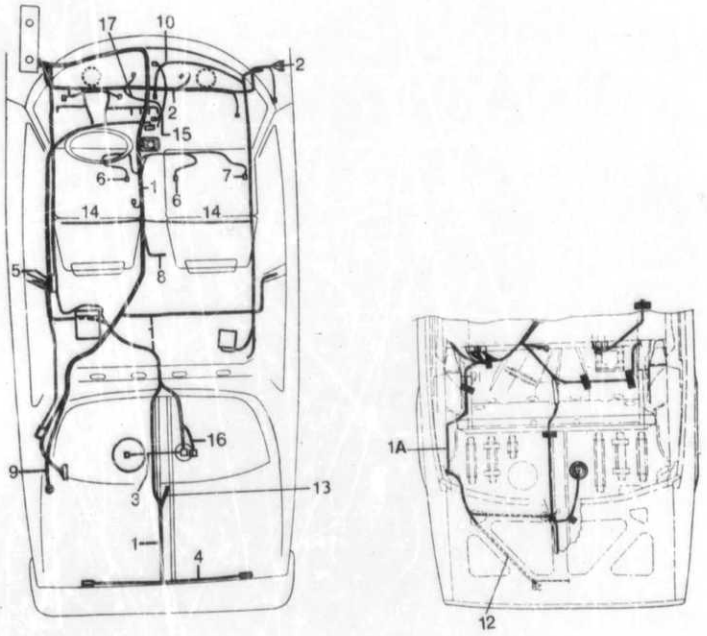





F5616 90086

| 1076 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0485 | 6 | 40 68 839 | | 126,159) | 1 | Cable harness heating pad | Ledningsnät värmedyna | 5 |
| 0490 | 6 | 95 57 935 | | 125,163) | 1 | Cable harness heating pad | Ledningsnät värmedyna | 5 |
| 0501 | 6 | 40 68 847 | | 126,163) | 1 | Cable harness heating pad | Ledningsnät värmedyna | 5 |
| 0505 | 6 | 95 60 343 | | 39,163), LH, US | 1 | Cable harness heating pad | Ledningsnät värmedyna | 5 |
| 0510 | 6 | 95 60 350 | | 39,164), RH, US | 1 | Cable harness heating pad | Ledningsnät värmedyna | 5 |
| 0520 | 7 | 85 70 236 | | | 1 | Cable harness seat belt warning | Ledningsnät bältesvarning | 6 |
| 0540 | 8 | 85 93 295 | | ME | 1 | Cable harness seat belt warning | Ledningsnät bältesvarning | 6 |
| 0570 | 9 | 95 64 477 | | | 1 | Cable harness antenna | Ledningsnät antenn | 5 |
| 0590 | 10 | | | See page 3A-067, 2-C20 | 1 | Cable harness speed control system | Ledningsnät farthållningssystem | |
| 0630 | 12 | 95 96 586 | | CV | 1 | Cable harness licence plate light | Ledningsnät nummerskyltlykta | 6 |
| 0650 | 13 | 95 53 553 | | SN | 1 | Cable harness high mounted stop light | Ledningsnät högt monterad stopplykta | 5 |
| 0670 | 14 | 95 68 817 | | 39), 3CK B202, US | 1 | Cable harness rear | Ledningsnät bakre | 6 |
| 0680 | 15 | | | US | | Cable harness radio-equalizer | Ledningsnät radio-equalizer | |
| 0690 | | | | See page 3A-077, 2-D06 | | | | |
| 0695 | 16 | 91 22 086 | | C | 1 | Cable harness tank sensor | Ledningsnät tankgivare | 6 |
| 0700 | 16 | 91 22 086 | | 90), I, TURBO | 1 | Cable harness tank sensor | Ledningsnät tankgivare | 6 |
| 0710 | 17 | 85 29 265 | | | 1 | Cable ashtray | Kabel askkopp | 6 |

39. For cars with automatic belts. För bilar med passivt bälte.
90. Ch --K3003731, --K7003885.
125. CH --K3022751, --K7033879.
126. CH K3022752--, K7033880--.
159. Drivers side and passenger side. Förarsida och passagerarsida.
163. Rheostat. Reostat.
164. Thermostat. Termostat.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 5-C02 |
| 7 | Suspension, Wheels | 5-E02 |
| 8A | Body, external | 6-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-F04

## Doors
## 500), 1989

## Dörrar
## 500), 1989

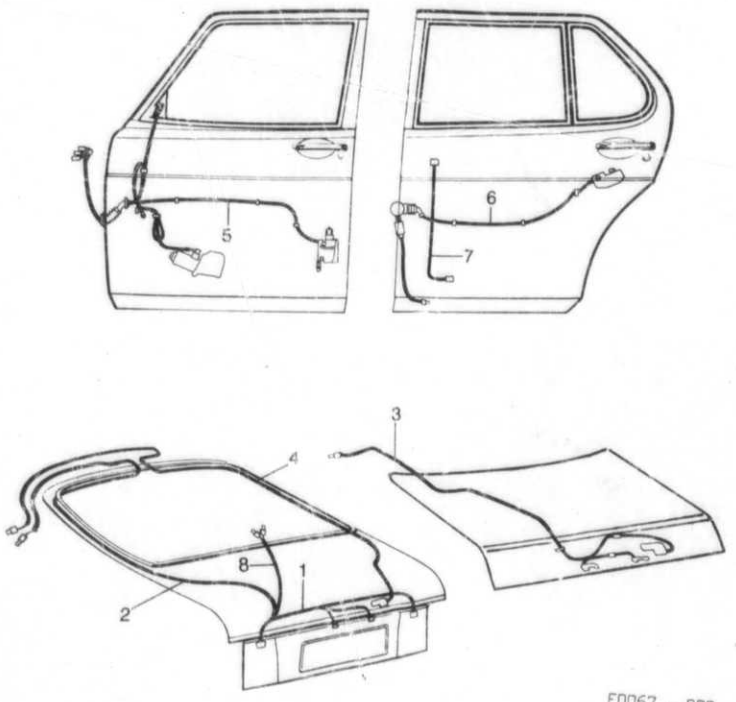


F0067 - 900

| 1077 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 85 61 532 | | | 1 | Cable harness tail gate | Ledningsnät bagagerumsdörr | 6 |
| 0020 | | | | | | | | |
| 0021 | | | | | | | | |
| 0030 | 2 | 85 62 001 | | | 1 | Cable harness tail gate | Ledningsnät bagagerumsdörr | 6 |
| 0040 | | | | | | | | |
| 0045 | 2 | 91 25 055 | | 168) | 1 | Cable harness tail gate | Ledningsnät bagagerumsdörr | 6 |
| 0046 | | | | | | | | |
| 0047 | 2 | 91 25 063 | | 168,169) | 1 | Cable harness tail gate | Ledningsnät bagagerumsdörr | 5 |
| 0048 | | | | | | | | |
| 0049 | | | | | | | | |
| 0050 | 3 | 85 98 872 | | SN | 1 | Cable harness boot lid | Ledningsnät bagagerumslucka | 6 |
| 0060 | | | | | | | | |
| 0061 | | | | | | | | |
| 0070 | 4 | 85 91 307 | | CK, CL | 1 | Cable harness tail gate | Ledningsnät bagagerumsdörr | 5 |
| 0080 | | | | | | | | |
| 0081 | | | | | | | | |
| 0090 | 5 | 85 91 257 | | 153), EM, EW, CL | 1 | Cable harness front door | Ledningsnät framdörr | 5 |
| 0100 | | | | | | | | |
| 0130 | 5 | 95 64 675 | | 153,165), EM, EW, CL | 1 | Cable harness front door | Ledningsnät framdörr | 5 |
| 0140 | | | | | | | | |
| 0170 | 5 | 95 64 691 | | 39,153,165), B202 I, EM, EW, CL, US | 1 | Cable harness front door | Ledningsnät framdörr | 5 |
| 0180 | | | | | | | | |
| 0210 | 5 | 95 97 444 | | 153), CV, EM, EW, CL | 1 | Cable harness front door | Ledningsnät framdörr | 5 |
| 0220 | | | | | | | | |
| 0250 | 5 | 85 91 265 | | 160), EM, EW, CL | 1 | Cable harness front door | Ledningsnät framdörr | 5 |
| 0260 | | | | | | | | |
| 0290 | 5 | 95 64 683 | | 160,165), EM, EW, CL | 1 | Cable harness front door | Ledningsnät framdörr | 5 |
| 0300 | | | | | | | | |
| 0330 | 5 | 95 64 709 | | 39,160,165), B202 I, EM, EW, CL, US | 1 | Cable harness front door | Ledningsnät framdörr | 5 |
| 0340 | | | | | | | | |
| 0370 | 5 | 95 97 451 | | 160), CV, EM, EW, CL | 1 | Cable harness front door | Ledningsnät framdörr | 5 |
| 0380 | | | | | | | | |
| 0390 | | | | | | | | |
| 0410 | 6 | 85 91 281 | | CL | 2 | Cable harness rear door | Ledningsnät bakdörr | 5 |
| 0420 | | | | | | | | |
| 0430 | | | | | | | | |
| 0440 | 7 | 85 91 489 | | EW | 2 | Cable harness rear door | Ledningsnät bakdörr | 5 |
| 0450 | | | | | | | | |
| 0460 | 7 | 85 91 497 | | EW, CL | 2 | Cable harness rear door | Ledningsnät bakdörr | 5 |
| 0470 | | | | | | | | |
| 0480 | | | | | | | | |
| 0500 | 8 | 95 53 751 | | CK | 1 | Cable harness high mounted stop light | Ledningsnät högt monterad stopplykta | 5 |
| 0510 | | | | | | | | |

39. For cars with automatic belts. För bilar med passivt bälte.
153. Drivers side. Förarsida.
160. Passenger side. Passagerarsida.
165. Electrically heated EM. Eluppvärmd EM.
168. High mounted stop light. Högt monterat stoppljus.
169. With rear fog light. Med dimbaklykta.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-F06

## *Bushing, clamp etc* — *Bussningar, klammer etc*

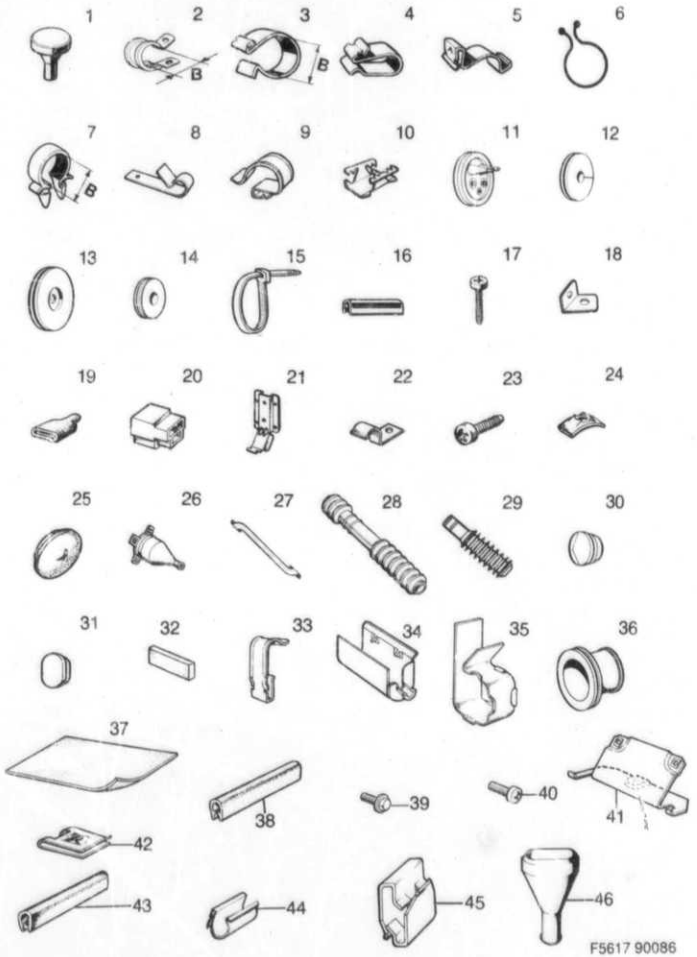


| 1090 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0010 1 | *94 92 455* | | NLS | 1 | Plug | Plugg | 3 |
| 0020 | | | | | heat shield | värmesköld | |
| 0030 2 | 85 66 135 | | | 1 | Clamp | Klammer | 5 |
| 0040 | | | | | battery cable | batterikabel | |
| 0050 2 | *85 66 143* | | TURBO NLS | X | Clamp | Klammer | 5 |
| 0060 2 | 79 69 348 | | B=6,4 MM | X | Clamp | Klammer | 5 |
| 0070 2 | 79 69 363 | | B=9,5 MM | X | Clamp | Klammer | 5 |
| 0080 2 | *79 69 439* | | -1987, B=20 MM NLS | X | Clamp | Klamma | 5 |
| 0090 2 | 79 69 454 | | 1988-, B=20 MM | X | Clamp | Klammer | 5 |
| 0100 3 | 85 53 737 | | | X | Clip | Clips | 5 |
| 0110 | | | | | front member | frontbalk | |
| 0120 3 | 85 09 127 | | B=25 MM | X | Clip | Clips | 5 |
| 0130 | | | | | front member | frontbalk | |
| 0140 3 | 79 33 443 | | B=7 MM | 2 | Clip | Clips | 5 |
| 0150 3 | 71 08 491 | | B=10 MM | X | Clamp | Klammer | 5 |
| 0160 | | | | | door | dörr | |
| 0170 3 | 79 33 443 | | B=7 MM | X | Clip | Clips | 5 |
| 0180 | | | | | rear door | bakdörr | |
| 0190 3 | 92 28 149 | | 170), B=16 MM | X | Clip | Clips | 5 |
| 0200 | | | | | cable harness | ledningsnät | |
| 0210 4 | 71 56 409 | | | X | Clamp | Klammer | 5 |
| 0220 | | | | | radiator member | kylarbalk | |
| 0230 4 | 71 56 409 | | | X | Clamp | Klammer | 5 |
| 0240 4 | 71 56 409 | | AC, A | 1 | Clamp | Klammer | 5 |
| 0250 | | | | | thermo switch | termobrytare | |
| 0260 4 | 79 51 783 | | TURBO | X | Clamp | Klammer | 5 |
| 0270 | | | | | door | dörr | |
| 0280 4 | 71 56 409 | | | X | Clamp | Klammer | 5 |
| 0290 | | | | | rear seat | baksäte | |
| 0300 4 | 71 56 409 | | | X | Clamp | Klammer | 5 |
| 0310 | | | | | lambda sonde | lambdasond | |
| 0320 5 | *85 58 066* | | 171) | X | Clip | Clips | 5 |
| 0330 | | | NLS | | cable harness | ledningsnät | |
| 0340 6 | 85 13 574 | | | X | Clip | Clips | 6 |
| 0350 | | | | | front seat | framstol | |
| 0360 7 | 93 65 164 | | B=12,5 MM | X | Clip | Clips | 5 |
| 0370 | | | | | grey | grå | |
| 0380 7 | 85 30 917 | | B=16 MM | X | Clip | Clips | 5 |
| 0390 | | | | | ignition coil | tändspole | |
| 0400 8 | 85 28 564 | | | X | Clamp | Klammer | 5 |
| 0410 9 | 85 53 737 | | | X | Clip | Clips | 5 |
| 0420 | | | | | brake servo | bromsservo | |
| 0430 9 | 85 53 737 | | | X | Clip | Clips | 5 |
| 0440 | | | | | instrument member | instrumentbalk | |
| 0450 9 | 85 53 737 | | | X | Clip | Clips | 5 |
| 0460 | | | | | contact housing, radio | kontakthus, radio | |
| 0470 10 | 73 92 772 | | | X | Clip | Clips | 5 |
| 0480 | | | | | loudspeaker | högtalare | |
| 0490 11 | 85 52 713 | | RH | X | Grommet | Genomföring | 5 |
| 0500 | | | | | wheel housing | hjulhus | |
| 0510 12 | 73 26 093 | | TURBO | 1 | Bushing | Bussning | 5 |
| 0520 | | | | | door | dörr | |
| 0530 13 | *79 61 980* | | NLS | X | Bushing | Bussning | 5 |
| 0540 | | | | | tail gate | bagageruinsdörr | |
| 0550 13 | 73 09 370 | | | 2 | Bushing | Bussning | |
| 0560 | | | | | horn | signalhorn | |
| 0570 13 | 94 60 742 | | AC | 1 | Bushing | Bussning | 5 |
| 0580 14 | 79 33 518 | | AC | 1 | Bushing | Bussning | 5 |

170. Front. Främre.
171. Rear. Bakre.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-F08

## *Bushing, clamp etc*

## *Bussningar, klammer etc*

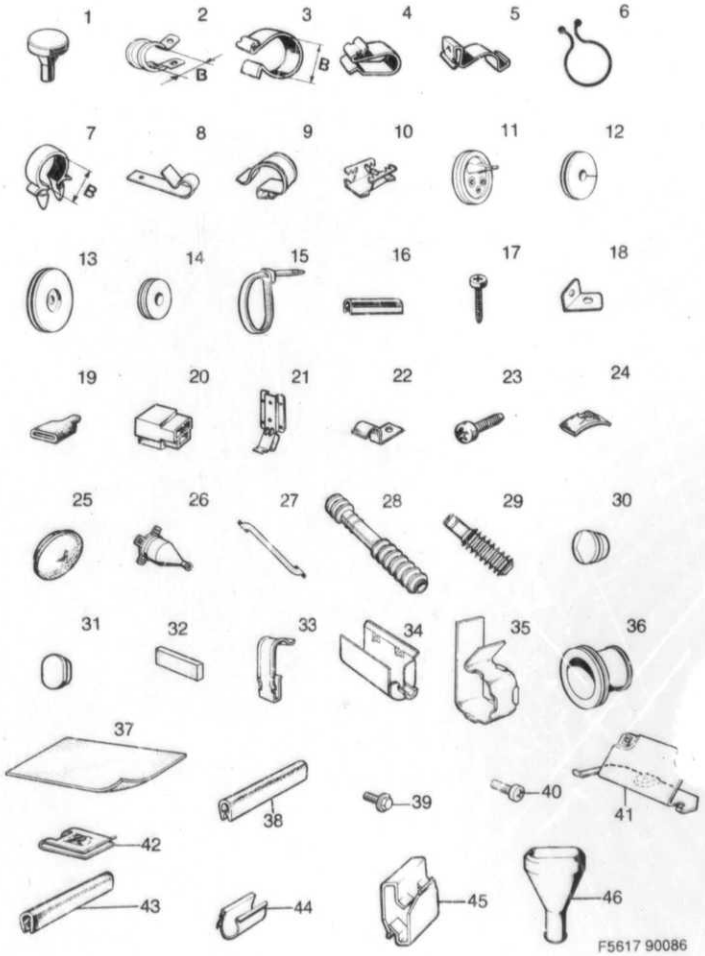


| Pos | Part No/Art nr | KS | Notes/Anmärkningar | Qty/Antal | Description | Benämning | SL |
|---|---|---|---|---|---|---|---|
| 14 | *79 33 567* | | 171) | 1 | Bushing | Bussning | 6 |
| | | | NLS | | door | dörr | |
| 14 | *79 33 567* | | 1987-, CV | 2 | Bushing | Bussning | 6 |
| | | | NLS | | door | dörr | |
| 15 | 79 71 880 | | | X | Tensioning band | Spännband | 4 |
| 15 | 79 71 864 | | 177), CV I | X | Tensioning band | Spännband | 5 |
| 15 | *85 17 104* | | AC NLS - USE 7971864 | X | Tensioning band | Spännband | 4 |
| 15 | 79 71 906 | | 171) | X | Tensioning band | Spännband | 5 |
| | | | | | cable harness | ledningsnät | |
| 15 | 79 71 872 | | 171), CV | X | Tensioning band | Spännband | 5 |
| | | | | | cable harness | ledningsnät | |
| 16 | *84 97 471* | | NLS - USE 8564973 | 1 | Protecting moulding | Skyddslist | 6 |
| | | | | | rear seat | baksäte | |
| 17 | 79 22 818 | | B10 X 13 | X | Screw | Skruv | 5 |
| | | | | | ground | jord | |
| 17 | 79 73 704 | | B12 X 9,5 | X | Screw | Skruv | 5 |
| | | | | | ground | jord | |
| 18 | 85 52 655 | | | 1 | Bracket | Hållare | 6 |
| 19 | 85 72 083 | | | 1 | Protection | Skydd | 4 |
| | | | | | thermo switch | termobrytare | |
| 20 | *85 71 317* | | NLS | 1 | Bypass unit | Överkopplingsdon | 3 |
| | | | | | lambda sonde | lambdasond | |
| 21 | 85 69 360 | | | 1 | Protecting plate | Skyddsplåt | 5 |
| 22 | *79 49 084* | | NLS | X | Clamp | Klämma | 5 |
| | | | | | windscreen member | vindrutebalk | |
| 23 | 79 22 727 | | | X | Screw | Skruv | 5 |
| | | | | | windscreen member | vindrutebalk | |
| 24 | 79 19 574 | | | X | Clamp | Klämmer | 3 |
| | | | | | windscreen member | vindrutebalk | |
| 25 | 82 04 760 | | 170), 1987- | 1 | Plug | Plugg | 5 |
| | | | | | cable harness | ledningsnät | |
| 26 | 85 52 721 | | 170) | 4 | Cable protection | Kabelskydd | 4 |
| | | | | | cable harness | ledningsnät | |
| 27 | 85 61 433 | | | 1 | Grommet | Genomföring | 6 |
| | | | | | tail gate | bagagerumsdörr | |
| 28 | 85 74 410 | | | 1 | Bellows | Bälg | 6 |
| | | | | | door | dörr | |
| 29 | 85 74 824 | | | 1 | Bellows | Bälg | 6 |
| | | | | | door | dörr | |
| [illegible] | 70 38 342 | | | 4 | Plug | Plugg | 5 |
| | | | | | rear door | bakdörr | |
| [illegible] | 85 75 599 | | | 2 | Plug | Plugg | 5 |
| | | | | | front door | framdörr | |
| [illegible] | 82 41 325 | | | 2 | Plug | Plugg | 5 |
| | | | | | door | dörr | |
| 30 | 82 04 760 | | -1986 | 1 | Plug | Plugg | 5 |
| | | | | | cowl | torped | |
| 30 | 71 55 708 | | 1987- | 1 | Plug | Plugg | 5 |
| | | | | | cowl | torped | |
| 31 | 85 75 581 | | | 1 | Plug | Plugg | 5 |
| | | | | | tail gate | bagagerumsdörr | |
| 32 | 85 91 513 | | -1988 | 1 | Grommet | Genomföring | 6 |
| | | | | | instrument | instrument | |
| 32 | 40 62 048 | | 500), 1989- | 1 | Foam plastic | Skumplast | 6 |
| | | | | | instrument | instrument | |
| 33 | 85 85 325 | | 171) | X | Clamp | Klämma | 5 |
| | | | | | cable harness | ledningsnät | |
| 34 | *85 79 575* | | NLS | 1 | Protection | Skydd | 4 |
| 35 | 85 87 628 | | | X | Clamp | Klämma | 5 |

170. Front. Främre.
171. Rear. Bakre.
177. K7027376-.
500. Also valid for SE 1988B. Gäller även för SE 1988S.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-F10

## *Bushing, clamp etc*

## *Bussningar, klammer etc*

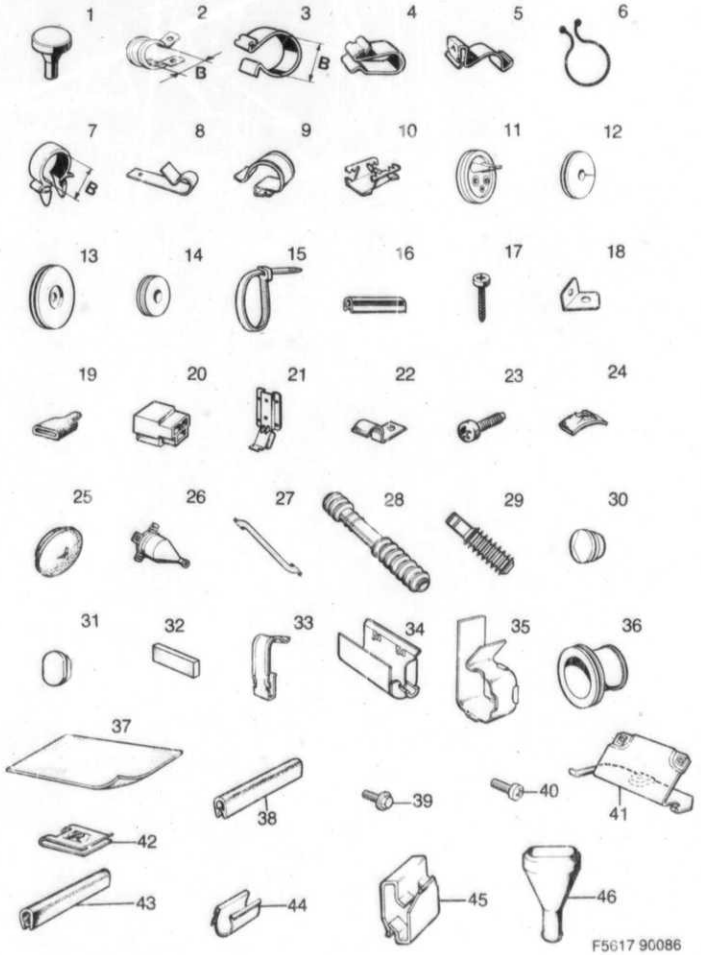


| Pos | Part No/Art nr | KS | Notes/Anmärkningar | Qty/Antal | Description / Benämning | SL |
|---|---|---|---|---|---|---|
| 36 | 85 87 586 | | -1988, RH | 1 | Grommet / Genomföring | 6 |
| | | | | | wheel housing / hjulhus | |
| 36 | 40 61 719 | | 500), 1989-, RH | 1 | Grommet / Genomföring | 6 |
| | | | | | wheel housing / hjulhus | |
| 37 | 95 51 169 | | 64), -1988 | 1 | Insulation / Isolering | 4 |
| | | | | | cable harness / ledningsnät | |
| 38 | 82 78 558 | | 170) | 1 | Protecting moulding / Skyddslist | 5 |
| | | | | | cable harness / ledningsnät | |
| 38 | 89 30 349 | | 500), 1989- | 1 | Protecting moulding / Skyddslist | 5 |
| | | | | | rear seat / baksäte | |
| 39 | 79 72 144 | | 170), M8X12 | X | Screw / Skruv | 5 |
| | | | | | cable harness / ledningsnät | |
| 39 | 79 73 555 | | 170), M8X22 | X | Screw / Skruv | 5 |
| | | | | | cable harness / ledningsnät | |
| 40 | 80 59 545 | | 170), M6X10 | X | Screw / Skruv | 5 |
| | | | | | cable harness / ledningsnät | |
| 40 | 80 59 552 | | M6X12 | X | Screw / Skruv | 5 |
| 40 | 80 59 578 | | M6X16 | X | Screw / Skruv | 5 |
| | | | | | cable harness / ledningsnät | |
| 41 | 95 53 280 | | | 1 | Bracket / Hållare | 5 |
| | | | | | cable harness / ledningsnät | |
| 42 | 79 33 682 | | | X | Spring nut / Fjädermutter | 3 |
| 43 | 85 99 565 | | | 1 | Protecting moulding / Skyddslist | 4 |
| | | | | | cable harness / ledningsnät | |
| 44 | 71 21 239 | | CK | 4 | Clamp / Klammer | 5 |
| | | | | | high mounted stop light / högt monterad stopplykta | |
| 45 | 95 18 515 | | 171) | X | Clip / Clips | 5 |
| | | | | | cable harness / ledningsnät | |
| 46 | 85 79 955 | | | 1 | Protection / Skydd | 4 |
| | | | | | contact housing / kontakthus | |
| 46 | 85 74 105 | | | 1 | Protection / Skydd | 4 |
| | | | | | contact housing / kontakthus | |
| 46 | 85 79 955 | | 1988- | 1 | Protection / Skydd | 4 |
| | | | | | contact housing / kontakthus | |

64. With catalytic converter. Med katalytisk reaktor.
170. Front. Främre.
171. Rear. Bakre.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 7 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-F12

## *Bushing, clamp etc*

## *Bussningar, klammer etc*

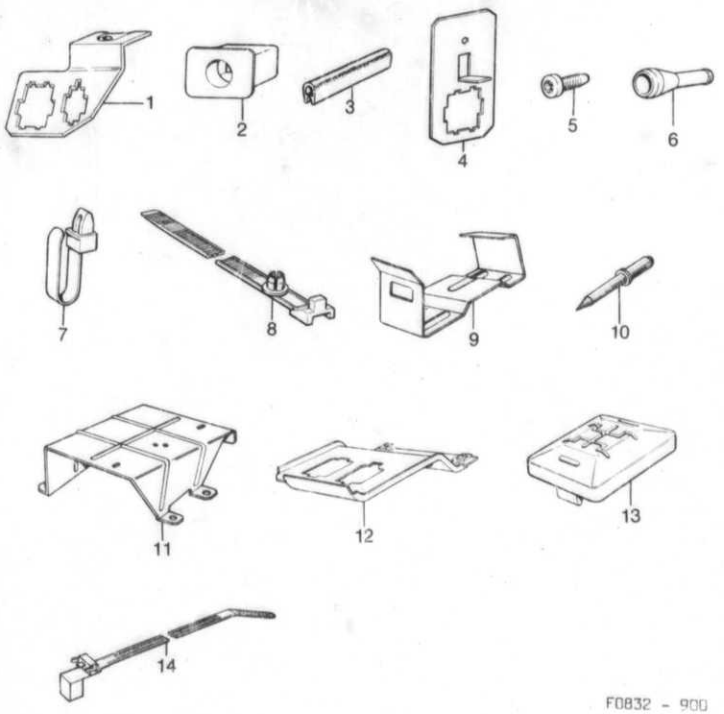


F0832 - 900

| 1095 | Pos | Part No/Art nr | \ S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 95 56 424 | | LH | 1 | Bracket | Hållare | 9 |
| 0020 | | | | | | contact housing | kontakthus | |
| 0030 | 1 | 95 58 008 | | RH | 1 | Bracket | Hållare | 9 |
| 0040 | | | | | | contact housing | kontakthus | |
| 0050 | 2 | 84 24 442 | | -1986, CV | 2 | Clip | Clips | 5 |
| 0060 | | | | | | cable harness | ledningsnät | |
| 0070 | 3 | 95 19 737 | | 170) | 1 | Protecting moulding | Skyddslist | 5 |
| 0080 | | | | | | cable harness | ledningsnät | |
| 0090 | 3 | 40 63 517 | | 1988- | 1 | Protecting moulding | Skyddslist | 4 |
| 0100 | | | | | | cable harness | ledningsnät | |
| 0110 | 3 | 40 63 525 | | 1988- | 1 | Protecting moulding | Skyddslist | 4 |
| 0120 | | | | | | cable harness | ledningsnät | |
| 0130 | 3 | 75 35 487 | | 179,180) | 1 | Protecting moulding | Skyddslist | 5 |
| 0140 | | | | | | cable harness | ledningsnät | |
| 0145 | 3 | 85 64 973 | | 179) | 1 | Protecting moulding | Skyddslist | 6 |
| 0146 | | | | | | cable harness | ledningsnät | |
| 0150 | 4 | 95 56 176 | | 39), 1987-, US | 2 | Bracket | Hållare | 4 |
| 0160 | | | | | | contact housing | kontakthus | |
| 0170 | 5 | 79 22 891 | | 39), 1987-, US | 2 | Screw | Skruv | 5 |
| 0180 | 6 | 85 71 382 | | | 1 | Protection | Skydd | 4 |
| 0190 | | | | | | contact housing | kontakthus | |
| 0200 | 7 | 85 52 663 | | L=200 MM, ∅ 6,5 MM | X | Tensioning band | Spännband | 5 |
| 0210 | 8 | 75 12 015 | | L=120 MM, ∅ 7 MM | X | Tensioning band | Spännband | 5 |
| 0220 | 9 | *95 63 354* | | 171,500), 1989- | 1 | Attaching brace | Fästbygel | 5 |
| 0230 | | | | NLS | | cable harness | ledningsnät | |
| 0240 | 10 | 79 72 490 | | 500), 1989- | 1 | Rivet | Nit | 5 |
| 0250 | 11 | 95 64 014 | | 64,500), 1989-, B201 | 1 | Bracket | Hållare | 4 |
| 0260 | | | | | | relay | relä | |
| 0270 | 12 | 95 69 799 | | 64,500), 1989-, B202 | 1 | Bracket | Hållare | 4 |
| 0280 | 13 | 40 60 836 | | 500), 1989- | 1 | Cover | Lock | 4 |
| 0290 | 14 | 91 24 603 | | 500), 1989-, L=120 MM | X | Tensioning band | Spännband | 5 |

39. For cars with automatic belts. För bilar med passivt bälte.
64. With catalytic converter. Med katalytisk reaktor.
170. Front. Främre.
171. Rear. Bakre.
179. Ch K3001699-, K7002185-.
180. For 85 85 176. För 85 85 176.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-F14

## Electrical distribut.unit
## Relays and fuses

## Elcentral
## Reläer och säkringar

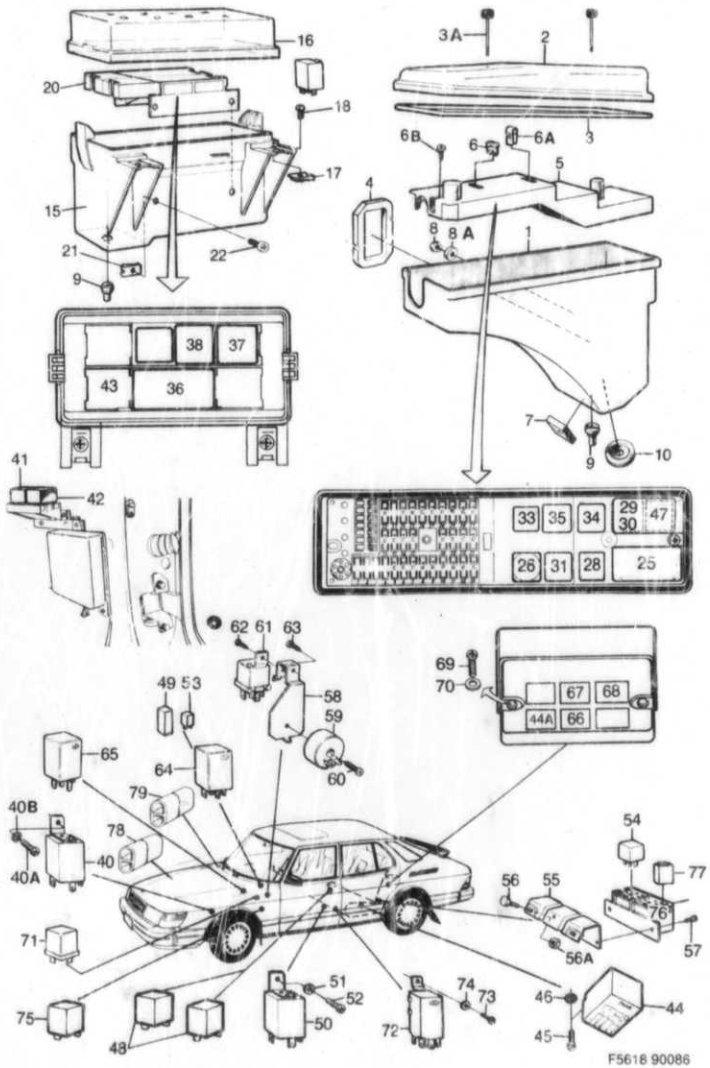


F5618 90086

| 1200 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 85 98 773 | | | 1 | Lower section | Underdel | 5 |
| 0020 | | | | | | electrical distribut.unit | elcentral | |
| 0030 | 2 | 95 54 866 | | -1986 | 1 | Cover | Lock | |
| 0040 | | | | | | electrical distribut.unit | elcentral | |
| 0050 | 2 | 95 59 493 | | 1987, SE, FI, EU, GB, | 1 | Cover | Lock | 5 |
| 0060 | | | | ME, FE | | electrical distribut.unit | elcentral | |
| 0070 | 2 | 95 63 719 | | 1988, SE, FI, EU, GB, | 1 | Cover | Lock | 5 |
| 0080 | | | | ME, FE | | electrical distribut.unit | elcentral | |
| 0090 | 2 | 91 23 258 | | 500), 1989-, SE, FI, EU, | 1 | Cover | Lock | 5 |
| 0100 | | | | GB, ME, FE | | electrical distribut.unit | elcentral | |
| 0110 | 2 | 95 54 874 | | -1986, US, CA, JP, AU | 1 | Cover | Lock | |
| 0120 | | | | | | electrical distribut.unit | elcentral | |
| 0130 | 2 | 95 59 659 | | 1987, US, CA, JP, AU | 1 | Cover | Lock | 5 |
| 0140 | | | | | | electrical distribut.unit | elcentral | |
| 0150 | 2 | 95 63 735 | | 1988, US, CA, JP, AU | 1 | Cover | Lock | 5 |
| 0160 | | | | | | electrical distribut.unit | elcentral | |
| 0170 | 2 | 95 54 882 | | -1986, B202 | 1 | Cover | Lock | |
| 0180 | | | | | | electrical distribut.unit | elcentral | |
| 0190 | 2 | 95 59 501 | | 1987, B202, SE, FI, EU, | 1 | Cover | Lock | 5 |
| 0200 | | | | GB, ME, FE | | electrical distribut.unit | elcentral | |
| 0210 | 2 | 95 63 750 | | 1988, B202, SE, FI, EU, | 1 | Cover | Lock | 5 |
| 0220 | | | | GB, ME, FE | | electrical distribut.unit | elcentral | |
| 0230 | 2 | *91 23 274* | | 500), 1989-, B202, | 1 | Cover | Lock | 5 |
| 0240 | | | | SE, FI, EU, GB, ME, FE | | electrical distribut.unit | elcentral | |
| 0240 | | | | NLS - USE 4069787 | | | | |
| 0250 | 2 | 95 54 890 | | -1986, B202, US, CA, JP, | 1 | Cover | Lock | |
| 0260 | | | | AU | | electrical distribut.unit | elcentral | |
| 0270 | 2 | 95 59 667 | | 1987, B202, US, CA, JP, | 1 | Cover | Lock | 5 |
| 0280 | | | | AU | | electrical distribut.unit | elcentral | |
| 0290 | 2 | 95 63 776 | | 1988, B202, US, CA, JP, | 1 | Cover | Lock | 5 |
| 0300 | | | | AU | | electrical distribut.unit | elcentral | |
| 0310 | 2 | *91 23 282* | | 1989-, B202, US, CA, JP, | 1 | Cover | Lock | 5 |
| 0320 | | | | AU NLS - USE 4069803 | | electrical distribut.unit | elcentral | |
| 0330 | 3 | 85 53 265 | | | 1 | .Seal | .Tätning | 6 |
| 0340 | 3A | 85 71 663 | | | 2 | .Screw | .Skruv | |
| 0350 | 4 | 85 52 671 | | | 1 | Seal | Tätning | 6 |
| 0360 | 5 | 95 52 969 | | -1987 | 1 | Socket | Sockel | 6 |
| 0370 | 5 | 95 59 790 | | 1988- | 1 | Socket | Sockel | 6 |
| 0380 | 6 | 79 74 637 | | 10A | X | Fuse | Säkring | 1 |
| 0390 | 6 | 79 74 645 | | 15A | X | Fuse | Säkring | 1 |
| 0400 | 6 | 79 74 652 | | 20A | X | Fuse | Säkring | 1 |
| 0410 | 6 | 79 74 660 | | 25A | X | Fuse | Säkring | 1 |
| 0420 | 6 | 79 74 678 | | 30A | X | Fuse | Säkring | 1 |
| 0430 | 6A | 85 87 636 | | | 1 | Fuse clip | Säkringsklämma | 5 |
| 0440 | 6B | 79 22 909 | | | 2 | Screw | Skruv | 5 |
| 0450 | 7 | 85 51 392 | | | 1 | Seal | Tätning | 6 |
| 0460 | 8 | 80 29 555 | | -1987 | 3 | Nut | Mutter | 5 |
| 0470 | 8 | 81 51 227 | | 1988- | 3 | Nut | Mutter | 5 |
| 0480 | 8A | 85 37 623 | | | 2 | Washer | Bricka | 3 |
| 0490 | 9 | 71 16 452 | | -1988 | 2 | Draining plug | Dräneringsplugg | 5 |
| 0500 | 10 | 79 62 004 | | | 1 | Bushing | Bussning | |
| 0510 | 15 | 85 69 196 | | -1988, US, CA, JP | 1 | Lower section | Underdel | 5 |
| 0520 | 16 | 85 71 721 | | -1988, US, CA, JP | 1 | Cover | Lock | |
| 0530 | | | | | | electrical distribut.unit | elcentral | |
| 0540 | 17 | 85 69 212 | | -1988, US, CA, JP | 2 | Clip | Clips | 3 |
| 0550 | 18 | 79 70 601 | | -1988, US, CA, JP | 2 | Screw | Skruv | 5 |
| 0560 | 19 | 85 51 665 | | | 2 | Contact housing | Kontakthus | 4 |
| 0570 | 19 | *95 18 747* | | 1987-,39) NLS - USE | 2 | Contact housing | Kontakthus | 4 |
| 0570 | | | | 9124199 | | | | |
| 0580 | 19A | 95 19 380 | | 1987-,39) | 1 | Fuse holder | Säkringshållare | 4 |
| 0590 | 20 | 85 71 390 | | -1988 | 2 | Bracket | Hållare | 4 |

39. For cars with automatic belts. För bilar med passivt bälte.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-F16

## Electrical distribut.unit
## Relays and fuses

## Elcentral
## Reläer och säkringar

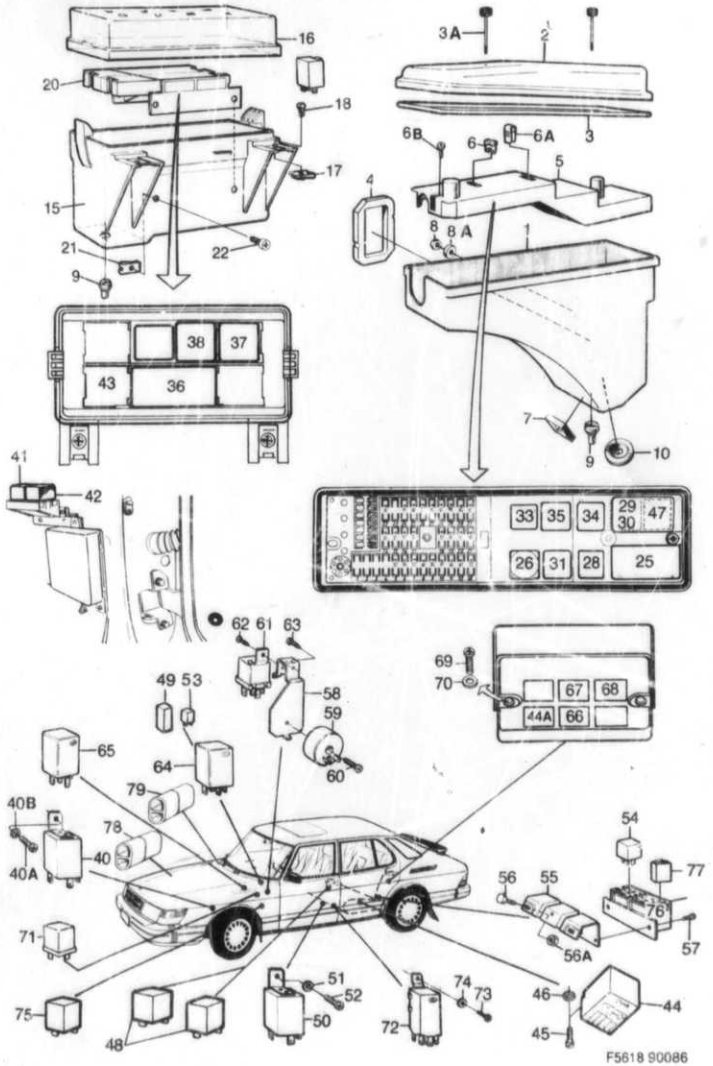


F5618 90086

| 1200 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0600 | 21 | 79 68 001 | | -1988 | 4 | Clip nut | Clipsmutter | 5 |
| 0610 | 22 | 85 68 289 | | -1988 | 4 | Relay | Relä | 5 |
| 0611 | | | | | | warm start | varmstart | |
| 0620 | 25 | 95 60 889 | | -1987 | 1 | Relay | Relä | 2 |
| 0621 | | | | | | light | ljus | |
| 0630 | 25 | 95 53 546 | | 1988- | 1 | Relay | Relä | 2 |
| 0631 | | | | | | light | ljus | |
| 0640 | 25 | 95 66 647 | | 1988, SE, GB | 1 | Relay | Relä | 2 |
| 0641 | | | | | | light | ljus | |
| 0650 | 25 | 95 66 647 | | 500), 1989-, SE, GB, CA | 1 | Relay | Relä | 2 |
| 0651 | | | | | | light | ljus | |
| 0660 | 26 | 95 22 061 | | (8572943) | 1 | Relay | Relä | 5 |
| 0661 | | | | | | starter switch | tändningslås | |
| 0670 | 28 | 85 22 310 | | | 1 | Relay | Relä | 3 |
| 0671 | | | | | | rear window | bakruta | |
| 0680 | 28 | *85 88 220* | | 172), -1988, US, CA, JP, ME, FE NLS - USE 9519133 | 1 | Relay | Relä | 4 |
| 0690 | | | | | | rear window | bakruta | |
| 0700 | 28 | 95 19 133 | | 172), 1989-, US, CA, JP, ME, FE | 1 | Relay | Relä | 4 |
| 0710 | | | | | | rear window | bakruta | |
| 0720 | 29 | 95 50 948 | | | 1 | Relay | Relä | 3 |
| 0721 | | | | | | fuel pump | bränslepump | |
| 0730 | 30 | 95 12 849 | | TURBO | 1 | Relay | Relä | 3 |
| 0731 | | | | | | fuel pump | bränslepump | |
| 0740 | 30 | 85 22 310 | | B202, TURBO, US, CA, JP | 1 | Relay | Relä | 3 |
| 0741 | | | | | | fuel pump | bränslepump | |
| 0750 | 31 | 95 18 481 | | -1987 | 1 | Relay | Relä | 5 |
| 0760 | | | | | | signal amplifier | signalförstärkare | |
| 0770 | 33 | 85 22 310 | | | 1 | Relay | Relä | 3 |
| 0771 | | | | | | horn | signalhorn | |
| 0780 | 34 | *95 13 219* | | 172), AC | 1 | Relay | Relä | 5 |
| 0781 | | | | NLS - USE 4179925 | | compressor | kompressor | |
| 0790 | 35 | 85 72 190 | | AC | 1 | Relay | Relä | 3 |
| 0791 | | | | | | cooling fan | kylfläkt | |
| 0800 | 36 | 85 84 732 | | 64), B201 | 1 | Relay | Relä | 5 |
| 0810 | | | | | | transient enrichment | accelerationsupprikning | |
| 0820 | 37 | 85 99 425 | | -1987, B201 I, M, US | 1 | Relay | Relä | 5 |
| 0821 | | | | | | retardation | retardation | |
| 0830 | 37 | 85 99 425 | | 1988, B201 I, M, US, CA, AU, JP | 1 | Relay | Relä | 5 |
| 0840 | | | | | | retardation | retardation | |
| 0850 | 38 | 85 68 271 | | 43), EU | 1 | Relay | Relä | 5 |
| 0851 | | | | | | warm start | varmstart | |
| 0860 | 38 | 85 68 271 | | -1988, B201, US, CA, JP, AU | 1 | Relay | Relä | 5 |
| 0861 | | | | | | warm start | varmstart | |
| 0870 | 38 | 85 68 289 | | -1987, ME, FE | 1 | Relay | Relä | 5 |
| 0871 | | | | | | warm start | varmstart | |
| 0880 | 40 | *85 87 677* | | 172), -1986, US, CA, JP, ME, FE NLS - USE 955807 | 1 | Relay | Relä | 4 |
| 0890 | | | | | | cooling fan | kylfläkt | |
| 0900 | 40 | 95 58 073 | | 172), 1987-, US, CA, JP, ME, FE | 1 | Relay | Relä | 4 |
| 0910 | | | | | | cooling fan | kylfläkt | |
| 0920 | 40A | 79 22 800 | | -1988 | 1 | Screw | Skruv | 5 |
| 0925 | 40A | 79 22 891 | | 500), 1989- | 1 | Screw | Skruv | 5 |
| 0927 | 40B | 79 15 556 | | 500), 1989- | 1 | Star washer | Taggbricka | 5 |
| 0930 | 41 | 85 36 401 | | B202 | 1 | Relay | Relä | 3 |
| 0931 | | | | | | fuel pump | bränslepump | |
| 0940 | 42 | 85 36 401 | | B202 | 1 | Relay | Relä | 3 |
| 0950 | | | | See page 2-089, 1-E18 | | LH-system | LH-system | |
| 0970 | 43 | 85 22 310 | | US | 1 | Relay | Relä | 3 |
| 0971 | | | | | | front fog light | dimstrålkastare | |
| 0980 | 44 | 95 12 823 | | EW | 1 | Relay | Relä | 5 |

43. EU with US spec. EU med US spec.
64. With catalytic converter. Med katalytisk reaktor.
172. Timer relay. Tidrelä.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-F18

## Electrical distribut.unit — Elcentral
## Relays and fuses — Reläer och säkringar

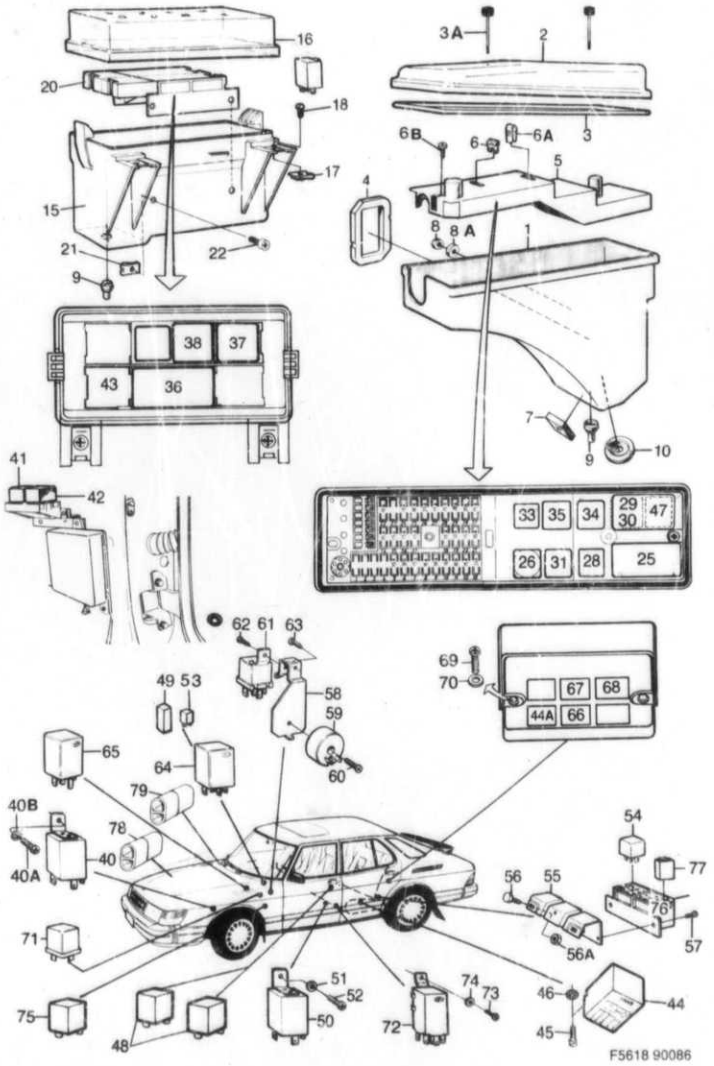


F5618 90086

| 1200 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 1000 | 44A | 95 12 823 | | 1989-, CV, EW | 1 | Relay | Relä | 5 |
| 1020 | 45 | 79 73 704 | | -1986 | 1 | Screw | Skruv | 5 |
| 1030 | 45 | 79 22 891 | | 1987- | 1 | Screw | Skruv | 5 |
| 1040 | 46 | 79 15 556 | | | 1 | Star washer | Taggbricka | 5 |
| 1050 | 47 | 85 91 729 | | -1988, US, CA, JP | 1 | Relay | Relä | 5 |
| 1051 | | | | | | gear indicator | växelindikator | |
| 1060 | 47 | 95 56 390 | | 1989-, CA | 1 | Relay | Relä | 9 |
| 1061 | | | | | | daylight driving lights | varselljus | |
| 1070 | 48 | 95 96 560 | | -1988, CV | 2 | Relay | Relä | 9 |
| 1080 | | | | | | folding top | sufflett | |
| 1090 | 48A | 95 96 560 | | 1989-, CV | 2 | Relay | Relä | 9 |
| 1100 | | | | | | folding top | sufflett | |
| 1110 | 49 | 85 83 627 | | | 1 | Flasher relay | Blinkrelä | 2 |
| 1120 | 50 | 85 89 319 | | 172) | 1 | Relay | Relä | |
| 1130 | | | | | | interior illum. | innerbelysning | |
| 1140 | 51 | 79 15 556 | | | 1 | Star washer | Taggbricka | 5 |
| 1150 | 52 | 79 73 704 | | -1986 | 1 | Screw | Skruv | 5 |
| 1160 | 52 | 79 22 891 | | 1987- | 1 | Screw | Skruv | 5 |
| 1170 | 53 | 85 53 463 | | | 1 | Relay | Relä | 6 |
| 1171 | | | | | | intermittent wiper | intervalltorkare | |
| 1180 | 54 | 95 56 390 | | 1987-,39), US | 4 | Relay | Relä | 9 |
| 1190 | 55 | 95 56 184 | | 1987-,39), US | 1 | Bracket | Hållare | 4 |
| 1200 | 56 | 79 22 800 | | 1987-,39), US | 4 | Screw | Skruv | 5 |
| 1210 | 56A | 80 29 548 | | 1987,39), US | 4 | Nut | Mutter | 5 |
| 1220 | 56A | 81 51 219 | | 1988-,39), US | 4 | Nut | Mutter | 5 |
| 1230 | 57 | 79 22 735 | | 1987-,39), US | 4 | Screw | Skruv | 5 |
| 1240 | 58 | 95 60 939 | | 1987-, GB | 1 | Bracket | Hållare | 6 |
| 1241 | | | | | | dim-dip | dim-dip | |
| 1250 | 59 | 95 58 875 | | 1987-, GB | 1 | Resistor | Motstånd | 5 |
| 1251 | | | | | | dim-dip | dim-dip | |
| 1260 | 60 | 79 22 826 | | 1987-, GB | 2 | Screw | Skruv | 5 |
| 1261 | | | | | | dim-dip | dim-dip | |
| 1270 | 61 | 85 91 455 | | 1987-,51), GB | 2 | Relay | Relä | 5 |
| 1271 | | | | | | dim-dip | dim-dip | |
| 1280 | 61 | 95 63 099 | | 52), GB | 2 | Relay | Relä | 5 |
| 1281 | | | | | | dim-dip | dim-dip | |
| 1290 | 62 | 79 22 347 | | 1987-, GB | 1 | Screw | Skruv | 5 |
| 1291 | | | | | | dim-dip | dim-dip | |
| 1300 | 63 | 79 22 800 | | 1987-, GB | 2 | Screw | Skruv | 5 |
| 1301 | | | | | | dim-dip | dim-dip | |
| 1310 | 64 | *85 99 433* | | 64), 1987, B201 TURBO, | 1 | Relay | Relä | 4 |
| 1320 | | | | SE, EU NLS - USE 9561044 | | | | |
| 1330 | 64 | 95 61 044 | | 64), 1988-, B201 TURBO, | 1 | Relay | Relä | 4 |
| 1340 | | | | SE, EU | | | | |
| 1350 | 65 | 85 99 425 | | 1987-,43), B201 I M | 1 | Relay | Relä | 5 |
| 1351 | | | | | | retardation | retardation | |
| 1360 | 66 | 95 15 099 | | 172), 1989-, CV | 1 | Relay | Relä | 4 |
| 1370 | 67 | *95 16 071* | | 1989-,81), CV | 1 | Relay | Relä | 5 |
| 1371 | | | | NLS - USE 9563313 | | seat belt warning | bältesvarning | |
| 1375 | 67 | 95 63 313 | | 82), CV | 1 | Buzzer | Summer | 5 |
| 1376 | | | | | | seat belt warning | bältesvarning | |
| 1380 | 68 | 95 56 390 | | 1989-, CV | 1 | Relay | Relä | 9 |
| 1381 | | | | | | theft alarm | stöldlarm | |
| 1390 | 69 | 79 22 891 | | 1989-, CV | 2 | Screw | Skruv | 5 |
| 1400 | 70 | *79 68 506* | | 1989-, CV NLS | 2 | Star washer | Taggbricka | 5 |

39. For cars with automatic belts. För bilar med passivt bälte.
43. EU with US spec. EU med US spec.
51. Ch -H2013308, -H3013282, -H7025450.
52. Ch H2013309-, H3013283-, H7025451-.
64. With catalytic converter. Med katalytisk reaktor.
81. Ch -K3000964, -K7001407.
82. Ch K3000965-, K7001408-.
172. Timer relay. Tidrelä.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-F20

## *Electrical distribut.unit*
## *Relays and fuses*

## *Elcentral*
## *Reläer och säkringar*

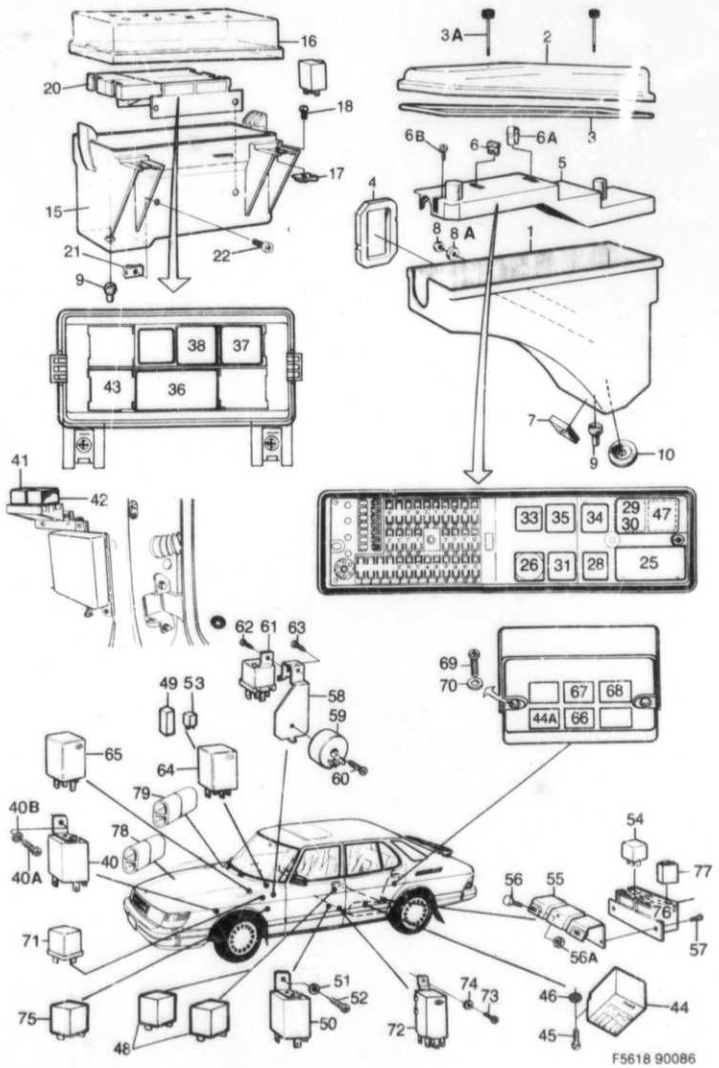


F5618 90086

| 1200 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 1410 | 71 | 85 22 310 | | 77,167), LH2.2 | 1 | Relay | Relä | 3 |
| 1420 | | | | See page 2-201, 1-J10 | | | | |
| 1440 | 72 | *85 87 669* | | 81), US, CA, JP | 1 | Buzzer | Summer | 5 |
| 1441 | | | | NLS - USE 9567017 | | seat belt warning | bältesvarning | |
| 1460 | 72 | 95 67 017 | | 82), US, CA, JP | 1 | Buzzer | Summer | 5 |
| 1461 | | | | | | seat belt warning | bältesvarning | |
| 1480 | 73 | 79 22 420 | | US, CA, JP | 1 | Screw | Skruv | 5 |
| 1490 | 74 | 79 15 556 | | US, CA, JP | 1 | Star washer | Taggbricka | 5 |
| 1500 | 75 | 85 73 560 | | ME, FE | 1 | Buzzer | Summer | 5 |
| 1501 | | | | | | coolant pump | kylvätskepump | |
| 1510 | 76 | 91 24 199 | | 1987-,39) | 2 | Contact housing | Kontakthus | 4 |
| 1520 | 77 | 95 19 380 | | 1987-,39) | 1 | Fuse holder | Säkringshållare | 4 |
| 1530 | 78 | 85 64 007 | | 1987-, CV | 1 | Fuse holder | Säkringshållare | 4 |
| 1540 | | | | | | roof control | takmanövrering | |
| 1550 | 79 | 85 64 007 | | -1988 | 1 | Fuse holder | Säkringshållare | 4 |
| 1560 | | | | | | lambda sonde | lambdasond | |

39. For cars with automatic belts. För bilar med passivt bälte.
77. Without catalytic converter. Utan katalytisk reaktor.
81. Ch --K3000964, --K7001407.
82. Ch K3000965--, K7001408--.
167. Part of choke kit 89 82 423. Del av choke sats 89 82 423.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-F22

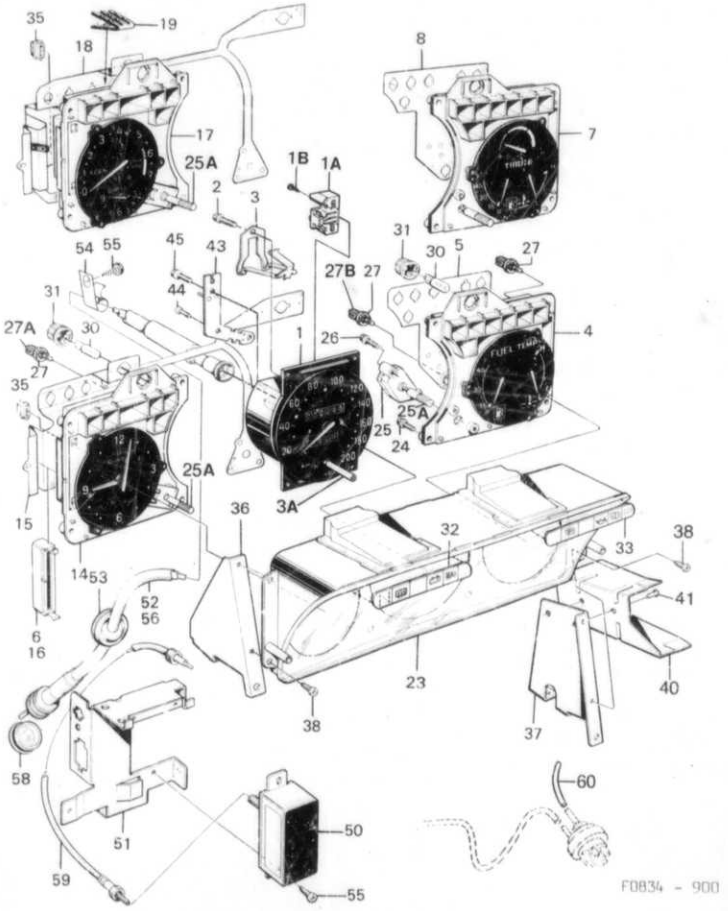


| 1250 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 85 64 940 | | 700), -1988, 200 KM/H, W=0,64 | 1 | Speedometer | Hastighetsmätare | 4 |
| 0015 | 1 | 95 55 541 | | 58,700), -1988, SE, 200 KM/H, W=0,64 | 1 | Speedometer | Hastighetsmätare | 4 |
| 0020 | 1 | *95 67 181* | | 1989-,133,700), 200 KM/H W=0,64 NLS - USE 4108841 | 1 | Speedometer | Hastighetsmätare | 4 |
| 0040 | 1 | 41 08 841 | | 134,700), 200 KM/H, W=0,64 | 1 | Speedometer | Hastighetsmätare | 4 |
| 0050 | 1 | 95 55 541 | | -1988, JP, 200 KM/H, W=0,64, (8564940) | 1 | Speedometer | Hastighetsmätare | 4 |
| 0060 | 1 | *95 66 050* | | 1989-,123,500,700), I, 200 KM/H, W=0,65 NLS - USE 4108858 | 1 | Speedometer | Hastighetsmätare | 4 |
| 0080 | 1 | 41 08 858 | | 124,700), I, 200 KM/H, W=0,65 | 1 | Speedometer | Hastighetsmätare | 4 |
| 0090 | 1 | 85 90 713 | | 700), -1988, 240 KM/H, W=0,64 | 1 | Speedometer | Hastighetsmätare | 4 |
| 0100 | 1 | 85 90 739 | | -1988, CA, 250 KM/H, W=0,64 | 1 | Speedometer | Hastighetsmätare | 4 |
| 0110 | 1 | *95 66 068* | | 121,500,700), 1989-, I, CA, AU, TURBO, 240 KM/H, W=0,65 NLS - USE 4108866 | 1 | Speedometer | Hastighetsmätare | 4 |
| 0140 | 1 | 41 08 866 | | 122,700), I, CA, AU, TURBO, 240 KM/H, W=0,65 | 1 | Speedometer | Hastighetsmätare | 4 |
| 0160 | 1 | *85 89 343* | | -1987, US, 125 MPH, W=1,008 NLS - USE 9120551 | 1 | Speedometer | Hastighetsmätare | 4 |
| 0170 | 1 | 91 20 551 | | 1988, US, 125 MPH, W=1,008 | 1 | Speedometer | Hastighetsmätare | 4 |
| 0180 | 1 | *95 66 084* | | 1989-,129), US, 125 MPH, W=1,05 NLS - USE 4108882 | 1 | Speedometer | Hastighetsmätare | 4 |
| 0190 | 1 | 41 08 882 | | 130), US, 125 MPH,W=1,05 | 1 | Speedometer | Hastighetsmätare | 4 |
| 0200 | 1 | 85 64 304 | | 130 MPH | 1 | Speedometer | Hastighetsmätare | 4 |
| 0210 | 1 | 85 90 754 | | -1988, GB, 145 MPH, W=1,02 | 1 | Speedometer | Hastighetsmätare | 4 |
| 0220 | 1 | *95 66 076* | | 1989-,131), GB, 140 MPH, W=1,04 NLS - USE 4108874 | 1 | Speedometer | Hastighetsmätare | 4 |
| 0240 | 1 | 41 08 874 | | 132), GB, 140 MPH,W=1,04 | 1 | Speedometer | Hastighetsmätare | 4 |
| 0250 | 1A | 41 08 270 | | 500), 1989- | 1 | . Sensor | . Givare | 5 |
| 0260 | 1B | 95 67 082 | | | 2 | . Screw | . Skruv | 5 |
| 0270 | 2 | 79 72 680 | | -1988 | 1 | . Screw | . Skruv | 5 |
| 0280 | 3 | 85 50 766 | | -1988 | 1 | . Spring | . Fjäder | 5 |
| 0290 | 3A | 85 50 774 | | | 1 | . Button | . Knapp | 3 |
| 0300 | 4 | 85 81 076 | | 700), -1987 | 1 | Combined instrument | Kombinationsinstrument | 4 |
| 0310 | 4 | 95 60 137 | | 700), 1988 | 1 | Combined instrument | Kombinationsinstrument | 4 |
| 0320 | 4 | 95 66 019 | | 500,700), 1989- | 1 | Combined instrument | Kombinationsinstrument | 4 |
| 0330 | 4 | 85 81 084 | | -1987, US, GB | 1 | Combined instrument | Kombinationsinstrument | 4 |
| 0340 | 4 | 95 60 517 | | 1988, US, GB | 1 | Combined instrument | Kombinationsinstrument | 4 |
| 0350 | 4 | 95 66 027 | | 1989-, US, GB | 1 | Combined instrument | Kombinationsinstrument | 4 |
| 0360 | 5 | 85 71 127 | | -1987 | 1 | . Electric foil | . Elfolie | 5 |

58. With speed control system. Med fartkontrollsystem.
121. Ch --K3021870, --K7029652.
122. Ch K3021871--, K7029653--.
123. Ch --K3021826, --K7030034.
124. Ch K3021827--, K7030035--.
129. Ch --K3021870, --K7030326.
130. Ch K3021871--, K7030327--.
131. Ch --K7030027.
132. Ch K7030028--.
133. Ch --K3023024, --K7029921.
134. Ch K3023025--, K7029922--.
500. Also valid for SE 1988B. Gäller även för SE 1988B.
700. Also available as exchange unit. Finns även som utbytesenhet.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-F24

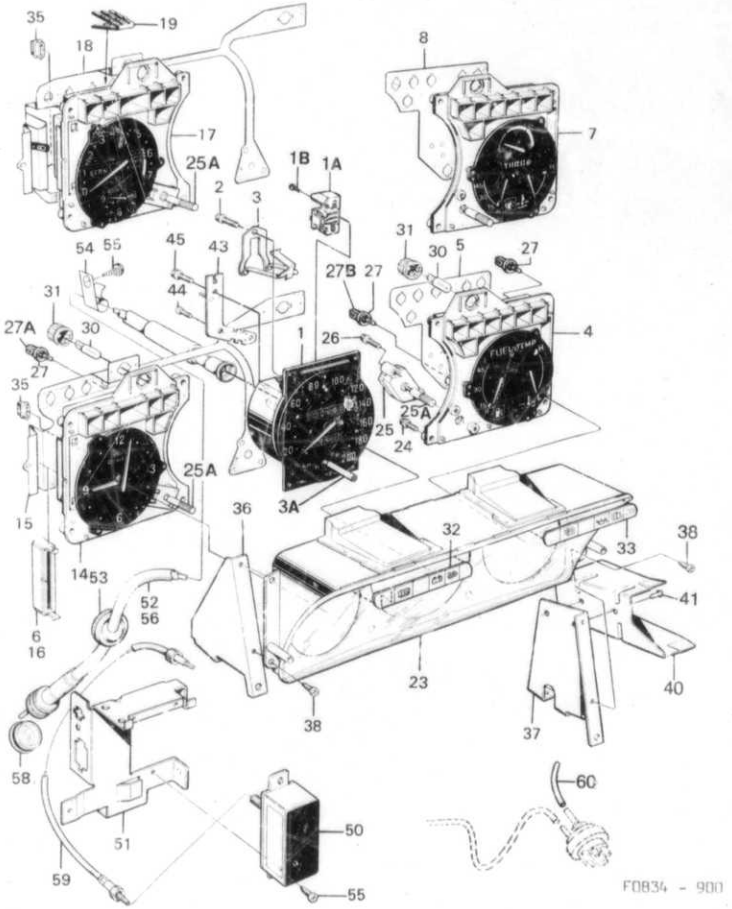


| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 5 | 95 60 665 | | 1988 | 1 | .Electric foil | .Elfolie | 5 |
| 5 | 41 08 593 | | 500), 1989- | 1 | .Electric foil | .Elfolie | 5 |
| 6 | 85 52 382 | | | 1 | .Casing | .Hus | 4 |
| 7 | 85 85 135 | | 700), -1987, TURBO | 1 | Combined instrument | Kombinationsinstrument | 4 |
| 7 | 95 60 293 | | 700), 1988, TURBO | 1 | Combined instrument | Kombinationsinstrument | 4 |
| 7 | 95 66 035 | | 500,700), 1989-, TURBO | 1 | Combined instrument | Kombinationsinstrument | 4 |
| 7 | 85 85 150 | | -1987, TURBO, US, GB | 1 | Combined instrument | Kombinationsinstrument | 4 |
| 7 | 95 60 525 | | 1988, TURBO, US, GB | 1 | Combined instrument | Kombinationsinstrument | 4 |
| 7 | 95 66 043 | | 500),1989-,TURBO, US, GB | 1 | Combined instrument | Kombinationsinstrument | 4 |
| 8 | 85 71 127 | | -1987 | 1 | .Electric foil | .Elfolie | 5 |
| 8 | 95 60 665 | | 1988 | 1 | .Electric foil | .Elfolie | 5 |
| 8 | 41 08 593 | | 500), 1989- | 1 | .Electric foil | .Elfolie | 5 |
| 14 | 85 50 022 | | 700), -1987 | 1 | Clock | Klocka | 6 |
| 14 | 95 60 731 | | 700), 1988- | 1 | Clock | Klocka | 6 |
| 15 | 95 53 470 | | -1987 | 1 | .Electric foil | .Elfolie | 5 |
| 15 | 95 60 772 | | 1988- | 1 | .Electric foil | .Elfolie | 5 |
| 16 | 85 52 382 | | | 1 | .Casing | .Hus | 4 |
| 17 | 85 82 686 | | 700), -1987 | 1 | Tachometer | Varvräknare | 4 |
| 17 | 95 60 749 | | 700), 1988 | 1 | Tachometer | Varvräknare | 4 |
| 17 | 95 66 092 | | 500,700), 1989- | 1 | Tachometer | Varvräknare | 4 |
| 18 | 95 53 488 | | -1987 | 1 | .Electric foil | .Elfolie | 5 |
| 18 | 95 60 780 | | 1988 | 1 | .Electric foil | .Elfolie | 5 |
| 18 | 95 65 698 | | 500), 1989- | 1 | .Electric foil | .Elfolie | 5 |
| 19 | 85 58 298 | | | 1 | .Clamp | .Klammer | 5 |
| 23 | 85 39 298 | | | 1 | Casing | Hus | 6 |
| 24 | 79 72 680 | | -1988 | 8 | Screw | Skruv | 5 |
| 25 | 85 81 472 | | | 1 | Rheostat | Reostat | |
| 25A | 85 52 275 | | | 2 | Button | Knapp | 3 |
| 26 | 79 07 918 | | | 2 | Screw | Skruv | 5 |
| 27 | 85 66 853 | | -1987 | 10 | Bulb | Glödlampa | 4 |
| 27 | 85 66 853 | | 1988 | 13 | Bulb | Glödlampa | 4 |
| 27 | 85 66 853 | | 500), 1989- | 14 | Bulb | Glödlampa | 4 |
| 27A | 85 68 693 | | 40/238 286 017 | 1 | Bulb | Glödlampa | 4 |
| | | | | | charge regulator | laddningsregulator | |
| 27B | *85 55 831* | | -1988, 40/238 286 009 | 1 | Bulb | Glödlampa | 4 |
| | | | NLS - USE 8500613 | | | | |
| 30 | *88 53 772* | | NLS - USE 9505116 | 2 | Bulb | Glödlampa | 4 |
| 31 | 85 52 291 | | -1987 | 2 | Bulb socket | Lamphållare | 4 |
| 31 | 95 29 231 | | 1988- | 2 | Bulb socket | Lamphållare | 4 |
| 32 | *85 67 992* | | -1987, LH, C NLS | 1 | Disc | Skiva | 6 |
| 32 | 95 60 152 | | 1988, LH, C, I | 1 | Symbol plate | Symboltavla | 6 |
| 32 | 95 60 152 | | 500), 1989-, LH, C | 1 | Symbol plate | Symboltavla | 6 |
| 32 | 95 50 922 | | -1987, LH, I, TURBO | 1 | Disc | Skiva | 6 |
| 32 | 95 60 509 | | 1988, LH, B202, I, SE, FI, EU, ME, FE | 1 | Symbol plate | Symboltavla | 6 |
| 32 | 95 60 509 | | 1988, LH, I, US, CA, AU, JP, TURBO | 1 | Symbol plate | Symboltavla | 6 |
| 32 | 95 60 509 | | 500),1989-, LH, I, TURBO | 1 | Symbol plate | Symboltavla | 6 |
| 33 | 95 50 914 | | -1987 | 1 | Disc | Skiva | 6 |
| 33 | 95 60 145 | | 1988, RH | 1 | Disc | Skiva | 6 |
| 33 | 95 65 896 | | 500), 1989-, RH | 1 | Symbol plate | Symboltavla | 6 |
| 33 | *85 64 981* | | -1987, RH, US, CA NLS | 1 | Disc | Skiva | 6 |
| 33 | 95 60 491 | | 1988, RH, US, CA, AU | 1 | Disc | Skiva | 6 |
| 33 | 95 65 904 | | 1989-, RH, US, CA, AU | 1 | Symbol plate | Symboltavla | 6 |
| 33 | 95 57 190 | | -1987,39), US, RH | 1 | Disc | Skiva | 6 |
| 35 | 85 52 283 | | | 1 | Clamp | Klammer | 5 |
| 36 | 85 50 519 | | LH | 1 | Bracket | Fäste | 5 |
| 36 | 85 79 625 | | LH, RHD | 1 | Bracket | Fäste | 5 |
| 37 | 85 79 617 | | RH | 1 | Bracket | Fäste | 5 |
| 37 | 85 51 129 | | RH, RHD | 1 | Bracket | Fäste | 5 |

39. For cars with automatic belts. För bilar med passivt bälte.
500. Also valid for SE 1988B. Gäller även för SE 1988B.
700. Also available as exchange unit. Finns även som utbytesenhet.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-G02

## *Instrument*

*Instrument*

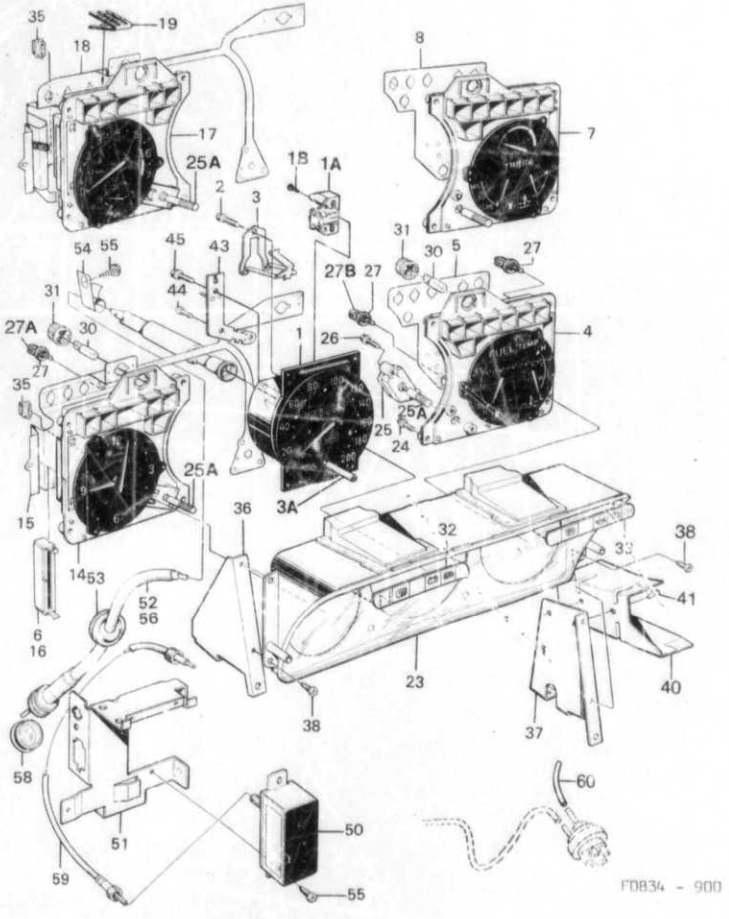


| 1250 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0960 38 | 79 22 347 | | | 4 | Screw | Skruv | 5 |
| 0970 40 | *85 79 609* | | -1988, LH, RHD NLS - USE 9125238 | 1 | Guide moulding | Styrlist | 5 |
| 0970 | | | | | | | |
| 0980 40 | 91 25 238 | | 500), 1989-, LH, RHD | 1 | Guide moulding | Styrlist | 5 |
| 0990 40 | *85 79 591* | | -1988, RH NLS - USE 9125220 | 1 | Guide moulding | Styrlist | 5 |
| 0990 | | | | | | | |
| 1000 40 | 91 25 220 | | 500), 1989-, RH | 1 | Guide moulding | Styrlist | 5 |
| 1010 41 | 82 39 733 | | | 2 | Rivet | Nit | 3 |
| 1020 43 | 85 52 002 | | 58), -1988 | 1 | Sensor | Givare | 5 |
| 1030 44 | 85 55 807 | | -1988 | 2 | Screw | Skruv | 5 |
| 1040 45 | 79 72 680 | | -1988 | 1 | Screw | Skruv | 5 |
| 1050 50 | *85 63 215* | | US NLS | 1 | Mileometer | Räkneenhet | 6 |
| 1060 51 | *85 85 176* | | NLS | 1 | Bracket | Konsol | 6 |
| 1070 52 | 85 61 979 | | -1988 | 1 | Speed wire | Mätarkabel | 2 |
| 1080 52 | 95 67 454 | | 500), 1989- | 1 | Speed wire | Mätarkabel | 2 |
| 1090 53 | 85 59 478 | | -1988 | 1 | Grommet | Genomföring | 6 |
| 1100 54 | *95 51 896* | | -1988 NLS - USE 9122561 | 1 | Clip | Clips | 6 |
| 1110 54 | 91 22 581 | | 500), 1989- | 1 | Clip | Clips | 6 |
| 1120 55 | 79 22 347 | | 178) | 2 | Screw | Skruv | 5 |
| 1130 55 | 79 22 800 | | 179) | 2 | Screw | Skruv | 5 |
| 1140 56 | 85 50 352 | | -1988, RHD | 1 | Speed wire | Mätarkabel | 2 |
| 1150 56 | 95 67 462 | | 500), 1989-, RHD | 1 | Speed wire | Mätarkabel | 2 |
| 1160 58 | 82 41 325 | | | 1 | Plug | Plugg | 5 |
| 1170 59 | 85 51 095 | | US | 1 | Cable | Wire | 4 |
| 1180 60 | 85 33 374 | | TURBO | 1 | Hose | Slang | 5 |
| 1190 60 | 85 33 440 | | TURBO, RHD | 1 | Hose | Slang | 3 |

58. With speed control system. Med fartkontrollsystem.
178. Ch --K3001698, --K7002184.
179. Ch K3001699-, K7002185-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3A GROUP INDEX



| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |


Complete sets
# 2-G04
## Electrical system


Satser
## Elektriskt system

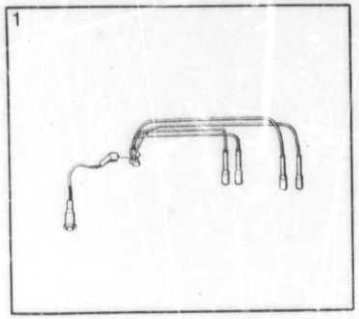


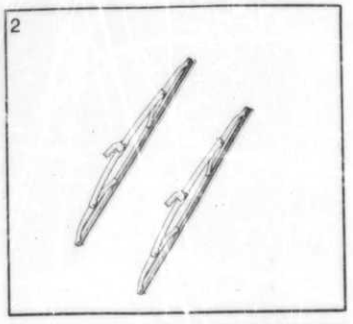
R 8983-900
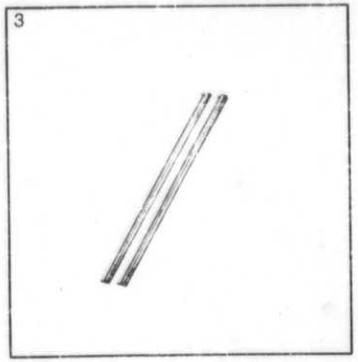
| 1500 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 93 37 346 | | B201 | X | Kit ignition cables | Tändkabelsats | |
| 0020 | | 75 11 157 | | | 1 | .Ignition lead ignition coil | .Tändkabel tändspole | 3 |
| 0030 | | | | | | | | |
| 0040 | | *93 55 926* | | NLS - USE 7561061 | 1 | .Ignition lead cylinder 1 | .Tändkabel cylinder 1 | 3 |
| 0041 | | | | | | | | |
| 0050 | | *93 55 934* | | NLS - USE 7561079 | 1 | .Ignition lead cylinder 2 | .Tändkabel cylinder 2 | 3 |
| 0051 | | | | | | | | |
| 0060 | | *93 55 942* | | NLS - USE 7561087 | 1 | .Ignition lead cylinder 3 | .Tändkabel cylinder 3 | 3 |
| 0061 | | | | | | | | |
| 0070 | | *93 55 959* | | NLS - USE 7561095 | 1 | .Ignition lead cylinder 4 | .Tändkabel cylinder 4 | 3 |
| 0071 | | | | | | | | |
| 0080 | | | | | | | | |
| 0090 | 1 | 88 17 520 | | 1988-, B202 I | X | Kit ignition cables | Tändkabelsats | 3 |
| 0100 | | 93 90 840 | | | 1 | .Ignition lead ignition coil | .Tändkabel tändspole | 3 |
| 0105 | | | | | | | | |
| 0110 | | 75 04 483 | | | 1 | .Ignition lead cylinder 1 | .Tändkabel cylinder 1 | 3 |
| 0111 | | | | | | | | |
| 0120 | | 75 04 491 | | | 1 | .Ignition lead cylinder 2 | .Tändkabel cylinder 2 | 3 |
| 0121 | | | | | | | | |
| 0130 | | 75 04 509 | | | 1 | .Ignition lead cylinder 3 | .Tändkabel cylinder 3 | 3 |
| 0131 | | | | | | | | |
| 0140 | | 75 04 517 | | | 1 | .Ignition lead cylinder 4 | .Tändkabel cylinder 4 | 3 |
| 0141 | | | | | | | | |
| 0150 | | | | | | | | |
| 0160 | 1 | 88 17 314 | | B202 | X | Kit ignition cables | Tändkabelsats | 3 |
| 0170 | | 75 10 548 | | | 1 | .Ignition lead ignition coil | .Tändkabel tändspole | 3 |
| 0175 | | | | | | | | |
| 0180 | | 75 04 483 | | | 1 | .Ignition lead cylinder 1 | .Tändkabel cylinder 1 | 3 |
| 0181 | | | | | | | | |
| 0190 | | 75 04 491 | | | 1 | .Ignition lead cylinder 2 | .Tändkabel cylinder 2 | 3 |
| 0191 | | | | | | | | |
| 0200 | | 75 04 509 | | | 1 | .Ignition lead cylinder 3 | .Tändkabel cylinder 3 | 3 |
| 0201 | | | | | | | | |
| 0210 | | 75 04 517 | | | 1 | .Ignition lead cylinder 4 | .Tändkabel cylinder 4 | 3 |
| 0211 | | | | | | | | |
| 0220 | | | | | | | | |
| 0230 | 2 | *85 47 499* | | NLS - USE 8548216 | X | Wiper blade kit windscreen wiper | Torkarbladssats vindrutetorkare | 1 |
| 0240 | | | | | | | | |
| 0250 | | 85 57 480 | | | 2 | .Wiper blade | .Torkarblad | 1 |
| 0260 | | | | | | | | |
| 0270 | 2 | 85 47 747 | | 86) | X | Wiper blade kit windscreen wiper | Torkarbladssats vindrutetorkare | 6 |
| 0280 | | | | | | | | |
| 0290 | | 40 60 745 | | | 2 | .Wiper blade | .Torkarblad | 1 |
| 0300 | | | | | | | | |
| 0310 | 3 | 85 46 319 | | | X | Profiled rubber kit windscreen wiper | Gummiprofilsats vindrutetorkare | 2 |
| 0320 | | | | | | | | |
| 0330 | | *85 53 844* | | 1) NLS - USE 4250163 | 2 | .Profile | .Profil | 2 |
| 0340 | | | | | | | | |
| 0350 | 3 | 85 47 754 | | 86) | X | Profiled rubber kit windscreen wiper | Gummiprofilsats vindrutetorkare | 2 |
| 0360 | | | | | | | | |
| 0370 | | 40 60 752 | | 1) | 2 | .Profile | .Profil | 2 |
| 0380 | | | | | | | | |
| 0390 | 3 | 85 47 655 | | CV | X | Profiled rubber kit windscreen wiper | Gummiprofilsats vindrutetorkare | 2 |
| 0400 | | | | | | | | |
| 0410 | | 95 55 962 | | 1) | 2 | .Profile | .Profil | 2 |
| 0420 | | | | | | | | |
| 0430 | 4 | 85 46 327 | | | X | Wiper blade kit headlamp wiper | Torkarbladssats strålkastartorkare | 2 |
| 0440 | | | | | | | | |
| 0450 | | 85 52 119 | | | 2 | .Wiper blade | .Torkarblad | 2 |
| 0460 | | | | | | | | |

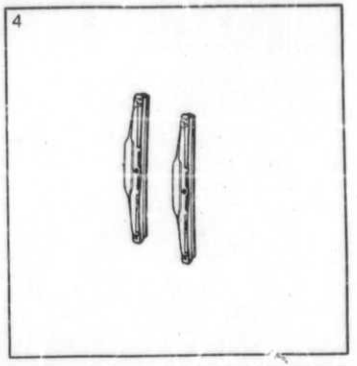1. Not as separate spare part. Ej som separat reservdel.
86. Synthetic rubber. Syntetiskt gummi.

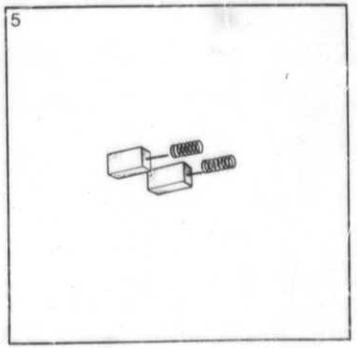

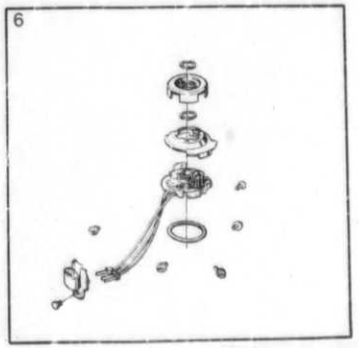
MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3A GROUP INDEX



| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |


# 2-G06

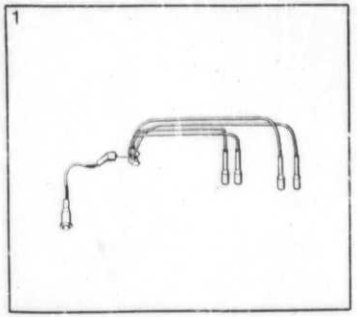


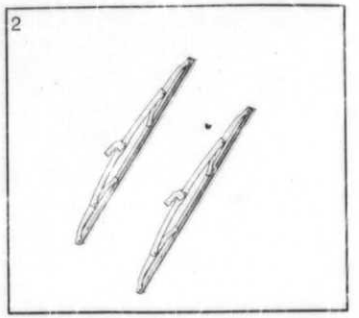
R 8983-900
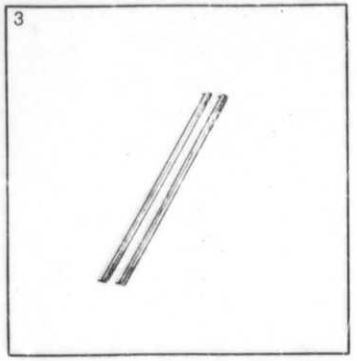
| 1500 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0470 | 4 | 85 47 408 | | 36) | X | Wiper blade kit headlamp wiper | Torkarbladssats strålkastartorkare | 2 |
| 0480 | | | | | | | | |
| 0490 | | *95 56 309* | | -1987 NLS - USE 9120882 | 2 | . Wiper blade | . Torkarblad | 2 |
| 0500 | | 91 20 882 | | 1988- | 2 | . Wiper blade | . Torkarblad | 2 |
| 0510 | | | | | | | | |
| 0520 | 5 | *85 72 638* | | 48) | X | . Brush set alternator | . Borstsats generator | 3 |
| 0530 | | | | NLS - USE 9515180 | | | | |
| 0540 | | | | | | | | |
| 0550 | 5 | 95 15 180 | | 49) | X | Brush set alternator | Borstsats generator | 3 |
| 0560 | | | | | | | | |
| 0570 | | | | | | | | |
| 0580 | 6 | 93 59 605 | | 173) | X | Repair kit ignition distributor | Reparationssats tändfördelare | 5 |
| 0590 | | | | | | | | |
| 0600 | | | | | | | | |
| 0610 | 6 | 74 86 822 | | 174), 1988-, SE, EU | X | Repair kit ignition distributor | Reparationssats tändfördelare | 5 |
| 0620 | | | | | | | | |
| 0630 | | | | | | | | |
| 0640 | 6 | 75 88 312 | | 175), B202 TURBO | X | Repair kit ignition distributor | Reparationssats tändfördelare | 5 |
| 0650 | | | | | | | | |

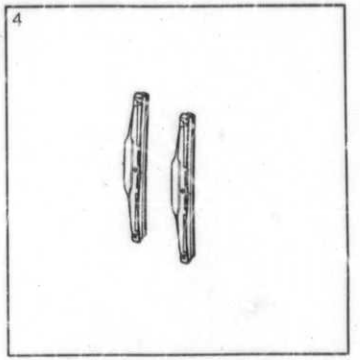36. For cars with integrated bumpers. För bilar med integrerade stötfångare.
48. Ch --H2008686, --H3006971, --H7013654.
49. Ch H2008687--, H3006972--, H7013655--.
173. For ignition distributor 75 01 570. För fördelare 75 01 570.
174. For ignition distributor 74 80 593. För fördelare 74 80 593.
175. For ignition distributor 75 61 806. För fördelare 75 61 806.

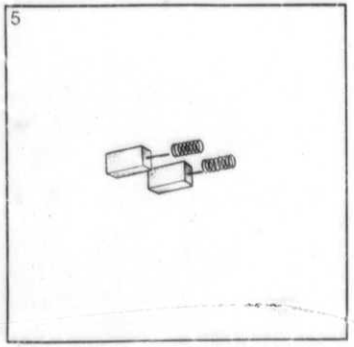

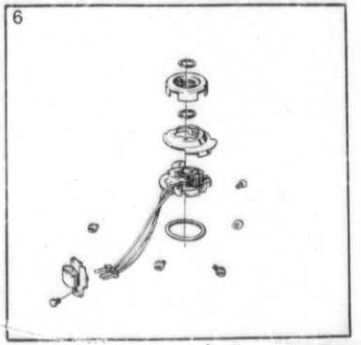MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 2-G08


## Electrical system — Elektriskt system

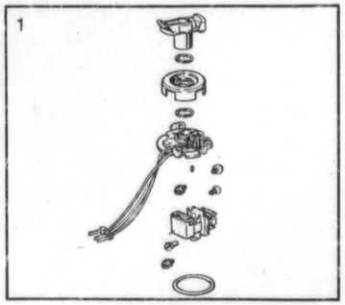


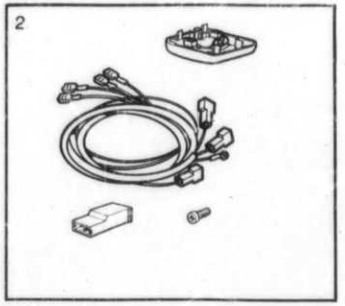






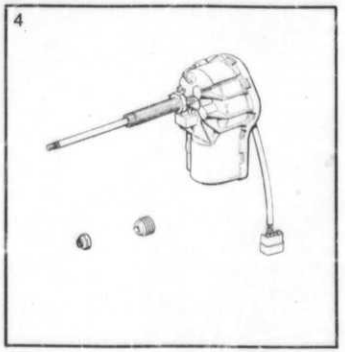

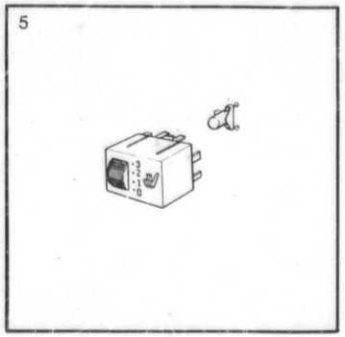

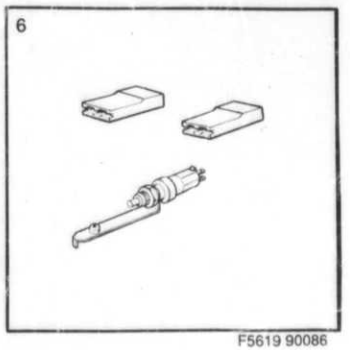F5619 90086

| 1510 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 74 84 892 | | 176), 1988- I, SE, EU, US, ME | X | Repair kit ignition distributor | Reparationssats tändfördelare | 5 |
| 0020 | | | | | | | | |
| 0030 | | | | | | | | |
| 0040 | 2 | 85 47 606 | | 57), 1986 | X | Interior lamp kit | Innerbelysningssats | 4 |
| 0050 | | 79 22 636 | | | 1 | .Screw | .Skruv | 5 |
| 0060 | | 85 41 229 | | | 1 | .Sleeve | .Isoleringshylsa | 5 |
| 0070 | | 85 47 580 | | | 1 | .Interior lighting | .Innerbelysning | 4 |
| 0080 | | 95 67 215 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 0090 | | | | | | | | |
| 0100 | 3 | 88 19 278 | | B201 I, C, NGK BP6ES | X | Spark plug kit | Tändstiftsats | 1 |
| 0110 | | 83 50 076 | | | 4 | Spark plug | Tändstift | 1 |
| 0120 | | | | | | | | |
| 0130 | 4 | 85 48 133 | | LH | X | Wiper motor kit | Torkarmotorsats | 3 |
| 0140 | | 85 96 207 | | | 1 | .Wiper motor | .Torkarmotor | 3 |
| 0150 | | 85 72 604 | | | 1 | .Seal | .Tätning | 4 |
| 0160 | | 85 78 510 | | | 1 | .Seal | .Tätning | 4 |
| 0170 | | | | | | | | |
| 0180 | 4 | 85 48 141 | | RH | X | Wiper motor kit | Torkarmotorsats | 3 |
| 0190 | | 85 96 215 | | | 1 | .Wiper motor | .Torkarmotor | 3 |
| 0200 | | 85 72 604 | | | 1 | .Seal | .Tätning | 4 |
| 0210 | | 85 78 510 | | | 1 | .Seal | .Tätning | 4 |
| 0220 | | | | | | | | |
| 0230 | 5 | 40 84 554 | | 163), 1987- | X | Switch button kit | Strömställarknapp sats | 5 |
| 0240 | | | | | | | | |
| 0250 | | | | | | | | |
| 0260 | 6 | 85 48 802 | | | X | Brake light switch | Bromsljuskontakt | 3 |
| 0270 | | 85 16 916 | | | 2 | .Insulation | .Isolering | 4 |
| 0280 | | 85 66 259 | | | 1 | .Nut | .Mutter | 5 |
| 0290 | | 85 77 702 | | | 1 | .Brake light switch | .Bromsljuskontakt | 3 |
| 0300 | | 86 78 070 | | | 1 | .Assembly instruction | .Monteringsanvisning | 9 |

57. For cars with centre mounted dome light. För bilar med mittmonterad taklampa.
163. Rheostat. Reostat.
176. For ignition distributor 74 81 385. För fördelare 74 81 385.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3A GROUP INDEX


| | |
|---|---|
| Battery | 2-A06 |
| Alternator | 2-A08 |
| Starter | 2-A12 |
| Ignition system | 2-A14 |
| Lighting | 2-B04 |
| Electrical equipment, other | 2-C04 |
| Wiring and fuses | 2-D14 |
| Complete sets | 2-G04 |

# 3B

## Electrical, contact housing
## Elektriskt, kontakthus
## Electrico, caja contacto

TABLE OF CONTENTS

**Connectors**

| | | |
|---|---|---|
| Connectors etc, 1986 | 3B : 5 | 3-A06 |
| Connectors etc, 1987 | 3B : 31 | 3-B08 |
| Connectors etc, 1988 | 3B : 53 | 3-C06 |
| Connectors etc, 1989 | 3B : 77 | 3-D06 |

**Cable terminals**

| | | |
|---|---|---|
| Cable terminals, 1986 | 3B : 105 | 3-E10 |
| Cable terminals, 1987 | 3B : 115 | 3-E20 |
| Cable terminals, 1988 | 3B : 127 | 3-F08 |
| Cable terminals, 1989 | 3B : 139 | 3-F20 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-A03

INNEHÅLLSFÖRTECKNING


**Kontakthus**

| | | |
|---|---|---|
| Kontakthus etc, 1986 | 3B : 5 | 3-A06 |
| Kontakthus etc, 1987 | 3B : 31 | 3-B08 |
| Kontakthus etc, 1988 | 3B : 53 | 3-C06 |
| Kontakthus etc, 1989 | 3B : 77 | 3-D06 |

**Ledningsskor**

| | | |
|---|---|---|
| Ledningsskor, 1986 | 3B : 105 | 3-E10 |
| Ledningsskor, 1987 | 3B : 115 | 3-E20 |
| Ledningsskor, 1988 | 3B : 127 | 3-F08 |
| Ledningsskor, 1989 | 3B : 139 | 3-F20 |






# 3-A04

SUMARIO


**Contactores**

| | | |
|---|---|---|
| Contactores etc, 1986 | 3B : 5 | 3-A06 |
| Contactores etc, 1987 | 3B : 31 | 3-B08 |
| Contactores etc, 1988 | 3B : 53 | 3-C06 |
| Contactores etc, 1988 | 3B : 77 | 3-D06 |

**Terminales de cable**

| | | |
|---|---|---|
| Terminales de cable, 1986 | 3B : 105 | 3-E10 |
| Terminales de cable, 1987 | 3B : 115 | 3-E20 |
| Terminales de cable, 1988 | 3B : 127 | 3-F08 |
| Terminales de cable, 1989 | 3B : 139 | 3-F20 |




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-A06

## Contact housing etc
1986

## Kontakthus etc
1986

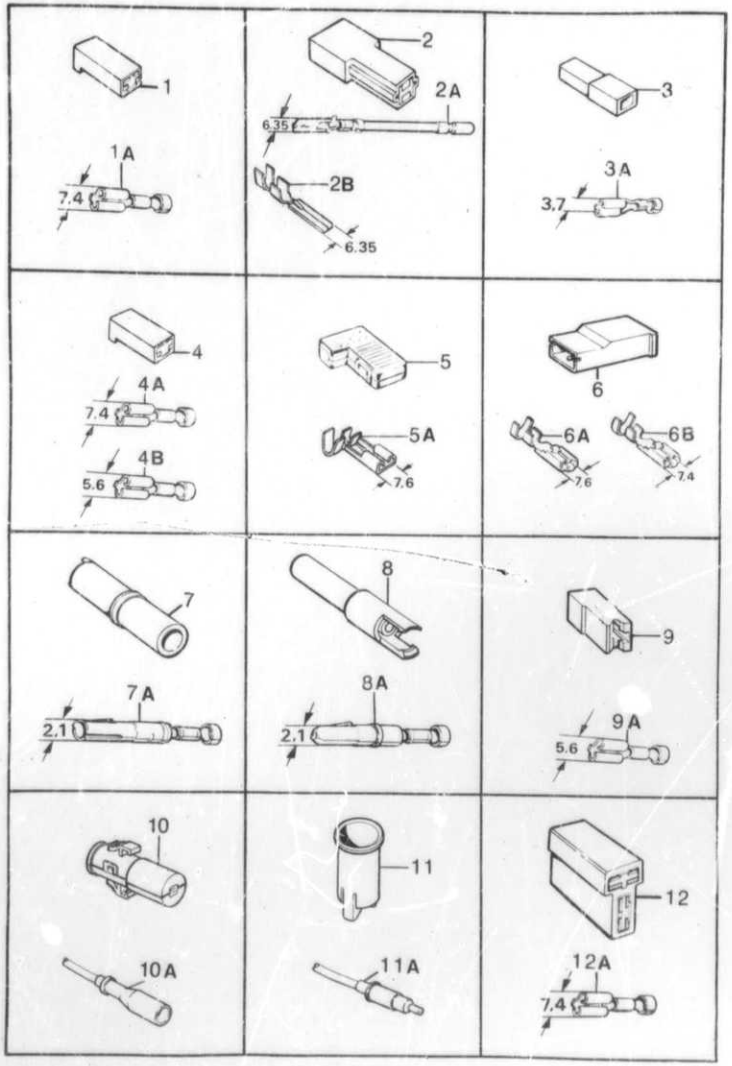


F1966 - 900

| 0100 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 71 55 112 | | JOINT PIECE, POSITION LIGHT, RELAY FUEL PUMP | X | Contact housing<br>1-pole, female | Kontakthus<br>1-polig, hylsa | 4 |
| 0030 | 1A | 79 71 708 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0040 | 1A | *85 83 379* | | AREA, 0,5-1,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 3 |
| 0050 | 1A | *85 82 454* | | AREA, 0,5-1,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 0060 | 1A | *71 55 153* | | AREA, 0,8-2,1 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 0070 | 1A | *85 82 397* | | AREA, 1,0-2,5 MM2 NLS | X | Cable terminal | Kabelsko | 5 |
| 0090 | 2 | 71 55 120 | | JOINT PIECE, EL-PAD, APC PUMP RELAY, FUSE BOX, BELT WARNING, WINDOW REGULATOR | X | Contact housing<br>1-pole, male | Kontakthus<br>1-polig, stift | 4 |
| 0130 | 2A | 85 22 542 | | AREA, 1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0140 | 2B | 85 82 637 | | AREA, 0,8-2,1 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0160 | 3 | 85 30 115 | | LOUDSPEAKER | X | Contact housing<br>1-pole, male | Kontakthus<br>1-polig, stift | 4 |
| 0180 | 3A | 85 30 107 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 3 |
| 0200 | 4 | 85 33 184 | | LOUDSPEAKER, STARTER, DIOD | X | Contact housing<br>1-pole, male | Kontakthus<br>1-polig, stift | 4 |
| 0220 | 4A | 85 30 107 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 3 |
| 0230 | 4B | *85 33 028* | | AREA, 0,5-1,5 MM2 NLS - USE 8582439 | X | Cable terminal | Kabelsko | 3 |
| 0240 | 4B | 85 82 439 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0260 | 5 | 85 21 692 | | WINDOW REGULATOR, THROTTLE SENSOR AC, HAND BRAKE, IGNITION COIL, THERMO SWITCH, JOINT PIECE, AC RECIRKULATION VALVE, SOLENOID VALVE IDLE COMPENSATION AC, IGNITION LOCK | X | Contact housing<br>1-pole, female | Kontakthus<br>1-polig, hylsa | 4 |
| 0340 | 5A | *85 21 676* | | AREA, 0,5-1,5 MM2 NLS - USE 8522526 | X | Cable terminal | Kabelsko | 5 |
| 0350 | 5A | *85 82 421* | | AREA, 0,5-1,5 MM2 NLS - USE 8522526 | X | Cable terminal | Kabelsko | 5 |
| 0360 | 5A | *85 21 684* | | AREA, 1,0-2,5 MM2 NLS - USE 8522526 | X | Cable terminal | Kabelsko | 5 |
| 0380 | 6 | 85 41 229 | | JOINT PIECE, LUGGAGE COMPARTMENT LIGHT, TAIL LIGHT, ALTERNATOR, GEAR BOX A, MAIN SWITCH FAN, THEFT ALARM | X | Sleeve<br>1-pole, male | Isoleringshylsa<br>1-polig, stift | 5 |
| 0430 | 6A | *85 41 203* | | AREA, 0,5-1,0 MM2 NLS - USE 8560476 | X | Cable terminal | Kabelsko | 5 |
| 0440 | 6B | *85 82 405* | | AREA, 0,5-1,5 MM2 NLS - USE 8560476 | X | Cable terminal | Kabelsko | 5 |
| 0450 | 6B | 85 41 211 | | AREA, 2,5-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0470 | 7 | 85 16 932 | | JOINT PIECE | X | Contact housing<br>1-pole, female | Kontakthus<br>1-polig, hylsa | 4 |
| 0490 | 7A | 85 22 583 | | AREA, 0,8-3,4 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0510 | 8 | 85 16 940 | | GEAR BOX A | X | Contact housing<br>1-pole, male | Kontakthus<br>1-polig, stift | 4 |
| 0530 | 8A | *85 03 161* | | AREA, 0,5-1,0 MM2 NLS - USE 8522591 | X | Cable terminal | Kabelsko | 5 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-A08

## Contact housing etc
1986

## Kontakthus etc
1986

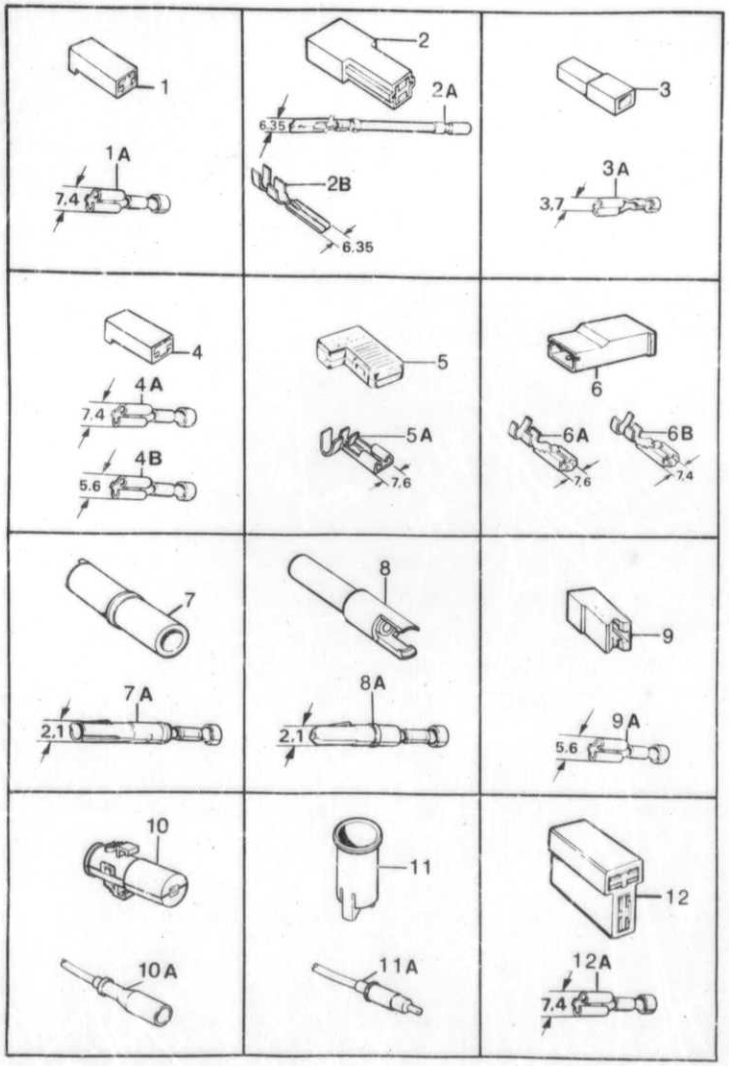


F1966 - 900

| 0100 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0550 | 9 | 85 21 544 | | JOINT PIECE | X | Contact housing<br>1-pole, female | Kontakthus<br>1-polig, hylsa | 4 |
| 0570 | 9A | *85 59 205* | | AREA, 4,0-6,0 MM2 NLS | X | Cable terminal | Kabelsko | 5 |
| 0590 | 10 | 95 03 418 | | JOINT PIECE, AC COMPRESSOR | X | Connector housing<br>1-pole, female | Skarvhus<br>1-polig, hylsa | 4 |
| 0610 | 10A | 78 74 498 | | | X | Connection | Skarv | 5 |
| 0630 | 11 | 95 03 426 | | JOINT PIECE | X | Connector housing<br>1-pole, male | Skarvhus<br>1-polig, stift | 4 |
| 0650 | 11A | 78 74 506 | | | X | Connection | Skarv | 5 |
| 0670 | 12 | 71 55 096 | | ASH TRAY, JOINT PIECE, SUN ROOF, SPOTLIGHT | X | Connector housing<br>2-pole, female | Skarvhus<br>2-polig, hylsa | 4 |
| 0690 | 12A | *71 55 153* | | AREA, 0,8-2,1 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 0700 | 12A | *85 82 454* | | AREA, 0,5-1,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 0710 | 12A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |

MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-A10

## Contact housing etc
1986

## Kontakthus etc
1986

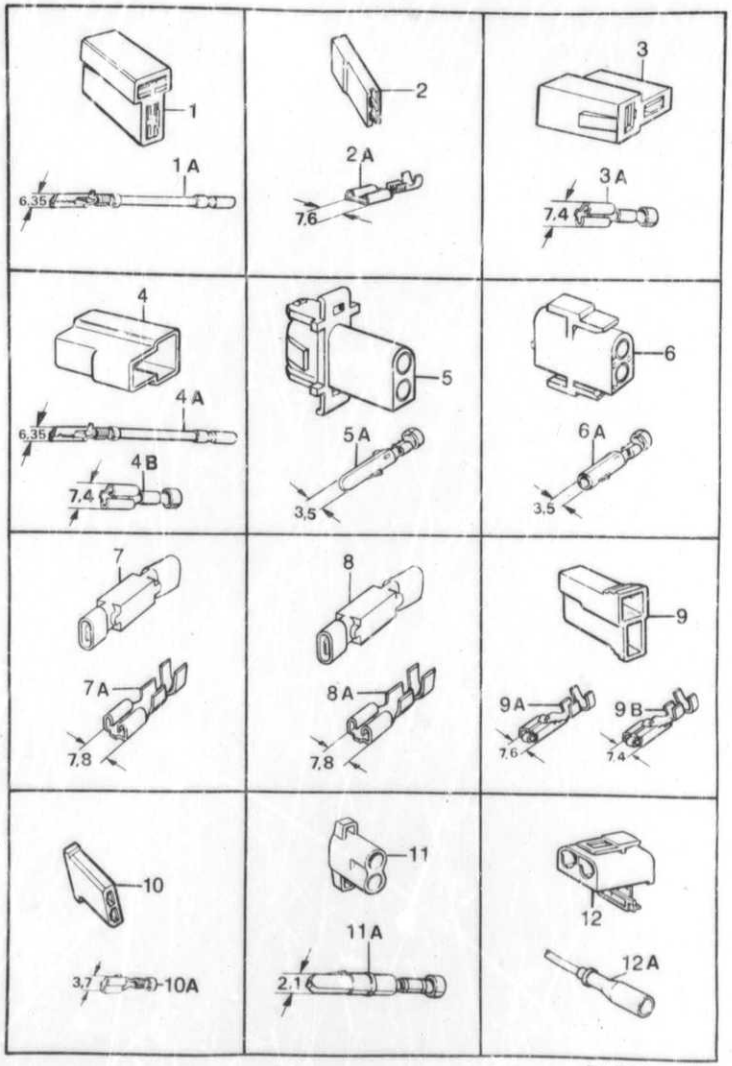


F1967 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | 71 55 104 | | JOINT PIECE | X | Contact housing<br>2-pole, male | Kontakthus<br>2-polig, stift | 4 |
| 1A | 85 22 542 | | AREA, 1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 2 | 85 16 916 | | JOINT PIECE, BRAKE LIGHT SWITCH, BACK-UP LIGHT, THERMO SWITCH, STARTER, VACUUM SWITCH, FUSE BOX, INTERIOR LIGHT, DIOD, EXTRA BRAKE LIGHT | X | Insulation<br>2-pole, female | Isolering<br>2-polig, hylsa | 4 |
| 2A | 85 14 036 | | AREA, 0,3-0,8 MM2 | X | Cable terminal | Kabelsko | 5 |
| 2A | *85 14 028* | | AREA, 0,3-0,8 MM2 NLS - USE 7155716 | X | Cable terminal | Kabelsko | 5 |
| 2A | 71 55 716 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 2A | *71 55 039* | | AREA, 1,0-2,5 MM2 NLS | X | Cable terminal | Kabelsko | 5 |
| 2A | *85 59 205* | | AREA, 4,0-6,0 MM2 NLS | X | Cable terminal | Kabelsko | 5 |
| 3 | 85 58 538 | | FUEL PUMP, JOINT PIECE, FEED PUMP | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 3A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 3A | 79 68 068 | | AREA, 4,0-6,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 4 | 85 58 546 | | JOINT PIECE, FUSE BOX | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 4A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 4B | 85 16 957 | | AREA, 4,0-6,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 5 | 85 61 623 | | JOINT PIECE, ELECTRIC PAD, NUMBER PLATE LIGHT, CENTRAL LOCK | X | Contact housing<br>2-pole, male | Kontakthus<br>2-polig, stift | 4 |
| 5A | *85 44 314* | | AREA, 0,5-2,0 MM2 NLS - USE 8582603 | X | Cable terminal | Kabelsko | 5 |
| 5A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 6 | 85 61 631 | | JOINT PIECE, ELECTRIC PAD, NUMBER PLATE LIGHT, BELT WARNING, | X | Connector housing<br>2-pole, male | Skarvhus<br>2-polig, stift | 4 |
| 6A | 85 44 298 | | AREA, 0,5-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 7 | 85 30 966 | | DIOD HOLDER | X | Diode<br>2-pole, male | Diod<br>2-polig, stift | 5 |
| 7A | 71 55 716 | | AREA, 0,4-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 8 | 85 74 881 | | DIOD HOLDER, DIOD AC-COMPRESSOR | X | Diode<br>2-pole, male | Diod<br>2-polig, stift | 5 |
| 8A | 71 55 716 | | AREA, 0,4-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 9 | 85 74 949 | | CIGARETTE LIGHTER | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 9A | *85 41 203* | | AREA, 0,5-1,5 MM2 NLS - USE 8560476 | X | Cable terminal | Kabelsko | 5 |
| 9B | 85 41 211 | | AREA, 2,5-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 10 | 83 78 630 | | PEDAL SWITCH, CLUTCH SWITCH SPEED CONTROL, BRAKE SWITCH SPEED CONTROL | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 10A | *85 09 846* | | AREA, 0,5-1,4 MM2 NLS - USE 8522575 | X | Cable terminal | Kabelsko | 5 |
| 11 | *85 04 789* | | JOINT PIECE NLS | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-A12

## *Contact housing etc*
*1986*

## *Kontakthus etc*
*1986*

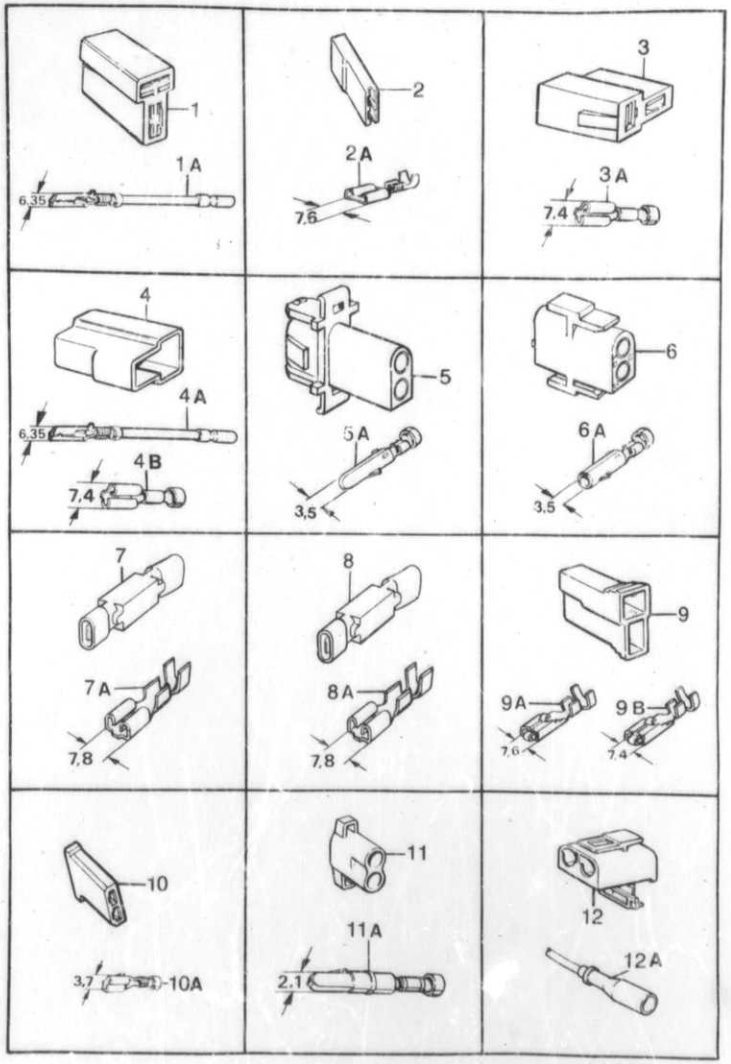


F1967 - 900


| | Pos | Part No/Ar. nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0150 | | | | | | | | |
| 0590 | 11A | 85 16 817 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0600 | | | | | | | | |
| 0610 | 12 | 95 03 319 | | JOINT PIECE, VACUUM | X | Contact housing | Kontakthus | 4 |
| 0620 | | | | SWITCH APC, AC FAN | | 2-pole, female | 2-polig, hylsa | |
| 0630 | | | | MOTOR, WASHER MOTOR, | | | | |
| 0640 | | | | SOLENOID VALVE AC, MOTOR | | | | |
| 0650 | | | | COOLING FAN, BRAKE FLUID | | | | |
| 0660 | | | | LEVEL, FUEL PUMP, WINDOW | | | | |
| 0670 | | | | REGULATOR FRONT | | | | |
| 0680 | 12A | 78 74 498 | | | X | Connection | Skarv | 5 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

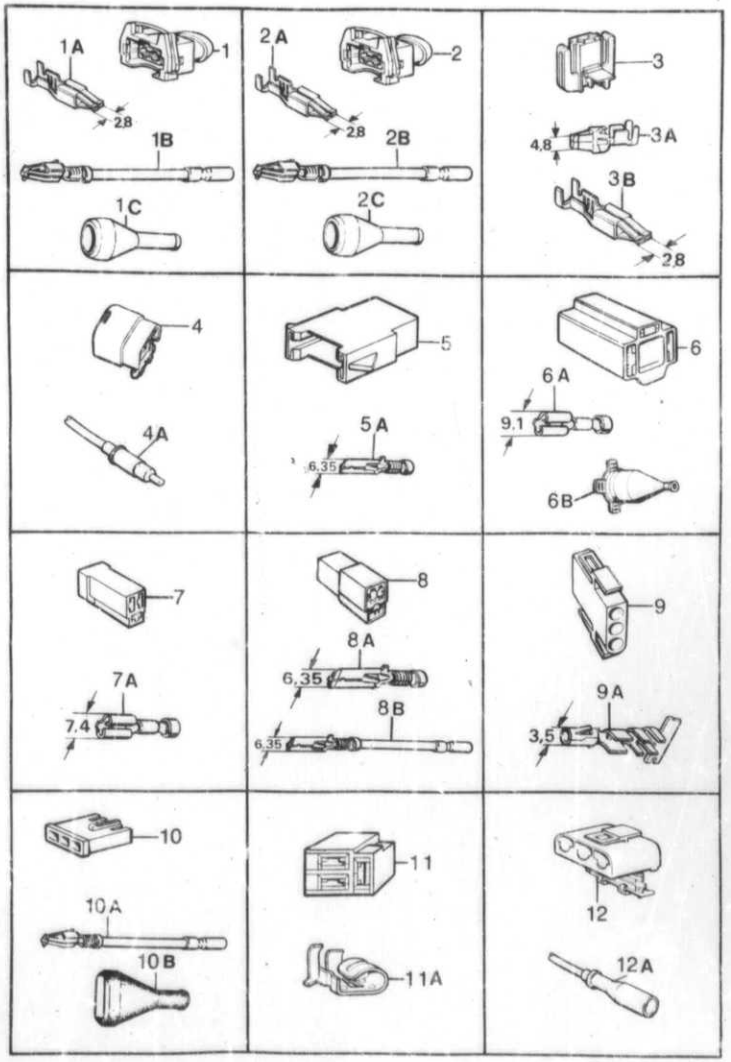


F1968 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | 85 93 899 | | AUXILIARY AIR VALVE, THERMO TIME SWITCH, GIUDE PRESSURE VALVE, STARTER VALVE, INJECTION VALVE, JOINT PIECE, TIMING VALVE, KNOCK SENSOR, FUEL SHUT OFF VALVE, DISTRIBUTION TERMINAL | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 1A | *91 20 668* | | AREA, 0,75,-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 1B | 85 22 617 | | AREA, 1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 1C | 85 71 382 | | | X | Protection | Skydd | 4 |
| 2 | 85 93 915 | | MOTOR TEMP SENSOR LH | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 2A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 2B | 85 22 617 | | AREA, 1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 2C | 85 71 382 | | | X | Protection | Skydd | 4 |
| 3 | 91 24 157 | | JOINT PIECE, SWITCH | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 3A | 91 20 775 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 3B | 91 20 783 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 4 | 95 01 685 | | JOINT PIECE, FUEL PUMP | X | Contact housing<br>2-pole, male | Kontakthus<br>2-polig, stift | 4 |
| 4A | 78 74 506 | | | X | Connection | Skarv | 5 |
| 5 | *90 02 998* | | IGNITION PULS, CHECK ENGINE, JOINT PIECE NLS - USE 4069829 | X | Contact housing<br>2-pole, male | Kontakthus<br>2-polig, stift | 4 |
| 5A | *71 55 062* | | AREA, 0,8-2,5 MM2 NLS - USE 8522542 | X | Cable terminal | Kabelsko | 5 |
| 6 | 71 55 021 | | HEADLIGHT, VACUUM SWITCH | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 5 |
| 6A | 85 82 413 | | AREA, 1,3-3,4 MM2 | X | Cable terminal | Kabelsko | 5 |
| 6B | 85 52 721 | | | X | Cable protection | Kabelskydd | 4 |
| | 73 42 892 | | INTERIOR LIGHT, LIMP-HOME, IGNITION COIL, WINDOW REGULATOR | X | Connector housing<br>3-pole, female | [illegible]<br>[illegible]lsa | 4 |
| | *9 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | | 5 |
| | 900 | | JOINT PIECE, WINDOW REGULATOR REAR | X | Connector housing<br>3-pole, male | Skarvhus<br>3-polig, stift | 4 |
| | [illegible]7 | | AREA, 4,0-6,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| | [illegible]2 | | AREA, 1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 9 | 85 64 916 | | REAR DEMIST | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 9A | 85 44 298 | | AREA, 0,5-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 10 | 85 74 097 | | DISTRIBUTOR | X | Contact housing<br>3-pole, male | Kontakthus<br>3-polig, stift | 4 |
| 10A | 85 22 617 | | AREA, 1,0-2,6 MM2 | X | Cable terminal | Kabelsko | 5 |
| 10B | 85 74 105 | | | X | Protection | Skydd | 4 |
| 11 | 85 82 116 | | FUEL TANK TRANSMITTER | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 11A | 85 82 090 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-A16

## *Contact housing etc*
*1986*

## *Kontakthus etc*
*1986*

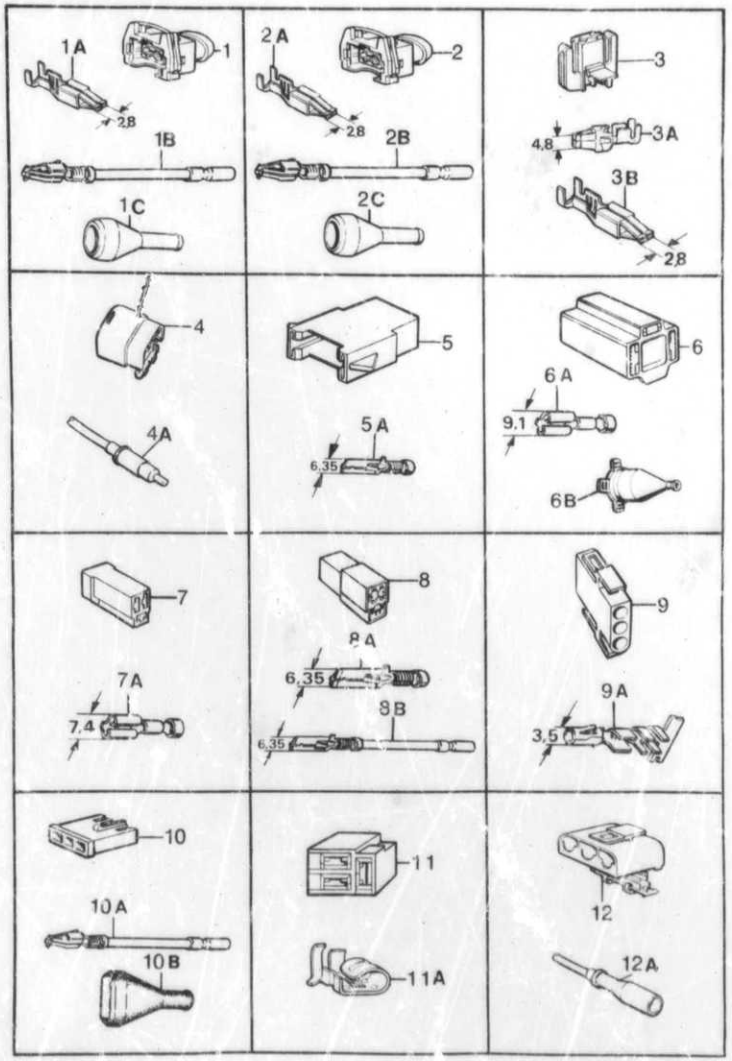


F1968 - 900

| 0200 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0610 | 12 | 95 03 277 | | SPEED CONTROL, HEADLIGHT WIPERS, CENTRAL LOCK FRONT | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 0620 | | | | | | | | |
| 0630 | | | | | | | | |
| 0640 | 12A | 78 74 498 | | | X | Connection | Skarv | 5 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-A18

## Contact housing etc
1986

## Kontakthus etc
1986

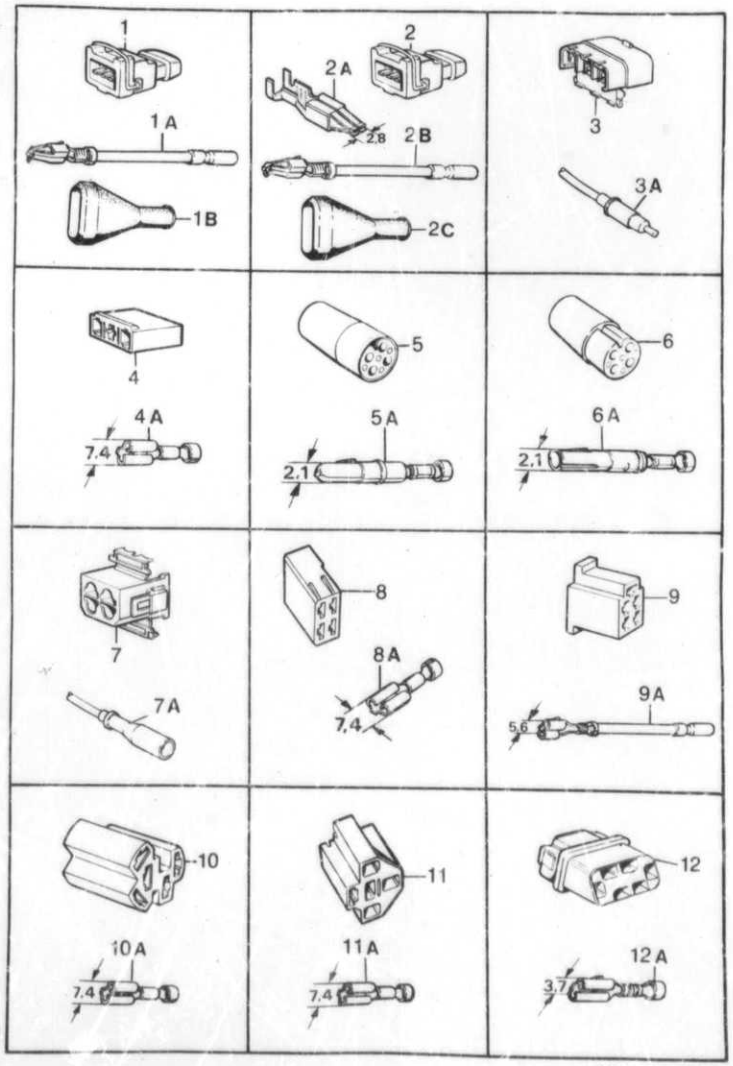


F1969 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | 85 93 907 | | THROTTLE ANGLE SENSOR, THROTTLE SWITCH | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 1A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 1B | 85 22 617 | | AREA, 1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 1C | 85 71 382 | | | X | Protection | Skydd | 4 |
| 2 | 85 93 923 | | IDLE COMPENSATOR | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 2A | 85 22 617 | | AREA, 1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 2B | 85 79 955 | | | X | Protection | Skydd | 4 |
| 3 | 95 03 327 | | JOINT PIECE | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 3A | 78 74 506 | | | X | Connection | Skarv | 5 |
| 4 | 95 07 658 | | JOINT PIECE | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 4A | 85 60 476 | | AREA, 0,9-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 5 | 85 30 081 | | CENTRAL LOCK | X | Contact housing<br>4-pole, male | Kontakthus<br>4-polig, stift | 4 |
| 5A | *85 03 161* | | AREA, 0,5-1,0 MM2 NLS - USE 8522591 | X | Cable terminal | Kabelsko | 5 |
| 5A | 85 16 817 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 6 | 85 30 099 | | ELECTRIC MIRROR, CENTRAL LOCK REAR | X | Contact housing<br>4-pole, female | Kontakthus<br>4-polig, hylsa | 4 |
| 6A | 85 22 583 | | AREA, 0,8-3,4 MM2 | X | Cable terminal | Kabelsko | 5 |
| 6A | *85 03 153* | | AREA, 0,5-1,0 MM2 NLS - USE 8522583 | X | Cable terminal | Kabelsko | 5 |
| 7 | 95 03 434 | | JOINT PIECE, ELECTRICAL MIRROR | X | Contact housing<br>4-pole, female | Kontakthus<br>4-polig, hylsa | 4 |
| 7A | 78 74 498 | | | X | Connection | Skarv | 5 |
| 8 | 85 21 536 | | JOINT PIECE | X | Contact housing<br>4-pole, female | Kontakthus<br>4-polig, hylsa | 4 |
| 8A | *85 82 454* | | AREA, 0,5-1,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 9 | 85 16 890 | | WINDSHIELD WIPER MOTOR | X | Contact housing<br>5-pole, female | Kontakthus<br>5-polig, hylsa | 4 |
| 9A | 85 22 567 | | AREA, 0,25-1,6 MM2 | X | Cable terminal | Kabelsko | 5 |
| 10 | 85 44 397 | | SWITCH HEATING FAN | X | Contact housing<br>5-pole, female | Kontakthus<br>5-polig, hylsa | 4 |
| 10A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 11 | 85 33 697 | | RELAY COOLING FAN, RESISTOR HEATING FAN, SPEED CONTROL, TIME RELAY INTERIOR, RELAY WINDOW REGULATOR, RELAY FLASHER, IGNITION LOCK | X | Contact housing<br>5-pole, female | Kontakthus<br>5-polig, hylsa | 4 |
| 11A | 79 71 708 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 11A | *85 82 454* | | AREA, 0,5-1,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 11A | *85 82 397* | | AREA, 1,2-2,5 MM2 NLS | X | Cable terminal | Kabelsko | 5 |
| 11A | 79 68 068 | | AREA, 4,0-6,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 12 | 85 40 569 | | SWITCH ELECTRIC MIRROR | X | Contact housing<br>6-pole, female | Kontakthus<br>6-polig, hylsa | 4 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-A20

## *Contact housing etc* *1986*

## *Kontakthus etc* *1986*

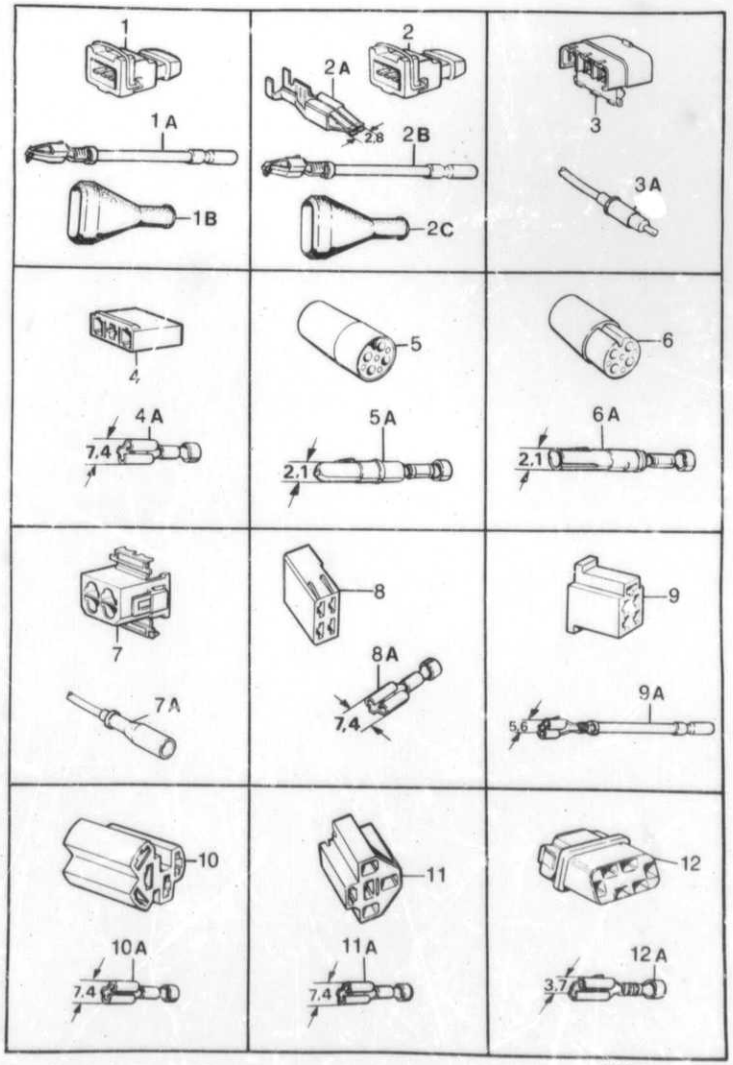


F1969 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0250 | | | | | | | |
| 0590 | 12A | *85 09 846* | AREA, 0,5-1,4 MM2 NLS - USF 8522575 | X | Cable terminal | Kabelsko | 5 |
| 0590 | | | | | | | |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-A22

## *Contact housing etc*
*1986*

## *Kontakthus etc*
*1986*

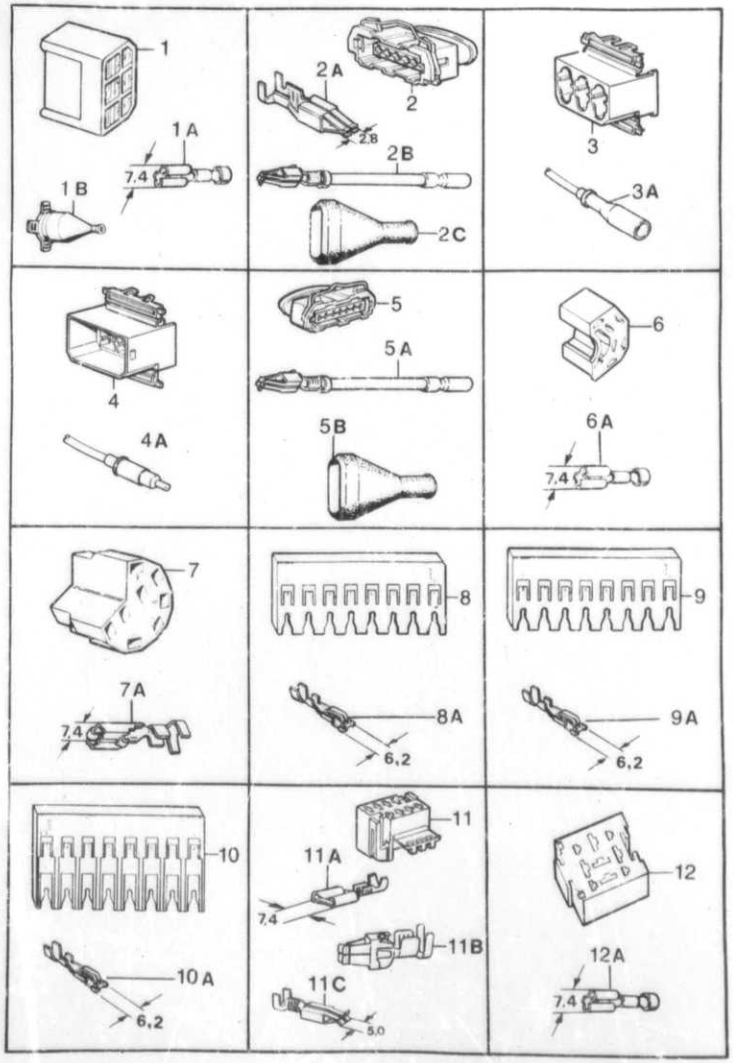


F1970 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | 85 52 200 | | JOINT PIECE | X | Contact housing<br>6-pole, female | Kontakthus<br>6-polig, hylsa | 4 |
| 1A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 1B | 85 52 721 | | | X | Cable protection | Kabelskydd | 4 |
| 2 | 85 93 931 | | AIR MESS METER LH | X | Contact housing<br>6-pole, female | Kontakthus<br>6-polig, hylsa | 4 |
| 2A | *91 20 688* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 2B | 85 22 617 | | AREA, 1,0-2,6 MM2 | X | Cable terminal | Kabelsko | 5 |
| 2C | 85 82 082 | | | X | Protection | Skydd | 4 |
| 3 | 95 03 475 | | JOINT PIECE | X | Contact housing<br>6-pole, female | Kontakthus<br>6-polig, hylsa | 4 |
| 3A | 78 74 498 | | | X | Connection | Skarv | 5 |
| 4 | 95 06 668 | | JOINT PIECE | X | Contact housing<br>6-pole, male | Kontakthus<br>6-polig, stift | 4 |
| 4A | 78 74 506 | | | X | Connection | Skarv | 5 |
| 5 | 85 93 949 | | ELECTRONIC UNIT IGNITION SYSTEM | X | Contact housing<br>7-pole, female | Kontakthus<br>7-polig, hylsa | 4 |
| 5A | 85 22 617 | | AREA, 1,0-2,6 MM2 | X | Cable terminal | Kabelsko | 5 |
| 5B | 85 74 048 | | | X | Protection | Skydd | 4 |
| 6 | 85 33 700 | | SWITCH WINDSHIELD WIPER | X | Contact housing<br>7-pole, female | Kontakthus<br>7-polig, hylsa | 4 |
| 6A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 6A | 79 66 068 | | AREA, 4,0-6,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 7 | 85 44 363 | | SWITCH LIGHT | X | Contact housing<br>8-pole, female | Kontakthus<br>8-polig, hylsa | 4 |
| 7A | *85 41 203* | | AREA, 0,5-1,5 MM2 NLS - USE 8560476 | X | Cable terminal | Kabelsko | 5 |
| 7A | 85 41 211 | | AREA, 2,5-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 8 | *85 68 719* | | SN, TAIL LIGHT NLS | X | Contact housing<br>8-pole, female | Kontakthus<br>8-polig, hylsa | 4 |
| 8A | 85 68 768 | | | X | Cable terminal | Kabelsko | 5 |
| 9 | *85 68 727* | | SN, TAIL LIGHT NLS - USE 8568768, 8568842 | X | Contact housing<br>8-pole, female | Kontakthus<br>8-polig, hylsa | 4 |
| 9A | 85 68 768 | | | X | Cable terminal | Kabelsko | 5 |
| 10 | 85 68 735 | | SN, TAIL LIGHT | X | Contact housing<br>8-pole, female | Kontakthus<br>8-polig, hylsa | 4 |
| 10A | 85 68 768 | | | X | Cable terminal | Kabelsko | 5 |
| 11 | 91 24 090 | | SWITCH WINDOW REGULATOR, ELECTRONIC UNIT CENTRAL LOCK, CONTROL UNIT ANTI THEFT ALARM, EL-SUN ROOF | X | Contact housing<br>8-pole, female | Kontakthus<br>8-polig, hylsa | 4 |
| 11A | 79 71 708 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 11A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 11B | 91 20 783 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 11B | 91 20 775 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 11B | 91 20 791 | | AREA, 2,5-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 11C | 91 20 767 | | AREA, 4,0-6,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 12 | 85 71 390 | | SAFETY BELT WARNING, KEY WARNING, FUSE BOX FRONT | X | Bracket<br>9-pole, female | Hållare<br>9-polig, hylsa | 4 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-A24

## Contact housing etc
1986

## Kontakthus etc
1986

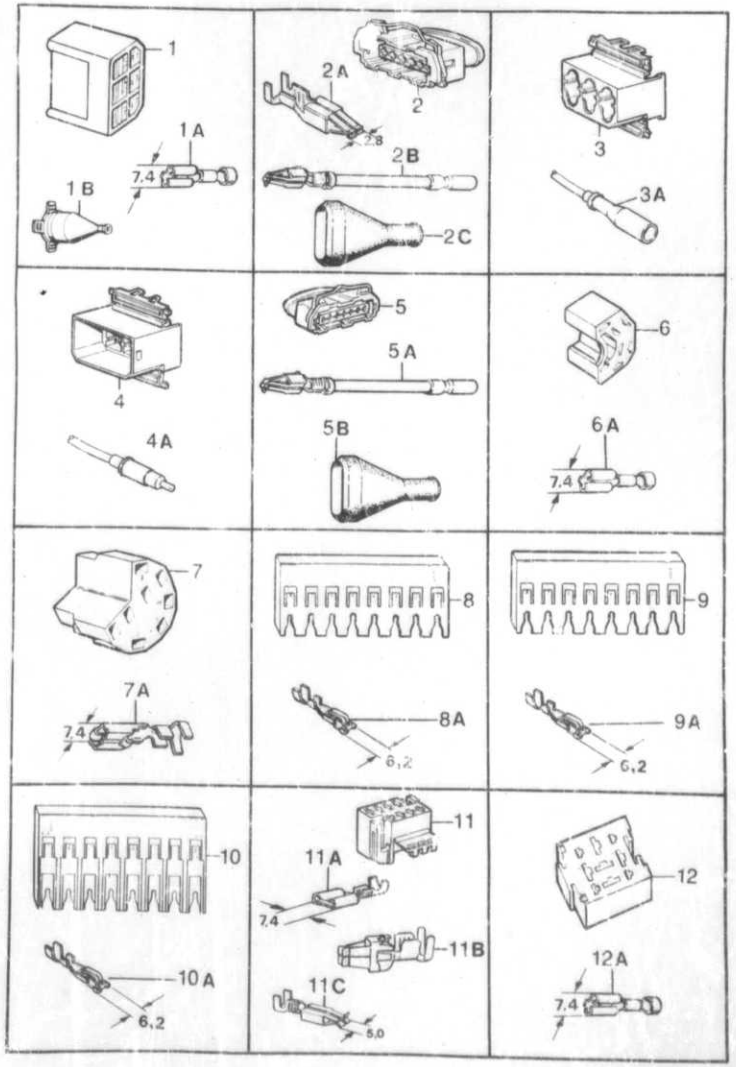


F1970 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty Antal | Description | Benämning | 5 L |
|---|---|---|---|---|---|---|---|
| 12A | 79 71 708 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 12A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |

MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical, general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-B02

## Contact housing etc
1986

## Kontakthus etc
1986

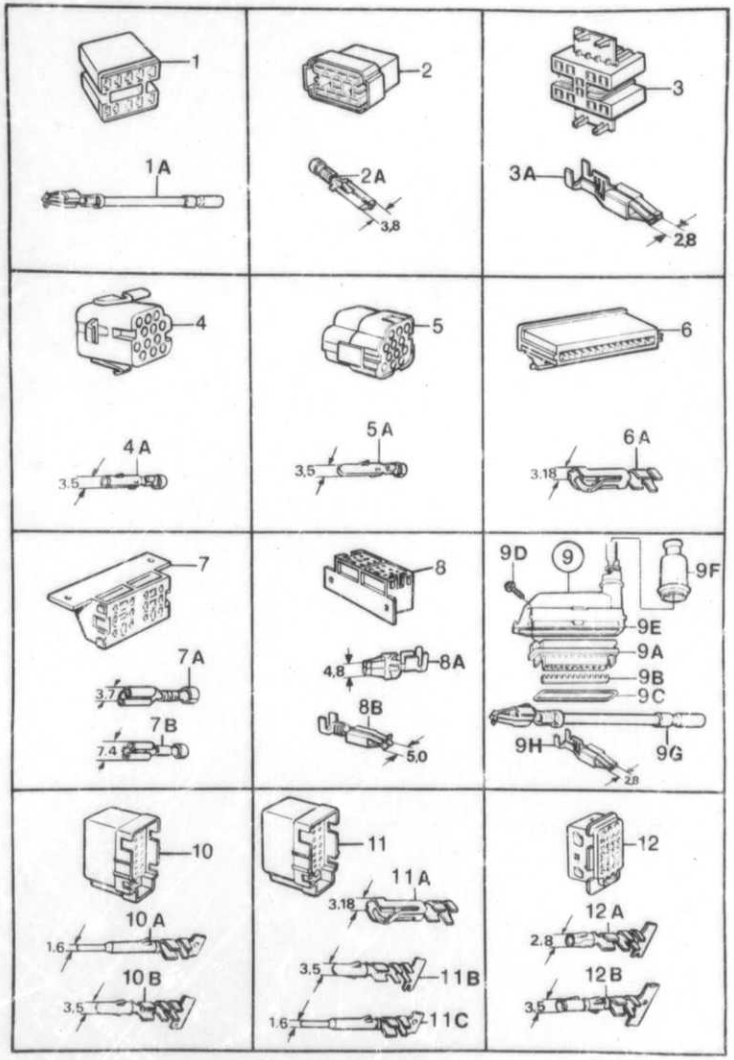


F1971 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | 85 44 371 | | JOINT PIECE, | X | Connector housing 10-pole, female | Skarvhus 10-polig, hylsa | 4 |
| 1A | 85 22 617 | | AREA, 1,0-2,6 MM2 | X | Cable terminal | Kabelsko | 5 |
| 2 | 91 22 557 | | RADIO | X | Connector housing 10-pole, male | Skarvhus 10-polig, stift | 4 |
| 2A | 95 52 100 | | AREA, 0,75-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 3 | 91 23 399 | | SWITCH RECIRCULATION, SWITCH AC, RADIO, SWITCH FOG LIGHT, REAR DEMIST, SWITCH FLASHER | X | Connector housing 10-pole, female | Skarvhus 10-polig, hylsa | 4 |
| 3A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 4 | 85 53 497 | | COWL | X | Connector housing 12-pole, female | Skarvhus 12-polig, hylsa | 4 |
| 4A | 85 44 298 | | AREA, 0,5-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 4A | 85 44 306 | | AREA, 2,0-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 5 | 85 53 505 | | COWL | X | Contact housing 12-pole, male | Kontakthus 12-polig, stift | 4 |
| 5A | *85 44 314* | | AREA, 0,5-2,0 MM2 NLS - USE 8582603 | X | Cable terminal | Kabelsko | 5 |
| 5A | 85 44 322 | | AREA, 2,0-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 6 | 85 44 348 | | INSTRUMENTS | X | Contact housing 14-pole, female | Kontakthus 14-polig, hylsa | 4 |
| 6A | 85 60 278 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 7 | 85 51 665 | | FLASHER, INTERVAL RELAY, FUSE BOX FRONT | X | Contact housing 18-pole, female | Kontakthus 18-polig, hylsa | 4 |
| 7A | *85 09 846* | | AREA, 0,5-1,4 MM2 NLS - USE 8522575 | X | Cable terminal | Kabelsko | 5 |
| 7B | 79 71 708 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 7B | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 8 | 91 24 199 | | MAIN RELAY, RELAY FUEL PUMP | X | Contact housing 18-pole, female | Kontakthus 18-polig, hylsa | 4 |
| 8A | 91 20 783 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 8A | 91 20 791 | | AREA, 2,5-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 8B | 95 21 972 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 8B | *95 21 980* | | AREA, 1,5-2,5 MM2 NLS - USE 9120783 | X | Cable terminal | Kabelsko | 5 |
| 9 | 85 86 802 | | ELECTRONIC UNIT LH | X | Contact housing 25-pole, female | Kontakthus 25-polig, hylsa | 4 |
| 9A | 85 87 420 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 9B | 85 87 438 | | 1) | 1 | .Striker plate | .Låsbleck | 5 |
| 9C | 85 87 453 | | 1) | 1 | .Seal | .Tätning | 5 |
| 9D | 85 87 487 | | 1) | 1 | .Screw | .Skruv | 5 |
| 9E | 85 87 503 | | 1) | 1 | .Cover | .Kåpa | 4 |
| 9F | 85 87 511 | | 1) | 1 | .Rubber protection | .Gummiskydd | 4 |
| 9G | 85 22 617 | | AREA, 1,0-2,6 MM2 | X | Cable terminal | Kabelsko | 5 |
| 2H | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 10 | 85 44 215 | | COWL, WHITE | X | Contact housing 29-pole, male | Kontakthus 29-polig stift | 4 |
| 10A | 85 93 964 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |

1. Not as separate spare part. Ej som separat reservdel.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-B04

## Contact housing etc
1986

## Kontakthus etc
1986

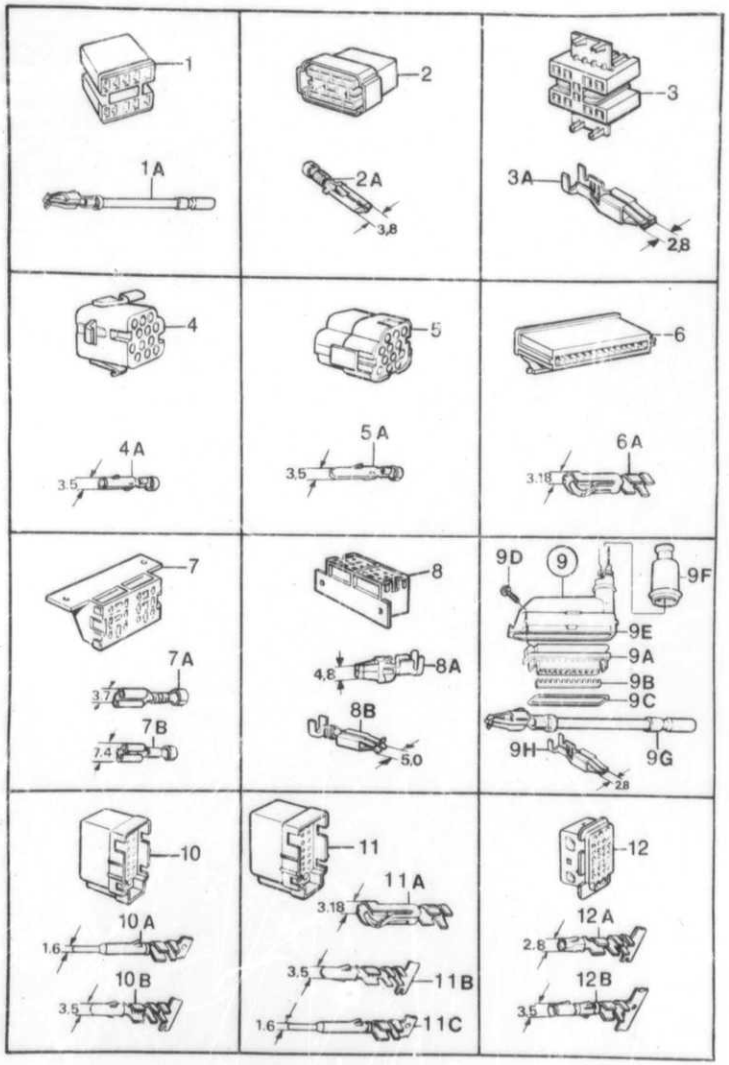


F1971 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 10A | *85 44 314* | | AREA, 0,5-2,0 MM2 NLS - USE 8582603 | X | Cable terminal | Kabelsko | 5 |
| 10A | 85 93 956 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 10B | 85 44 322 | | AREA, 2,0-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 11 | 85 44 231 | | COWL, RED | X | Contact housing 29-pole, male | Kontakthus 29-polig stift | 4 |
| 11A | 85 60 278 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 11B | 85 44 322 | | AREA, 2,0-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 11C | 85 93 956 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 12 | 85 44 249 | | COWL, BLACK | X | Contact housing 29-pole, female | Kontakthus 29-polig, hylsa | 4 |
| 12A | *85 21 726* | | AREA, 0,5-1,5 MM2 NLS - USE 8567075 | X | Cable terminal | Kabelsko | 5 |
| 12B | 85 82 595 | | AREA, 0,5-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-B06

## *Contact housing etc*
*1986*

## *Kontakthus etc*
*1986*

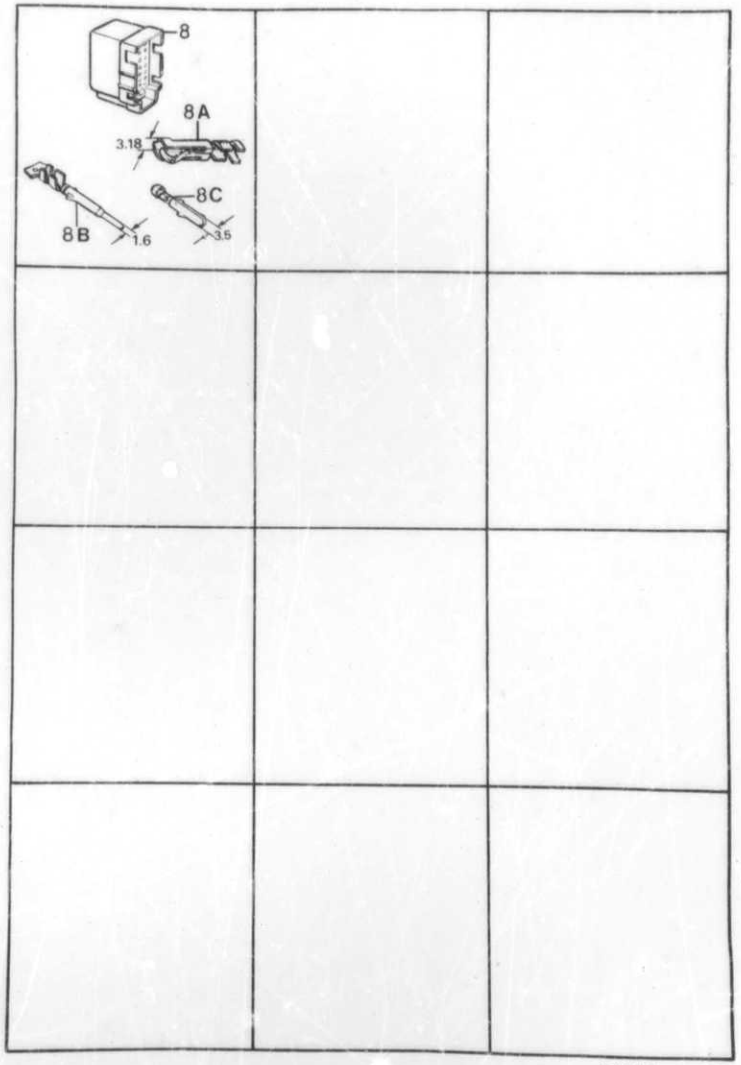


F1972 - 900

| 0400 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 85 44 256 | | COWL, BLACK | X | Contact housing | Kontakthus | 4 |
| 0020 | | | | | | 29-pole male | 29-polig stift | |
| 0030 | 1A | 85 60 278 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0040 | 1B | 85 93 956 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0050 | 1B | 85 93 964 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0060 | 1C | *85 44 314* | | AREA, 2,0-4,0 MM2 NLS - USE 8582603 | X | Cable terminal | Kabelsko | 5 |
| 0060 | | | | | | | | |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-B08

## Contact housing etc
1987

## Kontakthus etc
1987

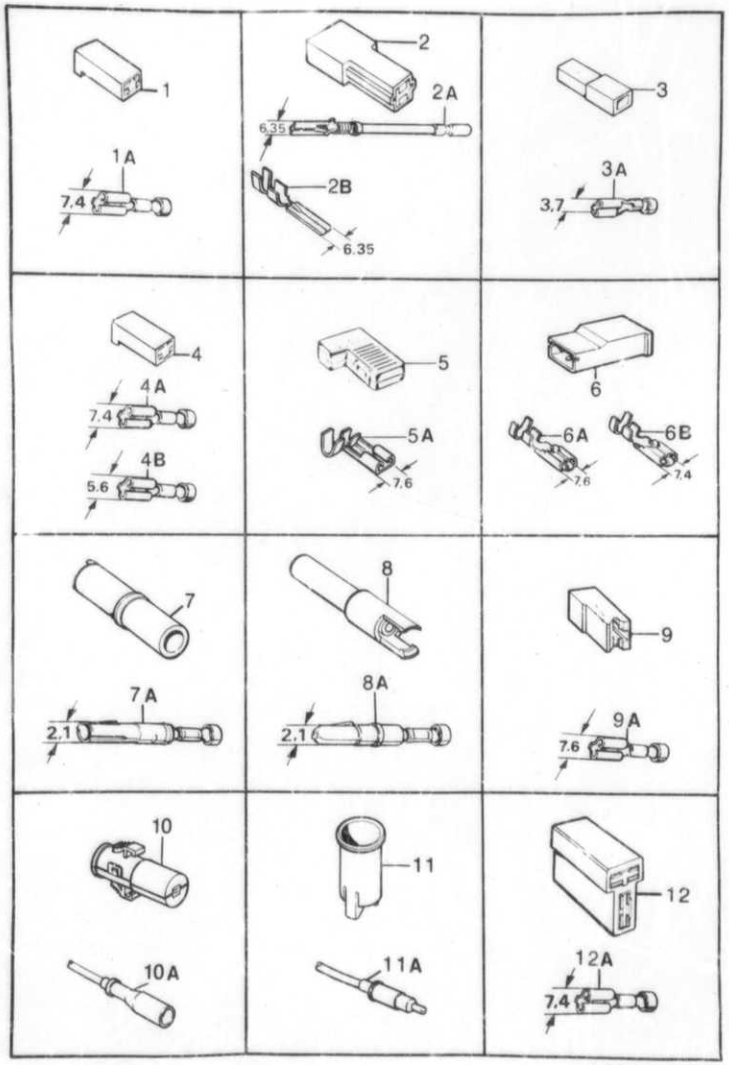


F1973 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | 71 55 112 | | JOINT PIECE, RELAY FUEL PUMP, IDLE COMPENSATOR, EL-WINDOW REGULATOR | X | Contact housing<br>1-pole, female | Kontakthus<br>1-polig, hylsa | 4 |
| 1A | 79 71 708 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 1A | *85 83 379* | | AREA, 0,5-1,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 3 |
| 1A | *85 82 454* | | AREA, 0,5-1,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 1A | *71 55 153* | | AREA, 0,8-2,1 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 2 | 71 55 120 | | JOINT PIECE, APC, PUMP RELAY, FUSE BOX | X | Contact housing<br>1-pole, male | Kontakthus<br>1-polig, stift | 4 |
| 2A | 85 22 542 | | AREA, 1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 2B | 85 82 637 | | AREA, 0,8-2,1 MM2 | X | Cable terminal | Kabelsko | 5 |
| 3 | 85 30 115 | | LOUDSPEAKER | X | Contact housing<br>1-pole, male | Kontakthus<br>1-polig, stift | 4 |
| 3A | 85 30 107 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 3 |
| 4 | 85 33 184 | | LOUDSPEAKER, STARTER | X | Contact housing<br>1-pole, male | Kontakthus<br>1-polig, stift | 4 |
| 4A | 85 30 107 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 3 |
| 4B | *85 33 028* | | AREA, 0,5-1,5 MM2 NLS - USE 8582439 | X | Cable terminal | Kabelsko | 3 |
| 4B | 85 82 439 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 5 | 85 21 692 | | WINDOW REGULATOR, THROTTLE SENSOR AC, HAND BRAKE, IGNITION COIL, THERMO SWITCH, JOINT PIECE, AC RECIRKULATION VALVE, IGNITION LOCK | X | Contact housing<br>1-pole, female | Kontakthus<br>1-polig, hylsa | 4 |
| 5A | *85 21 676* | | AREA, 0,5-1,5 MM2 NLS - USE 8522526 | X | Cable terminal | Kabelsko | 5 |
| 5A | *85 82 421* | | AREA, 0,5-1,5 MM2 NLS - USE 8522526 | X | Cable terminal | Kabelsko | 5 |
| 5A | *85 21 684* | | AREA, 1,0-2,5 MM2 NLS - USE 8522526 | X | Cable terminal | Kabelsko | 5 |
| 6 | 85 41 229 | | JOINT PIECE, LUGGAGE COMPARTMENT LIGHT, TAIL LIGHT, ALTERNATOR, MAIN SWITCH | X | Sleeve<br>1-pole, male | Isoleringshylsa<br>1-polig, stift | 5 |
| 6A | *85 41 203* | | AREA, 0,5-1,0 MM2 NLS - USE 8560476 | X | Cable terminal | Kabelsko | 5 |
| 6B | *85 82 405* | | AREA, 0,5-1,5 MM2 NLS - USE 8560476 | X | Cable terminal | Kabelsko | 5 |
| 6B | 85 41 211 | | AREA, 2,5-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 7 | 85 16 932 | | JOINT PIECE | X | Contact housing<br>1-pole, female | Kontakthus<br>1-polig, hylsa | 4 |
| 7A | 85 22 583 | | AREA, 0,8-3,4 MM2 | X | Cable terminal | Kabelsko | 5 |
| 8 | 85 16 940 | | GEAR BOX A, JOIN PIECE | X | Contact housing<br>1-pole, male | Kontakthus<br>1-polig, stift | 4 |
| 8A | *85 03 161* | | AREA, 0,5-1,0 MM2 NLS - USE 8522591 | X | Cable terminal | Kabelsko | 5 |
| 9 | 85 21 544 | | JOINT PIECE | X | Contact housing<br>1-pole, female | Kontakthus<br>1-polig, hylsa | 4 |
| 9A | *85 59 205* | | AREA, 4,0-6,0 MM2 NLS | X | Cable terminal | Kabelsko | 5 |
| 10 | 95 03 418 | | JOINT PIECE, AC COMPRESSOR | X | Connector housing<br>1-pole, female | Skarvhus<br>1-polig, hylsa | 4 |




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

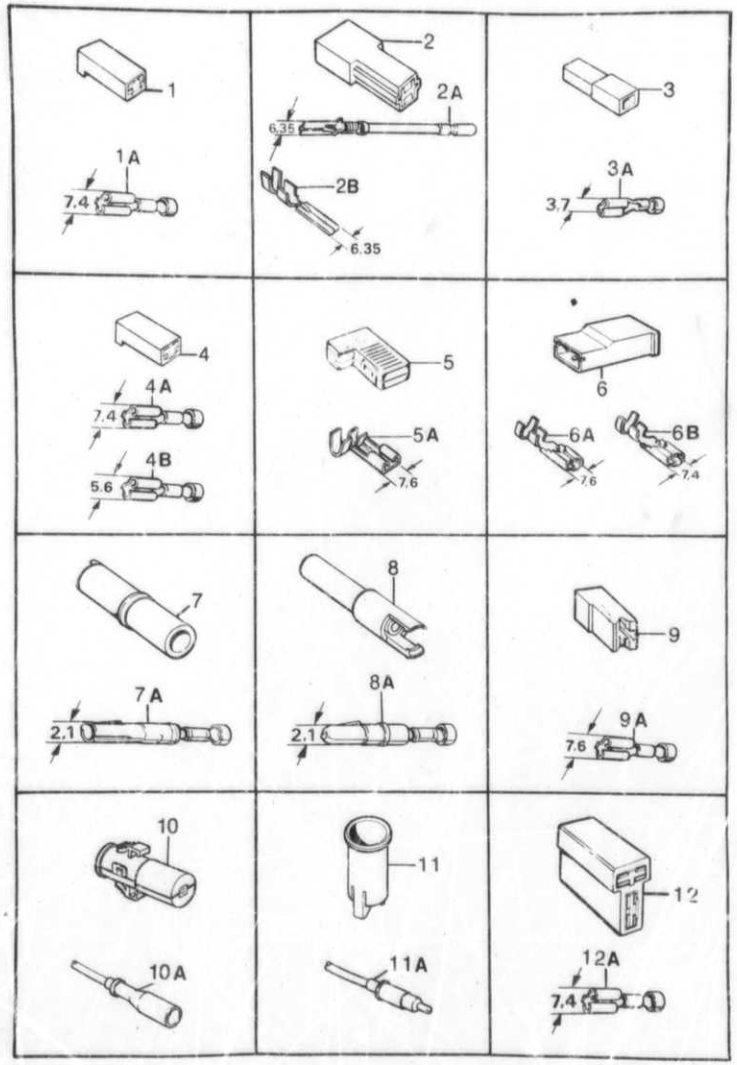


F1973 - 900


| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 10A | 78 74 498 | | | X | Connection | Skarv | 5 |
| 11 | 95 03 426 | | JOINT PIECE | X | Connector housing<br>1-pole, male | Skarvhus<br>1-polig, stift | 4 |
| 11A | 78 74 506 | | | X | Connection | Skarv | 5 |
| 12 | 71 55 096 | | ASH TRAY, JOINT PIECE, SPOTLIGHT | X | Connector housing<br>2-pole, female | Skarvhus<br>2-polig, hylsa | 4 |
| 12A | *71 55 153* | | AREA, 0,8-2,1 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 12A | *85 82 454* | | AREA, 0,5-1,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

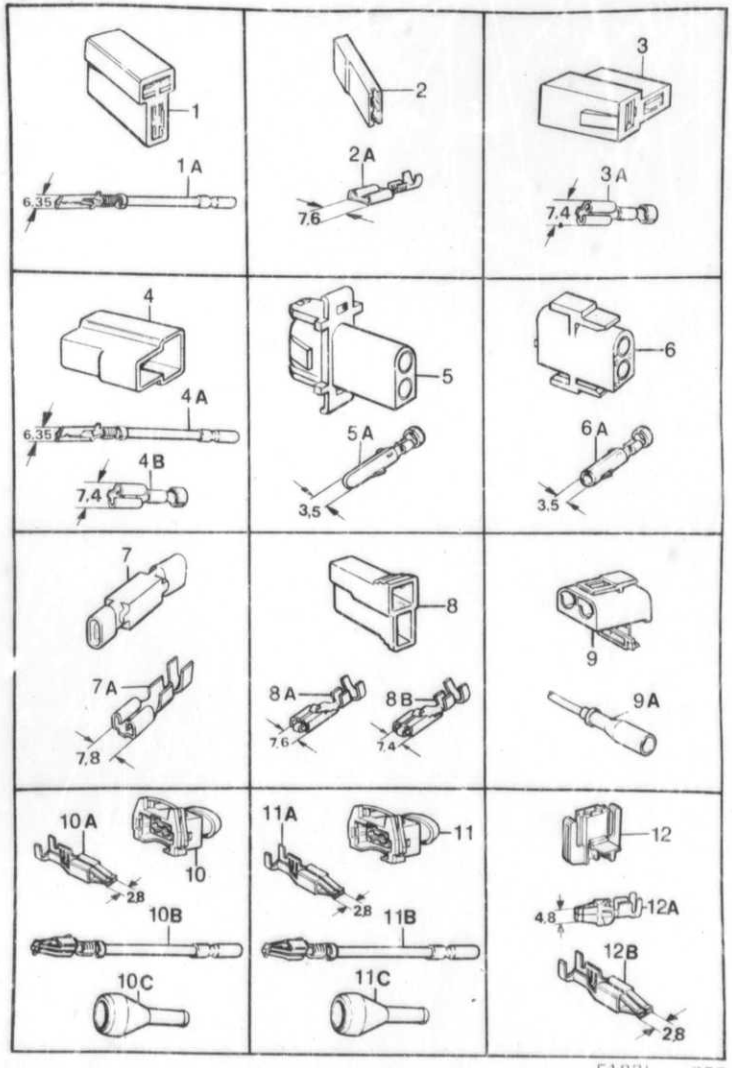


F1974 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | 71 55 104 | | JOINT PIECE | X | Contact housing<br>2-pole, male | Kontakthus<br>2-polig, stift | 4 |
| 1A | 85 22 542 | | AREA, 1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 2 | 85 16 916 | | JOINT PIECE, BRAKE LIGHT SWITCH, BACK-UP LIGHT, THERMO SWITCH, STARTER, VACUUM SWITCH, SOLENOID VALVE IDLE COMPENSATION, FUSE, INTERIOR LIGHT, THEFT ALARM, ELECTRONIC UNIT SPEED CONTROL, EL-PAD | X | Insulation<br>2-pole, female | Isolering<br>2-polig, hylsa | 4 |
| 2A | 85 14 036 | | AREA, 0,3-0,8 MM2 | X | Cable terminal | Kabelsko | 5 |
| 2A | *85 14 028* | | AREA, 0,3-0,8 MM2 NLS - USE 7155716 | X | Cable terminal | Kabelsko | 5 |
| 2A | 71 55 716 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 2A | *71 55 039* | | AREA, 1,0-2,5 MM2 NLS | X | Cable terminal | Kabelsko | 5 |
| 2A | *85 59 205* | | AREA, 4,0-6,0 MM2 NLS | X | Cable terminal | Kabelsko | 5 |
| 3 | 85 58 538 | | FUEL PUMP, FUSE BOX | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 3A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 3A | 79 68 068 | | AREA, 4,0-6,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 4 | 85 58 546 | | JOINT PIECE, FUSE BOX | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 4A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 4B | 85 16 957 | | AREA, 4,0-6,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 5 | 85 61 623 | | JOINT PIECE, ELECTRIC PAD, NUMBER PLATE LIGHT, CENTRAL LOCK | X | Contact housing<br>2-pole, male | Kontakthus<br>2-polig, stift | 4 |
| 5A | *85 44 314* | | AREA, 0,5-2,0 MM2 NLS - USE 8582603 | X | Cable terminal | Kabelsko | 5 |
| 5A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 6 | 85 61 631 | | JOINT PIECE, ELECTRIC PAD | X | Connector housing<br>2-pole, male | Skarvhus<br>2-polig, stift | 4 |
| 6A | 85 44 298 | | AREA, 0,5-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 7 | 85 30 966 | | DIOD HOLDER | X | Diode<br>2-pole, male | Diod<br>2-polig, stift | 5 |
| 7A | 71 55 716 | | AREA, 0,4-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 8 | 85 74 949 | | CIGARETTE LIGHTER | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 8A | *85 41 203* | | AREA, 0,5-1,5 MM2 NLS - USE 8560476 | X | Cable terminal | Kabelsko | 5 |
| 8B | 85 41 211 | | AREA, 2,5-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 9 | 95 03 319 | | JOINT PIECE, VACUUM SWITCH APC, AC FAN MOTOR, WASHER MOTOR, SOLENOID VALVE AC, MOTOR COOLING FAN, BRAKE FLUID LEVEL, FUEL PUMP, WINDOW REGULATOR FRONT, CENTRAL LOCK | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 9A | 78 74 498 | | | X | Connection | Skarv | 5 |

MASTER INDEX

0 General 1-A02
2 Engine 1-B02
3A Electrical general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 7-A02
9 Tools, labels 7-D02
10 Numerical register 7-E02


3B GROUP INDEX

Connectors 3-A06
Cable terminals 3-E10

# 3-B14

## Contact housing etc
1987

## Kontakthus etc
1987

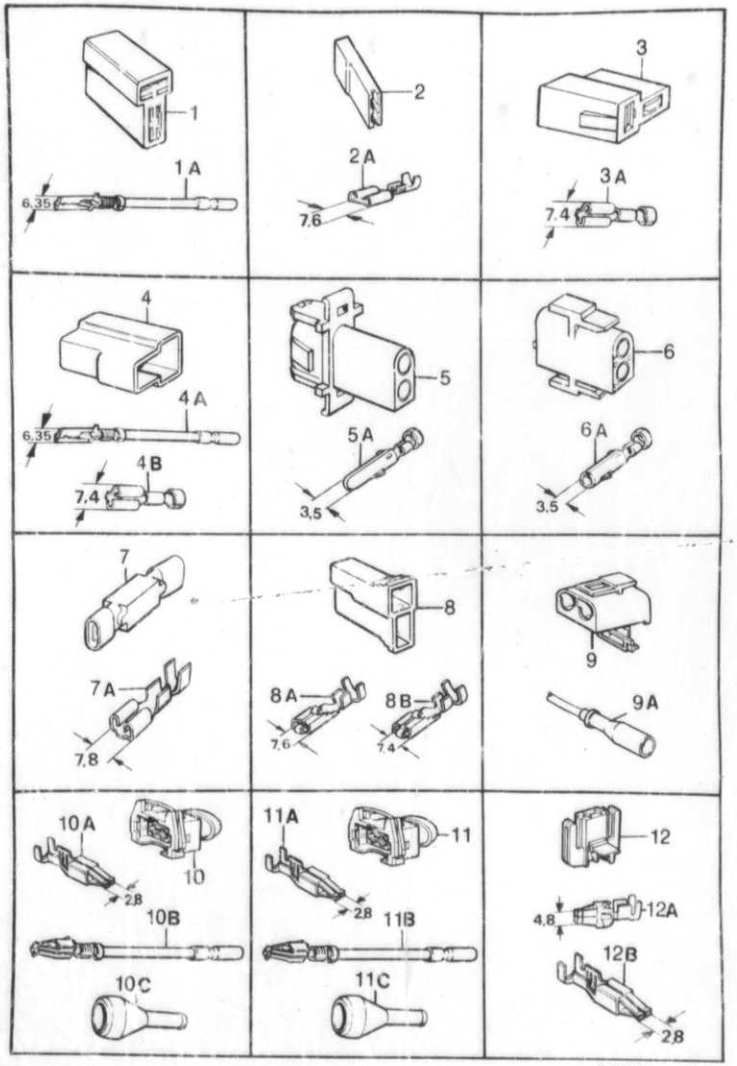


F1974 - 900


| 0500 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0590 | 10 | 85 93 399 | | AUXILIARY AIR VALVE, THERMO TIME SWITCH, GIUDE PRESSURE VALVE, STARTER VALVE, INJECTION VALVE, JOINT PIECE, FUEL SHUT OFF VALVE, TIMING VALVE | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 0600 | | | | | | | | |
| 0610 | | | | | | | | |
| 0620 | | | | | | | | |
| 0630 | | | | | | | | |
| 0640 | | | | | | | | |
| 0650 | | | | | | | | |
| 0660 | 10A | *91 20 668* | | AREA, 0,75,-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 0660 | | | | | | | | |
| 0670 | 10B | 85 22 617 | | AREA, 1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0680 | 10C | 85 71 382 | | | X | Protection | Skydd | 4 |
| 0690 | | | | | | | | |
| 0700 | 11 | 85 93 915 | | JOINT PIECE TEMP SENSOR, INTERIOR LIGHT | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 0710 | | | | | | | | |
| 0720 | 11A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 0720 | | | | | | | | |
| 0730 | 11B | 85 22 617 | | AREA, 1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0740 | 11C | 85 71 382 | | | X | Protection | Skydd | 4 |
| 0750 | | | | | | | | |
| 0760 | 12 | 91 24 157 | | JOINT PIECE, SWITCH | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 0770 | | | | | | | | |
| 0780 | 12A | 91 20 775 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0790 | 12B | 91 20 783 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0800 | 12B | *93 21 980* | | AREA, 1,5-2,5 MM2 NLS - USE 9120783 | X | Cable terminal | Kabelsko | 5 |
| 0800 | | | | | | | | |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

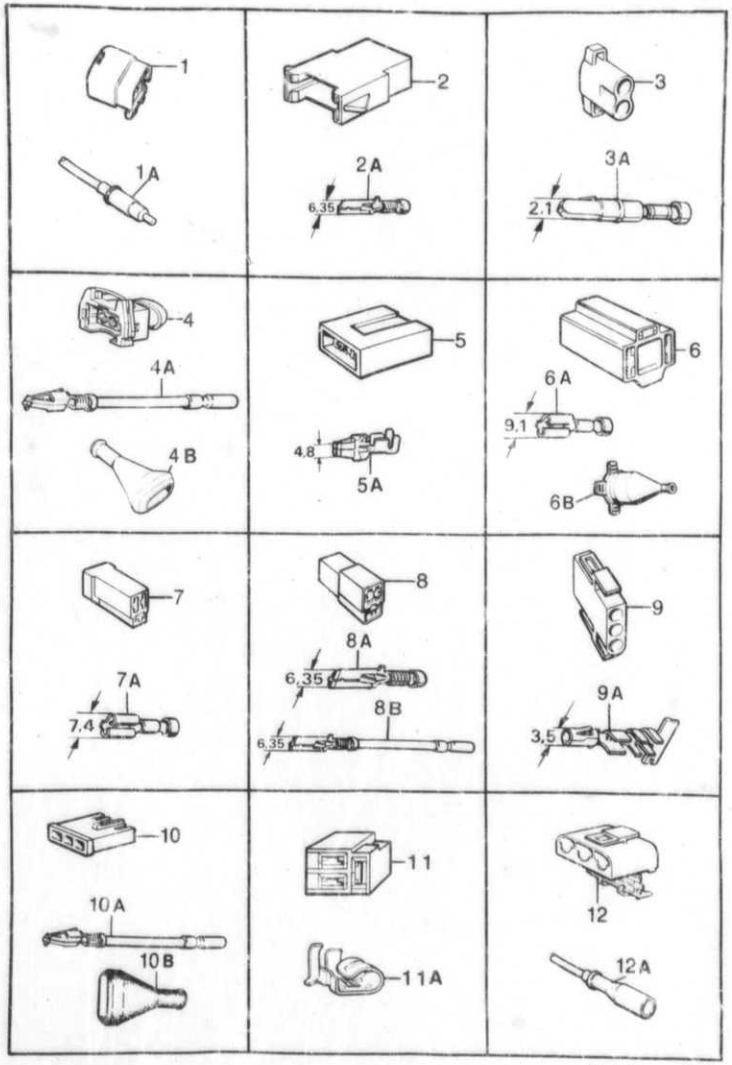


F1975 - 900


| 0550 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 95 01 685 | | JOINT PIECE | X | Contact housing<br>2-pole, male | Kontakthus<br>2-polig, stift | 4 |
| 0030 | 1A | 78 74 506 | | | X | Connection | Skarv | 5 |
| 0050 | 2 | *95 02 998* | | IGNITION PULS, CHECK ENGINE, JOINT PIECE NLS - USE 4069829 | X | Contact housing<br>2-pole, male | Kontakthus<br>2-polig, stift | 4 |
| 0070 | 2A | *71 55 062* | | AREA, 0,8-2,5 MM2 NLS - USE 8522542 | X | Cable terminal | Kabelsko | 5 |
| 0090 | 3 | 85 04 771 | | BRAKE PEDAL SPEED CONTROL, CLUTCH PEDAL SPEED CONTROL | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 0120 | 3A | 85 22 583 | | AREA, 0,8-3,4 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0140 | 4 | 85 97 064 | | KNOCK SENSOR | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 0160 | 4A | 85 22 617 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0170 | 4B | 85 71 382 | | | X | Protection | Skydd | 4 |
| 0190 | 5 | 95 19 380 | | RELAY HOLDER | X | Fuse holder<br>2-pole, female | Säkringshållare<br>2-polig, hylsa | 4 |
| 0210 | 5A | 91 20 791 | | AREA, 2,5-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0230 | 6 | 71 55 021 | | HEADLIGHT | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 5 |
| 0250 | 6A | 85 82 413 | | AREA, 1,3-3,4 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0260 | 6B | 85 52 721 | | | X | Cable protection | Kabelskydd | 4 |
| 0280 | 7 | 73 42 892 | | LIMP-HOME, JOINT PIECE | X | Connector housing<br>3-pole, female | Skarvhus<br>3-polig, hylsa | 4 |
| 0300 | 7A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 0320 | 8 | 73 42 900 | | JOINT PIECE, WINDOW REGULATOR REAR | X | Connector housing<br>3-pole, male | Skarvhus<br>3-polig, stift | 4 |
| 0340 | 8A | 85 16 957 | | AREA, 4,0-6,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0350 | 8B | 85 22 542 | | AREA, 1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0370 | 9 | 85 64 916 | | REAR DEMIST | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 0390 | 9A | 85 44 298 | | AREA, 0,5-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0410 | 10 | 85 74 097 | | DISTRIBUTOR | X | Contact housing<br>3-pole, male | Kontakthus<br>3-polig, stift | 4 |
| 0430 | 10A | 85 22 617 | | AREA, 1,0-2,6 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0440 | 10B | 85 74 105 | | | X | Protection | Skydd | 4 |
| 0460 | 11 | 85 82 116 | | FUEL TANK TRANSMITTER | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 0480 | 11A | 85 82 090 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0500 | 12 | 95 03 277 | | SPEED CONTROL, HEADLIGHT WASHERS, CENTRAL LOCK FRONT | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 0530 | 12A | 78 74 498 | | | X | Connection | Skarv | 5 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

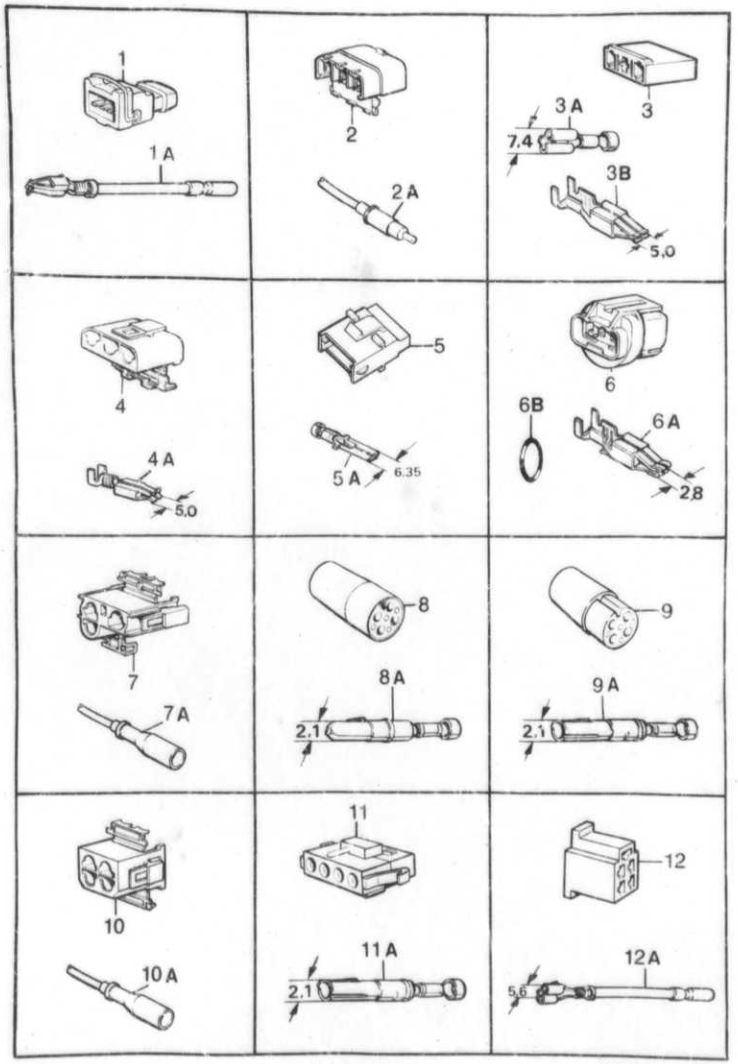


F1976 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | 85 93 907 | | JOINT PIECE, THROTTLE SWITCH | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 1A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 1A | 85 22 617 | | AREA, 1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 2 | 95 03 327 | | JOINT PIECE | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 2A | 78 74 506 | | | X | Connection | Skarv | 5 |
| 3 | 95 07 658 | | JOINT PIECE | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 3A | 85 60 476 | | AREA, 0,9-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 3B | 95 21 972 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 4 | 91 24 165 | | JOINT PIECE | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 4A | 95 21 972 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 4A | *95 21 980* | | AREA, 1,5-2,5 MM2 NLS - USE 9120783 | X | Cable terminal | Kabelsko | 5 |
| 5 | 95 03 012 | | JOINT PIECE | X | Contact housing<br>3-pole, male | Kontakthus<br>3-polig, stift | 4 |
| 5A | *71 55 062* | | AREA, 0,5-1,0 MM2 NLS - USE 8522542 | X | Cable terminal | Kabelsko | 5 |
| 5A | *71 55 062* | | AREA, 0,8-2,5 MM2 NLS - USE 8522542 | X | Cable terminal | Kabelsko | 5 |
| 6 | 95 14 803 | | JOINT PIECE | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 6A | *95 08 748* | | AREA, 1,5-2,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 6B | 95 14 811 | | | X | Protection | Skydd | 4 |
| 7 | 95 19 679 | | PARKING LIGHT, DIRECTION LIGHT,SIDE BACK-UP LIGHT | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 7A | 78 74 498 | | | X | Connection | Skarv | 5 |
| 8 | 85 30 081 | | CENTRAL LOCK, JOINT PIECE | X | Contact housing<br>4-pole, male | Kontakthus<br>4-polig, stift | 4 |
| 8A | *85 03 161* | | AREA, 0,5-1,0 MM2 NLS - USE 8522591 | X | Cable terminal | Kabelsko | 5 |
| 8A | 85 16 817 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 9 | 85 30 099 | | ELECTRIC MIRROR, CENTRAL LOCK REAR | X | Contact housing<br>4-pole, female | Kontakthus<br>4-polig, hylsa | 4 |
| 9A | 85 22 583 | | AREA, 0,8-3,4 MM2 | X | Cable terminal | Kabelsko | 5 |
| 9A | *85 03 153* | | AREA, 0,5-1,0 MM2 NLS - USE 8522583 | X | Cable terminal | Kabelsko | 5 |
| 10 | 95 03 434 | | JOINT PIECE, ELECTRICAL MIRROR | X | Contact housing<br>4-pole, female | Kontakthus<br>4-polig, hylsa | 4 |
| 10A | 78 74 498 | | | X | Connection | Skarv | 5 |
| 11 | 85 90 192 | | SWITCH SPEED CONTROL | X | Contact housing<br>4-pole, female | Kontakthus<br>4-polig, hylsa | 4 |
| 11A | 85 22 583 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 12 | 85 16 890 | | WINDSHIELD WIPER MOTOR | X | Contact housing<br>5-pole, female | Kontakthus<br>5-polig, hylsa | 4 |
| 12A | 85 22 567 | | AREA, 0,25-1,6 MM2 | X | Cable terminal | Kabelsko | 5 |

MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-B20

## *Contact housing etc* 1987

## *Kontakthus etc* 1987

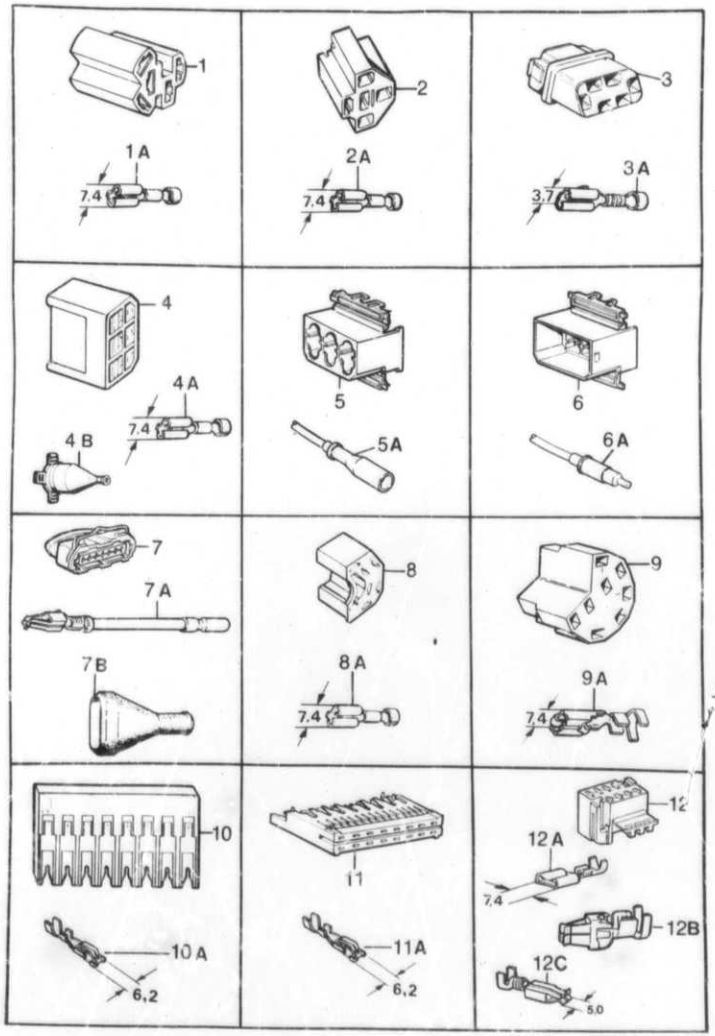


F2520 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qt/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | 85 44 397 | | SWITCH HEATING FAN | X | Contact housing<br>5-pole, female | Kontakthus<br>5-polig, hylsa | 4 |
| 1A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 2 | 85 33 697 | | RELAY COOLING FAN, RESISTOR HEATING FAN, SPEED CONTROL, TIME RELAY INTERIOR, RELAY WINDOW REGULATOR, RELAY FLASHER, IGNITION LOCK, JOINT PIECE, RELAY SPEED CONTROL | X | Contact housing<br>5-pole, female | Kontakthus<br>5-polig, hylsa | 4 |
| 2A | *85 82 454* | | AREA, 0,5-1,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 2A | *85 82 397* | | AREA, 1,2-2,5 MM2 NLS | X | Cable terminal | Kabelsko | 5 |
| 3 | 85 40 569 | | SWITCH ELECTRIC MIRROR | X | Contact housing<br>6-pole, female | Kontakthus<br>6-polig, hylsa | 4 |
| 3A | *85 09 846* | | AREA, 0,5-1,4 MM2 NLS - USE 8522575 | X | Cable terminal | Kabelsko | 5 |
| 4 | 85 52 200 | | PARKING LIGHT, DIRECTION LIGHT | X | Contact housing<br>5-pole, female | Kontakthus<br>6-polig, hylsa | 4 |
| 4A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 4B | 85 52 721 | | | X | Cable protection | Kabelskydd | 4 |
| 5 | 95 03 475 | | JOINT PIECE | X | Contact housing<br>6-pole, female | Kontakthus<br>6-polig, hylsa | 4 |
| 5A | 78 74 498 | | | X | Connection | Skarv | 5 |
| 6 | 95 06 668 | | JOINT PIECE | X | Contact housing<br>6-pole, male | Kontakthus<br>6-polig, stift | 4 |
| 6A | 78 74 506 | | | X | Connection | Skarv | 5 |
| 7 | 85 93 949 | | ELECTRONIC UNIT IGNITION SYSTEM | X | Contact housing<br>7-pole, female | Kontakthus<br>7-polig, hylsa | 4 |
| 7A | 85 22 617 | | AREA, 1,0-2,6 MM2 | X | Cable terminal | Kabelsko | 5 |
| 7B | 85 74 048 | | | X | Protection | Skydd | 4 |
| 8 | 85 33 705 | | SWITCH WINDSHIELD WIPER | X | Contact housing<br>7-pole, female | Kontakthus<br>7-polig, hylsa | 4 |
| 8A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 8A | 79 68 068 | | AREA, 4,0-6,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 9 | 85 44 363 | | SWITCH LIGHT | X | Contact housing<br>8-pole, female | Kontakthus<br>8-polig, hylsa | 4 |
| 9A | *85 41 203* | | AREA, 0,5-1,5 MM2 NLS - USE 8560476 | X | Cable terminal | Kabelsko | 5 |
| 9A | 85 41 211 | | AREA, 2,5-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 10 | 85 68 735 | | SN, TAIL LIGHT | X | Contact housing<br>8-pole, female | Kontakthus<br>8-polig, hylsa | 4 |
| 10A | 85 68 768 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 11 | 85 68 842 | | FOR 8567735, TAIL LIGHT | X | Contact housing<br>8-pole, female | Kontakthus<br>8-polig, hylsa | 4 |
| 11A | 85 68 768 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-B22

## *Contact housing etc*
*1987*

## *Kontakthus etc*
*1987*

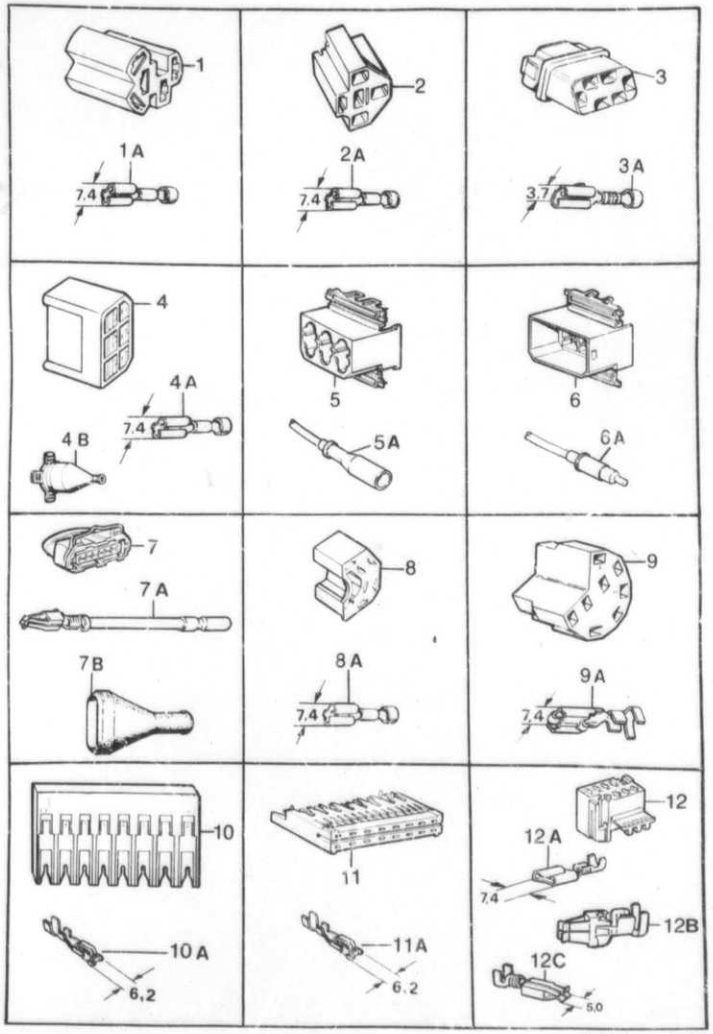


F2520 - 900


| 0650 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0560 | 12 | 91 24 090 | | MOTOR PASSIVE SEAT BELT, | X | Contact housing | Kontakthus | 4 |
| 0570 | | | | ELECTRONIC UNIT CENTRAL | | 8-pole, female | 8-polig, hylsa | |
| 0580 | | | | LOCK, CONTROL UNIT ANTI | | | | |
| 0590 | | | | THEFT ALARM,EL-SUN ROOF, | | | | |
| 0600 | | | | JOINT PIECE | | | | |
| 0610 | 12A | 79 71 708 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0620 | 12A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - | X | Cable terminal | Kabelsko | 5 |
| 0630 | 12B | 91 20 783 | | USE 8522534<br>AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0640 | 12B | 91 20 775 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0650 | 12B | 91 20 791 | | AREA, 2,5-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0660 | 12C | 91 20 767 | | AREA, 4,0-6,0 MM2 | X | Cable terminal | Kabelsko | 5 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

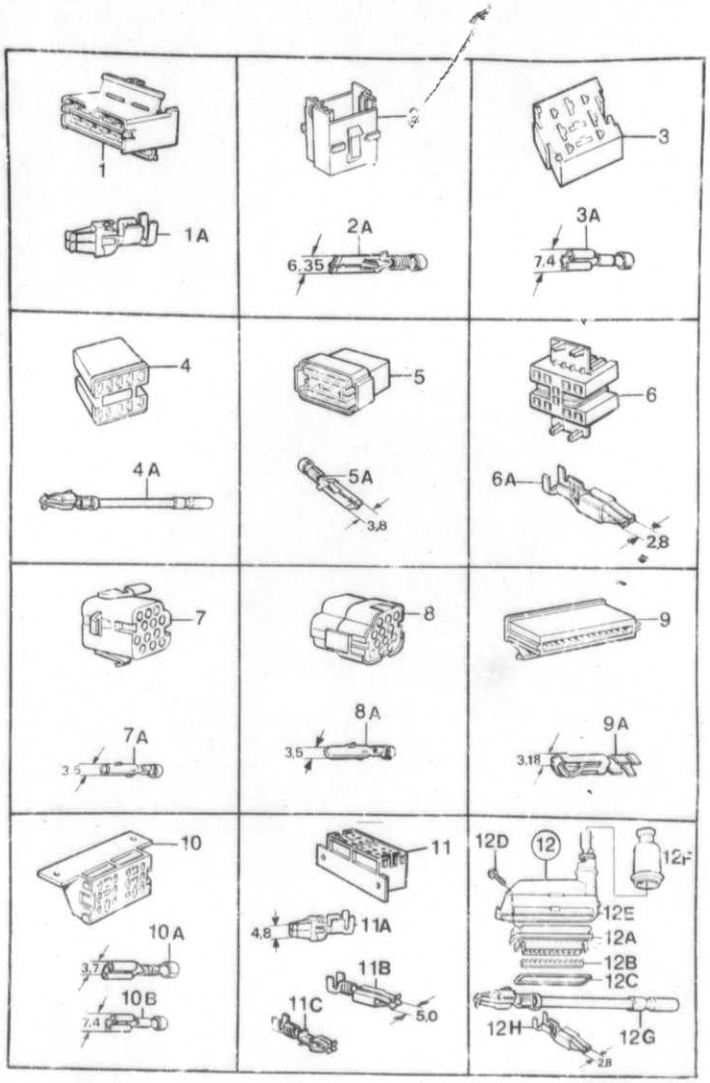


F2521 - 900

Wiring and fuses

# 3--B24 Contact housing etc 1987

Ledningar och säkringar

## Kontakthus etc 1987

| 0700 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 85 33 655 | | ELECTRONIC UNIT SPEED CONTROL | X | Contact housing<br>8-pole, female | Kontakthus<br>8-polig, hylsa | 4 |
| 0030 | 1A | 91 20 783 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0050 | 2 | 91 24 181 | | JOINT PIECE | X | Contact housing<br>8-pole, male | Kontakthus<br>8-polig, stift | 4 |
| 0070 | 2A | 85 93 089 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0090 | 3 | 85 71 390 | | SPEED RELAY, JOINT PIECE COWL, JOINT PIECE | X | Bracket<br>9-pole, female | Hållare<br>9-polig, hylsa | 4 |
| 0110 | 3A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 0130 | 4 | 85 44 371 | | JOINT PIECE, | X | Connector housing<br>10-pole, female | Skarvhus<br>10-polig, hylsa | 4 |
| 0150 | 4A | 85 22 617 | | AREA, 1,0-2,6 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0170 | 5 | 91 22 557 | | RADIO, JOINT PIECE | X | Connector housing<br>10-pole, male | Skarvhus<br>10-polig, stift | 4 |
| 0190 | 5A | *95 52 126* | | REA, 0,50-1,0 MM2 NLS - USE 9552100 | X | Cable terminal | Kabelsko | 5 |
| 0200 | 5A | 95 52 100 | | AREA, 0,75-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0220 | 6 | 91 23 399 | | JOINT PIECE, RADIO, REAR DEMIST, SWITCH FLASHER, SWITCH FOG LIGHT | X | Connector housing<br>10-pole, female | Skarvhus<br>10-polig, hylsa | 4 |
| 0250 | 6A | *95 08 706* | | AREA, 0,5-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 0260 | 6A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 0270 | 6A | *95 08 714* | | AREA, 0,3-0,6 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 0280 | 6A | *95 08 748* | | AREA, 1,5-2,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 0300 | 7 | 85 53 497 | | COWL | X | Connector housing<br>12-pole, female | Skarvhus<br>12-polig, hylsa | 4 |
| 0320 | 7A | 85 44 298 | | AREA, 0,5-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0330 | 7A | 85 44 306 | | AREA, 2,0-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0350 | 8 | 85 53 505 | | COWL | X | Contact housing<br>12-pole, male | Kontakthus<br>12-polig, stift | 4 |
| 0370 | 8A | *85 44 314* | | AREA, 0,5-2,0 MM2 NLS - USE 8582603 | X | Cable terminal | Kabelsko | 5 |
| 0380 | 8A | 85 44 322 | | AREA, 2,0-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0400 | 9 | 85 44 348 | | INSTRUMENTS | X | Contact housing<br>14-pole, female | Kontakthus<br>14-polig, hylsa | 4 |
| 0420 | 9A | 85 60 278 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0440 | 10 | 85 51 665 | | FLASHER | X | Contact housing<br>18-pole, female | Kontakthus<br>18-polig, hylsa | 4 |
| 0460 | 10A | *85 09 846* | | AREA, 0,5-1,4 MM2 NLS - USE 8522575 | X | Cable terminal | Kabelsko | 5 |
| 0470 | 10B | 79 71 708 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0490 | 10B | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 0500 | 11 | 91 24 199 | | MAIN RELAY, RELAY FUEL PUMP, PASSIVE SEAT BELT, TIME RELAY, FLASHER INTERVAL RELAY, COWL | X | Contact housing<br>18-pole, female | Kontakthus<br>18-polig, hylsa | 4 |
| 0540 | 11A | 91 20 783 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0550 | 11A | 91 20 791 | | AREA, 2,5-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0560 | 11B | 95 21 972 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |

MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 5-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-C02

## *Contact housing etc* *1987*

## *Kontakthus etc* *1987*

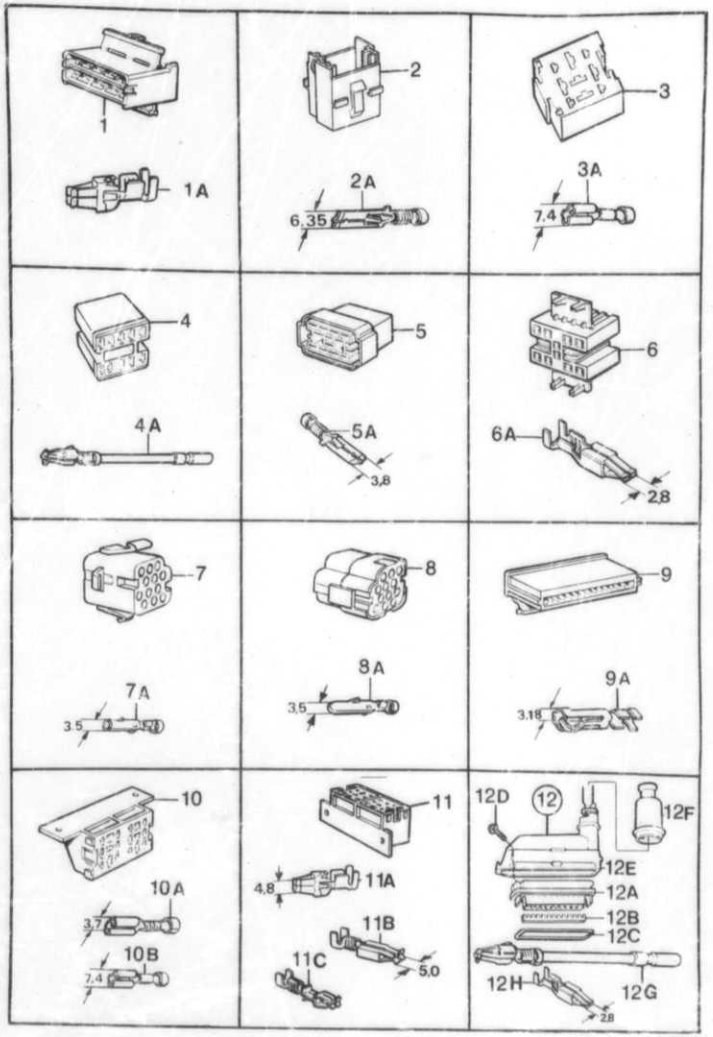


F2521 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 11B | 91 20 775 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 11B | *95 21 980* | | AREA, 1,5-2,5 MM2 NLS - USE 9120783 | X | Cable terminal | Kabelsko | 5 |
| 11C | 95 21 998 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 11C | *95 08 706* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 12 | 85 86 802 | | APC | X | Contact housing 25-pole, female | Kontakthus 25-polig, hylsa | 4 |
| 12A | 85 87 420 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 12B | 85 87 438 | | 1) | 1 | .Striker plate | .Låsbleck | 5 |
| 12C | 85 87 453 | | 1) | 1 | .Seal | .Tätning | 5 |
| 12D | 85 87 487 | | 1) | 1 | .Screw | .Skruv | 5 |
| 12E | 85 87 503 | | 1) | 1 | .Cover | .Kåpa | 4 |
| 12F | 85 87 511 | | 1) | 1 | .Rubber protection | .Gummiskydd | 4 |
| 12G | 85 22 617 | | AREA, 1,0-2,6 MM2 | X | Cable terminal | Kabelsko | 5 |
| 12H | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |

1. Not as separate spare part. Ej som separat reservdel.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

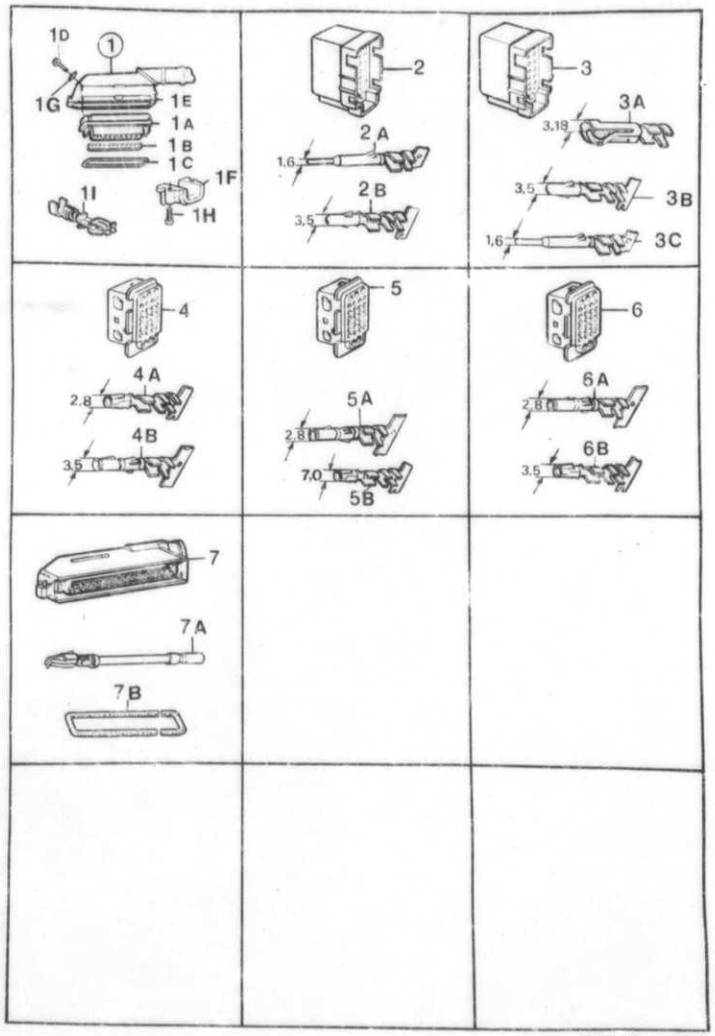


F2522 - 900

| 0750 | Pos | Part No/Art nr | S | Notes/Anmärkningar | Qty/Antal | Description | Benämning | S |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 95 63 081 | | ELECTRONIC UNIT PASSIVE SEAT BELT | X | Contact housing<br>25-pole, female | Kontakthus<br>25-polig, hylsa | 4 |
| 0030 | 1A | 85 87 420 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 0040 | 1B | 85 87 438 | | 1) | 1 | .Striker plate | .Låsbleck | 5 |
| 0050 | 1C | 85 87 453 | | 1) | 1 | .Seal | .Tätning | 5 |
| 0060 | 1D | 85 87 487 | | 1) | 1 | .Screw | .Skruv | 5 |
| 0070 | 1E | 85 87 412 | | 1) | 1 | .Cover | .Kåpa | 4 |
| 0080 | 1F | 85 87 495 | | 1) | 1 | .Bracket | .Hållare | 4 |
| 0090 | 1G | 85 87 461 | | 1) | 1 | .Seal | .Tätning | 5 |
| 0100 | 1H | 79 71 351 | | | 2 | .Screw | .Skruv | 5 |
| 0110 | 1I | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 0130 | 2 | 85 44 215 | | COWL, WHITE | X | Contact housing<br>29-pole, male | Kontakthus<br>29-polig stift | 4 |
| 0150 | 2A | 85 93 964 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0160 | 2A | *85 44 314* | | AREA, 0,5-2,0 MM2 NLS - USE 8582603 | X | Cable terminal | Kabelsko | 5 |
| 0170 | 2B | 85 44 322 | | AREA, 2,0-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0190 | 3 | 85 44 231 | | COWL, RED | X | Contact housing<br>29-pole, male | Kontakthus<br>29-polig stift | 4 |
| 0210 | 3A | 85 60 278 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0220 | 3B | 85 44 322 | | AREA, 2,0-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0230 | 3C | 85 93 956 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0240 | 3C | 85 93 964 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0260 | 4 | 85 44 249 | | COWL BLACK, INSTRUMENTS | X | Contact housing<br>29-pole, female | Kontakthus<br>29-polig, hylsa | 4 |
| 0280 | 4A | *85 21 726* | | AREA, 0,5-1,5 MM2 NLS - USE 8567075 | X | Cable terminal | Kabelsko | 5 |
| 0290 | 4B | 85 82 595 | | AREA, 0,5-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0300 | 4B | 85 44 306 | | AREA, 2,0-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0320 | 5 | 85 44 207 | | COWL WHITE, FUSE BOX | X | Contact housing<br>29-pole, female | Kontakthus<br>29-polig, hylsa | 4 |
| 0340 | 5A | 85 87 560 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0350 | 5B | 85 87 552 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0370 | 6 | 85 44 223 | | COWL RED, FUSE BOX | X | Contact housing<br>29-pole, female | Kontakthus<br>29-polig, hylsa | 4 |
| 0390 | 6A | 85 87 560 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0400 | 6B | 85 44 298 | | AREA, 0,5-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0410 | 6B | 85 44 306 | | AREA, 2,0-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0430 | 7 | 85 39 363 | | ELECTRONIC UNIT LAMBDA | X | Contact housing<br>35-pole, female | Kontakthus<br>35-polig, hylsa | 4 |
| 0450 | 7A | 85 22 617 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0460 | 7B | 95 64 204 | | | X | Seal | Tätning | 5 |

1. Not as separate spare part. Ej som separat reservdel.




**MASTER INDEX**

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

**3B GROUP INDEX**

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

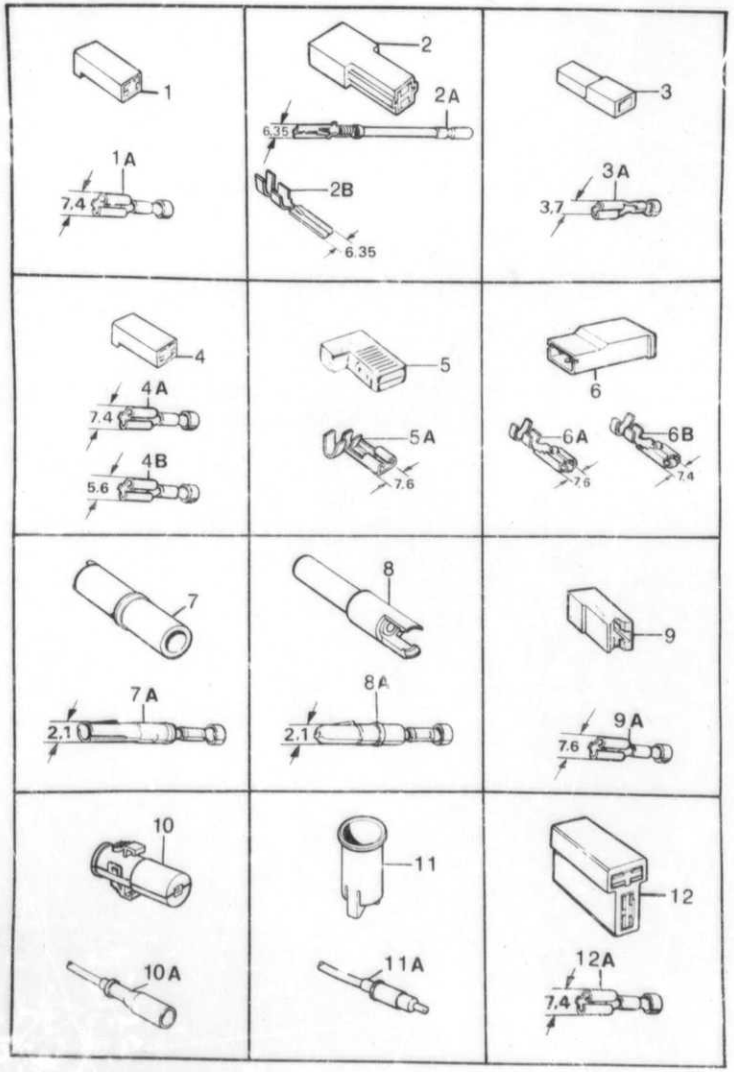


F1980 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | 71 55 112 | | JOINT PIECE, RELAY FUEL PUMP, IDLE COMPENSATOR, EL-WINDOW REGULATOR, FUSE BOX | X | Contact housing<br>1-pole, female | Kontakthus<br>1-polig, hylsa | 4 |
| 1A | 79 71 708 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 1A | *85 83 379* | | AREA, 0,5-1,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 3 |
| 1A | *85 82 454* | | AREA, 0,5-1,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 1A | *71 55 153* | | AREA, 0,8-2,1 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 2 | 71 55 120 | | JOINT PIECE, APC, PUMP RELAY, FUSE BOX, EL-PAD, EL-HEATED MIRROR | X | Contact housing<br>1-pole, male | Kontakthus<br>1-polig, stift | 4 |
| 2A | 85 22 542 | | AREA, 1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 2B | 85 82 637 | | AREA, 0,8-2,1 MM2 | X | Cable terminal | Kabelsko | 5 |
| 3 | 85 30 115 | | LOUDSPEAKER | X | Contact housing<br>1-pole, male | Kontakthus<br>1-polig, stift | 4 |
| 3A | 85 30 107 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 3 |
| 4 | 85 33 184 | | LOUDSPEAKER, STARTER, JOINT PIECE | X | Contact housing<br>1-pole, male | Kontakthus<br>1-polig, stift | 4 |
| 4A | 85 30 107 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 3 |
| 4B | *85 33 028* | | AREA, 0,5-1,5 MM2 NLS - USE 8582439 | X | Cable terminal | Kabelsko | 3 |
| 4B | 85 82 439 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 5 | 85 21 692 | | WINDOW REGULATOR, THROTTLE SENSOR AC, IGNITION COIL, THERMO SWITCH, JOINT PIECE, IGNITION LOCK, IDLE COMPENSATION | X | Contact housing<br>1-pole, female | Kontakthus<br>1-polig, hylsa | 4 |
| 5A | *85 21 676* | | AREA, 0,5-1,5 MM2 NLS - USE 8522526 | X | Cable terminal | Kabelsko | 5 |
| 5A | *85 82 421* | | AREA, 0,5-1,5 MM2 NLS - USE 8522526 | X | Cable terminal | Kabelsko | 5 |
| 5A | *85 21 684* | | AREA, 1,0-2,5 MM2 NLS - USE 8522526 | X | Cable terminal | Kabelsko | 5 |
| 6 | 85 41 229 | | JOINT PIECE, LUGGAGE COMPARTMENT LIGHT, TAIL LIGHT, ALTERNATOR, MAIN SWITCH | X | Sleeve<br>1-pole, male | Isoleringshylsa<br>1-polig, stift | 5 |
| 6A | *85 41 203* | | AREA, 0,5-1,0 MM2 NLS - USE 8560476 | X | Cable terminal | Kabelsko | 5 |
| 6B | *85 82 405* | | AREA, 0,5-1,5 MM2 NLS - USE 8560476 | X | Cable terminal | Kabelsko | 5 |
| 6B | 85 41 211 | | AREA, 2,5-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 7 | 85 16 932 | | JOINT PIECE | X | Contact housing<br>1-pole, female | Kontakthus<br>1-polig, hylsa | 4 |
| 7A | 85 22 583 | | AREA, 0,8-3,4 MM2 | X | Cable terminal | Kabelsko | 5 |
| 8 | 85 16 940 | | GEAR BOX A, JOIN PIECE | X | Contact housing<br>1-pole, male | Kontakthus<br>1-polig, stift | 4 |
| 8A | *85 03 161* | | AREA, 0,5-1,0 MM2 NLS - USE 8522591 | X | Cable terminal | Kabelsko | 5 |
| 9 | 85 21 544 | | JOINT PIECE, STARTER | X | Contact housing<br>1-pole, female | Kontakthus<br>1-polig, hylsa | 4 |
| 9A | *85 59 205* | | AREA, 4,0-6,0 MM2 NLS | X | Cable terminal | Kabelsko | 5 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-C08

## *Contact housing etc*
*1988*

## *Kontakthus etc*
*1988*

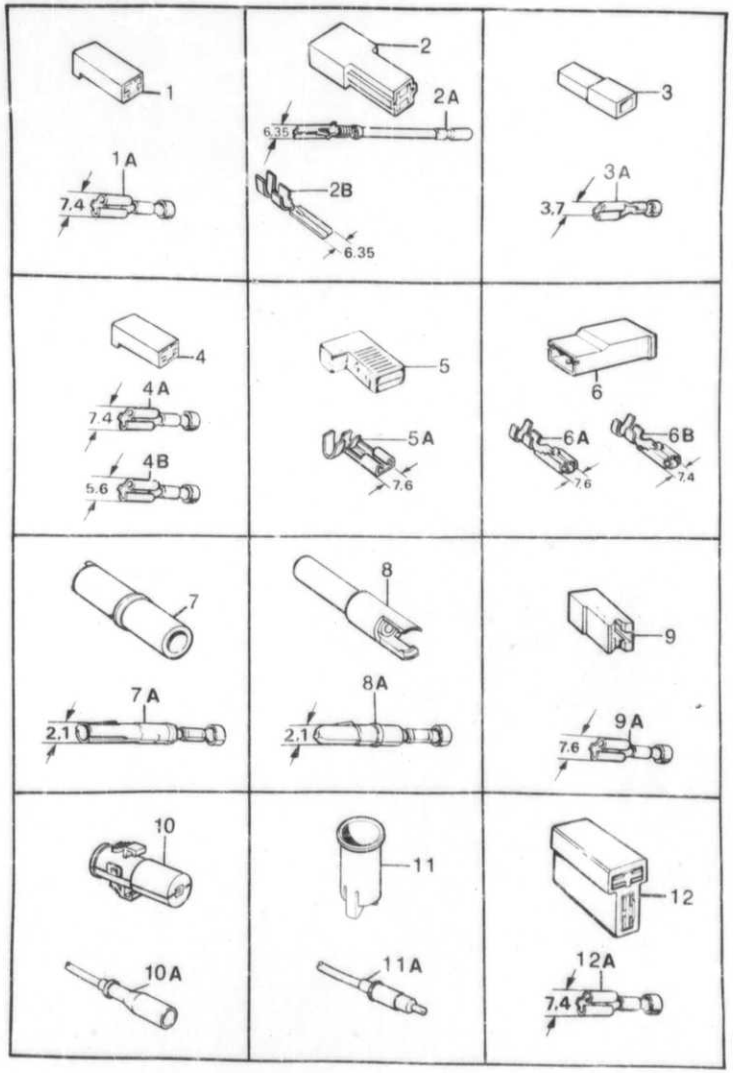


F1980 - 900

| 0800 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0560 | 10 | 95 03 418 | | JOINT PIECE, AC COMPRES- | X | Connector housing | Skarvhus | 4 |
| 0570 | | | | SOR | | 1-pole, female | 1-polig, hylsa | |
| 0580 | 10A | 78 71 498 | | | X | Connection | Skarv | 5 |
| 0590 | | | | | | | | |
| 0600 | 11 | 95 03 426 | | JOINT PIECE, EL-HEATED | X | Connector housing | Skarvhus | 4 |
| 0610 | | | | MIRROR | | 1-pole, male | 1-polig, stift | |
| 0620 | 11A | 78 74 506 | | | X | Connection | Skarv | 5 |
| 0630 | | | | | | | | |
| 0640 | 12 | 71 55 096 | | ASH TRAY, JOINT PIECE, | X | Connector housing | Skarvhus | 4 |
| 0650 | | | | SPOTLIGHT | | 2-pole, female | 2-polig, hylsa | |
| 0660 | 12A | *71 55 153* | | AREA, 0,8-2,1 MM2 NLS - | X | Cable terminal | Kabelsko | 5 |
| 0660 | | | | USE 8522534 | | | | |
| 0670 | 12A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - | X | Cable terminal | Kabelsko | 5 |
| 0670 | | | | USE 8522534 | | | | |
| 0680 | 12A | *85 82 454* | | AREA, 0,5-1,5 MM2 NLS - | X | Cable terminal | Kabelsko | 5 |
| 0680 | | | | USE 8522534 | | | | |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-C10

## Contact housing etc
1988

## Kontakthus etc
1988

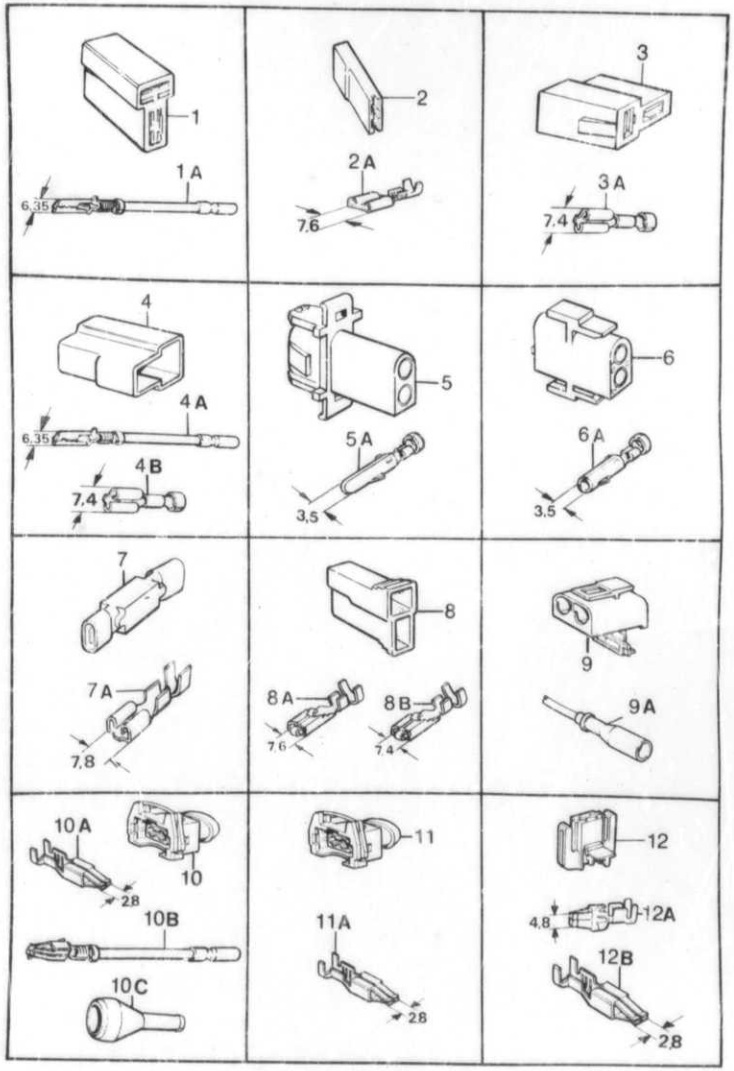


F1981 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | 71 55 104 | | JOINT PIECE | X | Contact housing<br>2-pole, male | Kontakthus<br>2-polig, stift | 4 |
| 1A | 85 22 542 | | AREA, 1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 2 | 85 16 916 | | JOINT PIECE, BRAKE LIGHT SWITCH, BACK-UP LIGHT, THERMO SWITCH, STARTER, VACUUM SWITCH, SOLENOID VALVE IDLE COMPENSATION, FUSE, THEFT ALARM, ELECTRONIC UNIT SPEED CONTROL, PRESSURE SWITCH AC, CYCLE THERMOSTAT | X | Insulation<br>2-pole, female | Isolering<br>2-polig, hylsa | 4 |
| 2A | 85 14 036 | | AREA, 0,3-0,8 MM2 | X | Cable terminal | Kabelsko | 5 |
| 2A | *85 14 028* | | AREA, 0,3-0,8 MM2 NLS - USE 7155716 | X | Cable terminal | Kabelsko | 5 |
| 2A | 71 55 716 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 2A | *71 55 039* | | AREA, 1,0-2,5 MM2 NLS | X | Cable terminal | Kabelsko | 5 |
| 2A | *85 59 205* | | AREA, 4,0-6,0 MM2 NLS | X | Cable terminal | Kabelsko | 5 |
| 3 | 85 58 538 | | FUEL PUMP, FUSE BOX | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 3A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 3A | 79 68 068 | | AREA, 4,0-6,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 4 | 85 58 546 | | JOINT PIECE, FUSE BOX | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 4A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 4A | 85 22 542 | | AREA, 1,0-2,6 MM2 | X | Cable terminal | Kabelsko | 5 |
| 4B | 85 16 957 | | AREA, 4,0-6,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 5 | 85 61 623 | | JOINT PIECE, ELECTRIC PAD, NUMBER PLATE LIGHT, CENTRAL LOCK | X | Contact housing<br>2-pole, male | Kontakthus<br>2-polig, stift | 4 |
| 5A | *85 44 314* | | AREA, 0,5-2,0 MM2 NLS - USE 8582603 | X | Cable terminal | Kabelsko | 5 |
| 5A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 6 | 85 61 631 | | JOINT PIECE, ELECTRIC PAD | X | Connector housing<br>2-pole, male | Skarvhus<br>2-polig, stift | 4 |
| 6A | 85 44 298 | | AREA, 0,5-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 7 | 85 30 966 | | DIOD HOLDER | X | Diode<br>2-pole, male | Diod<br>2-polig, stift | 5 |
| 7A | 71 55 716 | | AREA, 0,4-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 8 | 85 74 949 | | CIGARETTE LIGHTER | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 8A | *85 41 203* | | AREA, 0,5-1,5 MM2 NLS - USE 8560476 | X | Cable terminal | Kabelsko | 5 |
| 8B | 85 60 476 | | AREA, 0,9-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 8B | 85 41 211 | | AREA, 2,5-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 9 | 95 03 319 | | JOINT PIECE, VACUUM SWITCH APC, AC FAN MOTOR, WASHER MOTOR, SOLENOID VALVE AC, MOTOR COOLING FAN, BRAKE FLUID LEVEL, FUEL PUMP, WINDOW REGULATOR FRONT | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 9A | 78 74 498 | | | X | Connection | Skarv | 5 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-C12

## Contact housing etc
1988

## Kontakthus etc
1988

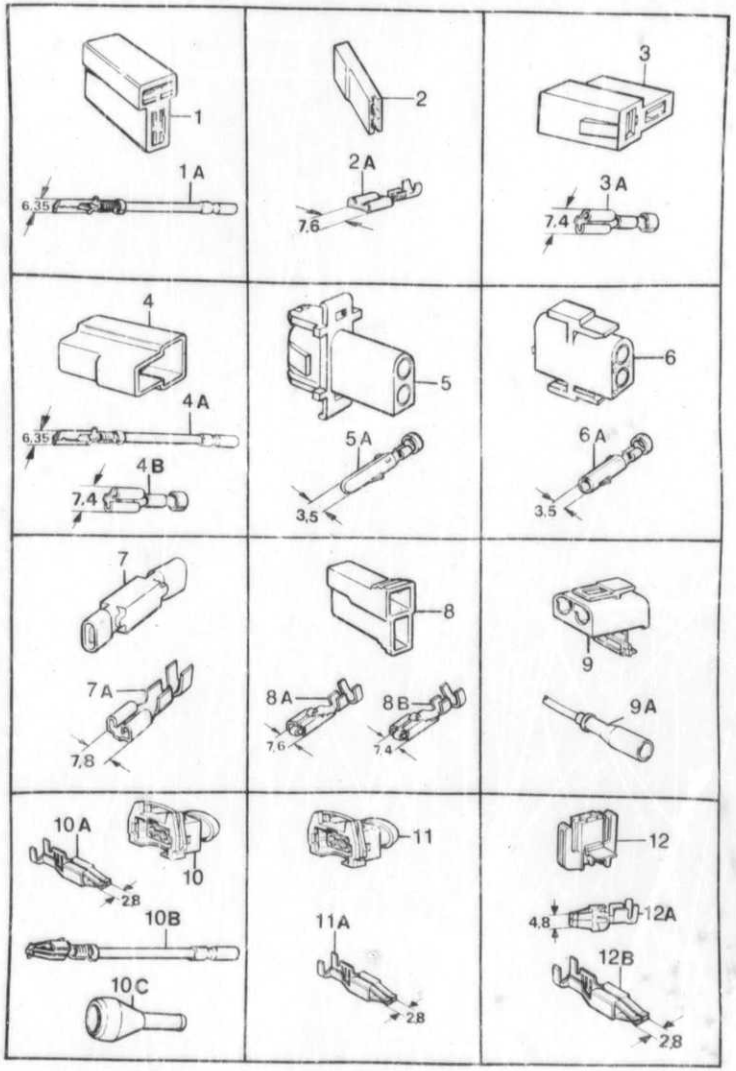


F1981 - 900

| 0650 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0600 | 10 | 85 93 899 | | AUXILIARY AIR VALVE, | X | Contact housing | Kontakthus | 4 |
| 0610 | | | | THERMO TIME SWITCH, | | 2-pole, female | 2-polig, hylsa | |
| 0620 | | | | GIUDE PRESSURE VALVE, | | | | |
| 0630 | | | | STARTER VALVE, INJECTION | | | | |
| 0640 | | | | VALVE, JOINT PIECE, FUEL | | | | |
| 0650 | | | | SHUT OFF VALVE, TIMING | | | | |
| 0660 | | | | VALVE | | | | |
| 0670 | 10A | *91 20 668* | | AREA, 0,75,-1,5 MM2 NLS | X | Cable terminal | Kabelsko | 5 |
| 0670 | | | | - USE 9120957 | | | | |
| 0680 | 10B | 85 22 617 | | AREA, 1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0690 | 10C | 85 71 382 | | | X | Protection | Skydd | 4 |
| 0700 | | | | | | | | |
| 0710 | 11 | 85 93 915 | | JOINT PIECE TEMP SENSOR, | X | Contact housing | Kontakthus | 4 |
| 0720 | | | | INTERIOR LIGHT | | 2-pole, female | 2-polig, hylsa | |
| 0730 | 11A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - | X | Cable terminal | Kabelsko | 5 |
| 0730 | | | | USE 9120957 | | | | |
| 0740 | | | | | | | | |
| 0750 | 12 | 91 24 157 | | JOINT PIECE, SWITCH, | X | Contact housing | Kontakthus | 4 |
| 0760 | | | | EL-ANTENNA | | 2-pole, female | 2-polig, hylsa | |
| 0770 | 12A | 91 20 775 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0780 | 12A | 91 20 791 | | AREA, 2,5-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0790 | 12B | 91 20 783 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-C14

## Contact housing etc
1988

## Kontakthus etc
1988

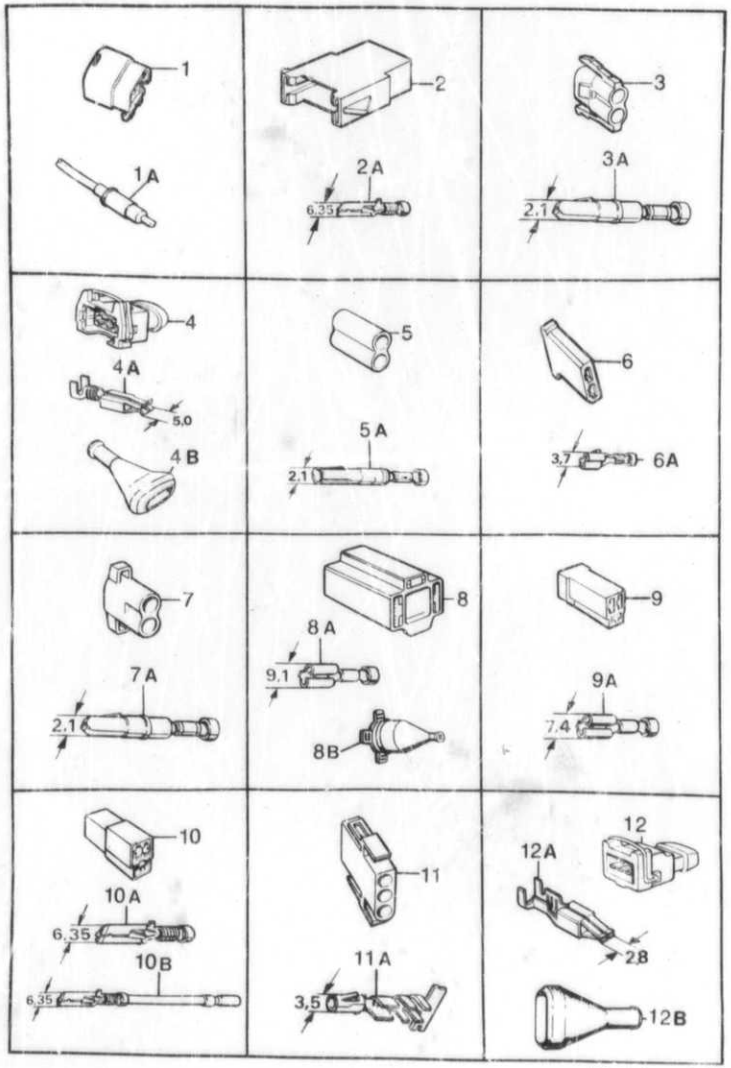


F1982 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | 95 01 685 | | JOINT PIECE | X | Contact housing<br>2-pole, male | Kontakthus<br>2-polig, stift | 4 |
| 1A | 78 74 506 | | | X | Connection | Skarv | 5 |
| 2 | *95 02 998* | | IGNITION PULS, CHECK ENGINE, JOINT PIECE, FUSE BOX NLS - USE 4069829 | X | Contact housing<br>2-pole, male | Kontakthus<br>2-polig, stift | 4 |
| 2A | *71 55 062* | | AREA, 0,8-2,5 MM2 NLS - USE 8522542 | X | Cable terminal | Kabelsko | 5 |
| 2A | 85 16 957 | | AREA, 4,0-6,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 3 | 85 04 771 | | BRAKE PEDAL SPEED CONTROL, CLUTCH PEDAL SPEED CONTROL | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 3A | 85 22 583 | | AREA, 0,8-3,4 MM2 | X | Cable terminal | Kabelsko | 5 |
| 4 | 85 97 064 | | KNOCK SENSOR | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 4A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 4B | 85 71 382 | | | X | Protection | Skydd | 4 |
| 5 | 85 53 869 | | SENSOR SPEED CONTROL | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 5A | 85 22 583 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 6 | 83 78 630 | | PEDALS SPEED CONTROL | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 6A | *85 09 846* | | AREA, 0,5-1,4 MM2 NLS - USE 8522575 | X | Cable terminal | Kabelsko | 5 |
| 7 | *85 04 789* | | PEDALS SPEED CONTROL NLS | X | Contact housing<br>2-pole, male | Kontakthus<br>2-polig, stift | 4 |
| 7A | 85 16 817 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 8 | 71 55 021 | | HEADLIGHT | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 5 |
| 8A | 85 82 413 | | AREA, 1,3-3,4 MM2 | X | Cable terminal | Kabelsko | 5 |
| 8B | 85 52 721 | | | X | Cable protection | Kabelskydd | 4 |
| 9 | 73 42 892 | | LIMP-HOME, JOINT PIECE | X | Connector housing<br>3-pole, female | Skarvhus<br>3-polig, hylsa | 4 |
| 9A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 10 | 73 42 900 | | WINDOW REGULATOR REAR, INTERIOR LIGHT | X | Connector housing<br>3-pole, male | Skarvhus<br>3-polig, stift | 4 |
| 10A | 85 16 957 | | AREA, 4,0-6,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 10B | 85 22 542 | | AREA, 1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 11 | 85 64 916 | | REAR DEMIST | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 11A | 85 44 298 | | AREA, 0,5-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 12 | 85 93 907 | | DISTRIBUTOR,JOINT PIECE, THROTTLE SWITCH | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 12A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 12B | 85 79 955 | | | X | Protection | Skydd | 4 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-C16

## Contact housing etc
1988

## Kontakthus etc
1988

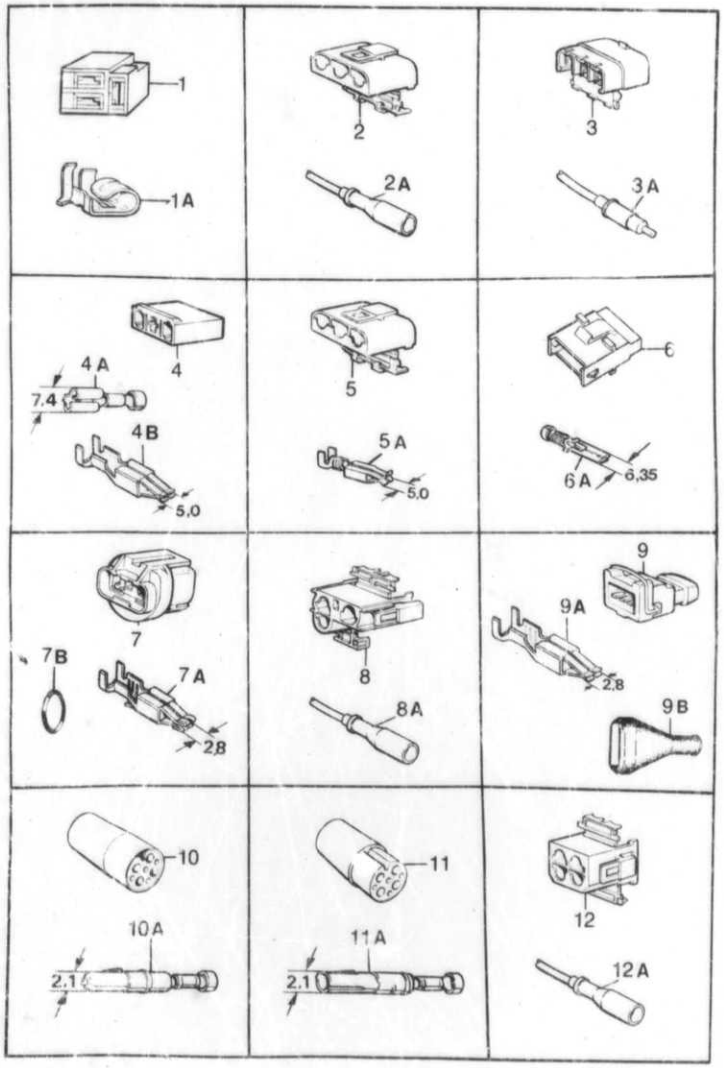


F1983 - 900

| 0950 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 85 82 116 | | FUEL TANK TRANSMITTER | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 0020 | | | | | | | | |
| 0030 | 1A | 85 82 090 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0040 | | | | | | | | |
| 0050 | 2 | 95 03 277 | | SPEED CONTROL, HEADLIGHT WIPERS, CENTRAL LOCK FRONT | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 0060 | | | | | | | | |
| 0070 | | | | | | | | |
| 0080 | 2A | 78 74 498 | | | X | Connection | Skarv | 5 |
| 0090 | | | | | | | | |
| 0100 | 3 | 95 03 327 | | JOINT PIECE | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 0110 | | | | | | | | |
| 0120 | 3A | 78 74 506 | | | X | Connection | Skarv | 5 |
| 0130 | | | | | | | | |
| 0140 | 4 | 95 07 658 | | JOINT PIECE | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 0150 | | | | | | | | |
| 0160 | 4A | 85 60 476 | | AREA, 0,9-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0170 | 4B | 95 21 972 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0180 | 4B | *35 21 980* | | AREA, 1,5-2,5 MM2 NLS - USE 9120783 | X | Cable terminal | Kabelsko | 5 |
| 0190 | 4B | 91 20 791 | | AREA, 2,5-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0200 | | | | | | | | |
| 0210 | 5 | 91 24 165 | | JOINT PIECE | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 0220 | | | | | | | | |
| 0230 | 5A | 95 21 972 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0240 | 5A | 91 20 791 | | AREA, 2,5-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0250 | | | | | | | | |
| 0260 | 6 | 95 03 012 | | JOINT PIECE, EL-PAD | X | Contact housing<br>3-pole, male | Kontakthus<br>3-polig, stift | 4 |
| 0270 | | | | | | | | |
| 0280 | 6A | *71 55 062* | | AREA, 0,5-1,0 MM2 NLS - USE 8522542 | X | Cable terminal | Kabelsko | 5 |
| 0280 | | | | | | | | |
| 0290 | 6A | *71 55 062* | | AREA, 0,8-2,5 MM2 NLS - USE 8522542 | X | Cable terminal | Kabelsko | 5 |
| 0290 | | | | | | | | |
| 0300 | | | | | | | | |
| 0310 | 7 | 95 14 803 | | HEAD LIGHT US, JOINT PIECE | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 0320 | | | | | | | | |
| 0330 | 7A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 0330 | | | | | | | | |
| 0340 | 7B | 95 14 811 | | | X | Protection | Skydd | 4 |
| 0350 | | | | | | | | |
| 0360 | 8 | 95 19 679 | | PARKING LIGHT, DIRECTION LIGHT,SIDE BACK-UP LIGHT | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 0370 | | | | | | | | |
| 0380 | 8A | 78 74 498 | | | X | Connection | Skarv | 5 |
| 0390 | | | | | | | | |
| 0400 | 9 | 85 93 923 | | JOINT PIECE IDLE COMPENSATION | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 0410 | | | | | | | | |
| 0420 | 9A | *91 20 668* | | REA, 0,75-1 5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 0420 | | | | | | | | |
| 0430 | 9B | 85 79 955 | | | X | Protection | Skydd | 4 |
| 0440 | | | | | | | | |
| 0450 | 10 | 85 30 081 | | CENTRAL LOCK, JOINT PIECE | X | Contact housing<br>4-pole, male | Kontakthus<br>4-polig, stift | 4 |
| 0460 | | | | | | | | |
| 0470 | 10A | *85 03 161* | | AREA, 0,5-1,0 MM2 NLS - USE 8522591 | X | Cable terminal | Kabelsko | 5 |
| 0470 | | | | | | | | |
| 0480 | 10A | 85 16 817 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0490 | | | | | | | | |
| 0500 | 11 | 85 30 099 | | ELECTRIC MIRROR, CENTRAL LOCK REAR | X | Contact housing<br>4-pole, female | Kontakthus<br>4-polig, hylsa | 4 |
| 0510 | | | | | | | | |
| 0520 | 11A | 85 22 583 | | AREA, 0,8-3,4 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0530 | 11A | *85 03 153* | | AREA, 0,5-1,0 MM2 NLS - USE 8522583 | X | Cable terminal | Kabelsko | 5 |
| 0530 | | | | | | | | |
| 0540 | | | | | | | | |
| 0550 | 12 | 95 03 434 | | JOINT PIECE, ELECTRICAL MIRROR | X | Contact housing<br>4-pole, female | Kontakthus<br>4-polig, hylsa | 4 |
| 0560 | | | | | | | | |
| 0570 | 12A | 78 74 498 | | | X | Connection | Skarv | 5 |

MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-C18

## Contact housing etc
1988

## Kontakthus etc
1988

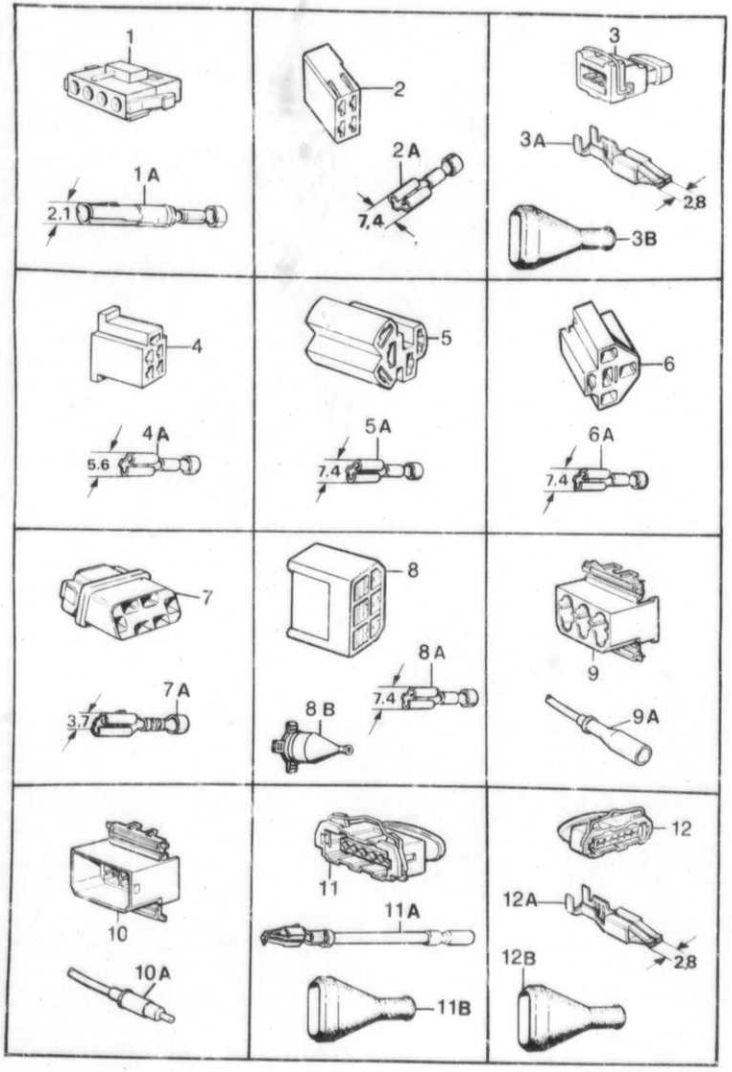


F1984 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | 85 90 192 | | SWITCH SPEED CONTROL | X | Contact housing<br>4-pole, female | Kontakthus<br>4-polig, hylsa | 4 |
| 1A | 85 22 583 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 2 | 85 21 536 | | JOINT PIECE | X | Contact housing<br>4-pole, female | Kontakthus<br>4-polig, hylsa | 4 |
| 2A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 3 | 95 61 333 | | POWER STAGE | X | Contact housing<br>4-pole, female | Kontakthus<br>4-polig, hylsa | 4 |
| 3A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 3B | 95 61 341 | | | X | Protection | Skydd | 4 |
| 4 | 85 16 890 | | WINDSHIELD WIPER MOTOR | X | Contact housing<br>5-pole, female | Kontakthus<br>5-polig, hylsa | 4 |
| 4A | 85 82 447 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 5 | 85 44 397 | | SWITCH HEATING FAN | X | Contact housing<br>5-pole, female | Kontakthus<br>5-polig, hylsa | 4 |
| 5A | 79 68 068 | | AREA, 4,0-6,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 6 | 85 33 697 | | RELAY COOLING FAN, RESISTOR HEATING FAN, SPEED CONTROL, TIME RELAY INTERIOR, RELAY WINDOW REGULATOR, RELAY FLASHER, IGNITION LOCK, JOINT PIECE, RELAY SPEED CONTROL, RELAY DIM-DIP, RELAY CONVERTIBLE | X | Contact housing<br>5-pole, female | Kontakthus<br>5 polig, hylsa | 4 |
| 6A | *85 82 454* | | AREA, 0,5-1,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 6A | *85 82 397* | | AREA, 1,2-2,5 MM2 NLS | X | Cable terminal | Kabelsko | 5 |
| 7 | 85 40 569 | | SWITCH ELECTRIC MIRROR | X | Contact housing<br>6-pole, female | Kontakthus<br>6-polig, hylsa | 4 |
| 7A | *85 09 846* | | AREA, 0,5-1,4 MM2 NLS - USE 8522575 | X | Cable terminal | Kabelsko | 5 |
| 8 | 85 52 200 | | PARKING LIGHT, DIRECTION LIGHT | X | Contact housing<br>6-pole, female | Kontakthus<br>6-polig, hylsa | 4 |
| 8A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 8B | 85 52 721 | | | X | Cable protection | Kabelskydd | 4 |
| 9 | 95 03 475 | | JOINT PIECE | X | Contact housing<br>6-pole, female | Kontakthus<br>6-polig, hylsa | 4 |
| 9A | 78 74 498 | | | X | Connection | Skarv | 5 |
| 10 | 95 06 668 | | JOINT PIECE | X | Contact housing<br>6-pole, male | Kontakthus<br>6-polig, stift | 4 |
| 10A | 78 74 506 | | | X | Connection | Skarv | 5 |
| 11 | 85 93 931 | | AIR MESS METER LH, JOINT PIECE | X | Contact housing<br>6-pole, female | Kontakthus<br>6-polig, hylsa | 4 |
| 11A | 85 22 617 | | AREA, 1,0-2,6 MM2 | X | Cable terminal | Kabelsko | 5 |
| 11B | 85 82 082 | | | X | Protection | Skydd | 4 |
| 12 | 85 93 949 | | ELECTRONIC UNIT IGNITION SYSTEM | X | Contact housing<br>7-pole, female | Kontakthus<br>7-polig, hylsa | 4 |
| 12A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 12B | 85 74 048 | | | X | Protection | Skydd | 4 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-C20

## *Contact housing etc*
*1988*

## *Kontakthus etc*
*1988*

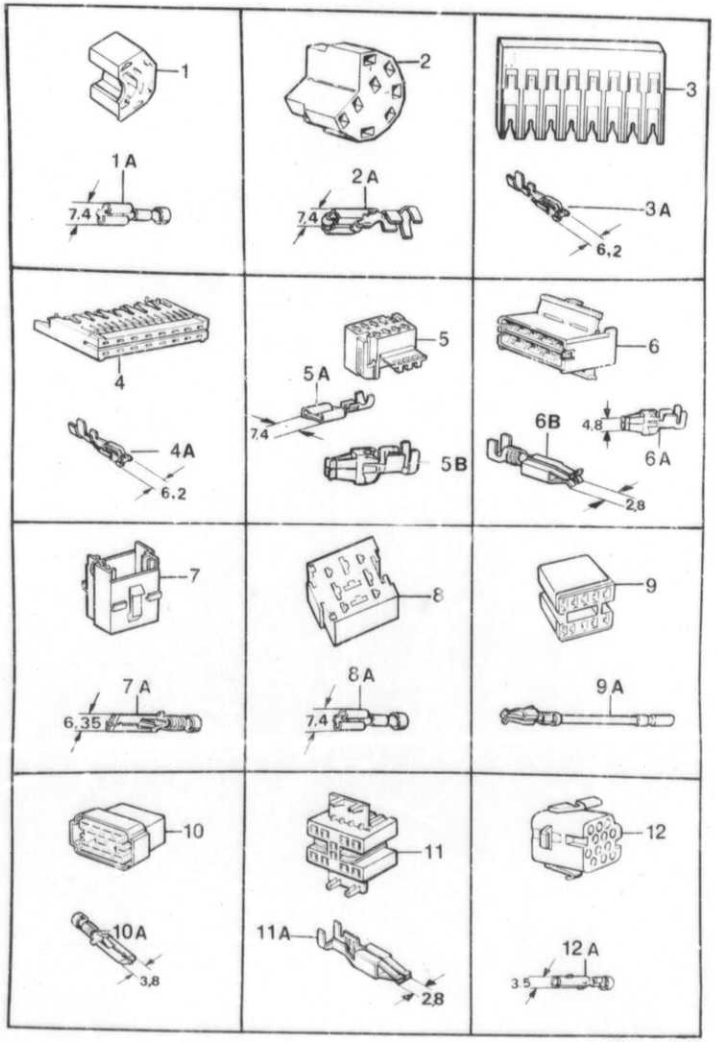


F2523 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | 85 33 705 | | SWITCH WINDSHIELD WIPER | X | Contact housing<br>3-pole, female | Kontakthus<br>7-polig, hylsa | 4 |
| 1A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 1A | 79 68 068 | | AREA, 4,0-6,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 2 | 85 44 363 | | SWITCH LIGHT | X | Contact housing<br>8-pole, female | Kontakthus<br>8-polig, hylsa | 4 |
| 2A | *85 41 203* | | AREA, 0,5-1,5 MM2 NLS - USE 8560476 | X | Cable terminal | Kabelsko | 5 |
| 2A | 85 41 211 | | AREA, 2,5-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 3 | 85 68 735 | | SN, TAIL LIGHT | X | Contact housing<br>8-pole, female | Kontakthus<br>8-polig, hylsa | 4 |
| 3A | 85 68 768 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 4 | 85 68 842 | | FOR 8568735, TAIL LIGHT | X | Contact housing<br>8-pole, female | Kontakthus<br>8-polig, hylsa | 4 |
| 4A | 85 68 768 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 5 | 91 24 090 | | CONTROL UNIT THEFT ALARM SWITCH WINDOW REGULATOR, EL-SUN ROOF, JOINT PIECE | X | Contact housing<br>8-pole, female | Kontakthus<br>8-polig, hylsa | 4 |
| 5A | 79 71 708 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 5A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 5B | 91 20 783 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 5B | 91 20 775 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 5B | 91 20 791 | | AREA, 2,5-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 6 | 85 33 655 | | ELECTRONIC UNIT SPEED CONTROL | X | Contact housing<br>8-pole, female | Kontakthus<br>8-polig, hylsa | 4 |
| 6A | 91 20 783 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 6B | 91 20 775 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 7 | 91 24 181 | | JOINT PIECE | X | Contact housing<br>8-pole, male | Kontakthus<br>8-polig, stift | 4 |
| 7A | 85 93 089 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 8 | 85 71 390 | | SPEED RELAY, JOINT PIECE COWL, JOINT PIECE | X | Bracket<br>9-pole, female | Hållare<br>9-polig, hylsa | 4 |
| 8A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 9 | 85 44 371 | | JOINT PIECE | X | Connector housing<br>10-pole, female | Skarvhus<br>10-polig, hylsa | 4 |
| 9A | 85 22 617 | | AREA, 1,0-2,6 MM2 | X | Cable terminal | Kabelsko | 5 |
| 10 | 91 22 557 | | RADIO, JOINT PIECE | X | Connector housing<br>10-pole, male | Skarvhus<br>10-polig, stift | 4 |
| 10A | *95 52 126* | | REA, 0,50-1,0 MM2 NLS - USE 9552100 | X | Cable terminal | Kabelsko | 5 |
| 10A | 95 52 100 | | AREA, 0,75-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 11 | 91 23 399 | | JOINT PIECE, RADIO, REAR DEMIST, SWITCH FLASHER, SWITCH FOG LIGHT, SWITCH RECIRCULATION, SWITCH AC | X | Connector housing<br>10-pole, female | Skarvhus<br>10-polig, hylsa | 4 |
| 11A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 11A | *95 08 714* | | AREA, 0,3-0,6 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 12 | 85 53 497 | | COWL | X | Connector housing<br>12-pole, female | Skarvhus<br>12-polig, hylsa | 4 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A0 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Bo 'v. heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-C22

## *Contact housing etc* / *Kontakthus etc*

*1988* / *1988*

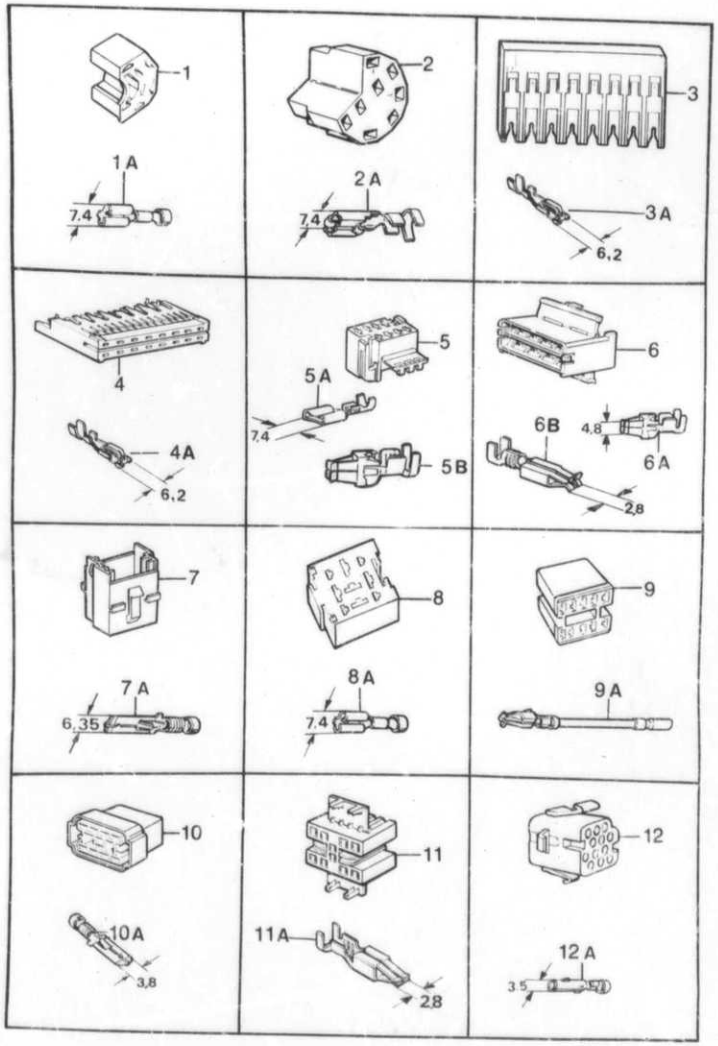


P2523 - 900


| 1050 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0590 | 12A | 85 44 298 | | AREA, 0,5-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0600 | 12A | 85 44 306 | | AREA, 2,0-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |

MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

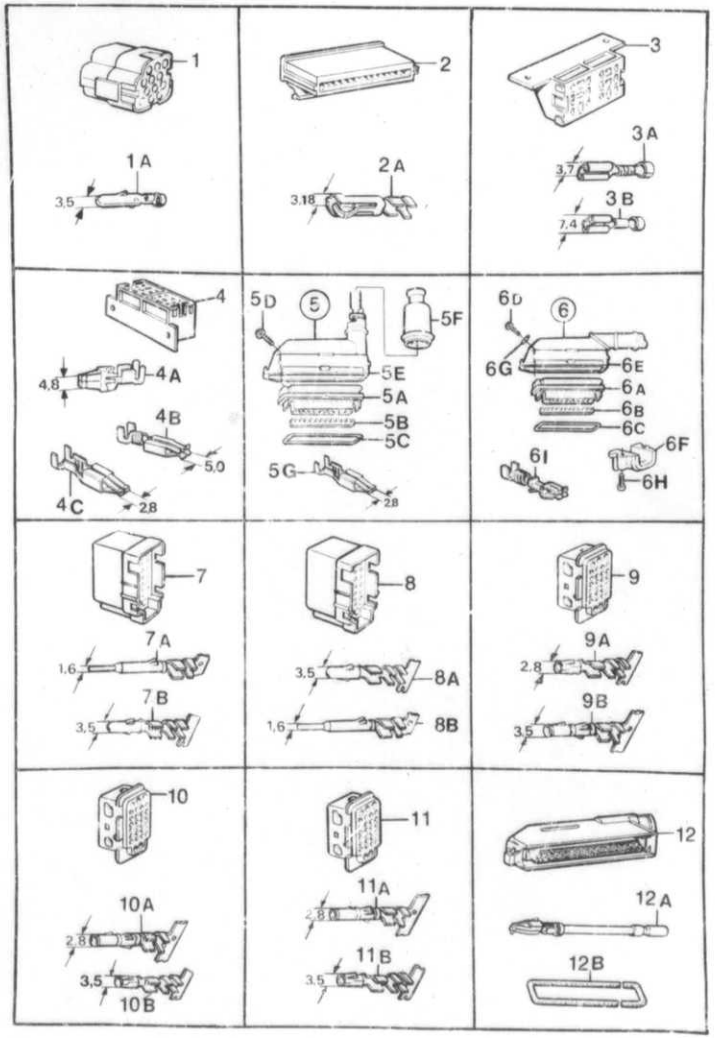


F2524 - 900

| 1100 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 85 53 505 | | COWL | X | Contact housing 12-pole, male | Kontakthus 12-polig, stift | 4 |
| 0020 | | | | | | | | |
| 0030 | 1A | *85 44 314* | | AREA, 0,5-2,0 MM2 NLS - USE 8582603 | X | Cable terminal | Kabelsko | 5 |
| 0040 | | | | | | | | |
| 0050 | 2 | 85 44 348 | | INSTRUMENTS | X | Contact housing 14-pole, female | Kontakthus 14-polig, hylsa | 4 |
| 0060 | | | | | | | | |
| 0070 | 2A | 85 60 278 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0080 | | | | | | | | |
| 0090 | 3 | 85 51 665 | | FLASHER | X | Contact housing 18-pole, female | Kontakthus 18-polig, hylsa | 4 |
| 0100 | | | | | | | | |
| 0110 | 3A | *85 09 846* | | AREA, 0,5-1,4 MM2 NLS - USE 8522575 | X | Cable terminal | Kabelsko | 5 |
| 0110 | | | | | | | | |
| 0120 | 3B | 79 71 708 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0130 | 3C | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 0130 | | | | | | | | |
| 0140 | | | | | | | | |
| 0150 | 4 | 91 24 199 | | MAIN RELAY, RELAY FUEL PUMP, TIME RELAY, COWL, FLASHER, INTERVAL RELAY | X | Contact housing 18-pole, female | Kontakthus 18-polig, hylsa | 4 |
| 0170 | | | | | | | | |
| 0180 | 4A | 91 20 783 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0190 | 4B | 95 21 972 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0200 | 4C | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 0200 | | | | | | | | |
| 0210 | | | | | | | | |
| 0220 | 5 | 85 86 802 | | APC, EZK | X | Contact housing 25-pole, female | Kontakthus 25-polig, hylsa | 4 |
| 0230 | | | | | | | | |
| 0240 | 5A | 85 87 420 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 0250 | 5B | 85 87 438 | | 1) | 1 | .Striker plate | .Låsbleck | 5 |
| 0260 | 5C | 85 87 453 | | 1) | 1 | .Seal | .Tätning | 5 |
| 0270 | 5D | 85 87 487 | | 1) | 1 | .Screw | .Skruv | 5 |
| 0280 | 5E | 85 87 503 | | 1) | 1 | .Cover | .Kåpa | 4 |
| 0290 | 5F | 85 87 511 | | 1) | 1 | .Rubber protection | .Gummiskydd | 4 |
| 0300 | 5G | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 0300 | | | | | | | | |
| 0310 | | | | | | | | |
| 0320 | 6 | 95 63 081 | | ELECTRONIC UNIT PASSIVE SEAT BELT | X | Contact housing 25-pole, female | Kontakthus 25-polig, hylsa | 4 |
| 0330 | | | | | | | | |
| 0340 | 6A | 85 87 420 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 0350 | 6B | 85 87 438 | | 1) | 1 | .Striker plate | .Låsbleck | 5 |
| 0360 | 6C | 85 87 453 | | 1) | 1 | .Seal | .Tätning | 5 |
| 0370 | 6D | 85 87 487 | | 1) | 1 | .Screw | .Skruv | 5 |
| 0380 | 6E | 85 87 412 | | 1) | 1 | .Cover | .Kåpa | 4 |
| 0390 | 6F | 85 87 495 | | 1) | 1 | .Bracket | .Hållare | 4 |
| 0400 | 6G | 85 87 461 | | 1) | 1 | .Seal | .Tätning | 5 |
| 0410 | 6H | 79 71 351 | | | 2 | .Screw | .Skruv | 5 |
| 0420 | 6I | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 0420 | | | | | | | | |
| 0430 | | | | | | | | |
| 0440 | 7 | 85 44 215 | | COWL, WHITE | X | Contact housing 29-pole, male | Kontakthus 29-polig stift | 4 |
| 0450 | | | | | | | | |
| 0460 | 7A | 85 93 964 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0470 | 7A | *85 44 314* | | AREA, 0,5-2,0 MM2 NLS - USE 8582603 | X | Cable terminal | Kabelsko | 5 |
| 0470 | | | | | | | | |
| 0480 | 7B | 85 44 322 | | AREA, 2,0-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0490 | | | | | | | | |
| 0500 | 8 | 85 44 231 | | COWL, RED | X | Contact housing 29-pole, male | Kontakthus 29-polig stift | 4 |
| 0510 | | | | | | | | |
| 0520 | 8A | 85 44 322 | | AREA, 2,0-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0530 | 8B | 85 93 956 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0540 | 8B | 85 93 964 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0550 | | | | | | | | |

1. Not as separate spare part. Ej som separat reservdel.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-D02

## *Contact housing etc*
*1988*

## *Kontakthus etc*
*1988*

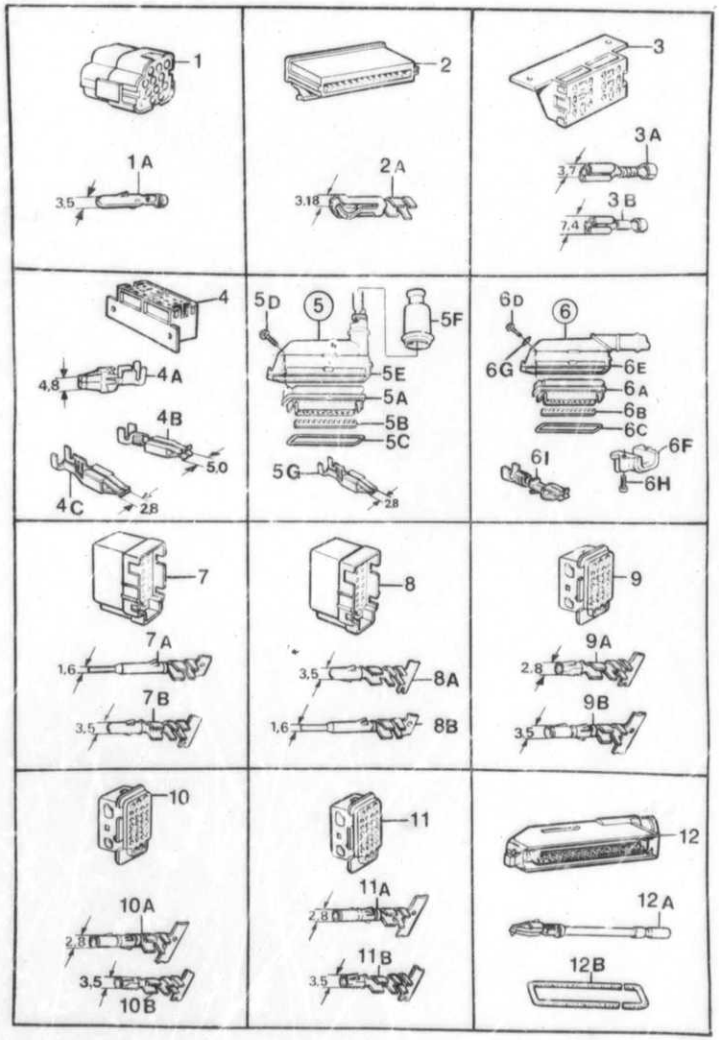


F2524 - 900

| 1100 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0560 | 9 | 85 44 249 | | INSTRUMENTS | X | Contact housing | Kontakthus | 4 |
| 0570 | | | | | | 29-pole, female | 29-polig, hylsa | |
| 0580 | 9A | *85 21 726* | | AREA, 0,5-1,5 MM2 NLS - USE 8567075 | X | Cable terminal | Kabelsko | 5 |
| 0590 | 9B | 85 87 595 | | AREA, 0,5-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0600 | | | | | | | | |
| 0610 | 10 | 85 44 207 | | FUSE BOX | X | Contact housing | Kontakthus | 4 |
| 0620 | | | | | | 29-pole, female | 29-polig, hylsa | |
| 0630 | 10A | 85 87 560 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0640 | 10B | 85 87 552 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0650 | 10B | 85 44 306 | | AREA, 2,0-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0660 | | | | | | | | |
| 0670 | 11 | 85 44 223 | | FUSE BOX | X | Contact housing | Kontakthus | 4 |
| 0680 | | | | | | 29-pole, female | 29-polig, hylsa | |
| 0690 | 11A | 85 87 560 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0700 | 11B | 85 44 298 | | AREA, 0,5-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0710 | 11B | 85 44 306 | | AREA, 2,0-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0720 | | | | | | | | |
| 0730 | 12 | 85 39 363 | | ELECTRONIC UNIT LAMBDA | X | Contact housing | Kontakthus | 4 |
| 0740 | | | | | | 35-pole, female | 35-polig, hylsa | |
| 0750 | 12A | 85 22 617 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0760 | 12B | 95 64 204 | | | X | Seal | Tätning | 5 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-D04

## *Contact housing etc*
*1988*

## *Kontakthus etc*
*1988*

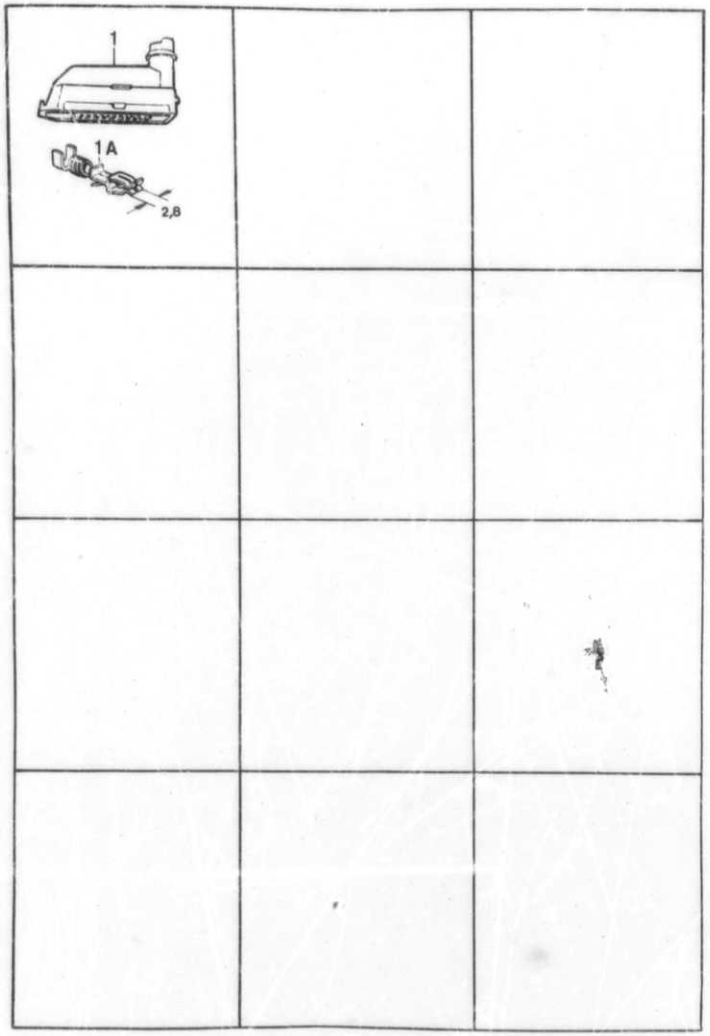


F2525 - 900


| 1150 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 95 61 093 | | ELECTRONIC UNIT LH | X | Contact housing | Kontakthus | 4 |
| 0020 | | | | | | 35-pole, female | 35-polig, hylsa | |
| 0030 | 1A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 0030 | | | | | | | | |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| '0 | Numerical register | 7-E02 |

3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

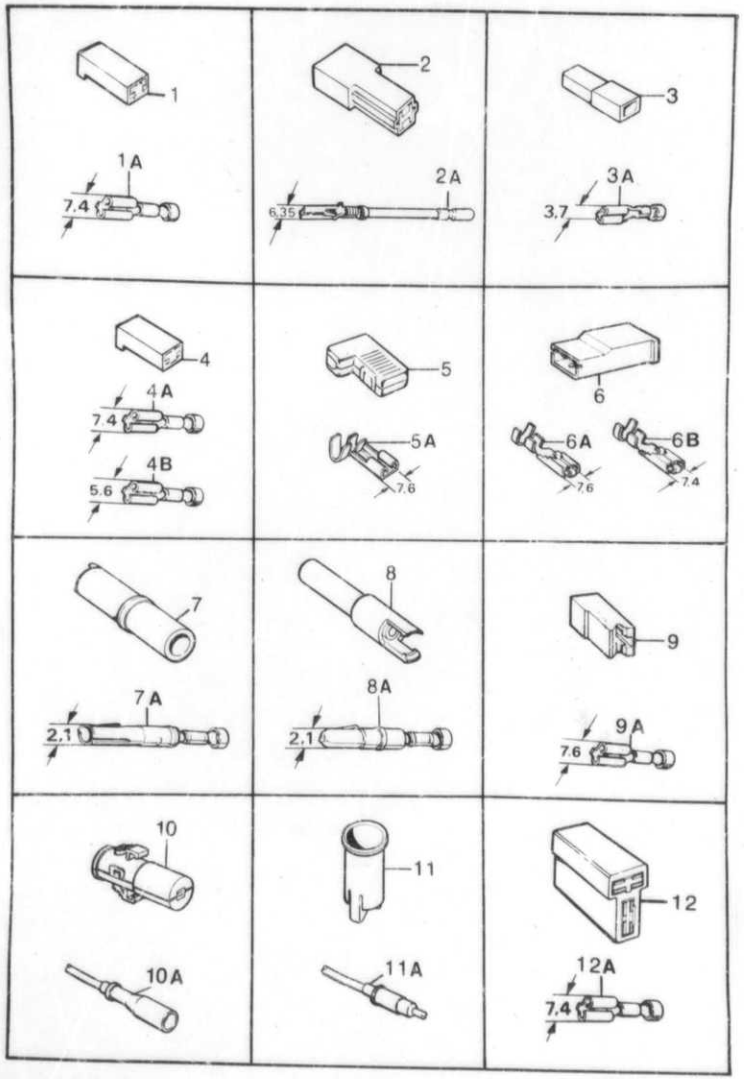


F1987 - 900

Wiring and fuses

# 3-D06

## *Contact housing etc*

*1989*

Ledningar och säkringar

## *Kontakthus etc*

*1989*

| 1200 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 71 55 112 | | REAR DEMIST, FUSE BOX, | X | Contact housing | Kontakthus | 4 |
| 0020 | | | | EL-WINDOW REGULATOR, | | 1-pole, female | 1-polig, hylsa | |
| 0030 | | | | BELT-KEY WARNING, BRAKE | | | | |
| 0040 | | | | PEDAL SWITCH SPEED | | | | |
| 0050 | | | | CONTROL | | | | |
| 0060 | 1A | 79 71 708 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0070 | 1A | *85 83 379* | | AREA, 0,5-1,5 MM2 NLS - | X | Cable terminal | Kabelsko | 3 |
| 0070 | | | | USE 8522534 | | | | |
| 0080 | 1A | *71 55 153* | | AREA, 0,8-2,1 MM2 NLS - | X | Cable terminal | Kabelsko | 5 |
| 0080 | | | | USE 8522534 | | | | |
| 0090 | | | | | | | | |
| 0100 | 2 | 71 55 120 | | APC, FUSE BOX, EL-PAD, | X | Contact housing | Kontakthus | 4 |
| 0110 | | | | EL-HEATED MIRROR, | | 1-pole, male | 1-polig, stift | |
| 0120 | | | | BY-PASS A, JOINT PIECE | | | | |
| 0130 | | | | CABLE NETWORK DOOR/REAR, | | | | |
| 0140 | | | | CABLE NETWORK NUMBER- | | | | |
| 0150 | | | | PLATE, BRAKE LIGHT, | | | | |
| 0160 | | | | RELAY LIGHT, DIM LIGHT | | | | |
| 0170 | | | | EL-CENTRAL, SPEED CONT- | | | | |
| 0180 | | | | ROL, | | | | |
| 0190 | 2A | 85 22 542 | | AREA, 1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0200 | | | | | | | | |
| 0210 | 3 | 85 30 115 | | LOUDSPEAKER | X | Contact housing | Kontakthus | 4 |
| 0220 | | | | | | 1-pole, male | 1-polig, stift | |
| 0230 | 3A | 85 30 107 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 3 |
| 0240 | | | | | | | | |
| 0250 | 4 | 85 33 184 | | LOUDSPEAKER, STARTER, | X | Contact housing | Kontakthus | 4 |
| 0260 | | | | | | 1-pole, male | 1-polig, stift | |
| 0270 | 4A | 85 30 107 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 3 |
| 0280 | 4B | *85 33 028* | | AREA, 0,5-1,5 MM2 NLS - | X | Cable terminal | Kabelsko | 3 |
| 0280 | | | | USE 85[illegible]2439 | | | | |
| 0290 | 4B | 85 82 439 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0300 | | | | | | | | |
| 0310 | 5 | 85 21 692 | | WINDOW REGULATOR, IDLE | X | Contact housing | Kontakthus | 4 |
| 0320 | | | | COMPENSATION, IGNITION | | 1-pole, female | 1-polig, hylsa | |
| 0330 | | | | COIL, THERMO SWITCH, | | | | |
| 0340 | | | | IGNITION LOCK, IDLE | | | | |
| 0350 | | | | COMPENSATION, SOLENOID | | | | |
| 0360 | | | | VALVE IDLE COMPENSATION | | | | |
| 0370 | | | | AC | | | | |
| 0380 | 5A | *85 21 676* | | AREA, 0,5-1,5 MM2 NLS - | X | Cable terminal | Kabelsko | 5 |
| 0380 | | | | USE 8522526 | | | | |
| 0390 | 5A | *85 82 421* | | AREA, 0,5-1,5 MM2 NLS - | X | Cable terminal | Kabelsko | 5 |
| 0390 | | | | USE 8522526 | | | | |
| 0400 | 5A | *85 21 684* | | AREA, 1,0-2,5 MM2 NLS - | X | Cable terminal | Kabelsko | 5 |
| 0400 | | | | USE 8522526 | | | | |
| 0410 | | | | | | | | |
| 0420 | 6 | 85 41 229 | | JOINT PIECE, LUGGAGE | X | Sleeve | Isoleringshylsa | 5 |
| 0430 | | | | COMPARTMENT LIGHT, TAIL | | 1-pole, male | 1-polig, stift | |
| 0440 | | | | LIGHT, ALTERNATOR, MAIN | | | | |
| 0450 | | | | SWITCH, THROTTLE HOUSE | | | | |
| 0460 | | | | VENTILATION, FUEL SHUT | | | | |
| 0470 | | | | OFF, SWITCH LUGGAGE | | | | |
| 0480 | | | | COMPARTMENT, BY-PASS A, | | | | |
| 0490 | | | | LIGHT GLOVE BOX, MAIN | | | | |
| 0500 | | | | SWITCH FAN, SWITCH AC, | | | | |
| 0510 | | | | SPEED CONTROL, LIGHT | | | | |
| 0520 | | | | ISTRUMENTS, SWITCH | | | | |
| 0530 | | | | CORNERING LIGHT, SWITCH | | | | |
| 0540 | | | | DIRECTION INDICATOR, | | | | |
| 0550 | | | | LIGHT NUMBER PLATE, | | | | |
| 0560 | 6A | *85 41 203* | | AREA, 0,5-1,0 MM2 NLS - | X | Cable terminal | Kabelsko | 5 |
| 0560 | | | | USE 8560476 | | | | |
| 0570 | 6B | *85 82 405* | | AREA, 0,5-1,5 MM2 NLS - | X | Cable terminal | Kabelsko | 5 |
| 0570 | | | | USE 8560476 | | | | |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-D08

## *Contact housing etc*
*1989*

## *Kontakthus etc*
*1989*

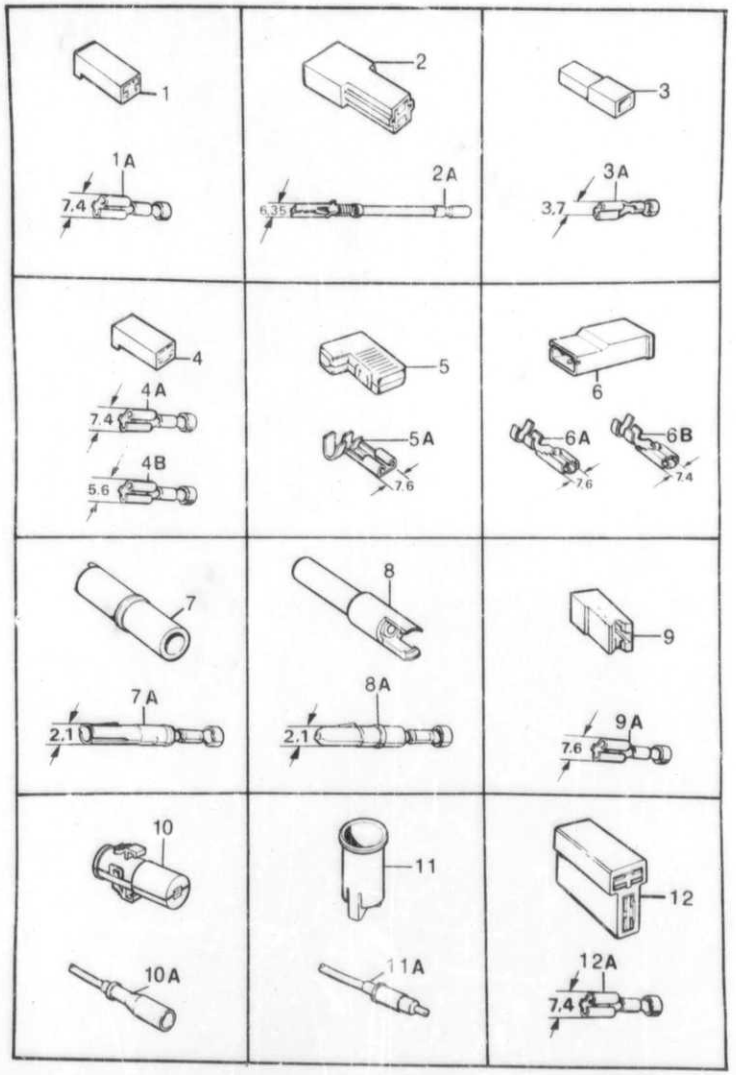


F1987 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 6B | 85 60 476 | | AREA, 0,7-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 6B | 85 41 211 | | AREA, 2,5-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 7 | 85 16 932 | | IDLE COMPENSATION, HIGH MOUNTED STOP LIGHT, REAR FOG LIGHT | X | Contact housing 1-pole, female | Kontakthus 1-polig, hylsa | 4 |
| 7A | 85 22 583 | | AREA, 0,8-3,4 MM2 | X | Cable terminal | Kabelsko | 5 |
| 8 | 85 16 940 | | GEAR BOX A, IDLE COMPENSATION A | X | Contact housing 1-pole, male | Kontakthus 1-polig, stift | 4 |
| 8A | *85 03 161* | | AREA, 0,5-1,0 MM2 NLS - USE 8522591 | X | Cable terminal | Kabelsko | 5 |
| 9 | 85 21 544 | | STARTER, REOSTAT EL-PAD | X | Contact housing 1-pole, female | Kontakthus 1-polig, hylsa | 4 |
| 9A | *85 59 205* | | AREA, 4,0-6,0 MM2 NLS | X | Cable terminal | Kabelsko | 5 |
| 10 | 95 03 418 | | AC COMPRESSOR, EL-HEATED MIRROR, JOINT PIECE FUEL PUMP | X | Connector housing 1-pole, female | Skarvhus 1-polig, hylsa | 4 |
| 10A | 78 74 498 | | | X | Connection | Skarv | 5 |
| 11 | 95 03 426 | | JOINT PIECE CABLE NETWORK AC | X | Connector housing 1-pole, male | Skarvhus 1-polig, stift | 4 |
| 11A | 78 74 506 | | | X | Connection | Skarv | 5 |
| 12 | 71 55 096 | | ASH TRAY, SPOTLIGHT, TEST CONNECTION LAMBDA, SWITCH BRAKE LIGHT, FAN, EL-SUN ROOF, COMBINED INSTRUMENT | X | Connector housing 2-pole, female | Skarvhus 2-polig, hylsa | 4 |
| 12A | *71 55 153* | | AREA, 0,8-2,1 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 12A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 12A | *85 82 454* | | AREA, 0,5-1,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

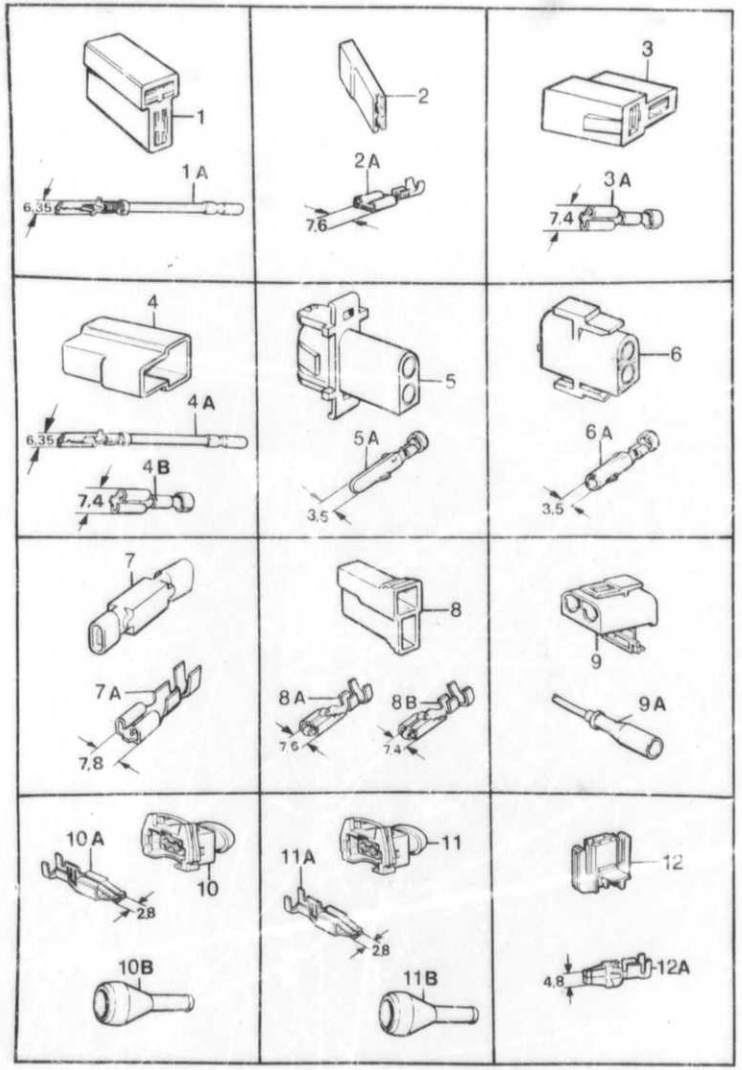


F1988 - 900



| 1250 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 71 55 104 | | JOINT PIECE TRUNK LID | X | Contact housing | Kontakthus | 4 |
| 0020 | | | | | | 2-pole, male | 2-polig, stift | |
| 0030 | 1A | 85 22 542 | | AREA, 1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0040 | | | | | | | | |
| 0050 | 2 | 85 16 916 | | BRAKE LIGHT SWITCH, | X | Insulation | Isolering | 4 |
| 0060 | | | | THERMO SWITCH, STARTER, | | 2-pole, female | 2-polig, hylsa | |
| 0070 | | | | VACUUM SWITCH, SOLENOID | | | | |
| 0080 | | | | VALVE IDLE COMPENSATION, | | | | |
| 0090 | | | | FUSE, THEFT ALARM, | | | | |
| 0100 | | | | ELECTRONIC UNIT SPEED | | | | |
| 0110 | | | | CONTROL, PRESSURE SWITCH | | | | |
| 0120 | | | | AC, OIL GUARD, PRESSURE | | | | |
| 0130 | | | | GUARD TURBO, PRESSURE | | | | |
| 0140 | | | | GUARD, SWITCH EGR, ANTI | | | | |
| 0150 | | | | FREES THERMOSTAT, VALVE | | | | |
| 0160 | | | | RECIRCULATION, TURBO | | | | |
| 0170 | | | | PRESSURE SENSOR, SWITCH | | | | |
| 0180 | | | | HAND BRAKE, LAMP BELT | | | | |
| 0190 | | | | WARNING, LIGHT IGNITION | | | | |
| 0200 | | | | LOCK, CHOKE CONTROL, | | | | |
| 0210 | | | | LIGHT CIGARETTE LIGHTER, | | | | |
| 0220 | | | | G-SENSOR, THERMOSTAT EL- | | | | |
| 0230 | | | | PAD, LIGHT CONTROLS, | | | | |
| 0240 | | | | JOINT PIECE INTERIOR | | | | |
| 0250 | | | | LIGHT, GEAR INDICATOR A, | | | | |
| 0260 | | | | SWITCH IDLE COMPENSATOR, | | | | |
| 0270 | | | | EARTH, IGNITION PULS | | | | |
| 0280 | 2A | 85 14 036 | | AREA, 0,3-0,8 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0290 | 2A | *85 14 028* | | AREA, 0,3-0,8 MM2 NLS - USE 7155716 | X | Cable terminal | Kabelsko | 5 |
| 0300 | 2A | 71 55 716 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0310 | 2A | *71 55 039* | | AREA, 1,0-2,5 MM2 NLS | X | Cable terminal | Kabelsko | 5 |
| 0320 | 2A | *85 59 205* | | AREA, 4,0-6,0 MM2 NLS | X | Cable terminal | Kabelsko | 5 |
| 0330 | | | | | | | | |
| 0340 | 3 | 85 58 538 | | FUEL PUMP, FUSE BOX, | X | Contact housing | Kontakthus | 4 |
| 0350 | | | | JOINT PIECE CABLE | | 2-pole, female | 2-polig, hylsa | |
| 0360 | | | | NETWORK FRONT/ELCENTRAL | | | | |
| 0370 | 3A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 0380 | 3A | 79 68 068 | | AREA, 4,0-6,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0390 | | | | | | | | |
| 0400 | 4 | 85 58 546 | | JOINT PIECE, FUSE BOX, | X | Contact housing | Kontakthus | 4 |
| 0410 | | | | HYDRAULIC PUMP | | 2-pole, female | 2-polig, hylsa | |
| 0420 | 4A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 0430 | 4A | 85 22 542 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0440 | 4B | 85 16 957 | | AREA, 4,0-6,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0450 | | | | | | | | |
| 0460 | 5 | 85 61 623 | | JOINT PIECE, ELECTRIC | X | Contact housing | Kontakthus | 4 |
| 0470 | | | | PAD, NUMBER PLATE LIGHT, | | 2-pole, male | 2-polig, stift | |
| 0480 | | | | CENTRAL LOCK | | | | |
| 0490 | 5A | *85 44 314* | | AREA, 0,5-2,0 MM2 NLS - USE 8582603 | X | Cable terminal | Kabelsko | 5 |
| 0500 | 5A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 0510 | | | | | | | | |
| 0520 | 6 | 85 61 631 | | CENTRAL LOCK TRUNK LID, | X | Connector housing | Skarvhus | 4 |
| 0530 | | | | LIGHT NUMBER PLATE, | | 2-pole, male | 2-polig, stift | |
| 0540 | | | | EL-PAD PASSANGER SIDE, | | | | |
| 0550 | | | | SWITCH SEAT CONTACT | | | | |
| 0560 | 6A | 85 44 298 | | AREA, 0,5-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0570 | | | | | | | | |
| 0580 | 7 | 85 30 966 | | DIOD HOLDER | X | Diode | Diod | 5 |
| 0590 | | | | | | 2-pole, male | 2-polig, stift | |
| 0600 | 7A | 71 55 716 | | AREA, 0,4-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |


MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-D12

## Contact housing etc
1989

## Kontakthus etc
1989

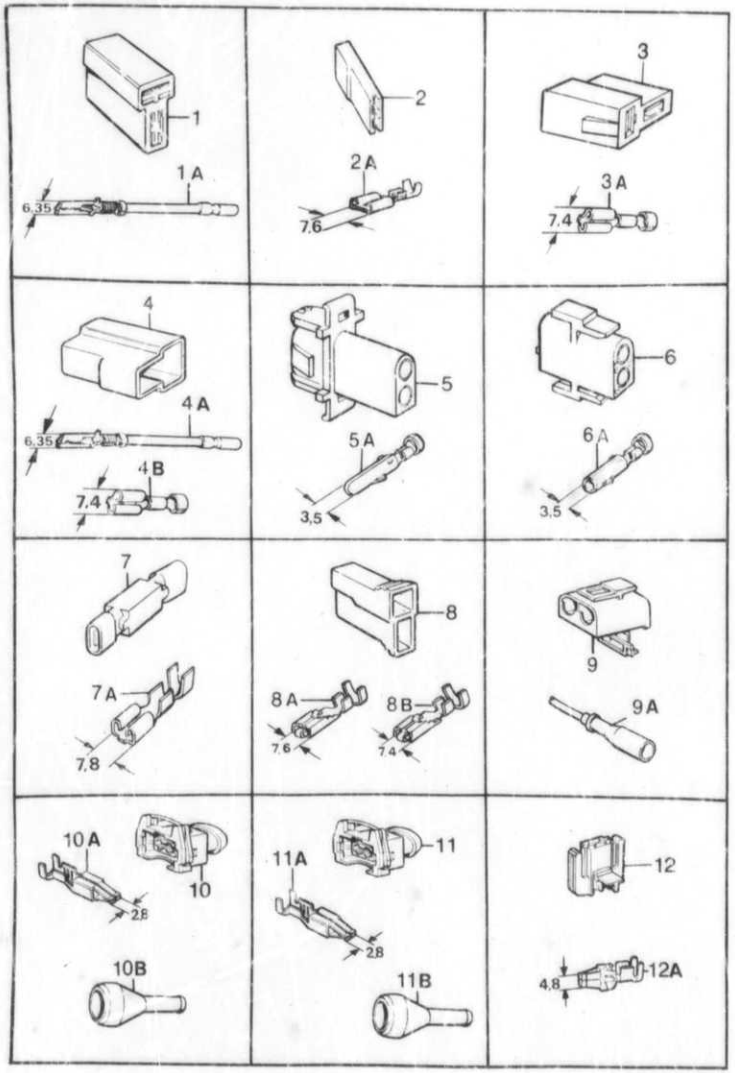


F1988 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 8 | 85 74 949 | | CIGARETTE LIGHTER | X | Contact housing 2-pole, female | Kontakthus 2-polig, hylsa | 4 |
| 8A | *85 41 203* | | AREA, 0,5-1,5 MM2 NLS - USE 8560476 | X | Cable terminal | Kabelsko | 5 |
| 8B | 85 60 476 | | AREA, 0,9-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 8B | 85 41 211 | | AREA, 2,5-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 9 | 95 03 319 | | VACUUM SWITCH APC, AC FAN MOTOR, WASHER MOTOR, SOLENOID VALVE AC, MOTOR COOLING FAN, BRAKE FLUID LEVEL, FUEL PUMP, WINDOW REGULATOR FRONT, HORN, SIDE DIRECT INDICATION, FOG LIGHT, VACUUM SWITCH, PRESSURE SWITCH, CENTRAL LOCK FRONT, BY-PASS COLD START | X | Contact housing 2-pole, female | Kontakthus 2-polig, hylsa | 4 |
| 9A | 78 74 493 | | | X | Connection | Skarv | 5 |
| 10 | 85 93 899 | | AUXILIARY AIR VALVE, THERMO TIME SWITCH, GIUDE PRESSURE VALVE, STARTER VALVE, INJECTION VALVE, TIMING VALVE, PREHEATED LAMBDA SOND, COLD STARTING VALVE | X | Contact housing 2-pole, female | Kontakthus 2-polig, hylsa | 4 |
| 10A | *91 20 668* | | AREA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 10B | 85 71 382 | | | X | Protection | Skydd | 4 |
| 11 | 85 93 915 | | MOTOR TEMP SENSOR, TANK VENTILATION, INTERIOR LIGHT | X | Contact housing 2-pole, female | Kontakthus 2-polig, hylsa | 4 |
| 11A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 11B | 85 71 382 | | | X | Protection | Skydd | 4 |
| 12 | 91 24 157 | | EL-ANTENNA, HIGH MOUNTED STOP LIGHT, BY-PASS LH+RH JOINT PIECE INTERIOR LIGHT | X | Contact housing 2-pole, female | Kontakthus 2-polig, hylsa | 4 |
| 12A | 91 20 791 | | AREA, 2,5-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A0 |
| 4 | Transmission | 3-H0 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-D14

## Contact housing etc
1989

## Kontakthus etc
1989

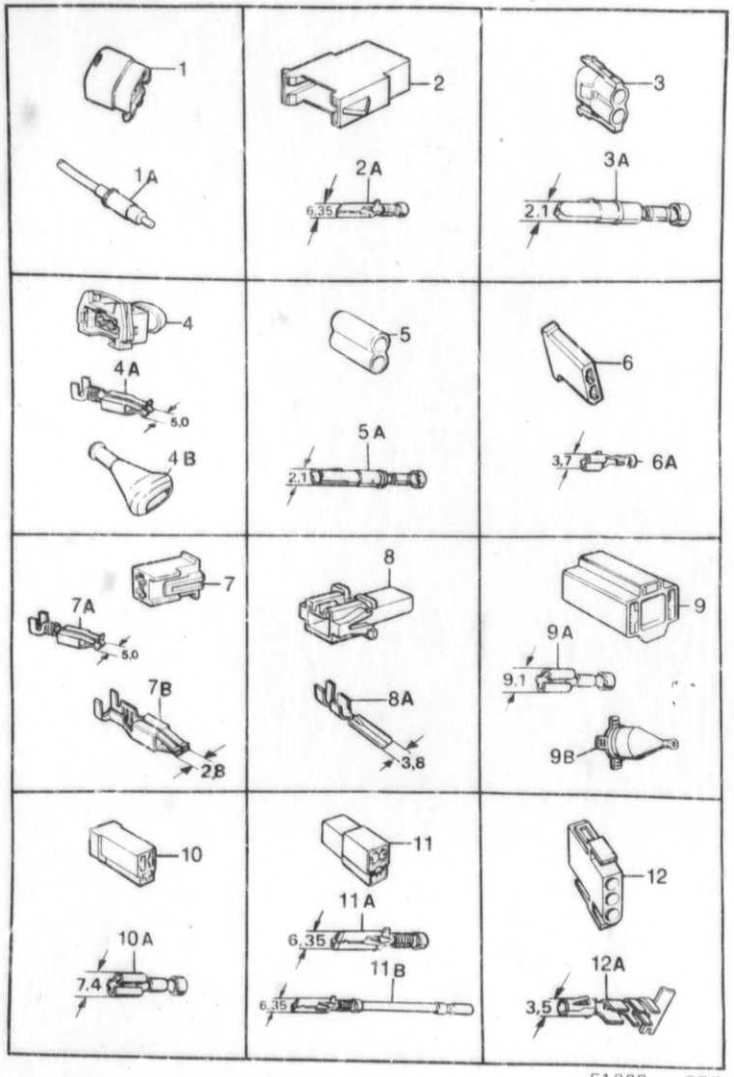


F1989 - 900


| 1300 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 95 01 685 | | JOINT PIECE, FUEL PUMP | X | Contact housing<br>2-pole, male | Kontakthus<br>2-polig, stift | 4 |
| 0030 | 1A | 78 74 506 | | | X | Connection | Skarv | 5 |
| 0050 | 2 | *95 02 998* | | BY-PASS LH+RH, JOINT PIECE TRUNK LID, JOINT PIECE BRAKE LIGHT, JOINT PIECE DIM-DIP/EL-CENTRAL NLS - USE 4069829 | X | Contact housing<br>2-pole, male | Kontakthus<br>2-polig, stift | 4 |
| 0090 | 2A | *71 55 062* | | AREA, 0,8-2,5 MM2 NLS - USE 8522542 | X | Cable terminal | Kabelsko | 5 |
| 0110 | 3 | 85 04 771 | | BRAKE PEDAL SPEED CONTROL, CLUTCH PEDAL SPEED CONTROL | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 0140 | 3A | 85 22 583 | | AREA, 0,8-3,4 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0160 | 4 | 85 97 064 | | KNOCK SENSOR | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 0180 | 4A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 0190 | 4B | 85 71 382 | | | X | Protection | Skydd | 4 |
| 0210 | 5 | 85 53 869 | | SENSOR SPEED CONTROL | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 0230 | 5A | 85 22 583 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0250 | 6 | 83 78 630 | | PEDALS SPEED CONTROL | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 0270 | 6A | *85 09 846* | | AREA, 0,5-1,4 MM2 NLS - USE 8522575 | X | Cable terminal | Kabelsko | 5 |
| 0290 | 7 | 91 23 548 | | SPEED CONTROL, PARKING LIGHT INDICATOR | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 4 |
| 0310 | 7A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 0320 | 7B | *95 08 714* | | AREA, 0,3-0,6 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 0340 | 8 | 95 18 713 | | SENSOR SPEED CONTROL US | X | Contact housing<br>2-pole, male | Kontakthus<br>2-polig, stift | 4 |
| 0360 | 8A | *95 52 126* | | AREA, 0,5-1,0 MM2 NLS - USE 9552100 | X | Cable terminal | Kabelsko | 5 |
| 0380 | 9 | 71 55 021 | | HEADLIGHT | X | Contact housing<br>2-pole, female | Kontakthus<br>2-polig, hylsa | 5 |
| 0400 | 9A | 85 82 413 | | AREA, 1,3-3,4 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0410 | 9B | 85 52 721 | | | X | Cable protection | Kabelskydd | 4 |
| 0430 | 10 | 73 42 892 | | LIMP-HOME, JOINT PIECE CABLE NETWORK DOOR/REAR | X | Connector housing<br>3-pole, female | Skarvhus<br>3-polig, hylsa | 4 |
| 0450 | 10A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 0470 | 11 | 73 42 900 | | WINDOW REGULATOR REAR, INTERIOR LIGHT | X | Connector housing<br>3-pole, male | Skarvhus<br>3-polig, stift | 4 |
| 0490 | 11A | 85 16 957 | | AREA, 4,0-6,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0500 | 11B | 85 22 542 | | AREA, 1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0520 | 12 | 85 64 916 | | REAR DEMIST | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 0540 | 12A | 85 44 298 | | AREA, 0,5-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |

MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

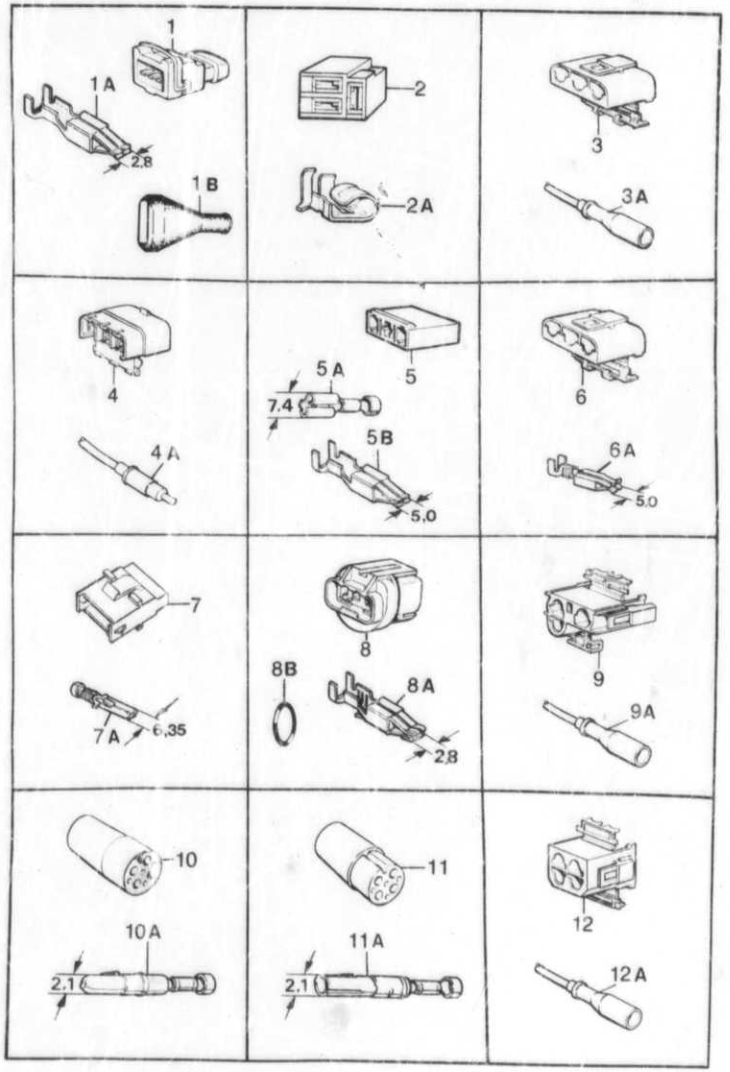


F1990 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | 85 93 907 | | DISTRIBUTOR, SENSOR THROTTLE ANGEL | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 1A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 1B | 85 79 955 | | | X | Protection | Skydd | 4 |
| 2 | 85 82 116 | | FUEL TANK TRANSMITTER | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 2A | 85 82 090 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 3 | 95 03 277 | | SPEED CONTROL, HEADLIGHT WIPERS, CENTRAL LOCK FRONT,CRANKSHAFT SENSOR, ABS, TANK SENSOR, JOINT PIECE CABLE NETWORK MOTOR/FRONT | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 3A | 78 74 498 | | | X | Connection | Skarv | 5 |
| 4 | 95 03 327 | | JOINT PIECE MOTOR/LH+EZK JOINT PIECE CABLE NETWORK REAR/TANK SENSOR, JOINT PIECE MOTOR/AC | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 4A | 78 74 506 | | | X | Connection | Skarv | 5 |
| 5 | 95 07 658 | | INTERIOR LIGHT | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 5A | 85 60 476 | | AREA, 0,9-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 5B | 95 21 972 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 5B | 91 20 791 | | AREA, 2,5-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 6 | 91 24 165 | | REOSTAT EL-PAD, ELECTRONIC UNIT PASSIVE SEAT BELT, COMBINED INSTRUMENT, SENSOR SPEED CONTROL, JOINT PIECE CABLENETWORK FRONT/MOTOR | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 6A | 91 20 791 | | AREA, 2,5-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 7 | 95 03 012 | | JOINT PIECE PASSIVE SEAT BELT, EL-PAD | X | Contact housing<br>3-pole, male | Kontakthus<br>3-polig, stift | 4 |
| 7A | *71 55 062* | | AREA, 0,5-1,0 MM2 NLS - USE 8522542 | X | Cable terminal | Kabelsko | 5 |
| 7A | *71 55 062* | | AREA, 0,8-2,5 MM2 NLS - USE 8522542 | X | Cable terminal | Kabelsko | 5 |
| 8 | 95 14 803 | | HEAD LIGHT US, JOINT PIECE | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 8A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 8B | 95 14 811 | | | X | Protection | Skydd | 4 |
| 9 | 95 19 679 | | PARKING LIGHT, DIRECTION LIGHT,SIDE BACK-UP LIGHT | X | Contact housing<br>3-pole, female | Kontakthus<br>3-polig, hylsa | 4 |
| 9A | 78 74 498 | | | X | Connection | Skarv | 5 |
| 10 | 85 30 081 | | CENTRAL LOCK, JOINT PIECE CABLE NETWORK DOOR/REAR | X | Contact housing<br>4-pole, male | Kontakthus<br>4-polig, stift | 4 |
| 10A | *85 03 161* | | AREA, 0,5-1,0 MM2 NLS - USE 8522591 | X | Cable terminal | Kabelsko | 5 |
| 10A | 85 16 817 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 11 | 85 30 099 | | ELECTRIC MIRROR, CENTRAL LOCK REAR | X | Contact housing<br>4-pole, female | Kontakthus<br>4-polig, hylsa | 4 |
| 11A | 85 22 583 | | AREA, 0,8-3,4 MM2 | X | Cable terminal | Kabelsko | 5 |




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

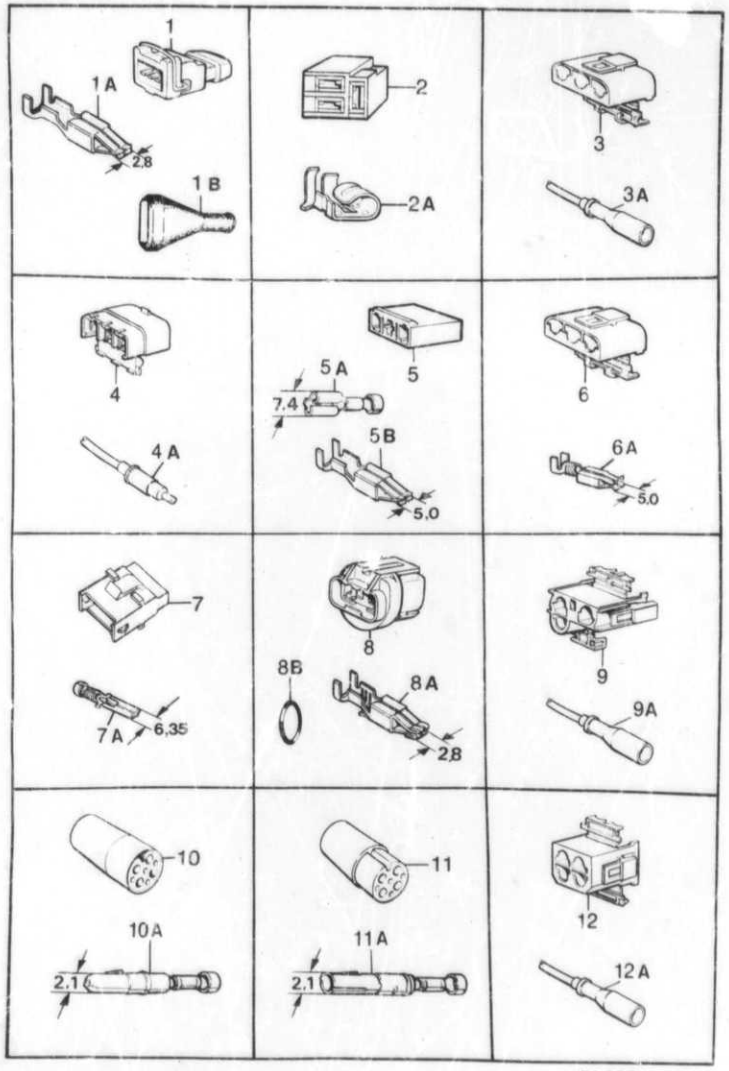


F1990 - 900

Wiring and fuses

# 3-D18 Contact housing etc 1989

Ledningar och säkringar

## Kontakthus etc 1989

| 1350 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0610 | 11A | *85 03 153* | | AREA, 0,5-1,0 MM2 NLS - USE 8522583 | X | Cable terminal | Kabelsko | 5 |
| 0610 | | | | | | | | |
| 0620 | | | | | | | | |
| 0630 | 12 | 95 03 434 | | EL-MIRROR, JOINT PIECE CABLE NETWORK ENGINE/ FRONT | X | Contact housing 4-pole, female | Kontakthus 4-polig, hylsa | 4 |
| 0640 | | | | | | | | |
| 0650 | | | | | | | | |
| 0660 | 12A | 78 74 498 | | | X | Connection | Skarv | 5 |

MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-D20

## Contact housing etc
1989

## Kontakthus etc
1989

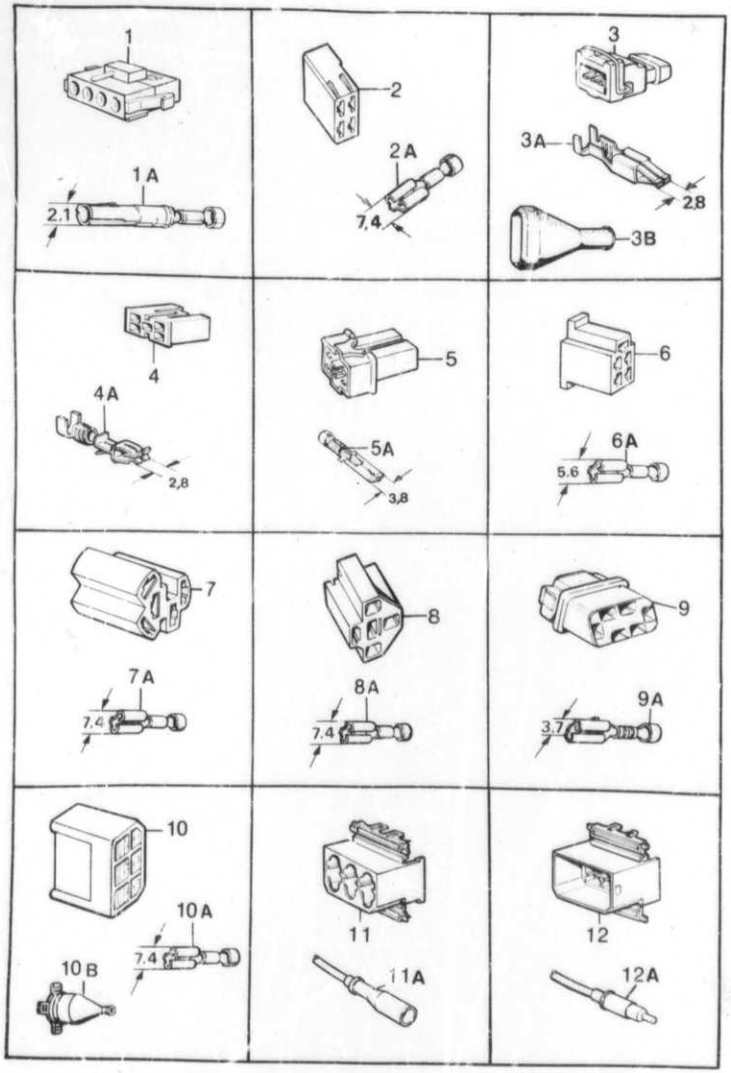


F1991 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | 85 90 192 | | SWITCH SPEED CONTROL | X | Contact housing<br>4-pole, female | Kontakthus<br>4-polig, hylsa | 4 |
| 1A | 85 22 583 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 2 | 85 21 536 | | TEST CONNECTION EZK | X | Contact housing<br>4-pole, female | Kontakthus<br>4-polig, hylsa | 4 |
| 2A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 3 | 95 61 333 | | POWER STAGE | X | Contact housing<br>4-pole, female | Kontakthus<br>4-polig, hylsa | 4 |
| 3A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 3B | 95 61 341 | | | X | Protection | Skydd | 4 |
| 4 | 91 23 555 | | IGNITION PULS/CHECK ENGINE, CONTROL SPEED CONTROL | X | Contact housing<br>4-pole, female | Kontakthus<br>4-polig, hylsa | 4 |
| 4A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 5 | 95 18 739 | | JOINT PIECE CABLE NET-WORK ENGINE/INSTRUMENT | X | Contact housing<br>4-pole, male | Kontakthus<br>4-polig, stift | 4 |
| 5A | *95 52 126* | | AREA, 0,5-1,0 MM2 NLS - USE 9552100 | X | Cable terminal | Kabelsko | 5 |
| 6 | 85 16 890 | | WINDSHIELD WIPER MOTOR | X | Contact housing<br>5-pole, female | Kontakthus<br>5-polig, hylsa | 4 |
| 6A | 85 82 447 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 7 | 85 44 397 | | SWITCH HEATING FAN | X | Contact housing<br>5-pole, female | Kontakthus<br>5-polig, hylsa | 4 |
| 7A | 79 68 068 | | AREA, 4,0-6,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 8 | 85 33 697 | | RELAY COOLING FAN, RESISTOR HEATING FAN, SPEED CONTROL, TIME RELAY INTERIOR, RELAY WINDOW REGULATOR, RELAY FLASHER, IGNITION LOCK, RELAY SPEED CONTROL, HOT START, RELAY DIM-DIP, RELAY CONVERTIBLE, TIME RELAY INTERIOR LIGHT DELAY, ONE TOUCH | X | Contact housing<br>5-pole, female | Kontakthus<br>5-polig, hylsa | 4 |
| 8A | *85 82 454* | | AREA, 0,5-1,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 8A | *85 82 397* | | AREA, 1,2-2,5 MM2 NLS | X | Cable terminal | Kabelsko | 5 |
| 9 | 85 40 569 | | SWITCH ELECTRIC MIRROR | X | Contact housing<br>6-pole, female | Kontakthus<br>6-polig, hylsa | 4 |
| 9A | *85 09 846* | | AREA, 0,5-1,4 MM2 NLS - USE 8522575 | X | Cable terminal | Kabelsko | 5 |
| 10 | 85 52 200 | | PARKING LIGHT, DIRECTION LIGHT | X | Contact housing<br>6-pole, female | Kontakthus<br>6-polig, hylsa | 4 |
| 10A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 10B | 85 52 721 | | | X | Cable protection | Kabelskydd | 4 |
| 11 | 95 03 475 | | LH 2.4,JOINT PIECE CABLE NETWORK ENGINE/FRONT | X | Contact housing<br>6-pole, female | Kontakthus<br>6-polig, hylsa | 4 |
| 11A | 78 74 498 | | | X | Connection | Skarv | 5 |

MASTER INDEX

0 General 1-A02
2 Engine 1-B02
3A Electrical general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 7-A02
9 Tools, labels 7-D02
10 Numerical register 7-E02


3B GROUP INDEX

Connectors 3-A06
Cable terminals 3-E10

# 3-D22

## *Contact housing etc*
*1989*

## *Kontakthus etc*
*1989*

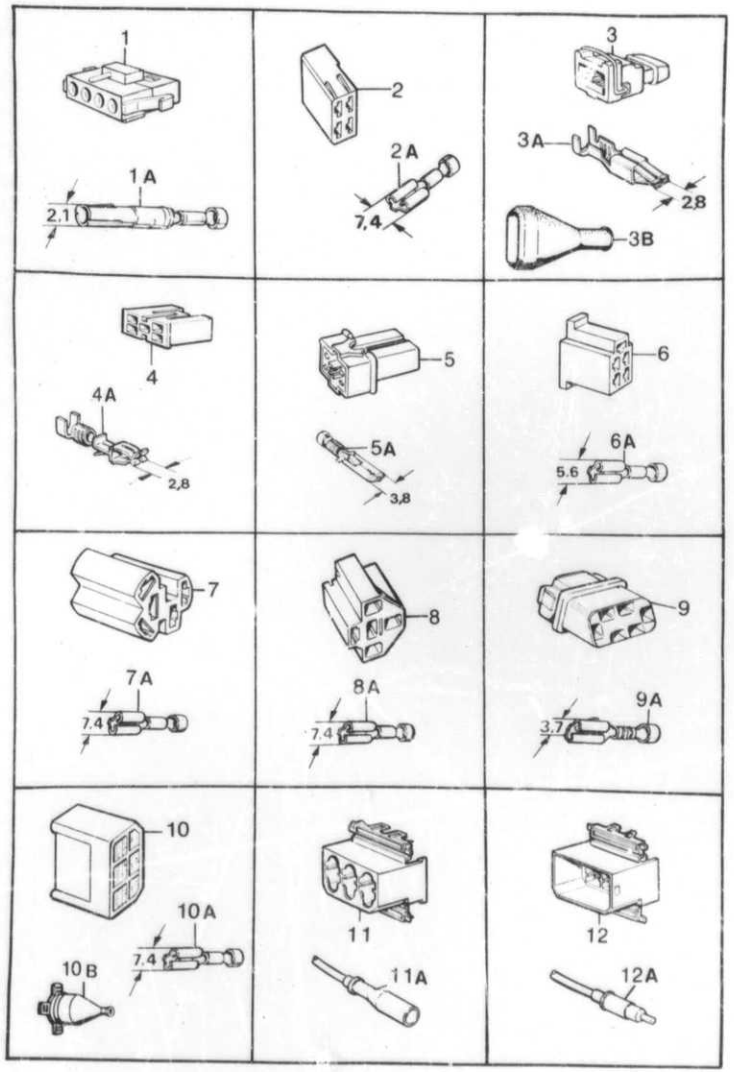


F1991 - 900

1400

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0580 | 12 | 95 06 668 | JOINT PIECE CABLE NET-WORK MOTOR/FRONT | X | Contact housing | Kontakthus | 4 |
| 0590 | | | | | 6-pole, male | 6-polig, stift | |
| 0600 | 12A | 78 74 506 | | X | Connection | Skarv | 5 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-D24

## Contact housing etc
1989

## Kontakthus etc
1989

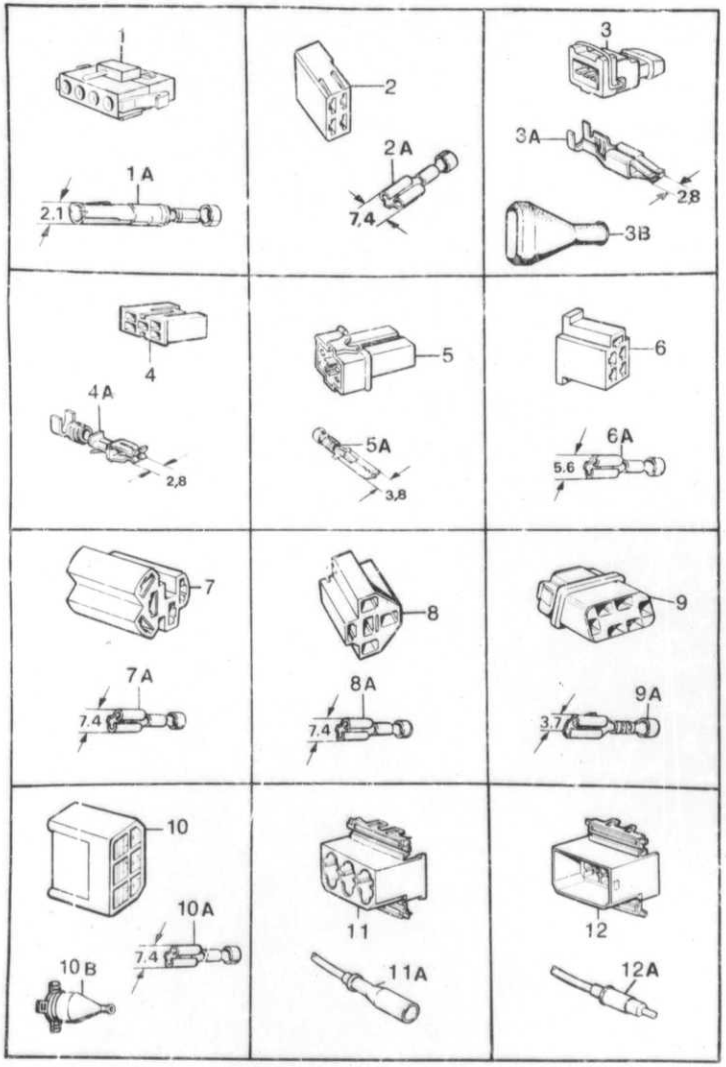


F1991 - 900


| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | 85 90 192 | | SWITCH SPEED CONTROL | X | Contact housing<br>4-pole, female | Kontakthus<br>4-polig, hylsa | 4 |
| 1A | 85 22 583 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 2 | 85 21 536 | | TEST CONNECTION EZK | X | Contact housing<br>4-pole, female | Kontakthus<br>4-polig, hylsa | 4 |
| 2A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS -<br>USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 3 | 95 61 333 | | POWER STAGE | X | Contact housing<br>4-pole, female | Kontakthus<br>4-polig, hylsa | 4 |
| 3A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS -<br>USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 3B | 95 61 341 | | | X | Protection | Skydd | 4 |
| 4 | 91 23 555 | | IGNITION PULS/CHECK<br>ENGINE, CONTROL SPEED<br>CONTROL | X | Contact housing<br>4-pole, female | Kontakthus<br>4-polig, hylsa | 4 |
| 4A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS -<br>USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 5 | 95 18 739 | | JOINT PIECE CABLE NET-<br>WORK ENGINE/INSTRUMENT | X | Contact housing<br>4-pole, male | Kontakthus<br>4-polig, stift | 4 |
| 5A | *95 52 126* | | AREA, 0,5-1,0 MM2 NLS -<br>USE 9552100 | X | Cable terminal | Kabelsko | 5 |
| 6 | 85 16 890 | | WINDSHIELD WIPER MOTOR | X | Contact housing<br>5-pole, female | Kontakthus<br>5-polig, hylsa | 4 |
| 6A | 85 82 447 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 7 | 85 44 397 | | SWITCH HEATING FAN | X | Contact housing<br>5-pole, female | Kontakthus<br>5-polig, hylsa | 4 |
| 7A | 79 68 068 | | AREA, 4,0-6,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 8 | 85 33 697 | | RELAY COOLING FAN,<br>RESISTOR HEATING FAN,<br>SPEED CONTROL, TIME<br>RELAY INTERIOR, RELAY<br>WINDOW REGULATOR, RELAY<br>FLASHER, IGNITION LOCK,<br>RELAY SPEED CONTROL, HOT<br>START, RELAY DIM-DIP,<br>RELAY CONVERTIBLE, TIME<br>RELAY INTERIOR LIGHT<br>DELAY, ONE TOUCH | X | Contact housing<br>5-pole, female | Kontakthus<br>5-polig, hylsa | 4 |
| 8A | *85 82 454* | | AREA, 0,5-1,5 MM2 NLS -<br>USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 8A | *85 82 397* | | AREA, 1,2-2,5 MM2 NLS | X | Cable terminal | Kabelsko | 5 |
| 9 | 85 40 569 | | SWITCH ELECTRIC MIRROR | X | Contact housing<br>6-pole, female | Kontakthus<br>6-polig, hylsa | 4 |
| 9A | *85 09 846* | | AREA, 0,5-1,4 MM2 NLS -<br>USE 8522575 | X | Cable terminal | Kabelsko | 5 |
| 10 | 85 52 200 | | PARKING LIGHT, DIRECTION<br>LIGHT | X | Contact housing<br>6-pole, female | Kontakthus<br>6-polig, hylsa | 4 |
| 10A | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS -<br>USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 10B | 85 52 721 | | | X | Cable protection | Kabelskydd | 4 |
| 11 | 95 03 475 | | LH 2.4,JOINT PIECE CABLE<br>NETWORK ENGINE/FRONT | X | Contact housing<br>6-pole, female | Kontakthus<br>6-polig, hylsa | 4 |
| 11A | 78 74 498 | | | X | Connection | Skarv | 5 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

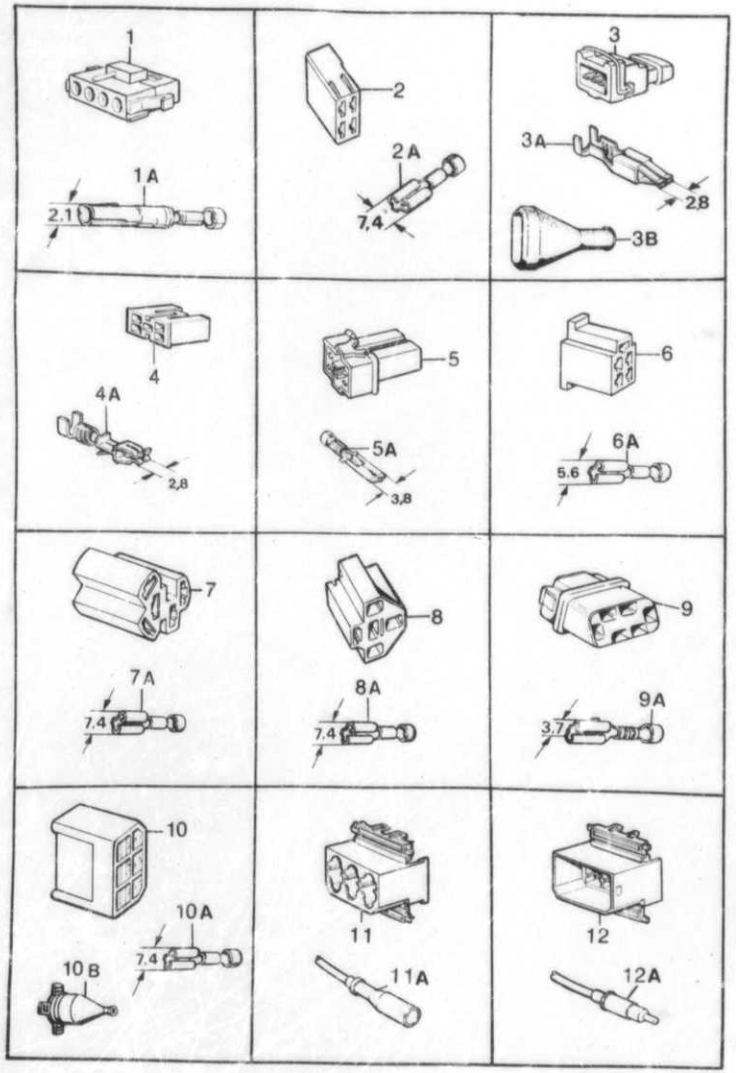


F1991 - 900


| | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 1450 | | | | | | | | |
| 0580 | 12 | 95 06 668 | | JOINT PIECE CABLE NET-WORK MOTOR/FRONT | X | Contact housing | Kontakthus | 4 |
| 0590 | | | | | | 6-pole, male | 6-polig, stift | |
| 0600 | 12A | 78 74 506 | | | X | Connection | Skarv | 5 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

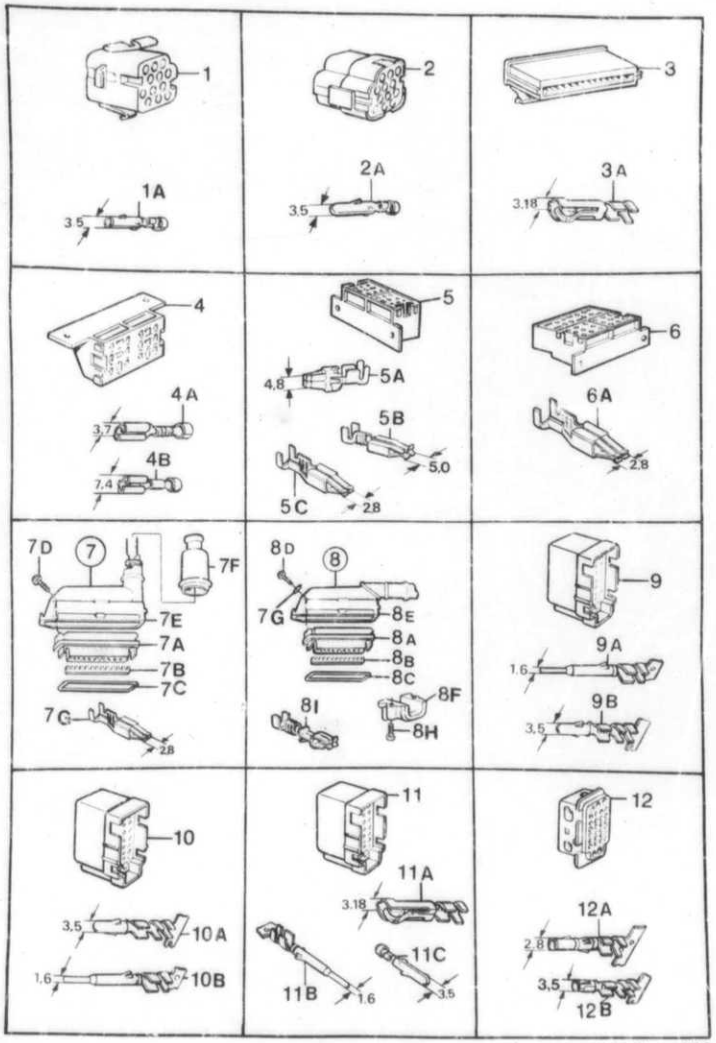


F2527 - 900

| 1500 | Pos | Part No/Art nr | Å S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 85 53 497 | | COWL | X | Connector housing | Skarvhus | 4 |
| 0020 | | | | | | 12-pole, female | 12-polig, hylsa | |
| 0030 | 1A | 85 44 298 | | AREA, 0,5-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0040 | 1A | 85 44 306 | | AREA, 2,0-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0050 | | | | | | | | |
| 0060 | 2 | 85 53 505 | | INSTRUMENT | X | Contact housing | Kontakthus | 4 |
| 0070 | | | | | | 12-pole, male | 12-polig, stift | |
| 0080 | 2A | *85 44 314* | | AREA, 0,5-2,0 MM2 NLS - USE 8582603 | X | Cable terminal | Kabelsko | 5 |
| 0080 | | | | | | | | |
| 0090 | | | | | | | | |
| 0100 | 3 | 85 44 348 | | INSTRUMENTS | X | Contact housing | Kontakthus | 4 |
| 0110 | | | | | | 14-pole, female | 14-polig, hylsa | |
| 0120 | 3A | 85 60 278 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0130 | | | | | | | | |
| 0140 | 4 | 85 51 665 | | FLASHER | X | Contact housing | Kontakthus | 4 |
| 0150 | | | | | | 18-pole, female | 18-polig, hylsa | |
| 0160 | 4A | *85 09 846* | | AREA, 0,5-1,4 MM2 NLS - USE 8522575 | X | Cable terminal | Kabelsko | 5 |
| 0160 | | | | | | | | |
| 0170 | 4B | 79 71 708 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0180 | 4C | *79 72 029* | | AREA, 1,0-2,5 MM2 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 0180 | | | | | | | | |
| 0190 | | | | | | | | |
| 0200 | 5 | 91 24 199 | | MAIN RELAY, RELAY FUEL PUMP, TIME RELAY, COWL, RELAY INSTRUMENT | X | Contact housing | Kontakthus | 4 |
| 0210 | | | | | | 18-pole, female | 18-polig, hylsa | |
| 0220 | | | | | | | | |
| 0230 | 5A | 91 20 783 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0240 | 5B | 95 21 972 | | AREA, 0,5-1,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0250 | 5C | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 0250 | | | | | | | | |
| 0260 | | | | | | | | |
| 0270 | 6 | 91 25 543 | | PASSIVE BELT, ABS | X | Contact housing | Kontakthus | 4 |
| 0280 | | | | | | 18-pole, female | 18-polig, hylsa | |
| 0290 | 6A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 0290 | | | | | | | | |
| 0300 | | | | | | | | |
| 0310 | 7 | 85 86 802 | | APC, EZK | X | Contact housing | Kontakthus | 4 |
| 0320 | | | | | | 25-pole, female | 25-polig, hylsa | |
| 0330 | 7A | 85 87 420 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 0340 | 7B | 85 87 438 | | 1) | 1 | .Striker plate | .Låsbleck | 5 |
| 0350 | 7C | 85 87 453 | | 1) | 1 | .Seal | .Tätning | 5 |
| 0360 | 7D | 85 87 487 | | 1) | 1 | .Screw | .Skruv | 5 |
| 0370 | 7E | 85 87 503 | | 1) | 1 | .Cover | .Kåpa | 4 |
| 0380 | 7F | 85 87 511 | | 1) | 1 | .Rubber protection | .Gummiskydd | 4 |
| 0390 | 7G | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 0390 | | | | | | | | |
| 0400 | | | | | | | | |
| 0410 | 8 | 95 63 081 | | ELECTRONIC UNIT PASSIVE SEAT BELT | X | Contact housing | Kontakthus | 4 |
| 0420 | | | | | | 25-pole, female | 25-polig, hylsa | |
| 0430 | 8A | 85 87 420 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 0440 | 8B | 85 87 438 | | 1) | 1 | .Striker plate | .Låsbleck | 5 |
| 0450 | 8C | 85 87 453 | | 1) | 1 | .Seal | .Tätning | 5 |
| 0460 | 8D | 85 87 487 | | 1) | 1 | .Screw | .Skruv | 5 |
| 0470 | 8E | 85 87 412 | | 1) | 1 | .Cover | .Kåpa | 4 |
| 0480 | 8F | 85 87 495 | | 1) | 1 | .Bracket | .Hållare | 4 |
| 0490 | 8G | 85 87 461 | | 1) | 1 | .Seal | .Tätning | 5 |
| 0500 | 8H | 79 71 351 | | | 2 | .Screw | .Skruv | 5 |
| 0510 | 8I | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 0510 | | | | | | | | |
| 0520 | | | | | | | | |
| 0530 | 9 | 85 44 215 | | COWL, WHITE | X | Contact housing | Kontakthus | 4 |
| 0540 | | | | | | 29-pole, male | 29-polig stift | |
| 0550 | 9A | 85 93 964 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-E06

## *Contact housing etc*
*1989*

## *Kontakthus etc*
*1989*

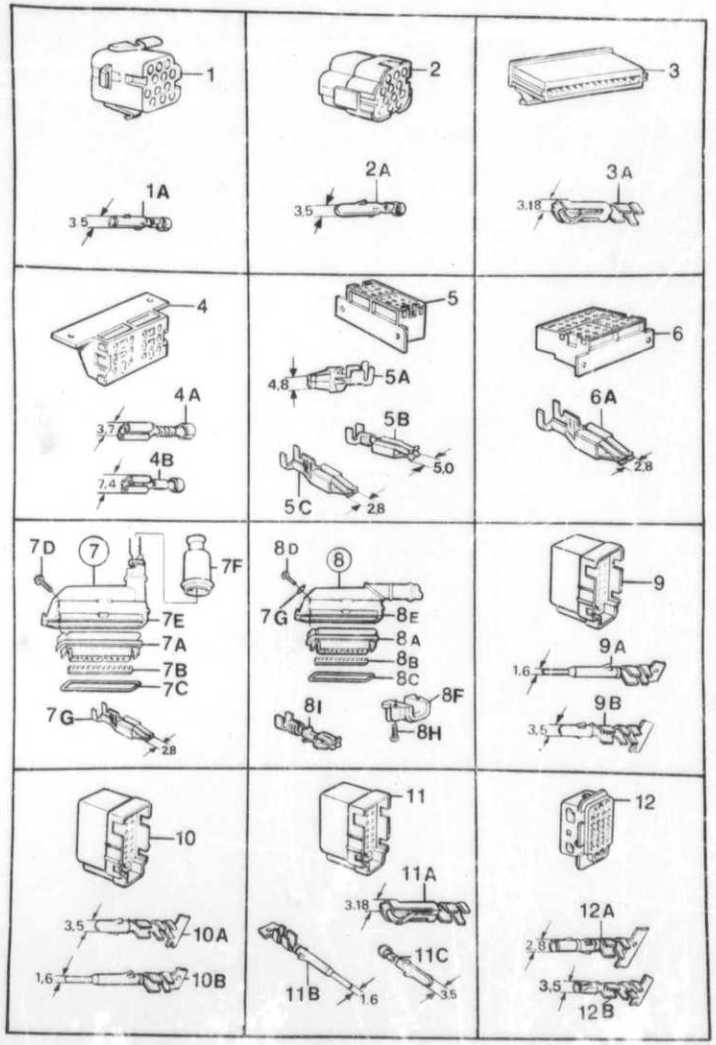


F2527 - 900

| 1500 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0560 | 9A | *85 44 314* | | AREA, 0.5-2,0 MM2 NLS - USE 8582603 | X | Cable terminal | Kabelsko | 5 |
| 0570 | 9B | 85 44 322 | | AREA, 2,0-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0590 | 10 | 85 44 231 | | COWL, RED | X | Contact housing 29-pole, male | Kontakthus 29-polig stift | 4 |
| 0610 | 10A | 85 44 322 | | AREA, 2,0-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0620 | 10B | 85 93 956 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0630 | 10B | 85 93 964 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0650 | 11 | 85 44 256 | | COWL, BLACK | X | Contact housing 29-pole, male | Kontakthus 29-polig stift | 4 |
| 0670 | 11A | 85 93 956 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0680 | 11B | *85 44 314* | | AREA, 2,0-4,0 MM2 NLS - USE 8582603 | X | Cable terminal | Kabelsko | 5 |
| 0700 | 12 | 85 44 249 | | INSTRUMENTS | X | Contact housing 29-pole, female | Kontakthus 29-polig hylsa | 4 |
| 0720 | 12A | *85 21 726* | | AREA, 0,5-1,5 MM2 NLS - USE 8567075 | X | Cable terminal | Kabelsko | 5 |
| 0730 | 12B | 85 82 595 | | AREA, 0,5-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-E08

## *Contact housing etc*
*1989*

## *Kontakthus etc*
*1989*

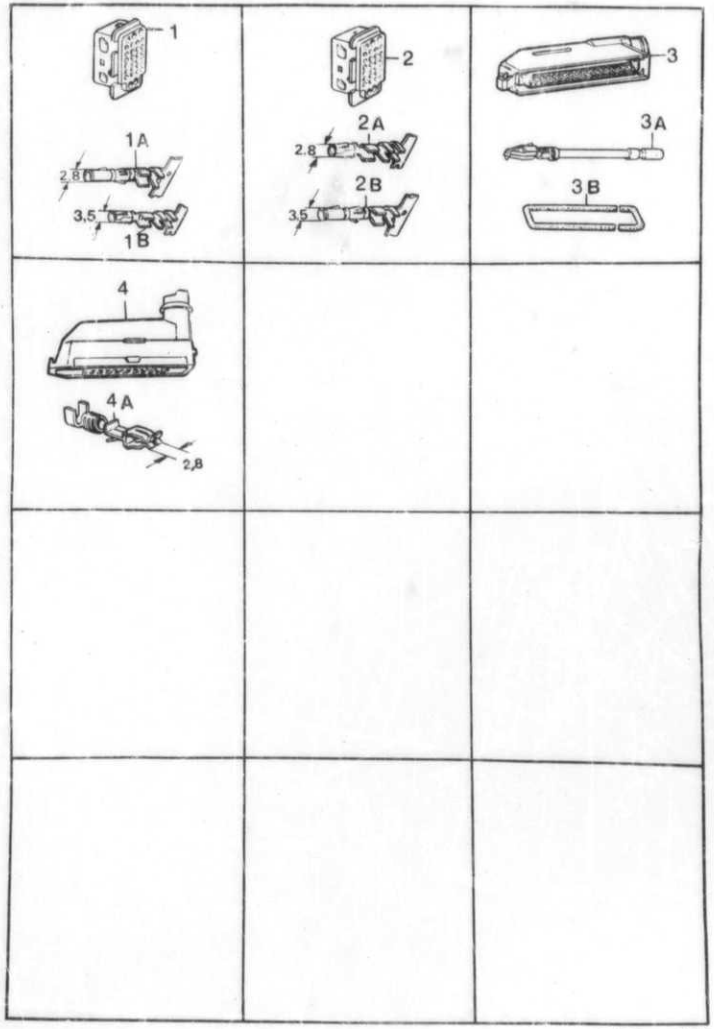


F2528 - 900

| 1550 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 85 44 207 | | FUSE BOX | X | Contact housing | Kontakthus | 4 |
| 0020 | | | | | | 29-pole, female | 29-polig, hylsa | |
| 0030 | 1A | 85 87 560 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0040 | 1B | 85 87 552 | | AREA, 0,5-1,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0050 | 1B | 85 44 306 | | AREA, 2,0-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0060 | | | | | | | | |
| 0070 | 2 | 85 44 223 | | FUSE BOX | X | Contact housing | Kontakthus | 4 |
| 0080 | | | | | | 29-pole, female | 29-polig, hylsa | |
| 0090 | 2A | 85 87 560 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0100 | 2B | 85 44 298 | | AREA, 0,5-2,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0110 | 2B | 85 44 306 | | AREA, 2,0-4,0 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0120 | | | | | | | | |
| 0130 | 3 | 85 39 363 | | ELECTRONIC UNIT LAMBDA | X | Contact housing | Kontakthus | 4 |
| 0140 | | | | | | 35-pole, female | 35-polig, hylsa | |
| 0150 | 3A | 85 22 617 | | AREA, 1,0-2,5 MM2 | X | Cable terminal | Kabelsko | 5 |
| 0160 | 3B | 95 64 204 | | | X | Seal | Tätning | 5 |
| 0170 | | | | | | | | |
| 0180 | 4 | 95 61 093 | | ELECTRONIC UNIT LH | X | Contact housing | Kontakthus | 4 |
| 0190 | | | | | | 35-pole, female | 35-polig, hylsa | |
| 0200 | 4A | *91 20 668* | | REA, 0,75-1,5 MM2 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 0200 | | | | | | | | |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-E10

## Cable terminal
1986

## Ledningssko
1986

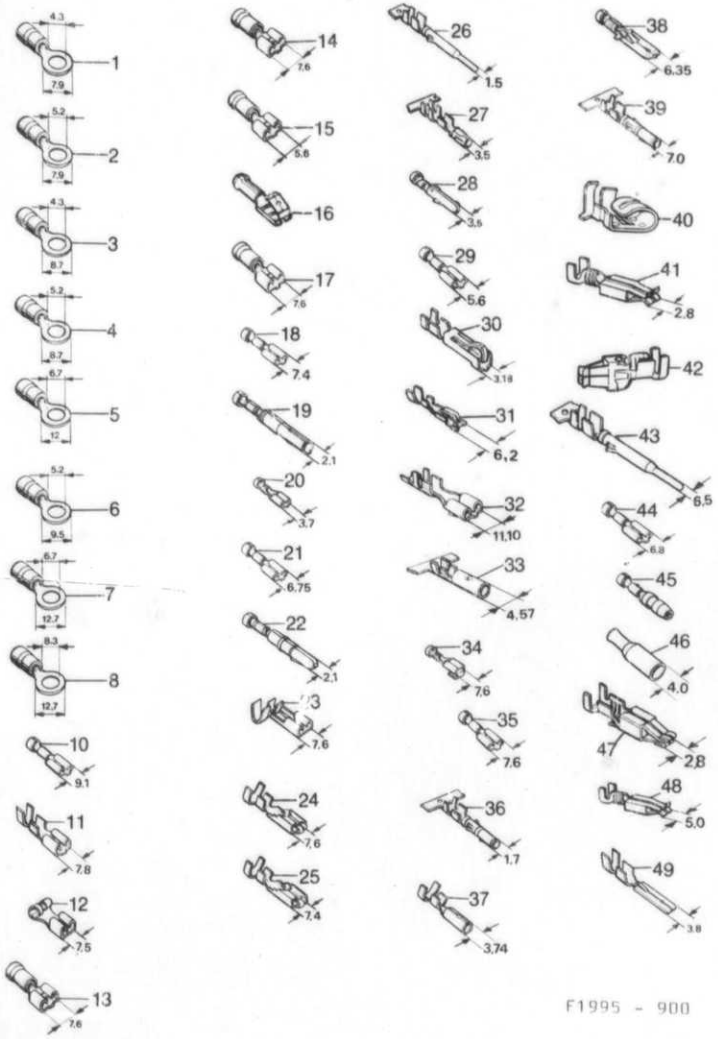


| 2000 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 71 55 211 | | 98), 40/253 152 003 | X | Cable terminal | Kabelsko | 5 |
| 0020 | 2 | 71 55 229 | | 98), 40/253 153 001 | X | Cable terminal | Kabelsko | 5 |
| 0030 | 3 | 71 55 237 | | 99), 40/253 172 001 | X | Cable terminal | Kabelsko | 5 |
| 0040 | 4 | 71 17 880 | | 99), 40/253 173 009 | X | Cable terminal | Kabelsko | 5 |
| 0050 | 5 | 78 29 617 | | 99), 40/253 174 007 | X | Cable terminal | Kabelsko | 5 |
| 0060 | 6 | 71 55 658 | | 100), 40/253 210 009 | X | Cable terminal | Kabelsko | 5 |
| 0070 | 7 | 78 29 666 | | 100), 40/253 211 007 | X | Cable terminal | Kabelsko | 5 |
| 0080 | 8 | 78 29 674 | | 100), 40/253 212 005 | X | Cable terminal | Kabelsko | 5 |
| 0090 | | | | | | | | |
| 0100 | 10 | 85 82 413 | | 95), JOINT PIECE, | X | Cable terminal | Kabelsko | 5 |
| 0110 | | | | IN CONTACT HOUSING, | | | | |
| 0120 | | | | 7155021 | | | | |
| 0130 | 11 | 71 55 716 | | 96), FOR THERMO SWITCH, | X | Cable terminal | Kabelsko | 5 |
| 0140 | | | | DOME LIGHT, FUSE BOX, | | | | |
| 0150 | | | | JOINT PIECE, LIGHT | | | | |
| 0160 | | | | CONTROLS, LAMP SAFETY | | | | |
| 0170 | | | | BELT WARNING, CYKEL | | | | |
| 0180 | | | | THERMOSTAT, IN CONTACT | | | | |
| 0190 | | | | HOUSING 8516916, 8572083 | | | | |
| 0200 | 12 | *71 96 710* | | 97), FOR THERMO SWITCH, | X | Cable terminal | Kabelsko | 5 |
| 0210 | | | | DOOR SWITCH NLS | | | | |
| 0220 | 13 | 78 29 609 | | 98), 40/253 168 009 | X | Cable terminal | Kabelsko | 5 |
| 0230 | 14 | 78 29 625 | | 99), 40/253 195 002 | X | Connector | Anslutning | 3 |
| 0240 | 15 | *78 29 633* | | 99), 40/253 197 008, FOR | X | Contact housing | Kontakthus | 5 |
| 0250 | | | | HEADLIGHT NLS | | | | |
| 0260 | 16 | 78 29 641 | | 99) | X | Manifold | Förgrening | 3 |
| 0270 | 17 | 78 29 682 | | 100), 40/253 226 005 | X | Cable terminal | Kabelsko | 3 |
| 0280 | 18 | 79 68 068 | | 101), FOR EL-CENTRAL, | X | Cable terminal | Kabelsko | 5 |
| 0290 | | | | RELAY AC COMPRESSOR, | | | | |
| 0300 | | | | FOR CONTACT HOUSING | | | | |
| 0310 | | | | 8533697, 8533705,8558538 | | | | |
| 0320 | 18 | *79 72 029* | | 102), IN FUSE BOX, FUEL | X | Cable terminal | Kabelsko | 5 |
| 0330 | | | | PUMP, JOINT PIECE, | | | | |
| 0340 | | | | COOLING FAN AC, INTERVAL | | | | |
| 0350 | | | | RELAY, FOR CONTACT | | | | |
| 0360 | | | | HOUSING, 7155096,7342892 | | | | |
| 0370 | | | | 8533697, 8533705,8544397 | | | | |
| 0380 | | | | 8552200 NLS - USE | | | | |
| 0380 | | | | 8522534 | | | | |
| 0390 | 18 | *85 82 317* | | 102), FOR APC, | X | Cable terminal | Kabelsko | 5 |
| 0400 | | | | FOR CONTACT HOUSING, | | | | |
| 0410 | | | | 7155120, 8533697 NLS | | | | |
| 0420 | 18 | *85 82 405* | | 98), FOR ALTERNATOR, | X | Cable terminal | Kabelsko | 5 |
| 0430 | | | | JOINT PIECE, FOR CONTACT | | | | |
| 0440 | | | | HOUSING, 8541229 NLS - | | | | |
| 0440 | | | | USE 8560476 | | | | |
| 0450 | 18 | *71 55 039* | | 99), FOR LIGHT CIGARETTE | X | Cable terminal | Kabelsko | 5 |
| 0460 | | | | LIGHTER, FAN, DOME LIGHT | | | | |
| 0470 | | | | FUSE BOX, FOR CONTACT | | | | |
| 0480 | | | | HOUSING, 8516916 NLS | | | | |
| 0490 | 18 | *85 82 454* | | 98), FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 0500 | | | | 7155096, 7155112,7342892 | | | | |
| 0510 | | | | 8521536, 8533697 NLS - | | | | |
| 0510 | | | | USE 8522534 | | | | |

95. Area 1,3-3,4 MM2.
96. Area 0,4-1,0 MM2.
97. Area 0,5-1,0 MM2.
98. Area 0,5-1,5 MM2.
99. Area 1,5-2,5 MM2.
100. Area 3,0-6,0 MM2.
101. Area 4,0-6,0 MM2.
102. Area 1,0-2,5 MM2.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Elect.ical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-E12

## Cable terminal
1986

## Ledningssko
1986

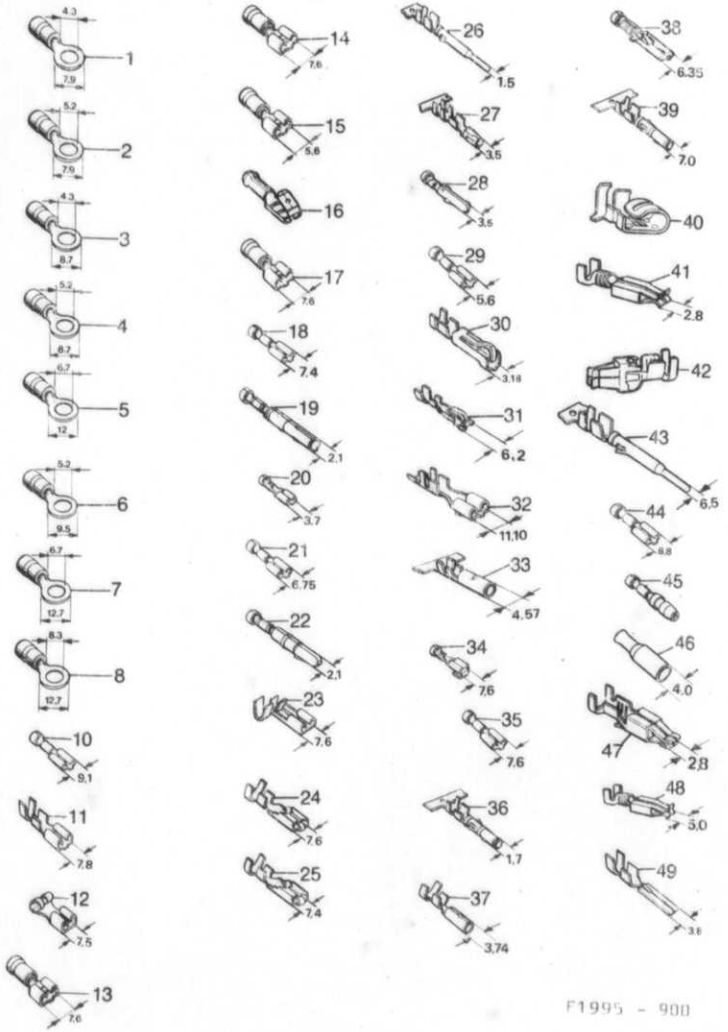


| 2000 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0520 | 18 | 85 82 546 | | 101),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 0530 | | | | 7342892 | | | | |
| 0540 | 18 | *71 55 153* | | 103),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 0550 | | | | 7155096, 7155112, 7342892 | | | | |
| 0560 | | | | 8521536, 8533697, 8552700 | | | | |
| 0560 | | | | NLS - USE 8522534 | | | | |
| 0570 | 18 | *85 83 379* | | 98), FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 3 |
| 0580 | | | | 7155112 NLS - USE | | | | |
| 0580 | | | | 8522534 | | | | |
| 0590 | 19 | 85 22 583 | | 104),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 0600 | | | | 8516932 | | | | |
| 0610 | 20 | 85 30 107 | | 97), FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 3 |
| 0620 | | | | 8530115 | | | | |
| 0630 | 20 | *85 09 846* | | 105),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 0640 | | | | 8540569, 8551665, 8571390 | | | | |
| 0650 | | | | 8378630 NLS - USE | | | | |
| 0650 | | | | 8522575 | | | | |
| 0660 | 21 | *85 03 476* | | 102),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 0670 | | | | 8558538 NLS | | | | |
| 0680 | 22 | 85 16 817 | | 97), FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 0690 | | | | 8504789, 8530081 | | | | |
| 0700 | 22 | *85 03 161* | | 97), FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 0710 | | | | 8516940, 8530081 NLS - | | | | |
| 0710 | | | | USE 8522591 | | | | |
| 0720 | 22 | *85 03 187* | | 102), FOR JOINT PIECE | X | Cable terminal | Kabelsko | 5 |
| 0720 | | | | NLS - USE 8522591 | | | | |
| 0730 | 23 | *85 21 676* | | 101), FOR JOINT PIECE, | X | Cable terminal | Kabelsko | 5 |
| 0740 | | | | IDLE COMPENSATOR, THERMO | | | | |
| 0750 | | | | SWITCH AC, AC VALVE AIR | | | | |
| 0760 | | | | SLIDE, FOR CONTACT | | | | |
| 0770 | | | | HOUSING, 8521692, 9518416 | | | | |
| 0770 | | | | NLS - USE 8522526 | | | | |
| 0780 | 23 | *85 21 684* | | 102),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 0790 | | | | 8521692 NLS - USE | | | | |
| 0790 | | | | 8522526 | | | | |
| 0800 | 23 | *85 82 421* | | 102), FOR JOINT PIECE, | X | Cable terminal | Kabelsko | 5 |
| 0810 | | | | FOR CONTACT HOUSING | | | | |
| 0820 | | | | 8521692 NLS - USE | | | | |
| 0820 | | | | 8522526 | | | | |
| 0830 | 24 | *85 41 203* | | 97),FOR GLOVE BOX LIGHT, | X | Cable terminal | Kabelsko | 5 |
| 0840 | | | | EARTH, SWITCH AC, DOME | | | | |
| 0850 | | | | LIGHT, THERMOSTAT AC, | | | | |
| 0860 | | | | DIRECTION INDICATOR, | | | | |
| 0870 | | | | LOW PRESSURE SWITCH, | | | | |
| 0880 | | | | MICRO SWITCH, TAIL LIGHT | | | | |
| 0890 | | | | FOR CONTACT HOUSING, | | | | |
| 0900 | | | | 8541229, 8544363 NLS - | | | | |
| 0900 | | | | USE 8560476 | | | | |
| 0910 | 25 | 85 41 211 | | 106), FOR FUSE BOX, FAN | X | Cable terminal | Kabelsko | 5 |
| 0920 | | | | UNIT, GLOVE BOX LIGHT, | | | | |
| 0930 | | | | DIRECTION INDICATOR, | | | | |
| 0940 | | | | JOINT PIECE, MICRO | | | | |
| 0950 | | | | SWITCH, THERMOSTAT AC | | | | |
| 0960 | | | | FOR CONTACT HOUSING, | | | | |
| 0970 | | | | 8541229, 8544363, 8574949 | | | | |

97. Area 0,5-1,0 MM2.
98. Area 0,5-1,5 MM2.
101. Area 4,0-6,0 MM2.
102. Area 1,0-2,5 MM2.
103. Area 0,8-2,1 MM2.
104. Area 0,8-3,4 MM2.
105. Area 0,5-1,4 MM2.
106. Area 2,5-4,0 MM2.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-E14

## Cable terminal
## 1986

## Ledningssko
## 1986

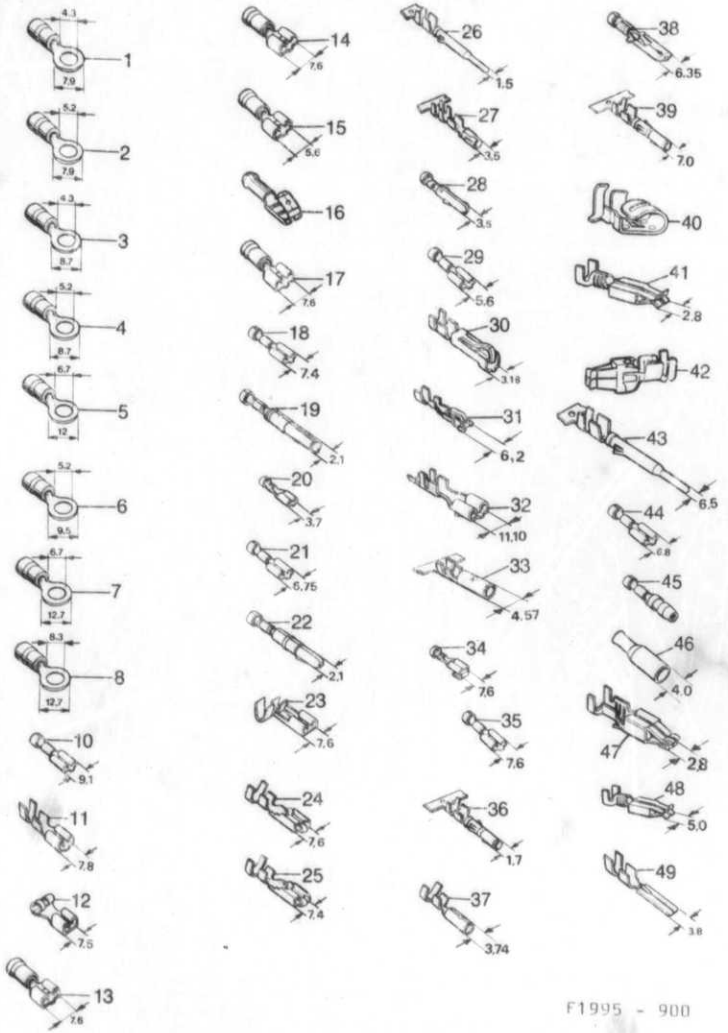


| 2000 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0980 | 25 | 85 60 476 | | 114), JOINT PIECE, FOR CONTACT HOUSING, 9507658 | X | Cable terminal | Kabelsko | 5 |
| 0990 | | | | | | | | |
| 1000 | 26 | 85 44 298 | | 107), FOR FUSE BOX, FOR CONTACT HOUSING 8553497, 8561631 | X | Cable terminal | Kabelsko | 5 |
| 1010 | | | | | | | | |
| 1020 | | | | | | | | |
| 1030 | 26 | 85 93 956 | | 102),FOR CONTACT HOUSING 8544215, 8544231,8544256 | X | Cable terminal | Kabelsko | 5 |
| 1040 | | | | | | | | |
| 1050 | 27 | 85 44 306 | | 108),FOR EL-CENTRAL, FOR CONTACT HOUSING 8544220, 8553497, 8564916 | X | Cable terminal | Kabelsko | 5 |
| 1060 | | | | | | | | |
| 1070 | | | | | | | | |
| 1080 | 27 | 85 82 595 | | 107), FOR FUSE BOX, THEFT ALARM, HORN, FOR CONTACT HOUSING, 8544249 | X | Cable terminal | Kabelsko | 5 |
| 1090 | | | | | | | | |
| 1100 | | | | | | | | |
| 1110 | 28 | *85 44 314* | | 107), FOR JOINT PIECE, FUSE BOX, FOR CONTACT HOUSING, 8544215,8544231 8544256, 8553505,8561623 NLS - USE 8582603 | X | Cable terminal | Kabel. | 5 |
| 1120 | | | | | | | | |
| 1130 | | | | | | | | |
| 1140 | | | | | | | | |
| 1150 | 28 | 85 44 322 | | 107),FOR CONTACT HOUSING 8544215, 8544231,8553505 | X | Cable terminal | Kabelsko | 5 |
| 1160 | | | | | | | | |
| 1170 | 29 | 85 44 389 | | 98), FOR FLASHER | X | Cable terminal | Kabelsko | 5 |
| 1180 | 29 | *85 14 028* | | 109), OIL GUARD, FUSE BOX,TEMP SENSOR,PRESSURE GUARD AC, DOOR SWITCH, THERMOSWITCH THERMOSTAT, SWITCH GEAR INDICATOR, JOINT PIECE, FOR CONTACT HOUSING, 8516916 NLS - USE 7155716 | X | Cable terminal | Kabelsko | 5 |
| 1190 | | | | | | | | |
| 1200 | | | | | | | | |
| 1210 | | | | | | | | |
| 1220 | | | | | | | | |
| 1230 | | | | | | | | |
| 1240 | | | | | | | | |
| 1250 | 29 | *85 33 028* | | 98), FOR PRESSURE SWITCH FOR CONTACT HOUSING, 8533184 NLS - USE 8582439 | X | Cable terminal | Kabelsko | 3 |
| 1260 | | | | | | | | |
| 1270 | | | | | | | | |
| 1280 | 29 | 85 82 439 | | 98), FOR CONTACT HOUSING 8533184 | X | Cable terminal | Kabelsko | 5 |
| 1290 | | | | | | | | |
| 1300 | 30 | 85 60 278 | | 97), FOR CONTACT HOUSING 8544348 | X | Cable terminal | Kabelsko | 5 |
| 1310 | | | | | | | | |
| 1320 | 31 | 85 68 768 | | 97), FOR CONTACT HOUSING 8568735 | X | Cable terminal | Kabelsko | 5 |
| 1330 | | | | | | | | |
| 1340 | 32 | 85 69 139 | | 101), FUSE BOX | X | Cable terminal | Kabelsko | 5 |
| 1350 | 32 | 85 88 188 | | 110), FUSE BOX | X | Cable terminal | Kabelsko | 5 |
| 1360 | 33 | 85 72 596 | | 111), COMPRESSOR | X | Cable terminal | Kabelsko | 5 |
| 1370 | 34 | 85 03 286 | | 103), FUSE BOX | X | Cable terminal | Kabelsko | 5 |
| 1380 | 35 | *85 59 205* | | 101), FOR JOINT PIECE, FOR CONTACT HOUSING, 8516916, 8521544 NLS | X | Cable terminal | Kabelsko | 5 |
| 1390 | | | | | | | | |
| 1400 | | | | | | | | |
| 1410 | 35 | 85 14 036 | | 102), FOR STARTER, BACK-UP LIGHT, FOR CONTACT HOUSING, 8516916,8521544 8572083 | X | Cable terminal | Kabelsko | 5 |
| 1420 | | | | | | | | |
| 1430 | | | | | | | | |
| 1440 | | | | | | | | |
| 1450 | 36 | 85 79 393 | | 102), FUSE BOX | X | Cable terminal | Kabelsko | 5 |

97. Area 0,5-1,0 MM2.
98. Area 0,5-1,5 MM2.
101. Area 4,0-6,0 MM2.
102. Area 1,0-2,5 MM2.
103. Area 0,8-2,1 MM2.
107. Area 0,5-2,0 MM2.
108. Area 2,0-4,0 MM2.
109. Area 0,3-0,8 MM2.
110. Area 6,0-10,0 MM2.
111. Area 0,6-1,4 MM2.
114. Area 0,9-2,0 MM2.

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-302 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-E16

## Cable terminal
## 1986

## Ledningssko
## 1986

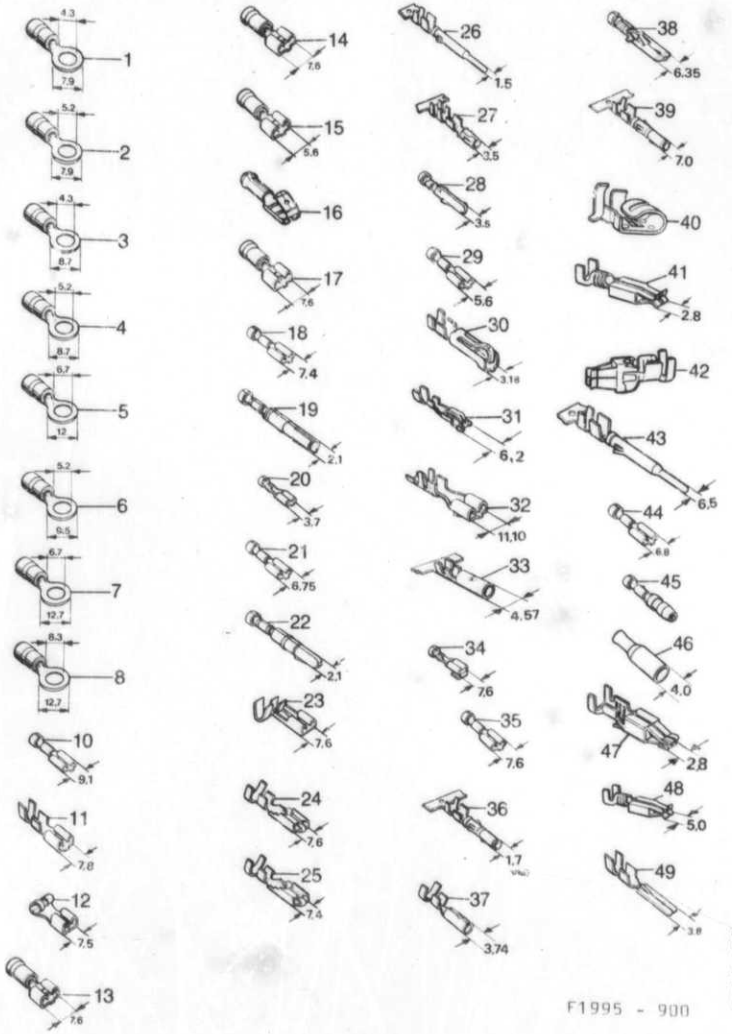


| 2000 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 1460 | 37 | 79 71 708 | | 98), FUSE BOX, JOINT | X | Cable terminal | Kabelsko | 5 |
| 1470 | | | | PIECE, RELAY COOLING FAN AC, RELAY AC-COMPRESSOR, FOR CONTACT HOUSING, 7155096, 7155112,8533697 | | | | |
| 1480 | | | | | | | | |
| 1490 | | | | | | | | |
| 1500 | | | | 8544249, 8551665,8571390 | | | | |
| 1510 | 38 | 85 16 357 | | 101),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1520 | | | | 8558546 | | | | |
| 1530 | 38 | 85 82 637 | | 103),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1540 | | | | 7155120 | | | | |
| 1550 | 38 | *71 55 062* | | 113),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1560 | | | | 9502998 NLS - USE 8522542 | | | | |
| 1570 | | | | | | | | |
| 1580 | 39 | 85 87 552 | | 98),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1590 | | | | 8544249 | | | | |
| 1600 | 40 | 85 82 090 | | 98), FOR SWITCH WINDOW REGULATOR, JOINT PIECE, REGULATOR, FOR CONTACT HOUSING, 8582116 | X | Cable terminal | Kabelsko | 5 |
| 1610 | | | | | | | | |
| 1620 | | | | | | | | |
| 1630 | | | | | | | | |
| 1640 | 41 | 91 20 775 | | 97), FOR FUSE BOX, JOINT PIECE, FOR CONTACT HOUSING, 8533655,9124090 9124157 | X | Cable terminal | Kabelsko | 5 |
| 1650 | | | | | | | | |
| 1660 | | | | | | | | |
| 1670 | | | | | | | | |
| 1680 | 41 | 85 86 133 | | 102), FOR FUSE BOX | X | Cable terminal | Kabelsko | 5 |
| 1690 | 42 | 91 20 783 | | 102),FOR FUSE BOX, JOINT PIECE, FOR CONTACT HOUSING, 8533655,9124090 9124157, 9124199 | X | Cable terminal | Kabelsko | 5 |
| 1700 | | | | | | | | |
| 1710 | | | | | | | | |
| 1720 | | | | | | | | |
| 1730 | 43 | 85 93 964 | | 98), FOR FUSE BOX, FOR CONTACT HOUSING, 8544215, 8544256 | X | Cable terminal | Kabelsko | 5 |
| 1740 | | | | | | | | |
| 1750 | | | | | | | | |
| 1760 | 44 | 91 20 791 | | 106), FOR FUSE BOX, FOR CONTACT HOUSING, 9124090 9124191 | X | Cable terminal | Kabelsko | 5 |
| 1770 | | | | | | | | |
| 1780 | | | | | | | | |
| 1790 | 44 | *71 55 047* | | 101), FOR FUSE BOX, FAN, FOR CONTACT HOUSING, 9124090 NLS | X | Cable terminal | Kabelsko | 5 |
| 1800 | | | | | | | | |
| 1810 | | | | | | | | |
| 1820 | 45 | 85 81 951 | | 103), FOR THEFT ALARM | X | Cable terminal | Kabelsko | 3 |
| 1830 | 46 | 85 82 579 | | 98), FOR EL-ANTENNA | X | Cable terminal | Kabelsko | 5 |
| 1840 | 47 | *91 20 668* | | 115), FOR FUSE BOX, FOR CONTACT HOUSING, 8586802, 8593899,8593915 8593931, 9123399 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 1850 | | | | | | | | |
| 1860 | | | | | | | | |
| 1870 | | | | | | | | |
| 1870 | | | | | | | | |
| 1880 | 48 | 91 20 767 | | 101),FOR CONTACT HOUSING 9124090 | X | Cable terminal | Kabelsko | 5 |
| 1890 | | | | | | | | |
| 1900 | 48 | 95 21 972 | | 97), FOR CONTACT HOUSING 9124199 | X | Cable terminal | Kabelsko | 5 |
| 1910 | | | | | | | | |
| 1920 | 48 | *95 21 980* | | 99), FOR CONTACT HOUSING 9124199 NLS - USE 9120783 | X | Cable terminal | Kabelsko | 5 |
| 1930 | | | | | | | | |
| 1930 | | | | | | | | |
| 1940 | 49 | 95 52 100 | | 115),FOR CONTACT HOUSING 9124199 | X | Cable terminal | Kabelsko | 5 |
| 1950 | | | | | | | | |

97. Area 0,5-1,0 MM2.
98. Area 0,5-1,5 MM2.
99. Area 1,5-2,5 MM2.
101. Area 4,0-6,0 MM2.
102. Area 1,0-2,5 MM2.
103. Area 0,8-2,1 MM2.
106. Area 2,5-4,0 MM2.
113. Area 0,8-2,5 MM2.
115. Area 0,75-1,5 MM2.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 3 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

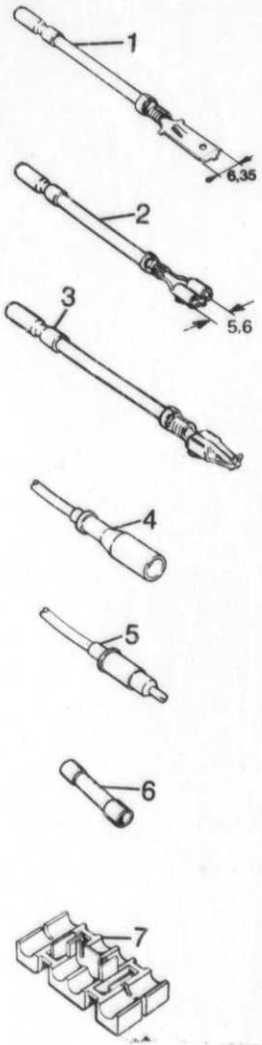


F1996 - 900



# 3-E18

## Cable terminal
## 1986

## Ledningssko
## 1986

| 2050 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 85 22 542 | | 112), FOR FUSE BOX, | X | Cable terminal | Kabelsko | 5 |
| 0020 | | | | FOR CONTACT HOUSING, | | | | |
| 0030 | | | | 7155104, 7155120,7342900 | | | | |
| 0040 | | | | 8558546 | | | | |
| 0050 | 2 | 85 22 567 | | 6), FOR JOINT PIECE, | X | Cable terminal | Kabelsko | 5 |
| 0060 | | | | FOR CONTACT HOUSING, | | | | |
| 0070 | | | | 8516890 | | | | |
| 0080 | 3 | 85 22 617 | | 112), JOINT PIECE, FUSE | X | Cable terminal | Kabelsko | 5 |
| 0090 | | | | BOX, FOR CONTACT HOUSING | | | | |
| 0100 | | | | 8533821, 8539363,8586802 | | | | |
| 0110 | | | | 8593899, 8593907,8593915 | | | | |
| 0120 | | | | 8593923, 8593931,8593949 | | | | |
| 0130 | 4 | 78 74 498 | | FOR JOINT PIECE, MOTOR | X | Connection | Skarv | 5 |
| 0140 | | | | MOTOR COOLING FAN, | | | | |
| 0150 | | | | FOR CONTACT HOUSING, | | | | |
| 0160 | | | | 8521692, 9503277,9503319 | | | | |
| 0170 | | | | 9503418, 9503434,9503475 | | | | |
| 0180 | 5 | 78 74 506 | | FOR JOINT PIECE, FOR | X | Connection | Skarv | 5 |
| 0190 | | | | CONTACT HOUSING, 9503327 | | | | |
| 0200 | | | | 9503327, 9503426,9506668 | | | | |
| 0210 | 6 | 71 55 146 | | 6), 40/253 188 007 | X | Connector housing | Skarvhus | 5 |
| 0220 | 6 | 71 55 203 | | 10), 40/253 164 008 | X | Connector housing | Skarvhus | 5 |
| 0230 | 6 | 71 55 633 | | 32), 40/253 221 006 | X | Connector housing | Skarvhus | 5 |
| 0240 | 7 | 85 21 668 | | AREA 0,8-2,1 MM2 | X | Cable joint | Ledningsförbindning | 3 |

6. Blue colour code (area 1,5-2,5 MM2). Blå färgkod (area 1,5-2,5 MM2).
10. Red colour code (area 0,3-1,5 MM2). Röd färgkod (area 0,3-1,5 MM2).
32. Yellow colour code (area 3,0-6,0 MM2). Gul färgkod (area 3,0-6,0 MM2).
112. Green colour code (area 1,5 MM2). Grön färgkod (area 1,5 MM2).




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

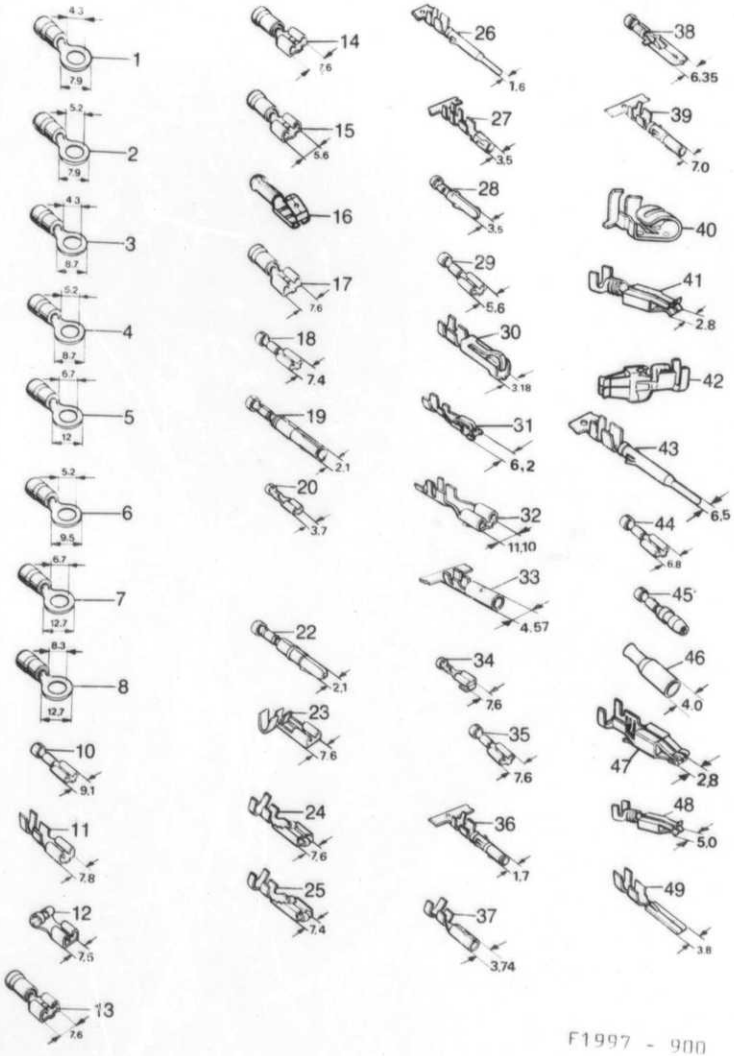


| 2100 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 71 55 211 | | 98), 40/253 152 003 | X | Cable terminal | Kabelsko | 5 |
| 0020 | 2 | 71 55 229 | | 98), 40/253 153 001 | X | Cable terminal | Kabelsko | 5 |
| 0030 | 3 | 71 55 237 | | 99), 40/253 172 001 | X | Cable terminal | Kabelsko | 5 |
| 0040 | 4 | 71 17 880 | | 99), 40/253 173 009 | X | Cable terminal | Kabelsko | 5 |
| 0050 | 5 | 78 29 617 | | 99), 40/253 174 007 | X | Cable terminal | Kabelsko | 5 |
| 0060 | 6 | 71 55 658 | | 100), 40/253 210 009 | X | Cable terminal | Kabelsko | 5 |
| 0070 | 7 | 78 29 666 | | 100), 40/253 211 007 | X | Cable terminal | Kabelsko | 5 |
| 0080 | 8 | 78 29 674 | | 100), 40/253 212 005 | X | Cable terminal | Kabelsko | 5 |
| 0090 | | | | | | | | |
| 0100 | 10 | 85 82 413 | | 95), FOR CONTACT HOUSING 7155021 | X | Cable terminal | Kabelsko | 5 |
| 0110 | | | | | | | | |
| 0120 | 11 | 71 55 716 | | 96), FOR THERMO SWITCH, DOME LIGHT, FUSE BOX, JOINT PIECE, LIGHT CONTROLS, LAMP SAFETY BELT WARNING, CYKEL THERMOSTAT, IN CONTACT HOUSING 8516916, 8572083 | X | Cable terminal | Kabelsko | 5 |
| 0130 | | | | | | | | |
| 0140 | | | | | | | | |
| 0150 | | | | | | | | |
| 0160 | | | | | | | | |
| 0170 | | | | | | | | |
| 0180 | | | | | | | | |
| 0190 | 12 | *71 96 710* | | 97), FOR THERMO SWITCH, DOOR SWITCH NLS | X | Cable terminal | Kabelsko | 5 |
| 0200 | | | | | | | | |
| 0210 | 13 | 78 29 609 | | 98), 40/253 168 009 | X | Cable terminal | Kabelsko | 5 |
| 0220 | 14 | 78 29 625 | | 99), 40/253 195 002 | X | Connector | Anslutning | 3 |
| 0230 | 15 | *78 29 633* | | 99), 40/253 197 008, FOR HEADLIGHT NLS | X | Contact housing | Kontakthus | 5 |
| 0240 | | | | | | | | |
| 0250 | 16 | 78 29 641 | | 99) | X | Manifold | Förgrening | 3 |
| 0260 | 17 | 78 29 682 | | 100), 40/253 226 005 | X | Cable terminal | Kabelsko | 3 |
| 0270 | 18 | 79 68 068 | | 101), FOR EL-CENTRAL, JOINT PIECE, FOR CONTACT HOUSING 8533705, 8558538 | X | Cable terminal | Kabelsko | 5 |
| 0280 | | | | | | | | |
| 0290 | | | | | | | | |
| 0300 | 18 | *79 72 029* | | 102), IN FUSE BOX, FUEL PUMP, JOINT PIECE, JOINT PIECE COWL, FOR CONTACT HOUSING, 8533697,8533705 8544249, 8544397,8552200 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 0310 | | | | | | | | |
| 0320 | | | | | | | | |
| 0330 | | | | | | | | |
| 0340 | | | | | | | | |
| 0340 | | | | | | | | |
| 0350 | 18 | *85 82 397* | | 102), FOR APC, FUSE BOX, FOR CONTACT HOUSING, 7155120, 8533097 NLS | X | Cable terminal | Kabelsko | 5 |
| 0360 | | | | | | | | |
| 0370 | | | | | | | | |
| 0380 | 18 | *85 82 405* | | 98), FOR CONTACT HOUSING 8541229 NLS - USE 8560476 | X | Cable terminal | Kabelsko | 5 |
| 0390 | | | | | | | | |
| 0390 | | | | | | | | |
| 0400 | 18 | *71 55 039* | | 99), FOR LIGHT CIGARETTE LIGHTER, FAN, FUSE BOX, FOR CONTACT HOUSING 8516916 NLS | X | Cable terminal | Kabelsko | 5 |
| 0410 | | | | | | | | |
| 0420 | | | | | | | | |
| 0430 | | | | - | | | | |
| 0440 | 18 | *85 82 454* | | 98), FOR CONTACT HOUSING 7155096, 7155112,7342892 8521536, 8533697 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 0450 | | | | | | | | |
| 0460 | | | | | | | | |
| 0460 | | | | - | | | | |
| 0470 | 18 | 85 82 546 | | 101),FOR CONTACT HOUSING 7342892 | X | Cable terminal | Kabelsko | 5 |
| 0480 | | | | | | | | |

95. Area 1,3-3,4 MM2.
96. Area 0,4-1,0 MM2.
97. Area 0,5-1,0 MM2.
98. Area 0,5-1,5 MM2.
99. Area 1,5-2,5 MM2.
100. Area 3,0-6,0 MM2.
101. Area 4,0-6,0 MM2.
102. Area 1,0-2,5 MM2.

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-E22

## Cable terminal
1987

## Ledningssko
1987

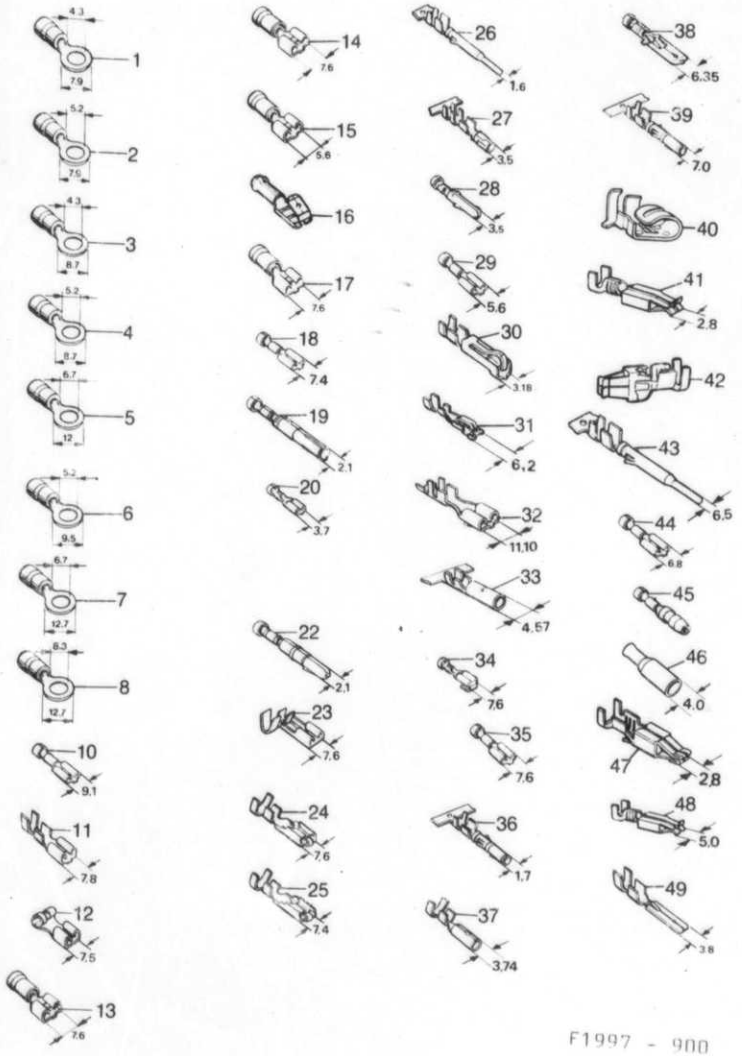


F1997 - 900

| 2100 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0490 18 | *71 55 153* | | 103),FOR CONTACT HOUSING 7155096, 7155112,7342892 8521536, 8533697,8552200 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 0520 18 | *85 83 379* | | 98), FOR CONTACT HOUSING 7155112 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 3 |
| 0540 19 | 85 22 583 | | 104),FOR CONTACT HOUSING 8504771, 8516932,8553869 8590192 | X | Cable terminal | Kabelsko | 5 |
| 0570 20 | 85 30 107 | | 097, FOR CONTACT HOUSING 8530115 | X | Cable terminal | Kabelsko | 3 |
| 0590 20 | *85 09 846* | | 105),FOR CONTACT HOUSING 8540569, 8571390 NLS - USE 8522575 | X | Cable terminal | Kabelsko | 5 |
| 0610 22 | 85 16 817 | | 97), FOR CONTACT HOUSING 8530081 | X | Cable terminal | Kabelsko | 5 |
| 0630 22 | *85 03 161* | | 97), FOR CONTACT HOUSING 8516940, 8530081 NLS - USE 8522591 | X | Cable terminal | Kabelsko | 5 |
| 0650 22 | *85 03 187* | | 102), FOR JOINT PIECE NLS - USE 8522591 | X | Cable terminal | Kabelsko | 5 |
| 0660 23 | *85 21 676* | | 101), FOR JOINT PIECE, IDLE COMPENSATOR, THERMO SWITCH AC, AC VALVE AIR SLIDE, VALVE AC RECIRCU-LATION, FOR CONTACT HOUSING, 8521692,9518416 NLS - USE 8522526 | X | Cable terminal | Kabelsko | 5 |
| 0720 23 | *85 21 684* | | 102),FOR CONTACT HOUSING 8521692 NLS - USE 8522526 | X | Cable terminal | Kabelsko | 5 |
| 0740 23 | 95 59 469 | | 102), FOR JOINT PIECE | X | Cable terminal | Kabelsko | 5 |
| 0750 23 | *85 82 421* | | 102), FOR JOINT PIECE, FOR CONTACT HOUSING 8521692 NLS - USE 8522526 | X | Cable terminal | Kabelsko | 5 |
| 0780 24 | *85 41 203* | | 97),FOR GLOVE BOX LIGHT, EARTH, THERMOSTAT AC, DIRECTION INDICATOR, LOW PRESSURE SWITCH, MICRO SWITCH,TAIL LIGHT, SWITCH FAN, NUMBER PLATE LIGHT, FOR CONTACT HOUSING, 8541229,8544363 NLS - USE 8560476 | X | Cable terminal | Kabelsko | 5 |
| 0860 25 | 85 41 211 | | 106), FOR FUSE BOX, FAN UNIT, GLOVE BOX LIGHT, DIRECTION INDICATOR, JOINT PIECE, MICRO SWITCH, THERMOSTAT AC, FOR CONTACT HOUSING, 8541229, 8544363,8574949 | X | Cable terminal | Kabelsko | 5 |
| 0880 | * | | | | | | |

97. Area 0,5-1,0 MM2.
98. Area 0,5-1,5 MM2.
101. Area 4,0-6,0 MM2.
102. Area 1,0-2,5 MM2.
103. Area 0,8-2,1 MM2.
104. Area 0,8-3,4 MM2.
105. Area 0,5-1,4 MM2.
106. Area 2,5-4,0 MM2.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

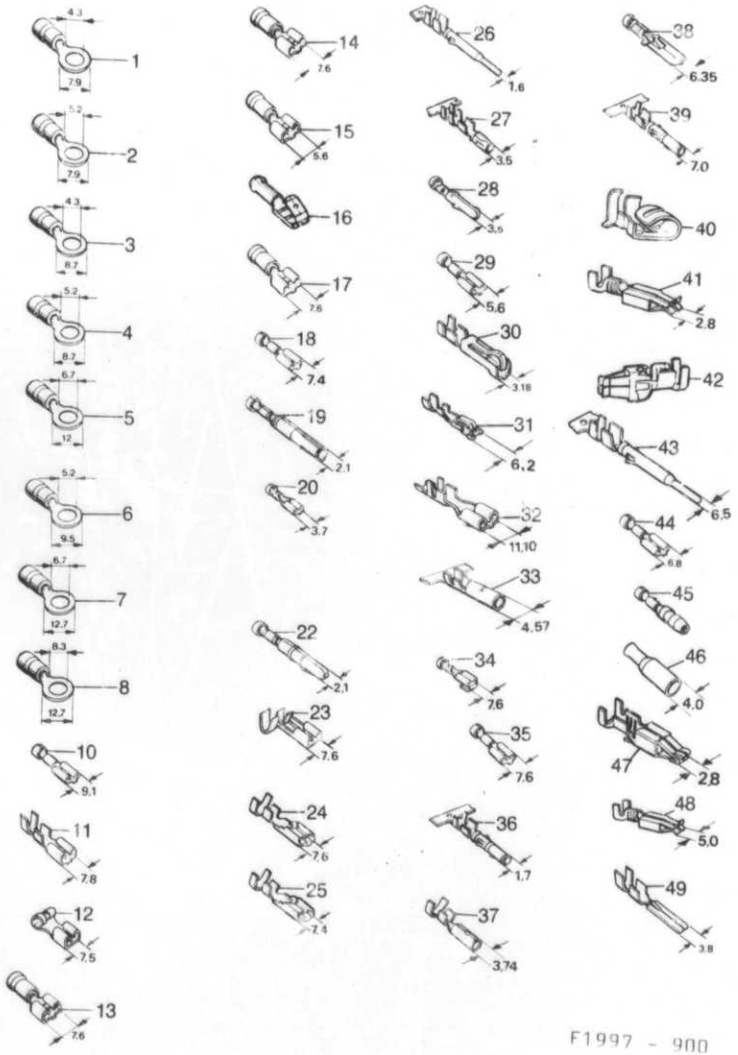


| 2100 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0930 25 | 85 60 476 | | 114), JOINT PIECE, FOR | X | Cable terminal | Kabelsko | 5 |
| 0940 | | | CONTACT HOUSING, 9507658 | | | | |
| 0950 26 | 85 44 298 | | 107), FOR FUSE BOX, | X | Cable terminal | Kabelsko | 5 |
| 0960 | | | FOR CONTACT HOUSING, | | | | |
| 0970 | | | 8544223, 853497,8561631 | | | | |
| 0980 | | | 8564916 | | | | |
| 0990 26 | 85 93 956 | | 102),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1000 | | | 8544231 | | | | |
| 1010 27 | 85 44 306 | | 108),FOR EL-CENTRAL, FOR | X | Cable terminal | Kabelsko | 5 |
| 1020 | | | CONTACT HOUSING 8544207, | | | | |
| 1030 | | | 8544223, 8544249,3553497 | | | | |
| 1040 | | | 8564916 | | | | |
| 1050 27 | 85 82 595 | | 107), FOR FUSE BOX, | X | Cable terminal | Kabelsko | 5 |
| 1060 | | | THEFT ALARM, HORN, FOR | | | | |
| 1070 | | | CONTACT HOUSING, 8544249 | | | | |
| 1080 28 | *85 44 314* | | 107), FOR JOINT PIECE, | X | Cable terminal | Kabelsko | 5 |
| 1090 | | | FUSE BOX, FOR CONTACT | | | | |
| 1100 | | | HOUSING, 8544215,8544231 | | | | |
| 1110 | | | 8544256, 8553505,8561623 | | | | |
| 1110 | | | NLS - USE 8582603 | | | | |
| 1120 28 | 85 44 322 | | 107),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1130 | | | 8544215, 8544231,8553505 | | | | |
| 1140 29 | *85 14 028* | | 109), OIL GUARD, TEMP | X | Cable terminal | Kabelsko | 5 |
| 1150 | | | SENSOR, DOOR SWITCH, FOR | | | | |
| 1160 | | | CONTACT HOUSING, 8516916 | | | | |
| 1160 | | | NLS - USE 7155716 | | | | |
| 1170 29 | *85 33 028* | | 98),FOR PRESSURE SWITCH, | X | Cable terminal | Kabelsko | 3 |
| 1180 | | | FOR CONTACT HOUSING, | | | | |
| 1190 | | | 8533184 NLS - USE | | | | |
| 1190 | | | 8582439 | | | | |
| 1200 29 | 85 82 439 | | 98), FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1210 | | | 8533184 | | | | |
| 1220 30 | 85 60 278 | | 97), FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1230 | | | 8544348 | | | | |
| 1240 31 | 85 68 768 | | 97), FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1250 | | | 8568735 | | | | |
| 1260 32 | 85 59 139 | | 101), FUSE BOX | X | Cable terminal | Kabelsko | 5 |
| 1270 32 | 85 88 188 | | 110), FUSE BOX | X | Cable terminal | Kabelsko | 5 |
| 1280 33 | 85 72 596 | | 111), COMPRESSOR | X | Cable terminal | Kabelsko | 5 |
| 1290 34 | 85 03 286 | | 103), FUSE BOX, JOINT | X | Cable terminal | Kabelsko | 5 |
| 1300 | | | PIECE | | | | |
| 1310 35 | *85 59 205* | | 101),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1320 | | | 8516916, 8521544 NLS | | | | |
| 1330 35 | 85 14 036 | | 102),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1340 | | | HOUSING, 8516916,8521544 | | | | |
| 1350 | | | 8572083 | | | | |
| 1360 36 | 85 79 393 | | 102), FUSE BOX | X | Cable terminal | Kabelsko | 5 |
| 1370 36 | 85 87 560 | | 102),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1380 | | | 8544207, 8544223 | | | | |
| 1390 37 | 79 71 708 | | 98), FUSE BOX, | X | Cable terminal | Kabelsko | 5 |
| 1400 | | | FOR CONTACT HOUSING, | | | | |
| 1410 | | | 7155096, 7155112 | | | | |

97. Area 0,5-1,0 MM2.
98. Area 0,5-1,5 MM2.
101. Area 4,0-6,0 MM2.
102. Area 1,0-2,5 MM2.
103. Area 0,8-2,1 MM2.
107. Area 0,5-2,0 MM2.
108. Area 2,0-4,0 MM2.
109. Area 0,3-0,8 MM2.
110. Area 6,0-10,0 MM2.
111. Area 0,6-1,4 MM2.
114. Area 0,9-2,0 MM2.

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-F02

## Cable terminal
1987

## Ledningssko
1987

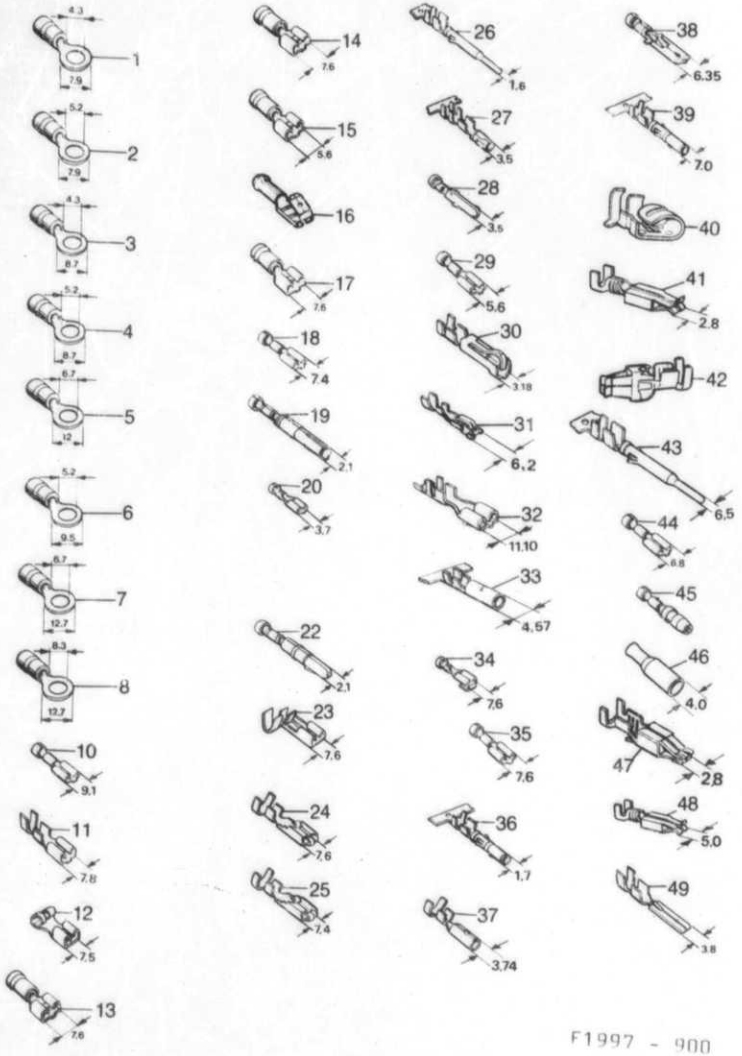


| 2100 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 1420 | 38 | 85 16 957 | | 101),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1430 | | | | 8558546 | | | | |
| 1440 | 38 | 85 82 637 | | 103),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1450 | | | | 7155120 | | | | |
| 1460 | 38 | *71 55 062* | | 113), FOR EL-PAD, FOR | X | Cable terminal | Kabelsko | 5 |
| 1470 | | | | CONTACT HOUSING, 9502758 | | | | |
| 1480 | | | | 9502758, 9503012 NLS - | | | | |
| 1480 | | | | USE 8522542 | | | | |
| 1490 | 38 | 85 93 089 | | 97), FOR EL-PAD, FOR | X | Cable terminal | Kabelsko | 5 |
| 1500 | | | | CONTACT HOUSING, 9124181 | | | | |
| 1510 | | | | 9503012 | | | | |
| 1520 | 39 | 85 87 552 | | 98),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1530 | | | | 8544207, 8544223,8544249 | | | | |
| 1540 | 40 | 85 82 090 | | 98), FOR SWITCH WINDOW | X | Cable terminal | Kabelsko | 5 |
| 1550 | | | | REGULATOR, JOINT PIECE, | | | | |
| 1560 | | | | REGULATOR, FOR CONTACT | | | | |
| 1570 | | | | HOUSING, 8582116 | | | | |
| 1580 | 41 | 91 20 775 | | 97), FOR FUSE BOX, JOINT | X | Cable terminal | Kabelsko | 5 |
| 1590 | | | | PIECE, FOR CONTACT | | | | |
| 1600 | | | | HOUSING, 8533655,8544249 | | | | |
| 1610 | | | | 9124090, 9124157,9124199 | | | | |
| 1620 | 41 | 85 86 133 | | 102), FOR FUSE BOX | X | Cable terminal | Kabelsko | 5 |
| 1630 | 42 | 91 20 783 | | 102),FOR FUSE BOX, JOINT | X | Cable terminal | Kabelsko | 5 |
| 1640 | | | | PIECE, FOR CONTACT | | | | |
| 1650 | | | | HOUSING, 8533655,9124090 | | | | |
| 1660 | | | | 9124090, 9124157,9124199 | | | | |
| 1670 | 43 | 85 93 964 | | 98), FOR FUSE BOX, | X | Cable terminal | Kabelsko | 5 |
| 1680 | | | | FOR CONTACT HOUSING, | | | | |
| 1690 | | | | 8544215, 8544231,8544256 | | | | |
| 1700 | 44 | 91 20 791 | | 106),FOR FUSE BOX, JOINT | X | Cable terminal | Kabelsko | 5 |
| 1710 | | | | PIECE, FUSE, FOR CONTACT | | | | |
| 1720 | | | | HOUSING, 9124090,9124191 | | | | |
| 1730 | | | | 9519380 | | | | |
| 1740 | 44 | *71 55 047* | | 101), FOR FUSE BOX, FAN, | X | Cable terminal | Kabelsko | 5 |
| 1750 | | | | FOR CONTACT HOUSING, | | | | |
| 1760 | | | | 9124090 NLS | | | | |
| 1770 | 45 | 85 81 951 | | 103), FOR THEFT ALARM | X | Cable terminal | Kabelsko | 3 |
| 1780 | 46 | 85 82 579 | | 98),FOR EL-ANTENNA, HORN | X | Cable terminal | Kabelsko | 5 |
| 1790 | 47 | *91 20 668* | | 115),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1800 | | | | 8586802, 8593899,8593915 | | | | |
| 1810 | | | | 8593931, 9123399,9563081 | | | | |
| 1810 | | | | NLS - USE 9120957 | | | | |
| 1820 | 47 | *95 08 706* | | 115), FOR JOINT PIECE | X | Cable terminal | Kabelsko | 5 |
| 1830 | | | | COWL, FOR CONTACT | | | | |
| 1840 | | | | HOUSING, 9123399,9124199 | | | | |
| 1840 | | | | NLS - USE 9120957 | | | | |
| 1850 | 47 | *95 08 714* | | 116),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1860 | | | | 9123399 NLS - USE | | | | |
| 1860 | | | | 9120957 | | | | |
| 1870 | 47 | *95 08 748* | | 99), FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1880 | | | | 9123399, 9514803 NLS - | | | | |
| 1880 | | | | USE 9120957 | | | | |

97. Area 0,5-1,0 MM2.
98. Area 0,5-1,5 MM2.
99. Area 1,5-2,5 MM2.
101. Area 4,0-6,0 MM2.
102. Area 1,0-2,5 MM2.
103. Area 0,8-2,1 MM2.
106. Area 2,5-4,0 MM2.
113. Area 0,8-2,5 MM2.
115. Area 0,75-1,5 MM2.
116. Area 0,3-0,6 MM2.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-F04

## *Cable terminal*
*1987*

## *Ledningssko*
*1987*

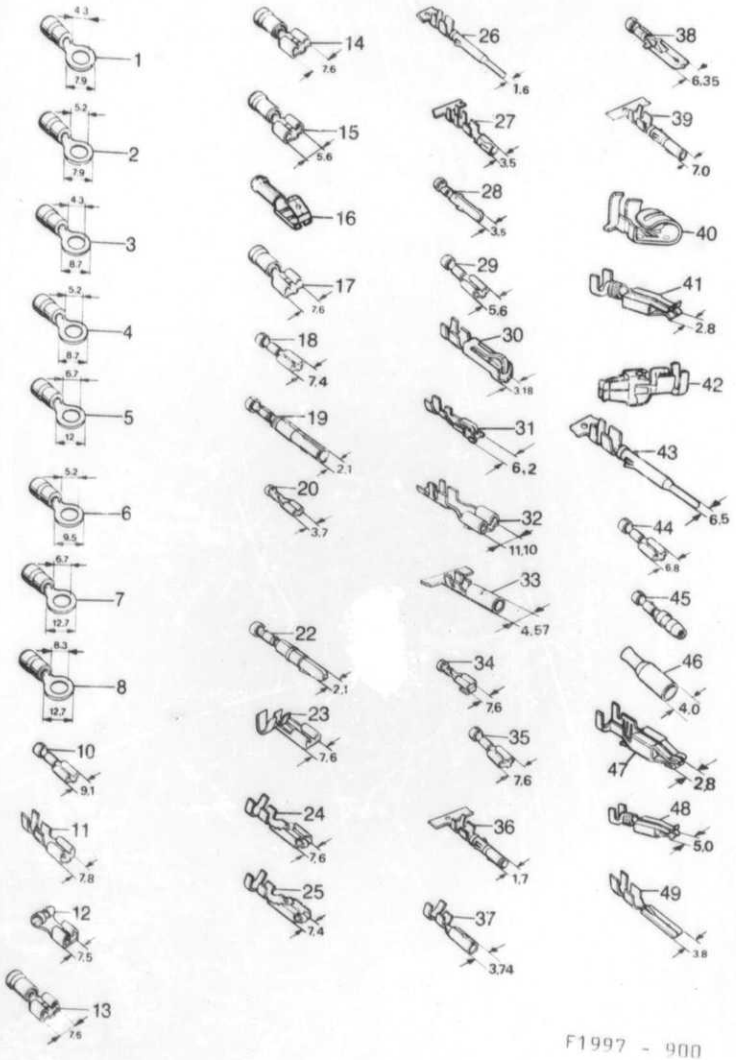


F1997 - 900

| 2100 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 1890 | 48 | 91 20 767 | | 101),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1900 | | | | 8544249, 9124090 | | | | |
| 1910 | 48 | 95 21 972 | | 97), JOINT PIECE COWL, | X | Cable terminal | Kabelsko | 5 |
| 1920 | | | | FOR CONTACT HOUSING, | | | | |
| 1930 | | | | 9124165, 9124199,9521972 | | | | |
| 1940 | 48 | *95 21 980* | | 99), JOINT PIECE COWL, | X | Cable terminal | Kabelsko | 5 |
| 1950 | | | | FOR CONTACT HOUSING, | | | | |
| 1960 | | | | 9124157,9124165, 9124199 | | | | |
| 1960 | | | | NLS - USE 9120783 | | | | |
| 1970 | 48 | 95 21 998 | | 106),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1980 | | | | 9124199 | | | | |
| 1990 | 49 | 95 52 100 | | 115),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 2000 | | | | 9124199 | | | | |
| 2010 | 49 | *95 52 126* | | 97), FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 2020 | | | | 9122557 NLS - USE | | | | |
| 2020 | | | | 9552100 | | | | |

97. Area 0,5-1,0 MM2.
99. Area 1,5-2,5 MM2.
101. Area 4,0-6,0 MM2.
106. Area 2,5-4,0 MM2.
115. Area 0,75-1,5 MM2.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-F06

## Cable terminal
## 1987

## Ledningssko
## 1987

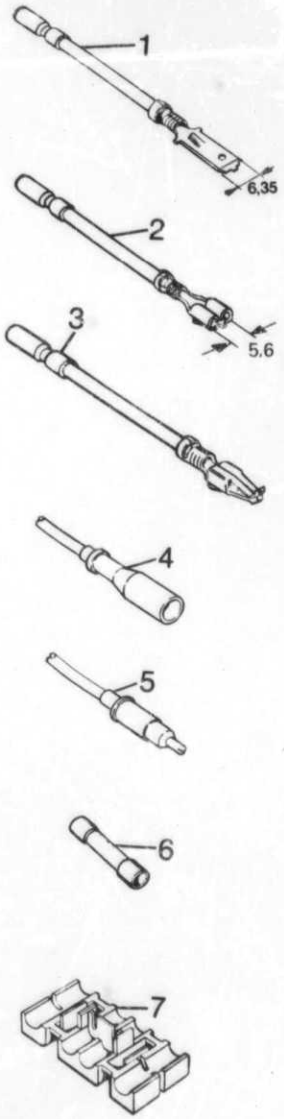


F1998 - 900

| 2150 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 85 22 542 | | 112), FOR FUSE BOX, | X | Cable terminal | Kabelsko | 5 |
| 0020 | | | | JOINT PIECE, FOR | | | | |
| 0030 | | | | CONTACT HOUSING, 7155104 | | | | |
| 0040 | | | | 7155120, 7342900,8558546 | | | | |
| 0050 | 2 | 85 22 567 | | 6), FOR JOINT PIECE, | X | Cable terminal | Kabelsko | 5 |
| 0060 | | | | FOR CONTACT HOUSING, | | | | |
| 0070 | | | | 8516890 | | | | |
| 0080 | 3 | 85 22 617 | | 112), JOINT PIECE, | X | Cable terminal | Kabelsko | 5 |
| 0090 | | | | FOR CONTACT HOUSING | | | | |
| 0100 | | | | 8533821, 8539363,8582082 | | | | |
| 0110 | | | | 8586802, 8593899,8593907 | | | | |
| 0120 | | | | 8593915, 8593923,8593949 | | | | |
| 0130 | | | | 8597064 | | | | |
| 0140 | 4 | 78 74 498 | | FOR JOINT PIECE, AC | X | Connection | Skarv | 5 |
| 0150 | | | | COMPRESSOR, CENTRAL LOCK | | | | |
| 0160 | | | | FOR CONTACT HOUSING, | | | | |
| 0170 | | | | 9503277, 9503319,9503418 | | | | |
| 0180 | | | | 9503434, 9503475,9501685 | | | | |
| 0190 | | | | 9519679 | | | | |
| 0200 | 5 | 78 74 506 | | FOR JOINT PIECE, FOR | X | Connection | Skarv | 5 |
| 0210 | | | | CONTACT HOUSING, 9503327 | | | | |
| 0220 | | | | 9503327, 9503426,9506668 | | | | |
| 0230 | 6 | 71 55 146 | | 6), 40/253 188 007 | X | Connector housing | Skarvhus | 5 |
| 0240 | 6 | 71 55 203 | | 10), 40/253 164 008 | X | Connector housing | Skarvhus | 5 |
| 0250 | 6 | 71 55 633 | | 32), 40/253 221 006 | X | Connector housing | Skarvhus | 5 |
| 0260 | 7 | 85 21 668 | | AREA 0,8-2,1 MM2 | X | Cable joint | Ledningsförbindning | 3 |

6. Blue colour code (area 1,5-2,5 MM2). Blå färgkod (area 1,5-2,5 MM2).
10. Red colour code (area 0,3-1,5 MM2). Röd färgkod (area 0,3-1,5 MM2).
32. Yellow colour code (area 3,0-6,0 MM2). Gul färgkod (area 3,0-6,0 MM2).
112. Green colour code (area 1,5 MM2). Grön färgkod (area 1,5 MM2).

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-F08

## Cable terminal
*1988*

## Ledningssko
*1988*

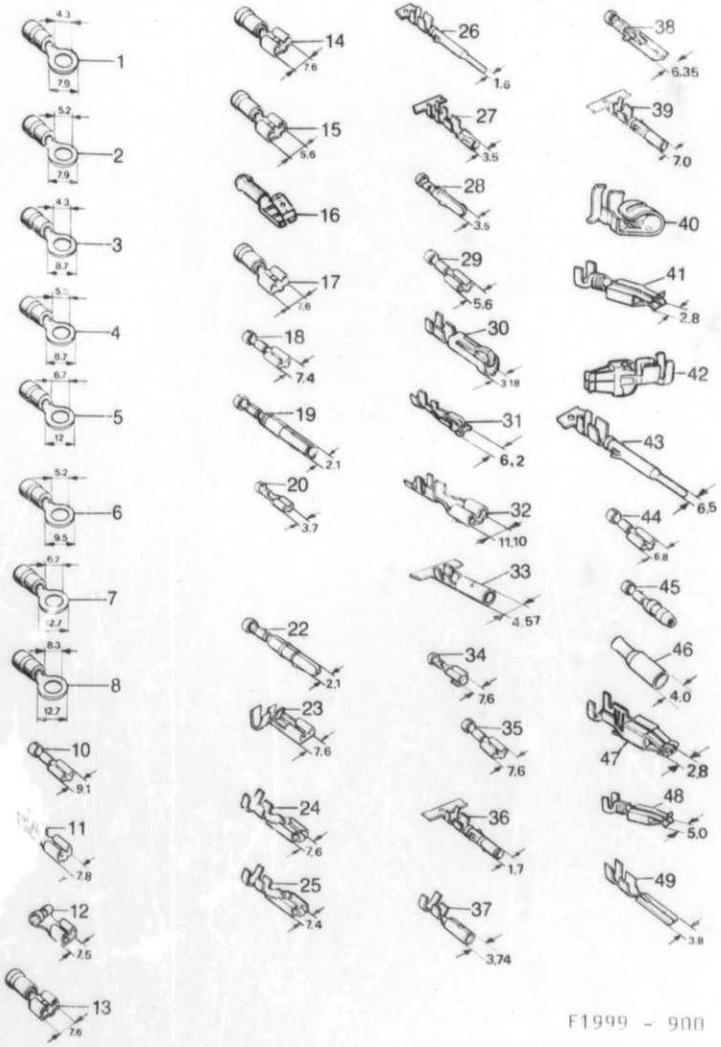


| 2200 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 71 55 211 | | 98), 40/253 152 003 | X | Cable terminal | Kabelsko | 5 |
| 0020 | 2 | 71 55 229 | | 98), 40/253 153 001 | X | Cable terminal | Kabelsko | 5 |
| 0030 | 3 | 71 55 237 | | 99), 40/253 172 001 | X | Cable terminal | Kabelsko | 5 |
| 0040 | 4 | 71 17 880 | | 99), 40/253 173 009 | X | Cable terminal | Kabelsko | 5 |
| 0050 | 5 | 78 29 617 | | 99), 40/253 174 007 | X | Cable terminal | Kabelsko | 5 |
| 0060 | 6 | 71 55 658 | | 100), 40/253 210 009 | X | Cable terminal | Kabelsko | 5 |
| 0070 | 7 | 78 29 666 | | 100), 40/253 211 007 | X | Cable terminal | Kabelsko | 5 |
| 0080 | 8 | 78 29 674 | | 100), 40/253 212 005 | X | Cable terminal | Kabelsko | 5 |
| 0090 | | | | | | | | |
| 0100 | 10 | 85 82 413 | | 95), FOR CONTACT HOUSING 7155021 | X | Cable terminal | Kabelsko | 5 |
| 0110 | | | | | | | | |
| 0120 | 11 | 71 55 716 | | 96), FOR THERMO SWITCH, DOME LIGHT, FUSE BOX, JOINT PIECE, LIGHT CONTROLS, LAMP SAFETY BELT WARNING, CYKEL THERMOSTAT, FOR CONTACT HOUSING 8516916, 8572083 | X | Cable terminal | Kabelsko | 5 |
| 0130 | | | | | | | | |
| 0140 | | | | | | | | |
| 0150 | | | | | | | | |
| 0160 | | | | | | | | |
| 0170 | | | | | | | | |
| 0180 | | | | | | | | |
| 0190 | 12 | *71 96 710* | | 97), FOR THERMO SWITCH, DOOR SWITCH NLS | X | Cable terminal | Kabelsko | 5 |
| 0200 | | | | | | | | |
| 0210 | 13 | 78 29 609 | | 98), 40/253 168 009 | X | Cable terminal | Kabelsko | 5 |
| 0220 | 14 | 78 29 625 | | 99), 40/253 195 002 | X | Connector | Anslutning | 3 |
| 0230 | 15 | *78 29 633* | | 99), 40/253 197 008, FOR HEADLIGHT NLS | X | Contact housing | Kontakthus | 5 |
| 0240 | | | | | | | | |
| 0250 | 16 | 78 29 641 | | 99) | X | Manifold | Förgrening | 3 |
| 0260 | 17 | 78 29 682 | | 100), 40/253 226 005 | X | Cable terminal | Kabelsko | 3 |
| 0270 | 18 | 79 68 068 | | 101), FOR EL-CENTRAL, JOINT PIECE, FOR CONTACT HOUSING 8533705, 8544397 8558538 | X | Cable terminal | Kabelsko | 5 |
| 0280 | | | | | | | | |
| 0290 | | | | | | | | |
| 0300 | | | | | | | | |
| 0310 | 18 | *79 72 029* | | 102), IN FUSE BOX, FUEL PUMP, JOINT PIECE, FOR CONTACT HOUSING 7155096, 8533697, 8533705,8544397 8552200 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 0320 | | | | | | | | |
| 0330 | | | | | | | | |
| 0340 | | | | | | | | |
| 0350 | | | | | | | | |
| 0360 | 18 | *85 82 397* | | 102), FOR APC, FUSE BOX, FOR CONTACT HOUSING, 7155120, 8533697 NLS | X | Cable terminal | Kabelsko | 5 |
| 0370 | | | | | | | | |
| 0380 | | | | | | | | |
| 0390 | 18 | *85 82 405* | | 98), FOR CONTACT HOUSING 8541229 NLS - USE 8560476 | X | Cable terminal | Kabelsko | 5 |
| 0400 | | | | | | | | |
| 0400 | | | | | | | | |
| 0410 | 18 | *71 55 039* | | 99), FOR LIGHT CIGARETTE LIGHTER, FAN, FUSE BOX, FOR CONTACT HOUSING 8516916 NLS | X | Cable terminal | Kabelsko | 5 |
| 0420 | | | | | | | | |
| 0430 | | | | | | | | |
| 0440 | | | | | | | | |
| 0450 | 18 | *85 82 454* | | 98), FOR CONTACT HOUSING 7155096, 7155112,7342892 8521536, 8533697 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 0460 | | | | | | | | |
| 0470 | | | | | | | | |
| 0470 | | | | | | | | |
| 0480 | 18 | 85 82 546 | | 101),FOR CONTACT HOUSING 7342892 | X | Cable terminal | Kabelsko | 5 |
| 0490 | | | | | | | | |

95. Area 1,3-3,4 MM2.
96. Area 0,4-1,0 MM2.
97. Area 0,5-1,0 MM2.
98. Area 0,5-1,5 MM2.
99. Area 1,5-2,5 MM2.
100. Area 3,0-6,0 MM2.
101. Area 4,0-6,0 MM2.
102. Area 1,0-2,5 MM2.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-F10

## Cable terminal
1988

## Ledningssko
1988

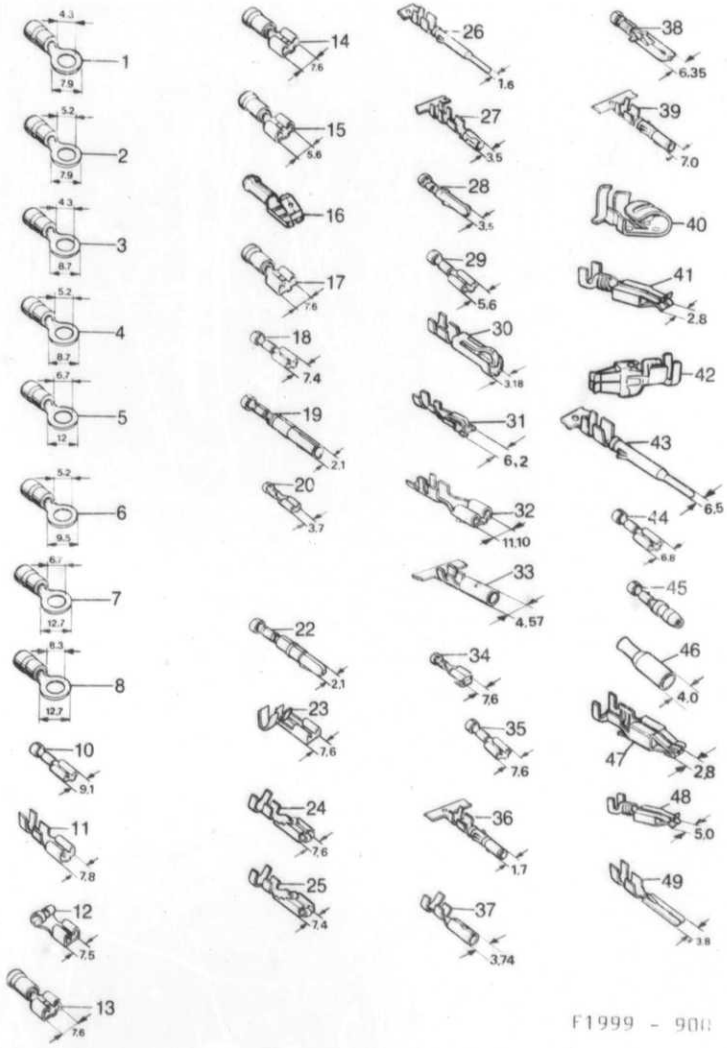


| 2200 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0500 18 | *71 55 153* | | 103),FOR CONTACT HOUSING 7155096, 7155112,7342892 8521536, 8533697,8552200 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 0530 18 | *85 83 379* | | 98), FOR CONTACT HOUSING 7155112 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 3 |
| 0550 19 | 85 22 583 | | 104),FOR CONTACT HOUSING 8504771, 8516932,8553869 8590192 | X | Cable terminal | Kabelsko | 5 |
| 0580 20 | 85 30 107 | | 97), FOR CONTACT HOUSING 8530115 | X | Cable terminal | Kabelsko | 3 |
| 0600 20 | *85 09 846* | | 105),FOR CONTACT HOUSING 8378630, 8540569,8571390 NLS - USE 8522575 | X | Cable terminal | Kabelsko | 5 |
| 0620 22 | 85 16 817 | | 97), FOR CONTACT HOUSING 8504789, 8530081 | X | Cable terminal | Kabelsko | 5 |
| 0640 22 | *85 03 161* | | 97), FOR CONTACT HOUSING 8516940, 8530081 NLS - USE 8522591 | X | Cable terminal | Kabelsko | 5 |
| 0660 22 | *85 03 187* | | 102), FOR JOINT PIECE NLS - USE 8522591 | X | Cable terminal | Kabelsko | 5 |
| 0670 23 | *85 21 676* | | 101), FOR JOINT PIECE, IDLE COMPENSATOR, THERMO SWITCH AC, AC VALVE AIR SLIDE, VALVE AC RECIRCU-LATION, FOR CONTACT HOUSING, 8521692,9518416 NLS - USE 8522526 | X | Cable terminal | Kabelsko | 5 |
| 0730 23 | *85 21 684* | | 102),FOR CONTACT HOUSING 8521692 NLS - USE 8522526 | X | Cable terminal | Kabelsko | 5 |
| 0750 23 | 95 59 469 | | 102), RESISTOR DIM-DIP | X | Cable terminal | Kabelsko | 5 |
| 0760 23 | *85 82 421* | | 102), FOR JOINT PIECE, FOR CONTACT HOUSING 8521692 NLS - USE 8522526 | X | Cable terminal | Kabelsko | 5 |
| 0790 24 | *85 41 203* | | 97),FOR GLOVE BOX LIGHT, EARTH, THERMOSTAT AC, DIRECTION INDICATOR, LOW PRESSURE SWITCH, MICRO SWITCH,TAIL LIGHT, SWITCH FAN, NUMBER PLATE LIGHT, FOR CONTACT HOUSING, 8541229,8544363 NLS - USE 8560476 | X | Cable terminal | Kabelsko | 5 |
| 0870 25 | 85 41 211 | | 106), FOR FUSE BOX, FAN UNIT, GLOVE BOX LIGHT, DIRECTION INDICATOR, JOINT PIECE, MICRO MICRO SWITCH, THERMOSTAT AC, FOR CONTACT HOUSING, 8541229, 8544363,8574949 | X | Cable terminal | Kabelsko | 5 |

97. Area 0,5-1,0 MM2.
98. Area 0,5-1,5 MM2.
101. Area 4,0-6,0 MM2.
102. Area 1,0-2,5 MM2.
103. Area 0,8-2,1 MM2.
104. Area 0,8-3,4 MM2.
105. Area 0,5-1,4 MM2.
106. Area 2,5-4,0 MM2.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-F12

## *Cable terminal* / *Ledningssko*

*1988* / *1988*

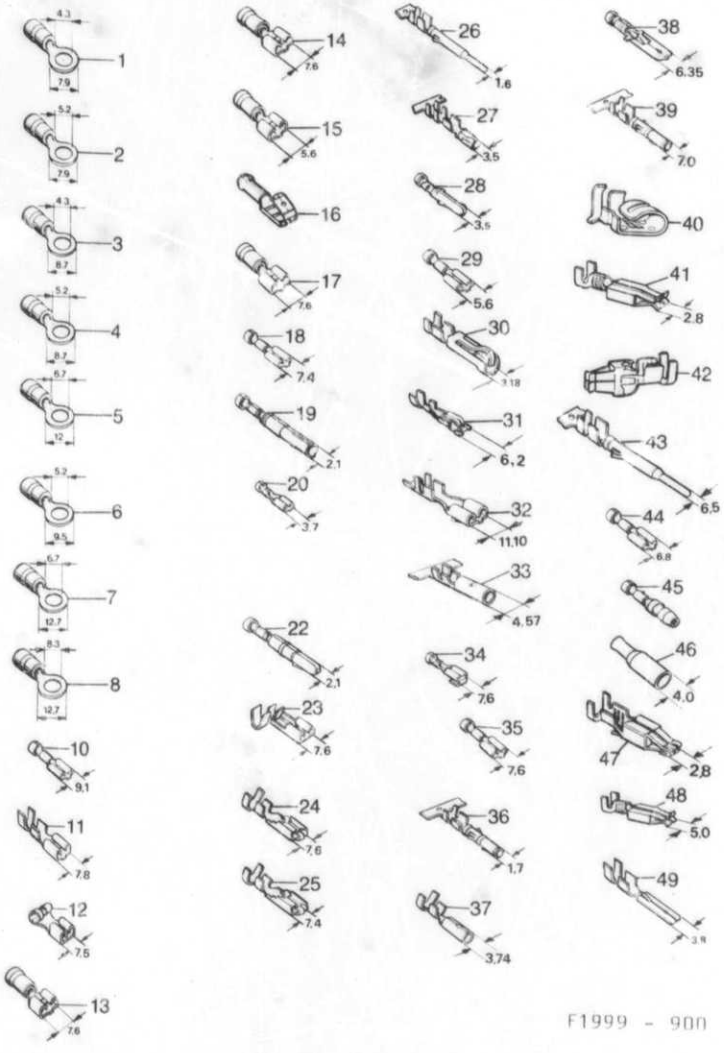


| Fos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 25 | 85 60 476 | | 114), JOINT PIECE, FOR CONTACT HOUSING, 8574949 9507658 | X | Cable terminal | Kabelsko | 5 |
| 26 | 85 44 298 | | 107), FOR FUSE BOX, FOR CONTACT HOUSING, 8544223, 853497,8561631 8564916 | X | Cable terminal | Kabelsko | 5 |
| 26 | 85 93 956 | | 102),FOR CONTACT HOUSING 8544231, 8544256 | X | Cable terminal | Kabelsko | 5 |
| 27 | 85 44 306 | | 108),FOR EL-CENTRAL, FOR CONTACT HOUSING 8544207, 8544223, 8544249,8553497 8564916 | X | Cable terminal | Kabelsko | 5 |
| 27 | 85 82 595 | | 107), FOR FUSE BOX, THEFT ALARM, HORN, FOR CONTACT HOUSING, 8544249 | X | Cable terminal | Kabelsko | 5 |
| 28 | *85 44 314* | | 107), FOR JOINT PIECE, FUSE BOX, FOR CONTACT HOUSING, 8544215,8544231 8544256, 8553505,8561623 NLS - USE 8582603 | X | Cable terminal | Kabelsko | 5 |
| 28 | 85 44 322 | | 107),FOR CONTACT HOUSING 8544215, 8544231,8544256 | X | Cable terminal | Kabelsko | 5 |
| 29 | *85 14 028* | | 109), OIL GUARD, TEMP SENSOR, DOOR SWITCH, JOINT PIECE, FOR CONTACT HOUSING, 8516916,8572083 NLS - USE 7155716 | X | Cable terminal | Kabelsko | 5 |
| 29 | *85 33 028* | | 98), FOR PRESSURE SWITCH FOR CONTACT HOUSING, 8533184 NLS - USE 8582439 | X | Cable terminal | Kabelsko | 3 |
| 29 | 85 82 447 | | 10), FOR JOINT PIECE, FOR CONTACT HOUSING, 8516890 | X | Cable terminal | Kabelsko | 5 |
| 30 | 85 60 278 | | 97), FOR CONTACT HOUSING 8543436 | X | Cable terminal | Kabelsko | 5 |
| 31 | 85 68 768 | | 97), FOR CONTACT HOUSING 8568735 | X | Cable terminal | Kabelsko | 5 |
| 32 | 85 69 139 | | 101), FUSE BOX | X | Cable terminal | Kabelsko | 5 |
| 32 | 85 88 188 | | 110), FUSE BOX | X | Cable terminal | Kabelsko | 5 |
| 33 | 85 72 596 | | 111), COMPRESSOR | X | Cable terminal | Kabelsko | 5 |
| 34 | 85 03 286 | | 103), FUSE BOX, JOINT PIECE | X | Cable terminal | Kabelsko | 5 |
| 35 | *85 59 205* | | 101),FOR CONTACT HOUSING 8516916, 8521544 NLS | X | Cable terminal | Kabelsko | 5 |
| 35 | 85 14 036 | | 102), FOR SWITCH HOOD, FOR CONTACT HOUSING, 8516916, 8521544,8572083 | X | Cable terminal | Kabelsko | 5 |
| 36 | 85 79 393 | | 102), FUSE BOX | X | Cable terminal | Kabelsko | 5 |

10. Red colour code (area 0,3-1,5 MM2). Röd färgkod (area 0,3-1,5 MM2).
97. Area 0,5-1,0 MM2.
98. Area 0,5-1,5 MM2.
101. Area 4,0-6,0 MM2.
102. Area 1,0-2,5 MM2.
103. Area 0,8-2,1 MM2.
107. Area 0,5-2,0 MM2.
108. Area 2,0-4,0 MM2.
109. Area 0,3-0,8 MM2.
110. Area 6,0-10,0 MM2.
111. Area 0,6-1,4 MM2.
114. Area 0,9-2,0 MM2.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-F14

## Cable terminal
1988

## Ledningssko
1988

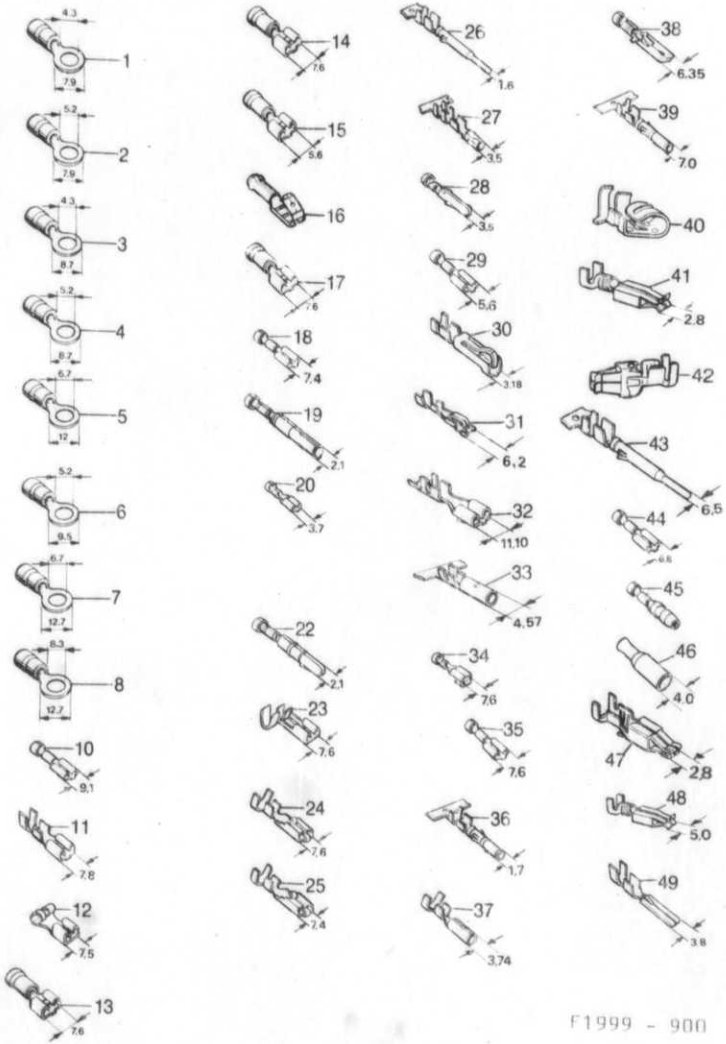


| 2200 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 1410 | 36 | 85 87 560 | | 102),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1420 | | | | 8544207, 8544223 | | | | |
| 1430 | 37 | 79 71 708 | | 98), FUSE BOX, | X | Cable terminal | Kabelsko | 5 |
| 1440 | | | | FOR CONTACT HOUSING, | | | | |
| 1450 | | | | 7155096, 7155112,8533705 | | | | |
| 1460 | 38 | 85 16 957 | | 101),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1470 | | | | 8558546, 9502998 | | | | |
| 1480 | 38 | 85 82 637 | | 103),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1490 | | | | 7155120 | | | | |
| 1500 | 38 | *71 55 062* | | 113), FOR EL-PAD, FOR | X | Cable terminal | Kabelsko | 5 |
| 1510 | | | | CONTACT HOUSING, 9502758 | | | | |
| 1520 | | | | 9502758, 9503012 NLS - | | | | |
| 1530 | | | | USE 8522542 | | | | |
| 1530 | 38 | 85 93 089 | | 97), FOR EL-PAD, FOR | X | Cable terminal | Kabelsko | 5 |
| 1540 | | | | CONTACT HOUSING, 9124181 | | | | |
| 1550 | | | | 9503012 | | | | |
| 1560 | 39 | 85 87 552 | | 98),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1570 | | | | 8544207, 8544223,8544249 | | | | |
| 1580 | 40 | 85 82 090 | | 98), FOR SWITCH WINDOW | X | Cable terminal | Kabelsko | 5 |
| 1590 | | | | REGULATOR, JOINT PIECE, | | | | |
| 1600 | | | | REGULATOR, FOR CONTACT | | | | |
| 1610 | | | | HOUSING, 8582116 | | | | |
| 1620 | 41 | 91 20 775 | | 97), FOR FUSE BOX, JOINT | X | Cable terminal | Kabelsko | 5 |
| 1630 | | | | PIECE, FOR CONTACT | | | | |
| 1640 | | | | HOUSING, 8533655,8544249 | | | | |
| 1650 | | | | 9124090, 9124157 | | | | |
| 1660 | 42 | 91 20 783 | | 102),FOR FUSE BOX, JOINT | X | Cable terminal | Kabelsko | 5 |
| 1670 | | | | PIECE, FOR CONTACT | | | | |
| 1680 | | | | HOUSING, 8533655,9124090 | | | | |
| 1690 | | | | 9124090, 9124157,9124199 | | | | |
| 1700 | 43 | 85 93 964 | | 98), FOR FUSE BOX, | X | Cable terminal | Kabelsko | 5 |
| 1710 | | | | FOR CONTACT HOUSING, | | | | |
| 1720 | | | | 8544215, 8544231,8544256 | | | | |
| 1730 | | | | 8544363 | | | | |
| 1740 | 44 | 91 20 791 | | 106), FOR JOINT PIECE, | X | Cable terminal | Kabelsko | 5 |
| 1750 | | | | FUSE, FOR CONTACT | | | | |
| 1760 | | | | HOUSING, 8544249,9124090 | | | | |
| 1770 | | | | 9124157, 9124165,9124191 | | | | |
| 1780 | | | | 9125543, 9507658 | | | | |
| 1790 | 44 | *71 55 047* | | 101), FOR FUSE BOX, FAN, | X | Cable terminal | Kabelsko | 5 |
| 1800 | | | | FOR CONTACT HOUSING, | | | | |
| 1810 | | | | 9124090 NLS | | | | |
| 1820 | 45 | 85 81 951 | | 103), FOR THEFT ALARM, | X | Cable terminal | Kabelsko | 3 |
| 1830 | | | | JOINT PIECE | | | | |
| 1840 | 46 | 85 82 579 | | 98), JOINT PIECE, HORN | X | Cable terminal | Kabelsko | 5 |
| 1850 | 47 | *91 20 668* | | 115),FOR FUSE BOX, JOINT | X | Cable terminal | Kabelsko | 5 |
| 1860 | | | | PIECE, FOR CONTACT | | | | |
| 1870 | | | | HOUSING, 8593899,8593907 | | | | |
| 1880 | | | | 8593915, 8593923,8593931 | | | | |
| 1890 | | | | 8593949, 8597064,9123399 | | | | |
| 1900 | | | | 9124199, 9514803,9561093 | | | | |
| 1910 | | | | 9561333, 9563081 NLS - | | | | |
| 1910 | | | | USE 9120957 | | | | |

97. Area 0,5-1,0 MM2.
98. Area 0,5-1,5 MM2.
101. Area 4,0-6,0 MM2.
102. Area 1,0-2,5 MM2.
103. Area 0,8-2,1 MM2.
106. Area 2,5-4,0 MM2.
113. Area 0,8-2,5 MM2.
115. Area 0,75-1,5 MM2.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-F16

## *Cable terminal*
*1988*

## *Ledningssko*
*1988*

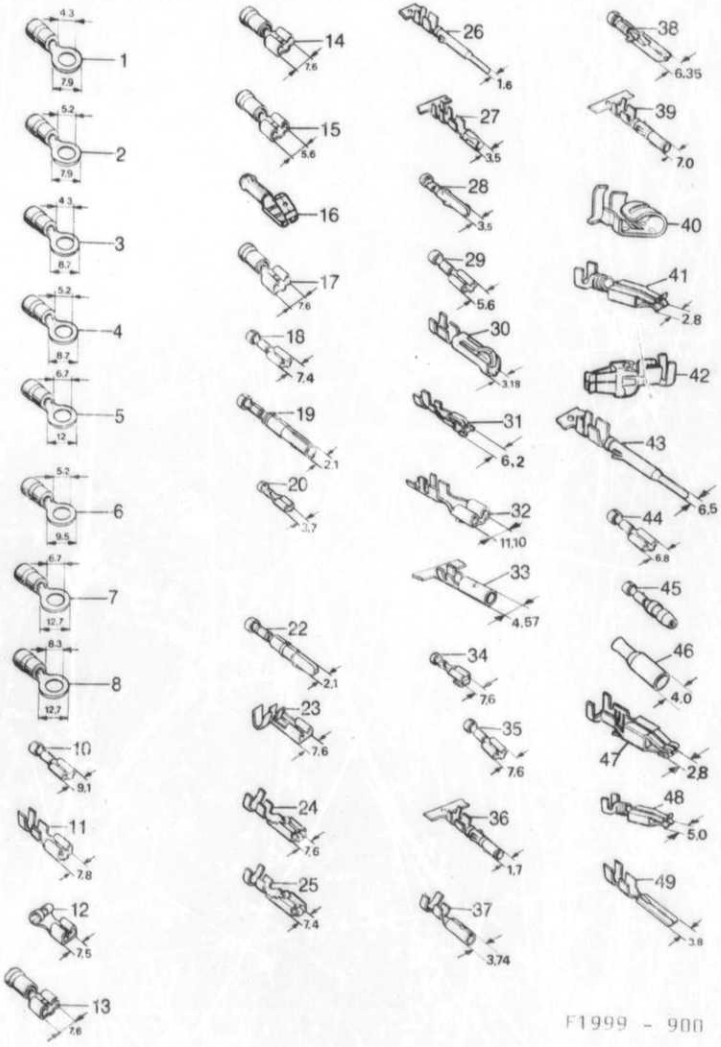


F1999 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 47 | *95 08 714* | | 116),FOR CONTACT HOUSING 9123399 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 48 | 95 21 972 | | 97), JOINT PIECE COWL, FOR CONTACT HOUSING, 9124165, 9124199,9521972 | X | Cable terminal | Kabelsko | 5 |
| 48 | *95 21 980* | | 99), FOR CONTACT HOUSING 9507658 NLS - USE 9120783 | X | Cable terminal | Kabelsko | 5 |
| 48 | 95 21 998 | | 106), FOR FUSE BOX | X | Cable terminal | Kabelsko | 5 |
| 49 | 95 52 100 | | 115),FOR CONTACT HOUSING 9122557, 9124199 | X | Cable terminal | Kabelsko | 5 |
| 49 | *95 52 126* | | 97), FOR CONTACT HOUSING 9122557 NLS - USE 9552100 | X | Cable terminal | Kabelsko | 5 |

97. Area 0,5-1,0 MM2.
99. Area 1,5-2,5 MM2.
106. Area 2,5-4,0 MM2.
115. Area 0,75-1,5 MM2.
116. Area 0,3-0,6 MM2.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-F18 Cable terminal 1988

# Ledningssko 1988

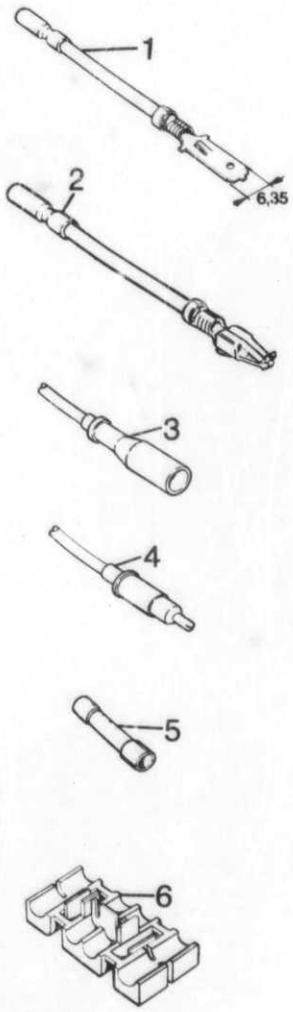


| 2250 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0010 1 | 85 22 542 | | 112), FOR FUSE BOX, JOINT PIECE, FOR CONTACT HOUSING, 7155104 7155120, 7342900,8558546 | X | Cable terminal | Kabelsko | 5 |
| 0050 2 | 85 22 617 | | 112), JOINT PIECE, FOR CONTACT HOUSING, 8533821, 8539363,8593899 | X | Cable terminal | Kabelsko | 5 |
| 0080 3 | 78 74 498 | | FOR JOINT PIECE, AC COMPRESSOR,CENTRAL LOCK, PASSIVE SEAT BELTS, FOR CONTACT HOUSING, 9503277, 9503319,9503418 9503434, 9503475,9501685 9519679 | X | Connection | Skarv | 5 |
| 0150 4 | 78 74 506 | | FOR JOINT PIECE, CENTRAL LOCK, EL-MIRROR, WINDOW REGULATOR, EL HEATED MIRROR, FOR CONTACT HOUSING, 9503327,9503327 9503426, 9506668 | X | Connection | Skarv | 5 |
| 0210 5 | 71 55 146 | | 6), 40/253 188 007 | X | Connector housing | Skarvhus | 5 |
| 0220 5 | 71 55 203 | | 10), 40/253 164 008 | X | Connector housing | Skarvhus | 5 |
| 0230 5 | 71 55 633 | | 32), 40/253 221 006 | X | Connector housing | Skarvhus | 5 |
| 0240 6 | 85 21 668 | | AREA 0,8-2,1 MM2 | X | Cable joint | Ledningsförbindning | 3 |

6. Blue colour code (area 1,5-2,5 MM2). Blå färgkod (area 1,5-2,5 MM2).
10. Red colour code (area 0,3-1,5 MM2). Röd färgkod (area 0,3-1,5 MM2).
32. Yellow colour code (area 3,0-6,0 MM2). Gul färgkod (area 3,0-6,0 MM2).
112. Green colour code (area 1,5 MM2). Grön färgkod (area 1,5 MM2).

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

F2000 - 900

# 3-F20

## Cable terminal
1989

## Ledningssko
1989

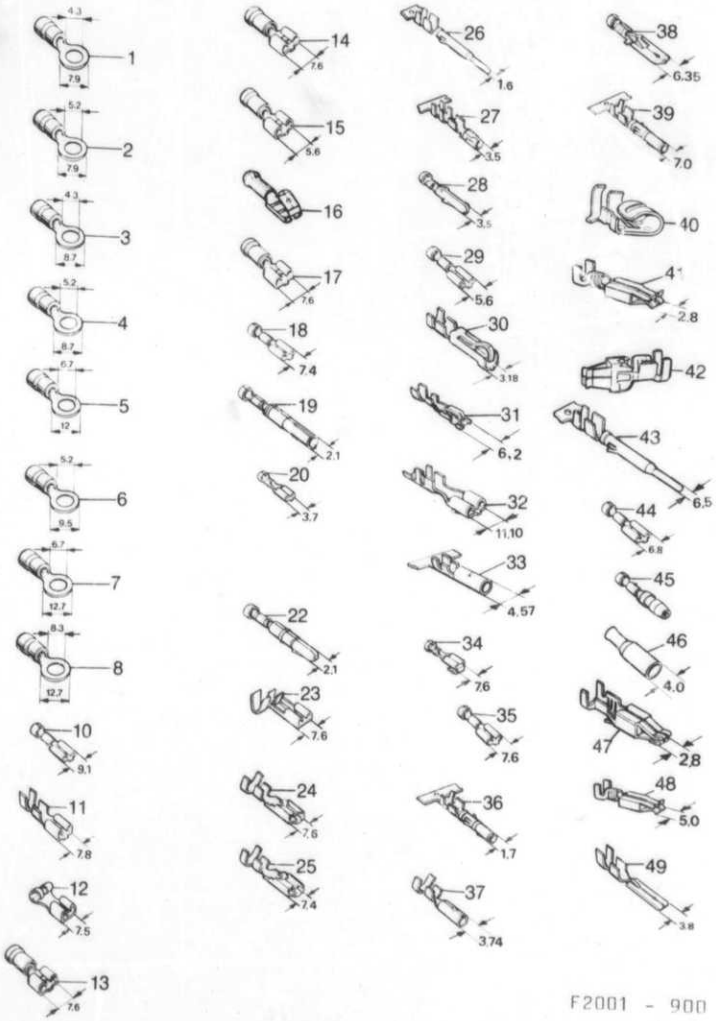


| 2300 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 71 55 211 | | 98) 40/253 152 003 | X | Cable terminal | Kabelsko | 5 |
| 0020 | 2 | 71 55 229 | | 98) 40/253 153 001 | X | Cable terminal | Kabelsko | 5 |
| 0030 | 3 | 71 55 237 | | 99) 40/253 172 001 | X | Cable terminal | Kabelsko | 5 |
| 0040 | 4 | 71 17 880 | | 99) 40/253 173 009 | X | Cable terminal | Kabelsko | 5 |
| 0050 | 5 | 78 29 617 | | 99) 40/253 174 007 | X | Cable terminal | Kabelsko | 5 |
| 0060 | 6 | 71 55 658 | | 100) 40/253 210 009 | X | Cable terminal | Kabelsko | 5 |
| 0070 | 7 | 78 29 666 | | 100) 40/253 211 007 | X | Cable terminal | Kabelsko | 5 |
| 0080 | 8 | 78 29 674 | | 100) 40/253 212 005 | X | Cable terminal | Kabelsko | 5 |
| 0090 | | | | | | | | |
| 0100 | 10 | 85 82 413 | | 95), FOR CONTACT HOUSING 7155021 | X | Cable terminal | Kabelsko | 5 |
| 0110 | | | | | | | | |
| 0120 | 11 | 71 55 716 | | 96), FOR THERMO SWITCH, DOME LIGHT, FUSE BOX, LIGHT CONTROLS, LAMP LAMP SAFETY BELT WARNING SWITCH EGR, BRAKE LIGHT, EL-MIRROR, VALVE RECIR-KULATION AC, FOR CONTACT HOUSING, 8516916,8572083 | X | Cable terminal | Kabelsko | 5 |
| 0130 | | | | | | | | |
| 0140 | | | | | | | | |
| 0150 | | | | | | | | |
| 0160 | | | | | | | | |
| 0170 | | | | | | | | |
| 0180 | | | | | | | | |
| 0190 | | | | | | | | |
| 0200 | 12 | *71 96 710* | | 97), FOR THERMO SWITCH, DOOR SWITCH NLS | X | Cable terminal | Kabelsko | 5 |
| 0210 | | | | | | | | |
| 0220 | 13 | 78 29 609 | | 98), 40/253 168 009 | X | Cable terminal | Kabelsko | 5 |
| 0230 | 14 | 78 29 625 | | 99), 40/253 195 002 | X | Connector | Anslutning | 3 |
| 0240 | 15 | *78 29 633* | | 99), 40/253 197 008, FOR HEADLIGHT NLS | X | Contact housing | Kontakthus | 5 |
| 0250 | | | | | | | | |
| 0260 | 16 | 78 29 641 | | 99) | X | Manifold | Förgrening | 3 |
| 0270 | 17 | 78 29 682 | | 100), 40/253 226 005 | X | Cable terminal | Kabelsko | 3 |
| 0280 | 18 | 79 68 068 | | 101), FOR EL-CENTRAL, FOR CONTACT HOUSING, 8533705, 8544397,8558538 | X | Cable terminal | Kabelsko | 5 |
| 0290 | | | | | | | | |
| 0300 | | | | | | | | |
| 0310 | 18 | *79 72 029* | | 102), IN FUSE BOX, FUEL PUMP, GROUND TRUNK LID, RELAY HORN, RELAY REAR DEMIST, RELAY LIGHT, RELAY IGNITION LOCK, RELAY FUEL PUMP, TAIL LIGHT,IN CONTACT HOUSING 7155096, 8533697,8533705 8544397, 8552200 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 0320 | | | | | | | | |
| 0330 | | | | | | | | |
| 0340 | | | | | | | | |
| 0350 | | | | | | | | |
| 0360 | | | | | | | | |
| 0370 | | | | | | | | |
| 0380 | | | | | | | | |
| 0390 | | | | | | | | |
| 0390 | | | | | | | | |
| 0400 | 18 | *85 82 397* | | 102), FOR APC, FUSE BOX, FOR CONTACT HOUSING, 7155120, 8533697 NLS | X | Cable terminal | Kabelsko | 5 |
| 0410 | | | | | | | | |
| 0420 | | | | | | | | |
| 0430 | 18 | *85 82 405* | | 98), FOR CONTACT HOUSING 8541229 NLS - USE 8560476 | X | Cable terminal | Kabelsko | 5 |
| 0440 | | | | | | | | |
| 0440 | | | | | | | | |
| 0450 | 18 | *71 55 039* | | 99), FOR LIGHT CONTROLS, FUSE BOX, FOR CONTACT HOUSING 8516916 NLS | X | Cable terminal | Kabelsko | 5 |
| 0460 | | | | | | | | |
| 0470 | | | | | | | | |
| 0480 | 18 | *85 82 454* | | 98), FOR CONTACT HOUSING 7155096, 7342892 8521536, 8533697 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 0490 | | | | | | | | |
| 0500 | | | | | | | | |
| 0500 | | | | | | | | |
| 0510 | 18 | 85 82 546 | | 101),FOR CONTACT HOUSING 7342892 | X | Cable terminal | Kabelsko | 5 |
| 0520 | | | | | | | | |

95. Area 1,3-3,4 MM2.
96. Area 0,4-1,0 MM2.
97. Area 0,5-1,0 MM2.
98. Area 0,5-1,5 MM2.
99. Area 1,5-2,5 MM2.
100. Area 3,0-6,0 MM2.
101. Area 4,0-6,0 MM2.
102. Area 1,0-2,5 MM2.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

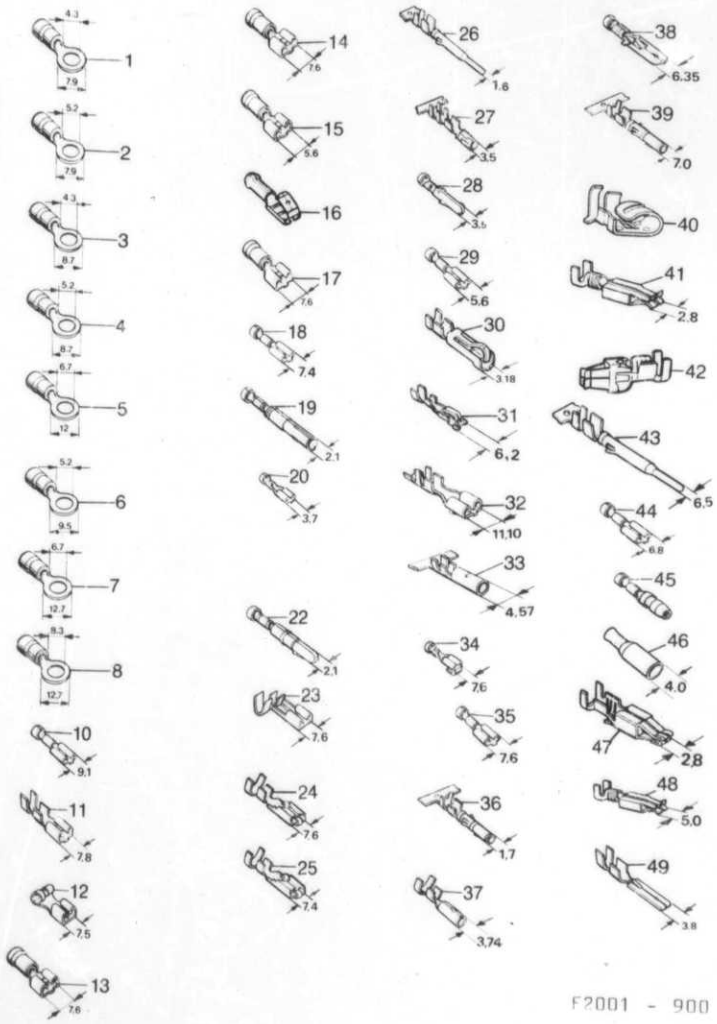


Wiring and fuses

# 3-F22

## *Cable terminal*

*1989*

Ledningar och säkringar

## *Ledningssko*

*1989*

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 18 | *71 55 153* | | 103), TAIL LAIGHT, FOR CONTACT HOUSING, 7155096 7155112, 7342892,8521536 8533697, 8552200 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 5 |
| 18 | *85 83 379* | | 98), FOR CONTACT HOUSING 7155112 NLS - USE 8522534 | X | Cable terminal | Kabelsko | 3 |
| 19 | 85 22 593 | | 104),FOR CONTACT HOUSING 8504771, 8516932,8553869 8590192 | X | Cable terminal | Kabelsko | 5 |
| 20 | 85 30 107 | | 097, FOR CONTACT HOUSING 8530115 | X | Cable terminal | Kabelsko | 3 |
| 20 | *85 09 846* | | 105),FOR CONTACT HOUSING 8378630, 8540569,8571390 NLS - USE 8522575 | X | Cable terminal | Kabelsko | 5 |
| 22 | 85 16 817 | | 97), FOR CONTACT HOUSING 8530081 | X | Cable terminal | Kabelsko | 5 |
| 22 | *85 03 161* | | 97), FOR CONTACT HOUSING 8516940, 8530081 NLS - USE 8522591 | X | Cable terminal | Kabelsko | 5 |
| 22 | *85 03 187* | | 102), FOR JOINT PIECE TRUNK LID NLS - USE 8522591 | X | Cable terminal | Kabelsko | 5 |
| 23 | *85 21 676* | | 101), FOR JOINT PIECE, IDLE COMPENSATOR, THERMO SWITCH AC, JOINT PIECE TRUNK LID, VALVE AC RE-CIRCULATION, FOR CONTACT NLS - USE 8522526 HOUSING, 8521692,9518416 | X | Cable terminal | Kabelsko | 5 |
| 23 | *85 21 684* | | 102),FOR CONTACT HOUSING 8521692 NLS - USE 8522526 | X | Cable terminal | Kabelsko | 5 |
| 23 | 95 59 469 | | 102), RESISTOR DIM-DIP | X | Cable terminal | Kabelsko | 5 |
| 23 | *85 82 421* | | 102), FOR JOINT PIECE DOOR, FOR CONTACT HOUSING 8521692 NLS - USE 8522526 | X | Cable terminal | Kabelsko | 5 |
| 24 | *85 41 203* | | 97) FOR GLOVE BOX LIGHT, EARTH, THERMOSTAT AC, LOW PRESSURE SWITCH, MICRO SWITCH,TAIL LIGHT, NUMBER PLATE LIGHT, JOINT PIECE INTERIOR LIGHT, TRUNK LID, FOR CONTACT HOUSING, 8541228 8544363 NLS - USE 8560476 | X | Cable terminal | Kabelsko | 5 |
| 25 | 85 41 211 | | 106), FOR FUSE BOX, FAN UNIT, JOINT PIECE, MICRO SWITCH, THERMOSTAT AC, FOR CONTACT HOUSING, 8541229, 8574949 | X | Cable terminal | Kabelsko | 5 |

97. Area 0,5-1,0 MM2.
98. Area 0,5-1,5 MM2.
101. Area 4,0-6,0 MM2.
102. Area 1,0-2,5 MM2.
103. Area 0,8-2,1 MM2.
104. Area 0,8-3,4 MM2.
105. Area 0,5-1,4 MM2.
106. Area 2,5-4,0 MM2.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-F24

## Cable terminal
1989

## Ledningssko
1989

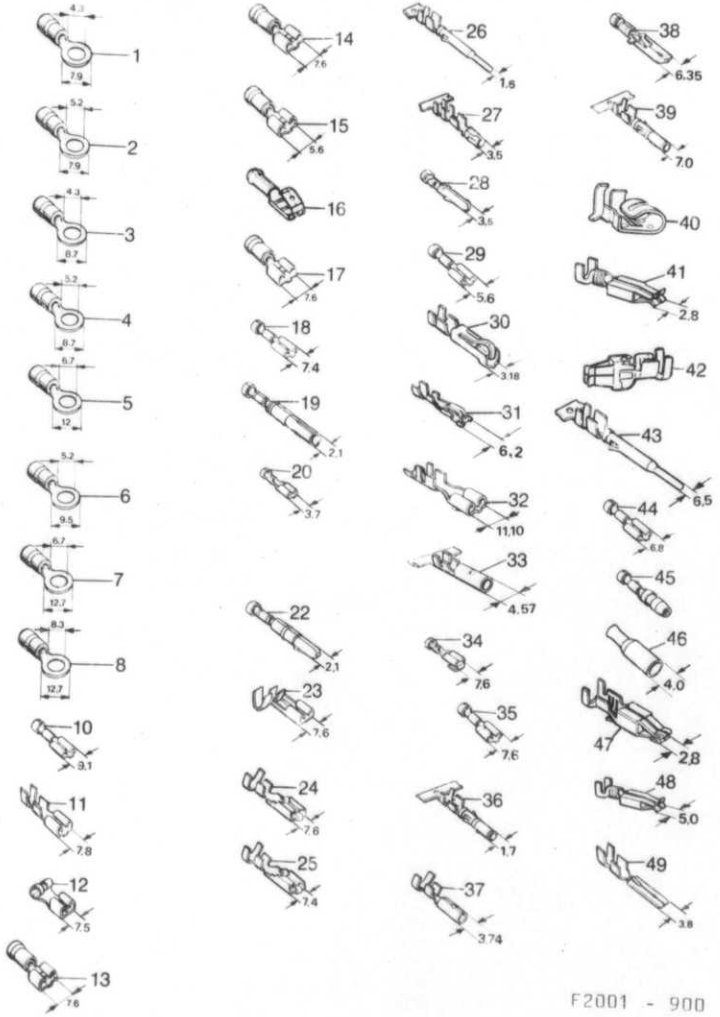


| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Ant | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 25 | 85 60 476 | | 114), JOINT PIECE, LIGHT GLOVE BOX, LIGHT NUMBER PLATE, FOR CONTACT HOUSING, 8541229,8544363 8574949,9507658 | X | Cable terminal | Kabelsko | 5 |
| 26 | 85 44 298 | | 107), FOR FUSE BOX, FOR CONTACT HOUSING, 8544223, 853497,8561631 8564916 | X | Cable terminal | Kabelsko | 5 |
| 26 | 85 93 956 | | 102),FOR CONTACT HOUSING 8544231 | X | Cable terminal | Kabelsko | 5 |
| 27 | 85 44 306 | | 108),FOR EL-CENTRAL, FOR CONTACT HOUSING 8544207, 8544223, 8553497,8564916 | X | Cable terminal | Kabelsko | 5 |
| 27 | 85 82 595 | | 107), FOR FUSE BOX, THEFT ALARM, HORN, FOR CONTACT HOUSING, 8544249 | X | Cable terminal | Kabelsko | 5 |
| 28 | *85 44 314* | | 107), FOR FUSE BOX, JOINT PIECE TRUNK LID, JOINT PIECE INSTRUMENT AC, FOR CONTACT HOUSING, 8544215, 8544231,8544256 8553505, 8561623 NLS - USE 8582603 | X | Cable terminal | Kabelsko | 5 |
| 28 | 85 44 322 | | 107),FOR CONTACT HOUSING 8544215, 8544231 | X | Cable terminal | Kabelsko | 5 |
| 29 | *85 14 028* | | 109), DOOR SWITCH, FOR CONTACT HOUSING, 8516916 8572083 NLS - USE 7155716 | X | Cable terminal | Kabelsko | 5 |
| 29 | *85 33 028* | | 98),FOR PRESSURE SWITCH, SENSOR TURBO PRESSURE, FOR CONTACT HOUSING, 8533184 NLS - USE 8582439 | X | Cable terminal | Kabelsko | 3 |
| 29 | 85 82 447 | | 10), FOR STARTER, FOR CONTACT HOUSING, 8516890 | X | Cable terminal | Kabelsko | 5 |
| 29 | 85 82 439 | | 98), FOR CONTACT HOUSING 8533184 | X | Cable terminal | Kabelsko | 5 |
| 30 | 85 60 278 | | 97), FOR CONTACT HOUSING 8544348 | X | Cable terminal | Kabelsko | 5 |
| 31 | 85 68 768 | | 97), FOR CONTACT HOUSING 8568735 | X | Cable terminal | Kabelsko | 5 |
| 32 | 85 69 139 | | 101), FUSE BOX | X | Cable terminal | Kabelsko | 5 |
| 32 | 85 88 188 | | 110), RELAY IGNITION LOCK | X | Cable terminal | Kabelsko | 5 |
| 33 | 85 72 596 | | 111), COMPRESSOR | X | Cable terminal | Kabelsko | 5 |
| 34 | 85 03 286 | | 103), FUSE BOX | X | Cable terminal | Kabelsko | 5 |
| 35 | *85 59 205* | | 101),FOR CONTACT HOUSING 8516916, 8521544 NLS | X | Cable terminal | Kabelsko | 5 |

10. Red colour code (area 0,3-1,5 MM2). Röd färgkod (area 0,3-1,5 MM2).
97. Area 0,5-1,0 MM2.
98. Area 0,5-1,5 MM2.
101. Area 4,0-6,0 MM2.
102. Area 1,0-2,5 MM2.
103. Area 0,8-2,1 MM2.
107. Area 0,5-2,0 MM2.
108. Area 2,0-4,0 MM2.
109. Area 0,3-0,8 MM2.
110. Area 6,0-10,0 MM2.
111. Area 0,6-1,4 MM2.
114. Area 0,9-2,0 MM2.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A0 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D0 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-G02 Cable terminal 1989

# Ledningssko 1989

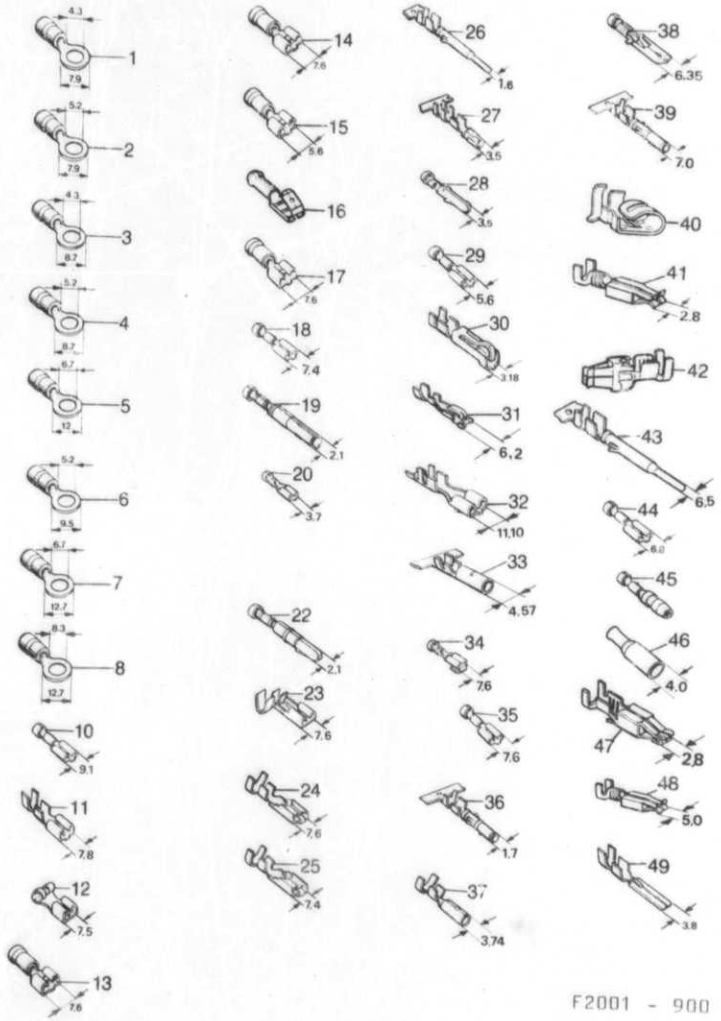


| 2300 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 1450 | 35 | 85 14 036 | | 102), FOR CONTACT | X | Cable terminal | Kabelsko | 5 |
| 1460 | | | | HOUSING, 8516916,8521544 | | | | |
| 1470 | | | | 8572083 | | | | |
| 1480 | 36 | 85 79 393 | | 102), FUSE BOX | X | Cable terminal | Kabelsko | 5 |
| 1490 | 36 | 85 87 560 | | 102),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1500 | | | | 8544207, 8544223 | | | | |
| 1510 | 37 | 79 71 708 | | 98), FUSE BOX, RELAY | X | Cable terminal | Kabelsko | 5 |
| 1520 | | | | FUEL PUMP, RELAY REAR | | | | |
| 1530 | | | | DEMIST, RELAY HORN, | | | | |
| 1540 | | | | RELAY IGNITION LOCK, | | | | |
| 1550 | | | | RELAY FOG LIGHT EXTRA, | | | | |
| 1560 | | | | RELAY COMPRESSOR AC, | | | | |
| 1570 | | | | RELAY GEAR INDICATOR, | | | | |
| 1580 | | | | RELAY AC COOLER, RELAY | | | | |
| 1590 | | | | LIGHT, FOR CONTACT | | | | |
| 1600 | | | | HOUSING, 7155096,7155112 | | | | |
| 1610 | | | | 8533705 | | | | |
| 1620 | 38 | 85 16 957 | | 101),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1630 | | | | 8558546 | | | | |
| 1640 | 38 | *71 55 062* | | 113), FOR JOINT PIECE | X | Cable terminal | Kabelsko | 5 |
| 1650 | | | | CABLE NETWORK SEAT, | | | | |
| 1660 | | | | JOINT PIECE SWITCH SEAT, | | | | |
| 1670 | | | | CONTACT HOUSING, 9502758 | | | | |
| 1680 | | | | 9502758, 9503012,9503998 | | | | |
| 1680 | | | | NLS - USE 8522542 | | | | |
| 1690 | 38 | 85 93 089 | | 97), FOR EL-PAD, FOR | X | Cable terminal | Kabelsko | 5 |
| 1700 | | | | CONTACT HOUSING, 9503012 | | | | |
| 1710 | 39 | 85 87 552 | | 98),FOR TEST CONNECTION, | X | Cable terminal | Kabelsko | 5 |
| 1720 | | | | FOR CONTACT HOUSING, | | | | |
| 1730 | | | | 8544207, 8544223,8544249 | | | | |
| 1740 | 40 | 85 82 090 | | 98), FOR SWITCH WINDOW | X | Cable terminal | Kabelsko | 5 |
| 1750 | | | | REGULATOR, JOINT PIECE, | | | | |
| 1760 | | | | REGULATOR, FOR CONTACT | | | | |
| 1770 | | | | HOUSING, 8582116 | | | | |
| 1780 | 41 | 91 20 775 | | 97),FOR CONTACT HOUSING, | X | Cable terminal | Kabelsko | 5 |
| 1790 | | | | 8533655, 8544249 | | | | |
| 1800 | 42 | 91 20 783 | | 102),FOR CONTACT HOUSING | X | Cable terminal | Kabelsko | 5 |
| 1810 | | | | 8533655, 9124199 | | | | |
| 1820 | 43 | 85 93 964 | | 98), FOR FUSE BOX, JOINT | X | Cable terminal | Kabelsko | 5 |
| 1830 | | | | PIECE CABLE NETWORK AC, | | | | |
| 1840 | | | | VACUUM PUMP SPEED CONT- | | | | |
| 1850 | | | | ROL., FOR CONTACT HOUSING | | | | |
| 1860 | | | | 8544215, 8544231,8544256 | | | | |
| 1870 | 44 | 91 20 791 | | 106), FORFUSE, RELAY | X | Cable terminal | Kabelsko | 5 |
| 1880 | | | | LIGHT, RELAY REAR FOG | | | | |
| 1890 | | | | LIGHT, FOR CONTACT | | | | |
| 1900 | | | | HOUSING, 9124157,9124165 | | | | |
| 1910 | | | | 9124191, 9507658 | | | | |
| 1920 | 44 | *71 55 047* | | 101), FOR FUSE BOX, | X | Cable terminal | Kabelsko | 5 |
| 1930 | | | | FOR CONTACT HOUSING, | | | | |
| 1940 | | | | 9124090 NLS | | | | |
| 1950 | 45 | 85 81 951 | | 103), FOR THEFT ALARM | X | Cable terminal | Kabelsko | 3 |
| 1960 | 46 | 85 82 579 | | 98), HORN | X | Cable terminal | Kabelsko | 5 |

97. Area 0,5-1,0 MM2.
98. Area 0,5-1,5 MM2.
101. Area 4,0-6,0 MM2.
102. Area 1,0-2,5 MM2.
103. Area 0,8-2,1 MM2.
106. Area 2,5-4,0 MM2.
113. Area 0,8-2,5 MM2.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


3B GROUP INDEX


| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-G04 Cable terminal 1989

# Ledningssko 1989

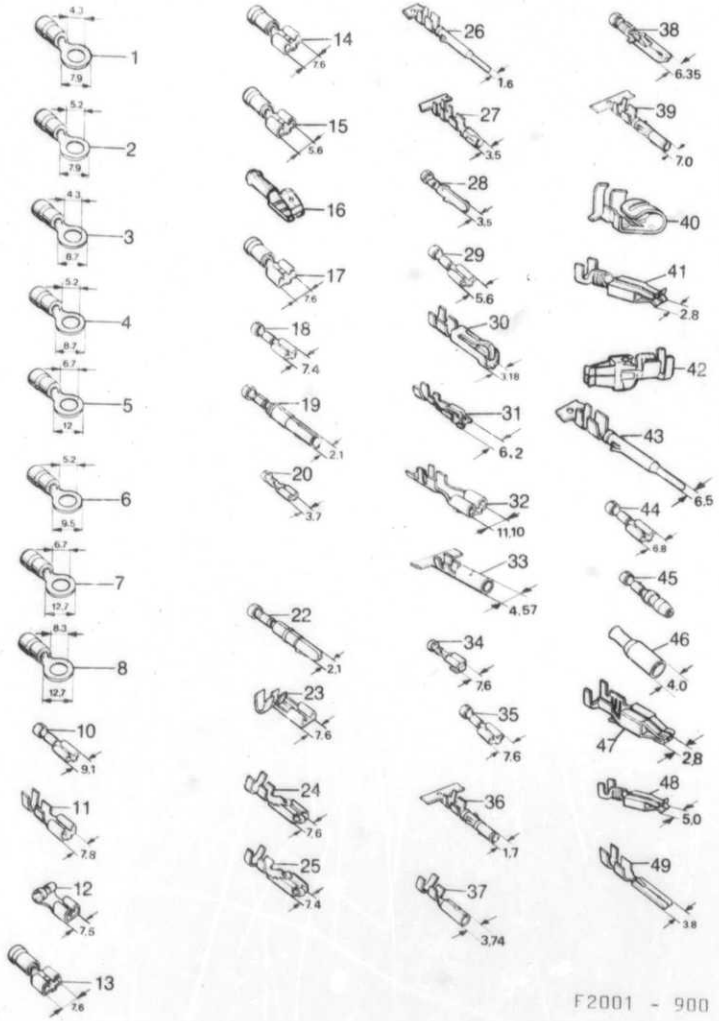


| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 47 | *91 20 668* | | 115),FOR FUSE BOX, RELAY, COMPRESSOR AC, FOR CONTACT HOUSING, 8593899 8593907, 8593915,8593931 8593949, 8597064,9123548 9123555, 9124199,9125543 9514803, 9561333,9563081 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 47 | *95 08 714* | | 116),FOR CONTACT HOUSING 9123548 NLS - USE 9120957 | X | Cable terminal | Kabelsko | 5 |
| 48 | 95 21 972 | | 97), JOINT PIECE COWL, FOR CONTACT HOUSING, 9124199, 9521972 | X | Cable terminal | Kabelsko | 5 |
| 48 | 95 21 998 | | 106), FOR FUSE BOX | X | Cable terminal | Kabelsko | 5 |
| 49 | 95 52 100 | | 115),FOR CONTACT HOUSING 9122557, 9124199 | X | Cable terminal | Kabelsko | 5 |
| 49 | *95 52 126* | | 97), FOR CONTACT HOUSING 9518713, 9518739 NLS - USE 9552100 | X | Cable terminal | Kabelsko | 5 |

97. Area 0,5-1,0 MM2.
106. Area 2,5-4,0 MM2.
115. Area 0,75-1,5 MM2.
116. Area 0,3-0,6 MM2.

MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-E02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |

# 3-G06 Cable terminal 1989

# Ledningssko 1989

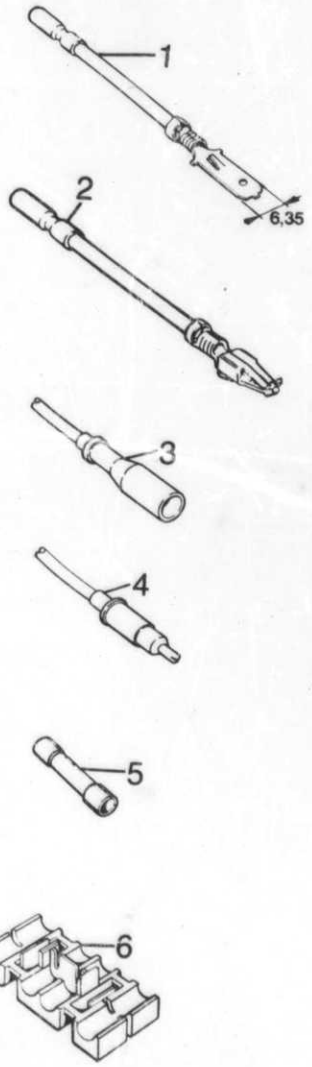


| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | 85 22 542 | | 112), FOR FUSE BOX, JOINT PIECE, FOR CONTACT HOUSING, 7155104 7155120, 7342900,8558546 | X | Cable terminal | Kabelsko | 5 |
| 2 | 85 22 617 | | 112), JOINT PIECE, FOR CONTACT HOUSING, 8533821 | X | Cable terminal | Kabelsko | 5 |
| 3 | 78 74 498 | | FOR AC COMPRESSOR, TAIL LIGHT, CENTRAL LOCK, PASSIVE SEAT BELTS, JOINT PIECE TRUNK LID, JOINT PIECE CABLE NET-WORK REAR DOOR/CENTRAL LOCK, MOTOR COOLING FAN AC, FOR CONTACT HOUSING, 9503277, 9503319,9503418 9503434, 9503475,9519679 | X | Connection | Skarv | 5 |
| 4 | 78 74 506 | | FOR JOINT PIECE, CENTRAL LOCK, EL-MIRROR, WINDOW REGULATOR, EL-HEATED MIRROR, PASSIVE SEAT BELT, FOR CONTACT HOUSING, 9503327,9503327 9503426, 9506668 | X | Connection | Skarv | 5 |
| 5 | 71 55 146 | | 6), 40/253 188 007 | X | Connector housing | Skarvhus | 5 |
| 5 | 71 55 203 | | 10), 40/253 164 008 | X | Connector housing | Skarvhus | 5 |
| 5 | 71 55 633 | | 32), 40/253 221 006 | X | Connector housing | Skarvhus | 5 |
| 6 | 85 21 668 | | AREA 0,8-2,1 MM2 | X | Cable joint | Ledningsförbindning | 3 |

6. Blue colour code (area 1,5-2,5 MM2). Blå färgkod (area 1,5-2,5 MM2).
10. Red colour code (area 0,3-1,5 MM2). Röd färgkod (area 0,3-1,5 MM2).
32. Yellow colour code (area 3,0-6,0 MM2). Gul färgkod (area 3,0-6,0 MM2).
112. Green colour code (area 1,5 MM2). Grön färgkod (area 1,5 MM2).

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

3B GROUP INDEX

| | |
|---|---|
| Connectors | 3-A06 |
| Cable terminals | 3-E10 |



# Transmission
# Kraftöverföring
# Transmisión

TABLE OF CONTENTS


| | | | |
|---|---|---|---|
| **Clutch** | | | |
| Clutch, clutch disc, clutch cover | | 4 : 5 | 3-H06 |
| **Clutch control** | | | |
| Pedal, master cylinder | | 4 : 7 | 3-H08 |
| **Gear box, manual** | | | |
| Gear box assy | | 4 : 9 | 3-H10 |
| Primary gear case, 4-Speed | | 4 : 11 | 3-H12 |
| Gear box case, oil pan, 4-Speed | | 4 : 13 | 3-H14 |
| Primary gear case, 5-Speed | | 4 : 17 | 3-H18 |
| Gear box case, oil pan, 5-Speed | | 4 : 19 | 3-H20 |
| Release bearing | | 4 : 25 | 3-I02 |
| Shafts, gears, gears shift bars, 4-Speed | | 4 : 27 | 3-I04 |
| Shafts, gears, gears shift bars, 5-Speed -1988 | | 4 : 31 | 3-I08 |
| Shafts, gears, gears shift bars, 5-Speed 1989- | | 4 : 37 | 3-I14 |
| Differential, inner universal joint | | 4 : 43 | 3-I20 |
| **Gear box control, manual** | | | |
| Gear shift lever, -housing and -rod | | 4 : 49 | 3-J02 |
| Drive shafts, outer universal joint | | 4 : 53 | 3-J06 |
| **Gear box, automatic** | | | |
| Gear box assy | | 4 : 55 | 3-J08 |
| Converter, converter housing, covers, etc | | 4 : 57 | 3-J10 |
| Gear box case with servos, covers, plugs etc | | 4 : 59 | 3-J12 |
| Primary gear, planetary gear, pinion and crown wheel | | 4 : 63 | 3-J16 |
| Control system, valve body Part 1 | | 4 : 69 | 3-J22 |
| Control system, valve body Part 2 | | 4 : 71 | 3-J24 |
| Controls in gear box housing | | 4 : 73 | 3-K02 |
| Diffrential, inner universal joint | | 4 : 47 | 3-I24 |
| **Gear box control, automatic** | | | |
| Gear selector lever, -housing and -cable | | 4 : 75 | 3-K04 |
| Drive shafts, outer universal joint | | 4 : 53 | 3-J06 |
| Rear axle, see group 7 | | | |
| **Complete sets** | | | |
| Transmission | | 4 : 77 | 3-K06 |


MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 3-H03

## INNEHÅLLSFÖRTECKNING


| | | |
|---|---|---|
| **Koppling** | | |
| Koppling, lamell, kopplingskåpa | 4 : 5 | 3-H06 |
| **Kopplingsmanövrering** | | |
| Pedal, huvudcylinder | 4 : 7 | 3-H08 |
| **Växellåda, manuell** | | |
| Växellåda kpl | 4 : 9 | 3-H10 |
| Primärväxelhus, 4-Växlad | 4 : 11 | 3-H12 |
| Växellådshus, oljesump, 4-Växlad | 4 : 13 | 3-H14 |
| Primärväxelhus, 5-Växlad | 4 : 17 | 3-H18 |
| Växellådshus, oljesump, 5-Växlad | 4 : 19 | 3-H20 |
| Urtrampningslager, slavcylinder | 4 : 25 | 3-I02 |
| Axlar, kugghjul, växelförare, 4-Växlad | 4 : 27 | 3-I04 |
| Axlar, kugghjul, växelförare, 5-Växlad -1988 | 4 : 31 | 3-I08 |
| Axlar, kugghjul, växelförare, 5-Växlad 1989- | 4 : 37 | 3-I14 |
| Differential, inre knut | 4 : 43 | 3-I20 |
| **Växellådsmanövrering, manuell** | | |
| Växelspak, växelspakshus | 4 : 49 | 3-J02 |
| Drivaxlar yttre knut | 4 : 53 | 3-J06 |
| **Växellåda, automatisk** | | |
| Växellåda kpl | 4 : 55 | 3-J08 |
| Momentomvandlare, momentomvandlarhus, kåpor etc | 4 : 57 | 3-J10 |
| Växellådshus med servo, kåpor, pluggar etc | 4 : 59 | 3-J12 |
| Primärdrev, planetväxel, pinjong och kronhjul | 4 : 63 | 3-J16 |
| Kontrollsystem, ventilhus Del 1 | 4 : 69 | 3-J22 |
| Kontrollsystem, ventilhus Del 2 | 4 : 71 | 3-J24 |
| Reglage i växellådshus | 4 : 73 | 3-K02 |
| Diffrential, inre knut | 4 : 47 | 3-I24 |
| **Växellådsmanövrering, automatisk** | | |
| Växelspak, hus och kabel | 4 : 75 | 3-K04 |
| Drivaxlar, yttre knut | 4 : 53 | 3-J06 |
| Bakaxel, se grupp 7 | | |
| **Satser** | | |
| Kraftöverföring | 4 : 77 | 3-K06 |






# 3-H04

## SUMARIO


| | | |
|---|---|---|
| **Embrague** | | |
| Embrague, disco de embrague, tapa de embrague | 4 : 5 | 3-H06 |
| **Mando de embrague** | | |
| Pedal, cilindro principal | 4 : 7 | 3-H08 |
| **Caja de cambios, manual** | | |
| Caja de cambios, compl. | 4 : 9 | 3-H10 |
| Caja de engranaje primario, 4-Velocidados | 4 : 11 | 3-H12 |
| Carter de caja de cambios, 4-Velocidados | 4 : 13 | 3-H14 |
| Caja de engranaje primario, 5-Velocidados | 4 : 17 | 3-H18 |
| Carter de caja de cambios, 5-Velocidados | 4 : 19 | 3-H20 |
| Cojinete de empuje, cilindro esclavo | 4 : 25 | 3-I02 |
| Ejes, engranajes, horquillas de mando de velocidades, 4-Velocidades | 4 : 27 | 3-I04 |
| Ejes, engranajes, horquillas de mando de velocidades, 5-Velocidades -1988 | 4 : 31 | 3-I08 |
| Ejes, engranajes, horquillas de mando de velocidades, 5-Velocidades 1989- | 4 : 37 | 3-I14 |
| Diferencial, junta homocinetica interior | 4 : 43 | 3-I20 |
| **Mandos del cambio, manual** | | |
| Palanca, caja y barra de cambios | 4 : 49 | 3-J02 |
| Eje de accionamiento, junta homocinetica exterior | 4 : 53 | 3-J06 |
| **Caja de cambios, automatica** | | |
| Caja de cambios, compl. | 4 : 55 | 3-J08 |
| Convertidor, carter de convertidor de par, tapas, etc | 4 : 57 | 3-J10 |
| Carter de caja de cambios con servo asistencia, tapas, tapones, etc | 4 : 59 | 3-J12 |
| Engranaje principal, engranajes planetarios, pinon de a taque y corona | 4 : 63 | 3-J16 |
| Sistema de control, carter de valvulas 1a parte | 4 : 69 | 3-J22 |
| Sistema de control, carter de valvulas 2a parte | 4 : 71 | 3-J24 |
| Mando de caja de cambios | 4 : 73 | 3-K02 |
| Diferencial y junta homocinetica interior | 4 : 47 | 3-I24 |
| **Mando de caja de cambios** | | |
| Palanca selectora, caja y cable | 4 : 75 | 3-K04 |
| Eje de accionamiento, junta homocinetica exterior | 4 : 53 | 3-J06 |
| Eje trasero, ver grupo 7 | | |
| **Juegos completos** | | |
| Transmision | 4 : 77 | 3-K06 |




## MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


## 4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 3-H06

## Clutch, clutch disc
## Koppling, lamell

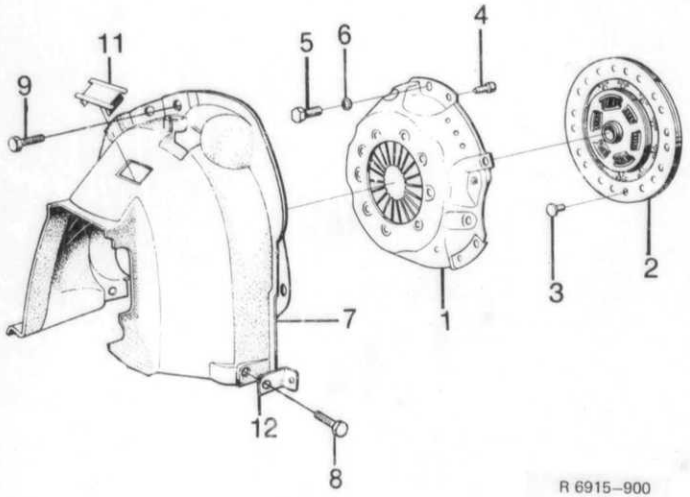


R 6915–900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | *87 04 116* | S | 1986 NLS - USE 8728123 | 1 | Pressure plate | Tryckskiva | 2 |
| 1 | *87 20 245* | S | 1987 NLS - USE 8728123 | 1 | Pressure plate | Tryckskiva | 2 |
| 1 | *87 25 400* | S | 1988-,54,700) NLS - USE 8728123 | 1 | Pressure plate | Tryckskiva | 2 |
| 1 | 87 28 123 | S | 55) | 1 | Pressure plate | Tryckskiva | 2 |
| 1 | *87 12 036* | S | 700), 1986, TURBO NLS - USE 8728123 | 1 | Pressure plate | Tryckskiva | 2 |
| 1 | *87 24 841* | S | 1987-,54), TURBO NLS - USE 8728123 | 1 | Pressure plate | Tryckskiva | 2 |
| 1 | 87 28 123 | S | 55), TURBO | 1 | Pressure plate | Tryckskiva | 2 |
| 2 | *83 07 498* | S | 44,700), -1987 NLS - USE 8722324 | 1 | Clutch disc | Lamell | 2 |
| 2 | 87 22 324 | S | 45), 1988- | 1 | Clutch disc | Lamell | 2 |
| 2 | 87 22 324 | S | 45), 5-SPEED | 1 | Clutch disc | Lamell | 2 |
| 2 | *87 15 260* | S | 44) -1988, TURBO 5-SPEED NLS - USE 8725517 | 1 | Clutch disc | Lamell | 2 |
| 2 | 87 25 517 | S | 45) 1988-, TURBO 5-SPEED | 1 | Clutch disc | Lamell | 2 |
| 3 | *83 00 469* | S | NLS | 20 | Rivet | Nit | 5 |
| 4 | 83 07 407 | | | 3 | Pin | Pinne | 5 |
| 5 | 80 82 968 | | | 6 | Screw | Skruv | 5 |
| 6 | 83 80 982 | | | 6 | Washer | Bricka | 5 |
| 7 | 93 62 658 | | | 1 | Cover | Kåpa | 5 |
| 8 | 80 82 943 | | | 1 | Screw | Skruv | 5 |
| 9 | 79 72 466 | | | 3 | Screw | Skruv | 5 |
| 11 | 83 38 899 | | | 1 | Cover | Lock | 5 |
| 12 | 85 52 655 | | | 1 | Bracket | Hållare | 6 |
| | *83 80 214* | | See page 4-077, 3-K06 NLS | 1 | Clutch lining | Lamellbelägg | |
| | *88 18 080* | | 44), 4-SPEED See page 4-083, 3-K12 NLS - USE 8818098 | X | Clutch kit | Kopplingssats | 6 |
| | 88 18 098 | | 45,700), 4-SPEED See page 4-083, 3-K12 | X | Clutch kit | Kopplingssats | 6 |
| | 88 18 098 | | 45,700), 5-SPEED See page 4-083, 3-K12 | X | Clutch kit | Kopplingssats | 6 |
| | *88 18 114* | | 44), 5-SPEED, TURBO See page 4-083, 3-K12 NLS - USE 8781239 | X | Clutch kit | Kopplingssats | 6 |
| | 87 81 239 | | 45), 5-SPEED, TURBO See page 4-083, 3-K12 | X | Clutch kit | Kopplingssats | 6 |
| | 87 81 346 | | 45), 5-SPEED, TURBO FOR US See page 4-085, 3-K14 | X | Clutch kit | Kopplingssats | 6 |
| | 88 18 148 | | 45), I FOR US See page 4-085, 3-K14 | X | Clutch kit | Kopplingssats | 6 |

44. Asbestos Asbest
45. Asbestos free Asbestfri
54. Ch. –K3007964, –K7008063. FOR SW 1988B: –J7052936.
55. Ch. K3007965–, K7008064–. FOR SW 1988B: J7052937–.
700. Also available as exchange unit. Finns även som utbytesenhet.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 3-H08

## Pedal, master cylinder
## Pedal, huvudcylinder

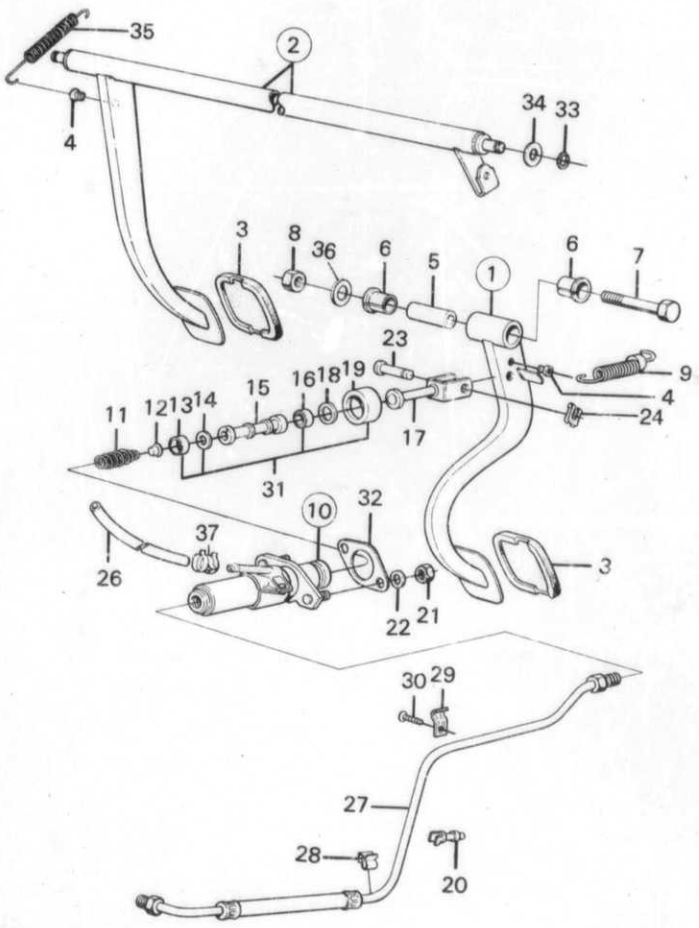


F2004 - 900

| 0150 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *89 91 432* | | 50) NLS - USE 8962128, 9105933 | 1 | Clutch pedal | Kopplingspedal | 6 |
| 0020 | 1 | *91 05 529* | | 51), -1988 NLS - USE 9105933 | 1 | Clutch pedal | Kopplingspedal | 6 |
| 0030 | 1 | 91 05 933 | | 500), 1989- | 1 | Clutch pedal | Kopplingspedal | 6 |
| 0040 | 2 | 89 91 457 | | -1988, RHD | 1 | Pedal arm | Pedalarm | 6 |
| 0045 | 2 | 91 05 891 | | 500), 1989-, RHD | 1 | Pedal arm | Pedalarm | 6 |
| 0050 | 3 | 89 16 272 | | | 1 | . Pedal pad | . Pedalgummi | 5 |
| 0060 | 4 | 84 07 983 | | | 1 | . Bushing | . Bussning | 4 |
| 0070 | 5 | 89 24 490 | | | 1 | Spacer tube | Distansrör | 4 |
| 0080 | 6 | 89 48 051 | | 50) | 2 | Bearing bushing | Lagerbussning | 4 |
| 0090 | 6 | 89 62 128 | | 51) | 2 | Bearing bushing | Lagerbussning | 4 |
| 0100 | 7 | 80 84 196 | | -1988 | 1 | Screw | Skruv | 5 |
| 0110 | 7 | 79 79 206 | | 1989- | 1 | Screw | Skruv | 5 |
| 0120 | 8 | *80 73 538* | | -1987 NLS - USE 7977812 | 1 | Lock nut | Låsmutter | 5 |
| 0130 | 8 | *81 51 474* | | 1988- NLS - USE 7977812 | 1 | Lock nut | Låsmutter | 5 |
| 0140 | 9 | 89 35 751 | | | 1 | Spring | Fjäder | 5 |
| 0150 | 10 | 89 44 977 | | | 1 | Clutch cylinder | Kopplingscylinder | 2 |
| 0160 | 11 | 89 86 622 | | | 1 | . Spring | . Fjäder | 3 |
| 0170 | 12 | 89 45 156 | | | 1 | . Spring support | . Fjäderstöd | 5 |
| 0180 | 13 | 89 45 248 | S | | 1 | . Gasket | . Packning | 5 |
| 0190 | 14 | 89 45 255 | S | | 1 | . Washer | . Bricka | 5 |
| 0200 | 15 | 89 45 263 | | | 1 | . Piston | . Kolv | 6 |
| 0210 | 16 | 89 40 769 | S | | 1 | . Gasket | . Packning | 5 |
| 0220 | 17 | 89 35 371 | | | 1 | . Push rod | . Stötstång | 5 |
| 0230 | 18 | 73 13 232 | | | 1 | . Lock ring | . Låsring | 5 |
| 0240 | 19 | 73 13 240 | S | | 1 | . Seal | . Tätning | 6 |
| 0250 | 20 | 79 63 867 | | | 1 | Tube clamp | Rörklamma | 5 |
| 0260 | 21 | 80 74 106 | | -1987 | 2 | Nut | Mutter | 5 |
| 0270 | 21 | 81 51 235 | | 1988- | 2 | Nut | Mutter | 5 |
| 0280 | 22 | 79 33 849 | | | 2 | Washer | Bricka | 5 |
| 0290 | 23 | *89 56 443* | | NLS - USE 4105821 | 1 | Bolt | Bult | 5 |
| 0300 | 24 | 82 52 553 | | | 1 | Clip | Clips | 5 |
| 0310 | 26 | *89 27 139* | | NLS - USE 4281531 | 1 | Hose | Slang | 5 |
| 0320 | 26 | 40 27 801 | | 1989-, ABS | 1 | Hose | Slang | 5 |
| 0330 | 27 | 89 35 124 | | | 1 | Clutch hose | Kopplingsslang | 2 |
| 0340 | 28 | 73 98 746 | | | 2 | Clamp | Klammer | 5 |
| 0350 | 29 | 83 71 551 | | | 1 | Tube clamp | Rörklamma | |
| 0360 | 30 | 79 22 891 | | | 1 | Screw | Skruv | 5 |
| 0370 | 31 | 89 93 156 | | See page 4-077, 3-K06 | 1 | Repair kit | Reparationssats | 1 |
| 0380 | 32 | 89 41 478 | | | 1 | Gasket | Packning | 5 |
| 0390 | 33 | 79 63 135 | | RHD, A | 1 | E-circlip | Spårryttare | 3 |
| 0400 | 34 | 80 29 993 | | RHD, A | 1 | Washer | Bricka | 5 |
| 0410 | 35 | 89 41 312 | | RHD | 1 | Spring | Fjäder | 3 |
| 0420 | 36 | 80 29 993 | | | 1 | Washer | Bricka | 5 |
| 0430 | 37 | 79 73 605 | | 1989- | 2 | Hose clamp | Slangklamma | 5 |

50. Ch. --J3024361, --J7024481
51. Ch. J3024362--, J7024482--
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

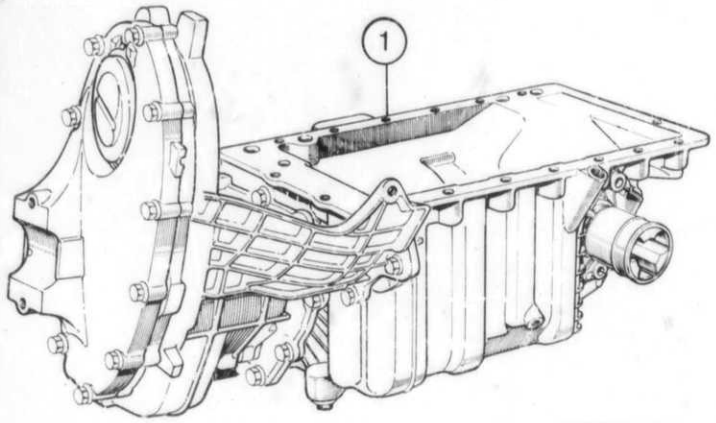


R 6917–900

Gear box assy
**Manual**

# 3-H10

Växellåda kpl
**Manuell**

| | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | 4-SPEED | | | | |
| 0020 | | | | | | | | |
| 0030 | 1 | *87 20 963* | | 15,700),MARKED: GM 34506 NLS - USE 7896194 | 1 | Gearbox | Växellåda | |
| 0040 | 1 | *87 23 793* | | 16,700), -1988, MARKED: GM 34508 NLS - USE 7896707 | 1 | Gearbox | Växellåda | 5 |
| 0050 | | | | | | | | |
| 0060 | | | | | | | | |
| 0070 | | | | | | | | |
| 0080 | | | | 5-SPEED | | | | |
| 0090 | | | | | | | | |
| 0100 | 1 | *93 21 308* | | 13,700), MARKED: G 45606 NLS - USE 7896228 | 1 | Gearbox | Växellåda | 5 |
| 0110 | 1 | *87 23 033* | | 14,700), -1988 MARKED: GM 45610 NLS - USE 7896772 | 1 | Gearbox | Växellåda | 5 |
| 0120 | | | | | | | | |
| 0130 | 1 | *87 26 432* | | 500,700), 1989- MARKED: GM 45712 NLS - USE 8729196 | 1 | Gearbox | Växellåda | 5 |
| 0140 | | | | | | | | |
| 0150 | 1 | *87 19 510* | | 13,700) MARKED: GM 45706 NLS - USE 9337114 | 1 | Gearbox | Växellåda | 5 |
| 0160 | 1 | *87 22 993* | | 14,700), -1988 MARKED: GM 45710 | 1 | Gearbox | Växellåda | 5 |
| 0170 | | | | | | | | |
| 0180 | 1 | *87 25 582* | | 700), 1988 MARKED: GM 45510 NLS - USE 8823148 | 1 | Gearbox | Växellåda | 5 |
| 0190 | | | | | | | | |
| 0200 | 1 | *87 26 390* | | 500,700), 1989- MARKED: GM 45612 NLS - USE 8729147 | 1 | Gearbox | Växellåda | 5 |
| 0210 | | | | | | | | |
| 0220 | 1 | *87 23 090* | | 13), MARKED: GM 55600 NLS - USE 7896723 | 1 | Gearbox | Växellåda | 5 |
| 0230 | 1 | *87 23 603* | | 14,700), -1988 MARKED: GM 55702 NLS - USE 7896756 | 1 | Gearbox | Växellåda | 5 |
| 0240 | | | | | | | | |
| 0250 | 1 | *87 26 507* | | 500,700), 1989- MARKED: GM 55804 NLS - USE 8728891 | 1 | Gearbox | Växellåda | 5 |
| 0260 | | | | | | | | |
| 0270 | 1 | *87 23 074* | | 13,700) MARKED: GM 55700 NLS - USE 7896715 | 1 | Gearbox | Växellåda | 5 |
| 0280 | 1 | *87 23 611* | | 14)-1988 MARKED:GM 55602 NLS - USE 7896764 | 1 | Gearbox | Växellåda | 5 |
| 0290 | 1 | 87 26 465 | | 500,700), 1989- MARKED: GM 55704 | 1 | Gearbox | Växellåda | 5 |
| 0300 | | | | | | | | |

13. Gear box --671841, --759477.
14. Gear box 671842--, 759478--.
15. Gear box --200728.
16. Gear box 200729--.

500. Also valid for SE 1988B. Gäller även för SE 1988B.
700. Also available as exchange unit. Finns även som utbytesenhet.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


4 GROUP INDEX



| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

Gear box, 4-speed

# 3-H12 *Primary gear case -1988*

Växellåda, 4-växlad

***Primärväxelhus -1988***

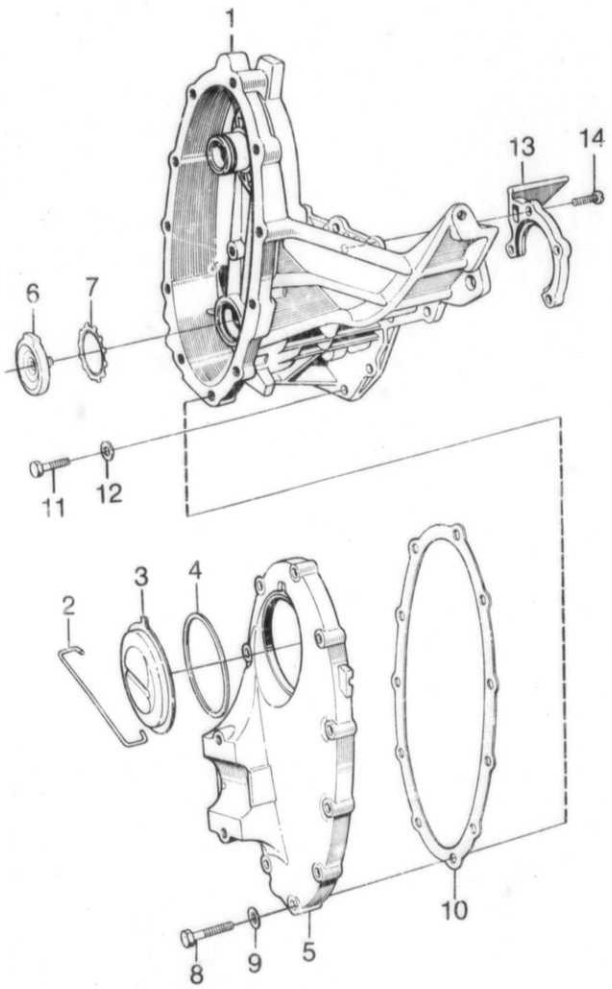


R 8728 - 900

| 0199 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | See page 4-009, 3-H10 | | Gear box, manual | Växellåda, manuell | |
| 0020 | 1 | 87 04 504 | | | 1 | .Gear housing | .Primärväxelhus | 6 |
| 0030 | 2 | 87 10 303 | | | 1 | .Brace | .Bygel | 5 |
| 0040 | 3 | 87 10 956 | | | 1 | .Cover | .Lock | |
| 0050 | 4 | 87 13 216 | | | 1 | .Gasket | .Packning | |
| 0060 | 5 | 87 21 185 | | | 1 | .Cover | .Lock | 5 |
| 0070 | 6 | 87 21 201 | | | 1 | ..Oil collector | ..Oljeskopa | 5 |
| 0080 | 7 | 87 21 235 | | | 1 | ..Lock ring | ..Låsring | 5 |
| 0090 | 8 | *80 83 958* | | NLS - USE 8125213 | 11 | .Screw | .Skruv | 5 |
| 0100 | 9 | 80 29 985 | | | 11 | .Washer | .Bricka | 5 |
| 0110 | 10 | *87 12 903* | | 23) NLS - USE 8732380 | 1 | .Gasket | .Packning | 4 |
| 0120 | 10 | *87 25 012* | S | 24) NLS - USE 8732380 | 1 | .Gasket | .Packning | 4 |
| 0130 | 11 | 80 83 933 | | | 10 | .Screw | .Skruv | 5 |
| 0140 | 12 | 80 29 985 | | | 10 | .Washer | .Bricka | 5 |
| 0150 | 13 | 87 00 775 | | | 1 | .Bearing shield | .Lagersköld | 6 |
| 0160 | 14 | *87 03 852* | | NLS - USE 7982184 | 4 | .Screw | .Skruv | 5 |
| 0170 | | | | | | | | |
| 0180 | | 74 96 003 | | See page 4-085, 3-K14 | 1 | Gasket kit | Packningsats | 5 |

23. Gear box -206963, -694101, -913909
24. Gear box 206964-, 694102-, 913910-



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

Gear box, 4-speed

# 3-H14


## *Gear box case, oil pan*

*-1988*

Växellåda, 4-växlad

## *Växellådshus, oljesump*

*-1988*

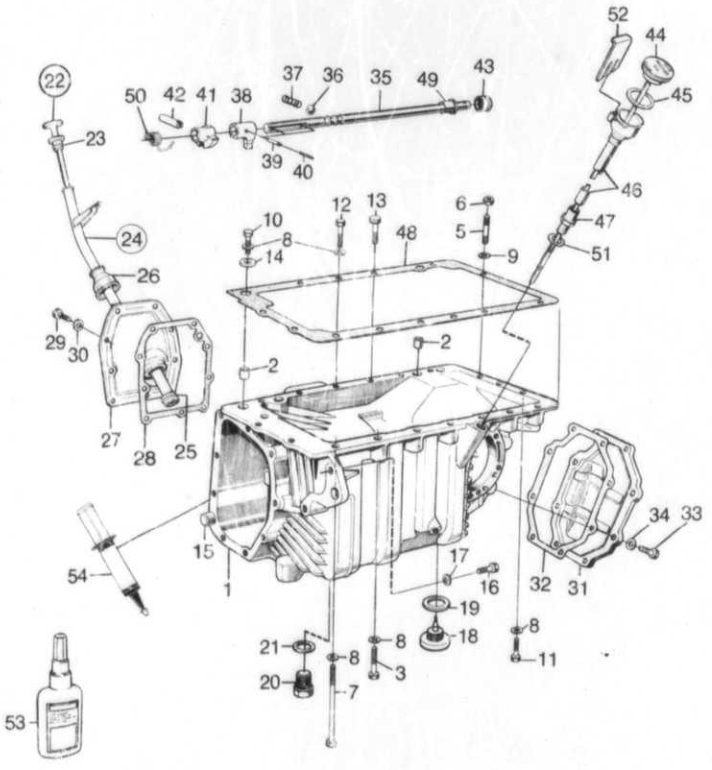


F5547 90086

| 0200 | Pos | Par. No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | See page 4-009, 3-H10 | | Gear box, manual | Växellåda, manuell | |
| 0020 | 1 | 87 21 300 | | | 1 | .Gearbox housing | .Växellådshus | 6 |
| 0030 | 2 | 83 00 725 | | | 2 | .Sleeve | .Hylsa | 4 |
| 0040 | 3 | *80 83 958* | | NLS - USE 8125213 | 6 | .Screw | .Skruv | 5 |
| 0050 | 5 | *93 46 388* | | 1986 NLS - USE 8005928 | 1 | .Screw | .Skruv | 5 |
| 0060 | 5 | 80 05 928 | | 1987- | 1 | .Stud | .Pinnskruv | 5 |
| 0070 | 6 | 80 74 106 | | -1987 | 1 | .Nut | .Mutter | 5 |
| 0080 | 6 | 81 51 235 | | 1988- | 1 | .Nut | .Mutter | 5 |
| 0090 | 7 | 79 65 569 | | | 1 | .Screw | .Skruv | 5 |
| 0100 | 8 | 80 29 985 | | | 14 | .Washer | .Bricka | 5 |
| 0110 | 9 | *93 28 824* | | NLS - USE 8981987 | 1 | .Seal | .Tätning | 5 |
| 0120 | 10 | 93 46 354 | | | 1 | .Screw | .Skruv | 5 |
| 0130 | 11 | 80 82 968 | | | 1 | .Screw | .Skruv | 5 |
| 0140 | 12 | 93 46 362 | | | 5 | .Screw | .Skruv | 5 |
| 0150 | 13 | 93 46 370 | | | 1 | .Screw | .Skruv | 5 |
| 0160 | 14 | 70 61 328 | | | 1 | .Washer | .Bricka | 5 |
| 0170 | 15 | 87 23 967 | | (8342594) | 2 | .Guide pin | .Styrstift | 5 |
| 0180 | 16 | 80 82 968 | | | 1 | .Screw | .Skruv | 5 |
| 0190 | 17 | 80 29 985 | | | 1 | .Washer | .Bricka | 5 |
| 0200 | 18 | 87 17 407 | | | 1 | .Drain plug | .Avtappningspropp | 6 |
| 0210 | 19 | 87 17 415 | | | 1 | .Gasket | .Packning | 4 |
| 0220 | 20 | *87 11 871* | | NLS - USE 8731762 | 1 | .Drain plug | .Avtappningspropp | 1 |
| 0230 | 21 | 87 18 439 | | | 1 | .Gasket | .Packning | 3 |
| 0240 | 22 | 75 44 547 | | 70,71), B201, C | 1 | .Dipstick | .Mätsticka | 3 |
| 0250 | 22 | *83 34 526* | | 72), B201, C NLS - USE 7546872 | 1 | .Dipstick | .Oljesticka | 3 |
| 0260 | 23 | 79 71 948 | | | 1 | ..O-ring | ..O-ring | 2 |
| 0270 | 24 | 75 44 554 | | 37,70,71), B201, C | 1 | .Tube | .Rör | 6 |
| 0280 | 24 | 75 49 231 | | 38,70,71), B201, C | 1 | .Tube | .Rör | 6 |
| 0290 | 24 | 75 42 921 | | 72), B201, C | 1 | .Tube | .Rör | 6 |
| 0300 | 25 | 79 71 930 | | | 1 | ..O-ring | ..O-ring | 2 |
| 0310 | 26 | 83 34 401 | | | 1 | ..Cup | ..Kopp | 2 |
| 0320 | 27 | 87 15 377 | | | 1 | .Cover | .Lock | 6 |
| 0330 | 28 | *87 15 393* | S | 23) NLS - USE 8728677 | 1 | .Gasket | .Packning | 3 |
| 0340 | 28 | *87 25 053* | | 24) NLS - USE 8728677 | 1 | .Gasket | .Packning | 3 |
| 0350 | 29 | 80 82 943 | | | 9 | .Screw | .Skruv | 5 |
| 0360 | 30 | 80 29 985 | | | 9 | .Washer | .Bricka | 5 |
| 0370 | 31 | *87 23 470* | | NLS - USE 8729303 | 1 | .Cover | .Lock | 5 |
| 0380 | 32 | *87 18 785* | | 23) NLS - USE 8728651 | 1 | .Gasket | .Packning | 3 |
| 0390 | 32 | 87 25 038 | | 24) | 1 | .Gasket | .Packning | 3 |
| 0400 | 33 | 80 83 933 | | | 8 | .Screw | .Skruv | 5 |
| 0410 | 34 | 80 29 985 | | | 8 | .Washer | .Bricka | 5 |
| 0120 | 35 | 87 12 192 | | | 1 | .Shaft | .Axel | 5 |
| 0430 | 36 | 83 41 257 | | | 1 | .Ball | .Kula | 5 |
| 0440 | 37 | 87 19 775 | | | 1 | .Spring | .Fjäder | 5 |
| 0450 | 38 | *83 43 014* | | NLS - USE 8729808 | 1 | .Companion flange | .Medbringare | 5 |
| 0460 | 39 | 90 49 553 | | | 2 | .Roll pin | .Spännstift | 5 |
| 0470 | 40 | 79 56 154 | | | 1 | .Roll pin | .Spännstift | 5 |
| 0480 | 41 | 87 12 200 | | | 1 | .Catch | .Spärr | 3 |
| 0490 | 42 | 87 12 952 | | | 1 | .Pin | .Tapp | 5 |
| 0500 | 43 | *83 44 335* | | NLS - USE 8730764 | 1 | .Seal | .Tätning | 4 |
| 0510 | 44 | 93 61 650 | | | 1 | .Dipstick | .Mätsticka | 3 |
| 0520 | 45 | 93 61 544 | | | 1 | ..Ring-gland | ..Packningsring | 4 |
| 0530 | 46 | 93 68 200 | | | 1 | .Oil filler | .Oljepåfyllning | 6 |
| 0540 | 47 | 93 61 452 | | | 1 | .Nipple | .Nippel | 6 |
| 0550 | 48 | *75 10 241* | | NLS - USE 7514946 | 1 | .Gasket | .Packning | 3 |

23. Gear box --206963, --694101, --913909
24. Gear box 206964--, 694102--, 913910--
37. Ch. --H2020732, --H3018765, --H7029579
38. Ch. H2020733--, H3018766--, H7029580--
70. For cars with sheet metal exhaust manifold. För bilar med plåtavgassamlare
71. For cars with EGR. För bilar med EGR.
72. For cars without EGR. För bilar utan EGR.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

Gear box, 4-speed

# 3-H16


## *Gear box case, oil pan*

*-1988*

Växellåda, 4-växlad

## *Växellådshus, oljesump*

*-1988*

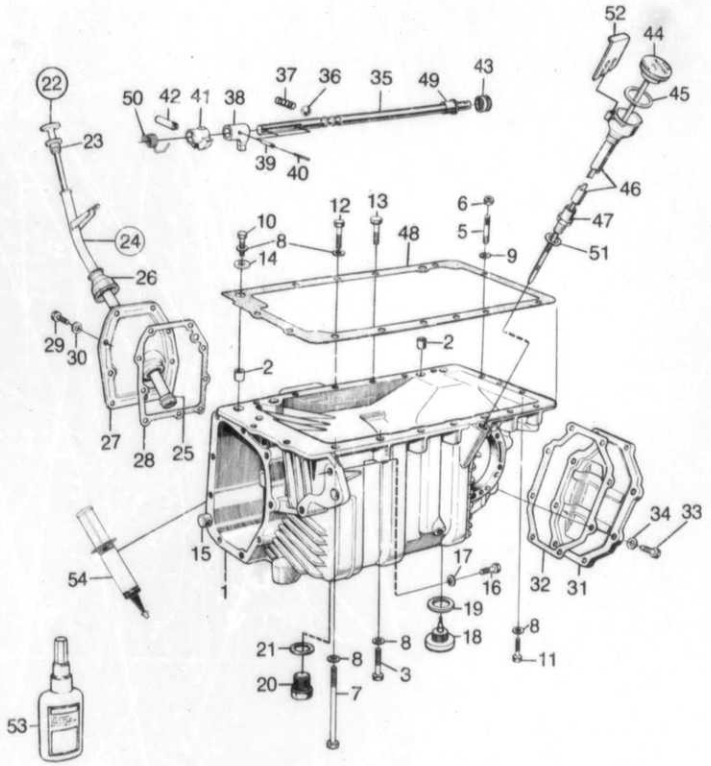


F5547 90086

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| | • 81 52 381 | | 300 ML | X | .Flange sealant | .Flänstätning | 3 |
| 49 | 87 11 608 | | | 1 | .Bushing | .Bussning | |
| 50 | 87 12 184 | | | 1 | .Spring | .Fjäder | 3 |
| 51 | 93 61 627 | | | 1 | .Washer | .Bricka | 5 |
| 52 | 93 62 542 | | | 1 | .Plate | .Platta | 6 |
| 53 | 74 96 284 | | 50 ML | X | Hydraulic sealant | Gängtätning | 5 |
| 54 | 93 21 795 | | 25 ML | X | Flange sealant | Flänstätning | 5 |
| | 74 96 003 | | See page 4-085, 3-K14 | 1 | Gasket kit | Packningsats | 5 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 3-H18

## Primary gear case

## Primärväxelhus

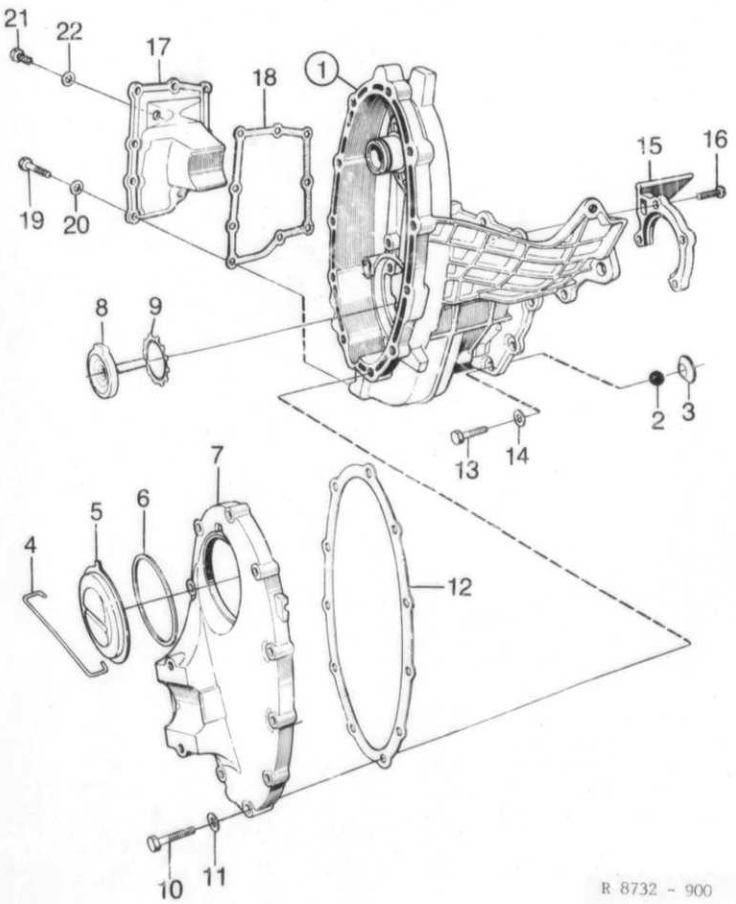


R 8732 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| | | | See page 4-009, 3-H10 | | Gear box, manual | Växellåda, manuell | |
| 1 | 87 13 612 | | GEAR BOX G45606, G45706 GM55700, GM55600 | 1 | .Gear housing | .Primärväxelhus | |
| 1 | *87 22 795* | | GEAR BOX GM45610,GM45710 GM55702, GM55602,GM45510 NLS - USE 8726374 | 1 | .Gear housing | .Primärväxelhus | 6 |
| 1 | 87 26 374 | | GEAR BOX GM45612,GM45712 GM55704, GM55804 | 1 | .Gear housing | .Primärväxelhus | 6 |
| 2 | 87 13 604 | | | 1 | ..Ball | ..Kula | 5 |
| 3 | 87 15 351 | | | 1 | ..Spring disc | ..Fjädertallrik | 4 |
| 4 | 87 10 303 | | | 1 | .Brace | .Bygel | 5 |
| 5 | 87 10 956 | | | 1 | .Cover | .Lock | |
| 6 | 87 13 216 | | | 1 | .Gasket | .Packning | |
| 7 | 87 21 177 | | GEAR BOX G45606, G45706 (8721185) | 1 | .Cover | .Lock | 5 |
| 7 | 87 21 177 | | GEAR BOX GM45610,GM45710 GM 45510,GM45612,GM45712 | 1 | .Cover | .Lock | 5 |
| 7 | 87 22 712 | | GEAR BOX GM55602,GM55702 GM55600, GM55700 | 1 | .Cover | .Lock | 5 |
| 7 | 87 26 895 | | GEAR BOX GM55704,GM55804 | 1 | .Cover | .Lock | 5 |
| 8 | 87 21 201 | | | 1 | ..Oil collector | ..Oljeskopa | 5 |
| 9 | 87 21 235 | | | 1 | ..Lock ring | ..Låsring | 5 |
| 10 | *80 83 958* | | NLS - USE 8125213 | 11 | .Screw | .Skruv | 5 |
| 11 | 80 29 985 | | | 11 | .Washer | .Bricka | 5 |
| 12 | *87 12 903* | S | 23) NLS - USE 8732380 | 1 | .Gasket | .Packning | 4 |
| 12 | *87 25 012* | S | 24) NLS - USE 8732380 | 1 | .Gasket | .Packning | 4 |
| 13 | 80 83 933 | | | 10 | .Screw | .Skruv | 5 |
| 14 | 80 29 985 | | | 10 | .Washer | .Bricka | 5 |
| 15 | 87 19 494 | | | 1 | .Bearing shield | .Lagersköld | 6 |
| 16 | 87 21 334 | | | 4 | .Screw | .Skruv | 5 |
| 17 | 87 21 821 | | | 1 | .Cover | .Lock | 5 |
| 18 | *87 12 986* | S | 23) NLS - USE 8732398 | 1 | .Gasket | .Packning | 4 |
| 18 | *87 25 020* | S | 24) NLS - USE 8732398 | 1 | .Gasket | .Packning | 4 |
| 19 | 80 83 933 | | | 9 | .Screw | .Skruv | 5 |
| 20 | 80 29 985 | | | 9 | .Washer | .Bricka | 5 |
| 21 | 87 23 405 | | | 1 | .Screw | .Skruv | 5 |
| 22 | 81 24 133 | | | 1 | .Gasket | .Packning | 5 |
| | 74 96 003 | | See page 4-085, 3-K14 | 1 | Gasket kit | Packningsats | 5 |

23. Gear box --206963, --694101, --913909
24. Gear box 206964--, 694102--, 913910--



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 3-H20

## *Gear box case, oil pan*

## *Växellådshus, oljesump*

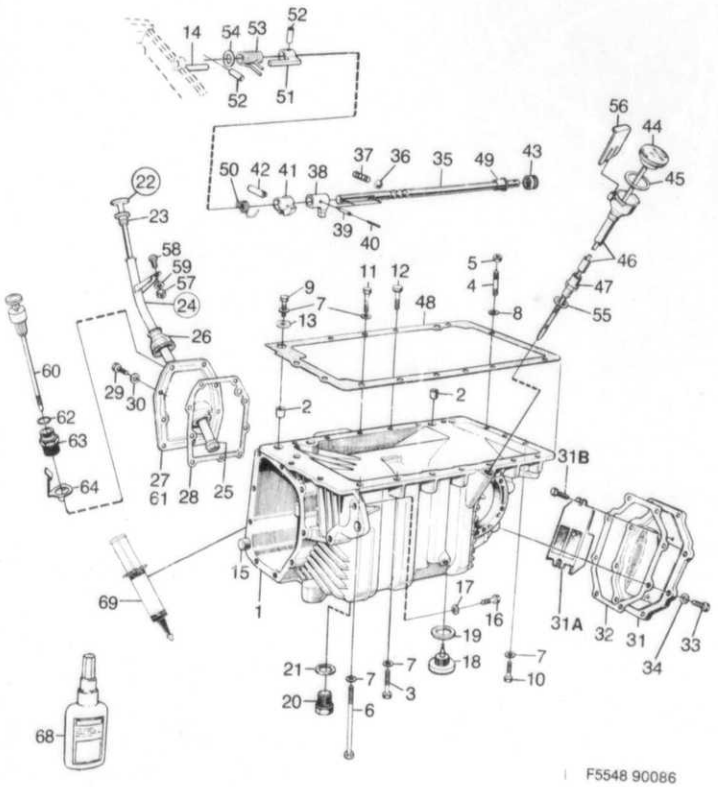


| 0230 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | See page 4-009, 3-H10 | | Gear box, manual | Växellåda, manuell | |
| 0070 | 1 | 87 21 300 | | -1988 | 1 | .Gearbox housing | .Växellådshus | 6 |
| 0030 | 1 | 87 26 309 | | 500), 1989- | 1 | .Gearbox housing | .Växellådshus | 6 |
| 0040 | 2 | 83 00 725 | | | 2 | .Sleeve | .Hylsa | 4 |
| 0050 | 3 | *80 83 958* | | NLS - USE 8125213 | 6 | .Screw | .Skruv | 5 |
| 0060 | 4 | *93 46 388* | | 1986 NLS - USE 8005928 | 1 | .Screw | .Skruv | 5 |
| 0070 | 4 | 80 05 928 | | 1987- | 1 | .Stud | .Pinnskruv | 5 |
| 0080 | 5 | 80 74 106 | | -1987 | 1 | .Nut | .Mutter | 5 |
| 0090 | 5 | 81 51 235 | | 1988- | 1 | .Nut | .Mutter | 5 |
| 0100 | 6 | 79 65 569 | | | 1 | .Screw | .Skruv | 5 |
| 0110 | 7 | 80 29 985 | | | 14 | .Washer | .Bricka | 5 |
| 0120 | 8 | *93 28 824* | | NLS - USE 8981987 | 1 | .Seal | .Tätning | 5 |
| 0130 | 9 | 93 46 354 | | | 1 | .Screw | .Skruv | 5 |
| 0140 | 10 | 80 82 968 | | | 1 | .Screw | .Skruv | 5 |
| 0150 | 11 | 93 46 362 | | | 5 | .Screw | .Skruv | 5 |
| 0160 | 12 | 93 46 370 | | | 1 | .Screw | .Skruv | 5 |
| 0170 | 13 | 70 61 328 | | | 1 | .Washer | .Bricka | 5 |
| 0180 | 14 | 80 49 876 | | PART OF 8722795 | 1 | ..Roll pin | ..Spännstift | 5 |
| 0190 | 15 | 87 23 967 | | (8342594) | 1 | .Guide pin | .Styrstift | 5 |
| 0200 | 16 | 80 82 968 | | | 1 | .Screw | .Skruv | 5 |
| 0210 | 17 | 80 29 985 | | | 1 | .Washer | .Bricka | 5 |
| 0220 | 18 | 87 17 407 | | | 1 | .Drain plug | .Avtappningspropp | 6 |
| 0230 | 19 | 87 17 415 | | | 1 | .Gasket | .Packning | 4 |
| 0240 | 20 | *87 11 871* | | NLS - USE 8731762 | 1 | .Drain plug | .Avtappningspropp | 1 |
| 0250 | 21 | 87 18 439 | | | 1 | .Gasket | .Packning | 3 |
| 0260 | 22 | 75 44 547 | | 66,70,71), B201C, I | 1 | .Dipstick | .Mätsticka | 3 |
| 0270 | 22 | 75 44 547 | | 1988-,66,46,70), B201 EU | 1 | .Dipstick | .Mätsticka | 3 |
| 0280 | 22 | *83 34 526* | | 66,72), B201C, I NLS - USE 7546872 | 1 | .Dipstick | .Oljesticka | 3 |
| 0320 | 22 | 75 47 201 | | 66), B202I | 1 | .Dipstick | .Oljesticka | 3 |
| 0330 | 22 | 75 46 872 | | 66), TURBO | 1 | .Dipstick | .Mätsticka | 3 |
| 0340 | 23 | 79 71 948 | | | 1 | ..O-ring | ..O-ring | 2 |
| 0350 | 24 | 75 44 554 | | 37,70,71), B201, C, I | 1 | .Tube | .Rör | 6 |
| 0360 | 24 | 75 49 231 | | 8,66,70,71), B201, C, I | 1 | .Tube | .Rör | 6 |
| 0370 | 24 | 75 49 231 | | 1988-,66,46,70), B201 EU | 1 | .Tube | .Rör | 6 |
| 0380 | 24 | 75 42 921 | | 66,72), B201, C, I | 1 | .Tube | .Rör | 6 |
| 0410 | 24 | 75 42 939 | | -1988, B201I,US,CA,AU,JA | 1 | .Tube | .Rör | 6 |
| 0420 | 24 | 93 69 661 | | 48), B202 I | 1 | .Tube | .Rör | 6 |
| 0430 | 24 | 75 49 504 | | 49,66), B202 I | 1 | .Tube | .Rör | 6 |
| 0440 | 24 | 75 42 947 | | 66), B201 TURBO SE, EU, ME, FE | 1 | .Tube | .Rör | 6 |
| 0460 | 24 | 93 69 521 | | 66), B202 TURBO | 1 | .Tube | .Rör | 6 |
| 0470 | 25 | 79 71 930 | | 66) | 1 | ..O-ring | ..O-ring | 2 |
| 0480 | 26 | 83 34 401 | | 66) | 1 | ..Cup | ..Kopp | 2 |
| 0490 | 26 | 75 54 363 | | 66), B202I | 1 | ..Cup | ..Kopp | 2 |
| 0500 | 27 | 87 15 377 | | 66) | 1 | .Cover | .Lock | 6 |
| 0510 | 28 | *87 15 393* | S | 23) NLS - USE 8728677 | 1 | .Gasket | .Packning | 3 |
| 0520 | 28 | *87 25 053* | | 24) NLS - USE 8728677 | 1 | .Gasket | .Packning | 3 |
| 0530 | 29 | 80 82 935 | | 66) | 9 | .Screw | .Skruv | 5 |
| 0540 | 29 | 79 70 015 | | 67) | 9 | .Screw | .Skruv | 5 |

23. Gear box --2069E, --694101, --913909
24. Gear box 206964--, 694102--, 913910--
37. Ch. --H2020732, --H3018765, --H7029579
38. Ch. H2020733--, H3018766--, H7029580--
46. For I with catalytic converter. För I med katalytisk reaktor.
48. Ch. --J3011346, --J7042343
49. Ch. J3011347--, J7042344--
66. Ch. --K3023437, --K7034845.
67. Ch. K3023438--, K7034846--.
70. For cars with sheet metal exhaust manifold För bilar med plåtavgassamlare
71. For cars with EGR. För bilar med EGR.
72. For cars without EGR. För bilar utan EGR.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 3-H22

## Gear box case, oil pan

## Växellådshus, oljesump

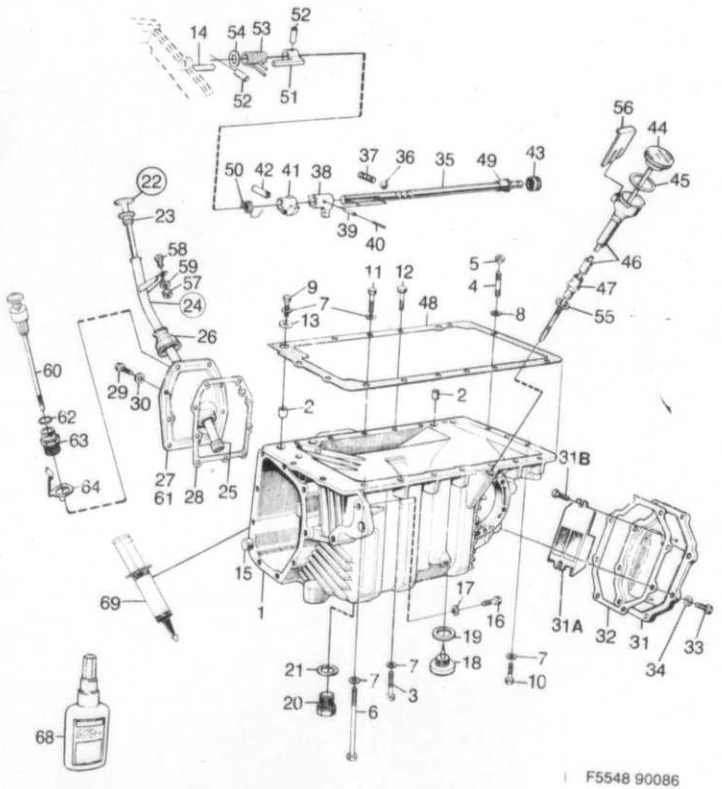


| 0230 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0550 | 30 | 80 29 985 | | 66) | 9 | .Washer | .Bricka | 5 |
| 0560 | 31 | *87 23 470* | | 62) NLS - USE 8729303 | 1 | .Cover | .Lock | 5 |
| 0570 | 31 | *87 27 729* | | 63) NLS - USE 8729303 | 1 | .Cover | .Lock | 5 |
| 0580 | 31A | 87 27 711 | | | 1 | ..Filter | ..Filter | 5 |
| 0590 | 31B | 80 19 945 | | | 2 | ..Screw | ..Skruv | 5 |
| 0600 | 32 | *87 18 785* | | 23) NLS - USE 8728651 | 1 | .Gasket | .Packning | 3 |
| 0610 | 32 | 87 25 038 | | 24) | 1 | .Gasket | .Packning | 3 |
| 0620 | 33 | 80 83 933 | | | 8 | .Screw | .Skruv | 5 |
| 0630 | 34 | 80 29 985 | | | 8 | .Washer | .Bricka | 5 |
| 0640 | 35 | 87 12 192 | | GEAR BOX G4506, G45706 GM55600, GM55700 | 1 | .Shaft | .Axel | 5 |
| 0650 | | | | | | | | |
| 0660 | 35 | 87 22 803 | | GEAR BOX GM45610,GM45710 GM55702,GM55602, GM45510 GM45612,GM45712,GM55704 GM55804 | 1 | .Gear rod | .Växelstång | 5 |
| 0670 | | | | | | | | |
| 0680 | | | | | | | | |
| 0690 | | | | | | | | |
| 0700 | 36 | 83 41 257 | | | 1 | .Ball | .Kula | 5 |
| 0710 | 37 | 87 19 775 | | | 1 | .Spring | .Fjäder | 5 |
| 0720 | 38 | *83 43 014* | | NLS - USE 8729808 | 1 | .Companion flange | .Medbringare | 5 |
| 0730 | 39 | 80 49 553 | | | 2 | .Roll pin | .Spännstift | 5 |
| 0740 | 40 | 79 56 154 | | | 1 | .Roll pin | .Spännstift | 5 |
| 0750 | 41 | 87 12 945 | | | 1 | .Catch | .Spärr | 6 |
| 0760 | 42 | 87 12 952 | | | 1 | .Pin | .Tapp | 5 |
| 0770 | 43 | *83 44 335* | | NLS - USE 8730764 | 1 | .Seal | .Tätning | 4 |
| 0780 | 44 | 93 61 650 | | | 1 | .Dipstick | .Mätsticka | 3 |
| 0790 | 44 | 75 14 201 | | B202 | 1 | .Dipstick | .Oljesticka | 3 |
| 0800 | 45 | 93 61 544 | | | 1 | ..Ring-gland | ..Packningsring | 4 |
| 0810 | 46 | 93 68 200 | | | 1 | .Oil filler | .Oljepåfyllning | 6 |
| 0820 | 47 | 93 61 452 | | | 1 | .Nipple | .Nippel | 6 |
| 0830 | 48 | *75 10 241* | | NLS - USE 7514946 | 1 | .Gasket | .Packning | 3 |
| 0840 | • | 81 52 381 | | 300 ML | X | .Flange sealant | .Flänstätning | 3 |
| 0860 | 49 | 87 11 608 | | | 1 | .Bushing | .Bussning | |
| 0870 | 50 | 87 13 166 | | | 1 | .Spring | .Fjäder | 5 |
| 0880 | 51 | 87 22 720 | | GEAR BOX GM45610,GM45710 GM55702,GM55602,GM45510 GM45612,GM45712,GM55704 GM55804 | 1 | .Companion flange | .Medbringare | 5 |
| 0890 | | | | | | | | |
| 0900 | | | | | | | | |
| 0910 | | | | | | | | |
| 0920 | 52 | 80 49 553 | | GEAR BOX GM45610,GM45710 GM55702,GM55602,GM45510 GM45612,GM45712,GM55704 GM55804 | 2 | .Roll pin | .Spännstift | 5 |
| 0930 | | | | | | | | |
| 0940 | | | | | | | | |
| 0950 | | | | | | | | |
| 0960 | 53 | 87 22 829 | | GEAR BOX GM45610,GM45710 GM55702,GM55602,GM45510 GM45612,GM45712,GM55704 GM55804 | 1 | .Spring | .Fjäder | 5 |
| 0970 | | | | | | | | |
| 0980 | | | | | | | | |
| 0990 | | | | | | | | |
| 1000 | 54 | 87 22 837 | | GEAR BOX GM45610,GM45710 GM55702,GM55602,GM45510 GM45612,GM45712,GM55704 GM55804 | 1 | .Washer | .Bricka | 4 |
| 1010 | | | | | | | | |
| 1020 | | | | | | | | |
| 1030 | | | | | | | | |
| 1040 | 55 | 93 61 627 | | | 1 | .Washer | .Bricka | 5 |
| 1050 | 56 | 93 62 542 | | | 1 | .Plate | .Platta | 6 |
| 1060 | 57 | *79 65 767* | | -1988 WITHOUT AIR PREHEATER NLS - USE 7968415 | 1 | Lock nut | Låsmutter | 5 |
| 1070 | | | | | | | | |
| 1080 | 57 | 80 29 555 | | 1989-66) WITHOUT AIR PREHEATER | 1 | Nut | Mutter | 5 |
| 1090 | | | | | | | | |
| 1100 | 58 | 79 67 938 | | -1988 WITHOUT AIR PREHEATER | 1 | Screw | Skruv | 5 |
| 1110 | | | | | | | | |

23. Gear box --206963, --694101, --913909
24. Gear box 206964--, 694102--, 913910--
62. Gear box --A147593, --B127753.
63. Gear box A147594--, B127754--
66. Ch. --K3023437, --K7034845.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 3-H24

## Gear box case, oil pan
## Växellådshus, oljesump

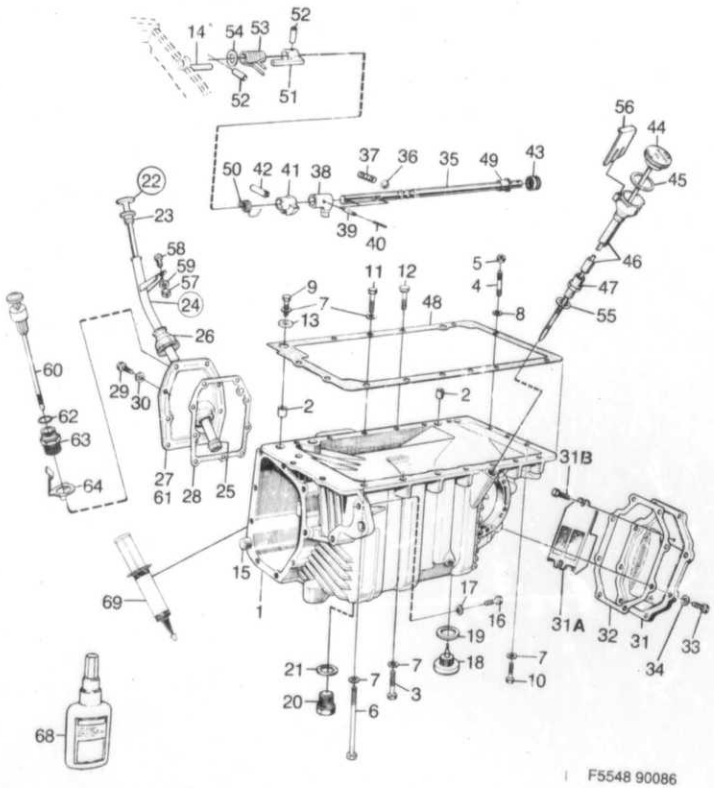


| 0230 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 1120 | 58 | 80 19 978 | | 1989-,66) | 1 | Screw | Skruv | 5 |
| 1130 | | | | WITHOUT AIR PREHEATER | | | | |
| 1140 | 59 | 80 29 951 | | 1989-,66) | 1 | Washer | Bricka | 5 |
| 1150 | | | | WITHOUT AIR PREHEATER | | | | |
| 1160 | 60 | *87 28 396* | | 67) NLS - USE 8124182, | 1 | Dipstick | Mätsticka | 3 |
| 1160 | | | | 8729345 | | | | |
| 1170 | 61 | 87 28 149 | | 67) | 1 | Cover | Lock | 6 |
| 1180 | 62 | 81 09 647 | | 67) | 1 | O-ring | O-ring | 2 |
| 1190 | 63 | 87 26 770 | | 67) | 1 | Nipple | Nippel | 3 |
| 1200 | 67 | 87 27 737 | | 67) | 1 | Spring | Fjäder | 5 |
| 1205 | 68 | 74 96 284 | | 50 ML | X | Hydraulic sealant | Gängtätning | 5 |
| 1206 | 69 | 93 21 795 | | 25 ML | X | Flange sealant | Flänstätning | 5 |
| 1210 | | | | | | | | |
| 1220 | | 74 96 003 | | See page 4-085, 3-K14 | 1 | Gasket kit | Packningsats | 5 |

66. Ch. --K3023437. --K7034845.
67. Ch. K3023438-, K7034846-.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

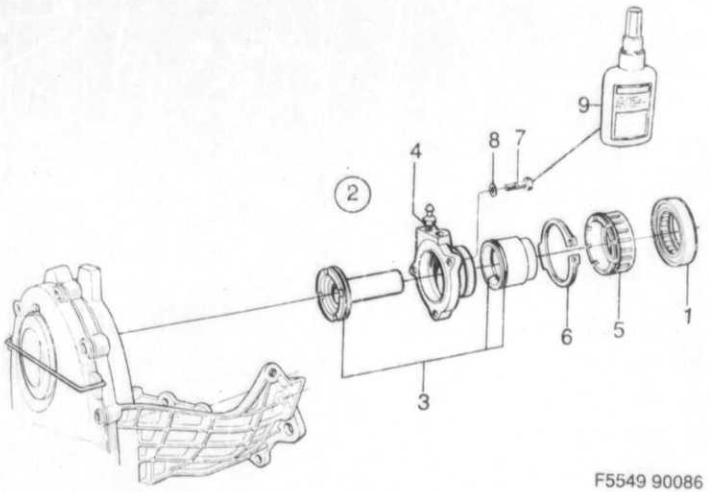


F5549 90086

| 0250 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 87 21 995 | | | 1 | Release bearing | Urtrampningslager | 2 |
| 0020 | 2 | *87 22 209* | | NLS - USE 8729840 | 1 | Slave cylinder | Slavcylinder | 2 |
| 0030 | 3 | 87 81 072 | | See page 4-077, 3-K06 | 1 | . Sealing kit | . Tätningssats | 1 |
| 0040 | 4 | 87 11 053 | | | 1 | . Nipple | . Nippel | 6 |
| 0050 | 5 | 87 22 100 | | | 1 | . Seal | . Tätning | 6 |
| 0060 | 6 | 87 14 420 | | | 1 | . Retaining ring | . Spärring | 5 |
| 0070 | 7 | *80 97 925* | | 33) NLS - USE 7399959 | 3 | Screw | Skruv | 5 |
| 0080 | 7 | 73 99 363 | | 34), -1988 | 3 | Screw | Skruv | 5 |
| 0090 | 7 | 73 99 959 | | 500), 1989- | 3 | Screw | Skruv | 5 |
| 0100 | 8 | 80 29 951 | | | 3 | Washer | Bricka | 5 |
| 0110 | 9 | 74 96 284 | | 50 ML | X | Hydraulic sealant | Gängtätning | 5 |

33. Ch. --H2018825, --H3017000, --H7027781
34. Ch. H2018826--, H3017001--, H7027782--
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

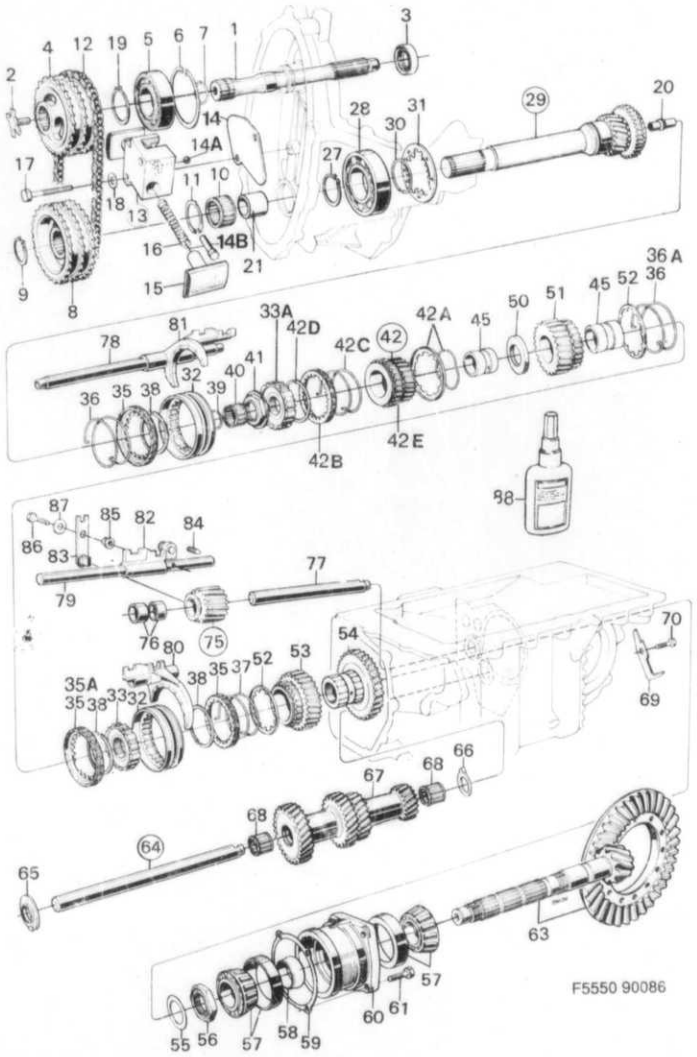


| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| | *87 20 963* | | MARKED: GM 34506 NLS - USE 7896194 | 1 | Gearbox | Växellåda | |
| | *87 23 793* | | MARKED: GM 34508 NLS - USE 7896707 | 1 | Gearbox | Växellåda | 5 |
| 1 | 87 11 350 | | | 1 | .Clutch shaft | .Lamellaxel | 3 |
| 2 | 87 11 038 | | | 1 | .Screw | .Skruv | 3 |
| 3 | 87 10 881 | | | 1 | .Seal | .Tätning | 2 |
| 4 | 87 11 582 | | 30 COGS | 1 | .Chain gear | .Kedjehjul | 5 |
| 5 | 87 10 865 | | | 1 | .Roller bearing | .Rullager | |
| 6 | 87 11 376 | | | 1 | .Retaining ring | .Spårring | 4 |
| 7 | 87 04 777 | | | 1 | .Lock ring | .Låsring | 3 |
| 8 | 87 11 400 | | 27 COGS | 1 | .Chain gear | .Kedjehjul | |
| 9 | 87 14 677 | | | 1 | ..Retaining ring | ..Spårring | 5 |
| 10 | 87 11 384 | | | 1 | .Needle bearing | .Nållager | 4 |
| 11 | 87 11 947 | | | 1 | .Retaining ring | .Spårring | 4 |
| 12 | 87 11 590 | | | 3 | .Chain | .Kedja | 5 |
| 13 | 87 13 570 | | | 1 | .Chain tensioner | .Kedjesträckare | 5 |
| 14 | 87 13 513 | | | 1 | ..Plate | ..Platta | 4 |
| 14A | 87 13 554 | | | 1 | ..Ball | ..Kula | |
| 14B | 87 13 539 | | | 1 | ..Plug | ..Plugg | 3 |
| 15 | 87 13 497 | | | 2 | ..Tightener shoe | ..Sträckarsko | 5 |
| 16 | 87 13 521 | | | 1 | ..Spring | ..Fjäder | 5 |
| 17 | 80 83 982 | | -1987 | 2 | .Screw | .Skruv | 5 |
| 17 | 87 22 555 | | 1988- | 2 | .Screw | .Skruv | 5 |
| 18 | 80 29 985 | | -1987 | 2 | .Washer | .Bricka | 5 |
| 19 | 80 47 839 | | | 1 | .Retaining ring | .Spårring | 5 |
| 20 | 87 13 158 | | | 1 | .Tube | .Rör | 6 |
| 21 | 87 04 611 | | | 1 | .Sleeve | .Hylsa | 4 |
| 27 | 80 47 854 | | PART OF 8700767 | 1 | .Retaining ring | .Spårring | 5 |
| 28 | 87 00 767 | | | 1 | .Ball bearing | .Kullager | 3 |
| 29 | 87 15 872 | | | 1 | .Shaft | .Axel | 6 |
| 30 | 87 13 224 | | | 1 | ..Lock ring | ..Låsring | 3 |
| 31 | 87 11 954 | | | 1 | ..Guide ring | ..Styrring | 4 |
| 32 | 87 20 419 | | | 2 | .Sleeve | .Muff | 6 |
| 33 | 87 12 150 | | | 1 | .Synchromesh | .Synkronisering | 5 |
| 33A | 87 12 283 | | | 1 | .Synchromesh | .Synkronisering | 5 |
| 35 | 87 19 924 | | | 2 | .Ring | .Ring | 3 |
| 35A | 87 19 916 | | | 1 | .Ring | .Ring | 3 |
| 36 | 87 00 429 | | | 1 | .Locking spring | .Spärrfjäder | 4 |
| 36A | 87 15 120 | | | 1 | .Locking spring | .Spärrfjäder | 6 |
| 37 | 87 11 103 | | | 1 | .Locking spring | .Spärrfjäder | 6 |
| 38 | 87 04 942 | | | 4 | .Retaining ring | .Spårring | 4 |
| 39 | 79 51 437 | S | | 1 | .Spring clip | .Sprängring | 5 |
| 40 | 87 00 478 | S | | 1 | .Needle bearing | .Nållager | 3 |
| 41 | 87 04 108 | | | 1 | .Nut | .Mutter | 3 |
| 42 | *87 20 476* | | NLS - USE 8700429, 8704932, 8719916, 8720484 | 1 | .Gear<br>3 | .Kugghjul<br>3 | 4 |
| 42B | 87 19 916 | | | 1 | Ring | Ring | 3 |
| 42C | 87 00 429 | | | 1 | ..Locking spring | ..Spärrfjäder | 4 |
| 42D | 87 04 942 | | | 1 | ..Retaining ring | ..Spårring | 4 |
| 42E | 87 20 484 | | | 1 | ..Gear<br>3 | ..Kugghjul<br>3 | 4 |
| 42A | 87 81 155 | | See page 4-083, 3-K12 | 1 | ...Guide ring | ...Styrring | 4 |
| 45 | 87 00 205 | | | 2 | .Bearing bushing | .Lagerbussning | 4 |
| 50 | 87 00 239 | | | 1 | .Thrust washer | .Tryckbricka | 4 |
| 51 | 87 20 468 | | | 1 | .Gear<br>2 | .Kugghjul<br>2 | 4 |
| 52 | 87 00 361 | | | 2 | .Guide ring | .Styrring | 4 |
| 53 | *87 14 933* | | 41)<br>NLS - USE 8722266 | 1 | .Gear<br>1 | .Kugghjul<br>1 | 4 |

41. Gear box--208509, --806332, --932771




MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

4 GROUP INDEX

| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

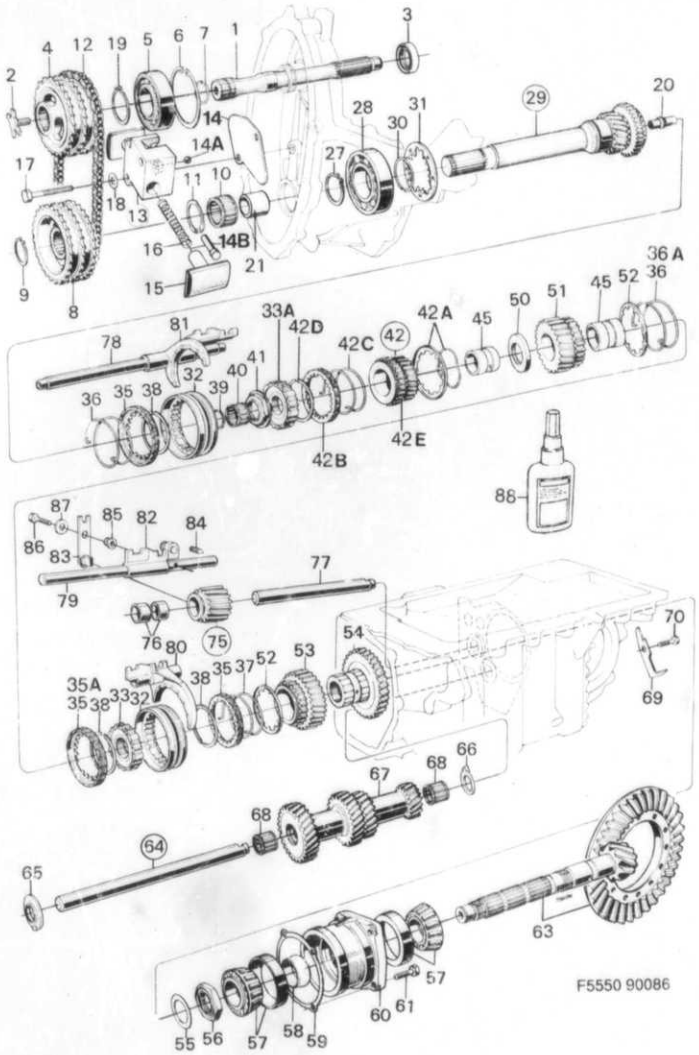


| 0300 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0590 | 53 | 87 22 266 | | 42) | 1 | .Gear | .Kugghjul | 4 |
| 0600 | | | | | | 1 | 1 | |
| 0610 | 54 | 87 14 925 | | | 1 | .Gear | .Kugghjul | 4 |
| 0620 | | | | | | R | R | |
| 0630 | 55 | 87 03 340 | | 0,3MM | X | .Shim | .Shim | 5 |
| 0640 | 55 | 87 03 357 | | 0,4MM | X | .Shim | .Shim | 5 |
| 0650 | 55 | 87 03 365 | | 0,5MM | X | .Shim | .Shim | 5 |
| 0660 | 56 | 87 02 359 | | | 1 | .Nut | .Mutter | 3 |
| 0670 | 57 | *83 41 034* | | -1986 NLS - USE 8729105 | 2 | .Roller bearing | .Rullager | 3 |
| 0680 | 57 | *87 25 194* | | 1987- NLS - USE 8729105 | 2 | .Roller bearing | .Rullager | 3 |
| 0690 | 58 | 87 03 530 | S | | 1 | .Sleeve | .Hylsa | 4 |
| 0700 | 59 | *83 41 752* | | 35), 0,10MM NLS - USE 8724569 | X | .Adjusting washer | .Justerbricka | 5 |
| 0710 | 59 | 87 24 569 | | 36), 0,10MM | X | .Adjusting washer | .Justerbricka | 5 |
| 0720 | 59 | *83 41 760* | | 35), 0,15MM NLS - USE 8724577 | X | .Adjusting washer | .Justerbricka | 5 |
| 0730 | 59 | 87 24 577 | | 36), 0,15MM | X | .Adjusting washer | .Justerbricka | 5 |
| 0740 | 59 | *83 41 778* | | 35), 0,30MM NLS - USE 8724585 | X | .Adjusting washer | .Justerbricka | 5 |
| 0750 | 59 | 87 24 585 | | 36), 0,30MM | X | .Adjusting washer | .Justerbricka | 5 |
| 0760 | 59 | 83 44 723 | | 35), 0,50MM | X | .Adjusting washer | .Justerbricka | 5 |
| 0770 | 59 | 87 24 593 | | 36), 0,50MM | X | .Adjusting washer | .Justerbricka | 5 |
| 0780 | 60 | 87 20 732 | | | 1 | .Bearing housing | .Lagerhus | 5 |
| 0790 | 61 | 87 18 942 | | | 4 | .Screw | .Skruv | 5 |
| 0800 | 63 | 87 15 799 | | | 1 | .Final drive | .Slutväxel | |
| 0810 | 64 | 93 21 241 | | See page 4-079, 3-K08 | 1 | .Countershaft | .Mellanaxel | 6 |
| 0820 | 65 | 87 11 327 | | | 1 | ..Thrust washer | ..Tryckbricka | 4 |
| 0830 | 66 | 87 12 325 | | | 1 | ..Thrust washer | ..Tryckbricka | 4 |
| 0840 | 67 | 87 18 678 | | | 1 | .Gear | .Kugghjul | 5 |
| 0850 | 68 | 87 18 660 | | | 2 | .Needle bearing | .Nållager | 3 |
| 0860 | 69 | 87 00 114 | | | 1 | .Lock plate | .Låsplatta | 3 |
| 0870 | 70 | 87 18 843 | | | 1 | .Screw | .Skruv | 5 |
| 0880 | 75 | 87 14 974 | | | 1 | .Gear | .Kugghjul | 4 |
| 0890 | | | | | | R | R | |
| 0900 | 76 | 87 15 229 | | | 2 | ..Bushing | ..Bussning | 3 |
| 0910 | 77 | 87 00 130 | | | 1 | .Shaft | .Axel | 6 |
| 0920 | | | | | | R | R | |
| 0930 | 78 | 87 00 585 | | | 1 | .Shift rail | .Växelföraraxel | 6 |
| 0940 | 79 | 87 21 326 | | | 1 | .Shift rail | .Växelföraraxel | |
| 0950 | | | | | | R | R | |
| 0960 | 80 | 87 13 091 | | | 1 | .Gear selector fork | .Växelförargaffel | 5 |
| 0970 | | | | | | 1/2 | 1/2 | |
| 0980 | 81 | 87 00 619 | | | 1 | .Gear selector fork | .Växelförargaffel | 5 |
| 0990 | | | | | | 3/4 | 3/4 | |
| 1000 | 82 | 87 14 792 | | | 1 | .Companion flange | .Medbringare | 5 |
| 1010 | | | | | | R | R | |
| 1020 | 83 | 87 02 045 | | | 1 | .Lever | .Hävarm | |
| 1030 | 84 | 81 17 715 | | | 1 | .Roll pin | .Spännstift | 5 |
| 1040 | 85 | 87 02 086 | | | 1 | .Bearing sleeve | .Lagerhylsa | 4 |
| 1050 | 86 | 87 15 054 | | | 1 | .Screw | .Skruv | 5 |
| 1060 | 87 | 80 29 969 | | | 1 | .Washer | .Bricka | 5 |
| 1070 | 88 | 74 96 268 | | 50 ML | X | Nut lock | Gängsäkring | 5 |
| 1080 | | | | | | normal | normal | |
| 1090 | | | | | | blue | blå | |
| 1100 | 88 | 74 96 276 | | 50 ML | X | Nut lock | Gängsäkring | 5 |
| 1110 | | | | | | strong | stark | |
| 1120 | | | | | | green | grön | |
| 1130 | | | | | | | | |
| 1140 | | 87 80 454 | | See page 4-083, 3-K12 | 1 | .Pinion bearing kit | .Pinjonglagersats | 5 |

35. Gear box --205264, --687132, --795916
36. Gear box 205265--, 687133--, 795917--
42. Gear box 208510--, 806333--, 932772--




MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

4 GROUP INDEX

| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

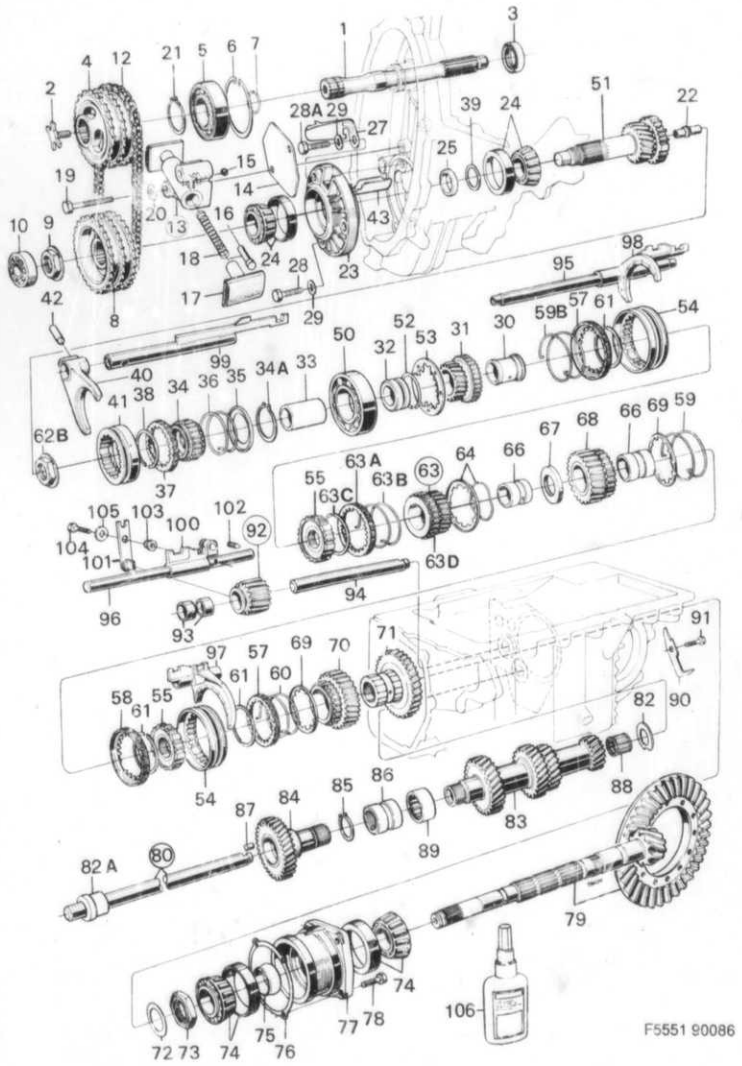


| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| | | | See page 4-009, 3-H10 | | Gear box, manual | Växellåda, manuell | |
| 1 | 87 11 350 | | | 1 | .Clutch shaft | .Lamellaxel | 3 |
| 2 | 87 11 038 | | | 1 | .Screw | .Skruv | 3 |
| 3 | 87 10 881 | | | 1 | .Seal | .Tätning | 2 |
| 4 | *87 13 190* | | 32 COGS,GEAR BOX GM45710 GM55602,G45706,G45606, GM55700 NLS - USE 8728594 | 1 | .Chain gear | .Kedjehjul | 5 |
| 4 | 87 11 343 | | 31 COGS,GEAR BOX GM45610 GM55702,GM55600 | 1 | .Chain link | .Kedjelänk | 5 |
| 4 | 87 11 582 | | 30 COGS,GEAR BOX GM45510 | 1 | .Chain gear | .Kedjehjul | 5 |
| 5 | 87 10 865 | | | 1 | .Roller bearing | .Rullager | |
| 6 | 87 11 376 | | | 1 | .Retaining ring | .Spärring | 4 |
| 7 | 87 04 777 | | | 1 | .Lock ring | .Låsring | 3 |
| 8 | *87 13 208* | | 25 COGS,GEAR BOX GM45710 GM55602,G45706,G45606, GM55700 NLS - USE 8728602 | 1 | .Chain gear | .Kedjehjul | 5 |
| 8 | 87 15 831 | | 26 COGS,GEAR BOX GM45610 GM 55702,GM55600 | 1 | .Chain gear | .Kedjehjul | 5 |
| 8 | 87 25 616 | | 27 COGS,GEAR BOX GM45510 | 1 | .Chain gear | .Kedjehjul | 5 |
| 9 | 87 12 770 | | | 1 | .Nut | .Mutter | 5 |
| 10 | 87 21 219 | | GEAR BOX GM55602,GM55702 GM55600,GM55700 | 1 | .Ball bearing | .Kullager | 3 |
| 12 | 87 11 590 | | | 3 | .Chain | .Kedja | 5 |
| 13 | 87 13 570 | | | 1 | .Chain tensioner | .Kedjesträckare | 5 |
| 14 | 87 13 513 | | | 1 | ..Plate | ..Platta | 4 |
| 15 | 87 13 554 | | | 1 | ..Ball | ..Kula | |
| 16 | 87 13 539 | | | 1 | ..Plug | ..Plugg | 3 |
| 17 | 87 13 497 | | | 2 | ..Tightener shoe | ..Sträckarsko | 5 |
| 18 | 87 13 521 | | | 2 | ..Spring | ..Fjäder | 5 |
| 19 | 80 83 982 | | -1987 | 2 | ..Screw | ..Skruv | 5 |
| 19 | 87 22 555 | | 1988- | 2 | ..Screw | ..Skruv | 5 |
| 20 | 80 29 985 | | -1987 | 2 | ..Washer | ..Bricka | 5 |
| 21 | 80 47 839 | | | 1 | .Retaining ring | .Spärring | 5 |
| 22 | 87 13 158 | | | 1 | .Tube | .Rör | 6 |
| 23 | 87 23 256 | | | 1 | .Bearing housing | .Lagerhus | 6 |
| 24 | 87 12 838 | | | 2 | .Roller bearing | .Rullager | 3 |
| 25 | 87 23 272 | | 7,28MM | X | .Spacer ring | .Distansring | 5 |
| 25 | 87 23 280 | | 7,29MM | X | .Spacer ring | .Distansring | 5 |
| 25 | 87 23 298 | | 7,30MM | X | .Spacer ring | .Distansring | 5 |
| 25 | 87 23 306 | | 7,31MM | X | .Spacer ring | .Distansring | 5 |
| 27 | 87 13 588 | | | 1 | .Oil collector | .Oljeskopa | 5 |
| 28 | 80 83 933 | | | 2 | .Screw | .Skruv | 5 |
| 28A | 87 19 320 | | | 1 | .Screw | .Skruv | 5 |
| 29 | 80 29 985 | | | 2 | .Washer | .Bricka | 5 |
| 30 | 87 13 026 | | | 1 | .Bearing bushing | .Lagerbussning | 4 |
| 31 | 87 14 503 | | | 1 | .Gear 4 | .Kugghjul 4 | 4 |
| 32 | 87 12 762 | | | 1 | .Spacer bushing | .Distansbussning | |
| 33 | 87 13 406 | | | 1 | .Spacer sleeve | .Distanshylsa | 4 |
| 34 | 87 18 389 | | | 1 | .Clutch hub | .Kopplingsnav | |
| 34A | 80 47 854 | | | 1 | ..Retaining ring | ..Spärring | 5 |
| 35 | 87 12 598 | | | 1 | .Guide ring 5 | .Styrring 5 | 4 |
| 36 | 87 15 005 | | | 1 | .Locking spring 5 | .Spärrfjäder 5 | 4 |
| 37 | 83 44 772 | | | 1 | .Synchromesh | .Synkronisering | |
| 38 | 87 12 606 | | | 1 | .Lock ring | .Låsring | 5 |
| 39 | 87 12 994 | | 0,20MM | X | .Adjusting washer | .Justerbricka | 5 |
| 39 | 87 13 448 | | 0,25MM | X | .Adjusting washer | .Justerbricka | 5 |
| 39 | 87 13 455 | | 0,30MM | X | .Adjusting washer | .Justerbricka | 5 |
| 40 | 87 21 839 | | | 1 | .Gear selector fork | .Växelförargaffel | 5 |
| 41 | 87 12 580 | | | 1 | .Sleeve | .Muff | 5 |
| 42 | 80 34 985 | | | 1 | .Pin | .Pinne | 5 |




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

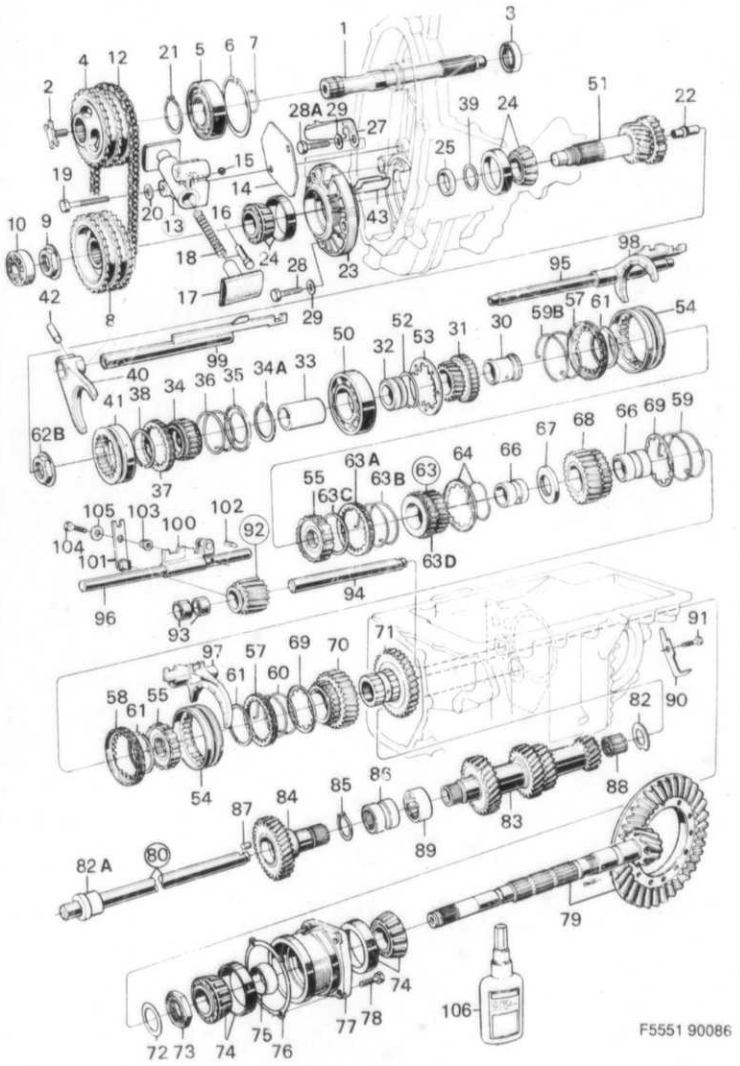


| 0330 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0640 | 43 | 87 13 596 | | | 1 | .Oil collector | .Oljeskopa | 5 |
| 0650 | 50 | 87 00 767 | | | 1 | .Ball bearing | .Kullager | 3 |
| 0660 | 51 | 87 23 249 | | GEAR BOX GM45610, 45710, GM45510,G45606,G45706 | 1 | .Shaft | .Axel | 6 |
| 0670 | | | | | | | | |
| 0680 | 51 | 87 23 231 | | GEAR BOX GM55602,GM55702 GM55600,GM55700 | 1 | .Shaft | .Axel | 6 |
| 0690 | | | | | | | | |
| 0700 | 52 | 87 10 410 | | | 1 | .Lock ring | .Låsring | 4 |
| 0710 | 53 | 87 04 041 | | | 1 | .Guide ring | .Styrring | 4 |
| 0720 | 54 | 87 20 419 | | | 2 | .Sleeve | .Muff | 5 |
| 0730 | 55 | 87 12 150 | | | 2 | .Synchromesh | .Synkronisering | 5 |
| 0740 | 57 | 87 19 924 | | | 2 | .Ring | .Ring | 3 |
| 0750 | 58 | 87 19 916 | | | 1 | .Ring | .Ring | 3 |
| 0760 | 59 | 87 15 120 | | | 1 | .Locking spring | .Spärrfjäder | 6 |
| 0770 | 59B | 87 00 429 | | | 1 | .Locking spring | .Spärrfjäder | 4 |
| 0780 | 60 | 87 11 103 | | | 1 | .Locking spring | .Spärrfjäder | 6 |
| 0790 | 61 | 87 04 942 | | | 4 | .Retaining ring | .Spärring | 4 |
| 0800 | 62B | 87 18 371 | | | 1 | .Nut | .Mutter | 5 |
| 0810 | 63 | *87 20 476* | | NLS - USE 8700429, 87049 2, 8719916, 8720484 | 1 | .Gear | .Kugghjul | 4 |
| 0820 | | | | | | 3 | 3 | |
| 0830 | 63A | 87 19 916 | | | 1 | Ring | Ring | 3 |
| 0840 | 63B | 87 00 429 | | | 1 | ..Locking spring | ..Spärrfjäder | 4 |
| 0850 | 63C | 87 04 942 | | | 1 | ..Retaining ring | ..Spärring | 4 |
| 0860 | 63D | 87 20 484 | | | 1 | ..Gear | ..Kugghjul | 4 |
| 0870 | | | | | | 3 | 3 | |
| 0880 | 64 | 87 81 155 | | See page 4-083, 3-K12 | 1 | ...Guide ring | ...Styrring | 4 |
| 0890 | 66 | 87 00 205 | | | 2 | .Bearing bushing | .Lagerbussning | 4 |
| 0900 | 67 | 87 00 239 | | | 1 | .Thrust washer | .Tryckbricka | 4 |
| 0910 | 68 | 87 20 468 | | | 1 | .Gear | .Kugghjul | 4 |
| 0920 | | | | | | 2 | 2 | |
| 0930 | 69 | 87 00 361 | | | 2 | .Guide ring | .Styrring | 4 |
| 0940 | 70 | *87 14 933* | | 41), GEAR BOX GM45610 GM45510,G45606,G45706 GM45710 NLS - USE 8722266 | 1 | .Gear | .Kugghjul | 4 |
| 0950 | | | | | | 1 | 1 | |
| 0960 | | | | | | | | |
| 0970 | 70 | *87 14 933* | | 42), GEAR BOX GM45610 GM45510,GM45710 NLS - USE 8722266 | 1 | .Gear | .Kugghjul | 4 |
| 0980 | | | | | | 1 | 1 | |
| 0990 | 70 | 87 22 266 | | GEAR BOX GM55602,GM55702 GM55600,GM55700 | 1 | .Gear | .Kugghjul | 4 |
| 1000 | | | | | | 1 | 1 | |
| 1010 | 71 | 87 14 925 | | | 1 | .Gear | .Kugghjul | 4 |
| 1020 | | | | | | R | R | |
| 1030 | 72 | 87 03 340 | | 0,3MM | X | .Shim | .Shim | 5 |
| 1040 | 72 | 87 03 357 | | 0,4MM | X | .Shim | .Shim | 5 |
| 1050 | 72 | 87 03 365 | | 0,5MM | X | .Shim | .Shim | 5 |
| 1060 | 73 | 87 02 359 | | | 1 | .Nut | .Mutter | 3 |
| 1070 | 74 | *83 41 034* | | -1986 NLS - USE 8729105 | 2 | .Roller bearing | .Rullager | 3 |
| 1080 | 74 | *87 25 194* | | 1987- NLS - USE 8729105 | 2 | .Roller bearing | .Rullager | 3 |
| 1090 | 75 | 87 03 530 | S | | 1 | .Sleeve | .Hylsa | 4 |
| 1100 | 76 | *83 41 752* | | 35), 0,10MM NLS - USE 8724569 | X | .Adjusting washer | .Justerbricka | 5 |
| 1110 | 76 | 87 24 569 | | 36), 0,10MM | X | .Adjusting washer | .Justerbricka | 5 |
| 1120 | 76 | *83 41 760* | | 35), 0,15MM NLS - USE 8724577 | X | .Adjusting washer | .Justerbricka | 5 |
| 1130 | 76 | 87 24 577 | | 36), 0,15MM | X | .Adjusting washer | .Justerbricka | 5 |
| 1140 | 76 | *83 41 778* | | 35), 0,30MM NLS - USE 8724585 | X | .Adjusting washer | .Justerbricka | 5 |
| 1150 | 76 | 87 24 585 | | 36), 0,30MM | X | .Adjusting washer | .Justerbricka | 5 |
| 1160 | 76 | 83 44 723 | | 35), 0,50MM | X | .Adjusting washer | .Justerbricka | 5 |
| 1170 | 76 | 87 24 593 | | 36), 0,50MM | X | .Adjusting washer | .Justerbricka | 5 |

35. Gear box --205264, --687132, --795916
36. Gear box 205265--, 687133--, 795917--
41. Gear box--208509, --806332, --932771
42. Gear box 208510--, 806333--, 932772--




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

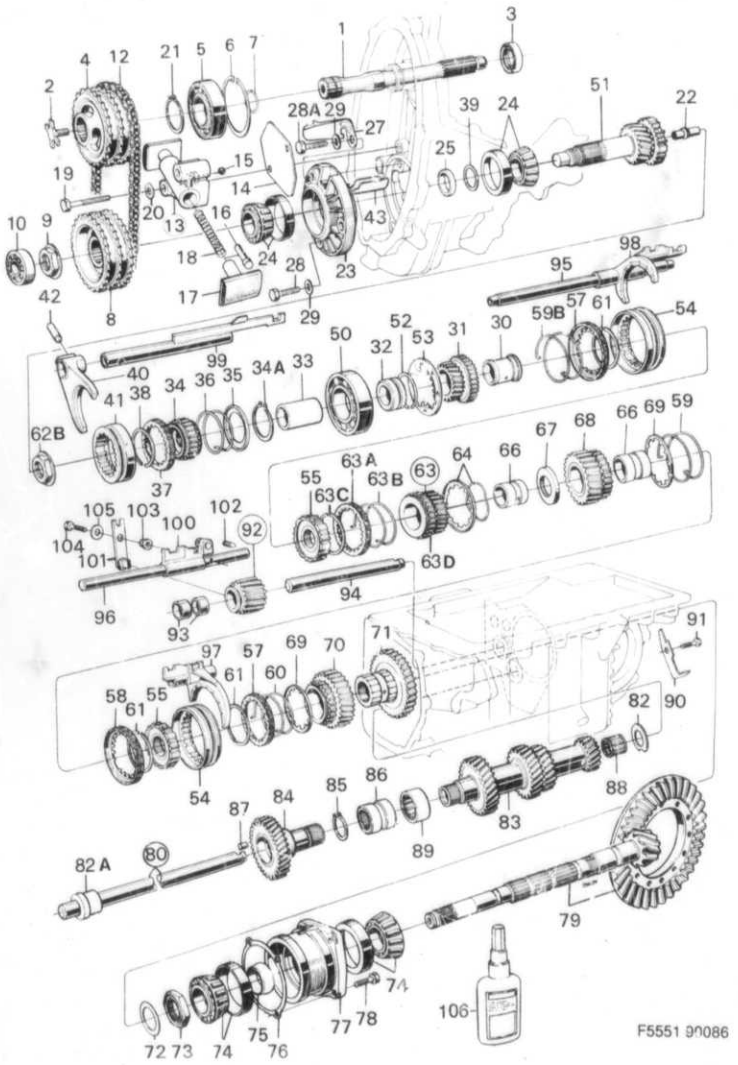


Gear box, 5-speed

# 3-I12

## *Shafts, gears*

*-1988*

Växellåda, 5-växlad

## *Axlar, kugghjul*

*-1988*

| 0330 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 1180 | 77 | 87 20 732 | | | 1 | .Bearing housing | .Lagerhus | 5 |
| 1190 | 78 | 87 18 942 | | | 4 | .Screw | .Skruv | 5 |
| 1200 | 79 | 87 15 765 | | | 1 | .Final drive | .Slutväxel | 5 |
| 1210 | 80 | 93 21 266 | | GEAR BOX GM45610,GM55602 GM55702,GM45510,G45606, GM55600,GM55700 See page 4-079, 3-K08 | 1 | .Countershaft | .Mellanaxel | 6 |
| 1220 | | | | | | | | |
| 1230 | | | | | | | | |
| 1240 | | | | | | | | |
| 1250 | 80 | 93 37 437 | | GEAR BOX GM45710,G45706 See page 4-079, 3-K08 | 1 | .Countershaft | .Mellanaxel | 6 |
| 1260 | | | | | | | | |
| 1270 | 82 | 87 12 887 | | | 1 | ..Thrust washer | ..Tryckbricka | 4 |
| 1280 | 82A | 87 18 645 | | | 1 | .Thrust washer | .Tryckbricka | 4 |
| 1290 | 83 | 87 18 637 | | | 1 | .Gear | .Kugghjul | 5 |
| 1300 | 84 | 87 18 629 | | | 1 | .Gear | .Kugghjul | 4 |
| 1310 | 85 | *80 47 813* | | NLS - USE 8728198 | 1 | .Retaining ring | .Spärring | 5 |
| 1320 | 86 | 87 12 655 | | | 1 | .Sleeve | .Hylsa | 4 |
| 1330 | 87 | 87 14 693 | | | 13 | .Roller | .Rulle | 4 |
| 1340 | 88 | 87 18 660 | | | 1 | .Needle bearing | .Nållager | 3 |
| 1350 | 89 | 87 12 853 | | | 1 | .Needle bearing | .Nållager | 4 |
| 1360 | 90 | 87 00 114 | | | 1 | .Lock plate | .Låsplatta | 3 |
| 1370 | 91 | 87 18 843 | | | 1 | .Screw | .Skruv | 5 |
| 1380 | 92 | 87 14 974 | | | 1 | .Gear R | .Kugghjul R | 4 |
| 1390 | | | | | | | | |
| 1400 | 93 | 87 15 229 | | | 2 | ..Bushing | ..Bussning | 3 |
| 1410 | 94 | 87 00 130 | | | 1 | .Shaft | .Axel | 6 |
| 1420 | 95 | 87 00 585 | | | 1 | .Shift rail | .Växelföraraxel | 6 |
| 1430 | 96 | 87 21 318 | | | 1 | .Shift rail R | .Växelföraraxel R | 6 |
| 1440 | | | | | | | | |
| 1450 | 97 | 87 13 091 | | | 1 | .Gear selector fork 1/2 | .Växelförargaffel 1/2 | 5 |
| 1460 | | | | | | | | |
| 1470 | 98 | 87 00 619 | | | 1 | .Gear selector fork 3/4 | .Växelförargaffel 3/4 | 5 |
| 1480 | | | | | | | | |
| 1490 | 99 | 87 13 638 | | | 1 | .Gear selector fork 5 | .Växelförargaffel 5 | 5 |
| 1500 | | | | | | | | |
| 1510 | 100 | 87 12 929 | | | 1 | .Gear selector fork R | .Växelförargaffel R | 5 |
| 1520 | | | | | | | | |
| 1530 | 101 | 87 02 045 | | | 1 | .Lever | .Hävarm | |
| 1540 | 102 | 81 17 715 | | | 1 | .Roll pin | .Spännstift | 5 |
| 1550 | 103 | 87 13 000 | | | 1 | .Bearing sleeve | .Lagerhylsa | 4 |
| 1560 | 104 | 87 15 062 | | | 1 | .Screw | .Skruv | 5 |
| 1570 | 105 | 80 29 969 | | | 1 | .Washer | .Bricka | 5 |
| 1580 | 106 | 74 96 268 | | 50 ML | X | Nut lock normal blue | Gängsäkring normal blå | 5 |
| 1590 | | | | | | | | |
| 1600 | | | | | | | | |
| 1610 | 106 | 74 96 276 | | 50 ML | X | Nut lock strong green | Gängsäkring stark grön | 5 |
| 1620 | | | | | | | | |
| 1630 | | | | | | | | |
| 1640 | | | | | | | | |
| 1650 | | 87 80 454 | | See page 4-083, 3-K12 | X | Pinion bearing kit | Pinjonglagersats | 5 |




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

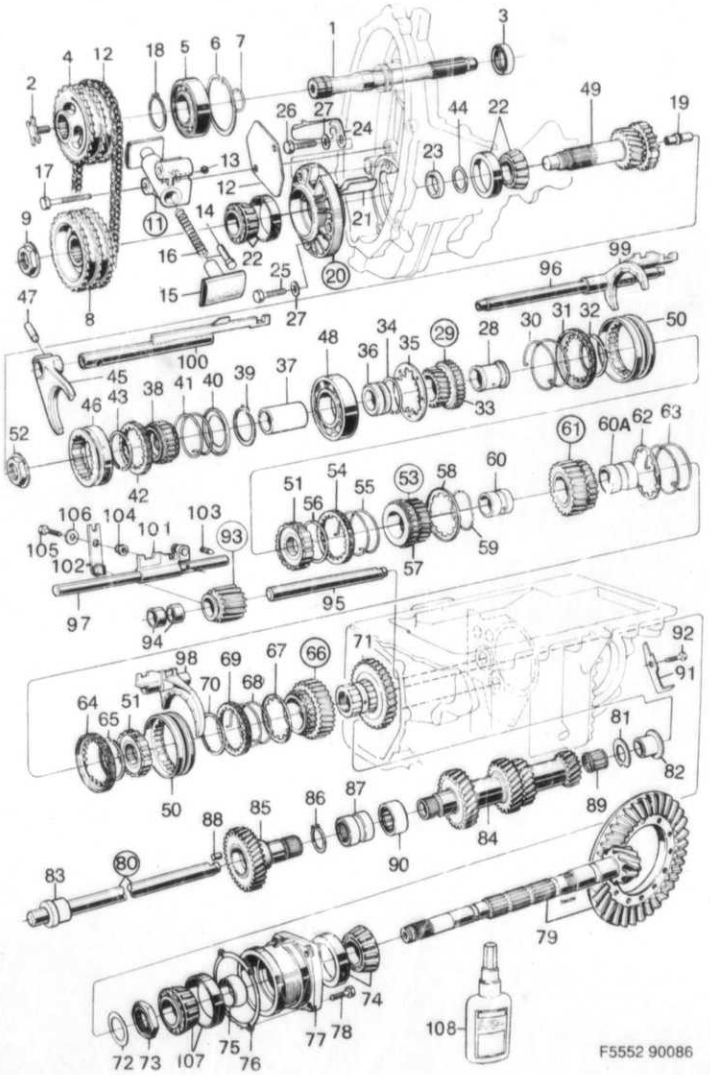


| 0340 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | See page 4-009, 3-H10 | | Gear box, manual | Växellåda, manuell | |
| 0020 | 1 | 87 11 350 | | | 1 | .Clutch shaft | .Lamellaxel | 3 |
| 0030 | 2 | 87 11 038 | | | 1 | .Screw | .Skruv | 3 |
| 0040 | 3 | 87 10 881 | | | 1 | .Seal | .Tätning | 2 |
| 0050 | 4 | 87 11 343 | | 31 COGS,GEAR BOX GM45612 | 1 | .Chain link | .Kedjelänk | 5 |
| 0060 | 4 | *87 13 190* | | 68), 32 COGS, GM 45712 | 1 | .Chain gear | .Kedjehjul | 5 |
| 0070 | | | | GM 55704 NLS - USE | | | | |
| 0070 | | | | 8728594 | | | | |
| 0080 | 4 | 87 28 594 | | 69), 32 COGS, GM 45712 | 1 | .Chain gear | .Kedjehjul | 5 |
| 0090 | | | | GM 55704 | | | | |
| 0100 | 4 | 87 26 010 | | 33 COGS,GEAR BOX GM55804 | 1 | .Chain link | .Kedjelänk | 5 |
| 0110 | 5 | 87 10 865 | | | 1 | .Roller bearing | .Rullager | |
| 0120 | 6 | 87 11 376 | | | 1 | .Retaining ring | .Spårring | 4 |
| 0130 | 7 | 87 04 777 | | | 1 | .Lock ring | .Låsring | 3 |
| 0140 | 8 | 87 15 831 | | 26 COGS,GEAR BOX GM45612 | 1 | .Chain gear | .Kedjehjul | 5 |
| 0150 | 8 | *87 13 208* | | 68), 25 COGS, GM 45712 | 1 | .Chain gear | .Kedjehjul | 5 |
| 0160 | | | | GM 55704 NLS - USE | | | | |
| 0160 | | | | 8728602 | | | | |
| 0170 | 8 | 87 28 602 | | 69), 25 COGS, GM 45712 | 1 | .Chain gear | .Kedjenjul | 5 |
| 0180 | | | | GM55704 | | | | |
| 0190 | 8 | *87 26 028* | | 68), 24 COGS, GM 55804 | 1 | .Chain gear | .Kedjehjul | 5 |
| 0190 | | | | NLS - USE 8728586 | | | | |
| 0200 | 8 | 87 28 586 | | 69), 24 COGS, GM 55804 | 1 | .Chain gear | .Kedjehjul | 5 |
| 0210 | 9 | 87 12 770 | | | 1 | .Nut | .Mutter | 5 |
| 0220 | 10 | 87 11 590 | | | 3 | .Chain | .Kedja | 5 |
| 0230 | 11 | 87 13 570 | | | 1 | .Chain tensioner | .Kedjesträckare | 5 |
| 0240 | 12 | 87 13 513 | | | 1 | ..Plate | ..Platta | 4 |
| 0250 | 13 | 87 13 554 | | | 1 | ..Ball | ..Kula | |
| 0260 | 14 | 87 13 539 | | | 1 | ..Plug | ..Plugg | 3 |
| 0270 | 15 | 87 13 497 | | | 2 | ..Tightener shoe | ..Sträckarsko | 5 |
| 0280 | 16 | 87 13 521 | | | 2 | ..Spring | ..Fjäder | 5 |
| 0290 | 17 | 87 22 555 | | | 2 | ..Screw | ..Skruv | 5 |
| 0300 | 18 | 80 47 839 | | | 1 | .Retaining ring | .Spårring | 5 |
| 0310 | 19 | 87 13 158 | | | 1 | .Tube | .Rör | 6 |
| 0320 | 20 | 87 26 523 | | | 1 | .Bearing housing | .Lagerhus | 6 |
| 0330 | 21 | 87 13 596 | | | 1 | ..Oil collector | ..Oljeskopa | 5 |
| 0340 | 22 | 87 12 838 | | | 2 | .Roller bearing | .Rullager | 3 |
| 0350 | 23 | 87 26 184 | | 5,28MM | X | .Spacer ring | .Distansring | 5 |
| 0360 | 23 | 87 26 192 | | 5,29MM | X | .Spacer ring | .Distansring | 5 |
| 0370 | 23 | 87 26 200 | | 5,30MM | X | .Spacer ring | .Distansring | 5 |
| 0380 | 23 | 87 26 218 | | 5,31MM | X | .Spacer ring | .Distansring | 5 |
| 0390 | 24 | 87 13 588 | | | 1 | .Oil collector | .Oljeskopa | 5 |
| 0400 | 25 | 80 83 933 | | | 2 | .Screw | .Skruv | 5 |
| 0410 | 26 | 87 19 320 | | | 1 | .Screw | .Skruv | 5 |
| 0420 | 27 | 80 29 985 | | | 2 | .Washer | .Bricka | 5 |
| 0430 | 28 | 87 13 026 | | | 1 | .Bearing bushing | .Lagerbussning | 4 |
| 0440 | 29 | 87 26 580 | | | 1 | .Gear | .Kugghjul | 4 |
| 0450 | | | | | | 4 | 4 | |
| 0460 | 30 | 87 00 429 | | | 1 | ..Locking spring | ..Spärrfjäder | 4 |
| 0470 | 31 | 87 19 924 | | | 1 | ..Ring | ..Ring | 3 |
| 0480 | 32 | 87 04 942 | | | 1 | ..Retaining ring | ..Spårring | 4 |
| 0490 | 33 | 87 26 598 | | | 1 | ..Gear | ..Kugghjul | 4 |
| 0500 | | | | | | 4 | 4 | |
| 0510 | 34 | 87 26 325 | | | 1 | ...Lock ring | ...Låsring | 4 |
| 0520 | 35 | 87 26 150 | | | 1 | ...Guide ring | ...Styrring | 4 |
| 0530 | 36 | 87 12 762 | | | 1 | .Spacer bushing | .Distansbussning | |
| 0540 | 37 | 87 13 406 | | | 1 | .Spacer sleeve | .Distanshylsa | 4 |
| 0550 | 38 | 87 18 389 | | | 1 | .Clutch hub | .Kopplingsnav | |
| 0560 | 39 | 80 47 854 | | | 1 | ..Retaining ring | ..Spårring | 5 |

68. Gear box --A140973, --B122992.
69. Gear box A140974-, B122993-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

4 GROUP INDEX

| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

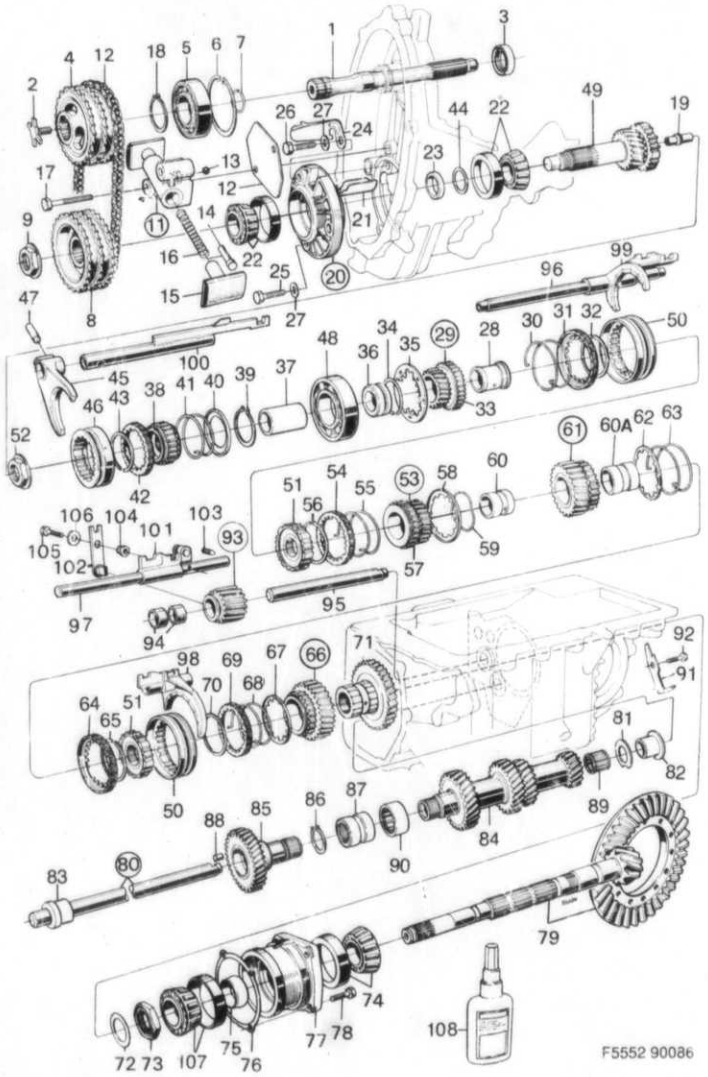


| 0340 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0570 | 40 | 87 12 598 | | | 1 | .Guide ring | .Styrring | 4 |
| 0580 | | | | | | 5 | 5 | |
| 0590 | 41 | 87 15 005 | | | 1 | .Locking spring | .Spärrfjäder | 4 |
| 0600 | | | | | | 5 | 5 | |
| 0610 | 42 | 93 44 772 | | | 1 | .Synchromesh | .Synkronisering | |
| 0620 | 43 | 87 12 606 | | | 1 | .Lock ring | .Låsring | 5 |
| 0630 | 44 | 87 12 994 | | 0,20MM | X | .Adjusting washer | .Justerbricka | 5 |
| 0640 | 44 | 87 13 448 | | 0,25MM | X | .Adjusting washer | .Justerbricka | 5 |
| 0650 | 44 | 87 13 455 | | 0,30MM | X | .Adjusting washer | .Justerbricka | 5 |
| 0660 | 45 | 87 21 839 | | | 1 | .Gear selector fork | .Växelförargaffel | 5 |
| 0670 | 46 | 87 12 580 | | | 1 | .Sleeve | .Muff | 5 |
| 0680 | 47 | 80 34 985 | | | 1 | .Pin | .Pinne | 5 |
| 0690 | 48 | 87 00 767 | | | 1 | .Ball bearing | .Kullager | 3 |
| 0700 | 49 | 87 26 341 | | | 1 | .Shaft | .Axel | 6 |
| 0710 | 50 | 87 20 419 | | | 2 | .Sleeve | .Muff | 5 |
| 0720 | 51 | 87 12 150 | | | 2 | .Synchromesh | .Synkronisering | 5 |
| 0730 | 52 | 87 18 371 | | | 1 | .Nut | .Mutter | 5 |
| 0740 | 53 | 87 26 564 | | | 1 | .Gear | .Kugghjul | 4 |
| 0750 | | | | | | 3 | 3 | |
| 0760 | 54 | 87 19 916 | | | 1 | ..Ring | ..Ring | 3 |
| 0770 | 55 | 87 00 429 | | | 1 | ..Locking spring | ..Spärrfjäder | 4 |
| 0780 | 56 | 87 04 942 | | | 1 | ..Retaining ring | ..Spårring | 4 |
| 0790 | 57 | 87 26 572 | | | 1 | ..Gear | ..Kugghjul | 4 |
| 0800 | | | | | | 3 | 3 | |
| 0810 | 58 | 87 26 143 | | | 1 | ...Guide ring | ...Styrring | 4 |
| 0820 | 59 | 87 26 317 | | | 1 | ...Lock ring | ...Låsring | 4 |
| 0830 | 60 | 87 26 739 | | | 1 | .Bearing bushing | .Lagerbussning | 4 |
| 0840 | 60A | 87 00 205 | | | 1 | .Bearing bushing | .Lagerbussning | 4 |
| 0350 | 61 | 87 26 556 | | | 1 | .Gear | .Kugghjul | 4 |
| 0860 | | | | | | 2 | 2 | |
| 0870 | 62 | 87 00 361 | | | 1 | ..Guide ring | ..Styrring | 4 |
| 0880 | 63 | 87 15 120 | | | 1 | ..Locking spring | ..Spärrfjäder | 6 |
| 0890 | 64 | 87 19 916 | | | 1 | ..Ring | ..Ring | 3 |
| 0900 | 65 | 87 04 942 | | | 1 | ..Retaining ring | ..Spårring | 4 |
| 0910 | 66 | 87 26 549 | | | 1 | .Gear | .Kugghjul | 4 |
| 0920 | | | | | | 1 | 1 | |
| 0930 | 67 | 87 00 361 | | | 1 | ..Guide ring | ..Styrring | 4 |
| 0940 | 68 | 87 11 103 | | | 1 | ..Locking spring | ..Spärrfjäder | 6 |
| 0950 | 69 | 87 19 924 | | | 1 | ..Ring | ..Ring | 3 |
| 0960 | 70 | 87 04 942 | | | 1 | ..Retaining ring | ..Spårring | 4 |
| 0970 | 71 | 87 26 093 | | | 1 | .Gear | .Kugghjul | 4 |
| 0980 | | | | | | R | R | |
| 0990 | 72 | 87 03 340 | | 0,3MM | X | .Shim | .Shim | 5 |
| 1000 | 72 | 87 03 357 | | 0,4MM | X | .Shim | .Shim | 5 |
| 1010 | 72 | 87 03 365 | | 0,5MM | X | .Shim | .Shim | 5 |
| 1020 | 73 | 87 02 359 | | | 1 | .Nut | .Mutter | 3 |
| 1030 | 74 | 87 27 422 | | NLS - USE 8729113 | 1 | .Roller bearing | .Rullager | 3 |
| 1040 | 75 | 87 26 168 | S | | 1 | .Sleeve | .Hylsa | 4 |
| 1050 | 76 | 87 26 259 | | 0,10MM | X | .Adjusting washer | .Justerbricka | 5 |
| 1060 | 76 | 87 26 267 | | 0,15MM | X | .Adjusting washer | .Justerbricka | 5 |
| 1070 | 76 | 87 26 275 | | 0,30MM | X | .Adjusting washer | .Justerbricka | 5 |
| 1080 | 76 | 87 26 283 | | 0,50MM | X | .Adjusting washer | .Justerbricka | 5 |
| 1090 | 77 | 87 26 721 | | | 1 | .Bearing housing | .Lagerhus | 5 |
| 1100 | 78 | 87 22 555 | | 52) | 4 | .Screw | .Skruv | 5 |
| 1110 | 78 | 87 27 505 | | 53) | 4 | .Screw | .Skruv | 5 |
| 1120 | 79 | 87 26 531 | | | 1 | .Final drive | .Slutväxel | 5 |
| 1130 | 80 | 87 26 333 | | | 1 | .Shaft | .Axel | 6 |
| 1140 | 81 | 87 26 077 | | | 1 | .Thrust washer | .Tryckbricka | 4 |
| 1150 | 82 | 87 26 085 | | | 1 | .Inner race | .Innerbana | 3 |
| 1160 | 83 | 87 26 051 | | | 1 | .Inner race | .Innerbana | 4 |

52. Gear box --A110625, --B108818.
53. Gear box A110626--, B108819--.
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

4 GROUP INDEX

| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

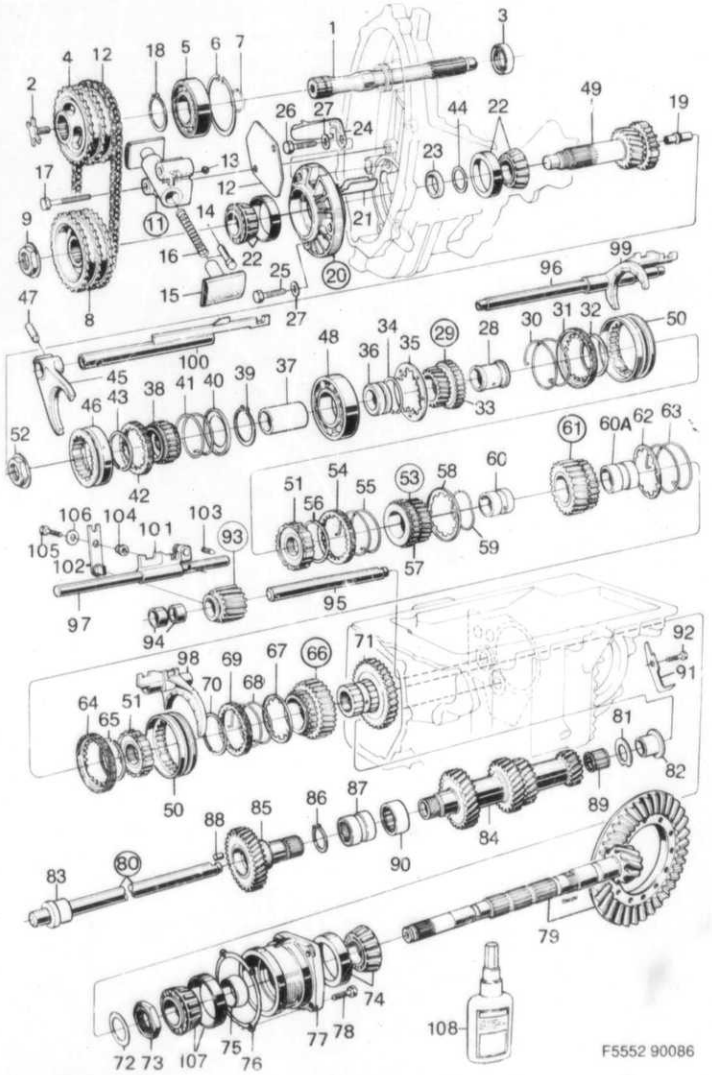


| 0340 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 1170 | 84 | 87 26 069 | | | 1 | .Gear | .Kugghjul | 5 |
| 1180 | 85 | 87 25 137 | | | 1 | .Gear | .Kugghjul | 4 |
| 1190 | 86 | *80 47 813* | | 60) NLS - USE 8728198 | 1 | .Retaining ring | .Spärring | 5 |
| 1200 | 86 | 87 28 198 | | 61) | 1 | .Retaining ring | .Spärring | 5 |
| 1210 | 87 | 87 12 655 | | | 1 | .Sleeve | .Hylsa | 4 |
| 1220 | 88 | 87 14 693 | | | 15 | .Roller | .Rulle | 4 |
| 1230 | 89 | 87 26 887 | | | 1 | .Needle bearing | .Nållager | 3 |
| 1240 | 90 | 87 12 853 | | | 1 | .Needle bearing | .Nållager | 4 |
| 1250 | 91 | 87 00 114 | | | 1 | .Lock plate | .Låsplatta | 3 |
| 1260 | 92 | 87 18 843 | | | 1 | .Screw | .Skruv | 5 |
| 1270 | 93 | 87 04 348 | | | 1 | .Gear | .Kugghjul | 4 |
| 1280 | | | | | | R | R | |
| 1290 | 94 | 87 15 229 | | | 2 | ..Bushing | ..Bussning | 3 |
| 1300 | 95 | 87 00 130 | | | 1 | .Shaft | .Axel | 6 |
| 1310 | 96 | 87 00 585 | | | 1 | .Shift rail | .Växelföraraxel | 6 |
| 1320 | 97 | 87 21 318 | | | 1 | .Shift rail | .Växelföraraxel | 6 |
| 1330 | | | | | | R | R | |
| 1340 | 98 | 87 13 091 | | | 1 | .Gear selector fork | .Växelförargaffel | 5 |
| 1350 | | | | | | 1/2 | 1/2 | |
| 1360 | 99 | 87 00 619 | | | 1 | .Gear selector fork | .Växelförargaffel | 5 |
| 1370 | | | | | | 3/4 | 3/4 | |
| 1380 | 100 | 87 13 638 | | | 1 | .Gear selector fork | .Växelförargaffel | 5 |
| 1390 | | | | | | 5 | 5 | |
| 1400 | 101 | 87 12 929 | | | 1 | .Gear selector fork | .Växelförargaffel | 5 |
| 1410 | | | | | | R | R | |
| 1420 | 102 | 87 02 045 | | | 1 | .Lever | .Hävarm | |
| 1430 | 103 | 81 17 715 | | | 1 | .Roll pin | .Spännstift | 5 |
| 1440 | 104 | 87 13 000 | | | 1 | .Bearing sleeve | .Lagerhylsa | 4 |
| 1450 | 105 | 87 15 062 | | | 1 | .Screw | .Skruv | 5 |
| 1460 | 106 | 80 29 969 | | | 1 | .Washer | .Bricka | 5 |
| 1470 | 107 | *87 25 194* | | NLS - USE 8729105 | 1 | .Roller bearing | .Rullager | 3 |
| 1480 | 108 | 74 96 268 | | 50 ML | X | Nut lock | Gängsäkring | 5 |
| 1490 | | | | | | normal | normal | |
| 1500 | | | | | | blue | blå | |
| 1510 | 108 | 74 96 276 | | 50 ML | X | Nut lock | Gängsäkring | 5 |
| 1520 | | | | | | strong | stark | |
| 1530 | | | | | | green | grön | |

60. Gear box --A145733, --B127709.
61. Gear box A145734--, B127710--.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 3-120

## Differential

## Differential

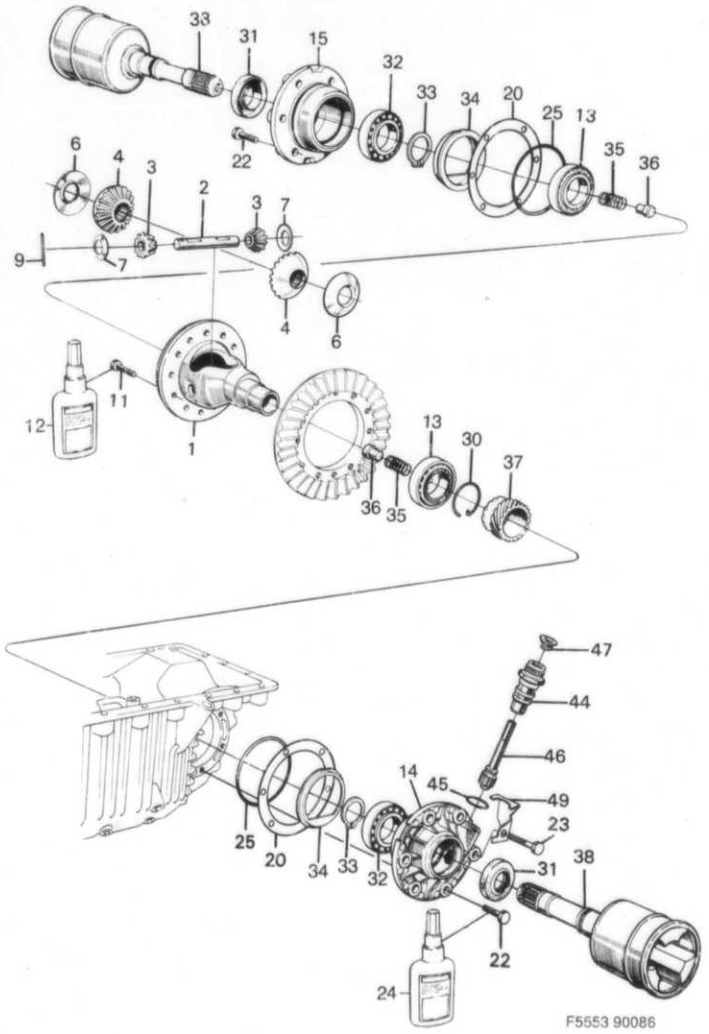


| 0350 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | See page 4-009, 3-H10 | | Gear box, manual | Växellåda, manuell | |
| 0020 | 1 | 87 19 890 | | | 1 | .Differential housing | .Differentialhus | 5 |
| 0030 | 2 | 87 19 940 | | | 1 | .Differential shaft | .Differentialaxel | 5 |
| 0040 | 3 | *87 23 173* | | 31), 4-SPEED NLS - USE 8729386, 8729394 | 2 | .Differential pinion | .Differentialdrev | 4 |
| 0050 | 3 | *87 19 858* | | 32), 4-SPEED NLS - USE 8729394 | 2 | .Differential pinion | .Differentialdrev | 4 |
| 0060 | 3 | *87 19 858* | | 5-SPEED NLS - USE 8729394 | 2 | .Differential pinion | .Differentialdrev | 4 |
| 0070 | 4 | *87 23 165* | | 31), 4-SPEED NLS - USE 8729386, 8729394 | 2 | .Differential side gear | .Differentialhjul | 4 |
| 0080 | 4 | 87 19 866 | | 32), 4-SPEED | 2 | .Differential side gear | .Differentialhjul | 4 |
| 0090 | 4 | 37 19 866 | | 5-SPEED | 2 | .Differential side gear | .Differentialhjul | 4 |
| 0100 | 6 | 87 19 882 | | | 2 | .Washer | .Bricka | 3 |
| 0110 | 7 | *87 19 874* | | NLS - USE 8731788 | 2 | .Washer | .Bricka | 3 |
| 0120 | 9 | 80 49 702 | | | 1 | .Cotter pin | .Fjäderpinne | 5 |
| 0130 | 11 | 87 18 140 | | | 12 | .Screw | .Skruv | 5 |
| 0135 | 12 | 74 96 268 | | 50 ML | X | .Nut lock normal | .Gängsäkring normal | 5 |
| 0136 | | | | | | blue | blå | |
| 0137 | | | | | 12 | | | |
| 0140 | 13 | *87 08 836* | | NLS - USE 8704389 | 2 | .Pinion bearing | .Pinjonglager | 3 |
| 0150 | 14 | 87 11 160 | | LH | 1 | .Bearing seat | .Lagersäte | 5 |
| 0160 | 15 | 87 04 280 | | RH | 1 | .Bearing seat | .Lagersäte | 5 |
| 0170 | 20 | 83 41 604 | S | 0,10MM | X | .Shim | .Shim | 5 |
| 0180 | 20 | 83 41 612 | S | 0,15MM | X | .Shim | .Shim | 5 |
| 0190 | 20 | 83 41 620 | S | 0,30MM | X | .Shim | .Shim | 5 |
| 0200 | 20 | 83 41 638 | S | 0,50MM | X | .Shim | .Shim | 5 |
| 0210 | 22 | 80 83 941 | | | 11 | .Screw | .Skruv | 5 |
| 0220 | 23 | 80 83 974 | | | 1 | .Screw | .Skruv | 5 |
| 0221 | 24 | 74 96 284 | | 50 ML | X | .Hydraulic sealant | .Gängtätning | 5 |
| 0230 | 25 | *83 42 701* | S | 64) NLS - USE 8728156 | 2 | .O-ring | .O-ring | 2 |
| 0240 | 25 | 87 28 156 | S | 65) | 2 | .O-ring | .O-ring | 2 |
| 0250 | 30 | 87 04 421 | | | 2 | .Stop ring | .Stoppring | 5 |
| 0260 | 31 | *87 04 298* | | NLS - USE 8731804 | 2 | .Sealing collar | .Tätningskrage | 5 |
| 0270 | 32 | 87 04 306 | | | 2 | .Ball bearing | .Kullager | 3 |
| 0280 | 33 | *80 47 813* | | 60) NLS - USE 8728198 | 2 | .Retaining ring | .Spårring | 5 |
| 0290 | 33 | 87 28 198 | | 61) | 2 | .Retaining ring | .Spårring | 5 |
| 0300 | 34 | 87 10 360 | | | 1 | .Washer | .Bricka | 5 |
| 0310 | 35 | 87 04 314 | | | 2 | .Spring | .Fjäder | 4 |
| 0320 | 36 | 87 04 322 | | | 2 | .Plunger | .Plunge | 5 |
| 0330 | 37 | 87 04 413 | | | 1 | .Drive gear | .Drev | 5 |
| 0340 | 38 | 87 04 264 | | GEAR BOX GM 34506, GM 34508,G 45606,G 45706 | 2 | .Companion flange | .Medbringare | |
| 0350 | | | | | | | | |
| 0360 | 38 | 87 22 472 | | GEAR BOX GM55600,GM55700 | 2 | .Companion flange | .Medbringare | 3 |
| 0370 | | | | G45610,G45710,GM55602 | | | | |
| 0380 | | | | GM55702,GM45610,GM45710 | | | | |
| 0390 | | | | GM45510,GM45612,GM45712 | | | | |
| 0400 | | | | GM55704,GM55804 | | | | |
| 0410 | 44 | *87 13 034* | | 25) NLS - USE 8724866 | 1 | .Sleeve | .Hylsa | 5 |
| 0420 | 44 | 87 24 866 | | 26) | 1 | .Sleeve | .Hylsa | 5 |
| 0430 | 45 | 87 11 707 | | | 1 | .O-ring | .O-ring | 5 |
| 0440 | 46 | 87 23 900 | | | 1 | .Gear | .Kugghjul | 5 |
| 0450 | 47 | 87 13 463 | | 25) | 1 | .Seal | .Tätning | 4 |
| 0460 | 47 | 87 24 874 | | 26) | 1 | .Seal | .Tätning | 4 |
| 0470 | 49 | 87 11 723 | | | 1 | .Lock plate | .Låsplåt | 6 |

25. Gear box --206501, --694219, --909366
26. Gear box 206502--, 694220--, 909367--
31. Gear box --207256
32. Gear box 207257--
60. Gear box --A145733, --B127709.
61. Gear box A145734--, B127710--.
64. Gear box --A132928, --B116499.
65. Gear box A132929--, B116500--.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 3-I22

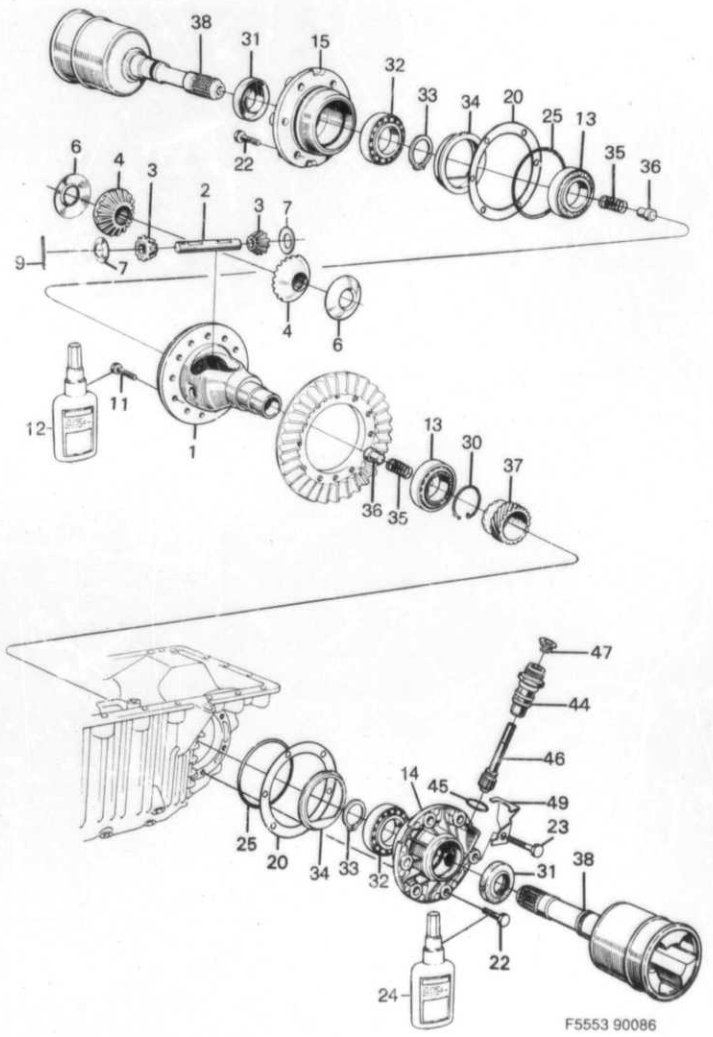


| 0350 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0480 | | | | | | | | |
| 0490 | | 74 96 003 | | See page 4-085, 3-K14 | 1 | Gasket kit | Packningsats | 5 |


**MASTER INDEX**

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

**4 GROUP INDEX**

| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 3-I24

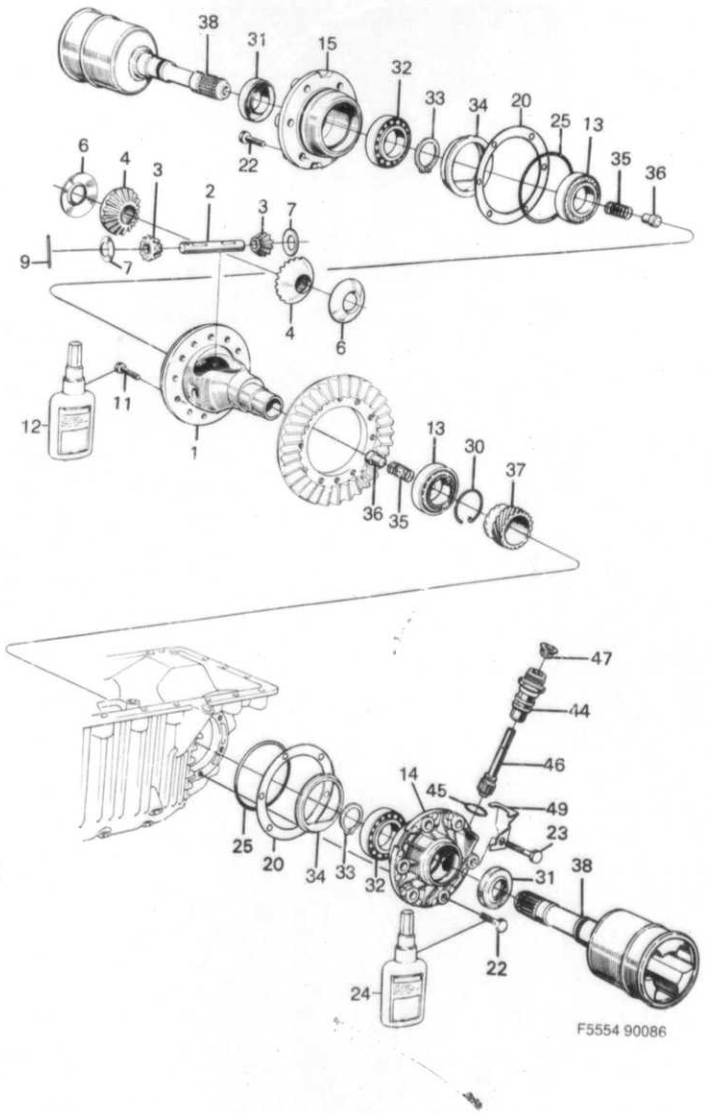


| 0390 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | See page 4-055, 3-J08 | | Gear box, automatic | Växellåda, automatisk | |
| 0020 | 1 | 87 19 890 | | | 1 | .Differential housing | .Differentialhus | 5 |
| 0030 | 2 | 87 19 940 | | | 1 | .Differential shaft | .Differentialaxel | 5 |
| 0040 | 3 | *87 23 173* | | 29) NLS - USE 8729386, 8729394 | 2 | .Differential pinion | .Differentialdrev | 4 |
| 0050 | 3 | *87 19 858* | | 30) NLS - USE 8729394 | 2 | .Differential pinion | .Differentialdrev | 4 |
| 0060 | 4 | *87 23 165* | | 29) NLS - USE 8729386, 8729394 | 2 | .Differential side gear | .Differentialhjul | 4 |
| 0070 | 4 | 87 19 866 | | 30) | 2 | .Differential side gear | .Differentialhjul | 4 |
| 0080 | 6 | 87 19 882 | | | 2 | .Washer | .Bricka | 3 |
| 0090 | 7 | *87 19 874* | | NLS - USE 8731788 | 2 | .Washer | .Bricka | 3 |
| 0100 | 9 | 80 49 702 | | | 1 | .Cotter pin | .Fjäderpinne | 5 |
| 0110 | 11 | 87 18 140 | | | 12 | .Screw | .Skruv | 5 |
| 0120 | 12 | 74 96 268 | | 50 ML | X | .Nut lock normal blue | .Gängsäkring normal blå | 5 |
| 0130 | | | | | | | | |
| 0140 | | | | | | | | |
| 0150 | 13 | *87 08 836* | | NLS - USE 8704389 | 2 | .Pinion bearing | .Pinjonglager | 3 |
| 0160 | 14 | 87 11 160 | | LH | 1 | .Bearing seat | .Lagersäte | 5 |
| 0170 | 15 | 87 04 280 | | RH | 1 | .Bearing seat | .Lagersäte | 5 |
| 0180 | 20 | 83 41 604 | S | 0,10MM | X | .Shim | .Shim | 5 |
| 0190 | 20 | 83 41 612 | S | 0,15MM | X | .Shim | .Shim | 5 |
| 0200 | 20 | 83 41 620 | S | 0,30MM | X | .Shim | .Shim | 5 |
| 0210 | 20 | 83 41 638 | S | 0,50MM | X | .Shim | .Shim | 5 |
| 0220 | 22 | 80 83 941 | | | 11 | .Screw | .Skruv | 5 |
| 0230 | 23 | 80 83 974 | | | 1 | .Screw | .Skruv | 5 |
| 0240 | 24 | 71 96 284 | | 50 ML | X | .Hydraulic sealant | .Gängtätning | 5 |
| 0250 | 25 | *83 42 701* | S | 64) NLS - USE 8728156 | 2 | .O-ring | .O-ring | 2 |
| 0260 | 25 | *87 28 156* | S | 65) | 2 | .O-ring | .O-ring | 2 |
| 0270 | 30 | 87 04 421 | | | 1 | .Stop ring | .Stoppring | 5 |
| 0280 | 31 | *87 04 298* | | NLS - USE 8731804 | 2 | .Sealing collar | .Tätningskrage | 5 |
| 0290 | 32 | 87 04 306 | | | 2 | .Ball bearing | .Kullager | 3 |
| 0300 | 33 | *79 15 200* | | NLS - USE 8728198 | 2 | .Lock ring | .Låsring | 5 |
| 0310 | 34 | 87 10 360 | | | 1 | .Washer | .Bricka | 5 |
| 0320 | 35 | 87 04 314 | | | 2 | .Spring | .Fjäder | 4 |
| 0330 | 36 | 87 04 322 | | | 2 | .Plunger | .Plunge | 5 |
| 0340 | 37 | 87 04 413 | | | 1 | .Drive gear | .Drev | 5 |
| 0350 | 38 | 87 22 472 | | | 2 | .Companion flange | .Medbringare | 3 |
| 0360 | 44 | *87 13 034* | | 29) NLS - USE 8724866 | 1 | .Sleeve | .Hylsa | 5 |
| 0370 | 44 | 87 24 866 | | 30) | 1 | .Sleeve | .Hylsa | 5 |
| 0380 | 45 | 87 11 707 | | | 1 | .O-ring | .O-ring | 5 |
| 0390 | 46 | 87 23 900 | | | 1 | .Gear | .Kugghjul | 5 |
| 0400 | 47 | 87 13 463 | | 29) | 1 | .Seal | .Tätning | 4 |
| 0410 | 47 | 87 24 874 | | 30) | 1 | .Seal | .Tätning | 4 |
| 0420 | 49 | 87 11 723 | | | 1 | .Lock plate | .Låsplåt | 6 |

29. Gear box --34165
30. Gear box 34166--
64. Gear box --A132928, --B116499.
65. Gear box A132929--, B116500--.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

4 GROUP INDEX

| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 3-J02

## *Gear shift lever*
## *Växelspak*

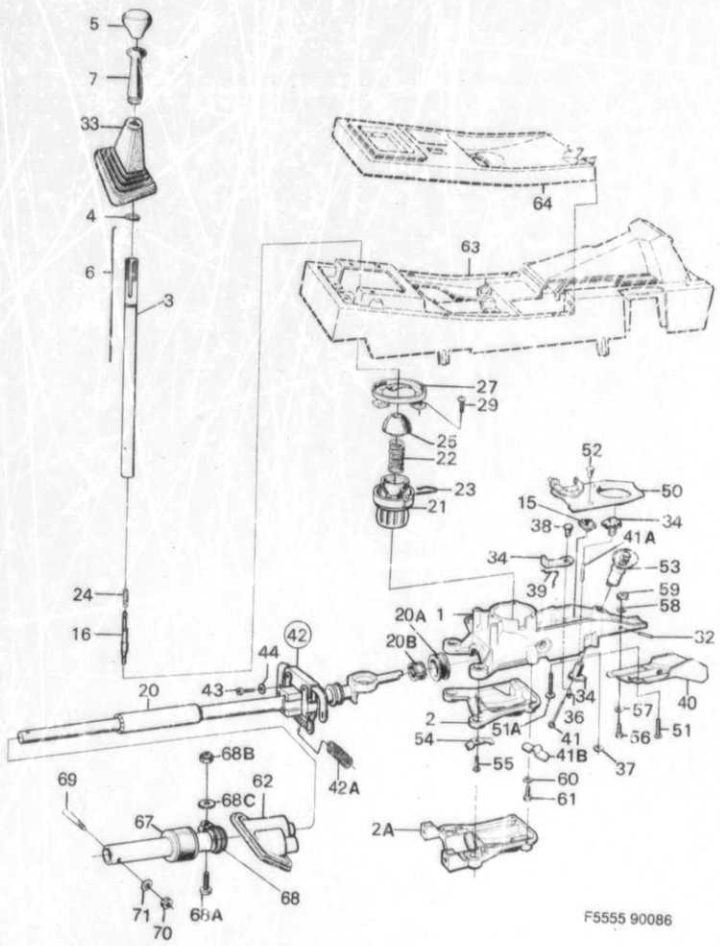


| 0400 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 93 47 816 | | UPPER | 1 | Gear shift housing | Växelspakshus | 5 |
| 0020 | 2 | 93 48 616 | | LOWER | 1 | Gear shift housing | Växelspakshus | 5 |
| 0030 | 2A | 75 40 727 | | LOWER, 5-SPEED | 1 | Gear shift housing | Växelspakshus | 5 |
| 0040 | 3 | 93 48 541 | | | 1 | Gear lever | Växelspak | |
| 0050 | 4 | 79 51 379 | | | 1 | Retaining ring | Spårring | 5 |
| 0060 | 5 | 93 67 046 | | | 1 | Knob | Knopp | 5 |
| 0070 | 5 | 75 44 828 | | 5-SPEED | 1 | Knob | Knopp | |
| 0080 | 6 | 83 33 197 | | | 1 | Release rod | Spärrstång | 3 |
| 0090 | 7 | 93 31 539 | | | 1 | Companion flange | Medbringare | 5 |
| 0095 | 15 | | | See page 3A-071, 2-C24 | | Contact | Kontakt | |
| 0100 | 16 | 93 48 558 | | | -1 | Catch pin | Spärrtopp | 4 |
| 0110 | 20 | 75 43 176 | | | 1 | Gear rod | Växelstång | 5 |
| 0120 | 20 | 75 43 184 | | 3), 5-SPEED | 1 | Gear rod | Växelstång | 5 |
| 0130 | 20 | 75 47 334 | | 4), 5-SPEED | 1 | Gear rod | Växelstång | 5 |
| 0140 | 20A | 83 75 156 | | | 1 | . Bushing | . Bussning | 5 |
| 0150 | 20B | 83 73 078 | | | 1 | . Plastic bushing | . Plastbussning | 5 |
| 0160 | 21 | 93 48 665 | | | 1 | Companion flange | Medbringare | 3 |
| 0170 | 22 | 93 26 380 | | | 1 | Spring | Fjäder | 5 |
| 0180 | 23 | 83 75 024 | | | 1 | Pin | Sprint | 5 |
| 0190 | 24 | 87 01 385 | | | 1 | Spring | Fjäder | 5 |
| 0200 | 25 | 83 75 990 | | | 1 | Bearing shell | Lagerskål | 5 |
| 0210 | 27 | 93 49 408 | | | 1 | Bearing shell | Lagerskål | 5 |
| 0220 | 29 | *94 61 096* | | 3) NLS - USE 9835737 | 3 | Screw | Skruv | 5 |
| 0230 | 29 | 98 35 737 | | 4) | 3 | Screw | Skruv | 5 |
| 0240 | 32 | 83 74 555 | | | 1 | Plug | Propp | 5 |
| 0250 | 33 | 93 44 300 | | | 1 | Gaiter | Damask | 5 |
| 0260 | 33 | 93 98 215 | | 1988- CV | 1 | Gaiter | Damask | 6 |
| 0270 | 34 | 93 37 445 | | See page 4-079, 3-K08 | 1 | Gear | Kuggdrev | 5 |
| 0280 | 35 | 93 42 734 | | US, CA, JP | 1 | Pin | Tapp | 5 |
| 0290 | 36 | 79 51 353 | | | 2 | Lock ring | Låsring | 5 |
| 0300 | 37 | 80 29 985 | | | 1 | Washer | Bricka | 5 |
| 0310 | 38 | *83 78 275* | | NLS - USE 9320987 | 1 | Pin | Tapp | 5 |
| 0320 | 39 | 75 42 913 | | | 1 | Spring | Fjäder | 3 |
| 0330 | 40 | 93 42 338 | | | 1 | Stay | Stag | 3 |
| 0340 | 41 | 93 42 353 | | US, CA, JP | 1 | Pin | Stift | 4 |
| 0350 | 41A | 93 42 361 | | US, CA, JP | 1 | Pin | Stift | 4 |
| 0360 | 41B | *93 42 346* | | 39), US, CA, JP NLS - USE 7549256 | 1 | Brace | Bygel | 3 |
| 0370 | 41B | 75 49 256 | | 40), US, CA, JP | 1 | Brace | Bygel | 3 |
| 0380 | 42 | 93 24 260 | | 3), 5-SPEED | 1 | Control unit | Styrenhet | 3 |
| 0390 | 42A | 40 29 955 | | 3), 5-SPEED, (7543531) | 1 | . Spring | . Fjäder | 3 |
| 0400 | 43 | 79 71 823 | | 3), 5-SPEED | 2 | Screw | Skruv | 5 |
| 0410 | 44 | 79 72 284 | | 3), 5-SPEED | 2 | Washer | Bricka | 5 |
| 0420 | 50 | 83 75 339 | | | 1 | Cover | Lock | 6 |
| 0430 | 51 | 80 59 487 | | | 3 | Screw | Skruv | 5 |
| 0440 | 51 | 80 59 487 | | 5-SPEED | 2 | Screw | Skruv | 5 |
| 0450 | 51A | *80 57 697* | | 5-SPEED NLS - USE 8059487 | 1 | Screw | Skruv | |
| 0460 | 52 | 93 61 163 | | | 3 | Nut | Mutter | 5 |
| 0470 | 53 | 82 83 798 | | | 1 | Lock cylinder | Låscylinder | 2 |
| 0480 | 54 | 83 74 753 | | | 2 | Adjusting washer | Justerbricka | |
| 0490 | 55 | 93 22 785 | | | 2 | Screw | Skruv | 5 |
| 0500 | 56 | 93 24 708 | | | 1 | Screw | Skruv | 5 |
| 0510 | 57 | 70 61 328 | | | 1 | Washer | Bricka | 5 |
| 0520 | 58 | 79 33 823 | | | 3 | Washer | Bricka | 5 |
| 0530 | 59 | 83 73 714 | | | 3 | Nut | Mutter | 5 |
| 0540 | 60 | 79 33 823 | | | 2 | Washer | Bricka | 5 |
| 0550 | 61 | 79 34 797 | | | 2 | Screw | Skruv | 5 |
| 0560 | 62 | 93 16 910 | | -1987 | 1 | Gaiter | Damask | 5 |

3. Gear box --671841, --759477.
4. Gear box 671842--, 759478--.
39. Ch. --H2020197, --H3018272, --H7037399
40. Ch. H2020198--, H3018273--, H7037400--



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 3-J04

## Gear shift lever
## Växelspak

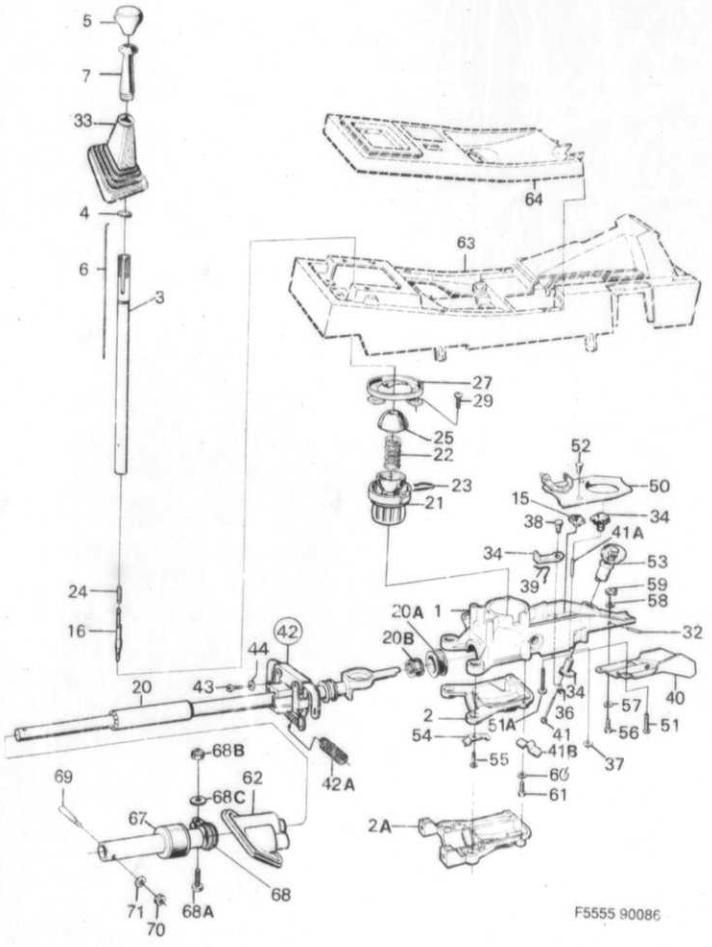


| 0400 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0570 | 62 | 75 49 173 | | 1988- | 1 | Gaiter | Damask | 5 |
| 0580 | 63 | | | See page 8B-017, 6-A15 | | Cover | Kåpa | |
| 0590 | 64 | | | See page 8B-017, 6-A18 | | Cover | Kåpa | |
| 0600 | 67 | 75 42 095 | | 3) | 1 | Joint | Knutkoppling | 5 |
| 0610 | 67 | 75 42 038 | | 4) | 1 | Joint | Knutkoppling | 5 |
| 0620 | 68 | 93 48 533 | | | 1 | Clamp | Klammer | 5 |
| 0630 | 68A | 75 41 907 | | | 1 | Screw | Skruv | 5 |
| 0640 | 68B | 79 75 501 | | | 1 | Nut | Mutter | 5 |
| 0650 | 68C | 80 29 985 | | | 1 | Washer | Bricka | 5 |
| 0660 | 69 | 83 75 172 | | | 1 | Pin | Pinne | 3 |
| 0670 | 70 | 83 35 002 | | | 1 | Nut | Mutter | 5 |
| 0680 | 71 | 80 29 944 | | | 1 | Washer | Bricka | 5 |

3. Gear box --671841, -759477.
4. Gear box 671842--, 759478--.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 3-J06 Drive shafts, outer universal joint — Drivaxlar, yttre knut

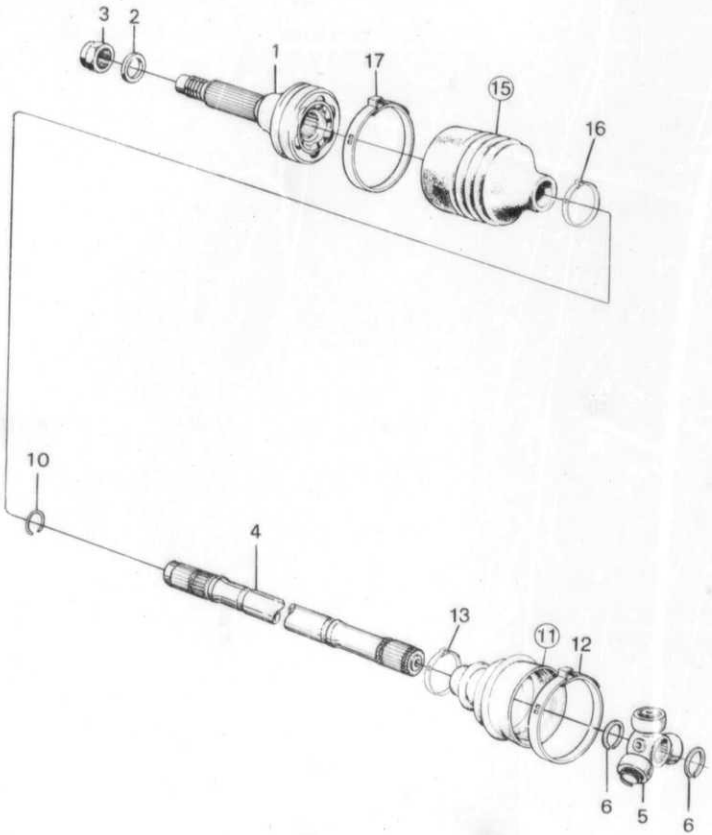


F5556 90083

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | 89 90 574 | | 700), -1987 | 2 | Universal joint | Drivknut | 4 |
| 1 | 91 02 880 | | 700), 1988- | 2 | Universal joint | Drivknut | 4 |
| 1 | 91 03 672 | | 56,700), CARS WITH ABS | 2 | Universal joint | Drivknut | 4 |
| 1 | 40 02 903 | | 57,700), CARS WITH ABS | 2 | Universal joint | Drivknut | 4 |
| 2 | 89 42 757 | | 21) | 2 | Washer | Bricka | 5 |
| 3 | 89 64 710 | | 21) | 2 | Lock nut | Låsmutter | 3 |
| 3 | 89 65 360 | | 22) | 2 | Lock nut | Låsmutter | 3 |
| 4 | 89 45 420 | | 9,10,700), INNER, LH | 1 | Drive shaft | Drivaxel | 5 |
| 4 | 89 45 438 | | 9,10,700), INNER, RH | 1 | Drive shaft | Drivaxel | 5 |
| 4 | 91 02 823 | | 11,12,700), INNER, LH (8990731) | 1 | Drive shaft | Drivaxel | 5 |
| 4 | 91 02 831 | | 11,12,700), INNER, RH (8990749) | 1 | Drive shaft | Drivaxel | 5 |
| 4 | *89 90 731* | | 700), LH, B202 TURBO AND CARS WITH A NLS - USE 4106159 | 1 | Drive shaft | Drivaxel | 5 |
| 4 | *89 90 749* | | 700), RH, B202 TURBO AND CARS WITH A NLS - USE 4106142 | 1 | Drive shaft | Drivaxel | 5 |
| 5 | 89 45 735 | | 9,10,700) | 2 | Companion flange | Medbringare | 3 |
| 5 | 89 50 628 | | 11,12,700) | 2 | Companion flange | Medbringare | 3 |
| 5 | 89 50 628 | | 700), B202 TURBO AND CARS WITH A | 2 | Companion flange | Medbringare | 3 |
| 6 | 89 45 727 | | 9,10) | 2 | Lock ring | Låsring | 5 |
| 6 | 89 50 636 | | 11,12) | 2 | Lock ring | Låsring | 5 |
| 6 | 89 50 636 | | B202 TURBO AND CARS WITH A | 2 | Lock ring | Låsring | 5 |
| 10 | 89 21 520 | | | 2 | Lock ring | Låsring | 5 |
| 11 | 89 93 073 | | 9,10) See page 4-077, 3-K06 | 2 | Bellows kit | Bälgsats | 3 |
| 11 | *89 61 872* | | 11,12) See page 4-077, 3-K06 NLS - USE 8993636 | 2 | Bellows kit | bälgsats | 3 |
| 11 | *89 61 872* | | B202 TURBO AND CARS WITH A See page 4-077, 3-K06 NLS - USE 8993636 | 2 | Bellows kit | Bälgsats | 3 |
| 12 | 89 72 986 | S | | 1 | .Clamp | .Klämma | 5 |
| 13 | 41 95 822 | S | | 1 | .Clamp | .Klämma | 3 |
| 15 | 89 93 792 | | -1987 (8993149) See page 4-077, 3-K06 | 2 | Rubber bellows kit | Gummibälgsats | 2 |
| 15 | *89 61 864* | | 1988 See page 4-077, 3-K06 NLS - USE 8993628 | 2 | Bellows kit | Bälgsats | 2 |
| 15 | 89 93 628 | | 1989- See page 4-077, 3-K06 | 2 | Bellows kit | Bälgsats | 2 |
| 16 | 41 95 822 | S | | 1 | .Clamp | .Klämma | 3 |
| 17 | 40 00 667 | S | | 1 | .Clamp | .Klämma | 5 |

9. 4-speed Ch.--G2012046. --G3007249.
10. 5-speed Ch.--G2009922. --G3007065. --G7011597.
11. 4-speed Ch.G2012047--. G3007250--.
12. 5-speed Ch.G2009923--. G3007066--. G7011598--.
21. Ch. --H7015180
22. Ch. H7015181--
56. Ch. --K7024508.
57. Ch. K7024509--.
700. Also available as exchange unit. Finns även som utbytesenhet.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

Gear box assy
# 3-J08
**Automatic**

Växellåda kpl
**Automatisk**

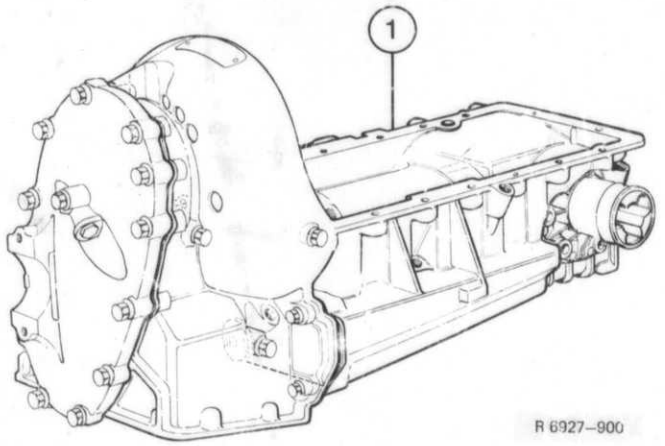


R 6927-900

| 0475 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 75 45 213 | | 700), -1988 | 1 | Gearbox | Växellåda | 5 |
| 0020 | | | | MARKED: GA 33207, BW 008 | | | | |
| 0030 | 1 | *75 49 611* | | 500,700), 1989- | 1 | Gearbox | Växellåda | 5 |
| 0040 | | | | MARKED: GA 33308, BW 013 | | | | |
| 0040 | | | | NLS - USE 4118329 | | | | |
| 0050 | 1 | *75 45 221* | | 700), -1988 | 1 | Gearbox | Växellåda | 5 |
| 0060 | | | | MARKED: GA 43407, BW 011 | | | | |
| 0060 | | | | NLS | | | | |
| 0070 | 1 | *75 45 247* | | 700), -1988 | 1 | Gearbox | Växellåda | 5 |
| 0080 | | | | MARKED: GA 53307, BW 009 | | | | |
| 0090 | | | | TURBO AND B202 US NLS | | | | |
| 0100 | 1 | *75 49 652* | | 500,700), 1989- | 1 | Gearbox | Växellåda | 5 |
| 0110 | | | | MARKED: GA 53408, BW 014 | | | | |
| 0110 | | | | NLS - USE 4118550 | | | | |

500. Also valid for SE 1988B. Gäller även för SE 1988B.
700. Also available as exchange unit. Finns även som utbytesenhet.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 3-J10

## *Converter housing, converter*

## *Momentomvandlarhus, momentomvandlare*

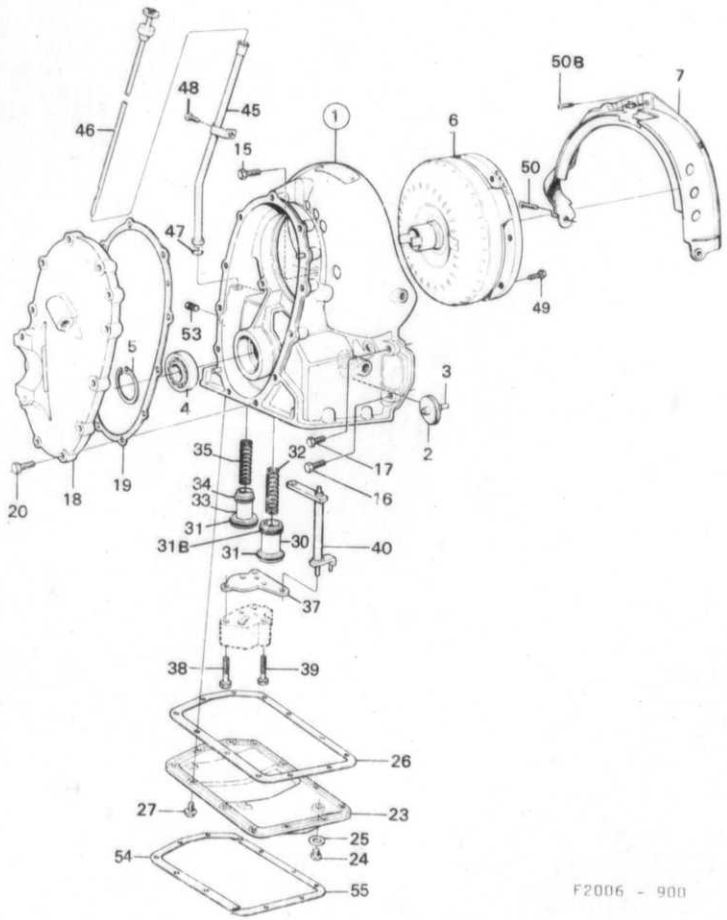


| 0525 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S i |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | See page 4-055, 3-J08 | | Gear box, automatic | Växellåda, automatisk | |
| 0020 | 1 | 93 69 976 | | | 1 | .Converter shell | .Momentomvandlarhus | 5 |
| 0030 | 2 | 87 08 778 | | | 1 | ..Pulley wheel | ..Brytskiva | |
| 0040 | 3 | 87 05 428 | | | 1 | ..Shaft | ..Axel | |
| 0050 | 4 | 93 35 670 | | | 1 | ..Ball bearing | ..Kullager | 4 |
| 0060 | 5 | 93 35 688 | | | 1 | ..Lock ring | ..Låsring | 5 |
| 0070 | 6 | 93 62 898 | | | 1 | .Torque converter | .Momentomvandlare | 5 |
| 0080 | 7 | 93 62 666 | | | 1 | .Cover | .Kåpa | 5 |
| 0090 | 15 | 80 82 968 | | | 5 | .Screw | .Skruv | 5 |
| 0100 | 16 | 80 82 992 | | | 2 | .Screw | .Skruv | 5 |
| 0110 | 17 | 80 82 984 | | | 3 | .Screw | .Skruv | 5 |
| 0120 | 18 | 75 46 278 | | | 1 | .Cover | .Lock | 5 |
| 0130 | 19 | 93 35 407 | S | | 1 | .Seal | .Tätning | 3 |
| 0140 | 20 | 80 83 933 | S | | 11 | .Screw | .Skruv | 5 |
| 0150 | 23 | *75 47 193* | | 58),GA 33207,43407,53307 NLS - USE 4029534 | 1 | .Cover | .Lock | 5 |
| 0160 | 23 | 40 29 468 | | 59) | 1 | .Sump | .Oljesump | 5 |
| 0170 | 24 | 87 08 380 | | | 1 | .Plug | .Plugg | 5 |
| 0180 | 25 | *87 08 398* | S | -1988 NLS - USE 4118527 | 1 | .Washer | .Bricka | 4 |
| 0190 | 25 | 41 18 527 | S | 1989- | 1 | .Washer | .Bricka | 4 |
| 0200 | 26 | 93 35 423 | S | 58),GA 33207,43407,53307 | 1 | .Seal | .Tätning | 3 |
| 0210 | 26 | 40 29 443 | S | 59) | 1 | .Seal | .Tätning | 3 |
| 0220 | 27 | *80 19 903* | | 58),GA 33207,43407,53307 NLS - USE 9166281 | 12 | .Screw | .Skruv | 5 |
| 0230 | 27 | 40 29 526 | | 59) | 12 | .Screw | .Skruv | 5 |
| 0240 | 30 | 93 69 992 | | | 1 | .Piston | .Kolv | 5 |
| 0250 | 31 | 93 34 665 | | | 2 | .Seal | .Tätning | 5 |
| 0260 | 31B | 75 10 001 | | | 1 | .Ring | .Ring | 2 |
| 0270 | 32 | 75 42 244 | | | 1 | .Spring | .Fjäder | 5 |
| 0280 | 33 | 93 34 681 | | | 1 | .Piston | .Kolv | 5 |
| 0290 | 34 | 93 34 699 | | | 1 | .Seal | .Tätning | 5 |
| 0300 | 35 | 93 34 707 | | | 1 | .Spring | .Fjäder | 5 |
| 0310 | 37 | 93 46 057 | | | 1 | .Plate | .Platta | 5 |
| 0320 | 38 | 93 39 979 | | | 2 | .Screw | .Skruv | 5 |
| 0330 | 39 | *93 39 987* | | NLS | 1 | .Screw | .Skruv | 5 |
| 0340 | 40 | 93 34 772 | | | 1 | .Lever | .Hävarm | 6 |
| 0350 | 45 | 75 45 494 | | -1988 | 1 | .Oil filler | .Oljepåfyllning | 6 |
| 0360 | 45 | 75 49 819 | | 500), 1989- | 1 | .Oil filler | .Oljepåfyllning | 6 |
| 0370 | 46 | *75 45 502* | | 1986 NLS - USE 7547748 | 1 | .Dipstick | .Oljesticka | 3 |
| 0380 | 46 | 75 47 748 | | 1987-1988 | 1 | .Dipstick | .Oljesticka | 3 |
| 0390 | 46 | 40 28 387 | | 500), 1989- | 1 | .Dipstick | .Oljesticka | 3 |
| 0400 | 47 | 83 08 371 | | | 1 | .O-ring | .O-ring | 2 |
| 0410 | 48 | 80 82 935 | | | 1 | .Screw | .Skruv | 5 |
| 0420 | 49 | *80 83 115* | | -1988 NLS - USE 7979123 | 8 | .Screw | .Skruv | 5 |
| 0430 | 49 | 79 79 123 | | 1989- | 8 | .Screw | .Skruv | 5 |
| 0440 | 50 | 80 82 943 | | | 1 | .Screw | .Skruv | 5 |
| 0450 | 50B | 79 72 466 | | | 3 | .Screw | .Skruv | 5 |
| 0460 | 53 | 93 17 165 | | | 1 | .Plug | .Plugg | 5 |
| 0470 | 54 | 40 29 484 | | 59) | 1 | .Frame | .Ram | 9 |
| 0480 | 55 | 40 29 492 | | 59 | 1 | .Frame | .Ram | 5 |

58. Gear box GA33207, GA43407, GA53307. Gear box GA33308 --6949, GA53408 --5128.
59. Gear box GA33308 6950--. Gear box GA53408 5129--.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 3-J12

## Servos, covers, plugs

## Servo, kåpor, pluggar

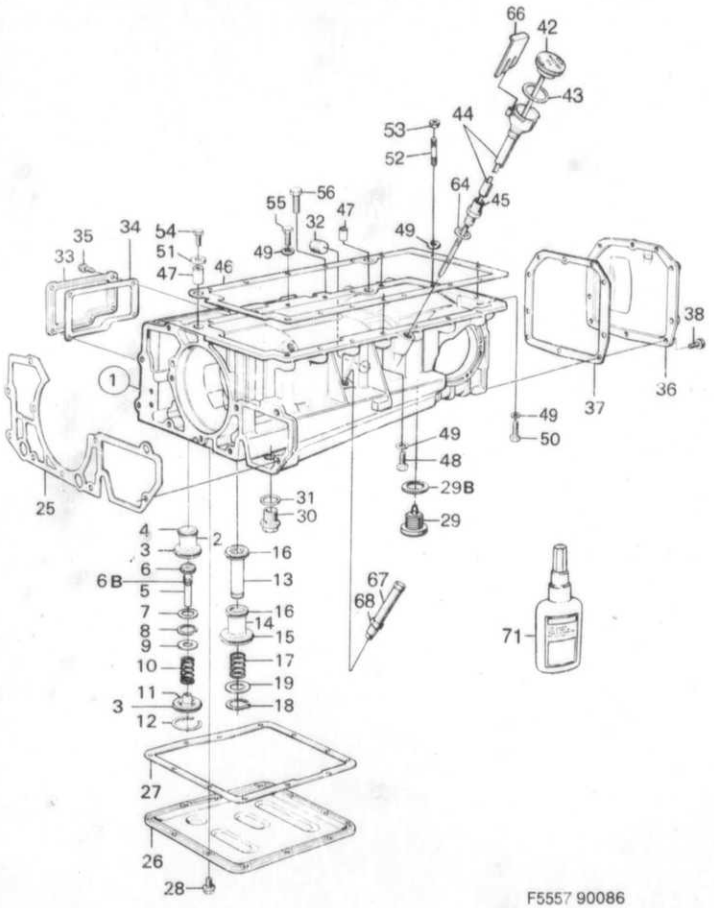


| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| | | | See page 4-055, 3-J08 | | Gear box, automatic | Växellåda, automatisk | |
| 1 | 75 42 277 | | GEAR BOX GA 33207, 33308 | 1 | .Gearbox housing | .Växellådshus | 6 |
| 1 | 75 42 269 | | GEAR BOX GA 43407 | 1 | .Gearbox housing | .Växellådshus | 6 |
| 1 | 75 54 264 | | GEAR BOX GA 53307, 53408 | 1 | .Gearbox housing | .Växellådshus | 6 |
| 2 | 75 42 293 | | GEAR BOX GA 33207, 33308 | 1 | ..Piston | ..Kolv | 6 |
| 2 | 75 42 285 | | GEAR BOX GA 43407 | 1 | ..Piston | ..Kolv | 6 |
| 2 | 93 35 738 | | GEAR BOX GA 53307, 53408 | 1 | ..Piston | ..Kolv | 6 |
| 3 | 87 06 111 | S | | 2 | ..O-ring | ..O-ring | 2 |
| 4 | 83 25 151 | | | 1 | ..O-ring | ..O-ring | 2 |
| 5 | 75 42 301 | | | 1 | ..Pivot pin | ..Lagertapp | 6 |
| 6 | 75 42 954 | | | 1 | ..Seal | ..Tätning | 3 |
| 6B | 93 35 753 | | | 1 | ..Spring | ..Fjäder | |
| 7 | 93 35 787 | | | 1 | ..Pressure plate | ..Tryckplatta | 5 |
| 8 | 93 35 795 | | | 1 | ..Lock ring | ..Låsring | 5 |
| 9 | 93 35 803 | | | 1 | ..Pressure plate | ..Tryckplatta | 5 |
| 10 | 93 35 811 | | | 1 | ..Spring | ..Fjäder | 5 |
| 11 | 93 35 829 | | | 1 | ..Piston | ..Kolv | 6 |
| 12 | 93 34 806 | | | 1 | ..Lock ring | ..Låsring | 5 |
| 13 | 75 42 319 | | | 1 | ..Piston | ..Kolv | 6 |
| 14 | 75 42 327 | | | 1 | ..Piston | ..Kolv | 6 |
| 15 | 87 09 610 | | | 1 | ..O-ring | ..O-ring | 2 |
| 16 | 87 06 129 | | | 2 | ..O-ring | ..O-ring | 2 |
| 17 | *75 42 335* | | NLS | 1 | ..Spring | ..Fjäder | 5 |
| 18 | 93 48 988 | | | 1 | ..Lock ring | ..Låsring | |
| 19 | *93 41 330* | | NLS | 2 | .Washer | .Bricka | 5 |
| 25 | 93 34 780 | | | 1 | .Gasket | .Packning | 3 |
| 26 | 93 35 449 | | 58),GA 33207,43407,53307 | 1 | .Sump | .Oljesump | 5 |
| 26 | 40 29 476 | | 59) | 1 | .Sump | .Oljesump | 5 |
| 27 | 93 35 456 | S | 58),GA33207,43407,53307 | 1 | .Gasket | .Packning | 3 |
| 27 | 40 29 450 | S | 59) | 1 | .Gasket | .Packning | 3 |
| 28 | *80 19 903* | | NLS - USE 9166281 | 12 | .Screw | .Skruv | 5 |
| 29 | 87 17 407 | | | 1 | .Drain plug | .Avtappningspropp | 6 |
| 29B | 87 17 415 | | | 1 | .Gasket | .Packning | 4 |
| 30 | *87 11 871* | | NLS - USE 8731762 | 1 | .Drain plug | .Avtappningspropp | 1 |
| 31 | 87 18 439 | S | | 1 | .Gasket | .Packning | 3 |
| 32 | 87 10 857 | | | 1 | .Plug | .Plugg | 3 |
| 33 | *93 35 431* | | NLS - USE 4028940 | 1 | .Cover | .Lock | 5 |
| 34 | 75 42 665 | S | | 1 | .Gasket | .Packning | 3 |
| 35 | *80 19 903* | | NLS - USE 9166281 | 5 | .Screw | .Skruv | 5 |
| 36 | *87 22 035* | | NLS - USE 8729683 | 1 | .Cover | .Lock | 5 |
| 37 | *87 14 842* | | 23) NLS - USE 8728669 | 1 | .Gasket | .Packning | 3 |
| 37 | *87 25 046* | | 24) NLS - USE 8728669 | 1 | .Gasket | .Packning | 3 |
| 38 | 81 25 197 | | | 10 | .Screw | .Skruv | 5 |
| 42 | 93 61 650 | | GEAR BOX GA 33207, 33308 | 1 | .Dipstick | .Mätsticka | 3 |
| 42 | 75 14 201 | | GEAR BOX GA 43407,53307 53408 | 1 | .Dipstick | .Oljesticka | 3 |
| 43 | 93 61 544 | | | 1 | .Ring-gland | .Packningsring | 4 |
| 44 | 93 68 200 | | | 1 | .Oil filler | .Oljepåfyllning | 6 |
| 45 | 93 61 452 | | | 1 | .Nipple | .Nippel | 6 |
| 46 | *75 10 241* | S | NLS - USE 7514946 | 1 | .Gasket | .Packning | 3 |
| • 81 52 381 | | | 300 ML | X | .Flange sealant | .Flänstätning | 3 |
| 47 | 83 00 725 | | | 2 | .Sleeve | .Hylsa | 4 |
| 48 | *80 83 958* | | NLS - USE 8125213 | 7 | .Screw | .Skruv | 5 |
| 49 | 80 29 985 | | | 14 | .Washer | .Bricka | 5 |
| 50 | 80 82 968 | | | 1 | .Screw | .Skruv | 5 |
| 51 | 70 61 328 | | | 1 | .Washer | .Bricka | 5 |
| 52 | *93 46 388* | | 1986 NLS - USE 8005928 | 1 | .Screw | .Skruv | 5 |
| 52 | 80 05 928 | | 1987- | 1 | .Stud | .Pinnskruv | 5 |
| 53 | 80 74 106 | | -1987 | 1 | .Nut | .Mutter | 5 |

23. Gear box --206963, --694101, --913909
24. Gear box 206964--, 694102--, 913910--
58. Gear box GA33207, GA43407, GA53307. Gear box GA33308 --6949, GA53408 --5128.
59. Gear box GA33308 6950--. Gear box GA53408 5129--.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 3-J14

## Servos, covers, plugs

## Servo, kåpor, pluggar

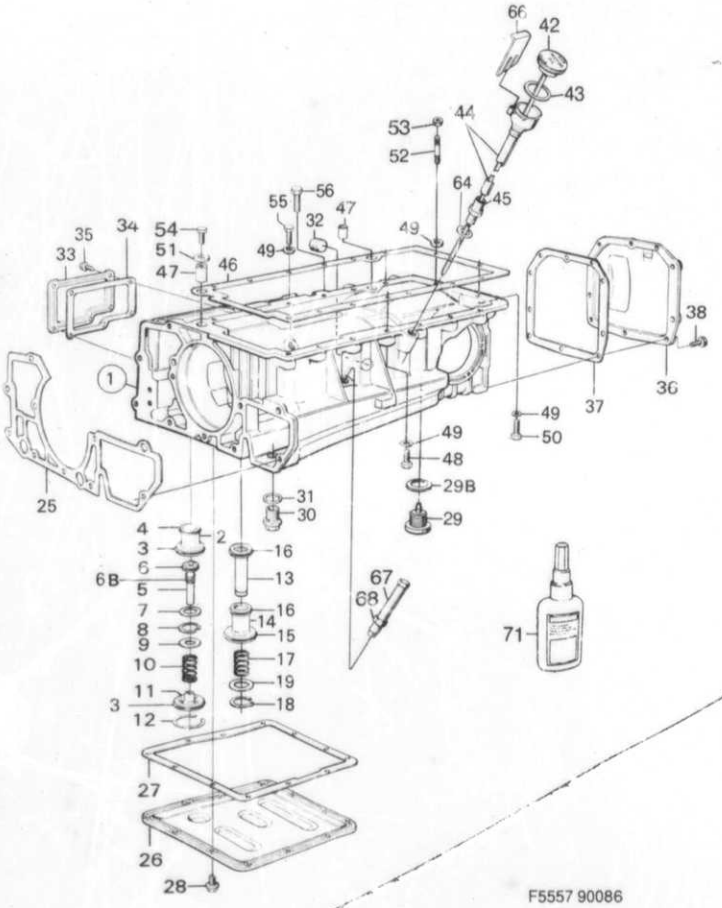


F5557 90086

| 0580 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0610 | 53 | 81 51 235 | | 1988- | 1 | . Nut | . Mutter | 5 |
| 0620 | 54 | 93 46 354 | | | 1 | . Screw | . Skruv | 5 |
| 0630 | 55 | 93 46 362 | | | 5 | . Screw | . Skruv | 5 |
| 0640 | 56 | 93 46 370 | | | 1 | . Screw | . Skruv | 5 |
| 0650 | 64 | 93 61 627 | | | 1 | . Washer | . Bricka | 5 |
| 0660 | 66 | 93 62 542 | | | 1 | . Plate | . Platta | 6 |
| 0670 | 67 | 87 06 152 | | | 1 | . Adjustment screw | . Justerskruv | 6 |
| 0680 | 68 | 87 06 160 | | | 1 | . Nut | . Mutter | |
| 0690 | 69 | 40 29 500 | | 59) | 1 | . Frame | . Ram | 5 |
| 0700 | 70 | 40 29 518 | | 59) | 1 | . Frame | . Ram | 5 |
| 0705 | 71 | 74 96 284 | | 50 ML | X | Hydraulic sealant | Gängtätning | 5 |
| 0710 | | | | | | | | |
| 0720 | | 93 35 563 | | See page 4-077, 3-K06 | X | Gasket kit | Packningsats | 2 |

59. Gear box GA33308 6950-. Gear box GA53408 5129-.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 3-J16

## Gears, pinion, etc

## Drev, pinjong, etc

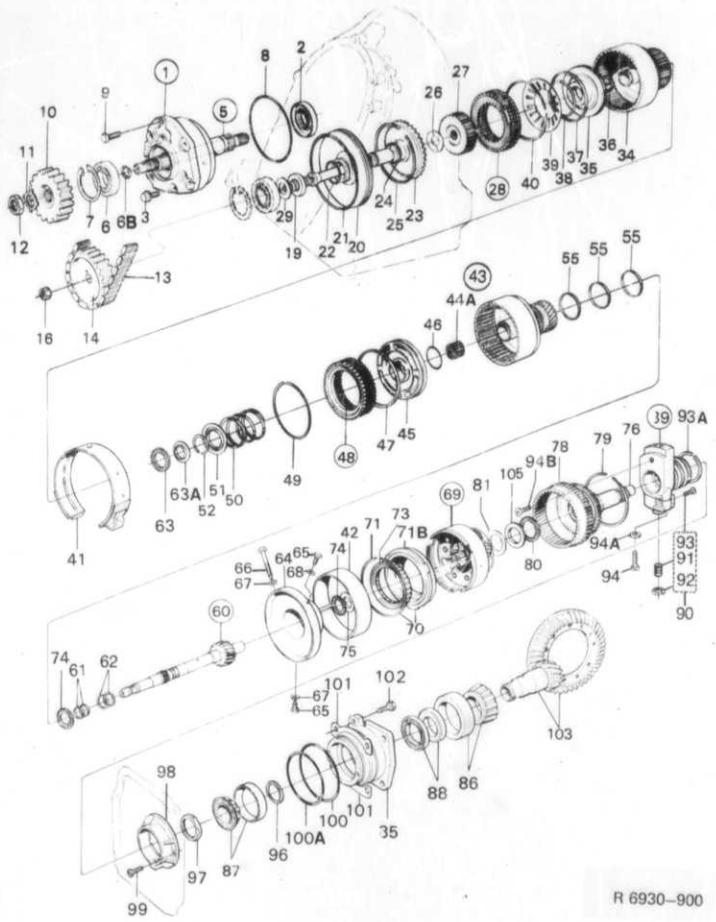


| 0625 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | See page 4-055, 3-J08 | | Gear box, automatic | Växellåda, automatisk | |
| 0020 | 1 | 93 64 498 | | | 1 | .Oil pump | .Oljepump | 5 |
| 0030 | 2 | 93 35 696 | | | 1 | ..Seal | ..Tätning | 2 |
| 0040 | 3 | 87 05 659 | | | 5 | ..Screw | ..Skruv | |
| 0050 | 5 | 93 62 286 | | | 1 | .Shaft | .Axel | 5 |
| 0060 | 6 | *87 05 436* | | NLS - USE 7031305 | 1 | ..Ball bearing | ..Kullager | |
| 0070 | 6B | 93 62 294 | | | 1 | ..Seal | ..Tätning | 3 |
| 0080 | 7 | 87 05 444 | | | 1 | .Clip | .Clips | 5 |
| 0090 | 8 | 87 05 725 | S | | 1 | .O-ring | .O-ring | 2 |
| 0100 | 9 | 80 82 943 | | | 3 | .Screw | .Skruv | 5 |
| 0110 | 10 | 93 62 906 | | 40 COGS,GEAR BOX GA53307 GA 53408 | 1 | .Chain gear | .Kedjehjul | 5 |
| 0120 | | | | | | | | |
| 0130 | 10 | 93 35 035 | | 39 COGS,GEAR BOX GA33207 GA 33308 | 1 | .Chain gear | .Kedjehjul | 5 |
| 0140 | | | | | | | | |
| 0150 | 10 | 93 35 027 | | 41 COGS,GEAR BOX GA43407 | 1 | .Chain gear | .Kedjehjul | 5 |
| 0160 | 11 | 93 38 005 | | | 1 | .Washer | .Bricka | 5 |
| 0170 | 12 | 93 38 013 | | | 1 | .Nut | .Mutter | 5 |
| 0180 | 13 | 93 35 050 | | | 1 | .Chain | .Kedja | 5 |
| 0190 | 14 | 93 62 914 | | 37 COGS,GEAR BOX GA53307 GA 53408 | 1 | .Chain gear | .Kedjehjul | 5 |
| 0200 | | | | | | | | |
| 0210 | 14 | 93 64 530 | | 38 COGS,GEAR BOX GA33207 GA 33308 | 1 | .Chain gear | .Kedjehjul | 5 |
| 0220 | | | | | | | | |
| 0230 | 14 | 93 64 522 | | 36 COGS,GEAR BOX 43407 | 1 | .Chain gear | .Kedjehjul | 5 |
| 0240 | 16 | 93 64 514 | | | 1 | .Nut | .Mutter | 5 |
| 0250 | 19 | 93 34 996 | | | 1 | .Washer | .Bricka | 5 |
| 0260 | 20 | 93 34 756 | | | 1 | .Cover | .Lock | 5 |
| 0270 | 21 | 93 44 219 | S | | 1 | .Seal | .Tätning | 3 |
| 0280 | 22 | 93 34 764 | S | | 1 | .O-ring | .O-ring | 3 |
| 0290 | 23 | 93 64 589 | | | 1 | .Shaft | .Axel | 5 |
| 0300 | 24 | 93 44 227 | S | | 3 | .Seal | .Tätning | 3 |
| 0310 | 25 | 87 06 491 | | | 1 | .Lock ring | .Låsring | 5 |
| 0320 | 26 | 75 40 909 | S | | 1 | .Washer | .Bricka | 5 |
| 0330 | 27 | 87 09 446 | | | 1 | .Clutch hub | .Kopplingsnav | 6 |
| 0340 | 28 | 75 43 051 | | See page 4-085, 3-K14 | 1 | .Disc kit | .Lamellsats | 2 |
| 0350 | 29 | 93 35 019 | S | 0,25MM | X | .Shim | .Shim | 5 |
| 0360 | 29 | 93 35 001 | | 0,50MM | X | .Shim | .Shim | 5 |
| 0370 | 34 | 75 42 434 | | | 1 | .Cylinder | .Cylinder | 5 |
| 0380 | 35 | 87 08 786 | | | 1 | .Piston | .Kolv | 5 |
| 0390 | 36 | 87 06 327 | S | | 1 | .O-ring | .O-ring | 2 |
| 0400 | 37 | 87 06 335 | S | | 1 | .Ring | .Ring | 3 |
| 0410 | 38 | 87 06 343 | | | 1 | .Ring | .Ring | 5 |
| 0420 | 39 | 93 03 751 | S | | 2 | .Spring | .Fjäder | 5 |
| 0430 | 40 | 87 06 491 | S | | 1 | .Lock ring | .Låsring | 5 |
| 0440 | 41 | 75 43 028 | | | 1 | .Brake lining | .Bromsband | 3 |
| 0450 | 42 | *83 25 003* | | -1987 NLS - USE 7549595 | 1 | .Brake lining | .Bromsband | 3 |
| 0460 | 42 | 75 49 596 | | 1988- | 1 | .Brake lining | .Bromsband | 3 |
| 0470 | 43 | 75 42 897 | | | 1 | .Drum | .Trumma | 5 |
| 0480 | 44A | 87 06 582 | | | 1 | ..Needle bearing | ..Nållager | 5 |
| 0490 | 45 | 93 36 041 | | | 1 | .Piston | .Kolv | 5 |
| 0500 | 46 | 87 06 129 | S | | 1 | .O-ring | .O-ring | 2 |
| 0510 | 47 | 87 06 616 | S | | 1 | .Seal | .Tätning | 3 |
| 0520 | 48 | 93 35 472 | | GEAR BOX GA 43407, 53307 GA 53408 | 1 | .Disc kit | .Lamellsats | 2 |
| 0530 | | | | See page 4-079, 3-K08 | | | | |
| 0540 | | | | | | | | |
| 0550 | 48 | 93 44 110 | | GEAR BOX GA 33207, 33308 | 1 | .Disc kit | .Lamellsats | 2 |
| 0560 | | | | See page 4-079, 3-K08 | | | | |
| 0570 | 49 | 87 06 491 | | 1,2MM | 1 | .Lock ring | .Låsring | 5 |
| 0580 | 49 | 87 06 368 | | 0,9MM | 2 | .Lock ring | .Låsring | 5 |
| 0590 | 49 | 93 49 002 | | 1,7MM | 1 | .Locking | .Låsning | 5 |
| 0600 | 50 | 87 06 665 | | GEAR BOX GA 43407, 53307 GA 53408 | 1 | .Spring | .Fjäder | 5 |
| 0610 | | | | | | | | |
| 0620 | 50 | 75 42 475 | | GEAR BOX GA 33207, 33308 | 1 | .Spring | .Fjäder | 5 |
| 0630 | 51 | 87 06 673 | | | 1 | .Seat | .Säte | |
| 0640 | 52 | 87 06 681 | | | 1 | .Lock ring | .Låsring | |
| 0650 | 55 | 87 06 707 | S | | 3 | .Seal | .Tätning | 3 |



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1 A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 3-J18

## Gears, pinion, etc
## Drev, pinjong, etc

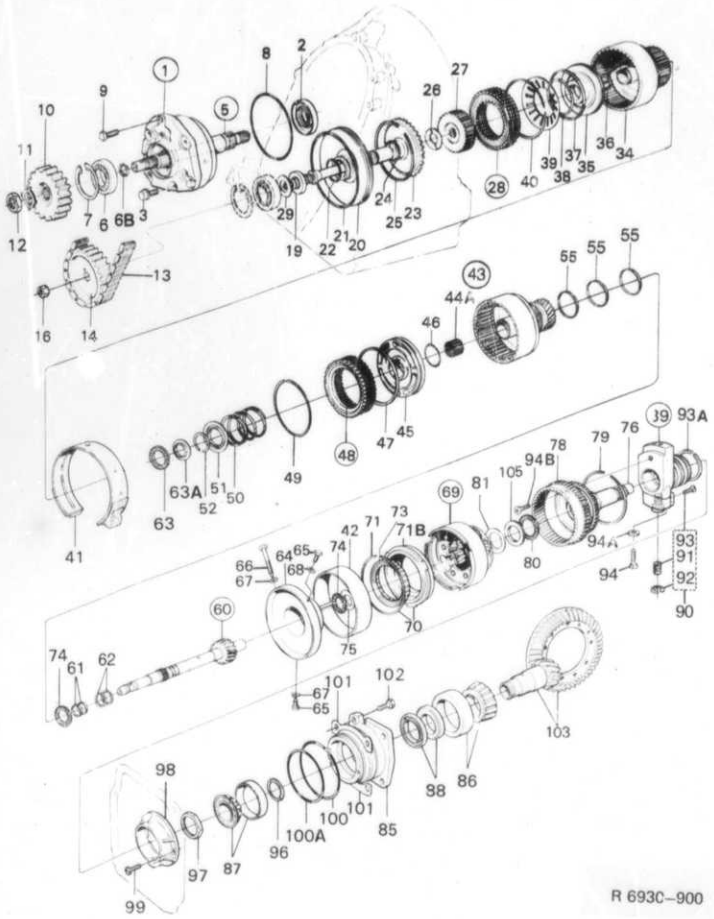


| 0625 | Pos | Part No/Art nr | K S | Notes, Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0660 | 60 | 93 64 605 | S | | 1 | .Sun gear | .Solhjul | 6 |
| 0670 | 61 | 93 64 373 | S | | 2 | ..Seal | ..Tätning | 5 |
| 0680 | 62 | 93 61 551 | S | | 2 | .Seal | .Tätning | 5 |
| 0690 | 63 | 93 69 216 | S | | 1 | .Needle bearing | .Nållager | 5 |
| 0700 | 63A | 93 69 208 | | | 1 | .Washer | .Bricka | 5 |
| 0710 | 64 | 75 42 483 | | | 1 | .Bearing sleeve | .Lagerhylsa | 5 |
| 0720 | 65 | 75 46 260 | | | 2 | .Screw | .Skruv | 5 |
| 0730 | 66 | 87 06 848 | | | 1 | .Screw | .Skruv | |
| 0740 | 67 | 87 06 855 | S | | 2 | .Lock washer | .Låsbricka | 5 |
| 0750 | 68 | 87 06 855 | S | | 1 | .Lock washer | .Låsbricka | 5 |
| 0760 | 69 | 93 64 647 | | | 1 | .Planetary gear | .Planetväxel | 6 |
| 0770 | 70 | 93 45 984 | | See page 4-079, 3-K08 | 1 | ..Free wheel | ..Frihjul | 6 |
| 0780 | 71 | 87 05 170 | | | 1 | ...Locking wire | ...Låstråd | |
| 0790 | 71B | 93 44 250 | | | 1 | ...Bearing carrier | ...Lagerhållare | 5 |
| 0800 | 73 | 87 07 051 | | | 1 | .Clutch | .Koppling | 6 |
| 0810 | 74 | 87 09 347 | | | 1 | .Needle bearing | .Nållager | 5 |
| 0820 | 75 | 93 34 889 | S | | 1 | .Bearing race | .Lagerbana | 6 |
| 0830 | 76 | 93 34 939 | | | 1 | .Shaft | .Axel | 6 |
| 0840 | 78 | 75 42 491 | | | 1 | .Ring gear | .Ringdrev | 5 |
| 0850 | 79 | 87 07 457 | | | 1 | .Lock ring | .Låsring | 5 |
| 0860 | 80 | 83 25 334 | S | | 1 | .Needle bearing | .Nållager | 5 |
| 0870 | 81 | 87 08 703 | S | 0,25MM, MAX 3 OFF | X | .Shim | .Shim | 4 |
| 0880 | 85 | 93 36 074 | | | 1 | .Pinion bearing housing | .Pinjonglagerhus | 6 |
| 0890 | 86 | 93 35 522 | | | 1 | .Pinion bearing kit | .Pinjonglagersats | 4 |
| 0900 | 87 | 93 35 514 | | | 1 | .Pinion bearing kit | .Pinjonglagersats | 4 |
| 0910 | 88 | 93 36 116 | S | | 2 | .Seal | .Tätning | 3 |
| 0920 | 89 | 75 40 842 | | GA 33207, 53307 | 1 | .Regulator | .Regulator | 5 |
| 0930 | 89 | 93 62 864 | | GA 33308, 43407, 53408 | 1 | .Regulator | .Regulator | 5 |
| 0940 | 90 | 75 43 077 | | GA 33207, 53307 | 1 | ..Regulator kit | ..Regulatorsats | 5 |
| 0950 | 90 | 93 62 880 | | GA 33308, 43407, 53408 | 1 | ..Regulator kit | ..Regulatorsats | 5 |
| 0960 | 91 | *87 07 234* | | NLS | 1 | ...Spring | ...Fjäder | |
| 0970 | 92 | *87 08 851* | | NLS | 1 | ...Clamping ring | ...Spännring | 5 |
| 0980 | 93 | *87 07 275* | | NLS | 2 | ...Screw | ...Skruv | |
| 0990 | 93A | 93 34 947 | S | | 3 | ...Seal | ...Tätning | 3 |
| 1000 | 94 | 83 25 722 | | | 2 | ...Screw | ...Skruv | 5 |
| 1010 | 94A | 79 53 823 | | | 2 | ...Washer | ...Bricka | 5 |
| 1020 | 94B | 93 44 102 | | | 1 | .Screw | .Skruv | 5 |
| 1030 | 96 | 93 41 009 | | 2,850MM | X | .Shim | .Shim | 5 |
| 1040 | 96 | 93 41 017 | | 2,925MM | X | .Shim | .Shim | 5 |
| 1050 | 96 | 93 41 025 | | 3,000MM | X | .Shim | .Shim | 5 |
| 1060 | 96 | 93 41 033 | | 3,075MM | X | .Shim | .Shim | 5 |
| 1070 | 96 | 93 41 041 | | 3,150MM | X | .Shim | .Shim | 5 |
| 1080 | 96 | 93 41 058 | | 3,225MM | X | .Shim | .Shim | 5 |
| 1090 | 96 | 93 41 066 | | 3,300MM | X | .Shim | .Shim | 5 |
| 1100 | 96 | 93 41 074 | | 3,375MM | X | .Shim | .Shim | 5 |
| 1110 | 96 | 93 41 082 | | 3,450MM | X | .Shim | .Shim | 5 |
| 1120 | 96 | 93 41 090 | | 3,525MM | X | .Shim | .Shim | 5 |
| 1130 | 96 | 93 41 108 | | 3,600MM | X | .Shim | .Shim | 5 |
| 1140 | 96 | 93 41 116 | | 3,675MM | X | .Shim | .Shim | 5 |
| 1150 | 96 | 93 41 124 | | 3,750MM | X | .Shim | .Shim | 5 |
| 1160 | 97 | 93 36 140 | | | 1 | .Nut | .Mutter | 5 |
| 1170 | 98 | 93 36 157 | | | 1 | .Casing | .Hus | 5 |
| 1180 | 99 | 93 36 132 | | | 2 | .Screw | .Skruv | 5 |
| 1190 | 100 | 93 34 913 | S | | 1 | .Seal | .Tätning | 2 |
| 1200 | 100A | 93 62 310 | | | 1 | .O-ring | .O-ring | 3 |
| 1210 | 101 | 93 34 962 | S | 0,004", (0,10 MM) | X | .Shim | .Shim | 5 |
| 1220 | 101 | 93 34 970 | S | 0,006", (0,15 MM) | X | .Shim | .Shim | 5 |
| 1230 | 101 | 93 34 988 | S | 0,012", (0,30 MM) | X | .Shim | .Shim | 5 |
| 1240 | 102 | 75 11 884 | | | 4 | .Screw | .Skruv | 5 |
| 1250 | 103 | 87 15 815 | | GA 33207, 43407, 53307 | 1 | .Final drive | .Slutväxel | 5 |
| 1260 | 103 | 87 27 018 | | GA 33308, 53408 | 1 | .Final drive | .Slutväxel | 5 |
| 1270 | 105 | 83 25 342 | | | 1 | .Washer | .Bricka | |
| 1280 | | | | | | | | |
| 1290 | | 93 64 613 | | See page 4-083, 3-K12 | X | Planetary gear kit | Planetväxelsats | 6 |
| 1300 | | 75 40 891 | | See page 4-083, 3-K12 | X | Thrust washer kit | Axiallagersats | 5 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 3-J20

## *Gears, pinion, etc*

## *Drev, pinjong, etc*

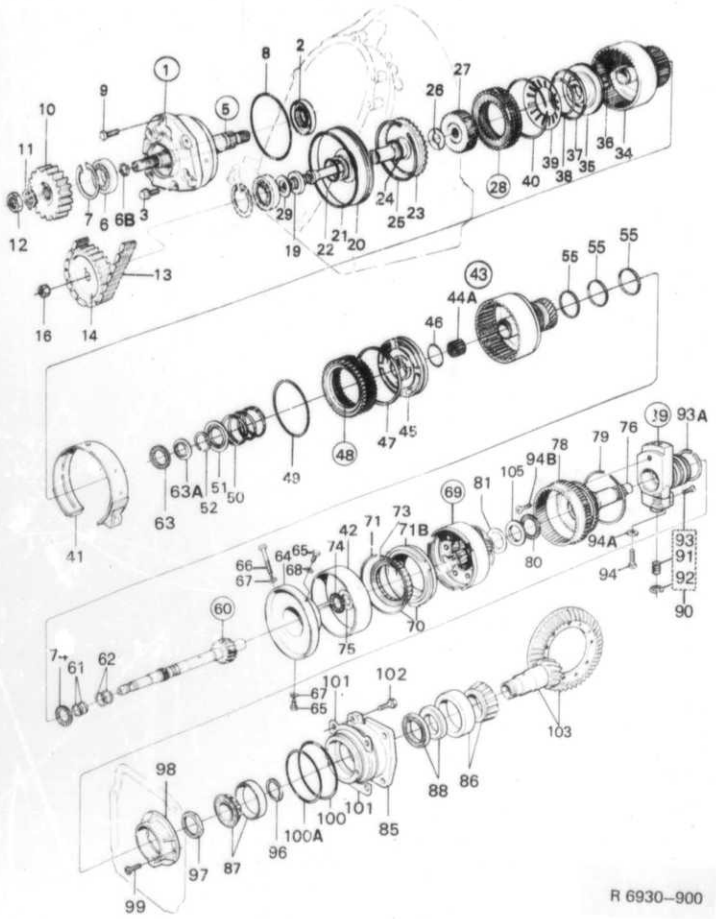


0625

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1310 | 75 42 673 | | See page 4-083, 3-K12 | X | Sealing kit | Tätningssats | 3 |
| 1320 | 93 65 172 | | See page 4-085, 3-K14 | X | Oil ring, set | Oljeringsats | 3 |
| 1330 | *93 69 729* | | NLS | X | Spring kit | Fjädersats | |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


4 GROUP INDEX

| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 3-J22

## Control system
## Part 1

## Kontrollsystem
## Del 1

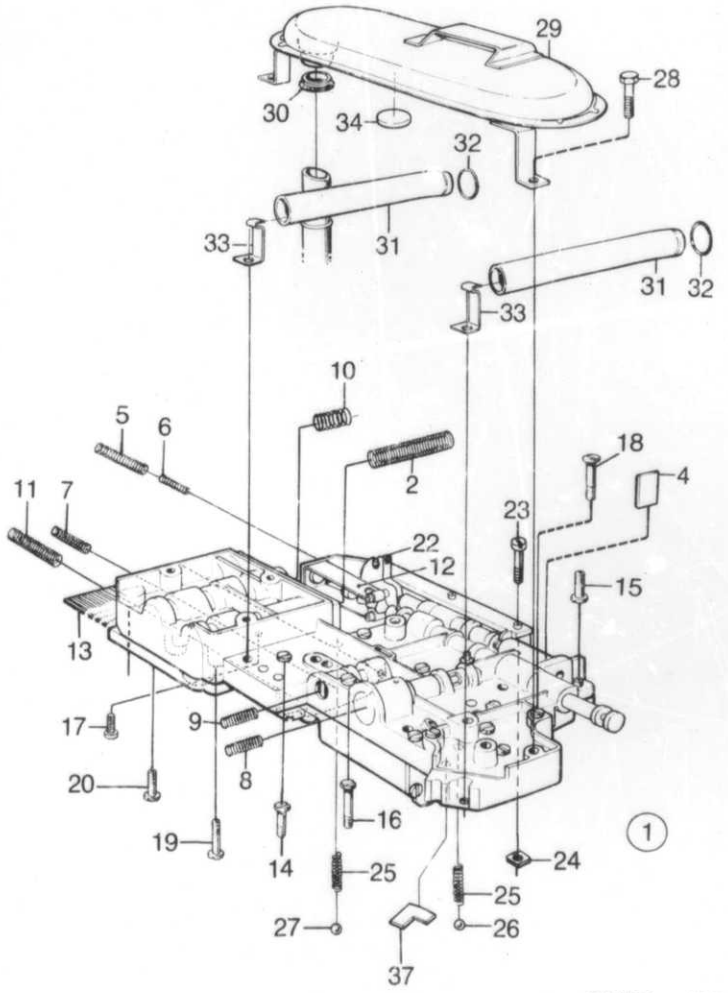


F0826 - 900

| 0650 | Pos | Part No/Ant nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | See page 4-055, 3-J08 | | Gear box, automatic | Växellåda, automatisk | |
| 0020 | 1 | 75 42 517 | | GEAR BOX GA 33207, 43407 | 1 | .Valve housing | .Ventilhus | 5 |
| 0030 | | | | GA 33308 | | | | |
| 0040 | 1 | 75 42 525 | | GEAR BOX GA 53307, 53408 | 1 | .Valve housing | .Ventilhus | 5 |
| 0050 | 2 | 75 42 533 | S | | 1 | ..Spring | ..Fjäder | 6 |
| 0060 | 4 | *87 07 747* | | NLS | 1 | ..Stop | ..Stopp | |
| 0070 | 5 | *87 07 721* | S | NLS | 1 | ..Spring | ..Fjäder | |
| 0080 | 6 | *87 07 754* | S | NLS | 1 | ..Spring | ..Fjäder | 6 |
| 0090 | 7 | *87 07 929* | S | NLS | 1 | ..Spring | ..Fjäder | |
| 0100 | 8 | 75 42 541 | | MARKED: GREEN | 1 | ..Spring | ..Fjäder | 6 |
| 0110 | 8 | 75 42 574 | | MARKED: YELLOW | 1 | ..Spring | ..Fjäder | 6 |
| 0120 | 8 | 75 42 558 | | ALT. MARKED: RED | 1 | ..Spring | ..Fjäder | 6 |
| 0130 | 8 | 75 42 566 | | ALT. MARKED: ORANGE | 1 | ..Spring | ..Fjäder | 6 |
| 0140 | 9 | 75 42 830 | | GEAR BOX GA 33207, 43407 | 1 | ..Spring | ..Fjäder | 6 |
| 0150 | | | | GA 33308 | | | | |
| 0160 | 9 | *87 07 788* | | GEAR BOX GA 53307, 53408 | 1 | ..Spring | ..Fjäder | 6 |
| 0160 | | | | NLS | | | | |
| 0170 | 10 | 75 42 822 | | | 1 | ..Spring | ..Fjäder | 5 |
| 0180 | 11 | 87 07 952 | | | 1 | ..Spring | ..Fjäder | 6 |
| 0190 | 12 | 75 11 371 | | | 1 | ..Bracket | ..Konsol | 6 |
| 0200 | 13 | 75 46 252 | | | 1 | ..Plate | ..Platta | 6 |
| 0210 | 14 | 87 08 026 | | | 1 | ..Screw | ..Skruv | |
| 0220 | 15 | 87 07 887 | | | 1 | ..Screw | ..Skruv | |
| 0230 | 16 | 75 42 616 | | | 1 | ..Screw | ..Skruv | 5 |
| 0240 | 17 | 75 42 624 | | | 1 | ..Screw | ..Skruv | 5 |
| 0250 | 18 | *87 09 479* | | NLS | 2 | ..Screw | ..Skruv | |
| 0260 | 19 | 87 08 026 | | | 6 | ..Screw | ..Skruv | |
| 0270 | 20 | 87 07 887 | | | 6 | ..Screw | ..Skruv | |
| 0280 | 22 | 93 00 286 | | | 1 | ..Cam | ..Kam | 4 |
| 0290 | 23 | 93 64 431 | | | 2 | ..Screw | ..Skruv | 5 |
| 0300 | 24 | 93 17 439 | | | 2 | ..Nut | ..Mutter | 5 |
| 0310 | 25 | 75 42 590 | | | 2 | ..Spring | ..Fjäder | 5 |
| 0320 | 26 | *87 05 691* | | NLS | 1 | ..Ball | ..Kula | |
| 0330 | 27 | 75 42 608 | | | 1 | ..Ball | ..Kula | 5 |
| 0340 | 28 | 87 08 695 | | | 1 | .Screw | .Skruv | |
| 0350 | 29 | *75 44 125* | | NLS - USE 4277455, | 1 | .Oil filter | .Oljefilter | 3 |
| 0350 | | | | 9317348 | | | | |
| 0360 | 30 | 93 17 348 | | | 1 | .Seal | .Tätning | 3 |
| 0370 | 31 | 93 61 064 | | | 2 | .Tube | .Rör | 6 |
| 0380 | 32 | 87 05 733 | | | 2 | .O-ring | .O-ring | 2 |
| 0390 | 33 | 93 61 072 | | | 2 | .Clip | .Clips | 5 |
| 0400 | 34 | 87 08 414 | | | 1 | .Magnet | .Magnet | 3 |
| 0410 | 37 | 75 46 690 | | 19) | 1 | .Clip | .Clips | 5 |
| 0420 | 37 | 75 47 016 | | 20) | 1 | .Clip | .Clips | 5 |
| 0430 | | | | | | | | |
| 0440 | | 75 42 681 | | GEAR BOX GA 33207, 43407 | X | Spring kit | Fjädersats | 5 |
| 0450 | | | | GA 33308 | | | | |
| 0460 | | | | See page 4-085, 3-K14 | | | | |
| 0470 | | *75 42 699* | | GEAR BOX GA 53307, 53408 | X | Spring kit | Fjädersats | 5 |
| 0480 | | | | See page 4-085, 3-K14 | | | | |
| 0480 | | | | NLS | | | | |

19. Gear box -008.2243-, -009.13176-, -011.4545-.
20. Gear box 008.22433-, 009.13177-, 011.4546-.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 3-J24

## *Control system*
## *Part 2*

## *Kontrollsystem*
## *Del 2*

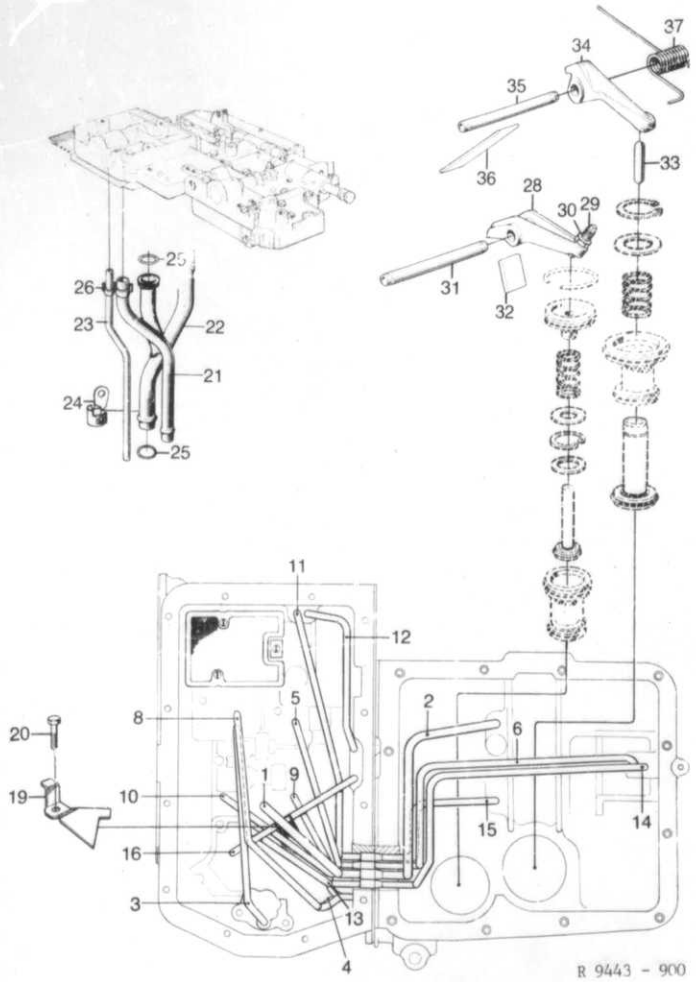


| 0660 | Pos | Part No/Art nr | K S | Notes, Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | See page 4-055, 3-J08 | | Gear box, automatic | Växellåda, automatisk | |
| 0020 | 1 | 75 42 632 | | | 1 | . Tube | . Rör | 5 |
| 0030 | 2 | 93 35 241 | | | 1 | . Tube | . Rör | 6 |
| 0040 | 3 | 75 42 640 | | | 1 | . Tube | . Rör | 5 |
| 0050 | 4 | 93 35 266 | | | 1 | . Tube | . Rör | 6 |
| 0060 | 5 | 93 35 324 | | | 1 | . Tube | . Rör | 6 |
| 0070 | 6 | 93 35 340 | | | 1 | . Tube | . Rör | 6 |
| 0080 | 8 | 75 42 657 | | | 1 | . Tube | . Rör | 5 |
| 0090 | 9 | 93 35 290 | | | 1 | . Tube | . Rör | 6 |
| 0100 | 10 | 93 35 308 | | | 1 | . Tube | . Rör | 6 |
| 0110 | 11 | 93 35 357 | | | 1 | . Tube | . Rör | 6 |
| 0120 | 12 | 93 35 365 | | | 1 | . Tube | . Rör | 6 |
| 0130 | 13 | 75 10 423 | | | 1 | . Tube | . Rör | 6 |
| 0140 | 14 | 75 10 431 | | | 1 | . Tube | . Rör | 5 |
| 0150 | 15 | 93 35 373 | | | 1 | . Tube | . Rör | 6 |
| 0160 | 16 | 93 35 381 | | | 1 | . Tube | . Rör | 6 |
| 0170 | 19 | 93 48 178 | | | 1 | . Stay | . Stag | 5 |
| 0180 | 20 | 93 62 328 | | | 1 | . Screw | . Skruv | 5 |
| 0190 | 21 | 87 09 164 | | | 1 | . Tube | . Rör | 4 |
| 0200 | 22 | 75 42 251 | | | 1 | . Tube | . Rör | 5 |
| 0210 | 23 | 93 34 749 | | | 1 | . Tube | . Rör | 6 |
| 0220 | 24 | 83 32 595 | | | 1 | . Clamp | . Klammer | 5 |
| 0230 | 25 | 87 05 733 | S | | 2 | . O-ring | . O-ring | 2 |
| 0240 | 26 | 87 08 760 | | | 1 | . Clip | . Clips | |
| 0250 | 28 | 87 06 038 | | | 1 | . Arm | . Arm | 6 |
| 0260 | 29 | 87 06 046 | | | 1 | . Adjustment screw | . Justerskruv | |
| 0270 | 30 | 93 34 814 | | | 1 | . Nut | . Mutter | 5 |
| 0280 | 31 | 87 06 061 | | | 1 | . Pin | . Pinne | 6 |
| 0290 | 32 | 93 47 949 | | | 1 | . Pressure plate | . Tryckplatta | 5 |
| 0300 | 33 | 87 06 103 | | | 1 | . Push rod | . Stötstång | |
| 0310 | 34 | 93 34 822 | | | 1 | . Lever | . Hävarm | 6 |
| 0320 | 35 | 87 06 061 | | | 1 | . Pin | . Pinne | 6 |
| 0330 | 36 | 87 05 220 | | | 1 | . Link | . Lank | 5 |
| 0340 | 37 | 75 44 844 | | | 1 | . Spring | . Fjäder | 5 |
| 0350 | | | | | | | | |
| 0360 | | 75 11 470 | | See page 4-065, 3-K14 | 1 | . Pipe set | . Rörsats | 6 |


MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

4 GROUP INDEX

| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 3-K02

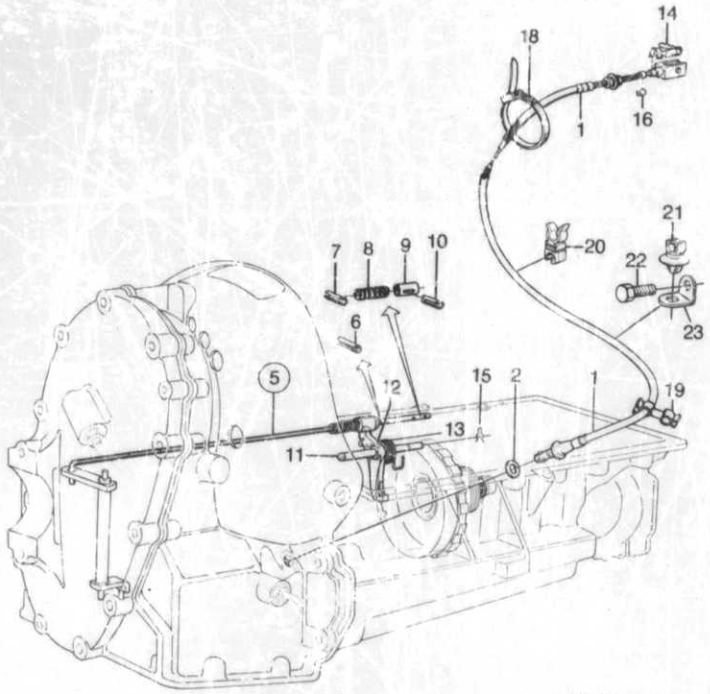


| 0725 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | See page 4-05, 3-J08 | | Gear box, automatic | Växellåda, automatisk | |
| 0020 | 1 | 93 36 207 | | | 1 | .Cable | .Kabel | 4 |
| 0030 | 2 | 93 62 856 | S | | 1 | .O-ring | .O-ring | 5 |
| 0040 | 5 | 75 42 962 | | MARKED: 2 LUGS | 1 | .Gear rod | .Växelstång | 5 |
| 0050 | 5 | 75 42 970 | | MARKED: 4 LUGS | 1 | .Gear rod | .Växelstång | 5 |
| 0060 | 5 | 75 42 988 | | MARKED: 6 LUGS | 1 | .Gear rod | .Växelstång | 5 |
| 0070 | 6 | 87 06 210 | | | 1 | ..Pin | ..Pinne | 5 |
| 0080 | 7 | *93 17 694* | | 1) NLS | 1 | ..Pin | ..Pinne | |
| 0090 | 8 | *93 17 785* | | NLS | 1 | ..Spring | ..Fjäder | |
| 0100 | 9 | 93 17 793 | | | 1 | ..Sleeve | ..Hylsa | 5 |
| 0110 | 10 | 93 17 801 | | | 1 | ..Pin | ..Pinne | 5 |
| 0120 | 11 | 75 11 553 | | | 1 | .Pin | .Pinne | 5 |
| 0130 | 12 | 75 42 343 | | MARKED: GREEN | 1 | .Catch | .Spärr | 4 |
| 0140 | 12 | 75 42 350 | | MARKED: WHITE | 1 | .Catch | .Spärr | 4 |
| 0150 | 12 | 75 42 368 | | MARKED: BLUE | 1 | .Catch | .Spärr | 4 |
| 0160 | 12 | 75 42 376 | | MARKED: RED | 1 | .Catch | .Spärr | 4 |
| 0170 | 12 | 75 42 384 | | MARKED: VIOLET | 1 | .Catch | .Spärr | 4 |
| 0180 | 13 | 93 34 863 | | | 1 | .Spring | .Fjäder | 5 |
| 0190 | 14 | 83 08 389 | | | 1 | .Clip | .Clips | 5 |
| 0200 | 15 | 75 11 561 | | | 1 | .Bracket | .Hållare | 5 |
| 0210 | 16 | *87 09 305* | | NLS | 1 | .Cable stop | .Kabelstopp | 5 |
| 0220 | 18 | *83 74 357* | | NLS - USE 7971880 | 1 | .Tensioning band | .Spännband | 5 |
| 0230 | 19 | 93 45 257 | | | 1 | .Clip | .Clips | 5 |
| 0240 | 20 | 75 11 256 | | | 1 | .Clamp | .Klammer | 5 |
| 0250 | 21 | 40 00 543 | | ABS | 1 | Clamp | Klammer | 5 |
| 0260 | 22 | 79 22 891 | | ABS | 1 | Screw | Skruv | 5 |
| 0270 | 23 | 89 40 652 | | ABS | 1 | Brace | Bygel | 5 |

1. Not as separate spare part. Ej som separat reservdel.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 3-K04

## Gear selector lever
## Växelväljarspak

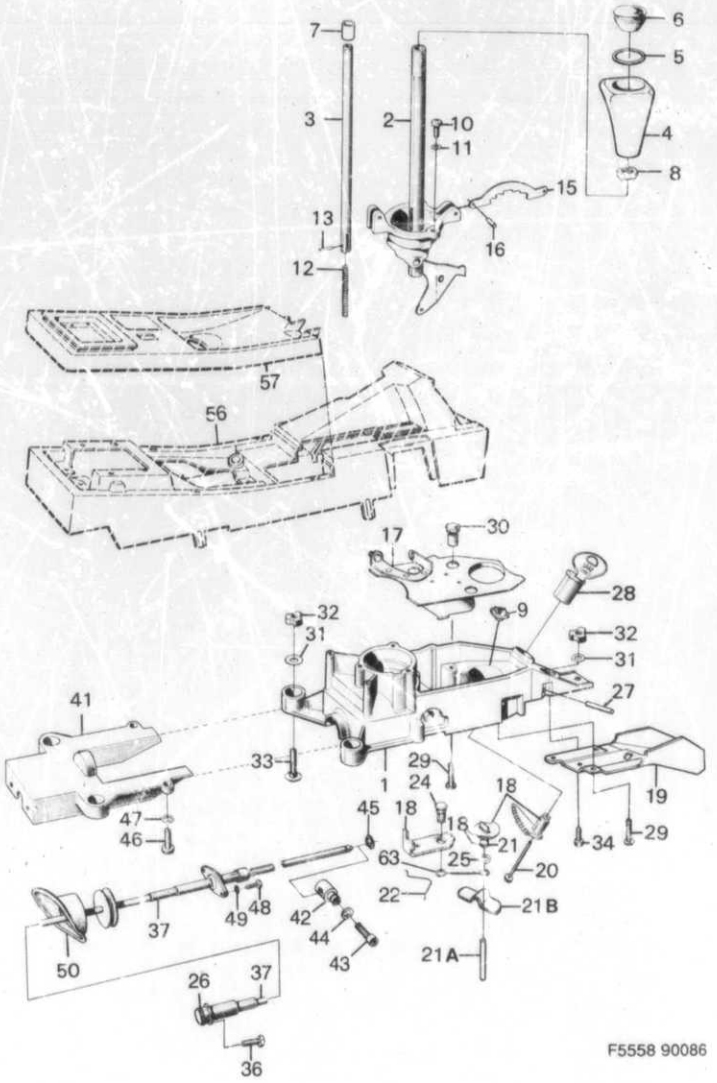


| 0750 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 93 47 816 | | | 1 | Gear shift housing | Växelspakshus | 5 |
| 0020 | 2 | 93 49 549 | | | 1 | Gear lever | Växelspak | |
| 0030 | 3 | 93 01 797 | | | 1 | Tube | Rör | 5 |
| 0040 | 4 | 83 17 869 | | | 1 | Knob | Knopp | 5 |
| 0050 | 5 | 83 38 766 | | | 1 | Ring | Ring | 5 |
| 0060 | 6 | 93 31 521 | | | 1 | Button | Knapp | 4 |
| 0070 | 7 | 83 75 925 | | | 1 | Ring | Ring | 3 |
| 0080 | 8 | 93 49 564 | | | 1 | Lock nut | Låsmutter | 5 |
| 0085 | 9 | | | See page 3A-071, 2-C24 | | Contact | Kontakt | |
| 0090 | 10 | 80 59 420 | | | 3 | Screw | Skruv | 5 |
| 0100 | 11 | 79 69 975 | | | 3 | Washer | Bricka | 5 |
| 0110 | 12 | 33 01 631 | | | 1 | Spring | Fjäder | 5 |
| 0120 | 13 | 93 18 197 | | | 1 | Needle bearing | Nållager | 6 |
| 0130 | 15 | 93 00 211 | | | 1 | Catch | Spärr | 5 |
| 0140 | 16 | 79 56 105 | | | 2 | Pin | Stift | 5 |
| 0150 | 17 | *83 75 404* | | NLS | 1 | Cover | Lock | 6 |
| 0160 | 18 | 93 20 987 | | See page 4-079, 3-K08 | 1 | Gear | Kuggdrev | 3 |
| 0170 | 19 | 93 42 338 | | | 1 | Stay | Stag | 3 |
| 0180 | 20 | 93 42 353 | | US, CA, JP | 1 | Pin | Stift | 4 |
| 0190 | 21 | 93 42 734 | | | 1 | Pin | Tapp | 5 |
| 0200 | 21A | 93 42 361 | | US, CA, JP | 1 | Pin | Stift | 4 |
| 0210 | 21B | *93 42 346* | | 39), US, CA, JP NLS - USE 7549256 | 1 | Brace | Bygel | 3 |
| 0220 | 21B | 75 49 256 | | 40), US, CA, JP | 1 | Brace | Bygel | 3 |
| 0230 | 22 | 75 42 913 | | | 1 | Spring | Fjäder | 3 |
| 0240 | 24 | *83 78 275* | | NLS - USE 9320987 | 1 | Pin | Tapp | 5 |
| 0250 | 25 | 80 29 985 | | | 1 | Washer | Bricka | 5 |
| 0260 | 26 | *79 65 825* | S | NLS - USE 7982945 | 1 | O-ring | O-ring | 2 |
| 0270 | 27 | 83 74 555 | | | 1 | Plug | Propp | 5 |
| 0280 | 28 | *83 15 582* | | NLS - USE 8283798 | 1 | Lock cylinder | Låscylinder | |
| 0290 | 29 | 80 59 487 | | | 3 | Screw | Skruv | 5 |
| 0300 | 30 | 93 61 162 | | | 3 | Nut | Mutter | 5 |
| 0310 | 31 | 79 33 823 | | | 3 | Washer | Bricka | 5 |
| 0320 | 32 | 83 73 714 | | | 3 | Nut | Mutter | 5 |
| 0330 | 33 | 93 22 785 | | | 2 | Screw | Skruv | 5 |
| 0340 | 34 | 93 24 708 | | | 1 | Screw | Skruv | 5 |
| 0350 | 36 | 79 69 223 | | | 1 | Screw | Skruv | 5 |
| 0360 | 37 | 93 39 243 | | | 1 | Gear selector | Växelväljare | 3 |
| 0370 | 41 | 93 01 698 | | | 1 | Bracket | Fäste | 3 |
| 0380 | 42 | 93 00 203 | | | 1 | Nipple | Nippel | 3 |
| 0390 | 43 | 93 18 908 | | | 1 | Screw | Skruv | 5 |
| 0400 | 44 | 79 36 016 | | | 1 | E-circlip | Spårryttare | 5 |
| 0410 | 45 | 79 35 984 | | | 1 | E-circlip | Spårryttare | 5 |
| 0420 | 46 | 79 34 771 | | | 2 | Screw | Skruv | 5 |
| 0430 | 47 | 79 33 823 | | | 2 | Washer | Bricka | 5 |
| 0440 | 48 | 79 34 318 | | | 2 | Screw | Skruv | 5 |
| 0450 | 49 | *79 33 807* | | NLS | 2 | Washer | Bricka | 5 |
| 0460 | 50 | 93 16 977 | | -1987 | 1 | Gaiter | Damask | 5 |
| 0470 | 50 | 75 49 165 | | 1988- | 1 | Gaiter | Damask | 5 |
| 0480 | 56 | | | See page 3B-017, 6-A18 | | Cover | Kåpa | |
| 0490 | 57 | | | See page 8B-017, 6-A18 | | Cover | Kåpa | |
| 0500 | 63 | 79 51 353 | | | 2 | Lock ring | Låsring | 5 |

39. Ch. --H2020197, --H3018272, --H7037399
40. Ch. H2020198--, H3018273--, H7037400--



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-F02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



4 GROUP INDEX



| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |


Complete set
# 3-K06
## *Transmission*


Satser
## *Kraftöverföring*

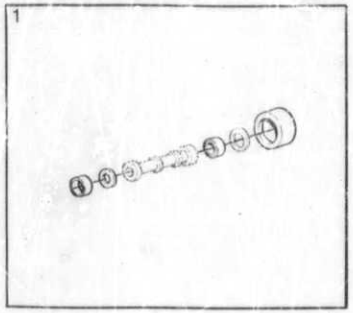


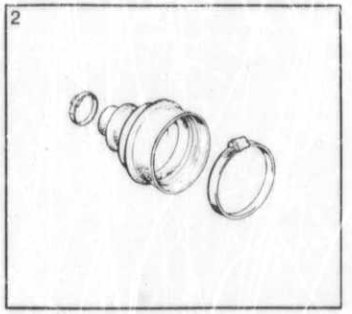
R 8922-900
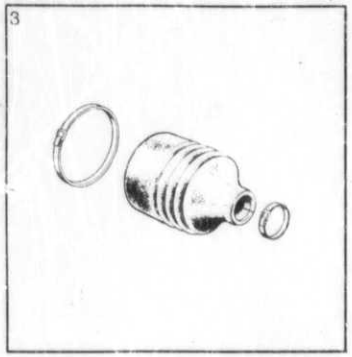
| 1000 | Pos | Part No/Art. nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 89 93 156 | | MASTER CYLINDER, CLUTCH | X | Repair kit | Reparationssats | 1 |
| 0020 | | 89 03 304 | | | 1 | .Gasket | .Packning | |
| 0030 | | 89 45 248 | | | 1 | .Gasket | .Packning | 5 |
| 0040 | | *73 13 182* | | NLS | 1 | .Washer | .Bricka | |
| 0050 | | 89 45 255 | | | 1 | .Washer | .Bricka | 5 |
| 0060 | | 89 40 769 | | | 1 | .Gasket | .Packning | 5 |
| 0070 | | 73 13 240 | | | 1 | .Seal | .Tätning | 6 |
| 0080 | | | | | | | | |
| 0085 | 2 | 89 93 073 | | 9,10) INNER UNIVERSAL JOINT | X | Bellows kit | Bälgsats | 3 |
| 0090 | | | | | | | | |
| 0100 | | 89 41 270 | | 1) | 1 | .Bellows | .Bälg | 3 |
| 0110 | | 79 70 163 | | | 1 | .Hose clamp | .Slangklamma | 5 |
| 0120 | | 70 48 465 | | | 1 | .Band iron | .Bandjärn | 5 |
| 0130 | | 70 48 473 | | | 1 | .Clamp | .Klammer | 3 |
| 0140 | | | | | | | | |
| 0145 | 2 | *89 61 872* | | 11,12) | X | Bellows kit | Bälgsats | 3 |
| 0150 | | | | B202 TURBO AND CARS WITH A | X | | | |
| 0160 | | | | INNER UNIVERSAL JOINT | | | | |
| 0170 | | | | NLS - USE 8993636 | | | | |
| 0170 | | | | | | | | |
| 0180 | | 89 55 007 | | 1) | 1 | .Bellows | .Bälg | 3 |
| 0190 | | 71 67 117 | | | 2 | .Band iron | .Bandjärn | 3 |
| 0200 | | 70 48 473 | | | 2 | .Clamp | .Klammer | 3 |
| 0210 | | | | | | | | |
| 0220 | 3 | 89 93 792 | | -1987 | X | Rubber bellows kit | Gummibälgsats | 2 |
| 0230 | | | | OUTER UNIVERSAL JOINT | | | | |
| 0240 | | 41 99 873 | | 1) | 1 | .Bellows | .Bälg | 6 |
| 0250 | | 41 95 822 | | | 2 | .Clamp | .Klämma | 3 |
| 0260 | | 40 00 667 | | | 2 | .Clamp | .Klämma | 5 |
| 0270 | | | | | | | | |
| 0280 | 3 | *89 61 864* | | 1988, OUTER UNIV. JOINT | X | Bellows kit | Bälgsats | 2 |
| 0280 | | | | NLS - USE 8993628 | | | | |
| 0290 | | *89 53 135* | | 1) NLS - USE 4002747 | 1 | .Bellows | .Bälg | 2 |
| 0300 | | 71 67 117 | | | 2 | .Band iron | .Bandjärn | 3 |
| 0310 | | 70 48 473 | | | 2 | .Clamp | .Klammer | 3 |
| 0320 | | | | | | | | |
| 0330 | 3 | 89 93 628 | | 1989-, OUTER UNIV. JOINT | X | Bellows kit | Bälgsats | 2 |
| 0340 | | 40 02 747 | | 1) | 1 | .Bellows | .Bälg | 2 |
| 0350 | | 71 67 117 | | | 2 | .Band iron | .Bandjärn | 3 |
| 0360 | | 70 48 473 | | | 2 | .Clamp | .Klammer | 3 |
| 0370 | | | | | | | | |
| 0380 | 4 | *83 80 214* | | NLS | X | Clutch lining | Lamellbelägg | |
| 0390 | | *83 07 688* | | 1) NLS | 2 | .Clutch lining | .Lamellbelägg | 5 |
| 0400 | | *83 00 469* | | NLS | 20 | .Rivet | .Nit | 5 |
| 0410 | | | | | | | | |
| 0420 | 5 | 87 81 072 | | SLAVE CYLINDER | X | Sealing kit | Tätningssats | 1 |
| 0430 | | 87 11 806 | | | 1 | .O-ring | .O-ring | 2 |
| 0440 | | 87 22 118 | | 1) | 1 | .Seal | .Tätning | 3 |
| 0450 | | 87 22 126 | | 1) | 1 | .Seal | .Tätning | 3 |
| 0460 | | | | | | | | |
| 0470 | 6 | 93 35 563 | | A | X | Gasket kit | Packningsats | 2 |
| 0480 | | 93 34 780 | | | 1 | .Gasket | .Packning | 3 |
| 0490 | | 93 35 407 | | | 1 | .Seal | .Tätning | 3 |
| 0500 | | 93 35 423 | | | 1 | .Seal | .Tätning | 3 |
| 0510 | | 93 35 456 | | | 1 | .Gasket | .Packning | 3 |
| 0520 | | *87 08 398* | | NLS - USE 4118527 | 1 | .Washer | .Bricka | 4 |

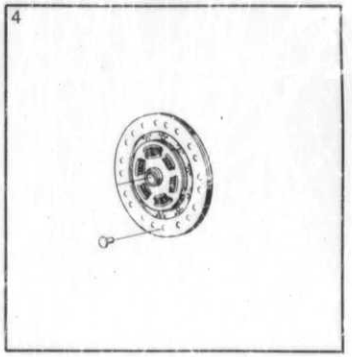1. Not as separate spare part. Ej som separat reservdel.
9. 4-speed Ch.-G2012046.-G3007249.
10. 5-speed Ch.-G2009922.-G3007065.-G7011597.
11. 4-speed Ch.G2012047-,G3007250-.
12. 5-speed Ch.G2009923-,G3007066-,G7011598-.

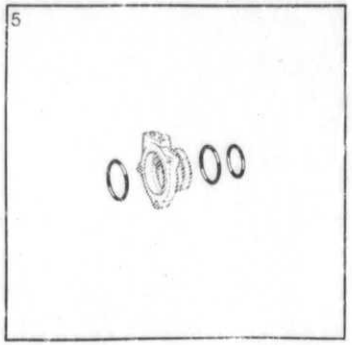

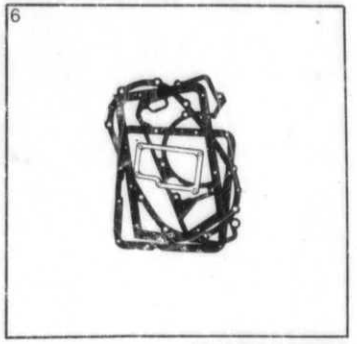MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

Complete set
# 3--K08
## *Transmission*


Satser
## *Kraftöverföring*

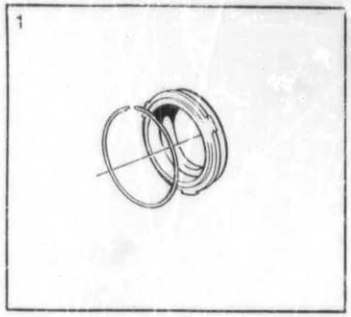


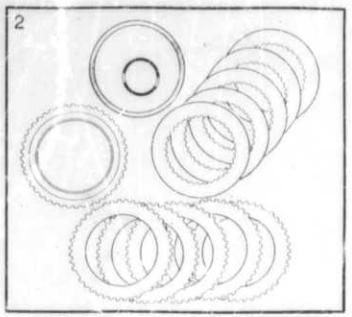






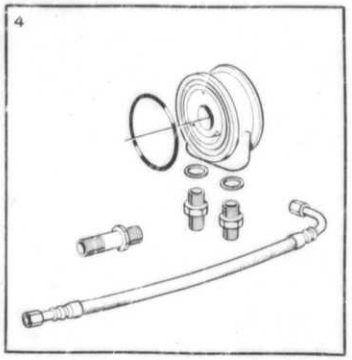

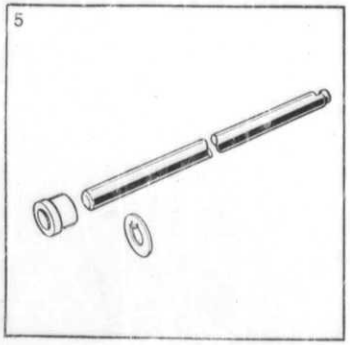

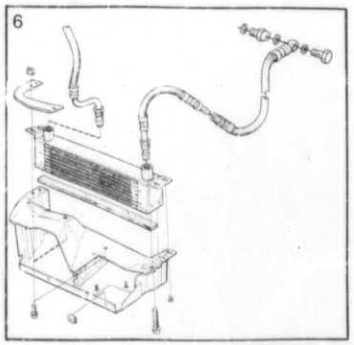R 8923-900

| 1050 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 93 45 984 | | A | X | Free wheel | Frihjul | 6 |
| 0020 | | 87 05 162 | | 1) | 1 | .Free wheel race | .Frihjulsring | |
| 0030 | | 87 05 170 | | | 1 | .Locking wire | .Låstråd | |
| 0040 | | | | | | | | |
| 0050 | 2 | 93 44 110 | | A, REAR | X | Disc kit | Lamellsats | 2 |
| 0060 | | 93 44 078 | | 1) | 4 | .Clutch disc | .Lamell | |
| 0070 | | 87 06 624 | | 1) | 2 | .Clutch disc | .Lamell | |
| 0080 | | 87 06 632 | | 1) | 2 | .Clutch disc | .Lamell | |
| 0090 | | *93 23 361* | | 1) NLS | 2 | .Clutch disc | .Lamell | 5 |
| 0100 | | 83 24 139 | | 1) | 1 | .Clutch disc | .Lamell | |
| 0110 | | 87 06 616 | | | 1 | .Seal | .Tätning | 3 |
| 0120 | | 87 06 129 | | | 1 | .O-ring | .O-ring | 2 |
| 0130 | | 93 19 153 | | 1) | 1 | .Washer | .Bricka | 5 |
| 0140 | | | | | | | | |
| 0150 | 2 | 93 35 472 | | A, REAR | X | Disc kit | Lamellsats | 2 |
| 0160 | | 93 44 078 | | 1) | 5 | .Clutch disc | .Lamell | |
| 0170 | | 87 06 624 | | 1) | 3 | .Clutch disc | .Lamell | |
| 0180 | | 87 06 632 | | 1) | 3 | .Clutch disc | .Lamell | |
| 0190 | | *93 23 361* | | 1) NLS | 2 | .Clutch disc | .Lamell | 5 |
| 0200 | | 83 24 139 | | 1) | 1 | .Clutch disc | .Lamell | |
| 0210 | | 87 06 616 | | | 1 | .Seal | .Tätning | 3 |
| 0220 | | 87 06 129 | | | 1 | .O-ring | .O-ring | 2 |
| 0230 | | 93 19 153 | | 1) | 1 | .Washer | .Bricka | 5 |
| 0240 | | | | | | | | |
| 0250 | 3 | 93 20 987 | | A, GEAR LEVER LOCK | X | Gear | Kuggdrev | 3 |
| 0260 | | *83 25 797* | | NLS - USE 9320987 | 1 | .Gear | .Kugghjul | |
| 0270 | | *93 30 440* | | NLS | 1 | .Drive gear | .Drev | |
| 0280 | | 75 48 910 | | | 1 | .Lock tab | .Låstunga | 6 |
| 0290 | | 93 42 734 | | | 1 | .Pin | .Tapp | 5 |
| 0300 | | *83 78 275* | | NLS - USE 9320987 | 1 | .Pin | .Tapp | 5 |
| 0310 | | *83 75 974* | | NLS - USE 7542913 | 1 | .Spring | .Fjäder | |
| 0320 | | 79 51 353 | | | 1 | .Lock ring | .Låsring | 5 |
| 0330 | | | | | | | | |
| 0340 | 3 | 93 37 445 | | M, GEAR LEVER LOCK | X | Gear | Kuggdrev | 5 |
| 0350 | | *83 25 797* | | NLS - USE 9320987 | 1 | .Gear | .Kugghjul | |
| 0360 | | *93 30 440* | | NLS | 1 | .Drive gear | .Drev | |
| 0370 | | 93 47 758 | | | 1 | .Lock tab | .Låstunga | |
| 0380 | | 93 42 734 | | | 1 | .Pin | .Tapp | 5 |
| 0390 | | *83 78 275* | | NLS - USE 9320987 | 1 | .Pin | .Tapp | 5 |
| 0400 | | *83 75 974* | | NLS - USE 7542913 | 1 | .Spring | .Fjäder | |
| 0410 | | 79 51 353 | | | 2 | .Lock ring | .Låsring | 5 |
| 0420 | | | | | | | | |
| 0430 | 4 | *93 20 268* | | TRANSMISSION COOLING INTO ENGINE COOLING (WATER) NLS | X | Conversion kit | Konverteringssats | 3 |
| 0440 | | | | | | | | |
| 0450 | | | | | | | | |
| 0460 | | 93 01 425 | | | 1 | .Hydraulic hose | .Hydraulslang | 4 |
| 0470 | | 83 14 395 | | | 2 | .Seal | .Tätning | 4 |
| 0480 | | 93 03 678 | | | 2 | .Nipple | .Nippel | 5 |
| 0490 | | 79 67 912 | | | 1 | .O-ring | .O-ring | 2 |
| 0500 | | 83 14 445 | | | 1 | .Adapter | .Adapter | 5 |
| 0510 | | 83 14 452 | | | 1 | .Screw | .Skruv | 5 |
| 0520 | | | | | | | | |
| 0530 | 5 | 93 21 241 | | 4-SPEED | X | Countershaft | Mellanaxel | 6 |
| 0540 | | 87 11 509 | | | 1 | .Shaft | .Axel | 5 |
| 0550 | | 87 11 327 | | | 1 | .Thrust washer | .Tryckbricka | 4 |
| 0560 | | 87 12 325 | | | 1 | .Thrust washer | .Tryckbricka | 4 |
| 0570 | | | | | | | | |
| 0580 | 5 | 93 37 437 | | 5-SPEED | X | Countershaft | Mellanaxel | 6 |
| 0590 | | 87 12 630 | | | 1 | .Shaft | .Axel | 6 |
| 0600 | | 87 18 645 | | | 1 | .Thrust washer | .Tryckbricka | 4 |
| 0610 | | 87 12 887 | | | 1 | .Thrust washer | .Tryckbricka | 4 |
| 0620 | | | | | | | | |

1. Not as separate spare part. Ej som separat reservdel.




MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |


# 3-K10

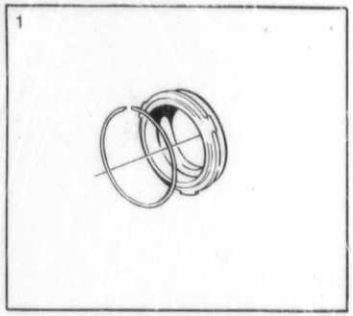


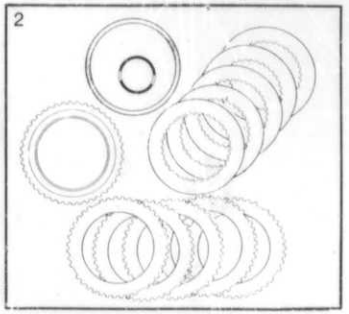






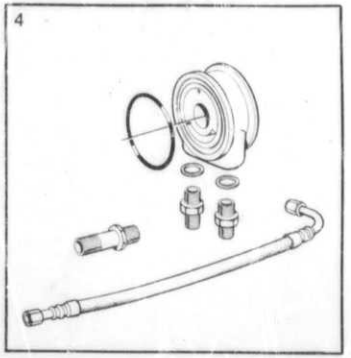

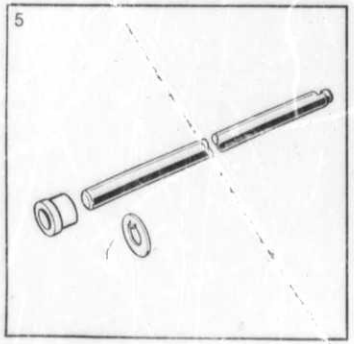

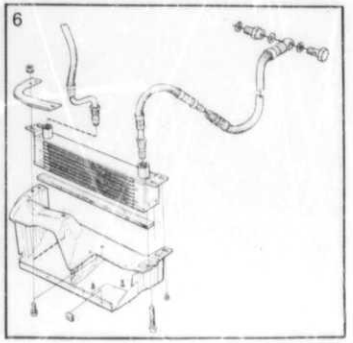R 8923-900

| 1050 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0630 | 5 | 93 21 266 | | 5-SPEED | X | Countershaft | Mellanaxel | 6 |
| 0640 | | 87 12 630 | | | 1 | . Shaft | . Axel | 6 |
| 0650 | | 87 12 887 | | | 1 | . Thrust washer | . Tryckbricka | 4 |
| 0660 | | | | | | | | |
| 0670 | 6 | 75 40 297 | | 27), A, ME, FE AND B202 | X | Oil cooler | Oljekylare | 4 |
| 0680 | | 75 40 289 | | | 1 | . Oil cooler | . Oljekylare | 4 |
| 0690 | | 75 41 899 | | | 1 | . Protecting casing | . Skyddskåpa | |
| 0700 | | 75 40 313 | | | 1 | . Stiffening bar | . Förstyvningsskena | 5 |
| 0710 | | 75 43 655 | | | 1 | . Hydraulic hose | . Hydraulslang | 3 |
| 0720 | | 75 40 172 | | | 1 | . Oil hose | . Oljeslang | 3 |
| 0730 | | 75 43 663 | | | 1 | . Hydraulic hose | . Hydraulslang | 4 |
| 0740 | | *93 01 532* | | NLS - USE 4374211 | 1 | . Banjo screw | . Banjoskruv | 5 |
| 0750 | | 89 81 961 | | | 3 | . Seal | . Tätning | 5 |
| 0760 | | 79 22 891 | | | 2 | . Screw | . Skruv | 5 |
| 0770 | | 79 74 694 | | | 1 | . Screw | . Skruv | 5 |
| 0780 | | 79 71 658 | | | 4 | . Nut | . Mutter | 5 |
| 0790 | | 79 74 447 | | | 1 | . Screw | . Skruv | 5 |
| 0800 | | 79 71 880 | | | 3 | . Tensioning band | . Spännband | 4 |
| 0810 | | 75 40 032 | | | 1 | . Nipple | . Nippel | 5 |
| 0820 | | 75 46 955 | | | 1 | . Seal | . Tätning | 4 |
| 0830 | | *93 24 591* | | NLS - USE 9364795 | 1 | . Hose | . Slang | 3 |
| 0840 | | 75 41 428 | | | 2 | . Clip | . Clips | 5 |
| 0850 | | 94 81 110 | | | 1 | . Tube | . Rör | 5 |
| 0860 | | 79 75 220 | | | 1 | . Nut | . Mutter | 5 |
| 0870 | | 93 44 524 | | | 1 | . Bracket | . Hållare | 5 |
| 0880 | | 79 70 106 | | | 2 | . Hose clamp | . Slangklamma | 5 |
| 0890 | | 92 91 139 | | RH | 1 | . Frame | . Ram | 5 |
| 0900 | | 79 77 036 | | | 5 | . Screw | . Skruv | 5 |
| 0910 | | 79 68 555 | | | 2 | . Clip nut | . Clipsmutter | 3 |
| 0920 | | 88 17 447 | | | 1 | . Assembly instruction | . Monteringsanvisning | |

27. Ch. -H2012507, -H7018677



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



4 GROUP INDEX



| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |


Complete set
# 3-K12
## *Transmission*


Satser
## *Kraftöverföring*

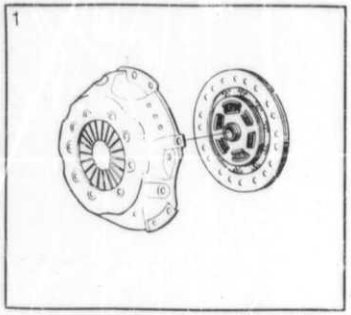


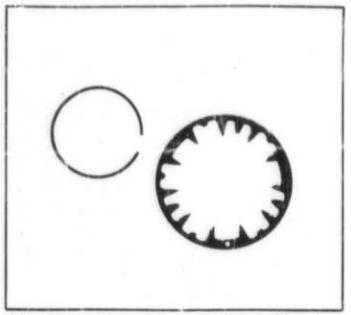

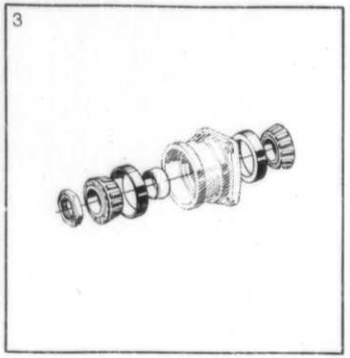
R 8924-900
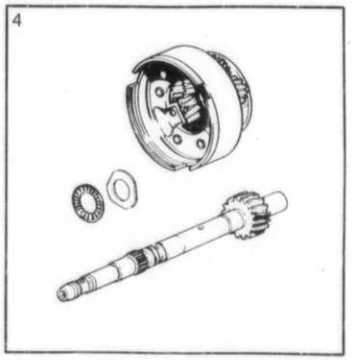
| 1100 | Pos | Part No/Art.nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *88 18 080* | | 44), 4-SPEED NLS - USE 8818098 | X | Clutch kit | Kopplingssats | 6 |
| 0020 | | *87 04 116* | | NLS - USE 8728123 | 1 | .Pressure plate | .Tryckskiva | 2 |
| 0030 | | *83 07 498* | | NLS - USE 8722324 | 1 | .Clutch disc | .Lamell | 2 |
| 0040 | | | | | | | | |
| 0050 | 1 | 88 18 098 | | 45), 4 AND 5-SPEED | X | Clutch kit | Kopplingssats | 6 |
| 0060 | | 87 28 123 | | | 1 | .Pressure plate | .Tryckskiva | 2 |
| 0070 | | 87 22 324 | | | 1 | .Clutch disc | .Lamell | 2 |
| 0080 | | | | | | | | |
| 0090 | 1 | *88 18 114* | | 44), 5-SPEED, TURBO NLS - USE 8781239 | X | Clutch kit | Kopplingssats | 6 |
| 0100 | | 87 28 123 | | | 1 | .Pressure plate | .Tryckskiva | 2 |
| 0110 | | *87 15 260* | | NLS - USE 8725517 | 1 | .Clutch disc | .Lamell | 2 |
| 0120 | | | | | | | | |
| 0130 | 1 | 87 81 239 | | 45), 5-SPEED, TURBO | X | Clutch kit | Kopplingssats | 6 |
| 0140 | | 87 28 123 | | | 1 | .Pressure plate | .Tryckskiva | 2 |
| 0150 | | 87 25 517 | | | 1 | .Clutch disc | .Lamell | 2 |
| 0160 | | | | | | | | |
| 0170 | 2 | 87 81 155 | | | X | Guide ring | Styrring | 4 |
| 0180 | | 87 04 033 | | 1) | 1 | .Guide ring | .Styrring | 4 |
| 0190 | | 87 03 993 | | 1) | 1 | .Lock ring | .Låsring | 4 |
| 0200 | | | | | | | | |
| 0210 | 3 | 87 80 454 | | -1988, M | X | Pinion bearing kit | Pinjonglagersats | 5 |
| 0220 | | 87 03 530 | | | 1 | .Sleeve | .Hylsa | 4 |
| 0230 | | 87 02 359 | | | 1 | .Nut | .Mutter | 3 |
| 0235 | | 87 29 063 | | | 2 | .Roller bearing | .Rullager | 3 |
| 0240 | | 87 29 071 | | | 2 | .Bearing race | .Lagerbana | 3 |
| 0250 | | | | | | | | |
| 0260 | 4 | 93 64 613 | | | X | Planetary gear kit | Planetväxelsats | 6 |
| 0270 | | | | | | | | |
| 0280 | 5 | 75 40 891 | | | X | Thrust washer kit | Axiallagersats | 5 |
| 0290 | | | | | | | | |
| 0300 | 6 | 75 42 673 | | | X | Sealing kit | Tätningssats | 3 |
| 0310 | | | | | | | | |

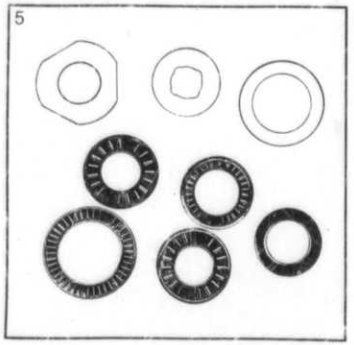1. Not as separate spare part. Ej som separat reservdel.
44. Asbestos Asbest
45. Asbestos free Asbestfri

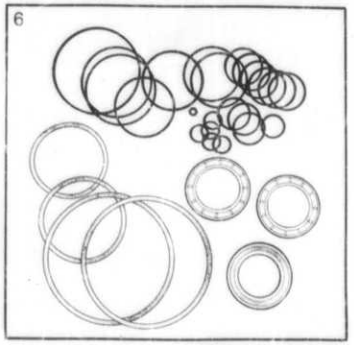


MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

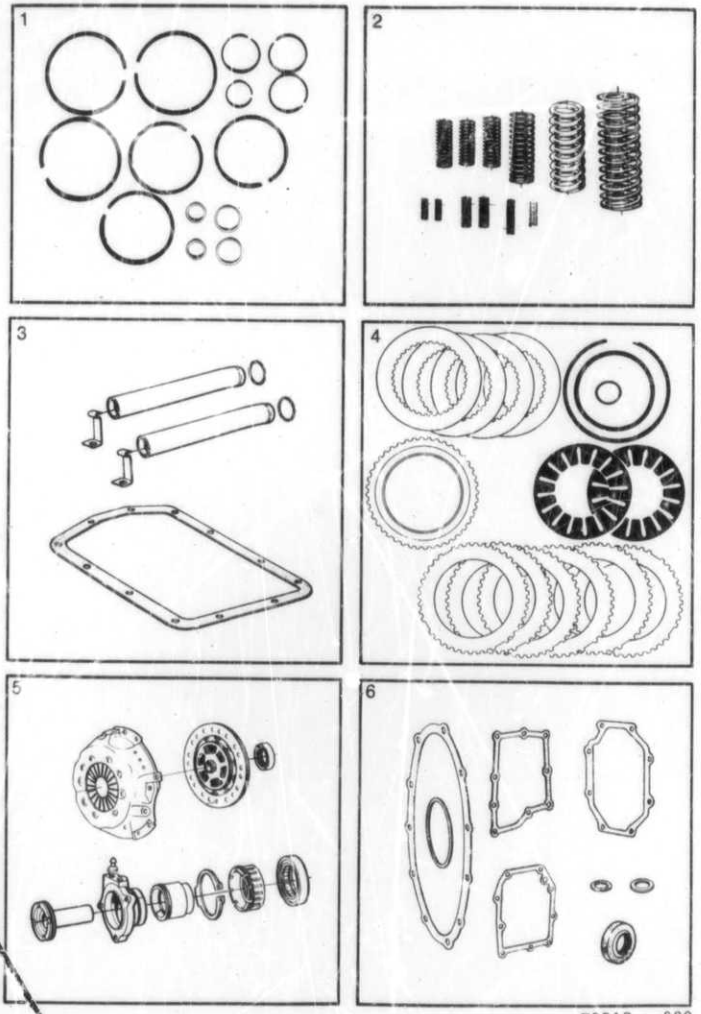


F2517 - 900

Complete set
# 3-K14
## *Transmission*

Satser
## *Kraftöverföring*

| 1150 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 93 65 172 | | | X | Oil ring set | Oljeringsats | 3 |
| 0020 | | | | | | | | |
| 0030 | 2 | 75 42 681 | | VALVE BODY | X | Spring kit | Fjädersats | 5 |
| 0040 | | | | | | | | |
| 0050 | 2 | *75 42 699* | | VALVE BODY NLS | X | Spring kit | Fjädersats | 5 |
| 0060 | | | | | | | | |
| 0070 | 3 | 75 11 470 | | | X | Pipe set | Rörsats | 6 |
| 0080 | | | | | | | | |
| 0090 | 4 | 75 43 051 | | FRONT | X | Disc kit | Lamellsats | 2 |
| 0100 | | | | | | | | |
| 0110 | 5 | 87 81 346 | | 45), 5-SPEED, TURBO FOR US | X | Clutch kit | Kopplingssats | 6 |
| 0120 | | | | | | | | |
| 0130 | | 87 10 881 | | | 1 | .Seal | .Tätning | 2 |
| 0140 | | 87 21 995 | | | 1 | .Release bearing | .Urtrampningslager | 2 |
| 0150 | | *87 22 209* | | NLS - USE 8729840 | 1 | .Slave cylinder | .Slavcylinder | 2 |
| 0160 | | 87 25 517 | | | 1 | .Clutch disc | .Lamell | 2 |
| 0170 | | 87 28 123 | | | 1 | .Pressure plate | .Tryckskiva | 2 |
| 0180 | | | | | | | | |
| 0190 | 5 | 88 18 148 | | 45), I FOR US | X | Clutch kit | Kopplingssats | 6 |
| 0200 | | 87 10 881 | | | 1 | .Seal | .Tätning | 2 |
| 0210 | | 87 21 995 | | | 1 | .Release bearing | .Urtrampningslager | 2 |
| 0220 | | *87 22 209* | | NLS - USE 8729840 | 1 | .Slave cylinder | .Slavcylinder | 2 |
| 0230 | | 87 22 324 | | | 1 | .Clutch disc | .Lamell | 2 |
| 0240 | | 87 28 123 | | | 1 | .Pressure plate | .Tryckskiva | 2 |
| 0340 | | | | | | | | |
| 0350 | 6 | 74 96 003 | | | X | Gasket kit | Packningsats | 5 |
| 0360 | | 81 09 647 | | | 1 | .O-ring | .O-ring | 2 |
| 0370 | | *83 44 335* | | NLS - USE 8730764 | 1 | .Seal | .Tätning | 4 |
| 0382 | | 87 31 804 | | | 2 | .Sealing collar | .Tätningskrage | 5 |
| 0390 | | 87 11 707 | | | 1 | .O-ring | .O-ring | 5 |
| 0400 | | 87 13 216 | | | 1 | .Gasket | .Packning | |
| 0410 | | 87 17 415 | | | 1 | .Gasket | .Packning | 4 |
| 0420 | | 87 18 439 | | | 1 | .Gasket | .Packning | 3 |
| 0430 | | 87 24 874 | | | 1 | .Seal | .Tätning | 4 |
| 0440 | | *87 25 012* | | NLS - USE 8732380 | 1 | .Gasket | .Packning | 4 |
| 0450 | | *87 25 020* | | NLS - USE 8732398 | 1 | .Gasket | .Packning | 4 |
| 0460 | | 87 28 156 | | | 2 | .O-ring | .O-ring | 2 |
| 0470 | | 87 28 651 | | | 1 | .Gasket | .Packning | 3 |
| 0480 | | 87 28 677 | | | 1 | .Gasket | .Packning | 3 |
| 0490 | | 93 61 647 | | | 1 | .Washer | .Bricka | 5 |

45. Asbestos free Asbestfri



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


4 GROUP INDEX


| | |
|---|---|
| Clutch | 3-H06 |
| Clutch control | 3-H08 |
| Gear box, manual | 3-H10 |
| Gear box control, manual | 3-J02 |
| Gear box, automatic | 3-J08 |
| Gear box control, automatic | 3-K04 |
| Complete sets | 3-K06 |

# 4-A02



Brakes
Bromsar
Frenos

TABLE OF CONTENTS


| | | | |
|---|---|---|---|
| **Front wheel brake** | | | |
| Front wheel brake -1987 | | 5 : 5 | 4-A06 |
| Front wheel brake 1988- | | 5 : 7 | 4-A08 |
| **Rear wheel brake** | | | |
| Rear wheel brake -1987 | | 5 : 9 | 4-A10 |
| Rear wheel brake 1988- | | 5 : 11 | 4-A12 |
| **Footbrake system** | | | |
| Master cylinder and power brake unit | | 5 : 13 | 4-A14 |
| Hydraulic unit ABS | | 5 : 15 | 4-A16 |
| Brake lines | | 5 : 17 | 4-A18 |
| Brake lines ABS, front | | 5 : 19 | 4-A20 |
| Brake lines ABS, rear | | 5 : 21 | 4-A22 |
| Brake operation | | 5 : 23 | 4-A24 |
| **Parking brake system** | | | |
| Parking brake system -1987 | | 5 : 25 | 4-B02 |
| Parking brake system 1988- | | 5 : 27 | 4-B04 |
| **Complete sets** | | | |
| Brakes | | 5 : 29 | 4-B06 |




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


5 GROUP INDEX


| | |
|---|---|
| Front wheel brake | 4-A06 |
| Rear wheel brake | 4-A10 |
| Footbrake system | 4-A14 |
| Parking brake system | 4-B02 |
| Complete sets | 4-B06 |

INNEHÅLLSFÖRTECKNING


| | | |
|---|---|---|
| **Framhjulsbroms** | | |
| Framhjulsbroms -1987 | 5 : 5 | 4-A06 |
| Framhjulsbroms 1988- | 5 : 7 | 4-A08 |
| **Bakhjulsbroms** | | |
| Bakhjulsbroms -1987 | 5 : 9 | 4-A10 |
| Bakhjulsbroms 1988- | 5 : 11 | 4-A12 |
| **Fotbromssystem** | | |
| Huvudcylinder och vacuumservo | 5 : 13 | 4-A14 |
| Hydraulenhet ABS | 5 : 15 | 4-A16 |
| Bromsledningar | 5 : 17 | 4-A18 |
| Bromsledningar ABS, fram | 5 : 19 | 4-A20 |
| Bromsledningar ABS, bak | 5 : 21 | 4-A22 |
| Bromsmanövrering | 5 : 23 | 4-A24 |
| **Parkeringsbromssystem** | | |
| Parkeringsbromssystem -1987 | 5 : 25 | 4-B02 |
| Parkeringsbromssystem 1988- | 5 : 27 | 4-B04 |
| **Satser** | | |
| Bromsar | 5 : 29 | 4-B06 |


SUMARIO


| | | |
|---|---|---|
| **Freno del** | | |
| Freno del -1987 | 5 : 5 | 4-A06 |
| Freno del 1988- | 5 : 7 | 4-A08 |
| **Freno tras** | | |
| Freno tras -1987 | 5 : 9 | 4-A10 |
| Freno tras 1988- | 5 : 11 | 4-A12 |
| **Sistema de freno de pie** | | |
| Cylindro principal y servoasistencia | 5 : 13 | 4-A14 |
| Unidad hydraulico ABS | 5 : 15 | 4-A16 |
| Conductos de freno | 5 : 17 | 4-A18 |
| Conductos de freno ABS, Del | 5 : 19 | 4-A20 |
| Conductos de freno ABS, Tras | 5 : 21 | 4-A22 |
| Mando de freno de pie | 5 : 23 | 4-A24 |
| **Sistema de freno de mano** | | |
| Sistema de freno de mano -1987 | 5 : 25 | 4-B02 |
| Sistema de freno de mano 1988- | 5 : 27 | 4-B04 |
| **Juegos completos** | | |
| Frenos | 5 : 29 | 4-B06 |




MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


5 GROUP INDEX


| | |
|---|---|
| Front wheel brake | 4-A06 |
| Rear wheel brake | 4-A10 |
| Footbrake system | 4-A14 |
| Parking brake system | 4-B02 |
| Complete sets | 4-B06 |

# 4-A06 Front wheel brake -1987

# Framhjulsbroms -1987

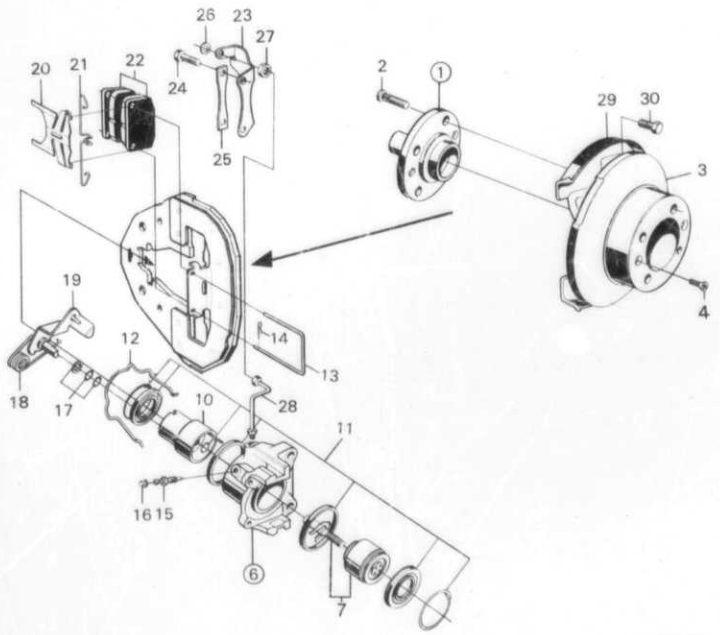


R 8213–900

| 0100 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | *89 42 773* | | 3) NLS - USE 9103607 | 2 | Wheel hub | Hjulnav | 4 |
| 0025 | 1 | 91 03 607 | | 4) | 2 | Wheel hub | Hjulnav | 4 |
| 0030 | 1 | *89 90 525* | | 3,5) NLS - USE 9103623 | 2 | Wheel hub | Hjulnav | 4 |
| 0045 | 1 | 91 03 623 | | 4,5) | 2 | Wheel hub | Hjulnav | 4 |
| 0050 | 2 | 89 07 941 | | | 8 | .Wheel screw | .Hjulbult | 2 |
| 0060 | 3 | 89 41 981 | | | 2 | Brake disc | Bromsskiva | 3 |
| 0070 | 3 | 89 88 602 | | 5) | 2 | Brake disc | Bromsskiva | 3 |
| 0090 | 4 | 80 55 998 | | | 4 | Screw | Skruv | 5 |
| 0100 | 6 | *89 85 871* | | 700), LH NLS - USE 7874720 | 1 | Brake housing | Bromshus | 4 |
| 0110 | 6 | *89 85 889* | | 700), RH NLS - USE 7874738 | 1 | Brake housing | Bromshus | 4 |
| 0120 | 6 | 91 02 807 | | 2,700) LH | 1 | Brake housing | Bromshus | 4 |
| 0140 | 6 | 91 02 815 | | 2,700) RH | 1 | Brake housing | Bromshus | 4 |
| 0160 | 6 | 89 90 566 | | 5,700) LH | 1 | Brake housing | Bromshus | 4 |
| 0170 | 6 | 89 90 624 | | 5,700) RH | 1 | Brake housing | Bromshus | 4 |
| 0200 | 6 | 91 03 458 | | 2,5,700) LH | 1 | Brake housing | Bromshus | 4 |
| 0220 | 6 | 91 03 466 | | 2,5,700) RH | 1 | Brake housing | Bromshus | 4 |
| 0280 | 7 | 91 03 474 | | See page 5-033, 4-B10 | 2 | .Piston kit | .Kolvsats | 4 |
| 0290 | 10 | 89 31 933 | | LH | 1 | .Brake piston | .Bromskolv | 3 |
| 0300 | 10 | 89 31 941 | | RH | 1 | .Brake piston | .Bromskolv | 3 |
| 0310 | 11 | 89 93 255 | | See page 5-031, 4-B08 | 2 | .Gasket kit | .Packningsats | 4 |
| 0320 | 12 | 89 41 965 | | | 2 | .Spring | .Fjäder | 3 |
| 0330 | 13 | 89 90 194 | | | 2 | .U-pin | .U-pinne | 1 |
| 0340 | 13 | 91 00 108 | | 5) | 2 | .U-pin | .U-pinne | 1 |
| 0350 | 14 | 89 25 067 | | | 2 | .Lock needle | .Låsnål | 5 |
| 0360 | 15 | 89 25 034 | | | 2 | .Bleed screw | .Luftningsskruv | 2 |
| 0370 | 16 | 89 25 042 | | | 2 | .Protecting casing | .Skyddskåpa | 3 |
| 0380 | 17 | 89 93 727 | | See page 5-031, 4-B08 | 2 | .Sealing kit | .Tätningssats | 2 |
| 0400 | 18 | 89 25 372 | | LH | 1 | .Return spring | .Returfjäder | 4 |
| 0410 | 18 | 89 25 380 | | RH | 1 | .Return spring | .Returfjäder | 4 |
| 0420 | 19 | 89 25 414 | | LH | 1 | .Lever | .Hävarm | |
| 0430 | 19 | 89 25 422 | | RH | 1 | .Lever | .Hävarm | |
| 0440 | 20 | 89 30 448 | | | 2 | Damping plate | Dämpplåt | 2 |
| 0450 | 21 | 91 03 995 | | | 2 | Damping spring | Dämpfjäder | 2 |
| 0460 | 22 | 89 93 297 | | 12) See page 5-029, 4-B06 | 1 | Brake pad kit | Bromsklotssats | 1 |
| 0480 | 22 | 40 04 123 | | 12), TURBO See page 5-029, 4-B06 | 1 | Brake pad kit | Bromsklotssats | 1 |
| 0500 | 22 | 89 93 776 | | 12,13) See page 5-029, 4-B06 | 1 | Brake pad kit | Bromsklotssats | 1 |
| 0520 | 23 | 89 26 214 | | LH | 1 | Bracket | Konsol | 6 |
| 0530 | 23 | 89 26 222 | | RH | 1 | Bracket | Konsol | 6 |
| 0540 | 24 | 89 26 198 | | | 4 | Screw | Skruv | 5 |
| 0550 | 25 | 89 38 110 | | | 2 | Lock plate | Låsplåt | 3 |
| 0560 | 26 | *79 68 480* | | NLS - USE 7933856 | 2 | Washer | Bricka | 5 |
| 0570 | 27 | *83 15 558* | | NLS - USE 7979511 | 2 | Nut | Mutter | 5 |
| 0580 | 28 | 89 26 230 | | LH | 1 | Brake pipe | Bromsrör | 4 |
| 0590 | 28 | 89 26 248 | | RH | 1 | Brake pipe | Bromsrör | 4 |
| 0600 | 29 | 89 90 517 | | | 2 | Protecting plate | Skyddsplåt | 6 |
| 0610 | 30 | 80 19 887 | | | 6 | Screw | Skruv | 5 |
| 0620 | | 78 74 548 | | See page 5-029, 4-B06 | X | Mounting kit | Monteringssats | 2 |

2. See SI 523-678, for USA see SI 05/86-847. Se SI 523-678, for USA se SI 05/86-847.
3. Ch. –H7015180
4. Ch. H7015181–
5. For cars with ventilated brake discs. For bilar med ventilerade bromsskivor.
12. See SI 500-1017 Se SI 500-1017
13. Only for cars that will be repaired in USA and Canada Endast för bilar som repareras i USA och Canada
700. Also available as exchange unit. Finns även som utbytesenhet.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


5 GROUP INDEX


| | |
|---|---|
| Front wheel brake | 4-A06 |
| Rear wheel brake | 4-A10 |
| Footbrake system | 4-A14 |
| Parking brake system | 4-B02 |
| Complete sets | 4-B06 |

# 4-A08 Front wheel brake 1988- / Framhjulsbroms 1988-

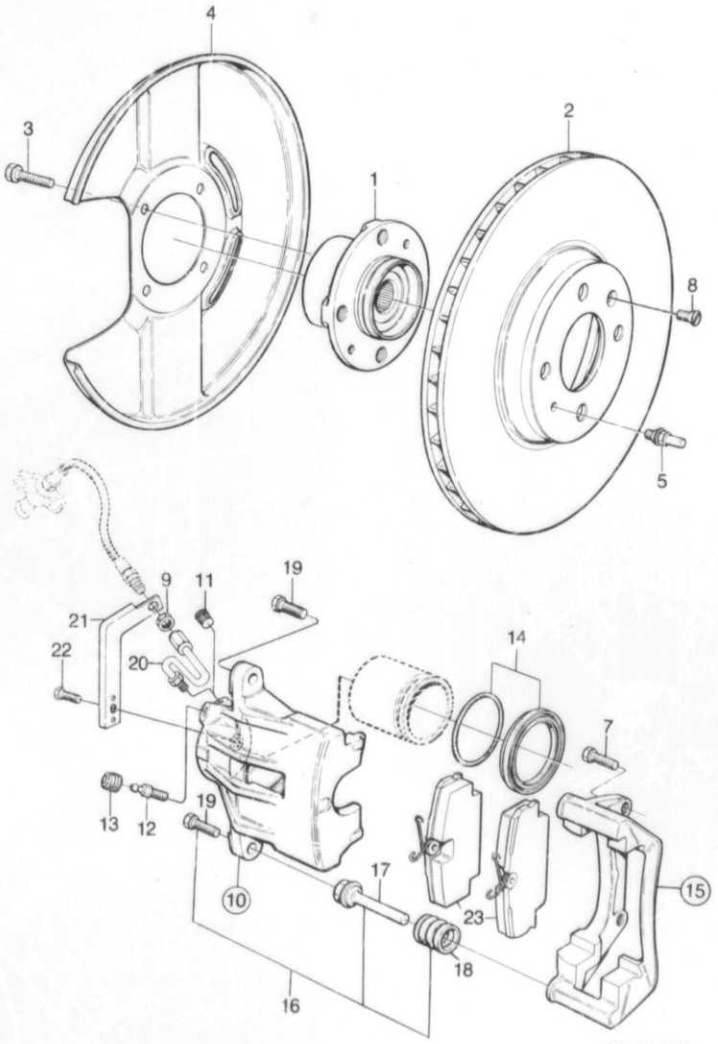


F5559 90086

| 0125 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 91 04 159 | | | 2 | Wheel hub | Hjulnav | 4 |
| 0020 | 2 | *89 70 709* | | -1988 NLS - USE 4002150 | 2 | Brake disc | Bromsskiva | 3 |
| 0025 | 2 | 40 02 150 | | 1989- | 2 | Brake disc | Bromsskiva | 3 |
| 0030 | 3 | *80 83 180* | | -1988 NLS - USE 7978794 | 8 | Screw | Skruv | 5 |
| 0035 | 3 | 79 78 794 | | 1989- | 8 | Screw | Skruv | 5 |
| 0040 | 4 | 91 00 884 | | | 2 | Protecting plate | Skyddsplåt | 6 |
| 0050 | 5 | 89 68 588 | | | 2 | Pin | Pinne | 4 |
| 0060 | 7 | 89 53 283 | | | 4 | Screw | Skruv | 5 |
| 0070 | 8 | 80 56 160 | | | 2 | Screw | Skruv | 5 |
| 0075 | 9 | 79 79 511 | | | 2 | Nut | Mutter | 5 |
| 0080 | 10 | 91 02 971 | | 700), LH | 1 | Brake housing | Bromshus | 4 |
| 0100 | 10 | 91 02 989 | | 700), RH | 1 | Brake housing | Bromshus | 4 |
| 0115 | 11 | 89 55 973 | | | 2 | . Plug | . Plugg | 6 |
| 0120 | 12 | 89 55 072 | | | 2 | . Bleed screw | . Luftningsskruv | 2 |
| 0130 | 13 | 89 55 080 | | | 2 | . Protecting casing | . Skyddskåpa | 3 |
| 0140 | 14 | 89 61 799 | | See page 5-033, 4-B10 | 2 | . Gasket kit | . Packningsats | 2 |
| 0150 | 15 | 89 67 713 | | | 2 | Retainer | Hållare | 5 |
| 0152 | 16 | 89 61 807 | | See page 5-033, 4-B10 | 1 | . Bellows kit | . Bälgsats | 3 |
| 0155 | 17 | *89 55 114* | | 1) NLS - USE 8961807 | 2 | .. Slide pin | .. Glidpinne | 3 |
| 0157 | 18 | *89 55 130* | | 1) NLS | 2 | .. Protecting casing | .. Skyddskåpa | 6 |
| 0170 | 19 | 89 55 122 | S | | 4 | .. Screw | .. Skruv | 5 |
| 0190 | 20 | 91 02 997 | | LH | 1 | Brake pipe | Bromsrör | 4 |
| 0200 | 20 | 91 03 037 | | RH | 1 | Brake pipe | Bromsrör | 4 |
| 0210 | 21 | 91 02 856 | | LH | 1 | Bracket | Konsol | 6 |
| 0220 | 21 | 91 02 864 | | RH | 1 | Bracket | Konsol | 6 |
| 0230 | 22 | 79 72 441 | | | 2 | Screw | Skruv | 5 |
| 0240 | 23 | 89 93 719 | | 12) | 1 | Brake pad kit | Bromsklotssats | 1 |
| 0241 | | | | See page 5-035, 4-B12 | | | | |
| 0250 | 23 | 41 07 116 | | 12,13) | 1 | Brake pad kit | Bromsklotssats | 1 |
| 0251 | | | | See page 5-035, 4-B12 | | | | |

1. Not as separate spare part. Ej som separat reservdel.
12. See SI 500-1017 Se SI 500-1017
13. Only for cars that will be repaired in USA and Canada Endast för bilar som repareras i USA och Canada
700. Also available as exchange unit. Finns även som utbytesenhet.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


5 GROUP INDEX


| | |
|---|---|
| Front wheel brake | 4-A06 |
| Rear wheel brake | 4-A10 |
| Footbrake system | 4-A14 |
| Parking brake system | 4-B02 |
| Complete sets | 4-B06 |

# 4-A10 Rear wheel brake -1987

# Bakhjulsbroms -1987

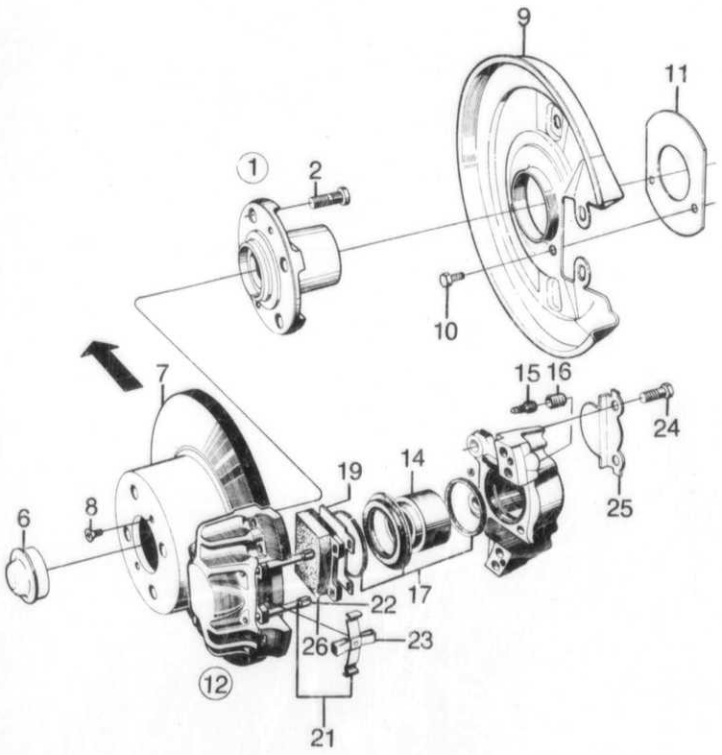


R 8411–900

| 0150 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0025 | 1 | 89 47 384 | | | 2 | Wheel hub | Hjulnav | 5 |
| 0030 | | | | | | with bearing | med lager | |
| 0040 | 2 | 89 07 941 | | | 8 | .Wheel screw | .Hjulbult | 2 |
| 0160 | 6 | 89 35 975 | | | 2 | Cap | Kapsel | 2 |
| 0180 | 7 | 89 04 575 | | | 2 | Brake disc | Bromsskiva | |
| 0200 | 8 | 80 55 998 | | | 4 | Screw | Skruv | 5 |
| 0220 | 9 | 89 34 739 | | LH | 1 | Protecting plate | Skyddsplåt | 6 |
| 0240 | 9 | 89 34 747 | | RH | 1 | Protecting plate | Skyddsplåt | 6 |
| 0260 | 10 | 80 19 887 | | | 4 | Screw | Skruv | 5 |
| 0280 | 11 | *89 34 838* | | NLS | 2 | Guide ring | Styrring | 4 |
| 0330 | 12 | *89 85 277* | | 700), -1986 LH NLS - USE 9102765 | 1 | Brake housing | Bromshus | 5 |
| 0370 | 12 | *89 85 285* | | 700), -1986 RH NLS - USE 9102773 | 1 | Brake housing | Bromshus | 5 |
| 0372 | 12 | 91 02 765 | | 700), 1987 LH | 1 | Brake housing | Bromshus | 5 |
| 0374 | 12 | 91 02 773 | | 700), 1987 RH | 1 | Brake housing | Bromshus | 5 |
| 0380 | 14 | 89 32 238 | | | 4 | .Piston | .Kolv | 5 |
| 0400 | 15 | 89 08 568 | | | 2 | .Air screw | .Luftskruv | 2 |
| 0420 | 16 | 89 08 576 | | | 2 | ..Protecting casing | ..Skyddskåpa | 3 |
| 0440 | 17 | 89 94 840 | | See page 5-031, 4-B08 | 2 | .Gasket kit | .Packningsats | 4 |
| 0480 | 19 | 89 11 737 | | LH | 2 | .Turn stop | .Vridstopp | 3 |
| 0500 | 19 | 89 11 745 | | RH | 2 | .Turn stop | .Vridstopp | 3 |
| 0510 | 21 | 78 74 530 | | See page 5-029, 4-B06 | 1 | .Mounting kit | .Monteringssats | 2 |
| 0520 | 22 | 89 08 766 | | | 4 | ..Lock pin | ..Låspinne | |
| 0540 | 23 | 89 08 543 | | | 2 | ..Brace | ..Bygel | 2 |
| 0560 | 24 | 89 24 755 | | | 4 | Screw | Skruv | 5 |
| 0580 | 25 | 89 34 770 | | | 2 | Lock plate | Låsplåt | 3 |
| 0600 | 26 | 89 93 230 | | 12) See page 5-029, 4-B06 | 1 | Brake pad kit | Bromsklotssats | 1 |
| 0605 | | | | | | | | |

12. See SI 500-1017 Se SI 500-1017
700. Also available as exchange unit. Finns även som utbytesenhet.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


5 GROUP INDEX


| | |
|---|---|
| Front wheel brake | 4-A06 |
| Rear wheel brake | 4-A10 |
| Footbrake system | 4-A14 |
| Parking brake system | 4-E02 |
| Complete sets | 4-B06 |

# 4-A12 *Rear wheel brake* *1988-*

# *Bakhjulsbroms* *1988-*

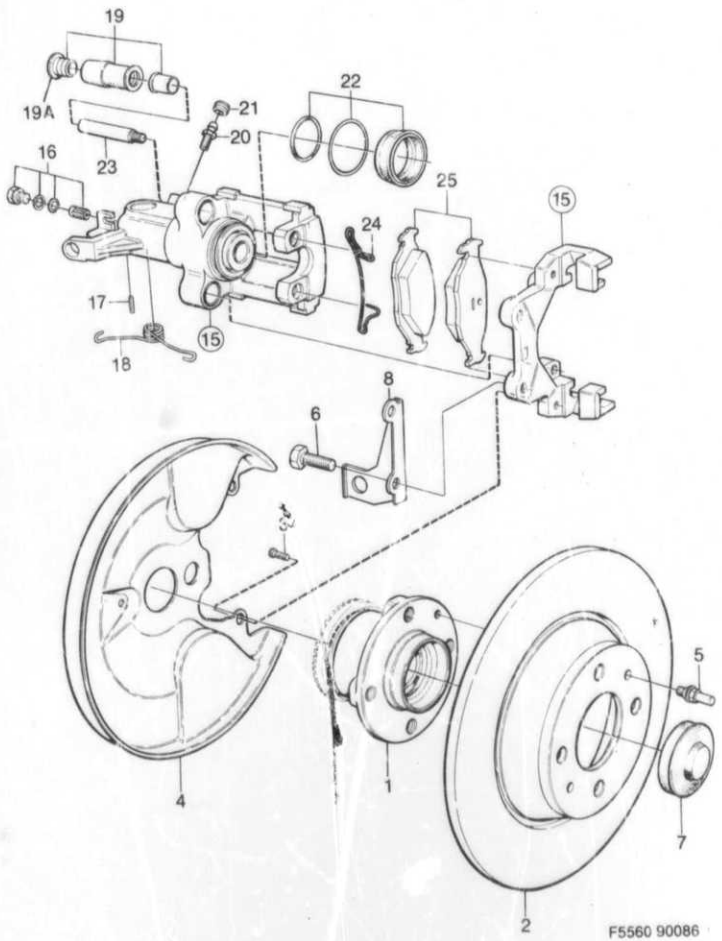


F5560 90086

| | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0012 | 1 | 89 71 095 | | | 2 | Wheel hub | Hjulnav | 5 |
| 0013 | | | | | | with bearing | med lager | |
| 0020 | 1 | 89 71 111 | | ABS | 2 | Wheel hub | Hjulnav | 5 |
| 0021 | | | | | | with bearing | med lager | |
| 0060 | 2 | 89 70 717 | | | 2 | Brake disc | Bromsskiva | 3 |
| 0080 | 3 | 79 72 441 | | | 6 | Screw | Skruv | 5 |
| 0100 | 4 | 89 54 547 | | | 2 | Protecting plate | Skyddsplåt | 6 |
| 0120 | 5 | 89 68 588 | | | 2 | Pin | Pinne | 4 |
| 0140 | 6 | 89 70 428 | | | 4 | Screw | Skruv | 5 |
| 0200 | 7 | 89 52 665 | | | 2 | Cap | Kapsel | 2 |
| 0201 | 8 | 91 01 635 | | LH | 1 | Bracket | Hållare | 5 |
| 0202 | 8 | 91 01 643 | | RH | 1 | Bracket | Hållare | 5 |
| 0220 | 15 | 89 70 618 | | 700), LH | 1 | Brake housing | Bromshus | 5 |
| 0260 | 15 | 89 70 626 | | 700), RH | 1 | Brake housing | Bromshus | 5 |
| 0300 | 16 | 41 07 793 | | See page 5-037, 4-B14 | 1 | . Adjuster kit | . Justeringssats | 4 |
| 0320 | 17 | 89 55 437 | | | 1 | . Pin | . Pinne | 3 |
| 0340 | 18 | 89 55 395 | | LH | 1 | . Spring | . Fjäder | 3 |
| 0360 | 18 | 89 55 403 | | RH | 1 | . Spring | . Fjäder | 3 |
| 0380 | 19 | *89 55 445* | | See page 5-033, 4-B10 | 4 | . Guide | . Styrning | 6 |
| 0380 | | | | NLS - USE 4467064 | | | | |
| 0390 | 19A | 89 55 478 | | | 4 | .. Cover | .. Lock | 3 |
| 0400 | 20 | 89 55 411 | | | 2 | . Bleed screw | . Luftningsskruv | 2 |
| 0420 | 21 | *89 55 429* | | NLS - USE 8908576 | 2 | . Protecting casing | . Skyddskåpa | 6 |
| 0440 | 22 | 89 61 849 | | See page 5-033, 4-B10 | 2 | . Gasket kit | . Packningsats | 4 |
| 0460 | 23 | 89 55 486 | | | 4 | . Slide pin | . Glidpinne | 3 |
| 0470 | 24 | 89 70 816 | | | 2 | . Spring | . Fjäder | 3 |
| 0480 | 25 | 89 68 026 | | 12) | 1 | Brake pad kit | Bromsklotssats | 1 |
| 0481 | | | | See page 5-033, 4-B10 | | | | |

12. See SI 500-1017 Se SI 500-1017
700. Also available as exchange unit. Finns även som utbytesenhet.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


5 GROUP INDEX


| | |
|---|---|
| Front wheel brake | 4-A06 |
| Rear wheel brake | 4-A10 |
| Footbrake system | 4-A14 |
| Parking brake system | 4-B02 |
| Complete sets | 4-B06 |

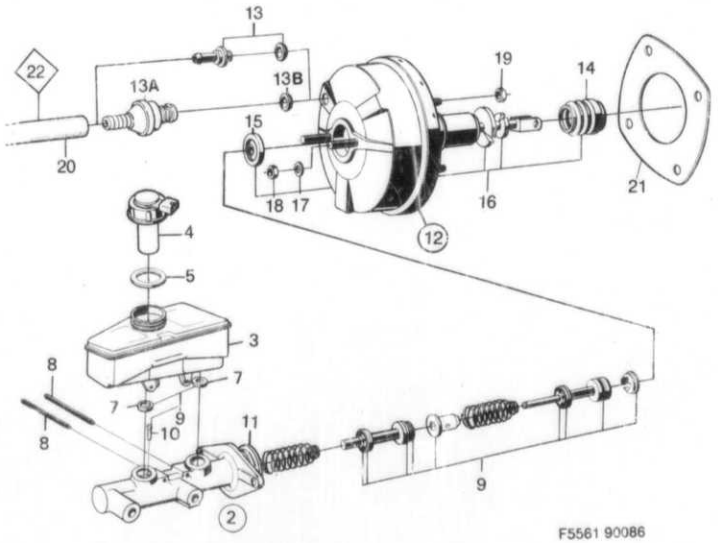


F5561 90086

| 0200 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0070 | 2 | 91 00 552 | | 14), 1986 | 1 | Master cylinder | Huvudcylinder | 4 |
| 0071 | | | | See page 5-029, 4-B06 | | | | |
| 0072 | 2 | 91 02 575 | | 14), 1987- | 1 | Master cylinder | Huvudcylinder | 4 |
| 0080 | 3 | 89 35 421 | | 1986 | 1 | .Reservoir | .Behållare | 5 |
| 0082 | 3 | 91 02 849 | | 1987- | 1 | .Reservoir | .Behållare | 5 |
| 0100 | 4 | 91 00 595 | | 1986 | 1 | ..Level warner | ..Nivåvarnare | 5 |
| 0102 | 4 | 91 02 591 | | 1987- | 1 | ..Level warner | ..Nivåvarnare | 5 |
| 0120 | 5 | 89 36 106 | | 1986 | 1 | ...Seal | ...Tätning | 5 |
| 0160 | 7 | 89 28 426 | | 1986 | 2 | ..Gasket | ..Packning | 4 |
| 0162 | 7 | *89 86 911* | | 1987- NLS - USE 4425229 | 2 | ..Gasket | ..Packning | 4 |
| 0180 | 8 | 89 37 831 | | 1986 | 2 | ..Attaching pin | ..Fästpinne | 4 |
| 0200 | 9 | 89 94 972 | | 1986 | 1 | .Sealing kit | .Tätningssats | 2 |
| 0201 | | | | See page 5-031, 4-B08 | | | | |
| 0202 | 9 | 89 65 329 | | 1987- | 1 | .Sealing kit | .Tätningssats | 4 |
| 0203 | | | | See page 5-031, 4-B08 | | | | |
| 0220 | 10 | 89 28 434 | | 1986 | 1 | .Pin | .Pinne | 4 |
| 0222 | 10 | 89 65 808 | | 1987- | 1 | .Pin | .Pinne | 4 |
| 0230 | 11 | 89 47 178 | | 1986 | 1 | .O-ring | .O-ring | 5 |
| 0240 | 12 | 89 42 609 | | 1986 | 1 | Vacuum servo | Vakuumservo | 5 |
| 0242 | 12 | 91 02 609 | | 1987- | 1 | Vacuum servo | Vakuumservo | 5 |
| 0260 | 13 | 89 93 115 | | 1986 | 1 | .Non-return valve | .Backventil | 4 |
| 0261 | | | | See page 5-031, 4-B08 | | | | |
| 0262 | 13A | 89 86 705 | | 1987- | 1 | .Non-return valve | .Backventil | 4 |
| 0264 | 13B | 89 86 713 | | 1987- | 1 | .Seal | .Tätning | 6 |
| 0280 | 14 | 89 28 541 | | 1986 | 1 | .Bellows | .Bälg | 6 |
| 0300 | 15 | 89 29 010 | | 1986 | 1 | .Seal | .Tätning | 6 |
| 0320 | 16 | 89 10 705 | | 1986 | 1 | .Sealing kit | .Tätningssats | 2 |
| 0321 | | | | See page 5-031, 4-B08 | | | | |
| 0340 | 17 | 79 10 565 | | | 2 | Washer | Bricka | 5 |
| 0360 | 18 | *80 73 942* | | 1986 NLS - USE 8151060 | 2 | Nut | Mutter | 5 |
| 0362 | 18 | *80 29 779* | | 1987 NLS - USE 8151243 | 2 | Nut | Mutter | 5 |
| 0370 | 18 | 81 51 243 | | 1988- | 2 | Nut | Mutter | 5 |
| 0380 | 19 | 80 74 288 | | | 4 | Nut | Mutter | 5 |
| 0400 | 20 | 89 39 993 | | 1986 L=355 MM, B201 I | 1 | Vacuum hose | Vakuumslang | 5 |
| 0402 | 20 | 89 39 993 | | 1987-, B201 I, TURBO | 1 | Vacuum hose | Vakuumslang | 5 |
| 0403 | | | | | | cut to 335 mm | kapas till 335 mm | |
| 0410 | 20 | 89 39 993 | | B202 | 1 | Vacuum hose | Vakuumslang | 5 |
| 0411 | | | | | | cut to 290 mm | kapas till 290 mm | |
| 0420 | 20 | 89 42 302 | | L=380 MM, B201 C | 1 | Vacuum hose | Vakuumslang | 5 |
| 0460 | 21 | 89 58 357 | | 1987- | 1 | Seal | Tätning | 6 |
| 0470 | 22 | | | See page 2-097, 1-F02 | | Intake manifold | Inloppsrör | |

14. 8993917, 8993859 without reservoir 8993917, 8993859 utan behållare

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


5 GROUP INDEX

| | |
|---|---|
| Front wheel brake | 4-A06 |
| Rear wheel brake | 4-A10 |
| Footbrake system | 4-A14 |
| Parking brake system | 4-B02 |
| Complete sets | 4-B06 |

# 4-A16

## *Hydraulic unit ABS*

## *Hydraulenhet ABS*

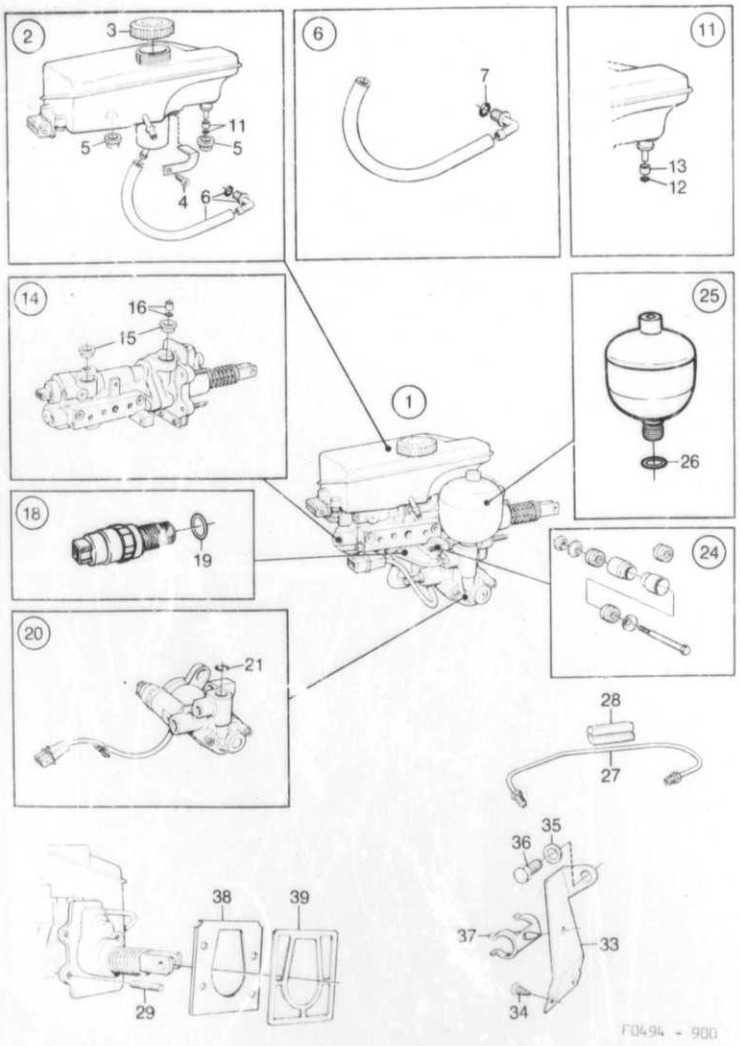


| 0225 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 91 04 407 | | | 1 | Hydraulic unit | Hydraulenhet | 6 |
| 0040 | 2 | 40 00 279 | | See page 5-035, 4-B12 | 1 | .Reservoir | .Behållare | 5 |
| 0060 | 3 | 89 66 152 | | | 1 | ..Cover | ..Lock | 4 |
| 0080 | 4 | 89 66 368 | | | 1 | ..Screw | ..Skruv | 5 |
| 0100 | 5 | 89 66 335 | | | 2 | ..Rubber bushing | ..Gummibussning | 6 |
| 0120 | 6 | 40 02 861 | | See page 5-035, 4-B12 | 1 | ..Hose kit | ..Slangsats | 5 |
| 0121 | 7 | 40 03 117 | | | 1 | ...O-ring | ...O-ring | 5 |
| 0131 | 11 | 89 67 390 | | See page 5-037, 4-B14 | 1 | ..O-ring kit | ..O-ringsats | 2 |
| 0132 | 12 | *89 66 681* | | NLS - USE 8967390 | 1 | ...O-ring | ...O-ring | 4 |
| 0133 | 13 | *89 66 939* | | NLS - USE 8967390 | 1 | ...Sleeve | ...Hylsa | 6 |
| 0140 | 14 | 40 02 879 | | See page 5-037, 4-B14 | 1 | .Master cylinder kit | .Huvudcylindersats | 6 |
| 0180 | 15 | 89 66 335 | | | 2 | ..Rubber bushing | ..Gummibussning | 6 |
| 0200 | 16 | 89 67 390 | | See page 5-037, 4-B14 | 1 | ..O-ring kit | ..O-ringsats | 2 |
| 0220 | 18 | 89 67 309 | | See page 5-035, 4-B12 | 1 | .Pressure monitor | .Tryckvakt | 4 |
| 0221 | 19 | 89 67 325 | | | 1 | ..O-ring | ..O-ring | 2 |
| 0260 | 20 | 40 02 887 | | See page 5-037, 4-B14 | 1 | .Pump kit | .Pumpsats | 6 |
| 0280 | 21 | 89 67 234 | | | 1 | ..O-ring | ..O-ring | 2 |
| 0340 | 24 | 40 02 895 | | See page 5-035, 4-B12 | 1 | .Suspension kit | .Upphängningssats | 5 |
| 0420 | 25 | 40 02 267 | | See page 5-035, 4-B12 | 1 | .Accumulator | .Ackumulator | 5 |
| 0440 | 26 | 89 67 234 | | | 1 | ..O-ring | ..O-ring | 2 |
| 0460 | 27 | 91 04 837 | | | 1 | .Delivery pipe | .Tryckrör | 5 |
| 0470 | 28 | *40 02 093* | | NLS - USE 8993644 | 1 | .Absorber | .Dämpare | 5 |
| 0480 | 29 | 91 04 795 | | | 4 | .Stud | .Pinnskruv | 5 |
| 0700 | 33 | 91 05 123 | | | 1 | Stay | Stag | 5 |
| 0720 | 34 | 79 22 891 | | | 2 | Screw | Skruv | 5 |
| 0740 | 35 | 80 29 985 | | | 1 | Washer | Bricka | 5 |
| 0760 | 36 | *80 82 919* | | NLS - USE 8082935 | 1 | Screw | Skruv | 5 |
| 0780 | 37 | 91 05 297 | | | 1 | Bracket | Hållare | 5 |
| 0800 | 38 | 91 05 701 | | | 1 | Cover plate | Täckplåt | 5 |
| 0820 | 39 | 91 05 719 | | | 1 | Seal | Tätning | 4 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



5 GROUP INDEX


| | |
|---|---|
| Front wheel brake | 4-A06 |
| Rear wheel brake | 4-A10 |
| Footbrake system | 4-A14 |
| Parking brake system | 4-B02 |
| Complete sets | 4-B06 |

# 4-A18

## Brake lines

## Bromsledningar

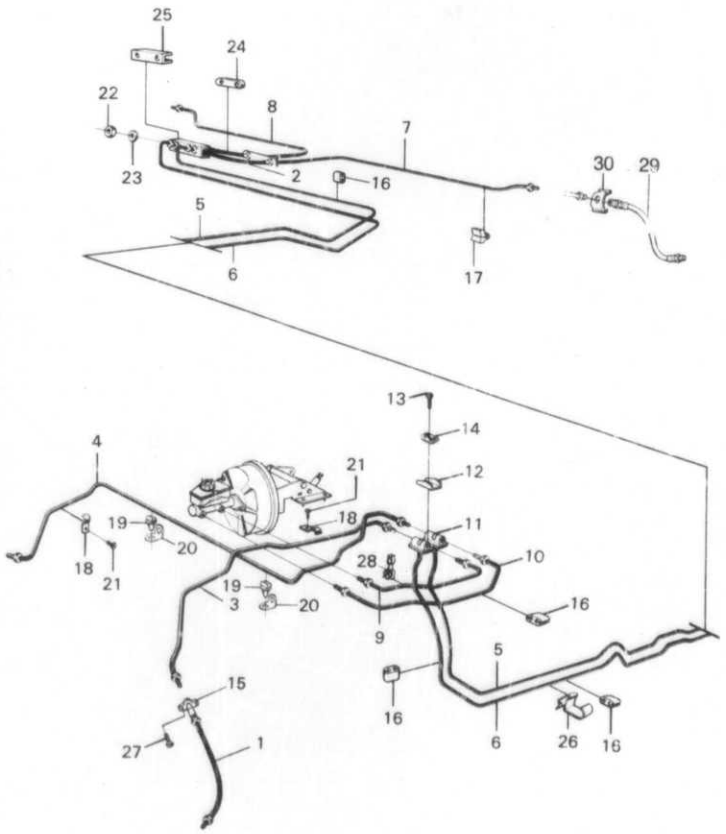


F1942 - 900

| 0250 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 89 40 819 | | | 2 | Brake hose | Bromsslang | 4 |
| 0040 | 2 | 89 31 784 | | | 2 | Brake hose | Bromsslang | 4 |
| 0085 | 3 | 89 46 014 | | LH | 1 | Brake pipe | Bromsrör | 5 |
| 0132 | 4 | 89 87 638 | | RH | 1 | Brake pipe | Bromsrör | 5 |
| 0140 | 5 | *89 44 308* | | 1986 LH NLS - USE 9101726 | 1 | Brake pipe | Bromsrör | 6 |
| 0142 | 5 | 91 01 726 | | 1987- LH | 1 | Brake pipe | Bromsrör | 6 |
| 0150 | 5 | 91 95 132 | | LH CD | 1 | Brake pipe | Bromsrör | 7 |
| 0155 | 5 | *91 95 512* | | -1988, CV NLS - USE 9196049 | 1 | Brake pipe | Bromsrör | 6 |
| 0157 | 5 | 91 96 049 | | 500) 1989-, CV | 1 | Brake pipe | Bromsrör | 6 |
| 0160 | 6 | *89 44 316* | | 1986 RH NLS - USE 9101734 | 1 | Brake pipe | Bromsrör | 6 |
| 0162 | 6 | 91 01 734 | | 1987- RH | 1 | Brake pipe | Bromsrör | 6 |
| 0170 | 6 | 91 95 140 | | RH CD | 1 | Brake pipe | Bromsrör | 7 |
| 0175 | 6 | *91 95 520* | | -1988, CV NLS - USE 9196056 | 1 | Brake pipe | Bromsrör | 6 |
| 0180 | 6 | 91 96 056 | | 500) 1989-, CV | 1 | Brake pipe | Bromsrör | 6 |
| 0200 | 7 | 89 40 744 | | -1987 LH | 1 | Brake pipe | Bromsrör | 3 |
| 0220 | 7 | 91 01 767 | | 1988- LH | 1 | Brake pipe | Bromsrör | 3 |
| 0240 | 8 | 89 40 751 | | -1987 RH | 1 | Brake pipe | Bromsrör | 3 |
| 0260 | 8 | 91 01 783 | | 1988- RH | 1 | Brake pipe | Bromsrör | 3 |
| 0270 | 9 | 89 45 933 | | 1986 | 1 | Brake pipe | Bromsrör | 6 |
| 0272 | 9 | 91 02 203 | | 1987- | 1 | Brake pipe | Bromsrör | 5 |
| 0290 | 10 | 89 45 974 | | 1986 | 1 | Brake pipe | Bromsrör | 6 |
| 0292 | 10 | 91 02 245 | | 1987- | 1 | Brake pipe | Bromsrör | 5 |
| 0300 | 11 | 89 28 947 | | | 1 | Nipple | Nippel | 5 |
| 0320 | 12 | *89 29 671* | | NLS | 1 | Stiffening plate | Förstyvningsplåt | 6 |
| 0340 | 13 | 80 97 859 | | | 1 | Screw | Skruv | 5 |
| 0360 | 14 | *89 33 335* | | NLS | 1 | Seal | Tätning | 5 |
| 0380 | 15 | 89 28 756 | | | 2 | Nipple | Nippel | 5 |
| 0400 | 16 | 89 08 162 | | | 15 | Pipe bracket | Rörhållare | 5 |
| 0420 | 17 | 89 19 490 | | | 3 | Spacer piece | Distansklots | 5 |
| 0440 | 18 | 89 07 966 | | | 2 | Tube clamp | Rörklamma | 5 |
| 0460 | 19 | 89 40 132 | | | 2 | Clamp | Klämma | 5 |
| 0480 | 20 | | | See page 8B-019, 6-A20 | | Brace | Bygel | |
| 0500 | 21 | 79 22 891 | | | 3 | Screw | Skruv | 5 |
| 0520 | 22 | *83 15 558* | | NLS - USE 7979511 | 2 | Nut | Mutter | 5 |
| 0540 | 23 | 79 33 856 | | | 2 | Washer | Bricka | 5 |
| 0560 | 24 | *89 29 259* | | NLS | 1 | Bracket | Hållare | 6 |
| 0580 | 25 | 89 91 739 | | | 1 | Lock plate | Låsplåt | 6 |
| 0600 | 26 | 89 31 461 | | | 1 | Clamp | Klammer | 5 |
| 0620 | 27 | 79 22 891 | | | 7 | Screw | Skruv | 5 |
| 0640 | 28 | *89 39 670* | | LHD NLS | 1 | Clamp | Klammer | 5 |
| 0660 | 29 | 91 01 650 | | 1988- | 2 | Brake hose | Bromsslang | 4 |
| 0680 | 30 | 89 52 699 | | 1988 | 2 | Bracket | Hållare | 5 |
| 0690 | 30 | *41 04 188* | | 500), 1989- NLS - USE 8952699 | 2 | Bracket | Hållare | 5 |
| 0690 | | | | | | | | |

500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


5 GROUP INDEX



| | |
|---|---|
| Front wheel brake | 4-A06 |
| Rear wheel brake | 4-A10 |
| Footbrake system | 4-A14 |
| Parking brake system | 4-B02 |
| Complete sets | 4-B06 |

Footbrake system

# 4-A20 Brake lines ABS front

Fotbromssystem

**Bromsledningar ABS fram**

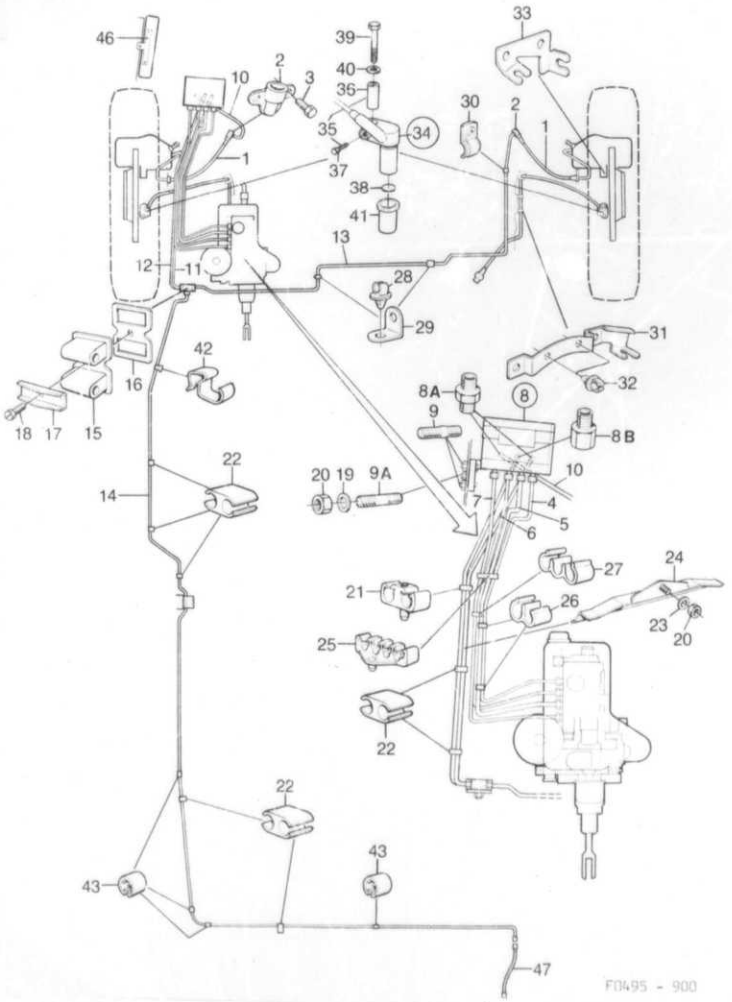


| 0260 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 89 40 819 | | | 2 | Brake hose | Bromsslang | 4 |
| 0020 | 2 | 89 28 756 | | | 2 | Nipple | Nippel | 5 |
| 0030 | 3 | 79 22 891 | | | 4 | Screw | Skruv | 5 |
| 0040 | 4 | 91 04 308 | | LH | 1 | Brake pipe | Bromsrör | 5 |
| 0050 | 5 | 91 04 282 | | | 1 | Brake pipe rear | Bromsrör bakre | 5 |
| 0051 | | | | | | | | |
| 0060 | 6 | 91 04 266 | | | 1 | Brake pipe return | Bromsrör retur | 5 |
| 0061 | | | | | | | | |
| 0070 | 7 | 91 04 241 | | RH | 1 | Brake pipe | Bromsrör | 5 |
| 0080 | 8 | 91 04 951 | | | 1 | Valve body | Ventilblock | 4 |
| 0090 | 8A | 89 66 376 | | | 2 | .Intermediate section | .Mellanstycke | 5 |
| 0100 | 8B | 89 66 384 | | | 1 | .Intermediate section | .Mellanstycke | 5 |
| 0110 | 9 | 40 00 477 | | | 2 | .Stud | .Pinnskruv | 5 |
| 0120 | 9A | 40 00 899 | | | 1 | .Stud | .Pinnskruv | 5 |
| 0130 | 10 | 91 04 365 | | LH | 1 | Brake pipe | Bromsrör | 5 |
| 0140 | 11 | 91 04 324 | | RH | 1 | Brake pipe | Bromsrör | 5 |
| 0150 | 12 | 91 04 340 | | | 1 | Brake pipe rear | Bromsrör bakre | 5 |
| 0151 | | | | | | | | |
| 0160 | 13 | 89 87 638 | | RH | 1 | Brake pipe | Bromsrör | 5 |
| 0170 | 14 | 91 01 734 | | | 1 | Brake pipe | Bromsrör | 6 |
| 0175 | 14 | 91 96 056 | | CV | 1 | Brake pipe | Bromsrör | 6 |
| 0180 | 15 | 91 04 399 | | | 1 | Nipple | Nippel | 5 |
| 0190 | 16 | *89 33 335* | | NLS | 1 | Seal | Tätning | 5 |
| 0200 | 17 | *89 29 671* | | NLS | 1 | Stiffening plate | Förstyvningsplåt | 6 |
| 0210 | 18 | 80 97 859 | | | 1 | Screw | Skruv | 5 |
| 0220 | 19 | 70 61 328 | | | 3 | Washer | Bricka | 5 |
| 0230 | 20 | 80 74 288 | | | 5 | Nut | Mutter | 5 |
| 0240 | 21 | 89 59 520 | | | 1 | Tube clamp | Rörklamma | 5 |
| 0250 | 22 | 89 08 162 | | | 8 | Pipe bracket | Rörhållare | 5 |
| 0260 | 23 | 79 73 977 | | | 1 | Washer | Bricka | 5 |
| 0270 | 24 | 91 06 097 | | | 1 | Protecting plate | Skyddsplåt | 6 |
| 0280 | 25 | 91 06 147 | | | 1 | Tube clamp | Rörklamma | 5 |
| 0290 | 26 | 91 06 139 | | | 2 | Tube clamp | Rörklamma | 5 |
| 0300 | 27 | 91 06 121 | | | 2 | Tube clamp | Rörklamma | 5 |
| 0310 | 28 | 89 40 132 | | | 2 | Clamp | Klämma | 5 |
| 0320 | 29 | 89 40 652 | | | 2 | Brace | Bygel | 5 |
| 0330 | 30 | 89 07 966 | | | 2 | Tube clamp | Rörklamma | 5 |
| 0340 | 31 | 91 06 741 | | LH | 1 | Holder | Hållare | 6 |
| 0350 | 31 | 91 06 758 | | RH | 1 | Holder | Hållare | 6 |
| 0360 | 32 | 40 00 543 | | | 4 | Clamp | Klammer | 5 |
| 0370 | 33 | *91 06 766* | | LH NLS - USE 9105222 | 1 | Holder | Hållare | 6 |
| 0380 | 33 | *91 06 774* | | RH NLS - USE 9105230 | 1 | Holder | Hållare | 6 |
| 0390 | 34 | 91 05 131 | | LH | 1 | Sensor | Givare | 3 |
| 0400 | 34 | 91 05 149 | | RH | 1 | Sensor | Givare | 3 |
| 0410 | 35 | 91 05 115 | | See page 5-037, 4-B14 | 1 | .Screw kit | .Skruvsats | 5 |
| 0420 | 36 | *89 67 374* | | 1) NLS | 1 | ..Sleeve | ..Hylsa | 6 |
| 0430 | 37 | *89 67 382* | | 1) NLS | 1 | ..Screw | ..Skruv | 5 |
| 0440 | 38 | 40 01 046 | | | 1 | .Spacer | .Distansstycke | 5 |
| 0450 | 39 | 80 21 925 | | | 2 | Screw | Skruv | 5 |
| 0460 | 40 | 80 29 951 | | | 2 | Washer | Bricka | 5 |
| 0470 | 41 | 89 65 634 | | | 2 | Sleeve | Hylsa | 5 |
| 0480 | 42 | 89 31 461 | | | 1 | Clamp | Klammer | 5 |
| 0490 | 43 | 89 65 097 | | | 4 | Tube clamp | Rörklamma | 5 |
| 0500 | 46 | | | See page 3A-083, 2-D12 | | Electronic unit | Elektronikenhet | |
| 0510 | 47 | | | See page 5-021, 4-A22 | | Brake hose | Bromsslang | |

1. Not as separate spare part. Ej som separat reservdel.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


5 GROUP INDEX



| | |
|---|---|
| Front wheel brake | 4-A06 |
| Rear wheel brake | 4-A10 |
| Footbrake system | 4-A14 |
| Parking brake system | 4-B02 |
| Complete sets | 4-B06 |

Footbrake system

# 4-A22 Brake lines ABS rear

Fotbromssystem

**Bromsledningar ABS bak**

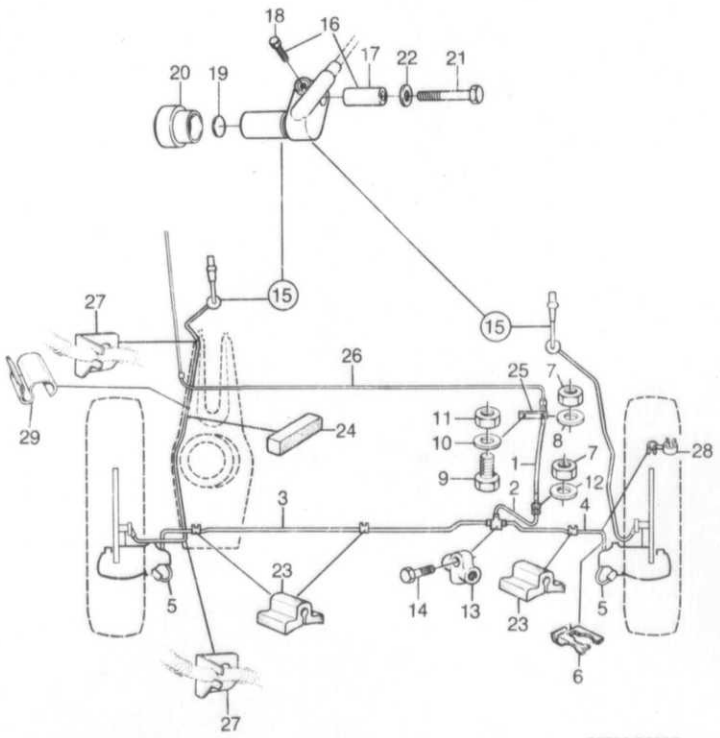


F5562 90086

| 0270 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 89 31 784 | | | 1 | Brake hose | Bromsslang | 4 |
| 0030 | 2 | 91 05 354 | | | 1 | Brake pipe | Bromsrör | 6 |
| 0040 | 3 | 91 05 032 | | LH | 1 | Brake pipe | Bromsrör | 6 |
| 0050 | 4 | 91 05 016 | | RH | 1 | Brake pipe | Bromsrör | 6 |
| 0060 | 5 | 91 01 650 | | | 2 | Brake hose | Bromsslang | 4 |
| 0070 | 6 | *41 04 188* | | NLS - USE 8952699 | 2 | Bracket | Hållare | 5 |
| 0080 | 7 | 79 79 511 | | | 2 | Nut | Mutter | 5 |
| 0090 | 8 | 79 33 856 | | | 1 | Washer | Bricka | 5 |
| 0100 | 9 | 80 82 935 | | | 1 | Screw | Skruv | 5 |
| 0110 | 10 | *73 11 764* | | NLS - USE 7399835 | 1 | Washer | Bricka | 5 |
| 0120 | 11 | 80 74 106 | | | 1 | Nut | Mutter | 5 |
| 0130 | 12 | 79 33 856 | | | 1 | Washer | Bricka | 5 |
| 0140 | 13 | 89 64 686 | | | 1 | T-piece | T-stycke | 5 |
| 0150 | 14 | 80 82 968 | | | 1 | Screw | Skruv | 5 |
| 0160 | 15 | 91 05 388 | | LH | 1 | Sensor | Givare | 3 |
| 0170 | 15 | 91 05 396 | | RH | 1 | Sensor | Givare | 3 |
| 0180 | 16 | 91 05 115 | | See page 5-037, 4-B14 | 1 | .Screw kit | .Skruvsats | 5 |
| 0190 | 17 | *89 67 374* | | 1) NLS | 1 | ..Sleeve | ..Hylsa | 6 |
| 0200 | 18 | *89 67 382* | | 1) NLS | 1 | ..Screw | ..Skruv | 5 |
| 0210 | 19 | 40 01 046 | | | 1 | .Spacer | .Distansstycke | 5 |
| 0220 | 20 | 89 63 019 | | | 2 | Sleeve | Hylsa | 5 |
| 0230 | 21 | 80 21 925 | | | 2 | Screw | Skruv | 5 |
| 0240 | 22 | 80 29 951 | | | 2 | Washer | Bricka | 5 |
| 0250 | 23 | 89 19 490 | | | 3 | Spacer piece | Distansklots | 5 |
| 0260 | 24 | 89 67 226 | | | 2 | Set ring | Kuts | 5 |
| 0270 | 25 | 89 91 739 | | | 1 | Lock plate | Låsplåt | 6 |
| 0280 | 26 | | | See page 5-019, 4-A20 | | Brake pipe | Bromsrör | |
| 0290 | 27 | 91 05 305 | | LH | 2 | Bracket | Hållare | 6 |
| 0300 | 27 | 91 05 313 | | RH | 2 | Bracket | Hållare | 6 |
| 0310 | 28 | 73 99 660 | | 8) | 2 | Clamp | Klammer | 5 |
| 0320 | 29 | 89 31 461 | | | 4 | Clamp | Klammer | 5 |

1. Not as separate spare part. Ej som separat reservdel.
8. Ch. K7021872-



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



5 GROUP INDEX


| | |
|---|---|
| Front wheel brake | 4-A06 |
| Rear wheel brake | 4-A10 |
| Footbrake system | 4-A14 |
| Parking brake system | 4-B02 |
| Complete sets | 4-B06 |

# 4-A24

## *Brake operation*

## *Bromsmanövrering*

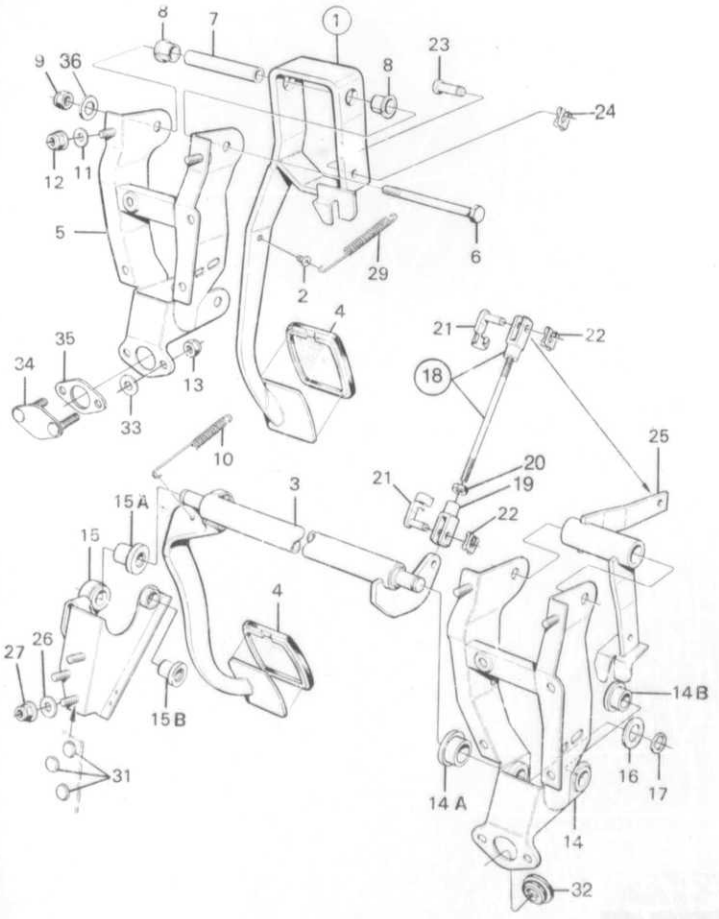


R 7330–900

| 0300 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0030 | 1 | 89 91 473 | | | 1 | Brake pedal | Bromspedal | 6 |
| 0035 | 1 | 91 04 472 | | ABS | 1 | Brake pedal | Bromspedal | 6 |
| 0050 | 1 | 89 91 499 | | A | 1 | Brake pedal | Bromspedal | 6 |
| 0055 | 1 | 91 05 768 | | A, ABS | 1 | Brake pedal | Bromspedal | 6 |
| 0060 | 2 | 84 07 983 | | | 1 | .Bushing | .Bussning | 4 |
| 0080 | 3 | 89 38 136 | | RHD | 1 | Brake pedal | Bromspedal | 6 |
| 0120 | 3 | 89 41 635 | | RHD, A | 1 | Brake pedal | Bromspedal | 6 |
| 0160 | 4 | 89 16 272 | | | 1 | .Pedal pad | .Pedalgummi | 5 |
| 0180 | 4 | 89 56 393 | | A | 1 | .Pedal pad | .Pedalgummi | 5 |
| 0210 | 5 | 89 44 407 | | | 1 | Bracket | Konsol | 6 |
| 0215 | 5 | 91 04 050 | | ABS | 1 | Bracket | Konsol | 6 |
| 0220 | 6 | *80 84 246* | | -1988 NLS - USE 7982036 | 1 | Screw | Skruv | 5 |
| 0230 | 6 | 79 79 248 | | 1989- | 1 | Screw | Skruv | 5 |
| 0240 | 7 | 89 35 132 | | | 1 | Spacer tube | Distansrör | 5 |
| 0270 | 8 | 89 48 051 | | | 2 | Bearing bushing | Lagerbussning | 4 |
| 0280 | 9 | *80 73 538* | | -1987 NLS - USE 7977812 | 1 | Lock nut | Låsmutter | 5 |
| 0290 | 9 | *81 51 474* | | 1988- NLS - USE 7977812 | 1 | Lock nut | Låsmutter | 5 |
| 0300 | 10 | 89 41 320 | | RHD | 1 | Spring | Fjäder | 6 |
| 0320 | 11 | 89 23 531 | | | 2 | Sealing washer | Tätningsbricka | 5 |
| 0340 | 12 | 79 71 922 | | | 2 | Nut | Mutter | 3 |
| 0360 | 13 | 80 74 288 | | | 6 | Nut | Mutter | 5 |
| 0370 | 14 | 89 44 373 | | LH, RHD | 1 | Bracket | Konsol | 6 |
| 0381 | 14 | 91 05 925 | | LH, RHD, ABS | 1 | Bracket | Konsol | 6 |
| 0382 | 14A | *89 12 115* | | NLS | 1 | .Bushing | .Bussning | 6 |
| 0384 | 14B | *89 37 625* | | NLS | 1 | .Bushing | .Bussning | 4 |
| 0400 | 15 | 89 38 359 | | RH, RHD | 1 | Bracket | Konsol | 6 |
| 0402 | 15A | *89 12 115* | | NLS | 1 | .Bushing | .Bussning | 6 |
| 0404 | 15B | *89 37 625* | | NLS | 1 | .Bushing | .Bussning | 4 |
| 0420 | 16 | 80 30 066 | | RHD | 1 | Washer | Bricka | 5 |
| 0440 | 17 | 80 47 722 | | RHD | 1 | Lock ring | Låsring | 5 |
| 0460 | 18 | 89 38 284 | | 6), RHD | 1 | Rod | Stång | 6 |
| 0470 | 18 | 40 03 976 | | 7), RHD | 1 | Rod | Stång | 6 |
| 0480 | 19 | *89 24 557* | | RHD NLS | 1 | .Fork | .Gaffel | 6 |
| 0500 | 20 | *80 73 942* | | -1987, RHD NLS - USE 8151060 | 1 | .Nut | .Mutter | 5 |
| 0510 | 20 | 81 51 060 | | 1988-, RHD | 1 | .Nut | .Mutter | 5 |
| 0520 | 21 | 89 33 509 | | RHD | 2 | Clip | Clips | 5 |
| 0540 | 22 | 82 52 553 | | RHD | 2 | Clip | Clips | 5 |
| 0560 | 23 | *89 56 443* | | NLS - USE 4105821 | 1 | Bolt | Bult | 5 |
| 0580 | 24 | 82 52 553 | | | 1 | Clip | Clips | 5 |
| 0625 | 25 | 89 91 382 | | RHD | 1 | Countershaft | Mellanaxel | 6 |
| 0630 | 25 | 91 05 560 | | RHD, ABS | 1 | Countershaft | Mellanaxel | 6 |
| 0640 | 26 | 89 29 531 | | RHD | 3 | Sealing washer | Tätningsbricka | 5 |
| 0660 | 27 | 79 71 922 | | RHD | 3 | Nut | Mutter | 3 |
| 0700 | 29 | 89 35 751 | | | 1 | Spring | Fjäder | 5 |
| 0740 | 31 | 71 63 066 | | | 3 | Plug | Plugg | 5 |
| 0760 | 32 | *89 28 699* | | A NLS | 1 | Rubber plug | Gummiplugg | 6 |
| 0780 | 33 | 89 29 531 | | A | 2 | Sealing washer | Tätningsbricka | 5 |
| 0800 | 34 | *89 42 021* | | NLS - USE 8971582 | 1 | Plate | Plåt | 2 |
| 0820 | 35 | 89 41 478 | | A | 1 | Gasket | Packning | 5 |
| 0840 | 36 | 80 29 993 | | | 1 | Washer | Bricka | 5 |

6. Ch. –K7020393
7. Ch. K7020394-



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


5 GROUP INDEX


| | |
|---|---|
| Front wheel brake | 4-A06 |
| Rear wheel brake | 4-A10 |
| Footbrake system | 4-A14 |
| Parking brake system | 4-B02 |
| Complete sets | 4-B06 |

# 4-B02 Parking brake system -1987

# Parkeringsbromssystem -1987

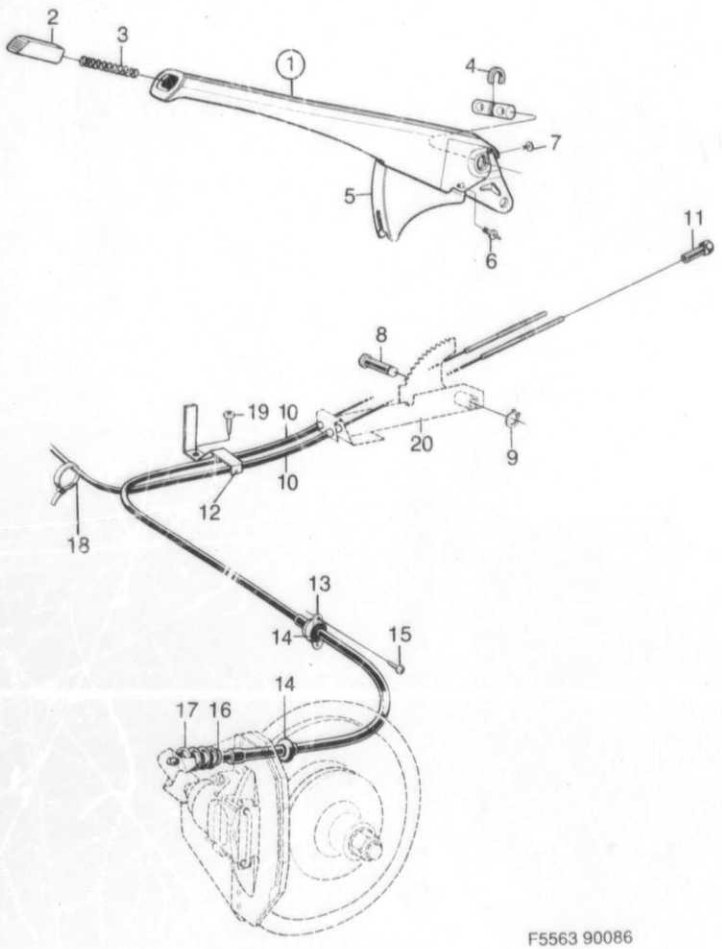


F5563 90086

| 0350 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0110 | 1 | *89 46 964* | | NLS | 1 | Handbrake lever | Handbromsspak | 5 |
| 0120 | 2 | 89 46 691 | | | 1 | .Push button | .Tryckknapp | 5 |
| 0130 | 3 | 71 80 607 | | | 1 | .Spring | .Fjäder | 5 |
| 0140 | 4 | 89 46 659 | | | 1 | .Retaining ring | .Spårring | 5 |
| 0150 | 5 | 97 06 383 | | | 1 | .Cover | .Kåpa | 4 |
| 0160 | 6 | 97 08 066 | | | 2 | .Pop rivet | .Popnit | 5 |
| 0170 | 7 | *89 85 038* | | NLS | 1 | .Plastic plug | .Plastplugg | 5 |
| 0185 | 8 | 89 46 709 | | | 1 | Bolt | Bult | 5 |
| 0200 | 9 | 79 15 093 | | | 1 | Retaining ring | Spårring | 5 |
| 0210 | 10 | 89 37 898 | | | 2 | Parking brake cable | Parkeringsbromswire | 4 |
| 0230 | 11 | 89 85 459 | | | 2 | Adjusting nut | Justermutter | 3 |
| 0245 | 12 | 89 47 574 | | | 1 | Clamp | Klammer | 6 |
| 0270 | 13 | 89 08 121 | | | 2 | Bracket | Hållare | 4 |
| 0280 | 14 | 89 08 139 | | | 4 | Ring | Ring | 4 |
| 0290 | 15 | 79 22 891 | | | 4 | Screw | Skruv | 5 |
| 0300 | 16 | 79 15 093 | | | 2 | Retaining ring | Spårring | 5 |
| 0310 | 17 | 89 27 923 | | | 2 | Bellows | Bälg | 3 |
| 0320 | 18 | 79 71 880 | | | 2 | Tensioning band | Spännband | 4 |
| 0330 | 19 | 79 72 805 | | | 1 | Screw | Skruv | 5 |
| 0340 | 20 | | | See page 8A-005, 5-A06 | 1 | Segment | Segment | |




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


5 GROUP INDEX


| | |
|---|---|
| Front wheel brake | 4-A06 |
| Rear wheel brake | 4-A10 |
| Footbrake system | 4-A14 |
| Parking brake system | 4-B02 |
| Complete sets | 4-B06 |

# 4-B04 Parking brake system 1988- / Parkeringsbromssystem 1988-

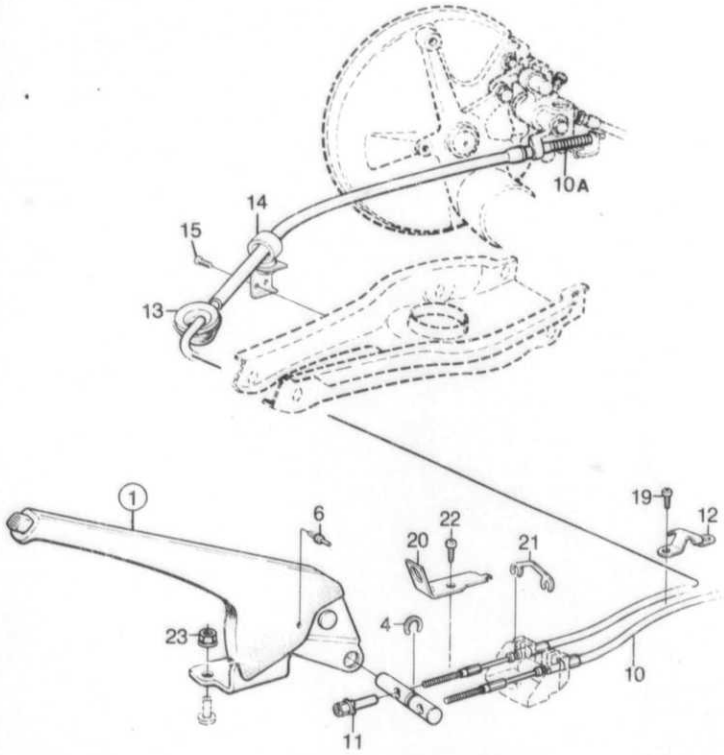


F1944 - 900

| 0375 | Pos | Part No/Art nr | K. S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 41 03 206 | | | 1 | Handbrake lever | Handbromsspak | 5 |
| 0080 | 4 | 91 01 239 | | | 1 | .Retaining ring | .Spärring | 5 |
| 0120 | 6 | 97 08 066 | | | 2 | .Pop rivet | .Popnit | 5 |
| 0200 | 10 | *91 01 445* | | 11) NLS | 2 | Parking brake cable | Parkeringsbromswire | 4 |
| 0203 | 10 | *91 01 445* | | 11), CV, LH NLS | 1 | Parking brake cable | Parkeringsbromswire | 4 |
| 0205 | 10 | *91 04 134* | | CV, RH NLS - USE 9196163 | 1 | Parking brake cable | Parkeringsbromswire | 4 |
| 0210 | 10A | 89 54 455 | | | 1 | .Bellows | .Bälg | 2 |
| 0220 | 11 | 91 01 221 | | | 2 | Adjusting nut | Justermutter | 3 |
| 0240 | 12 | 91 01 528 | | | 1 | Clamp | Klammer | 5 |
| 0260 | 13 | 91 05 651 | | (9101866) | 2 | Grommet | Genomföring | 2 |
| 0280 | 14 | 89 67 655 | | | 2 | Bracket | Hållare | 5 |
| 0300 | 15 | 79 72 805 | | | 4 | Screw | Skruv | 5 |
| 0380 | 19 | 79 72 805 | | | 2 | Screw | Skruv | 5 |
| 0400 | 20 | 91 01 817 | | | 1 | Bracket | Konsol | 4 |
| 0420 | 21 | 91 01 833 | | | 1 | Clamp | Klammer | 5 |
| 0440 | 22 | 79 72 805 | | | 1 | Screw | Skruv | 5 |
| 0460 | 23 | 79 67 953 | | | 2 | Nut | Mutter | 5 |

11. Superseded by 41 05 789 LH and 91 96 163 RH Ersatt av 41 05 789 V och 91 96 163 H



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


5 GROUP INDEX


| | |
|---|---|
| Front wheel brake | 4-A06 |
| Rear wheel brake | 4-A10 |
| Footbrake system | 4-A14 |
| Parking brake system | 4-B02 |
| Complete sets | 4-B06 |

Complete set
# 4-B06
## *Brakes*

Satser
## *Bromsar*

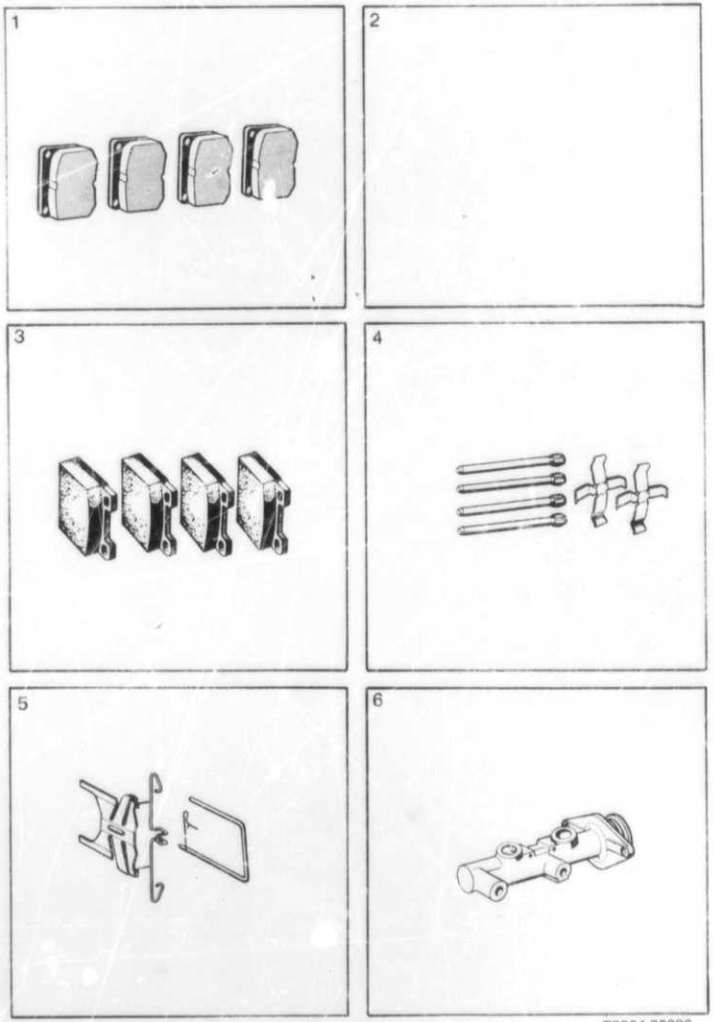


F5564 90086

| 1000 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 89 93 297 | | 12), -1987 | X | Brake pad kit front brake | Bromsklotssats frambroms | 1 |
| 0020 | | | | | | | | |
| 0040 | | | | | | | | |
| 0050 | 1 | 40 04 123 | | 12), TURBO, -1987 | X | Brake pad kit front brake | Bromsklotssats frambroms | 1 |
| 0060 | | | | | | | | |
| 0080 | | | | | | | | |
| 0090 | 1 | 89 93 776 | | 12,13), -1987 | X | Brake pad kit front brake | Bromsklotssats frambroms | 1 |
| 0100 | | | | | | | | |
| 0120 | | | | | | | | |
| 0130 | 3 | 89 93 230 | | 12) | X | Brake pad kit rear brake | Bromsklotssats bakbroms | 1 |
| 0140 | | | | | | | | |
| 0150 | | *89 85 244* | | 1) NLS | 4 | .Brake pad | .Bromsklots | 6 |
| 0160 | | | | | | | | |
| 0210 | 4 | 78 74 530 | | -1987 | X | Mounting kit rear brake | Monteringssats bakbroms | 2 |
| 0220 | | | | | | | | |
| 0230 | | 89 08 543 | | | 2 | .Brace | .Bygel | 2 |
| 0240 | | 89 08 766 | | | 4 | .Lock pin | .Låspinne | |
| 0250 | | | | | | | | |
| 0260 | 5 | 78 74 548 | | -1987 | X | Mounting kit front brake | Monteringssats frambroms | 2 |
| 0270 | | | | | | | | |
| 0280 | | 89 30 448 | | | 2 | .Damping plate | .Dämpplåt | 2 |
| 0290 | | 89 25 067 | | | 2 | .Lock needle | .Låsnål | 5 |
| 0300 | | 89 90 194 | | | 2 | .U-pin | .U-pinne | 1 |
| 0310 | | *89 30 463* | | NLS - USE 9103995 | 2 | .Damping spring | .Dämpfjäder | 2 |
| 0320 | | | | | | | | |
| 0330 | 6 | 91 00 652 | | 1986 | X | Master cylinder | Huvudcylinder | 4 |
| 0340 | | *91 00 637* | | 1) NLS - USE 8993842 | 1 | .Master cylinder | .Huvudcylinder | 4 |
| 0350 | | 89 47 178 | | | 1 | .O-ring | .O-ring | 5 |

1. Not as separate spare part. Ej som separat reservdel.
12. See SI 500-1017 Se SI 500-1017
13. Only for cars that will be repaired in USA and Canada Endast för bilar som repareras i USA och Canada



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



5 GROUP INDEX


| | |
|---|---|
| Front wheel brake | 4-A06 |
| Rear wheel brake | 4-A10 |
| Footbrake system | 4-A14 |
| Parking brake system | 4-B02 |
| Complete sets | 4-B06 |

Complete set
**Brakes**

Satser
**Bromsar**

# 4-B08

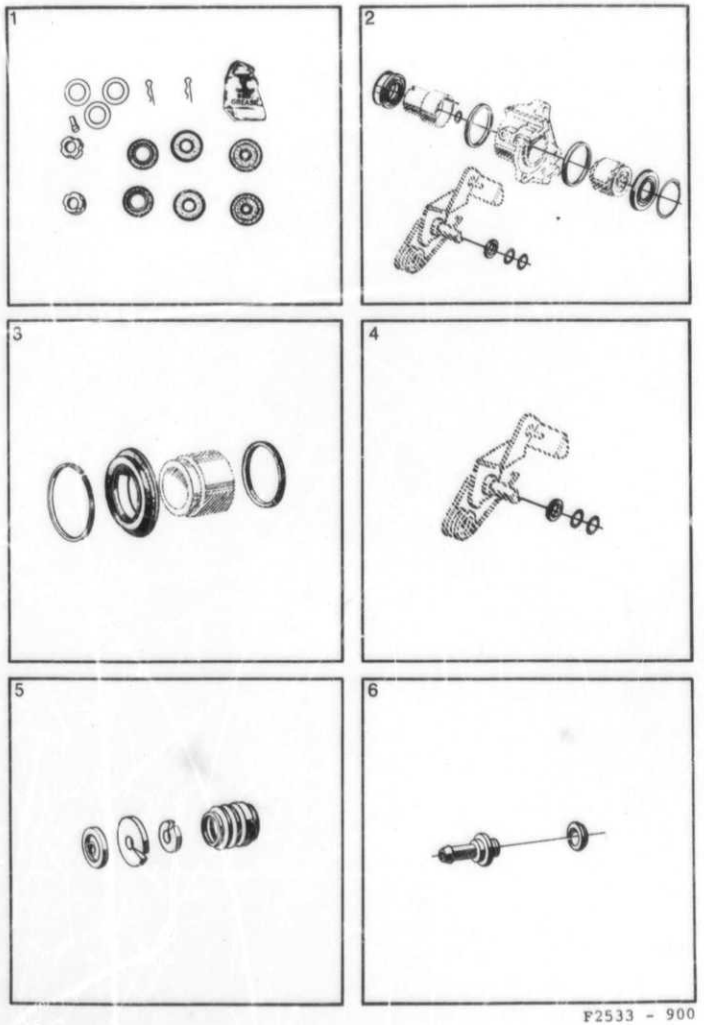


| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1 | 89 94 972 | | 1986 | X | Sealing kit<br>master cylinder | Tätningssats<br>huvudcylinder | 2 |
| | 89 28 251 | | 1) | 2 | .Sealing ring | .Tätningsring | 6 |
| | 89 28 228 | | 1) | 2 | .Sealing ring | .Tätningsring | 6 |
| | 89 28 236 | | 1) | 2 | .Support washer | .Stödbricka | 6 |
| | 89 28 210 | | 1) | 2 | .Support ring | .Stödring | 6 |
| | *89 28 376* | | 1) NLS | 1 | .Lock ring | .Låsring | 5 |
| | 89 28 434 | | | 1 | .Pin | .Pinne | 4 |
| | 89 28 426 | | | 2 | .Gasket | .Packning | 4 |
| 1 | 89 65 329 | | 1987- | X | Sealing kit<br>master cylinder | Tätningssats<br>huvudcylinder | 4 |
| | 89 65 782 | | 1) | 1 | .Piston | .Kolv | 6 |
| | *89 86 911* | | 1) NLS - USE 4425229 | 2 | .Gasket | .Packning | 4 |
| | 89 86 986 | | | 1 | .Seal | .Tätning | 6 |
| | 89 87 018 | | 1) | 1 | .Sealing ring | .Tätningsring | 6 |
| | 89 86 994 | | 1) | 1 | .Seal | .Tätning | 6 |
| | 89 65 808 | | | 1 | .Pin | .Pinne | 4 |
| 2 | 89 93 255 | | -1987 | X | Gasket kit<br>front brake | Packningsats<br>frambroms | 4 |
| | 89 85 533 | | 1) | 2 | .Master seal | .Huvudtätning | |
| | 89 25 547 | | 1) | 2 | .Bracket | .Hållare | 2 |
| | 89 25 539 | | 1) | 2 | .Seal | .Tätning | 3 |
| | 89 25 562 | | 1) | 1 | .Seal | .Tätning | 3 |
| | *89 94 535* | | NLS | 1 | .Sealing kit | .Tätningssats | 2 |
| 3 | 89 94 840 | | -1987 | X | Gasket kit<br>rear brake | Packningsats<br>bakbroms | 4 |
| | 89 32 246 | | 1) | 2 | .Sealing ring | .Tätningsring | 6 |
| | 89 32 279 | | 1) | 2 | .Master seal | .Huvudtätning | 6 |
| | 89 08 527 | | 1) | 2 | .Sealing retainer | .Tätningshållare | 6 |
| 4 | 89 93 727 | | -1987 | X | Sealing kit<br>handbrake | Tätningssats<br>handbroms | 2 |
| | 89 25 828 | | | 1 | .Seal | .Tätning | 2 |
| | 89 25 869 | | 1) | 1 | .Seal | .Tätning | 2 |
| | 89 25 851 | | | 1 | .Seal | .Tätning | 2 |
| 5 | 89 10 705 | | 1986 | X | Sealing kit<br>vaccum servo | Tätningssats<br>vakuumservo | 2 |
| | 89 29 010 | | | 1 | .Seal | .Tätning | 6 |
| | 89 28 996 | | 1) | 1 | .Air filter | .Luftfilter | |
| | 89 29 002 | | 1) | 1 | .Silencer | .Ljuddämpare | 6 |
| | 89 28 541 | | 1) | 1 | .Bellows | .Bälg | 6 |
| 6 | 89 93 115 | | 1986 | X | Non-return valve | Backventil | 4 |
| | 89 41 718 | | 1) | 1 | .Non-return valve | .Backventil | 6 |
| | 89 29 010 | | | 1 | .Seal | .Tätning | 6 |

1. Not as separate spare part. Ej som separat reservdel.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



5 GROUP INDEX



| | |
|---|---|
| Front wheel brake | 4-A06 |
| Rear wheel brake | 4-A10 |
| Footbrake system | 4-A14 |
| Parking brake system | 4-B02 |
| Complete sets | 4-B06 |


Complete set
# 4-B10
## *Brakes*


Satser
## *Bromsar*

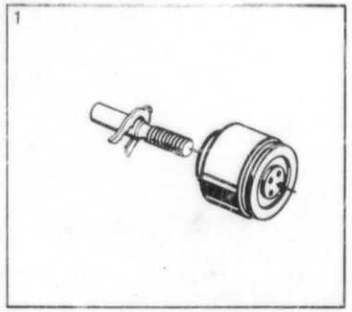

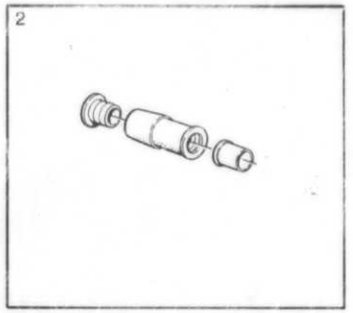

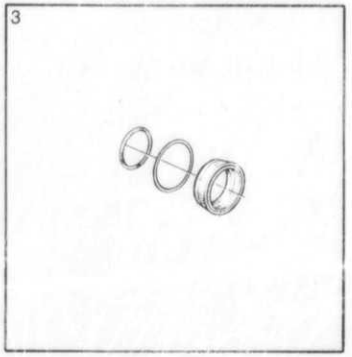

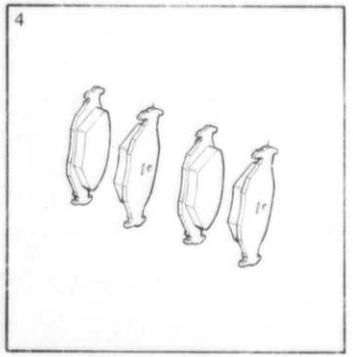F5565 90086
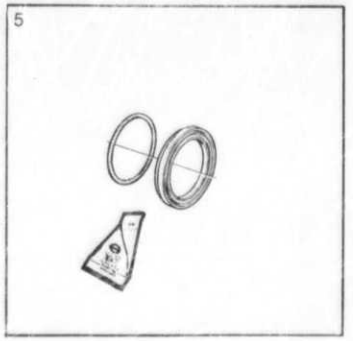
| 1100 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 91 03 474 | | -1987 | X | Piston kit | Kolvsats | 4 |
| 0020 | | *89 25 745* | | 1) NLS | 1 | . Brake piston | . Bromskolv | 4 |
| 0030 | | *89 25 521* | | 1) NLS | 1 | . Push rod | . Tryckstång | 4 |
| 0040 | | | | | | | | |
| 0050 | 2 | *89 55 445* | | 1988- NLS - USE 4467064 | X | Guide | Styrning | 6 |
| 0060 | | 89 55 452 | | 1) | 2 | . Bushing | . Bussning | 6 |
| 0070 | | 89 55 460 | | 1) | 2 | . Sleeve | . Hylsa | 6 |
| 0080 | | 89 55 478 | | | 2 | . Cover | . Lock | 3 |
| 0090 | | | | | | | | |
| 0100 | 3 | 89 61 849 | | 1988- | X | Gasket kit rear brake | Packningsats bakbroms | 4 |
| 0110 | | | | | | | | |
| 0120 | | 89 55 288 | | 1) | 1 | . Seal | . Tätning | 6 |
| 0130 | | 89 55 296 | | 1) | 1 | . Gaiter | . Damask | 6 |
| 0140 | | 89 55 239 | | 1) | 1 | . Ring | . Ring | 6 |
| 0150 | | | | | | | | |
| 0160 | 4 | 89 68 026 | | 12), 1988- | X | Brake pad kit rear brake | Bromsklotssats bakbroms | 1 |
| 0170 | | | | | | | | |
| 0180 | | *89 67 101* | | 1) NLS | 2 | . Brake pad | . Bromsklots | 1 |
| 0190 | | *89 67 119* | | 1) NLS | 2 | . Brake pad | . Bromsklots | 1 |
| 0200 | | | | | | | | |
| 0210 | 5 | 89 61 799 | | 1988- | X | Gasket kit front brake | Packningsats frambroms | 2 |
| 0220 | | | | | | | | |
| 0230 | | 89 55 056 | | 1) | 1 | . Gaiter | . Damask | 6 |
| 0240 | | 89 55 064 | | 1) | 1 | . Seal | . Tätning | 6 |
| 0250 | | 89 55 155 | | 1) | 1 | . Grease | . Fett | 6 |
| 0260 | | | | | | | | |
| 0270 | 6 | 89 61 807 | | 1988- | X | Bellows kit front brake | Bälgsats frambroms | 3 |
| 0280 | | | | | | | | |
| 0290 | | 89 55 122 | | | 2 | . Screw | . Skruv | 5 |
| 0295 | | *89 55 114* | | 1) NLS - USE 8961807 | 2 | . Slide pin | . Glidpinne | 3 |
| 0300 | | *89 55 130* | | 1) NLS | 2 | . Protecting casing | . Skyddskåpa | 6 |
| 0310 | | 89 55 148 | | 1) | X | . Grease | . Fett | 6 |

1. Not as separate spare part. Ej som separat reservdel.
12. See SI 500-1017 Se SI 500-1017



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


5 GROUP INDEX


| | |
|---|---|
| Front wheel brake | 4-A06 |
| Rear wheel brake | 4-A10 |
| Footbrake system | 4-A14 |
| Parking brake system | 4-B02 |
| Complete sets | 4-B06 |

Complete set
# 4-B12
## Brakes

Satser
## Bromsar

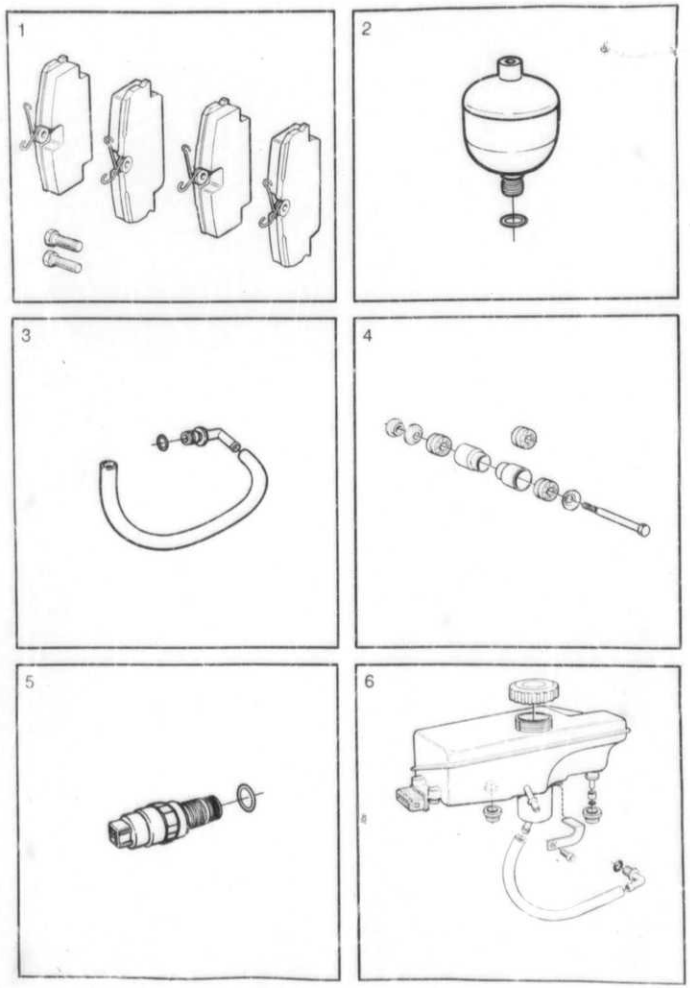


F0497 - 900

| 1150 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 89 93 297 | | 12), 1988- | X | Brake pad kit front brake | Bromsklotssats frambroms | 1 |
| 0020 | | | | | | | | |
| 0030 | | 41 05 433 | | 1) | 4 | .Brake pad | .Bromsklots | 1 |
| 0040 | | 89 55 122 | | | 2 | .Screw | .Skruv | 5 |
| 0050 | | | | | | | | |
| 0060 | 1 | 41 07 116 | | 12,13), 1988- | X | Brake pad kit front brake | Bromsklotssats frambroms | 1 |
| 0070 | | | | | | | | |
| 0080 | | 41 05 433 | | 1) | 4 | .Brake pad | .Bromsklots | 1 |
| 0090 | | 89 55 122 | | | 2 | .Screw | .Skruv | 5 |
| 0100 | | | | | | | | |
| 0110 | 2 | 40 02 267 | | 1989-, ABS | X | Accumulator | Ackumulator | 5 |
| 0120 | | *40 01 814* | | 1) NLS | 1 | .Accumulator | .Ackumulator | 5 |
| 0130 | | 89 67 234 | | | 1 | .O-ring | .O-ring | 2 |
| 0140 | | 89 66 707 | | 1) | 1 | .Label | .Etikett | 6 |
| 0150 | | | | | | | | |
| 0160 | 3 | 40 02 861 | | 1989-, ABS | X | Hose kit | Slangsats | 5 |
| 0170 | | *91 04 746* | | 1) NLS | 1 | .Hose | .Slang | |
| 0180 | | *91 04 738* | | 1) NLS | 1 | .Nipple | .Nippel | |
| 0190 | | 40 03 117 | | | 1 | .O-ring | .O-ring | 5 |
| 0200 | | | | | | | | |
| 0210 | 4 | 0 02 895 | | 1989-, ABS | X | Suspension kit | Upphängningssats | 5 |
| 0220 | | 9 66 236 | | 1) | 1 | .Bracket | .Upphängning | 5 |
| 0230 | | *1 04 811* | | 1) NLS | 2 | .Bracket | .Upphängning | 5 |
| 0240 | | 91 04 829 | | 1) | 1 | .Screw | .Skruv | 5 |
| 0250 | | *89 66 251* | | 1) NLS | 2 | .Washer | .Bricka | 5 |
| 0260 | | *91 04 944* | | 1) NLS | 2 | .Sleeve | .Hylsa | 6 |
| 0270 | | *40 03 083* | | 1) NLS | 1 | .Spacer | .Distans | 5 |
| 0280 | | | | | | | | |
| 0290 | 5 | 89 67 309 | | 1989-, ABS | X | Pressure monitor | Tryckvakt | 4 |
| 0300 | | 89 66 160 | | 1) | 1 | .Pressure monitor | .Tryckvakt | 4 |
| 0310 | | 89 67 325 | | | 1 | .O-ring | .O-ring | 2 |
| 0320 | | | | | | | | |
| 0330 | 6 | 40 00 279 | | 1989-, ABS | X | Reservoir | Behållare | 5 |
| 0340 | | *91 04 753* | | 1) NLS | 1 | .Reservoir | .Behållare | 5 |
| 0350 | | 89 86 368 | | | 1 | .Screw | .Skruv | 5 |
| 0360 | | 89 66 152 | | | 1 | .Cover | .Lock | 4 |
| 0370 | | *91 04 993* | | 1) NLS | 1 | .Holder | .Hållare | 5 |
| 0380 | | 89 66 335 | | | 2 | .Rubber bushing | .Gummibussning | 6 |
| 0390 | | 40 02 861 | | | 1 | .Hose kit | .Slangsats | 5 |
| 0400 | | 89 67 390 | | | 1 | .O-ring kit | .O-ringsats | 2 |

1. Not as separate spare part. Ej som separat reservdel.
12. See SI 500-1017 Se SI 500-1017
13. Only for cars that will be repaired in USA and Canada Endast för bilar som repareras i USA och Canada



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical registor | 7-E02 |


5 GROUP INDEX


| | |
|---|---|
| Front wheel brake | 4-A06 |
| Rear wheel brake | 4-A10 |
| Footbrake system | 4-A14 |
| Parking brake system | 4-B02 |
| Complete sets | 4-B06 |

Complete set
# 4-B14
## Brakes

Satser
## Bromsar

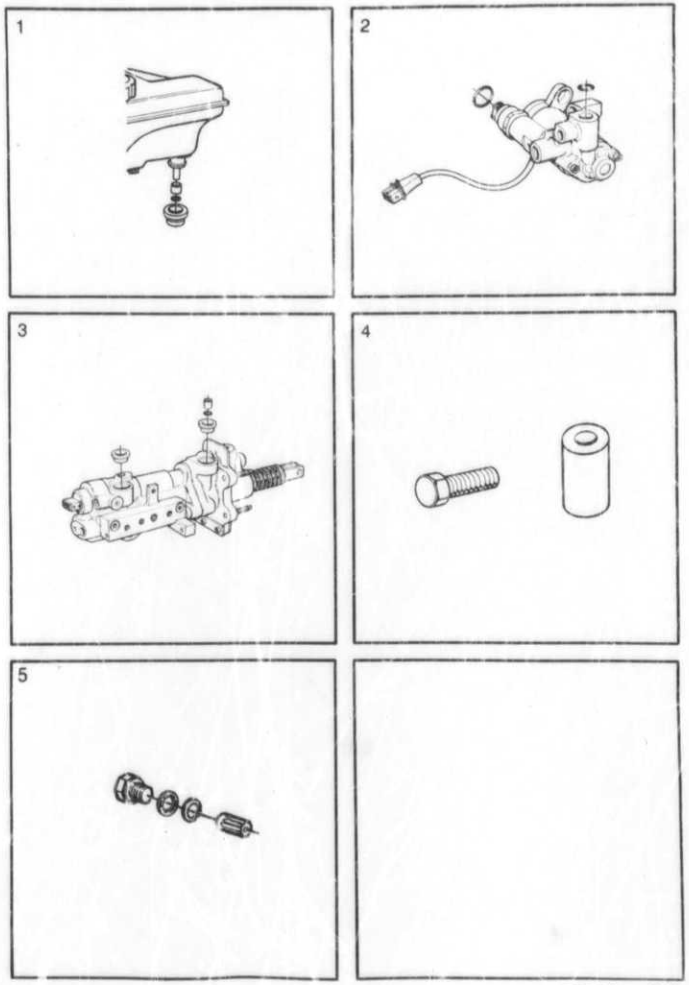


F2534 - 900

| 1200 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 89 67 390 | | 1989-, ABS | X | O-ring kit | O-ringsats | 2 |
| 0020 | | *89 66 681* | | NLS - USE 8967390 | 1 | .O-ring | .O-ring | 4 |
| 0030 | | *89 66 939* | | NLS - USE 8967390 | 1 | .Sleeve | .Hylsa | 6 |
| 0040 | | | | | | | | |
| 0050 | 2 | 40 02 887 | | 1989-, ABS | X | Pump kit | Pumpsats | 6 |
| 0070 | | *40 03 091* | | 1) NLS | 1 | .Pump motor | .Pumpmotor | 6 |
| 0080 | | 89 67 234 | | | 1 | .O-ring | .O-ring | 2 |
| 0110 | | | | | | | | |
| 0120 | 3 | 40 02 879 | | 1989-, ABS | X | Master cylinder kit | Huvudcylindersats | 6 |
| 0140 | | *91 04 787* | | 1) NLS | 1 | .Master cylinder | .Huvudcylinder | 6 |
| 0170 | | 89 66 335 | | | 2 | .Rubber bushing | .Gummibussning | 6 |
| 0180 | | 89 67 390 | | | 1 | .O-ring kit | .O-ringsats | 2 |
| 0190 | | | | | | | | |
| 0200 | 4 | 91 05 115 | | 1989-, ABS | 2 | Screw kit | Skruvsats | 5 |
| 0210 | | *89 67 374* | | 1) NLS | 1 | .Sleeve | .Hylsa | 6 |
| 0220 | | *89 67 382* | | 1) NLS | 1 | .Screw | .Skruv | 5 |
| 0230 | | | | | | | | |
| 0240 | 5 | 41 07 793 | | 1988- | 1 | Adjuster kit rear brake | Justeringssats bakbroms | 4 |
| 0250 | | 41 07 801 | | 1) | 1 | .Washer | .Bricka | 5 |
| 0260 | | *89 55 304* | | 1) NLS - USE 4107793 | 1 | .Adjustment screw | .Justerskruv | 5 |
| 0270 | | 89 55 312 | | 1) | 1 | .Screw | .Skruv | 5 |
| 0280 | | *89 70 147* | | 1) NLS - USE 4107793 | 1 | .Stop ring | .Stoppring | 5 |

1. Not as separate spare part. Ej som separat reservdel.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


5 GROUP INDEX


| | |
|---|---|
| Front wheel brake | 4-A06 |
| Rear wheel brake | 4-A10 |
| Footbrake system | 4-A14 |
| Parking brake system | 4-B02 |
| Complete sets | 4-B06 |

# 4-C02



# Front assembly, Steering
# Framvagn, Styrinrättning
# Tren delantero, Dirección

0041
0010
0020
0030
0040
0050
0060
0070
0080
0090
0095
0100
0110
0120
0130
0140

TABLE OF CONTENTS


| | | |
|---|---|---|
| **Front wheel suspension** | | |
| Front wheel suspension | 6 : 5 | 4-C06 |
| **Steering device** | | |
| Steering wheel shaft | 6 : 7 | 4-C08 |
| Steering wheel, horn button | 6 : 9 | 4-C10 |
| Steering gear | 6 : 11 | 4-C12 |
| Power steering gear | 6 : 13 | 4-C14 |
| Pump | 6 : 19 | 4-C20 |
| **Complete sets** | | |
| Front wheel suspension, steering device | 6 : 23 | 4-C24 |




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


6 GROUP INDEX


| | |
|---|---|
| Front wheel suspension | 4-C06 |
| Steering device | 4-C08 |
| Complete sets | 4-C24 |

# 4-C03

0042
0150
0160
0170
0180
0190
0200
0210
0220
0230
0235
0240
0250
0260
0270
0280
0570
0580
0590
0600
0610
0620
0630
0640
0645
0650
0660
0670
0680
0690
0710

## INNEHÅLLSFÖRTECKNING


**Framvagn**
Framvagn ..... 6 : 5 4-C06
**Styrinrättning**
Rattstång ..... 6 : 7 4-C08
Ratt, signalknapp ..... 6 : 9 4-C10
Styrväxel ..... 6 : 11 4-C12
Servostyrväxel ..... 6 : 13 4-C14
Pump ..... 6 : 19 4-C20
**Satser**
Framvagn, styrinrättning ..... 6 : 23 4-C24


## SUMARIO


**Tren delantero**
Tren delantero ..... 6 : 5 4-C06
**Direccion**
Columna de direccion ..... 6 : 7 4-C08
Volante, boton bocina ..... 6 : 9 4-C10
Mecanismo de direccion ..... 6 : 11 4-C12
Servomecanismo de direccion ..... 6 : 13 4-C14
Bomba ..... 6 : 19 4-C20
**Juegos completos**
Mecanismos delanteros, direccin, cambio en el volante ..... 6 : 23 4-C24





MASTER INDEX


0 General 1-A02
2 Engine 1-B02
3A Electrical general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 7-A02
9 Tools, labels 7-D02
10 Numerical register 7-E02


6 GROUP INDEX


Front wheel suspension 4-C06
Steering device 4-C08
Complete sets 4-C24

# 4-C06 Front wheel suspension Framvagn

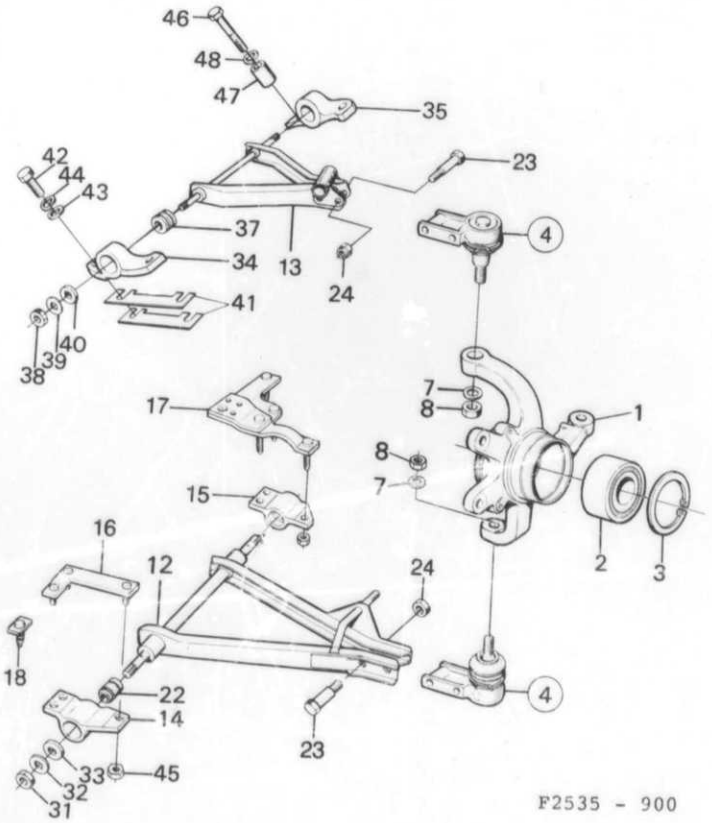


| 0100 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 89 41 858 | | -1987 LH | 1 | Steering knuckle housing | Styrspindelhus | 5 |
| 0030 | 1 | 89 41 866 | | -1987 RH | 1 | Steering knuckle housing | Styrspindelhus | 5 |
| 0050 | 1 | 91 01 031 | | 1988- LH | 1 | Steering knuckle housing | Styrspindelhus | 5 |
| 0070 | 1 | 91 01 049 | | 1988- RH | 1 | Steering knuckle housing | Styrspindelhus | 5 |
| 0081 | 1 | 91 02 096 | | LH ABS | 1 | Steering knuckle housing | Styrspindelhus | 5 |
| 0083 | 1 | 91 02 104 | | RH ABS | 1 | Steering knuckle housing | Styrspindelhus | 5 |
| 0090 | 2 | *89 42 765* | | -1987 NLS - USE 9104209 | 2 | Bearing | Lager | 2 |
| 0100 | 2 | 91 04 209 | | 1988- | 2 | Wheel bearing | Hjullager | 2 |
| 0110 | 3 | 79 72 581 | | | 4 | Retaining ring | Spärring | 5 |
| 0120 | 4 | 89 93 321 | | See page 6-023, 4-C24 | 4 | End piece | Ändstycke | 2 |
| 0130 | 7 | 80 73 124 | S | | 4 | .Washer | .Bricka | 5 |
| 0140 | 8 | 79 18 733 | S | | 4 | .Lock nut | .Låsmutter | 5 |
| 0150 | 12 | *89 34 788* | | 18) LH NLS - USE 4199576 | 1 | Swivel arm | Svängarm | 4 |
| 0160 | 12 | *89 34 796* | | 18) RH NLS - USE 4199584 | 1 | Swivel arm | Svängarm | 4 |
| 0170 | 13 | 89 41 015 | | 19) LH | 1 | Swivel arm | Svängarm | 4 |
| 0180 | 13 | 89 41 023 | | 19) RH | 1 | Swivel arm | Svängarm | 4 |
| 0190 | 14 | 89 33 970 | | 16) LH | 1 | Bearing anchorage | Lagerfäste | 5 |
| 0200 | 14 | 89 33 988 | | 16) RH | 1 | Bearing anchorage | Lagerfäste | 5 |
| 0210 | 15 | 89 34 002 | | 17) LH | 1 | Bearing anchorage | Lagerfäste | 5 |
| 0220 | 15 | 89 34 010 | | 17) RH | 1 | Bearing anchorage | Lagerfäste | 5 |
| 0230 | 16 | 89 39 274 | | 16) LH | 1 | Bracket | Fäste | 5 |
| 0240 | 16 | 89 39 282 | | 16) RH | 1 | Bracket | Fäste | 5 |
| 0250 | 17 | 89 35 736 | | 17) LH | 1 | Bracket | Fäste | 6 |
| 0260 | 17 | 89 35 744 | | 17) RH | 1 | Bracket | Fäste | 6 |
| 0270 | 18 | 82 62 941 | | 1986,16) LH | 1 | Bracket | Fäste | 5 |
| 0280 | 18 | *82 67 908* | | 1986,16) RH NLS - USE 6938856 | 1 | Bracket | Fäste | 5 |
| 0290 | 18 | 69 38 823 | | 1987-,16) LH | 1 | Bracket | Fäste | 5 |
| 0300 | 18 | 69 38 856 | | 1987-,16) RH | 1 | Bracket | Fäste | 5 |
| 0310 | 22 | 71 84 443 | | | 4 | Bushing | Bussning | 2 |
| 0320 | 23 | 89 90 012 | | | 8 | Screw | Skruv | 5 |
| 0330 | 24 | 79 69 306 | S | | 8 | Lock nut | Låsmutter | 5 |
| 0360 | 31 | 79 04 113 | | | 4 | Nut | Mutter | 5 |
| 0370 | 32 | 70 71 939 | | | 4 | Lock washer | Låsbricka | 5 |
| 0380 | 33 | 70 70 642 | | | 4 | Washer | Bricka | 5 |
| 0390 | 34 | 71 75 441 | | 16) LH | 1 | Bearing anchorage | Lagerfäste | 5 |
| 0400 | 35 | 71 75 433 | | 17) LH | 1 | Bearing anchorage | Lagerfäste | 3 |
| 0410 | 35 | 73 37 330 | | 17) LH, ALT. TO 7175433 | 1 | Bearing anchorage | Lagerfäste | 5 |
| 0420 | 34 | 71 75 433 | | 16) RH | 1 | Bearing anchorage | Lagerfäste | 3 |
| 0430 | 35 | 71 75 441 | | 17) RH | 1 | Bearing anchorage | Lagerfäste | 5 |
| 0440 | 35 | 73 37 348 | | 17) RH, ALT. TO 7175441 | 1 | Bearing anchorage | Lagerfäste | 5 |
| 0450 | 37 | 71 63 603 | | | 4 | Bushing | Bussning | 2 |
| 0460 | 38 | 79 04 097 | | | 4 | Nut | Mutter | 5 |
| 0470 | 39 | 70 70 626 | | | 4 | Lock washer | Låsbricka | 5 |
| 0480 | 40 | 70 70 667 | | | 4 | Washer | Bricka | 6 |
| 0490 | 41 | 70 71 061 | | 0,5 MM | X | Shim | Shim | 5 |
| 0500 | 41 | 70 71 079 | | 1,0 MM | X | Shim | Shim | 5 |
| 0510 | 41 | 70 71 087 | | 2,0 MM | X | Shim | Shim | 5 |
| 0520 | 42 | *80 83 180* | | -1988 NLS - USE 7978704 | 7 | Screw | Skruv | 5 |
| 0530 | 42 | 79 78 794 | | 500), 1989- | 7 | Screw | Skruv | 5 |
| 0540 | 43 | 80 73 108 | | | 7 | Washer | Bricka | 5 |
| 0550 | 44 | 88 02 175 | | | 7 | Spring washer | Fjäderbricka | 5 |
| 0560 | 45 | 79 71 765 | | | 12 | Nut | Mutter | 5 |
| 0570 | 46 | 80 83 222 | | | 1 | Screw | Skruv | 5 |
| 0580 | 47 | 89 41 403 | | | 1 | Spacer tube | Distansrör | 5 |
| 0590 | 48 | 88 02 175 | | | 1 | Spring washer | Fjäderbricka | 5 |

16. Front Främre
17. Rear Bakre
18. Lower Nedre
19. Upper Övre

500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


6 GROUP INDEX


| | |
|---|---|
| Front wheel suspension | 4-C06 |
| Steering device | 4-C08 |
| Complete sets | 4-C24 |

# 4-C08

## *Steering shaft*
## *Rattstång*

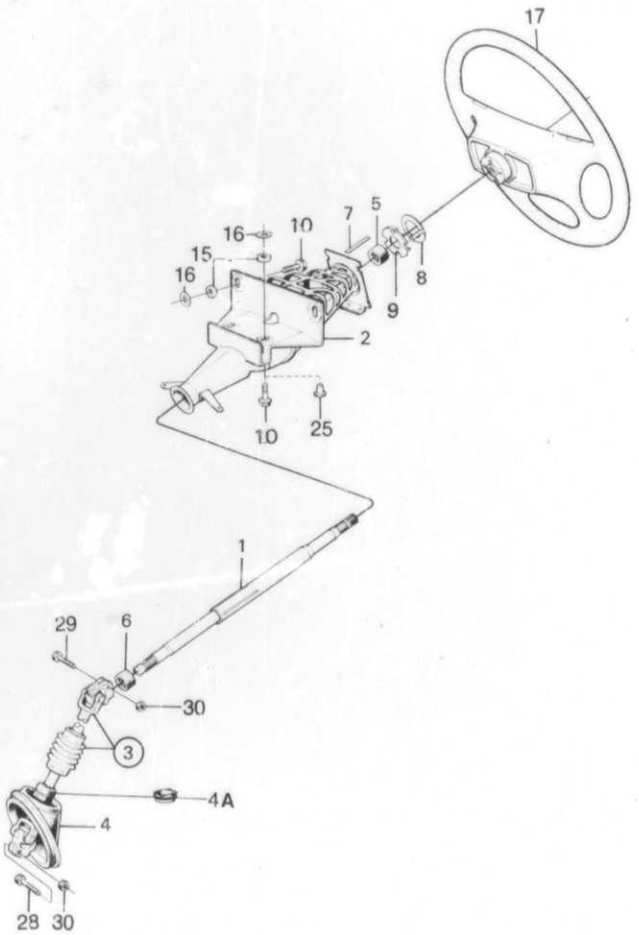


F5566 90086

| 0150 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | *76 05 256* | | 14) NLS - USE 4004768, 8954315 | 1 | Steering shaft | Rattstång | 5 |
| 0025 | 1 | 40 04 768 | | 15) | 1 | Steering shaft | Rattstång | 5 |
| 0030 | 2 | 89 34 952 | | | 1 | Column cage | Rattställsbur | 6 |
| 0070 | 3 | *89 48 044* | | NLS - USE 4001798 | 1 | Countershaft | Mellanaxel | 5 |
| 0100 | 4 | 89 47 970 | | | 1 | .Bellows | .Bälg | 5 |
| 0105 | 4A | 89 47 988 | | | 1 | .Bearing | .Lagring | 3 |
| 0110 | 5 | 89 35 025 | | | 1 | Needle bearing | Nållager | 5 |
| 0120 | 6 | 89 36 163 | | | 1 | Needle bearing | Nållager | 5 |
| 0130 | 7 | 89 40 645 | | | 1 | Ground plate | Jordningsbleck | 5 |
| 0140 | 8 | 89 36 411 | | | 1 | Contact ring | Kontaktring | 5 |
| 0150 | 9 | 89 36 403 | | | 1 | Retainer | Hållare | 5 |
| 0160 | 10 | 89 39 340 | | | 4 | Screw | Skruv | 5 |
| 0170 | 15 | 89 39 332 | | | 4 | Washer | Bricka | 3 |
| 0180 | 15 | 89 39 332 | | RHD 4,8 MM | 2 | Washer | Bricka | 3 |
| 0190 | 15 | *89 45 032* | | RHD 7,8 MM NLS | 2 | Washer | Bricka | 3 |
| 0200 | 16 | 89 41 114 | | | 4 | Ring | Ring | 3 |
| 0230 | 17 | | | See page 6-009, 4-C10 | | Steering wheel | Ratt | |
| 0430 | 25 | 89 41 205 | | | 4 | Seal | Tätning | 5 |
| 0460 | 28 | 79 72 334 | | | 1 | Hexagon screw | Sexkantsskruv | 5 |
| 0470 | 29 | 79 67 789 | | | 1 | Screw | Skruv | 5 |
| 0480 | 30 | 79 68 415 | | | 2 | Lock nut | Låsmutter | 3 |

14. Ch.-K3022166, -K7030319
15. Ch.K3022167-, K7030320-



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



6 GROUP INDEX


| | |
|---|---|
| Front wheel suspension | 4-C06 |
| Steering device | 4-C08 |
| Complete sets | 4-C24 |

# 4-C10

## Steering wheel
## Horn button

## Ratt
## Signalknapp

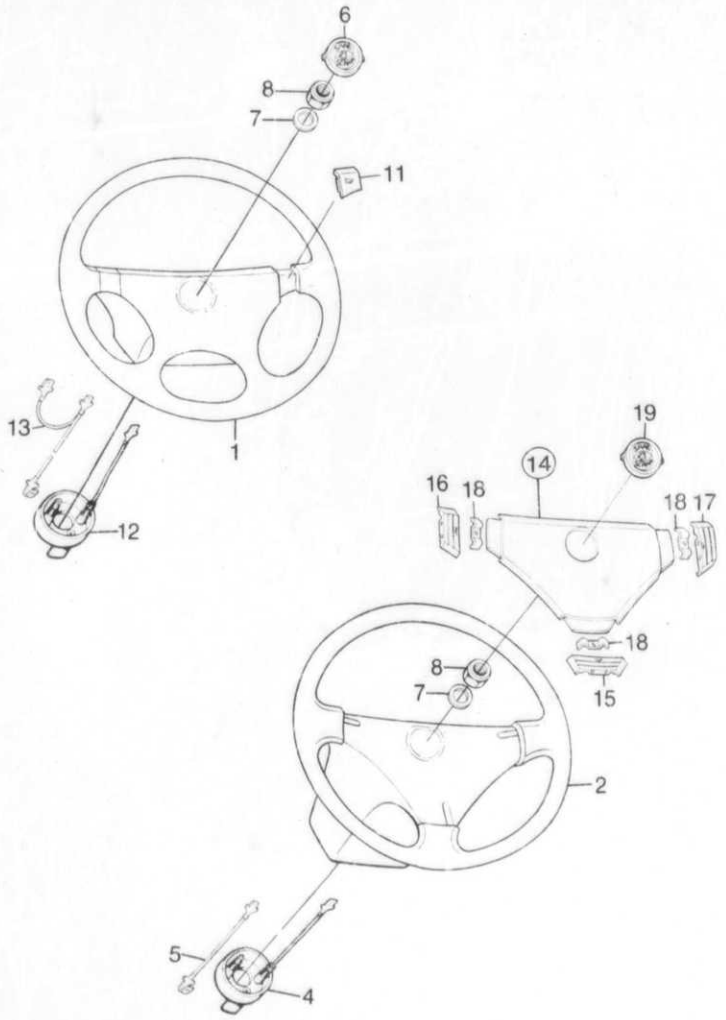


F5567 90086

| 0175 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *89 61 153* | | -1985 | 1 | Steering wheel four spoke | Ratt fyrekrad | 5 |
| 0020 | | | | NLS - USE 8865477 | | | | |
| 0030 | 1 | 89 65 477 | | 1986- | 1 | Steering wheel four spoke | Ratt fyrekrad | 5 |
| 0040 | | | | | | | | |
| 0050 | 2 | *89 87 422* | | 20), -1985 | 1 | Steering wheel three spoke | Ratt treekrad | 5 |
| 0060 | | | | NLS | | | | |
| 0070 | 2 | *89 65 436* | | 20), 1986-87 | 1 | Steering wheel three spoke | Ratt treekrad | 5 |
| 0080 | | | | NLS | | | | |
| 0090 | 2 | *89 73 547* | | 20), 1988- | 1 | Steering wheel three spoke | Ratt treekrad | 5 |
| 0100 | | | | NLS | | | | |
| 0110 | 2 | 89 71 715 | | 500), 1989- | 1 | Steering wheel three spoke,leather | Ratt treekrad,läder | 5 |
| 0120 | | | | | | | | |
| 0130 | 4 | 89 87 232 | | | 1 | Companion flange | Medbringare | 6 |
| 0140 | 5 | 89 87 273 | | | 1 | Cable | Kabel | 5 |
| 0150 | 6 | 89 89 659 | | | 1 | Emblem | Emblem | 3 |
| 0160 | 7 | 79 33 872 | | | 1 | Washer | Bricka | 5 |
| 0170 | 8 | 89 42 716 | | 14) | 1 | Lock nut | Låsmutter | 5 |
| 0180 | 8 | 89 54 315 | | 15) | 1 | Nut | Mutter | 5 |
| 0200 | 11 | 89 61 096 | | LH | 1 | Horn button | Signalknapp | 5 |
| 0210 | 11 | 89 61 104 | | RH | 1 | Horn button | Signalknapp | 5 |
| 0220 | 12 | 89 88 313 | | | 1 | Companion flange | Medbringare | 5 |
| 0230 | 13 | 89 88 420 | | | 1 | Ground cable | Jordkabel | 5 |
| 0240 | 14 | 89 90 376 | | | 1 | Steering wheel pad | Rattkudde | 3 |
| 0250 | 15 | 89 90 962 | | | 1 | .Horn button | .Signalknapp | 6 |
| 0260 | 16 | 89 90 970 | | | 1 | .Horn button | .Signalknapp | 6 |
| 0270 | 17 | 89 90 988 | | | 1 | .Horn button | .Signalknapp | 6 |
| 0280 | 18 | 89 87 406 | | | 3 | .Contact plate | .Kontaktplatta | 6 |
| 0290 | 19 | 89 90 103 | | | 1 | .Emblem | .Emblem | 3 |

14. Ch.-K3022166, -K7030319
15. Ch.K3022167-, K7030320-
20. Superseded by 4103438 and 4416087. Ersatt av 4103438 och 4416087.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

6 GROUP INDEX

| | |
|---|---|
| Front wheel suspension | 4-C06 |
| Steering device | 4-C08 |
| Complete sets | 4-C24 |

# 4-C12

## Steering gear
## Styrväxel

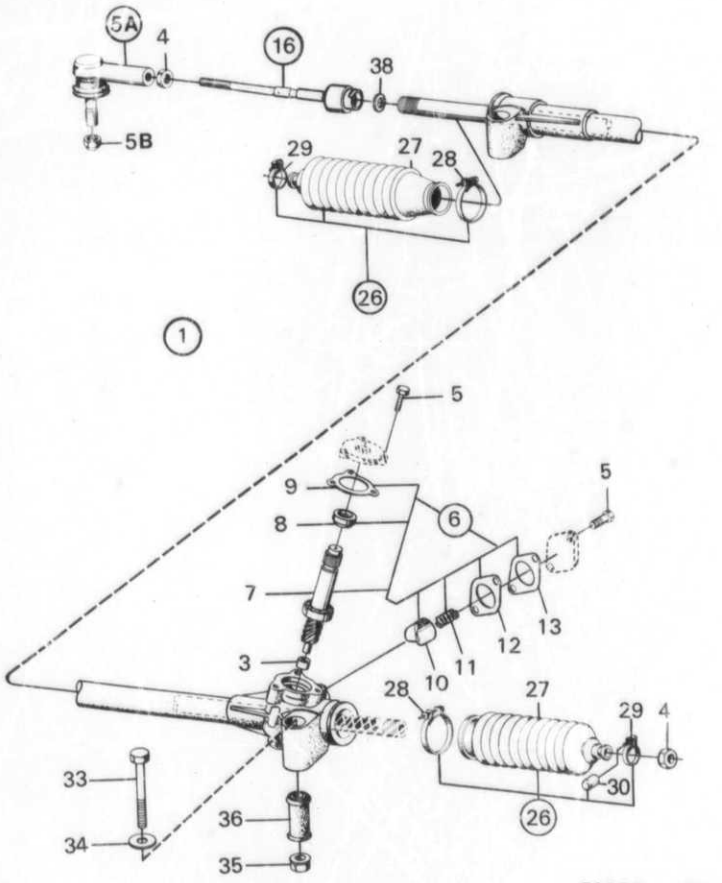


F1938 - 900

| 0200 | Pos | Part No/Art. nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 89 85 129 | | 700) | 1 | Steering gear | Styrväxel | 4 |
| 0030 | 1 | 89 85 137 | | RHD | 1 | Steering gear | Styrväxel | 4 |
| 0060 | 3 | 89 34 135 | | | 1 | .Needle bearing | .Nållager | 4 |
| 0070 | 4 | 89 24 169 | | | 2 | .Nut | .Mutter | 5 |
| 0080 | 5 | *80 82 950* | | NLS - USE 9166323 | 5 | .Screw | .Skruv | 5 |
| 0090 | | | | | | | | |
| 0100 | 5A | 89 93 354 | | 11) | 1 | Drag link end | Styrstagsända | 2 |
| 0110 | | | | See page 6-023, 4-C24 | | | | |
| 0120 | 5B | 81 51 482 | | (8073546) | 1 | .Lock nut | .Låsmutter | 5 |
| 0130 | | | | | | | | |
| 0131 | 5A | 89 93 560 | | 12) | 1 | Drag link end | Styrstagsända | 2 |
| 0132 | | | | See page 6-023, 4-C24 | | | | |
| 0133 | 5B | 81 51 482 | | (8073546) | 1 | .Lock nut | .Låsmutter | 5 |
| 0134 | | | | | | | | |
| 0140 | 6 | 89 44 761 | | | X | Repair kit pinion | Reparationssats pinjong | 4 |
| 0150 | | | | | | | | |
| 0160 | 6 | 89 44 779 | | RHD | X | Repair kit pinion | Reparationssats pinjong | 4 |
| 0170 | | | | | | | | |
| 0180 | 7 | | | 1) | 1 | .pinion | .pinjong | |
| 0190 | 8 | *89 34 200* | | 1) NLS | 1 | .Sealing ring | .Tätningsring | 4 |
| 0200 | 9 | *89 34 192* | | 1) NLS | 1 | .Gasket | .Packning | 4 |
| 0210 | 10 | *89 33 087* | | 1) NLS | 1 | .Plunger | .Plunge | 4 |
| 0220 | 11 | *89 42 104* | | 1) NLS | 1 | .Spring | .Fjäder | 6 |
| 0230 | 12 | 89 26 644 | | 0,044--0,056 MM | 2 | .Shim | .Shim | 4 |
| 0240 | 12 | *89 26 651* | | 0,127 MM NLS | 2 | .Shim | .Shim | 4 |
| 0250 | 12 | 89 26 669 | | 0,254 MM | 2 | .Shim | .Shim | 4 |
| 0260 | 13 | *89 26 685* | | 1) NLS | 1 | .Gasket | .Packning | 3 |
| 0270 | | | | | | | | |
| 0290 | 16 | 89 47 624 | | | 2 | Steering rod | Styrstag | 3 |
| 0300 | | | | | | | | |
| 0310 | 26 | 89 47 913 | | (8944720) | X | Bellows kit | Bälgsats | 2 |
| 0320 | | | | See page 6-023, 4-C24 | | | | |
| 0330 | 27 | *89 26 743* | | 1) NLS | 1 | .Bellows | .Bälg | |
| 0340 | 28 | 89 26 768 | | | 1 | .Clamp | .Klamma | 5 |
| 0350 | 29 | 89 20 183 | | | 1 | .Clamp | .Klamma | 5 |
| 0360 | 30 | *89 20 191* | | 1) NLS | 1 | .Cover | .Huv | |
| 0370 | | | | | | | | |
| 0380 | 33 | 89 34 242 | | | 2 | Screw | Skruv | 5 |
| 0390 | 34 | 89 34 259 | | | 2 | Washer | Bricka | 5 |
| 0400 | 35 | 79 71 765 | | | 2 | Nut | Mutter | 5 |
| 0410 | 36 | 89 34 119 | | | 2 | Rubber bushing | Gummibussning | 3 |
| 0420 | 38 | 89 47 962 | | | 2 | Spacer washer | Distansbricka | 5 |

1. Not as separate spare part. Ej som separat reservdel.
11. B201, CH.--K3010693, --K7015707 B202, CH.--K3000505, --K7000622, --J3040028, --J7050311
12. B201, CH.K3010694--, K7015708-- B202, CH.K3000506--, K7000623--, J3040029--, J7050312--
700. Also available as exchange unit. Finns även som utbytesenhet.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


6 GROUP INDEX


| | |
|---|---|
| Front wheel suspension | 4-C06 |
| Steering device | 4-C08 |
| Complete sets | 4-C24 |

# 4-C14

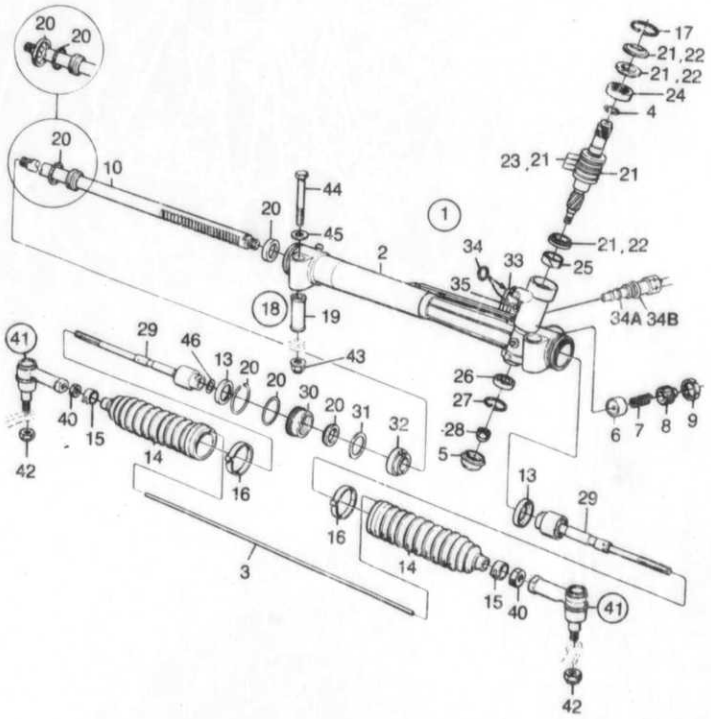


F2536 - 900

| 0250 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *91 04 118* | | 9,700) (8936460) NLS - USE 4106688 | 1 | Steering gear | Styrväxel | 4 |
| 0020 | 1 | *91 06 295* | | 10,700) NLS - USE 4106688 | 1 | Steering gear | Styrväxel | 4 |
| 0030 | 1 | *89 93 537* | | 21,9) NLS - USE 8993693 | 1 | Steering gear | Styrväxel | 4 |
| 0040 | 1 | *89 93 545* | | 21,10) NLS - USE 8993693 | 1 | Steering gear | Styrväxel | 4 |
| 0050 | 1 | *91 04 126* | | 9,700) RHD(8938813) NLS - USE 4106696 | 1 | Steering gear | Styrväxel | 4 |
| 0060 | 1 | *91 06 303* | | 10,700) RHD NLS - USE 4106696 | 1 | Steering gear | Styrväxel | 4 |
| 0070 | 2 | *89 36 544* | | 1,9) NLS - USE 4004867 | 1 | .Steering gear | .Styrväxel | 4 |
| 0080 | 2 | *91 06 154* | | 1,10) NLS - USE 4004867 | 1 | .Steering gear | .Styrväxel | 4 |
| 0090 | 3 | 89 36 700 | | | 1 | ..Tube | ..Rör | 4 |
| 0100 | 4 | 89 36 890 | S | | 1 | ..Lock ring | ..Låsring | 5 |
| 0110 | 5 | 89 36 999 | | | 1 | ..Cap | ..Kapsel | 2 |
| 0120 | 6 | *89 37 005* | | NLS - USE 4199923 | 1 | ..Plunger | ..Plunge | 4 |
| 0130 | 7 | 91 01 858 | | | 1 | ..Spring | ..Fjäder | 6 |
| 0140 | 8 | 89 37 021 | | | 1 | ..Screw | ..Skruv | 5 |
| 0150 | 9 | 89 37 039 | | | 1 | ..Lock nut | ..Låsmutter | 3 |
| 0160 | 10 | *89 37 047* | | 6,8) NLS - USE 9106022 | 1 | ..Rack | ..Kuggstång | 6 |
| 0170 | 10 | 91 06 022 | | 7,8) | 1 | ..Rack | ..Kuggstång | 6 |
| 0180 | 10 | *89 39 191* | | 6,8) RHD NLS - USE 9106030 | 1 | ..Rack | ..Kuggstång | 6 |
| 0190 | 10 | 91 06 030 | | 7,8) RHD | 1 | ..Rack | ..Kuggstång | 6 |
| 0200 | 13 | 89 36 684 | S | | 2 | ..Ring | ..Ring | 4 |
| 0220 | 14 | 89 93 099 | S | | 2 | ..Bellows | ..Bälg | 3 |
| 0230 | | 89 37 146 | | 1) | 1 | ...Bellows | ...Bälg | 6 |
| 0240 | 15 | 89 37 161 | | | 1 | ...Clamp | ...Klämma | 5 |
| 0250 | 16 | *89 37 153* | S | NLS - USE 4424057 | 1 | ...Clamp | ...Klammer | 5 |
| 0270 | 17 | 89 36 908 | S | | 1 | ..Lock ring | ..Låsring | 5 |
| 0280 | 18 | 89 93 511 | | | 1 | ..Rubber bushing kit | ..Gummibussningssats | 3 |
| 0290 | 19 | 89 34 119 | | | 2 | ...Rubber bushing | ...Gummibussning | 3 |
| 0310 | 20 | 41 06 613 | | | 1 | ..Sealing kit rack | ..Tätningssats kuggstång | 3 |
| 0330 | 16 | *89 37 153* | | NLS - USE 4424057 | 1 | ...Clamp | ...Klammer | 5 |
| 0340 | | 41 06 506 | | 1) | 1 | ...Seal | ...Tätning | 3 |
| 0350 | | 41 03 974 | | 1) | 1 | ...Seal | ...Tätning | 3 |
| 0360 | | 41 06 498 | | 1) | 1 | ...O-ring | ...O-ring | 3 |
| 0370 | | 89 70 873 | | 1) | 1 | ...Piston ring | ...Kolvring | 5 |
| 0380 | | 41 03 958 | | 1) | 1 | ...O-ring | ...O-ring | 3 |
| 0390 | | 89 37 070 | | 1) | 1 | ...Piston ring | ...Kolvring | 5 |
| 0400 | | 89 36 676 | | 1) | 1 | ...Lock ring | ...Låsring | 5 |
| 0410 | 21 | 41 06 621 | | | 1 | ..Repair kit pinion | ..Reparationssats pinjong | 4 |
| 0430 | | 41 03 990 | S | 1) | 1 | ...Seal | ...Tätning | 3 |
| 0440 | | 41 04 022 | S | 1) | 1 | ...Seal | ...Tätning | 3 |
| 0450 | | 41 04 592 | S | 1) | 1 | ...Seal | ...Tätning | 3 |
| 0460 | | 89 36 791 | S | 1) | 1 | ...Valve | ...Ventil | |
| 0470 | 25 | 89 36 619 | S | | 1 | ...Bushing | ...Bussning | 3 |
| 0480 | | 89 36 882 | | 1) | 4 | ...Teflon ring | ...Teflonring | 3 |

1. Not as separate spare part. Ej som separat reservdel.
6. Up to and incl. code -6 A 051. T.o.m kod -6 A 051.
7. From code 6 A 052-. Fr.o.m kod 6 A 052-.
8. See code on the plunger for the adjustment screw and service manual, group 6. Se märkning på plunge för justerskruven och verkstadshandboken, grupp 6.
9. Ch.-J3017282, -J7026099.
10. Ch.J3017283-, J7026100-.
21. Only for cars that will be repaired in USA Endast för bilar som repareras i USA
700. Also available as exchange unit. Finns även som utbytesenhet.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


6 GROUP INDEX


| | |
|---|---|
| Front wheel suspension | 4-C06 |
| Steering device | 4-C08 |
| Complete sets | 4-C24 |

# 4-C16

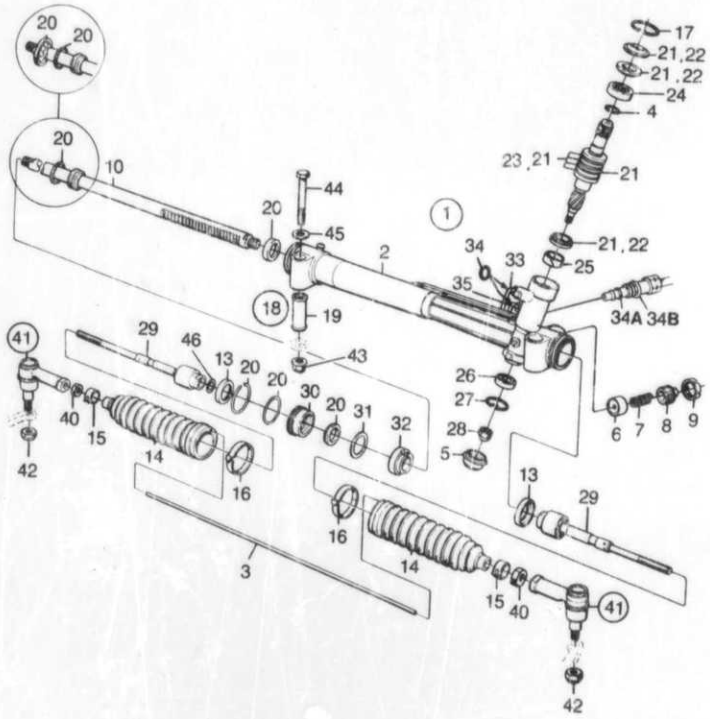


F2536 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 21 | 41 06 647 | | RHD | 1 | ..Repair kit pinion | ..Reparationssats pinjong | 4 |
| | 41 03 990 | S | 1) | 1 | ...Seal | ...Tätning | 3 |
| | 41 04 022 | S | 1) | 1 | ...Seal | ...Tätning | 3 |
| | 41 04 592 | S | 1) | 1 | ...Seal | ...Tätning | 3 |
| | 89 39 176 | S | 1) | 1 | ...Valve | ...Ventil | |
| 25 | 89 36 619 | S | | 1 | ...Bushing | ...Bussning | 3 |
| | 89 35 882 | | 1) | 4 | ...Teflon ring | ...Teflonring | 3 |
| 22 | 41 04 493 | | | 1 | ..Sealing kit pinion | ..Tätningssats pinjong | 3 |
| | 41 03 990 | S | 1) | 1 | ...Seal | ...Tätning | 3 |
| | 41 04 022 | S | 1) | 1 | ...Seal | ...Tätning | 3 |
| | 41 04 592 | S | 1) | 1 | ...Seal | ...Tätning | 3 |
| 23 | 41 04 519 | | | 1 | ..Sealing kit pinion | ..Tätningssats pinjong | 3 |
| | 89 36 882 | S | 1) | 4 | ...Teflon ring | ...Teflonring | 3 |
| 24 | 89 36 932 | | | 1 | ..Needle bearing | ..Nållager | 6 |
| 25 | 89 36 619 | | | 1 | ..Bushing | ..Bussning | 3 |
| 26 | 89 36 965 | | | 1 | ..Ball bearing | ..Kullager | 6 |
| 27 | 89 36 973 | | | 1 | ..Lock ring | ..Låsring | 5 |
| 28 | 41 04 162 | | | 1 | ..Lock nut | ..Låsmutter | 5 |
| 29 | 89 88 941 | | | 1 | ..Steering rod | ..Styrstag | 4 |
| | 89 88 933 | S | 1) | 1 | ...Steering rod | ...Styrstag | 3 |
| 13 | 89 36 684 | S | | 1 | ...Ring | ...Ring | 4 |
| 16 | *89 37 153* | S | NLS - USE 4424057 | 1 | ...Clamp | ...Klammer | 5 |
| 30 | 89 38 995 | | | 1 | ..End plate | ..Gavel | 5 |
| 31 | 89 40 579 | | | 1 | ..Washer | ..Bricka | 5 |
| 32 | 89 36 643 | | | 1 | ..End plate | ..Gavel | 5 |
| 33 | 89 47 079 | | 9), LHD | 1 | ..Pipe set long | ..Rörsats långt | 4 |
| | *89 46 311* | S | 1) NLS - USE 8947087 | 1 | ...Pipe | ...Rör | 4 |
| 34A | 89 46 352 | S | | 2 | ...O-ring | ...O-ring | 3 |
| 34B | 89 46 345 | S | | 2 | ...O-ring | ...O-ring | 3 |
| 33 | 41 06 589 | S | 10), LHD | 1 | ..Pipe set long | ..Rörsats långt | 4 |
| | 91 06 220 | S | 1) | 1 | ...Pipe | ...Rör | |
| 34 | 41 04 014 | S | | 1 | ...O-ring | ...O-ring | 3 |
| 33 | 89 47 103 | | 9), RHD | 1 | ..Pipe set long | ..Rörsats långt | 4 |
| | *89 46 329* | S | 1) NLS - USE 8947095 | 1 | ...Pipe | ...Rör | 4 |
| 34A | 89 46 352 | S | | 2 | ...O-ring | ...O-ring | 3 |
| 34B | 89 46 345 | S | | 2 | ...O-ring | ...O-ring | 3 |
| 33 | 41 06 605 | | 10), RHD | 1 | ..Pipe set long | ..Rörsats långt | 4 |
| | 91 06 279 | S | 1) | 1 | ...Tube | ...Rör | 4 |
| 34 | 41 04 014 | S | | 2 | ...O-ring | ...O-ring | 3 |
| 35 | 89 47 087 | S | 9), LHD | 1 | ..Pipe set short | ..Rörsats kort | 4 |
| | *89 46 303* | | 1) NLS - USE 8947079 | 1 | ...Pipe | ...Rör | 4 |

1. Not as separate spare part. Ej som separat reservdel.
9. Ch.-J3017282, -J7026099.
10. Ch.J3017283-, J7026100-.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


6 GROUP INDEX


| | |
|---|---|
| Front wheel suspension | 4-C06 |
| Steering device | 4-C08 |
| Complete sets | 4-C24 |

# 4-C18

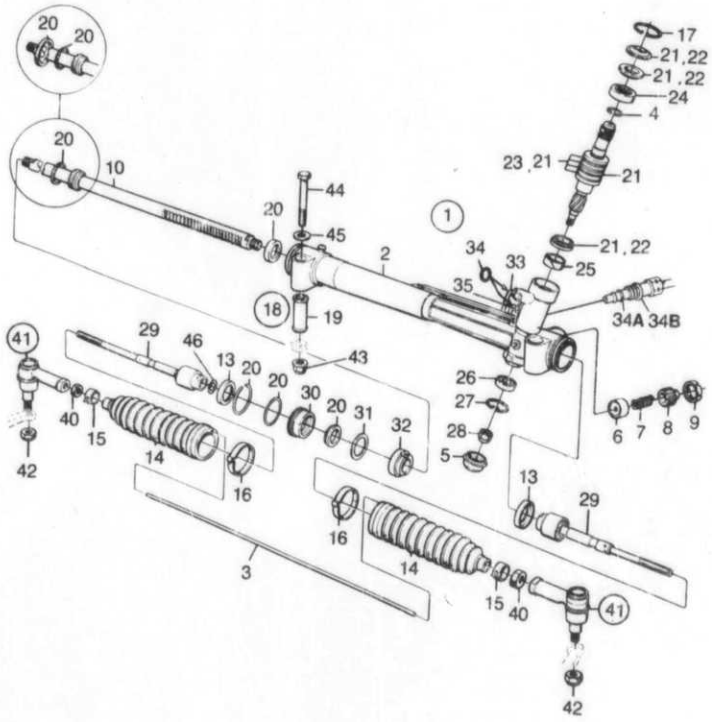


F2536 - 900

| 0250 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 1090 | 34A | 89 46 352 | S | | 2 | ...O-ring | ...O-ring | 3 |
| 1100 | 34B | 89 46 345 | S | | 2 | ...O-ring | ...O-ring | 3 |
| 1110 | | | | | | | | |
| 1120 | 35 | 41 06 571 | | 10), LHD | 1 | ..Pipe set short | ..Rörsats kort | 4 |
| 1130 | | | | | | | | |
| 1140 | | 91 06 212 | S | 1) | 1 | ...Pipe | ...Rör | |
| 1150 | 34 | 41 04 014 | S | | 2 | ...O-ring | ...O-ring | 3 |
| 1160 | | | | | | | | |
| 1170 | 35 | 89 47 095 | | 9), RHD | 1 | ..Pipe set short | ..Rörsats kort | 4 |
| 1180 | | | | | | | | |
| 1190 | | *89 46 337* | S | 1) NLS - USE 8947103 | 1 | ...Pipe | ...Rör | 4 |
| 1200 | 34A | 89 46 352 | S | | 2 | ...O-ring | ...O-ring | 3 |
| 1210 | 34B | 89 46 345 | S | | 2 | ...O-ring | ...O-ring | 3 |
| 1220 | | | | | | | | |
| 1230 | 35 | 41 06 597 | | 10), RHD | 1 | ..Pipe set short | ..Rörsats kort | 4 |
| 1240 | | | | | | | | |
| 1250 | | 91 06 287 | S | 1) | 1 | ...Tube | ...Rör | 4 |
| 1260 | 34 | 41 04 014 | S | | 2 | ...O-ring | ...O-ring | 3 |
| 1270 | | | | | | | | |
| 1280 | 40 | *80 73 975* | | -1987 NLS - USE 9105735 | 2 | Nut | Mutter | 5 |
| 1290 | 40 | *81 51 094* | | 1988- NLS - USE 9105735 | 2 | Nut | Mutter | 5 |
| 1300 | 41 | 89 90 354 | | 11) | 1 | Drag link end | Styrstagsända | 2 |
| 1310 | | | | See page 6-023, 4-C24 | | | | |
| 1320 | 42 | 81 51 482 | | | 1 | .Lock nut | .Låsmutter | 5 |
| 1330 | 41 | 89 93 560 | | 12) | 1 | Drag link end | Styrstagsända | 2 |
| 1340 | | | | See page 6-023, 4-C24 | | | | |
| 1350 | 42 | 81 51 482 | | | 1 | .Lock nut | .Låsmutter | 5 |
| 1360 | 43 | 79 71 765 | | | 2 | Nut | Mutter | 5 |
| 1370 | 44 | 89 34 242 | | | 2 | Screw | Skruv | 5 |
| 1380 | 45 | 89 34 259 | | | 2 | Washer | Bricka | 5 |
| 1385 | 46 | 89 46 360 | | 5) | 2 | Spacer washer | Distansbricka | 5 |
| 1390 | | *78 74 316* | | 11) | X | Steering gear kit | Styrväxelsats | 6 |
| 1400 | | | | See page 6-023, 4-C24 NLS - USE 8993354, 8993552 | | | | |
| 1410 | | 89 93 552 | | 12) | X | Steering gear kit | Styrväxelsats | 4 |
| 1420 | | | | See page 6-023, 4-C24 | | | | |

1. Not as separate spare part. Ej som separat reservdel.
5. See Service Manual, group 6. Se Verkstadshandbok, grupp 6.
9. Ch.-J3017282, -J7026099.
10. Ch.J3017283-, J7026100-.
11. B201, CH.-K3010693, -K7015707 B202, CH.-K3000505, -K7000622, -J3040028, -J7050311
12. B201, CH.K3010694-, K7015708- B202, CH.K3000506-, K7000623-, J3040029-, J7050312-




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


6 GROUP INDEX


| | |
|---|---|
| Front wheel suspension | 4-C06 |
| Steering device | 4-C08 |
| Complete sets | 4-C24 |

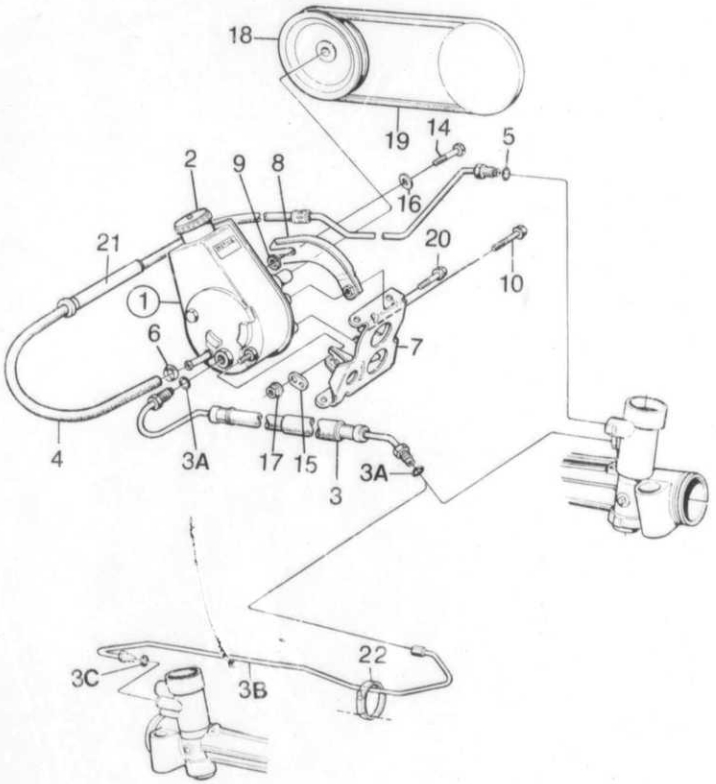


F5568 90096

| 0275 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0080 | 1 | *91 01 577* | | 4) NLS - USE 4106712 | 1 | Hydraulic pump | Hydraulpump | 3 |
| 0100 | 2 | 89 43 979 | | | 1 | ,Cover | ,Lock | 4 |
| 0120 | 3 | 89 42 575 | | | 1 | Hose | Slang | 4 |
| 0125 | 3A | *89 37 500* | | NLS - USE 4104048 | 2 | ,O-ring | ,O-ring | 3 |
| 0130 | 3B | 89 40 678 | | RHD | 1 | Delivery pipe | Tryckrör | 4 |
| 0135 | 3C | *89 37 500* | | RHD NLS - USE 4104048 | 1 | ,O-ring | ,O-ring | 3 |
| 0160 | 4 | 89 48 333 | | | 1 | Hose | Slang | 4 |
| 0200 | 4 | 89 48 341 | | RHD | 1 | Hose | Slang | 4 |
| 0210 | 5 | *89 37 500* | | NLS - USE 4104048 | 1 | ,O-ring | ,O-ring | 3 |
| 0260 | 6 | *79 63 507* | | NLS - USE 7970049 | 1 | Hose clamp | Slangklamma | 5 |
| 0280 | 7 | 93 25 705 | | | 1 | Bracket | Fäste | 3 |
| 0300 | 8 | 93 25 713 | | | 1 | Stay | Stag | 3 |
| 0320 | 9 | 93 24 914 | | | 1 | Spacer ring | Distansring | 6 |
| 0340 | 10 | *79 67 946* | | NLS - USE 7979131 | 1 | Screw | Skruv | 5 |
| 0380 | 14 | *80 83 156* | | -1988 NLS - USE 8148215 | 1 | Screw | Skruv | 5 |
| 0390 | 14 | 81 48 215 | | 500),1989- | 1 | Screw | Skruv | 5 |
| 0400 | 15 | 93 38 542 | | | 1 | Washer | Bricka | 5 |
| 0420 | 16 | 80 73 108 | | | 1 | Washer | Bricka | 5 |
| 0440 | 17 | 79 67 979 | | | 1 | Nut | Mutter | 5 |
| 0520 | 18 | 89 86 051 | | | 1 | Pulley | Remskiva | 3 |
| 0600 | 19 | 93 61 791 | | | 1 | V-belt | Kilrem | 1 |
| 0640 | 20 | 80 82 927 | | | 1 | Screw | Skruv | 5 |
| 0660 | 21 | 89 44 001 | | | 1 | Sleeve | Hylsa | 5 |
| 0670 | 22 | 79 70 130 | | RHD | 1 | Hose clamp | Slangklamma | 5 |
| 0680 | | *89 89 840* | | See page 6-023, 4-C24 | X | Gasket kit | Packningsats | 4 |
| 0690 | | | | NLS - USE 4104873 | | hydraulic pump | hydraulpump | |

4. Cars without rear hydraulic engine support Bilar utan hydrauliska bakre motorfästen
11. B201, CH.--K3010693, --K7015707 B202, CH.--K3000505, --K7000622, --J3040028, --J[illegible]0311
500. Also valid for SE 1988B. Gäller även för SE 1988B.


MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

6 GROUP INDEX

| | |
|---|---|
| Front wheel suspension | 4-C06 |
| Steering device | 4-C08 |
| Complete sets | 4-C24 |

# 4-C22

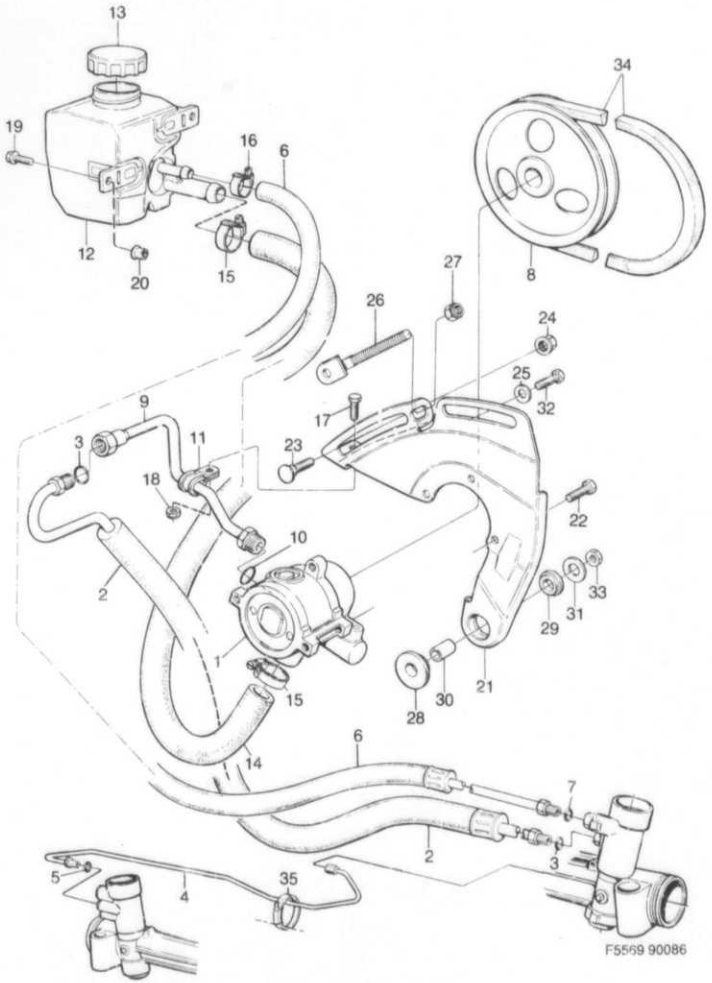


| 0300 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0030 | 1 | *91 01 585* | | (8991689) NLS - USE 4106704 | 1 | Hydraulic pump | Hydraulpump | 3 |
| 0030 | | | | | | | | |
| 0035 | 2 | 89 42 575 | | | 1 | Hose | Slang | 4 |
| 0036 | 3 | *89 37 500* | | NLS - USE 4104048 | 2 | .O-ring | .O-ring | 3 |
| 0038 | 4 | 89 40 678 | | RHD | 1 | Delivery pipe | Tryckrör | 4 |
| 0039 | 5 | *89 37 500* | | RHD NLS - USE 4104048 | 1 | .O-ring | .O-ring | 3 |
| 0040 | 6 | *89 85 830* | | NLS - USE 4199519 | 1 | Hose | Slang | 4 |
| 0050 | 6 | *89 85 848* | | RHD NLS - USE 4199527 | 1 | Hose | Slang | 4 |
| 0055 | 7 | *89 37 500* | | NLS - USE 4104048 | 1 | .O-ring | .O-ring | 3 |
| 0060 | 8 | 89 85 947 | | | 1 | Pulley | Remskiva | |
| 0070 | 9 | 91 02 559 | | | 1 | Junction pipe | Skarvrör | 4 |
| 0075 | 10 | *89 37 500* | | NLS - USE 4104048 | 1 | .O-ring | .O-ring | 3 |
| 0080 | 11 | 79 69 363 | | | 1 | Clamp | Klammer | 5 |
| 0090 | 12 | *89 86 069* | | NLS - USE 4197380, 9104555 | 1 | Reservoir | Behållare | 4 |
| 0090 | | | | | | | | |
| 0100 | 13 | *89 56 385* | | NLS - USE 4197380 | 1 | Cover | Lock | 5 |
| 0110 | 14 | 91 03 201 | | | 1 | Hose | Slang | 5 |
| 0120 | 15 | 79 63 531 | | | 2 | Hose clamp | Slangklamma | 5 |
| 0130 | 16 | *79 63 507* | | NLS - USE 7970049 | 1 | Hose clamp | Slangklamma | 5 |
| 0140 | 17 | *80 19 911* | | NLS - USE 7399603 | 1 | Screw | Skruv | 5 |
| 0150 | 18 | 80 73 512 | | | 1 | Lock nut | Låsmutter | 3 |
| 0160 | 19 | 79 74 694 | | | 2 | Screw | Skruv | 5 |
| 0170 | 20 | 92 23 082 | | | 2 | Nut | Mutter | 5 |
| 0180 | 21 | 75 47 482 | | | 1 | Bracket | Fäste | 3 |
| 0190 | 22 | 80 82 935 | | | 3 | Screw | Skruv | 5 |
| 0200 | 23 | 93 69 844 | | | 1 | Screw | Skruv | 5 |
| 0210 | 24 | 79 67 953 | | | 1 | Nut | Mutter | 5 |
| 0220 | 25 | 80 73 249 | | | 1 | Washer | Bricka | 5 |
| 0230 | 26 | 75 12 247 | | | 1 | Screw | Skruv | 5 |
| 0240 | 27 | 80 74 288 | | | 1 | Nut | Mutter | 5 |
| 0250 | 28 | 93 65 909 | | | 1 | Rubber bushing | Gummibussning | 4 |
| 0260 | 29 | 93 65 917 | | | 1 | Rubber bushing | Gummibussning | 4 |
| 0270 | 30 | 83 56 859 | | | 1 | Sleeve | Hylsa | 6 |
| 0280 | 31 | 80 73 124 | | | 1 | Washer | Bricka | 5 |
| 0290 | 32 | 80 82 943 | | | 1 | Screw | Skruv | 5 |
| 0300 | 33 | 79 67 953 | | | 1 | Nut | Mutter | 5 |
| 0310 | 34 | 83 39 921 | | | 1 | V-belt | Kilrem | 1 |
| 0312 | 35 | 79 70 130 | | RHD | 1 | Hose clamp | Slangklamma | 5 |
| 0320 | | *89 89 857* | | See page 6-023, 4-C24 NLS - USE 4104766 | X | Gasket kit hydraulic pump | Packningsats hydraulpump | 4 |
| 0330 | | | | | | | | |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

6 GROUP INDEX

| | |
|---|---|
| Front wheel suspension | 4-C06 |
| Steering device | 4-C08 |
| Complete sets | 4-C24 |


Complete sets

# 4-C24

## Fore carriage
## Steering device


Satser


## Framvagn
## Styrinrättning

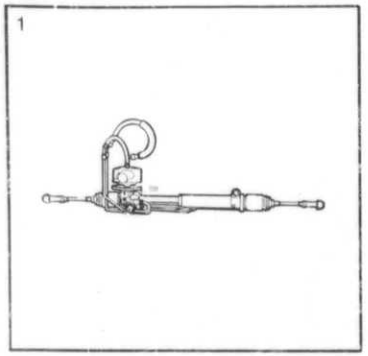







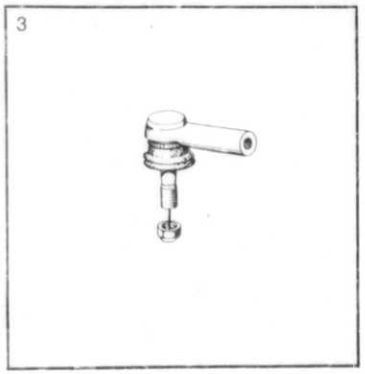

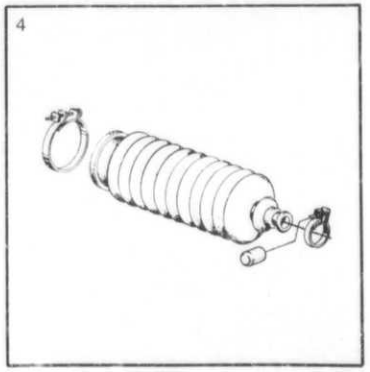
R 9437 - 900
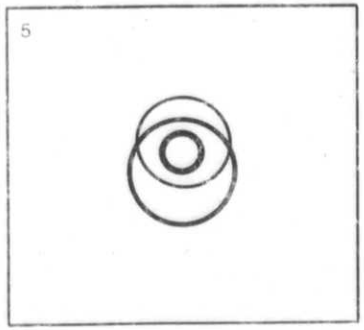
| 1000 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *78 74 316* | | 11) LHD | X | Steering gear kit | Styrväxelsats | 6 |
| 0020 | | | | NLS - USE 8993354, 8993552 | | power steering | servostyrning | |
| 0030 | | *91 06 295* | | NLS - USE 4106688 | 1 | .Steering gear | .Styrväxel | 4 |
| 0050 | | 89 34 242 | | | 2 | .Screw | .Skruv | 5 |
| 0060 | | 89 34 259 | | | 2 | .Washer | .Bricka | 5 |
| 0070 | | 79 71 765 | | | 2 | .Nut | .Mutter | 5 |
| 0080 | | 79 67 979 | | | 2 | .Nut | .Mutter | 5 |
| 0090 | | *91 01 577* | | NLS - USE 4106712 | 1 | .Hydraulic pump | .Hydraulpump | 3 |
| 0100 | | 89 86 051 | | | 1 | .Pulley | .Remskiva | 3 |
| 0110 | | *79 63 507* | | NLS - USE 7970049 | 1 | .Hose clamp | .Slangklamma | 5 |
| 0120 | | 89 42 575 | | | 1 | .Hose | .Slang | 4 |
| 0130 | | 89 48 333 | | | 1 | .Hose | .Slang | 4 |
| 0140 | | 79 70 130 | | | 1 | .Hose clamp | .Slangklamma | 5 |
| 0150 | | 89 44 001 | | | 1 | .Sleeve | .Hylsa | 5 |
| 0160 | | 93 61 791 | | | 1 | .V-belt | .Kilrem | 1 |
| 0170 | | 93 25 705 | | | 1 | .Bracket | .Fäste | 3 |
| 0180 | | 93 25 713 | | | 1 | .Stay | .Stag | 3 |
| 0190 | | 93 24 914 | | | 1 | .Spacer ring | .Distansring | 6 |
| 0200 | | *79 67 946* | | NLS - USE 7979131 | 1 | .Screw | .Skruv | 5 |
| 0210 | | *80 83 156* | | NLS - USE 8148215 | 1 | .Screw | .Skruv | 5 |
| 0220 | | 93 38 542 | | | 1 | .Washer | .Bricka | 5 |
| 0230 | | *81 51 094* | | NLS - USE 9105735 | 2 | .Nut | .Mutter | 5 |
| 0240 | | 80 82 927 | | | 1 | .Screw | .Skruv | 5 |
| 0250 | | 89 37 617 | | | X | .Oil | .Olja | 6 |
| 0260 | | | | | | | | |
| 0270 | 1 | 89 93 552 | | 12) LHD | X | Steering gear kit | Styrväxelsats | 4 |
| 0290 | | *91 06 295* | | NLS - USE 4106688 | 1 | .Steering gear | .Styrväxel | 4 |
| 0300 | | 89 34 242 | | | 2 | .Screw | .Skruv | 5 |
| 0310 | | 89 34 259 | | | 2 | .Washer | .Bricka | 5 |
| 0320 | | 79 71 765 | | | 2 | .Nut | .Mutter | 5 |
| 0330 | | 79 67 979 | | | 2 | .Nut | .Mutter | 5 |
| 0340 | | *91 01 577* | | NLS - USE 4106712 | 1 | .Hydraulic pump | .Hydraulpump | 3 |
| 0350 | | 89 86 051 | | | 1 | .Pulley | .Remskiva | 3 |
| 0360 | | *79 63 507* | | NLS - USE 7970049 | 1 | .Hose clamp | .Slangklamma | 5 |
| 0370 | | 89 42 575 | | | 1 | .Hose | .Slang | 4 |
| 0380 | | 89 48 333 | | | 1 | .Hose | .Slang | 4 |
| 0390 | | 79 70 130 | | | 1 | .Hose clamp | .Slangklamma | 5 |
| 0400 | | 89 44 001 | | | 1 | .Sleeve | .Hylsa | 5 |
| 0410 | | 93 61 791 | | | 1 | .V-belt | .Kilrem | 1 |
| 0420 | | 93 25 705 | | | 1 | .Bracket | .Fäste | 3 |
| 0430 | | 93 25 713 | | | 1 | .Stay | .Stag | 3 |
| 0440 | | 93 24 914 | | | 1 | .Spacer ring | .Distansring | 6 |
| 0450 | | *79 67 946* | | NLS - USE 7979131 | 1 | .Screw | .Skruv | 5 |
| 0460 | | *80 83 156* | | NLS - USE 8148215 | 1 | .Screw | .Skruv | 5 |
| 0470 | | 93 38 542 | | | 1 | .Washer | .Bricka | 5 |
| 0480 | | 91 05 735 | | | 2 | .Nut | .Mutter | 5 |
| 0490 | | 80 82 927 | | | 1 | .Screw | .Skruv | 5 |
| 0500 | | 89 37 617 | | | X | .Oil | .Olja | 6 |
| 0510 | | | | | | | | |
| 0520 | 2 | 89 93 321 | | | X | End piece | Ändstycke | 2 |
| 0530 | | *89 85 384* | | 1) NLS - USE 8993321 | 1 | .End piece | .Ändstycke | 2 |
| 0540 | | 89 93 677 | | | 1 | .Nut set | .Muttersats | 4 |
| 0580 | | | | | | | | |
| 0590 | 3 | 89 93 354 | | 11) | X | Drag link end | Styrstagsända | 2 |
| 0600 | | *89 85 180* | | 1) NLS - USE 8993354 | 1 | .Drag link end | .Styrstagsända | 2 |
| 0610 | | 81 51 482 | | | 1 | .Lock nut | .Låsmutter | 5 |
| 0620 | | | | | | | | |
| 0630 | 3 | 89 93 560 | | 12) | X | Drag link end | Styrstagsända | 2 |
| 0640 | | 89 90 178 | | 1) | 1 | .Drag link end | .Styrstagsända | 2 |

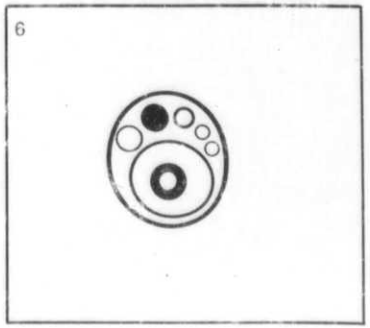1. Not as separate spare part. Ej som separat reservdel.
11. B201, CH.-K3010693, -K7015707 B202, CH.-K3000505, -K7000622, -J3040028, -J7050311
12. B201, CH.K3010694-, K7015708- B202, CH.K3000506-, K7000623-, J3040029-, J7050312-



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


6 GROUP INDEX


| | |
|---|---|
| Front wheel suspension | 4-C06 |
| Steering device | 4-C08 |
| Complete sets | 4-C24 |


Complete sets


# 4-D02


## *Fore carriage*
## *Steering device*


Satser


## *Framvagn*
## *Styrinrättning*

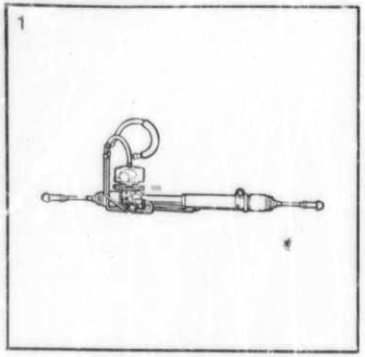


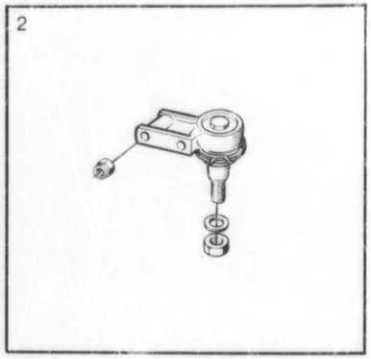
R 9437 - 900
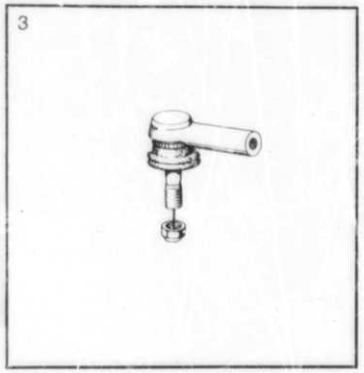
| 1000 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0650 | | 81 51 482 | | | 1 | .Lock nut | .Låsmutter | 5 |
| 0660 | | | | | | | | |
| 0670 | 4 | 89 47 913 | | | X | Bellows kit | Bälgsats | 2 |
| 0680 | | | | | | Steering rod | Styrstag | |
| 0690 | | *89 26 743* | | 1) NLS | 1 | .Bellows | .Bälg | |
| 0700 | | 89 26 768 | | | 1 | .Clamp | .Klamma | 5 |
| 0710 | | 89 20 183 | | | 1 | .Clamp | .Klamma | 5 |
| 0720 | | *89 20 191* | | 1) NLS | 1 | .Cover | .Huv | |
| 0730 | | | | | | | | |
| 0740 | 5 | *89 89 857* | | B202 | X | Gasket kit | Packningsats | 4 |
| 0750 | | | | NLS - USE 4104766 | | hydraulic pump | hydraulpump | |
| 0760 | | | | 1) | 1 | .O-ring | .O-ring | |
| 0770 | | | | 1) | 1 | .O-ring | .O-ring | |
| 0780 | | | | 1) | 1 | .O-ring | .O-ring | |
| 0790 | | | | | | | | |
| 0800 | 6 | *89 89 840* | | B201 | X | Gasket kit | Packningsats | 4 |
| 0810 | | | | NLS - USE 4104873 | | hydraulic pump | hydraulpump | |
| 0820 | | | | 1) | 1 | .O-ring | .O-ring | |
| 0830 | | | | 1) | 2 | .O-ring | .O-ring | |
| 0840 | | | | 1) | 1 | .O-ring | .O-ring | |
| 0850 | | | | 1) | 1 | .Sealing ring | .Tätningsring | |
| 0860 | | | | 1) | 1 | .Sealing ring | .Tätningsring | |
| 0870 | | | | 1) | 2 | .Sealing ring | .Tätningsring | |
| 0880 | | | | 1) | 2 | .Sealing ring | .Tätningsring | |
| 0890 | | | | 1) | 1 | .Sealing ring | .Tätningsring | |
| 0900 | | | | 1) | 1 | .Magnet | .Magnet | |

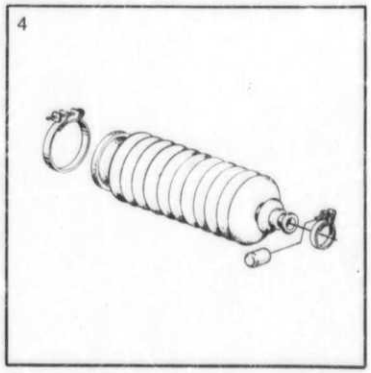1. Not as separate spare part. Ej som separat reservdel.

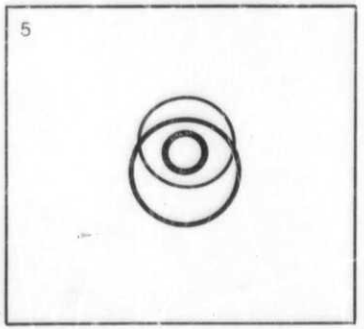

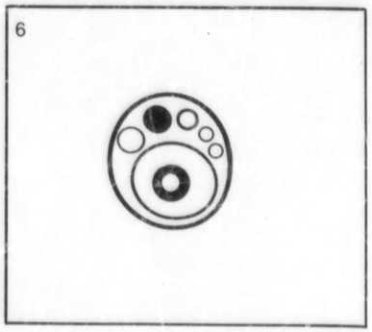MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


6 GROUP INDEX


| | |
|---|---|
| Front wheel suspension | 4-C06 |
| Steering device | 4-C08 |
| Complete sets | 4-C24 |



# Suspension, Wheels
# Fjädringssystem, Hjul
# Suspensión, Ruedas

0041
0020
0040
0060
0080
0100
0120
0130
0140
0160
0170
0175

TABLE OF CONTENTS


| | | |
|---|---|---|
| **Front suspension** | 7 : 5 | 4-E06 |
| **Wheel** | 7 : 9 | 4-E10 |
| **Rear suspension** | 7 : 13 | 4-E14 |
| **Rear axle** | 7 : 17 | 4-E18 |
| **Complete sets** | | |
| Suspension system, wheels | 7 : 19 | 4-E20 |




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


7 GROUP INDEX


| | |
|---|---|
| Front suspension | 4-E06 |
| Wheel | 4-E10 |
| Rear suspension | 4-E14 |
| Rear axle | 4-E18 |
| Complete sets | 4-E20 |

# 4-E03

0042
0020
0040
0060
0240
0260
0263
0290
0300
0320
0330
0335
0340
0360
0380
0720
0740
0760
0770
0780
0800
0810
0820

INNEHÅLLSFÖRTECKNING


| | | |
|---|---|---|
| **Främre fjädring** | 7 : 5 | 4-E06 |
| **Hjul** | 7 : 9 | 4-E10 |
| **Bakre fjädring** | 7 : 13 | 4-E14 |
| **Bakaxel** | 7 : 17 | 4-E18 |
| **Satser** | | |
| Fjädringssystem, hjul | 7 : 19 | 4-E20 |


SUMARIO


| | | |
|---|---|---|
| **Suspension Del** | 7 : 5 | 4-E06 |
| **Ruedas** | 7 : 9 | 4-E10 |
| **Suspension Tras** | 7 : 13 | 4-E14 |
| **Eje Tras** | 7 : 17 | 4-E18 |
| **Juegos completos** | | |
| Suspension ruedas | 7 : 19 | 4-E20 |





MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


7 GROUP INDEX


| | |
|---|---|
| Front suspension | 4-E06 |
| Wheel | 4-E10 |
| Rear suspension | 4-E14 |
| Rear axle | 4-E18 |
| Complete sets | 4-E20 |

# 4-E06 Front suspension — Främre fjädring

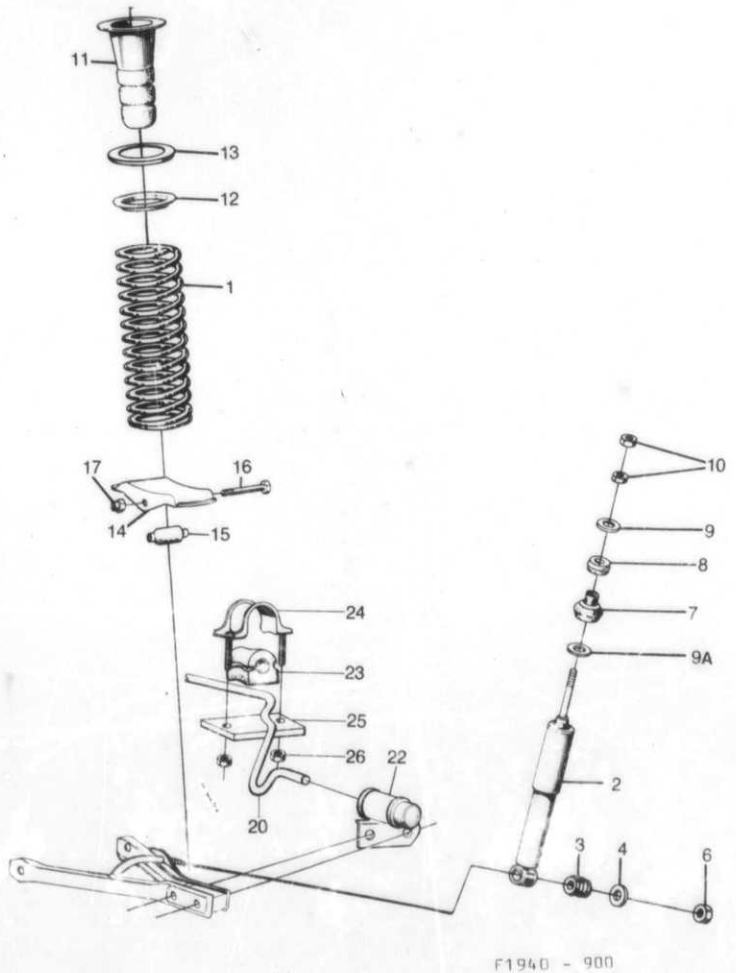


F1940 - 900

| 0100 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 89 45 776 | | 2) | 2 | Spring | Fjäder | 5 |
| 0030 | 1 | 89 45 800 | | 1986- B202 | 2 | Spring | Fjäder | 5 |
| 0040 | 1 | 89 89 881 | | 1986 ME, JA, USA | 2 | Spring | Fjäder | 5 |
| 0045 | 1 | 89 45 800 | | 1987- ME, JA, USA | 2 | Spring | Fjäder | 5 |
| 0050 | 1 | 91 01 932 | | 1987-,16) | 2 | Spring | Fjäder | 5 |
| 0060 | 2 | *89 93 404* | | -1988,13) | 2 | Shock absorber kit | Stötdämparsats | 1 |
| 0070 | | | | See page 7-019, 4-E20 | | | | |
| 0070 | | | | NLS - USE 9105479 | | | | |
| 0071 | 2 | 91 05 479 | | 500),1989-,11,13) | 2 | Shock absorber kit | Stötdämparsats | 1 |
| 0072 | | | | See page 7-019, 4-E20 | | | | |
| 0073 | 2 | 89 93 438 | | 12,13) | 2 | Shock absorber kit | Stötdämparsats | 1 |
| 0074 | | | | See page 7-019, 4-E20 | | | | |
| 0080 | 2 | *89 93 404* | | -1988,13,14) I | 2 | Shock absorber kit | Stötdämparsats | 1 |
| 0090 | | | | See page 7-019, 4-E20 | | | | |
| 0090 | | | | NLS - USE 9105479 | | | | |
| 0091 | 2 | 91 05 479 | | 1989-,11,13,14) I | 2 | Shock absorber kit | Stötdämparsats | 1 |
| 0092 | | | | See page 7-019, 4-E20 | | | | |
| 0093 | 2 | 89 93 438 | | 12,13,14) I | 2 | Shock absorber kit | Stötdämparsats | 1 |
| 0094 | | | | See page 7-019, 4-E20 | | | | |
| 0100 | 2 | 89 93 438 | | TURBO. I, EU. | 2 | Shock absorber kit | Stötdämparsats | 1 |
| 0110 | | | | S FOR US, CD | | | | |
| 0120 | | | | See page 7-019, 4-E20 | | | | |
| 0130 | 2 | 89 93 479 | | 15) | 2 | Shock absorber kit | Stötdämparsats | 1 |
| 0150 | | | | See page 7-019, 4-E20 | | | | |
| 0160 | 2 | 91 02 781 | | 1987-,16) | 2 | Shock absorber kit | Stötdämparsats | 1 |
| 0170 | | | | See page 7-019, 4-E20 | | | | |
| 0180 | 3 | 89 32 840 | | | 2 | .Bushing | .Bussning | |
| 0190 | 4 | 89 20 019 | S | | 2 | .Washer | .Bricka | 5 |
| 0200 | 6 | 79 04 089 | S | | 2 | .Nut | .Mutter | 5 |
| 0210 | 7 | 89 39 423 | S | 19) | 2 | .Bushing | .Bussning | 1 |
| 0220 | 8 | *89 85 962* | S | -1986,20) NLS - USE | 2 | .Bushing | .Bussning | 1 |
| 0220 | | | | 9100025 | | | | |
| 0230 | 8 | 91 00 025 | S | 1987-,20) | 2 | .Bushing | .Bussning | 1 |
| 0240 | 9 | 89 85 954 | S | 20) | 2 | .Washer | .Bricka | 5 |
| 0250 | 9A | 89 48 226 | S | 19) | 2 | .Washer | .Bricka | 5 |
| 0260 | 10 | *83 15 558* | S | -1987 NLS - USE 7979511 | 4 | .Nut | .Mutter | 5 |
| 0265 | 10 | 79 79 511 | S | 1988- | 4 | .Nut | .Mutter | 5 |
| 0270 | 11 | *89 19 847* | | -1986,20) NLS - USE | 2 | Buffer | Buffert | 5 |
| 0270 | | | | 9101882 | | | | |
| 0280 | 11 | 91 01 882 | | 1987-,20) | 2 | Buffer | Buffert | 5 |
| 0290 | 12 | 89 19 862 | | | 2 | Spring support | Fjäderstöd | 6 |
| 0300 | 12 | 89 21 108 | | 3) | 2 | Spring support | Fjäderstöd | 6 |
| 0310 | 13 | 89 33 889 | | | 2 | Spacer ring | Distansring | 6 |
| 0320 | 14 | 89 19 870 | | | 2 | Spring support | Fjäderstöd | 6 |
| 0330 | 15 | 89 31 974 | | | 2 | Bushing | Bussning | 3 |
| 0340 | 16 | 79 03 743 | | | 2 | Screw | Skruv | 5 |
| 0350 | 17 | 79 40 463 | | | 2 | Nut | Mutter | 3 |
| 0360 | 20 | 89 88 289 | | 4) | 1 | Anti-roll bar | Krängningshämmare | 6 |
| 0370 | 22 | 89 62 656 | | LH | 1 | Bracket | Konsol | 5 |
| 0380 | 22 | 89 62 664 | | RH | 1 | Bracket | Konsol | 5 |
| 0390 | 23 | 89 90 087 | | 4) | 2 | Rubber bushing | Gummibussning | 3 |

2. If necessary, use extra spacer ring  Vid behov, använd extra mellanring
3. All cars with A and 5D with M  Bilar med A och 5D med M
4. Cars with aero-kit  Bilar med aero-kit
11. Ch.--K3024315. --K7030261.
12. Ch.K3024316--, K7030262--
13. Gasfilled  Gasfyllda
14. Except EU  Utom EU
15. Cars with stabilizer  Bilar med krängningshämmare
16. Sport-package  Sportpaket
19. Lower  Nedre
20. Upper  Övre
500. Also valid for SE 1988B.  Gäller även för SE 1988B.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


7 GROUP INDEX


| | |
|---|---|
| Front suspension | 4-E06 |
| Wheel | 4-E10 |
| Rear suspension | 4-E14 |
| Rear axle | 4-E18 |
| Complete sets | 4-E20 |

# 4-E08 *Front suspension* *Främre fjädring*

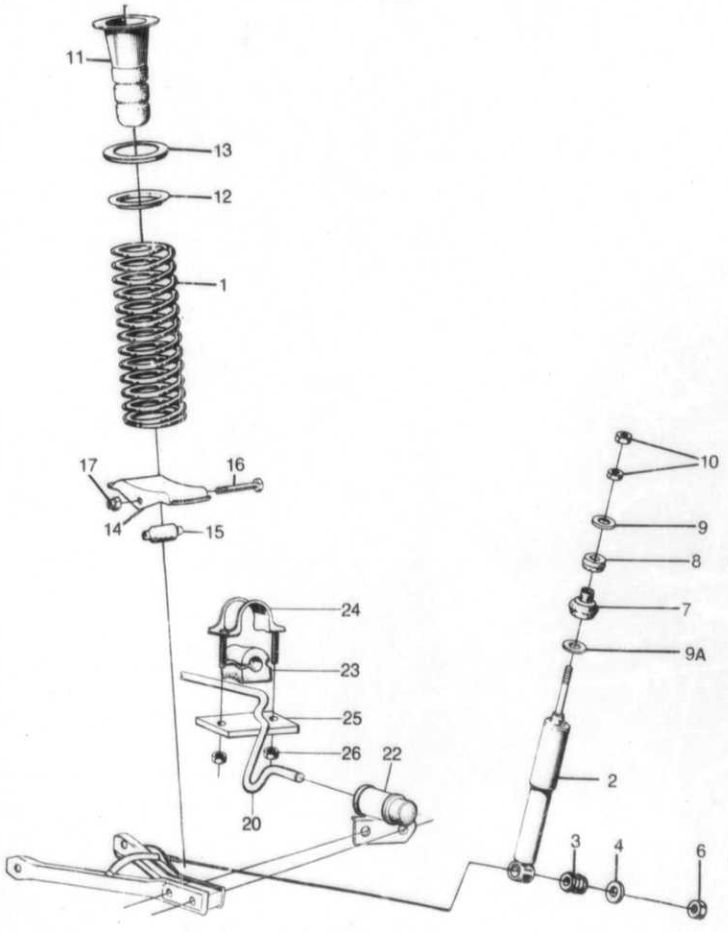


F1940 - 900

| 0100 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0400 | 24 | 89 99 915 | | 4) | 2 | Cap | Överfall | 5 |
| 0410 | 25 | 89 89 907 | | 4) | 2 | Base | Underlägg | 5 |
| 0420 | 26 | 79 74 371 | | 4) | 4 | Nut | Mutter | 5 |

4. Cars with aero-kit Bilar med aero-kit




MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



7 GROUP INDEX



| | |
|---|---|
| Front suspension | 4-E06 |
| Wheel | 4-E10 |
| Rear suspension | 4-E14 |
| Rear axle | 4-E18 |
| Complete sets | 4-E20 |


# 4-E10 *Wheel* *Hjul*

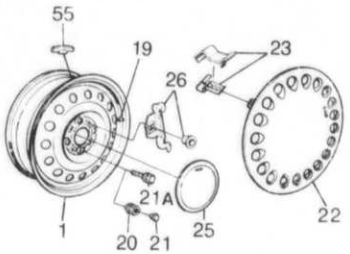


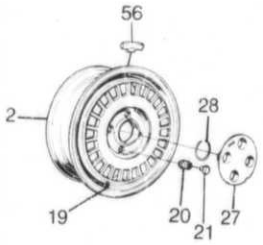
R 9438 - 900
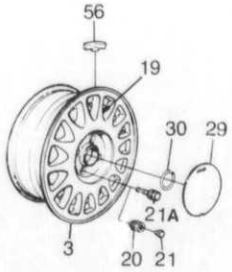
| 0125 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 89 87 836 | | -1987, 5,5" | 4 | Wheel | Hjul | 4 |
| 0011 | | | | | | steel-wheel | stålhjul | |
| 0020 | 1 | 89 60 254 | | 1988-, 5,5" | 4 | Wheel | Hjul | 4 |
| 0021 | | | | | | steel-wheel | stålhjul | |
| 0030 | 1 | 89 90 350 | | -1987, 5,5" | 4 | Wheel | Hjul | 4 |
| 0031 | | | | | | steel-wheel,black | stålhjul,svart | |
| 0040 | 1 | *89 62 367* | | 1988-, 5,5" | 4 | Wheel | Hjul | 4 |
| 0041 | | | | NLS - USE 8962375 | | steel-wheel,black | stålhjul,svart | |
| 0050 | 2 | 89 45 909 | | -1987 40/105120604 | 4 | Wheel | Hjul | 4 |
| 0060 | 3 | 91 00 587 | | -1987 TURBO 40/105122808 | 4 | Wheel | Hjul | 4 |
| 0070 | 3 | 91 03 524 | | 1988-40/105123301 | 4 | Wheel | Hjul | 4 |
| 0080 | 4 | 89 85 970 | | -1987,4), 40/105121800 | 4 | Wheel | Hjul | 4 |
| 0090 | 4 | 91 03 219 | | 1988-,4) | 4 | Wheel | Hjul | 4 |
| 0091 | | | | 40/105 123 103 | | | | |
| 0100 | 4 | *91 00 579* | | -1987 JP, SILVER NLS | 4 | Wheel | Hjul | 4 |
| 0110 | 4 | *91 00 660* | | -1987 JP, PEARL NLS | 4 | Wheel | Hjul | 4 |
| 0120 | 5 | 91 02 484 | | 1987,16) | 4 | Wheel | Hjul | 4 |
| 0130 | | | | 40/105 121 701 | | | | |
| 0140 | 5 | *91 03 870* | | 1988-,16) | 4 | Wheel | Hjul | 4 |
| 0141 | | | | 40/105 122 600 | | | | |
| 0150 | 15 | *89 91 598* | | 7) NLS - USE 9103888 | 1 | Wheel | Hjul | 5 |
| 0160 | 15 | 91 03 888 | | 8),-1987 | 1 | Wheel | Hjul | 5 |
| 0170 | 15 | *91 03 425* | | 1988 NLS - USE 4106365 | 1 | Wheel | Hjul | 5 |
| 0175 | 15 | *40 01 855* | | 1989- NLS - USE 4106365 | 1 | Wheel | Hjul | 5 |
| 0180 | 15A | 89 39 555 | | (60) 900043 | 1 | .Valve | .Ventil | 4 |
| 0190 | 16 | *89 90 160* | | 7) NLS - USE 9103565 | 1 | .Tyre | .Däck | 6 |
| 0200 | 16 | 91 03 565 | | 8) | 1 | .Tyre | .Däck | 6 |
| 0220 | 17 | 89 90 632 | | -1987 | 1 | .Label | .Etikett | 5 |
| 0230 | 17 | 91 03 680 | | 1988- | 1 | .Label | .Etikett | 5 |
| 0240 | 18 | 89 90 350 | | -1987 ME | 1 | Wheel | Hjul | 4 |
| 0250 | 19 | 89 39 555 | | (60) 900043 | 5 | Valve | Ventil | 4 |
| 0260 | 20 | 89 47 277 | | -1987 | 16 | Wheel nut | Hjulmutter | 2 |
| 0280 | 21 | 89 47 780 | | -1987 | 16 | .Plastic plug | .Plastplugg | 2 |
| 0285 | 21A | 89 65 907 | | 1988- | 16 | Wheel screw | Hjulskruv | 2 |
| 0290 | 22 | *89 87 604* | | 9) NLS - USE 8972812 | 4 | Wheel cap | Hjulkapsel | 2 |
| 0295 | 22 | 89 72 812 | | 10) | 4 | Wheel cap | Hjulkapsel | 2 |
| 0300 | 23 | 91 01 502 | | 9) | 6 | .Clamp kit | .Klammersats | 2 |
| 0301 | | | | See page 7-019, 4-E20 | | | | |
| 0305 | 23 | 89 73 422 | | 10) | 1 | .Clamp kit | .Klammersats | 2 |
| 0306 | | | | See page 7-019, 4-E20 | | | | |
| 0310 | 25 | 89 87 596 | | | 4 | Wheel cap | Hjulkapsel | 2 |
| 0320 | 26 | 91 01 510 | | | 8 | Clamp kit | Klammersats | 2 |
| 0330 | 27 | 89 85 483 | | -1987 | 4 | Wheel cap | Hjulkapsel | 2 |
| 0340 | 28 | 89 38 458 | | -1987 | 4 | Spring ring | Fjäderring | 2 |
| 0350 | 29 | 89 87 620 | | | 4 | Wheel cap | Hjulkapsel | 2 |
| 0360 | 30 | 89 87 802 | | | 4 | .Spring ring | .Fjäderring | 2 |
| 0370 | 31 | 89 [illegible] 996 | | -1987,4) | 4 | Wheel cap | Hjulkapsel | 2 |
| 0380 | 31 | *89 88 677* | | -1987 JP, PEARL NLS | 4 | Cap | Kapsel | 2 |
| 0390 | 31 | 89 87 620 | | 1988-,4) | 4 | Wheel cap | Hjulkapsel | 2 |
| 0400 | 32 | 89 38 458 | | | 4 | .Spring ring | .Fjäderring | 2 |
| 0410 | 33 | 91 02 492 | | 1987,16) | 4 | Wheel cap | Hjulkapsel | 2 |
| 0420 | | | | 40/105 121 305 | | | | |
| 0422 | 33 | 89 87 620 | | 1988-,16) | 4 | Wheel cap | Hjulkapsel | 2 |
| 0423 | | | | 40/105 123 400 | | | | |
| 0430 | 55 | 89 48 143 | | 5) 10 G (45)3009768 | X | Balancing weight | Balanseringsvikt | 2 |
| 0440 | 55 | 89 48 150 | | 5) 20 G (45)3006384 | X | Balancing weight | Balanseringsvikt | 2 |

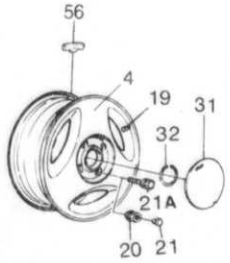4. Cars with aero-kit Bilar med aero-kit
5. For steel wheel För stålhjul
7. CH.-H3015389, -H7024876.
8. CH.H3015390-, H7024877-
9. CH. --K3007508, --K7007877, for SE 1988B: --J3040181, --J7052900
10. CH. K3007509--, K7007878--, for SE 1988B: J3040182--, J7052901--
16. Sport-package Sportpaket

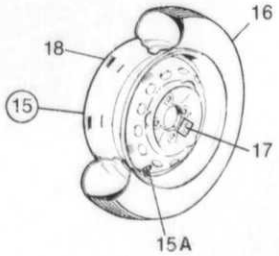

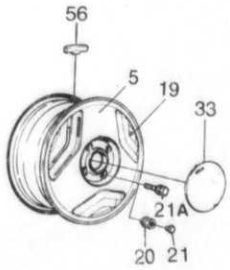
MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



7 GROUP INDEX



| | |
|---|---|
| Front suspension | 4-E06 |
| Wheel | 4-E10 |
| Rear suspension | 4-E14 |
| Rear axle | 4-E18 |
| Complete sets | 4-E20 |


# 4-E12 *Wheel* *Hjul*

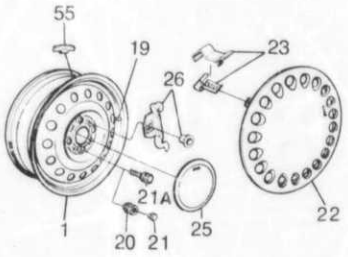


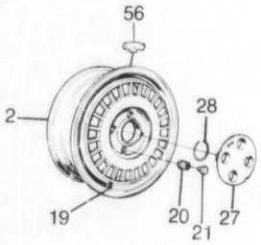
R 9438 - 900
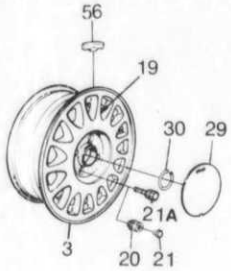
| 0125 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0450 | 55 | 89 17 395 | | 5) 30 G (45)3006392 | X | Balancing weight | Balanseringsvikt | 2 |
| 0460 | 55 | 89 48 168 | | 5) 40 G (45)3006418 | X | Balancing weight | Balanseringsvikt | 2 |
| 0470 | 55 | 89 48 176 | | 5) 50 G (45)3006426 | X | Balancing weight | Balanseringsvikt | 2 |
| 0480 | 55 | 89 17 411 | | 5) 60 G (45)3006434 | X | Balancing weight | Balanseringsvikt | 2 |
| 0490 | 56 | 89 47 798 | | 6) 10 G (45)3021052 | X | Balancing weight | Balanseringsvikt | 2 |
| 0500 | 56 | 89 47 806 | | 6) 20 G (45)3021078 | X | Balancing weight | Balanseringsvikt | 2 |
| 0510 | 56 | 89 47 814 | | 6) 30 G (45)3021094 | X | Balancing weight | Balanseringsvikt | 2 |
| 0520 | 56 | 89 47 822 | | 6) 40 G (45)3021110 | X | Balancing weight | Balanseringsvikt | 2 |
| 0530 | 56 | 89 47 830 | | 6) 50 G (45)3021136 | X | Balancing weight | Balanseringsvikt | 2 |
| 0540 | 56 | 89 47 848 | | 6) 60 G (45)3021151 | X | Balancing weight | Balanseringsvikt | 2 |

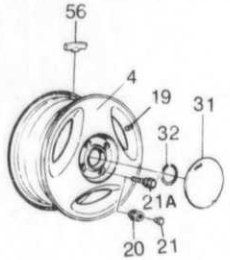5. For steel wheel För stålhjul
6. For aluminium wheel För aluminiumhjul

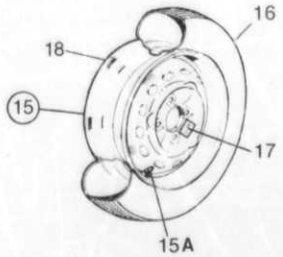

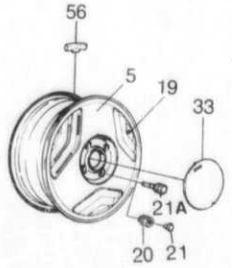
MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


7 GROUP INDEX


| | |
|---|---|
| Front suspension | 4-E06 |
| Wheel | 4-E10 |
| Rear suspension | 4-E14 |
| Rear axle | 4-E18 |
| Complete sets | 4-E20 |

# 4-E14 Rear suspension — Bakre fjädring

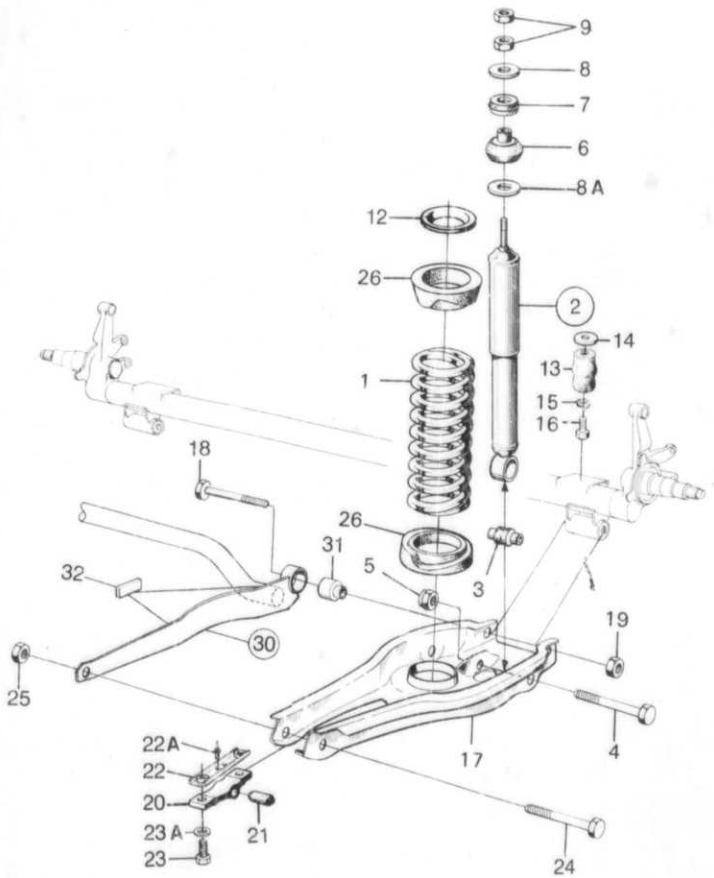


R 8383–900

| 0150 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0009 | 1 | 89 45 818 | | LH | 1 | Spring | Fjäder | 5 |
| 0010 | 1 | 89 41 502 | | RH | 1 | Spring | Fjäder | 5 |
| 0020 | 1 | 89 45 826 | | ME, JP | 2 | Spring | Fjäder | 5 |
| 0030 | 1 | 91 01 940 | | 1987-,16) | 2 | Spring | Fjäder | 5 |
| 0050 | 2 | *89 93 412* | | -1988 GL | 2 | Shock absorber kit | Stötdämparsats | 1 |
| 0060 | | | | See page 7-019, 4-E20 | | | | |
| 0060 | | | | NLS - USE 9105487 | | | | |
| 0061 | 2 | 91 05 487 | | 500),1989-,11) | 2 | Shock absorber kit | Stötdämparsats | 1 |
| 0062 | | | | See page 7-019, 4-E20 | | | | |
| 0063 | 2 | 89 93 446 | | 12) | 2 | Shock absorber kit | Stötdämparsats | 1 |
| 0064 | | | | See page 7-019, 4-E20 | | | | |
| 0070 | 2 | *89 93 412* | | -1988,14) I | 2 | Shock absorber kit | Stötdämparsats | 1 |
| 0080 | | | | See page 7-019, 4-E20 | | | | |
| 0080 | | | | NLS - USE 9105487 | | | | |
| 0081 | 2 | 91 05 487 | | 1989-,11,14) I | 2 | Shock absorber kit | Stötdämparsats | 1 |
| 0082 | | | | See page 7-019, 4-E20 | | | | |
| 0083 | 2 | 89 93 446 | | 12,14) I | 2 | Shock absorber kit | Stötdämparsats | 1 |
| 0084 | | | | See page 7-019, 4-E20 | | | | |
| 0090 | 2 | 89 93 446 | | TURBO. I, EU | 2 | Shock absorber kit | Stötdämparsats | 1 |
| 0100 | | | | S FOR US. CD | | | | |
| 0110 | | | | See page 7-019, 4-E20 | | | | |
| 0120 | 2 | 89 93 487 | | 15) | 2 | Shock absorber kit | Stötdämparsats | 1 |
| 0130 | | | | See page 7-019, 4-E20 | | | | |
| 0140 | 2 | 91 02 799 | | 1987-,16) | 2 | Shock absorber kit | Stötdämparsats | 1 |
| 0150 | | | | See page 7-019, 4-E20 | | | | |
| 0160 | 3 | 89 47 939 | | | 2 | .Bearing bushing | .Lagerbussning | 1 |
| 0170 | 4 | 89 38 466 | S | | 2 | .Screw | .Skruv | 5 |
| 0180 | 5 | *80 73 546* | S | -1987 NLS - USE 8151482 | 2 | .Lock nut | .Låsmutter | 5 |
| 0190 | 5 | 81 51 482 | S | 1988- | 2 | .Lock nut | .Låsmutter | 5 |
| 0200 | 6 | 89 39 423 | S | 19) | 2 | .Bushing | .Bussning | 1 |
| 0210 | 7 | *89 85 962* | S | -1986,20) NLS - USE | 2 | .Bushing | .Bussning | 1 |
| 0210 | | | | 9100025 | | | | |
| 0220 | 7 | 91 00 025 | S | 1987-,20) | 2 | .Bushing | .Bussning | 1 |
| 0230 | 8 | 89 85 954 | S | 20) | 2 | .Washer | .Bricka | 5 |
| 0240 | 8A | 89 48 226 | S | 19) | 2 | .Washer | .Bricka | 5 |
| 0250 | 9 | *83 15 558* | S | -1987 NLS - USE 7979511 | 4 | .Nut | .Mutter | 5 |
| 0260 | 9 | 79 79 511 | S | 1988- | 4 | .Nut | .Mutter | 5 |
| 0280 | 12 | 89 33 897 | | | 2 | Spacer ring | Distansring | 4 |
| 0290 | 13 | 89 22 445 | | | 2 | Buffer | Buffert | 5 |
| 0300 | 14 | *89 47 152* | | NLS - USE 4107413 | 2 | Spacer | Mellanlägg | 3 |
| 0310 | 15 | 79 10 599 | | | 2 | Washer | Bricka | 5 |
| 0320 | 16 | 79 75 063 | | | 2 | Screw | Skruv | 5 |
| 0330 | 17 | 89 36 304 | | LH | 1 | Spring link | Fjäderlänk | 4 |
| 0335 | 17 | 89 47 210 | | RH | 1 | Spring link | Fjäderlänk | 4 |
| 0340 | 18 | *80 84 410* | | -1988 NLS - USE 7979594 | 2 | Screw | Skruv | 5 |
| 0350 | 18 | *79 79 396* | | 500), 1989- NLS - USE | 2 | Screw | Skruv | 5 |
| 0350 | | | | 7979594 | | | | |
| 0360 | 18 | *80 84 451* | | -1988,15) (7979438) NLS | 2 | Screw | Skruv | 5 |
| 0360 | | | | - USE 7982168 | | | | |
| 0380 | 18 | 79 82 168 | | 15,500),1989- | 2 | Screw | Skruv | 5 |
| 0400 | 19 | *80 73 546* | | -1987 NLS - USE 8151482 | 2 | Lock nut | Låsmutter | 5 |
| 0410 | 19 | 81 51 482 | | 1988- | 2 | Lock nut | Låsmutter | 5 |
| 0420 | 20 | 89 47 269 | | 17) | 2 | Bearing anchorage | Lagerfäste | 5 |
| 0430 | 21 | 89 35 298 | | | 2 | .Bushing | .Bussning | 3 |

11. Ch.-K3024315. -K7030261.
12. Ch.K3024316-, K7030262--
14. Except EU Utom EU
15. Cars with stabilizer Bilar med krängningshämmare
16. Sport-package Sportpaket
17. Front Främre
19. Lower Nedre
20. Upper Övre
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


7 GROUP INDEX


| | |
|---|---|
| Front suspension | 4-E06 |
| Wheel | 4-E10 |
| Rear suspension | 4-E14 |
| Rear axle | 4-E18 |
| Complete sets | 4-E20 |

# 4-E16 *Rear suspension* *Bakre fjädring*

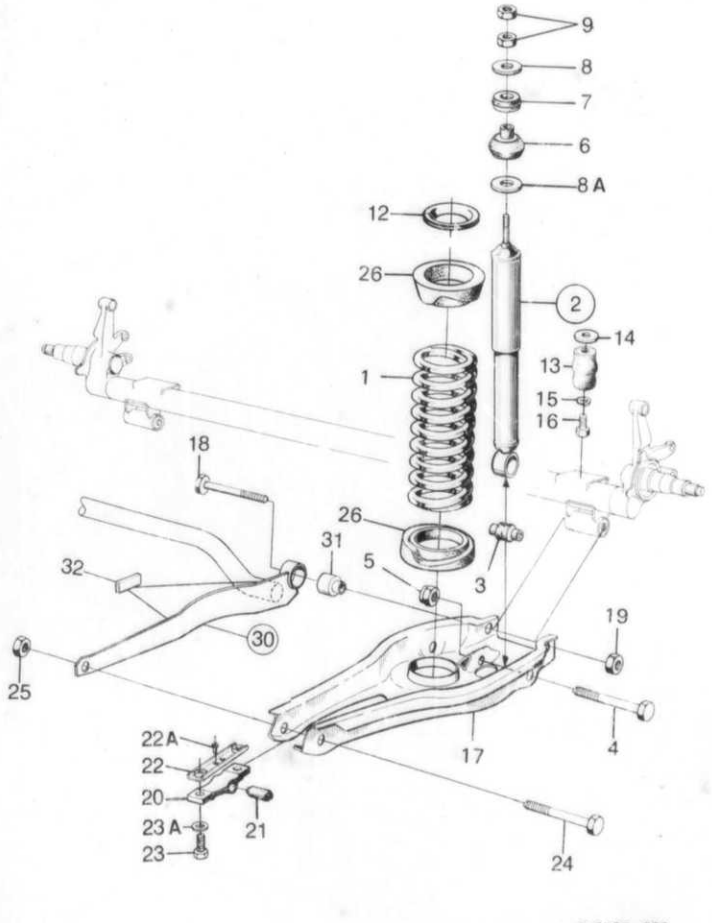


R 8383–900

| 0150 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0440 | 22 | 89 89 899 | | | 2 | Nut plate | Mutterplatta | 6 |
| 0450 | 22A | 79 75 717 | | | 2 | Rivet | Nit | 5 |
| 0460 | 23 | 89 90 079 | | | 4 | Bolt | Bult | 5 |
| 0470 | 23A | 80 30 017 | | | 4 | Washer | Bricka | 5 |
| 0480 | 24 | *80 84 386* | | -1988(7979362) NLS - USE 7982044 | 2 | Screw | Skruv | 5 |
| 0490 | 24 | 79 82 044 | | 500), 1989- | 2 | Screw | Skruv | 5 |
| 0500 | 24 | *80 84 394* | | -1988,15) NLS - USE 7982150 | 2 | Screw | Skruv | 5 |
| 0520 | 24 | 79 82 150 | | 15,500), 1989-, | 2 | Screw | Skruv | 5 |
| 0540 | 25 | *80 73 546* | | -1987 NLS - USE 8151482 | 2 | Lock nut | Låsmutter | 5 |
| 0550 | 25 | 81 51 482 | | 1988- | 2 | Lock nut | Låsmutter | 5 |
| 0560 | 26 | 89 35 330 | | | 4 | Spring support | Fjäderstöd | 4 |
| 0570 | 30 | 89 88 297 | | | 1 | Anti-roll bar | Krängningshämmare | 6 |
| 0580 | | | | | | | | |
| 0590 | 31 | 89 89 980 | | | 2 | Bushing | Bussning | 3 |
| 0600 | 32 | 89 89 998 | | 15) | 4 | Rubber moulding | Gummilist | 3 |

15. Cars with stabilizer Bilar med krängningshämmare
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 5-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


7 GROUP INDEX


| | |
|---|---|
| Front suspension | 4-E06 |
| Wheel | 4-E10 |
| Rear suspension | 4-E14 |
| Rear axle | 4-E18 |
| Complete sets | 4-E20 |

# 4-E18 *Rear axle* *Bakaxel*

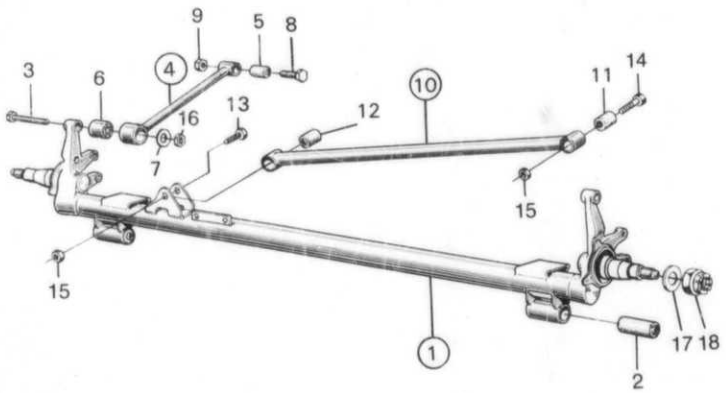


R 8918-900

| 0200 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0030 | 1 | 91 00 298 | | -1987 | 1 | Rear axle | Bakaxel | 4 |
| 0040 | 1 | *91 01 395* | | 1988 NLS - USE 9105859 | 1 | Rear axle | Bakaxel | 4 |
| 0050 | 1 | 91 05 859 | | 500),1989- | 1 | Rear axle | Bakaxel | 4 |
| 0060 | 2 | 89 35 306 | | | 2 | .Bushing | .Bussning | 3 |
| 0080 | 3 | 89 28 046 | | -1987 | 2 | .Screw | .Skruv | 5 |
| 0090 | 3 | *79 79 487* | | 1988-(8084204) NLS - USE 7979586 | 2 | Screw | Skruv | 5 |
| 0090 | | | | | | | | |
| 0110 | 4 | 89 44 175 | | -1987 | 2 | Stay | Stag | 4 |
| 0115 | 4 | 91 03 102 | | 1988- | 2 | Stay | Stag | 4 |
| 0120 | 5 | 89 32 741 | | -1987 | 2 | .Bushing | .Bussning | 3 |
| 0125 | 5 | 89 56 468 | | 1988- | 2 | .Bushing | .Bussning | 3 |
| 0140 | 6 | 89 08 675 | | -1987 | 2 | .Bushing | .Bussning | 3 |
| 0145 | 6 | 91 03 110 | | 1988- | 2 | .Bushing | .Bussning | 3 |
| 0160 | 7 | 89 09 632 | | -1987 | 2 | Washer | Bricka | 5 |
| 0165 | 7 | 89 52 277 | | 1988- | 2 | Washer | Bricka | 5 |
| 0180 | 8 | 89 33 293 | | -1987 | 2 | Screw | Skruv | 5 |
| 0185 | 8 | *80 84 162* | | -1988(7979172) NLS - USE 7982002 | 2 | Screw | Skruv | 5 |
| 0185 | | | | | | | | |
| 0187 | 8 | 79 82 002 | | 500), 1989- | 2 | Screw | Skruv | 5 |
| 0200 | 9 | 79 40 455 | | -1987 | 2 | Nut | Mutter | 3 |
| 0205 | 9 | *80 73 538* | | 1988 NLS USE 7977812 | 2 | Lock nut | Låsmutter | 5 |
| 0210 | 9 | 79 77 812 | | 500), 1989- | 2 | Lock nut | Låsmutter | 5 |
| 0220 | 10 | 89 32 071 | | | 1 | Stay | Stag | 5 |
| 0240 | 11 | 89 32 014 | | | 1 | .Bushing | .Bussning | 4 |
| 0260 | 12 | 89 30 307 | | | 1 | .Bushing | .Bussning | 4 |
| 0280 | 13 | 89 42 005 | | | 1 | Screw | Skruv | 5 |
| 0290 | 14 | 89 30 299 | | | 1 | Screw | Skruv | 5 |
| 0300 | 15 | 79 40 455 | | | 2 | Nut | Mutter | 3 |
| 0320 | 16 | 79 63 416 | | -1987 | 2 | Nut | Mutter | 3 |
| 0325 | 16 | *80 73 538* | | 1988- NLS - USE 7977812 | 2 | Lock nut | Låsmutter | 5 |
| 0350 | 17 | 89 46 477 | | -1987 | 2 | Washer | Bricka | 5 |
| 0370 | 18 | 89 64 710 | | -1987 | 2 | Lock nut | Låsmutter | 3 |
| 0380 | 18 | 89 65 360 | | 1988- | 2 | Lock nut | Låsmutter | 3 |

500. Also valid for SE 1988B. Gäller även för SE 1988B.





MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



7 GROUP INDEX



| | |
|---|---|
| Front suspension | 4-E06 |
| Wheel | 4-E10 |
| Rear suspension | 4-E14 |
| Rear axle | 4-E18 |
| Complete sets | 4-E20 |

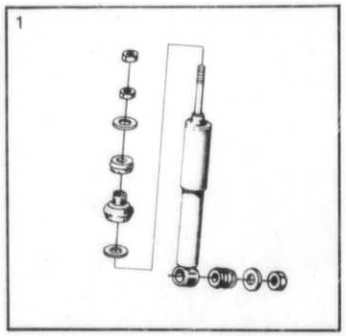

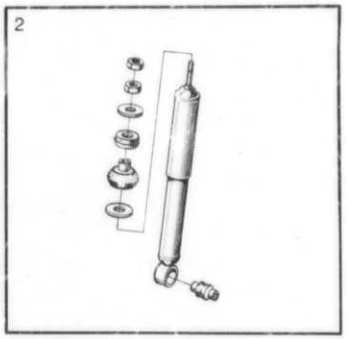
F5570 90086
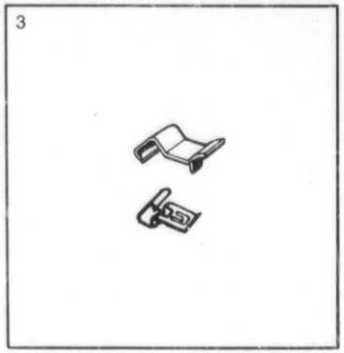
| 1000 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 89 93 438 | | 17) | X | Shock absorber kit | Stötdämparsats | 1 |
| 0020 | | *89 91 093* | | 1) NLS - USE 8991028 | 1 | .Shock absorber | .Stötdämpare | 6 |
| 0030 | | 89 20 019 | | | 1 | .Washer | .Bricka | 5 |
| 0040 | | 89 85 954 | | | 1 | .Washer | .Bricka | 5 |
| 0050 | | 79 04 089 | | | 1 | .Nut | .Mutter | 5 |
| 0060 | | 89 39 423 | | | 1 | .Bushing | .Bussning | 1 |
| 0070 | | 91 00 025 | | | 1 | .Bushing | .Bussning | 1 |
| 0080 | | 79 79 511 | | | 2 | .Nut | .Mutter | 5 |
| 0090 | | 89 48 226 | | | 1 | .Washer | .Bricka | 5 |
| 0100 | | | | | | | | |
| 0110 | 1 | *89 93 404* | | -1988,17) NLS - USE 9105479 | X | Shock absorber kit | Stötdämparsats | 1 |
| 0120 | | *89 88 115* | | 1) NLS | 1 | .Shock absorber | .Stötdämpare | 6 |
| 0130 | | 89 20 019 | | | 1 | .Washer | .Bricka | 5 |
| 0140 | | 89 85 954 | | | 1 | .Washer | .Bricka | 5 |
| 0150 | | 79 04 089 | | | 1 | .Nut | .Mutter | 5 |
| 0160 | | 89 39 423 | | | 1 | .Bushing | .Bussning | 1 |
| 0170 | | 91 00 025 | | | 1 | .Bushing | .Bussning | 1 |
| 0180 | | 79 79 511 | | | 2 | .Nut | .Mutter | 5 |
| 0190 | | 89 48 226 | | | 1 | .Washer | .Bricka | 5 |
| 0200 | | | | | | | | |
| 0210 | 1 | 91 05 479 | | 1989-,11,17) | X | Shock absorber kit | Stötdämparsats | 1 |
| 0220 | | *91 05 255* | | 1) NLS | 1 | .Shock absorber | .Stötdämpare | 6 |
| 0230 | | 89 20 019 | | | 1 | .Washer | .Bricka | 5 |
| 0240 | | 89 85 954 | | | 1 | .Washer | .Bricka | 5 |
| 0250 | | 79 04 089 | | | 1 | .Nut | .Mutter | 5 |
| 0260 | | 89 39 423 | | | 1 | .Bushing | .Bussning | 1 |
| 0270 | | 91 00 025 | | | 1 | .Bushing | .Bussning | 1 |
| 0280 | | 79 79 511 | | | 2 | .Nut | .Mutter | 5 |
| 0290 | | 89 48 226 | | | 1 | .Washer | .Bricka | 5 |
| 0300 | | | | | | | | |
| 0310 | 1 | 89 93 438 | | 12,17) | X | Shock absorber kit | Stötdämparsats | 1 |
| 0320 | | *89 91 093* | | 1) NLS - USE 8991028 | 1 | .Shock absorber | .Stötdämpare | 6 |
| 0330 | | 89 20 019 | | | 1 | .Washer | .Bricka | 5 |
| 0340 | | 89 85 954 | | | 1 | .Washer | .Bricka | 5 |
| 0350 | | 79 04 089 | | | 1 | .Nut | .Mutter | 5 |
| 0360 | | 89 39 423 | | | 1 | .Bushing | .Bussning | 1 |
| 0370 | | 91 00 025 | | | 1 | .Bushing | .Bussning | 1 |
| 0380 | | 79 79 511 | | | 2 | .Nut | .Mutter | 5 |
| 0390 | | 89 48 226 | | | 1 | .Washer | .Bricka | 5 |
| 0400 | | | | | | | | |
| 0410 | 1 | 89 93 479 | | 15,17) | X | Shock absorber kit | Stötdämparsats | 1 |
| 0420 | | *91 00 082* | | 1) NLS - USE 8991713 | 1 | .Shock absorber | .Stötdämpare | 6 |
| 0430 | | 89 20 019 | | | 1 | .Washer | .Bricka | 5 |
| 0440 | | 89 85 954 | | | 1 | .Washer | .Bricka | 5 |
| 0450 | | 79 04 089 | | | 1 | .Nut | .Mutter | 5 |
| 0460 | | 89 39 423 | | | 1 | .Bushing | .Bussning | 1 |
| 0470 | | 91 00 025 | | | 1 | .Bushing | .Bussning | 1 |
| 0480 | | 79 79 511 | | | 2 | .Nut | .Mutter | 5 |
| 0490 | | 89 48 226 | | | 1 | .Washer | .Bricka | 5 |
| 0500 | | | | | | | | |
| 0510 | 1 | 91 02 781 | | 16,17) - | X | Shock absorber kit | Stötdämparsats | 1 |
| 0520 | | 91 02 427 | | 1) | 1 | .Shock absorber | .Stötdämpare | |
| 0530 | | 89 32 840 | | | 1 | .Bushing | .Bussning | |
| 0540 | | 89 20 019 | | | 1 | .Washer | .Bricka | 5 |
| 0550 | | 89 85 954 | | | 1 | .Washer | .Bricka | 5 |
| 0560 | | 79 04 089 | | | 1 | .Nut | .Mutter | 5 |

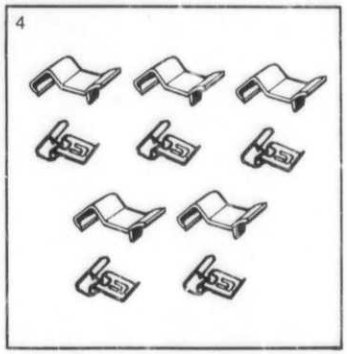1. Not as separate spare part. Ej som separat reservdel.
11. Ch. -K3024315. -K7030261.
12. Ch.K3024316-. K7030262--
15. Cars with stabilizer Bilar med krängningshämmare
16. Sport-package Sportpaket
17. Front Främre

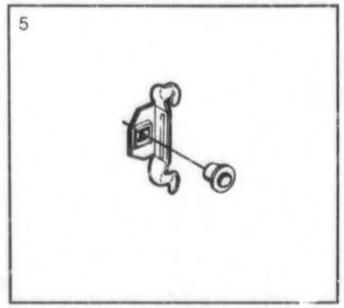



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


7 GROUP INDEX



| | |
|---|---|
| Front suspension | 4-E06 |
| Wheel | 4-E10 |
| Rear suspension | 4-E14 |
| Rear axle | 4-E18 |
| Complete sets | 4-E20 |

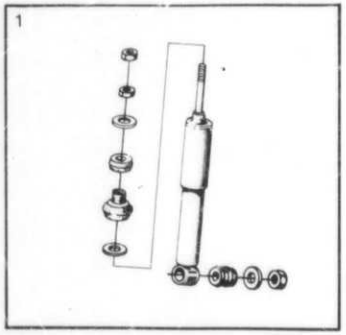


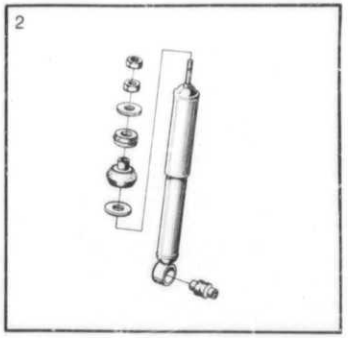



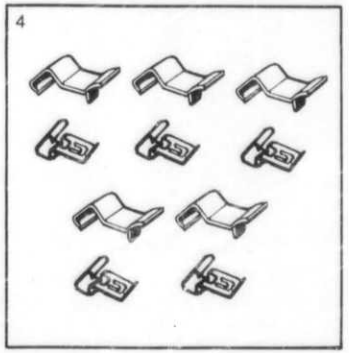


F5570 90086
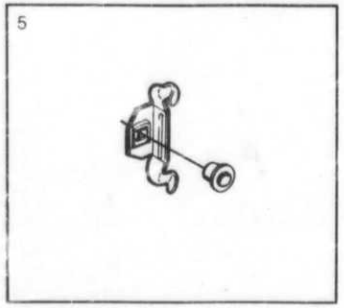
| 1000 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0570 | | 89 39 423 | | | 1 | .Bushing | .Bussning | 1 |
| 0580 | | 91 00 025 | | | 1 | .Bushing | .Bussning | 1 |
| 0590 | | 79 79 511 | | | 2 | .Nut | .Mutter | 5 |
| 0600 | | 89 48 226 | | | 1 | .Washer | .Bricka | 5 |
| 0610 | | | | | | | | |
| 0620 | 2 | 89 93 446 | | 18) | X | Shock absorber kit | Stötdämparsats | 1 |
| 0630 | | *89 91 101* | | 1) NLS - USE 8991036 | 1 | .Shock absorber | .Stötdämpare | 6 |
| 0640 | | 89 38 466 | | | 1 | .Screw | .Skruv | 5 |
| 0650 | | 81 51 482 | | | 1 | .Lock nut | .Låsmutter | 5 |
| 0660 | | 89 39 423 | | | 1 | .Bushing | .Bussning | 1 |
| 0670 | | 91 00 025 | | | 1 | .Bushing | .Bussning | 1 |
| 0680 | | 79 79 511 | | | 2 | .Nut | .Mutter | 5 |
| 0690 | | 89 48 226 | | | 1 | .Washer | .Bricka | 5 |
| 0700 | | 89 85 954 | | | 1 | .Washer | .Bricka | 5 |
| 0710 | | | | | | | | |
| 0720 | 2 | *89 93 412* | | -1988,18) NLS - USE 9105487 | X | Shock absorber kit | Stötdämparsats | 1 |
| 0730 | | *89 88 123* | | 1) NLS | 1 | .Shock absorber | .Stötdämpare | 6 |
| 0740 | | 89 38 466 | | | 1 | .Screw | .Skruv | 5 |
| 0750 | | 81 51 482 | | | 1 | .Lock nut | .Låsmutter | 5 |
| 0760 | | 89 39 423 | | | 1 | .Bushing | .Bussning | 1 |
| 0770 | | 91 00 025 | | | 1 | .Bushing | .Bussning | 1 |
| 0780 | | 79 79 511 | | | 2 | .Nut | .Mutter | 5 |
| 0790 | | 89 48 226 | | | 1 | .Washer | .Bricka | 5 |
| 0800 | | 89 85 954 | | | 1 | .Washer | .Bricka | 5 |
| 0810 | | | | | | | | |
| 0820 | 2 | 91 05 487 | | 1989-,11,18) | X | Shock absorber kit | Stötdämparsats | 1 |
| 0830 | | *91 05 263* | | 1) NLS | 1 | .Shock absorber | .Stötdämpare | 6 |
| 0840 | | 89 38 466 | | | 1 | .Screw | .Skruv | 5 |
| 0850 | | 81 51 482 | | | 1 | .Lock nut | .Låsmutter | 5 |
| 0860 | | 89 39 423 | | | 1 | .Bushing | .Bussning | 1 |
| 0870 | | 91 00 025 | | | 1 | .Bushing | .Bussning | 1 |
| 0880 | | 79 79 511 | | | 2 | .Nut | .Mutter | 5 |
| 0890 | | 89 48 226 | | | 1 | .Washer | .Bricka | 5 |
| 0900 | | 89 85 954 | | | 1 | .Washer | .Bricka | 5 |
| 0910 | | | | | | | | |
| 0920 | 2 | 89 93 446 | | 12,18) | X | Shock absorber kit | Stötdämparsats | 1 |
| 0930 | | *89 91 101* | | 1) NLS - USE 8991036 | 1 | .Shock absorber | .Stötdämpare | 6 |
| 0940 | | 89 38 466 | | | 1 | .Screw | .Skruv | 5 |
| 0950 | | 81 51 482 | | | 1 | .Lock nut | .Låsmutter | 5 |
| 0960 | | 89 39 423 | | | 1 | .Bushing | .Bussning | 1 |
| 0970 | | 91 00 025 | | | 1 | .Bushing | .Bussning | 1 |
| 0980 | | 79 79 511 | | | 2 | .Nut | .Mutter | 5 |
| 0990 | | 89 48 226 | | | 1 | .Washer | .Bricka | 5 |
| 1000 | | 89 85 954 | | | 1 | .Washer | .Bricka | 5 |
| 1010 | | | | | | | | |
| 1020 | 2 | 89 93 487 | | 15,18) | X | Shock absorber kit | Stötdämparsats | 1 |
| 1030 | | *91 00 090* | | 1) NLS - USE 8991721 | 1 | .Shock absorber | .Stötdämpare | 6 |
| 1040 | | 89 38 466 | | | 1 | .Screw | .Skruv | 5 |
| 1050 | | 81 51 482 | | | 1 | .Lock nut | .Låsmutter | 5 |
| 1060 | | 89 39 423 | | | 1 | .Bushing | .Bussning | 1 |
| 1070 | | 91 00 025 | | | 1 | .Bushing | .Bussning | 1 |
| 1080 | | 79 79 511 | | | 2 | .Nut | .Mutter | 5 |
| 1090 | | 89 48 226 | | | 1 | .Washer | .Bricka | 5 |
| 1100 | | 89 85 954 | | | 1 | .Washer | .Bricka | 5 |
| 1110 | | | | | | | | |

1. Not as separate spare part. Ej som separat reservdel.
11. Ch.--K3024315. --K7030261.
12. Ch.K3024316--. K7030262--
15. Cars with stabilizer Bilar med krängningshämmare
18. Rear Bakre





MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


7 GROUP INDEX



| | |
|---|---|
| Front suspension | 4-E06 |
| Wheel | 4-E10 |
| Rear suspension | 4-E14 |
| Rear axle | 4-E18 |
| Complete sets | 4-E20 |

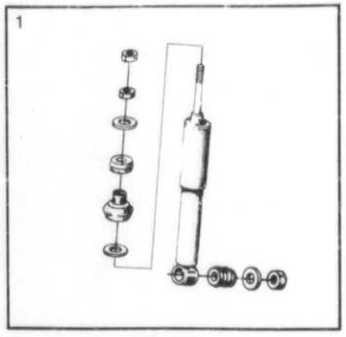


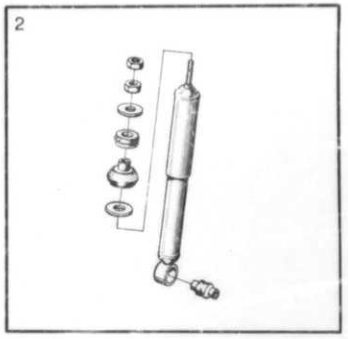



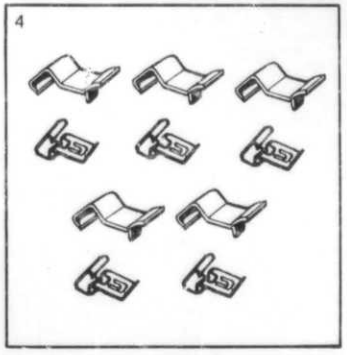


F5570 90086
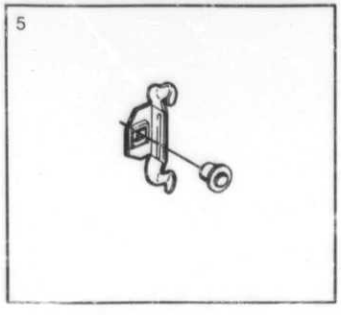
| 1000 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 1120 | 2 | 91 02 799 | | 16,18) | X | Shock absorber kit | Stötdämparsats | |
| 1130 | | 91 02 435 | | 1) | 1 | .Shock absorber | .Stötdämpare | |
| 1140 | | 89 47 939 | | | 1 | .Bearing bushing | .Lagerbussning | 1 |
| 1150 | | 89 38 466 | | | 1 | .Screw | .Skruv | 5 |
| 1160 | | 81 51 482 | | | 1 | .Lock nut | .Låsmutter | 5 |
| 1170 | | 89 39 423 | | | 1 | .Bushing | .Bussning | 1 |
| 1180 | | 91 00 025 | | | 1 | .Bushing | .Bussning | 1 |
| 1190 | | 79 79 511 | | | 2 | .Nut | .Mutter | 5 |
| 1200 | | 89 48 226 | | | 1 | .Washer | .Bricka | 5 |
| 1210 | | 89 85 954 | | | 1 | .Washer | .Bricka | 5 |
| 1220 | | | | | | | | |
| 1230 | 3 | 91 01 502 | | 9) | X | Clamp kit | Klammersats | 2 |
| 1240 | | *89 87 919* | | 1) NLS - USE 9101502 | 1 | .Clip | .Clips | 2 |
| 1250 | | *91 00 223* | | 1) NLS - USE 9101502 | 1 | .Plastic cover | .Plastskydd | |
| 1260 | | | | | | | | |
| 1270 | 4 | 89 73 422 | | 10) | X | Clamp kit | Klammersats | 2 |
| 1280 | | 89 72 846 | | 1) | 5 | .Clip | .Clips | |
| 1290 | | 89 72 853 | | 1) | 5 | .Plastic cover | .Plastskydd | |
| 1300 | | | | | | | | |
| 1310 | 5 | 91 01 510 | | | X | Clamp kit | Klammersats | 2 |
| 1320 | | 91 00 546 | | 1) | 1 | .Clamp | .Klämma | 2 |
| 1330 | | 91 00 553 | | 1) | 1 | .Sleeve | .Hylsa | 2 |

1. Not as separate spare part. Ej som separat reservdel.
9. CH. --K3007508, --K7007877. for SE 1988B: --J3040181, --J7052900
10. CH. K3007509--, K7007878--, for SE 1988B: J3040182--, J7052901--
16. Sport-package Sportpaket
18. Rear Bakre



MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

7 GROUP INDEX

| | |
|---|---|
| Front suspension | 4-E06 |
| Wheel | 4-E10 |
| Rear suspension | 4-E14 |
| Rear axle | 4-E18 |
| Complete sets | 4-E20 |

# 8A

Body, external
Kaross, utvändig
Carrocería, exterior

# 5-A02

TABLE OF CONTENTS


| | | |
|---|---|---|
| **Main body** | | |
| Front- and center floor | 8A : 5 | 5-A06 |
| Rear floor | 8A : 11 | 5-A12 |
| Roof | 8A : 15 | 5-A16 |
| Sun roof, hand operated | 8A : 17 | 5-A18 |
| Sun roof, electricaily operated | 8A : 21 | 5-A22 |
| Top stack cover | 8A : 25 | 5-B02 |
| Rail front, rear and side | 8A : 29 | 5-B06 |
| Top stack, bow 1,2 and 3 | 8A : 31 | 5-B08 |
| Rear rail and bow 4 | 8A : 35 | 5-B12 |
| Hydraulic system | 8A : 37 | 5-B14 |
| Dash panel and front wheel housings | 8A : 39 | 5-B16 |
| Rear wheel housings | 8A : 41 | 5-B18 |
| Valances, model 3CK | 8A : 43 | 5-B20 |
| Valances, model 5CK | 8A : 45 | 5-B22 |
| Valances, model 2SN | 8A : 47 | 5-B24 |
| Valances, Convertible | 8A : 49 | 5-C02 |
| Valances, model 4SN | 8A : 51 | 5-C04 |
| Door- and windshield pillars | 8A : 53 | 5-C06 |
| Plugs etc | 8A : 55 | 5-C08 |
| **Hood, front, fenders** | | |
| Hood, hood hinges and hood lock | 8A : 57 | 5-C10 |
| Front member, grille | 8A : 59 | 5-C12 |
| Front fenders | 8A : 61 | 5-C14 |
| **Doors, trunk lid** | | |
| Doors, hinges, window regulators etc 3CK, 2SN | 8A : 63 | 5-C16 |
| Doors, hinges, window regulators etc. Convertible | 8A : 65 | 5-C18 |
| Doors, hinges, window regulators etc 5CK, 4SN, front door | 8A : 67 | 5-C20 |
| Doors, hinges, window regulators etc 5CK, 4SN, rear door | 8A : 71 | 5-C24 |
| Door lock 3CK, 2SN | 8A : 75 | 5-D04 |
| Door lock 5CK, 4SN, front door | 8A : 79 | 5-D08 |
| Door lock 5CK, 4SN, rear door | 8A : 81 | 5-D10 |
| Trunk door, hinges, lock, model CK | 8A : 83 | 5-D12 |
| Trunk lid, hinges, lock, model SN | 8A : 87 | 5-D16 |
| Outside handle, lock cylinder | 8A : 89 | 5-D18 |
| Lock- and lock cylinder sets | 8A : 91 | 5-D20 |
| **External details, glass, sealings** | | |
| Emblem | 8A : 93 | 5-D22 |
| Side mouldings | 8A : 95 | 5-D24 |
| Air outlet, decor tailgate | 8A : 99 | 5-E04 |
| Spoiler etc | 8A : 101 | 5-E06 |
| Mirror | 8A : 105 | 5-E10 |
| Aero-Kit | 8A : 109 | 5-E14 |
| Aero-Kit, 1987- | 8A : 111 | 5-E16 |
| Glass and sealings, 3CK, 2SN | 8A : 115 | 5-E20 |
| Glass and sealings, Convertible | 8A : 119 | 5-E24 |
| Glass and sealings, 5CK, 4SN | 8A : 125 | 5-F06 |
| Mud guards | 8A : 129 | 5-F10 |
| Other sealings, 3CK, 2SN | 8A : 133 | 5-F14 |
| Other sealings, Convertible | 8A : 135 | 5-F16 |
| Other sealings, 5CK, 4SN | 8A : 137 | 5-F18 |
| **Bumpers and touch-up paint** | | |
| Bumper, front | 8A : 141 | 5-F22 |
| Bumper front, Integrated | 8A : 143 | 5-F24 |
| Bumper, rear | 8A : 145 | 5-G02 |
| Bumper rear, Integrated | 8A : 147 | 5-G04 |
| Touch-up paint, 1-can | 8A : 151 | 5-G08 |
| Touch-up paint, 2-can | 8A : 155 | 5-G12 |
| Touch-up paint, two-coat type | 8A : 157 | 5-G14 |
| Touch-up paint, other paint | 8A : 159 | 5-G16 |
| **Complete sets** | | |
| Car body, external | 8A : 161 | 5-G18 |


MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-A03

## INNEHÅLLSFÖRTECKNING


| | | |
|---|---|---|
| **Karosseristomme** | | |
| Främre och mittre golv | 8A : 5 | 5-A06 |
| Bakre golv | 8A : 11 | 5-A12 |
| Tak | 8A : 15 | 5-A16 |
| Soltak, handmanövrerat | 8A : 17 | 5-A18 |
| Soltak, el-manövrerat | 8A : 21 | 5-A22 |
| Sufflett | 8A : 25 | 5-B02 |
| Skenor främre, bakre och sido | 8A : 29 | 5-B06 |
| Sufflettbågar, 1, 2 och 3 | 8A : 31 | 5-B08 |
| Bakre skena och båge 4 | 8A : 35 | 5-B12 |
| Hydrauliksystem | 8A : 37 | 5-B14 |
| Torpedplåt och hjulhus, främre | 8A : 39 | 5-B16 |
| Hjulhus, bakre | 8A : 41 | 5-B18 |
| Sidoplåtar, modell 3CK | 8A : 43 | 5-B20 |
| Sidoplåtar, modell 5CK | 8A : 45 | 5-B22 |
| Sidoplåtar, modell 2SN | 8A : 47 | 5-B24 |
| Sidoplåtar, Cabriolet | 8A : 49 | 5-C02 |
| Sidoplåtar, modell 4SN | 8A : 51 | 5-C04 |
| Dörr och vindrutestolpar | 8A : 53 | 5-C06 |
| Pluggar etc | 8A : 55 | 5-C08 |
| **Motorhuv, front, skärmar** | | |
| Motorhuv, huvgångjärn och huvlås | 8A : 57 | 5-C10 |
| Frontbalk, grill | 8A : 59 | 5-C12 |
| Framskärmar | 8A : 61 | 5-C14 |
| **Dörrar, bagagerumslucka** | | |
| Dörrar, gångjärn, fönsterhissar, etc 3CK, 2SN | 8A : 63 | 5-C16 |
| Dörrar, gångjärn, fönsterhissar etc. Cabriolet | 8A : 65 | 5-C18 |
| Dörrar, gångjärn, fönsterhissar, etc. 5CK, 4SN, fram dörr | 8A : 67 | 5-C20 |
| Dörrar, gångjärn, fönsterhissar, etc. 5CK, 4SN, bakdörr | 8A : 71 | 5-C24 |
| Dörrlås 3CK, 2SN | 8A : 75 | 5-D04 |
| Dörrlås 5CK, 4SN, framdörr | 8A : 79 | 5-D08 |
| Dörrlås 5CK, 4SN, bakdörr | 8A : 81 | 5-D10 |
| Bagagerumsdörr, gångjärn, lås, modell CK | 8A : 83 | 5-D12 |
| Bagagerumslucka, gångjärn, lås, modell SN | 8A : 87 | 5-D16 |
| Yttre handtag, låscylinder | 8A : 89 | 5-D18 |
| Lås- och låscylindersatser | 8A : 91 | 5-D20 |
| **Utvändiga detaljer, glas, tätningslister** | | |
| Emblem | 8A : 93 | 5-D22 |
| Sidodekorlister | 8A : 95 | 5-D24 |
| Luftutsläpp, dekor bakdörr | 8A : 99 | 5-E04 |
| Spoiler | 8A : 101 | 5-E06 |
| Backspeglar | 8A : 105 | 5-E10 |
| Aero-Kit | 8A : 109 | 5-E14 |
| Aero-Kit, 1987- | 8A : 111 | 5-E16 |
| Glas och tätningslister 3CK, 2SN | 8A : 115 | 5-E20 |
| Glas och tätningslister, Cabriolet | 8A : 119 | 5-E24 |
| Glas och tätningslister, 5CK, 4SN | 8A : 125 | 5-F06 |
| Stänkskydd | 8A : 129 | 5-F10 |
| Övriga tätningslister, 3CK, 2SN | 8A : 133 | 5-F14 |
| Övriga tätningslister, Cabriolet | 8A : 135 | 5-F16 |
| Övriga tätningslister, 5CK, 4SN | 8A : 137 | 5-F18 |
| **Stötfångare och bättringsfärg** | | |
| Stötfångare, främre | 8A : 141 | 5-F22 |
| Stötfångare, främre, Integrerad | 8A : 143 | 5-F24 |
| Stötfångare, bakre | 8A : 145 | 5-G02 |
| Stötfångare, bakre, Integrerad | 8A : 147 | 5-G04 |
| Bättringsfärg, 1-komponent | 8A : 151 | 5-G08 |
| Bättringsfärg, 2-komponent | 8A : 155 | 5-G12 |
| Bättringsfärg, tvåskiktstyp | 8A : 157 | 5-G14 |
| Bättringsfärg, övrig färg | 8A : 159 | 5-G16 |
| **Satser** | | |
| Kaross, utvändig | 8A : 161 | 5-G18 |






# 5-A04

## SUMARIO


| | | |
|---|---|---|
| **Cuerpo de la carroceria** | | |
| Piso del. y tras. | 8A : 5 | 5-A06 |
| Piso tras. | 8A : 11 | 5-A12 |
| Techo | 8A : 15 | 5-A16 |
| Techo corredizo, maniobra manual | 8A : 17 | 5-A18 |
| Techo corredizo, maniobra electrica | 8A : 21 | 5-A22 |
| Capota | 8A : 25 | 5-B02 |
| Barras, delantera, trasera y lados | 8A : 29 | 5-B06 |
| Arcs de la capota. 1,2 y 3 | 8A : 31 | 5-B08 |
| Barra y arco traseros | 8A : 35 | 5-B12 |
| Sistema hidraulico | 8A : 37 | 5-B14 |
| Salipicadero y huercos de rueda, Del | 8A : 39 | 5-B16 |
| Huercos de rueda Tras | 8A : 41 | 5-B18 |
| Placas laterales, modelo, 3Ck | 8A : 43 | 5-B20 |
| Placas laterales, modelo, 5Ck | 8A : 45 | 5-B22 |
| Placas laterales, modelo, 2SN | 8A : 47 | 5-B24 |
| Placas laterales. Cabriolet | 8A : 49 | 5-C02 |
| Placas laterales, modelo, 4SN | 8A : 51 | 5-C04 |
| Montantes de puertas y de parabrisas | 8A : 53 | 5-C06 |
| Tapones etc | 8A : 55 | 5-C08 |
| **Capot, plancha frontal, guardabarros** | | |
| Capot, bisagras de capot y cerradura de capot | 8A : 57 | 5-C10 |
| Viga del, parilla | 8A : 59 | 5-C12 |
| Guardabarros del | 8A : 61 | 5-C14 |
| **Puertas, tapa de cofre** | | |
| Puertas, bisagras, levantcristales, etc. 3CK, 2SN | 8A : 63 | 5-C16 |
| Puertas, bisagras, levantcristales, etc. Cabriolet | 8A : 65 | 5-C18 |
| Puertas, bisagras, levantcristales, etc. 5CK, 4SN, delantera | 8A : 67 | 5-C20 |
| Puertas, bisagras, levantcristales, etc. 5CK, 4SN, trasera | 8A : 71 | 5-C24 |
| Cerraduras de puerta 3CK, 2SN | 8A : 75 | 5-D04 |
| Cerraduras de puerta 5CK, 4SN, delantera | 8A : 79 | 5-D08 |
| Cerraduras de puerta 5CK, 4SN, trasera | 8A : 81 | 5-D10 |
| Puerta trasera, bisagras, cerradura modelo CK | 8A : 83 | 5-D12 |
| Tapa de cofre, bisagras, cerradura modelo SN | 8A : 87 | 5-D16 |
| Empunaduras exteriores, cilindros de cerradura | 8A : 89 | 5-D18 |
| Cerraduras y cilindros de cerradura | 8A : 91 | 5-D20 |
| **Detalles exteriores, vidrios, juntas** | | |
| Emblemas | 8A : 93 | 5-D22 |
| Embellecedores de laterales | 8A : 95 | 5-D24 |
| Salida aire, embellecedores puerta trasera | 8A : 99 | 5-E04 |
| Espoilers | 8A : 101 | 5-E06 |
| Espejos retrovisores | 8A : 105 | 5-E10 |
| Aero-Kit, 1987- | 8A : 111 | 5-E16 |
| Aero-Kit | 8A : 109 | 5-E14 |
| Vidrios y juntas, 3CK, 2SN | 8A : 115 | 5-E20 |
| Vidrios y juntas. Cabriolet | 8A : 119 | 5-E24 |
| Vidrios y juntas, 5CK, 4SN | 8A : 125 | 5-F06 |
| Faldones | 8A : 129 | 5-F10 |
| Otras juntas, 3CK, 2SN | 8A : 133 | 5-F14 |
| Otras juntas, Cabriolet | 8A : 135 | 5-F16 |
| Otras juntas, 5CK, 4SN | 8A : 137 | 5-F18 |
| **Parachoques y pintura de retoque** | | |
| Parachoques, Del | 8A : 141 | 5-F22 |
| Parachoques, Del. Integrante | 8A : 143 | 5-F24 |
| Parachoques, Tras | 8A : 145 | 5-G02 |
| Parachoques, Tras. Integrante | 8A : 147 | 5-G04 |
| Pintura de retoque, tipo 1-componentes | 8A : 151 | 5-G08 |
| Pintura de retoque, tipo 2-componentes | 8A : 155 | 5-G12 |
| Pintura de retoque, tipo de dos capas | 8A : 157 | 5-G14 |
| Pintura de retoque, otro pintura | 8A : 159 | 5-G16 |
| **Juegos completos** | | |
| Carosseria, exterior | 8A : 161 | 5-G18 |




## MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



## 8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-A06

## Front and centre floor

## Främre och mittre golv

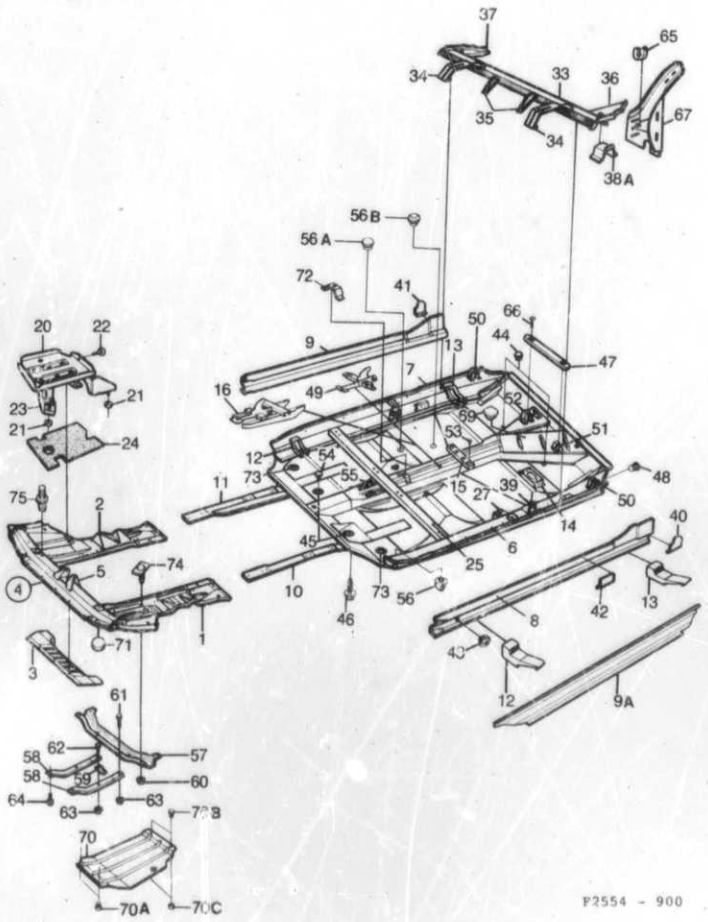


F2554 - 900

| 0100 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | $ L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | 82 66 454 | | 120) 3CK | 1 | Body | Kaross | 6 |
| 0020 | | 82 66 462 | | 120) 5CK | 1 | Body | Kaross | 6 |
| 0030 | | 92 07 911 | | 120) 2SN | 1 | Body | Kaross | 6 |
| 0040 | | 92 06 657 | | 120) 4SN | 1 | Body | Kaross | 6 |
| 0050 | | 76 12 146 | | 120) | 1 | Front section | Framdel | 6 |
| 0060 | 1 | 69 12 231 | | 5) LH | 1 | Floor | Golv | 4 |
| 0070 | 2 | 69 12 323 | | 5) RH | 1 | Floor | Golv | 4 |
| 0080 | 3 | 82 74 383 | | | 1 | Plate | Plåt | 6 |
| 0090 | 4 | *69 25 523* | | 218) NLS - USE 6945141, 6945174 | 1 | Beam | Balk | 5 |
| 0100 | 4 | 69 45 174 | | 219) | 1 | Beam | Balk | 5 |
| 0110 | 5 | 69 25 515 | | 5) | 1 | Bracket | Konsol | 5 |
| 0120 | 6 | 82 74 599 | | LH | 1 | Sill | Tröskel | 6 |
| 0130 | 7 | 82 74 607 | | RH | 1 | Sill | Tröskel | 6 |
| 0140 | 8 | *82 74 615* | | -1986, LH, 3CK, 2SN, CV NLS - USE 6926919 | 1 | Sill | Tröskel | 6 |
| 0150 | 8 | 69 26 919 | | 1987-, LH, 3CK, 2SN, CV | 1 | Sill | Tröskel | 6 |
| 0160 | 8 | *82 74 813* | | -1986, LH, 5CK, 4SN NLS - USE 6926810 | 1 | Sill | Tröskel | 6 |
| 0170 | 8 | 69 26 810 | | 1987-, LH, 5CK, 4SN | 1 | Sill | Tröskel | 6 |
| 0180 | 9 | *82 74 623* | | -1986, RH, 3CK, 2SN, CV NLS - USE 6926927 | 1 | Sill | Tröskel | 6 |
| 0190 | 9 | 69 26 927 | | 1987-, RH, 3CK, 2SN, CV | 1 | Sill | Tröskel | 6 |
| 0200 | 9 | *82 74 821* | | -1986, RH, 5CK, 4SN NLS - USE 6926828 | 1 | Sill | Tröskel | 6 |
| 0210 | 9 | 69 26 828 | | 1987-, RH, 5CK, 4SN | 1 | Sill | Tröskel | 6 |
| 0220 | 9A | 69 33 659 | | LH, CV | 1 | Sill | Tröskel | 6 |
| 0230 | 9A | 69 33 667 | | RH, CV | 1 | Sill | Tröskel | 6 |
| 0240 | 10 | 69 15 292 | | LH | 1 | Beam | Balk | 6 |
| 0250 | 11 | 69 15 300 | | RH | 1 | Beam | Balk | 6 |
| 0260 | 12 | 92 90 776 | | 5) LH | 1 | Jack support | Domkraftstöd | 6 |
| 0270 | 12 | 92 90 784 | | 5) RH | 1 | Jack support | Domkraftstöd | 6 |
| 0280 | 13 | 92 90 750 | | 6) LH | 1 | Jack support | Domkraftstöd | 6 |
| 0290 | 13 | 92 90 768 | | 6) RH | 1 | Jack support | Domkraftstöd | 6 |
| 0292 | 14 | 69 28 352 | | 60), 1987- | 1 | Bracket | Fäste | 6 |
| 0294 | 15 | 69 28 3[illegible] | | 60), 1987- | 1 | Seat bracket | Stolfäste | 6 |
| 0296 | 16 | 69 28 35[illegible] | | 60), 1987- | 1 | Support shape | Stödprofil | 6 |
| 0298 | 16 | 69 28 402 | | 60), 1987- | 1 | Support shape | Stödprofil | 6 |
| 0300 | 20 | *69 14 139* | | TURBO NLS - USE 6929475 | 1 | Shelf | Hylla | 6 |
| 0310 | 21 | 79 71 658 | | TURBO | 3 | Nut | Mutter | 5 |
| 0320 | 22 | 70 35 801 | | | 1 | Buffer | Buffert | 3 |
| 0330 | 23 | 92 25 806 | | TURBO | 1 | Reinforcement | Förstärkning | 4 |
| 0340 | 24 | 97 13 496 | | | 1 | Insulation | Isolering | 4 |
| 0350 | 25 | 69 17 934 | | | 1 | Beam | Balk | 6 |
| 0355 | 25 | 69 28 337 | | 60), 1987- | 1 | Beam | Balk | 6 |
| 0360 | 27 | 92 23 967 | | | 2 | Bracket | Konsol | 6 |
| 0365 | 27 | 69 28 360 | | 60), 1987-, LH | 1 | Bracket | Fäste | 6 |
| 0367 | 27 | 69 28 378 | | 60), 1987-, RH | 1 | Bracket | Fäste | 6 |
| 0370 | 33 | *76 02 394* | | -1987, (8242067) | 1 | Crossmember | Tvärbalk | 6 |
| 0380 | 33 | 69 45 109 | | 1988 | 1 | Crossmember | Tvärbalk | 6 |
| 0390 | 33 | 69 45 422 | | 1989-,500) | 1 | Crossmember | Tvärbalk | 6 |
| 0400 | 34 | 92 85 180 | | | 2 | Support | Stöd | 6 |
| 0410 | 35 | *82 83 947* | | NLS - USE 4101978 | 2 | Stay | Stag | 6 |
| 0420 | 36 | 92 84 274 | | LH, 5CK, 4SN | 1 | Plate | Plåt | 6 |
| 0430 | 37 | 92 84 282 | | RH, 5CK, 4SN | 1 | Plate | Plåt | 6 |
| 0440 | 38A | *92 84 316* | | LH NLS | 1 | Plate | Plåt | 6 |

5. Front Främre
6. Rear Bakre
60. For cars with automatic belts För bilar med passivt bälte
120. Only latest design, state car colour code Endast senaste design, uppge färgkod
218. Ch. -J3022272, -J7030434.
219. Ch. J3022273-, J7030435-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-A08

## Front and centre floor

## Främre och mittre golv

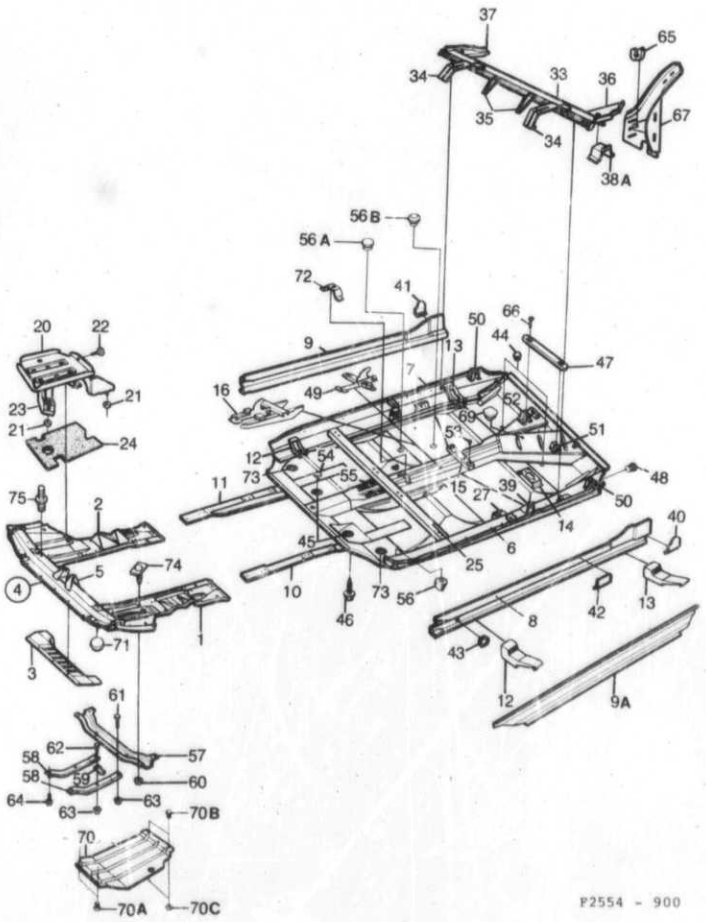


F2554 - 900

| 0100 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0450 | 38A | *92 84 324* | | RH NLS | 1 | Plate | Plåt | 6 |
| 0460 | 39 | 82 83 533 | | 5CK,4SN | 2 | Bracket | Konsol | 6 |
| 0470 | 40 | 82 42 398 | | LH, 5CK, 4SN | 1 | Connector | Anslutning | 6 |
| 0480 | 41 | 82 42 406 | | RH, 5CK, 4SN | 1 | Connector | Anslutning | 6 |
| 0490 | 42 | 82 42 554 | | 5CK,4SN | 2 | Filling-in plate | Fyllnadsplåt | 6 |
| 0500 | 43 | 82 04 661 | | 5CK,4SN | 4 | Plug | Plugg | 5 |
| 0510 | 44 | 82 04 760 | | | 2 | Plug | Plugg | 5 |
| 0520 | 45 | 73 13 752 | | -1986 | 4 | Cover | Lock | 5 |
| 0530 | 45 | 73 13 752 | | 1987- | 2 | Cover | Lock | 5 |
| 0540 | 46 | *82 67 049* | | -1986 NLS - USE 7976921 | 2 | Screw | Skruv | 5 |
| 0550 | 46 | 79 76 921 | | 1987- | 2 | Screw | Skruv | 5 |
| 0560 | 47 | *76 03 459* | | NLS | 1 | Cover plate | Täckplåt | 5 |
| 0570 | 48 | 92 28 180 | | | 2 | Draining plug | Dräneringsplugg | 5 |
| 0580 | 49 | 92 89 166 | | -1987 | 1 | Segment | Segment | 6 |
| 0585 | 49 | *69 27 586* | | 60), 1987 NLS | 1 | Segment | Segment | 6 |
| 0590 | 50 | 82 05 452 | | | 2 | Support | Stöd | 6 |
| 0600 | 51 | *82 05 981* | | LH NLS | 1 | Support | Stöd | 5 |
| 0610 | 52 | *82 05 999* | | RH NLS | 1 | Support | Stöd | 5 |
| 0620 | 53 | *82 39 154* | | NLS - USE 8267296 | 2 | Plug | Plugg | 5 |
| 0630 | 54 | 82 39 162 | | | 1 | Plug | Plugg | 5 |
| 0640 | 54 | 82 39 162 | | C,I SW, CH | 1 | Plug | Plugg | 5 |
| 0650 | 54 | 94 92 471 | | C,I ME | 1 | Cover | Täcklock | 3 |
| 0660 | 55 | 82 39 170 | | | 2 | Plug | Plugg | 5 |
| 0670 | 55 | 82 39 170 | | C,I SW, CH | 6 | Plug | Plugg | 5 |
| 0680 | 56 | 82 66 876 | | | 2 | Plug | Plugg | 5 |
| 0690 | 56A | 82 39 170 | | C,I ME | 4 | Plug | Plugg | 5 |
| 0700 | 56B | 82 67 296 | | C,I SW, CH | 2 | Plug | Plugg | 5 |
| 0710 | 57 | 92 30 079 | | | 1 | Beam | Balk | 4 |
| 0720 | 58 | 92 30 095 | | 268,343) | 2 | Beam | Balk | 4 |
| 0730 | 59 | 82 59 061 | | | 1 | Plate | Plåt | 4 |
| 0740 | 60 | 79 69 306 | | | 2 | Lock nut | Låsmutter | 5 |
| 0750 | 61 | 92 31 705 | | | 2 | Screw | Skruv | 5 |
| 0760 | 62 | 80 82 935 | | | 1 | Screw | Skruv | 5 |
| 0770 | 63 | 79 67 953 | | | 3 | Nut | Mutter | 5 |
| 0780 | 64 | 82 62 958 | | 313) | 2 | Screw | Skruv | 5 |
| 0790 | 64 | 82 62 958 | | 314) | 3 | Screw | Skruv | 5 |
| 0800 | 65 | 92 21 508 | | | 2 | Bushing | Bussning | 5 |
| 0810 | 66 | 79 72 474 | | | 2 | Pop rivet | Popnit | 3 |
| 0820 | 67 | 82 87 294 | | LH | 1 | Support | Stöd | 6 |
| 0830 | 67 | 82 87 302 | | RH | 1 | Support | Stöd | 6 |
| 0840 | 68 | *92 31 820* | | NLS | 1 | Lock brace | Låsbygel | 6 |
| 0850 | 69 | 82 39 170 | | | 4 | Plug | Plugg | 5 |
| 0860 | 70 | *69 13 545* | | -1985, ME NLS - USE 4008793 | 1 | Protecting plate | Skyddsplåt | 4 |
| 0870 | 70 | *69 39 672* | | 1986-1988,93) ME US, CA, AU (6S26410) NLS - USE 4008793 | 1 | Protecting plate | Skyddsplåt | 4 |
| 0890 | 70 | *40 07 449* | | 1989-,313,500) ME, US CA, AU NLS - USE 4008793 | 1 | Protecting plate | Skyddsplåt | 4 |
| 0910 | 70 | *40 07 449* | | 269,313) | 1 | Protecting plate | Skyddsplåt | 4 |
| 0912 | 70 | *40 08 793* | | 314) NLS - USE 4008793 | 1 | Protecting plate | Skyddsplåt | 4 |
| 0920 | 70A | 82 62 958 | | 1986-,93) | 2 | Screw | Skruv | 5 |
| 0930 | 70B | 92 31 705 | | 1986-,93) | 2 | Screw | Skruv | 5 |
| 0940 | 70C | 79 67 953 | | 1986-,93) | 2 | Nut | Mutter | 5 |

60. For cars with automatic belts  För bilar med passivt bälte
93. Au, ch. H3009726-, H7017277-
268. Ch. -K3012093
269. Ch. K3012094-
313. Ch. -K7030034
314. Ch. K7030035-
343. NLS, a pair of 92 30 095 can be superseded by protecting plate 40 08 793. NLS, 2 st 92 30 095 kan ersättas av skyddsplåt 40 08 793.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-A10

## Front and centre floor
## Främre och mittre golv

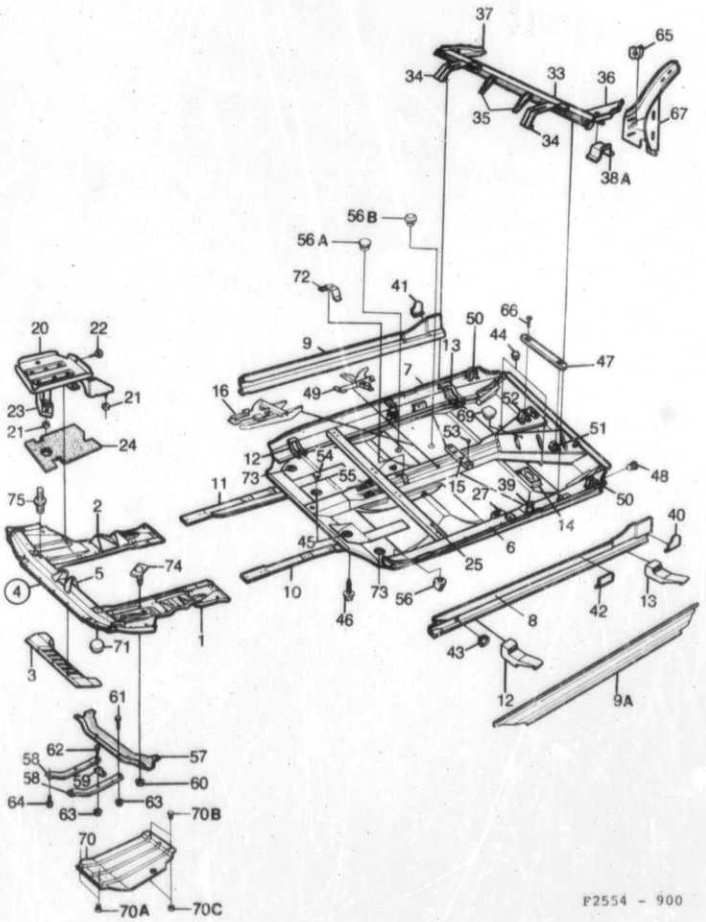


F2554 - 900

| 0100 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0950 | 71 | 71 55 708 | | FOR CARS WITHOUT OIL- AND AIR COOLER | 2 | Plug | Plugg | 5 |
| 0960 | | | | | | | | |
| 0970 | 72 | *69 28 345* | | 60), 1987 NLS - USE 6943740 | 1 | Bracket | Konsol | 6 |
| 0970 | | | | | | | | |
| 0980 | 72 | 69 43 740 | | 60), 1988- | 1 | Bracket | Konsol | 6 |
| 0990 | 73 | 69 30 341 | | 1987- | 2 | Cover | Lock | 5 |
| 1000 | 74 | | | See page 6-005, 4-C06 | | Bracket | Konsol | |
| 1010 | 75 | 69 45 141 | | 218) USE TOGETHER WITH 6945174 | 1 | Stud screw | Pinnbult | 5 |
| 1020 | | | | | | | | |

60. For cars with automatic belts — För bilar med passivt bälte
218. Ch. –J3022272, –J7030434.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-A12

## Rear floor
## Bakre golv

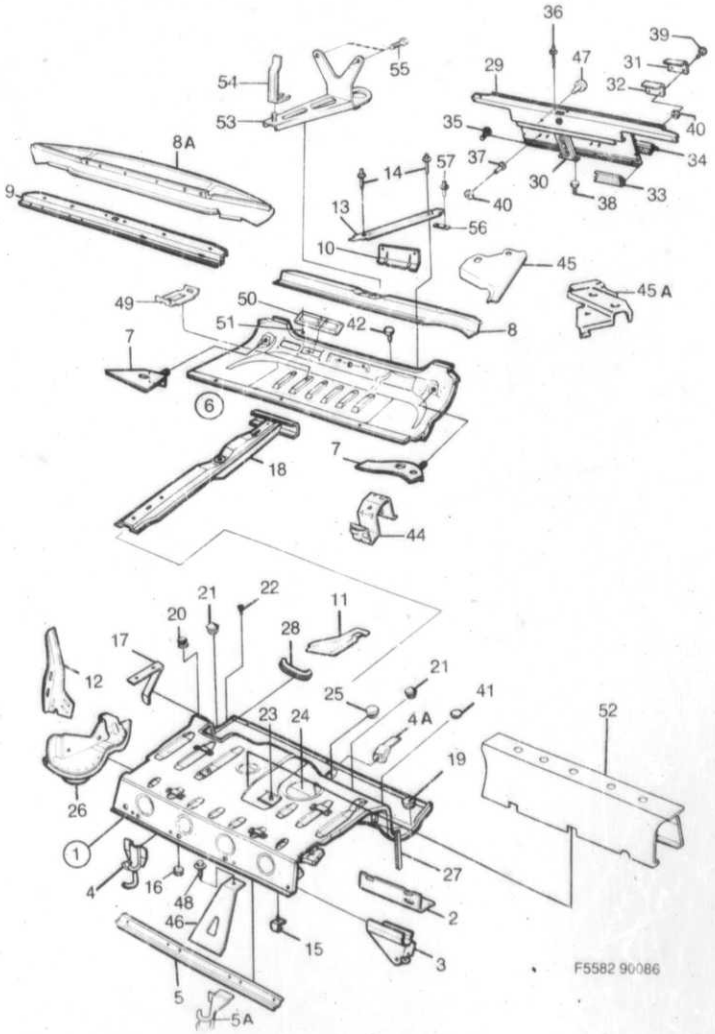


| 0125 | Pos. | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 92 21 375 | | -1988 | 1 | Floor | Golv | 6 |
| 0020 | 1 | 69 45 075 | | 1989-,500) | 1 | Floor | Golv | 6 |
| 0030 | 2 | 69 27 289 | | | 1 | .Jack support | .Domkraftstöd | 6 |
| 0040 | 3 | 92 21 383 | | | 1 | .Bracket | .Fäste | 6 |
| 0050 | 4 | 82 86 387 | | -1988 | 2 | .Hook | .Krok | 6 |
| 0060 | 4A | 82 25 872 | | | 2 | .Bracket | .Fäste | 6 |
| 0070 | 5 | 92 92 640 | | | 1 | Reinforcement | Förstärkning | 6 |
| 0080 | 5A | | | 1) | 2 | .Hook | .Krok | |
| 0090 | 6 | 69 10 608 | | | 1 | Rear section | Bakdel | 5 |
| 0100 | 6 | 69 10 582 | | SN, CV | 1 | Rear section | Bakdel | 5 |
| 0110 | 7 | 82 79 226 | | LH | 1 | .Bracket | .Fäste | 6 |
| 0120 | 7 | 92 21 664 | | RH | 1 | .Bracket | .Fäste | 6 |
| 0130 | 8 | 76 01 495 | | 6) (8250417) | 1 | .Plate | .Plåt | 5 |
| 0140 | 8A | 92 21 656 | | SN, CV | 1 | .Sill | .Tröskel | 5 |
| 0150 | 9 | 92 34 287 | | 6) SN, CV | 1 | .Crossmember | .Tvärbalk | 5 |
| 0160 | 10 | 92 30 335 | | SN, CV | 1 | .Support | .Stöd | 5 |
| 0170 | 11 | 76 01 479 | | (8250391) | 1 | Plate | Plåt | 5 |
| 0180 | 12 | *76 01 701* | | LH, (8252918) NLS | 1 | Plate | Plåt | 6 |
| 0190 | 12 | *76 01 719* | | RH, (8253262) NLS | 1 | Plate | Plåt | 6 |
| 0200 | 13 | 82 89 993 | | LH | 1 | Support member | Stödbalk | 6 |
| 0210 | 14 | 79 72 474 | | | 3 | Pop rivet | Popnit | 3 |
| 0220 | 15 | *76 01 735* | | (8253718) NLS | 2 | Bracket | Fäste | 6 |
| 0230 | 16 | 84 59 513 | | | 3 | Plug | Plugg | 5 |
| 0240 | 17 | *82 79 457* | | NLS | 1 | Stay | Stag | 6 |
| 0250 | 18 | *92 28 339* | | -1986 NLS - USE 6945455 | 1 | Support member | Stödbalk | 6 |
| 0260 | 18 | *69 57 435* | | 1987-,253) NLS - USE 6945455 | 1 | Support member | Stödbalk | 6 |
| 0270 | 18 | 69 45 455 | | 254) | 1 | Support member | Stödbalk | 6 |
| 0280 | 19 | 82 06 096 | | | 5 | Plug | Plugg | 5 |
| 0290 | 20 | 71 63 066 | | | 11 | Plug | Plugg | 5 |
| 0300 | 21 | 82 04 760 | | | 2 | Plug | Plugg | 5 |
| 0310 | 22 | 71 16 452 | | | 3 | Draining plug | Dräneringsplugg | 5 |
| 0320 | 23 | *79 65 635* | | NLS | 2 | Nut | Mutter | 5 |
| 0330 | 24 | 82 28 702 | | | 1 | Seal | Tätning | 6 |
| 0340 | 25 | 71 62 308 | | | 1 | Plug | Plugg | 5 |
| 0350 | 26 | 82 09 876 | | LH | 1 | Spring support | Fjäderstöd | 6 |
| 0360 | 26 | 82 09 884 | | RH | 1 | Spring support | Fjäderstöd | 6 |
| 0370 | 27 | 82 62 974 | | | 1 | Protecting moulding | Skyddslist | 6 |
| 0380 | 28 | *84 97 471* | | US NLS - USE 8564973 | 1 | Protecting moulding | Skyddslist | 6 |
| 0390 | 29 | *92 35 151* | | SN, CV NLS - USE 4101044 | 1 | Rear section | Bakdel | 5 |
| 0400 | 30 | 69 28 998 | | SN, CV (9220849) | 1 | Support | Stöd | 5 |
| 0410 | 31 | 92 31 804 | | SN, CV | 2 | Seal | Tätning | 6 |
| 0420 | 32 | 92 31 812 | | SN, CV | 2 | Washer | Bricka | 6 |
| 0430 | 33 | 92 23 025 | | SN, CV | 1 | Seal | Tätning | 6 |
| 0440 | 34 | 92 23 066 | | SN, CV | 1 | Seal | Tätning | 6 |
| 0450 | 35 | 92 23 074 | | SN, CV | 4 | Screw | Skruv | 5 |
| 0460 | 36 | 92 20 880 | | SN, CV | 4 | Rivet | Nit | 5 |
| 0470 | 37 | 92 23 082 | | SN, CV | 4 | Nut | Mutter | 5 |
| 0480 | 38 | 82 86 296 | | SN, CV | 2 | Screw | Skruv | 5 |
| 0490 | 39 | 80 59 578 | | SN, CV | 4 | Screw | Skruv | 5 |
| 0500 | 40 | 79 71 658 | | SN, CV | 8 | Nut | Mutter | 5 |
| 0510 | 41 | 92 23 991 | | SN, CV | 2 | Bushing | Bussning | 5 |
| 0520 | 42 | 92 23 686 | | -1987, SN, CV | 1 | Buffer | Buffert | 5 |
| 0530 | 42 | 71 63 066 | | 1988-, SN, CV | 1 | Plug | Plugg | 5 |
| 0540 | 44 | 69 19 492 | | | 1 | Bracket | Hållare | 6 |
| 0550 | 45 | 92 20 971 | | LH, SN, CV | 1 | Corner panel | Hörnplåt | 5 |
| | 45 | 92 20 989 | | RH, SN, CV | 1 | Corner panel | Hörnplåt | 5 |
| | 45A | 92 22 977 | | 6) | 1 | Support | Stöd | 6 |

1. Not as separate spare part. Ej som separat reservdel.
6. Rear Bakre
253. Ch. -J3025922, Body -3257127
254. Ch. J3025923-, Body 3257128-
500. Also valid for SE 1988B. Gäller även för SE 1988B.



M/ 2X


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

8A GROUP INDEX

| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-A14

## Rear floor
## Bakre golv

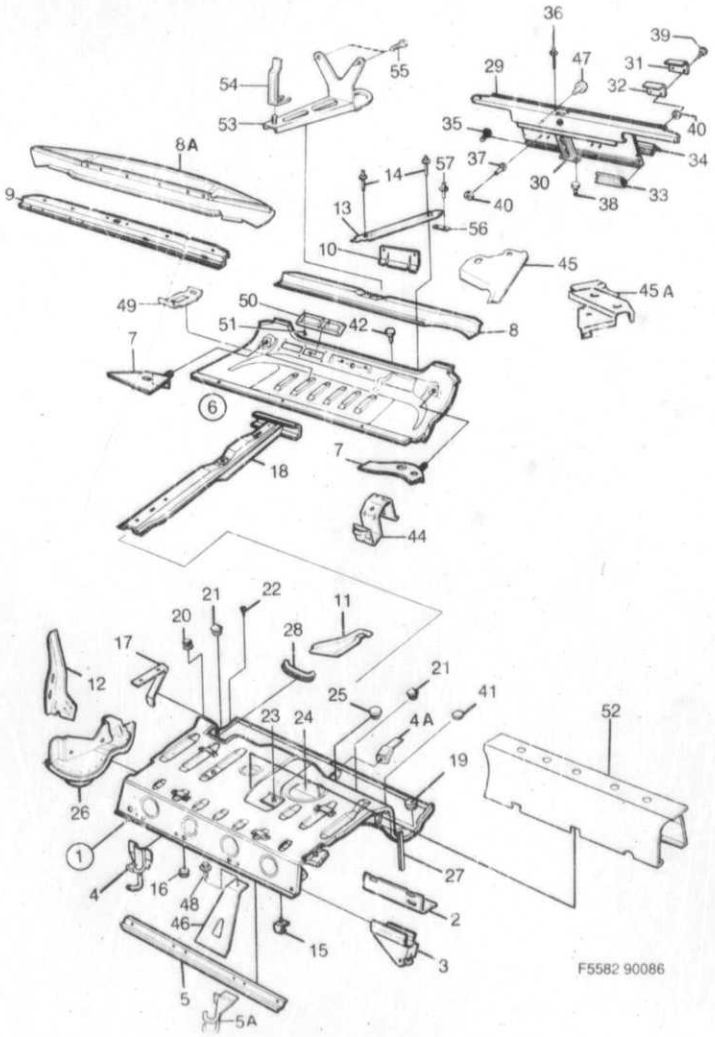


| 0125 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0580 | 46 | 92 86 931 | | LH | 1 | Stay | Stag | 6 |
| 0590 | 46 | 92 86 949 | | RH | 1 | Stay | Stag | 6 |
| 0600 | 47 | 92 31 168 | | US | 1 | Plug | Plugg | 5 |
| 0610 | 48 | 92 92 699 | | | 2 | Screw | Skruv | 5 |
| 0620 | 49 | 92 28 131 | | | 1 | Bracket | Hållare | 6 |
| 0630 | 50 | | | See page 8A-095, 5-D23 | 1 | Air outlet | Luftutsläpp | |
| 0640 | 51 | | | See page 8A-095, 5-D24 | 6 | Rivet | Nit | |
| 0650 | 52 | 69 33 626 | | 6) CV | 1 | Torsion box | Torsionslåda | 6 |
| 0660 | 53 | 69 38 716 | | 6,43) | 1 | Towing eye | Dragögla | |
| 0670 | 54 | 69 57 443 | | 43) | 1 | Stay | Stag | 6 |
| 0680 | 55 | 73 98 761 | | 43) | 2 | Screw | Skruv | 5 |
| 0690 | 56 | 69 44 284 | | 185) | 1 | Spacer | Mellanlägg | 6 |
| 0700 | 57 | *79 61 675* | | 185)-1988 NLS - USE 9449752 | 2 | Rivet | Nit | 5 |
| 0710 | 57 | 94 49 752 | | 1989-,500) | 2 | Rivet | Nit | 5 |

6. Rear Bakre
43. For cars with integrated bumpers För bilar med integrerade stötfångare
185. Ch. J3000056-
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-A16

## Roof
## Tak

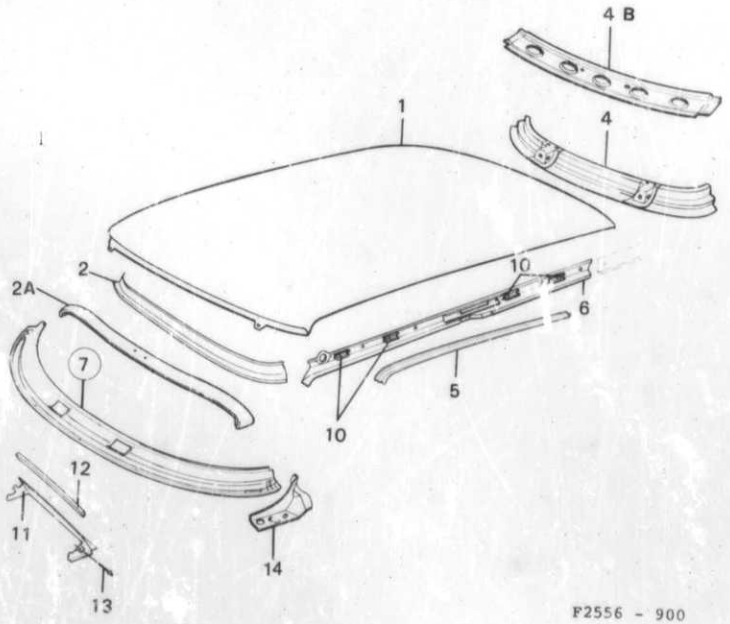


F2556 - 900

| 0150 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 82 74 425 | | | 1 | Plate | Plåt | 5 |
| 0020 | 1 | *92 97 151* | | CD NLS | 1 | Roof | Tak | 7 |
| 0030 | 2 | 69 26 307 | | 5) | 1 | Beam | Balk | 5 |
| 0040 | 2A | 69 33 527 | | 5) CV | 1 | Beam | Balk | 6 |
| 0050 | 4 | 92 29 949 | | 6) | 1 | Beam | Balk | 6 |
| 0060 | 4B | 92 92 442 | | 6) 2SN | 1 | Beam | Balk | 6 |
| 0070 | 4B | 92 20 864 | | 6) 4SN | 1 | Beam | Balk | 6 |
| 0080 | 4B | *92 20 070* | | 6) CD NLS | 1 | Beam | Balk | 6 |
| 0090 | 5 | 76 00 729 | | LH, (8201774) | 1 | Water channel | Takränna | 5 |
| 0100 | 5 | 76 00 737 | | RH, (8201782) | 1 | Water channel | Takränna | 5 |
| 0110 | 5 | 76 01 313 | | LH, 5CK, 4SN, (8242232) | 1 | Water channel | Takränna | 5 |
| 0120 | 5 | 76 01 321 | | RH, 5CK, 4SN, (8242240) | 1 | Water channel | Takränna | 5 |
| 0130 | 6 | *82 09 926* | | LH, 3CK, 2SN | 1 | Beam | Balk | 6 |
| 0140 | 6 | *82 09 934* | | RH, 3CK, 2SN | 1 | Beam | Balk | 6 |
| 0150 | 6 | 69 27 370 | | 1987-, LH, 3CK | 1 | Beam | Balk | 6 |
| 0160 | 6 | 69 27 388 | | 1987-, RH, 3CK | 1 | Beam | Balk | 6 |
| 0170 | 6 | 82 49 872 | | LH, 5CK, 4SN | 1 | Beam | Balk | 6 |
| 0180 | 6 | 82 49 880 | | RH, 5CK, 4SN | 1 | Beam | Balk | 6 |
| 0190 | 6 | *92 97 532* | | LH, CD NLS | 1 | Beam | Balk | 7 |
| 0200 | 6 | *92 97 540* | | RH, CD NLS | 1 | Beam | Balk | 7 |
| 0210 | 7 | 92 23 926 | | | 1 | Beam | Balk | 6 |
| 0220 | 10 | 82 09 967 | | | 4 | Attaching profile | Fästprofil | 6 |
| 0230 | 11 | 82 28 843 | | | 1 | Plate | Plåt | 5 |
| 0240 | 12 | 82 33 686 | | | 1 | Sealing strip | Tätningslist | 5 |
| 0250 | 13 | 79 61 691 | | | 2 | Rivet | Nit | 5 |
| 0260 | 14 | 92 32 776 | | LH | 1 | Reinforcement | Förstärkning | 6 |
| 0270 | 14 | 92 32 766 | | RH | 1 | Reinforcement | Förstärkning | 6 |

5. Front Främre
6. Rear Bakre



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX



| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

Car body

# 5-A18 Sun roof Hand-operated

Karosskrov

**Soltak Handmanövrerat**

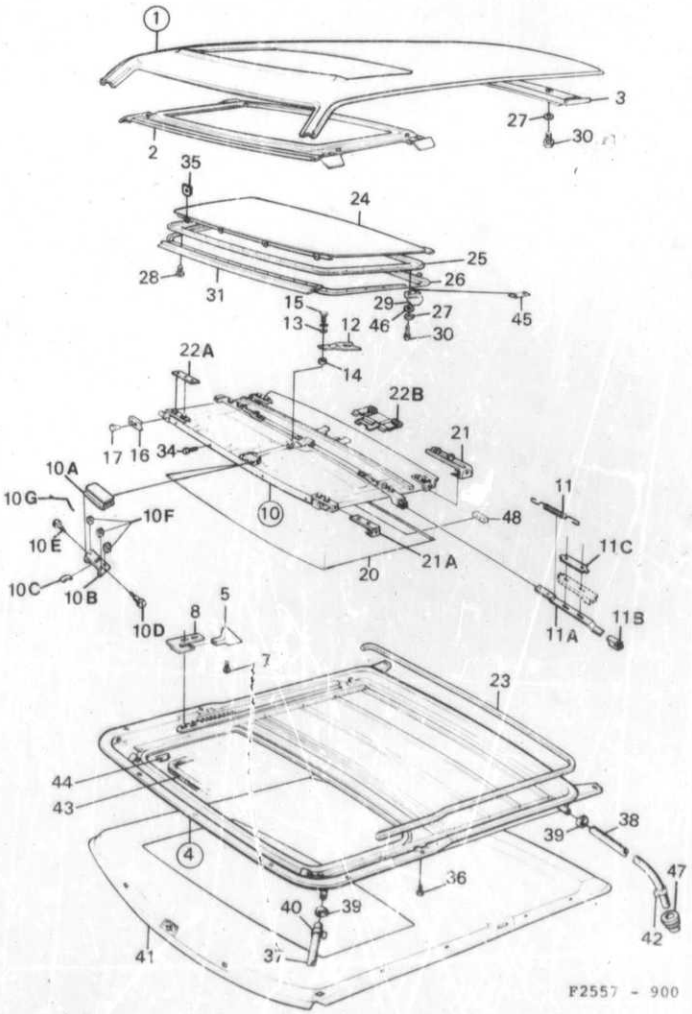


| 0200 | Pos | Part No/Artikelnr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 82 74 433 | | | 1 | Plate | Plåt | 5 |
| 0020 | 2 | 82 83 590 | | | 1 | .Attachment frame | .Insättningsram | 6 |
| 0030 | 3 | 82 83 608 | | | 1 | .Rib | .Spant | 6 |
| 0040 | 4 | 69 17 223 | | | 1 | Frame | Ram | 6 |
| 0050 | 5 | 92 93 010 | | | 2 | .Slide dog | .Glidklack | 5 |
| 0060 | 7 | 82 49 633 | | | 2 | .Screw | .Skruv | 5 |
| 0070 | 8 | 82 48 270 | | LH | 1 | .Spring | .Fjäder | 5 |
| 0080 | 8 | 82 48 288 | | RH | 1 | .Spring | .Fjäder | 5 |
| 0090 | 10 | 69 15 920 | | -1988 | 1 | Panel | Panel | 5 |
| 0100 | 10 | 69 75 064 | | 1989-,500) | 1 | Panel | Panel | 5 |
| 0110 | 10A | 69 17 322 | | | 1 | .Cover | .Kåpa | 6 |
| 0120 | 10B | 69 17 330 | | | 1 | .Handle | .Handtag | 6 |
| 0130 | 10C | 82 48 502 | | | 1 | .Spring | .Fjäder | 5 |
| 0140 | 10D | 82 48 601 | | 5) | 2 | .Screw | .Skruv | 5 |
| 0150 | 10E | 82 48 726 | | 6) | 1 | .Screw | .Skruv | 5 |
| 0160 | 10F | 82 49 757 | | | 3 | .Nut | .Mutter | 5 |
| 0170 | 10G | 82 48 494 | | | 2 | .Clamp | .Klämma | 5 |
| 0180 | 11 | 82 48 577 | | | 2 | .Spring | .Fjäder | 5 |
| 0190 | 11A | 82 48 775 | | | 2 | .Catch | .Spärr | 5 |
| 0200 | 11B | 82 48 437 | | | 2 | .Slide dog | .Glidklack | 5 |
| 0210 | 11C | 82 88 599 | | | 2 | .Striker plate | .Låsbleck | 5 |
| 0220 | 12 | 82 48 585 | | | 1 | .Lock arm | .Låsarm | 6 |
| 0230 | 13 | *82 49 724* | | NLS | 6 | .Washer | .Bricka | 5 |
| 0240 | 14 | 82 49 682 | | | 2 | .Nut | .Mutter | 5 |
| 0250 | 15 | *82 49 740* | | NLS | 2 | .Screw | .Skruv | 5 |
| 0260 | 16 | 69 17 306 | | | 2 | .Stop | .Stopp | 6 |
| 0270 | 17 | 82 48 593 | | | 4 | .Rivet | .Nit | 5 |
| 0280 | 20 | 69 17 264 | | -1988 | 1 | .Upholstery | .Klädsel | 6 |
| 0290 | 20 | 69 75 031 | | 1989-,500) | 1 | .Upholstery | .Klädsel | 6 |
| 0300 | 21 | 69 37 452 | | 6) | 2 | .Support | .Stöd | 5 |
| 0310 | 21A | 69 37 429 | | 5) | 2 | .Support | .Stöd | 5 |
| 0320 | 22A | 82 86 429 | | | 2 | .Washer | .Bricka | 5 |
| 0330 | 22B | 82 88 193 | | | 2 | .Spring | .Fjäder | 5 |
| 0340 | 23 | 82 49 526 | | | 1 | Sealing strip | Tätningslist | 5 |
| 0350 | 24 | 92 89 471 | | | 1 | Hatch | Lucka | 5 |
| 0360 | 25 | 92 89 505 | | | 1 | Sealing strip | Tätningslist | 5 |
| 0370 | 26 | 69 17 348 | | | 1 | Bracket | Hållare | 5 |
| 0380 | 27 | 79 15 549 | | | 4 | Star washer | Taggbricka | 5 |
| 0390 | 28 | 79 39 804 | | | 23 | Screw | Skruv | 5 |
| 0400 | 29 | 82 48 619 | | | 2 | Bracket | Konsol | 5 |
| 0410 | 30 | 80 97 586 | | -1988 | 4 | Screw | Skruv | 5 |
| 0420 | 30 | 80 59 230 | | 1989-,500) | 4 | Screw | Skruv | 5 |
| 0430 | 31 | 69 17 355 | | | 1 | Bracket | Hållare | 5 |
| 0440 | 34 | *79 22 289* | | NLS - USE 7965684 | 4 | Screw | Skruv | 5 |
| 0450 | 35 | 92 33 537 | | | 4 | Spacer | Mellanlägg | 5 |
| 0460 | 36 | *79 71 757* | | NLS - USE 7528953 | 9 | Screw | Skruv | 5 |
| 0470 | 37 | 92 23 736 | | 5) | 2 | Draining hose | Dräneringsslang | 5 |
| 0480 | 38 | 92 23 744 | | 6) 3CK | 2 | Draining hose | Dräneringsslang | 5 |
| 0490 | 38 | 92 23 751 | | 6) 5CK | 2 | Draining hose | Dräneringsslang | 5 |
| 0500 | 38 | 92 27 554 | | 6) SN | 2 | Draining hose | Dräneringsslang | 5 |
| 0510 | 39 | 79 70 056 | | | 4 | Hose clamp | Slangklamma | 5 |
| 0520 | 40 | 92 28 149 | | | 2 | Clip | Clips | 5 |
| 0530 | 40 | 92 28 156 | | SN | 2 | Clip | Clips | 5 |
| 0540 | 41 | | | See page 8B-139, 6-F20 | 1 | Headlining | Takklädsel | |
| 0550 | 42 | 82 66 843 | | | 2 | Hose clamp | Slangklämma | 5 |
| 0560 | 43 | 98 36 412 | | | 1 | Strip | List | 6 |
| 0570 | 44 | 94 26 420 | | | 4 | Clip | Clips | 5 |
| 0580 | 45 | *80 29 936* | | NLS - USE 9166356 | X | Washer | Bricka | 5 |

5. Front Främre
6. Rear Bakre
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-A20

## Sun roof
## Hand-operated

## Soltak
## Handmanövrerat

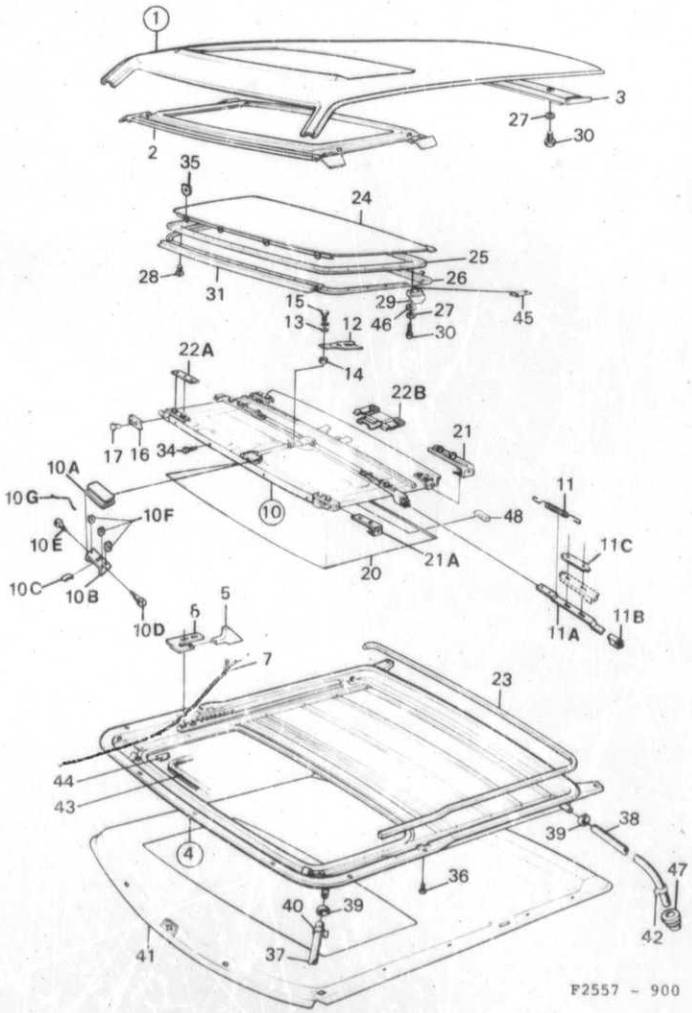


F2557 - 900

| 0200 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0590 | 46 | *80 29 936* | | ALT. TO 8267932 NLS - USE 9166356 | X | Washer | Bricka | 5 |
| 0600 | 47 | 92 23 991 | | | 2 | Bushing | Bussning | 5 |
| 0610 | 48 | 69 37 759 | | 112) | 2 | Absorber | Dämpare | 5 |

112. Ch. G2008689-, G3006354-, G7010551-



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings dumpers and touch-up paint | 5-D22 |
| Complete sets | 5-F22 |
| | 5-G18 |

Car body

# 5-A22


## *Sun roof*

## *Electrically operated*

Karosskrov

## *Soltak*

## *El-manövrerat*

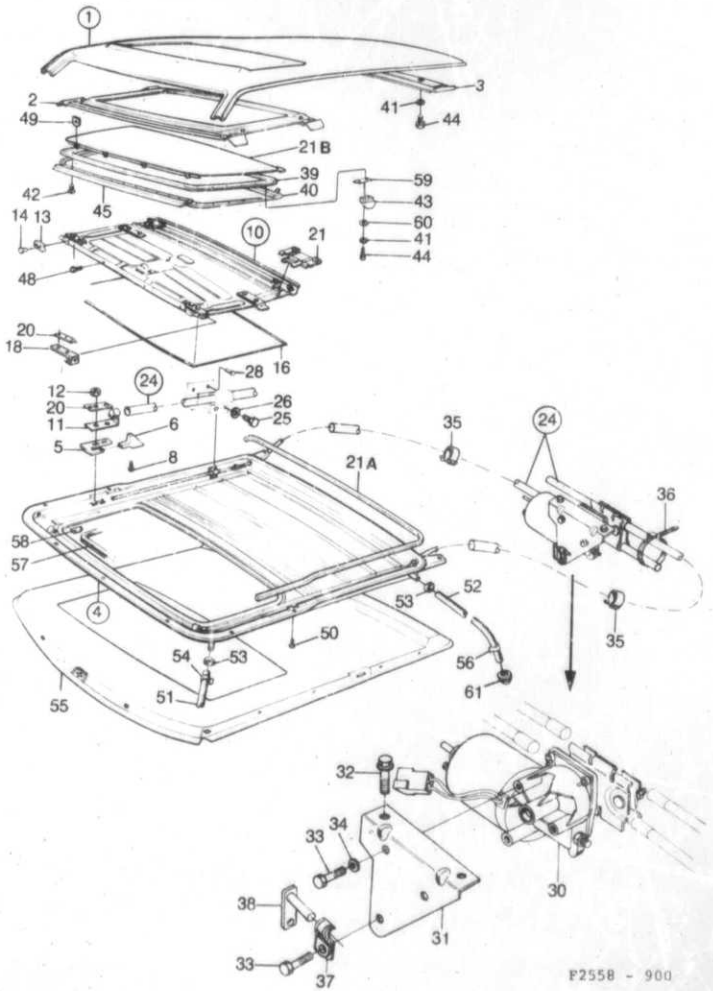


| 0225 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 82 74 433 | | | 1 | Plate | Plåt | 5 |
| 0040 | 2 | 82 83 590 | | | 1 | . Attachment frame | . Insättningsram | 6 |
| 0060 | 3 | 82 83 608 | | | 1 | . Rib | . Spant | 6 |
| 0085 | 4 | 69 17 389 | | | 1 | Frame | Ram | 6 |
| 0124 | 5 | 82 48 270 | | LH | 1 | . Spring | . Fjäder | 5 |
| 0125 | 5 | 82 48 288 | | RH | 1 | . Spring | . Fjäder | 5 |
| 0130 | 6 | *92 92 913* | | NLS - USE 9293010 | 2 | . Slide dog | . Glidklack | 5 |
| 0150 | 8 | 82 49 633 | | | 2 | . Screw | . Skruv | 5 |
| 0205 | 10 | 69 17 405 | | -1988 | 1 | Panel | Panel | 5 |
| 0210 | 10 | 69 75 015 | | 1989-,500) | 1 | Panel | Panel | 5 |
| 0220 | 11 | 92 80 736 | | | 2 | . Connector | . Anslutning | 5 |
| 0240 | 12 | 82 88 029 | | | 4 | . Nut | . Mutter | 5 |
| 0265 | 13 | 69 17 306 | | | 2 | . Stop | . Stopp | 6 |
| 0280 | 14 | 92 80 835 | | | 4 | . Rivet | . Nit | 5 |
| 0325 | 16 | 69 17 264 | | -1988 | 1 | . Upholstery | . Kladsel | 6 |
| 0330 | 16 | 69 75 031 | | 1989-,500) | 1 | . Upholstery | . Kladsel | 6 |
| 0360 | 18 | 69 37 429 | | | 2 | . Support | . Stöd | 5 |
| 0380 | 19 | 82 88 029 | | | 4 | . Nut | . Mutter | 5 |
| 0400 | 20 | 82 86 429 | | | 2 | . Washer | . Bricka | 5 |
| 0420 | 21 | 82 83 193 | | | 2 | . Spring | . Fjäder | 5 |
| 0422 | 21A | 82 49 526 | | | 1 | Sealing strip | Tätningslist | 5 |
| 0430 | 21B | 92 89 471 | | | 1 | Hatch | Lucka | 5 |
| 0480 | 24 | 92 37 439 | | LH | 1 | Cable | Wire | 4 |
| 0520 | 24 | 92 37 447 | | RH | 1 | Cable | Wire | 4 |
| 0560 | 25 | 92 81 072 | | | 4 | . Screw | . Skruv | 5 |
| 0580 | 26 | 79 15 549 | | | 4 | . Star washer | . Taggbricka | 5 |
| 0620 | 28 | 92 81 098 | | | 4 | Rivet | Nit | 5 |
| 0660 | 30 | 35 79 211 | | | 1 | Electric motor | Elmotor | 4 |
| 0680 | 31 | 76 51 896 | | | 1 | Bracket | Fäste | 5 |
| 0700 | 32 | *82 67 205* | | NLS - USE 7972466 | 2 | Screw | Skruv | 5 |
| 0720 | 33 | 92 38 148 | | | 3 | Screw | Skruv | 5 |
| 0740 | 34 | 92 89 604 | | | 3 | Spacer sleeve | Distanshylsa | 5 |
| 0760 | 35 | 71 08 491 | | | 2 | Clamp | Klämmer | 5 |
| 0780 | 36 | 79 71 880 | | | 2 | Tensioning band | Spännband | 4 |
| 0800 | 37 | 83 71 551 | | | 1 | Tube clamp | Rörklamma | |
| 0820 | 38 | 92 82 609 | | | 1 | Crank | Vev | 5 |
| 0850 | 39 | 92 89 505 | | | 1 | Sealing strip | Tätningslist | 5 |
| 0875 | 40 | 69 17 348 | | | 1 | Bracket | Hållare | 5 |
| 0880 | 41 | 79 15 549 | | | 4 | Star washer | Taggbricka | 5 |
| 0910 | 42 | 79 39 804 | | | 23 | Screw | Skruv | 5 |
| 0920 | 43 | 82 48 619 | | | 2 | Bracket | Konsol | 5 |
| 0940 | 44 | 80 97 586 | | -1988 | 4 | Screw | Skruv | 5 |
| 0950 | 44 | 80 59 230 | | 1989-,500) | 4 | Screw | Skruv | 5 |
| 0972 | 45 | 69 17 355 | | | 1 | Bracket | Hållare | 5 |
| 1020 | 48 | *79 22 289* | | NLS - USE 7965684 | 4 | Screw | Skruv | 5 |
| 1040 | 49 | *82 88 243* | | NLS - USE 9297458 | 4 | Spacer | Mellanlägg | 4 |
| 1060 | 50 | *79 71 757* | | NLS - USE 7528953 | 9 | Screw | Skruv | 5 |
| 1080 | 51 | 92 23 736 | | 5) | 2 | Draining hose | Dräneringsslang | 5 |
| 1120 | 52 | 92 23 744 | | 6) 3CK | 2 | Draining hose | Dräneringsslang | 5 |
| 1160 | 52 | 92 23 751 | | 6) 5CK | 2 | Draining hose | Dräneringsslang | 5 |
| 1200 | 52 | 92 27 554 | | 6) SN | 2 | Draining hose | Dräneringsslang | 5 |
| 1240 | 53 | 79 70 056 | | | 4 | Hose clamp | Slangklamma | 5 |
| 1260 | 54 | 92 28 149 | | | 2 | Clip | Clips | 5 |
| 1280 | 54 | 92 28 156 | | SN | 2 | Clip | Clips | 5 |
| 1320 | 55 | | | See page 8B-139, 6-F20 | 1 | Headlining | Takklädsel | |
| 1380 | 56 | 82 66 843 | | | 2 | Hose clamp | Slangklamma | 5 |
| 1410 | 57 | 98 36 412 | | | 1 | Strip | List | 6 |
| 1420 | 58 | 94 26 420 | | | 4 | Clip | Clips | 5 |
| 1440 | 59 | *80 29 936* | | NLS - USE 9166356 | X | Washer | Bricka | 5 |

5. Front Främre
6. Rear Bakre
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

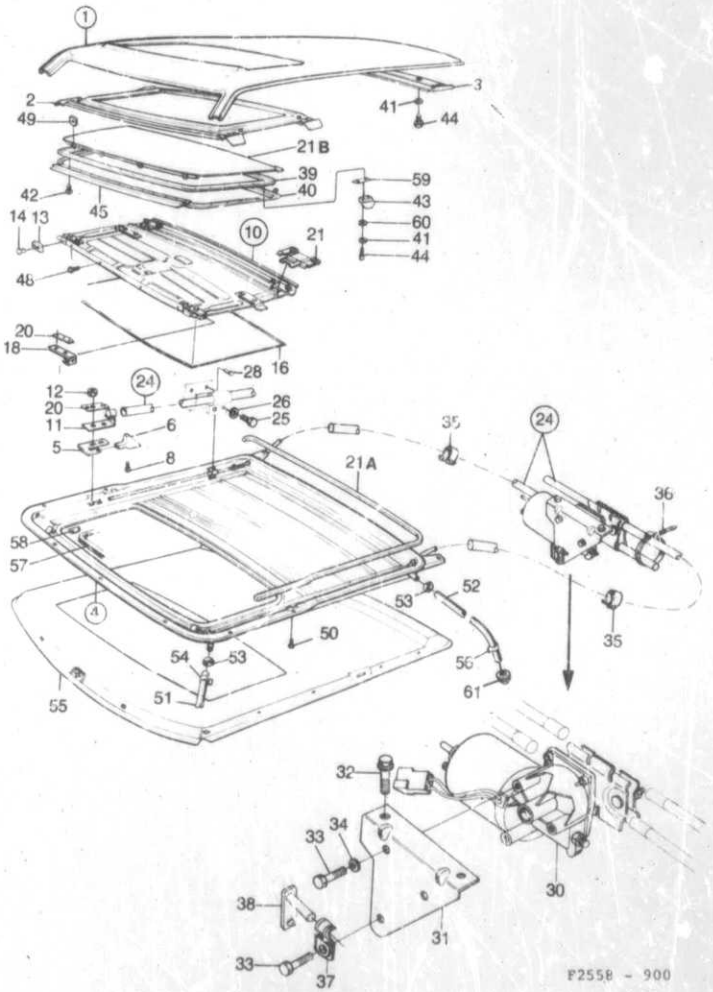


Car body

# 5-A24

## Sun roof
## Electrically operated

Karosskrov

## Soltak
## El-manövrerat


| 0225 Pos | Part No/Art nr | KS | Notes/Anmärkningar | Qty/Antal | Description | Benämning | SL |
|---|---|---|---|---|---|---|---|
| 1460 60 | *80 29 936* | | ALT. TO 8267932 NLS - USE 9166356 | X | Washer | Bricka | 5 |
| 1460 1480 61 | 92 23 991 | | | 2 | Bushing | Bussning | 5 |


MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

8A GROUP INDEX

| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

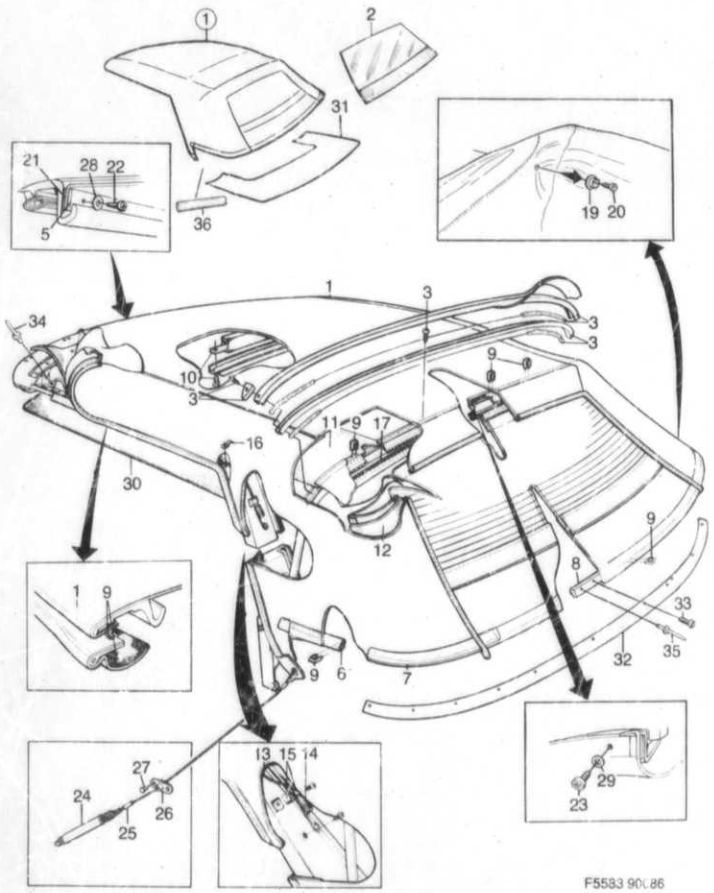


F5583 90(86

Car body
# 5-B02
## Folding top Convertible

Karosskrov
## Sufflett Cabriolet

| 0230 | Pris | Part No/Art nr | K S | Notes Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | *69 35 530* | | -1986, CAMBRIA NLS | 1 | Roof | Tak | 5 |
| 0020 | | *69 97 639* | | 1987, HAPPICH NLS - USE 6999536, 9161415, 9161423 | 1 | Roof | Tak | 9 |
| 0030 | | *69 52 717* | | 1988-, HAPPICH NLS - USE 6999536 | 1 | Roof | Tak | 9 |
| 0040 | 1 | *69 51 792* | | -1986 NLS - USE 6952550, 6952576, 6952592 | 1 | .Headlining | .Taktyg | 5 |
| 0050 | 1 | *69 97 209* | | 1987- NLS - USE 6952550, 6952576, 6952592 | 1 | .Headlining | .Taktyg | 5 |
| 0060 | 1 | 69 51 826 | | -1986 | 1 | ..Headlining | ..Taktyg | 9 |
| 0070 | 1 | 69 52 550 | | 1987- | 1 | ..Headlining | ..Taktyg | 5 |
| 0080 | 2 | 69 51 800 | | -1986 | 1 | ..Rear window | ..Bakruta | 4 |
| 0090 | 2 | 69 52 576 | | 1987- | 1 | ..Rear window | ..Bakruta | 4 |
| 0100 | 3 | 69 51 818 | | -1986 | 1 | ..Decor strip | ..Dekorlist | 5 |
| 0110 | 3 | 69 52 592 | | 1987- | 1 | ..Decor strip | ..Dekorlist | 5 |
| 0120 | 5 | 69 51 719 | | 5) | 1 | .Support | .Stöd | 6 |
| 0130 | 5 | 69 51 750 | | CENTRE | 2 | .Support | .Stöd | 6 |
| 0140 | 5 | 69 51 727 | | 6) | 1 | .Support | .Stöd | 6 |
| 0150 | 6 | 69 51 917 | | LH | 1 | .Strip | .List | 5 |
| 0160 | 6 | 69 51 065 | | RH | 1 | .Strip | .List | 5 |
| 0170 | 7 | 69 51 099 | | LH | 1 | .Strip | .List | 5 |
| 0180 | 7 | 69 51 081 | | RH | 1 | .Strip | .List | 5 |
| 0190 | 8 | 69 51 040 | | 6) | 1 | .Strip | .List | 5 |
| 0200 | 9 | 69 34 285 | | 335) | X | .Staple | .Häftklammer | 5 |
| 0210 | 9 | 69 35 712 | | 335) | X | .Staple | .Häftklammer | 5 |
| 0220 | 10 | 69 50 570 | | | 1 | .Retainer | .Hållare | 5 |
| 0230 | | 69 52 451 | | 1) | 5 | ..Screw | ..Skruv | 5 |
| 0240 | 11 | *69 51 198* | | 230), LH NLS - USE 4407375 | 1 | .Base | .Underlägg | 5 |
| 0250 | 11 | *69 52 956* | | 231), LH NLS - USE 4407375 | 1 | .Base | .Underlägg | 5 |
| 0260 | 11 | *69 50 190* | | 230), RH NLS - USE 4407375 | 1 | .Base | .Underlägg | 5 |
| 0270 | 11 | *69 52 949* | | 231), RH NLS - USE 4407375 | 1 | .Base | .Underlägg | 5 |
| 0280 | 12 | 69 51 008 | | 6,291) | 2 | .Base | .Underlägg | 5 |
| 0290 | 12 | 69 53 798 | | 6,292), LH | 1 | .Base | .Underlägg | 5 |
| 0300 | 12 | 69 53 780 | | 6,292), RH | 1 | .Base | .Underlägg | 5 |
| 0310 | 13 | 69 51 016 | | | 2 | .Cable | .Wire | 5 |
| 0320 | 14 | *69 51 651* | | 177), WIRE NLS | 2 | .Cable anchorage | .Wirefäste | 5 |
| 0330 | 15 | 69 51 669 | | WIRE | 2 | .Cable anchorage | .Wirefäste | 5 |
| 0340 | 16 | 85 30 917 | | | 4 | .Clip | .Clips | 5 |
| 0350 | 17 | 69 51 032 | | 177) | 1 | .Zip fastener | .Dragkedja | 5 |
| 0360 | 17 | 69 52 634 | | 178) | 1 | .Zip fastener | .Dragkedja | 5 |
| 0370 | 19 | 73 46 232 | | | 2 | .Bracket | .Fäste | 5 |
| 0380 | 20 | 79 22 206 | | | 2 | .Screw | .Skruv | 5 |
| 0390 | 21 | 84 06 142 | | CUT TO 2400 MM | 1 | .Tape | .Tape | 5 |
| 0400 | 22 | *69 51 958* | | 208) NLS - USE 8840068 | 7 | .Screw | .Skruv | 5 |
| 0410 | 22 | *73 98 993* | | 209) NLS - USE 8840068 | 7 | .Screw | .Skruv | 5 |
| 0420 | 23 | 79 65 338 | | 208) | 7 | .Screw | .Skruv | 6 |

1. Not as separate spare part. Ej som separat reservdel.
5. Front Främre
6. Rear Bakre
177. Ch. --J7004737
178. Ch. J7004738--
208. Ch. --J7023841.
209. Ch. J7023842--.
230. Ch. --J7004737.
231. Ch. J7004738--.
291. Ch. --K7017655
292. Ch. K7017656--
335. Package with 5000 staples Förpackning med 5000 häftklammer




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

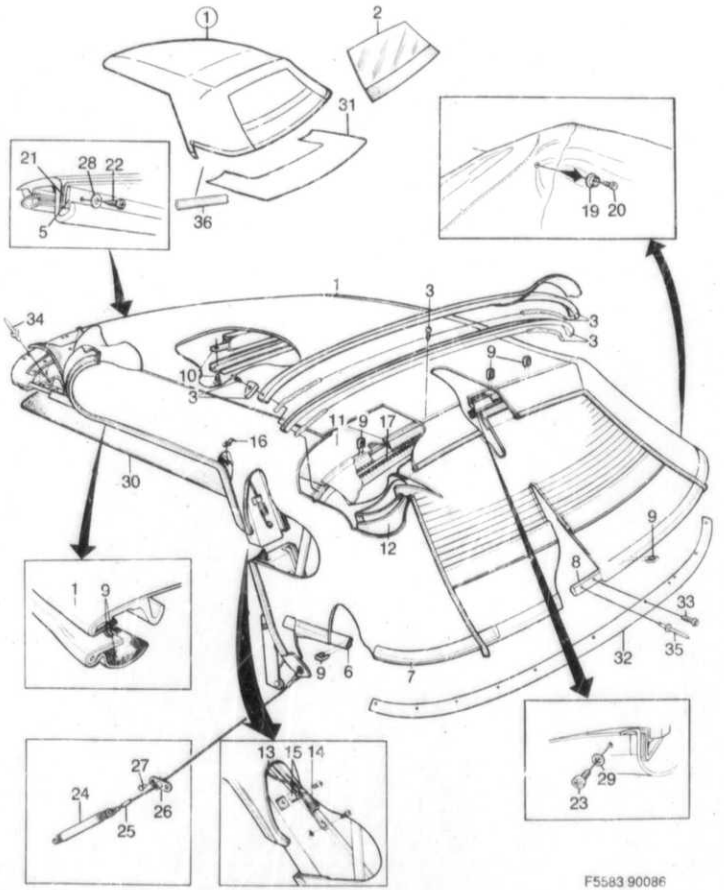


F5583 90086

| 0230 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0430 | 23 | 79 75 758 | | 209) | 7 | .Screw | .Skruv | 5 |
| 0440 | 24 | 69 95 252 | | | 2 | .Tension spring | .Dragfjäder | 5 |
| 0450 | 25 | 69 95 260 | | | 2 | .Cable | .Wire | 5 |
| 0460 | 26 | 69 95 278 | | | 2 | .Grommet | .Genomföring | 5 |
| 0470 | 27 | 79 61 642 | | | 4 | .Rivet | .Nit | 5 |
| 0480 | 28 | 79 73 894 | | 209) | 7 | .Washer | .Bricka | 5 |
| 0490 | 29 | 79 74 249 | | 209) | 1 | .Washer | .Bricka | 5 |
| 0500 | 30 | 69 51 701 | | | 1 | Headlining | Innertak | 6 |
| 0510 | 31 | 69 51 693 | | -1987 | 1 | Cloth | Duk | 5 |
| 0520 | 31 | 69 97 738 | | 1988, NOT AU | 1 | Cloth | Duk | 5 |
| 0530 | 31 | 69 97 746 | | 1988, AU | 1 | Cloth | Duk | 5 |
| 0540 | 31 | 69 97 738 | | 500) 1989-, NOT AU, CA | 1 | Cloth | Duk | 5 |
| 0550 | 31 | 69 97 746 | | 1989-, AU, CA | 1 | Cloth | Duk | 5 |
| 0560 | 32 | 98 83 380 | | | 1 | Strip | List | 5 |
| 0570 | 33 | 98 24 574 | | | 12 | Screw | Skruv | 5 |
| 0580 | 34 | 69 53 822 | | 319) | 2 | Rivet | Nit | 3 |
| 0590 | 35 | 79 77 622 | | | 29 | Rivet | Nit | 5 |
| 0600 | 36 | 41 53 003 | | | 2 | Retainer | Hållare | 5 |

209. Ch. J7023842-.
319. Ch. K7017656-
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-B06

## Rail front, rear and side
## Convertible

## Skenor,främre,bakre,sido
## Cabriolet

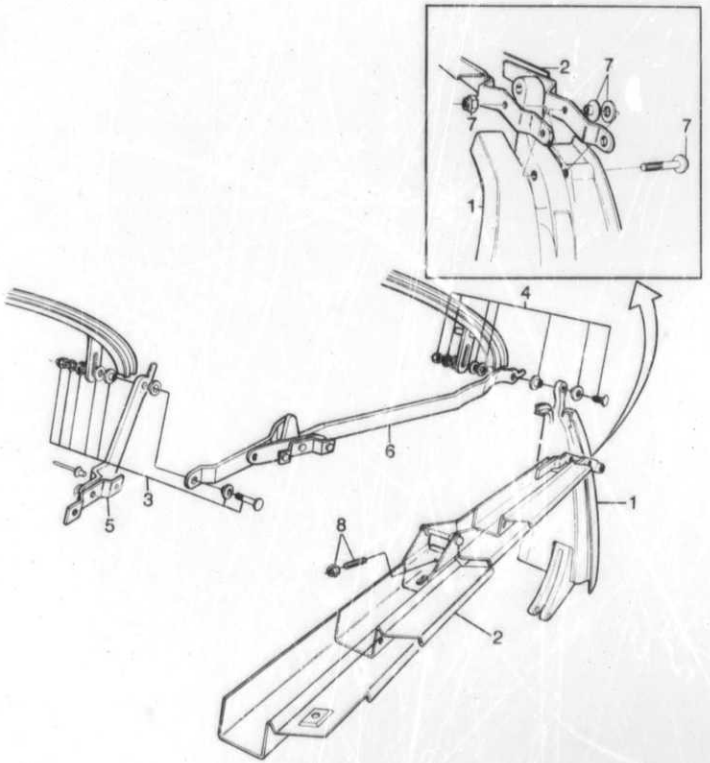


F2560 - 900

| 0235 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | *69 35 530* | | -1986, CAMBRIA NLS | 1 | Roof | Tak | 5 |
| 0020 | | *69 97 639* | | 1987, HAPPICH NLS - USE 6999536, 9161415, 9161423 | 1 | Roof | Tak | 9 |
| 0030 | | *69 52 717* | | 1988-, HAPPICH NLS - USE 6999536 | 1 | Roof | Tak | 9 |
| 0040 | 1 | 69 50 034 | | 6) LH | 1 | .Beam | .Balk | 5 |
| 0050 | 1 | 69 50 026 | | 6) RH | 1 | .Beam | .Balk | 5 |
| 0060 | 2 | 69 50 497 | | LH | 1 | .Beam | .Balk | 5 |
| 0070 | 2 | 69 50 489 | | RH | 1 | .Beam | .Balk | 5 |
| 0080 | 3 | 69 50 679 | | BOW NO. 2 | 2 | .Mounting kit | .Monteringssats | 5 |
| 0090 | 4 | 69 50 638 | | BOW NO. 3 | 2 | .Mounting kit | .Monteringssats | 5 |
| 0100 | | 69 52 352 | | 1) | 1 | ..Bushing | ..Bussning | |
| 0110 | | 69 52 360 | | 1) | 2 | ..Washer | ..Bricka | |
| 0120 | | 69 52 378 | | 1) | 1 | ..Washer | ..Bricka | |
| 0130 | | 69 52 386 | | 1) | 1 | ..Nut | ..Mutter | |
| 0140 | | 69 52 410 | | 1,317) | 1 | ..Screw | ..Skruv | |
| 0150 | | 69 52 345 | | 1,318) | 1 | ..Screw | ..Skruv | 5 |
| 0160 | | 69 52 428 | | 1,317) | 2 | ..Bushing | ..Bussning | |
| 0170 | | 69 53 103 | | 1,318) | 1 | ..Bushing | ..Bussning | 5 |
| 0180 | 5 | 69 50 133 | | 5) LH | 1 | .Link | .Länk | 5 |
| 0190 | 5 | 69 50 125 | | 5) RH | 1 | .Link | .Länk | 5 |
| 0200 | 6 | 69 51 321 | | LH | 1 | .Link | .Länk | 5 |
| 0210 | 6 | 69 51 313 | | RH | 1 | .Link | .Länk | 5 |
| 0220 | 7 | 69 50 646 | | | 2 | .Mounting kit | .Monteringssats | 5 |
| 0230 | | 69 52 022 | | 1) | 1 | ..Lock nut | ..Låsmutter | |
| 0240 | | 69 52 071 | | 1) | 1 | ..Bushing | ..Bussning | |
| 0250 | | 69 52 394 | | 1) | 1 | ..Screw | ..Skruv | |
| 0260 | | 69 52 402 | | 1) | 1 | ..Washer | ..Bricka | |
| 0270 | | *69 53 517* | | 1) NLS | 3 | ..Bushing | ..Bussning | 5 |
| 0280 | 8 | 69 51 305 | | | 2 | .Adjustment screw | .Justerskruv | 5 |
| 0290 | | 69 52 436 | | 1) | 1 | ..Nut | ..Mutter | |
| 0300 | | 69 52 444 | | 1) | 1 | ..Screw | ..Skruv | |

1. Not as separate spare part. Ej som separat reservdel.
5. Front Främre
6. Rear Bakre
317. Part of: 6950679 Ingår i: 6950679
318. Part of: 6950638 Ingår i: 6950638




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

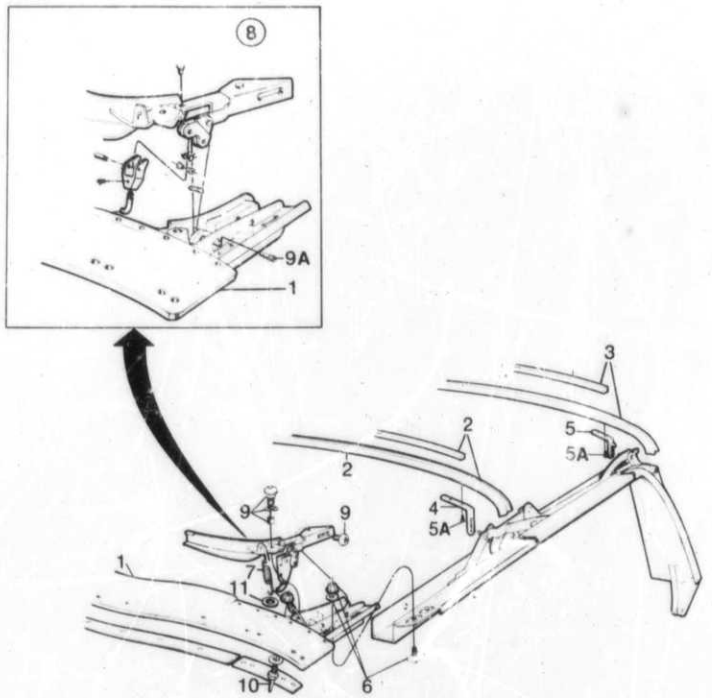


F2561 - 900

| 0240 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | *69 35 530* | | -1986, CAMBRIA NLS | 1 | Roof | Tak | 5 |
| 0020 | | *69 97 639* | | 1987, HAPPICH NLS - USE 6999536, 9161415, 9161423 | 1 | Roof | Tak | 9 |
| 0030 | | *69 52 717* | | 1988-, HAPPICH NLS - USE 6999536 | 1 | Roof | Tak | 9 |
| 0040 | 1 | *69 51 107* | | -1986, NUMBER 1 NLS - USE 6952758, 9161415, 9161423 | 1 | .Bow | .Båge | 5 |
| 0050 | 1 | *69 52 543* | | 1987-,154) NUMBER 1 NLS - USE 6952758, 9161415, 9161423 | 1 | .Bow | .Båge | 5 |
| 0060 | 1 | 69 52 758 | | 155) NUMBER 1 | 1 | .Bow | .Båge | 5 |
| 0070 | 2 | 69 50 166 | | NUMBER 2 | 1 | .Bow | .Båge | 5 |
| 0080 | 3 | 69 50 521 | | NUMBER 3 | 1 | .Bow | .Båge | 5 |
| 0090 | 4 | 69 50 042 | | BOW NO. 2 | 2 | .Bracket | .Fäste | 5 |
| 0100 | 5 | 69 50 141 | | BOW NO. 3 | 2 | .Bracket | .Fäste | 5 |
| 0110 | 5A | 69 50 604 | | | 2 | .Attaching screw | .Fästskruv | 5 |
| 0120 | | 69 52 121 | | 1) | 13 | ..Screw | ..Skruv | 5 |
| 0130 | 6 | 69 50 661 | | BOW NO. 1 | 2 | .Mounting kit | .Monteringssats | 5 |
| 0140 | | 69 52 188 | | 1) | 1 | ..Screw | ..Skruv | |
| 0150 | | 69 52 196 | | 1) | 1 | ..Washer | ..Bricka | |
| 0160 | | 69 52 204 | | 1) | 1 | ..Nut | ..Mutter | |
| 0170 | 7 | 69 50 463 | | -1988 | 2 | .Spring | .Fjäder | 5 |
| 0180 | 7 | 69 53 921 | | 1989-,500) | 2 | .Spring | .Fjäder | 5 |
| 0190 | 8 | *69 53 293* | | LH NLS - USE 6953319 | 1 | .Lock | .Lås | 5 |
| 0200 | 8 | *69 53 285* | | RH NLS - USE 6953301 | 1 | .Lock | .Lås | 5 |
| 0210 | | 69 52 246 | | 1) | 1 | ..Hook | ..Krok | |
| 0220 | | 69 52 253 | | 1) | 1 | ..Screw | ..Skruv | |
| 0230 | | 69 52 261 | | 1) | 1 | ..Pin | ..Axeltapp | |
| 0240 | | 69 52 279 | | 1) | 1 | ..Spring | ..Fjäder | |
| 0250 | | 69 52 329 | | 1) | 1 | ..Rivet | ..Nit | |
| 0260 | | 69 52 287 | | 1) | 1 | ..Bushing | ..Bussning | 5 |
| 0270 | | 69 52 295 | | 1) | 1 | ..Hook attachment | ..Krokfäste | |
| 0280 | | 69 52 170 | | | 1 | ..Bolt | ..Bult | 5 |
| 0290 | 9 | 69 50 653 | | | 2 | .Mounting kit | .Monteringssats | 5 |
| 0300 | | 69 52 139 | | 1) | 1 | ..Washer | ..Bricka | |
| 0310 | | 69 52 147 | | 1) | 1 | ..Screw | ..Skruv | |
| 0320 | | 69 52 154 | | 1) | 1 | ..Bushing | ..Bussning | |
| 0330 | | 69 52 162 | | 1) | 1 | ..Screw | ..Skruv | |
| 0340 | 9A | 69 52 170 | | | 2 | ..Bolt | ..Bult | 5 |
| 0350 | 10 | 69 50 687 | | 154) | 2 | .Locating pin | .Styrpinne | 5 |
| 0360 | 10 | 69 52 832 | | 155) | 2 | .Locating pin | .Styrpinne | 5 |
| 0370 | | 69 52 212 | | 1,154) | 1 | ..Washer | ..Bricka | |
| 0380 | | 69 52 196 | | 1,155) | 1 | ..Washer | ..Bricka | |
| 0390 | | *69 52 220* | | 1,154) NLS | 1 | ..Locating pin | ..Styrpinne | 9 |
| 0400 | | *69 52 733* | | 1,155) NLS | 1 | ..Locating pin | ..Styrpinne | 5 |
| 0410 | | *69 52 238* | | 1,154) NLS | 1 | ..Nut | ..Mutter | 5 |
| 0420 | | *69 52 824* | | 1,155) NLS | 1 | ..Nut | ..Mutter | 5 |
| 0430 | 11 | 69 96 979 | | | 2 | Washer | Bricka | 5 |
| 0440 | | | | | | | | |
| 0450 | | *69 51 263* | | 320) -1987 NLS - USE 6952618 | 2 | Lock control | Låsreglage | 5 |
| 0460 | | 69 52 618 | | 320) 1988- | 2 | Lock control | Låsreglage | 5 |
| 0470 | | 69 52 246 | | 1) | 1 | .Hook | .Krok | |
| 0480 | | 69 52 253 | | 1) | 1 | .Screw | .Skruv | |
| 0490 | | 69 52 261 | | 1) | 1 | .Pin | .Axeltapp | |
| 0500 | | 69 52 279 | | 1) | 1 | .Spring | .Fjäder | |

1. Not as separate spare part. Ej som separat reservdel.
154. Ch. --J7004737
155. Ch. J7004738--
320. Part of: 6953293, 6953285 Ingår i: 6953293, 6953285
500. Also valid for SE 19588. Gäller även för SE 19888.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7 D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX



| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-B10

## Bow 1, 2 and 3
## Convertible

## Båge 1, 2 och 3
## Cabriolet

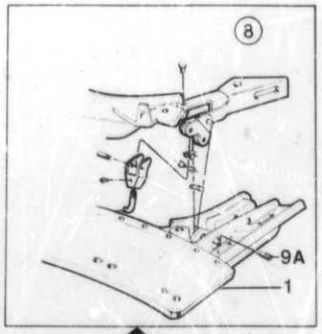

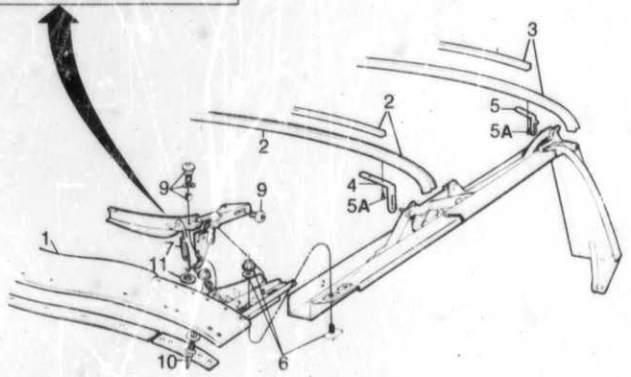
F2561 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0240 | | | | | | | |
| 0510 | 69 52 287 | | 1) | 1 | . Bushing | . Bussning | 5 |
| 0520 | 69 52 295 | | 1) | 1 | . Hook attachment | . Krokfäste | |
| 0530 | | | | | | | |
| 0540 | 69 51 271 | | 320) | 2 | Tensioner | Spänndon | 5 |
| 0550 | 69 52 246 | | 1) | 1 | . Hook | . Krok | |
| 0560 | 69 52 253 | | 1) | 1 | . Screw | . Skruv | |

1. Not as separate spare part. Ej som separat reservdel.
320. Part of: 6953293, 6953285 Ingår i: 6953293, 6953285



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX



| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

Car body

# 5-B12 Rear rail and bow 4 Convertible

Karosskrov

## Bakre skena och båge 4 Cabriolet

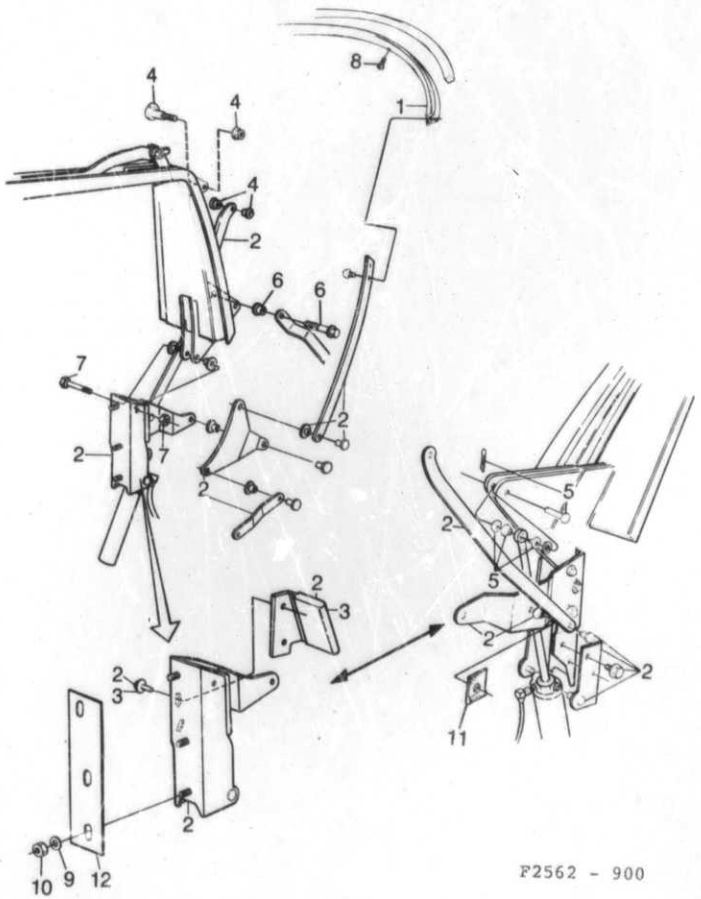


| 0245 | Pos | Part No/Art nr | KS | Notes/Anmärkningar | Qty/Antal | Description | Benämning | SL |
|---|---|---|---|---|---|---|---|---|
| 0020 | | *69 35 539* | | -1986, CAMBRIA NLS | 1 | Roof | Tak | 5 |
| 0025 | | *69 97 639* | | 1987, HAPPICH NLS - USE 6999536, 9161415, 9161423 | 1 | Roof | Tak | 9 |
| 0030 | | *69 52 717* | | 1988-, HAPPICH NLS - USE 6999536 | 1 | Roof | Tak | 9 |
| 0040 | 1 | 69 50 158 | | NUMBER 4 | 1 | .Bow | .Båge | 5 |
| 0060 | 2 | 69 50 513 | | LH | 1 | .Support | .Fästkonsol | 5 |
| 0080 | 2 | 69 50 505 | | RH | 1 | .Support | .Fästkonsol | 5 |
| 0100 | 3 | 69 50 547 | | LH | 1 | .Stop | .Stopp | 5 |
| 0120 | | 69 52 105 | | 1), LH | 1 | ..Stop lug | ..Stoppklack | |
| 0140 | | 69 52 113 | | 1) | 2 | ..Screw | ..Skruv | |
| 0160 | 3 | 69 50 539 | | RH | 1 | .Stop | .Stopp | 5 |
| 0180 | | 69 52 097 | | 1), RH | 1 | ..Stop lug | ..Stoppklack | |
| 0200 | | 69 52 113 | | 1) | 2 | ..Screw | ..Skruv | |
| 0220 | 4 | 69 50 588 | | SIDE RAIL | 2 | .Adjustment screw | .Justerskruv | 5 |
| 0240 | | 69 52 006 | | 1) | 1 | ..Screw | ..Skruv | |
| 0260 | | 69 52 014 | | 1) | 2 | ..Bushing | ..Bussning | 5 |
| 0280 | | 69 52 022 | | 1) | 1 | ..Lock nut | ..Låsmutter | |
| 0300 | 5 | 69 50 596 | | HYDRAULIC CYLINDER | 2 | .Mounting kit | .Monteringssats | 5 |
| 0320 | | 69 52 030 | | 1) | 1 | ..Shaft | ..Axel | 5 |
| 0340 | | 69 52 048 | | 1) | 2 | ..Bushing | ..Bussning | 5 |
| 0360 | | 92 63 393 | | 1) | 2 | ..Seal | ..Tätning | 5 |
| 0372 | | 92 93 523 | | 1) | 1 | ..Lock needle | ..Låsnål | 5 |
| 0375 | | 93 65 917 | | 1) | 1 | ..Rubber bushing | ..Gummibussning | 4 |
| 0380 | 6 | 69 50 612 | | | 2 | .Mounting kit | .Monteringssats | 5 |
| 0400 | | 69 52 063 | | 1) | 1 | ..Screw | ..Skruv | |
| 0420 | | 69 52 071 | | 1) | 1 | ..Bushing | ..Bussning | |
| 0440 | 7 | 69 50 620 | | | 2 | .Mounting kit | .Monteringssats | 5 |
| 0460 | | 69 52 022 | | 1) | 1 | ..Lock nut | ..Låsmutter | |
| 0480 | | 69 52 089 | | 1) | 1 | ..Screw | ..Skruv | |
| 0500 | 8 | *69 51 115* | | 177) NLS - USE 6951669 | 11 | .Special screw | .Snabbskruv | 5 |
| 0520 | 9 | 73 11 772 | | | 6 | .Washer | .Bricka | 5 |
| 0540 | 10 | 79 71 922 | | | 6 | .Nut | .Mutter | 3 |
| 0560 | 11 | 92 63 393 | | | 2 | Seal | Tätning | 5 |
| 0580 | 12 | 69 99 981 | | | X | Adjusting plate | Justerplåt | 5 |

1. Not as separate spare part. Ej som separat reservdel.
177. Ch. -J7004737




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

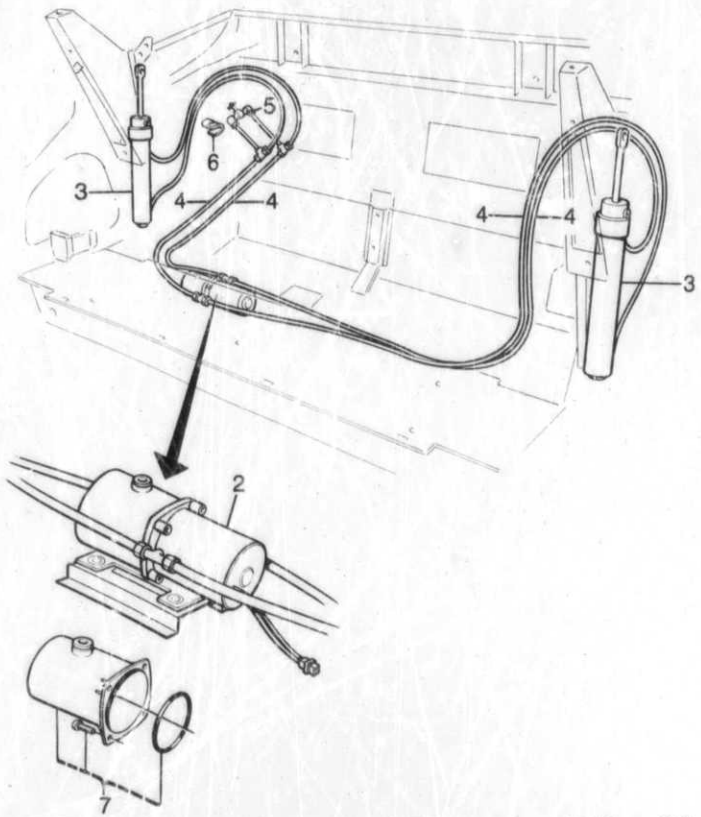


F2563 - 900

| 0248 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 2 | *69 51 156* | | 151) NLS - USE 4153052 | 1 | Engine | Motor | 5 |
| 0020 | 2 | *69 52 808* | | 152) NLS - USE 4153052 | 1 | Engine | Motor | 5 |
| 0030 | 3 | *69 51 164* | | 151) | 2 | Hydraulic cylinder | Hydraulcylinder | 5 |
| 0040 | 3 | *69 52 790* | | 152,266) NLS - USE 6953905 | 2 | Hydraulic cylinder | Hydraulcylinder | 5 |
| 0050 | 3 | 69 53 905 | | 267) | 2 | Hydraulic cylinder | Hydraulcylinder | 5 |
| 0060 | 4 | 69 51 180 | | 151) LH | 1 | Hose | Slang | 5 |
| 0070 | 4 | 69 52 782 | | 152) LH | 1 | Hose | Slang | 5 |
| 0080 | 4 | 69 51 172 | | 151) RH | 1 | Hose | Slang | 5 |
| 0090 | 4 | 69 52 774 | | 152) RH | 1 | Hose | Slang | 5 |
| 0100 | 5 | *69 51 206* | | 151) NLS - USE 6953913 | 1 | Valve | Ventil | 5 |
| 0110 | 5 | 69 52 857 | | 152,266) | 1 | Valve | Ventil | 5 |
| 0120 | 5 | 69 53 913 | | 267) | 1 | Valve | Ventil | 5 |
| 0130 | 6 | 79 51 783 | | | 2 | Clamp | Klammer | 5 |
| 0140 | 7 | 41 53 805 | | | 1 | Repair kit | Reparationssats | 9 |

151. Ch. --J7004330
152. Ch. J7004331--
266. Ch. --K7013903
267. Ch. K7013904--




MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

8A GROUP INDEX

| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

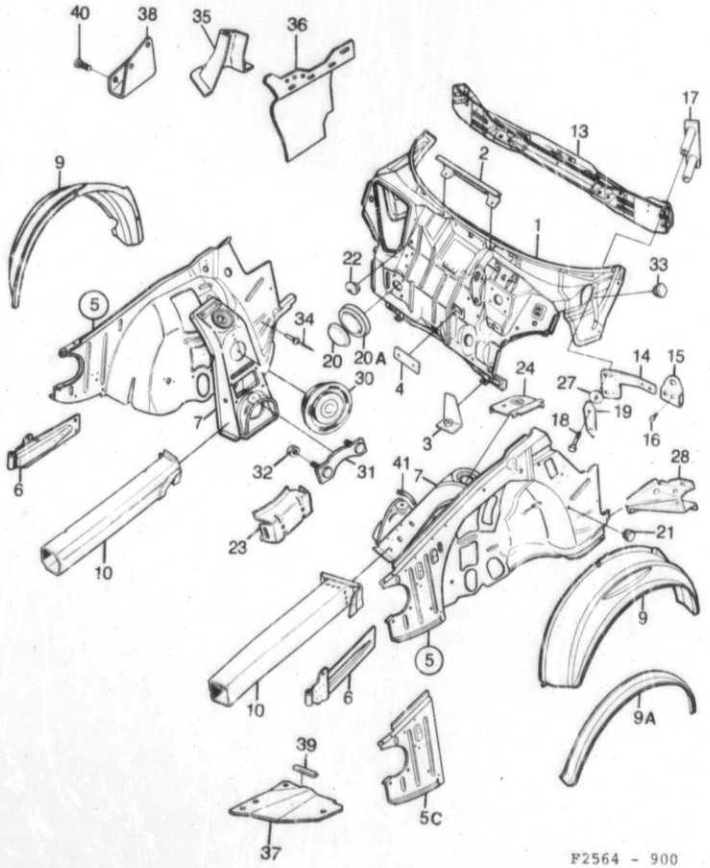


F2564 - 900

| 0250 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 82 74 219 | | | 1 | Plate | Plåt | 6 |
| 0020 | 2 | *82 74 227* | | | 1 | Bracket | Fäste | 5 |
| 0030 | 3 | *82 74 235* | | | 1 | Elbow | Vinkel | 5 |
| 0040 | 4 | *82 74 243* | | | 1 | Washer | Bricka | 5 |
| 0050 | 5 | 69 25 572 | | LH, 1986- | 1 | Wheel housing | Hjulhus | 5 |
| 0060 | 5 | 69 25 580 | | RH, 1986- | 1 | Wheel housing | Hjulhus | 5 |
| 0070 | 5C | 78 74 175 | | 5) LH | 1 | ..Wheel housing | ..Hjulhus | 5 |
| 0080 | 5C | 78 74 183 | | 5) RH | 1 | ..Wheel housing | ..Hjulhus | 5 |
| 0090 | 6 | 69 12 364 | | LH | 1 | .Beam | .Balk | 3 |
| 0100 | 6 | 69 12 380 | | RH | 1 | .Beam | .Balk | 3 |
| 0110 | 7 | 69 25 531 | | LH | 1 | .Bearing bracket | .Lagerkonsol | 5 |
| 0120 | 7 | 69 25 549 | | RH | 1 | .Bearing bracket | .Lagerkonsol | 5 |
| 0130 | 9 | 82 74 359 | | LH | 1 | Wheel housing | Hjulhus | 3 |
| 0140 | 9 | 82 74 367 | | RH | 1 | Wheel housing | Hjulhus | 3 |
| 0150 | 9A | 78 74 142 | | | 2 | .Wheel housing plate | .Hjulhusplåt | 3 |
| 0160 | 10 | 69 12 299 | | LH | 1 | Beam | Balk | 5 |
| 0170 | 10 | 82 74 706 | | RH | 1 | Beam | Balk | 5 |
| 0180 | 13 | 82 61 547 | | | 1 | Beam | Balk | 6 |
| 0190 | 14 | 82 76 057 | | LH US | 1 | Link | Länk | 5 |
| 0200 | 14 | 82 76 065 | | RH US | 1 | Link | Länk | 5 |
| 0210 | 15 | 82 76 107 | | US | 2 | Washer | Bricka | 5 |
| 0220 | 16 | 90 37 883 | | US | 4 | Screw | Skruv | 5 |
| 0230 | 17 | 82 60 747 | | | 2 | Washer | Bricka | 5 |
| 0240 | 18 | 82 62 966 | | | 4 | Hexagon screw | Sexkantsskruv | 5 |
| 0250 | 19 | 82 62 008 | | | 2 | Washer | Bricka | 5 |
| 0260 | 20 | 89 39 761 | | | 1 | Cover | Lock | 5 |
| 0270 | 20A | 94 36 478 | | | 1 | Insulation | Isolering | 6 |
| 0280 | 21 | 82 06 096 | | | 4 | Plug | Plugg | 5 |
| 0290 | 22 | 82 72 494 | | | 1 | Plug | Plugg | 5 |
| 0300 | 23 | 92 90 149 | | | 1 | Bracket | Fäste | 5 |
| 0310 | 24 | 82 88 789 | | LH | 1 | Bracket | Konsol | 4 |
| 0320 | 27 | 92 34 055 | | | 4 | Washer | Bricka | 5 |
| 0330 | 28 | 82 86 395 | | LH | 1 | Bracket | Konsol | 4 |
| 0340 | 28 | 82 86 403 | | RH | 1 | Bracket | Konsol | 4 |
| 0350 | 30 | 82 89 423 | | | 2 | Cover | Tacklock | 5 |
| 0360 | 31 | 82 62 354 | | | 2 | Reinforcement | Förstärkning | 4 |
| 0370 | 32 | 79 67 953 | | | 4 | Nut | Mutter | 5 |
| 0380 | 33 | 85 75 599 | | | 1 | Plug | Plugg | 5 |
| 0390 | 34 | 79 61 642 | | | 4 | Rivet | Nit | 5 |
| 0400 | 35 | 69 33 535 | | LH, CV | 1 | Bracket | Konsol | 5 |
| 0410 | 35 | 69 33 543 | | RH, CV | 1 | Bracket | Konsol | 5 |
| 0420 | 36 | 69 33 634 | | LH, CV | 1 | Reinforcement | Förstärkning | 5 |
| 0430 | 36 | 69 33 642 | | RH, CV | 1 | Reinforcement | Förstärkning | 5 |
| 0440 | 37 | *69 35 126* | | -1986, LH, CV NLS - USE 6996987 | 1 | Reinforcement | Förstärkning | 5 |
| 0450 | 37 | *69 42 023* | | 1987-, LH, CV NLS - USE 6996987 | 1 | Reinforcement | Förstärkning | 5 |
| 0460 | 37 | *69 35 134* | | -1986, RH, CV NLS - USE 6996995 | 1 | Reinforcement | Förstärkning | 5 |
| 0470 | 37 | *69 42 031* | | 1987-, RH, CV NLS - USE 6996995 | 1 | Reinforcement | Förstärkning | 5 |
| 0480 | 38 | 69 35 316 | | CV | 1 | Bracket | Fäste | 5 |
| 0490 | 39 | 82 78 558 | | CV | 1 | Protecting moulding | Skyddslist | 5 |
| 0500 | 40 | 79 22 891 | | CV | 2 | Screw | Skruv | 5 |
| 0510 | 41 | *84 97 471* | | 1986-1988 NLS - USE 8564973 | 1 | Protecting moulding | Skyddslist | 6 |
| 0520 | 41 | 85 64 973 | | 1989-500) | 1 | Protecting moulding | Skyddslist | 6 |

5. Front Främre



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-B18

## *Wheel housing, rear*

## *Hjulhus, bakre*

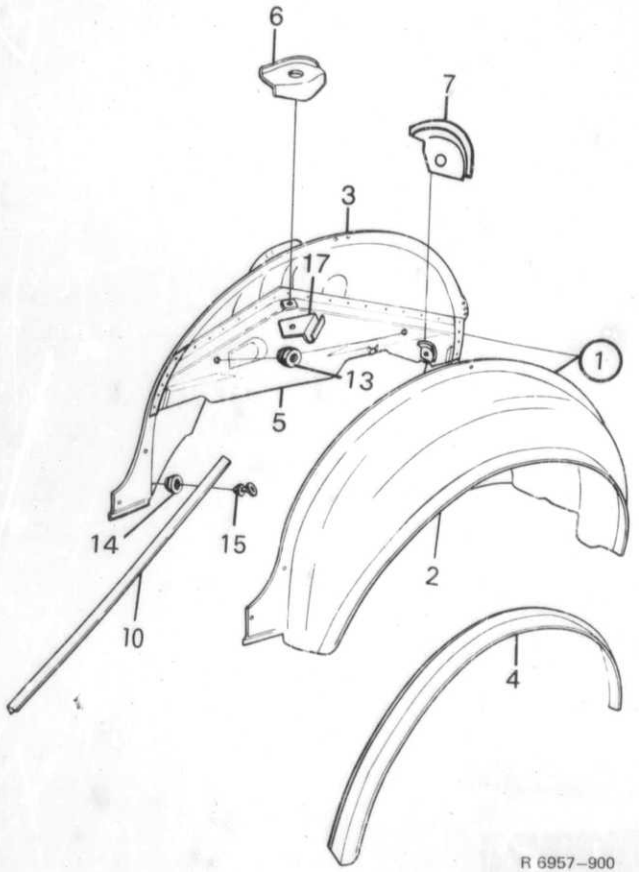


| 0300 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 82 72 197 | | 6) LH | 1 | Wheel housing | Hjulhus | |
| 0020 | 1 | 82 72 205 | | 6) RH | 1 | Wheel housing | Hjulhus | |
| 0030 | 2 | 82 74 631 | | LH | 1 | .Wheel housing | .Hjulhus | 5 |
| 0040 | 2 | 82 74 649 | | RH | 1 | .Wheel housing | .Hjulhus | 5 |
| 0050 | 3 | 69 10 806 | | LH | 1 | .Wheel housing | .Hjulhus | 6 |
| 0060 | 3 | 69 10 814 | | RH | 1 | .Wheel housing | .Hjulhus | 6 |
| 0070 | 4 | 78 74 159 | | LH | 1 | .Wheel housing plate | .Hjulhusplåt | 5 |
| 0080 | 4 | 78 74 167 | | RH | 1 | .Wheel housing plate | .Hjulhusplåt | 5 |
| 0090 | 5 | 82 74 797 | | -1987, LH | 1 | .Wheel house panel | .Hjulhusbalk | 5 |
| 0100 | 5 | 69 42 312 | | 1988-, LH | 1 | .Wheel house panel | .Hjulhusbalk | 5 |
| 0110 | 5 | 82 74 805 | | -1987, RH | 1 | .Wheel house panel | .Hjulhusbalk | 5 |
| 0120 | 5 | 69 42 320 | | 1988-, RH | 1 | .Wheel house panel | .Hjulhusbalk | 5 |
| 0130 | 6 | 92 86 253 | | LH | 1 | ..Reinforcement | ..Förstärkning | 5 |
| 0140 | 6 | 92 86 261 | | RH | 1 | ..Reinforcement | ..Förstärkning | 5 |
| 0150 | 7 | 92 81 973 | | -1987, LH | 1 | ..Bracket | ..Konsol | 5 |
| 0160 | 7 | 69 42 296 | | 1988-, LH | 1 | ..Bracket | ..Konsol | 5 |
| 0170 | 7 | 92 81 981 | | -1987, RH | 1 | ..Bracket | ..Konsol | 5 |
| 0180 | 7 | 69 42 304 | | 1988-, RH | 1 | ..Bracket | ..Konsol | 5 |
| 0190 | 10 | *82 18 661* | | NLS | 1 | Stay | Stag | 5 |
| 0200 | 13 | 84 59 489 | | | 4 | Plug | Plugg | 5 |
| 0210 | 14 | 84 59 497 | | | 2 | Plug | Plugg | 5 |
| 0220 | 15 | 85 07 873 | | | 2 | Plug | Plugg | 5 |
| 0230 | 17 | 92 30 350 | | US | 1 | Protecting plate | Skyddsplåt | 5 |

6. Rear Bakre




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, g sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

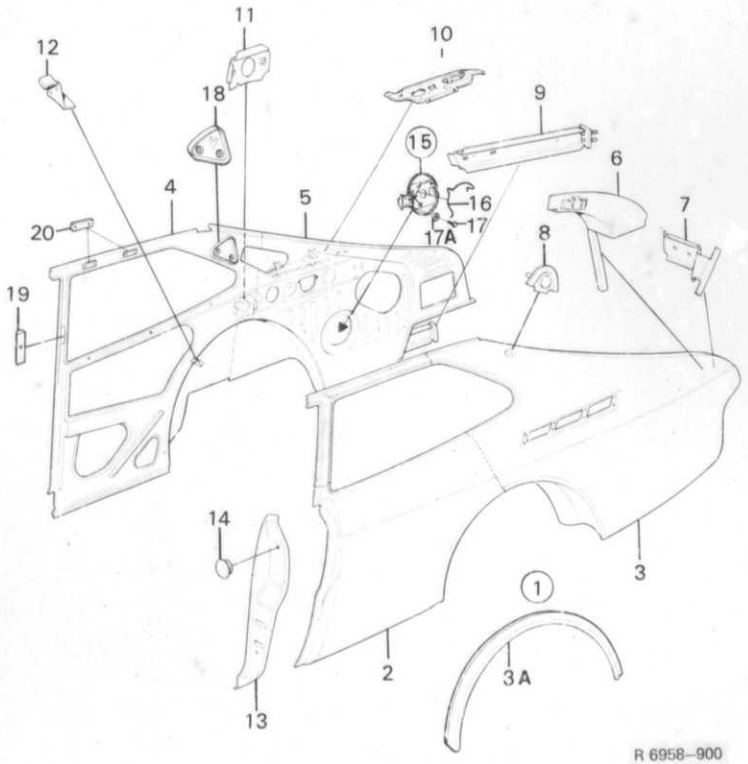


R 6958–900

Car body

# 5-B20

## *Side plate*

*3CK*

Karosskrov

## *Sidoplåt*

*3CK*

| 0350 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *92 29 717* | | LH, ALT 9284035 NLS - USE 9284035 | 1 | Side plate | Sidoplåt | 4 |
| 0020 | 1 | *92 29 725* | | RH, ALT 9284043 NLS - USE 9284043 | 1 | Side plate | Sidoplåt | 4 |
| 0030 | 2 | 92 28 230 | | LH | 1 | .Side plate | .Sidoplåt | |
| 0040 | 2 | 92 28 248 | | RH | 1 | .Side plate | .Sidoplåt | 4 |
| 0050 | 3 | *82 53 155* | | LH, ALT 9284050 NLS - USE 9284050 | 1 | .Side plate | .Sidoplåt | 4 |
| 0060 | 3 | *82 53 163* | | RH, ALT 9284068 NLS - USE 9284068 | 1 | .Side plate | .Sidoplåt | 4 |
| 0070 | 3A | 78 74 118 | | | 2 | .Mudguard repair part | .Skärmdel | 3 |
| 0080 | 4 | *82 56 786* | | -1986, LH | 1 | Plate | Plåt | 4 |
| 0090 | 4 | *82 56 794* | | -1986, RH | 1 | Plate | Plåt | 4 |
| 0100 | 4 | *69 27 412* | | 1987-, LH | 1 | Side plate | Sidoplåt | 6 |
| 0110 | 4 | 69 27 420 | | 1987-, RH | 1 | Side plate | Sidoplåt | 6 |
| 0120 | 5 | 92 89 059 | | LH | 1 | Side plate | Sidoplåt | 6 |
| 0130 | 5 | 82 55 242 | | RH | 1 | Plate | Plåt | 6 |
| 0140 | 6 | 82 85 462 | | LH (8250573) | 1 | Plate | Plåt | 5 |
| 0150 | 6 | 82 85 470 | | RH (8250581) | 1 | Plate | Plåt | 5 |
| 0160 | 7 | *92 23 777* | | LH NLS - USE 9236654 | 1 | Bracket | Fäste | |
| 0170 | 7 | *92 23 785* | | RH NLS - USE 9236662 | 1 | Bracket | Fäste | 5 |
| 0180 | 8 | 82 83 665 | | | 2 | Bracket | Fäste | 5 |
| 0190 | 9 | 92 21 995 | | LH | 1 | Reinforcement | Förstärkning | 6 |
| 0200 | 9 | 92 22 001 | | RH | 1 | Reinforcement | Förstärkning | 6 |
| 0210 | 10 | 69 17 116 | | LH | 1 | Support | Stöd | 6 |
| 0220 | 10 | 69 17 124 | | RH | 1 | Support | Stöd | 6 |
| 0230 | 11 | 82 83 921 | | LH | 1 | Bracket | Fäste | 6 |
| 0240 | 11 | 82 83 939 | | RH | 1 | Bracket | Fäste | 6 |
| 0250 | 12 | *76 01 727* | | (8253296) NLS | 1 | Support | Stöd | |
| 0260 | 13 | 76 00 828 | | LH (8210148) | 1 | End plate | Gavel | 5 |
| 0270 | 13 | 76 00 836 | | RH (8210155) | 1 | End plate | Gavel | 5 |
| 0280 | 14 | 70 38 342 | | | 1 | Plug | Plugg | 5 |
| 0290 | 15 | 82 86 304 | | | 1 | Cover | Täckkock | 5 |
| 0300 | 16 | 82 62 537 | | | 1 | .Spring | .Fjäder | 5 |
| 0310 | 17 | 79 72 508 | | | 2 | Screw | Skruv | 5 |
| 0320 | 17A | 80 73 090 | | | 2 | Washer | Bricka | 5 |
| 0330 | 18 | 76 01 552 | | LH (8250755) | 1 | Reinforcement | Förstärkning | 6 |
| 0340 | 18 | *76 01 560* | | RH (8250763) NLS | 1 | Reinforcement | Förstärkning | 6 |
| 0350 | 19 | *76 01 545* | | (8250730) NLS - USE 4006409 | 2 | Washer | Bricka | 5 |
| 0360 | 20 | 82 09 967 | | | 4 | Attaching profile | Fästprofil | 6 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX



| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

Car body

# 5-B22 Side plate 5CK

Karosskrov

# Sidoplåt 5CK

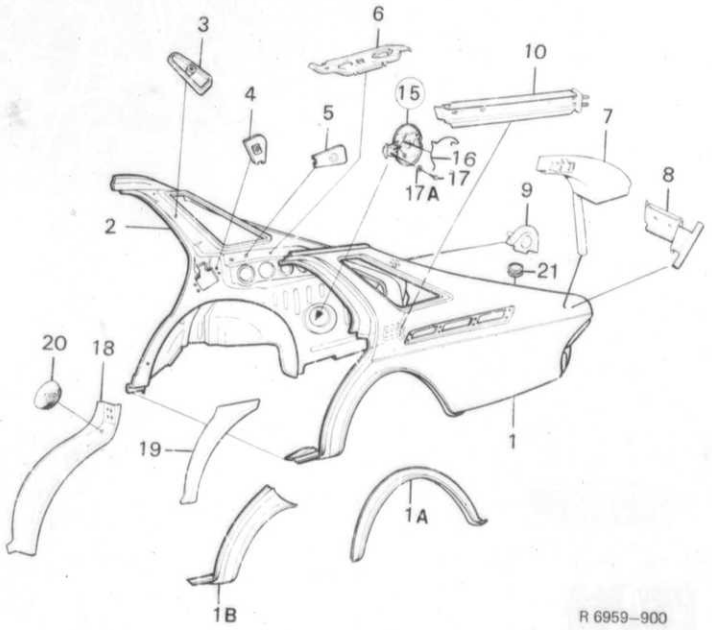


R 6959–900

| 0400 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 92 28 214 | | LH | 1 | Side plate | Sidoplåt | 4 |
| 0020 | 1 | 92 28 222 | | RH | 1 | Side plate | Sidoplåt | 4 |
| 0030 | 1A | 78 74 118 | | | 2 | .Mudguard repair part | .Skärmdel | 3 |
| 0040 | 1B | 78 74 126 | | LH | 1 | .Side part | .Sidodel | 5 |
| 0050 | 1B | 78 74 134 | | RH | 1 | .Side part | .Sidodel | 5 |
| 0060 | 2 | 76 01 792 | | LH (8260119) | 1 | Side plate | Sidoplåt | 6 |
| 0070 | 2 | 76 01 800 | | RH (8260127) | 1 | Side plate | Sidoplåt | 6 |
| 0080 | 3 | 82 60 192 | | | 2 | Bracket | Fäste | 6 |
| 0090 | 4 | 82 60 218 | | LH | 1 | Bracket | Fäste | 6 |
| 0100 | 4 | 82 60 226 | | RH | 1 | Bracket | Fäste | 6 |
| 0110 | 5 | 82 60 234 | | LH | 2 | Bracket | Fäste | 6 |
| 0120 | 5 | 82 60 242 | | RH | 2 | Bracket | Fäste | 6 |
| 0130 | 6 | 92 22 175 | | LH NLS | 1 | Support | Stöd | 6 |
| 0140 | 6 | 92 22 183 | | RH | 1 | Support | Stöd | 6 |
| 0150 | 7 | 82 85 462 | | LH (8250573) | 1 | Plate | Plåt | 5 |
| 0160 | 7 | 82 85 470 | | RH (8250581) | 1 | Plate | Plåt | 5 |
| 0170 | 8 | 92 36 654 | | LH | 1 | Bracket | Fäste | 5 |
| 0180 | 8 | 92 36 662 | | RH | 1 | Bracket | Fäste | 5 |
| 0190 | 9 | 82 83 665 | | | 2 | Bracket | Fäste | 5 |
| 0200 | 10 | 82 87 997 | | LH NLS - USE 9221995 | 1 | Reinforcement | Förstärkning | |
| 0210 | 10 | 82 88 003 | | RH NLS - USE 9222001 | 1 | Reinforcement | Förstärkning | |
| 0220 | 15 | 82 86 304 | | | 1 | Cover | Täcklock | 5 |
| 0230 | 16 | 82 62 537 | | | 1 | .Spring | .Fjäder | 5 |
| 0240 | 17 | 79 72 508 | | | 2 | Screw | Skruv | 5 |
| 0250 | 17A | 80 73 090 | | | 2 | Washer | Bricka | 5 |
| 0260 | 18 | 76 01 370 | | LH (8242497) | 1 | End plate | Gavel | 5 |
| 0270 | 18 | 76 01 388 | | RH (8242505) | 1 | End plate | Gavel | 5 |
| 0280 | 19 | 76 01 354 | | LH (8242414) NLS | 1 | Plate | Plåt | 6 |
| 0290 | 19 | 76 01 362 | | RH (8242422) | 1 | Plate | Plåt | 6 |
| 0300 | 20 | 82 45 888 | | | 2 | Plug | Plugg | |
| 0310 | 21 | 71 63 074 | | | 1 | Plug | Plugg | 5 |




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

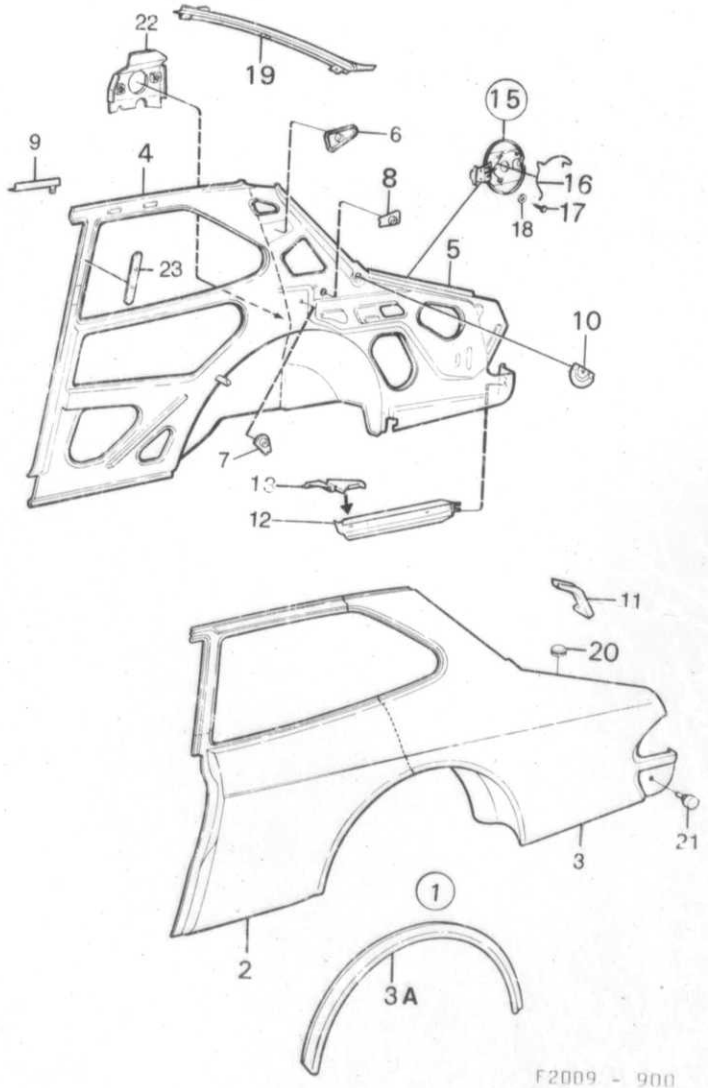


F2009 - 900

Car body

# 5-B24

## *Side plate*

*2SN*

Karosskrov

## *Sidoplåt*

*2SN*

| 0415 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty - Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | *92 92 459* | | -1987, LH NLS - USE 6944367 | 1 | Side plate | Sidoplåt | 4 |
| 0040 | 1 | 69 44 367 | | 1988-, LH | 1 | Side plate | Sidoplåt | 4 |
| 0060 | 1 | *92 92 467* | | -1987, RH NLS - USE 6944375 | 1 | Side plate | Sidoplåt | 4 |
| 0080 | 1 | 69 44 375 | | 1988-, RH | 1 | Side plate | Sidoplåt | 4 |
| 0100 | 2 | *92 92 475* | | -1987, LH NLS - USE 6944383 | 1 | .Side plate | .Sidoplåt | 4 |
| 0120 | 2 | 69 44 383 | | 1988-, LH | 1 | .Side plate | .Sidoplåt | 4 |
| 0140 | 2 | *92 92 483* | | -1987, RH NLS - USE 6944391 | 1 | .Side plate | .Sidoplåt | |
| 0160 | 2 | 69 44 391 | | 1988-, RH | 1 | .Side plate | .Sidoplåt | 4 |
| 0180 | 3 | 92 92 491 | | LH | 1 | .Side plate | .Sidoplåt | 4 |
| 0220 | 3 | 92 92 509 | | RH | 1 | .Side plate | .Sidoplåt | 4 |
| 0250 | 3A | 78 74 118 | | | 1 | .Mudguard repair part | .Skärmdel | 3 |
| 0260 | 4 | 92 92 517 | | LH | 1 | Side plate | Sidoplåt | 6 |
| 0300 | 4 | *92 92 525* | | RH NLS - USE 4006524 | 1 | Side plate | Sidoplåt | 6 |
| 0340 | 5 | 92 92 533 | | LH | 1 | Side plate | Sidoplåt | 6 |
| 0380 | 5 | 92 92 541 | | RH | 1 | Side plate | Sidoplåt | 6 |
| 0420 | 6 | 92 20 997 | | | 2 | Bracket | Fäste | 5 |
| 0440 | 7 | 82 60 218 | | LH | 1 | Bracket | Fäste | 6 |
| 0460 | 7 | 82 60 226 | | RH | 1 | Bracket | Fäste | 6 |
| 0480 | 8 | 82 60 234 | | LH | 2 | Bracket | Fäste | 6 |
| 0500 | 8 | 82 60 242 | | RH | 2 | Bracket | Fäste | 6 |
| 0520 | 9 | *92 22 670* | | LH NLS | 1 | Bracket | Konsol | 6 |
| 0540 | 9 | 92 22 688 | | RH | 1 | Bracket | Konsol | 6 |
| 0560 | 10 | *92 22 696* | | LH NLS | 1 | Bracket | Fäste | 6 |
| 0580 | 10 | 92 22 704 | | RH | 1 | Bracket | Fäste | 6 |
| 0600 | 11 | 92 20 955 | | LH | 1 | Plate | Plåt | 5 |
| 0620 | 11 | 92 20 963 | | RH | 1 | Plate | Plåt | 5 |
| 0640 | 12 | 92 20 930 | | LH | 1 | Reinforcement | Förstärkning | 5 |
| 0660 | 12 | 92 20 948 | | RH | 1 | Reinforcement | Förstärkning | 5 |
| 0680 | 13 | 82 87 286 | | 5) | 1 | Support | Stöd | 6 |
| 0720 | 15 | 82 86 304 | | | 1 | Cover | Täcklock | 5 |
| 0760 | 16 | 82 62 537 | | | 1 | .Spring | .Fjäder | 5 |
| 0780 | 17 | 79 72 508 | | | 2 | Screw | Skruv | 5 |
| 0790 | 18 | 80 73 090 | | | 2 | Washer | Bricka | 5 |
| 0800 | 19 | 69 27 065 | | | 1 | Beam | Balk | 6 |
| 0820 | 20 | 71 63 074 | | | 1 | Plug | Plugg | 5 |
| 0840 | 21 | 92 23 686 | | | 2 | Buffer | Buffert | 5 |
| 0860 | 22 | 82 83 921 | | LH | 1 | Bracket | Fäste | 6 |
| 0880 | 22 | 82 83 939 | | RH | 1 | Bracket | Fäste | 6 |
| 0890 | 23 | 40 06 417 | | | 2 | Washer | Bricka | 5 |

5. Front Främre




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-C02 Side plate Convertible — Sidoplåt Cabriolet

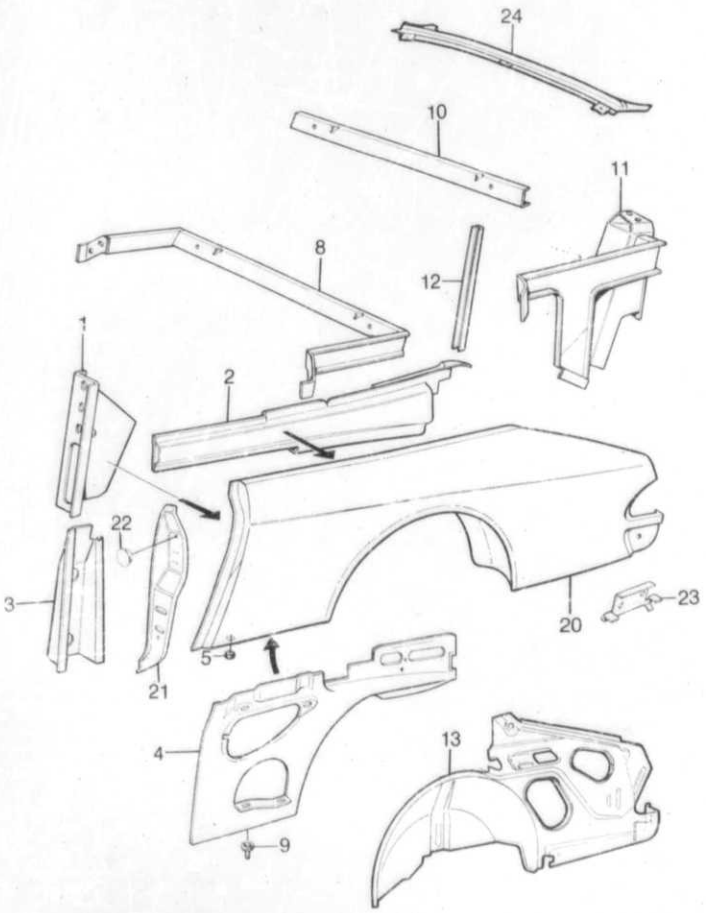


F5584 90085

| 0420 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *69 33 592* | | 6) LH NLS - USE 4153276 | 1 | Reinforcement | Förstärkning | 5 |
| 0020 | 1 | *69 33 618* | | 6) RH NLS - USE 4153284 | 1 | Reinforcement | Förstärkning | 5 |
| 0030 | 2 | *69 33 576* | | LH NLS - USE 4154746 | 1 | Beam | Balk | 6 |
| 0040 | 2 | *69 33 691* | | RH NLS - USE 4154753 | 1 | Beam | Balk | 6 |
| 0050 | 3 | 69 33 584 | | LH | 1 | Reinforcement | Förstärkning | 5 |
| 0060 | 3 | 69 33 600 | | RH | 1 | Reinforcement | Förstärkning | 5 |
| 0070 | 4 | 69 33 568 | | LH | 1 | Side plate | Sidoplåt | 6 |
| 0080 | 4 | 69 33 683 | | RH | 1 | Side plate | Sidoplåt | 6 |
| 0090 | 5 | 82 06 096 | | | 2 | Plug | Plugg | 5 |
| 0100 | 8 | 69 95 435 | | 321) | 1 | Frame | Ram | 6 |
| 0110 | 9 | 71 16 452 | | | 2 | Draining plug | Dräneringsplugg | 5 |
| 0120 | 10 | 69 97 548 | | 322) | 1 | Support | Stöd | 6 |
| 0130 | 11 | 69 97 514 | | 322,226), LH | 1 | Frame | Ram | 6 |
| 0140 | 11 | 69 98 694 | | 227), LH | 1 | Frame | Ram | 6 |
| 0150 | 11 | 69 97 522 | | 322,226), RH | 1 | Frame | Ram | 6 |
| 0160 | 11 | 69 98 702 | | 227), RH | 1 | Frame | Ram | 6 |
| 0170 | 12 | 69 97 563 | | 322) | 2 | Rail | Skena | 6 |
| 0180 | 13 | 41 53 433 | | LH | 1 | Side plate | Sidoplåt | 6 |
| 0190 | 13 | 41 53 441 | | RH | 1 | Side plate | Sidoplåt | 6 |
| 0200 | 20 | *69 97 431* | | LH NLS - USE 4154225 | 1 | Side plate | Sidoplåt | 4 |
| 0210 | 20 | *69 97 449* | | RH NLS - USE 4154233 | 1 | Side plate | Sidoplåt | 4 |
| 0220 | 21 | 76 00 828 | | LH | 1 | End plate | Gavel | 5 |
| 0230 | 21 | 76 00 836 | | RH | 1 | End plate | Gavel | 5 |
| 0240 | 22 | 70 38 342 | | | 2 | Plug | Plugg | 5 |
| 0250 | 23 | 42 95 176 | | | 1 | Support | Fästkonsol | 6 |
| 0260 | 24 | 45 21 340 | | | 1 | Beam | Balk | 6 |

6. Rear **Bakre**
226. Ch. --J7023788.
227. Ch. J7023789--.
321. Ch. --J7005071
322. Ch. J7005072--




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

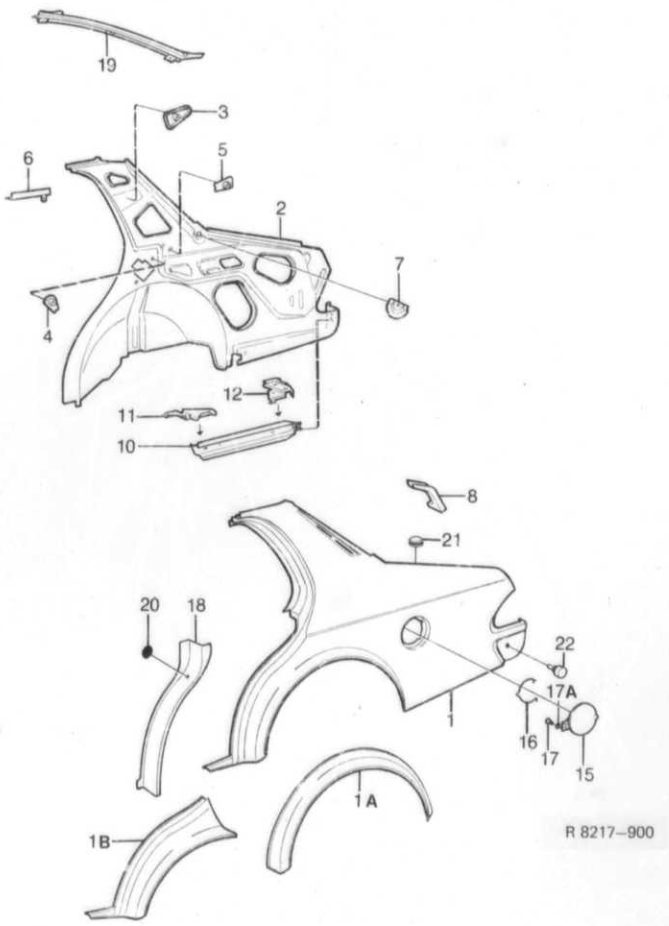


Car body

# 5-C04 *Side plate* *4SN*

Karosskrov

# *Sidoplåt* *4SN*

| 0425 | Pos | Part No/Artikelnr | KS | Notes/Anmärkningar | Qty/Antal | Description | Benämning | SL |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 92 20 898 | | LH | 1 | Side plate | Sidoplåt | 4 |
| 0020 | 1 | 92 20 906 | | RH | 1 | Side plate | Sidoplåt | 4 |
| 0030 | 1A | 78 74 118 | | | 2 | .Mudguard repair part | .Skärmdel | 3 |
| 0040 | 1B | 78 74 126 | | LH | 1 | .Side part | .Sidodel | 5 |
| 0050 | 1B | 78 74 134 | | RH | 1 | .Side part | .Sidodel | 5 |
| 0060 | 2 | 92 89 083 | | LH | 1 | Side plate | Sidoplåt | 6 |
| 0070 | 2 | 92 20 922 | | RH | 1 | Side plate | Sidoplåt | 6 |
| 0080 | 3 | 92 20 997 | | | 2 | Bracket | Fäste | 5 |
| 0090 | 4 | 92 60 218 | | LH | 1 | Bracket | Fäste | 6 |
| 0100 | 4 | 82 60 226 | | RH | 1 | Bracket | Fäste | 6 |
| 0110 | 5 | 82 60 234 | | LH | 2 | Bracket | Fäste | 6 |
| 0120 | 5 | 82 60 242 | | RH | 2 | Bracket | Fäste | 6 |
| 0130 | 6 | *92 22 670* | | LH NLS | 1 | Bracket | Konsol | 6 |
| 0140 | 6 | 92 22 688 | | RH | 1 | Bracket | Konsol | 6 |
| 0150 | 7 | *92 22 696* | | LH NLS | 1 | Bracket | Fäste | 6 |
| 0160 | 7 | 92 22 704 | | RH | 1 | Bracket | Fäste | 6 |
| 0170 | 8 | 92 20 955 | | LH | 1 | Plate | Plåt | 5 |
| 0180 | 8 | 92 20 963 | | RH | 1 | Plate | Plåt | 5 |
| 0190 | 10 | 92 20 930 | | LH | 1 | Reinforcement | Förstärkning | 5 |
| 0200 | 10 | 92 20 948 | | RH | 1 | Reinforcement | Förstärkning | 5 |
| 0210 | 11 | 82 87 286 | | 5) | 1 | Support | Stöd | 6 |
| 0220 | 12 | 92 22 977 | | 6) | 1 | Support | Stöd | 6 |
| 0230 | 15 | 82 86 304 | | | 1 | Cover | Täcklock | 5 |
| 0240 | 16 | 82 62 537 | | | 1 | .Spring | .Fjäder | 5 |
| 0250 | 17 | 79 72 508 | | | 2 | Screw | Skruv | 5 |
| 0260 | 17A | 80 73 090 | | | 2 | Washer | Bricka | 5 |
| 0270 | 18 | 76 01 370 | | LH (8242497) | 1 | End plate | Gavel | 5 |
| 0280 | 18 | 76 01 388 | | RH | 1 | End plate | Gavel | 5 |
| 0290 | 19 | 69 27 065 | | | 1 | Beam | Balk | 6 |
| 0300 | 20 | 82 45 888 | | | 2 | Plug | Plugg | |
| 0310 | 21 | 71 63 074 | | | 1 | Plug | Plugg | 5 |
| 0320 | 22 | 92 23 686 | | | 2 | Buffer | Buffert | 5 |

5. Front Främre
6. Rear Bakre



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| *Complete sets | 5-G18 |

# 5-C06

## Doorpillars etc
## Dörrstolpar etc

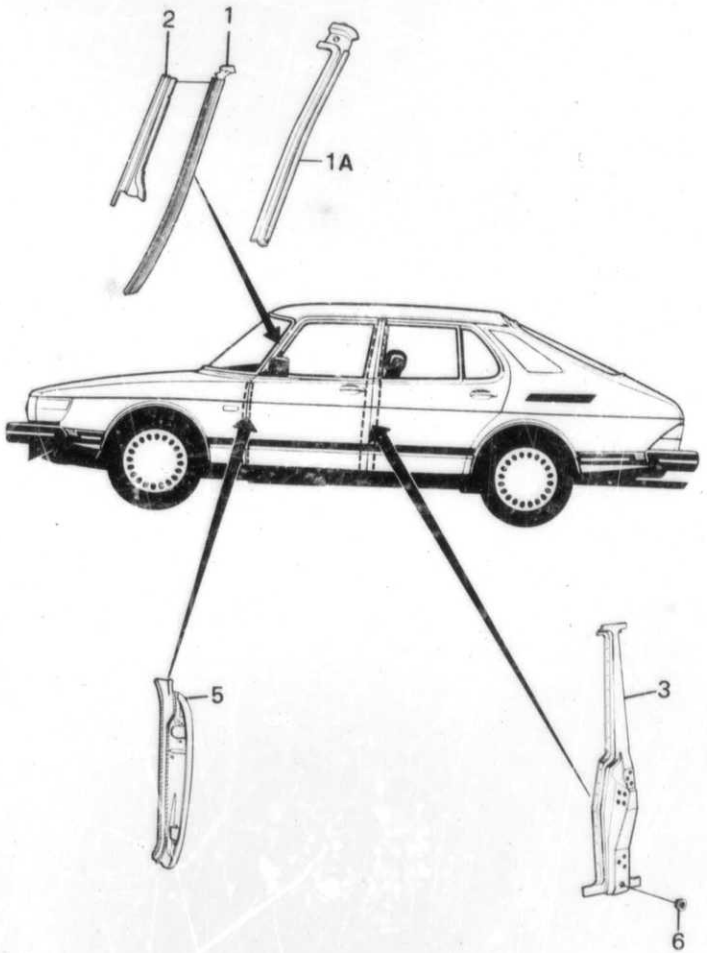


F2566 - 900

| 0450 | Pos | Part No/Art nr | K S | Note:/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *82 74 516* | | 5) LH, -1983 | 1 | Pillar | Stolpe | 6 |
| 0020 | 1 | *69 26 893* | | 5) LH, 1987- | 1 | Pillar | Stolpe | 6 |
| 0030 | 1 | *92 25 467* | | 5) RH, -1986 | 1 | Pillar | Stolpe | 6 |
| 0040 | 1 | *69 26 901* | | 5) RH, 1987- | 1 | Pillar | Stolpe | 6 |
| 0050 | 1A | 69 33 501 | | 5) LH, CV | 1 | Pillar | Stolpe | 6 |
| 0060 | 1A | 69 33 519 | | 5) RH, CV | 1 | Pillar | Stolpe | 6 |
| 0070 | 2 | 92 93 358 | | LH | 1 | .Plate rail | .Plåtskena | 5 |
| 0080 | 2 | 92 93 366 | | RH | 1 | .Plate rail | .Plåtskena | 5 |
| 0090 | 3 | *92 33 297* | | LH 5CK, 4SN NLS - USE 6945570, 8489056, 9542143 | 1 | Pillar | Stolpe | 6 |
| 0100 | 3 | *92 33 305* | | RH 5CK, 4SN NLS - USE 6945588, 9489056, 9542143 | 1 | Pillar | Stolpe | 6 |
| 0110 | 5 | *92 37 132* | | -1986, LH NLS - USE 6926372 | 1 | Support | Stöd | 6 |
| 0120 | 5 | 69 26 372 | | 1987-, LH | 1 | Support | Stöd | 6 |
| 0130 | 5 | *92 37 140* | | -1986, RH NLS - USE 6926380 | 1 | Support | Stöd | 6 |
| 0140 | 5 | 69 26 380 | | 1987-, RH | 1 | Support | Stöd | 6 |
| 0150 | 6 | 84 59 505 | | 5CK, 4SN | 2 | Plug | Plugg | 5 |

5. Front Främre



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-C08

## *Plugs*

## *Pluggar*

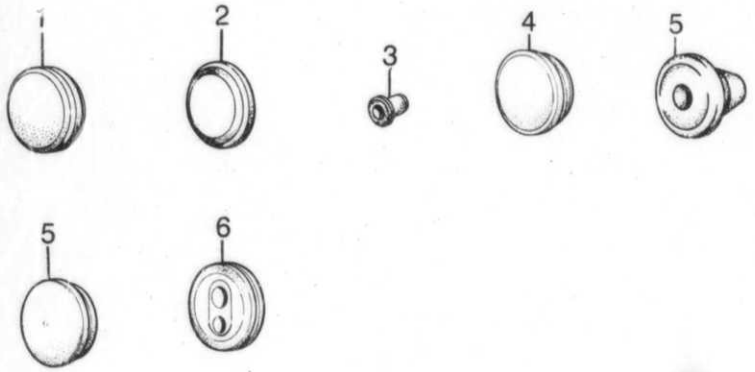


| 0475 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 70 38 342 | | HOLE Ø 22MM | X | Plug | Plugg | 5 |
| 0020 | 2 | 82 06 096 | | HOLE Ø 12MM | X | Plug | Plugg | 5 |
| 0030 | 3 | 82 72 635 | | HOLE Ø 10MM | X | Plug | Plugg | 5 |
| 0040 | 4 | 82 41 325 | | HOLE Ø 22MM | X | Plug | Plugg | 5 |
| 0050 | 5 | 69 30 572 | | HOLE Ø 6MM | X | Plug | Plugg | 5 |
| 0060 | 6 | 75 39 968 | | HOLE Ø 25MM | X | Grommet | Genomföring | 5 |
| 0070 | 7 | 85 75 599 | | HOLE Ø 25MM | X | Plug | Plugg | 5 |

F0500 - 900

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX

| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-C10

## *Hood, hinges and locks*

## *Huv, gångjärn och lås*

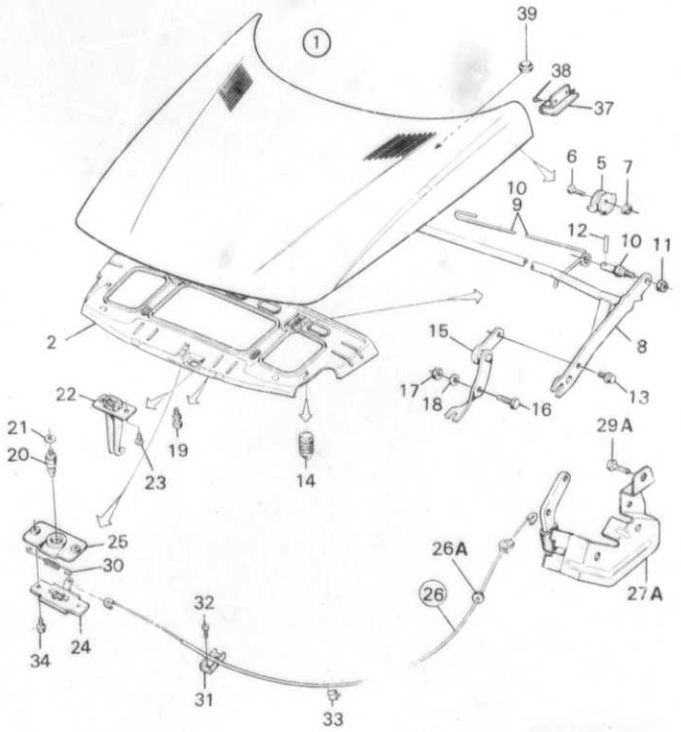


R 6966--900

| 0550 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 69 15 482 | | | 1 | Bonnet | Motorhuv | 3 |
| 0020 | 2 | 69 15 474 | | | 1 | ₁Rib | ₁Spant | 3 |
| 0030 | 5 | 92 37 009 | | | 2 | Roller | Rulle | 5 |
| 0040 | 6 | 79 71 724 | | | 2 | Screw | Skruv | 5 |
| 0050 | 7 | 79 71 658 | | | 2 | Nut | Mutter | 5 |
| 0060 | 8 | 82 67 601 | | | 1 | Bonnet hinge | Huvgångjärn | 3 |
| 0070 | 9 | *82 55 911* | | LH NLS - USE 4009379 | 1 | Spring | Fjäder | 4 |
| 0080 | 9 | *82 55 929* | | RH NLS - USE 4009387 | 1 | Spring | Fjäder | 4 |
| 0090 | 10 | 82 61 299 | | | 2 | Pin | Tapp | 5 |
| 0100 | 11 | 79 67 953 | | | 2 | Nut | Mutter | 5 |
| 0110 | 12 | 79 56 238 | | -1987 | 2 | Pin | Pinne | 5 |
| 0120 | 12 | 73 99 678 | | 1988- | 2 | Pin | Pinne | 5 |
| 0130 | 13 | 79 72 144 | | | 2 | Screw | Skruv | 5 |
| 0140 | 14 | *82 78 343* | | NLS - USE 4304234 | 2 | Buffer | Buffert | 4 |
| 0150 | 15 | 82 66 017 | | LH | 1 | Bonnet hinge | Huvgångjärn | 5 |
| 0160 | 15 | 82 66 025 | | RH | 1 | Bonnet hinge | Huvgångjärn | |
| 0170 | 16 | 80 82 943 | | | 2 | Screw | Skruv | 5 |
| 0180 | 17 | 80 74 288 | | | 2 | Nut | Mutter | 5 |
| 0190 | 18 | 79 33 849 | | | 2 | Washer | Bricka | 5 |
| 0200 | 19 | 82 86 528 | | | 2 | Screw | Skruv | 5 |
| 0210 | 20 | *69 15 508* | | NLS - USE 4009627 | 1 | Lock pin | Låstapp | 4 |
| 0220 | 21 | *73 11 764* | | NLS - USE 7399835 | 1 | Washer | Bricka | 5 |
| 0230 | 22 | *82 58 972* | | 44) NLS - USE 6926950 | 1 | Catch | Hake | 3 |
| 0240 | 22 | 69 26 950 | | 45) | 1 | Catch | Hake | 3 |
| 0250 | 23 | 80 59 552 | | | 2 | Screw | Skruv | 5 |
| 0260 | 24 | *82 74 946* | | NLS - USE 4008421 | 1 | Lock | Lås | 3 |
| 0270 | 25 | *82 61 364* | | NLS - USE 4008439 | 1 | Plate | Plåt | 5 |
| 0280 | 26 | *69 21 126* | | 140) NLS - USE 6945521 | 1 | Control cable | Reglagewire | 2 |
| 0290 | 26 | *69 43 716* | | 141,204) NLS - USE 6945521 | 1 | Control cable | Reglagewire | 2 |
| 0300 | 26 | 69 45 521 | | 205) | 1 | Control cable | Reglagewire | 2 |
| 0310 | 26A | 79 61 311 | | | 1 | ₁Bushing | ₁Bussning | 5 |
| 0320 | 27A | 82 78 509 | | | 1 | Control arm | Reglagearm | 5 |
| 0330 | 29A | 79 22 891 | | | 3 | Screw | Skruv | 5 |
| 0340 | 30 | 82 75 877 | | | 1 | Spring | Fjäder | 5 |
| 0350 | 31 | *82 72 791* | | -1986 NLS - USE 9264508 | 1 | Cap | Överfall | 5 |
| 0360 | 31 | 92 64 508 | | 1987- | 1 | Cap | Överfall | 5 |
| 0370 | 32 | 79 22 909 | | -1987 | 2 | Screw | Skruv | 5 |
| 0380 | 32 | 79 22 446 | | 1988- | 2 | Screw | Skruv | 5 |
| 0390 | 33 | 79 33 443 | | | 1 | Clip | Clips | 5 |
| 0400 | 34 | 82 86 296 | | | 2 | Screw | Skruv | 5 |
| 0410 | 37 | 92 33 487 | | RH | 1 | Guard | Skydd | 4 |
| 0420 | 37 | 92 33 495 | | LH | 1 | Guard | Skydd | 4 |
| 0430 | 38 | 79 61 642 | | | 4 | Rivet | Nit | 5 |
| 0440 | 39 | 82 06 096 | | | 1 | Plug | Plugg | 5 |

44. Ch. --G2019017, --G3016427, --G7019766.
45. Ch. G2019018--, G3016428--, G7019767--.
140. Ch. --H2023064, --H3020703.
141. Ch. H2023065--, H3020704--.
204. Ch. --J3021349, --J7028786.
205. Ch. J3021350--, J7028787--.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-C12

## *Front member*
## *Grille*

## *Frontbalk*
## *Grill*

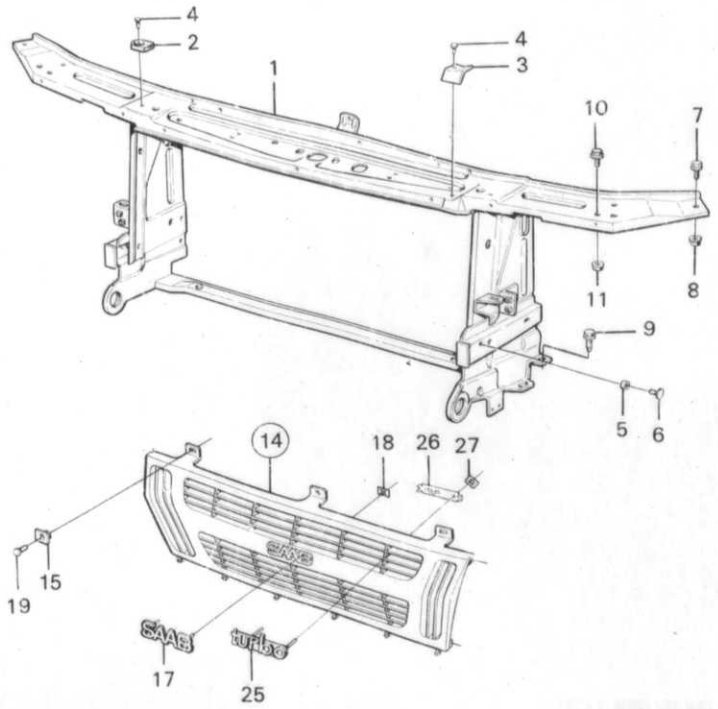


| 0600 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *69 13 537* | | -1986 NLS - USE 6937254, 6937262 | 1 | Beam | Balk | 3 |
| 0010 | | | | | | | | |
| 0020 | 1 | 69 37 254 | | 1987- | 1 | Beam | Balk | 3 |
| 0030 | 2 | 82 74 185 | | | 2 | Buffer | Buffert | 5 |
| 0040 | 3 | 82 66 926 | | | 1 | Protection | Skydd | 6 |
| 0050 | 4 | 82 85 900 | | | 3 | Rivet | Nit | |
| 0060 | 5 | 82 68 518 | | | 2 | Spacer tube | Distansrör | 4 |
| 0070 | 6 | 82 35 178 | | | 2 | Pop rivet | Popnit | 5 |
| 0080 | 7 | 79 67 938 | | | 6 | Screw | Skruv | 5 |
| 0090 | 8 | 79 67 953 | | | 6 | Nut | Mutter | 5 |
| 0100 | 9 | 92 92 699 | | (7398605) | 4 | Screw | Skruv | 5 |
| 0110 | 9 | 92 92 699 | | (7398605) WITHOUT OIL-COOLER | 3 | Screw | Skruv | 5 |
| 0120 | | | | | | | | |
| 0130 | 10 | 79 69 223 | | -1987 | 4 | Screw | Skruv | 5 |
| 0140 | 10 | 79 65 544 | | 1988- | 4 | Screw | Skruv | 5 |
| 0150 | 11 | 79 71 658 | | | 4 | Nut | Mutter | 5 |
| 0160 | 14 | 92 89 612 | | | 1 | Grille | Grill | 3 |
| 0170 | 14 | 92 91 592 | | CD | 1 | Grille | Grill | |
| 0180 | 14 | 92 91 592 | | TURBO | 1 | Grille | Grill | |
| 0190 | 14 | 69 26 778 | | 43) CHROME PLATED | 1 | Grille | Grill | 3 |
| 0200 | 14 | 69 26 406 | | 43) PAINTED | 1 | Grille | Grill | 3 |
| 0210 | 15 | *82 56 273* | | -1988 NLS - USE 4089454 | 3 | Clip | Clips | 3 |
| 0220 | 15 | 40 89 454 | | 1989-,500) | 3 | Clip | Clips | 3 |
| 0230 | 17 | 92 89 869 | | | 1 | Emblem | Emblem | 3 |
| 0240 | 17 | *69 26 414* | | 43) NLS - USE 6956593 | 1 | Emblem | Emblem | 3 |
| 0250 | 18 | 79 19 483 | | | 2 | Clip | Clips | 5 |
| 0260 | 19 | 79 22 354 | | | 3 | Screw | Skruv | 5 |
| 0270 | 25 | 82 69 706 | | -1986 | 1 | Emblem | Emblem | 3 |
| 0280 | 25 | 69 26 786 | | 1987-, NOT CA | 1 | Emblem | Emblem | 3 |
| 0290 | 26 | 82 73 815 | | | 3 | Plate | Platta | |
| 0300 | 27 | 79 19 483 | | | 6 | Clip | Clips | 5 |

43. For cars with integrated bumpers  För bilar med integrerade stötfångare
500. Also valid for SE 1988B.  Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-C14

## *Front fender*

## *Framskärm*

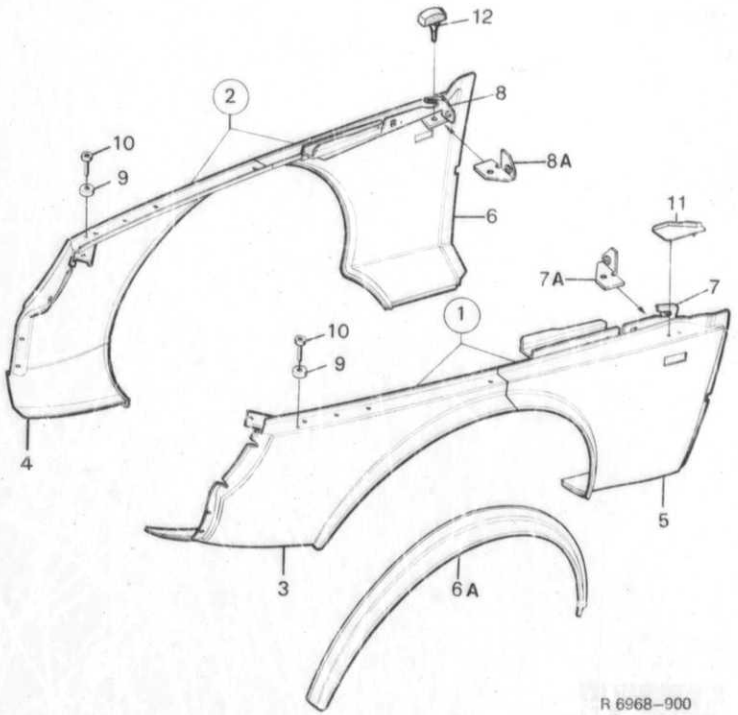


R 6968–900

| 0650 | Pos | Part No/Art.nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 69 21 530 | | LH | 1 | Front fender | Framskärm | 3 |
| 0020 | 2 | 69 21 548 | | RH | 1 | Front fender | Framskärm | 3 |
| 0030 | 3 | 82 74 854 | | 5) LH | 1 | .Fender | .Skärm | |
| 0040 | 4 | 82 74 862 | | 5) RH | 1 | .Fender | .Skärm | |
| 0050 | 5 | 69 21 555 | | 6) LH | 1 | .Front fender | .Framskärm | 5 |
| 0060 | 6 | 69 21 563 | | 6) RH | 1 | .Front fender | .Framskärm | 5 |
| 0070 | 6A | 78 74 118 | | | 2 | .Mudguard repair part | .Skärmdel | 3 |
| 0080 | 7 | 92 34 378 | | LH | 1 | .Rail | .Skena | 4 |
| 0090 | 7A | 92 93 473 | | LH | 1 | ..Attaching plate | ..Fästplåt | 4 |
| 0100 | 8 | 92 34 386 | | RH | 1 | .Rail | .Skena | 4 |
| 0110 | 8A | 92 93 481 | | RH | 1 | ..Attaching plate | ..Fästplåt | 4 |
| 0120 | 9 | 82 67 395 | | | 4 | Buffer | Buffert | 5 |
| 0130 | 10 | *82 15 683* | | NLS - USE 8287566 | 4 | Rivet | Nit | |
| 0140 | 11 | 92 33 503 | | LH | 1 | Guard | Skydd | 3 |
| 0150 | 11 | 92 33 511 | | RH | 1 | Guard | Skydd | 3 |
| 0160 | 12 | 82 11 294 | | | 2 | Buffer | Buffert | 3 |

5. Front Framre
6. Rear Bakre



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-C16

## Doors, hinges, window regulators, 3CK, 2SN

## Dörrar, gångjärn,fönsterhissar, 3CK, 2SN

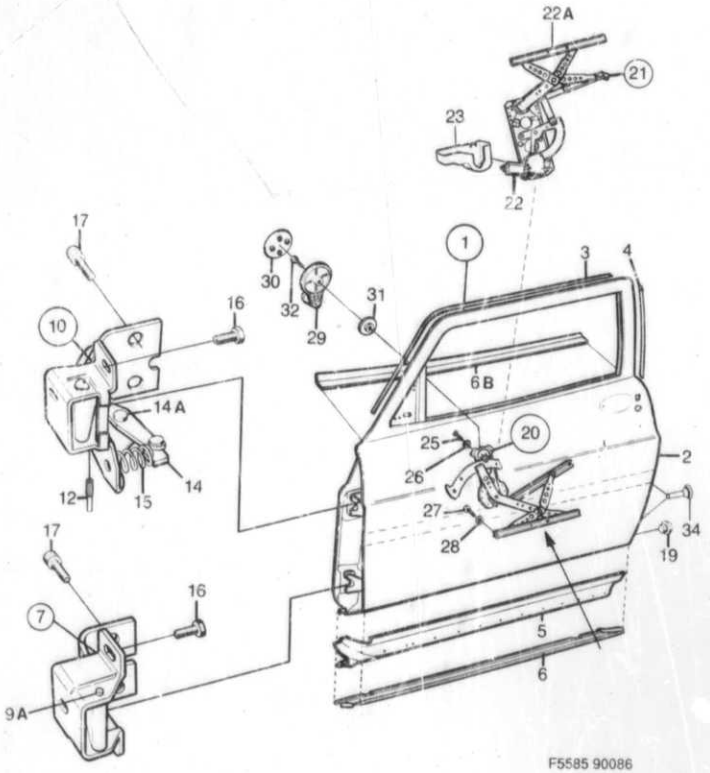


F5585 90086

| 0700 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 69 25 754 | | LH | 1 | Door | Dörr | 4 |
| 0020 | 1 | 69 25 762 | | RH | 1 | Door | Dörr | |
| 0030 | 2 | 82 88 714 | | LH | 1 | .Door shell | .Dörrplåt | 3 |
| 0040 | 2 | 82 88 722 | | RH | 1 | .Door shell | .Dörrplåt | 3 |
| 0050 | 3 | 82 24 917 | | -1988, LH | 1 | .Plate rail | .Plåtskena | 5 |
| 0060 | 3 | 69 27 198 | | 1989-, LH | 1 | .Plate rail | .Plåtskena | 5 |
| 0070 | 3 | *82 24 925* | | -1988, RH NLS - USE 6927222 | 1 | .Plate rail | .Plåtskena | 5 |
| 0080 | 3 | 69 27 222 | | 1989-, RH | 1 | .Plate rail | .Plåtskena | 5 |
| 0090 | 4 | 82 24 933 | | | 2 | .Plate rail | .Plåtskena | 5 |
| 0100 | 5 | 82 17 432 | | 333) LH | 1 | .Door shell | .Dörrplåt | 5 |
| 0110 | 5 | 82 17 440 | | 333) RH | 1 | .Door shell | .Dörrplåt | 5 |
| 0120 | 6 | 82 15 899 | | LH | 1 | .Door shell | .Dörrplåt | 5 |
| 0130 | 6 | 82 15 907 | | RH | 1 | .Door shell | .Dörrplåt | 5 |
| 0140 | 6B | 78 73 508 | | 329,332) LH | 1 | .Door shell | .Dörrplåt | 4 |
| 0150 | 6B | 78 73 516 | | 329,332) RH | 1 | .Door shell | .Dörrplåt | 4 |
| 0160 | 7 | 69 12 570 | | LH | 1 | Hinge | Gångjärn | 5 |
| 0170 | 7 | 69 12 588 | | RH | 1 | Hinge | Gångjärn | 5 |
| 0180 | 9A | 82 43 578 | | | 2 | .Pin | .Tapp | 3 |
| 0190 | 10 | 69 12 596 | | LH | 1 | Hinge | Gångjärn | 5 |
| 0200 | 10 | 69 12 604 | | RH | 1 | Hinge | Gångjärn | 5 |
| 0210 | 12 | 82 06 393 | | | 2 | .Pin | .Pinne | 3 |
| 0220 | 14 | 82 07 573 | | LH | 1 | .Lever | .Hävarm | 6 |
| 0230 | 14 | 82 07 581 | | RH | 1 | .Lever | .Hävarm | 6 |
| 0240 | 14A | 82 06 476 | | | 2 | .Pin | .Tapp | 3 |
| 0250 | 15 | 82 06 369 | | | 2 | .Compression spring | .Tryckfjäder | 5 |
| 0260 | 16 | 79 75 212 | | | 12 | Screw | Skruv | 5 |
| 0270 | 17 | *69 13 784* | | NLS - USE 693 7361 | 12 | Screw | Skruv | 5 |
| 0280 | 19 | 70 38 342 | | | 2 | Plug | Plugg | 5 |
| 0790 | 20 | 92 92 855 | | LH | 1 | Window lift | Fönsterhiss | 5 |
| 0300 | 20 | 92 92 863 | | RH | 1 | Window lift | Fönsterhiss | 5 |
| 0310 | 21 | 92 87 038 | | 305) LH | 1 | Window lift | Fönsterhiss | 5 |
| 0320 | 21 | 92 87 046 | | 305) RH | 1 | Window lift | Fönsterhiss | 5 |
| 0330 | 22 | 85 67 638 | | LH | 1 | .Engine | .Motor | 5 |
| 0340 | 22 | 85 67 646 | | RH | 1 | .Engine | .Motor | 5 |
| 0350 | 22A | 92 87 012 | | 305) LH | 1 | .Window lift | .Fönsterhiss | 5 |
| 0360 | 22A | 92 87 020 | | 305) RH | 1 | .Window lift | .Fönsterhiss | 5 |
| 0370 | 23 | 85 98 047 | | LH | 1 | .Protection | .Skydd | 5 |
| 0380 | 23 | 85 98 260 | | RH | 1 | .Protection | .Skydd | 5 |
| 0390 | 25 | 79 72 441 | | 183) | 8 | Screw | Skruv | 5 |
| 0400 | 25 | 80 19 895 | | 184) | 8 | Screw | Skruv | 5 |
| 0410 | 26 | 79 16 497 | | 183) | 2 | Washer | Bricka | 5 |
| 0420 | 26 | 73 99 819 | | 184) | 8 | Washer | Bricka | 5 |
| 0430 | 28 | 79 10 540 | | | 4 | Washer | Bricka | 5 |
| 0440 | 29 | 94 45 651 | | | 2 | Crank | Vev | 4 |
| 0450 | 30 | 84 76 301 | | | 2 | Cover | Lock | 4 |
| 0460 | 31 | 94 45 917 | | FOR UPHOLSTERY PLATE | 2 | Spacer washer | Distansbricka | 5 |
| 0470 | 32 | 98 35 737 | | | 2 | Screw | Skruv | 5 |
| 0480 | 34 | 70 35 801 | | 306) | 4 | Buffer | Buffert | 3 |
| 0490 | | 85 47 192 | | C, 2SN, 3CK | X | Window lift | Fönsterhiss | 5 |
| 0500 | | | | See page 8A-165, 5-G22 | | | | |
| 0510 | | 85 47 218 | | I, 2SN, 3CK | X | Window lift kit | Fönsterhissats | 6 |
| 0520 | | | | See page 8A-165, 5-G22 | | | | |
| 0530 | | 82 09 694 | | See page 8A-161, 5-G18 | X | Repair kit | Reparationssats | 6 |

183. Ch. -J3002288, -J7005612
184. Ch. J3002289-, J7005613 -
305. Electrically operated Elektrisk manövrering
306. Without central lock Utan centrallås
329. Upper Övre
332. Outer part Ytterdel
333. Inner section Innerdel



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-C18

## Doors, hinges, window regulators, CV

## Dörrar, gångjärn,fönsterhissar, CV

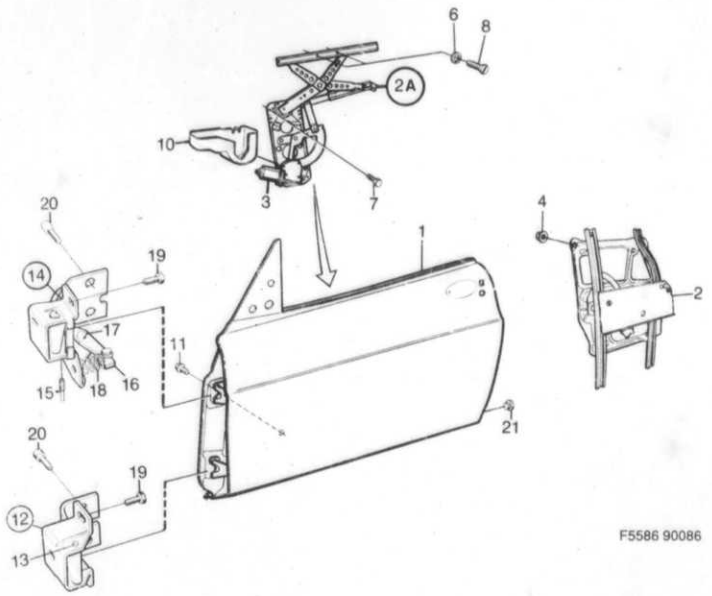


F5586 90086

| 0740 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 69 33 477 | | 275) LH | 1 | Door | Dörr | 4 |
| 0020 | 1 | 69 99 551 | | 275) LH | 1 | Door | Dörr | 4 |
| 0030 | 1 | 69 33 485 | | 275) RH | 1 | Door | Dörr | 4 |
| 0040 | 1 | 69 99 569 | | 276) RH | 1 | Door | Dörr | 4 |
| 0050 | 2 | 69 29 756 | | 6) LH | 1 | Window lift | Fönsterhiss | 5 |
| 0060 | 2 | 69 29 764 | | 6) RH | 1 | Window lift | Fönsterhiss | 5 |
| 0070 | 2A | *69 34 632* | | 83) LH NLS - USE 6997571 | 1 | Window lift | Fönsterhiss | 5 |
| 0080 | 2A | 69 97 571 | | 84) LH | 1 | Window lift | Fönsterhiss | 5 |
| 0090 | 2A | *69 34 640* | | 83) RH NLS - USE 6997589 | 1 | Window lift | Fönsterhiss | 5 |
| 0100 | 2A | 69 97 589 | | 84) RH | 1 | Window lift | Fönsterhiss | 5 |
| 0110 | 3 | 85 67 638 | | LH, -1986 | 1 | .Engine | .Motor | 5 |
| 0120 | 3 | 85 67 646 | | RH, -1986 | 1 | .Engine | .Motor | 5 |
| 0130 | 4 | 79 67 953 | | | 12 | Nut | Mutter | 5 |
| 0140 | 6 | 79 10 540 | | | 4 | Washer | Bricka | 5 |
| 0150 | 7 | 79 72 441 | | | 10 | Screw | Skruv | 5 |
| 0160 | 8 | 80 59 537 | | | 4 | Screw | Skruv | 5 |
| 0170 | 10 | 85 98 047 | | LH | 1 | Protection | Skydd | 5 |
| 0180 | 10 | 85 98 260 | | RH | 1 | Protection | Skydd | 5 |
| 0190 | 11 | 79 69 223 | | 276) GLASS ADJUSTMENT | 2 | Screw | Skruv | 5 |
| 0200 | 12 | 69 12 570 | | LH | 1 | Hinge | Gångjärn | 5 |
| 0210 | 12 | 69 12 586 | | RH | 1 | Hinge | Gångjärn | 5 |
| 0220 | 13 | 82 43 578 | | | 2 | .Pin | .Tapp | 3 |
| 0230 | 14 | 69 12 596 | | LH | 1 | Hinge | Gångjärn | 5 |
| 0240 | 14 | 69 12 604 | | RH | 1 | Hinge | Gångjärn | 5 |
| 0250 | 15 | 82 06 393 | | | 2 | .Pin | .Pinne | 3 |
| 0260 | 16 | 82 07 573 | | LH | 1 | .Lever | .Hävarm | 6 |
| 0270 | 16 | 82 07 581 | | RH | 1 | .Lever | .Hävarm | 6 |
| 0280 | 17 | 82 06 476 | | | 2 | .Pin | .Tapp | 3 |
| 0290 | 18 | 82 06 369 | | | 2 | .Compression spring | .Tryckfjäder | 5 |
| 0300 | 19 | 79 75 212 | | | 12 | Screw | Skruv | 5 |
| 0310 | 20 | *69 13 784* | | NLS - USE 6937361 | 12 | Screw | Skruv | 5 |
| 0320 | 21 | 70 38 342 | | | 2 | Plug | Plugg | 5 |

6. Rear Bakre
83. Ch. --H7016250
84. Ch. H7016251--
275. Ch. --K7021109
276. Ch. K7021110--



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |


Doors, trunk lid

# 5-C20

## Doors, hinges, window regulators,front,5CK, 4SN

Dörrar, bagagerumslucka

## Dörrar, gångjärn,fönster-hissar, fram, 5CK, 4SN

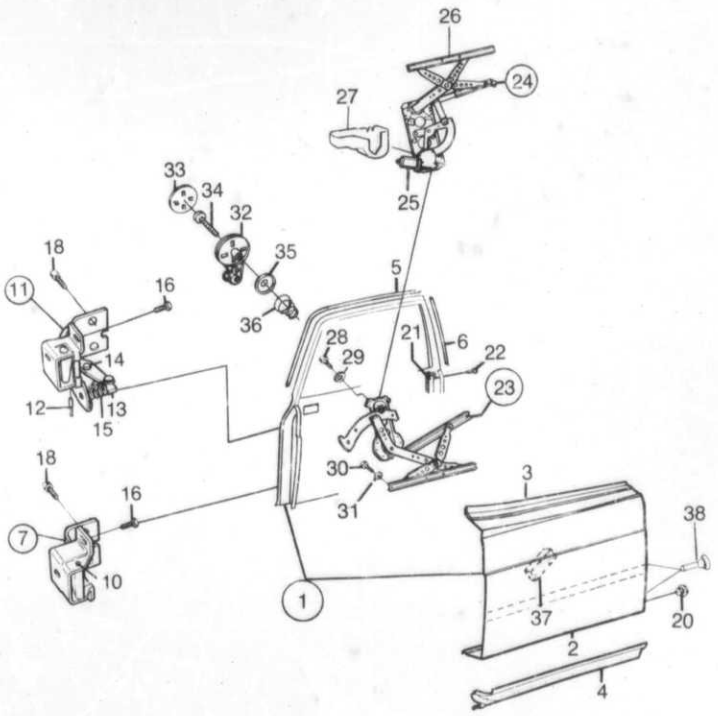


F5587 90086

| 0750 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 69 25 739 | | 5) LH | 1 | Door | Dörr | 4 |
| 0020 | 1 | 69 25 747 | | 5) RH | 1 | Door | Dörr | 4 |
| 0030 | 1 | 69 95 013 | | 5) CD, LH (9299074) | 1 | Door | Dörr | |
| 0040 | 1 | 69 95 021 | | 5) CD, RH (9299082) | 1 | Door | Dörr | |
| 0050 | 2 | 82 88 763 | | 3) LH | 1 | .Door shell | .Dörrplåt | 3 |
| 0060 | 2 | 82 88 771 | | 3) RH | 1 | .Door shell | .Dörrplåt | 3 |
| 0070 | 3 | 78 73 508 | | 3,329,332) LH | 1 | .Door shell | .Dörrplåt | 4 |
| 0080 | 3 | 78 73 516 | | 3,329,332) RH | 1 | .Door shell | .Dörrplåt | 4 |
| 0090 | 4 | 82 17 432 | | 3) LH | 1 | .Door shell | .Dörrplåt | 5 |
| 0100 | 4 | 82 17 440 | | 3) RH | 1 | .Door shell | .Dörrplåt | 5 |
| 0110 | 5 | 82 24 917 | | 3) -1988, LH | 1 | .Plate rail | .Plåtskena | 5 |
| 0120 | 5 | 69 27 198 | | 3) 1989-, LH | 1 | .Plate rail | .Plåtskena | 5 |
| 0130 | 5 | *82 24 925* | | 3) -1988, RH NLS - USE 6927222 | 1 | .Plate rail | .Plåtskena | 5 |
| 0140 | 5 | 69 27 222 | | 3) 1989-, RH | 1 | .Plate rail | .Plåtskena | 5 |
| 0150 | 6 | 82 24 933 | | 3) | 2 | .Plate rail | .Plåtskena | 5 |
| 0160 | 7 | 69 12 570 | | LH | 1 | Hinge | Gångjärn | 5 |
| 0170 | 7 | 69 12 588 | | RH | 1 | Hinge | Gångjärn | 5 |
| 0180 | 10 | 82 43 578 | | | 2 | .Pin | .Tapp | 3 |
| 0190 | 11 | 69 12 596 | | LH | 1 | Hinge | Gångjärn | 5 |
| 0200 | 11 | 69 12 604 | | RH | 1 | Hinge | Gångjärn | 5 |
| 0210 | 12 | 82 06 393 | | | 2 | .Pin | .Pinne | 3 |
| 0220 | 13 | 82 07 573 | | LH | 1 | .Lever | .Hävarm | 6 |
| 0230 | 13 | 82 07 581 | | RH | 1 | .Lever | .Hävarm | 6 |
| 0240 | 14 | 82 06 476 | | | 2 | .Pin | .Tapp | 3 |
| 0250 | 15 | 82 06 369 | | | 2 | .Compression spring | .Tryckfjäder | 5 |
| 0260 | 16 | 79 75 212 | | | 12 | Screw | Skruv | 5 |
| 0270 | 18 | *69 13 784* | | NLS - USE 6937361 | 12 | Screw | Skruv | 5 |
| 0280 | 20 | 70 38 342 | | | 4 | Plug | Plugg | 5 |
| 0290 | 21 | 76 03 103 | | LH | 1 | Profile | Profil | 6 |
| 0300 | 21 | 76 03 111 | | RH | 1 | Profile | Profil | 6 |
| 0310 | 22 | 79 71 294 | | | 4 | Screw | Skruv | 5 |
| 0320 | 23 | 82 74 037 | | LH | 1 | Window lift | Fönsterhiss | 5 |
| 0330 | 23 | 82 74 045 | | RH | 1 | Window lift | Fönsterhiss | 5 |
| 0340 | 24 | 92 23 694 | | 305) LH | 1 | Window lift | Fönsterhiss | 6 |
| 0350 | 24 | 92 23 702 | | 305) RH | 1 | Window lift | Fönsterhiss | 6 |
| 0360 | 25 | 85 67 638 | | LH | 1 | .Engine | .Motor | 5 |
| 0370 | 25 | 85 67 646 | | RH | 1 | .Engine | .Motor | 5 |
| 0380 | 26 | 92 26 838 | | 305) LH | 1 | .Window lift | .Fönsterhiss | 5 |
| 0390 | 26 | 92 26 846 | | 305) RH | 1 | .Window lift | .Fönsterhiss | 5 |
| 0400 | 27 | 85 98 047 | | LH | 2 | .Protection | .Skydd | 5 |
| 0410 | 27 | 85 98 260 | | RH | 2 | .Protection | .Skydd | 5 |
| 0420 | 28 | 79 72 441 | | 68) | 8 | Screw | Skruv | 5 |
| 0430 | 28 | 79 72 441 | | 69,183) | 10 | Screw | Skruv | 5 |
| 0440 | 28 | 80 19 895 | | 184) | 10 | Screw | Skruv | 5 |
| 0450 | 29 | 73 99 819 | | 184) | 10 | Washer | Bricka | 5 |
| 0460 | 30 | 80 59 529 | | | 4 | Screw | Skruv | 5 |
| 0470 | 31 | 79 10 540 | | | 4 | Washer | Bricka | 5 |
| 0480 | 32 | 94 45 651 | | | 2 | Crank | Vev | 4 |
| 0490 | 33 | 84 76 301 | | | 2 | Cover | Lock | 4 |
| 0500 | 34 | 98 35 737 | | | 2 | Screw | Skruv | 5 |
| 0510 | 35 | 94 45 917 | | | 2 | Spacer washer | Distansbricka | 5 |
| 0520 | 36 | 71 52 796 | | | 2 | Spring | Fjäder | 5 |
| 0530 | 37 | *94 58 876* | | RHD NLS | 2 | Spacer | Distans | 5 |

3. Not CD  Ej CD
5. Front  Främre
68. Ch. -G3017403, -G7025162, -G2022654
69. Ch. G3017404-, G7025163-, G2022655-
183. Ch. -J3002288, -J7005612
184. Ch. J3002289-, J7005613-
305. Electrically operated  Elektrisk manövrering
329. Upper  Övre
332. Outer part  Ytterdel



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-C22

## *Doors, hinges, window regulators,front,5CK, 4SN*

## *Dörrar, gångjärn,fönsterhissar, fram, 5CK, 4SN*

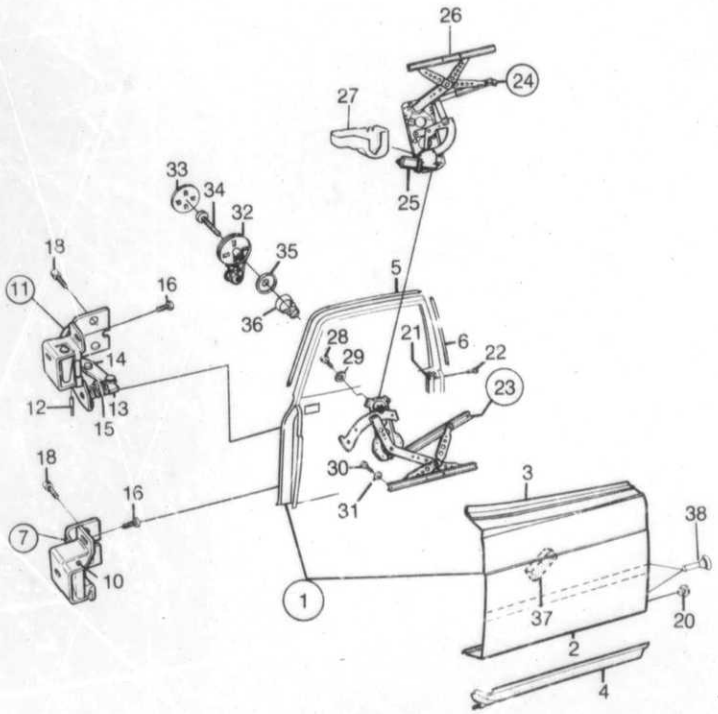


F5587 90086

| 0750 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0540 | 38 | 70 35 801 | | 306) | 4 | Buffer | Buffert | 3 |
| 0550 | | 85 47 200 | | C, 4SN, 5CK | X | Window lift | Fönsterhiss | 5 |
| 0560 | | | | See page 8A-165, 5-G22 | | | | |
| 0570 | | 85 47 226 | | I, 4SN, 5CK | X | Window lift kit | Fönsterhissats | 6 |
| 0580 | | | | See page 8A-165, 5-G22 | | | | |
| 0590 | | 82 09 694 | | See page 8A-161, 5-G18 | X | Repair kit | Reparationssats | 6 |

306. Without central lock Utan centrallås




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

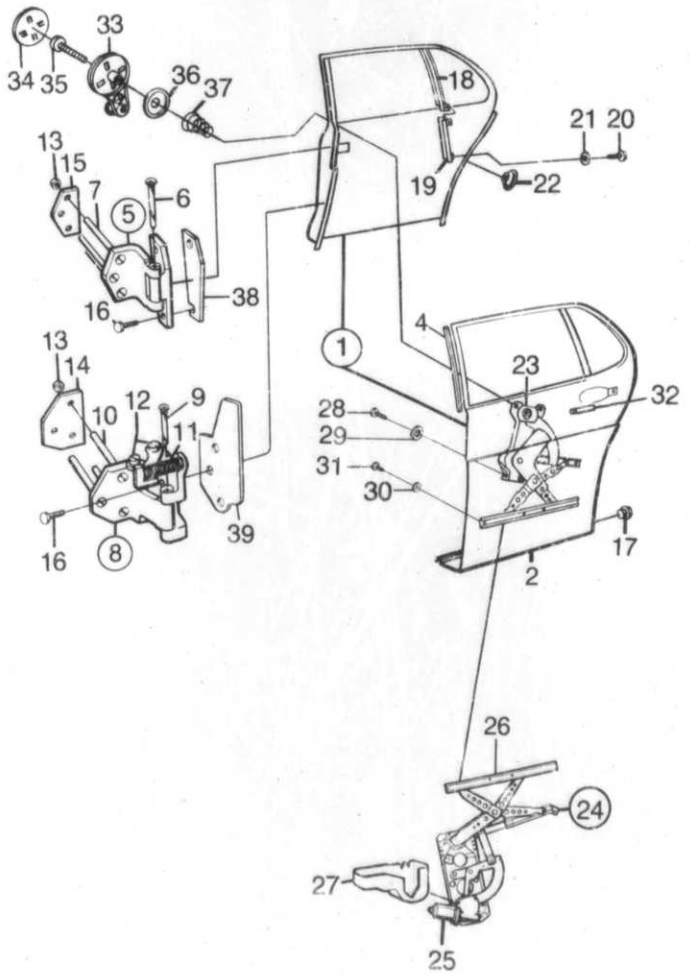


F5588 90086

Doors, trunk lid

# 5-C24

## Doors, hinges, window regulators, rear, 5CK,4SN

Dörrar, bagagerumslucka

## Dörrar, gångjärn,fönster-hissar, bak, 5CK, 4SN

| 0755 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 69 25 853 | | LH | 1 | Door | Dörr | |
| 0020 | 1 | 69 25 861 | | RH | 1 | Door | Dörr | |
| 0030 | 1 | 92 99 173 | | LH, CD | 1 | Door | Dörr | 7 |
| 0040 | 1 | 92 99 181 | | RH, CD | 1 | Door | Dörr | 7 |
| 0050 | 2 | 82 86 833 | | 3) LH | 1 | .Outer panel | .Ytterplåt | 5 |
| 0060 | 2 | 82 86 841 | | 3) RH | 1 | .Outer panel | .Ytterplåt | 5 |
| 0070 | 4 | 82 24 933 | | 3) | 2 | .Plate rail | .Plåtskena | 5 |
| 0080 | 5 | 92 81 775 | | LH | 1 | Hinge | Gångjärn | 4 |
| 0090 | 5 | 92 81 783 | | RH | 1 | Hinge | Gångjärn | 4 |
| 0100 | 6 | *82 05 858* | | NLS - USE 8243576 | 2 | .Pin | .Tapp | |
| 0110 | 7 | *82 41 093* | | NLS | 6 | .Screw | .Skruv | |
| 0120 | 8 | 92 82 971 | | LH | 1 | Hinge | Gångjärn | 4 |
| 0130 | 8 | 92 82 939 | | RH | 1 | Hinge | Gångjärn | 4 |
| 0140 | 9 | 82 43 578 | | | 2 | .Pin | .Tapp | 3 |
| 0150 | 10 | *82 41 101* | | NLS | 6 | .Screw | .Skruv | |
| 0160 | 11 | *82 43 651* | | NLS | 1 | .Spring | .Fjäder | |
| 0170 | 12 | *82 43 669* | | NLS | 4 | .Knurled bolt | .Räffelbult | |
| 0180 | 13 | 79 64 711 | | | 12 | Nut | Mutter | 3 |
| 0190 | 14 | *82 41 291* | | NLS | 2 | Washer | Bricka | |
| 0200 | 15 | *82 41 119* | | NLS | 2 | Washer | Bricka | |
| 0210 | 16 | 92 30 277 | | | 10 | Screw | Skruv | 5 |
| 0220 | 17 | 70 38 342 | | | 1 | Plug | Plugg | 5 |
| 0230 | 18 | 76 15 495 | | LH | 1 | Profile | Profil | 5 |
| 0240 | 18 | 76 15 511 | | RH | 1 | Profile | Profil | 5 |
| 0250 | 19 | 76 15 545 | | LH | 1 | Profile | Profil | 5 |
| 0260 | 19 | 76 15 552 | | RH | 1 | Profile | Profil | 5 |
| 0270 | 20 | 79 34 433 | | | 4 | Screw | Skruv | 5 |
| 0280 | 21 | 70 88 073 | | -1986 | 4 | Washer | Bricka | 5 |
| 0290 | 21 | 70 60 999 | | 1987- | 4 | Washer | Bricka | 5 |
| 0300 | 22 | 82 04 760 | | | 2 | Plug | Plugg | 5 |
| 0310 | 23 | 92 30 632 | | LH | 1 | Window lift | Fönsterhiss | 5 |
| 0320 | 23 | 92 30 640 | | RH | 1 | Window lift | Fönsterhiss | 5 |
| 0330 | 24 | *92 89 372* | | 305) LH NLS - USE 8567638, 9289356 | 1 | Window lift | Fönsterhiss | 5 |
| 0340 | 24 | *92 89 380* | | 305) RH NLS - USE 8567646, 9289364 | 1 | Window lift | Fönsterhiss | 5 |
| 0350 | 25 | 85 67 638 | | LH | 1 | .Engine | .Motor | 5 |
| 0360 | 25 | 85 67 646 | | RH | 1 | .Engine | .Motor | 5 |
| 0370 | 26 | 92 89 356 | | 305) LH | 1 | .Window lift | .Fönsterhiss | 5 |
| 0380 | 26 | 92 89 364 | | 305) RH | 1 | .Window lift | .Fönsterhiss | 5 |
| 0390 | 27 | 85 98 047 | | LH | 2 | .Protection | .Skydd | 5 |
| 0400 | 27 | 85 98 260 | | RH | 2 | .Protection | .Skydd | 5 |
| 0410 | 28 | 79 72 441 | | 68) | 8 | Screw | Skruv | 5 |
| 0420 | 28 | 79 72 441 | | 69,183) | 10 | Screw | Skruv | 5 |
| 0430 | 28 | 80 19 895 | | 184) | 10 | Screw | Skruv | 5 |
| 0440 | 29 | 73 99 819 | | 184) | 10 | Washer | Bricka | 5 |
| 0450 | 30 | 79 10 540 | | | 4 | Washer | Bricka | 5 |
| 0460 | 31 | 80 59 529 | | | 4 | Screw | Skruv | 5 |
| 0470 | 32 | *92 81 346* | | NLS | 2 | Protection | Skydd | 3 |
| 0480 | 33 | 94 45 651 | | | 2 | Crank | Vev | 4 |
| 0490 | 34 | 84 76 301 | | | 2 | Cover | Lock | 4 |
| 0500 | 35 | 98 35 737 | | | 2 | Screw | Skruv | 5 |
| 0510 | 36 | 94 45 917 | | | 2 | Spacer washer | Distansbricka | 5 |
| 0520 | 37 | 71 52 796 | | | 2 | Spring | Fjäder | 5 |
| 0530 | 38 | 92 84 381 | | | 2 | Spacer | Mellanlägg | 3 |

3. Not CD Ej CD
68. Ch. -G3017403, -G7025162, -G2022654
69. Ch. G3017404-, G7025163-, G2022655-
183. Ch. -J3002288, -J7005612
184. Ch. J3002289-, J7005613-
305. Electrically operated Elektrisk manövrering



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-D02

## *Doors, hinges, window regulators, rear, 5CK,4SN*

## *Dörrar, gångjärn,fönsterhissar, bak, 5CK, 4SN*

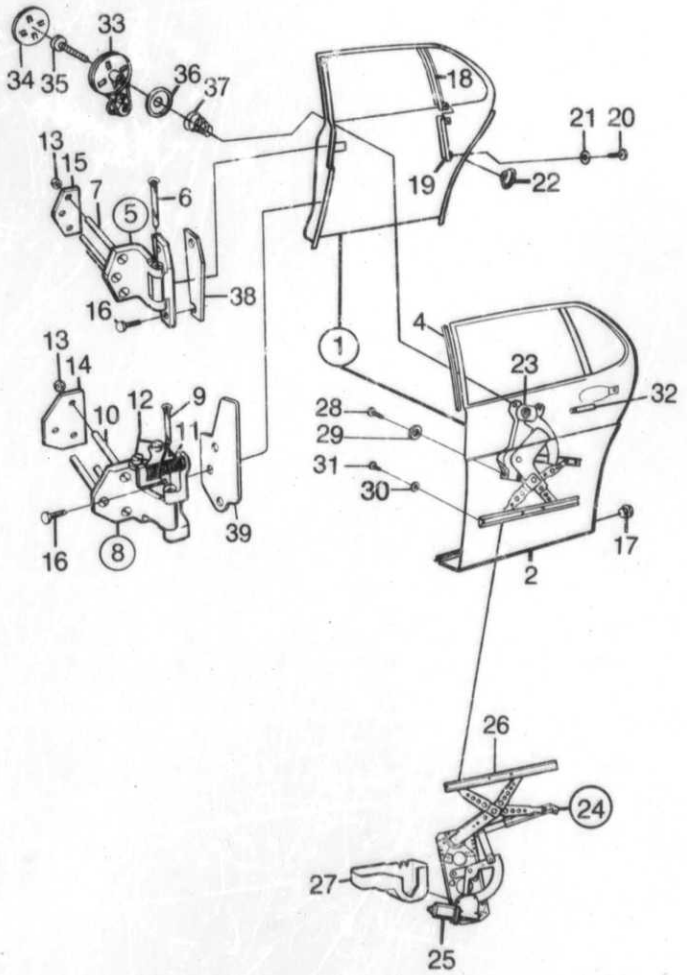


F5588 90086

| 0755 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0540 | 39 | 92 84 373 | | | 2 | Spacer | Mellanlägg | 3 |
| 0550 | | 85 47 242 | | FOR CARS WITH C ALSO USE KIT 85 47 234 | X | Window lift kit | Fönsterhissats | 6 |
| 0560 | | | | See page 8A-165, 5-G22 | | | | |
| 0570 | | | | | | | | |
| 0580 | | *85 47 234* | | C, (FOR KIT 8547242) | X | Additional kit | Tilläggssats | 5 |
| 0590 | | | | See page 8A-165, 5-G22 | | | | |
| 0590 | | | | NLS - USE 8547069 | | | | |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX

| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-D04

## Door lock
## 3CK, 2SN

## Dörrlås
## 3CK, 2SN

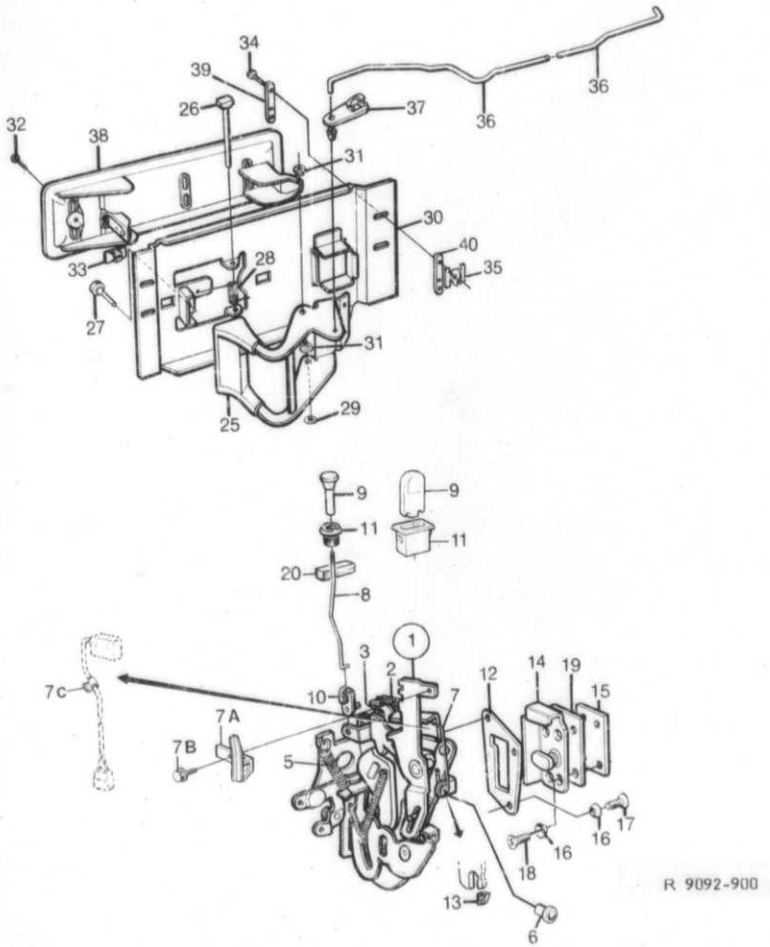


| 0760 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 92 93 895 | | LH | 1 | Door lock | Dörrlås | 4 |
| 0020 | 1 | *92 93 879* | | LH, RHD NLS - USE 6949135 | 1 | Door lock | Dörrlås | 4 |
| 0030 | 1 | 92 93 887 | | RH | 1 | Door lock | Dörrlås | 4 |
| 0040 | 1 | *92 93 903* | | RH, RHD NLS - USE 6949168 | 1 | Door lock | Dörrlås | 4 |
| 0050 | 1 | 69 54 218 | | 60) LH | 1 | Door lock | Dörrlås | 4 |
| 0060 | 1 | 69 38 088 | | 60) RH | 1 | Door lock | Dörrlås | 4 |
| 0070 | 2 | 82 36 606 | | | 2 | .Spring | .Fjäder | 5 |
| 0080 | 3 | 84 57 566 | | | 2 | .Spring | .Fjäder | 5 |
| 0090 | 4 | 92 81 114 | | | 4 | Tension spring | Dragfjäder | 5 |
| 0100 | 5 | 92 85 602 | | | 2 | .Spring | .Fjäder | 5 |
| 0110 | 6 | 84 51 825 | | | 2 | .Bushing | .Bussning | 4 |
| 0120 | 7 | 84 51 817 | | | 2 | .Link | .Länk | 5 |
| 0130 | 7A | 82 56 372 | | LH | 1 | .Adjusting link | .Justeringslänk | 5 |
| 0140 | 7A | 82 56 380 | | RH | 1 | .Adjusting link | .Justeringslänk | 5 |
| 0150 | 7B | 92 24 544 | | | 2 | .Screw | .Skruv | 5 |
| 0160 | 7C | 95 60 364 | | 60) | 2 | Clip | Clips | 5 |
| 0170 | 8 | 84 58 713 | | LH | 1 | Rod | Stång | 5 |
| 0180 | 8 | *84 58 721* | | RH NLS | 1 | Rod | Stång | 5 |
| 0190 | 8 | 84 51 478 | | LH | 1 | Rod | Stång | 5 |
| 0200 | 8 | 84 51 486 | | RH | 1 | Rod | Stång | 5 |
| 0210 | 8 | 69 34 517 | | LH, CV | 1 | Rod | Stång | 5 |
| 0220 | 8 | 69 34 525 | | RH, CV | 1 | Rod | Stång | 5 |
| 0230 | 9 | 94 46 022 | | | 2 | Button | Knapp | 3 |
| 0240 | 9 | 97 62 030 | | 277) CV | 2 | Lock button | Låsknapp | 5 |
| 0250 | 9 | 40 37 735 | | 278) CV | 2 | Lock button | Låsknapp | 5 |
| 0260 | 10 | 84 61 675 | | | 2 | Clip | Clips | 5 |
| 0270 | 11 | 97 31 498 | | (9719691) | 2 | Bushing | Bussning | 4 |
| 0280 | 11 | 97 62 048 | | -1986, CV | 2 | Bushing | Bussning | 4 |
| 0290 | 11 | 98 84 636 | | 1987-,279) CV | 2 | Bushing | Bussning | 4 |
| 0300 | 11 | 91 60 003 | | 280) CV | 2 | Bushing | Bussning | 4 |
| 0310 | 12 | 84 56 006 | | | 2 | Spacer | Mellanlägg | |
| 0320 | 13 | 84 56 808 | | | 2 | Absorber | Dämpare | 4 |
| 0330 | 14 | 82 62 750 | | LH | 1 | End plate | Slutbleck | 5 |
| 0340 | 14 | 82 62 768 | | RH | 1 | End plate | Slutbleck | 5 |
| 0350 | 15 | 82 41 994 | | | 2 | Nut plate | Mutterplatta | 5 |
| 0360 | 16 | 79 34 136 | | | 14 | Washer | Bricka | 5 |
| 0370 | 17 | 80 55 980 | | | 6 | Screw | Skruv | 5 |
| 0380 | 18 | 79 37 964 | | | 8 | Screw | Skruv | 5 |
| 0390 | 19 | 84 74 553 | | | 4 | Spacer | Mellanlägg | 4 |
| 0400 | 20 | 92 31 671 | | | 2 | Spacer | Mellanlägg | 4 |
| 0410 | 25 | 94 03 056 | | LH | 1 | Handle | Handtag | 5 |
| 0420 | 25 | 94 03 064 | | RH | 1 | Handle | Handtag | 5 |
| 0430 | 26 | 94 03 072 | | | 2 | Shaft | Axel | 5 |
| 0440 | 27 | 94 25 174 | | | 2 | Plug | Plugg | 5 |
| 0450 | 28 | 94 03 080 | | LH | 1 | Spring | Fjäder | 5 |
| 0460 | 28 | 94 18 793 | | RH | 1 | Spring | Fjäder | 5 |
| 0470 | 29 | 79 68 076 | | | 2 | Retaining ring | Spårring | 5 |
| 0480 | 30 | 94 07 453 | | LH | 1 | Bracket | Konsol | 6 |
| 0490 | 30 | 94 07 461 | | RH | 1 | Bracket | Konsol | 6 |
| 0500 | 31 | 94 11 232 | | | 4 | Bushing | Bussning | 4 |
| 0510 | 32 | 79 67 561 | | | 2 | Screw | Skruv | 5 |
| 0520 | 33 | 84 54 258 | | | 2 | Clip | Clips | 5 |
| 0530 | 34 | *79 22 289* | | NLS - USE 7965684 | 8 | Screw | Skruv | 5 |
| 0540 | 35 | 86 01 916 | | | 8 | Clip nut | Clipsmutter | 3 |
| 0550 | 36 | 82 77 519 | | LH | 1 | Rod | Stång | 5 |
| 0560 | 36 | 82 77 527 | | RH | 1 | Rod | Stång | 5 |

60. For cars with automatic belts  För bilar med passivt bälte
277. Ch. -K7018265
278. Ch. K7018266-
279. Ch. -K7021422
280. Ch. K7021423-



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX



| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-D06

## *Door lock*
## *3CK, 2SN*

## *Dörrlås*
## *3CK, 2SN*

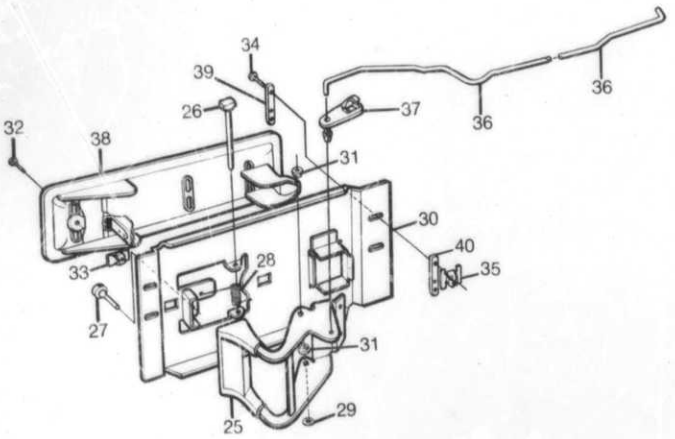

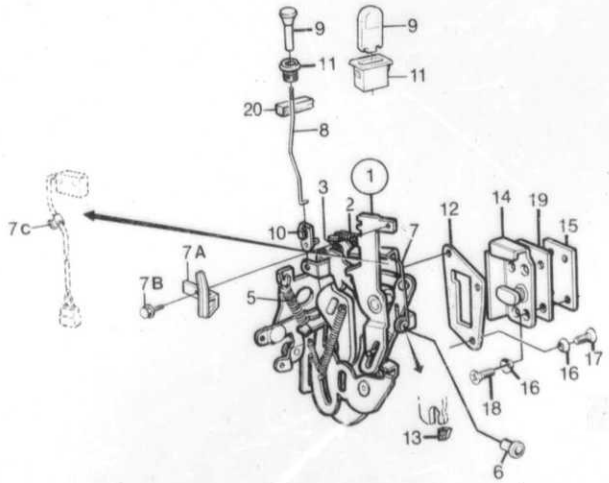
R 9092-900

| 0760 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0570 | 36 | 69 97 134 | | LH, CV | 1 | Pull rod | Dragstång | 5 |
| 0580 | 36 | 69 97 142 | | RH, CV | 1 | Pull rod | Dragstång | 5 |
| 0590 | 37 | 84 53 755 | | | 4 | Clip | Clips | 5 |
| 0600 | 38 | *94 03 098* | | LH NLS - USE 4129094, 7974025 | 1 | Handle | Handtag | 5 |
| 0600 | | | | | | | | |
| 0610 | 38 | *94 03 106* | | RH NLS - USE 4129102, 7974025 | 1 | Handle | Handtag | |
| 0610 | | | | | | | | |
| 0620 | 39 | 94 26 404 | | | 4 | Washer | Bricka | 6 |
| 0630 | 40 | *98 05 326* | | FOR DOOR TRIM WITH UPHOLSTERY PLATE NLS | 4 | Spacer washer | Distansbricka | 5 |
| 0640 | | | | | | | | |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX

| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-D08

## Door lock
## Front, 4SN, 5CK

## Dörrlås
## Fram, 4SN, 5CK

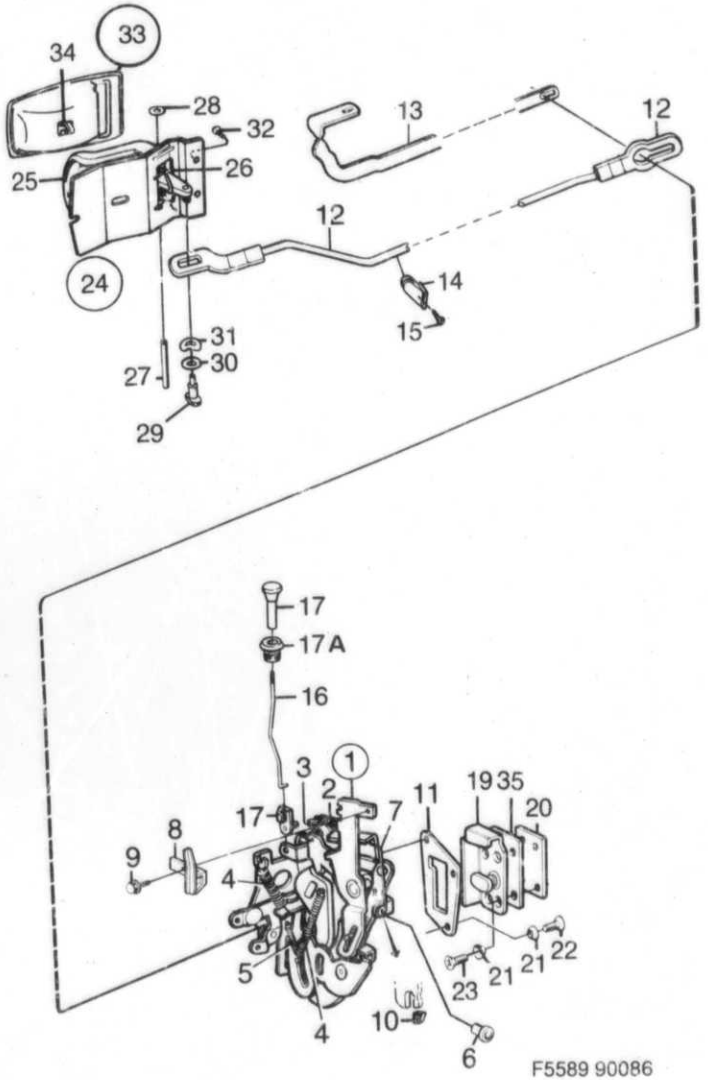


F5589 90086

| 0770 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *92 93 853* | | 5) LH NLS - USE 6949119 | 1 | Door lock | Dörrlås | 4 |
| 0020 | 1 | *92 93 846* | | 5) RH NLS - USE 6949101 | 1 | Door lock | Dörrlås | 4 |
| 0030 | 1 | *92 93 838* | | 5) LH RHD NLS - USE 6949093 | 1 | Door lock | Dörrlås | 4 |
| 0040 | 1 | *92 93 861* | | 5) RH RHD NLS - USE 6949127 | 1 | Door lock | Dörrlås | 4 |
| 0050 | 2 | 82 36 606 | | | 2 | .Spring | .Fjäder | 5 |
| 0060 | 3 | 84 57 566 | | | 2 | .Spring | .Fjäder | 5 |
| 0070 | 4 | 92 81 114 | | | 4 | .Tension spring | .Dragfjäder | 5 |
| 0080 | 5 | 92 85 602 | | | 2 | .Spring | .Fjäder | 5 |
| 0090 | 6 | 84 51 825 | | | 2 | .Bushing | .Bussning | 4 |
| 0100 | 7 | 84 51 817 | | | 2 | .Link | .Länk | 5 |
| 0110 | 8 | 82 56 372 | | LH | 1 | .Adjusting link | .Justeringslänk | 5 |
| 0120 | 8 | 82 56 380 | | RH | 1 | .Adjusting link | .Justeringslänk | 5 |
| 0130 | 9 | 92 24 544 | | | 2 | .Screw | .Skruv | 5 |
| 0140 | 10 | 84 56 808 | | | 2 | Absorber | Dämpare | 4 |
| 0150 | 11 | 84 56 006 | | | 2 | Spacer | Mellanlägg | |
| 0160 | 12 | 92 35 573 | | 5) LH | 1 | Control link | Manöverlänk | 5 |
| 0170 | 12 | 92 35 581 | | 5) RH | 1 | Control link | Manöverlänk | 5 |
| 0180 | 13 | *92 97 037* | | 5) LH, CD NLS | 1 | Control link | Manöverlänk | 7 |
| 0190 | 13 | *92 97 045* | | 5) RH, CD NLS | 1 | Control link | Manöverlänk | 7 |
| 0200 | 14 | 92 87 392 | | | 2 | Guide | Styrning | 5 |
| 0210 | 15 | 79 22 263 | | | 4 | Screw | Skruv | 5 |
| 0220 | 16 | *82 69 375* | | LH NLS - USE 8451478 | 1 | Rod | Stång | 5 |
| 0230 | 16 | 82 69 383 | | RH | 1 | Rod | Stång | 5 |
| 0240 | 17 | 94 46 022 | | | 2 | Button | Knapp | 3 |
| 0250 | 17A | 97 31 498 | | | 2 | Bushing | Bussning | 4 |
| 0260 | 18 | 84 61 675 | | | 2 | Clip | Clips | 5 |
| 0270 | 19 | 82 62 750 | | 5) LH | 1 | End plate | Slutbleck | 5 |
| 0280 | 19 | 82 62 768 | | 5) RH | 1 | End plate | Slutbleck | 5 |
| 0290 | 20 | 82 41 994 | | | 2 | Nut plate | Mutterplatta | 5 |
| 0300 | 21 | 79 34 136 | | | 14 | Washer | Bricka | 5 |
| 0310 | 22 | *79 73 480* | | NLS - USE 8055960 | 6 | Screw | Skruv | 5 |
| 0320 | 23 | 79 37 956 | | | 8 | Screw | Skruv | 5 |
| 0330 | 24 | 94 65 121 | | 5) LH | 1 | Handle | Handtag | 5 |
| 0340 | 24 | 94 65 139 | | 5) RH | 1 | Handle | Handtag | 5 |
| 0350 | 25 | 94 65 113 | | | 2 | .Handle | .Handtag | 5 |
| 0360 | 26 | 84 03 305 | | | 2 | .Spring | .Fjäder | 5 |
| 0370 | 27 | *84 03 396* | | NLS | 2 | .Rivet pin | .Nitstift | |
| 0380 | 28 | 79 33 815 | | | 2 | .Washer | .Bricka | 5 |
| 0390 | 29 | *84 08 460* | | NLS | 2 | .Rivet | .Nit | 5 |
| 0400 | 30 | *84 08 478* | | NLS | 2 | .Washer | .Bricka | |
| 0410 | 31 | *97 07 217* | | NLS | 2 | .Washer | .Bricka | 5 |
| 0420 | 32 | 79 22 420 | | | 6 | Screw | Skruv | 5 |
| 0430 | 33 | 84 45 785 | | | 2 | Cover | Kåpa | 4 |
| 0440 | 34 | 84 03 529 | | | 2 | .Clip | .Clips | 5 |
| 0450 | 35 | 84 74 553 | | | 2 | Spacer | Mellanlägg | 4 |

5. Front Främre



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-D10

## Door lock
## Rear, 4SN, 5CK

## Dörrlås
## Bak, 4SN, 5CK

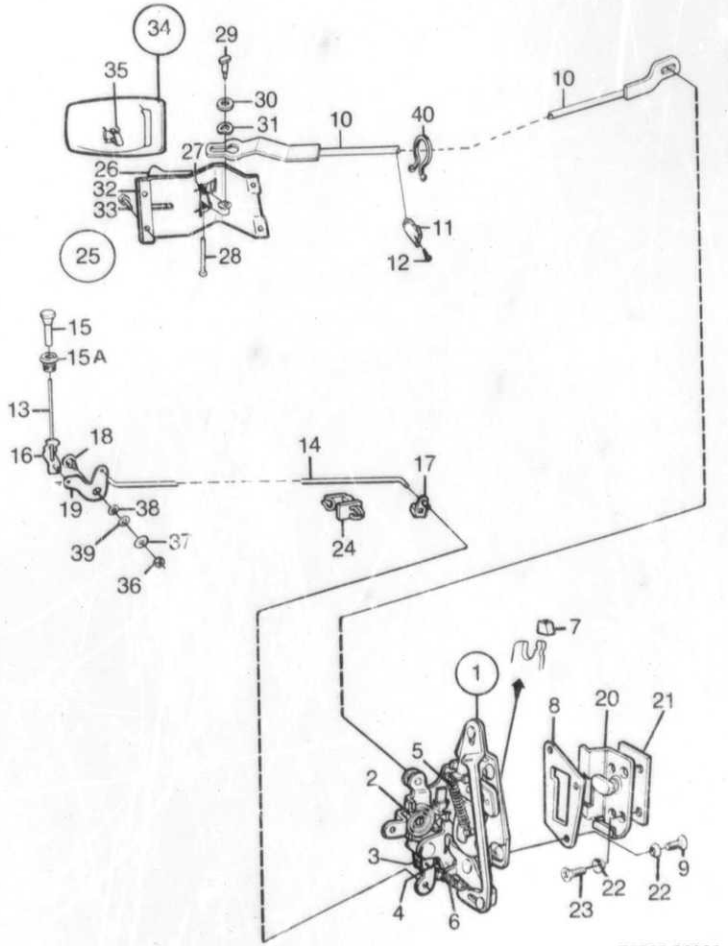


F5590 90086

| 0780 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *92 36 670* | | 6) LH NLS - USE 4010278 | 1 | Door lock | Dörrlås | 5 |
| 0020 | 1 | *92 36 688* | | 6) RH NLS - USE 4010286 | 1 | Door lock | Dörrlås | 5 |
| 0030 | 2 | *84 47 997* | | NLS - USE 8287139 | 2 | .Spring | .Fjäder | |
| 0040 | 3 | 84 48 029 | | | 2 | .Spring | .Fjäder | 5 |
| 0050 | 4 | 84 57 566 | | | 2 | .Spring | .Fjäder | 5 |
| 0060 | 5 | 92 81 130 | | | 2 | .Tension spring | .Dragfjäder | 5 |
| 0070 | 6 | 82 87 153 | | | 2 | .Spring | .Fjäder | 5 |
| 0080 | 7 | 84 56 808 | | | 2 | Absorber | Dämpare | 4 |
| 0090 | 8 | 84 56 006 | | | 2 | Spacer | Mellanlägg | |
| 0100 | 9 | 79 73 472 | | | 6 | Screw | Skruv | 5 |
| 0110 | 10 | 92 35 805 | | 6) LH | 1 | Control link | Manöverlänk | 5 |
| 0120 | 10 | 92 35 813 | | 6) RH | 1 | Control link | Manöverlänk | 5 |
| 0130 | 10 | *92 95 635* | | 6) LH, CD NLS | 1 | Control link | Manöverlänk | 7 |
| 0140 | 10 | *92 95 643* | | 6) RH, CD NLS | 1 | Control link | Manöverlänk | 7 |
| 0150 | 11 | 92 87 392 | | | 2 | Guide | Styrning | 5 |
| 0160 | 12 | 79 22 263 | | | 2 | Screw | Skruv | 5 |
| 0170 | 13 | 82 67 130 | | | 2 | Rod | Stång | 5 |
| 0180 | 14 | 84 15 929 | | | 2 | Rod | Stång | 5 |
| 0190 | 14 | 92 95 650 | | CD | 2 | Link | Länk | 7 |
| 0200 | 15 | 94 46 022 | | | 2 | Button | Knapp | 3 |
| 0210 | 15A | 97 31 498 | | | 2 | Bushing | Bussning | 4 |
| 0220 | 16 | 71 53 695 | | | 4 | Clamp | Klammer | 5 |
| 0230 | 17 | 84 53 755 | | | 2 | Clip | Clips | 5 |
| 0240 | 18 | 84 41 925 | | | 2 | Screw | Skruv | 6 |
| 0250 | 19 | 84 15 820 | | LH | 1 | Lever | Hävarm | 6 |
| 0260 | 19 | 84 15 887 | | RH | 1 | Lever | Hävarm | 6 |
| 0270 | 20 | 82 62 768 | | 6) LH | 1 | End plate | Slutbleck | 5 |
| 0280 | 20 | 82 62 750 | | 6) RH | 1 | End plate | Slutbleck | 5 |
| 0290 | 21 | 82 41 994 | | | 2 | Nut plate | Mutterplatta | 5 |
| 0300 | 22 | 79 34 136 | | | 14 | Washer | Bricka | 5 |
| 0310 | 23 | 79 37 956 | | | 8 | Screw | Skruv | 5 |
| 0320 | 24 | 84 44 614 | | | 2 | Guide | Styrning | 5 |
| 0330 | 25 | 94 73 802 | | 6) LH | 1 | Handle | Handtag | 5 |
| 0340 | 25 | 94 73 810 | | 6) RH | 1 | Handle | Handtag | 5 |
| 0350 | 26 | 94 65 113 | | | 2 | .Handle | .Handtag | 5 |
| 0360 | 27 | 84 03 305 | | | 2 | .Spring | .Fjäder | 5 |
| 0370 | 28 | *84 03 396* | | NLS | 2 | .Rivet pin | .Nitstift | |
| 0380 | 29 | *84 08 460* | | NLS | 2 | .Rivet | .Nit | 5 |
| 0390 | 30 | *84 08 478* | | NLS | 2 | .Washer | .Bricka | |
| 0400 | 31 | *97 07 217* | | NLS | 2 | .Washer | .Bricka | 5 |
| 0410 | 32 | 84 15 994 | | LH | 1 | .Base plate | .Bottenplatta | |
| 0420 | 32 | *84 16 000* | | RH NLS | 1 | .Base plate | .Bottenplatta | |
| 0430 | 33 | 79 22 420 | | | 14 | Screw | Skruv | 5 |
| 0440 | 34 | 84 45 785 | | | 2 | Cover | Kåpa | 4 |
| 0450 | 35 | 84 03 529 | | | 2 | .Clip | .Clips | 5 |
| 0460 | 36 | 79 10 474 | | | 2 | Nut | Mutter | 5 |
| 0470 | 37 | 79 15 663 | | | 2 | Washer | Bricka | 5 |
| 0480 | 38 | *84 13 742* | | NLS | 2 | Washer | Bricka | |
| 0490 | 39 | 84 48 169 | | | 4 | Plastic washer | Plastbricka | 5 |
| 0500 | 40 | 79 71 864 | | | 2 | Tensioning band | Spännband | 5 |

6. Rear Bakre

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX

| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-D12

## *Trunk door, hinges*
## *Lock*

## *Bagagerumsdörr, gångjärn*
## *Lås*

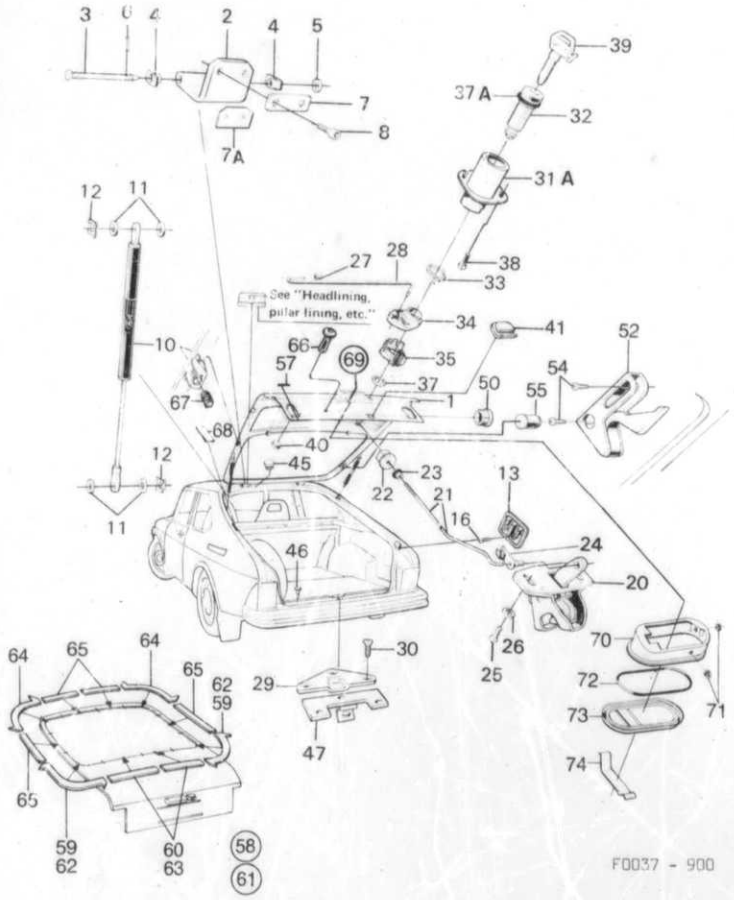


| 0800 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 69 27 032 | | | 1 | Trunk lid | Bagagelucka | 4 |
| 0020 | 2 | 82 51 217 | | | 2 | Hinge | Gångjärn | 5 |
| 0030 | 3 | 82 52 868 | | | 2 | Shaft | Axel | 5 |
| 0040 | 4 | 82 88 144 | | | 4 | Bushing | Bussning | 3 |
| 0050 | 5 | 80 29 985 | | | 2 | Washer | Bricka | 5 |
| 0060 | 6 | 92 93 523 | | | 2 | Lock needle | Låsnål | 5 |
| 0070 | 7 | 82 52 314 | | | 2 | Washer | Bricka | 5 |
| 0080 | 7A | 69 27 339 | | | 2 | Washer | Bricka | 3 |
| 0090 | 8 | 92 33 719 | | | 4 | Screw | Skruv | 5 |
| 0100 | 10 | 92 31 796 | | | 2 | Spring | Fjäder | 3 |
| 0110 | 10 | 92 93 580 | | FOR CARS WITH REAR SPOILER | 2 | Spring | Fjäder | 3 |
| 0120 | | | | | | | | |
| 0130 | 11 | 82 52 363 | | | 8 | Washer | Bricka | 5 |
| 0140 | 12 | 82 52 553 | | | 4 | Clip | Clips | 5 |
| 0150 | 13 | 92 92 756 | | | 2 | Guide | Styrning | 5 |
| 0160 | 16 | *79 73 373* | | NLS - USE 8059396 | 4 | Screw | Skruv | 5 |
| 0170 | 20 | *82 79 218* | | 289) NLS - USE 4090130 | 1 | Door lock | Dörrlås | 5 |
| 0180 | 20 | 40 90 130 | | 290) | 1 | Door lock | Dörrlås | 5 |
| 0190 | 21 | 82 78 863 | | | 1 | Pull rod | Dragstång | 5 |
| 0200 | 22 | 84 60 172 | | | 1 | Adjusting nut | Justermutter | 5 |
| 0210 | 23 | 82 85 843 | | | 1 | Grommet | Genomföring | 4 |
| 0220 | 24 | 84 61 675 | | | 1 | Clip | Clips | 5 |
| 0230 | 25 | 80 97 883 | | | 2 | Screw | Skruv | 5 |
| 0240 | 26 | 80 29 969 | | | 2 | Washer | Bricka | 5 |
| 0250 | 27 | 84 51 825 | | | 1 | Bushing | Bussning | 4 |
| 0260 | 28 | 92 37 751 | | | 1 | Control rod | Manöverstång | |
| 0270 | 29 | 84 64 539 | | | 1 | End plate | Slutbleck | 5 |
| 0280 | 30 | 80 55 998 | | | 3 | Screw | Skruv | 5 |
| 0290 | 31A | 82 83 772 | | | 1 | Lock cylinder | Låscylinder | 3 |
| 0300 | 32 | 82 83 780 | | | 1 | .Lock cylinder | .Låscylinder | 5 |
| 0310 | 33 | 84 51 957 | | | 1 | .Spring | .Fjäder | 5 |
| 0320 | 34 | 82 86 551 | | | 1 | .Link | .Länk | 5 |
| 0330 | 35 | 84 51 973 | | | 1 | .Companion flange | .Medbringare | 3 |
| 0340 | 37 | 84 51 981 | | | 1 | .Ring | .Ring | 4 |
| 0350 | 37A | 84 52 252 | | | 1 | .Seal | .Tätning | 4 |
| 0360 | 39 | 84 70 767 | | | X | Key blank | Nyckelämne | 3 |
| 0370 | 40 | 71 62 308 | | | 1 | Plug | Plugg | 5 |
| 0380 | 41 | 69 27 677 | | | 1 | Plug | Plugg | 5 |
| 0390 | 45 | 71 63 066 | | | 2 | Plug | Plugg | 5 |
| 0400 | 46 | 70 35 801 | | | 2 | Buffer | Buffert | 3 |
| 0410 | 47 | 92 28 503 | | | 1 | Washer | Bricka | 5 |
| 0420 | 50 | 92 23 371 | | | 2 | Cover | Lock | 3 |
| 0430 | 52 | 97 36 935 | | | 1 | Catch | Spärr | 5 |
| 0440 | 54 | 79 73 547 | | | 2 | Screw | Skruv | 5 |
| 0450 | 55 | 94 12 626 | | | 1 | Plug | Plugg | 5 |
| 0460 | 57 | 92 37 272 | | | 2 | Strip | List | |
| 0470 | 58 | *78 73 714* | | NLS | 1 | Repair kit | Reparationssats | |
| 0480 | 59 | 92 84 498 | | | 2 | .Attaching plate | .Fästplåt | 5 |
| 0490 | 60 | 92 84 514 | | | 2 | .Attaching plate | .Fästplåt | 5 |
| 0500 | 61 | 78 73 722 | | | 1 | Repair kit | Reparationssats | |
| 0510 | 62 | 92 84 498 | | | 2 | .Attaching plate | .Fästplåt | 5 |
| 0520 | 63 | 92 84 514 | | | 2 | .Attaching plate | .Fästplåt | 5 |
| 0530 | 64 | *92 84 480* | | NLS | 2 | .Attaching plate | .Fästplåt | 5 |
| 0540 | 65 | 92 84 506 | | | 4 | .Attaching plate | .Fästplåt | 5 |
| 0550 | 66 | 92 21 987 | | US | 2 | Plug | Plugg | 5 |
| 0560 | 67 | *69 14 584* | S | -1987 NLS - USE 4006425 | 2 | Buffer | Buffert | 4 |
| 0570 | 67 | 69 44 847 | S | 1988- | 2 | Buffer | Buffert | 4 |
| 0580 | 67 | 40 06 425 | S | 1989-500) | 2 | Buffer | Buffert | 4 |
| 0590 | 68 | 69 16 944 | S | -1987 | 2 | Guard | Skydd | 6 |
| 0600 | 68 | 69 43 989 | S | 1988- | 2 | Guard | Skydd | 6 |

289. Ch. -K3017748, -K7021523
290. Ch. K3017749-, K7021524-
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-D14

## *Trunk door, hinges*
## *Lock*

## *Bagagerumsdörr, gångjärn*
## *Lås*

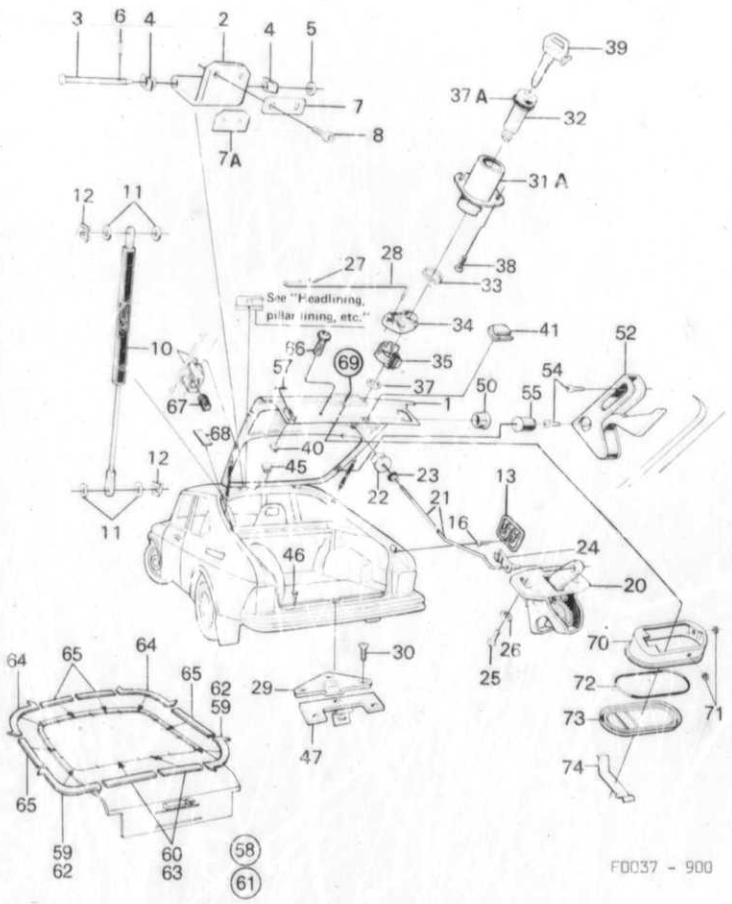


| 0800 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0610 | 69 | | | See page 3A-041, 2-B18 | | Handle | Handtag | |
| 0620 | 70 | 69 41 330 | | 240) | 1 | Cover | Kåpa | 4 |
| 0630 | 70 | 69 41 819 | | 240,306) | 1 | Cover | Kåpa | 4 |
| 0640 | 71 | 69 41 298 | | PART OF 6941330 | 2 | . Grommet | . Genomföring | 4 |
| 0650 | 71 | 69 41 298 | | PART OF 6941819 | 1 | . Grommet | . Genomföring | 4 |
| 0660 | 72 | 69 41 645 | | | 1 | . Seal | . Tätning | 4 |
| 0670 | 73 | 69 41 314 | | 240) | 1 | Cover | Täcklock | 4 |
| 0680 | 74 | 69 41 660 | | 240) | 1 | Clamp | Klämma | 6 |
| 0690 | | 69 16 050 | | See page 8A-173, 5-H06 | X | Buffer | Buffert | 5 |

240. Ch J3009252-, J7012887-
306. Without central lock Utan centrallås



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-D16

## *Trunk lid, hinges, lock*

## *Baklucka, gångjärn, lås*

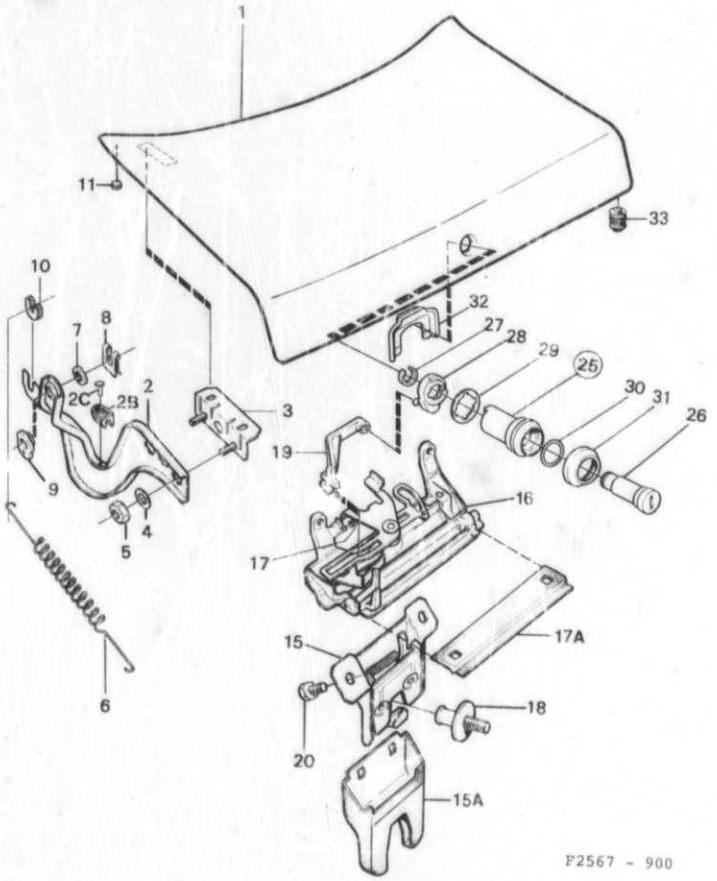


| 0820 | Pos | Part No/Artikelnr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *92 33 610* | | -1987 NLS - USE 6944359 | 1 | Trunk lid | Bagagelucka | 4 |
| 0020 | 1 | 69 44 359 | | 1988- | 1 | Trunk lid | Bagagelucka | 4 |
| 0030 | 2 | 92 22 795 | | LH | 1 | Hinge | Gångjärn | 5 |
| 0040 | 2 | 92 22 803 | | RH | 1 | Hinge | Gångjärn | 5 |
| 0050 | 2B | 92 31 515 | | LH | 1 | .Stop | .Stopp | 5 |
| 0060 | 2B | 92 31 523 | | RH | 1 | .Stop | .Stopp | 5 |
| 0070 | 2C | *82 15 683* | | NLS - USE 8287666 | 2 | .Rivet | .Nit | |
| 0080 | 3 | 92 22 837 | | | 2 | Elbow | Vinkel | 5 |
| 0090 | 4 | 70 61 328 | | | 8 | Washer | Bricka | 5 |
| 0100 | 5 | 79 67 953 | | | 8 | Nut | Mutter | 5 |
| 0110 | 6 | 69 19 013 | | | 2 | Spring | Fjäder | 5 |
| 0120 | 7 | 79 16 513 | | | 2 | Washer | Bricka | 5 |
| 0130 | 8 | 82 57 750 | | | 2 | Locking | Låsning | 5 |
| 0140 | 9 | 92 25 475 | | | 2 | Bushing | Bussning | 3 |
| 0150 | 10 | 92 25 483 | | LH | 1 | Protection | Skydd | 5 |
| 0160 | 10 | 82 33 736 | | RH | 1 | Protection | Skydd | 5 |
| 0170 | 10 | 82 33 736 | | RH, CV | 2 | Protection | Skydd | 5 |
| 0180 | 11 | 71 62 308 | | CV | 2 | Plug | Plugg | 5 |
| 0190 | 15 | 92 31 267 | | | 1 | Lock | Lås | 4 |
| 0200 | 15A | 92 30 889 | | | * | .Protection | .Skydd | 6 |
| 0210 | 16 | *82 89 670* | | 222) NLS - USE 6941280 | 1 | Handle | Handtag | 5 |
| 0220 | 16 | 69 41 280 | | 223) | 1 | Handle | Handtag | 5 |
| 0230 | 16 | *92 32 273* | | 222,307) NLS - USE 6941306 | 1 | Handle | Handtag | 5 |
| 0240 | 16 | 69 41 306 | | 223,307) | 1 | Handle | Handtag | 5 |
| 0250 | 17 | 82 89 738 | | | 1 | .Tension spring | .Dragfjäder | 5 |
| 0260 | 17A | 69 37 999 | | 223) | 1 | .Seal | .Tätning | 4 |
| 0270 | 18 | 92 35 078 | | | 1 | End plate | Slutbleck | 5 |
| 0280 | 19 | 82 89 753 | | | 1 | Control link | Manöverlänk | 5 |
| 0290 | 20 | 80 59 552 | | | 2 | Screw | Skruv | 5 |
| 0300 | 25 | 82 83 806 | | | 1 | Lock cylinder | Låscylinder | 5 |
| 0310 | 25 | 82 83 848 | | 307) | 1 | Lock cylinder | Låscylinder | 5 |
| 0320 | 26 | 84 86 409 | | | 1 | .Lock cylinder | .Låscylinder | 3 |
| 0330 | 26 | *82 83 855* | | 307) NLS - USE 8486409 | 1 | .Lock cylinder | .Låscylinder | |
| 0340 | 27 | 84 51 981 | | | 1 | .Ring | .Ring | 4 |
| 0350 | 28 | 82 89 878 | | | 1 | .Companion flange | .Medbringare | 3 |
| 0360 | 28 | 92 33 917 | | 307) | 1 | .Companion flange | .Medbringare | 3 |
| 0370 | 29 | 82 89 886 | | | 1 | .Spacer | .Mellanlägg | 4 |
| 0380 | 30 | 84 52 252 | | | 1 | .Seal | .Tätning | 4 |
| 0390 | 31 | 82 89 894 | | | 1 | .Cover | .Täcklock | 5 |
| 0400 | 32 | 84 53 227 | | | 1 | .Clip | .Clips | 5 |
| 0410 | 33 | *82 62 545* | | NLS - USE 4304234 | 2 | Stop | Stopp | |

222. Ch. -J3019732, -J7028020.
223. Ch. J3019733-, J7028021-.
307. Central lock Centrallås



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-D18


## Outside handle
## Lock cylinder

## Ytterhandtag
## Låscylinder

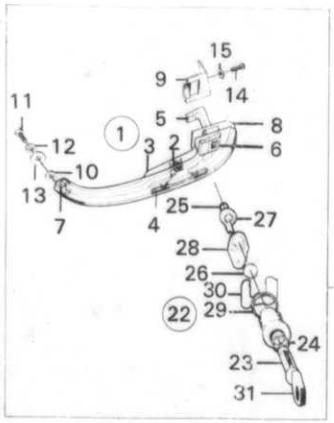



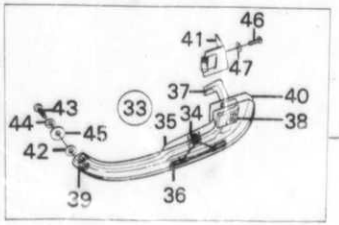


R 7086–900

| 0850 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0310 | 1 | 82 49 161 | | | 2 | Handle | Handtag | 5 |
| 0320 | 1 | 92 27 935 | | 610) | 2 | Handle | Handtag | 5 |
| 0330 | 2 | 84 78 364 | | | 2 | .Spring | .Fjäder | 5 |
| 0340 | 3 | 82 49 914 | | | 2 | .Clasp | .Trycke | 5 |
| 0350 | 4 | 82 38 107 | | | 2 | .Sliding plane | .Glidbana | 5 |
| 0360 | 5 | 82 49 922 | | | 2 | .Slide dog | .Glidklack | 5 |
| 0370 | 6 | *82 38 099* | | 127) NLS - USE 6940712 | 2 | .Guide | .Styrning | 4 |
| 0380 | 6 | 69 40 712 | | 128) | 2 | .Guide | .Styrning | 4 |
| 0390 | 7 | 82 38 115 | | LH | 1 | .Plastic bushing | .Plastbussning | 4 |
| 0400 | 7 | 82 38 123 | | RH | 1 | .Plastic bushing | .Plastbussning | 4 |
| 0410 | 8 | *82 37 323* | | 127) NLS - USE 6940704 | 2 | Guide | Styrning | 4 |
| 0420 | 8 | 69 40 704 | | 128) | 2 | Guide | Styrning | 4 |
| 0430 | 9 | 69 11 291 | | LH | 1 | Bracket | Hållare | 5 |
| 0440 | 9 | 69 11 309 | | RH | 1 | Bracket | Hållare | 5 |
| 0450 | 9 | 69 11 275 | | LH, 5CK, 4SN | 1 | Bracket | Hållare | 5 |
| 0460 | 9 | 69 11 283 | | RH, 5CK, 4SN | 1 | Bracket | Hållare | 5 |
| 0470 | 10 | 84 29 441 | | | 2 | Spacer | Mellanlägg | 4 |
| 0480 | 11 | *79 73 639* | | 1986 NLS - USE 8059230 | 2 | Screw | Skruv | 5 |
| 0490 | 11 | 80 59 230 | | | 2 | Screw | Skruv | 5 |
| 0500 | 12 | *79 10 524* | | 70) NLS - USE 7398878 | 2 | Washer | Bricka | 5 |
| 0510 | 13 | 70 88 073 | | 70) 5CK, 4SN | 2 | Washer | Bricka | 5 |
| 0520 | 13 | 73 98 878 | | 71) | 2 | Lock washer | Låsbricka | 5 |
| 0530 | 14 | 80 59 578 | | | 2 | Screw | Skruv | 5 |
| 0540 | 15 | 79 16 489 | | | 2 | Washer | Bricka | 5 |
| 0550 | 22 | 84 87 597 | | LH | 1 | Lock cylinder | Låscylinder | 5 |
| 0560 | 22 | 84 87 605 | | RH | 1 | Lock cylinder | Låscylinder | 5 |
| 0570 | 23 | 84 86 409 | | | 2 | .Lock cylinder | .Låscylinder | 3 |
| 0580 | 24 | 84 52 252 | | | 2 | .Seal | .Tätning | 4 |
| 0590 | 25 | 84 51 981 | | | 2 | .Ring | .Ring | 4 |
| 0600 | 26 | 84 51 957 | | | 2 | .Spring | .Fjäder | 5 |
| 0610 | 27 | 84 51 973 | | | 2 | .Companion flange | .Medbringare | 3 |
| 0620 | 28 | 84 51 965 | | | 2 | .Link | .Länk | 3 |
| 0630 | 29 | 84 08 361 | | | 2 | .Gasket | .Packning | 4 |
| 0640 | 30 | 84 53 227 | | | 2 | Clip | Clips | 5 |
| 0650 | 31 | 84 70 767 | | | X | Key blank | Nyckelämne | 3 |
| 0660 | | | | | | | | |
| 0670 | 33 | 82 49 161 | | | 2 | Handle | Handtag | 5 |
| 0680 | 33 | 92 27 935 | | 610) | 2 | Handle | Handtag | 5 |
| 0690 | 34 | 84 78 364 | | | 2 | .Spring | .Fjäder | 5 |
| 0700 | 35 | 82 49 914 | | | 2 | .Clasp | .Trycke | 5 |
| 0710 | 36 | 82 38 107 | | | 2 | .Sliding plane | .Glidbana | 5 |
| 0720 | 37 | 82 49 922 | | | 2 | .Slide dog | .Glidklack | 5 |
| 0730 | 38 | *82 38 099* | | 127) NLS - USE 6940712 | 2 | .Guide | .Styrning | 4 |
| 0740 | 38 | 69 40 712 | | 128) | 2 | .Guide | .Styrning | 4 |
| 0750 | 39 | 82 38 115 | | LH | 1 | .Plastic bushing | .Plastbussning | 4 |
| 0760 | 39 | 82 38 123 | | RH | 1 | .Plastic bushing | .Plastbussning | 4 |
| 0770 | 40 | *82 37 323* | | 127) NLS - USE 6940704 | 2 | Guide | Styrning | 4 |
| 0780 | 40 | 69 40 704 | | 128) | 2 | Guide | Styrning | 4 |
| 0790 | 41 | 82 86 858 | | | 2 | Bracket | Hållare | 5 |
| 0800 | 42 | 84 29 441 | | | 2 | Spacer | Mellanlägg | 4 |
| 0810 | 43 | *79 73 639* | | -1986 NLS - USE 8059230 | 2 | Screw | Skruv | 5 |
| 0820 | 43 | 80 59 230 | | 1987- | 2 | Screw | Skruv | 5 |
| 0830 | 44 | *79 10 524* | | 70) NLS - USE 7398878 | 2 | Washer | Bricka | 5 |
| 0840 | 45 | 70 88 073 | | 70) | 2 | Washer | Bricka | 5 |
| 0850 | 45 | 73 98 878 | | 71) | 2 | Lock washer | Låsbricka | 5 |
| 0860 | 46 | 80 55 980 | | | 2 | Screw | Skruv | 5 |
| 0870 | 47 | 79 34 136 | | | 2 | Washer | Bricka | 5 |

70. Ch. –G3006728, –G2007429
71. Ch G3006729–, G2007430–
127. Ch. –H3008207, –H2008602
128. Ch. H3008208–, H2008603–
610 Black Svart



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX



| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-D20

## Lock
## Lock cylinder set

## Lås
## Låscylindersats

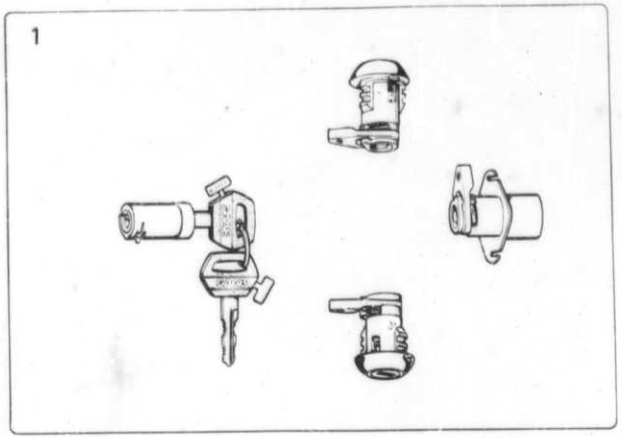

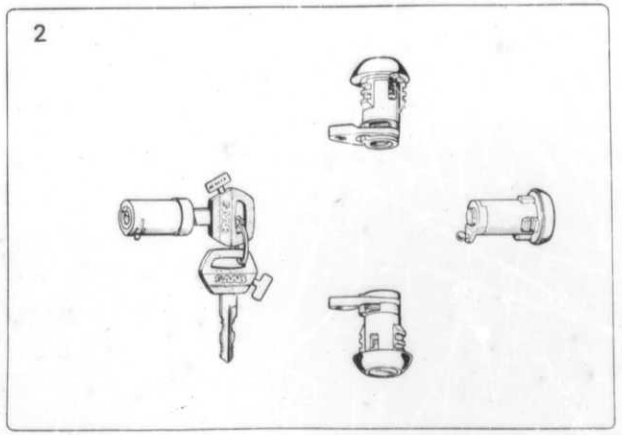
R 7087–900

| 0900 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 92 27 927 | | CK | 1 | Lock cylinder set | Låscylindersats | 5 |
| 0040 | | | | See page 8A-173, 5-H06 | | | | |
| 0080 | 2 | 92 28 008 | | SN | 1 | Lock cylinder set | Låscylindersats | 5 |
| 0100 | | | | See page 8A-173, 5-H06 | | | | |
| 0140 | 2 | 92 31 002 | | 307) SN | 1 | Lock cylinder set | Låscylindersats | 5 |
| 0160 | | | | See page 8A-173, 5-H06 | | | | |
| 0180 | | | | | | | | |
| 0200 | | | | 308) | | Lock | Lås | |
| 0220 | | | | | | | | |
| 0420 | | 92 27 950 | | DOOR, LH | X | Lock cylinder | Låscylinder | 3 |
| 0460 | | 92 27 968 | | DOOR, RH | X | Lock cylinder | Låscylinder | 3 |
| 0500 | | 82 85 744 | | 6) CK, TRUNKDOOR | X | Lock cylinder | Låscylinder | 5 |
| 0540 | | 82 89 852 | | 6) SN, TRUNKDOOR | X | Lock cylinder | Låscylinder | 5 |
| 0580 | | 92 31 010 | | 6,307) SN, TRUNKDOOR | X | Lock cylinder | Låscylinder | 5 |
| 0620 | | 93 29 483 | | IGNITION | X | Lock cylinder | Låscylinder | 3 |
| 0660 | | 84 78 554 | | | X | Spare key | Reservnyckel | 5 |

6. Rear Bakre
307. Central lock Centrallås
308. Lock cylinders may be ordered to match original equipment locks. Use the part number listed, stating the key code as additional information. These cylinders are delivered without keys. För att behålla samma nyckel till bilens samtliga lås kan låsdetaljer tillverkas efter uppgivande av nyckelnummer. Levereras utan nycklar.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

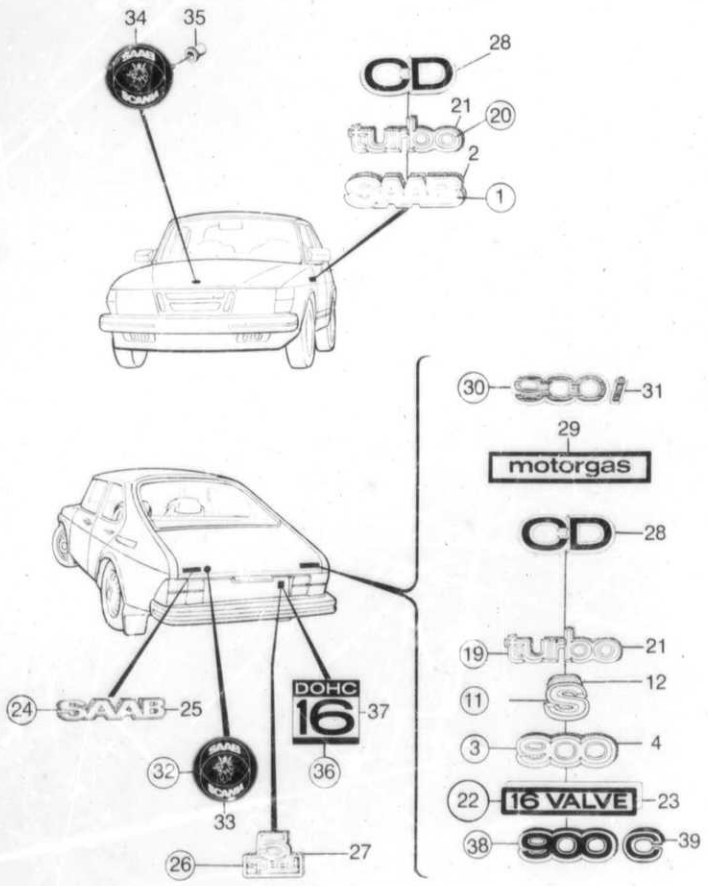


# 5-D22

External details, glass, sealings
***Emblem***

Utvändiga detaljer, glas, tätningslister
***Emblem***

| 0925 | Pos | Part No/Art. nr | Y. S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 92 27 729 | | | 2 | Emblem | Emblem | 3 |
| 0020 | 2 | 92 27 711 | | | 2 | .Tape | .Tape | 3 |
| 0030 | 3 | 92 80 256 | | | 1 | Emblem | Emblem | 3 |
| 0040 | 3 | 92 23 223 | | 4SN | 1 | Emblem | Emblem | 3 |
| 0050 | 4 | 82 72 130 | | | 1 | .Tape | .Tape | 3 |
| 0060 | 11 | 92 80 314 | | US | 1 | Emblem | Emblem | 3 |
| 0070 | 11 | 92 27 778 | | SN, US | 1 | Emblem | Emblem | 3 |
| 0080 | 12 | 92 27 745 | | US | 1 | .Tape | .Tape | 3 |
| 0090 | 19 | 92 80 298 | | | 1 | Emblem | Emblem | 3 |
| 0100 | 19 | 92 23 124 | | 4SN | 1 | Emblem | Emblem | 3 |
| 0110 | 20 | 92 80 330 | | | 2 | Emblem | Emblem | 3 |
| 0120 | 20 | 92 93 986 | | AERO | 2 | Emblem | Emblem | 3 |
| 0130 | 21 | 82 76 776 | | | 3 | .Tape | .Tape | 3 |
| 0140 | 21 | 92 94 083 | | AERO | 2 | .Decal tape | .Emblemtejp | 3 |
| 0150 | 22 | 69 17 751 | | B202 US,CA | 1 | Emblem | Emblem | 3 |
| 0160 | 23 | 69 17 777 | | B202 US,CA | 1 | .Decal tape | .Emblemtejp | 3 |
| 0170 | 24 | 92 80 173 | | | 1 | Emblem | Emblem | 3 |
| 0180 | 24 | 92 23 207 | | SN | 1 | Emblem | Emblem | 3 |
| 0190 | 25 | 82 69 987 | | | 1 | .Tape | .Tape | 3 |
| 0200 | 26 | 92 27 695 | | -1986 | 1 | Emblem | Emblem | 3 |
| 0210 | 27 | 92 27 687 | | | 1 | .Tape | .Tape | 3 |
| 0220 | 28 | 92 36 183 | | CD | 1 | Emblem | Emblem | 7 |
| 0230 | 29 | *92 41 035* | | NLS | 1 | Emblem | Emblem | 3 |
| 0240 | 30 | 92 94 059 | | SN | 1 | Emblem | Emblem | 3 |
| 0250 | 30 | 69 15 847 | | CK | 1 | Emblem | Emblem | |
| 0260 | 31 | 92 94 075 | | | 1 | .Decal tape | .Emblemtejp | 3 |
| 0270 | 32 | *69 11 853* | | -1987, SN NLS - USE 6941272 | 1 | Emblem | Emblem | 3 |
| 0280 | 32 | 69 41 272 | | 1988-, SN | 1 | Emblem | Emblem | 3 |
| 0290 | 32 | 69 15 672 | | -1987, CK | | Emblem | Emblem | 3 |
| 0300 | 32 | 69 41 264 | | 1988-, CK | 1 | Emblem | Emblem | 3 |
| 0310 | 33 | 69 18 031 | | -1987 | 1 | .Decal tape | .Emblemtejp | 3 |
| 0320 | 33 | 69 60 272 | | 1988- | 1 | .Decal tape | .Emblemtejp | 3 |
| 0330 | 34 | 69 11 895 | | | 1 | Emblem | Emblem | 3 |
| 0340 | 35 | 69 15 706 | | | 2 | Bushing | Bussning | 3 |
| 0350 | 36 | 92 93 911 | | B202 | 1 | Emblem | Emblem | 3 |
| 0360 | 37 | 92 93 937 | | B202 | 1 | .Decal tape | .Emblemtejp | 3 |
| 0370 | 38 | 69 38 112 | | 43) SN | 1 | Emblem | Emblem | 3 |
| 0380 | 38 | 69 38 120 | | 43) CK | 1 | Emblem | Emblem | 3 |
| 0390 | 39 | 69 38 153 | | 43) | 1 | .Tape | .Tejp | 3 |

43. For cars with integrated bumpers  För bilar med integrerade stötfångare




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-D24 *Side mouldings* *Sidodekorlist*

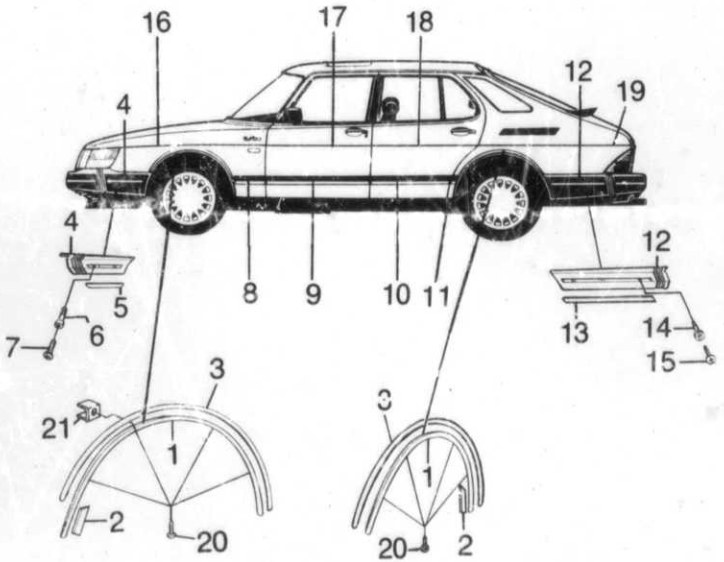


F5591 90086

| 0950 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *92 57 262* | | 236) NLS - USE 6947857 | 4 | Decor strip | Dekorlist | 2 |
| 0120 | 1 | 69 47 857 | | 237) | 4 | Decor strip | Dekorlist | 2 |
| 0030 | 1 | 69 18 510 | | 1988-,5,43) AERO, LH | 1 | Decor strip | Dekorlist | 2 |
| 0040 | 1 | 69 18 528 | | 1988-,5,-3) AERO, RH | 1 | Decor strip | Dekorlist | 2 |
| 0050 | 1 | 39 18 536 | | 1988-,6,43) AERO, LH | 1 | Decor strip | Dekorlist | 2 |
| 0060 | 1 | 69 18 544 | | 1988-,6,43) AERO, RH | 1 | Decor strip | Dekorlist | 2 |
| 0070 | 2 | 69 28 154 | | -1987,5,43) | 2 | Decor strip | Dekorlist | 2 |
| 0080 | 2 | 69 48 798 | | 1988-,5,43) | 2 | Decor strip | Dekorlist | 2 |
| 0090 | 2 | 69 28 170 | | -1987,6,43) | 2 | Decor strip | Dekorlist | 2 |
| 0100 | 2 | 69 48 780 | | 1988-,6,43) | 2 | Decor strip | Dekorlist | 2 |
| 0110 | 3 | *69 41 744* | | 1988, AERO NLS - USE 4010104 | 4 | Attaching strip | Fästlist | 2 |
| 0120 | 3 | 40 10 104 | | 1989-, AERO | 4 | Attaching strip | Fästlist | 2 |
| 0130 | 4 | 92 86 717 | | LH, JP | 1 | Decor strip | Dekorlist | 2 |
| 0140 | 4 | 92 86 725 | | RH, JP | 1 | Decor strip | Dekorlist | 2 |
| 0150 | 4 | 92 39 278 | | LH | 1 | Decor strip | Dekorlist | 2 |
| 0160 | 4 | 92 39 286 | | RH | 1 | Decor strip | Dekorlist | 2 |
| 0170 | 5 | 92 89 570 | | | 2 | Decor strip | Dekorlist | 2 |
| 0180 | 6 | *92 91 444* | | NLS - USE 6911804 | 4 | Bushing | Bussning | 4 |
| 0190 | 7 | 79 69 314 | | | 3 | Screw | Skruv | 5 |
| 0200 | 8 | 92 36 894 | | LH | 1 | Decor strip | Dekorlist | 2 |
| 0210 | 8 | 92 36 902 | | RH | 1 | Decor strip | Dekorlist | 2 |
| 0220 | 9 | 92 36 910 | | LH, 2SN, 3CK, CV | 1 | Decor strip | Dekorlist | 2 |
| 0230 | 9 | 92 36 928 | | RH, 2SN, 3CK, CV | 1 | Decor strip | Dekorlist | 2 |
| 0240 | 9 | 92 36 993 | | 5CK, 4SN | 2 | Decor strip | Dekorlist | 2 |
| 0250 | 9 | 92 97 714 | | CD | 2 | Decor strip | Dekorlist | 7 |
| 0260 | 10 | 92 36 951 | | LH, 5CK, 4SN | 1 | Decor strip | Dekorlist | 2 |
| 0270 | 10 | 92 36 969 | | RH, 5CK, 4SN | 1 | Decor strip | Dekorlist | 2 |
| 0280 | 10 | 92 97 698 | | LH CD | 1 | Decor strip | Dekorlist | 7 |
| 0290 | 10 | 92 97 706 | | RH CD | 1 | Decor strip | Dekorlist | 7 |
| 0300 | 10 | 92 36 936 | | LH, 2SN, 3CK, CV | 1 | Decor strip | Dekorlist | 2 |
| 0310 | 10 | 92 36 944 | | RH, 2SN, 3CK, CV | 1 | Decor strip | Dekorlist | 2 |
| 0320 | 11 | 92 36 977 | | LH, 5CK, 4SN | 1 | Decor strip | Dekorlist | 2 |
| 0330 | 11 | 92 36 985 | | RH, 5CK, 4SN | 1 | Decor strip | Dekorlist | 2 |
| 0340 | 12 | 92 86 634 | | LH, 3CK, 5CK, JP | 1 | Decor strip | Dekorlist | 2 |
| 0350 | 12 | 92 86 642 | | RH, 3CK, 5CK, JP | 1 | Decor strip | Dekorlist | 2 |
| 0360 | 12 | 92 86 675 | | LH, 2SN, 4SN, JP | 1 | Decor strip | Dekorlist | 2 |
| 0370 | 12 | 92 86 683 | | RH, 2SN, 4SN, JP | 1 | Decor strip | Dekorlist | 2 |
| 0380 | 12 | 92 39 237 | | LH, CK | 1 | Decor strip | Dekorlist | 2 |
| 0390 | 12 | 92 39 245 | | RH, CK | 1 | Decor strip | Dekorlist | 2 |
| 0400 | 12 | 92 39 252 | | LH, SN, CV | 1 | Decor strip | Dekorlist | 2 |
| 0410 | 12 | 92 35 260 | | RH, SN, CV | 1 | Decor strip | Dekorlist | 2 |
| 0420 | 13 | 92 89 588 | | | 2 | Decor strip | Dekorlist | 2 |
| 0430 | 14 | 69 11 804 | | | 4 | Bushing | Bussning | 4 |
| 0440 | 15 | 79 69 314 | | | 3 | Screw | Skruv | 5 |
| 0450 | 16 | 92 88 259 | | 610) US, CA, SE, CD | 2 | Decor strip | Dekorlist | 2 |
| 0460 | 16 | 92 88 267 | | 570) US, CA, SE, CD | 2 | Decor strip | Dekorlist | 2 |
| 0470 | 17 | 82 45 326 | | 610) 3CK, 2SN, CV, US, CA, SE | 2 | Decor strip | Dekorlist | 2 |
| 0480 | | | | | | | | |
| 0490 | 17 | 92 82 922 | | 570) 3CK, 2SN, CV, US, CA, SE | 2 | Decor strip | Dekorlist | 2 |
| 0500 | | | | | | | | |
| 0510 | 17 | 92 82 153 | | 610) 4SN, 5CK, US, CA,SE | 2 | Decor strip | Dekorlist | 2 |
| 0520 | 17 | 82 45 326 | | 610) CD | 2 | Decor strip | Dekorlist | 2 |
| 0530 | 17 | 92 82 716 | | 570) 2SN, 5CK, US, CA,SE | 2 | Decor strip | Dekorlist | 2 |
| 0540 | 17 | 92 82 922 | | 570) CD | 2 | Decor strip | Dekorlist | 2 |

5. Front Främre
6. Rear Bakre
43. For cars with integrated bumpers. För bilar med integrerade stötfångare
236. Ch. -J3018903, -J7022943
237. Ch. J3018904-, J7022944-
570. Gray Grå
610. Black Svart



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C18 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-E02

## *Side mouldings*
## *Sidodekorlist*

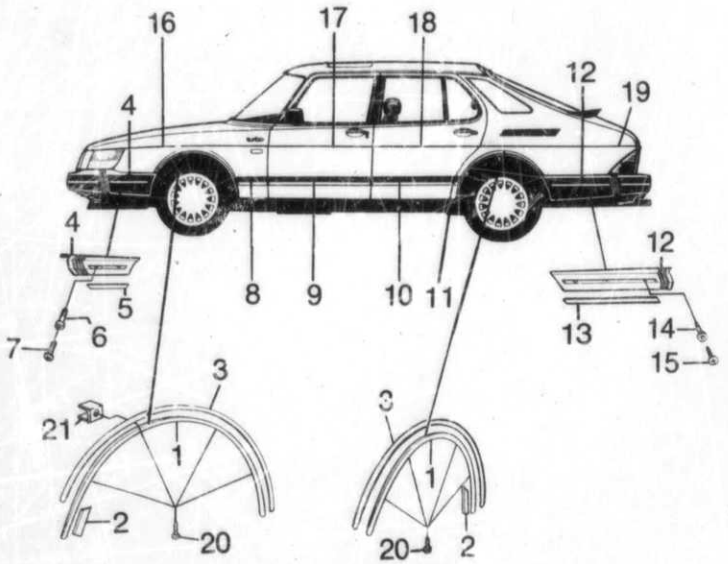


F5591 90086

| 0950 | Pos | Part No/Art. nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0550 | 18 | 92 82 211 | | 610) LH, 4SN, 5CK, US, CA, SE | 1 | Decor strip | Dekorlist | 2 |
| 0560 | | | | | | | | |
| 0570 | 18 | 92 82 229 | | 610) RH, 4SN, 5CK, US, CA, SE | 1 | Decor strip | Dekorlist | 2 |
| 0580 | | | | | | | | |
| 0590 | 18 | 82 45 326 | | 610) CD | 2 | Decor strip | Dekorlist | 2 |
| 0600 | 18 | 92 82 732 | | 570) LH, 4SN, 5CK, US, CA, SE | 1 | Decor strip | Dekorlist | 2 |
| 0610 | | | | | | | | |
| 0620 | 18 | 92 82 740 | | 570) RH, 4SN, 5CK, US, CA, SE | 1 | Decor strip | Dekorlist | 2 |
| 0630 | | | | | | | | |
| 0640 | 18 | 92 82 922 | | 570) CD | 2 | Decor strip | Dekorlist | 2 |
| 0650 | 19 | 92 89 224 | | 610) 2SN, 3CK, CV, US, CA, SE | 2 | Decor strip | Dekorlist | 2 |
| 0660 | | | | | | | | |
| 0670 | 19 | 92 89 232 | | 570) 2SN, 3CK, CV, US, CA, SE | 2 | Decor strip | Dekorlist | 2 |
| 0680 | | | | | | | | |
| 0690 | 19 | 92 89 273 | | 610) LH, 4SN, 5CK, CD, SE, US, CA | 1 | Decor strip | Dekorlist | 2 |
| 0700 | | | | | | | | |
| 0710 | 19 | 92 89 281 | | 610) RH, 4SN, 5CK, CD, SE, US, CA | 1 | Decor strip | Dekorlist | 2 |
| 0720 | | | | | | | | |
| 0730 | 19 | 92 89 299 | | 570) LH, 4SN, 5CK, CD, SE, US, CA | 1 | Decor strip | Dekorlist | 2 |
| 0740 | | | | | | | | |
| 0750 | 19 | 92 89 307 | | 570) RH, 4SN, 5CK, CD, SE, US, CA | 1 | Decor strip | Dekorlist | 2 |
| 0760 | | | | | | | | |
| 0770 | 20 | 79 77 796 | | 1988-,43) AERO | 16 | Screw | Skruv | 5 |
| 0780 | 21 | 69 41 678 | | 1988-,43) AERO | 16 | Clip | Clips | 5 |
| 0790 | 21 | 69 41 678 | | 1988-, FOR SIDESHIELD | 4 | Clip | Clips | 5 |
| 0800 | | 82 83 715 | | 3M | X | Tape | Tape | 3 |
| 0810 | | 92 86 188 | | 50M | X | Stripe | Dekortejp | 5 |

43. For cars with integrated bumpers  För bilar med integrerade stötfångare
570. Grey  Grå
610. Black  Svart



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

External details, glass,
Air outlet, decor
# 5-E04
***rear door***

Utvändiga detaljer, glas,
Luftutsläpp, dekor
***bakdörr***

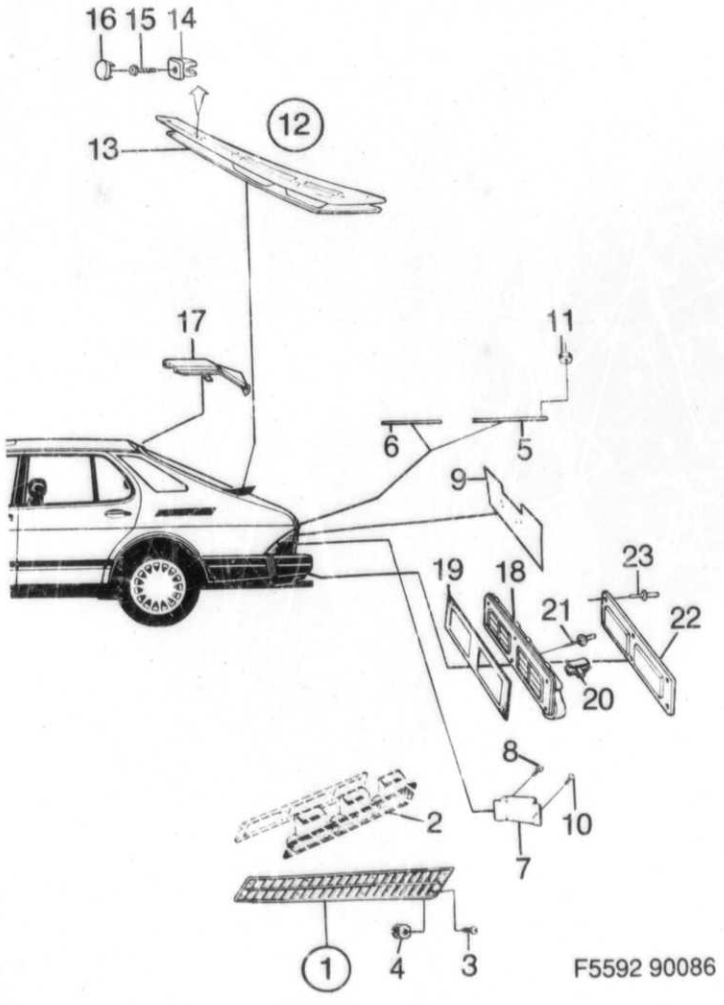


| 0955 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 82 87 179 | | LH | 1 | Decor frame | Dekorram | 3 |
| 0020 | 1 | 82 87 187 | | RH | 1 | Decor frame | Dekorram | |
| 0030 | 2 | | | See page 8C-011, 7-A12 | | Air outlet | Luftutsläpp | |
| 0040 | 3 | 79 74 017 | | | 16 | Screw | Skruv | 5 |
| 0050 | 4 | 82 51 746 | | | 16 | Clip | Clips | 5 |
| 0060 | 5 | 92 94 174 | | LH | 1 | Strip | List | 3 |
| 0070 | 6 | 92 94 182 | | RH | 1 | Strip | List | 3 |
| 0080 | 7 | 69 21 159 | | US | 1 | Bracket | Hållare | 5 |
| 0090 | 7 | 69 21 167 | | SN, US | 1 | Bracket | Hållare | 5 |
| 0100 | 8 | 79 77 390 | | US | 4 | .Screw | .Skruv | 5 |
| 0110 | 9 | 92 89 919 | | | 1 | Decor | Dekor | 3 |
| 0120 | 10 | 80 59 560 | | US | 2 | Screw | Skruv | 5 |
| 0130 | 11 | 79 73 365 | | | 4 | Nut | Mutter | 5 |
| 0140 | 12 | *92 89 877* | | 202) LH, SN NLS - USE 6941777, 6941793 | 1 | Air outlet | Luftutsläpp | 5 |
| 0150 | 12 | 69 41 777 | | 203) LH, SN | 1 | Air outlet | Luftutsläpp | 5 |
| 0160 | 12 | *92 89 885* | | 202) RH, SN NLS - USE 6941785, 6941793 | 1 | Air outlet | Luftutsläpp | 5 |
| 0170 | 12 | 69 41 785 | | 203) RH, SN | 1 | Air outlet | Luftutsläpp | 5 |
| 0180 | 13 | 92 27 539 | | LH SN | 1 | .Sealing strip | .Tätningslist | 3 |
| 0190 | 13 | 92 27 547 | | RH SN | 1 | .Sealing strip | .Tätningslist | 3 |
| 0200 | 14 | 92 36 589 | | SN | 8 | Clip | Clips | 5 |
| 0210 | 15 | 79 22 230 | | SN | 8 | Screw | Skruv | 5 |
| 0220 | 16 | 92 85 404 | | 202) SN | 8 | Cover | Ticklock | 3 |
| 0230 | 16 | 69 41 793 | | 203) SN | 8 | Cover | Ticklock | 3 |
| 0240 | 17 | *92 37 512* | | 206), LH CK NLS - USE 6947451 | 1 | Protection | Skydd | 3 |
| 0250 | 17 | 69 47 451 | | 207), LH CK | 1 | Protection | Skydd | 3 |
| 0260 | 17 | *92 37 520* | | 206), RH CK NLS - USE 6947469 | 1 | Protection | Skydd | 3 |
| 0270 | 17 | 69 47 469 | | 207), RH CK | 1 | Protection | Skydd | 3 |
| 0280 | 17 | *92 34 535* | | 206), LH SN NLS - USE 6947436 | 1 | Decor | Dekor | 3 |
| 0290 | 17 | 69 47 436 | | 207), LH SN | 1 | Decor | Dekor | 3 |
| 0300 | 17 | *92 34 543* | | 206), RH SN NLS - USE 6947444 | 1 | Decor | Dekor | 3 |
| 0310 | 17 | 69 47 444 | | 207), RH SN | 1 | Decor | Dekor | 3 |
| 0320 | 18 | 92 93 499 | | 6) -1986, SN | 1 | Air outlet | Luftutsläpp | 5 |
| 0330 | 18 | 69 37 494 | | 6) 1987-, SN | 1 | Air outlet | Luftutsläpp | 5 |
| 0340 | 19 | 92 90 594 | | SN | 1 | .Seal | .Tätning | 5 |
| 0350 | 20 | 92 93 382 | | SN | 4 | .Retainer | .Hållare | 5 |
| 0360 | 21 | 82 35 178 | | SN | 6 | Pop rivet | Popnit | 5 |
| 0370 | 22 | 92 93 549 | | -1988, CK | 1 | Cover | Lock | 5 |
| 0380 | 22 | 69 45 463 | | 1989-,500) CK | 1 | Cover | Lock | 5 |
| 0390 | 23 | 82 35 178 | | CK | 6 | Pop rivet | Popnit | 5 |
| 0400 | | 82 83 715 | | 3M | X | Tape | Tape | 3 |
| 0410 | | 92 86 188 | | 50M | X | Stripe | Dekortejp | 5 |
| 0420 | | 92 88 127 | | 770 MM | X | Tape | Tape | 5 |

6. Rear Bakre
202. Ch. --J3019110, --J7026611
203. Ch. J3019111--, J7026612--
206. Ch. --J3019474, --J7027362.
207. Ch. J3019475--, J7027363--.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-E06

## *Spoiler*

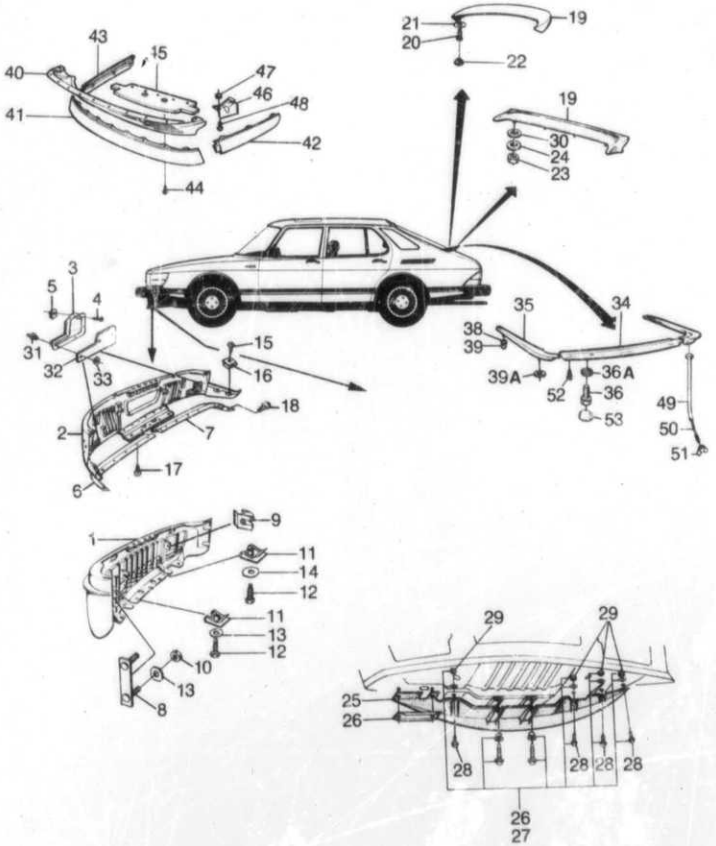


F2568 - 900

| 3960 | Pos | Part No/Art nr | KS | Notes/Anmärkningar | Qty/Antal | Description | Benämning | SL |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 82 55 267 | | | 1 | Spoiler | Spoiler | 3 |
| 0020 | 2 | 69 14 469 | | | 1 | Spoiler | Spoiler | 3 |
| 0030 | 2 | 69 11 044 | | WITH TWO AIR INLETS FOR OILCOOLER | 1 | Spoiler | Spoiler | 3 |
| 0040 | | | | | | | | |
| 0050 | ⚡ 2 | | | AERO | 1 | Spoiler | Spoiler | |
| 0060 | * | | | See page 8A-109, 5-E14 | | | | |
| 0070 | 3 | 92 91 121 | | LH | 1 | .Frame | .Ram | 5 |
| 0080 | 3 | 92 91 139 | | RH | 1 | .Frame | .Ram | 5 |
| 0090 | 4 | 79 77 036 | | | 10 | Screw | Skruv | 5 |
| 0100 | 5 | 92 66 545 | | | 10 | Clip | Clips | 5 |
| 0110 | 6 | 69 11 051 | | LH | 1 | Spoiler | Spoiler | 3 |
| 0120 | 7 | 69 11 069 | | RH | 1 | Spoiler | Spoiler | 3 |
| 0130 | 8 | 82 66 884 | | | 2 | Bracket | Fäste | 5 |
| 0140 | 9 | 82 68 500 | | | 2 | Clip | Clips | 5 |
| 0150 | 10 | 80 29 555 | | -1987 | 4 | Nut | Mutter | 5 |
| 0160 | 10 | 81 51 227 | | 1988- | 4 | Nut | Mutter | 5 |
| 0170 | 11 | 92 36 753 | | | 3 | Clip | Clips | 5 |
| 0180 | 12 | 79 73 621 | | | 3 | Screw | Skruv | 5 |
| 0190 | 13 | 82 66 835 | | | 5 | Washer | Bricka | 5 |
| 0200 | 13 | 82 66 835 | | | 9 | Washer | Bricka | 5 |
| 0210 | 14 | 82 73 468 | | | 2 | Washer | Bricka | 5 |
| 0220 | 15 | 79 22 354 | | | 4 | Screw | Skruv | 5 |
| 0230 | 16 | 79 68 001 | | | 4 | Clip nut | Clipsmutter | 5 |
| 0240 | 17 | *80 59 255* | | NLS - USE 7972789 | 8 | Screw | Skruv | 5 |
| 0250 | 18 | 79 70 601 | | | 5 | Screw | Skruv | 5 |
| 0260 | 19 | 92 88 523 | | 6,27) CK | 1 | Spoiler | Spoiler | 3 |
| 0270 | | | | See page 8A-161, 5-G18 | | | | |
| 0280 | 19 | *92 25 964* | | -1988,6,28) 2SN | 1 | Spoiler | Spoiler | 3 |
| 0290 | | | | See page 8A-161, 5-G18 | | | | |
| 0290 | | | | NLS | | | | |
| 0300 | 19 | 92 90 362 | | 6,129) 4SN | 1 | Spoiler | Spoiler | 3 |
| 0310 | | | | See page 8A-161, 5-G18 | | | | |
| 0320 | 20 | 79 22 354 | | CK | 9 | Screw | Skruv | 5 |
| 0330 | 21 | 92 28 255 | | CK | 9 | Washer | Bricka | 5 |
| 0340 | 22 | 82 64 962 | | CK | 2 | Plug | Plugg | 5 |
| 0350 | 23 | 80 29 548 | | -1987, SN | 5 | Nut | Mutter | 5 |
| 0360 | 23 | 81 51 218 | | 1988-, SN | 5 | Nut | Mutter | 5 |
| 0370 | 24 | 79 73 894 | | SN | 5 | Washer | Bricka | 5 |
| 0380 | 25 | 82 67 403 | | ME | 1 | Diverter | Avledare | 4 |
| 0390 | 26 | *92 38 205* | | ME NLS - USE 6929483 | 1 | Mounting kit | Monteringssats | 4 |
| 0400 | 26 | 69 29 483 | | ME, ALT TO 9238205 | 1 | Mounting kit | Monteringssats | 4 |
| 0410 | 27 | 92 30 327 | | TURBO ME | 1 | Mounting kit | Monteringssats | 4 |
| 0420 | 28 | 79 69 223 | | | 4 | .Screw | .Skruv | 5 |
| 0430 | 29 | 79 71 658 | | | 4 | .Nut | .Mutter | 5 |
| 0440 | 30 | 92 30 293 | | SN | 5 | Washer | Bricka | 5 |
| 0450 | 31 | 92 55 845 | | | 3 | Rivet | Nit | 5 |
| 0460 | 32 | 69 24 997 | | | 1 | Cover | Täcklock | 5 |
| 0470 | 33 | 80 29 944 | | | 2 | Washer | Bricka | 5 |
| 0480 | 34 | 69 19 294 | | CV | 1 | Spoiler | Spoiler | 3 |
| 0490 | 34 | 69 95 484 | | 309) 1987-, CV | 1 | Spoiler | Spoiler | 3 |
| 0500 | 35 | 69 19 302 | | LH, CV | 1 | Spoiler | Spoiler | 3 |
| 0510 | 35 | 69 19 310 | | RH, CV | 1 | Spoiler | Spoiler | 3 |
| 0520 | 36 | 79 71 658 | | CV | 2 | Nut | Mutter | 5 |
| 0530 | 36A | 82 52 363 | | 1989-500) CV | 2 | Washer | Bricka | 5 |
| 0540 | 38 | 80 29 951 | | -1987, CV | 6 | Washer | Bricka | 5 |
| 0550 | 39 | 80 29 555 | | -1987, CV | 6 | Nut | Mutter | 5 |
| 0560 | 39 | 79 71 658 | | 1988-, CV | 6 | Nut | Mutter | 5 |

6. Rear Bakre
27. Not as separate spare part. Part of 7873789 Ej separat reservdel. Ingår i 7873789
28. Not as separate spare part. Part of 7873797 Ej separat reservdel. Ingår i 7873797
129. Not as separate spare part. Part of 7874381. Ej separat reservdel. Ingår i 7074381.
309. Without stop light Utan stoppljus
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-E08

## *Spoiler*

## *Spoiler*

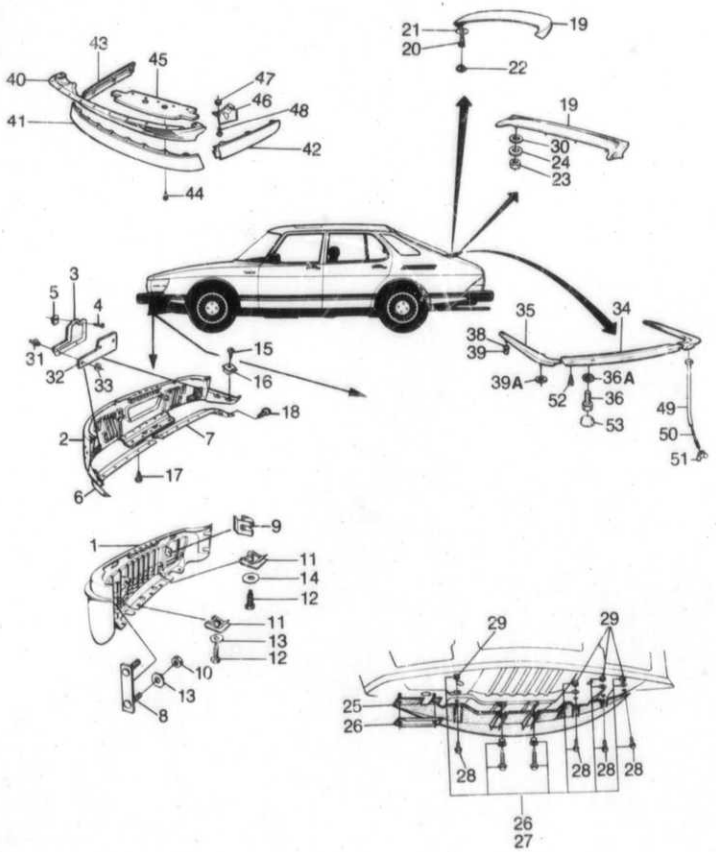


F2568 - 900

| 0960 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0570 | 39A | 92 30 293 | | CV | 6 | Washer | Bricka | 5 |
| 0580 | 40 | 92 94 265 | | 43,610), I, C | 1 | Spoiler | Spoiler | 3 |
| 0590 | 40 | 69 39 144 | | 43,570) TURBO | 1 | Spoiler | Spoiler | 3 |
| 0600 | 41 | 69 14 709 | | 43) | 1 | Spoiler | Spoiler | 3 |
| 0610 | 42 | 69 14 717 | | 43) LH | 1 | Spoiler | Spoiler | 3 |
| 0620 | 43 | 69 14 725 | | 43) RH | 1 | Spoiler | Spoiler | 3 |
| 0630 | 44 | 79 76 988 | | 43) | 20 | Screw | Skruv | 5 |
| 0640 | 44 | 79 75 790 | | 43,113) | 5 | Screw | Skruv | 5 |
| 0650 | 44 | 79 73 225 | | 43,114) | 5 | Screw | Skruv | 5 |
| 0660 | 45 | 69 38 369 | | 43) | 1 | Air shield | Luftskärm | 3 |
| 0670 | 46 | 69 38 781 | | 75) LH | 1 | Air shield | Luftskärm | 4 |
| 0680 | 46 | 69 38 799 | | 76) RH | 1 | Air shield | Luftskärm | 4 |
| 0690 | 47 | 79 71 658 | | | 2 | Nut | Mutter | 5 |
| 0700 | 48 | 79 76 947 | | | 2 | Screw | Skruv | 5 |
| 0710 | 49 | 69 95 211 | | LH, CV | 1 | Bracket | Hållare | 5 |
| 0720 | 49 | 69 95 229 | | RH, CV | 1 | Bracket | Hållare | 5 |
| 0730 | 50 | 69 95 237 | | CV | 2 | Bracket | Hållare | 5 |
| 0740 | 51 | 69 95 377 | | CV | 2 | Wing nut | Vingmutter | 5 |
| 0750 | 52 | 79 70 536 | | CV | 2 | Screw | Skruv | 6 |
| 0760 | 53 | 71 63 074 | | 1986, CV | 2 | Plug | Plugg | 5 |
| 0770 | 53 | 82 64 962 | | 1987-, CV | 2 | Plug | Plugg | 5 |
| 0780 | | 92 88 812 | | See page 8A-161, 5-G18 | 1 | Mounting kit | Monteringssats | 3 |
| 0790 | | 78 74 381 | | 6) 4SN | 1 | Spoiler | Spoiler | 5 |
| 0800 | | | | See page 8A-161, 5-G18 | | | | |
| 0810 | | 78 73 771 | | 5) | 1 | Mounting kit | Monteringssats | 3 |
| 0820 | | | | See page 8A-161, 5-G18 | | | | |
| 0830 | | 78 73 789 | | 6) CK | 1 | Spoiler | Spoiler | 3 |
| 0840 | | | | See page 8A-161, 5-G18 | | | | |
| 0850 | | 78 73 797 | | 6) -1988, SN | 1 | Spoiler | Spoiler | 3 |
| 0860 | | | | See page 8A-161, 5-G18 | | | | |

5. Front Främre
6. Rear Bakre
43. For cars with integrated bumpers För bilar med integrerade stötfångare
75. Ch. H7000489–, for cars with rh oilcooler Ch. H7000489–, för bilar med rh oljekylare
76. Ch. H7000489–, for cars with lh oilcooler Ch. H7000489–, för bilar med lh oljekylare
113. Ch. –H3009304, –H7016936
114. Ch. H3009305–, H7016937–
570. Grey Grå
610. Black Svart




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

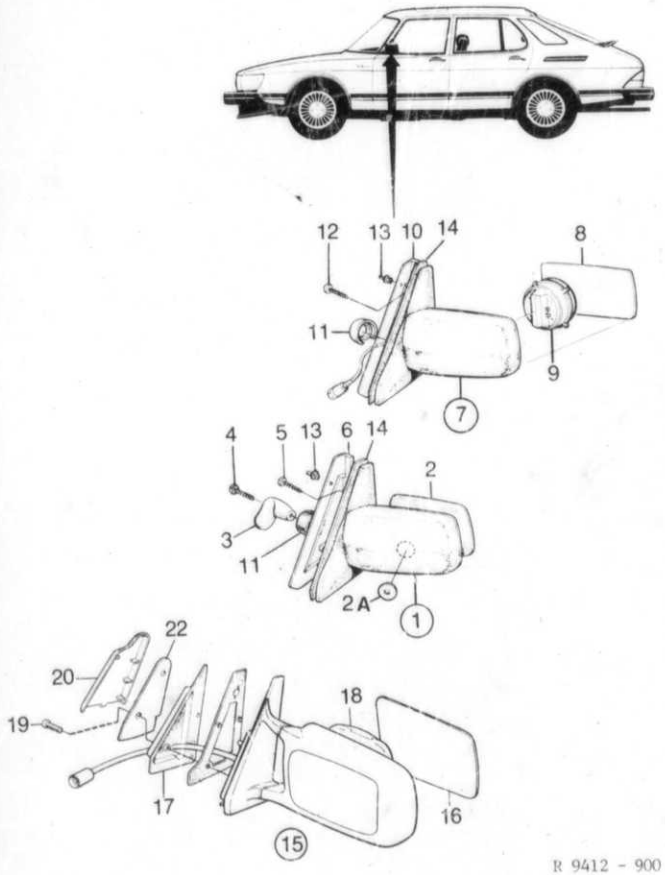


R 9412 - 900

External details, glass, sealings

Utvändiga detaljer, glas, tätningslister

# 5-E10

## *External mirror*

## *Utvändiga backspeglar*

| 0970 | Pos | Part No/Art nr | K. S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 98 33 104 | | LH, WIDE ANGLE | 1 | Mirror | Spegel | |
| 0020 | 1 | 98 33 112 | | RH, CONVEX GLASS | 1 | Mirror | Spegel | 3 |
| 0030 | 1 | 98 33 526 | | LH, JP, CONVEX GLASS | 1 | Mirror | Spegel | 3 |
| 0040 | 1 | 98 33 120 | | LH, RHD, CONVEX GLASS | 1 | Mirror | Spegel | 3 |
| 0050 | 1 | 98 33 138 | | RH, RHD, CONVEX GLASS | 1 | Mirror | Spegel | 3 |
| 0060 | 1 | 98 33 161 | | LH, US, CA, FLAT GLASS | 1 | Mirror | Spegel | 3 |
| 0070 | 1 | 98 33 179 | | RH, US, CA, CONVEX GLASS | 1 | Mirror | Spegel | 3 |
| 0080 | 1 | 98 33 146 | | LH, RHD, FLAT GLASS | 1 | Mirror | Spegel | 3 |
| 0090 | 1 | 98 33 153 | | RH, RHD, FLAT GLASS | 1 | Mirror | Spegel | 3 |
| 0100 | 1 | 98 37 204 | | RH, RHD, GB, WIDE ANGLE | 1 | Mirror | Spegel | 3 |
| 0110 | 2 | 98 33 286 | | LH, WIDE ANGLE | 1 | .Mirror glass | .Spegelglas | 3 |
| 0120 | 2 | 98 37 253 | | RH, RHD, GB, WIDE ANGLE | 1 | .Mirror glass | .Spegelglas | 3 |
| 0130 | 2 | 98 33 328 | | LH, CONVEX | 1 | .Mirror glass | .Spegelglas | 3 |
| 0140 | 2 | 98 33 302 | | RH, CONVEX | 1 | .Mirror glass | .Spegelglas | 3 |
| 0150 | 2 | 98 33 344 | | LH, FLAT | 1 | .Mirror glass | .Spegelglas | 3 |
| 0160 | 2 | 98 33 369 | | RH, RHD, FLAT | 1 | .Mirror glass | .Spegelglas | 3 |
| 0170 | 2 | 98 33 585 | | RH, FOR MIRROR 9833179 | 1 | .Mirror glass | .Spegelglas | 3 |
| 0180 | 2A | 97 36 950 | | | 2 | .Gasket | .Packning | 5 |
| 0190 | 3 | 98 47 377 | | LH | 1 | Lever | Spak | 5 |
| 0200 | 3 | 98 47 385 | | RH | 1 | Lever | Spak | 5 |
| 0210 | 4 | 79 72 789 | | | 2 | Screw | Skruv | 5 |
| 0220 | 5 | 79 72 813 | | | 4 | Screw | Skruv | 5 |
| 0230 | 6 | *94 72 408* | | LH NLS - USE 9708116 | 1 | Cover plate | Täckplåt | 4 |
| 0240 | 6 | *94 72 416* | | RH NLS - USE 9708124 | 1 | Cover plate | Täckplåt | 4 |
| 0250 | 7 | 98 33 203 | | 305) LH, WIDE ANGLE | 1 | Rear view mirror | Backspegel | 3 |
| 0260 | 7 | 98 33 211 | | 305) RH, CONVEX GLASS | 1 | Rear view mirror | Backspegel | 3 |
| 0270 | 7 | 98 33 229 | | 305) LH, JP, CONVEX GLASS | 1 | Rear view mirror | Backspegel | 3 |
| 0280 | | | | | | | | |
| 0290 | 7 | 98 33 187 | | -1987,305) LH, US, CA, FLAT GLASS | 1 | Rear view mirror | Backspegel | 3 |
| 0300 | | | | | | | | |
| 0310 | 7 | 95 30 098 | | 1988,305) LH, HEATED, US, CA, FLAT GLASS | 1 | Rear view mirror | Backspegel | 3 |
| 0320 | | | | | | | | |
| 0330 | 7 | 95 91 488 | | 1989-,305) LH, HEATED, US, CA, FLAT GLASS | 1 | Rear view mirror | Backspegel | 3 |
| 0340 | | | | | | | | |
| 0350 | 7 | 98 33 195 | | -1987,305) RH, US, CA | 1 | Rear view mirror | Backspegel | 3 |
| 0360 | 7 | 95 30 106 | | 1988,305) RH, HEATED, US, CA, CONVEX GLASS | 1 | Rear view mirror | Backspegel | 3 |
| 0370 | | | | | | | | |
| 0380 | 7 | 95 91 744 | | 1989-,305) RH, HEATED, US, CA, CONVEX GLASS | 1 | Rear view mirror | Backspegel | 3 |
| 0390 | | | | | | | | |
| 0400 | 7 | 98 33 260 | | 305) LH, RHD, FLAT GLASS | 1 | Rear view mirror | Backspegel | 3 |
| 0410 | 7 | 98 33 278 | | 305) RH, RHD, FLAT GLASS | 1 | Rear view mirror | Backspegel | 3 |
| 0420 | 7 | 98 33 245 | | 305) LH, RHD, CONVEX GLASS | 1 | Rear view mirror | Backspegel | 3 |
| 0430 | | | | | | | | |
| 0440 | 7 | 98 33 252 | | 305) RH, RHD, WIDE ANGLE | 1 | Rear view mirror | Backspegel | 3 |
| 0450 | 7 | 98 37 196 | | 305) RH, RHD, GB, WIDE ANGLE | 1 | Rear view mirror | Backspegel | 3 |
| 0460 | | | | | | | | |
| 0470 | 8 | 98 33 559 | | LH, WIDE ANGLE | 1 | .Mirror glass | .Spegelglas | 3 |
| 0480 | 8 | 98 37 246 | | RH, RHD, WIDE ANGLE | 1 | .Mirror glass | .Spegelglas | 3 |
| 0490 | 8 | 98 33 575 | | RH, CONVEX | 1 | .Mirror glass | .Spegelglas | 3 |
| 0500 | 8 | 98 33 591 | | LH, CONVEX | 1 | .Mirror glass | .Spegelglas | 3 |
| 0510 | 8 | 98 33 518 | | LH, FLAT | 1 | .Mirror glass | .Spegelglas | 3 |
| 0520 | 8 | 98 33 617 | | RH, FLAT | 1 | .Mirror glass | .Spegelglas | 3 |
| 0530 | 8 | 96 33 534 | | -1987, RH, US, CA,CONVEX | 1 | .Mirror glass | .Spegelglas | 3 |
| 0540 | 8 | 97 97 093 | | 1988-, LH, HEATED, FLAT | 1 | .Mirror glass | .Spegelglas | 3 |
| 0550 | 8 | 97 97 101 | | 1988-, RH, HEATED,CONVEX | 1 | .Mirror glass | .Spegelglas | 3 |
| 0560 | 9 | 94 72 572 | | | 2 | .Drive unit | .Drivenhet | 5 |
| 0570 | 10 | 94 72 424 | | LH | 1 | Cover | Kåpa | 4 |
| 0580 | 10 | 94 72 432 | | RH | 1 | Cover | Kåpa | 4 |
| 0590 | 11 | 94 68 902 | | | 2 | Seal | Tätning | 5 |
| 0600 | 12 | 79 72 813 | | | 4 | Screw | Skruv | 5 |
| 0610 | 13 | 94 68 893 | | | 2 | Clip | Clips | 5 |
| 0620 | 14 | 94 65 436 | | LH | 1 | Gasket | Packning | 5 |

305. Electrically operated Elektrisk manövrering




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

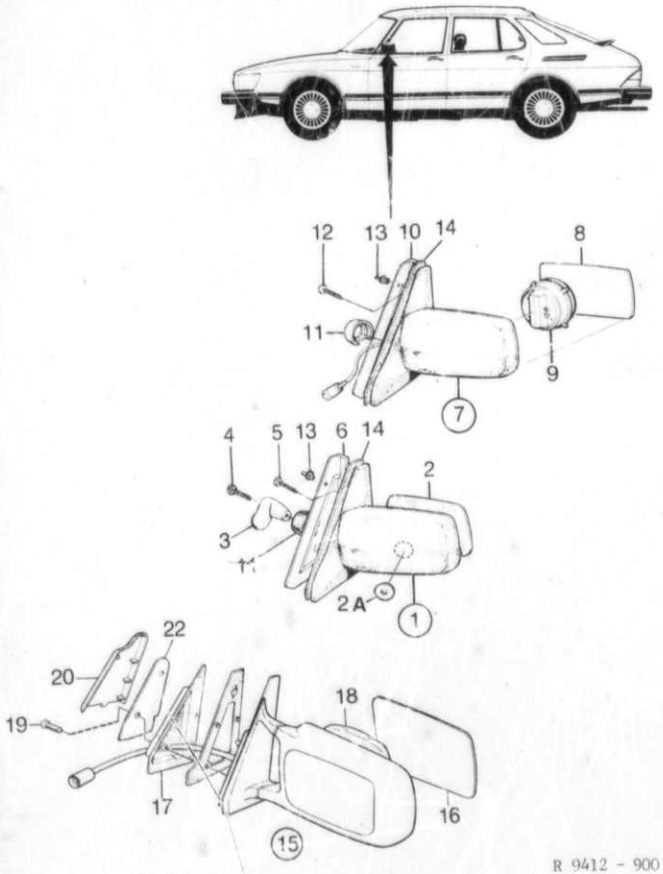


R 9412 - 900

External details, glass, sealings

Utvändiga detaljer, glas, tätningslister

# 5-E12

## *External mirror*

## *Utvändiga backspeglar*

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 14 | 94 65 444 | | RH | 1 | Gasket | Packning | 5 |
| 15 | 98 83 232 | | -1987,305) LH, FLAT GLASS, CV, US | 1 | Rear view mirror | Backspegel | 3 |
| 15 | *95 32 334* | | 1988,305) LH, FLAT GLASS, CV, US, HEATED NLS - USE 4168324 | 1 | Rear view mirror | Backspegel | 3 |
| 15 | *95 91 496* | | 1989-,305) LH, FLAT GLASS, CV, US, CA,HEATED NLS - USE 4168324 | 1 | Rear view mirror | Backspegel | 3 |
| 15 | 98 83 240 | | -1987,305) RH, CONVEX GLASS, CV, US | 1 | Rear view mirror | Backspegel | 3 |
| 15 | *95 32 342* | | 1988,305) RH, CONVEX GLASS, CV, US, HEATED NLS - USE 4168373 | 1 | Rear view mirror | Backspegel | 3 |
| 15 | *95 91 736* | | 1989-,305) RH, CONVEX GLASS, CV, US, CA,HEATED NLS - USE 4168373 | 1 | Rear view mirror | Backspegel | 3 |
| 15 | *96 15 287* | | 305) LH, CV, JP NLS - USE 4168316 | 1 | Rear view mirror | Backspegel | 3 |
| 15 | *96 15 295* | | 305) RH, CV, SE,FI,EU,JP NLS - USE 4168366 | 1 | Rear view mirror | Backspegel | 3 |
| 15 | *96 15 303* | | 305) LH, CV, SE, FI, EU NLS - USE 4168308 | 1 | Rear view mirror | Backspegel | 3 |
| 15 | 96 15 311 | | 305) LH, CV, AU | 1 | Rear view mirror | Backspegel | 3 |
| 15 | *96 15 329* | | 305) RH, CV, AU NLS - USE 4168340 | 1 | Rear view mirror | Backspegel | 3 |
| 15 | *96 15 337* | | 305) LH, CV, GB, FE NLS - USE 4168381 | 1 | Rear view mirror | Backspegel | 3 |
| 15 | *96 15 345* | | 305) RH, CV, FE NLS - USE 4168332 | 1 | Rear view mirror | Backspegel | 3 |
| 15 | *96 15 352* | | 305) RH, CV, GB NLS - USE 4168357 | 1 | Rear view mirror | Backspegel | 3 |
| 16 | 96 17 226 | | -1987, LH, FLAT CV, US | 1 | .Mirror glass | .Spegelglas | 3 |
| 16 | 97 97 093 | | 1988, LH, FLAT CV, US | 1 | .Mirror glass | .Spegelglas | 3 |
| 16 | 95 91 868 | | 1989-, LH, FLAT CV, US | 1 | .Mirror glass | .Spegelglas | 3 |
| 16 | 96 17 267 | | -1987, RH, CONVEX CV, US | 1 | .Mirror glass | .Spegelglas | 3 |
| 16 | 97 97 101 | | 1988, RH, CONVEX CV, US | 1 | .Mirror glass | .Spegelglas | 3 |
| 16 | 95 91 660 | | 1989-, RH, CONVEX CV, US | 1 | .Mirror glass | .Spegelglas | 3 |
| 16 | 96 17 242 | | LH, CV, JP, GB, FE | 1 | .Mirror glass | .Spegelglas | 3 |
| 16 | 96 17 259 | | RH, CV, SE, FI, EU, JP, FE | 1 | .Mirror glass | .Spegelglas | 3 |
| 16 | 96 17 275 | | LH, CV, SE, FI, EU | 1 | .Mirror glass | .Spegelglas | 3 |
| 16 | 96 17 226 | | LH, CV, AU | 1 | .Mirror glass | .Spegelglas | 3 |
| 16 | 96 17 234 | | RH, CV, AU | 1 | .Mirror glass | .Spegelglas | 3 |
| 16 | 96 17 283 | | RH, CV, GB | 1 | .Mirror glass | .Spegelglas | 3 |
| 17 | 97 53 419 | | LH, CV | 1 | .Gasket | .Packning | 5 |
| 17 | 97 53 427 | | RH, CV | 1 | .Gasket | .Packning | 5 |
| 18 | 97 76 584 | | CV | 2 | .Drive unit | .Drivenhet | 5 |
| 19 | *94 75 666* | | CV NLS - USE 7972813 | 8 | .Screw | .Skruv | 5 |
| 20 | 98 83 331 | | LH, CV | 1 | Cover | Täcklock | 4 |
| 20 | 98 83 349 | | RH, CV | 1 | Cover | Tacklock | 4 |
| 22 | 98 82 093 | | CV | 2 | Seal | Tätning | 5 |
| | 85 46 970 | | See page 8A-165, 5-G22 | X | Rear view mirror kit | Backspegelsats | 4 |
| | 85 46 962 | | RHD See page 8A-165, 5-G22 | X | Rear view mirror kit | Backspegelsats | 4 |

305. Electrically operated Elektrisk manövrering



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-E14

External details, glass, sealings
*Aero kit, -1986*

Utvändiga detaljer, glas, tätningslister
*Aero kit, -1986*

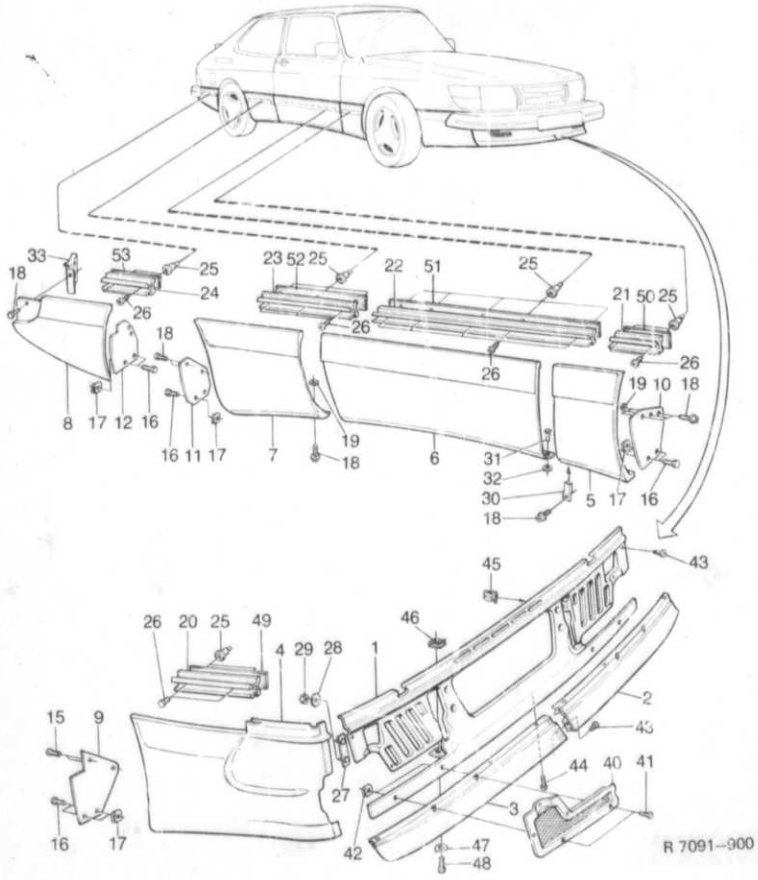


| 0590 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 69 13 651 | | | 1 | Spoiler | Spoiler | 3 |
| 0020 | 2 | 69 13 636 | | LH | 1 | Spoiler | Spoiler | 3 |
| 0030 | 3 | 69 13 644 | | RH | 1 | Spoiler | Spoiler | 3 |
| 0040 | 4 | 69 11 093 | | LH | 1 | Shield | Sköld | 4 |
| 0050 | 4 | 69 11 101 | | RH | 1 | Shield | Sköld | 4 |
| 0060 | 5 | 69 12 430 | | LH | 1 | Shield | Sköld | 2 |
| 0070 | 5 | 69 12 448 | | RH | 1 | Shield | Sköld | 2 |
| 0080 | 6 | 69 12 539 | | LH | 1 | Shield | Sköld | 2 |
| 0090 | 6 | 69 12 547 | | RH | 1 | Shield | Sköld | 2 |
| 0100 | 7 | 69 11 176 | | LH | 1 | Shield | Sköld | 2 |
| 0110 | 7 | 69 11 184 | | RH | 1 | Shield | Sköld | 2 |
| 0120 | 8 | 69 11 135 | | LH | 1 | Shield | Sköld | 4 |
| 0130 | 8 | 69 11 143 | | RH | 1 | Shield | Sköld | 4 |
| 0140 | 9 | 92 93 630 | | LH | 1 | End piece | Ändstycke | 5 |
| 0150 | 9 | 92 93 648 | | RH | 1 | End piece | Ändstycke | 5 |
| 0160 | 10 | 92 85 875 | | | 2 | End piece | Ändstycke | 5 |
| 0170 | 11 | 92 85 867 | | | 2 | End piece | Ändstycke | 5 |
| 0180 | 12 | 92 85 859 | | | 2 | End piece | Ändstycke | 5 |
| 0190 | | | | | | | | |
| 0200 | 15 | 79 75 790 | | | 4 | Screw | Skruv | 5 |
| 0210 | 16 | 75 75 774 | | | 16 | Screw | Skruv | 5 |
| 0220 | 17 | 79 68 001 | | | 16 | Clip nut | Clipsmutter | 5 |
| 0230 | 18 | 79 75 782 | | | 20 | Screw | Skruv | 5 |
| 0240 | 19 | 92 30 293 | | | 20 | Washer | Bricka | 5 |
| 0250 | | | | | | | | |
| 0260 | 20 | 69 10 855 | | LH | 1 | Attaching profile | Fästprofil | 5 |
| 0270 | 20 | 69 10 863 | | RH | 1 | Attaching profile | Fästprofil | 5 |
| 0280 | 21 | 92 93 697 | | LH | 1 | Attaching profile | Fästprofil | |
| 0290 | 21 | 69 15 201 | | RH | 1 | Attaching profile | Fästprofil | 5 |
| 0300 | 22 | 69 10 830 | | LH | 1 | Attaching profile | Fästprofil | 5 |
| 0310 | 22 | 69 10 848 | | RH | 1 | Attaching profile | Fästprofil | 5 |
| 0320 | 23 | 92 93 739 | | | 2 | Attaching profile | Fästprofil | 5 |
| 0330 | 24 | 69 10 871 | | LH | 1 | Attaching profile | Fästprofil | 5 |
| 0340 | 24 | 69 10 889 | | RH | 1 | Attaching profile | Fästprofil | 5 |
| 0350 | 25 | 69 11 804 | | | 28 | Bushing | Bussning | 4 |
| 0360 | 26 | 79 22 354 | | | 28 | Screw | Skruv | 5 |
| 0370 | 27 | 82 66 884 | | | 2 | Bracket | Fäste | 5 |
| 0380 | 28 | 82 66 835 | | | 4 | Washer | Bricka | 5 |
| 0390 | 29 | 80 29 555 | | | 4 | Nut | Mutter | 5 |
| 0400 | 30 | 69 21 415 | | | 2 | Brace | Bygel | 5 |
| 0410 | 31 | 69 16 977 | | | 12 | Blind rivet | Blindnit | 5 |
| 0420 | 32 | 80 73 090 | | | 12 | Washer | Bricka | 5 |
| 0430 | 33 | 92 85 891 | | LH | 1 | Bracket | Fäste | 5 |
| 0440 | 33 | 92 85 909 | | RH | 1 | Bracket | Fäste | 5 |
| 0450 | 40 | 92 91 121 | | LH | 1 | Frame | Ram | 5 |
| 0460 | 40 | 92 91 139 | | RH | 1 | Frame | Ram | 5 |
| 0470 | 41 | 79 77 036 | | | 10 | Screw | Skruv | 5 |
| 0480 | 42 | 92 66 545 | | | 10 | Clip | Clips | 5 |
| 0490 | 43 | 79 70 601 | | | 5 | Screw | Skruv | 5 |
| 0500 | 44 | *80 59 255* | | NLS - USE 7972789 | 6 | Screw | Skruv | 5 |
| 0510 | 45 | 82 68 500 | | | 2 | Clip | Clips | 5 |
| 0520 | 46 | 92 36 753 | | | 3 | Clip | Clips | 5 |
| 0530 | 47 | 82 66 835 | | | 3 | Washer | Bricka | 5 |
| 0540 | 48 | 79 73 621 | | | 3 | Screw | Skruv | 5 |
| 0550 | 49 | 69 19 518 | | | 2 | Spacer | Mellanlägg | 3 |
| 0560 | 50 | 69 19 195 | | | 2 | Spacer | Mellanlägg | 3 |
| 0570 | 51 | 69 19 849 | | | 2 | Spacer | Mellanlägg | 3 |
| 0580 | 52 | 69 19 542 | | | 2 | Spacer | Mellanlägg | 3 |
| 0590 | 53 | 69 19 559 | | | 2 | Spacer | Mellanlägg | 3 |
| 0600 | | 92 88 812 | | SPOILER | 1 | Mounting kit | Monteringssats | 3 |
| 0610 | | 69 14 352 | | 1028 MM | X | Strip | List | 3 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-E16

External details, glass, sealings
***Aero kit, 1987-***

Utvändiga detaljer, glas, tätningslister
***Aero kit, 1987-***

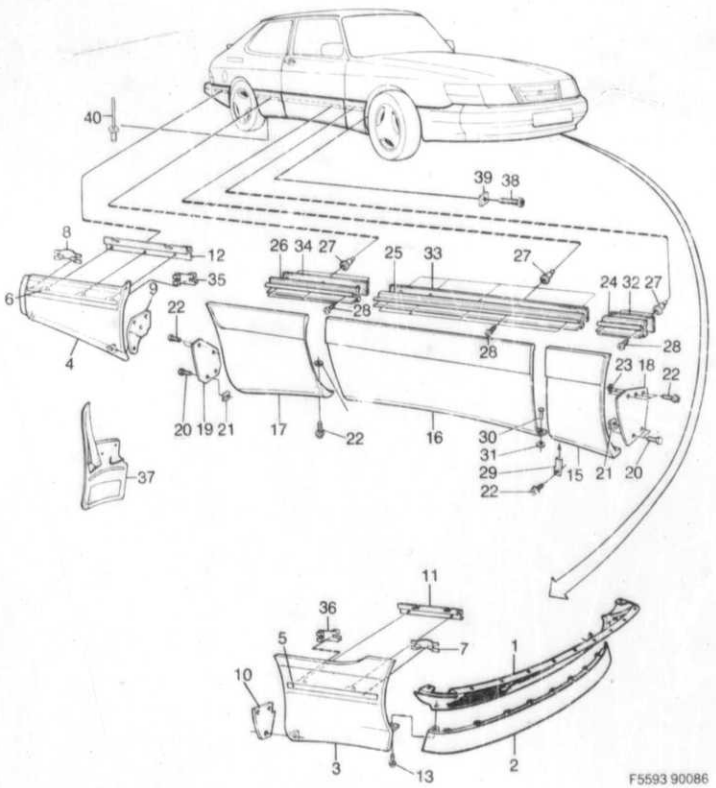


| 0990 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 69 39 144 | | 570) | 1 | Spoiler | Spoiler | 3 |
| 0020 | 2 | 69 14 709 | | | 1 | Spoiler | Spoiler | 3 |
| 0030 | 3 | 69 15 110 | | -1987, LH | 1 | Shield | Sköld | 2 |
| 0040 | 3 | 69 42 551 | | 1988-, LH | 1 | Shield | Sköld | 2 |
| 0050 | 3 | 69 15 128 | | -1987, RH | 1 | Shield | Sköld | 2 |
| 0060 | 3 | 69 42 569 | | 1988-, RH | 1 | Shield | Sköld | 2 |
| 0070 | 4 | 69 15 078 | | LH | 1 | Shield | Sköld | 2 |
| 0080 | 4 | 69 38 435 | | 1988-, LH, SN, CV | 1 | Shield | Sköld | 2 |
| 0090 | 4 | 69 15 086 | | RH | 1 | Shield | Sköld | 2 |
| 0100 | 4 | 69 38 443 | | 1988-, RH, SN, CV | 1 | Shield | Sköld | 2 |
| 0110 | 5 | 69 40 340 | | | 2 | .Decor strip | .Dekorlist | 2 |
| 0120 | 6 | 69 40 373 | | | 2 | .Decor strip | .Dekorlist | 2 |
| 0130 | 7 | 69 59 142 | | | 2 | .Spring | .Fjäder | 4 |
| 0140 | 8 | 69 59 142 | | | 2 | .Spring | .Fjäder | 4 |
| 0150 | 9 | 69 28 220 | | 7) LH | 1 | End piece | Ändstycke | 3 |
| 0160 | 9 | 69 38 625 | | 1988-,7) LH, SN, CV | 1 | End piece | Ändstycke | 3 |
| 0170 | 9 | 69 28 238 | | 7) RH | 1 | End piece | Ändstycke | 3 |
| 0180 | 9 | 69 38 633 | | 1988-,7) RH, SN, CV | 1 | End piece | Ändstycke | 3 |
| 0190 | 10 | 69 15 094 | | LH | 1 | End piece | Ändstycke | 3 |
| 0200 | 10 | 69 28 303 | | RH | 1 | End piece | Ändstycke | 3 |
| 0210 | 11 | 69 37 148 | | LH | 1 | Attaching plate | Fästplatta | 5 |
| 0220 | 11 | 69 37 155 | | RH | 1 | Attaching plate | Fästplatta | 5 |
| 0230 | 12 | 69 37 346 | | LH | 1 | Attaching fitting | Fästbeslag | 5 |
| 0240 | 12 | 69 37 353 | | RH | 1 | Attaching fitting | Fästbeslag | 5 |
| 0250 | 13 | 79 76 988 | | | 19 | Screw | Skruv | 5 |
| 0260 | 15 | 69 12 430 | | LH | 1 | Shield | Sköld | 2 |
| 0270 | 15 | 69 12 448 | | RH | 1 | Shield | Sköld | 2 |
| 0280 | 16 | 69 12 539 | | LH | 1 | Shield | Sköld | 2 |
| 0290 | 16 | 69 12 547 | | RH | 1 | Shield | Sköld | 2 |
| 0300 | 17 | 69 11 176 | | LH | 1 | Shield | Sköld | 2 |
| 0310 | 17 | 69 11 184 | | RH | 1 | Shield | Sköld | 2 |
| 0320 | 18 | 92 85 875 | | | 2 | End piece | Ändstycke | 5 |
| 0330 | 19 | 92 85 867 | | | 2 | End piece | Ändstycke | 5 |
| 0340 | 20 | 79 75 774 | | | 16 | Screw | Skruv | 5 |
| 0350 | 21 | 79 68 001 | | | 16 | Clip nut | Clipsmutter | 5 |
| 0360 | 22 | 79 75 782 | | | 20 | Screw | Skruv | 5 |
| 0370 | 23 | 92 30 293 | | | 20 | Washer | Bricka | 5 |
| 0380 | 24 | 92 93 697 | | LH | 1 | Attaching profile | Fästprofil | |
| 0390 | 24 | 69 15 201 | | RH | 1 | Attaching profile | Fästprofil | 5 |
| 0400 | 25 | 69 10 830 | | LH | 1 | Attaching profile | Fästprofil | 5 |
| 0410 | 25 | 69 10 848 | | RH | 1 | Attaching profile | Fästprofil | 5 |
| 0420 | 26 | 92 93 739 | | | 2 | Attaching profile | Fästprofil | 5 |
| 0430 | 27 | 69 11 804 | | | 16 | Bushing | Bussning | 4 |
| 0440 | 28 | 79 22 354 | | | 16 | Screw | Skruv | 5 |
| 0450 | 29 | 69 21 415 | | | 2 | Brace | Bygel | 5 |
| 0460 | 30 | 69 16 977 | | | 12 | Blind rivet | Blindnit | 5 |
| 0470 | 31 | 90 73 090 | | | 12 | Washer | Bricka | 5 |
| 0480 | 32 | 69 19 195 | | | 2 | Spacer | Mellanlägg | 3 |
| 0490 | 33 | 69 19 849 | | | 2 | Spacer | Mellanlägg | 3 |
| 0500 | 34 | 69 19 542 | | | 2 | Spacer | Mellanlägg | 3 |
| 0510 | | 69 14 352 | | 1028 MM | X | Strip | List | 3 |
| 0520 | 35 | 69 40 175 | | 5) LH | 2 | Clamp | Klammer | 5 |
| 0530 | | | | 6) RH | | | | |
| 0540 | 36 | 69 40 183 | | 5) RH | 2 | Clamp | Klammer | 5 |
| 0550 | | | | 6) LH | | | | |
| 0560 | 37 | 69 37 650 | | LH, AU, JP, CA | 1 | Baffle | Stänkskydd | 3 |
| 0570 | 37 | 69 37 643 | | RH, AU, JP, CA | 1 | Baffle | Stänkskydd | 3 |
| 0580 | 38 | 79 70 601 | | 1988- | 4 | Screw | Skruv | 5 |
| 0590 | 39 | 92 30 293 | | 1988- | 4 | Washer | Bricka | 5 |

5. Front Främre
6. Rear Bakre
7. For cars without rear mud guard. För bilar utan bakre stänkskydd.

570. Grey Grå



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-E18

External details, glass, sealings
***Aero kit, 1987-***

Utvändiga detaljer, glas, tätningslister
***Aero kit, 1987-***

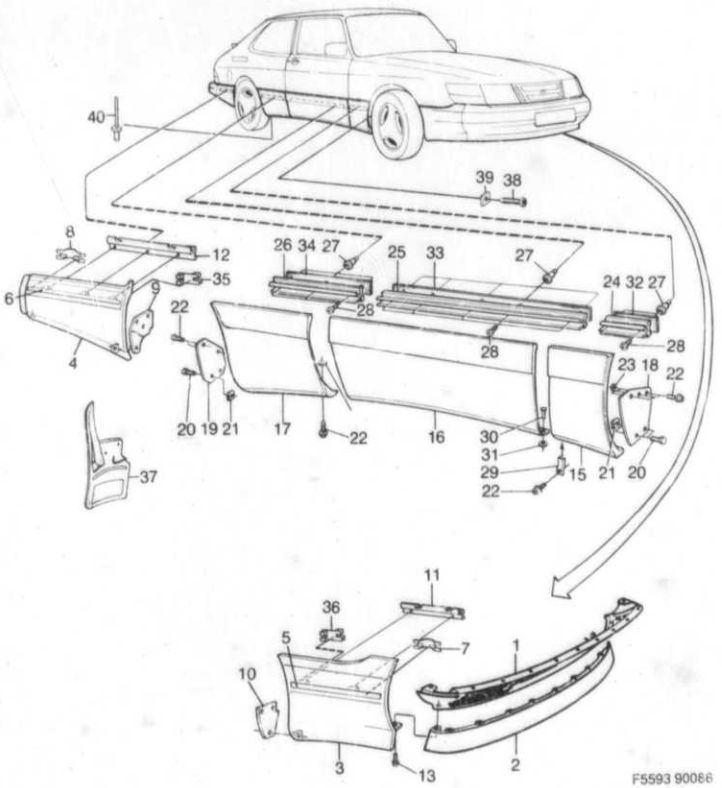



| 0990 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0600 | 40 | 82 35 178 | | 1988- | 4 | Pop rivet | Popnit | 5 |


MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

8A GROUP INDEX

| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

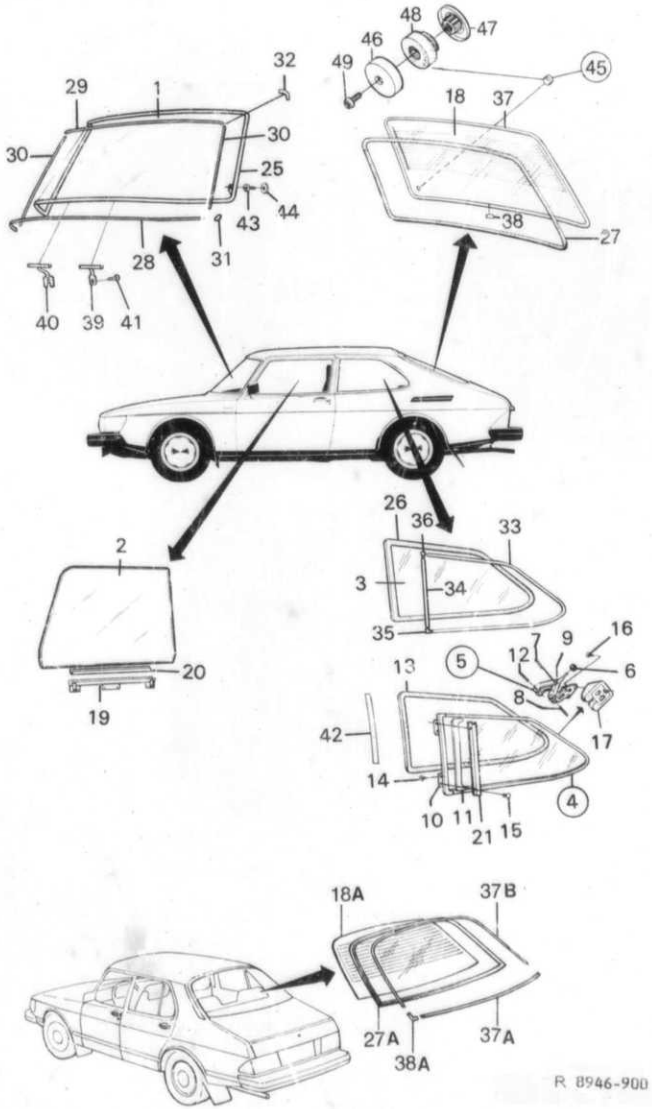


# 5-E20

External details, glass, sealings

**Glass, sealings 3CK, 2SN**

Utvändiga detaljer, glas, tätningslister

**Glas,tätn. lister 3CK,2SN**

| 1000 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 82 57 511 | | | 1 | Windscreen | Vindruta | |
| 0020 | 1 | 92 80 439 | | 310) | 1 | Windscreen | Vindruta | 3 |
| 0030 | | | | | | | | |
| 0040 | 2 | 82 73 633 | | LH | 1 | Door window | Dörruta | 4 |
| 0050 | 2 | 92 80 355 | | 310) LH | 1 | Door window | Dörruta | |
| 0060 | 2 | 82 73 641 | | RH | 1 | Door window | Dörruta | 5 |
| 0070 | 2 | 92 80 363 | | 310) RH | 1 | Door window | Dörruta | |
| 0080 | | | | | | | | |
| 0090 | 3 | 82 87 732 | | LH | 1 | Side window | Sidoruta | 5 |
| 0100 | 3 | 82 87 740 | | RH | 1 | Side window | Sidoruta | 5 |
| 0110 | 4 | 92 21 276 | | 220,311) LH | 1 | Side window | Sidoruta | 5 |
| 0120 | 4 | 69 41 918 | | 221,311) LH | 1 | Side window | Sidoruta | 5 |
| 0130 | 4 | *92 21 284* | | 220,311) RH NLS - USE 6941926, 8253197 | 1 | Side window | Sidoruta | 5 |
| 0140 | 4 | 69 41 926 | | 221,311) RH | 1 | Side window | Sidoruta | 5 |
| 0150 | 4 | *92 81 999* | | 220,310,311) LH NLS - USE 6941934, 8253197 | 1 | Side window | Sidoruta | 5 |
| 0160 | 4 | 69 41 934 | | 221,310,311) LH | 1 | Side window | Sidoruta | 5 |
| 0170 | 4 | 92 82 005 | | 220,310,311) RH | 1 | Side window | Sidoruta | 5 |
| 0180 | 4 | 69 41 942 | | 221,310,311) RH | 1 | Side window | Sidoruta | 5 |
| 0190 | 4 | *92 82 054* | | 220,310,311) LH BLACK FRAME NLS - USE 6941959, 8253197 | 1 | Side window | Sidoruta | 5 |
| 0210 | 4 | 69 41 959 | | 221,310,311) LH BLACK FRAME | 1 | Side window | Sidoruta | 5 |
| 0230 | 4 | 92 82 062 | | 220,310,311) RH BLACK FRAME | 1 | Side window | Sidoruta | 5 |
| 0250 | 4 | 69 41 967 | | 221,310,311) RH BLACK FRAME | 1 | Side window | Sidoruta | 5 |
| 0270 | 5 | 84 01 150 | | | 2 | .Lock | .Lås | 4 |
| 0280 | 6 | 73 40 839 | | | 2 | ..Ball | ..Kula | 5 |
| 0290 | 7 | 79 18 279 | | | 2 | ..Roll pin | ..Spännstift | 5 |
| 0300 | 8 | *79 18 253* | | NLS | 2 | ..Roll pin | ..Spännstift | 5 |
| 0310 | 9 | *79 48 995* | | NLS | 2 | ..Washer | ..Bricka | 5 |
| 0320 | 10 | 82 53 197 | | 220) | 4 | .Hinge | .Gångjärn | 5 |
| 0330 | 10 | 69 41 892 | | 221) | 4 | .Hinge | .Gångjärn | 5 |
| 0340 | 11 | 82 86 973 | | LH | 1 | .Decor strip | .Dekorlist | 4 |
| 0350 | 11 | 82 86 981 | | RH | 1 | .Decor strip | .Dekorlist | 4 |
| 0360 | 11 | 82 88 516 | | 610) LH | 1 | .Decor strip | .Dekorlist | 4 |
| 0370 | 11 | 82 88 524 | | 610) RH | 1 | .Decor strip | .Dekorlist | 4 |
| 0380 | 12 | 79 18 279 | | | 2 | Roll pin | Spännstift | 5 |
| 0390 | 13 | 82 51 639 | | | 2 | Sealing strip | Tätningslist | 5 |
| 0400 | 14 | 79 36 701 | | | 8 | Screw | Skruv | |
| 0410 | 14 | 92 91 345 | | 610) | 8 | Screw | Skruv | 5 |
| 0420 | 15 | 92 89 844 | | | 6 | Pop rivet | Popnit | 5 |
| 0430 | 16 | 79 22 446 | | | 6 | Screw | Skruv | 5 |
| 0440 | 17 | 73 44 476 | | | 2 | Crash pad | Stötskydd | 5 |
| 0450 | 18 | *82 75 240* | | 109) WITHOUT HOLE NLS - USE 6938013, 6938195 | 1 | Rear window | Bakruta | 4 |
| 0460 | 18 | 92 80 488 | | 310) WITHOUT HOLE | 1 | Rear window | Bakruta | 4 |
| 0470 | 18 | 69 38 013 | | 110) FOR WIPER | 1 | Rear window | Bakruta | 4 |
| 0480 | 18 | 69 38 187 | | 110,310) FOR WIPER | 1 | Rear window | Bakruta | 4 |
| 0490 | 18A | 92 20 161 | | 2SN | 1 | Rear window | Bakruta | 5 |
| 0500 | 18A | 92 80 496 | | 310) 2SN | 1 | Rear window | Bakruta | 4 |
| 0510 | 19 | *69 18 361* | | -1986 NLS - USE 6938096 | 2 | Window bracket | Rutfäste | 5 |
| 0520 | 19 | 69 38 096 | | 1987- | 2 | Window bracket | Rutfäste | 5 |

109. Ch. --H2013759, --H3006478, --H7011884
110. Ch. H2013760--, H3006479--, H7011885--
220. Ch. --J3020184, --J7029502.
221. Ch. J3020185--, J7029503--.
310. Bronze-colour Bronsfärg
311. Opening Öppningsbar
610. Black Svart




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

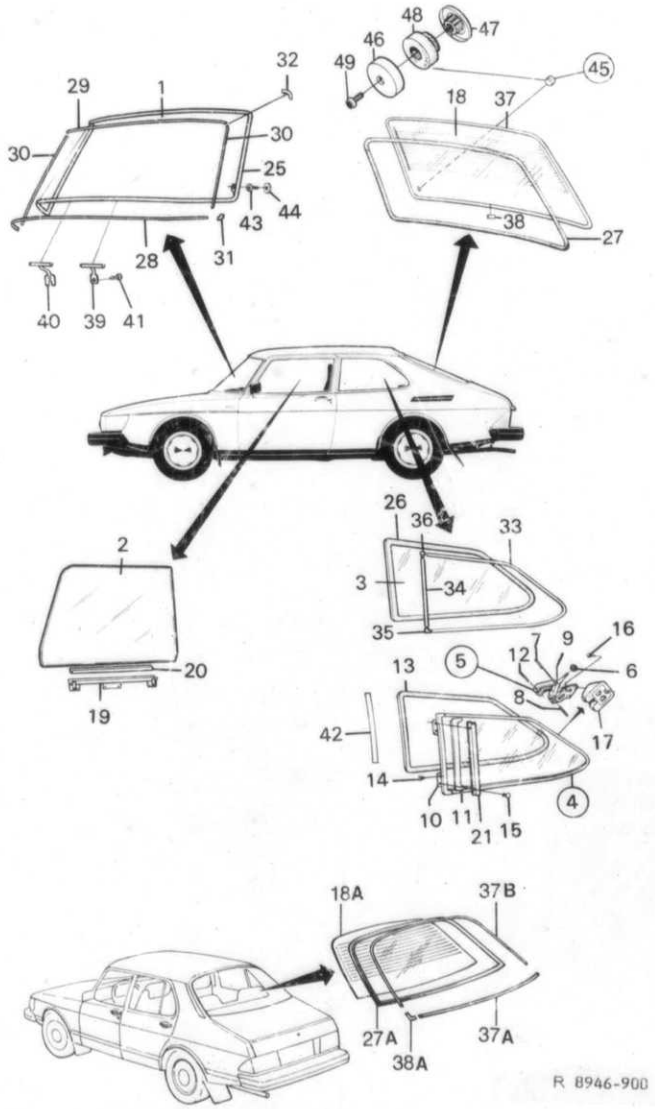


# 5-E22

External details, glass, sealings

**Glass, sealings 3CK, 2SN**

Utvändiga detaljer, glas, tätningslister

**Glas,tätn. lister 3CK,2SN**

| 1000 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0530 | 20 | 92 87 111 | | | 2 | Spacer | Mellanlägg | 5 |
| 0540 | 21 | 92 37 033 | | LH | 1 | Cover plate | Täckplåt | 5 |
| 0550 | 21 | 92 37 041 | | RH | 1 | Cover plate | Täckplåt | 5 |
| 0560 | 25 | 92 93 051 | | | 1 | Rubber moulding | Gummilist | 4 |
| 0570 | 26 | 92 88 192 | | LH | 1 | Rubber moulding | Gummilist | 5 |
| 0580 | 26 | 92 88 200 | | RH | 1 | Rubber moulding | Gummilist | 5 |
| 0590 | 27 | 92 31 499 | | | 1 | Rubber moulding | Gummiist | 4 |
| 0600 | 27A | 92 35 516 | | 2SN | 1 | Rubber moulding | Gummilist | 4 |
| 0610 | 28 | 92 26 481 | | LOWER | 1 | Decor strip | Dekorlist | 3 |
| 0620 | 28 | 82 69 433 | | 610) LOWER | 1 | Decor strip | Dekorlist | 3 |
| 0630 | 29 | *82 36 762* | | NLS - USE 9226473 | 1 | Decor strip | Dekorlist | 3 |
| 0640 | 29 | 82 37 265 | | 610) | 1 | Decor strip | Dekorlist | 3 |
| 0650 | 30 | 92 26 499 | | | 2 | Decor strip | Dekorlist | 3 |
| 0660 | 30 | 82 69 425 | | 610) | 2 | Decor strip | Dekorlist | 3 |
| 0670 | 31 | 92 93 085 | | LOWER | 2 | Connector | Skarvstycke | 3 |
| 0680 | 31 | 69 11 325 | | 610) LOWER | 2 | Connector | Skarvstycke | 3 |
| 0690 | 32 | 92 93 069 | | UPPER | 2 | Connector | Skarvstycke | 3 |
| 0700 | 32 | 69 11 317 | | 610) UPPER | 2 | Connector | Skarvstycke | 3 |
| 0710 | 33 | 82 87 773 | | LH | 1 | Decor strip | Dekorlist | 4 |
| 0720 | 33 | 82 87 781 | | RH | 1 | Decor strip | Dekorlist | 4 |
| 0730 | 34 | 82 87 799 | | | 2 | Decor strip | Dekorlist | 4 |
| 0740 | 35 | 82 87 765 | | LOWER | 2 | Connector | Skarvstycke | 3 |
| 0750 | 36 | 82 87 757 | | UPPER | 2 | Connector | Skarvstycke | 3 |
| 0760 | 37 | 92 33 263 | | | 1 | Decor strip | Dekorlist | 3 |
| 0770 | 37 | 92 33 271 | | 610) | 1 | Decor strip | Dekorlist | 3 |
| 0780 | 37A | 92 26 523 | | LOWER, 2SN | 1 | Decor strip | Dekorlist | 3 |
| 0790 | 37A | 92 22 936 | | 610) LOWER, 2SN | 1 | Decor strip | Dekorlist | 3 |
| 0800 | 37B | 92 26 531 | | UPPER, 2SN | 1 | Decor strip | Dekorlist | 3 |
| 0810 | 37B | 92 22 951 | | 610) UPPER, 2SN | 1 | Decor strip | Dekorlist | 3 |
| 0820 | 38 | 92 33 248 | | | 1 | Connector | Skarvstycke | 3 |
| 0830 | 38 | 92 33 255 | | 610) | 1 | Connector | Skarvstycke | 3 |
| 0840 | 38A | 92 22 902 | | 2SN | 2 | Connector | Skarvstycke | 3 |
| 0850 | 38A | 92 22 910 | | 610) 2SN | 2 | Connector | Skarvstycke | 3 |
| 0860 | 39 | 82 75 885 | | OUTER, US | | Bracket | Hållare | 4 |
| 0870 | 40 | 82 75 893 | | CENTRE, US | | Bracket | Hållare | 5 |
| 0880 | 41 | 79 22 420 | | US | | Screw | Skruv | 5 |
| 0890 | 42 | 82 86 312 | | | 2 | Tape | Tape | 5 |
| 0900 | 43 | *79 67 771* | | US NLS - USE 7970601 | | Screw | Skruv | 5 |
| 0910 | 44 | 70 88 073 | | US | | Washer | Bricka | 5 |
| 0920 | 45 | 69 38 195 | | 110) WITHOUT WIPER | 1 | Cover | Lock | 5 |
| 0930 | 46 | 69 37 973 | | INNER | 1 | .Cover | .Lock | |
| 0940 | 47 | 69 37 981 | | OUTER | 1 | .Cover | .Lock | 5 |
| 0950 | 48 | 69 56 585 | | | 1 | .Grommet | .Genomföring | |
| 0960 | 49 | 79 65 833 | | | 1 | .Screw | .Skruv | 5 |
| 0970 | | 92 89 414 | | 4.4 M | X | Tape | Tape | 3 |

110. Ch. H2013760-, H3006479-, H7011885-
610. Black Svart




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Compiete sets | 5-G18 |

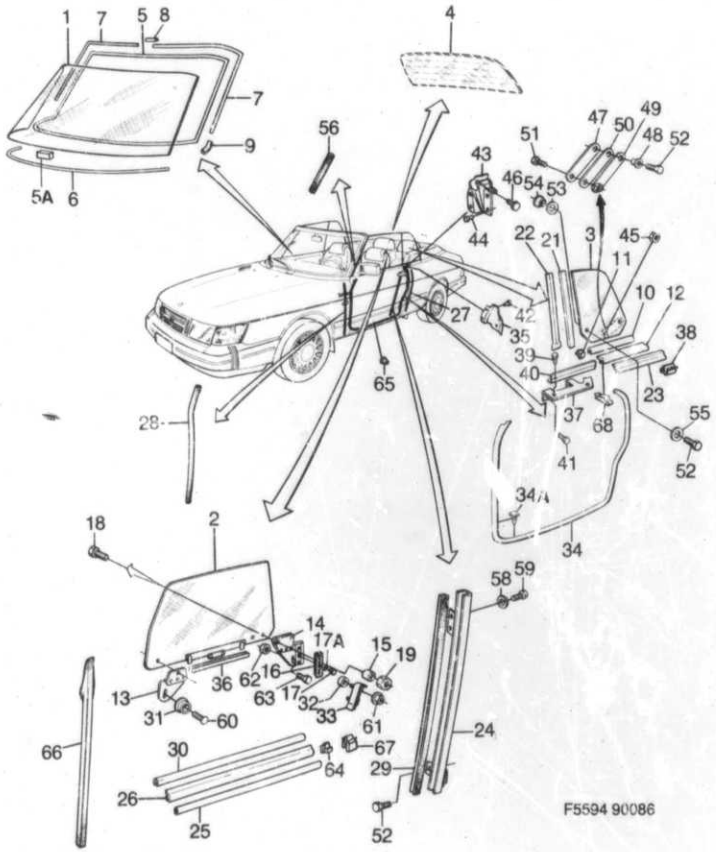


# 5-E24

External details, glass, sealings

**Convertible**

Utvändiga detaljer, glas, tätningslister

**Cabriolet**

| 1040 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *69 34 970* | | -1986, COLOURED NLS - USE 8284200 | 1 | Windscreen | Vindruta | 3 |
| 0020 | 1 | 69 97 910 | | 1987-,224) COLOURED | 1 | Windscreen | Vindruta | 3 |
| 0030 | 1 | 82 84 200 | | 225) COLOURED | 1 | Windscreen | Vindruta | 3 |
| 0040 | | | | See page 8A-161, 5-G18 | | | | |
| 0050 | 1 | 82 84 218 | | AU | 1 | Windscreen | Vindruta | 3 |
| 0060 | | | | See page 8A-161, 5-G18 | | | | |
| 0070 | 2 | *69 19 351* | | 87), LH, COLOURED NLS - USE 6919336 | 1 | Door window | Dörruta | 4 |
| 0080 | 2 | *69 98 744* | | 88), LH, COLOURED NLS - USE 6919336 | 1 | Door window | Dörruta | 4 |
| 0090 | 2 | *69 19 369* | | 287), RH, COLOURED NLS | 1 | Door window | Dörruta | 4 |
| 0100 | 2 | 69 98 751 | | 288), RH, COLOURED | 1 | Door window | Dörruta | 4 |
| 0110 | 3 | 69 19 237 | | LH, COLOURED | 1 | Side window | Sidoruta | 5 |
| 0120 | 3 | 69 19 245 | | RH, COLOURED | 1 | Side window | Sidoruta | 5 |
| 0130 | 4 | | | See page 8A-025, 5-B02 | 1 | Rear window | Bakruta | |
| 0140 | 5 | 69 35 050 | | | 1 | Decor strip | Dekorlist | 3 |
| 0150 | 5A | 92 59 532 | | | X | Spacer | Distans | 3 |
| 0160 | 6 | 69 35 084 | | 224) | 1 | Strip holder | Hållarlist | 4 |
| 0170 | 6 | 69 98 074 | | 225) | 1 | Strip holder | Hållarlist | 4 |
| 0180 | 7 | *69 35 068* | | 171) LH NLS - USE 6998595 | 1 | Strip holder | Hållarlist | 4 |
| 0190 | 7 | 69 98 595 | | 172,224) LH | 1 | Strip holder | Hållarlist | 4 |
| 0200 | 7 | 69 98 082 | | 225) LH | 1 | Strip holder | Hållarlist | 4 |
| 0210 | 7 | *69 35 076* | | 171) RH NLS - USE 6998603 | 1 | Strip holder | Hållarlist | 4 |
| 0220 | 7 | 69 98 603 | | 172,224) RH | 1 | Strip holder | Hållarlist | 4 |
| 0230 | 7 | 69 98 090 | | 225) RH | 1 | Strip holder | Hållarlist | 4 |
| 0240 | 8 | 92 78 334 | | | 1 | Connector | Skarvstycke | 3 |
| 0250 | 9 | 69 35 092 | | | 2 | Clip | Clips | 5 |
| 0260 | 10 | 69 33 121 | | | 2 | Seal | Tätning | 5 |
| 0270 | 10 | *69 33 139* | | 1) NLS - USE 6998843 | 2 | .Seal | .Tätning | 5 |
| 0280 | 11 | *82 44 964* | | NLS - USE 6998850 | 8 | .Clip | .Clips | 5 |
| 0290 | 12 | 69 36 413 | | 275) LH | 1 | Seal | Tätning | 5 |
| 0300 | 12 | 69 98 058 | | 276) LH | 1 | Seal | Tätning | 5 |
| 0310 | 12 | 69 33 147 | | 275) RH | 1 | Seal | Tätning | 5 |
| 0320 | 12 | 69 98 249 | | 276) RH | 1 | Seal | Tätning | 5 |
| 0330 | 13 | 69 33 931 | | 5) | 2 | Bracket | Konsol | 3 |
| 0340 | 14 | 69 34 343 | | 6) LH | 1 | Bracket | Konsol | 3 |
| 0350 | 14 | 69 34 350 | | 6) RH | 1 | Bracket | Konsol | 3 |
| 0360 | 15 | 69 34 608 | | | 6 | Bushing | Bussning | 5 |
| 0370 | 16 | 69 33 972 | | 6) | 4 | Ferrule | Skoning | 5 |
| 0380 | 17 | 79 68 902 | | | 6 | Rivet | Nit | 5 |
| 0390 | 17A | 80 29 910 | | | 6 | Washer | Bricka | 5 |
| 0400 | 18 | 80 59 396 | | | 6 | Screw | Skruv | 5 |
| 0410 | 19 | 79 73 365 | | | 8 | Nut | Mutter | 5 |
| 0420 | 21 | 69 50 398 | | LH | 1 | Holder | Hållare | 5 |
| 0430 | 21 | 69 50 380 | | RH | 1 | Holder | Hållare | 5 |
| 0440 | 22 | 69 50 323 | | LH | 1 | Sealing strip | Tätningslist | 5 |
| 0450 | 22 | 69 50 315 | | RH | 1 | Sealing strip | Tätningslist | 5 |
| 0460 | 23 | 69 33 261 | | LH | 1 | Decor strip | Dekorlist | 4 |
| 0470 | 23 | 69 33 279 | | RH | 1 | Decor strip | Dekorlist | 4 |

1. Not as separate spare part. Ej som separat reservdel.
5. Front Främre
6. Rear Bakre
171. Ch. --J7012519
172. Ch. J7012520--
224. Ch. --J7031971.
225. Ch. J7031972--
275. Ch. --K7021109
276. Ch. K7021110--
287. Ch. --K7020748
288. Ch. K7020749--




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

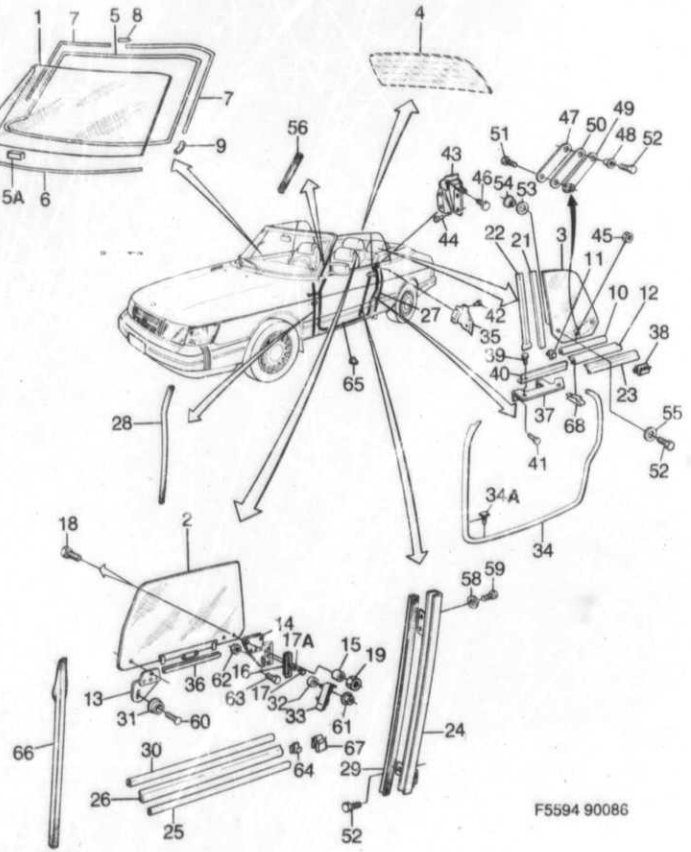


F5594 90086

# 5-F02

External details, glass, sealings

***Convertible***

Utvändiga detaljer, glas, tätningslister

***Cabriolet***

| 1040 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0480 | 24 | 69 32 461 | | 6,275) LH | 1 | Guide moulding | Styrlist | 5 |
| 0490 | 24 | 69 98 421 | | 6,276) LH | 1 | Guide moulding | Styrlist | 5 |
| 0500 | 24 | 69 32 479 | | 6,275) RH | 1 | Guide moulding | Styrlist | 5 |
| 0510 | 24 | 69 98 553 | | 6,276) RH | 1 | Guide moulding | Styrlist | 5 |
| 0520 | 25 | 69 33 436 | | 275) LH | 1 | Decor strip | Dekorlist | 4 |
| 0530 | 25 | 69 98 645 | | 276) LH | 1 | Decor strip | Dekorlist | 4 |
| 0540 | 25 | 69 33 444 | | 275) RH | 1 | Decor strip | Dekorlist | 4 |
| 0550 | 25 | 69 98 652 | | 276) RH | 1 | Decor strip | Dekorlist | 4 |
| 0560 | 26 | 69 33 170 | | 275) | 2 | Seal | Tätning | 4 |
| 0570 | 26 | 69 98 025 | | 276) LH | 1 | Seal | Tätning | 4 |
| 0580 | 26 | 69 98 314 | | 276) RH | 1 | Seal | Tätning | 4 |
| 0590 | 27 | 69 33 337 | | 6) | 2 | Strip | List | 3 |
| 0600 | 28 | *69 33 352* | | 5) LH NLS - USE 6999825 | 1 | Strip | List | 3 |
| 0610 | 28 | *69 34 152* | | 5) RH NLS - USE 6999825 | 1 | Strip | List | 5 |
| 0620 | 29 | 69 34 079 | | | 2 | Seal | Tätning | 6 |
| 0630 | 30 | *69 33 154* | | NLS - USE 6996821 | 2 | Seal | Tätning | 4 |
| 0640 | 31 | *69 35 845* | | 5,275) NLS - USE 6996961 | 2 | Stop | Stopp | 5 |
| 0650 | 31 | *69 98 124* | | 5,276) NLS - USE 6996961 | 2 | Stop | Stopp | 5 |
| 0660 | 32 | *69 35 571* | | 6,293) NLS - USE 6996953 | 2 | Stop | Stopp | 9 |
| 0670 | 32 | *69 98 124* | | 6,294) NLS - USE 6996961 | 2 | Stop | Stopp | 5 |
| 0680 | 33 | 69 33 733 | | 275) LH | 1 | Stop | Stopp | 3 |
| 0690 | 33 | 69 34 392 | | 275) RH | 1 | Stop | Stopp | 3 |
| 0700 | 34 | 69 34 871 | | LH | 1 | Sealing strip | Tätningslist | 5 |
| 0710 | 34 | 69 34 889 | | RH | 1 | Sealing strip | Tätningslist | 5 |
| 0720 | 34A | *84 12 256* | | -1987 NLS - USE 6911614 | 34 | .Clip | .Clips | 5 |
| 0730 | 34A | 69 11 614 | | 1988- | 34 | .Clip | .Clips | 5 |
| 0740 | 35 | 69 50 729 | | 275) LH | 1 | Seal | Tätning | 9 |
| 0750 | 35 | 69 98 330 | | 276) LH | 1 | Seal | Tätning | 9 |
| 0760 | 35 | 69 50 711 | | 275) RH | 1 | Seal | Tätning | 9 |
| 0770 | 35 | 69 98 348 | | 276) RH | 1 | Seal | Tätning | 9 |
| 0780 | 36 | 69 35 233 | | | 2 | Spacer | Mellanlägg | 5 |
| 0790 | 37 | 69 32 875 | | LH | 1 | Reinforcement | Förstärkning | 3 |
| 0800 | 37 | 69 32 883 | | RH | 1 | Reinforcement | Förstärkning | 3 |
| 0810 | 38 | 69 35 563 | | | 10 | Clip | Clips | 5 |
| 0820 | 39 | 80 19 895 | | | 4 | Screw | Skruv | 5 |
| 0830 | 40 | 69 24 559 | | | 2 | Attaching plate | Fästplåt | 3 |
| 0840 | 41 | 79 75 451 | | | 4 | Screw | Skruv | 5 |
| 0850 | 42 | 92 55 845 | | | 8 | Rivet | Nit | 5 |
| 0860 | 43 | *69 51 297* | | -1987, LH NLS - USE 6952691 | 1 | Seal | Tätning | 9 |
| 0870 | 43 | 69 52 691 | | 1988-, LH | 1 | Seal | Tätning | 5 |
| 0880 | 43 | *69 51 289* | | -1987, RH NLS - USE 6952683 | 1 | Seal | Tätning | 5 |
| 0890 | 43 | 69 52 683 | | 1988-, RH | 1 | Seal | Tätning | 5 |
| 0900 | 44 | 69 37 460 | | | 4 | Rivet | Nit | 5 |
| 0910 | 45 | 80 74 106 | | -1987 | 16 | Nut | Mutter | 5 |
| 0920 | 45 | 81 51 235 | | 1988- | 16 | Nut | Mutter | 5 |
| 0930 | 46 | 69 35 936 | | | 2 | Clip | Clips | 5 |
| 0940 | 47 | 69 36 330 | | | 2 | Insert | Inlägg | 5 |
| 0950 | 48 | 69 36 348 | | | 2 | Spacer | Distans | 5 |
| 0960 | 49 | 69 36 355 | | | 2 | Brace | Bygel | 3 |
| 0970 | 50 | 69 36 363 | | | 2 | Insert | Inlägg | 5 |
| 0980 | 51 | 69 36 397 | | | 2 | Screw | Skruv | 5 |
| 0990 | 52 | 79 69 223 | | | 8 | Screw | Skruv | 5 |
| 1000 | 53 | 69 36 371 | | | 2 | Washer | Bricka | 5 |
| 1010 | 54 | 69 36 389 | | | 2 | Clip | Clips | 5 |
| 1020 | 55 | 73 11 772 | | | 2 | Washer | Bricka | 5 |

5. Front Främre
6. Rear Bakre
275. Ch. --K7021109
276. Ch. K7021110--
293. Ch. --K7021109
294. Ch. K7021110--




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

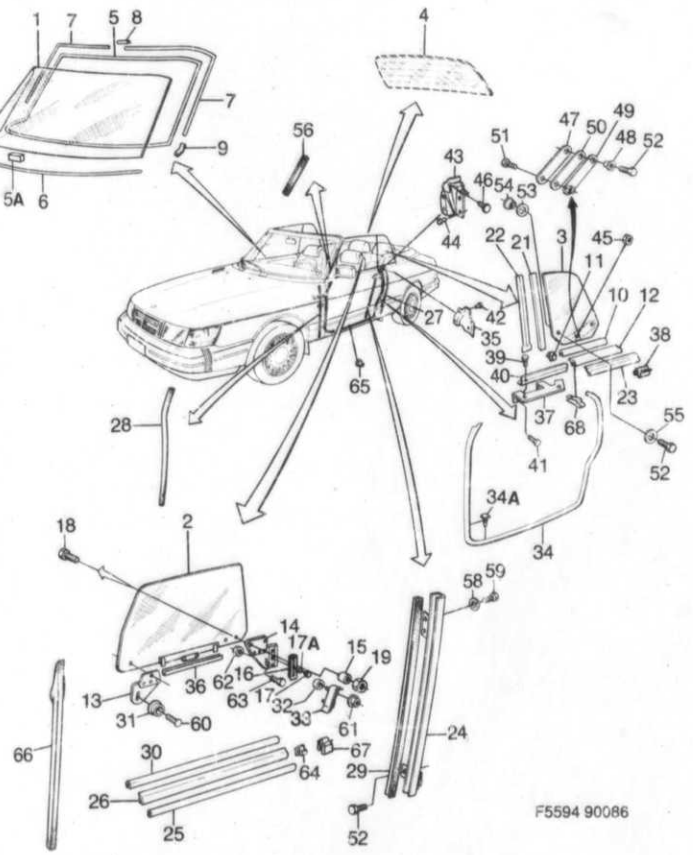


# 5-F04

External details, glass, sealings
***Convertible***

Utvändiga detaljer, glas, tätningslister
***Cabriolet***

| Pos | Part No/Art nr | K S | Notis/Anmärkningar | Qty Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 56 | 69 97 068 | | -1987 | 2 | Sealing strip | Tätningslist | 3 |
| 58 | 79 16 489 | | 200) | 4 | Washer | Bricka | 5 |
| 58 | 69 98 017 | | 201) | 4 | Washer | Bricka | 5 |
| 59 | 79 71 294 | | 200) | 4 | Screw | Skruv | 5 |
| 59 | 75 74 033 | | 201)-1988 | 4 | Screw | Skruv | 5 |
| 59 | 79 81 921 | | 1989-500) | 4 | Screw | Skruv | 5 |
| 60 | 69 35 852 | | | 2 | Screw | Skruv | 5 |
| 61 | 79 71 658 | | 275) | 4 | Nut | Mutter | 5 |
| 62 | 79 74 298 | | | 4 | Nut | Mutter | 5 |
| 63 | *80 19 929* | | 275) NLS - USE 9166299 | 2 | Screw | Skruv | 5 |
| 63 | 69 35 852 | | 276) | 2 | Screw | Skruv | 5 |
| 64 | *82 78 947* | | NLS - USE 4094082 | 14 | Clip | Clips | 5 |
| 65 | 92 55 845 | | 200) | 10 | Rivet | Nit | 5 |
| 65 | 92 55 845 | | 201) | 6 | Rivet | Nit | 5 |
| 66 | *69 51 255* | | 5) LH NLS - USE 6953897 | 1 | Seal | Tätning | 5 |
| 66 | *69 51 248* | | 5) RH NLS - USE 6953889 | 1 | Seal | Tätning | 5 |
| 67 | 69 98 868 | | 276) | 2 | Clip | Clips | 5 |
| 68 | 69 99 817 | | 276) | 2 | Clamp | Klammer | 5 |
| | *82 84 093* | | 224) COLOURED | 1 | Windscreen | Vindruta | 3 |
| | | | See page 8A-161, 5-G18 | | | | |
| | | | NLS - USE 8284200 | | | | |

5. Front Främre
200. Ch. --J7023450
201. Ch. J7023451--
224. Ch. --J7031971.
275. Ch. --K7021109
276. Ch. K7021110--
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

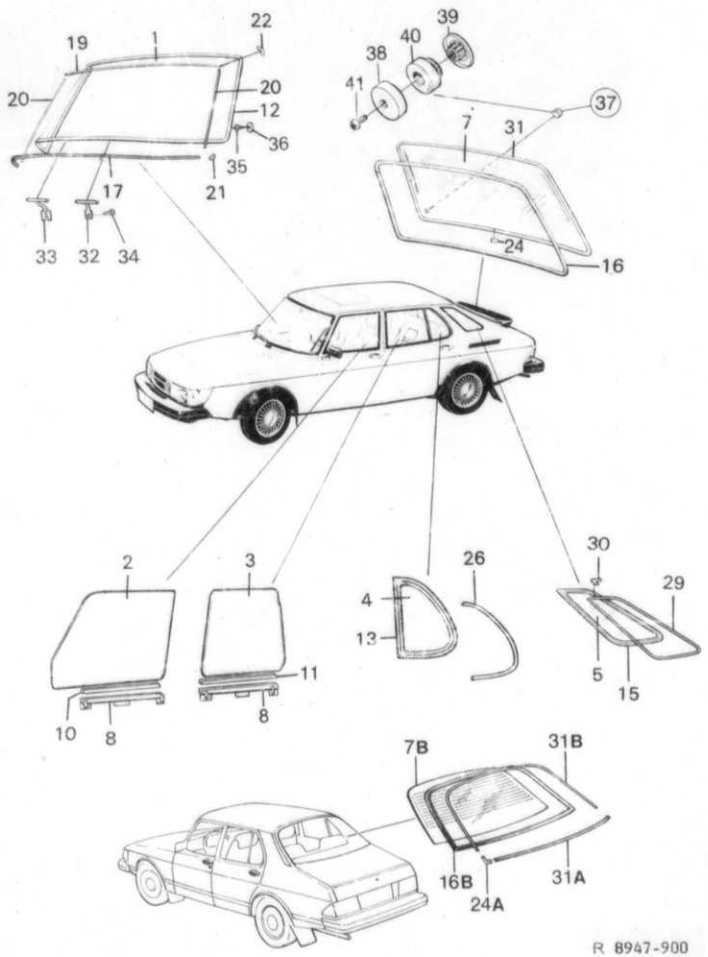


External details, glass, sealings

Utvändiga detaljer, glas, tätningslister

# 5-F06

## *Glass, sealings 5CK, 4SN*

## *Glas,tätn. lister 5CK,4SN*

| 1050 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 82 57 511 | | | 1 | Windscreen | Vindruta | |
| 0020 | 1 | 92 80 439 | | 310) | 1 | Windscreen | Vindruta | 3 |
| 0030 | 2 | 92 35 094 | | 5) LH | 1 | Door window | Dörruta | 4 |
| 0040 | 2 | 92 80 371 | | 5,310) LH | 1 | Door window | Dörruta | 3 |
| 0050 | 2 | 92 97 839 | | 5,310) CD, LH | 1 | Window | Ruta | 7 |
| 0060 | 2 | 92 35 102 | | 5) RH | 1 | Door window | Dörruta | 5 |
| 0070 | 2 | 92 80 389 | | 5,310) RH | 1 | Door window | Dörruta | |
| 0080 | 2 | 92 97 847 | | 5,310) CD, RH | 1 | Window | Ruta | 7 |
| 0090 | 3 | 82 75 356 | | 6) LH | 1 | Side window | Sidoruta | 5 |
| 0100 | 3 | 92 80 397 | | 6,310) LH | 1 | Door window | Dörruta | 5 |
| 0110 | 3 | 92 97 854 | | 6,310) CD, LH | 1 | Window | Ruta | 7 |
| 0120 | 3 | 82 75 364 | | 6) RH | 1 | Door window | Dörruta | 5 |
| 0130 | 3 | 92 80 405 | | 6,310) RH | 1 | Door window | Dörruta | |
| 0140 | 3 | 92 97 862 | | 6,310) CD, RH | 1 | Window | Ruta | 7 |
| 0150 | 4 | 82 61 638 | | 6) LH | 1 | Door window | Dörruta | 5 |
| 0160 | 4 | 82 61 646 | | 6) RH | 1 | Door window | Dörruta | 5 |
| 0170 | 4 | 92 80 413 | | 6,310) LH | 1 | Side window | Sidoruta | 5 |
| 0180 | 4 | 92 80 421 | | 6,310) RH | 1 | Door window | Dörruta | |
| 0190 | 5 | 82 60 135 | | LH | 1 | Side window | Sidoruta | 5 |
| 0200 | 5 | 82 60 143 | | RH | 1 | Side window | Sidoruta | 5 |
| 0210 | 5 | 92 80 462 | | 310) LH | 1 | Side window | Sidoruta | 5 |
| 0220 | 5 | 92 80 470 | | 310) RH | 1 | Side window | Sidoruta | 5 |
| 0230 | 7 | *82 75 240* | | 109) WITHOUT HOLE NLS - USE 6938013, 6938195 | 1 | Rear window | Bakruta | 4 |
| 0240 | 7 | 92 80 488 | | 310) WITHOUT HOLE | 1 | Rear window | Bakruta | 4 |
| 0250 | 7 | 69 38 013 | | 110) FOR WIPER | 1 | Rear window | Bakruta | 4 |
| 0260 | 7 | 69 38 187 | | 110,310) FOR WIPER | 1 | Rear window | Bakruta | 4 |
| 0270 | 7B | 92 20 161 | | 4SN | 1 | Rear window | Bakruta | 5 |
| 0280 | 7B | 92 80 496 | | 310) 4SN | 1 | Rear window | Bakruta | 4 |
| 0290 | 8 | *69 18 361* | | -1986 NLS - USE 6938096 | 2 | Window bracket | Rutfäste | 5 |
| 0300 | 8 | 69 38 096 | | 1987- | 2 | Window bracket | Rutfäste | 5 |
| 0310 | 10 | 92 87 111 | | 5) | 2 | Spacer | Mellanlägg | 5 |
| 0320 | 11 | 92 87 111 | | 6) | 2 | Spacer | Mellanlägg | 5 |
| 0330 | 12 | 92 93 051 | | US | 1 | Rubber moulding | Gummilist | 4 |
| 0340 | 13 | 82 49 955 | | 6) LH | 1 | Rubber moulding | Gummilist | 5 |
| 0350 | | | | | | Door window | Dörruta | |
| 0360 | 13 | 82 49 963 | | 6) RH | 1 | Rubber moulding | Gummilist | 5 |
| 0370 | | | | | | Door window | Dörruta | |
| 0380 | 15 | 92 87 079 | | LH | 1 | Rubber moulding | Gummilist | 5 |
| 0390 | | | | | | Side window | Sidoruta | |
| 0400 | 15 | 92 87 087 | | RH | 1 | Rubber moulding | Gummilist | 5 |
| 0410 | | | | | | Side window | Sidoruta | |
| 0420 | 16 | 92 31 499 | | | 1 | Rubber moulding | Gummilist | 4 |
| 0430 | | | | | | Rear window | Bakruta | |
| 0440 | 16B | 92 35 516 | | 4SN | 1 | Rubber moulding | Gummilist | 4 |
| 0450 | | | | | | Rear window | Bakruta | |
| 0460 | 17 | 92 26 481 | | LOWER | 1 | Decor strip | Dekorlist | 3 |
| 0470 | | | | | | Windscreen | Vindruta | |
| 0480 | 17 | 82 69 433 | | LOWER | 1 | Decor strip | Dekorlist | 3 |
| 0490 | | | | | | Windscreen | Vindruta | |
| 0500 | 17 | 92 26 481 | | LOWER, CD | 1 | Decor strip | Dekorlist | 3 |
| 0510 | | | | | | Windscreen | Vindruta | |
| 0520 | 19 | *82 36 762* | | UPPER | 1 | Decor strip | Dekorlist | 3 |
| 0530 | | | | NLS - USE 9226473 | | Windscreen | Vindruta | |
| 0540 | 19 | 82 37 265 | | UPPER | 1 | Decor strip | Dekorlist | 3 |
| 0550 | | | | | | Windscreen | Vindruta | |
| 0560 | 19 | 92 26 473 | | UPPER, CD | 1 | Decor strip | Dekorlist | 3 |
| 0570 | | | | | | Windscreen | Vindruta | |

5. Front Främre
6. Rear Bakre
109. Ch. --H2013759, --H3006478, --H7011884
110. Ch. H2013760--, H3006479--, H7011885--
310. Bronze-colour Bronsfärg



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-F08

## Glass, sealings 5CK, 4SN
## Glas,tätn. lister 5CK,4SN

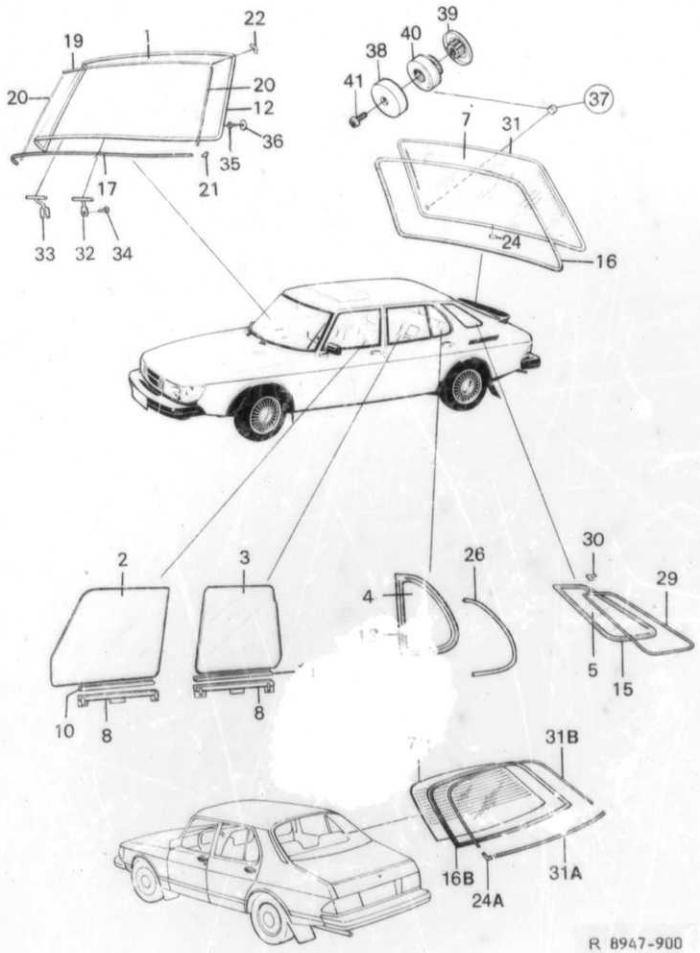


| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description / Benämning | S L |
|---|---|---|---|---|---|---|
| 20 | 92 26 499 | | | 2 | Decor strip / Dekorlist | 3 |
| | | | | | Windscreen / Vindruta | |
| 20 | 82 69 425 | | | 2 | Decor strip / Dekorlist | 3 |
| | | | | | Windscreen / Vindruta | |
| 20 | 92 26 499 | | CD | 1 | Decor strip / Dekorlist | 3 |
| | | | | | Windscreen / Vindruta | |
| 21 | 92 93 085 | | LOWER | 2 | Connector / Skarvstycke | 3 |
| | | | | | Windscreen / Vindruta | |
| 21 | 69 11 325 | | LOWER | 2 | Connector / Skarvstycke | 3 |
| | | | | | Windscreen / Vindruta | |
| 22 | 92 93 069 | | UPPER | 2 | Connector / Skarvstycke | 3 |
| | | | | | Windscreen / Vindruta | |
| 22 | 69 11 317 | | UPPER | 2 | Connector / Skarvstycke | 3 |
| | | | | | Windscreen / Vindruta | |
| 24 | 92 33 248 | | | 1 | Connector / Skarvstycke | 3 |
| 24 | 92 33 255 | | 610) | 1 | Connector / Skarvstycke | 3 |
| 24A | 92 22 902 | | 4SN | 2 | Connector / Skarvstycke | 3 |
| 24A | 92 22 910 | | 610) 4SN | 2 | Connector / Skarvstycke | 3 |
| 26 | 82 59 855 | | 6) LH | 1 | Decor strip / Dekorlist | 3 |
| | | | | | Door window / Dörruta | |
| 26 | 82 59 863 | | 6) RH | 1 | Decor strip / Dekorlist | 3 |
| | | | | | Door window / Dörruta | |
| 26 | 92 39 351 | | 6,610) LH | 1 | Decor strip / Dekorlist | 3 |
| | | | | | Door window / Dörruta | |
| 26 | 92 39 369 | | 6,610) RH | 1 | Decor strip / Dekorlist | 3 |
| | | | | | Door window / Dörruta | |
| 29 | 92 23 439 | | | 2 | Decor strip / Dekorlist | 4 |
| | | | | | Side window / Sidoruta | |
| 29 | 82 67 890 | | 610) | 2 | Decor strip / Dekorlist | 4 |
| | | | | | Side window / Sidoruta | |
| 30 | 92 23 447 | | | 2 | Connector / Skarvstycke | 3 |
| | | | | | Side window / Sidoruta | |
| 30 | 92 23 538 | | 610) | 2 | Connector / Skarvstycke | 3 |
| | | | | | Side window / Sidoruta | |
| 31 | 92 33 263 | | | 1 | Decor strip / Dekorlist | 3 |
| | | | | | Rear window / Bakruta | |
| 31 | 92 33 271 | | 610) | 1 | Decor strip / Dekorlist | 3 |
| | | | | | Rear window / Bakruta | |
| 31A | 92 26 523 | | LOWER, 4SN | 1 | Decor strip / Dekorlist | 3 |
| | | | | | Rear window / Bakruta | |
| 31A | 92 2 936 | | 610) LOWER, 4SN | 1 | Decor strip / Dekorlist | 3 |
| | | | | | Rear window / Bakruta | |
| 31B | 92 26 531 | | UPPER, 4SN | 1 | Decor strip / Dekorlist | 3 |
| | | | | | Rear window / Bakruta | |
| 31B | 92 22 951 | | 610) UPPER, 4SN | 1 | Decor strip / Dekorlist | 3 |
| | | | | | Rear window / Bakruta | |
| 32 | 82 75 885 | | OUTER, US | 2 | Bracket / Hållare | 4 |
| 33 | 82 75 893 | | CENTRE, US | 1 | Bracket / Hållare | 5 |
| 34 | 79 22 420 | | US | 2 | Screw / Skruv | 5 |
| 35 | 79 67 771 | | US NLS - USE 7970601 | 2 | Screw / Skruv | 5 |
| 36 | 70 88 073 | | US | 2 | Washer / Bricka | 5 |
| 37 | 69 38 195 | | 110) | 1 | Cover / Lock | 5 |
| 38 | 69 37 973 | | | 1 | .Cover / .Lock | |
| 39 | 69 37 981 | | | 1 | .Cover / .Lock | 5 |
| 40 | 69 56 585 | | | 1 | .Grommet / .Genomföring | |
| 41 | 79 65 833 | | | 1 | .Screw / .Skruv | 5 |
| | 92 89 414 | | 4,4 M (9289414) | X | Tape / Tape | 3 |

6. Rear Bakre
110. Ch. H2013760-, H3006479-, H7011885-
610. Black Svart



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-F10

## *Splash guard*
## *Stänkskydd*

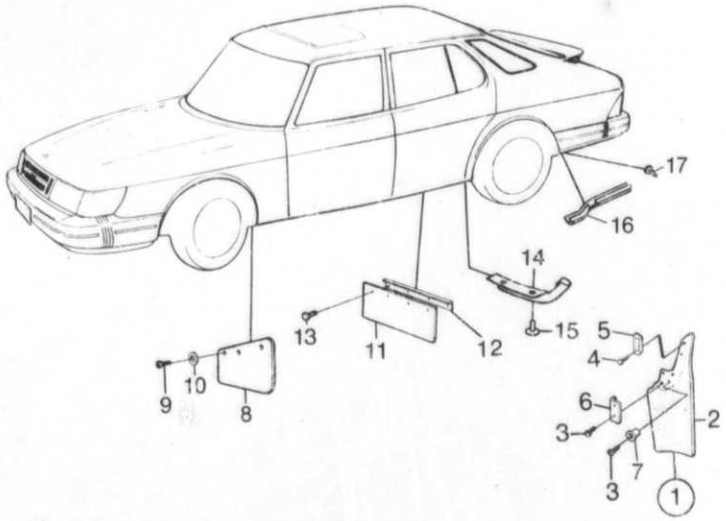


F5595 90086

| 1100 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 78 73 995 | | LH | 1 | Baffle | Stänkskydd | 3 |
| 0020 | | | | See page 8A-165, 5-G22 | | | | |
| 0030 | 1 | 78 74 001 | | RH | 1 | Baffle | Stänkskydd | 3 |
| 0040 | | | | See page 8A-165, 5-G22 | | | | |
| 0050 | 1 | 78 74 340 | | LH, RH | 1 | Baffle | Stänkskydd | 3 |
| 0060 | | | | See page 8A-165, 5-G22 | | | | |
| 0070 | 1 | 78 74 746 | | 43) LH, CK | 1 | Baffle | Stänkskydd | 3 |
| 0080 | | | | See page 8A-185, 5-H18 | | | | |
| 0090 | 1 | 78 74 753 | | 43) RH, CK | 1 | Baffle | Stänkskydd | 3 |
| 0100 | | | | See page 8A-185, 5-H18 | | | | |
| 0110 | 1 | 78 74 761 | | 43) LH, SN | 1 | Baffle | Stänkskydd | 3 |
| 0120 | | | | See page 8A-185, 5-H18 | | | | |
| 0130 | 1 | 78 74 779 | | 43) RH, SN | 1 | Baffle | Stänkskydd | 3 |
| 0140 | | | | See page 8A-185, 5-H18 | | | | |
| 0150 | 1 | 69 39 375 | | 43) LH, RH, CK | 1 | Baffle | Stänkskydd | 3 |
| 0160 | | | | See page 8A-185, 5-H18 | | | | |
| 0170 | 1 | 69 39 383 | | 43) LH, RH, SN | 1 | Baffle | Stänkskydd | 3 |
| 0180 | | | | See page 8A-185, 5-H18 | | | | |
| 0190 | 1 | 96 98 382 | | 1988- LH, AERO | 1 | Baffle | Stänkskydd | 3 |
| 0200 | | | | See page 8A-185, 5-H18 | | | | |
| 0210 | 1 | 96 98 390 | | 1988- RH, AERO | 1 | Baffle | Stänkskydd | 3 |
| 0220 | | | | See page 8A-185, 5-H18 | | | | |
| 0230 | 1 | 96 98 408 | | 1988- LH, RH, AERO | 1 | Baffle | Stänkskydd | 3 |
| 0240 | | | | See page 8A-185, 5-H18 | | | | |
| 0250 | 2 | 69 37 593 | | 43) LH, CK | 1 | .Baffle | .Stänkskydd | 3 |
| 0260 | 2 | 69 37 585 | | 43) RH, CK | 1 | .Baffle | .Stänkskydd | 3 |
| 0270 | 2 | 69 37 478 | | 43) LH, SN | 1 | .Baffle | .Stänkskydd | 3 |
| 0280 | 2 | 69 37 486 | | 43) RH, SN | 1 | .Baffle | .Stänkskydd | 3 |
| 0290 | 2 | 69 42 536 | | 1988- LH, AERO | 1 | .Baffle | .Stänkskydd | 3 |
| 0300 | 2 | 69 42 528 | | 1988- RH, AERO | 1 | .Baffle | .Stänkskydd | 3 |
| 0310 | 3 | 79 22 982 | | 43,87) | 6 | .Screw | .Skruv | 5 |
| 0320 | 3 | 79 22 982 | | 43,88) | 2 | .Screw | .Skruv | 5 |
| 0330 | 3 | 79 73 050 | | 43,88) | 4 | .Screw | .Skruv | 5 |
| 0340 | 3 | 79 22 982 | | | 6 | .Screw | .Skruv | 5 |
| 0350 | 3 | 79 69 314 | | 1988-, AERO | 2 | .Screw | .Skruv | 5 |
| 0360 | 4 | 79 22 974 | | 43) | 4 | .Screw | .Skruv | 5 |
| 0370 | 4 | 79 22 982 | | | 4 | .Screw | .Skruv | 5 |
| 0380 | 5 | 92 22 613 | | | 2 | .Attaching plate | .Fästplåt | 3 |
| 0390 | 6 | 82 27 738 | | | 2 | .Support plate | .Stödplatta | 6 |
| 0400 | 7 | 92 82 138 | | 43,87) | 4 | .Sleeve | .Hylsa | 5 |
| 0410 | 8 | 82 88 151 | | LH | 1 | Baffle | Stänkskydd | 4 |
| 0420 | 8 | 82 88 169 | | RH | 1 | Baffle | Stänkskydd | 4 |
| 0430 | 8 | 92 99 678 | | 5) AERO, LH | 1 | Baffle | Stänkskydd | 4 |
| 0440 | 8 | 92 99 686 | | 5) AERO, RH | 1 | Baffle | Stänkskydd | 4 |
| 0450 | 9 | 79 22 495 | | -1986 | 6 | Screw | Skruv | 5 |
| 0460 | 9 | 79 73 050 | | 1987- | 6 | Screw | Skruv | 5 |
| 0470 | 10 | 79 16 497 | | -1986 | 6 | Washer | Bricka | 5 |
| 0480 | 11 | 82 89 266 | | | 2 | Baffle | Stänkskydd | 5 |
| 0490 | 12 | *82 09 413* | | NLS | 2 | Elbow | Vinkel | 5 |
| 0500 | 13 | 79 73 209 | | -1986 | 8 | Screw | Skruv | 5 |
| 0510 | 13 | 79 73 050 | | 1987- | 8 | Screw | Skruv | 5 |
| 0520 | 14 | 82 87 310 | | LH | 1 | Rubber protection | Gummiskydd | 3 |
| 0530 | 14 | 82 87 328 | | RH | 1 | Rubber protection | Gummiskydd | 3 |
| 0540 | 15 | 82 35 178 | | | 4 | Pop rivet | Popnit | 5 |
| 0550 | 16 | 69 19 039 | | 7) LH | 1 | Protecting moulding | Skyddslist | 3 |
| 0560 | 16 | 69 19 047 | | 7) RH | 1 | Protecting moulding | Skyddslist | 3 |
| 0570 | 16 | 69 19 054 | | 8) | 2 | Protecting moulding | Skyddslist | 3 |

5. Front Främre
7. For cars without rear mud guard. För bilar utan bakre stänkskydd.
8. For cars with rear mud guard. För bilar med bakre stänkskydd.
43. For cars with integrated bumpers För bilar med integrerade stötfångare
87. Ch. --H2007299, --H3006027
88. Ch. H2007300--, H3006028--



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-F12

## *Splash guard*
## *Stänkskydd*

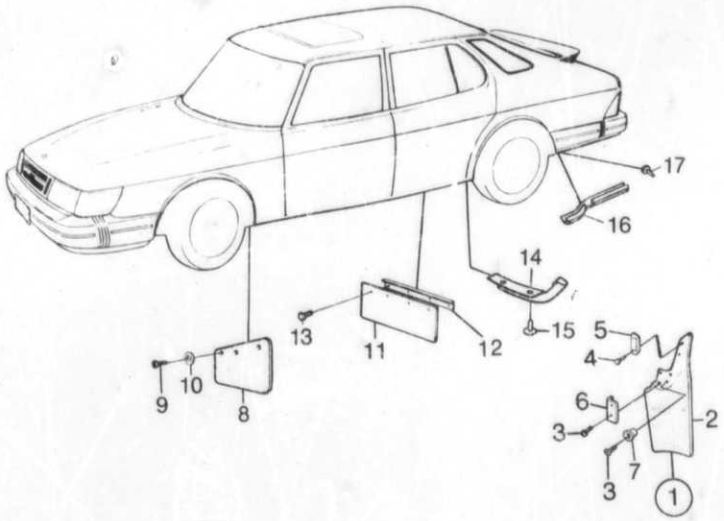


F5595 90086

| 1100 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0580 17 | *79 61 634* | | 7) NLS - USE 7977804 | 10 | Rivet | Nit | 5 |
| 0590 | 96 98 531 | | -1988,5) LH, ALT FOR ME, FE | 1 | Splash guard kit | Stänkskyddssats | 5 |
| 0600 | | | See page 8A-185, 5-H18 | | | | |
| 0610 | | | | | | | |
| 0620 | 96 98 549 | | -1988,5) RH, ALT FOR ME, FE | 1 | Splash guard kit | Stänkskyddssats | 5 |
| 0630 | | | See page 8A-185, 5-H18 | | | | |
| 0640 | | | | | | | |

5. Front Främre
7. For cars without rear mud guard. För bilar utan bakre stänkskydd.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3 H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |


# 5-F14

External details, glass, sealings

## *Other sealings 3CK, 2SN*

Utvändiga detaljer, glas, tätningslister

## *Övriga lister 3CK, 2SN*

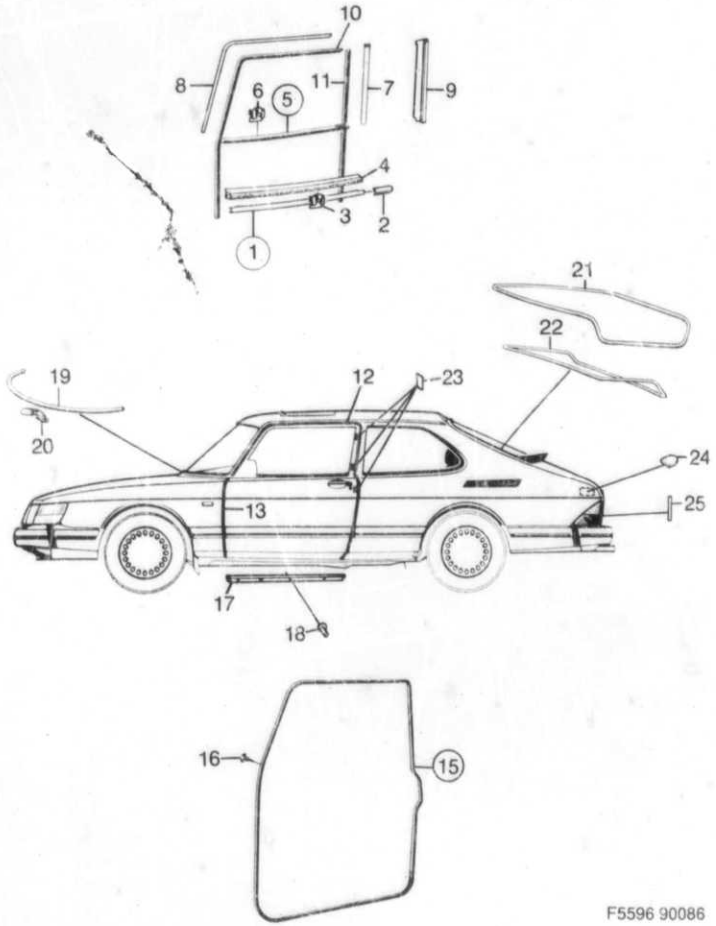


F5596 90086

| 1125 | Pos | Part No/Art nr | K S | Note/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 69 26 711 | | LH | 1 | Decor strip | Dekorlist | 4 |
| 0020 | 1 | 69 26 729 | | RH | 1 | Decor strip | Dekorlist | 4 |
| 0030 | 1 | 69 26 737 | | 610) LH | 1 | Decor strip | Dekorlist | 4 |
| 0040 | 1 | 69 26 745 | | 610) RH | 1 | Decor strip | Dekorlist | 4 |
| 0050 | 2 | *92 37 975* | | 39) LH NLS - USE 6926497 | 1 | .End piece | .Ändstycke | 4 |
| 0060 | 2 | 69 26 497 | | 40) LH | 1 | .End piece | .Ändstycke | 4 |
| 0070 | 2 | 92 37 983 | | 39) RH | 1 | .End piece | .Ändstycke | 4 |
| 0080 | 2 | 69 26 505 | | 40) RH | 1 | .End piece | .Ändstycke | 4 |
| 0090 | 3 | *82 78 947* | | NLS - USE 4094082 | 14 | Clip | Clips | 5 |
| 0100 | 4 | 92 37 678 | | | 2 | Sealing strip | Tätningslist | 4 |
| 0110 | 5 | 92 37 553 | | | 2 | Sealing strip | Tätningslist | 4 |
| 0120 | 6 | *82 44 964* | | NLS - USE 6998850 | 6 | .Clip | .Clips | 5 |
| 0130 | 7 | 92 84 191 | | LH | 1 | Decor strip | Dekorlist | 3 |
| 0140 | 7 | 92 84 209 | | RH | 1 | Decor strip | Dekorlist | 3 |
| 0150 | 7 | 92 39 336 | | 610) LH | 1 | Decor strip | Dekorlist | 3 |
| 0160 | 7 | 92 39 344 | | 610) RH | 1 | Decor strip | Dekorlist | 3 |
| 0170 | 8 | 92 84 175 | | LH | 1 | Decor strip | Dekorlist | 3 |
| 0180 | 8 | 92 84 183 | | RH | 1 | Decor strip | Dekorlist | 3 |
| 0190 | 8 | 92 39 153 | | 610) LH | 1 | Decor strip | Dekorlist | 3 |
| 0200 | 8 | 92 39 161 | | 610) RH | 1 | Decor strip | Dekorlist | 3 |
| 0210 | 9 | 92 31 176 | | LH | 1 | Decor strip | Dekorlist | 2 |
| 0220 | 9 | 92 31 184 | | RH | 1 | Decor strip | Dekorlist | 2 |
| 0230 | 10 | 82 78 996 | | | 2 | Sealing strip | Tätningslist | 4 |
| 0240 | 11 | 82 76 479 | | | 2 | Sealing strip | Tätningslist | 4 |
| 0250 | 12 | 92 92 954 | | (9292988) | 2 | Sealing strip | Tätningslist | 3 |
| 0260 | 13 | 69 11 820 | | | 2 | Sealing strip | Tätningslist | 3 |
| 0270 | 15 | *69 11 911* | | LH NLS - USE 4096822 | 1 | Sealing strip | Tätningslist | 3 |
| 0280 | 15 | *69 11 903* | | RH NLS - USE 4096830 | 1 | Sealing strip | Tätningslist | 3 |
| 0290 | 16 | 69 11 614 | | | 78 | .Clip | .Clips | 5 |
| 0300 | 17 | *82 86 874* | | NLS - USE 9291428 | 2 | Protecting moulding | Skyddslist | 3 |
| 0310 | 17 | 92 91 428 | | | 2 | Protecting moulding | Skyddslist | 3 |
| 0320 | 18 | 82 35 178 | | | 12 | Pop rivet | Popnit | 5 |
| 0330 | 19 | 92 82 104 | | | 1 | Seal | Tätning | 3 |
| 0340 | 20 | 84 07 488 | | | 5 | Clip | Clips | 5 |
| 0350 | 21 | 82 89 803 | | CK | 1 | Sealing strip | Tätningslist | 4 |
| 0360 | 22 | 92 26 028 | | SN | 1 | Sealing strip | Tätningslist | 4 |
| 0370 | 23 | 84 06 142 | | 50M | X | Tape | Tape | 5 |
| 0380 | 24 | *82 47 801* | | NLS - USE 9297458 | 2 | Spacer | Mellanlägg | 5 |
| 0390 | 25 | 92 36 605 | | | 2 | Strip | List | 4 |

39. Ch.-G2001444,-G3001556, -G7004271.
40. Ch.G2001445-,G3001557-,G7004272-.
610. Black Svart




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

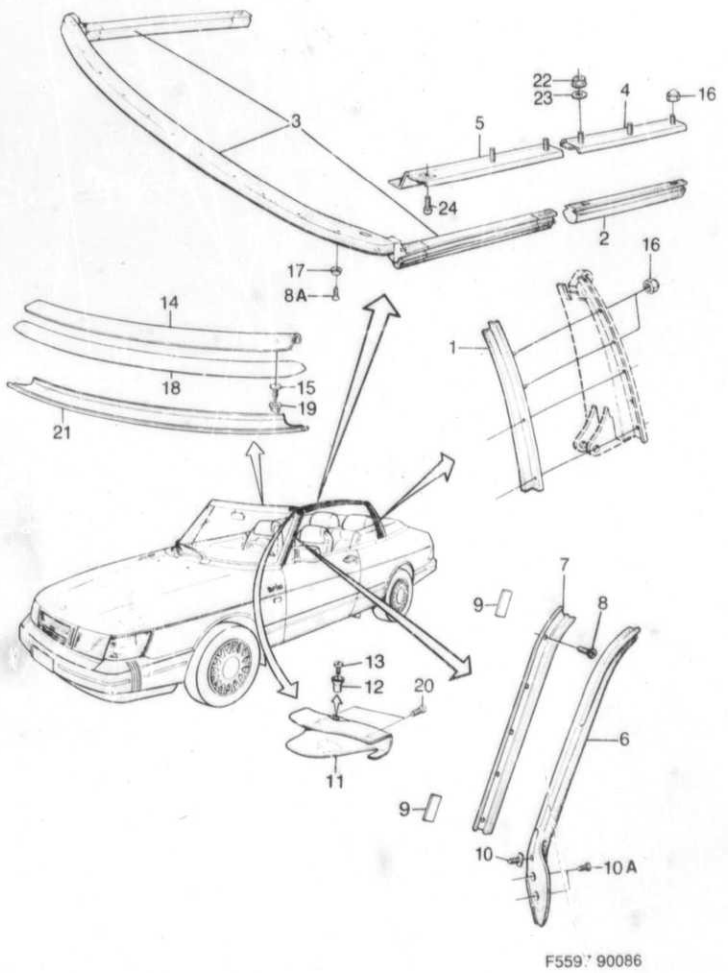


F5597 90086

# 5-F16

External details, glass, sealings

## *Other sealings CV*

Utvändiga detaljer, glas, tätningslister

## *Övriga lister CV*

| 1130 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0040 | 1 | *69 50 216* | | 6) LH NLS - USE 4154043 | 1 | Seal | Tätning | 5 |
| 0060 | 1 | *69 50 200* | | 6) RH NLS - USE 4154035 | 1 | Seal | Tätning | 5 |
| 0080 | 2 | *69 51 396* | | LH NLS - USE 4154027 | 1 | Seal | Tätning | 5 |
| 0100 | 2 | *69 51 388* | | RH NLS - USE 4154019 | 1 | Seal | Tätning | 5 |
| 0120 | 3 | *69 51 370* | | 5) NLS - USE 4153987, 4153995, 4154001 | 1 | Seal | Tätning | 5 |
| 0140 | 4 | 69 51 362 | | LH | 1 | Bracket | Hållare | 5 |
| 0160 | 4 | 69 51 354 | | RH | 1 | Bracket | Hållare | 5 |
| 0180 | 5 | *69 51 347* | | 5) LH NLS - USE 4153037 | 1 | Bracket | Hållare | 5 |
| 0200 | 5 | *69 51 339* | | 5) RH NLS - USE 4153029 | 1 | Bracket | Hållare | 5 |
| 0220 | | | | | | | | |
| 0240 | 6 | *69 50 455* | | 149) LH NLS - USE 6952659 | 1 | Sealing strip | Tätningslist | 5 |
| 0250 | 6 | 69 52 659 | | 150) LH | 1 | Sealing strip | Tätningslist | 5 |
| 0260 | 6 | *69 50 448* | | 149) RH NLS - USE 6952642 | 1 | Sealing strip | Tätningslist | 5 |
| 0270 | 6 | 69 52 642 | | 150) RH | 1 | Sealing strip | Tätningslist | 5 |
| 0280 | 7 | *69 50 414* | | -1987, LH NLS - USE 6952907 | 1 | Bracket | Hållare | 4 |
| 0290 | 7 | 69 52 907 | | 1988-, LH | 1 | Bracket | Hållare | 4 |
| 0300 | 7 | *69 50 406* | | -1987, RH NLS - USE 6952899 | 1 | Bracket | Hållare | 4 |
| 0310 | 7 | 69 52 899 | | 1988-, RH | 1 | Bracket | Hållare | 4 |
| 0320 | 8 | 79 75 758 | | -1987 | 8 | Screw | Skruv | 5 |
| 0322 | 8 | 69 97 894 | | 1988- | 8 | Screw | Skruv | 5 |
| 0325 | 8A | 84 08 882 | | | 18 | Screw | Skruv | 5 |
| 0327 | 8A | *73 98 993* | | ALT TO 8408882, 7913833 NLS - USE 8840068 | 18 | Screw | Skruv | 5 |
| 0330 | 9 | 79 93 462 | | 100 MM | X | Tape | Tape | 5 |
| 0340 | 10 | *84 12 256* | | 147) NLS - USE 6911614 | 2 | Clip | Clips | 5 |
| 0350 | 10 | 69 11 614 | | 148) | 2 | Clip | Clips | 5 |
| 0355 | 10A | 69 51 784 | | | 4 | Plastic clip | Plastclips | 5 |
| 0360 | 11 | 98 81 707 | | 6,179) LH | 1 | Fitting | Beslag | 5 |
| 0365 | 11 | 96 47 835 | | 6,180,299) LH | 1 | Fitting | Beslag | 5 |
| 0367 | 11 | 91 61 415 | | 6,300) LH | 1 | Fitting | Beslag | 5 |
| 0380 | 11 | 98 81 715 | | 6,179) RH | 1 | Fitting | Beslag | 5 |
| 0385 | 11 | 96 47 843 | | 6,180,299) RH | 1 | Fitting | Beslag | 5 |
| 0390 | 11 | 91 61 423 | | 6,300) RH | 1 | Fitting | Beslag | 5 |
| 0400 | 12 | 98 82 127 | | 179) | 2 | .Bushing | .Bussning | 5 |
| 0410 | 12 | 96 24 905 | | 180) | 2 | .Bushing | .Bussning | 5 |
| 0420 | 13 | 79 22 636 | | -1988 | 2 | .Screw | .Skruv | 5 |
| 0425 | 13 | 79 72 219 | | 1989- | 2 | .Screw | .Skruv | 5 |
| 0440 | 14 | 98 81 913 | | | 1 | Profile | Profil | 6 |
| 0460 | 15 | 98 81 921 | | | 5 | Screw | Skruv | |
| 0480 | 16 | 85 94 749 | | | 8 | Nut | Mutter | 5 |
| 0500 | 17 | 79 13 833 | | | 11 | Washer | Bricka | 5 |
| 0520 | 18 | 69 35 142 | | 1987- | 1 | Protection | Skydd | 5 |
| 0530 | 19 | 79 73 365 | | | 5 | Nut | Mutter | 5 |
| 0540 | 20 | 79 72 201 | | | 4 | Screw | Skruv | 5 |
| 0550 | 21 | | | See page 8B-139, 6-F20 | | Upholstery | Klädsel | |
| 0560 | 22 | 79 73 365 | | | 8 | Nut | Mutter | 5 |
| 0570 | 23 | 79 16 489 | | | 10 | Washer | Bricka | 5 |
| 0580 | 24 | 79 75 758 | | | 2 | Screw | Skruv | 5 |

5. Front Främre
6. Rear Bakre
147. Ch. --J7000218
148. Ch. J7000219--
149. Ch. --J7003163
150. Ch. J7003164--
179. Ch. --J7004737
180. Ch. J7004738--
299. Ch. --K7030326
300. Ch. K7030327--



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX



| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |


# 5-F18

## *Other sealings 5CK, 4SN*

## *Övriga lister 5CK, 4SN*

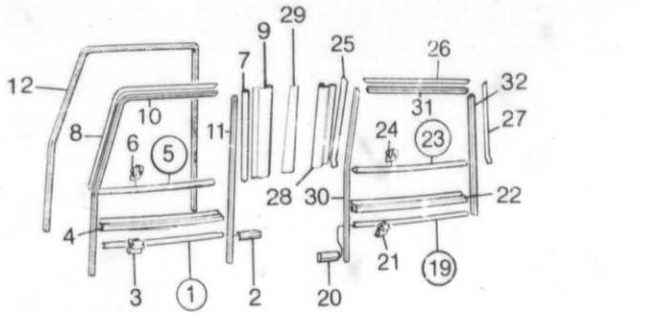

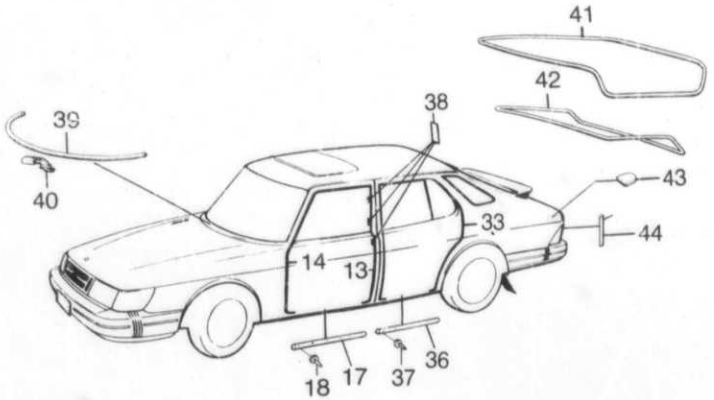
F5598 90086
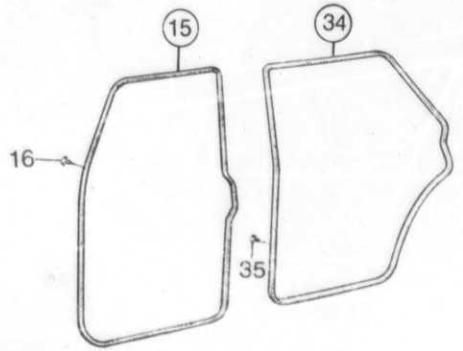
| 1150 | Pos | Part No/Art nr | K. S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S. L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 69 26 679 | | LH | 1 | Decor strip | Dekorlist | 4 |
| 0020 | 1 | 69 26 687 | | RH | 1 | Decor strip | Dekorlist | 4 |
| 0030 | 1 | 69 26 695 | | 610) | 1 | Decor strip | Dekorlist | 4 |
| 0040 | 1 | 69 26 703 | | 610) RH | 1 | Decor strip | Dekorlist | 4 |
| 0050 | 1 | 92 96 575 | | CD, LH | 1 | Decor strip | Dekorlist | 7 |
| 0060 | 1 | 92 96 583 | | CD, RH | 1 | Decor strip | Dekorlist | 7 |
| 0070 | 2 | *92 37 827* | | 39) LH NLS - USE 6926471 | 1 | .End piece | .Ändstycke | 4 |
| 0080 | 2 | 69 26 471 | | 40) LH | 1 | .End piece | .Ändstycke | 4 |
| 0090 | 2 | 92 37 835 | | 39) RH | 1 | .End piece | .Ändstycke | 4 |
| 0100 | 2 | 69 26 489 | | 40) RH | 1 | .End piece | .Ändstycke | 4 |
| 0110 | 3 | *82 78 947* | | NLS - USE 4094082 | 10 | Clip | Clips | 5 |
| 0120 | 4 | 92 37 686 | | | 2 | Sealing strip | Tätningslist | 4 |
| 0130 | 4 | 92 98 175 | | CD | 2 | Sealing strip | Tätningslist | 7 |
| 0140 | 5 | 69 25 325 | | | 2 | Sealing strip | Tätningslist | |
| 0150 | 5 | 84 09 658 | | CD | 2 | Seal | Tätning | 4 |
| 0160 | 6 | 82 74 573 | | | 8 | .Clip | .Clips | 4 |
| 0170 | 7 | 92 84 092 | | LH | 1 | Decor strip | Dekorlist | 3 |
| 0180 | 7 | 92 84 100 | | RH | 1 | Decor strip | Dekorlist | 3 |
| 0190 | 7 | 92 39 294 | | LH | 1 | Decor strip | Dekorlist | 3 |
| 0200 | 7 | 92 39 302 | | RH | 1 | Decor strip | Dekorlist | 3 |
| 0210 | 8 | 92 84 217 | | LH | 1 | Decor strip | Dekorlist | 3 |
| 0220 | 8 | 92 84 225 | | RH | 1 | Decor strip | Dekorlist | 3 |
| 0230 | 8 | 92 39 310 | | 610) LH | 1 | Decor strip | Dekorlist | 3 |
| 0240 | 8 | 92 39 328 | | 610) RH | 1 | Decor strip | Dekorlist | 3 |
| 0250 | 8 | 92 96 559 | | CD, LH | 1 | Decor strip | Dekorlist | 7 |
| 0260 | 8 | 92 96 567 | | CD, RH | 1 | Decor strip | Dekorlist | 7 |
| 0270 | 9 | 92 31 192 | | LH | 1 | Decor strip | Dekorlist | 2 |
| 0280 | 9 | 92 31 200 | | RH | 1 | Decor strip | Dekorlist | 2 |
| 0290 | 10 | *82 78 913* | | 35) NLS - USE 6918130 | 2 | Sealing strip | Tätningslist | 4 |
| 0300 | 11 | 82 76 479 | | 35) | 2 | Sealing strip | Tätningslist | 4 |
| 0310 | 12 | 69 18 130 | | 36) | 2 | Sealing strip | Tätningslist | 4 |
| 0320 | 13 | *82 73 047* | | NLS - USE 9292954 | 2 | Sealing strip | Tätningslist | 5 |
| 0330 | 13 | 92 92 954 | | | 2 | Sealing strip | Tätningslist | 3 |
| 0340 | 13 | *82 73 054* | | CD NLS - USE 9292954 | 2 | Sealing strip | Tätningslist | 5 |
| 0350 | 14 | 92 39 211 | | LH | 1 | Sealing strip | Tätningslist | 3 |
| 0360 | 14 | *92 39 229* | | RH NLS - USE 6911820 | 1 | Sealing strip | Tätningslist | 3 |
| 0370 | 14 | 69 11 820 | | GLE, TURBO | 2 | Sealing strip | Tätningslist | 3 |
| 0380 | 14 | 69 11 820 | | 74) | 2 | Sealing strip | Tätningslist | 3 |
| 0390 | 15 | *92 91 378* | | 73) LH NLS - USE 4096863, 6911820 | 1 | Sealing strip | Tätningslist | 5 |
| 0400 | 15 | *69 11 929* | | 74) LH NLS - USE 4096863 | 1 | Sealing strip | Tätningslist | 3 |
| 0410 | 15 | 92 91 386 | | 73) RH | 1 | Sealing strip | Tätningslist | 5 |
| 0420 | 15 | 69 11 937 | | 74) RH | 1 | Sealing strip | Tätningslist | 3 |
| 0430 | 15 | 92 95 163 | | CD, LH | 1 | Sealing strip | Tätningslist | 7 |
| 0440 | 15 | 92 95 171 | | CD, RH | 1 | Sealing strip | Tätningslist | 7 |
| 0450 | 16 | 69 11 614 | | | 72 | .Clip | .Clips | 5 |
| 0460 | 17 | 92 91 436 | | | 2 | Strip | List | 3 |
| 0470 | 18 | 82 35 178 | | | 12 | Pop rivet | Popnit | 5 |
| 0480 | 19 | 69 26 638 | | LH | 1 | Decor strip | Dekorlist | 4 |
| 0490 | 19 | 69 26 646 | | RH | 1 | Decor strip | Dekorlist | 4 |
| 0500 | 19 | 69 26 653 | | 610) LH | 1 | Decor strip | Dekorlist | 4 |
| 0510 | 19 | 69 26 661 | | 610) RH | 1 | Decor strip | Dekorlist | 4 |
| 0520 | 19 | 92 96 534 | | CD, LH | 1 | Decor strip | Dekorlist | 7 |
| 0530 | 19 | 92 96 542 | | CD, LH | 1 | Decor strip | Dekorlist | 7 |
| 0540 | 20 | 92 38 171 | | 39) LH | 1 | .End piece | .Ändstycke | 4 |
| 0550 | 20 | 69 26 455 | | 40) LH | 1 | .End piece | .Ändstycke | 4 |

35. Ch. -G2001060, -G3000767, -G7006591
36. Ch. G2001061-, G3000768-, G7006592-
39. Ch.-G2001444,-G3001556, -G7004271.
40. Ch.G2001445-,G3001557-,G7004272-.
73. Ch. -F1033155, -G2027532, -G3020964, -G7032065
74. Ch. F1033156-, G2027533-, G3020965-, G7032066-
610. Black Svart



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX



| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |


# 5-F20

## *Other sealings 5CK, 4SN*

## *Övriga lister 5CK, 4SN*

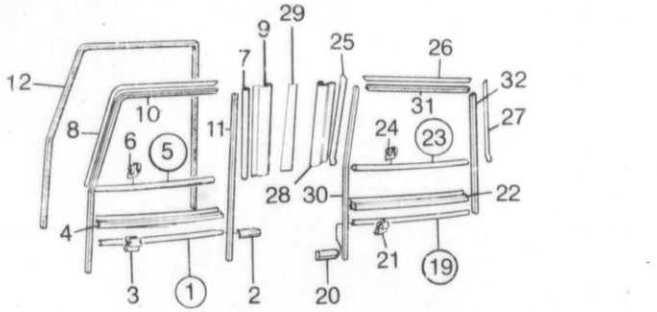

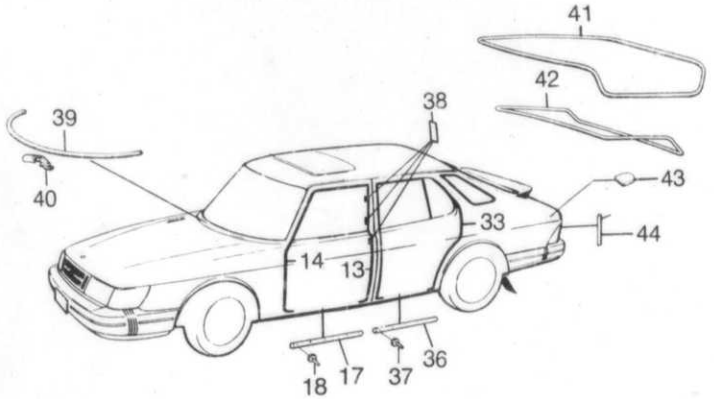
F5598 90086
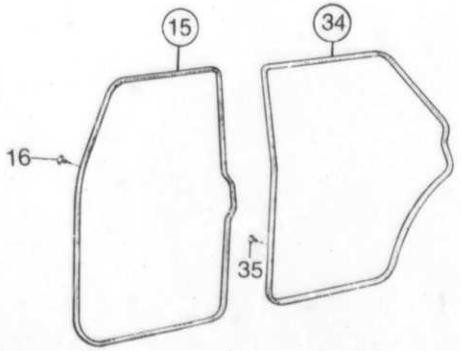
| 1150 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0560 | 20 | 92 38 189 | | 2D RH | 1 | ,End piece | ,Ändstycke | 4 |
| 0570 | 20 | 69 26 463 | | 4D RH | 1 | ,End piece | ,Ändstycke | 4 |
| 0580 | 21 | *82 78 947* | | NLS - USE 4094082 | 8 | Clip | Clips | 5 |
| 0590 | 22 | 92 37 694 | | | 2 | Rubber moulding | Gummilist | 4 |
| 0600 | 22 | 92 98 183 | | CD | 2 | Rubber moulding | Gummilist | 7 |
| 0610 | 23 | 69 25 333 | | | 2 | Sealing strip | Tätningslist | |
| 0620 | 23 | *92 98 522* | | CD NLS - USE 9237553 | 2 | Sealing strip | Tätningslist | 4 |
| 0630 | 24 | 82 74 573 | | | 8 | ,Clip | ,Clips | 4 |
| 0640 | 25 | 69 11 671 | | LH | 1 | Decor strip | Dekorlist | 3 |
| 0650 | 25 | 69 11 689 | | RH | 1 | Decor strip | Dekorlist | 3 |
| 0660 | 25 | 69 11 697 | | 610) LH | 1 | Decor strip | Dekorlist | 3 |
| 0670 | 25 | 69 11 705 | | 610) RH | 1 | Decor strip | Dekorlist | 3 |
| 0680 | 26 | 92 84 118 | | LH | 1 | Decor strip | Dekorlist | 3 |
| 0690 | 26 | 92 84 126 | | RH | 1 | Decor strip | Dekorlist | 3 |
| 0700 | 26 | 92 39 518 | | 610) LH | 1 | Decor strip | Dekorlist | 3 |
| 0710 | 26 | 92 39 526 | | 610) RH | 1 | Decor strip | Dekorlist | 3 |
| 0720 | 26 | 92 95 437 | | CD, LH | 1 | Decor strip | Dekorlist | 7 |
| 0730 | 26 | 92 95 445 | | CD, RH | 1 | Decor strip | Dekorlist | 7 |
| 0740 | 27 | 92 84 159 | | LH | 1 | Decor strip | Dekorlist | 3 |
| 0750 | 27 | 92 84 167 | | RH | 1 | Decor strip | Dekorlist | 3 |
| 0760 | 27 | 92 39 716 | | 610) LH | 1 | Decor strip | Dekorlist | 3 |
| 0770 | 27 | 92 39 724 | | 610) RH | 1 | Decor strip | Dekorlist | 3 |
| 0780 | 28 | 92 31 218 | | LH | 1 | Decor strip | Dekorlist | 2 |
| 0790 | 28 | 92 31 226 | | RH | 1 | Decor strip | Dekorlist | 2 |
| 0800 | 29 | 92 31 234 | | 610) LH | 1 | Decor strip | Dekorlist | 4 |
| 0810 | 29 | 92 31 242 | | 610) RH | 1 | Decor strip | Dekorlist | 4 |
| 0820 | 30 | 82 76 503 | | | 2 | Seal | Tätning | 4 |
| 0830 | 31 | 82 76 511 | | | 2 | Seal | Tätning | 4 |
| 0840 | 31 | 92 95 833 | | CD | 2 | Seal | Tätning | 7 |
| 0850 | 32 | 82 76 529 | | | 2 | Seal | Tätning | 4 |
| 0860 | 33 | 69 17 785 | | LH | 1 | Sealing strip | Tätningslist | 3 |
| 0870 | 33 | 69 17 793 | | RH | 1 | Sealing strip | Tätningslist | 3 |
| 0880 | 33 | 92 96 658 | | CD, LH | 1 | Sealing strip | Tätningslist | 7 |
| 0890 | 33 | 92 96 666 | | CD, RH | 1 | Sealing strip | Tätningslist | 7 |
| 0900 | 34 | 82 86 759 | | LH | 1 | Sealing strip | Tätningslist | 3 |
| 0910 | 34 | 82 86 767 | | RH | 1 | Sealing strip | Tätningslist | 3 |
| 0920 | 34 | 92 95 189 | | CD, LH | 1 | Sealing strip | Tätningslist | 7 |
| 0930 | 34 | 92 95 197 | | CD, RH | 1 | Sealing strip | Tätningslist | 7 |
| 0940 | 35 | 69 11 614 | | | 74 | ,Clip | ,Clips | 5 |
| 0950 | 36 | 82 86 890 | | | | Strip | List | 3 |
| 0960 | 37 | 82 35 178 | | | 8 | Pop rivet | Popnit | 5 |
| 0970 | 38 | 84 06 142 | | 50M | X | Tape | Tape | 5 |
| 0980 | 39 | 92 82 104 | | | 1 | Seal | Tätning | 3 |
| 0990 | 40 | 84 07 488 | | | 5 | Clip | Clips | 5 |
| 1000 | 41 | 82 89 803 | | | 1 | Sealing strip | Tätningslist | 4 |
| 1010 | 42 | 92 26 028 | | 4SN | 1 | Sealing strip | Tätningslist | 4 |
| 1020 | 43 | *82 47 801* | | NLS - USE 9297458 | 2 | Spacer | Mellanlägg | 5 |
| 1030 | 44 | 92 36 605 | | | 2 | Strip | List | 4 |

39. Ch.-G2001444,-G3001556, -G7004271.
40. Ch.-G2001445-,G3001557-,G7004272-.
610. Black Svart


MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

8A GROUP INDEX

| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-F22 *Bumper, front* *Stötfångare, främre*

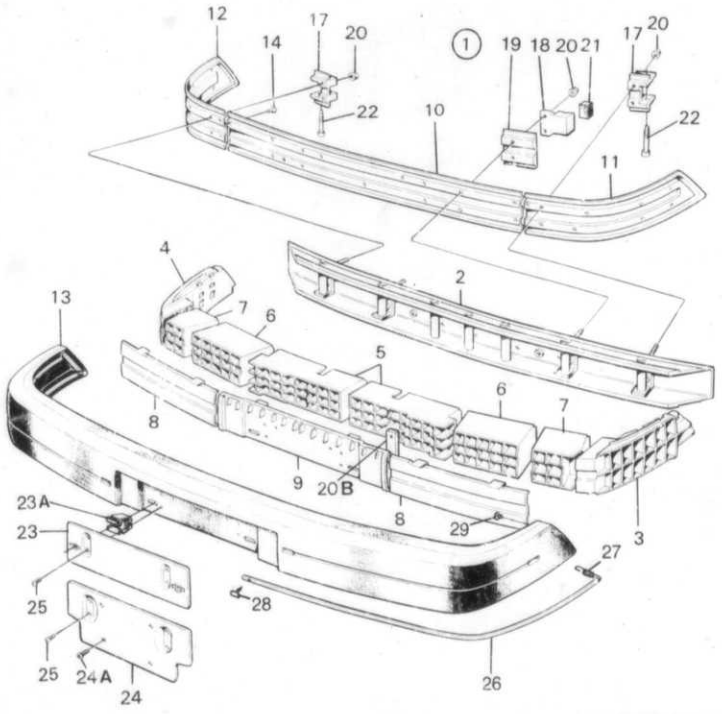


R 7123–900

| 1200 | Pos | Part No/Art.nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 92 84 761 | | | 1 | Bumper | Stötfångare | 3 |
| 0020 | 2 | 82 58 279 | | | 1 | .Rail | .Skena | 5 |
| 0030 | 3 | 92 92 236 | | LH | 1 | .Cell section | .Cellblock | 5 |
| 0040 | 4 | 92 92 244 | | RH | 1 | .Cell section | .Cellblock | 5 |
| 0050 | 5 | 82 73 278 | | | 2 | .Cell section | .Cellblock | 5 |
| 0060 | 6 | 82 73 286 | | | 2 | .Cell section | .Cellblock | 5 |
| 0070 | 7 | 82 73 294 | | | 2 | .Cell section | .Cellblock | 5 |
| 0080 | 8 | 82 58 378 | | | 2 | .Rail | .Skena | 5 |
| 0090 | 9 | 82 58 360 | | | 1 | .Rail | .Skena | 5 |
| 0100 | 10 | 82 58 386 | | | 1 | .Attaching rail | .Fästskena | 6 |
| 0110 | 11 | 82 58 394 | | LH | 1 | .Attaching rail | .Fästskena | 6 |
| 0120 | 12 | 82 58 402 | | RH | 1 | .Attaching rail | .Fästskena | 6 |
| 0130 | 13 | 92 37 165 | | | 1 | .Protection | .Skyddshölje | 3 |
| 0140 | 14 | 79 22 420 | | | 23 | .Screw | .Skruv | 5 |
| 0150 | 17 | 82 66 777 | | LH | 1 | .Bracket | .Fäste | 5 |
| 0160 | 17 | 82 66 785 | | RH | 1 | .Bracket | .Fäste | 5 |
| 0170 | 18 | 82 66 744 | | | 2 | .Spacer | .Mellanlägg | 5 |
| 0180 | 19 | 82 66 579 | | | 2 | .Spacer | .Mellanlägg | 5 |
| 0190 | 20 | 79 67 953 | | | 8 | .Nut | .Mutter | 5 |
| 0200 | 20B | 82 58 352 | | | 2 | .Washer | .Bricka | 5 |
| 0210 | 21 | 82 78 020 | | | 2 | Buffer | Buffert | 5 |
| 0220 | 22 | 82 66 900 | | | 2 | Screw | Skruv | 5 |
| 0230 | 23 | 82 58 428 | | | 1 | Bracket | Hållare | 3 |
| 0240 | 23A | 79 70 403 | | | 2 | .Cage nut | .Korgmutter | 5 |
| 0250 | 24 | 69 21 142 | | US | 1 | Bracket | Hållare | 3 |
| 0260 | 24 | 69 21 142 | | 65) CA, JP | 1 | Bracket | Hållare | 3 |
| 0270 | 24A | 79 77 390 | | | 4 | .Screw | .Skruv | 5 |
| 0280 | 25 | 80 59 578 | | | 4 | Screw | Skruv | 5 |
| 0290 | 26 | 92 83 441 | | | 2 | Decor strip | Dekorlist | 3 |
| 0300 | 26 | 82 83 863 | | ALTERN. TO 9283441 | 2 | Decor strip | Dekorlist | 3 |
| 0310 | | | | See page 8A-173, 5-H06 | | | | |
| 0320 | 26 | *92 92 202* | | 1) NLS | 1 | .Decor strip | .Dekorlist | 5 |
| 0330 | 27 | 92 92 228 | | | 1 | .Spring | .Fjäder | 4 |
| 0340 | 28 | 92 91 998 | | | 1 | .Clip | .Clips | 5 |
| 0350 | 29 | 79 73 308 | | | 1 | .Rivet | .Nit | 5 |

1. Not as separate spare part. Ej som separat reservdel.
65. Ch. G2011400–



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-F24

## 312) Bumper, front
## 312) Stötfångare, främre

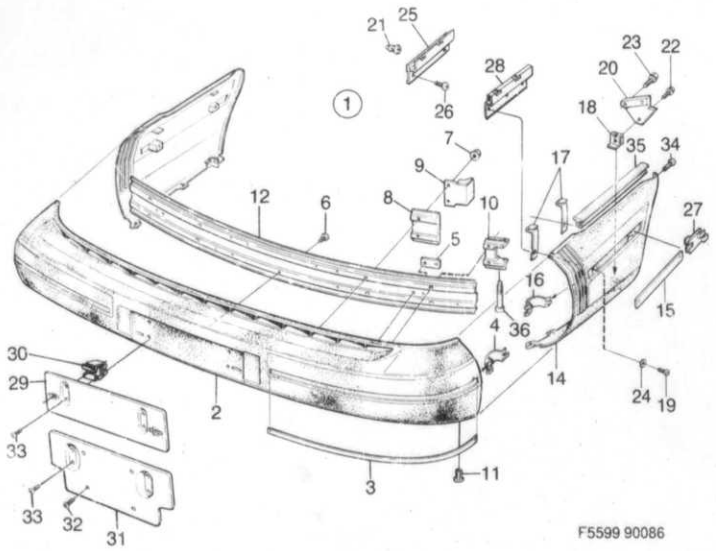


| 1250 | Pos | Part No/Art nr | K S | Notes/Anmärkning | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 69 14 618 | | 610) C, I | 1 | Bumper | Stötfångare | 3 |
| 0020 | 1 | 69 43 906 | | 570) TURBO | 1 | Bumper | Stötfångare | 3 |
| 0030 | 2 | 69 42 940 | | 610) C, I | 1 | .Outer casing | .Hölje | 3 |
| 0040 | 2 | 69 42 957 | | 570) TURBO | 1 | .Outer casing | .Hölje | 3 |
| 0050 | 3 | 69 19 948 | | | 2 | .Decor strip | .Dekorlist | 3 |
| 0060 | 4 | 69 59 142 | | | 2 | .Spring | .Fjäder | 4 |
| 0070 | 5 | 69 38 328 | | | 2 | .Spacer washer | .Distansbricka | 5 |
| 0080 | 6 | 79 22 420 | | | 9 | .Screw | .Skruv | 5 |
| 0090 | 7 | 79 67 953 | | | 8 | .Nut | .Mutter | 5 |
| 0100 | 8 | 82 66 579 | | | 2 | .Spacer | .Mellanlägg | 5 |
| 0110 | 9 | 82 66 744 | | | 2 | .Spacer | .Mellanlägg | 5 |
| 0120 | 10 | 82 66 777 | | LH | 1 | .Bracket | .Fäste | 5 |
| 0130 | 10 | 82 66 785 | | RH | 1 | .Bracket | .Fäste | 5 |
| 0140 | 11 | 92 88 846 | | | 9 | .Nut | .Mutter | 5 |
| 0150 | 12 | 92 94 281 | | | 1 | .Attaching rail | .Fästskena | 6 |
| 0160 | 13 | 94 89 758 | | | 2 | .Washer | .Bricka | 5 |
| 0170 | 14 | *92 94 331* | | -1987,610) LH, C, I NLS - USE 6942825 | 1 | Side part | Sidodel | 2 |
| 0180 | 14 | 69 42 825 | | 1988-,610) LH, C, I | 1 | Side part | Sidodel | 2 |
| 0190 | 14 | *69 39 128* | | -1987,570) LH, TURBO NLS - USE 6942841 | 1 | Side part | Sidodel | 2 |
| 0200 | 14 | 69 42 841 | | 1988-,570) LH, TURBO | 1 | Side part | Sidodel | 2 |
| 0210 | 14 | *92 94 349* | | -1987,610) RH, C, I NLS - USE 6942833 | 1 | Side part | Sidodel | 2 |
| 0220 | 14 | 69 42 833 | | 1988-,610) RH, C, I | 1 | Side part | Sidodel | 2 |
| 0230 | 14 | *69 39 136* | | -1987,570) RH, TURBO NLS - USE 6942858 | 1 | Side part | Sidodel | 2 |
| 0240 | 14 | 69 42 858 | | 1988-,570) RH, TURBO | 1 | Side part | Sidodel | 2 |
| 0250 | 15 | 69 40 357 | | | 2 | .Decor strip | .Dekorlist | 3 |
| 0260 | 16 | 69 59 142 | | | 1 | .Spring | .Fjäder | 4 |
| 0270 | 17 | 69 28 592 | | | 2 | .Spring | .Fjäder | 5 |
| 0280 | 18 | 79 68 001 | | | 1 | .Clip nut | .Clipsmutter | 5 |
| 0290 | 19 | 79 72 821 | | | 2 | .Screw | .Skruv | 5 |
| 0300 | 20 | 69 14 915 | | LH | 1 | End piece | Ändstycke | 3 |
| 0310 | 20 | 69 14 923 | | RH | 1 | End piece | Ändstycke | 3 |
| 0320 | 21 | 69 11 804 | | | 4 | Bushing | Bussning | |
| 0330 | 22 | 79 75 774 | | | 2 | Screw | Skruv | 5 |
| 0340 | 23 | 79 75 790 | | | 4 | Screw | Skruv | 5 |
| 0350 | 24 | 92 30 293 | | | 4 | Washer | Bricka | 5 |
| 0360 | 25 | 69 37 148 | | LH | 1 | Attaching plate | Fästplatta | 5 |
| 0370 | 25 | 69 37 155 | | RH | 1 | Attaching plate | Fästplatta | 5 |
| 0380 | 26 | 79 22 354 | | | 4 | Screw | Skruv | 5 |
| 0390 | 27 | 69 40 175 | | 5) LH | 1 | Clamp | Klammer | 5 |
| 0400 | 27 | 69 40 183 | | 5) RH | 1 | Clamp | Klammer | 5 |
| 0410 | 28 | 69 37 163 | | | 2 | Attaching profile | Fästprofil | 5 |
| 0420 | 29 | 82 58 428 | | | 1 | Bracket | Hållare | 3 |
| 0430 | 30 | 79 70 403 | | | 2 | .Cage nut | .Korgmutter | 5 |
| 0440 | 31 | 69 21 142 | | US | 1 | Bracket | Hållare | 3 |
| 0450 | 31 | 69 21 142 | | 65) CA, JP | 1 | Bracket | Hållare | 3 |
| 0460 | 32 | 79 77 390 | | | 4 | .Screw | .Skruv | 5 |
| 0470 | 33 | 80 59 578 | | | 4 | Screw | Skruv | 5 |
| 0480 | 34 | 79 77 796 | | | 2 | Screw | Skruv | 5 |
| 0490 | 35 | 69 44 268 | | 1988-, LH | 1 | Strip | List | 2 |
| 0500 | 35 | 69 42 627 | | 1988-, RH | 1 | Strip | List | 2 |
| 0510 | 36 | 82 66 900 | | | 2 | Screw | Skruv | 5 |

5. Front Främre
65. Ch. G2011400--
312. Integrated Integrerade
570. Grey Grå
610. Black Svart




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-G02 *Bumper, rear* / *Stötfångare, bakre*

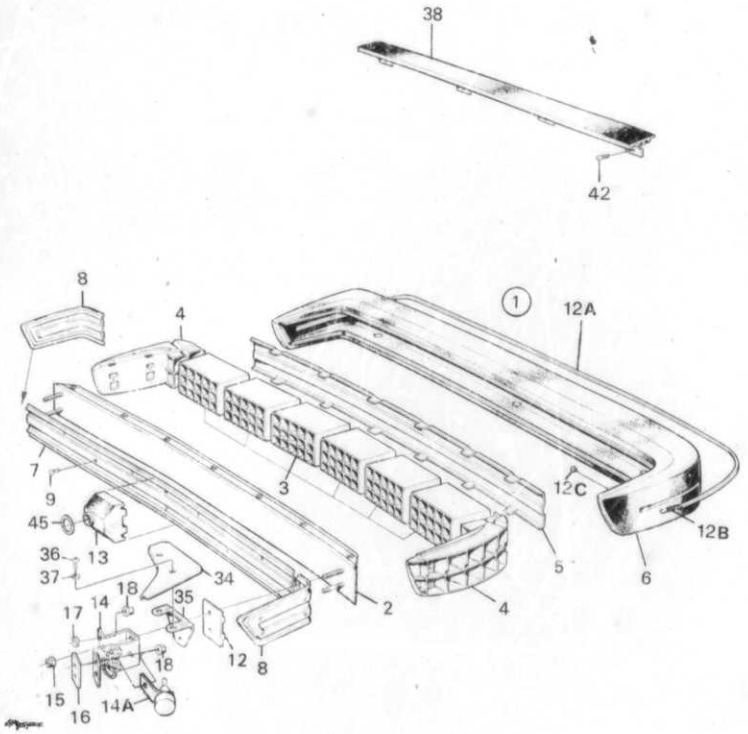


R 7888--900

| 1300 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 92 84 753 | | | 1 | Bumper | Stötfångare | 4 |
| 0020 | 2 | 92 26 713 | | | 1 | .Rail | .Skena | 5 |
| 0030 | 3 | *92 24 676* | | NLS - USE 8273286 | 6 | .Cell section | .Cellblock | 5 |
| 0040 | 4 | 92 83 573 | | LH | 1 | .Cell section | .Cellblock | 5 |
| 0050 | 4 | 92 92 269 | | RH | 1 | .Cell section | .Cellblock | 5 |
| 0060 | 5 | 92 58 212 | | | 2 | .Rail | .Skena | 5 |
| 0070 | 6 | 92 37 173 | | | 1 | .Protection | .Skyddshölje | 3 |
| 0080 | 7 | 82 47 553 | | | 1 | .Attaching rail | .Fästskena | 6 |
| 0090 | 8 | 82 49 310 | | LH | 1 | .Attaching rail | .Fästskena | 6 |
| 0100 | 8 | 82 49 328 | | RH | 1 | .Attaching rail | .Fästskena | 6 |
| 0110 | 9 | 79 22 420 | | | 19 | .Screw | .Skruv | 5 |
| 0120 | 12 | 92 88 515 | | | 2 | .Spacer | .Mellanlägg | 5 |
| 0130 | 12A | 92 82 773 | | | 1 | Decor strip | Dekorlist | 3 |
| 0140 | 12A | 82 83 871 | | ALT TO 9282773 | 1 | Decor strip | Dekorlist | 3 |
| 0150 | | | | See page 8A-173, 5-H06 | | | | |
| 0160 | 12A | *92 91 923* | | 1) NLS | 1 | .Decor strip | .Dekorlist | 3 |
| 0170 | 12B | 92 92 228 | | | 1 | .Spring | .Fjäder | 4 |
| 0180 | 12C | 79 73 308 | | | 1 | .Rivet | .Nit | 5 |
| 0190 | 13 | 82 48 049 | | | 1 | Buffer | Buffert | 4 |
| 0200 | 13 | 82 48 049 | | US | 1 | Buffer | Buffert | 4 |
| 0210 | 13 | 92 28 347 | | SN | 1 | Buffer | Buffert | 4 |
| 0220 | 13 | 92 28 347 | | SN, US | 1 | Buffer | Buffert | 4 |
| 0230 | 14 | 82 48 015 | | LH | 1 | Bracket | Fäste | 4 |
| 0240 | 14 | 82 48 023 | | RH | 1 | Bracket | Fäste | 4 |
| 0250 | 14 | 92 23 298 | | 50), LH, SN | 1 | Bracket | Fäste | 4 |
| 0260 | 14 | 69 28 576 | | 51), LH, SN | 1 | Bracket | Fäste | 4 |
| 0270 | 14 | 92 23 306 | | RH, SN | 1 | Bracket | Fäste | 4 |
| 0280 | 14 | 82 48 015 | | 50), LH, US | 1 | Bracket | Fäste | 4 |
| 0290 | 14 | 69 37 015 | | 51), LH, US | 1 | Bracket | Fäste | 4 |
| 0300 | 14 | 82 48 023 | | RH, US | 1 | Bracket | Fäste | 4 |
| 0310 | 14 | 92 23 298 | | 50), LH, SN, US | 1 | Bracket | Fäste | 4 |
| 0320 | 14 | 69 28 576 | | 51), LH, SN, US | 1 | Bracket | Fäste | 4 |
| 0330 | 14 | 92 23 306 | | RH, SN, US | 1 | Bracket | Fäste | 4 |
| 0340 | 14A | 69 12 810 | | | 2 | Buffer | Buffert | 5 |
| 0350 | 15 | 79 67 953 | | | 8 | Nut | Mutter | 5 |
| 0360 | 16 | 82 51 944 | | | 2 | Seal | Tätning | 5 |
| 0370 | 17 | 92 31 408 | | | 2 | Washer | Bricka | 5 |
| 0380 | 18 | 79 67 979 | | | 6 | Nut | Mutter | 5 |
| 0390 | 34 | 82 58 832 | | LH | 1 | Cover plate | Täckplåt | 3 |
| 0400 | 34 | 82 58 840 | | RH | 1 | Cover plate | Täckplåt | 3 |
| 0410 | 34 | 82 58 832 | | LH, US | 1 | Cover plate | Täckplåt | 3 |
| 0420 | 34 | 82 58 840 | | RH, US | 1 | Cover plate | Täckplåt | 3 |
| 0430 | 35 | 82 58 253 | | | 2 | Attaching bracket | Fästvinkel | 5 |
| 0440 | 35 | 82 58 253 | | US | 2 | Attaching bracket | Fästvinkel | 5 |
| 0450 | 36 | 79 22 206 | | | 4 | Screw | Skruv | 5 |
| 0460 | 37 | 70 45 776 | | | 4 | Washer | Bricka | 5 |
| 0470 | 38 | 92 28 040 | | SN | 1 | Protecting moulding | Skyddslist | 5 |
| 0480 | 38 | 92 28 040 | | SN, US | 1 | Protecting moulding | Skyddslist | 5 |
| 0490 | 45 | 92 36 528 | | | 1 | Seal | Tätning | 5 |

1. Not as separate spare part. Ej som separat reservdel.
50. Ch. --G2021146, --G3015680, --G7024051
51. Ch. G2021147--, G3015681--, G7024052--




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Toois, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-G04 312) Bumper, rear 312) Stötfångare, bakre

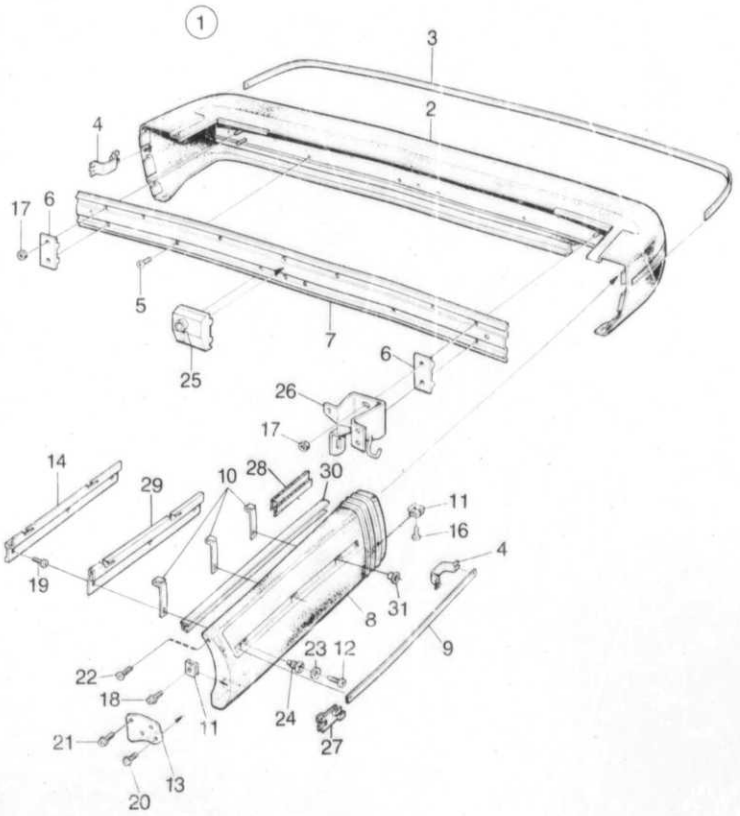


R 9416 - 900

| 1350 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 69 14 808 | | 610) CK | 1 | Bumper | Stötfångare | 4 |
| 0020 | 1 | 69 19 906 | | 610) SN | 1 | Bumper | Stötfångare | 4 |
| 0030 | 1 | 69 40 100 | | 570) CK, TURBO | 1 | Bumper | Stötfångare | 4 |
| 0040 | 1 | 69 40 084 | | 570) SN, CV, TURBO | 1 | Bumper | Stötfångare | 4 |
| 0050 | 2 | 69 14 816 | | 610) CK | 1 | .Outer casing | .Hölje | 3 |
| 0060 | 2 | 69 14 931 | | 610) SN | 1 | .Outer casing | .Hölje | 3 |
| 0070 | 2 | 69 43 948 | | 570) CK, TURBO | 1 | .Outer casing | .Hölje | 3 |
| 0080 | 2 | 69 43 914 | | 570) SN, CV, TURBO | 1 | .Outer casing | .Hölje | 3 |
| 0090 | 3 | *69 40 381* | | NLS - USE 6973945 | 1 | .Decor strip | .Dekorlist | 3 |
| 0100 | 4 | 69 59 142 | | | 1 | .Spring | .Fjäder | 4 |
| 0110 | 5 | 79 22 438 | | | 8 | .Screw | .Skruv | 5 |
| 0120 | 6 | 69 40 233 | | | 2 | .Spacer | .Mellanlägg | 5 |
| 0130 | 7 | 92 94 471 | | | 1 | .Attaching rail | .Fästskena | 6 |
| 0140 | 8 | *69 14 956* | | -1987,610) LH, CK NLS - USE 4088324 | 1 | Side part | Sidodel | 2 |
| 0150 | 8 | *69 43 997* | | 1988-,270,610) LH, CK NLS - USE 4088324 | 1 | Side part | Sidodel | 2 |
| 0160 | 8 | 40 88 324 | | 271,610) LH, CK | 1 | Side part | Sidodel | 2 |
| 0170 | 8 | *69 14 964* | | -1987,610) RH, CK NLS - USE 4088332 | 1 | Side part | Sidodel | 2 |
| 0180 | 8 | *69 44 003* | | 1988-,270,610) RH, CK NLS - USE 4088332 | 1 | Side part | Sidodel | 2 |
| 0190 | 8 | 40 88 332 | | 271,610) RH, CK | 1 | Side part | Sidodel | 2 |
| 0200 | 8 | *69 14 832* | | -1987,610) LH, SN, CV NLS - USE 6942866 | 1 | Side part | Sidodel | 2 |
| 0210 | 8 | 69 42 836 | | 1988-,610) LH, SN, CV | 1 | Side part | Sidodel | 2 |
| 0220 | 8 | *69 14 840* | | -1987,610) RH, SN, CV NLS - USE 6942874 | 1 | Side part | Sidodel | 2 |
| 0230 | 8 | 69 42 874 | | 1988-,610) RH, SN, CV | 1 | Side part | Sidodel | 2 |
| 0240 | 8 | 69 39 193 | | -1987,570) LH, CK | 1 | Side part | Sidodel | 2 |
| 0250 | 8 | *69 44 011* | | 1988-,270,570) LH, CK NLS - USE 4088340 | 1 | Side part | Sidodel | 2 |
| 0260 | 8 | 40 88 340 | | 271,570) LH, CK | 1 | Side part | Sidodel | 2 |
| 0270 | 8 | 69 39 201 | | -1987,570) RH, CK | 1 | Side part | Sidodel | 2 |
| 0280 | 8 | *69 44 029* | | 1988-,270,570) RH, CK NLS - USE 4088357 | 1 | Side part | Sidodel | 2 |
| 0290 | 8 | 40 88 357 | | 271,570) RH, CK | 1 | Side part | Sidodel | 2 |
| 0300 | 8 | 69 39 177 | | -1987,570) LH, SN, CV | 1 | Side part | Sidodel | 2 |
| 0310 | 8 | 69 42 852 | | 1988-,570) LH, SN, CV | 1 | Side part | Sidodel | 2 |
| 0320 | 8 | 69 39 185 | | -1987,570) RH, SN, CV | 1 | Side part | Sidodel | 2 |
| 0330 | 8 | 69 42 890 | | 1988-,570) RH, SN, CV | 1 | Side part | Sidodel | 2 |
| 0340 | 9 | 69 40 365 | | | 2 | .Decor strip | .Dekorlist | 3 |
| 0350 | 10 | 69 28 592 | | | 3 | .Spring | .Fjäder | 5 |
| 0360 | 11 | 79 68 001 | | | 2 | .Clip nut | .Clipsmutter | 5 |
| 0370 | 12 | 79 72 821 | | | 3 | .Screw | .Skruv | 5 |
| 0380 | 13 | 69 28 204 | | LH, CK | 1 | End piece | Ändstycke | 3 |
| 0390 | 13 | 69 28 212 | | RH, CK | 1 | End piece | Ändstycke | 3 |
| 0400 | 13 | 69 27 784 | | LH, SN, CV | 1 | End piece | Ändstycke | 3 |
| 0410 | 13 | 69 27 792 | | RH, SN, CV | 1 | End piece | Ändstycke | 3 |
| 0420 | 14 | 69 37 346 | | LH, CK | 1 | Attaching fitting | Fästbeslag | 5 |
| 0430 | 14 | 69 37 353 | | RH, CK | 1 | Attaching fitting | Fästbeslag | 5 |
| 0440 | 14 | 69 37 304 | | LH, SN, CV | 1 | Attaching fitting | Fästbeslag | 5 |
| 0450 | 14 | 69 37 312 | | RH, SN, CV | 1 | Attaching fitting | Fästbeslag | 5 |
| 0460 | 16 | 79 22 354 | | | 6 | Screw | Skruv | 5 |
| 0470 | 17 | 79 67 953 | | | 4 | Nut | Mutter | 5 |
| 0480 | 18 | 79 69 314 | | | 4 | Screw | Skruv | 5 |
| 0490 | 19 | 79 72 821 | | | 6 | Screw | Skruv | 5 |
| 0500 | 20 | 79 75 774 | | | 2 | Screw | Skruv | 5 |

270. Ch. -K3015324, -K7013905
271. Ch. K3015325-, K7013906-
312. Integrated Integrerade
570. Grey Grå
610. Black Svart



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-G06

## 312) Bumper, rear
## 312) Stötfångare, bakre

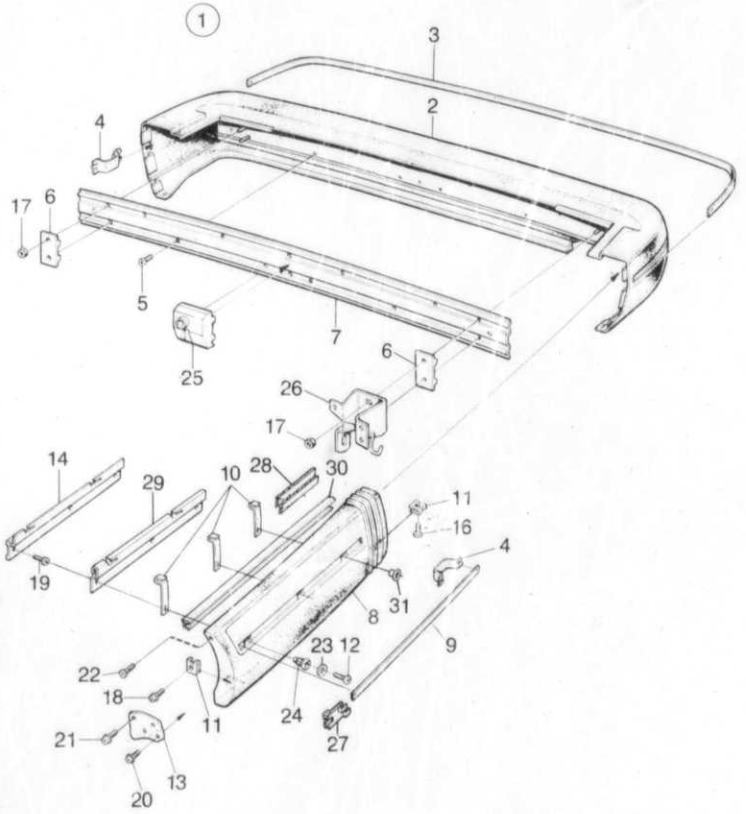


R 9416 - 900

| 1350 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0510 | 21 | 79 75 782 | | | 6 | Screw | Skruv | 5 |
| 0520 | 22 | 79 77 796 | | | 2 | Screw | Skruv | 5 |
| 0530 | 23 | 92 30 293 | | | 6 | Washer | Bricka | 5 |
| 0540 | 24 | 69 11 804 | | | 6 | Bushing | Bussning | 4 |
| 0550 | 25 | 92 94 539 | | CK | 1 | Buffer | Buffert | 4 |
| 0560 | 25 | 92 94 547 | | 1987, SN, CV | 1 | Buffer | Buffert | 4 |
| 0570 | 25 | 69 43 690 | | 1988-, SN | 1 | Buffer | Buffert | 4 |
| 0580 | 26 | 69 38 765 | | LH, CK | 1 | Bracket | Fäste | 4 |
| 0590 | 26 | 69 38 773 | | RH, CK | 1 | Bracket | Fäste | 4 |
| 0600 | 26 | 69 38 740 | | LH, SN, CV | 1 | Bracket | Fäste | 4 |
| 0610 | 26 | 69 38 757 | | RH, SN, CV | 1 | Bracket | Fäste | 4 |
| 0620 | 27 | 69 40 183 | | 6) LH | 1 | Clamp | Klammer | 5 |
| 0630 | 27 | 69 40 175 | | 6) RH | 1 | Clamp | Klammer | 5 |
| 0640 | 28 | 69 40 852 | | 162) SN, CV | 2 | Cover moulding | Täcklist | 5 |
| 0650 | 29 | 69 37 288 | | LH, SN, CV | 1 | Attaching profile | Fästprofil | 5 |
| 0660 | 29 | 69 37 296 | | RH, SN, CV | 1 | Attaching profile | Fästprofil | 5 |
| 0670 | 30 | 69 42 627 | | 1988-, LH | 1 | Strip | List | 2 |
| 0680 | 30 | 69 44 268 | | 1988-, RH | 1 | Strip | List | 2 |
| 0690 | 31 | 85 73 958 | | 1988- | 2 | Sleeve | Hylsa | 5 |

6. Rear Bakre
162. Ch. --H2024147, --H3021961, --J7000060
312. Integrated Integrerade



MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

8A GROUP INDEX

| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-G08

Bumpers and touch-up paint
*1-can*

Stötfångare och bättringsfärg
*1-komponent*

| Pos | Part No/Artnr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| | | | | | FINISHING PAINT | TÄCKFÄRG | |
| 1L | 78 20 228 | | BODY COLOUR 170 | X | Touch-up paint<br>Black | Bättringsfärg<br>Svart | 3 |
| 1/4L | 78 20 244 | | BODY COLOUR 170 | X | Touch-up paint<br>Black | Bättringsfärg<br>Svart | 3 |
| 1L | 84 87 845 | | 1986, BODY COLOUR 168 | X | Touch-up paint<br>Chestnut brown | Bättringsfärg<br>Kastanjebrun | 3 |
| 1/4L | 84 87 852 | | 1986, BODY COLOUR 168 | X | Touch-up paint<br>Chestnut brown | Bättringsfärg<br>Kastanjebrun | 3 |
| 1L | 97 46 777 | | -1987, BODY COLOUR 162 | X | Touch-up paint<br>Dolomite sand | Bättringsfärg<br>Dolomitersand | 3 |
| 1/4L | 97 46 785 | | -1987, BODY COLOUR 162 | X | Touch-up paint<br>Dolomite sand | Bättringsfärg<br>Dolomitersand | 3 |
| 1L | 84 87 969 | | -1987, BODY COLOUR 127 | X | Touch-up paint<br>Cherry red | Bättringsfärg<br>Cherryröd | 3 |
| 1L | 96 98 853 | | 1988-, BODY COLOUR 214 | X | Touch-up paint<br>Cherry red | Bättringsfärg<br>Cherryröd | 3 |
| 1/4L | 84 87 977 | | -1987, BODY COLOUR 127 | X | Touch-up paint<br>Cherry red | Bättringsfärg<br>Cherryröd | 3 |
| 1/4L | 96 98 861 | | 1988-, BODY COLOUR 214 | X | Touch-up paint<br>Cherry red | Bättringsfärg<br>Cherryröd | 3 |
| 1L | 84 87 266 | | BODY COLOUR 153 | X | Touch-up paint<br>Cirrus white | Bättringsfärg<br>Cirrusvit | 3 |
| 1/4L | 84 87 274 | | BODY COLOUR 153 | X | Touch-up paint<br>Cirrus white | Bättringsfärg<br>Cirrusvit | 3 |
| 1L | 84 87 811 | | 1986, BODY COLOUR 131 | X | Touch-up paint<br>Admiral blue | Bättringsfärg<br>Admiralblå | 3 |
| 1/4L | 84 87 829 | | 1986, BODY COLOUR 131 | X | Touch-up paint<br>Admiral blue | Bättringsfärg<br>Admiralblå | 3 |
| 1L | 96 98 135 | | 1987-1988, BODY COLOUR 188 | X | Touch-up paint<br>Florentine yellow | Bättringsfärg<br>Florentinergul | 3 |
| 1/4L | 96 98 143 | | 1987-1988, BODY COLOUR 188 | X | Touch-up paint<br>Florentine yellow | Bättringsfärg<br>Florentinergul | 3 |
| 1L | 96 98 168 | | 1987-, BODY COLOUR 198 | X | Touch-up paint<br>Embassy blue | Bättringsfärg<br>Ambassadblå | 3 |
| 1/4L | 96 98 176 | | 1987-, BODY COLOUR 198 | X | Touch-up paint<br>Embassy blue | Bättringsfärg<br>Ambassadblå | 3 |
| 1L | 97 46 744 | | -1988, BODY COLOUR 157 | X | Touch-up paint<br>Zircon blue | Bättringsfärg<br>Zirkonblå | 3 |
| 1/4L | 97 46 751 | | -1988, BODY COLOUR 157 | X | Touch-up paint<br>Zircon blue | Bättringsfärg<br>Zirkonblå | 3 |
| 1L | 96 98 481 | | 1988-, BODY COLOUR 213 | X | Touch-up paint<br>Rodonite red | Bättringsfärg<br>Rodonitröd | 3 |
| 1/4L | 96 98 499 | | 1988-, BODY COLOUR 213 | X | Touch-up paint<br>Rodonite red | Bättringsfärg<br>Rodonitröd | 3 |
| 1L | 82 84 127 | | 1989-,500) BODY COLOUR 215 | X | Touch-up paint<br>Ultramarine | Bättringsfärg<br>Ultramarin | 3 |
| 1/4L | 82 84 135 | | 1989-,500) BODY COLOUR 215 | X | Touch-up paint<br>Ultramarine | Bättringsfärg<br>Ultramarin | 3 |
| 1L | 82 84 168 | | 1989-,500) BODY COLOUR 217 | X | Touch-up paint<br>Ascot grey | Bättringsfärg<br>Ascotgrå | 3 |
| 1/4L | 82 84 176 | | 1989-,500) BODY COLOUR 217 | X | Touch-up paint<br>Ascot grey | Bättringsfärg<br>Ascotgrå | 3 |
| 1/4L | 96 98 366 | | CV | X | Touch-up paint<br>Black 209<br>windscreen frame | Bättringsfärg<br>Svart 209<br>vindruteram | 3 |
| 1L | 84 87 753 | | | X | Thinner | Förtunning | 5 |
| 5L | 84 87 761 | | | X | Thinner | Förtunning | 5 |
| 1L | *88 16 415* | | 176), 20-80° NLS | X | Hardener | Härdare | 5 |

176. Ch. J3009727--
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-G10

Bumpers and touch-up paint
*1-can*

Stötfångare och bättringsfärg
*1-komponent*

| 1750 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0620 | | | | | | PRIMER | GRUNDFÄRG | |
| 0630 | 1L | 74 97 019 | | | X | Primer | Grundfärg | 6 |
| 0640 | | | | | | 1K-Füllprimer | 1K-Füllprimer | |
| 0650 | 1L | 82 85 231 | | | X | Thinner | Förtunning | 5 |
| 0660 | | | | | | 2K-Expressverdünnung | 2K-Expressverdünnung | |
| 0670 | | | | | | | | |
| 0680 | | | | | | FILLER | SPACKEL | |
| 0690 | 2KG | 82 85 488 | | | X | Polyester filler | Polyesterspackel | 6 |
| 0700 | | 82 85 496 | | | X | Hardener | Härdare | 5 |
| 0710 | 1L | 84 87 621 | | | X | Spray filler | Sprutspackel | 6 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-G12

Bumpers and touch-up paint
*2-can*

Stötfångare och bättringsfärg
*2-komponent*

| 1800 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | | | FINISHING PAINT | TÄCKFÄRG | |
| 0020 | 1L | 84 87 985 | | -1987, BODY COLOUR 127 | X | Touch-up paint | Bättringsfärg | 3 |
| 0030 | | | | | | Cherry red | Cherryröd | |
| 0040 | 1L | 96 98 879 | | 1988-, BODY COLOUR 214 | X | Touch-up paint | Bättringsfärg | 3 |
| 0050 | | | | | | Cherry red | Cherryröd | |
| 0060 | 1L | 84 87 860 | | 1986, BODY COLOUR 168 | X | Touch-up paint | Bättringsfärg | 3 |
| 0070 | | | | | | Chestnut brown | Kastanjebrun | |
| 0080 | 1L | 97 46 793 | | BODY COLOUR 162 | X | Touch-up paint | Bättringsfärg | 3 |
| 0090 | | | | | | Dolomite sand | Dolomitersand | |
| 0100 | 1L | 84 87 282 | | BODY COLOUR 153 | X | Touch-up paint | Bättringsfärg | 3 |
| 0110 | | | | | | Cirrus white | Cirrusvit | |
| 0120 | 1L | 84 87 837 | | 1986, BODY COLOUR 131 | X | Touch-up paint | Bättringsfärg | 3 |
| 0130 | | | | | | Admiral blue | Admiralblå | |
| 0140 | 1L | 97 46 769 | | -1988, BODY COLOUR 157 | X | Touch-up paint | Bättringsfärg | 3 |
| 0150 | | | | | | Zircon blue | Zirkonblå | |
| 0160 | 1L | 97 46 264 | | BODY COLOUR 170 | X | Touch-up paint | Bättringsfärg | 3 |
| 0170 | | | | | | Black | Svart | |
| 0180 | 1L | 96 98 150 | | 1987-1988, BODY COLOUR 188 | X | Touch-up paint | Bättringsfärg | 3 |
| 0190 | | | | | | Florentine yellow | Florentinergul | |
| 0200 | 1L | 96 98 184 | | 1987-, BODY COLOUR 198 | X | Touch-up paint | Bättringsfärg | 3 |
| 0210 | | | | | | Embassy blue | Ambassadblå | |
| 0220 | 1L | 96 98 507 | | 1988-, BODY COLOUR 213 | X | Touch-up paint | Bättringsfärg | 3 |
| 0230 | | | | | | Rodonite red | Rodonitröd | |
| 0240 | 1L | 82 84 143 | | 1989-,500) BODY COLOUR 215 | X | Touch-up paint | Bättringsfärg | 3 |
| 0250 | | | | | | Ultramarine | Ultramarin | |
| 0260 | 1L | 82 84 184 | | 1989-,500) BODY COLOUR 217 | X | Touch-up paint | Bättringsfärg | 3 |
| 0270 | | | | | | Ascot grey | Ascotgrå | |
| 0280 | 1L | 82 85 231 | | | X | Thinner | Förtunning | 5 |
| 0290 | | | | | | 2K-Expressverdünnung | 2K-Expressverdünnung | |
| 0300 | 1/2L | 84 86 300 | | | X | Hardener | Härdare | 5 |
| 0310 | | | | | | 2K-Spezialhärter | 2K-Spezialhärter | |
| 0320 | 1L | 84 86 292 | | | X | Hardener | Härdare | 5 |
| 0330 | | | | | | 2K-Spezialhärter | 2K-Spezialhärter | |
| 0340 | | | | | | | | |
| 0350 | | | | | | PRIMER | GRUNDFÄRG | |
| 0360 | 4L | 74 97 001 | | | X | Primer | Grundfärg | 6 |
| 0370 | | | | | | 2K-Toppfüller | 2K-Toppfüller | |
| 0380 | 1/2L | 84 86 300 | | | X | Hardener | Härdare | 5 |
| 0390 | | | | | | 2K-Spezialhärter | 2K-Spezialhärter | |
| 0400 | 1L | 84 86 292 | | | X | Hardener | Härdare | 5 |
| 0410 | | | | | | 2K-Spezialhärter | 2K-Spezialhärter | |
| 0420 | | | | | | | | |
| 0430 | | | | | | INTERMEDIATE PAINT | MELLANFÄRG | |
| 0440 | 1L | 84 87 712 | | | X | Intermediate paint | Mellanfärg | 6 |
| 0450 | | | | | | 2K-Fillsealer | 2K-Fillsealer | |
| 0460 | | | | | | Colourable | Infärgningsbar | |
| 0470 | 1L | 82 85 231 | | | X | Thinner | Förtunning | 5 |
| 0480 | | | | | | 2K-Expressverdünnung | 2K-Expressverdünnung | |
| 0490 | 1/2L | 84 86 300 | | | X | Hardener | Härdare | 5 |
| 0500 | | | | | | 2K-Spezialhärter | 2K-Spezialhärter | |
| 0510 | 1L | 84 86 292 | | | X | Hardener | Härdare | 5 |
| 0520 | | | | | | 2K-Spezialhärter | 2K-Spezialhärter | |
| 0530 | | | | | | | | |
| 0540 | | | | | | FILLER | SPACKEL | |
| 0550 | 2KG | 82 85 488 | | | X | Polyester filler | Polyesterspackel | 6 |
| 0560 | | 82 85 496 | | | X | Hardener | Härdare | 5 |
| 0570 | 1L | 84 87 621 | | | X | Spray filler | Sprutspackel | 6 |

500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-G14

Bumpers and touch-up paint
**Two-coat type**

Stötfångare och bättringsfärg
**Tvåskiktstyp**

| 1826 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | | | BASE METALLIC COAT | BASMETALLICFÄRG | |
| 0020 | 1L | 84 87 217 | | -1986, BODY COLOUR 172 | X | Touch-up paint | Bättringsfärg | 3 |
| 0030 | | | | | | Silver | Silver | |
| 0040 | 1L | 96 98 044 | | 1987-, BODY COLOUR 200 | X | Touch-up paint | Bättringsfärg | 3 |
| 0050 | | | | | | Silver | Silver | |
| 0060 | 1L | 97 46 801 | | -1986, BODY COLOUR 158 | X | Touch-up paint | Bättringsfärg | 3 |
| 0070 | | | | | | Odoardo grey | Odoardogrå | |
| 0080 | 1L | 96 98 093 | | 1987-, BODY COLOUR 204 | X | Touch-up paint | Bättringsfärg | 3 |
| 0090 | | | | | | Odoardo grey | Odoardogrå | |
| 0100 | 1L | 97 46 363 | | -1986, BODY COLOUR 117 | X | Touch-up paint | Bättringsfärg | 3 |
| 0110 | | | | | | Platinum blue | Platinablå | |
| 0120 | 1L | 96 98 085 | | 1987-, BODY COLOUR 203 | X | Touch-up paint | Bättringsfärg | 3 |
| 0130 | | | | | | Platinum blue | Platinablå | |
| 0140 | 1L | 97 46 587 | | -1986, BODY COLOUR 120 | X | Touch-up paint | Bättringsfärg | 3 |
| 0150 | | | | | | Cochineal red | Cochenilleröd | |
| 0160 | 1 | 96 98 119 | | 1987, BODY COLOUR 206 | X | Touch-up paint | Bättringsfärg | 3 |
| 0170 | | | | | | Cochineal red | Cochenilleröd | |
| 0180 | 1L | 97 46 595 | | -1986, BODY COLOUR 129 | X | Touch-up paint | Bättringsfärg | 3 |
| 0190 | | | | | | Rose quartz | Rosenkvarts | |
| 0200 | 1L | 96 98 069 | | 1987-, BODY COLOUR 202 | X | Touch-up paint | Bättringsfärg | 3 |
| 0210 | | | | | | Rose quartz | Rosenkvarts | |
| 0220 | 1L | 97 46 819 | | -1986, BODY COLOUR 159 | X | Touch-up paint | Bättringsfärg | 3 |
| 0230 | | | | | | Malachite green | Malakitgrön | |
| 0240 | 1L | 96 98 101 | | 1987-, BODYCOLOUR 205 | X | Touch-up paint | Bättringsfärg | 3 |
| 0250 | | | | | | Malachite green | Malakitgrön | |
| 0260 | 1L | 96 98 051 | | 1987-, BODY COLOUR 201 | X | Touch-up paint | Bättringsfärg | 3 |
| 0270 | | | | | | Bronze | Bronze | |
| 0280 | 1L | 96 98 465 | | 1988-, BODY COLOUR 212 | X | Touch-up paint | Bättringsfärg | 3 |
| 0290 | | | | | | Magenta brown | Magentabrun | |
| 0300 | 1L | 82 84 150 | | 1989-,500) BODY | X | Touch-up paint | Bättringsfärg | 3 |
| 0310 | | | | COLOUR 216 | | Beryl green | Beryllgrön | |
| 0320 | 1L | 97 46 975 | | | X | Thinner | Förtunning | 5 |
| 0330 | | | | | | | | |
| 0340 | | | | | | PRIMER | GRUNDFÄRG | |
| 0350 | 1L | 74 97 019 | | | X | Primer | Grundfärg | 6 |
| 0360 | | | | | | 1K-Füllprimer | 1K-Füllprimer | |
| 0370 | 1L | 82 85 231 | | | X | Thinner | Förtunning | 5 |
| 0380 | | | | | | 2K-Expressverdünnung | 2K-Expressverdünnung | |
| 0390 | | | | | | | | |
| 0400 | | | | | | CLEAR ENAMEL | KLARLACK | |
| 0410 | 1L | 84 87 225 | | | X | Clear enamel | Klarlack | 3 |
| 0420 | 1L | 82 85 231 | | | X | Thinner | Förtunning | 5 |
| 0430 | | | | | | 2K-Expressverdünnung | 2K-Expressverdünnung | |
| 0440 | 1/2L | 84 86 300 | | | X | Hardener | Härdare | 5 |
| 0450 | | | | | | 2K-Spezialhärter | 2K-Spezialhärter | |
| 0460 | 1L | 84 86 292 | | | X | Hardener | Härdare | 5 |
| 0470 | | | | | | 2K-Spezialhärter | 2K-Spezialhärter | |
| 0480 | | | | | | | | |
| 0490 | | | | | | FILLER | SPACKEL | |
| 0500 | 2KG | 82 85 488 | | | X | Polyester filler | Polyesterspackel | 6 |
| 0510 | | 82 85 496 | | | X | Hardener | Härdare | 5 |
| 0520 | 1L | 84 87 621 | | | X | Spray filler | Sprutspackel | 6 |

500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-G16 *Other paint* / *Övrig färg*

| | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 1850 | | | | | | | | |
| 0010 | 1/4L | 97 46 835 | | 338) | X | Touch-up paint | Bättringsfärg | 3 |
| 0020 | | | | | | Charcoal grey 176 | Antracitgrå 176 | |
| 0030 | 1L | 97 46 975 | | | X | Thinner | Förtunning | 5 |
| 0040 | | | | | | | | |
| 0050 | 1/4L | 97 46 850 | | 338) | X | Touch-up paint | Bättringsfärg | 3 |
| 0060 | | | | | | Black 175 | Svart 175 | |
| 0070 | 1L | 82 85 231 | | | X | Thinner | Förtunning | 5 |
| 0080 | | | | | | 2K-Expressverdünnung | 2K-Expressverdünnung | |
| 0090 | | | | | | | | |
| 0100 | | | | | | PRIMER | GRUNDFÄRG | |
| 0110 | 1L | 82 85 249 | | 338) | X | Primer | Grundfärg | 6 |
| 0120 | | | | | | 1K-Plastic primer | 1K-Plastic primer | |
| 0130 | | | | | | ready to spray | sprutfärdig | |
| 0140 | 1L | 82 85 256 | | 338) | X | Primer | Grundfärg | 6 |
| 0150 | | | | | | 1K-Plastic füller | 1K-Plastic füller | |
| 0160 | 1L | 97 46 967 | | | X | Thinner | Förtunning | 5 |
| 0170 | | | | | | | | |
| 0180 | | | | | | PLASTICIZER | MJUKGÖRARE | |
| 0190 | 1L | 97 46 314 | | 338) | X | Plasticizer | Mjukgörare | 6 |
| 0200 | | | | | | 2K-Elastic adetiv | 2K-Elastic adetiv | |
| 0210 | | | | | | | | |
| 0220 | 5L | 97 46 884 | | 339) | X | Cleaning agent | Rengöringsmedel | 6 |
| 0230 | 1KG | 82 85 264 | | 339) | X | Filler | Spackel | 6 |
| 0240 | 2L | 97 46 892 | | 339) | X | Primer | Grundfärg | 6 |
| 0250 | 1L | 97 46 900 | | 339) | X | Hardener | Härdare | 6 |
| 0260 | 1L | 97 46 926 | | 339) | X | Intermediate paint | Mellanfärg | 6 |
| 0270 | 1L | 97 46 934 | | 339) | X | Hardener | Härdare | 5 |
| 0280 | 1L | 97 46 959 | | 339) | X | Plasticizer | Mjukgörare | 6 |
| 0290 | 1L | 97 46 652 | | 339) | X | Thinner | Förtunning | 5 |
| 0300 | | | | | | | | |
| 0310 | 5L | 84 87 779 | | | X | Cleaning agent | Rengöringsmedel | 6 |
| 0320 | | | | | | silicon remover | silikonborttagare | |
| 0330 | 1KG | 79 94 510 | | | X | Underseal | Underredsmassa | 6 |
| 0340 | 1KG | 79 94 882 | | 340) | X | Stone chip interpaint | Stenskottsmellanfärg | 6 |
| 0350 | | 79 94 890 | | 340) | X | Hardener | Härdare | 5 |
| 0360 | 5L | *84 87 787* | | 341) NLS | X | Thinner | Förtunning | 6 |
| 0370 | | | | | | | | |
| 0380 | | | | | | | | |
| 0390 | 1/4L | 97 46 843 | | | X | Touch-up paint | Bättringsfärg | 3 |
| 0400 | 1L | *84 87 639* | | NLS | X | Touch-up paint | Bättringsfärg | 6 |
| 0410 | 1L | *97 46 306* | | NLS | X | Primer | Grundfärg | 6 |
| 0420 | 1L | *84 87 670* | | NLS | X | Primer | Grundfärg | 6 |
| 0430 | 5L | *84 87 688* | | NLS | X | Primer | Grundfärg | 6 |
| 0440 | 2,5L | *84 87 704* | | NLS | X | Primer | Grundfärg | 6 |
| 0450 | 1L | *84 87 696* | | NLS | X | Hardener | Härdare | 6 |
| 0460 | 1,5L | *84 87 647* | | NLS | X | Thinner | Förtunning | 6 |
| 0470 | 1L | *84 87 795* | | NLS | X | Thinner | Förtunning | 6 |
| 0480 | 1L | *84 86 318* | | NLS - USE 9746975 | X | Thinner | Förtunning | 5 |
| 0490 | 5L | 84 86 326 | | | X | Thinner | Förtunning | 5 |
| 0500 | 1L | *84 87 738* | | NLS | X | Thinner | Förtunning | 5 |
| 0510 | 5L | *84 87 746* | | NLS | X | Thinner | Förtunning | 5 |
| 0512 | 1L | 97 46 942 | | | X | Thinner | Förtunning | 6 |
| 0514 | 1L | 97 46 553 | | | X | Thinner | Förtunning | 6 |
| 0520 | | *97 46 298* | | NLS | X | Filler | Spackel | 6 |

338. For plastic  För plast
339. For rear spoiler (soft, rubber)  För bakre spoiler (mjuk, gummi)
3[illegible]. 2K, IR-lamp with minimum 100°C  2K, IR-lampa med minst 100°C
341. For cleaning airguns  För rengöring av sprutpistoler



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX

| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

Complete sets
# 5-G18
## Car body, external


Satser
## Kaross, utvändig

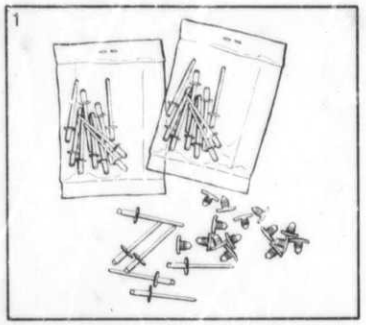


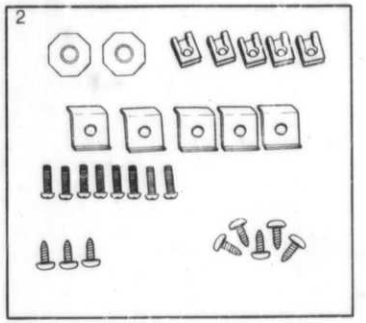






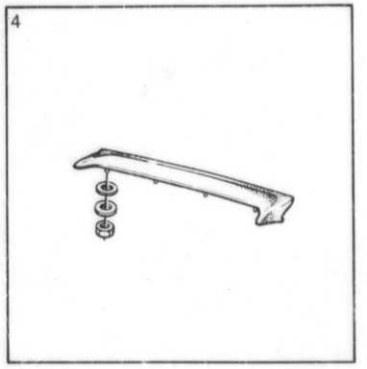

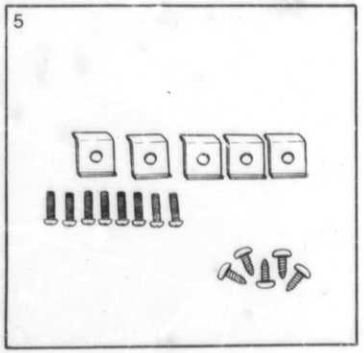

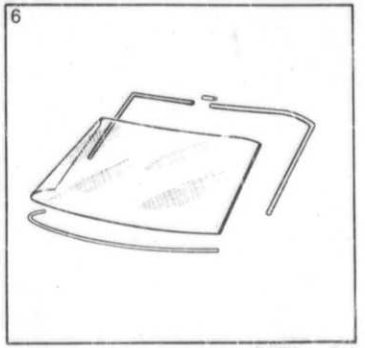F0850 - 900

| 2200 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0010 1 | 82 09 694 | | | X | Repair kit | Reparationssats | 6 |
| 0020 | | | | | Door | Dörr | |
| 0030 | 79 77 804 | | | 20 | .Rivet | .Nit | 5 |
| 0040 | 82 33 645 | | | 6 | .Pop rivet | .Popnit | 3 |
| 0050 | 69 11 614 | | | 20 | .Clip | .Clips | 5 |
| 0060 | | | | | | | |
| 0070 2 | 78 73 771 | | 5) SPOILER | X | Mounting kit | Monteringssats | 3 |
| 0080 | 79 22 354 | | | 4 | .Screw | .Skruv | 5 |
| 0090 | 79 68 001 | | | 4 | .Clip nut | .Clipsmutter | 5 |
| 0100 | 82 66 835 | | | 2 | .Washer | .Bricka | 5 |
| 0110 | 92 88 812 | | | 1 | .Mounting kit | .Monteringssats | 3 |
| 0120 | | | 75/653063 | 1 | .Assembly instruction | .Monteringsanvisning | |
| 0130 | | | | | | | |
| 0140 3 | 78 73 789 | | 6) CK | X | Spoiler | Spoiler | 3 |
| 0150 | 92 88 523 | | 1) | 1 | .Spoiler | .Spoiler | 3 |
| 0160 | 79 22 354 | | | 14 | .Screw | .Skruv | 5 |
| 0170 | 92 28 255 | | | 14 | .Washer | .Bricka | 5 |
| 0180 | 82 64 962 | | | 2 | .Plug | .Plugg | 5 |
| 0190 | | | 75/655407 | 1 | .Assembly instruction | .Monteringsanvisning | |
| 0200 | | | | | | | |
| 0210 4 | 78 73 797 | | 6) SN | X | Spoiler | Spoiler | 3 |
| 0220 | *92 25 954* | | 1) NLS | 1 | .Spoiler | .Spoiler | 3 |
| 0230 | 92 28 255 | | | 5 | .Washer | .Bricka | 5 |
| 0240 | 80 29 548 | | | 5 | .Nut | .Mutter | 5 |
| 0250 | | | 75/655399 | 1 | .Assembly instruction | .Monteringsanvisning | |
| 0260 | | | | | | | |
| 0270 4 | 78 74 381 | | 1985-,6) 4SN | X | Spoiler | Spoiler | 5 |
| 0280 | 92 90 362 | | 1) | 1 | .Spoiler | .Spoiler | 3 |
| 0290 | 92 28 255 | | | 5 | .Washer | .Bricka | 5 |
| 0300 | 80 29 548 | | | 5 | .Nut | .Mutter | 5 |
| 0310 | | | 75/655399 | 1 | .Assembly instruction | .Monteringsanvisning | |
| 0320 | | | | | | | |
| 0330 5 | 92 88 812 | | 1983-, TURBO | X | Mounting kit | Monteringssats | 3 |
| 0340 | 79 70 601 | | | 5 | .Screw | .Skruv | 5 |
| 0350 | *80 59 255* | | NLS - USE 7972789 | 5 | .Screw | .Skruv | 5 |
| 0360 | 92 30 194 | | 1) | 8 | .Support bracket | .Stödvinkel | |
| 0370 | | | | | | | |
| 0380 6 | *82 84 093* | | 1987-,224) CV, NOT AU | X | Windscreen | Vindruta | 3 |
| 0380 | | | NLS - USE 8284200 | | | | |
| 0390 | 69 98 595 | | LH | 1 | .Strip holder | .Hållarlist | 4 |
| 0400 | 69 98 603 | | RH | 1 | .Strip holder | .Hållarlist | 4 |
| 0410 | 69 35 084 | | | 1 | .Strip holder | .Hållarlist | 4 |
| 0420 | 69 97 910 | | COLOURED | 1 | .Windscreen | .Vindruta | 3 |
| 0430 | 92 78 334 | | | 1 | .Connector | .Skarvstycke | 3 |
| 0440 | 69 35 092 | | FOR LOWER MOULDING | 1 | .Clip | .Clips | 5 |
| 0450 | | | | | | | |
| 0460 6 | 82 84 200 | | 225) CV, NOT AU | X | Windscreen | Vindruta | 3 |
| 0470 | 69 35 050 | | | 1 | .Decor strip | .Dekorlist | 3 |
| 0480 | 69 98 074 | | | 1 | .Strip holder | .Hållarlist | 4 |
| 0490 | 69 98 082 | | LH | 1 | .Strip holder | .Hållarlist | 4 |
| 0500 | 69 98 090 | | RH | 1 | .Strip holder | .Hållarlist | 4 |
| 0510 | 69 08 108 | | 1) COLOURED | 1 | .Window | .Ruta | 3 |
| 0520 | 92 78 334 | | | 1 | .Connector | .Skarvstycke | 3 |
| 0530 | | | | | | | |
| 0540 6 | 82 84 218 | | CV, AU | X | Windscreen | Vindruta | 3 |
| 0550 | 69 35 050 | | | 1 | .Decor strip | .Dekorlist | 3 |
| 0560 | 69 98 074 | | | 1 | .Strip holder | .Hållarlist | 4 |
| 0570 | 69 98 082 | | LH | 1 | .Strip holder | .Hållarlist | 4 |

1. Not as separate spare part. Ej som separat reservdel.
5. Front Främre
6. Rear Bakre
224. Ch. -J7031971
225. Ch. J7031972-





MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX



| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

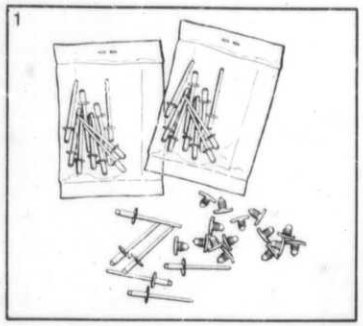


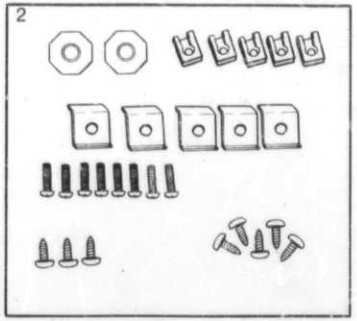
F0850 - 900
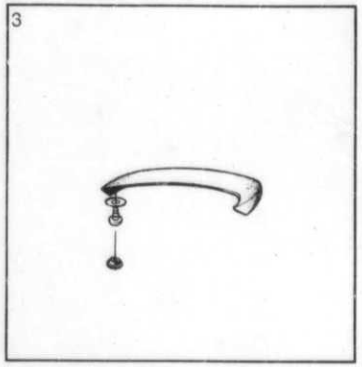
| 2200 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S I |
|---|---|---|---|---|---|---|---|
| 0580 | 69 98 090 | | RH | 1 | . Strip holder | . Hållarlist | 4 |
| 0590 | 69 98 116 | | 1) | 1 | . Window | . Ruta | 3 |
| 0600 | 92 78 334 | | | 1 | . Connector | . Skarvstycke | 3 |

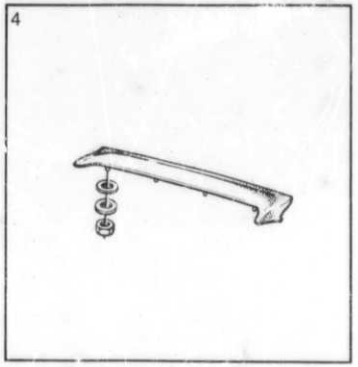1. Not as separate spare part. Ej som separat reservdel.

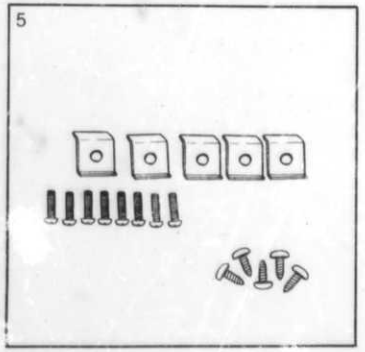

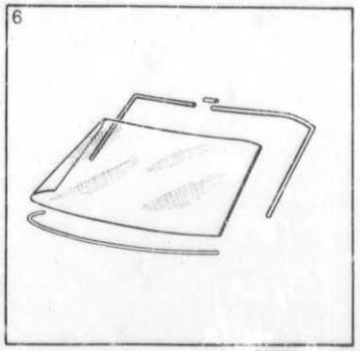MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX



| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |


# 5-G22


## Car body, external


## Kaross, utvändig

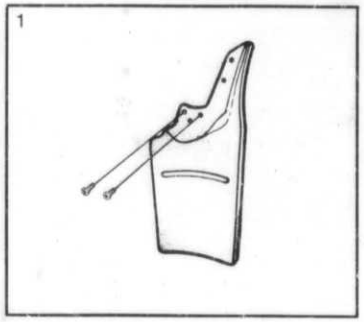


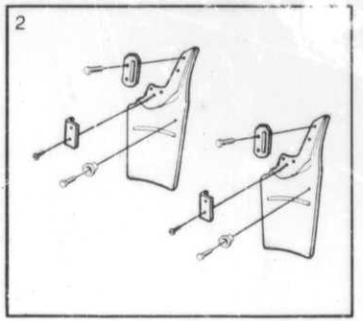
F0851 - 900
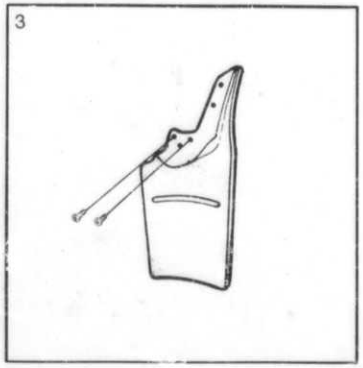
| 2250 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 78 74 746 | | 6,43) LH, CK | X | Baffle | Stänkskydd | 3 |
| 0020 | | 69 37 593 | | | 1 | . Baffle | . Stänkskydd | 3 |
| 0030 | | 79 22 982 | | | 3 | . Screw | . Skruv | 5 |
| 0040 | | | | | | | | |
| 0050 | 1 | 78 74 753 | | 6,43) RH, CK | X | Baffle | Stänkskydd | 3 |
| 0060 | | 69 37 585 | | | 1 | . Baffle | . Stänkskydd | 3 |
| 0070 | | 79 22 982 | | | 3 | . Screw | . Skruv | 5 |
| 0080 | | | | | | | | |
| 0090 | 1 | 78 74 761 | | 6,43) LH, SN | X | Baffle | Stänkskydd | 3 |
| 0100 | | 69 37 478 | | | 1 | . Baffle | . Stänkskydd | 3 |
| 0110 | | 79 22 982 | | | 3 | . Screw | . Skruv | 5 |
| 0120 | | | | | | | | |
| 0130 | 1 | 78 74 779 | | 6,43) RH, SN | X | Baffle | Stänkskydd | 3 |
| 0140 | | 69 37 486 | | | 1 | . Baffle | . Stänkskydd | 3 |
| 0150 | | 79 22 982 | | | 3 | . Screw | . Skruv | 5 |
| 0160 | | | | | | | | |
| 0170 | 2 | 78 74 340 | | | X | Baffle | Stänkskydd | 3 |
| 0180 | | 92 90 933 | | 1) LH | 1 | . Baffle | . Stänkskydd | 3 |
| 0190 | | 92 90 941 | | 1) RH | 1 | . Baffle | . Stänkskydd | 3 |
| 0200 | | 79 22 982 | | | 10 | . Screw | . Skruv | 5 |
| 0210 | | 92 22 613 | | | 2 | . Attaching plate | . Fästplåt | 3 |
| 0220 | | 82 27 738 | | | 2 | . Support plate | . Stödplatta | 6 |
| 0230 | | | | | | | | |
| 0240 | 3 | 78 73 995 | | LH | X | Baffle | Stänkskydd | 3 |
| 0250 | | 92 90 933 | | LH | 1 | . Baffle | . Stänkskydd | 3 |
| 0260 | | 79 22 982 | | | 5 | . Screw | . Skruv | 5 |
| 0270 | | | | | | | | |
| 0280 | 3 | 78 74 001 | | RH | X | Baffle | Stänkskydd | 3 |
| 0290 | | 92 90 941 | | RH | 1 | . Baffle | . Stänkskydd | 3 |
| 0300 | | 79 22 982 | | | 5 | . Screw | . Skruv | 5 |
| 0310 | | | | | | | | |
| 0320 | 4 | 85 47 192 | | 5,305) C, 2SN, 3CK | X | Window lift | Fönsterhiss | 5 |
| 0350 | | 92 87 038 | | LH | 1 | . Window lift | . Fönsterhiss | 5 |
| 0360 | | 92 87 046 | | RH | 1 | . Window lift | . Fönsterhiss | 5 |
| 0370 | | 85 47 184 | | | 1 | . Cable harness | . Ledningsnät | 5 |
| 0380 | | 85 47 044 | | | 2 | . Cable harness | . Ledningsnät | 5 |
| 0390 | | 73 26 093 | | | 5 | . Bushing | . Bussning | 5 |
| 0400 | | 79 33 443 | | | 2 | . Clip | . Clips | 5 |
| 0410 | | 79 71 880 | | | 8 | . Tensioning band | . Spännband | 4 |
| 0420 | | 79 72 441 | | | 2 | . Screw | . Skruv | 5 |
| 0430 | | 95 01 359 | | | 1 | . Switch | . Strömställare | 3 |
| 0440 | | 95 12 310 | | | 1 | . Switch | . Strömställare | 3 |
| 0450 | | 95 01 891 | | | 3 | . Cover washer | . Täckbricka | 5 |
| 0460 | | 95 01 917 | | | 1 | . Frame | . Ram | 6 |
| 0470 | | 85 03 286 | | | 1 | . Cable terminal | . Kabelsko | 5 |
| 0480 | | 85 21 668 | | | 2 | . Cable joint | . Ledningsförbindning | 3 |
| 0490 | | 88 17 884 | | | 2 | . Cover washer | . Täckbricka | 6 |
| 0500 | | 88 17 892 | | | 2 | . Clip | . Clips | |
| 0510 | | 95 12 823 | | | 1 | . Relay | . Relä | 5 |
| 0520 | | 79 73 704 | | | 1 | . Screw | . Skruv | 5 |
| 0530 | | | | 75/661355 | 1 | . Assembly instruction | . Monteringsanvisning | |
| 0540 | | | | | | | | |
| 0550 | 4 | 85 47 218 | | 5,305) I, 2SN, 3CK | X | Window lift kit | Fönsterhissats | 6 |
| 0570 | | 92 87 038 | | LH | 1 | . Window lift | . Fönsterhiss | 5 |
| 0580 | | 92 87 046 | | RH | 1 | . Window lift | . Fönsterhiss | 5 |
| 0590 | | 85 47 176 | | | 1 | . Cable harness | . Ledningsnät | 5 |
| 0600 | | 85 47 044 | | | 2 | . Cable harness | . Ledningsnät | 5 |
| 0610 | | 73 26 093 | | | 5 | . Bushing | . Bussning | 5 |

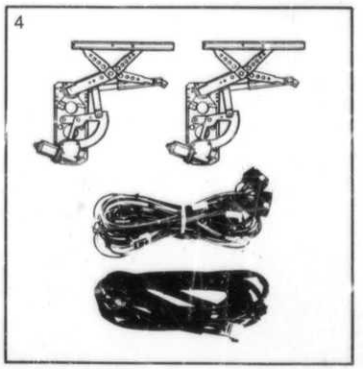1. Nut as separate spare part. Ej som separat reservdel.
5. Front Främre
6. Rear Bakre
43. For cars with integrated bumpers För bilar med integrerade stötfångare
305. Electrically operated Elektrisk manövrering

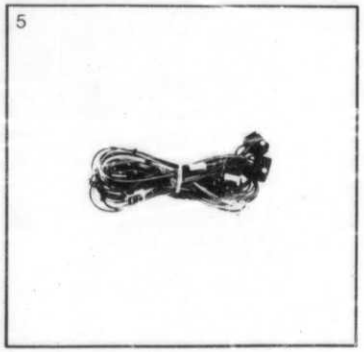

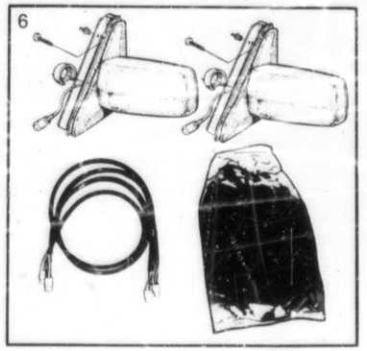
MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX



| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-G24

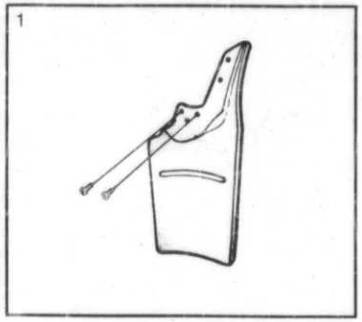

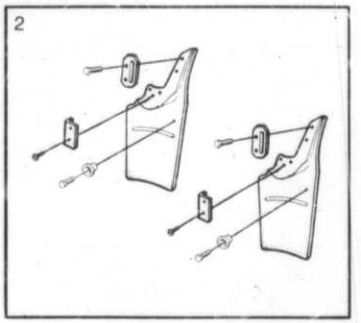


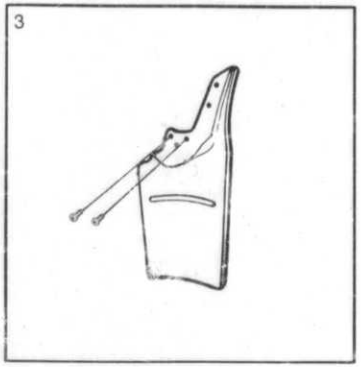

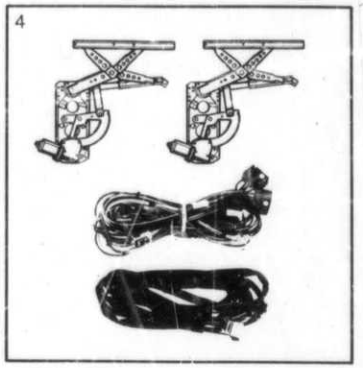



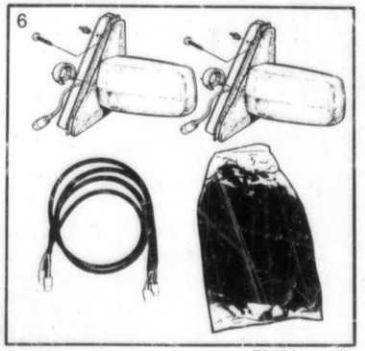

F0851 - 900

| 2250 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0620 | | 79 33 443 | | | 2 | .Clip | .Clips | 5 |
| 0630 | | 79 71 880 | | | 8 | .Tensioning band | .Spännband | 4 |
| 0640 | | 79 72 441 | | | 2 | .Screw | .Skruv | 5 |
| 0650 | | 88 17 884 | | | 2 | .Cover washer | .Täckbricka | 6 |
| 0660 | | 88 17 892 | | | 2 | .Clip | .Clips | |
| 0670 | | 95 01 859 | | | 1 | .Switch | .Strömställare | 3 |
| 0680 | | 95 12 310 | | | 1 | .Switch | .Strömställare | 3 |
| 0690 | | 95 12 823 | | | 1 | .Relay | .Relä | 5 |
| 0700 | | 79 73 704 | | | 1 | .Screw | .Skruv | 5 |
| 0710 | | 95 01 891 | | | 3 | .Cover washer | .Täckbricka | 5 |
| 0720 | | 95 01 917 | | | 1 | .Frame | .Ram | 6 |
| 0730 | | 85 21 668 | | | 2 | .Cable joint | .Ledningsförbindning | 3 |
| 0732 | | 85 74 824 | | | 2 | .Bellows | .Bälg | 6 |
| 0740 | | | | 75/661850 | 1 | .Assembly instruction | .Monteringsanvisning | |
| 0750 | | | | | | | | |
| 0760 | 4 | 85 47 200 | | 5,305) C, 4SN, 5CK | X | Window lift | Fönsterhiss | 5 |
| 0780 | | 92 23 694 | | LH | 1 | .Window lift | .Fönsterhiss | 6 |
| 0790 | | 92 23 702 | | RH | 1 | .Window lift | .Fönsterhiss | 6 |
| 0800 | | 85 47 184 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 0810 | | 85 47 044 | | | 2 | .Cable harness | .Ledningsnät | 5 |
| 0820 | | 73 26 093 | | | 5 | .Bushing | .Bussning | 5 |
| 0830 | | 79 33 443 | | | 2 | .Clip | .Clips | 5 |
| 0840 | | 79 71 880 | | | 8 | .Tensioning band | .Spännband | 4 |
| 0850 | | 79 72 441 | | | 2 | .Screw | .Skruv | 5 |
| 0860 | | 95 01 859 | | | 1 | .Switch | .Strömställare | 3 |
| 0870 | | 95 12 310 | | | 1 | .Switch | .Strömställare | 3 |
| 0880 | | 95 01 891 | | | 3 | .Cover washer | .Täckbricka | 5 |
| 0890 | | 95 01 917 | | | 1 | .Frame | .Ram | 6 |
| 0900 | | 85 03 286 | | | 2 | .Cable terminal | .Kabelsko | 5 |
| 0910 | | 85 21 668 | | | 2 | .Cable joint | .Ledningsförbindning | 3 |
| 0920 | | 88 17 884 | | | 2 | .Cover washer | .Täckbricka | 6 |
| 0930 | | 88 17 892 | | | 2 | .Clip | .Clips | |
| 0940 | | 95 12 823 | | | 1 | .Relay | .Relä | 5 |
| 0950 | | 79 73 704 | | | 1 | .Screw | .Skruv | 5 |
| 0960 | | | | 75/661365 | 1 | .Assembly instruction | .Monteringsanvisning | |
| 0970 | | | | | | | | |
| 0980 | 4 | 85 47 226 | | 5,305) I, 4SN, 5CK | X | Window lift kit | Fönsterhissats | 6 |
| 1000 | | 92 23 694 | | LH | 1 | .Window lift | .Fönsterhiss | 6 |
| 1010 | | 92 23 702 | | RH | 1 | .Window lift | .Fönsterhiss | 6 |
| 1020 | | 79 72 441 | | | 2 | .Screw | .Skruv | 5 |
| 1030 | | 95 01 917 | | | 1 | .Frame | .Ram | 6 |
| 1035 | | 95 01 859 | | | 1 | .Switch | .Strömställare | 3 |
| 1040 | | 95 12 310 | | | 1 | .Switch | .Strömställare | 3 |
| 1050 | | 95 12 823 | | | 1 | .Relay | .Relä | 5 |
| 1060 | | 79 73 704 | | | 1 | .Screw | .Skruv | 5 |
| 1070 | | 95 01 891 | | | 3 | .Cover washer | .Täckbricka | 5 |
| 1080 | | 85 47 176 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 1090 | | 85 47 044 | | | 2 | .Cable harness | .Ledningsnät | 5 |
| 1100 | | 79 33 443 | | | 2 | .Clip | .Clips | 5 |
| 1110 | | 73 26 093 | | | 5 | .Bushing | .Bussning | 5 |
| 1120 | | 79 71 380 | | | 8 | .Tensioning band | .Spännband | 4 |
| 1130 | | 85 21 668 | | | 2 | .Cable joint | .Ledningsförbindning | 3 |
| 1140 | | 88 17 884 | | | 2 | .Cover washer | .Täckbricka | 6 |
| 1150 | | 88 17 892 | | | 2 | .Clip | .Clips | |
| 1160 | | | | 75/661850 | 1 | .Assembly instruction | .Monteringsanvisning | |
| 1170 | | | | | | | | |
| 1180 | 4 | 85 47 242 | | 6,305) FOR CARS WITH C ALSO USE KIT 8547234 | X | Window lift kit | Fönsterhissats | 6 |
| 1190 | | | | | | | | |
| 1210 | | 95 01 867 | | | 2 | .Switch | .Strömställare | 3 |
| 1220 | | 95 01 875 | | | 1 | .Switch | .Strömställare | 3 |

5. Front Främre
6. Rear Bakre
305. Electrically operated Elektrisk manövrering



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |


Complete sets


# 5-H02

## *Car body, external*

Satser


## *Kaross, utvändig*

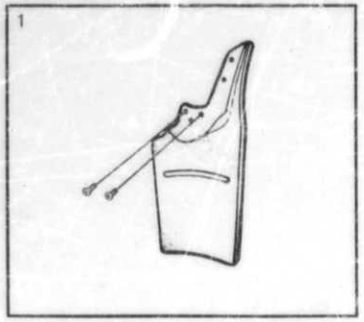


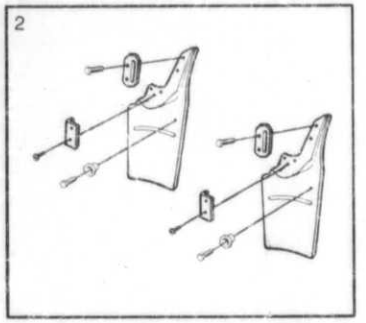






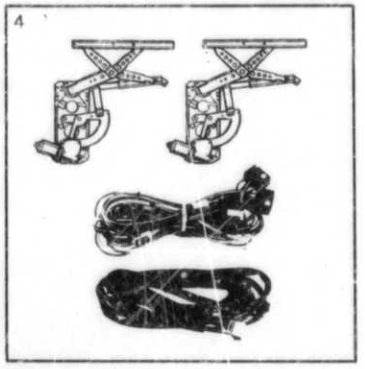

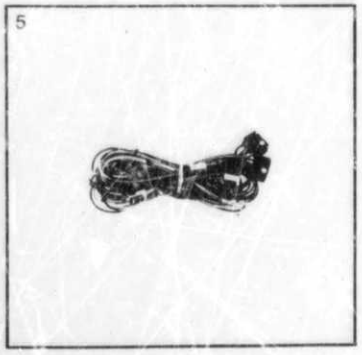

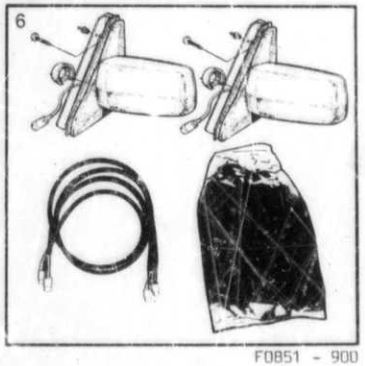F0851 - 900

| 2250 Pos. | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1230 | 92 89 356 | | LH | 1 | .Window lift | .Fönsterhiss | 5 |
| 1240 | 92 89 364 | | RH | 1 | .Window lift | .Fönsterhiss | 5 |
| 1250 | 85 67 638 | | LH | 1 | .Engine | .Motor | 5 |
| 1260 | 85 67 646 | | RH | 1 | .Engine | .Motor | 5 |
| 1270 | 79 33 443 | | | 6 | .Clip | .Clips | 5 |
| 1280 | 95 01 909 | | | 2 | .Switch | .Strömställare | 3 |
| 1290 | 85 91 497 | | | 2 | .Cable harness | .Ledningsnät | 5 |
| 1300 | 85 91 489 | | | 2 | .Cable harness | .Ledningsnät | 5 |
| 1310 | 79 71 880 | | | 6 | .Tensioning band | .Spännband | 4 |
| 1320 | 95 03 525 | | | 2 | .Contact housing | .Kontakthus | 4 |
| 1330 | 88 17 884 | | | 2 | .Cover washer | .Täckbricka | 6 |
| 1340 | 88 17 892 | | | 2 | .Clip | .Clips | |
| 1350 | | | 75/661348 | 1 | .Assembly instruction | .Monteringsanvisning | |
| 1360 | | | | | | | |
| 1370 | 5 *85 47 234* | | 6,305) C, FOR 8547242 NLS - USE 8547069 | X | Additional kit | Tilläggssats | r |
| 1400 | 85 47 069 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 1420 | | | | | | | |
| 1430 | 6 35 46 970 | | 1984- | X | Rear view mirror kit | Backspegelsats | 4 |
| 1440 | 98 33 203 | | LH, WIDE ANGLE | 1 | .Rear view mirror | .Backspegel | 3 |
| 1460 | 98 33 211 | | RH, CONVEX GLASS | 1 | .Rear view mirror | .Backspegel | 3 |
| 1480 | 94 72 424 | | LH | 1 | .Cover | .Kåpa | 4 |
| 1490 | 94 72 432 | | RH | 1 | .Cover | .Kåpa | 4 |
| 1500 | 32 55 845 | | | 2 | .Rivet | .Nit | 5 |
| 1510 | 85 31 204 | | | 2 | .Switch | .Strömställare | 3 |
| 1520 | 85 41 856 | | | 2 | .Bracket | .Hållare | 5 |
| 1530 | 85 28 358 | | | 2 | .Nut | .Mutter | 5 |
| 1540 | 85 79 492 | | | 2 | .Button | .Knapp | 5 |
| 1550 | 85 47 283 | | DOORS | 2 | .Cable harness | .Ledningsnät | 5 |
| 1560 | 85 47 275 | | SWITCHES | 1 | .Cable harness | .Ledningsnät | 5 |
| 1570 | 79 71 880 | | | 8 | .Tensioning band | .Spännband | 4 |
| 1580 | 73 26 093 | | | 5 | .Bushing | .Bussning | 5 |
| 1590 | 85 31 212 | | | 2 | .Cover washer | .Täckbricka | 5 |
| 1600 | 95 03 442 | | 4-POLE | 2 | .Contact housing | .Kontakthus | 4 |
| 1620 | 95 03 434 | | 4-POLE | 2 | .Contact housing | .Kontakthus | 4 |
| 1640 | 80 74 098 | | | 1 | .Nut | .Mutter | 5 |
| 1650 | 85 22 534 | | | 1 | .Cable terminal | .Kabelsko | 5 |
| 1660 | 85 21 668 | | | 1 | .Cable joint | .Ledningsförbindning | 3 |
| 1670 | 80 59 230 | | | 1 | .Screw | .Skruv | 5 |
| 1680 | | | 75/661447 | 1 | .Assembly instruction | .Monteringsanvisning | |
| 1690 | | | | | | | |
| 1700 | 6 85 46 962 | | 1984-, RHD | X | Rear view mirror kit | Backspegelsats | 4 |
| 1710 | 98 33 245 | | LH, CONVEX GLASS | 1 | .Rear view mirror | .Backspegel | 3 |
| 1730 | 98 37 196 | | RH, WIDE ANGLE | 1 | .Rear view mirror | .Backspegel | 3 |
| 1750 | 94 72 424 | | LH | 1 | .Cover | .Kåpa | 4 |
| 1760 | 94 72 432 | | RH | 1 | .Cover | .Kåpa | 4 |
| 1770 | 94 68 893 | | | 2 | .Clip | .Clips | 5 |
| 1780 | 85 31 204 | | | 2 | .Switch | .Strömställare | 3 |
| 1790 | 85 41 856 | | | 2 | .Bracket | .Hållare | 5 |
| 1800 | 85 28 358 | | | 2 | .Nut | .Mutter | 5 |
| 1810 | 85 79 492 | | | 2 | .Button | .Knapp | 5 |
| 1820 | 85 47 283 | | DOORS | 1 | .Cable harness | .Ledningsnät | 5 |
| 1830 | 85 47 275 | | SWITCHES | 1 | .Cable harness | .Ledningsnät | 5 |
| 1840 | 79 71 880 | | | 8 | .Tensioning band | .Spännband | 4 |
| 1850 | 73 26 093 | | | 5 | .Bushing | .Bussning | 5 |
| 1860 | 85 31 212 | | | 2 | .Cover washer | .Täckbricka | 5 |
| 1870 | 95 03 442 | | 4-POLE | 2 | .Contact housing | .Kontakthus | 4 |
| 1890 | 95 03 434 | | 4-POLE | 2 | .Contact housing | .Kontakthus | 4 |
| 1910 | 80 74 098 | | | 1 | .Nut | .Mutter | 5 |
| 1920 | 85 22 534 | | | 1 | .Cable terminal | .Kabelsko | 5 |
| 1930 | 85 21 668 | | | 1 | .Cable joint | .Ledningsförbindning | 3 |

6. Rear Bakre
305. Electrically operated Elektrisk manövrering


MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |


# 5-H04


## Car body, external
## Kaross, utvändig

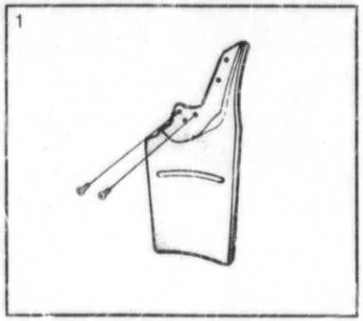


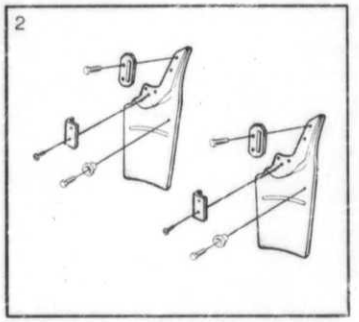
F0851 - 900
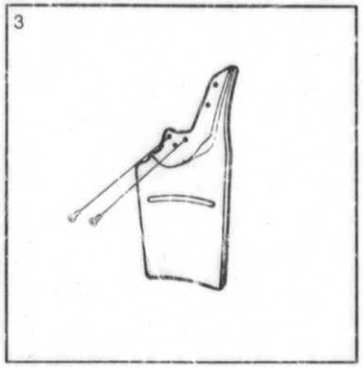
| 2250 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1940 | 80 59 230 | | | 1 | . Screw | . Skruv | 5 |
| 1950 | | | 75/661447 | 1 | . Assembly instruction | . Monteringsanvisning | |

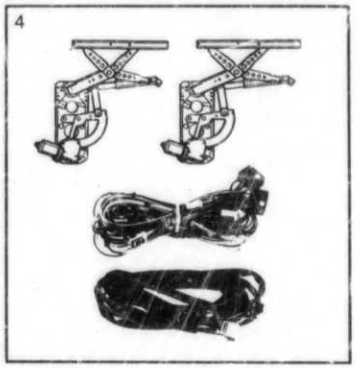MASTER INDEX
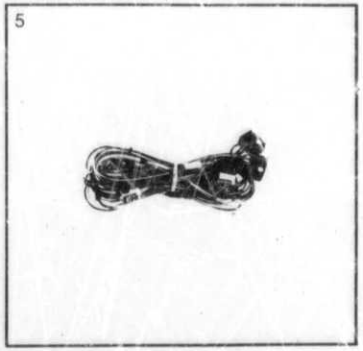
| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

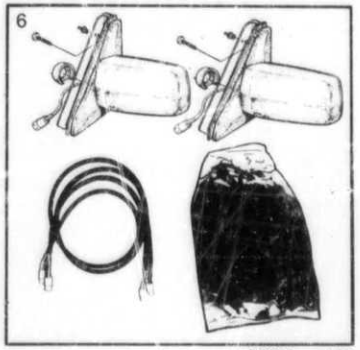8A GROUP INDEX

| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |


Complete sets


# 5-H06


## *Car body, external*


Satser


## *Kaross, utvändig*

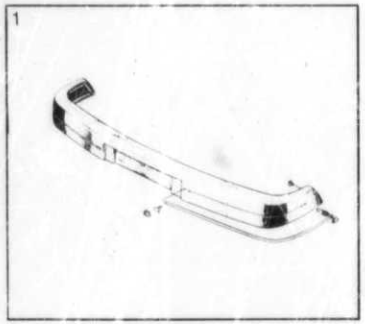


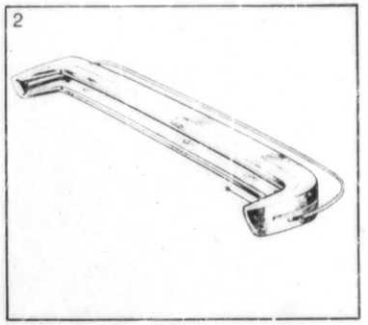
F0852 - 900
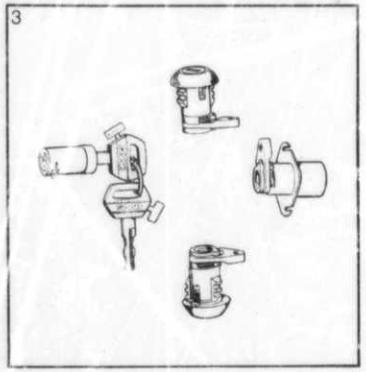
| 2300 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 82 83 863 | | 1983- | X | Decor strip | Dekorlist | 3 |
| 0020 | | *92 92 202* | | 1) NLS | 1 | .Decor strip | .Dekorlist | 5 |
| 0030 | | 92 92 228 | | | 1 | .Spring | .Fjäder | 4 |
| 0040 | | 92 91 998 | | | 1 | .Clip | .Clips | 5 |
| 0050 | | 79 73 308 | | | 1 | .Rivet | .Nit | 5 |
| 0060 | | | | | | | | |
| 0070 | 2 | 82 83 871 | | 1983- | X | Decor strip | Dekorlist | 3 |
| 0080 | | *92 91 923* | | 1) NLS | 1 | .Decor strip | .Dekorlist | 3 |
| 0090 | | 92 92 228 | | | 1 | .Spring | .Fjäder | 4 |
| 0100 | | 79 73 308 | | | 1 | .Rivet | .Nit | 5 |
| 0110 | | | | | | | | |
| 0120 | 3 | 92 27 927 | | CK | X | Lock cylinder set | Låscylindersats | 5 |
| 0130 | | | | | | | | |
| 0140 | 4 | 92 28 008 | | SN | X | Lock cylinder set | Låscylindersats | 5 |
| 0150 | | | | | | | | |
| 0160 | 4 | 92 31 002 | | 307) SN | X | Lock cylinder set | Låscylindersats | 5 |
| 0170 | | | | | | | | |
| 0180 | 5 | 69 16 050 | | CK | X | Buffer | Buffert | 5 |
| 0190 | | *69 14 576* | | 1) NLS | 2 | .Bracket | .Hållare | 5 |
| 0200 | | *69 14 584* | | NLS - USE 4006425 | 2 | .Buffer | .Buffert | 4 |
| 0210 | | 79 22 727 | | | 6 | .Screw | .Skruv | 5 |
| 0220 | | 92 30 293 | | | 6 | .Washer | .Bricka | 5 |
| 0230 | | 69 43 989 | | | 2 | .Guard | .Skydd | 6 |
| 0240 | | | | | | | | |
| 0250 | 6 | 85 47 085 | | 3CK, C | X | Central lock | Centrallås | 5 |
| 0260 | | 85 91 216 | | | 1 | .Control device | .Styrdon | 3 |
| 0270 | | 85 91 224 | | | 2 | .Electric motor | .Elmotor | 3 |
| 0280 | | 85 79 914 | | LH, -1985 | 1 | .Pull rod | .Dragstång | 5 |
| 0290 | | 85 79 922 | | RH, -1985 | 1 | .Pull rod | .Dragstång | 5 |
| 0300 | | 85 79 906 | | -1985 | 2 | .Bracket | .Konsol | 6 |
| 0310 | | 85 98 245 | | LH, 1986- | 1 | .Pull rod | .Dragstång | |
| 0320 | | 85 98 252 | | RH, 1986- | 1 | .Pull rod | .Dragstång | |
| 0330 | | 85 98 229 | | LH, 1986- | 1 | .Bracket | .Konsol | 6 |
| 0340 | | 85 98 237 | | RH, 1986- | 1 | .Bracket | .Konsol | 6 |
| 0350 | | 80 59 529 | | | 4 | .Screw | .Skruv | 5 |
| 0360 | | 85 73 966 | | | 6 | .Bushing | .Bussning | 4 |
| 0370 | | 85 73 958 | | | 6 | .Sleeve | .Hylsa | 5 |
| 0380 | | 79 73 597 | | | 6 | .Screw | .Skruv | 5 |
| 0390 | | 85 74 501 | | | 1 | .Pull rod | .Dragstång | 5 |
| 0400 | | 85 75 391 | | | 1 | .Bracket | .Konsol | 6 |
| 0410 | | 79 72 441 | | | 2 | .Screw | .Skruv | 5 |
| 0420 | | 95 29 975 | | | 1 | .Electronic unit | .Elektronikenhet | 3 |
| 0430 | | 85 91 414 | | | 1 | .Attaching brace | .Fästbygel | 6 |
| 0440 | | 79 71 344 | | | 2 | .Screw | .Skruv | 5 |
| 0450 | | 85 91 422 | | | 2 | .Protection | .Skydd | 4 |
| 0460 | | 79 71 880 | | | 12 | .Tensioning band | .Spännband | 4 |
| 0470 | | 71 08 491 | | | 12 | .Clamp | .Klammer | 5 |
| 0480 | | 97 30 995 | | | 2 | .Clip | .Clips | 5 |
| 0490 | | 85 91 307 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 0500 | | 85 46 939 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 0510 | | 85 91 273 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 0520 | | 85 46 897 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 0530 | | 85 91 240 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 0540 | | 95 01 685 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 0550 | | 95 03 277 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 0560 | | 95 03 319 | | | 2 | .Contact housing | .Kontakthus | 4 |
| 0570 | | 95 03 327 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 0580 | | 85 61 623 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 0590 | | 73 26 093 | | | 1 | .Bushing | .Bussning | 5 |
| 0600 | | 85 03 286 | | | 1 | .Cable terminal | .Kabelsko | 5 |
| 0610 | | 85 65 855 | | | 1 | .Clip | .Clips | 6 |

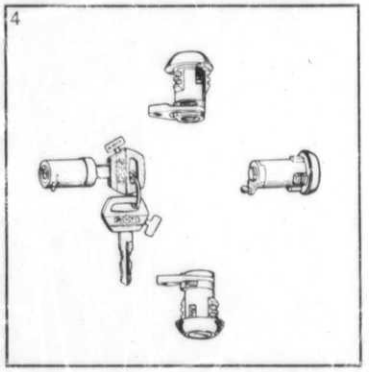1. Not as separate spare part. Ej som separat reservdel.
307. Central lock Centrallås

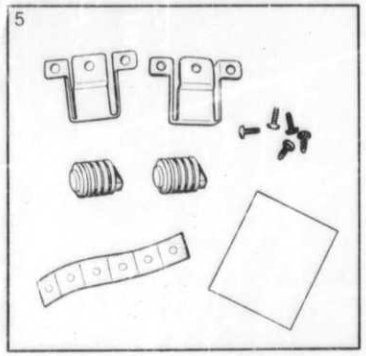

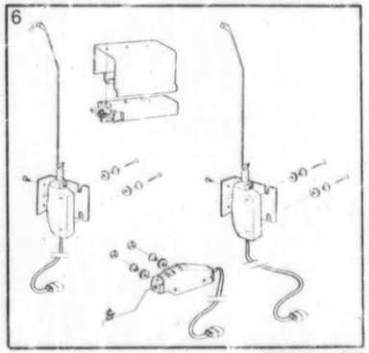MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX



| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |


Complete sets
# 5-H08
## *Car body, external*


Satser
## *Kaross, utvändig*

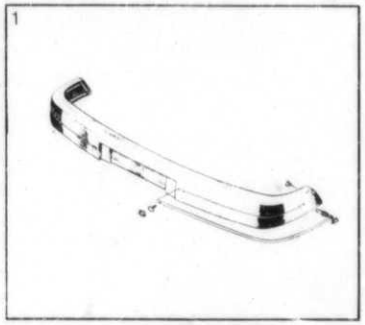


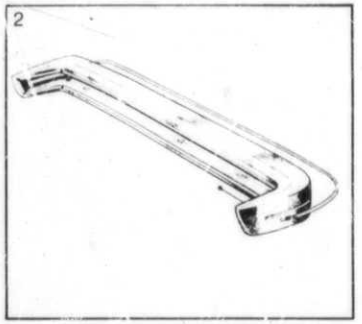
F0852 - 900
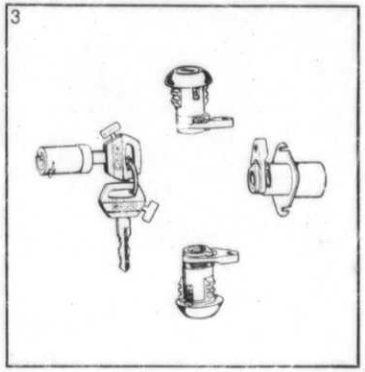
| 2300 Pos | Part No/Art nr | k S | Notes Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0620 | 95 64 170 | | | 1 | .Attaching brace | .Fästbygel | 6 |
| 0630 | 95 64 345 | | | 1 | .Spacer washer | .Distansbricka | 5 |
| 0640 | | | 75/661017 | 1 | .Assembly instruction | .Monteringsanvisning | |
| 0650 | | | | | | | |
| 0660 | 6 85 47 127 | | 3CK, I | X | Central lock | Centrallås | 5 |
| 0670 | 85 47 168 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 0680 | 85 91 273 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 0690 | 85 91 240 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 0700 | 85 91 307 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 0710 | | | 75/661660 | 1 | .Assembly instruction | .Monteringsanvisning | |
| 0720 | 85 98 245 | | LH | 1 | .Pull rod | .Dragstång | |
| 0730 | 85 98 252 | | RH | 1 | .Pull rod | .Dragstång | |
| 0740 | 85 98 229 | | LH | 1 | .Bracket | .Konsol | 6 |
| 0750 | 85 98 237 | | RH | 1 | .Bracket | .Konsol | 6 |
| 0760 | 85 91 216 | | | 1 | .Control device | .Styrdon | 3 |
| 0770 | 85 91 224 | | | 2 | .Electric motor | .Elmotor | 3 |
| 0780 | 85 73 966 | | | 6 | .Bushing | .Bussning | 4 |
| 0790 | 85 73 958 | | | 6 | .Sleeve | .Hylsa | 5 |
| 0800 | 80 59 537 | | | 4 | .Screw | .Skruv | 5 |
| 0810 | 79 73 597 | | | 6 | .Screw | .Skruv | 5 |
| 0820 | 79 71 880 | | | 12 | .Tensioning band | .Spännband | 4 |
| 0830 | 85 91 422 | | | 2 | .Protection | .Skydd | 4 |
| 0840 | 85 74 501 | | | 1 | .Pull rod | .Dragstång | 5 |
| 0850 | 85 75 391 | | | 1 | .Bracket | .Konsol | 6 |
| 0860 | 79 72 441 | | | 2 | .Screw | .Skruv | 5 |
| 0870 | 95 29 975 | | | 1 | .Electronic unit | .Elektronikenhet | 3 |
| 0880 | 85 91 414 | | | 1 | .Attaching brace | .Fästbygel | 6 |
| 0890 | 79 71 344 | | | 2 | .Screw | .Skruv | 5 |
| 0900 | 95 01 685 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 0910 | 95 03 319 | | | 5 | .Contact housing | .Kontakthus | 4 |
| 0920 | 95 03 327 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 0930 | 95 03 277 | | | 2 | .Contact housing | .Kontakthus | 4 |
| 0940 | 85 61 623 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 0950 | 71 08 491 | | | 12 | .Clamp | .Klammer | 5 |
| 0960 | 97 30 995 | | | 2 | .Clip | .Clips | 5 |
| 0970 | 73 26 093 | | | 1 | .Bushing | .Bussning | 5 |
| 0980 | 95 65 855 | | | 1 | .Clip | .Clips | 6 |
| 0990 | 95 64 170 | | | 1 | .Attaching brace | .Fästbygel | 6 |
| 1000 | 95 64 345 | | | 1 | .Spacer washer | .Distansbricka | 5 |
| 1010 | 85 03 286 | | | 1 | .Cable terminal | .Kabelsko | 5 |
| 1020 | | | | | | | |
| 1030 | 6 85 47 119 | | 2SN, C | X | Central lock | Centrallås | 5 |
| 1040 | 85 91 216 | | | 1 | .Control device | .Styrdon | 3 |
| 1050 | 85 91 224 | | | 1 | .Electric motor | .Elmotor | 3 |
| 1060 | 85 91 232 | | | 1 | .Electric motor | .Elmotor | 3 |
| 1070 | 85 79 914 | | LH, -1985 | 1 | .Pull rod | .Dragstång | 5 |
| 1080 | 85 79 922 | | RH, -1985 | 1 | .Pull rod | .Dragstång | 5 |
| 1090 | 85 79 906 | | -1985 | 2 | .Bracket | .Konsol | 6 |
| 1100 | 85 98 245 | | LH, 1986- | 1 | .Pull rod | .Dragstång | |
| 1110 | 85 98 252 | | RH, 1986- | 1 | .Pull rod | .Dragstång | |
| 1120 | 85 98 229 | | LH, 1986- | 1 | .Bracket | .Konsol | 6 |
| 1130 | 85 98 237 | | RH, 1986- | 1 | .Bracket | .Konsol | 6 |
| 1140 | 80 59 529 | | | 4 | .Screw | .Skruv | 5 |
| 1150 | 85 73 966 | | | 6 | .Bushing | .Bussning | 4 |
| 1160 | 85 73 958 | | | 6 | .Sleeve | .Hylsa | 5 |
| 1170 | 79 73 597 | | | 4 | .Screw | .Skruv | 5 |
| 1180 | 80 74 098 | | | 2 | .Nut | .Mutter | 5 |
| 1190 | 95 29 975 | | | 1 | .Electronic unit | .Elektronikenhet | 3 |
| 1200 | 85 91 414 | | | 1 | .Attaching brace | .Fästbygel | 6 |
| 1210 | 79 71 344 | | | 2 | .Screw | .Skruv | 5 |
| 1220 | 85 91 422 | | | 2 | .Protection | .Skydd | 4 |
| 1230 | 79 71 880 | | | 12 | .Tensioning band | .Spännband | 4 |
| 1240 | 71 08 491 | | | 12 | .Clamp | .Klammer | 5 |
| 1250 | 97 30 995 | | | 2 | .Clip | .Clips | 5 |
| 1260 | 85 46 913 | | | 1 | .Cable harness | .Ledningsnät | 5 |

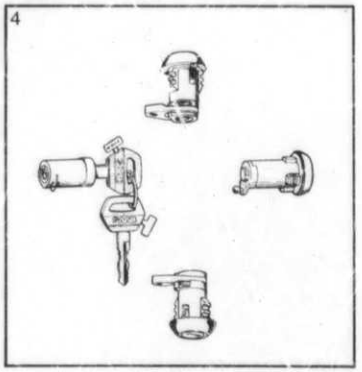

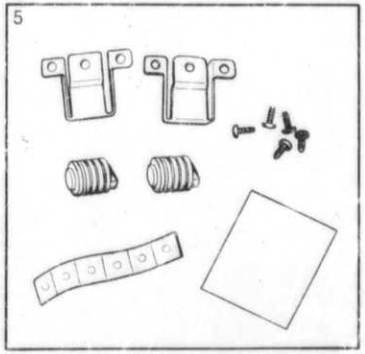MASTER INDEX

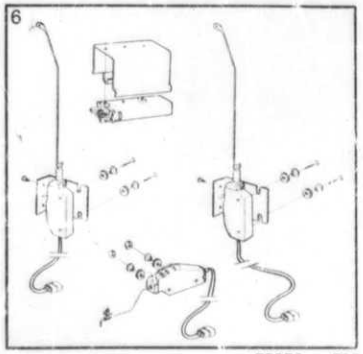
| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |


Complete sets


# 5-H10


## *Car body, external*


Satser


## *Kaross, utvändig*

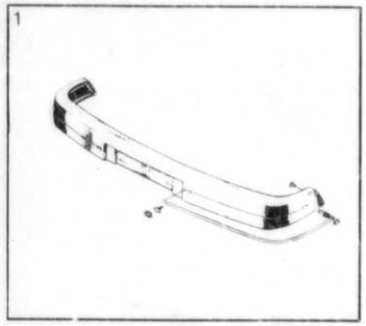


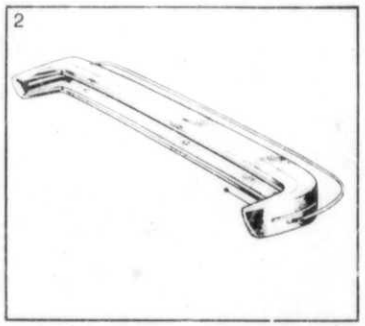
F0852 - 900
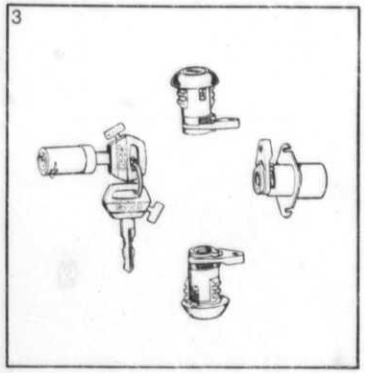
| 2300 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 1270 | | 85 46 939 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 1280 | | 85 91 273 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 1290 | | 85 46 897 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 1300 | | 85 91 240 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 1310 | | 95 01 685 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 1320 | | 95 03 277 | | | 2 | .Contact housing | .Kontakthus | 4 |
| 1330 | | 95 03 319 | | | 5 | .Contact housing | .Kontakthus | 4 |
| 1340 | | 95 03 327 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 1350 | | 85 61 623 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 1360 | | 73 26 093 | | | 1 | .Bushing | .Bussning | 5 |
| 1370 | | 85 03 286 | | | 1 | .Cable terminal | .Kabelsko | 5 |
| 1380 | | | | 75/66 10 09 | 1 | .Assembly instruction | .Monteringsanvisning | |
| 1390 | | 85 65 855 | | | 1 | .Clip | .Clips | 6 |
| 1400 | | 95 64 170 | | | 1 | .Attaching brace | .Fästbygel | 6 |
| 1410 | | 95 64 345 | | | 1 | .Spacer washer | .Distansbricka | 5 |
| 1420 | | | | | | | | |
| 1430 | 6 | 85 47 150 | | 2SN, I | X | Central lock | Centrallås | 5 |
| 1440 | | 85 47 168 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 1450 | | 85 91 273 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 1460 | | 85 91 240 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 1470 | | 85 46 913 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 1480 | | | | 75/661652 | 1 | .Assembly instruction | .Monteringsanvisning | |
| 1490 | | 85 98 245 | | LH | 1 | .Pull rod | .Dragstång | |
| 1500 | | 85 98 252 | | RH | 1 | .Pull rod | .Dragstång | |
| 1510 | | 85 98 229 | | LH | 1 | .Bracket | .Konsol | 6 |
| 1520 | | 85 98 237 | | RH | 1 | .Bracket | .Konsol | 6 |
| 1530 | | 85 91 216 | | | 1 | .Control device | .Styrdon | 3 |
| 1540 | | 85 91 224 | | | 1 | .Electric motor | .Elmotor | 3 |
| 1550 | | 85 73 966 | | | 6 | .Bushing | .Bussning | 4 |
| 1560 | | 85 73 958 | | | 6 | .Sleeve | .Hylsa | 5 |
| 1570 | | 80 59 537 | | | 4 | .Screw | .Skruv | 5 |
| 1580 | | 79 73 597 | | | 4 | .Screw | .Skruv | 5 |
| 1590 | | 79 71 880 | | | 12 | .Tensioning band | .Spännband | 4 |
| 1600 | | 85 91 422 | | | 2 | .Protection | .Skydd | 4 |
| 1610 | | 85 91 232 | | | 1 | .Electric motor | .Elmotor | 3 |
| 1620 | | 80 74 098 | | | 2 | .Nut | .Mutter | 5 |
| 1630 | | 73 26 093 | | | 1 | .Bushing | .Bussning | 5 |
| 1640 | | 95 29 975 | | | 1 | .Electronic unit | .Elektronikenhet | 3 |
| 1650 | | 85 91 414 | | | 1 | .Attaching brace | .Fästbygel | 6 |
| 1660 | | 79 71 344 | | | 2 | .Screw | .Skruv | 5 |
| 1670 | | 95 01 685 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 1680 | | 95 03 319 | | | 5 | .Contact housing | .Kontakthus | 4 |
| 1690 | | 95 03 327 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 1700 | | 95 03 277 | | | 2 | .Contact housing | .Kontakthus | 4 |
| 1710 | | 85 61 623 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 1720 | | 71 08 491 | | | 12 | .Clamp | .Klammer | 5 |
| 1730 | | 97 30 995 | | | 2 | .Clip | .Clips | 5 |
| 1740 | | 69 41 306 | | | 1 | .Handle | .Handtag | 5 |
| 1750 | | 85 65 855 | | | 1 | .Clip | .Clips | 6 |
| 1760 | | 95 64 170 | | | 1 | .Attaching brace | .Fästbygel | 6 |
| 1770 | | 95 64 345 | | | 1 | .Spacer washer | .Distansbricka | 5 |
| 1780 | | 85 03 286 | | | 1 | .Cable terminal | .Kabelsko | 5 |
| 1790 | | | | | | | | |
| 1800 | 6 | 85 47 093 | | 5CK, C | X | Central lock | Centrallås | 5 |
| 1810 | | 85 91 216 | | | 1 | .Control device | .Styrdon | 3 |
| 1820 | | 85 91 224 | | | 4 | .Electric motor | .Elmotor | 3 |
| 1830 | | 85 79 914 | | LH,-1985 | 1 | .Pull rod | .Dragstång | 5 |
| 1840 | | 85 79 922 | | RH,-1985 | 1 | .Pull rod | .Dragstång | 5 |
| 1850 | | 85 98 245 | | LH,1986- | 1 | .Pull rod | .Dragstång | |
| 1860 | | 85 98 252 | | RH,1986- | 1 | .Pull rod | .Dragstång | |
| 1870 | | 85 78 221 | | | 2 | .Pull rod | .Dragstång | 5 |
| 1880 | | 84 61 675 | | | 2 | .Clip | .Clips | 5 |
| 1890 | | 85 79 906 | | -1985 | 2 | .Bracket | .Konsol | 6 |
| 1900 | | 85 98 211 | | LH,1986- | 1 | .Bracket | .Konsol | 6 |
| 1910 | | 95 51 151 | | RH,1986- | 1 | .Bracket | .Konsol | 6 |

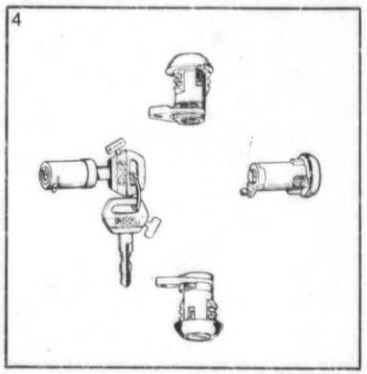

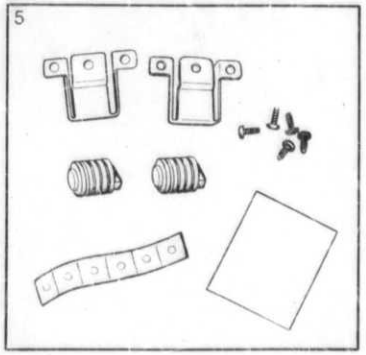MASTER INDEX

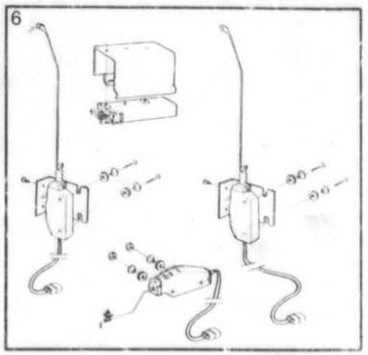
| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |


Complete sets


# 5-H12


## *Car body, external*


Satser


## *Kaross, utvändig*

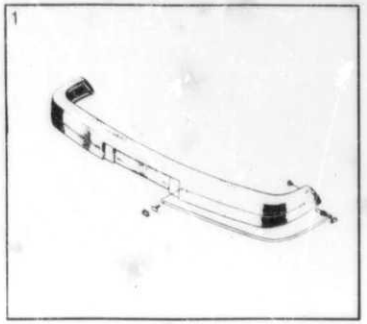


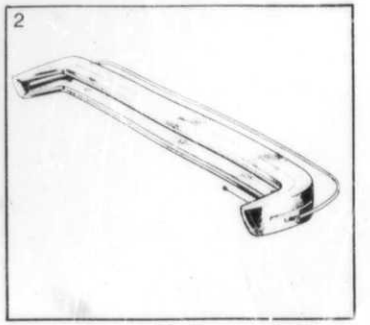
F0852 - 900
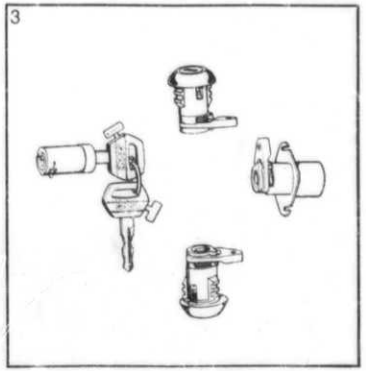
| 2300 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 1920 | | 80 59 529 | | | 4 | .Screw | .Skruv | 5 |
| 1930 | | 85 73 966 | | | 8 | .Bushing | .Bussning | 4 |
| 1940 | | 85 73 958 | | | 10 | .Sleeve | .Hylsa | 5 |
| 1950 | | 79 73 597 | | | 10 | .Screw | .Skruv | 5 |
| 1960 | | 70 85 541 | | | 2 | .Sleeve | .Hylsa | 3 |
| 1970 | | 85 74 501 | | | 1 | .Pull rod | .Dragstång | 5 |
| 1980 | | 85 75 391 | | | 1 | .Bracket | .Konsol | 6 |
| 1990 | | 79 72 441 | | | 2 | .Screw | .Skruv | 5 |
| 2000 | | 85 91 414 | | | 1 | .Attaching brace | .Fästbygel | 6 |
| 2010 | | 79 71 344 | | | 2 | .Screw | .Skruv | 5 |
| 2020 | | 85 91 422 | | | 2 | .Protection | .Skydd | 4 |
| 2030 | | 79 71 880 | | | 12 | .Tensioning band | .Spännband | 4 |
| 2040 | | 71 08 491 | | | 12 | .Clamp | .Klammer | 5 |
| 2050 | | 97 30 995 | | | 2 | .Clip | .Clips | 5 |
| 2060 | | 85 91 281 | | | 2 | .Cable harness | .Ledningsnät | 5 |
| 2070 | | 95 29 975 | | | 1 | .Electronic unit | .Elektronikenhet | 3 |
| 2080 | | 85 91 307 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 2090 | | 85 46 939 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 2100 | | 85 91 273 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 2110 | | 85 46 905 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 2120 | | 85 91 240 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 2130 | | 95 01 685 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 2140 | | 95 03 277 | | | 2 | .Contact housing | .Kontakthus | 4 |
| 2150 | | 95 03 319 | | | 5 | .Contact housing | .Kontakthus | 4 |
| 2160 | | 95 03 327 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 2170 | | 85 61 623 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 2180 | | 73 26 093 | | | 1 | .Bushing | .Bussning | 5 |
| 2190 | | 85 03 786 | | | 1 | .Cable terminal | .Kabelsko | 5 |
| 2200 | | 85 65 855 | | | 1 | .Clip | .Clips | 6 |
| 2210 | | 95 64 170 | | | 1 | .Attaching brace | .Fästbygel | 6 |
| 2220 | | 95 64 345 | | | 1 | .Spacer washer | .Distansbricka | 5 |
| 2230 | | | | 75/661033 | 1 | .Assembly instruction | .Monteringsanvisning | |
| 2240 | | | | | | | | |
| 2250 | 6 | 85 47 135 | | 5CK, I | X | Central lock | Centrallås | 5 |
| 2260 | | 85 47 168 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 2270 | | 85 91 273 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 2280 | | 85 91 240 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 2290 | | 85 91 307 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 2300 | | 85 91 281 | | | 2 | .Cable harness | .Ledningsnät | 5 |
| 2310 | | | | 75/661686 | 1 | .Assembly instruction | .Monteringsanvisning | |
| 2320 | | 85 98 245 | | LH | 1 | .Pull rod | .Dragstång | |
| 2330 | | 85 98 252 | | RH | 1 | .Pull rod | .Dragstång | |
| 2340 | | 85 98 211 | | LH | 1 | .Bracket | .Konsol | 6 |
| 2350 | | 95 51 151 | | RH | 1 | .Bracket | .Konsol | 6 |
| 2360 | | 85 91 216 | | | 1 | .Control device | .Styrdon | 3 |
| 2370 | | 85 91 224 | | | 4 | .Electric motor | .Elmotor | 3 |
| 2380 | | 85 73 966 | | | 8 | .Bushing | .Bussning | 4 |
| 2390 | | 85 73 958 | | | 10 | .Sleeve | .Hylsa | 5 |
| 2400 | | 80 59 537 | | | 4 | .Screw | .Skruv | 5 |
| 2410 | | 79 73 597 | | | 10 | .Screw | .Skruv | 5 |
| 2420 | | 79 71 880 | | | 12 | .Tensioning band | .Spännband | 4 |
| 2430 | | 85 91 422 | | | 2 | .Protection | .Skydd | 4 |
| 2440 | | 85 78 221 | | | 2 | .Pull rod | .Dragstång | 5 |
| 2450 | | 85 74 501 | | | 1 | .Pull rod | .Dragstång | 5 |
| 2460 | | 85 75 391 | | | 1 | .Bracket | .Konsol | 6 |
| 2470 | | 70 85 541 | | | 2 | .Sleeve | .Hylsa | 3 |
| 2480 | | 84 61 675 | | | 2 | .Clip | .Clips | 5 |
| 2490 | | 80 19 895 | | | 2 | .Screw | .Skruv | 5 |
| 2500 | | 79 72 607 | | | 2 | .Screw | .Skruv | 5 |
| 2510 | | 85 91 414 | | | 1 | .Attaching brace | .Fästbygel | 6 |
| 2520 | | 79 71 344 | | | 2 | .Screw | .Skruv | 5 |
| 2530 | | 95 01 685 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 2540 | | 95 03 319 | | | 5 | .Contact housing | .Kontakthus | 4 |
| 2550 | | 95 03 327 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 2560 | | 95 03 277 | | | 2 | .Contact housing | .Kontakthus | 4 |

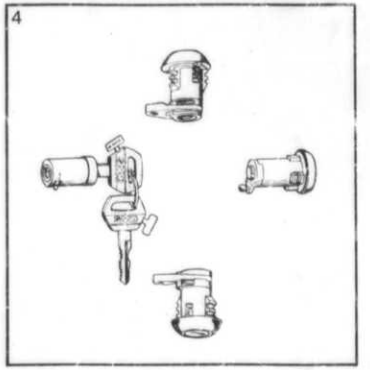

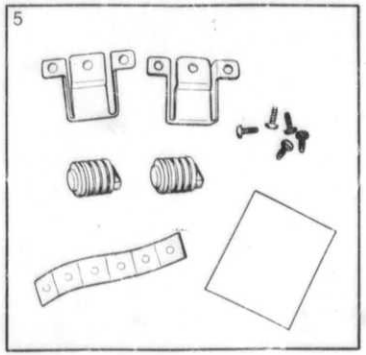MASTER INDEX

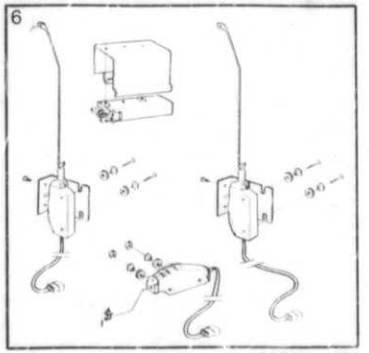

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5 G18 |

Complete sets
# 5-H14
## *Car body, external*

Satser
## *Kaross, utvändig*

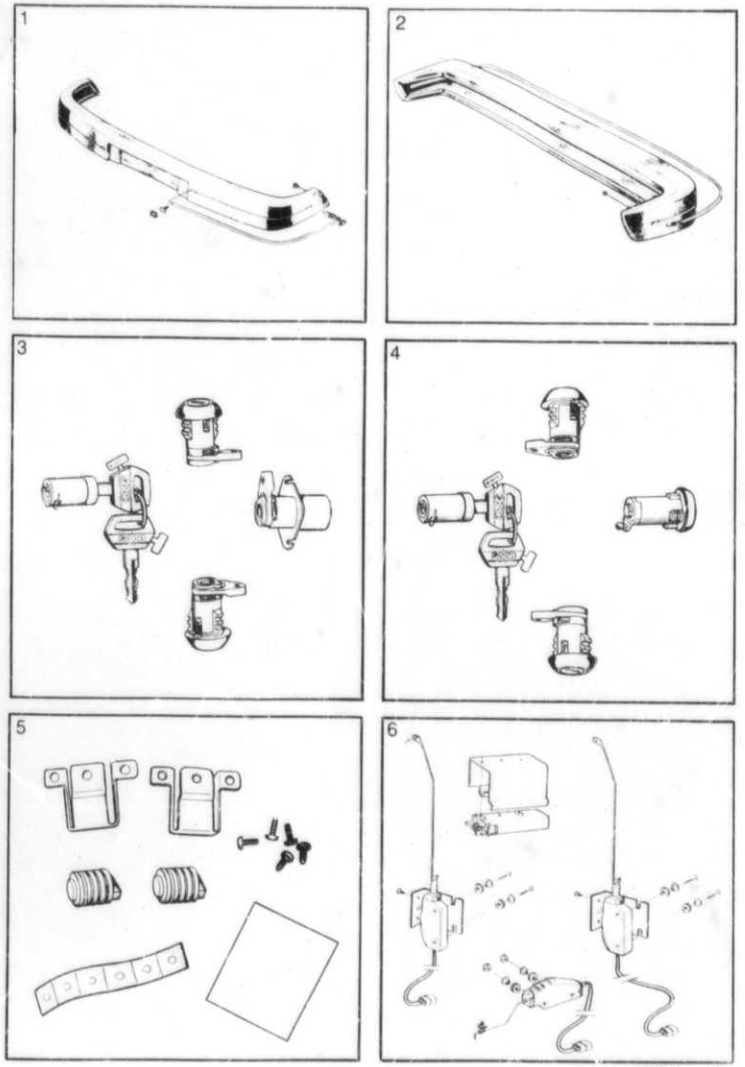


F0852 - 900

| 2300 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 2570 | | 85 61 623 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 2580 | | 71 08 491 | | | 12 | .Clamp | .Klammer | 5 |
| 2590 | | 97 30 995 | | | 2 | .Clip | .Clips | 5 |
| 2600 | | 73 26 093 | | | 1 | .Bushing | .Bussning | 5 |
| 2610 | | 85 03 286 | | | 1 | .Cable terminal | .Kabelsko | 5 |
| 2620 | | 85 65 855 | | | 1 | .Clip | .Clips | 6 |
| 2630 | | 95 23 975 | | | 1 | .Electronic unit | .Elektronikenhet | 3 |
| 2640 | | 95 64 170 | | | 1 | .Attaching brace | .Fästbygel | 6 |
| 2650 | | 95 64 345 | | | 1 | .Spacer washer | .Distansbricka | 5 |
| 2660 | | | | | | | | |
| 2670 | 6 | 85 47 101 | | 4SN, C | X | Central lock | Centrallås | 5 |
| 2680 | | 85 91 216 | | | 1 | .Control device | .Styrdon | 3 |
| 2690 | | 85 91 224 | | | 3 | .Electric motor | .Elmotor | 3 |
| 2700 | | 85 91 232 | | | 1 | .Electric motor | .Elmotor | 3 |
| 2710 | | 85 79 914 | | LH, -1985 | 1 | .Pull rod | .Dragstång | 5 |
| 2720 | | 85 79 922 | | RH, -1985 | 1 | .Pull rod | .Dragstång | 5 |
| 2730 | | 85 98 245 | | LH, 1986- | 1 | .Pull rod | .Dragstång | |
| 2740 | | 85 98 252 | | RH, 1986- | 1 | .Pull rod | .Dragstång | |
| 2750 | | 85 78 221 | | | 2 | .Pull rod | .Dragstång | 5 |
| 2760 | | 84 61 675 | | | 2 | .Clip | .Clips | 5 |
| 2770 | | 85 79 906 | | -1985 | 2 | .Bracket | .Konsol | 6 |
| 2780 | | 85 98 211 | | LH, 1986- | 1 | .Bracket | .Konsol | 6 |
| 2790 | | 95 51 151 | | RH, 1986- | 1 | .Bracket | .Konsol | 6 |
| 2800 | | 80 59 529 | | | 4 | .Screw | .Skruv | 5 |
| 2810 | | 85 73 966 | | | 8 | .Bushing | .Bussning | 4 |
| 2820 | | 85 73 958 | | | 10 | .Sleeve | .Hylsa | 5 |
| 2830 | | 79 73 597 | | | 8 | .Screw | .Skruv | 5 |
| 2840 | | 80 74 098 | | | 2 | .Nut | .Mutter | 5 |
| 2850 | | 70 85 541 | | | 2 | .Sleeve | .Hylsa | 3 |
| 2860 | | *85 91 208* | | NLS - USE 8565855, 9529975, 9564170, 9564345 | 1 | .Electronic unit | .Elektronikenhet | 3 |
| 2860 | | | | | | | | |
| 2870 | | 85 91 414 | | | 1 | .Attaching brace | .Fästbygel | 6 |
| 2880 | | 79 71 344 | | | 2 | .Screw | .Skruv | 5 |
| 2890 | | 85 91 422 | | | 4 | .Protection | .Skydd | 4 |
| 2900 | | 79 71 880 | | | 12 | .Tensioning band | .Spännband | 4 |
| 2910 | | 71 08 491 | | | 12 | .Clamp | .Klammer | 5 |
| 2920 | | 97 30 995 | | | 2 | .Clip | .Clips | 5 |
| 2930 | | 85 91 281 | | | 2 | .Cable harness | .Ledningsnät | 5 |
| 2940 | | 85 46 939 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 2950 | | 85 91 273 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 2960 | | 85 46 905 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 2970 | | 85 46 913 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 2980 | | 85 91 240 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 2990 | | 95 01 685 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 3000 | | 95 03 277 | | | 2 | .Contact housing | .Kontakthus | 4 |
| 3010 | | 95 03 319 | | | 5 | .Contact housing | .Kontakthus | 4 |
| 3020 | | 95 03 327 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 3030 | | 85 61 623 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 3040 | | 73 26 093 | | | 1 | .Bushing | .Bussning | 5 |
| 3050 | | 85 03 286 | | | 1 | .Cable terminal | .Kabelsko | 5 |
| 3060 | | | | 75/661025 | 1 | .Assembly instruction | .Monteringsanvisning | |
| 3070 | | | | | | | | |
| 3080 | 6 | 85 47 143 | | 4SN, I | X | Central lock | Centrallås | 5 |
| 3090 | | 85 47 168 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 3100 | | 85 91 273 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 3110 | | 85 91 240 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 3120 | | 85 46 913 | | | 1 | .Cable harness | .Ledningsnät | 5 |
| 3130 | | 85 91 281 | | | 2 | .Cable harness | .Ledningsnät | 5 |
| 3140 | | | | 75/661025 | 1 | .Assembly instruction | .Monteringsanvisning | |
| 3150 | | 85 98 245 | | LH | 1 | .Pull rod | .Dragstång | |
| 3160 | | 85 98 252 | | RH | 1 | .Pull rod | .Dragstång | |
| 3170 | | 85 98 211 | | LH | 1 | .Bracket | .Konsol | 6 |
| 3180 | | 95 51 151 | | RH | 1 | .Bracket | .Konsol | 6 |
| 3190 | | 85 91 216 | | | 1 | .Control device | .Styrdon | 3 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8A GROUP INDEX



| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |


# 5-H16


## *Car body, external*


## *Kaross, utvändig*

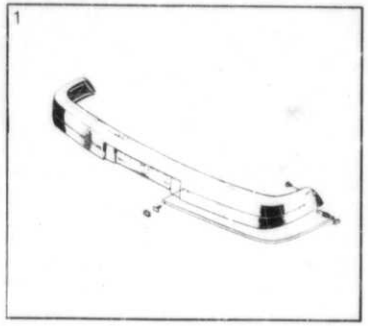


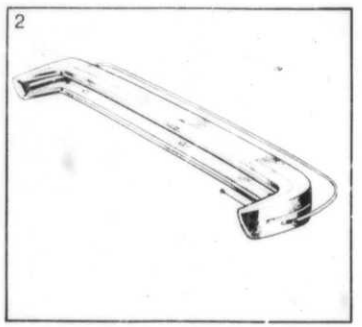
F0852 - 900
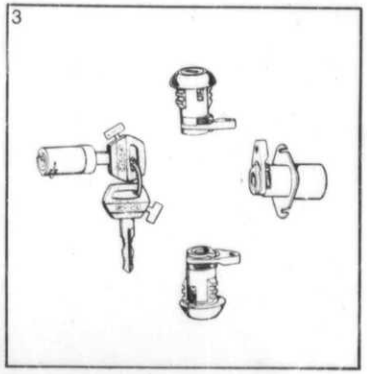
| 2300 | Pos | Part No/Art.nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S i |
|---|---|---|---|---|---|---|---|---|
| 3200 | | 85 91 224 | | | 3 | .Electric motor | .Elmotor | 3 |
| 3210 | | 85 73 966 | | | 8 | .Bushing | .Bussning | 4 |
| 3220 | | 85 73 958 | | | 10 | .Sleeve | .Hylsa | 5 |
| 3230 | | 80 59 537 | | | 4 | .Screw | .Skruv | 5 |
| 3240 | | 79 73 597 | | | 8 | .Screw | .Skruv | 5 |
| 3250 | | 79 71 880 | | | 12 | .Tensioning band | .Spännband | 4 |
| 3260 | | 85 91 422 | | | 2 | .Protection | .Skydd | 4 |
| 3270 | | 85 91 232 | | | 1 | .Electric motor | .Elmotor | 3 |
| 3280 | | 85 78 221 | | | 2 | .Pull rod | .Dragstång | 5 |
| 3290 | | 70 85 541 | | | 2 | .Sleeve | .Hylsa | 3 |
| 3300 | | 84 61 675 | | | 2 | .Clip | .Clips | 5 |
| 3310 | | 80 74 098 | | | 2 | .Nut | .Mutter | 5 |
| 3320 | | 95 29 975 | | | 1 | .Electronic unit | .Elektronikenhet | 3 |
| 3330 | | 85 91 414 | | | 1 | .Attaching brace | .Fästbygel | 6 |
| 3340 | | 79 71 344 | | | 2 | .Screw | .Skruv | 5 |
| 3350 | | 95 01 685 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 3360 | | 95 03 319 | | | 5 | .Contact housing | .Kontakthus | 4 |
| 3370 | | 95 03 327 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 3380 | | 95 03 277 | | | 2 | .Contact housing | .Kontakthus | 4 |
| 3390 | | 85 61 623 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 3400 | | 71 08 491 | | | 12 | .Clamp | .Klammer | 5 |
| 3410 | | 97 30 395 | | | 2 | .Clip | .Clips | 5 |
| 3420 | | 73 26 093 | | | 1 | .Bushing | .Bussning | 5 |
| 3430 | | 85 03 286 | | | 1 | .Cable terminal | .Kabelsko | 5 |
| 3440 | | 85 65 855 | | | 1 | .Clip | .Clips | 6 |
| 3450 | | 95 64 170 | | | 1 | .Attaching brace | .Fästbygel | 6 |
| 3460 | | 95 64 345 | | | 1 | .Spacer washer | .Distansbricka | 5 |

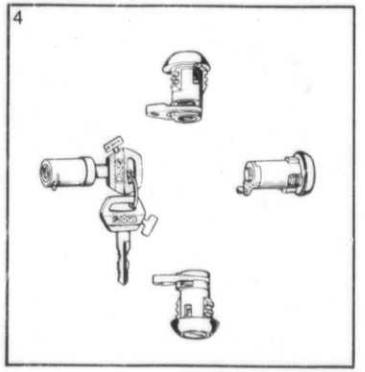MASTER INDEX
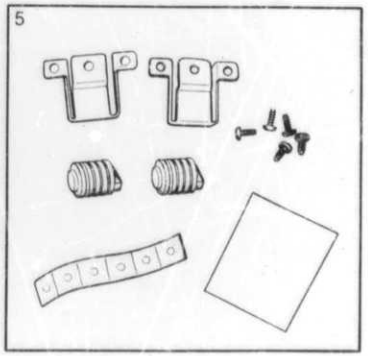
| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

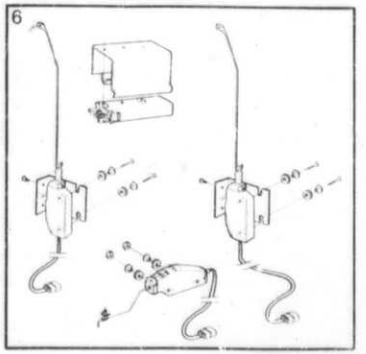
8A GROUP INDEX

| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 5-H18

## *Car body, external*

## *Kaross, utvändig*

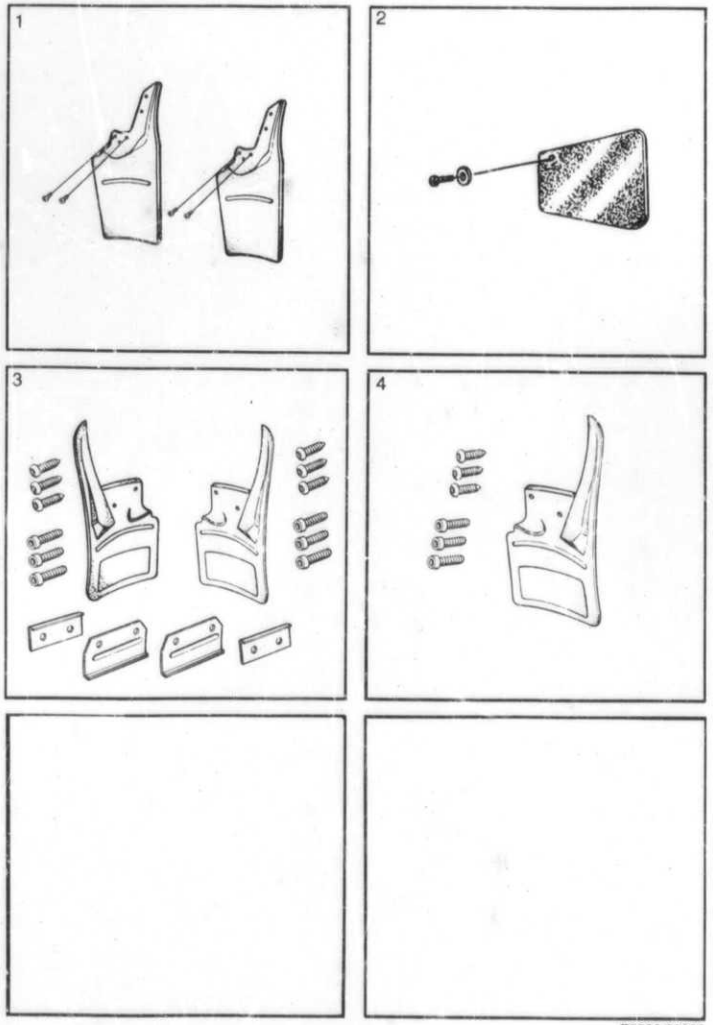


F5600 90086

| 2450 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 69 39 375 | | 6,43) LH, RH, CK | X | Baffle | Stänkskydd | 3 |
| 0020 | | 69 19 054 | | | 2 | .Protecting moulding | .Skyddslist | 3 |
| 0030 | | 69 37 593 | | LH | 1 | .Baffle | .Stänkskydd | 3 |
| 0040 | | 69 37 585 | | RH | 1 | .Baffle | .Stänkskydd | 3 |
| 0050 | | 79 22 974 | | | 4 | .Screw | .Skruv | 5 |
| 0060 | | 79 22 982 | | | 6 | .Screw | .Skruv | 5 |
| 0070 | | 79 75 774 | | | 2 | .Screw | .Skruv | 5 |
| 0080 | | 82 27 738 | | | 2 | .Support plate | .Stödplatta | 6 |
| 0090 | | 92 22 613 | | | 2 | .Attaching plate | .Fästplåt | 3 |
| 0100 | | 92 82 138 | | | 4 | .Sleeve | .Hylsa | 5 |
| 0110 | | *79 72 896* | | NLS - USE 7965684, 8073090 | 4 | .Screw | .Skruv | 5 |
| 0110 | | | | | | | | |
| 0120 | | | | | | | | |
| 0130 | 1 | 69 39 383 | | 6,43) LH, RH, SN | X | Baffle | Stänkskydd | 3 |
| 0140 | | 69 19 054 | | | 2 | .Protecting moulding | .Skyddslist | 3 |
| 0150 | | 69 37 478 | | LH | 1 | .Baffle | .Stänkskydd | 3 |
| 0160 | | 69 37 486 | | RH | 1 | .Baffle | .Stänkskydd | 3 |
| 0170 | | 79 22 974 | | | 4 | .Screw | .Skruv | 5 |
| 0180 | | 79 22 982 | | | 6 | .Screw | .Skruv | 5 |
| 0190 | | 79 75 774 | | | 2 | .Screw | .Skruv | 5 |
| 0200 | | 82 27 738 | | | 2 | .Support plate | .Stödplatta | 6 |
| 0210 | | 92 22 613 | | | 2 | .Attaching plate | .Fästplåt | 3 |
| 0220 | | 92 82 138 | | | 4 | .Sleeve | .Hylsa | 5 |
| 0230 | | *79 72 896* | | NLS - USE 7965684, 8073090 | 4 | .Screw | .Skruv | 5 |
| 0230 | | | | | | | | |
| 0240 | | | | | | | | |
| 0250 | 2 | 96 98 531 | | -1988,5) LH, ALT FOR ME FE | X | Splash guard kit | Stänkskyddssats | 5 |
| 0260 | | | | | | | | |
| 0270 | | 69 43 880 | | | 1 | .Baffle | .Stänkskydd | 5 |
| 0280 | | 79 73 050 | | | 3 | .Screw | .Skruv | 5 |
| 0290 | | | | | | | | |
| 0300 | 2 | 96 98 549 | | -1988,5) RH, ALT FOR ME FE | X | Splash guard kit | Stänkskyddssats | 5 |
| 0310 | | | | | | | | |
| 0320 | | *69 43 898* | | NLS | 1 | .Baffle | .Stänkskydd | 5 |
| 0330 | | 79 73 050 | | | 3 | .Screw | .Skruv | 5 |
| 0340 | | | | | | | | |
| 0350 | 3 | 96 98 408 | | 1988-,6) AERO | X | Baffle | Stänkskydd | 3 |
| 0360 | | 69 42 528 | | | 1 | .Baffle | .Stänkskydd | 3 |
| 0370 | | 69 42 536 | | | 1 | .Baffle | .Stänkskydd | 3 |
| 0380 | | 79 22 974 | | | 4 | .Screw | .Skruv | 5 |
| 0390 | | 79 22 982 | | | 2 | .Screw | .Skruv | 5 |
| 0400 | | 79 69 314 | | | 2 | .Screw | .Skruv | 5 |
| 0410 | | 79 73 050 | | | 4 | .Screw | .Skruv | 5 |
| 0420 | | 82 27 738 | | | 2 | .Support plate | .Stödplatta | 6 |
| 0430 | | 92 22 613 | | | 2 | .Attaching plate | .Fästplåt | 3 |
| 0440 | | | | | | | | |
| 0450 | 4 | 96 98 390 | | 1988-,6) LH, AERO | 1 | Baffle | Stänkskydd | 3 |
| 0460 | | 69 42 536 | | LH | 1 | .Baffle | .Stänkskydd | 3 |
| 0470 | | 79 22 974 | | | 2 | .Screw | .Skruv | 5 |
| 0480 | | 79 22 982 | | | 1 | .Screw | .Skruv | 5 |
| 0490 | | 79 69 314 | | | 1 | .Screw | .Skruv | 5 |
| 0500 | | 79 73 050 | | | 2 | .Screw | .Skruv | 5 |
| 0510 | | | | | | | | |
| 0520 | 4 | 96 98 382 | | 1988-,6) RH, AERO | X | Baffle | Stänkskydd | 3 |
| 0530 | | 69 42 528 | | RH | 1 | .Baffle | .Stänkskydd | 3 |
| 0540 | | 79 22 974 | | | 2 | .Screw | .Skruv | 5 |
| 0550 | | 79 22 982 | | | 1 | .Screw | .Skruv | 5 |
| 0560 | | 79 69 314 | | | 1 | .Screw | .Skruv | 5 |
| 0570 | | 79 73 050 | | | 2 | .Screw | .Skruv | 5 |

5. Front Främre
6. Rear Bakre
43. For cars with integrated bumpers För bilar med integrerade stötfångare



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8A GROUP INDEX


| | |
|---|---|
| Main body | 5-A06 |
| Hood, front, fenders | 5-C10 |
| Doors, trunk lid | 5-C16 |
| External details, glass, sealings | 5-D22 |
| Bumpers and touch-up paint | 5-F22 |
| Complete sets | 5-G18 |

# 8B

Body, internal
Kaross, invändig
Carrocería, inferior

# 6-A02

TABLE OF CONTENTS


| | | |
|---|---|---|
| **Instrument panel** | | |
| Instrument panel, panel upper, instrument plate | 8B : 5 | 6-A06 |
| Instrument panel, panel outlet | 8B : 9 | 6-A10 |
| Instrument panel, panel lower | 8B : 11 | 6-A12 |
| Instrumentpanel, centre console | 8B : 15 | 6-A16 |
| Cover, gear shift lever | 8B : 17 | 6-A18 |
| **Upholstery** | | |
| Insulation | 8B : 19 | 6-A20 |
| Covers, medium luxury degree, Viktoria pattern 1986 | 8B : 25 | 6-B02 |
| Covers, high luxury degree, Block pattern 1986 | 8B : 29 | 6-B06 |
| Covers, high luxury degree, Contour design 1986 | 8B : 31 | 6-B08 |
| Covers, medium luxury degree, Viktoria pattern 1987 | 8B : 35 | 6-B12 |
| Covers, high luxury degree, Block pattern 1987 | 8B : 39 | 6-B16 |
| Covers, high luxury degree, Contour design 1987 | 8B : 41 | 6-B18 |
| Covers, medium luxury degree, Viktoria pattern 1988 | 8B : 47 | 6-B24 |
| Covers, high luxury degree, Horizon pattern 1988 | 8B : 51 | 6-C04 |
| Covers, high luxury degree, Contour design 1988 | 8B : 55 | 6-C08 |
| Covers, medium luxury degree, Parallel pattern 1989 | 8B : 59 | 6-C12 |
| Covers, high luxury degree, Horizon pattern 1989 | 8B : 63 | 6-C16 |
| Covers, high luxury degree, Contour design 1989 | 8B : 67 | 6-C20 |
| Door and side trim, 2SN, 3CK, CV 1986 | 8B : 71 | 6-C24 |
| Door trim etc. 4SN, 5CK, CD, 1986 | 8B : 77 | 6-D06 |
| Door and side trim, 2SN, 3CK, CV 1987 | 8B : 85 | 6-D14 |
| Door trim etc. 4SN, 5CK 1987 | 8B : 93 | 6-D22 |
| Door and side trim, 2SN, 3CK, CV 1988 | 8B : 97 | 6-E02 |
| Door trim etc. 4SN, 5CK 1988 | 8B : 105 | 6-E10 |
| Door and side trim, 2SN, 3CK, CV 1989 | 8B : 109 | 6-E14 |
| Door trim etc. 4SN, 5CK 1989 | 8B : 117 | 6-E22 |
| Upholstery luggage compartment | 8B : 121 | 6-F02 |
| Wheel housing lining carpets etc. 1986 | 8B : 123 | 6-F04 |
| Wheel housing lining carpets etc. 1987 | 8B : 127 | 6-F08 |
| Wheel housing lining carpets etc. 1988 | 8B : 131 | 6-F12 |
| Wheel housing lining carpets etc. 1989 | 8B : 135 | 6-F16 |
| Headlining, pillar linning, etc | 8B : 139 | 6-F20 |
| **Other interior equipment** | | |
| Front seats Part 1 -1987 | 8B : 147 | 6-G04 |
| Front seats Part 2 -1987 | 8B : 151 | 6-G08 |
| Front seats Part 3 -1987 | 8B : 153 | 6-G10 |
| Front seats Part 1 1988- | 8B : 155 | 6-G12 |
| Front seats Part 2 1988- | 8B : 159 | 6-G16 |
| Front seats Part 3 1988- | 8B : 161 | 6-G18 |
| Front seats Part 1, automatic belts -1987 | 8B : 165 | 6-G22 |
| Front seats Part 2, automatic belts -1987 | 8B : 167 | 6-G24 |
| Front seats Part 3, automatic belts -1987 | 8B : 169 | 6-H02 |
| Front seats Part 1, automatic belts 1988- | 8B : 173 | 6-H06 |
| Front seats Part 2, automatic belts 1988- | 8B : 177 | 6-H10 |
| Front seats Part 3, automatic belts 1988- | 8B : 181 | 6-H14 |
| Rear seat, seat cushion | 8B : 185 | 6-H18 |
| Rear seat, back cushion | 8B : 189 | 6-H22 |
| Rear seat. Convertible | 8B : 193 | 6-I02 |
| Equipment luggage compartment | 8B : 197 | 6-I06 |
| Scuff plate protector | 8B : 201 | 6-I10 |
| Other interior equipment | 8B : 203 | 6-I12 |
| Shelf | 8B : 207 | 6-I16 |
| Safety belt, 3CK, 2SN, front seat | 8B : 215 | 6-I24 |
| Safety belt, automatic, 3ck, us | 8B : 217 | 6-J02 |
| Safety belt, 5CK,4SN, front seat | 8B : 219 | 6-J04 |
| Safety belt, rear seat | 8B : 221 | 6-J06 |
| **Complete sets:** | | |
| Car body, internal | 8B : 223 | 6-J08 |




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-A03

## INNEHÅLLSFÖRTECKNING


| | | |
|---|---|---|
| **Instrumentpanel** | | |
| Instrumentpanel, panel övre, instrumentplatta | 8B : 5 | 6-A06 |
| Instrumentpanel, panelutsläpp | 8B : 9 | 6-A10 |
| Instrumentpanel, underdel | 8B : 11 | 6-A12 |
| Instrumentpanel, mittkonsol | 8B : 15 | 6-A16 |
| Kåpa, växelspak | 8B : 17 | 6-A18 |
| **Klädsel** | | |
| Isolering | 8B : 19 | 6-A20 |
| Klädselpåsar, medellyxgrad, Viktoriamönster 1986 | 8B : 25 | 6-B02 |
| Klädselpåsar, hög lyxgrad, Blockmönster 1986 | 8B : 29 | 6-B06 |
| Klädselpåsar, hög lyxgrad, Contourdesign 1986 | 8B : 31 | 6-B08 |
| Klädselpåsar, medellyxgrad, Viktoriamönster 1987 | 8B : 35 | 6-B12 |
| Klädselpåsar, hög lyxgrad, Blockmönster 1987 | 8B : 39 | 6-B16 |
| Klädselpåsar, hög lyxgrad, Contourdesign 1987 | 8B : 41 | 6-B18 |
| Klädselpåsar, medellyxgrad, Viktoriamönster 1988 | 8B : 47 | 6-B24 |
| Klädselpåsar, hög lyxgrad, Horisontmönster 1988 | 8B : 51 | 6-C04 |
| Klädselpåsar, hög lyxgrad, Contourdesign 1988 | 8B : 55 | 6-C08 |
| Klädselpåsar, medellyxgrad, Parallelmönster 1989 | 8B : 59 | 6-C12 |
| Klädselpåsar, hög lyxgrad, Horisontmönster 1989 | 8B : 63 | 6-C16 |
| Klädselpåsar, hög lyxgrad, Contourdesign 1989 | 8B : 67 | 6-C20 |
| Dörr och sidklädsel, 2SN, 3CK, CV 1986 | 8B : 71 | 6-C24 |
| Dörrklädsel etc. 4SN, 5CK, CD, 1986 | 8B : 77 | 6-D06 |
| Dörr och sidklädsel, 2SN, 3CK, CV 1987 | 8B : 85 | 6-D14 |
| Dörrklädsel etc. 4SN, 5CK 1987 | 8B : 93 | 6-D22 |
| Dörr och sidklädsel, 2SN, 3CK, CV 1988 | 8B : 97 | 6-E02 |
| Dörrklädsel etc. 4SN, 5CK 1988 | 8B : 105 | 6-E10 |
| Dörr och sidklädsel, 2SN, 3CK, CV 1989 | 8B : 109 | 6-E14 |
| Dörrklädsel etc. 4SN, 5CK 1989 | 8B : 117 | 6-E22 |
| Klädsel bagagerum | 8B : 121 | 6-F02 |
| Hjulhusklädsel, mattor etc. 1986 | 8B : 123 | 6-F04 |
| Hjulhusklädsel, mattor etc. 1987 | 8B : 127 | 6-F08 |
| Hjulhusklädsel, mattor etc. 1988 | 8B : 131 | 6-F12 |
| Hjulhusklädsel, mattor etc. 1989 | 8B : 135 | 6-F16 |
| Takklädsel, stolpklädsel, etc | 8B : 139 | 6-F20 |
| **Övrig invändig utrustning** | | |
| Stolar Del 1 -1987 | 8B : 147 | 6-G04 |
| Stolar Del 2 -1987 | 8B : 151 | 6-G08 |
| Stolar Del 3 -1987 | 8B : 153 | 6-G10 |
| Stolar Del 1 1988- | 8B : 155 | 6-G12 |
| Stolar Del 2 1988- | 8B : 159 | 6-G16 |
| Stolar Del 3 1988- | 8B : 161 | 6-G18 |
| Stolar Del 1, passivt bälte -1987 | 8B : 165 | 6-G22 |
| Stolar Del 2, passivt bälte -1987 | 8B : 167 | 6-G24 |
| Stolar Del 3, passivt bälte -1987 | 8B : 169 | 6-H02 |
| Stolar Del 1, passivt bälte 1988- | 8B : 173 | 6-H06 |
| Stolar Del 2, passivt bälte 1988- | 8B : 177 | 6-H10 |
| Stolar Del 3, passivt bälte 1988- | 8B : 181 | 6-H14 |
| Baksäte, sittdyna | 8B : 185 | 6-H18 |
| Baksäte, ryggdyna | 8B : 189 | 6-H22 |
| Baksäte, Cabriolet | 8B : 193 | 6-I02 |
| Utrustning bagagerum | 8B : 197 | 6-I06 |
| Tröskelskydd | 8B : 201 | 6-I10 |
| Övrig invändig utrustning | 8B : 203 | 6-I12 |
| Hatthylla | 8B : 207 | 6-I16 |
| Bilbälte 3CK, 2SN, framsäte | 8B : 215 | 6-I24 |
| Bilbälte, passivt, 3ck, us | 8B : 217 | 6-J02 |
| Bilbälte 5CK,4SN, framsäte | 8B : 219 | 6-J04 |
| Bilbälte, baksäte | 8B : 221 | 6-J06 |
| **Satser:** | | |
| Kaross, invändig | 8B : 223 | 6-J08 |






# 6-A04

## SUMARIO


| | | |
|---|---|---|
| **Tablero de instrumentos** | | |
| Tablero de instrumentos, panel superior, place de instrumentos | 8B : 5 | 6-A06 |
| Tablero de instrumentos, boquilla de panel | 8B : 9 | 6-A10 |
| Tablero de instrumentos, parte inferior | 8B : 11 | 6-A12 |
| Tablero de instrumentos, soporte central | 8B : 15 | 6-A16 |
| Tapa de palanca de cambios | 8B : 17 | 6-A18 |
| **Tapiceria** | | |
| Aislamiento | 8B : 19 | 6-A20 |
| Fundas de asiento, semi-lujo, muestra en Viktoria 1986 | 8B : 25 | 6-B02 |
| Fundas de asiento, grand-lujo, muestra en Bloque 1986 | 8B : 29 | 6-B06 |
| Fundas de asiento, grand-lujo, diseno Contour 1986 | 8B : 31 | 6-B08 |
| Fundas de asiento, semi-lujo, muestra en Viktoria 1987 | 8B : 35 | 6-B12 |
| Fundas de asiento, grand-lujo, muestra en Bloque 1987 | 8B : 39 | 6-B16 |
| Fundas de asiento, grand-lujo, diseno Contour 1987 | 8B : 41 | 6-B18 |
| Fundas de asiento, semi-lujo, muestra en Viktoria 1988 | 8B : 47 | 6-B24 |
| Fundas de asiento, grand-lujo, muestra en Horizon 1988 | 8B : 51 | 6-C04 |
| Fundas de asiento, grand-lujo, diseno Contour 1988 | 8B : 55 | 6-C08 |
| Fundas de asiento semi-lujo, muestra en Parallel 1989 | 8B : 59 | 6-C12 |
| Fundas de asiento, grand-lujo, muestra en Horizon 1989 | 8B : 63 | 6-C16 |
| Fundas de asiento, grand-lujo, diseno Contour 1989 | 8B : 67 | 6-C20 |
| Puertas y tapiceria 2SN, 3CK, CV 1986 | 8B : 71 | 6-C24 |
| Tapiceria de puerta, etc, 4SN, 5CK, automovil prolongado CD, 1986 | 8B : 77 | 6-D06 |
| Puertas y tapiceria, 2SN, 3CK, CV 1987 | 8B : 85 | 6-D14 |
| Tapiceria de puerta, etc, 4SN, 5CK 1987 | 8B : 93 | 6-D22 |
| Puertas y tapiceria, 2SN, 3CK, CV 1988 | 8B : 97 | 6-E02 |
| Tapiceria de puerta, etc, 4SN, 5CK 1988 | 8B : 105 | 6-E10 |
| Puertas y tapiceria, 2SN, 3CK, CV 1989 | 8B : 109 | 6-E14 |
| Tapiceria de puerta, etc, 4SN, 5CK 1989 | 8B : 117 | 6-E22 |
| Tapiceria compartimento de equipajes | 8B : 121 | 6-F02 |
| Tapiceria, el de huecos de rueda, alfombras, etc 1986 | 8B : 123 | 6-F04 |
| Tapiceria, el de huecos de rueda, alfombras, etc 1987 | 8B : 127 | 6-F08 |
| Tapiceria, el de huecos de rueda, alfombras, etc 1988 | 8B : 131 | 6-F12 |
| Tapiceria, el de huecos de rueda, alfombras, etc 1989 | 8B : 135 | 6-F16 |
| Tapiceria del techo, de los montantes, etc | 8B : 139 | 6-F20 |
| **Otro equipo interior** | | |
| Asientos Del 1a parte -1987 | 8B : 147 | 6-G04 |
| Asientos Del 2a parte -1987 | 8B : 151 | 6-G08 |
| Asientos Del 3a parte -1987 | 8B : 153 | 6-G10 |
| Asientos Del 1a parte 1988- | 8B : 155 | 6-G12 |
| Asientos Del 2a parte 1988- | 8B : 159 | 6-G16 |
| Asientos Del 3a parte 1988- | 8B : 161 | 6-G18 |
| Asientos Del 1a parte, per cinturon de seguridad, automatico -1987 | 8B : 165 | 6-G22 |
| Asientos Del 2a parte, per cinturon de seguridad, automatico -1987 | 8B : 167 | 6-G24 |
| Asientos Del 3a parte, per cinturon de seguridad, automatico -1987 | 8B : 169 | 6-H02 |
| Asientos Del 1a parte, per cinturon de seguridad, automatico 1988- | 8B : 173 | 6-H06 |
| Asientos Del 2a parte, per cinturon de seguridad, automatico 1988- | 8B : 177 | 6-H10 |
| Asientos Del 3a parte, per cinturon de seguridad, automatico 1988- | 8B : 181 | 6-H14 |
| Asientos Tras, almohadillado del cojin | 8B : 185 | 6-H18 |
| Asientos Tras, cojin del respaldo | 8B : 189 | 6-H22 |
| Asientos Tras, Cabriolet | 8B : 193 | 6-I02 |
| Compartimento para equipo | 8B : 197 | 6-I06 |
| Proteccion de umbral | 8B : 201 | 6-I10 |
| Otro equipo interior | 8B : 203 | 6-I12 |
| Tablilla trassera | 8B : 207 | 6-I16 |
| Cinturon de seguridad, 3CK, 2SN, Del | 8B : 215 | 6-I24 |
| Cinturon de seguridad, automatico, 3ck, us | 8B : 217 | 6-J02 |
| Cinturon de seguridad, 5CK,4SN, Del | 8B : 219 | 6-J04 |
| Cinturon de seguridad, Tras | 8B : 221 | 6-J06 |
| **Juegos completos:** | | |
| Carosseria, interior | 8B : 223 | 6-J08 |





## MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


## 8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

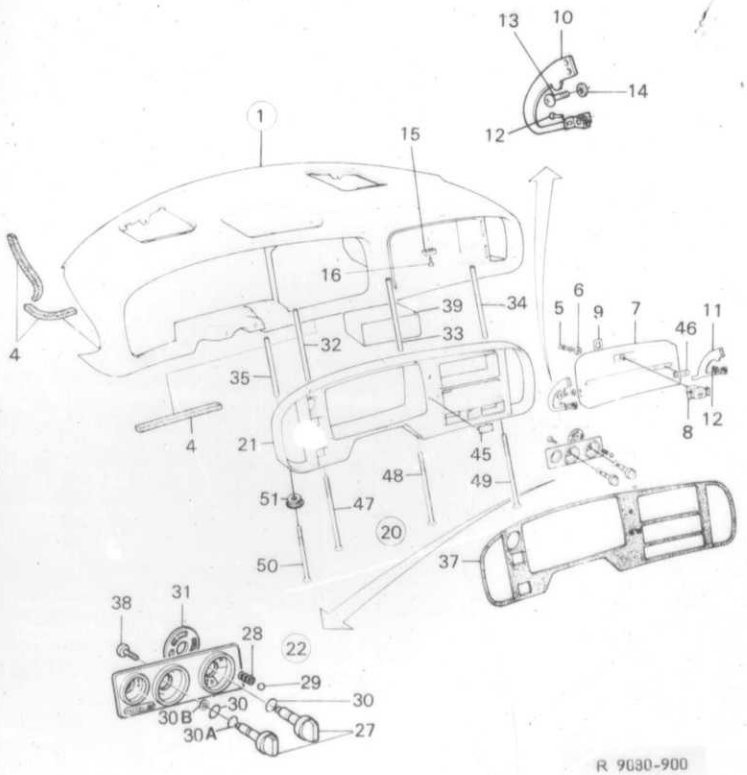


Instrument panel

# 6-A06

## *Panel upper instrument plate*

Instrumentpanel

## *Panel övre, instrumentplatta*

| 0500 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *98 37 477* | | 610,142) NLS - USE 9699257 | 1 | Panel | Panel | 6 |
| 0015 | 1 | *96 11 336* | | 610,143), -1988 NLS - USE 4082830 | 1 | Panel | Panel | 6 |
| 0017 | 1 | *95 40 592* | | 610,500), 1989- NLS - USE 4082830 | 1 | Panel | Panel | 6 |
| 0020 | 1 | 98 35 596 | | 560,181) | 1 | Panel | Panel | 6 |
| 0022 | 1 | *96 11 328* | | 560,182), -1987 NLS - USE 9699778 | 1 | Panel | Panel | 6 |
| 0025 | 1 | *95 32 284* | | 560), 1988 NLS - USE 4036273 | 1 | Panel | Panel | 6 |
| 0027 | 1 | 40 36 273 | | 560,500), 1989- | 1 | Panel | Panel | 6 |
| 0030 | 1 | *98 41 610* | | 610), RHD NLS - USE 4082848 | 1 | Panel | Panel | 6 |
| 0040 | 1 | 98 41 594 | | 560), RHD | 1 | Panel | Panel | 6 |
| 0050 | 4 | 94 25 851 | | | 5 | .Felt | .Filt | 5 |
| 0060 | 5 | 94 25 869 | | | 2 | .Buffer | .Buffert | 5 |
| 0070 | 6 | 94 34 499 | | | 2 | .Absorber | .Dämpare | 5 |
| 0080 | 7 | *94 85 574* | | 610) NLS - USE 4082855 | 1 | .Glove compartment lid | .Handskfacklucka | 5 |
| 0090 | 7 | *98 41 347* | | 560), -1987 NLS - USE 4030862 | 1 | .Glove compartment lid | .Handskfacklucka | 5 |
| 0095 | 7 | *95 32 300* | | 1988-,281,560) NLS - USE 4030862 | 1 | .Glove compartment lid | .Handskfacklucka | 5 |
| 0097 | 7 | 40 30 862 | | 560,282) | 1 | .Glove compartment lid | .Handskfacklucka | 5 |
| 0100 | 7 | *98 41 701* | | 610), RHD NLS - USE 4082863 | 1 | .Glove compartment lid | .Handskfacklucka | 5 |
| 0110 | 7 | 98 41 685 | | 560), RHD | 1 | .Glove compartment lid | .Handskfacklucka | 5 |
| 0120 | 8 | 82 62 602 | | | 1 | .Lock | .Lås | 3 |
| 0140 | 9 | 82 62 610 | | | 1 | .Clip | .Clips | 5 |
| 0150 | 10 | 94 22 908 | | 142) LH | | .Hinge | .Gångjärn | 4 |
| 0155 | 10 | 96 11 708 | | 143) LH | | .Hinge | .Gångjärn | 4 |
| 0160 | 11 | 94 21 793 | | 142) RH | 1 | .Hinge | .Gångjärn | 4 |
| 0165 | 11 | 96 11 682 | | 143) RH | 1 | .Hinge | .Gångjärn | 4 |
| 0170 | 10 | 94 21 793 | | 142) LH RHD | 1 | .Hinge | .Gångjärn | 4 |
| 0175 | 10 | 96 11 682 | | 143) LH RHD | 1 | .Hinge | .Gångjärn | 4 |
| 0180 | 11 | 94 22 908 | | 142) RH RHD | 1 | .Hinge | .Gångjärn | 4 |
| 0185 | 11 | 96 11 708 | | 143) RH RHD | 1 | .Hinge | .Gångjärn | 4 |
| 0190 | 12 | *79 61 634* | | NLS - USE 7977804 | 4 | .Rivet | .Nit | 5 |
| 0200 | 13 | 98 41 941 | | | 4 | .Screw | .Skruv | 5 |
| 0210 | 14 | *79 34 102* | | NLS | 4 | .Washer | .Bricka | 6 |
| 0220 | 15 | 97 08 108 | | | 1 | .Striker plate | .Låsbleck | 5 |
| 0230 | 16 | 79 67 763 | | | 2 | .Screw | .Skruv | 5 |
| 0240 | 20 | *97 14 775* | | NLS - USE 4082988 | 1 | Instrument plate | Instrumentplatta | 6 |
| 0250 | 20 | 97 14 783 | | RHD | 1 | Instrument plate | Instrumentplatta | 6 |
| 0260 | 21 | *97 14 825* | | NLS - USE 4083002 | 1 | .Instrument plate | .Instrumentplatta | 6 |
| 0270 | 21 | *97 14 833* | | RHD NLS - USE 4083010 | 1 | .Instrument plate | .Instrumentplatta | 6 |
| 0280 | 22 | 94 79 841 | | | 1 | .Control panel | .Reglageplatta | 5 |
| 0290 | 27 | 94 81 425 | | | 2 | ..Knob | ..Vred | 6 |
| 0300 | 28 | 94 20 035 | | | 2 | ..Spring | ..Fjäder | 5 |
| 0310 | 29 | 94 20 043 | | | 2 | ..Ball | ..Kula | 5 |
| 0320 | 30 | 79 36 008 | | | 2 | ..E-circlip | ..Spårryttare | 5 |
| 0330 | 30A | 43 18 200 | | | 2 | ..O-ring | ..O-ring | 2 |
| 0340 | 30B | 80 29 951 | | | 1 | ..Washer | ..Bricka | 5 |
| 0350 | 31 | 94 25 844 | | | 1 | ..Washer | ..Bricka | 6 |

142. Ch. -H2021725, -H3020759, -H7037411
143. Ch. H2021726-, H3020760-, H7037412-
181. Ch. -J3009303, -J7004739
182. Ch. J3009304-, J7004740-
281. Ch. -K3013921
282. Ch. K3013922-
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
610. Black Svart



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX



| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

Instrument panel

# 6-A08 Panel upper instrument plate

Instrumentpanel

*Panel övre, instrumentplatta*

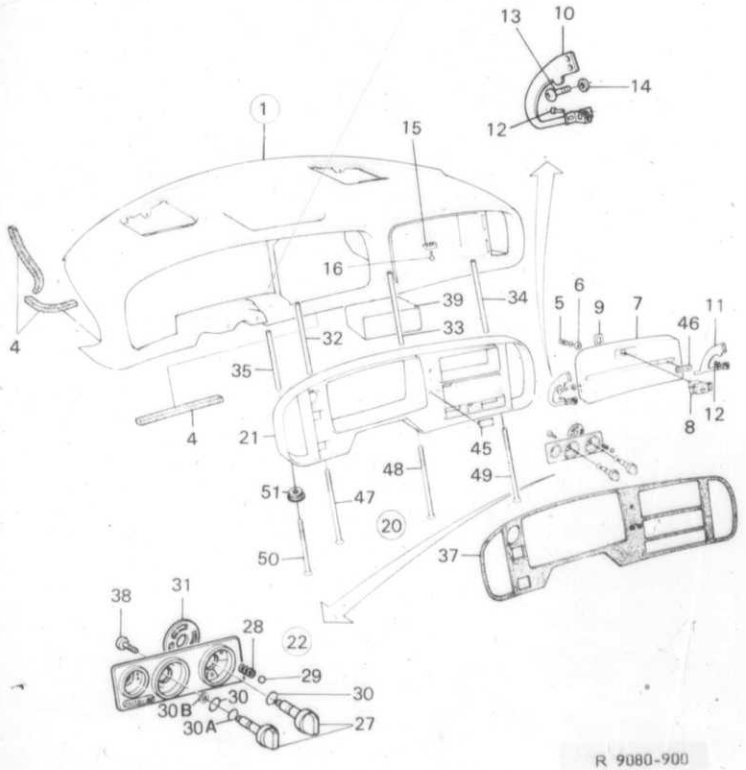


| 0500 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0360 | 32 | 94 22 874 | | | 1 | . Sleeve | . Hylsa | 5 |
| 0370 | 33 | 94 22 882 | | | 1 | . Sleeve | . Hylsa | 5 |
| 0380 | 34 | 94 22 890 | | | 1 | . Sleeve | . Hylsa | 5 |
| 0390 | 35 | 94 29 721 | | | 1 | . Sleeve | . Hylsa | 5 |
| 0400 | 37 | 97 14 791 | | | 1 | . Lining | . Beklädnad | 5 |
| 0410 | 37 | 97 14 809 | | RHD | 1 | . Lining | . Beklädnad | 5 |
| 0420 | 38 | 79 71 393 | | | 2 | . Screw | . Skruv | 5 |
| 0430 | 39 | 97 14 817 | | | 1 | Storage tray | Förvaringsfack | 6 |
| 0440 | 45 | 94 25 679 | | "UNLEADED FUEL ONLY" | 1 | Text plate | Textskylt | 5 |
| 0460 | 45 | 96 82 535 | | 1987-, "ENDAST BLYFRI BENSIN" | 1 | Text plate | Textskylt | 5 |
| 0480 | 45 | 96 82 543 | | 1987-, "NUR BLEIFREIES BENZIN" | 1 | Text plate | Textskylt | 5 |
| 0500 | 45 | 96 82 550 | | 1987-, "ESSENCE SANS PLOMB SEULEMENT" | 1 | Text plate | Textskylt | 5 |
| 0520 | 46 | 94 68 885 | | RHD | 1 | Emblem | Emblem | 3 |
| 0530 | 47 | 94 34 606 | | 142) | 1 | Screw | Skruv | 5 |
| 0535 | 47 | *94 34 614* | | 143) NLS - USE 4155636 | 1 | Screw | Skruv | 5 |
| 0537 | 47 | 94 34 606 | | RHD | 1 | Screw | Skruv | 5 |
| 0540 | 48 | *94 34 614* | | 142) NLS - USE 4155636 | 1 | Screw | Skruv | 5 |
| 0545 | 48 | 96 18 299 | | 143) | 1 | Screw | Skruv | 5 |
| 0547 | 48 | *94 34 614* | | RHD NLS - USE 4155636 | 1 | Screw | Skruv | 5 |
| 0550 | 49 | 94 34 622 | | 142) | 1 | Screw | Skruv | 5 |
| 0555 | 49 | 96 18 315 | | 143) | 1 | Screw | Skruv | 5 |
| 0557 | 49 | 94 34 622 | | RHD | 1 | Screw | Skruv | 5 |
| 0560 | 50 | 94 22 858 | | 142) | 1 | Screw | Skruv | 5 |
| 0565 | 50 | 96 18 281 | | 143) | 1 | Screw | Skruv | 5 |
| 0567 | 50 | 94 22 858 | | RHD | 1 | Screw | Skruv | 5 |
| 0600 | 51 | 96 80 224 | | 143) NOT RHD | 4 | Plastic washer | Plastbricka | 5 |
| 0900 | | 97 46 694 | | See page 8B-229, 6-J14 | X | Control set | Reglagesats | 3 |
| 0950 | | 96 99 257 | | 610) | 1 | . Panel kit | . Panelsats | 6 |
| 0960 | | | | See page 8B-229, 6-J14 | | | | |
| 0970 | | 96 99 778 | | 560) | 1 | . Panel kit | . Panelsats | 6 |
| 0980 | | | | See page 8B-229, 6-J14 | | | | |

142. Ch. -H2021725, -H3020759, -H7037411
143. Ch. H2021726-, H3020760-, H7037412-
560. Red Rod
610. Black Svart



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |


Instrument panel

Instrumentpanel

# 6-A10

## *Panel outlet*

## *Panelutsläpp*

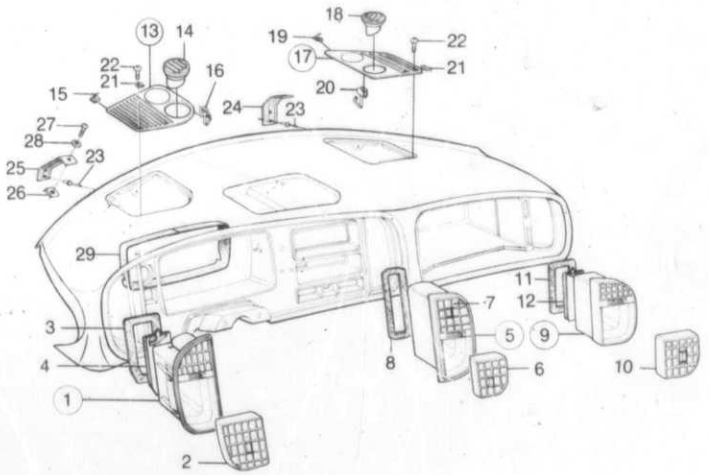


F5571 90086

| 0510 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | See page 8B-005, 6-A06 | | Instrument plate | Instrumentplatta | |
| 0020 | 1 | 94 01 357 | | LH | 1 | .Panel outlet | .Panelutsläpp | 5 |
| 0030 | 1 | 94 20 415 | | RH, RHD | 1 | .Panel outlet | .Panelutsläpp | 5 |
| 0040 | 2 | 94 18 237 | | LH | 1 | ..Air deflector | ..Luftledare | 5 |
| 0050 | 2 | 94 20 431 | | RH, RHD | 1 | ..Air deflector | ..Luftledare | 5 |
| 0060 | 3 | 94 18 328 | | | 1 | ..Seal | ..Tätning | 5 |
| 0070 | 4 | 94 18 310 | | LH, LHD | 1 | ..Shutter | ..Spjäll | 5 |
| 0080 | 5 | 94 18 476 | | | 1 | .Panel outlet | .Panelutsläpp | 5 |
| 0090 | 6 | 94 18 559 | | | 1 | ..Air deflector | ..Luftledare | 5 |
| 0100 | 6 | 94 18 492 | | RHD | 1 | ..Air deflector | ..Luftledare | 5 |
| 0110 | 7 | 94 18 492 | | | 1 | ..Air deflector | ..Luftledare | 5 |
| 0120 | 7 | 94 18 559 | | RHD | 1 | ..Air deflector | ..Luftledare | 5 |
| 0130 | 8 | 94 19 060 | | | 1 | ..Seal | ..Tätning | 5 |
| 0140 | 9 | 94 01 381 | | RH | 1 | .Panel outlet | .Panelutsläpp | 5 |
| 0150 | 9 | 94 20 340 | | LH RHD | 1 | .Panel outlet | .Panelutsläpp | 5 |
| 0160 | 10 | 94 18 351 | | RH | 1 | ..Air deflector | ..Luftledare | 5 |
| 0170 | 10 | 94 20 365 | | LH RHD | 1 | ..Air deflector | ..Luftledare | 5 |
| 0180 | 11 | 94 18 435 | | | 1 | ..Seal | ..Tätning | 5 |
| 0190 | 12 | 94 18 427 | | RH, LHD | 1 | ..Shutter | ..Spjäll | 5 |
| 0200 | 13 | 98 37 485 | | 610), LH | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0210 | 13 | 98 35 620 | | 560), LH | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0220 | 13 | 98 41 818 | | 610), LH RHD | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0230 | 13 | 98 41 776 | | 560), LH RHD | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0240 | 14 | 94 22 676 | | LH | 1 | .Nozzle | .Munstycke | 5 |
| 0250 | 15 | 94 22 056 | | | 2 | .Clip | .Clips | 5 |
| 0260 | 16 | 94 61 047 | | | 1 | .Clip | .Clips | 5 |
| 0270 | 17 | *98 37 493* | | 610), RH NLS - USE 4169801 | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0280 | 17 | 98 35 638 | | 560), RH | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0290 | 17 | 98 41 826 | | 610), RH RHD | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0300 | 17 | 98 41 784 | | 560), RH RHD | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0310 | 18 | 94 22 684 | | RH | 1 | .Nozzle | .Munstycke | 5 |
| 0320 | 19 | 94 22 056 | | | 2 | .Clip | .Clips | 5 |
| 0330 | 20 | 94 61 047 | | | 1 | .Clip | .Clips | 5 |
| 0340 | 21 | 94 61 435 | | | 4 | Clip nut | Clipsmutter | 3 |
| 0350 | 22 | 79 68 084 | | | 4 | Screw | Skruv | 5 |
| 0360 | 23 | 98 49 514 | | | 6 | Rivet | Nit | 5 |
| 0370 | 24 | 97 23 321 | | | 1 | Bracket | Konsol | |
| 0380 | 25 | *94 25 422* | | NLS | 2 | Bracket | Fäste | 5 |
| 0390 | 26 | 94 27 014 | | | 2 | Clip nut | Clipsmutter | 3 |
| 0400 | 27 | 79 22 370 | | 1985 | 2 | Screw | Skruv | 5 |
| 0410 | 27 | 79 22 818 | | 1986- | 2 | Screw | Skruv | 5 |
| 0420 | 28 | 79 16 489 | | | 2 | Washer | Bricka | 5 |
| 0430 | 29 | 94 45 990 | | | 1 | Seal | Tätning | 5 |

560. Red Röd
610. Black Svart




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-A12

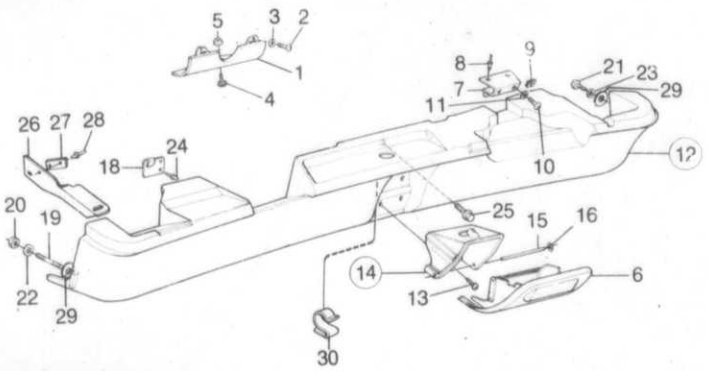


F5572 90086

| 0525 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *94 25 828* | | 610), -1987 NLS - USE 9542093 | 1 | Steering column cover | Rattlagerkåpa | 6 |
| 0020 | 1 | 95 40 287 | | 610), 1988- | 1 | Steering column cover | Rattlagerkåpa | 6 |
| 0030 | 1 | 95 42 093 | | 610,500), 1989- | 1 | Steering column cover | Rattlagerkåpa | 6 |
| 0040 | 1 | 98 41 404 | | 560), -1987 | 1 | Steering column cover | Rattlagerkåpa | 6 |
| 0050 | 1 | 95 40 311 | | 560), 1988- | 1 | Steering column cover | Rattlagerkåpa | 6 |
| 0060 | 1 | 40 36 281 | | 560,500), 1989- | 1 | Steering column cover | Rattlagerkåpa | 6 |
| 0070 | | | | | | | | |
| 0080 | 1 | *94 36 015* | | 610), -1987, RHD NLS - USE 9540295 | 1 | Steering column cover | Rattlagerkåpa | 6 |
| 0090 | 1 | 95 40 295 | | 610), 1988-, RHD | 1 | Steering column cover | Rattlagerkåpa | 6 |
| 0100 | 1 | *98 41 891* | | 560), -1987, RHD NLS - USE 9540303 | 1 | Steering column cover | Rattlagerkåpa | 6 |
| 0110 | 1 | 95 40 303 | | 560), 1988-, RHD | 1 | Steering column cover | Rattlagerkåpa | 6 |
| 0120 | 2 | 79 75 386 | | | 2 | Screw | Skruv | 5 |
| 0130 | 3 | 94 23 666 | | | 2 | Washer | Bricka | 5 |
| 0140 | 4 | 94 23 658 | | | 1 | Special screw | Snabbskruv | 5 |
| 0150 | 5 | 84 52 898 | | | 1 | Quick nut | Snabbmutter | 3 |
| 0160 | 6 | 94 17 551 | | | 1 | Ashtray | Askkopp | 5 |
| 0170 | 7 | *94 25 406* | | NLS | 1 | Bracket | Fäste | 5 |
| 0180 | 7 | 94 25 612 | | RHD | 1 | Bracket | Fäste | 5 |
| 0190 | 8 | 82 39 733 | | -1987 | 4 | Rivet | Nit | 3 |
| 0200 | 8 | 79 72 516 | | 1988- | 4 | Rivet | Nit | 5 |
| 0210 | 9 | 94 27 014 | | | 2 | Clip nut | Clipsmutter | 3 |
| 0220 | 10 | 79 22 354 | | | 2 | Screw | Skruv | 5 |
| 0230 | 11 | 79 16 489 | | | 2 | Washer | Bricka | 5 |
| 0240 | 12 | 98 46 833 | | 600) | 1 | Panel | Panel | 6 |
| 0250 | 12 | 98 46 874 | | 600), RHD | 1 | Panel | Panel | 6 |
| 0260 | | | | | | | | |
| 0270 | 12 | 98 46 866 | | 580), -1987 | 1 | Panel | Panel | 6 |
| 0280 | 12 | 96 82 592 | | 1988- | 1 | Panel | Panel | 6 |
| 0290 | 12 | 98 46 908 | | -1987, RHD | 1 | Panel | Panel | 6 |
| 0300 | 12 | 96 82 600 | | 1988-, RHD | 1 | Panel | Panel | 6 |
| 0310 | | | | | | | | |
| 0320 | 12 | 98 46 841 | | 560), -1987 | 1 | Panel | Panel | 6 |
| 0330 | 12 | 96 89 795 | | 1988- | 1 | Panel | Panel | 6 |
| 0340 | 12 | 98 46 882 | | -1987, RHD | 1 | Panel | Panel | 6 |
| 0350 | 12 | 96 89 803 | | 1988-, RHD | 1 | Panel | Panel | 6 |
| 0360 | | | | | | | | |
| 0370 | 12 | 98 46 858 | | 590), -1988 | 1 | Panel | Panel | 6 |
| 0380 | 12 | 95 33 134 | | 500), 1989- | 1 | Panel | Panel | 6 |
| 0390 | 12 | 98 46 890 | | -1988, RHD | 1 | Panel | Panel | 6 |
| 0400 | 12 | 95 33 167 | | 1989-, RHD | 1 | Panel | Panel | 6 |
| 0410 | | | | | | | | |
| 0420 | 12 | 98 74 041 | | 570) | 1 | Panel | Panel | 6 |
| 0430 | 12 | 98 74 082 | | RHD | 1 | Panel | Panel | 6 |
| 0440 | | | | | | | | |
| 0450 | 12 | 96 14 009 | | 560,60), 1987 | 1 | Panel | Panel | 6 |
| 0460 | 12 | 96 89 811 | | 1988-,186,60) | 1 | Panel | Panel | 6 |
| 0470 | 12 | 95 40 840 | | 187,60) -1988 | 1 | Panel | Panel | 6 |
| 0480 | 12 | *95 40 675* | | 60), 1989- NLS - USE 4079323 | 1 | Panel | Panel | 6 |
| 0480 | | | | | | | | |
| 0490 | | | | | | | | |

60. For cars with automatic belts  For bilar med passivt bälte
186. Ch. -J3015726
187. Ch. J3015727-
500. Also valid for SE 1988B.  Gäller även för SE 1988B.
560. Red  Röd
570. Grey  Grå
580. Blue  Blå
590. Yellow  Gul
600. Brown  Brun
610. Black  Svart




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-A14

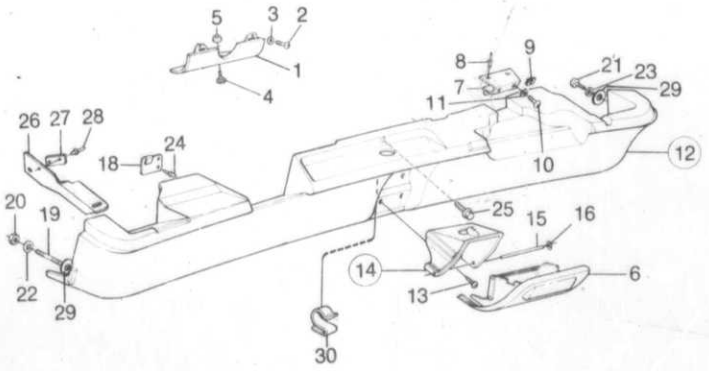


F5572 90086

| 0525 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0500 | 12 | *96 14 017* | | 1987-,186,60,590) NLS - USE 9540857 | 1 | Panel | Panel | 6 |
| 0510 | 12 | 95 40 857 | | 187,60) -1988 | 1 | Panel | Panel | 6 |
| 0520 | 12 | *95 40 907* | | 60), 1989- NLS - USE 4079356 | 1 | Panel | Panel | 6 |
| 0540 | 12 | 96 14 025 | | 580,60), 1987 | 1 | Panel | Panel | 6 |
| 0550 | 12 | 96 82 618 | | 1988-,186,60) | 1 | Panel | Panel | 6 |
| 0560 | 12 | 95 40 865 | | 187,60) -1988 | 1 | Panel | Panel | 6 |
| 0570 | 12 | *95 40 667* | | 60), 1989- NLS - USE 4079349 | 1 | Panel | Panel | 6 |
| 0590 | 12 | 96 14 033 | | 1987-,186,60,570) | 1 | Panel | Panel | 6 |
| 0600 | 12 | 95 40 873 | | 187,60) -1988 | 1 | Panel | Panel | 6 |
| 0610 | 12 | *95 40 691* | | 60), 1989- NLS - USE 4079331 | 1 | Panel | Panel | 6 |
| 0630 | 13 | 79 22 818 | | | 4 | .Screw | .Skruv | 5 |
| 0640 | 14 | 94 11 661 | | | 1 | .Ashtray housing | .Askkoppshus | 6 |
| 0650 | 15 | 94 23 526 | | | 1 | ..Shaft | ..Axel | 6 |
| 0660 | 16 | *94 45 875* | | NLS | 2 | ..Washer | ..Bricka | 5 |
| 0670 | 18 | 94 25 430 | | LH | 1 | Bracket | Fäste | 5 |
| 0680 | 18 | *94 26 495* | | RH NLS | 1 | Bracket | Fäste | 5 |
| 0690 | 19 | 94 46 881 | | | 1 | Stud | Pinnskruv | 5 |
| 0700 | 19 | 95 31 401 | | 233,60) | 1 | Stud | Pinnskruv | 5 |
| 0710 | 20 | 90 29 555 | | -1987 | 1 | Nut | Mutter | 5 |
| 0720 | 20 | 91 51 227 | | 1988- | 1 | Nut | Mutter | 5 |
| 0730 | 21 | *94 46 899* | | NLS - USE 7399603 | 2 | Screw | Skruv | 5 |
| 0740 | 22 | 79 16 489 | | | 1 | Washer | Bricka | 5 |
| 0750 | 22 | *80 73 223* | | 233,60) NLS - USE 9166380 | 1 | Washer | Bricka | 5 |
| 0760 | 23 | 79 16 497 | | | 1 | Washer | Bricka | 5 |
| 0770 | 24 | 79 61 691 | | | 4 | Rivet | Nit | 5 |
| 0780 | 25 | 82 86 296 | | | 1 | Screw | Skruv | 5 |
| 0790 | 26 | 94 57 565 | | LH | 1 | Bracket | Fäste | 5 |
| 0800 | 26 | *94 59 894* | | LH RHD NLS - USE 4166864 | 1 | Bracket | Fäste | 5 |
| 0810 | 27 | 94 58 025 | | | 1 | Washer | Bricka | 5 |
| 0820 | 28 | 79 61 642 | | | 2 | Rivet | Nit | 5 |
| 0830 | 29 | 97 14 122 | | | 2 | Washer | Bricka | 5 |
| 0840 | 30 | 79 33 443 | | 1987- | 1 | Clip | Clips | 5 |

60. For cars with automatic belts  För bilar med passivt bälte
186. Ch -J3015726
187. Ch J3015727-
233. Ch H2013455-, J3000003-
570. Grey  Grå
580. Blue  Blå
590. Yellow  Gul



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-F02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |


Instrument panel

# 6-A16

## *Centre console*

Instrumentpanel

## *Mittkonsol*

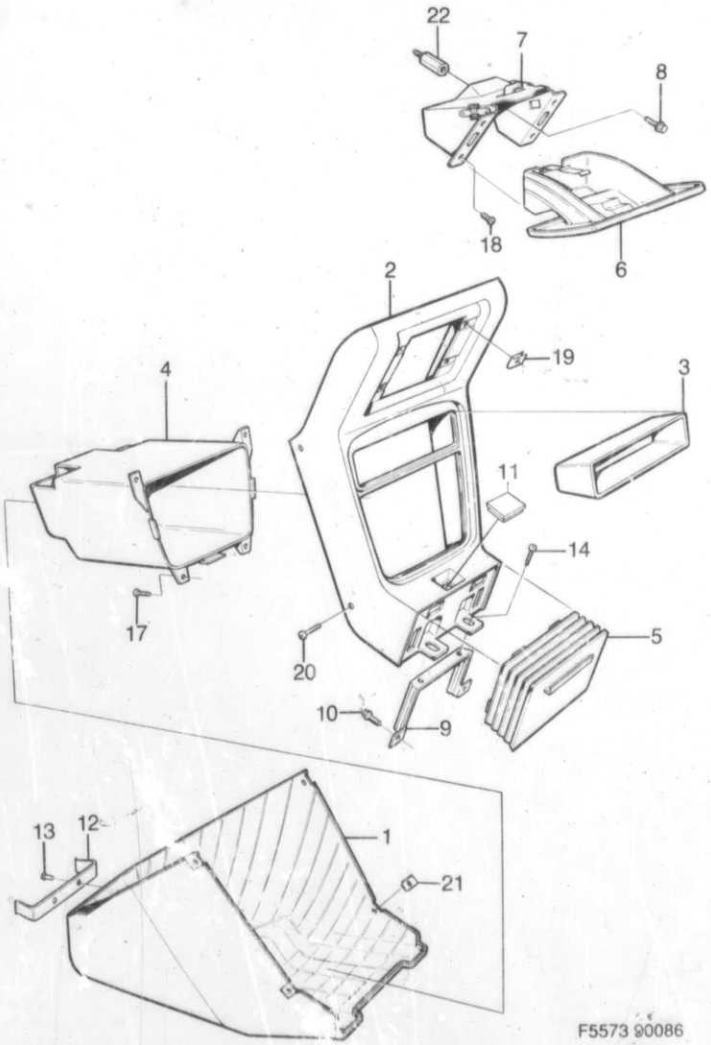


| 0530 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 98 48 029 | | 590), -1988 | 1 | Framework | Stomme | 6 |
| 0020 | 1 | 95 33 233 | | 590,500), 1989- | 1 | Framework | Stomme | 6 |
| 0030 | 1 | *98 48 037* | | 590), -1988, RHD NLS | 1 | Framework | Stomme | 6 |
| 0040 | 1 | 95 33 282 | | 590), 1989-, RHD | 1 | Framework | Stomme | 6 |
| 0050 | | | | | | | | |
| 0060 | 1 | 98 71 088 | | 600) | 1 | Framework | Stomme | 6 |
| 0070 | 1 | *98 71 203* | | 600), RHD NLS | 1 | Framework | Stomme | 6 |
| 0080 | | | | | | | | |
| 0090 | 1 | 98 29 201 | | 560) | 1 | Framework | Stomme | 6 |
| 0100 | 1 | *98 29 219* | | 560), RHD NLS | 1 | Framework | Stomme | 6 |
| 0110 | | | | | | | | |
| 0120 | 1 | 98 27 635 | | 580), -1987 | 1 | Framework | Stomme | 6 |
| 0130 | 1 | 96 82 394 | | 580), 1988- | 1 | Framework | Stomme | 6 |
| 0140 | 1 | *98 27 668* | | 580), -1987, RHD NLS | 1 | Framework | Stomme | 6 |
| 0150 | 1 | 96 82 402 | | 580), 1988-, RHD | 1 | Framework | Stomme | 6 |
| 0160 | | | | | | | | |
| 0170 | 1 | 98 71 146 | | 570) | 1 | Framework | Stomme | 6 |
| 0180 | 1 | 98 71 260 | | 570), RHD | 1 | Framework | Stomme | 6 |
| 0190 | | | | | | | | |
| 0200 | 1 | 96 13 712 | | 560,60), 1987- | 1 | Framework | Stomme | 6 |
| 0210 | 1 | 96 13 720 | | 590,60), 1987-1988 | 1 | Framework | Stomme | 6 |
| 0220 | 1 | 95 33 332 | | 590,60), 1989- | 1 | Framework | Stomme | 6 |
| 0230 | 1 | 96 13 738 | | 580,60), 1987 | 1 | Framework | Stomme | 6 |
| 0240 | 1 | 96 82 386 | | 580,60), 1988- | 1 | Framework | Stomme | 6 |
| 0250 | 1 | 96 13 746 | | 570,60), 1987- | 1 | Framework | Stomme | 6 |
| 0260 | 2 | 98 57 947 | | | 1 | Front section | Framstycke | 6 |
| 0270 | 2 | 98 57 962 | | RHD | 1 | Front section | Framstycke | 6 |
| 0280 | 3 | 97 14 817 | | | 1 | Storage tray | Förvaringsfack | 6 |
| 0290 | 4 | 97 23 347 | | | 1 | Storage tray | Förvaringsfack | 6 |
| 0300 | 4 | 97 23 354 | | RHD | 1 | Storage tray | Förvaringsfack | 6 |
| 0310 | 5 | *98 28 096* | | NLS - USE 4078382 | 1 | Intermediate section | Mellanstycke | 6 |
| 0320 | 6 | 97 16 598 | | | 1 | Ashtray | Askkopp | 6 |
| 0330 | 6 | 97 23 263 | | RHD | 1 | Ashtray | Askkopp | 6 |
| 0340 | 7 | 98 34 243 | | | 1 | Bracket | Konsol | 6 |
| 0350 | 8 | 82 86 296 | | | 1 | Screw | Skruv | 5 |
| 0360 | 9 | 97 16 614 | | | 1 | Bracket | Konsol | |
| 0370 | 10 | 79 72 466 | | | 2 | Screw | Skruv | 5 |
| 0380 | 11 | | | See page 3A-063, 2-C16 | 1 | Cover | Täcklock | |
| 0390 | 12 | 97 16 556 | | | 1 | Bracket | Konsol | 6 |
| 0400 | 13 | 79 61 642 | | | 2 | Rivet | Nit | 5 |
| 0410 | 14 | 79 72 946 | | | 2 | Screw | Skruv | 5 |
| 0420 | 17 | 79 71 351 | | | 4 | Screw | Skruv | 5 |
| 0430 | 18 | 84 08 882 | | | 4 | Screw | Skruv | 5 |
| 0440 | 19 | 79 68 555 | | | 4 | Clip nut | Clipsmutter | 3 |
| 0450 | 20 | 79 69 314 | | | 4 | Screw | Skruv | 5 |
| 0460 | 21 | 79 68 001 | | | 4 | Clip nut | Clipsmutter | 5 |
| 0470 | 22 | 97 23 313 | | | 1 | Bracket | Fäste | 5 |

60. For cars with automatic belts  För bilar med passivt bälte
500. Also valid for SE 1988B.  Gäller även för SE 1988B.
560. Red  Röd
570. Grey  Grå
580. Blue  Blå
590. Yellow  Gul
600. Brown  Brun



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-A18

Instrument panel
**Cover, gear shift lever**
**1990**

Instrumentpanel
**Käpa, växelspak**
**1990**

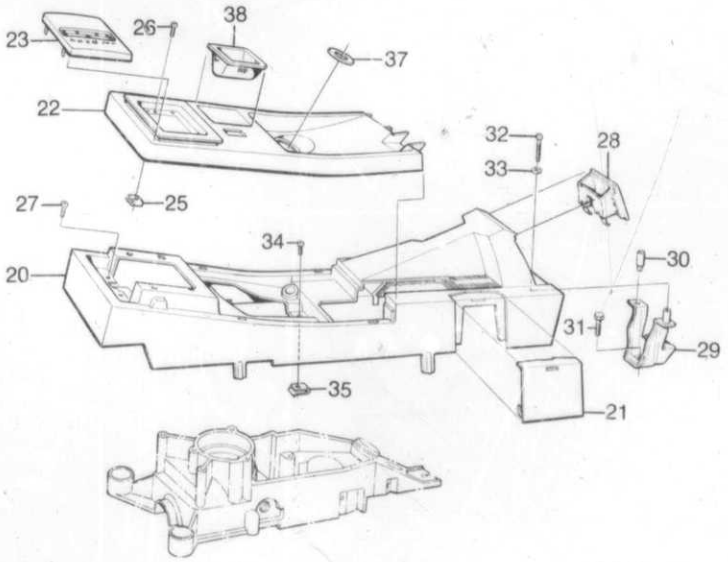


F0836 - 900

| 0540 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 20 | 94 93 842 | | | 1 | Lower section | Underdel | 6 |
| 0030 | 20 | 98 28 435 | | 15) | 1 | Lower section | Underdel | 6 |
| 0050 | 20 | 98 35 042 | | ME | 1 | Lower section | Underdel | 6 |
| 0070 | 20 | 98 35 059 | | 15) ME | 1 | Lower section | Underdel | 6 |
| 0090 | 20 | 98 78 463 | | 1987-,60) | 1 | Lower section | Underdel | 6 |
| 0110 | 20 | 98 23 519 | | | 1 | Lower section | Underdel | 6 |
| 0120 | | | | | | CV with | CV med | |
| 0121 | | | | | | theft alarm | stöldlarm | |
| 0130 | 21 | 97 06 805 | | | 1 | ₁Cover | ₁Täcklock | 6 |
| 0140 | 22 | 98 70 106 | | C | 1 | Cover | Lock | 6 |
| 0150 | 22 | 98 70 114 | | I | 1 | Cover | Lock | 6 |
| 0160 | 22 | 98 70 080 | | C, A | 1 | Cover | Lock | 6 |
| 0170 | 22 | 98 70 098 | | I, A | 1 | Cover | Lock | 6 |
| 0180 | 23 | 94 93 750 | | A | 1 | Indicator cover | Indikatorkåpa | |
| 0190 | 25 | 79 68 001 | | | 2 | Clip nut | Clipsmutter | 5 |
| 0200 | 26 | 79 22 362 | | | 2 | Screw | Skruv | 5 |
| 0210 | 27 | 79 34 318 | | | 2 | Screw | Skruv | 5 |
| 0220 | 28 | 94 93 800 | | | 1 | Ashtray | Askkopp | 6 |
| 0230 | 29 | 97 27 496 | | -1987 | 1 | Bracket | Konsol | 6 |
| 0235 | 29 | 96 85 520 | | 1988- | 1 | Bracket | Konsol | 6 |
| 0240 | 30 | 97 27 504 | | | 2 | Nut | Mutter | 3 |
| 0250 | 31 | *82 67 205* | | NLS - USE 7972466 | 1 | Screw | Skruv | 5 |
| 0260 | 32 | 79 73 647 | | -1988 | 2 | Screw | Skruv | 5 |
| 0265 | 32 | 79 75 337 | | 1989-500) | 2 | Screw | Skruv | 5 |
| 0270 | 33 | 79 74 249 | | -1988 | 2 | Washer | Bricka | 5 |
| 0271 | 34 | 79 22 362 | | -1988 | 1 | Screw | Skruv | 5 |
| 0272 | 34 | *79 22 289* | | 500) 1989- NLS - USE 7965684 | 1 | Screw | Skruv | 5 |
| 0272 | | | | | | | | |
| 0275 | 35 | 79 68 001 | | -1988 | 1 | Clip nut | Clipsmutter | 5 |
| 0277 | 35 | 79 72 730 | | 500) 1989- | 1 | Clip nut | Clipsmutter | 3 |
| 0280 | 37 | 97 32 249 | | | 1 | Light guide | Ljusledare | 5 |
| 0290 | 38 | 97 36 273 | | | 1 | Coin box | Myntfack | 6 |

15. For electrical window regulator  För elektrisk fönsterhiss
60. For cars with automatic belts  För bilar med passivt bälte
500. Also valid for SE 1988B.  Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 2-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-A20

## *Insulation*

## *Isolering*

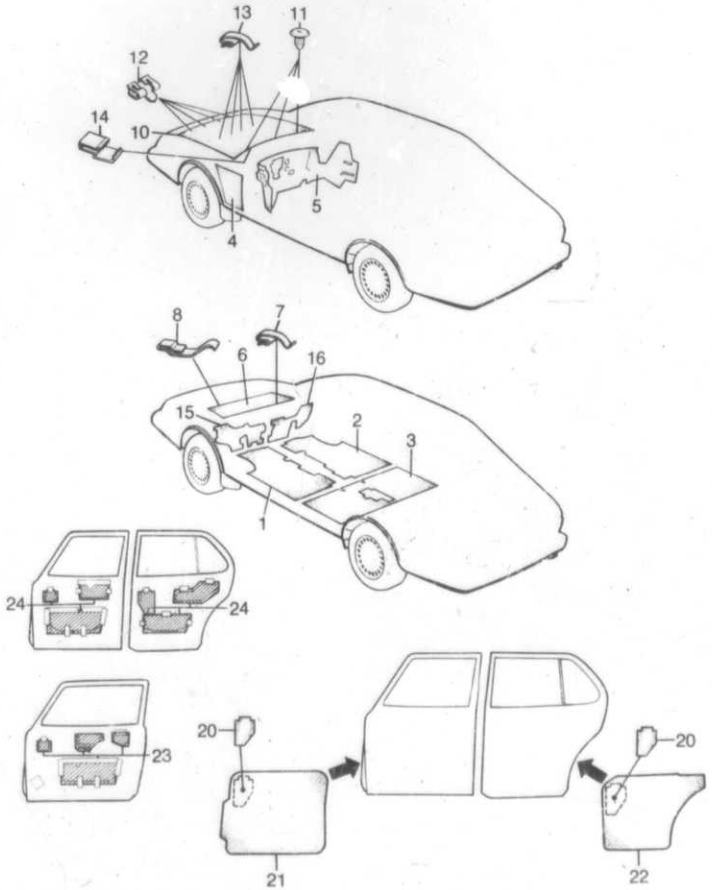


F5574 90086

| 1200 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 98 49 811 | | LH | 1 | Insulation | Isolering | 6 |
| 0020 | 1 | *98 37 170* | | -1986, LH, B202 NLS - USE 9686023 | 1 | Insulation | Isolering | 6 |
| 0030 | 1 | 96 86 023 | | 1987-, LH, B202 | 1 | Insulation | Isolering | 6 |
| 0040 | 2 | 98 49 829 | | RH | 1 | Insulation | Isolering | 6 |
| 0050 | 2 | *98 37 188* | | -1986, RH, B202 NLS - USE 9686031 | 1 | Insulation | Isolering | 6 |
| 0060 | 2 | 96 86 031 | | 1987-, RH, B202 | 1 | Insulation | Isolering | 6 |
| 0070 | 3 | *97 23 701* | | -1986, I NLS - USE 9674847 | 1 | Insulation | Isolering | |
| 0080 | 3 | 96 74 847 | | 1987-, I | 1 | Insulation | Isolering | 6 |
| 0090 | 4 | 94 49 877 | | LH, I- | 1 | Insulation | Isolering | 6 |
| 0100 | 4 | 94 49 885 | | 77), RH, I | 1 | Insulation | Isolering | 6 |
| 0110 | 4 | 96 85 694 | | 78), RH, I | 1 | Insulation | Isolering | 6 |
| 0120 | 5 | *98 33 856* | | 210), B202 NLS - USE 4257788 | 1 | Insulation | Isolering | 6 |
| 0130 | 5 | 95 41 657 | | 211)-1988 | 1 | Insulation | Isolering | 6 |
| 0140 | 5 | *40 42 032* | | 500), 1989- NLS - USE 4257788 | 1 | Insulation | Isolering | 6 |
| 0150 | 6 | 97 03 414 | | | 1 | Bonnet insulation | Huvisolering | 3 |
| 0160 | 7 | 97 06 573 | | | 4 | Clip | Clips | 5 |
| 0170 | 8 | 98 57 921 | | | 4 | Clamp | Klammer | 6 |
| 0180 | 10 | *95 34 439* | | 257), B201 NLS - USE 4058061 | 1 | Bonnet insulation | Huvisolering | 3 |
| 0190 | 10 | *98 33 849* | | -1986, B202 NLS - USE 4058061 | 1 | Bonnet insulation | Huvisolering | 3 |
| 0200 | 10 | *96 17 085* | | 1987-1988, B202 NLS - USE 405806 1 | 1 | Bonnet insulation | Huvisolering | 3 |
| 0210 | 10 | *95 34 439* | | 1989-,262,500), B202 NLS - USE 4058061 | 1 | Bonnet insulation | Huvisolering | 3 |
| 0220 | 10 | *40 42 735* | | 263,500), B202 NLS - USE 4058061 | 1 | Bonnet insulation | Huvisolering | 3 |
| 0230 | 11 | 97 60 497 | | 257), B201 | 3 | Clamp | Klämma | 6 |
| 0240 | 11 | 97 60 497 | | B202 | 3 | Clamp | Klämma | 6 |
| 0250 | 12 | 97 22 075 | | 257), B201 | 4 | Clamp | Klämma | 5 |
| 0260 | 12 | 97 22 075 | | B202 | 4 | Clamp | Klämma | 5 |
| 0270 | 13 | 97 06 573 | | 257), B201 | 4 | Clip | Clips | 5 |
| 0280 | 13 | 97 06 573 | | B202 | 4 | Clip | Clips | 5 |
| 0290 | 14 | 94 92 885 | | 257), B201 | 1 | Clip | Clips | 5 |
| 0300 | 14 | 94 92 885 | | 1987-, B202 | 1 | Clip | Clips | 5 |
| 0310 | 15 | *98 29 136* | | 61), LH, I NLS - USE 4053294 | 1 | Insulation | Isolering | 6 |
| 0320 | 15 | *96 15 188* | | 62,91), LH, I NLS - USE 4053294 | 1 | Insulation | Isolering | 6 |
| 0330 | 15 | 96 76 248 | | 92), LH, I | 1 | Insulation | Isolering | 6 |
| 0340 | 16 | *97 41 612* | | 61), RH, I NLS - USE 9688672 | 1 | Insulation | Isolering | 6 |
| 0350 | 16 | *96 15 196* | | 62,91), RH, I NLS - USE 9688672 | 1 | Insulation | Isolering | 6 |
| 0360 | 16 | 96 76 255 | | 92)-1987, RH, I | 1 | Insulation | Isolering | 6 |
| 0370 | 16 | 96 88 672 | | 1988-, RH | 1 | Insulation | Isolering | 6 |

61. Ch. -G2015934, -G3013349, -G7017163
62. Ch. G2015935-, G3013350-, G7017164-
77. Ch. -H2008155, -H7009138
78. Ch. H2008156-, H7009139-
91. Ch. -H2005503, -H7005014
92. Ch. H2005504-, H7005015-
210. Ch -J3020691, -J7029442
211. Ch J3020692-, J7029443-
257. Ch J3023333-, J7031180-
262. Ch. -K3010658, -K7013549
263. Ch. K3010659-, K7013550-
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-A22

## *Insulation*
## *Isolering*

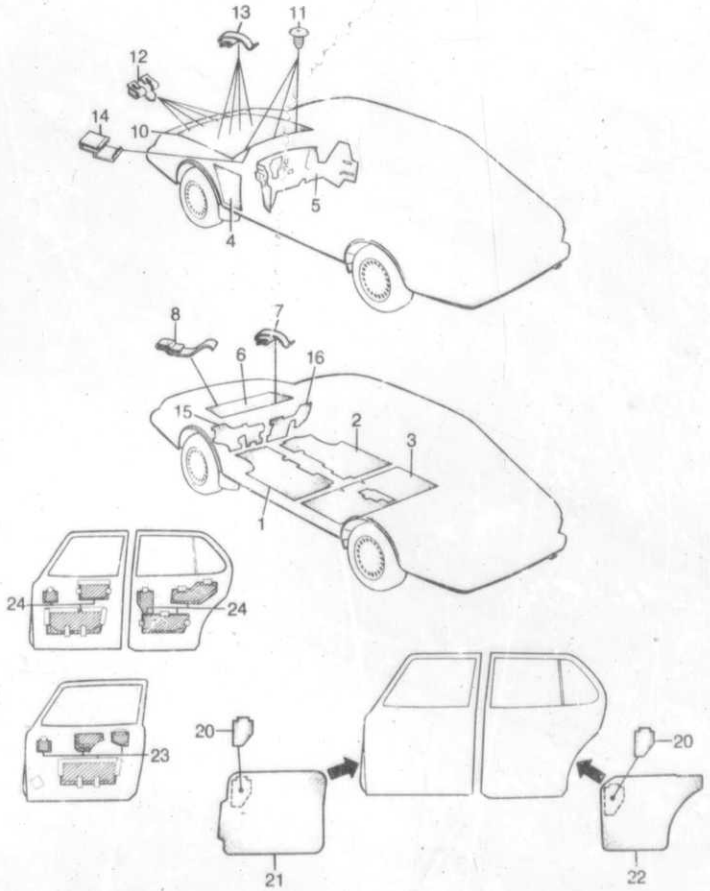


F5574 90086

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 20 | 92 35 342 | | 42), 4SN, 5CK | 4 | Water drainage | Vattenavledare | 5 |
| 21 | *98 14 344* | | 1989-500,272)LH,2SN 3CK NLS - USE 4048997 | 1 | Water drainage | Vattenavledare | 5 |
| 21 | 40 48 997 | | 273), LH, 2SN 3CK | 1 | Water drainage | Vattenavledare | 5 |
| 21 | *98 14 351* | | 1989-500,272)RH,2SN 3CK NLS - USE 4049003 | 1 | Water drainage | Vattenavledare | 5 |
| 21 | 40 49 003 | | 273), RH,2SN 3CK | 1 | Water drainage | Vattenavledare | 5 |
| 21 | *98 14 302* | | 42,79), LH, 4SN, 5CK NLS - USE 4049011 | 1 | Water drainage | Vattenavledare | 5 |
| 21 | 96 17 374 | | 80,272), LH, 4SN, 5CK | 1 | Water drainage | Vattenavledare | 5 |
| 21 | 40 49 01 | | 273), LH, 4SN, 5CK | 1 | Water drainage | Vattenavledare | 5 |
| 21 | *98 14 310* | | 42,79), RH, 4SN, 5CK NLS - USE 4049029 | 1 | Water drainage | Vattenavledare | 5 |
| 21 | 96 17 366 | | 80,272), RH, 4SN, 5CK | 1 | Water drainage | Vattenavledare | 5 |
| 21 | 40 49 029 | | 273), RH, 4SN, 5CK | 1 | Water drainage | Vattenavledare | 5 |
| 21 | *98 14 344* | | 79), LH, CV NLS - USE 4048997 | 1 | Water drainage | Vattenavledare | 5 |
| 21 | *96 17 382* | | 80,272), LH, CV NLS - USE 4048997 | 1 | Water drainage | Vattenavledare | 5 |
| 21 | 40 48 997 | | 273), LH, CV | 1 | Water drainage | Vattenavledare | 5 |
| 21 | *96 14 351* | | 79), RH, CV NLS - USE 4049003 | 1 | Water drainage | Vattenavledare | 5 |
| 21 | *96 17 390* | | 80,272), RH, CV NLS - USE 4049003 | 1 | Water drainage | Vattenavledare | 5 |
| 21 | 40 49 003 | | 273), RH, CV | 1 | Water drainage | Vattenavledare | 5 |
| 22 | *98 14 328* | | 42,79), LH, 4SN, 5CK NLS - USE 9617358 | 1 | Water drainage | Vattenavledare | 5 |
| 22 | 96 17 358 | | 80), LH, 4SN, 5CK | 1 | Water drainage | Vattenavledare | 5 |
| 22 | *98 14 336* | | 42,79), RH, 4SN, 5CK NLS - USE 9617341 | 1 | Water drainage | Vattenavledare | 5 |
| 22 | 96 17 341 | | 80), RH, 4SN, 5CK | 1 | Water drainage | Vattenavledare | 5 |
| 23 | *97 46 272* | | -1988, 2SN, 3CK<br>See page 8B-223, 6-J08 | 1 | Water drainage kit | Vattenavledarsats | 5 |
| 24 | 97 46 280 | | NLS - USE 4049003<br>41), 4SN, 5CK<br>See page 8B-223, 6-J08 | 1 | Water drainage kit | Vattenavledarsats | 5 |
| | 79 93 462 | | | X | Tape<br>for water drainage<br>1 coil = 2800 mm | Tape<br>för vattenavledare<br>1 rulle = 2800 mm | 5 |

41. Ch. -G3001848, -G2002124, -G7006825.
42. Ch. G3001849-, G2002125-, G7006826-.
79. Ch. -G3020825
80. Ch. G3020826-
272. Ch. -K3008212, -K7010386
273. Ch. K3008213-, K7010387-
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-A24

## Sound insulation
## Ljudisolering

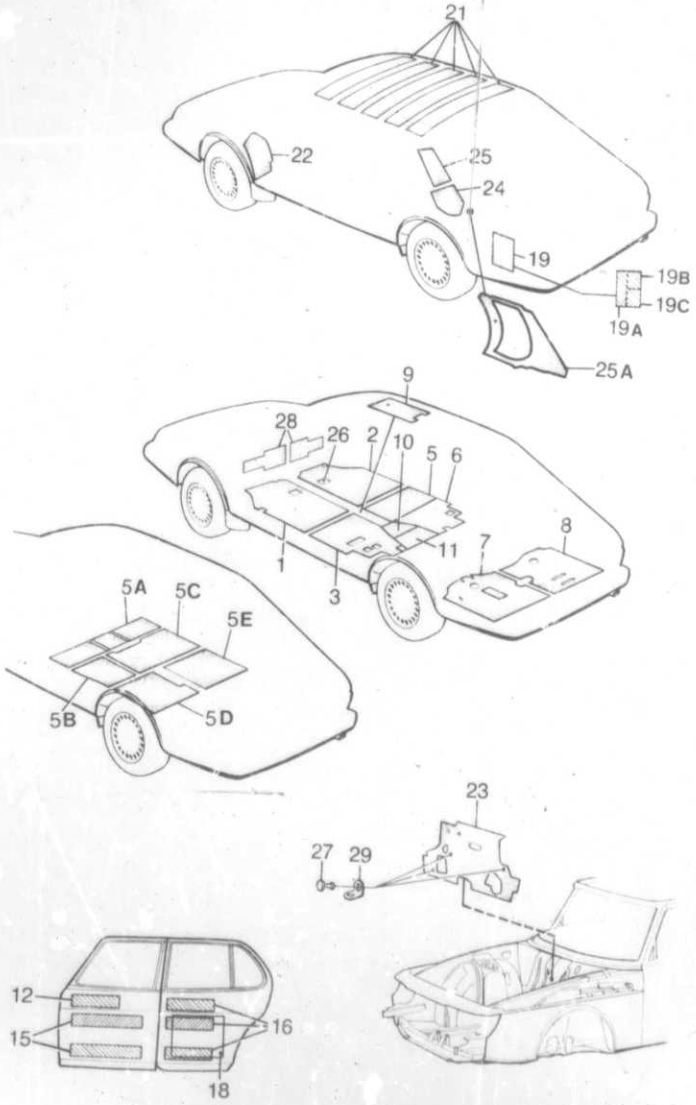


| 1250 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 94 38 193 | | LH | 1 | Insulating mat | Isoleringsmatta | 6 |
| 0040 | 2 | 94 38 201 | | RH | 1 | Insulating mat | Isoleringsmatta | 6 |
| 0120 | 3 | *84 90 609* | | -1986, LH NLS - USE 9540782 | 1 | Insulating mat | Isoleringsmatta | 6 |
| 0140 | 3 | 96 85 702 | | 1987, LH | 1 | Insulating mat | Isoleringsmatta | 6 |
| 0155 | 3 | *95 32 243* | | 1988, LH NLS - USE 9540782 | 1 | Insulating mat | Isoleringsmatta | 6 |
| 0158 | 3 | 95 40 782 | | 500), 1989-, LH | 1 | Insulating mat | Isoleringsmatta | 6 |
| 0160 | 5 | 84 90 617 | | -1987, RH | 1 | Insulating mat | Isoleringsmatta | 6 |
| 0175 | 5 | 95 32 250 | | 1988, RH | 1 | Insulating mat | Isoleringsmatta | 6 |
| 0178 | 5 | 95 40 790 | | 500), 1989-, RH | 1 | Insulating mat | Isoleringsmatta | 6 |
| 0220 | 5A | 98 04 691 | | 4SN CD | 1 | Insulating mat | Isoleringsmatta | 7 |
| 0240 | 5B | 98 04 139 | | LH, 4SN, CD | 1 | Insulating mat | Isoleringsmatta | 7 |
| 0260 | 5C | 98 04 147 | | RH, 4SN, CD | 1 | Insulating mat | Isoleringsmatta | 7 |
| 0280 | 5D | 98 04 113 | | LH, 4SN, CD | 1 | Insulating mat | Isoleringsmatta | 7 |
| 0300 | 5E | 98 04 121 | | RH, CD | 1 | Insulating mat | Isoleringsmatta | 7 |
| 0320 | 7 | *94 77 209* | | -1986, LH NLS - USE 9681339 | 1 | Insulating mat | Isoleringsmatta | 6 |
| 0335 | 7 | 96 81 339 | | 1987-, LH | 1 | Insulating mat | Isoleringsmatta | 6 |
| 0340 | 8 | *94 77 217* | | -1986, RH NLS - USE 4170049 | 1 | Insulating mat | Isoleringsmatta | 6 |
| 0352 | 8 | *96 81 347* | | 1987-, RH NLS - USE 4170049 | 1 | Insulating mat | Isoleringsmatta | 6 |
| 0355 | 9 | *98 50 009* | | 252)-1988 NLS - USE 9540774 | 1 | Heat shield | Värmesköld | 3 |
| 0357 | 9 | 95 40 774 | | 252,500), 1989- | 1 | Heat shield | Värmesköld | 3 |
| 0360 | 10 | 84 90 625 | | | 1 | Insulating mat | Isoleringsmatta | 6 |
| 0380 | 11 | 84 90 641 | | | 1 | Insulating mat | Isoleringsmatta | 6 |
| 0400 | 12 | 84 90 708 | | -1987 | 2 | Cardboard | Pappskiva | 5 |
| 0415 | 12 | 95 44 826 | | 1988- | 2 | Damper mat | Dämpmatta | 5 |
| 0460 | 15 | *84 90 716* | | -1987 NLS - USE 4055539 | 4 | Cardboard | Pappskiva | 5 |
| 0475 | 15 | 95 44 842 | | 1988- | 4 | Damper mat | Dämpmatta | 5 |
| 0480 | 16 | 84 90 708 | | 5CK | 6 | Cardboard | Pappskiva | 5 |
| 0510 | 18 | 84 38 400 | | 3CK | 2 | Cardboard | Pappskiva | 6 |
| 0520 | 19 | 84 61 063 | | | 2 | Cardboard | Pappskiva | 6 |
| 0540 | 19A | *94 35 694* | | CD NLS | 2 | Insulation | Isolering | 6 |
| 0560 | 19B | 94 92 257 | | CD | 2 | Insulation | Isolering | 6 |
| 0580 | 19C | *94 35 686* | | CD NLS | 2 | Insulation | Isolering | 6 |
| 0600 | 21 | 97 57 691 | | | 5 | Damper mat | Dämpmatta | 5 |
| 0610 | 21 | 97 57 691 | | SR | 1 | Damper mat | Dämpmatta | 5 |
| 0620 | 22 | 94 25 653 | | LH | 1 | Insulation | Isolering | 6 |
| 0640 | 22 | 94 25 661 | | RH | 1 | Insulation | Isolering | 6 |
| 0720 | 23 | *98 10 326* | | 264) NLS - USE 4045712 | 1 | Insulation | Isolering | 6 |
| 0735 | 23 | 40 45 712 | | 265) | 1 | Insulation | Isolering | 6 |
| 0830 | 24 | *84 28 211* | | LH, 3CK, 4SN NLS | 1 | Insulation | Isolering | 6 |
| 0840 | 24 | 84 28 237 | | RH, 3CK, 4SN | 1 | Insulation | Isolering | 6 |
| 0850 | 25 | *84 28 203* | | LH, 4SN NLS | 1 | Insulation | Isolering | 6 |
| 0860 | 25 | 84 28 229 | | RH, 4SN | 1 | Insulation | Isolering | 6 |
| 0870 | 25A | 98 04 170 | | LH, 4SN CD | 1 | Insulation | Isolering | 7 |
| 0890 | 25A | 98 04 188 | | RH, 4SN CD | 1 | Insulation | Isolering | 7 |
| 0910 | 26 | 84 90 575 | | | 2 | Insulating mat | Isoleringsmatta | 6 |
| 0920 | 27 | 94 43 920 | | | 7 | Rivet | Nit | 5 |
| 0930 | 28 | 94 50 974 | | | 2 | Foam plastic | Skumplast | 6 |
| 1000 | 29 | 89 40 652 | | | 2 | Brace | Bygel | 5 |

252. With catalytic converter. Med katalytisk reaktor.
264. Ch -K3008524 -K7030342
265. Ch K3008525-, K7030343-
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

8B GROUP INDEX

| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets | 6-J08 |

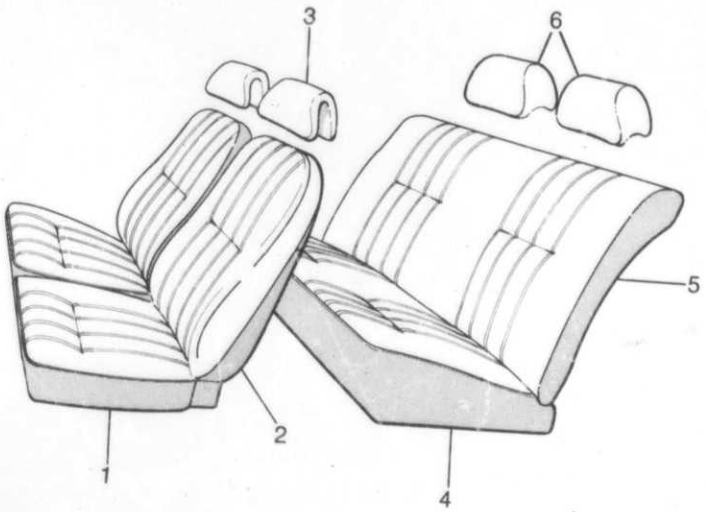


F2537 - 900

Upholstery
# 6-B02
## *Covers 1986*
## *Viktoria pattern*

Klädsel
## *Klädselpåsar 1986*
## *Viktoriamönster*

| 1270 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | TRIM COLOUR A11 | | | | |
| 0020 | 1 | 98 43 632 | | 590) | 2 | Seat cover | Sitspåse | 6 |
| 0030 | 2 | 98 43 673 | | 590) | 2 | Back cover | Ryggpåse | 6 |
| 0050 | 3 | 98 43 715 | | 590) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0070 | 4 | 98 44 358 | | 590), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0080 | 4 | 98 44 390 | | 590), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0090 | 5 | 98 44 432 | | 590) | 1 | Back cover | Ryggpåse | 6 |
| 0100 | 6 | 95 33 910 | | 590) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0120 | | | | TRIM COLOUR B11 | | | | |
| 0130 | 1 | 98 66 674 | | 600) | 2 | Seat cover | Sitspåse | 6 |
| 0140 | 2 | 98 66 682 | | 600) | 2 | Back cover | Ryggpåse | 6 |
| 0160 | 3 | 98 43 707 | | 600) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0180 | 4 | 98 72 490 | | 600), 2SN, 3CK | 1 | Seat cover | Sitspåse | |
| 0190 | 4 | 98 72 524 | | 600), 4SN, 5CK | 1 | Seat cover | Sitspåse | |
| 0200 | 5 | 98 72 540 | | 600) | 1 | Back cover | Ryggpåse | |
| 0210 | 6 | 96 81 198 | | 600) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0230 | | | | TRIM COLOUR C11 | | | | |
| 0240 | 1 | 98 65 791 | | 560) | 2 | Seat cover | Sitspåse | 6 |
| 0250 | 2 | 98 66 617 | | 560) | 2 | Back cover | Ryggpåse | 6 |
| 0270 | 3 | 98 67 235 | | 560) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0290 | 4 | 98 72 508 | | 560), 2SN, 3CK | 1 | Seat cover | Sitspåse | |
| 0300 | 4 | 98 72 532 | | 560), 4SN, 5CK | 1 | Seat cover | Sitspåse | |
| 0310 | 5 | 98 72 557 | | 560) | 1 | Back cover | Ryggpåse | |
| 0320 | 6 | 95 33 902 | | 560) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0340 | | | | TRIM COLOUR D11 | | | | |
| 0350 | 1 | 98 43 640 | | 580) | 2 | Seat cover | Sitspåse | 6 |
| 0360 | 2 | 98 43 681 | | 580) | 2 | Back cover | Ryggpåse | 6 |
| 0380 | 3 | 98 43 723 | | 580) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0400 | 4 | 98 44 366 | | 580), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0410 | 4 | 98 44 408 | | 580), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0420 | 5 | 98 44 440 | | 580) | 1 | Back cover | Ryggpåse | 6 |
| 0430 | 6 | *96 81 222* | | 580) NLS | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0440 | | | | | | | | |
| 1020 | | 98 34 342 | | 590), TRIM COLOUR A11 | X | Cloth | Tyg | 6 |
| 1030 | | *98 27 254* | | 590) TRIM COLOUR A22,A23 NLS | X | Cloth | Tyg | 6 |
| 1030 | | | | | | | | |
| 1035 | | | | | | | | |
| 1040 | | *98 34 318* | | 600), TRIM COLOUR B11 NLS | X | Cloth | Tyg | 6 |
| 1040 | | | | | | | | |
| 1050 | | 98 51 262 | | 600) TRIM COLOUR B22,B23 | X | Cloth | Tyg | 6 |
| 1055 | | | | | | | | |
| 1060 | | 98 50 900 | | 560), TRIM COLOUR C11 | X | Cloth | Tyg | 6 |
| 1070 | | *97 40 838* | | 560) TRIM COLOUR C22,C23 NLS | X | Cloth | Tyg | 6 |
| 1070 | | | | | | | | |
| 1075 | | | | | | | | |
| 1080 | | 98 34 375 | | 580), TRIM COLOUR D11 | X | Cloth | Tyg | 6 |
| 1095 | | 98 27 262 | | 580) TRIM COLOUR D22,D23 | X | Cloth | Tyg | 6 |
| 1100 | | | | | | | | |
| 1110 | | 98 51 031 | | 570), TRIM COLOUR E22,E23 | X | Cloth | Tyg | 6 |
| 1115 | | | | | | | | |
| 1120 | | 97 41 018 | | 590) | X | Coated fabric | Vävplast | 6 |
| 1140 | | 98 57 475 | | 600) | X | Coated fabric | Vävplast | 6 |
| 1160 | | 97 41 489 | | 560) | X | Coated fabric | Vävplast | 6 |
| 1180 | | 98 34 458 | | 580) | X | Coated fabric | Vävplast | 6 |
| 1190 | | 98 51 098 | | 570) | X | Coated fabric | Vävplast | 6 |
| 1200 | | | | | | | | |
| 1220 | | *97 08 561* | | 590) NLS | X | Piping | Kederlist | 6 |
| 1260 | | 98 57 624 | | 600) | X | Piping | Kederlist | 6 |

560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |


Upholstery

# 6-B04

## *Covers 1986*
## *Viktoria pattern*

Klädsel

## *Klädselpåsar 1986*
## *Viktoriamönster*

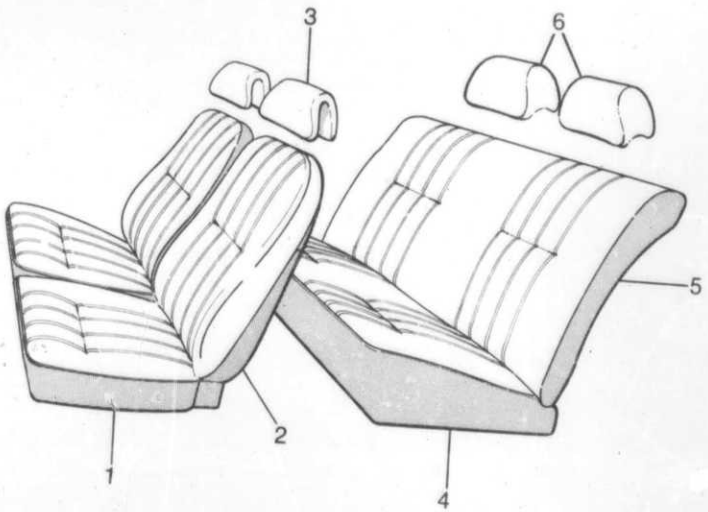


F2537 - 900

| 1270 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1300 | *73 77 344* | | 560) NLS | X | Piping | Kederlist | 6 |
| 1340 | 97 41 042 | | 580) | X | Piping | Kederlist | 6 |
| 1350 | 98 51 429 | | 570) | X | Piping | Kederlist | 6 |

560. Red Röd
570. Grey Grå
580. Blue Blå




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

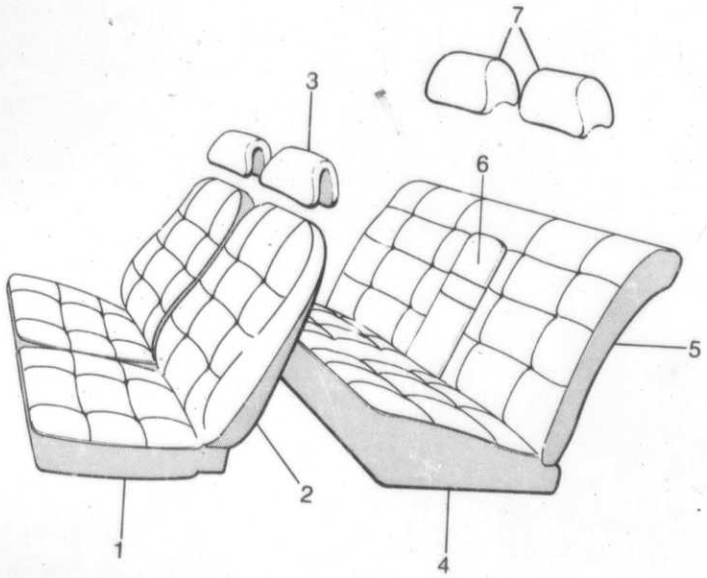


F2538 - 900

| 1280 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | TRIM COLOUR A22 | | | | |
| 0020 | 1 | 98 29 763 | | 590) | 2 | Seat cover | Sitspåse | |
| 0030 | 2 | 76 33 746 | | 590), (9829797) | 2 | Back cover | Ryggpåse | 6 |
| 0050 | 3 | 98 29 821 | | 590) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0070 | 4 | 98 30 118 | | 590), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0080 | 4 | 98 30 142 | | 590), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0090 | 5 | 98 30 175 | | 590) | 1 | Back cover | Ryggpåse | 6 |
| 0110 | 6 | 98 31 595 | | 590) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0120 | 7 | *95 79 525* | | 590) NLS - USE 9699562 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0140 | | | | TRIM COLOUR B22 | | | | |
| 0150 | 1 | 98 65 874 | | 600) | 2 | Seat cover | Sitspåse | 6 |
| 0160 | 2 | 98 66 765 | | 600) | 2 | Back cover | Ryggpåse | 6 |
| 0180 | 3 | 98 67 243 | | 600) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0200 | 4 | 98 72 573 | | 600), 2SN, 3CK | 1 | Seat cover | Sitspåse | |
| 0210 | 4 | *98 72 615* | | 600), 4SN, 5CK NLS | 1 | Seat cover | Sitspåse | |
| 0220 | 5 | 98 72 656 | | 600) | 1 | Back cover | Ryggpåse | |
| 0240 | 6 | 98 73 092 | | 600) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0245 | 7 | *95 79 509* | | 600) NLS - USE 9699570 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0270 | | | | TRIM COLOUR C22 | | | | |
| 0280 | 1 | 98 29 755 | | 560) | 2 | Seat cover | Sitspåse | |
| 0290 | 2 | 76 33 738 | | 560), (9829789) | 2 | Back cover | Ryggpåse | 6 |
| 0310 | 3 | 98 29 813 | | 560) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0330 | 4 | 98 30 100 | | 560), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0340 | 4 | 98 30 134 | | 560), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0350 | 5 | 98 30 167 | | 560) | 1 | Back cover | Ryggpåse | 6 |
| 0370 | 6 | 98 31 587 | | 560) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0380 | 7 | *95 79 517* | | 560) NLS - USE 9699588 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0390 | | | | TRIM COLOUR D22 | | | | |
| 0400 | 1 | 98 44 861 | | 580) | 2 | Seat cover | Sitspåse | |
| 0420 | 2 | 98 44 887 | | 580) | 2 | Back cover | Ryggpåse | |
| 0440 | 3 | 98 29 839 | | 580) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0460 | 4 | 98 45 041 | | 580), 2SN, 3CK | 1 | Seat cover | Sitspåse | |
| 0470 | 4 | 98 45 066 | | 580), 4SN, 5CK | 1 | Seat cover | Sitspåse, | |
| 0480 | 5 | 98 45 082 | | 580) | 1 | Back cover | Ryggpåse | |
| 0500 | 6 | 98 45 108 | | 580) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0505 | 7 | *98 09 575* | | 580) NLS | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0520 | | | | TRIM COLOUR E22 | | | | |
| 0530 | 1 | 98 65 825 | | 570) | 2 | Seat cover | Sitspåse | 6 |
| 0550 | 2 | 98 66 773 | | 570) | 2 | Back cover | Ryggpåse | 6 |
| 0570 | 3 | 98 67 250 | | 570) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0590 | 4 | 98 72 581 | | 570), 2SN, 3CK | 1 | Seat cover | Sitspåse | |
| 0600 | 4 | 98 72 623 | | 570), 4SN, 5CK | 1 | Seat cover | Sitspåse | |
| 0610 | 5 | 98 72 664 | | 570) | 1 | Back cover | Ryggpåse | |
| 0630 | 6 | 98 73 100 | | 570) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0635 | 7 | *95 79 533* | | 570) NLS - USE 9699596 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0650 | | | | | | | | |
| 1020 | | | | See page 8B-025, 6-B02 | | CLOTH, COATED FABRIC AND PLASTIC STRIPS FOR UPHOLSTERY COVER | TYG, VÄVPLAST OCH KEDERLISTER FÖR KLÄDSELPÅSAR | |
| 1040 | | | | | | | | |
| 1060 | | | | | | | | |
| 1080 | | | | | | | | |

560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

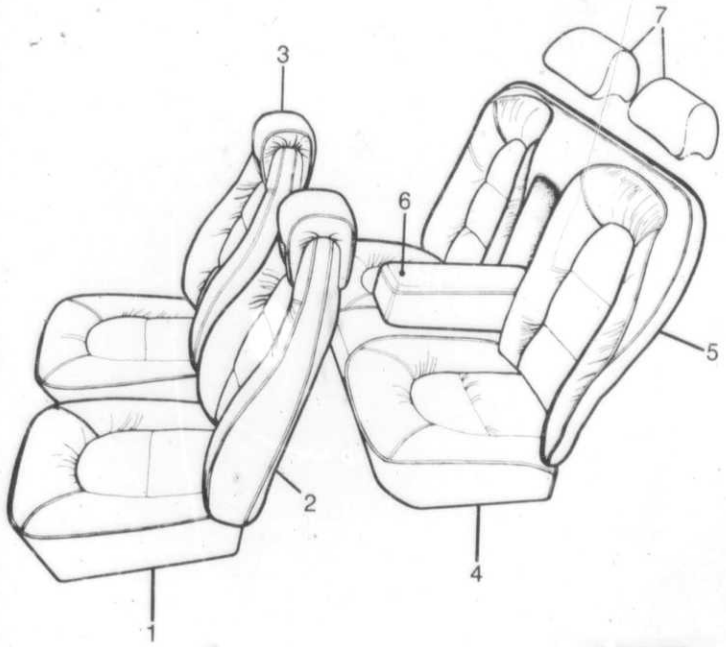


R 7885–900

# 6–B08

Upholstery
## Covers 1986
## Contour design

Klädsel
## Klädselpåsar 1986
## Contour design

| 1290 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | $ L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | TRIM COLOUR A23 | | | | |
| 0015 | 1 | 98 07 363 | | 590) | 2 | Seat cover | Sitspåse | 6 |
| 0020 | 1 | 98 16 505 | | 590), CD | 2 | Seat cover | Sitspåse | 7 |
| 0030 | 2 | 76 33 779 | | 590), (9807405) | 2 | Back cover | Ryggpåse | 6 |
| 0050 | 3 | 98 07 447 | | 590) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0070 | 4 | 98 07 645 | | 590), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0080 | 4 | 98 07 728 | | 590), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0085 | 4 | 98 17 867 | | 590), CD | 1 | Seat cover | Sitspåse | 7 |
| 0090 | 5 | 98 07 769 | | 590) | 1 | Back cover | Ryggpåse | 6 |
| 0110 | 6 | 98 31 595 | | 590) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0120 | 7 | *95 79 525* | | 590) NLS - USE 9699562 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0135 | | | | TRIM COLOUR B23 | | | | |
| 0140 | 1 | 98 66 500 | | 600) | 2 | Seat cover | Sitspåse | 6 |
| 0150 | 1 | 98 66 591 | | 600), CD | 2 | Seat cover | Sitspåse | 6 |
| 0160 | 2 | 98 66 898 | | 600) | 2 | Back cover | Ryggpåse | 6 |
| 0180 | 3 | 98 67 268 | | 600) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0200 | 4 | 98 72 714 | | 600), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0210 | 4 | 98 72 854 | | 600), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0215 | 4 | 98 73 118 | | 600), CD | 1 | Seat cover | Sitspåse | 6 |
| 0220 | 5 | 98 72 953 | | 600) | 1 | Back cover | Ryggpåse | 6 |
| 0240 | 6 | 98 73 092 | | 600) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0245 | 7 | *95 79 509* | | 600) NLS - USE 9699570 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0260 | | | | TRIM COLOUR C23 | | | | |
| 0270 | 1 | 98 07 355 | | 560) | 2 | Seat cover | Sitspåse | 6 |
| 0280 | 1 | 98 16 497 | | 560), CD | 2 | Seat cover | Sitspåse | 7 |
| 0290 | 2 | 76 33 761 | | 560), (9807397) | 2 | Back cover | Ryggpåse | 6 |
| 0310 | 3 | 98 07 439 | | 560) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0330 | 4 | 98 07 637 | | 560), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0340 | 4 | 98 07 710 | | 560), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0345 | 4 | 98 17 859 | | 560), CD | 1 | Seat cover | Sitspåse | 7 |
| 0350 | 5 | 98 07 751 | | 560) | 1 | Back cover | Ryggpåse | 6 |
| 0370 | 6 | 98 31 587 | | 560) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0380 | 7 | *95 79 517* | | 560) NLS - USE 9699588 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0395 | | | | TRIM COLOUR D23 | | | | |
| 0400 | 1 | 98 45 751 | | 580) | 2 | Seat cover | Sitspåse | 6 |
| 0410 | 1 | 98 16 513 | | 580), CD | 2 | Seat cover | Sitspåse | 7 |
| 0420 | 2 | *76 33 787* | | 580), (9807413) NLS - USE 9681693 | 2 | Back cover | Ryggpåse | 6 |
| 0440 | 3 | 98 07 454 | | 580) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0460 | 4 | 98 46 080 | | 580), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0470 | 4 | 98 46 106 | | 580), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0475 | 4 | 98 21 703 | | 580), CD | 1 | Seat cover | Sitspåse | 6 |
| 0480 | 5 | 98 46 122 | | 580) | 1 | Back cover | Ryggpåse | 6 |
| 0500 | 6 | 98 45 108 | | 580) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0505 | 7 | *98 09 575* | | 580) NLS | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0520 | | | | TRIM COLOUR E23 | | | | |
| 0530 | 1 | 98 65 908 | | 570) | 2 | Seat cover | Sitspåse | 6 |
| 0540 | 1 | 98 65 999 | | 570), CD | 2 | Seat cover | Sitspåse | 6 |
| 0550 | 2 | 98 66 906 | | 570) | 2 | Back cover | Ryggpåse | 6 |
| 0570 | 3 | 98 67 276 | | 570) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0590 | 4 | 98 72 722 | | 570), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0600 | 4 | 98 72 862 | | 570), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0605 | 4 | 98 73 126 | | 570), CD | 1 | Seat cover | Sitspåse | 6 |
| 0610 | 5 | 98 72 961 | | 570) | 1 | Back cover | Ryggpåse | 6 |
| 0630 | 6 | 98 73 100 | | 570) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0640 | 7 | *95 79 533* | | 570) NLS - USE 9699596 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0650 | | | | | | | | |

560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

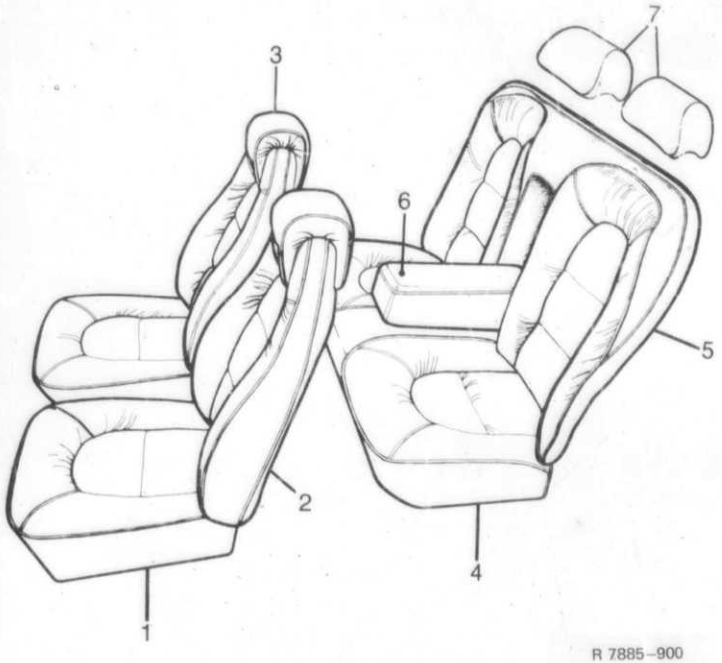


R 7885–900

Upholstery

# 6-B10

## *Covers 1986*
## *Contour design*

Klädsel

## *Klädselpåsar 1986*
## *Contour design*

| 1290 | Pos | Part No/Art.nr | K S | Notes/Anmärkningar | Qty Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0800 | | | | TRIM COLOUR A33 | | | | |
| 0810 | 1 | 98 35 703 | | 590) | 2 | Seat cover | Sitspåse | 6 |
| 0820 | 2 | 98 35 711 | | 590) | 2 | Back cover | Ryggpåse | 6 |
| 0840 | 3 | *98 35 646* | | 590) NLS - USE 9883976 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0860 | 4 | 97 27 827 | | 590), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0870 | 4 | 98 35 729 | | 590), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0875 | 4 | 98 17 883 | | 590), CD | 1 | Seat cover | Sitspåse | 7 |
| 0880 | 5 | 98 35 752 | | 590) | 1 | Back cover | Ryggpåse | 6 |
| 0900 | 6 | 98 35 679 | | 590) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0905 | 7 | *95 79 558* | | 590) NLS - USE 9699513 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0920 | | | | TRIM COLOUR C33 | | | | |
| 0930 | 1 | 98 12 660 | | 560) | 2 | Seat cover | Sitspåse | 6 |
| 0950 | 2 | 98 40 257 | | 560) | 2 | Back cover | Ryggpåse | 6 |
| 0970 | 3 | 98 12 686 | | 560) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0990 | 4 | 98 12 694 | | 560), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 1000 | 4 | *98 12 744* | | 560), 4SN, 5CK NLS | 1 | Seat cover | Sitspåse | 6 |
| 1005 | 4 | 98 17 891 | | 560), CD | 1 | Seat cover | Sitspåse | 7 |
| 1010 | 5 | 98 43 574 | | 560) | 1 | Back cover | Ryggpåse | 6 |
| 1030 | 6 | 98 31 728 | | 560) | 1 | Arm rest cover | Armstödspåse | 6 |
| 1040 | 7 | *98 09 641* | | 560) NLS | 2 | Head restraint cover | Nackstödspåse | 6 |
| 1060 | | | | TRIM COLOUR E33 | | | | |
| 1070 | 1 | 98 66 351 | | 570) | 2 | Seat cover | Sitspåse | 6 |
| 1080 | 2 | 98 67 789 | | 570) | 2 | Back cover | Ryggpåse | 6 |
| 1100 | 3 | 98 67 284 | | 570) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 1110 | 3 | 98 84 230 | | 570), CV | 2 | Head restraint cover | Nackstödspåse | 6 |
| 1120 | 4 | 98 76 541 | | 570), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 1130 | 4 | *96 15 568* | | 570), CV NLS - USE 9884289 | 1 | Seat cover | Sitspåse | 6 |
| 1135 | 4 | 98 76 558 | | 570), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 1137 | 4 | 98 76 566 | | 570), CD | 1 | Seat cover | Sitspåse | 6 |
| 1140 | 5 | 98 76 574 | | 570) | 1 | Back cover | Ryggpåse | 6 |
| 1150 | 5 | *96 16 111* | | 570), CV NLS - USE 9884297 | 1 | Back cover | Ryggpåse | 6 |
| 1160 | 6 | 98 76 582 | | 570) | 1 | Arm rest cover | Armstödspåse | 6 |
| 1162 | 7 | *95 79 574* | | 570) NLS - USE 9699547 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 1165 | 7 | *98 84 321* | | 570), CV NLS - USE 9647462 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 1165 | | | | | | | | |
| 1170 | | | | | | | | |
| 1180 | | | | See page 8B-025, 6-B02 | | CLOTH, COATED FABRIC AND PLASTIC STRIPS FOR UPHOLSTERY COVER | TYG, VÄVPLAST OCH KEDERLISTER FÖR KLÄDSELPÅSAR | |
| 1190 | | | | | | | | |
| 1200 | | | | | | | | |
| 1210 | | | | | | | | |

560. Red Röd
570. Grey Grå
590. Yellow Gul



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-B12

Upholstery
## *Covers 1987*
## *Viktoria pattern*

Klädsel
## *Klädselpåsar 1987*
## *Viktoriamönster*

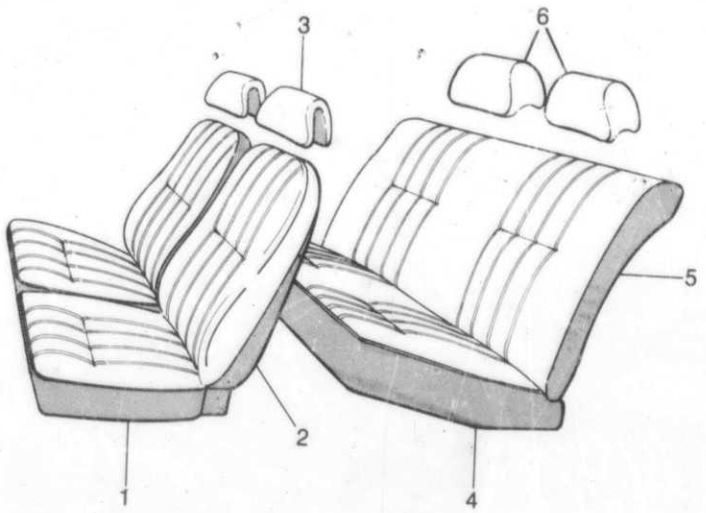


F2539 - 900

| 1360 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | TRIM COLOUR A11 | | | | |
| 0020 | 1 | 96 17 549 | | 590) | 2 | Seat cover | Sitspåse | 6 |
| 0060 | 2 | 96 17 598 | | 590) | 2 | Back cover | Ryggpåse | 6 |
| 0100 | 3 | 98 43 715 | | 590) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0140 | 4 | 96 11 831 | | 590), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0150 | 4 | 96 11 880 | | 590), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0180 | 5 | 96 12 136 | | 590) | 1 | Back cover | Ryggpåse | 6 |
| 0190 | 6 | 95 33 910 | | 590) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0230 | | | | TRIM COLOUR B11 | | | | |
| 0240 | 1 | 96 17 523 | | 600) | 2 | Seat cover | Sitspåse | 6 |
| 0280 | 2 | 96 17 572 | | 600) | 2 | Back cover | Ryggpåse | 6 |
| 0320 | 3 | 98 43 707 | | 600) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0360 | 4 | 96 11 815 | | 600), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0370 | 4 | 96 11 864 | | 600), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0400 | 5 | 96 12 110 | | 600) | 1 | Back cover | Ryggpåse | 6 |
| 0410 | 6 | 96 81 198 | | 600) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0450 | | | | TRIM COLOUR C11 | | | | |
| 0460 | 1 | 96 17 531 | | 560) | 2 | Seat cover | Sitspåse | 6 |
| 0500 | 2 | 96 17 580 | | 560) | 2 | Back cover | Ryggpåse | 6 |
| 0540 | 3 | 98 67 235 | | 560) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0580 | 4 | 96 11 823 | | 560), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0590 | 4 | 96 11 872 | | 560), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0620 | 5 | 96 12 128 | | 560) | 1 | Back cover | Ryggpåse | 6 |
| 0630 | 6 | 95 33 902 | | 560) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0670 | | | | TRIM COLOUR D11 | | | | |
| 0680 | 1 | 96 17 556 | | 580) | 2 | Seat cover | Sitspåse | 6 |
| 0720 | 2 | 96 17 596 | | 580) | 2 | Back cover | Ryggpåse | 6 |
| 0760 | 3 | 96 16 731 | | 580) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0800 | 4 | 96 11 849 | | 580), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0810 | 4 | 96 11 898 | | 580), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0840 | 5 | 96 12 144 | | 580) | 1 | Back cover | Ryggpåse | 6 |
| 0850 | 6 | *98 09 575* | | 580) NLS | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0880 | | | | | | | | |
| 1000 | | 98 34 342 | | 590),TRIM COLOUR A11,A12 | X | Cloth | Tyg | 6 |
| 1010 | | *98 27 254* | | 590), TRIM COLOUR A23 NLS | X | Cloth | Tyg | 6 |
| 1010 | | | | | | | | |
| 1015 | | | | | | | | |
| 1020 | | *98 34 318* | | 600),TRIM COLOUR B11,B12 NLS | X | Cloth | Tyg | 6 |
| 1020 | | | | | | | | |
| 1030 | | 98 51 262 | | 600), TRIM COLOUR B23 | X | Cloth | Tyg | 6 |
| 1035 | | | | | | | | |
| 1040 | | 98 50 900 | | 560),TRIM COLOUR C11,C12 | X | Cloth | Tyg | 6 |
| 1050 | | *97 40 838* | | 560), TRIM COLOUR C23 NLS | X | Cloth | Tyg | 6 |
| 1050 | | | | | | | | |
| 1055 | | | | | | | | |
| 1060 | | 98 63 291 | | 580),TRIM COLOUR D11,D12 | X | Cloth | Tyg | 6 |
| 1070 | | 98 27 262 | | 580), TRIM COLOUR D23 | X | Cloth | Tyg | 6 |
| 1080 | | | | | | | | |
| 1085 | | 98 78 158 | | 570), TRIM COLOUR E12 | X | Cloth | Tyg | 6 |
| 1090 | | 98 51 031 | | 570), TRIM COLOUR E23 | X | Cloth | Tyg | 6 |
| 1095 | | | | | | | | |
| 1100 | | 97 41 018 | | 590) | X | Coated fabric | Vävplast | 6 |
| 1120 | | 98 57 475 | | 600) | X | Coated fabric | Vävplast | 6 |
| 1140 | | 97 41 489 | | 560) | X | Coated fabric | Vävplast | 6 |
| 1180 | | 98 34 458 | | 580) | X | Coated fabric | Vävplast | 6 |
| 1190 | | 98 51 098 | | 570) | X | Coated fabric | Vävplast | 6 |
| 1200 | | | | | | | | |
| 1220 | | 97 28 676 | | 590) | X | Piping | Kederlist | 6 |

560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

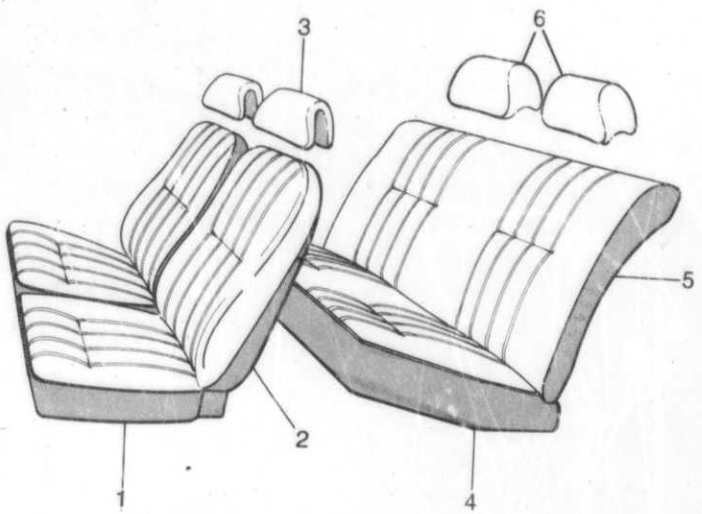


F2539 - 900

| 1360 | Pos | Part No/Art nr | K. S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 1260 | | 98 63 515 | | 600) | X | Piping | Kederlist | 6 |
| 1300 | | 98 07 975 | | 560) | X | Piping | Kederlist | 6 |
| 1340 | | 96 92 732 | | 580) | X | Piping | Kederlist | 6 |
| 1360 | | 98 51 411 | | 570) | X | Piping | Kederlist | 6 |

560. Red Röd
570. Grey Grå
580. Blue Blå
600. Brown Brun



MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX

| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-B16

## Covers 1987
## Block pattern

## Klädselpåsar 1987
## Blockmönster

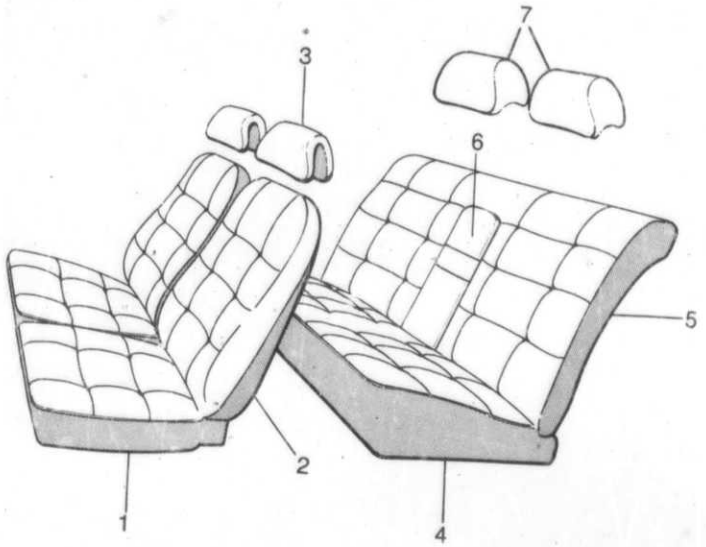


F2540 - 900

| 1365 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | TRIM COLOUR A12 | | | | |
| 0020 | 1 | 96 80 505 | | 590) | 2 | Seat cover | Sitspåse | 6 |
| 0060 | 2 | 96 80 562 | | 590) | 2 | Back cover | Ryggpåse | 6 |
| 0100 | 3 | 98 43 715 | | 590) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0140 | 4 | 96 80 638 | | 590), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0150 | 4 | 96 80 752 | | 590), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0180 | 5 | 96 80 695 | | 590) | 1 | Back cover | Ryggpåse | 6 |
| 0220 | 6 | 96 80 810 | | 590) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0230 | 7 | 95 33 910 | | 590) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0270 | | | | TRIM COLOUR B12 | | | | |
| 0280 | 1 | 96 80 489 | | 600) | 2 | Seat cover | Sitspåse | 6 |
| 0320 | 2 | 96 80 547 | | 600) | 2 | Back cover | Ryggpåse | 6 |
| 0360 | 3 | 98 43 707 | | 600) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0400 | 4 | 96 80 612 | | 600), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0410 | 4 | 96 80 737 | | 600), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0440 | 5 | 96 80 679 | | 600) | 1 | Back cover | Ryggpåse | 6 |
| 0480 | 6 | 96 80 794 | | 600) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0490 | 7 | 96 81 198 | | 600) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0520 | | | | TRIM COLOUR C12 | | | | |
| 0540 | 1 | 96 80 497 | | 560) | 2 | Seat cover | Sitspåse | 6 |
| 0580 | 2 | 96 80 554 | | 560) | 2 | Back cover | Ryggpåse | 6 |
| 0620 | 3 | 98 67 235 | | 560) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0660 | 4 | 96 80 620 | | 560), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0670 | 4 | 96 80 745 | | 560), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0700 | 5 | 96 80 687 | | 560) | 1 | Back cover | Ryggpåse | 6 |
| 0740 | 6 | 96 80 802 | | 560) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0750 | 7 | 95 33 902 | | 560) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0790 | | | | TRIM COLOUR D12 | | | | |
| 0800 | 1 | 96 80 513 | | 580) | 2 | Seat cover | Sitspåse | 6 |
| 0840 | 2 | 96 80 570 | | 580) | 2 | Back cover | Ryggpåse | 6 |
| 0880 | 3 | 96 16 731 | | 580) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0920 | 4 | 96 80 646 | | 580), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0930 | 4 | 96 80 760 | | 580), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0960 | 5 | 96 80 703 | | 580) | 1 | Back cover | Ryggpåse | 6 |
| 1000 | 6 | 96 80 828 | | 580) | 1 | Arm rest cover | Armstödspåse | 6 |
| 1010 | 7 | *96 81 222* | | 580) NLS | 2 | Head restraint cover | Nackstödspåse | 6 |
| 1050 | | | | TRIM COLOUR E12 | | | | |
| 1060 | 1 | 96 80 521 | | 570) | 2 | Seat cover | Sitspåse | 6 |
| 1100 | 2 | 96 80 588 | | 570) | 2 | Back cover | Ryggpåse | 6 |
| 1140 | 3 | 96 80 596 | | 570) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 1180 | 4 | 96 80 653 | | 570), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 1190 | 4 | 96 80 778 | | 570), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 1220 | 5 | 96 80 711 | | 570) | 1 | Back cover | Ryggpåse | 6 |
| 1260 | 6 | 96 80 836 | | 570) | 1 | Arm rest cover | Armstödspåse | 6 |
| 1265 | 7 | 95 33 928 | | 570) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 1300 | | | | | | | | |
| 1320 | | | | See page 8B-035, 6-B12 | | CLOTH, COATED FABRIC AND PLASTIC STRIPS FOR UPHOLSTERY COVER | TYG, VÄVPLAST OCH KEDJELISTER FÖR KLÄDSELPÅSAR | |
| 1340 | | | | | | | | |
| 1360 | | | | | | | | |
| 1380 | | | | | | | | |

560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

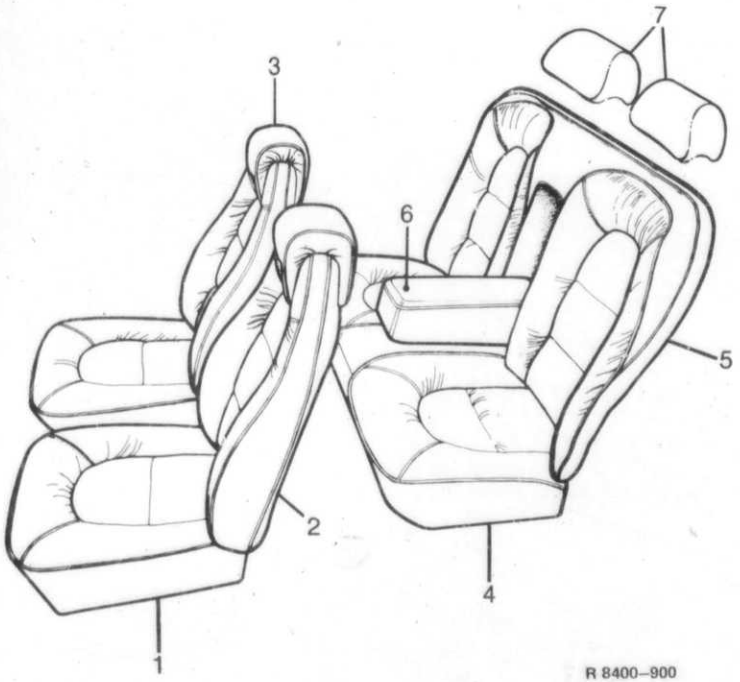


R 8400–900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| | | | TRIM COLOUR A23 | | | | |
| 1 | 98 07 363 | | 590) | 2 | Seat cover | Sitspåse | 6 |
| 1 | 96 81 628 | | 590,60) | 2 | Seat cover | Sitspåse | 6 |
| 2 | 76 33 779 | | 590), (9807405) | 2 | Back cover | Ryggpåse | 6 |
| 2 | 96 81 685 | | 590,60) | 2 | Back cover | Ryggpåse | 6 |
| 3 | 98 07 447 | | 590) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 3 | 97 75 461 | | 590,60) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 4 | 98 07 645 | | 590), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 4 | 98 07 728 | | 590), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 5 | 98 07 769 | | 590) | 1 | Back cover | Ryggpåse | 6 |
| 6 | 98 31 595 | | 590) | 1 | Arm rest cover | Armstödspåse | 6 |
| 7 | *95 79 525* | | 590) NLS - USE 9699562 | 2 | Head restraint cover | Nackstödspåse | 6 |
| | | | TRIM COLOUR B23 | | | | |
| 1 | 98 66 500 | | 600) | 2 | Seat cover | Sitspåse | 6 |
| 2 | 98 66 898 | | 600) | 2 | Back cover | Ryggpåse | 6 |
| 3 | 98 67 268 | | 600) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 4 | 98 72 714 | | 600), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 4 | 98 72 854 | | 600), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 5 | 98 72 953 | | 600) | 1 | Back cover | Ryggpåse | 6 |
| 6 | 98 73 092 | | 600) | 1 | Arm rest cover | Armstödspåse | 6 |
| 7 | *95 79 509* | | 600) NLS - USE 9699570 | 2 | Head restraint cover | Nackstödspåse | 6 |
| | | | TRIM COLOUR C23 | | | | |
| 1 | 98 07 355 | | 560) | 2 | Seat cover | Sitspåse | 6 |
| 1 | 96 81 610 | | 560,60) | 2 | Seat cover | Sitspåse | 6 |
| 2 | 76 33 761 | | 560), (9807397) | 2 | Back cover | Ryggpåse | 6 |
| 2 | 96 81 677 | | 560,60) | 2 | Back cover | Ryggpåse | 6 |
| 3 | 98 07 439 | | 560) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 3 | 97 75 453 | | 560,60) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 4 | 98 07 637 | | 560), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 4 | 98 07 710 | | 560), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 5 | 98 07 751 | | 560) | 1 | Back cover | Ryggpåse | 6 |
| 6 | 98 31 587 | | 560) | 1 | Arm rest cover | Armstödspåse | 6 |
| 7 | *95 79 517* | | 560) NLS - USE 9699588 | 2 | Head restraint cover | Nackstödspåse | 6 |
| | | | TRIM COLOUR D23 | | | | |
| 1 | 98 45 751 | | 580) | 2 | Seat cover | Sitspåse | 6 |
| 1 | 96 81 636 | | 580,60) | 2 | Seat cover | Sitspåse | 6 |
| 2 | *76 33 787* | | 580), (9807413) NLS - USE 9681693 | 2 | Back cover | Ryggpåse | 6 |
| 2 | 96 81 693 | | 580,60) | 2 | Back cover | Ryggpåse | 6 |
| 3 | 98 07 454 | | 580) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 3 | 97 75 479 | | 580,60) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 4 | 98 46 080 | | 580), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 4 | 98 46 106 | | 580), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 5 | 98 46 122 | | 580) | 1 | Back cover | Ryggpåse | 6 |
| 6 | 98 45 108 | | 580) | 1 | Arm rest cover | Armstödspåse | 6 |
| 7 | *98 09 575* | | 580) NLS | 2 | Head restraint cover | Nackstödspåse | 6 |

60. For cars with automatic belts  För bilar med passivt bälte
560. Red  Röd
570. Grey  Grå
580. Blue  Blå
590. Yellow  Gul
600. Brown  Brun




MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

8B GROUP INDEX

| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

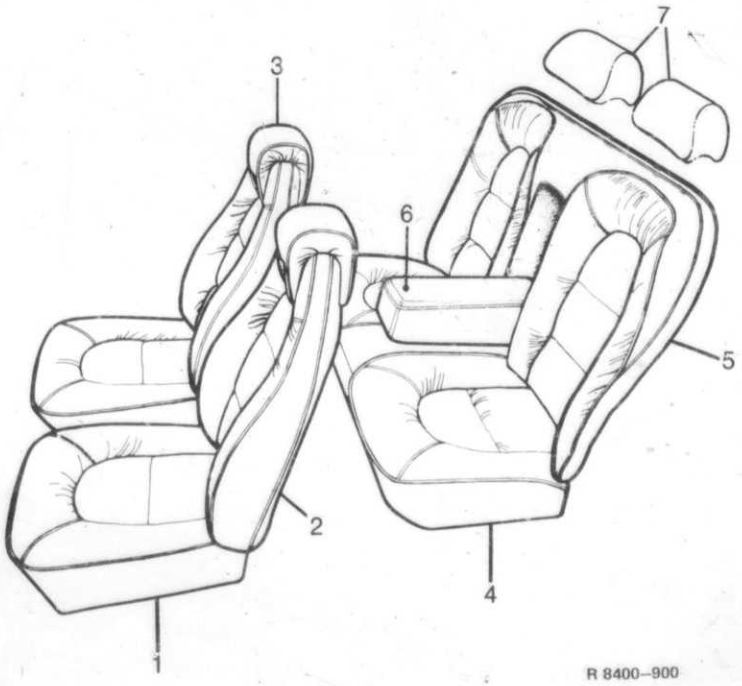


R 8400–900

Upholstery
# 6-B20
## Covers 1987
## Contour design

Klädsel
## Klädselpåsar 1987
## Contour design

| Pos | Part No/Art nr | K S | Notes-Anmärkningar | Qty Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| | | | TRIM COLOUR E23 | | | | |
| 1 | 98 65 908 | | 570) | 2 | Seat cover | Sitspåse | 6 |
| 1 | 96 81 644 | | 570,60) | 2 | Seat cover | Sitspåse | 6 |
| 2 | 98 66 906 | | 570) | 2 | Back cover | Ryggpåse | 6 |
| 2 | 96 81 701 | | 570,60) | 2 | Back cover | Ryggpåse | 6 |
| 3 | 98 67 276 | | 570) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 3 | 98 95 137 | | 570,60) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 4 | 98 72 722 | | 570), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 4 | 98 72 862 | | 570), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 5 | 98 72 961 | | 570) | 1 | Back cover | Ryggpåse | 6 |
| 6 | 98 73 100 | | 570) | 1 | Arm rest cover | Armstödspåse | 6 |
| 7 | *95 79 533* | | 570) NLS - USE 9699596 | 2 | Head restraint cover | Nackstödspåse | 6 |
| | | | TRIM COLOUR A33 | | | | |
| 1 | 98 35 703 | | 590,63) | 2 | Seat cover | Sitspåse | 6 |
| 2 | 98 35 711 | | 590,63) | 2 | Back cover | Ryggpåse | 6 |
| 3 | *98 35 646* | | 590,63) NLS - USE 9883976 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 3 | 98 83 976 | | 590,63), CV | 2 | Head restraint cover | Nackstödspåse | 6 |
| 4 | 97 27 827 | | 590,63), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 4 | 98 80 444 | | 590,63), CV | 1 | Seat cover | Sitspåse | 6 |
| 4 | 98 35 729 | | 590,63), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 5 | 98 35 752 | | 590,63) | 1 | Back cover | Ryggpåse | 6 |
| 5 | 98 80 477 | | 590,63), CV | 1 | Back cover | Ryggpåse | 6 |
| 6 | 98 35 679 | | 590,63) | 1 | Arm rest cover | Armstödspåse | 6 |
| 7 | *95 79 558* | | 590,63) NLS - USE 9699513 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 7 | 98 83 083 | | 590,63), CV | 2 | Head restraint cover | Nackstödspåse | 6 |
| | | | TRIM COLOUR A33 | | | | |
| 1 | 96 19 560 | | 590,64) | 2 | Seat cover | Sitspåse | 6 |
| 2 | 96 19 578 | | 590,64) | 2 | Back cover | Ryggpåse | 6 |
| 3 | 96 19 586 | | 590,64) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 3 | *96 46 28?* | | 590,64), CV NLS - USE 9647439 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 4 | 96 19 826 | | 590,64), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 4 | 98 80 444 | | 590,64), CV | 1 | Seat cover | Sitspåse | 6 |
| 4 | 96 19 792 | | 590,64), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 5 | 96 19 800 | | 590,64) | 1 | Back cover | Ryggpåse | 6 |
| 5 | 98 80 477 | | 590,64), CV | 1 | Back cover | Ryggpåse | 6 |
| 6 | 96 19 818 | | 590,64) | 1 | Arm rest cover | Armstödspåse | 6 |
| 7 | *95 79 558* | | 590,64) NLS - USE 9699513 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 7 | 98 83 083 | | 590,64), CV | 2 | Head restraint cover | Nackstödspåse | 6 |
| | | | TRIM COLOUR B33 | | | | |
| 1 | 96 12 979 | | 600) | 2 | Seat cover | Sitspåse | 6 |
| 2 | 96 13 068 | | 600) | 2 | Back cover | Ryggpåse | 6 |
| 3 | 96 13 225 | | 600) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 4 | 96 12 250 | | 600), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 4 | 96 12 268 | | 600), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 5 | 96 12 276 | | 600) | 1 | Back cover | Ryggpåse | 6 |
| 6 | 96 12 730 | | 600) | 1 | Arm rest cover | Armstödspåse | 6 |
| 7 | *95 79 582* | | 600) NLS - USE 9699521 | 2 | Head restraint cover | Nackstödspåse | 6 |

60. For cars with automatic belts  For bilar med passivt bälte
63. Ch. -H2003531, -H3002519, -H7000742
64. Ch. H2003532-, H3002520-, H7000743-
570. Grey  Grå
590. Yellow  Gul
600. Brown  Brun



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-B22

Upholstery
## Covers 1987
## Contour design

Klädsel
## Klädselpåsar 1987
## Contour design

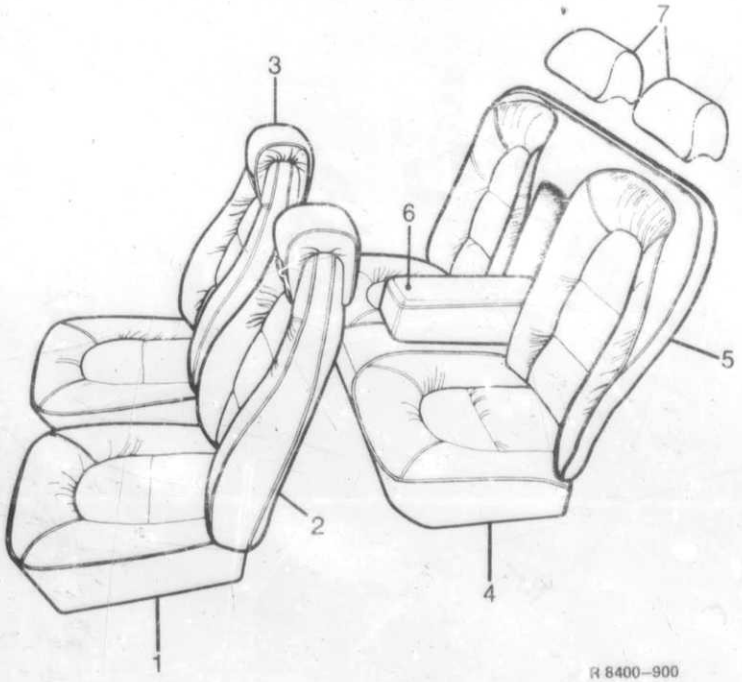


R 8400–900

| 1370 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 2870 | | | | TRIM COLOUR C33 | | | | |
| 2880 | 1 | 98 12 660 | | 560) | 2 | Seat cover | Sitspåse | 6 |
| 2920 | 2 | 98 40 257 | | 560) | 2 | Back cover | Ryggpåse | 6 |
| 2960 | 3 | 98 12 686 | | 560) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 2970 | 3 | 98 83 984 | | 560), CV | 2 | Head restraint cover | Nackstödspåse | 6 |
| 3000 | 4 | 98 12 694 | | 560), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 3005 | 4 | 98 80 451 | | 560), CV | 1 | Seat cover | Sitspåse | 6 |
| 3010 | 4 | *98 12 744* | | 560), 4SN, 5CK NLS | 1 | Seat cover | Sitspåse | 6 |
| 3040 | 5 | 98 43 574 | | 560) | 1 | Back cover | Ryggpåse | 6 |
| 3050 | 5 | 98 80 485 | | 560), CV | 1 | Back cover | Ryggpåse | 6 |
| 3080 | 6 | 98 31 728 | | 560) | 1 | Arm rest cover | Armstödspåse | 6 |
| 3090 | 7 | *98 09 641* | | 560) NLS | 2 | Head restraint cover | Nackstödspåse | 6 |
| 3095 | 7 | 98 83 091 | | 560), CV | 2 | Head restraint cover | Nackstödspåse | 6 |
| 3350 | | | | TRIM COLOUR E33 | | | | |
| 3360 | 1 | 98 66 351 | | 570) | 2 | Seat cover | Sitspåse | 6 |
| 3400 | 2 | 98 67 789 | | 570) | 2 | Back cover | Ryggpåse | 6 |
| 3440 | 3 | 98 67 284 | | 570) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 3450 | 3 | 98 84 230 | | 570), CV | 2 | Head restraint cover | Nackstödspåse | 6 |
| 3480 | 4 | 98 76 541 | | 570), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 3490 | 4 | 98 84 289 | | 570), CV | 1 | Seat cover | Sitspåse | 6 |
| 3500 | 4 | 98 76 558 | | 570), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 3520 | 5 | 98 76 574 | | 570) | 1 | Back cover | Ryggpåse | 6 |
| 3530 | 5 | 98 84 297 | | 570), CV | 1 | Back cover | Ryggpåse | 6 |
| 3560 | 6 | 98 76 582 | | 570) | 1 | Arm rest cover | Armstödspåse | 6 |
| 3760 | 7 | *95 79 574* | | 570) NLS - USE 9699547 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 3765 | 7 | *98 84 321* | | 570), CV NLS - USE 9647462 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 3765 | | | | | | | | |
| 3780 | | | | | | | | |
| 3800 | | | | See page 8B-035, 6-B12 | | CLOTH, COATED FABRIC AND PLASTIC STRIPS FOR UPHOLSTERY COVER | TYG, VÄVPLAST OCH KEDERLISTER FÖR KLÄDSELPÅSAR | |
| 3820 | | | | | | | | |
| 5000 | | | | | | | | |
| 5020 | | | | | | | | |

560. Red Röd
570. Grey Grå




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

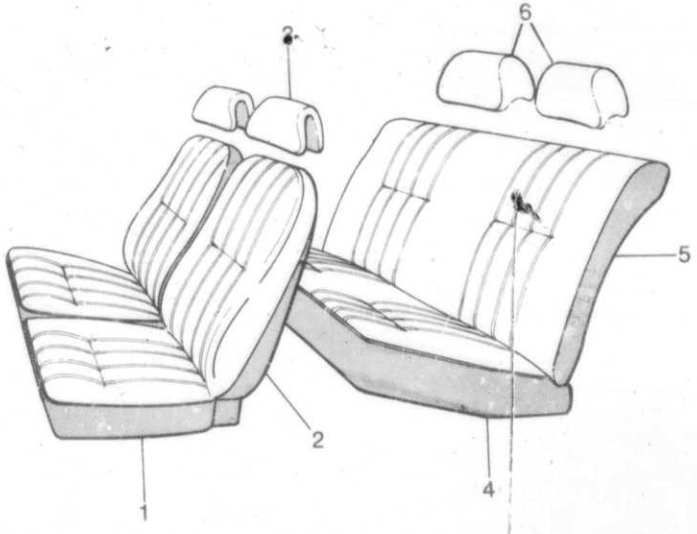


F2541 - 900

| 1391 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | TRIM COLOUR A11 | | | | |
| 0020 | 1 | 96 17 549 | | 590) | 2 | Seat cover | Sitspåse | 6 |
| 0030 | 2 | 96 17 598 | | 590) | 2 | Back cover | Ryggpåse | 6 |
| 0050 | 3 | 98 43 715 | | 590) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0070 | 4 | 96 11 831 | | 590), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0080 | 4 | 96 11 890 | | 590), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0090 | 5 | 96 12 136 | | 590) | 1 | Back cover | Ryggpåse | 6 |
| 0100 | 6 | 95 33 910 | | 590) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0115 | | | | TRIM COLOUR B11 | | | | |
| 0120 | 1 | *95 30 338* | | 600) NLS | 2 | Seat cover | Sitspåse | 6 |
| 0140 | 2 | *95 30 346* | | 600) NLS | 2 | Back cover | Ryggpåse | 6 |
| 0160 | 3 | 96 89 753 | | 600) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0180 | 4 | *95 30 718* | | 600), 2SN, 3CK NLS | 1 | Seat cover | Sitspåse | 6 |
| 0190 | 4 | *95 30 742* | | 600), 4SN, 5CK NLS | 1 | Seat cover | Sitspåse | 6 |
| 0200 | 5 | 95 30 726 | | 600) | 1 | Back cover | Ryggpåse | 6 |
| 0210 | 6 | 96 88 714 | | 600) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0230 | | | | TRIM COLOUR C11 | | | | |
| 0240 | 1 | 96 17 531 | | 560) | 2 | Seat cover | Sitspåse | 6 |
| 0250 | 2 | 96 17 580 | | 560) | 2 | Back cover | Ryggpåse | 6 |
| 0270 | 3 | 98 67 235 | | 560) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0290 | 4 | 96 11 823 | | 560), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0300 | 4 | 96 11 872 | | 560), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0310 | 5 | 96 12 128 | | 560) | 1 | Back cover | Ryggpåse | 6 |
| 0320 | 6 | 95 33 902 | | 560) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0335 | | | | TRIM COLOUR E11 | | | | |
| 0340 | 1 | 95 30 312 | | 570) | 2 | Seat cover | Sitspåse | 6 |
| 0360 | 2 | 95 30 320 | | 570) | 2 | Back cover | Ryggpåse | 6 |
| 0380 | 3 | 96 80 596 | | 570) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0400 | 4 | 95 30 676 | | 570), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0410 | 4 | 95 30 692 | | 570), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0420 | 5 | 95 30 684 | | 570) | 1 | Back cover | Ryggpåse | 6 |
| 0430 | 6 | 95 33 928 | | 570) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0445 | | | | TRIM COLOUR F11 | | | | |
| 0450 | 1 | 95 30 296 | | 580) | 2 | Seat cover | Sitspåse | 6 |
| 0470 | 2 | 95 30 304 | | 580) | 2 | Back cover | Ryggpåse | 6 |
| 0490 | 3 | 96 88 276 | | 580) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0510 | 4 | 95 30 635 | | 580), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0520 | 4 | 95 30 668 | | 580), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0530 | 5 | 95 30 643 | | 580) | 1 | Back cover | Ryggpåse | 6 |
| 0535 | 6 | 96 88 797 | | 580) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0540 | | | | | | | | |
| 0550 | | | | | | | | |
| 0560 | | 98 34 342 | | 590,238), TRIM COLOUR | X | Cloth | Tyg | 6 |
| 0570 | | 98 34 334 | | 590,239), A11, A14 | X | Cloth | Tyg | 6 |
| 0580 | | | | | | | | |
| 0590 | | *98 27 254* | | 590,238),TRIM COLOUR A24 NLS | X | Cloth | Tyg | 6 |
| 0595 | | 97 40 853 | | 590,239),TRIM COLOUR A24 | X | Cloth | Tyg | 6 |
| 0600 | | | | | | | | |
| 0610 | | 96 18 042 | | 600,238), TRIM COLOUR | X | Cloth | Tyg | 6 |
| 0620 | | 96 18 034 | | 600,239), B11, B14 | X | Cloth | Tyg | 6 |
| 0630 | | | | | | | | |
| 0635 | | 98 51 262 | | 600,238),TRIM COLOUR B24 | X | Cloth | Tyg | 6 |
| 0640 | | 98 51 270 | | 600,239),TRIM COLOUR B24 | X | Cloth | Tyg | 6 |
| 0650 | | | | | | | | |

238. Thickness = 3 MM Tjocklek = 3 MM
239. Thickness = 10 MM Tjocklek = 10 MM
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

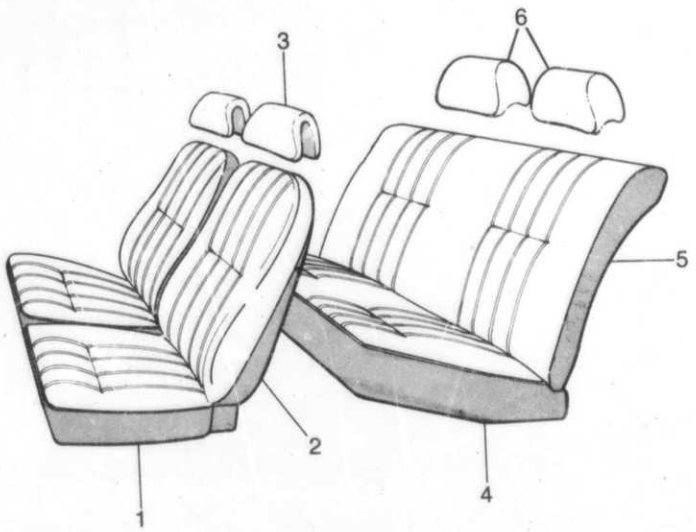


F2541 - 900

| 1391 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0660 | 98 50 900 | | 560,238), TRIM COLOUR | X | Cloth | Tyg | 6 |
| 0670 | 98 50 892 | | 560,239), C11, C14 | X | Cloth | Tyg | 6 |
| 0680 | | | | | | | |
| 0685 | *97 40 838* | | 560,238),TRIM COLOUR C24 NLS | X | Cloth | Tyg | 6 |
| 0690 | 98 27 247 | | 560,239),TRIM COLOUR C24 | X | Cloth | Tyg | 6 |
| 0700 | | | | | | | |
| 0710 | 98 78 15[illegible] | | 570,238), TRIM COLOUR | X | Cloth | Tyg | 6 |
| 0711 | 98 78 141 | | 570,239), E11, E14 | X | Cloth | Tyg | 6 |
| 0712 | | | | | | | |
| 0715 | 98 51 031 | | 570,238),TRIM COLOUR E24 | X | Cloth | Tyg | 6 |
| 0720 | 98 51 049 | | 570,239),TRIM COLOUR E24 | X | Cloth | Tyg | 6 |
| 0730 | | | | | | | |
| 0740 | *98 78 273* | | 580,238), TRIM COLOUR NLS | X | Cloth | Tyg | 6 |
| 0741 | 98 78 265 | | 580,239), F11, F14 | X | Cloth | Tyg | 6 |
| 0742 | | | | | | | |
| 0745 | 98 78 307 | | 580,238),TRIM COLOUR F24 | X | Cloth | Tyg | 6 |
| 0750 | 98 78 315 | | 580,239),TRIM COLOUR F24 | X | Cloth | Tyg | 6 |
| 0760 | | | | | | | |
| 0770 | 97 41 018 | | 590) | X | Coated fabric | Vävplast | 6 |
| 0780 | 98 57 475 | | 600) | X | Coated fabric | Vävplast | 6 |
| 0790 | 97 41 489 | | 560) | X | Coated fabric | Vävplast | 6 |
| 0800 | 98 51 098 | | 570) | X | Coated fabric | Vävplast | 6 |
| 0810 | 98 79 909 | | 580) | X | Coated fabric | Vävplast | 6 |
| 0820 | | | | | | | |
| 0830 | *97 08 561* | | 590) NLS | X | Piping | Kederlist | 6 |
| 0850 | 98 57 624 | | 600) | X | Piping | Kederlist | 6 |
| 0870 | 98 07 975 | | 560) | X | Piping | Kederlist | 6 |
| 0890 | 98 51 429 | | 570) | X | Piping | Kederlist | 6 |
| 0910 | *98 78 851* | | 580) NLS - USE 9695172 | X | Piping | Kederlist | 6 |

238. Thickness = 3 MM Tjocklek = 3 MM
239. Thickness = 10 MM Tjocklek = 10 MM
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun




MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

8B GROUP INDEX

| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

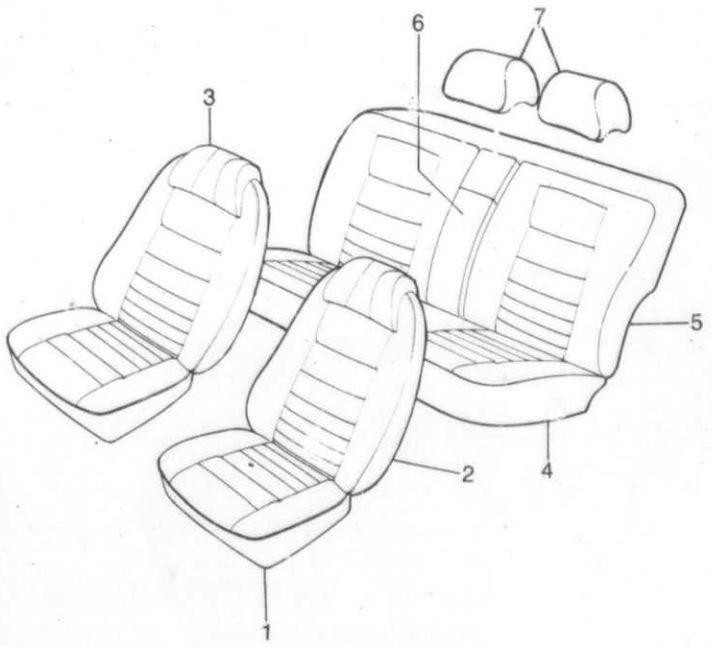


F2542 - 900

| 1392 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | TRIM COLOUR A14 | | | | |
| 0020 | 1 | 96 88 193 | | 590) | 2 | Seat cover | Sitspåse | 6 |
| 0030 | 2 | 96 88 243 | | 590) | 2 | Back cover | Ryggpåse | 6 |
| 0050 | 3 | 98 43 715 | | 590) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0070 | 4 | 96 89 373 | | 590), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0080 | 4 | 96 89 423 | | 590), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0090 | 5 | 96 89 472 | | 590) | 1 | Back cover | Ryggpåse | 6 |
| 0110 | 6 | 96 80 810 | | 590) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0120 | 7 | 95 33 910 | | 590) | 1 | Head restraint cover | Nackstödspåse | 6 |
| 0135 | | | | TRIM COLOUR A24 | | | | |
| 0140 | 1 | 96 88 359 | | 590) | 2 | Seat cover | Sitspåse | 6 |
| 0150 | 1 | 96 88 094 | | 590,60) | 2 | Seat cover | Sitspåse | 6 |
| 0160 | 2 | 96 88 409 | | 590) | 2 | Back cover | Ryggpåse | 6 |
| 0170 | 2 | 96 88 029 | | 590,60) | 2 | Back cover | Ryggpåse | 6 |
| 0180 | 3 | 98 07 447 | | 590) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0190 | 3 | 97 75 461 | | 590,60) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0200 | 4 | 96 89 597 | | 590), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0210 | 4 | 96 89 647 | | 590), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0220 | 5 | 96 89 522 | | 590) | 1 | Back cover | Ryggpåse | 6 |
| 0240 | 6 | 98 31 595 | | 590) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0245 | 7 | *95 79 525* | | 590) NLS - USE 9699562 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0330 | | | | TRIM COLOUR B14 | | | | |
| 0340 | 1 | 96 88 177 | | 600) | 2 | Seat cover | Sitspåse | 6 |
| 0360 | 2 | 96 88 227 | | 600) | 2 | Back cover | Ryggpåse | 6 |
| 0380 | 3 | 96 89 753 | | 600) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0400 | 4 | 96 89 357 | | 600), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0410 | 4 | 96 89 407 | | 600), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0420 | 5 | 96 89 456 | | 600) | 1 | Back cover | Ryggpåse | 6 |
| 0440 | 6 | 96 89 761 | | 600) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0445 | 7 | 96 88 714 | | 600) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0460 | | | | TRIM COLOUR B24 | | | | |
| 0470 | 1 | 96 88 334 | | 600) | 2 | Seat cover | Sitspåse | 6 |
| 0480 | 1 | 96 88 078 | | 600,60) | 2 | Seat cover | Sitspåse | 6 |
| 0490 | 2 | 96 88 383 | | 600) | 2 | Back cover | Ryggpåse | 6 |
| 0500 | 2 | 96 88 003 | | 600,60) | 2 | Back cover | Ryggpåse | 6 |
| 0510 | 3 | 98 67 268 | | 600) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0520 | 3 | 98 95 129 | | 600,60) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0530 | 4 | 96 89 571 | | 600), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0540 | 4 | 96 89 621 | | 600), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0550 | 5 | 96 89 506 | | 600) | 1 | Back cover | Ryggpåse | 6 |
| 0570 | 6 | 98 73 092 | | 600) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0580 | 7 | *95 79 509* | | 600) NLS - USE 9699570 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0720 | | | | TRIM COLOUR C14 | | | | |
| 0730 | 1 | 96 88 185 | | 560) | 2 | Seat cover | Sitspåse | 6 |
| 0750 | 2 | 96 88 235 | | 560) | 2 | Back cover | Ryggpåse | 6 |
| 0770 | 3 | 98 67 235 | | 560) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0790 | 4 | 96 89 365 | | 560), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0800 | 4 | 96 89 415 | | 560), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0810 | 5 | 96 89 464 | | 560) | 1 | Back cover | Ryggpåse | 6 |
| 0830 | 6 | 96 80 802 | | 560) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0840 | 7 | 95 33 902 | | 560) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0850 | | | | | | | | |

60. For cars with automatic belts För bilar med passivt bälte
560. Red Rod
590. Yellow Gul
600. Brown Brun



MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX

| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-C06

## Covers 1988
## Horizon pattern

## Klädselpåsar 1988
## Horisontmönster

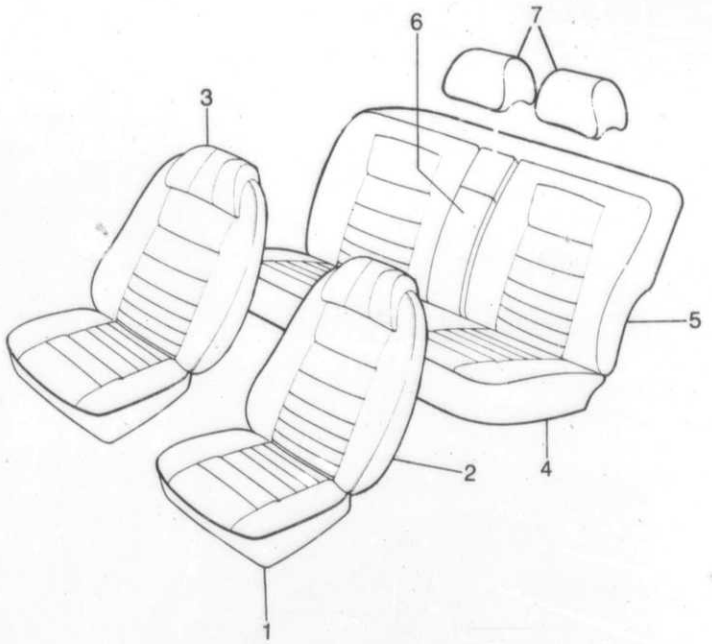


F2542 - 900

| 1392 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0855 | | | | TRIM COLOUR C24 | | | | |
| 0860 | 1 | 96 88 342 | | 560) | 2 | Seat cover | Sitspåse | 6 |
| 0870 | 1 | 96 88 086 | | 560,60) | 2 | Seat cover | Sitspåse | 6 |
| 0880 | 2 | 96 88 391 | | 560) | 2 | Back cover | Ryggpåse | 6 |
| 0890 | 2 | 96 88 011 | | 560,60) | 2 | Back cover | Ryggpåse | 6 |
| 0900 | 3 | 98 07 439 | | 560) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0910 | 3 | 97 75 453 | | 560,60) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0920 | 4 | 96 89 589 | | 560), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0930 | 4 | 96 89 639 | | 560), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0940 | 5 | 96 89 514 | | 560) | 1 | Back cover | Ryggpåse | 6 |
| 0960 | 6 | 98 31 587 | | 560) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0970 | 7 | *95 79 517* | | 560) NLS - USE 9699588 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 1050 | | | | TRIM COLOUR E14 | | | | |
| 1060 | 1 | 96 88 219 | | 570) | 2 | Seat cover | Sitspåse | 6 |
| 1080 | 2 | 96 88 268 | | 570) | 2 | Back cover | Ryggpåse | 6 |
| 1100 | 3 | 96 80 596 | | 570) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 1120 | 4 | 96 89 399 | | 570), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 1130 | 4 | 96 89 449 | | 570), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 1140 | 5 | 96 89 498 | | 570) | 1 | Back cover | Ryggpåse | 6 |
| 1160 | 6 | 96 80 836 | | 570) | 1 | Arm rest cover | Armstödspåse | 6 |
| 1170 | 7 | 95 33 928 | | 570) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 1185 | | | | TRIM COLOUR E24 | | | | |
| 1190 | 1 | 96 88 375 | | 570) | 2 | Seat cover | Sitspåse | 6 |
| 1200 | 1 | 96 88 110 | | 570,60) | 2 | Seat cover | Sitspåse | 6 |
| 1210 | 2 | 96 88 425 | | 570) | 2 | Back cover | Ryggpåse | 6 |
| 1220 | 2 | 96 88 045 | | 570,60) | 2 | Back cover | Ryggpåse | 6 |
| 1230 | 3 | 98 67 276 | | 570) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 1240 | 3 | 98 95 137 | | 570,60) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 1250 | 4 | 96 89 613 | | 570), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 1260 | 4 | 96 89 662 | | 570), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 1270 | 5 | 96 89 548 | | 570) | 1 | Back cover | Ryggpåse | 6 |
| 1290 | 6 | 98 73 100 | | 570) | 1 | Arm rest cover | Armstödspåse | 6 |
| 1300 | 7 | *95 79 533* | | 570) NLS - USE 9699596 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 1380 | | | | TRIM COLOUR F14 | | | | |
| 1390 | 1 | 96 88 201 | | 580) | 2 | Seat cover | Sitspåse | 6 |
| 1410 | 2 | 96 88 250 | | 580) | 2 | Back cover | Ryggpåse | 6 |
| 1430 | 3 | 96 88 276 | | 580) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 1450 | 4 | 96 89 381 | | 580), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 1460 | 4 | 96 89 431 | | 580), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 1470 | 5 | 96 89 480 | | 580) | 1 | Back cover | Ryggpåse | 6 |
| 1490 | 6 | 96 89 563 | | 580) | 1 | Arm rest cover | Armstödspåse | 6 |
| 1500 | 7 | 96 88 797 | | 580) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 1515 | | | | TRIM COLOUR F24 | | | | |
| 1520 | 1 | 96 88 367 | | 580) | 2 | Seat cover | Sitspåse | 6 |
| 1530 | 1 | 96 88 102 | | 580,60) | 2 | Seat cover | Sitspåse | 6 |
| 1540 | 2 | 96 88 417 | | 580) | 2 | Back cover | Ryggpåse | 6 |
| 1550 | 2 | 96 88 037 | | 580,60) | 2 | Back cover | Ryggpåse | 6 |
| 1560 | 3 | 96 88 565 | | 580) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 1570 | 3 | 96 95 214 | | 580,60) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 1580 | 4 | 96 89 605 | | 580), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 1590 | 4 | 96 89 654 | | 580), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 1600 | 5 | 96 89 530 | | 580) | 1 | Back cover | Ryggpåse | 6 |
| 1620 | 6 | 96 89 696 | | 580) | 1 | Arm rest cover | Armstödspåse | 6 |
| 1630 | 7 | *95 79 541* | | 580) NLS - USE 9699604 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 1640 | | | | | | | | |
| 1690 | | | | See page 8B-047, 6-B24 | | CLOTH, COATED FABRIC AND PLASTIC STRIPS FOR UPHOLSTERY COVER | TYG, VÄVPLAST OCH KEDERLISTER FÖR KLÄDSELPÅSAR | |
| 1700 | | | | | | | | |
| 1710 | | | | | | | | |
| 1730 | | | | | | | | |

60. For cars with automatic belts  För bilar med passivt bälte
560. Red  Röd
570. Grey  Grå
580. Blue  Blå




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

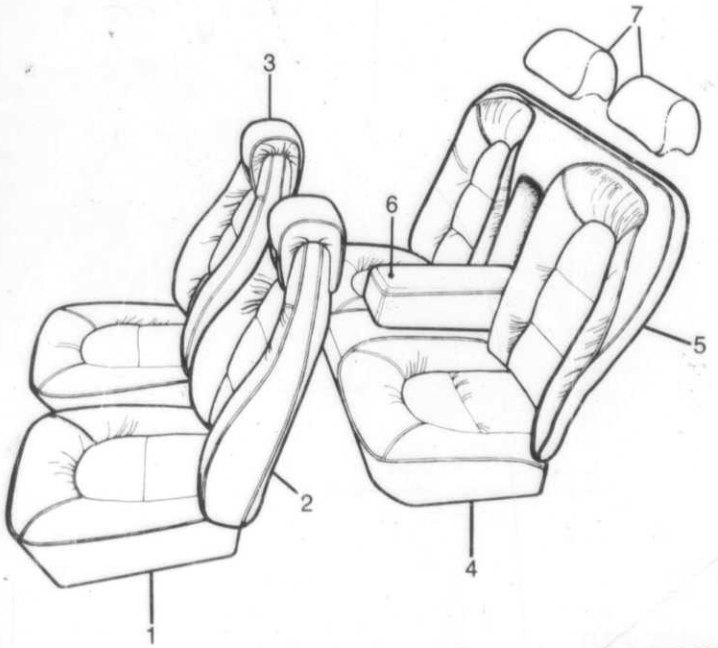


R 8960-900

# 6-C08

Upholstery
## Covers 1988
## Contour design

Klädsel
## Klädselpåsar 1988
## Contour design

| 1393 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0130 | | | | TRIM COLOUR A33 | | | | |
| 0140 | 1 | 96 19 560 | | 590) | 2 | Seat cover | Sitspåse | 6 |
| 0150 | 1 | 95 41 160 | | 590,60) | 2 | Seat cover | Sitspåse | 6 |
| 0160 | 2 | 96 19 578 | | 590) | 2 | Back cover | Ryggpåse | 6 |
| 0170 | 2 | 95 41 210 | | 590,60) | 2 | Back cover | Ryggpåse | 6 |
| 0180 | 3 | 95 33 936 | | 590) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0190 | 3 | 95 78 501 | | 590,60) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0195 | 3 | 96 47 439 | | 590), CV | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0200 | 4 | 96 19 826 | | 590), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0210 | 4 | 98 80 444 | | 590), CV | 1 | Seat cover | Sitspåse | 6 |
| 0215 | 4 | 96 19 792 | | 590), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0220 | 5 | 96 19 800 | | 590) | 1 | Back cover | Ryggpåse | 6 |
| 0230 | 5 | 96 46 217 | | 590), CV | 1 | Back cover | Ryggpåse | 6 |
| 0240 | 6 | 96 19 818 | | 590) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0245 | 7 | *95 79 558* | | 590) NLS - USE 9699513 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0250 | 7 | 96 47 454 | | 590), CV | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0400 | | | | TRIM COLOUR B33 | | | | |
| 0410 | 1 | 96 12 979 | | 600) | 2 | Seat cover | Sitspåse | 6 |
| 0420 | 1 | 95 41 194 | | 600,60) | 2 | Seat cover | Sitspåse | 6 |
| 0430 | 2 | 96 13 068 | | 600) | 2 | Back cover | Ryggpåse | 6 |
| 0440 | 2 | 95 41 244 | | 600,60) | 2 | Back cover | Ryggpåse | 6 |
| 0450 | 3 | 95 33 951 | | 600) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0460 | 3 | 95 78 527 | | 600,60) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0470 | 4 | 96 12 250 | | 600), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0480 | 4 | 96 12 268 | | 600), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0490 | 5 | 96 12 276 | | 600) | 1 | Back cover | Ryggpåse | 6 |
| 0510 | 6 | 96 12 730 | | 600) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0520 | 7 | *95 79 582* | | 600) NLS - USE 9699521 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0535 | | | | TRIM COLOUR C33 | | | | |
| 0540 | 1 | 95 30 361 | | 560) | 2 | Seat cover | Sitspåse | 6 |
| 0550 | 1 | 95 41 178 | | 560,60) | 2 | Seat cover | Sitspåse | 6 |
| 0560 | 2 | 95 30 379 | | 560) | 2 | Back cover | Ryggpåse | 6 |
| 0570 | 2 | 95 41 228 | | 560,60) | 2 | Back cover | Ryggpåse | 6 |
| 0580 | 3 | 95 30 387 | | 560) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0590 | 3 | 95 72 975 | | 560,60) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0595 | 3 | 96 47 074 | | 560), CV | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0600 | 4 | 95 30 700 | | 560), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0610 | 4 | 96 46 134 | | 560), CV | 1 | Seat cover | Sitspåse | 6 |
| 0615 | 4 | 95 30 759 | | 560), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0620 | 5 | 95 30 650 | | 560) | 1 | Back cover | Ryggpåse | 6 |
| 0630 | 5 | 96 47 728 | | 560,145), CV | 1 | Back cover | Ryggpåse | 6 |
| 0633 | 5 | 96 46 142 | | 560,146), CV | 1 | Back cover | Ryggpåse | 6 |
| 0640 | 6 | 95 30 734 | | 560) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0645 | 7 | *95 79 566* | | 560) NLS - USE 9699539 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0650 | 7 | 96 46 647 | | 560), CV | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0660 | | | | | | | | |
| 0770 | | | | TRIM COLOUR E33 | | | | |
| 0780 | 1 | 98 66 351 | | 570) | 2 | Seat cover | Sitspåse | 6 |
| 0790 | 1 | 95 41 186 | | 570,60) | 2 | Seat cover | Sitspåse | 6 |
| 0800 | 2 | 98 67 789 | | 570) | 2 | Back cover | Ryggpåse | 6 |
| 0810 | 2 | *95 41 236* | | 570,60) NLS - USE 4052734, 4052742, 4054565, 7971518 | 2 | Back cover | Ryggpåse | 6 |
| 0810 | | | | | | | | |
| 0810 | | | | | | | | |

60. For cars with automatic belts  För bilar med passivt bälte
145. Ch. --J7005071
146. Ch. J7005072--
560. Red  Röd
570. Grey  Grå
590. Yellow  Gul
600. Brown  Brun




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

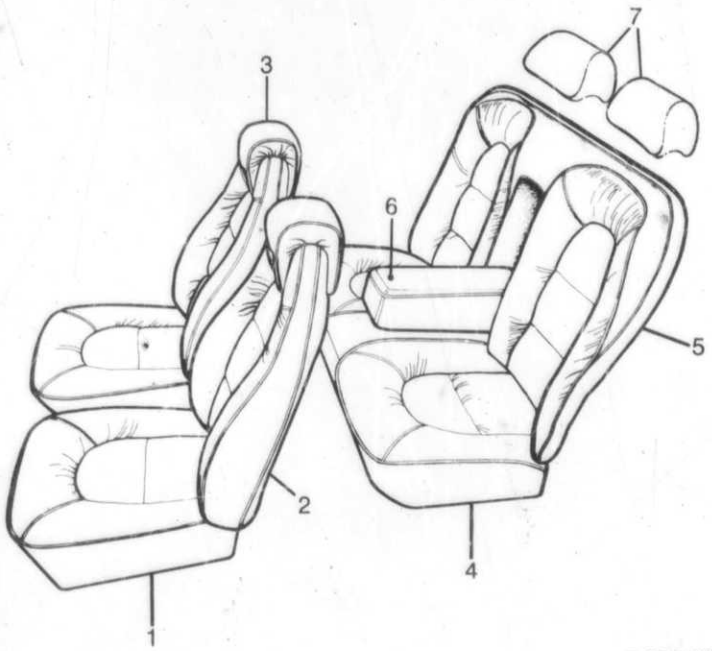


R 8960-900

| 1393 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| | | | | TRIM COLOUR E33 | | | | |
| 0820 | 3 | *95 33 944* | | 570) NLS - USE 9647447 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0830 | 3 | 95 78 519 | | 570,60) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0835 | 3 | *96 47 447* | | 570), CV NLS - USE 4167409 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0835 | | | | | | | | |
| 0840 | 4 | 98 76 541 | | 570), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0850 | 4 | 98 84 289 | | 570), CV | 1 | Seat cover | Sitspåse | 6 |
| 0855 | 4 | 98 76 558 | | 570), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0860 | 5 | 98 76 574 | | 570) | 1 | Back cover | Ryggpåse | 6 |
| 0870 | 5 | 96 46 167 | | 570), CV | 1 | Back cover | Ryggpåse | 6 |
| 0880 | 6 | 98 76 582 | | 570) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0890 | 7 | *95 79 574* | | 570) NLS - USE 9699547 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0895 | 7 | 96 47 462 | | 570), CV | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0900 | | | | | | | | |
| 0920 | | | | See page 8B-047, 6-B24 | | CLOTH, COATED FABRIC AND | TYG, VÄVPLAST OCH | |
| 0930 | | | | | | PLASTIC STRIPS FOR | KEDERLISTER FÖR | |
| 0940 | | | | | | UPHOLSTERY COVER | KLÄDSELPÅSAR | |
| 0950 | | | | | | | | |

60. For cars with automatic belts  För bilar med passivt bälte
570. Grey  Grå



MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX

| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-C12

Upholstery
## Covers 1989 500), Parallel pattern

Klädsel
## Klädselpåsar 1989 500), Parallellmönster

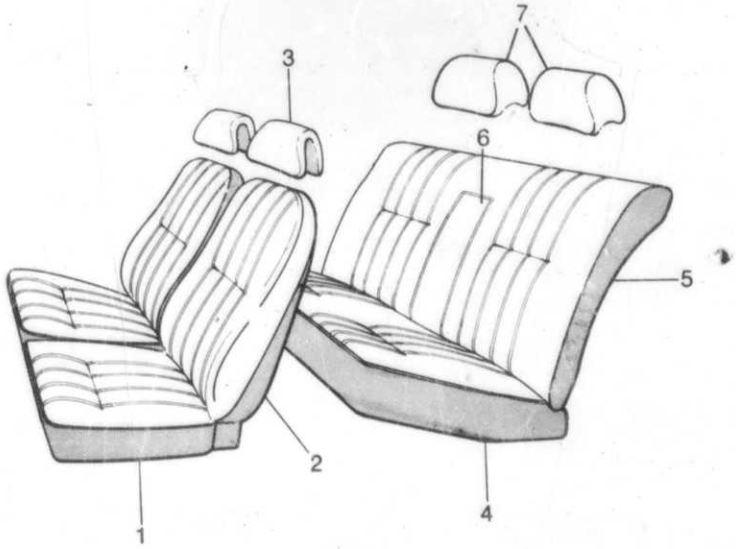


F2543 - 900

| 1397 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0150 | | | | TRIM COLOUR C41 | | | | |
| 0160 | 1 | 95 39 495 | | 560) | 2 | Seat cover | Sitspåse | 6 |
| 0170 | 1 | 40 33 510 | | 560,60) | 2 | Seat cover | Sitspåse | 6 |
| 0180 | 2 | 95 39 545 | | 560) | 2 | Back cover | Ryggpåse | 6 |
| 0190 | 2 | 40 33 577 | | 560,60) | 2 | Back cover | Ryggpåse | 6 |
| 0200 | 3 | 95 39 594 | | 560) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0220 | 4 | 95 38 752 | | 560), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0230 | 4 | 95 38 794 | | 560), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0240 | 5 | 95 38 836 | | 560) | 1 | Back cover | Ryggpåse | 6 |
| 0260 | 5 | 95 41 384 | | 560,212) | 1 | Back cover | Ryggpåse | 6 |
| 0280 | 6 | 95 39 420 | | 560) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0285 | 7 | *95 94 607* | | 560) NLS - USE 9699620 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0300 | | | | TRIM COLOUR E41 | | | | |
| 0310 | 1 | 95 39 529 | | 570) | 2 | Seat cover | Sitspåse | 6 |
| 0320 | 1 | 40 33 528 | | 570,60) | 2 | Seat cover | Sitspåse | 6 |
| 0330 | 2 | 95 39 578 | | 570) | 2 | Back cover | Ryggpåse | 6 |
| 0340 | 2 | 40 33 585 | | 570,60) | 2 | Back cover | Ryggpåse | 6 |
| 0350 | 3 | 95 39 628 | | 570) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0370 | 4 | 95 38 778 | | 570), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0380 | 4 | 95 38 810 | | 570), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0390 | 5 | 95 38 851 | | 570) | 1 | Back cover | Ryggpåse | 6 |
| 0410 | 5 | 95 41 392 | | 570,212) | 1 | Back cover | Ryggpåse | 6 |
| 0430 | 6 | 95 39 453 | | 570) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0432 | 7 | *95 94 615* | | 570) NLS - USE 9699638 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0450 | | | | TRIM COLOUR F41 | | | | |
| 0460 | 1 | 95 39 511 | | 580) | 2 | Seat cover | Sitspåse | 6 |
| 0470 | 1 | 40 33 536 | | 580,60) | 2 | Seat cover | Sitspåse | 6 |
| 0480 | 2 | 95 39 560 | | 580) | 2 | Back cover | Ryggpåse | 6 |
| 0490 | 2 | 40 33 593 | | 580,60) | 2 | Back cover | Ryggpåse | 6 |
| 0500 | 3 | 95 39 610 | | 580) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0520 | 4 | 95 38 760 | | 580), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0530 | 4 | 95 38 802 | | 580), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0540 | 5 | 95 38 844 | | 580) | 1 | Back cover | Ryggpåse | 6 |
| 0560 | 5 | 95 41 400 | | 580,212) | 1 | Back cover | Ryggpåse | 6 |
| 0580 | 6 | 95 39 446 | | 580) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0585 | 7 | *95 94 623* | | 580) NLS - USE 9699646 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0600 | | | | TRIM COLOUR G41 | | | | |
| 0601 | 1 | 95 39 503 | | 590) | 2 | Seat cover | Sitspåse | 6 |
| 0602 | 1 | 40 33 544 | | 590,60) | 2 | Seat cover | Sitspåse | 6 |
| 0603 | 2 | 95 39 552 | | 590) | 2 | Back cover | Ryggpåse | 6 |
| 0604 | 2 | 40 33 601 | | 590,60) | 2 | Back cover | Ryggpåse | 6 |
| 0605 | 3 | 95 39 602 | | 590) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0607 | 4 | 95 38 703 | | 590), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0608 | 4 | 95 38 695 | | 590), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0609 | 5 | 95 38 711 | | 590) | 1 | Back cover | Ryggpåse | 6 |
| 0611 | 5 | 95 41 418 | | 590,212) | 1 | Back cover | Ryggpåse | 6 |
| 0612 | 6 | 95 39 438 | | 590) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0613 | 7 | *95 94 631* | | 590) NLS - USE 9699653 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0615 | | | | | | | | |
| 0640 | | *95 32 904* | | 560,238), TRIM COLOUR NLS | X | Cloth | Tyg | 6 |
| 0650 | | *95 32 896* | | 560,239), C41,C44,C43 NLS | X | Cloth | Tyg | 6 |
| 0660 | | | | | | | | |

60. For cars with automatic belts  För bilar med passivt bälte
212. With arm rest  Med armstöd
238. Thickness = 3 MM  Tjocklek = 3 MM
239. Thickness = 10 MM  Tjocklek = 10 MM
500. Also valid for SE 1989B.  Gäller även för SE 1988B.
560. Red  Röd
570. Grey  Grå
580. Blue  Blå
590. Yellow  Gul



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |


Upholstery

# 6-C14

## *Covers 1989 500), Parallel pattern*

Klädsel

## *Klädselpåsar 1989 500), Parallellmönster*

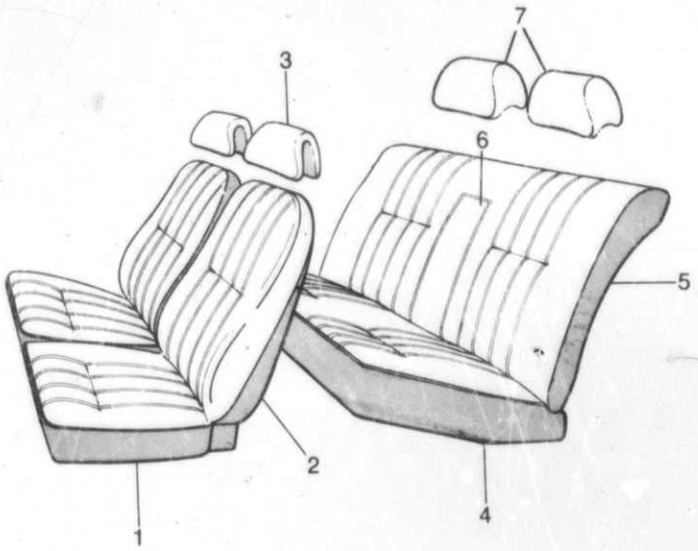


F2543 - 900

| 1397 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0670 | 95 32 946 | | 570,238), TRIM COLOUR | X | Cloth | Tyg | 6 |
| 0680 | 95 32 938 | | 570,239), E41,E44,E43 | X | Cloth | Tyg | 6 |
| 0690 | | | | | | | |
| 0700 | 95 32 987 | | 580,238), TRIM COLOUR | X | Cloth | Tyg | 6 |
| 0710 | 95 32 979 | | 580,239), F41,F44 | X | Cloth | Tyg | 6 |
| 0720 | | | | | | | |
| 0721 | 95 33 027 | | 590,238), TRIM COLOUR | X | Cloth | Tyg | 6 |
| 0722 | 95 33 019 | | 590,239), G41,G44,G43 | X | Cloth | Tyg | 6 |
| 0723 | | | | | | | |
| 0740 | 97 41 489 | | 560) | X | Coated fabric | Vävplast | 6 |
| 0750 | 98 51 098 | | 570) | X | Coated fabric | Vävplast | 6 |
| 0760 | 98 79 909 | | 580) | X | Coated fabric | Vävplast | 6 |
| 0765 | 95 31 674 | | 590) | X | Coated fabric | Vävplast | 6 |
| 0770 | | | | | | | |
| 0800 | 95 40 493 | | 560),TRIM COLOUR C41,C44 | X | Piping | Kederlist | 6 |
| 0815 | 98 07 975 | | 560), TRIM COLOUR C33 | X | Piping | Kederlist | 6 |
| 0816 | | | | | | | |
| 0820 | 95 40 501 | | 570),TRIM COLOUR E41,E44 | X | Piping | Kederlist | 6 |
| 0835 | 98 51 411 | | 570), TRIM COLOUR E33 | X | Piping | Kederlist | 6 |
| 0837 | | | | | | | |
| 0840 | 95 40 519 | | 580),TRIM COLOUR F41,F44 | X | Piping | Kederlist | 6 |
| 0851 | 96 95 172 | | 580), TRIM COLOUR F33 | X | Piping | Kederlist | 6 |
| 085 | | | | | | | |
| 0855 | 95 40 527 | | 590),TRIM COLOUR G41,G44 | X | Piping | Kederlist | 6 |
| 0857 | 95 31 690 | | 590), TRIM COLOUR G33 | X | Piping | Kederlist | 6 |

238. Thickness = 3 MM Tjocklek = 3 MM
239. Thickness = 10 MM Tjocklek = 10 MM
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

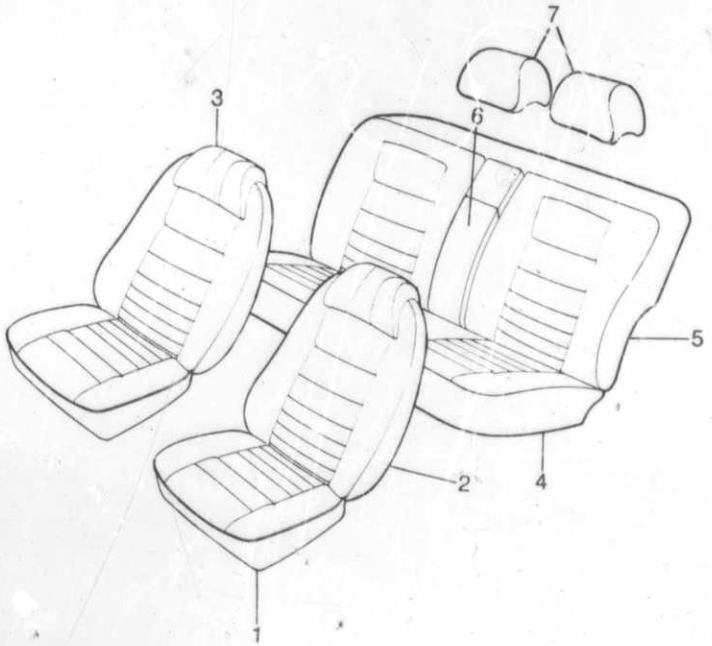


F2544 - 900

Upholstery

# 6-C16

## Covers 1989 500), Horizon pattern

Klädsel

## Klädselpåsar 1989 500), Horisontmönster

| 1398 | Pos | Part No/Art nr | K S | Notes Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | TRIM COLOUR C44 | | | | |
| 0015 | 1 | 95 41 004 | | 560) | 2 | Seat cover | Sitspåse | 6 |
| 0020 | 1 | 95 39 792 | | 560,215) | 2 | Seat cover | Sitspåse | 6 |
| 0025 | 1 | 95 39 644 | | 560,60) | 2 | Seat cover | Sitspåse | 6 |
| 0030 | 2 | 95 39 693 | | 560) | 2 | Back cover | Ryggpåse | 6 |
| 0040 | 2 | 95 39 842 | | 560,215) | 2 | Back cover | Ryggpåse | 6 |
| 0045 | 2 | *95 40 956* | | 560,60) NLS - USE 4052734, 4052742, 4054458, 7971518 | 2 | Back cover | Ryggpåse | 6 |
| 0050 | 3 | 95 39 594 | | 560) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0060 | 3 | 95 39 891 | | 560,215) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0065 | 3 | 95 88 649 | | 560,60) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0070 | 4 | 95 38 976 | | 560), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0075 | 4 | 95 39 271 | | 560,215), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0080 | 4 | 95 39 024 | | 560), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0085 | 4 | 95 39 321 | | 560,215), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0090 | 5 | 95 39 370 | | 560) | 1 | Back cover | Ryggpåse | 6 |
| 0100 | 6 | 95 39 420 | | 560) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0110 | 7 | *95 94 607* | | 560) NLS - USE 9699620 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0330 | | | | TRIM COLOUR E44 | | | | |
| 0340 | 1 | 95 41 038 | | 570) | 2 | Seat cover | Sitspåse | 6 |
| 0350 | 1 | 95 39 826 | | 570,215) | 2 | Seat cover | Sitspåse | 6 |
| 0355 | 1 | 95 39 677 | | 570,60) | 2 | Seat cover | Sitspåse | 6 |
| 0360 | 2 | 95 39 727 | | 570) | 2 | Back cover | Ryggpåse | 6 |
| 0370 | 2 | 95 39 875 | | 570,215) | 2 | Back cover | Ryggpåse | 6 |
| 0375 | 2 | *95 40 980* | | 570,60) NLS - USE 4052734, 4052742, 4054466, 7971518 | 2 | Back cover | Ryggpåse | 6 |
| 0380 | 3 | 95 39 628 | | 570) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0390 | 3 | 95 39 925 | | 570,215) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0395 | 3 | 95 88 872 | | 570,60) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0400 | 4 | 95 39 008 | | 570), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0405 | 4 | 95 39 305 | | 570,215), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0410 | 4 | 95 39 057 | | 570), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0415 | 4 | 95 39 354 | | 570,215), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0420 | 5 | 95 39 404 | | 570) | 1 | Back cover | Ryggpåse | 6 |
| 0440 | 6 | 95 39 453 | | 570) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0450 | 7 | *95 94 615* | | 570) NLS - USE 9699638 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0665 | | | | TRIM COLOUR F44 | | | | |
| 0670 | 1 | 95 41 020 | | 580) | 2 | Seat cover | Sitspåse | 6 |
| 0680 | 1 | 95 39 818 | | 580,215) | 2 | Seat cover | Sitspåse | 6 |
| 0685 | 1 | 95 39 669 | | 580,60) | 2 | Seat cover | Sitspåse | 6 |
| 0690 | 2 | 95 39 719 | | 580) | 2 | Back cover | Ryggpåse | 6 |
| 0700 | 2 | 95 39 867 | | 580,215) | 2 | Back cover | Ryggpåse | 6 |
| 0705 | 2 | *95 40 972* | | 580,60) NLS - USE 4052734, 4052742, 4054474, 7971518 | 2 | Back cover | Ryggpåse | 6 |
| 0710 | 3 | 95 39 610 | | 580) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0720 | 3 | 95 39 917 | | 580,215) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0725 | 3 | 95 88 864 | | 580,60) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0730 | 4 | 95 38 992 | | 580), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0740 | 4 | 95 39 297 | | 580,215), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0745 | 4 | 95 39 040 | | 580), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0747 | 4 | 95 39 297 | | 580,215), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0750 | 5 | 95 39 396 | | 580) | 1 | Back cover | Ryggpåse | 6 |
| 0770 | 6 | 95 39 446 | | 580) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0780 | 7 | *95 94 623* | | 580) NLS - USE 9699646 | 2 | Head restraint cover | Nackstödspåse | 6 |

60. For cars with automatic belts — För bilar med passivt bälte
215. With pocket — Med ficka
500. Also valid for SE 1988 B. — Gäller även för SE 1988 B.
560. Red — Röd
570. Grey — Grå
580. Blue — Blå



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX



| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets | 6-J08 |

Upholstery

# 6-C18 Covers 1989 500), Horizon pattern

Klädsel

## Klädselpåsar 1989 500), Horisontmönster

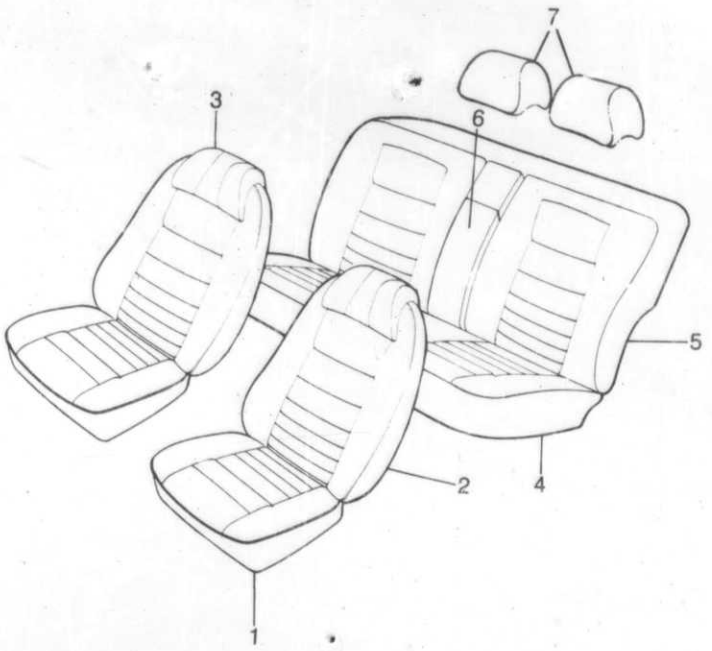


F2544 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| | | | TRIM COLOUR G44 | | | | |
| 1 | 95 41 012 | | 590) | 2 | Seat cover | Sitspåse | 6 |
| 1 | 95 39 800 | | 590,215) | 2 | Seat cover | Sitspåse | 6 |
| 1 | 95 39 651 | | 590,60' | 2 | Seat cover | Sitspåse | 6 |
| 2 | 95 39 701 | | 590) | 2 | Back cover | Ryggpåse | 6 |
| 2 | 95 39 859 | | 590,215) | 2 | Back cover | Ryggpåse | 6 |
| 2 | *95 40 964* | | 590,60) NLS - USE 4052734, 4052742, 4054482, 7971518 | 2 | Back cover | Ryggpåse | 6 |
| 3 | 95 39 602 | | 590) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 3 | 95 39 909 | | 590,215) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 3 | 95 88 856 | | 590,60) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 4 | 95 38 984 | | 590), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 4 | 95 39 289 | | 590,215), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 4 | 95 39 032 | | 590), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 4 | 95 39 339 | | 590,215), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 5 | 95 39 388 | | 590) | 1 | Back cover | Ryggpåse | 6 |
| 6 | 95 39 438 | | 590) | 1 | Arm rest cover | Armstödspåse | 6 |
| 7 | *95 94 631* | | 590) NLS - USE 9699653 | 2 | Head restraint cover | Nackstödspåse | 6 |
| | | | See page 8B-059, 6-C12 | | CLOTH, COATED FABRIC AND PLASTIC STRIPS FOR UPHOLSTERY COVER | TYG, VÄVPLAST OCH KEDERLISTER FÖR KLÄDSELPÅSAR | |

60. For cars with automatic belts För bilar med passivt bälte
215. With pocket Med ficka
500. Also valid for SE 1988B. Gäller även för SE 1988B.
590. Yellow Gul




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

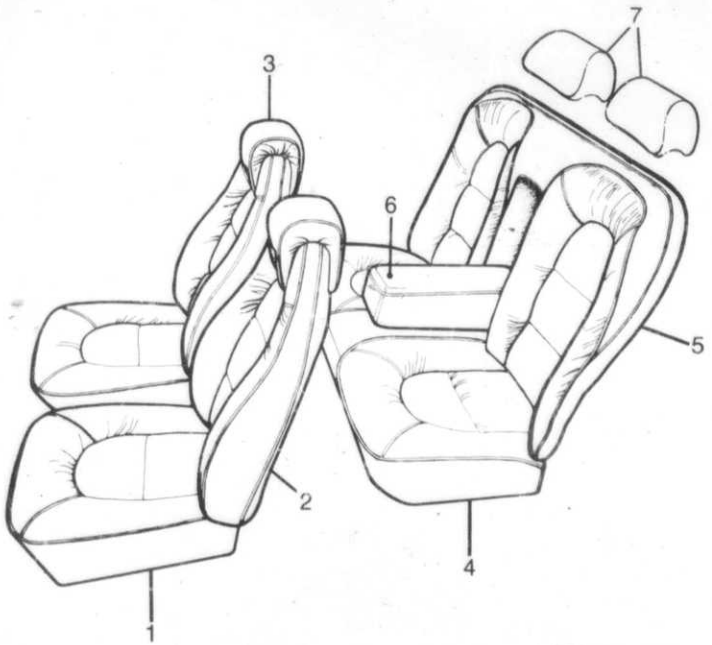


F0046 - 900

# 6-C20

Upholstery
## Covers 1989 500), Contour design

Klädsel
## Klädselpåsar 1989 500), Contour design

| 1399 | Pos | Part No/Art nr | KS | Notes/Anmärkningar | Qty/Antal | Description | Benämning | SL |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | TRIM COLOUR C33 | | | | |
| 0020 | 1 | 95 30 361 | | 560) | 2 | Seat cover | Sitspåse | 6 |
| 0030 | 1 | 40 37 925 | | 560,60) | 2 | Seat cover | Sitspåse | 6 |
| 0040 | 2 | 95 30 379 | | 560) | 2 | Back cover | Ryggpåse | 6 |
| 0050 | 2 | 95 41 228 | | 560,60) | 2 | Back cover | Ryggpåse | 6 |
| 0060 | 3 | 95 30 387 | | 560) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0070 | 3 | 95 72 975 | | 560,60) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0080 | 3 | 96 47 074 | | 560), CV | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0090 | 4 | 95 30 700 | | 560), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0100 | 4 | 96 46 134 | | 560), CV | 1 | Seat cover | Sitspåse | 6 |
| 0110 | 4 | 95 30 759 | | 560), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0120 | 5 | 95 30 650 | | 560) | 1 | Back cover | Ryggpåse | 6 |
| 0130 | 5 | 96 46 142 | | 560), CV | 1 | Back cover | Ryggpåse | 6 |
| 0140 | 6 | 95 30 734 | | 560) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0150 | 7 | *95 79 566* | | 560) NLS - USE 9699539 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0160 | 7 | 96 46 647 | | 560), CV | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0170 | | | | TRIM COLOUR C43 | | | | |
| 0180 | 1 | 91 62 223 | | 560), CV | 2 | Seat cover | Sitspåse | 6 |
| 0190 | 2 | 91 62 199 | | 560), CV | 2 | Back cover | Ryggpåse | 6 |
| 0200 | 3 | 95 39 891 | | 560), CV | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0210 | 4 | 91 62 280 | | 560), CV | 1 | Seat cover | Sitspåse | 6 |
| 0220 | 5 | 91 62 256 | | 560), CV | 1 | Back cover | Ryggpåse | 6 |
| 0230 | 7 | 91 62 397 | | 560), CV | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0240 | | | | TRIM COLOUR E33 | | | | |
| 0250 | 1 | 98 66 351 | | 570) | 2 | Seat cover | Sitspåse | 6 |
| 0260 | 1 | 40 37 933 | | 570,60) | 2 | Seat cover | Sitspåse | 6 |
| 0270 | 2 | 98 67 789 | | 570) | 2 | Back cover | Ryggpåse | 6 |
| 0280 | 2 | *95 41 236* | | 570,60) NLS - USE 4052734, 4052742, 4054565, 7971518 | 2 | Back cover | Ryggpåse | 6 |
| 0290 | 3 | *95 33 944* | | 570) NLS - USE 9647447 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0300 | 3 | 95 78 519 | | 570,60) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0310 | 3 | *96 47 447* | | 570), CV NLS - USE 4167409 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0320 | 4 | 98 76 541 | | 570), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0330 | 4 | 98 84 289 | | 570), CV | 1 | Seat cover | Sitspåse | 6 |
| 0340 | 4 | 98 76 558 | | 570), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0350 | 5 | 98 76 574 | | 570) | 1 | Back cover | Ryggpåse | 6 |
| 0360 | 5 | 96 46 167 | | 570), CV | 1 | Back cover | Ryggpåse | 6 |
| 0370 | 6 | 98 76 582 | | 570) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0380 | 7 | *95 79 574* | | 570) NLS - USE 9699547 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0390 | 7 | 96 47 462 | | 570), CV | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0400 | | | | TRIM COLOUR E43 | | | | |
| 0410 | 1 | 91 62 231 | | 570), CV | 2 | Seat cover | Sitspåse | 6 |
| 0420 | 2 | 91 62 207 | | 570), CV | 2 | Back cover | Ryggpåse | 6 |
| 0430 | 3 | 95 39 925 | | 570), CV | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0440 | 4 | 91 62 298 | | 570), CV | 1 | Seat cover | Sitspåse | 6 |
| 0450 | 5 | 91 62 264 | | 570), CV | 1 | Back cover | Ryggpåse | 6 |
| 0460 | 7 | 91 62 405 | | 570), CV | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0470 | | | | | | | | |

60. For cars with automatic belts  För bilar med passivt bälte
500. Also valid for SE 1988B.  Gäller även för SE 1988B.
560. Red  Röd
570. Grey  Grå



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-C22

## Covers 1989 500), Contour design

## Klädselpåsar 1989 500), Contour design

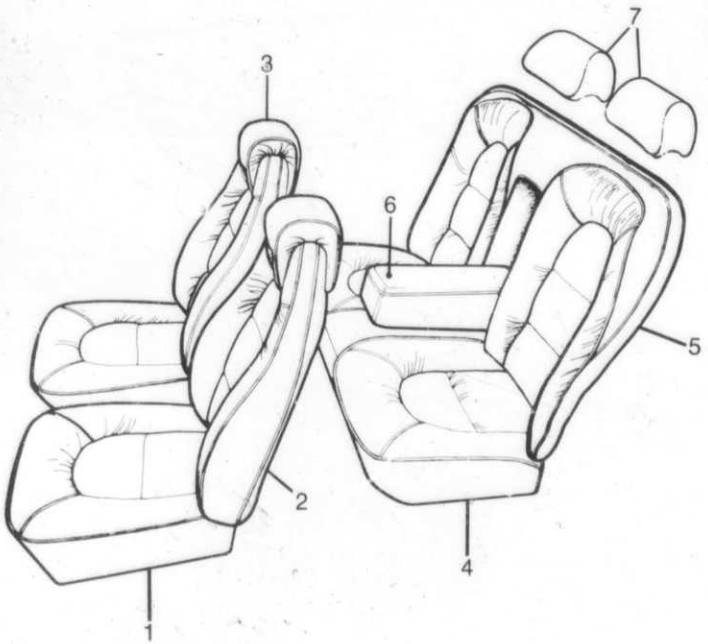


F0046 - 900

| 1399 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0480 | | | | TRIM COLOUR F33 | | | | |
| 0490 | 1 | 40 39 749 | | 580) | 2 | Seat cover | Sitspåse | 6 |
| 0500 | 1 | 40 40 077 | | 580,60) | 2 | Seat cover | Sitspåse | 6 |
| 0510 | 2 | 40 39 756 | | 580) | 2 | Back cover | Ryggpåse | 6 |
| 0520 | 2 | 40 40 085 | | 580,60) | 2 | Back cover | Ryggpåse | 6 |
| 0530 | 3 | 40 39 764 | | 580) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0540 | 3 | 40 38 329 | | 580,60) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0550 | 4 | 40 40 200 | | 580), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0560 | 4 | 40 40 630 | | 580), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0570 | 5 | 40 40 218 | | 580) | 1 | Back cover | Ryggpåse | 6 |
| 0580 | 6 | 40 40 226 | | 580) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0590 | 7 | 40 39 624 | | 580) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0600 | | | | TRIM COLOUR G33 | | | | |
| 0610 | 1 | 95 35 840 | | 590) | 2 | Seat cover | Sitspåse | 6 |
| 0620 | 1 | 40 37 958 | | 590,60) | 2 | Seat cover | Sitspåse | 6 |
| 0630 | 2 | 95 35 857 | | 590) | 2 | Back cover | Ryggpåse | 6 |
| 0640 | 2 | 95 41 574 | | 590,60) | 2 | Back cover | Ryggpåse | 6 |
| 0650 | 3 | 95 35 865 | | 590) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0660 | 3 | 95 89 201 | | 590,60) | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0670 | 3 | *96 48 239* | | 590), CV NLS - USE 4313482 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0680 | 4 | 95 37 846 | | 590), 2SN, 3CK | 1 | Seat cover | Sitspåse | 6 |
| 0690 | 4 | 98 24 368 | | 590), CV | 1 | Seat cover | Sitspåse | 6 |
| 0700 | 4 | 95 37 838 | | 590), 4SN, 5CK | 1 | Seat cover | Sitspåse | 6 |
| 0710 | 5 | 95 37 853 | | 590) | 1 | Back cover | Ryggpåse | 6 |
| 0720 | 5 | 98 24 376 | | 590), CV | 1 | Back cover | Ryggpåse | 6 |
| 0730 | 6 | 95 37 861 | | 590) | 1 | Arm rest cover | Armstödspåse | 6 |
| 0740 | 7 | *95 85 951* | | 590) NLS - USE 9699554 | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0750 | 7 | 96 48 486 | | 590), CV | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0760 | | | | TRIM COLOUR G43 | | | | |
| 0770 | 1 | 91 62 249 | | 590), CV | 2 | Seat cover | Sitspåse | 6 |
| 0780 | 2 | 91 62 215 | | 590), CV | 2 | Back cover | Ryggpåse | 6 |
| 0790 | 3 | 95 39 909 | | 590), CV | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0800 | 4 | 91 62 306 | | 590), CV | 1 | Seat cover | Sitspåse | 6 |
| 0810 | 5 | 91 62 272 | | 590), CV | 1 | Back cover | Ryggpåse | 6 |
| 0820 | 7 | 91 62 413 | | 590), CV | 2 | Head restraint cover | Nackstödspåse | 6 |
| 0830 | | | | | | | | |
| 0840 | | | | See page 8B-059, 6-C12 | | CLOTH, COATED FABRIC AND PLASTIC STRIPS FOR UPHOLSTERY COVER | TYG, VÄVPLAST OCH KEDERLISTER FÖR KLÄDSELPÅSAR | |
| 0850 | | | | | | | | |
| 0860 | | | | | | | | |
| 0879 | | | | | | | | |

60. For cars with automatic belts  För bilar med passivt bälte
500. Also valid for SE 1988B.  Gäller även för SE 1988B.
580. Blue  Blå
590. Yellow  Gul




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

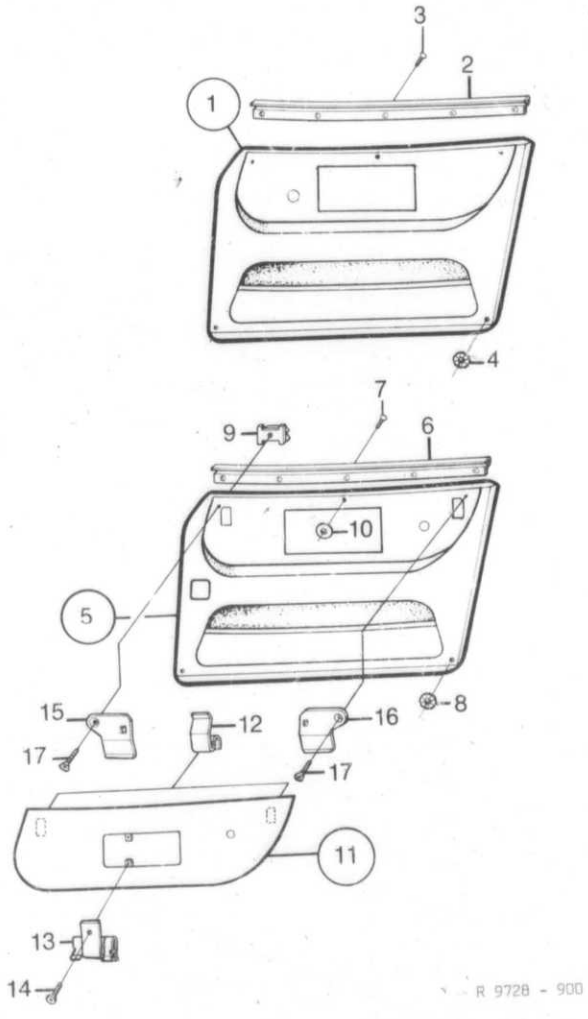


Upholstery

# 6-C24

## Door trim 1986
## Front, 2SN, 3CK, CV

Klädsel

## Dörrklädsel 1986
## Fram, 2SN, 3CK, CV

| 1407 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 98 45 371 | | 590), LH,TRIM COLOUR A11 | 1 | Door trim | Dörrklädsel | 6 |
| 0030 | 1 | 98 45 389 | | 590), RH,TRIM COLOUR A11 | 1 | Door trim | Dörrklädsel | 6 |
| 0060 | 1 | 98 45 330 | | 600), LH,TRIM COLOUR B11 | 1 | Door trim | Dörrklädsel | 6 |
| 0080 | 1 | 98 45 348 | | 600), RH,TRIM COLOUR B11 | 1 | Door trim | Dörrklädsel | 6 |
| 0110 | 1 | 98 67 946 | | 560), LH,TRIM COLOUR C11 | 1 | Door trim | Dörrklädsel | 6 |
| 0130 | 1 | 98 67 953 | | 560), RH,TRIM COLOUR C11 | 1 | Door trim | Dörrklädsel | 6 |
| 0160 | 1 | 98 45 397 | | 580), LH,TRIM COLOUR D11 | 1 | Door trim | Dörrklädsel | 6 |
| 0180 | 1 | 98 45 405 | | 580), RH,TRIM COLOUR D11 | 1 | Door trim | Dörrklädsel | 6 |
| 0200 | 2 | 98 31 991 | | LH | 1 | .Strip | .List | 6 |
| 0210 | 2 | 98 32 007 | | RH | 1 | .Strip | .List | 6 |
| 0220 | 3 | 94 25 232 | | | 10 | .Screw | .Skruv | 5 |
| 0230 | 4 | 94 65 816 | | 600) | 10 | Plastic washer | Plastbricka | 5 |
| 0240 | 4 | 97 42 149 | | 580) | 10 | Plastic washer | Plastbricka | 5 |
| 0250 | 4 | 97 04 883 | | 560) | 10 | Plastic washer | Plastbricka | 5 |
| 0260 | 4 | 97 11 961 | | 590) | 10 | Plastic washer | Plastbricka | 5 |
| 0270 | 4 | 98 67 896 | | 610) | 10 | Plastic washer | Plastbricka | 5 |
| 0280 | | | | | | | | |
| 0290 | | | | | | DOOR TRIM FOR UPHOLSTERY PLATE | DÖRRKLÄDSEL FÖR KLÄDSELPLATTA | |
| 0300 | | | | | | | | |
| 0320 | | | | TRIM COLOUR A22,A23,A33 | | | | |
| 0325 | 5 | 98 42 170 | | 590), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0330 | 5 | 98 42 188 | | 590), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0370 | | | | TRIM COLOUR B22, B23 | | | | |
| 0375 | 5 | 98 42 139 | | 600), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0380 | 5 | 98 42 147 | | 600), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0420 | | | | TRIM COLOUR C22,C23,C33 | | | | |
| 0425 | 5 | 98 42 154 | | 560), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0430 | 5 | 98 42 162 | | 560), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0470 | | | | TRIM COLOUR D22, D23 | | | | |
| 0475 | 5 | 98 42 196 | | 580), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0480 | 5 | 98 42 204 | | 580), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0520 | | | | TRIM COLOUR E22,E23,E33 | | | | |
| 0525 | 5 | *98 67 870* | | 570), LH NLS - USE 4125191 | 1 | Door trim | Dörrklädsel | 6 |
| 0530 | 5 | 98 67 888 | | 570), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0560 | 5 | *98 84 396* | | 570), CV, LH NLS - USE 9646100 | 1 | Door trim | Dörrklädsel | 6 |
| 0580 | 5 | *98 84 412* | | 570), CV, RH NLS - USE 9646118 | 1 | Door trim | Dörrklädsel | 6 |
| 0590 | | | | | | | | |
| 0600 | 6 | 98 31 991 | | LH | 1 | .Strip | .List | 6 |
| 0610 | 6 | 98 32 007 | | RH | 1 | .Strip | .List | 6 |
| 0620 | 7 | 94 25 232 | | | 10 | .Screw | .Skruv | 5 |
| 0630 | 8 | 94 65 816 | | 600) | 4 | Plastic washer | Plastbricka | 5 |
| 0640 | 8 | 97 42 149 | | 580) | 4 | Plastic washer | Plastbricka | 5 |
| 0650 | 8 | 97 04 883 | | 560) | 4 | Plastic washer | Plastbricka | 5 |
| 0660 | 8 | 97 11 961 | | 590) | 4 | Plastic washer | Plastbricka | 5 |
| 0670 | 8 | 98 67 896 | | 610) | 4 | Plastic washer | Plastbricka | 5 |
| 0680 | 9 | 86 01 916 | | | 4 | Clip nut | Clipsmutter | 3 |
| 0690 | 10 | 79 16 497 | | | 2 | Washer | Bricka | 5 |

560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun
610. Black Svart



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX



| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

Upholstery

# 6-D02 Door trim 1986 Front, 2SN, 3CK, CV

Klädsel

## Dörrklädsel 1986 Fram, 2SN, 3CK, CV

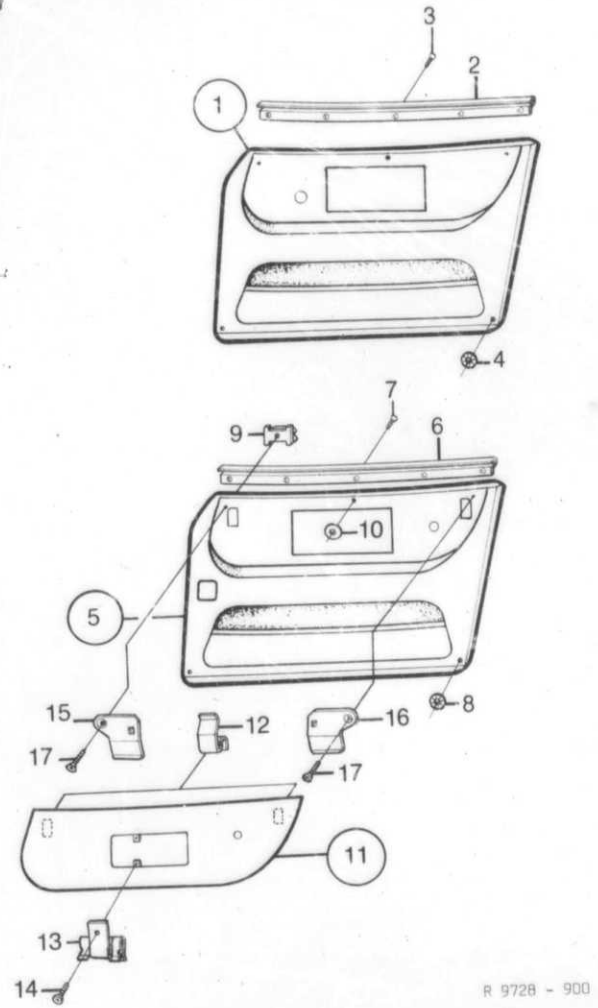


R 9728 - 900

| 1407 Pos | Part No/Art nr | K S | Note/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0730 | | | TRIM COLOUR A22,A23,A33 | | | | |
| 0735 11 | 98 42 774 | | 590), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0740 11 | 98 42 782 | | 590), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0770 11 | 98 70 874 | | 590,34), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0790 11 | 98 70 882 | | 590,34), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0830 | | | TRIM COLOUR B22, B23 | | | | |
| 0835 11 | 98 42 733 | | 600), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0840 11 | 98 42 741 | | 600), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0870 11 | 98 70 833 | | 600,34), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0890 11 | 98 70 841 | | 600,34), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0930 | | | TRIM COLOUR C22,C23,C33 | | | | |
| 0935 11 | 98 68 423 | | 560), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0940 11 | 98 68 431 | | 560), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0970 11 | 98 70 858 | | 560,34), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0990 11 | 98 70 866 | | 560,34), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1030 | | | TRIM COLOUR D22, D23 | | | | |
| 1035 11 | 98 42 790 | | 580), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1040 11 | 98 42 808 | | 580), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1070 11 | 98 70 890 | | 580,34), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1090 11 | 98 70 908 | | 580,34), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1130 | | | TRIM COLOUR E22,E23,E33 | | | | |
| 1135 11 | 98 68 449 | | 570), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1140 11 | 98 68 456 | | 570), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1170 11 | 98 70 916 | | 570,34), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1190 11 | 98 70 924 | | 570,34), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1200 | | | | | | | |
| 1210 12 | 98 12 058 | | | 4 | ,Clamp | ,Klämma | 5 |
| 1220 13 | 98 30 050 | | | 4 | ,Clamp | ,Klämma | 5 |
| 1230 14 | 79 22 206 | | | X | Screw | Skruv | 5 |
| 1240 15 | 98 12 033 | | LH | 2 | Clamp | Klämma | 6 |
| 1250 16 | 98 12 041 | | RH | 2 | Clamp | Klämma | 6 |
| 1260 17 | 79 72 201 | | | 10 | Screw | Skruv | 5 |

34. For electrical window regulator. För elektrisk fönsterhiss.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets | 6-J08 |

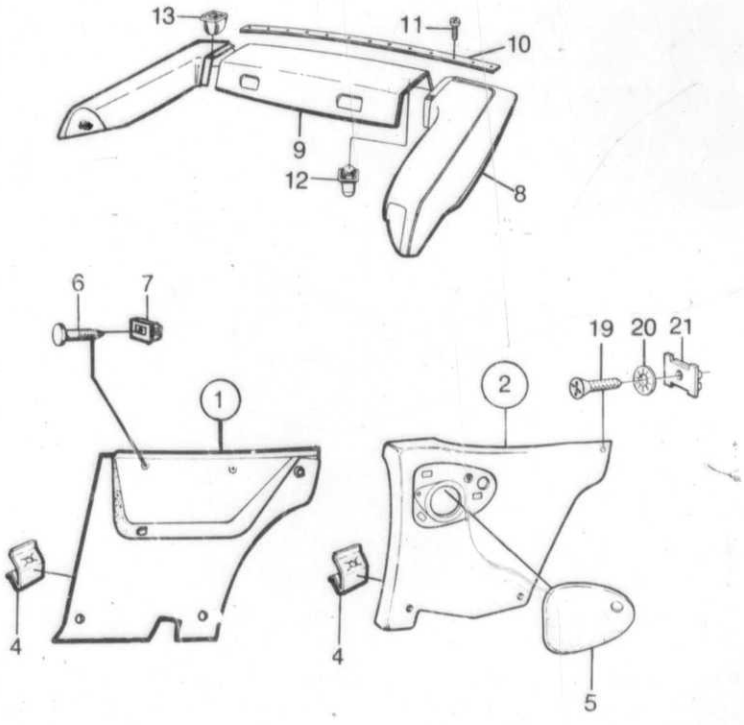


F2545 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| | | | TRIM COLOUR A11, A22, A23, A33 | | | | |
| 1 | 98 40 000 | | 590), LH | 1 | Side lining | Sidklädsel | 6 |
| 1 | 98 40 018 | | 590), RH | 1 | Side lining | Sidklädsel | 6 |
| | | | TRIM COLOUR B11,B22,B23 | | | | |
| 1 | 98 39 960 | | 600), LH | 1 | Side lining | Sidklädsel | 6 |
| 1 | 98 39 978 | | 600), RH | 1 | Side lining | Sidklädsel | 6 |
| | | | TRIM COLOUR C11, C22, C23, C33 | | | | |
| 1 | 98 39 986 | | 560), LH | 1 | Side lining | Sidklädsel | 6 |
| 1 | 98 39 994 | | 560), RH | 1 | Side lining | Sidklädsel | 6 |
| | | | TRIM COLOUR D11,D22,D23 | | | | |
| 1 | 98 40 026 | | 580), LH | 1 | Side lining | Sidklädsel | 6 |
| 1 | 98 40 034 | | 580), RH | 1 | Side lining | Sidklädsel | 6 |
| | | | TRIM COLOUR E22,E23,E33 | | | | |
| 1 | 98 67 805 | | 570), LH | 1 | Side lining | Sidklädsel | 6 |
| 1 | 98 67 813 | | 570), RH | 1 | Side lining | Sidklädsel | 6 |
| 2 | 98 81 731 | | 570), LH, CV | 1 | Side lining | Sidklädsel | 6 |
| 2 | 98 81 749 | | 570), RH, CV | 1 | Side lining | Sidklädsel | 6 |
| 4 | 94 00 334 | | | X | ▪Clip | ▪Clips | 3 |
| | | | | | | | |
| 5 | 98 84 529 | | 570), LH, CV | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 5 | 98 84 537 | | 570), RH, CV | 1 | Loudspeaker grille | Högtalargaller | 5 |
| | | | | | | | |
| 6 | 94 73 406 | | 600) | X | Special screw | Snabbskruv | 5 |
| 6 | 97 05 906 | | 560) | X | Special screw | Snabbskruv | 5 |
| 6 | 98 08 106 | | 580) | X | Special screw | Snabbskruv | 5 |
| 6 | 97 12 845 | | 590) | X | Special screw | Snabbskruv | 5 |
| 6 | 98 67 821 | | 610) | X | Special screw | Snabbskruv | 5 |
| 7 | 84 52 898 | | | X | Quick nut | Snabbmutter | 3 |
| | | | | | | | |
| 8 | 98 84 586 | | 570), LH, CV | 1 | Top cover | Sufflettkåpa | 5 |
| 8 | 98 84 594 | | 570), RH, CV | 1 | Top cover | Sufflettkåpa | 5 |
| 9 | 98 84 578 | | 570), CV | 1 | Top cover | Sufflettkåpa | 5 |
| 10 | | | See page 8A-025, 5-B02 | 1 | Strip | List | |
| 11 | | | See page 8A-025, 5-B02 | 12 | Screw | Skruv | |
| 12 | 98 83 422 | | CV | 2 | Clip | Clips | 5 |
| 13 | 98 83 430 | | CV | 2 | Clip | Clips | 5 |
| 19 | 79 72 201 | | CV | 10 | Screw | Skruv | 5 |
| 20 | 98 67 896 | | 610), CV | 10 | Plastic washer | Plastbricka | 5 |
| 21 | 86 01 916 | | CV | 10 | Clip nut | Clipsmutter | 3 |
| | *96 98 325* | | 570), LH, CV | 1 | Repair kit | Reparationssats | 6 |
| | | | See page 8B-223, 6-J08 NLS | | | | |
| | *96 98 333* | | 570), RH, CV | 1 | Repair kit | Reparationssats | 6 |
| | | | See page 8B-223, 6-J08 NLS | | | | |

560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun
610. Black Svart



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-D06

## Door trim 1986
## Front, 4SN, 5CK, CD

## Dörrklädsel 1986
## Fram, 4SN, 5CK, CD

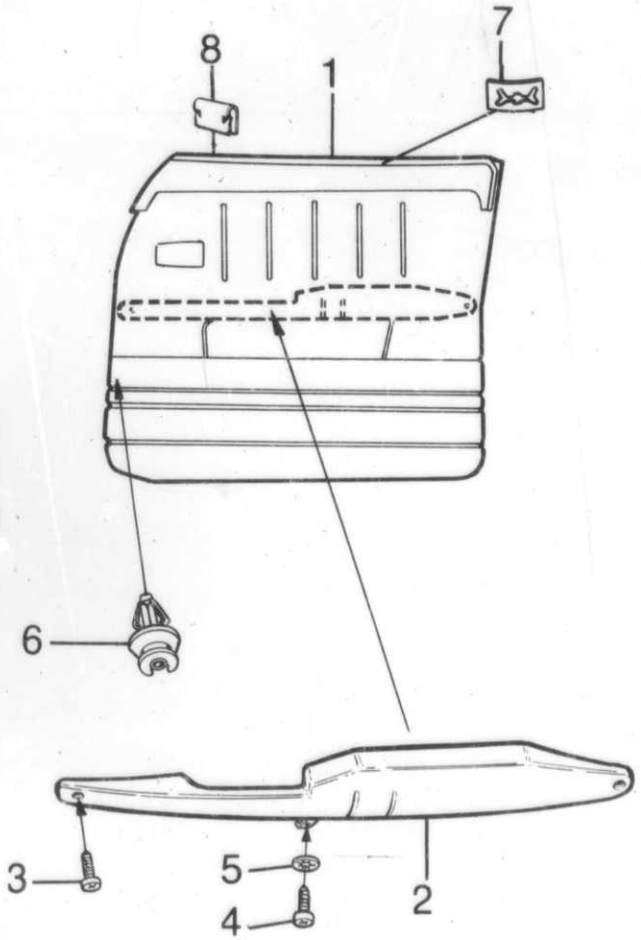


R 9730 - 900

| 1409 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | TRIM COLOUR A11, A22, | | | | |
| 0020 | | | | A23, A33 | | | | |
| 0025 | 1 | 98 37 667 | | 590), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0030 | 1 | 98 37 675 | | 590), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0040 | 1 | 98 69 702 | | 590,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0050 | 1 | 98 69 710 | | 590,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0060 | 1 | 98 19 939 | | 590), CD, LH | 1 | Door trim | Dörrklädsel | 6 |
| 0070 | 1 | 98 19 947 | | 590), CD, RH | 1 | Door trim | Dörrklädsel | 6 |
| 0080 | 1 | 98 20 713 | | 590,2), CD, LH | 1 | Door trim | Dörrklädsel | 6 |
| 0090 | 1 | 98 20 721 | | 590,2), CD, RH | 1 | Door trim | Dörrklädsel | 6 |
| 0100 | 2 | 98 67 425 | | 590), LH | 1 | Arm rest | Armstöd | 6 |
| 0110 | 2 | 98 67 433 | | 590), RH | 1 | Arm rest | Armstöd | 6 |
| 0140 | | | | TRIM COLOUR B11,B22,B23 | | | | |
| 0145 | 1 | 98 37 642 | | 600), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0150 | 1 | 98 37 659 | | 600), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0160 | 1 | 98 69 660 | | 600,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0170 | 1 | 98 69 678 | | 600,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0180 | 1 | *98 22 651* | | 600), CD, LH NLS | 1 | Door trim | Dörrklädsel | 6 |
| 0190 | 1 | *98 22 669* | | 600), CD, RH NLS - USE 9819905 | 1 | Door trim | Dörrklädsel | 6 |
| 0200 | 2 | 97 05 765 | | 600), LH | 1 | Arm rest | Armstöd | 6 |
| 0210 | 2 | 97 05 773 | | 600), RH | 1 | Arm rest | Armstöd | 6 |
| 0230 | | | | TRIM COLOUR C11, C22, | | | | |
| 0240 | | | | C23, C33 | | | | |
| 0245 | 1 | 98 68 019 | | 560), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0250 | 1 | 98 68 027 | | 560), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0260 | 1 | 98 69 686 | | 560,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0270 | 1 | 98 69 694 | | 560,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0280 | 1 | 98 19 913 | | 560), CD, LH | 1 | Door trim | Dörrklädsel | 6 |
| 0290 | 1 | 98 19 921 | | 560), CD, RH | 1 | Door trim | Dörrklädsel | 6 |
| 0300 | 1 | 98 20 739 | | 560,2), CD, LH | 1 | Door trim | Dörrklädsel | 6 |
| 0310 | 1 | 98 20 747 | | 560,2), CD, RH | 1 | Door trim | Dörrklädsel | 6 |
| 0320 | 2 | 98 50 967 | | 560), LH | 1 | Arm rest | Armstöd | 6 |
| 0330 | 2 | 98 50 975 | | 560), RH | 1 | Arm rest | Armstöd | 6 |
| 0360 | | | | TRIM COLOUR D11,D22,D23 | | | | |
| 0365 | 1 | 98 37 683 | | 580), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0370 | 1 | 98 37 691 | | 580), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0380 | 1 | 98 69 728 | | 580,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0390 | 1 | 98 69 736 | | 580,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0400 | 1 | 98 19 954 | | 580), CD, LH | 1 | Door trim | Dörrklädsel | 6 |
| 0410 | 1 | 98 19 962 | | 580), CD, RH | 1 | Door trim | Dörrklädsel | 6 |
| 0420 | 2 | 97 42 107 | | 580), LH | 1 | Arm rest | Armstöd | 6 |
| 0430 | 2 | 97 42 115 | | 580), RH | 1 | Arm rest | Armstöd | 6 |
| 0460 | | | | TRIM COLOUR E22,E23,E33 | | | | |
| 0465 | 1 | 98 68 134 | | 570), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0470 | 1 | 98 68 142 | | 570), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0480 | 1 | 98 69 744 | | 570,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0490 | 1 | 98 69 751 | | 570,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0500 | 1 | 98 22 578 | | 570), CD, LH | 1 | Door trim | Dörrklädsel | 6 |
| 0510 | 1 | 98 22 586 | | 570), CD, RH | 1 | Door trim | Dörrklädsel | 6 |
| 0520 | 1 | 98 22 610 | | 570,2), CD, LH | 1 | Door trim | Dörrklädsel | 6 |
| 0530 | 1 | 98 22 628 | | 570,2), CD, RH | 1 | Door trim | Dörrklädsel | 6 |
| 0540 | 2 | 98 68 977 | | 570), LH | 1 | Arm rest | Armstöd | 6 |
| 0550 | 2 | 98 68 985 | | 570), RH | 1 | Arm rest | Armstöd | 6 |
| 0560 | | | | | | | | |
| 0570 | 3 | 79 22 396 | | | 4 | Screw | Skruv | 5 |

2. For cars with leather covers. För bilar med läderklädsel.
34. For electrical window regulator. För elektrisk fönsterhiss.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-D08

## Door trim 1986
## Front, 4SN, 5CK, CD

## Dörrklädsel 1986
## Fram, 4SN, 5CK, CD

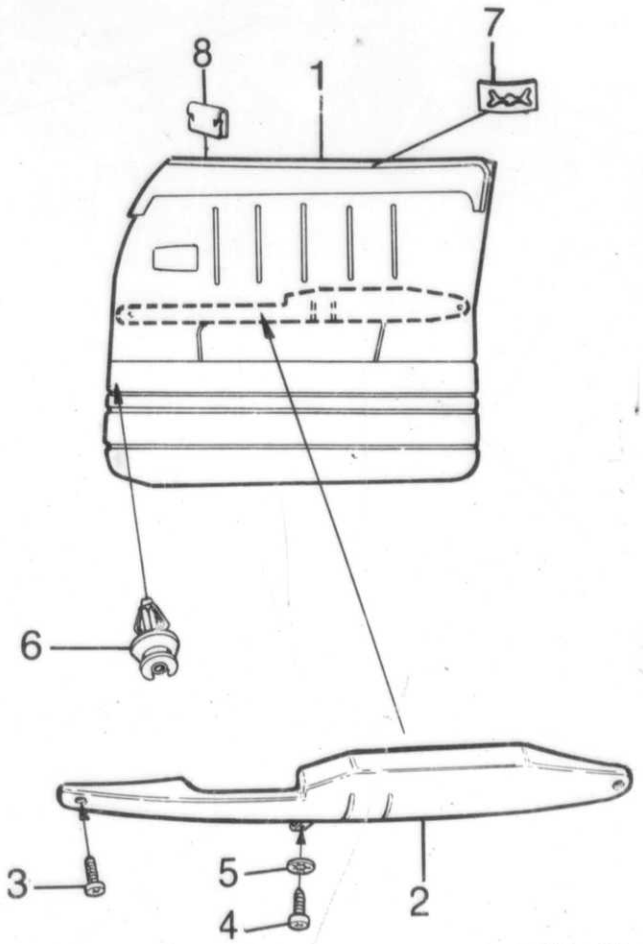



| 1409 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0580 | 4 | 79 34 797 | | | 2 | Screw | Skruv | 5 |
| 0590 | 5 | 79 15 564 | | | 2 | Star washer | Taggbricka | 5 |
| 0600 | 6 | 94 73 869 | | | 20 | Clip | Clips | 5 |
| 0610 | 6 | 94 73 869 | | CD | 14 | Clip | Clips | 5 |
| 0620 | 7 | 84 88 447 | | | 10 | Clip | Clips | 5 |
| 0630 | 8 | 94 59 975 | | CD | 2 | Clip | Clips | 5 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

8B GROUP INDEX

| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

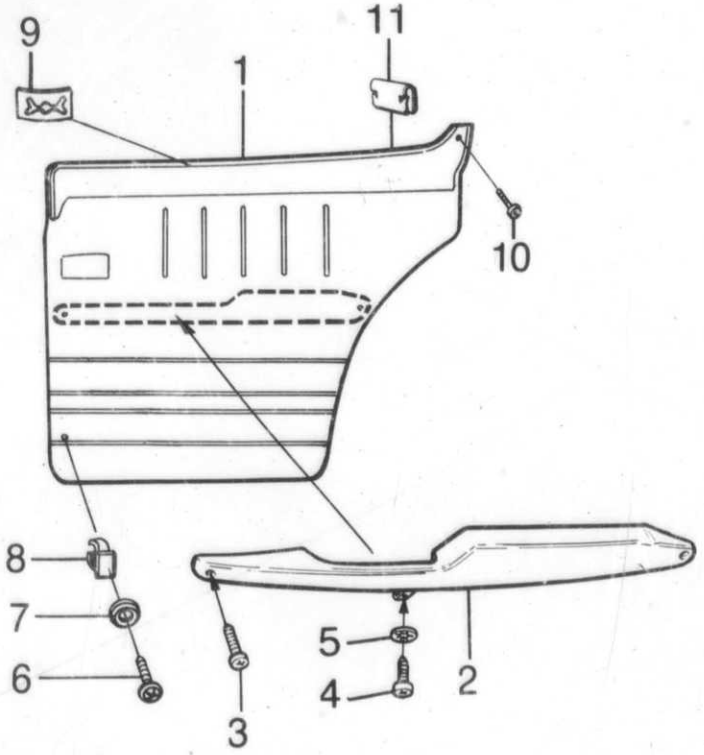


R 9731 - 900

Upholstery

# 6-D10

## Door trim 1986
## Rear, 4SN, 5CK, CD

Klädsel

## Dörrklädsel 1986
## Bak, 4SN, 5CK, CD

| 1410 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | TRIM COLOUR A11, A22, | | | | |
| 0020 | | | | A23, A33 | | | | |
| 0025 | 1 | 98 37 741 | | 590), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0030 | 1 | 98 37 758 | | 590), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0040 | 1 | 98 70 387 | | 590,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0050 | 1 | 98 70 395 | | 590,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0060 | 1 | 98 22 073 | | 590), CD, LH | 1 | Door trim | Dörrklädsel | 6 |
| 0070 | 1 | 98 22 081 | | 590), CD, RH | 1 | Door trim | Dörrklädsel | 6 |
| 0080 | 1 | 98 22 115 | | 590,2), CD, LH | 1 | Door trim | Dörrklädsel | 6 |
| 0090 | 1 | 98 22 123 | | 590,2), CD, RH | 1 | Door trim | Dörrklädsel | 6 |
| 0100 | 2 | 98 67 441 | | 590), LH | 1 | Arm rest | Armstöd | 6 |
| 0110 | 2 | 98 67 458 | | 590), RH | 1 | Arm rest | Armstöd | 6 |
| 0120 | 2 | 97 18 255 | | 590), CD, LH | 1 | Arm rest | Armstöd | 6 |
| 0130 | 2 | 97 18 263 | | 590), CD, RH | 1 | Arm rest | Armstöd | 6 |
| 0160 | | | | TRIM COLOUR B11,B22,B23 | | | | |
| 0165 | 1 | 98 37 725 | | 600), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0170 | 1 | 98 37 733 | | 600), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0180 | 1 | 98 70 346 | | 600,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0190 | 1 | 98 70 353 | | 600,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0200 | 1 | *98 22 677* | | 600), CD, LH NLS | 1 | Door trim | Dörrklädsel | 6 |
| 0210 | 1 | *98 22 685* | | 600), CD, RH NLS | 1 | Door trim | Dörrklädsel | 6 |
| 0220 | 2 | *97 05 567* | | 600), LH NLS | 1 | Arm rest | Armstöd | 6 |
| 0230 | 2 | 97 05 575 | | 600), RH | 1 | Arm rest | Armstöd | 6 |
| 0240 | 2 | 97 05 765 | | 600), CD, LH | 1 | Arm rest | Armstöd | 6 |
| 0250 | 2 | 97 05 773 | | 600), CD, RH | 1 | Arm rest | Armstöd | 6 |
| 0270 | | | | TRIM COLOUR C11, C22, | | | | |
| 0280 | | | | C23, C33 | | | | |
| 0285 | 1 | 98 68 571 | | 560), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0290 | 1 | 98 68 589 | | 560), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0300 | 1 | 98 70 361 | | 560,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0310 | 1 | 98 70 379 | | 560,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0320 | 1 | 98 22 057 | | 560), CD, LH | 1 | Door trim | Dörrklädsel | 6 |
| 0330 | 1 | 98 22 065 | | 560), CD, RH | 1 | Door trim | Dörrklädsel | 6 |
| 0340 | 1 | 98 22 131 | | 560,2), CD, LH | 1 | Door trim | Dörrklädsel | 6 |
| 0350 | 1 | 98 22 149 | | 560,2), CD, RH | 1 | Door trim | Dörrklädsel | 6 |
| 0360 | 2 | 98 50 983 | | 560), LH | 1 | Arm rest | Armstöd | 6 |
| 0370 | 2 | 98 50 991 | | 560), RH | 1 | Arm rest | Armstöd | 6 |
| 0380 | 2 | 97 05 781 | | 560), CD, LH | 1 | Arm rest | Armstöd | 6 |
| 0390 | 2 | 97 05 799 | | 560), CD, RH | 1 | Arm rest | Armstöd | 6 |
| 0420 | | | | TRIM COLOUR D11,D22,D23 | | | | |
| 0425 | 1 | 98 37 766 | | 580), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0430 | 1 | 98 37 774 | | 580), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0440 | 1 | 98 70 403 | | 580,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0450 | 1 | 98 70 411 | | 580,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0460 | 1 | 98 22 099 | | 580), CD, LH | 1 | Door trim | Dörrklädsel | 6 |
| 0470 | 1 | 98 22 107 | | 580), CD, RH | 1 | Door trim | Dörrklädsel | 6 |
| 0480 | 2 | 97 42 123 | | 580), LH | 1 | Arm rest | Armstöd | 6 |
| 0490 | 2 | 97 42 131 | | 580), RH | 1 | Arm rest | Armstöd | 6 |
| 0500 | 2 | 94 86 879 | | 580), CD, LH | 1 | Arm rest | Armstöd | 6 |
| 0510 | 2 | 94 86 903 | | 580), CD, RH | 1 | Arm rest | Armstöd | 6 |
| 0520 | | | | | | | | |

2. For cars with leather covers. För bilar med läderklädsel.
34. For electrical window regulator. För elektrisk fönsterhiss.
560. Red Röd
580. Blue Blå
590. Yellow Gul
600. Brown Brun



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-D12

## Door trim 1986
## Rear, 4SN, 5CK, CD

## Dörrklädsel 1986
## Bak, 4SN, 5CK, CD

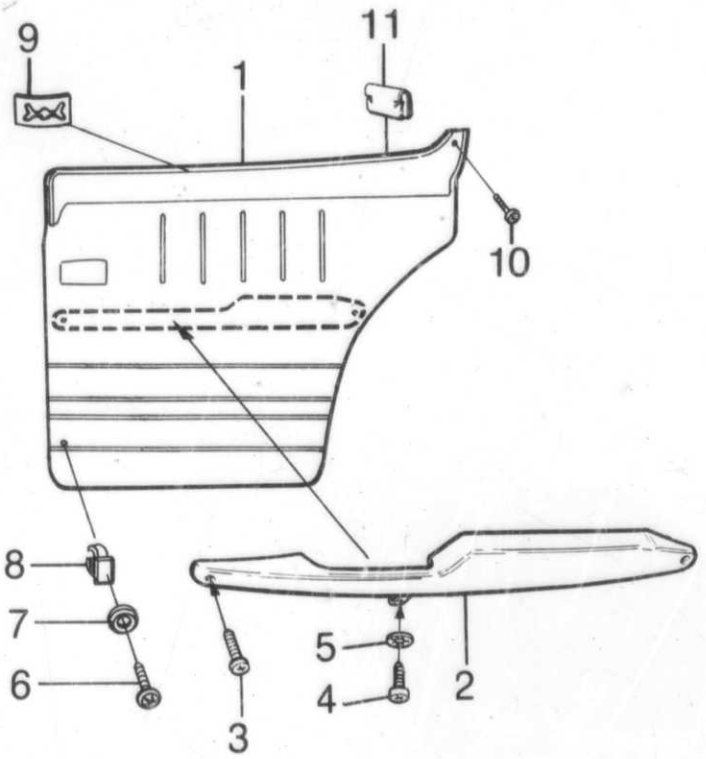


R 9731 - 900

| 1410 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0540 | | | | TRIM COLOUR E22,E23,E33 | | | | |
| 0545 | 1 | 98 68 597 | | 570), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0550 | 1 | 98 68 605 | | 570), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0560 | 1 | 98 70 429 | | 570,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0570 | 1 | 98 70 437 | | 570,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0580 | 1 | 98 22 594 | | 570), CD, LH | 1 | Door trim | Dörrklädsel | 6 |
| 0590 | 1 | *98 22 602* | | 570), CD, RH NLS | 1 | Door trim | Dörrklädsel | 6 |
| 0600 | 1 | 98 22 636 | | 570,2), CD, LH | 1 | Door trim | Dörrklädsel | 6 |
| 0610 | 1 | 98 22 644 | | 570,2), CD, RH | 1 | Door trim | Dörrklädsel | 6 |
| 0620 | 2 | 98 68 993 | | 570), LH | 1 | Arm rest | Armstöd | 6 |
| 0630 | 2 | 98 69 009 | | 570), RH | 1 | Arm rest | Armstöd | 6 |
| 0640 | 2 | 98 68 977 | | 570), CD, LH | 1 | Arm rest | Armstöd | 6 |
| 0650 | 2 | 98 68 985 | | 570), CD, RH | 1 | Arm rest | Armstöd | 6 |
| 0660 | | | | | | | | |
| 0670 | 3 | 79 22 396 | | | 8 | Screw | Skruv | 5 |
| 0680 | 4 | 79 34 797 | | CD | 2 | Screw | Skruv | 5 |
| 0690 | 5 | 79 15 564 | | CD | 2 | Star washer | Taggbricka | 5 |
| 0700 | 6 | 84 10 961 | | | 2 | Screw | Skruv | 5 |
| 0710 | 7 | 94 65 816 | | 600) | 2 | Plastic washer | Plastbricka | 5 |
| 0720 | 7 | 97 42 149 | | 580) | 2 | Plastic washer | Plastbricka | 5 |
| 0730 | 7 | 97 04 883 | | 560) | 2 | Plastic washer | Plastbricka | 5 |
| 0740 | 7 | 97 11 961 | | 590) | 2 | Plastic washer | Plastbricka | 5 |
| 0750 | 7 | 98 67 896 | | 610) | 2 | Plastic washer | Plastbricka | 5 |
| 0760 | 8 | 86 01 916 | | | 6 | Clip nut | Clipsmutter | 3 |
| 0770 | 9 | 84 88 447 | | | 10 | Clip | Clips | 5 |
| 0780 | 10 | 79 69 314 | | | 2 | Screw | Skruv | 5 |
| 0790 | 11 | 94 59 975 | | CD | 2 | Clip | Clips | 5 |

2. For cars with leather covers. För bilar med läderklädsel.
34. For electrical window regulator. För elektrisk fönsterhiss.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun
610. Black Svart




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

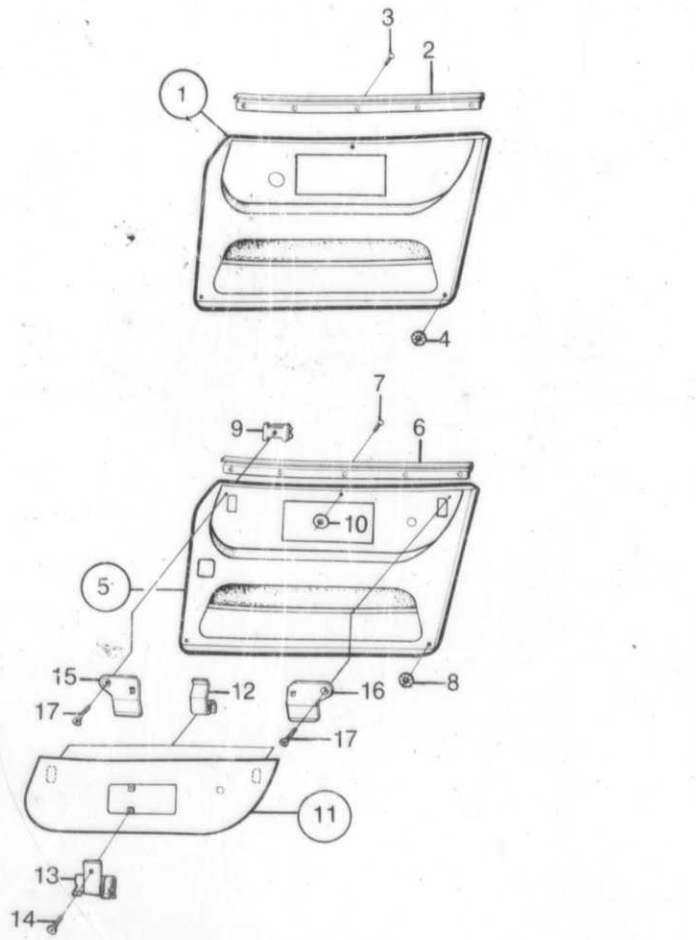


| 1411 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 98 45 371 | | 590), LH,TRIM COLOUR A11 | 1 | Door trim | Dörrkladsel | 6 |
| 0030 | 1 | 98 45 389 | | 590), RH,TRIM COLOUR A11 | 1 | Door trim | Dörrkladsel | 6 |
| 0060 | 1 | 98 45 330 | | 600), LH,TRIM COLOUR B11 | 1 | Door trim | Dörrkladsel | 6 |
| 0080 | 1 | 98 45 348 | | 600), RH,TRIM COLOUR B11 | 1 | Door trim | Dörrkladsel | 6 |
| 0110 | 1 | 98 67 946 | | 560), LH,TRIM COLOUR C11 | 1 | Door trim | Dörrkladsel | 6 |
| 0130 | 1 | 98 67 953 | | 560), RH,TRIM COLOUR C11 | 1 | Door trim | Dörrkladsel | 6 |
| 0160 | 1 | 98 45 397 | | 580), LH,TRIM COLOUR D11 | 1 | Door trim | Dörrkladsel | 6 |
| 0180 | 1 | 98 45 405 | | 580), RH,TRIM COLOUR D11 | 1 | Door trim | Dörrkladsel | 6 |
| 0200 | 2 | 98 31 991 | | LH | 1 | .Strip | .List | 6 |
| 0210 | 2 | 98 32 007 | | RH | 1 | .Strip | .List | 6 |
| 0220 | 3 | 94 25 232 | | | 10 | .Screw | .Skruv | 5 |
| 0230 | 4 | 94 65 816 | | 600) | 10 | Plastic washer | Plastbricka | 5 |
| 0240 | 4 | 97 42 149 | | 580) | 10 | Plastic washer | Plastbricka | 5 |
| 0250 | 4 | 97 04 883 | | 560) | 10 | Plastic washer | Plastbricka | 5 |
| 0260 | 4 | 97 11 961 | | 590) | 10 | Plastic washer | Plastbricka | 5 |
| 0270 | 4 | 98 67 896 | | 610) | 10 | Plastic washer | Plastbricka | 5 |
| 0280 | | | | | | | | |
| 0290 | | | | | | DOOR TRIM FOR | DÖRRKLÄDSEL FÖR | |
| 0300 | | | | | | UPHOLSTERY PLATE | KLÄDSELPLATTA | |
| 0320 | | | | TRIM COLOUR A12,A23,A33 | | | | |
| 0325 | 5 | 98 42 170 | | 590), LH | 1 | Door trim | Dörrkladsel | 6 |
| 0330 | 5 | 98 42 188 | | 590), RH | 1 | Door trim | Dörrkladsel | 6 |
| 0351 | 5 | 96 46 084 | | 590), CV, LH | 1 | Door trim | Dörrkladsel | 6 |
| 0353 | 5 | 96 46 092 | | 590), CV, RH | 1 | Door trim | Dörrkladsel | 6 |
| 0370 | | | | TRIM COLOUR B12,B23,B33 | | | | |
| 0375 | 5 | 98 42 139 | | 600), LH | 1 | Door trim | Dörrkladsel | 6 |
| 0380 | 5 | 98 42 147 | | 600), RH | 1 | Door trim | Dörrkladsel | 6 |
| 0420 | | | | TRIM COLOUR C12,C23,C33 | | | | |
| 0425 | 5 | 98 42 154 | | 560), LH | 1 | Door trim | Dörrkladsel | 6 |
| 0430 | 5 | 98 42 162 | | 560), RH | 1 | Door trim | Dörrkladsel | 6 |
| 0451 | 5 | 96 46 068 | | 560), CV, LH | 1 | Door trim | Dörrkladsel | 6 |
| 0453 | 5 | 96 46 076 | | 560), CV, RH | 1 | Door trim | Dörrkladsel | 6 |
| 0470 | | | | TRIM COLOUR D12, D23 | | | | |
| 0475 | 5 | 98 42 196 | | 580), LH | 1 | Door trim | Dörrkladsel | 6 |
| 0480 | 5 | 98 42 204 | | 580), RH | 1 | Door trim | Dörrkladsel | 6 |
| 0520 | | | | TRIM COLOUR E12,E23,E33 | | | | |
| 0525 | 5 | *98 67 870* | | 570), LH NLS - USE 4125191 | 1 | Door trim | Dörrkladsel | 6 |
| 0535 | 5 | 98 67 888 | | 570), RH | 1 | Door trim | Dörrkladsel | 6 |
| 0560 | 5 | 96 46 100 | | 570), CV, LH | 1 | Door trim | Dörrkladsel | 6 |
| 0580 | 5 | 96 46 118 | | 570), CV, RH | 1 | Door trim | Dörrkladsel | 6 |
| 0590 | | | | | | | | |
| 0600 | 6 | 98 31 991 | | LH | 1 | .Strip | .List | 6 |
| 0610 | 6 | 98 32 007 | | RH | 1 | .Strip | .List | 6 |
| 0620 | 7 | 94 25 232 | | | 10 | .Screw | .Skruv | 5 |
| 0630 | 8 | 94 65 816 | | 600) | 4 | Plastic washer | Plastbricka | 5 |
| 0640 | 8 | 97 42 149 | | 580) | 4 | Plastic washer | Plastbricka | 5 |
| 0650 | 8 | 97 04 883 | | 560) | 4 | Plastic washer | Plastbricka | 5 |
| 0660 | 8 | 97 11 961 | | 590) | 4 | Plastic washer | Plastbricka | 5 |
| 0670 | 8 | 98 67 896 | | 610) | 4 | Plastic washer | Plastbricka | 5 |
| 0680 | 9 | 86 01 916 | | | 4 | Clip nut | Clipsmutter | 3 |
| 0690 | 10 | 79 16 497 | | | 2 | Washer | Bricka | 5 |

560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun
610. Black Svart




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

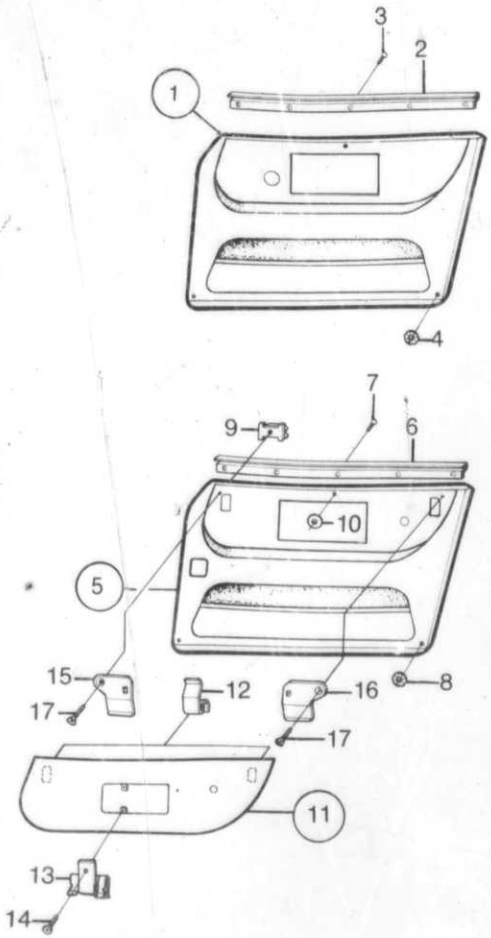


R 9732 - 900

| 1411 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0730 | | | | TRIM COLOUR A12,A23,A33 | | | | |
| 0735 | 11 | 98 64 448 | | 590), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0740 | 11 | 98 64 455 | | 590), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0770 | 11 | 98 64 463 | | 590,34), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0790 | 11 | 98 64 471 | | 590,34), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0830 | | | | TRIM COLOUR B12, B23 | | | | |
| 0835 | 11 | 98 42 733 | | 600), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0840 | 11 | 98 42 741 | | 600), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0870 | 11 | 98 70 833 | | 600,34), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0890 | 11 | 98 70 841 | | 600,34), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0930 | | | | TRIM COLOUR C12,C23,C33 | | | | |
| 0935 | 11 | 98 68 423 | | 560), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0940 | 11 | 98 68 431 | | 560), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0970 | 11 | 98 70 858 | | 560,34), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0990 | 11 | 98 70 866 | | 560,34), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1030 | | | | TRIM COLOUR D12, D23 | | | | |
| 1035 | 11 | 98 64 521 | | 580), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1040 | 11 | 98 64 539 | | 580), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1070 | 11 | 98 64 547 | | 580,34), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1090 | 11 | 98 64 554 | | 580,34), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1130 | | | | TRIM COLOUR E12,E23,E33 | | | | |
| 1135 | 11 | 98 68 449 | | 570), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1140 | 11 | 98 68 456 | | 570), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1170 | 11 | 98 70 916 | | 570,34), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1190 | 11 | 98 70 924 | | 570,34), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1200 | | | | | | | | |
| 1210 | 12 | 98 12 058 | | | 4 | .Clamp | .Klämma | 5 |
| 1220 | 13 | 98 30 050 | | | 4 | .Clamp | .Klämma | 5 |
| 1230 | 14 | 79 22 206 | | | X | Screw | Skruv | 5 |
| 1240 | 15 | 98 12 033 | | LH | 2 | Clamp | Klämma | 6 |
| 1250 | 16 | 98 12 041 | | RH | 2 | Clamp | Klämma | 6 |
| 1260 | 17 | 79 72 201 | | | 10 | Screw | Skruv | 5 |

34. For electrical window regulator. För elektrisk fönsterhiss.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

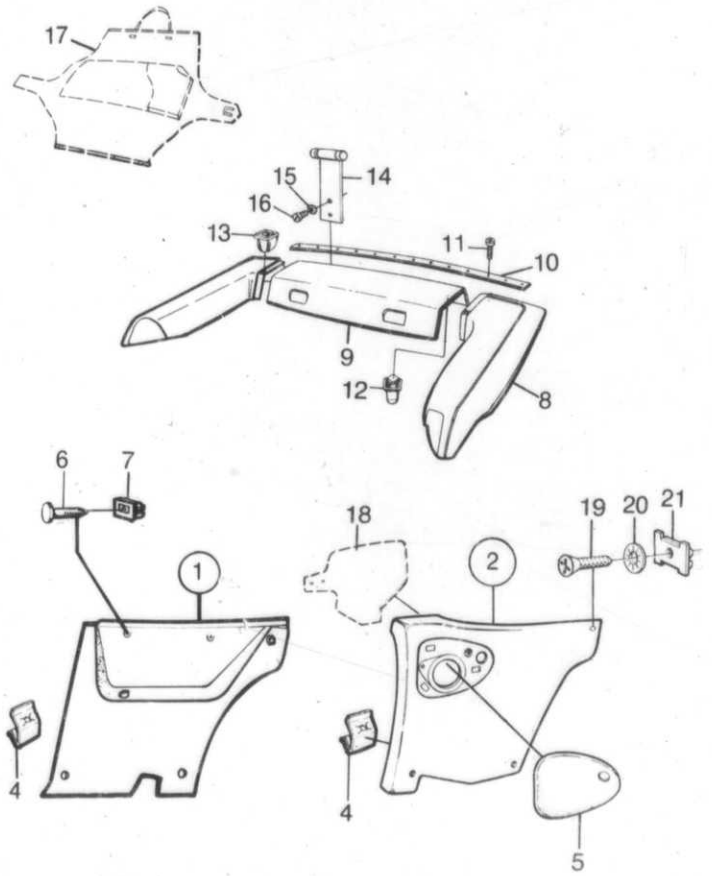


F2546 - 900

Upholstery

# 6-D18

## Side trim 1987
## Rear, 2SN, 3CK, CV

Klädsel

## Sidklädsel 1987
## Bak, 2SN, 3CK, CV

| 1412 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | TRIM COLOUR A11, A12, | | | | |
| 0020 | | | | A23, A33 | | | | |
| 0025 | 1 | 98 40 000 | | 590), LH | 1 | Side lining | Sidklädsel | 6 |
| 0030 | 1 | 98 40 018 | | 590), RH | 1 | Side lining | Sidklädsel | 6 |
| 0040 | 1 | 96 13 415 | | 590,60), LH | 1 | Side lining | Sidklädsel | 6 |
| 0050 | 1 | 96 13 423 | | 590,60), RH | 1 | Side lining | Sidklädsel | 6 |
| 0060 | 2 | 98 80 931 | | 590), LH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0070 | 2 | 98 80 949 | | 590), RH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0090 | | | | TRIM COLOUR B11, B12 | | | | |
| 0100 | | | | B23, B33 | | | | |
| 0105 | 1 | 98 39 960 | | 600), LH | 1 | Side lining | Sidklädsel | 6 |
| 0110 | 1 | 98 39 978 | | 600), RH | 1 | Side lining | Sidklädsel | 6 |
| 0130 | | | | TRIM COLOUR C11, C12, | | | | |
| 0140 | | | | C23, C33 | | | | |
| 0145 | 1 | 98 39 986 | | 560), LH | 1 | Side lining | Sidklädsel | 6 |
| 0150 | 1 | 98 39 994 | | 560), RH | 1 | Side lining | Sidklädsel | 6 |
| 0160 | 1 | 96 13 399 | | 560,60), LH | 1 | Side lining | Sidklädsel | 6 |
| 0170 | 1 | 96 13 407 | | 560,60), RH | 1 | Side lining | Sidklädsel | 6 |
| 0180 | 2 | 98 80 956 | | 560), LH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0190 | 2 | 98 80 964 | | 560), RH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0220 | | | | TRIM COLOUR D11,D12,D23 | | | | |
| 0225 | 1 | 98 40 026 | | 580), LH | 1 | Side lining | Sidklädsel | 6 |
| 0230 | 1 | 98 40 034 | | 580), RH | 1 | Side lining | Sidklädsel | 6 |
| 0240 | 1 | 96 13 431 | | 580,60), LH | 1 | Side lining | Sidklädsel | 6 |
| 0250 | 1 | 96 13 449 | | 580,60), RH | 1 | Side lining | Sidklädsel | 6 |
| 0280 | | | | TRIM COLOUR E12,E23,E33 | | | | |
| 0285 | 1 | 98 67 805 | | 570), LH | 1 | Side lining | Sidklädsel | 6 |
| 0290 | 1 | 98 67 813 | | 570), RH | 1 | Side lining | Sidklädsel | 6 |
| 0300 | 1 | 96 13 456 | | 570,60), LH | 1 | Side lining | Sidklädsel | 6 |
| 0310 | 1 | 96 13 464 | | 570,60), RH | 1 | Side lining | Sidklädsel | 6 |
| 0320 | 2 | 98 81 731 | | 570), LH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0330 | 2 | 98 81 749 | | 570), RH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0340 | 4 | 94 00 334 | | | X | .Clip | .Clips | 3 |
| 0350 | | | | | | | | |
| 0360 | 5 | 98 82 960 | | 590), LH, CV | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0370 | 5 | 98 82 978 | | 590), RH, CV | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0380 | 5 | 98 82 986 | | 560), LH, CV | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0390 | 5 | 98 82 994 | | 560), RH, CV NLS - USE 9648874, 9648882 | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0400 | 5 | 98 84 529 | | 570), LH, CV | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0410 | 5 | 98 84 537 | | 570), RH, CV | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0420 | | | | | | | | |
| 0430 | 6 | 94 73 406 | | 600 | X | Special screw | Snabbskruv | 5 |
| 0440 | 6 | 97 05 906 | | 560 | X | Special screw | Snabbskruv | 5 |
| 0450 | 6 | 98 08 106 | | 580 | X | Special screw | Snabbskruv | 5 |
| 0460 | 6 | 97 12 845 | | 590 | X | Special screw | Snabbskruv | 5 |
| 0470 | 6 | 98 67 821 | | 610 | X | Special screw | Snabbskruv | 5 |
| 0480 | 7 | 84 52 898 | | | X | Quick nut | Snabbmutter | 3 |
| 0490 | | | | | | | | |
| 0500 | 8 | 98 24 673 | | 590), LH, CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0510 | 8 | 98 24 681 | | 590), RH, CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0520 | 8 | 98 24 699 | | 560), LH, CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0530 | 8 | 98 24 707 | | 560), RH, CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0540 | 8 | 98 84 586 | | 570), LH, CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0550 | 8 | 98 84 594 | | 570), RH, CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0560 | 9 | 98 24 715 | | 590), CV | 1 | Top cover | Sufflettkåpa | 5 |

60. For cars with automatic belts — För bilar med passivt bälte
560. Red — Röd
570. Grey — Grå
580. Blue — Blå
590. Yellow — Gul
600. Brown — Brun
610. Black — Svart




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8P GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

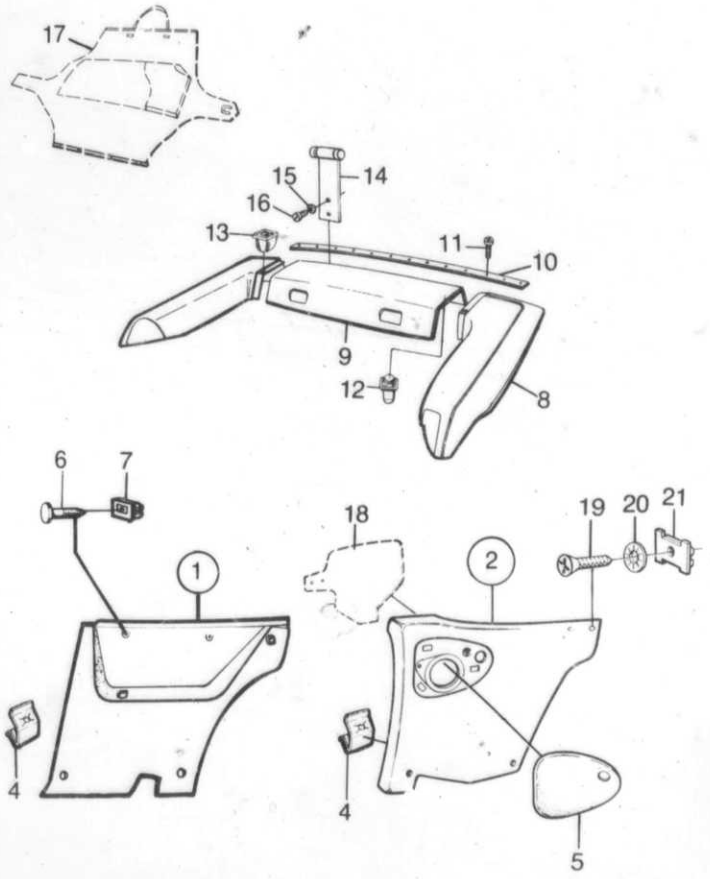


F2546 - 500

1412

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0570 | 9 | 98 24 723 | 560), CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0580 | 9 | 98 84 578 | 570), CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0590 | | | | | | | |
| 0600 | 10 | | See page 8A-025, 5-B02 | 1 | Strip | List | |
| 0610 | 11 | | See page 8A-025, 5-B02 | 12 | Screw | Skruv | |
| 0620 | 12 | 98 83 422 | CV | 2 | Clip | Clips | 5 |
| 0630 | 13 | 98 83 430 | CV | 2 | Clip | Clips | 5 |
| 0640 | 14 | 98 84 107 | CV | 2 | Strip | Band | 5 |
| 0650 | 15 | 84 28 997 | CV | 4 | Washer | Bricka | 5 |
| 0660 | 16 | 79 75 154 | CV | 4 | Screw | Skruv | 5 |
| 0670 | 17 | | See page 8B-197, 6-I06 | | Storage sack | Förvaringspåse | |
| 0680 | 18 | | LH, CV | 1 | Protection | Skydd | |
| 0690 | | | See page 8B-215, 6-I24 | | | | |
| 0700 | 18 | | RH, CV | 1 | Protection | Skydd | |
| 0710 | | | See page 8B-215, 6-I24 | | | | |
| 0720 | 19 | 79 72 201 | CV | 10 | Screw | Skruv | 5 |
| 0730 | 20 | 97 11 961 | 590), CV | 10 | Plastic washer | Plastbricka | 5 |
| 0740 | 20 | 97 04 883 | 560), CV | 10 | Plastic washer | Plastbricka | 5 |
| 0750 | 20 | 98 67 896 | 610), CV | 10 | Plastic washer | Plastbricka | 5 |
| 0760 | 21 | 86 01 916 | CV | 10 | Clip nut | Clipsmutter | 3 |

560. Red Röd
570. Grey Grå
590. Yellow Gul
610. Black Svart




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

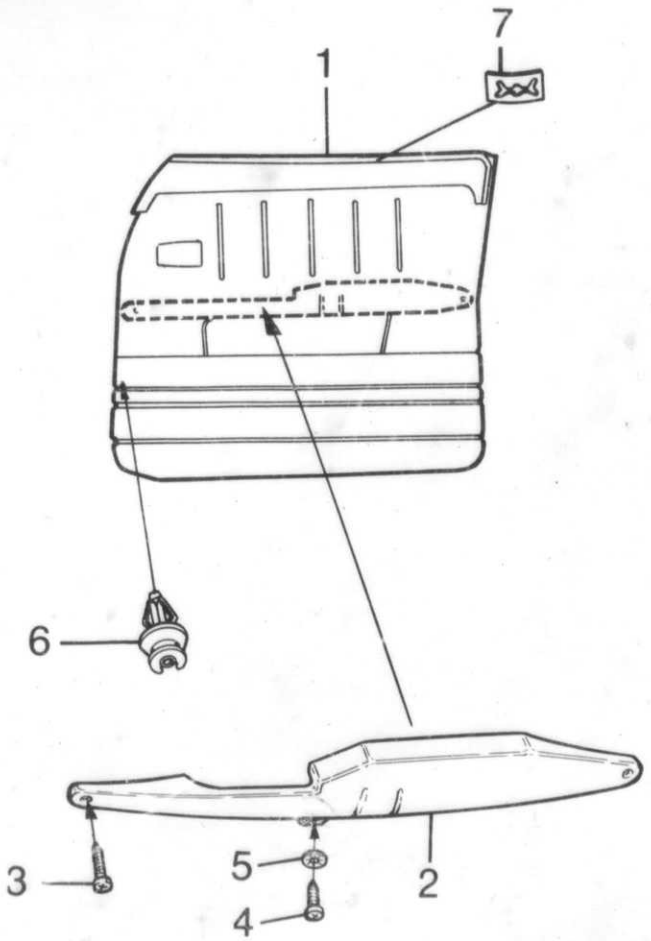


R 9734 - 900 -

Upholstery

# 6-D22

## Door trim 1987
## Front, 4SN, 5CK

Klädsel

## Dörrklädsel 1987
## Fram, 4SN, 5CK

| 1413 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | TRIM COLOUR A11, A12, | | | | |
| 0020 | | | | A23, A33 | | | | |
| 0025 | 1 | 98 64 604 | | 590), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0030 | 1 | 98 64 612 | | 590), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0040 | 1 | 98 64 620 | | 590,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0050 | 1 | 98 64 638 | | 590,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0060 | 2 | 98 67 425 | | 590), LH | 1 | Arm rest | Armstöd | 6 |
| 0070 | 2 | 98 67 433 | | 590), RH | 1 | Arm rest | Armstöd | 6 |
| 0090 | | | | TRIM COLOUR B11, B12, | | | | |
| 0100 | | | | B23, B33 | | | | |
| 0105 | 1 | 98 37 642 | | 600), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0110 | 1 | 98 37 659 | | 600), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0120 | 1 | 98 69 660 | | 600,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0130 | 1 | 98 69 678 | | 600,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0140 | 2 | 97 05 765 | | 600), LH | 1 | Arm rest | Armstöd | 6 |
| 0150 | 2 | 97 05 773 | | 600), RH | 1 | Arm rest | Armstöd | 6 |
| 0170 | | | | TRIM COLOUR C11, C12, | | | | |
| 0180 | | | | C23, C33 | | | | |
| 0185 | 1 | 98 68 019 | | 560), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0190 | 1 | 98 68 027 | | 560), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0200 | 1 | 98 69 686 | | 560,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0210 | 1 | 98 69 694 | | 560,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0220 | 2 | 98 50 967 | | 560), LH | 1 | Arm rest | Armstöd | 6 |
| 0230 | 2 | 98 50 975 | | 560), RH | 1 | Arm rest | Armstöd | 6 |
| 0260 | | | | TRIM COLOUR D11,D12,D23 | | | | |
| 0265 | 1 | 98 64 687 | | 580), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0270 | 1 | 98 64 695 | | 580), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0280 | 1 | 98 64 703 | | 580,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0290 | 1 | 98 64 711 | | 580,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0300 | 2 | 97 42 107 | | 580), LH | 1 | Arm rest | Armstöd | 6 |
| 0310 | 2 | 97 42 115 | | 580), RH | 1 | Arm rest | Armstöd | 6 |
| 0340 | | | | TRIM COLOUR E12,E23,E33 | | | | |
| 0345 | 1 | 98 68 134 | | 570), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0350 | 1 | 98 68 142 | | 570), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0360 | 1 | 98 69 744 | | 570,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0370 | 1 | 98 69 751 | | 570,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0380 | 2 | 98 68 977 | | 570), LH | 1 | Arm rest | Armstöd | 6 |
| 0390 | 2 | 98 68 985 | | 570), RH | 1 | Arm rest | Armstöd | 6 |
| 0400 | | | | | | | | |
| 0410 | 3 | 79 22 396 | | | 4 | Screw | Skruv | 5 |
| 0420 | 4 | 79 34 797 | | | 2 | Screw | Skruv | 5 |
| 0430 | 5 | 79 15 564 | | | 2 | Star washer | Taggbricka | 5 |
| 0440 | 6 | 94 73 869 | | | 20 | Clip | Clips | 5 |
| 0450 | 7 | 84 88 447 | | | 10 | Clip | Clips | 5 |

34. For electrical window regulator. För elektrisk fönsterhiss.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-D24

Upholstery
## Door trim 1987
## Rear, 4SN, 5CK

Klädsel
## Dörrklädsel 1987
## Bak, 4SN, 5CK

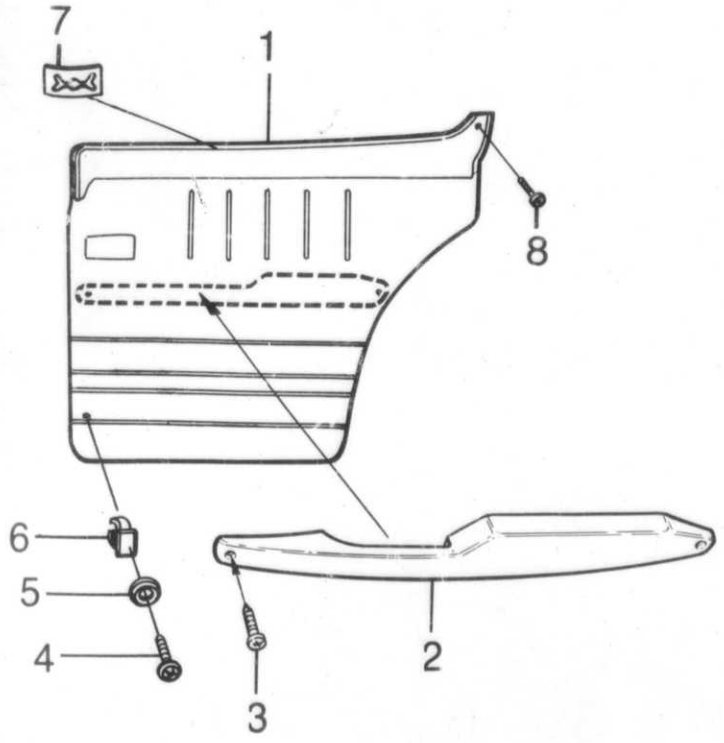


R 9735 - 900

| 1414 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | TRIM COLOUR A11, A12, | | | | |
| 0020 | | | | A23, A33 | | | | |
| 0030 | 1 | 98 64 760 | | 590), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0040 | 1 | 98 64 778 | | 590), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0050 | 1 | 98 64 786 | | 590,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0060 | 1 | 98 64 794 | | 590,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0070 | 2 | 98 67 441 | | 590), LH | 1 | Arm rest | Armstöd | 6 |
| 0080 | 2 | 98 67 458 | | 590), RH | 1 | Arm rest | Armstöd | 6 |
| 0090 | | | | TRIM COLOUR B11, B12, | | | | |
| 0100 | | | | B23, B33 | | | | |
| 0110 | 1 | 98 37 725 | | 600), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0120 | 1 | 98 37 733 | | 600), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0130 | 1 | 98 70 346 | | 600,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0140 | 1 | 98 70 353 | | 600,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0150 | 2 | *97 05 567* | | 600), LH NLS | 1 | Arm rest | Armstöd | 5 |
| 0160 | 2 | 97 05 575 | | 600), RH | 1 | Arm rest | Armstöd | 6 |
| 0170 | | | | TRIM COLOUR C11, C12, | | | | |
| 0180 | | | | C23, C33 | | | | |
| 0190 | 1 | 98 68 571 | | 560), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0200 | 1 | 98 68 589 | | 560), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0210 | 1 | 98 70 361 | | 560,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0220 | 1 | 98 70 379 | | 560,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0230 | 2 | 98 50 983 | | 560), LH | 1 | Arm rest | Armstöd | 6 |
| 0240 | 2 | 98 50 991 | | 560), RH | 1 | Arm rest | Armstöd | 6 |
| 0250 | | | | TRIM COLOUR D11,D12,D23 | | | | |
| 0260 | 1 | 98 64 844 | | 580), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0270 | 1 | 98 64 851 | | 580), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0280 | 1 | 98 64 869 | | 580,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0290 | 1 | 98 64 877 | | 580,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0300 | 2 | 97 42 123 | | 580), LH | 1 | Arm rest | Armstöd | 6 |
| 0310 | 2 | 97 42 131 | | 580), RH | 1 | Arm rest | Armstöd | 6 |
| 0320 | | | | TRIM COLOUR E12,E23,E33 | | | | |
| 0330 | 1 | 98 68 597 | | 570), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0340 | 1 | 98 68 605 | | 570), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0350 | 1 | 98 70 429 | | 570,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0360 | 1 | 98 70 437 | | 570,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0370 | 2 | 98 68 993 | | 570), LH | 1 | Arm rest | Armstöd | 6 |
| 0380 | 2 | 98 69 009 | | 570), RH | 1 | Arm rest | Armstöd | 6 |
| 0390 | | | | | | | | |
| 0400 | 3 | 79 22 396 | | | 8 | Screw | Skruv | 5 |
| 0410 | 4 | 84 10 961 | | | 2 | Screw | Skruv | 5 |
| 0420 | 5 | 94 65 816 | | 600) | 2 | Plastic washer | Plastbricka | 5 |
| 0430 | 5 | 97 42 149 | | 580) | 2 | Plastic washer | Plastbricka | 5 |
| 0440 | 5 | 97 04 883 | | 560) | 2 | Plastic washer | Plastbricka | 5 |
| 0450 | 5 | 97 11 961 | | 590) | 2 | Plastic washer | Plastbricka | 5 |
| 0460 | 5 | 98 67 896 | | 610) | 2 | Plastic washer | Plastbricka | 5 |
| 0470 | 6 | 86 01 916 | | | 6 | Clip nut | Clipsmutter | 3 |
| 0480 | 7 | 84 88 447 | | | 10 | Clip | Clips | 5 |
| 0490 | 8 | 79 69 314 | | | 2 | Screw | Skruv | 5 |

34. For electrical window regulator. För elektrisk fönsterhiss.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun
610. Black Svart




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventiiation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

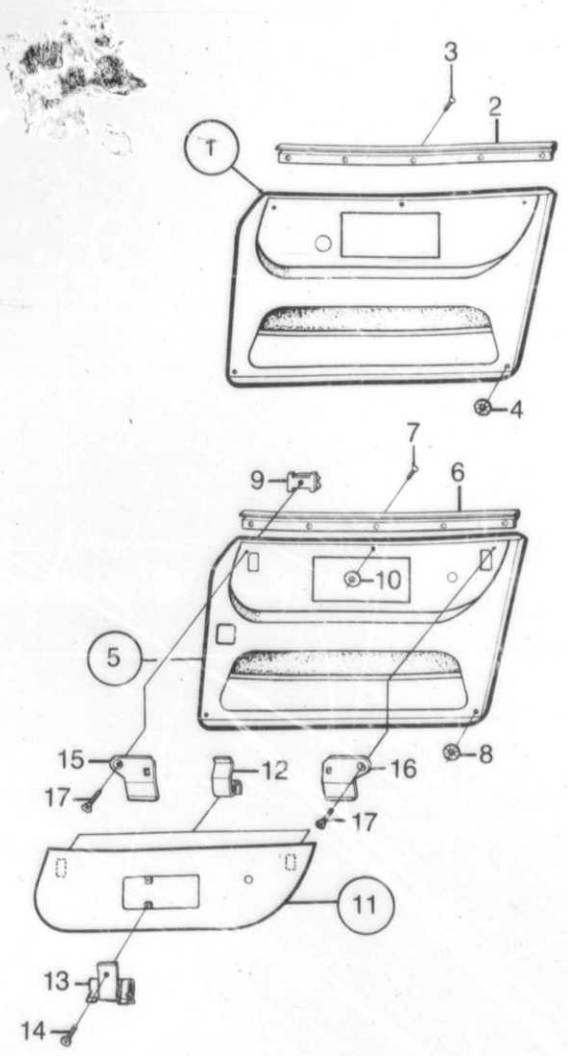


R 9736 - 900

Upholstery

# 6-E02

## Door trim 1988
## Front, 2SN, 3CK, CV

Klädsel

## Dörrklädsel 1988
## Fram, 2SN, 3CK, CV

| 1415 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 98 45 371 | | 590), LH,TRIM COLOUR A11 | 1 | Door trim | Dörrklädsel | 6 |
| 0030 | 1 | 98 45 389 | | 590), RH,TRIM COLOUR A11 | 1 | Door trim | Dörrklädsel | 6 |
| 0060 | 1 | 96 86 221 | | 600), LH,TRIM COLOUR B11 | 1 | Door trim | Dörrklädsel | 6 |
| 0080 | 1 | 96 86 239 | | 600), RH,TRIM COLOUR B11 | 1 | Door trim | Dörrklädsel | 6 |
| 0110 | 1 | 96 86 049 | | 560), LH,TRIM COLOUR C11 | 1 | Door trim | Dörrklädsel | 6 |
| 0130 | 1 | 96 86 056 | | 560), RH,TRIM COLOUR C11 | 1 | Door trim | Dörrklädsel | 6 |
| 0160 | 1 | 95 31 468 | | 570), LH,TRIM COLOUR E11 | 1 | Door trim | Dörrklädsel | 6 |
| 0180 | 1 | 95 31 476 | | 570), RH,TRIM COLOUR E11 | 1 | Door trim | Dörrklädsel | 6 |
| 0210 | 1 | 96 85 819 | | 580), LH,TRIM COLOUR F11 | 1 | Door trim | Dörrklädsel | 6 |
| 0230 | 1 | 96 85 835 | | 580), RH,TRIM COLOUR F11 | 1 | Door trim | Dörrklädsel | 6 |
| 0250 | 2 | 98 31 991 | | LH | 1 | .Strip | .List | 6 |
| 0260 | 2 | 98 32 007 | | RH | 1 | .Strip | .List | 6 |
| 0270 | 3 | 94 25 232 | | | 10 | .Screw | .Skruv | 5 |
| 0280 | 4 | 97 11 961 | | 590) | 10 | Plastic washer | Plastbricka | 5 |
| 0290 | 4 | 94 65 816 | | 600) | 10 | Plastic washer | Plastbricka | 5 |
| 0300 | 4 | 97 04 883 | | 560) | 10 | Plastic washer | Plastbricka | 5 |
| 0310 | 4 | 98 67 896 | | 610) | 10 | Plastic washer | Plastbricka | 5 |
| 0320 | 4 | 96 85 132 | | 580) | 10 | Plastic washer | Plastbricka | 5 |
| 0330 | | | | | | | | |
| 0340 | | | | | | DOOR TRIM FOR UPHOLSTERY PLATE | DÖRRKLÄDSEL FÖR KLÄDSELPLATTA | |
| 0350 | | | | | | | | |
| 0370 | | | | TRIM COLOUR A14,A24,A33 | | | | |
| 0375 | 5 | 98 42 170 | | 590), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0380 | 5 | 98 42 188 | | 590), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0410 | 5 | 96 47 629 | | 590), CV, LH | 1 | Door trim | Dörrklädsel | 6 |
| 0430 | 5 | 96 47 637 | | 590), CV, RH | 1 | Door trim | Dörrklädsel | 6 |
| 0470 | | | | TRIM COLOUR B14,B24,B33 | | | | |
| 0475 | 5 | 96 86 247 | | 600), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0480 | 5 | 96 86 254 | | 600), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0520 | | | | TRIM COLOUR C14,C24,C33 | | | | |
| 0525 | 5 | 96 86 064 | | 560), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0530 | 5 | 96 86 072 | | 560), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0560 | 5 | 96 47 850 | | 560), CV, LH | 1 | Door trim | Dörrklädsel | 6 |
| 0580 | 5 | 96 47 868 | | 560), CV, RH | 1 | Door trim | Dörrklädsel | 6 |
| 0620 | | | | TRIM COLOUR E14,E24,E33 | | | | |
| 0625 | 5 | *98 67 870* | | 570), LH NLS - USE 4125191 | 1 | Door trim | Dörrklädsel | 6 |
| 0630 | 5 | 98 67 888 | | 570), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0660 | 5 | 96 47 876 | | 570), CV, LH | 1 | Door trim | Dörrklädsel | 6 |
| 0680 | 5 | 96 47 884 | | 570), CV, RH | 1 | Door trim | Dörrklädsel | 6 |
| 0710 | | | | TRIM COLOUR F14, F24 | | | | |
| 0715 | 5 | *96 85 827* | | 580), LH NLS - USE 4125266 | 1 | Door trim | Dörrklädsel | 6 |
| 0720 | 5 | *96 85 843* | | 580), RH NLS - USE 4125274 | 1 | Door trim | Dörrklädsel | 6 |
| 0730 | | | | | | | | |
| 0740 | 6 | 98 31 991 | | LH | 1 | .Strip | .List | 6 |
| 0750 | 6 | 98 32 007 | | RH | 1 | .Strip | .List | 6 |
| 0760 | 7 | 94 25 232 | | | 10 | .Screw | .Skruv | 5 |
| 0765 | 7 | 79 72 201 | | CV | 10 | .Screw | .Skruv | 5 |
| 0770 | 8 | 97 11 961 | | 590) | 4 | Plastic washer | Plastbricka | 5 |
| 0780 | 8 | 94 65 816 | | 600) | 4 | Plastic washer | Plastbricka | 5 |
| 0790 | 8 | 97 04 883 | | 560) | 4 | Plastic washer | Plastbricka | 5 |
| 0800 | 8 | 98 67 896 | | 610) | 4 | Plastic washer | Plastbricka | 5 |
| 0810 | 8 | 96 85 132 | | 580) | 4 | Plastic washer | Plastbricka | 5 |
| 0820 | 9 | 86 01 916 | | | 4 | Clip nut | Clipsmutter | 3 |
| 0830 | 10 | 79 16 497 | | | 2 | Washer | Bricka | 5 |

560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun
610. Black Svart




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

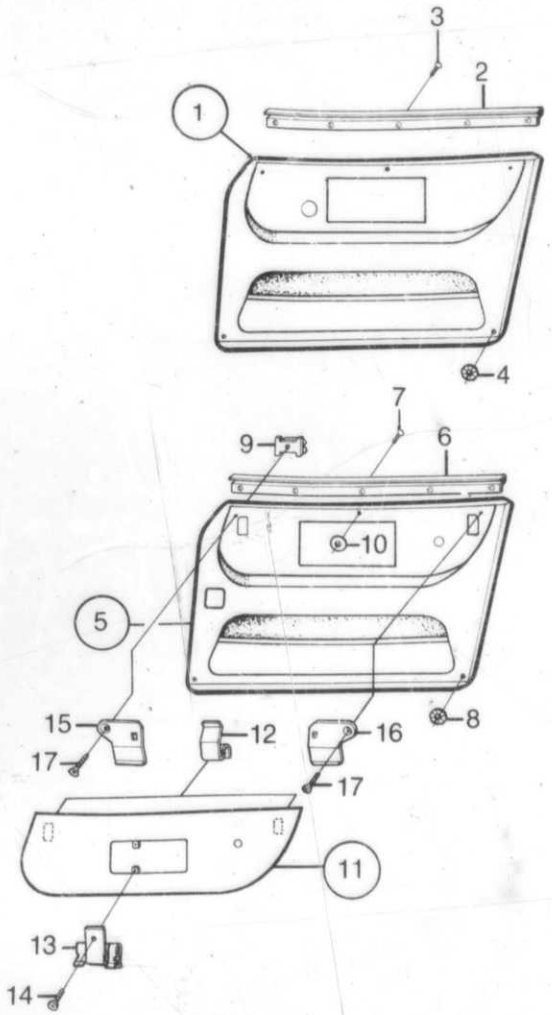


R 9736 - 900

Upholstery

# 6-E04

## *Door trim 1988*

## *Front, 2SN, 3CK, CV*

Klädsel

## *Dörrklädsel 1988*

## *Fram, 2SN, 3CK, CV*

| 1415 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0870 | | | TRIM COLOUR A14,A24,A33 | | | | |
| 0875 11 | 98 64 448 | | 590), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0880 11 | 98 64 455 | | 590), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0910 11 | 98 64 463 | | 590,34), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0930 11 | 98 64 471 | | 590,34), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0970 | | | TRIM COLOUR B14,B24,B33 | | | | |
| 0975 11 | 96 82 451 | | 600), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0980 11 | 96 82 469 | | 600), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1010 11 | 96 82 493 | | 600,34), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1030 11 | 96 82 501 | | 600,34), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1070 | | | TRIM COLOUR C14,C24,C33 | | | | |
| 1075 11 | 98 68 423 | | 560), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1080 11 | 98 68 431 | | 560), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1110 11 | 98 70 858 | | 560,34), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1130 11 | 98 70 866 | | 560,34), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1170 | | | TRIM COLOUR E14,E24,E33 | | | | |
| 1175 11 | 98 68 449 | | 570), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1180 11 | 98 68 456 | | 570), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1210 11 | 98 70 916 | | 570,34), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1230 11 | 98 70 924 | | 570,34), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1270 | | | TRIM COLOUR F14, F24 | | | | |
| 1275 11 | 96 82 709 | | 580), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1280 11 | 96 82 717 | | 580), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1310 11 | 96 82 725 | | 580,34), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1330 11 | 96 82 733 | | 580,34), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 1340 | | | | | | | |
| 1350 12 | 98 12 058 | | | 4 | .Clamp | .Klämma | 5 |
| 1360 13 | 98 30 050 | | | 4 | .Clamp | .Klämma | 5 |
| 1370 14 | 79 22 206 | | | X | Screw | Skruv | 5 |
| 1380 15 | 98 12 033 | | LH | 2 | Clamp | Klämma | 6 |
| 1390 16 | 98 12 041 | | RH | 2 | Clamp | Klämma | 6 |
| 1400 17 | 79 72 201 | | | 10 | Screw | Skruv | 5 |

34. For electrical window regulator. För elektrisk fönsterhiss.

560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

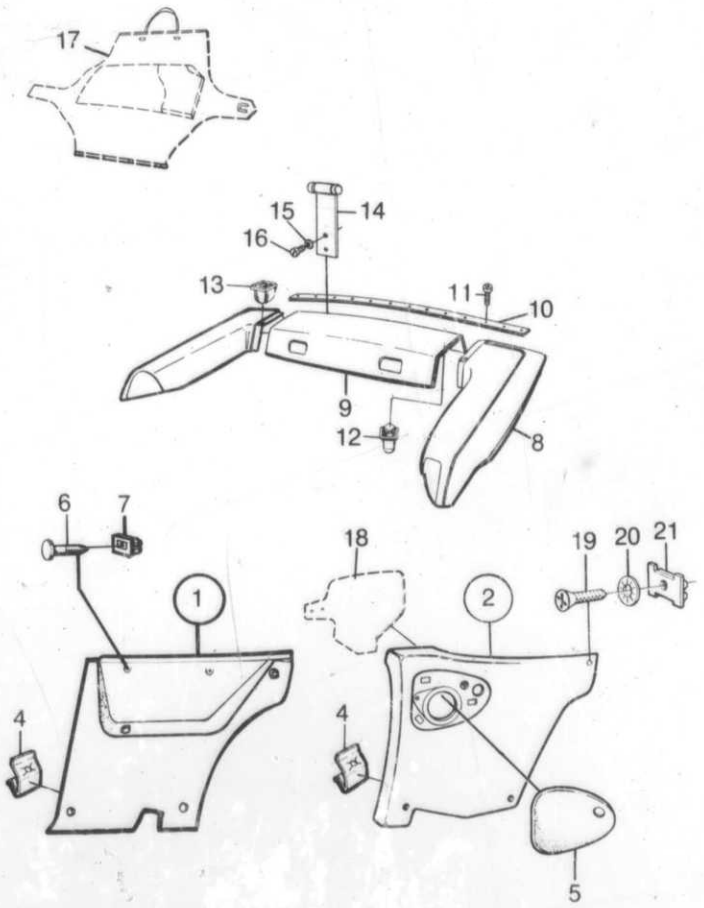


F2547 - 900

| 1416 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | TRIM COLOUR A11, A14, | | | | |
| 0020 | | | | A24, A33 | | | | |
| 0025 | 1 | 98 40 000 | | 590), LH | 1 | Side lining | Sidklädsel | 6 |
| 0030 | 1 | 98 40 018 | | 590), RH | 1 | Side lining | Sidklädsel | 6 |
| 0040 | 1 | 96 13 415 | | 590,60), LH | 1 | Side lining | Sidklädsel | 6 |
| 0050 | 1 | 96 13 423 | | 590,60), RH | 1 | Side lining | Sidklädsel | 6 |
| 0060 | 2 | 98 80 931 | | 590,145), LH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0070 | 2 | 96 46 753 | | 590,146), LH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0080 | 2 | 98 80 949 | | 590,145), RH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0090 | 2 | 96 46 761 | | 590,146), RH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0110 | | | | TRIM COLOUR B11, B14, | | | | |
| 0120 | | | | B24, B33 | | | | |
| 0125 | 1 | 98 39 960 | | 600), LH | 1 | Side lining | Sidklädsel | 6 |
| 0130 | 1 | 98 39 978 | | 600), RH | 1 | Side lining | Sidklädsel | 6 |
| 0150 | | | | TRIM COLOUR C11, C14, | | | | |
| 0160 | | | | C24, C33 | | | | |
| 0165 | 1 | 96 85 058 | | 560), LH | 1 | Side lining | Sidklädsel | 6 |
| 0170 | 1 | 96 85 066 | | 560), RH | 1 | Side lining | Sidklädsel | 6 |
| 0180 | 1 | 96 85 033 | | 560,60), LH | 1 | Side lining | Sidklädsel | 6 |
| 0190 | 1 | 96 85 041 | | 560,60), RH | 1 | Side lining | Sidklädsel | 6 |
| 0200 | 2 | 96 47 736 | | 560,145), LH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0210 | 2 | 96 46 738 | | 560,146), LH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0220 | 2 | 96 47 744 | | 560,145), RH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0230 | 2 | 96 46 746 | | 560,146), RH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0250 | | | | TRIM COLOUR E11, E14, | | | | |
| 0260 | | | | E24, E33 | | | | |
| 0265 | 1 | 98 67 805 | | 570), LH | 1 | Side lining | Sidklädsel | 6 |
| 0270 | 1 | 98 67 813 | | 570), RH | 1 | Side lining | Sidklädsel | 6 |
| 0280 | 1 | 96 13 456 | | 570,60), LH | 1 | Side lining | Sidklädsel | 6 |
| 0290 | 1 | 96 13 464 | | 570,60), RH | 1 | Side lining | Sidklädsel | 6 |
| 0300 | 2 | 96 47 793 | | 570,145), LH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0310 | 2 | 96 46 795 | | 570,146), LH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0320 | 2 | 96 47 801 | | 570,145), RH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0330 | 2 | 96 46 803 | | 570,146), RH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0360 | | | | TRIM COLOUR F11,F14,F24 | | | | |
| 0365 | 1 | 96 84 556 | | 580), LH | 1 | Side lining | Sidklädsel | 6 |
| 0370 | 1 | 96 84 564 | | 580), RH | 1 | Side lining | Sidklädsel | 6 |
| 0380 | 1 | 96 84 572 | | 580,60), LH | 1 | Side lining | Sidklädsel | 6 |
| 0390 | 1 | 96 84 580 | | 580,60), RH | 1 | Side lining | Sidklädsel | 6 |
| 0400 | 4 | 94 00 334 | | | X | ▪Clip | ▪Clips | 3 |
| 0410 | | | | | | | | |
| 0420 | 5 | 98 82 960 | | 590), LH, CV | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0430 | 5 | 98 82 978 | | 590), RH, CV | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0440 | 5 | 98 82 986 | | 560), LH, CV | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0450 | 5 | *98 82 994* | | 560), RH, CV NLS - USE 9648874, 9648882 | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0460 | 5 | 98 84 529 | | 570), LH, CV | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0470 | 5 | 98 84 537 | | 570), RH, CV | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0480 | | | | | | | | |
| 0490 | 6 | 97 12 845 | | 590) | X | Special screw | Snabbskruv | 5 |
| 0500 | 6 | 94 73 406 | | 600) | X | Special screw | Snabbskruv | 5 |
| 0510 | 6 | 97 05 906 | | 560) | X | Special screw | Snabbskruv | 5 |
| 0520 | 6 | 98 67 821 | | 610) | X | Special screw | Snabbskruv | 5 |
| 0530 | 6 | 96 84 549 | | 580) | X | Special screw | Snabbskruv | 5 |

60. For cars with automatic belts  För bilar med passivt bälte
145. Ch. -J7005071
146. Ch. J7005072-
560. Red  Röd
570. Grey  Grå
580. Blue  Blå
590. Yellow  Gul
600. Brown  Brun
610. Black  Svart




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

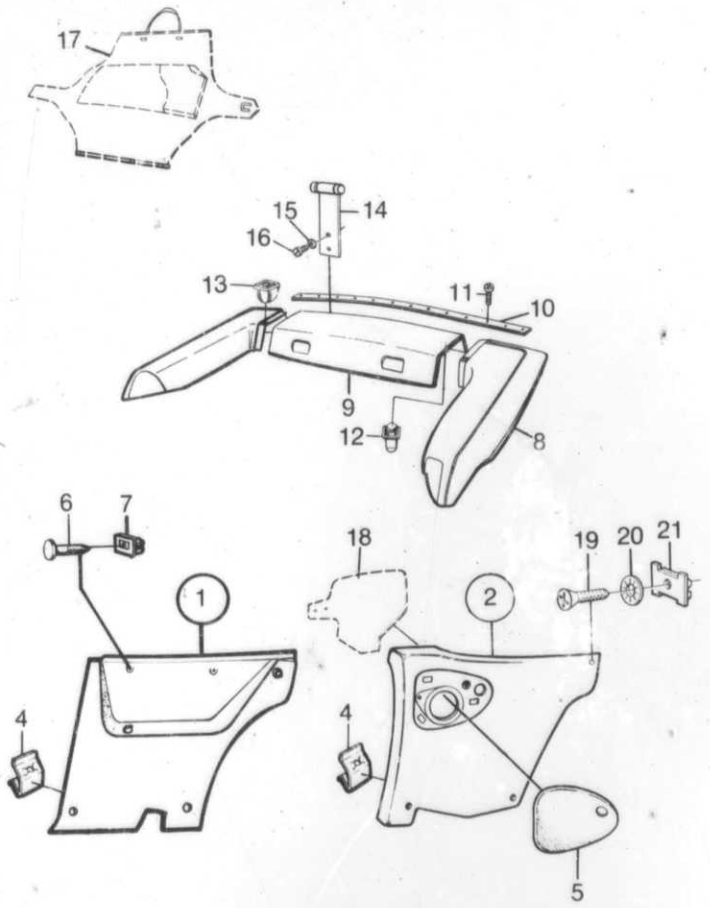


F2547 - 900

| 1416 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0540 | 7 | 84 52 898 | | | X | Quick nut | Snabbmutter | 3 |
| 0550 | | | | | | | | |
| 0560 | 8 | 98 24 673 | | 590), LH, CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0570 | 8 | 98 24 681 | | 590), RH, CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0580 | 8 | 98 24 699 | | 560), LH, CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0590 | 8 | 98 24 707 | | 560), RH, CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0600 | 8 | 98 84 586 | | 570), LH, CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0610 | 8 | 98 84 594 | | 570), RH, CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0620 | 9 | 98 24 715 | | 590), CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0630 | 9 | 98 24 723 | | 560), CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0640 | 9 | 98 84 578 | | 570), CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0650 | | | | | | | | |
| 0660 | 10 | | | See page 8A-025, 5-B02 | 1 | Strip | List | |
| 0670 | 11 | | | See page 8A-025, 5-B02 | 12 | Screw | Skruv | |
| 0680 | 12 | 98 83 422 | | CV | 2 | Clip | Clips | 5 |
| 0690 | 13 | 98 83 430 | | CV | 2 | Clip | Clips | 5 |
| 0700 | 14 | 98 84 107 | | CV | 2 | Strip | Band | 5 |
| 0710 | 15 | 84 28 997 | | CV | 4 | Washer | Bricka | 5 |
| 0720 | 16 | 79 75 154 | | CV | 4 | Screw | Skruv | 5 |
| 0730 | 17 | | | See page 8B-197, 6-I06 | | Storage sack | Förvaringspåse | |
| 0740 | 18 | | | LH, CV | 1 | Protection | Skydd | |
| 0750 | | | | See page 8B-215, 6-I24 | | | | |
| 0760 | 18 | | | RH, CV | 1 | Protection | Skydd | |
| 0770 | | | | See page 8B-215, 6-I24 | | | | |
| 0780 | 19 | 79 72 201 | | CV | 10 | Screw | Skruv | 5 |
| 0790 | 20 | 97 11 961 | | 590), CV | 10 | Plastic washer | Plastbricka | 5 |
| 0800 | 20 | 97 04 883 | | 560), CV | 10 | Plastic washer | Plastbricka | 5 |
| 0810 | 20 | 90 67 896 | | 610), CV | 10 | Plastic washer | Plastbricka | 5 |
| 0820 | 21 | 86 01 916 | | CV | 10 | Clip nut | Clipsmutter | 3 |

560. Red Röd
570. Grey Grå
590. Yellow Gul
610. Black Svart




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

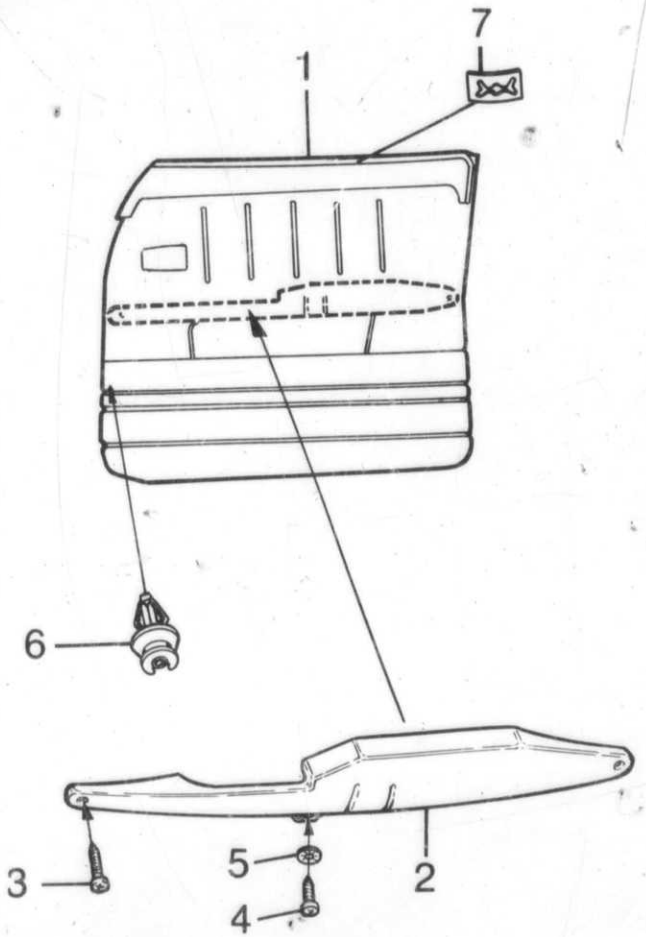


R 9738 - 900

# 6-E10

Upholstery
## *Door trim 1988*
## *Front, 4SN, 5CK*

Klädsel
## *Dörrklädsel 1988*
## *Fram, 4SN, 5CK*

| 1417 | Pos | Part No/Art.nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | TRIM COLOUR A11, A14, A24, A33 | | | | |
| 0025 | 1 | 98 64 604 | | 590), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0030 | 1 | 98 64 612 | | 590), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0040 | 1 | 98 64 620 | | 590,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0050 | 1 | 98 64 638 | | 590,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0060 | 2 | 98 67 425 | | 590), LH | 1 | Arm rest | Armstöd | 6 |
| 0070 | 2 | 98 67 433 | | 590), RH | 1 | Arm rest | Armstöd | 6 |
| 0090 | | | | TRIM COLOUR B11, B14, B24, B33 | | | | |
| 0105 | 1 | 96 84 895 | | 600), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0110 | 1 | 96 84 903 | | 600), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0120 | 1 | 96 84 978 | | 600,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0130 | 1 | 96 84 986 | | 600,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0140 | 2 | 97 05 765 | | 600), LH | 1 | Arm rest | Armstöd | 6 |
| 0150 | 2 | 97 05 773 | | 600), RH | 1 | Arm rest | Armstöd | 6 |
| 0170 | | | | TRIM COLOUR C11, C14, C24, C33 | | | | |
| 0185 | 1 | 98 68 019 | | 560), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0190 | 1 | 98 68 027 | | 560), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0200 | 1 | 98 69 686 | | 560,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0210 | 1 | 98 69 694 | | 560,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0220 | 2 | 98 50 967 | | 560), LH | 1 | Arm rest | Armstöd | 6 |
| 0230 | 2 | 98 50 975 | | 560), RH | 1 | Arm rest | Armstöd | 6 |
| 0250 | | | | TRIM COLOUR E11, E14, E24, E33 | | | | |
| 0265 | 1 | 98 68 134 | | 570), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0270 | 1 | 98 68 142 | | 570), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0280 | 1 | 98 69 744 | | 570,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0290 | 1 | 98 69 751 | | 570,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0300 | 2 | 98 68 977 | | 570), LH | 1 | Arm rest | Armstöd | 6 |
| 0310 | 2 | 98 68 985 | | 570), RH | 1 | Arm rest | Armstöd | 6 |
| 0340 | | | | TRIM COLOUR F11,F14,F24 | | | | |
| 0345 | 1 | 96 85 264 | | 580), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0350 | 1 | 96 85 272 | | 580), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0360 | 1 | 96 85 413 | | 580,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0370 | 1 | 96 85 421 | | 580,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0380 | 2 | 96 84 481 | | 580), LH | 1 | Arm rest | Armstöd | 6 |
| 0390 | 2 | 96 84 499 | | 580), RH | 1 | Arm rest | Armstöd | 6 |
| 0400 | | | | | | | | |
| 0410 | 3 | 79 22 396 | | | 4 | Screw | Skruv | 5 |
| 0420 | 4 | 79 34 797 | | | 2 | Screw | Skruv | 5 |
| 0430 | 5 | 79 15 564 | | | 2 | Star washer | Taggbricka | 5 |
| 0440 | 6 | 94 73 869 | | | 20 | Clip | Clips | 5 |
| 0450 | 7 | 84 88 447 | | | 10 | Clip | Clips | 5 |

34. For electrical window regulator. För elektrisk fönsterhiss.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 2-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

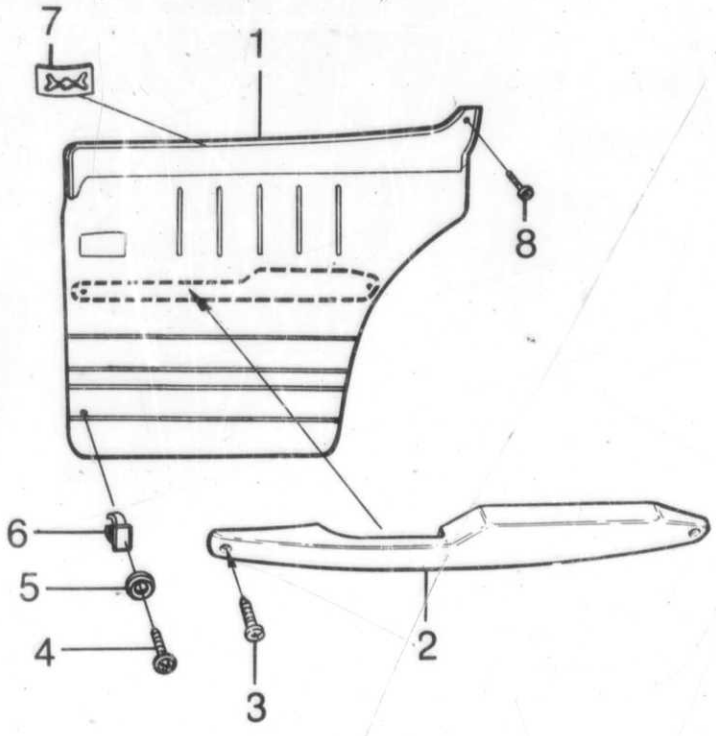


R 9739 - 900

Upholstery

# 6-E12

## Door trim 1988
## Rear, 4SN, 5CK

Klädsel

## Dörrklädsel 1988
## Bak, 4SN, 5CK

1418

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0010 | | | TRIM COLOUR A11, A14, | | | | |
| 0020 | | | A24, A33 | | | | |
| 0025 | 1 | 98 64 760 | 590), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0030 | 1 | 98 64 778 | 590), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0040 | 1 | 98 64 786 | 590,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0050 | 1 | 98 64 794 | 590,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0060 | 2 | 98 67 441 | 590), LH | 1 | Arm rest | Armstöd | 6 |
| 0070 | 2 | 98 67 458 | 590), RH | 1 | Arm rest | Armstöd | 6 |
| 0090 | | | TRIM COLOUR B11, B14, | | | | |
| 0100 | | | B24, B33 | | | | |
| 0105 | 1 | 96 84 630 | 600), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0110 | 1 | 96 84 648 | 600), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0120 | 1 | 96 84 697 | 600,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0130 | 1 | 96 84 705 | 600,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0140 | 2 | *97 05 567* | 600), LH NLS | 1 | Arm rest | Armstöd | 6 |
| 0150 | 2 | 97 05 575 | 600), RH | 1 | Arm rest | Armstöd | 6 |
| 0170 | | | TRIM COLOUR C11, C14, | | | | |
| 0180 | | | C24, C33 | | | | |
| 0185 | 1 | 98 68 571 | 560), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0190 | 1 | 98 68 589 | 560), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0200 | 1 | 98 70 361 | 560,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0210 | 1 | 98 70 379 | 560,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0220 | 2 | 98 50 983 | 560), LH | 1 | Arm rest | Armstöd | 6 |
| 0230 | 2 | 98 50 991 | 560), RH | 1 | Arm rest | Armstöd | 6 |
| 0250 | | | TRIM COLOUR E11, E14, | | | | |
| 0260 | | | E24, E33 | | | | |
| 0265 | 1 | 98 68 597 | 570), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0270 | 1 | 98 68 605 | 570), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0280 | 1 | 98 70 429 | 570,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0290 | 1 | 98 70 437 | 570,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0300 | 2 | 98 68 993 | 570), LH | 1 | Arm rest | Armstöd | 6 |
| 0310 | 2 | 98 69 009 | 570), RH | 1 | Arm rest | Armstöd | 6 |
| 0340 | | | TRIM COLOUR F11,F14,F24 | | | | |
| 0345 | 1 | 96 84 762 | 580), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0350 | 1 | 96 84 770 | 580), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0360 | 1 | 96 84 838 | 580,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0370 | 1 | 96 84 846 | 580,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0380 | 2 | 96 84 507 | 580), LH | 1 | Arm rest | Armstöd | 6 |
| 0390 | 2 | 96 84 515 | 580), RH | 1 | Arm rest | Armstöd | 6 |
| 0400 | | | | | | | |
| 0410 | 3 | 79 22 396 | | 8 | Screw | Skruv | 5 |
| 0420 | 4 | 84 10 961 | | 2 | Screw | Skruv | 5 |
| 0430 | 5 | 97 11 961 | 590) | 2 | Plastic washer | Plastbricka | 5 |
| 0440 | 5 | 94 65 816 | 600) | 2 | Plastic washer | Plastbricka | 5 |
| 0450 | 5 | 97 04 883 | 560) | 2 | Plastic washer | Plastbricka | 5 |
| 0460 | 5 | 98 67 896 | 610) | 2 | Plastic washer | Plastbricka | 5 |
| 0470 | 5 | 96 85 132 | 580) | 2 | Plastic washer | Plastbricka | 5 |
| 0480 | 6 | 86 01 916 | | 6 | Clip nut | Clipsmutter | 3 |
| 0490 | 7 | 84 88 447 | | 10 | Clip | Clips | 5 |
| 0500 | 8 | 79 69 314 | | 2 | Screw | Skruv | 5 |

34. For electrical window regulator. För elektrisk fönsterhiss.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun
610. Black Svart




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

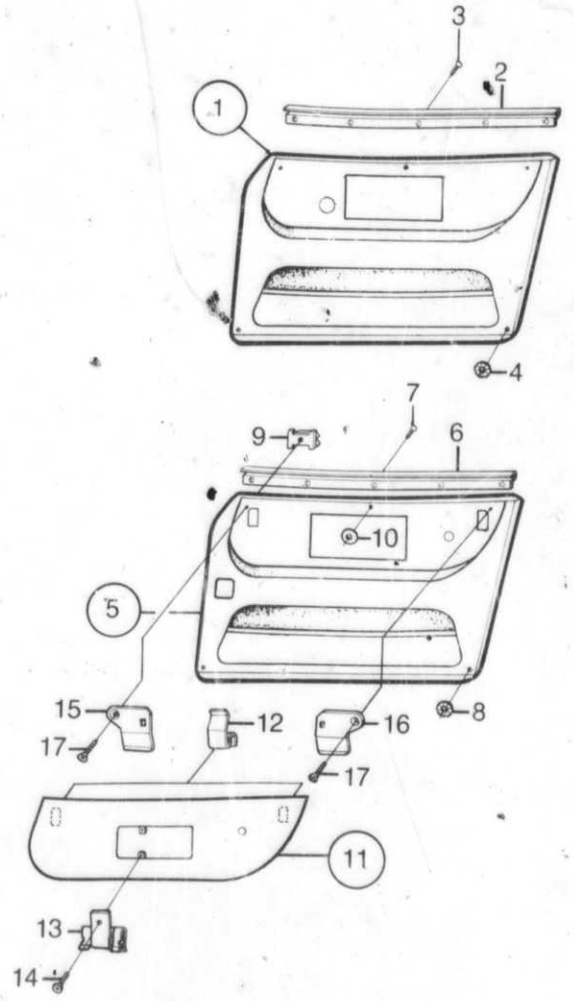


F0052 - 900

Upholstery

# 6-E14

## Door trim 1989
## 500), Front, 2SN, 3CK, CV

Klädsel

## Dörrklädsel 1989
## 500), Fram, 2SN, 3CK, CV

| 1419 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 96 86 049 | | 560), LH,TRIM COLOUR C41 | 1 | Door trim | Dörrklädsel | 6 |
| 0020 | 1 | 96 86 056 | | 560), RH,TRIM COLOUR C41 | 1 | Door trim | Dörrklädsel | 6 |
| 0030 | 1 | 95 31 468 | | 570), LH,TRIM COLOUR E41 | 1 | Door trim | Dörrklädsel | 6 |
| 0040 | 1 | 95 31 476 | | 570), RH,TRIM COLOUR E41 | 1 | Door trim | Dörrklädsel | 6 |
| 0050 | 1 | 96 85 819 | | 580), LH,TRIM COLOUR F41 | 1 | Door trim | Dörrklädsel | 6 |
| 0060 | 1 | 96 85 835 | | 580), RH,TRIM COLOUR F41 | 1 | Door trim | Dörrklädsel | 6 |
| 0070 | 1 | 95 34 611 | | 590), LH,TRIM COLOUR G41 | 1 | Door trim | Dörrklädsel | 6 |
| 0080 | 1 | *95 34 629* | | 590), RH,TRIM COLOUR G41 | 1 | Door trim | Dörrklädsel | 6 |
| 0080 | | | | NLS - USE 4125076 | | | | |
| 0090 | 2 | 98 31 991 | | LH | 1 | .Strip | .List | 6 |
| 0100 | 2 | 98 32 007 | | RH | 1 | .Strip | .List | 6 |
| 0110 | 3 | 94 25 232 | | | 10 | .Screw | .Skruv | 5 |
| 0120 | 4 | 97 04 883 | | 560) | 10 | Plastic washer | Plastbricka | 5 |
| 0130 | 4 | 98 67 896 | | 610) | 10 | Plastic washer | Plastbricka | 5 |
| 0140 | 4 | 96 85 132 | | 580) | 10 | Plastic washer | Plastbricka | 5 |
| 0150 | 4 | 95 34 637 | | 590) | 10 | Plastic washer | Plastbricka | 5 |
| 0160 | | | | | | | | |
| 0170 | | | | | | DOOR TRIM FOR UPHOLSTERY PLATE | DÖRRKLÄDSEL FÖR KLÄDSELPLATTA | |
| 0180 | | | | | | | | |
| 0190 | | | | TRIM COLOUR C44, C33 | | | | |
| 0200 | 5 | 96 86 064 | | 560), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0210 | 5 | 96 86 072 | | 560), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0220 | 5 | 96 47 850 | | 560), CV, LH | 1 | Door trim | Dörrklädsel | 6 |
| 0230 | 5 | 96 47 868 | | 560), CV, RH | 1 | Door trim | Dörrklädsel | 6 |
| 0240 | | | | TRIM COLOUR E44, E33 | | | | |
| 0250 | 5 | *98 67 870* | | 570), LH NLS - USE 4125191 | 1 | Door trim | Dörrklädsel | 6 |
| 0260 | 5 | 98 67 888 | | 570), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0270 | 5 | 96 47 876 | | 570), CV, LH | 1 | Door trim | Dörrklädsel | 6 |
| 0280 | 5 | 96 47 884 | | 570), CV, RH | 1 | Door trim | Dörrklädsel | 6 |
| 0290 | | | | TRIM COLOUR F44, F33 | | | | |
| 0300 | 5 | *96 85 827* | | 580), LH NLS - USE 4125266 | 1 | Door trim | Dörrklädsel | 6 |
| 0310 | 5 | *96 85 843* | | 580), RH NLS - USE 4125274 | 1 | Door trim | Dörrklädsel | 6 |
| 0320 | | | | TRIM COLOUR G44, G33 | | | | |
| 0330 | 5 | *95 34 793* | | 590), LH NLS - USE 4125290 | 1 | Door trim | Dörrklädsel | 6 |
| 0340 | 5 | 95 34 801 | | 590), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0350 | 5 | 96 49 831 | | 590), CV, LH | 1 | Door trim | Dörrklädsel | 6 |
| 0360 | 5 | 96 49 849 | | 590), CV, RH | 1 | Door trim | Dörrklädsel | 6 |
| 0370 | | | | | | | | |
| 0380 | 6 | 98 31 991 | | LH | 1 | .Strip | .List | 6 |
| 0390 | 6 | 98 32 007 | | RH | 1 | .Strip | .List | 6 |
| 0400 | 7 | 94 25 232 | | | 10 | .Screw | .Skruv | 5 |
| 0410 | 7 | 79 72 201 | | CV | 10 | .Screw | .Skruv | 5 |
| 0420 | 8 | 97 04 883 | | 560) | 4 | Plastic washer | Plastbricka | 5 |
| 0430 | 8 | 98 67 896 | | 610) | 4 | Plastic washer | Plastbricka | 5 |
| 0440 | 8 | 96 85 132 | | 580) | 4 | Plastic washer | Plastbricka | 5 |
| 0450 | 8 | 95 34 637 | | 590) | 4 | Plastic washer | Plastbricka | 5 |
| 0460 | 9 | 86 01 916 | | | 4 | Clip nut | Clipsmutter | 3 |
| 0470 | 10 | 79 16 497 | | | 2 | Washer | Bricka | 5 |

500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
610. Black Svart



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-E16

## Door trim 1989
## 500), Front, 2SN, 3CK, CV

## Dörrklädsel 1989
## 500), Fram, 2SN, 3CK, CV

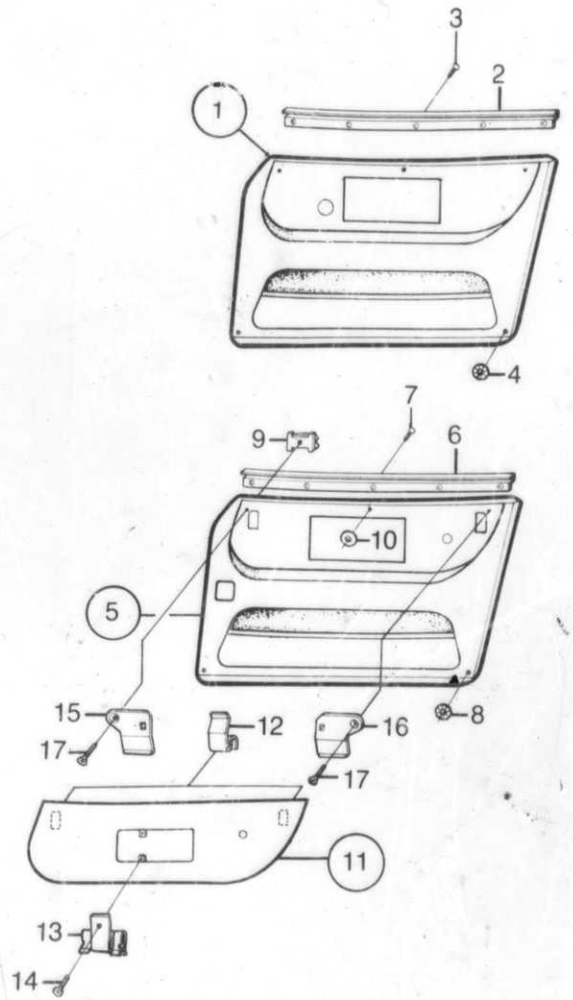


| 1419 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0480 | | | | TRIM COLOUR C44, C33 | | | | |
| 0490 | 11 | 98 68 423 | | 560), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0500 | 11 | 98 68 431 | | 560), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0510 | 11 | 98 70 858 | | 560,34), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0520 | 11 | 98 70 866 | | 560,34), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0530 | | | | TRIM COLOUR E44, E33 | | | | |
| 0540 | 11 | 98 68 449 | | 570), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0550 | 11 | 98 68 456 | | 570), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0560 | 11 | 98 70 916 | | 570,34), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0570 | 11 | 98 70 924 | | 570,34), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0580 | | | | TRIM COLOUR F44, F33 | | | | |
| 0590 | 11 | 96 82 709 | | 580), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0600 | 11 | 96 82 717 | | 580), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0610 | 11 | 96 82 725 | | 580,34), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0620 | 11 | 96 82 733 | | 580,34), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0630 | | | | TRIM COLOUR G44, G33 | | | | |
| 0640 | 11 | 95 36 822 | | 590), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0650 | 11 | 95 36 830 | | 590), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0660 | 11 | 95 36 863 | | 590,34), LH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0670 | 11 | 95 36 871 | | 590,34), RH | 1 | Upholstery plate | Klädselplatta | 6 |
| 0680 | | | | | | | | |
| 0690 | 12 | 98 12 058 | | | 4 | ,Clamp | ,Klämma | 5 |
| 0700 | 13 | 98 30 050 | | | 4 | ,Clamp | ,Klämma | 5 |
| 0710 | 14 | 79 22 206 | | | X | Screw | Skruv | 5 |
| 0720 | 15 | 98 12 033 | | LH | 2 | Clamp | Klämma | 6 |
| 0730 | 16 | 98 12 041 | | RH | 2 | Clamp | Klämma | 6 |
| 0740 | 17 | 79 72 201 | | | 10 | Screw | Skruv | 5 |


34. For electrical window regulator. För elektrisk fönsterhiss.
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

8B GROUP INDEX

| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

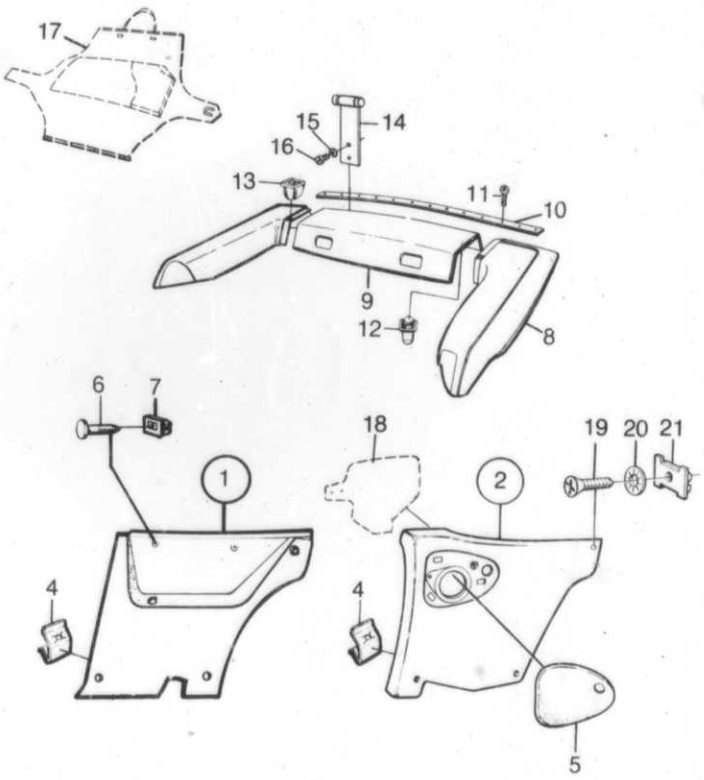


F2548 - 900

Upholstery

# 6-E18

## Side trim 1989

## 500), Rear, 2SN, 3CK, CV

Klädsel

## Sidklädsel 1989

## 500), Bak, 2SN, 3CK, CV

| 1420 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | | | | TRIM COLOUR C41,C44,C33 | | | | |
| 0025 | 1 | 96 85 058 | | 560), LH | 1 | Side lining | Sidklädsel | 6 |
| 0030 | 1 | 96 85 066 | | 560), RH | 1 | Side lining | Sidklädsel | 6 |
| 0040 | 1 | 96 85 033 | | 560,60), LH | 1 | Side lining | Sidklädsel | 6 |
| 0050 | 1 | 96 85 041 | | 560,60), RH | 1 | Side lining | Sidklädsel | 6 |
| 0060 | 2 | 96 46 738 | | 560), LH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0070 | 2 | 96 46 746 | | 560), RH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0085 | | | | TRIM COLOUR E41,E44,E33 | | | | |
| 0090 | 1 | 98 67 805 | | 570), LH | 1 | Side lining | Sidklädsel | 6 |
| 0110 | 1 | 98 67 813 | | 570), RH | 1 | Side lining | Sidklädsel | 6 |
| 0120 | 1 | 96 13 456 | | 570,60), LH | 1 | Side lining | Sidklädsel | 6 |
| 0130 | 1 | 96 13 464 | | 570,60), RH | 1 | Side lining | Sidklädsel | 6 |
| 0140 | 2 | 96 46 795 | | 570), LH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0150 | 2 | 96 46 803 | | 570), RH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0180 | | | | TRIM COLOUR F41,F44,F33 | | | | |
| 0185 | 1 | 96 84 556 | | 580), LH | 1 | Side lining | Sidklädsel | 6 |
| 0190 | 1 | 96 84 564 | | 580), RH | 1 | Side lining | Sidklädsel | 6 |
| 0200 | 1 | 96 84 572 | | 580,60), LH | 1 | Side lining | Sidklädsel | 6 |
| 0210 | 1 | 96 84 580 | | 580,60), RH | 1 | Side lining | Sidklädsel | 6 |
| 0240 | | | | TRIM COLOUR G41,G44,G33 | | | | |
| 0245 | 1 | 95 36 988 | | 590), LH | 1 | Side lining | Sidklädsel | 6 |
| 0250 | 1 | 95 36 996 | | 590), RH | 1 | Side lining | Sidklädsel | 6 |
| 0260 | 1 | 95 37 051 | | 590,60), LH | 1 | Side lining | Sidklädsel | 6 |
| 0270 | 1 | 95 37 069 | | 590,60), RH | 1 | Side lining | Sidklädsel | 6 |
| 0280 | 2 | 96 48 072 | | 590), LH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0290 | 2 | 96 48 080 | | 590), RH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0300 | 4 | 94 00 334 | | | X | .Clip | .Clips | 3 |
| 0310 | | | | | | | | |
| 0320 | 5 | 96 48 874 | | 560), LH, CV | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0330 | 5 | 96 48 882 | | 560), RH, CV | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0340 | 5 | 96 48 890 | | 570), LH, CV | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0350 | 5 | 96 48 908 | | 570), RH, CV | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0360 | 5 | 96 48 858 | | 590), LH, CV | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0370 | 5 | 96 48 866 | | 590), RH, CV | 1 | Loudspeaker grille | Högtalargaller | 5 |
| 0380 | | | | | | | | |
| 0390 | 6 | 97 05 906 | | 560) | X | Special screw | Snabbskruv | 5 |
| 0400 | 6 | 98 67 821 | | 610) | X | Special screw | Snabbskruv | 5 |
| 0410 | 6 | 96 84 549 | | 580) | X | Special screw | Snabbskruv | 5 |
| 0420 | 6 | 95 37 002 | | 590) | X | Special screw | Snabbskruv | 5 |
| 0430 | 7 | 84 52 898 | | | X | Quick nut | Snabbmutter | 3 |
| 0440 | | | | | | | | |
| 0450 | 8 | 98 24 699 | | 560), LH, CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0460 | 8 | 98 24 707 | | 560), RH, CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0470 | 8 | 98 84 586 | | 570), LH, CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0480 | 8 | 98 84 594 | | 570), RH, CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0490 | 8 | 98 24 673 | | 590), LH, CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0500 | 8 | 98 24 681 | | 590), RH, CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0510 | 9 | 98 24 723 | | 560), CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0520 | 9 | 98 84 578 | | 570), CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0530 | 9 | 98 24 715 | | 590), CV | 1 | Top cover | Sufflettkåpa | 5 |
| 0540 | | | | | | | | |
| 0550 | 10 | | | See page 8A-025, 5-B02 | 1 | Strip | List | |
| 0560 | 11 | | | See page 8A-025, 5-B02 | 12 | Screw | Skruv | |
| 0570 | 12 | 98 83 422 | | CV | 2 | Clip | Clips | 5 |
| 0580 | 13 | 98 83 430 | | CV | 2 | Clip | Clips | 5 |
| 0590 | 14 | 98 84 107 | | CV | 2 | Strip | Band | 5 |

60. For cars with automatic belts  För bilar med passivt bälte
500. Also valid for SE 1988B.  Gäller även för SE 1988B.
560. Red  Röd
570. Grey  Grå
580. Blue  Blå
590. Yellow  Gul
610. Black  Svart




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

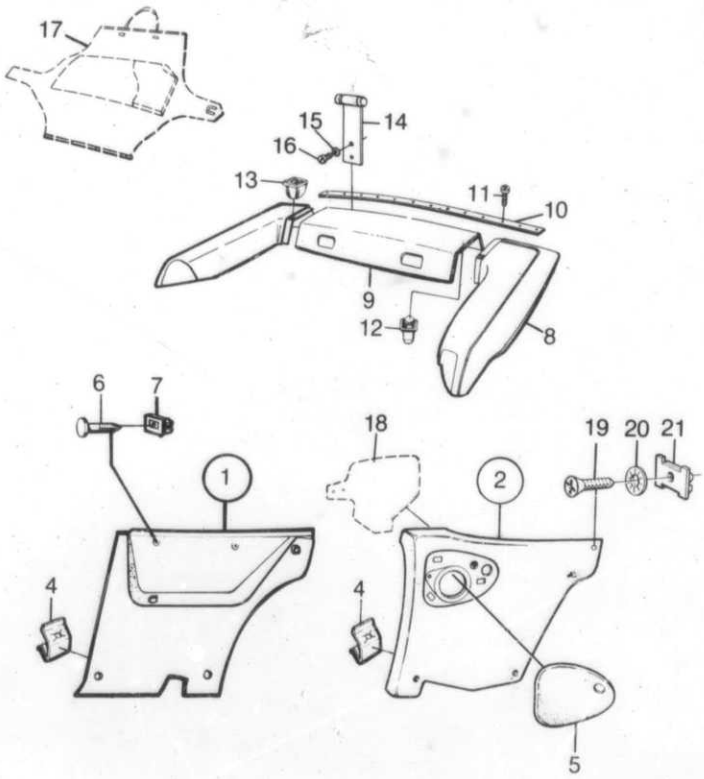


F2548 - 900

| 1420 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0600 | 15 | 84 28 997 | | CV | 4 | Washer | Bricka | 5 |
| 0610 | 16 | 79 75 154 | | CV | 4 | Screw | Skruv | 5 |
| 0620 | 17 | | | See page 8B-197, 6-I06 | | Storage sack | Förvaringspåse | |
| 0630 | 18 | | | LH, CV | 1 | Protection | Skydd | |
| 0640 | | | | See page 8B-215, 6-I24 | | | | |
| 0650 | 18 | | | RH, CV | 1 | Protection | Skydd | |
| 0660 | | | | See page 8B-215, 6-I24 | | | | |
| 0670 | 19 | 79 72 201 | | CV | 10 | Screw | Skruv | 5 |
| 0680 | 20 | 97 11 961 | | 590), CV | 10 | Plastic washer | Plastbricka | 5 |
| 0690 | 20 | 97 04 583 | | 560), CV | 10 | Plastic washer | Plastbricka | 5 |
| 0700 | 20 | 98 67 896 | | 610), CV | 10 | Plastic washer | Plastbricka | 5 |
| 0710 | 21 | 86 01 916 | | CV | 10 | Clip nut | Clipsmutter | 3 |

500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
590. Yellow Gul
610. Black Svart




MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

8B GROUP INDEX

| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

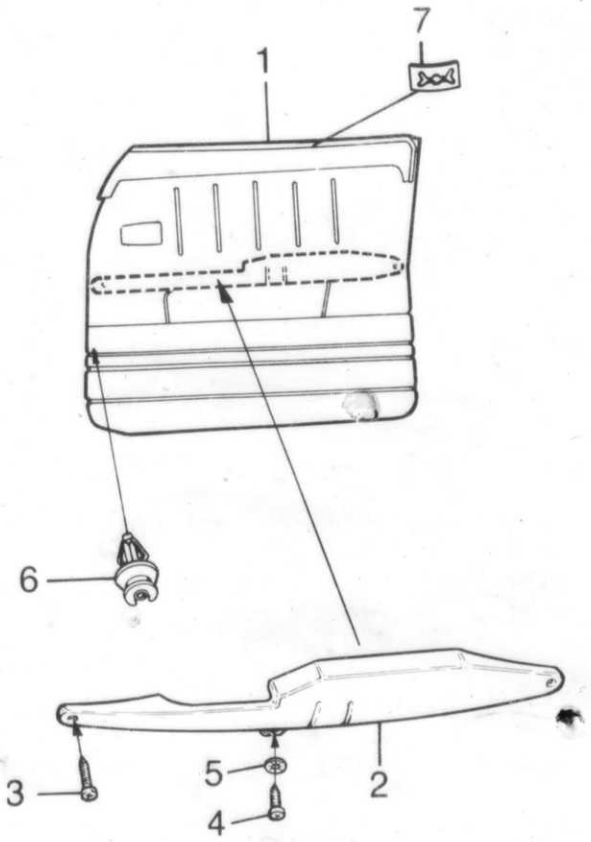


F0054 - 900

| 1421 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | | | | TRIM COLOUR C41,C44,C33 | | | | |
| 0025 | 1 | 98 68 019 | | 560), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0030 | 1 | 98 68 027 | | 560), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0040 | 1 | 98 69 686 | | 560,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0050 | 1 | 98 69 694 | | 560,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0060 | 2 | 98 50 967 | | 560), LH | 1 | Arm rest | Armstöd | 6 |
| 0070 | 2 | 98 50 975 | | 560), RH | 1 | Arm rest | Armstöd | 6 |
| 0100 | | | | TRIM COLOUR E41,E44,E33 | | | | |
| 0105 | 1 | 98 68 134 | | 570), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0110 | 1 | 98 68 142 | | 570), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0120 | 1 | 98 69 744 | | 570,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0130 | 1 | 98 69 751 | | 570,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0140 | 2 | 98 68 977 | | 570), LH | 1 | Arm rest | Armstöd | 6 |
| 0150 | 2 | 98 68 985 | | 570), RH | 1 | Arm rest | Armstöd | 6 |
| 0180 | | | | TRIM COLOUR F41,F44,F33 | | | | |
| 0185 | 1 | 96 85 264 | | 580), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0190 | 1 | 96 85 272 | | 580), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0200 | 1 | 96 85 413 | | 580,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0210 | 1 | 96 85 421 | | 580,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0220 | 2 | 96 84 481 | | 580), LH | 1 | Arm rest | Armstöd | 6 |
| 0230 | 2 | 96 84 499 | | 580), RH | 1 | Arm rest | Armstöd | 6 |
| 0260 | | | | TRIM COLOUR G41,G44,G33 | | | | |
| 0265 | 1 | 95 34 843 | | 590), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0270 | 1 | 95 34 850 | | 590), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0280 | 1 | 95 35 030 | | 590,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0290 | 1 | 95 35 048 | | 590,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0300 | 2 | 95 36 905 | | 590), LH | 1 | Arm rest | Armstöd | 6 |
| 0310 | 2 | 95 36 913 | | 590), RH | 1 | Arm rest | Armstöd | 6 |
| 0320 | | | | | | | | |
| 0330 | 3 | 79 22 396 | | | 4 | Screw | Skruv | 5 |
| 0340 | 4 | 79 34 797 | | | 2 | Screw | Skruv | 5 |
| 0350 | 5 | 79 15 564 | | | 2 | Star washer | Taggbricka | 5 |
| 0360 | 6 | 94 73 869 | | | 20 | Clip | Clips | 5 |
| 0370 | 7 | 84 88 447 | | | 10 | Clip | Clips | 5 |

34. For electrical window regulator. För elektrisk fönsterhiss.
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-E24

## Door trim 1989 500), Rear, 4SN, 5CK

## Dörrklädsel 1989 500), Bak, 4SN, 5CK

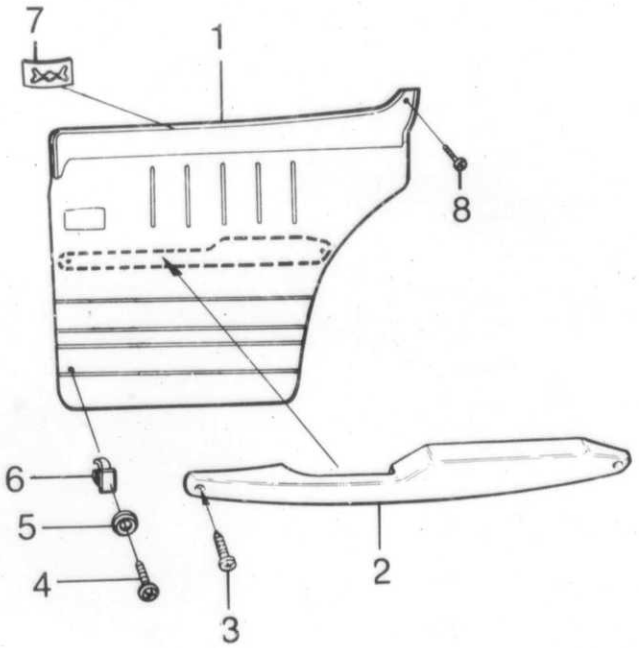


F0055 - 900

| 1422 | Pos | Part No/Art nr | K S | Notes Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | | | | TRIM COLOUR C41,C44,C33 | | | | |
| 0025 | 1 | 98 68 571 | | 560), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0030 | 1 | 98 68 589 | | 560), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0040 | 1 | 98 70 361 | | 560,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0050 | 1 | 98 70 379 | | 560,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0060 | 2 | 98 50 983 | | 560), LH | 1 | Arm rest | Armstöd | 6 |
| 0070 | 2 | 98 50 991 | | 560), RH | 1 | Arm rest | Armstöd | 6 |
| 0100 | | | | TRIM COLOUR E41,E44,E33 | | | | |
| 0105 | 1 | 98 68 597 | | 570), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0110 | 1 | 98 68 605 | | 570), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0120 | 1 | 98 70 429 | | 570,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0130 | 1 | 98 70 437 | | 570,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0140 | 2 | 98 68 993 | | 570), LH | 1 | Arm rest | Armstöd | 6 |
| 0150 | 2 | 98 69 009 | | 570), RH | 1 | Arm rest | Armstöd | 6 |
| 0180 | | | | TRIM COLOUR F41,F44,F33 | | | | |
| 0185 | 1 | 96 84 762 | | 580), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0190 | 1 | 96 84 770 | | 580), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0200 | 1 | 96 84 838 | | 580,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0210 | 1 | 96 84 846 | | 580,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0220 | 2 | 96 84 507 | | 580), LH | 1 | Arm rest | Armstöd | 6 |
| 0230 | 2 | 96 84 515 | | 580), RH | 1 | Arm rest | Armstöd | 6 |
| 0260 | | | | TRIM COLOUR G41,G44,G33 | | | | |
| 0265 | 1 | 95 35 378 | | 590), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0270 | 1 | 95 35 386 | | 590), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0280 | 1 | 95 35 584 | | 590,34), LH | 1 | Door trim | Dörrklädsel | 6 |
| 0290 | 1 | 95 35 592 | | 590,34), RH | 1 | Door trim | Dörrklädsel | 6 |
| 0300 | 2 | 95 36 921 | | 590), LH | 1 | Arm rest | Armstöd | 6 |
| 0310 | 2 | 95 36 939 | | 590), RH | 1 | Arm rest | Armstöd | 6 |
| 0320 | | | | | | | | |
| 0330 | 3 | 79 22 396 | | | 8 | Screw | Skruv | 5 |
| 0340 | 4 | 84 10 961 | | | 2 | Screw | Skruv | 5 |
| 0350 | 5 | 97 04 883 | | 560) | 2 | Plastic washer | Plastbricka | 5 |
| 0360 | 5 | 98 67 896 | | 610) | 2 | Plastic washer | Plastbricka | 5 |
| 0370 | 5 | 96 85 132 | | 580) | 2 | Plastic washer | Plastbricka | 5 |
| 0380 | 5 | 95 34 637 | | 590) | 2 | Plastic washer | Plastbricka | 5 |
| 0390 | 6 | 86 01 916 | | | 6 | Clip nut | Clipsmutter | 5 |
| 0400 | 7 | 84 88 447 | | | 10 | Clip | Clips | 5 |
| 0410 | 8 | 79 69 314 | | | 2 | Screw | Skruv | 5 |

34. For electrical window regulator. För elektrisk fönsterhiss.
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
610. Black Svart




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

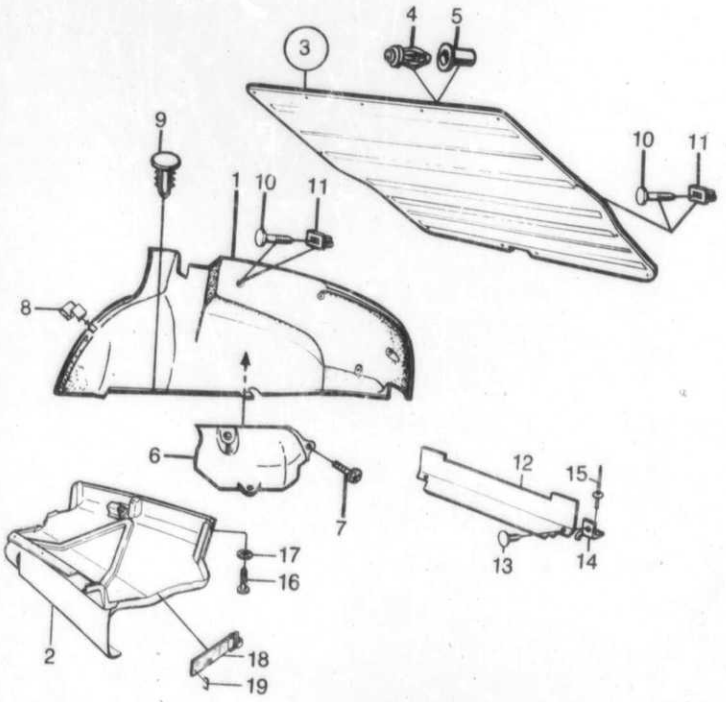


F2549 - 900

Upholstery
# 6-F02
## Luggage compartment

Klädsel
## Bagagerum

| 1423 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 98 09 732 | | LH, 2SN | 1 | Side lining | Sidklädsel | 6 |
| 0030 | 1 | 98 09 740 | | RH, 2SN | 1 | Side lining | Sidklädsel | 6 |
| 0050 | 1 | 97 40 739 | | LH, 4SN | 1 | Side lining | Sidklädsel | 6 |
| 0070 | 1 | 94 73 117 | | RH, 4SN | 1 | Side lining | Sidklädsel | 6 |
| 0090 | 1 | 98 17 438 | | 1986, LH, CD | 1 | Side lining | Sidklädsel | 7 |
| 0110 | 1 | *98 03 834* | | 1986, RH, CD NLS | 1 | Side lining | Sidklädsel | 7 |
| 0130 | 1 | 94 64 876 | | LH, CK | 1 | Side lining | Sidklädsel | 6 |
| 0150 | 1 | 94 64 884 | | RH, CK | 1 | Side lining | Sidklädsel | 6 |
| 0170 | 1 | 98 81 657 | | 89), LH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0190 | 1 | 98 24 897 | | 90), LH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0210 | 1 | 98 81 665 | | RH, CV | 1 | Side lining | Sidklädsel | 6 |
| 0230 | | | | | | | | |
| 0240 | 2 | *98 81 764* | | 89), CV NLS - USE 9824954 | 1 | Upholstery | Klädsel | 6 |
| 0260 | 2 | 98 24 954 | | 90,163), CV | 1 | Upholstery | Klädsel | 6 |
| 0275 | 2 | 96 45 367 | | 164), CV | 1 | Upholstery | Klädsel | 6 |
| 0280 | 3 | 98 78 588 | | | 1 | Upholstery | Klädsel | 6 |
| 0300 | 4 | 94 73 869 | | | 5 | Clip | Clips | 5 |
| 0310 | 5 | 94 73 877 | | | 5 | Sleeve | Hylsa | 5 |
| 0330 | 6 | 94 64 843 | | | 1 | Cover | Kåpa | |
| 0340 | 7 | 79 22 420 | | | 3 | Screw | Skruv | 5 |
| 0350 | 8 | 94 92 885 | | 4SN, 5CK | 6 | Clip | Clips | 5 |
| 0360 | 8 | 94 92 885 | | 1986, CD | 6 | Clip | Clips | 5 |
| 0370 | 9 | 84 83 893 | | | 3 | Clip | Clips | 5 |
| 0380 | 10 | 94 64 926 | | | 17 | Special screw | Snabbskruv | 5 |
| 0400 | 10 | 94 64 926 | | CV | 11 | Special screw | Snabbskruv | 5 |
| 0420 | 11 | 84 52 898 | | | 29 | Quick nut | Snabbmutter | 3 |
| 0430 | 11 | 84 52 898 | | CV | 11 | Quick nut | Snabbmutter | 3 |
| 0440 | 12 | 96 15 493 | | -1987, SN | 1 | Upholstery | Klädsel | 6 |
| 0450 | 12 | 96 15 493 | | 1986, CD | 1 | Upholstery | Klädsel | 6 |
| 0460 | 12 | *97 08 421* | | -1987, CV NLS - USE 9531336 | 1 | Upholstery | Klädsel | 6 |
| 0470 | 12 | 95 31 336 | | 1988-, SN, CV | 1 | Upholstery | Klädsel | 6 |
| 0480 | 13 | 84 83 893 | | | 2 | Clip | Clips | 5 |
| 0490 | 14 | 94 90 954 | | SN | 2 | Bracket | Konsol | 6 |
| 0500 | 14 | 94 90 954 | | 1986, CD | 2 | Bracket | Konsol | 6 |
| 0510 | 15 | 79 72 490 | | SN | 2 | Rivet | Nit | 5 |
| 0520 | 16 | 79 70 536 | | CV | 6 | Screw | Skruv | 6 |
| 0530 | 17 | 79 73 894 | | CV | 6 | Washer | Bricka | 5 |
| 0540 | 18 | 98 24 434 | | 1987-, CV | 2 | Bracket | Fäste | 5 |
| 0550 | 19 | *73 74 218* | | 1987-, CV NLS | 4 | Staple | Häftklammer | 5 |

89. Ch. --H7002291
90. Ch. H7002292--
163. Ch --J7005071
164. Ch J7005072--



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-F04

## Carpets 1986

## Mattor 1986

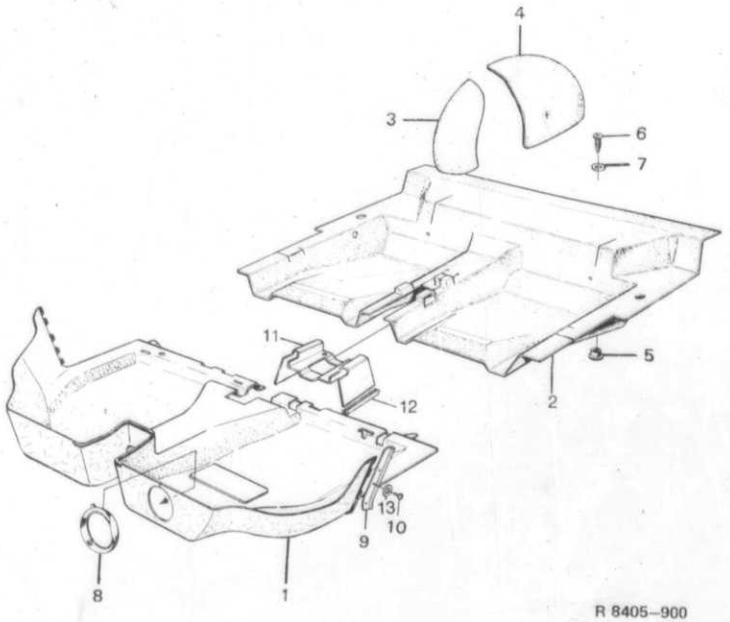


R 8405-900

| 1424 | Pos. | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | TRIM COLOUR A11, A22 A23, A33 | | | | |
| 0020 | | | | | | | | |
| 0025 | 1 | 98 47 617 | | 590) | 1 | Carpet | Matta | 6 |
| 0030 | 1 | 98 47 625 | | 590), RHD | 1 | Carpet | Matta | 6 |
| 0040 | 1 | 98 47 872 | | 590), B202 | 1 | Carpet | Matta | 6 |
| 0050 | 1 | 98 47 880 | | 590), B202, RHD | 1 | Carpet | Matta | 6 |
| 0060 | 2 | 98 47 633 | | 590), 2SN, 3CK | 1 | Carpet | Matta | 6 |
| 0070 | 2 | 98 47 641 | | 590), 4SN, 5CK | 1 | Carpet | Matta | 6 |
| 0080 | 2 | 98 19 731 | | 590), CD | 1 | Carpet | Matta | |
| 0110 | | | | TRIM COLOUR B11,B22,B23 | | | | |
| 0115 | 1 | 98 69 140 | | 600) | 1 | Carpet | Matta | 6 |
| 0120 | 1 | 98 69 165 | | 600), RHD | 1 | Carpet | Matta | 6 |
| 0130 | 1 | 98 69 504 | | 600), B202 | 1 | Carpet | Matta | 6 |
| 0140 | 1 | 98 69 520 | | 600), B202, RHD | 1 | Carpet | Matta | 6 |
| 0150 | 2 | 98 69 223 | | 600), 2SN, 3CK | 1 | Carpet | Matta | 6 |
| 0160 | 2 | 98 69 249 | | 600), 4SN, 5CK | 1 | Carpet | Matta | 6 |
| 0170 | 2 | 98 69 322 | | 600), CD | 1 | Carpet | Matta | 6 |
| 0190 | | | | TRIM COLOUR C11, C22, C23, C33 | | | | |
| 0200 | | | | | | | | |
| 0205 | 1 | 98 28 203 | | 560) | 1 | Carpet | Matta | 6 |
| 0210 | 1 | 98 28 211 | | 560), RHD | 1 | Carpet | Matta | 6 |
| 0220 | 1 | 98 30 324 | | 560), B202 | 1 | Carpet | Matta | 6 |
| 0230 | 1 | 98 30 282 | | 560), B202, RHD | 1 | Carpet | Matta | 6 |
| 0240 | 2 | 98 28 229 | | 560), 2SN, 3CK | 1 | Carpet | Matta | 6 |
| 0250 | 2 | 98 28 237 | | 560), 4SN, 5CK | 1 | Carpet | Matta | 6 |
| 0260 | 2 | 98 15 028 | | 560), CD | 1 | Carpet | Matta | 7 |
| 0290 | | | | TRIM COLOUR D11,D22,D23 | | | | |
| 0295 | 1 | 98 08 528 | | 580) | 1 | Carpet | Matta | 6 |
| 0300 | 1 | 98 08 536 | | 580), RHD | 1 | Carpet | Matta | 6 |
| 0310 | 1 | 98 30 340 | | 580), B202 | 1 | Carpet | Matta | 6 |
| 0320 | 1 | 98 30 308 | | 580), B202, RHD | 1 | Carpet | Matta | 6 |
| 0330 | 2 | 98 08 544 | | 580), 2SN, 3CK | 1 | Carpet | Matta | 6 |
| 0340 | 2 | 98 08 551 | | 580), 4SN, 5CK | 1 | Carpet | Matta | 6 |
| 0350 | 2 | 98 15 374 | | 580), CD | 1 | Carpet | Matta | 7 |
| 0380 | | | | TRIM COLOUR E22,E23,E33 | | | | |
| 0385 | 1 | 98 69 157 | | 570) | 1 | Carpet | Matta | 6 |
| 0390 | 1 | 98 69 173 | | 570), RHD | 1 | Carpet | Matta | 6 |
| 0400 | 1 | 98 69 512 | | 570), B202 | 1 | Carpet | Matta | 6 |
| 0410 | 1 | 98 69 538 | | 570), B202, RHD | 1 | Carpet | Matta | 6 |
| 0420 | 1 | 98 82 051 | | 570), CV | 1 | Carpet | Matta | 6 |
| 0430 | 2 | 98 69 231 | | 570), 2SN, 3CK | 1 | Carpet | Matta | 6 |
| 0440 | 2 | 98 82 119 | | 570), CV | 1 | Carpet | Matta | 6 |
| 0450 | 2 | 98 69 256 | | 570), 4SN, 5CK | 1 | Carpet | Matta | 6 |
| 0460 | 2 | 98 69 330 | | 570), CD | 1 | Carpet | Matta | 6 |
| 0470 | | | | | | | | |
| 0480 | 3 | 84 68 175 | | LH | 1 | Wheel housing cover | Hjulhusklädsel | 6 |
| 0490 | 3 | 84 68 183 | | RH | 1 | Wheel housing cover | Hjulhusklädsel | 6 |
| 0500 | 4 | 84 68 191 | | LH | 1 | Wheel housing cover | Hjulhusklädsel | 6 |
| 0510 | 4 | 84 68 209 | | RH | 1 | Wheel housing cover | Hjulhusklädsel | 6 |
| 0520 | 5 | 73 46 232 | | 2SN, 3CK | 2 | Bracket | Fäste | 5 |
| 0530 | 6 | 79 22 206 | | 2SN, 3CK | 2 | Screw | Skruv | 5 |
| 0540 | 7 | 70 88 073 | | 2SN, 3CK | 2 | Washer | Bricka | 5 |
| 0550 | 8 | *94 32 030* | | NLS | 1 | Bracket | Hållare | 5 |
| 0560 | 8 | 94 32 048 | | RHD | 1 | Bracket | Hållare | 5 |
| 0570 | 9 | 94 71 897 | | LH | 1 | Attaching plate | Fästplåt | 5 |
| 0580 | 9 | 94 71 905 | | RH | 1 | Attaching plate | Fästplåt | 5 |
| 0590 | 9 | 98 80 634 | | CV, LH | 1 | Attaching plate | Fästplåt | 5 |
| 0600 | 9 | 98 80 642 | | CV, RH | 1 | Attaching plate | Fästplåt | 5 |

560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-F06

## Carpets 1986
## Mattor 1986

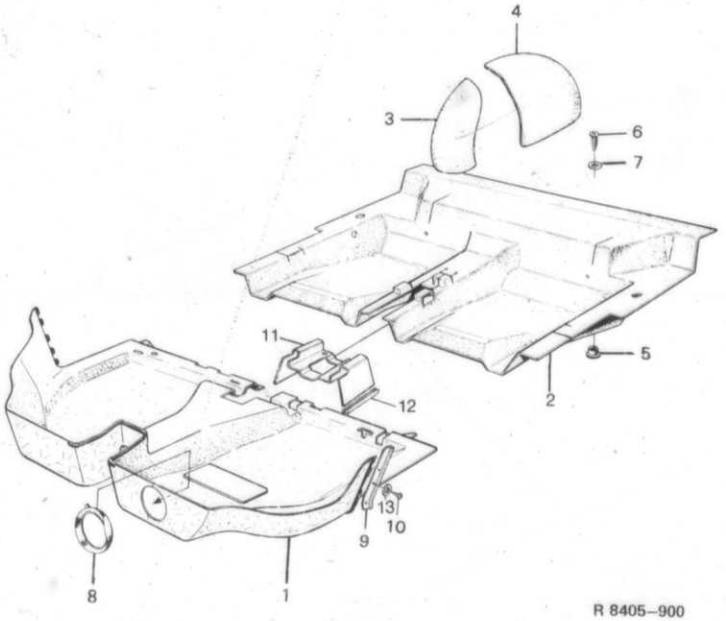


R 8405–900

| 1424 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0610 | 10 | 79 70 312 | | | 6 | Screw | Skruv | 5 |
| 0620 | 11 | 97 23 735 | | | 1 | Bracket | Konsol | 6 |
| 0630 | 12 | 82 62 974 | | | 1 | Protecting moulding | Skyddslist | 6 |
| 0640 | | | | | | | | |
| 0650 | | 98 23 188 | | 590), CD | 2 | Foot rest | Fotstöd | 7 |
| 0660 | | 98 69 348 | | 600), CD | 2 | Foot rest | Fotstöd | 7 |
| 0670 | | 98 23 170 | | 560), CD | 2 | Foot rest | Fotstöd | 7 |
| 0680 | | 98 23 196 | | 580), CD | 2 | Foot rest | Fotstöd | 7 |
| 0690 | | 98 69 355 | | 570), CD | 2 | Foot rest | Fotstöd | 7 |

560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-F08

## Carpets 1987
## Mattor 1987

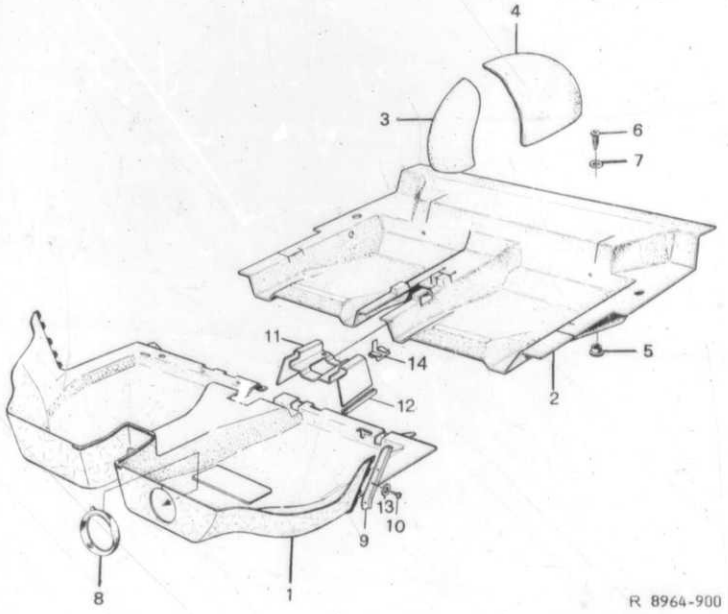


R 8964-900

| 1425 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | TRIM COLOUR A11, A12, | | | | |
| 0020 | | | | A23, A33 | | | | |
| 0025 | 1 | 98 47 617 | | 590) | 1 | Carpet | Matta | 6 |
| 0030 | 1 | 98 47 625 | | 590), RHD | 1 | Carpet | Matta | 6 |
| 0040 | 1 | 98 47 872 | | 590), B202 | 1 | Carpet | Matta | 6 |
| 0050 | 1 | 98 47 880 | | 590), B202, RHD | 1 | Carpet | Matta | 6 |
| 0060 | 1 | 98 80 691 | | 590), CV | 1 | Carpet | Matta | 6 |
| 0070 | 1 | 98 80 725 | | 590), CV, RHD | 1 | Carpet | Matta | 6 |
| 0080 | 1 | 96 10 429 | | 590,60) | 1 | Carpet | Matta | 6 |
| 0090 | 2 | 98 47 633 | | 590), 2SN, 3CK | 1 | Carpet | Matta | 6 |
| 0100 | 2 | 96 10 841 | | 590,60) | 1 | Carpet | Matta | 6 |
| 0110 | 2 | 98 47 641 | | 590), 4SN, 5CK | 1 | Carpet | Matta | 6 |
| 0120 | 2 | 98 80 832 | | 590), CV | 1 | Carpet | Matta | 6 |
| 0140 | | | | TRIM COLOUR B11, B12 | | | | |
| 0150 | | | | B23, B33 | | | | |
| 0155 | 1 | 98 69 140 | | 600) | 1 | Carpet | Matta | 6 |
| 0160 | 1 | 98 69 165 | | 600), RHD | 1 | Carpet | Matta | 6 |
| 0170 | 1 | 98 69 504 | | 600), B202 | 1 | Carpet | Matta | 6 |
| 0180 | 1 | 98 69 520 | | 600), B202, RHD | 1 | Carpet | Matta | 6 |
| 0190 | 2 | 98 69 223 | | 600), 2SN, 3CK | 1 | Carpet | Matta | 6 |
| 0200 | 2 | 98 69 249 | | 600), 4SN, 5CK | 1 | Carpet | Matta | 6 |
| 0220 | | | | TRIM COLOUR C11, C12, | | | | |
| 0230 | | | | C23, C33 | | | | |
| 0235 | 1 | 98 28 203 | | 560) | 1 | Carpet | Matta | 6 |
| 0240 | 1 | 98 28 211 | | 560), RHD | 1 | Carpet | Matta | 6 |
| 0250 | 1 | 98 30 324 | | 560), B202 | 1 | Carpet | Matta | 6 |
| 0260 | 1 | 98 30 282 | | 560), B202, RHD | 1 | Carpet | Matta | 6 |
| 0270 | 1 | 98 80 709 | | 560), CV | 1 | Carpet | Matta | 6 |
| 0280 | 1 | 98 80 733 | | 560), CV, RHD | 1 | Carpet | Matta | 6 |
| 0290 | 1 | 96 10 411 | | 560,60) | 1 | Carpet | Matta | 6 |
| 0300 | 2 | 98 28 229 | | 560), 2SN, 3CK | 1 | Carpet | Matta | 6 |
| 0310 | 2 | 98 28 237 | | 560), 4SN, 5CK | 1 | Carpet | Matta | 6 |
| 0320 | 2 | 98 80 840 | | 560), CV | 1 | Carpet | Matta | 6 |
| 0330 | 2 | 96 10 833 | | 560,60) | 1 | Carpet | Matta | 6 |
| 0360 | | | | TRIM COLOUR D11,D12,D23 | | | | |
| 0365 | 1 | 98 08 528 | | 580) | 1 | Carpet | Matta | 6 |
| 0370 | 1 | 98 08 536 | | 580), RHD | 1 | Carpet | Matta | 6 |
| 0380 | 1 | 98 30 340 | | 580), B202 | 1 | Carpet | Matta | 6 |
| 0390 | 1 | 98 30 308 | | 580), B202, RHD | 1 | Carpet | Matta | 6 |
| 0400 | 1 | 96 10 437 | | 580,60) | 1 | Carpet | Matta | 6 |
| 0410 | 2 | 98 08 544 | | 580), 2SN, 3CK | 1 | Carpet | Matta | 6 |
| 0420 | 2 | 98 08 551 | | 580), 4SN, 5CK | 1 | Carpet | Matta | 6 |
| 0430 | 2 | 96 10 858 | | 580,60) | 1 | Carpet | Matta | 6 |
| 0460 | | | | TRIM COLOUR E12,E23,E33 | | | | |
| 0465 | 1 | 98 69 157 | | 570) | 1 | Carpet | Matta | 6 |
| 0470 | 1 | 98 69 173 | | 570), RHD | 1 | Carpet | Matta | 6 |
| 0480 | 1 | 98 69 512 | | 570), B202 | 1 | Carpet | Matta | 6 |
| 0490 | 1 | 98 69 538 | | 570), B202, RHD | 1 | Carpet | Matta | 6 |
| 0500 | 1 | 98 82 051 | | 570), CV | 1 | Carpet | Matta | 6 |
| 0510 | 1 | 98 23 857 | | 570), CV, RHD | 1 | Carpet | Matta | 6 |
| 0520 | 1 | 96 10 445 | | 570,60) | 1 | Carpet | Matta | 6 |
| 0530 | 2 | 98 69 231 | | 570), 2SN, 3CK | 1 | Carpet | Matta | 6 |
| 0540 | 2 | 98 69 256 | | 570), 4SN, 5CK | 1 | Carpet | Matta | 6 |
| 0550 | 2 | 98 82 119 | | 570), CV | 1 | Carpet | Matta | 6 |
| 0560 | 2 | 96 10 866 | | 570,60) | 1 | Carpet | Matta | 6 |
| 0570 | | | | | | | | |
| 0580 | 3 | 84 68 175 | | LH | 1 | Wheel housing cover | Hjulhusklädsel | 6 |

60. For cars with automatic belts  För bilar med passivt bälte
560. Red  Röd
570. Grey  Grå
580. Blue  Blå
590. Yellow  Gul
600. Brown  Brun



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-F10

## Carpets 1987

## Mattor 1987

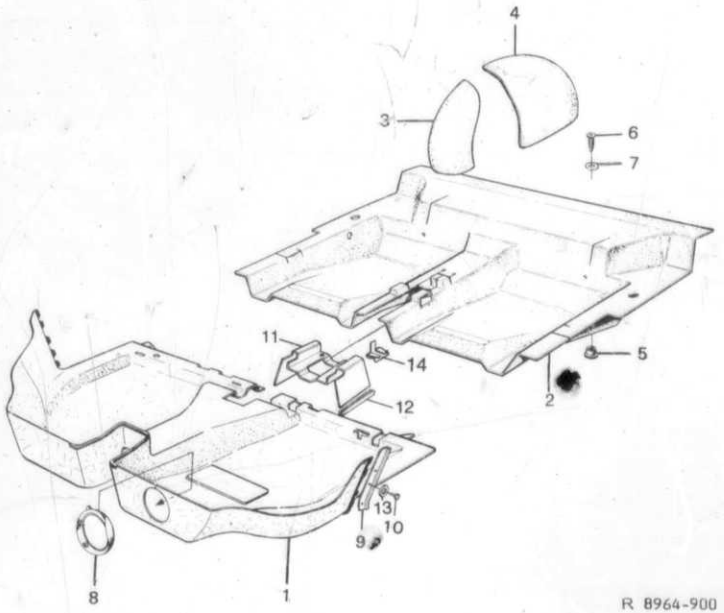


R 8964-900

| 1425 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0590 | 3 | 84 68 183 | | RH | 1 | Wheel housing cover | Hjulhusklädsel | 6 |
| 0600 | 4 | 84 68 191 | | LH | 1 | Wheel housing cover | Hjulhusklädsel | 6 |
| 0610 | 4 | 84 68 209 | | RH | 1 | Wheel housing cover | Hjulhusklädsel | 6 |
| 0620 | 5 | 73 46 232 | | 2SN, 3CK | 2 | Bracket | Fäste | 5 |
| 0630 | 6 | 79 22 206 | | 2SN, 3CK | 2 | Screw | Skruv | 5 |
| 0640 | 7 | 70 88 073 | | 2SN, 3CK | 2 | Washer | Bricka | 5 |
| 0650 | 8 | *94 32 030* | | NLS | 1 | Bracket | Hållare | 5 |
| 0660 | 8 | 94 32 048 | | CV, RHD | 1 | Bracket | Hållare | 5 |
| 0670 | 9 | 94 71 897 | | LH | 1 | Attaching plate | Fästplåt | 5 |
| 0680 | 9 | 94 71 905 | | RH | 1 | Attaching plate | Fästplåt | 5 |
| 0690 | 9 | 98 80 634 | | CV, LH | 1 | Attaching plate | Fästplåt | 5 |
| 0700 | 9 | 98 80 642 | | CV, RH | 1 | Attaching plate | Fästplåt | 5 |
| 0710 | 10 | 79 70 312 | | | 6 | Screw | Skruv | 5 |
| 0720 | 10 | 79 70 320 | | CV | 4 | Screw | Skruv | 5 |
| 0730 | 11 | 97 23 735 | | | 1 | Bracket | Konsol | 6 |
| 0740 | 11 | 98 64 430 | | 60) | 1 | Bracket | Konsol | 5 |
| 0750 | 12 | 82 62 974 | | | 1 | Protecting moulding | Skyddslist | 6 |
| 0760 | 13 | 80 73 249 | | CV | 4 | Washer | Bricka | 5 |
| 0770 | 14 | 84 77 507 | | 1987-,60) | 2 | Clip | Clips | 5 |


60. For cars with automatic belts  För bilar med passivt bälte

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

8B GROUP INDEX

| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

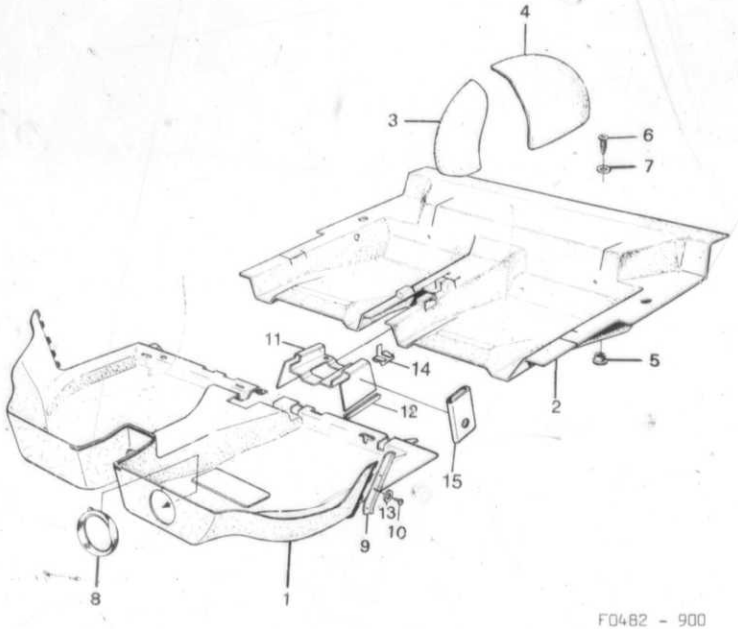


F0482 - 900

| 1426 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | TRIM COLOUR A11, A14, | | | | |
| 0020 | | | | A24, A33 | | | | |
| 0025 | 1 | 98 47 617 | | 590) | 1 | Carpet | Matta | 6 |
| 0030 | 1 | 98 47 625 | | 590), RHD | 1 | Carpet | Matta | 6 |
| 0040 | 1 | 96 86 726 | | 590), B202 | 1 | Carpet | Matta | 6 |
| 0050 | 1 | 96 86 809 | | 590), B202, RHD | 1 | Carpet | Matta | 6 |
| 0060 | 1 | 98 80 691 | | 590), CV | 1 | Carpet | Matta | 6 |
| 0070 | 1 | 98 80 725 | | 590), CV, RHD | 1 | Carpet | Matta | 6 |
| 0080 | 1 | 96 83 301 | | 590,60) | 1 | Carpet | Matta | 6 |
| 0090 | 2 | 96 86 536 | | 590), 2SN, 3CK | 1 | Carpet | Matta | 6 |
| 0100 | 2 | 96 83 442 | | 590,60) | 1 | Carpet | Matta | 6 |
| 0110 | 2 | 96 86 577 | | 590), 4SN, 5CK | 1 | Carpet | Matta | 6 |
| 0120 | 2 | 96 47 173 | | 590), CV | 1 | Carpet | Matta | 6 |
| 0140 | | | | TRIM COLOUR B11, B14, | | | | |
| 0150 | | | | B24, B33 | | | | |
| 0155 | 1 | 98 69 140 | | 600) | 1 | Carpet | Matta | 6 |
| 0160 | 1 | 98 69 165 | | 600), RHD | 1 | Carpet | Matta | 6 |
| 0170 | 1 | 96 86 684 | | 600), B202 | 1 | Carpet | Matta | 6 |
| 0180 | 1 | 96 86 767 | | 600), B202, RHD | 1 | Carpet | Matta | 6 |
| 0190 | 2 | 96 86 510 | | 600), 2SN, 3CK | 1 | Carpet | Matta | 6 |
| 0200 | 2 | 96 86 551 | | 600), 4SN, 5CK | 1 | Carpet | Matta | 6 |
| 0220 | | | | TRIM COLOUR C11, C14, | | | | |
| 0230 | | | | C24, C33 | | | | |
| 0235 | 1 | 98 28 203 | | 560) | 1 | Carpet | Matta | 6 |
| 0240 | 1 | 98 28 211 | | 560), RHD | 1 | Carpet | Matta | 6 |
| 0250 | 1 | 96 86 700 | | 560), B202 | 1 | Carpet | Matta | 6 |
| 0260 | 1 | 96 86 783 | | 560), B202, RHD | 1 | Carpet | Matta | 6 |
| 0270 | 1 | 98 80 709 | | 560), CV | 1 | Carpet | Matta | 6 |
| 0280 | 1 | 98 80 733 | | 560), CV, RHD | 1 | Carpet | Matta | 6 |
| 0290 | 1 | 96 83 269 | | 560,60) | 1 | Carpet | Matta | 6 |
| 0300 | 2 | *96 86 528* | | 560), 2SN, 3CK NLS - USE 4042495 | 1 | Carpet | Matta | 6 |
| 0310 | 2 | *96 86 569* | | 560), 4SN, 5CK NLS - USE 4042586 | 1 | Carpet | Matta | 6 |
| 0320 | 2 | 96 47 165 | | 560), CV | 1 | Carpet | Matta | 6 |
| 0330 | 2 | 96 83 434 | | 560,60) | 1 | Carpet | Matta | 6 |
| 0350 | | | | TRIM COLOUR E11, E14, | | | | |
| 0360 | | | | E24, E33 | | | | |
| 0365 | 1 | 98 69 157 | | 570) | 1 | Carpet | Matta | 6 |
| 0370 | 1 | 98 69 173 | | 570), RHD | 1 | Carpet | Matta | 6 |
| 0380 | 1 | 96 86 742 | | 570), B202 | 1 | Carpet | Matta | 6 |
| 0390 | 1 | 96 86 825 | | 570), B202, RHD | 1 | Carpet | Matta | 6 |
| 0400 | 1 | 98 82 051 | | 570), CV | 1 | Carpet | Matta | 6 |
| 0410 | 1 | 98 23 857 | | 570), CV, RHD | 1 | Carpet | Matta | 6 |
| 0420 | 1 | 96 83 343 | | 570,60) | 1 | Carpet | Matta | 6 |
| 0430 | 2 | *96 86 544* | | 570), 2SN, 3CK NLS - USE 4042537 | 1 | Carpet | Matta | 6 |
| 0440 | 2 | *96 86 585* | | 570), 4SN, 5CK NLS - USE 4042602 | 1 | Carpet | Matta | 6 |
| 0450 | 2 | 96 47 181 | | 570), CV | 1 | Carpet | Matta | 6 |
| 0460 | 2 | *96 83 459* | | 570,60) NLS - USE 4042545 | 1 | Carpet | Matta | 6 |
| 0490 | | | | TRIM COLOUR F11,F14,F24 | | | | |
| 0495 | 1 | 96 86 379 | | 580) | 1 | Carpet | Matta | 6 |
| 0500 | 1 | 96 86 387 | | 580), RHD | 1 | Carpet | Matta | 6 |
| 0510 | 1 | 96 86 395 | | 580), B202 | 1 | Carpet | Matta | 6 |
| 0520 | 1 | 96 86 403 | | 580), B202, RHD | 1 | Carpet | Matta | 6 |

60. For cars with automatic belts  För bilar med passivt bälte
560. Red  Röd
570. Grey  Grå
580. Blue  Blå
590. Yellow  Gul
600. Brown  Brun



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-F14

## Carpets 1988
## Mattor 1988

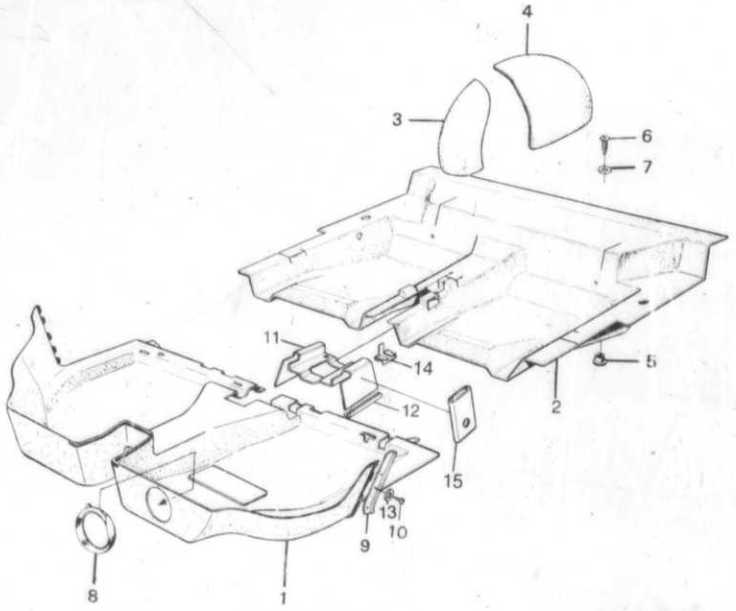


F0482 - 900

| 1426 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| | | | | TRIM COLOUR F11,F14,F24 | | | | |
| 0530 | 1 | 96 83 384 | | 580,60) | 1 | Carpet | Matta | 6 |
| 0540 | 2 | 96 86 478 | | 580), 2SN, 3CK | 1 | Carpet | Matta | 6 |
| 0550 | 2 | *96 86 486* | | 580), 4SN, 5CK NLS - USE 4042594 | 1 | Carpet | Matta | 6 |
| 0560 | 2 | 96 83 467 | | 580,60) | 1 | Carpet | Matta | 6 |
| 0570 | | | | | | | | |
| 0580 | 3 | 84 68 175 | | LH | 1 | Wheel housing cover | Hjulhusklädsel | 6 |
| 0590 | 3 | 84 68 183 | | RH | 1 | Wheel housing cover | Hjulhusklädsel | 6 |
| 0600 | 4 | 84 68 191 | | LH | 1 | Wheel housing cover | Hjulhusklädsel | 6 |
| 0610 | 4 | 84 68 209 | | RH | 1 | Wheel housing cover | Hjulhusklädsel | 6 |
| 0620 | 5 | 73 46 232 | | 2SN, 3CK | 2 | Bracket | Fäste | 5 |
| 0630 | 6 | 79 22 206 | | 2SN, 3CK | 2 | Screw | Skruv | 5 |
| 0640 | 7 | 70 88 073 | | 2SN, 3CK | 2 | Washer | Bricka | 5 |
| 0650 | 8 | *94 32 030* | | NLS | 1 | Bracket | Hållare | 5 |
| 0660 | 8 | 94 32 048 | | CV, RHD | 1 | Bracket | Hållare | 5 |
| 0670 | 9 | 94 71 897 | | LH | 1 | Attaching plate | Fästplåt | 5 |
| 0680 | 9 | 94 71 905 | | RH | 1 | Attaching plate | Fästplåt | 5 |
| 0690 | 9 | 98 80 634 | | CV, LH | 1 | Attaching plate | Fästplåt | 5 |
| 0700 | 9 | 98 80 642 | | CV, RH | 1 | Attaching plate | Fästplåt | 5 |
| 0710 | 10 | 79 70 312 | | | 6 | Screw | Skruv | 5 |
| 0720 | 10 | 79 70 320 | | CV | 4 | Screw | Skruv | 5 |
| 0730 | 11 | 95 31 377 | | | 1 | Bracket | Konsol | 6 |
| 0740 | 11 | 98 64 430 | | 60) | 1 | Bracket | Konsol | 5 |
| 0750 | 12 | 82 62 974 | | | 1 | Protecting moulding | Skyddslist | 6 |
| 0760 | 13 | 80 73 249 | | CV | 4 | Washer | Bricka | 5 |
| 0770 | 14 | 84 77 507 | | | 2 | Clip | Clips | 5 |
| 0780 | 15 | 95 42 242 | | | 1 | Protection | Skydd | 5 |

60. For cars with automatic belts  För bilar med passivt bälte
580. Blue  Blå



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-F16

## 500), Carpets 1989

## 500), Mattor 1989

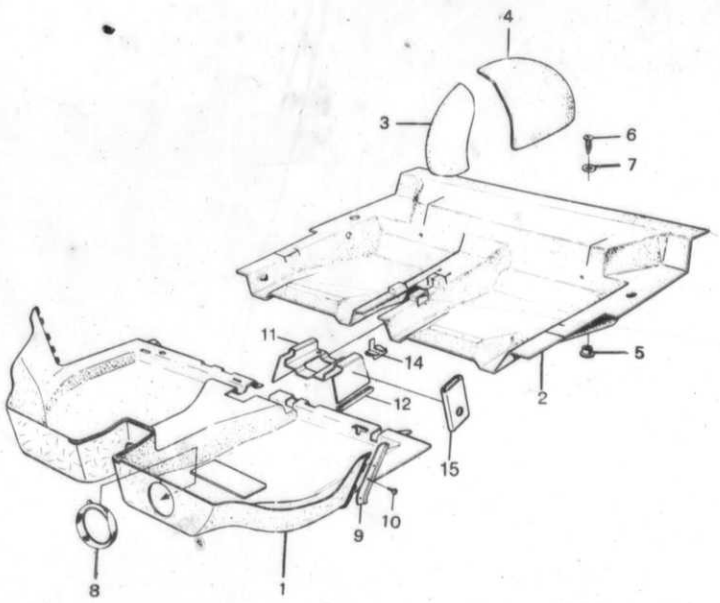


F2550 - 900

| 1427 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | | | | TRIM COLOUR C41,C44,C33 | | | | |
| 0025 | 1 | 98 28 203 | | 560) | 1 | Carpet | Matta | 6 |
| 0030 | 1 | 98 28 211 | | 560), RHD | 1 | Carpet | Matta | 6 |
| 0040 | 1 | 96 86 700 | | 560,252), B201 | 1 | Carpet | Matta | 6 |
| 0050 | 1 | 96 86 783 | | 560,252), B201, RHD | 1 | Carpet | Matta | 6 |
| 0060 | 1 | 96 86 700 | | 560), B202 | 1 | Carpet | Matta | 6 |
| 0070 | 1 | 96 83 269 | | 560,60) | 1 | Carpet | Matta | 6 |
| 0080 | 1 | 96 86 783 | | 560), B202, RHD | 1 | Carpet | Matta | 6 |
| 0090 | 1 | 98 80 709 | | 560), CV | 1 | Carpet | Matta | 6 |
| 0100 | 1 | 98 80 733 | | 560), CV, RHD | 1 | Carpet | Matta | 6 |
| 0110 | 2 | *96 86 528* | | 560), 2SN, 3CK NLS - USE 4042495 | 1 | Carpet | Matta | 6 |
| 0120 | 2 | *96 86 569* | | 560), 4SN, 5CK NLS - USE 4042586 | 1 | Carpet | Matta | 6 |
| 0130 | 2 | 96 47 165 | | 560), CV | 1 | Carpet | Matta | 6 |
| 0140 | 2 | 96 83 434 | | 560,60) | 1 | Carpet | Matta | 6 |
| 0170 | | | | TRIM COLOUR E41,E44,E33 | | | | |
| 0175 | 1 | 98 69 157 | | 570) | 1 | Carpet | Matta | 6 |
| 0180 | 1 | 98 69 173 | | 570), RHD | 1 | Carpet | Matta | 6 |
| 0190 | 1 | 96 86 742 | | 570,252), B201 | 1 | Carpet | Matta | 6 |
| 0200 | 1 | 96 86 825 | | 570,252), B201, RHD | 1 | Carpet | Matta | 6 |
| 0210 | 1 | 96 86 742 | | 570), B202 | 1 | Carpet | Matta | 6 |
| 0220 | 1 | 96 83 343 | | 570,60) | 1 | Carpet | Matta | 6 |
| 0230 | 1 | 96 86 825 | | 570), B202, RHD | 1 | Carpet | Matta | 6 |
| 0240 | 1 | 98 82 051 | | 570), CV | 1 | Carpet | Matta | 6 |
| 0250 | 1 | 93 23 857 | | 570), CV, RHD | 1 | Carpet | Matta | 6 |
| 0260 | 2 | *96 86 544* | | 570), 2SN, 3CK NLS - USE 4042537 | 1 | Carpet | Matta | 6 |
| 0270 | 2 | *96 86 585* | | 570), 4SN, 5CK NLS - USE 4042602 | 1 | Carpet | Matta | 6 |
| 0280 | 2 | 96 47 181 | | 570), CV | 1 | Carpet | Matta | 6 |
| 0290 | 2 | *96 83 459* | | 570,60) NLS - USE 4042545 | 1 | Carpet | Matta | 6 |
| 0320 | | | | TRIM COLOUR F41,F44,F33 | | | | |
| 0325 | 1 | 96 86 379 | | 580) | 1 | Carpet | Matta | 6 |
| 0330 | 1 | 96 86 387 | | 580), RHD | 1 | Carpet | Matta | 6 |
| 0340 | 1 | 96 86 395 | | 580,252), B201 | 1 | Carpet | Matta | 6 |
| 0350 | 1 | 96 86 403 | | 580,252), B201, RHD | 1 | Carpet | Matta | 6 |
| 0360 | 1 | 96 86 395 | | 580), B202 | 1 | Carpet | Matta | 6 |
| 0370 | 1 | 96 83 384 | | 580,60) | 1 | Carpet | Matta | 6 |
| 0380 | 1 | 96 86 403 | | 580), B202, RHD | 1 | Carpet | Matta | 6 |
| 0390 | 2 | 96 86 478 | | 580), 2SN, 3CK | 1 | Carpet | Matta | 6 |
| 0400 | 2 | *96 86 486* | | 580), 4SN, 5CK NLS - USE 4042594 | 1 | Carpet | Matta | 6 |
| 0410 | 2 | 96 83 467 | | 580,60) | 1 | Carpet | Matta | 6 |
| 0420 | | | | | | | | |

60. For cars with automatic belts — För bilar med passivt bälte
252. With catalytic converter. — Med katalytisk reaktor.
500. Also valid for SE 1988B. — Gäller även för SE 1988B.
560. Red — Röd
570. Grey — Grå
580. Blue — Blå




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-F18

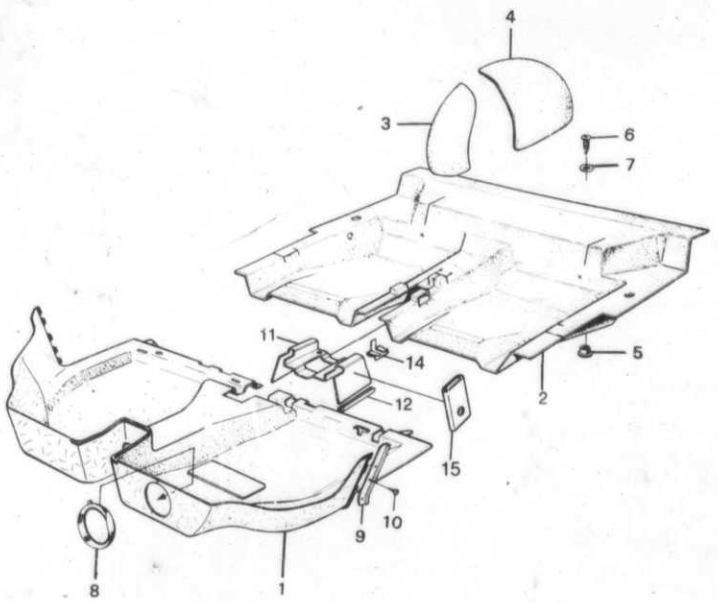


F2550 - 900

| 1427 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0440 | | | | TRIM COLOUR G41,G44,G33 | | | | |
| 0445 | 1 | 95 37 184 | | 590) | 1 | Carpet | Matta | 6 |
| 0450 | 1 | 95 37 168 | | 590), RHD | 1 | Carpet | Matta | 6 |
| 0460 | 1 | 95 37 150 | | 590,252), B201 | 1 | Carpet | Matta | 6 |
| 0470 | 1 | 95 37 135 | | 590,252), B201, RHD | 1 | Carpet | Matta | 6 |
| 0480 | 1 | 95 37 150 | | 590), B202 | 1 | Carpet | Matta | 6 |
| 0490 | 1 | 95 37 143 | | 590,60) | 1 | Carpet | Matta | 6 |
| 0500 | 1 | 95 37 135 | | 590), B202, RHD | 1 | Carpet | Matta | 6 |
| 0510 | 1 | 96 48 023 | | 590), CV | 1 | Carpet | Matta | 6 |
| 0520 | 1 | 96 48 031 | | 590), CV, RHD | 1 | Carpet | Matta | 6 |
| 0530 | 2 | *95 37 382* | | 590), 2SN, 3CK NLS - USE 4042552 | 1 | Carpet | Matta | 6 |
| 0540 | 2 | *95 37 390* | | 590,60) NLS - USE 4042560 | 1 | Carpet | Matta | 6 |
| 0550 | 2 | *95 37 408* | | 590), 4SN, 5CK NLS - USE 4042610 | 1 | Carpet | Matta | 6 |
| 0560 | 2 | 96 47 991 | | 590), CV | 1 | Carpet | Matta | 6 |
| 0580 | 3 | 84 68 175 | | LH | 1 | Wheel housing cover | Hjulhusklädsel | 6 |
| 0590 | 3 | 84 68 183 | | RH | 1 | Wheel housing cover | Hjulhusklädsel | 6 |
| 0600 | 4 | 84 68 191 | | LH | 1 | Wheel housing cover | Hjulhusklädsel | 6 |
| 0610 | 4 | 84 68 209 | | RH | 1 | Wheel housing cover | Hjulhusklädsel | 6 |
| 0620 | 5 | 73 46 232 | | 2SN, 3CK | 2 | Bracket | Fäste | 5 |
| 0630 | 6 | 79 22 206 | | 2SN, 3CK | 2 | Screw | Skruv | 5 |
| 0640 | 7 | 70 88 073 | | 2SN, 3CK | 2 | Washer | Bricka | 5 |
| 0650 | 8 | *94 32 030* | | NLS | 1 | Bracket | Hållare | 5 |
| 0660 | 8 | 94 32 048 | | CV, RHD | 1 | Bracket | Hållare | 5 |
| 0670 | 9 | 94 71 897 | | LH | 1 | Attaching plate | Fästplåt | 5 |
| 0680 | 9 | 94 71 905 | | RH | 1 | Attaching plate | Fästplåt | 5 |
| 0690 | 9 | 98 80 634 | | CV, LH | 1 | Attaching plate | Fästplåt | 5 |
| 0700 | 9 | 98 80 642 | | CV, RH | 1 | Attaching plate | Fästplåt | 5 |
| 0710 | 10 | 79 70 312 | | | 6 | Screw | Skruv | 5 |
| 0720 | 10 | 79 70 262 | | CV | 4 | Screw | Skruv | 5 |
| 0730 | 11 | 95 31 377 | | | 1 | Bracket | Konsol | 6 |
| 0740 | 11 | 98 64 430 | | 60) | 1 | Bracket | Konsol | 5 |
| 0750 | 12 | 82 62 974 | | | 1 | Protecting moulding | Skyddslist | 6 |
| 0760 | 14 | 84 77 507 | | | 2 | Clip | Clips | 5 |
| 0770 | 15 | 95 42 242 | | | 1 | Protection | Skydd | 5 |

60. For cars with automatic belts  För bilar med passivt bälte
252. With catalytic converter.  Med katalytisk reaktor.
500. Also valid for SE 1988B.  Gäller även för SE 1988B.
590. Yellow  Gul



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

8B GROUP INDEX

| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-F20

## Head- and pillar lining
## Takklädsel,stolpklädsel

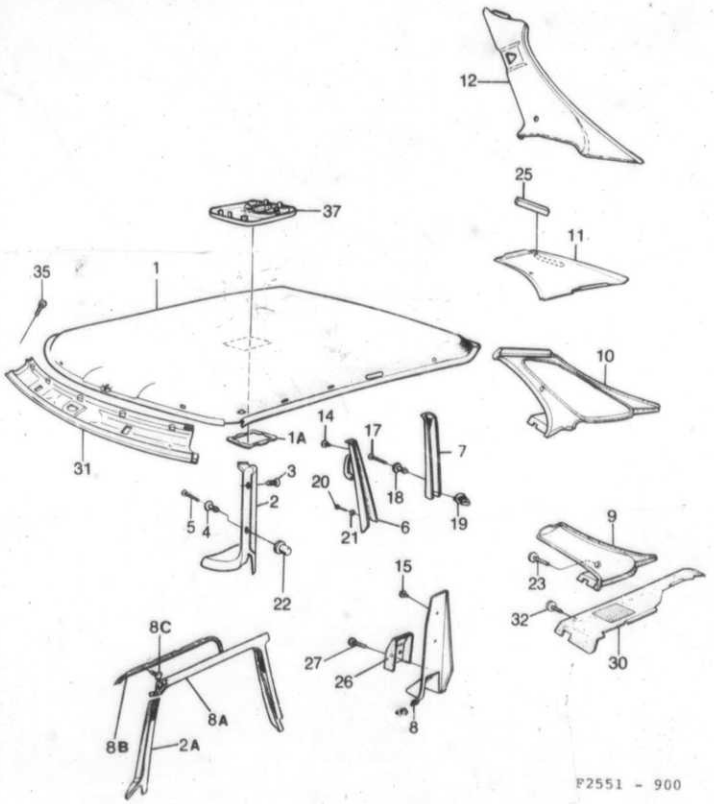


| 1428 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 98 36 131 | | -1986, 3CK | 1 | Head lining | Takklädsel | 6 |
| 0020 | 1 | 98 63 168 | | 1987-1988, 3CK | 1 | Head lining | Takklädsel | 6 |
| 0030 | 1 | *95 36 251* | | 500), 1989-, 3CK NLS - USE 4272985 | 1 | Head lining | Takklädsel | 6 |
| 0040 | 1 | *98 36 156* | | -1986, 5CK NLS - USE 8547606, 9863200 | 1 | Head lining | Takklädsel | 6 |
| 0050 | 1 | 98 63 200 | | 1987-1988, 5CK | 1 | Head lining | Takklädsel | 6 |
| 0060 | 1 | *95 36 376* | | 500), 1989-, 5CK NLS - USE 4272993 | 1 | Head lining | Takklädsel | 6 |
| 0070 | | | | | | | | |
| 0080 | 1 | *98 36 172* | | -1986, 3CK, SR NLS - USE 8547606, 9863069 | 1 | Head lining | Takklädsel | 6 |
| 0090 | 1 | 98 63 069 | | 1987-1988, 3CK, SR | 1 | Head lining | Takklädsel | 6 |
| 0100 | 1 | *95 36 39.* | | 500), 1989-, 3CK, SR NLS - USE 4057089, 4273009 | 1 | Head lining | Takklädsel | 6 |
| 0110 | 1 | 98 63 853 | | 60), 1987-1988, 3CK, SR | 1 | Head lining | Takklädsel | 6 |
| 0120 | 1 | 95 36 319 | | 60), 1989-, 3CK, SR | 1 | Head lining | Takklädsel | 6 |
| 0130 | 1 | 98 36 198 | | -1986, 5CK, SR | 1 | Head lining | Takklädsel | 6 |
| 0140 | 1 | 98 63 101 | | 1987-1988, 5CK, SR | 1 | Head lining | Takklädsel | 6 |
| 0150 | 1 | *95 36 350* | | 500), 1989-, 5CK, SR NLS - USE 4057089, 4273017 | 1 | Head lining | Takklädsel | 6 |
| 0160 | | | | | | | | |
| 0170 | 1 | *98 36 149* | | -1986, 4SN NLS - USE 9863184 | 1 | Head lining | Takklädsel | 6 |
| 0180 | 1 | 98 63 184 | | 1987-1988, 4SN | 1 | Head lining | Takklädsel | 6 |
| 0190 | 1 | 95 36 277 | | 500), 1989-, 4SN | 1 | Head lining | Takklädsel | 6 |
| 0200 | 1 | *98 36 180* | | -1986, 4SN, SR NLS - USE 8547606, 9863085 | 1 | Head lining | Takklädsel | 6 |
| 0210 | 1 | 98 63 085 | | 1987-1988, 4SN, SR | 1 | Head lining | Takklädsel | 6 |
| 0220 | 1 | *95 36 335* | | 500), 1989-, 4SN, SR NLS - USE 4056925, 4057089 | 1 | Head lining | Takklädsel | 6 |
| 0230 | 1 | 98 19 632 | | CD | 1 | Head lining | Takklädsel | 6 |
| 0240 | | | | | | | | |
| 0250 | 1 | *98 36 123* | | -1986, 2SN NLS - USE 8547606, 9863143 | 1 | Head lining | Takklädsel | 6 |
| 0260 | 1 | 98 63 143 | | 1987-1988, 2SN | 1 | Head lining | Takklädsel | 6 |
| 0270 | 1 | 95 36 236 | | 500), 1989-, 2SN | 1 | Head lining | Takklädsel | 6 |
| 0280 | 1 | *98 36 164* | | -1986, 2SN, SR NLS - USE 8547606, 9863044 | 1 | Head lining | Takklädsel | 6 |
| 0290 | 1 | 98 63 044 | | 1987-1988, 2SN, SR | 1 | Head lining | Takklädsel | 6 |
| 0300 | 1 | 95 36 293 | | 500), 1989-, 2SN, SR | 1 | Head lining | Takklädsel | 6 |
| 0310 | 1A | 97 56 974 | | 1987- | 1 | Protection | Skydd | 6 |
| 0320 | 1B | | | CV | 1 | Head lining | Takklädsel | |
| 0330 | | | | See page 8A-025, 5-B02 | | | | |
| 0340 | 2 | 98 37 451 | | 610), 1986, LH | 1 | Crash pad | Stötskydd | 6 |
| 0350 | 2 | *96 11 534* | | 610), 1987-, LH NLS - USE 4259560 | 1 | Crash pad | Stötskydd | 6 |
| 0360 | 2 | *98 37 469* | | 610), 1986, RH NLS - USE 4259578 | 1 | Crash pad | Stötskydd | 6 |
| 0370 | 2 | 96 11 559 | | 610), 1987-, RH | 1 | Crash pad | Stötskydd | 6 |
| 0380 | 2 | 98 35 786 | | 560), -1987, LH | 1 | Crash pad | Stötskydd | 6 |
| 0390 | 2 | 96 11 526 | | 560), 1988-, LH | 1 | Crash pad | Stötskydd | 6 |
| 0400 | 2 | 98 35 794 | | 560), -1987, RH | 1 | Crash pad | Stötskydd | 6 |
| 0410 | 2 | 96 11 542 | | 560), 1988-, RH | 1 | Crash pad | Stötskydd | 6 |
| 0420 | | | | | | | | |
| 0430 | 2 | 98 42 063 | | 610), LH, RHD | 1 | Crash pad | Stötskydd | 6 |
| 0440 | 2 | 98 42 071 | | 610), RH, RHD | 1 | Crash pad | Stötskydd | 6 |
| 0450 | 2 | 98 42 022 | | 560), LH, RHD | 1 | Crash pad | Stötskydd | 6 |
| 0460 | 2 | 98 42 030 | | 560), RH, RHD | 1 | Crash pad | Stötskydd | 6 |

60. For cars with automatic belts  För bilar med passivt bälte
500. Also valid for SE 1988B.  Gäller även för SE 1988B.
560. Red  Röd
610. Black  Svart



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-F22

## Head- and pillar lining
## Takklädsel,stolpklädsel

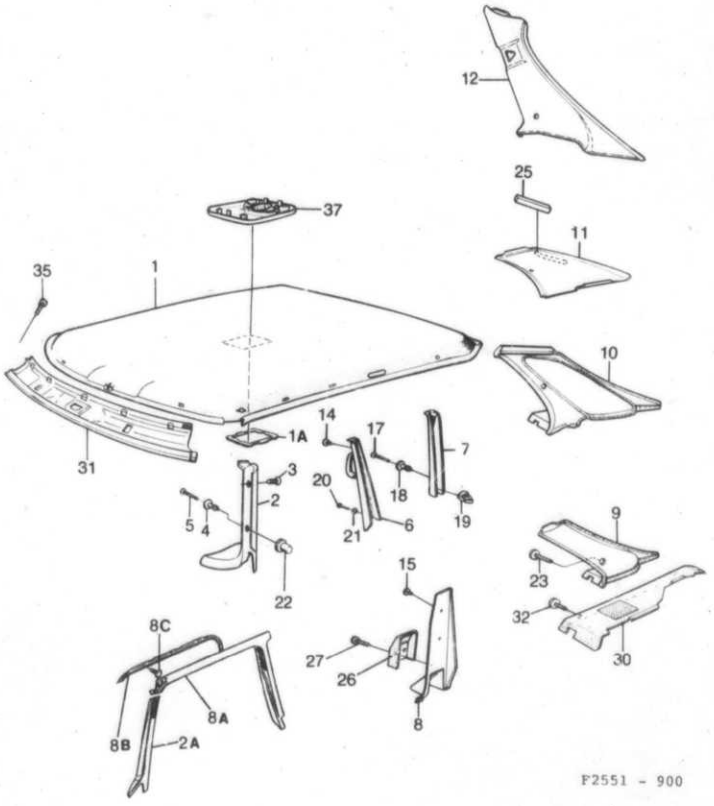


| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 2 | *98 81 111* | | CV, LH NLS - USE 4155297 | 1 | Crash pad | Stötskydd | 6 |
| 2 | *98 81 129* | | CV, RH NLS - USE 4155305 | 1 | Crash pad | Stötskydd | 6 |
| 2 | *98 23 717* | | 987-, LH, RHD, CV NLS - USE 4155313 | 1 | Crash pad | Stötskydd | 6 |
| 2 | *98 23 725* | | 987-, RH, RHD, CV NLS - USE 4155321 | 1 | Crash pad | Stötskydd | 6 |
| 2A | 96 17 820 | | 1987-,60), LH | 1 | Crash pad | Stötskydd | 6 |
| 2A | 96 17 838 | | 1987-,60), RH | 1 | Crash pad | Stötskydd | 6 |
| 3 | 96 68 153 | | 500), 1989-, CV | 2 | Clip | Clips | 5 |
| 4 | 98 41 975 | | 610) | 4 | Clamp | Klämma | 5 |
| - | 98 57 608 | | 560) | 4 | Clamp | Klämma | 5 |
| 5 | 98 41 933 | | 610) | 4 | Rivet | Nit | 5 |
| 5 | 98 57 616 | | 560) | 4 | Rivet | Nit | 5 |
| 6 | 94 00 151 | | 228), LH, 2SN, 3CK | 1 | Crash pad | Stötskydd | 6 |
| 6 | 96 84 432 | | 229), LH, 2SN, 3CK | 1 | Crash pad | Stötskydd | 6 |
| 6 | 94 00 169 | | 228), RH, 2SN, 3CK | 1 | Crash pad | Stötskydd | 6 |
| 6 | 96 84 440 | | 229), RH, 2SN, 3CK | 1 | Crash pad | Stötskydd | 6 |
| 7 | *84 44 390* | | -1987, LH, 4SN, 5CK NLS - USE 9534025 | 1 | Crash pad | Stötskydd | 6 |
| 7 | 95 34 025 | | 1988-, LH, 4SN, 5CK | 1 | Crash pad | Stötskydd | 6 |
| 7 | *84 44 408* | | -1987, RH, 4SN, 5CK NLS - USE 9534033 | 1 | Crash pad | Stötskydd | 6 |
| 7 | 95 34 033 | | 1988-, RH, 4SN, 5CK | 1 | Crash pad | Stötskydd | 6 |
| 8 | 97 04 727 | | LH, 4SN, 5CK | 1 | Crash pad | Stötskydd | 6 |
| 8 | 97 04 735 | | RH, 4SN, 5CK | 1 | Crash pad | Stötskydd | 6 |
| 8A | 96 17 895 | | 1987-,60), LH | 1 | Crash pad | Stötskydd | 6 |
| 8A | 96 17 903 | | 1987-,60), RH | 1 | Crash pad | Stötskydd | 6 |
| 8B | 96 17 986 | | 1987-,60), LH | 1 | Crash pad | Stötskydd | 6 |
| 8B | 96 17 994 | | 1987-,60), RH | 1 | Crash pad | Stötskydd | 6 |
| 8C | 95 45 898 | | 60), 1987- (7399074) | 8 | Upholstery clip | Klädselfäste | 5 |
| 9 | 98 36 768 | | -1988, LH, 3CK | 1 | Crash pad | Stötskydd | 6 |
| 9 | 95 36 517 | | 500), 1989-, LH, 3CK | 1 | Crash pad | Stötskydd | 6 |
| 9 | 98 36 776 | | -1988, RH, 3CK | 1 | Crash pad | Stötskydd | 6 |
| 9 | 95 36 533 | | 500), 1989-, RH, 3CK | 1 | Crash pad | Stötskydd | 6 |
| 9 | 98 36 727 | | 9)-1988, LH, 3CK | 1 | Crash pad | Stötskydd | 6 |
| 9 | 95 36 590 | | 9,500), 1989-, LH, 3CK | 1 | Crash pad | Stötskydd | 6 |
| 9 | 98 36 735 | | 9)-1988, RH, 3CK | 1 | Crash pad | Stötskydd | 6 |
| 9 | 95 36 616 | | 9,500), 1989-, RH, 3CK | 1 | Crash pad | Stötskydd | 6 |
| 9 | 98 36 743 | | 9,10), -1988, LH, 3CK | 1 | Crash pad | Stötskydd | 6 |
| 9 | 98 36 750 | | 9,10), -1988, RH, 3CK | 1 | Crash pad | Stötskydd | 6 |
| 10 | 98 36 826 | | -1988, LH, 5CK | 1 | Crash pad | Stötskydd | 6 |
| 10 | 95 36 772 | | 500), 1989-, LH, 5CK | 1 | Crash pad | Stötskydd | 6 |
| 10 | 98 36 834 | | -1988, RH, 5CK | 1 | Crash pad | Stötskydd | 6 |
| 10 | 95 37 572 | | 500), 1989-, RH, 5CK | 1 | Crash pad | Stötskydd | 6 |
| 11 | 98 36 784 | | -1988, LH, 4SN | 1 | Crash pad | Stötskydd | 6 |
| 11 | 95 36 673 | | 500), 1989-, LH, 4SN | 1 | Crash pad | Stötskydd | 6 |
| 11 | 98 36 792 | | -1988, RH, 4SN | 1 | Crash pad | Stötskydd | 6 |
| 11 | 95 36 699 | | 500), 1989-, RH, 4SN | 1 | Crash pad | Stötskydd | 6 |
| 11 | 98 36 800 | | 10)-1988, LH, 4SN | 1 | Crash pad | Stötskydd | 6 |
| 11 | 98 36 818 | | 10)-1988, RH, 4SN | 1 | Crash pad | Stötskydd | 6 |

9. Opening rear side window. Öppningsbar sidoruta.
10. Without rear safety belt Utan bakre säkerhetsbälte.
60. For cars with automatic belts För bilar med passivt bälte
228. Ch --H3008038
229. Ch H3008039--
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
610. Black Svart



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

Upholstery
# 6-F24
## Head- and pillar lining

Klädsel
## Takklädsel,stolpklädsel

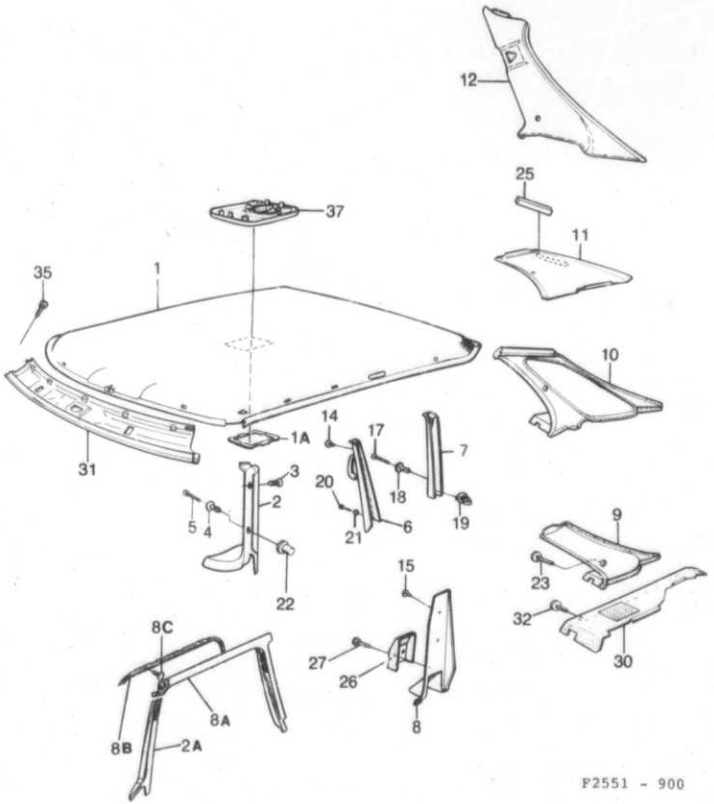


F2551 - 900

| 1428 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0980 | 12 | 98 36 685 | | -1988, LH, 2SN | 1 | Crash pad | Stötskydd | 6 |
| 0990 | 12 | 95 36 418 | | 500), 1989-, LH, 2SN | 1 | Crash pad | Stötskydd | 6 |
| 1000 | 12 | 98 36 693 | | -1988, RH, 2SN | 1 | Crash pad | Stötskydd | 6 |
| 1010 | 12 | 95 36 434 | | 500), 1989-, RH, 2SN | 1 | Crash pad | Stötskydd | 6 |
| 1020 | 12 | 98 36 701 | | 9)-1988, LH, 2SN | 1 | Crash pad | Stötskydd | 6 |
| 1030 | 12 | 95 36 459 | | 9,500), 1989-, LH, 2SN | 1 | Crash pad | Stötskydd | 6 |
| 1040 | 12 | *98 36 719* | | 9)-1988, RH, 2SN NLS | 1 | Crash pad | Stötskydd | 6 |
| 1050 | 12 | 95 36 475 | | 9,500), 1989-, RH, 2SN | 1 | Crash pad | Stötskydd | 6 |
| 1060 | 12 | 98 64 414 | | 9,10)-1988, LH, 2SN | 1 | Crash pad | Stötskydd | 6 |
| 1070 | 12 | 98 64 422 | | 9,10)-1988, RH, 2SN | 1 | Crash pad | Stötskydd | 6 |
| 1080 | 14 | 84 26 199 | | 2SN, 3CK | 2 | Screw | Skruv | 5 |
| 1090 | 15 | 97 30 995 | | 4SN, 5CK | 4 | Clip | Clips | 5 |
| 1100 | 17 | 84 76 061 | | 4SN, 5CK | 4 | Rivet | Nit | 5 |
| 1110 | 18 | 84 76 079 | | 4SN, 5CK | 4 | Rivet | Nit | |
| 1120 | 19 | 84 05 870 | | | 2 | Clip | Clips | 5 |
| 1130 | 20 | 84 10 961 | | 2SN, 3CK | 2 | Screw | Skruv | 5 |
| 1140 | 21 | 84 13 429 | | 2SN, 3CK | 2 | Washer | Bricka | 5 |
| 1150 | 22 | 82 77 667 | | | 4 | Sleeve | Hylsa | 5 |
| 1160 | 23 | 84 54 522 | | | 2 | Special screw | Snabbskruv | 5 |
| 1170 | 25 | 83 28 817 | | 2SN, 4SN | 2 | Sealing strip | Tätningslist | 5 |
| 1180 | 26 | 86 54 766 | | 11) | 1 | Protection | Skydd | 6 |
| 1190 | 27 | 79 74 363 | | 11) | 2 | Screw | Skruv | 6 |
| 1200 | | | | | | | | |
| 1210 | 30 | 98 50 074 | | 590), -1988, 3CK, LH | 1 | Upholstery | Klädsel | 5 |
| 1220 | 30 | 95 35 659 | | 590,500), 1989-, 3CK, LH | 1 | Upholstery | Klädsel | 5 |
| 1230 | 30 | 98 50 082 | | 590), -1988, 3CK, RH | 1 | Upholstery | Klädsel | 5 |
| 1240 | 30 | 95 35 667 | | 590,500), 1989-, 3CK, RH | 1 | Upholstery | Klädsel | 5 |
| 1250 | 30 | 98 50 173 | | 590,10)-1988, 3CK, FE,LH | 1 | Upholstery | Klädsel | 5 |
| 1260 | 30 | 98 50 181 | | 590,10)-1988, 3CK, FE,RH | 1 | Upholstery | Klädsel | 5 |
| 1270 | | | | | | | | |
| 1280 | 30 | 98 77 325 | | 600), 3CK, LH | 1 | Upholstery | Klädsel | |
| 1290 | 30 | 98 77 333 | | 600), 3CK, RH | 1 | Upholstery | Klädsel | 5 |
| 1300 | 30 | 98 77 366 | | 600,10)-1988, 3CK, FE,LH | 1 | Upholstery | Klädsel | 5 |
| 1310 | 30 | 98 77 374 | | 600,10)-1988, 3CK, FE,RH | 1 | Upholstery | Klädsel | 5 |
| 1320 | | | | | | | | |
| 1330 | 30 | 98 50 058 | | 560), -1987, 3CK, LH | 1 | Upholstery | Klädsel | 5 |
| 1340 | 30 | 96 84 085 | | 560), 1988-, 3CK, LH | 1 | Upholstery | Klädsel | 5 |
| 1350 | 30 | 98 50 066 | | 560), -1987, 3CK, RH | 1 | Upholstery | Klädsel | 5 |
| 1360 | 30 | 96 84 093 | | 560), 1988-, 3CK, RH | 1 | Upholstery | Klädsel | 5 |
| 1370 | 30 | 98 50 157 | | 560,10)-1987, 3CK, FE,LH | 1 | Upholstery | Klädsel | 5 |
| 1380 | 30 | 96 84 044 | | 560,10),1988, 3CK, FE,LH | 1 | Upholstery | Klädsel | 5 |
| 1390 | 30 | 98 50 165 | | 560,10)-1987, 3CK, FE,RH | 1 | Upholstery | Klädsel | 5 |
| 1400 | 30 | 96 84 051 | | 560,10),1988, 3CK, FE,RH | 1 | Upholstery | Klädsel | 5 |
| 1410 | | | | | | | | |
| 1420 | 30 | 98 50 090 | | 580), -1987, 3CK, LH | 1 | Upholstery | Klädsel | 5 |
| 1430 | 30 | 96 84 101 | | 580), 1988-, 3CK, LH | 1 | Upholstery | Klädsel | 5 |
| 1440 | 30 | 98 50 108 | | 580), -1987, 3CK, RH | 1 | Upholstery | Klädsel | 5 |
| 1450 | 30 | 96 84 119 | | 580), 1988-, 3CK, RH | 1 | Upholstery | Klädsel | 5 |
| 1460 | 30 | 98 50 199 | | 580,10)-1987, 3CK, FE,LH | 1 | Upholstery | Klädsel | 5 |
| 1470 | 30 | 96 84 069 | | 580,10),1988, 3CK, FE,LH | 1 | Upholstery | Klädsel | 5 |
| 1480 | 30 | 98 50 207 | | 580,10)-1987, 3CK, FE,RH | 1 | Upholstery | Klädsel | 5 |
| 1490 | 30 | 96 84 077 | | 580,10),1988, 3CK, FE,RH | 1 | Upholstery | Klädsel | 5 |
| 1500 | | | | | | | | |
| 1510 | 30 | 98 77 341 | | 570), 3CK, LH | 1 | Upholstery | Klädsel | 5 |

9. Opening rear side window. Öppningsbar sidoruta.
10. Without rear safety belt Utan bakre säkerhetsbälte.
11. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-G02

## *Head- and pillar lining*

## *Takklädsel,stolpklädsel*

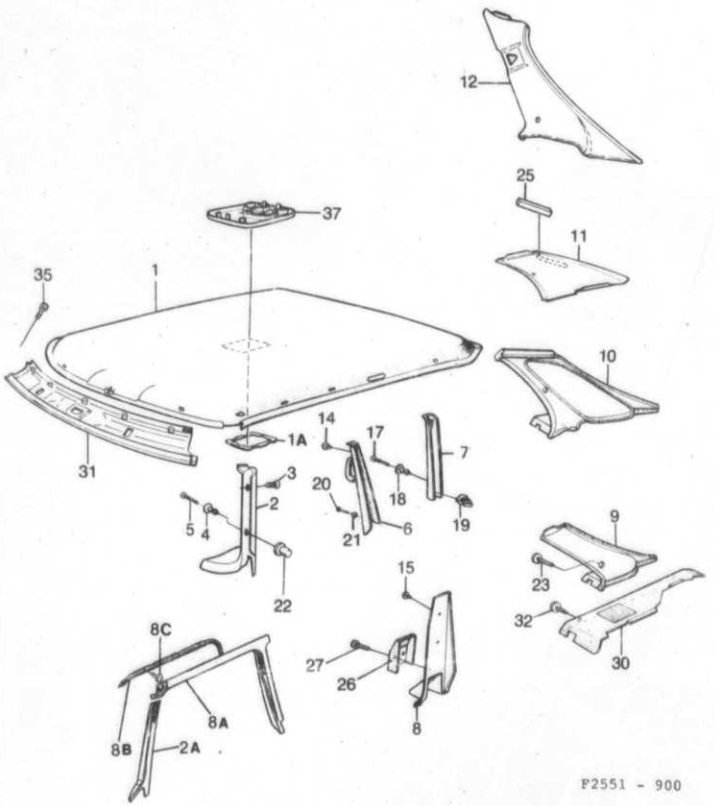


F2551 - 900

| 1428 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | $ L |
|---|---|---|---|---|---|---|---|---|
| 1520 | 30 | 98 77 358 | | 570), 3CK, RH | 1 | Upholstery | Klädsel | 5 |
| 1530 | 30 | 98 77 382 | | 570,10), 3CK, FE, LH | 1 | Upholstery | Klädsel | 5 |
| 1540 | 30 | 98 77 390 | | 570,10), 3CK, FE, RH | 1 | Upholstery | Klädsel | 5 |
| 1550 | | | | | | | | |
| 1560 | 30 | 97 37 347 | | 590), -1988, 5CK, LH | 1 | Upholstery | Klädsel | 5 |
| 1570 | 30 | 95 35 675 | | 590,500), 1989-, 5CK, LH | 1 | Upholstery | Klädsel | 5 |
| 1580 | 30 | 97 37 354 | | 590), -1988, 5CK, RH | 1 | Upholstery | Klädsel | 5 |
| 1590 | 30 | 95 35 683 | | 590,500), 1989-, 5CK, RH | 1 | Upholstery | Klädsel | 5 |
| 1600 | | | | | | | | |
| 1610 | 30 | 98 77 408 | | 600), 5CK, LH | 1 | Upholstery | Klädsel | 5 |
| 1620 | 30 | 98 77 416 | | 600), 5CK, RH | 1 | Upholstery | Klädsel | 5 |
| 1630 | | | | | | | | |
| 1640 | 30 | *97 34 104* | | 560), -1987, 5CK, LH NLS | 1 | Upholstery | Klädsel | 5 |
| 1650 | 30 | 96 84 127 | | 560), 1988-, 5CK, LH | 1 | Upholstery | Klädsel | 5 |
| 1660 | 30 | 97 34 112 | | 560), -1987, 5CK, RH | 1 | Upholstery | Klädsel | 5 |
| 1670 | 30 | 96 84 135 | | 560), 1988-, 5CK, RH | 1 | Upholstery | Klädsel | 5 |
| 1680 | | | | | | | | |
| 1690 | 30 | 98 49 068 | | 580), -1987, 5CK, LH | 1 | Upholstery | Klädsel | 5 |
| 1700 | 30 | 96 84 143 | | 580), 1988-, 5CK, LH | 1 | Upholstery | Klädsel | 5 |
| 1710 | 30 | 98 49 076 | | 580), -1987, 5CK, RH | 1 | Upholstery | Klädsel | 5 |
| 1720 | 30 | 96 84 150 | | 580), 1988-, 5CK, RH | 1 | Upholstery | Klädsel | 5 |
| 1730 | | | | | | | | |
| 1740 | 30 | 98 77 424 | | 570), 5CK, LH | 1 | Upholstery | Klädsel | 5 |
| 1750 | 30 | 98 77 432 | | 570), 5CK, RH | 1 | Upholstery | Klädsel | 5 |
| 1760 | | | | | | | | |
| 1770 | 31 | 98 81 210 | | CV | 1 | Upholstery | Klädsel | 6 |
| 1780 | 32 | 97 37 404 | | 590), -1988 | 4 | Clip | Clips | 5 |
| 1790 | 32 | 95 35 691 | | 590,500), 1989- | 4 | Clip | Clips | 5 |
| 1800 | 32 | *97 34 575* | | 600) NLS | 4 | Clip | Clips | 5 |
| 1810 | 32 | 97 34 583 | | 560) | 4 | Clip | Clips | 5 |
| 1820 | 32 | 98 08 338 | | 580), -1987 | 4 | Clip | Clips | 5 |
| 1830 | 32 | 96 84 408 | | 580), 1988- | 4 | Clip | Clips | 5 |
| 1840 | 32 | 98 77 457 | | 610) | 4 | Clip | Clips | 5 |
| 1850 | 35 | | | See page 8A-135, 5-F16 | 4 | Screw | Skruv | |
| 1860 | 37 | 85 47 606 | | 153), 1986 | X | Interior lamp kit | Innerbelysningssats | 4 |
| 1870 | | | | See page 3A-151, 2-G08 | | | | |

10. Without rear safety belt  Utan bakre säkerhetsbälte.
153. For cars with centre mounted dome light.  För bilar med mittmonterad innerbelysning.
500. Also valid for SE 1988B.  Gäller även för SE 1988B.
560. Red  Röd
570. Grey  Grå
580. Blue  Blå
590. Yellow  Gul
600. Brown  Brun
610. Black  Svart



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-C02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-G04 Front seats Part 1 -1987

# Stolar Del 1 -1987

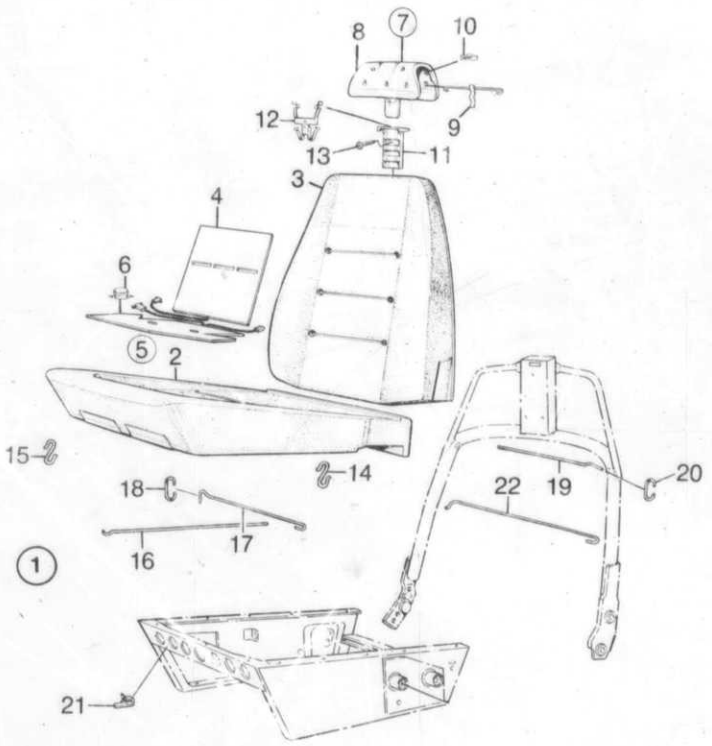


R 9447 - 900

| 1430 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 97 45 472 | | 117) 2SN, 3CK, LH | 1 | Seat | Stol | 6 |
| 0020 | 1 | 97 45 605 | | 117) 2SN, 3CK, RH | 1 | Seat | Stol | 6 |
| 0030 | 1 | 97 45 613 | | 117) 2SN, 3CK, LH, RHD | 1 | Seat | Stol | 6 |
| 0040 | 1 | 97 45 480 | | 117) 2SN, 3CK, RH, RHD | 1 | Seat | Stol | 6 |
| 0050 | 1 | 97 45 498 | | 117) 5CK, 4SN, LH | 1 | Seat | Stol | 6 |
| 0060 | 1 | 97 45 621 | | 117) 5CK, 4SN, RH | 1 | Seat | Stol | 6 |
| 0070 | 1 | 97 45 639 | | 117) 5CK, 4SN, LH, RHD | 1 | Seat | Stol | 6 |
| 0080 | 1 | 97 45 506 | | 117) 5CK, 4SN, RH, RHD | 1 | Seat | Stol | 6 |
| 0090 | | | | | | | | |
| 0100 | 1 | 97 45 514 | | 117,13) 2SN, 3CK, LH | 1 | Seat | Stol | 6 |
| 0110 | 1 | 97 45 688 | | 117,13) 2SN, 3CK, RH | 1 | Seat | Stol | 6 |
| 0120 | 1 | 97 45 530 | | 117,13) 5CK, 4SN, LH | 1 | Seat | Stol | 6 |
| 0130 | 1 | 97 45 704 | | 117,13) 5CK, 4SN, RH | 1 | Seat | Stol | 6 |
| 0140 | | | | | | | | |
| 0150 | 1 | 98 26 314 | | 342,14) 2SN, 3CK, LH | 1 | Seat | Stol | 6 |
| 0160 | 1 | 98 26 355 | | 342,14) 2SN, 3CK, RH | 1 | Seat | Stol | 6 |
| 0170 | 1 | 98 26 363 | | 342,14) 2SN, 3CK, LH,RHD | 1 | Seat | Stol | 6 |
| 0180 | 1 | 98 26 322 | | 342,14) 2SN, 3CK, RH,RHD | 1 | Seat | Stol | 6 |
| 0190 | 1 | 97 45 555 | | 2,342,14) 2SN, 3CK,CV,LH | 1 | Seat | Stol | 6 |
| 0200 | 1 | 97 45 720 | | 2,342,14) 2SN, 3CK,CV,RH | 1 | Seat | Stol | 6 |
| 0210 | 1 | 97 45 738 | | 2,342,14) 2SN, 3CK, CV LH, RHD | 1 | Seat | Stol | 6 |
| 0220 | | | | | | | | |
| 0230 | 1 | 97 45 563 | | 2,342,14) 2SN, 3CK, CV RH, RHD | 1 | Seat | Stol | 6 |
| 0240 | | | | | | | | |
| 0250 | | | | | | | | |
| 0260 | 1 | 98 26 330 | | 342,14) 5CK, 4SN, LH | 1 | Seat | Stol | 6 |
| 0270 | 1 | 98 26 371 | | 342,14) 5CK, 4SN, RH | 1 | Seat | Stol | 6 |
| 0280 | 1 | 98 26 389 | | 342,14) 5CK, 4SN, LH,RHD | 1 | Seat | Stol | 6 |
| 0290 | 1 | 98 26 348 | | 342,14) 5CK, 4SN, RH,RHD | 1 | Seat | Stol | 6 |
| 0300 | 1 | 97 45 571 | | 2,342,14) 5CK, 4SN, LH | 1 | Seat | Stol | 6 |
| 0310 | 1 | 97 45 746 | | 2,342,14) 5CK, 4SN, RH | 1 | Seat | Stol | 6 |
| 0320 | 1 | 97 45 753 | | 2,342,14) 5CK,4SN,LH,RHD | 1 | Seat | Stol | 6 |
| 0330 | 1 | 97 45 589 | | 2,342,14) 5CK,4SN,RH,RHD | 1 | Seat | Stol | 6 |
| 0340 | 1 | 98 15 465 | | 117,14) CD, LH | 1 | Seat | Stol | 7 |
| 0350 | 1 | 98 15 473 | | 117,14) CD, RH | 1 | Seat | Stol | 7 |
| 0360 | 1 | 98 15 598 | | 117,14) CD, LH, RHD | 1 | Seat | Stol | 7 |
| 0370 | 1 | 98 15 580 | | 117,14) CD, RH, RHD | 1 | Seat | Stol | 7 |
| 0380 | 2 | *94 56 856* | | 66) NLS - USE 9682006 | 1 | .Seat cushion | .Sittdyna | 6 |
| 0390 | 2 | 96 82 006 | | 67) | 1 | .Seat cushion | .Sittdyna | 6 |
| 0400 | 2 | *97 18 560* | | 14,66) NLS - USE 9682014 | 1 | .Seat cushion | .Sittdyna | |
| 0410 | 2 | 96 82 014 | | 14,67) | 1 | .Seat cushion | .Sittdyna | 6 |
| 0420 | 3 | *98 57 749* | | NLS - USE 9688458 | 1 | .Backrest cushion | .Ryggdyna | 6 |
| 0430 | 3 | 98 57 731 | | 14) | 1 | .Backrest cushion | .Ryggdyna | 6 |
| 0440 | 4 | 85 93 014 | | | 1 | .Heating pad | .Värmedyna | 4 |
| 0450 | 4 | *85 93 030* | | 14) NLS - USE 9569955 | 1 | .Heating pad | .Värmedyna | 4 |
| 0460 | | | | | | | | |
| 0470 | 5 | *95 56 333* | | -1986 NLS - USE 9560319 | 1 | .Heating pad | .Värmedyna | 4 |
| 0480 | 5 | 95 60 319 | | 1987 | 1 | .Heating pad | .Värmedyna | 4 |
| 0490 | 5 | *95 56 341* | | 14), -1986 NLS - USE 9561432 | 1 | .Heating pad | .Värmedyna | 4 |
| 0500 | 5 | *95 60 327* | | 1987,101,14) NLS - USE 9561432 | 1 | .Heating pad | .Värmedyna | 4 |
| 0510 | 5 | 95 61 432 | | 102,14) | 1 | .Heating pad | .Värmedyna | 4 |

2. For cars with leather covers. För bilar med läderklädsel.
13. For cars with upholstery "BLOCK PATTERN" För bilar med klädsel "BLOCK MÖNSTER"
14. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
66. Ch. -H7005808
67. Ch. H7005809-
101. Ch. -H2012980, -H3011604, -H7021889
102. Ch. H2012981-, H3011605-, H7021890-
117. State upholstery colour and year model Uppge klädselfärg och årsmodell
342. State upholstery colour, ch No and the type of heating pad (thermostat or rheostat). Uppge klädselfärg, ch nr och vilken typ av värmedyna (termostat eller reostat).




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

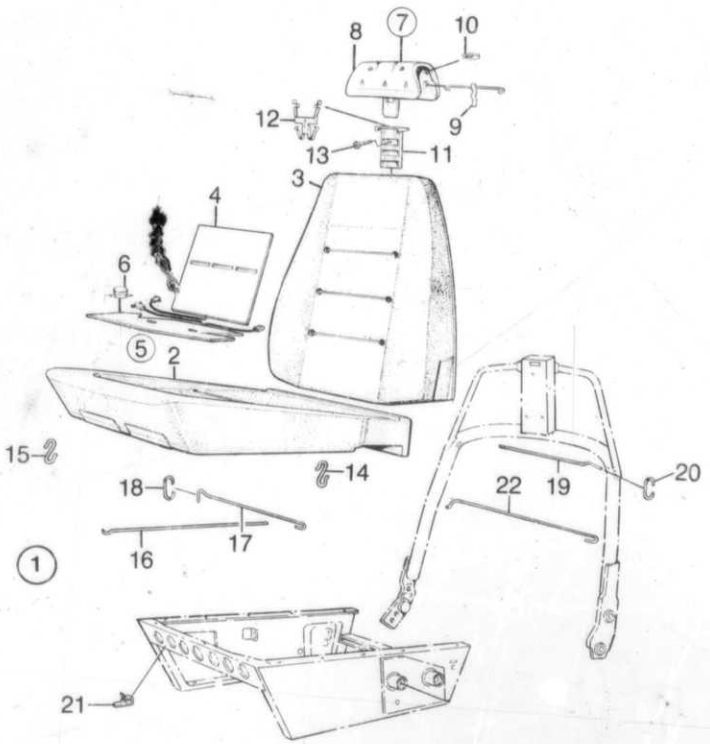


R 9447 - 900

| 1430 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0520 | 5 | *95 58 024* | | 1987,101,100,14) NLS - USE 9561440 | 1 | .Heating pad | .Värmedyna | 4 |
| 0530 | 5 | 95 61 440 | | 102,100,14) | 1 | .Heating pad | .Värmedyna | 4 |
| 0540 | 6 | *95 56 358* | | -1986 NLS - USE 9524745 | 1 | ..Thermostat | ..Termostat | 3 |
| 0550 | 6 | 95 24 745 | | 1987 | 1 | ..Thermostat | ..Termostat | 3 |
| 0560 | 7 | 97 18 511 | | 117) | 1 | .Head restraint | .Nackskydd | 6 |
| 0570 | 7 | 97 18 529 | | 117,13) | 1 | .Head restraint | .Nackskydd | 6 |
| 0580 | 7 | 97 27 165 | | 118,14) | 1 | .Head restraint | .Nackskydd | 6 |
| 0590 | 7 | 98 84 057 | | 118), CV | 1 | .Head restraint | .Nackstöd | 6 |
| 0600 | 8 | 98 09 690 | | | 1 | ..Framework | ..Stomme | 6 |
| 0610 | 9 | 94 59 868 | | | 2 | ..Wire rod | ..Trådten | 6 |
| 0620 | 10 | 94 59 975 | | | 4 | ..Clip | ..Clips | 5 |
| 0630 | 11 | *97 95 949* | | 1987 NLS - USE 4031563 | 1 | .Sleeve | .Hylsa | 5 |
| 0640 | 12 | 97 96 848 | | | 1 | .Locking spring | .Spärrfjäder | 5 |
| 0650 | 13 | 79 74 348 | | | 1 | .Screw | .Skruv | 5 |
| 0660 | 14 | 97 69 225 | | 14,119) 20 MM | X | .Hook | .Krok | 5 |
| 0670 | 15 | 97 69 217 | | 14,119) 30 MM | X | .Hook | .Krok | 5 |
| 0680 | 16 | 97 26 795 | | | X | .Cover rod | .Klädselbåge | 5 |
| 0690 | 17 | *94 25 240* | | 1987 NLS - USE 9849530 | X | .Wire rod | .Trådten | 5 |
| 0700 | 18 | *98 49 498* | | 103) NLS - USE 9450685 | X | .Clamp | .Klammer | 5 |
| 0710 | 18 | 94 50 685 | | 104) | X | .Clamp | .Klammer | 5 |
| 0720 | 19 | 94 16 181 | | | X | .Wire rod | .Trådten | 5 |
| 0730 | 20 | *98 49 498* | | 103) NLS - USE 9450685 | X | .Clamp | .Klammer | 5 |
| 0740 | 20 | 94 50 685 | | 104) | X | .Clamp | .Klammer | 5 |
| 0750 | 21 | 84 00 350 | | | 10 | .Clip | .Clips | 5 |
| 0760 | 22 | 98 49 530 | | | X | .Wire rod | .Trådten | 5 |

13. For cars with upholstery "BLOCK PATTERN" För bilar med klädsel "BLOCK MÖNSTER"
14. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
100. For seats with adjustable heating För stolar med justerbar värme
101. Ch. --H2012980, --H3011604, --H7021889
102. Ch. H2012981--, H3011605--, H7021890--
103. Ch. --H2014003, --H3011528, --H7020754
104. Ch. H2014004--, H3011529--, H7020755--
117. State upholstery colour and year model Uppge klädselfärg och årsmodell
118. State upholstery colour and ch No Uppge klädselfärg och ch nr
119. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-G08

## Front seats Part 2 -1987

## Stolar Del 2 -1987

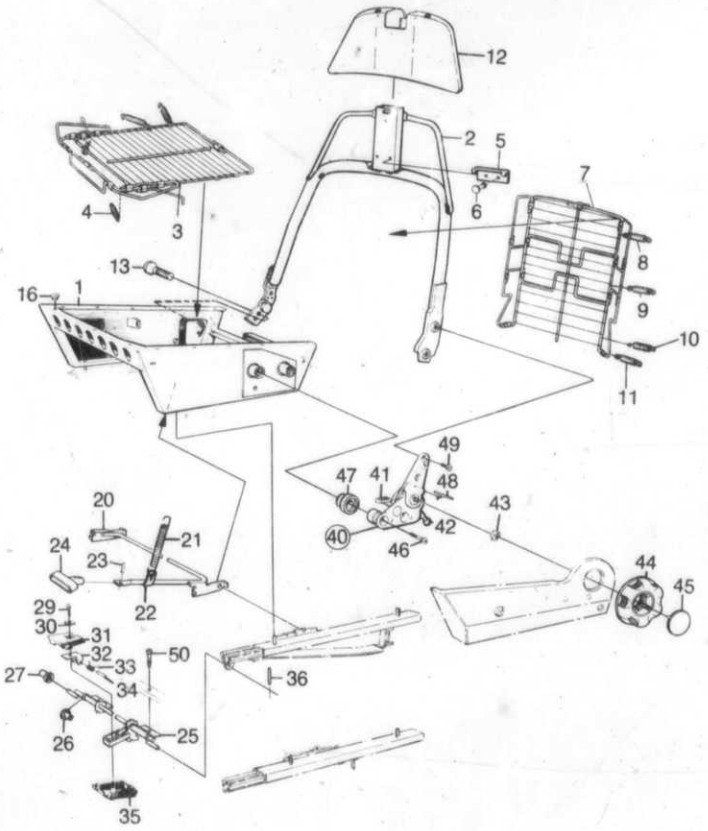


F2573 - 900

| 1435 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | | | | See page 8B-147, 6-G04 | 1 | Seat | Stol | |
| 0030 | 1 | *97 46 082* | | 1986 LH NLS - USE 4043196 | 1 | .Seat frame | .Sitsram | 6 |
| 0035 | 1 | *96 82 964* | | 1987 LH NLS - USE 4043196 | 1 | .Seat frame | .Sitsram | 6 |
| 0040 | 1 | *98 05 052* | | 1986 RH NLS - USE 4043246 | 1 | .Seat frame | .Sitsram | 6 |
| 0045 | 1 | *96 82 972* | | 1987 RH NLS - USE 4043246 | 1 | .Seat frame | .Sitsram | 6 |
| 0050 | 2 | 97 46 124 | | LH | 1 | .Backrest frame | .Ryggram | 6 |
| 0060 | 2 | 98 12 322 | | RH | 1 | .Backrest frame | .Ryggram | 6 |
| 0070 | 3 | 98 78 562 | | | 1 | .Wire matting | .Resårmatta | 6 |
| 0090 | 4 | 98 37 402 | | | 10 | .Spring | .Fjäder | 6 |
| 0100 | 5 | 97 26 779 | | 14) | 1 | .Attaching bracket | .Fästvinkel | 5 |
| 0110 | 6 | 79 61 642 | | 14) | 2 | .Rivet | .Nit | 5 |
| 0120 | 7 | 98 78 570 | | | 1 | .Wire matting | .Resårmatta | 6 |
| 0130 | 8 | 98 37 410 | | | 2 | .Spring | .Fjäder | 6 |
| 0140 | 9 | 98 37 428 | | | 2 | .Spring | .Fjäder | 6 |
| 0150 | 10 | 98 37 436 | | | 2 | .Spring | .Fjäder | 6 |
| 0160 | 11 | 98 37 444 | | | 2 | .Spring | .Fjäder | 6 |
| 0170 | 12 | 97 02 465 | | | 1 | .Cover | .Kåpa | 6 |
| 0180 | 13 | 79 74 033 | | | 2 | .Screw | .Skruv | 5 |
| 0210 | 16 | 84 07 983 | | | 10 | .Bushing | .Bussning | 4 |
| 0220 | 20 | 97 18 297 | | LH | 1 | .Control arm | .Reglagearm | 6 |
| 0230 | 20 | 97 18 305 | | RH | 1 | .Control arm | .Reglagearm | 6 |
| 0240 | 21 | 89 35 751 | | | 1 | .Spring | .Fjäder | 5 |
| 0250 | 22 | 98 33 971 | | | 1 | .Clip | .Clips | 5 |
| 0260 | 23 | 79 46 148 | | | 1 | .Roll pin | .Spännstift | 5 |
| 0270 | 24 | 94 65 956 | | LH | 1 | .Handle | .Handtag | 5 |
| 0280 | 24 | 94 88 131 | | RH | 1 | .Handle | .Handtag | 5 |
| 0290 | 25 | 97 18 602 | | LHD | 1 | .Adjusting shaft | .Justeraxel | 6 |
| 0300 | 25 | 97 18 610 | | RHD | 1 | .Adjusting shaft | .Justeraxel | 6 |
| 0310 | 26 | 94 88 370 | | | 4 | ..Bushing | ..Bussning | 5 |
| 0320 | 27 | 94 73 349 | | | 2 | .Bushing | .Bussning | 5 |
| 0340 | 29 | 79 70 262 | | | 1 | .Screw | .Skruv | 5 |
| 0350 | 30 | 84 25 126 | | | 1 | .Washer | .Bricka | 5 |
| 0360 | 31 | 84 25 035 | | | 1 | .Upper part | .Överhalva | 5 |
| 0370 | 32 | 84 25 100 | | | 1 | .Arm | .Arm | 5 |
| 0380 | 33 | 97 29 724 | | | 1 | .Spring | .Fjäder | 6 |
| 0390 | 34 | 84 26 173 | | | 1 | .Pin | .Pinne | 5 |
| 0400 | 35 | 84 25 043 | | | 1 | .Lower half | .Underhalva | 5 |
| 0410 | 36 | 79 56 212 | | | 1 | .Roll pin | .Spännstift | 5 |
| 0420 | 40 | 98 35 190 | | LH, 2SN, 3CK | 1 | .Reclining seat fitting | .Liggsitsbeslag | 6 |
| 0430 | 40 | 98 35 208 | | RH, 2SN, 3CK | 1 | .Reclining seat fitting | .Liggsitsbeslag | 6 |
| 0440 | 40 | 94 56 765 | | LH, 4SN, 5CK | 1 | .Reclining seat fitting | .Liggsitsbeslag | 6 |
| 0450 | 40 | 94 56 773 | | RH, 4SN, 5CK | 1 | .Reclining seat fitting | .Liggsitsbeslag | 6 |
| 0460 | 41 | 94 87 828 | | | 1 | ..Button | ..Knapp | 3 |
| 0470 | 42 | 94 87 810 | | | 1 | ..Button | ..Knapp | 3 |
| 0480 | 43 | 94 41 270 | | | 1 | ..Lock washer | ..Låsbricka | 5 |
| 0490 | 44 | 98 51 601 | | | 1 | .Steering wheel | .Ratt | 5 |
| 0495 | 44 | 97 04 511 | | CV | 1 | .Steering wheel | .Ratt | 5 |
| 0500 | 45 | 98 51 619 | | | 1 | .Cover | .Täcklock | 6 |
| 0510 | 45 | 94 37 021 | | CV | 1 | .Cover | .Täcklock | 6 |
| 0570 | 46 | 97 15 525 | | | 2 | .Screw | .Skruv | 5 |
| 0580 | 47 | 94 78 066 | | | 2 | .Washer | .Bricka | 5 |
| 0590 | 48 | 98 37 022 | | | 2 | .Hook | .Krok | 5 |
| 0600 | 49 | 79 74 744 | | | 2 | .Screw | .Skruv | 5 |
| 0610 | 50 | 97 18 131 | | | 2 | Hex. socket screw | Insexskruv | 5 |

14. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-G10

## *Front seats Part 3 -1987*

## *Stolar Del 3 -1987*

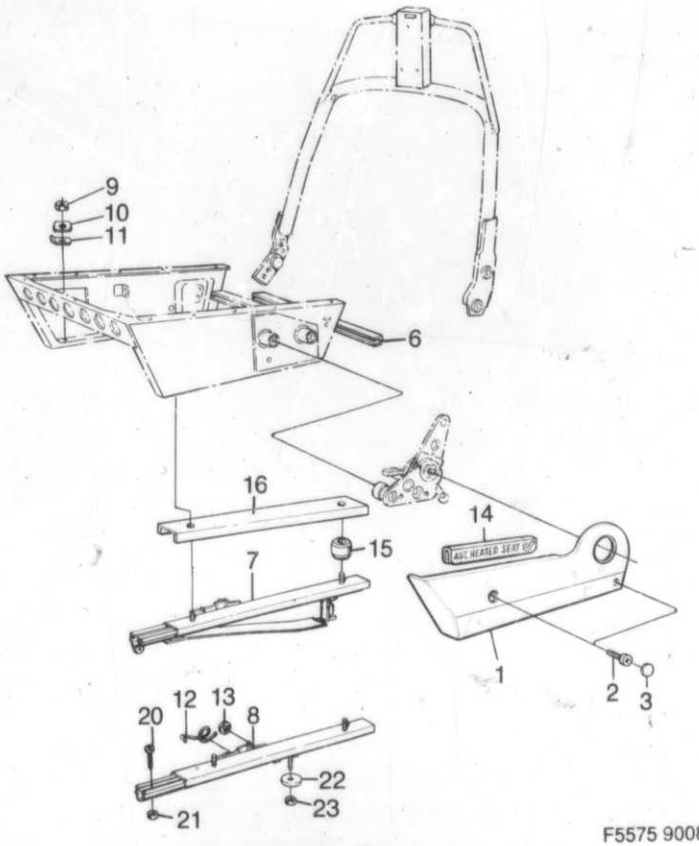


F5575 90086

| 1440 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | | | | See page 8B-147, 6-G04 | 1 | Seat | Stol | |
| 0030 | 1 | 98 13 296 | | 590), LH | 1 | .Cover | .Kåpa | 6 |
| 0040 | 1 | 98 13 304 | | 590), RH | 1 | .Cover | .Kåpa | 6 |
| 0050 | 1 | 98 13 254 | | 600), LH | 1 | .Cover | .Kåpa | 6 |
| 0060 | 1 | 98 13 262 | | 600), RH | 1 | .Cover | .Kåpa | 6 |
| 0070 | 1 | 98 13 270 | | 560), LH | 1 | .Cover | .Kåpa | 6 |
| 0080 | 1 | 98 13 288 | | 560), RH | 1 | .Cover | .Kåpa | 6 |
| 0090 | 1 | 98 28 161 | | 580), LH | 1 | .Cover | .Kåpa | 6 |
| 0100 | 1 | 98 28 179 | | 580), RH | 1 | .Cover | .Kåpa | 6 |
| 0110 | 1 | 98 65 775 | | 610), LH | 1 | .Cover | .Kåpa | 6 |
| 0120 | 1 | 98 65 783 | | 610), RH | 1 | .Cover | .Kåpa | 6 |
| 0130 | 2 | 79 70 536 | | | 2 | .Screw | .Skruv | 6 |
| 0140 | 3 | 97 20 889 | | 590) | 1 | .Cover | .Täcklock | 3 |
| 0150 | 3 | 94 92 471 | | 600) | 1 | .Cover | .Täcklock | 3 |
| 0160 | 3 | 97 06 466 | | 560) | 1 | .Cover | .Täcklock | 3 |
| 0170 | 3 | 98 28 187 | | 580) | 1 | .Cover | .Täcklock | 3 |
| 0180 | 3 | 98 65 767 | | 610) | 1 | .Cover | .Täcklock | 3 |
| 0190 | 6 | *94 04 831* | | NLS | 1 | .Crash pad | .Stötskydd | 6 |
| 0200 | 7 | 98 33 476 | | 301), LH | 1 | .Seat rail | .Stolskena | 6 |
| 0210 | 7 | 98 33 484 | | 301), RH | 1 | .Seat rail | .Stolskena | 6 |
| 0220 | 7 | 98 33 492 | | 301), RHD, LH | 1 | .Seat rail | .Stolskena | 6 |
| 0230 | 7 | 98 33 500 | | 301), RHD, RH | 1 | .Seat rail | .Stolskena | 6 |
| 0240 | 8 | 97 18 479 | | 302), LH | 1 | .Seat rail | .Stolskena | 6 |
| 0250 | 8 | 97 18 487 | | 302), RH | 1 | .Seat rail | .Stolskena | 6 |
| 0260 | 9 | 80 74 106 | | | 4 | .Nut | .Mutter | 5 |
| 0270 | 10 | 94 89 758 | | | 2 | .Washer rear | .Bricka bak | 5 |
| 0271 | | | | | | | | |
| 0280 | 11 | 94 89 766 | | | 2 | .Washer front | .Bricka fram | 5 |
| 0281 | | | | | | | | |
| 0290 | 12 | 94 76 169 | | LH | 1 | .Spring | .Fjäder | 6 |
| 0300 | 12 | 94 76 177 | | RH | 1 | .Spring | .Fjäder | 6 |
| 0310 | 13 | 94 76 185 | | | 1 | .Lock washer | .Låsbricka | 5 |
| 0315 | 14 | 98 29 409 | | "AUTO HEATED SEAT" | 2 | .Sign | .Skylt | 5 |
| 0317 | 15 | 94 73 364 | | | 4 | .Spacer | .Distans | 5 |
| 0318 | 16 | 94 73 364 | | | 2 | .Spacer | .Distans | 5 |
| 0320 | 20 | 97 18 131 | | 302) | 2 | Hex. socket screw | Insexskruv | 5 |
| 0330 | 21 | 98 49 795 | | 302) | 2 | Nut | Mutter | 5 |
| 0340 | 22 | 89 39 449 | | 302) | 2 | Washer | Bricka | 5 |
| 0350 | 23 | 80 74 288 | | 302) | 2 | Nut | Mutter | 5 |

301. Driver seat Förarstol
302. Passanger seat Passagerarstol
560. Red Röd
580. Blue Blå
590. Yellow Gul
600. Brown Brun
610. Black Svart



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-G12

## *Front seats Part 1* *1988-*

## *Stolar Del 1* *1988-*

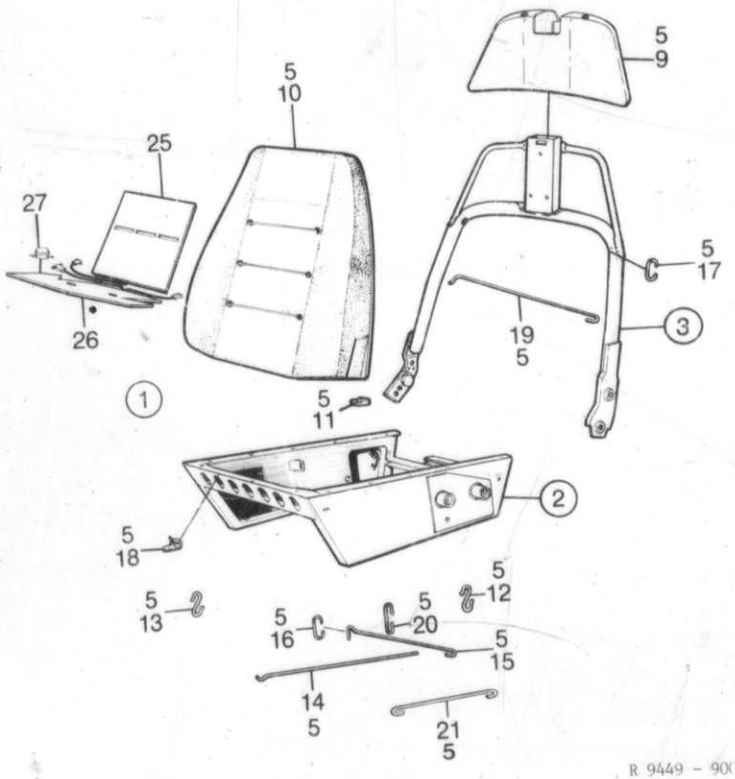


R 9449 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1450 | | | | | | | |
| 0010 | 1 | 96 98 564 | 133,342) 2SN, 3CK, LH | 1 | Seat | Stol | 6 |
| 0020 | 1 | 96 98 572 | 133,342) 2SN, 3CK, RH | 1 | Seat | Stol | 6 |
| 0030 | 1 | 96 98 580 | 133,342) 2SN,3CK,RH, RHD | 1 | Seat | Stol | 6 |
| 0040 | 1 | 96 98 598 | 133,342) 2SN,3CK,LH, RHD | 1 | Seat | Stol | 6 |
| 0050 | 1 | 96 98 606 | 133,342) 4SN, 5CK, LH | 1 | Seat | Stol | 6 |
| 0060 | 1 | 96 98 614 | 133,342) 4SN, 5CK, RH | 1 | Seat | Stol | 6 |
| 0070 | 1 | 96 98 622 | 133,342) 4SN,5CK,RH, RHD | 1 | Seat | Stol | 6 |
| 0080 | 1 | 96 98 630 | 133,342) 4SN,5CK,LH, RHD | 1 | Seat | Stol | 6 |
| 0085 | | | | | | | |
| 0090 | 1 | 96 98 648 | 135,342) 2SN, 3CK, CV,LH | 1 | Seat | Stol | 6 |
| 0100 | 1 | 96 98 655 | 135,342) 2SN, 3CK, CV,RH | 1 | Seat | Stol | 6 |
| 0110 | 1 | 96 98 663 | 135,342) 2SN, 3CK, CV RH, RHD | 1 | Seat | Stol | 6 |
| 0111 | | | | | | | |
| 0120 | 1 | 96 98 671 | 135,342) 2SN, 3CK, CV LH, RHD | 1 | Seat | Stol | 6 |
| 0121 | | | | | | | |
| 0130 | 1 | 96 98 689 | 135,342) 4SN, 5CK, LH | 1 | Seat | Stol | 6 |
| 0140 | 1 | 96 98 697 | 135,342) 4SN, 5CK, RH | 1 | Seat | Stol | 6 |
| 0150 | 1 | 96 98 705 | 135,342) 4SN,5CK,RH, RHD | 1 | Seat | Stol | 6 |
| 0160 | 1 | 96 98 713 | 135,342) 4SN,5CK,LH, RHD | 1 | Seat | Stol | 6 |
| 0165 | | | | | | | |
| 0170 | 1 | 96 98 721 | 134,342) 2SN, 3CK, LH | 1 | Seat | Stol | 6 |
| 0180 | 1 | 96 98 739 | 134,342) 2SN, 3CK, RH | 1 | Seat | Stol | 6 |
| 0190 | 1 | 96 98 747 | 134,342) 2SN,3CK,RH, RHD | 1 | Seat | Stol | 6 |
| 0200 | 1 | 96 98 754 | 134,342) 2SN,3CK,LH, RHD | 1 | Seat | Stol | 6 |
| 0210 | 1 | 96 98 762 | 134,342) 4SN, 5CK, LH | 1 | Seat | Stol | 6 |
| 0220 | 1 | 96 98 770 | 134,342) 4SN, 5CK, RH | 1 | Seat | Stol | 6 |
| 0230 | 1 | 96 98 788 | 134,342) 4SN,5CK,RH, RHD | 1 | Seat | Stol | 6 |
| 0240 | 1 | 96 98 796 | 134,342) 4SN,5CK,LH, LHD | 1 | Seat | Stol | 6 |
| 0245 | | | | | | | |
| 0250 | 2 | *95 30 023* | 133,134,324) LH NLS - USE 4043170 | 1 | .Seat frame | .Sitsram | 6 |
| 0260 | 2 | *95 30 031* | 133,134,324) RH NLS - USE 4043220 | 1 | .Seat frame | .Sitsram | 6 |
| 0270 | 2 | *95 30 049* | 133,134,324) RH, RHD NLS - USE 4043279 | 1 | .Seat frame | .Sitsram | 6 |
| 0280 | 2 | 95 30 056 | 133,134,324) LH, RHD | 1 | .Seat frame | .Sitsram | 6 |
| 0290 | 2 | *96 82 881* | 135,324) LH NLS - USE 4043311 | 1 | .Seat frame | .Sitsram | 6 |
| 0300 | 2 | *96 82 899* | 135,324) RH NLS - USE 4043329 | 1 | .Seat frame | .Sitsram | 6 |
| 0310 | 2 | 96 82 907 | 135,324) RH, RHD | 1 | .Seat frame | .Sitsram | 6 |
| 0320 | 2 | 96 82 915 | 135,324) LH, RHD | 1 | .Seat frame | .Sitsram | 6 |
| 0325 | | | | | | | |
| 0330 | 3 | 98 12 249 | 324) LH, 2SN, 3CK | 1 | .Backrest frame | .Ryggram | 6 |
| 0340 | 3 | 98 12 256 | 324) RH, 2SN, 3CK | 1 | .Backrest frame | .Ryggram | 6 |
| 0350 | 3 | 98 12 264 | 324) LH, 4SN, 5CK | 1 | .Backrest frame | .Ryggram | 6 |
| 0360 | 3 | 98 12 272 | 324) RH, 4SN, 5CK | 1 | .Backrest frame | .Ryggram | 6 |
| 0380 | 5 | 96 14 520 | 139,274) | 1 | .Mounting kit | .Monteringssats | 6 |
| 0385 | | | See page 8B-223, 6-J08 - | | | | |
| 0390 | 5 | 95 30 155 | 119) | 1 | .Mounting kit | .Monteringssats | 6 |
| 0395 | | | See page 8B-223, 6-J08 | | | | |

119. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
133. Trim colour A11, A14, B11, B14, C11, C14, E11, E14, F11, F14, B41, C41, E41, F41, G41
134. Trim colour A24, B24, C24, E24, F24, G24, B44, C44, E44, F44, G44, C43, E43, G43
135. Trim colour A33, B33, C33, E33, G33
139. For cars with upholstery "VIKTORIA" För bilar med klädsel "VIKTORIA"
274. For cars with upholstery "PARALLEL" För bilar med klädsel "PARALLELL"
324. See following sections for contents Se följande avsnitt för ingående artiklar
342. State upholstery colour, ch No and the type of heating pad (thermostat or rheostat). Uppge klädselfärg, ch nr och vilken typ av värmedyna (termostat eller reostat).



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-G14

## Front seats Part 1
1988-

## Stolar Del 1
1988-

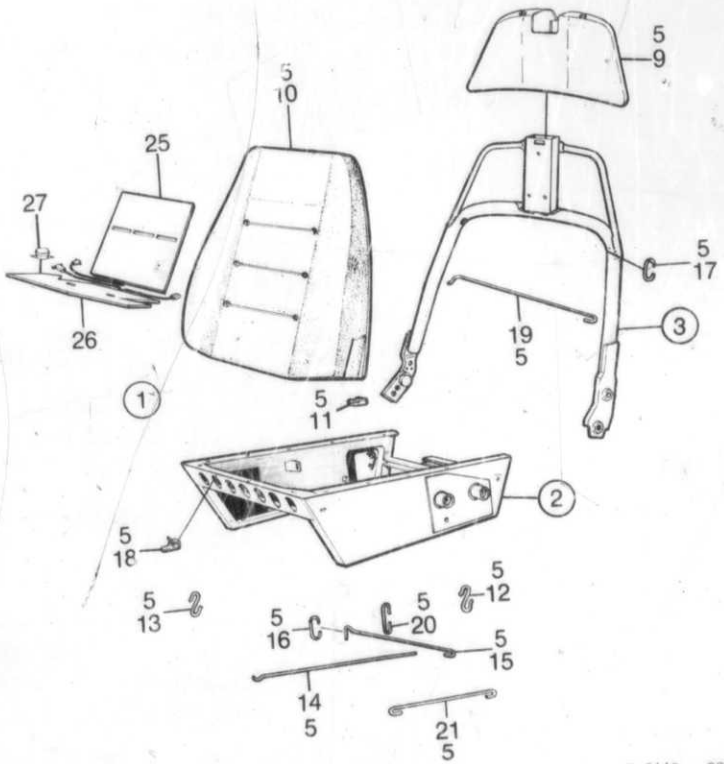


R 9449 - 900

| 1450 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | # | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0400 | 5 | 96 14 546 | | 14) | 1 | .Mounting kit | .Monteringssats | 6 |
| 0405 | | | | See page 8B-223, 6-J08 | | | | |
| 0770 | 9 | 97 02 465 | | | 1 | ..Cover | ..Kåpa | 6 |
| 0780 | 10 | 96 88 458 | | | 1 | ..Backrest cushion | ..Ryggdyna | 6 |
| 0790 | 10 | 98 57 731 | | 14) | 1 | ..Backrest cushion | ..Ryggdyna | 6 |
| 1120 | 11 | 94 59 975 | | 139,274,119) | 4 | ..Clip | ..Clips | 5 |
| 1160 | 12 | 97 69 209 | | 119) 40 MM | 4 | ..Hook | ..Krok | 5 |
| 1170 | 13 | 97 69 217 | | 139,274,119) 30 MM | X | ..Hook | ..Krok | 5 |
| 1180 | 14 | 97 26 795 | | | 2 | ..Cover rod | ..Klädselbåge | 5 |
| 1200 | 15 | 98 49 530 | | 139,274) | 1 | ..Wire rod | ..Trådten | 5 |
| 1220 | 16 | 94 50 685 | | | X | ..Clamp | ..Klammer | 5 |
| 1250 | 17 | 94 50 685 | | | X | ..Clamp | ..Klammer | 5 |
| 1260 | 18 | 84 00 350 | | | 10 | ..Clip | ..Clips | 5 |
| 1280 | 19 | 98 49 530 | | 139,274) | X | ..Wire rod | ..Trådten | 5 |
| 1290 | 20 | 97 69 209 | | 119) 40 MM | 6 | ..Hook | ..Krok | 5 |
| 1295 | 21 | 95 84 731 | | 119) | 2 | ..Wire rod | ..Trådten | 5 |
| 1300 | 25 | 95 63 123 | | 139,274,119) | 1 | .Heating pad | .Värmedyna | 4 |
| 1310 | 25 | *85 93 030* | | 14,194) NLS - USE 9569955 | 1 | .Heating pad | .Värmedyna | 4 |
| 1312 | 25 | 95 69 955 | | 14,195) | 1 | .Heating pad | .Värmedyna | 4 |
| 1315 | 26 | 95 63 107 | | 295,139,274,119) | 1 | .Heating pad | .Värmedyna | 4 |
| 1317 | 26 | 40 63 749 | | 296,139,274,119) | 1 | .Heating pad | .Värmedyna | 4 |
| 1319 | 26 | 95 61 432 | | 295,14) | 1 | .Heating pad | .Värmedyna | 4 |
| 1320 | 26 | 40 63 731 | | 296,14) | 1 | .Heating pad | .Värmedyna | 4 |
| 1323 | 26 | 95 63 115 | | 100,119,139,274) | 1 | .Heating pad | .Värmedyna | 4 |
| 1325 | 26 | 95 61 440 | | 100,14) | 1 | .Heating pad | .Värmedyna | 4 |
| 1330 | 27 | 95 24 745 | | | 1 | ..Thermostat | ..Termostat | 3 |
| 1340 | | 96 14 512 | | See page 8B-223, 6-J08 | 1 | .Mounting kit | .Monteringssats | 6 |
| 1350 | | 96 14 561 | | See page 8B-161, 6-G18 | 1 | .Mounting kit | .Monteringssats | 6 |

14. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
100. For seats with adjustable heating För stolar med justerbar värme
119. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
139. For cars with upholstery "VIKTORIA" För bilar med klädsel "VIKTORIA"
194. Ch. -J3018393, -J7022867
195. Ch. J3018394-, J7022868-
274. For cars with upholstery "PARALLEL" För bilar med klädsel "PARALLELL"
295. Ch. -K3022751, -K7033889
296. Ch. K3022752-, K7033890-



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-G16 Front seats Part 2 1988-

## Stolar Del 2 1988-

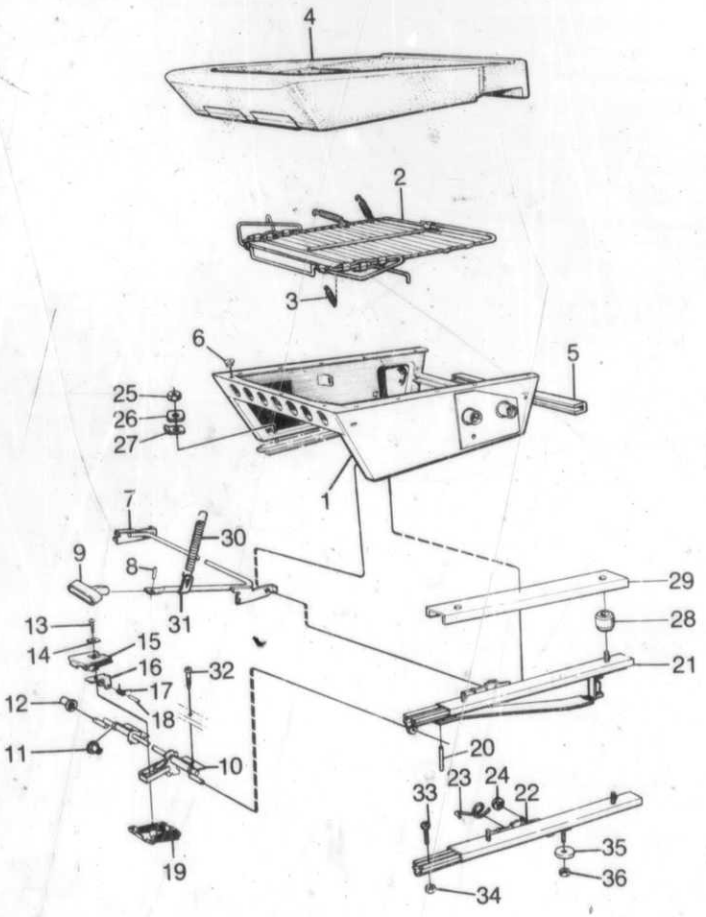


F5576 90086

| Pos | Part No/Art nr | KS | Notes/Anmärkningar | Qty/Antal | Description | Benämning | SL |
|---|---|---|---|---|---|---|---|
| 0010 | | | See page 8B-155, 6-G12 | | Seat | Stol | |
| 0020 | | | See page 8B-155, 6-G12 | | . Seat frame | . Sitsram | |
| 0030 | 1 | *96 82 964* | LH NLS - USE 4043196 | 1 | .. Seat frame | .. Sitsram | 6 |
| 0040 | 1 | *96 82 972* | RH NLS - USE 4043246 | 1 | .. Seat frame | .. Sitsram | 6 |
| 0060 | 2 | 98 78 562 | | 1 | .. Wire matting | .. Resårmatta | 6 |
| 0080 | 3 | 98 37 402 | | 10 | .. Spring | .. Fjäder | 6 |
| 0090 | 4 | 96 88 441 | 139,274,119) | 1 | .. Seat cushion | .. Sittdyna | 6 |
| 0095 | 4 | 96 82 014 | 14) | 1 | .. Seat cushion | .. Sittdyna | 6 |
| 0100 | 5 | *94 04 831* | NLS | 1 | .. Crash pad | .. Stötskydd | 6 |
| 0110 | 6 | 84 07 983 | | 10 | .. Bushing | .. Bussning | 4 |
| 0120 | 7 | 97 18 297 | LH | 1 | .. Control arm | .. Reglagearm | 6 |
| 0130 | 7 | 97 18 305 | RH | 1 | .. Control arm | .. Reglagearm | 6 |
| 0140 | 8 | 79 46 148 | | 1 | .. Roll pin | .. Spännstift | 5 |
| 0150 | 9 | 94 65 956 | LH | 1 | .. Handle | .. Handtag | 5 |
| 0160 | 9 | 94 88 131 | RH | 1 | .. Handle | .. Handtag | 5 |
| 0170 | 10 | 97 18 602 | LHD | 1 | .. Adjusting shaft | .. Justeraxel | 6 |
| 0180 | 10 | 97 18 610 | RHD | 1 | .. Adjusting shaft | .. Justeraxel | 6 |
| 0190 | 11 | 94 88 370 | | 4 | ... Bushing | ... Bussning | 5 |
| 0200 | 12 | 94 73 349 | | 2 | .. Bushing | .. Bussning | 5 |
| 0210 | 13 | 79 70 262 | | 1 | .. Screw | .. Skruv | 5 |
| 0220 | 14 | 84 25 126 | | 1 | .. Washer | .. Bricka | 5 |
| 0230 | 15 | 84 25 035 | | 1 | .. Upper part | .. Överhalva | 5 |
| 0240 | 16 | 84 25 100 | | 1 | .. Arm | .. Arm | 5 |
| 0250 | 17 | 97 29 724 | | 1 | .. Spring | .. Fjäder | 6 |
| 0260 | 18 | 84 26 173 | | 1 | .. Pin | .. Pinne | 5 |
| 0270 | 19 | 84 25 043 | | 1 | .. Lower half | .. Underhalva | 5 |
| 0280 | 20 | 79 56 212 | | 1 | .. Roll pin | .. Spännstift | 5 |
| 0290 | 21 | 98 33 476 | 301), LH | 1 | .. Seat rail | .. Stolskena | 6 |
| 0300 | 21 | 98 33 484 | 301), RH | 1 | .. Seat rail | .. Stolskena | 6 |
| 0310 | 21 | 98 33 492 | 301), LH, RHD | 1 | .. Seat rail | .. Stolskena | 6 |
| 0320 | 21 | 98 33 500 | 301), RH, RHD | 1 | .. Seat rail | .. Stolskena | 6 |
| 0330 | 22 | 97 18 479 | 302), LH | 1 | .. Seat rail | .. Stolskena | 6 |
| 0340 | 22 | 97 18 487 | 302), RH | 1 | .. Seat rail | .. Stolskena | 6 |
| 0350 | 23 | 94 76 169 | LH | 1 | ... Spring | ... Fjäder | 6 |
| 0360 | 23 | 94 76 177 | RH | 1 | ... Spring | ... Fjäder | 6 |
| 0370 | 24 | 94 76 185 | | 1 | ... Lock washer | ... Låsbricka | 5 |
| 0380 | 25 | 81 51 235 | | 4 | .. Nut | .. Mutter | 5 |
| 0390 | 26 | 94 89 758 | | 2 | .. Washer rear | .. Bricka bak | 5 |
| 0400 | 27 | 94 89 766 | | 2 | .. Washer front | .. Bricka fram | 5 |
| 0405 | 28 | 94 73 364 | | 4 | .. Spacer | .. Distans | 5 |
| 0407 | 29 | 94 89 337 | | 2 | .. Reinforcing bracket | .. Förstärkningsprofil | 5 |
| 0410 | 30 | 89 35 751 | | 1 | . Spring | . Fjäder | 5 |
| 0420 | 31 | 98 33 971 | | 1 | . Clip | . Clips | 5 |
| 0430 | 32 | 97 18 131 | | 2 | . Hex. socket screw | . Insexskruv | 5 |
| 0440 | 33 | 97 18 131 | 302) | 2 | . Hex. socket screw | . Insexskruv | 5 |
| 0450 | 34 | 98 49 795 | 302) | 1 | . Nut | . Mutter | 5 |
| 0460 | 35 | 89 39 449 | 302) | 2 | . Washer | . Bricka | 5 |
| 0470 | 36 | 80 74 288 | 302) | 2 | . Nut | . Mutter | 5 |

14. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
119. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
139. For cars with upholstery "VIKTORIA" För bilar med klädsel "VIKTORIA"
274. For cars with upholstery "PARALLEL" För bilar med klädsel "PARALLELL"
301. Driver seat Förarstol
302. Passanger seat Passagerarstol




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

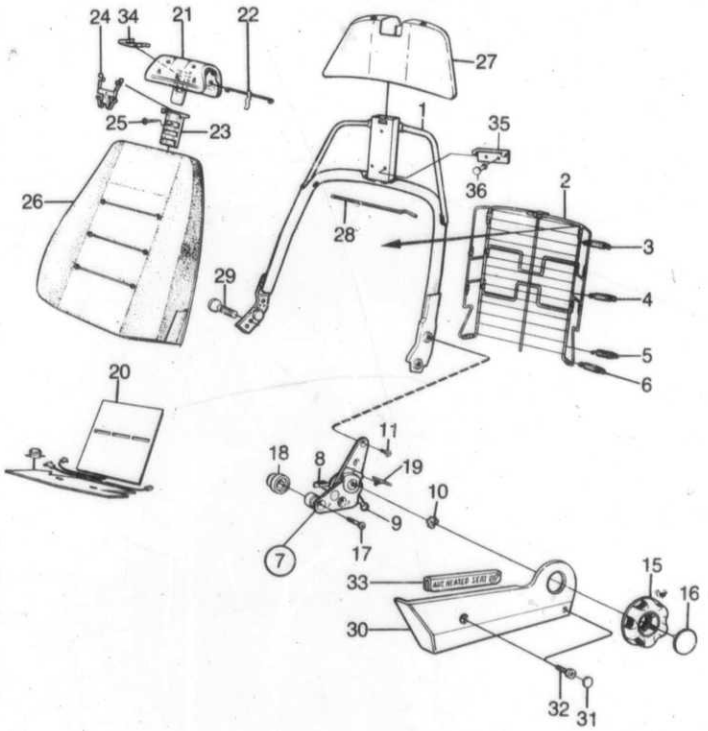


F2574 - 900

| 1460 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | See page 8B-155, 6-G12 | 1 | Seat | Stol | |
| 0020 | | | | See page 8B-155, 6-G12 | 1 | .Backrest frame | .Ryggram | |
| 0030 | 1 | 97 46 124 | | LH | 1 | ..Backrest frame | ..Ryggram | 6 |
| 0040 | 1 | 98 12 322 | | RH | 1 | ..Backrest frame | ..Ryggram | 6 |
| 0050 | 2 | 98 78 570 | | | 1 | ..Wire matting | ..Resårmatta | 6 |
| 0070 | 3 | 98 37 410 | | | 2 | ..Spring | ..Fjäder | 6 |
| 0080 | 4 | 98 37 428 | | | 2 | ..Spring | ..Fjäder | 6 |
| 0090 | 5 | 98 37 436 | | | 2 | ..Spring | ..Fjäder | 6 |
| 0100 | 6 | 98 37 444 | | | 2 | ..Spring | ..Fjäder | 6 |
| 0110 | 7 | 98 35 190 | | LH, 2SN, 3CK, CV | 1 | ..Reclining seat fitting | ..Liggsitsbeslag | 6 |
| 0120 | 7 | 98 35 208 | | RH, 2SN, 3CK, CV | 1 | ..Reclining seat fitting | ..Liggsitsbeslag | 6 |
| 0130 | 7 | 94 56 765 | | LH, 4SN, 5CK | 1 | ..Reclining seat fitting | ..Liggsitsbeslag | 6 |
| 0140 | 7 | 94 56 773 | | RH, 4SN, 5CK | 1 | ..Reclining seat fitting | ..Liggsitsbeslag | 6 |
| 0150 | 8 | 94 87 828 | | 2SN, 3CK | 1 | ...Button | ...Knapp | 3 |
| 0160 | 9 | 94 87 810 | | 2SN, 3CK | 1 | ...Button | ...Knapp | 3 |
| 0170 | 10 | 94 41 270 | | | 1 | ...Lock washer | ...Låsbricka | 5 |
| 0180 | 11 | 79 74 744 | | | 2 | ..Screw | ..Skruv | 5 |
| 0190 | 15 | 98 51 601 | | | 1 | .Steering wheel | .Ratt | 5 |
| 0195 | 15 | 97 04 511 | | CV | 1 | .Steering wheel | .Ratt | 5 |
| 0200 | 16 | 98 51 619 | | | 1 | .Cover | .Täcklock | 6 |
| 0205 | 16 | 94 37 021 | | CV | 1 | .Cover | .Täcklock | 6 |
| 0210 | 17 | 97 15 525 | | | 2 | .Screw | .Skruv | 5 |
| 0220 | 18 | 94 78 066 | | | 2 | .Washer | .Bricka | 5 |
| 0230 | 19 | 98 37 022 | | | 2 | .Hook | .Krok | 5 |
| 0240 | 20 | | | See page 8B-155, 6-G12 | | .Heating pad | .Värmedyna | |
| 0250 | 21 | 98 09 690 | | -1988 | 1 | .Framework | .Stomme | 6 |
| 0255 | 21 | *95 42 168* | | 500) 1989- NLS | 1 | .Head restraint | .Nackstöd | 6 |
| 0260 | 22 | 94 59 868 | | | 2 | .Wire rod | .Trådten | 6 |
| 0270 | 23 | 95 71 696 | | 260) | 1 | .Sleeve | .Hylsa | 5 |
| 0275 | 23 | 40 31 563 | | 261) | 1 | .Sleeve | .Hylsa | 5 |
| 0280 | 24 | 97 96 848 | | | 1 | .Locking spring | .Spärrfjäder | 5 |
| 0290 | 25 | 79 22 396 | | | 1 | .Screw | .Skruv | 5 |
| 0300 | 26 | | | See page 8B-155, 6-G12 | | .Backrest cushion | .Ryggdyna | |
| 0310 | 27 | | | See page 8B-155, 6-G12 | | .Cover | .Kåpa | |
| 0320 | 28 | 94 16 181 | | | 1 | .Wire rod | .Trådten | 5 |
| 0330 | 29 | 79 74 033 | | 241) | 2 | .Screw | .Skruv | 5 |
| 0335 | 29 | 79 81 921 | | 242) | 2 | .Screw | .Skruv | 5 |
| 0350 | 30 | 98 13 296 | | 590), -1988, LH | 1 | .Cover | .Kåpa | 6 |
| 0360 | 30 | 98 13 304 | | 590), -1988, RH | 1 | .Cover | .Kåpa | 6 |
| 0365 | 30 | 95 35 261 | | 590,500) 1989-, LH | 1 | .Cover | .Kåpa | 6 |
| 0366 | 30 | 95 35 279 | | 590,500) 1989-, RH | 1 | .Cover | .Kåpa | 6 |
| 0370 | 30 | 98 13 254 | | 600), -1988, LH | 1 | .Cover | .Kåpa | 6 |
| 0380 | 30 | 98 13 262 | | 600), -1988, RH | 1 | .Cover | .Kåpa | 6 |
| 0390 | 30 | 98 13 270 | | 560), LH | 1 | .Cover | .Kåpa | 6 |
| 0400 | 30 | 98 13 288 | | 560), RH | 1 | .Cover | .Kåpa | 6 |
| 0430 | 30 | 96 81 891 | | 580), LH | 1 | .Cover | .Kåpa | 6 |
| 0440 | 30 | 96 81 909 | | 580), RH | 1 | .Cover | .Kåpa | 6 |
| 0450 | 30 | 98 65 775 | | 610), LH | 1 | .Cover | .Kåpa | 6 |
| 0460 | 30 | 98 65 783 | | 610), RH | 1 | .Cover | .Kåpa | 6 |
| 0480 | 31 | 97 20 889 | | 590), -1988 | 2 | .Cover | .Täcklock | 3 |
| 0485 | 31 | 95 35 287 | | 590,500), 1989- | 2 | .Cover | .Täcklock | 3 |
| 0490 | 31 | 94 92 471 | | 600), -1988 | 2 | .Cover | .Täcklock | 5 |
| 0500 | 31 | 97 06 466 | | 560) | 2 | .Cover | .Täcklock | 6 |

241. Ch. --J3024709, --J7032933
242. Ch. J3024710--, J7032934--
260. Ch. --K3006475, --K7006131.
261. Ch. K3006476--, K7006132--.
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
580. Blue Blå
590. Yellow Gul
600. Brown Brun
610. Black Svart




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

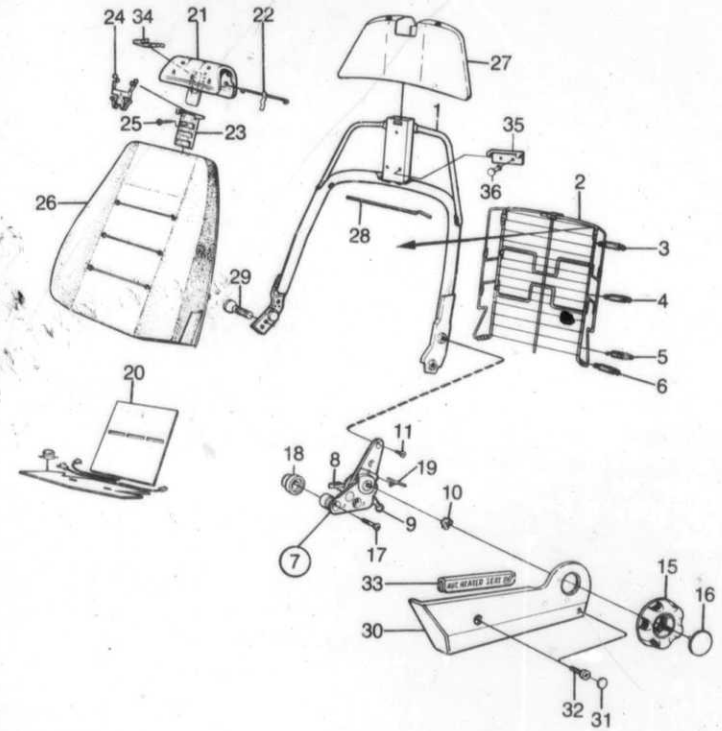


F2574 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0520 | 31 96 81 917 | | 580) | 2 | .Plug | .Plugg | 3 |
| 0530 | 31 98 65 767 | | 610) | 2 | .Cover | .Täcklock | 3 |
| 0535 | 32 79 70 536 | | | 2 | .Screw | .Skruv | 6 |
| 0540 | 33 98 29 409 | | "AUTO HEATED SEAT" | 1 | .Sign | .Skylt | 5 |
| 0550 | 34 95 45 104 | | 1989- | 1 | .Clamp | .Klämma | 5 |
| 0560 | 35 97 26 779 | | 14) | 1 | .Attaching bracket | .Fästvinkel | 5 |
| 0570 | 36 79 61 642 | | 14) | 2 | .Rivet | .Nit | 5 |

14. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
580. Blue Blå
610. Black Svart

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX

| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-G22

## Front seats Part 1 -1987, Automatic belts

## Stolar Del 1 -1987, Passivt bälte

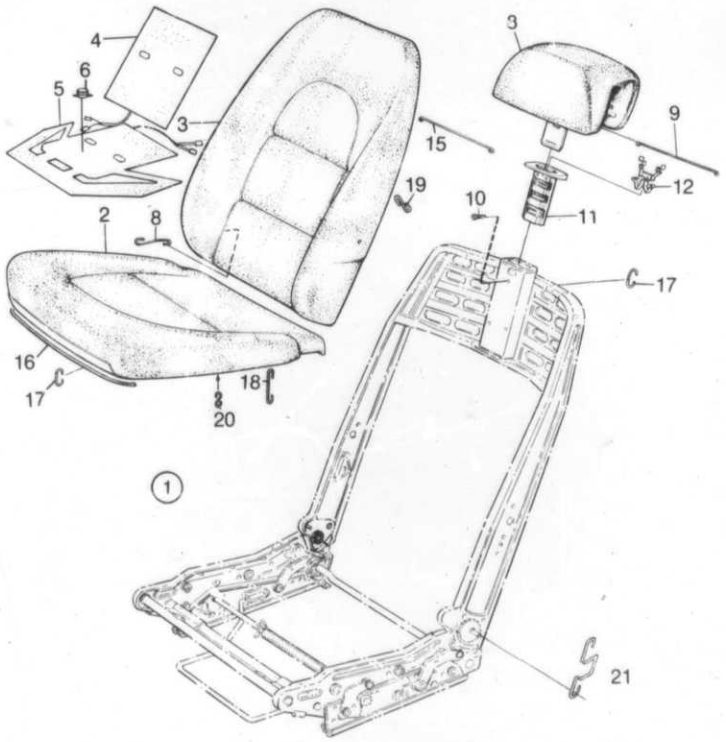


F1947 - 900

| 1475 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 96 98 267 | | 342) LH | 1 | Seat | Stol | 6 |
| 0040 | 1 | 96 98 275 | | 342) RH | 1 | Seat | Stol | 6 |
| 0460 | 2 | 96 18 695 | | | 1 | . Seat cushion | . Sittdyna | 6 |
| 0500 | 3 | 96 18 687 | | | 1 | . Backrest cushion | . Ryggdyna | 6 |
| 0580 | 4 | 85 47 523 | | 101) | 1 | . Heating element kit | . Värmedynesats | 9 |
| 0600 | | | | See page 8B-223, 6-J08 | | | | |
| 0620 | 4 | *85 93 030* | | 102),1987 NLS - USE 9569955 | 1 | . Heating pad | . Värmedyna | 4 |
| 0740 | 5 | 85 47 515 | | 101,100) | 1 | . Heating element kit | . Värmedynesats | 9 |
| 0760 | | | | See page 8B-223, 6-J08 | | | | |
| 0770 | 5 | *95 27 706* | | 102,100),1987 NLS - USE 4063855 | 1 | . Heating pad | . Värmedyna | 4 |
| 0780 | 5 | 85 47 507 | | 101) | 1 | . Heating element kit | . Värmedynesats | 9 |
| 0800 | | | | See page 8B-223, 6-J08 | | | | |
| 0810 | 5 | *95 27 698* | | 102),1987 NLS - USE 4063848 | 1 | . Heating pad | . Värmedyna | 4 |
| 0820 | 6 | 95 24 745 | | 302) | 1 | .. Thermostat | .. Termostat | 3 |
| 0880 | 8 | *97 67 815* | | NLS - USE 9547688 | 1 | . Head restraint | . Nackstöd | 6 |
| 0900 | 9 | 94 59 868 | | | 2 | . Wire rod | . Trådten | 6 |
| 0920 | 10 | 79 22 396 | | | 1 | . Screw | . Skruv | 5 |
| 0940 | 11 | *97 95 949* | | NLS - USE 4031563 | 1 | . Sleeve | . Hylsa | 5 |
| 0980 | 12 | 97 96 848 | | | 1 | . Locking spring | . Spärrfjäder | 5 |
| 1100 | 15 | 97 81 592 | | | 2 | . Cover rod | . Klädselbåge | 5 |
| 1120 | 16 | 98 79 826 | | | 1 | . Cover rod | . Klädselbåge | 5 |
| 1160 | 17 | 94 50 685 | | | X | . Clamp | . Klammer | 5 |
| 1180 | 18 | 97 69 209 | | 40 MM | X | . Hook | . K.ok | 5 |
| 1200 | 19 | 97 69 217 | | 30 MM | X | . Hook | . Krok | 5 |
| 1220 | 20 | 97 69 225 | | 20 MM | X | . Hook | . Krok | 5 |
| 1240 | 21 | *96 17 952* | | 131), LH NLS - USE 9593245 | 1 | . Attaching brace | . Fästbygel | 5 |
| 1260 | 21 | *96 17 960* | | 131), RH NLS - USE 9593245 | 1 | . Attaching brace | . Fästbygel | 5 |
| 1260 | | | | | | | | |

100. For seats with adjustable heating  För stolar med justerbar värme
101. Ch. --H2012980, --H3011604, --H7021889
102. Ch. H2012981--, H3011605--, H7021890--
131. Ch. H2012296--, H3010153--, H7019780--
302. Passanger seat  Passagerarstol
342. State upholstery colour, ch No and the type of heating pad (thermostat or rheostat).  Uppge klädselfärg, ch nr och vilken typ av värmedyna (termostat eller reostat).



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-G24

## *Front seats Part 2*
## *-1987, Automatic belts*

## *Stolar Del 2*
## *-1987, Passivt bälte*

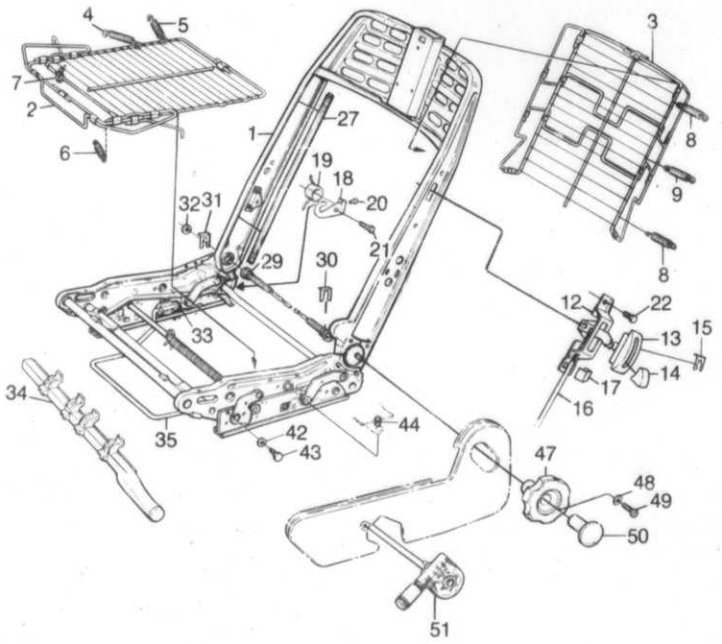


F1948 - 900

| 1480 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0030 | | | | See page 8B-165, 6-G22 | | Seat | Stol | |
| 0460 | 1 | 98 74 777 | | LH | 1 | .Seat frame | .Stolram | 6 |
| 0480 | 1 | 98 76 483 | | RH | 1 | .Seat frame | .Stolram | 6 |
| 0540 | 2 | 96 73 450 | | | 1 | .Wire matting | .Resårmatta | 6 |
| 0700 | 3 | *97 59 051* | | 103) NLS - USE 9697525 | 1 | .Wire matting | .Resårmatta | 6 |
| 0730 | 3 | 96 97 525 | | 104) | 1 | .Wire matting | .Resårmatta | 6 |
| 0740 | 4 | 96 73 146 | | | 4 | .Spring | .Fjäder | 6 |
| 0760 | 5 | 96 73 435 | | | 2 | .Spring | .Fjäder | 6 |
| 0780 | 6 | 96 73 443 | | | 2 | .Spring | .Fjäder | 6 |
| 0800 | 7 | 79 71 872 | | | 2 | .Tensioning band | .Spännband | 5 |
| 0820 | 8 | 97 59 069 | | | 4 | .Spring | .Fjäder | 6 |
| 0840 | 9 | 97 59 077 | | | 2 | .Spring | .Fjäder | 6 |
| 0880 | 12 | *96 18 836* | | NLS - USE 4313607 | 1 | .Release mechanism | .Frigörningsmekanism | 6 |
| 0900 | 13 | 98 74 801 | | | 1 | .Slide | .Slid | 6 |
| 0920 | 14 | 98 74 819 | | | 1 | .Knob | .Knopp | 3 |
| 0940 | 15 | 96 86 841 | | | 1 | .Clamp | .Klämma | 5 |
| 0960 | 16 | 98 74 504 | | | 1 | .Cable | .Wire | 5 |
| 0980 | 17 | 96 11 799 | | | 4 | .Ca holder | .Kabelhållare | 5 |
| 0990 | 18 | 95 31 997 | | 144)LH | 1 | .At ching brace | .Fästbygel | 5 |
| 1000 | 18 | 95 32 003 | | 144)RH | 1 | .Attaching brace | .Fästbygel | 5 |
| 1010 | 19 | 95 32 011 | | 144)LH | 1 | .Spring | .Fjäder | 6 |
| 1020 | 19 | 95 32 029 | | 144)RH | 1 | .Spring | .Fjäder | 6 |
| 1030 | 20 | 79 75 402 | | 144) | 2 | .Rivet | .Nit | 5 |
| 1050 | 21 | 79 72 607 | | 144) | 1 | .Screw | .Skruv | 5 |
| 1080 | 22 | 79 74 330 | | | 2 | .Screw | .Skruv | 5 |
| 1260 | 27 | 96 71 835 | | | 2 | .Protecting moulding | .Skyddslist | 6 |
| 1300 | 29 | 96 80 414 | | | 1 | .Shaft | .Axel | 6 |
| 1320 | 30 | 97 77 327 | | | 2 | .E-circlip | .Spårryttare | 5 |
| 1340 | 31 | *79 15 077* | | NLS - USE 7963143 | 1 | .E-circlip | .Spårryttare | 5 |
| 1380 | 32 | 96 18 232 | | | 1 | .Spacer | .Distans | 5 |
| 1420 | 33 | 73 98 282 | | | 2 | .Washer | .Bricka | 5 |
| 1430 | 34 | 96 57 131 | | 144) | 1 | .Camshaft | .Kamaxel | 6 |
| 1500 | 35 | 96 59 012 | | 301) | 1 | .Shaft | .Axel | 6 |
| 1540 | 35 | 96 59 020 | S | 302) | 1 | .Shaft | .Axel | 6 |
| 1780 | 42 | 79 16 497 | | 302) | 4 | .Washer | .Bricka | 5 |
| 1800 | 43 | 79 72 623 | | 302) | 4 | .Screw | .Skruv | 5 |
| 1820 | 44 | 96 78 434 | | 301) | 2 | .Stop ring | .Stoppring | 5 |
| 1900 | 47 | 97 98 356 | | | 1 | .Steering wheel | .Ratt | 5 |
| 1940 | 48 | 80 29 944 | | | 1 | .Washer | .Bricka | 5 |
| 1960 | 49 | 80 59 396 | | | 2 | .Screw | .Skruv | 5 |
| 1980 | 50 | *97 65 132* | | NLS - USE 9851619 | 1 | .Cover | .Täcklock | 6 |
| 2040 | 51 | 96 58 584 | | 301) | 1 | .Control | .Reglage | 6 |

103. Ch. --H2014003, --H3011528, --H7020754
104. Ch. H2014004--, H3011529--, H7020755--
144. Ch. H2014675--
301. Driver seat Förarstol
302. Passanger seat Passagerarstol




MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

8B GROUP INDEX

| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

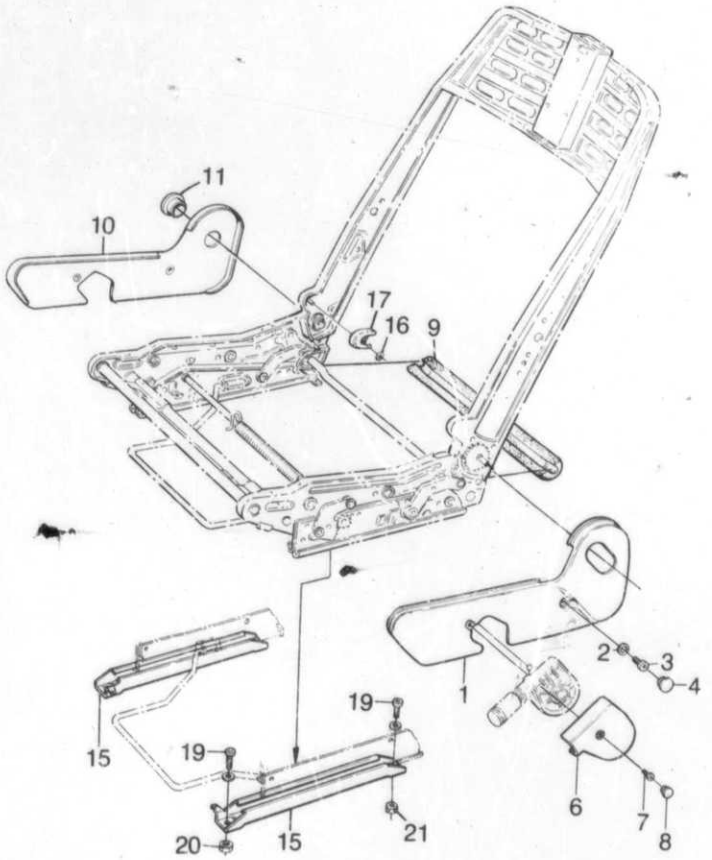


F1949 - 900

| 1485 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | See page 8B-165, 6-G22 | | Seat | Stol | |
| 0020 | 1 | 96 19 081 | | 590,301) | 1 | .Cover | .Kåpa | 6 |
| 0030 | 1 | 96 19 180 | | 590,302) | 1 | .Cover | .Kåpa | 6 |
| 0040 | 1 | 96 19 073 | | 560,301) | 1 | .Cover | .Kåpa | 6 |
| 0050 | 1 | 96 19 172 | | 560,302) | 1 | .Cover | .Kåpa | 6 |
| 0060 | 1 | 96 19 099 | | 580,301) | 1 | .Cover | .Kåpa | 6 |
| 0070 | 1 | 96 19 198 | | 580,302) | 1 | .Cover | .Kåpa | 6 |
| 0100 | 1 | 96 19 107 | | 610,301) | 1 | .Cover | .Kåpa | 6 |
| 0110 | 1 | 96 19 206 | | 610,302) | 1 | .Cover | .Kåpa | 6 |
| 0120 | | | | | | | | |
| 0130 | 2 | 80 29 951 | | | 4 | .Washer | .Bricka | 5 |
| 0140 | 3 | 80 59 537 | | 301) | 4 | .Screw | .Skruv | 5 |
| 0150 | 3 | 79 71 294 | | 302) | 4 | .Screw | .Skruv | 5 |
| 0160 | 4 | 96 19 131 | | 590,301) | 3 | .Cover | .Täcklock | 6 |
| 0170 | 4 | 96 19 131 | | 590,302) | 4 | .Cover | .Täcklock | 6 |
| 0180 | 4 | 96 19 123 | | 560,301) | 3 | .Cover | .Täcklock | 6 |
| 0190 | 4 | 96 19 123 | | 560,302) | 4 | .Cover | .Täcklock | 6 |
| 0200 | 4 | 96 19 149 | | 580,301) | 3 | .Cover | .Täcklock | 6 |
| 0210 | 4 | 96 19 149 | | 580,302) | 4 | .Cover | .Täcklock | 6 |
| 0240 | 4 | 96 19 156 | | 610,301) | 3 | .Cover | .Täcklock | 6 |
| 0250 | 4 | 96 19 156 | | 610,302) | 4 | .Cover | .Täcklock | 6 |
| 0260 | | | | | | | | |
| 0330 | 6 | 96 69 482 | | 590,301) | 1 | .Cover | .Kåpa | 6 |
| 0340 | 6 | 97 75 594 | | 560,301) | 1 | .Cover | .Kåpa | 6 |
| 0350 | 6 | 97 75 610 | | 580,301) | 1 | .Cover | .Kåpa | 6 |
| 0370 | 6 | 98 93 009 | | 610,301) | 1 | .Cover | .Kåpa | 6 |
| 0380 | 7 | 79 22 271 | | 301) | 1 | .Screw | .Skruv | 5 |
| 0390 | 8 | 96 69 524 | | 590,301) | 1 | .Cover | .Täcklock | 6 |
| 0400 | 8 | 97 75 636 | | 560,301) | 1 | .Cover | .Täcklock | 6 |
| 0410 | 8 | 97 75 651 | | 580,301) | 1 | .Cover | .Täcklock | 6 |
| 0430 | 8 | 98 93 033 | | 610,301) | 1 | .Cover | .Täcklock | 6 |
| 0440 | | | | | | | | |
| 0450 | 9 | 97 92 391 | | | 1 | .Crash pad | .Stötskydd | 6 |
| 0460 | 10 | 96 19 230 | | 590,301) | 1 | .Cover | .Kåpa | 6 |
| 0470 | 10 | 96 19 289 | | 590,302) | 1 | .Cover | .Kåpa | 6 |
| 0480 | 10 | 96 19 222 | | 560,301) | 1 | .Cover | .Kåpa | 6 |
| 0490 | 10 | 96 19 271 | | 560,302) | 1 | .Cover | .Kåpa | 6 |
| 0500 | 10 | 96 19 248 | | 580,301) | 1 | .Cover | .Kåpa | 6 |
| 0510 | 10 | 96 19 297 | | 580,302) | 1 | .Cover | .Kåpa | 6 |
| 0540 | 10 | 96 19 255 | | 610,301) | 1 | .Cover | .Kåpa | 6 |
| 0550 | 10 | 96 19 305 | | 610,302) | 1 | .Cover | .Kåpa | 6 |
| 0560 | 11 | 96 80 448 | | 590) | 1 | .Cover | .Täcklock | 6 |
| 0570 | 11 | 96 80 430 | | 560) | 1 | .Cover | .Täcklock | 6 |
| 0580 | 11 | 96 80 455 | | 580) | 1 | .Cover | .Täcklock | 6 |
| 0600 | 11 | 96 80 463 | | 610) | 1 | .Cover | .Täcklock | 6 |
| 0610 | | | | | | | | |
| 0615 | 15 | | | 301,336) | 1 | .Seat rail | .Stolskena | |
| 0620 | 15 | *96 87 625* | S | 302), LH NLS - USE 4048302 | 1 | .Seat rail | .Stolskena | 6 |
| 0630 | 15 | 96 87 633 | S | 302), RH | 1 | .Seat rail | .Stolskena | 6 |
| 0633 | 16 | 40 52 742 | | LH | 1 | .Cover | .Kåpa | 6 |
| 0636 | 16 | 40 52 734 | | RH | 1 | .Cover | .Kåpa | 6 |
| 0638 | 17 | 79 71 518 | | | 2 | .Lock washer | .Spärrbricka | 5 |
| 0640 | 19 | 97 81 204 | | | 8 | Screw | Skruv | 5 |
| 0645 | 20 | 79 77 846 | | | 4 | Cage nut | Korgmutter | 6 |

301. Driver seat Förarstol
302. Passanger seat Passagerarstol
336. Part of pos 1 seat frame Ingår i pos 1 stolram
560. Red Röd
580. Blue Blå
590. Yellow Gul
610. Black Svart



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-H04

## *Front seats Part 3 -1987, Automatic belts*

## *Stolar Del 3 -1987, Passivt bälte*

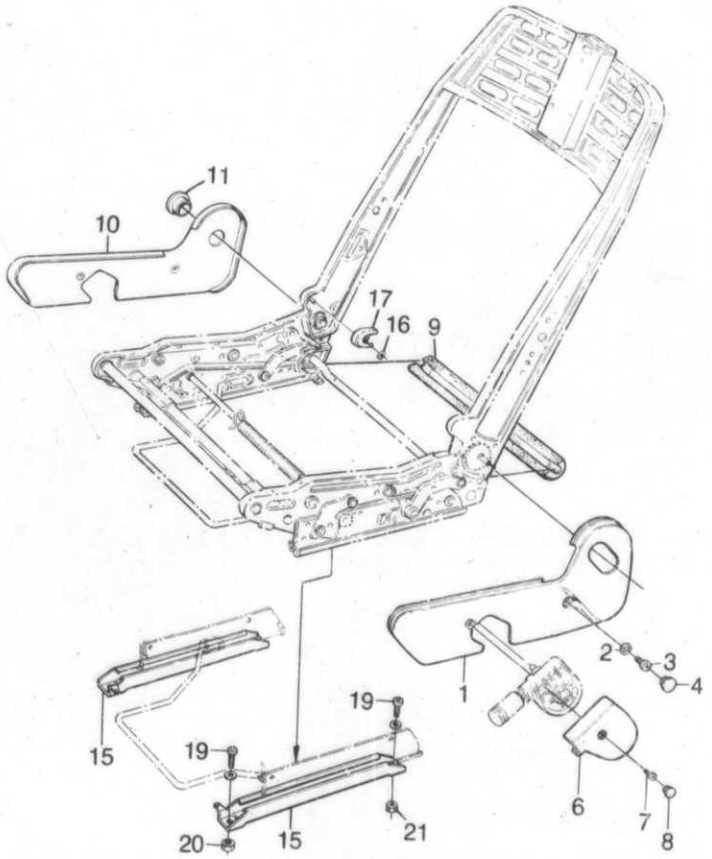


F1949 - 900


| 1485 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0650 | 21 | 96 19 032 | | | 2 | Nut | Mutter | 5 |
| 0651 | | | | | | inner | inre | |
| 0660 | 21 | 96 19 040 | | | 2 | Nut | Mutter | 5 |
| 0661 | | | | | | outer | yttre | |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

8B GROUP INDEX

| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

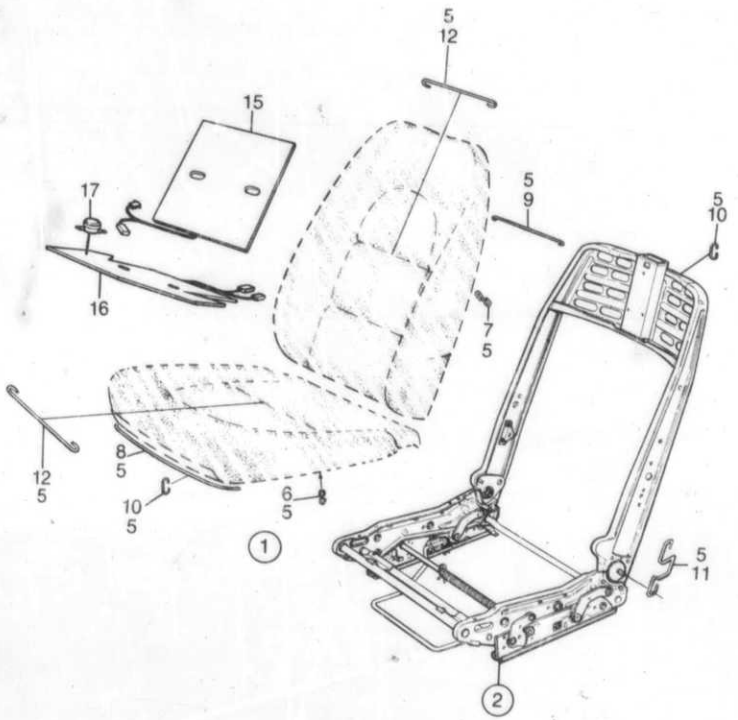


F1950 - 900

| 1490 | Pos | Part No/Art nr | KS | Notes/Anmärkningar | Qty/Antal | Description | Benämning | SL |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 96 98 804 | | 342,14), LH | 1 | Seat | Stol | 6 |
| 0020 | 1 | 96 98 812 | | 342,14), RH | 1 | Seat | Stol | 6 |
| 0022 | 1 | 96 99 331 | | 342,119,139,274), LH | 1 | Seat | Stol | 6 |
| 0024 | 1 | 96 99 349 | | 342,119,139,274), RH | 1 | Seat | Stol | 6 |
| 0030 | 2 | *95 30 064* | | 119,188,324) LH NLS - USE 9531591 | 1 | .Seat frame | .Stolram | 6 |
| 0040 | 2 | 95 31 591 | | 119,189,324) -1988 LH | 1 | .Seat frame | .Stolram | 6 |
| 0045 | 2 | 40 33 312 | | 119,274,500,324)1989- LH | 1 | .Seat frame | .Stolram | 6 |
| 0050 | 2 | *95 30 072* | | 119,188,324) RH NLS - USE 9531617 | 1 | .Seat frame | .Stolram | 6 |
| 0060 | 2 | 95 31 617 | | 119,274,189,324) RH | 1 | .Seat frame | .Stolram | 6 |
| 0070 | 2 | *96 19 313* | | 14,190,324) LH NLS - USE 4033304, 8059560, 9166364, 9618752 | 1 | .Seat frame | .Stolram | 6 |
| 0080 | 2 | *95 40 881* | | 14,191,324) -1988 LH NLS - USE 4033304, 8059560, 9166364, 9618752 | 1 | .Seat frame | .Stolram | 6 |
| 0085 | 2 | 40 33 304 | | 14,500,324) 1989- LH | 1 | .Seat frame | .Stolram | 6 |
| 0090 | 2 | 96 19 321 | | 14,190,324) RH | 1 | .Seat frame | .Stolram | 6 |
| 0100 | 2 | 95 40 899 | | 14,191,324) RH | 1 | .Seat frame | .Stolram | 6 |
| 0105 | 5 | 96 18 737 | | 274,500) 1989- | 1 | .Mounting kit | .Monteringssats | 6 |
| 0106 | | | | See page 8B-223, 6-J08 | | | | |
| 0110 | 5 | 95 30 163 | | 119) | 1 | .Mounting kit | .Monteringssats | 6 |
| 0120 | | | | See page 8B-223, 6-J08 | | | | |
| 0130 | 5 | 95 93 930 | | 14) | 1 | .Mounting kit | .Monteringssats | 6 |
| 0140 | | | | See page 8B-223, 6-J08 | | | | |
| 0150 | 6 | 97 69 225 | | 119,139,274) 20 MM | 2 | ..Hook | ..Krok | 5 |
| 0160 | 7 | 97 69 217 | | 119,139,274) 30 MM | X | ..Hook | ..Krok | 5 |
| 0170 | 8 | 98 79 826 | | 119,139,274) | 2 | ..Cover rod | ..Klädselbåge | 5 |
| 0180 | 9 | 97 81 592 | | | 2 | ..Cover rod | ..Klädselbåge | 5 |
| 0190 | 10 | 94 50 685 | | | X | ..Clamp | ..Klammer | 5 |
| 0200 | 11 | *96 17 952* | | 119,188) LH NLS - USE 9593245 | 1 | ..Attaching brace | ..Fästbygel | 5 |
| 0210 | 11 | *96 17 960* | | 119,188) RH NLS - USE 9593245 | 1 | ..Attaching brace | ..Fästbygel | 5 |
| 0215 | 11 | 95 93 245 | | 119,189) | 2 | ..Attaching brace | ..Fästbygel | 5 |
| 0217 | 12 | 95 84 749 | | 139,274) | 2 | ..Wire rod | ..Trådten | 5 |
| 0220 | 15 | 95 19 877 | | 119,139,274) | 1 | .Heating pad | .Värmedyna | 4 |
| 0235 | 15 | *85 93 030* | | 14,194) NLS - USE 9569955 | 1 | .Heating pad | .Värmedyna | 4 |
| 0237 | 15 | 95 69 955 | | 14,195) | 1 | .Heating pad | .Värmedyna | 4 |
| 0240 | 16 | *95 28 704* | | 100,119,139,274) NLS - USE 4063871 | 1 | .Heating pad | .Värmedyna | 4 |

14. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
100. For seats with adjustable heating För stolar med justerbar värme
119. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
139. For cars with upholstery "VIKTORIA" För bilar med klädsel "VIKTORIA"
188. Driver seat --J3017431, passenger seat --J3017347, for cars with upholstery "HORIZON" Förarstol --J3017431, passagerarstol --J3017347, för bilar med klädsel "HORISONT"
189. Driver seat J3017432--, passenger seat J3017348--, for cars with upholstery "HORIZON" Förarstol J3017432--, passagerarstol J3017348--, för bilar med klädsel "HORISONT"
190. Driver seat --J3018249, passenger seat --J3017750, for cars with upholstery "CONTOUR" Förarstol --J3018249, passagerarstol --J3017750, för bilar med klädsel "CONTOUR"
191. Driver seat J3018250--, passenger seat J3017751--, for cars with upholstery "CONTOUR" Förarstol J3018250--, passagerarstol J3017751--, för bilar med klädsel "CONTOUR"
194. Ch. --J3018393, --J7022867
195. Ch. J3018394--, J7022868--
274. For cars with upholstery "PARALLEL" För bilar med klädsel "PARALLELL"
324. See following sections for contents Se följande avsnitt för ingående artiklar
342. State upholstery colour, ch No and the type of heating pad (thermostat or rheostat). Uppge klädselfärg, ch nr och vilken typ av värmedyna (termostat eller reostat).
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX

| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-H08

## Front seats Part 1
## 1988-, Automatic belt

## Stolar Del 1
## 1988-, Passivt bälte

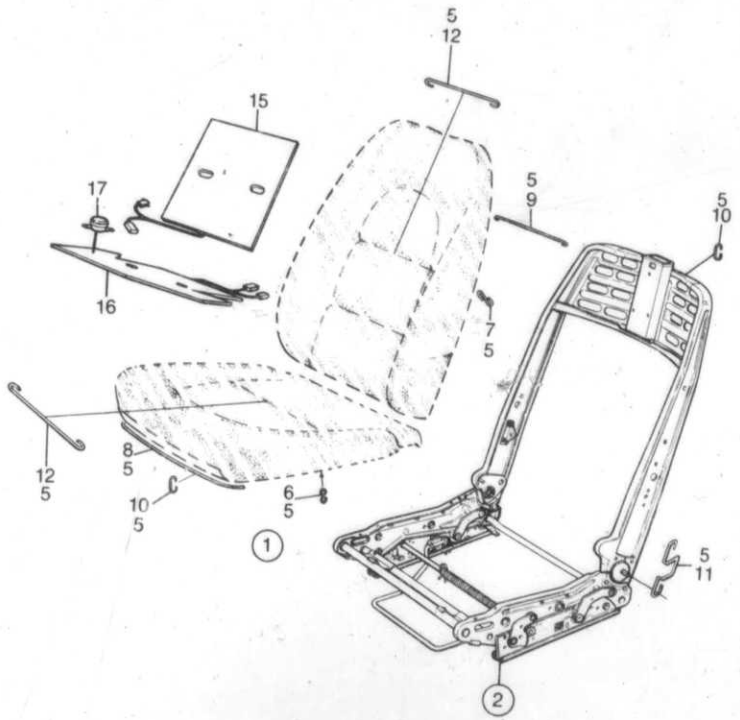


F1950 - 900

| 1490 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0255 | 16 | *95 27 706* | | 100,14) NLS - USE 4063855 | 1 | .Heating pad | .Värmedyna | 4 |
| 0260 | 16 | *95 28 712* | | 119,139,274) NLS - USE 4063863 | 1 | .Heating pad | .Värmedyna | 4 |
| 0275 | 16 | *95 27 698* | | 14) NLS - USE 4063848 | 1 | .Heating pad | .Värmedyna | 4 |
| 0280 | 17 | 95 24 745 | | 302) | 1 | ..Thermostat | ..Termostat | 3 |
| 0290 | | 96 18 729 | | See page 8B-223, 6-J08 | 1 | .Mounting kit | .Monteringssats | 6 |
| 0300 | | 96 18 752 | | See page 8B-229, 6-J14 | 1 | .Mounting kit | .Monteringssats | 6 |

14. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
100. For seats with adjustable heating För stolar med justerbar värme
119. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
139. For cars with upholstery "VIKTORIA" För bilar med klädsel "VIKTORIA"
274. For cars with upholstery "PARALLEL" För bilar med klädsel "PARALLELL"
302. Passanger seat Passagerarstol



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-H10

## Front seats Part 2
## 1988-, Automatic belt

## Stolar Del 2
## 1988-, Passivt bälte

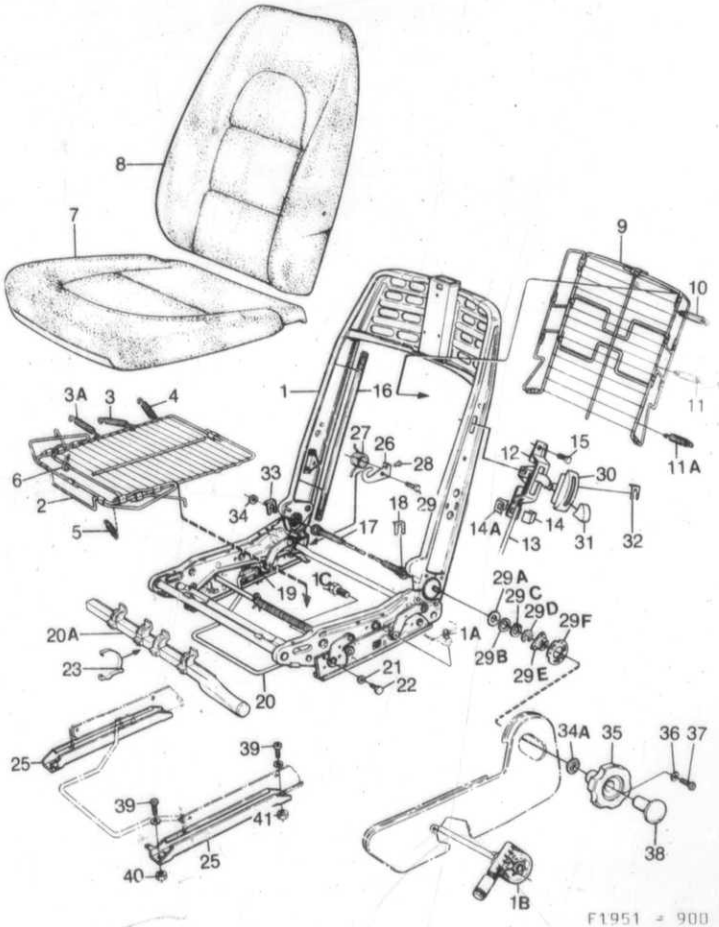


F1951 - 900

| 1495 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | See page 8B-173, 6-H06 | | Seat | Stol | |
| 0020 | | | | See page 8B-173, 6-H06 | | .Seat frame | .Stolram | |
| 0030 | 1 | 98 74 785 | | 188,190) LH | 1 | ..Seat frame | ..Stolram | 6 |
| 0035 | 1 | 95 35 824 | | 189,191) LH | 1 | ..Seat frame | ..Stolram | 6 |
| 0040 | 1 | 98 76 483 | | 188,190) RH | 1 | ..Seat frame | ..Stolram | 6 |
| 0045 | 1 | 95 35 816 | | 189,191) RH | 1 | ..Seat frame | ..Stolram | 6 |
| 0046 | 1A | 96 78 434 | | 301) | 2 | ...Stop ring | ...Stoppring | 5 |
| 0047 | 1B | 96 58 584 | | 301) | 1 | ...Control | ...Reglage | 6 |
| 0048 | 1C | 80 19 713 | | 189,191) | 2 | ...Screw | ...Skruv | 5 |
| 0050 | 2 | 96 73 450 | | -1988 | 1 | ..Wire matting | ..Resårmatta | 6 |
| 0062 | 2 | 96 73 179 | | 301), 1989- | 1 | ..Wire matting | ..Resårmatta | 6 |
| 0066 | 2 | 96 73 450 | | 302), 1989- | 1 | ..Wire matting | ..Resårmatta | 6 |
| 0070 | 3 | 96 73 443 | | | 2 | ..Spring | ..Fjäder | 6 |
| 0075 | 3A | 96 73 146 | | | 4 | ..Spring | ..Fjäder | 6 |
| 0080 | 4 | 96 73 435 | | | 2 | ..Spring | ..Fjäder | 6 |
| 0090 | 5 | 97 58 947 | | 301), 1989- | 2 | ..Spring | ..Fjäder | 6 |
| 0100 | 6 | 79 71 872 | | | 2 | ..Tensioning band | ..Spännband | 5 |
| 0110 | 7 | *96 96 618* | | 119,139,274) NLS - USE 4416525 | 1 | ..Seat cushion | ..Sittdyna | 6 |
| 0115 | 7 | 96 18 695 | | 14) | 1 | ..Seat cushion | ..Sittdyna | 6 |
| 0120 | 8 | *96 96 600* | | 119,139,274) NLS - USE 4292934 | 1 | ..Backrest cushion | ..Ryggdyna | 6 |
| 0125 | 8 | 96 18 687 | | 14) | 1 | ..Backrest cushion | ..Ryggdyna | 6 |
| 0130 | 9 | 96 97 525 | | | 1 | ..Wire matting | ..Resårmatta | 6 |
| 0150 | 10 | 97 59 069 | | | 2 | ..Spring | ..Fjäder | 6 |
| 0160 | 11 | 97 59 077 | | | 2 | ..Spring | ..Fjäder | 6 |
| 0165 | 11A | 97 71 205 | | | 2 | ..Spring | ..Fjäder | 6 |
| 0170 | 12 | *96 18 836* | | NLS - USE 4313607 | 1 | ..Release mechanism | ..Frigörningsmekanism | 6 |
| 0180 | 13 | 98 74 504 | | | 1 | ..Cable | ..Wire | 5 |
| 0190 | 14 | 96 11 799 | | 188,190) | 4 | ..Cable holder | ..Kabelhållare | 5 |
| 0192 | 14 | 95 42 077 | | 189,191) | 4 | ..Cable holder | ..Kabelhållare | 5 |
| 0195 | 14A | 95 30 262 | | 1988-,188,190) | 4 | ..Clamp | ..Klämma | 5 |
| 0200 | 15 | 79 74 330 | | | 2 | ..Screw | ..Skruv | 5 |
| 0210 | 16 | 96 71 835 | | -1988 | 2 | ..Protecting moulding | ..Skyddslist | 6 |
| 0215 | 16 | 95 41 533 | | 1989- | 2 | ..Protecting moulding | ..Skyddslist | 6 |
| 0220 | 17 | 96 80 414 | | 188,190) | 1 | ..Shaft | ..Axel | 6 |
| 0225 | 17 | 95 38 687 | | 189,191) | 1 | ..Shaft | ..Axel | 6 |
| 0230 | 18 | 97 77 327 | | | 2 | ..E-circlip | ..Spårry tare | 5 |
| 0240 | 19 | 73 98 282 | | | 2 | ..Washer | ..Bricka | 5 |
| 0250 | 20 | 96 59 012 | | 301) | 1 | ..Shaft | ..Axel | 6 |
| 0270 | 20 | 96 59 020 | S | 302) | 1 | ..Shaft | ..Axel | 6 |
| 0290 | 20A | 96 57 131 | | -1988 | 1 | ..Camshaft | ..Kamaxel | 6 |
| 0295 | 20A | 96 60 853 | | 301), 1989- | 1 | ..Camshaft | ..Kamaxel | 6 |
| 0297 | 20A | 96 57 131 | | 302), 1989- | 1 | ..Camshaft | ..Kamaxel | 6 |
| 0300 | 21 | 79 16 497 | | 302) | 4 | ..Washer | ..Bricka | 5 |
| 0310 | 22 | 79 72 623 | | 302) | 4 | ..Screw | ..Skruv | 5 |
| 0315 | 23 | 97 67 518 | | 301) 1989- | 2 | ..Clamp | ..Klämma | 5 |
| 0330 | 25 | | | 301,336) | 1 | ..Seat rail | ..Stolskena | |

14. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
119. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
139. For cars with upholstery "VIKTORIA" För bilar med klädsel "VIKTORIA"
188. Driver seat --J3017431, passenger seat --J3017347, for cars with upholstery "HORIZON" Förarstol --J3017431, passagerarstol --J3017347, för bilar med klädsel "HORISONT"
189. Driver seat J3017432-, passenger seat J3017348-, for cars with upholstery "HORIZON" Förarstol J3017432-, passagerarstol J3017348-, för bilar med klädsel "HORISONT"
190. Driver seat --J3018249, passenger seat --J3017750, for cars with upholstery "CONTOUR" Förarstol --J3018249, passagerarstol --J3017750, för bilar med klädsel "CONTOUR"
191. Driver seat J3018250-, passenger seat J3017751-, for cars with upholstery "CONTOUR" Förarstol J3018250-, passagerarstol J3017751-, för bilar med klädsel "CONTOUR"
274. For cars with upholstery "PARALLEL" För bilar med klädsel "PARALLELL"
301. Driver seat Förarstol
302. Passanger seat Passagerarstol
336. Part of pos 1 seat frame Ingår i pos 1 stolram



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-H12

## Front seats Part 2
## 1988-, Automatic belt

## Stolar Del 2
## 1988-, Passivt bälte

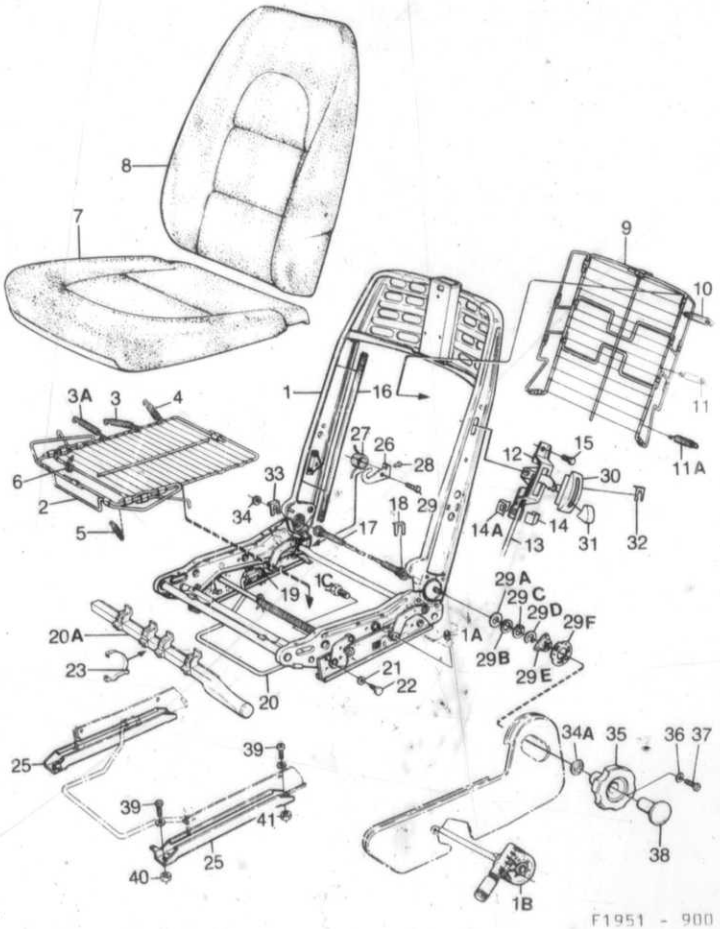


F1951 - 900

| 1495 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0340 | 25 | *96 87 625* | | 302), -1988, LH NLS - USE 4048302 | 1 | ..Seat rail | ..Stolskena | 6 |
| 0350 | 25 | 96 87 633 | | 302), -1988, RH | 1 | ..Seat rail | ..Stolskena | 6 |
| 0351 | 25 | 40 48 302 | | 302), 1989-, LH | 1 | ..Seat rail | ..Stolskena | 6 |
| 0352 | 25 | 40 48 310 | | 302), 1989-, RH | 1 | ..Seat rail | ..Stolskena | 6 |
| 0360 | 26 | 95 31 997 | | 188,190) LH | 1 | ..Attaching brace | ..Fästbygel | 5 |
| 0370 | 26 | 95 32 003 | | 188,190) RH | 1 | ..Attaching brace | ..Fästbygel | 5 |
| 0380 | 27 | 95 32 011 | | 188,190) LH | 1 | ..Spring | ..Fjäder | 6 |
| 0390 | 27 | 95 32 029 | | 188,190) RH | 1 | ..Spring | ..Fjäder | 6 |
| 0400 | 28 | 79 75 402 | | 188,190) | 2 | ..Rivet | ..Nit | 5 |
| 0410 | 29 | 79 72 607 | | 188,190) | 1 | ..Screw | ..Skruv | 5 |
| 0411 | 29A | 95 86 967 | | 189,191) | 1 | ..Washer | ..Bricka | 5 |
| 0412 | 29B | 95 86 975 | | 189,191) | 1 | ..Ring | ..Ring | 5 |
| 0413 | 29C | 95 86 983 | | 189,191) | 1 | ..Washer | ..Bricka | 5 |
| 0414 | 29D | 79 36 016 | | 189,191) | 1 | ..E-circlip | ..Spärrytter | 5 |
| 0415 | 29E | 95 85 613 | | 189,191) | 1 | ..Brake | ..Broms | 6 |
| 0416 | 29F | 95 85 621 | | 189,191), -1988 | 1 | ..Spring clamp | ..Fjäderklämma | 6 |
| 0417 | 29F | 40 43 394 | | 1989- | 1 | ..Spring clamp | ..Fjäderklämma | 6 |
| 0420 | 30 | 98 74 801 | | | 1 | .Slide | .Slid | 6 |
| 0430 | 31 | 98 74 819 | | | 1 | .Knob | .Knopp | 3 |
| 0440 | 32 | 96 86 841 | | | 1 | .Clamp | .Klämma | 5 |
| 0450 | 33 | *79 15 077* | | NLS - USE 7963143 | 1 | .E-circlip | .Spärrytter | 5 |
| 0460 | 34 | 96 18 232 | | | 1 | .Spacer | .Distans | 5 |
| 0465 | 34A | 95 89 045 | | 189,191) | 1 | .Reinforcement | .Förstärkning | 5 |
| 0470 | 35 | 97 98 356 | | 188,190) | 1 | .Steering wheel | .Ratt | 5 |
| 0475 | 35 | 95 46 946 | | 189,191) | 1 | .Hand wheel | .Ratt | 5 |
| 0480 | 36 | 80 29 944 | | 188,190) | 1 | .Washer | .Bricka | 5 |
| 0485 | 36 | 80 29 951 | | 189,191) | 1 | .Washer | .Bricka | 5 |
| 0490 | 37 | 80 59 396 | | 188,190) | 1 | .Screw | .Skruv | 5 |
| 0495 | 37 | 80 59 560 | | 189,191) | 1 | .Screw | .Skruv | 5 |
| 0500 | 38 | *97 65 132* | | 188,190) NLS - USE 9851619 | 1 | .Cover | .Täcklock | 6 |
| 0505 | 38 | 98 51 619 | | 189,191) | 1 | .Cover | .Täcklock | 6 |
| 0510 | 39 | 97 81 204 | | | 4 | .Screw | .Skruv | 5 |
| 0515 | 40 | 79 77 846 | | | 2 | .Cage nut | .Korgmutter | 6 |
| 0520 | 41 | 96 19 032 | | | 1 | .Nut inner | .Mutter inre | 5 |
| 0530 | 41 | 96 19 040 | | | 1 | .Nut outer | .Mutter yttre | 5 |

188. Driver seat --J3017431, passenger seat --J3017347, for cars with upholstery "HORIZON" Förarstol --J3017431, passagerarstol --J3017347, för bilar med klädsel "HORISONT"
189. Driver seat J3017432--, passenger seat J3017348--, for cars with upholstery "HORIZON" Förarstol J3017432--, passagerarstol J3017348--, för bilar med klädsel "HORISONT"
190. Driver seat --J3018249, passenger seat --J3017750, for cars with upholstery "CONTOUR" Förarstol --J3018249, passagerarstol --J3017750, för bilar med klädsel "CONTOUR"
191. Driver seat J3018250--, passenger seat J3017751--, for cars with upholstery "CONTOUR" Förarstol J3018250--, passagerarstol J3017751--, för bilar med klädsel "CONTOUR"
302. Passanger seat Passagerarstol



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-H14

## Front seats Part 3
## 1988-, Automatic belt

## Stolar Del 3
## 1988-, Passivt bälte

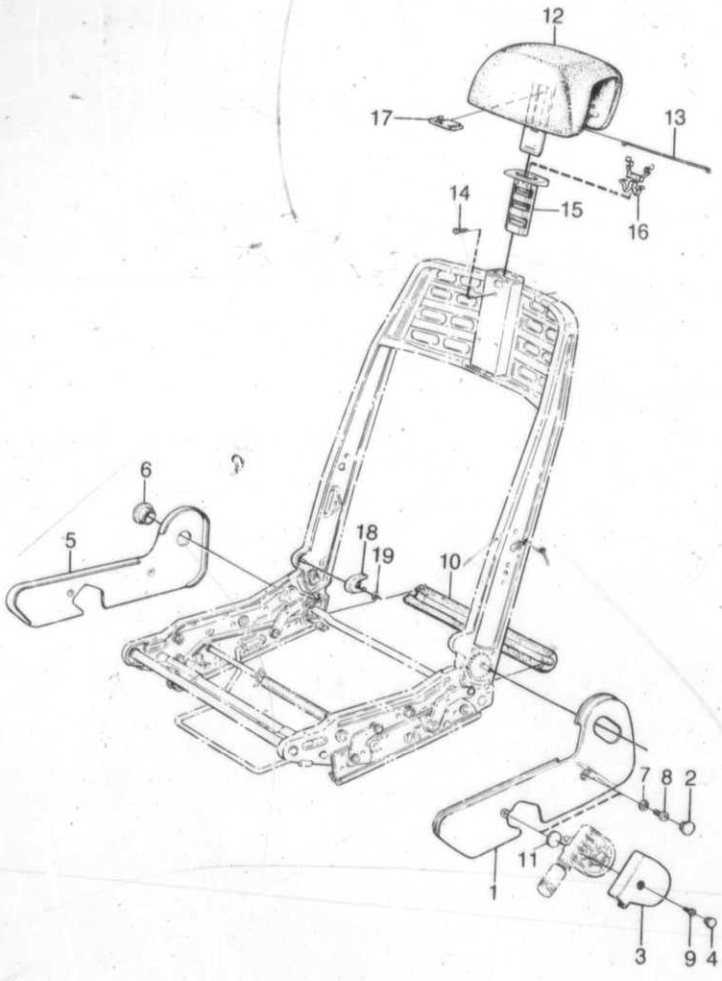


F1952 - 900

| 1500 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | | | | See page 8B-173, 6-H06 | | Seat | Stol | |
| 0020 | 1 | 96 19 081 | | 590,301), -1988 | 1 | .Cover | .Kåpa | 6 |
| 0025 | 1 | 40 34 518 | | 590,301), 1989- | 1 | .Cover | .Kåpa | 6 |
| 0030 | 1 | 96 19 180 | | 590,302), -1988 | 1 | .Cover | .Kåpa | 6 |
| 0035 | 1 | 95 35 345 | | 590,302), 1989- | 1 | .Cover | .Kåpa | 6 |
| 0040 | 1 | 96 19 073 | | 560,301), -1988 | 1 | .Cover | .Kåpa | 6 |
| 0045 | 1 | 40 34 492 | | 560,301), 1989- | 1 | .Cover | .Kåpa | 6 |
| 0050 | 1 | 96 19 172 | | 560,302) | 1 | .Cover | .Kåpa | 6 |
| 0060 | 1 | 96 81 925 | | 580,301), -1988 | 1 | .Cover | .Kåpa | 6 |
| 0065 | 1 | 40 34 526 | | 580,301), 1989- | 1 | .Cover | .Kåpa | 6 |
| 0070 | 1 | 96 81 933 | | 580,302) | 1 | .Cover | .Kåpa | 6 |
| 0080 | 1 | 96 19 107 | | 610,301), -1988 | 1 | .Cover | .Kåpa | 6 |
| 0085 | 1 | 40 34 500 | | 610,301), 1989- | 1 | .Cover | .Kåpa | 6 |
| 0090 | 1 | 96 19 206 | | 610,302) | 1 | .Cover | .Kåpa | 6 |
| 0100 | | | | | | | | |
| 0110 | 2 | 96 19 131 | | 590,301), -1988 | 3 | .Cover | .Täcklock | 6 |
| 0115 | 2 | 95 35 311 | | 590,301), 1989- | 3 | .Cover | .Täcklock | 6 |
| 0120 | 2 | 96 19 131 | | 590,302), -1988 | 4 | .Cover | .Täcklock | 6 |
| 0125 | 2 | 95 35 311 | | 590,302), 1989- | 4 | .Cover | .Täcklock | 6 |
| 0130 | 2 | 96 19 123 | | 560,301) | 3 | .Cover | .Täcklock | 6 |
| 0140 | 2 | 96 19 123 | | 560,302) | 4 | .Cover | .Täcklock | 6 |
| 0150 | 2 | 96 81 974 | | 580,301) | 3 | .Cover | .Täcklock | 6 |
| 0160 | 2 | 96 81 974 | | 580,302) | 4 | .Cover | .Täcklock | 6 |
| 0170 | 2 | 96 19 156 | | 610,301) | 3 | .Cover | .Täcklock | 6 |
| 0180 | 2 | 96 19 156 | | 610,302) | 4 | .Cover | .Täcklock | 6 |
| 0190 | | | | | | | | |
| 0200 | 3 | 96 69 482 | | 590,301,169) | 1 | .Cover | .Kåpa | 6 |
| 0210 | 3 | 97 75 594 | | 560,301,169) | 1 | .Cover | .Kåpa | 6 |
| 0220 | 3 | 96 76 925 | | 580,301,169) | 1 | .Cover | .Kåpa | 6 |
| 0230 | 3 | 98 93 009 | | 610,301,169) | 1 | .Cover | .Kåpa | 6 |
| 0235 | 3 | 98 93 009 | | 610,301,170) | 1 | .Cover | .Kåpa | 6 |
| 0240 | 4 | 96 69 524 | | 590,301,169) | 1 | .Cover | .Täcklock | 6 |
| 0250 | 4 | 97 75 686 | | 560,301,169) | 1 | .Cover | .Täcklock | 6 |
| 0260 | 4 | 96 76 966 | | 580,301,169) | 1 | .Cover | .Täcklock | 6 |
| 0270 | 4 | 98 93 033 | | 610,301,169) | 1 | .Cover | .Täcklock | 6 |
| 0275 | 4 | 98 93 033 | | 610,301,170) | 1 | .Cover | .Täcklock | 6 |
| 0280 | | | | | | | | |
| 0290 | 5 | 96 19 230 | | 590,301), -1988 | 1 | .Cover | .Kåpa | 6 |
| 0295 | 5 | 95 35 352 | | 590,301), 1989- | 1 | .Cover | .Kåpa | 6 |
| 0300 | 5 | 96 19 289 | | 590,302), -1988 | 1 | .Cover | .Kåpa | 6 |
| 0305 | 5 | 95 35 360 | | 590,302), 1989- | 1 | .Cover | .Kåpa | 6 |
| 0310 | 5 | 96 19 222 | | 560,301) | 1 | .Cover | .Kåpa | 6 |
| 0320 | 5 | 96 19 271 | | 560,302) | 1 | .Cover | .Kåpa | 6 |
| 0330 | 5 | 96 81 941 | | 580,301) | 1 | .Cover | .Kåpa | 6 |
| 0340 | 5 | 96 81 958 | | 580,302) | 1 | .Cover | .Kåpa | 6 |
| 0350 | 5 | 96 19 255 | | 610,301) | 1 | .Cover | .Kåpa | 6 |
| 0360 | 5 | 96 19 305 | | 610,302) | 1 | .Cover | .Kåpa | 6 |
| 0370 | 6 | 96 80 448 | | 590), -1988 | 1 | .Cover | .Täcklock | 6 |
| 0375 | 6 | 95 35 303 | | 590), 1989- | 1 | .Cover | .Täcklock | 6 |
| 0380 | 6 | 96 80 430 | | 560) | 1 | .Cover | .Täcklock | 6 |
| 0390 | 6 | 96 81 966 | | 580) | 1 | .Cover | .Täcklock | 6 |
| 0400 | 6 | 96 80 463 | | 610) | 1 | .Cover | .Täcklock | 6 |
| 0410 | | | | | | | | |
| 0420 | 7 | 80 29 951 | | | 4 | .Washer | .Bricka | 5 |
| 0430 | 8 | 80 59 537 | | 301) | 4 | .Screw | .Skruv | 5 |

169. Ch. -J3011551
170. Ch. J3011552-
301. Driver seat Förarstol
302. Passanger seat Passagerarstol
560. Red Röd
580. Blue Blå
590. Yellow Gul
610. Black Svart



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-H16

## Front seats Part 3
## 1988-, Automatic belt

## Stolar Del 3
## 1988-, Passivt bälte

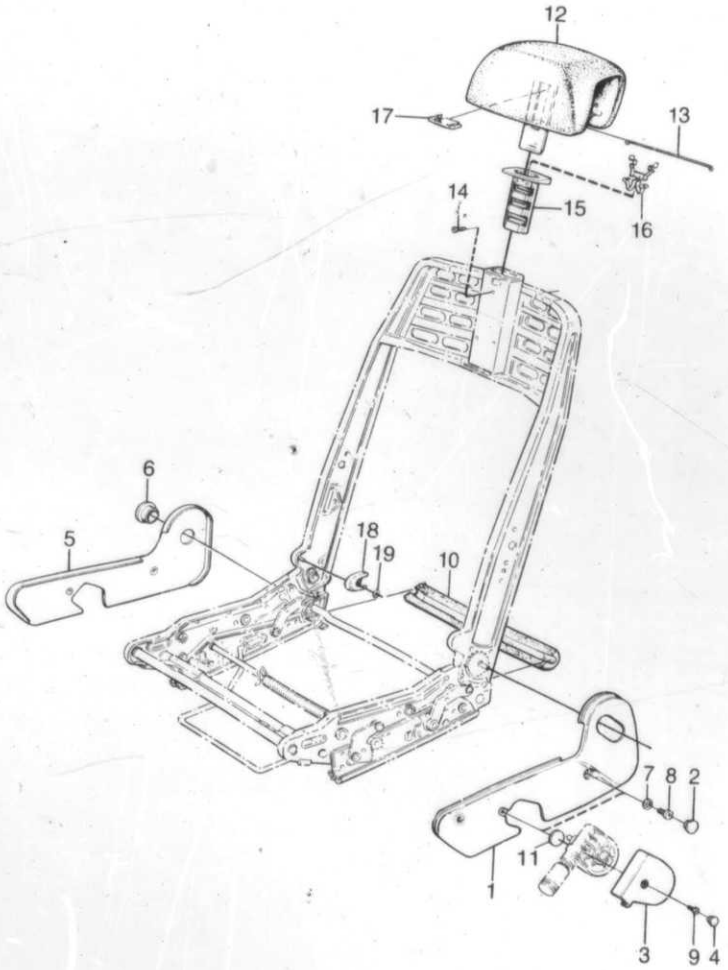


F1952 - 900

| 1500 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0440 | 8 | 79 71 294 | | 302) | 4 | . Screw | . Skruv | 5 |
| 0450 | 9 | 79 22 271 | | 301) | 1 | . Screw | . Skruv | 5 |
| 0460 | 10 | 97 92 391 | | | 1 | . Crash pad | . Stötskydd | 6 |
| 0470 | 11 | 96 69 458 | | 590,301), -1988 | 1 | . Cover | . Täcklock | 3 |
| 0475 | 11 | 95 80 408 | | 590,301), 1989- | 1 | . Cover | . Täcklock | 3 |
| 0480 | 11 | 98 92 647 | | 600,301) | 1 | . Cover | . Täcklock | 3 |
| 0490 | 11 | 97 95 006 | | 560,301) | 1 | . Cover | . Täcklock | 3 |
| 0500 | 11 | *96 76 891* | | 580,301) NLS - USE 9892654 | 1 | . Cover | . Täcklock | 3 |
| 0510 | 11 | 98 92 654 | | 610,301) | 1 | . Cover | . Täcklock | 3 |
| 0520 | 12 | *97 67 815* | | -1988 NLS - USE 9547688 | 1 | . Head restraint | . Nackstöd | 6 |
| 0525 | 12 | *95 42 168* | | 500,274) 1989- NLS | 1 | . Head restraint | . Nackstöd | 6 |
| 0527 | 12 | 95 47 688 | | 500) 1989- | 1 | . Head restraint | . Nackstöd | 6 |
| 0530 | 13 | 94 59 868 | | | 2 | . Wire rod | . Trådten | 6 |
| 0540 | 14 | 79 22 396 | | | 1 | . Screw | . Skruv | 5 |
| 0550 | 15 | 95 71 696 | | 260) | 1 | . Sleeve | . Hylsa | 5 |
| 0555 | 15 | 40 31 563 | | 261) | 1 | . Sleeve | . Hylsa | 5 |
| 0560 | 16 | 97 96 848 | | | 1 | . Locking spring | . Spärrfjäder | 5 |
| 0570 | 17 | 95 45 104 | | 1989- | 1 | . Clamp | . Klämma | 5 |
| 0580 | 18 | 40 52 742 | | LH | 1 | . Cover | . Kåpa | 6 |
| 0590 | 18 | 40 52 734 | | RH | 1 | . Cover | . Kåpa | 6 |
| 0600 | 19 | 79 71 518 | | | 2 | . Lock washer | . Spärrbricka | 5 |

260. Ch. --K3006475, --K7006131.
261. Ch. K3006476 -, K7006132--.
274. For cars with upholstery "PARALLEL" För bilar med klädsel "PARALLELL"
301. Driver seat Förarstol
302. Passanger seat Passagerarstol
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
580. Blue Blå
590. Yellow Gul
600. Brown Brun
610. Black Svart




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-H18 Rear seat / Seat cushion — Baksäte / Sittdyna

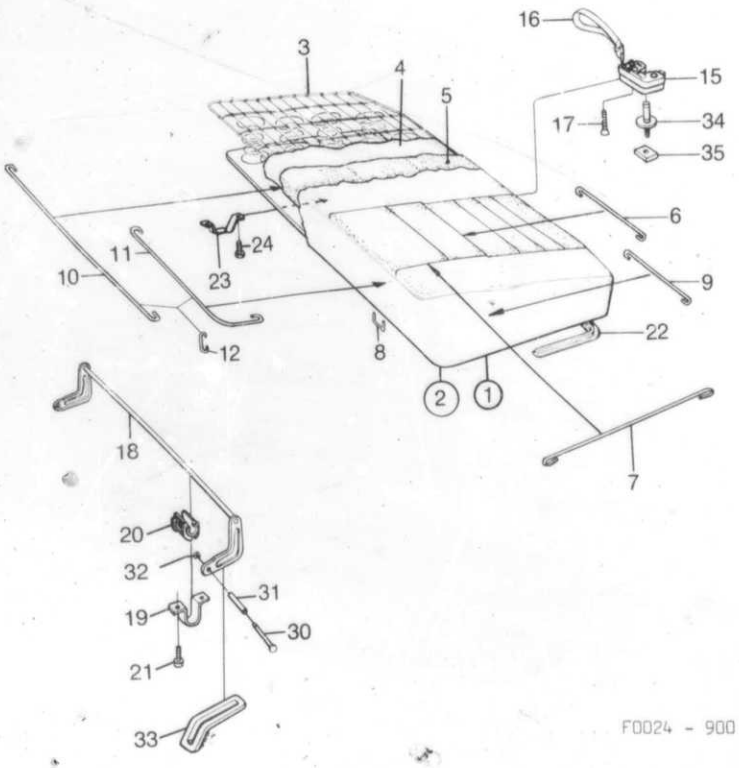


| 1515 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 97 09 494 | | 117,139,274) 2SN, 3CK | 1 | Seat cushion | Sittdyna | 6 |
| 0020 | 1 | 97 09 502 | | 117,139,274) 4SN, 5CK | 1 | Seat cushion | Sittdyna | 6 |
| 0030 | 1 | 98 26 512 | | 117,13) 2SN, 3CK | 1 | Seat cushion | Sittdyna | 6 |
| 0040 | 1 | 98 26 520 | | 117,13) 4SN, 5CK | 1 | Seat cushion | Sittdyna | 6 |
| 0050 | 1 | 96 99 232 | | 118,119) 2SN, 3CK | 1 | Seat cushion | Sittdyna | 6 |
| 0060 | 1 | 96 99 240 | | 118,119) 4SN, 5CK | 1 | Seat cushion | Sittdyna | 6 |
| 0070 | 1 | 97 24 626 | | 118,14) 2SN, 3CK | 1 | Seat cushion | Sittdyna | 6 |
| 0080 | 1 | 97 24 634 | | 118,14) 4SN, 5CK | 1 | Seat cushion | Sittdyna | 6 |
| 0090 | 1 | 98 17 800 | | 117) CD | 1 | Seat cushion | Sittdyna | 7 |
| 0100 | 1 | 98 17 818 | | 2,117) CD | 1 | Seat cushion | Sittdyna | 7 |
| 0101 | | | | | | | | |
| 0104 | 2 | 96 14 629 | | 139,274,303) 2SN, 3CK | 1 | .Seat cushion | .Sittdyna | 6 |
| 0106 | 2 | 96 14 637 | | 139,274,303) 4SN, 5CK | 1 | .Seat cushion | .Sittdyna | 6 |
| 0110 | 2 | 96 88 813 | | 119,303) 2SN, 3CK | 1 | .Seat cushion | .Sittdyna | 6 |
| 0130 | 2 | 96 88 821 | | 119,303) 4SN, 5CK | 1 | .Seat cushion | .Sittdyna | 6 |
| 0150 | 3 | *97 19 816* | | 139) -1988, 2SN, 3CK NLS - USE 4053815 | 1 | ..Spring housing | ..Resårhus | 6 |
| 0150 | | | | | | | | |
| 0155 | 3 | 96 87 690 | | 274,500) 1989-, 2SN, 3CK | 1 | ..Spring housing | ..Resårhus | 6 |
| 0160 | 3 | *97 19 824* | | 139) -1988, 4SN, 5CK NLS - USE 4053823 | 1 | ..Spring housing | ..Resårhus | 6 |
| 0160 | | | | | | | | |
| 0165 | 3 | *96 87 682* | | 274,500) 1989-, 4SN, 5CK NLS - USE 4053823 | 1 | ..Spring housing | ..Resårhus | 6 |
| 0165 | | | | | | | | |
| 0170 | 3 | 96 87 690 | | 119) 2SN, 3CK | 1 | ..Spring housing | ..Resårhus | 6 |
| 0180 | 3 | *96 87 682* | | 119) 4SN, 5CK NLS - USE 4053823 | 1 | ..Spring housing | ..Resårhus | 6 |
| 0180 | | | | | | | | |
| 0190 | 3 | 97 19 832 | | 14) 2SN, 3CK | 1 | ..Spring housing | ..Resårhus | 6 |
| 0200 | 3 | 97 19 840 | | 14) 4SN, 5CK | 1 | ..Spring housing | ..Resårhus | 6 |
| 0210 | 3 | 98 18 204 | | CD | 1 | ..Spring housing | ..Resårhus | 7 |
| 0220 | 4 | 96 88 540 | | 119,139,274) | 1 | ..Padding | ..Vadd | 5 |
| 0223 | 5 | 94 71 178 | | 139,274) 2SN, 3CK | 1 | ..Foam plastic cushion | ..Skumplastdyna | 6 |
| 0225 | 5 | 94 71 210 | | 139,274) 4SN, 5CK | 1 | ..Foam plastic cushion | ..Skumplastdyna | 6 |
| 0230 | 5 | 97 21 523 | | 14) 2SN, 3CK | 1 | ..Foam plastic cushion | ..Skumplastdyna | 6 |
| 0240 | 5 | 97 21 531 | | 14) 4SN, 5CK | 1 | ..Foam plastic cushion | ..Skumplastdyna | 6 |
| 0250 | 5 | 96 88 482 | | 119) 2SN, 3CK | 1 | ..Foam plastic cushion | ..Skumplastdyna | 6 |
| 0260 | 5 | 96 88 516 | | 119) 4SN, 5CK | 1 | ..Foam plastic cushion | ..Skumplastdyna | 6 |
| 0270 | 5 | 97 21 523 | | CD | 1 | ..Foam plastic cushion | ..Skumplastdyna | 6 |
| 0271 | 6 | 97 21 481 | | 119) | 2 | ..Wire rod | ..Trådten | 5 |
| 0272 | 7 | 95 84 731 | | 119) | 4 | ..Wire rod | ..Trådten | 5 |
| 0273 | 8 | 84 38 467 | | | X | ..Staple | ..Häftklammer | 5 |
| 0274 | 9 | 94 16 181 | | 139,274) | 2 | ..Wire rod | ..Trådten | 5 |
| 0275 | 10 | 94 75 955 | | 139,274) 2SN, 3CK | 1 | ..Wire rod | ..Trådten | 5 |
| 0276 | 11 | 94 21 314 | | 139,274) 4SN, 5CK | 2 | ..Wire rod | ..Trådten | 5 |
| 0277 | 12 | 94 50 685 | | 139,274) | X | ..Clamp | ..Klammer | 5 |
| 0280 | 15 | 97 35 861 | | | 1 | .Lock | .Lås | 5 |
| 0290 | 16 | 97 36 075 | | | 1 | .Strip | .Band | 5 |
| 0300 | 17 | 79 73 720 | | | 2 | .Screw | .Skruv | 5 |
| 0310 | 18 | 97 19 717 | | | 1 | .Link arm | .Länkarm | 6 |
| 0320 | 19 | *97 19 790* | | 297) NLS - USE 4048260, 4048278 | 2 | .Cap | .Överfall | 6 |
| 0320 | | | | | | | | |
| 0322 | 19 | 40 48 278 | | 298) | 2 | .Cap | .Överfall | 6 |

2. For cars with leather covers. För bilar med läderklädsel.
13. For cars with upholstery "BLOCK PATTERN" För bilar med klädsel "BLOCK MÖNSTER"
14. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
117. State upholstery colour and year model Uppge klädselfärg och årsmodell
118. State upholstery colour and ch No Uppge klädselfärg och ch nr
119. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
139. For cars with upholstery "VIKTORIA" För bilar med klädsel "VIKTORIA"
274. For cars with upholstery "PARALLEL" För bilar med klädsel "PARALLELL"
297. Ch. -K3024317, -K7034144
298. Ch. K7034144-.
303. Without upholstery Utan klädsel
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-H20

## Rear seat
## Seat cushion

## Baksäte
## Sittdyna

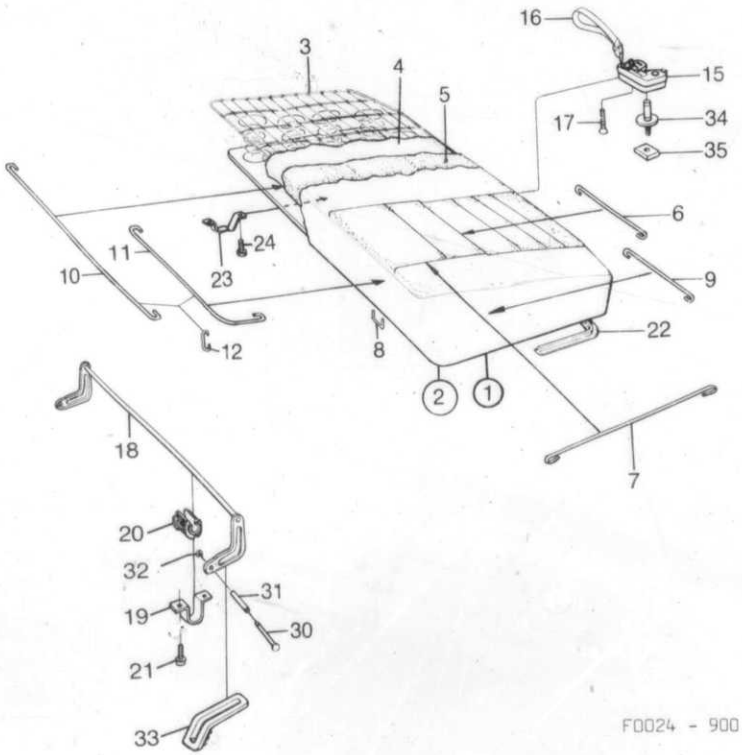


F0024 - 900

| 1515 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0330 20 | *97 19 808* | | 297) NLS - USE 4048260, 4048278 | 2 | .Bushing | .Bussning | 6 |
| 0332 20 | 40 48 260 | | 298) | 2 | .Bushing | .Bussning | 6 |
| 0340 21 | 79 77 283 | | | 4 | .Screw | .Skruv | 5 |
| 0350 22 | 94 75 393 | | | 1 | .Strip | .List | |
| 0360 23 | 94 92 117 | | | 2 | .Support | .Stöd | 5 |
| 0370 24 | 79 77 283 | | | 4 | .Screw | .Skruv | 5 |
| 0410 30 | 97 36 190 | | | 2 | Pin | Axeltapp | 5 |
| 0420 31 | 97 36 216 | | | 2 | Sleeve | Hylsa | 5 |
| 0430 32 | 79 71 518 | | | 2 | Lock washer | Spärrbricka | 5 |
| 0440 33 | 97 29 716 | | | 2 | Insert | Insats | 6 |
| 0450 34 | 97 32 231 | | | 1 | End plate | Slutbleck | 6 |
| 0460 35 | 97 24 733 | | | 1 | Nut | Mutter | 5 |

297. Ch. -K3024317, -K7034144
298. Ch. K7034144-.



MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX

| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-H22

## Rear seat
## Back cushion

## Baksäte
## Ryggdyna

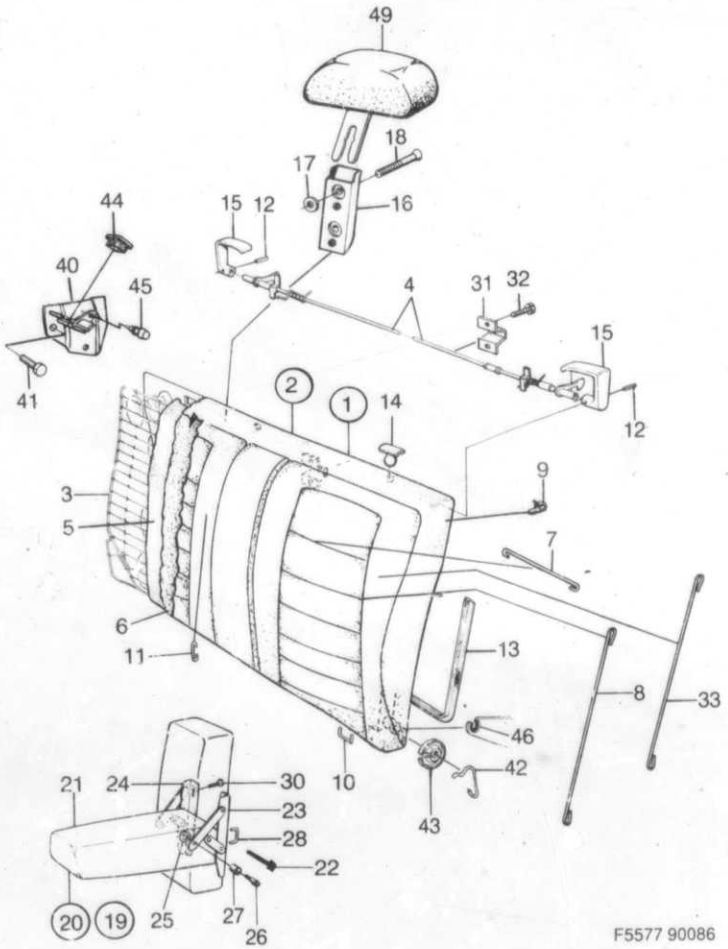


| 1520 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 96 99 323 | | 117,139,274) | 1 | Backrest cushion | Ryggdyna | 6 |
| 0015 | 1 | 96 99 273 | | 117,274,500) 1989- | 1 | Backrest cushion | Ryggdyna | 6 |
| 0016 | | | | | | with arm rest | med armstöd | |
| 0020 | 1 | 98 34 011 | | 117,13) | 1 | Backrest cushion | Ryggdyna | 6 |
| 0030 | 1 | 96 99 224 | | 118,119) | 1 | Backrest cushion | Ryggdyna | 6 |
| 0040 | 1 | 98 43 608 | | 118,14) | 1 | Backrest cushion | Ryggdyna | 6 |
| 0041 | | | | | | | | |
| 0043 | 2 | 96 14 686 | | 139,274,303) | 1 | .Backrest cushion | .Ryggdyna | 6 |
| 0045 | 2 | 95 93 260 | | 274,500,303) 1989- | 1 | .Backrest cushion | .Ryggdyna | 6 |
| 0047 | | | | | | with arm rest | med armstöd | |
| 0050 | 2 | 96 88 839 | | 119) | 1 | .Backrest cushion | .Ryggdyna | 6 |
| 0070 | 3 | 98 33 773 | | 283,139,274) | 1 | ..Spring housing | ..Resårhus | 6 |
| 0071 | 3 | 40 53 450 | | 284,274) | 1 | ..Spring housing | ..Resårhus | 6 |
| 0075 | 3 | *96 87 708* | | 283,274,500) 1989- | 1 | ..Spring housing | ..Resårhus | 6 |
| 0076 | | | | NLS - USE 4053468 | | with arm rest | med armstöd | |
| 0077 | 3 | 40 53 468 | | 284,274) | 1 | ..Spring housing | ..Resårhus | 6 |
| 0078 | | | | | | with arm rest | med armstöd | |
| 0080 | 3 | 96 33 781 | | 13) | 1 | ..Spring housing | ..Resårhus | 6 |
| 0090 | 3 | *96 87 708* | | 283,119) NLS - USE 4053468 | 1 | ..Spring housing | ..Resårhus | 6 |
| 0095 | 3 | 40 53 468 | | 284,119) | 1 | ..Spring housing | ..Resårhus | 6 |
| 0100 | 3 | 98 33 799 | | 283,14) | 1 | ..Spring housing | ..Resårhus | 6 |
| 0105 | 3 | 40 53 476 | | 284,14) | 1 | ..Spring housing | ..Resårhus | 6 |
| 0110 | 4 | 98 33 542 | | | 1 | ...Shaft | ...Axel | 5 |
| 0120 | 5 | 96 88 557 | | 119,139,274) | 1 | ..Padding | ..Vadd | 5 |
| 0125 | 6 | 94 75 914 | | 139,274) | 1 | ..Foam plastic cushion | ..Skumplastdyna | 6 |
| 0127 | 6 | 95 93 278 | | 274,500) 1989- | 1 | ..Foam plastic cushion | ..Skumplastdyna | 6 |
| 0128 | | | | | | with arm rest | med armstöd | |
| 0130 | 6 | 98 29 672 | | 14) | 1 | ..Foam plastic cushion | ..Skumplastdyna | 6 |
| 0140 | 6 | 96 88 581 | | 119) | 1 | ..Foam plastic cushion | ..Skumplastdyna | 6 |
| 0150 | 7 | 97 21 481 | | 119) | 2 | ..Wire rod | ..Trådten | 5 |
| 0160 | 8 | 95 79 244 | | 119) | 4 | ..Wire rod | ..Trådten | 5 |
| 0170 | 9 | 84 00 350 | | | 2 | ..Clip | ..Clips | 5 |
| 0180 | 10 | 84 38 467 | | | X | ..Staple | ..Häftklammer | 5 |
| 0185 | 11 | *98 49 498* | | 139,274) | 4 | ..Clamp | ..Klammer | 5 |
| 0186 | | | | NLS - USE 9450685 | | without arm rest | utan armstöd | |
| 0190 | 11 | 94 50 685 | | | 4 | ..Clamp | ..Klammer | 5 |
| 0200 | 12 | 79 18 201 | | | 2 | ..Spring pin | ..Rörpinne | 5 |
| 0210 | 13 | 94 91 739 | | | 2 | ..Strip | ..List | 5 |
| 0220 | 14 | 98 07 215 | | 14) | 2 | ..Protection | ..Skydd | 6 |
| 0230 | 15 | 94 87 836 | | LH | 1 | ..Handle | ..Handtag | 6 |
| 0240 | 15 | 94 87 844 | | RH | 1 | ..Handle | ..Handtag | 6 |
| 0250 | 16 | *94 87 950* | | 13,14,119) -1987 NLS - USE 9532466 | 2 | ..Bracket | ..Fäste | 5 |
| 0260 | 16 | 95 32 466 | | 14,119) 1988- | 2 | ..Bracket | ..Fäste | 5 |
| 0270 | 17 | 94 93 743 | | 13,14,119,234) | 4 | ..Washer | ..Bricka | 5 |
| 0275 | 17 | 73 99 835 | | 13,14,119,235) | 4 | ..Washer | ..Bricka | 5 |
| 0280 | 18 | 79 72 755 | | | 4 | ..Screw | ..Skruv | 5 |

13. For cars with upholstery "BLOCK PATTERN" För bilar med klädsel "BLOCK MÖNSTER"
14. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
117. State upholstery colour änd year model Uppge klädselfärg och årsmodell
118. State upholstery colour and ch No Uppge klädselfärg och ch nr
119. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
139. For cars with upholstery "VIKTORIA" För bilar med klädsel "VIKTORIA"
234. Ch. --J3028910, --J7018795
235. Ch. J3028911-- J7018796--
274. For cars with upholstery "PARALLEL" För bilar med klädsel "PARALLELL"
283. Ch. --K3015329
284. Ch. K3015330--
303. Without upholstery Utan klädsel
500. Also valid for SE 1988B. Gäller även för SE 1988B



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-H24

## Rear seat
## Back cushion

## Baksäte
## Ryggdyna

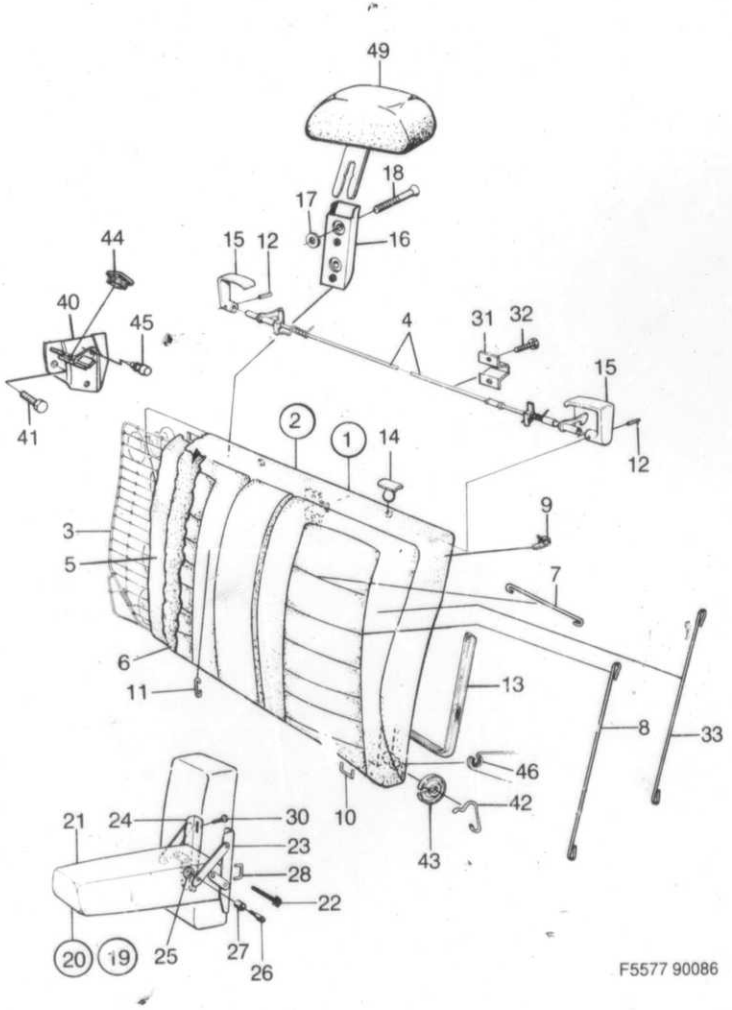


F5577 90086

| 1520 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0290 | 19 | 98 27 718 | | 118) | 1 | ..Arm rest | ..Armstöd | 6 |
| 0300 | 20 | 98 60 305 | | 303) | 1 | ...Arm rest | ...Armstöd | 6 |
| 0320 | 21 | 97 27 892 | | | 1 | ....Arm rest | ....Armstöd | 6 |
| 0330 | 22 | 94 45 909 | | | 1 | ....Clamp | ....Trådbygel | 6 |
| 0340 | 23 | 94 77 860 | | LH | 1 | ....Linkage | ....Länksystem | 6 |
| 0350 | 24 | 94 77 878 | | RH | 1 | ....Linkage | ....Länksystem | 6 |
| 0360 | 25 | 84 57 541 | | | 4 | ....Washer | ....Bricka | 5 |
| 0370 | 26 | *94 91 32?* | | NLS - USE 4055133 | 4 | ....Screw | ....Skruv | 5 |
| 0380 | 27 | 84 58 598 | | | 4 | ....Sleeve | ....Hylsa | 5 |
| 0390 | 28 | 84 38 467 | | | X | ....Staple | ....Häftklammer | 5 |
| 0400 | 30 | *80 19 903* | | NLS - USE 9166281 | 2 | ..Screw | ..Skruv | 5 |
| 0410 | 31 | 94 94 725 | | AU | 1 | ..Bracket | ..Fäste | 6 |
| 0415 | 31 | 95 36 194 | | 1989-, CA | 1 | ..Bracket | ..Fäste | 6 |
| 0420 | 32 | 80 83 933 | | -1988, AU | 2 | ..Screw | ..Skruv | 5 |
| 0430 | 32 | *80 82 976* | | 1989-, AU NLS - USE 8083933 | 2 | ..Screw | ..Skruv | 5 |
| 0435 | 32 | 80 83 933 | | 1989-, CA | 2 | ..Screw | ..Skruv | 5 |
| 0437 | 33 | 94 16 181 | | 139,274) | 2 | ..Wire rod | ..Trådten | 5 |
| 0440 | 40 | 98 48 086 | | LH 2SN, 3CK | 1 | Bracket | Konsol | 5 |
| 0460 | 40 | 98 48 128 | | LH 4SN, 5CK | 1 | Bracket | Konsol | 5 |
| 0480 | 40 | 98 48 094 | | RH 2SN, 3CK | 1 | Bracket | Konsol | 5 |
| 0500 | 40 | 98 48 136 | | RH 4SN, 5CK | 1 | Bracket | Konsol | 5 |
| 0520 | 41 | 84 99 204 | | 2SN, 3CK | 4 | Screw | Skruv | 5 |
| 0525 | 41 | 84 99 204 | | 4SN, 5CK | 6 | Screw | Skruv | 5 |
| 0530 | 42 | 94 94 691 | | LH | 1 | Lock spring | Låsfjäder | 6 |
| 0540 | 42 | 94 94 709 | | RH | 1 | Lock spring | Låsfjäder | 6 |
| 0550 | 43 | 94 89 485 | | | 2 | Spacer washer | Distansbricka | 5 |
| 0560 | 44 | *98 51 676* | | 285) NLS - USE 4050761 | 2 | Sleeve | Hylsa | 5 |
| 0565 | 44 | 40 50 761 | | 286) | 2 | Sleeve | Hylsa | 5 |
| 0570 | 45 | *98 45 223* | | 1986 NLS - USE 4170114 | 2 | Plug | Plugg | 5 |
| 0580 | 45 | *96 18 273* | | 1987- NLS - USE 4170114 | 2 | Absorber | Dämpare | 5 |
| 0585 | 46 | | | See page 8A-005, 5-A06 | | Bushing | Bussning | |
| 0590 | 49 | | | | | SEE ACCESSORIES CATALOGUE | SE TILLBEHÖRSKATALOG | |

118. State upholstery colour and ch No  Uppge klädselfärg och ch nr
139. For cars with upholstery "VIKTORIA"  För bilar med klädsel "VIKTORIA"
274. For cars with upholstery "PARALLEL"  För bilar med klädsel "PARALLELL"
285. Ch. --K3018279, --K7021308
286. Ch. K3018280--, K7021309--
303. Without upholstery  Utan klädsel



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 5-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-102

## Rear seat
## CV

## Baksäte
## CV

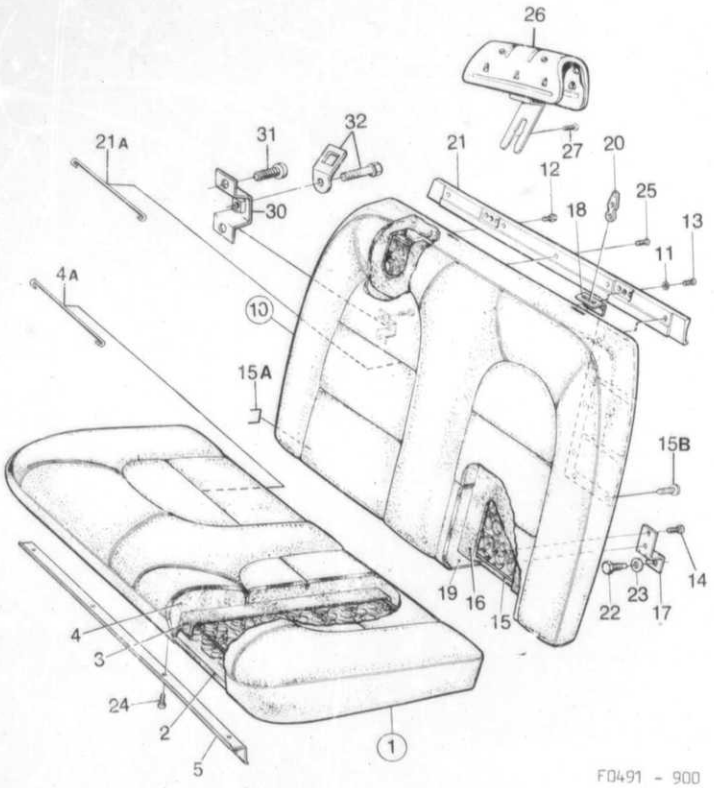


F0491 - 900

| 1525 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 98 80 378 | | 118) | 1 | Seat cushion | Sittdyna | 6 |
| 0040 | 2 | *98 80 493* | | -1987 NLS - USE 9647272 | 1 | .Spring housing | .Resårhus | 6 |
| 0065 | 2 | 96 47 272 | | 1988- | 1 | .Spring housing | .Resårhus | 6 |
| 0080 | 3 | 98 80 519 | | | 1 | .Padding | .Vadd | 6 |
| 0100 | 4 | 98 82 630 | | | 1 | .Foam plastic cushion | .Skumplastdyna | 6 |
| 0110 | 4A | 97 21 499 | | 1988- | 2 | .Wire rod | .Trådten | 5 |
| 0120 | 5 | *98 80 618* | | NLS - USE 9160326 | 1 | Attaching profile | Fästprofil | 5 |
| 0160 | | | | | | | | |
| 0180 | 10 | 98 80 345 | | 118) | 1 | Backrest cushion | Ryggdyna | 6 |
| 0200 | 11 | 79 13 833 | | | 2 | .Washer | .Bricka | 5 |
| 0220 | 12 | 79 65 338 | | -1986 | 9 | .Screw | .Skruv | 6 |
| 0230 | 12 | 79 65 684 | | 1987- | 9 | .Screw | .Skruv | 6 |
| 0240 | 13 | *79 71 633* | | -1986 NLS - USE 7967581 | 2 | .Screw | .Skruv | 5 |
| 0250 | 13 | 79 67 581 | | 1987- | 2 | .Screw | .Skruv | 5 |
| 0260 | 14 | *80 19 911* | | NLS - USE 7399603 | 4 | .Screw | .Skruv | 5 |
| 0280 | 15 | *98 80 535* | | -1986 NLS - USE 9645110 | 1 | .Spring housing | .Resårhus | 6 |
| 0310 | 15 | *98 24 145* | | 1987-,81) NLS - USE 9645110 | 1 | .Spring housing | .Resårhus | 6 |
| 0310 | | | | | | | | |
| 0315 | 15 | 96 45 110 | | 82,321) | 1 | .Spring housing | .Resårhus | 6 |
| 0318 | 15 | 96 45 391 | | 322) | 1 | .Spring housing | .Resårhus | 6 |
| 0325 | 15A | *94 90 764* | | NLS | X | .Staple | .Häftklammer | 5 |
| 0330 | 15B | 79 22 214 | | 1988- | 10 | .Screw | .Skruv | 5 |
| 0335 | 16 | 98 80 584 | | | 1 | .Padding | .Vadd | 6 |
| 0340 | 17 | 98 80 600 | | 192) | 2 | .Bracket | .Konsol | 6 |
| 0350 | 17 | 96 49 195 | | 193) | 2 | .Bracket | .Konsol | 6 |
| 0360 | 18 | 98 82 143 | | | 2 | .Grommet | .Genomföring | 5 |
| 0380 | 19 | 98 82 648 | | 321) | 1 | .Foam plastic cushion | .Skumplastdyna | 6 |
| 0390 | 19 | 96 47 348 | | 322) | 1 | .Foam plastic cushion | .Skumplastdyna | 6 |
| 0400 | 20 | 98 83 174 | | | 2 | .Strap | .Stropp | 5 |
| 0420 | 21 | 98 83 224 | | 321) | 1 | .Support | .Stöd | 6 |
| 0430 | 21 | 96 45 334 | | 322) | 1 | .Support | .Stöd | 6 |
| 0435 | 21A | 97 21 499 | | 1988- | 2 | .Wire rod | .Trådten | 5 |
| 0440 | 22 | 84 99 204 | | | 2 | Screw | Skruv | 5 |
| 0460 | 23 | 80 30 017 | | | 2 | Washer | Bricka | 5 |
| 0480 | 24 | 80 59 586 | | | 4 | Screw | Skruv | 5 |
| 0500 | 25 | 79 74 694 | | -1986 | 2 | Screw | Skruv | 5 |
| 0510 | 25 | 79 73 779 | | 1987-,165) | 2 | Screw | Skruv | 5 |
| 0515 | 25 | 79 70 288 | | 166,213) | 2 | Screw | Skruv | 5 |
| 0517 | 25 | 69 37 361 | | 214) | 2 | Screw | Skruv | 5 |
| 0520 | 26 | 98 81 806 | | 118) | 2 | Head restraint | Nackstöd | 6 |
| 0530 | 27 | 96 47 132 | | 132),-1988 | 2 | Screw | Skruv | 5 |
| 0532 | 27 | 96 49 799 | | 500) 1989- | 2 | Screw | Skruv | 5 |
| 0535 | 27 | 96 49 146 | | 168),-1988, AU | 2 | Screw | Skruv | 5 |
| 0537 | 27 | 91 60 052 | | 1989-, AU, CA | 2 | Screw | Skruv | 5 |
| 0540 | 30 | 94 94 725 | | 1987-,167) AU | 2 | Bracket | Fäste | 6 |
| 0550 | 30 | 96 49 138 | | 168) AU | 2 | Bracket | Fäste | 6 |
| 0555 | 30 | 96 49 500 | | 1989-, CA | 2 | Bracket | Fäste | 6 |
| 0560 | 31 | 79 67 938 | | 1987-1988, AU | 4 | Screw | Skruv | 5 |

81. Ch. --H7013183
82. Ch. H7013184--
118. State upholstery colour and ch No  Uppge klädselfärg och ch nr
132. Ch. H7032201--
165. Ch. --J7006101
166. Ch. J7006102--
167. Ch. --J7008496
168. Ch. J7008497--
192. Ch. --J7023449
193. Ch. J7023450--
213. Ch. --J7006499
214. Ch. J7006500--
321. Ch. --J7005071
322. Ch. J7005072--
500. Also valid for SE 1988B.  Gäller även för SE 1988B.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-I04 *Rear seat* / *Baksäte*

*CV* / *CV*

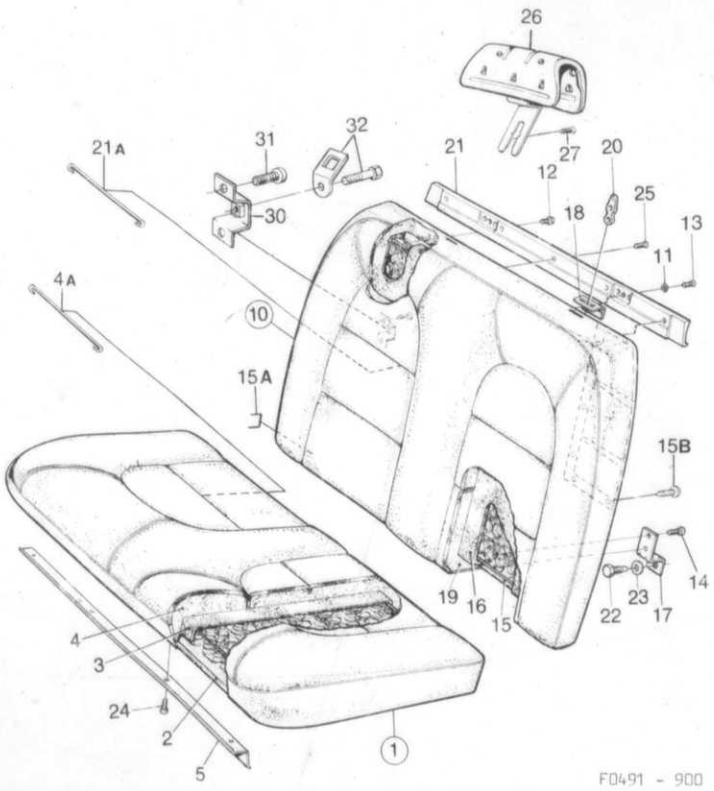


F0491 - 900

| 1525 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0565 31 | 80 82 935 | | 1989-, AU, CA | 4 | Screw | Skruv | 5 |
| 0570 32 | 95 93 542 | | 1989-, CA | 1 | Attaching washer | Fästbricka | 6 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX

| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-106

## *Equipment luggage compartment*

## *Utrustning bagagerum*

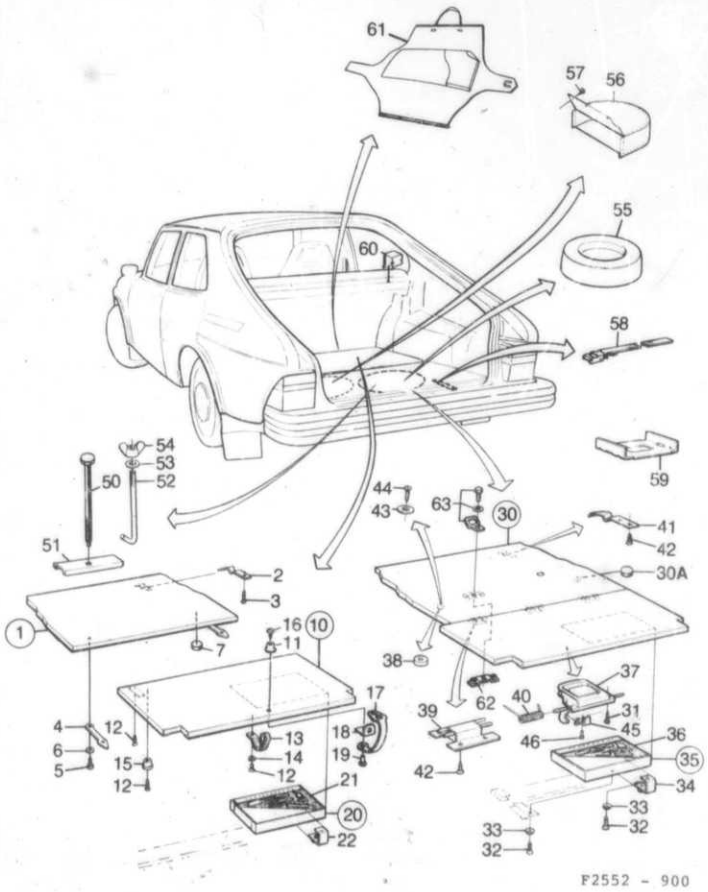


| 1580 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *98 79 545* | | 95),(9706755,9706771,AU) | 1 | Floor | Golv | 5 |
| 0010 | | | | NLS - USE 4269734, 8410961, 9617879, 9687450, 9849514 | | | | |
| 0030 | 1 | 98 78 612 | | 95), ME | 1 | Floor | Golv | 9 |
| 0050 | 1 | 98 81 624 | | 115), CV | 1 | Floor | Golv | 5 |
| 0070 | 2 | 94 02 983 | | 95,115) | 4 | .Spring | .Fjäder | 5 |
| 0080 | 3 | *79 21 331* | | 95,115) NLS | 4 | .Screw | .Skruv | 5 |
| 0090 | 4 | 84 67 409 | | 95,115) | 2 | .Strap | .Stropp | 5 |
| 0100 | 5 | *79 21 331* | | 95,115) NLS | 2 | .Screw | .Skruv | 5 |
| 0110 | 6 | 79 13 833 | | 95,115) | 2 | .Washer | .Bricka | 5 |
| 0120 | 7 | 98 64 109 | | 95,115) | 2 | .Plug | .Plugg | 5 |
| 0130 | | | | | | | | |
| 0140 | 10 | *96 11 765* | | -1986 NLS - USE 4269734, 8410961, 9617879, 9687450, 9849514 | 1 | Floor | Golv | 5 |
| 0160 | 10 | *96 18 661* | | 1987-95) NLS - USE 4269734, 8410961, 9617879, 9687450, 9849514 | 1 | Floor | Golv | 5 |
| 0180 | 10 | 98 84 800 | | 115), CV | 1 | Floor | Golv | 5 |
| 0200 | 11 | 97 94 264 | | 95,115) | 1 | .Knob | .Knopp | 6 |
| 0210 | 12 | 84 08 882 | | 95) | 11 | .Screw | .Skruv | 5 |
| 0220 | 12 | 84 08 882 | | 115) | 10 | .Screw | .Skruv | 5 |
| 0230 | 13 | 94 64 942 | | 115) | 1 | .Strap | .Stropp | 5 |
| 0240 | 14 | 84 13 429 | | 95) | 4 | .Washer | .Bricka | 5 |
| 0250 | 14 | 84 13 429 | | 115) | 3 | .Washer | .Bricka | 5 |
| 0260 | 15 | 82 17 689 | | 95,115) | 2 | .Spacer sleeve | .Distanshylsa | 3 |
| 0270 | 16 | 97 75 230 | | 95,115) | 1 | .Screw | .Skruv | 5 |
| 0280 | 17 | 97 97 127 | | 95,115) | 1 | Strap | Stropp | 5 |
| 0290 | 18 | 97 97 036 | | 95,115) | 1 | Elbow | Vinkel | 5 |
| 0300 | 19 | *79 61 675* | | 95,115) NLS - USE 9449752 | 1 | Rivet | Nit | 5 |
| 0310 | 20 | *98 48 417* | | -1986 NLS - USE 4129839 | 1 | Tool box | Verktygslåda | 6 |
| 0320 | 20 | *96 18 679* | | 95,115) NLS - USE 4129839 | 1 | Tool box | Verktygslåda | 5 |
| 0330 | 21 | 98 48 425 | | 95,115) | 1 | .Bracket | .Hållare | 5 |
| 0340 | 22 | 94 92 026 | | 95,115) | 2 | Strap | Stropp | 5 |
| 0350 | | | | | | | | |
| 0360 | 30 | *96 87 476* | | 96,97,160) NLS - USE 4269734 | 1 | Floor | Golv | 5 |
| 0380 | 30 | *95 33 977* | | 97,161) NLS - USE 4269734 | 1 | Floor | Golv | 5 |
| 0400 | 30 | 96 87 484 | | 96,98,160) | 1 | Floor | Golv | 5 |
| 0415 | 30 | 95 33 985 | | 98,161) | 1 | Floor | Golv | 5 |
| 0420 | 30 | 96 45 615 | | 116), CV | 1 | Floor | Golv | 5 |
| 0430 | 30A | 96 64 109 | | 96,116) | 2 | .Plug | .Plugg | 5 |
| 0440 | 31 | 79 11 522 | | 96,116,255) | 2 | .Screw | .Skruv | 5 |
| 0445 | 31 | 80 59 248 | | 96,116,256) | 2 | .Screw | .Skruv | 5 |
| 0450 | 32 | 84 08 882 | | 96,116) | 3 | .Screw | .Skruv | 5 |
| 0460 | 33 | 84 13 429 | | 96,116) | 3 | .Washer | .Bricka | 5 |
| 0470 | 34 | 94 92 026 | | 96,116) | 2 | .Strap | .Stropp | 5 |

95. Ch. --H2011071, --H3009453, --H7023431
96. Ch. H2011072--, H3009454--, H7023432--
97. For cars with 4" spare wheel — För bilar med 4" reservhjul
98. For cars with 5,5" spare wheel — För bilar med 5,5" reservhjul
115. Cv, ch. --H7023393
116. CV, ch. H7023394--
160. Ch. --J7008339
161. Ch. J7008340--
255. Ch --J3026149, --J7041199
256. Ch J3026150--, J7041200--




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

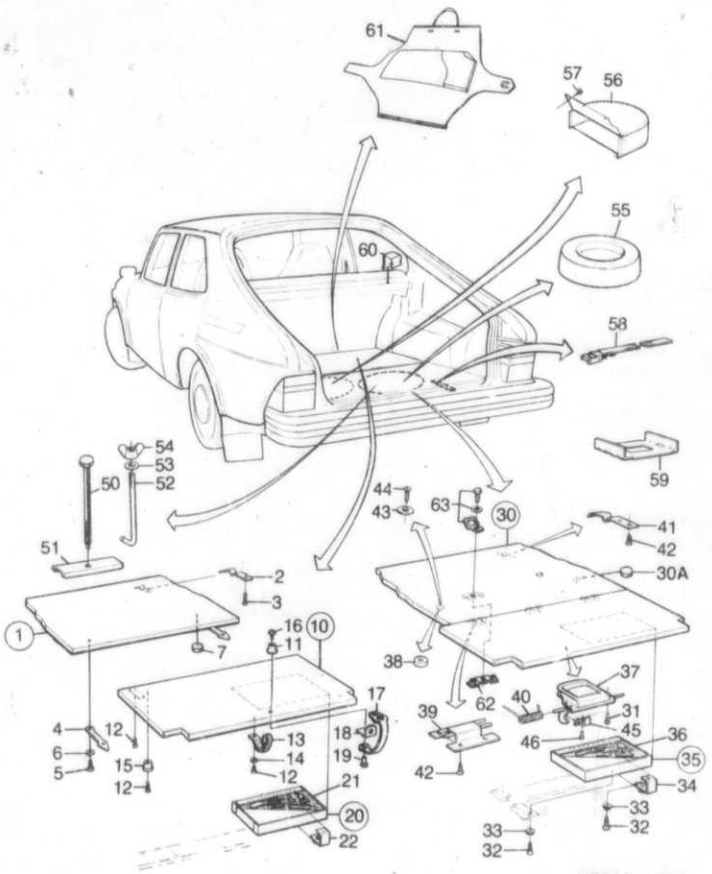


F2552 - 900

| 1580 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0480 | 35 | *96 18 679* | | 96,116,160) NLS - USE 4129839 | 1 | .Tool box | .Verktygslåda | 5 |
| 0490 | 35 | *95 33 621* | | 161) NLS - USE 4129839 | 1 | .Tool box | .Verktygslåda | 5 |
| 0500 | 36 | *98 64 141* | | 96,116,160) NLS - USE 9533613 | 1 | ..Bracket | ..Hållare | 5 |
| 0510 | 36 | 95 33 613 | | 161) | 1 | ..Bracket | ..Hållare | 5 |
| 0520 | 37 | 96 57 123 | | 96,116) | 1 | .Lock | .Lås | 6 |
| 0530 | 38 | 96 87 443 | | 96,116) | 2 | .Bushing | .Bussning | 5 |
| 0540 | 39 | 97 64 853 | | 96,116) | 3 | .Hinge | .Gångjärn | 5 |
| 0550 | 40 | 97 74 282 | | 96,116) | 1 | .Spring | .Fjäder | 6 |
| 0560 | 41 | 98 79 321 | | 96,116) | 2 | .Clamp | .Klämma | 6 |
| 0570 | 42 | 97 75 230 | | 96,116) | 16 | .Screw | .Skruv | 5 |
| 0580 | 43 | 96 87 450 | | 96,116) | 2 | Washer | Bricka | 5 |
| 0590 | 44 | 84 10 961 | | 96,116) | 2 | Screw | Skruv | 5 |
| 0600 | 45 | 96 17 879 | | 96,116) | 1 | Lock plate | Låsplåt | 6 |
| 0610 | 46 | 98 49 514 | | 96,116) | 2 | Rivet | Nit | 5 |
| 0620 | 50 | 98 26 595 | | | 1 | Screw | Skruv | 5 |
| 0630 | 51 | 97 33 338 | | | 1 | Washer | Bricka | 5 |
| 0640 | 52 | 98 79 461 | | ME | 1 | Hook | Krok | 6 |
| 0660 | 53 | 79 16 497 | | ME | 1 | Washer | Bricka | 5 |
| 0670 | 54 | 79 70 478 | | ME | 1 | Wing nut | Vingmutter | 5 |
| 0680 | 55 | 98 79 479 | | ME | 1 | Spare wheel cover | Reservhjulsskydd | 6 |
| 0690 | 56 | *98 24 483* | | 105), CV NLS - USE 9160276 | 1 | Spare wheel cover | Reservhjulsskydd | 6 |
| 0700 | 56 | 96 45 730 | | 106)-1988, CV | 1 | Spare wheel cover | Reservhjulsskydd | 6 |
| 0705 | 56 | 91 60 276 | | 1989-, CV | 1 | Spare wheel cover | Reservhjulsskydd | 6 |
| 0710 | 57 | 84 83 893 | | CV | 3 | Clip | Clips | 5 |
| 0720 | 58 | *94 92 612* | | NLS - USE 4141784 | 1 | Strap | Låsband | 5 |
| 0740 | 59 | 92 28 131 | | 1987-, CV | 1 | Bracket warning triangle | Hållare varningstriangel | 6 |
| 0760 | 60 | *84 68 134* | | 5CK NLS | 2 | Clip | Clips | 5 |
| 0770 | 61 | 98 24 111 | | 156), CV | 1 | Storage sack | Förvaringspåse | 5 |
| 0780 | 61 | *96 45 698* | | 157), CV NLS - USE 4170387 | 1 | Storage sack | Förvaringspåse | 5 |
| 0785 | 62 | *94 94 733* | | 1989-, AU NLS | 2 | Bracket | Fäste | |
| 0790 | 62 | 95 37 606 | | 1989-, CA | 2 | Bracket | Fäste | 5 |
| 0800 | 63 | 95 93 534 | | 1989-, CA, AU | 1 | Attaching washer | Fästbricka | 6 |

96. Ch. H2011072--, H3009454--, H7023432--
105. Ch. --H7020222
106. Ch. H7020223--
116. CV, ch. H7023394--
156. Ch. --H7017221
157. Ch. H7017222--
160. Ch. --J7008339
161. Ch. J7008340--



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-I10

## *Scuff plate protector* — *Tröskelskydd*

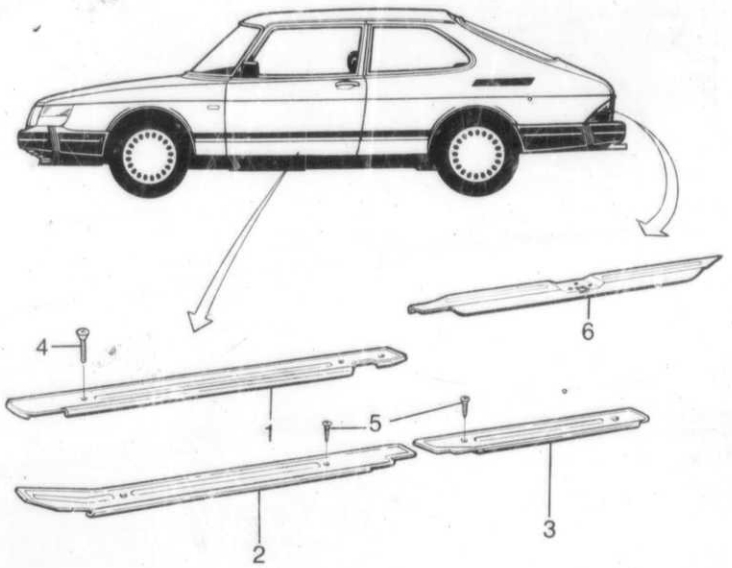


R 9408 - 900

| 1590 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 94 86 168 | | -1986, LH, 2SN, 3CK | 1 | Sill protection | Tröskelskydd | 5 |
| 0040 | 1 | 96 12 961 | | 1987-, LH, 2SN, 3CK | 1 | Sill protection | Tröskelskydd | 5 |
| 0060 | 1 | 94 21 934 | | RH, 2SN, 3CK | 1 | Sill protection | Tröskelskydd | 5 |
| 0080 | 1 | 94 03 007 | | -1987, RH, B202,2SN, 3CK | 1 | Sill protection | Tröskelskydd | 5 |
| 0095 | 1 | 96 83 657 | | 1988-, RH, B202,2SN, 3CK | 1 | Sill protection | Tröskelskydd | 5 |
| 0097 | 1 | 96 83 657 | | 252,500), 1989- RH, B201 2SN, 3CK | 1 | Sill protection | Tröskelskydd | 5 |
| 0098 | | | | | | | | |
| 0100 | 1 | 98 80 808 | | CV | 2 | Sill protection | Tröskelskydd | 5 |
| 0120 | | | | | | | | |
| 0130 | 2 | 94 86 176 | | -1986, LH, 4SN, 5CK | 1 | Sill protection | Tröskelskydd | 5 |
| 0150 | 2 | 96 12 953 | | 1987-, LH, 4SN, 5CK | 1 | Sill protection | Tröskelskydd | 5 |
| 0170 | 2 | 94 21 959 | | RH, 4SN, 5CK | 1 | Sill protection | Tröskelskydd | 5 |
| 0190 | 2 | 94 03 197 | | -1987, RH, B202,4SN, 5CK | 1 | Sill protection | Tröskelskydd | 5 |
| 0205 | 2 | 96 83 640 | | 1988-, RH, B202,4SN, 5CK | 1 | Sill protection | Tröskelskydd | 5 |
| 0207 | 2 | 96 83 640 | | 252,500), 1989- RH, B201 4SN, 5CK | 1 | Sill protection | Tröskelskydd | 5 |
| 0208 | | | | | | | | |
| 0210 | 2 | *94 98 957* | | -1986, LH, CD NLS | 1 | Sill protection | Tröskelskydd | 7 |
| 0230 | 2 | *94 98 965* | | -1986, RH, CD NLS | 1 | Sill protection | Tröskelskydd | 7 |
| 0250 | 2 | 98 19 525 | | -1986, RH, B202, CD | 1 | Sill protection | Tröskelskydd | 5 |
| 0270 | | | | | | | | |
| 0280 | 3 | *97 07 019* | | LH, 4SN, 5CK NLS - USE 4124129 | 1 | Sill protection | Tröskelskydd | 5 |
| 0280 | | | | | | | | |
| 0300 | 3 | *97 07 027* | | RH, 4SN, 5CK NLS - USE 4124137 | 1 | Sill protection | Tröskelskydd | 5 |
| 0300 | * | | | | | | | |
| 0320 | 3 | 94 98 973 | | -1986, LH, CD | 1 | Sill protection | Tröskelskydd | 7 |
| 0340 | 3 | 94 98 981 | | -1986, RH, CD | 1 | Sill protection | Tröskelskydd | 7 |
| 0360 | | | | | | | | |
| 0370 | 4 | 79 70 320 | | 2SN, 3CK | 8 | Screw | Skruv | 5 |
| 0380 | 5 | 79 70 320 | | 4SN, 5CK | 10 | Screw | Skruv | 5 |
| 0400 | 6 | 94 15 480 | | | 1 | Sill protection | Tröskelskydd | 5 |

252. With catalytic converter. Med katalytisk reaktor.
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

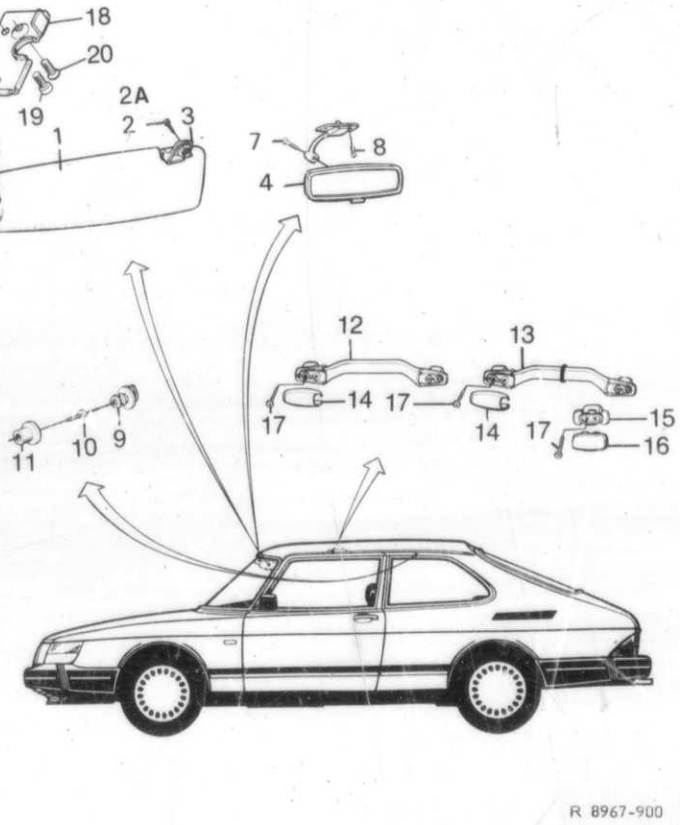


| 1600 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *98 36 453* | | 48), LH NLS - USE 9849837 | 1 | Sun visor | Solskydd | 5 |
| 0020 | 1 | 98 49 837 | | 49), LH | 1 | Sun visor | Solskydd | 5 |
| 0030 | 1 | 98 62 582 | | 60), LH | 1 | Sun visor | Solskydd | 5 |
| 0040 | 1 | *98 81 251* | | -1987, LH, CV NLS - USE 9648734 | 1 | Sun visor | Solskydd | 5 |
| 0050 | 1 | 96 48 734 | | 1988-, LH, CV | 1 | Sun visor | Solskydd | 5 |
| 0060 | 1 | *98 81 277* | | 1987, RH, RHD, CV NLS - USE 9649823 | 1 | Sun visor | Solskydd | 5 |
| 0065 | 1 | 96 49 823 | | 1988-, RH, RHD, CV | 1 | Sun visor | Solskydd | 5 |
| 0070 | 1 | *98 36 479* | | 48), RH NLS - USE 9849860 | 1 | Sun visor with mirror | Solskydd med spegel | 5 |
| 0090 | 1 | 98 49 860 | | 49), RH | 1 | Sun visor with mirror | Solskydd med spegel | 5 |
| 0110 | 1 | 98 62 590 | | 60), RH | 1 | Sun visor with mirror | Solskydd med spegel | 5 |
| 0130 | 1 | *98 81 269* | | -1987, RH, CV NLS - USE 9649807 | 1 | Sun visor with mirror | Solskydd med spegel | 5 |
| 0145 | 1 | 96 49 807 | | 1988-, RH, CV | 1 | Sun visor with mirror | Solskydd med spegel | 5 |
| 0150 | 1 | 98 81 285 | | -1987, LH, RHD, CV | 1 | Sun visor with mirror | Solskydd med spegel | 5 |
| 0165 | 1 | 96 49 815 | | 1988-, LH, RHD, CV | 1 | Sun visor with mirror | Solskydd med spegel | 5 |
| 0170 | 1 | *98 36 461* | | 46), RH, JA NLS - USE 9849845 | 1 | Sun visor | Solskydd | 5 |
| 0185 | 1 | 98 49 845 | | 47), RH, JA | 1 | Sun visor with mirror | Solskydd med spegel | 5 |
| 0190 | 1 | *98 36 487* | | 46), LH, RHD NLS - USE 9849852 | 1 | Sun visor with mirror | Solskydd med spegel | 5 |
| 0210 | 1 | 98 49 852 | | 47), LH, RHD | 1 | Sun visor with mirror | Solskydd med spegel | 5 |
| 0230 | 1 | *98 36 453* | | 46), LH, RHD, AU NLS - USE 9849837 | 1 | Sun visor | Solskydd | 5 |
| 0245 | 1 | 98 49 837 | | 47), LH, RHD, AU | 1 | Sun visor | Solskydd | 5 |
| 0250 | 1 | *98 36 461* | | 46), RH, RHD NLS - USE 9849845 | 1 | Sun visor | Solskydd | 5 |
| 0260 | 1 | 98 49 845 | | 47), RH, RHD | 1 | Sun visor | Solskydd | 5 |
| 0270 | 2 | 79 73 951 | | | 6 | Screw | Skruv | 5 |
| 0280 | 2 | 79 70 536 | | -1986, CV | 2 | Screw | Skruv | 6 |
| 0290 | 2 | 79 70 536 | | 1987-, CV | 6 | Screw | Skruv | 6 |
| 0300 | 2A | 98 83 257 | | -1986, CV | 4 | Screw | Skruv | 5 |
| 0310 | 3 | 98 36 495 | | LH | 1 | Support | Stöd | 5 |
| 0320 | 3 | 98 36 503 | | RH | 1 | Support | Stöd | 5 |
| 0330 | 3 | 98 82 655 | | CV | 2 | Support | Stöd | 5 |
| 0340 | 4 | 98 33 997 | | -1986 | 1 | Mirror | Spegel | 4 |
| 0350 | 4 | 95 89 110 | | 1987- | 1 | Mirror | Spegel | 4 |
| 0360 | 4 | *98 83 489* | | -1987, CV NLS - USE 9589110 | 1 | Mirror | Spegel | 4 |
| 0370 | 4 | 95 89 110 | | 1988-, CV | 1 | Mirror | Spegel | 4 |
| 0380 | 7 | 80 59 248 | | | 1 | Screw | Skruv | 5 |
| 0390 | 8 | 79 69 215 | | -1986 | 2 | Screw | Skruv | 5 |
| 0410 | 9 | 98 36 404 | | 2SN, 3CK | 2 | Clothes hook | Klädkrok | 5 |
| 0420 | 10 | 79 73 951 | | 2SN, 3CK | 2 | Screw | Skruv | 5 |
| 0440 | 11 | 98 36 396 | | 2SN, 3CK | 2 | Sleeve | Hylsa | 5 |
| 0450 | 12 | 94 11 562 | | CD | 1 | Curve handle | Kurvhandtag | 5 |
| 0460 | 12 | 98 36 305 | | | 1 | Curve handle | Kurvhandtag | 5 |
| 0470 | 12 | 98 36 347 | | SR | 1 | Curve handle | Kurvhandtag | 5 |

46. Ch. --G3017526, --G7021048, --G2020925
47. Ch. G3017527--, G7021049--, G2020925--
48. Ch. --G2017254, --G3014507, --G7018779
49. Ch. G2017255--, G3014508--, G7018780--
60. For cars with automatic belts  För bilar med passivt bälte




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets | 6-J08 |

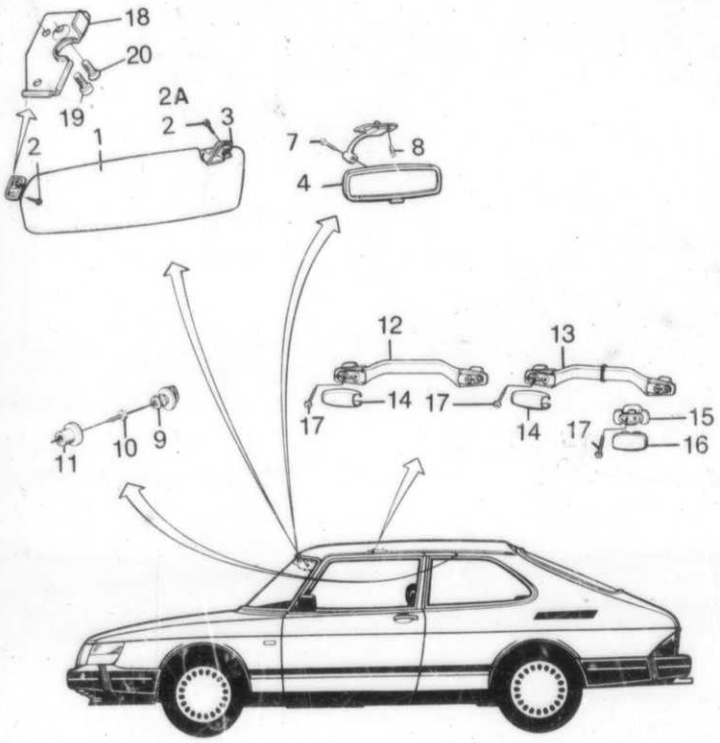


R 8967-900

| 1600 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0480 | 13 | 94 03 726 | | CD | 2 | Curve handle | Kurvhandtag | 5 |
| 0490 | 13 | 98 36 313 | | | 2 | Curve handle | Kurvhandtag | 5 |
| 0500 | 13 | 98 36 354 | | SR | 2 | Curve handle | Kurvhandtag | 5 |
| 0510 | 14 | 98 36 362 | | | 2 | Cover | Kåpa | 5 |
| 0520 | 15 | 98 36 370 | | | 2 | Spacer | Distans | 6 |
| 0530 | 16 | 98 36 388 | | | 2 | Cover | Kåpa | 6 |
| 0540 | 17 | 79 73 969 | | | 16 | Screw | Skruv | 5 |
| 0550 | 18 | 96 17 432 | | 1987-,60), LH, US | 1 | Plate | Plåt | 5 |
| 0560 | 18 | 96 17 440 | | 1987-,60), RH, US | 1 | Plate | Plåt | 5 |
| 0570 | 19 | 79 22 370 | | 1987-,60), US | 2 | Screw | Skruv | 5 |
| 0580 | 20 | 79 77 838 | | 1987-,60), US | 4 | Screw | Skruv | 5 |

60. For cars with automatic belts För bilar med passivt bälte



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-I16

## *Shelf*
## *Hatthylla*

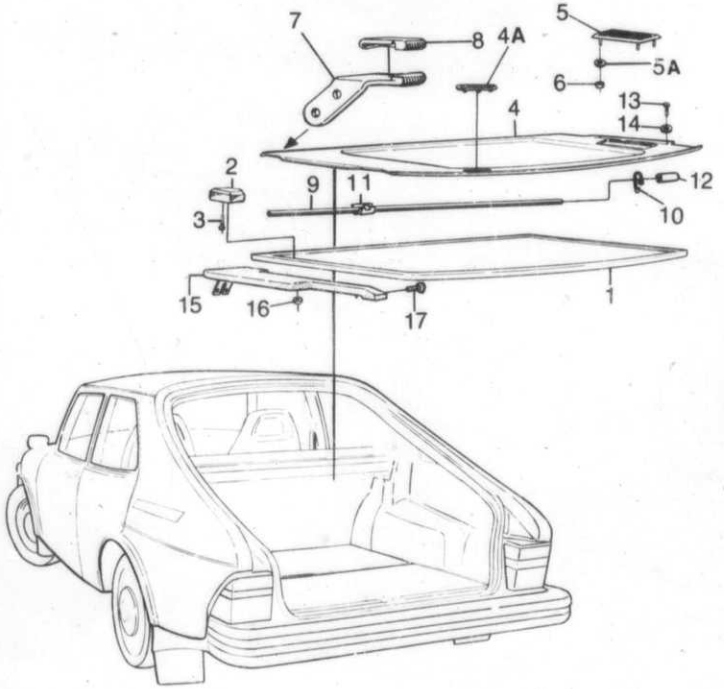


F1954 - 900

| 1625 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *97 41 802* | | 590), -1988, 3CK, 5CK NLS - USE 4045316 | 1 | Rear shelf | Hatthylla | 5 |
| 0015 | 1 | 95 37 440 | | 590,500),1989-, 3CK, 5CK | 1 | Rear shelf | Hatthylla | 5 |
| 0020 | 1 | 98 66 120 | | 600), 3CK, 5CK | 1 | Rear shelf | Hatthylla | 5 |
| 0030 | 1 | *97 41 794* | | 560), -1987, 3CK, 5CK NLS - USE 9683921 | 1 | Rear shelf | Hatthylla | 5 |
| 0040 | 1 | 96 83 921 | | 560), 1988-, 3CK, 5CK | 1 | Rear shelf | Hatthylla | 5 |
| 0050 | 1 | 98 49 100 | | 580), -1987, 3CK, 5CK | 1 | Rear shelf | Hatthylla | 5 |
| 0060 | 1 | 96 83 939 | | 580), 1988-, 3CK, 5CK | 1 | Rear shelf | Hatthylla | 5 |
| 0070 | 1 | 98 66 138 | | 570), 3CK, 5CK | 1 | Rear shelf | Hatthylla | 5 |
| 0080 | 2 | 97 41 976 | | 590) | 2 | .Stop | .Stopp | 5 |
| 0090 | 2 | 97 41 950 | | 600) | 2 | .Stop | .Stopp | 5 |
| 0100 | 2 | 97 41 968 | | 560) | 2 | .Stop | .Stopp | 5 |
| 0110 | 2 | 97 42 008 | | 580), -1987 | 2 | .Stop | .Stopp | 5 |
| 0120 | 2 | 96 80 901 | | 580), 1988- | 2 | .Stop | .Stopp | 5 |
| 0130 | 2 | 94 59 850 | | 610) | 2 | .Stop | .Stopp | 5 |
| 0140 | 3 | 84 10 961 | | | 4 | .Screw | .Skruv | 5 |
| 0150 | | | | | | | | |
| 0160 | 4 | *98 09 278* | | 590,85), 2SN NLS - USE 4045266 | 1 | Rear shelf | Hatthylla | 5 |
| 0170 | 4 | *96 18 547* | | 590,86,111)-1988, 2SN NLS - USE 4045266 | 1 | Rear shelf | Hatthylla | 5 |
| 0175 | 4 | *95 37 481* | | 590,500,111), 1989-, 2SN NLS - USE 4045266 | 1 | Rear shelf | Hatthylla | 5 |
| 0180 | 4 | *98 79 701* | | 590,304,85), 2SN NLS - USE 4045274 | 1 | Rear shelf | Hatthylla | 5 |
| 0190 | 4 | 96 18 380 | | 590,304,86,111)-1988,2SN | 1 | Rear shelf | Hatthylla | 5 |
| 0195 | 4 | 95 37 499 | | 590,304,111,500)1989,2SN | 1 | Rear shelf | Hatthylla | 5 |
| 0200 | | | | | | | | |
| 0210 | 4 | *98 79 651* | | 600,85), 2SN NLS - USE 9618521 | 1 | Rear shelf | Hatthylla | 5 |
| 0220 | 4 | 96 18 521 | | 600,86,111), 2SN | 1 | Rear shelf | Hatthylla | 5 |
| 0230 | 4 | *98 79 669* | | 600,304,85), 2SN NLS - USE 9618406 | 1 | Rear shelf | Hatthylla | 5 |
| 0240 | 4 | 96 18 406 | | 600,304,86,111) 2SN | 1 | Rear shelf | Hatthylla | 5 |
| 0250 | | | | | | | | |
| 0260 | 4 | *98 09 260* | | 560,85), 2SN NLS - USE 9618539 | 1 | Rear shelf | Hatthylla | 5 |
| 0270 | 4 | 96 18 539 | | 560,86,111)-1987, 2SN | 1 | Rear shelf | Hatthylla | 5 |
| 0280 | 4 | *96 83 806* | | 560,111), 1988-, 2SN NLS - USE 4044814 | 1 | Rear shelf | Hatthylla | 5 |
| 0290 | 4 | *98 79 685* | | 560,304,85), 2SN NLS - USE 9618372 | 1 | Rear shelf | Hatthylla | 5 |
| 0300 | 4 | 96 18 372 | | 560,304,86,111)-1987,2SN | 1 | Rear shelf | Hatthylla | 5 |
| 0320 | 4 | 96 83 848 | | 560,304,111), 1988-, 2SN | 1 | Rear shelf | Hatthylla | 5 |
| 0330 | | | | | | | | |
| 0340 | 4 | *98 09 286* | | 580,85), 2SN NLS - USE 4044962 | 1 | Rear shelf | Hatthylla | 5 |
| 0350 | 4 | 96 18 554 | | 580,86,111)-1987, 2SN | 1 | Rear shelf | Hatthylla | 5 |
| 0360 | 4 | *96 83 822* | | 580,111), 1988-, 2SN NLS - USE 4044962 | 1 | Rear shelf | Hatthylla | 5 |
| 0360 | | | | | | | | |

85. Ch. --H7014073
86. Ch. H7014074--
111. With cut for air grille. Med uttag för luftutsläpp.
304. With loudspeaker Med högtalare
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun
610. Black Svart



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-I18

## *Shelf*

## *Hatthylla*

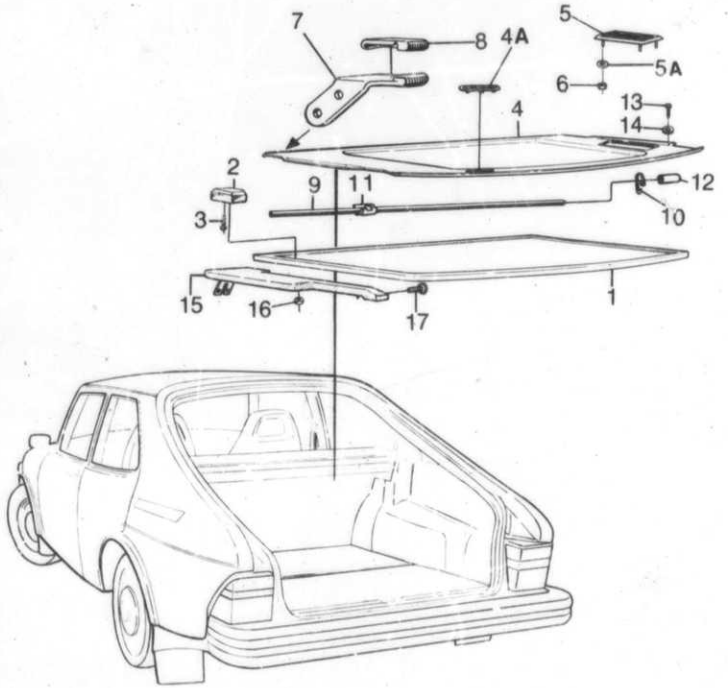


F1954 - 900

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Oh Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0370 | 4 | *98 79 719* | 580,304,85), 2SN NLS - USE 9618398 | 1 | Rear shelf | Hatthylla | 5 |
| 0380 | 4 | 96 18 398 | 580,304,86,111)-1987 2SN | 1 | Rear shelf | Hatthylla | 5 |
| 0400 | 4 | 96 83 863 | 580,304,111), 1988-, 2SN | 1 | Rear shelf | Hatthylla | 5 |
| 0420 | 4 | *98 79 735* | 570,85), 2SN NLS - USE 4045134 | 1 | Rear shelf | Hatthylla | 5 |
| 0430 | 4 | *96 18 562* | 570,86,111), 2SN NLS - USE 4045134 | 1 | Rear shelf | Hatthylla | 5 |
| 0440 | 4 | *98 79 743* | 570,304,85), 2SN NLS - USE 4045118 | 1 | Rear shelf | Hatthylla | 5 |
| 0450 | 4 | 96 18 414 | 570,304,86,111) 2SN | 1 | Rear shelf | Hatthylla | 5 |
| 0470 | 4 | 97 35 028 | 590), -1988, 4SN | 1 | Rear shelf | Hatthylla | 5 |
| 0475 | 4 | 95 37 432 | 590,500), 1989-, 4SN | 1 | Rear shelf | Hatthylla | 5 |
| 0480 | 4 | 98 51 858 | 590,304), -1988, 4SN, | 1 | Rear shelf | Hatthylla | 5 |
| 0485 | 4 | *95 37 473* | 590,304,500),1989-, 4SN, NLS - USE 4045258 | 1 | Rear shelf | Hatthylla | 5 |
| 0500 | 4 | 98 66 161 | 600), 4SN | 1 | Rear shelf | Hatthylla | 5 |
| 0510 | 4 | 98 66 203 | 600,304), 4SN | 1 | Rear shelf | Hatthylla | 5 |
| 0530 | 4 | *97 35 010* | 560), -1987, 4SN NLS - USE 4044848 | 1 | Rear shelf | Hatthylla | 5 |
| 0540 | 4 | *96 83 814* | 560), 1988-, 4SN NLS - USE 4044848 | 1 | Rear shelf | Hatthylla | 5 |
| 0550 | 4 | 98 51 841 | 560,304), -1987, 4SN | 1 | Rear shelf | Hatthylla | 5 |
| 0560 | 4 | 96 83 897 | 560,304), 1988-, 4SN | 1 | Rear shelf | Hatthylla | 5 |
| 0580 | 4 | 98 49 092 | 580), -1987, 4SN | 1 | Rear shelf | Hatthylla | 5 |
| 0590 | 4 | *96 83 830* | 580), 1988-, 4SN NLS - USE 4044921 | 1 | Rear shelf | Hatthylla | 5 |
| 0600 | 4 | *98 51 866* | 580,304), -1987, 4SN NLS - USE 4044954 | 1 | Rear shelf | Hatthylla | 5 |
| 0610 | 4 | *96 83 913* | 580,304), 1988-, 4SN NLS - USE 4044954 | 1 | Rear shelf | Hatthylla | 5 |
| 0630 | 4 | *98 66 179* | 570), 4SN NLS - USE 4045175 | 1 | Rear shelf | Hatthylla | 5 |
| 0640 | 4 | *98 66 211* | 570,304), 4SN NLS - USE 4045142 | 1 | Rear shelf | Hatthylla | 5 |
| 0650 | 4A | 96 18 596 | 590,86,111),-1988, 2SN | 4 | .Grille | .Galler | 5 |
| 0651 | 4A | 95 37 515 | 590,86,111),1989-, 2SN | 4 | .Grille | .Galler | 5 |
| 0652 | 4A | 96 18 570 | 600,86,111) 2SN | 4 | .Grille | .Galler | 5 |
| 0653 | 4A | 96 18 588 | 560,86,111) 2SN | 4 | .Grille | .Galler | 5 |
| 0654 | 4A | 96 18 604 | 580,86,111)-1987, 2SN | 4 | .Grille | .Galler | 5 |
| 0655 | 4A | 96 83 988 | 580), 1988-, 2SN | 4 | .Grille | .Galler | 5 |
| 0656 | 4A | 96 18 612 | 570,86,111), 2SN | 4 | .Grille | .Galler | 5 |
| 0660 | 5 | *98 57 525* | 90,121), 2SN, 4SN NLS - USE 7977903, 9540188 | 2 | Loudspeaker grille | Högtalargaller | 5 |

85. Ch. --H7014073
86. Ch. H7014074--
111. With cut for air grille. Med uttag för luftutsläpp.
121. Ch --H7023427
304. With loudspeaker Med högtalare
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-120

## Shelf
## Hatthylla

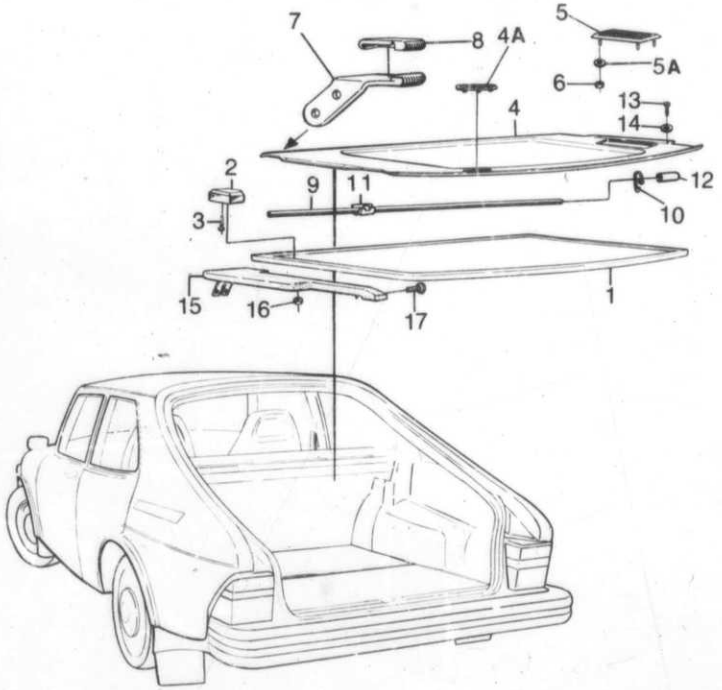


F1954 - 900

| 1625 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0680 | 5 | *98 63 432* | | 590,122,216), 2SN, 4SN | 2 | Loudspeaker grille | Högtalargaller | 5 |
| 0680 | | | | NLS - USE 9540188 | | | | |
| 0695 | 5 | 95 40 188 | | 590,217)-1988, 2SN, 4SN | 2 | Loudspeaker grille | Högtalargaller | 5 |
| 0697 | 5 | 95 40 576 | | 590,500),1989-, 2SN, 4SN | 2 | Loudspeaker grille | Högtalargaller | 5 |
| 0698 | | | | | | | | |
| 0700 | 5 | 98 57 509 | | 600,121), 2SN, 4SN | 2 | Loudspeaker grille | Högtalargaller | 5 |
| 0720 | 5 | 98 63 416 | | 600,122,216), 2SN, 4SN | 2 | Loudspeaker grille | Högtalargaller | 5 |
| 0735 | 5 | 95 40 154 | | 600,217), 2SN, 4SN | 2 | Loudspeaker grille | Högtalargaller | 5 |
| 0736 | | | | | | | | |
| 0740 | 5 | 98 57 517 | | 560,121), 2SN, 4SN | 2 | Loudspeaker grille | Högtalargaller | 5 |
| 0760 | 5 | 98 63 424 | | 560,122,243), 2SN, 4SN | 2 | Loudspeaker grille | Högtalargaller | 5 |
| 0775 | 5 | 95 40 139 | | 560,244), 2SN, 4SN | 2 | Loudspeaker grille | Högtalargaller | 5 |
| 0776 | | | | | | | | |
| 0800 | 5 | *98 57 533* | | 80,121), 2SN, 4SN NLS - | 2 | Loudspeaker grille | Högtalargaller | 5 |
| 0800 | | | | USE 7977903, 9863440 | | | | |
| 0820 | 5 | 98 63 440 | | 580,122)-1987, 2SN, 4SN | 2 | Loudspeaker grille | Högtalargaller | 5 |
| 0840 | 5 | *96 87 401* | | 1988-,245,580), 2SN, 4SN | 2 | Loudspeaker grille | Högtalargaller | 5 |
| 0840 | | | | NLS - USE 9540147 | | | | |
| 0855 | 5 | 95 40 147 | | 580,246), 2SN, 4SN | 2 | Loudspeaker grille | Högtalargaller | 5 |
| 0856 | | | | | | | | |
| 0860 | 5 | *98 66 237* | | 70,121), 2SN, 4SN NLS - | 2 | Loudspeaker grille | Högtalargaller | 5 |
| 0860 | | | | USE 7977903, 9540162 | | | | |
| 0880 | 5 | 98 63 598 | | 570,122,247), 2SN, 4SN | 2 | Loudspeaker grille | Högtalargaller | 5 |
| 0895 | 5 | 95 40 162 | | 570,248), 2SN, 4SN | 2 | Loudspeaker grille | Högtalargaller | 5 |
| 0896 | | | | | | | | |
| 0900 | 5A | 84 13 429 | | 1987-,216), 2SN, 4SN | 8 | Washer | Bricka | 5 |
| 0910 | 6 | 98 57 590 | | 121), 2SN, 4SN | 8 | Nut | Mutter | 5 |
| 0920 | 6 | 79 77 903 | | 122), 2SN, 4SN | 8 | Nut | Mutter | 5 |
| 0930 | 7 | 97 33 569 | | LH | 1 | Stop lug | Stoppklack | 6 |
| 0940 | 7 | 97 33 577 | | RH | 1 | Stop lug | Stoppklack | 6 |
| 0950 | 8 | 97 41 919 | | 590), -1988, LH | 1 | Cover | Kåpa | 5 |
| 0955 | 8 | 95 35 709 | | 590,500), 1989-, LH | 1 | Cover | Kåpa | 5 |
| 0960 | 8 | 97 41 927 | | 590), -1988, RH | 1 | Cover | Kåpa | 5 |
| 0965 | 8 | 95 35 717 | | 590,500), 1989-, RH | 1 | Cover | Kåpa | 5 |
| 0970 | 8 | 97 41 877 | | 600), LH | 1 | Cover | Kåpa | 5 |
| 0980 | 8 | 97 41 885 | | 600), RH | 1 | Cover | Kåpa | 5 |
| 0990 | 8 | 97 41 893 | | 560), LH | 1 | Cover | Kåpa | 5 |
| 1000 | 8 | 97 41 901 | | 560), RH | 1 | Cover | Kåpa | 5 |
| 1010 | 8 | 97 41 984 | | 580), -1987, LH | 1 | Cover | Kåpa | 5 |
| 1020 | 8 | 96 80 885 | | 580), 1988-, LH | 1 | Cover | Kåpa | 5 |
| 1030 | 8 | 97 41 992 | | 580), -1987, RH | 1 | Cover | Kåpa | 5 |
| 1040 | 8 | 96 80 893 | | 580), 1988-, RH | 1 | Cover | Kåpa | 5 |
| 1050 | 8 | 98 77 606 | | 610), LH | 1 | Cover | Kåpa | 5 |
| 1060 | 8 | 98 77 614 | | 610), RH | 1 | Cover | Kåpa | 5 |
| 1070 | 9 | 98 48 169 | | SN | 1 | Tube | Rör | 5 |
| 1080 | 10 | 98 48 177 | | SN | 2 | Spring | Fjäder | 5 |

121. Ch --H7023427
122. Ch H7023428--
216. Ch --J3026969, --J7031549
217. Ch J7031550--
243. Ch --J3025161, J7031397
244. Ch J3025162-, J7031398--
245. Ch --J3026024, --J7028542
246. Ch J3026025-, J7028543--
247. Ch --J3026341, --J7033689
248. Ch J3026342- J7033690--
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun
610. Black Svart



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-I22

## *Shelf*

## *Hatthylla*

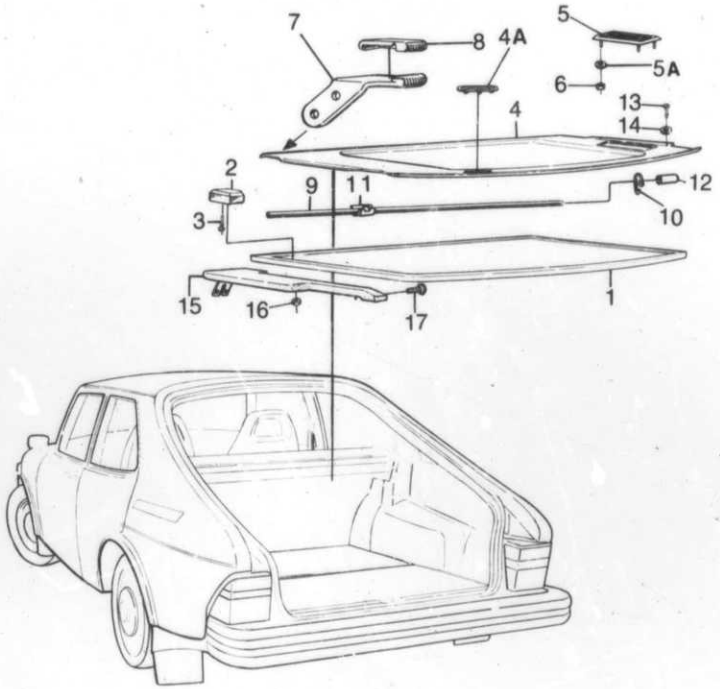


F1954 - 900


| 1625 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 1090 | 11 | 94 85 897 | | SN | 3 | Clamp | Klammer | 5 |
| 1100 | 12 | 98 48 185 | | SN | 2 | Sleeve | Hylsa | 5 |
| 1110 | 13 | 79 72 508 | | SN | 4 | Screw | Skruv | 5 |
| 1120 | 14 | 70 45 776 | | SN | 4 | Washer | Bricka | 5 |
| 1130 | 15 | 84 67 870 | | LH, CK | 1 | Support | Stöd | 5 |
| 1140 | 15 | 84 67 888 | | RH, CK | 1 | Support | Stöd | 5 |
| 1150 | 16 | 79 65 775 | | CK | 4 | Nut | Mutter | 5 |
| 1160 | 17 | 98 77 457 | | | 4 | Clip | Clips | 5 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

8B GROUP INDEX

| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

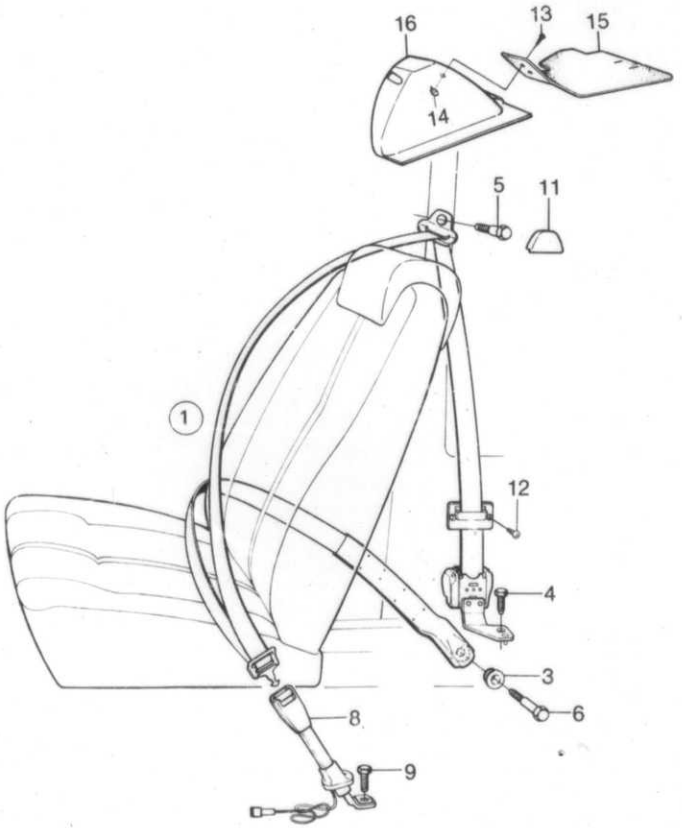


F5578 90086

| 1650 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 94 70 394 | | LH | 1 | Seat belt | Säkerhetsbälte | 3 |
| 0020 | 1 | 94 70 410 | | RH | 1 | Seat belt | Säkerhetsbälte | 3 |
| 0030 | 1 | *98 82 291* | | LH, CV NLS - USE 4077616, 4166716 | 1 | Seat belt | Säkerhetsbälte | 6 |
| 0040 | 1 | 98 82 309 | | RH, CV | 1 | Seat belt | Säkerhetsbälte | 6 |
| 0050 | 3 | *94 22 346* | | NLS | 2 | .Bearing sleeve | .Lagerhylsa | 5 |
| 0060 | 4 | 84 99 204 | | | 2 | Screw | Skruv | 5 |
| 0065 | 4 | 84 99 204 | | CV | 1 | .Screw | .Skruv | 5 |
| 0090 | 5 | *94 85 038* | | 175) NLS - USE 9681735 | 2 | Screw | Skruv | 5 |
| 0100 | 5 | 96 81 735 | | 176) | 2 | Screw | Skruv | 5 |
| 0110 | 5 | 84 99 204 | | CV | 1 | .Screw | .Skruv | 5 |
| 0115 | 6 | 94 85 020 | | | 2 | Screw | Skruv | 6 |
| 0120 | 8 | *97 24 071* | | -1986, LH NLS - USE 9611724 | 1 | Belt catch | Bältlås | |
| 0130 | 8 | 96 11 724 | | 1987-, LH | 1 | Belt catch | Bältlås | 5 |
| 0140 | 8 | *97 24 089* | | -1986, RH NLS - USE 9611732 | 1 | Belt catch | Bältlås | |
| 0150 | 8 | 96 11 732 | | 1987-, RH | 1 | Belt catch | Bältlås | 5 |
| 0155 | 8 | 96 11 732 | | 1989-, LH FOR RHD, JA | 1 | Belt catch | Bältlås | 5 |
| 0160 | 8 | *97 24 063* | | -1986, RH, US, CA, JA NLS - USE 9611740 | 1 | Belt catch | Bältlås | |
| 0170 | 8 | 96 11 740 | | 1987-, RH, US, CA, JA | 1 | Belt catch | Bältlås | 5 |
| 0180 | 8 | *97 24 071* | | 1987-, LH, AU NLS - USE 9611724 | 1 | Belt catch | Bältlås | |
| 0190 | 8 | *97 24 089* | | 1987-, RH, AU NLS - USE 9611732 | 1 | Belt catch | Bältlås | |
| 0200 | 9 | 84 99 204 | | | 2 | Screw | Skruv | 5 |
| 0210 | 11 | 94 85 657 | | | 2 | Cover | Kåpa | 5 |
| 0220 | 12 | 84 10 961 | | | 4 | Screw | Skruv | 5 |
| 0230 | 13 | 79 70 536 | | CV | 4 | Screw | Skruv | 6 |
| 0240 | 14 | 86 01 916 | | CV | 4 | Clip nut | Clipsmutter | 3 |
| 0250 | 15 | 98 24 830 | | 1987-, LH, CV | 1 | Protection | Skydd | 6 |
| 0260 | 15 | 98 24 848 | | 1987-, RH, CV | 1 | Protection | Skydd | 6 |
| 0280 | 16 | 96 48 999 | | LH | 1 | Cover | Kåpa | 4 |
| 0300 | 16 | 96 49 005 | | RH | 1 | Cover | Kåpa | 4 |

175. Ch. --J3009726
176. Ch. J3009727--



MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX

| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-J02

## Safety belt, front seat
## Automatic, 3CK, US

## Bilbälte framsäte
## Passivt, 3CK, US

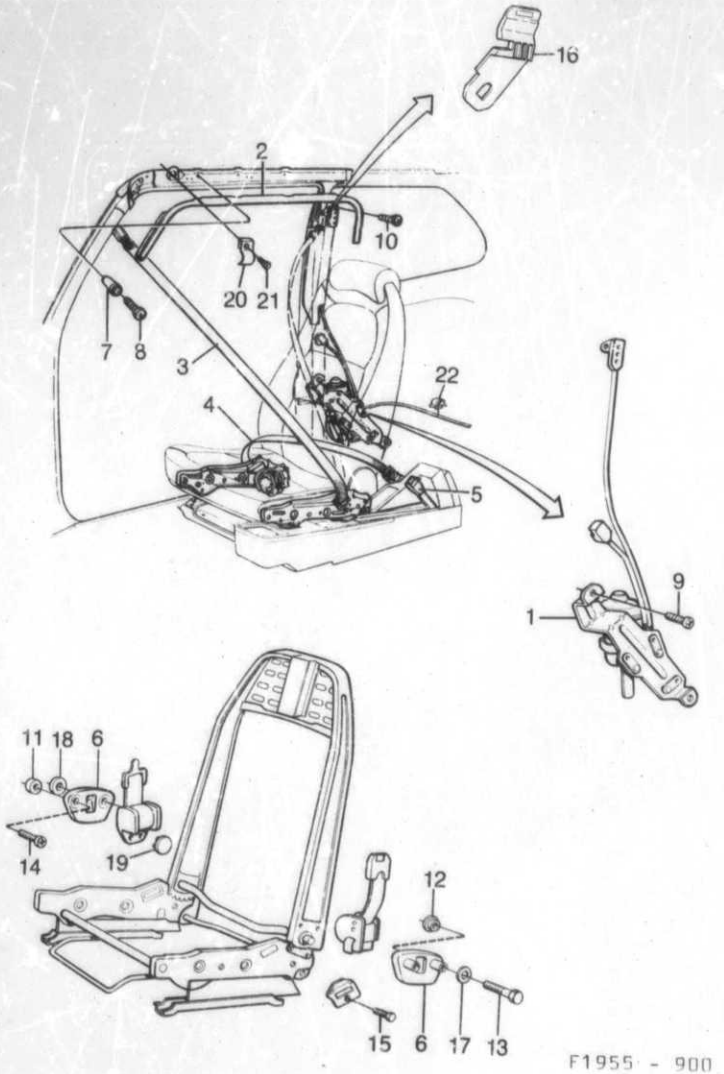


F1955 - 900

| 1660 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 98 57 871 | | LH | 1 | Transport mechanism | Transportmekanism | 5 |
| 0040 | 1 | 98 57 889 | | RH | 1 | Transport mechanism | Transportmekanism | 5 |
| 0060 | 2 | 98 73 357 | | LH | 1 | Rail | Skena | 5 |
| 0080 | 2 | 98 73 365 | | RH | 1 | Rail | Skena | 5 |
| 0100 | 3 | 98 57 830 | | LH | 1 | Seat belt | Säkerhetsbälte | 6 |
| 0120 | 3 | 98 57 848 | | RH | 1 | Seat belt | Säkerhetsbälte | 6 |
| 0140 | 4 | 98 57 855 | | LH | 1 | Lap belt | Höftbälte | 5 |
| 0160 | 4 | 98 57 863 | | RH | 1 | Lap belt | Höftbälte | 5 |
| 0180 | 5 | 96 11 724 | | LH | 1 | Belt catch | Bältlås | 5 |
| 0200 | 5 | 96 11 740 | | RH | 1 | Belt catch | Bältlås | 5 |
| 0220 | 6 | 98 62 897 | | 301), LH | 1 | Support | Fästkonsol | 6 |
| 0240 | 6 | 98 62 889 | | 301), RH | 1 | Support | Fästkonsol | 6 |
| 0260 | 6 | 98 62 913 | | 302) | 2 | Support | Fästkonsol | 6 |
| 0280 | 7 | 73 98 860 | | | 6 | Blind rivet nut | Blindnitmutter | 5 |
| 0300 | 8 | 80 59 263 | | | 6 | Screw | Skruv | 5 |
| 0320 | 9 | 80 59 545 | | | 4 | Screw | Skruv | 5 |
| 0340 | 10 | 79 78 075 | | | 4 | Screw | Skruv | 5 |
| 0360 | 11 | 98 62 939 | | 301) | 2 | Washer | Bricka | 5 |
| 0380 | 12 | 98 63 259 | | 302) | 2 | Washer | Bricka | 5 |
| 0400 | 13 | 98 63 838 | | | 6 | Screw | Skruv | 5 |
| 0420 | 14 | 98 64 372 | | | 2 | Screw | Skruv | 5 |
| 0440 | 15 | 79 68 878 | | | 4 | Rivet | Nit | 5 |
| 0460 | 16 | 96 70 027 | | 72) LH | 1 | Lock tab | Låstunga | 5 |
| 0480 | 16 | 96 11 773 | | 72) RH | 1 | Lock tab | Låstunga | 5 |
| 0500 | 17 | 79 78 067 | | 301) | 2 | Washer | Bricka | 5 |
| 0520 | 18 | 98 63 846 | | 302), -1987 | 4 | Washer | Bricka | 5 |
| 0530 | 18 | 79 16 513 | | 302), 1988- | 4 | Washer | Bricka | 5 |
| 0540 | 19 | 96 60 192 | | | 4 | Cover | Täcklock | 5 |
| 0560 | 20 | 98 79 206 | | | 6 | Clamp | Klämma | 6 |
| 0580 | 21 | 79 73 951 | | | 2 | Screw | Skruv | 5 |
| 0600 | 22 | 85 30 917 | | | 2 | Clip | Clips | 5 |

72. Normally placed in toolbox  Normalt placerad i verktygslåda
301. Driver seat  Förarstol
302. Passanger seat  Passagerarstol



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20, |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-J04

## *Safety belt, front seat*
## *4SN, 5CK*

## *Bilbälte framsäte*
## *4SN, 5CK*

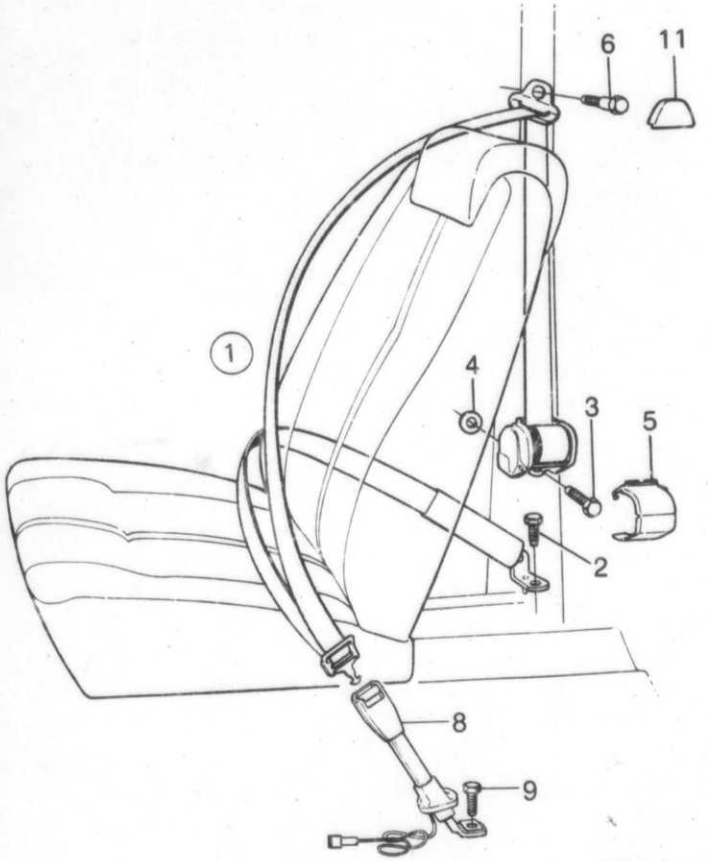


R 7115–900

| 1675 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 97 05 054 | | LH | 1 | Seat belt | Säkerhetsbälte | 3 |
| 0020 | 1 | 97 05 062 | | RH | 1 | Seat belt | Säkerhetsbälte | 3 |
| 0030 | 2 | 84 99 204 | | | 2 | ▪Screw | ▪Skruv | 5 |
| 0040 | 3 | 84 59 238 | | | 2 | ▪Screw | ▪Skruv | 6 |
| 0050 | 4 | 90 30 017 | | | 2 | ▪Washer | ▪Bricka | 5 |
| 0060 | 5 | 94 50 990 | | | 2 | ▪Cover | ▪Kåpa | 4 |
| 0070 | 6 | 97 24 717 | | 258) | 2 | Screw | Skruv | 5 |
| 0075 | 6 | 96 81 735 | | 259) | 2 | Screw | Skruv | 5 |
| 0080 | 8 | *97 24 071* | | -1986, LH NLS - USE | 1 | Belt catch | Bältlås | |
| 0080 | | | | 9611724 | | | | |
| 0090 | 8 | 96 11 724 | | 1987-, LH | 1 | Belt catch | Bältlås | 5 |
| 0100 | 8 | *97 24 089* | | -1986, RH NLS - USE | 1 | Belt catch | Bältlås | |
| 0100 | | | | 9611732 | | | | |
| 0110 | 8 | 96 11 732 | | 1987-, RH | 1 | Belt catch | Bältlås | 5 |
| 0115 | 8 | 96 11 732 | | 1989-, LH, RHD, JA | 1 | Belt catch | Bältlås | 5 |
| 0120 | 8 | *97 24 063* | | -1986, RH, US, CA, JA | 1 | Belt catch | Bältlås | |
| 0120 | | | | NLS - USE 9611740 | | | | |
| 0130 | 8 | 96 11 740 | | 1987-, RH, US, CA, JA | 1 | Belt catch | Bältlås | 5 |
| 0140 | 8 | *97 24 071* | | 1987-, LH, AU NLS - USE | 1 | Belt catch | Bältlås | |
| 0140 | | | | 9611724 | | | | |
| 0150 | 8 | *97 24 089* | | 1987-, RH, AU NLS - USE | 1 | Belt catch | Bältlås | |
| 0150 | | | | 9611732 | | | | |
| 0160 | 9 | 84 99 204 | | | 2 | Screw | Skruv | 5 |
| 0170 | 11 | 94 85 657 | | | 2 | Cover | Kåpa | 5 |

258. Ch. –J3027578, –J7038545
259. Ch. J3027579–, J7038546–



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 6-J06

## *Safety belt, rear seat*

## *Bilbälte, baksäte*

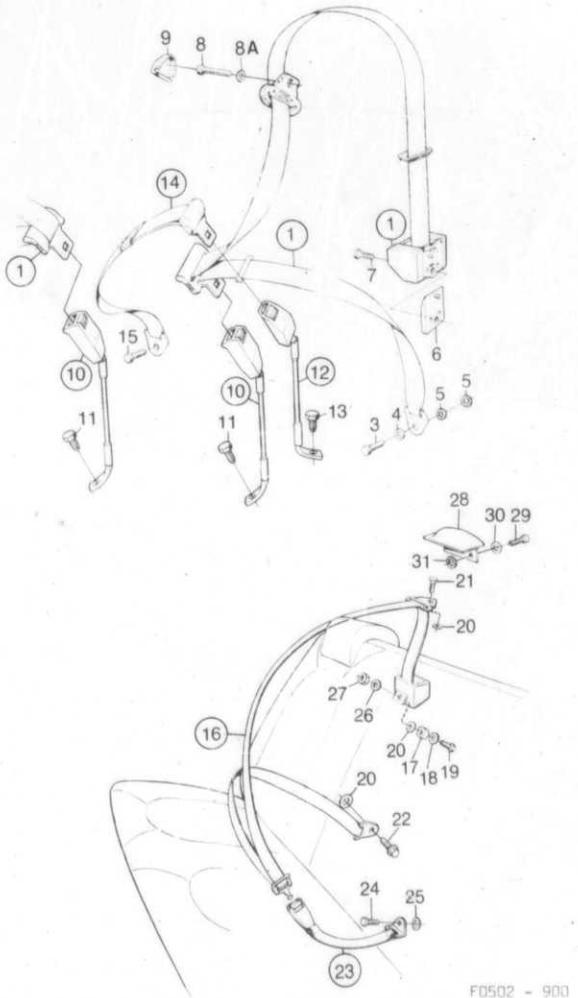


F0502 - 900

| 3725 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 97 31 969 | | LH, 2SN, 3CK | 1 | Seat belt | Säkerhetsbälte | 5 |
| 0040 | 1 | 97 31 977 | | RH, 2SN, 3CK | 1 | Seat belt | Säkerhetsbälte | 5 |
| 0060 | 1 | 97 31 984 | | LH, 4SN, 5CK | 1 | Seat belt | Säkerhetsbälte | 5 |
| 0080 | 1 | 97 31 092 | | RH, 4SN, 5CK | 1 | Seat belt | Säkerhetsbälte | 5 |
| 0100 | 3 | 84 99 238 | | | 2 | .Screw | .Skruv | 6 |
| 0120 | 4 | 80 30 017 | | 2SN, 3CK | 2 | .Washer | .Bricka | 5 |
| 0140 | 5 | *94 57 490* | | NLS | 2 | .Spacer sleeve | .Distanshylsa | 5 |
| 0160 | 6 | 94 22 411 | | 4SN, 5CK | 2 | .Spacer washer | .Distansbricka | 5 |
| 0180 | 7 | 84 99 238 | | 4SN, 5CK | 2 | .Screw | .Skruv | 6 |
| 0200 | 7 | 84 99 204 | | 2SN, 3CK | 2 | Screw | Skruv | 5 |
| 0220 | 8 | 97 24 717 | | | 2 | Screw | Skruv | 5 |
| 0225 | 8 | 94 85 020 | | 53), 2SN, 3CK | 2 | Screw | Skruv | 6 |
| 0230 | 8A | 73 98 340 | | 2SN | 2 | Washer | Bricka | 5 |
| 0240 | 9 | 94 85 657 | | | 2 | Cover | Kåpa | 5 |
| 0260 | 10 | 98 11 001 | | LH | 1 | Belt catch | Bältlås | 6 |
| 0300 | 10 | 98 11 019 | | RH | 1 | Belt catch | Bältlås | 6 |
| 0340 | 11 | 84 99 238 | | | 3 | .Screw | .Skruv | 6 |
| 0360 | 12 | 98 10 961 | | | 1 | Belt catch | Bältlås | 6 |
| 0390 | 12 | 98 82 929 | | LH, CV | 1 | Belt catch | Bältlås | 6 |
| 0395 | 12 | 98 83 661 | | RH, CV | 1 | Belt catch | Bältlås | 6 |
| 0400 | 13 | 84 99 238 | | | 1 | .Screw | .Skruv | 6 |
| 0410 | 13 | 84 99 238 | | CV | 2 | .Screw | .Skruv | 6 |
| 0420 | 14 | *97 31 506* | | 52) NLS - USE 9611674 | 1 | Lap belt | Höftbälte | 5 |
| 0425 | 14 | 96 11 674 | | 53) | 1 | Lap belt | Höftbälte | 5 |
| 0430 | 14 | 98 82 358 | | 196) LH, CV | 1 | Lap belt | Höftbälte | 5 |
| 0435 | 14 | 98 82 366 | | 196) RH, CV | 1 | Lap belt | Höftbälte | 5 |
| 0440 | 15 | 84 99 204 | | | 1 | .Screw | .Skruv | 5 |
| 0450 | 15 | 84 99 204 | | CV | 2 | .Screw | .Skruv | 5 |
| 0460 | 16 | 96 45 235 | | 197) CV | 2 | Seat belt | Säkerhetsbälte | 5 |
| 0480 | 17 | 96 46 290 | | 197) CV | 1 | .Spacer sleeve | .Distanshylsa | 5 |
| 0500 | 18 | 80 30 017 | | 197) CV | 1 | .Washer | .Bricka | 5 |
| 0520 | 19 | 96 46 308 | | 197) CV | 1 | .Screw | .Skruv | 5 |
| 0540 | 20 | 98 50 876 | | 197) CV | 2 | .Lock washer | .Låsbricka | 5 |
| 0560 | 21 | 84 99 204 | | 197) CV | 1 | .Screw | .Skruv | 5 |
| 0580 | 22 | 73 99 165 | | 197) CV | 1 | .Screw | .Skruv | 5 |
| 0600 | 23 | 96 45 250 | | 197) CV, LH | 1 | Belt catch | Bältlås | 6 |
| 0620 | 23 | 96 45 268 | | 197) CV, RH | 1 | Belt catch | Bältlås | 6 |
| 0640 | 24 | 84 99 238 | | 197) CV | 1 | .Screw | .Skruv | 6 |
| 0660 | 25 | 98 50 876 | | 197) CV | 1 | .Lock washer | .Låsbricka | 5 |
| 0680 | 26 | 89 09 632 | | 197) CV | 2 | Washer | Bricka | 5 |
| 0700 | 27 | 96 47 140 | | 197)-1988, CV | 2 | Nut | Mutter | 5 |
| 0710 | 27 | 91 60 664 | | 500)1989-, CV | 2 | Nut | Mutter | 5 |
| 0720 | 28 | 69 97 472 | | 197) CV, LH | 1 | Cover | Kåpa | 6 |
| 0740 | 28 | 69 97 480 | | 197) CV, RH | 1 | Cover | Kåpa | 6 |
| 0760 | 29 | 73 99 637 | | 197) CV | 4 | Screw | Skruv | 5 |
| 0780 | 30 | 79 74 249 | | 197) CV | 4 | Washer | Bricka | 5 |
| 0800 | 31 | 79 15 564 | | 1988-, CV | 4 | Star washer | Taggbricka | 5 |

52. Ch. --G3019308
53. Ch. G3019309--
196. Ch. --J7005071
197. Ch. J7005072--
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

Complete set
# 6-J08
## *Car body, internal*


Satser
## *Kaross, invändig*

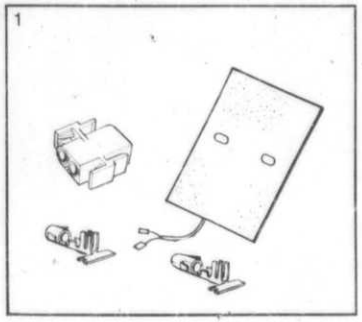


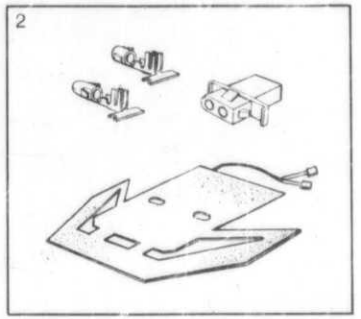






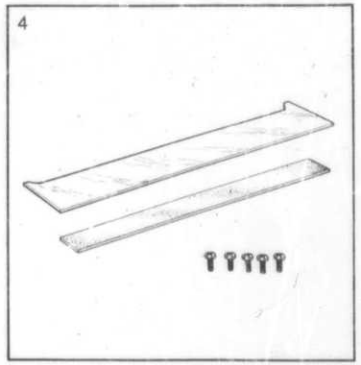

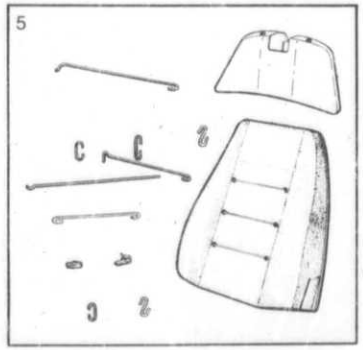

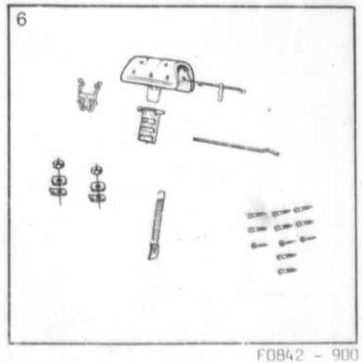F0842 - 900

| 2500 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 85 47 523 | | | X | Heating element kit | Värmedynesats | 9 |
| 0011 | | | | | | backrest cushion | ryggdyna | |
| 0020 | | 85 44 298 | | | 2 | .Cable terminal | .Kabelsko | 5 |
| 0030 | | 85 61 631 | | | 1 | .Connector housing | .Skarvhus | 4 |
| 0040 | | 95 69 955 | | | 1 | .Heating pad | .Värmedyna | 4 |
| 0050 | | | | | | | | |
| 0060 | 2 | 85 47 515 | | 100) | X | Heating element kit | Värmedynesats | 9 |
| 0061 | | | | | | seat cushion | sittdyna | |
| 0070 | | *85 44 314* | | NLS - USE 8582603 | 2 | .Cable terminal | .Kabelsko | 5 |
| 0080 | | 85 61 623 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 0090 | | 40 63 855 | | | 1 | .Heating pad | .Värmedyna | 4 |
| 0100 | | | | | | | | |
| 0110 | 2 | 85 47 507 | | | X | Heating element kit | Värmedynesats | 9 |
| 0111 | | | | | | seat cushion | sittdyna | |
| 0120 | | *85 44 314* | | NLS - USE 8582603 | 2 | .Cable terminal | .Kabelsko | 5 |
| 0130 | | 85 61 623 | | | 1 | .Contact housing | .Kontakthus | 4 |
| 0140 | | *95 27 698* | | NLS - USE 4063848 | 1 | .Heating pad | .Värmedyna | 4 |
| 0150 | | | | | | | | |
| 0160 | 3 | *97 46 272* | | -1988, 2SN, 3CK NLS | X | Water drainage kit | Vattenavledarsats | 5 |
| 0160 | | | | USE 4049003 | | | | |
| 0180 | | *92 34 399* | | 1) NLS | 2 | .Diverter | .Avledare | 5 |
| 0190 | | *92 31 150* | | 1) NLS | 2 | .Diverter | .Avledare | 5 |
| 0200 | | | | | | | | |
| 0210 | 3 | 97 46 280 | | 41), 4SN, 5CK | X | Water drainage kit | Vattenavledarsats | 5 |
| 0240 | | *92 31 044* | | 1) NLS | 2 | .Diverter | .Avledare | 5 |
| 0250 | | *92 31 101* | | 1) NLS | 2 | .Diverter | .Avledare | 5 |
| 0260 | | | | | | | | |
| 0270 | 4 | *96 98 325* | | 1986 CV, TRIM COLOUR E33 | X | Repair kit | Reparationssats | 6 |
| 0280 | | | | NLS | | door trim | dörrklädsel | |
| 0290 | | 79 72 201 | | | 5 | .Screw | .Skruv | 5 |
| 0300 | | *96 45 011* | | LH NLS | 1 | .Upholstery | .Klädsel | 6 |
| 0310 | | *98 24 988* | | NLS | 1 | .Framework | .Stomme | 6 |
| 0320 | | | | | | | | |
| 0330 | 4 | *96 98 333* | | 1986 CV, TRIM COLOUR E33 | X | Repair kit | Reparationssats | 6 |
| 0340 | | | | NLS | | door trim | dörrklädsel | |
| 0350 | | 79 72 201 | | | 5 | .Screw | .Skruv | 5 |
| 0360 | | *96 45 003* | | RH NLS | 1 | .Upholstery | .Klädsel | 6 |
| 0370 | | *98 24 988* | | NLS | 1 | .Framework | .Stomme | 6 |
| 0375 | | | | | | | | |
| 0380 | 5 | 96 14 520 | | 139), 1988- | 2 | Mounting kit | Monteringssats | 6 |
| 0390 | | 97 26 795 | | | 2 | .Cover rod | .Klädselbåge | 5 |
| 0400 | | 84 00 350 | | | 10 | .Clip | .Clips | 5 |
| 0410 | | 94 50 685 | | | 6 | .Clamp | .Klammer | 5 |
| 0420 | | 95 84 749 | | | 2 | .Wire rod | .Trådten | 5 |
| 0430 | | 97 02 465 | | | 1 | .Cover | .Kåpa | 6 |
| 0440 | | 96 88 458 | | | 1 | .Backrest cushion | .Ryggdyna | 6 |
| 0450 | | 97 69 217 | | | 2 | .Hook | .Krok | 5 |
| 0460 | | 94 59 975 | | | 4 | .Clip | .Clips | 5 |
| 0470 | | | | | | | | |
| 0480 | 5 | 95 30 155 | | 119), 1988- | 2 | Mounting kit | Monteringssats | 6 |
| 0490 | | 97 26 795 | | | 2 | .Cover rod | .Klädselbåge | 5 |
| 0500 | | 84 00 350 | | | 10 | .Clip | .Clips | 5 |
| 0510 | | 94 50 685 | | | 4 | .Clamp | .Klammer | 5 |
| 0520 | | 96 94 969 | | 1) | 2 | .Wire rod | .Trådten | 5 |
| 0530 | | 97 02 465 | | | 1 | .Cover | .Kåpa | 6 |
| 0540 | | 96 88 458 | | | 1 | .Backrest cushion | .Ryggdyna | 6 |
| 0550 | | 97 69 209 | | | 6 | .Hook | .Krok | 5 |
| 0560 | | 97 69 217 | | | 4 | .Hook | .Krok | 5 |

1. Not as separate spare part. Ej som separat reservdel.
41. Ch. --G3001848, --G2002124, --G7006825.
100. For seats with adjustable heating För stolar med justerbar värme
119. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
139. For cars with upholstery "VIKTORIA" För bilar med klädsel "VIKTORIA"



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

Complete set
# 6-J10
## *Car body, internal*


Satser
## *Kaross, invändig*

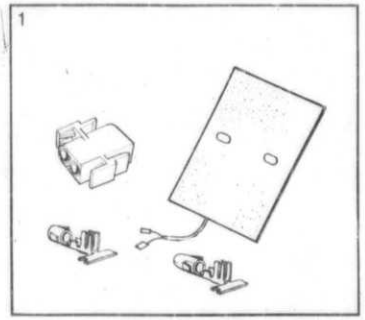


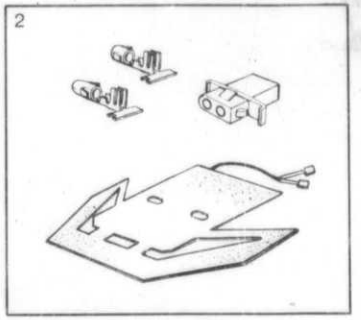






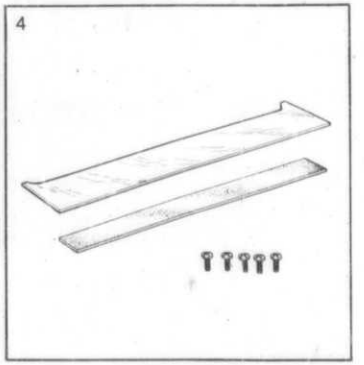

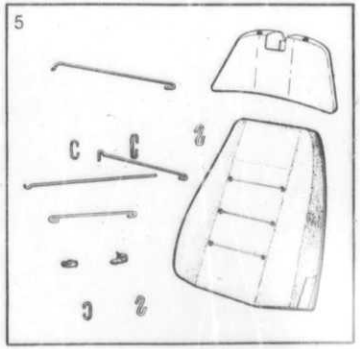

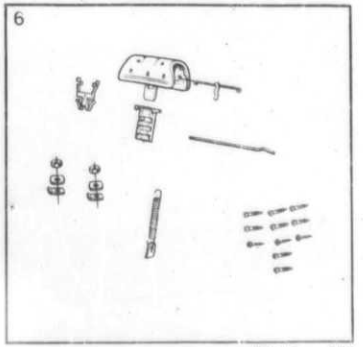F0842 - 900

| 2500 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0570 | | 97 69 225 | | | 4 | . Hook | . Krok | 5 |
| 0580 | | 94 59 975 | | | 4 | . Clip | . Clips | 5 |
| 0590 | | 95 84 715 | | 1) | 2 | . Wire rod | . Trådten | 5 |
| 0600 | | 95 84 731 | | | 2 | . Wire rod | . Trådten | 5 |
| 0610 | | | | | | | | |
| 0620 | 5 | 96 14 546 | | 14), 1988- | 2 | Mounting kit | Monteringssats | 6 |
| 0630 | | 97 26 795 | | | 2 | . Cover rod | . Klädselbåge | 5 |
| 0640 | | 84 00 350 | | | 10 | . Clip | . Clips | 5 |
| 0650 | | 94 50 685 | | | 4 | . Clamp | . Klammer | 5 |
| 0660 | | 97 02 465 | | | 1 | . Cover | . Kåpa | 6 |
| 0670 | | 98 57 731 | | | 1 | . Backrest cushion | . Ryggdyna | 6 |
| 0680 | | 97 26 779 | | 1) | 1 | . Attaching bracket | . Fästvinkel | 5 |
| 0690 | | 79 61 642 | | | 1 | . Rivet | . Nit | 5 |
| 0700 | | 97 40 663 | | 1) | 1 | . Elastic | . Resårband | 6 |
| 0710 | | | | | | | | |
| 0720 | 5 | 96 18 737 | | 60,139) 1989- | 2 | Mounting kit | Monteringssats | 6 |
| 0730 | | 98 79 826 | | | 1 | . Cover rod | . Klädselbåge | 5 |
| 0740 | | 94 50 685 | | | 10 | . Clamp | . Klammer | 5 |
| 0750 | | 95 84 749 | | | 2 | . Wire rod | . Trådten | 5 |
| 0760 | | 97 69 217 | | | 1 | . Hook | . Krok | 5 |
| 0770 | | 97 69 225 | | | 2 | . Hook | . Krok | 5 |
| 0780 | | 97 81 592 | | | 2 | . Cover rod | . Klädselbåge | 5 |
| 0790 | | | | | | | | |
| 0800 | 5 | 95 30 163 | | 60,119) 1988- | 2 | Mounting kit | Monteringssats | 6 |
| 0810 | | 98 79 826 | | | 1 | . Cover rod | . Klädselbåge | 5 |
| 0820 | | 96 94 969 | | 1) | 2 | . Wire rod | . Trådten | 5 |
| 0830 | | 94 50 685 | | | 8 | . Clamp | . Klammer | 5 |
| 0840 | | 95 84 715 | | 1) | 2 | . Wire rod | . Trådten | 5 |
| 0850 | | 97 69 217 | | | 10 | . Hook | . Krok | 5 |
| 0860 | | 97 69 209 | | | 4 | . Hook | . Krok | 5 |
| 0870 | | 97 81 592 | | | 2 | . Cover rod | . Klädselbåge | 5 |
| 0880 | | 95 84 723 | | 1) | 2 | . Wire rod | . Trådten | 5 |
| 0890 | | 95 93 245 | | | 2 | . Attaching brace | . Fästbygel | 5 |
| 0900 | | | | | | | | |
| 0910 | 5 | 95 93 930 | | 60,14) 1988- | 2 | Mounting kit | Monteringssats | 6 |
| 0920 | | 94 50 685 | | | 8 | . Clamp | . Klammer | 5 |
| 0930 | | 97 81 592 | | | 2 | . Cover rod | . Klädselbåge | 5 |
| 0940 | | | | | | | | |
| 0950 | 6 | 96 14 512 | | 1988- | 2 | Mounting kit | Monteringssats | 6 |
| 0960 | | 97 18 131 | | | 2 | . Hex. socket screw | . Insexskruv | 5 |
| 0970 | | 79 70 536 | | | 2 | . Screw | . Skruv | 6 |
| 0980 | | 79 81 921 | | | 2 | . Screw | . Skruv | 5 |
| 0990 | | 79 22 396 | | | 1 | . Screw | . Skruv | 5 |
| 1000 | | 97 15 525 | | | 2 | . Screw | . Skruv | 5 |
| 1010 | | 80 74 288 | | | 1 | . Nut | . Mutter | 5 |
| 1020 | | 89 39 449 | | | 1 | . Washer | . Bricka | 5 |
| 1030 | | 98 49 795 | | | 1 | . Nut | . Mutter | 5 |
| 1040 | | 98 09 690 | | | 1 | . Framework | . Stomme | 6 |
| 1050 | | 94 59 868 | | | 1 | . Wire rod | . Trådten | 6 |
| 1060 | | 40 31 563 | | | 1 | . Sleeve | . Hylsa | 5 |
| 1070 | | 97 96 848 | | | 1 | . Locking spring | . Spärrfjäder | 5 |
| 1080 | | 98 33 971 | | | 1 | . Clip | . Clips | 5 |
| 1090 | | 89 35 751 | | | 1 | . Spring | . Fjäder | 5 |
| 1100 | | 94 16 181 | | | 1 | . Wire rod | . Trådten | 5 |
| 1110 | | | | | | | | |
| 1120 | 6 | 96 18 729 | | 60), 1988- | 2 | Mounting kit | Monteringssats | 6 |
| 1130 | | 80 59 396 | | | 2 | . Screw | . Skruv | 5 |
| 1140 | | 97 81 204 | | | 4 | . Screw | . Skruv | 5 |

1. Not as separate spare part. Ej som separat reservdel.
14. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
60. For cars with automatic belts För bilar med passivt bälte
119. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
139. For cars with upholstery "VIKTORIA" För bilar med klädsel "VIKTORIA"



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |


Complete set


# 6-J12

## *Car body, internal*

Satser


## *Kaross, invändig*

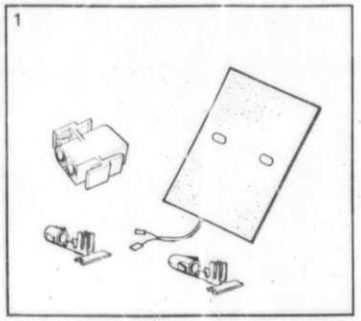


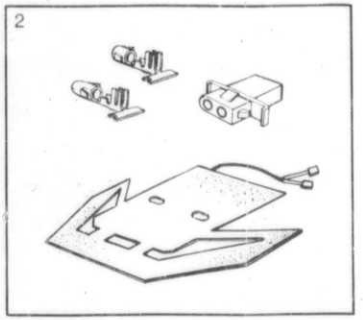






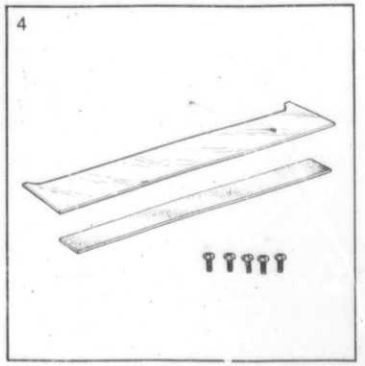

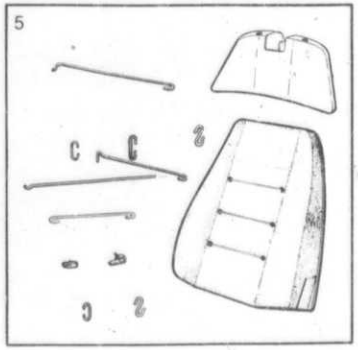

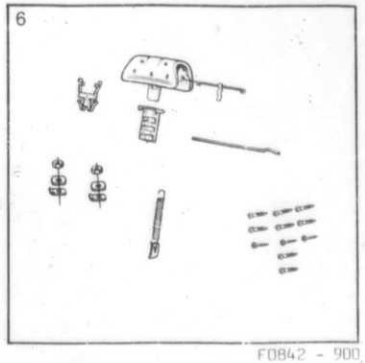F0842 - 900

| 2500 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 1150 | 80 59 537 | | | 4 | .Screw | .Skruv | 5 |
| 1160 | 79 71 294 | | | 4 | .Screw | .Skruv | 5 |
| 1170 | 79 22 396 | | | 1 | .Screw | .Skruv | 5 |
| 1180 | 79 22 271 | | | 1 | .Screw | .Skruv | 5 |
| 1190 | 96 19 032 | | | 1 | .Nut | .Mutter | 5 |
| 1200 | 96 19 040 | | | 1 | .Nut | .Mutter | 5 |
| 1210 | 79 77 846 | | 1) | 2 | .Cage nut | .Korgmutter | 6 |
| 1220 | 80 29 951 | | | 4 | .Washer | .Bricka | 5 |
| 1230 | 80 29 944 | | | 1 | .Washer | .Bricka | 5 |
| 1240 | *97 67 815* | | NLS - USE 9547688 | 1 | .Head restraint | .Nackstöd | 6 |
| 1250 | 97 40 663 | | | 2 | .Elastic | .Resårband | 6 |
| 1260 | 94 59 868 | | | 1 | .Wire rod | .Trådten | 6 |
| 1270 | 40 31 563 | | | 1 | .Sleeve | .Hylsa | 5 |
| 1280 | 97 96 848 | | | 1 | .Locking spring | .Spärrfjäder | 5 |
| 1290 | *79 15 077* | | NLS - USE 7963143 | 1 | .E-circlip | .Spårryttare | 5 |
| 1300 | 97 92 301 | | | 1 | .Crash pad | .Stötskydd | 6 |
| 1310 | 96 18 232 | | | 1 | .Spacer | .Distans | 5 |
| 1320 | 98 74 819 | | | 1 | .Knob | .Knopp | 3 |
| 1330 | 98 74 801 | | | 1 | .Slide | .Slid | 6 |
| 1340 | 96 86 841 | | | 1 | .Clamp | .Klämma | 5 |
| 1350 | 40 52 734 | | | 1 | .Cover | .Kåpa | 6 |
| 1360 | 40 52 742 | | | 1 | .Cover | .Kåpa | 6 |
| 1370 | 79 71 518 | | | 1 | ..Lock washer | ..Spärrbricka | 5 |

1. Not as separate spare part. Ej som separat reservdel.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8B GROUP INDEX



| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |


Complete set
# 6-J14
## *Car body, internal*


Satser
## *Kaross, invändig*

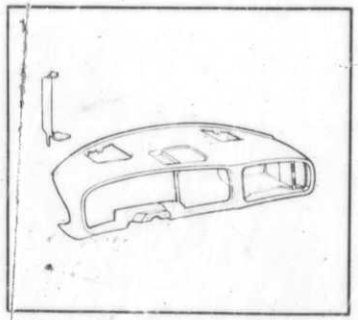

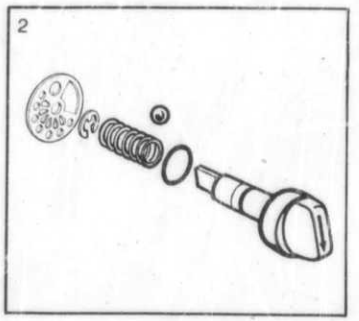

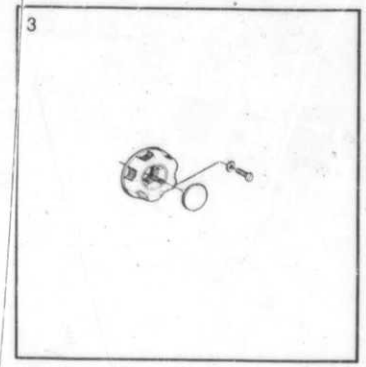

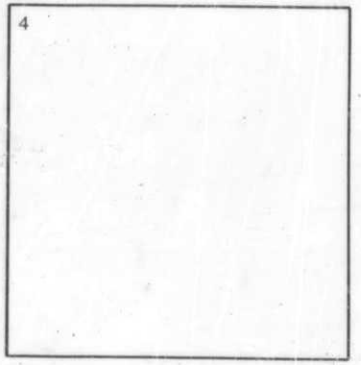F1956 - 900
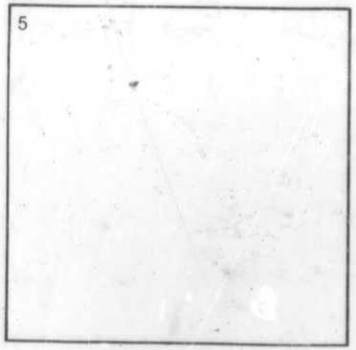
| 2550 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 96 99 257 | | 610) | 1 | Panel kit | Panelsats | 6 |
| 0020 | | *96 11 336* | | NLS - USE 4082830 | 1 | .Panel | .Panel | 6 |
| 0030 | | *96 11 534* | | LH NLS - USE 4259560 | 1 | .Crash pad | .Stötskydd | 6 |
| 0050 | | 96 11 559 | | RH | 1 | .Crash pad | .Stötskydd | 6 |
| 0070 | | 96 80 224 | | | 4 | .Plastic washer | .Plastbricka | 5 |
| 0080 | | 96 18 299 | | | 1 | .Screw | .Skruv | 5 |
| 0090 | | *94 34 614* | | NLS - USE 4155636 | 1 | .Screw | .Skruv | 5 |
| 0100 | | 96 18 315 | | | 1 | .Screw | .Skruv | 5 |
| 0110 | | 96 18 281 | | | 1 | .Screw | .Skruv | 5 |
| 0111 | | | | | | | | |
| 0112 | 1 | 96 99 778 | | 560) | 1 | Panel kit | Panelsats | 6 |
| 0113 | | 40 36 273 | | | 1 | .Panel | .Panel | 6 |
| 0114 | | 96 11 526 | | LH | 1 | .Crash pad | .Stötskydd | 6 |
| 0115 | | 96 11 542 | | RH | 1 | .Crash pad | .Stötskydd | 6 |
| 0116 | | 96 80 224 | | | 4 | .Plastic washer | .Plastbricka | 5 |
| 0117 | | 96 18 299 | | | 1 | .Screw | .Skruv | 5 |
| 0118 | | *94 34 614* | | NLS - USE 4155636 | 1 | .Screw | .Skruv | 5 |
| 0119 | | 96 18 315 | | | 1 | .Screw | .Skruv | 5 |
| 0120 | | 96 18 281 | | | 1 | .Screw | .Skruv | 5 |
| 0121 | | 82 77 667 | | | 4 | .Sleeve | .Hylsa | 5 |
| 0122 | | 98 41 925 | | | 4 | .Clamp | .Klämma | 5 |
| 0123 | | 98 41 933 | | | 4 | .Rivet | .Nit | 5 |
| 0129 | | | | | | | | |
| 0130 | 2 | 97 46 694 | | | X | Control set | Reglagesats | 3 |
| 0160 | | 94 81 425 | | | 1 | .Knob | .Vred | 6 |
| 0170 | | 79 36 008 | | | 1 | .E-circlip | .Spårryttare | 5 |
| 0180 | | 94 20 043 | | | 1 | .Ball | .Kula | 5 |
| 0190 | | 94 20 035 | | | 1 | .Spring | .Fjäder | 5 |
| 0200 | | 94 25 844 | | | 1 | .Washer | .Bricka | 6 |
| 0210 | | 79 72 078 | | | 1 | .O-ring | .O-ring | 2 |
| 0220 | | | | | | | | |
| 0230 | 3 | 96 18 752 | | | X | Mounting kit | Monteringssats | 6 |
| 0240 | | 80 29 951 | | | 1 | .Washer | .Bricka | 5 |
| 0250 | | 95 46 946 | | | 1 | .Hand wheel | .Ratt | 5 |
| 0260 | | 95 89 045 | | | 1 | .Reinforcement | .Förstärkning | 5 |
| 0270 | | 98 51 619 | | | 1 | .Cover | .Täcklock | 6 |
| 0280 | | 80 59 560 | | | 1 | .Screw | .Skruv | 5 |

560. Red Röd
610. Black Svart



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8B GROUP INDEX


| | |
|---|---|
| Instrument panel | 6-A06 |
| Upholstery | 6-A20 |
| Other interior equipment | 6-G04 |
| Complete sets: | 6-J08 |

# 8C

Body, heating and ventilation
Kaross, värme- och ventilation
Carrocería, calefacción y ventilación

0041
0030
0040
0050
1260
1270
1280
1290
1300
1310
1320
1330
1340
1350
1360
1380
1400

TABLE OF CONTENTS


| | | |
|---|---|---|
| **Heating and ventilation system** | | |
| Heater core, water valve etc | 8C : 5 | 7-A06 |
| Fan unit, air filter etc | 8C : 7 | 7-A08 |
| Draft channels, control etc Part 1 | 8C : 9 | 7-A10 |
| Draft channels, control etc Part 2 | 8C : 11 | 7-A12 |
| Vacuum system | 8C : 13 | 7-A14 |
| Air conditioning, compressor part B201 (Sanden) | 8C : 17 | 7-A18 |
| Air conditioning, compressor part B202 (Sanden) | 8C : 21 | 7-A22 |
| Air conditioning, evaporator part (Sanden) | 8C : 23 | 7-A24 |
| Air conditioning, compressor part (Clarion) | 8C : 27 | 7-B04 |
| Air conditioning, evaporator part (Clarion) | 8C : 29 | 7-B06 |
| **Complete sets** | | |
| Car body, heating and ventilation | 8C : 31 | 7-B08 |


MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8C GROUP INDEX


| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets | 7-B08 |

# 7-A03

0042
1420
1500
1510
2700
2710
2720
2730
2740
2750
2760
2770
2780
2790
2800
2820
2840
4280
6000
7000
7010
7020
7030
7040
7050
7060
7070
7080
7090
7100
7110
7170
7180

## INNEHÅLLSFÖRTECKNING


**Värme- och ventilationssystem**

| | | |
|---|---|---|
| Värmeväxlare, värmekran etc | 8C : 5 | 7-A06 |
| Fläktenhet, luftfilter etc | 8C : 7 | 7-A08 |
| Fördelningskanaler, reglage etc del 1 | 8C : 9 | 7-A10 |
| Fördelningskanaler, reglage etc del 2 | 8C : 11 | 7-A12 |
| Vacuumsystem | 8C : 13 | 7-A14 |
| Luftkonditionering, kompressordel B201 (Sanden) | 8C : 17 | 7-A18 |
| Luftkonditionering, kompressordel B202 (Sanden) | 8C : 21 | 7-A22 |
| Luftkonditionering, förångardel (S anden) | 8C : 23 | 7-A24 |
| Luftkonditionering, kompressordel (Clarion) | 8C : 27 | 7-B04 |
| Luftkonditionering, förångardel (Clarion) | 8C : 29 | 7-B06 |
| **Satser:** | | |
| Kaross, värme och ventilation | 8C : 31 | 7-B08 |


## SUMARIO


**Sistema de calefaccion y ventilacion**

| | | |
|---|---|---|
| Cambiador de calor, valvua de agua etc | 8C : 5 | 7-A06 |
| Ventilador de la calleaccion, filtro de aire | 8C : 7 | 7-A08 |
| Canales de distribucion, del piso etc 1a parte | 8C : 9 | 7-A10 |
| Canales de distribucion, del piso etc 2a parte | 8C : 11 | 7-A12 |
| Sistema de vacio | 8C : 13 | 7-A14 |
| Aire acondicionado, unidad de compresor B201 (Sanden) | 8C : 17 | 7-A18 |
| Aire acondicionado, unidad de compresor B202 (Sanden) | 8C : 21 | 7-A22 |
| Aire acondicionado, unidad de evadorador (Sanden) | 8C : 23 | 7-A24 |
| Aire acondicionado, unidad de compresor (Clarion) | 8C : 27 | 7-B04 |
| Aire acondicionado, unidad de evaporador (Clarion) | 8C : 29 | 7-B06 |
| **Juegos completos** | | |
| Carosseria, calefaccion y ventilation | 8C : 31 | 7-B08 |





**MASTER INDEX**

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


**8C GROUP INDEX**

| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets: | 7-B08 |

# 7-A06

## *Heat exchanger* / *Värmeväxlare*

## *Water valve* / *Värmekran*

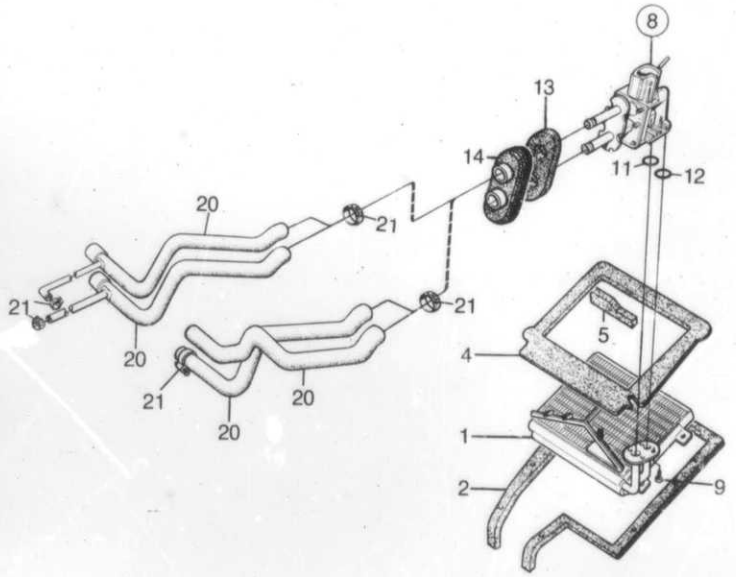


9460 - 900

| 1851 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *94 81 722* | | -1988 NLS - USE 9482555 | 1 | Heat exchanger | Värmeväxlare | 4 |
| 0020 | 1 | 94 82 555 | | 500) 1989- | 1 | Heat exchanger | Värmeväxlare | 4 |
| 0030 | 2 | 94 18 039 | | | 1 | Seal | Tätning | 5 |
| 0040 | 4 | 94 01 001 | | | 1 | Seal | Tätning | 5 |
| 0050 | 5 | 94 01 084 | | | 1 | Seal | Tätning | 5 |
| 0060 | 8 | *97 46 322* | | See page 8C-031, 7-B08 | 1 | Water valve | Värmekran | 9 |
| 0060 | | | | NLS - USE 8605388 | | | | |
| 0070 | 9 | 80 97 750 | | | 4 | .Screw | .Skruv | 5 |
| 0080 | 11 | 94 79 213 | | | 1 | .O-ring | .O-ring | 2 |
| 0090 | 12 | 94 79 221 | | | 1 | .O-ring | .O-ring | |
| 0100 | 13 | 94 45 438 | | | 1 | Insulation | Isolering | 6 |
| 0110 | 14 | 94 01 076 | | | 1 | Seal | Tätning | 5 |
| 0120 | 20 | | | B201 | | Water hose | Vattenslang | |
| 0130 | | | | See page 2-153, 1-H10 | | | | |
| 0140 | 20 | | | B202 | | Water hose | Vattenslang | |
| 0150 | | | | See page 2-161, 1-H18 | | | | |
| 0160 | 21 | | | B201 | | Hose clamp | Slangklämma | |
| 0170 | | | | See page 2-153, 1-H10 | | | | |
| 0180 | 21 | | | B202 | | Hose clamp | Slangklämma | |
| 0190 | | | | See page 2-161, 1-H18 | | | | |

500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8C GROUP INDEX


| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets: | 7-B08 |

# 7-A08

## *Fan unit*
## *Air filter*

## *Fläktenhet*
## *Luftfilter*

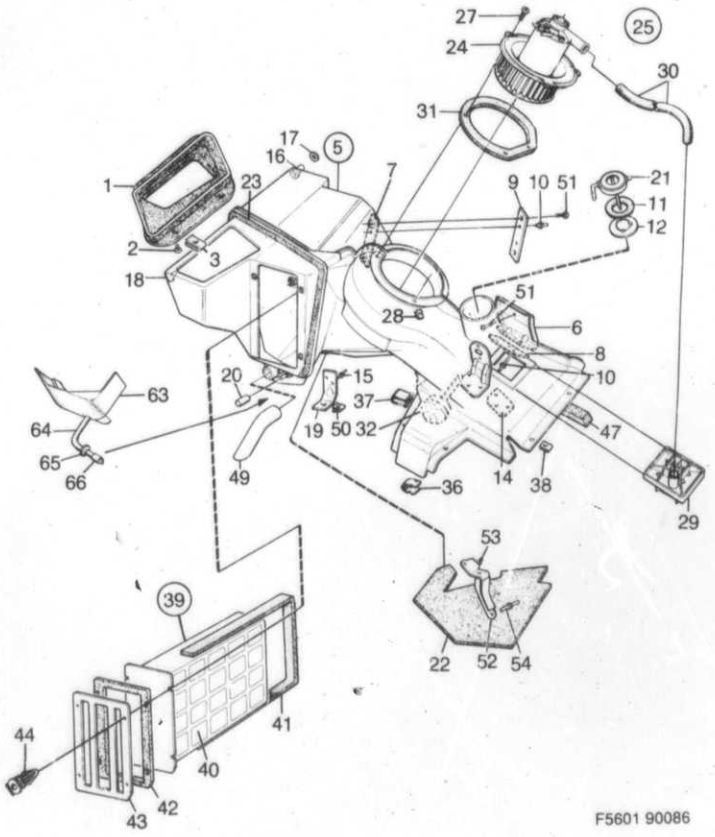


| 1855 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 94 00 623 | | | 1 | Air inlet | Luftintag | 5 |
| 0020 | 2 | 79 22 354 | | | 4 | Screw | Skruv | 5 |
| 0030 | 3 | 94 26 909 | | | 4 | Nut | Mutter | 3 |
| 0040 | 5 | *94 80 104* | | 37) NLS - USE 4074290, 9482480 | 1 | Heater housing | Värmehus | 5 |
| 0050 | *5 | *94 81 631* | | 38), -1988 NLS - USE 4074290 | 1 | Heater housing | Värmehus | 5 |
| 0060 | 5 | *40 70 694* | | 1989- NLS - USE 4074290 | 1 | Heater housing | Värmehus | 5 |
| 0070 | 6 | *94 00 714* | | LH NLS | 1 | .Bracket | .Konsol | 6 |
| 0080 | 7 | *94 61 278* | | RH NLS | 1 | .Bracket | .Konsol | 6 |
| 0090 | 8 | *94 17 874* | | LH NLS | 1 | .Plate | .Plåt | 6 |
| 0100 | 9 | *94 61 260* | | RH NLS | 1 | .Plate | .Plåt | 5 |
| 0110 | 10 | 79 72 052 | | | 5 | .Rivet | .Nit | 5 |
| 0120 | 11 | 94 17 916 | | | 1 | .Seal | .Tätning | 5 |
| 0130 | 12 | 94 22 767 | | | 1 | .Throttle disc | .Spjällskiva | 5 |
| 0140 | 14 | *94 26 008* | | NLS | 1 | .Plate | .Plåt | 6 |
| 0150 | 15 | *79 72 045* | | NLS - USE 7961659 | 2 | .Rivet | .Nit | 5 |
| 0160 | 16 | 94 00 805 | | | 1 | .Bearing | .Lagring | 5 |
| 0170 | 17 | *94 42 203* | | NLS | 1 | .Clamp | .Klammer | 5 |
| 0180 | 18 | *94 17 940* | | -1987 | 1 | .Plug | .Plugg | 5 |
| 0190 | 18 | 71 62 308 | | 1988- | 1 | .Plug | .Plugg | 5 |
| 0200 | 19 | *94 01 282* | | NLS | 1 | .Bracket | .Konsol | 6 |
| 0210 | 20 | 94 81 912 | | | 2 | .Plug | .Plugg | 5 |
| 0220 | 21 | 94 17 908 | | | 1 | .Throttle disc | .Spjällskiva | 5 |
| 0230 | 22 | 94 82 175 | | | 1 | .Insulation | .Isolering | 6 |
| 0240 | 23 | 94 81 789 | | | 1 | Seal | Tätning | 5 |
| 0250 | 24 | 94 81 920 | | -1987 | 1 | Fan unit | Fläktenhet | 4 |
| 0260 | 24 | 94 82 415 | | 1988- | 1 | Fan unit | Fläktenhet | 4 |
| 0270 | 25 | *86 05 115* | | 1989- NLS - USE 8605248 | 1 | Fan motor kit | Fläktmotorsats | 4 |
| 0280 | 27 | 79 22 735 | | | 3 | Screw | Skruv | 5 |
| 0290 | 28 | 75 68 555 | | | 3 | Clip nut | Clipsmutter | 3 |
| 0300 | 29 | 95 58 784 | | | 1 | Resistor | Motstånd | 5 |
| 0310 | 30 | 85 57 001 | | | 1 | Hose | Slang | 6 |
| 0320 | 31 | 94 18 070 | | | 1 | Seal | Tätning | 5 |
| 0330 | 32 | | | See page 8C-013, 7-A14 | | Vacuum servo | Vakuumservo | |
| 0340 | 36 | 94 51 253 | | | 2 | Clip | Clips | 5 |
| 0350 | 37 | 94 62 557 | | | 1 | Clip | Clips | 5 |
| 0360 | 38 | 94 41 239 | | | 5 | Clip nut | Clipsmutter | 3 |
| 0370 | 39 | *94 79 981* | | NLS - USE 4072427, 4072617 | 1 | Air filter | Luftfilter | 2 |
| 0380 | 40 | 94 01 126 | | | 1 | .Filter | .Filter | 2 |
| 0390 | 41 | 94 18 054 | | | 1 | .Seal | .Tätning | 5 |
| 0400 | 42 | 94 81 060 | | | 1 | .Seal | .Tätning | 5 |
| 0410 | 43 | 94 18 062 | | | 1 | .Cover | .Täcklock | 6 |
| 0420 | 44 | 94 79 973 | | | 4 | .Clamp | .Klämma | 6 |
| 0430 | 47 | 94 01 159 | | | 1 | Seal | Tätning | 5 |
| 0440 | 49 | 94 01 167 | | 315) | 1 | Draining pipe | Dräneringsrör | 5 |
| 0450 | 49 | 40 70 413 | | 316) | 1 | Draining hose | Dräneringsslang | 5 |
| 0460 | 50 | 79 33 682 | | | 1 | Spring nut | Fjädermutter | 3 |
| 0470 | 51 | 80 59 602 | | | 3 | Screw | Skruv | 5 |
| 0480 | 52 | *94 32 964* | | NLS | 1 | Bracket | Konsol | 6 |
| 0490 | 53 | 82 09 009 | | | 1 | Buffer | Buffert | 5 |
| 0500 | 54 | 79 61 709 | | | 2 | Rivet | Nit | 5 |
| 0510 | 63 | 94 81 839 | | | 1 | Cover | Kåpa | 6 |
| 0520 | 64 | 93 63 276 | | | 1 | Fuel hose | Bränsleslang | 5 |
| 0530 | 65 | 82 45 888 | | | 1 | Plug | Plugg | |
| 0540 | 66 | 94 81 904 | | | 1 | Non-return valve | Backventil | |

37. Ch. -G2002125, -G3002532, -G7002882
38. Ch. G2002126-, G3002533-, G7002883-
315. Ch. -K3021901, -K5000139, -K7028130
316. Ch. K3021902-, K5000140-, K7028131-




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8C GROUP INDEX


| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets: | 7-B08 |

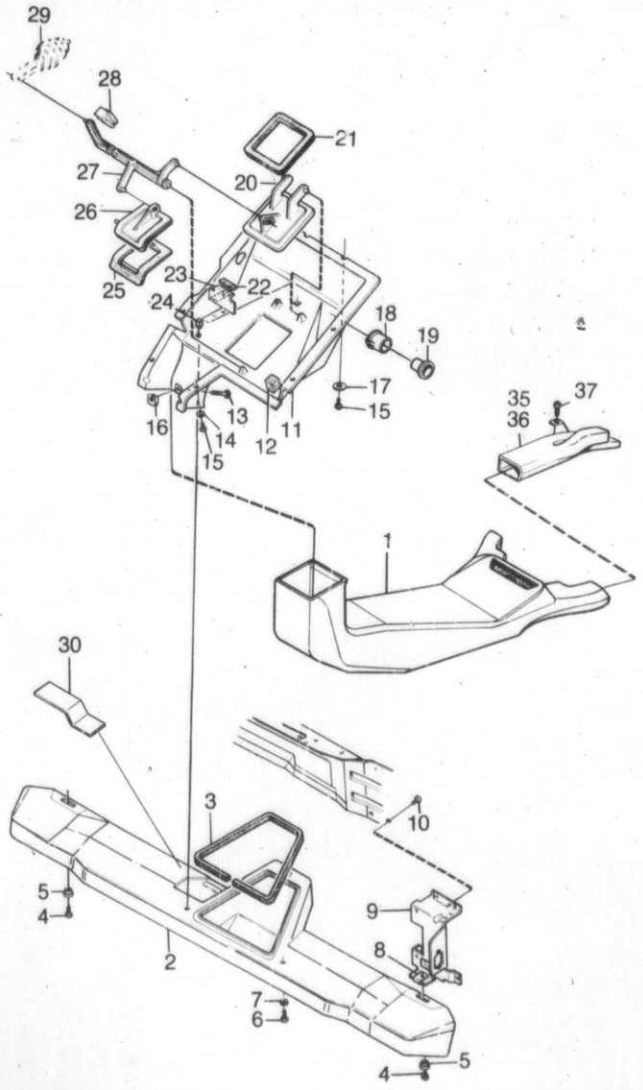


F2012 - 900

| 1860 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 94 79 999 | | | 1 | Heat duct | Värmekanal | 6 |
| 0020 | 1 | 94 81 938 | | 60) | 1 | Heat duct | Värmekanal | 6 |
| 0030 | 2 | 94 80 211 | | | 1 | Duct | Kanal | 6 |
| 0040 | 2 | 94 82 118 | | 60) | 1 | Air duct | Luftkanal | 6 |
| 0050 | 3 | 94 18 088 | | | 1 | Seal | Tätning | 5 |
| 0060 | 4 | 79 22 362 | | | 2 | Screw | Skruv | 5 |
| 0070 | 5 | 94 36 965 | | | 2 | Bushing | Bussning | |
| 0080 | 6 | 80 59 578 | | | 3 | Screw | Skruv | 5 |
| 0090 | 7 | 80 29 951 | | | 3 | Washer | Bricka | 5 |
| 0100 | 8 | 79 33 682 | | | 2 | Spring nut | Fjädermutter | 3 |
| 0110 | 9 | | | See page 3A-141, 2-F22 | | Bracket | Konsol | |
| 0120 | 10 | 79 22 347 | | | 2 | Screw | Skruv | 5 |
| 0130 | 11 | 94 00 946 | | | 1 | Lower section | Underdel | 6 |
| 0140 | 12 | 94 40 405 | | | 1 | Seal | Tätning | 5 |
| 0150 | 13 | 79 22 354 | | | 2 | Screw | Skruv | 5 |
| 0160 | 14 | 80 29 951 | | | 5 | Washer | Bricka | 5 |
| 0170 | 15 | 79 22 370 | | | 7 | Screw | Skruv | 5 |
| 0180 | 16 | 94 61 070 | | | 2 | Clip | Clips | 5 |
| 0190 | 17 | *94 79 353* | | NLS | 2 | Washer | Bricka | 5 |
| 0200 | 18 | 94 65 303 | | | 2 | Connector | Anslutning | 5 |
| 0210 | 19 | *94 80 252* | | ME,FE NLS | 2 | Plug | Plugg | 5 |
| 0220 | 20 | 94 00 961 | | | 1 | Throttle disc | Spjällskiva | 5 |
| 0230 | 21 | 94 00 979 | | | 1 | Seal | Tätning | 5 |
| 0240 | 22 | *94 45 800* | | NLS | 1 | Seal | Tätning | 5 |
| 0250 | 23 | 94 69 156 | | | 2 | Guide rail | Ledskena | 6 |
| 0260 | 24 | 79 70 411 | | | 3 | Nut | Mutter | 5 |
| 0270 | 25 | 94 18 021 | | | 1 | Seal | Tätning | 6 |
| 0280 | 26 | 94 18 013 | | | 1 | Throttle disc | Spjällskiva | 5 |
| 0290 - | 27 | *94 00 987* | | -1987 NLS - USE 9482522 | 1 | Shaft | Axel | 6 |
| 0300 | 27 | 94 82 522 | | 1988- | 1 | Shaft | Axel | 6 |
| 0310 | 28 | 94 17 981 | | | 1 | Washer | Bricka | 5 |
| 0320 | 29 | | | See page 8C-013, 7-A14 | | Vacuum servo | Vakuumservo | |
| 0330 | 30 | *86 02 542* | | 1989- NLS | 1 | Spacer | Mellanlägg | 6 |
| 0340 | 35 | 94 81 946 | | 60)LH | 1 | Air outlet | Luftutsläpp | 6 |
| 0350 | 36 | 94 81 953 | | 60)RH | 1 | Air outlet | Luftutslapp | 6 |
| 0360 | 37 | 79 22 891 | | 60) | 1 | Screw | Skruv | 5 |

60. For cars with automatic belts  För bilar med passivt bälte



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8C GROUP INDEX


| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets: | 7-B08 |

# 7-A12

## Control
## Duct, part 2

## Reglage
## Kanal, del 2

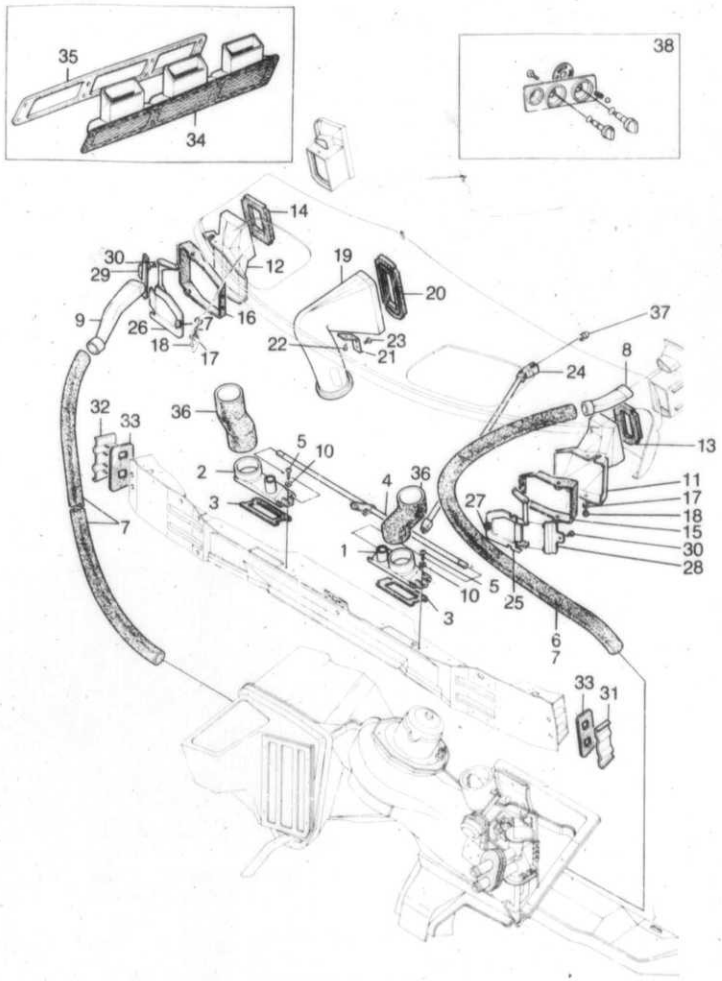


F0857 - 900

| 1900 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0020 | 1 | 94 18 138 | | LH | 1 | Throttle body | Spjällhus | 6 |
| 0030 | 1 | *94 80 153* | | LH, ME, FE NLS | 1 | Throttle body | Spjällhus | 6 |
| 0040 | 2 | 94 18 146 | | RH | 1 | Throttle body | Spjällhus | 6 |
| 0050 | 2 | *94 80 187* | | RH, ME, FE NLS | 1 | Throttle body | Spjällhus | 6 |
| 0060 | 3 | 94 01 712 | | | 2 | Seal | Tätning | 5 |
| 0070 | 4 | 94 23 112 | | | 1 | Shaft | Axel | 6 |
| 0110 | 5 | 79 22 420 | | | 4 | Screw | Skruv | 5 |
| 0120 | 6 | 94 01 332 | | LH | 1 | Hose | Slang | 6 |
| 0130 | 7 | 94 01 340 | | RH | 1 | Hose | Slang | 6 |
| 0140 | 7 | 94 01 332 | | ME, FE | 2 | Hose | Slang | 6 |
| 0150 | 8 | 94 26 792 | | LH | 1 | Connector | Anslutning | 6 |
| 0160 | 8 | 94 45 776 | | LH, RHD | 1 | Connector | Anslutning | 6 |
| 0170 | 9 | 94 26 784 | | RH | 1 | Connector | Anslutning | 6 |
| 0180 | 9 | 94 26 792 | | RH, RHD | 1 | Connector | Anslutning | 6 |
| 0190 | 10 | 80 29 951 | | | 4 | Washer | Bricka | 5 |
| 0200 | 11 | 94 18 344 | | LH | 1 | Air duct | Luftkanal | 5 |
| 0210 | 11 | 94 20 399 | | LH, RHD | 1 | Air duct | Luftkanal | 5 |
| 0220 | 12 | 94 18 450 | | RH | 1 | Air duct | Luftkanal | 5 |
| 0230 | 12 | 94 20 464 | | RH, RHD | 1 | Air duct | Luftkanal | 5 |
| 0240 | 13 | 94 01 373 | | LH | 1 | Seal | Tätning | 5 |
| 0250 | 13 | 94 20 407 | | LH, RHD | 1 | Seal | Tätning | 5 |
| 0260 | 14 | 94 18 468 | | RH | 1 | Seal | Tätning | 5 |
| 0270 | 14 | 94 20 472 | | RH, RHD | 1 | Seal | Tätning | 5 |
| 0280 | 15 | 94 79 613 | | LH | 1 | Seal | Tätning | 5 |
| 0290 | 16 | 94 79 668 | | RH | 1 | Seal | Tätning | 5 |
| 0300 | 17 | 80 29 951 | | | 6 | Washer | Bricka | 5 |
| 0310 | 18 | 94 41 213 | | | 6 | Screw | Skruv | 5 |
| 0340 | 19 | 94 79 908 | | | 1 | Connector | Anslutning | 6 |
| 0350 | 19 | 94 79 916 | | RHD | 1 | Connector | Anslutning | 6 |
| 0360 | 20 | 94 01 431 | | | 1 | Seal | Tätning | 5 |
| 0380 | 21 | 94 01 449 | | | 1 | Bracket | Konsol | 6 |
| 0400 | 22 | 79 73 266 | | -1988 | 2 | Rivet | Nit | 5 |
| 0410 | 22 | 79 61 642 | | 500), 1989- | 2 | Rivet | Nit | 5 |
| 0420 | 23 | 79 22 420 | | | 2 | Screw | Skruv | 5 |
| 0510 | 24 | 94 22 965 | | | 1 | Control | Reglage | 5 |
| 0520 | 24 | 94 44 738 | | RHD | 1 | Control | Reglage | 5 |
| 0530 | 25 | 94 73 919 | | LH | 1 | Throttle disc | Spjällskiva | 5 |
| 0540 | 26 | 94 73 901 | | RH | 1 | Throttle disc | Spjällskiva | 5 |
| 0550 | 27 | 94 73 943 | | | 2 | Spacer | Distans | 5 |
| 0560 | 28 | *94 26 214* | | LH NLS | 1 | Bearing | Lagring | 5 |
| 0570 | 29 | *94 26 206* | | RH NLS | 1 | Bearing | Lagring | 5 |
| 0580 | 30 | *80 98 030* | | NLS - USE 7975063 | 2 | Screw | Skruv | 5 |
| 0660 | 31 | *94 26 693* | | LH NLS | 1 | Cover | Lock | 5 |
| 0670 | 32 | *94 26 701* | | RH NLS | 1 | Cover | Lock | 5 |
| 0680 | 33 | 94 26 727 | | | 2 | Seal | Tätning | 5 |
| 0690 | 34 | 92 88 150 | | LH, 3CK, 5CK | 1 | Air outlet | Luftutsläpp | 5 |
| 0700 | 34 | 92 88 168 | | RH, 3CK, 5CK | 1 | Air outlet | Luftutsläpp | 5 |
| 0710 | 34 | | | 4SN | | Air outlet | Luftutsläpp | |
| 0720 | | | | See page 8A-095, 5-D24 | | | | |
| 0740 | 35 | 92 88 119 | | -1988, 3CK, 5CK | 2 | .Seal | .Tätning | 5 |
| 0750 | 35 | 92 88 119 | | 500), 1989-, LH,3CK, 5CK | 1 | .Seal | .Tätning | 5 |
| 0760 | 35 | 40 71 478 | | 500), 1989-, RH,3CK, 5CK | 1 | .Seal | .Tätning | 5 |
| 0790 | 36 | 94 79 650 | | | 2 | Duct | Kanal | 5 |
| 0855 | 37 | 96 21 897 | | | 2 | Bracket | Hållare | 5 |
| 0880 | 38 | | | See page 8B-005, 6-A06 | | Control panel | Reglagepanel | |

500. Also valid for SE 1988B. Gäller även for SE 1988B.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A0 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8C GROUP INDEX


| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets: | 7-B08 |

# 7-A14

## Vacuum system
## Vacuumsystem

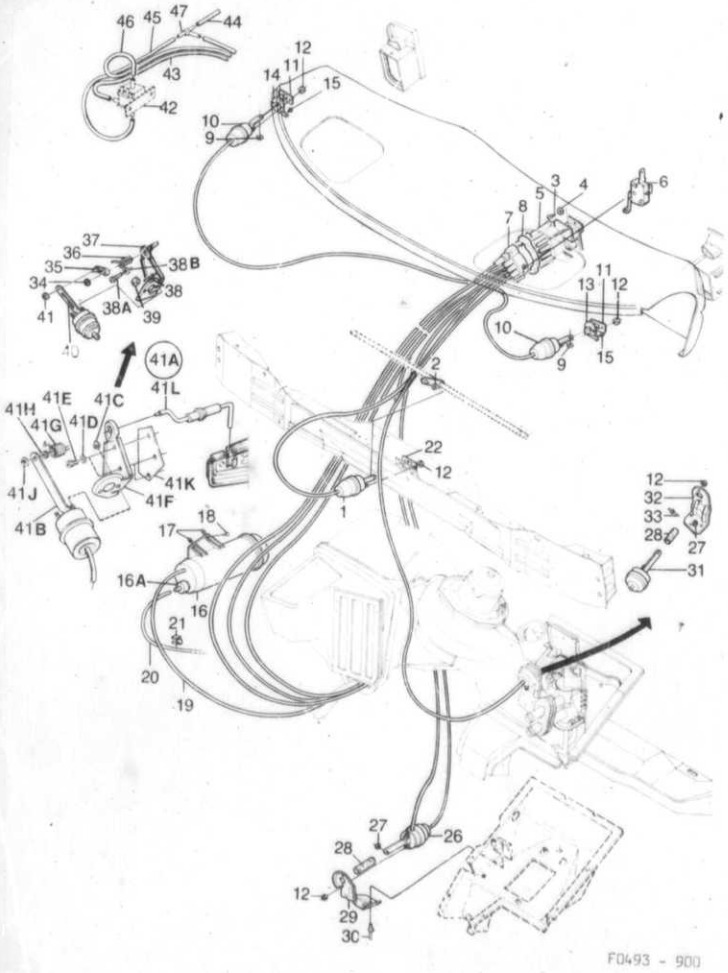


| 1910 | Pos | Part No/Art nr | KS | Notes/Anmärkningar | Qty/Antal | Description | Benämning | SL |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 94 20 290 | | | 1 | Vacuum servo | Vakuumservo | 5 |
| 0020 | 2 | 94 41 221 | | | 1 | Clip | Clips | 5 |
| 0030 | 3 | 79 71 393 | | | 3 | Screw | Skruv | 5 |
| 0040 | 4 | 79 16 489 | | | 1 | Washer | Bricka | 5 |
| 0050 | 5 | 94 80 641 | | 37) | 1 | Selector | Selektor | 3 |
| 0060 | 5 | *94 81 649* | | 38), -1988 NLS - USE 4070454 | 1 | Selector | Selektor | 3 |
| 0070 | 5 | 40 70 454 | | 1989- | 1 | Selector | Selektor | 3 |
| 0080 | 6 | *85 88 626* | | -1988 NLS - USE 4062964 | 2 | .Switch | .Brytare | 3 |
| 0090 | 6 | 40 62 964 | | 1989- | 2 | .Switch | .Brytare | 3 |
| 0100 | 7 | 94 26 198 | | 37) | 1 | Vacuum regulator | Vakuumregulator | 5 |
| 0110 | 7 | *94 81 607* | | 38), -1987 NLS - USE 9482480 | 1 | Vacuum line | Vakuumledning | 5 |
| 0120 | 7 | 94 82 480 | | 1988- | 1 | Vacuum line | Vakuumledning | 5 |
| 0130 | 8 | 94 44 605 | | | 1 | Washer | Bricka | 6 |
| 0140 | 9 | 94 41 221 | | | 2 | Clip | Clips | 5 |
| 0150 | 10 | 94 30 968 | | | 2 | Vacuum servo | Vakuumservo | 5 |
| 0160 | 11 | 94 50 487 | | | 2 | Washer | Bricka | 5 |
| 0170 | 12 | 79 40 406 | | | 6 | Nut | Mutter | 5 |
| 0180 | 13 | *94 26 651* | | LH NLS | 1 | Bracket | Konsol | 6 |
| 0190 | 14 | 94 26 644 | | RH | 1 | Bracket | Konsol | 6 |
| 0200 | 15 | 79 61 709 | | | 4 | Rivet | Nit | 5 |
| 0210 | 16 | 94 37 906 | | | 1 | Vacuum tank | Vakuumtank | 5 |
| 0220 | 16A | 86 05 107 | | | 1 | .Non-return valve kit | .Backventilsats | 5 |
| 0230 | 17 | 94 37 955 | | | 2 | .Nut | .Mutter | 3 |
| 0240 | 18 | 79 22 891 | | | 2 | Screw | Skruv | 5 |
| 0250 | 19 | 94 20 092 | | | 1 | Hose | Slang | 4 |
| 0260 | 20 | 91 36 243 | | L=1470 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0270 | 20 | 91 36 243 | | !, L=1670 MM | 1 | Vaccum hose | Vakuumslang | 5 |
| 0280 | 21 | 79 33 443 | | | 4 | Clip | Clips | 5 |
| 0290 | 22 | 94 73 828 | | | 1 | Protecting casing | Skyddskåpa | 5 |
| 0300 | 26 | 94 22 940 | | | 1 | Vacuum servo | Vakuumservo | 5 |
| 0310 | 26 | 94 80 534 | | AC | 1 | Vacuum servo | Vakuumservo | 5 |
| 0320 | 27 | 94 41 221 | | | 2 | Clip | Clips | 5 |
| 0330 | 28 | *94 44 811* | | NLS | 2 | Protection | Skydd | 5 |
| 0340 | 29 | *94 17 973* | | NLS | 1 | Bracket | Konsol | 6 |
| 0350 | 30 | 79 72 490 | | | 2 | Rivet | Nit | 5 |
| 0360 | 31 | 94 79 924 | | | 1 | Vacuum servo | Vakuumservo | 5 |
| 0370 | 32 | *94 17 924* | | NLS | 1 | Bracket | Konsol | 6 |
| 0380 | 33 | *79 72 045* | | NLS - USE 7961659 | 2 | Rivet | Nit | 5 |
| 0390 | 34 | 79 65 809 | | AC | 1 | Clip | Clips | 5 |
| 0400 | 35 | 94 00 896 | | AC | 1 | Lever | Hävarm | 6 |
| 0410 | 36 | 94 20 274 | | AC | 1 | Spring | Fjäder | 5 |
| 0420 | 37 | 94 20 282 | | AC | 1 | Bracket | Konsol | 6 |
| 0430 | 38 | 79 72 490 | | AC | 3 | Rivet | Nit | 5 |
| 0440 | 39 | 79 40 398 | | AC | 2 | Lock nut | Låsmutter | 5 |
| 0450 | 40 | 94 20 266 | | AC | 1 | Vacuum servo | Vakuumservo | 5 |
| 0460 | 41 | 94 41 221 | | AC | 1 | Clip | Clips | 5 |
| 0470 | 41A | 88 21 126 | | AC, CLARION | 1 | Vacuum servo | Vakuumservo | 5 |
| 0480 | 41B | *88 20 417* | | AC, CLARION NLS - USE 9420266 | 1 | .Vacuum servo | .Vakuumservo | 5 |
| 0490 | 41C | 80 74 098 | | AC, CLARION | 2 | .Nut | .Mutter | 5 |
| 0500 | 41D | *79 33 807* | | AC, CLARION NLS | 3 | .Washer | .Bricka | 5 |
| 0510 | 41E | 80 19 531 | | AC, CLARION | 3 | .Screw | .Skruv | 5 |
| 0520 | 41F | 88 20 425 | | AC, CLARION | 1 | .Bracket | .Konsol | 6 |
| 0530 | 41G | 88 20 490 | | AC, CLARION | 1 | .Spring | .Fjäder | 5 |
| 0540 | 41H | *88 20 508* | | AC, CLARION NLS | 1 | .Spacer | .Distans | 5 |
| 0550 | 41J | 88 20 474 | | AC, CLARION | 1 | .Clip | .Clips | 5 |
| 0560 | 41K | *88 20 433* | | AC, CLARION NLS | 1 | .Dolly | .Mothållare | 6 |
| 0570 | 41L | 88 20 441 | | AC, CLARION | 1 | .Shaft | .Axel | 6 |
| 0580 | 42 | | | See page 3A-071, 2-C24 | | Solenoid valve | Magnetventil | |

37. Ch. --G2002125, --G3002532, --G7002882
38. Ch. G2002126--, G3002533--, G7002883--



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D0 |
| 10 | Numerical register | 7-E02 |



8C GROUP INDEX


| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets: | 7-B08 |

# 7-A16

## *Vacuum system*

## *Vacuumsystem*

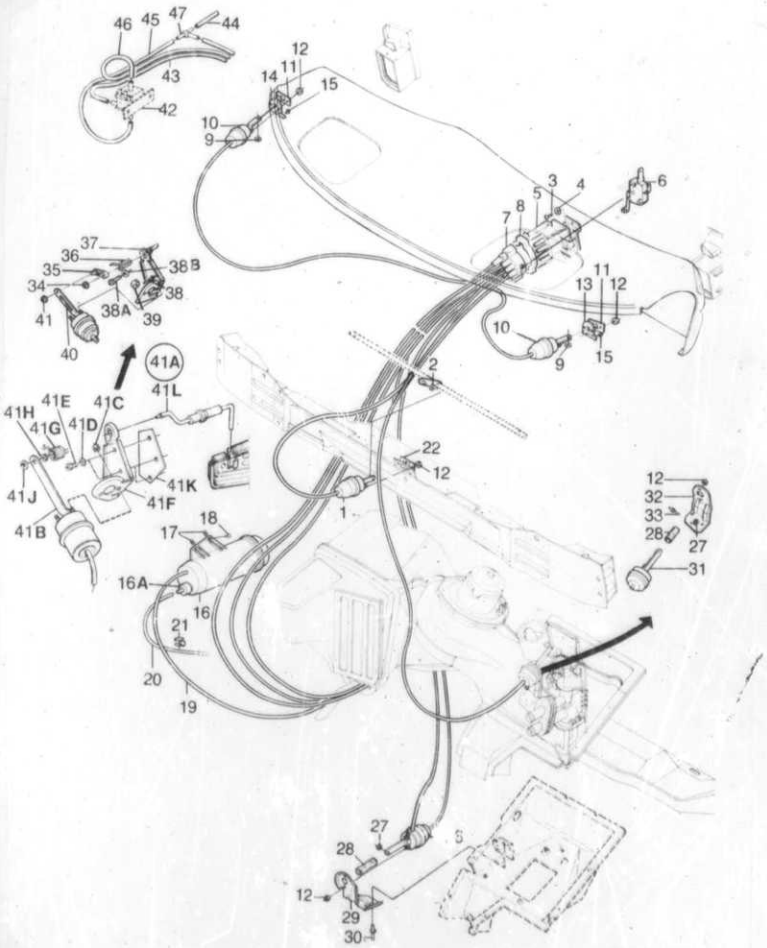



| 1910 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0590 | 43 | 94 80 559 | | -1987, AC | 1 | Vacuum hose | Vakuumslang | 4 |
| 0600 | 43 | 94 20 308 | | 1988-, AC | 1 | Vacuum hose | Vakuumslang | 4 |
| 0610 | 44 | *94 80 567* | | -1988, AC NLS - USE 9482571 | 1 | Vacuum hose | Vakuumslang | 4 |
| 0620 | 44 | 94 82 571 | | 1989-, AC | 1 | Vacuum hose | Vakuumslang | 4 |
| 0630 | 45 | *94 80 278* | | -1988, AC NLS - USE 9482563 | 3 | Vacuum hose | Vakuumslang | 4 |
| 0640 | 45 | 94 82 563 | | 1989-, AC | 3 | Vacuum hose | Vakuumslang | 4 |
| 0650 | 46 | 94 80 666 | | -1987, AC | 1 | Vacuum hose | Vakuumslang | 4 |
| 0660 | | | | | | Heater housing | Värmehus | |
| 0670 | 46 | 94 20 308 | | 1988, AC | 1 | Vacuum hose | Vakuumslang | 4 |
| 0680 | | | | | | Heater housing | Värmehus | |
| 0690 | 46 | 94 82 589 | | 1989-, AC | 1 | Vacuum hose | Vakuumslang | 4 |
| 0700 | | | | | | Heater housing | Värmehus | |
| 0710 | 47 | 94 80 575 | | AC | 2 | T-pipe | T-rör | 5 |
| 0720 | | | | | | | | |
| 0730 | | 91 36 243 | | L=5000 MM | X | Vaccum hose | Vakuumslang | 5 |

**MASTER INDEX**

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

**8C GROUP INDEX**

| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets: | 7-B08 |

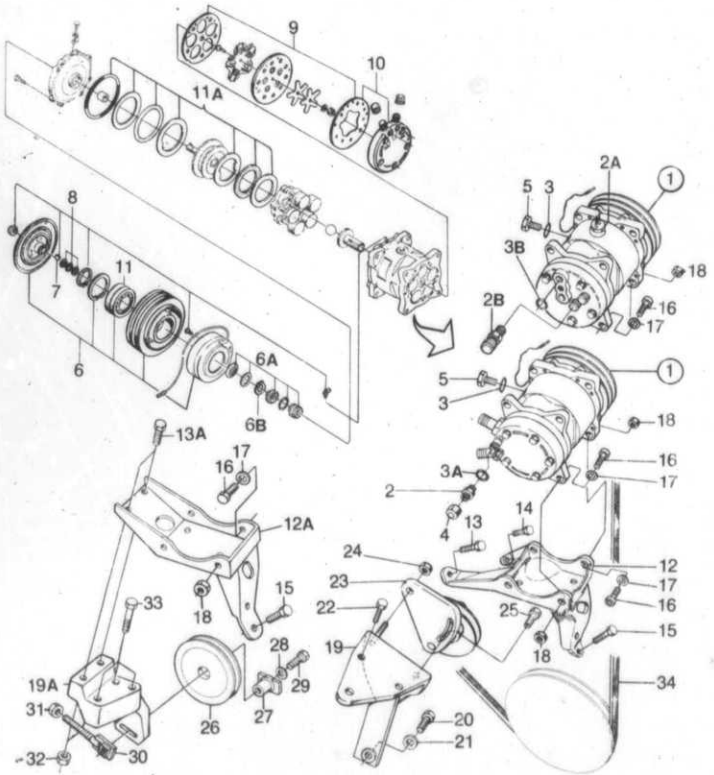


F5602 90086

| 1960 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 94 81 508 | | -1987 C, (SANDEN) | 1 | Compressor | Kompressor | 5 |
| 0020 | 1 | *94 81 516* | | -1987 TURBO, I, (SANDEN) NLS - USE 4073995 | 1 | Compressor | Kompressor | 5 |
| 0030 | 1 | *94 81 979* | | ALT TO 94 81 516 (SEIKO-SEIKI) NLS - USE 4073995 | 1 | Compressor | Kompressor | 6 |
| 0050 | 1 | *94 81 979* | | 1988-, (SEIKO-SEIKI) NLS - USE 4073995 | 1 | Compressor | Kompressor | 6 |
| 0060 | 2 | 94 79 452 | | 249) | 2 | .Valve | .Ventil | 6 |
| 0070 | 2A | 94 81 995 | | 251) | 1 | .Switch | .Brytare | 4 |
| 0080 | 2B | 94 82 225 | | 251) | 2 | .Valve | .Ventil | 5 |
| 0090 | 3 | 94 79 486 | | 249,250) | 1 | .O-ring | .O-ring | 2 |
| 0100 | 3 | 94 82 217 | | 251) | 1 | .Seal | .Tätning | 6 |
| 0110 | 3A | 94 79 486 | | 249) | 2 | .O-ring | .O-ring | 2 |
| 0120 | 3B | 79 72 318 | | 250,251) | 2 | .O-ring | .O-ring | 2 |
| 0130 | 4 | *94 79 460* | | 249) NLS - USE 9626896 | 2 | .Plug | .Plugg | 5 |
| 0140 | 5 | 94 79 478 | | 249,250) | 1 | .Plug | .Plugg | 5 |
| 0150 | 5 | 94 82 209 | | 251) | 1 | .Plug | .Plugg | 5 |
| 0160 | 6 | 94 81 037 | | 249,250) | 1 | .Clutch | .Koppling | 6 |
| 0170 | 6 | 94 81 987 | | 251) | 1 | .Clutch | .Koppling | 6 |
| 0180 | 6A | 94 82 357 | | 249,250) | 1 | .Sealing kit | .Tätningssats | 4 |
| 0190 | | | | See page 8C-031, 7-B08 | | | | |
| 0200 | 6A | 40 74 944 | | 251) | 1 | .Sealing kit | .Tätningssats | 6 |
| 0210 | 6B | 94 82 381 | | 249,250) | 1 | .Retaining ring | .Spårring | 5 |
| 0220 | 7 | *94 79 726* | | 249,250) NLS | 1 | .Key | .Kil | 5 |
| 0230 | 8 | *94 79 734* | | 249,250) NLS | 1 | .Accessories kit | .Tillbehörsats | 4 |
| 0240 | 9 | 94 79 742 | | 249,250) | 1 | .Gasket kit | .Packningsats | 4 |
| 0250 | 10 | 94 79 759 | | 249) | 1 | .Cylinder head | .Cylinderlock | 6 |
| 0260 | 10 | 94 81 052 | | 250) | 1 | .Cylinder head | .Cylinderlock | 6 |
| 0270 | 11 | 94 80 856 | | 249,250) | 1 | .Ball bearing | .Kullager | 5 |
| 0280 | 11A | 97 46 827 | | 249,250) | 1 | .Ball bearing kit | .Kullagersats | 5 |
| 0290 | | | | See page 8C-031, 7-B08 | | | | |
| 0300 | 12 | 93 31 562 | | -1987 C | 1 | Bracket | Fäste | 6 |
| 0310 | 12 | 93 31 562 | | 54) TURBO I | 1 | Bracket | Fäste | 6 |
| 0320 | 12A | 93 65 834 | | 55),-1987 TURBO I | 1 | Bracket | Fäste | 6 |
| 0330 | 12A | 75 49 439 | | 1988- TURBO I | 1 | Bracket | Fäste | 6 |
| 0340 | 13 | 93 45 190 | | 56) | 1 | Screw | Skruv | 5 |
| 0350 | 13A | 79 75 238 | | 57) | 2 | Screw | Skruv | 5 |
| 0360 | 14 | 93 39 623 | | 56) | 1 | Screw | Skruv | 5 |
| 0370 | 15 | 93 39 615 | | | 1 | Screw | Skruv | 5 |
| 0380 | 16 | 79 75 030 | | | 4 | Screw | Skruv | 5 |
| 0390 | 17 | 80 73 108 | | | 4 | Washer | Bricka | 5 |
| 0400 | 18 | 79 67 979 | | | 4 | Nut | Mutter | 5 |
| 0410 | 19 | 75 43 002 | | C | 1 | Bracket | Konsol | 6 |
| 0420 | 19 | 75 43 002 | | 54) TURBO I | 1 | Bracket | Konsol | 6 |
| 0430 | 19A | 75 43 556 | | 55) TURBO I | 1 | Arm | Arm | 5 |
| 0440 | 20 | 80 82 968 | | 58) | 1 | Screw | Skruv | 5 |
| 0450 | 21 | 70 61 328 | | 58) | 1 | Washer | Bricka | 5 |
| 0460 | 22 | 80 82 943 | | 58) | 2 | Screw | Skruv | 5 |
| 0470 | 23 | 93 69 109 | | 58) | 1 | Tension pulley | Spännrulle | 5 |
| 0480 | 24 | 79 67 953 | | 58) | 1 | Nut | Mutter | 5 |
| 0490 | 25 | 79 67 938 | | 58) | 1 | Screw | Skruv | 5 |
| 0500 | 26 | *93 25 663* | | 59) NLS - USE 4118964 | 1 | .Pulley | .Remskiva | 5 |
| 0510 | 27 | 75 43 614 | | 59) | 1 | .Pin | .Axeltapp | 5 |

54. Ch. -G2024751, -G3014891, -H7004141
55. Ch. G2024751-, G3014892-, H7004142-
56. For bracket 93 31 562 För fäste 93 31 562
57. For bracket 93 65 834 För fäste 93 65 834
58. For bracket 75 43 002 För fäste 75 43 002
59. For tension arm 75 43 556 För spännarm 75 43 556
249. Part of 94 81 508 Del av 94 81 508
250. Part of 94 81 516 Del av 94 81 516
251. Part of 94 81 979 Del av 94 81 979



MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8C GROUP INDEX

| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets: | 7-B08 |

# 7-A20

## *AC compressor*
## *B201*

## *AC kompressor*
## *B201*

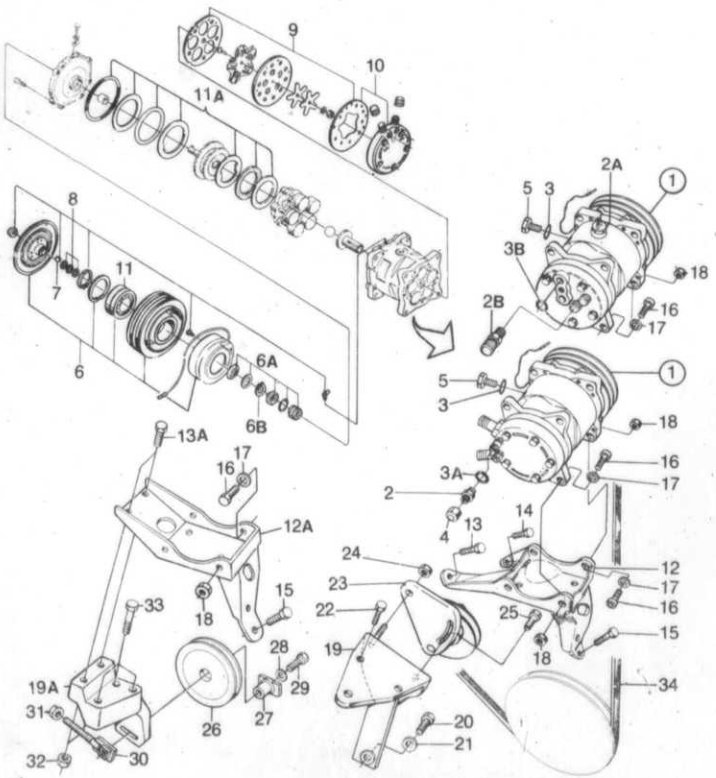


F5602 90086

| 19XX | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0520 | 28 | 79 77 440 | | 59) | 1 | Washer | Bricka | 5 |
| 0530 | 29 | 80 83 974 | | 59) | 1 | Screw | Skruv | 5 |
| 0540 | 30 | 75 43 606 | | 59) | 1 | Screw | Skruv | |
| 0550 | 31 | 79 71 922 | | 59) | 1 | Nut | Mutter | 3 |
| 0560 | 32 | 79 67 953 | | 59) | 2 | Nut | Mutter | 5 |
| 0570 | 33 | 79 75 238 | | 59) | 3 | Screw | Skruv | 5 |
| 0580 | 34 | 93 44 623 | | C | 1 | V-belt | Kilrem | 1 |
| 0590 | 34 | 93 44 623 | | 54) TURBO, I | 1 | V-belt | Kilrem | 1 |
| 0600 | 34 | 93 67 020 | | 55) TURBO, I | 1 | V-belt | Kilrem | 1 |
| 0610 | | 94 82 043 | | | 1 | Oil | Olja | 4 |
| 0620 | | *96 98 010* | | 1987 I, TURBO | X | Air conditioning kit | Luftkonditioneringssats | 6 |
| 0630 | | | | See page 8C-033, 7-B10 | | | | |
| 0630 | | | | NLS - USE 9698291 | | | | |
| 0640 | | *96 98 028* | | 1987 C | X | Air conditioning kit | Luftkonditioneringssats | 6 |
| 0650 | | | | See page 8C-033, 7-B10 | | | | |
| 0650 | | | | NLS | | | | |
| 0660 | | 96 98 291 | | 1988- I, TURBO | X | Air conditioning kit | Luftkonditioneringssats | 6 |
| 0670 | | | | See page 8C-033, 7-B10 | | | | |

54. Ch. --G2024751 --G3014891, --H7004141
55. Ch. G2024751--, G3014892--, H7004142--
59. For tension arm 75 43 556 För spännarm 75 43 556




MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

8C GROUP INDEX

| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets: | 7-B08 |

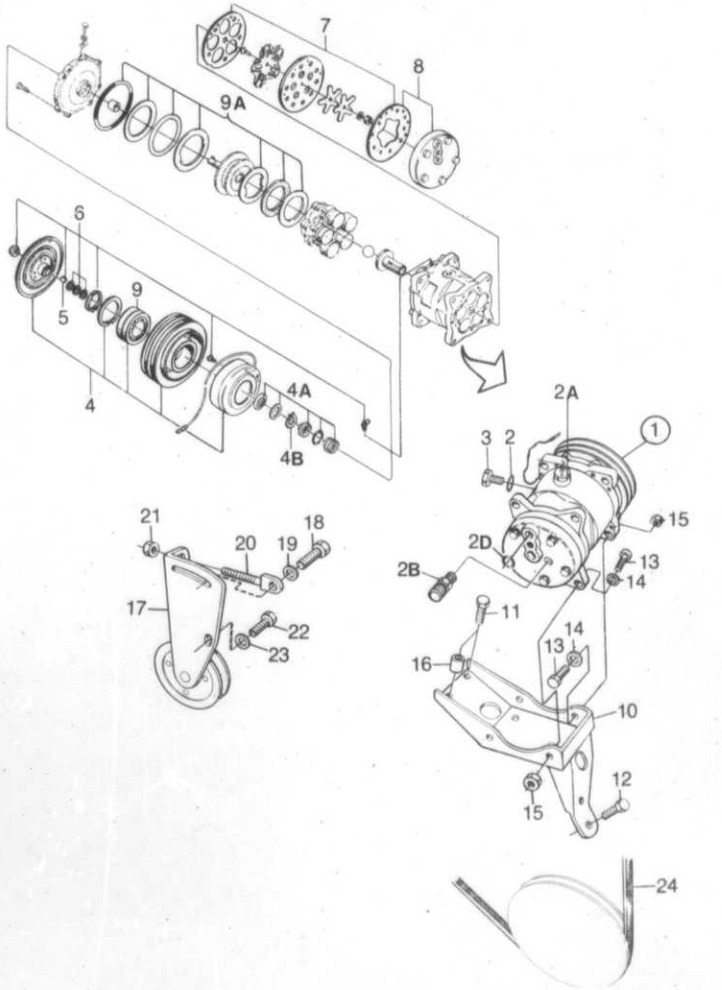


F5603 90086

| 1965 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | *94 81 516* | | -1987 (SANDEN) NLS - USE 4073995 | 1 | Compressor | Kompressor | 5 |
| 0020 | 1 | *94 81 979* | | ALT TO 94 81 516 (SEIKO-SEIKI) NLS - USE 4073995 | 1 | Compressor | Kompressor | 6 |
| 0040 | 1 | *94 81 979* | | 1988-, (SEIKO-SEIKI) NLS - USE 4073995 | 1 | Compressor | Kompressor | 6 |
| 0050 | 2 | 94 79 486 | | 250) | 1 | .O-ring | .O-ring | 2 |
| 0060 | 2 | 94 82 217 | | 251) | 1 | .Seal | .Tätning | 6 |
| 0070 | 2A | 94 81 995 | | 251) | 1 | .Switch | .Brytare | 4 |
| 0080 | 2B | 94 82 225 | | 251) | 2 | .Valve | .Ventil | 5 |
| 0090 | 2D | 79 72 318 | | | 2 | .O-ring | .O-ring | 2 |
| 0100 | 3 | 94 79 478 | | 250) | 1 | .Plug | .Plugg | 5 |
| 0110 | 3 | 94 82 209 | | 251) | 1 | .Plug | .Plugg | 5 |
| 0120 | 4 | 94 81 037 | | 250) | 1 | .Clutch | .Koppling | 6 |
| 0130 | 4 | 94 81 987 | | 251) | 1 | .Clutch | .Koppling | 6 |
| 0140 | 4A | 94 82 357 | | 250) | 1 | .Sealing kit | .Tätningssats | 4 |
| 0150 | | | | See page 8C-031, 7-B08 | | | | |
| 0160 | 4A | 40 74 944 | | 251) | 1 | .Sealing kit | .Tätningssats | 6 |
| 0170 | 4B | 94 82 381 | | 250) | 1 | .Retaining ring | .Spårring | 5 |
| 0180 | 5 | *94 79 726* | | 250) NLS | 1 | .Key | .Kil | 5 |
| 0190 | 6 | *94 79 734* | | 250) NLS | 1 | .Accessories kit | .Tillbehörsats | 4 |
| 0200 | 7 | 94 79 742 | | 250) | 1 | .Gasket kit | .Packningsats | 4 |
| 0210 | 8 | 94 81 052 | | 250) | 1 | .Cylinder head | .Cylinderlock | 6 |
| 0220 | | | | | | | | |
| 0230 | 9 | 94 80 856 | | 250) | 1 | .Ball bearing | .Kullager | 5 |
| 0240 | 9A | 97 46 827 | | 250) | 1 | .Ball bearing kit | .Kullagersats | 5 |
| 0250 | | | | See page 8C-031, 7-B08 | | | | |
| 0260 | 10 | 93 65 834 | | -1987 | 1 | Bracket | Fäste | 6 |
| 0270 | 10 | 75 49 439 | | 1988- | 1 | Bracket | Fäste | 6 |
| 0280 | 11 | 80 98 113 | | | 2 | Screw | Skruv | 5 |
| 0290 | 12 | 93 39 615 | | | 1 | Screw | Skruv | 5 |
| 0300 | 13 | 79 75 030 | | | 4 | Screw | Skruv | 5 |
| 0310 | 14 | 80 73 108 | | | 4 | Washer | Bricka | 5 |
| 0320 | 15 | 79 67 979 | | | 4 | Nut | Mutter | 5 |
| 0330 | 16 | 83 56 859 | | | 2 | Sleeve | Hylsa | 6 |
| 0340 | 17 | 75 42 228 | | | 1 | Tension pulley | Spännrulle | 5 |
| 0350 | 18 | 80 82 968 | | | 1 | Screw | Skruv | 5 |
| 0360 | 19 | 80 29 985 | | | 1 | Washer | Bricka | 5 |
| 0370 | 20 | 75 12 247 | | | 1 | Screw | Skruv | 5 |
| 0380 | 21 | 80 74 288 | | | 1 | Nut | Mutter | 5 |
| 0390 | 22 | 80 82 943 | | | 1 | Screw | Skruv | 5 |
| 0400 | 23 | 80 73 249 | | | 1 | Washer | Bricka | 5 |
| 0410 | 24 | 93 67 020 | | | 1 | V-belt | Kilrem | 1 |
| 0420 | | 94 82 043 | | FOR SEIKO-SEIKI | 1 | Oil | Olja | 4 |
| 0430 | | 96 26 771 | | 1986 | X | Air conditioning | Luftkonditionering | 6 |
| 0440 | | | | See page 8C-033, 7-B10 | | | | |
| 0450 | | 96 98 002 | | 1987 | X | Air conditioning kit | Luftkonditioneringssats | 6 |
| 0460 | | | | See page 8C-033, 7-B10 | | | | |
| 0470 | | *96 98 283* | | 1988- | X | Air conditioning kit | Luftkonditioneringssats | 6 |
| 0480 | | | | See page 8C-033, 7-B10 | | | | |
| 0480 | | | | NLS - USE 8605198 | | | | |
| 0490 | | 86 05 081 | | 323), 1988-, SE, EU | 1 | Idling speed increase kit | Tomgångshöjningssats | 4 |
| 0500 | | | | See page 8C-031, 7-B08 | | | | |

250. Part of 94 81 516 Del av 94 81 516
251. Part of 94 81 979 Del av 94 81 979
323. Without catalytic converter. Utan katalytisk reaktor.



MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8C GROUP INDEX

Heating and ventilation system 7-A06
Complete sets: 7-B08

# 7-A24

## AC evaporator
## Sanden

## AC förångare
## Sanden

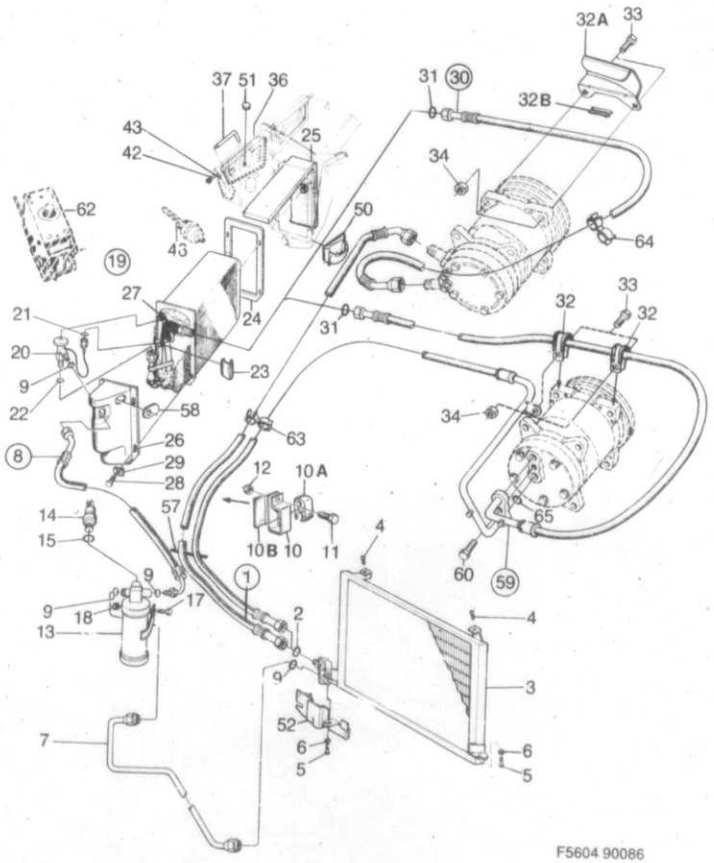


F5604 90086

| 1970 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 94 81 540 | | C | 1 | Hose | Slang | 5 |
| 0020 | 1 | 94 82 019 | | 1987-,43) C | 1 | Hose | Slang | 5 |
| 0030 | 2 | *79 72 094* | | NLS - USE 4318036 | 1 | .O-ring | .O-ring | 2 |
| 0040 | 3 | *94 01 951* | | -1988 NLS - USE 4382396 | 1 | Condenser | Kondensor | 5 |
| 0050 | 3 | *40 [illegible] 918* | | 1989- NLS - USE 4382396 | 1 | Condenser | Kondensor | 5 |
| 0060 | 4 | 80 [illegible] 578 | | | 2 | Screw | Skruv | 5 |
| 0070 | 5 | 79 22 420 | | | 2 | Screw | Skruv | 5 |
| 0080 | 6 | 80 29 951 | | | 2 | Washer | Bricka | 5 |
| 0090 | 7 | 94 81 466 | | 1986 | 1 | Tube | Rör | 5 |
| 0100 | 7 | 94 82 035 | | 1987-,43) | 1 | Tube | Rör | 5 |
| 0110 | 8 | 94 81 391 | | 1986 | 1 | Hose | Slang | 5 |
| 0120 | 8 | 94 82 027 | | 1987-,43) | 1 | Hose | Slang | 5 |
| 0130 | 9 | *79 72 086* | | NLS - USE 4318028 | 4 | .O-ring | .O-ring | 2 |
| 0140 | 10 | 94 81 458 | | | 1 | Clamp | Klammer | 5 |
| 0150 | 10A | 94 81 441 | | | 1 | Spacer | Mellanlägg | 5 |
| 0160 | 10B | 94 81 664 | | | 1 | Base | Underlägg | 5 |
| 0170 | 11 | *80 19 911* | | NLS - USE 7399603 | 1 | Screw | Skruv | 5 |
| 0180 | 12 | 80 29 555 | | -1987 | 1 | Nut | Mutter | 5 |
| 0190 | 12 | 81 51 227 | | 1988- | 1 | Nut | Mutter | 5 |
| 0200 | 13 | *94 81 482* | | 1986 NLS - USE 4383543, 9481128 | 1 | Reservoir | Behållare | 4 |
| 0210 | 13 | *94 82 068* | | 1987-,43) NLS - USE 4383550 | 1 | Reservoir | Behållare | 4 |
| 0220 | 14 | 94 80 005 | | | 1 | .Contact | .Kontakt | 5 |
| 0230 | 15 | *94 73 851* | | NLS - USE 4073979 | 1 | .O-ring | .O-ring | 2 |
| 0240 | 17 | 80 98 089 | | 1986 | 1 | Screw | Skruv | 5 |
| 0250 | 18 | 80 74 106 | | -1987 | 1 | Nut | Mutter | 5 |
| 0260 | 18 | 81 51 235 | | 1988- | 1 | Nut | Mutter | 5 |
| 0270 | 19 | 94 80 955 | | | 1 | Evaporator | Förångare | 5 |
| 0280 | 20 | 94 80 914 | | | 1 | .Valve | .Ventil | 5 |
| 0290 | 21 | 79 72 078 | | | 1 | .O-ring | .O-ring | 2 |
| 0300 | 22 | *79 72 094* | | NLS - USE 4318036 | 1 | .O-ring | .O-ring | 2 |
| 0310 | 23 | *94 79 536* | | 1986 NLS - USE 9629197 | 1 | .Clamp | .Klammer | 5 |
| 0320 | 23 | 96 29 197 | | 1987- | 1 | .Clamp | .Klamma | 5 |
| 0330 | 24 | 94 80 245 | | | 1 | .Seal | .Tätning | 4 |
| 0340 | 25 | *94 79 627* | | NLS | 1 | .Seal | .Tätning | 4 |
| 0350 | 26 | 94 81 185 | | | 1 | .Cover | .Kåpa | 5 |
| 0360 | 27 | 94 01 944 | | | 1 | .Insulation | .Isolering | 4 |
| 0370 | 28 | 79 22 461 | | | 4 | Screw | Skruv | 5 |
| 0380 | 29 | 94 65 600 | | | 4 | Nut | Mutter | 3 |
| 0390 | 30 | 94 80 773 | | C | 1 | Hose | Slang | 5 |
| 0400 | 31 | *79 72 482* | | NLS - USE 4318044 | 1 | .O-ring | .O-ring | 2 |
| 0410 | 32 | *94 80 898* | | 1986 NLS - USE 4072492 | 2 | Clamp | Klammer | 5 |
| 0420 | 32A | 94 81 961 | S | 1987- | 1 | Brace | Bygel | 5 |
| 0430 | 32B | 75 35 487 | S | 1987- | 1 | Protecting moulding | Skyddslist | 5 |
| 0440 | 33 | 80 19 945 | | C | 2 | Screw | Skruv | 5 |
| 0450 | 33 | 80 19 978 | | 1986 | 2 | Screw | Skruv | 5 |
| 0460 | 33 | 79 77 499 | | 1987- | 2 | Screw | Skruv | 5 |
| 0470 | 34 | 80 73 512 | | | 2 | Lock nut | Låsmutter | 3 |
| 0480 | 36 | 94 81 680 | | | 1 | Shutter | Spjäll | 5 |
| 0490 | 37 | 94 20 241 | | | 1 | Shaft | Axel | 6 |
| 0500 | 42 | 94 22 403 | | | 1 | Pivot pin | Lagertapp | 5 |
| 0510 | 43 | 94 38 250 | | | 1 | Dolly plate | Mothållsplåt | 6 |
| 0520 | 46 | | | See page 8C-013, 7-A14 | 1 | Vacuum servo | Vakuumservo | |
| 0530 | 50 | *94 79 940* | | RHD NLS | 1 | Clamp | Klamma | 5 |
| 0540 | 51 | 71 63 074 | | | 2 | Plug | Plugg | 5 |
| 0550 | 52 | 94 82 399 | | 1988- | 1 | Guard | Skydd | 5 |
| 0560 | 57 | 82 78 558 | | 1986 | 1 | Protecting moulding | Skyddslist | 5 |
| 0570 | 58 | 94 81 193 | | | 1 | Grommet | Genomföring | 4 |
| 0580 | 59 | *94 81 532* | | 1986, I, TURBO NLS - USE 9482001 | 1 | Hose | Slang | 5 |
| 0590 | 59 | 94 82 001 | | 1987, I, TURBO | 1 | Hose | Slang | 5 |

43 For cars with integrated bumpers  För bilar med integrerade stötfångare



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8C GROUP INDEX


| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets: | 7-B08 |

# 7-B02

## AC evaporator
## Sanden

## AC förångare
## Sanden

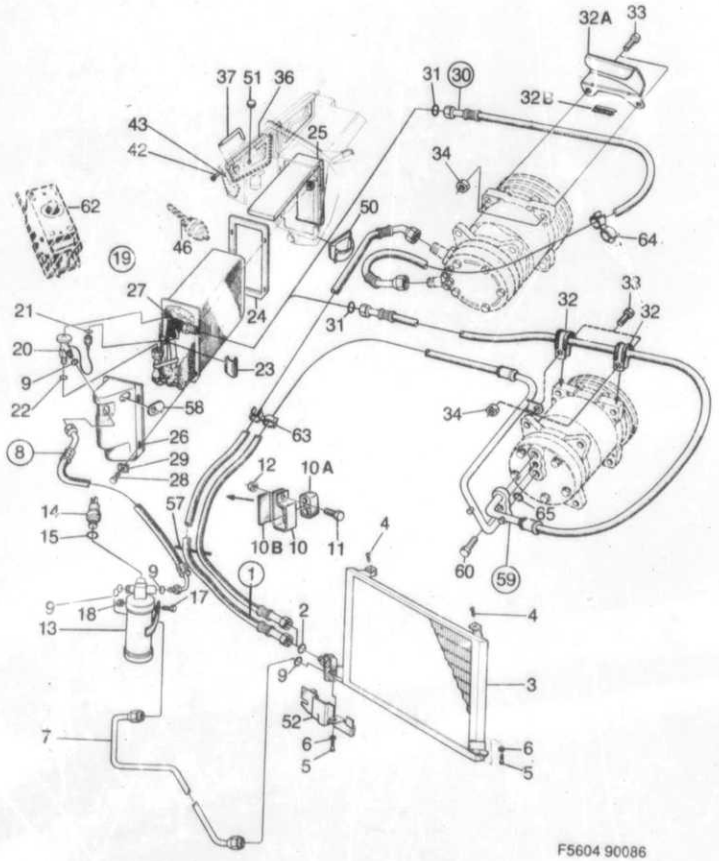



| 1970 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0600 | 59 | 94 82 365 | | 1988-, I, TURBO | 1 | Hose | Slang | 5 |
| 0610 | 60 | 79 00 335 | | 1986 | 1 | Screw | Skruv | 5 |
| 0620 | 60 | 73 99 280 | | 1987- | 1 | Screw | Skruv | 5 |
| 0630 | 62 | | | See page 3A-071, 2-C24 | | Thermo switch | Termobrytare | |
| 0640 | 63 | 73 98 373 | | | 1 | Clamp | Klammer | 5 |
| 0650 | 64 | 73 98 530 | | | 1 | Clamp | Klammer | 5 |
| 0660 | 65 | | | See page 8C-017, 7-A18 | 2 | O-ring | O-ring | |
| 0670 | | | | See page 8C-021, 7-A22 | | | | |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

8C GROUP INDEX

| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets: | 7-B08 |

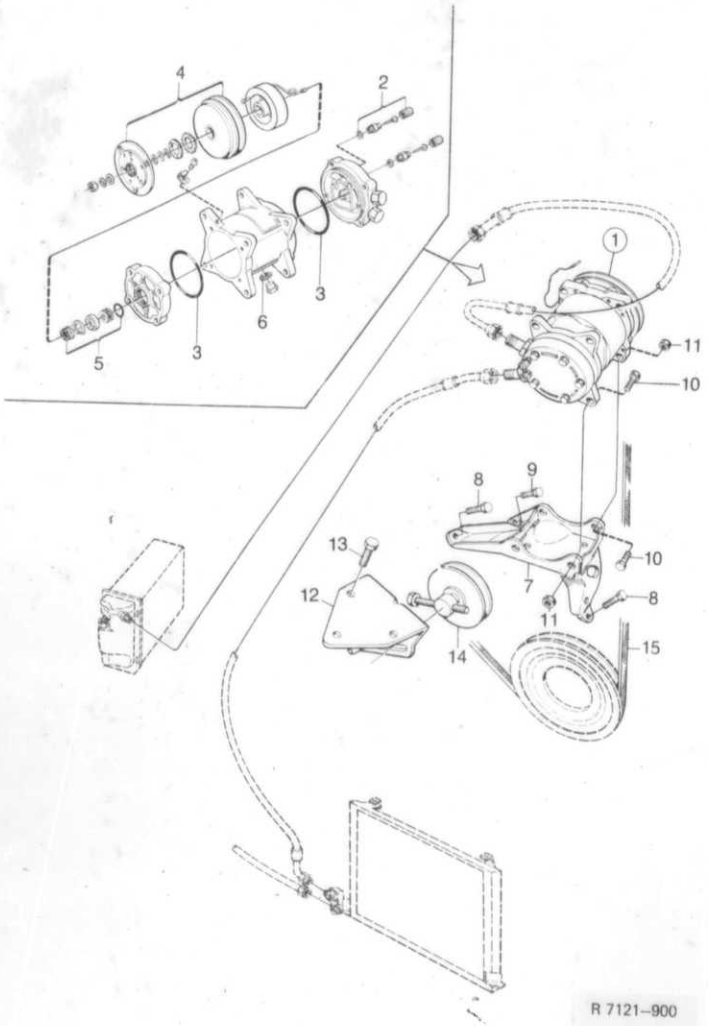



| 1980 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 88 20 987 | | (CLARION) | 1 | Compressor | Kompressor | 5 |
| 0020 | 2 | 88 21 571 | | | 2 | .Valve | .Ventil | 6 |
| 0030 | 3 | 88 21 605 | | | 2 | .O-ring | .O-ring | 2 |
| 0040 | 4 | 88 20 995 | | | 1 | .Clutch | .Koppling | 6 |
| 0050 | 5 | 88 21 597 | | See page 8C-031, 7-B08 | 1 | .Gasket kit | .Packningsats | 4 |
| 0060 | 6 | *88 21 589* | | NLS | 1 | .Gasket kit | .Packningsats | 4 |
| 0070 | 7 | 93 31 562 | | | 1 | Bracket | Fäste | 6 |
| 0080 | 8 | 93 39 615 | | | 2 | Screw | Skruv | 5 |
| 0090 | 9 | 93 39 623 | | | 1 | Screw | Skruv | 5 |
| 0100 | 10 | *80 83 164* | | NLS - USE 8148223 | 4 | Screw | Skruv | 5 |
| 0110 | 11 | *80 29 779* | | NLS - USE 8151243 | 4 | Nut | Mutter | 5 |
| 0120 | 12 | 88 21 001 | | | 1 | Bracket | Konsol | 6 |
| 0130 | 13 | 80 82 943 | | | 2 | Screw | Skruv | 5 |
| 0140 | 14 | 88 20 128 | | | 1 | Arm | Arm | 5 |
| 0150 | 15 | 93 44 623 | | | 1 | V-belt | Kilrem | 1 |
| 0160 | | *88 20 029* | | See page 8C-033, 7-B10 NLS | X | Air conditioning | Luftkonditionering | 6 |
| 0170 | | 88 20 052 | | 1986, B201, SE,FI,EU,GB (FOR KIT 8820029) See page 8C-033, 7-B10 | X | Cable harness kit | Ledningsnätssats | 4 |
| 0200 | | 88 20 045 | | 1986, B201, ME, FE, AU (FOR KIT 8820029) See page 8C-033, 7-B10 | X | Cable harness kit | Ledningsnätssats | 6 |
| 0230 | | 88 21 647 | | 1986, B201, C (FOR KIT 8820029) See page 8C-033, 7-B10 | X | Idling speed increase kit | Tomgångshöjningssats | 5 |
| 0260 | | *97 46 710* | | 1986 (FOR KIT 8820029) See page 8C-033, 7-B10 NLS | X | Accessories kit | Tillbehörsats | 4 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

8C GROUP INDEX

| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets: | 7-B08 |

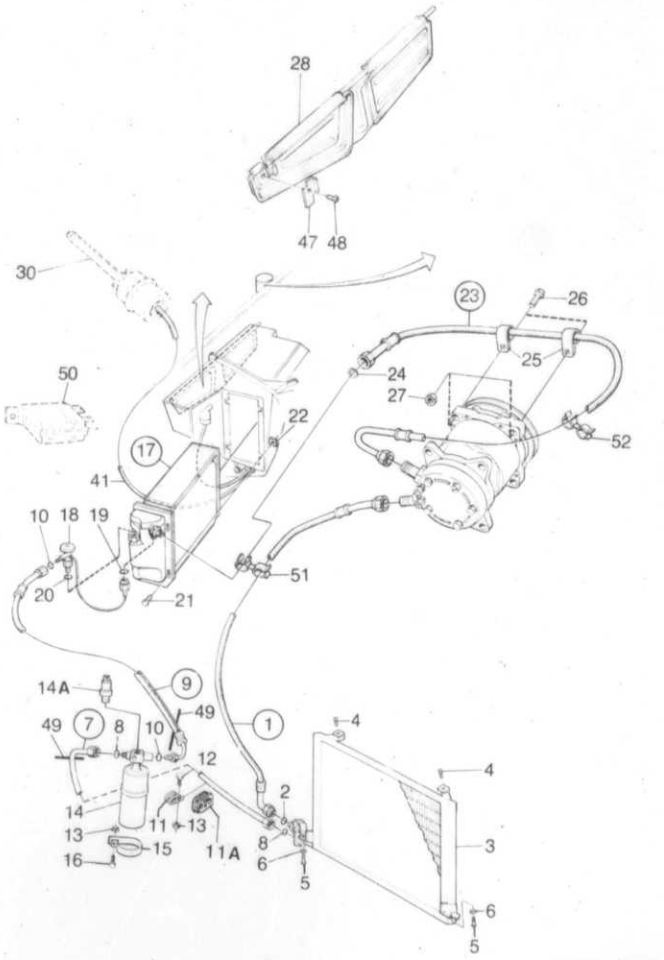


R 9749 - 900

Heating and ventilation

# 7-B06

## AC evaporator -1986 (Clarion)

Värme och ventilation

## AC förångare -1986 (Clarion)

| 1990 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 88 20 201 | | | 1 | Hose | Slang | 5 |
| 0020 | 2 | *79 72 094* | | NLS - USE 4318036 | 1 | .O-ring | .O-ring | 2 |
| 0030 | 3 | 88 20 177 | | | 1 | Condenser | Kondensor | 5 |
| 0040 | 4 | 80 59 578 | | | 2 | Screw | Skruv | 5 |
| 0050 | 5 | 79 22 420 | | | 2 | Screw | Skruv | 5 |
| 0060 | 6 | 80 29 951 | | | 2 | Washer | Bricka | 5 |
| 0070 | 7 | 88 20 219 | | | 1 | Hose | Slang | 5 |
| 0080 | 8 | *79 72 086* | | NLS - USE 4318028 | 2 | .O-ring | .O-ring | 2 |
| 0090 | 9 | 88 20 227 | | | 1 | Hose | Slang | 5 |
| 0100 | 10 | *79 72 086* | | NLS - USE 4318028 | 2 | .O-ring | .O-ring | 2 |
| 0110 | 11 | 94 81 458 | | | 1 | Clamp | Klammer | 5 |
| 0120 | 11A | 94 81 441 | | | 1 | Spacer | Mellanlägg | 5 |
| 0130 | 12 | *80 19 911* | | NLS - USE 7399603 | 1 | Screw | Skruv | 5 |
| 0140 | 13 | 80 29 555 | | | 2 | Nut | Mutter | 5 |
| 0150 | 14 | *83 20 185* | | NLS - USE 4383543, 9480740, 9481128 | 1 | Reservoir | Behållare | 4 |
| 0160 | 14A | 88 21 639 | | | 1 | .Contact | .Kontakt | 5 |
| 0170 | 15 | *94 61 088* | | NLS - USE 9481128 | 1 | Clamp | Klamma | 5 |
| 0180 | 16 | 80 82 968 | | | 1 | Screw | Skruv | 5 |
| 0190 | 17 | *88 20 169* | | NLS - USE 9480955 | 1 | Evaporator | Förångare | 5 |
| 0200 | 18 | *88 21 431* | | NLS - USE 9480914 | 1 | .Valve | .Ventil | 5 |
| 0210 | 19 | 79 72 078 | | | 1 | .O-ring | .O-ring | 2 |
| 0220 | 20 | *79 72 094* | | NLS - USE 4318036 | 1 | .O-ring | .O-ring | 2 |
| 0230 | 21 | 79 22 461 | | | 4 | Screw | Skruv | 5 |
| 0240 | 22 | 94 65 600 | | | 4 | Nut | Mutter | 3 |
| 0250 | 23 | 88 20 193 | | | 1 | Hose | Slang | 5 |
| 0260 | 24 | *79 72 482* | | NLS - USE 4318044 | 1 | .O-ring | .O-ring | 2 |
| 0270 | 25 | *94 80 898* | | NLS - USE 4072492 | 2 | Clamp | Klammer | 5 |
| 0280 | 26 | 80 19 945 | | | 2 | Screw | Skruv | 5 |
| 0290 | 27 | 80 73 512 | | | 2 | Lock nut | Låsmutter | 3 |
| 0300 | 28 | 88 20 151 | | | 1 | Shutter | Spjäll | 5 |
| 0310 | 30 | | | See page 8C-013, 7-A14 | | .Vacuum servo | .Vakuumservo | |
| 0320 | 47 | 88 21 548 | | | 1 | Attaching plate | Fästplatta | 6 |
| 0330 | 48 | *88 21 555* | | NLS | 1 | Screw | Skruv | 5 |
| 0340 | 49 | 82 78 558 | | | 1 | Protecting moulding | Skyddslist | 5 |
| 0350 | 50 | | | See page 3A-071, 2-C24 | | Microswitch | Mikrobrytare | |
| 0360 | 51 | 73 98 373 | | | 1 | Clamp | Klammer | 5 |
| 0370 | 52 | 73 98 530 | | | 1 | Clamp | Klammer | 5 |





MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8C GROUP INDEX



| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets: | 7-B08 |

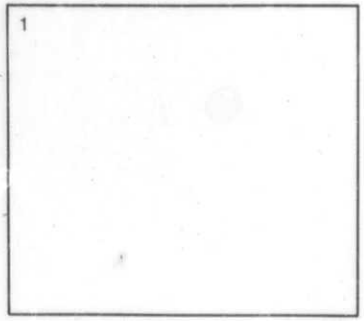


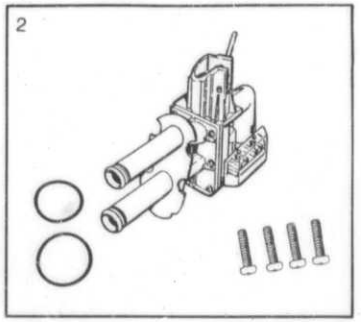
F0858 - 900

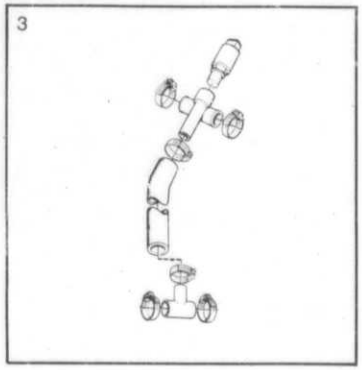Complete sets
# 7-B08
## Body
## Heating and ventilation

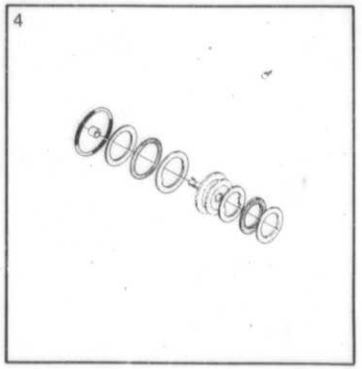Satser
## Kaross
## Värme och ventilation
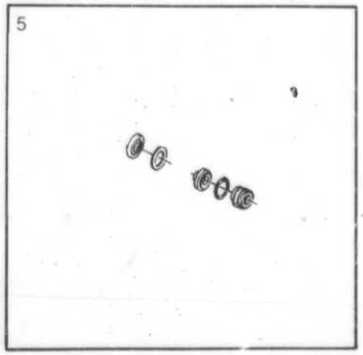
| 2550 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0010 2 | *97 46 322* | | NLS - USE 8605388 | X | Water valve | Värmekran | 9 |
| 0020 | *94 80 997* | | 1) NLS - USE 4074407 | 1 | . Water valve | . Värmekran | 4 |
| 0030 | 94 79 213 | | | 1 | . O-ring | . O-ring | 2 |
| 0040 | 94 79 221 | | | 1 | . O-ring | . O-ring | |
| 0050 | 80 97 750 | | | 4 | . Screw | . Skruv | 5 |
| 0060 | | | | | | | |
| 0070 3 | 86 05 081 | | 323), 1988- B202, SE, EU (FOR KIT 9698283) | 1 | Idling speed increase kit | Tomgångshöjningssats | 4 |
| 0080 | | | | | | | |
| 0090 | 75 26 338 | | | 1 | . Hose | . Slang | 6 |
| 0100 | 75 28 144 | | | 1 | . T-pipe | . T-rör | 5 |
| 0110 | 79 75 543 | | | 6 | . Hose clamp | . Slangklamma | 5 |
| 0120 | 83 17 828 | | | 1 | . Nipple | . Nippel | 5 |
| 0130 | 83 34 005 | | | 1 | . Solenoid valve | . Magnetventil | 3 |
| 0140 | | | | | | | |
| 0150 4 | 97 46 827 | | SANDEN | X | Ball bearing kit | Kullagersats | 5 |
| 0160 | 94 81 847 | | 1) | 1 | . Thrust bearing | . Axiallager | 5 |
| 0170 | 94 81 854 | | 1) | 1 | . Thrust bearing | . Axiallager | 5 |
| 0180 | 94 81 862 | | 1) | 1 | . Seal | . Tätning | 5 |
| 0190 | | | | | | | |
| 0200 5 | 94 82 357 | | COMPRESSOR AC | | Sealing kit | Tätningssats | 4 |
| 0210 | | | | | | | |
| 0220 6 | 88 21 597 | | COMPRESSOR AC (CLARION) | | Gasket kit | Packningssats | 4 |

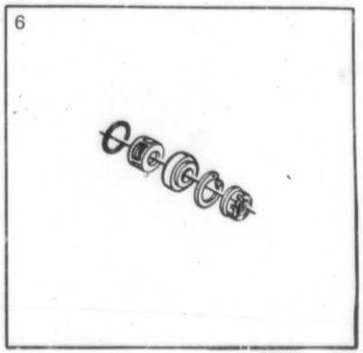1. Not as separate spare part. Ej som separat reservdel.
323. Without catalytic converter. Utan katalytisk reaktor.





MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8C GROUP INDEX



| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets: | 7-B08 |

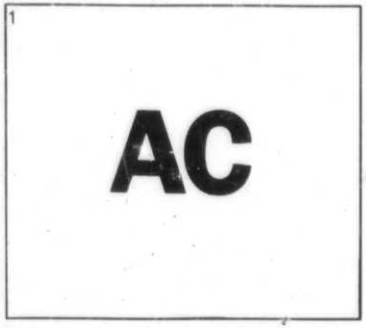


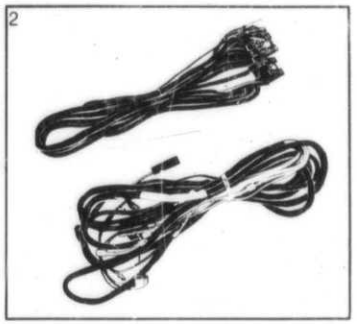



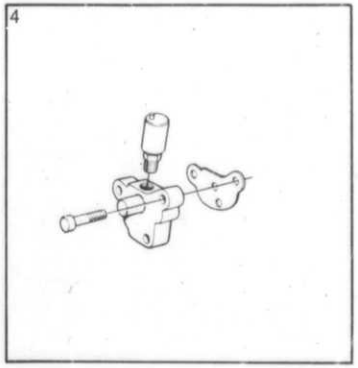

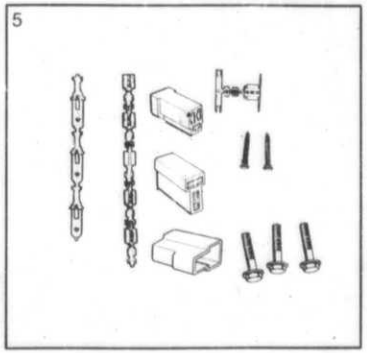

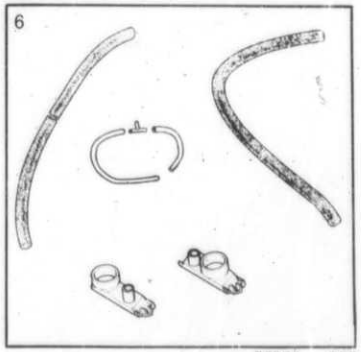F0859 - 900

Complete sets
# 7-B10
## Body
## Heating and ventilation

Satser
## Kaross
## Värme och ventilation

| 2000 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 0010 1 | *88 20 029* | | 1986, B201, | X | Air conditioning | Luftkonditionering | 6 |
| 0020 | | | USE SUPPLEMENTARY KIT NLS | | | | |
| 0030 | 88 20 987 | | | 1 | .Compressor | .Kompressor | 5 |
| 0040 | 93 31 562 | | | 1 | .Bracket | .Fäste | 6 |
| 0050 | 88 21 001 | | | 1 | .Bracket | .Konsol | 6 |
| 0060 | 88 20 128 | | | 1 | .Arm | .Arm | 5 |
| 0070 | 93 30 184 | | | 1 | .Pulley | .Remskiva | 4 |
| 0080 | 93 44 623 | | | 1 | .V-belt | .Kilrem | 1 |
| 0090 | 88 20 151 | | | 1 | .Shutter | .Spjäll | 5 |
| 0100 | *88 20 169* | | NLS - USE 9480955 | 1 | .Evaporator | .Förångare | 5 |
| 0110 | 88 20 177 | | | 1 | .Condenser | .Kondensor | 5 |
| 0120 | *88 20 185* | | NLS - USE 4383543, | 1 | .Reservoir | .Behållare | 4 |
| 0120 | | | 9480740, 9481128 | | | | |
| 0130 | 88 20 193 | | | 1 | .Hose | .Slang | 5 |
| 0140 | 88 20 201 | | | 1 | .Hose | .Slang | 5 |
| 0150 | 88 20 219 | | | 1 | .Hose | .Slang | 5 |
| 0160 | 88 20 227 | | | 1 | .Hose | .Slang | 5 |
| 0170 | 88 21 019 | | | 1 | .Cable harness | .Ledningsnät | 6 |
| 0180 | *88 21 456* | | NLS | 1 | .Cable harness | .Ledningsnät | 6 |
| 0190 | *80 19 903* | | NLS - USE 9166281 | 3 | .Screw | .Skruv | 5 |
| 0200 | *80 29 779* | | NLS - USE 8151243 | 4 | .Nut | .Mutter | 5 |
| 0210 | 80 82 943 | | | 2 | .Screw | .Skruv | 5 |
| 0220 | *80 83 164* | | NLS - USE 8148223 | 4 | .Screw | .Skruv | 5 |
| 0230 | 80 83 933 | | | 2 | .Screw | .Skruv | 5 |
| 0240 | 93 39 623 | | | 1 | .Screw | .Skruv | 5 |
| 0250 | 93 39 615 | | | 2 | .Screw | .Skruv | 5 |
| 0260 | 80 29 985 | | | 2 | .Washer | .Bricka | 5 |
| 0270 | 79 71 724 | | | 3 | .Screw | .Skruv | 5 |
| 0280 | 88 21 126 | | | 1 | .Vacuum servo | .Vakuumservo | 5 |
| 0290 | 88 20 532 | | | 1 | .Thermo contact | .Termokontakt | 4 |
| 0300 | 80 59 230 | | | 2 | .Screw | .Skruv | 5 |
| 0310 | 94 60 742 | | | 1 | .Bushing | .Bussning | 5 |
| 0320 | 79 22 461 | | | 4 | .Screw | .Skruv | 5 |
| 0330 | 94 65 600 | | | 4 | .Nut | .Mutter | 3 |
| 0340 | 88 21 142 | | | 1 | .Solenoid valve | .Magnetventil | 4 |
| 0350 | *94 80 278* | | NLS - USE 9482563 | 1 | .Vacuum hose | .Vakuumslang | 4 |
| 0360 | *94 80 567* | | NLS - USE 9482571 | 1 | .Vacuum hose | .Vakuumslang | 4 |
| 0370 | 94 80 666 | | | 1 | .Vacuum hose | .Vakuumslang | 4 |
| 0380 | 79 22 891 | | | 2 | .Screw | .Skruv | 5 |
| 0390 | 94 80 575 | | | 1 | .T-pipe | .T-rör | 5 |
| 0400 | 88 21 548 | | | 1 | .Attaching plate | .Fästplatta | 6 |
| 0410 | *88 21 555* | | NLS | 1 | .Screw | .Skruv | 5 |
| 0420 | *88 21 613* | | NLS | 1 | .Cable terminal | .Kabelsko | 5 |
| 0430 | *88 21 621* | | NLS | 1 | .Cable protection | .Kabelskydd | 5 |
| 0440 | 80 59 578 | | | 2 | .Screw | .Skruv | 5 |
| 0450 | 79 22 420 | | | 2 | .Screw | .Skruv | 5 |
| 0460 | 80 29 951 | | | 2 | .Washer | .Bricka | 5 |
| 0470 | 80 74 106 | | | 1 | .Nut | .Mutter | 5 |
| 0480 | *94 61 088* | | NLS - USE 9481128 | 1 | .Clamp | .Klamma | 5 |
| 0490 | 80 82 968 | | | 1 | .Screw | .Skruv | 5 |
| 0500 | *94 64 736* | | NLS - USE 9480971 | 1 | .Clamp | .Klamma | 5 |
| 0510 | *94 80 898* | | NLS - USE 4072492 | 2 | .Clamp | .Klammer | 5 |
| 0520 | 80 19 945 | | | 2 | .Screw | .Skruv | 5 |
| 0530 | 80 73 512 | | | 3 | .Lock nut | .Låsmutter | 3 |
| 0540 | 82 78 558 | | | 2 | .Protecting moulding | .Skyddslist | 5 |
| 0550 | *80 19 929* | | NLS - USE 9166299 | 1 | .Screw | .Skruv | 5 |
| 0560 | 79 70 064 | | | 6 | .Hose clamp | .Slangklamma | 5 |
| 0570 | 88 20 722 | | | 1 | .Solenoid valve | .Magnetventil | 3 |
| 0580 | 83 17 828 | | | 1 | .Nipple | .Nippel | 5 |
| 0590 | *93 39 433* | | NLS - USE 9367525 | 1 | .Hose | .Slang | 5 |
| 0600 | *88 21 100* | | NLS | 1 | .Switch | .Strömställare | 5 |
| 0610 | 93 07 935 | | | 1 | .Spring | .Fjäder | 5 |
| 0620 | 93 50 752 | | | 1 | .Bracket | .Hållare | 6 |
| 0630 | 79 65 361 | | | 2 | .Screw | .Skruv | 5 |





MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8C GROUP INDEX



| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets: | 7-B08 |

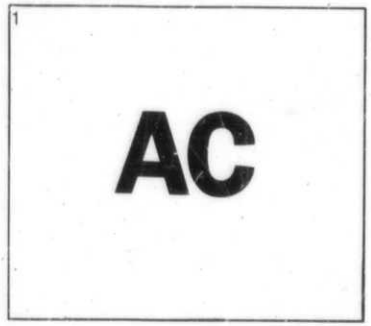


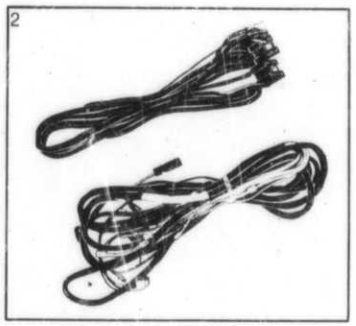



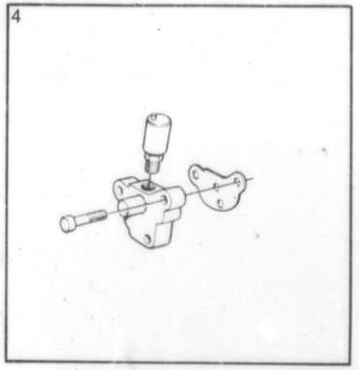

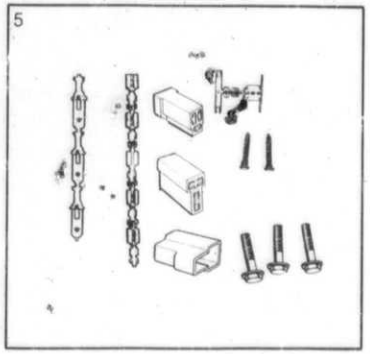

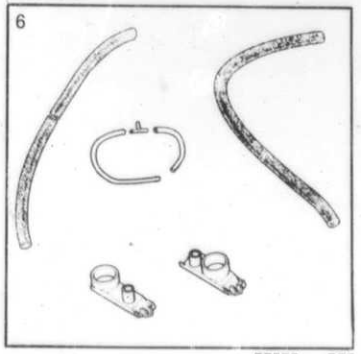F0859 - 900

Complete sets
# 7-B12
## Body
## Heating and ventilation

Satser
## Kaross
## Värme och ventilation

| 2600 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0640 | | 93 50 745 | | | 1 | . Bracket | . Fäste | 6 |
| 0650 | | *93 50 760* | | NLS | 1 | . Lever | . Hävarm | 6 |
| 0660 | | 93 08 719 | | | 2 | . Screw | . Skruv | 5 |
| 0670 | | 71 56 409 | | | 2 | . Clamp | . Klammer | 5 |
| 0680 | | 79 70 106 | | | 2 | . Hose clamp | . Slangklamma | 5 |
| 0690 | | 88 20 797 | | | 1 | . Contact | . Kontakt | 2 |
| 0700 | | 79 22 735 | | | 3 | . Screw | . Skruv | 5 |
| 0710 | | 80 29 944 | | | 3 | . Washer | . Bricka | 5 |
| 0720 | | 85 36 401 | | | 1 | . Relay | . Relä | 3 |
| 0730 | | 85 72 190 | | | 1 | . Relay | . Relä | 3 |
| 0740 | | 79 71 880 | | | 15 | . Tensioning band | . Spännband | 4 |
| 0750 | | 85 68 453 | | | 1 | . Switch | . Strömställare | 3 |
| 0760 | | *94 80 278* | | NLS - USE 9482563 | 2 | . Vacuum hose | . Vakuumslang | 4 |
| 0770 | | 94 80 542 | | | 1 | . Plug | . Plugg | 5 |
| 0780 | | 94 80 575 | | | 1 | . T-pipe | . T-rör | 5 |
| 0790 | | 85 90 671 | | | 1 | . Switch | . Strömställare | |
| 0800 | | 94 49 489 | | | 1 | . Decal | . Dekal | 5 |
| 0810 | | *94 79 783* | | NLS - USE 9631300 | 1 | . Label | . Etikett | 5 |
| 0820 | | | | | 1 | . Assembly instruction | . Monteringsanvisning | |
| 0830 | | | | | | | | |
| 0840 | 1 | 96 26 771 | | 1986, B202 | X | Air conditioning | Luftkonditionering | 6 |
| 0850 | | 40 27 660 | | | 3 | . Screw | . Skruv | 5 |
| 0860 | | *40 70 827* | | NLS - USE 4073995 | 1 | . Compressor | . Kompressor | 6 |
| 0870 | | 71 55 104 | | | 1 | . Contact housing | . Kontakthus | 4 |
| 0880 | | 71 55 500 | | | 1 | . Clamp | . Klammer | 5 |
| 0890 | | 71 63 074 | | | 2 | . Plug | . Plugg | 5 |
| 0900 | | 73 98 373 | | | 1 | . Clamp | . Klammer | 5 |
| 0910 | | 73 98 530 | | | 1 | . Clamp | . Klammer | 5 |
| 0920 | | 73 99 603 | | | 1 | . Screw | . Skruv | 5 |
| 0930 | | 75 12 247 | | | 1 | . Screw | . Skruv | 5 |
| 0940 | | 75 28 144 | | | 1 | . T-pipe | . T-rör | 5 |
| 0950 | | 75 26 338 | | | 1 | . Hose | . Slang | 6 |
| 0960 | | 75 42 228 | | | 1 | . Tension pulley | . Spännrulle | 5 |
| 0970 | | 75 49 439 | | | 1 | . Bracket | . Fäste | 6 |
| 0980 | | 79 00 335 | | | 1 | . Screw | . Skruv | 5 |
| 0990 | | 79 22 420 | | | 2 | . Screw | . Skruv | 5 |
| 1000 | | 79 22 461 | | | 4 | . Screw | . Skruv | 5 |
| 1010 | | 79 22 735 | | | 3 | . Screw | . Skruv | 5 |
| 1020 | | 79 22 891 | | | 1 | . Screw | . Skruv | 5 |
| 1030 | | 79 33 443 | | | 2 | . Clip | . Clips | 5 |
| 1040 | | 79 40 398 | | | 2 | . Lock nut | . Låsmutter | 5 |
| 1050 | | 79 65 809 | | | 1 | . Clip | . Clips | 5 |
| 1060 | | 79 67 979 | | | 4 | . Nut | . Mutter | 5 |
| 1070 | | 79 70 015 | | | 2 | . Screw | . Skruv | 5 |
| 1080 | | 79 70 106 | | | 2 | . Hose clamp | . Slangklamma | 5 |
| 1090 | | 79 71 864 | | | 1 | . Tensioning band | . Spännband | 5 |
| 1100 | | 79 71 880 | | | 1 | . Tensioning band | . Spännband | 4 |
| 1110 | | 79 72 490 | | | 3 | . Rivet | . Nit | 5 |
| 1120 | | 79 75 030 | | | 4 | . Screw | . Skruv | 5 |
| 1130 | | 79 75 543 | | | 6 | . Hose clamp | . Slangklamma | 5 |
| 1140 | | 80 19 945 | | | 3 | . Screw | . Skruv | 5 |
| 1150 | | 80 19 978 | | | 2 | . Screw | . Skruv | 5 |
| 1160 | | 80 29 944 | | | 3 | . Washer | . Bricka | 5 |
| 1170 | | 80 29 951 | | | 2 | . Washer | . Bricka | 5 |
| 1180 | | 80 29 985 | | | 1 | . Washer | . Bricka | 5 |
| 1190 | | 80 59 578 | | | 2 | . Screw | . Skruv | 5 |
| 1200 | | 80 73 108 | | | 4 | . Washer | . Bricka | 5 |
| 1210 | | 80 73 249 | | | 1 | . Washer | . Bricka | 5 |
| 1220 | | 80 73 512 | | | 2 | . Lock nut | . Låsmutter | 3 |
| 1230 | | 80 74 106 | | | 1 | . Nut | . Mutter | 5 |
| 1240 | | 80 74 270 | | | 3 | . Lock nut | . Låsmutter | 3 |
| 1250 | | 80 74 288 | | | 1 | . Nut | . Mutter | 5 |
| 1260 | | *80 82 919* | | NLS - USE 8082935 | 1 | . Screw | . Skruv | 5 |
| 1270 | | 80 82 943 | | | 1 | . Screw | . Skruv | 5 |
| 1280 | | 80 82 968 | | | 1 | . Screw | . Skruv | 5 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8C GROUP INDEX


| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets: | 7-B08 |


Complete sets


# 7-B14

## Body
## Heating and ventilation

Satser


## Kaross
## Värme och ventilation

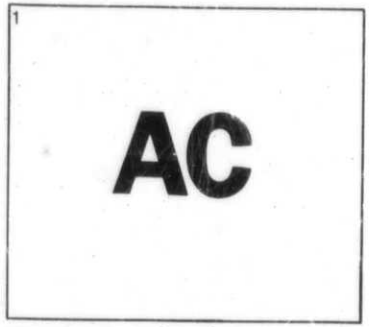


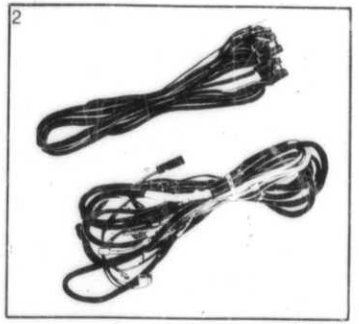






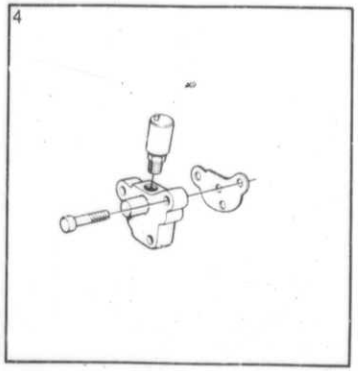

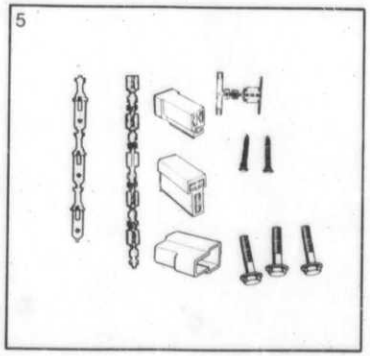

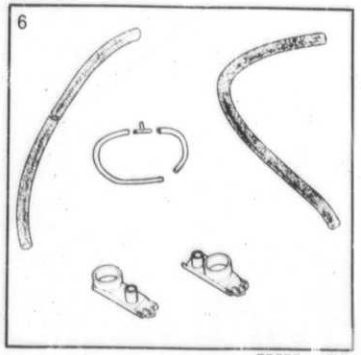F0859 900

| 2600 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 1290 | | 80 98 089 | | | 1 | .Screw | .Skruv | 5 |
| 1300 | | 80 98 113 | | | 2 | .Screw | .Skruv | 5 |
| 1310 | | 81 51 227 | | | 1 | .Nut | .Mutter | 5 |
| 1320 | | 82 78 558 | | | 1 | .Protecting moulding | .Skyddslist | 5 |
| 1330 | | 83 17 828 | | | 1 | .Nipple | .Nippel | 5 |
| 1340 | | 83 30 268 | | | 1 | .Seal | .Tätning | 5 |
| 1350 | | 83 34 005 | | | 1 | .Solenoid valve | .Magnetventil | 3 |
| 1360 | | 83 37 859 | | | 1 | .Fan shroud | .Fläktkåpa | 4 |
| 1370 | | 83 56 859 | | | 2 | .Sleeve | .Hylsa | 6 |
| 1380 | | 85 66 598 | | | 1 | .Nut | .Mutter | 5 |
| 1390 | | 85 72 190 | | AC-FAN | 1 | .Relay | .Relä | 3 |
| 1400 | | 85 82 728 | | | 1 | .Fan motor | .Fläktmotor | 4 |
| 1410 | | 85 90 275 | | | 1 | .Cable harness | .Ledningsnät | 6 |
| 1420 | | 85 91 117 | | | 1 | .Solenoid valve | .Magnetventil | 4 |
| 1430 | | 85 93 766 | | | 1 | .Switch | .Brytare | 4 |
| 1440 | | 93 30 184 | | | 1 | .Pulley | .Remskiva | 4 |
| 1450 | | 93 32 826 | | | 1 | .Pipe | .Rör | 5 |
| 1460 | | 93 39 615 | | | 1 | .Screw | .Skruv | 5 |
| 1470 | | 93 67 020 | | | 1 | .V-belt | .Kilrem | 1 |
| 1480 | | 94 00 896 | | | 1 | .Lever | .Hävarm | 6 |
| 1490 | | 94 20 241 | | | 1 | .Shaft | .Axel | 6 |
| 1500 | | 94 20 266 | | | 1 | .Vacuum servo | .Vakuumservo | 5 |
| 1510 | | 94 20 274 | | | 1 | .Spring | .Fjäder | 5 |
| 1520 | | 94 20 282 | | | 1 | .Bracket | .Konsol | 6 |
| 1530 | | 94 22 403 | | | 1 | .Pivot pin | .Lagertapp | 5 |
| 1540 | | 94 38 250 | | | 1 | .Dolly plate | .Mothållsplåt | 6 |
| 1550 | | 94 41 221 | | | 1 | .Clip | .Clips | 5 |
| 1560 | | 94 49 489 | | | 1 | .Decal | .Dekal | 5 |
| 1570 | | 94 65 600 | | | 4 | .Nut | .Mutter | 3 |
| 1580 | | *94 80 039* | | NLS - USE 4383543 | 1 | .Reservoir | .Behållare | 4 |
| 1590 | | 96 31 300 | | | 1 | .Label | .Etikett | 5 |
| 1600 | | 94 80 559 | | | 1 | .Vacuum hose | .Vakuumslang | 4 |
| 1610 | | 94 80 575 | | | 2 | .T-pipe | .T-rör | 5 |
| 1620 | | 94 80 666 | | | 1 | .Vacuum hose | .Vakuumslang | 4 |
| 1630 | | 94 80 955 | | | 1 | .Evaporator | .Förångare | 5 |
| 1640 | | 94 81 128 | | | 1 | .Clamp | .Klämma | 5 |
| 1650 | | 94 81 391 | | | 1 | .Hose | .Slang | 5 |
| 1660 | | 94 81 441 | | | 1 | .Spacer | .Mellanlägg | 5 |
| 1670 | | 94 81 458 | | | 1 | .Clamp | .Klammer | 5 |
| 1680 | | 94 81 466 | | | 1 | .Tube | .Rör | 5 |
| 1690 | | *94 81 532* | | NLS - USE 9482001 | 1 | .Hose | .Slang | 5 |
| 1700 | | 94 81 664 | | | 1 | .Base | .Underlägg | 5 |
| 1710 | | 94 81 680 | | | 1 | .Shutter | .Spjäll | 5 |
| 1720 | | *94 81 698* | | NLS - USE 7398373 | 1 | .Clamp | .Klammer | 5 |
| 1730 | | *94 81 706* | | NLS - USE 7398530 | 1 | .Clamp | .Klammer | 5 |
| 1740 | | 94 81 961 | | | 2 | .Brace | .Bygel | 5 |
| 1750 | | 94 82 563 | | | 1 | .Vacuum hose | .Vakuumslang | 4 |
| 1760 | | 94 82 571 | | | 3 | .Vacuum hose | .Vakuumslang | 4 |
| 1770 | | *95 13 219* | | OMPR. COOLING FAN NLS - USE 4179925 | 1 | .Relay | .Relä | 5 |
| 1780 | | 95 23 788 | | | 1 | .Switch | .Strömställare | 3 |
| 1790 | | 95 23 846 | | | 1 | .Switch | .Strömställare | 3 |
| 1800 | | *95 26 526* | | NLS - USE 4086724 | 1 | .Thermo contact | .Termokontakt | 2 |
| 1810 | | 95 50 468 | | | 1 | .Resistor | .Motstånd | 3 |
| 1820 | | | | | 1 | .Assembly instruction | .Monteringsanvisning | |
| 1830 | | | | | | | | |
| 1840 | 1 | *96 98 010* | | 987 B201 I, TURBO NLS - USE 9698291 | X | Air conditioning kit | Luftkonditioneringssats | 6 |
| 1850 | | 40 27 660 | | | 3 | .Screw | .Skruv | 5 |
| 1860 | | 70 60 999 | | | 3 | .Washer | .Bricka | 5 |
| 1870 | | 71 55 500 | | | 1 | .Clamp | .Klammer | 5 |
| 1880 | | 71 63 074 | | | 2 | .Plug | .Plugg | 5 |
| 1890 | | 73 98 373 | | | 1 | .Clamp | .Klammer | 5 |
| 1900 | | 73 98 530 | | | 1 | .Clamp | .Klammer | 5 |
| 1910 | | 73 99 280 | | | 1 | .Screw | .Skruv | 5 |




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8C GROUP INDEX


| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets: | 7-B08 |

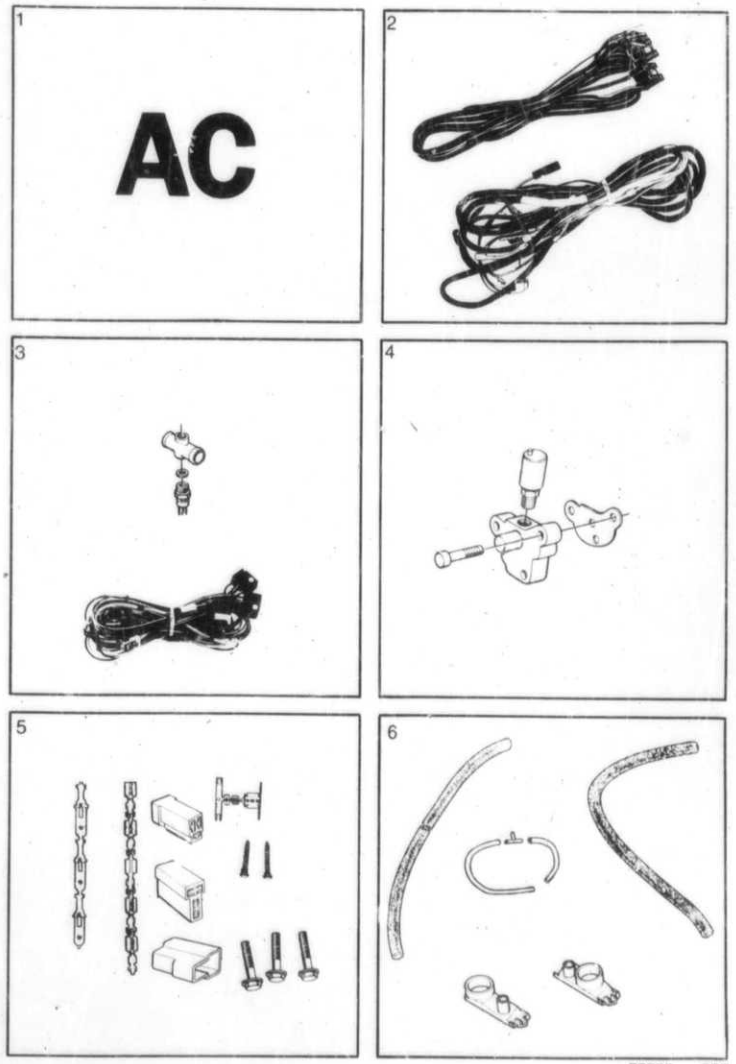


F0859 - 900

Complete sets
# 7-B16
## Body
## Heating and ventilation

Satser
## Kaross
## Värme och ventilation

| 2600 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 1920 | | *75 13 815* | | NLS - USE 7588270 | 1 | .Switch | .Strömställare | 3 |
| 1930 | | 75 28 144 | | | 1 | .T-pipe | .T-rör | 5 |
| 1940 | | 75 35 487 | | | 1 | .Protecting moulding | .Skyddslist | 5 |
| 1950 | | 75 43 556 | | | 1 | .Arm | .Arm | 5 |
| 1960 | | 75 43 606 | | | 1 | .Screw | .Skruv | |
| 1970 | | 75 43 614 | | | 1 | .Pin | .Axeltapp | 5 |
| 1980 | | 79 22 420 | | | 2 | .Screw | .Skruv | 5 |
| 1990 | | 79 22 461 | | | 4 | .Screw | .Skruv | 5 |
| 2000 | | 79 22 891 | | | 2 | .Screw | .Skruv | 5 |
| 2010 | | 79 40 398 | | | 2 | .Lock nut | .Låsmutter | 5 |
| 2020 | | 79 65 809 | | | 1 | .Clip | .Clips | 5 |
| 2030 | | 79 67 953 | | | 2 | .Nut | .Mutter | 5 |
| 2040 | | 79 67 979 | | | 4 | .Nut | .Mutter | 5 |
| 2050 | | 79 70 015 | | | 2 | .Screw | .Skruv | 5 |
| 2060 | | 79 70 106 | | | 2 | .Hose clamp | .Slangklamma | 5 |
| 2070 | | 79 70 346 | | | 2 | .Screw | .Skruv | 5 |
| 2080 | | 79 71 864 | | | 1 | .Tensioning band | .Spännband | 5 |
| 2090 | | 79 71 872 | | | 1 | .Tensioning band | .Spännband | 5 |
| 2100 | | 79 71 880 | | | 13 | .Tensioning band | .Spännband | 4 |
| 2110 | | 79 71 922 | | | 1 | .Nut | .Mutter | 3 |
| 2120 | | *79 72 326* | | NLS - USE 7972490 | 3 | .Rivet | .Nit | 5 |
| 2130 | | 79 75 030 | | | 4 | .Screw | .Skruv | 5 |
| 2140 | | 79 75 238 | | | 5 | .Screw | .Skruv | 5 |
| 2150 | | 79 77 440 | | | 1 | .Washer | .Bricka | 5 |
| 2160 | | 79 77 499 | | | 2 | .Screw | .Skruv | 5 |
| 2170 | | *80 19 911* | | NLS - USE 7399603 | 1 | .Screw | .Skruv | 5 |
| 2180 | | 80 19 945 | | | 3 | .Screw | .Skruv | 5 |
| 2190 | | 80 29 555 | | | 1 | .Nut | .Mutter | 5 |
| 2200 | | 80 29 951 | | | 2 | .Washer | .Bricka | 5 |
| 2210 | | 80 59 578 | | | 2 | .Screw | .Skruv | 5 |
| 2220 | | 80 73 108 | | | 4 | .Washer | .Bricka | 5 |
| 2230 | | 80 73 512 | | | 2 | .Lock nut | .Låsmutter | 3 |
| 2240 | | 80 74 106 | | | 1 | .Nut | .Mutter | 5 |
| 2250 | | 80 74 270 | | | 3 | .Lock nut | .Låsmutter | 3 |
| 2260 | | 80 83 974 | | | 1 | .Screw | .Skruv | 5 |
| 2270 | | 83 17 828 | | | 1 | .Nipple | .Nippel | 5 |
| 2280 | | 83 30 268 | | | 1 | .Seal | .Tätning | 5 |
| 2290 | | 83 34 005 | | | 1 | .Solenoid valve | .Magnetventil | 3 |
| 2300 | | 83 37 859 | | | 1 | .Fan shroud | .Fläktkåpa | 4 |
| 2310 | | 85 66 598 | | | 1 | .Nut | .Mutter | 5 |
| 2320 | | 85 72 190 | | AC-FAN | 1 | .Relay | .Relä | 3 |
| 2330 | | 85 91 117 | | RECIRCULATION | 1 | .Solenoid valve | .Magnetventil | 4 |
| 2340 | | 85 93 766 | | | 1 | .Switch | .Brytare | 4 |
| 2350 | | 85 94 806 | | | 1 | .Fan motor | .Fläktmotor | 4 |
| 2360 | | 85 99 565 | | | 1 | .Protecting moulding | .Skyddslist | 4 |
| 2370 | | 93 07 935 | | | 1 | .Spring | .Fjäder | 5 |
| 2380 | | 93 08 719 | | | 2 | .Screw | .Skruv | 5 |
| 2390 | | *93 25 663* | | NLS - USE 4118964 | 1 | .Pulley | .Remskiva | 5 |
| 2400 | | 93 30 184 | | | 1 | .Pulley | .Remskiva | 4 |
| 2410 | | 93 32 826 | | | 1 | .Pipe | .Rör | 5 |
| 2420 | | 93 39 615 | | | 1 | .Screw | .Skruv | 5 |
| 2430 | | 93 50 745 | | | 1 | .Bracket | .Fäste | 6 |
| 2440 | | 93 50 752 | | | 1 | .Bracket | .Hållare | 6 |
| 2450 | | *93 50 760* | | NLS | 1 | .Lever | .Hävarm | 6 |
| 2460 | | 93 65 834 | | | 1 | .Bracket | .Fäste | 6 |
| 2470 | | 93 67 020 | | | 1 | .V-belt | .Kilrem | 1 |
| 2480 | | 93 67 525 | | | 1 | .Hose | .Slang | 4 |
| 2490 | | 94 00 896 | | | 1 | .Lever | .Hävarm | 6 |
| 2500 | | *94 01 951* | | NLS - USE 4382396 | 1 | .Condenser | .Kondensor | 5 |
| 2510 | | 94 20 241 | | | 1 | .Shaft | .Axel | 6 |
| 2520 | | 94 20 266 | | | 1 | .Vacuum servo | .Vakuumservo | 5 |
| 2530 | | 94 20 274 | | | 1 | .Spring | .Fjäder | 5 |
| 2540 | | 94 20 282 | | | 1 | .Bracket | .Konsol | 6 |
| 2550 | | 94 22 403 | | | 1 | .Pivot pin | .Lagertapp | 5 |
| 2560 | | 94 38 250 | | | 1 | .Dolly plate | .Mothållsplåt | 6 |





MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8C GROUP INDEX



| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets: | 7-B08 |

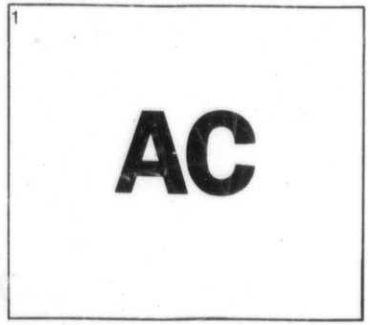


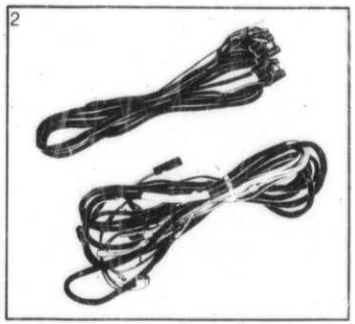






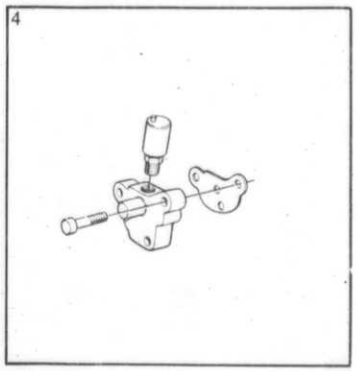

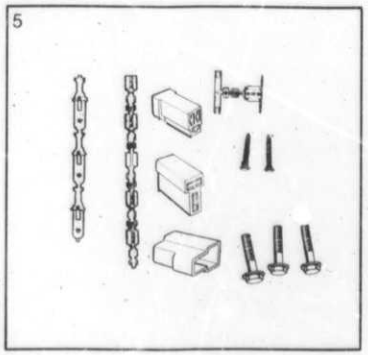

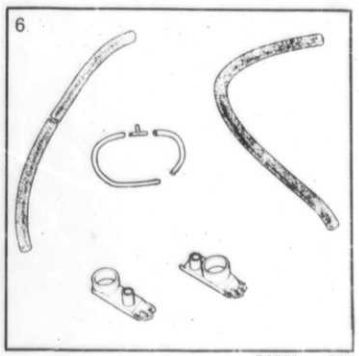F0859 - 900

Complete sets
# 7-B18
## Body
## Heating and ventilation

Satser
## Kaross
## Värme och ventilation

| 2600 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 2570 | | 94 41 221 | | | 1 | .Clip | .Clips | 5 |
| 2580 | | 94 49 489 | | | 1 | .Decal | .Dekal | 5 |
| 2590 | | 94 65 600 | | | 4 | .Nut | .Mutter | 3 |
| 2600 | | *94 79 783* | | NLS - USE 9631300 | 1 | .Label | .Etikett | 5 |
| 2610 | | *94 80 278* | | NLS - USE 9482563 | 3 | .Vacuum hose | .Vakuumslang | 4 |
| 2620 | | 94 80 559 | | | 1 | .Vacuum hose | .Vakuumslang | 4 |
| 2630 | | 94 80 542 | | | 1 | .Plug | .Plugg | 5 |
| 2640 | | *94 80 567* | | NLS - USE 9482571 | 1 | .Vacuum hose | .Vakuumslang | 4 |
| 2650 | | 94 80 575 | | | 2 | .T-pipe | .T-rör | 5 |
| 2660 | | 94 80 666 | | | 1 | .Vacuum hose | .Vakuumslang | 4 |
| 2670 | | 94 80 955 | | ALT 94 80 583 | 1 | .Evaporator | .Förångare | 5 |
| 2680 | | 94 81 441 | | | 1 | .Spacer | .Mellanlägg | 5 |
| 2690 | | 94 81 458 | | | 1 | .Clamp | .Klammer | 5 |
| 2700 | | 94 81 664 | | | 1 | .Base | .Underlägg | 5 |
| 2710 | | 94 81 680 | | | 1 | .Shutter | .Spjäll | 5 |
| 2720 | | 94 81 961 | | | 1 | .Brace | .Bygel | 5 |
| 2730 | | *94 81 979* | | NLS - USE 4073995 | 1 | .Compressor | .Kompressor | 6 |
| 2740 | | 94 82 001 | | | 1 | .Hose | .Slang | 5 |
| 2750 | | 94 82 027 | | | 1 | .Hose | .Slang | 5 |
| 2760 | | 94 82 035 | | | 1 | .Tube | .Rör | 5 |
| 2770 | | *94 82 068* | | NLS - USE 4383550 | 1 | .Reservoir | .Behållare | 4 |
| 2780 | | 95 03 418 | | | 1 | .Connector housing | .Skarvhus | 4 |
| 2790 | | 95 03 426 | | | 1 | .Connector housing | .Skarvhus | 4 |
| 2800 | | *95 13 219* | | COMPR COOLING FAN NLS - USE 4179925 | 1 | .Relay | .Relä | 5 |
| 2800 | | | | | | | | |
| 2810 | | 95 23 788 | | AC | 1 | .Switch | .Strömställare | 3 |
| 2820 | | 95 23 846 | | RECIRCULATION | 1 | .Switch | .Strömställare | 3 |
| 2830 | | 95 50 468 | | | 1 | .Resistor | .Motstånd | 3 |
| 2840 | | *95 52 878* | | COOLING WATER NLS - USE 4086724 | 1 | .Contact | .Kontakt | 2 |
| 2840 | | | | | | | | |
| 2850 | | 95 54 841 | | INSTRUMENT PANEL | 1 | .Cable harness | .Ledningsnät | 5 |
| 2860 | | 95 55 913 | | | 1 | .Clip | .Clips | 5 |
| 2870 | | 95 57 505 | | ENGINE HOUSE | 1 | .Cable harness | .Ledningsnät | 5 |
| 2880 | | | | 75/66 04 49 | 1 | .Assembly instruction | .Monteringsanvisning | |
| 2890 | | | | | | | | |
| 2900 | 1 | *96 98 028* | | 1987 B201 C NLS | X | Air conditioning kit | Luftkonditioneringssats | 6 |
| 2910 | | 40 27 660 | | | 3 | .Screw | .Skruv | 5 |
| 2920 | | 70 60 999 | | | 3 | .Washer | .Bricka | 5 |
| 2930 | | 70 61 328 | | | 1 | .Washer | .Bricka | 5 |
| 2940 | | 71 55 500 | | | 1 | .Clamp | .Klammer | 5 |
| 2950 | | 71 63 074 | | | 2 | .Plug | .Plugg | 5 |
| 2960 | | 73 98 373 | | | 1 | .Clamp | .Klammer | 5 |
| 2970 | | 73 98 530 | | | 1 | .Clamp | .Klammer | 5 |
| 2980 | | *75 21 453* | | NLS | 1 | .Adapter | .Adapter | 6 |
| 2990 | | 75 43 002 | | | 1 | .Bracket | .Konsol | 6 |
| 3000 | | 79 22 420 | | | 2 | .Screw | .Skruv | 5 |
| 3010 | | 79 22 461 | | | 4 | .Screw | .Skruv | 5 |
| 3020 | | 79 22 891 | | | 2 | .Screw | .Skruv | 5 |
| 3030 | | 79 40 398 | | | 2 | .Lock nut | .Låsmutter | 5 |
| 3040 | | 79 65 809 | | | 1 | .Clip | .Clips | 5 |
| 3050 | | 79 67 938 | | | 1 | .Screw | .Skruv | 5 |
| 3060 | | 79 67 953 | | | 1 | .Nut | .Mutter | 5 |
| 3070 | | 79 67 979 | | | 4 | .Nut | .Mutter | 5 |
| 3080 | | 79 70 015 | | | 2 | .Screw | .Skruv | 5 |
| 3090 | | 79 70 106 | | | 2 | .Hose clamp | .Slangkiamma | 5 |
| 3100 | | 79 70 346 | | | 2 | .Screw | .Skruv | 5 |
| 3110 | | 79 71 872 | | | 1 | .Tensioning band | .Spännband | 5 |
| 3120 | | 79 71 880 | | | 13 | .Tensioning band | .Snännband | 4 |
| 3130 | | 79 72 490 | | | 3 | .Rivet | .Nit | 5 |
| 3140 | | 79 75 030 | | | 4 | .Screw | .Skruv | 5 |
| 3150 | | 80 05 928 | | | 1 | .Stud | .Pinnskruv | 5 |
| 3160 | | *80 19 911* | | NLS - USE 7399603 | 1 | .Screw | .Skruv | 5 |
| 3170 | | 80 19 945 | | | 5 | .Screw | .Skruv | 5 |
| 3180 | | 81 51 227 | | (8029555) | 1 | .Nut | .Mutter | 5 |
| 3190 | | 80 29 951 | | | 2 | .Washer | .Bricka | 5 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8C GROUP INDEX



| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets: | 7-B08 |

# 7-B20

## Body
## Heating and ventilation


## Kaross
## Värme och ventilation

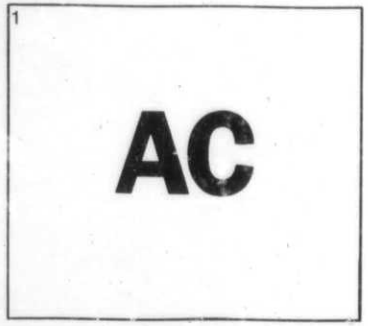


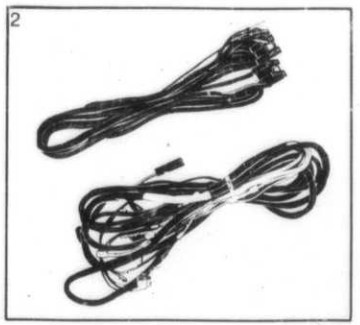






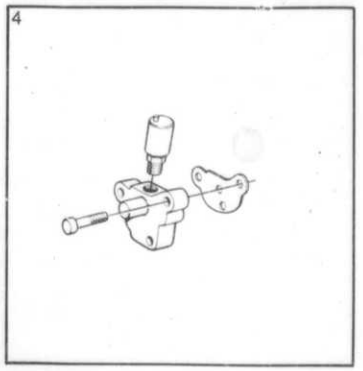

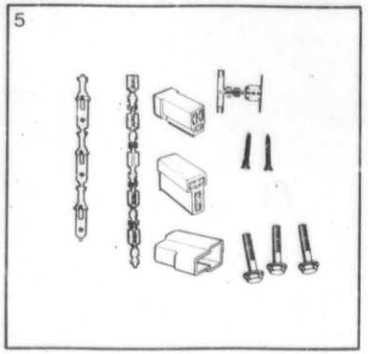

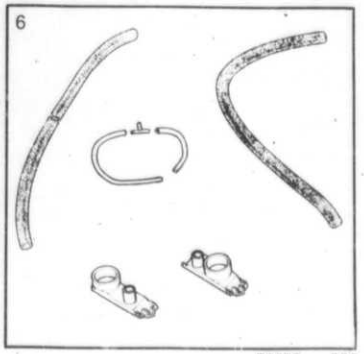F0859 - 900

| 2600 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 3200 | | 80 59 578 | | | 2 | . Screw | . Skruv | 5 |
| 3210 | | 80 73 108 | | | 4 | . Washer | . Bricka | 5 |
| 3220 | | 80 73 512 | | | 2 | . Lock nut | . Låsmutter | 3 |
| 3230 | | 80 74 106 | | | 1 | . Nut | . Mutter | 5 |
| 3240 | | 80 74 270 | | | 3 | . Lock nut | . Låsmutter | 3 |
| 3250 | | 80 82 943 | | | 2 | . Screw | . Skruv | 5 |
| 3260 | | 80 82 968 | | | 1 | . Screw | . Skruv | 5 |
| 3270 | | 83 08 983 | | | 3 | . Screw | . Skruv | |
| 3280 | | 83 30 268 | | | 1 | . Seal | . Tätning | 5 |
| 3290 | | 83 37 859 | | | 1 | . Fan shroud | . Fläktkåpa | 4 |
| 3300 | | 83 69 647 | | | 1 | . Gasket | . Packning | 4 |
| 3310 | | 85 66 598 | | | 1 | . Nut | . Mutter | 5 |
| 3320 | | 85 72 190 | | AC-FAN | 1 | . Relay | . Relä | 3 |
| 3330 | | 85 91 117 | | RECIRCULATION | 1 | . Solenoid valve | . Magnetventil | 4 |
| 3340 | | 85 93 766 | | | 1 | . Switch | . Brytare | 4 |
| 3350 | | 85 94 806 | | | 1 | . Fan motor | . Fläktmotor | 4 |
| 3360 | | 85 99 565 | | | 1 | . Protecting moulding | . Skyddslist | 4 |
| 3370 | | 93 07 935 | | | 1 | . Spring | . Fjäder | 5 |
| 3380 | | 93 08 719 | | | 2 | . Screw | . Skruv | 5 |
| 3390 | | 93 30 184 | | | 1 | . Pulley | . Remskiva | 4 |
| 3400 | | 93 31 562 | | | 1 | . Bracket | . Fäste | 6 |
| 3410 | | 93 32 826 | | | 1 | . Pipe | . Rör | 5 |
| 3420 | | 93 39 615 | | | 1 | . Screw | . Skruv | 5 |
| 3430 | | 93 39 623 | | | 1 | . Screw | . Skruv | 5 |
| 3440 | | 93 44 623 | | | 1 | . V-belt | . Kilrem | 1 |
| 3450 | | 93 45 190 | | | 1 | . Screw | . Skruv | 5 |
| 3460 | | 93 50 745 | | | 1 | . Bracket | . Fäste | 6 |
| 3470 | | *93 50 760* | | NLS | 1 | . Lever | . Hävarm | 6 |
| 3480 | | 93 69 109 | | | 1 | . Tension pulley | . Spännrulle | 5 |
| 3490 | | 94 00 896 | | | 1 | . Lever | . Hävarm | 6 |
| 3500 | | *94 01 951* | | NLS - USE 4382396 | 1 | . Condenser | . Kondensor | 5 |
| 3510 | | 94 20 241 | | | 1 | . Shaft | . Axel | 6 |
| 3520 | | 94 20 266 | | | 1 | . Vacuum servo | . Vakuumservo | 5 |
| 3530 | | 94 20 274 | | | 1 | . Spring | . Fjäder | 5 |
| 3540 | | 94 20 282 | | | 1 | . Bracket | . Konsol | 6 |
| 3550 | | 94 22 403 | | | 1 | . Pivot pin | . Lagertapp | 5 |
| 3560 | | 94 38 250 | | | 1 | . Dolly plate | . Mothållsplåt | 6 |
| 3570 | | 94 41 221 | | | 1 | . Clip | . Clips | 5 |
| 3580 | | 94 65 600 | | | 4 | . Nut | . Mutter | 3 |
| 3590 | | 96 31 300 | | | 1 | . Label | . Etikett | 5 |
| 3600 | | *94 80 278* | | NLS - USE 9482563 | 3 | . Vacuum hose | . Vakuumslang | 4 |
| 3610 | | 94 80 542 | | | 1 | . Plug | . Plugg | 5 |
| 3620 | | 94 80 559 | | | 1 | . Vacuum hose | . Vakuumslang | 4 |
| 3630 | | *94 80 567* | | NLS - USE 9482571 | 1 | . Vacuum hose | . Vakuumslang | 4 |
| 3640 | | 94 80 575 | | | 2 | . T-pipe | . T-rör | 5 |
| 3650 | | 94 80 666 | | | 1 | . Vacuum hose | . Vakuumslang | 4 |
| 3660 | | 94 80 773 | | | 1 | . Hose | . Slang | 5 |
| 3670 | | 94 81 961 | | (9480898) | 2 | . Brace | . Bygel | 5 |
| 3680 | | 94 80 955 | | ALT 94 80 583 | | . Evaporator | . Förångare | 5 |
| 3690 | | 94 81 441 | | | 1 | . Spacer | . Mellanlägg | 5 |
| 3700 | | 94 81 458 | | | 1 | . Clamp | . Klamm'er | 5 |
| 3710 | | 94 81 508 | | | 1 | . Compressor | . Kompressor | 5 |
| 3720 | | 94 81 664 | | | 1 | . Base | . Underlägg | 5 |
| 3730 | | 94 81 680 | | | 1 | . Shutter | . Spjäll | 5 |
| 3740 | | 94 82 019 | | | 1 | . Hose | . Slang | 5 |
| 3750 | | 94 82 027 | | | 1 | . Hose | . Slang | 5 |
| 3760 | | 94 82 035 | | | 1 | . Tube | . Rör | 5 |
| 3770 | | *94 82 068* | | NLS - USE 4383550 | 1 | . Reservoir | . Behållare | 4 |
| 3780 | | 95 03 418 | | | 1 | . Connector housing | . Skarvhus | 4 |
| 3790 | | 95 03 426 | | | 1 | . Connector housing | . Skarvhus | 4 |
| 3800 | | *95 13 219* | | COMPR COOLING FAN NLS USE 4179925 | 1 | . Relay | . Relä | 5 |
| 3810 | | 95 23 788 | | AC | 1 | . Switch | . Strömställare | 3 |
| 3820 | | 95 23 846 | | RECIRCULATION | 1 | . Switch | . Strömställare | 3 |
| 3830 | | 95 50 468 | | | 1 | . Resistor | . Motstånd | 3 |





MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8C GROUP INDEX



Heating and ventilation system 7-A06
Complete sets: 7-B08

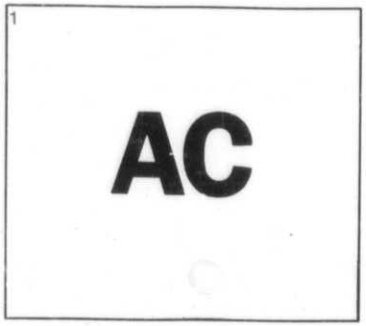


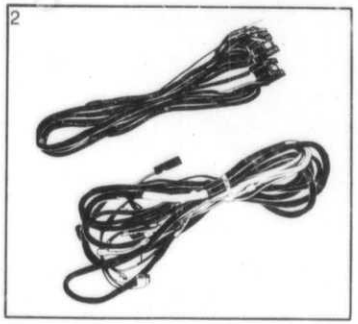



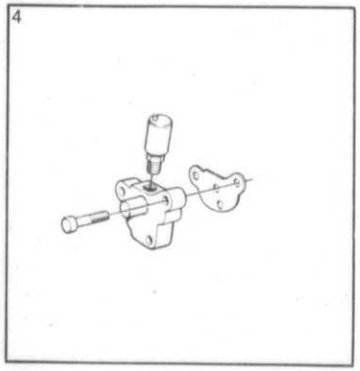

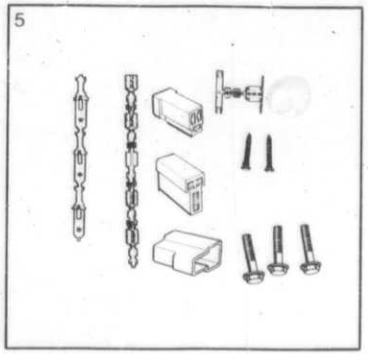

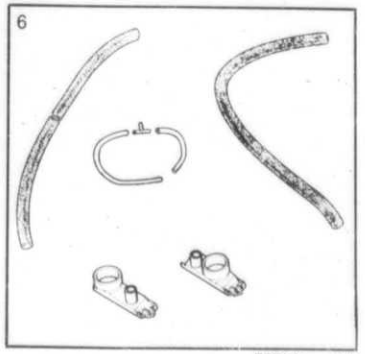F0859 - 900

Complete sets

# 7-B22

## Body
## Heating and ventilation

Satser

## Kaross
## Värme och ventilation

| Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| | *95 26 526* | | COOLING WATER, (9552878) | 1 | . Thermo contact | . Termokontakt | 2 |
| | | | NLS - USE 4086724 | | | | |
| | 95 54 841 | | INSTRUMENT PANEL | 1 | . Cable harness | . Ledningsnät | 5 |
| | 95 55 913 | | | 1 | . Clip | . Clips | 5 |
| | 95 57 505 | | ENGINE HOUSE | 1 | . Cable harness | . Ledningsnät | 5 |
| | | | 75/66 04 56 | 1 | . Assembly instruction | . Monteringsanvisning | |
| 1 | 96 98 002 | | 1987 B202 | X | Air conditioning kit | Luftkonditioneringssats | 6 |
| | 40 27 660 | | | 3 | . Screw | . Skruv | 5 |
| | 70 60 999 | | | 3 | . Washer | . Bricka | 5 |
| | 71 55 500 | | | 1 | . Clamp | . Klammer | 5 |
| | 71 63 074 | | | 2 | . Plug | . Plugg | 5 |
| | 73 98 373 | | | 1 | . Clamp | . Klammer | 5 |
| | 73 98 530 | | | 1 | . Clamp | . Klammer | 5 |
| | 73 99 280 | | | 1 | . Screw | . Skruv | 5 |
| | 75 12 247 | | | 1 | . Screw | . Skruv | 5 |
| | 75 26 338 | | | 1 | . Hose | . Slang | 6 |
| | 75 28 144 | | | 1 | . T-pipe | . T-rör | 5 |
| | 75 35 487 | | | 1 | . Protecting moulding | . Skyddslist | 5 |
| | 75 42 228 | | | 1 | . Tension pulley | . Spännrulle | 5 |
| | 79 22 420 | | | 2 | . Screw | . Skruv | 5 |
| | 79 22 461 | | | 4 | . Screw | . Skruv | 5 |
| | 79 22 891 | | | 2 | . Screw | . Skruv | 5 |
| | 79 40 398 | | | 2 | . Lock nut | . Låsmutter | 5 |
| | 79 65 809 | | | 1 | . Clip | . Clips | 5 |
| | 79 67 979 | | | 4 | . Nut | . Mutter | 5 |
| | 79 70 015 | | | 2 | . Screw | . Skruv | 5 |
| | 79 70 106 | | | 2 | . Hose clamp | . Slangklamma | 5 |
| | 79 71 864 | | | 1 | . Tensioning band | . Spännband | 5 |
| | 79 71 872 | | | 1 | . Tensioning band | . Spännband | 5 |
| | 79 72 490 | | | 3 | . Rivet | . Nit | 5 |
| | 79 75 030 | | | 4 | . Screw | . Skruv | 5 |
| | 79 75 543 | | | 6 | . Hose clamp | . Slangklamma | 5 |
| | 79 77 499 | | | 2 | . Screw | . Skruv | 5 |
| | *80 19 911* | | NLS - USE 7399603 | 1 | . Screw | . Skruv | 5 |
| | 80 19 945 | | | 3 | . Screw | . Skruv | 5 |
| | 81 51 227 | | (8029555) | 1 | . Nut | . Mutter | 5 |
| | 80 29 951 | | | 2 | . Washer | . Bricka | 5 |
| | 80 29 985 | | | 1 | . Washer | . Bricka | 5 |
| | 80 59 578 | | | 2 | . Screw | . Skruv | 5 |
| | 80 73 108 | | | 4 | . Washer | . Bricka | 5 |
| | 80 73 249 | | | 1 | . Washer | . Bricka | 5 |
| | 80 73 512 | | | 2 | . Lock nut | . Låsmutter | 3 |
| | 80 74 106 | | | 1 | . Nut | . Mutter | 5 |
| | 80 74 270 | | | 3 | . Lock nut | . Låsmutter | 3 |
| | 80 74 288 | | | 1 | . Nut | . Mutter | 5 |
| | 80 82 943 | | | 1 | . Screw | . Skruv | 5 |
| | 80 82 968 | | | 1 | . Screw | . Skruv | 5 |
| | 80 98 113 | | | 2 | . Screw | . Skruv | 5 |
| | 83 17 828 | | | 1 | . Nipple | . Nippel | 5 |
| | 83 30 268 | | | 1 | . Seal | . Tätning | 5 |
| | 83 34 005 | | | 1 | . Solenoid valve | . Magnetventil | 3 |
| | 83 37 859 | | | 1 | . Fan shroud | . Fläktkåpa | 4 |
| | 83 56 859 | | | 2 | . Sleeve | . Hylsa | 6 |
| | 85 66 508 | | | 1 | . Nut | . Mutter | 5 |
| | 85 72 190 | | AC-FAN | 1 | . Relay | . Relä | 3 |
| | 85 91 117 | | RECIRCULATION | 1 | . Solenoid valve | . Magnetventil | 4 |
| | 85 93 766 | | | 1 | . Switch | . Brytare | 4 |
| | 85 94 806 | | | 1 | . Fan motor | . Fläktmotor | 4 |
| | 85 99 565 | | | 1 | . Protecting moulding | . Skyddslist | 4 |
| | 93 30 184 | | | 1 | . Pulley | . Remskiva | 4 |
| | 93 32 826 | | | 1 | . Pipe | . Rör | 5 |
| | 93 39 615 | | | 1 | . Screw | . Skruv | 5 |
| | 75 49 439 | | (9365834) | 1 | . Bracket | . Fäste | 6 |
| | 93 67 020 | | | 1 | . V-belt | . Kilrem | 1 |

MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8C GROUP INDEX


Heating and ventilation system 7-A06
Complete sets: 7-B08

Complete sets
# 7-B24
## Body
## Heating and ventilation


Satser
## Kaross
## Värme och ventilation

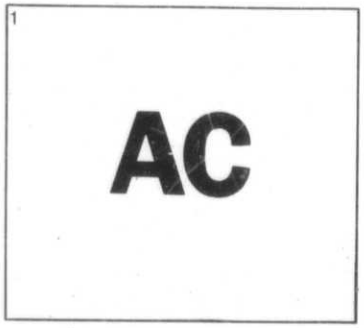


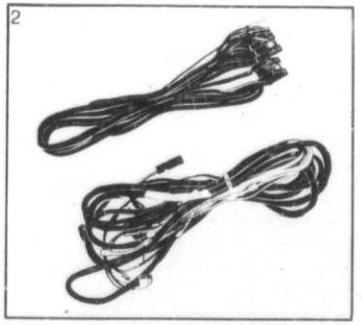






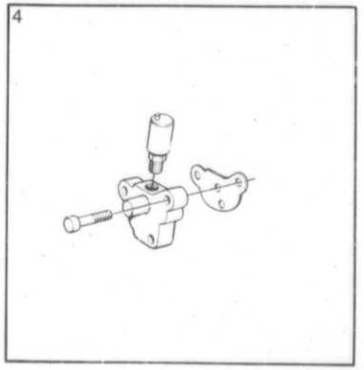

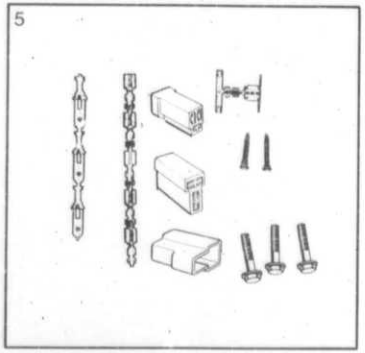

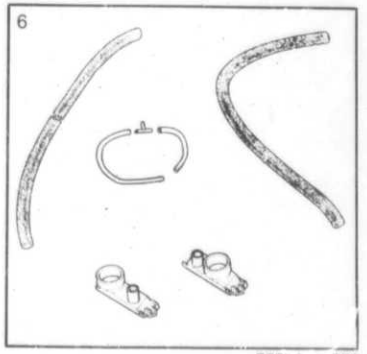F0859 - 900

| 2600 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 4480 | | 94 00 896 | | | 1 | .Lever | .Hävarm | 6 |
| 4490 | | *94 01 951* | | NLS - USE 4382396 | 1 | .Condenser | .Kondensor | 5 |
| 4500 | | 94 20 241 | | | 1 | .Shaft | .Axel | 6 |
| 4510 | | 94 20 266 | | | 1 | .Vacuum servo | .Vakuumservo | 5 |
| 4520 | | 94 20 274 | | | 1 | .Spring | .Fjäder | 5 |
| 4530 | | 94 20 282 | | | 1 | .Bracket | .Konsol | 6 |
| 4540 | | 94 22 403 | | | 1 | .Pivot pin | .Lagertapp | 5 |
| 4550 | | 94 38 250 | | | 1 | .Dolly plate | .Mothållsplåt | 6 |
| 4560 | | 94 41 221 | | | 1 | .Clip | .Clips | 5 |
| 4570 | | 94 49 489 | | | 1 | .Decal | .Dekal | 5 |
| 4580 | | 94 65 600 | | | 4 | .Nut | .Mutter | 3 |
| 4590 | | 96 31 300 | | | 1 | .Label | .Etikett | 5 |
| 4600 | | *94 80 278* | | NLS - USE 9482563 | 3 | .Vacuum hose | .Vakuumslang | 4 |
| 4610 | | 94 80 542 | | | 1 | .Plug | .Plugg | 5 |
| 4620 | | 94 80 559 | | | 1 | .Vacuum hose | .Vakuumslang | 4 |
| 4630 | | *94 80 567* | | NLS - USE 9482571 | 1 | .Vacuum hose | .Vakuumslang | 4 |
| 4640 | | 94 80 575 | | | 2 | .T-pipe | .T-rör | 5 |
| 4650 | | 94 80 666 | | | 1 | .Vacuum hose | .Vakuumslang | 4 |
| 4660 | | 94 80 955 | | ALT 94 80 583 | 1 | .Evaporator | .Förångare | 5 |
| 4670 | | 94 81 441 | | | 1 | .Spacer | .Mellanlägg | 5 |
| 4680 | | 94 81 458 | | | 1 | .Clamp | .Klammer | 5 |
| 4690 | | 94 81 664 | | | 1 | .Base | .Underlägg | 5 |
| 4700 | | 94 81 680 | | | 1 | .Shutter | .Spjäll | 5 |
| 4710 | | 94 81 961 | | | 1 | .Brace | .Bygel | 5 |
| 4720 | | *94 81 979* | | NLS - USE 4073995 | 1 | .Compressor | .Kompressor | 6 |
| 4730 | | 94 82 001 | | | 1 | .Hose | .Slang | 5 |
| 4740 | | 94 82 027 | | | 1 | .Hose | .Slang | 5 |
| 4750 | | 94 82 035 | | | 1 | .Tube | .Rör | 5 |
| 4760 | | *94 82 068* | | NLS - USE 4383550 | 1 | .Reservoir | .Behållare | 4 |
| 4770 | | 95 03 426 | | | 1 | .Connector housing | .Skarvhus | 4 |
| 4780 | | *95 13 219* | | COMPR COOLING FAN NLS - USE 4179525 | 1 | .Relay | .Relä | 5 |
| 4790 | | 95 23 788 | | AC | 1 | .Switch | .Strömställare | 3 |
| 4800 | | 95 23 846 | | RECIRCULATION | 1 | .Switch | .Strömställare | 3 |
| 4810 | | 95 50 468 | | | 1 | .Resistor | .Motstånd | 3 |
| 4820 | | *95 26 526* | | COOLING WATER, (9552878) NLS - USE 4086724 | 1 | .Thermo contact | .Termokontakt | 2 |
| 4830 | | | | 75/66 04 31 | 1 | .Assembly instruction | .Monteringsanvisning | |
| 4850 | 1 | 96 98 291 | | 1988- B201 I, TURBO | X | Air conditioning kit | Luftkonditioneringssats | 6 |
| 4860 | | 40 27 660 | | | 3 | .Screw | .Skruv | 5 |
| 4870 | | 43 82 396 | | | 1 | .Condenser | .Kondensor | 5 |
| 4880 | | 71 63 074 | | | 2 | .Plug | .Plugg | 5 |
| 4890 | | 73 98 373 | | | 1 | .Clamp | .Klammer | 5 |
| 4900 | | 73 98 530 | | | 1 | .Clamp | .Klammer | 5 |
| 4910 | | 73 99 280 | | | 1 | .Screw | .Skruv | 5 |
| 4920 | | 79 75 444 | | | 2 | .Screw | .Skruv | 5 |
| 4930 | | 75 26 338 | | | 1 | .Hose | .Slang | 6 |
| 4940 | | 75 28 144 | | | 1 | .T-pipe | .T-rör | 5 |
| 4950 | | 75 35 487 | | | 1 | .Protecting moulding | .Skyddslist | 5 |
| 4960 | | 75 43 550 | | | 1 | .Arm | .Arm | 5 |
| 4970 | | 75 43 606 | | | 1 | .Screw | .Skruv | |
| 4980 | | 75 43 614 | | | 1 | .Pin | .Axeltapp | 5 |
| 4990 | | 75 48 191 | | | 1 | .Fan unit | .Fläktenhet | 4 |
| 5000 | | 75 48 688 | | | 1 | .Fan shroud | .Fläktkåpa | 4 |
| 5010 | | *75 48 926* | | NLS - USE 4029211 | 1 | .Clamp | .Klammer | 5 |
| 5020 | | 75 49 439 | | | 1 | .Bracket | .Fäste | 6 |
| 5030 | | 79 22 420 | | | 2 | .Screw | .Skruv | 5 |
| 5040 | | 79 22 461 | | | 4 | .Screw | .Skruv | 5 |
| 5050 | | 79 40 398 | | | 2 | .Lock nut | .Låsmutter | 5 |
| 5060 | | 79 65 809 | | | 1 | .Clip | .Clips | 5 |
| 5070 | | 79 67 953 | | | 2 | .Nut | .Mutter | 5 |
| 5080 | | 79 67 979 | | | 4 | .Nut | .Mutter | 5 |
| 5090 | | 79 70 015 | | | 2 | .Screw | .Skruv | 5 |
| 5100 | | 79 70 106 | | | 2 | .Hose clamp | .Slangklamma | 5 |





MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |



8C GROUP INDEX



| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets: | 7-B08 |

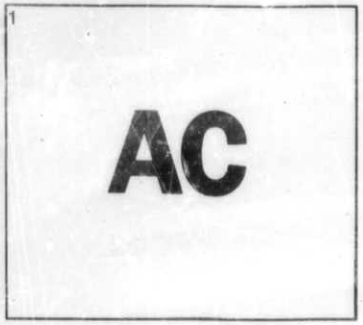


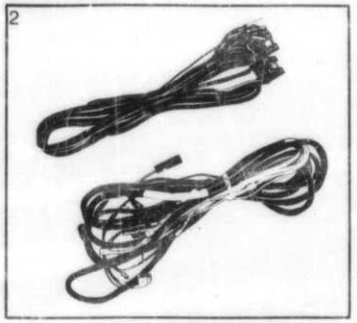



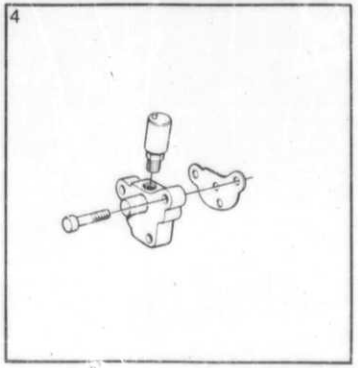

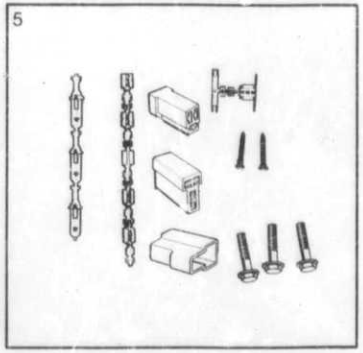

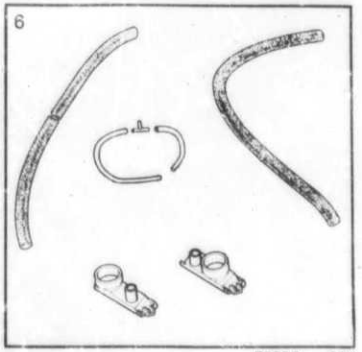F0859 - 900

Complete sets
# 7-C02
## Body
## Heating and ventilation

Satser
## Kaross
## Värme och ventilation

| 2600 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 5110 | | 79 71 872 | | | 3 | .Tensioning band | .Spännband | 5 |
| 5120 | | 79 71 880 | | | 13 | .Tensioning band | .Spännband | 4 |
| 5130 | | 79 71 922 | | | 1 | .Nut | .Mutter | 3 |
| 5140 | | 79 73 365 | | | 2 | .Nut | .Mutter | 5 |
| 5150 | | 79 74 298 | | | 1 | .Nut | .Mutter | 5 |
| 5160 | | 79 74 678 | | | 1 | .Fuse | .Säkring | 1 |
| 5170 | | 79 75 030 | | | 4 | .Screw | .Skruv | 5 |
| 5180 | | 79 75 238 | | | 5 | .Screw | .Skruv | 5 |
| 5190 | | 79 75 543 | | | 6 | .Hose clamp | .Slangklamma | 5 |
| 5200 | | 79 77 440 | | | 1 | .Washer | .Bricka | 5 |
| 5210 | | 79 77 499 | | | 2 | .Screw | .Skruv | 5 |
| 5220 | | 80 19 713 | | | 2 | .Screw | .Skruv | 5 |
| 5230 | | *80 19 911* | | NLS - USE 7399603 | 1 | .Screw | .Skruv | 5 |
| 5240 | | 80 19 945 | | | 3 | .Screw | .Skruv | 5 |
| 5250 | | 81 51 227 | | (8029555) | 1 | .Nut | .Mutter | 5 |
| 5260 | | 80 29 951 | | | 2 | .Washer | .Bricka | 5 |
| 5270 | | 80 59 578 | | | 2 | .Screw | .Skruv | 5 |
| 5280 | | 80 73 108 | | | 4 | .Washer | .Bricka | 5 |
| 5290 | | 80 73 512 | | | 2 | .Lock nut | .Låsmutter | 3 |
| 5300 | | 80 74 106 | | | 1 | .Nut | .Mutter | 5 |
| 5310 | | 80 83 974 | | | 1 | .Screw | .Skruv | 5 |
| 5320 | | 83 17 828 | | | 1 | .Nipple | .Nippel | 5 |
| 5330 | | 83 30 268 | | | 1 | .Seal | .Tätning | 5 |
| 5340 | | 83 34 005 | | | 1 | .Solenoid valve | .Magnetventil | 3 |
| 5350 | | 85 66 598 | | | 1 | .Nut | .Mutter | 5 |
| 5360 | | 85 72 190 | | AC-FAN | 1 | .Relay | .Relä | 3 |
| 5370 | | 85 91 117 | | RECIRCULATION | 1 | .Solenoid valve | .Magnetventil | 4 |
| 5380 | | 85 93 766 | | | 1 | .Switch | .Brytare | 4 |
| 5390 | | *93 25 663* | | NLS - USE 4118964 | 1 | .Pulley | .Remskiva | 5 |
| 5400 | | 93 30 184 | | | 1 | .Pulley | .Remskiva | 4 |
| 5410 | | 93 32 826 | | | 1 | .Pipe | .Rör | 5 |
| 5420 | | 93 39 615 | | | 1 | .Screw | .Skruv | 5 |
| 5430 | | 93 67 020 | | | 1 | .V-belt | .Kilrem | 1 |
| 5440 | | 94 00 896 | | | 1 | .Lever | .Hävarm | 6 |
| 5450 | | 94 20 241 | | | 1 | .Shaft | .Axel | 6 |
| 5460 | | 94 20 266 | | | 1 | .Vacuum servo | .Vakuumservo | 5 |
| 5470 | | 94 20 274 | | | 1 | .Spring | .Fjäder | 5 |
| 5480 | | 94 20 282 | | | 1 | .Bracket | .Konsol | 6 |
| 5490 | | 94 20 308 | | | 1 | .Vacuum hose | .Vakuumslang | 4 |
| 5500 | | 94 22 403 | | | 1 | .Pivot pin | .Lagertapp | 5 |
| 5510 | | 94 38 250 | | | 1 | .Dolly plate | .Mothållsplåt | 6 |
| 5520 | | 94 41 221 | | | 1 | .Clip | .Clips | 5 |
| 5530 | | 94 65 600 | | | 4 | .Nut | .Mutter | 3 |
| 5540 | | 96 31 300 | | | 1 | .Label | .Etikett | 5 |
| 5550 | | *94 80 278* | | NLS - USE 9482563 | 3 | .Vacuum hose | .Vakuumslang | 4 |
| 5560 | | 94 80 542 | | | 1 | .Plug | .Plugg | 5 |
| 5570 | | *94 80 567* | | NLS - USE 9482571 | 1 | .Vacuum hose | .Vakuumslang | 4 |
| 5580 | | 94 80 575 | | | 2 | .T-pipe | .T-rör | 5 |
| 5590 | | 94 80 955 | | ALT 9480583 | 1 | .Evaporator | .Förångare | 5 |
| 5600 | | 94 81 441 | | | 1 | .Spacer | .Mellanlägg | 5 |
| 5610 | | 94 81 458 | | | 1 | .Clamp | .Klammer | 5 |
| 5620 | | 94 81 664 | | | 1 | .Base | .Underlägg | 5 |
| 5630 | | 94 81 680 | | | 1 | .Shutter | .Spjäll | 5 |
| 5640 | | 94 81 961 | | | 1 | .Brace | .Bygel | 5 |
| 5650 | | *94 81 979* | | NLS - USE 4073995 | 1 | .Compressor | .Kompressor | 6 |
| 5660 | | 94 82 027 | | | 1 | .Hose | .Slang | 5 |
| 5670 | | 94 82 035 | | | 1 | .Tube | .Rör | 5 |
| 5680 | | *94 82 068* | | NLS - USE 4383550 | 1 | .Reservoir | .Behållare | 4 |
| 5690 | | 94 82 365 | | | 1 | .Hose | .Slang | 5 |
| 5700 | | 94 82 399 | | | 1 | .Guard | .Skydd | 5 |
| 5710 | | 95 03 418 | | | 1 | .Connector housing | .Skarvhus | 4 |
| 5720 | | 95 03 426 | | | 1 | .Connector housing | .Skarvhus | 4 |
| 5730 | | *95 13 219* | | COMPR COOLING FAN NLS - USE 4179925 | 1 | .Relay | .Relä | 5 |
| 5730 | | | | | | | | |
| 5740 | | 95 23 788 | | AC | 1 | .Switch | .Strömställare | 3 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-E02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8C GROUP INDEX


| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets: | 7-B08 |


Complete sets


# 7-C04

## Body
## Heating and ventilation

Satser


## Kaross
## Värme och ventilation

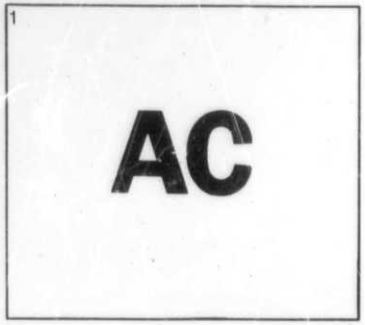


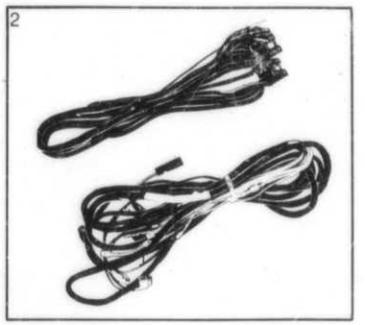






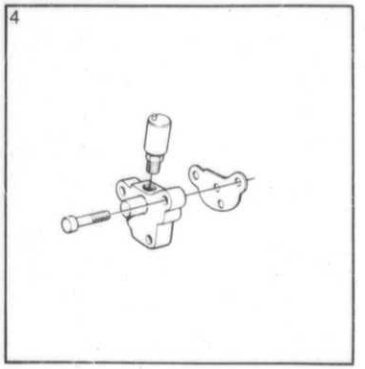

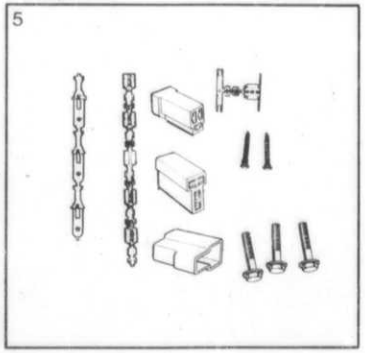

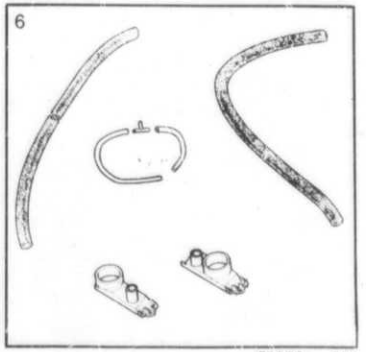F0859 - 900

| 2600 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 5750 | | 95 23 846 | | RECIRCULATION | 1 | . Switch | . Strömställare | 3 |
| 5760 | | *95 26 526* | | COOLING WATER NLS - USE 4086724 | 1 | . Thermo contact | . Termokontakt | 2 |
| 5760 | | | | | | | | |
| 5770 | | 95 50 468 | | | 1 | . Resistor | . Motstånd | 3 |
| 5780 | | 95 55 913 | | | 1 | . Clip | . Clips | 5 |
| 5790 | | 95 57 505 | | ENGINE HOUSE | 1 | . Cable harness | . Ledningsnät | 5 |
| 5800 | | 95 61 655 | | INSTRUMENT PANEL | 1 | . Cable harness | . Ledningsnät | 5 |
| 5810 | | 79 72 490 | | | 3 | . Rivet | . Nit | 5 |
| 5820 | | | | | 1 | . Assembly instruction | . Monteringsanvisning | |
| 5830 | | | | | | | | |
| 5840 | 1 | *96 98 283* | | 1988- B202 NLS - USE 8605198 | X | Air conditioning kit | Luftkonditioneringssats | 6 |
| 5840 | | | | | | | | |
| 5850 | | 40 27 660 | | | 3 | . Screw | . Skruv | 5 |
| 5860 | | *40 70 918* | | NLS - USE 4382396 | 1 | . Condenser | . Kondensor | 5 |
| 5870 | | 71 63 074 | | | 2 | . Plug | . Plugg | 5 |
| 5880 | | 73 98 373 | | | 1 | . Clamp | . Klammer | 5 |
| 5890 | | 73 98 530 | | | 1 | . Clamp | . Klammer | 5 |
| 5900 | | 73 99 280 | | | 1 | . Screw | . Skruv | 5 |
| 5910 | | 79 75 444 | | | 2 | . Screw | . Skruv | 5 |
| 5920 | | 75 12 247 | | | 1 | . Screw | . Skruv | 5 |
| 5930 | | 75 35 487 | | | 1 | . Protecting moulding | . Skyddslist | 5 |
| 5940 | | 75 42 228 | | | 1 | . Tension pulley | . Spännrulle | 5 |
| 5950 | | 75 48 191 | | | 1 | . Fan unit | . Fläktenhet | 4 |
| 5960 | | 75 48 688 | | | 1 | . Fan shroud | . Fläktkåpa | 4 |
| 5970 | | *75 48 936* | | NLS - USE 4029211 | 1 | . Clamp | . Klammer | 5 |
| 5980 | | 75 49 439 | | | 1 | . Bracket | . Fäste | 6 |
| 5990 | | 79 22 420 | | | 2 | . Screw | . Skruv | 5 |
| 6000 | | 79 22 461 | | | 4 | . Screw | . Skruv | 5 |
| 6010 | | 79 40 398 | | | 2 | . Lock nut | . Låsmutter | 5 |
| 6020 | | 79 65 809 | | | 1 | . Clip | . Clips | 5 |
| 6030 | | 79 67 379 | | | 4 | . Nut | . Mutter | 5 |
| 6040 | | 79 70 015 | | | 2 | . Screw | . Skruv | 5 |
| 6050 | | 79 70 106 | | | 2 | . Hose clamp | . Slangklamma | 5 |
| 6060 | | 79 71 870 | | | 2 | . Tensioning band | . Spännband | 5 |
| 6070 | | 79 73 365 | | | 2 | . Nut | . Mutter | 5 |
| 6080 | | 79 74 298 | | | 1 | . Nut | . Mutter | 5 |
| 6090 | | 79 74 678 | | | 1 | . Fuse | . Säkring | 1 |
| 6100 | | 79 75 030 | | | 4 | . Screw | . Skruv | 5 |
| 6110 | | 79 77 499 | | | 2 | . Screw | . Skruv | 5 |
| 6120 | | 80 19 713 | | | 2 | . Screw | . Skruv | 5 |
| 6130 | | *80 19 911* | | NLS - USE 7399603 | 1 | . Screw | . Skruv | 5 |
| 6140 | | 80 19 945 | | | 3 | . Screw | . Skruv | 5 |
| 6150 | | 81 51 227 | | (80 19555) | 1 | . Nut | . Mutter | 5 |
| 6160 | | 80 29 951 | | | 2 | . Washer | . Bricka | 5 |
| 6170 | | 80 29 985 | | | 1 | . Washer | . Bricka | 5 |
| 6180 | | 80 59 578 | | | 2 | . Screw | . Skruv | 5 |
| 6190 | | 90 73 108 | | | 4 | . Washer | . Bricka | 5 |
| 6200 | | 80 73 249 | | | 1 | . Washer | . Bricka | 5 |
| 6210 | | 80 73 512 | | | 2 | . Lock nut | . Låsmutter | 3 |
| 6220 | | 80 74 106 | | | 1 | . Nut | . Mutter | 5 |
| 6230 | | 80 74 288 | | | 1 | . Nut | . Mutter | 5 |
| 6240 | | 80 82 943 | | | 1 | . Screw | . Skruv | 5 |
| 6250 | | 80 82 968 | | | 1 | . Screw | . Skruv | 5 |
| 6260 | | 90 98 113 | | | 2 | . Screw | . Skruv | 5 |
| 6270 | | 83 30 268 | | | 1 | . Seal | . Tätning | 5 |
| 6280 | | 83 56 859 | | | 2 | . Sleeve | . Hylsa | 6 |
| 6290 | | 85 66 598 | | | 1 | . Nut | . Mutter | 5 |
| 6300 | | 85 72 190 | | AC-FAN | 1 | . Relay | . Relä | 3 |
| 6310 | | 85 91 117 | | RECIRCULATION | 1 | . Solenoid valve | . Magnetventil | 4 |
| 6320 | | 85 93 766 | | | 1 | . Switch | . Brytare | 4 |
| 6330 | | 85 99 565 | | | 1 | . Protecting moulding | . Skyddslist | 4 |
| 6340 | | 93 30 184 | ▲ | | 1 | . Pulley | . Remskiva | 4 |
| 6350 | | 93 32 826 | | | 1 | . Pipe | . Rör | 5 |
| 6360 | | 93 39 615 | | | 1 | . Screw | . Skruv | 5 |
| 6370 | | 93 67 020 | | | 1 | . V-belt | . Kilrem | 1 |





MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8C GROUP INDEX



Heating and ventilation system 7-A06
Complete sets: 7-B08

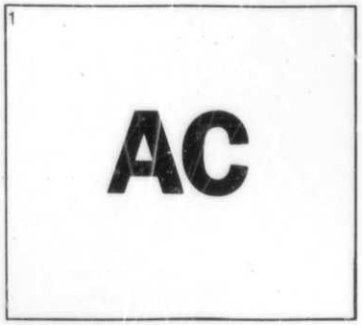


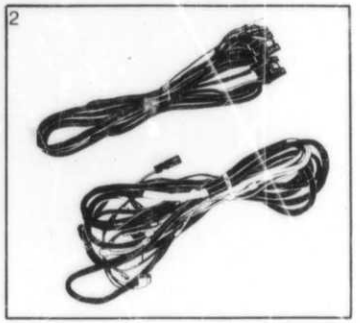






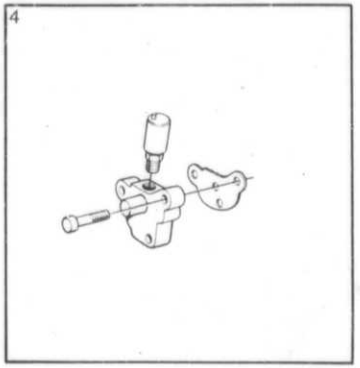

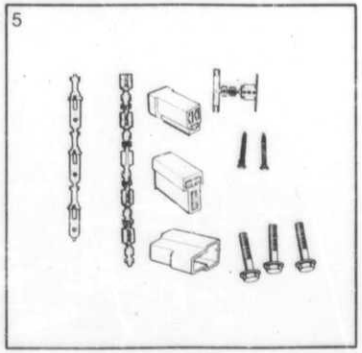

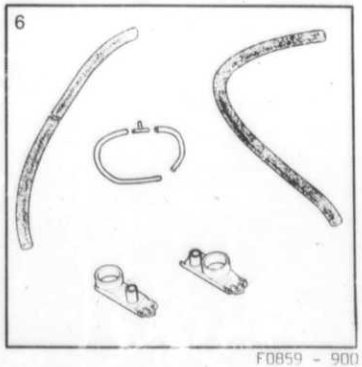F0859 - 900

Complete sets

# 7-C06

## *Body*

## *Heating and ventilation*

Satser

## *Kaross*

## *Värme och ventilation*

| 2600 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 6380 | 94 00 896 | | | 1 | .Lever | .Hävarm | 6 |
| 6390 | 94 20 241 | | | 1 | .Shaft | .Axel | 6 |
| 6400 | 94 20 266 | | | 1 | .Vacuum servo | .Vakuumservo | 5 |
| 6410 | 94 20 274 | | | 1 | .Spring | .Fjäder | 5 |
| 6420 | 94 20 282 | | | 1 | .Bracket | .Konsol | 6 |
| 6430 | 94 20 308 | | | 1 | .Vacuum hose | .Vakuumslang | 4 |
| 6440 | 94 22 403 | | | 1 | .Pivot pin | .Lagertapp | 5 |
| 6450 | 94 38 250 | | | 1 | .Dolly plate | .Mothållsplåt | 8 |
| 6460 | 94 41 221 | | | 1 | .Clip | .Clips | 5 |
| 6470 | 94 65 600 | | | 4 | .Nut | .Mutter | 3 |
| 6480 | 96 31 300 | | | 1 | .Label | .Etikett | 5 |
| 6490 | *94 80 278* | | NLS - USE 9482563 | 3 | .Vacuum hose | .Vakuumslang | 4 |
| 6500 | 94 80 542 | | | 1 | .Plug | .Plugg | 5 |
| 6510 | *94 80 567* | | NLS - USE 9482571 | 1 | .Vacuum hose | .Vakuumslang | 4 |
| 6520 | 94 80 575 | | | 2 | .T-pipe | .T-rör | 5 |
| 6530 | 94 80 955 | | ALT 9480583 | 1 | .Evaporator | .Förångare | 5 |
| 6540 | 94 81 441 | | | 1 | .Spacer | .Mellanlägg | 5 |
| 6550 | 94 81 458 | | | 1 | .Clamp | .Klammer | 5 |
| 6560 | 94 81 664 | | | 1 | .Base | .Underlägg | 5 |
| 6570 | 94 81 680 | | | 1 | .Shutter | .Spjäll | 5 |
| 6580 | 94 81 961 | | | 1 | .Brace | .Bygel | 5 |
| 6590 | *94 81 979* | | NLS - USE 4073995 | 1 | .Compressor | .Kompressor | 6 |
| 6600 | 94 82 027 | | | 1 | .Hose | .Slang | 5 |
| 6610 | 94 82 035 | | | 1 | .Tube | .Rör | 5 |
| 6620 | *94 82 068* | | NLS - USE 4383550 | 1 | .Reservoir | .Behållare | 4 |
| 6630 | 94 82 365 | | | 1 | .Hose | .Slang | 5 |
| 6640 | 94 82 399 | | | 1 | .Guard | .Skydd | 5 |
| 6650 | 95 03 426 | | | 1 | .Connector housing | .Skarvhus | 4 |
| 6660 | *95 13 219* | | COMPR COOLING FAN NLS - USE 4179925 | 1 | .Relay | .Relä | 5 |
| 6670 | 95 23 788 | | AC | 1 | .Switch | .Strömställare | 3 |
| 6680 | 95 23 846 | | RECIRCULATION | 1 | .Switch | .Strömställare | 3 |
| 6690 | *95 26 526* | | COOLING WATER NLS - USE 4086724 | 1 | .Thermo contact | .Termokontakt | 2 |
| 6700 | 95 50 468 | | | 1 | .Resistor | .Motstånd | 3 |
| 6710 | 95 55 913 | | | 1 | .Clip | .Clips | 5 |
| 6720 | 79 72 490 | | | 3 | .Rivet | .Nit | 5 |
| 6730 | | | | 1 | .Assembly instruction | .Monteringsanvisning | |
| 6740 | | | | | | | |
| 6750 2 | 88 20 052 | | 1986, B201, SE, FI, EU, GB (FOR KIT 8820029) | X | Cable harness kit | Ledningsnätssats | 4 |
| 6770 | 88 21 290 | | | 1 | .Cable harness | .Ledningsnät | 6 |
| 6780 | 88 21 308 | | | 1 | .Cable harness | .Ledningsnät | 6 |
| 6790 | | | | | | | |
| 6800 3 | 88 20 045 | | 1986, B201, ME, FE, AU (FOR KIT 8820029) | X | Cable harness kit | Ledningsnätssats | 6 |
| 6820 | 88 21 308 | | | 1 | .Cable harness | .Ledningsnät | 6 |
| 6830 | 93 45 091 | | | 1 | .Tube | .Rör | 5 |
| 6840 | *85 72 331* | | NLS - USE 4086724 | 1 | .Thermo contact | .Termokontakt | 2 |
| 6850 | 83 30 268 | | | 1 | .Seal | .Tätning | 5 |
| 6860 | | | | | | | |
| 6870 4 | 88 21 647 | | 1986, C (FOR KIT 8820029) | X | Idling speed increase kit | Tomgångshöjningssats | 5 |
| 6890 | *75 21 453* | | NLS | 1 | .Adapter | .Adapter | 6 |
| 6900 | 83 08 983 | | | 3 | .Screw | .Skruv | |
| 6910 | 83 69 647 | | | 1 | .Gasket | .Packning | 4 |
| 6920 | 83 34 005 | | | 1 | .Solenoid valve | .Magnetventil | 3 |
| 6930 | | | | | | | |
| 6940 5 | *97 46 710* | | 1986 (FOR KIT 8820029) NLS | X | Accessories kit | Tillbehörsats | 4 |
| 6950 | 79 71 724 | | | 3 | .Screw | .Skruv | 5 |
| 6960 | 79 71 709 | | | 5 | .Cable terminal | .Kabelsko | 5 |
| 6970 | *71 55 724* | | NLS - USE P522542 | 3 | .Cable terminal | .Kabelsko | 5 |
| 6980 | 73 42 892 | | | 1 | .Connector housing | .Skarvhus | 4 |
| 6990 | 71 55 096 | | | 1 | .Connector housing | .Skarvhus | 4 |





MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


8C GROUP INDEX



| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets: | 7-B08 |

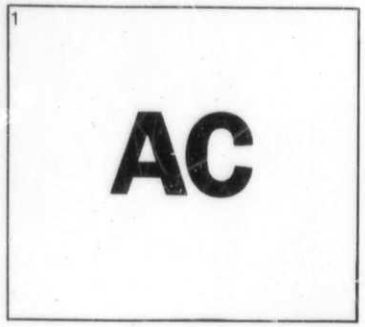


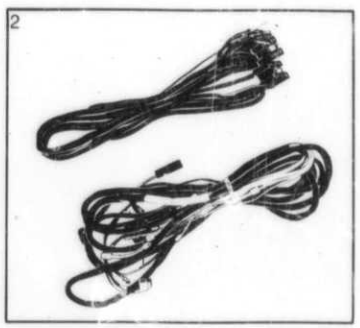






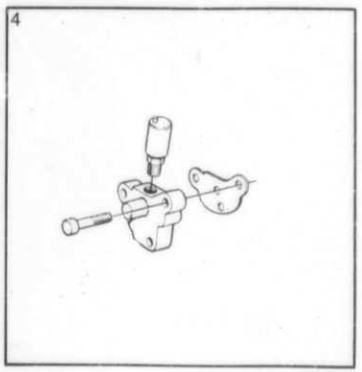

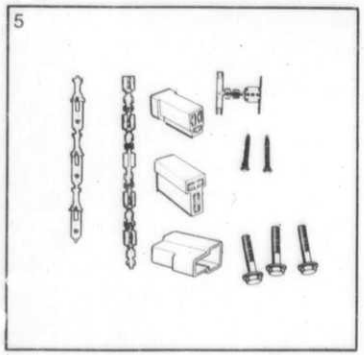

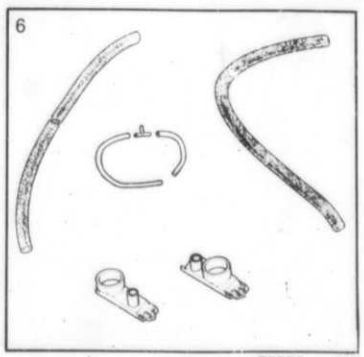F0859 - 900

| 2600 Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|
| 7000 | 73 42 900 | | | 1 | . Connector housing | . Skarvhus | 4 |
| 7010 | 79 70 346 | | | 2 | . Screw | . Skruv | 5 |
| 7020 | 85 03 286 | | | 1 | . Cable terminal | . Kabelsko | 5 |
| 7030 | | | | | | | |
| 7040 | 6 *97 46 249* | | 1983-, ME, FE NLS | X | Defroster jet | Defroster | 6 |
| 7050 | *94 80 153* | | LH NLS | 1 | . Throttle body | . Spjällhus | 6 |
| 7060 | *94 80 187* | | RH NLS | 1 | . Throttle body | . Spjällhus | 6 |
| 7070 | 94 01 332 | | | 2 | . Hose | . Slang | 6 |
| 7080 | *94 80 252* | | NLS | 2 | . Plug | . Plugg | 5 |
| 7090 | *94 80 278* | | NLS - USE 9482563 | 2 | . Vacuum hose | . Vakuumslang | 4 |
| 7100 | 83 66 791 | | | 1 | . Pipe | . Rör | 4 |
| 7110 | 79 58 770 | | | 1 | . Rivet | . Nit | 5 |
| 7120 | 71 63 074 | | | 2 | . Plug | . Plugg | 5 |

MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

8C GROUP INDEX

| | |
|---|---|
| Heating and ventilation system | 7-A06 |
| Complete sets: | 7-B08 |

# 7-D02



## Tool, Labels
## Verktyg, Etiketter
## Herramient, Etiquetas

0041
0020
0040
0060
0080
0100
0120
0130
0140
0150
0160

CONTENTS.


| | | |
|---|---|---|
| **Tool kit** | 9 : 5 | 7-D06 |
| **Labels** | | |
| Labels, part 1 | 9 : 7 | 7-D08 |
| Labels, part 2 | 9 : 9 | 7-D10 |
| Labels, part 3 | 9 : 15 | 7-D16 |




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


9 GROUP INDEX


| | |
|---|---|
| Tool kit | 7-D06 |
| Labels | 7-D08 |

# 7-D03

0042
0020
0040
0060
0180
0200
0220
0230
0232
0240
0250
0460
0480
0500
0520
0540
0560
0570
0580
0590
0600

INNEHÅLLSFÖRTECKNING.


| | | |
|---|---|---|
| **Verktygssats** | 9 : 5 | 7-D06 |
| **Etiketter** | | |
| Etiketter, del 1 | 9 : 7 | 7-D08 |
| Etiketter, del 2 | 9 : 9 | 7-D10 |
| Etiketter, del 3 | 9 : 15 | 7-D16 |


SUMARIO.


| | | |
|---|---|---|
| **Bolsa de herramientas** | 9 : 5 | 7-D06 |
| **Etiquetas** | | |
| Etiquetas, 1a parte | 9 : 7 | 7-D08 |
| Etiquetas, 2a parte | 9 : 9 | 7-D10 |
| Etiquetas, 3a parte | 9 : 15 | 7-D16 |





MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


9 GROUP INDEX


| | |
|---|---|
| Tool kit | 7-D06 |
| Labels | 7-D08 |

# 7-D06 *Tool kit* *Verktygsats*

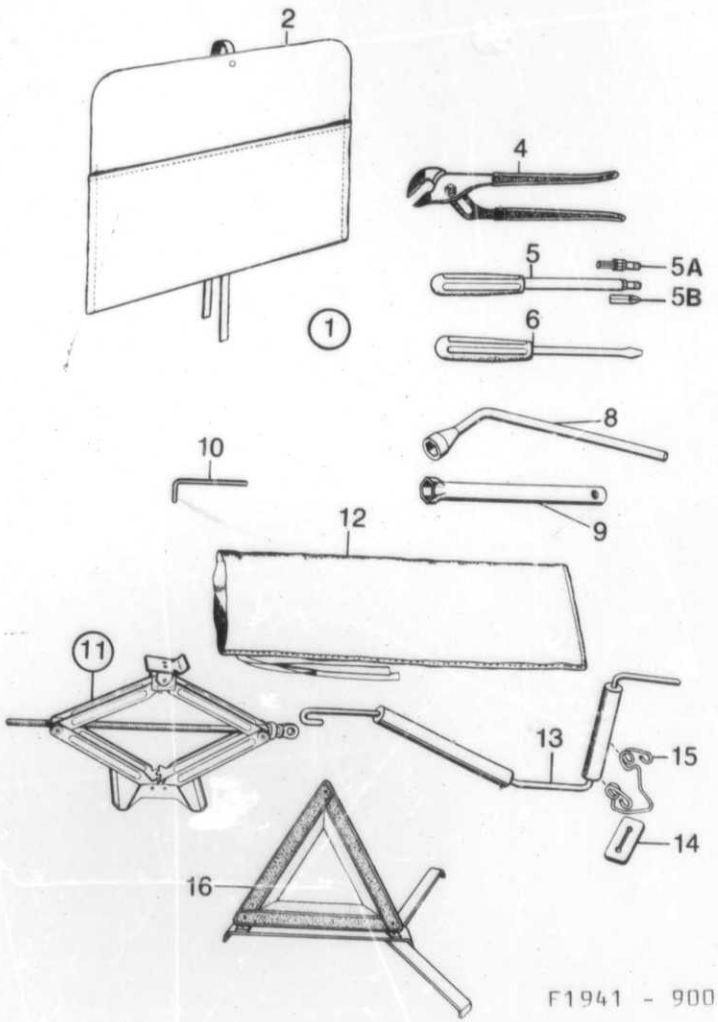


| 0100 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 89 94 634 | | | 1 | Tool kit | Verktygsats | 5 |
| 0030 | 2 | 73 05 931 | | | 1 | . Tool bag | . Verktygsväska | 5 |
| 0040 | 4 | *89 61 732* | | NLS - USE 4195954 | 1 | . Pliers | . Tång | 5 |
| 0050 | 5 | 89 91 549 | | TORX | 1 | . Screwdriver | . Skruvmejsel | 5 |
| 0060 | 5A | 89 91 564 | | TORX 25/30 | 1 | .. Screwdriver insert | .. Skruvmejselinsats | 5 |
| 0070 | 5A | 89 71 087 | | 1988- TORX 10/20 | 1 | . Screwdriver insert | . Skruvmejselinsats | 5 |
| 0080 | 5B | 91 01 056 | | | 1 | . Cross-recess screw driver | . Krysspårmejsel | 5 |
| 0090 | 6 | 70 37 492 | | | 1 | . Screwdriver | . Skruvmejsel | 5 |
| 0100 | 8 | 73 48 287 | | WHEEL NUT | 1 | . Socket wrench | . Hylsnyckel | 4 |
| 0120 | 9 | 89 31 198 | | | 1 | . Spark plug spanner | . Tändstiftnyckel | 4 |
| 0130 | 9 | *89 86 663* | | B202 NLS - USE 4193157 | 1 | Spark plug spanner | Tändstiftnyckel | 4 |
| 0140 | 10 | 89 46 097 | | | 1 | Key | Nyckel | 5 |
| 0160 | 11 | 89 61 740 | | | 1 | Jack | Domkraft | 4 |
| 0170 | 12 | 89 11 190 | | | 1 | Bag | Säck | 5 |
| 0180 | 13 | 89 64 991 | | | 1 | Crank | Vev | 4 |
| 0190 | 14 | 89 71 566 | | 1988- | 2 | Vibration damper | Vibrationsdämpare | 5 |
| 0200 | 15 | 89 71 574 | | 1988- | 2 | Attaching spring | Fästfjäder | 5 |
| 0210 | 16 | 85 39 900 | | -1988 | 1 | Warning triangle | Varningstriangel | 6 |
| 0220 | 16 | 95 26 963 | | 500),1989- | 1 | Warning triangle | Varningstriangel | 6 |

500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


9 GROUP INDEX


| | |
|---|---|
| Tool kit | 7-D06 |
| Labels | 7-D08 |

# 7-D08 Labels Part 1

# Etiketter Del 1

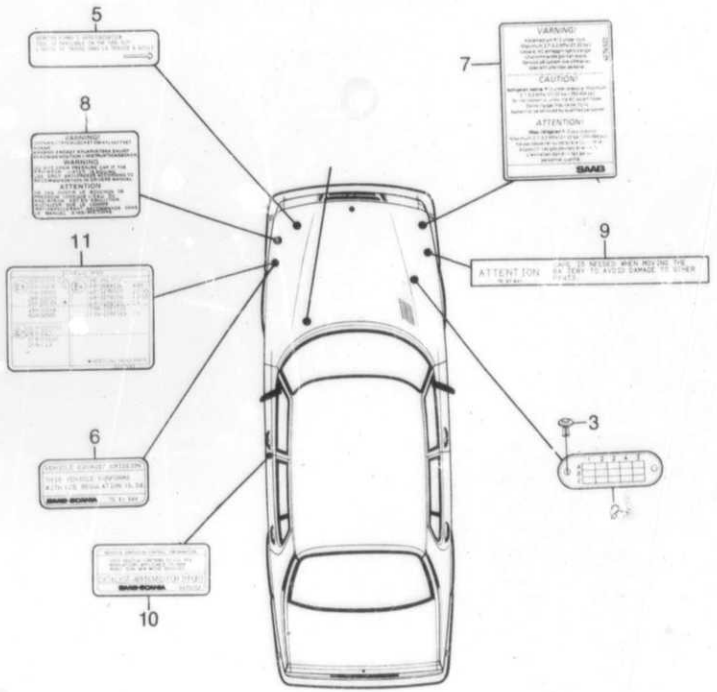


F5579 90086

| J150 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 1870 | 2 | 92 83 722 | | CAMPAIGN | 1 | Sign | Skylt | 5 |
| 1880 | 3 | 79 73 258 | | (8238685) | 2 | Rivet | Nit | 5 |
| 1890 | | | | | | | | |
| 1910 | 5 | 75 43 424 | | TOOL B202 | 1 | Label | Etikett | 5 |
| 1915 | | | | | | | | |
| 1920 | 6 | 75 31 544 | | ECE REGULATION, FE | 1 | Label | Etikett | 4 |
| 1925 | | | | | | | | |
| 1930 | 7 | *94 79 783* | | -1988,FREONGAS NLS - USE 9631300 | 1 | Label | Etikett | 5 |
| 1930 | | | | | | | | |
| 1940 | 7 | 96 31 300 | | 500),1989-, FREONGAS | 1 | Label | Etikett | 5 |
| 1950 | | | | | | | | |
| 1990 | 8 | *75 45 742* | | 7) COOLING WATER NLS - USE 4017596 | 1 | Label | Etikett | 5 |
| 1990 | | | | | | | | |
| 2000 | 8 | 40 17 596 | | 8) COOLING WATER | 1 | Label | Etikett | 5 |
| 2010 | 8 | 93 41 439 | | 8) FI, COOLING WATER | 1 | Label | Etikett | 5 |
| 2015 | | | | | | | | |
| 2020 | 9 | 75 27 633 | | 1987- , BATTERY B202 TURBO CA (AERO-CAR) | 1 | Label | Etikett | 4 |
| 2030 | | | | | | | | |
| 2040 | 9 | 75 27 641 | | 1987- , BATTERY B201 TURBO SE, GB B202 | 1 | Label | Etikett | 4 |
| 2050 | | | | | | | | |
| 2060 | 9 | 75 27 641 | | 1989-, BATTERY, TURBO JP | 1 | Label | Etikett | 4 |
| 2070 | 9 | 75 37 970 | | 1987-88, BATTERY CAREFULLY, I EU | 1 | Label | Etikett | 4 |
| 2080 | | | | | | | | |
| 2085 | | | | | | | | |
| 2090 | 10 | 75 38 481 | | 1987,CATALYTIC REACTOR US,JP | 1 | Label | Etikett | 4 |
| 2100 | | | | | | | | |
| 2110 | 10 | 89 75 252 | | 1988,CATALYTIC REACTOR US, JP | 1 | Label | Etikett | 4 |
| 2120 | | | | | | | | |
| 2130 | | | | | | | | |
| 2210 | 11 | 69 37 577 | | 1986, ECE-APPROVALS | 1 | Label | Etikett | 6 |
| 2220 | 11 | 69 40 019 | | 1987, ECE-APPROVALS | 1 | Label | Etikett | 6 |
| 2230 | 11 | 69 44 110 | | 1988-, ECE-APPROVALS | 1 | Label | Etikett | 6 |
| 2240 | 11 | 69 44 128 | | 14), 1988, ECE-APPROVALS | 1 | Label | Etikett | 6 |
| 2260 | 11 | 69 47 485 | | 14), 1989-ECE-APPROVALS | 1 | Label | Etikett | 6 |

7. Ch.-K3007256, -K7007688
8. Ch. K3007257-, K7007689-
14. With catalytic converter. Med katalytisk reaktor.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


9 GROUP INDEX


| | |
|---|---|
| Tool kit | 7-D06 |
| Labels | 7-D08 |

# 7-D10 Labels Part 2

# Etiketter Del 2

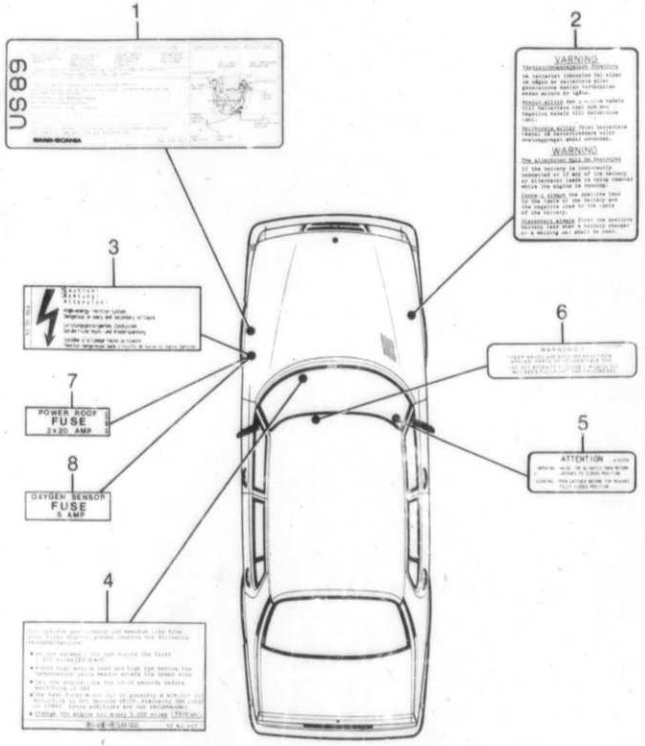


F5580 90086

| 0200 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0180 | 1 | 75 32 385 | | 1986,11) C, SE | 1 | Label | Etikett | 4 |
| 0190 | 1 | 75 90 946 | | 1987,11) C, SE | 1 | Label | Etikett | 4 |
| 0200 | | | | (CARBURATOR SOLEX) | | | | |
| 0210 | 1 | 75 37 327 | | 1987,11) C, SE | 1 | Label | Etikett | 4 |
| 0220 | | | | (CARBURETOR PIERBURG) | | | | |
| 0230 | 1 | 75 39 646 | | 1988,11) C, SE | 1 | Label | Etikett | 4 |
| 0240 | | | | (CARBURETOR PIERBURG) | | | | |
| 0250 | 1 | 75 28 672 | | 11) LPG, C, SE | 1 | Label | Etikett | 4 |
| 0260 | | | | | | | | |
| 0270 | 1 | 75 32 369 | | 1986,11,15) B201 I, SE | 1 | Label | Etikett | 4 |
| 0280 | 1 | 75 37 335 | | 1987,11,15) B201 I, SE | 1 | Label | Etikett | 4 |
| 0290 | 1 | 75 39 653 | | 1988,5,11,15) B201 I,SE | 1 | Label | Etikett | 4 |
| 0300 | 1 | 89 81 821 | | 6,11,15) B201 I, SE | 1 | Label | Etikett | 4 |
| 0310 | | | | | | | | |
| 0320 | 1 | 75 38 218 | | 1987,11,14) B201 I, SE | 1 | Label | Etikett | 4 |
| 0330 | 1 | 89 77 852 | | 500,11,14) B201 I, SE | 1 | Label | Etikett | 4 |
| 0340 | 1 | 40 17 695 | | 1989,11,14) B201 I, SE | 1 | Label | Etikett | 4 |
| 0350 | | | | | | | | |
| 0360 | 1 | 89 80 344 | | 1987,11,14) B202 I, SE | 1 | Label | Etikett | 4 |
| 0370 | 1 | 89 77 860 | | 1988,11,14) B202 I, SE | 1 | Label | Etikett | 4 |
| 0380 | 1 | 89 79 759 | | 500,11,14) B202 I, SE | 1 | Label | Etikett | 4 |
| 0390 | 1 | 40 17 679 | | 1989,11,14) B202 I, SE | 1 | Label | Etikett | 4 |
| 0400 | | | | | | | | |
| 0410 | 1 | 75 32 351 | | 1986,11,15)B201 TURBO SE | 1 | Label | Etikett | 4 |
| 0420 | 1 | 75 37 343 | | 1987,11,15)B201 TURBO SE | 1 | Label | Etikett | 4 |
| 0430 | 1 | 75 39 661 | | 1988,11,15)B201TURBO SE | 1 | Label | Etikett | 4 |
| 0440 | | | | | | | | |
| 0450 | 1 | 75 37 996 | | 1987,11,14)B201TURBO SE | 1 | Label | Etikett | 4 |
| 0460 | 1 | 75 39 687 | | 500,11,14) B201 TURBO SE | 1 | Label | Etikett | 4 |
| 0470 | 1 | 40 19 873 | | 1989,11,14)B201TURBO SE | 1 | Label | Etikett | 4 |
| 0480 | | | | | | | | |
| 0490 | 1 | 75 32 377 | | 1986,11,15)B202 TURBO SE | 1 | Label | Etikett | 4 |
| 0500 | 1 | 75 37 350 | | 1987,11,15)B202 TURBO SE | 1 | Label | Etikett | 4 |
| 0510 | 1 | 75 39 679 | | 1988,11,15)B202 TURBO SE | 1 | Label | Etikett | 4 |
| 0520 | | | | | | | | |
| 0530 | 1 | 75 38 406 | | 1987,11,14)B202 TURBO SE | 1 | Label | Etikett | 4 |
| 0540 | 1 | 75 39 703 | | 1988,11,14)B202 TURBO SE | 1 | Label | Etikett | 4 |
| 0550 | 1 | 89 79 742 | | 500,11,14) B202 TURBO SE | 1 | Label | Etikett | 4 |
| 0560 | 1 | 40 17 687 | | 1989,11,14)B202 TURBO SE | 1 | Label | Etikett | 4 |
| 0580 | | | | | | | | |
| 0590 | 1 | 75 37 475 | | 1987,11,14) B201 I, CH | 1 | Label | Etikett | 4 |
| 0600 | 1 | 89 76 342 | | 1987,11,14)B201 TURBO CH | 1 | Label | Etikett | 4 |
| 0620 | 1 | 89 78 702 | | 1988,11,14)B201 TURBO CH | 1 | Label | Etikett | 4 |
| 0625 | 1 | 75 39 232 | | 1987,11,14)B202 TURBO CH | 1 | Label | Etikett | 4 |
| 0630 | 1 | 89 78 710 | | 1988,11,14)B202 TURBO CH | 1 | Label | Etikett | 4 |
| 0640 | | | | | | | | |
| 0650 | 1 | 75 32 328 | | 1986,11) B201 I, US, JP | 1 | Label | Etikett | 4 |
| 0660 | 1 | 75 37 434 | | 1987,11) B201 I, US, JP | 1 | Label | Etikett | 4 |
| 0670 | 1 | 89 79 262 | | 1988,11) B201 I, US, JP | 1 | Label | Etikett | 4 |
| 0680 | 1 | 75 35 958 | | 1986,11) B202 I, US | 1 | Label | Etikett | 4 |
| 0690 | 1 | 75 37 459 | | 1987,11) B202 I, US, JP | 1 | Label | Etikett | 4 |
| 0700 | 1 | 89 79 270 | | 1988,11) B202 I, US, JP | 1 | Label | Etikett | 4 |
| 0710 | 1 | 89 79 809 | | 1989,11) B202 I, US, JP | 1 | Label | Etikett | 4 |
| 0720 | | | | | | | | |
| 0730 | 1 | 75 32 336 | | 1986,11)B202 TURBO US,JP | 1 | Label | Etikett | 4 |
| 0740 | 1 | 75 37 442 | | 1987,11)B202 TURBO US,JP | 1 | Label | Etikett | 4 |
| 0750 | 1 | 89 78 439 | | 1988,11)B202 TURBO US,JP | 1 | Label | Etikett | 4 |

5. Ch. -J3023673, -J7032934.
6. Ch. J3023674-, J7032935-.
11. Exhaust emission control device Avgasrening
14. With catalytic converter. Med katalytisk reaktor.
15. Without catalytic converter. Utan katalytisk reaktor.
500. Also valid for SE 1988B. Gäller även för SE 1988B.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


9 GROUP INDEX


| | |
|---|---|
| Tool kit | 7-D06 |
| Labels | 7-D08 |

# 7-D12 Labels Part 2 — Etiketter Del 2

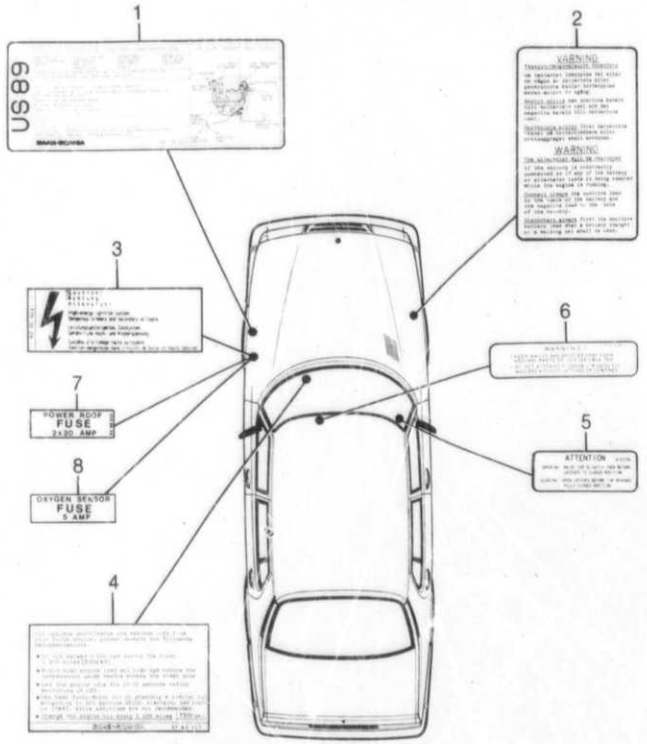


F5580 90086

| 0200 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0760 | 1 | 89 79 817 | | 1989,11)B202 TURBO US,JP | 1 | Label | Etikett | 4 |
| 0770 | | | | | | | | |
| 0780 | 1 | 75 32 393 | | 1986,11) B201 I CA | 1 | Label | Etikett | 4 |
| 0790 | 1 | 75 37 392 | | 1987,11) B201 I CA | 1 | Label | Etikett | 4 |
| 0800 | 1 | 75 39 778 | | 1988,11) B201 I CA | 1 | Label | Etikett | 4 |
| 0810 | 1 | 75 32 419 | | 1986,11) B202 I CA | 1 | Label | Etikett | 4 |
| 0820 | 1 | 75 37 426 | | 1987,11) B202 I CA | 1 | Label | Etikett | 4 |
| 0830 | 1 | 75 39 786 | | 1988,11) B202 I CA | 1 | Label | Etikett | 4 |
| 0840 | 1 | 89 79 783 | | 1989,11) B202 I CA | 1 | Label | Etikett | 4 |
| 0850 | | | | | | | | |
| 0860 | 1 | 75 32 401 | | 1986,11) B202 TURBO CA | 1 | Label | Etikett | 4 |
| 0870 | 1 | 75 37 418 | | 1987,11) B202 TURBO CA | 1 | Label | Etikett | 4 |
| 0880 | 1 | 75 39 794 | | 1988,11) B202 TURBO CA | 1 | Label | Etikett | 4 |
| 0890 | 1 | 89 79 791 | | 1989,11) B202 TURBO CA | 1 | Label | Etikett | 4 |
| 0900 | | | | | | | | |
| 0910 | 1 | 75 32 310 | | 1986,11) B201 I AU | 1 | Label | Etikett | 4 |
| 0920 | 1 | 75 37 368 | | 1987,11) B201 I AU | 1 | Label | Etikett | 4 |
| 0930 | 1 | 75 39 745 | | 1988,11) B201 I AU | 1 | Label | Etikett | 4 |
| 0940 | 1 | 75 32 302 | | 1986,11) B202 I AU | 1 | Label | Etikett | 4 |
| 0950 | 1 | 75 37 376 | | 1987,11) B202 I AU | 1 | Label | Etikett | 4 |
| 0960 | 1 | 75 39 752 | | 1988,11) B202 I AU | 1 | Label | Etikett | 4 |
| 0970 | 1 | 89 82 431 | | 1989,11) B202 I AU | 1 | Label | Etikett | 4 |
| 0980 | | | | | | | | |
| 0990 | 1 | 75 32 294 | | 1986,11) B202 TURBO AU | 1 | Label | Etikett | 4 |
| 1000 | 1 | 75 37 384 | | 1987,11) B202 TURBO AU | 1 | Label | Etikett | 4 |
| 1010 | 1 | 75 39 760 | | 1988,11) B202 TURBO AU | 1 | Label | Etikett | 4 |
| 1020 | 1 | 89 82 449 | | 1989,11) B202 TURBO AU | 1 | Label | Etikett | 4 |
| 1030 | | | | | | | | |
| 1040 | 2 | 85 06 941 | | ALTERNATOR BOSCH SWEDISH-ENGLISH | 1 | Label | Etikett | 5 |
| 1050 | | | | | | | | |
| 1060 | 2 | 85 06 925 | | ALTERNATOR BOSCH SWEDISH-FINNISH | 1 | Label | Etikett | 6 |
| 1070 | | | | | | | | |
| 1080 | 2 | 95 50 583 | | ALTERNATOR, FRENCH | 1 | Label | Etikett | 5 |
| 1090 | | | | | | | | |
| 1100 | 3 | 85 40 981 | | -1988 BREAKERLESS SYSTEM | 1 | Label | Etikett | 6 |
| 1120 | 3 | 93 90 964 | | 14)1987- IGNITION SYSTEM TURBO AU EU | 1 | Label | Etikett | 4 |
| 1130 | | | | | | | | |
| 1150 | 3 | 93 90 964 | | 14,500),1989-IGNITION SYSTEM, SE,FI,JP,GB B202 | 1 | Label | Etikett | 4 |
| 1160 | | | | | | | | |
| 1180 | | | | | | | | |
| 1710 | 4 | 93 62 419 | | TURBO, SWEDISH TEXT | 1 | Label | Etikett | 5 |
| 1720 | 4 | 75 28 417 | | 14), 1987-88 TURBO | 1 | Label | Etikett | 4 |
| 1740 | 4 | 93 62 427 | | TURBO, ENGLISH TEXT | 1 | Label | Etikett | 5 |
| 1750 | 4 | 93 62 435 | | TURBO, GERMAN TEXT | 1 | Label | Etikett | 5 |
| 1760 | 4 | *93 62 443* | | TURBO, FINNICH TEXT NLS | 1 | Label | Etikett | 5 |
| 1770 | 4 | *93 62 450* | | TURBO, FRENCH TEXT NLS | 1 | Label | Etikett | 5 |
| 1780 | 4 | *93 62 468* | | TURBO, ITALIAN TEXT NLS | 1 | Label | Etikett | 5 |
| 1790 | 4 | *93 69 364* | | TURBO, SPANISH TEXT NLS | 1 | Label | Etikett | 5 |
| 1800 | 4 | 75 28 169 | | TURBO, 1987-88, B202, EU | 1 | Label | Etikett | 4 |
| 1820 | 4 | 75 28 177 | | TURBO, 1987-88, B202, CA (AERO-CAR) | 1 | Label | Etikett | 4 |
| 1830 | | | | | | | | |
| 1840 | 4 | 75 31 692 | | TURBO, 1987, B202, US (AERO-CAR) | 1 | Label | Etikett | 4 |
| 1850 | | | | | | | | |
| 1860 | 4 | 75 91 167 | | TURBO, B202 US, JP | 1 | Label | Etikett | 4 |
| 1870 | | | | | | | | |
| 1890 | 5 | 41 53 755 | | ATTENTION, CV | 2 | Label | Etikett | 5 |
| 1900 | | | | | | | | |
| 1950 | 6 | 69 40 530 | | WARNING, CV ENGLISH TEXT | 1 | Label | Etikett | 5 |
| 1960 | 6 | 69 40 522 | | WARNING, CV SWEDISH TEXT | 1 | Label | Etikett | 5 |
| 1970 | 6 | 96 49 732 | | WARNING, CV GERMEN TEXT | 1 | Label | Etikett | 5 |

11. Exhaust emission control device Avgasrening
14. With catalytic converter. Med katalytisk reaktor.
500. Also valid for SE 1988B. Gäller även för SE 1988B.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


9 GROUP INDEX


| | |
|---|---|
| Tool kit | 7-D06 |
| Labels | 7-D08 |

# 7-D14 Labels Part 2

# Etiketter Del 2

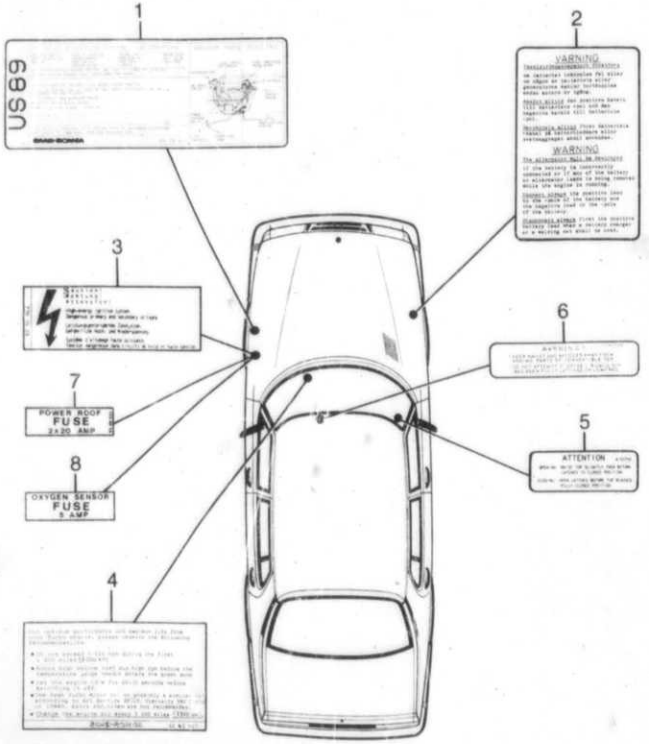


F5580 90086

| 0200 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 1960 | 6 | 69 40 555 | | WARNING, CV FRENCH TEXT | 1 | Label | Etikett | 5 |
| 1990 | | | | | | | | |
| 2130 | 7 | 95 97 220 | | POWER ROOF, FUSE 25 AMP CV | 1 | Label | Etikett | 5 |
| 2140 | | | | | | | | |
| 2145 | | | | | | | | |
| 2150 | 8 | 95 97 238 | | 14),OXYGEN SENSOR, FUSE 5AMP, CV | 1 | Label | Etikett | 5 |
| 2160 | | | | | | | | |

14. With catalytic converter. Med katalytisk reaktor.




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


9 GROUP INDEX


| | |
|---|---|
| Tool kit | 7-D06 |
| Labels | 7-D08 |

# 7-D16 Labels Part 3 — Etiketter Del 3

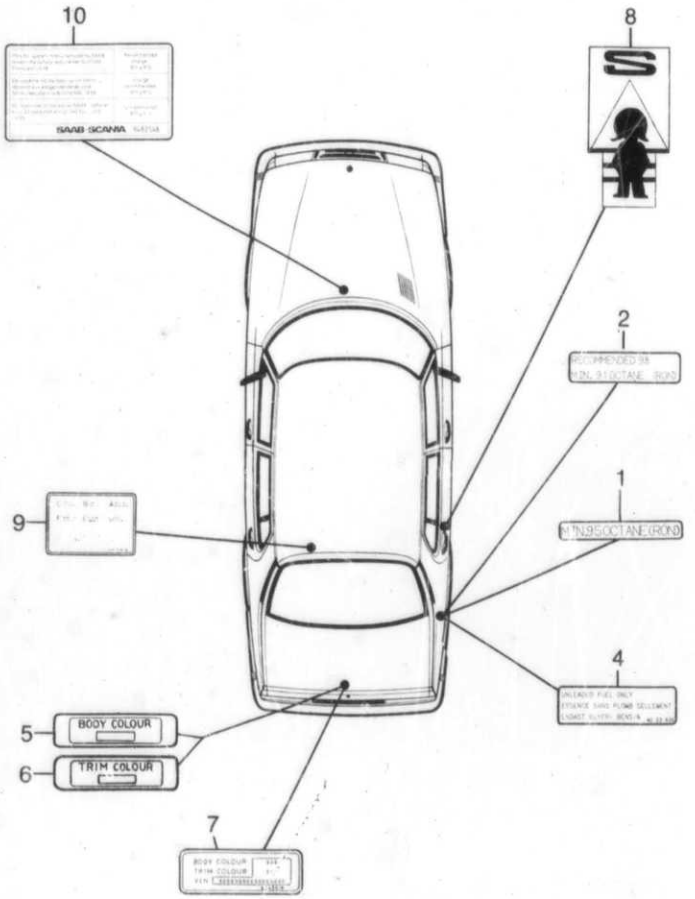


F5581 90086

| 0250 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 0010 | 1 | 93 44 177 | | 3,9) 93 OCTANE | 1 | Label | Etikett | 4 |
| 0020 | | | | SE ENGLISH TEXT ONLY | | | | |
| 0030 | 1 | 75 37 756 | | 4,9) 95 OCTANE | 1 | Label | Etikett | 4 |
| 0040 | 1 | *93 48 764* | | 3,9) 97 OCTANE NLS | 1 | Label | Etikett | 4 |
| 0045 | | | | | | | | |
| 0050 | 2 | 93 91 111 | | 9)TURBO,98 MIN 91 OCTANE | 1 | Label | Etikett | 4 |
| 0060 | 2 | 75 39 711 | | 9,14) 95 MIN 91 OCTANE | 1 | Label | Etikett | 4 |
| 0065 | | | | | | | | |
| 0090 | 4 | *93 62 534* | | 10) ENGLISH-FRENCH TEXT | 1 | Label | Etikett | 4 |
| 0090 | | | | NLS - USE 4023636 | | | | |
| 0100 | 4 | 75 37 764 | | 10,14) SE, FI | 1 | Label | Etikett | 4 |
| 0110 | 4 | 75 37 988 | | 10,14) EU | 1 | Label | Etikett | 4 |
| 0120 | 4 | 83 30 953 | | 1989,10,14) B202, GB, JP | 1 | Label | Etikett | 4 |
| 0130 | 4 | 75 38 622 | | 10) US, TURBO AERO-CAR | 1 | Label | Etikett | 4 |
| 0140 | | | | UNLEDED-PREMIUM ONLY | | | | |
| 0150 | 4 | 75 38 705 | | 10) CA, TURBO AERO-CAR | 1 | Label | Etikett | 4 |
| 0160 | | | | UNLEDED-PREMIUM ONLY | | | | |
| 0170 | | | | | | | | |
| 1180 | 5 | *98 62 228* | | -1987,12) A11 NLS - USE | 1 | Label | Etikett | 6 |
| 1180 | | | | 6942619 | | | | |
| 1190 | 5 | 96 81 842 | | -1987,12) A12 | 1 | Label | Etikett | 6 |
| 1200 | 5 | 98 62 319 | | -1987,12) A22 | 1 | Label | Etikett | 6 |
| 1210 | 5 | *98 62 368* | | -1987,12) A23 NLS - USE | 1 | Label | Etikett | 6 |
| 1210 | | | | 6942619 | | | | |
| 1220 | 5 | *98 62 418* | | -1987,12) A33 NLS - USE | 1 | Label | Etikett | 6 |
| 1220 | | | | 6942619 | | | | |
| 1230 | 5 | *98 62 236* | | -1987,12) B11 NLS - USE | 1 | Label | Etikett | 6 |
| 1230 | | | | 6942619 | | | | |
| 1240 | 5 | 96 81 826 | | -1987,12) B12 | 1 | Label | Etikett | 6 |
| 1250 | 5 | 98 62 327 | | -1987,12) B22 | 1 | Label | Etikett | 6 |
| 1260 | 5 | *98 62 376* | | -1987,12) B23 NLS - USE | 1 | Label | Etikett | 6 |
| 1260 | | | | 6942619 | | | | |
| 1270 | 5 | 96 19 404 | | -1987,12) B33 | 1 | Label | Etikett | 6 |
| 1280 | 5 | 98 62 244 | | -1987,12) C11 | 1 | Label | Etikett | 6 |
| 1290 | 5 | 96 81 834 | | -1987,12) C12 | 1 | Label | Etikett | 6 |
| 1300 | 5 | 98 62 335 | | -1987,12) C22 | 1 | Label | Etikett | 6 |
| 1310 | 5 | *98 62 384* | | -1987,12) C23 NLS - USE | 1 | Label | Etikett | 6 |
| 1310 | | | | 6942619 | | | | |
| 1320 | 5 | *98 62 426* | | -1987,12) C33 NLS - USE | 1 | Label | Etikett | 6 |
| 1320 | | | | 6942619 | | | | |
| 1330 | 5 | *98 62 251* | | -1987,12) D11 NLS - USE | 1 | Label | Etikett | 6 |
| 1330 | | | | 6942619 | | | | |
| 1340 | 5 | 96 81 859 | | -1987,12) D12 | 1 | Label | Etikett | 6 |
| 1350 | 5 | 98 62 343 | | -1987,12) D22 | 1 | Label | Etikett | 6 |
| 1360 | 5 | *98 62 392* | | -1987,12) D23 NLS - USE | 1 | Label | Etikett | 6 |
| 1360 | | | | 6942619 | | | | |
| 1370 | 5 | 96 81 867 | | -1987,12) E12 | 1 | Label | Etikett | 6 |
| 1380 | 5 | 98 62 350 | | -1987,12) E22 | 1 | Label | Etikett | 6 |
| 1390 | 5 | *98 62 400* | | -1987,12) E23 NLS - USE | 1 | Label | Etikett | 6 |
| 1390 | | | | 6942619 | | | | |
| 1400 | 5 | *98 62 434* | | -1987,12) E33 NLS - USE | 1 | Label | Etikett | 6 |
| 1400 | | | | 6942619 | | | | |
| 1405 | | | | | | | | |
| 1410 | 6 | 92 90 230 | | -1987,13) 112B | 1 | Label | Etikett | 6 |
| 1420 | 6 | 92 94 646 | | -1987,13) 117H | 1 | Label | Etikett | 6 |
| 1430 | 6 | 69 13 396 | | -1987,13) 120G | 1 | Label | Etikett | 6 |

3. Ch.--G3016411, --G6007363, --G2022006.
4. Ch. G3016412--, G6007364--, G2022007--.
9. Fuel Bränsle
10. Unleaded fuel only Endast blyfri bensin
12. Trim colour Trim colour
13. Body colour Body colour
14. With catalytic converter. Med katalytisk reaktor.



MASTER INDEX



| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


9 GROUP INDEX


| | |
|---|---|
| Tool kit | 7-D06 |
| Labels | 7-D08 |

# 7-D18 Labels Part 3

# Etiketter Del 3

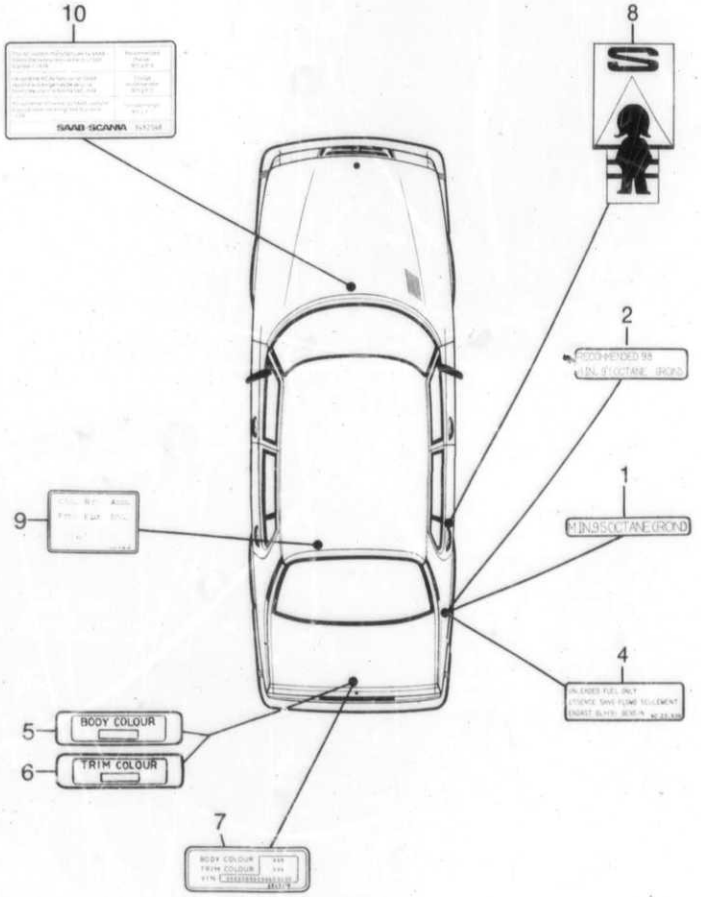


F5581 90086

| 0250 | Pos | Part No/Art nr | K S | Notes/Anmärkningar | Qty/ Antal | Description | Benämning | S L |
|---|---|---|---|---|---|---|---|---|
| 1440 | 6 | 92 90 255 | | -1987,13) 127H | 1 | Label | Etikett | 6 |
| 1450 | 6 | 69 13 388 | | -1987,13) 129H | 1 | Label | Etikett | 6 |
| 1460 | 6 | 92 90 271 | | -1987,13) 131H | 1 | Label | Etikett | 6 |
| 1470 | 6 | 92 90 297 | | -1987,13) 153B | 1 | Label | Etikett | 6 |
| 1480 | 6 | 69 13 222 | | -1987,13) 156G | 1 | Label | Etikett | 6 |
| 1490 | 6 | 69 26 208 | | -1987,13) 157B | 1 | Label | Etikett | 6 |
| 1500 | 6 | 69 26 216 | | -1987,13) 158B | 1 | Label | Etikett | 6 |
| 1510 | 6 | 69 26 224 | | -1987,13) 159G | 1 | Label | Etikett | 6 |
| 1520 | 6 | 69 26 232 | | -1987,13) 162B | 1 | Label | Etikett | 6 |
| 1530 | 6 | 92 90 339 | | -1987,13) 170B | 1 | Label | Etikett | 6 |
| 1540 | 6 | 69 13 297 | | -1987,13) 170H | 1 | Label | Etikett | 6 |
| 1550 | 6 | 92 90 347 | | -1987,13) 172H | 1 | Label | Etikett | 6 |
| 1560 | 6 | *82 71 918* | | -1987,13) 184 NLS | 1 | Label | Etikett | 6 |
| 1570 | 6 | 69 24 831 | | -1987,13) 188 | 1 | Label | Etikett | 6 |
| 1580 | 6 | 69 35 688 | | -1987,13) 198 | 1 | Label | Etikett | 6 |
| 1590 | 6 | 69 58 151 | | -1987,13) 200 | 1 | Label | Etikett | 6 |
| 1600 | 6 | 69 58 169 | | -1987,13) 201 | 1 | Label | Etikett | 6 |
| 1610 | 6 | 69 58 177 | | -1987,13) 202 | 1 | Label | Etikett | 6 |
| 1620 | 6 | 69 58 185 | | -1987,13) 203 | 1 | Label | Etikett | 6 |
| 1630 | 6 | 69 58 193 | | -1987,13) 204 | 1 | Label | Etikett | 6 |
| 1640 | 6 | 69 58 201 | | -1987,13) 205 | 1 | Label | Etikett | 6 |
| 1650 | 6 | 69 58 219 | | -1987,13) 206 | 1 | Label | Etikett | 6 |
| 1660 | 6 | *69 42 098* | | -1987,13) 212 NLS | 1 | Label | Etikett | 6 |
| 1670 | 6 | *69 42 114* | | -1987,13) 213 NLS | 1 | Label | Etikett | 6 |
| 1675 | | | | | | | | |
| 1680 | 7 | 69 42 619 | | 1988-,12,13) BLANK, REPLACEMENTMENT LABEL | 1 | Label | Etikett | 6 |
| 1690 | | | | | | | | |
| 1695 | | | | | | | | |
| 1700 | 8 | 84 45 637 | | CHILD LOCK | 1 | Label | Etikett | 5 |
| 1710 | | | | | | | | |
| 1180 | 9 | 95 98 038 | | 1989-,RELAY CV | 1 | Label | Etikett | 5 |
| 2185 | | | | | | | | |
| 2190 | 10 | 94 82 548 | | 1989-,FREON,RECOMMENDED CHARGE | 1 | Label | Etikett | 5 |
| 2200 | | | | | | | | |

12. Trim colour Trim colour
13. Body colour Body colour




MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |


9 GROUP INDEX


| | |
|---|---|
| Tool kit | 7-D06 |
| Labels | 7-D08 |

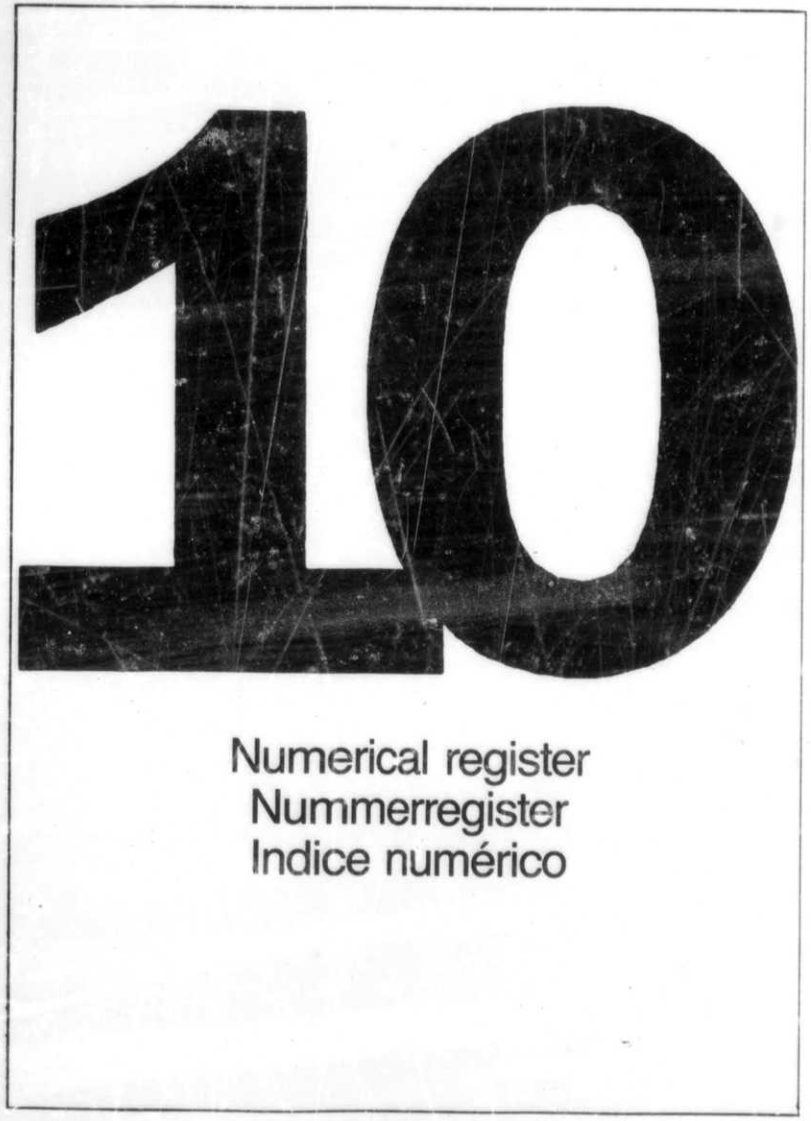


# 7-E02 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 13 24 144 | 02 | 121 | 1-G02 |
| 17 54 506 | 02 | 039 | 1-C16 |
| 18 00 259 | 02 | 097 | 1-F02 |
| 18 00 259 | 02 | 131 | 1-G12 |
| 18 00 259 | 02 | 177 | 1-I10 |
| 18 00 259 | 03A | 017 | 2-A18 |
| 23 03 279 | 02 | 039 | 1-C16 |
| 23 03 279 | 02 | 189 | 1-I22 |
| 30 37 140 | 02 | 027 | 1-C04 |
| 40 00 279 | 05 | 015 | 4-A16 |
| 40 00 279 | 05 | 035 | 4-B12 |
| 40 00 477 | 05 | 019 | 4-A20 |
| 40 00 543 | 04 | 073 | 3-K02 |
| 40 00 543 | 05 | 019 | 4-A20 |
| 40 00 667 | 04 | 053 | 3-J06 |
| 40 00 667 | 04 | 077 | 3-K06 |
| 40 00 899 | 05 | 019 | 4-A20 |
| 40 01 046 | 05 | 019 | 4-A20 |
| 40 01 046 | 05 | 021 | 4-A22 |
| 40 01 814 | 05 | 035 | 4-B12 |
| 40 01 855 | 07 | 009 | 4-E10 |
| 40 02 093 | 05 | 015 | 4-A16 |
| 40 02 150 | 05 | 007 | 4-A08 |
| 40 02 267 | 05 | 015 | 4-A16 |
| 40 02 267 | 05 | 035 | 4-B12 |
| 40 02 747 | 04 | 077 | 3-K06 |
| 40 02 861 | 05 | 015 | 4-A16 |
| 40 02 861 | 05 | 035 | 4-B12 |
| 40 02 879 | 05 | 015 | 4-A16 |
| 40 02 879 | 05 | 037 | 4-B14 |
| 40 02 887 | 05 | 015 | 4-A16 |
| 40 02 887 | 05 | 037 | 4-B14 |
| 40 02 895 | 05 | 015 | 4-A16 |
| 40 02 895 | 05 | 035 | 4-B12 |
| 40 02 903 | 04 | 053 | 3-J06 |
| 40 03 083 | 05 | 035 | 4-B12 |
| 40 03 091 | 05 | 037 | 4-B14 |
| 40 03 117 | 05 | 015 | 4-A16 |
| 40 03 117 | 05 | 035 | 4-B12 |
| 40 03 976 | 05 | 023 | 4-A24 |
| 40 04 123 | 05 | 005 | 4-A06 |
| 40 04 123 | 05 | 029 | 4-B06 |
| 40 04 768 | 06 | 007 | 4-C08 |
| 40 06 417 | 08A | 047 | 5-B24 |
| 40 06 425 | 08A | 083 | 5-D12 |
| 40 07 449 | 08A | 007 | 5-A08 |
| 40 08 793 | 08A | 007 | 5-A08 |
| 40 10 104 | 08A | 095 | 5-D24 |
| 40 13 165 | 03A | 045 | 2-B22 |
| 40 14 916 | 03A | 037 | 2-B14 |
| 40 14 924 | 03A | 037 | 2-B14 |
| 40 14 932 | 03A | 037 | 2-B14 |
| 40 14 940 | 03A | 037 | 2-B14 |
| 40 14 957 | 03A | 037 | 2-B14 |
| 40 14 965 | 03A | 037 | 2-B14 |
| 40 17 299 | 03A | 011 | 2-A12 |
| 40 17 596 | 09 | 007 | 7-D08 |
| 40 17 679 | 09 | 009 | 7-D10 |
| 40 17 687 | 09 | 009 | 7-D10 |
| 40 17 695 | 09 | 009 | 7-D10 |
| 40 18 586 | 02 | 093 | 1-E22 |
| 40 19 352 | 02 | 099 | 1-F04 |
| 40 19 873 | 09 | 009 | 7-D10 |
| 40 19 998 | 02 | 081 | 1-E10 |
| 40 19 998 | 02 | 205 | 1-J14 |
| 40 20 848 | 02 | 205 | 1-J14 |
| 40 27 660 | 02 | 157 | 1-H14 |
| 40 27 660 | 08C | 035 | 7-B12 |
| 40 27 660 | 08C | 037 | 7-B14 |
| 40 27 660 | 08C | 041 | 7-B18 |
| 40 27 660 | 08C | 045 | 7-B22 |
| 40 27 660 | 08C | 047 | 7-B24 |
| 40 27 660 | 08C | 051 | 7-C04 |
| 40 27 777 | 02 | 157 | 1-H14 |
| 40 27 801 | 04 | 007 | 3-H08 |
| 40 28 387 | 04 | 057 | 3-J10 |
| 40 29 013 | 02 | 153 | 1-H10 |
| 40 29 013 | 02 | 161 | 1-H18 |
| 40 29 153 | 02 | 153 | 1-H10 |
| 40 29 211 | 02 | 157 | 1-H14 |
| 40 29 443 | 04 | 057 | 3-J10 |
| 40 29 450 | 04 | 059 | 3-J12 |
| 40 29 468 | 04 | 057 | 3-J10 |
| 40 29 476 | 04 | 059 | 3-J12 |
| 40 29 484 | 04 | 057 | 3-J10 |
| 40 29 492 | 04 | 057 | 3-J10 |
| 40 29 500 | 04 | 061 | 3-J14 |
| 40 29 518 | 04 | 061 | 3-J14 |
| 40 29 526 | 04 | 057 | 3-J10 |
| 40 29 955 | 04 | 049 | 3-J02 |
| 40 30 862 | 08B | 005 | 6-A06 |
| 40 31 563 | 08B | 161 | 6-G18 |
| 40 31 563 | 08B | 183 | 6-H16 |
| 40 31 563 | 08B | 225 | 6-J10 |
| 40 31 563 | 08B | 227 | 6-J12 |
| 40 33 304 | 08B | 173 | 6-H06 |
| 40 33 312 | 08B | 173 | 6-H06 |
| 40 33 510 | 08B | 059 | 6-C12 |
| 40 33 528 | 08B | 059 | 6-C12 |
| 40 33 536 | 08B | 059 | 6-C12 |
| 40 33 544 | 08B | 059 | 6-C12 |
| 40 33 577 | 08B | 059 | 6-C12 |
| 40 33 585 | 08B | 059 | 6-C12 |
| 40 33 593 | 08B | 059 | 6-C12 |
| 40 33 601 | 08B | 059 | 6-C12 |
| 40 34 492 | 08B | 181 | 6-H14 |
| 40 34 500 | 08B | 181 | 6-H14 |
| 40 34 518 | 08B | 181 | 6-H14 |
| 40 34 526 | 08B | 181 | 6-H14 |
| 40 36 273 | 08B | 005 | 6-A06 |
| 40 36 273 | 08B | 229 | 6-J14 |
| 40 36 281 | 08B | 011 | 6-A12 |
| 40 37 735 | 08A | 075 | 5-D04 |
| 40 37 925 | 08B | 067 | 6-C20 |
| 40 37 933 | 08B | 067 | 6-C20 |
| 40 37 958 | 08B | 069 | 6-C22 |
| 40 38 329 | 08B | 069 | 6-C22 |
| 40 39 624 | 08B | 069 | 6-C22 |
| 40 39 749 | 08B | 069 | 6-C22 |
| 40 39 756 | 08B | 069 | 6-C22 |
| 40 39 764 | 08B | 069 | 6-C22 |
| 40 40 077 | 08B | 069 | 6-C22 |
| 40 40 085 | 08B | 069 | 6-C22 |
| 40 40 200 | 08B | 069 | 6-C22 |
| 40 40 218 | 08B | 069 | 6-C22 |
| 40 40 226 | 08B | 069 | 6-C22 |
| 40 40 630 | 08B | 069 | 6-C22 |
| 40 42 032 | 08B | 019 | 6-A20 |
| 40 42 735 | 08B | 019 | 6-A20 |
| 40 43 394 | 08B | 179 | 6-H12 |
| 40 45 712 | 08B | 023 | 6-A24 |
| 40 48 260 | 08B | 187 | 6-H20 |
| 40 48 278 | 08B | 185 | 6-H18 |
| 40 48 302 | 08B | 179 | 6-H12 |
| 40 48 310 | 08B | 179 | 6-H12 |
| 40 48 997 | 08B | 021 | 6-A22 |
| 40 49 003 | 08B | 021 | 6-A22 |
| 40 49 011 | 08B | 021 | 6-A22 |
| 40 49 029 | 08B | 021 | 6-A22 |
| 40 50 761 | 03B | 191 | 6-H24 |
| 40 52 734 | 08B | 169 | 6-H02 |
| 40 52 734 | 08B | 183 | 6-H16 |
| 40 52 734 | 08B | 227 | 6-J12 |
| 40 52 742 | 08B | 169 | 6-H02 |
| 40 52 742 | 08B | 183 | 6-H16 |
| 40 52 742 | 08B | 227 | 6-J12 |
| 40 53 450 | 08B | 189 | 6-H22 |
| 40 53 468 | 08B | 189 | 6-H22 |
| 40 53 476 | 08B | 189 | 6-H22 |
| 40 60 208 | 03A | 119 | 2-E24 |
| 40 60 216 | 03A | 041 | 2-B18 |
| 40 60 323 | 03A | 041 | 2-B18 |
| 40 60 398 | 03A | 049 | 2-C02 |
| 40 60 406 | 03A | 049 | 2-C02 |
| 40 60 679 | 03A | 041 | 2-B18 |
| 40 60 687 | 03A | 041 | 2-B18 |
| 40 60 695 | 03A | 041 | 2-B18 |
| 40 60 703 | 03A | 041 | 2-B18 |
| 40 60 745 | 03A | 055 | 2-C08 |
| 40 60 745 | 03A | 147 | 2-G04 |
| 40 60 752 | 03A | 055 | 2-C08 |
| 40 60 752 | 03A | 147 | 2-G04 |
| 40 60 836 | 03A | 131 | 2-F12 |
| 40 61 719 | 03A | 129 | 2-F10 |
| 40 61 891 | 03A | 005 | 2-A06 |
| 40 61 909 | 03A | 067 | 2-C20 |
| 40 62 048 | 03A | 127 | 2-F08 |
| 40 62 964 | 08C | 013 | 7-A14 |
| 40 63 517 | 03A | 131 | 2-F12 |
| 40 63 525 | 03A | 131 | 2-F12 |
| 40 63 731 | 08B | 157 | 6-G14 |
| 40 63 749 | 08B | 157 | 6-G14 |
| 40 63 855 | 08B | 223 | 6-J08 |
| 40 65 397 | 03A | 077 | 2-D06 |
| 40 65 405 | 03A | 077 | 2-D06 |
| 40 67 989 | 03A | 077 | 2-D06 |
| 40 67 997 | 03A | 077 | 2-D06 |
| 40 68 839 | 03A | 121 | 2-F02 |
| 40 68 847 | 03A | 121 | 2-F02 |
| 40 70 413 | 08C | 007 | 7-A08 |
| 40 70 454 | 08C | 013 | 7-A14 |
| 40 70 694 | 08C | 007 | 7-A08 |
| 40 70 827 | 08C | 035 | 7-B12 |
| 40 70 918 | 08C | 023 | 7-A24 |
| 40 70 918 | 08C | 051 | 7-C04 |
| 40 71 478 | 08C | 011 | 7-A12 |
| 40 74 944 | 08C | 017 | 7-A18 |
| 40 74 944 | 08C | 021 | 7-A22 |
| 40 84 554 | 03A | 065 | 2-C18 |
| 40 84 554 | 03A | 151 | 2-G08 |
| 40 88 324 | 08A | 147 | 5-G04 |
| 40 88 332 | 08A | 147 | 5-G04 |
| 40 88 340 | 08A | 147 | 5-G04 |
| 40 88 357 | 08A | 147 | 5-G04 |
| 40 89 454 | 08A | 059 | 5-C12 |
| 40 90 130 | 08A | 083 | 5-D12 |
| 41 03 206 | 05 | 027 | 4-B04 |
| 41 03 958 | 06 | 013 | 4-C14 |
| 41 03 974 | 06 | 013 | 4-C14 |
| 41 03 990 | 06 | 013 | 4-C14 |
| 41 03 990 | 06 | 015 | 4-C16 |
| 41 04 014 | 06 | 015 | 4-C16 |
| 41 04 014 | 06 | 017 | 4-C18 |
| 41 04 022 | 06 | 013 | 4-C14 |
| 41 04 022 | 06 | 015 | 4-C16 |
| 41 04 162 | 06 | 015 | 4-C16 |
| 41 04 188 | 05 | 017 | 4-A18 |
| 41 04 188 | 05 | 021 | 4-A22 |
| 41 04 493 | 06 | 015 | 4-C16 |
| 41 04 519 | 06 | 015 | 4-C16 |
| 41 04 592 | 06 | 013 | 4-C14 |
| 41 04 592 | 06 | 015 | 4-C16 |
| 41 05 433 | 05 | 035 | 4-B12 |
| 41 06 498 | 06 | 013 | 4-C14 |
| 41 06 506 | 06 | 013 | 4-C14 |
| 41 06 571 | 06 | 017 | 4-C18 |
| 41 06 589 | 06 | 015 | 4-C16 |
| 41 06 597 | 06 | 017 | 4-C18 |
| 41 06 605 | 06 | 015 | 4-C16 |
| 41 06 613 | 06 | 013 | 4-C14 |
| 41 06 621 | 06 | 013 | 4-C14 |
| 41 06 647 | 06 | 015 | 4-C16 |
| 41 07 116 | 05 | 007 | 4-A08 |
| 41 07 116 | 05 | 035 | 4-B12 |
| 41 07 793 | 05 | 011 | 4-A12 |
| 41 07 793 | 05 | 037 | 4-B14 |
| 41 07 801 | 05 | 037 | 4-B14 |
| 41 08 270 | 03A | 141 | 2-F22 |
| 41 08 593 | 03A | 143 | 2-F24 |
| 41 08 742 | 03A | 071 | 2-C24 |
| 41 08 759 | 03A | 067 | 2-C20 |
| 41 08 841 | 03A | 141 | 2-F22 |
| 41 08 858 | 03A | 141 | 2-F22 |
| 41 08 866 | 03A | 141 | 2-F22 |
| 41 08 874 | 03A | 141 | 2-F22 |
| 41 08 882 | 03A | 141 | 2-F22 |
| 41 18 527 | 04 | 057 | 3-J10 |
| 41 20 069 | 02 | 153 | 1-H10 |
| 41 20 069 | 02 | 161 | 1-H18 |
| 41 53 003 | 08A | 027 | 5-B04 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

## Numerical register — Nummerregister

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 41 53 433 | 08A | 049 | 5-C02 |
| 41 53 441 | 08A | 049 | 5-C02 |
| 41 53 755 | 09 | 011 | 7-D12 |
| 41 53 805 | 08A | 037 | 5-B14 |
| 41 60 099 | 03A | 011 | 2-A12 |
| 41 60 123 | 03A | 011 | 2-A12 |
| 41 60 149 | 03A | 011 | 2-A12 |
| 41 61 493 | 02 | 081 | 1-E10 |
| 41 61 766 | 02 | 081 | 1-E10 |
| 41 95 822 | 04 | 053 | 3-J06 |
| 41 95 822 | 04 | 077 | 3-K06 |
| 41 99 873 | 04 | 077 | 3-K06 |
| 42 95 176 | 08A | 049 | 5-C02 |
| 43 18 200 | 08B | 005 | 6-A06 |
| 43 82 396 | 08C | 047 | 7-B24 |
| 43 93 476 | 02 | 081 | 1-E10 |
| 44 24 172 | 03A | 083 | 2-D12 |
| 44 40 038 | 02 | 151 | 1-H08 |
| 44 40 046 | 02 | 147 | 1-H04 |
| 44 40 053 | 02 | 151 | 1-H08 |
| 44 40 061 | 02 | 139 | 1-G20 |
| 45 21 209 | 03A | 055 | 2-C08 |
| 45 21 340 | 08A | 049 | 5-C02 |
| 69 10 582 | 08A | 011 | 5-A12 |
| 69 10 608 | 08A | 011 | 5-A12 |
| 69 10 806 | 08A | 041 | 5-B18 |
| 69 10 814 | 08A | 041 | 5-B18 |
| 69 10 830 | 08A | 109 | 5-E14 |
| 69 10 830 | 08A | 111 | 5-E16 |
| 69 10 848 | 08A | 109 | 5-E14 |
| 69 10 848 | 08A | 111 | 5-E16 |
| 69 10 855 | 08A | 109 | 5-E14 |
| 69 10 863 | 08A | 109 | 5-E14 |
| 69 10 871 | 08A | 109 | 5-E14 |
| 69 10 889 | 08A | 109 | 5-E14 |
| 69 11 044 | 08A | 101 | 5-E06 |
| 69 11 051 | 08A | 101 | 5-E06 |
| 69 11 069 | 08A | 101 | 5-E06 |
| 69 11 093 | 08A | 109 | 5-E14 |
| 69 11 101 | 08A | 109 | 5-E14 |
| 69 11 135 | 08A | 109 | 5-E14 |
| 69 11 143 | 08A | 109 | 5-E14 |
| 69 11 176 | 08A | 109 | 5-E14 |
| 69 11 176 | 08A | 111 | 5-E16 |
| 69 11 184 | 08A | 109 | 5-E14 |
| 69 11 184 | 08A | 111 | 5-E16 |
| 69 11 275 | 08A | 089 | 5-D18 |
| 69 11 283 | 08A | 089 | 5-D18 |
| 69 11 291 | 08A | 089 | 5-D18 |
| 69 11 309 | 08A | 089 | 5-D18 |
| 69 11 317 | 08A | 117 | 5-E22 |
| 69 11 317 | 08A | 127 | 5-F08 |
| 69 11 325 | 08A | 117 | 5-E22 |
| 69 11 325 | 08A | 127 | 5-F08 |
| 69 11 614 | 08A | 121 | 5-F02 |
| 69 11 614 | 08A | 133 | 5-F14 |
| 69 11 614 | 08A | 135 | 5-F16 |
| 69 11 614 | 08A | 137 | 5-F18 |
| 69 11 614 | 08A | 139 | 5-F20 |
| 69 11 614 | 08A | 161 | 5-G18 |

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 69 11 671 | 08A | 139 | 5-F20 |
| 69 11 689 | 08A | 139 | 5-F20 |
| 69 11 697 | 08A | 139 | 5-F20 |
| 69 11 705 | 08A | 139 | 5-F20 |
| 69 11 804 | 08A | 095 | 5-D24 |
| 69 11 804 | 08A | 109 | 5-E14 |
| 69 11 804 | 08A | 111 | 5-E16 |
| 69 11 804 | 08A | 143 | 5-F24 |
| 69 11 804 | 08A | 149 | 5-G06 |
| 69 11 820 | 08A | 133 | 5-F14 |
| 69 11 820 | 08A | 137 | 5-F18 |
| 69 11 853 | 08A | 093 | 5-D22 |
| 69 11 895 | 08A | 093 | 5-D22 |
| 69 11 903 | 08A | 133 | 5-F14 |
| 69 11 911 | 08A | 133 | 5-F14 |
| 69 11 929 | 08A | 137 | 5-F18 |
| 69 11 937 | 08A | 137 | 5-F18 |
| 69 12 299 | 08A | 039 | 5-B16 |
| 69 12 323 | 08A | 005 | 5-A06 |
| 69 12 331 | 08A | 005 | 5-A06 |
| 69 12 364 | 08A | 039 | 5-B16 |
| 69 12 380 | 08A | 039 | 5-B16 |
| 69 12 430 | 08A | 109 | 5-E14 |
| 69 12 430 | 08A | 111 | 5-E16 |
| 69 12 448 | 08A | 109 | 5-E14 |
| 69 12 448 | 08A | 111 | 5-E16 |
| 69 12 539 | 08A | 109 | 5-E14 |
| 69 12 539 | 08A | 111 | 5-E16 |
| 69 12 547 | 08A | 109 | 5-E14 |
| 69 12 547 | 08A | 111 | 5-E16 |
| 69 12 570 | 08A | 063 | 5-C16 |
| 69 12 570 | 08A | 065 | 5-C18 |
| 69 12 570 | 08A | 067 | 5-C20 |
| 69 12 588 | 08A | 063 | 5-C16 |
| 69 12 588 | 08A | 065 | 5-C18 |
| 69 12 588 | 08A | 067 | 5-C20 |
| 69 12 596 | 08A | 063 | 5-C16 |
| 69 12 596 | 08A | 065 | 5-C18 |
| 69 12 596 | 08A | 067 | 5-C20 |
| 69 12 604 | 08A | 063 | 5-C16 |
| 69 12 604 | 08A | 065 | 5-C18 |
| 69 12 604 | 08A | 067 | 5-C20 |
| 69 12 810 | 08A | 145 | 5-G02 |
| 69 13 222 | 09 | 017 | 7-D18 |
| 69 13 297 | 09 | 017 | 7-D18 |
| 69 13 388 | 09 | 017 | 7-D18 |
| 69 13 396 | 09 | 015 | 7-D16 |
| 69 13 537 | 08A | 059 | 5-C12 |
| 69 13 545 | 08A | 007 | 5-A08 |
| 69 13 636 | 08A | 109 | 5-E14 |
| 69 13 644 | 08A | 109 | 5-E14 |
| 69 13 651 | 08A | 109 | 5-E14 |
| 69 13 784 | 08A | 063 | 5-C16 |
| 69 13 784 | 08A | 065 | 5-C18 |
| 69 13 784 | 08A | 067 | 5-C20 |
| 69 14 139 | 08A | 005 | 5-A06 |
| 69 14 352 | 08A | 109 | 5-E14 |
| 69 14 352 | 08A | 111 | 5-E16 |
| 69 14 469 | 08A | 101 | 5-E06 |
| 69 14 576 | 08A | 173 | 5-H06 |

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 69 14 584 | 08A | 083 | 5-D12 |
| 69 14 584 | 08A | 173 | 5-H06 |
| 69 14 618 | 08A | 143 | 5-F24 |
| 69 14 709 | 08A | 103 | 5-E08 |
| 69 14 709 | 08A | 111 | 5-E16 |
| 69 14 717 | 08A | 103 | 5-E08 |
| 69 14 725 | 08A | 103 | 5-E08 |
| 69 14 808 | 08A | 147 | 5-G04 |
| 69 14 816 | 08A | 147 | 5-G04 |
| 69 14 832 | 08A | 147 | 5-G04 |
| 69 14 840 | 08A | 147 | 5-G04 |
| 69 14 915 | 08A | 143 | 5-F24 |
| 69 14 923 | 08A | 143 | 5-F24 |
| 69 14 931 | 08A | 147 | 5-G04 |
| 69 14 956 | 08A | 147 | 5-G04 |
| 69 14 964 | 08A | 147 | 5-G04 |
| 69 15 078 | 08A | 111 | 5-E16 |
| 69 15 086 | 08A | 111 | 5-E16 |
| 69 15 094 | 08A | 111 | 5-E16 |
| 69 15 110 | 08A | 111 | 5-E16 |
| 69 15 128 | 08A | 111 | 5-E16 |
| 69 15 201 | 08A | 109 | 5-E14 |
| 69 15 201 | 08A | 111 | 5-E16 |
| 69 15 292 | 08A | 005 | 5-A06 |
| 69 15 300 | 08A | 005 | 5-A06 |
| 69 15 474 | 08A | 057 | 5-C10 |
| 69 15 482 | 08A | 057 | 5-C10 |
| 69 15 508 | 08A | 057 | 5-C10 |
| 69 15 672 | 08A | 093 | 5-D22 |
| 69 15 706 | 08A | 093 | 5-D22 |
| 69 15 847 | 08A | 093 | 5-D22 |
| 69 15 920 | 08A | 017 | 5-A18 |
| 69 16 050 | 08A | 085 | 5-D14 |
| 69 16 050 | 08A | 173 | 5-H06 |
| 69 16 944 | 08A | 083 | 5-D12 |
| 69 16 977 | 08A | 109 | 5-E14 |
| 69 16 977 | 08A | 111 | 5-E16 |
| 69 17 116 | 08A | 043 | 5-B20 |
| 69 17 124 | 08A | 043 | 5-B20 |
| 69 17 223 | 08A | 017 | 5-A18 |
| 69 17 264 | 08A | 017 | 5-A18 |
| 69 17 264 | 08A | 021 | 5-A22 |
| 69 17 306 | 08A | 017 | 5-A18 |
| 69 17 306 | 08A | 021 | 5-A22 |
| 69 17 322 | 08A | 017 | 5-A18 |
| 69 17 330 | 08A | 017 | 5-A18 |
| 69 17 348 | 08A | 017 | 5-A18 |
| 69 17 348 | 08A | 021 | 5-A22 |
| 69 17 355 | 08A | 017 | 5-A18 |
| 69 17 355 | 08A | 021 | 5-A22 |
| 69 17 389 | 08A | 021 | 5-A22 |
| 69 17 405 | 08A | 021 | 5-A22 |
| 69 17 751 | 08A | 093 | 5-D22 |
| 69 17 777 | 08A | 093 | 5-D22 |
| 69 17 785 | 08A | 139 | 5-F20 |
| 69 17 793 | 08A | 139 | 5-F20 |
| 69 17 934 | 08A | 005 | 5-A06 |
| 69 18 031 | 08A | 093 | 5-D22 |
| 69 18 130 | 08A | 137 | 5-F18 |
| 69 18 361 | 08A | 115 | 5-E20 |

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 69 18 361 | 08A | 125 | 5-F06 |
| 69 18 510 | 08A | 095 | 5-D24 |
| 69 18 528 | 08A | 095 | 5-D24 |
| 69 18 536 | 08A | 095 | 5-D24 |
| 69 18 544 | 08A | 095 | 5-D24 |
| 69 19 013 | 08A | 087 | 5-D16 |
| 69 19 039 | 08A | 129 | 5-F10 |
| 69 19 047 | 08A | 129 | 5-F10 |
| 69 19 054 | 08A | 129 | 5-F10 |
| 69 19 054 | 08A | 185 | 5-H18 |
| 69 19 195 | 08A | 109 | 5-E14 |
| 69 19 195 | 08A | 111 | 5-E16 |
| 69 19 237 | 08A | 119 | 5-E24 |
| 69 19 245 | 08A | 119 | 5-E24 |
| 69 19 294 | 08A | 101 | 5-E06 |
| 69 19 302 | 08A | 101 | 5-E06 |
| 69 19 310 | 08A | 101 | 5-E06 |
| 69 19 351 | 08A | 119 | 5-E24 |
| 69 19 369 | 08A | 119 | 5-E24 |
| 69 19 492 | 08A | 011 | 5-A12 |
| 69 19 518 | 08A | 109 | 5-E14 |
| 69 19 542 | 08A | 109 | 5-E14 |
| 69 19 542 | 08A | 111 | 5-E16 |
| 69 19 559 | 08A | 109 | 5-E14 |
| 69 19 849 | 08A | 109 | 5-E14 |
| 69 19 849 | 08A | 111 | 5-E16 |
| 69 19 906 | 08A | 147 | 5-G04 |
| 69 19 948 | 08A | 143 | 5-F24 |
| 69 21 126 | 08A | 057 | 5-C10 |
| 69 21 142 | 08A | 141 | 5-F22 |
| 69 21 142 | 08A | 143 | 5-F24 |
| 69 21 159 | 08A | 099 | 5-E04 |
| 69 21 167 | 08A | 099 | 5-E04 |
| 69 21 415 | 08A | 109 | 5-E14 |
| 69 21 415 | 08A | 111 | 5-E16 |
| 69 21 530 | 08A | 061 | 5-C14 |
| 69 21 548 | 08A | 061 | 5-C14 |
| 69 21 555 | 08A | 061 | 5-C14 |
| 69 21 563 | 08A | 061 | 5-C14 |
| 69 24 559 | 08A | 121 | 5-F02 |
| 69 24 831 | 09 | 017 | 7-D18 |
| 69 24 997 | 08A | 101 | 5-E06 |
| 69 25 325 | 08A | 137 | 5-F18 |
| 69 25 333 | 08A | 139 | 5-F20 |
| 69 25 515 | 08A | 005 | 5-A06 |
| 69 25 523 | 08A | 005 | 5-A06 |
| 69 25 531 | 08A | 039 | 5-B16 |
| 69 25 549 | 08A | 039 | 5-B16 |
| 69 25 572 | 08A | 039 | 5-B16 |
| 69 25 580 | 08A | 039 | 5-B16 |
| 69 25 739 | 08A | 067 | 5-C20 |
| 69 25 747 | 08A | 067 | 5-C20 |
| 69 25 754 | 08A | 063 | 5-C16 |
| 69 25 762 | 08A | 063 | 5-C16 |
| 69 25 853 | 08A | 071 | 5-C24 |
| 69 25 861 | 08A | 071 | 5-C24 |
| 69 26 208 | 09 | 017 | 7-D18 |
| 69 26 216 | 09 | 017 | 7-D18 |
| 69 26 224 | 09 | 017 | 7-D18 |
| 69 26 232 | 09 | 017 | 7-D18 |





## Numerical register — Nummerregister

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 69 26 307 | 08A | 015 | 5-A16 |
| 69 26 372 | 08A | 053 | 5-C06 |
| 69 26 380 | 08A | 053 | 5-C06 |
| 69 26 406 | 08A | 059 | 5-C12 |
| 69 26 414 | 08A | 059 | 5-C12 |
| 69 26 455 | 08A | 137 | 5-F18 |
| 69 26 463 | 08A | 139 | 5-F20 |
| 69 26 471 | 08A | 137 | 5-F18 |
| 69 26 489 | 08A | 137 | 5-F18 |
| 69 26 497 | 08A | 133 | 5-F14 |
| 69 26 505 | 08A | 133 | 5-F14 |
| 69 26 638 | 08A | 137 | 5-F18 |
| 69 26 646 | 08A | 137 | 5-F18 |
| 69 26 653 | 08A | 137 | 5-F18 |
| 69 26 661 | 08A | 137 | 5-F18 |
| 69 26 679 | 08A | 137 | 5-F18 |
| 69 26 687 | 08A | 137 | 5-F18 |
| 69 26 695 | 08A | 137 | 5-F18 |
| 69 26 703 | 08A | 137 | 5-F18 |
| 69 26 711 | 08A | 133 | 5-F14 |
| 69 26 729 | 08A | 133 | 5-F14 |
| 69 26 737 | 08A | 133 | 5-F14 |
| 69 26 745 | 08A | 133 | 5-F14 |
| 69 26 778 | 08A | 059 | 5-C12 |
| 69 26 786 | 08A | 059 | 5-C12 |
| 69 26 810 | 08A | 005 | 5-A06 |
| 69 26 828 | 08A | 005 | 5-A06 |
| 69 26 893 | 08A | 053 | 5-C06 |
| 69 26 901 | 08A | 053 | 5-C06 |
| 69 26 919 | 08A | 005 | 5-A06 |
| 69 26 927 | 08A | 005 | 5-A06 |
| 69 26 950 | 08A | 057 | 5-C10 |
| 69 27 032 | 08A | 083 | 5-D12 |
| 69 27 065 | 08A | 047 | 5-B24 |
| 69 27 065 | 08A | 051 | 5-C04 |
| 69 27 198 | 08A | 063 | 5-C16 |
| 69 27 198 | 08A | 067 | 5-C20 |
| 69 27 222 | 08A | 063 | 5-C16 |
| 69 27 222 | 08A | 067 | 5-C20 |
| 69 27 289 | 08A | 011 | 5-A12 |
| 69 27 339 | 08A | 083 | 5-D12 |
| 69 27 370 | 08A | 015 | 5-A16 |
| 69 27 388 | 08A | 015 | 5-A16 |
| 69 27 412 | 08A | 043 | 5-B20 |
| 69 27 420 | 08A | 043 | 5-B20 |
| 69 27 586 | 08A | 007 | 5-A08 |
| 69 27 677 | 08A | 083 | 5-D12 |
| 69 27 784 | 08A | 147 | 5-G04 |
| 69 27 792 | 08A | 147 | 5-G04 |
| 69 28 154 | 08A | 095 | 5-D24 |
| 69 28 170 | 08A | 095 | 5-D24 |
| 69 28 204 | 08A | 147 | 5-G04 |
| 69 28 212 | 08A | 147 | 5-G04 |
| 69 28 220 | 08A | 111 | 5-E16 |
| 69 28 238 | 08A | 111 | 5-E16 |
| 69 28 303 | 08A | 111 | 5-E16 |
| 69 28 337 | 08A | 005 | 5-A06 |
| 69 28 345 | 08A | 009 | 5-A10 |
| 69 28 352 | 08A | 005 | 5-A06 |
| 69 28 360 | 08A | 005 | 5-A06 |

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 69 28 378 | 08A | 005 | 5-A06 |
| 69 28 386 | 08A | 005 | 5-A06 |
| 69 28 394 | 08A | 005 | 5-A06 |
| 69 28 402 | 08A | 005 | 5-A06 |
| 69 28 576 | 08A | 145 | 5-G02 |
| 69 28 592 | 08A | 143 | 5-F24 |
| 69 28 592 | 08A | 147 | 5-G04 |
| 69 28 998 | 08A | 011 | 5-A12 |
| 69 29 483 | 08A | 101 | 5-E06 |
| 69 29 756 | 08A | 065 | 5-C18 |
| 69 29 764 | 08A | 065 | 5-C18 |
| 69 30 341 | 08A | 009 | 5-A10 |
| 69 30 572 | 08A | 055 | 5-C08 |
| 69 32 461 | 08A | 121 | 5-F02 |
| 69 32 479 | 08A | 121 | 5-F02 |
| 69 32 875 | 08A | 121 | 5-F02 |
| 69 32 883 | 08A | 121 | 5-F02 |
| 69 33 121 | 08A | 119 | 5-E24 |
| 69 33 139 | 08A | 119 | 5-E24 |
| 69 33 147 | 08A | 119 | 5-E24 |
| 69 33 154 | 08A | 121 | 5-F02 |
| 69 33 170 | 08A | 121 | 5-F02 |
| 69 33 261 | 08A | 119 | 5-E24 |
| 69 33 279 | 08A | 119 | 5-E24 |
| 69 33 337 | 08A | 121 | 5-F02 |
| 69 33 352 | 08A | 121 | 5-F02 |
| 69 33 436 | 08A | 121 | 5-F02 |
| 69 33 444 | 08A | 121 | 5-F02 |
| 69 33 477 | 08A | 065 | 5-C18 |
| 69 33 485 | 08A | 065 | 5-C18 |
| 69 33 501 | 08A | 053 | 5-C06 |
| 69 33 519 | 08A | 053 | 5-C06 |
| 69 33 527 | 08A | 015 | 5-A16 |
| 69 33 535 | 08A | 039 | 5-B16 |
| 69 33 543 | 08A | 039 | 5-B16 |
| 69 33 568 | 08A | 049 | 5-C02 |
| 69 33 576 | 08A | 049 | 5-C02 |
| 69 33 584 | 08A | 049 | 5-C02 |
| 69 33 592 | 08A | 049 | 5-C02 |
| 69 33 600 | 08A | 049 | 5-C02 |
| 69 33 618 | 08A | 049 | 5-C02 |
| 69 33 626 | 08A | 013 | 5-A14 |
| 69 33 634 | 08A | 039 | 5-B16 |
| 69 33 642 | 08A | 039 | 5-B16 |
| 69 33 659 | 08A | 005 | 5-A06 |
| 69 33 667 | 08A | 005 | 5-A06 |
| 69 33 683 | 08A | 049 | 5-C02 |
| 69 33 691 | 08A | 049 | 5-C02 |
| 69 33 733 | 08A | 121 | 5-F02 |
| 69 33 931 | 08A | 119 | 5-E24 |
| 69 33 972 | 08A | 119 | 5-E24 |
| 69 34 079 | 08A | 121 | 5-F02 |
| 69 34 152 | 08A | 121 | 5-F02 |
| 69 34 285 | 08A | 025 | 5-B02 |
| 69 34 343 | 08A | 119 | 5-E24 |
| 69 34 350 | 08A | 119 | 5-E24 |
| 69 34 392 | 08A | 121 | 5-F02 |
| 69 34 517 | 08A | 075 | 5-D04 |
| 69 34 525 | 08A | 075 | 5-D04 |
| 69 34 608 | 08A | 119 | 5-E24 |

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 69 34 632 | 08A | 065 | 5-C18 |
| 69 34 640 | 08A | 065 | 5-C18 |
| 69 34 871 | 08A | 121 | 5-F02 |
| 69 34 889 | 08A | 121 | 5-F02 |
| 69 34 970 | 08A | 119 | 5-E24 |
| 69 35 050 | 08A | 119 | 5-E24 |
| 69 35 050 | 08A | 161 | 5-G18 |
| 69 35 068 | 08A | 119 | 5-E24 |
| 69 35 076 | 08A | 119 | 5-E24 |
| 69 35 084 | 08A | 119 | 5-E24 |
| 69 35 084 | 08A | 161 | 5-G18 |
| 69 35 092 | 08A | 119 | 5-E24 |
| 69 35 092 | 08A | 161 | 5-G18 |
| 69 35 126 | 08A | 039 | 5-B16 |
| 69 35 134 | 08A | 039 | 5-B16 |
| 69 35 142 | 08A | 135 | 5-F16 |
| 69 35 233 | 08A | 121 | 5-F02 |
| 69 35 316 | 08A | 039 | 5-B16 |
| 69 35 530 | 08A | 025 | 5-B02 |
| 69 35 530 | 08A | 029 | 5-B06 |
| 69 35 530 | 08A | 031 | 5-B08 |
| 69 35 530 | 08A | 035 | 5-B12 |
| 69 35 563 | 08A | 121 | 5-F02 |
| 69 35 571 | 08A | 121 | 5-F02 |
| 69 35 688 | 09 | 017 | 7-D18 |
| 69 35 712 | 08A | 025 | 5-B02 |
| 69 35 845 | 08A | 121 | 5-F02 |
| 69 35 852 | 08A | 123 | 5-F04 |
| 69 35 936 | 08A | 121 | 5-F02 |
| 69 36 306 | 03A | 047 | 2-B24 |
| 69 36 314 | 03A | 047 | 2-B24 |
| 69 36 330 | 08A | 121 | 5-F02 |
| 69 36 348 | 08A | 121 | 5-F02 |
| 69 36 355 | 08A | 121 | 5-F02 |
| 69 36 363 | 08A | 121 | 5-F02 |
| 69 36 371 | 08A | 121 | 5-F02 |
| 69 36 389 | 08A | 121 | 5-F02 |
| 69 36 397 | 08A | 121 | 5-F02 |
| 69 36 413 | 08A | 119 | 5-E24 |
| 69 37 015 | 08A | 145 | 5-G02 |
| 69 37 148 | 08A | 111 | 5-E16 |
| 69 37 148 | 08A | 143 | 5-F24 |
| 69 37 155 | 08A | 111 | 5-E16 |
| 69 37 155 | 08A | 143 | 5-F24 |
| 69 37 163 | 08A | 143 | 5-F24 |
| 69 37 254 | 08A | 059 | 5-C12 |
| 69 37 288 | 08A | 149 | 5-G06 |
| 69 37 296 | 08A | 149 | 5-G06 |
| 69 37 304 | 08A | 147 | 5-G04 |
| 69 37 312 | 08A | 147 | 5-G04 |
| 69 37 346 | 08A | 111 | 5-E16 |
| 69 37 346 | 08A | 147 | 5-G04 |
| 69 37 353 | 08A | 111 | 5-E16 |
| 69 37 353 | 08A | 147 | 5-G04 |
| 69 37 361 | 08B | 193 | 6-I02 |
| 69 37 429 | 08A | 017 | 5-A18 |
| 69 37 429 | 08A | 021 | 5-A22 |
| 69 37 452 | 08A | 017 | 5-A18 |
| 69 37 460 | 08A | 121 | 5-F02 |
| 69 37 478 | 08A | 129 | 5-F10 |

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 69 37 478 | 08A | 165 | 5-G22 |
| 69 37 478 | 08A | 185 | 5-H18 |
| 69 37 486 | 08A | 129 | 5-F10 |
| 69 37 486 | 08A | 165 | 5-G22 |
| 69 37 486 | 08A | 185 | 5-H18 |
| 69 37 494 | 08A | 099 | 5-E04 |
| 69 37 577 | 09 | 007 | 7-D08 |
| 69 37 585 | 08A | 129 | 5-F10 |
| 69 37 585 | 08A | 165 | 5-G22 |
| 69 37 585 | 08A | 185 | 5-H18 |
| 69 37 593 | 08A | 129 | 5-F10 |
| 69 37 593 | 08A | 165 | 5-G22 |
| 69 37 593 | 08A | 185 | 5-H18 |
| 69 37 643 | 08A | 111 | 5-E16 |
| 69 37 650 | 08A | 111 | 5-E16 |
| 69 37 759 | 08A | 019 | 5-A20 |
| 69 37 973 | 08A | 117 | 5-E22 |
| 69 37 973 | 08A | 127 | 5-F08 |
| 69 37 981 | 08A | 117 | 5-E22 |
| 69 37 981 | 08A | 127 | 5-F08 |
| 69 37 999 | 08A | 087 | 5-D16 |
| 69 38 013 | 08A | 115 | 5-E20 |
| 69 38 013 | 08A | 125 | 5-F06 |
| 69 38 088 | 08A | 075 | 5-D04 |
| 69 38 096 | 08A | 115 | 5-E20 |
| 69 38 096 | 08A | 125 | 5-F06 |
| 69 38 112 | 08A | 093 | 5-D22 |
| 69 38 120 | 08A | 093 | 5-D22 |
| 69 38 153 | 08A | 093 | 5-D22 |
| 69 38 187 | 08A | 115 | 5-E20 |
| 69 38 187 | 08A | 125 | 5-F06 |
| 69 38 195 | 08A | 117 | 5-E22 |
| 69 38 195 | 08A | 127 | 5-F08 |
| 69 38 328 | 08A | 143 | 5-F24 |
| 69 38 369 | 08A | 103 | 5-E08 |
| 69 38 435 | 08A | 111 | 5-E16 |
| 69 38 443 | 08A | 111 | 5-E16 |
| 69 38 625 | 08A | 111 | 5-E16 |
| 69 38 633 | 08A | 111 | 5-E16 |
| 69 38 716 | 08A | 013 | 5-A14 |
| 69 38 740 | 08A | 149 | 5-G06 |
| 69 38 757 | 08A | 149 | 5-G06 |
| 69 38 765 | 08A | 149 | 5-G06 |
| 69 38 773 | 08A | 149 | 5-G06 |
| 69 38 781 | 08A | 103 | 5-E08 |
| 69 38 799 | 08A | 103 | 5-E08 |
| 69 38 823 | 06 | 005 | 4-C06 |
| 69 38 856 | 06 | 005 | 4-C06 |
| 69 39 128 | 08A | 143 | 5-F24 |
| 69 39 136 | 08A | 143 | 5-F24 |
| 69 39 144 | 08A | 103 | 5-E08 |
| 69 39 144 | 08A | 111 | 5-E16 |
| 69 39 177 | 08A | 147 | 5-G04 |
| 69 39 185 | 08A | 147 | 5-G04 |
| 69 39 193 | 08A | 147 | 5-G04 |
| 69 39 201 | 08A | 147 | 5-G04 |
| 69 39 375 | 08A | 129 | 5-F10 |
| 69 39 375 | 08A | 185 | 5-H18 |
| 69 39 383 | 08A | 129 | 5-F10 |
| 69 39 383 | 08A | 185 | 5-H18 |



MASTER INDEX


0 General 1-A02
2 Engine 1-B02
3A Electrical general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 7-A02
9 Tools, labels 7-D02
10 Numerical register 7-E02

# 7-E05 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 69 39 672 | 08A | 007 | 5-A08 |
| 69 40 019 | 09 | 007 | 7-D08 |
| 69 40 084 | 08A | 147 | 5-G04 |
| 69 40 100 | 08A | 147 | 5-G04 |
| 69 40 175 | 08A | 111 | 5-E16 |
| 69 40 175 | 08A | 143 | 5-F24 |
| 69 40 175 | 08A | 149 | 5-G06 |
| 69 40 183 | 08A | 111 | 5-E16 |
| 69 40 183 | 08A | 143 | 5-F24 |
| 69 40 183 | 08A | 149 | 5-G06 |
| 69 40 233 | 08A | 147 | 5-G04 |
| 69 40 340 | 08A | 111 | 5-E16 |
| 69 40 357 | 08A | 143 | 5-F24 |
| 69 40 365 | 08A | 147 | 5-G04 |
| 69 40 373 | 08A | 111 | 5-E16 |
| 69 40 381 | 08A | 147 | 5-G04 |
| 69 40 522 | 09 | 011 | 7-D12 |
| 69 40 530 | 09 | 011 | 7-D12 |
| 69 40 555 | 09 | 013 | 7-D14 |
| 69 40 704 | 08A | 089 | 5-D18 |
| 69 40 712 | 08A | 089 | 5-D18 |
| 69 40 852 | 08A | 149 | 5-G06 |
| 69 41 208 | 08A | 093 | 5-D22 |
| 69 41 272 | 08A | 093 | 5-D22 |
| 69 41 280 | 08A | 087 | 5-D16 |
| 69 41 298 | 08A | 085 | 5-D14 |
| 69 41 306 | 08A | 087 | 5-D16 |
| 69 41 306 | 08A | 177 | 5-H10 |
| 69 41 314 | 08A | 085 | 5-D14 |
| 69 41 330 | 08A | 085 | 5-D14 |
| 69 41 645 | 08A | 085 | 5-D14 |
| 69 41 660 | 08A | 085 | 5-D14 |
| 69 41 678 | 08A | 097 | 5-E02 |
| 69 41 744 | 08A | 095 | 5-D24 |
| 69 41 777 | 08A | 099 | 5-E04 |
| 69 41 785 | 08A | 099 | 5-E04 |
| 69 41 793 | 08A | 099 | 5-E04 |
| 69 41 819 | 08A | 085 | 5-D14 |
| 69 41 892 | 08A | 115 | 5-E20 |
| 69 41 918 | 08A | 115 | 5-E20 |
| 69 41 926 | 08A | 115 | 5-E20 |
| 69 41 934 | 08A | 115 | 5-E20 |
| 69 41 942 | 08A | 115 | 5-E20 |
| 69 41 959 | 08A | 115 | 5-E20 |
| 69 41 967 | 08A | 115 | 5-E20 |
| 69 42 023 | 08A | 039 | 5-B16 |
| 69 42 031 | 08A | 039 | 5-B16 |
| 69 42 098 | 09 | 017 | 7-D18 |
| 69 42 114 | 09 | 017 | 7-D18 |
| 69 42 296 | 08A | 041 | 5-B18 |
| 69 42 304 | 08A | 041 | 5-B18 |
| 69 42 312 | 08A | 041 | 5-B18 |
| 69 42 320 | 08A | 041 | 5-B18 |
| 69 42 528 | 08A | 129 | 5-F10 |
| 69 42 528 | 08A | 185 | 5-H18 |
| 69 42 536 | 08A | 129 | 5-F10 |
| 69 42 536 | 08A | 185 | 5-H18 |
| 69 42 551 | 08A | 111 | 5-E16 |
| 69 42 569 | 08A | 111 | 5-E16 |
| 69 42 619 | 09 | 017 | 7-D18 |
| 69 42 627 | 08A | 143 | 5-F24 |
| 69 42 627 | 08A | 149 | 5-G06 |
| 69 42 825 | 08A | 143 | 5-F24 |
| 69 42 833 | 08A | 143 | 5-F24 |
| 69 42 841 | 08A | 143 | 5-F24 |
| 69 42 858 | 08A | 143 | 5-F24 |
| 69 42 866 | 08A | 147 | 5-G04 |
| 69 42 874 | 08A | 147 | 5-G04 |
| 69 42 882 | 08A | 147 | 5-G04 |
| 69 42 890 | 08A | 147 | 5-G04 |
| 69 42 940 | 08A | 143 | 5-F24 |
| 69 42 957 | 08A | 143 | 5-F24 |
| 69 43 690 | 08A | 149 | 5-G06 |
| 69 43 716 | 08A | 057 | 5-C10 |
| 69 43 740 | 08A | 009 | 5-A10 |
| 69 43 880 | 08A | 185 | 5-H18 |
| 69 43 898 | 08A | 185 | 5-H18 |
| 69 43 906 | 08A | 143 | 5-F24 |
| 69 43 914 | 08A | 147 | 5-G04 |
| 69 43 948 | 08A | 147 | 5-G04 |
| 69 43 989 | 08A | 083 | 5-D12 |
| 69 43 989 | 08A | 173 | 5-H06 |
| 69 43 997 | 08A | 147 | 5-G04 |
| 69 44 003 | 08A | 147 | 5-G04 |
| 69 44 011 | 08A | 147 | 5-G04 |
| 69 44 029 | 08A | 147 | 5-G04 |
| 69 44 110 | 09 | 007 | 7-D08 |
| 69 44 128 | 09 | 007 | 7-D08 |
| 69 44 268 | 08A | 143 | 5-F24 |
| 69 44 268 | 08A | 149 | 5-G06 |
| 69 44 284 | 08A | 013 | 5-A14 |
| 69 44 359 | 08A | 087 | 5-D16 |
| 69 44 367 | 08A | 047 | 5-B24 |
| 69 44 375 | 08A | 047 | 5-B24 |
| 69 44 383 | 08A | 047 | 5-B24 |
| 69 44 391 | 08A | 047 | 5-B24 |
| 69 44 847 | 08A | 083 | 5-D12 |
| 69 45 075 | 08A | 011 | 5-A12 |
| 69 45 109 | 08A | 005 | 5-A06 |
| 69 45 141 | 08A | 009 | 5-A10 |
| 69 45 174 | 08A | 005 | 5-A06 |
| 69 45 422 | 08A | 005 | 5-A06 |
| 69 45 455 | 08A | 011 | 5-A12 |
| 69 45 463 | 08A | 099 | 5-E04 |
| 69 45 521 | 08A | 057 | 5-C10 |
| 69 47 436 | 08A | 099 | 5-E04 |
| 69 47 444 | 08A | 099 | 5-E04 |
| 69 47 451 | 08A | 099 | 5-E04 |
| 69 47 469 | 08A | 099 | 5-E04 |
| 69 47 485 | 09 | 007 | 7-D08 |
| 69 47 857 | 08A | 095 | 5-D24 |
| 69 48 780 | 08A | 095 | 5-D24 |
| 69 48 798 | 08A | 095 | 5-D24 |
| 69 50 026 | 08A | 029 | 5-B06 |
| 69 50 034 | 08A | 029 | 5-B06 |
| 69 50 042 | 08A | 031 | 5-B08 |
| 69 50 125 | 08A | 029 | 5-B06 |
| 69 50 133 | 08A | 029 | 5-B06 |
| 69 50 141 | 08A | 031 | 5-B08 |
| 69 50 158 | 08A | 035 | 5-B12 |
| 69 50 166 | 08A | 031 | 5-B08 |
| 69 50 190 | 08A | 025 | 5-B02 |
| 69 50 208 | 08A | 135 | 5-F16 |
| 69 50 216 | 08A | 135 | 5-F16 |
| 69 50 315 | 08A | 119 | 5-E24 |
| 69 50 323 | 08A | 119 | 5-E24 |
| 69 50 380 | 08A | 119 | 5-E24 |
| 69 50 398 | 08A | 119 | 5-E24 |
| 69 50 406 | 08A | 135 | 5-F16 |
| 69 50 414 | 08A | 135 | 5-F16 |
| 69 50 448 | 08A | 135 | 5-F16 |
| 69 50 455 | 08A | 135 | 5-F16 |
| 69 50 463 | 08A | 031 | 5-B08 |
| 69 50 489 | 08A | 029 | 5-B06 |
| 69 50 497 | 08A | 029 | 5-B06 |
| 69 50 505 | 08A | 035 | 5-B12 |
| 69 50 513 | 08A | 035 | 5-B12 |
| 69 50 521 | 08A | 031 | 5-B08 |
| 69 50 539 | 08A | 035 | 5-B12 |
| 69 50 547 | 08A | 035 | 5-B12 |
| 69 50 570 | 08A | 025 | 5-B02 |
| 69 50 588 | 08A | 035 | 5-B12 |
| 69 50 596 | 08A | 035 | 5-B12 |
| 69 50 604 | 08A | 031 | 5-B08 |
| 69 50 612 | 08A | 035 | 5-B12 |
| 69 50 620 | 08A | 035 | 5-B12 |
| 69 50 638 | 08A | 029 | 5-B06 |
| 69 50 646 | 08A | 029 | 5-B06 |
| 69 50 653 | 08A | 031 | 5-B08 |
| 69 50 661 | 08A | 031 | 5-B08 |
| 69 50 679 | 08A | 029 | 5-B06 |
| 69 50 687 | 08A | 031 | 5-B08 |
| 69 50 711 | 08A | 121 | 5-F02 |
| 69 50 729 | 08A | 121 | 5-F02 |
| 69 51 008 | 08A | 025 | 5-B02 |
| 69 51 016 | 08A | 025 | 5-B02 |
| 69 51 032 | 08A | 025 | 5-B02 |
| 69 51 040 | 08A | 025 | 5-B02 |
| 69 51 065 | 08A | 025 | 5-B02 |
| 69 51 081 | 08A | 025 | 5-B02 |
| 69 51 099 | 08A | 025 | 5-B02 |
| 69 51 107 | 08A | 031 | 5-B08 |
| 69 51 115 | 08A | 035 | 5-B12 |
| 69 51 156 | 08A | 037 | 5-B14 |
| 69 51 164 | 08A | 037 | 5-B14 |
| 69 51 172 | 08A | 037 | 5-B14 |
| 69 51 180 | 08A | 037 | 5-B14 |
| 69 51 198 | 08A | 025 | 5-B02 |
| 69 51 206 | 08A | 037 | 5-B14 |
| 69 51 248 | 08A | 123 | 5-F04 |
| 69 51 255 | 08A | 123 | 5-F04 |
| 69 51 263 | 08A | 031 | 5-B08 |
| 69 51 271 | 08A | 033 | 5-B10 |
| 69 51 289 | 08A | 121 | 5-F02 |
| 69 51 297 | 08A | 121 | 5-F02 |
| 69 51 305 | 08A | 029 | 5-B06 |
| 69 51 313 | 08A | 029 | 5-B06 |
| 69 51 321 | 08A | 029 | 5-B06 |
| 69 51 339 | 08A | 135 | 5-F16 |
| 69 51 347 | 08A | 135 | 5-F16 |
| 69 51 354 | 08A | 135 | 5-F16 |
| 69 51 362 | 08A | 135 | 5-F16 |
| 69 51 370 | 08A | 135 | 5-F16 |
| 69 51 388 | 08A | 135 | 5-F16 |
| 69 51 396 | 08A | 135 | 5-F16 |
| 69 51 594 | 03A | 073 | 2-D02 |
| 69 51 651 | 08A | 025 | 5-B02 |
| 69 51 669 | 08A | 025 | 5-B02 |
| 69 51 693 | 08A | 027 | 5-B04 |
| 69 51 701 | 08A | 027 | 5-B04 |
| 69 51 719 | 08A | 025 | 5-B02 |
| 69 51 727 | 08A | 025 | 5-B02 |
| 69 51 750 | 08A | 025 | 5-B02 |
| 69 51 784 | 08A | 135 | 5-F16 |
| 69 51 792 | 08A | 025 | 5-B02 |
| 69 51 800 | 08A | 025 | 5-B02 |
| 69 51 818 | 08A | 025 | 5-B02 |
| 69 51 826 | 08A | 025 | 5-B02 |
| 69 51 917 | 08A | 025 | 5-B02 |
| 69 51 958 | 08A | 025 | 5-B02 |
| 69 52 006 | 08A | 035 | 5-B12 |
| 69 52 014 | 08A | 035 | 5-B12 |
| 69 52 022 | 08A | 029 | 5-B06 |
| 69 52 022 | 08A | 035 | 5-B12 |
| 69 52 030 | 08A | 035 | 5-B12 |
| 69 52 048 | 08A | 035 | 5-B12 |
| 69 52 063 | 08A | 035 | 5-B12 |
| 69 52 071 | 08A | 029 | 5-B06 |
| 69 52 071 | 08A | 035 | 5-B12 |
| 69 52 089 | 08A | 035 | 5-B12 |
| 69 52 097 | 08A | 035 | 5-B12 |
| 69 52 105 | 08A | 035 | 5-B12 |
| 69 52 113 | 08A | 035 | 5-B12 |
| 69 52 121 | 08A | 031 | 5-B08 |
| 69 52 139 | 08A | 031 | 5-B08 |
| 69 52 147 | 08A | 031 | 5-B08 |
| 69 52 154 | 08A | 031 | 5-B08 |
| 69 52 162 | 08A | 031 | 5-B08 |
| 69 52 170 | 08A | 031 | 5-B08 |
| 69 52 188 | 08A | 031 | 5-B08 |
| 69 52 196 | 08A | 031 | 5-B08 |
| 69 52 204 | 08A | 031 | 5-B08 |
| 69 52 212 | 08A | 031 | 5-B08 |
| 69 52 220 | 08A | 031 | 5-B08 |
| 69 52 238 | 08A | 031 | 5-B08 |
| 69 52 246 | 08A | 031 | 5-B08 |
| 69 52 246 | 08A | 033 | 5-B10 |
| 69 52 253 | 08A | 031 | 5-B08 |
| 69 52 253 | 08A | 033 | 5-B10 |
| 69 52 261 | 08A | 031 | 5-B08 |
| 69 52 279 | 08A | 031 | 5-B08 |
| 69 52 287 | 08A | 031 | 5-B08 |
| 69 52 287 | 08A | 033 | 5-B10 |
| 69 52 295 | 08A | 031 | 5-B08 |
| 69 52 295 | 08A | 033 | 5-B10 |
| 69 52 329 | 08A | 031 | 5-B08 |
| 69 52 345 | 08A | 029 | 5-B06 |
| 69 52 352 | 08A | 029 | 5-B06 |
| 69 52 360 | 08A | 029 | 5-B06 |
| 69 52 378 | 08A | 029 | 5-B06 |



# 7-E06 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 69 52 386 | 08A | 029 | 5-B06 |
| 69 52 394 | 08A | 029 | 5-B06 |
| 69 52 402 | 08A | 029 | 5-B06 |
| 69 52 410 | 08A | 029 | 5-B06 |
| 69 52 428 | 08A | 029 | 5-B06 |
| 69 52 436 | 08A | 029 | 5-B06 |
| 69 52 444 | 08A | 029 | 5-B06 |
| 69 52 451 | 08A | 025 | 5-B02 |
| 69 52 543 | 08A | 031 | 5-B08 |
| 69 52 550 | 08A | 025 | 5-B02 |
| 69 52 576 | 08A | 025 | 5-B02 |
| 69 52 592 | 08A | 025 | 5-B02 |
| 69 52 618 | 08A | 031 | 5-B08 |
| 69 52 634 | 08A | 025 | 5-B02 |
| 69 52 642 | 08A | 135 | 5-F16 |
| 69 52 659 | 08A | 135 | 5-F16 |
| 69 52 683 | 08A | 121 | 5-F02 |
| 69 52 691 | 08A | 121 | 5-F02 |
| 69 52 717 | 08A | 025 | 5-B02 |
| 69 52 717 | 08A | 029 | 5-B06 |
| 69 52 717 | 08A | 031 | 5-B08 |
| 69 52 717 | 08A | 035 | 5-B12 |
| 69 52 733 | 08A | 031 | 5-B08 |
| 69 52 758 | 08A | 031 | 5-B08 |
| 69 52 774 | 08A | 037 | 5-B14 |
| 69 52 782 | 08A | 037 | 5-B14 |
| 69 52 790 | 08A | 037 | 5-B14 |
| 69 52 808 | 08A | 037 | 5-B14 |
| 69 52 824 | 08A | 031 | 5-B08 |
| 69 52 832 | 08A | 031 | 5-B08 |
| 69 52 857 | 08A | 037 | 5-B14 |
| 69 52 899 | 08A | 135 | 5-F16 |
| 69 52 907 | 08A | 135 | 5-F16 |
| 69 52 949 | 08A | 025 | 5-B02 |
| 69 52 956 | 08A | 025 | 5-B02 |
| 69 53 103 | 08A | 029 | 5-B06 |
| 69 53 285 | 08A | 031 | 5-B08 |
| 69 53 293 | 08A | 031 | 5-B08 |
| 69 53 517 | 08A | 029 | 5-B06 |
| 69 53 780 | 08A | 025 | 5-B02 |
| 69 53 798 | 08A | 025 | 5-B02 |
| 69 53 822 | 08A | 027 | 5-B04 |
| 69 53 905 | 08A | 037 | 5-B14 |
| 69 53 913 | 08A | 037 | 5-B14 |
| 69 53 921 | 08A | 031 | 5-B08 |
| 69 54 218 | 08A | 075 | 5-D04 |
| 69 56 585 | 08A | 117 | 5-E22 |
| 69 56 585 | 08A | 127 | 5-F08 |
| 69 57 435 | 08A | 011 | 5-A12 |
| 69 57 443 | 08A | 013 | 5-A14 |
| 69 58 151 | 09 | 017 | 7-D18 |
| 69 58 169 | 09 | 017 | 7-D18 |
| 69 58 177 | 09 | 017 | 7-D18 |
| 69 58 185 | 09 | 017 | 7-D18 |
| 69 58 193 | 09 | 017 | 7-D18 |
| 69 58 201 | 09 | 017 | 7-D18 |
| 69 58 219 | 09 | 017 | 7-D18 |
| 69 59 142 | 08A | 111 | 5-E16 |
| 69 59 142 | 08A | 143 | 5-F24 |
| 69 59 142 | 08A | 147 | 5-G04 |
| 69 60 272 | 08A | 093 | 5-D22 |
| 69 75 015 | 08A | 021 | 5-A22 |
| 69 75 031 | 08A | 017 | 5-A18 |
| 69 75 031 | 08A | 021 | 5-A22 |
| 69 75 064 | 08A | 017 | 5-A18 |
| 69 95 013 | 08A | 067 | 5-C20 |
| 69 95 021 | 08A | 067 | 5-C20 |
| 69 95 211 | 08A | 103 | 5-E08 |
| 69 95 229 | 08A | 103 | 5-E08 |
| 69 95 237 | 08A | 103 | 5-E08 |
| 69 95 252 | 08A | 027 | 5-B04 |
| 69 95 260 | 08A | 027 | 5-B04 |
| 69 95 278 | 08A | 027 | 5-B04 |
| 69 95 377 | 08A | 103 | 5-E08 |
| 69 95 435 | 08A | 049 | 5-C02 |
| 69 95 484 | 08A | 101 | 5-E06 |
| 69 96 979 | 08A | 031 | 5-B08 |
| 69 97 068 | 08A | 123 | 5-F04 |
| 69 97 134 | 08A | 077 | 5-D06 |
| 69 97 142 | 08A | 077 | 5-D06 |
| 69 97 183 | 03A | 047 | 2-B24 |
| 69 97 209 | 08A | 025 | 5-B02 |
| 69 97 431 | 08A | 049 | 5-C02 |
| 69 97 449 | 08A | 049 | 5-C02 |
| 69 97 472 | 08B | 221 | 6-J06 |
| 69 97 480 | 08B | 221 | 6-J06 |
| 69 97 514 | 08A | 049 | 5-C02 |
| 69 97 522 | 08A | 049 | 5-C02 |
| 69 97 548 | 08A | 049 | 5-C02 |
| 69 97 563 | 08A | 049 | 5-C02 |
| 69 97 571 | 08A | 065 | 5-C18 |
| 69 97 589 | 08A | 065 | 5-C18 |
| 69 97 639 | 08A | 025 | 5-B02 |
| 69 97 639 | 08A | 029 | 5-B06 |
| 69 97 639 | 08A | 031 | 5-B08 |
| 69 97 639 | 08A | 035 | 5-B12 |
| 69 97 738 | 08A | 027 | 5-B04 |
| 69 97 746 | 08A | 027 | 5-B04 |
| 69 97 894 | 08A | 135 | 5-F16 |
| 69 97 910 | 08A | 119 | 5-E24 |
| 69 97 910 | 08A | 161 | 5-G18 |
| 69 98 017 | 08A | 123 | 5-F04 |
| 69 98 025 | 08A | 121 | 5-F02 |
| 69 98 058 | 08A | 119 | 5-E24 |
| 69 98 074 | 08A | 119 | 5-E24 |
| 69 98 074 | 08A | 161 | 5-G18 |
| 69 98 082 | 08A | 119 | 5-E24 |
| 69 98 082 | 08A | 161 | 5-G18 |
| 69 98 090 | 08A | 119 | 5-E24 |
| 69 98 090 | 08A | 161 | 5-G18 |
| 69 98 090 | 08A | 163 | 5-G20 |
| 69 98 108 | 08A | 161 | 5-G18 |
| 69 98 116 | 08A | 163 | 5-G20 |
| 69 98 124 | 08A | 121 | 5-F02 |
| 69 98 249 | 08A | 119 | 5-E24 |
| 69 98 314 | 08A | 121 | 5-F02 |
| 69 98 330 | 08A | 121 | 5-F02 |
| 69 98 348 | 08A | 121 | 5-F02 |
| 69 98 421 | 08A | 121 | 5-F02 |
| 69 98 553 | 08A | 121 | 5-F02 |
| 69 98 595 | 08A | 119 | 5-E24 |
| 69 98 595 | 08A | 161 | 5-G18 |
| 69 98 603 | 08A | 119 | 5-E24 |
| 69 98 603 | 08A | 161 | 5-G18 |
| 69 98 645 | 08A | 121 | 5-F02 |
| 69 98 652 | 08A | 121 | 5-F02 |
| 69 98 694 | 08A | 049 | 5-C02 |
| 69 98 702 | 08A | 049 | 5-C02 |
| 69 98 744 | 08A | 119 | 5-E24 |
| 69 98 751 | 08A | 119 | 5-E24 |
| 69 98 868 | 08A | 123 | 5-F04 |
| 69 99 551 | 08A | 065 | 5-C18 |
| 69 99 569 | 08A | 065 | 5-C18 |
| 69 99 817 | 08A | 123 | 5-F04 |
| 69 99 981 | 08A | 035 | 5-B12 |
| 70 35 801 | 02 | 179 | 1-H12 |
| 70 35 801 | 08A | 005 | 5-A06 |
| 70 35 801 | 08A | 063 | 5-C16 |
| 70 35 801 | 08A | 069 | 5-C22 |
| 70 35 801 | 08A | 083 | 5-D12 |
| 70 37 492 | 09 | 005 | 7-D06 |
| 70 38 342 | 03A | 127 | 2-F08 |
| 70 38 342 | 08A | 043 | 5-B20 |
| 70 38 342 | 08A | 049 | 5-C02 |
| 70 38 342 | 08A | 055 | 5-C08 |
| 70 38 342 | 08A | 063 | 5-C16 |
| 70 38 342 | 08A | 065 | 5-C18 |
| 70 38 342 | 08A | 067 | 5-C20 |
| 70 38 342 | 08A | 071 | 5-C24 |
| 70 45 776 | 08A | 145 | 5-G02 |
| 70 45 776 | 08B | 213 | 6-I22 |
| 70 48 465 | 04 | 077 | 3-K06 |
| 70 48 473 | 04 | 077 | 3-K06 |
| 70 60 999 | 02 | 157 | 1-H14 |
| 70 60 999 | 08A | 071 | 5-C24 |
| 70 60 999 | 08C | 037 | 7-B14 |
| 70 60 999 | 08C | 041 | 7-B18 |
| 70 60 999 | 08C | 045 | 7-B22 |
| 70 61 328 | 04 | 013 | 3-H14 |
| 70 61 328 | 04 | 019 | 3-H20 |
| 70 61 328 | 04 | 049 | 3-J02 |
| 70 61 328 | 04 | 059 | 3-J12 |
| 70 61 328 | 05 | 019 | 4-A20 |
| 70 61 328 | 08A | 087 | 5-D16 |
| 70 61 328 | 08C | 017 | 7-A18 |
| 70 61 328 | 08C | 041 | 7-B18 |
| 70 70 626 | 06 | 005 | 4-C06 |
| 70 70 642 | 06 | 005 | 4-C06 |
| 70 70 667 | 06 | 005 | 4-C06 |
| 70 71 061 | 06 | 005 | 4-C06 |
| 70 71 079 | 06 | 005 | 4-C06 |
| 70 71 087 | 06 | 005 | 4-C06 |
| 70 71 939 | 06 | 005 | 4-C06 |
| 70 84 197 | 03A | 041 | 2-B18 |
| 70 84 197 | 03A | 045 | 2-B22 |
| 70 84 197 | 03A | 049 | 2-C02 |
| 70 85 541 | 03A | 061 | 2-C14 |
| 70 85 541 | 08A | 179 | 5-H12 |
| 70 85 541 | 08A | 181 | 5-H14 |
| 70 85 541 | 08A | 183 | 5-H16 |
| 70 88 073 | 03A | 043 | 2-B20 |
| 70 88 073 | 08A | 071 | 5-C24 |
| 70 88 073 | 08A | 089 | 5-D18 |
| 70 88 073 | 08A | 117 | 5-E22 |
| 70 88 073 | 08A | 127 | 5-F08 |
| 70 88 073 | 08B | 123 | 6-F04 |
| 70 88 073 | 08B | 129 | 6-F10 |
| 70 88 073 | 08B | 133 | 6-F14 |
| 70 88 073 | 08B | 137 | 6-F18 |
| 71 08 491 | 03A | 125 | 2-F06 |
| 71 08 491 | 08A | 021 | 5-A22 |
| 71 08 491 | 08A | 173 | 5-H06 |
| 71 08 491 | 08A | 175 | 5-H08 |
| 71 08 491 | 08A | 177 | 5-H10 |
| 71 08 491 | 08A | 179 | 5-H12 |
| 71 08 491 | 08A | 181 | 5-H14 |
| 71 08 491 | 08A | 183 | 5-H16 |
| 71 13 970 | 03A | 005 | 2-A06 |
| 71 16 452 | 03A | 133 | 2-F14 |
| 71 16 452 | 08A | 011 | 5-A12 |
| 71 16 452 | 08A | 049 | 5-C02 |
| 71 17 880 | 03B | 105 | 3-E10 |
| 71 17 880 | 03B | 115 | 3-E20 |
| 71 17 880 | 03B | 127 | 3-F08 |
| 71 17 880 | 03B | 139 | 3-F20 |
| 71 21 209 | 03A | 129 | 2-F10 |
| 71 52 796 | 08A | 067 | 5-C20 |
| 71 52 796 | 08A | 071 | 5-C24 |
| 71 53 695 | 08A | 081 | 5-D10 |
| 71 54 719 | 03A | 037 | 2-B14 |
| 71 54 719 | 03A | 039 | 2-B16 |
| 71 54 719 | 03A | 041 | 2-B18 |
| 71 54 719 | 03A | 045 | 2-B22 |
| 71 54 727 | 03A | 037 | 2-B14 |
| 71 54 727 | 03A | 041 | 2-B18 |
| 71 54 727 | 03A | 045 | 2-B22 |
| 71 54 727 | 03A | 049 | 2-C02 |
| 71 55 021 | 03B | 013 | 3-A14 |
| 71 55 021 | 03B | 039 | 3-B16 |
| 71 55 021 | 03B | 061 | 3-C14 |
| 71 55 021 | 03B | 085 | 3-D14 |
| 71 55 039 | 03B | 009 | 3-A10 |
| 71 55 039 | 03B | 035 | 3-B12 |
| 71 55 039 | 03B | 057 | 3-C10 |
| 71 55 039 | 03B | 081 | 3-D10 |
| 71 55 039 | 03B | 105 | 3-E10 |
| 71 55 039 | 03B | 115 | 3-E20 |
| 71 55 039 | 03B | 127 | 3-F08 |
| 71 55 039 | 03B | 139 | 3-F20 |
| 71 55 047 | 03B | 111 | 3-E16 |
| 71 55 047 | 03B | 121 | 3-F02 |
| 71 55 047 | 03B | 133 | 3-F14 |
| 71 55 047 | 03B | 145 | 3-G02 |
| 71 55 062 | 03B | 013 | 3-A14 |
| 71 55 062 | 03B | 039 | 3-B16 |
| 71 55 062 | 03B | 041 | 3-B18 |
| 71 55 062 | 03B | 061 | 3-C14 |
| 71 55 062 | 03B | 063 | 3-C16 |
| 71 55 062 | 03B | 085 | 3-D14 |
| 71 55 062 | 03B | 087 | 3-D16 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

# 7-E07 *Numerical register* *Nummerregister*

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 71 55 062 | 03B | 111 | 3-E16 |
| 71 55 062 | 03B | 121 | 3-F02 |
| 71 55 062 | 03B | 133 | 3-F14 |
| 71 55 062 | 03B | 145 | 3-G02 |
| 71 55 096 | 03B | 007 | 3-A08 |
| 71 55 096 | 03B | 033 | 3-B10 |
| 71 55 096 | 03B | 055 | 3-C08 |
| 71 55 096 | 03B | 079 | 3-D08 |
| 71 55 096 | 08C | 053 | 7-C06 |
| 71 55 104 | 03B | 009 | 3-A10 |
| 71 55 104 | 03B | 035 | 3-B12 |
| 71 55 104 | 03B | 057 | 3-C10 |
| 71 55 104 | 03B | 081 | 3-D10 |
| 71 55 104 | 08C | 035 | 7-B12 |
| 71 55 112 | 03B | 005 | 3-A06 |
| 71 55 112 | 03B | 031 | 3-B08 |
| 71 55 112 | 03B | 053 | 3-C06 |
| 71 55 112 | 03B | 077 | 3-D06 |
| 71 55 120 | 03B | 005 | 3-A06 |
| 71 55 120 | 03B | 031 | 3-B08 |
| 71 55 120 | 03B | 053 | 3-C06 |
| 71 55 120 | 03B | 077 | 3-D06 |
| 71 55 146 | 03B | 113 | 3-E18 |
| 71 55 146 | 03B | 125 | 3-F06 |
| 71 55 146 | 03B | 137 | 3-F18 |
| 71 55 146 | 03B | 149 | 3-G06 |
| 71 55 153 | 03B | 005 | 3-A06 |
| 71 55 153 | 03B | 007 | 3-A08 |
| 71 55 153 | 03B | 031 | 3-B08 |
| 71 55 153 | 03B | 033 | 3-B10 |
| 71 55 153 | 03B | 053 | 3-C06 |
| 71 55 153 | 03B | 055 | 3-C08 |
| 71 55 153 | 03B | 077 | 3-D06 |
| 71 55 153 | 03B | 079 | 3-D08 |
| 71 55 153 | 03B | 107 | 3-E12 |
| 71 55 153 | 03B | 117 | 3-E22 |
| 71 55 153 | 03B | 129 | 3-F10 |
| 71 55 153 | 03B | 141 | 3-F22 |
| 71 55 203 | 03B | 113 | 3-E18 |
| 71 55 203 | 03B | 125 | 3-F06 |
| 71 55 203 | 03B | 137 | 3-F18 |
| 71 55 203 | 03B | 149 | 3-G06 |
| 71 55 211 | 03B | 105 | 3-E10 |
| 71 55 211 | 03B | 115 | 3-E20 |
| 71 55 211 | 03B | 127 | 3-F08 |
| 71 55 211 | 03B | 139 | 3-F20 |
| 71 55 229 | 03B | 105 | 3-E10 |
| 71 55 229 | 03B | 115 | 3-E20 |
| 71 55 229 | 03B | 127 | 3-F08 |
| 71 55 229 | 03B | 139 | 3-F20 |
| 71 55 237 | 03B | 105 | 3-E10 |
| 71 55 237 | 03B | 115 | 3-E20 |
| 71 55 237 | 03B | 127 | 3-F08 |
| 71 55 237 | 03B | 139 | 3-F20 |
| 71 55 500 | 02 | 157 | 1-H14 |
| 71 55 500 | 08C | 035 | 7-B12 |
| 71 55 500 | 08C | 037 | 7-B14 |
| 71 55 500 | 08C | 041 | 7-B18 |
| 71 55 500 | 08C | 045 | 7-B22 |
| 71 55 633 | 03B | 113 | 3-E18 |

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 71 55 633 | 03B | 125 | 3-F06 |
| 71 55 633 | 03B | 137 | 3-F18 |
| 71 55 633 | 03B | 149 | 3-G06 |
| 71 55 658 | 03B | 105 | 3-E10 |
| 71 55 658 | 03B | 115 | 3-E20 |
| 71 55 658 | 03B | 127 | 3-F08 |
| 71 55 658 | 03B | 139 | 3-F20 |
| 71 55 708 | 03A | 127 | 2-F08 |
| 71 55 708 | 08A | 009 | 5-A10 |
| 71 55 716 | 03B | 009 | 3-A10 |
| 71 55 716 | 03B | 035 | 3-B12 |
| 71 55 716 | 03B | 057 | 3-C10 |
| 71 55 716 | 03B | 081 | 3-D10 |
| 71 55 716 | 03B | 105 | 3-E10 |
| 71 55 716 | 03B | 115 | 3-E20 |
| 71 55 716 | 03B | 127 | 3-F08 |
| 71 55 716 | 03B | 139 | 3-F20 |
| 71 55 724 | 08C | 053 | 7-C06 |
| 71 56 409 | 03A | 059 | 2-C12 |
| 71 56 409 | 03A | 125 | 2-F06 |
| 71 56 409 | 08C | 035 | 7-B12 |
| 71 62 308 | 08A | 011 | 5-A12 |
| 71 62 308 | 08A | 083 | 5-D12 |
| 71 62 308 | 08A | 087 | 5-D16 |
| 71 62 308 | 08C | 007 | 7-A08 |
| 71 63 066 | 05 | 023 | 4-A24 |
| 71 63 066 | 08A | 011 | 5-A12 |
| 71 63 066 | 08A | 083 | 5-D12 |
| 71 63 074 | 08A | 045 | 5-B22 |
| 71 63 074 | 08A | 047 | 5-B24 |
| 71 63 074 | 08A | 051 | 5-C04 |
| 71 63 074 | 08A | 103 | 5-E08 |
| 71 63 074 | 08C | 023 | 7-A24 |
| 71 63 074 | 08C | 035 | 7-B12 |
| 71 63 074 | 08C | 037 | 7-B14 |
| 71 63 074 | 08C | 041 | 7-B18 |
| 71 63 074 | 08C | 045 | 7-B22 |
| 71 63 074 | 08C | 047 | 7-B24 |
| 71 63 074 | 08C | 051 | 7-C04 |
| 71 63 074 | 08C | 055 | 7-C08 |
| 71 63 603 | 06 | 005 | 4-C06 |
| 71 67 117 | 04 | 077 | 3-K06 |
| 71 75 433 | 06 | 005 | 4-C06 |
| 71 75 441 | 06 | 005 | 4-C06 |
| 71 80 607 | 05 | 025 | 4-B02 |
| 71 83 965 | 02 | 179 | 1-I12 |
| 71 83 973 | 02 | 179 | 1-I12 |
| 71 84 443 | 06 | 005 | 4-C06 |
| 71 96 710 | 03B | 105 | 3-E10 |
| 71 96 710 | 03B | 115 | 3-E20 |
| 71 96 710 | 03B | 127 | 3-F08 |
| 71 96 710 | 03B | 139 | 3-F20 |
| 72 86 271 | 03A | 063 | 2-C16 |
| 73 05 931 | 09 | 005 | 7-D06 |
| 73 09 370 | 03A | 125 | 2-F06 |
| 73 11 764 | 05 | 021 | 4-A22 |
| 73 11 764 | 08A | 057 | 5-C10 |
| 73 11 772 | 03A | 007 | 2-A08 |
| 73 11 772 | 03A | 009 | 2-A10 |
| 73 11 772 | 08A | 035 | 5-B12 |

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 73 11 772 | 08A | 121 | 5-F02 |
| 73 13 182 | 04 | 077 | 3-K06 |
| 73 13 232 | 04 | 007 | 3-H08 |
| 73 13 240 | 04 | 007 | 3-H08 |
| 73 13 240 | 04 | 077 | 3-K06 |
| 73 13 752 | 08A | 007 | 5-A08 |
| 73 26 093 | 03A | 125 | 2-F06 |
| 73 26 093 | 08A | 165 | 5-G22 |
| 73 26 093 | 08A | 167 | 5-G24 |
| 73 26 093 | 08A | 169 | 5-H02 |
| 73 26 093 | 08A | 173 | 5-H06 |
| 73 26 093 | 08A | 175 | 5-H08 |
| 73 26 093 | 08A | 177 | 5-H10 |
| 73 26 093 | 08A | 179 | 5-H12 |
| 73 26 093 | 08A | 181 | 5-H14 |
| 73 26 093 | 08A | 183 | 5-H16 |
| 73 37 330 | 06 | 005 | 4-C06 |
| 73 37 348 | 06 | 005 | 4-C06 |
| 73 40 839 | 08A | 115 | 5-E20 |
| 73 42 892 | 03B | 013 | 3-A14 |
| 73 42 892 | 03B | 039 | 3-B16 |
| 73 42 892 | 03B | 061 | 3-C14 |
| 73 42 892 | 03B | 085 | 3-D14 |
| 73 42 892 | 08C | 053 | 7-C06 |
| 73 42 900 | 03B | 013 | 3-A14 |
| 73 42 900 | 03B | 039 | 3-B16 |
| 73 42 900 | 03B | 061 | 3-C14 |
| 73 42 900 | 03B | 085 | 3-D14 |
| 73 42 900 | 08C | 055 | 7-C08 |
| 73 44 476 | 08A | 115 | 5-E20 |
| 73 46 232 | 08A | 025 | 5-B02 |
| 73 46 232 | 08B | 123 | 6-F04 |
| 73 46 232 | 08B | 129 | 6-F10 |
| 73 46 232 | 08B | 133 | 6-F14 |
| 73 46 232 | 08B | 137 | 6-F18 |
| 73 48 287 | 09 | 005 | 7-D06 |
| 73 74 218 | 08B | 121 | 6-F02 |
| 73 77 344 | 08B | 027 | 6-B04 |
| 73 92 772 | 03A | 125 | 2-F06 |
| 73 98 233 | 02 | 183 | 1-I16 |
| 73 98 282 | 08B | 167 | 6-G24 |
| 73 98 282 | 08B | 177 | 6-H10 |
| 73 98 340 | 08B | 221 | 6-J06 |
| 73 98 373 | 08C | 025 | 7-B02 |
| 73 98 373 | 08C | 029 | 7-B06 |
| 73 98 373 | 08C | 035 | 7-B12 |
| 73 98 373 | 08C | 037 | 7-B14 |
| 73 98 373 | 08C | 041 | 7-B18 |
| 73 98 373 | 08C | 045 | 7-B22 |
| 73 98 373 | 08C | 047 | 7-B24 |
| 73 98 373 | 08C | 051 | 7-C04 |
| 73 98 399 | 02 | 185 | 1-I18 |
| 73 98 423 | 03A | 039 | 2-B16 |
| 73 98 464 | 02 | 093 | 1-E22 |
| 73 98 530 | 08C | 025 | 7-B02 |
| 73 98 530 | 08C | 029 | 7-B06 |
| 73 98 530 | 08C | 035 | 7-B12 |
| 73 98 530 | 08C | 037 | 7-B14 |
| 73 98 530 | 08C | 041 | 7-B18 |
| 73 98 530 | 08C | 045 | 7-B22 |

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 73 98 530 | 08C | 047 | 7-B24 |
| 73 98 530 | 08C | 051 | 7-C04 |
| 73 98 746 | 04 | 007 | 3-H08 |
| 73 98 761 | 08A | 013 | 5-A14 |
| 73 98 860 | 08B | 217 | 6-J02 |
| 73 98 878 | 08A | 089 | 5-D18 |
| 73 98 993 | 08A | 025 | 5-B02 |
| 73 98 993 | 08A | 135 | 5-F16 |
| 73 99 165 | 08B | 221 | 6-J06 |
| 73 99 280 | 08C | 025 | 7-B02 |
| 73 99 280 | 08C | 037 | 7-B14 |
| 73 99 280 | 08C | 045 | 7-B22 |
| 73 99 280 | 08C | 047 | 7-B24 |
| 73 99 280 | 08C | 051 | 7-C04 |
| 73 99 363 | 04 | 025 | 3-I02 |
| 73 99 603 | 08C | 035 | 7-B12 |
| 73 99 637 | 08B | 221 | 6-J06 |
| 73 99 660 | 05 | 021 | 4-A22 |
| 73 99 678 | 08A | 057 | 5-C10 |
| 73 99 769 | 03A | 007 | 2-A08 |
| 73 99 769 | 03A | 009 | 2-A10 |
| 73 99 819 | 08A | 063 | 5-C16 |
| 73 99 819 | 08A | 067 | 5-C20 |
| 73 99 819 | 08A | 071 | 5-C24 |
| 73 99 835 | 08B | 189 | 6-H22 |
| 73 99 959 | 04 | 025 | 3-I02 |
| 74 78 159 | 03A | 117 | 2-E22 |
| 74 80 239 | 02 | 091 | 1-E20 |
| 74 80 429 | 02 | 017 | 1-B18 |
| 74 80 429 | 02 | 189 | 1-I22 |
| 74 80 437 | 02 | 017 | 1-B18 |
| 74 80 437 | 02 | 189 | 1-I22 |
| 74 80 445 | 02 | 017 | 1-B18 |
| 74 80 445 | 02 | 189 | 1-I22 |
| 74 80 452 | 02 | 017 | 1-B18 |
| 74 80 452 | 02 | 189 | 1-I22 |
| 74 80 460 | 02 | 017 | 1-B18 |
| 74 80 460 | 02 | 189 | 1-I22 |
| 74 80 585 | 03A | 019 | 2-A20 |
| 74 80 593 | 03A | 019 | 2-A20 |
| 74 80 601 | 03A | 019 | 2-A20 |
| 74 80 759 | 02 | 177 | 1-I10 |
| 74 80 916 | 02 | 119 | 1-F24 |
| 74 81 385 | 03A | 023 | 2-A24 |
| 74 81 393 | 03A | 025 | 2-B02 |
| 74 81 427 | 02 | 161 | 1-H18 |
| 74 82 409 | 02 | 113 | 1-F18 |
| 74 82 490 | 03A | 015 | 2-A16 |
| 74 82 953 | 02 | 161 | 1-H18 |
| 74 82 953 | 02 | 177 | 1-I10 |
| 74 83 464 | 02 | 121 | 1-G02 |
| 74 84 405 | 02 | 189 | 1-I22 |
| 74 84 439 | 03A | 023 | 2-A24 |
| 74 84 504 | 03A | 015 | 2-A16 |
| 74 84 512 | 03A | 015 | 2-A16 |
| 74 84 520 | 03A | 015 | 2-A16 |
| 74 84 546 | 03A | 015 | 2-A16 |
| 74 84 694 | 02 | 103 | 1-F08 |
| 74 84 702 | 02 | 103 | 1-F08 |
| 74 84 710 | 02 | 113 | 1-F18 |



# 7-E08 *Numerical register* *Nummerregister*

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 74 84 868 | 03A | 023 | 2-A24 |
| 74 84 876 | 03A | 023 | 2-A24 |
| 74 84 884 | 03A | 023 | 2-A24 |
| 74 84 892 | 03A | 023 | 2-A24 |
| 74 84 892 | 03A | 151 | 2-G08 |
| 74 84 983 | 02 | 025 | 1-C02 |
| 74 85 766 | 03A | 019 | 2-A20 |
| 74 85 774 | 03A | 019 | 2-A20 |
| 74 85 782 | 03A | 019 | 2-A20 |
| 74 85 899 | 02 | 107 | 1-F12 |
| 74 85 907 | 02 | 107 | 1-F12 |
| 74 85 915 | 02 | 113 | 1-F18 |
| 74 86 020 | 02 | 183 | 1-I10 |
| 74 86 038 | 02 | 183 | 1-I16 |
| 74 86 129 | 02 | 113 | 1-F18 |
| 74 86 780 | 02 | 015 | 1-B16 |
| 74 86 806 | 02 | 175 | 1-I08 |
| 74 86 814 | 03A | 015 | 2-A16 |
| 74 86 822 | 03A | 021 | 2-A22 |
| 74 86 822 | 03A | 149 | 2-G06 |
| 74 87 010 | 02 | 089 | 1-E18 |
| 74 87 028 | 02 | 089 | 1-E18 |
| 74 87 119 | 02 | 089 | 1-E18 |
| 74 87 135 | 02 | 089 | 1-E18 |
| 74 87 168 | 02 | 133 | 1-G14 |
| 74 87 259 | 02 | 113 | 1-F18 |
| 74 87 267 | 02 | 113 | 1-F18 |
| 74 87 275 | 02 | 113 | 1-F18 |
| 74 87 556 | 02 | 099 | 1-F04 |
| 74 87 556 | 02 | 101 | 1-F06 |
| 74 87 572 | 02 | 025 | 1-C02 |
| 74 87 705 | 02 | 113 | 1-F18 |
| 74 96 003 | 04 | 011 | 3-H12 |
| 74 96 003 | 04 | 015 | 3-H16 |
| 74 96 003 | 04 | 017 | 3-H18 |
| 74 96 003 | 04 | 023 | 3-H24 |
| 74 96 003 | 04 | 045 | 3-I22 |
| 74 96 003 | 04 | 085 | 3-K14 |
| 74 96 268 | 04 | 029 | 3-I06 |
| 74 96 268 | 04 | 035 | 3-I12 |
| 74 96 268 | 04 | 041 | 3-I18 |
| 74 96 268 | 04 | 043 | 3-I20 |
| 74 96 268 | 04 | 047 | 3-I24 |
| 74 96 276 | 04 | 029 | 3-I06 |
| 74 96 276 | 04 | 035 | 3-I12 |
| 74 96 276 | 04 | 041 | 3-I18 |
| 74 96 284 | 04 | 015 | 3-H16 |
| 74 96 284 | 04 | 023 | 3-H24 |
| 74 96 284 | 04 | 025 | 3-I02 |
| 74 96 284 | 04 | 043 | 3-I20 |
| 74 96 284 | 04 | 047 | 3-I24 |
| 74 96 284 | 04 | 061 | 3-J14 |
| 74 96 292 | 02 | 035 | 1-C12 |
| 74 97 001 | 08A | 155 | 5-G12 |
| 74 97 019 | 08A | 153 | 5-G10 |
| 74 97 019 | 08A | 157 | 5-G14 |
| 75 00 069 | 02 | 017 | 1-B18 |
| 75 00 069 | 02 | 189 | 1-I22 |
| 75 00 085 | 02 | 017 | 1-B18 |
| 75 00 127 | 02 | 027 | 1-C04 |

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 75 00 150 | 02 | 027 | 1-C04 |
| 75 00 390 | 02 | 177 | 1-I10 |
| 75 00 622 | 02 | 021 | 1-B22 |
| 75 00 697 | 02 | 027 | 1-C04 |
| 75 00 713 | 02 | 017 | 1-B18 |
| 75 00 739 | 02 | 035 | 1-C12 |
| 75 01 216 | 03A | 019 | 2-A20 |
| 75 01 216 | 03A | 023 | 2-A24 |
| 75 01 216 | 03A | 025 | 2-B02 |
| 75 01 224 | 03A | 019 | 2-A20 |
| 75 01 349 | 02 | 017 | 1-B18 |
| 75 01 570 | 03A | 019 | 2-A20 |
| 75 01 604 | 02 | 035 | 1-C12 |
| 75 01 612 | 02 | 103 | 1-F08 |
| 75 01 612 | 02 | 113 | 1-F18 |
| 75 01 943 | 02 | 173 | 1-I06 |
| 75 02 263 | 02 | 039 | 1-C16 |
| 75 02 297 | 02 | 195 | 1-J04 |
| 75 02 487 | 02 | 091 | 1-E20 |
| 75 02 800 | 02 | 117 | 1-F22 |
| 75 02 818 | 02 | 117 | 1-F22 |
| 75 02 958 | 02 | 041 | 1-C18 |
| 75 02 966 | 02 | 041 | 1-C18 |
| 75 02 974 | 02 | 041 | 1-C18 |
| 75 03 188 | 02 | 041 | 1-C18 |
| 75 03 469 | 02 | 019 | 1-B20 |
| 75 03 592 | 03A | 015 | 2-A16 |
| 75 03 600 | 03A | 015 | 2-A16 |
| 75 03 709 | 02 | 019 | 1-B20 |
| 75 03 758 | 02 | 055 | 1-D08 |
| 75 03 832 | 03A | 015 | 2-A16 |
| 75 04 004 | 02 | 133 | 1-G14 |
| 75 04 012 | 02 | 097 | 1-F02 |
| 75 04 012 | 02 | 131 | 1-G12 |
| 75 04 046 | 02 | 097 | 1-F02 |
| 75 04 046 | 02 | 131 | 1-G12 |
| 75 04 053 | 02 | 131 | 1-G12 |
| 75 04 111 | 02 | 055 | 1-D08 |
| 75 04 160 | 02 | 055 | 1-D08 |
| 75 04 210 | 02 | 131 | 1-G12 |
| 75 04 392 | 02 | 101 | 1-F06 |
| 75 04 483 | 03A | 013 | 2-A14 |
| 75 04 483 | 03A | 147 | 2-G04 |
| 75 04 491 | 03A | 013 | 2-A14 |
| 75 04 491 | 03A | 147 | 2-G04 |
| 75 04 509 | 03A | 013 | 2-A14 |
| 75 04 509 | 03A | 147 | 2-G04 |
| 75 04 517 | 03A | 013 | 2-A14 |
| 75 04 517 | 03A | 147 | 2-G04 |
| 75 04 525 | 03A | 015 | 2-A16 |
| 75 04 574 | 02 | 177 | 1-I10 |
| 75 04 624 | 02 | 177 | 1-I10 |
| 75 04 673 | 02 | 103 | 1-F08 |
| 75 04 673 | 02 | 107 | 1-F12 |
| 75 04 673 | 02 | 113 | 1-F18 |
| 75 04 756 | 02 | 177 | 1-I10 |
| 75 04 897 | 02 | 133 | 1-G14 |
| 75 05 134 | 02 | 017 | 1-B18 |
| 75 05 142 | 02 | 197 | 1-J06 |
| 75 05 217 | 02 | 015 | 1-B16 |

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 75 05 241 | 02 | 195 | 1-J04 |
| 75 05 258 | 02 | 039 | 1-C16 |
| 75 05 415 | 02 | 107 | 1-F12 |
| 75 05 423 | 02 | 103 | 1-F08 |
| 75 05 423 | 02 | 107 | 1-F12 |
| 75 05 423 | 02 | 113 | 1-F18 |
| 75 05 464 | 02 | 037 | 1-C14 |
| 75 05 464 | 02 | 193 | 1-J02 |
| 75 05 845 | 02 | 027 | 1-C04 |
| 75 05 878 | 02 | 039 | 1-C16 |
| 75 06 264 | 02 | 103 | 1-F08 |
| 75 06 264 | 02 | 107 | 1-F12 |
| 75 06 264 | 02 | 113 | 1-F18 |
| 75 06 272 | 03A | 007 | 2-A08 |
| 75 06 272 | 03A | 009 | 2-A10 |
| 75 06 322 | 02 | 099 | 1-F04 |
| 75 06 611 | 02 | 089 | 1-E18 |
| 75 06 645 | 02 | 171 | 1-I04 |
| 75 06 652 | 02 | 133 | 1-G14 |
| 75 06 793 | 03A | 015 | 2-A16 |
| 75 06 884 | 02 | 091 | 1-E20 |
| 75 06 934 | 02 | 179 | 1-I12 |
| 75 06 959 | 02 | 047 | 1-C24 |
| 75 07 072 | 02 | 103 | 1-F08 |
| 75 07 072 | 02 | 107 | 1-F12 |
| 75 07 072 | 02 | 113 | 1-F18 |
| 75 07 080 | 02 | 103 | 1-F08 |
| 75 07 080 | 02 | 107 | 1-F12 |
| 75 07 080 | 02 | 113 | 1-F18 |
| 75 07 098 | 02 | 103 | 1-F08 |
| 75 07 098 | 02 | 107 | 1-F12 |
| 75 07 106 | 02 | 103 | 1-F08 |
| 75 07 106 | 02 | 107 | 1-F12 |
| 75 07 155 | 02 | 027 | 1-C04 |
| 75 07 460 | 02 | 195 | 1-J04 |
| 75 07 700 | 02 | 039 | 1-C16 |
| 75 07 833 | 02 | 021 | 1-B22 |
| 75 07 973 | 02 | 101 | 1-F06 |
| 75 07 973 | 02 | 131 | 1-G12 |
| 75 07 973 | 02 | 133 | 1-G14 |
| 75 08 203 | 02 | 041 | 1-C18 |
| 75 08 203 | 02 | 191 | 1-I24 |
| 75 08 328 | 02 | 037 | 1-C14 |
| 75 08 385 | 02 | 133 | 1-G14 |
| 75 08 468 | 02 | 017 | 1-B18 |
| 75 08 476 | 02 | 017 | 1-B18 |
| 75 08 583 | 02 | 121 | 1-G02 |
| 75 08 690 | 02 | 027 | 1-C04 |
| 75 08 732 | 02 | 041 | 1-C18 |
| 75 08 732 | 02 | 191 | 1-I24 |
| 75 09 128 | 02 | 043 | 1-C20 |
| 75 09 128 | 02 | 191 | 1-I24 |
| 75 09 136 | 02 | 041 | 1-C18 |
| 75 09 136 | 02 | 191 | 1-I24 |
| 75 09 367 | 02 | 025 | 1-C02 |
| 75 09 375 | 02 | 025 | 1-C02 |
| 75 09 862 | 02 | 089 | 1-E18 |
| 75 09 953 | 02 | 183 | 1-I16 |
| 75 10 001 | 04 | 057 | 3-J10 |
| 75 10 076 | 02 | 059 | 1-D12 |

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 75 10 241 | 04 | 013 | 3-H14 |
| 75 10 241 | 04 | 021 | 3-H22 |
| 75 10 241 | 04 | 059 | 3-J12 |
| 75 10 266 | 02 | 185 | 1-I18 |
| 75 10 423 | 04 | 071 | 3-J24 |
| 75 10 431 | 04 | 071 | 3-J24 |
| 75 10 548 | 03A | 013 | 2-A14 |
| 75 10 548 | 03A | 147 | 2-G04 |
| 75 11 082 | 02 | 079 | 1-E08 |
| 75 11 157 | 03A | 013 | 2-A14 |
| 75 11 157 | 03A | 147 | 2-G04 |
| 75 11 165 | 03A | 013 | 2-A14 |
| 75 11 256 | 02 | 059 | 1-D12 |
| 75 11 256 | 02 | 063 | 1-D16 |
| 75 11 256 | 04 | 073 | 3-K02 |
| 75 11 371 | 04 | 069 | 3-J22 |
| 75 11 413 | 02 | 083 | 1-E12 |
| 75 11 421 | 02 | 083 | 1-E12 |
| 75 11 470 | 04 | 071 | 3-J24 |
| 75 11 470 | 04 | 085 | 3-K14 |
| 75 11 488 | 02 | 083 | 1-E12 |
| 75 11 553 | 04 | 073 | 3-K02 |
| 75 11 561 | 04 | 073 | 3-K02 |
| 75 11 645 | 02 | 149 | 1-H06 |
| 75 11 645 | 02 | 151 | 1-H08 |
| 75 11 686 | 02 | 089 | 1-E18 |
| 75 11 694 | 02 | 089 | 1-E18 |
| 75 11 702 | 02 | 091 | 1-E20 |
| 75 11 728 | 03A | 007 | 2-A08 |
| 75 11 728 | 03A | 009 | 2-A10 |
| 75 11 751 | 02 | 057 | 1-D10 |
| 75 11 793 | 02 | 063 | 1-D16 |
| 75 11 884 | 04 | 065 | 3-J18 |
| 75 11 975 | 02 | 019 | 1-B20 |
| 75 12 015 | 02 | 019 | 1-B20 |
| 75 12 015 | 03A | 131 | 2-F12 |
| 75 12 106 | 03A | 007 | 2-A08 |
| 75 12 106 | 03A | 009 | 2-A10 |
| 75 12 247 | 06 | 021 | 4-C22 |
| 75 12 247 | 08C | 021 | 7-A22 |
| 75 12 247 | 08C | 035 | 7-B12 |
| 75 12 247 | 08C | 045 | 7-B22 |
| 75 12 247 | 08C | 051 | 7-C04 |
| 75 12 254 | 02 | 149 | 1-H06 |
| 75 12 254 | 02 | 151 | 1-H08 |
| 75 12 320 | 02 | 057 | 1-D10 |
| 75 12 346 | 02 | 049 | 1-D02 |
| 75 12 346 | 02 | 099 | 1-F04 |
| 75 12 593 | 02 | 171 | 1-I04 |
| 75 12 676 | 02 | 171 | 1-I04 |
| 75 12 718 | 02 | 171 | 1-I04 |
| 75 12 742 | 02 | 171 | 1-I04 |
| 75 12 775 | 02 | 171 | 1-I04 |
| 75 12 791 | 02 | 053 | 1-D06 |
| 75 12 817 | 02 | 153 | 1-H10 |
| 75 12 817 | 02 | 161 | 1-H18 |
| 75 12 890 | 02 | 049 | 1-D02 |
| 75 12 916 | 02 | 051 | 1-D04 |
| 75 12 957 | 02 | 053 | 1-D06 |
| 75 12 973 | 02 | 053 | 1-D06 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 75 12 999 | 02 | 049 | 1-D02 |
| 75 13 054 | 02 | 161 | 1-H18 |
| 75 13 070 | 02 | 171 | 1-I04 |
| 75 13 096 | 02 | 171 | 1-I04 |
| 75 13 112 | 02 | 171 | 1-I04 |
| 75 13 435 | 02 | 155 | 1-H12 |
| 75 13 435 | 02 | 161 | 1-H18 |
| 75 13 450 | 02 | 163 | 1-H20 |
| 75 13 450 | 02 | 195 | 1-J04 |
| 75 13 666 | 02 | 075 | 1-E04 |
| 75 13 674 | 02 | 181 | 1-I14 |
| 75 13 674 | 02 | 183 | 1-I16 |
| 75 13 682 | 02 | 181 | 1-I14 |
| 75 13 682 | 02 | 183 | 1-I16 |
| 75 13 716 | 02 | 153 | 1-H10 |
| 75 13 724 | 02 | 153 | 1-H10 |
| 75 13 815 | 02 | 107 | 1-F12 |
| 75 13 815 | 02 | 115 | 1-F20 |
| 75 13 815 | 08C | 039 | 7-B16 |
| 75 13 823 | 02 | 009 | 1-B10 |
| 75 13 872 | 02 | 061 | 1-D14 |
| 75 14 201 | 04 | 021 | 3-H22 |
| 75 14 201 | 04 | 059 | 3-J12 |
| 75 14 250 | 02 | 143 | 1-G24 |
| 75 14 375 | 02 | 099 | 1-F04 |
| 75 14 375 | 02 | 101 | 1-F06 |
| 75 14 383 | 02 | 101 | 1-F06 |
| 75 14 615 | 02 | 053 | 1-D06 |
| 75 14 722 | 02 | 053 | 1-D06 |
| 75 14 979 | 02 | 151 | 1-H08 |
| 75 15 190 | 02 | 015 | 1-B16 |
| 75 15 190 | 02 | 019 | 1-B20 |
| 75 15 190 | 02 | 189 | 1-I22 |
| 75 15 208 | 02 | 097 | 1-F02 |
| 75 15 208 | 02 | 099 | 1-F04 |
| 75 15 208 | 02 | 101 | 1-F06 |
| 75 15 547 | 02 | 017 | 1-B18 |
| 75 15 554 | 02 | 175 | 1-I08 |
| 75 15 588 | 02 | 197 | 1-J06 |
| 75 15 596 | 02 | 197 | 1-J06 |
| 75 15 802 | 02 | 041 | 1-C18 |
| 75 15 836 | 02 | 133 | 1-G14 |
| 75 15 885 | 02 | 101 | 1-F06 |
| 75 16 115 | 02 | 127 | 1-G08 |
| 75 16 255 | 02 | 021 | 1-B22 |
| 75 16 529 | 02 | 017 | 1-B18 |
| 75 16 537 | 02 | 175 | 1-I08 |
| 75 16 586 | 02 | 021 | 1-B22 |
| 75 16 792 | 02 | 119 | 1-F24 |
| 75 16 826 | 02 | 021 | 1-B22 |
| 75 16 834 | 02 | 021 | 1-B22 |
| 75 16 875 | 02 | 155 | 1-H12 |
| 75 16 875 | 02 | 177 | 1-I10 |
| 75 16 917 | 02 | 123 | 1-G04 |
| 75 16 974 | 02 | 103 | 1-F08 |
| 75 16 974 | 02 | 107 | 1-F12 |
| 75 16 974 | 02 | 113 | 1-F18 |
| 75 17 014 | 02 | 177 | 1-I10 |
| 75 17 048 | 02 | 015 | 1-B16 |
| 75 17 048 | 02 | 019 | 1-B20 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 75 17 089 | 02 | 183 | 1-I16 |
| 75 17 147 | 02 | 177 | 1-I10 |
| 75 17 345 | 02 | 195 | 1-J04 |
| 75 17 378 | 02 | 181 | 1-I14 |
| 75 17 378 | 02 | 183 | 1-I16 |
| 75 17 402 | 02 | 103 | 1-F08 |
| 75 17 402 | 02 | 107 | 1-F12 |
| 75 17 402 | 02 | 115 | 1-F20 |
| 75 17 477 | 02 | 185 | 1-I18 |
| 75 17 568 | 02 | 039 | 1-C16 |
| 75 17 733 | 02 | 119 | 1-F24 |
| 75 17 873 | 02 | 103 | 1-F08 |
| 75 17 907 | 02 | 041 | 1-C18 |
| 75 17 915 | 02 | 111 | 1-F16 |
| 75 17 923 | 02 | 119 | 1-F24 |
| 75 17 956 | 02 | 041 | 1-C18 |
| 75 17 980 | 02 | 103 | 1-F08 |
| 75 18 038 | 02 | 103 | 1-F08 |
| 75 18 285 | 02 | 089 | 1-E18 |
| 75 18 335 | 02 | 017 | 1-B18 |
| 75 18 343 | 02 | 015 | 1-B16 |
| 75 18 434 | 02 | 017 | 1-B18 |
| 75 18 442 | 02 | 017 | 1-B18 |
| 75 18 459 | 02 | 017 | 1-B18 |
| 75 18 467 | 02 | 017 | 1-B18 |
| 75 18 541 | 03A | 019 | 2-A20 |
| 75 18 632 | 02 | 027 | 1-C04 |
| 75 18 640 | 02 | 027 | 1-C04 |
| 75 18 848 | 02 | 025 | 1-C02 |
| 75 18 889 | 02 | 103 | 1-F08 |
| 75 18 889 | 02 | 107 | 1-F12 |
| 75 18 889 | 02 | 113 | 1-F18 |
| 75 18 897 | 02 | 107 | 1-F12 |
| 75 18 913 | 02 | 017 | 1-B18 |
| 75 18 970 | 02 | 039 | 1-C16 |
| 75 18 996 | 02 | 125 | 1-G06 |
| 75 18 996 | 02 | 127 | 1-G08 |
| 75 18 996 | 02 | 187 | 1-I20 |
| 75 18 996 | 02 | 189 | 1-I22 |
| 75 19 010 | 02 | 121 | 1-G02 |
| 75 19 010 | 02 | 123 | 1-G04 |
| 75 19 010 | 02 | 125 | 1-G06 |
| 75 19 085 | 03A | 023 | 2-A24 |
| 75 19 085 | 03A | 025 | 2-B02 |
| 75 19 101 | 03A | 025 | 2-B02 |
| 75 19 119 | 03A | 025 | 2-B02 |
| 75 19 127 | 03A | 025 | 2-B02 |
| 75 19 135 | 03A | 023 | 2-A24 |
| 75 19 135 | 03A | 025 | 2-B02 |
| 75 19 143 | 03A | 023 | 2-A24 |
| 75 19 143 | 03A | 025 | 2-B02 |
| 75 19 291 | 02 | 181 | 1-I14 |
| 75 19 291 | 02 | 183 | 1-I16 |
| 75 19 325 | 02 | 129 | 1-G10 |
| 75 19 358 | 02 | 025 | 1-C02 |
| 75 19 390 | 02 | 025 | 1-C02 |
| 75 19 416 | 02 | 099 | 1-F04 |
| 75 19 416 | 02 | 101 | 1-F06 |
| 75 19 432 | 02 | 181 | 1-I14 |
| 75 19 432 | 02 | 183 | 1-I16 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 75 19 481 | 02 | 039 | 1-C16 |
| 75 19 523 | 02 | 017 | 1-B18 |
| 75 19 531 | 02 | 155 | 1-H12 |
| 75 19 531 | 02 | 177 | 1-I10 |
| 75 19 572 | 02 | 043 | 1-C20 |
| 75 19 580 | 02 | 043 | 1-C20 |
| 75 20 067 | 02 | 047 | 1-C24 |
| 75 20 133 | 02 | 133 | 1-G14 |
| 75 20 141 | 02 | 133 | 1-G14 |
| 75 20 174 | 02 | 155 | 1-H12 |
| 75 20 190 | 02 | 181 | 1-I14 |
| 75 20 190 | 02 | 183 | 1-I16 |
| 75 20 208 | 02 | 181 | 1-I14 |
| 75 20 208 | 02 | 183 | 1-I16 |
| 75 20 216 | 02 | 181 | 1-I14 |
| 75 20 216 | 02 | 183 | 1-I16 |
| 75 20 240 | 02 | 019 | 1-B20 |
| 75 20 315 | 02 | 027 | 1-C04 |
| 75 20 349 | 02 | 179 | 1-I12 |
| 75 20 372 | 02 | 037 | 1-C14 |
| 75 20 380 | 02 | 019 | 1-B20 |
| 75 20 380 | 02 | 189 | 1-I22 |
| 75 20 513 | 02 | 031 | 1-C08 |
| 75 20 513 | 02 | 033 | 1-C10 |
| 75 20 521 | 02 | 031 | 1-C08 |
| 75 20 521 | 02 | 033 | 1-C10 |
| 75 20 539 | 02 | 031 | 1-C08 |
| 75 20 539 | 02 | 033 | 1-C10 |
| 75 20 612 | 02 | 029 | 1-C06 |
| 75 20 620 | 02 | 029 | 1-C06 |
| 75 20 638 | 02 | 029 | 1-C06 |
| 75 20 646 | 02 | 029 | 1-C06 |
| 75 20 653 | 02 | 029 | 1-C06 |
| 75 20 703 | 02 | 029 | 1-C06 |
| 75 20 711 | 02 | 031 | 1-C08 |
| 75 20 745 | 02 | 029 | 1-C06 |
| 75 20 752 | 02 | 029 | 1-C06 |
| 75 20 760 | 02 | 029 | 1-C06 |
| 75 20 802 | 02 | 029 | 1-C06 |
| 75 20 810 | 02 | 029 | 1-C06 |
| 75 20 828 | 02 | 029 | 1-C06 |
| 75 20 836 | 02 | 029 | 1-C06 |
| 75 20 844 | 02 | 031 | 1-C08 |
| 75 20 869 | 02 | 029 | 1-C06 |
| 75 20 877 | 02 | 029 | 1-C06 |
| 75 20 885 | 02 | 029 | 1-C06 |
| 75 20 893 | 02 | 029 | 1-C06 |
| 75 20 901 | 02 | 031 | 1-C08 |
| 75 20 927 | 02 | 033 | 1-C10 |
| 75 20 935 | 02 | 033 | 1-C10 |
| 75 20 943 | 02 | 033 | 1-C10 |
| 75 20 950 | 02 | 033 | 1-C10 |
| 75 20 968 | 02 | 033 | 1-C10 |
| 75 20 984 | 02 | 033 | 1-C10 |
| 75 20 992 | 02 | 033 | 1-C10 |
| 75 21 008 | 02 | 033 | 1-C10 |
| 75 21 016 | 02 | 033 | 1-C10 |
| 75 21 024 | 02 | 033 | 1-C10 |
| 75 21 081 | 02 | 123 | 1-G04 |
| 75 21 081 | 02 | 199 | 1-J08 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 75 21 123 | 02 | 179 | 1-I12 |
| 75 21 180 | 02 | 013 | 1-B14 |
| 75 21 198 | 02 | 013 | 1-B14 |
| 75 21 255 | 02 | 035 | 1-C12 |
| 75 21 313 | 02 | 099 | 1-F04 |
| 75 21 313 | 02 | 101 | 1-F06 |
| 75 21 370 | 02 | 179 | 1-I12 |
| 75 21 404 | 02 | 183 | 1-I16 |
| 75 21 453 | 02 | 043 | 1-C20 |
| 75 21 453 | 08C | 041 | 7-B18 |
| 75 21 453 | 08C | 053 | 7-C06 |
| 75 21 651 | 02 | 041 | 1-C18 |
| 75 21 669 | 02 | 041 | 1-C18 |
| 75 21 677 | 02 | 043 | 1-C20 |
| 75 21 859 | 02 | 015 | 1-B16 |
| 75 21 875 | 02 | 103 | 1-F08 |
| 75 21 875 | 02 | 107 | 1-F12 |
| 75 21 875 | 02 | 113 | 1-F18 |
| 75 22 295 | 02 | 099 | 1-F04 |
| 75 22 303 | 02 | 017 | 1-B18 |
| 75 22 360 | 02 | 013 | 1-B14 |
| 75 22 402 | 02 | 037 | 1-C14 |
| 75 22 402 | 02 | 199 | 1-J08 |
| 75 22 444 | 02 | 113 | 1-F18 |
| 75 22 477 | 02 | 099 | 1-F04 |
| 75 22 477 | 02 | 101 | 1-F06 |
| 75 22 709 | 02 | 197 | 1-J06 |
| 75 22 733 | 02 | 055 | 1-D08 |
| 75 22 741 | 02 | 013 | 1-B14 |
| 75 22 790 | 02 | 019 | 1-B20 |
| 75 22 931 | 02 | 113 | 1-F18 |
| 75 23 038 | 02 | 101 | 1-F06 |
| 75 23 913 | 02 | 177 | 1-I10 |
| 75 23 939 | 02 | 019 | 1-B20 |
| 75 23 954 | 02 | 019 | 1-B20 |
| 75 23 962 | 02 | 019 | 1-B20 |
| 75 23 962 | 02 | 189 | 1-I22 |
| 75 23 996 | 02 | 017 | 1-B18 |
| 75 24 119 | 02 | 185 | 1-I18 |
| 75 24 127 | 02 | 185 | 1-I18 |
| 75 24 135 | 02 | 185 | 1-I18 |
| 75 24 168 | 02 | 183 | 1-I16 |
| 75 24 176 | 02 | 119 | 1-F24 |
| 75 24 200 | 02 | 181 | 1-I14 |
| 75 24 275 | 02 | 013 | 1-B14 |
| 75 24 275 | 02 | 193 | 1-J02 |
| 75 24 291 | 02 | 013 | 1-B14 |
| 75 24 291 | 02 | 193 | 1-J02 |
| 75 24 317 | 02 | 013 | 1-B14 |
| 75 24 317 | 02 | 193 | 1-J02 |
| 75 24 333 | 02 | 013 | 1-B14 |
| 75 24 333 | 02 | 193 | 1-J02 |
| 75 24 358 | 02 | 013 | 1-B14 |
| 75 24 358 | 02 | 193 | 1-J02 |
| 75 24 374 | 02 | 013 | 1-B14 |
| 75 24 374 | 02 | 193 | 1-J02 |
| 75 24 390 | 02 | 013 | 1-B14 |
| 75 24 390 | 02 | 193 | 1-J02 |
| 75 24 416 | 02 | 013 | 1-B14 |
| 75 24 416 | 02 | 193 | 1-J02 |





| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 75 24 432 | 02 | 013 | 1-B14 |
| 75 24 432 | 02 | 193 | 1-J02 |
| 75 24 457 | 02 | 013 | 1-B14 |
| 75 24 457 | 02 | 193 | 1-J02 |
| 75 24 473 | 02 | 013 | 1-B14 |
| 75 24 473 | 02 | 193 | 1-J02 |
| 75 24 499 | 02 | 013 | 1-B14 |
| 75 24 499 | 02 | 193 | 1-J02 |
| 75 24 515 | 02 | 013 | 1-B14 |
| 75 24 515 | 02 | 193 | 1-J02 |
| 75 24 531 | 02 | 013 | 1-B14 |
| 75 24 531 | 02 | 193 | 1-J02 |
| 75 24 556 | 02 | 013 | 1-B14 |
| 75 24 556 | 02 | 193 | 1-J02 |
| 75 24 572 | 02 | 013 | 1-B14 |
| 75 24 572 | 02 | 193 | 1-J02 |
| 75 24 598 | 02 | 013 | 1-B14 |
| 75 24 598 | 02 | 193 | 1-J02 |
| 75 24 614 | 02 | 015 | 1-B16 |
| 75 24 614 | 02 | 193 | 1-J02 |
| 75 24 630 | 02 | 015 | 1-B16 |
| 75 24 630 | 02 | 193 | 1-J02 |
| 75 24 655 | 02 | 015 | 1-B16 |
| 75 24 655 | 02 | 193 | 1-J02 |
| 75 24 671 | 02 | 015 | 1-B16 |
| 75 24 671 | 02 | 193 | 1-J02 |
| 75 24 697 | 02 | 015 | 1-B16 |
| 75 24 697 | 02 | 193 | 1-J02 |
| 75 24 713 | 02 | 015 | 1-B16 |
| 75 24 713 | 02 | 193 | 1-J02 |
| 75 24 739 | 02 | 015 | 1-B16 |
| 75 24 739 | 02 | 193 | 1-J02 |
| 75 24 754 | 02 | 015 | 1-B16 |
| 75 24 754 | 02 | 193 | 1-J02 |
| 75 24 770 | 02 | 015 | 1-B16 |
| 75 24 770 | 02 | 193 | 1-J02 |
| 75 24 796 | 02 | 015 | 1-B16 |
| 75 24 796 | 02 | 193 | 1-J02 |
| 75 24 812 | 02 | 015 | 1-B16 |
| 75 24 812 | 02 | 193 | 1-J02 |
| 75 24 838 | 02 | 015 | 1-B16 |
| 75 24 838 | 02 | 193 | 1-J02 |
| 75 24 853 | 02 | 015 | 1-B16 |
| 75 24 853 | 02 | 193 | 1-J02 |
| 75 24 895 | 02 | 033 | 1-C10 |
| 75 24 903 | 02 | 033 | 1-C10 |
| 75 24 911 | 02 | 033 | 1-C10 |
| 75 24 929 | 02 | 033 | 1-C10 |
| 75 24 937 | 02 | 033 | 1-C10 |
| 75 24 978 | 02 | 035 | 1-C12 |
| 75 25 124 | 02 | 063 | 1-D16 |
| 75 25 124 | 02 | 071 | 1-D24 |
| 75 25 140 | 02 | 089 | 1-E18 |
| 75 25 181 | 02 | 063 | 1-D16 |
| 75 25 181 | 02 | 067 | 1-D20 |
| 75 25 215 | 02 | 053 | 1-D06 |
| 75 25 223 | 02 | 085 | 1-E14 |
| 75 25 231 | 02 | 085 | 1-E14 |
| 75 25 249 | 02 | 085 | 1-E14 |
| 75 25 389 | 02 | 093 | 1-E22 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 75 25 421 | 02 | 057 | 1-D10 |
| 75 25 439 | 02 | 057 | 1-D10 |
| 75 25 447 | 02 | 049 | 1-D02 |
| 75 25 447 | 02 | 053 | 1-D06 |
| 75 25 603 | 02 | 135 | 1-G16 |
| 75 25 611 | 02 | 133 | 1-G14 |
| 75 25 660 | 02 | 071 | 1-D24 |
| 75 25 686 | 02 | 179 | 1-I12 |
| 75 25 694 | 02 | 179 | 1-I12 |
| 75 25 710 | 02 | 089 | 1-E18 |
| 75 25 744 | 02 | 185 | 1-I18 |
| 75 25 744 | 03A | 015 | 2-A16 |
| 75 25 777 | 02 | 185 | 1-I18 |
| 75 25 801 | 02 | 049 | 1-D02 |
| 75 26 031 | 02 | 105 | 1-F10 |
| 75 26 031 | 02 | 111 | 1-F16 |
| 75 26 049 | 02 | 105 | 1-F10 |
| 75 26 049 | 02 | 111 | 1-F16 |
| 75 26 056 | 02 | 105 | 1-F10 |
| 75 26 056 | 02 | 111 | 1-F16 |
| 75 26 064 | 02 | 105 | 1-F10 |
| 75 26 064 | 02 | 111 | 1-F16 |
| 75 26 163 | 02 | 075 | 1-E04 |
| 75 26 163 | 02 | 079 | 1-E08 |
| 75 26 262 | 02 | 171 | 1-I04 |
| 75 26 288 | 02 | 171 | 1-I04 |
| 75 26 338 | 02 | 117 | 1-F22 |
| 75 26 338 | 08C | 031 | 7-B08 |
| 75 26 338 | 08C | 035 | 7-B12 |
| 75 26 338 | 08C | 045 | 7-B22 |
| 75 26 338 | 08C | 047 | 7-B24 |
| 75 26 346 | 02 | 117 | 1-F22 |
| 75 26 353 | 02 | 117 | 1-F22 |
| 75 26 361 | 02 | 117 | 1-F22 |
| 75 26 379 | 02 | 117 | 1-F22 |
| 75 26 411 | 02 | 047 | 1-C24 |
| 75 26 429 | 02 | 047 | 1-C24 |
| 75 26 502 | 02 | 037 | 1-C14 |
| 75 26 627 | 02 | 071 | 1-D24 |
| 75 26 643 | 02 | 071 | 1-D24 |
| 75 26 650 | 02 | 071 | 1-D24 |
| 75 26 783 | 02 | 063 | 1-D16 |
| 75 26 791 | 02 | 135 | 1-G16 |
| 75 26 809 | 02 | 135 | 1-G16 |
| 75 26 817 | 02 | 065 | 1-D18 |
| 75 26 833 | 02 | 065 | 1-D18 |
| 75 26 841 | 02 | 171 | 1-I04 |
| 75 26 874 | 02 | 037 | 1-C14 |
| 75 26 916 | 02 | 149 | 1-H06 |
| 75 26 916 | 02 | 151 | 1-H08 |
| 75 26 973 | 02 | 179 | 1-I12 |
| 75 27 039 | 02 | 063 | 1-D16 |
| 75 27 047 | 02 | 063 | 1-D16 |
| 75 27 302 | 02 | 171 | 1-I04 |
| 75 27 310 | 02 | 171 | 1-I04 |
| 75 27 385 | 02 | 137 | 1-G18 |
| 75 27 518 | 02 | 063 | 1-D16 |
| 75 27 542 | 02 | 061 | 1-D14 |
| 75 27 542 | 02 | 069 | 1-D22 |
| 75 27 559 | 02 | 111 | 1-F16 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 75 27 567 | 02 | 111 | 1-F16 |
| 75 27 575 | 02 | 111 | 1-F16 |
| 75 27 583 | 02 | 105 | 1-F10 |
| 75 27 591 | 02 | 105 | 1-F10 |
| 75 27 633 | 09 | 007 | 7-D08 |
| 75 27 641 | 09 | 007 | 7-D08 |
| 75 27 716 | 03A | 011 | 2-A12 |
| 75 27 724 | 03A | 011 | 2-A12 |
| 75 27 732 | 03A | 011 | 2-A12 |
| 75 27 740 | 03A | 011 | 2-A12 |
| 75 27 757 | 03A | 011 | 2-A12 |
| 75 27 765 | 03A | 011 | 2-A12 |
| 75 27 773 | 03A | 011 | 2-A12 |
| 75 27 781 | 03A | 011 | 2-A12 |
| 75 27 799 | 03A | 011 | 2-A12 |
| 75 27 807 | 03A | 011 | 2-A12 |
| 75 27 815 | 03A | 011 | 2-A12 |
| 75 27 823 | 03A | 011 | 2-A12 |
| 75 27 831 | 03A | 011 | 2-A12 |
| 75 27 849 | 03A | 011 | 2-A12 |
| 75 27 856 | 03A | 011 | 2-A12 |
| 75 27 864 | 03A | 011 | 2-A12 |
| 75 27 872 | 03A | 011 | 2-A12 |
| 75 27 880 | 03A | 011 | 2-A12 |
| 75 28 078 | 02 | 137 | 1-G18 |
| 75 28 136 | 02 | 137 | 1-G18 |
| 75 28 136 | 02 | 139 | 1-G20 |
| 75 28 136 | 02 | 203 | 1-J12 |
| 75 28 136 | 02 | 205 | 1-J14 |
| 75 28 144 | 02 | 105 | 1-F10 |
| 75 28 144 | 02 | 111 | 1-F16 |
| 75 28 144 | 02 | 117 | 1-F22 |
| 75 28 144 | 08C | 031 | 7-B08 |
| 75 28 144 | 08C | 035 | 7-B12 |
| 75 28 144 | 08C | 039 | 7-B16 |
| 75 28 144 | 08C | 045 | 7-B22 |
| 75 28 144 | 08C | 047 | 7-B24 |
| 75 28 169 | 09 | 011 | 7-D12 |
| 75 28 177 | 09 | 011 | 7-D12 |
| 75 28 284 | 02 | 051 | 1-D04 |
| 75 28 292 | 02 | 053 | 1-D06 |
| 75 28 342 | 02 | 053 | 1-D06 |
| 75 28 417 | 09 | 011 | 7-D12 |
| 75 28 425 | 02 | 133 | 1-G14 |
| 75 28 524 | 02 | 121 | 1-G02 |
| 75 28 672 | 09 | 009 | 7-D10 |
| 75 28 698 | 02 | 047 | 1-C24 |
| 75 28 912 | 02 | 057 | 1-D10 |
| 75 28 920 | 02 | 057 | 1-D10 |
| 75 28 953 | 02 | 149 | 1-H06 |
| 75 28 953 | 02 | 151 | 1-H08 |
| 75 28 995 | 02 | 183 | 1-I16 |
| 75 29 027 | 02 | 181 | 1-I14 |
| 75 29 092 | 02 | 089 | 1-E18 |
| 75 29 159 | 02 | 053 | 1-D06 |
| 75 29 183 | 02 | 047 | 1-C24 |
| 75 29 191 | 02 | 049 | 1-D02 |
| 75 29 845 | 02 | 047 | 1-C24 |
| 75 29 852 | 02 | 047 | 1-C24 |
| 75 29 860 | 02 | 047 | 1-C24 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 75 29 878 | 02 | 047 | 1-C24 |
| 75 29 886 | 02 | 047 | 1-C24 |
| 75 29 894 | 02 | 047 | 1-C24 |
| 75 30 553 | 02 | 057 | 1-D10 |
| 75 31 510 | 02 | 091 | 1-E20 |
| 75 31 544 | 09 | 007 | 7-D08 |
| 75 31 692 | 09 | 011 | 7-D12 |
| 75 31 965 | 02 | 061 | 1-D14 |
| 75 31 965 | 02 | 069 | 1-D22 |
| 75 32 013 | 02 | 049 | 1-D02 |
| 75 32 054 | 02 | 093 | 1-E22 |
| 75 32 120 | 02 | 181 | 1-I14 |
| 75 32 146 | 02 | 089 | 1-E18 |
| 75 32 153 | 03A | 011 | 2-A12 |
| 75 32 161 | 02 | 009 | 1-B10 |
| 75 32 294 | 09 | 011 | 7-D12 |
| 75 32 302 | 09 | 011 | 7-D12 |
| 75 32 310 | 09 | 011 | 7-D12 |
| 75 32 328 | 09 | 009 | 7-D10 |
| 75 32 336 | 09 | 009 | 7-D10 |
| 75 32 351 | 09 | 009 | 7-D10 |
| 75 32 369 | 09 | 009 | 7-D10 |
| 75 32 377 | 09 | 009 | 7-D10 |
| 75 32 385 | 09 | 009 | 7-D10 |
| 75 32 393 | 09 | 011 | 7-D12 |
| 75 32 401 | 09 | 011 | 7-D12 |
| 75 32 419 | 09 | 011 | 7-D12 |
| 75 33 102 | 02 | 179 | 1-I12 |
| 75 33 110 | 02 | 179 | 1-I12 |
| 75 33 136 | 02 | 179 | 1-I12 |
| 75 33 185 | 02 | 183 | 1-I16 |
| 75 33 318 | 02 | 093 | 1-E22 |
| 75 33 383 | 02 | 093 | 1-E22 |
| 75 33 532 | 02 | 147 | 1-H04 |
| 75 33 540 | 02 | 151 | 1-H08 |
| 75 33 540 | 02 | 201 | 1-J10 |
| 75 33 615 | 02 | 197 | 1-J06 |
| 75 33 623 | 02 | 197 | 1-J06 |
| 75 33 623 | 02 | 205 | 1-J14 |
| 75 33 631 | 02 | 197 | 1-J06 |
| 75 33 631 | 02 | 205 | 1-J14 |
| 75 33 680 | 02 | 093 | 1-E22 |
| 75 33 797 | 02 | 203 | 1-J12 |
| 75 33 797 | 02 | 205 | 1-J14 |
| 75 33 870 | 02 | 049 | 1-D02 |
| 75 33 870 | 02 | 053 | 1-D06 |
| 75 33 896 | 02 | 151 | 1-H08 |
| 75 33 904 | 02 | 147 | 1-H04 |
| 75 33 904 | 02 | 203 | 1-J12 |
| 75 33 904 | 02 | 205 | 1-J14 |
| 75 34 456 | 02 | 121 | 1-G02 |
| 75 34 480 | 02 | 093 | 1-E22 |
| 75 34 522 | 02 | 059 | 1-D12 |
| 75 34 597 | 02 | 061 | 1-D14 |
| 75 34 597 | 02 | 069 | 1-D22 |
| 75 34 605 | 02 | 061 | 1-D14 |
| 75 34 605 | 02 | 069 | 1-D22 |
| 75 34 621 | 02 | 061 | 1-D14 |
| 75 34 621 | 02 | 069 | 1-D22 |
| 75 34 639 | 02 | 059 | 1-D12 |



MASTER INDEX


0 General 1-A02
2 Engine 1-B02
3A Electrical general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 7-A02
9 Tools, labels 7-D02
10 Numerical register 7-E02

# 7-E11 Numerical register — Nummerregister

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 75 34 795 | 02 | 135 | 1-G16 |
| 75 35 032 | 02 | 087 | 1-E16 |
| 75 35 040 | 02 | 085 | 1-E14 |
| 75 35 057 | 02 | 085 | 1-E14 |
| 75 35 065 | 02 | 085 | 1-E14 |
| 75 35 073 | 02 | 085 | 1-E14 |
| 75 35 164 | 02 | 135 | 1-G16 |
| 75 35 172 | 02 | 085 | 1-E14 |
| 75 35 180 | 02 | 085 | 1-E14 |
| 75 35 198 | 02 | 085 | 1-E14 |
| 75 35 206 | 02 | 085 | 1-E14 |
| 75 35 214 | 02 | 085 | 1-E14 |
| 75 35 255 | 03A | 011 | 2-A12 |
| 75 35 263 | 03A | 011 | 2-A12 |
| 75 35 271 | 03A | 011 | 2-A12 |
| 75 35 289 | 03A | 011 | 2-A12 |
| 75 35 297 | 03A | 011 | 2-A12 |
| 75 35 305 | 03A | 011 | 2-A12 |
| 75 35 313 | 03A | 011 | 2-A12 |
| 75 35 321 | 03A | 011 | 2-A12 |
| 75 35 339 | 03A | 011 | 2-A12 |
| 75 35 446 | 02 | 089 | 1-E18 |
| 75 35 487 | 03A | 131 | 2-F12 |
| 75 35 487 | 08C | 023 | 7-A24 |
| 75 35 487 | 08C | 039 | 7-B16 |
| 75 35 487 | 08C | 045 | 7-B22 |
| 75 35 487 | 08C | 047 | 7-B24 |
| 75 35 487 | 08C | 051 | 7-C04 |
| 75 35 925 | 02 | 149 | 1-H06 |
| 75 35 925 | 02 | 151 | 1-H08 |
| 75 35 925 | 02 | 201 | 1-J10 |
| 75 35 958 | 09 | 009 | 7-D10 |
| 75 36 063 | 02 | 151 | 1-H08 |
| 75 36 097 | 02 | 143 | 1-G24 |
| 75 36 097 | 02 | 205 | 1-J14 |
| 75 36 196 | 02 | 137 | 1-G18 |
| 75 36 196 | 02 | 139 | 1-G20 |
| 75 36 196 | 02 | 145 | 1-H02 |
| 75 36 196 | 02 | 147 | 1-H04 |
| 75 36 196 | 02 | 201 | 1-J10 |
| 75 36 576 | 02 | 047 | 1-C24 |
| 75 36 642 | 02 | 049 | 1-D02 |
| 75 36 683 | 02 | 089 | 1-E18 |
| 75 36 691 | 02 | 089 | 1-E18 |
| 75 36 709 | 02 | 089 | 1-E18 |
| 75 36 840 | 02 | 057 | 1-D10 |
| 75 36 915 | 02 | 135 | 1-G16 |
| 75 36 923 | 02 | 075 | 1-E04 |
| 75 36 931 | 02 | 047 | 1-C24 |
| 75 37 061 | 02 | 151 | 1-H08 |
| 75 37 145 | 02 | 199 | 1-J08 |
| 75 37 145 | 02 | 201 | 1-J10 |
| 75 37 269 | 02 | 179 | 1-H12 |
| 75 37 327 | 09 | 009 | 7-D10 |
| 75 37 335 | 09 | 009 | 7-D10 |
| 75 37 343 | 09 | 009 | 7-D10 |
| 75 37 350 | 09 | 009 | 7-D10 |
| 75 37 368 | 09 | 011 | 7-D12 |
| 75 37 376 | 09 | 011 | 7-D12 |
| 75 37 384 | 09 | 011 | 7-D12 |
| 75 37 392 | 09 | 011 | 7-D12 |
| 75 37 418 | 09 | 011 | 7-D12 |
| 75 37 426 | 09 | 011 | 7-D12 |
| 75 37 434 | 09 | 009 | 7-D10 |
| 75 37 442 | 09 | 009 | 7-D10 |
| 75 37 459 | 09 | 009 | 7-D10 |
| 75 37 475 | 09 | 009 | 7-D10 |
| 75 37 525 | 02 | 179 | 1-H12 |
| 75 37 756 | 09 | 015 | 7-D16 |
| 75 37 764 | 02 | 201 | 1-J10 |
| 75 37 764 | 02 | 203 | 1-J12 |
| 75 37 764 | 02 | 205 | 1-J14 |
| 75 37 764 | 09 | 015 | 7-D16 |
| 75 37 806 | 02 | 045 | 1-C22 |
| 75 37 970 | 09 | 007 | 7-D08 |
| 75 37 988 | 09 | 015 | 7-D16 |
| 75 37 996 | 09 | 009 | 7-D10 |
| 75 38 218 | 09 | 009 | 7-D10 |
| 75 38 408 | 09 | 009 | 7-D10 |
| 75 38 440 | 02 | 137 | 1-G18 |
| 75 38 440 | 02 | 143 | 1-G24 |
| 75 38 440 | 02 | 147 | 1-H04 |
| 75 38 440 | 02 | 149 | 1-H06 |
| 75 38 440 | 02 | 151 | 1-H08 |
| 75 38 440 | 02 | 199 | 1-J08 |
| 75 38 440 | 02 | 201 | 1-J10 |
| 75 38 481 | 09 | 007 | 7-D08 |
| 75 38 622 | 09 | 015 | 7-D16 |
| 75 38 655 | 02 | 089 | 1-E18 |
| 75 38 689 | 02 | 089 | 1-E18 |
| 75 38 705 | 09 | 015 | 7-D16 |
| 75 38 796 | 03A | 013 | 2-A14 |
| 75 38 960 | 02 | 093 | 1-E22 |
| 75 38 978 | 02 | 093 | 1-E22 |
| 75 38 986 | 02 | 093 | 1-E22 |
| 75 39 026 | 02 | 093 | 1-E22 |
| 75 39 117 | 02 | 139 | 1-G20 |
| 75 39 117 | 02 | 205 | 1-J14 |
| 75 39 125 | 02 | 049 | 1-D02 |
| 75 39 125 | 02 | 053 | 1-D06 |
| 75 39 133 | 02 | 057 | 1-D10 |
| 75 39 216 | 02 | 093 | 1-E22 |
| 75 39 232 | 09 | 009 | 7-D10 |
| 75 39 240 | 02 | 093 | 1-E22 |
| 75 39 257 | 02 | 093 | 1-E22 |
| 75 39 349 | 02 | 093 | 1-E22 |
| 75 39 414 | 02 | 093 | 1-E22 |
| 75 39 646 | 09 | 009 | 7-D10 |
| 75 39 653 | 09 | 009 | 7-D10 |
| 75 39 661 | 09 | 009 | 7-D10 |
| 75 39 679 | 09 | 009 | 7-D10 |
| 75 39 687 | 09 | 009 | 7-D10 |
| 75 39 703 | 09 | 009 | 7-D10 |
| 75 39 711 | 09 | 015 | 7-D16 |
| 75 39 745 | 09 | 011 | 7-D12 |
| 75 39 752 | 09 | 011 | 7-D12 |
| 75 39 760 | 09 | 011 | 7-D12 |
| 75 39 778 | 09 | 011 | 7-D12 |
| 75 39 786 | 09 | 011 | 7-D12 |
| 75 39 794 | 09 | 011 | 7-D12 |
| 75 39 968 | 08A | 055 | 5-C08 |
| 75 39 976 | 02 | 057 | 1-D10 |
| 75 39 984 | 02 | 093 | 1-E22 |
| 75 40 032 | 02 | 163 | 1-H20 |
| 75 40 032 | 02 | 167 | 1-H24 |
| 75 40 032 | 02 | 169 | 1-I02 |
| 75 40 032 | 04 | 081 | 3-K10 |
| 75 40 172 | 02 | 163 | 1-H20 |
| 75 40 172 | 04 | 081 | 3-K10 |
| 75 40 289 | 02 | 163 | 1-H20 |
| 75 40 289 | 04 | 081 | 3-K10 |
| 75 40 297 | 02 | 165 | 1-H22 |
| 75 40 297 | 04 | 081 | 3-K10 |
| 75 40 305 | 02 | 163 | 1-H20 |
| 75 40 305 | 02 | 195 | 1-J04 |
| 75 40 313 | 02 | 163 | 1-H20 |
| 75 40 313 | 04 | 081 | 3-K10 |
| 75 40 388 | 02 | 165 | 1-H22 |
| 75 40 388 | 02 | 195 | 1-J04 |
| 75 40 420 | 02 | 153 | 1-H10 |
| 75 40 610 | 02 | 171 | 1-I04 |
| 75 40 628 | 02 | 171 | 1-I04 |
| 75 40 727 | 04 | 049 | 3-J02 |
| 75 40 842 | 04 | 065 | 3-J18 |
| 75 40 891 | 04 | 065 | 3-J18 |
| 75 40 891 | 04 | 083 | 3-K12 |
| 75 40 909 | 04 | 063 | 3-J16 |
| 75 40 917 | 02 | 169 | 1-I02 |
| 75 41 063 | 02 | 153 | 1-H10 |
| 75 41 071 | 02 | 153 | 1-H10 |
| 75 41 402 | 02 | 163 | 1-H20 |
| 75 41 410 | 02 | 163 | 1-H20 |
| 75 41 428 | 02 | 195 | 1-J04 |
| 75 41 428 | 04 | 081 | 3-K10 |
| 75 41 436 | 03A | 007 | 2-A08 |
| 75 41 436 | 03A | 009 | 2-A10 |
| 75 41 451 | 03A | 007 | 2-A08 |
| 75 41 451 | 03A | 009 | 2-A10 |
| 75 41 519 | 02 | 163 | 1-H20 |
| 75 41 527 | 02 | 155 | 1-H12 |
| 75 41 527 | 02 | 161 | 1-H18 |
| 75 41 717 | 02 | 157 | 1-H14 |
| 75 41 725 | 02 | 157 | 1-H14 |
| 75 41 733 | 02 | 157 | 1-H14 |
| 75 41 857 | 02 | 153 | 1-H10 |
| 75 41 865 | 02 | 161 | 1-H18 |
| 75 41 873 | 02 | 161 | 1-H18 |
| 75 41 881 | 02 | 163 | 1-H20 |
| 75 41 881 | 02 | 195 | 1-J04 |
| 75 41 899 | 02 | 163 | 1-H20 |
| 75 41 899 | 04 | 081 | 3-K10 |
| 75 41 907 | 04 | 051 | 3-J04 |
| 75 42 038 | 04 | 051 | 3-J04 |
| 75 42 095 | 04 | 051 | 3-J04 |
| 75 42 228 | 08C | 021 | 7-A22 |
| 75 42 228 | 08C | 035 | 7-B12 |
| 75 42 228 | 08C | 045 | 7-B22 |
| 75 42 228 | 08C | 051 | 7-C04 |
| 75 42 244 | 04 | 057 | 3-J10 |
| 75 42 251 | 04 | 071 | 3-J24 |
| 75 42 269 | 04 | 059 | 3-J12 |
| 75 42 277 | 04 | 059 | 3-J12 |
| 75 42 285 | 04 | 059 | 3-J12 |
| 75 42 293 | 04 | 059 | 3-J12 |
| 75 42 301 | 04 | 059 | 3-J12 |
| 75 42 319 | 04 | 059 | 3-J12 |
| 75 42 327 | 04 | 059 | 3-J12 |
| 75 42 335 | 04 | 059 | 3-J12 |
| 75 42 343 | 04 | 073 | 3-K02 |
| 75 42 350 | 04 | 073 | 3-K02 |
| 75 42 368 | 04 | 073 | 3-K02 |
| 75 42 376 | 04 | 073 | 3-K02 |
| 75 42 384 | 04 | 073 | 3-K02 |
| 75 42 434 | 04 | 063 | 3-J16 |
| 75 42 475 | 04 | 063 | 3-J16 |
| 75 42 483 | 04 | 065 | 3-J18 |
| 75 42 491 | 04 | 065 | 3-J18 |
| 75 42 517 | 04 | 069 | 3-J22 |
| 75 42 525 | 04 | 069 | 3-J22 |
| 75 42 533 | 04 | 069 | 3-J22 |
| 75 42 541 | 04 | 069 | 3-J22 |
| 75 42 558 | 04 | 069 | 3-J22 |
| 75 42 566 | 04 | 069 | 3-J22 |
| 75 42 574 | 04 | 069 | 3-J22 |
| 75 42 590 | 04 | 069 | 3-J22 |
| 75 42 608 | 04 | 069 | 3-J22 |
| 75 42 616 | 04 | 069 | 3-J22 |
| 75 42 624 | 04 | 069 | 3-J22 |
| 75 42 632 | 04 | 071 | 3-J24 |
| 75 42 640 | 04 | 071 | 3-J24 |
| 75 42 657 | 04 | 071 | 3-J24 |
| 75 42 665 | 04 | 059 | 3-J12 |
| 75 42 673 | 04 | 067 | 3-J20 |
| 75 42 673 | 04 | 083 | 3-K12 |
| 75 42 681 | 04 | 069 | 3-J22 |
| 75 42 681 | 04 | 085 | 3-K14 |
| 75 42 699 | 04 | 069 | 3-J22 |
| 75 42 699 | 04 | 085 | 3-K14 |
| 75 42 715 | 02 | 163 | 1-H20 |
| 75 42 715 | 02 | 195 | 1-J04 |
| 75 42 772 | 02 | 157 | 1-H14 |
| 75 42 822 | 04 | 069 | 3-J22 |
| 75 42 830 | 04 | 069 | 3-J22 |
| 75 42 897 | 04 | 063 | 3-J16 |
| 75 42 913 | 04 | 049 | 3-J02 |
| 75 42 913 | 04 | 075 | 3-K04 |
| 75 42 921 | 04 | 013 | 3-H14 |
| 75 42 921 | 04 | 019 | 3-H20 |
| 75 42 939 | 04 | 019 | 3-H20 |
| 75 42 947 | 04 | 019 | 3-H20 |
| 75 42 954 | 04 | 059 | 3-J12 |
| 75 42 962 | 04 | 073 | 3-K02 |
| 75 42 970 | 04 | 073 | 3-K02 |
| 75 42 988 | 04 | 073 | 3-K02 |
| 75 43 002 | 08C | 041 | 7-B18 |
| 75 43 028 | 04 | 063 | 3-J16 |
| 75 43 051 | 04 | 063 | 3-J16 |
| 75 43 051 | 04 | 085 | 3-K14 |
| 75 43 077 | 04 | 065 | 3-J18 |



# 7-E12 Numerical register — Nummerregister

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 75 43 176 | 04 | 049 | 3-J02 |
| 75 43 184 | 04 | 049 | 3-J02 |
| 75 43 259 | 02 | 153 | 1-H10 |
| 75 43 275 | 02 | 163 | 1-H20 |
| 75 43 275 | 02 | 195 | 1-J04 |
| 75 43 325 | 02 | 167 | 1-H24 |
| 75 43 408 | 02 | 009 | 1-B10 |
| 75 43 416 | 02 | 009 | 1-B10 |
| 75 43 424 | 09 | 007 | 7-D08 |
| 75 43 432 | 02 | 009 | 1-B10 |
| 75 43 556 | 08C | 017 | 7-A18 |
| 75 43 556 | 08C | 039 | 7-B16 |
| 75 43 556 | 08C | 047 | 7-B24 |
| 75 43 606 | 08C | 019 | 7-A20 |
| 75 43 606 | 08C | 039 | 7-B16 |
| 75 43 606 | 08C | 047 | 7-B24 |
| 75 43 614 | 08C | 017 | 7-A18 |
| 75 43 614 | 08C | 039 | 7-B16 |
| 75 43 614 | 08C | 047 | 7-B24 |
| 75 43 630 | 02 | 193 | 1-J02 |
| 75 43 648 | 02 | 195 | 1-J04 |
| 75 43 655 | 02 | 163 | 1-H20 |
| 75 43 655 | 04 | 081 | 3-K10 |
| 75 43 663 | 02 | 163 | 1-H20 |
| 75 43 663 | 04 | 081 | 3-K10 |
| 75 43 671 | 02 | 163 | 1-H20 |
| 75 43 671 | 02 | 195 | 1-J04 |
| 75 43 705 | 02 | 167 | 1-H24 |
| 75 43 739 | 02 | 167 | 1-H24 |
| 75 43 762 | 02 | 171 | 1-I04 |
| 75 43 770 | 02 | 169 | 1-I02 |
| 75 43 846 | 02 | 171 | 1-I04 |
| 75 43 887 | 02 | 171 | 1-I04 |
| 75 43 911 | 02 | 153 | 1-H10 |
| 75 43 978 | 02 | 011 | 1-B12 |
| 75 43 986 | 02 | 011 | 1-B12 |
| 75 43 994 | 02 | 011 | 1-B12 |
| 75 44 000 | 02 | 011 | 1-B12 |
| 75 44 018 | 02 | 011 | 1-B12 |
| 75 44 026 | 02 | 011 | 1-B12 |
| 75 44 034 | 02 | 011 | 1-B12 |
| 75 44 042 | 02 | 011 | 1-B12 |
| 75 44 083 | 02 | 011 | 1-B12 |
| 75 44 125 | 04 | 069 | 3-J22 |
| 75 44 216 | 02 | 157 | 1-H14 |
| 75 44 265 | 02 | 009 | 1-B10 |
| 75 44 265 | 02 | 011 | 1-B12 |
| 75 44 273 | 02 | 011 | 1-B12 |
| 75 44 307 | 02 | 009 | 1-B10 |
| 75 44 356 | 02 | 171 | 1-I04 |
| 75 44 364 | 02 | 167 | 1-H24 |
| 75 44 372 | 02 | 163 | 1-H20 |
| 75 44 430 | 02 | 163 | 1-H20 |
| 75 44 448 | 02 | 163 | 1-H20 |
| 75 44 505 | 02 | 171 | 1-I04 |
| 75 44 539 | 02 | 171 | 1-I04 |
| 75 44 547 | 04 | 013 | 3-H14 |
| 75 44 547 | 04 | 019 | 3-H20 |
| 75 44 554 | 04 | 013 | 3-H14 |
| 75 44 554 | 04 | 019 | 3-H20 |
| 75 44 620 | 02 | 167 | 1-H24 |
| 75 44 638 | 02 | 167 | 1-H24 |
| 75 44 828 | 04 | 049 | 3-J02 |
| 75 44 844 | 04 | 071 | 3-J24 |
| 75 44 893 | 02 | 011 | 1-B12 |
| 75 44 901 | 02 | 011 | 1-B12 |
| 75 44 992 | 02 | 011 | 1-B12 |
| 75 45 213 | 04 | 055 | 3-J08 |
| 75 45 221 | 04 | 055 | 3-J08 |
| 75 45 247 | 04 | 055 | 3-J08 |
| 75 45 494 | 04 | 057 | 3-J10 |
| 75 45 502 | 04 | 057 | 3-J10 |
| 75 45 544 | 02 | 177 | 1-I10 |
| 75 45 650 | 02 | 011 | 1-B12 |
| 75 45 668 | 02 | 011 | 1-B12 |
| 75 45 742 | 09 | 007 | 7-D08 |
| 75 46 161 | 02 | 161 | 1-H18 |
| 75 46 179 | 02 | 161 | 1-H18 |
| 75 46 252 | 04 | 069 | 3-J22 |
| 75 46 260 | 04 | 065 | 3-J18 |
| 75 46 278 | 04 | 057 | 3-J10 |
| 75 46 385 | 02 | 163 | 1-H20 |
| 75 46 385 | 02 | 169 | 1-I02 |
| 75 46 393 | 02 | 169 | 1-I02 |
| 75 46 476 | 02 | 163 | 1-H20 |
| 75 46 484 | 02 | 163 | 1-H20 |
| 75 46 567 | 02 | 163 | 1-H20 |
| 75 46 690 | 04 | 069 | 3-J22 |
| 75 46 757 | 02 | 163 | 1-H20 |
| 75 46 773 | 02 | 163 | 1-H20 |
| 75 46 781 | 02 | 167 | 1-H24 |
| 75 46 815 | 02 | 167 | 1-H24 |
| 75 46 849 | 02 | 167 | 1-H24 |
| 75 46 872 | 04 | 019 | 3-H20 |
| 75 46 906 | 02 | 167 | 1-H24 |
| 75 46 922 | 02 | 163 | 1-H20 |
| 75 46 930 | 02 | 167 | 1-H24 |
| 75 46 955 | 02 | 163 | 1-H20 |
| 75 46 955 | 02 | 195 | 1-J04 |
| 75 46 955 | 04 | 081 | 3-K10 |
| 75 46 963 | 02 | 163 | 1-H20 |
| 75 46 971 | 02 | 165 | 1-H22 |
| 75 46 971 | 02 | 167 | 1-H24 |
| 75 46 971 | 02 | 169 | 1-I02 |
| 75 47 003 | 02 | 163 | 1-H20 |
| 75 47 029 | 02 | 163 | 1-H20 |
| 75 47 193 | 04 | 057 | 3-J10 |
| 75 47 201 | 04 | 019 | 3-H20 |
| 75 47 284 | 02 | 011 | 1-B12 |
| 75 47 292 | 02 | 169 | 1-I02 |
| 75 47 334 | 04 | 049 | 3-J02 |
| 75 47 482 | 06 | 021 | 4-C22 |
| 75 47 623 | 02 | 171 | 1-I04 |
| 75 47 631 | 02 | 171 | 1-I04 |
| 75 47 656 | 02 | 011 | 1-B12 |
| 75 47 706 | 02 | 163 | 1-H20 |
| 75 47 714 | 02 | 167 | 1-H24 |
| 75 47 730 | 02 | 169 | 1-I02 |
| 75 47 748 | 04 | 057 | 3-J10 |
| 75 47 805 | 02 | 169 | 1-I02 |
| 75 47 813 | 02 | 169 | 1-I02 |
| 75 47 821 | 02 | 163 | 1-H20 |
| 75 47 847 | 02 | 163 | 1-H20 |
| 75 47 862 | 02 | 163 | 1-H20 |
| 75 47 946 | 04 | 069 | 3-J22 |
| 75 48 191 | 02 | 157 | 1-H14 |
| 75 48 191 | 08C | 047 | 7-B24 |
| 75 48 191 | 08C | 051 | 7-C04 |
| 75 48 688 | 02 | 157 | 1-H14 |
| 75 48 688 | 08C | 047 | 7-B24 |
| 75 48 688 | 08C | 051 | 7-C04 |
| 75 48 787 | 02 | 163 | 1-H20 |
| 75 48 787 | 02 | 165 | 1-H22 |
| 75 48 795 | 02 | 163 | 1-H20 |
| 75 48 803 | 02 | 165 | 1-H22 |
| 75 48 811 | 02 | 169 | 1-I02 |
| 75 48 829 | 02 | 169 | 1-I02 |
| 75 48 837 | 02 | 153 | 1-H10 |
| 75 48 837 | 02 | 161 | 1-H18 |
| 75 48 845 | 02 | 155 | 1-H12 |
| 75 48 845 | 02 | 161 | 1-H18 |
| 75 48 852 | 02 | 155 | 1-H12 |
| 75 48 852 | 02 | 161 | 1-H18 |
| 75 48 910 | 04 | 079 | 3-K08 |
| 75 48 936 | 02 | 157 | 1-H14 |
| 75 48 936 | 08C | 047 | 7-B24 |
| 75 48 936 | 08C | 051 | 7-C04 |
| 75 49 041 | 02 | 171 | 1-I04 |
| 75 49 165 | 04 | 075 | 3-K04 |
| 75 49 173 | 04 | 051 | 3-J04 |
| 75 49 231 | 04 | 013 | 3-H14 |
| 75 49 231 | 04 | 019 | 3-H20 |
| 75 49 256 | 04 | 049 | 3-J02 |
| 75 49 256 | 04 | 075 | 3-K04 |
| 75 49 280 | 02 | 153 | 1-H10 |
| 75 49 298 | 02 | 153 | 1-H10 |
| 75 49 389 | 02 | 153 | 1-H10 |
| 75 49 439 | 08C | 017 | 7-A18 |
| 75 49 439 | 08C | 021 | 7-A22 |
| 75 49 439 | 08C | 035 | 7-B12 |
| 75 49 439 | 08C | 045 | 7-B22 |
| 75 49 439 | 08C | 047 | 7-B24 |
| 75 49 439 | 08C | 051 | 7-C04 |
| 75 49 488 | 03A | 007 | 2-A08 |
| 75 49 488 | 03A | 009 | 2-A10 |
| 75 49 504 | 04 | 019 | 3-H20 |
| 75 49 579 | 02 | 009 | 1-B10 |
| 75 49 595 | 04 | 063 | 3-J16 |
| 75 49 611 | 04 | 055 | 3-J08 |
| 75 49 652 | 04 | 055 | 3-J08 |
| 75 49 819 | 04 | 057 | 3-J10 |
| 75 49 850 | 02 | 167 | 1-H24 |
| 75 49 868 | 02 | 163 | 1-H20 |
| 75 49 876 | 02 | 155 | 1-H12 |
| 75 49 918 | 02 | 155 | 1-H12 |
| 75 49 918 | 02 | 161 | 1-H18 |
| 75 49 926 | 02 | 155 | 1-H12 |
| 75 49 926 | 02 | 161 | 1-H18 |
| 75 49 991 | 02 | 155 | 1-H12 |
| 75 49 991 | 02 | 161 | 1-H18 |
| 75 50 023 | 02 | 171 | 1-I04 |
| 75 54 264 | 04 | 059 | 3-J12 |
| 75 54 363 | 04 | 019 | 3-H20 |
| 75 59 768 | 02 | 169 | 1-I02 |
| 75 60 048 | 02 | 037 | 1-C14 |
| 75 60 071 | 02 | 037 | 1-C14 |
| 75 60 154 | 02 | 017 | 1-B18 |
| 75 60 162 | 02 | 089 | 1-E18 |
| 75 60 170 | 02 | 089 | 1-E18 |
| 75 60 253 | 02 | 027 | 1-C04 |
| 75 60 360 | 02 | 155 | 1-H12 |
| 75 60 485 | 02 | 107 | 1-F12 |
| 75 60 493 | 02 | 107 | 1-F12 |
| 75 60 808 | 02 | 017 | 1-B18 |
| 75 60 915 | 02 | 041 | 1-C18 |
| 75 60 931 | 02 | 019 | 1-B20 |
| 75 60 964 | 02 | 017 | 1-B18 |
| 75 61 061 | 03A | 013 | 2-A14 |
| 75 61 079 | 03A | 013 | 2-A14 |
| 75 61 087 | 03A | 013 | 2-A14 |
| 75 61 095 | 03A | 013 | 2-A14 |
| 75 61 111 | 02 | 043 | 1-C20 |
| 75 61 137 | 02 | 043 | 1-C20 |
| 75 61 186 | 02 | 035 | 1-C12 |
| 75 61 202 | 02 | 175 | 1-I08 |
| 75 61 210 | 02 | 089 | 1-E18 |
| 75 61 228 | 02 | 101 | 1-F06 |
| 75 61 301 | 02 | 017 | 1-B18 |
| 75 61 467 | 02 | 017 | 1-B18 |
| 75 61 483 | 02 | 055 | 1-D08 |
| 75 61 491 | 02 | 041 | 1-C18 |
| 75 61 509 | 02 | 097 | 1-F02 |
| 75 61 509 | 02 | 099 | 1-F04 |
| 75 61 657 | 02 | 055 | 1-D08 |
| 75 61 673 | 02 | 019 | 1-B20 |
| 75 61 749 | 02 | 035 | 1-C12 |
| 75 61 772 | 02 | 121 | 1-G02 |
| 75 61 772 | 02 | 123 | 1-G04 |
| 75 61 772 | 02 | 187 | 1-I20 |
| 75 61 772 | 02 | 199 | 1-J08 |
| 75 61 798 | 03A | 023 | 2-A24 |
| 75 61 806 | 03A | 025 | 2-B02 |
| 75 61 988 | 02 | 017 | 1-B18 |
| 75 61 996 | 02 | 017 | 1-B18 |
| 75 62 002 | 02 | 017 | 1-B18 |
| 75 62 010 | 02 | 103 | 1-F08 |
| 75 62 010 | 02 | 113 | 1-F18 |
| 75 62 044 | 02 | 103 | 1-F08 |
| 75 62 044 | 02 | 113 | 1-F18 |
| 75 62 077 | 02 | 043 | 1-C20 |
| 75 62 168 | 02 | 185 | 1-I18 |
| 75 62 184 | 03A | 019 | 2-A20 |
| 75 62 218 | 02 | 101 | 1-F06 |
| 75 62 226 | 02 | 101 | 1-F06 |
| 75 62 234 | 02 | 099 | 1-F04 |
| 75 62 242 | 02 | 099 | 1-F04 |
| 75 62 259 | 02 | 035 | 1-C12 |
| 75 62 275 | 02 | 035 | 1-C12 |
| 75 62 390 | 02 | 103 | 1-F08 |
| 75 62 390 | 02 | 107 | 1-F12 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

# 7-E13 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 75 62 390 | 02 | 113 | 1-F18 |
| 75 62 424 | 02 | 097 | 1-F02 |
| 75 62 440 | 02 | 097 | 1-F02 |
| 75 62 481 | 02 | 125 | 1-G06 |
| 75 62 515 | 02 | 125 | 1-G06 |
| 75 62 739 | 02 | 103 | 1-F08 |
| 75 62 739 | 02 | 107 | 1-F12 |
| 75 62 739 | 02 | 113 | 1-F18 |
| 75 62 911 | 02 | 121 | 1-G02 |
| 75 63 141 | 02 | 015 | 1-B16 |
| 75 63 166 | 02 | 027 | 1-C04 |
| 75 63 265 | 02 | 103 | 1-F08 |
| 75 63 307 | 02 | 103 | 1-F08 |
| 75 63 372 | 02 | 107 | 1-F12 |
| 75 63 422 | 02 | 113 | 1-F18 |
| 75 63 489 | 02 | 113 | 1-F18 |
| 75 63 646 | 02 | 025 | 1-C02 |
| 75 63 646 | 02 | 187 | 1-I20 |
| 75 63 653 | 02 | 025 | 1-C02 |
| 75 63 653 | 02 | 187 | 1-I20 |
| 75 63 661 | 02 | 021 | 1-B22 |
| 75 63 687 | 02 | 173 | 1-I06 |
| 75 63 984 | 02 | 107 | 1-F12 |
| 75 64 032 | 02 | 107 | 1-F12 |
| 75 64 057 | 02 | 097 | 1-F02 |
| 75 64 065 | 02 | 115 | 1-F20 |
| 75 64 123 | 02 | 091 | 1-E20 |
| 75 64 131 | 02 | 089 | 1-E18 |
| 75 64 131 | 02 | 091 | 1-E20 |
| 75 64 222 | 02 | 021 | 1-B22 |
| 75 64 222 | 02 | 099 | 1-F04 |
| 75 64 222 | 02 | 101 | 1-F06 |
| 75 64 222 | 02 | 175 | 1-I08 |
| 75 64 230 | 02 | 021 | 1-B22 |
| 75 64 248 | 02 | 199 | 1-J08 |
| 75 64 339 | 02 | 091 | 1-E20 |
| 75 64 354 | 02 | 175 | 1-I08 |
| 75 64 396 | 02 | 103 | 1-F08 |
| 75 64 396 | 02 | 107 | 1-F12 |
| 75 64 396 | 02 | 113 | 1-F18 |
| 75 64 420 | 03A | 023 | 2-A24 |
| 75 64 420 | 03A | 025 | 2-B02 |
| 75 64 438 | 03A | 025 | 2-B02 |
| 75 64 800 | 03A | 019 | 2-A20 |
| 75 64 834 | 02 | 107 | 1-F12 |
| 75 64 834 | 02 | 115 | 1-F20 |
| 75 64 859 | 02 | 097 | 1-F02 |
| 75 65 351 | 02 | 119 | 1-F24 |
| 75 65 658 | 02 | 181 | 1-I14 |
| 75 65 658 | 02 | 183 | 1-I16 |
| 75 65 708 | 02 | 183 | 1-I16 |
| 75 65 716 | 02 | 181 | 1-I14 |
| 75 65 716 | 02 | 183 | 1-I16 |
| 75 65 724 | 02 | 183 | 1-I16 |
| 75 66 367 | 02 | 091 | 1-E20 |
| 75 66 433 | 02 | 037 | 1-C14 |
| 75 66 433 | 02 | 187 | 1-I20 |
| 75 66 433 | 02 | 193 | 1-J02 |
| 75 66 458 | 02 | 015 | 1-B16 |
| 75 66 458 | 02 | 055 | 1-D08 |
| 75 66 516 | 02 | 173 | 1-I06 |
| 75 66 532 | 02 | 175 | 1-I08 |
| 75 66 599 | 02 | 185 | 1-I18 |
| 75 67 589 | 02 | 181 | 1-I14 |
| 75 67 704 | 02 | 185 | 1-I18 |
| 75 67 720 | 02 | 123 | 1-G04 |
| 75 67 746 | 02 | 183 | 1-I16 |
| 75 67 761 | 02 | 183 | 1-I16 |
| 75 68 041 | 02 | 091 | 1-E20 |
| 75 68 801 | 02 | 185 | 1-I18 |
| 75 68 900 | 02 | 197 | 1-J06 |
| 75 68 942 | 02 | 033 | 1-C10 |
| 75 69 056 | 02 | 119 | 1-F24 |
| 75 69 346 | 02 | 097 | 1-F02 |
| 75 69 346 | 02 | 187 | 1-I20 |
| 75 69 452 | 02 | 023 | 1-B24 |
| 75 69 460 | 02 | 023 | 1-B24 |
| 75 69 478 | 02 | 023 | 1-B24 |
| 75 69 486 | 02 | 023 | 1-B24 |
| 75 69 494 | 02 | 023 | 1-B24 |
| 75 69 502 | 02 | 023 | 1-B24 |
| 75 69 577 | 02 | 113 | 1-F18 |
| 75 69 593 | 02 | 113 | 1-F18 |
| 75 69 734 | 02 | 017 | 1-B18 |
| 75 72 910 | 02 | 163 | 1-H20 |
| 75 77 323 | 02 | 155 | 1-H12 |
| 75 80 095 | 02 | 099 | 1-F04 |
| 75 80 244 | 02 | 047 | 1-C24 |
| 75 80 574 | 02 | 047 | 1-C24 |
| 75 80 582 | 02 | 047 | 1-C24 |
| 75 80 707 | 02 | 103 | 1-F08 |
| 75 80 715 | 02 | 107 | 1-F12 |
| 75 81 051 | 02 | 099 | 1-F04 |
| 75 81 093 | 02 | 045 | 1-C22 |
| 75 81 259 | 02 | 021 | 1-B22 |
| 75 81 317 | 02 | 047 | 1-C24 |
| 75 81 333 | 02 | 055 | 1-D08 |
| 75 81 432 | 02 | 179 | 1-I12 |
| 75 81 440 | 02 | 097 | 1-F02 |
| 75 81 473 | 02 | 045 | 1-C22 |
| 75 82 315 | 02 | 099 | 1-F04 |
| 75 82 315 | 02 | 187 | 1-I20 |
| 75 83 628 | 02 | 155 | 1-H12 |
| 75 83 628 | 02 | 161 | 1-H18 |
| 75 83 784 | 02 | 125 | 1-G06 |
| 75 83 859 | 02 | 113 | 1-F18 |
| 75 83 867 | 02 | 113 | 1-F24 |
| 75 84 436 | 02 | 101 | 1-F06 |
| 75 84 436 | 02 | 189 | 1-I22 |
| 75 84 485 | 02 | 045 | 1-C22 |
| 75 84 493 | 02 | 045 | 1-C22 |
| 75 84 501 | 02 | 045 | 1-C22 |
| 75 84 519 | 02 | 045 | 1-C22 |
| 75 84 527 | 02 | 045 | 1-C22 |
| 75 84 535 | 02 | 045 | 1-C22 |
| 75 84 543 | 02 | 045 | 1-C22 |
| 75 84 550 | 02 | 045 | 1-C22 |
| 75 84 568 | 02 | 045 | 1-C22 |
| 75 84 576 | 02 | 045 | 1-C22 |
| 75 84 584 | 02 | 045 | 1-C22 |
| 75 84 600 | 02 | 045 | 1-C22 |
| 75 84 618 | 02 | 045 | 1-C22 |
| 75 84 626 | 02 | 045 | 1-C22 |
| 75 84 634 | 02 | 045 | 1-C22 |
| 75 84 642 | 02 | 045 | 1-C22 |
| 75 84 659 | 02 | 045 | 1-C22 |
| 75 84 667 | 02 | 045 | 1-C22 |
| 75 84 675 | 02 | 045 | 1-C22 |
| 75 84 683 | 02 | 045 | 1-C22 |
| 75 84 691 | 02 | 045 | 1-C22 |
| 75 84 709 | 02 | 045 | 1-C22 |
| 75 84 717 | 02 | 045 | 1-C22 |
| 75 84 725 | 02 | 045 | 1-C22 |
| 75 84 733 | 02 | 045 | 1-C22 |
| 75 84 741 | 02 | 045 | 1-C22 |
| 75 84 758 | 02 | 045 | 1-C22 |
| 75 84 766 | 02 | 045 | 1-C22 |
| 75 84 790 | 02 | 155 | 1-H12 |
| 75 84 790 | 02 | 161 | 1-H18 |
| 75 85 037 | 02 | 015 | 1-B16 |
| 75 85 037 | 02 | 187 | 1-I20 |
| 75 85 045 | 02 | 187 | 1-I20 |
| 75 85 045 | 02 | 189 | 1-I22 |
| 75 85 086 | 02 | 027 | 1-C04 |
| 75 85 532 | 02 | 019 | 1-B20 |
| 75 85 540 | 03A | 015 | 2-A16 |
| 75 85 581 | 02 | 097 | 1-F02 |
| 75 85 847 | 02 | 017 | 1-B18 |
| 75 86 019 | 02 | 119 | 1-F24 |
| 75 86 134 | 02 | 017 | 1-B18 |
| 75 86 142 | 02 | 017 | 1-B18 |
| 75 86 308 | 02 | 019 | 1-B20 |
| 75 86 589 | 03A | 025 | 2-B02 |
| 75 86 795 | 02 | 055 | 1-D08 |
| 75 86 837 | 02 | 019 | 1-B20 |
| 75 86 860 | 02 | 115 | 1-F20 |
| 75 86 878 | 02 | 115 | 1-F20 |
| 75 86 993 | 02 | 025 | 1-C02 |
| 75 87 173 | 02 | 119 | 1-F24 |
| 75 87 181 | 02 | 119 | 1-F24 |
| 75 87 298 | 03A | 017 | 2-A18 |
| 75 87 363 | 02 | 013 | 1-B14 |
| 75 87 553 | 02 | 101 | 1-F06 |
| 75 88 023 | 02 | 113 | 1-F18 |
| 75 88 056 | 02 | 019 | 1-B20 |
| 75 88 056 | 02 | 189 | 1-I22 |
| 75 88 122 | 02 | 155 | 1-H12 |
| 75 88 270 | 02 | 107 | 1-F12 |
| 75 88 270 | 02 | 115 | 1-F20 |
| 75 88 312 | 03A | 025 | 2-B02 |
| 75 88 312 | 03A | 149 | 2-G06 |
| 75 88 320 | 02 | 013 | 1-B14 |
| 75 88 320 | 02 | 017 | 1-B18 |
| 75 88 320 | 02 | 021 | 1-B22 |
| 75 88 338 | 02 | 021 | 1-B22 |
| 75 88 544 | 03A | 015 | 2-A16 |
| 75 88 692 | 02 | 175 | 1-I08 |
| 75 88 718 | 02 | 155 | 1-H12 |
| 75 88 718 | 02 | 161 | 1-H18 |
| 75 88 916 | 02 | 187 | 1-I20 |
| 75 88 981 | 02 | 187 | 1-I20 |
| 75 88 981 | 02 | 191 | 1-J24 |
| 75 89 039 | 02 | 187 | 1-I20 |
| 75 90 946 | 09 | 009 | 7-D10 |
| 75 91 167 | 09 | 011 | 7-D12 |
| 75 91 902 | 02 | 081 | 1-E10 |
| 75 99 418 | 02 | 171 | 1-I04 |
| 75 99 426 | 02 | 165 | 1-H22 |
| 75 99 426 | 02 | 167 | 1-H24 |
| 75 99 426 | 02 | 169 | 1-I02 |
| 75 99 509 | 02 | 155 | 1-H12 |
| 75 99 509 | 02 | 161 | 1-H18 |
| 76 00 729 | 08A | 015 | 5-A16 |
| 76 00 737 | 08A | 015 | 5-A16 |
| 76 00 828 | 08A | 043 | 5-B20 |
| 76 00 828 | 08A | 049 | 5-C02 |
| 76 00 836 | 08A | 043 | 5-B20 |
| 76 00 836 | 08A | 049 | 5-C02 |
| 76 01 313 | 08A | 015 | 5-A16 |
| 76 01 321 | 08A | 015 | 5-A16 |
| 76 01 354 | 08A | 045 | 5-B22 |
| 76 01 362 | 08A | 045 | 5-B22 |
| 76 01 370 | 08A | 045 | 5-B22 |
| 76 01 370 | 08A | 051 | 5-C04 |
| 76 01 388 | 08A | 045 | 5-B22 |
| 76 01 388 | 08A | 051 | 5-C04 |
| 76 01 479 | 08A | 011 | 5-A12 |
| 76 01 495 | 08A | 011 | 5-A12 |
| 76 01 545 | 08A | 043 | 5-B20 |
| 76 01 552 | 08A | 043 | 5-B20 |
| 76 01 560 | 08A | 043 | 5-B20 |
| 76 01 701 | 08A | 011 | 5-A12 |
| 76 01 719 | 08A | 011 | 5-A12 |
| 76 01 727 | 08A | 043 | 5-B20 |
| 76 01 735 | 08A | 011 | 5-A12 |
| 76 01 792 | 08A | 045 | 5-B22 |
| 76 01 800 | 08A | 045 | 5-B22 |
| 76 02 394 | 08A | 005 | 5-A06 |
| 76 03 103 | 08A | 067 | 5-C20 |
| 76 03 111 | 08A | 067 | 5-C20 |
| 76 03 459 | 08A | 007 | 5-A08 |
| 76 05 256 | 06 | 007 | 4-C08 |
| 76 12 146 | 08A | 005 | 5-A06 |
| 76 15 495 | 08A | 071 | 5-C24 |
| 76 15 511 | 08A | 071 | 5-C24 |
| 76 15 545 | 08A | 071 | 5-C24 |
| 76 15 552 | 08A | 071 | 5-C24 |
| 76 33 738 | 08B | 029 | 6-B06 |
| 76 33 746 | 08B | 029 | 6-B06 |
| 76 33 761 | 08B | 031 | 6-B08 |
| 76 33 761 | 08B | 041 | 6-B18 |
| 76 33 779 | 08B | 031 | 6-B08 |
| 76 33 779 | 08B | 041 | 6-B18 |
| 76 33 787 | 08B | 031 | 6-B08 |
| 76 33 787 | 08B | 041 | 6-B18 |
| 76 51 896 | 08A | 021 | 5-A22 |
| 78 14 619 | 03A | 011 | 2-A12 |
| 78 20 228 | 08A | 151 | 5-G08 |
| 78 20 244 | 08A | 151 | 5-G08 |
| 78 29 609 | 03B | 105 | 3-E10 |



# 7-E14 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 78 29 609 | 03B | 115 | 3-E20 |
| 78 29 609 | 03B | 127 | 3-F08 |
| 78 29 609 | 03B | 139 | 3-F20 |
| 78 29 617 | 03B | 105 | 3-E10 |
| 78 29 617 | 03B | 115 | 3-E20 |
| 78 29 617 | 03B | 127 | 3-F08 |
| 78 29 617 | 03B | 139 | 3-F20 |
| 78 29 625 | 03B | 105 | 3-E10 |
| 78 29 625 | 03B | 115 | 3-E20 |
| 78 29 625 | 03B | 127 | 3-F08 |
| 78 29 625 | 03B | 139 | 3-F20 |
| 78 29 633 | 03B | 105 | 3-E10 |
| 78 29 633 | 03B | 115 | 3-E20 |
| 78 29 633 | 03B | 127 | 3-F08 |
| 78 29 633 | 03B | 139 | 3-F20 |
| 78 29 641 | 03B | 105 | 3-E10 |
| 78 29 641 | 03B | 115 | 3-E20 |
| 78 29 641 | 03B | 127 | 3-F08 |
| 78 29 641 | 03B | 139 | 3-F20 |
| 78 29 666 | 03B | 105 | 3-E10 |
| 78 29 666 | 03B | 115 | 3-E20 |
| 78 29 666 | 03B | 127 | 3-F08 |
| 78 29 666 | 03B | 139 | 3-F20 |
| 78 29 674 | 03B | 105 | 3-E10 |
| 78 29 674 | 03B | 115 | 3-E20 |
| 78 29 674 | 03B | 127 | 3-F08 |
| 78 29 674 | 03B | 139 | 3-F20 |
| 78 29 682 | 03B | 105 | 3-E10 |
| 78 29 682 | 03B | 115 | 3-E20 |
| 78 29 682 | 03B | 127 | 3-F08 |
| 78 29 682 | 03B | 139 | 3-F20 |
| 78 56 172 | 02 | 035 | 1-C12 |
| 78 73 508 | 08A | 063 | 5-C16 |
| 78 73 508 | 08A | 067 | 5-C20 |
| 78 73 516 | 08A | 063 | 5-C16 |
| 78 73 516 | 08A | 067 | 5-C20 |
| 78 73 714 | 08A | 083 | 5-D12 |
| 78 73 722 | 08A | 083 | 5-D12 |
| 78 73 771 | 08A | 103 | 5-E08 |
| 78 73 771 | 08A | 161 | 5-G18 |
| 78 73 789 | 08A | 103 | 5-E08 |
| 78 73 789 | 08A | 161 | 5-G18 |
| 78 73 797 | 08A | 103 | 5-E08 |
| 78 73 797 | 08A | 161 | 5-G18 |
| 78 73 995 | 08A | 129 | 5-F10 |
| 78 73 995 | 08A | 165 | 5-G22 |
| 78 74 001 | 08A | 129 | 5-F10 |
| 78 74 001 | 08A | 165 | 5-G22 |
| 78 74 118 | 08A | 043 | 5-B20 |
| 78 74 118 | 08A | 045 | 5-B22 |
| 78 74 118 | 08A | 047 | 5-B24 |
| 78 74 118 | 08A | 051 | 5-C04 |
| 78 74 118 | 08A | 061 | 5-C14 |
| 78 74 126 | 08A | 045 | 5-B22 |
| 78 74 126 | 08A | 051 | 5-C04 |
| 78 74 134 | 08A | 045 | 5-B22 |
| 78 74 134 | 08A | 051 | 5-C04 |
| 78 74 142 | 08A | 039 | 5-B16 |
| 78 74 159 | 08A | 041 | 5-B18 |
| 78 74 167 | 08A | 041 | 5-B18 |
| 78 74 175 | 08A | 039 | 5-B16 |
| 78 74 183 | 08A | 039 | 5-B16 |
| 78 74 316 | 06 | 017 | 4-C18 |
| 78 74 316 | 06 | 023 | 4-C24 |
| 78 74 340 | 08A | 129 | 5-F10 |
| 78 74 340 | 08A | 165 | 5-G22 |
| 78 74 381 | 08A | 103 | 5-E08 |
| 78 74 381 | 08A | 161 | 5-G18 |
| 78 74 498 | 03B | 007 | 3-A08 |
| 78 74 498 | 03B | 011 | 3-A12 |
| 78 74 498 | 03B | 015 | 3-A16 |
| 78 74 498 | 03B | 017 | 3-A18 |
| 78 74 498 | 03B | 021 | 3-A22 |
| 78 74 498 | 03B | 033 | 3-B10 |
| 78 74 498 | 03B | 035 | 3-B12 |
| 78 74 498 | 03B | 039 | 3-B16 |
| 78 74 498 | 03B | 041 | 3-B18 |
| 78 74 498 | 03B | 043 | 3-B20 |
| 78 74 498 | 03B | 055 | 3-C08 |
| 78 74 498 | 03B | 057 | 3-C10 |
| 78 74 498 | 03B | 063 | 3-C16 |
| 78 74 498 | 03B | 065 | 3-C18 |
| 78 74 498 | 03B | 079 | 3-D08 |
| 78 74 498 | 03B | 083 | 3-D12 |
| 78 74 498 | 03B | 087 | 3-D16 |
| 78 74 498 | 03B | 089 | 3-D18 |
| 78 74 498 | 03B | 091 | 3-D20 |
| 78 74 498 | 03B | 095 | 3-D24 |
| 78 74 498 | 03B | 113 | 3-E18 |
| 78 74 498 | 03B | 125 | 3-F06 |
| 78 74 498 | 03B | 137 | 3-F18 |
| 78 74 498 | 03B | 149 | 3-G06 |
| 78 74 506 | 03B | 007 | 3-A08 |
| 78 74 506 | 03B | 013 | 3-A14 |
| 78 74 506 | 03B | 017 | 3-A18 |
| 78 74 506 | 03B | 021 | 3-A22 |
| 78 74 506 | 03B | 033 | 3-B10 |
| 78 74 506 | 03B | 039 | 3-B16 |
| 78 74 506 | 03B | 041 | 3-B18 |
| 78 74 506 | 03B | 043 | 3-B20 |
| 78 74 506 | 03B | 055 | 3-C08 |
| 78 74 506 | 03B | 061 | 3-C14 |
| 78 74 506 | 03B | 063 | 3-C16 |
| 78 74 506 | 03B | 065 | 3-C18 |
| 78 74 506 | 03B | 079 | 3-D08 |
| 78 74 506 | 03B | 085 | 3-D14 |
| 78 74 506 | 03B | 087 | 3-D16 |
| 78 74 506 | 03B | 093 | 3-D22 |
| 78 74 506 | 03B | 097 | 3-E02 |
| 78 74 506 | 03B | 113 | 3-E18 |
| 78 74 506 | 03B | 125 | 3-F06 |
| 78 74 506 | 03B | 127 | 3-F18 |
| 78 74 506 | 03B | 149 | 3-G06 |
| 78 74 530 | 05 | 009 | 4-A10 |
| 78 74 530 | 05 | 029 | 4-B06 |
| 78 74 548 | 05 | 005 | 4-A06 |
| 78 74 548 | 05 | 029 | 4-B06 |
| 78 74 746 | 08A | 129 | 5-F10 |
| 78 74 746 | 08A | 165 | 5-G22 |
| 78 74 753 | 08A | 129 | 5-F10 |
| 78 74 753 | 08A | 165 | 5-G22 |
| 78 74 761 | 08A | 129 | 5-F10 |
| 78 74 761 | 08A | 165 | 5-G22 |
| 78 74 779 | 08A | 129 | 5-F10 |
| 78 74 779 | 08A | 165 | 5-G22 |
| 79 00 335 | 08C | 025 | 7-B02 |
| 79 00 335 | 08C | 035 | 7-E12 |
| 79 03 743 | 07 | 005 | 4-E06 |
| 79 04 089 | 07 | 005 | 4-E06 |
| 79 04 089 | 07 | 019 | 4-E20 |
| 79 04 097 | 06 | 005 | 4-C06 |
| 79 04 113 | 06 | 005 | 4-C06 |
| 79 07 918 | 03A | 143 | 2-F24 |
| 79 10 474 | 08A | 081 | 5-D10 |
| 79 10 516 | 02 | 075 | 1-E04 |
| 79 10 516 | 02 | 079 | 1-E08 |
| 79 10 524 | 08A | 089 | 5-D18 |
| 79 10 540 | 02 | 139 | 1-G20 |
| 79 10 540 | 02 | 143 | 1-G24 |
| 79 10 540 | 08A | 063 | 5-C16 |
| 79 10 540 | 08A | 065 | 5-C18 |
| 79 10 540 | 08A | 067 | 5-C20 |
| 79 10 540 | 08A | 071 | 5-C24 |
| 79 10 557 | 02 | 139 | 1-G20 |
| 79 10 557 | 02 | 143 | 1-G24 |
| 79 10 565 | 05 | 013 | 4-A14 |
| 79 10 599 | 07 | 013 | 4-E14 |
| 79 11 522 | 08B | 197 | 6-I06 |
| 79 13 833 | 08A | 135 | 5-F16 |
| 79 13 833 | 08B | 193 | 6-I02 |
| 79 13 833 | 08B | 197 | 6-I06 |
| 79 14 690 | 02 | 157 | 1-H14 |
| 79 15 077 | 08B | 167 | 6-G24 |
| 79 15 077 | 08B | 179 | 6-H12 |
| 79 15 077 | 08B | 227 | 6-J12 |
| 79 15 093 | 05 | 025 | 4-B02 |
| 79 15 200 | 04 | 047 | 3-I24 |
| 79 15 549 | 08A | 017 | 5-A18 |
| 79 15 549 | 08A | 021 | 5-A22 |
| 79 15 556 | 02 | 159 | 1-H16 |
| 79 15 556 | 03A | 069 | 2-C22 |
| 79 15 556 | 03A | 073 | 2-D02 |
| 79 15 556 | 03A | 081 | 2-D10 |
| 79 15 556 | 03A | 135 | 2-F16 |
| 79 15 556 | 03A | 137 | 2-F18 |
| 79 15 556 | 03A | 139 | 2-F20 |
| 79 15 564 | 03A | 005 | 2-A06 |
| 79 15 564 | 08B | 079 | 6-D08 |
| 79 15 564 | 08B | 083 | 6-D12 |
| 79 15 564 | 08B | 093 | 6-D22 |
| 79 15 564 | 08B | 105 | 6-E10 |
| 79 15 564 | 08B | 117 | 6-E22 |
| 79 15 564 | 08B | 221 | 6-J06 |
| 79 15 663 | 08A | 081 | 5-D10 |
| 79 16 489 | 02 | 135 | 1-G16 |
| 79 16 489 | 03A | 035 | 2-B12 |
| 79 16 489 | 03A | 045 | 2-B22 |
| 79 16 489 | 08A | 089 | 5-D18 |
| 79 16 489 | 08A | 123 | 5-F04 |
| 79 16 489 | 08A | 135 | 5-F16 |
| 79 16 489 | 08B | 009 | 6-A10 |
| 79 16 489 | 08B | 011 | 6-A12 |
| 79 16 489 | 08B | 013 | 6-A14 |
| 79 16 489 | 08C | 013 | 7-A14 |
| 79 16 497 | 02 | 037 | 1-C14 |
| 79 16 497 | 08A | 063 | 5-C16 |
| 79 16 497 | 08A | 129 | 5-F10 |
| 79 16 497 | 08B | 013 | 6-A14 |
| 79 16 497 | 08B | 071 | 6-C24 |
| 79 16 497 | 08B | 085 | 6-D14 |
| 79 16 497 | 08B | 097 | 6-E02 |
| 79 16 497 | 08B | 109 | 6-E14 |
| 79 16 497 | 08B | 167 | 6-G24 |
| 79 16 497 | 08B | 177 | 6-H10 |
| 79 16 497 | 08B | 199 | 6-I08 |
| 79 16 513 | 08A | 087 | 5-D16 |
| 79 16 513 | 08B | 217 | 6-J02 |
| 79 18 253 | 08A | 115 | 5-E20 |
| 79 18 261 | 08B | 189 | 6-H22 |
| 79 18 279 | 08A | 115 | 5-E20 |
| 79 18 733 | 06 | 005 | 4-C06 |
| 79 19 483 | 08A | 059 | 5-C12 |
| 79 19 574 | 03A | 127 | 2-F08 |
| 79 21 307 | 03A | 031 | 2-B08 |
| 79 21 331 | 08B | 197 | 6-I06 |
| 79 21 885 | 03A | 071 | 2-C24 |
| 79 21 885 | 03A | 073 | 2-D02 |
| 79 22 206 | 03A | 073 | 2-D02 |
| 79 22 206 | 08A | 025 | 5-B02 |
| 79 22 206 | 08A | 145 | 5-G02 |
| 79 22 206 | 08B | 073 | 6-D02 |
| 79 22 206 | 08B | 087 | 6-D16 |
| 79 22 206 | 08B | 099 | 6-E04 |
| 79 22 206 | 08B | 111 | 6-E16 |
| 79 22 206 | 08B | 123 | 6-F04 |
| 79 22 206 | 08B | 129 | 6-F10 |
| 79 22 206 | 08B | 133 | 6-F14 |
| 79 22 206 | 08B | 137 | 6-F18 |
| 79 22 214 | 08B | 193 | 6-I02 |
| 79 22 230 | 03A | 045 | 2-B22 |
| 79 22 230 | 08A | 099 | 5-E04 |
| 79 22 263 | 08A | 079 | 5-D08 |
| 79 22 263 | 08A | 081 | 5-D10 |
| 79 22 271 | 08B | 169 | 6-H02 |
| 79 22 271 | 08B | 183 | 6-H16 |
| 79 22 271 | 08B | 227 | 6-J12 |
| 79 22 289 | 02 | 049 | 1-D02 |
| 79 22 289 | 08A | 017 | 5-A18 |
| 79 22 289 | 08A | 021 | 5-A22 |
| 79 22 289 | 08A | 075 | 5-D04 |
| 79 22 289 | 08B | 017 | 6-A18 |
| 79 22 347 | 02 | 057 | 1-D10 |
| 79 22 347 | 03A | 063 | 2-C16 |
| 79 22 347 | 03A | 069 | 2-C22 |
| 79 22 347 | 03A | 137 | 2-F18 |
| 79 22 347 | 03A | 145 | 2-G02 |
| 79 22 347 | 08C | 009 | 7-A10 |
| 79 22 354 | 02 | 135 | 1-G16 |
| 79 22 354 | 03A | 067 | 2-C20 |
| 79 22 354 | 08A | 059 | 5-C12 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

# 7-E15 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 79 22 354 | 08A | 101 | 5-E06 |
| 79 22 354 | 08A | 109 | 5-E14 |
| 79 22 354 | 08A | 111 | 5-E16 |
| 79 22 354 | 08A | 143 | 5-F24 |
| 79 22 354 | 08A | 147 | 5-G04 |
| 79 22 354 | 08A | 161 | 5-G18 |
| 79 22 354 | 08B | 011 | 6-A12 |
| 79 22 354 | 08C | 007 | 7-A08 |
| 79 22 354 | 08C | 009 | 7-A10 |
| 79 22 362 | 03A | 071 | 2-C24 |
| 79 22 362 | 08B | 017 | 6-A18 |
| 79 22 362 | 08C | 009 | 7-A10 |
| 79 22 370 | 02 | 049 | 1-D02 |
| 79 22 370 | 08B | 009 | 6-A10 |
| 79 22 370 | 08B | 205 | 6-I14 |
| 79 22 370 | 08C | 009 | 7-A10 |
| 79 22 388 | 03A | 041 | 2-B18 |
| 79 22 396 | 08B | 077 | 6-D06 |
| 79 22 396 | 08B | 083 | 6-D12 |
| 79 22 396 | 08B | 093 | 6-D22 |
| 79 22 396 | 08B | 095 | 6-D24 |
| 79 22 396 | 08B | 105 | 6-E10 |
| 79 22 396 | 08B | 107 | 6-E12 |
| 79 22 396 | 08B | 117 | 6-E22 |
| 79 22 396 | 08B | 119 | 6-E24 |
| 79 22 396 | 08B | 161 | 6-G18 |
| 79 22 396 | 08B | 165 | 6-G22 |
| 79 22 396 | 08B | 183 | 6-H16 |
| 79 22 396 | 08B | 225 | 6-J10 |
| 79 22 396 | 08B | 227 | 6-J12 |
| 79 22 420 | 02 | 179 | 1-I12 |
| 79 22 420 | 02 | 193 | 1-J02 |
| 79 22 420 | 03A | 139 | 2-F20 |
| 79 22 420 | 08A | 079 | 5-D08 |
| 79 22 420 | 08A | 081 | 5-D10 |
| 79 22 420 | 08A | 117 | 5-E22 |
| 79 22 420 | 08A | 127 | 5-F08 |
| 79 22 420 | 08A | 141 | 5-F22 |
| 79 22 420 | 08A | 143 | 5-F24 |
| 79 22 420 | 08A | 145 | 5-G02 |
| 79 22 420 | 08B | 121 | 6-F02 |
| 79 22 420 | 08C | 011 | 7-A12 |
| 79 22 420 | 08C | 023 | 7-A24 |
| 79 22 420 | 08C | 029 | 7-B06 |
| 79 22 420 | 08C | 033 | 7-B10 |
| 79 22 420 | 08C | 035 | 7-B12 |
| 79 22 420 | 08C | 039 | 7-B16 |
| 79 22 420 | 08C | 041 | 7-B18 |
| 79 22 420 | 08C | 045 | 7-B22 |
| 79 22 420 | 08C | 047 | 7-B24 |
| 79 22 420 | 08C | 051 | 7-C04 |
| 79 22 438 | 02 | 179 | 1-I12 |
| 79 22 438 | 03A | 027 | 2-B04 |
| 79 22 438 | 03A | 031 | 2-B08 |
| 79 22 438 | 03A | 035 | 2-B12 |
| 79 22 438 | 03A | 039 | 2-B16 |
| 79 22 438 | 08A | 147 | 5-G04 |
| 79 22 446 | 08A | 057 | 5-C10 |
| 79 22 446 | 08A | 115 | 5-E20 |
| 79 22 461 | 08C | 023 | 7-A24 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 79 22 461 | 08C | 029 | 7-B06 |
| 79 22 461 | 08C | 033 | 7-B10 |
| 79 22 461 | 08C | 035 | 7-B12 |
| 79 22 461 | 08C | 039 | 7-B16 |
| 79 22 461 | 08C | 041 | 7-B18 |
| 79 22 461 | 08C | 045 | 7-B22 |
| 79 22 461 | 08C | 047 | 7-B24 |
| 79 22 461 | 08C | 051 | 7-C04 |
| 79 22 495 | 08A | 129 | 5-F10 |
| 79 22 503 | 02 | 067 | 1-D20 |
| 79 22 503 | 02 | 139 | 1-G20 |
| 79 22 503 | 02 | 143 | 1-G24 |
| 79 22 503 | 02 | 147 | 1-H04 |
| 79 22 503 | 02 | 149 | 1-H06 |
| 79 22 503 | 02 | 151 | 1-H08 |
| 79 22 503 | 02 | 203 | 1-J12 |
| 79 22 503 | 02 | 205 | 1-J14 |
| 79 22 636 | 03A | 049 | 2-C02 |
| 79 22 636 | 03A | 151 | 2-G08 |
| 79 22 636 | 08A | 135 | 5-F16 |
| 79 22 727 | 02 | 099 | 1-F04 |
| 79 22 727 | 03A | 027 | 2-B04 |
| 79 22 727 | 03A | 031 | 2-B08 |
| 79 22 727 | 03A | 127 | 2-F08 |
| 79 22 727 | 08A | 173 | 5-H06 |
| 79 22 735 | 03A | 137 | 2-F18 |
| 79 22 735 | 08C | 007 | 7-A08 |
| 79 22 735 | 08C | 035 | 7-B12 |
| 79 22 800 | 02 | 185 | 1-I18 |
| 79 22 800 | 03A | 029 | 2-B06 |
| 79 22 800 | 03A | 063 | 2-C16 |
| 79 22 800 | 03A | 135 | 2-F16 |
| 79 22 800 | 03A | 137 | 2-F18 |
| 79 22 800 | 03A | 145 | 2-G02 |
| 79 22 818 | 02 | 091 | 1-E20 |
| 79 22 818 | 02 | 179 | 1-I12 |
| 79 22 818 | 03A | 067 | 2-C20 |
| 79 22 818 | 03A | 069 | 2-C22 |
| 79 22 818 | 03A | 073 | 2-D02 |
| 79 22 818 | 03A | 079 | 2-D08 |
| 79 22 818 | 03A | 127 | 2-F08 |
| 79 22 818 | 08B | 009 | 6-A10 |
| 79 22 818 | 08B | 013 | 6-A14 |
| 79 22 826 | 03A | 137 | 2-F18 |
| 79 22 859 | 03A | 077 | 2-D06 |
| 79 22 891 | 02 | 163 | 1-H20 |
| 79 22 891 | 02 | 169 | 1-I02 |
| 79 22 891 | 02 | 179 | 1-I12 |
| 79 22 891 | 02 | 195 | 1-J04 |
| 79 22 891 | 03A | 005 | 2-A06 |
| 79 22 891 | 03A | 077 | 2-D06 |
| 79 22 891 | 03A | 081 | 2-D10 |
| 79 22 891 | 03A | 131 | 2-F12 |
| 79 22 891 | 03A | 135 | 2-F16 |
| 79 22 891 | 03A | 137 | 2-F18 |
| 79 22 891 | 04 | 007 | 3-H08 |
| 79 22 891 | 04 | 073 | 3-K02 |
| 79 22 891 | 04 | 081 | 3-K10 |
| 79 22 891 | 05 | 015 | 4-A16 |
| 79 22 891 | 05 | 017 | 4-A18 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 79 22 891 | 05 | 019 | 4-A20 |
| 79 22 891 | 05 | 025 | 4-B02 |
| 79 22 891 | 08A | 039 | 5-B16 |
| 79 22 891 | 08A | 057 | 5-C10 |
| 79 22 891 | 08C | 009 | 7-A10 |
| 79 22 891 | 08C | 013 | 7-A14 |
| 79 22 891 | 08C | 033 | 7-B10 |
| 79 22 891 | 08C | 035 | 7-B12 |
| 79 22 891 | 08C | 039 | 7-B16 |
| 79 22 891 | 08C | 041 | 7-B18 |
| 79 22 891 | 08C | 045 | 7-B22 |
| 79 22 909 | 03A | 027 | 2-B04 |
| 79 22 909 | 03A | 133 | 2-F14 |
| 79 22 909 | 08A | 057 | 5-C10 |
| 79 22 933 | 02 | 179 | 1-I12 |
| 79 22 974 | 08A | 129 | 5-F10 |
| 79 22 974 | 08A | 185 | 5-H18 |
| 79 22 982 | 08A | 129 | 5-F10 |
| 79 22 982 | 08A | 165 | 5-G22 |
| 79 22 982 | 08A | 185 | 5-H18 |
| 79 23 014 | 02 | 063 | 1-D16 |
| 79 23 014 | 02 | 067 | 1-D20 |
| 79 23 014 | 02 | 071 | 1-D24 |
| 79 33 443 | 02 | 133 | 1-G14 |
| 79 33 443 | 02 | 185 | 1-I18 |
| 79 33 443 | 03A | 059 | 2-C12 |
| 79 33 443 | 03A | 125 | 2-F06 |
| 79 33 443 | 08A | 057 | 5-C10 |
| 79 33 443 | 08A | 165 | 5-G22 |
| 79 33 443 | 08A | 167 | 5-G24 |
| 79 33 443 | 08A | 169 | 5-H02 |
| 79 33 443 | 08B | 013 | 6-A14 |
| 79 33 443 | 08C | 013 | 7-A14 |
| 79 33 443 | 08C | 035 | 7-B12 |
| 79 33 518 | 03A | 125 | 2-F06 |
| 79 33 567 | 03A | 127 | 2-F08 |
| 79 33 682 | 03A | 129 | 2-F10 |
| 79 33 682 | 08C | 007 | 7-A08 |
| 79 33 682 | 08C | 009 | 7-A10 |
| 79 33 807 | 04 | 075 | 3-K04 |
| 79 33 807 | 08C | 013 | 7-A14 |
| 79 33 815 | 08A | 079 | 5-D08 |
| 79 33 823 | 04 | 049 | 3-J02 |
| 79 33 823 | 04 | 065 | 3-J18 |
| 79 33 823 | 04 | 075 | 3-K04 |
| 79 33 849 | 03A | 007 | 2-A08 |
| 79 33 849 | 03A | 009 | 2-A10 |
| 79 33 849 | 04 | 007 | 3-H08 |
| 79 33 849 | 08A | 057 | 5-C10 |
| 79 33 856 | 05 | 017 | 4-A18 |
| 79 33 856 | 05 | 021 | 4-A22 |
| 79 33 872 | 06 | 009 | 4-C10 |
| 79 34 102 | 08B | 005 | 6-A06 |
| 79 34 136 | 08A | 075 | 5-D04 |
| 79 34 136 | 08A | 079 | 5-D08 |
| 79 34 136 | 08A | 081 | 5-D10 |
| 79 34 136 | 08A | 089 | 5-D18 |
| 79 34 300 | 03A | 015 | 2-A16 |
| 79 34 318 | 04 | 075 | 3-K04 |
| 79 34 318 | 08B | 017 | 6-A18 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 79 34 433 | 08A | 071 | 5-C24 |
| 79 34 771 | 04 | 075 | 3-K04 |
| 79 34 797 | 04 | 049 | 3-J02 |
| 79 34 797 | 08B | 079 | 6-D08 |
| 79 34 797 | 08B | 083 | 6-D12 |
| 79 34 797 | 08B | 093 | 6-D22 |
| 79 34 797 | 08B | 105 | 6-E10 |
| 79 34 797 | 08B | 117 | 6-E22 |
| 79 35 208 | 02 | 105 | 1-F10 |
| 79 35 984 | 04 | 075 | 3-K04 |
| 79 36 008 | 08B | 005 | 6-A06 |
| 79 36 008 | 08B | 229 | 6-J14 |
| 79 36 016 | 04 | 075 | 3-K04 |
| 79 36 016 | 08B | 179 | 6-H12 |
| 79 36 701 | 08A | 115 | 5-E20 |
| 79 37 956 | 08A | 079 | 5-D08 |
| 79 37 956 | 08A | 081 | 5-D10 |
| 79 37 964 | 08A | 075 | 5-D04 |
| 79 39 804 | 08A | 017 | 5-A18 |
| 79 39 804 | 08A | 021 | 5-A22 |
| 79 40 398 | 08C | 013 | 7-A14 |
| 79 40 398 | 08C | 035 | 7-B12 |
| 79 40 398 | 08C | 039 | 7-B16 |
| 79 40 398 | 08C | 041 | 7-B18 |
| 79 40 398 | 08C | 045 | 7-B22 |
| 79 40 398 | 08C | 047 | 7-B24 |
| 79 40 398 | 08C | 051 | 7-C04 |
| 79 40 406 | 08C | 013 | 7-A14 |
| 79 40 455 | 07 | 017 | 4-E18 |
| 79 40 463 | 07 | 005 | 4-E06 |
| 79 46 148 | 08B | 151 | 6-G08 |
| 79 46 148 | 08B | 159 | 6-G16 |
| 79 46 742 | 03A | 073 | 2-D02 |
| 79 48 995 | 08A | 115 | 5-E20 |
| 79 49 084 | 03A | 127 | 2-F08 |
| 79 51 353 | 04 | 049 | 3-J02 |
| 79 51 353 | 04 | 075 | 3-K04 |
| 79 51 353 | 04 | 079 | 3-K08 |
| 79 51 379 | 04 | 049 | 3-J02 |
| 79 51 437 | 04 | 027 | 3-I04 |
| 79 51 783 | 03A | 125 | 2-F06 |
| 79 51 783 | 08A | 037 | 5-B14 |
| 79 56 105 | 04 | 075 | 3-K04 |
| 79 56 154 | 04 | 013 | 3-H14 |
| 79 56 154 | 04 | 021 | 3-H22 |
| 79 56 212 | 08B | 151 | 6-G08 |
| 79 56 212 | 08B | 159 | 6-G16 |
| 79 56 238 | 08A | 057 | 5-C10 |
| 79 58 770 | 02 | 179 | 1-I12 |
| 79 58 770 | 08C | 055 | 7-C08 |
| 79 58 861 | 02 | 171 | 1-I04 |
| 79 61 311 | 08A | 057 | 5-C10 |
| 79 61 329 | 02 | 057 | 1-D10 |
| 79 61 337 | 03A | 073 | 2-D02 |
| 79 61 345 | 03A | 067 | 2-C20 |
| 79 61 634 | 08A | 131 | 5-F12 |
| 79 61 634 | 08B | 005 | 6-A06 |
| 79 61 642 | 08A | 027 | 5-B04 |
| 79 61 642 | 08A | 039 | 5-B16 |
| 79 61 642 | 08A | 057 | 5-C10 |



# 7-E16 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 79 61 642 | 08B | 013 | 6-A14 |
| 79 61 642 | 08B | 015 | 6-A16 |
| 79 61 642 | 08B | 151 | 6-G08 |
| 79 61 642 | 08B | 163 | 6-G20 |
| 79 61 642 | 08B | 225 | 6-J10 |
| 79 61 642 | 08C | 011 | 7-A12 |
| 79 61 659 | 02 | 171 | 1-I04 |
| 79 61 675 | 08A | 013 | 5-A14 |
| 79 61 675 | 08B | 197 | 6-I06 |
| 79 61 691 | 02 | 093 | 1-E22 |
| 79 61 691 | 08A | 015 | 5-A16 |
| 79 61 691 | 08B | 013 | 6-A14 |
| 79 61 709 | 08C | 007 | 7-A08 |
| 79 61 709 | 08C | 013 | 7-A14 |
| 79 61 980 | 03A | 125 | 2-F06 |
| 79 62 004 | 03A | 133 | 2-F14 |
| 79 62 442 | 02 | 047 | 1-C24 |
| 79 63 135 | 03A | 055 | 2-C08 |
| 79 63 135 | 04 | 007 | 3-H08 |
| 79 63 416 | 07 | 017 | 4-E18 |
| 79 63 507 | 06 | 019 | 4-C20 |
| 79 63 507 | 06 | 021 | 4-C22 |
| 79 63 507 | 06 | 023 | 4-C24 |
| 79 63 515 | 02 | 155 | 1-H12 |
| 79 63 515 | 02 | 161 | 1-H18 |
| 79 63 523 | 02 | 119 | 1-F24 |
| 79 63 531 | 02 | 119 | 1-F24 |
| 79 63 531 | 06 | 021 | 4-C22 |
| 79 63 549 | 02 | 119 | 1-F24 |
| 79 63 549 | 02 | 155 | 1-H12 |
| 79 63 556 | 02 | 155 | 1-H12 |
| 79 63 887 | 02 | 093 | 1-E22 |
| 79 63 887 | 04 | 007 | 3-H08 |
| 79 63 895 | 02 | 059 | 1-D12 |
| 79 63 895 | 02 | 063 | 1-D16 |
| 79 63 895 | 02 | 067 | 1-D20 |
| 79 63 895 | 02 | 071 | 1-D24 |
| 79 64 711 | 08A | 071 | 5-C24 |
| 79 65 338 | 08A | 025 | 5-B02 |
| 79 65 338 | 08B | 193 | 6-I02 |
| 79 65 361 | 08C | 033 | 7-B10 |
| 79 65 544 | 02 | 171 | 1-I04 |
| 79 65 544 | 08A | 059 | 5-C12 |
| 79 65 569 | 04 | 013 | 3-H14 |
| 79 65 569 | 04 | 019 | 3-H20 |
| 79 65 635 | 08A | 011 | 5-A12 |
| 79 65 684 | 03A | 077 | 2-D06 |
| 79 65 684 | 03A | 081 | 2-D10 |
| 79 65 684 | 08B | 193 | 6-I02 |
| 79 65 767 | 02 | 143 | 1-G24 |
| 79 65 767 | 02 | 149 | 1-H06 |
| 79 65 767 | 02 | 151 | 1-H08 |
| 79 65 767 | 04 | 021 | 3-H22 |
| 79 65 775 | 08B | 213 | 6-I22 |
| 79 65 809 | 08C | 013 | 7-A14 |
| 79 65 809 | 08C | 035 | 7-B12 |
| 79 65 809 | 08C | 039 | 7-B16 |
| 79 65 809 | 08C | 041 | 7-B18 |
| 79 65 809 | 08C | 045 | 7-B22 |
| 79 65 809 | 08C | 047 | 7-B24 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 79 65 809 | 08C | 051 | 7-C04 |
| 79 65 825 | 04 | 075 | 3-K04 |
| 79 65 833 | 08A | 117 | 5-E22 |
| 79 65 833 | 08A | 127 | 5-F08 |
| 79 67 581 | 03A | 077 | 2-D06 |
| 79 67 581 | 08A | 075 | 5-D04 |
| 79 67 581 | 08B | 193 | 6-I02 |
| 79 67 763 | 08B | 005 | 6-A06 |
| 79 67 771 | 08A | 117 | 5-E22 |
| 79 67 771 | 08A | 127 | 5-F08 |
| 79 67 789 | 02 | 139 | 1-G20 |
| 79 67 789 | 02 | 143 | 1-G24 |
| 79 67 789 | 02 | 147 | 1-H04 |
| 79 67 789 | 02 | 151 | 1-H08 |
| 79 67 789 | 02 | 201 | 1-J10 |
| 79 67 789 | 02 | 203 | 1-J12 |
| 79 67 789 | 02 | 205 | 1-J14 |
| 79 67 789 | 06 | 007 | 4-C08 |
| 79 67 870 | 02 | 137 | 1-G18 |
| 79 67 870 | 02 | 139 | 1-G20 |
| 79 67 870 | 02 | 145 | 1-H02 |
| 79 67 870 | 02 | 147 | 1-H04 |
| 79 67 870 | 02 | 203 | 1-J12 |
| 79 67 870 | 02 | 205 | 1-J14 |
| 79 67 912 | 04 | 079 | 3-K08 |
| 79 67 938 | 02 | 011 | 1-B12 |
| 79 67 938 | 04 | 021 | 3-H22 |
| 79 67 938 | 08A | 059 | 5-C12 |
| 79 67 938 | 08B | 193 | 6-I02 |
| 79 67 938 | 08C | 017 | 7-A18 |
| 79 67 938 | 08C | 041 | 7-B18 |
| 79 67 946 | 06 | 019 | 4-C20 |
| 79 67 946 | 06 | 023 | 4-C24 |
| 79 67 953 | 02 | 155 | 1-H12 |
| 79 67 953 | 02 | 161 | 1-H18 |
| 79 67 953 | 05 | 027 | 4-B04 |
| 79 67 953 | 06 | 021 | 4-C22 |
| 79 67 953 | 08A | 007 | 5-A08 |
| 79 67 953 | 08A | 039 | 5-B16 |
| 79 67 953 | 08A | 057 | 5-C10 |
| 79 67 953 | 08A | 059 | 5-C12 |
| 79 67 953 | 08A | 065 | 5-C18 |
| 79 67 953 | 08A | 087 | 5-D16 |
| 79 67 953 | 08A | 141 | 5-F22 |
| 79 67 953 | 08A | 143 | 5-F24 |
| 79 67 953 | 08A | 145 | 5-G02 |
| 79 67 953 | 08A | 147 | 5-G04 |
| 79 67 953 | 08C | 017 | 7-A18 |
| 79 67 953 | 08C | 019 | 7-A20 |
| 79 67 953 | 08C | 039 | 7-B16 |
| 79 67 953 | 08C | 041 | 7-B18 |
| 79 67 953 | 08C | 047 | 7-B24 |
| 79 67 979 | 06 | 019 | 4-C20 |
| 79 67 979 | 06 | 023 | 4-C24 |
| 79 67 979 | 08A | 145 | 5-G02 |
| 79 67 979 | 08C | 017 | 7-A18 |
| 79 67 979 | 08C | 021 | 7-A22 |
| 79 67 979 | 08C | 035 | 7-B12 |
| 79 67 979 | 08C | 039 | 7-B16 |
| 79 67 979 | 08C | 041 | 7-B18 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 79 67 979 | 08C | 045 | 7-B22 |
| 79 67 979 | 08C | 047 | 7-B24 |
| 79 67 979 | 08C | 051 | 7-C04 |
| 79 68 001 | 03A | 083 | 2-D12 |
| 79 68 001 | 03A | 135 | 2-F16 |
| 79 68 001 | 08A | 101 | 5-E06 |
| 79 68 001 | 08A | 109 | 5-E14 |
| 79 68 001 | 08A | 111 | 5-E16 |
| 79 68 001 | 08A | 143 | 5-F24 |
| 79 68 001 | 08A | 147 | 5-G04 |
| 79 68 001 | 08A | 161 | 5-G18 |
| 79 68 001 | 08B | 015 | 6-A16 |
| 79 68 001 | 08B | 017 | 6-A18 |
| 79 68 068 | 03B | 009 | 3-A10 |
| 79 68 068 | 03B | 017 | 3-A18 |
| 79 68 068 | 03B | 021 | 3-A22 |
| 79 68 068 | 03B | 035 | 3-B12 |
| 79 68 068 | 03B | 043 | 3-B20 |
| 79 68 068 | 03B | 057 | 3-C10 |
| 79 68 068 | 03B | 065 | 3-C18 |
| 79 68 068 | 03B | 067 | 3-C20 |
| 79 68 068 | 03B | 081 | 3-D10 |
| 79 68 068 | 03B | 091 | 3-D20 |
| 79 68 068 | 03B | 095 | 3-D24 |
| 79 68 068 | 03B | 105 | 3-E10 |
| 79 68 068 | 03B | 115 | 3-E20 |
| 79 68 068 | 03B | 127 | 3-F08 |
| 79 68 068 | 03B | 139 | 3-F20 |
| 79 68 076 | 08A | 075 | 5-D04 |
| 79 68 084 | 08B | 009 | 6-A10 |
| 79 68 308 | 02 | 055 | 1-D08 |
| 79 68 308 | 02 | 057 | 1-D10 |
| 79 68 308 | 02 | 059 | 1-D12 |
| 79 68 308 | 02 | 061 | 1-D14 |
| 79 68 308 | 02 | 069 | 1-D22 |
| 79 68 308 | 02 | 081 | 1-E10 |
| 79 68 308 | 02 | 091 | 1-E20 |
| 79 68 308 | 02 | 205 | 1-J14 |
| 79 68 415 | 02 | 201 | 1-J10 |
| 79 68 415 | 06 | 007 | 4-C08 |
| 79 68 480 | 05 | 005 | 4-A06 |
| 79 68 506 | 03A | 137 | 2-F18 |
| 79 68 514 | 03A | 057 | 2-C10 |
| 79 68 555 | 04 | 081 | 3-K10 |
| 79 68 555 | 08B | 015 | 6-A16 |
| 79 68 555 | 08C | 007 | 7-A08 |
| 79 68 878 | 08B | 217 | 6-J02 |
| 79 68 902 | 08A | 119 | 5-E24 |
| 79 69 215 | 08B | 203 | 6-I12 |
| 79 69 223 | 02 | 139 | 1-G20 |
| 79 69 223 | 02 | 167 | 1-H24 |
| 79 69 223 | 03A | 027 | 2-B04 |
| 79 69 223 | 03A | 029 | 2-B06 |
| 79 69 223 | 03A | 031 | 2-B08 |
| 79 69 223 | 03A | 033 | 2-B10 |
| 79 69 223 | 04 | 075 | 3-K04 |
| 79 69 223 | 08A | 059 | 5-C12 |
| 79 69 223 | 08A | 065 | 5-C18 |
| 79 69 223 | 08A | 101 | 5-E06 |
| 79 69 223 | 08A | 121 | 5-F02 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 79 69 272 | 03A | 031 | 2-B08 |
| 79 69 306 | 02 | 011 | 1-B12 |
| 79 69 306 | 06 | 005 | 4-C06 |
| 79 69 306 | 08A | 007 | 5-A08 |
| 79 69 314 | 08A | 095 | 5-D24 |
| 79 69 314 | 08A | 129 | 5-F10 |
| 79 69 314 | 08A | 147 | 5-G04 |
| 79 69 314 | 08A | 185 | 5-H18 |
| 79 69 314 | 08B | 015 | 6-A16 |
| 79 69 314 | 08B | 083 | 6-D12 |
| 79 69 314 | 08B | 095 | 6-D24 |
| 79 69 314 | 08B | 107 | 6-E12 |
| 79 69 314 | 08B | 119 | 6-E24 |
| 79 69 348 | 03A | 125 | 2-F06 |
| 79 69 355 | 02 | 139 | 1-G20 |
| 79 69 363 | 03A | 125 | 2-F06 |
| 79 69 363 | 06 | 021 | 4-C22 |
| 79 69 439 | 03A | 125 | 2-F06 |
| 79 69 454 | 03A | 125 | 2-F06 |
| 79 69 975 | 04 | 075 | 3-K04 |
| 79 70 015 | 03A | 051 | 2-C04 |
| 79 70 015 | 04 | 019 | 3-H20 |
| 79 70 015 | 08C | 035 | 7-B12 |
| 79 70 015 | 08C | 039 | 7-B16 |
| 79 70 015 | 08C | 041 | 7-B18 |
| 79 70 015 | 08C | 045 | 7-B22 |
| 79 70 015 | 08C | 047 | 7-B24 |
| 79 70 015 | 08C | 051 | 7-C04 |
| 79 70 031 | 02 | 153 | 1-H10 |
| 79 70 049 | 02 | 155 | 1-H12 |
| 79 70 049 | 02 | 161 | 1-H18 |
| 79 70 049 | 02 | 177 | 1-I10 |
| 79 70 056 | 02 | 155 | 1-H12 |
| 79 70 056 | 02 | 177 | 1-I10 |
| 79 70 056 | 08A | 017 | 5-A18 |
| 79 70 056 | 08A | 021 | 5-A22 |
| 79 70 064 | 02 | 047 | 1-C24 |
| 79 70 064 | 02 | 111 | 1-F16 |
| 79 70 064 | 02 | 117 | 1-F22 |
| 79 70 064 | 02 | 183 | 1-I16 |
| 79 70 064 | 08C | 033 | 7-B10 |
| 79 70 072 | 02 | 057 | 1-D10 |
| 79 70 072 | 02 | 117 | 1-F22 |
| 79 70 072 | 02 | 177 | 1-I10 |
| 79 70 080 | 02 | 161 | 1-H18 |
| 79 70 080 | 02 | 177 | 1-I10 |
| 79 70 098 | 02 | 153 | 1-H10 |
| 79 70 098 | 02 | 177 | 1-I10 |
| 79 70 106 | 02 | 153 | 1-H10 |
| 79 70 106 | 04 | 081 | 3-K10 |
| 79 70 106 | 08C | 035 | 7-B12 |
| 79 70 106 | 08C | 039 | 7-B16 |
| 79 70 106 | 08C | 041 | 7-B18 |
| 79 70 106 | 08C | 045 | 7-B22 |
| 79 70 106 | 08C | 047 | 7-B24 |
| 79 70 106 | 08C | 051 | 7-C04 |
| 79 70 130 | 02 | 049 | 1-D02 |
| 79 70 130 | 02 | 169 | 1-I02 |
| 79 70 130 | 02 | 171 | 1-I04 |
| 79 70 130 | 06 | 019 | 4-C20 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

# 7-E17 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 79 70 130 | 06 | 021 | 4-C22 |
| 79 70 130 | 06 | 023 | 4-C24 |
| 79 70 148 | 02 | 047 | 1-C24 |
| 79 70 148 | 02 | 049 | 1-D02 |
| 79 70 148 | 02 | 053 | 1-D06 |
| 79 70 148 | 02 | 171 | 1-I04 |
| 79 70 148 | 02 | 181 | 1-I14 |
| 79 70 148 | 02 | 183 | 1-I16 |
| 79 70 155 | 02 | 049 | 1-D02 |
| 79 70 155 | 02 | 053 | 1-D06 |
| 79 70 155 | 02 | 171 | 1-I04 |
| 79 70 163 | 02 | 047 | 1-C24 |
| 79 70 163 | 04 | 077 | 3-K06 |
| 79 70 189 | 02 | 049 | 1-D02 |
| 79 70 262 | 08B | 137 | 6-F18 |
| 79 70 262 | 08B | 151 | 6-G08 |
| 79 70 262 | 08B | 159 | 6-G16 |
| 79 70 288 | 08B | 193 | 6-I02 |
| 79 70 296 | 02 | 143 | 1-G24 |
| 79 70 312 | 08B | 125 | 6-F06 |
| 79 70 312 | 08B | 129 | 6-F10 |
| 79 70 312 | 08B | 133 | 6-F14 |
| 79 70 312 | 08B | 137 | 6-F18 |
| 79 70 320 | 08B | 129 | 6-F10 |
| 79 70 320 | 08B | 133 | 6-F14 |
| 79 70 320 | 08B | 201 | 6-I10 |
| 79 70 346 | 03A | 049 | 2-C02 |
| 79 70 346 | 08C | 039 | 7-B16 |
| 79 70 346 | 08C | 041 | 7-B18 |
| 79 70 346 | 08C | 055 | 7-C08 |
| 79 70 353 | 02 | 011 | 1-B12 |
| 79 70 353 | 02 | 199 | 1-J08 |
| 79 70 353 | 02 | 201 | 1-J10 |
| 79 70 403 | 02 | 019 | 1-B20 |
| 79 70 403 | 08A | 141 | 5-F22 |
| 79 70 403 | 08A | 143 | 5-F24 |
| 79 70 411 | 08C | 009 | 7-A10 |
| 79 70 429 | 02 | 139 | 1-G20 |
| 79 70 429 | 02 | 143 | 1-G24 |
| 79 70 429 | 02 | 149 | 1-H06 |
| 79 70 429 | 02 | 151 | 1-H08 |
| 79 70 437 | 02 | 147 | 1-H04 |
| 79 70 437 | 02 | 203 | 1-J12 |
| 79 70 437 | 02 | 205 | 1-J14 |
| 79 70 460 | 03A | 005 | 2-A06 |
| 79 70 478 | 08B | 199 | 6-I08 |
| 79 70 536 | 02 | 057 | 1-D10 |
| 79 70 536 | 08A | 103 | 5-E08 |
| 79 70 536 | 08B | 121 | 6-F02 |
| 79 70 536 | 08B | 153 | 6-G10 |
| 79 70 536 | 08B | 163 | 6-G20 |
| 79 70 536 | 08B | 203 | 6-I12 |
| 79 70 536 | 08B | 215 | 6-I24 |
| 79 70 536 | 08B | 225 | 6-J10 |
| 79 70 601 | 03A | 083 | 2-D12 |
| 79 70 601 | 03A | 133 | 2-F14 |
| 79 70 601 | 08A | 101 | 5-E06 |
| 79 70 601 | 08A | 109 | 5-E14 |
| 79 70 601 | 08A | 111 | 5-E16 |
| 79 70 601 | 08A | 161 | 5-G18 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 79 71 294 | 02 | 103 | 1-F08 |
| 79 71 294 | 02 | 107 | 1-F12 |
| 79 71 294 | 02 | 115 | 1-F20 |
| 79 71 294 | 02 | 157 | 1-H14 |
| 79 71 294 | 08A | 067 | 5-C20 |
| 79 71 294 | 08A | 123 | 5-F04 |
| 79 71 294 | 08B | 169 | 6-H02 |
| 79 71 294 | 08B | 183 | 6-H16 |
| 79 71 294 | 08B | 227 | 6-J12 |
| 79 71 344 | 02 | 081 | 1-E10 |
| 79 71 344 | 03A | 061 | 2-C14 |
| 79 71 344 | 08A | 173 | 5-H06 |
| 79 71 344 | 08A | 175 | 5-H08 |
| 79 71 344 | 08A | 177 | 5-H10 |
| 79 71 344 | 08A | 179 | 5-H12 |
| 79 71 344 | 08A | 181 | 5-H14 |
| 79 71 344 | 08A | 183 | 5-H16 |
| 79 71 351 | 03B | 051 | 3-C04 |
| 79 71 351 | 03B | 071 | 3-C24 |
| 79 71 351 | 03B | 099 | 3-E04 |
| 79 71 351 | 08B | 015 | 6-A16 |
| 79 71 393 | 08B | 007 | 6-A08 |
| 79 71 393 | 08C | 013 | 7-A14 |
| 79 71 500 | 03A | 077 | 2-D06 |
| 79 71 518 | 03A | 077 | 2-D06 |
| 79 71 518 | 08B | 169 | 6-H02 |
| 79 71 518 | 08B | 183 | 6-H16 |
| 79 71 518 | 08B | 187 | 6-H20 |
| 79 71 518 | 08B | 227 | 6-J12 |
| 79 71 633 | 08B | 193 | 6-I02 |
| 79 71 641 | 03A | 031 | 2-B08 |
| 79 71 641 | 03A | 035 | 2-B12 |
| 79 71 658 | 02 | 139 | 1-G20 |
| 79 71 658 | 02 | 153 | 1-H10 |
| 79 71 658 | 02 | 159 | 1-H16 |
| 79 71 658 | 02 | 163 | 1-H20 |
| 79 71 658 | 02 | 171 | 1-I04 |
| 79 71 658 | 02 | 195 | 1-J04 |
| 79 71 658 | 03A | 027 | 2-B04 |
| 79 71 658 | 03A | 029 | 2-B06 |
| 79 71 658 | 03A | 031 | 2-B08 |
| 79 71 658 | 03A | 033 | 2-B10 |
| 79 71 658 | 03A | 057 | 2-C10 |
| 79 71 658 | 04 | 081 | 3-K10 |
| 79 71 658 | 08A | 005 | 5-A06 |
| 79 71 658 | 08A | 011 | 5-A12 |
| 79 71 658 | 08A | 057 | 5-C10 |
| 79 71 658 | 08A | 059 | 5-C12 |
| 79 71 658 | 08A | 101 | 5-E06 |
| 79 71 658 | 08A | 103 | 5-E08 |
| 79 71 658 | 08A | 123 | 5-F04 |
| 79 71 708 | 03B | 005 | 3-A06 |
| 79 71 708 | 03B | 017 | 3-A18 |
| 79 71 708 | 03B | 021 | 3-A22 |
| 79 71 708 | 03B | 023 | 3-A24 |
| 79 71 708 | 03B | 025 | 3-B02 |
| 79 71 708 | 03B | 031 | 3-B08 |
| 79 71 708 | 03B | 045 | 3-B22 |
| 79 71 708 | 03B | 047 | 3-B24 |
| 79 71 708 | 03B | 053 | 3-C06 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 79 71 708 | 03B | 067 | 3-C20 |
| 79 71 708 | 03B | 071 | 3-C24 |
| 79 71 708 | 03B | 077 | 3-D06 |
| 79 71 708 | 03B | 099 | 3-E04 |
| 79 71 708 | 03B | 111 | 3-E16 |
| 79 71 708 | 03B | 119 | 3-E24 |
| 79 71 708 | 03B | 133 | 3-F14 |
| 79 71 708 | 03B | 145 | 3-G02 |
| 79 71 708 | 08C | 053 | 7-C06 |
| 79 71 724 | 08A | 057 | 5-C10 |
| 79 71 724 | 08C | 033 | 7-B10 |
| 79 71 724 | 08C | 053 | 7-C06 |
| 79 71 757 | 03A | 071 | 2-C24 |
| 79 71 757 | 08A | 017 | 5-A18 |
| 79 71 757 | 08A | 021 | 5-A22 |
| 79 71 765 | 02 | 011 | 1-B12 |
| 79 71 765 | 06 | 005 | 4-C06 |
| 79 71 765 | 06 | 011 | 4-C12 |
| 79 71 765 | 06 | 017 | 4-C18 |
| 79 71 765 | 06 | 023 | 4-C24 |
| 79 71 823 | 04 | 049 | 3-J02 |
| 79 71 864 | 02 | 075 | 1-E04 |
| 79 71 864 | 02 | 079 | 1-E08 |
| 79 71 864 | 02 | 087 | 1-E16 |
| 79 71 864 | 02 | 093 | 1-E22 |
| 79 71 864 | 02 | 179 | 1-I12 |
| 79 71 864 | 03A | 081 | 2-D10 |
| 79 71 864 | 03A | 127 | 2-F08 |
| 79 71 864 | 08A | 081 | 5-D10 |
| 79 71 864 | 08C | 035 | 7-B12 |
| 79 71 864 | 08C | 039 | 7-B16 |
| 79 71 864 | 08C | 045 | 7-B22 |
| 79 71 872 | 02 | 057 | 1-D10 |
| 79 71 872 | 02 | 059 | 1-D12 |
| 79 71 872 | 02 | 063 | 1-D16 |
| 79 71 872 | 02 | 067 | 1-D20 |
| 79 71 872 | 02 | 071 | 1-D24 |
| 79 71 872 | 02 | 087 | 1-E16 |
| 79 71 872 | 02 | 133 | 1-G14 |
| 79 71 872 | 03A | 127 | 2-F08 |
| 79 71 872 | 08B | 167 | 6-G24 |
| 79 71 872 | 08B | 177 | 6-H10 |
| 79 71 872 | 08C | 039 | 7-B16 |
| 79 71 872 | 08C | 041 | 7-B18 |
| 79 71 872 | 08C | 045 | 7-B22 |
| 79 71 872 | 08C | 049 | 7-C02 |
| 79 71 872 | 08C | 051 | 7-C04 |
| 79 71 880 | 02 | 047 | 1-C24 |
| 79 71 880 | 02 | 049 | 1-D02 |
| 79 71 880 | 02 | 163 | 1-H20 |
| 79 71 880 | 02 | 167 | 1-H24 |
| 79 71 880 | 02 | 179 | 1-I12 |
| 79 71 880 | 02 | 185 | 1-I18 |
| 79 71 880 | 02 | 195 | 1-J04 |
| 79 71 880 | 03A | 081 | 2-D10 |
| 79 71 880 | 03A | 127 | 2-F08 |
| 79 71 880 | 04 | 081 | 3-K10 |
| 79 71 880 | 05 | 025 | 4-B02 |
| 79 71 880 | 08A | 021 | 5-A22 |
| 79 71 880 | 08A | 165 | 5-G22 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 79 71 880 | 08A | 167 | 5-G24 |
| 79 71 880 | 08A | 169 | 5-H02 |
| 79 71 880 | 08A | 173 | 5-H06 |
| 79 71 880 | 08A | 175 | 5-H08 |
| 79 71 880 | 08A | 177 | 5-H10 |
| 79 71 880 | 08A | 179 | 5-H12 |
| 79 71 880 | 08A | 181 | 5-H14 |
| 79 71 880 | 08A | 183 | 5-H16 |
| 79 71 880 | 08C | 035 | 7-B12 |
| 79 71 880 | 08C | 039 | 7-B16 |
| 79 71 880 | 08C | 041 | 7-B18 |
| 79 71 880 | 08C | 049 | 7-C02 |
| 79 71 906 | 02 | 049 | 1-D02 |
| 79 71 906 | 02 | 129 | 1-G10 |
| 79 71 906 | 03A | 127 | 2-F08 |
| 79 71 922 | 03A | 007 | 2-A08 |
| 79 71 922 | 03A | 009 | 2-A10 |
| 79 71 922 | 03A | 013 | 2-A14 |
| 79 71 922 | 05 | 023 | 4-A24 |
| 79 71 922 | 08A | 035 | 5-B12 |
| 79 71 922 | 08C | 019 | 7-A20 |
| 79 71 922 | 08C | 039 | 7-B16 |
| 79 71 922 | 08C | 049 | 7-C02 |
| 79 71 930 | 04 | 013 | 3-H14 |
| 79 71 930 | 04 | 019 | 3-H20 |
| 79 71 948 | 04 | 013 | 3-H14 |
| 79 71 948 | 04 | 019 | 3-H20 |
| 79 72 029 | 03B | 007 | 3-A08 |
| 79 72 029 | 03B | 009 | 3-A10 |
| 79 72 029 | 03B | 013 | 3-A14 |
| 79 72 029 | 03B | 017 | 3-A18 |
| 79 72 029 | 03B | 021 | 3-A22 |
| 79 72 029 | 03B | 023 | 3-A24 |
| 79 72 029 | 03B | 025 | 3-B02 |
| 79 72 029 | 03B | 035 | 3-B12 |
| 79 72 029 | 03B | 039 | 3-B16 |
| 79 72 029 | 03B | 043 | 3-B20 |
| 79 72 029 | 03B | 045 | 3-B22 |
| 79 72 029 | 03B | 047 | 3-B24 |
| 79 72 029 | 03B | 055 | 3-C08 |
| 79 72 029 | 03B | 057 | 3-C10 |
| 79 72 029 | 03B | 061 | 3-C14 |
| 79 72 029 | 03B | 065 | 3-C18 |
| 79 72 029 | 03B | 067 | 3-C20 |
| 79 72 029 | 03B | 071 | 3-C24 |
| 79 72 029 | 03B | 079 | 3-D08 |
| 79 72 029 | 03B | 081 | 3-D10 |
| 79 72 029 | 03B | 085 | 3-D14 |
| 79 72 029 | 03B | 091 | 3-D20 |
| 79 72 029 | 03B | 095 | 3-D24 |
| 79 72 029 | 03B | 099 | 3-E04 |
| 79 72 029 | 03B | 105 | 3-E10 |
| 79 72 029 | 03B | 115 | 3-E20 |
| 79 72 029 | 03B | 127 | 3-F08 |
| 79 72 029 | 03B | 139 | 3-F20 |
| 79 72 045 | 02 | 171 | 1-I04 |
| 79 72 045 | 08C | 007 | 7-A08 |
| 79 72 045 | 08C | 013 | 7-A14 |
| 79 72 052 | 08C | 007 | 7-A08 |
| 79 72 078 | 08B | 229 | 6-J14 |



# 7-E18 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 79 72 078 | 08C | 023 | 7-A24 |
| 79 72 078 | 08C | 029 | 7-B06 |
| 79 72 086 | 08C | 023 | 7-A24 |
| 79 72 086 | 08C | 029 | 7-B06 |
| 79 72 094 | 08C | 023 | 7-A24 |
| 79 72 094 | 08C | 029 | 7-B06 |
| 79 72 144 | 03A | 129 | 2-F10 |
| 79 72 144 | 08A | 057 | 5-C10 |
| 79 72 201 | 08A | 135 | 5-F16 |
| 79 72 201 | 08B | 073 | 6-D02 |
| 79 72 201 | 08B | 075 | 6-D04 |
| 79 72 201 | 08B | 087 | 6-D16 |
| 79 72 201 | 08B | 091 | 6-D20 |
| 79 72 201 | 08B | 097 | 6-E02 |
| 79 72 201 | 08B | 099 | 6-E04 |
| 79 72 201 | 08B | 103 | 6-E08 |
| 79 72 201 | 08B | 109 | 6-E14 |
| 79 72 201 | 08B | 111 | 6-E16 |
| 79 72 201 | 08B | 115 | 6-E20 |
| 79 72 201 | 08B | 223 | 6-J08 |
| 79 72 219 | 03A | 063 | 2-C16 |
| 79 72 219 | 08A | 135 | 5-F16 |
| 79 72 284 | 03A | 057 | 2-C10 |
| 79 72 284 | 04 | 049 | 3-J02 |
| 79 72 318 | 08C | 017 | 7-A18 |
| 79 72 318 | 08C | 021 | 7-A22 |
| 79 72 326 | 08C | 039 | 7-B16 |
| 79 72 334 | 06 | 007 | 4-C08 |
| 79 72 342 | 02 | 009 | 1-B10 |
| 79 72 359 | 02 | 057 | 1-D10 |
| 79 72 359 | 02 | 095 | 1-E24 |
| 79 72 359 | 02 | 185 | 1-I18 |
| 79 72 441 | 03A | 061 | 2-C14 |
| 79 72 441 | 05 | 007 | 4-A08 |
| 79 72 441 | 05 | 011 | 4-A12 |
| 79 72 441 | 08A | 063 | 5-C16 |
| 79 72 441 | 08A | 065 | 5-C18 |
| 79 72 441 | 08A | 067 | 5-C20 |
| 79 72 441 | 08A | 071 | 5-C24 |
| 79 72 441 | 08A | 165 | 5-G22 |
| 79 72 441 | 08A | 167 | 5-G24 |
| 79 72 441 | 08A | 173 | 5-H06 |
| 79 72 441 | 08A | 175 | 5-H08 |
| 79 72 441 | 08A | 179 | 5-H12 |
| 79 72 466 | 04 | 005 | 3-H06 |
| 79 72 466 | 04 | 057 | 3-J10 |
| 79 72 466 | 08B | 015 | 6-A16 |
| 79 72 474 | 08A | 007 | 5-A08 |
| 79 72 474 | 08A | 011 | 5-A12 |
| 79 72 482 | 08C | 023 | 7-A24 |
| 79 72 482 | 08C | 029 | 7-B06 |
| 79 72 490 | 02 | 171 | 1-I04 |
| 79 72 490 | 03A | 131 | 2-F12 |
| 79 72 490 | 08B | 121 | 6-F02 |
| 79 72 490 | 08C | 013 | 7-A14 |
| 79 72 490 | 08C | 035 | 7-B12 |
| 79 72 490 | 08C | 041 | 7-B18 |
| 79 72 490 | 08C | 045 | 7-B22 |
| 79 72 490 | 08C | 051 | 7-C04 |
| 79 72 490 | 08C | 053 | 7-C06 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 79 72 508 | 08A | 043 | 5-B20 |
| 79 72 508 | 08A | 045 | 5-B22 |
| 79 72 508 | 08A | 047 | 5-B24 |
| 79 72 508 | 08A | 051 | 5-C04 |
| 79 72 508 | 08B | 213 | 6-I22 |
| 79 72 516 | 08B | 011 | 6-A12 |
| 79 72 565 | 02 | 063 | 1-D16 |
| 79 72 573 | 03A | 041 | 2-B18 |
| 79 72 573 | 03A | 067 | 2-C20 |
| 79 72 573 | 03A | 073 | 2-D02 |
| 79 72 581 | 06 | 005 | 4-C06 |
| 79 72 607 | 02 | 171 | 1-I04 |
| 79 72 607 | 08A | 179 | 5-H12 |
| 79 72 607 | 08B | 167 | 6-G24 |
| 79 72 607 | 08B | 179 | 6-H12 |
| 79 72 623 | 02 | 121 | 1-G02 |
| 79 72 623 | 08B | 167 | 6-G24 |
| 79 72 623 | 08B | 177 | 6-H10 |
| 79 72 672 | 03A | 015 | 2-A16 |
| 79 72 680 | 03A | 141 | 2-F22 |
| 79 72 680 | 03A | 143 | 2-F24 |
| 79 72 680 | 03A | 145 | 2-G02 |
| 79 72 698 | 02 | 037 | 1-C14 |
| 79 72 730 | 08B | 017 | 6-A18 |
| 79 72 748 | 02 | 011 | 1-B12 |
| 79 72 755 | 08B | 189 | 6-H22 |
| 79 72 763 | 02 | 135 | 1-G16 |
| 79 72 771 | 03A | 049 | 2-C02 |
| 79 72 789 | 02 | 041 | 1-C18 |
| 79 72 789 | 02 | 157 | 1-H14 |
| 79 72 789 | 02 | 191 | 1-I24 |
| 79 72 789 | 08A | 105 | 5-E10 |
| 79 72 797 | 02 | 171 | 1-I04 |
| 79 72 805 | 05 | 025 | 4-B02 |
| 79 72 805 | 05 | 027 | 4-B04 |
| 79 72 813 | 08A | 105 | 5-E10 |
| 79 72 821 | 08A | 143 | 5-F24 |
| 79 72 821 | 08A | 147 | 5-G04 |
| 79 72 839 | 02 | 053 | 1-D06 |
| 79 72 896 | 08A | 185 | 5-H18 |
| 79 72 946 | 08B | 015 | 6-A16 |
| 79 73 050 | 08A | 129 | 5-F10 |
| 79 73 050 | 08A | 185 | 5-H18 |
| 79 73 134 | 02 | 085 | 1-E14 |
| 79 73 159 | 02 | 171 | 1-I04 |
| 79 73 159 | 03A | 029 | 2-B06 |
| 79 73 159 | 03A | 033 | 2-B10 |
| 79 73 175 | 03A | 015 | 2-A16 |
| 79 73 209 | 08A | 129 | 5-F10 |
| 79 73 225 | 08A | 103 | 5-E08 |
| 79 73 258 | 09 | 007 | 7-D08 |
| 79 73 266 | 08C | 011 | 7-A12 |
| 79 73 308 | 08A | 141 | 5-F22 |
| 79 73 308 | 08A | 145 | 5-G02 |
| 79 73 308 | 08A | 173 | 5-H06 |
| 79 73 365 | 02 | 089 | 1-E18 |
| 79 73 365 | 02 | 091 | 1-E20 |
| 79 73 365 | 02 | 185 | 1-I18 |
| 79 73 365 | 03A | 015 | 2-A16 |
| 79 73 365 | 03A | 045 | 2-B22 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 79 73 365 | 08A | 099 | 5-E04 |
| 79 73 365 | 08A | 119 | 5-E24 |
| 79 73 365 | 08A | 135 | 5-F16 |
| 79 73 365 | 08C | 049 | 7-C02 |
| 79 73 365 | 08C | 051 | 7-C04 |
| 79 73 373 | 08A | 083 | 5-D12 |
| 79 73 381 | 03A | 015 | 2-A16 |
| 79 73 423 | 02 | 159 | 1-H16 |
| 79 73 456 | 02 | 133 | 1-G14 |
| 79 73 456 | 02 | 185 | 1-I18 |
| 79 73 472 | 08A | 081 | 5-D10 |
| 79 73 480 | 08A | 079 | 5-D08 |
| 79 73 522 | 02 | 075 | 1-E04 |
| 79 73 522 | 02 | 079 | 1-E08 |
| 79 73 522 | 02 | 093 | 1-E22 |
| 79 73 522 | 02 | 185 | 1-I18 |
| 79 73 555 | 03A | 129 | 2-F10 |
| 79 73 589 | 02 | 179 | 1-I12 |
| 79 73 597 | 03A | 061 | 2-C14 |
| 79 73 597 | 08A | 173 | 5-H06 |
| 79 73 597 | 08A | 175 | 5-H08 |
| 79 73 597 | 08A | 177 | 5-H10 |
| 79 73 597 | 08A | 179 | 5-H12 |
| 79 73 597 | 08A | 181 | 5-H14 |
| 79 73 597 | 08A | 183 | 5-H16 |
| 79 73 605 | 04 | 007 | 3-H08 |
| 79 73 613 | 02 | 075 | 1-E04 |
| 79 73 613 | 02 | 079 | 1-E08 |
| 79 73 621 | 08A | 101 | 5-E06 |
| 79 73 621 | 08A | 109 | 5-E14 |
| 79 73 639 | 08A | 089 | 5-D18 |
| 79 73 647 | 08A | 083 | 5-D12 |
| 79 73 647 | 08B | 017 | 6-A18 |
| 79 73 704 | 03A | 081 | 2-D10 |
| 79 73 704 | 03A | 127 | 2-F08 |
| 79 73 704 | 03A | 137 | 2-F16 |
| 79 73 704 | 08A | 165 | 5-G22 |
| 79 73 704 | 08A | 167 | 5-G24 |
| 79 73 720 | 08B | 185 | 6-H18 |
| 79 73 779 | 02 | 011 | 1-B12 |
| 79 73 779 | 08B | 193 | 6-I02 |
| 79 73 894 | 08A | 027 | 5-B04 |
| 79 73 894 | 08A | 101 | 5-E06 |
| 79 73 894 | 08B | 121 | 6-F02 |
| 79 73 951 | 08B | 203 | 6-I12 |
| 79 73 951 | 08B | 217 | 6-J02 |
| 79 73 969 | 08B | 205 | 6-I14 |
| 79 73 977 | 05 | 019 | 4-A20 |
| 79 73 993 | 02 | 075 | 1-E04 |
| 79 73 993 | 02 | 079 | 1-E08 |
| 79 74 017 | 08A | 099 | 5-E04 |
| 79 74 025 | 03A | 041 | 2-B18 |
| 79 74 033 | 08A | 123 | 5-F04 |
| 79 74 033 | 08B | 151 | 6-G08 |
| 79 74 033 | 08B | 161 | 6-G18 |
| 79 74 249 | 08A | 027 | 5-B04 |
| 79 74 249 | 08B | 017 | 6-A18 |
| 79 74 249 | 08B | 221 | 6-J06 |
| 79 74 264 | 02 | 139 | 1-G20 |
| 79 74 264 | 02 | 143 | 1-G24 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 79 74 264 | 02 | 151 | 1-H08 |
| 79 74 264 | 02 | 201 | 1-J10 |
| 79 74 264 | 02 | 203 | 1-J12 |
| 79 74 264 | 02 | 205 | 1-J14 |
| 79 74 298 | 02 | 159 | 1-H16 |
| 79 74 298 | 08A | 123 | 5-F04 |
| 79 74 298 | 08C | 049 | 7-C02 |
| 79 74 298 | 08C | 051 | 7-C04 |
| 79 74 306 | 02 | 089 | 1-E18 |
| 79 74 330 | 08B | 167 | 6-G24 |
| 79 74 330 | 08B | 177 | 6-H10 |
| 79 74 348 | 08B | 149 | 6-G06 |
| 79 74 363 | 08B | 143 | 6-F24 |
| 79 74 371 | 07 | 007 | 4-E08 |
| 79 74 447 | 02 | 163 | 1-H20 |
| 79 74 447 | 02 | 195 | 1-J04 |
| 79 74 447 | 04 | 081 | 3-K10 |
| 79 74 546 | 02 | 071 | 1-D24 |
| 79 74 546 | 02 | 081 | 1-E10 |
| 79 74 637 | 03A | 133 | 2-F14 |
| 79 74 645 | 03A | 133 | 2-F14 |
| 79 74 652 | 03A | 133 | 2-F14 |
| 79 74 660 | 03A | 133 | 2-F14 |
| 79 74 678 | 03A | 133 | 2-F14 |
| 79 74 678 | 08C | 049 | 7-C02 |
| 79 74 678 | 08C | 051 | 7-C04 |
| 79 74 694 | 02 | 163 | 1-H20 |
| 79 74 694 | 04 | 081 | 3-K10 |
| 79 74 694 | 06 | 021 | 4-C22 |
| 79 74 694 | 08B | 193 | 6-I02 |
| 79 74 728 | 03A | 047 | 2-B24 |
| 79 74 744 | 08B | 151 | 6-G08 |
| 79 74 744 | 08B | 161 | 6-G18 |
| 79 74 769 | 02 | 049 | 1-D02 |
| 79 74 769 | 02 | 053 | 1-D06 |
| 79 74 769 | 02 | 195 | 1-J04 |
| 79 74 769 | 03A | 005 | 2-A06 |
| 79 75 030 | 08C | 017 | 7-A18 |
| 79 75 030 | 08C | 021 | 7-A22 |
| 79 75 030 | 08C | 035 | 7-B12 |
| 79 75 030 | 08C | 039 | 7-B16 |
| 79 75 030 | 08C | 041 | 7-B18 |
| 79 75 030 | 08C | 045 | 7-B22 |
| 79 75 030 | 08C | 049 | 7-C02 |
| 79 75 030 | 08C | 051 | 7-C04 |
| 79 75 048 | 02 | 089 | 1-E18 |
| 79 75 063 | 07 | 013 | 4-E14 |
| 79 75 154 | 08B | 091 | 6-D20 |
| 79 75 154 | 08B | 103 | 6-E08 |
| 79 75 154 | 08B | 115 | 6-E20 |
| 79 75 196 | 02 | 099 | 1-F04 |
| 79 75 204 | 02 | 061 | 1-D14 |
| 79 75 204 | 02 | 069 | 1-D22 |
| 79 75 212 | 08A | 063 | 5-C16 |
| 79 75 212 | 08A | 065 | 5-C18 |
| 79 75 212 | 08A | 067 | 5-C20 |
| 79 75 220 | 02 | 163 | 1-H20 |
| 79 75 220 | 02 | 195 | 1-J04 |
| 79 75 220 | 03A | 011 | 2-A12 |
| 79 75 220 | 04 | 081 | 3-K10 |




MASTER INDEX

| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 79 75 238 | 08C | 017 | 7-A18 |
| 79 75 238 | 08C | 019 | 7-A20 |
| 79 75 238 | 08C | 039 | 7-B16 |
| 79 75 238 | 08C | 049 | 7-C02 |
| 79 75 329 | 03A | 049 | 2-C02 |
| 79 75 337 | 08B | 017 | 6-A18 |
| 79 75 386 | 08B | 011 | 6-A12 |
| 79 75 402 | 08B | 167 | 6-G24 |
| 79 75 402 | 08B | 179 | 6-H12 |
| 79 75 436 | 02 | 153 | 1-H10 |
| 79 75 444 | 02 | 157 | 1-H14 |
| 79 75 444 | 08C | 047 | 7-B24 |
| 79 75 444 | 08C | 051 | 7-C04 |
| 79 75 451 | 08A | 121 | 5-F02 |
| 79 75 469 | 02 | 153 | 1-H10 |
| 79 75 469 | 02 | 171 | 1-I04 |
| 79 75 501 | 04 | 051 | 3-J04 |
| 79 75 543 | 02 | 047 | 1-C24 |
| 79 75 543 | 02 | 111 | 1-F16 |
| 79 75 543 | 02 | 117 | 1-F22 |
| 79 75 543 | 08C | 031 | 7-B08 |
| 79 75 543 | 08C | 035 | 7-B12 |
| 79 75 543 | 08C | 045 | 7-B22 |
| 79 75 543 | 08C | 049 | 7-C02 |
| 79 75 717 | 07 | 015 | 4-E16 |
| 79 75 725 | 02 | 153 | 1-H10 |
| 79 75 741 | 02 | 163 | 1-H20 |
| 79 75 758 | 08A | 027 | 5-B04 |
| 79 75 758 | 08A | 135 | 5-F16 |
| 79 75 774 | 02 | 067 | 1-D20 |
| 79 75 774 | 08A | 109 | 5-E14 |
| 79 75 774 | 08A | 111 | 5-E16 |
| 79 75 774 | 08A | 143 | 5-F24 |
| 79 75 774 | 08A | 147 | 5-G04 |
| 79 75 774 | 08A | 185 | 5-H18 |
| 79 75 782 | 08A | 109 | 5-E14 |
| 79 75 782 | 08A | 111 | 5-E16 |
| 79 75 782 | 08A | 149 | 5-G06 |
| 79 75 790 | 08A | 103 | 5-E08 |
| 79 75 790 | 08A | 109 | 5-E14 |
| 79 75 790 | 08A | 143 | 5-F24 |
| 79 76 921 | 08A | 007 | 5-A08 |
| 79 76 939 | 03A | 011 | 2-A12 |
| 79 76 947 | 08A | 103 | 5-E08 |
| 79 76 988 | 08A | 103 | 5-E08 |
| 79 76 988 | 08A | 111 | 5-E16 |
| 79 77 036 | 04 | 081 | 3-K10 |
| 79 77 036 | 08A | 101 | 5-E06 |
| 79 77 036 | 08A | 109 | 5-E14 |
| 79 77 234 | 02 | 183 | 1-I16 |
| 79 77 242 | 02 | 009 | 1-B10 |
| 79 77 242 | 02 | 011 | 1-B12 |
| 79 77 267 | 02 | 011 | 1-B12 |
| 79 77 283 | 02 | 089 | 1-E18 |
| 79 77 283 | 08B | 187 | 6-H20 |
| 79 77 325 | 02 | 163 | 1-H20 |
| 79 77 325 | 03A | 005 | 2-A06 |
| 79 77 390 | 08A | 099 | 5-E04 |
| 79 77 390 | 08A | 141 | 5-F22 |
| 79 77 390 | 08A | 143 | 5-F24 |
| 79 77 416 | 02 | 057 | 1-D10 |
| 79 77 440 | 08C | 019 | 7-A20 |
| 79 77 440 | 08C | 039 | 7-B16 |
| 79 77 440 | 08C | 049 | 7-C02 |
| 79 77 473 | 02 | 011 | 1-B12 |
| 79 77 499 | 08C | 023 | 7-A24 |
| 79 77 499 | 08C | 039 | 7-B16 |
| 79 77 499 | 08C | 045 | 7-B22 |
| 79 77 499 | 08C | 049 | 7-C02 |
| 79 77 499 | 08C | 051 | 7-C04 |
| 79 77 580 | 02 | 163 | 1-H20 |
| 79 77 580 | 02 | 167 | 1-H24 |
| 79 77 580 | 02 | 169 | 1-I02 |
| 79 77 622 | 08A | 027 | 5-B04 |
| 79 77 697 | 02 | 191 | 1-I24 |
| 79 77 796 | 08A | 097 | 5-E02 |
| 79 77 796 | 08A | 143 | 5-F24 |
| 79 77 796 | 08A | 149 | 5-G06 |
| 79 77 804 | 08A | 161 | 5-G18 |
| 79 77 812 | 07 | 017 | 4-E18 |
| 79 77 838 | 08B | 205 | 6-I14 |
| 79 77 846 | 08B | 169 | 6-H02 |
| 79 77 846 | 08B | 179 | 6-H12 |
| 79 77 846 | 08B | 227 | 6-J12 |
| 79 77 879 | 02 | 075 | 1-E04 |
| 79 77 879 | 02 | 079 | 1-E08 |
| 79 77 879 | 02 | 093 | 1-E22 |
| 79 77 903 | 03A | 077 | 2-D06 |
| 79 77 903 | 08B | 211 | 6-I20 |
| 79 78 042 | 03A | 067 | 2-C20 |
| 79 78 067 | 08B | 217 | 6-J02 |
| 79 78 075 | 08B | 217 | 6-J02 |
| 79 78 620 | 02 | 139 | 1-G20 |
| 79 78 620 | 02 | 199 | 1-J08 |
| 79 78 620 | 02 | 201 | 1-J10 |
| 79 78 620 | 02 | 203 | 1-J12 |
| 79 78 620 | 02 | 205 | 1-J14 |
| 79 78 794 | 05 | 007 | 4-A08 |
| 79 78 794 | 06 | 005 | 4-C06 |
| 79 79 123 | 04 | 057 | 3-J10 |
| 79 79 131 | 02 | 009 | 1-B10 |
| 79 79 156 | 02 | 181 | 1-I14 |
| 79 79 206 | 04 | 007 | 3-H08 |
| 79 79 248 | 05 | 023 | 4-A24 |
| 79 79 255 | 03A | 007 | 2-A08 |
| 79 79 255 | 03A | 009 | 2-A10 |
| 79 79 396 | 07 | 013 | 4-E14 |
| 79 79 487 | 07 | 017 | 4-E18 |
| 79 79 503 | 02 | 139 | 1-G20 |
| 79 79 511 | 05 | 007 | 4-A08 |
| 79 79 511 | 05 | 021 | 4-A22 |
| 79 79 511 | 07 | 005 | 4-E06 |
| 79 79 511 | 07 | 013 | 4-E14 |
| 79 79 511 | 07 | 019 | 4-E20 |
| 79 79 511 | 07 | 021 | 4-E22 |
| 79 79 511 | 07 | 023 | 4-E24 |
| 79 81 921 | 08A | 123 | 5-F04 |
| 79 81 921 | 08B | 161 | 6-G18 |
| 79 81 921 | 08B | 225 | 6-J10 |
| 79 82 002 | 07 | 017 | 4-E18 |
| 79 82 044 | 07 | 015 | 4-E16 |
| 79 82 150 | 07 | 015 | 4-E16 |
| 79 82 168 | 07 | 013 | 4-E14 |
| 79 93 462 | 08A | 135 | 5-F16 |
| 79 93 462 | 08B | 021 | 6-A22 |
| 79 94 510 | 08A | 159 | 5-G16 |
| 79 94 882 | 08A | 159 | 5-G16 |
| 79 94 890 | 08A | 159 | 5-G16 |
| 80 01 440 | 02 | 121 | 1-G02 |
| 80 0[illegible] 622 | 02 | 121 | 1-G02 |
| 80 05 910 | 02 | 099 | 1-F04 |
| 80 05 910 | 02 | 101 | 1-F06 |
| 80 05 928 | 02 | 099 | 1-F04 |
| 80 05 928 | 02 | 101 | 1-F06 |
| 80 05 928 | 04 | 013 | 3-H14 |
| 80 05 928 | 04 | 019 | 3-H20 |
| 80 05 928 | 04 | 059 | 3-J12 |
| 80 05 928 | 08C | 041 | 7-B18 |
| 80 05 936 | 02 | 099 | 1-F04 |
| 80 05 936 | 02 | 101 | 1-F06 |
| 80 07 486 | 02 | 103 | 1-F08 |
| 80 07 486 | 02 | 107 | 1-F12 |
| 80 07 486 | 02 | 113 | 1-F18 |
| 80 19 531 | 02 | 043 | 1-C20 |
| 80 19 531 | 08C | 013 | 7-A14 |
| 80 19 572 | 03A | 077 | 2-D06 |
| 80 19 598 | 03A | 077 | 2-D06 |
| 80 19 713 | 02 | 185 | 1-I18 |
| 80 19 713 | 03A | 015 | 2-A16 |
| 80 19 713 | 08B | 177 | 6-H10 |
| 80 19 713 | 08C | 049 | 7-C02 |
| 80 19 713 | 08C | 051 | 7-C04 |
| 80 19 721 | 02 | 185 | 1-I18 |
| 80 19 887 | 05 | 005 | 4-A06 |
| 80 19 887 | 05 | 009 | 4-A10 |
| 80 19 895 | 02 | 027 | 1-C04 |
| 80 19 895 | 02 | 101 | 1-F06 |
| 80 19 895 | 03A | 005 | 2-A06 |
| 80 19 895 | 03A | 047 | 2-B24 |
| 80 19 895 | 03A | 051 | 2-C04 |
| 80 19 895 | 03A | 055 | 2-C08 |
| 80 19 895 | 03A | 057 | 2-C10 |
| 80 19 895 | 08A | 063 | 5-C16 |
| 80 19 895 | 08A | 067 | 5-C20 |
| 80 19 895 | 08A | 071 | 5-C24 |
| 80 19 895 | 08A | 121 | 5-F02 |
| 80 19 895 | 08A | 179 | 5-H12 |
| 80 19 903 | 02 | 101 | 1-F06 |
| 80 19 903 | 02 | 173 | 1-I06 |
| 80 19 903 | 02 | 179 | 1-I12 |
| 80 19 903 | 04 | 057 | 3-J10 |
| 80 19 903 | 04 | 059 | 3-J12 |
| 80 19 903 | 08B | 191 | 6-H24 |
| 80 19 903 | 08C | 033 | 7-B10 |
| 80 19 911 | 06 | 021 | 4-C22 |
| 80 19 911 | 08B | 193 | 6-I02 |
| 80 19 911 | 08C | 023 | 7-A24 |
| 80 19 911 | 08C | 029 | 7-B06 |
| 80 19 911 | 08C | 039 | 7-B16 |
| 80 19 911 | 08C | 041 | 7-B18 |
| 80 19 911 | 08C | 045 | 7-B22 |
| 80 19 911 | 08C | 049 | 7-C02 |
| 80 19 911 | 08C | 051 | 7-C04 |
| 80 19 929 | 02 | 027 | 1-C04 |
| 80 19 929 | 02 | 129 | 1-G10 |
| 80 19 929 | 02 | 131 | 1-G12 |
| 80 19 929 | 02 | 133 | 1-G14 |
| 80 19 929 | 03A | 021 | 2-A22 |
| 80 19 929 | 08A | 123 | 5-F04 |
| 80 19 929 | 08C | 033 | 7-B10 |
| 80 19 945 | 02 | 025 | 1-C02 |
| 80 19 945 | 02 | 047 | 1-C24 |
| 80 19 945 | 02 | 049 | 1-D02 |
| 80 19 945 | 03A | 013 | 2-A14 |
| 80 19 945 | 03A | 059 | 2-C12 |
| 80 19 945 | 04 | 021 | 3-H22 |
| 80 19 945 | 08C | 023 | 7-A24 |
| 80 19 945 | 08C | 029 | 7-B06 |
| 80 19 945 | 08C | 033 | 7-B10 |
| 80 19 945 | 08C | 035 | 7-B12 |
| 80 19 945 | 08C | 039 | 7-B16 |
| 80 19 945 | 08C | 041 | 7-B18 |
| 80 19 945 | 08C | 045 | 7-B22 |
| 80 19 945 | 08C | 049 | 7-C02 |
| 80 19 945 | 08C | 051 | 7-C04 |
| 80 19 960 | 02 | 027 | 1-C04 |
| 80 19 978 | 02 | 121 | 1-G02 |
| 80 19 978 | 04 | 023 | 3-H24 |
| 80 19 978 | 08C | 023 | 7-A24 |
| 80 19 978 | 08C | 035 | 7-B12 |
| 80 21 917 | 02 | 121 | 1-G02 |
| 80 21 925 | 05 | 019 | 4-A20 |
| 80 21 925 | 05 | 021 | 4-A22 |
| 80 21 933 | 02 | 133 | 1-G14 |
| 80 29 548 | 03A | 041 | 2-B18 |
| 80 29 548 | 03A | 057 | 2-C10 |
| 80 29 548 | 03A | 137 | 2-F18 |
| 80 29 548 | 08A | 101 | 5-E06 |
| 80 29 548 | 08A | 161 | 5-G18 |
| 80 29 555 | 02 | 047 | 1-C24 |
| 80 29 555 | 02 | 049 | 1-D02 |
| 80 29 555 | 02 | 053 | 1-D06 |
| 80 29 555 | 02 | 095 | 1-E24 |
| 80 29 555 | 02 | 121 | 1-G02 |
| 80 29 555 | 02 | 133 | 1-G14 |
| 80 29 555 | 03A | 041 | 2-B18 |
| 80 29 555 | 03A | 133 | 2-F14 |
| 80 29 555 | 04 | 021 | 3-H22 |
| 80 29 555 | 08A | 101 | 5-E06 |
| 80 29 555 | 08A | 109 | 5-E14 |
| 80 29 555 | 08B | 013 | 6-A14 |
| 80 29 555 | 08C | 023 | 7-A24 |
| 80 29 555 | 08C | 029 | 7-B06 |
| 80 29 555 | 08C | 039 | 7-B16 |
| 80 29 779 | 02 | 009 | 1-B10 |
| 80 29 779 | 03A | 007 | 2-A08 |
| 80 29 779 | 03A | 009 | 2-A10 |
| 80 29 779 | 05 | 013 | 4-A14 |
| 80 29 779 | 08C | 027 | 7-B04 |
| 80 29 779 | 08C | 033 | 7-B10 |





| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 80 29 910 | 02 | 107 | 1-F12 |
| 80 29 910 | 02 | 115 | 1-F20 |
| 80 29 910 | 08A | 119 | 5-E24 |
| 80 29 936 | 02 | 103 | 1-F08 |
| 80 29 936 | 02 | 115 | 1-F20 |
| 80 29 936 | 08A | 017 | 5-A18 |
| 80 29 936 | 08A | 019 | 5-A20 |
| 80 29 936 | 08A | 021 | 5-A22 |
| 80 29 936 | 08A | 023 | 5-A24 |
| 80 29 944 | 02 | 185 | 1-I18 |
| 80 29 944 | 03A | 083 | 2-D12 |
| 80 29 944 | 04 | 051 | 3-J04 |
| 80 29 944 | 08A | 101 | 5-E06 |
| 80 29 944 | 08B | 167 | 6-G24 |
| 80 29 944 | 08B | 179 | 6-H12 |
| 80 29 944 | 08B | 227 | 6-J12 |
| 80 29 944 | 08C | 035 | 7-B12 |
| 80 29 951 | 02 | 015 | 1-B16 |
| 80 29 951 | 02 | 027 | 1-C04 |
| 80 29 951 | 02 | 095 | 1-E24 |
| 80 29 951 | 02 | 105 | 1-F10 |
| 80 29 951 | 02 | 111 | 1-F16 |
| 80 29 951 | 02 | 117 | 1-F22 |
| 80 29 951 | 02 | 119 | 1-F24 |
| 80 29 951 | 02 | 147 | 1-H04 |
| 80 29 951 | 02 | 149 | 1-H06 |
| 80 29 951 | 02 | 151 | 1-H08 |
| 80 29 951 | 02 | 175 | 1-I08 |
| 80 29 951 | 02 | 203 | 1-J12 |
| 80 29 951 | 02 | 205 | 1-J14 |
| 80 29 951 | 03A | 027 | 2-B04 |
| 80 29 951 | 03A | 031 | 2-B08 |
| 80 29 951 | 03A | 041 | 2-B18 |
| 80 29 951 | 03A | 055 | 2-C08 |
| 80 29 951 | 03A | 081 | 2-D10 |
| 80 29 951 | 04 | 023 | 3-H24 |
| 80 29 951 | 04 | 025 | 3-I02 |
| 80 29 951 | 05 | 019 | 4-A20 |
| 80 29 951 | 05 | 021 | 4-A22 |
| 80 29 951 | 08A | 101 | 5-E06 |
| 80 29 951 | 08B | 005 | 6-A06 |
| 80 29 951 | 08B | 169 | 6-H02 |
| 80 29 951 | 08B | 179 | 6-H12 |
| 80 29 951 | 08B | 181 | 6-H14 |
| 80 29 951 | 08B | 227 | 6-J12 |
| 80 29 951 | 08B | 229 | 6-J14 |
| 80 29 951 | 08C | 009 | 7-A10 |
| 80 29 951 | 08C | 011 | 7-A12 |
| 80 29 951 | 08C | 023 | 7-A24 |
| 80 29 951 | 08C | 029 | 7-B06 |
| 80 29 951 | 08C | 033 | 7-B10 |
| 80 29 951 | 08C | 035 | 7-B12 |
| 80 29 951 | 08C | 039 | 7-B16 |
| 80 29 951 | 08C | 041 | 7-B18 |
| 80 29 951 | 08C | 045 | 7-B22 |
| 80 29 951 | 08C | 049 | 7-C02 |
| 80 29 951 | 08C | 051 | 7-C04 |
| 80 29 969 | 04 | 029 | 3-I06 |
| 80 29 969 | 04 | 035 | 3-I12 |
| 80 29 969 | 04 | 041 | 3-I18 |
| 80 29 969 | 08A | 083 | 5-D12 |
| 80 29 985 | 02 | 009 | 1-B10 |
| 80 29 985 | 02 | 011 | 1-B12 |
| 80 29 985 | 02 | 013 | 1-B14 |
| 80 29 985 | 02 | 027 | 1-C04 |
| 80 29 985 | 02 | 039 | 1-C16 |
| 80 29 985 | 02 | 055 | 1-D08 |
| 80 29 985 | 02 | 085 | 1-E14 |
| 80 29 985 | 02 | 147 | 1-H04 |
| 80 29 985 | 02 | 149 | 1-H06 |
| 80 29 985 | 02 | 151 | 1-H08 |
| 80 29 985 | 02 | 173 | 1-I06 |
| 80 29 985 | 02 | 181 | 1-I14 |
| 80 29 985 | 02 | 183 | 1-I16 |
| 80 29 985 | 02 | 203 | 1-J12 |
| 80 29 985 | 02 | 205 | 1-J14 |
| 80 29 985 | 03A | 007 | 2-A08 |
| 80 29 985 | 03A | 009 | 2-A10 |
| 80 29 985 | 04 | 011 | 3-H12 |
| 80 29 985 | 04 | 013 | 3-H14 |
| 80 29 985 | 04 | 017 | 3-H18 |
| 80 29 985 | 04 | 019 | 3-H20 |
| 80 29 985 | 04 | 021 | 3-H22 |
| 80 29 985 | 04 | 027 | 3-I04 |
| 80 29 985 | 04 | 031 | 3-I08 |
| 80 29 985 | 04 | 037 | 3-I14 |
| 80 29 985 | 04 | 049 | 3-J02 |
| 80 29 985 | 04 | 051 | 3-J04 |
| 80 29 985 | 04 | 059 | 3-J12 |
| 80 29 985 | 04 | 075 | 3-K04 |
| 80 29 985 | 05 | 015 | 4-A16 |
| 80 29 985 | 08A | 083 | 5-D12 |
| 80 29 985 | 08C | 021 | 7-A22 |
| 80 29 985 | 08C | 033 | 7-B10 |
| 80 29 985 | 08C | 035 | 7-B12 |
| 80 29 985 | 08C | 045 | 7-B22 |
| 80 29 985 | 08C | 051 | 7-C04 |
| 80 29 993 | 04 | 007 | 3-H08 |
| 80 29 993 | 05 | 023 | 4-A24 |
| 80 30 017 | 07 | 015 | 4-E16 |
| 80 30 017 | 08B | 193 | 6-I02 |
| 80 30 017 | 08B | 219 | 6-J04 |
| 80 30 017 | 08B | 221 | 6-J06 |
| 80 30 066 | 05 | 023 | 4-A24 |
| 80 34 456 | 02 | 025 | 1-C02 |
| 80 34 662 | 02 | 013 | 1-B14 |
| 80 34 761 | 02 | 013 | 1-B14 |
| 80 34 761 | 02 | 027 | 1-C04 |
| 80 34 928 | 02 | 035 | 1-C12 |
| 80 34 985 | 04 | 031 | 3-I08 |
| 80 34 985 | 04 | 039 | 3-I16 |
| 80 46 542 | 02 | 103 | 1-F08 |
| 80 46 542 | 02 | 107 | 1-F12 |
| 80 46 542 | 02 | 113 | 1-F18 |
| 80 46 559 | 02 | 103 | 1-F08 |
| 80 46 559 | 02 | 107 | 1-F12 |
| 80 46 559 | 02 | 113 | 1-F18 |
| 80 46 617 | 02 | 055 | 1-D08 |
| 80 47 722 | 05 | 023 | 4-A24 |
| 80 47 813 | 04 | 035 | 3-I12 |
| 80 47 813 | 04 | 041 | 3-I18 |
| 80 47 813 | 04 | 043 | 3-I20 |
| 80 47 839 | 04 | 027 | 3-I04 |
| 80 47 839 | 04 | 031 | 3-I08 |
| 80 47 839 | 04 | 037 | 3-I14 |
| 80 47 854 | 04 | 027 | 3-I04 |
| 80 47 854 | 04 | 031 | 3-I08 |
| 80 47 854 | 04 | 037 | 3-I14 |
| 80 48 829 | 02 | 103 | 1-F08 |
| 80 48 829 | 02 | 107 | 1-F12 |
| 80 49 553 | 04 | 013 | 3-H14 |
| 80 49 553 | 04 | 021 | 3-H22 |
| 80 49 702 | 04 | 043 | 3-I20 |
| 80 49 702 | 04 | 047 | 3-I24 |
| 80 49 876 | 04 | 019 | 3-H20 |
| 80 50 593 | 02 | 103 | 1-F08 |
| 80 50 593 | 02 | 107 | 1-F12 |
| 80 50 593 | 02 | 113 | 1-F18 |
| 80 50 593 | 02 | 159 | 1-H16 |
| 80 50 601 | 02 | 103 | 1-F08 |
| 80 50 601 | 02 | 107 | 1-F12 |
| 80 50 601 | 02 | 113 | 1-F18 |
| 80 50 767 | 02 | 091 | 1-E20 |
| 80 55 980 | 08A | 075 | 5-D04 |
| 80 55 980 | 08A | 089 | 5-D18 |
| 80 55 938 | 05 | 005 | 4-A06 |
| 80 55 998 | 05 | 009 | 4-A10 |
| 80 55 998 | 08A | 083 | 5-D12 |
| 80 56 160 | 05 | 007 | 4-A08 |
| 80 57 697 | 04 | 049 | 3-J02 |
| 80 59 073 | 02 | 103 | 1-F08 |
| 80 59 073 | 02 | 107 | 1-F12 |
| 80 59 073 | 02 | 113 | 1-F18 |
| 80 59 230 | 03A | 073 | 2-D02 |
| 80 59 230 | 08A | 017 | 5-A18 |
| 80 59 230 | 08A | 021 | 5-A22 |
| 80 59 230 | 08A | 089 | 5-D18 |
| 80 59 230 | 08A | 169 | 5-H02 |
| 80 59 230 | 08A | 171 | 5-H04 |
| 80 59 230 | 08C | 033 | 7-B10 |
| 80 59 248 | 03A | 049 | 2-C02 |
| 80 59 248 | 08B | 197 | 6-I06 |
| 80 59 248 | 08B | 203 | 6-I12 |
| 80 59 255 | 08A | 101 | 5-E06 |
| 80 59 255 | 08A | 109 | 5-E14 |
| 80 59 255 | 08A | 161 | 5-G18 |
| 80 59 263 | 08B | 217 | 6-J02 |
| 80 59 396 | 02 | 089 | 1-E18 |
| 80 59 396 | 02 | 185 | 1-I18 |
| 80 59 396 | 03A | 055 | 2-C08 |
| 80 59 396 | 03A | 083 | 2-D12 |
| 80 59 396 | 08A | 119 | 5-E24 |
| 80 59 396 | 08B | 167 | 6-G24 |
| 80 59 396 | 08B | 179 | 6-H12 |
| 80 59 396 | 08B | 225 | 6-J10 |
| 80 59 412 | 02 | 133 | 1-G14 |
| 80 59 420 | 04 | 075 | 3-K04 |
| 80 59 487 | 04 | 049 | 3-J02 |
| 80 59 487 | 04 | 075 | 3-K04 |
| 80 59 529 | 08A | 067 | 5-C20 |
| 80 59 529 | 08A | 071 | 5-C24 |
| 80 59 529 | 08A | 173 | 5-H06 |
| 80 59 529 | 08A | 175 | 5-H08 |
| 80 59 529 | 08A | 179 | 5-H12 |
| 80 59 529 | 08A | 181 | 5-H14 |
| 80 59 537 | 03A | 061 | 2-C14 |
| 80 59 537 | 08A | 065 | 5-C18 |
| 80 59 537 | 08A | 175 | 5-H08 |
| 80 59 537 | 08A | 177 | 5-H10 |
| 80 59 537 | 08A | 179 | 5-H12 |
| 80 59 537 | 08A | 183 | 5-H16 |
| 80 59 537 | 08B | 169 | 6-H02 |
| 80 59 537 | 08B | 181 | 6-H14 |
| 80 59 537 | 08B | 227 | 6-J12 |
| 80 59 545 | 03A | 073 | 2-D02 |
| 80 59 545 | 03A | 129 | 2-F10 |
| 80 59 545 | 08B | 217 | 6-J02 |
| 80 59 552 | 02 | 157 | 1-H14 |
| 80 59 552 | 02 | 179 | 1-I12 |
| 80 59 552 | 03A | 129 | 2-F10 |
| 80 59 552 | 08A | 057 | 5-C10 |
| 80 59 552 | 08A | 087 | 5-D16 |
| 80 59 560 | 08A | 099 | 5-E04 |
| 80 59 560 | 08B | 179 | 6-H12 |
| 80 59 560 | 08B | 229 | 6-J14 |
| 80 59 578 | 03A | 129 | 2-F10 |
| 80 59 578 | 08A | 011 | 5-A12 |
| 80 59 578 | 08A | 089 | 5-D18 |
| 80 59 578 | 08A | 141 | 5-F22 |
| 80 59 578 | 08A | 143 | 5-F24 |
| 80 59 578 | 08C | 009 | 7-A10 |
| 80 59 578 | 08C | 023 | 7-A24 |
| 80 59 578 | 08C | 029 | 7-B06 |
| 80 59 578 | 08C | 033 | 7-B10 |
| 80 59 578 | 08C | 035 | 7-B12 |
| 80 59 578 | 08C | 039 | 7-B16 |
| 80 59 578 | 08C | 043 | 7-B20 |
| 80 59 578 | 08C | 045 | 7-B22 |
| 80 59 578 | 08C | 049 | 7-C02 |
| 80 59 578 | 08C | 051 | 7-C04 |
| 80 59 586 | 02 | 163 | 1-H20 |
| 80 59 586 | 08B | 193 | 6-I02 |
| 80 59 594 | 02 | 083 | 1-E12 |
| 80 59 602 | 08C | 007 | 7-A08 |
| 80 69 015 | 02 | 103 | 1-F08 |
| 80 69 015 | 02 | 107 | 1-F12 |
| 80 69 015 | 02 | 115 | 1-F20 |
| 80 73 090 | 03A | 077 | 2-D06 |
| 80 73 090 | 08A | 043 | 5-B20 |
| 80 73 090 | 08A | 045 | 5-B22 |
| 80 73 090 | 08A | 047 | 5-B24 |
| 80 73 090 | 08A | 051 | 5-C04 |
| 80 73 090 | 08A | 109 | 5-E14 |
| 80 73 090 | 08A | 111 | 5-E16 |
| 80 73 108 | 02 | 181 | 1-I14 |
| 80 73 108 | 02 | 183 | 1-I16 |
| 80 73 108 | 03A | 007 | 2-A08 |
| 80 73 108 | 03A | 009 | 2-A10 |
| 80 73 108 | 06 | 005 | 4-C06 |
| 80 73 108 | 06 | 019 | 4-C20 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 80 73 108 | 08C | 017 | 7-A18 |
| 80 73 108 | 08C | 021 | 7-A22 |
| 80 73 108 | 08C | 035 | 7-B12 |
| 80 73 108 | 08C | 039 | 7-B16 |
| 80 73 108 | 08C | 043 | 7-B20 |
| 80 73 108 | 08C | 045 | 7-B22 |
| 80 73 108 | 08C | 049 | 7-C02 |
| 80 73 108 | 08C | 051 | 7-C04 |
| 80 73 124 | 06 | 005 | 4-C06 |
| 80 73 124 | 06 | 021 | 4-C22 |
| 80 73 223 | 02 | 173 | 1-I06 |
| 80 73 223 | 08B | 013 | 6-A14 |
| 80 73 249 | 02 | 121 | 1-G02 |
| 80 73 249 | 02 | 123 | 1-G04 |
| 80 73 249 | 02 | 125 | 1-G06 |
| 80 73 249 | 02 | 199 | 1-J08 |
| 80 73 249 | 06 | 021 | 4-C22 |
| 80 73 249 | 08B | 129 | 6-F10 |
| 80 73 249 | 08B | 133 | 6-F14 |
| 80 73 249 | 08C | 021 | 7-A22 |
| 80 73 249 | 08C | 035 | 7-B12 |
| 80 73 249 | 08C | 045 | 7-B22 |
| 80 73 249 | 08C | 051 | 7-C04 |
| 80 73 512 | 06 | 021 | 4-C22 |
| 80 73 512 | 08C | 023 | 7-A24 |
| 80 73 512 | 08C | 029 | 7-B06 |
| 80 73 512 | 08C | 033 | 7-B10 |
| 80 73 512 | 08C | 035 | 7-B12 |
| 80 73 512 | 08C | 039 | 7-B16 |
| 80 73 512 | 08C | 043 | 7-B20 |
| 80 73 512 | 08C | 045 | 7-B22 |
| 80 73 512 | 08C | 049 | 7-C02 |
| 80 73 512 | 08C | 051 | 7-C04 |
| 80 73 538 | 04 | 007 | 3-H08 |
| 80 73 538 | 05 | 023 | 4-A24 |
| 80 73 538 | 07 | 017 | 4-E18 |
| 80 73 546 | 07 | 013 | 4-E14 |
| 80 73 546 | 07 | 015 | 4-E16 |
| 80 73 942 | 02 | 137 | 1-G18 |
| 80 73 942 | 02 | 139 | 1-G20 |
| 80 73 942 | 02 | 143 | 1-G24 |
| 80 73 942 | 02 | 147 | 1-H04 |
| 80 73 942 | 02 | 181 | 1-I14 |
| 80 73 942 | 05 | 013 | 4-A14 |
| 80 73 942 | 05 | 023 | 4-A24 |
| 80 73 967 | 02 | 021 | 1-B22 |
| 80 73 975 | 06 | 017 | 4-C18 |
| 80 74 098 | 03A | 061 | 2-C14 |
| 80 74 098 | 08A | 169 | 5-H02 |
| 80 74 098 | 08A | 175 | 5-H08 |
| 80 74 098 | 08A | 177 | 5-H10 |
| 80 74 098 | 08A | 181 | 5-H14 |
| 80 74 098 | 08A | 183 | 5-H16 |
| 80 74 098 | 08C | 013 | 7-A14 |
| 80 74 106 | 02 | 009 | 1-B10 |
| 80 74 106 | 02 | 011 | 1-B12 |
| 80 74 106 | 02 | 139 | 1-G20 |
| 80 74 106 | 02 | 143 | 1-G24 |
| 80 74 106 | 02 | 147 | 1-H04 |
| 80 74 106 | 02 | 149 | 1-H06 |
| 80 74 106 | 02 | 151 | 1-H08 |
| 80 74 106 | 02 | 201 | 1-J10 |
| 80 74 106 | 02 | 203 | 1-J12 |
| 80 74 106 | 02 | 205 | 1-J14 |
| 80 74 106 | 03A | 007 | 2-A08 |
| 80 74 106 | 03A | 009 | 2-A10 |
| 80 74 106 | 03A | 049 | 2-C02 |
| 80 74 106 | 03A | 051 | 2-C04 |
| 80 74 106 | 03A | 055 | 2-C08 |
| 80 74 106 | 04 | 007 | 3-H08 |
| 80 74 106 | 04 | 013 | 3-H14 |
| 80 74 106 | 04 | 019 | 3-H20 |
| 80 74 106 | 04 | 059 | 3-J12 |
| 80 74 106 | 05 | 021 | 4-A22 |
| 80 74 106 | 08A | 121 | 5-F02 |
| 80 74 106 | 08B | 153 | 6-G10 |
| 80 74 106 | 08C | 023 | 7-A24 |
| 80 74 106 | 08C | 033 | 7-B10 |
| 80 74 106 | 08C | 035 | 7-B12 |
| 80 74 106 | 08C | 039 | 7-B16 |
| 80 74 106 | 08C | 043 | 7-B20 |
| 80 74 106 | 08C | 045 | 7-B22 |
| 80 74 106 | 08C | 049 | 7-C02 |
| 80 74 106 | 08C | 051 | 7-C04 |
| 80 74 270 | 02 | 157 | 1-H14 |
| 80 74 270 | 03A | 055 | 2-C08 |
| 80 74 270 | 08C | 035 | 7-B12 |
| 80 74 270 | 08C | 039 | 7-B16 |
| 80 74 270 | 08C | 043 | 7-B20 |
| 80 74 270 | 08C | 045 | 7-B22 |
| 80 74 288 | 02 | 043 | 1-C20 |
| 80 74 288 | 02 | 059 | 1-D12 |
| 80 74 288 | 02 | 063 | 1-D16 |
| 80 74 288 | 02 | 067 | 1-D20 |
| 80 74 288 | 02 | 071 | 1-D24 |
| 80 74 288 | 02 | 103 | 1-F08 |
| 80 74 288 | 02 | 107 | 1-F12 |
| 80 74 288 | 02 | 113 | 1-F18 |
| 80 74 288 | 03A | 051 | 2-C04 |
| 80 74 288 | 03A | 067 | 2-C20 |
| 80 74 288 | 05 | 013 | 4-A14 |
| 80 74 288 | 05 | 019 | 4-A20 |
| 80 74 288 | 05 | 023 | 4-A24 |
| 80 74 288 | 06 | 021 | 4-C22 |
| 80 74 288 | 08A | 057 | 5-C10 |
| 80 74 288 | 08B | 153 | 6-G10 |
| 80 74 288 | 08B | 159 | 6-G16 |
| 80 74 288 | 08B | 225 | 6-J10 |
| 80 74 288 | 08C | 021 | 7-A22 |
| 80 74 288 | 08C | 035 | 7-B12 |
| 80 74 288 | 08C | 045 | 7-B22 |
| 80 74 288 | 08C | 051 | 7-C04 |
| 80 82 919 | 02 | 019 | 1-B20 |
| 80 82 919 | 02 | 037 | 1-C14 |
| 80 82 919 | 05 | 015 | 4-A16 |
| 80 82 919 | 08C | 035 | 7-B12 |
| 80 82 927 | 06 | 019 | 4-C20 |
| 80 82 927 | 06 | 023 | 4-C24 |
| 80 82 935 | 02 | 009 | 1-B10 |
| 80 82 935 | 02 | 027 | 1-C04 |
| 80 82 935 | 04 | 019 | 3-H20 |
| 80 82 935 | 04 | 057 | 3-J10 |
| 80 82 935 | 05 | 021 | 4-A22 |
| 80 82 935 | 06 | 021 | 4-C22 |
| 80 82 935 | 08A | 007 | 5-A08 |
| 80 82 935 | 08B | 195 | 6-I04 |
| 80 82 943 | 03A | 013 | 2-A14 |
| 80 82 943 | 04 | 005 | 3-H06 |
| 80 82 943 | 04 | 013 | 3-H14 |
| 80 82 943 | 04 | 057 | 3-J10 |
| 80 82 943 | 04 | 063 | 3-J16 |
| 80 82 943 | 06 | 021 | 4-C22 |
| 80 82 943 | 08A | 057 | 5-C10 |
| 80 82 943 | 08C | 017 | 7-A18 |
| 80 82 943 | 08C | 021 | 7-A22 |
| 80 82 943 | 08C | 027 | 7-B04 |
| 80 82 943 | 08C | 033 | 7-B10 |
| 80 82 943 | 08C | 035 | 7-B12 |
| 80 82 943 | 08C | 043 | 7-B20 |
| 80 82 943 | 08C | 045 | 7-B22 |
| 80 82 943 | 08C | 051 | 7-C04 |
| 80 82 950 | 03A | 023 | 2-A24 |
| 80 82 950 | 03A | 025 | 2-B02 |
| 80 82 950 | 06 | 011 | 4-C12 |
| 80 82 968 | 02 | 055 | 1-D08 |
| 80 82 968 | 02 | 149 | 1-H06 |
| 80 82 968 | 02 | 151 | 1-H08 |
| 80 82 968 | 02 | 175 | 1-I08 |
| 80 82 968 | 04 | 005 | 3-H06 |
| 80 82 968 | 04 | 013 | 3-H14 |
| 80 82 968 | 04 | 019 | 3-H20 |
| 80 82 968 | 04 | 057 | 3-J10 |
| 80 82 968 | 04 | 059 | 3-J12 |
| 80 82 968 | 05 | 021 | 4-A22 |
| 80 82 968 | 08C | 017 | 7-A18 |
| 80 82 968 | 08C | 021 | 7-A22 |
| 80 82 968 | 08C | 029 | 7-B06 |
| 80 82 968 | 08C | 033 | 7-B10 |
| 80 82 968 | 08C | 035 | 7-B12 |
| 80 82 968 | 08C | 043 | 7-B20 |
| 80 82 968 | 08C | 045 | 7-B22 |
| 80 82 968 | 08C | 051 | 7-C04 |
| 80 82 976 | 02 | 013 | 1-B14 |
| 80 82 976 | 02 | 099 | 1-F04 |
| 80 82 976 | 02 | 173 | 1-I06 |
| 80 82 976 | 02 | 181 | 1-I14 |
| 80 82 976 | 02 | 183 | 1-I16 |
| 80 82 976 | 08B | 191 | 6-H24 |
| 80 82 984 | 04 | 057 | 3-J10 |
| 80 82 992 | 04 | 057 | 3-J10 |
| 80 83 115 | 04 | 057 | 3-J10 |
| 80 83 123 | 02 | 009 | 1-B10 |
| 80 83 156 | 06 | 019 | 4-C20 |
| 80 83 156 | 06 | 023 | 4-C24 |
| 80 83 164 | 08C | 027 | 7-B04 |
| 80 83 164 | 08C | 033 | 7-B10 |
| 80 83 180 | 05 | 007 | 4-A08 |
| 80 83 180 | 06 | 005 | 4-C06 |
| 80 83 222 | 06 | 005 | 4-C06 |
| 80 83 933 | 02 | 013 | 1-B14 |
| 80 83 933 | 02 | 099 | 1-F04 |
| 80 83 933 | 02 | 173 | 1-I06 |
| 80 83 933 | 02 | 181 | 1-I14 |
| 80 83 933 | 02 | 183 | 1-I16 |
| 80 83 933 | 04 | 011 | 3-H12 |
| 80 83 933 | 04 | 013 | 3-H14 |
| 80 83 933 | 04 | 017 | 3-H18 |
| 80 83 933 | 04 | 021 | 3-H22 |
| 80 83 933 | 04 | 031 | 3-I08 |
| 80 83 933 | 04 | 037 | 3-I14 |
| 80 83 933 | 04 | 057 | 3-J10 |
| 80 83 933 | 08B | 191 | 6-H24 |
| 80 83 933 | 08C | 033 | 7-B10 |
| 80 83 941 | 02 | 009 | 1-B10 |
| 80 83 941 | 02 | 011 | 1-B12 |
| 80 83 941 | 02 | 173 | 1-I06 |
| 80 83 941 | 02 | 181 | 1-I14 |
| 80 83 941 | 02 | 183 | 1-I16 |
| 80 83 941 | 04 | 043 | 3-I20 |
| 80 83 941 | 04 | 047 | 3-I24 |
| 80 83 958 | 04 | 011 | 3-H12 |
| 80 83 958 | 04 | 013 | 3-H14 |
| 80 83 958 | 04 | 017 | 3-H18 |
| 80 83 958 | 04 | 019 | 3-H20 |
| 80 83 958 | 04 | 059 | 3-J12 |
| 80 83 974 | 04 | 043 | 3-I20 |
| 80 83 974 | 04 | 047 | 3-I24 |
| 80 83 974 | 08C | 019 | 7-A20 |
| 80 83 974 | 08C | 039 | 7-B16 |
| 80 83 974 | 08C | 049 | 7-C02 |
| 80 83 982 | 04 | 027 | 3-I04 |
| 80 83 982 | 04 | 031 | 3-I08 |
| 80 84 006 | 02 | 143 | 1-G24 |
| 80 84 014 | 02 | 137 | 1-G18 |
| 80 84 014 | 02 | 139 | 1-G20 |
| 80 84 014 | 02 | 143 | 1-G24 |
| 80 84 014 | 02 | 145 | 1-H02 |
| 80 84 014 | 02 | 147 | 1-H04 |
| 80 84 030 | 02 | 149 | 1-H06 |
| 80 84 030 | 02 | 151 | 1-H08 |
| 80 84 055 | 02 | 155 | 1-H12 |
| 80 84 139 | 02 | 181 | 1-I14 |
| 80 84 139 | 02 | 183 | 1-I16 |
| 80 84 147 | 02 | 181 | 1-I14 |
| 80 84 154 | 02 | 181 | 1-I14 |
| 80 84 162 | 07 | 017 | 4-E18 |
| 80 84 196 | 04 | 007 | 3-H08 |
| 80 84 246 | 05 | 023 | 4-A24 |
| 80 84 253 | 03A | 007 | 2-A08 |
| 80 84 253 | 03A | 009 | 2-A10 |
| 80 84 386 | 07 | 015 | 4-E16 |
| 80 84 394 | 07 | 015 | 4-E16 |
| 80 84 410 | 07 | 013 | 4-E14 |
| 80 84 451 | 07 | 013 | 4-E14 |
| 80 96 364 | 02 | 109 | 1-F14 |
| 80 96 364 | 02 | 115 | 1-F20 |
| 80 97 586 | 08A | 017 | 5-A18 |
| 80 97 586 | 08A | 021 | 5-A22 |
| 80 97 750 | 08C | 005 | 7-A06 |
| 80 97 750 | 08C | 031 | 7-B08 |





| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 80 97 859 | 02 | 043 | 1-C20 |
| 80 97 859 | 02 | 097 | 1-F02 |
| 80 97 859 | 05 | 017 | 4-A18 |
| 80 97 859 | 05 | 019 | 4-A20 |
| 80 97 875 | 02 | 179 | 1-I12 |
| 80 97 883 | 02 | 027 | 1-C04 |
| 80 97 883 | 08A | 039 | 5-B16 |
| 80 97 883 | 08A | 083 | 5-D12 |
| 80 97 925 | 04 | 025 | 3-I02 |
| 80 97 933 | 02 | 179 | 1-I12 |
| 80 97 941 | 02 | 015 | 1-B16 |
| 80 98 030 | 08C | 011 | 7-A12 |
| 80 98 048 | 02 | 085 | 1-E14 |
| 80 98 089 | 03A | 007 | 2-A08 |
| 80 98 089 | 03A | 009 | 2-A10 |
| 80 98 089 | 08C | 023 | 7-A24 |
| 80 98 089 | 08C | 037 | 7-B14 |
| 80 98 113 | 03A | 007 | 2-A08 |
| 80 98 113 | 03A | 009 | 2-A10 |
| 80 98 113 | 08C | 021 | 7-A22 |
| 80 98 113 | 08C | 037 | 7-B14 |
| 80 98 113 | 08C | 045 | 7-B22 |
| 80 98 113 | 08C | 051 | 7-C04 |
| 80 98 139 | 02 | 047 | 1-C24 |
| 80 98 394 | 02 | 009 | 1-B10 |
| 81 09 548 | 02 | 103 | 1-F08 |
| 81 09 548 | 02 | 107 | 1-F12 |
| 81 09 563 | 02 | 103 | 1-F08 |
| 81 09 563 | 02 | 107 | 1-F12 |
| 81 09 563 | 02 | 113 | 1-F18 |
| 81 09 571 | 02 | 027 | 1-C04 |
| 81 09 647 | 04 | 023 | 3-H24 |
| 81 09 647 | 04 | 085 | 3-K14 |
| 81 17 020 | 02 | 193 | 1-J02 |
| 81 17 038 | 02 | 193 | 1-J02 |
| 81 17 715 | 04 | 029 | 3-I06 |
| 81 17 715 | 04 | 035 | 3-I12 |
| 81 17 715 | 04 | 041 | 3-I18 |
| 81 23 143 | 02 | 017 | 1-B18 |
| 81 23 168 | 02 | 097 | 1-F02 |
| 81 23 176 | 02 | 025 | 1-C02 |
| 81 23 218 | 02 | 013 | 1-B14 |
| 81 23 218 | 02 | 017 | 1-B18 |
| 81 23 218 | 02 | 021 | 1-B22 |
| 81 23 473 | 02 | 043 | 1-C20 |
| 81 23 671 | 02 | 115 | 1-F20 |
| 81 23 721 | 02 | 021 | 1-B22 |
| 81 23 721 | 02 | 099 | 1-F04 |
| 81 23 721 | 02 | 101 | 1-F06 |
| 81 23 721 | 02 | 175 | 1-I08 |
| 81 23 739 | 02 | 125 | 1-G06 |
| 81 23 739 | 02 | 127 | 1-G08 |
| 81 23 747 | 02 | 127 | 1-G08 |
| 81 23 747 | 02 | 201 | 1-J10 |
| 81 23 747 | 02 | 203 | 1-J12 |
| 81 23 747 | 02 | 205 | 1-J14 |
| 81 23 788 | 02 | 021 | 1-B22 |
| 81 23 895 | 02 | 091 | 1-E20 |
| 81 23 903 | 02 | 039 | 1-C16 |
| 81 23 903 | 02 | 161 | 1-H18 |
| 81 24 133 | 04 | 017 | 3-H18 |
| 81 24 141 | 02 | 039 | 1-C16 |
| 81 24 141 | 02 | 101 | 1-F06 |
| 81 24 141 | 02 | 129 | 1-G10 |
| 81 24 141 | 02 | 133 | 1-G14 |
| 81 24 141 | 02 | 161 | 1-H18 |
| 81 24 141 | 02 | 175 | 1-I08 |
| 81 24 141 | 02 | 187 | 1-I20 |
| 81 24 158 | 02 | 155 | 1-H12 |
| 81 24 158 | 02 | 161 | 1-H18 |
| 81 24 208 | 02 | 021 | 1-B22 |
| 81 24 216 | 02 | 037 | 1-C14 |
| 81 25 007 | 02 | 097 | 1-F02 |
| 81 25 023 | 02 | 097 | 1-F02 |
| 81 25 023 | 02 | 101 | 1-F06 |
| 81 25 023 | 02 | 119 | 1-F24 |
| 81 25 049 | 02 | 025 | 1-C02 |
| 81 25 064 | 02 | 027 | 1-C04 |
| 81 25 064 | 02 | 199 | 1-J08 |
| 81 25 148 | 02 | 091 | 1-E20 |
| 81 25 163 | 02 | 039 | 1-C16 |
| 81 25 163 | 02 | 055 | 1-D08 |
| 81 25 189 | 02 | 015 | 1-B16 |
| 81 25 189 | 02 | 017 | 1-B18 |
| 81 25 189 | 02 | 021 | 1-B22 |
| 81 25 189 | 02 | 177 | 1-I10 |
| 81 25 197 | 02 | 021 | 1-B22 |
| 81 25 197 | 02 | 037 | 1-C14 |
| 81 25 197 | 02 | 097 | 1-F02 |
| 81 25 197 | 02 | 099 | 1-F04 |
| 81 25 197 | 02 | 101 | 1-F06 |
| 81 25 197 | 02 | 173 | 1-I06 |
| 81 25 197 | 02 | 177 | 1-I10 |
| 81 25 197 | 02 | 185 | 1-I18 |
| 81 25 197 | 04 | 059 | 3-J12 |
| 81 25 205 | 02 | 039 | 1-C16 |
| 81 25 205 | 02 | 097 | 1-F02 |
| 81 25 205 | 02 | 099 | 1-F04 |
| 81 25 205 | 02 | 101 | 1-F06 |
| 81 25 205 | 02 | 175 | 1-I08 |
| 81 25 213 | 02 | 017 | 1-B18 |
| 81 25 239 | 02 | 025 | 1-C02 |
| 81 25 247 | 02 | 025 | 1-C02 |
| 81 25 262 | 02 | 025 | 1-C02 |
| 81 25 262 | 02 | 037 | 1-C14 |
| 81 25 262 | 02 | 173 | 1-I06 |
| 81 25 262 | 02 | 175 | 1-I08 |
| 81 25 304 | 02 | 037 | 1-C14 |
| 81 25 551 | 02 | 021 | 1-B22 |
| 81 25 585 | 02 | 021 | 1-B22 |
| 81 25 601 | 02 | 021 | 1-B22 |
| 81 25 882 | 02 | 043 | 1-C20 |
| 81 25 882 | 02 | 045 | 1-C22 |
| 81 25 882 | 02 | 103 | 1-F08 |
| 81 25 882 | 02 | 107 | 1-F12 |
| 81 25 882 | 02 | 115 | 1-F20 |
| 81 28 969 | 02 | 097 | 1-F02 |
| 81 28 969 | 02 | 129 | 1-G10 |
| 81 28 969 | 02 | 133 | 1-G14 |
| 81 29 876 | 02 | 103 | 1-F08 |
| 81 29 876 | 02 | 107 | 1-F12 |
| 81 29 876 | 02 | 115 | 1-F20 |
| 81 31 963 | 02 | 139 | 1-G20 |
| 81 31 989 | 02 | 097 | 1-F02 |
| 81 31 989 | 02 | 129 | 1-G10 |
| 81 31 989 | 02 | 131 | 1-G12 |
| 81 31 989 | 02 | 133 | 1-G14 |
| 81 32 219 | 02 | 139 | 1-G20 |
| 81 32 227 | 02 | 155 | 1-H12 |
| 81 32 227 | 02 | 161 | 1-H18 |
| 81 32 235 | 02 | 097 | 1-F02 |
| 81 32 235 | 02 | 129 | 1-G10 |
| 81 32 235 | 02 | 131 | 1-G12 |
| 81 32 235 | 02 | 133 | 1-G14 |
| 81 45 534 | 02 | 139 | 1-G20 |
| 81 45 542 | 02 | 155 | 1-H12 |
| 81 45 542 | 02 | 161 | 1-H18 |
| 81 45 559 | 02 | 131 | 1-G12 |
| 81 48 215 | 06 | 019 | 4-C20 |
| 81 48 744 | 02 | 181 | 1-I14 |
| 81 48 744 | 02 | 183 | 1-I16 |
| 81 48 769 | 02 | 181 | 1-I14 |
| 81 50 500 | 02 | 021 | 1-B22 |
| 81 50 534 | 02 | 021 | 1-B22 |
| 81 50 559 | 02 | 021 | 1-B22 |
| 81 51 045 | 02 | 103 | 1-F08 |
| 81 51 045 | 02 | 107 | 1-F12 |
| 81 51 045 | 02 | 113 | 1-F18 |
| 81 51 052 | 02 | 103 | 1-F08 |
| 81 51 052 | 02 | 107 | 1-F12 |
| 81 51 052 | 02 | 113 | 1-F18 |
| 81 51 060 | 02 | 137 | 1-G18 |
| 81 51 060 | 02 | 139 | 1-G20 |
| 81 51 060 | 02 | 143 | 1-G24 |
| 81 51 060 | 02 | 145 | 1-H02 |
| 81 51 060 | 02 | 147 | 1-H04 |
| 81 51 060 | 02 | 181 | 1-I14 |
| 81 51 060 | 05 | 023 | 4-A24 |
| 81 51 086 | 02 | 021 | 1-B22 |
| 81 51 094 | 06 | 017 | 4-C18 |
| 81 51 094 | 06 | 023 | 4-C24 |
| 81 51 177 | 02 | 091 | 1-E20 |
| 81 51 219 | 03A | 043 | 2-B20 |
| 81 51 219 | 03A | 057 | 2-C10 |
| 81 51 219 | 03A | 137 | 2-F18 |
| 81 51 219 | 08A | 101 | 5-E06 |
| 81 51 227 | 02 | 047 | 1-C24 |
| 81 51 227 | 02 | 049 | 1-D02 |
| 81 51 227 | 02 | 053 | 1-D06 |
| 81 51 227 | 02 | 095 | 1-E24 |
| 81 51 227 | 02 | 121 | 1-G02 |
| 81 51 227 | 02 | 133 | 1-G14 |
| 81 51 227 | 03A | 041 | 2-B18 |
| 81 51 227 | 03A | 133 | 2-F14 |
| 81 51 227 | 08A | 101 | 5-E06 |
| 81 51 227 | 08B | 013 | 6-A14 |
| 81 51 227 | 08C | 023 | 7-A24 |
| 81 51 227 | 08C | 037 | 7-B14 |
| 81 51 227 | 08C | 041 | 7-B18 |
| 81 51 227 | 08C | 045 | 7-B22 |
| 81 51 227 | 08C | 049 | 7-C02 |
| 81 51 227 | 08C | 051 | 7-C04 |
| 81 51 235 | 02 | 009 | 1-B10 |
| 81 51 235 | 02 | 011 | 1-B12 |
| 81 51 235 | 02 | 139 | 1-G20 |
| 81 51 235 | 02 | 143 | 1-G24 |
| 81 51 235 | 02 | 147 | 1-H04 |
| 81 51 235 | 02 | 149 | 1-H06 |
| 81 51 235 | 02 | 151 | 1-H08 |
| 81 51 235 | 03A | 007 | 2-A08 |
| 81 51 235 | 03A | 009 | 2-A10 |
| 81 51 235 | 03A | 049 | 2-C02 |
| 81 51 235 | 03A | 051 | 2-C04 |
| 81 51 235 | 03A | 055 | 2-C08 |
| 81 51 235 | 04 | 007 | 3-H08 |
| 81 51 235 | 04 | 013 | 3-H14 |
| 81 51 235 | 04 | 019 | 3-H20 |
| 81 51 235 | 04 | 061 | 3-J14 |
| 81 51 235 | 08A | 121 | 5-F02 |
| 81 51 235 | 08B | 159 | 6-G16 |
| 81 51 235 | 08C | 023 | 7-A24 |
| 81 51 243 | 02 | 009 | 1-B10 |
| 81 51 243 | 03A | 007 | 2-A08 |
| 81 51 243 | 03A | 009 | 2-A10 |
| 81 51 243 | 05 | 013 | 4-A14 |
| 81 51 326 | 02 | 045 | 1-C22 |
| 81 51 326 | 02 | 103 | 1-F08 |
| 81 51 326 | 02 | 107 | 1-F12 |
| 81 51 326 | 02 | 115 | 1-F20 |
| 81 51 474 | 04 | 007 | 3-H08 |
| 81 51 474 | 05 | 023 | 4-A24 |
| 81 51 482 | 06 | 011 | 4-C12 |
| 81 51 482 | 06 | 017 | 4-C18 |
| 81 51 482 | 06 | 023 | 4-C24 |
| 81 51 482 | 06 | 025 | 4-D02 |
| 81 51 482 | 07 | 013 | 4-E14 |
| 81 51 482 | 07 | 015 | 4-E16 |
| 81 51 482 | 07 | 021 | 4-E22 |
| 81 51 482 | 07 | 023 | 4-E24 |
| 81 52 381 | 04 | 015 | 3-H16 |
| 81 52 381 | 04 | 021 | 3-H22 |
| 81 52 381 | 04 | 059 | 3-J12 |
| 82 04 661 | 08A | 007 | 5-A08 |
| 82 04 760 | 03A | 127 | 2-F08 |
| 82 04 760 | 08A | 007 | 5-A08 |
| 82 04 760 | 08A | 011 | 5-A12 |
| 82 04 760 | 08A | 071 | 5-C24 |
| 82 05 452 | 08A | 007 | 5-A08 |
| 82 05 858 | 08A | 071 | 5-C24 |
| 82 05 981 | 08A | 007 | 5-A08 |
| 82 05 999 | 08A | 007 | 5-A08 |
| 82 06 096 | 08A | 011 | 5-A12 |
| 82 06 096 | 08A | 039 | 5-B16 |
| 82 06 096 | 08A | 049 | 5-C02 |
| 82 06 096 | 08A | 055 | 5-C08 |
| 82 06 096 | 08A | 057 | 5-C10 |
| 82 06 203 | 02 | 179 | 1-I12 |
| 82 06 369 | 08A | 063 | 5-C16 |
| 82 06 369 | 08A | 065 | 5-C18 |
| 82 06 369 | 08A | 067 | 5-C20 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

# 7-E23 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 82 06 393 | 08A | 063 | 5-C16 |
| 82 06 393 | 08A | 065 | 5-C18 |
| 82 06 393 | 08A | 067 | 5-C20 |
| 82 06 476 | 08A | 063 | 5-C16 |
| 82 06 476 | 08A | 065 | 5-C18 |
| 82 06 476 | 08A | 067 | 5-C20 |
| 82 07 573 | 08A | 063 | 5-C16 |
| 82 07 573 | 08A | 065 | 5-C18 |
| 82 07 573 | 08A | 067 | 5-C20 |
| 82 07 581 | 08A | 063 | 5-C16 |
| 82 07 581 | 08A | 065 | 5-C18 |
| 82 07 581 | 08A | 067 | 5-C20 |
| 82 09 009 | 08C | 007 | 7-A08 |
| 82 09 413 | 08A | 129 | 5-F10 |
| 82 09 694 | 08A | 063 | 5-C16 |
| 82 09 694 | 08A | 069 | 5-C22 |
| 82 09 694 | 08A | 161 | 5-G18 |
| 82 09 876 | 08A | 011 | 5-A12 |
| 82 09 884 | 08A | 011 | 5-A12 |
| 82 09 926 | 08A | 015 | 5-A16 |
| 82 09 934 | 08A | 015 | 5-A16 |
| 82 09 967 | 08A | 015 | 5-A16 |
| 82 09 967 | 08A | 043 | 5-B20 |
| 82 11 294 | 08A | 061 | 5-C14 |
| 82 15 683 | 08A | 061 | 5-C14 |
| 82 15 683 | 08A | 087 | 5-D16 |
| 82 15 899 | 08A | 063 | 5-C16 |
| 82 15 907 | 08A | 063 | 5-C16 |
| 82 17 432 | 08A | 063 | 5-C16 |
| 82 17 432 | 08A | 067 | 5-C20 |
| 82 17 440 | 08A | 063 | 5-C16 |
| 82 17 440 | 08A | 067 | 5-C20 |
| 82 17 689 | 08B | 197 | 6-I06 |
| 82 18 661 | 08A | 041 | 5-B18 |
| 82 24 917 | 08A | 063 | 5-C16 |
| 82 24 917 | 08A | 067 | 5-C20 |
| 82 24 925 | 08A | 063 | 5-C16 |
| 82 24 925 | 08A | 067 | 5-C20 |
| 82 24 933 | 08A | 063 | 5-C16 |
| 82 24 933 | 08A | 067 | 5-C20 |
| 82 24 933 | 08A | 071 | 5-C24 |
| 82 25 872 | 08A | 011 | 5-A12 |
| 82 27 738 | 08A | 129 | 5-F10 |
| 82 27 738 | 08A | 165 | 5-G22 |
| 82 27 738 | 08A | 185 | 5-H18 |
| 82 28 702 | 08A | 011 | 5-A12 |
| 82 28 843 | 08A | 015 | 5-A16 |
| 82 33 645 | 08A | 161 | 5-G18 |
| 82 33 686 | 08A | 015 | 5-A16 |
| 82 33 736 | 08A | 087 | 5-D16 |
| 82 35 178 | 08A | 059 | 5-C12 |
| 82 35 178 | 08A | 099 | 5-E04 |
| 82 35 178 | 08A | 113 | 5-E18 |
| 82 35 178 | 08A | 129 | 5-F10 |
| 82 35 178 | 08A | 133 | 5-F14 |
| 82 35 178 | 08A | 137 | 5-F18 |
| 82 35 178 | 08A | 139 | 5-F20 |
| 82 36 606 | 08A | 075 | 5-D04 |
| 82 36 606 | 08A | 079 | 5-D08 |
| 82 36 762 | 08A | 117 | 5-E22 |
| 82 36 762 | 08A | 125 | 5-F06 |
| 82 37 265 | 08A | 117 | 5-E22 |
| 82 37 265 | 08A | 125 | 5-F06 |
| 82 37 323 | 08A | 089 | 5-D18 |
| 82 38 099 | 08A | 089 | 5-D18 |
| 82 38 107 | 08A | 089 | 5-D18 |
| 82 38 115 | 08A | 089 | 5-D18 |
| 82 38 123 | 08A | 089 | 5-D18 |
| 82 39 154 | 08A | 007 | 5-A08 |
| 82 39 162 | 08A | 007 | 5-A08 |
| 82 39 170 | 08A | 007 | 5-A08 |
| 82 39 733 | 03A | 145 | 2-G02 |
| 82 39 733 | 08B | 011 | 6-A12 |
| 82 41 093 | 08A | 071 | 5-C24 |
| 82 41 101 | 08A | 071 | 5-C24 |
| 82 41 119 | 08A | 071 | 5-C24 |
| 82 41 291 | 08A | 071 | 5-C24 |
| 82 41 325 | 03A | 127 | 2-F08 |
| 82 41 325 | 03A | 145 | 2-G02 |
| 82 41 325 | 08A | 055 | 5-C08 |
| 82 41 994 | 08A | 075 | 5-D04 |
| 82 41 994 | 08A | 079 | 5-D08 |
| 82 41 994 | 08A | 081 | 5-D10 |
| 82 42 398 | 08A | 007 | 5-A08 |
| 82 42 406 | 08A | 007 | 5-A08 |
| 82 42 554 | 08A | 007 | 5-A08 |
| 82 43 578 | 08A | 063 | 5-C16 |
| 82 43 578 | 08A | 065 | 5-C18 |
| 82 43 578 | 08A | 067 | 5-C20 |
| 82 43 578 | 08A | 071 | 5-C24 |
| 82 43 651 | 08A | 071 | 5-C24 |
| 82 43 669 | 08A | 071 | 5-C24 |
| 82 44 964 | 08A | 119 | 5-E24 |
| 82 44 964 | 08A | 133 | 5-F14 |
| 82 45 326 | 08A | 095 | 5-D24 |
| 82 45 326 | 08A | 097 | 5-E02 |
| 82 45 888 | 08A | 045 | 5-B22 |
| 82 45 888 | 08A | 051 | 5-C04 |
| 82 45 888 | 08C | 007 | 7-A08 |
| 82 47 553 | 08A | 145 | 5-G02 |
| 82 47 801 | 08A | 133 | 5-F14 |
| 82 47 801 | 08A | 139 | 5-F20 |
| 82 48 015 | 08A | 145 | 5-G02 |
| 82 48 023 | 08A | 145 | 5-G02 |
| 82 48 049 | 08A | 145 | 5-G02 |
| 82 48 270 | 08A | 017 | 5-A18 |
| 82 48 270 | 08A | 021 | 5-A22 |
| 82 48 288 | 08A | 017 | 5-A18 |
| 82 48 288 | 08A | 021 | 5-A22 |
| 82 48 437 | 08A | 017 | 5-A18 |
| 82 48 494 | 08A | 017 | 5-A18 |
| 82 48 502 | 08A | 017 | 5-A18 |
| 82 48 577 | 08A | 017 | 5-A18 |
| 82 48 585 | 08A | 017 | 5-A18 |
| 82 48 593 | 08A | 017 | 5-A18 |
| 82 48 601 | 08A | 017 | 5-A18 |
| 82 48 619 | 08A | 017 | 5-A18 |
| 82 48 619 | 08A | 021 | 5-A22 |
| 82 48 726 | 08A | 017 | 5-A18 |
| 82 48 775 | 08A | 017 | 5-A18 |
| 82 49 161 | 08A | 089 | 5-D18 |
| 82 49 310 | 08A | 145 | 5-G02 |
| 82 49 328 | 08A | 145 | 5-G02 |
| 82 49 526 | 08A | 017 | 5-A18 |
| 82 49 526 | 08A | 021 | 5-A22 |
| 82 49 633 | 08A | 017 | 5-A18 |
| 82 49 633 | 08A | 021 | 5-A22 |
| 82 49 682 | 08A | 017 | 5-A18 |
| 82 49 724 | 08A | 017 | 5-A18 |
| 82 49 740 | 08A | 017 | 5-A18 |
| 82 49 757 | 08A | 017 | 5-A18 |
| 82 49 872 | 08A | 015 | 5-A16 |
| 82 49 880 | 08A | 015 | 5-A16 |
| 82 49 914 | 08A | 089 | 5-D18 |
| 82 49 922 | 08A | 089 | 5-D18 |
| 82 49 955 | 08A | 125 | 5-F06 |
| 82 49 963 | 08A | 125 | 5-F06 |
| 82 51 217 | 08A | 083 | 5-D12 |
| 82 51 639 | 08A | 115 | 5-E20 |
| 82 51 746 | 08A | 099 | 5-E04 |
| 82 51 944 | 08A | 145 | 5-G02 |
| 82 52 314 | 08A | 083 | 5-D12 |
| 82 52 363 | 08A | 083 | 5-D12 |
| 82 52 363 | 08A | 101 | 5-E06 |
| 82 52 553 | 04 | 007 | 3-H08 |
| 82 52 553 | 05 | 023 | 4-A24 |
| 82 52 553 | 08A | 083 | 5-D12 |
| 82 52 868 | 08A | 083 | 5-D12 |
| 82 53 155 | 08A | 043 | 5-B20 |
| 82 53 163 | 08A | 043 | 5-B20 |
| 82 53 197 | 08A | 115 | 5-E20 |
| 82 55 242 | 08A | 043 | 5-B20 |
| 82 55 267 | 08A | 101 | 5-E06 |
| 82 55 911 | 08A | 057 | 5-C10 |
| 82 55 929 | 08A | 057 | 5-C10 |
| 82 56 273 | 08A | 059 | 5-C12 |
| 82 56 372 | 08A | 075 | 5-D04 |
| 82 56 372 | 08A | 079 | 5-D08 |
| 82 56 380 | 08A | 075 | 5-D04 |
| 82 56 380 | 08A | 079 | 5-D08 |
| 82 56 786 | 08A | 043 | 5-B20 |
| 82 56 794 | 08A | 043 | 5-B20 |
| 82 57 511 | 08A | 115 | 5-E20 |
| 82 57 511 | 08A | 125 | 5-F06 |
| 82 57 750 | 08A | 087 | 5-D16 |
| 82 58 212 | 08A | 145 | 5-G02 |
| 82 58 253 | 08A | 145 | 5-G02 |
| 82 58 279 | 08A | 141 | 5-F22 |
| 82 58 352 | 08A | 141 | 5-F22 |
| 82 58 360 | 08A | 141 | 5-F22 |
| 82 58 378 | 08A | 141 | 5-F22 |
| 82 58 386 | 08A | 141 | 5-F22 |
| 82 58 394 | 08A | 141 | 5-F22 |
| 82 58 402 | 08A | 141 | 5-F22 |
| 82 58 428 | 08A | 141 | 5-F22 |
| 82 58 428 | 08A | 143 | 5-F24 |
| 82 58 832 | 08A | 145 | 5-G02 |
| 82 58 840 | 08A | 145 | 5-G02 |
| 82 58 972 | 08A | 057 | 5-C10 |
| 82 59 061 | 08A | 007 | 5-A08 |
| 82 59 855 | 08A | 127 | 5-F08 |
| 82 59 863 | 08A | 127 | 5-F08 |
| 82 60 135 | 08A | 125 | 5-F06 |
| 82 60 143 | 08A | 125 | 5-F06 |
| 82 60 192 | 08A | 045 | 5-B22 |
| 82 60 218 | 08A | 045 | 5-B22 |
| 82 60 218 | 08A | 047 | 5-B24 |
| 82 60 218 | 08A | 051 | 5-C04 |
| 82 60 226 | 08A | 045 | 5-B22 |
| 82 60 226 | 08A | 047 | 5-B24 |
| 82 60 226 | 08A | 051 | 5-C04 |
| 82 60 234 | 08A | 045 | 5-B22 |
| 82 60 234 | 08A | 047 | 5-B24 |
| 82 60 234 | 08A | 051 | 5-C04 |
| 82 60 242 | 08A | 045 | 5-B22 |
| 82 60 242 | 08A | 047 | 5-B24 |
| 82 60 242 | 08A | 051 | 5-C04 |
| 82 60 747 | 08A | 039 | 5-B16 |
| 82 61 299 | 08A | 057 | 5-C10 |
| 82 61 364 | 08A | 057 | 5-C10 |
| 82 61 547 | 08A | 039 | 5-B16 |
| 82 61 638 | 08A | 125 | 5-F06 |
| 82 61 646 | 08A | 125 | 5-F06 |
| 82 62 008 | 08A | 039 | 5-B16 |
| 82 62 354 | 08A | 039 | 5-B16 |
| 82 62 537 | 08A | 043 | 5-B20 |
| 82 62 537 | 08A | 045 | 5-B22 |
| 82 62 537 | 08A | 047 | 5-B24 |
| 82 62 537 | 08A | 051 | 5-C04 |
| 82 62 545 | 08A | 087 | 5-D16 |
| 82 62 602 | 08B | 005 | 6-A06 |
| 82 62 610 | 08B | 005 | 6-A06 |
| 82 62 750 | 08A | 075 | 5-D04 |
| 82 62 750 | 08A | 079 | 5-D08 |
| 82 62 750 | 08A | 081 | 5-D10 |
| 82 62 768 | 08A | 075 | 5-D04 |
| 82 62 768 | 08A | 079 | 5-D08 |
| 82 62 768 | 08A | 081 | 5-D10 |
| 82 62 941 | 06 | 005 | 4-C06 |
| 82 62 958 | 08A | 007 | 5-A08 |
| 82 62 966 | 08A | 039 | 5-B16 |
| 82 62 974 | 08A | 011 | 5-A12 |
| 82 62 974 | 08B | 125 | 6-F06 |
| 82 62 974 | 08B | 129 | 6-F10 |
| 82 62 974 | 08B | 133 | 6-F14 |
| 82 62 974 | 08B | 137 | 6-F18 |
| 82 64 962 | 08A | 101 | 5-E06 |
| 82 64 962 | 08A | 103 | 5-E08 |
| 82 64 962 | 08A | 161 | 5-G18 |
| 82 64 962 | 08A | 163 | 5-G20 |
| 82 66 017 | 08A | 057 | 5-C10 |
| 82 66 025 | 08A | 057 | 5-C10 |
| 82 66 454 | 08A | 005 | 5-A06 |
| 82 66 462 | 08A | 005 | 5-A06 |
| 82 66 579 | 08A | 141 | 5-F22 |
| 82 66 579 | 08A | 143 | 5-F24 |
| 82 66 744 | 08A | 141 | 5-F22 |
| 82 66 744 | 08A | 143 | 5-F24 |
| 82 66 777 | 08A | 141 | 5-F22 |
| 82 66 777 | 08A | 143 | 5-F24 |
| 82 66 785 | 08A | 141 | 5-F22 |



# 7-E24 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 82 66 785 | 08A | 143 | 5-F24 |
| 82 66 835 | 08A | 101 | 5-E06 |
| 82 66 835 | 08A | 109 | 5-E14 |
| 82 66 835 | 08A | 161 | 5-G18 |
| 82 66 843 | 08A | 017 | 5-A18 |
| 82 66 843 | 08A | 021 | 5-A22 |
| 82 66 876 | 08A | 007 | 5-A08 |
| 82 66 884 | 08A | 101 | 5-E06 |
| 82 66 884 | 08A | 109 | 5-E14 |
| 82 66 900 | 08A | 141 | 5-F22 |
| 82 66 900 | 08A | 143 | 5-F24 |
| 82 66 926 | 08A | 059 | 5-C12 |
| 82 67 049 | 08A | 007 | 5-A08 |
| 82 67 098 | 03A | 005 | 2-A06 |
| 82 67 098 | 03A | 081 | 2-D10 |
| 82 67 130 | 08A | 081 | 5-D10 |
| 82 67 205 | 03A | 005 | 2-A06 |
| 82 67 205 | 08A | 021 | 5-A22 |
| 82 67 205 | 08B | 017 | 6-A18 |
| 82 67 296 | 08A | 007 | 5-A08 |
| 82 67 395 | 08A | 061 | 5-C14 |
| 82 67 403 | 08A | 101 | 5-E06 |
| 82 67 601 | 08A | 057 | 5-C10 |
| 82 67 890 | 08A | 127 | 5-F08 |
| 82 67 908 | 06 | 005 | 4-C06 |
| 82 68 500 | 08A | 101 | 5-E06 |
| 82 68 500 | 08A | 109 | 5-E14 |
| 82 68 518 | 08A | 059 | 5-C12 |
| 82 69 375 | 08A | 079 | 5-D08 |
| 82 69 383 | 08A | 079 | 5-D08 |
| 82 69 425 | 08A | 117 | 5-E22 |
| 82 69 425 | 08A | 127 | 5-F08 |
| 82 69 433 | 08A | 117 | 5-E22 |
| 82 69 433 | 08A | 125 | 5-F06 |
| 82 69 706 | 08A | 059 | 5-C12 |
| 82 69 987 | 08A | 093 | 5-D22 |
| 82 71 918 | 09 | 017 | 7-D18 |
| 82 72 130 | 08A | 093 | 5-D22 |
| 82 72 197 | 08A | 041 | 5-B18 |
| 82 72 205 | 08A | 041 | 5-B18 |
| 82 72 494 | 08A | 039 | 5-B16 |
| 82 72 635 | 08A | 055 | 5-C08 |
| 82 72 791 | 08A | 057 | 5-C10 |
| 82 73 047 | 08A | 137 | 5-F18 |
| 82 73 054 | 08A | 137 | 5-F18 |
| 82 73 278 | 08A | 141 | 5-F22 |
| 82 73 286 | 08A | 141 | 5-F22 |
| 82 73 294 | 08A | 141 | 5-F22 |
| 82 73 468 | 08A | 101 | 5-E06 |
| 82 73 633 | 08A | 115 | 5-E20 |
| 82 73 641 | 08A | 115 | 5-E20 |
| 82 73 815 | 08A | 059 | 5-C12 |
| 82 74 037 | 08A | 067 | 5-C20 |
| 82 74 045 | 08A | 067 | 5-C20 |
| 82 74 185 | 08A | 059 | 5-C12 |
| 82 74 219 | 08A | 039 | 5-B16 |
| 82 74 227 | 08A | 039 | 5-B16 |
| 82 74 235 | 08A | 039 | 5-B16 |
| 82 74 243 | 08A | 039 | 5-B16 |
| 82 74 359 | 08A | 039 | 5-B16 |
| 82 74 367 | 08A | 039 | 5-B16 |
| 82 74 383 | 08A | 005 | 5-A06 |
| 82 74 425 | 08A | 015 | 5-A16 |
| 82 74 433 | 08A | 017 | 5-A18 |
| 82 74 433 | 08A | 021 | 5-A22 |
| 82 74 516 | 08A | 053 | 5-C06 |
| 82 74 573 | 08A | 137 | 5-F18 |
| 82 74 573 | 08A | 139 | 5-F20 |
| 82 74 599 | 08A | 005 | 5-A06 |
| 82 74 607 | 08A | 005 | 5-A06 |
| 82 74 615 | 08A | 005 | 5-A06 |
| 82 74 623 | 08A | 005 | 5-A06 |
| 82 74 631 | 08A | 041 | 5-B18 |
| 82 74 649 | 08A | 041 | 5-B18 |
| 82 74 706 | 08A | 039 | 5-B16 |
| 82 74 797 | 08A | 041 | 5-B18 |
| 82 74 805 | 08A | 041 | 5-B18 |
| 82 74 813 | 08A | 005 | 5-A06 |
| 82 74 821 | 08A | 005 | 5-A06 |
| 82 74 854 | 08A | 061 | 5-C14 |
| 82 74 862 | 08A | 061 | 5-C14 |
| 82 74 946 | 08A | 057 | 5-C10 |
| 82 75 240 | 08A | 115 | 5-E20 |
| 82 75 240 | 08A | 125 | 5-F06 |
| 82 75 356 | 08A | 125 | 5-F06 |
| 82 75 364 | 08A | 125 | 5-F06 |
| 82 75 877 | 08A | 057 | 5-C10 |
| 82 75 885 | 08A | 117 | 5-E22 |
| 82 75 885 | 08A | 127 | 5-F08 |
| 82 75 893 | 08A | 117 | 5-E22 |
| 82 75 893 | 08A | 127 | 5-F08 |
| 82 76 057 | 08A | 039 | 5-B16 |
| 82 76 065 | 08A | 039 | 5-B16 |
| 82 76 107 | 08A | 039 | 5-B16 |
| 82 76 [illegible]9 | 08A | 133 | 5-F14 |
| 82 76 479 | 08A | 137 | 5-F18 |
| 82 76 503 | 08A | 139 | 5-F20 |
| 82 76 511 | 08A | 139 | 5-F20 |
| 82 76 529 | 08A | 139 | 5-F20 |
| 82 76 776 | 08A | 093 | 5-D22 |
| 82 77 519 | 08A | 075 | 5-D04 |
| 82 77 527 | 08A | 075 | 5-D04 |
| 82 77 667 | 08B | 143 | 6-F24 |
| 82 77 667 | 08B | 229 | 6-J14 |
| 82 78 020 | 08A | 141 | 5-F22 |
| 82 78 343 | 08A | 057 | 5-C10 |
| 82 78 509 | 08A | 057 | 5-C10 |
| 82 78 558 | 03A | 129 | 2-F10 |
| 82 78 558 | 08A | 039 | 5-B16 |
| 82 78 558 | 08C | 023 | 7-A24 |
| 82 78 558 | 08C | 029 | 7-B06 |
| 82 78 558 | 08C | 033 | 7-B10 |
| 82 78 558 | 08C | 037 | 7-B14 |
| 82 78 863 | 08A | 083 | 5-D12 |
| 82 78 913 | 08A | 137 | 5-F18 |
| 82 78 947 | 08A | 123 | 5-F04 |
| 82 78 947 | 08A | 133 | 5-F14 |
| 82 78 947 | 08A | 137 | 5-F18 |
| 82 78 947 | 08A | 139 | 5-F20 |
| 82 78 996 | 08A | 133 | 5-F14 |
| 82 79 218 | 08A | 083 | 5-D12 |
| 82 79 226 | 08A | 011 | 5-A12 |
| 82 79 457 | 08A | 011 | 5-A12 |
| 82 83 533 | 08A | 007 | 5-A08 |
| 82 83 590 | 08A | 017 | 5-A18 |
| 82 83 590 | 08A | 021 | 5-A22 |
| 82 83 608 | 08A | 017 | 5-A18 |
| 82 83 608 | 08A | 021 | 5-A22 |
| 82 83 665 | 08A | 043 | 5-B20 |
| 82 83 665 | 08A | 045 | 5-B22 |
| 82 83 715 | 08A | 097 | 5-E02 |
| 82 83 715 | 08A | 099 | 5-E04 |
| 82 83 772 | 08A | 083 | 5-D12 |
| 82 83 780 | 08A | 083 | 5-D12 |
| 82 83 798 | 04 | 049 | 3-J02 |
| 82 83 806 | 08A | 087 | 5-D16 |
| 82 83 848 | 08A | 087 | 5-D16 |
| 82 83 855 | 08A | 087 | 5-D16 |
| 82 83 863 | 08A | 141 | 5-F22 |
| 82 83 863 | 08A | 173 | 5-H06 |
| 82 83 871 | 08A | 145 | 5-G02 |
| 82 83 871 | 08A | 173 | 5-H06 |
| 82 83 921 | 08A | 043 | 5-B20 |
| 82 83 921 | 08A | 047 | 5-B24 |
| 82 83 939 | 08A | 043 | 5-B20 |
| 82 83 939 | 08A | 047 | 5-B24 |
| 82 83 947 | 08A | 005 | 5-A06 |
| 82 84 093 | 08A | 123 | 5-F04 |
| 82 84 093 | 08A | 161 | 5-G18 |
| 82 84 127 | 08A | 151 | 5-G08 |
| 82 84 135 | 08A | 151 | 5-G08 |
| 82 84 143 | 08A | 155 | 5-G12 |
| 82 84 150 | 08A | 157 | 5-G14 |
| 82 84 168 | 08A | 151 | 5-G08 |
| 82 84 176 | 08A | 151 | 5-G08 |
| 82 84 184 | 08A | 155 | 5-G12 |
| 82 84 200 | 08A | 119 | 5-E24 |
| 82 84 200 | 08A | 161 | 5-G18 |
| 82 84 218 | 08A | 119 | 5-E24 |
| 82 84 218 | 08A | 161 | 5-G18 |
| 82 85 231 | 08A | 153 | 5-G10 |
| 82 85 231 | 08A | 155 | 5-G12 |
| 82 85 231 | 08A | 157 | 5-G14 |
| 82 85 231 | 08A | 159 | 5-G16 |
| 82 85 249 | 08A | 159 | 5-G16 |
| 82 85 256 | 08A | 159 | 5-G16 |
| 82 85 264 | 08A | 159 | 5-G16 |
| 82 85 462 | 08A | 043 | 5-B20 |
| 82 85 462 | 08A | 045 | 5-B22 |
| 82 85 470 | 08A | 043 | 5-B20 |
| 82 85 470 | 08A | 045 | 5-B22 |
| 82 85 488 | 08A | 153 | 5-G10 |
| 82 85 488 | 08A | 155 | 5-G12 |
| 82 85 488 | 08A | 157 | 5-G14 |
| 82 85 496 | 08A | 153 | 5-G10 |
| 82 85 496 | 08A | 155 | 5-G12 |
| 82 85 496 | 08A | 157 | 5-G14 |
| 82 85 744 | 08A | 091 | 5-D20 |
| 82 85 843 | 08A | 083 | 5-D12 |
| 82 85 900 | 08A | 059 | 5-C12 |
| 82 86 296 | 03A | 005 | 2-A06 |
| 82 86 296 | 03A | 047 | 2-B24 |
| 82 86 296 | 08A | 011 | 5-A12 |
| 82 86 296 | 08A | 057 | 5-C10 |
| 82 86 296 | 08A | 087 | 5-D16 |
| 82 86 296 | 08B | 013 | 6-A14 |
| 82 86 296 | 08B | 015 | 6-A16 |
| 82 86 304 | 08A | 043 | 5-B20 |
| 82 86 304 | 08A | 045 | 5-B22 |
| 82 86 304 | 08A | 047 | 5-B24 |
| 82 86 304 | 08A | 051 | 5-C04 |
| 82 86 312 | 08A | 117 | 5-E22 |
| 82 86 387 | 08A | 011 | 5-A12 |
| 82 86 395 | 08A | 039 | 5-B16 |
| 82 86 403 | 08A | 039 | 5-B16 |
| 82 86 429 | 08A | 017 | 5-A18 |
| 82 86 429 | 08A | 021 | 5-A22 |
| 82 86 528 | 08A | 057 | 5-C10 |
| 82 86 551 | 08A | 083 | 5-D12 |
| 82 86 759 | 08A | 139 | 5-F20 |
| 82 86 767 | 08A | 139 | 5-F20 |
| 82 86 833 | 08A | 071 | 5-C24 |
| 82 86 841 | 08A | 071 | 5-C24 |
| 82 86 858 | 08A | 089 | 5-D18 |
| 82 86 874 | 08A | 133 | 5-F14 |
| 82 86 890 | 08A | 139 | 5-F20 |
| 82 86 973 | 08A | 115 | 5-E20 |
| 82 86 981 | 08A | 115 | 5-E20 |
| 82 87 153 | 08A | 081 | 5-D10 |
| 82 87 179 | 08A | 099 | 5-E04 |
| 82 87 187 | 08A | 099 | 5-E04 |
| 82 87 286 | 08A | 047 | 5-B24 |
| 82 87 286 | 08A | 051 | 5-C04 |
| 82 87 294 | 08A | 007 | 5-A08 |
| 82 87 302 | 08A | 007 | 5-A08 |
| 82 87 310 | 08A | 129 | 5-F10 |
| 82 87 328 | 08A | 129 | 5-F10 |
| 82 87 732 | 08A | 115 | 5-E20 |
| 82 87 740 | 08A | 115 | 5-E20 |
| 82 87 757 | 08A | 117 | 5-E22 |
| 82 87 765 | 08A | 117 | 5-E22 |
| 82 87 773 | 08A | 117 | 5-E22 |
| 82 87 781 | 08A | 117 | 5-E22 |
| 82 87 799 | 08A | 117 | 5-E22 |
| 82 87 997 | 08A | 045 | 5-B22 |
| 82 88 003 | 03A | 045 | 5-B22 |
| 82 88 029 | 08A | 021 | 5-A22 |
| 82 88 044 | 08A | 083 | 5-D12 |
| 82 88 151 | 08A | 129 | 5-F10 |
| 82 88 169 | 08A | 129 | 5-F10 |
| 82 88 193 | 08A | 017 | 5-A18 |
| 82 88 193 | 08A | 021 | 5-A22 |
| 82 88 243 | 08A | 021 | 5-A22 |
| 82 88 516 | 08A | 115 | 5-E20 |
| 82 88 524 | 08A | 115 | 5-E20 |
| 82 88 599 | 08A | 017 | 5-A18 |
| 82 88 714 | 08A | 063 | 5-C16 |
| 82 88 722 | 08A | 063 | 5-C16 |
| 82 88 763 | 08A | 067 | 5-C20 |
| 82 88 771 | 08A | 067 | 5-C20 |
| 82 88 789 | 08A | 039 | 5-B16 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

# 7-F01 Numerical register — Nummerregister

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 82 89 266 | 08A | 129 | 5-F10 |
| 82 89 423 | 08A | 039 | 5-B16 |
| 82 89 670 | 08A | 087 | 5-D16 |
| 82 89 738 | 08A | 087 | 5-D16 |
| 82 89 753 | 08A | 087 | 5-D16 |
| 82 89 803 | 08A | 133 | 5-F14 |
| 82 89 803 | 08A | 139 | 5-F20 |
| 82 89 852 | 08A | 091 | 5-D20 |
| 82 89 878 | 08A | 087 | 5-D16 |
| 82 89 886 | 08A | 087 | 5-D16 |
| 82 89 894 | 08A | 087 | 5-D16 |
| 82 89 993 | 08A | 011 | 5-A12 |
| 83 00 469 | 04 | 005 | 3-H06 |
| 83 00 469 | 04 | 077 | 3-K06 |
| 83 00 725 | 04 | 013 | 3-H14 |
| 83 00 725 | 04 | 019 | 3-H20 |
| 83 00 725 | 04 | 059 | 3-J12 |
| 83 05 294 | 02 | 041 | 1-C18 |
| 83 05 302 | 02 | 041 | 1-C18 |
| 83 05 328 | 02 | 041 | 1-C18 |
| 83 05 336 | 02 | 189 | 1-I22 |
| 83 05 344 | 02 | 041 | 1-C18 |
| 83 05 369 | 02 | 041 | 1-C18 |
| 83 05 419 | 02 | 189 | 1-I22 |
| 83 05 484 | 02 | 041 | 1-C18 |
| 83 05 484 | 02 | 189 | 1-I22 |
| 83 05 575 | 02 | 191 | 1-I24 |
| 83 05 633 | 02 | 041 | 1-C18 |
| 83 05 641 | 02 | 041 | 1-C18 |
| 83 05 658 | 02 | 041 | 1-C18 |
| 83 05 666 | 02 | 041 | 1-C18 |
| 83 05 773 | 02 | 189 | 1-I22 |
| 83 05 773 | 02 | 191 | 1-I24 |
| 83 05 807 | 02 | 041 | 1-C18 |
| 83 05 823 | 02 | 189 | 1-I22 |
| 83 05 823 | 02 | 191 | 1-I24 |
| 83 05 849 | 02 | 041 | 1-C18 |
| 83 05 849 | 02 | 189 | 1-I22 |
| 83 05 849 | 02 | 191 | 1-I24 |
| 83 07 407 | 04 | 005 | 3-H06 |
| 83 07 498 | 04 | 005 | 3-H06 |
| 83 07 498 | 04 | 083 | 3-K12 |
| 83 07 688 | 04 | 077 | 3-K06 |
| 83 08 215 | 02 | 013 | 1-B14 |
| 83 08 215 | 02 | 193 | 1-J02 |
| 83 08 223 | 02 | 013 | 1-B14 |
| 83 08 223 | 02 | 193 | 1-J02 |
| 83 08 231 | 02 | 013 | 1-B14 |
| 83 08 231 | 02 | 193 | 1-J02 |
| 83 08 249 | 02 | 013 | 1-B14 |
| 83 08 249 | 02 | 193 | 1-J02 |
| 83 08 256 | 02 | 013 | 1-B14 |
| 83 08 256 | 02 | 193 | 1-J02 |
| 83 08 264 | 02 | 013 | 1-B14 |
| 83 08 264 | 02 | 193 | 1-J02 |
| 83 08 272 | 02 | 013 | 1-B14 |
| 83 08 272 | 02 | 193 | 1-J02 |
| 83 08 280 | 02 | 013 | 1-B14 |
| 83 08 280 | 02 | 193 | 1-J02 |
| 83 08 298 | 02 | 013 | 1-B14 |
| 83 08 298 | 02 | 193 | 1-J02 |
| 83 08 306 | 02 | 013 | 1-B14 |
| 83 08 306 | 02 | 193 | 1-J02 |
| 83 08 371 | 04 | 057 | 3-J10 |
| 83 08 389 | 04 | 073 | 3-K02 |
| 83 08 652 | 02 | 189 | 1-I22 |
| 83 08 652 | 02 | 191 | 1-I24 |
| 83 08 678 | 02 | 191 | 1-I24 |
| 83 08 850 | 02 | 097 | 1-F02 |
| 83 08 892 | 02 | 041 | 1-C18 |
| 83 08 892 | 02 | 191 | 1-I24 |
| 83 08 983 | 02 | 041 | 1-C18 |
| 83 08 983 | 02 | 043 | 1-C20 |
| 83 08 983 | 08C | 043 | 7-B20 |
| 83 08 983 | 08C | 053 | 7-C06 |
| 83 09 031 | 02 | 041 | 1-C18 |
| 83 09 049 | 02 | 041 | 1-C18 |
| 83 09 064 | 02 | 043 | 1-C20 |
| 83 09 064 | 02 | 189 | 1-I22 |
| 83 09 064 | 02 | 191 | 1-I24 |
| 83 09 072 | 02 | 043 | 1-C20 |
| 83 09 072 | 02 | 189 | 1-I22 |
| 83 09 072 | 02 | 191 | 1-I24 |
| 83 09 080 | 02 | 041 | 1-C18 |
| 83 09 098 | 02 | 041 | 1-C18 |
| 83 09 098 | 02 | 189 | 1-I22 |
| 83 10 393 | 02 | 041 | 1-C18 |
| 83 11 904 | 03A | 071 | 2-C24 |
| 83 13 793 | 02 | 043 | 1-C20 |
| 83 14 395 | 04 | 079 | 3-K08 |
| 83 14 445 | 04 | 079 | 3-K08 |
| 83 14 452 | 04 | 079 | 3-K08 |
| 83 14 494 | 02 | 093 | 1-E22 |
| 83 15 392 | 02 | 043 | 1-C20 |
| 83 15 467 | 02 | 057 | 1-D10 |
| 83 15 475 | 02 | 057 | 1-D10 |
| 83 15 558 | 05 | 005 | 4-A06 |
| 83 15 558 | 05 | 017 | 4-A18 |
| 83 15 558 | 07 | 005 | 4-E06 |
| 83 15 558 | 07 | 013 | 4-E14 |
| 83 15 582 | 04 | 075 | 3-K04 |
| 83 17 828 | 02 | 047 | 1-C24 |
| 83 17 828 | 02 | 105 | 1-F10 |
| 83 17 828 | 02 | 111 | 1-F16 |
| 83 17 828 | 02 | 117 | 1-F22 |
| 83 17 828 | 08C | 031 | 7-B08 |
| 83 17 828 | 08C | 033 | 7-B10 |
| 83 17 828 | 08C | 037 | 7-B14 |
| 83 17 828 | 08C | 039 | 7-B16 |
| 83 17 828 | 08C | 045 | 7-B22 |
| 83 17 828 | 08C | 049 | 7-C02 |
| 83 17 869 | 04 | 075 | 3-K04 |
| 83 17 893 | 02 | 047 | 1-C24 |
| 83 17 901 | 02 | 049 | 1-D02 |
| 83 17 919 | 02 | 047 | 1-C24 |
| 83 17 919 | 02 | 049 | 1-D02 |
| 83 18 339 | 02 | 047 | 1-C24 |
| 83 19 915 | 02 | 063 | 1-D16 |
| 83 19 915 | 02 | 067 | 1-D20 |
| 83 19 915 | 02 | 071 | 1-D24 |
| 83 19 915 | 02 | 085 | 1-E14 |
| 83 19 915 | 02 | 091 | 1-E20 |
| 83 19 931 | 02 | 157 | 1-H14 |
| 83 20 319 | 02 | 085 | 1-E14 |
| 83 20 319 | 02 | 091 | 1-E20 |
| 83 21 044 | 02 | 047 | 1-C24 |
| 83 21 044 | 02 | 049 | 1-D02 |
| 83 21 051 | 02 | 047 | 1-C24 |
| 83 21 051 | 02 | 049 | 1-D02 |
| 83 22 166 | 02 | 043 | 1-C20 |
| 83 22 364 | 02 | 041 | 1-C18 |
| 83 22 380 | 02 | 083 | 1-E12 |
| 83 22 539 | 02 | 083 | 1-E12 |
| 83 22 554 | 02 | 083 | 1-E12 |
| 83 22 570 | 02 | 083 | 1-E12 |
| 83 22 588 | 02 | 083 | 1-E12 |
| 83 22 604 | 02 | 083 | 1-E12 |
| 83 22 612 | 02 | 083 | 1-E12 |
| 83 22 927 | 02 | 063 | 1-D16 |
| 83 22 927 | 02 | 067 | 1-D20 |
| 83 22 927 | 02 | 071 | 1-D24 |
| 83 23 008 | 02 | 093 | 1-E22 |
| 83 23 024 | 02 | 083 | 1-E12 |
| 83 23 214 | 02 | 121 | 1-G02 |
| 83 23 362 | 02 | 095 | 1-E24 |
| 83 23 941 | 02 | 057 | 1-D10 |
| 83 24 006 | 02 | 083 | 1-E12 |
| 83 24 006 | 02 | 085 | 1-E14 |
| 83 24 022 | 02 | 085 | 1-E14 |
| 83 24 022 | 02 | 087 | 1-E16 |
| 83 24 030 | 02 | 085 | 1-E14 |
| 83 24 139 | 04 | 079 | 3-K08 |
| 83 25 003 | 04 | 063 | 3-J16 |
| 83 25 151 | 04 | 059 | 3-J12 |
| 83 25 334 | 04 | 065 | 3-J18 |
| 83 25 342 | 04 | 065 | 3-J18 |
| 83 25 656 | 02 | 049 | 1-D02 |
| 83 25 656 | 02 | 059 | 1-D12 |
| 83 25 656 | 02 | 061 | 1-D14 |
| 83 25 656 | 02 | 067 | 1-D20 |
| 83 25 656 | 02 | 069 | 1-D22 |
| 83 25 656 | 02 | 185 | 1-I18 |
| 83 25 722 | 04 | 065 | 3-J18 |
| 83 25 797 | 04 | 079 | 3-K08 |
| 83 26 480 | 02 | 047 | 1-C24 |
| 83 26 480 | 02 | 049 | 1-D02 |
| 83 26 621 | 02 | 049 | 1-D02 |
| 83 26 704 | 02 | 063 | 1-D16 |
| 83 26 704 | 02 | 071 | 1-D24 |
| 83 26 704 | 02 | 075 | 1-E04 |
| 83 26 704 | 02 | 079 | 1-E08 |
| 83 26 704 | 02 | 085 | 1-E14 |
| 83 26 704 | 02 | 091 | 1-E20 |
| 83 26 712 | 02 | 021 | 1-B22 |
| 83 26 712 | 02 | 063 | 1-D16 |
| 83 26 712 | 02 | 071 | 1-D24 |
| 83 26 712 | 02 | 099 | 1-F04 |
| 83 26 712 | 02 | 101 | 1-F06 |
| 83 26 712 | 02 | 163 | 1-H20 |
| 83 26 712 | 02 | 167 | 1-H24 |
| 83 26 712 | 02 | 169 | 1-H02 |
| 83 27 561 | 02 | 047 | 1-C24 |
| 83 27 678 | 02 | 047 | 1-C24 |
| 83 27 850 | 02 | 185 | 1-I18 |
| 83 28 346 | 02 | 059 | 1-D12 |
| 83 28 346 | 02 | 063 | 1-D16 |
| 83 28 346 | 02 | 067 | 1-D20 |
| 83 28 346 | 02 | 071 | 1-D24 |
| 83 28 726 | 02 | 139 | 1-G20 |
| 83 28 726 | 02 | 143 | 1-G24 |
| 83 28 726 | 02 | 147 | 1-H04 |
| 83 28 726 | 02 | 203 | 1-J12 |
| 83 28 726 | 02 | 205 | 1-J14 |
| 83 28 783 | 02 | 135 | 1-G16 |
| 83 28 817 | 08B | 143 | 6-F24 |
| 83 29 153 | 02 | 135 | 1-G16 |
| 83 30 268 | 02 | 153 | 1-H10 |
| 83 30 268 | 02 | 199 | 1-J08 |
| 83 30 268 | 08C | 037 | 7-B14 |
| 83 30 268 | 08C | 039 | 7-B16 |
| 83 30 268 | 08C | 043 | 7-B20 |
| 83 30 268 | 08C | 045 | 7-B22 |
| 83 30 268 | 08C | 049 | 7-C02 |
| 83 30 268 | 08C | 051 | 7-C04 |
| 83 30 268 | 08C | 053 | 7-C06 |
| 83 30 896 | 02 | 157 | 1-H14 |
| 83 30 953 | 09 | 015 | 7-D16 |
| 83 31 159 | 02 | 075 | 1-E04 |
| 83 32 520 | 02 | 093 | 1-E22 |
| 83 32 587 | 02 | 057 | 1-D10 |
| 83 32 595 | 04 | 071 | 3-J24 |
| 83 32 918 | 02 | 049 | 1-D02 |
| 83 33 007 | 02 | 057 | 1-D10 |
| 83 33 197 | 04 | 049 | 3-J02 |
| 83 33 700 | 02 | 083 | 1-E12 |
| 83 34 005 | 02 | 043 | 1-C20 |
| 83 34 005 | 02 | 105 | 1-F10 |
| 83 34 005 | 02 | 111 | 1-F16 |
| 83 34 005 | 02 | 117 | 1-F22 |
| 83 34 005 | 08C | 031 | 7-B08 |
| 83 34 005 | 08C | 037 | 7-B14 |
| 83 34 005 | 08C | 039 | 7-B16 |
| 83 34 005 | 08C | 045 | 7-B22 |
| 83 34 005 | 08C | 049 | 7-C02 |
| 83 34 187 | 02 | 083 | 1-E12 |
| 83 34 401 | 04 | 013 | 3-H14 |
| 83 34 401 | 04 | 019 | 3-H20 |
| 83 34 526 | 04 | 013 | 3-H14 |
| 83 34 526 | 04 | 019 | 3-H20 |
| 83 34 831 | 02 | 049 | 1-D02 |
| 83 34 880 | 02 | 057 | 1-D10 |
| 83 34 898 | 02 | 093 | 1-E22 |
| 83 34 963 | 02 | 201 | 1-J10 |
| 83 34 971 | 02 | 151 | 1-H08 |
| 83 35 002 | 04 | 051 | 3-J04 |
| 83 35 069 | 02 | 155 | 1-H12 |
| 83 35 614 | 02 | 019 | 1-B20 |



# 7-F02 Numerical register — Nummerregister

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 83 35 614 | 02 | 039 | 1-F04 |
| 83 35 614 | 02 | 101 | 1-F06 |
| 83 35 614 | 02 | 113 | 1-F18 |
| 83 35 887 | 02 | 083 | 1-E12 |
| 83 36 406 | 02 | 149 | 1-H06 |
| 83 36 406 | 02 | 151 | 1-H08 |
| 83 36 406 | 02 | 201 | 1-J10 |
| 83 36 877 | 02 | 187 | 1-I20 |
| 83 37 743 | 02 | 085 | 1-E14 |
| 83 37 859 | 02 | 157 | 1-H14 |
| 83 37 859 | 08C | 037 | 7-B14 |
| 83 37 859 | 08C | 039 | 7-B16 |
| 83 37 859 | 08C | 043 | 7-B20 |
| 83 37 859 | 08C | 045 | 7-B22 |
| 83 37 875 | 02 | 157 | 1-H14 |
| 83 38 394 | 02 | 083 | 1-E12 |
| 83 38 402 | 02 | 083 | 1-E12 |
| 83 38 410 | 02 | 083 | 1-E12 |
| 83 38 436 | 02 | 083 | 1-E12 |
| 83 38 766 | 04 | 075 | 3-K04 |
| 83 38 899 | 04 | 005 | 3-H06 |
| 83 38 923 | 02 | 083 | 1-E12 |
| 83 39 608 | 02 | 009 | 1-B10 |
| 83 39 632 | 02 | 009 | 1-B10 |
| 83 39 657 | 02 | 153 | 1-H10 |
| 83 39 731 | 02 | 063 | 1-D16 |
| 83 39 921 | 06 | 021 | 4-C22 |
| 83 41 034 | 04 | 029 | 3-I06 |
| 83 41 034 | 04 | 033 | 3-I10 |
| 83 41 257 | 04 | 013 | 3-H14 |
| 83 41 257 | 04 | 021 | 3-H22 |
| 83 41 604 | 04 | 043 | 3-I20 |
| 83 41 604 | 04 | 047 | 3-I24 |
| 83 41 612 | 04 | 043 | 3-I20 |
| 83 41 612 | 04 | 047 | 3-I24 |
| 83 41 620 | 04 | 043 | 3-I20 |
| 83 41 620 | 04 | 047 | 3-I24 |
| 83 41 638 | 04 | 043 | 3-I20 |
| 83 41 638 | 04 | 047 | 3-I24 |
| 83 41 752 | 04 | 029 | 3-I06 |
| 83 41 752 | 04 | 033 | 3-I10 |
| 83 41 760 | 04 | 029 | 3-I06 |
| 83 41 760 | 04 | 033 | 3-I10 |
| 83 41 778 | 04 | 029 | 3-I06 |
| 83 41 778 | 04 | 033 | 3-I10 |
| 83 42 701 | 04 | 043 | 3-I20 |
| 83 42 701 | 04 | 047 | 3-I24 |
| 83 43 014 | 04 | 013 | 3-H14 |
| 83 43 014 | 04 | 021 | 3-H22 |
| 83 44 335 | 04 | 013 | 3-H14 |
| 83 44 335 | 04 | 021 | 3-H22 |
| 83 44 335 | 04 | 085 | 3-K14 |
| 83 44 723 | 04 | 029 | 3-I06 |
| 83 44 723 | 04 | 033 | 3-I10 |
| 83 44 772 | 04 | 031 | 3-I08 |
| 83 44 772 | 04 | 039 | 3-I16 |
| 83 46 470 | 02 | 021 | 1-B22 |
| 83 46 868 | 02 | 035 | 1-C12 |
| 83 46 884 | 02 | 013 | 1-B14 |
| 83 46 900 | 02 | 013 | 1-B14 |
| 83 46 926 | 02 | 013 | 1-B14 |
| 83 46 942 | 02 | 013 | 1-B14 |
| 83 46 983 | 02 | 031 | 1-C08 |
| 83 46 983 | 02 | 033 | 1-C10 |
| 83 47 106 | 02 | 035 | 1-C12 |
| 83 47 122 | 02 | 027 | 1-C04 |
| 83 47 262 | 02 | 013 | 1-B14 |
| 83 47 270 | 02 | 035 | 1-C12 |
| 83 47 577 | 02 | 031 | 1-C08 |
| 83 47 650 | 02 | 035 | 1-C12 |
| 83 47 676 | 02 | 035 | 1-C12 |
| 83 47 999 | 02 | 021 | 1-B22 |
| 83 48 047 | 02 | 021 | 1-B22 |
| 83 48 047 | 02 | 175 | 1-I08 |
| 83 48 401 | 02 | 013 | 1-B14 |
| 83 48 534 | 02 | 025 | 1-C02 |
| 83 48 609 | 02 | 037 | 1-C14 |
| 83 48 849 | 02 | 175 | 1-I08 |
| 83 49 938 | 02 | 035 | 1-C12 |
| 83 49 946 | 02 | 035 | 1-C12 |
| 83 49 953 | 02 | 035 | 1-C12 |
| 83 49 961 | 02 | 035 | 1-C12 |
| 83 50 076 | 02 | 197 | 1-J06 |
| 83 50 076 | 03A | 015 | 2-A16 |
| 83 50 076 | 03A | 151 | 2-G08 |
| 83 50 936 | 02 | 035 | 1-C12 |
| 83 50 944 | 02 | 013 | 1-B14 |
| 83 50 977 | 02 | 035 | 1-C12 |
| 83 50 985 | 02 | 035 | 1-C12 |
| 83 50 993 | 02 | 035 | 1-C12 |
| 83 51 009 | 02 | 035 | 1-C12 |
| 83 51 330 | 02 | 041 | 1-C18 |
| 83 51 348 | 02 | 189 | 1-I22 |
| 83 51 405 | 02 | 043 | 1-C20 |
| 83 51 413 | 02 | 191 | 1-I24 |
| 83 52 395 | 02 | 043 | 1-C20 |
| 83 52 494 | 02 | 191 | 1-I24 |
| 83 52 502 | 02 | 021 | 1-B22 |
| 83 52 692 | 02 | 175 | 1-I08 |
| 83 52 692 | 02 | 177 | 1-I10 |
| 83 52 692 | 02 | 195 | 1-J04 |
| 83 52 734 | 02 | 035 | 1-C12 |
| 83 53 484 | 02 | 103 | 1-F08 |
| 83 53 484 | 02 | 107 | 1-F12 |
| 83 53 484 | 02 | 113 | 1-F18 |
| 83 55 026 | 02 | 043 | 1-C20 |
| 83 55 315 | 02 | 035 | 1-C12 |
| 83 55 323 | 02 | 035 | 1-C12 |
| 83 55 331 | 02 | 035 | 1-C12 |
| 83 55 349 | 02 | 035 | 1-C12 |
| 83 55 356 | 02 | 035 | 1-C12 |
| 83 55 364 | 02 | 035 | 1-C12 |
| 83 56 396 | 02 | 013 | 1-B14 |
| 83 56 420 | 02 | 121 | 1-G02 |
| 83 56 859 | 02 | 009 | 1-B10 |
| 83 56 859 | 02 | 011 | 1-B12 |
| 83 56 859 | 06 | 021 | 4-C22 |
| 83 56 859 | 08C | 021 | 7-A22 |
| 83 56 859 | 08C | 037 | 7-B14 |
| 83 56 859 | 08C | 045 | 7-B22 |
| 83 56 859 | 08C | 051 | 7-C04 |
| 83 56 917 | 02 | 011 | 1-B12 |
| 83 56 917 | 02 | 025 | 1-C02 |
| 83 57 345 | 02 | 103 | 1-F08 |
| 83 57 345 | 02 | 107 | 1-F12 |
| 83 57 345 | 02 | 113 | 1-F18 |
| 83 57 378 | 02 | 103 | 1-F08 |
| 83 57 378 | 02 | 107 | 1-F12 |
| 83 57 378 | 02 | 113 | 1-F18 |
| 83 57 485 | 02 | 101 | 1-F06 |
| 83 57 485 | 02 | 129 | 1-G10 |
| 83 57 485 | 02 | 133 | 1-G14 |
| 83 57 543 | 02 | 099 | 1-F04 |
| 83 57 691 | 02 | 085 | 1-E14 |
| 83 57 709 | 02 | 085 | 1-E14 |
| 83 57 832 | 02 | 105 | 1-F10 |
| 83 57 832 | 02 | 111 | 1-F16 |
| 83 57 832 | 02 | 117 | 1-F22 |
| 83 59 275 | 02 | 055 | 1-D08 |
| 83 59 275 | 02 | 155 | 1-H12 |
| 83 59 937 | 02 | 099 | 1-F04 |
| 83 59 937 | 02 | 101 | 1-F06 |
| 83 60 240 | 02 | 015 | 1-B16 |
| 83 60 257 | 02 | 015 | 1-B16 |
| 83 60 257 | 02 | 019 | 1-B20 |
| 83 60 414 | 02 | 105 | 1-F10 |
| 83 60 463 | 02 | 101 | 1-F06 |
| 83 60 943 | 02 | 121 | 1-G02 |
| 83 60 943 | 02 | 125 | 1-G06 |
| 83 61 362 | 02 | 175 | 1-I08 |
| 83 61 602 | 02 | 041 | 1-C18 |
| 83 61 644 | 02 | 043 | 1-C20 |
| 83 61 644 | 02 | 191 | 1-I24 |
| 83 61 735 | 02 | 041 | 1-C18 |
| 83 61 743 | 02 | 041 | 1-C18 |
| 83 61 768 | 02 | 041 | 1-C18 |
| 83 61 776 | 02 | 041 | 1-C18 |
| 83 61 842 | 02 | 121 | 1-G02 |
| 83 61 842 | 02 | 123 | 1-G04 |
| 83 61 842 | 02 | 187 | 1-I20 |
| 83 61 859 | 02 | 121 | 1-G02 |
| 83 61 859 | 02 | 123 | 1-G04 |
| 83 61 859 | 02 | 187 | 1-I20 |
| 83 61 990 | 02 | 121 | 1-G02 |
| 83 62 287 | 03A | 023 | 2-A24 |
| 83 62 287 | 03A | 025 | 2-B02 |
| 83 62 295 | 02 | 013 | 1-B14 |
| 83 62 352 | 02 | 195 | 1-J04 |
| 83 62 386 | 02 | 035 | 1-C12 |
| 83 62 998 | 02 | 175 | 1-I08 |
| 83 64 051 | 02 | 041 | 1-C18 |
| 83 64 069 | 02 | 041 | 1-C18 |
| 83 64 192 | 02 | 041 | 1-C18 |
| 83 64 192 | 02 | 191 | 1-I24 |
| 83 64 200 | 02 | 041 | 1-C18 |
| 83 64 234 | 02 | 043 | 1-C20 |
| 83 64 234 | 02 | 189 | 1-I22 |
| 83 64 242 | 02 | 043 | 1-C20 |
| 83 64 242 | 02 | 191 | 1-I24 |
| 83 64 259 | 02 | 043 | 1-C20 |
| 83 64 259 | 02 | 191 | 1-I24 |
| 83 64 390 | 02 | 013 | 1-B14 |
| 83 64 416 | 02 | 101 | 1-F06 |
| 83 65 058 | 02 | 035 | 1-C12 |
| 83 65 546 | 02 | 043 | 1-C20 |
| 83 65 769 | 02 | 175 | 1-I08 |
| 83 65 850 | 02 | 041 | 1-C18 |
| 83 65 850 | 02 | 191 | 1-I24 |
| 83 66 007 | 02 | 021 | 1-B22 |
| 83 66 262 | 02 | 181 | 1-I14 |
| 83 66 262 | 02 | 183 | 1-I16 |
| 83 66 262 | 02 | 187 | 1-I20 |
| 83 66 262 | 02 | 189 | 1-I22 |
| 83 66 304 | 02 | 041 | 1-C18 |
| 83 66 312 | 02 | 041 | 1-C18 |
| 83 66 312 | 02 | 191 | 1-I24 |
| 83 66 411 | 02 | 041 | 1-C18 |
| 83 66 643 | 02 | 189 | 1-I22 |
| 83 66 650 | 02 | 189 | 1-I22 |
| 83 66 668 | 02 | 189 | 1-I22 |
| 83 66 676 | 02 | 189 | 1-I22 |
| 83 66 791 | 02 | 049 | 1-D02 |
| 83 66 791 | 02 | 095 | 1-E24 |
| 83 66 791 | 02 | 129 | 1-G10 |
| 83 66 791 | 02 | 185 | 1-I18 |
| 83 66 791 | 08C | 055 | 7-C08 |
| 83 66 809 | 02 | 041 | 1-C18 |
| 83 67 856 | 02 | 149 | 1-H06 |
| 83 67 856 | 02 | 151 | 1-H08 |
| 83 67 864 | 02 | 181 | 1-I14 |
| 83 67 864 | 02 | 183 | 1-I16 |
| 83 69 647 | 02 | 043 | 1-C20 |
| 83 69 647 | 02 | 191 | 1-I24 |
| 83 69 647 | 08C | 043 | 7-B20 |
| 83 69 647 | 08C | 053 | 7-C06 |
| 83 69 654 | 02 | 043 | 1-C20 |
| 83 69 829 | 02 | 025 | 1-C02 |
| 83 69 829 | 02 | 187 | 1-I20 |
| 83 69 894 | 02 | 041 | 1-C18 |
| 83 69 902 | 02 | 041 | 1-C18 |
| 83 69 910 | 02 | 043 | 1-C20 |
| 83 69 985 | 02 | 175 | 1-I08 |
| 83 71 551 | 04 | 007 | 3-H08 |
| 83 71 551 | 08A | 021 | 5-A22 |
| 83 71 650 | 02 | 155 | 1-H12 |
| 83 73 078 | 04 | 049 | 3-J02 |
| 83 73 714 | 04 | 049 | 3-J02 |
| 83 73 714 | 04 | 075 | 3-K04 |
| 83 74 357 | 02 | 075 | 1-E04 |
| 83 74 357 | 04 | 073 | 3-K02 |
| 83 74 555 | 04 | 049 | 3-J02 |
| 83 74 555 | 04 | 075 | 3-K04 |
| 83 74 639 | 02 | 187 | 1-I20 |
| 83 74 753 | 04 | 049 | 3-J02 |
| 83 75 024 | 04 | 049 | 3-J02 |
| 83 75 156 | 04 | 049 | 3-J02 |
| 83 75 172 | 04 | 051 | 3-J04 |
| 83 75 339 | 04 | 049 | 3-J02 |
| 83 75 404 | 04 | 075 | 3-K04 |
| 83 75 925 | 04 | 075 | 3-K04 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 83 75 974 | 04 | 079 | 3-K08 |
| 83 75 990 | 04 | 049 | 3-J02 |
| 83 78 275 | 04 | 049 | 3-J02 |
| 83 78 275 | 04 | 075 | 3-K04 |
| 83 78 275 | 04 | 079 | 3-K08 |
| 83 78 630 | 03B | 009 | 3-A10 |
| 83 78 630 | 03B | 061 | 3-C14 |
| 83 78 630 | 03B | 085 | 3-D14 |
| 83 79 026 | 02 | 047 | 1-C24 |
| 83 80 214 | 04 | 005 | 3-H06 |
| 83 80 214 | 04 | 077 | 3-K06 |
| 83 80 932 | 04 | 005 | 3-H06 |
| 83 84 174 | 02 | 157 | 1-H14 |
| 83 84 323 | 02 | 143 | 1-G24 |
| 83 84 323 | 02 | 197 | 1-J06 |
| 83 84 323 | 02 | 199 | 1-J08 |
| 83 84 323 | 02 | 205 | 1-J14 |
| 83 86 351 | 02 | 049 | 1-D02 |
| 83 86 450 | 02 | 137 | 1-G18 |
| 83 86 450 | 02 | 139 | 1-G20 |
| 83 86 450 | 02 | 143 | 1-G24 |
| 83 86 450 | 02 | 145 | 1-H02 |
| 83 86 450 | 02 | 147 | 1-H04 |
| 83 86 450 | 02 | 197 | 1-J06 |
| 83 86 450 | 02 | 199 | 1-J08 |
| 83 86 450 | 02 | 201 | 1-J10 |
| 83 86 450 | 02 | 205 | 1-J14 |
| 83 86 724 | 02 | 095 | 1-E24 |
| 83 87 052 | 02 | 139 | 1-G20 |
| 83 87 052 | 02 | 143 | 1-G24 |
| 83 87 052 | 02 | 147 | 1-H04 |
| 83 87 052 | 02 | 203 | 1-J12 |
| 83 87 052 | 02 | 205 | 1-J14 |
| 83 87 672 | 02 | 137 | 1-G18 |
| 83 87 672 | 02 | 139 | 1-G20 |
| 83 87 672 | 02 | 197 | 1-J06 |
| 83 87 672 | 02 | 203 | 1-J12 |
| 83 87 672 | 02 | 205 | 1-J14 |
| 83 88 670 | 02 | 041 | 1-C18 |
| 83 88 670 | 02 | 191 | 1-I24 |
| 83 89 512 | 02 | 175 | 1-I08 |
| 83 89 512 | 02 | 195 | 1-J04 |
| 83 92 003 | 02 | 193 | 1-J02 |
| 84 00 350 | 08B | 149 | 6-G06 |
| 84 00 350 | 08B | 157 | 6-G14 |
| 84 00 350 | 08B | 189 | 6-H22 |
| 84 00 350 | 08B | 223 | 6-J08 |
| 84 00 350 | 08B | 225 | 6-J10 |
| 84 01 150 | 08A | 115 | 5-E20 |
| 84 03 305 | 08A | 079 | 5-D08 |
| 84 03 305 | 08A | 081 | 5-D10 |
| 84 03 396 | 08A | 079 | 5-D08 |
| 84 03 396 | 08A | 081 | 5-D10 |
| 84 03 529 | 08A | 079 | 5-D08 |
| 84 03 529 | 08A | 081 | 5-D10 |
| 84 05 870 | 08B | 143 | 6-F24 |
| 84 06 142 | 08A | 025 | 5-B02 |
| 84 06 142 | 08A | 133 | 5-F14 |
| 84 06 142 | 08A | 139 | 5-F20 |
| 84 07 488 | 08A | 133 | 5-F14 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 84 07 488 | 08A | 139 | 5-F20 |
| 84 07 983 | 04 | 007 | 3-H08 |
| 84 07 983 | 05 | 023 | 4-A24 |
| 84 07 983 | 08B | 151 | 6-G08 |
| 84 07 983 | 08B | 159 | 6-G16 |
| 84 08 361 | 08A | 089 | 5-D18 |
| 84 08 460 | 08A | 079 | 5-D08 |
| 84 08 460 | 08A | 081 | 5-D10 |
| 84 08 478 | 08A | 079 | 5-D08 |
| 84 08 478 | 08A | 081 | 5-D10 |
| 84 08 882 | 08A | 135 | 5-F16 |
| 84 08 882 | 08B | 015 | 6-A16 |
| 84 08 882 | 08B | 197 | 6-I06 |
| 84 09 658 | 08A | 137 | 5-F18 |
| 84 10 961 | 08B | 083 | 6-D12 |
| 84 10 961 | 08B | 095 | 6-D24 |
| 84 10 961 | 08B | 107 | 6-E12 |
| 84 10 961 | 08B | 119 | 6-E24 |
| 84 10 961 | 08B | 143 | 6-F24 |
| 84 10 961 | 08B | 199 | 6-I08 |
| 84 10 961 | 08B | 207 | 6-I16 |
| 84 10 961 | 08B | 215 | 6-I24 |
| 84 12 256 | 08A | 121 | 5-F02 |
| 84 12 256 | 08A | 135 | 5-F16 |
| 84 13 429 | 08B | 143 | 6-F24 |
| 84 13 429 | 08B | 197 | 6-I06 |
| 84 13 429 | 08B | 211 | 6-I20 |
| 84 13 742 | 08A | 081 | 5-D10 |
| 84 15 820 | 08A | 081 | 5-D10 |
| 84 15 887 | 08A | 081 | 5-D10 |
| 84 15 929 | 08A | 081 | 5-D10 |
| 84 15 994 | 08A | 081 | 5-D10 |
| 84 16 000 | 08A | 081 | 5-D10 |
| 84 24 442 | 03A | 131 | 2-F12 |
| 84 25 035 | 08B | 151 | 6-G08 |
| 84 25 035 | 08B | 159 | 6-G16 |
| 84 25 043 | 08B | 151 | 6-G08 |
| 84 25 043 | 08B | 159 | 6-G16 |
| 84 25 100 | 08B | 151 | 6-G08 |
| 84 25 100 | 08B | 159 | 6-G16 |
| 84 25 126 | 08B | 151 | 6-G08 |
| 84 25 126 | 08B | 159 | 6-G16 |
| 84 26 173 | 08B | 151 | 6-G08 |
| 84 26 173 | 08B | 159 | 6-G16 |
| 84 26 199 | 08B | 143 | 6-F24 |
| 84 28 203 | 08B | 023 | 6-A24 |
| 84 28 211 | 08B | 023 | 6-A24 |
| 84 28 229 | 08B | 023 | 6-A24 |
| 84 28 237 | 08B | 023 | 6-A24 |
| 84 28 997 | 08B | 091 | 6-D20 |
| 84 28 997 | 08B | 103 | 6-E08 |
| 84 28 997 | 08B | 115 | 6-E20 |
| 84 29 441 | 08A | 089 | 5-D18 |
| 84 38 400 | 08B | 023 | 6-A24 |
| 84 38 467 | 08B | 185 | 6-H18 |
| 84 38 467 | 08B | 189 | 6-H22 |
| 84 38 467 | 08B | 191 | 6-H24 |
| 84 41 925 | 08A | 081 | 5-D10 |
| 84 44 390 | 08B | 141 | 6-F22 |
| 84 44 408 | 08B | 141 | 6-F22 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 84 44 614 | 08A | 081 | 5-D10 |
| 84 45 637 | 09 | 017 | 7-D18 |
| 84 45 785 | 08A | 079 | 5-D08 |
| 84 45 785 | 08A | 081 | 5-D10 |
| 84 47 997 | 08A | 081 | 5-D10 |
| 84 48 029 | 08A | 081 | 5-D10 |
| 84 48 169 | 08A | 081 | 5-D10 |
| 84 51 478 | 08A | 075 | 5-D04 |
| 84 51 486 | 08A | 075 | 5-D04 |
| 84 51 817 | 08A | 075 | 5-D04 |
| 84 51 817 | 08A | 079 | 5-D08 |
| 84 51 825 | 08A | 075 | 5-D04 |
| 84 51 825 | 08A | 079 | 5-D08 |
| 84 51 825 | 08A | 083 | 5-D12 |
| 84 51 957 | 08A | 083 | 5-D12 |
| 84 51 957 | 08A | 089 | 5-D18 |
| 84 51 965 | 08A | 089 | 5-D18 |
| 84 51 973 | 08A | 083 | 5-D12 |
| 84 51 973 | 08A | 089 | 5-D18 |
| 84 51 981 | 08A | 083 | 5-D12 |
| 84 51 981 | 08A | 087 | 5-D16 |
| 84 51 981 | 08A | 089 | 5-D18 |
| 84 52 252 | 08A | 083 | 5-D12 |
| 84 52 252 | 08A | 087 | 5-D16 |
| 84 52 252 | 08A | 089 | 5-D18 |
| 84 52 898 | 08B | 011 | 6-A12 |
| 84 52 898 | 08B | 075 | 6-D04 |
| 84 52 898 | 08B | 089 | 6-D18 |
| 84 52 898 | 08B | 103 | 6-E08 |
| 84 52 898 | 08B | 113 | 6-E18 |
| 84 52 898 | 08B | 121 | 6-F02 |
| 84 53 227 | 08A | 087 | 5-D16 |
| 84 53 227 | 08A | 089 | 5-D18 |
| 84 53 755 | 08A | 077 | 5-D06 |
| 84 53 755 | 08A | 081 | 5-D10 |
| 84 54 258 | 08A | 075 | 5-D04 |
| 84 54 522 | 08B | 143 | 6-F24 |
| 84 56 006 | 08A | 075 | 5-D04 |
| 84 56 006 | 08A | 079 | 5-D08 |
| 84 56 006 | 08A | 081 | 5-D10 |
| 84 56 308 | 08A | 075 | 5-D04 |
| 84 56 808 | 08A | 079 | 5-D08 |
| 84 56 808 | 08A | 081 | 5-D10 |
| 84 57 541 | 08B | 191 | 6-H24 |
| 84 57 566 | 08A | 075 | 5-D04 |
| 84 57 566 | 08A | 079 | 5-D08 |
| 84 57 566 | 08A | 081 | 5-D10 |
| 84 58 598 | 08B | 191 | 6-H24 |
| 84 58 713 | 08A | 075 | 5-D04 |
| 84 58 721 | 08A | 075 | 5-D04 |
| 84 59 489 | 08A | 041 | 5-B18 |
| 84 59 497 | 08A | 041 | 5-B18 |
| 84 59 505 | 08A | 053 | 5-C06 |
| 84 59 513 | 08A | 011 | 5-A12 |
| 84 60 172 | 08A | 083 | 5-D12 |
| 84 61 063 | 08B | 023 | 6-A24 |
| 84 61 675 | 03A | 061 | 2-C14 |
| 84 61 675 | 08A | 075 | 5-D04 |
| 84 61 675 | 08A | 079 | 5-D08 |
| 84 61 675 | 08A | 083 | 5-D12 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 84 61 675 | 08A | 177 | 5-H10 |
| 84 61 675 | 08A | 179 | 5-H12 |
| 84 61 675 | 08A | 181 | 5-H14 |
| 84 61 675 | 08A | 183 | 5-H16 |
| 84 64 539 | 08A | 083 | 5-D12 |
| 84 67 409 | 08B | 197 | 6-I06 |
| 84 67 870 | 08B | 213 | 6-I22 |
| 84 67 888 | 08B | 213 | 6-I22 |
| 84 68 134 | 08B | 199 | 6-I08 |
| 84 68 175 | 08B | 123 | 6-F04 |
| 84 68 175 | 08B | 127 | 6-F08 |
| 84 68 175 | 08B | 133 | 6-F14 |
| 84 68 175 | 08B | 137 | 6-F18 |
| 84 68 183 | 08B | 123 | 6-F04 |
| 84 68 183 | 08B | 129 | 6-F10 |
| 84 68 183 | 08B | 133 | 6-F14 |
| 84 68 183 | 08B | 137 | 6-F18 |
| 84 68 191 | 08B | 123 | 6-F04 |
| 84 68 191 | 08B | 129 | 6-F10 |
| 84 68 191 | 08B | 133 | 6-F14 |
| 84 68 191 | 08B | 137 | 6-F18 |
| 84 68 209 | 08B | 123 | 6-F04 |
| 84 68 209 | 08B | 129 | 6-F10 |
| 84 68 209 | 08B | 133 | 6-F14 |
| 84 68 209 | 08B | 137 | 6-F18 |
| 84 70 767 | 08A | 083 | 5-D12 |
| 84 70 767 | 08A | 089 | 5-D18 |
| 84 74 553 | 08A | 075 | 5-D04 |
| 84 74 553 | 08A | 079 | 5-D08 |
| 84 76 061 | 08B | 143 | 6-F24 |
| 84 76 079 | 08B | 143 | 6-F24 |
| 84 76 301 | 08A | 063 | 5-C16 |
| 84 76 301 | 08A | 067 | 5-C20 |
| 84 76 301 | 08A | 071 | 5-C24 |
| 84 77 507 | 08B | 129 | 6-F10 |
| 84 77 507 | 08B | 133 | 6-F14 |
| 84 77 507 | 08B | 137 | 6-F18 |
| 84 78 364 | 08A | 089 | 5-D18 |
| 84 78 554 | 08A | 091 | 5-D20 |
| 84 83 893 | 08B | 121 | 6-F02 |
| 84 83 893 | 08B | 199 | 6-I08 |
| 84 86 292 | 08A | 155 | 5-G12 |
| 84 86 292 | 08A | 157 | 5-G14 |
| 84 86 300 | 08A | 155 | 5-G12 |
| 84 86 300 | 08A | 157 | 5-G14 |
| 84 86 318 | 08A | 159 | 5-G16 |
| 84 86 326 | 08A | 159 | 5-G16 |
| 84 86 409 | 08A | 087 | 5-D16 |
| 84 86 409 | 08A | 089 | 5-D18 |
| 84 87 217 | 08A | 157 | 5-G14 |
| 84 87 225 | 08A | 157 | 5-G14 |
| 84 87 266 | 08A | 151 | 5-G08 |
| 84 87 274 | 08A | 151 | 5-G08 |
| 84 87 282 | 08A | 155 | 5-G12 |
| 84 87 597 | 08A | 089 | 5-D18 |
| 84 87 605 | 08A | 089 | 5-D18 |
| 84 87 621 | 08A | 153 | 5-G10 |
| 84 87 621 | 08A | 155 | 5-G12 |
| 84 87 621 | 08A | 157 | 5-G14 |
| 84 87 639 | 08A | 159 | 5-G16 |





| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 84 87 647 | 08A | 159 | 5-G16 |
| 84 87 670 | 08A | 159 | 5-G16 |
| 84 87 688 | 08A | 159 | 5-G16 |
| 84 87 696 | 08A | 159 | 5-G16 |
| 84 87 704 | 08A | 159 | 5-G16 |
| 84 87 712 | 08A | 155 | 5-G12 |
| 84 87 738 | 08A | 159 | 5-G16 |
| 84 87 746 | 08A | 159 | 5-G16 |
| 84 87 753 | 08A | 151 | 5-G08 |
| 84 87 761 | 08A | 151 | 5-G08 |
| 84 87 779 | 08A | 159 | 5-G16 |
| 84 87 787 | 08A | 159 | 5-G16 |
| 84 87 795 | 08A | 159 | 5-G16 |
| 84 87 811 | 08A | 151 | 5-G08 |
| 84 87 829 | 08A | 151 | 5-G08 |
| 84 87 837 | 08A | 155 | 5-G12 |
| 84 87 845 | 08A | 151 | 5-G08 |
| 84 87 852 | 08A | 151 | 5-G08 |
| 84 87 860 | 08A | 155 | 5-G12 |
| 84 87 969 | 08A | 151 | 5-G08 |
| 84 87 977 | 08A | 151 | 5-G08 |
| 84 87 985 | 08A | 155 | 5-G12 |
| 84 88 447 | 08B | 079 | 6-D08 |
| 84 88 447 | 08B | 083 | 6-D12 |
| 84 88 447 | 08B | 093 | 6-D22 |
| 84 88 447 | 08B | 095 | 6-D24 |
| 84 88 447 | 08B | 105 | 6-E10 |
| 84 88 447 | 08B | 107 | 6-E12 |
| 84 88 447 | 08B | 117 | 6-E22 |
| 84 88 447 | 08B | 119 | 6-E24 |
| 84 90 575 | 08B | 023 | 6-A24 |
| 84 90 609 | 08B | 023 | 6-A24 |
| 84 90 617 | 08B | 023 | 6-A24 |
| 84 90 625 | 08B | 023 | 6-A24 |
| 84 90 641 | 08B | 023 | 6-A24 |
| 84 90 708 | 08B | 023 | 6-A24 |
| 84 90 716 | 08B | 023 | 6-A24 |
| 84 97 471 | 03A | 127 | 2-F08 |
| 84 97 471 | 08A | 011 | 5-A12 |
| 84 97 471 | 08A | 039 | 5-B16 |
| 84 99 204 | 08B | 191 | 6-H24 |
| 84 99 204 | 08B | 193 | 6-I02 |
| 84 99 204 | 08B | 215 | 6-I24 |
| 84 99 204 | 08B | 219 | 6-J04 |
| 84 99 204 | 08B | 221 | 6-J06 |
| 84 99 238 | 08B | 219 | 6-J04 |
| 84 99 238 | 08B | 221 | 6-J06 |
| 85 00 613 | 03A | 049 | 2-C02 |
| 85 00 613 | 03A | 063 | 2-C16 |
| 85 00 613 | 03A | 073 | 2-D02 |
| 85 01 264 | 03A | 049 | 2-C02 |
| 85 02 643 | 03A | 081 | 2-D10 |
| 85 03 153 | 03B | 017 | 3-A18 |
| 85 03 153 | 03B | 041 | 3-B18 |
| 85 03 153 | 03B | 063 | 3-C16 |
| 85 03 153 | 03B | 089 | 3-D18 |
| 85 03 161 | 03B | 005 | 3-A06 |
| 85 03 161 | 03B | 017 | 3-A18 |
| 85 03 161 | 03B | 031 | 3-B08 |
| 85 03 161 | 03B | 041 | 3-B18 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 85 03 161 | 03B | 053 | 3-C06 |
| 85 03 161 | 03B | 063 | 3-C16 |
| 85 03 161 | 03B | 079 | 3-D08 |
| 85 03 161 | 03B | 087 | 3-D16 |
| 85 03 161 | 03B | 107 | 3-E12 |
| 85 03 161 | 03B | 117 | 3-E22 |
| 85 03 161 | 03B | 129 | 3-F10 |
| 85 03 161 | 03B | 141 | 3-F22 |
| 85 03 187 | 03B | 107 | 3-E12 |
| 85 03 187 | 03B | 117 | 3-E22 |
| 85 03 187 | 03B | 129 | 3-F10 |
| 85 03 187 | 03B | 141 | 3-F22 |
| 85 03 286 | 03B | 109 | 3-E14 |
| 85 03 286 | 03B | 119 | 3-E24 |
| 85 03 286 | 03B | 131 | 3-F12 |
| 85 03 286 | 03B | 143 | 3-F24 |
| 85 03 286 | 08A | 165 | 5-G22 |
| 85 03 286 | 08A | 167 | 5-G24 |
| 85 03 286 | 08A | 173 | 5-H06 |
| 85 03 286 | 08A | 175 | 5-H08 |
| 85 03 286 | 08A | 177 | 5-H10 |
| 85 03 286 | 08A | 179 | 5-H12 |
| 85 03 286 | 08A | 181 | 5-H14 |
| 85 03 286 | 08A | 183 | 5-H16 |
| 85 03 286 | 08C | 055 | 7-C08 |
| 85 03 476 | 03B | 107 | 3-E12 |
| 85 04 029 | 03A | 055 | 2-C08 |
| 85 04 144 | 03A | 059 | 2-C12 |
| 85 04 771 | 03B | 039 | 3-B16 |
| 85 04 771 | 03B | 061 | 3-C14 |
| 85 04 771 | 03B | 085 | 3-D14 |
| 85 04 789 | 03B | 009 | 3-A10 |
| 85 04 789 | 03B | 061 | 3-C14 |
| 85 06 263 | 03A | 049 | 2-C02 |
| 85 06 925 | 09 | 011 | 7-D12 |
| 85 06 941 | 09 | 011 | 7-D12 |
| 85 07 873 | 08A | 041 | 5-B18 |
| 85 08 392 | 03A | 059 | 2-C12 |
| 85 08 848 | 03A | 059 | 2-C12 |
| 85 09 002 | 02 | 047 | 1-C24 |
| 85 09 002 | 02 | 101 | 1-F06 |
| 85 09 002 | 02 | 133 | 1-G14 |
| 85 09 002 | 02 | 185 | 1-I18 |
| 85 09 002 | 03A | 059 | 2-C12 |
| 85 09 002 | 03A | 067 | 2-C20 |
| 85 09 127 | 03A | 125 | 2-F06 |
| 85 09 697 | 03A | 049 | 2-C02 |
| 85 09 697 | 03A | 063 | 2-C16 |
| 85 09 846 | 03B | 009 | 3-A10 |
| 85 09 846 | 03B | 019 | 3-A20 |
| 85 09 846 | 03B | 025 | 3-B02 |
| 85 09 846 | 03B | 043 | 3-B20 |
| 85 09 846 | 03B | 047 | 3-B24 |
| 85 09 846 | 03B | 061 | 3-C14 |
| 85 09 846 | 03B | 065 | 3-C18 |
| 85 09 846 | 03B | 071 | 3-C24 |
| 85 09 846 | 03B | 085 | 3-D14 |
| 85 09 846 | 03B | 091 | 3-D20 |
| 85 09 846 | 03B | 095 | 3-D24 |
| 85 09 846 | 03B | 099 | 3-E04 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 85 09 846 | 03B | 107 | 3-E12 |
| 85 09 846 | 03B | 117 | 3-E22 |
| 85 09 846 | 03B | 129 | 3-F10 |
| 85 09 846 | 03B | 141 | 3-F22 |
| 85 10 091 | 02 | 101 | 1-F06 |
| 85 10 836 | 03A | 027 | 2-B04 |
| 85 10 851 | 03A | 027 | 2-B04 |
| 85 10 851 | 03A | 029 | 2-B06 |
| 85 10 869 | 03A | 027 | 2-B04 |
| 85 13 574 | 03A | 081 | 2-D10 |
| 85 13 574 | 03A | 125 | 2-F06 |
| 85 14 028 | 03B | 009 | 3-A10 |
| 85 14 028 | 03B | 035 | 3-B12 |
| 85 14 028 | 03B | 057 | 3-C10 |
| 85 14 028 | 03B | 081 | 3-D10 |
| 85 14 028 | 03B | 109 | 3-E14 |
| 85 14 028 | 03B | 119 | 3-E24 |
| 85 14 028 | 03B | 131 | 3-F12 |
| 85 14 028 | 03B | 143 | 3-F24 |
| 85 14 036 | 03B | 009 | 3-A10 |
| 85 14 036 | 03B | 035 | 3-B12 |
| 85 14 036 | 03B | 057 | 3-C10 |
| 85 14 036 | 03B | 081 | 3-D10 |
| 85 14 036 | 03B | 109 | 3-E14 |
| 85 14 036 | 03B | 119 | 3-E24 |
| 85 14 036 | 03B | 131 | 3-F12 |
| 85 14 036 | 03B | 145 | 3-G02 |
| 85 16 817 | 03B | 011 | 3-A12 |
| 85 16 817 | 03B | 017 | 3-A18 |
| 85 16 817 | 03B | 041 | 3-B18 |
| 85 16 817 | 03B | 061 | 3-C14 |
| 85 16 817 | 03B | 063 | 3-C16 |
| 85 16 817 | 03B | 087 | 3-D16 |
| 85 16 817 | 03B | 107 | 3-E12 |
| 85 16 817 | 03B | 117 | 3-E22 |
| 85 16 817 | 03B | 129 | 3-F10 |
| 85 16 817 | 03B | 141 | 3-F22 |
| 85 16 890 | 03B | 017 | 3-A18 |
| 85 16 890 | 03B | 041 | 3-B18 |
| 85 16 890 | 03B | 065 | 3-C18 |
| 85 16 890 | 03B | 091 | 3-D20 |
| 85 16 890 | 03B | 095 | 3-D24 |
| 85 16 916 | 03A | 151 | 2-G08 |
| 85 16 916 | 03B | 009 | 3-A10 |
| 85 16 916 | 03B | 035 | 3-B12 |
| 85 16 916 | 03B | 057 | 3-C10 |
| 85 16 916 | 03B | 081 | 3-D10 |
| 85 16 932 | 03B | 005 | 3-A06 |
| 85 16 932 | 03B | 031 | 3-B08 |
| 85 16 932 | 03B | 053 | 3-C06 |
| 85 16 932 | 03B | 079 | 3-D08 |
| 85 16 940 | 03B | 005 | 3-A06 |
| 85 16 940 | 03B | 031 | 3-B08 |
| 85 16 940 | 03B | 053 | 3-C06 |
| 85 16 940 | 03B | 079 | 3-D08 |
| 85 16 957 | 03B | 009 | 3-A10 |
| 85 16 957 | 03B | 013 | 3-A14 |
| 85 16 957 | 03B | 035 | 3-B12 |
| 85 16 957 | 03B | 039 | 3-B16 |
| 85 16 957 | 03B | 057 | 3-C10 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 85 16 957 | 03B | 061 | 3-C14 |
| 85 16 957 | 03B | 081 | 3-D10 |
| 85 16 957 | 03B | 085 | 3-D14 |
| 85 16 957 | 03B | 111 | 3-E16 |
| 85 16 957 | 03B | 121 | 3-F02 |
| 85 16 957 | 03B | 133 | 3-F14 |
| 85 16 957 | 03B | 145 | 3-G02 |
| 85 17 104 | 02 | 075 | 1-E04 |
| 85 17 104 | 03A | 127 | 2-F08 |
| 85 18 367 | 03A | 049 | 2-C02 |
| 85 18 557 | 03A | 059 | 2-C12 |
| 85 21 536 | 03B | 017 | 3-A18 |
| 85 21 536 | 03B | 065 | 3-C18 |
| 85 21 536 | 03B | 091 | 3-D20 |
| 85 21 536 | 03B | 095 | 3-D24 |
| 85 21 544 | 03B | 007 | 3-A08 |
| 85 21 544 | 03B | 031 | 3-B08 |
| 85 21 544 | 03B | 053 | 3-C06 |
| 85 21 544 | 03B | 079 | 3-D08 |
| 85 21 668 | 03B | 113 | 3-E18 |
| 85 21 668 | 03B | 125 | 3-F06 |
| 85 21 668 | 03B | 137 | 3-F18 |
| 85 21 668 | 03B | 149 | 3-G06 |
| 85 21 668 | 08A | 165 | 5-G22 |
| 85 21 668 | 08A | 167 | 5-G24 |
| 85 21 668 | 08A | 169 | 5-H02 |
| 85 21 676 | 03B | 005 | 3-A06 |
| 85 21 676 | 03B | 031 | 3-B08 |
| 85 21 676 | 03B | 053 | 3-C06 |
| 85 21 676 | 03B | 077 | 3-D06 |
| 85 21 676 | 03B | 107 | 3-E12 |
| 85 21 676 | 03B | 117 | 3-E22 |
| 85 21 676 | 03B | 129 | 3-F10 |
| 85 21 676 | 03B | 141 | 3-F22 |
| 85 21 684 | 03B | 005 | 3-A06 |
| 85 21 684 | 03B | 031 | 3-B08 |
| 85 21 684 | 03B | 053 | 3-C06 |
| 85 21 684 | 03B | 077 | 3-D06 |
| 85 21 684 | 03B | 107 | 3-E12 |
| 85 21 684 | 03B | 117 | 3-E22 |
| 85 21 684 | 03B | 129 | 3-F10 |
| 85 21 684 | 03B | 141 | 3-F22 |
| 85 21 692 | 03B | 005 | 3-A06 |
| 85 21 692 | 03B | 031 | 3-B08 |
| 85 21 692 | 03B | 053 | 3-C06 |
| 85 21 692 | 03B | 077 | 3-D06 |
| 85 21 726 | 03B | 027 | 3-B04 |
| 85 21 726 | 03B | 051 | 3-C04 |
| 85 21 726 | 03B | 073 | 3-D02 |
| 85 21 726 | 03B | 101 | 3-E06 |
| 85 22 310 | 03A | 135 | 2-F16 |
| 85 22 310 | 03A | 139 | 2-F20 |
| 85 22 492 | 03A | 071 | 2-C24 |
| 85 22 534 | 08A | 169 | 5-H02 |
| 85 22 542 | 03B | 005 | 3-A06 |
| 85 22 542 | 03B | 009 | 3-A10 |
| 85 22 542 | 03B | 013 | 3-A14 |
| 85 22 542 | 03B | 031 | 3-B08 |
| 85 22 542 | 03B | 035 | 3-B12 |
| 85 22 542 | 03B | 039 | 3-B16 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

# 7-F05 Numerical register — Nummerregister

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 85 22 542 | 03B | 053 | 3-C06 |
| 85 22 542 | 03B | 057 | 3-C10 |
| 85 22 542 | 03B | 061 | 3-C14 |
| 85 22 542 | 03B | 077 | 3-D06 |
| 85 22 542 | 03B | 081 | 3-D10 |
| 85 22 542 | 03B | 085 | 3-D14 |
| 85 22 542 | 03B | 089 | 3-D18 |
| 85 22 542 | 03B | 125 | 3-F06 |
| 85 22 542 | 03B | 137 | 3-F18 |
| 85 22 542 | 03B | 149 | 3-G06 |
| 85 22 567 | 03B | 017 | 3-A18 |
| 85 22 567 | 03B | 041 | 3-B18 |
| 85 22 567 | 03B | 113 | 3-E18 |
| 85 22 567 | 03B | 125 | 3-F06 |
| 85 22 567 | 03B | 005 | 3-A06 |
| 85 22 583 | 03B | 017 | 3-A18 |
| 85 22 583 | 03B | 031 | 3-B08 |
| 85 22 583 | 03B | 039 | 3-B16 |
| 85 22 583 | 03B | 041 | 3-B18 |
| 85 22 583 | 03B | 053 | 3-C06 |
| 85 22 583 | 03B | 061 | 3-C14 |
| 85 22 583 | 03B | 063 | 3-C16 |
| 85 22 583 | 03B | 065 | 3-C18 |
| 85 22 583 | 03B | 079 | 3-D08 |
| 85 22 583 | 03B | 085 | 3-D14 |
| 85 22 583 | 03B | 087 | 3-D16 |
| 85 22 583 | 03B | 091 | 3-D20 |
| 85 22 583 | 03B | 095 | 3-D24 |
| 85 22 583 | 03B | 107 | 3-E12 |
| 85 22 583 | 03B | 117 | 3-E22 |
| 85 22 583 | 03B | 129 | 3-F10 |
| 85 22 583 | 03B | 141 | 3-F22 |
| 85 22 617 | 03B | 013 | 3-A14 |
| 85 22 617 | 03B | 017 | 3-A18 |
| 85 22 617 | 03B | 021 | 3-A22 |
| 85 22 617 | 03B | 025 | 3-B02 |
| 85 22 617 | 03B | 037 | 3-B14 |
| 85 22 617 | 03B | 039 | 3-B16 |
| 85 22 617 | 03B | 041 | 3-B18 |
| 85 22 617 | 03B | 043 | 3-B20 |
| 85 22 617 | 03B | 047 | 3-B24 |
| 85 22 617 | 03B | 049 | 3-C02 |
| 85 22 617 | 03B | 051 | 3-C04 |
| 85 22 617 | 03B | 059 | 3-C12 |
| 85 22 617 | 03B | 065 | 3-C18 |
| 85 22 617 | 03B | 067 | 3-C20 |
| 85 22 617 | 03B | 073 | 3-D02 |
| 85 22 617 | 03B | 103 | 3-E08 |
| 85 22 617 | 03B | 113 | 3-E18 |
| 85 22 617 | 03B | 125 | 3-F06 |
| 85 22 617 | 03B | 137 | 3-F18 |
| 85 22 617 | 03B | 149 | 3-G06 |
| 85 22 997 | 03A | 089 | 2-D18 |
| 85 28 358 | 03A | 063 | 2-C16 |
| 85 28 358 | 08A | 169 | 5-H02 |
| 85 28 564 | 03A | 005 | 2-A06 |
| 85 28 564 | 03A | 125 | 2-F06 |
| 85 29 265 | 03A | 091 | 2-D20 |
| 85 29 265 | 03A | 101 | 2-E06 |
| 85 29 265 | 03A | 111 | 2-E16 |
| 85 29 265 | 03A | 121 | 2-F02 |
| 85 30 081 | 03B | 017 | 3-A18 |
| 85 30 081 | 03B | 041 | 3-B18 |
| 85 30 081 | 03B | 063 | 3-C16 |
| 85 30 081 | 03B | 087 | 3-D16 |
| 85 30 099 | 03B | 017 | 3-A18 |
| 85 30 099 | 03B | 041 | 3-B18 |
| 85 30 099 | 03B | 063 | 3-C16 |
| 85 30 099 | 03B | 087 | 3-D16 |
| 85 30 107 | 03B | 005 | 3-A06 |
| 85 30 107 | 03B | 031 | 3-B08 |
| 85 30 107 | 03B | 053 | 3-C06 |
| 85 30 107 | 03B | 077 | 3-D06 |
| 85 30 107 | 03B | 107 | 3-E12 |
| 85 30 107 | 03B | 117 | 3-E22 |
| 85 30 107 | 03B | 129 | 3-F10 |
| 85 30 107 | 03B | 141 | 3-F22 |
| 85 30 115 | 03B | 005 | 3-A06 |
| 85 30 115 | 03B | 031 | 3-B08 |
| 85 30 115 | 03B | 053 | 3-C06 |
| 85 30 115 | 03B | 077 | 3-D06 |
| 85 30 917 | 03A | 067 | 2-C20 |
| 85 30 917 | 03A | 125 | 2-F06 |
| 85 30 917 | 08A | 025 | 5-B02 |
| 85 30 917 | 08B | 217 | 6-J02 |
| 85 30 966 | 03A | 085 | 2-D14 |
| 85 30 966 | 03A | 089 | 2-D18 |
| 85 30 966 | 03A | 099 | 2-E04 |
| 85 30 966 | 03B | 009 | 3-A10 |
| 85 30 966 | 03B | 035 | 3-B12 |
| 85 30 966 | 03B | 057 | 3-C10 |
| 85 30 966 | 03B | 081 | 3-D10 |
| 85 31 204 | 03A | 063 | 2-C16 |
| 85 31 204 | 08A | 169 | 5-H02 |
| 85 31 212 | 08A | 169 | 5-H02 |
| 85 32 426 | 03A | 063 | 2-C16 |
| 85 32 756 | 03A | 035 | 2-B12 |
| 85 32 756 | 03A | 037 | 2-B14 |
| 85 32 756 | 03A | 039 | 2-B16 |
| 85 32 756 | 03A | 041 | 2-B18 |
| 85 32 756 | 03A | 045 | 2-B22 |
| 85 33 028 | 03B | 005 | 3-A06 |
| 85 33 028 | 03B | 031 | 3-B08 |
| 85 33 028 | 03B | 053 | 3-C06 |
| 85 33 028 | 03B | 077 | 3-D06 |
| 85 33 028 | 03B | 109 | 3-E14 |
| 85 33 028 | 03B | 119 | 3-E24 |
| 85 33 028 | 03B | 131 | 3-F12 |
| 85 33 028 | 03B | 143 | 3-F24 |
| 85 33 176 | 03A | 083 | 2-D12 |
| 85 33 184 | 03B | 005 | 3-A06 |
| 85 33 184 | 03B | 031 | 3-B08 |
| 85 33 184 | 03B | 053 | 3-C06 |
| 85 33 184 | 03B | 077 | 3-D06 |
| 85 33 341 | 03A | 059 | 2-C12 |
| 85 33 358 | 03A | 073 | 2-D02 |
| 85 33 374 | 03A | 059 | 2-C12 |
| 85 33 374 | 03A | 145 | 2-G02 |
| 85 33 440 | 03A | 145 | 2-G02 |
| 85 33 655 | 03B | 047 | 3-B24 |
| 85 33 655 | 03B | 067 | 3-C20 |
| 85 33 697 | 03B | 017 | 3-A18 |
| 85 33 697 | 03B | 043 | 3-B20 |
| 85 33 697 | 03B | 065 | 3-C18 |
| 85 33 697 | 03B | 091 | 3-D20 |
| 85 33 705 | 03B | 021 | 3-A22 |
| 85 33 705 | 03B | 043 | 3-B20 |
| 85 33 705 | 03B | 067 | 3-C20 |
| 85 35 692 | 03A | 035 | 2-B12 |
| 85 35 692 | 03A | 039 | 2-B16 |
| 85 35 692 | 03A | 041 | 2-B18 |
| 85 35 692 | 03A | 045 | 2-B22 |
| 85 35 692 | 03A | 047 | 2-B24 |
| 85 36 401 | 03A | 135 | 2-F16 |
| 85 36 401 | 08C | 035 | 7-B12 |
| 85 36 419 | 02 | 153 | 1-H10 |
| 85 36 419 | 02 | 161 | 1-H18 |
| 85 37 623 | 03A | 133 | 2-F14 |
| 85 37 672 | 03A | 041 | 2-B18 |
| 85 37 672 | 03A | 045 | 2-B22 |
| 85 39 298 | 03A | 143 | 2-F24 |
| 85 39 363 | 03B | 051 | 3-C04 |
| 85 39 363 | 03B | 073 | 3-D02 |
| 85 39 363 | 03B | 103 | 3-E08 |
| 85 39 595 | 03A | 027 | 2-B04 |
| 85 39 603 | 03A | 027 | 2-B04 |
| 85 39 611 | 03A | 027 | 2-B04 |
| 85 39 629 | 03A | 027 | 2-B04 |
| 85 39 702 | 03A | 027 | 2-B04 |
| 85 39 710 | 03A | 027 | 2-B04 |
| 85 39 710 | 03A | 029 | 2-B06 |
| 85 39 819 | 02 | 157 | 1-H14 |
| 85 39 900 | 09 | 005 | 7-D06 |
| 85 40 528 | 03A | 035 | 2-B12 |
| 85 40 569 | 03B | 017 | 3-A18 |
| 85 40 569 | 03B | 043 | 3-B20 |
| 85 40 569 | 03B | 065 | 3-C18 |
| 85 40 569 | 03B | 091 | 3-D20 |
| 85 40 569 | 03B | 095 | 3-D24 |
| 85 40 981 | 09 | 011 | 7-D12 |
| 85 41 005 | 03A | 031 | 2-B08 |
| 85 41 203 | 03B | 005 | 3-A06 |
| 85 41 203 | 03B | 009 | 3-A10 |
| 85 41 203 | 03B | 021 | 3-A22 |
| 85 41 203 | 03B | 031 | 3-B08 |
| 85 41 203 | 03B | 035 | 3-B12 |
| 85 41 203 | 03B | 043 | 3-B20 |
| 85 41 203 | 03B | 053 | 3-C06 |
| 85 41 203 | 03B | 057 | 3-C10 |
| 85 41 203 | 03B | 067 | 3-C20 |
| 85 41 203 | 03B | 077 | 3-D06 |
| 85 41 203 | 03B | 083 | 3-D12 |
| 85 41 203 | 03B | 107 | 3-E12 |
| 85 41 203 | 03B | 117 | 3-E22 |
| 85 41 203 | 03B | 129 | 3-F10 |
| 85 41 203 | 03B | 141 | 3-F22 |
| 85 41 211 | 03B | 005 | 3-A06 |
| 85 41 211 | 03B | 009 | 3-A10 |
| 85 41 211 | 03B | 021 | 3-A22 |
| 85 41 211 | 03B | 031 | 3-B08 |
| 85 41 211 | 03B | 035 | 3-B12 |
| 85 41 211 | 03B | 043 | 3-B20 |
| 85 41 211 | 03B | 053 | 3-C06 |
| 85 41 211 | 03B | 057 | 3-C10 |
| 85 41 211 | 03B | 067 | 3-C20 |
| 85 41 211 | 03B | 079 | 3-D08 |
| 85 41 211 | 03B | 083 | 3-D12 |
| 85 41 211 | 03B | 107 | 3-E12 |
| 85 41 211 | 03B | 117 | 3-E22 |
| 85 41 211 | 03B | 129 | 3-F10 |
| 85 41 211 | 03B | 141 | 3-F22 |
| 85 41 229 | 03A | 151 | 2-G08 |
| 85 41 229 | 03B | 005 | 3-A06 |
| 85 41 229 | 03B | 031 | 3-B08 |
| 85 41 591 | 03A | 031 | 2-B08 |
| 85 41 609 | 03A | 031 | 2-B08 |
| 85 41 856 | 03A | 063 | 2-C16 |
| 85 41 856 | 08A | 169 | 5-H02 |
| 85 41 864 | 03A | 063 | 2-C16 |
| 85 42 912 | 03A | 063 | 2-C16 |
| 85 44 207 | 03B | 051 | 3-C04 |
| 85 44 207 | 03B | 073 | 3-D02 |
| 85 44 207 | 03B | 103 | 3-E08 |
| 85 44 215 | 03B | 025 | 3-B02 |
| 85 44 215 | 03B | 051 | 3-C04 |
| 85 44 215 | 03B | 071 | 3-C24 |
| 85 44 215 | 03B | 099 | 3-E04 |
| 85 44 223 | 03B | 051 | 3-C04 |
| 85 44 223 | 03B | 073 | 3-D02 |
| 85 44 223 | 03B | 103 | 3-E08 |
| 85 44 231 | 03B | 027 | 3-B04 |
| 85 44 231 | 03B | 051 | 3-C04 |
| 85 44 231 | 03B | 071 | 3-C24 |
| 85 44 231 | 03B | 101 | 3-E06 |
| 85 44 231 | 03B | 127 | 3-F04 |
| 85 44 249 | 03B | 051 | 3-C04 |
| 85 44 249 | 03B | 073 | 3-D02 |
| 85 44 249 | 03B | 101 | 3-E06 |
| 85 44 256 | 03B | 029 | 3-B06 |
| 85 44 256 | 03B | 101 | 3-E06 |
| 85 44 298 | 03B | 009 | 3-A10 |
| 85 44 298 | 03B | 013 | 3-A14 |
| 85 44 298 | 03B | 025 | 3-B02 |
| 85 44 298 | 03B | 039 | 3-B16 |
| 85 44 298 | 03B | 047 | 3-B24 |
| 85 44 298 | 03B | 051 | 3-C04 |
| 85 44 298 | 03B | 057 | 3-C10 |
| 85 44 298 | 03B | 061 | 3-C14 |
| 85 44 298 | 03B | 069 | 3-C22 |
| 85 44 298 | 03B | 073 | 3-D02 |
| 85 44 298 | 03B | 103 | 3-E08 |



# 7-F06 Numerical register — Nummerregister

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 85 44 298 | 03B | 109 | 3-E14 |
| 85 44 298 | 03B | 119 | 3-E24 |
| 85 44 298 | 03B | 131 | 3-F12 |
| 85 44 298 | 03B | 143 | 3-F24 |
| 85 44 298 | 08B | 223 | 6-J08 |
| 85 44 306 | 03B | 025 | 3-B02 |
| 85 44 306 | 03B | 047 | 3-B24 |
| 85 44 306 | 03B | 051 | 3-C04 |
| 85 44 306 | 03B | 069 | 3-C22 |
| 85 44 306 | 03B | 073 | 3-D02 |
| 85 44 306 | 03B | 099 | 3-E04 |
| 85 44 306 | 03B | 103 | 3-E08 |
| 85 44 306 | 03B | 109 | 3-E14 |
| 85 44 306 | 03B | 119 | 3-E24 |
| 85 44 306 | 03B | 131 | 3-F12 |
| 85 44 306 | 03B | 143 | 3-F24 |
| 85 44 313 | 03B | 009 | 3-A10 |
| 85 44 313 | 03B | 025 | 3-B02 |
| 85 44 313 | 03B | 027 | 3-B04 |
| 85 44 313 | 03B | 029 | 3-B06 |
| 85 44 314 | 03B | 035 | 3-B12 |
| 85 44 314 | 03B | 047 | 3-B24 |
| 85 44 314 | 03B | 051 | 3-C04 |
| 85 44 314 | 03B | 057 | 3-C10 |
| 85 44 314 | 03B | 071 | 3-C24 |
| 85 44 314 | 03B | 081 | 3-D10 |
| 85 44 314 | 03B | 099 | 3-E04 |
| 85 44 314 | 03B | 101 | 3-E06 |
| 85 44 314 | 03B | 109 | 3-E14 |
| 85 44 314 | 03B | 119 | 3-E24 |
| 85 44 314 | 03B | 131 | 3-F12 |
| 85 44 314 | 03B | 143 | 3-F24 |
| 85 44 314 | 08B | 223 | 6-J08 |
| 85 44 322 | 03A | 025 | 3-B02 |
| 85 44 322 | 03B | 027 | 3-B04 |
| 85 44 322 | 03B | 047 | 3-B24 |
| 85 44 322 | 03B | 051 | 3-C04 |
| 85 44 322 | 03B | 071 | 3-C24 |
| 85 44 322 | 03B | 101 | 3-E06 |
| 85 44 322 | 03B | 109 | 3-E14 |
| 85 44 322 | 03B | 119 | 3-E24 |
| 85 44 322 | 03B | 131 | 3-F12 |
| 85 44 322 | 03B | 143 | 3-F24 |
| 85 44 348 | 03B | 025 | 3-B02 |
| 85 44 348 | 03B | 047 | 3-B24 |
| 85 44 348 | 03B | 071 | 3-C24 |
| 85 44 348 | 03B | 099 | 3-E04 |
| 85 44 363 | 03B | 021 | 3-A22 |
| 85 44 363 | 03B | 043 | 3-B20 |
| 85 44 363 | 03B | 067 | 3-C20 |
| 85 44 371 | 03B | 025 | 3-B02 |
| 85 44 371 | 03B | 047 | 3-B24 |
| 85 44 371 | 03B | 067 | 3-C20 |
| 85 44 389 | 03B | 109 | 3-E14 |
| 85 44 397 | 03B | 017 | 3-A18 |
| 85 44 397 | 03B | 043 | 3-B20 |
| 85 44 397 | 03B | 065 | 3-C18 |
| 85 44 397 | 03B | 091 | 3-D20 |
| 85 44 397 | 03B | 095 | 3-D24 |
| 85 44 413 | 03A | 055 | 2-C08 |
| 85 44 421 | 03A | 055 | 2-C08 |
| 85 44 439 | 03A | 055 | 2-C08 |
| 85 44 462 | 03A | 055 | 2-C08 |
| 85 44 470 | 03A | 055 | 2-C08 |
| 85 44 504 | 03A | 055 | 2-C08 |
| 85 44 512 | 03A | 055 | 2-C08 |
| 85 44 520 | 03A | 055 | 2-C08 |
| 85 44 538 | 03A | 055 | 2-C08 |
| 85 44 660 | 03A | 059 | 2-C12 |
| 85 44 686 | 03A | 055 | 2-C08 |
| 85 44 702 | 03A | 055 | 2-C08 |
| 85 44 728 | 03A | 059 | 2-C12 |
| 85 44 736 | 03A | 055 | 2-C08 |
| 85 44 744 | 03A | 059 | 2-C12 |
| 85 44 785 | 03A | 059 | 2-C12 |
| 85 44 793 | 03A | 059 | 2-C12 |
| 85 44 801 | 03A | 035 | 2-B12 |
| 85 44 801 | 03A | 039 | 2-B16 |
| 85 46 129 | 02 | 157 | 1-H14 |
| 85 46 137 | 02 | 157 | 1-H14 |
| 85 46 319 | 03A | 055 | 2-C08 |
| 85 46 319 | 03A | 147 | 2-G04 |
| 85 46 327 | 03A | 057 | 2-C10 |
| 85 46 327 | 03A | 147 | 2-G04 |
| 85 46 368 | 03A | 057 | 2-C10 |
| 85 46 897 | 08A | 173 | 5-H06 |
| 85 46 897 | 08A | 177 | 5-H10 |
| 85 46 905 | 08A | 179 | 5-H12 |
| 85 46 905 | 08A | 181 | 5-H14 |
| 85 46 913 | 08A | 175 | 5-H08 |
| 85 46 913 | 08A | 177 | 5-H10 |
| 85 46 913 | 08A | 181 | 5-H14 |
| 85 46 939 | 08A | 173 | 5-H06 |
| 85 46 939 | 08A | 177 | 5-H10 |
| 85 46 939 | 08A | 179 | 5-H12 |
| 85 46 939 | 08A | 181 | 5-H14 |
| 85 46 962 | 08A | 107 | 5-E12 |
| 85 46 962 | 08A | 169 | 5-H02 |
| 85 46 970 | 08A | 107 | 5-E12 |
| 85 46 970 | 08A | 169 | 5-H02 |
| 85 47 044 | 08A | 165 | 5-G22 |
| 85 47 044 | 08A | 167 | 5-G24 |
| 85 47 069 | 08A | 169 | 5-H02 |
| 85 47 085 | 03A | 061 | 2-C14 |
| 85 47 085 | 08A | 173 | 5-H06 |
| 85 47 093 | 03A | 061 | 2-C14 |
| 85 47 093 | 08A | 177 | 5-H10 |
| 85 47 101 | 03A | 061 | 2-C14 |
| 85 47 101 | 08A | 181 | 5-H14 |
| 85 47 119 | 03A | 061 | 2-C14 |
| 85 47 119 | 08A | 175 | 5-H08 |
| 85 47 127 | 03A | 061 | 2-C14 |
| 85 47 127 | 08A | 175 | 5-H08 |
| 85 47 135 | 03A | 061 | 2-C14 |
| 85 47 135 | 08A | 179 | 5-H12 |
| 85 47 143 | 03A | 061 | 2-C14 |
| 85 47 143 | 08A | 181 | 5-H14 |
| 85 47 150 | 03A | 061 | 2-C14 |
| 85 47 150 | 08A | 177 | 5-H10 |
| 85 47 168 | 08A | 175 | 5-H08 |
| 85 47 168 | 08A | 177 | 5-H10 |
| 85 47 168 | 08A | 179 | 5-H12 |
| 85 47 168 | 08A | 181 | 5-H14 |
| 85 47 176 | 08A | 165 | 5-G22 |
| 85 47 176 | 08A | 167 | 5-G24 |
| 85 47 184 | 08A | 165 | 5-G22 |
| 85 47 184 | 08A | 167 | 5-G24 |
| 85 47 192 | 08A | 063 | 5-C16 |
| 85 47 192 | 08A | 165 | 5-G22 |
| 85 47 200 | 08A | 069 | 5-C22 |
| 85 47 200 | 08A | 167 | 5-G24 |
| 85 47 218 | 08A | 063 | 5-C16 |
| 85 47 218 | 08A | 165 | 5-G22 |
| 85 47 226 | 08A | 069 | 5-C22 |
| 85 47 226 | 08A | 167 | 5-G24 |
| 85 47 234 | 08A | 073 | 5-D02 |
| 85 47 234 | 08A | 169 | 5-H02 |
| 85 47 242 | 08A | 073 | 5-D02 |
| 85 47 242 | 08A | 167 | 5-G24 |
| 85 47 275 | 08A | 169 | 5-H02 |
| 85 47 283 | 08A | 169 | 5-H02 |
| 85 47 408 | 03A | 057 | 2-C10 |
| 85 47 408 | 03A | 149 | 2-G06 |
| 85 47 499 | 03A | 055 | 2-C08 |
| 85 47 499 | 03A | 147 | 2-G04 |
| 85 47 507 | 08B | 165 | 6-G22 |
| 85 47 507 | 08B | 223 | 6-J08 |
| 85 47 515 | 08B | 165 | 6-G22 |
| 85 47 515 | 08B | 223 | 6-J08 |
| 85 47 523 | 08B | 165 | 6-G22 |
| 85 47 523 | 08B | 223 | 6-J08 |
| 85 47 572 | 02 | 153 | 1-H10 |
| 85 47 572 | 02 | 199 | 1-J08 |
| 85 47 580 | 03A | 049 | 2-C02 |
| 85 47 580 | 03A | 151 | 2-G08 |
| 85 47 606 | 03A | 049 | 2-C02 |
| 85 47 606 | 03A | 151 | 2-G08 |
| 85 47 606 | 08B | 145 | 6-G02 |
| 85 47 655 | 03A | 055 | 2-C08 |
| 85 47 655 | 03A | 147 | 2-G04 |
| 85 47 747 | 03A | 055 | 2-C08 |
| 85 47 747 | 03A | 147 | 2-G04 |
| 85 47 754 | 03A | 055 | 2-C08 |
| 85 47 754 | 03A | 147 | 2-G04 |
| 85 48 133 | 03A | 057 | 2-C10 |
| 85 48 133 | 03A | 151 | 2-G08 |
| 85 48 141 | 03A | 057 | 2-C10 |
| 85 48 141 | 03A | 151 | 2-G08 |
| 85 48 802 | 03A | 071 | 2-C24 |
| 85 48 802 | 03A | 151 | 2-G08 |
| 85 48 992 | 03A | 065 | 2-C18 |
| 85 50 022 | 03A | 143 | 2-F24 |
| 85 50 279 | 03A | 031 | 2-B08 |
| 85 50 352 | 03A | 145 | 2-G02 |
| 85 50 360 | 03A | 063 | 2-C16 |
| 85 50 519 | 03A | 143 | 2-F24 |
| 85 50 766 | 03A | 141 | 2-F22 |
| 85 50 774 | 03A | 141 | 2-F22 |
| 85 50 808 | 03A | 027 | 2-B04 |
| 85 50 816 | 03A | 027 | 2-B04 |
| 85 50 824 | 03A | 027 | 2-B04 |
| 85 50 824 | 03A | 029 | 2-B06 |
| 85 50 824 | 03A | 033 | 2-B10 |
| 85 50 824 | 03A | 035 | 2-B12 |
| 85 50 840 | 03A | 027 | 2-B04 |
| 85 50 840 | 03A | 029 | 2-B06 |
| 85 50 840 | 03A | 033 | 2-B10 |
| 85 50 857 | 03A | 027 | 2-B04 |
| 85 50 865 | 03A | 027 | 2-B04 |
| 85 50 873 | 03A | 027 | 2-B04 |
| 85 50 881 | 03A | 027 | 2-B04 |
| 85 50 915 | 03A | 027 | 2-B04 |
| 85 50 923 | 03A | 027 | 2-B04 |
| 85 50 949 | 03A | 027 | 2-B04 |
| 85 50 972 | 03A | 031 | 2-B08 |
| 85 50 998 | 03A | 031 | 2-B08 |
| 85 51 095 | 03A | 145 | 2-G02 |
| 85 51 129 | 03A | 143 | 2-F24 |
| 85 51 137 | 03A | 059 | 2-C12 |
| 85 51 392 | 03A | 133 | 2-F14 |
| 85 51 582 | 03A | 005 | 2-A06 |
| 85 51 616 | 03A | 005 | 2-A06 |
| 85 51 665 | 03A | 133 | 2-F14 |
| 85 51 665 | 03B | 025 | 3-B02 |
| 85 51 665 | 03B | 047 | 3-B24 |
| 85 51 665 | 03B | 071 | 3-C24 |
| 85 51 665 | 03B | 099 | 3-E04 |
| 85 51 681 | 03A | 031 | 2-B08 |
| 85 52 002 | 03A | 145 | 2-G02 |
| 85 52 044 | 03A | 059 | 2-C12 |
| 85 52 051 | 03A | 057 | 2-C10 |
| 85 52 069 | 03A | 057 | 2-C10 |
| 85 52 077 | 03A | 057 | 2-C10 |
| 85 52 119 | 03A | 057 | 2-C10 |
| 85 52 119 | 03A | 147 | 2-G04 |
| 85 52 184 | 03A | 057 | 2-C10 |
| 85 52 200 | 03B | 021 | 3-A22 |
| 85 52 200 | 03B | 043 | 3-B20 |
| 85 52 200 | 03B | 065 | 3-C18 |
| 85 52 200 | 03B | 091 | 3-D20 |
| 85 52 200 | 03B | 095 | 3-D24 |
| 85 52 275 | 03A | 143 | 2-F24 |
| 85 52 283 | 03A | 143 | 2-F24 |
| 85 52 291 | 03A | 143 | 2-F24 |
| 85 52 309 | 03A | 057 | 2-C10 |
| 85 52 325 | 03A | 031 | 2-B08 |
| 85 52 325 | 03A | 045 | 2-B22 |
| 85 52 366 | 03A | 057 | 2-C10 |
| 85 52 382 | 03A | 143 | 2-F24 |
| 85 52 390 | 03A | 027 | 2-B04 |
| 85 52 408 | 03A | 027 | 2-B04 |
| 85 52 598 | 03A | 013 | 2-A14 |
| 85 52 655 | 03A | 127 | 2-F08 |
| 85 52 655 | 04 | 005 | 3-H06 |
| 85 52 663 | 03A | 131 | 2-F12 |
| 85 52 671 | 03A | 133 | 2-F14 |
| 85 52 713 | 03A | 125 | 2-F06 |
| 85 52 721 | 03A | 127 | 2-F08 |
| 85 52 721 | 03B | 013 | 3-A14 |
| 85 52 721 | 03B | 021 | 3-A22 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

# 7-F07 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 85 52 721 | 03B | 039 | 3-B16 |
| 85 52 721 | 03B | 043 | 3-B20 |
| 85 52 721 | 03B | 061 | 3-C14 |
| 85 52 721 | 03B | 065 | 3-C18 |
| 85 52 721 | 03B | 085 | 3-D14 |
| 85 52 721 | 03B | 091 | 3-D20 |
| 85 52 721 | 03B | 095 | 3-D24 |
| 85 53 265 | 03A | 133 | 2-F14 |
| 85 53 356 | 03A | 063 | 2-C16 |
| 85 53 463 | 03A | 137 | 2-F18 |
| 85 53 497 | 03B | 025 | 3-B02 |
| 85 53 497 | 03B | 047 | 3-B24 |
| 85 53 497 | 03B | 067 | 3-C20 |
| 85 53 497 | 03B | 099 | 3-E04 |
| 85 53 505 | 03B | 025 | 3-B02 |
| 85 53 505 | 03B | 047 | 3-B24 |
| 85 53 505 | 03B | 071 | 3-C24 |
| 85 53 505 | 03B | 099 | 3-E04 |
| 85 53 737 | 03A | 125 | 2-F06 |
| 85 53 810 | 03A | 055 | 2-C08 |
| 85 53 828 | 03A | 055 | 2-C08 |
| 85 53 844 | 03A | 055 | 2-C08 |
| 85 53 844 | 03A | 147 | 2-G04 |
| 85 53 869 | 03B | 061 | 3-C14 |
| 85 53 869 | 03B | 085 | 3-D14 |
| 85 53 927 | 03A | 063 | 2-C16 |
| 85 55 807 | 03A | 145 | 2-G02 |
| 85 55 831 | 03A | 143 | 2-F24 |
| 85 57 001 | 08C | 007 | 7-A08 |
| 85 57 480 | 03A | 147 | 2-G04 |
| 85 58 066 | 03A | 125 | 2-F06 |
| 85 58 074 | 03A | 055 | 2-C08 |
| 85 58 090 | 03A | 055 | 2-C08 |
| 85 58 108 | 03A | 055 | 2-C08 |
| 85 58 124 | 03A | 055 | 2-C08 |
| 85 58 132 | 03A | 055 | 2-C08 |
| 85 58 140 | 03A | 055 | 2-C08 |
| 85 58 298 | 03A | 143 | 2-F24 |
| 85 58 538 | 03B | 009 | 3-A10 |
| 85 58 538 | 03B | 035 | 3-B12 |
| 85 58 538 | 03B | 057 | 3-C10 |
| 85 58 538 | 03B | 081 | 3-D10 |
| 85 58 546 | 03B | 009 | 3-A10 |
| 85 58 546 | 03B | 035 | 3-B12 |
| 85 58 546 | 03B | 057 | 3-C10 |
| 85 58 546 | 03B | 081 | 3-D10 |
| 85 59 205 | 03B | 007 | 3-A08 |
| 85 59 205 | 03B | 009 | 3-A10 |
| 85 59 205 | 03B | 031 | 3-B08 |
| 85 59 205 | 03B | 035 | 3-B12 |
| 85 59 205 | 03B | 053 | 3-C06 |
| 85 59 205 | 03B | 057 | 3-C10 |
| 85 59 205 | 03B | 079 | 3-D08 |
| 85 59 205 | 03B | 081 | 3-D10 |
| 85 59 205 | 03B | 109 | 3-E14 |
| 85 59 205 | 03B | 119 | 3-E24 |
| 85 59 205 | 03B | 131 | 3-F12 |
| 85 59 205 | 03B | 143 | 3-F24 |
| 85 59 213 | 03A | 063 | 2-C16 |
| 85 59 296 | 03A | 073 | 2-D02 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 85 59 304 | 03A | 073 | 2-D02 |
| 85 59 320 | 03A | 055 | 2-C08 |
| 85 59 478 | 03A | 145 | 2-G02 |
| 85 59 510 | 03A | 031 | 2-B08 |
| 85 59 593 | 03A | 057 | 2-C10 |
| 85 59 601 | 03A | 057 | 2-C10 |
| 85 60 161 | 03A | 059 | 2-C12 |
| 85 60 278 | 03B | 025 | 3-B02 |
| 85 60 278 | 03B | 027 | 3-B04 |
| 85 60 278 | 03B | 029 | 3-B06 |
| 85 60 278 | 03B | 047 | 3-B24 |
| 85 60 278 | 03B | 051 | 3-C04 |
| 85 60 278 | 03B | 071 | 3-C24 |
| 85 60 278 | 03B | 099 | 3-E04 |
| 85 60 278 | 03B | 109 | 3-E14 |
| 85 60 278 | 03B | 119 | 3-E24 |
| 85 60 278 | 03B | 131 | 3-F12 |
| 85 60 278 | 03B | 143 | 3-F24 |
| 85 60 476 | 03B | 017 | 3-A18 |
| 85 60 476 | 03B | 041 | 3-B18 |
| 85 60 476 | 03B | 057 | 3-C10 |
| 85 60 476 | 03B | 063 | 3-C16 |
| 85 60 476 | 03B | 079 | 3-D08 |
| 85 60 476 | 03B | 083 | 3-D12 |
| 85 60 476 | 03B | 087 | 3-D16 |
| 85 60 476 | 03B | 109 | 3-E14 |
| 85 60 476 | 03B | 119 | 3-E24 |
| 85 60 476 | 03B | 131 | 3-F12 |
| 85 60 476 | 03B | 143 | 3-F24 |
| 85 60 591 | 03A | 041 | 2-B18 |
| 85 60 732 | 03A | 059 | 2-C12 |
| 85 60 740 | 03A | 059 | 2-C12 |
| 85 61 284 | 03A | 041 | 2-B18 |
| 85 61 375 | 03A | 049 | 2-C02 |
| 85 61 383 | 03A | 049 | 2-C02 |
| 85 61 409 | 03A | 049 | 2-C02 |
| 85 61 433 | 03A | 127 | 2-F08 |
| 85 61 466 | 03A | 055 | 2-C08 |
| 85 61 490 | 03A | 071 | 2-C24 |
| 85 61 532 | 03A | 093 | 2-D22 |
| 85 61 532 | 03A | 103 | 2-E08 |
| 85 61 532 | 03A | 113 | 2-E18 |
| 85 61 532 | 03A | 123 | 2-F04 |
| 85 61 623 | 03B | 009 | 3-A10 |
| 85 61 623 | 03B | 035 | 3-B12 |
| 85 61 623 | 03B | 057 | 3-C10 |
| 85 61 623 | 03B | 081 | 3-D10 |
| 85 61 623 | 08A | 173 | 5-H06 |
| 85 61 623 | 08A | 175 | 5-H08 |
| 85 61 623 | 08A | 177 | 5-H10 |
| 85 61 623 | 08A | 179 | 5-H12 |
| 85 61 623 | 08A | 181 | 5-H14 |
| 85 61 623 | 08A | 183 | 5-H16 |
| 85 61 623 | 08B | 223 | 6-J08 |
| 85 61 631 | 03B | 009 | 3-A10 |
| 85 61 631 | 03B | 035 | 3-B12 |
| 85 61 631 | 03B | 057 | 3-C10 |
| 85 61 631 | 03B | 081 | 3-D10 |
| 85 61 631 | 08B | 223 | 6-J08 |
| 85 61 979 | 03A | 145 | 2-G02 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 85 62 001 | 03A | 093 | 2-D22 |
| 85 62 001 | 03A | 103 | 2-E08 |
| 85 62 001 | 03A | 113 | 2-E18 |
| 85 62 001 | 03A | 123 | 2-F04 |
| 85 62 126 | 03A | 041 | 2-B18 |
| 85 63 215 | 03A | 145 | 2-G02 |
| 85 63 918 | 03A | 041 | 2-B18 |
| 85 63 942 | 03A | 041 | 2-B18 |
| 85 64 007 | 03A | 081 | 2-D10 |
| 85 64 007 | 03A | 139 | 2-F20 |
| 85 64 304 | 03A | 141 | 2-F22 |
| 85 64 916 | 03B | 013 | 3-A14 |
| 85 64 916 | 03B | 039 | 3-B16 |
| 85 64 916 | 03B | 061 | 3-C14 |
| 85 64 916 | 03B | 085 | 3-D14 |
| 85 64 940 | 03A | 141 | 2-F22 |
| 85 64 973 | 03A | 131 | 2-F12 |
| 85 64 973 | 08A | 039 | 5-B16 |
| 85 64 981 | 03A | 143 | 2-F24 |
| 85 65 590 | 03A | 007 | 2-A08 |
| 85 65 640 | 03A | 035 | 2-B12 |
| 85 65 855 | 03A | 061 | 2-C14 |
| 85 65 855 | 03A | 073 | 2-D02 |
| 85 65 855 | 08A | 173 | 5-H06 |
| 85 65 855 | 08A | 175 | 5-H08 |
| 85 65 855 | 08A | 177 | 5-H10 |
| 85 65 855 | 08A | 179 | 5-H12 |
| 85 65 855 | 08A | 181 | 5-H14 |
| 85 65 855 | 08A | 183 | 5-H16 |
| 85 65 947 | 03A | 027 | 2-B04 |
| 85 66 135 | 03A | 005 | 2-A06 |
| 85 66 135 | 03A | 125 | 2-F06 |
| 85 66 143 | 03A | 005 | 2-A06 |
| 85 66 143 | 03A | 125 | 2-F06 |
| 85 66 259 | 03A | 071 | 2-C24 |
| 85 66 259 | 03A | 151 | 2-G08 |
| 85 66 374 | 03A | 013 | 2-A14 |
| 85 66 416 | 03A | 045 | 2-B22 |
| 85 66 424 | 03A | 045 | 2-B22 |
| 85 66 598 | 03A | 073 | 2-D02 |
| 85 66 598 | 08C | 037 | 7-B14 |
| 85 66 598 | 08C | 039 | 7-B16 |
| 85 66 598 | 08C | 043 | 7-B20 |
| 85 66 598 | 08C | 045 | [illegible] |
| 85 66 598 | 08C | 049 | [illegible] |
| 85 66 598 | 08C | [illegible] | [illegible] |
| 85 66 853 | 03A | [illegible] | [illegible] |
| 85 67 505 | 03A | 015 | 2-A16 |
| 85 67 638 | 08A | [illegible] | 5-C16 |
| 85 67 638 | 08A | [illegible] | 5-C18 |
| 85 67 638 | 08A | [illegible] | 5-C20 |
| 85 67 638 | 08A | [illegible] | [illegible] |
| 85 67 638 | 08A | [illegible] | [illegible] |
| 85 67 646 | 08A | 063 | [illegible] |
| 85 67 646 | 08A | 065 | 5-C18 |
| 85 67 646 | 08A | 067 | 5-C20 |
| 85 67 646 | 08A | 071 | 5-C24 |
| 85 67 646 | 08A | 169 | 5-H02 |
| 85 67 653 | 03A | 045 | 2-B22 |
| 85 67 992 | 03A | 143 | 2-F24 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 85 68 271 | 03A | 135 | 2-F16 |
| 85 68 289 | 03A | 135 | 2-F16 |
| 85 68 453 | 08C | 035 | 7-B12 |
| 85 68 693 | 03A | 143 | 2-F24 |
| 85 68 701 | 03A | 089 | 2-D18 |
| 85 68 701 | 03A | 099 | 2-E04 |
| 85 68 701 | 03A | 109 | 2-E14 |
| 85 68 701 | 03A | 119 | 2-E24 |
| 85 68 719 | 03B | 021 | 3-A22 |
| 85 68 727 | 03B | 021 | 3-A22 |
| 85 68 735 | 03B | 021 | 3-A22 |
| 85 68 735 | 03B | 043 | 3-B20 |
| 85 68 735 | 03B | 067 | 3-C20 |
| 85 68 768 | 03B | 021 | 3-A22 |
| 85 68 768 | 03B | 043 | 3-B20 |
| 85 68 768 | 03B | 067 | 3-C20 |
| 85 68 768 | 03B | 109 | 3-E14 |
| 85 68 768 | 03B | 119 | 3-E24 |
| 85 68 768 | 03B | 131 | 3-F12 |
| 85 68 768 | 03B | 143 | 3-F24 |
| 85 68 776 | 03A | 051 | 2-C04 |
| 85 68 792 | 03A | 051 | 2-C04 |
| 85 68 842 | 03B | 043 | 3-B20 |
| 85 68 842 | 03B | 067 | 3-C20 |
| 85 68 883 | 03A | 071 | 2-C24 |
| 85 69 139 | 03B | 109 | 3-E14 |
| 85 69 139 | 03B | 119 | 3-E24 |
| 85 69 139 | 03B | 131 | 3-F12 |
| 85 69 139 | 03B | 143 | 3-F24 |
| 85 69 196 | 03A | 133 | 2-F14 |
| 85 69 212 | 03A | 133 | 2-F14 |
| 85 69 220 | 03A | 071 | 2-C24 |
| 85 69 238 | 02 | 153 | 1-H10 |
| 85 69 360 | 03A | 127 | 2-F08 |
| 85 69 386 | 03A | 085 | 2-D14 |
| 85 69 386 | 03A | 095 | 2-D24 |
| 85 69 386 | 03A | 105 | 2-E10 |
| 85 69 386 | 03A | 115 | 2-E20 |
| 85 70 210 | 03A | 089 | 2-D18 |
| 85 70 210 | 03A | 099 | 2-E04 |
| 85 70 210 | 03A | 109 | 2-E14 |
| 85 70 210 | 03A | 119 | 2-E24 |
| [illegible] 28 | 03A | 089 | 2-D18 |
| 85 70 [illegible]28 | 03A | 099 | 2-E04 |
| [illegible] | 03A | 109 | 2-E14 |
| [illegible] | 03A | 119 | 2-E24 |
| [illegible] | 03A | 089 | 2-D18 |
| [illegible] | 03A | 101 | 2-E06 |
| [illegible] | 03A | 111 | 2-E16 |
| [illegible] | 03A | 121 | 2-F02 |
| 85 71 127 | 03A | 141 | 2-F22 |
| 85 71 127 | 03A | 143 | 2-F24 |
| 85 71 317 | 03A | 127 | 2-F08 |
| 85 71 382 | 03A | 131 | 2-F12 |
| 85 71 382 | 03B | 013 | [illegible] |
| 85 71 382 | 03B | 017 | 3-A18 |
| 85 71 382 | 03B | 037 | 3-B14 |
| 85 71 382 | 03B | 039 | 3-B16 |
| 85 71 382 | 03B | 059 | 3-C12 |
| 85 71 382 | 03B | 061 | 3-C14 |



# 7-F08 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 85 71 382 | 03B | 083 | 3-D12 |
| 85 71 382 | 03B | 085 | 3-D14 |
| 85 71 390 | 03A | 133 | 2-F14 |
| 85 71 390 | 03B | 021 | 3-A22 |
| 85 71 390 | 03B | 047 | 3-B24 |
| 85 71 390 | 03B | 067 | 3-C20 |
| 85 71 614 | 03A | 027 | 2-B04 |
| 85 71 663 | 03A | 133 | 2-F14 |
| 85 71 721 | 03A | 133 | 2-F14 |
| 85 71 861 | 03A | 007 | 2-A08 |
| 85 71 887 | 03A | 007 | 2-A08 |
| 85 71 986 | 03A | 007 | 2-A08 |
| 85 71 986 | 03A | 009 | 2-A10 |
| 85 72 034 | 03A | 007 | 2-A08 |
| 85 72 083 | 03A | 127 | 2-F08 |
| 85 72 190 | 03A | 135 | 2-F16 |
| 85 72 190 | 08C | 035 | 7-B12 |
| 85 72 190 | 08C | 037 | 7-B14 |
| 85 72 190 | 08C | 039 | 7-B16 |
| 85 72 190 | 08C | 043 | 7-B20 |
| 85 72 190 | 08C | 045 | 7-B22 |
| 85 72 190 | 08C | 049 | 7-C02 |
| 85 72 190 | 08C | 051 | 7-C04 |
| 85 72 331 | 02 | 153 | 1-H10 |
| 85 72 331 | 03A | 073 | 2-D02 |
| 85 72 331 | 08C | 053 | 7-C06 |
| 85 72 596 | 03B | 109 | 3-E14 |
| 85 72 596 | 03B | 119 | 3-E24 |
| 85 72 596 | 03B | 131 | 3-F12 |
| 85 72 596 | 03B | 143 | 3-F24 |
| 85 72 604 | 03A | 057 | 2-C10 |
| 85 72 604 | 03A | 151 | 2-G08 |
| 85 72 638 | 03A | 007 | 2-A08 |
| 85 72 638 | 03A | 009 | 2-A10 |
| 85 72 638 | 03A | 149 | 2-G06 |
| 85 72 737 | 03A | 005 | 2-A06 |
| 85 72 745 | 03A | 005 | 2-A06 |
| 85 72 752 | 02 | 059 | 1-D12 |
| 85 72 752 | 02 | 061 | 1-D14 |
| 85 72 752 | 02 | 067 | 1-D20 |
| 85 72 752 | 02 | 071 | 1-D24 |
| 85 72 794 | 03A | 051 | 2-C04 |
| 85 73 107 | 03A | 071 | 2-C24 |
| 85 73 560 | 03A | 139 | 2-F20 |
| 85 73 586 | 02 | 153 | 1-H10 |
| 85 73 651 | 03A | 059 | 2-C12 |
| 85 73 669 | 03A | 059 | 2-C12 |
| 85 73 677 | 03A | 059 | 2-C12 |
| 85 73 834 | 03A | 013 | 2-A14 |
| 85 73 958 | 03A | 061 | 2-C14 |
| 85 73 958 | 08A | 149 | 5-G06 |
| 85 73 958 | 08A | 173 | 5-H06 |
| 85 73 958 | 08A | 175 | 5-H08 |
| 85 73 958 | 08A | 177 | 5-H10 |
| 85 73 958 | 08A | 179 | 5-H12 |
| 85 73 958 | 08A | 181 | 5-H14 |
| 85 73 958 | 08A | 183 | 5-H16 |
| 85 73 966 | 02 | 171 | 1-I04 |
| 85 73 966 | 03A | 061 | 2-C14 |
| 85 73 966 | 08A | 173 | 5-H06 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 85 73 966 | 08A | 175 | 5-H08 |
| 85 73 966 | 08A | 177 | 5-H10 |
| 85 73 966 | 08A | 179 | 5-H12 |
| 85 73 966 | 08A | 181 | 5-H14 |
| 85 73 966 | 08A | 183 | 5-H16 |
| 85 74 048 | 03B | 021 | 3-A22 |
| 85 74 048 | 03B | 043 | 3-B20 |
| 85 74 048 | 03B | 065 | 3-C18 |
| 85 74 097 | 03A | 021 | 2-A22 |
| 85 74 097 | 03A | 023 | 2-A24 |
| 85 74 097 | 03A | 025 | 2-B02 |
| 85 74 097 | 03B | 013 | 3-A14 |
| 85 74 097 | 03B | 039 | 3-B16 |
| 85 74 105 | 03A | 129 | 2-F10 |
| 85 74 105 | 03B | 013 | 3-A14 |
| 85 74 105 | 03B | 039 | 3-B16 |
| 85 74 139 | 03A | 089 | 2-D18 |
| 85 74 139 | 03A | 101 | 2-E06 |
| 85 74 253 | 03A | 031 | 2-B08 |
| 85 74 261 | 03A | 031 | 2-B08 |
| 85 74 410 | 03A | 127 | 2-F08 |
| 85 74 469 | 03A | 063 | 2-C16 |
| 85 74 501 | 03A | 061 | 2-C14 |
| 85 74 501 | 08A | 173 | 5-H06 |
| 85 74 501 | 08A | 175 | 5-H08 |
| 85 74 501 | 08A | 179 | 5-H12 |
| 85 74 535 | 03A | 045 | 2-B22 |
| 85 74 543 | 03A | 045 | 2-B22 |
| 85 74 717 | 03A | 035 | 2-B12 |
| 85 74 725 | 03A | 035 | 2-B12 |
| 85 74 733 | 03A | 035 | 2-B12 |
| 85 74 741 | 03A | 035 | 2-B12 |
| 85 74 774 | 03A | 035 | 2-B12 |
| 85 74 782 | 03A | 035 | 2-B12 |
| 85 74 816 | 03A | 015 | 2-A16 |
| 85 74 824 | 03A | 127 | 2-F08 |
| 85 74 824 | 08A | 167 | 5-G24 |
| 85 74 881 | 03B | 009 | 3-A10 |
| 85 74 949 | 03B | 009 | 3-A10 |
| 85 74 949 | 03B | 035 | 3-B12 |
| 85 74 949 | 03B | 057 | 3-C10 |
| 85 74 949 | 03B | 083 | 3-D12 |
| 85 75 060 | 03A | 073 | 2-D02 |
| 85 75 391 | 03A | 061 | 2-C14 |
| 85 75 391 | 08A | 173 | 5-H06 |
| 85 75 391 | 08A | 175 | 5-H08 |
| 85 75 391 | 08A | 179 | 5-H12 |
| 85 75 581 | 03A | 127 | 2-F08 |
| 85 75 599 | 03A | 127 | 2-F08 |
| 85 75 599 | 08A | 039 | 5-B16 |
| 85 75 599 | 08A | 055 | 5-C08 |
| 85 77 702 | 03A | 071 | 2-C24 |
| 85 77 702 | 03A | 151 | 2-G08 |
| 85 77 710 | 03A | 061 | 2-C14 |
| 85 77 736 | 03A | 071 | 2-C24 |
| 85 77 785 | 03A | 045 | 2-B22 |
| 85 77 793 | 03A | 071 | 2-C24 |
| 85 77 801 | 03A | 049 | 2-C02 |
| 85 78 221 | 03A | 061 | 2-C14 |
| 85 78 221 | 08A | 177 | 5-H10 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 85 78 221 | 08A | 179 | 5-H12 |
| 85 78 221 | 08A | 181 | 5-H14 |
| 85 78 221 | 08A | 183 | 5-H16 |
| 85 78 262 | 03A | 077 | 2-D06 |
| 85 78 312 | 03A | 071 | 2-C24 |
| 85 78 510 | 03A | 057 | 2-C10 |
| 85 78 510 | 03A | 151 | 2-G08 |
| 85 78 775 | 03A | 073 | 2-D02 |
| 85 79 211 | 08A | 021 | 5-A22 |
| 85 79 393 | 03B | 109 | 3-E14 |
| 85 79 393 | 03B | 119 | 3-E24 |
| 85 79 393 | 03B | 131 | 3-F12 |
| 85 79 393 | 03B | 145 | 3-G02 |
| 85 79 492 | 03A | 063 | 2-C16 |
| 85 79 492 | 08A | 169 | 5-H02 |
| 85 79 575 | 03A | 127 | 2-F08 |
| 85 79 591 | 03A | 145 | 2-G02 |
| 85 79 609 | 03A | 145 | 2-G02 |
| 85 79 617 | 03A | 143 | 2-F24 |
| 85 79 625 | 03A | 143 | 2-F24 |
| 85 79 716 | 03A | 031 | 2-B08 |
| 85 79 898 | 03A | 065 | 2-C18 |
| 85 79 906 | 08A | 173 | 5-H06 |
| 85 79 906 | 08A | 175 | 5-H08 |
| 85 79 906 | 08A | 177 | 5-H10 |
| 85 79 906 | 08A | 181 | 5-H14 |
| 85 79 914 | 08A | 173 | 5-H06 |
| 85 79 914 | 08A | 175 | 5-H08 |
| 85 79 914 | 08A | 177 | 5-H10 |
| 85 79 914 | 08A | 181 | 5-H14 |
| 85 79 922 | 08A | 173 | 5-H06 |
| 85 79 922 | 08A | 175 | 5-H08 |
| 85 79 922 | 08A | 177 | 5-H10 |
| 85 79 922 | 08A | 181 | 5-H14 |
| 85 79 955 | 03A | 129 | 2-F10 |
| 85 79 955 | 03B | 017 | 3-A18 |
| 85 79 955 | 03B | 061 | 3-C14 |
| 85 79 955 | 03B | 063 | 3-C16 |
| 85 79 955 | 03B | 087 | 3-D16 |
| 85 79 963 | 03A | 073 | 2-D02 |
| 85 81 068 | 03A | 065 | 2-C18 |
| 85 81 076 | 03A | 141 | 2-F22 |
| 85 81 084 | 03A | 141 | 2-F22 |
| 85 81 472 | 03A | 143 | 2-F24 |
| 85 81 951 | 03B | 111 | 3-E16 |
| 85 81 951 | 03B | 121 | 3-F02 |
| 85 81 951 | 03B | 133 | 3-F14 |
| 85 81 951 | 03B | 145 | 3-G02 |
| 85 82 082 | 03B | 021 | 3-A22 |
| 85 82 082 | 03B | 065 | 3-C18 |
| 85 82 090 | 03B | 013 | 3-A14 |
| 85 82 090 | 03B | 039 | 3-B16 |
| 85 82 090 | 03B | 063 | 3-C16 |
| 85 82 090 | 03B | 087 | 3-D16 |
| 85 82 090 | 03B | 111 | 3-E16 |
| 85 82 090 | 03B | 121 | 3-F02 |
| 85 82 090 | 03B | 133 | 3-F14 |
| 85 82 090 | 03B | 145 | 3-G02 |
| 85 82 116 | 03B | 013 | 3-A14 |
| 85 82 116 | 03B | 039 | 3-B16 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 85 82 116 | 03B | 063 | 3-C16 |
| 85 82 116 | 03B | 087 | 3-D16 |
| 85 82 215 | 03A | 035 | 2-B12 |
| 85 82 223 | 03A | 035 | 2-B12 |
| 85 82 231 | 03A | 035 | 2-B12 |
| 85 82 249 | 03A | 035 | 2-B12 |
| 85 82 397 | 03B | 005 | 3-A06 |
| 85 82 397 | 03B | 017 | 3-A18 |
| 85 82 397 | 03B | 043 | 3-B20 |
| 85 82 397 | 03B | 065 | 3-C18 |
| 85 82 397 | 03B | 091 | 3-D20 |
| 85 82 397 | 03B | 095 | 3-D24 |
| 85 82 397 | 03B | 105 | 3-E10 |
| 85 82 397 | 03B | 115 | 3-E20 |
| 85 82 397 | 03B | 127 | 3-F08 |
| 85 82 397 | 03B | 139 | 3-F20 |
| 85 82 405 | 03B | 005 | 3-A06 |
| 85 82 405 | 03B | 031 | 3-B08 |
| 85 82 405 | 03B | 053 | 3-C06 |
| 85 82 405 | 03B | 077 | 3-D06 |
| 85 82 405 | 03B | 105 | 3-E10 |
| 85 82 405 | 03B | 115 | 3-E20 |
| 85 82 405 | 03B | 127 | 3-F08 |
| 85 82 405 | 03B | 139 | 3-F20 |
| 85 82 413 | 03B | 013 | 3-A14 |
| 85 82 413 | 03B | 039 | 3-B16 |
| 85 82 413 | 03B | 061 | 3-C14 |
| 85 82 413 | 03B | 085 | 3-D14 |
| 85 82 413 | 03B | 105 | 3-E10 |
| 85 82 413 | 03B | 115 | 3-E20 |
| 85 82 413 | 03B | 127 | 3-F08 |
| 85 82 413 | 03B | 139 | 3-F20 |
| 85 82 421 | 03B | 005 | 3-A06 |
| 85 82 421 | 03B | 031 | 3-B08 |
| 85 82 421 | 03B | 053 | 3-C06 |
| 85 82 421 | 03B | 077 | 3-D06 |
| 85 82 421 | 03B | 107 | 3-E12 |
| 85 82 421 | 03B | 117 | 3-E22 |
| 85 82 421 | 03B | 129 | 3-F10 |
| 85 82 421 | 03B | 141 | 3-F22 |
| 85 82 439 | 03B | 005 | 3-A06 |
| 85 82 439 | 03B | 031 | 3-B08 |
| 85 82 439 | 03B | 053 | 3-C06 |
| 85 82 439 | 03B | 077 | 3-D06 |
| 85 82 439 | 03B | 109 | 3-E14 |
| 85 82 439 | 03B | 119 | 3-E24 |
| 85 82 439 | 03B | 143 | 3-F24 |
| 85 82 447 | 03B | 065 | 3-C18 |
| 85 82 447 | 03B | 091 | 3-D20 |
| 85 82 447 | 03B | 095 | 3-D24 |
| 85 82 447 | 03B | 131 | 3-F12 |
| 85 82 447 | 03B | 143 | 3-F24 |
| 85 82 454 | 03B | 005 | 3-A06 |
| 85 82 454 | 03B | 007 | 3-A08 |
| 85 82 454 | 03B | 017 | 3-A18 |
| 85 82 454 | 03B | 031 | 3-B08 |
| 85 82 454 | 03B | 033 | 3-B10 |
| 85 82 454 | 03B | 043 | 3-B20 |
| 85 82 454 | 03B | 053 | 3-C06 |
| 85 82 454 | 03B | 055 | 3-C08 |



MASTER INDEX


0 General 1-A02
2 Engine 1-B02
3A Electrical general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 7-A02
9 Tools, labels 7-D02
10 Numerical register 7-E02

# 7-F09 Numerical register Nummerregister

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 85 82 454 | 03B | 065 | 3-C18 |
| 85 82 454 | 03B | 079 | 3-D08 |
| 85 82 454 | 03B | 091 | 3-D20 |
| 85 82 454 | 03B | 095 | 3-D24 |
| 85 82 454 | 03B | 105 | 3-E10 |
| 85 82 454 | 03B | 115 | 3-E20 |
| 85 82 454 | 03B | 127 | 3-F08 |
| 85 82 454 | 03B | 139 | 3-F20 |
| 85 82 546 | 03B | 107 | 3-E12 |
| 85 82 546 | 03B | 115 | 3-E20 |
| 85 82 546 | 03B | 127 | 3-F08 |
| 85 82 546 | 03B | 139 | 3-F20 |
| 85 82 579 | 03B | 111 | 3-E16 |
| 85 82 579 | 03B | 121 | 3-F02 |
| 85 82 579 | 03B | 133 | 3-F14 |
| 85 82 579 | 03B | 145 | 3-G02 |
| 85 82 595 | 03B | 027 | 3-B04 |
| 85 82 595 | 03B | 051 | 3-C04 |
| 85 82 595 | 03B | 073 | 3-D02 |
| 85 82 595 | 03B | 101 | 3-E06 |
| 85 82 595 | 03B | 109 | 3-E14 |
| 85 82 595 | 03B | 119 | 3-E24 |
| 85 82 595 | 03B | 131 | 3-F12 |
| 85 82 595 | 03B | 143 | 3-F24 |
| 85 82 637 | 03B | 005 | 3-A06 |
| 85 82 637 | 03B | 031 | 3-B08 |
| 85 82 637 | 03B | 053 | 3-C06 |
| 85 82 637 | 03B | 111 | 3-E16 |
| 85 82 637 | 03B | 121 | 3-F02 |
| 85 82 637 | 03B | 133 | 3-F14 |
| 85 82 686 | 03A | 143 | 2-F24 |
| 85 82 728 | 08C | 037 | 7-B14 |
| 85 83 379 | 03B | 005 | 3-A06 |
| 85 83 379 | 03B | 031 | 3-B08 |
| 85 83 379 | 03B | 053 | 3-C06 |
| 85 83 379 | 03B | 077 | 3-D06 |
| 85 83 379 | 03B | 107 | 3-E12 |
| 85 83 379 | 03B | 117 | 3-E22 |
| 85 83 379 | 03B | 129 | 3-F10 |
| 85 83 379 | 03B | 141 | 3-F22 |
| 85 83 452 | 03A | 035 | 2-B12 |
| 85 83 460 | 03A | 035 | 2-B12 |
| 85 83 510 | 03A | 035 | 2-B12 |
| 85 83 528 | 03A | 035 | 2-B12 |
| 85 83 536 | 03A | 063 | 2-C16 |
| 85 83 585 | 03A | 071 | 2-C24 |
| 85 83 593 | 03A | 049 | 2-C02 |
| 85 83 627 | 03A | 137 | 2-F18 |
| 85 84 666 | 03A | 005 | 2-A06 |
| 85 84 674 | 03A | 005 | 2-A06 |
| 85 84 682 | 03A | 005 | 2-A06 |
| 85 84 732 | 03A | 135 | 2-F16 |
| 85 85 135 | 03A | 143 | 2-F24 |
| 85 85 150 | 03A | 143 | 2-F24 |
| 85 85 176 | 03A | 145 | 2-G02 |
| 85 85 325 | 03A | 127 | 2-F08 |
| 85 85 333 | 03A | 041 | 2-B18 |
| 85 85 341 | 03A | 041 | 2-B18 |
| 85 85 358 | 03A | 041 | 2-B18 |
| 85 85 366 | 03A | 041 | 2-B18 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 85 85 374 | 03A | 041 | 2-B18 |
| 85 85 382 | 03A | 041 | 2-B18 |
| 85 85 390 | 03A | 041 | 2-B18 |
| 85 85 408 | 03A | 041 | 2-B18 |
| 85 85 416 | 03A | 041 | 2-B18 |
| 85 85 424 | 03A | 041 | 2-B18 |
| 85 85 432 | 03A | 041 | 2-B18 |
| 85 85 440 | 03A | 041 | 2-B18 |
| 85 85 457 | 03A | 041 | 2-B18 |
| 85 85 465 | 03A | 041 | 2-B18 |
| 85 85 473 | 03A | 041 | 2-B18 |
| 85 85 481 | 03A | 041 | 2-B18 |
| 85 85 853 | 03A | 045 | 2-B22 |
| 85 85 861 | 03A | 045 | 2-B22 |
| 85 85 879 | 03A | 045 | 2-B22 |
| 85 85 887 | 03A | 045 | 2-B22 |
| 85 85 895 | 03A | 045 | 2-B22 |
| 85 85 903 | 03A | 045 | 2-B22 |
| 85 85 978 | 03A | 045 | 2-B22 |
| 85 85 986 | 03A | 045 | 2-B22 |
| 85 86 075 | 03A | 007 | 2-A08 |
| 85 86 075 | 03A | 009 | 2-A10 |
| 85 86 133 | 03B | 111 | 3-E16 |
| 85 86 133 | 03B | 121 | 3-F02 |
| 85 86 802 | 03B | 025 | 3-B02 |
| 85 86 802 | 03B | 049 | 3-C02 |
| 85 86 802 | 03B | 071 | 3-C24 |
| 85 86 802 | 03B | 099 | 3-E04 |
| 85 87 016 | 03A | 067 | 2-C20 |
| 85 87 024 | 03A | 067 | 2-C20 |
| 85 87 040 | 03A | 067 | 2-C20 |
| 85 87 081 | 03A | 067 | 2-C20 |
| 85 87 099 | 03A | 067 | 2-C20 |
| 85 87 107 | 03A | 069 | 2-C22 |
| 85 87 222 | 03A | 007 | 2-A08 |
| 85 87 222 | 03A | 009 | 2-A10 |
| 85 87 248 | 03A | 007 | 2-A08 |
| 85 87 248 | 03A | 009 | 2-A10 |
| 85 87 255 | 03A | 067 | 2-C20 |
| 85 87 347 | 03A | 067 | 2-C20 |
| 85 87 354 | 03A | 067 | 2-C20 |
| 85 87 354 | 03A | 069 | 2-C22 |
| 85 87 362 | 03A | 067 | 2-C20 |
| 85 87 412 | 03B | 051 | 3-C04 |
| 85 87 412 | 03B | 071 | 3-C24 |
| 85 87 412 | 03B | 099 | 3-E04 |
| 85 87 420 | 03B | 025 | 3-B02 |
| 85 87 420 | 03B | 049 | 3-C02 |
| 85 87 420 | 03B | 051 | 3-C04 |
| 85 87 420 | 03B | 071 | 3-C24 |
| 85 87 420 | 03B | 099 | 3-E04 |
| 85 87 438 | 03B | 025 | 3-B02 |
| 85 87 438 | 03B | 049 | 3-C02 |
| 85 87 438 | 03B | 051 | 3-C04 |
| 85 87 438 | 03B | 071 | 3-C24 |
| 85 87 438 | 03B | 099 | 3-E04 |
| 85 87 453 | 03B | 025 | 3-B02 |
| 85 87 453 | 03B | 049 | 3-C02 |
| 85 87 453 | 03B | 051 | 3-C04 |
| 85 87 453 | 03B | 071 | 3-C24 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 85 87 453 | 03B | 099 | 3-E04 |
| 85 87 461 | 03B | 051 | 3-C04 |
| 85 87 461 | 03B | 071 | 3-C24 |
| 85 87 461 | 03B | 099 | 3-E04 |
| 85 87 487 | 03B | 025 | 3-B02 |
| 85 87 487 | 03B | 049 | 3-C02 |
| 85 87 487 | 03B | 051 | 3-C04 |
| 85 87 487 | 03B | 071 | 3-C24 |
| 85 87 487 | 03B | 099 | 3-E04 |
| 85 87 495 | 03B | 051 | 3-C04 |
| 85 87 495 | 03B | 071 | 3-C24 |
| 85 87 495 | 03B | 099 | 3-E04 |
| 85 87 503 | 03B | 025 | 3-B02 |
| 85 87 503 | 03B | 049 | 3-C02 |
| 85 87 503 | 03B | 071 | 3-C24 |
| 85 87 503 | 03B | 099 | 3-E04 |
| 85 87 511 | 03B | 025 | 3-B02 |
| 85 87 511 | 03B | 049 | 3-C02 |
| 85 87 511 | 03B | 071 | 3-C24 |
| 85 87 511 | 03B | 099 | 3-E04 |
| 85 87 552 | 03B | 051 | 3-C04 |
| 85 87 552 | 03B | 073 | 3-D02 |
| 85 87 552 | 03B | 103 | 3-E08 |
| 85 87 552 | 03B | 111 | 3-E16 |
| 85 87 552 | 03B | 121 | 3-F02 |
| 85 87 552 | 03B | 133 | 3-F14 |
| 85 87 552 | 03B | 145 | 3-G02 |
| 85 87 560 | 03B | 051 | 3-C04 |
| 85 87 560 | 03B | 073 | 3-D02 |
| 85 87 560 | 03B | 103 | 3-E08 |
| 85 87 560 | 03B | 119 | 3-E24 |
| 85 87 560 | 03B | 133 | 3-F14 |
| 85 87 560 | 03B | 145 | 3-G02 |
| 85 87 586 | 03A | 129 | 2-F10 |
| 85 87 628 | 03A | 127 | 2-F08 |
| 85 87 636 | 03A | 133 | 2-F14 |
| 85 87 644 | 03A | 077 | 2-D06 |
| 85 87 669 | 03A | 139 | 2-F20 |
| 85 87 677 | 03A | 135 | 2-F16 |
| 85 88 188 | 03B | 109 | 3-E14 |
| 85 88 188 | 03B | 119 | 3-E24 |
| 85 88 188 | 03B | 131 | 3-F12 |
| 85 88 188 | 03B | 143 | 3-F24 |
| 85 88 220 | 03A | 135 | 2-F16 |
| 85 88 626 | 08C | 013 | 7-A14 |
| 85 89 277 | 03A | 067 | 2-C20 |
| 85 89 319 | 03A | 137 | 2-F18 |
| 85 89 343 | 03A | 141 | 2-F22 |
| 85 90 192 | 03B | 041 | 3-B18 |
| 85 90 192 | 03B | 065 | 3-C18 |
| 85 90 192 | 03B | 091 | 3-D20 |
| 85 90 192 | 03B | 095 | 3-D24 |
| 85 90 275 | 08C | 037 | 7-B14 |
| 85 90 549 | 03A | 007 | 2-A08 |
| 85 90 549 | 03A | 009 | 2-A10 |
| 85 90 671 | 08C | 035 | 7-B12 |
| 85 90 689 | 03A | 067 | 2-C20 |
| 85 90 713 | 03A | 141 | 2-F22 |
| 85 90 739 | 03A | 141 | 2-F22 |
| 85 90 754 | 03A | 141 | 2-F22 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 85 90 812 | 03A | 063 | 2-C16 |
| 85 90 820 | 03A | 063 | 2-C16 |
| 85 90 838 | 03A | 063 | 2-C16 |
| 85 90 853 | 03A | 063 | 2-C16 |
| 85 90 887 | 03A | 009 | 2-A10 |
| 85 90 895 | 03A | 009 | 2-A10 |
| 85 90 903 | 03A | 009 | 2-A10 |
| 85 90 911 | 03A | 007 | 2-A08 |
| 85 90 911 | 03A | 009 | 2-A10 |
| 85 90 929 | 03A | 009 | 2-A10 |
| 85 90 986 | 03A | 009 | 2-A10 |
| 85 90 994 | 03A | 007 | 2-A08 |
| 85 90 994 | 03A | 009 | 2-A10 |
| 85 91 075 | 03A | 007 | 2-A08 |
| 85 91 109 | 03A | 073 | 2-D02 |
| 85 91 117 | 03A | 073 | 2-D02 |
| 85 91 117 | 08C | 037 | 7-B14 |
| 85 91 117 | 08C | 039 | 7-B16 |
| 85 91 117 | 08C | 043 | 7-B20 |
| 85 91 117 | 08C | 045 | 7-B22 |
| 85 91 117 | 08C | 049 | 7-C02 |
| 85 91 117 | 08C | 051 | 7-C04 |
| 85 91 208 | 03A | 061 | 2-C14 |
| 85 91 208 | 08A | 181 | 5-H14 |
| 85 91 216 | 03A | 061 | 2-C14 |
| 85 91 216 | 08A | 173 | 5-H06 |
| 85 91 216 | 08A | 175 | 5-H08 |
| 85 91 216 | 08A | 177 | 5-H10 |
| 85 91 216 | 08A | 179 | 5-H12 |
| 85 91 216 | 08A | 181 | 5-H14 |
| 85 91 224 | 03A | 061 | 2-C14 |
| 85 91 224 | 08A | 173 | 5-H06 |
| 85 91 224 | 08A | 175 | 5-H08 |
| 85 91 224 | 08A | 177 | 5-H10 |
| 85 91 224 | 08A | 179 | 5-H12 |
| 85 91 224 | 08A | 181 | 5-H14 |
| 85 91 224 | 08A | 183 | 5-H16 |
| 85 91 232 | 03A | 061 | 2-C14 |
| 85 91 232 | 08A | 175 | 5-H08 |
| 85 91 232 | 08A | 177 | 5-H10 |
| 85 91 232 | 08A | 181 | 5-H14 |
| 85 91 232 | 08A | 183 | 5-H16 |
| 85 91 240 | 08A | 173 | 5-H06 |
| 85 91 240 | 08A | 175 | 5-H08 |
| 85 91 240 | 08A | 177 | 5-H10 |
| 85 91 240 | 08A | 179 | 5-H12 |
| 85 91 240 | 08A | 181 | 5-H14 |
| 85 91 257 | 03A | 093 | 2-D22 |
| 85 91 257 | 03A | 103 | 2-E08 |
| 85 91 257 | 03A | 113 | 2-E18 |
| 85 91 257 | 03A | 123 | 2-F04 |
| 85 91 265 | 03A | 093 | 2-D22 |
| 85 91 265 | 03A | 103 | 2-E08 |
| 85 91 265 | 03A | 113 | 2-E18 |
| 85 91 265 | 03A | 123 | 2-F04 |
| 85 91 273 | 08A | 173 | 5-H06 |
| 85 91 273 | 08A | 175 | 5-H08 |
| 85 91 273 | 08A | 177 | 5-H10 |
| 85 91 273 | 08A | 179 | 5-H12 |
| 85 91 273 | 08A | 181 | 5-H14 |



# 7-F10 Numerical register Nummerregister

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 85 91 281 | 03A | 093 | 2-D22 |
| 85 91 281 | 03A | 103 | 2-E08 |
| 85 91 281 | 03A | 113 | 2-E18 |
| 85 91 281 | 03A | 123 | 2-F04 |
| 85 91 281 | 08A | 179 | 5-H12 |
| 85 91 281 | 08A | 181 | 5-H14 |
| 85 91 307 | 03A | 093 | 2-D22 |
| 85 91 307 | 03A | 103 | 2-E08 |
| 85 91 307 | 03A | 113 | 2-E18 |
| 85 91 307 | 03A | 123 | 2-F04 |
| 85 91 307 | 08A | 173 | 5-H06 |
| 85 91 307 | 08A | 175 | 5-H08 |
| 85 91 307 | 08A | 179 | 5-H12 |
| 85 91 406 | 03A | 067 | 2-C20 |
| 85 91 414 | 03A | 061 | 2-C14 |
| 85 91 414 | 08A | 173 | 5-H06 |
| 85 91 414 | 08A | 175 | 5-H08 |
| 85 91 414 | 08A | 177 | 5-H10 |
| 85 91 414 | 08A | 179 | 5-H12 |
| 85 91 414 | 08A | 181 | 5-H14 |
| 85 91 414 | 08A | 183 | 5-H16 |
| 85 91 422 | 08A | 173 | 5-H06 |
| 85 91 422 | 08A | 175 | 5-H08 |
| 85 91 422 | 08A | 177 | 5-H10 |
| 85 91 422 | 08A | 179 | 5-H12 |
| 85 91 422 | 08A | 181 | 5-H14 |
| 85 91 422 | 08A | 183 | 5-H16 |
| 85 91 455 | 03A | 067 | 2-C20 |
| 85 91 455 | 03A | 081 | 2-D10 |
| 85 91 455 | 03A | 137 | 2-F18 |
| 85 91 489 | 03A | 093 | 2-D22 |
| 85 91 489 | 03A | 103 | 2-E08 |
| 85 91 489 | 03A | 113 | 2-E18 |
| 85 91 489 | 03A | 123 | 2-F04 |
| 85 91 489 | 08A | 169 | 5-H02 |
| 85 91 497 | 03A | 093 | 2-D22 |
| 85 91 497 | 03A | 103 | 2-E08 |
| 85 91 497 | 03A | 113 | 2-E18 |
| 85 91 497 | 03A | 123 | 2-F04 |
| 85 91 497 | 08A | 169 | 5-H02 |
| 85 91 513 | 03A | 127 | 2-F08 |
| 85 91 729 | 03A | 137 | 2-F18 |
| 85 91 984 | 03A | 069 | 2-C22 |
| 85 91 992 | 03A | 067 | 2-C20 |
| 85 93 014 | 08B | 147 | 6-G04 |
| 85 93 030 | 08B | 147 | 6-G04 |
| 85 93 030 | 08B | 157 | 6-G14 |
| 85 93 030 | 08B | 165 | 6-G22 |
| 85 93 030 | 08B | 173 | 6-H06 |
| 85 93 089 | 03B | 047 | 3-B24 |
| 85 93 089 | 03B | 067 | 3-C20 |
| 85 93 089 | 03B | 121 | 3-F02 |
| 85 93 089 | 03B | 133 | 3-F14 |
| 85 93 089 | 03B | 145 | 3-G02 |
| 85 93 253 | 03A | 031 | 2-B08 |
| 85 93 261 | 03A | 031 | 2-B08 |
| 85 93 295 | 03A | 089 | 2-D18 |
| 85 93 295 | 03A | 101 | 2-E06 |
| 85 93 295 | 03A | 111 | 2-E16 |
| 85 93 295 | 03A | 121 | 2-F02 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 85 93 329 | 03A | 009 | 2-A10 |
| 85 93 394 | 03A | 065 | 2-C18 |
| 85 93 733 | 03A | 065 | 2-C18 |
| 85 93 766 | 03A | 073 | 2-D02 |
| 85 93 766 | 08C | 037 | 7-B14 |
| 85 93 766 | 08C | 039 | 7-B16 |
| 85 93 766 | 08C | 043 | 7-B20 |
| 85 93 766 | 08C | 045 | 7-B22 |
| 85 93 766 | 08C | 049 | 7-C02 |
| 85 93 766 | 08C | 051 | 7-C04 |
| 85 93 899 | 03B | 013 | 3-A14 |
| 85 93 899 | 03B | 037 | 3-B14 |
| 85 93 899 | 03B | 059 | 3-C12 |
| 85 93 899 | 03B | 083 | 3-D12 |
| 85 93 907 | 03A | 021 | 2-A22 |
| 85 93 907 | 03A | 023 | 2-A24 |
| 85 93 907 | 03A | 025 | 2-B02 |
| 85 93 907 | 03B | 017 | 3-A18 |
| 85 93 907 | 03B | 041 | 3-B18 |
| 85 93 907 | 03B | 061 | 3-C14 |
| 85 93 907 | 03B | 087 | 3-D16 |
| 85 93 915 | 03B | 013 | 3-A14 |
| 85 93 915 | 03B | 037 | 3-B14 |
| 85 93 915 | 03B | 059 | 3-C12 |
| 85 93 915 | 03B | 083 | 3-D12 |
| 85 93 923 | 03B | 017 | 3-A18 |
| 85 93 923 | 03B | 063 | 3-C16 |
| 85 93 931 | 03B | 021 | 3-A22 |
| 85 93 931 | 03B | 065 | 3-C18 |
| 85 93 949 | 03B | 021 | 3-A22 |
| 85 93 949 | 03B | 043 | 3-B20 |
| 85 93 949 | 03B | 065 | 3-C18 |
| 85 93 956 | 03B | 027 | 3-B04 |
| 85 93 956 | 03B | 029 | 3-B06 |
| 85 93 956 | 03B | 051 | 3-C04 |
| 85 93 956 | 03B | 071 | 3-C24 |
| 85 93 956 | 03B | 101 | 3-E06 |
| 85 93 956 | 03B | 109 | 3-E14 |
| 85 93 956 | 03B | 119 | 3-E24 |
| 85 93 956 | 03B | 131 | 3-F12 |
| 85 93 956 | 03B | 143 | 3-F24 |
| 85 93 964 | 03B | 025 | 3-B02 |
| 85 93 964 | 03B | 029 | 3-B06 |
| 85 93 964 | 03B | 051 | 3-C04 |
| 85 93 964 | 03B | 071 | 3-C24 |
| 85 93 964 | 03B | 099 | 3-E04 |
| 85 93 964 | 03B | 101 | 3-E06 |
| 85 93 964 | 03B | 111 | 3-E16 |
| 85 93 964 | 03B | 121 | 3-F02 |
| 85 93 964 | 03B | 133 | 3-F14 |
| 85 93 964 | 03B | 145 | 3-G02 |
| 85 94 152 | 03A | 005 | 2-A06 |
| 85 94 335 | 03A | 077 | 2-D06 |
| 85 94 343 | 03A | 077 | 2-D06 |
| 85 94 350 | 03A | 077 | 2-D06 |
| 85 94 368 | 03A | 005 | 2-A06 |
| 85 94 467 | 03A | 085 | 2-D14 |
| 85 94 467 | 03A | 097 | 2-E02 |
| 85 94 467 | 03A | 105 | 2-E10 |
| 85 94 467 | 03A | 115 | 2-E20 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 85 94 632 | 03A | 073 | 2-D02 |
| 85 94 749 | 08A | 135 | 5-F16 |
| 85 94 764 | 02 | 157 | 1-H14 |
| 85 94 806 | 02 | 157 | 1-H14 |
| 85 94 806 | 08C | 039 | 7-B16 |
| 85 94 806 | 08C | 043 | 7-B20 |
| 85 94 806 | 08C | 045 | 7-B22 |
| 85 94 897 | 03A | 005 | 2-A06 |
| 85 96 124 | 03A | 079 | 2-D08 |
| 85 96 140 | 03A | 063 | 2-C16 |
| 85 96 207 | 03A | 057 | 2-C10 |
| 85 96 207 | 03A | 151 | 2-G08 |
| 85 96 215 | 03A | 057 | 2-C10 |
| 85 96 215 | 03A | 151 | 2-G08 |
| 85 97 064 | 03B | 039 | 3-B16 |
| 85 97 064 | 03B | 061 | 3-C14 |
| 85 97 064 | 03B | 085 | 3-D14 |
| 85 98 047 | 08A | 063 | 5-C16 |
| 85 98 047 | 08A | 065 | 5-C18 |
| 85 98 047 | 08A | 067 | 5-C20 |
| 85 98 047 | 08A | 071 | 5-C24 |
| 85 98 054 | 03A | 067 | 2-C20 |
| 85 98 195 | 03A | 069 | 2-C22 |
| 85 98 211 | 03A | 061 | 2-C14 |
| 85 98 211 | 08A | 177 | 5-H10 |
| 85 98 211 | 08A | 179 | 5-H12 |
| 85 98 211 | 08A | 181 | 5-H14 |
| 85 98 229 | 03A | 061 | 2-C14 |
| 85 98 229 | 08A | 173 | 5-H06 |
| 85 98 229 | 08A | 175 | 5-H08 |
| 85 98 229 | 08A | 177 | 5-H10 |
| 85 98 237 | 03A | 061 | 2-C14 |
| 85 98 237 | 08A | 173 | 5-H06 |
| 85 98 237 | 08A | 175 | 5-H08 |
| 85 98 237 | 08A | 177 | 5-H10 |
| 85 98 245 | 03A | 061 | 2-C14 |
| 85 98 245 | 08A | 173 | 5-H06 |
| 85 98 245 | 08A | 175 | 5-H08 |
| 85 98 245 | 08A | 177 | 5-H10 |
| 85 98 245 | 08A | 179 | 5-H12 |
| 85 98 245 | 08A | 181 | 5-H14 |
| 85 98 252 | 03A | 061 | 2-C14 |
| 85 98 252 | 08A | 173 | 5-H06 |
| 85 98 252 | 08A | 175 | 5-H08 |
| 85 98 252 | 08A | 177 | 5-H10 |
| 85 98 252 | 08A | 179 | 5-H12 |
| 85 98 252 | 08A | 181 | 5-H14 |
| 85 98 260 | 08A | 063 | 5-C16 |
| 85 98 260 | 08A | 065 | 5-C18 |
| 85 98 260 | 08A | 067 | 5-C20 |
| 85 98 260 | 08A | 071 | 5-C24 |
| 85 98 286 | 03A | 047 | 2-B24 |
| 85 98 526 | 03A | 069 | 2-C22 |
| 85 98 773 | 03A | 133 | 2-F14 |
| 85 98 872 | 03A | 093 | 2-D22 |
| 85 98 872 | 03A | 103 | 2-E08 |
| 85 98 872 | 03A | 113 | 2-E18 |
| 85 98 872 | 03A | 123 | 2-F04 |
| 85 99 425 | 03A | 135 | 2-F16 |
| 85 99 425 | 03A | 137 | 2-F18 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 85 99 433 | 03A | 137 | 2-F18 |
| 85 99 441 | 03A | 077 | 2-D06 |
| 85 99 458 | 03A | 067 | 2-C20 |
| 85 99 516 | 03A | 073 | 2-D02 |
| 85 99 516 | 03A | 081 | 2-D10 |
| 85 99 565 | 03A | 129 | 2-F10 |
| 85 99 565 | 08C | 039 | 7-B16 |
| 85 99 565 | 08C | 043 | 7-B20 |
| 85 99 565 | 08C | 045 | 7-B22 |
| 85 99 565 | 08C | 051 | 7-C04 |
| 86 01 916 | 08A | 075 | 5-D04 |
| 86 01 916 | 08B | 071 | 6-C24 |
| 86 01 916 | 08B | 075 | 6-D04 |
| 86 01 916 | 08B | 083 | 6-D12 |
| 86 01 916 | 08B | 085 | 6-D14 |
| 86 01 916 | 08B | 091 | 6-D20 |
| 86 01 916 | 08B | 095 | 6-D24 |
| 86 01 916 | 08B | 097 | 6-E02 |
| 86 01 916 | 08B | 103 | 6-E08 |
| 86 01 916 | 08B | 107 | 6-E12 |
| 86 01 916 | 08B | 109 | 6-E14 |
| 86 01 916 | 08B | 115 | 6-E20 |
| 86 01 916 | 08B | 119 | 6-E24 |
| 86 01 916 | 08B | 215 | 6-I24 |
| 86 02 542 | 08C | 009 | 7-A10 |
| 86 05 081 | 02 | 117 | 1-F22 |
| 86 05 081 | 08C | 021 | 7-A22 |
| 86 05 081 | 08C | 031 | 7-B08 |
| 86 05 107 | 08C | 013 | 7-A14 |
| 86 05 115 | 08C | 007 | 7-A08 |
| 86 54 766 | 08B | 143 | 6-F24 |
| 86 78 070 | 03A | 151 | 2-G08 |
| 87 00 114 | 04 | 029 | 3-I06 |
| 87 00 114 | 04 | 035 | 3-I12 |
| 87 00 114 | 04 | 041 | 3-I18 |
| 87 00 130 | 04 | 029 | 3-I06 |
| 87 00 130 | 04 | 035 | 3-I12 |
| 87 00 130 | 04 | 041 | 3-I18 |
| 87 00 205 | 04 | 027 | 3-I04 |
| 87 00 205 | 04 | 033 | 3-I10 |
| 87 00 205 | 04 | 039 | 3-I16 |
| 87 00 239 | 04 | 027 | 3-I04 |
| 87 00 239 | 04 | 033 | 3-I10 |
| 87 00 361 | 04 | 027 | 3-I04 |
| 87 00 361 | 04 | 033 | 3-I10 |
| 87 00 361 | 04 | 039 | 3-I16 |
| 87 00 429 | 04 | 027 | 3-I04 |
| 87 00 429 | 04 | 033 | 3-I10 |
| 87 00 429 | 04 | 037 | 3-I14 |
| 87 00 429 | 04 | 039 | 3-I16 |
| 87 00 478 | 04 | 027 | 3-I04 |
| 87 00 585 | 04 | 029 | 3-I06 |
| 87 00 585 | 04 | 035 | 3-I12 |
| 87 00 585 | 04 | 041 | 3-I18 |
| 87 00 619 | 04 | 029 | 3-I06 |
| 87 00 619 | 04 | 035 | 3-I12 |
| 87 00 619 | 04 | 041 | 3-I18 |
| 87 00 767 | 04 | 027 | 3-I04 |
| 87 00 767 | 04 | 033 | 3-I10 |
| 87 00 767 | 04 | 039 | 3-I16 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

# 7–F11 *Numerical register* *Nummerregister*

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 87 00 775 | 04 | 011 | 3-H12 |
| 87 01 385 | 04 | 049 | 3-J02 |
| 87 02 045 | 04 | 029 | 3-I06 |
| 87 02 045 | 04 | 035 | 3-I12 |
| 87 02 045 | 04 | 041 | 3-I18 |
| 87 02 086 | 04 | 029 | 3-I06 |
| 87 02 359 | 04 | 029 | 3-I06 |
| 87 02 359 | 04 | 033 | 3-I10 |
| 87 02 359 | 04 | 039 | 3-I16 |
| 87 02 359 | 04 | 083 | 3-K12 |
| 87 03 340 | 04 | 029 | 3-I06 |
| 87 03 340 | 04 | 033 | 3-I10 |
| 87 03 340 | 04 | 039 | 3-I16 |
| 87 03 357 | 04 | 029 | 3-I06 |
| 87 03 357 | 04 | 033 | 3-I10 |
| 87 03 357 | 04 | 039 | 3-I16 |
| 87 03 365 | 04 | 029 | 3-I06 |
| 87 03 365 | 04 | 033 | 3-I10 |
| 87 03 365 | 04 | 039 | 3-I16 |
| 87 03 530 | 04 | 029 | 3-I06 |
| 87 03 530 | 04 | 033 | 3-I10 |
| 87 03 530 | 04 | 083 | 3-K12 |
| 87 03 852 | 04 | 011 | 3-H12 |
| 87 03 993 | 04 | 083 | 3-K12 |
| 87 04 033 | 04 | 083 | 3-K12 |
| 87 04 041 | 04 | 033 | 3-I10 |
| 87 04 108 | 04 | 027 | 3-I04 |
| 87 04 116 | 04 | 005 | 3-H06 |
| 87 04 116 | 04 | 083 | 3-K12 |
| 87 04 264 | 04 | 043 | 3-I20 |
| 87 04 280 | 04 | 043 | 3-I20 |
| 87 04 280 | 04 | 047 | 3-I24 |
| 87 04 298 | 04 | 043 | 3-I20 |
| 87 04 298 | 04 | 047 | 3-I24 |
| 87 04 306 | 04 | 043 | 3-I20 |
| 87 04 306 | 04 | 047 | 3-I24 |
| 87 04 314 | 04 | 043 | 3-I20 |
| 87 04 314 | 04 | 047 | 3-I24 |
| 87 04 322 | 04 | 043 | 3-I20 |
| 87 04 322 | 04 | 047 | 3-I24 |
| 87 04 348 | 04 | 041 | 3-I18 |
| 87 04 413 | 04 | 043 | 3-I20 |
| 87 04 413 | 04 | 047 | 3-I24 |
| 87 04 421 | 04 | 043 | 3-I20 |
| 87 04 421 | 04 | 047 | 3-I24 |
| 87 04 504 | 04 | 011 | 3-H12 |
| 87 04 611 | 04 | 027 | 3-I04 |
| 87 04 777 | 04 | 027 | 3-I04 |
| 87 04 777 | 04 | 031 | 3-I08 |
| 87 04 777 | 04 | 037 | 3-I14 |
| 87 04 942 | 04 | 027 | 3-I04 |
| 87 04 942 | 04 | 033 | 3-I10 |
| 87 04 942 | 04 | 037 | 3-I14 |
| 87 04 942 | 04 | 039 | 3-I16 |
| 87 05 162 | 04 | 079 | 3-K08 |
| 87 05 170 | 04 | 065 | 3-J18 |
| 87 05 170 | 04 | 079 | 3-K08 |
| 87 05 220 | 04 | 071 | 3-J24 |
| 87 05 428 | 04 | 057 | 3-J10 |
| 87 05 436 | 04 | 063 | 3-J16 |

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 87 05 444 | 04 | 063 | 3-J16 |
| 87 05 659 | 04 | 063 | 3-J16 |
| 87 05 691 | 04 | 069 | 3-J22 |
| 87 05 725 | 04 | 063 | 3-J16 |
| 87 05 733 | 04 | 069 | 3-J22 |
| 87 05 733 | 04 | 071 | 3-J24 |
| 87 06 038 | 04 | 071 | 3-J24 |
| 87 06 046 | 04 | 071 | 3-J24 |
| 87 06 061 | 04 | 071 | 3-J24 |
| 87 06 103 | 04 | 071 | 3-J24 |
| 87 06 111 | 04 | 059 | 3-J12 |
| 87 06 129 | 04 | 059 | 3-J12 |
| 87 06 129 | 04 | 063 | 3-J16 |
| 87 06 129 | 04 | 079 | 3-K08 |
| 87 06 152 | 04 | 061 | 3-J14 |
| 87 06 160 | 04 | 061 | 3-J14 |
| 87 06 210 | 04 | 073 | 3-K02 |
| 87 06 327 | 04 | 063 | 3-J16 |
| 87 06 335 | 04 | 063 | 3-J16 |
| 87 06 343 | 04 | 063 | 3-J16 |
| 87 06 368 | 04 | 063 | 3-J16 |
| 87 06 491 | 04 | 063 | 3-J16 |
| 87 06 582 | 04 | 063 | 3-J16 |
| 87 06 616 | 04 | 063 | 3-J16 |
| 87 06 616 | 04 | 079 | 3-K08 |
| 87 06 624 | 04 | 079 | 3-K08 |
| 87 06 632 | 04 | 079 | 3-K08 |
| 87 06 665 | 04 | 063 | 3-J16 |
| 87 06 673 | 04 | 063 | 3-J16 |
| 87 06 681 | 04 | 063 | 3-J16 |
| 87 06 707 | 04 | 063 | 3-J16 |
| 87 06 848 | 04 | 065 | 3-J18 |
| 87 06 855 | 04 | 065 | 3-J18 |
| 87 07 051 | 04 | 065 | 3-J18 |
| 87 07 234 | 04 | 065 | 3-J18 |
| 87 07 275 | 04 | 065 | 3-J18 |
| 87 07 457 | 04 | 065 | 3-J18 |
| 87 07 721 | 04 | 069 | 3-J22 |
| 87 07 747 | 04 | 069 | 3-J22 |
| 87 07 754 | 04 | 069 | 3-J22 |
| 87 07 788 | 04 | 069 | 3-J22 |
| 87 07 887 | 04 | 069 | 3-J22 |
| 87 07 929 | 04 | 069 | 3-J22 |
| 87 07 952 | 04 | 069 | 3-J22 |
| 87 08 026 | 04 | 069 | 3-J22 |
| 87 08 380 | 04 | 057 | 3-J10 |
| 87 08 398 | 04 | 057 | 3-J10 |
| 87 08 398 | 04 | 077 | 3-K06 |
| 87 08 414 | 04 | 069 | 3-J22 |
| 87 08 695 | 04 | 069 | 3-J22 |
| 87 08 703 | 04 | 065 | 3-J18 |
| 87 08 760 | 04 | 071 | 3-J24 |
| 87 08 778 | 04 | 057 | 3-J10 |
| 87 08 786 | 04 | 063 | 3-J16 |
| 87 08 836 | 04 | 043 | 3-I20 |
| 87 08 836 | 04 | 047 | 3-I24 |
| 87 08 851 | 04 | 065 | 3-J18 |
| 87 09 164 | 04 | 071 | 3-J24 |
| 87 09 305 | 04 | 073 | 3-K02 |
| 87 09 347 | 04 | 065 | 3-J18 |

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 87 09 446 | 04 | 063 | 3-J16 |
| 87 09 479 | 04 | 069 | 3-J22 |
| 87 09 610 | 04 | 059 | 3-J12 |
| 87 10 303 | 04 | 011 | 3-H12 |
| 87 10 303 | 04 | 017 | 3-H18 |
| 87 10 360 | 04 | 043 | 3-I20 |
| 87 10 360 | 04 | 047 | 3-I24 |
| 87 10 410 | 04 | 033 | 3-I10 |
| 87 10 857 | 04 | 059 | 3-J12 |
| 87 10 865 | 04 | 027 | 3-I04 |
| 87 10 865 | 04 | 031 | 3-I08 |
| 87 10 865 | 04 | 037 | 3-I14 |
| 87 10 881 | 04 | 027 | 3-I04 |
| 87 10 881 | 04 | 031 | 3-I08 |
| 87 10 881 | 04 | 037 | 3-I14 |
| 87 10 881 | 04 | 085 | 3-K14 |
| 87 10 956 | 04 | 011 | 3-H12 |
| 87 10 956 | 04 | 017 | 3-H18 |
| 87 11 038 | 04 | 027 | 3-I04 |
| 87 11 038 | 04 | 031 | 3-I08 |
| 87 11 038 | 04 | 037 | 3-I14 |
| 87 11 053 | 04 | 025 | 3-I02 |
| 87 11 103 | 04 | 027 | 3-I04 |
| 87 11 103 | 04 | 033 | 3-I10 |
| 87 11 103 | 04 | 039 | 3-I16 |
| 87 11 160 | 04 | 043 | 3-I20 |
| 87 11 160 | 04 | 047 | 3-I24 |
| 87 11 327 | 04 | 029 | 3-I06 |
| 87 11 327 | 04 | 079 | 3-K08 |
| 87 11 343 | 04 | 031 | 3-I08 |
| 87 11 343 | 04 | 037 | 3-I14 |
| 87 11 350 | 04 | 027 | 3-I04 |
| 87 11 350 | 04 | 031 | 3-I08 |
| 87 11 350 | 04 | 037 | 3-I14 |
| 87 11 376 | 04 | 027 | 3-I04 |
| 87 11 376 | 04 | 031 | 3-I08 |
| 87 11 376 | 04 | 037 | 3-I14 |
| 87 11 384 | 04 | 027 | 3-I04 |
| 87 11 400 | 04 | 027 | 3-I04 |
| 87 11 509 | 04 | 079 | 3-K08 |
| 87 11 582 | 04 | 027 | 3-I04 |
| 87 11 582 | 04 | 031 | 3-I08 |
| 87 11 590 | 04 | 027 | 3-I04 |
| 87 11 590 | 04 | 031 | 3-I08 |
| 87 11 590 | 04 | 037 | 3-I14 |
| 87 11 608 | 04 | 015 | 3-H16 |
| 87 11 608 | 04 | 021 | 3-H22 |
| 87 11 707 | 04 | 043 | 3-I20 |
| 87 11 707 | 04 | 047 | 3-I24 |
| 87 11 707 | 04 | 085 | 3-K14 |
| 87 11 723 | 04 | 043 | 3-I20 |
| 87 11 723 | 04 | 047 | 3-I24 |
| 87 11 806 | 04 | 077 | 3-K06 |
| 87 11 871 | 04 | 013 | 3-H14 |
| 87 11 871 | 04 | 019 | 3-H20 |
| 87 11 871 | 04 | 059 | 3-J12 |
| 87 11 947 | 04 | 027 | 3-I04 |
| 87 11 954 | 04 | 027 | 3-I04 |
| 87 12 036 | 04 | 005 | 3-H06 |
| 87 12 150 | 04 | 027 | 3-I04 |

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 87 12 150 | 04 | 033 | 3-I10 |
| 87 12 150 | 04 | 039 | 3-I16 |
| 87 12 184 | 04 | 015 | 3-H16 |
| 87 12 192 | 04 | 013 | 3-H14 |
| 87 12 192 | 04 | 021 | 3-H22 |
| 87 12 200 | 04 | 013 | 3-H14 |
| 87 12 283 | 04 | 027 | 3-I04 |
| 87 12 325 | 04 | 029 | 3-I06 |
| 87 12 325 | 04 | 079 | 3-K08 |
| 87 12 580 | 04 | 031 | 3-I08 |
| 87 12 580 | 04 | 039 | 3-I16 |
| 87 12 598 | 04 | 031 | 3-I08 |
| 87 12 598 | 04 | 039 | 3-I16 |
| 87 12 606 | 04 | 031 | 3-I08 |
| 87 12 606 | 04 | 039 | 3-I16 |
| 87 12 630 | 04 | 079 | 3-K08 |
| 87 12 630 | 04 | 081 | 3-K10 |
| 87 12 655 | 04 | 035 | 3-I12 |
| 87 12 655 | 04 | 041 | 3-I18 |
| 87 12 762 | 04 | 031 | 3-I08 |
| 87 12 762 | 04 | 037 | 3-I14 |
| 87 12 770 | 04 | 031 | 3-I08 |
| 87 12 770 | 04 | 037 | 3-I14 |
| 87 12 838 | 04 | 031 | 3-I08 |
| 87 12 838 | 04 | 037 | 3-I14 |
| 87 12 853 | 04 | 035 | 3-I12 |
| 87 12 853 | 04 | 041 | 3-I18 |
| 87 12 887 | 04 | 035 | 3-I12 |
| 87 12 887 | 04 | 079 | 3-K08 |
| 87 12 887 | 04 | 081 | 3-K10 |
| 87 12 903 | 04 | 011 | 3-H12 |
| 87 12 903 | 04 | 017 | 3-H18 |
| 87 12 929 | 04 | 035 | 3-I12 |
| 87 12 929 | 04 | 041 | 3-I18 |
| 87 12 945 | 04 | 021 | 3-H22 |
| 87 12 952 | 04 | 013 | 3-H14 |
| 87 12 952 | 04 | 021 | 3-H22 |
| 87 12 986 | 04 | 017 | 3-H18 |
| 87 12 994 | 04 | 031 | 3-I08 |
| 87 12 994 | 04 | 039 | 3-I16 |
| 87 13 000 | 04 | 035 | 3-I12 |
| 87 13 000 | 04 | 041 | 3-I18 |
| 87 13 026 | 04 | 031 | 3-I08 |
| 87 13 026 | 04 | 037 | 3-I14 |
| 87 13 034 | 04 | 043 | 3-I20 |
| 87 13 034 | 04 | 047 | 3-I24 |
| 87 13 091 | 04 | 029 | 3-I06 |
| 87 13 091 | 04 | 035 | 3-I12 |
| 87 13 091 | 04 | 041 | 3-I18 |
| 87 13 158 | 04 | 027 | 3-I04 |
| 87 13 158 | 04 | 031 | 3-I08 |
| 87 13 158 | 04 | 037 | 3-I14 |
| 87 13 166 | 04 | 021 | 3-H22 |
| 87 13 190 | 04 | 031 | 3-I08 |
| 87 13 190 | 04 | 037 | 3-I14 |
| 87 13 208 | 04 | 031 | 3-I08 |
| 87 13 208 | 04 | 037 | 3-I14 |
| 87 13 216 | 04 | 011 | 3-H12 |
| 87 13 216 | 04 | 017 | 3-H18 |
| 87 13 216 | 04 | 085 | 3-K14 |



# 7–F12 *Numerical register* *Nummerregister*

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 87 13 224 | 04 | 027 | 3-I04 |
| 87 13 406 | 04 | 031 | 3-I08 |
| 87 13 406 | 04 | 037 | 3-I14 |
| 87 13 448 | 04 | 031 | 3-I08 |
| 87 13 448 | 04 | 039 | 3-I16 |
| 87 13 455 | 04 | 031 | 3-I08 |
| 87 13 455 | 04 | 039 | 3-I16 |
| 87 13 463 | 04 | 043 | 3-I20 |
| 87 13 463 | 04 | 047 | 3-I24 |
| 87 13 497 | 04 | 027 | 3-I04 |
| 87 13 497 | 04 | 031 | 3-I08 |
| 87 13 497 | 04 | 037 | 3-I14 |
| 87 13 513 | 04 | 027 | 3-I04 |
| 87 13 513 | 04 | 031 | 3-I08 |
| 87 13 513 | 04 | 037 | 3-I14 |
| 87 13 521 | 04 | 027 | 3-I04 |
| 87 13 521 | 04 | 031 | 3-I08 |
| 87 13 521 | 04 | 037 | 3-I14 |
| 87 13 539 | 04 | 027 | 3-I04 |
| 87 13 539 | 04 | 031 | 3-I08 |
| 87 13 539 | 04 | 037 | 3-I14 |
| 87 13 554 | 04 | 027 | 3-I04 |
| 87 13 554 | 04 | 031 | 3-I08 |
| 87 13 554 | 04 | 037 | 3-I14 |
| 87 13 570 | 04 | 027 | 3-I04 |
| 87 13 570 | 04 | 031 | 3-I08 |
| 87 13 570 | 04 | 037 | 3-I14 |
| 87 13 588 | 04 | 031 | 3-I08 |
| 87 13 588 | 04 | 037 | 3-I14 |
| 87 13 596 | 04 | 033 | 3-I10 |
| 87 13 596 | 04 | 037 | 3-I14 |
| 87 13 604 | 04 | 017 | 3-H18 |
| 87 13 612 | 04 | 017 | 3-H18 |
| 87 13 638 | 04 | 035 | 3-I12 |
| 87 13 638 | 04 | 041 | 3-I18 |
| 87 14 420 | 04 | 025 | 3-I02 |
| 87 14 503 | 04 | 031 | 3-I08 |
| 87 14 677 | 04 | 027 | 3-I04 |
| 87 14 693 | 04 | 035 | 3-I12 |
| 87 14 693 | 04 | 041 | 3-I18 |
| 87 14 792 | 04 | 029 | 3-I06 |
| 87 14 842 | 04 | 059 | 3-J12 |
| 87 14 925 | 04 | 029 | 3-I06 |
| 87 14 925 | 04 | 033 | 3-I10 |
| 87 14 933 | 04 | 027 | 3-I04 |
| 87 14 933 | 04 | 033 | 3-I10 |
| 87 14 974 | 04 | 029 | 3-I06 |
| 87 14 974 | 04 | 035 | 3-I12 |
| 87 15 005 | 04 | 031 | 3-I08 |
| 87 15 005 | 04 | 039 | 3-I16 |
| 87 15 054 | 04 | 029 | 3-I06 |
| 87 15 062 | 04 | 035 | 3-I12 |
| 87 15 062 | 04 | 041 | 3-I18 |
| 87 15 120 | 04 | 027 | 3-I04 |
| 87 15 120 | 04 | 033 | 3-I10 |
| 87 15 120 | 04 | 039 | 3-I16 |
| 87 15 229 | 04 | 029 | 3-I06 |
| 87 15 229 | 04 | 035 | 3-I12 |
| 87 15 229 | 04 | 041 | 3-I18 |
| 87 15 260 | 04 | 005 | 3-H06 |

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 87 15 260 | 04 | 083 | 3-K12 |
| 87 15 351 | 04 | 017 | 3-H18 |
| 87 15 377 | 04 | 013 | 3-H14 |
| 87 15 377 | 04 | 019 | 3-H20 |
| 87 15 393 | 04 | 013 | 3-H14 |
| 87 15 393 | 04 | 019 | 3-H20 |
| 87 15 765 | 04 | 035 | 3-I12 |
| 87 15 799 | 04 | 029 | 3-I06 |
| 87 15 815 | 04 | 065 | 3-J18 |
| 87 15 831 | 04 | 031 | 3-I08 |
| 87 15 831 | 04 | 037 | 3-I14 |
| 87 15 872 | 04 | 027 | 3-I04 |
| 87 17 407 | 04 | 013 | 3-H14 |
| 87 17 407 | 04 | 019 | 3-H20 |
| 87 17 407 | 04 | 059 | 3-J12 |
| 87 17 415 | 04 | 013 | 3-H14 |
| 87 17 415 | 04 | 019 | 3-H20 |
| 87 17 415 | 04 | 059 | 3-J12 |
| 87 17 415 | 04 | 085 | 3-K14 |
| 87 18 140 | 04 | 043 | 3-I20 |
| 87 18 140 | 04 | 047 | 3-I24 |
| 87 18 371 | 04 | 033 | 3-I10 |
| 87 18 371 | 04 | 039 | 3-I16 |
| 87 18 389 | 04 | 031 | 3-I08 |
| 87 18 389 | 04 | 037 | 3-I14 |
| 87 18 439 | 02 | 197 | 1-J06 |
| 87 18 439 | 04 | 013 | 3-H14 |
| 87 18 439 | 04 | 019 | 3-H20 |
| 87 18 439 | 04 | 059 | 3-J12 |
| 87 18 439 | 04 | 085 | 3-K14 |
| 87 18 629 | 04 | 035 | 3-I12 |
| 87 18 637 | 04 | 035 | 3-I12 |
| 87 18 645 | 04 | 035 | 3-I12 |
| 87 18 645 | 04 | 079 | 3-K08 |
| 87 18 660 | 04 | 029 | 3-I06 |
| 87 18 660 | 04 | 035 | 3-I12 |
| 87 18 678 | 04 | 029 | 3-I06 |
| 87 18 785 | 04 | 013 | 3-H14 |
| 87 18 785 | 04 | 021 | 3-H22 |
| 87 18 843 | 04 | 029 | 3-I06 |
| 87 18 843 | 04 | 035 | 3-I12 |
| 87 18 843 | 04 | 041 | 3-I18 |
| 87 18 942 | 04 | 029 | 3-I06 |
| 87 18 942 | 04 | 035 | 3-I12 |
| 87 19 320 | 04 | 031 | 3-I08 |
| 87 19 320 | 04 | 037 | 3-I14 |
| 87 19 494 | 04 | 017 | 3-H18 |
| 87 19 510 | 04 | 009 | 3-H10 |
| 87 19 775 | 04 | 013 | 3-H14 |
| 87 19 775 | 04 | 021 | 3-H22 |
| 87 19 858 | 04 | 043 | 3-I20 |
| 87 19 858 | 04 | 047 | 3-I24 |
| 87 19 866 | 04 | 043 | 3-I20 |
| 87 19 866 | 04 | 047 | 3-I24 |
| 87 19 874 | 04 | 043 | 3-I20 |
| 87 19 874 | 04 | 047 | 3-I24 |
| 87 19 882 | 04 | 043 | 3-I20 |
| 87 19 882 | 04 | 047 | 3-I24 |
| 87 19 890 | 04 | 043 | 3-I20 |
| 87 19 890 | 04 | 047 | 3-I24 |

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 87 19 916 | 04 | 027 | 3-I04 |
| 87 19 916 | 04 | 033 | 3-I10 |
| 87 19 916 | 04 | 039 | 3-I16 |
| 87 19 924 | 04 | 027 | 3-I04 |
| 87 19 924 | 04 | 033 | 3-I10 |
| 87 19 924 | 04 | 037 | 3-I14 |
| 87 19 924 | 04 | 039 | 3-I16 |
| 87 19 940 | 04 | 043 | 3-I20 |
| 87 19 940 | 04 | 047 | 3-I24 |
| 87 20 245 | 04 | 005 | 3-H06 |
| 87 20 419 | 04 | 027 | 3-I04 |
| 87 20 419 | 04 | 033 | 3-I10 |
| 87 20 419 | 04 | 039 | 3-I16 |
| 87 20 468 | 04 | 027 | 3-I04 |
| 87 20 468 | 04 | 033 | 3-I10 |
| 87 20 476 | 04 | 027 | 3-I04 |
| 87 20 476 | 04 | 033 | 3-I10 |
| 87 20 484 | 04 | 027 | 3-I04 |
| 87 20 484 | 04 | 033 | 3-I10 |
| 87 20 732 | 04 | 029 | 3-I06 |
| 87 20 732 | 04 | 035 | 3-I12 |
| 87 20 963 | 04 | 009 | 3-H10 |
| 87 20 963 | 04 | 027 | 3-I04 |
| 87 21 177 | 04 | 017 | 3-H18 |
| 87 21 185 | 04 | 011 | 3-H12 |
| 87 21 201 | 04 | 011 | 3-H12 |
| 87 21 201 | 04 | 017 | 3-H18 |
| 87 21 219 | 04 | 031 | 3-I08 |
| 87 21 235 | 04 | 011 | 3-H12 |
| 87 21 235 | 04 | 017 | 3-H18 |
| 87 21 300 | 04 | 013 | 3-H14 |
| 87 21 300 | 04 | 019 | 3-H20 |
| 87 21 318 | 04 | 035 | 3-I12 |
| 87 21 318 | 04 | 041 | 3-I18 |
| 87 21 326 | 04 | 029 | 3-I06 |
| 87 21 334 | 04 | 017 | 3-H18 |
| 87 21 821 | 04 | 017 | 3-H18 |
| 87 21 839 | 04 | 031 | 3-I08 |
| 87 21 839 | 04 | 039 | 3-I16 |
| 87 21 995 | 04 | 025 | 3-I02 |
| 87 21 995 | 04 | 085 | 3-K14 |
| 87 22 035 | 04 | 059 | 3-J12 |
| 87 22 100 | 04 | 025 | 3-I02 |
| 87 22 118 | 04 | 077 | 3-K06 |
| 87 22 126 | 04 | 077 | 3-K06 |
| 87 22 209 | 04 | 025 | 3-I02 |
| 87 22 209 | 04 | 085 | 3-K14 |
| 87 22 266 | 04 | 029 | 3-I06 |
| 87 22 266 | 04 | 033 | 3-I10 |
| 87 22 324 | 04 | 005 | 3-H06 |
| 87 22 324 | 04 | 083 | 3-K12 |
| 87 22 324 | 04 | 085 | 3-K14 |
| 87 22 472 | 04 | 043 | 3-I20 |
| 87 22 472 | 04 | 047 | 3-I24 |
| 87 22 555 | 04 | 027 | 3-I04 |
| 87 22 555 | 04 | 031 | 3-I08 |
| 87 22 555 | 04 | 037 | 3-I14 |
| 87 22 555 | 04 | 039 | 3-I16 |
| 87 22 712 | 04 | 017 | 3-H18 |
| 87 22 720 | 04 | 021 | 3-H22 |

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 87 22 795 | 04 | 017 | 3-H18 |
| 87 22 803 | 04 | 021 | 3-H22 |
| 87 22 829 | 04 | 021 | 3-H22 |
| 87 22 837 | 04 | 021 | 3-H22 |
| 87 22 993 | 04 | 009 | 3-H10 |
| 87 23 033 | 04 | 009 | 3-H10 |
| 87 23 074 | 04 | 009 | 3-H10 |
| 87 23 090 | 04 | 009 | 3-H10 |
| 87 23 165 | 04 | 043 | 3-I20 |
| 87 23 165 | 04 | 047 | 3-I24 |
| 87 23 173 | 04 | 043 | 3-I20 |
| 87 23 173 | 04 | 047 | 3-I24 |
| 87 23 231 | 04 | 033 | 3-I10 |
| 87 23 249 | 04 | 033 | 3-I10 |
| 87 23 256 | 04 | 031 | 3-I08 |
| 87 23 272 | 04 | 031 | 3-I08 |
| 87 23 280 | 04 | 031 | 3-I08 |
| 87 23 298 | 04 | 031 | 3-I08 |
| 87 23 306 | 04 | 031 | 3-I08 |
| 87 23 405 | 04 | 017 | 3-H18 |
| 87 23 470 | 04 | 013 | 3-H14 |
| 87 23 470 | 04 | 021 | 3-H22 |
| 87 23 603 | 04 | 009 | 3-H10 |
| 87 23 611 | 04 | 009 | 3-H10 |
| 87 23 793 | 04 | 009 | 3-H10 |
| 87 23 793 | 04 | 027 | 3-I04 |
| 87 23 900 | 04 | 043 | 3-I20 |
| 87 23 900 | 04 | 047 | 3-I24 |
| 87 23 967 | 04 | 013 | 3-H14 |
| 87 23 967 | 04 | 019 | 3-H20 |
| 87 24 569 | 04 | 029 | 3-I06 |
| 87 24 569 | 04 | 033 | 3-I10 |
| 87 24 577 | 04 | 029 | 3-I06 |
| 87 24 577 | 04 | 033 | 3-I10 |
| 87 24 585 | 04 | 029 | 3-I06 |
| 87 24 585 | 04 | 033 | 3-I10 |
| 87 24 593 | 04 | 029 | 3-I06 |
| 87 24 593 | 04 | 033 | 3-I10 |
| 87 24 841 | 04 | 005 | 3-H06 |
| 87 24 866 | 04 | 043 | 3-I20 |
| 87 24 866 | 04 | 047 | 3-I24 |
| 87 24 874 | 04 | 043 | 3-I20 |
| 87 24 874 | 04 | 047 | 3-I24 |
| 87 24 874 | 04 | 085 | 3-K14 |
| 87 25 012 | 04 | 011 | 3-H12 |
| 87 25 012 | 04 | 017 | 3-H18 |
| 87 25 012 | 04 | 085 | 3-K14 |
| 87 25 020 | 04 | 017 | 3-H18 |
| 87 25 020 | 04 | 085 | 3-K14 |
| 87 25 038 | 04 | 013 | 3-H14 |
| 87 25 038 | 04 | 021 | 3-H22 |
| 87 25 046 | 04 | 059 | 3-J12 |
| 87 25 053 | 04 | 013 | 3-H14 |
| 87 25 053 | 04 | 019 | 3-H20 |
| 87 25 137 | 04 | 041 | 3-I18 |
| 87 25 194 | 04 | 029 | 3-I06 |
| 87 25 194 | 04 | 033 | 3-I10 |
| 87 25 194 | 04 | 041 | 3-I18 |
| 87 25 400 | 04 | 005 | 3-H06 |
| 87 25 517 | 04 | 005 | 3-H06 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

# 7-F13 Numerical register — Nummerregister

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 87 25 517 | 04 | 083 | 3-K12 |
| 87 25 517 | 04 | 085 | 3-K14 |
| 87 25 582 | 04 | 009 | 3-H10 |
| 87 25 616 | 04 | 031 | 3-I08 |
| 87 26 010 | 04 | 037 | 3-I14 |
| 87 26 028 | 04 | 037 | 3-I14 |
| 87 26 051 | 04 | 039 | 3-I16 |
| 87 26 069 | 04 | 041 | 3-I18 |
| 87 26 077 | 04 | 039 | 3-I16 |
| 87 26 085 | 04 | 039 | 3-I16 |
| 87 26 093 | 04 | 039 | 3-I16 |
| 87 26 143 | 04 | 039 | 3-I16 |
| 87 26 150 | 04 | 037 | 3-I14 |
| 87 26 168 | 04 | 039 | 3-I16 |
| 87 26 184 | 04 | 037 | 3-I14 |
| 87 26 192 | 04 | 037 | 3-I14 |
| 87 26 200 | 04 | 037 | 3-I14 |
| 87 26 218 | 04 | 037 | 3-I14 |
| 87 26 259 | 04 | 039 | 3-I16 |
| 87 26 267 | 04 | 039 | 3-I16 |
| 87 26 275 | 04 | 039 | 3-I16 |
| 87 26 283 | 04 | 039 | 3-I16 |
| 87 26 309 | 04 | 019 | 3-H20 |
| 87 26 317 | 04 | 039 | 3-I16 |
| 87 26 325 | 04 | 037 | 3-I14 |
| 87 26 333 | 04 | 039 | 3-I16 |
| 87 26 341 | 04 | 039 | 3-I16 |
| 87 26 374 | 04 | 017 | 3-H18 |
| 87 26 390 | 04 | 009 | 3-H10 |
| 87 26 432 | 04 | 009 | 3-H10 |
| 87 26 465 | 04 | 009 | 3-H10 |
| 87 26 507 | 04 | 009 | 3-H10 |
| 87 26 523 | 04 | 037 | 3-I14 |
| 87 26 531 | 04 | 039 | 3-I16 |
| 87 26 549 | 04 | 039 | 3-I16 |
| 87 26 556 | 04 | 039 | 3-I16 |
| 87 26 564 | 04 | 039 | 3-I16 |
| 87 26 572 | 04 | 039 | 3-I16 |
| 87 26 580 | 04 | 037 | 3-I14 |
| 87 26 598 | 04 | 037 | 3-I14 |
| 87 26 721 | 04 | 039 | 3-I16 |
| 87 26 739 | 04 | 039 | 3-I16 |
| 87 26 770 | 04 | 023 | 3-H24 |
| 87 26 887 | 04 | 041 | 3-I18 |
| 87 26 895 | 04 | 017 | 3-H18 |
| 87 27 018 | 04 | 065 | 3-J18 |
| 87 27 422 | 04 | 039 | 3-I16 |
| 87 27 505 | 04 | 039 | 3-I16 |
| 87 27 711 | 04 | 021 | 3-H22 |
| 87 27 729 | 04 | 021 | 3-H22 |
| 87 27 737 | 04 | 023 | 3-H24 |
| 87 28 123 | 04 | 005 | 3-H06 |
| 87 28 123 | 04 | 083 | 3-K12 |
| 87 28 123 | 04 | 085 | 3-K14 |
| 87 28 149 | 04 | 023 | 3-H24 |
| 87 28 156 | 04 | 043 | 3-I20 |
| 87 28 156 | 04 | 047 | 3-I24 |
| 87 28 156 | 04 | 085 | 3-K14 |
| 87 28 198 | 04 | 041 | 3-I18 |
| 87 28 198 | 04 | 043 | 3-I20 |
| 87 28 396 | 04 | 023 | 3-H24 |
| 87 28 586 | 04 | 037 | 3-I14 |
| 87 28 594 | 04 | 037 | 3-I14 |
| 87 28 602 | 04 | 037 | 3-I14 |
| 87 28 651 | 04 | 085 | 3-K14 |
| 87 28 677 | 04 | 085 | 3-K14 |
| 87 29 063 | 04 | 083 | 3-K12 |
| 87 29 071 | 04 | 083 | 3-K12 |
| 87 31 804 | 04 | 085 | 3-K14 |
| 87 80 454 | 04 | 029 | 3-I06 |
| 87 80 454 | 04 | 035 | 3-I12 |
| 87 80 454 | 04 | 083 | 3-K12 |
| 87 81 072 | 04 | 025 | 3-I02 |
| 87 81 072 | 04 | 077 | 3-K06 |
| 87 81 155 | 04 | 027 | 3-I04 |
| 87 81 155 | 04 | 033 | 3-I10 |
| 87 81 155 | 04 | 083 | 3-K12 |
| 87 81 239 | 04 | 005 | 3-H06 |
| 87 81 239 | 04 | 083 | 3-K12 |
| 87 81 346 | 04 | 005 | 3-H06 |
| 87 81 346 | 04 | 085 | 3-K14 |
| 87 87 228 | 02 | 035 | 1-C12 |
| 87 87 780 | 02 | 115 | 1-F20 |
| 87 88 150 | 02 | 025 | 1-C02 |
| 87 88 218 | 02 | 023 | 1-B24 |
| 87 88 226 | 02 | 023 | 1-B24 |
| 87 88 234 | 02 | 023 | 1-B24 |
| 87 88 242 | 02 | 023 | 1-B24 |
| 87 88 259 | 02 | 023 | 1-B24 |
| 88 00 914 | 02 | 019 | 1-B20 |
| 88 00 914 | 02 | 175 | 1-I08 |
| 88 02 175 | 06 | 005 | 4-C06 |
| 88 16 415 | 08A | 151 | 5-G08 |
| 88 17 250 | 02 | 057 | 1-D10 |
| 88 17 256 | 02 | 059 | 1-D12 |
| 88 17 256 | 02 | 065 | 1-D18 |
| 88 17 256 | 02 | 067 | 1-D20 |
| 88 17 256 | 02 | 073 | 1-E02 |
| 88 17 256 | 02 | 191 | 1-I24 |
| 88 17 264 | 02 | 181 | 1-I14 |
| 88 17 264 | 02 | 189 | 1-I22 |
| 88 17 280 | 02 | 121 | 1-G02 |
| 88 17 280 | 02 | 199 | 1-J08 |
| 88 17 298 | 02 | 177 | 1-I10 |
| 88 17 298 | 02 | 195 | 1-J04 |
| 88 17 314 | 03A | 017 | 2-A18 |
| 88 17 314 | 03A | 147 | 2-G04 |
| 88 17 348 | 02 | 037 | 1-C14 |
| 88 17 348 | 02 | 197 | 1-J06 |
| 88 17 405 | 02 | 027 | 1-C04 |
| 88 17 405 | 02 | 199 | 1-J08 |
| 88 17 447 | 04 | 081 | 3-K10 |
| 88 17 512 | 02 | 019 | 1-B20 |
| 88 17 512 | 02 | 187 | 1-I20 |
| 88 17 512 | 02 | 189 | 1-I22 |
| 88 17 520 | 03A | 147 | 2-G04 |
| 88 17 538 | 02 | 177 | 1-I10 |
| 88 17 538 | 02 | 195 | 1-J04 |
| 88 17 553 | 02 | 079 | 1-E08 |
| 88 17 561 | 02 | 037 | 1-C14 |
| 88 17 561 | 02 | 197 | 1-J06 |
| 88 17 678 | 02 | 037 | 1-C14 |
| 88 17 678 | 02 | 197 | 1-J06 |
| 88 17 686 | 02 | 037 | 1-C14 |
| 88 17 686 | 02 | 197 | 1-J06 |
| 88 17 728 | 02 | 015 | 1-B16 |
| 88 17 728 | 02 | 193 | 1-J02 |
| 88 17 835 | 02 | 197 | 1-J06 |
| 88 17 850 | 02 | 143 | 1-G24 |
| 88 17 850 | 02 | 197 | 1-J06 |
| 88 17 850 | 02 | 205 | 1-J14 |
| 88 17 884 | 08A | 165 | 5-G22 |
| 88 17 884 | 08A | 167 | 5-G24 |
| 88 17 884 | 08A | 169 | 5-H02 |
| 88 17 892 | 08A | 167 | 5-G24 |
| 88 17 892 | 08A | 169 | 5-H02 |
| 88 17 900 | 02 | 173 | 1-I06 |
| 88 17 900 | 02 | 195 | 1-J04 |
| 88 18 007 | 02 | 019 | 1-B20 |
| 88 18 007 | 02 | 187 | 1-I20 |
| 88 18 080 | 04 | 005 | 3-H06 |
| 88 18 080 | 04 | 083 | 3-K12 |
| 88 18 098 | 04 | 005 | 3-H06 |
| 88 18 098 | 04 | 083 | 3-K12 |
| 88 18 114 | 04 | 005 | 3-H06 |
| 88 18 114 | 04 | 083 | 3-K12 |
| 88 18 148 | 04 | 005 | 3-H06 |
| 88 18 148 | 04 | 085 | 3-K14 |
| 88 18 197 | 02 | 197 | 1-J06 |
| 88 18 254 | 02 | 019 | 1-B20 |
| 88 18 254 | 02 | 189 | 1-I22 |
| 88 18 528 | 02 | 037 | 1-C14 |
| 88 18 528 | 02 | 199 | 1-J08 |
| 88 18 544 | 02 | 197 | 1-J06 |
| 88 18 569 | 02 | 181 | 1-I14 |
| 88 18 569 | 02 | 183 | 1-I16 |
| 88 18 569 | 02 | 193 | 1-J02 |
| 88 18 577 | 02 | 137 | 1-G18 |
| 88 18 577 | 02 | 141 | 1-G22 |
| 88 18 577 | 02 | 143 | 1-G24 |
| 88 18 577 | 02 | 145 | 1-H02 |
| 88 18 577 | 02 | 147 | 1-H04 |
| 88 18 577 | 02 | 199 | 1-J08 |
| 88 18 767 | 02 | 043 | 1-C20 |
| 88 18 767 | 02 | 191 | 1-I24 |
| 88 19 112 | 02 | 121 | 1-G02 |
| 88 19 112 | 02 | 123 | 1-G04 |
| 88 19 112 | 02 | 201 | 1-J10 |
| 88 19 120 | 02 | 121 | 1-G02 |
| 88 19 120 | 02 | 123 | 1-G04 |
| 88 19 120 | 02 | 201 | 1-J10 |
| 88 19 146 | 02 | 121 | 1-G02 |
| 88 19 146 | 02 | 123 | 1-G04 |
| 88 19 146 | 02 | 201 | 1-J10 |
| 88 19 203 | 02 | 151 | 1-H08 |
| 88 19 203 | 02 | 201 | 1-J10 |
| 88 19 229 | 02 | 141 | 1-G22 |
| 88 19 229 | 02 | 203 | 1-J12 |
| 88 19 237 | 02 | 141 | 1-G22 |
| 88 19 237 | 02 | 205 | 1-J14 |
| 88 19 278 | 03A | 017 | 2-A18 |
| 88 19 278 | 03A | 151 | 2-G08 |
| 88 19 294 | 03A | 015 | 2-A16 |
| 88 19 302 | 03A | 015 | 2-A16 |
| 88 19 310 | 03A | 015 | 2-A16 |
| 88 19 328 | 02 | 197 | 1-J06 |
| 88 19 328 | 03A | 015 | 2-A16 |
| 88 19 690 | 02 | 137 | 1-G18 |
| 88 19 690 | 02 | 141 | 1-G22 |
| 88 19 690 | 02 | 145 | 1-H02 |
| 88 19 690 | 02 | 147 | 1-H04 |
| 88 19 690 | 02 | 201 | 1-J10 |
| 88 19 708 | 02 | 149 | 1-H06 |
| 88 19 708 | 02 | 151 | 1-H08 |
| 88 19 708 | 02 | 201 | 1-J10 |
| 88 19 823 | 02 | 019 | 1-B20 |
| 88 19 823 | 02 | 189 | 1-I22 |
| 88 19 831 | 02 | 019 | 1-B20 |
| 88 19 831 | 02 | 189 | 1-I22 |
| 88 19 849 | 02 | 175 | 1-I08 |
| 88 19 864 | 02 | 197 | 1-J06 |
| 88 19 930 | 02 | 143 | 1-G24 |
| 88 19 930 | 02 | 205 | 1-J14 |
| 88 20 029 | 08C | 027 | 7-B04 |
| 88 20 029 | 08C | 033 | 7-B10 |
| 88 20 045 | 08C | 027 | 7-B04 |
| 88 20 045 | 08C | 053 | 7-C06 |
| 88 20 052 | 08C | 027 | 7-B04 |
| 88 20 052 | 08C | 053 | 7-C06 |
| 88 20 128 | 08C | 027 | 7-B04 |
| 88 20 128 | 08C | 033 | 7-B10 |
| 88 20 151 | 08C | 029 | 7-B06 |
| 88 20 151 | 08C | 033 | 7-B10 |
| 88 20 169 | 08C | 029 | 7-B06 |
| 88 20 169 | 08C | 033 | 7-B10 |
| 88 20 177 | 08C | 029 | 7-B06 |
| 88 20 177 | 08C | 033 | 7-B10 |
| 88 20 185 | 08C | 029 | 7-B06 |
| 88 20 185 | 08C | 033 | 7-B10 |
| 88 20 193 | 08C | 029 | 7-B06 |
| 88 20 193 | 08C | 033 | 7-B10 |
| 88 20 201 | 08C | 029 | 7-B06 |
| 88 20 201 | 08C | 033 | 7-B10 |
| 88 20 219 | 08C | 029 | 7-B06 |
| 88 20 219 | 08C | 033 | 7-B10 |
| 88 20 227 | 08C | 029 | 7-B06 |
| 88 20 227 | 08C | 033 | 7-B10 |
| 88 20 235 | 02 | 159 | 1-H16 |
| 88 20 243 | 02 | 159 | 1-H16 |
| 88 20 268 | 02 | 159 | 1-H16 |
| 88 20 300 | 02 | 159 | 1-H16 |
| 88 20 417 | 08C | 013 | 7-A14 |
| 88 20 425 | 08C | 013 | 7-A14 |
| 88 20 433 | 08C | 013 | 7-A14 |
| 88 20 441 | 08C | 013 | 7-A14 |
| 88 20 474 | 08C | 013 | 7-A14 |
| 88 20 490 | 08C | 013 | 7-A14 |
| 88 20 508 | 08C | 013 | 7-A14 |
| 88 20 532 | 03A | 073 | 2-D02 |



# 7-F14 Numerical register — Nummerregister

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 88 20 532 | 08C | 033 | 7-B10 |
| 88 20 722 | 02 | 105 | 1-F10 |
| 88 20 722 | 02 | 111 | 1-F16 |
| 88 20 722 | 08C | 033 | 7-B10 |
| 88 20 748 | 02 | 105 | 1-F10 |
| 88 20 748 | 02 | 111 | 1-F16 |
| 88 20 755 | 02 | 105 | 1-F10 |
| 88 20 755 | 02 | 111 | 1-F16 |
| 88 20 797 | 02 | 153 | 1-H10 |
| 88 20 797 | 08C | 035 | 7-B12 |
| 88 20 813 | 02 | 153 | 1-H10 |
| 88 20 821 | 02 | 153 | 1-H10 |
| 88 20 987 | 08C | 027 | 7-B04 |
| 88 20 987 | 08C | 033 | 7-B10 |
| 88 20 995 | 08C | 027 | 7-B04 |
| 88 21 001 | 08C | 027 | 7-B04 |
| 88 21 001 | 08C | 033 | 7-B10 |
| 88 21 019 | 03A | 085 | 2-D14 |
| 88 21 019 | 08C | 033 | 7-B10 |
| 88 21 100 | 08C | 033 | 7-B10 |
| 88 21 126 | 08C | 013 | 7-A14 |
| 88 21 126 | 08C | 033 | 7-B10 |
| 88 21 142 | 03A | 073 | 2-D02 |
| 88 21 142 | 08C | 033 | 7-B10 |
| 88 21 290 | 03A | 087 | 2-D16 |
| 88 21 290 | 08C | 053 | 7-C06 |
| 88 21 308 | 03A | 087 | 2-D16 |
| 88 21 308 | 08C | 053 | 7-C06 |
| 88 21 431 | 08C | 029 | 7-B06 |
| 88 21 456 | 03A | 087 | 2-D16 |
| 88 21 456 | 08C | 033 | 7-B10 |
| 88 21 548 | 08C | 029 | 7-B06 |
| 88 21 548 | 08C | 033 | 7-B10 |
| 88 21 555 | 08C | 029 | 7-B06 |
| 88 21 555 | 08C | 033 | 7-B10 |
| 88 21 571 | 08C | 027 | 7-B04 |
| 88 21 589 | 08C | 027 | 7-B04 |
| 88 21 597 | 08C | 027 | 7-B04 |
| 88 21 597 | 08C | 031 | 7-B08 |
| 88 21 605 | 08C | 027 | 7-B04 |
| 88 21 613 | 08C | 033 | 7-B10 |
| 88 21 621 | 08C | 033 | 7-B10 |
| 88 21 639 | 08C | 029 | 7-B06 |
| 88 21 647 | 08C | 027 | 7-B04 |
| 88 21 647 | 08C | 053 | 7-C06 |
| 88 53 772 | 03A | 143 | 2-F24 |
| 88 57 443 | 02 | 175 | 1-I08 |
| 88 59 324 | 02 | 027 | 1-C04 |
| 89 03 304 | 04 | 077 | 3-K06 |
| 89 04 575 | 05 | 009 | 4-A10 |
| 89 07 941 | 05 | 005 | 4-A06 |
| 89 07 941 | 05 | 009 | 4-A10 |
| 89 07 966 | 05 | 017 | 4-A18 |
| 89 07 966 | 05 | 019 | 4-A20 |
| 89 08 121 | 05 | 025 | 4-B02 |
| 89 08 139 | 05 | 025 | 4-B02 |
| 89 08 162 | 05 | 017 | 4-A18 |
| 89 08 162 | 05 | 019 | 4-A20 |
| 89 08 527 | 05 | 031 | 4-B08 |
| 89 08 543 | 05 | 009 | 4-A10 |
| 89 08 543 | 05 | 029 | 4-B06 |
| 89 08 568 | 05 | 009 | 4-A10 |
| 89 08 576 | 05 | 009 | 4-A10 |
| 89 08 675 | 07 | 017 | 4-E18 |
| 89 08 766 | 05 | 009 | 4-A10 |
| 89 08 766 | 05 | 029 | 4-B06 |
| 89 09 632 | 07 | 017 | 4-E18 |
| 89 09 632 | 08B | 221 | 6-J06 |
| 89 10 705 | 05 | 013 | 4-A14 |
| 89 10 705 | 05 | 031 | 4-B08 |
| 89 11 190 | 09 | 005 | 7-D06 |
| 89 11 737 | 05 | 009 | 4-A10 |
| 89 11 745 | 05 | 009 | 4-A10 |
| 89 12 115 | 05 | 023 | 4-A24 |
| 89 16 272 | 04 | 007 | 3-H08 |
| 89 16 272 | 05 | 023 | 4-A24 |
| 89 17 395 | 07 | 017 | 4-E12 |
| 89 17 411 | 07 | 011 | 4-E12 |
| 89 19 490 | 05 | 017 | 4-A18 |
| 89 19 490 | 05 | 021 | 4-A22 |
| 89 19 847 | 07 | 005 | 4-E06 |
| 89 19 862 | 07 | 005 | 4-E06 |
| 89 19 870 | 07 | 005 | 4-E06 |
| 89 20 019 | 07 | 005 | 4-E06 |
| 89 20 019 | 07 | 019 | 4-E20 |
| 89 20 183 | 06 | 011 | 4-C12 |
| 89 20 183 | 06 | 025 | 4-D02 |
| 89 20 191 | 06 | 011 | 4-C12 |
| 89 20 191 | 06 | 025 | 4-D02 |
| 89 21 108 | 07 | 005 | 4-E06 |
| 89 21 520 | 04 | 053 | 3-J06 |
| 89 22 445 | 07 | 013 | 4-E14 |
| 89 24 169 | 06 | 011 | 4-C12 |
| 89 24 490 | 04 | 007 | 3-H08 |
| 89 24 557 | 05 | 023 | 4-A24 |
| 89 24 755 | 05 | 009 | 4-A10 |
| 89 25 034 | 05 | 005 | 4-A06 |
| 89 25 042 | 05 | 005 | 4-A06 |
| 89 25 067 | 05 | 005 | 4-A06 |
| 89 25 067 | 05 | 029 | 4-B06 |
| 89 25 372 | 05 | 005 | 4-A06 |
| 89 25 380 | 05 | 005 | 4-A06 |
| 89 25 414 | 05 | 005 | 4-A06 |
| 89 25 422 | 05 | 005 | 4-A06 |
| 89 25 521 | 05 | 033 | 4-B10 |
| 89 25 528 | 05 | 031 | 4-B08 |
| 89 25 539 | 05 | 031 | 4-B08 |
| 89 25 547 | 05 | 031 | 4-B08 |
| 89 25 562 | 05 | 031 | 4-B08 |
| 89 25 745 | 05 | 033 | 4-B10 |
| 89 25 828 | 05 | 031 | 4-B08 |
| 89 25 851 | 05 | 031 | 4-B08 |
| 89 25 869 | 05 | 031 | 4-B08 |
| 89 26 198 | 05 | 005 | 4-A06 |
| 89 26 214 | 05 | 005 | 4-A06 |
| 89 26 222 | 05 | 005 | 4-A06 |
| 89 26 230 | 05 | 005 | 4-A06 |
| 89 26 248 | 05 | 005 | 4-A06 |
| 89 26 644 | 06 | 011 | 4-C12 |
| 89 26 651 | 06 | 011 | 4-C12 |
| 89 26 669 | 06 | 011 | 4-C12 |
| 89 26 685 | 06 | 011 | 4-C12 |
| 89 26 743 | 06 | 011 | 4-C12 |
| 89 26 743 | 06 | 025 | 4-D02 |
| 89 26 768 | 06 | 011 | 4-C12 |
| 89 26 768 | 06 | 025 | 4-D02 |
| 89 27 139 | 02 | 093 | 1-E22 |
| 89 27 139 | 04 | 007 | 3-H08 |
| 89 27 923 | 05 | 025 | 4-B02 |
| 89 28 046 | 07 | 017 | 4-E18 |
| 89 28 210 | 05 | 031 | 4-B08 |
| 89 28 228 | 05 | 031 | 4-B08 |
| 89 28 236 | 05 | 031 | 4-B08 |
| 89 28 251 | 05 | 031 | 4-B08 |
| 89 28 376 | 05 | 031 | 4-B08 |
| 89 28 426 | 05 | 013 | 4-A14 |
| 89 28 426 | 05 | 031 | 4-B08 |
| 89 28 434 | 05 | 013 | 4-A14 |
| 89 28 434 | 05 | 031 | 4-B08 |
| 89 28 541 | 05 | 013 | 4-A14 |
| 89 28 541 | 05 | 031 | 4-B08 |
| 89 28 699 | 05 | 023 | 4-A24 |
| 89 28 756 | 05 | 017 | 4-A18 |
| 89 28 756 | 05 | 019 | 4-A20 |
| 89 28 947 | 05 | 017 | 4-A18 |
| 89 28 996 | 05 | 031 | 4-B08 |
| 89 29 002 | 05 | 031 | 4-B08 |
| 89 29 010 | 05 | 013 | 4-A14 |
| 89 29 010 | 05 | 031 | 4-B08 |
| 89 29 259 | 05 | 017 | 4-A18 |
| 89 29 531 | 05 | 023 | 4-A24 |
| 89 29 671 | 05 | 017 | 4-A18 |
| 89 29 671 | 05 | 019 | 4-A20 |
| 89 30 299 | 07 | 017 | 4-E18 |
| 89 30 307 | 07 | 017 | 4-E18 |
| 89 30 349 | 03A | 129 | 2-F10 |
| 89 30 448 | 05 | 005 | 4-A06 |
| 89 30 448 | 05 | 029 | 4-B06 |
| 89 30 463 | 05 | 029 | 4-B06 |
| 89 31 198 | 09 | 005 | 7-D06 |
| 89 31 461 | 05 | 017 | 4-A18 |
| 89 31 461 | 05 | 019 | 4-A20 |
| 89 31 461 | 05 | 021 | 4-A22 |
| 89 31 784 | 05 | 017 | 4-A18 |
| 89 31 784 | 05 | 021 | 4-A22 |
| 89 31 933 | 05 | 005 | 4-A06 |
| 89 31 941 | 05 | 005 | 4-A06 |
| 89 31 974 | 07 | 005 | 4-E06 |
| 89 32 014 | 07 | 017 | 4-E18 |
| 89 32 071 | 07 | 017 | 4-E18 |
| 89 32 238 | 05 | 009 | 4-A10 |
| 89 32 246 | 05 | 031 | 4-B08 |
| 89 32 279 | 05 | 031 | 4-B08 |
| 89 32 741 | 07 | 017 | 4-E18 |
| 89 32 840 | 07 | 005 | 4-E06 |
| 89 32 840 | 07 | 019 | 4-E20 |
| 89 33 087 | 06 | 011 | 4-C12 |
| 89 33 293 | 07 | 017 | 4-E18 |
| 89 33 335 | 05 | 017 | 4-A18 |
| 89 33 335 | 05 | 019 | 4-A20 |
| 89 33 509 | 05 | 023 | 4-A24 |
| 89 33 889 | 07 | 005 | 4-E06 |
| 89 33 897 | 07 | 013 | 4-E14 |
| 89 33 970 | 06 | 005 | 4-C06 |
| 89 33 988 | 06 | 005 | 4-C06 |
| 89 34 002 | 06 | 005 | 4-C06 |
| 89 34 010 | 06 | 005 | 4-C06 |
| 89 34 119 | 06 | 011 | 4-C12 |
| 89 34 119 | 06 | 013 | 4-C14 |
| 89 34 135 | 06 | 011 | 4-C12 |
| 89 34 192 | 06 | 011 | 4-C12 |
| 89 34 200 | 06 | 011 | 4-C12 |
| 89 34 242 | 06 | 011 | 4-C12 |
| 89 34 242 | 06 | 017 | 4-C18 |
| 89 34 242 | 06 | 023 | 4-C24 |
| 89 34 259 | 06 | 011 | 4-C12 |
| 89 34 259 | 06 | 017 | 4-C18 |
| 89 34 259 | 06 | 023 | 4-C24 |
| 89 34 739 | 05 | 009 | 4-A10 |
| 89 34 747 | 05 | 009 | 4-A10 |
| 89 34 770 | 05 | 009 | 4-A10 |
| 89 34 788 | 06 | 005 | 4-C06 |
| 89 34 796 | 06 | 005 | 4-C06 |
| 89 34 838 | 05 | 009 | 4-A10 |
| 89 34 952 | 06 | 007 | 4-C08 |
| 89 35 025 | 06 | 007 | 4-C08 |
| 89 35 124 | 04 | 007 | 3-H08 |
| 89 35 132 | 05 | 023 | 4-A24 |
| 89 35 298 | 07 | 013 | 4-E14 |
| 89 35 306 | 07 | 017 | 4-E18 |
| 89 35 330 | 07 | 015 | 4-E16 |
| 89 35 371 | 04 | 007 | 3-H08 |
| 89 35 389 | 02 | 179 | 1-I12 |
| 89 35 397 | 02 | 179 | 1-I12 |
| 89 35 421 | 05 | 013 | 4-A14 |
| 89 35 736 | 06 | 005 | 4-C06 |
| 89 35 744 | 06 | 005 | 4-C06 |
| 89 35 751 | 04 | 007 | 3-H08 |
| 89 35 751 | 05 | 023 | 4-A24 |
| 89 35 751 | 08B | 151 | 6-G08 |
| 89 35 751 | 08B | 159 | 6-G16 |
| 89 35 751 | 08B | 225 | 6-J10 |
| 89 35 975 | 05 | 009 | 4-A10 |
| 89 36 106 | 05 | 013 | 4-A14 |
| 89 36 163 | 06 | 007 | 4-C08 |
| 89 36 304 | 07 | 013 | 4-E14 |
| 89 36 403 | 06 | 007 | 4-C08 |
| 89 36 411 | 06 | 007 | 4-C08 |
| 89 36 544 | 06 | 013 | 4-C14 |
| 89 36 619 | 06 | 013 | 4-C14 |
| 89 36 619 | 06 | 015 | 4-C16 |
| 89 36 643 | 06 | 015 | 4-C16 |
| 89 36 676 | 06 | 013 | 4-C14 |
| 89 36 684 | 06 | 013 | 4-C14 |
| 89 36 684 | 06 | 015 | 4-C16 |
| 89 36 700 | 06 | 013 | 4-C14 |
| 89 36 791 | 06 | 013 | 4-C14 |
| 89 36 882 | 06 | 013 | 4-C14 |
| 89 36 882 | 06 | 015 | 4-C16 |
| 89 36 890 | 06 | 013 | 4-C14 |
| 89 36 908 | 06 | 013 | 4-C14 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

# 7-F15 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 89 36 932 | 06 | 015 | 4-C16 |
| 89 36 965 | 06 | 015 | 4-C16 |
| 89 36 973 | 06 | 015 | 4-C16 |
| 89 36 999 | 06 | 013 | 4-C14 |
| 89 37 005 | 06 | 013 | 4-C14 |
| 89 37 021 | 06 | 013 | 4-C14 |
| 89 37 039 | 06 | 013 | 4-C14 |
| 89 37 047 | 06 | 013 | 4-C14 |
| 89 37 070 | 06 | 013 | 4-C14 |
| 89 37 146 | 06 | 013 | 4-C14 |
| 89 37 153 | 06 | 013 | 4-C14 |
| 89 37 153 | 06 | 015 | 4-C16 |
| 89 37 161 | 06 | 013 | 4-C14 |
| 89 37 500 | 06 | 019 | 4-C20 |
| 89 37 500 | 06 | 021 | 4-C22 |
| 89 37 617 | 06 | 023 | 4-C24 |
| 89 37 625 | 05 | 023 | 4-A24 |
| 89 37 831 | 05 | 013 | 4-A14 |
| 89 37 898 | 05 | 025 | 4-B02 |
| 89 38 110 | 05 | 005 | 4-A06 |
| 89 38 136 | 05 | 023 | 4-A24 |
| 89 38 284 | 05 | 023 | 4-A24 |
| 89 38 359 | 05 | 023 | 4-A24 |
| 89 38 458 | 07 | 009 | 4-E10 |
| 89 38 466 | 07 | 013 | 4-E14 |
| 89 38 466 | 07 | 021 | 4-E22 |
| 89 38 466 | 07 | 023 | 4-E24 |
| 89 38 995 | 06 | 015 | 4-C16 |
| 89 39 175 | 06 | 015 | 4-C16 |
| 89 39 191 | 06 | 013 | 4-C14 |
| 89 39 274 | 06 | 005 | 4-C06 |
| 89 39 282 | 06 | 005 | 4-C06 |
| 89 39 332 | 06 | 007 | 4-C08 |
| 89 39 340 | 06 | 007 | 4-C08 |
| 89 39 423 | 07 | 005 | 4-E06 |
| 89 39 423 | 07 | 013 | 4-E14 |
| 89 39 423 | 07 | 019 | 4-E20 |
| 89 39 423 | 07 | 021 | 4-E22 |
| 89 39 423 | 07 | 023 | 4-E24 |
| 89 39 449 | 08B | 153 | 6-G10 |
| 89 39 449 | 08B | 159 | 6-G16 |
| 89 39 449 | 08B | 225 | 6-J10 |
| 89 39 480 | 02 | 179 | 1-I12 |
| 89 39 498 | 02 | 179 | 1-I12 |
| 89 39 555 | 07 | 009 | 4-E10 |
| 89 39 670 | 05 | 017 | 4-A18 |
| 89 39 761 | 08A | 039 | 5-B16 |
| 89 39 993 | 05 | 013 | 4-A14 |
| 89 40 132 | 05 | 017 | 4-A18 |
| 89 40 132 | 05 | 019 | 4-A20 |
| 89 40 579 | 06 | 015 | 4-C16 |
| 89 40 587 | 02 | 179 | 1-I12 |
| 89 40 645 | 06 | 007 | 4-C08 |
| 89 40 652 | 04 | 073 | 3-K02 |
| 89 40 652 | 05 | 019 | 4-A20 |
| 89 40 652 | 08B | 023 | 6-A24 |
| 89 40 678 | 06 | 019 | 4-C20 |
| 89 40 678 | 06 | 021 | 4-C22 |
| 89 40 744 | 05 | 017 | 4-A18 |
| 89 40 751 | 05 | 017 | 4-A18 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 89 40 769 | 04 | 007 | 3-H08 |
| 89 40 769 | 04 | 077 | 3-K06 |
| 89 40 819 | 05 | 017 | 4-A18 |
| 89 40 819 | 05 | 019 | 4-A20 |
| 89 41 015 | 06 | 005 | 4-C06 |
| 89 41 023 | 06 | 005 | 4-C06 |
| 89 41 114 | 06 | 007 | 4-C08 |
| 89 41 155 | 02 | 179 | 1-I12 |
| 89 41 205 | 06 | 007 | 4-C08 |
| 89 41 270 | 04 | 077 | 3-K06 |
| 89 41 312 | 04 | 007 | 3-H08 |
| 89 41 320 | 05 | 023 | 4-A24 |
| 89 41 403 | 06 | 005 | 4-C06 |
| 89 41 478 | 04 | 007 | 3-H08 |
| 89 41 478 | 05 | 023 | 4-A24 |
| 89 41 502 | 07 | 013 | 4-E14 |
| 89 41 528 | 02 | 179 | 1-I12 |
| 89 41 536 | 02 | 179 | 1-I12 |
| 89 41 544 | 02 | 179 | 1-I12 |
| 89 41 551 | 02 | 179 | 1-I12 |
| 89 41 569 | 02 | 179 | 1-I12 |
| 89 41 577 | 02 | 179 | 1-I12 |
| 89 41 601 | 02 | 179 | 1-I12 |
| 89 41 619 | 02 | 179 | 1-I12 |
| 89 41 635 | 05 | 023 | 4-A24 |
| 89 41 718 | 05 | 031 | 4-B08 |
| 89 41 858 | 06 | 005 | 4-C06 |
| 89 41 866 | 06 | 005 | 4-C06 |
| 89 41 965 | 05 | 005 | 4-A06 |
| 89 41 981 | 05 | 005 | 4-A06 |
| 89 42 005 | 07 | 017 | 4-E18 |
| 89 42 021 | 05 | 023 | 4-A24 |
| 89 42 104 | 06 | 011 | 4-C12 |
| 89 42 302 | 05 | 013 | 4-A14 |
| 89 42 575 | 06 | 019 | 4-C20 |
| 89 42 575 | 06 | 021 | 4-C22 |
| 89 42 575 | 06 | 023 | 4-C24 |
| 89 42 609 | 05 | 013 | 4-A14 |
| 89 42 716 | 06 | 009 | 4-C10 |
| 89 42 757 | 04 | 053 | 3-J06 |
| 89 42 765 | 06 | 005 | 4-C06 |
| 89 42 773 | 05 | 005 | 4-A06 |
| 89 43 391 | 02 | 179 | 1-I12 |
| 89 43 979 | 06 | 019 | 4-C20 |
| 89 44 001 | 06 | 019 | 4-C20 |
| 89 44 001 | 06 | 023 | 4-C24 |
| 89 44 175 | 07 | 017 | 4-E18 |
| 89 44 308 | 05 | 017 | 4-A18 |
| 89 44 316 | 05 | 017 | 4-A18 |
| 89 44 373 | 05 | 023 | 4-A24 |
| 89 44 407 | 05 | 023 | 4-A24 |
| 89 44 761 | 06 | 011 | 4-C12 |
| 89 44 779 | 06 | 011 | 4-C12 |
| 89 44 977 | 04 | 007 | 3-H08 |
| 89 45 032 | 06 | 007 | 4-C08 |
| 89 45 156 | 04 | 007 | 3-H08 |
| 89 45 248 | 04 | 007 | 3-H08 |
| 89 45 248 | 04 | 077 | 3-K06 |
| 89 45 255 | 04 | 007 | 3-H08 |
| 89 45 255 | 04 | 077 | 3-K06 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 89 45 263 | 04 | 007 | 3-H08 |
| 89 45 420 | 04 | 053 | 3-J06 |
| 89 45 438 | 04 | 053 | 3-J06 |
| 89 45 727 | 04 | 053 | 3-J06 |
| 89 45 735 | 04 | 053 | 3-J06 |
| 89 45 776 | 07 | 005 | 4-E06 |
| 89 45 800 | 07 | 005 | 4-E06 |
| 89 45 818 | 07 | 013 | 4-E14 |
| 89 45 826 | 07 | 013 | 4-E14 |
| 89 45 909 | 07 | 009 | 4-E10 |
| 89 45 933 | 05 | 017 | 4-A18 |
| 89 45 974 | 05 | 017 | 4-A18 |
| 89 46 014 | 05 | 017 | 4-A18 |
| 89 46 097 | 09 | 005 | 7-D06 |
| 89 46 303 | 06 | 015 | 4-C16 |
| 89 46 311 | 06 | 015 | 4-C16 |
| 89 46 329 | 06 | 015 | 4-C16 |
| 89 46 337 | 06 | 017 | 4-C18 |
| 89 46 345 | 06 | 015 | 4-C16 |
| 89 46 345 | 06 | 017 | 4-C18 |
| 89 46 352 | 06 | 015 | 4-C16 |
| 89 46 352 | 06 | 017 | 4-C18 |
| 89 46 360 | 06 | 017 | 4-C18 |
| 89 46 477 | 07 | 017 | 4-E18 |
| 89 46 659 | 05 | 025 | 4-B02 |
| 89 46 691 | 05 | 025 | 4-B02 |
| 89 46 709 | 05 | 025 | 4-B02 |
| 89 46 964 | 05 | 025 | 4-B02 |
| 89 47 079 | 06 | 015 | 4-C16 |
| 89 47 087 | 06 | 015 | 4-C16 |
| 89 47 095 | 06 | 017 | 4-C18 |
| 89 47 103 | 06 | 015 | 4-C16 |
| 89 47 152 | 07 | 013 | 4-E14 |
| 89 47 178 | 05 | 013 | 4-A14 |
| 89 47 178 | 05 | 029 | 4-B06 |
| 89 47 210 | 07 | 013 | 4-E14 |
| 89 47 269 | 07 | 013 | 4-E14 |
| 89 47 277 | 07 | 009 | 4-E10 |
| 89 47 384 | 05 | 009 | 4-A10 |
| 89 47 574 | 05 | 025 | 4-B02 |
| 89 47 624 | 06 | 011 | 4-C12 |
| 89 47 780 | 07 | 009 | 4-E10 |
| 89 47 798 | 07 | 011 | 4-E12 |
| 89 47 806 | 07 | 011 | 4-E12 |
| 89 47 814 | 07 | 011 | 4-E12 |
| 89 47 822 | 07 | 011 | 4-E12 |
| 89 47 830 | 07 | 011 | 4-E12 |
| 89 47 848 | 07 | 011 | 4-E12 |
| 89 47 913 | 06 | 011 | 4-C12 |
| 89 47 913 | 06 | 025 | 4-D02 |
| 89 47 939 | 07 | 013 | 4-E14 |
| 89 47 939 | 07 | 023 | 4-E24 |
| 89 47 962 | 06 | 011 | 4-C12 |
| 89 47 970 | 06 | 007 | 4-C08 |
| 89 47 988 | 06 | 007 | 4-C08 |
| 89 48 044 | 06 | 007 | 4-C08 |
| 89 48 051 | 04 | 007 | 3-H08 |
| 89 48 051 | 05 | 023 | 4-A24 |
| 89 48 143 | 07 | 009 | 4-E10 |
| 89 48 150 | 07 | 009 | 4-E10 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 89 48 168 | 07 | 011 | 4-E12 |
| 89 48 176 | 07 | 011 | 4-E12 |
| 89 48 226 | 07 | 005 | 4-E06 |
| 89 48 226 | 07 | 013 | 4-E14 |
| 89 48 226 | 07 | 019 | 4-E20 |
| 89 48 226 | 07 | 021 | 4-E22 |
| 89 48 226 | 07 | 023 | 4-E24 |
| 89 48 333 | 06 | 019 | 4-C20 |
| 89 48 333 | 06 | 023 | 4-C24 |
| 89 48 341 | 06 | 019 | 4-C20 |
| 89 50 628 | 04 | 053 | 3-J06 |
| 89 50 636 | 04 | 053 | 3-J06 |
| 89 52 277 | 07 | 017 | 4-E18 |
| 89 52 665 | 05 | 011 | 4-A12 |
| 89 52 699 | 05 | 017 | 4-A18 |
| 89 53 135 | 04 | 077 | 3-K06 |
| 89 53 283 | 05 | 007 | 4-A08 |
| 89 54 315 | 06 | 009 | 4-C10 |
| 89 54 455 | 05 | 027 | 4-B04 |
| 89 54 547 | 05 | 011 | 4-A12 |
| 89 55 007 | 04 | 077 | 3-K06 |
| 89 55 056 | 05 | 033 | 4-B10 |
| 89 55 064 | 05 | 033 | 4-B10 |
| 89 55 072 | 05 | 007 | 4-A08 |
| 89 55 080 | 05 | 007 | 4-A08 |
| 89 55 114 | 05 | 007 | 4-A08 |
| 89 55 114 | 05 | 033 | 4-B10 |
| 89 55 122 | 05 | 007 | 4-A08 |
| 89 55 122 | 05 | 033 | 4-B10 |
| 89 55 122 | 05 | 035 | 4-B12 |
| 89 55 130 | 05 | 007 | 4-A08 |
| 89 55 130 | 05 | 033 | 4-B10 |
| 89 55 148 | 05 | 033 | 4-B10 |
| 89 55 155 | 05 | 033 | 4-B10 |
| 89 55 239 | 05 | 033 | 4-B10 |
| 89 55 288 | 05 | 033 | 4-B10 |
| 89 55 296 | 05 | 033 | 4-B10 |
| 89 55 304 | 05 | 037 | 4-B14 |
| 89 55 312 | 05 | 037 | 4-B14 |
| 89 55 395 | 05 | 011 | 4-A12 |
| 89 55 403 | 05 | 011 | 4-A12 |
| 89 55 411 | 05 | 011 | 4-A12 |
| 89 55 429 | 05 | 011 | 4-A12 |
| 89 55 437 | 05 | 011 | 4-A12 |
| 89 55 445 | 05 | 011 | 4-A12 |
| 89 55 445 | 05 | 033 | 4-B10 |
| 89 55 452 | 05 | 033 | 4-B10 |
| 89 55 460 | 05 | 033 | 4-B10 |
| 89 55 478 | 05 | 011 | 4-A12 |
| 89 55 478 | 05 | 033 | 4-B10 |
| 89 55 486 | 05 | 011 | 4-A12 |
| 89 55 973 | 05 | 007 | 4-A08 |
| 89 56 385 | 06 | 021 | 4-C22 |
| 89 56 393 | 05 | 023 | 4-A24 |
| 89 56 443 | 04 | 007 | 3-H08 |
| 89 56 443 | 05 | 023 | 4-A24 |
| 89 56 468 | 07 | 017 | 4-E18 |
| 89 58 357 | 05 | 013 | 4-A14 |
| 89 59 520 | 05 | 019 | 4-A20 |
| 89 60 254 | 07 | 009 | 4-E10 |



# 7-F16 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 89 61 096 | 03A | 053 | 2-C06 |
| 89 61 096 | 06 | 009 | 4-C10 |
| 89 61 104 | 03A | 053 | 2-C06 |
| 89 61 104 | 06 | 009 | 4-C10 |
| 89 61 153 | 06 | 009 | 4-C10 |
| 89 61 732 | 09 | 005 | 7-D06 |
| 89 61 740 | 09 | 005 | 7-D06 |
| 89 61 799 | 05 | 007 | 4-A08 |
| 89 61 799 | 05 | 033 | 4-B10 |
| 89 61 807 | 05 | 007 | 4-A08 |
| 89 61 807 | 05 | 033 | 4-B10 |
| 89 61 849 | 05 | 011 | 4-A12 |
| 89 61 849 | 05 | 033 | 4-B10 |
| 89 61 864 | 04 | 053 | 3-J06 |
| 89 61 864 | 04 | 077 | 3-K06 |
| 89 61 872 | 04 | 053 | 3-J06 |
| 89 61 872 | 04 | 077 | 3-K06 |
| 89 62 128 | 04 | 007 | 3-H08 |
| 89 62 367 | 07 | 009 | 4-E10 |
| 89 62 656 | 07 | 005 | 4-E06 |
| 89 62 664 | 07 | 005 | 4-E06 |
| 89 63 019 | 05 | 021 | 4-A22 |
| 89 64 686 | 05 | 021 | 4-A22 |
| 89 64 710 | 04 | 053 | 3-J06 |
| 89 64 710 | 07 | 017 | 4-E18 |
| 89 64 991 | 09 | 005 | 7-D06 |
| 89 65 097 | 05 | 019 | 4-A20 |
| 89 65 329 | 05 | 013 | 4-A14 |
| 89 65 329 | 05 | 031 | 4-B08 |
| 89 65 360 | 04 | 053 | 3-J06 |
| 89 65 360 | 07 | 017 | 4-E18 |
| 89 65 436 | 06 | 009 | 4-C10 |
| 89 65 477 | 06 | 009 | 4-C10 |
| 89 65 634 | 05 | 019 | 4-A20 |
| 89 65 782 | 05 | 031 | 4-B08 |
| 89 65 808 | 05 | 013 | 4-A14 |
| 89 65 808 | 05 | 031 | 4-B08 |
| 89 65 907 | 07 | 009 | 4-E10 |
| 89 66 152 | 05 | 015 | 4-A16 |
| 89 66 152 | 05 | 035 | 4-B12 |
| 89 66 160 | 05 | 035 | 4-B12 |
| 89 66 236 | 05 | 035 | 4-B12 |
| 89 66 251 | 05 | 035 | 4-B12 |
| 89 66 335 | 05 | 015 | 4-A16 |
| 89 66 335 | 05 | 035 | 4-B12 |
| 89 66 335 | 05 | 037 | 4-B14 |
| 89 66 368 | 05 | 015 | 4-A16 |
| 89 66 368 | 05 | 035 | 4-B12 |
| 89 66 376 | 05 | 019 | 4-A20 |
| 89 66 384 | 05 | 019 | 4-A20 |
| 89 66 681 | 05 | 015 | 4-A16 |
| 89 66 681 | 05 | 037 | 4-B14 |
| 89 66 707 | 05 | 035 | 4-B12 |
| 89 66 939 | 05 | 015 | 4-A16 |
| 89 66 939 | 05 | 037 | 4-B14 |
| 89 67 101 | 05 | 033 | 4-B10 |
| 89 67 119 | 05 | 033 | 4-B10 |
| 89 67 226 | 05 | 021 | 4-A22 |
| 89 67 234 | 05 | 015 | 4-A16 |
| 89 67 234 | 05 | 035 | 4-B12 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 89 67 234 | 05 | 037 | 4-B14 |
| 89 67 309 | 05 | 015 | 4-A16 |
| 89 67 309 | 05 | 035 | 4-B12 |
| 89 67 325 | 05 | 015 | 4-A16 |
| 89 67 325 | 05 | 035 | 4-B12 |
| 89 67 374 | 05 | 019 | 4-A20 |
| 89 67 374 | 05 | 021 | 4-A22 |
| 89 67 374 | 05 | 037 | 4-B14 |
| 89 67 382 | 05 | 019 | 4-A20 |
| 89 67 382 | 05 | 021 | 4-A22 |
| 89 67 382 | 05 | 037 | 4-B14 |
| 89 67 390 | 05 | 015 | 4-A16 |
| 89 67 390 | 05 | 035 | 4-B12 |
| 89 67 390 | 05 | 037 | 4-B14 |
| 89 67 655 | 05 | 027 | 4-B04 |
| 89 67 713 | 05 | 007 | 4-A08 |
| 89 68 026 | 05 | 011 | 4-A12 |
| 89 68 026 | 05 | 033 | 4-B10 |
| 89 68 588 | 05 | 007 | 4-A08 |
| 89 68 588 | 05 | 011 | 4-A12 |
| 89 70 147 | 05 | 037 | 4-B14 |
| 89 70 428 | 05 | 011 | 4-A12 |
| 89 70 618 | 05 | 011 | 4-A12 |
| 89 70 626 | 05 | 011 | 4-A12 |
| 89 70 709 | 05 | 007 | 4-A08 |
| 89 70 717 | 05 | 011 | 4-A12 |
| 89 70 816 | 05 | 011 | 4-A12 |
| 89 70 873 | 06 | 013 | 4-C14 |
| 89 71 087 | 09 | 005 | 7-D06 |
| 89 71 095 | 05 | 011 | 4-A12 |
| 89 71 111 | 05 | 011 | 4-A12 |
| 89 71 566 | 09 | 005 | 7-D06 |
| 89 71 574 | 09 | 005 | 7-D06 |
| 89 71 715 | 06 | 009 | 4-C10 |
| 89 72 812 | 07 | 009 | 4-E10 |
| 89 72 846 | 07 | 023 | 4-E24 |
| 89 72 853 | 07 | 023 | 4-E24 |
| 89 72 986 | 04 | 053 | 3-J06 |
| 89 73 422 | 07 | 009 | 4-E10 |
| 89 73 422 | 07 | 023 | 4-E24 |
| 89 73 547 | 06 | 009 | 4-C10 |
| 89 75 252 | 09 | 007 | 7-D08 |
| 89 75 443 | 02 | 089 | 1-E18 |
| 89 75 484 | 02 | 075 | 1-E04 |
| 89 75 484 | 02 | 079 | 1-E08 |
| 89 76 037 | 02 | 171 | 1-I04 |
| 89 76 110 | 02 | 071 | 1-D24 |
| 89 76 342 | 09 | 009 | 7-D10 |
| 89 76 359 | 02 | 061 | 1-D14 |
| 89 76 359 | 02 | 067 | 1-D20 |
| 89 76 359 | 02 | 069 | 1-D22 |
| 89 76 375 | 02 | 063 | 1-D16 |
| 89 76 375 | 02 | 067 | 1-D20 |
| 89 76 375 | 02 | 071 | 1-D24 |
| 89 76 383 | 02 | 063 | 1-D16 |
| 89 76 391 | 02 | 063 | 1-D16 |
| 89 76 409 | 02 | 071 | 1-D24 |
| 89 76 417 | 02 | 059 | 1-D12 |
| 89 76 425 | 02 | 061 | 1-D14 |
| 89 76 425 | 02 | 067 | 1-D20 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 89 76 425 | 02 | 069 | 1-D22 |
| 89 76 433 | 02 | 061 | 1-D14 |
| 89 76 433 | 02 | 067 | 1-D20 |
| 89 76 433 | 02 | 069 | 1-D22 |
| 89 76 441 | 02 | 061 | 1-D14 |
| 89 76 441 | 02 | 067 | 1-D20 |
| 89 76 441 | 02 | 069 | 1-D22 |
| 89 76 458 | 02 | 059 | 1-D12 |
| 89 76 680 | 02 | 139 | 1-G20 |
| 89 76 763 | 02 | 139 | 1-G20 |
| 89 76 789 | 02 | 139 | 1-G20 |
| 89 76 797 | 02 | 139 | 1-G20 |
| 89 76 821 | 02 | 201 | 1-J10 |
| 89 76 961 | 02 | 061 | 1-D14 |
| 89 76 961 | 02 | 067 | 1-D20 |
| 89 76 961 | 02 | 069 | 1-D22 |
| 89 77 159 | 02 | 061 | 1-D14 |
| 89 77 159 | 02 | 067 | 1-D20 |
| 89 77 159 | 02 | 069 | 1-D22 |
| 89 77 290 | 02 | 067 | 1-D20 |
| 89 77 308 | 02 | 067 | 1-D20 |
| 89 77 316 | 02 | 067 | 1-D20 |
| 89 77 324 | 02 | 067 | 1-D20 |
| 89 77 365 | 02 | 063 | 1-D16 |
| 89 77 365 | 02 | 071 | 1-D24 |
| 89 77 365 | 02 | 193 | 1-J02 |
| 89 77 373 | 02 | 063 | 1-D16 |
| 89 77 373 | 02 | 071 | 1-D24 |
| 89 77 373 | 02 | 075 | 1-E04 |
| 89 77 373 | 02 | 079 | 1-E08 |
| 89 77 373 | 02 | 085 | 1-E14 |
| 89 77 373 | 02 | 091 | 1-E20 |
| 89 77 373 | 02 | 101 | 1-F06 |
| 89 77 381 | 02 | 085 | 1-E14 |
| 89 77 431 | 02 | 069 | 1-D22 |
| 89 77 654 | 02 | 067 | 1-D20 |
| 89 77 761 | 02 | 071 | 1-D24 |
| 89 77 779 | 02 | 071 | 1-D24 |
| 89 77 787 | 02 | 171 | 1-I04 |
| 89 77 795 | 02 | 053 | 1-D06 |
| 89 77 803 | 02 | 053 | 1-D06 |
| 89 77 837 | 02 | 057 | 1-D10 |
| 89 77 852 | 09 | 009 | 7-D10 |
| 89 77 860 | 09 | 009 | 7-D10 |
| 89 78 280 | 02 | 089 | 1-E18 |
| 89 78 306 | 02 | 049 | 1-D02 |
| 89 78 306 | 02 | 053 | 1-D06 |
| 89 78 314 | 02 | 171 | 1-I04 |
| 89 78 348 | 02 | 089 | 1-E18 |
| 89 78 371 | 02 | 057 | 1-D10 |
| 89 78 439 | 09 | 009 | 7-D10 |
| 89 78 561 | 02 | 063 | 1-D16 |
| 89 78 561 | 02 | 067 | 1-D20 |
| 89 78 702 | 09 | 009 | 7-D10 |
| 89 78 710 | 09 | 009 | 7-D10 |
| 89 79 189 | 02 | 099 | 1-F04 |
| 89 79 262 | 09 | 009 | 7-D10 |
| 89 79 270 | 09 | 009 | 7-D10 |
| 89 79 742 | 09 | 009 | 7-D10 |
| 89 79 759 | 09 | 009 | 7-D10 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 89 79 783 | 09 | 011 | 7-D12 |
| 89 79 791 | 09 | 011 | 7-D12 |
| 89 79 809 | 09 | 009 | 7-D10 |
| 89 79 817 | 09 | 011 | 7-D12 |
| 89 80 021 | 02 | 081 | 1-E10 |
| 89 80 039 | 02 | 081 | 1-E10 |
| 89 80 047 | 02 | 081 | 1-E10 |
| 89 80 278 | 02 | 139 | 1-G20 |
| 89 80 278 | 02 | 203 | 1-J12 |
| 89 80 328 | 02 | 139 | 1-G20 |
| 89 80 328 | 02 | 145 | 1-H02 |
| 89 80 328 | 02 | 147 | 1-H04 |
| 89 80 344 | 09 | 009 | 7-D10 |
| 89 80 393 | 02 | 067 | 1-D20 |
| 89 80 393 | 02 | 069 | 1-D22 |
| 89 80 443 | 02 | 139 | 1-G20 |
| 89 80 468 | 02 | 139 | 1-G20 |
| 89 80 534 | 03A | 015 | 2-A16 |
| 89 81 342 | 02 | 091 | 1-E20 |
| 89 81 375 | 02 | 071 | 1-D24 |
| 89 81 540 | 02 | 071 | 1-D24 |
| 89 81 557 | 02 | 083 | 1-E12 |
| 89 81 565 | 02 | 083 | 1-E12 |
| 89 81 573 | 02 | 083 | 1-E12 |
| 89 81 599 | 02 | 093 | 1-E22 |
| 89 81 649 | 02 | 093 | 1-E22 |
| 89 81 664 | 02 | 081 | 1-E10 |
| 89 81 821 | 09 | 009 | 7-D10 |
| 89 81 870 | 02 | 093 | 1-E22 |
| 89 81 888 | 02 | 093 | 1-E22 |
| 89 81 961 | 02 | 063 | 1-D16 |
| 89 81 961 | 02 | 067 | 1-D20 |
| 89 81 961 | 02 | 071 | 1-D24 |
| 89 81 961 | 02 | 163 | 1-H20 |
| 89 81 961 | 02 | 167 | 1-H24 |
| 89 81 961 | 02 | 169 | 1-I02 |
| 89 81 961 | 04 | 081 | 3-K10 |
| 89 81 979 | 02 | 063 | 1-D16 |
| 89 81 979 | 02 | 067 | 1-D20 |
| 89 81 979 | 02 | 071 | 1-D24 |
| 89 81 979 | 02 | 077 | 1-E06 |
| 89 81 979 | 02 | 079 | 1-E08 |
| 89 81 979 | 02 | 085 | 1-E14 |
| 89 81 979 | 02 | 091 | 1-E20 |
| 89 81 979 | 02 | 101 | 1-F06 |
| 89 81 987 | 02 | 085 | 1-E14 |
| 89 81 987 | 02 | 091 | 1-E20 |
| 89 82 100 | 02 | 093 | 1-E22 |
| 89 82 209 | 02 | 057 | 1-D10 |
| 89 82 209 | 02 | 201 | 1-J10 |
| 89 82 209 | 02 | 203 | 1-J12 |
| 89 82 209 | 02 | 205 | 1-J14 |
| 89 82 431 | 09 | 011 | 7-D12 |
| 89 82 449 | 09 | 011 | 7-D12 |
| 89 85 038 | 05 | 025 | 4-B02 |
| 89 85 129 | 06 | 011 | 4-C12 |
| 89 85 137 | 06 | 011 | 4-C12 |
| 89 85 160 | 06 | 023 | 4-C24 |
| 89 85 244 | 05 | 029 | 4-B06 |
| 89 85 277 | 05 | 009 | 4-A10 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 89 85 285 | 05 | 009 | 4-A10 |
| 89 85 384 | 06 | 023 | 4-C24 |
| 89 85 459 | 05 | 025 | 4-B02 |
| 89 85 483 | 07 | 009 | 4-E10 |
| 89 85 533 | 05 | 031 | 4-B08 |
| 89 85 830 | 06 | 021 | 4-C22 |
| 89 85 848 | 06 | 021 | 4-C22 |
| 89 85 871 | 05 | 005 | 4-A06 |
| 89 85 889 | 05 | 005 | 4-A06 |
| 89 85 947 | 06 | 021 | 4-C22 |
| 89 85 954 | 07 | 005 | 4-E06 |
| 89 85 954 | 07 | 013 | 4-E14 |
| 89 85 954 | 07 | 019 | 4-E20 |
| 89 85 954 | 07 | 021 | 4-E22 |
| 89 85 954 | 07 | 023 | 4-E24 |
| 89 85 962 | 07 | 005 | 4-E06 |
| 89 85 962 | 07 | 013 | 4-E14 |
| 89 85 970 | 07 | 009 | 4-E10 |
| 89 85 996 | 07 | 009 | 4-E10 |
| 89 86 051 | 06 | 019 | 4-C20 |
| 89 86 051 | 06 | 023 | 4-C24 |
| 89 86 069 | 06 | 021 | 4-C22 |
| 89 86 192 | 02 | 179 | 1-I12 |
| 89 86 440 | 02 | 169 | 1-I02 |
| 89 86 622 | 04 | 007 | 3-H08 |
| 89 86 663 | 09 | 005 | 7-D06 |
| 89 86 705 | 05 | 013 | 4-A14 |
| 89 86 713 | 05 | 013 | 4-A14 |
| 89 86 911 | 05 | 013 | 4-A14 |
| 89 86 911 | 05 | 031 | 4-B08 |
| 89 86 986 | 05 | 031 | 4-B08 |
| 89 86 994 | 05 | 031 | 4-B08 |
| 89 87 018 | 05 | 031 | 4-B08 |
| 89 87 232 | 06 | 009 | 4-C10 |
| 89 87 273 | 06 | 009 | 4-C10 |
| 89 87 406 | 03A | 053 | 2-C06 |
| 89 87 406 | 06 | 009 | 4-C10 |
| 89 87 422 | 06 | 009 | 4-C10 |
| 89 87 596 | 07 | 009 | 4-E10 |
| 89 87 604 | 07 | 009 | 4-E10 |
| 89 87 620 | 07 | 009 | 4-E10 |
| 89 87 638 | 05 | 017 | 4-A18 |
| 89 87 638 | 05 | 019 | 4-A20 |
| 89 87 802 | 07 | 009 | 4-E10 |
| 89 87 836 | 07 | 009 | 4-E10 |
| 89 87 919 | 07 | 023 | 4-E24 |
| 89 88 115 | 07 | 019 | 4-E20 |
| 89 88 123 | 07 | 021 | 4-E22 |
| 89 88 289 | 07 | 005 | 4-E06 |
| 89 88 297 | 07 | 015 | 4-E16 |
| 89 88 313 | 03A | 053 | 2-C06 |
| 89 88 313 | 06 | 009 | 4-C10 |
| 89 88 420 | 03A | 053 | 2-C06 |
| 89 88 420 | 06 | 009 | 4-C10 |
| 89 88 602 | 05 | 005 | 4-A06 |
| 89 88 677 | 07 | 009 | 4-E10 |
| 89 88 933 | 06 | 015 | 4-C16 |
| 89 88 941 | 06 | 015 | 4-C16 |
| 89 89 659 | 06 | 009 | 4-C10 |
| 89 89 840 | 06 | 019 | 4-C20 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 89 89 840 | 06 | 025 | 4-D02 |
| 89 89 857 | 06 | 021 | 4-C22 |
| 89 89 857 | 06 | 025 | 4-D02 |
| 89 89 881 | 07 | 005 | 4-E06 |
| 89 89 899 | 07 | 015 | 4-E16 |
| 89 89 907 | 07 | 007 | 4-E08 |
| 89 89 915 | 07 | 007 | 4-E08 |
| 89 89 980 | 07 | 015 | 4-E16 |
| 89 89 998 | 07 | 015 | 4-E16 |
| 89 90 012 | 06 | 005 | 4-C06 |
| 89 90 079 | 07 | 015 | 4-E16 |
| 89 90 087 | 07 | 005 | 4-E06 |
| 89 90 103 | 03A | 053 | 2-C06 |
| 89 90 103 | 06 | 009 | 4-C10 |
| 89 90 160 | 07 | 009 | 4-E10 |
| 89 90 178 | 06 | 023 | 4-C24 |
| 89 90 194 | 05 | 005 | 4-A06 |
| 89 90 194 | 05 | 029 | 4-B06 |
| 89 90 350 | 07 | 009 | 4-E10 |
| 89 90 376 | 03A | 053 | 2-C06 |
| 89 90 376 | 06 | 009 | 4-C10 |
| 89 90 517 | 05 | 005 | 4-A06 |
| 89 90 525 | 05 | 005 | 4-A06 |
| 89 90 566 | 05 | 005 | 4-A06 |
| 89 90 574 | 04 | 053 | 3-J06 |
| 89 90 624 | 05 | 005 | 4-A06 |
| 89 90 632 | 07 | 009 | 4-E10 |
| 89 90 731 | 04 | 053 | 3-J06 |
| 89 90 749 | 04 | 053 | 3-J06 |
| 89 90 913 | 02 | 179 | 1-I12 |
| 89 90 962 | 03A | 053 | 2-C06 |
| 89 90 962 | 06 | 009 | 4-C10 |
| 89 90 970 | 03A | 053 | 2-C06 |
| 89 90 970 | 06 | 009 | 4-C10 |
| 89 90 988 | 03A | 053 | 2-C06 |
| 89 90 988 | 06 | 009 | 4-C10 |
| 89 91 093 | 07 | 019 | 4-E20 |
| 89 91 101 | 07 | 021 | 4-E22 |
| 89 91 382 | 05 | 023 | 4-A24 |
| 89 91 432 | 04 | 007 | 3-H08 |
| 89 91 457 | 04 | 007 | 3-H08 |
| 89 91 473 | 05 | 023 | 4-A24 |
| 89 91 499 | 05 | 023 | 4-A24 |
| 89 91 549 | 09 | 005 | 7-D06 |
| 89 91 564 | 09 | 005 | 7-D06 |
| 89 91 598 | 07 | 009 | 4-E10 |
| 89 91 739 | 05 | 017 | 4-A18 |
| 89 91 739 | 05 | 021 | 4-A22 |
| 89 93 073 | 04 | 053 | 3-J06 |
| 89 93 073 | 04 | 077 | 3-K06 |
| 89 93 099 | 06 | 013 | 4-C14 |
| 89 93 115 | 05 | 013 | 4-A14 |
| 89 93 11[illegible] | 05 | 031 | 4-B08 |
| 89 93 156 | 04 | 007 | 3-H08 |
| 89 93 156 | 04 | 077 | 3-K06 |
| 89 93 230 | 05 | 009 | 4-A10 |
| 89 93 230 | 05 | 029 | 4-B06 |
| 89 93 255 | 05 | 005 | 4-A06 |
| 89 93 255 | 05 | 031 | 4-B08 |
| 89 93 297 | 05 | 005 | 4-A06 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 89 93 297 | 05 | 029 | 4-B06 |
| 89 93 297 | 05 | 035 | 4-B12 |
| 89 93 321 | 06 | 005 | 4-C06 |
| 89 93 321 | 06 | 023 | 4-C24 |
| 89 93 354 | 06 | 011 | 4-C12 |
| 89 93 354 | 06 | 017 | 4-C18 |
| 89 93 354 | 06 | 023 | 4-C24 |
| 89 93 404 | 07 | 005 | 4-E06 |
| 89 93 404 | 07 | 019 | 4-E20 |
| 89 93 412 | 07 | 013 | 4-E14 |
| 89 93 412 | 07 | 021 | 4-E22 |
| 89 93 438 | 07 | 005 | 4-E06 |
| 89 93 438 | 07 | 019 | 4-E20 |
| 89 93 446 | 07 | 013 | 4-E14 |
| 89 93 446 | 07 | 021 | 4-E22 |
| 89 93 479 | 07 | 005 | 4-E06 |
| 89 93 479 | 07 | 019 | 4-E20 |
| 89 93 487 | 07 | 013 | 4-E14 |
| 89 93 487 | 07 | 021 | 4-E22 |
| 89 93 511 | 06 | 013 | 4-C14 |
| 89 93 537 | 06 | 013 | 4-C14 |
| 89 93 545 | 06 | 013 | 4-C14 |
| 89 93 552 | 06 | 017 | 4-C18 |
| 89 93 552 | 06 | 023 | 4-C24 |
| 89 93 560 | 06 | 011 | 4-C12 |
| 89 93 560 | 06 | 017 | 4-C18 |
| 89 93 560 | 06 | 023 | 4-C24 |
| 89 93 628 | 04 | 053 | 3-J06 |
| 89 93 628 | 04 | 077 | 3-K06 |
| 89 93 677 | 06 | 023 | 4-C24 |
| 89 93 719 | 05 | 007 | 4-A08 |
| 89 93 727 | 05 | 005 | 4-A06 |
| 89 93 727 | 05 | 031 | 4-B08 |
| 89 93 776 | 05 | 005 | 4-A06 |
| 89 93 776 | 05 | 029 | 4-B06 |
| 89 93 792 | 04 | 053 | 3-J06 |
| 89 93 792 | 04 | 077 | 3-K06 |
| 89 94 535 | 05 | 031 | 4-B08 |
| 89 94 634 | 09 | 005 | 7-D06 |
| 89 94 840 | 05 | 009 | 4-A10 |
| 89 94 840 | 05 | 031 | 4-B08 |
| 89 94 972 | 05 | 013 | 4-A14 |
| 89 94 972 | 05 | 031 | 4-B08 |
| 91 00 025 | 07 | 005 | 4-E06 |
| 91 00 025 | 07 | 013 | 4-E14 |
| 91 00 025 | 07 | 019 | 4-E20 |
| 91 00 025 | 07 | 021 | 4-E22 |
| 91 00 025 | 07 | 023 | 4-E24 |
| 91 00 082 | 07 | 019 | 4-E20 |
| 91 00 090 | 07 | 021 | 4-E22 |
| 91 00 108 | 05 | 005 | 4-A06 |
| 91 00 223 | 07 | 023 | 4-E24 |
| 91 00 298 | 07 | 017 | 4-E18 |
| 91 00 546 | 07 | 023 | 4-E24 |
| 91 00 553 | 07 | 023 | 4-E24 |
| 91 00 579 | 07 | 009 | 4-E10 |
| 91 00 587 | 07 | 009 | 4-E10 |
| 91 00 595 | 05 | 013 | 4-A14 |
| 91 00 637 | 05 | 029 | 4-B06 |
| 91 00 652 | 05 | 013 | 4-A14 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 91 00 652 | 05 | 029 | 4-B06 |
| 91 00 660 | 07 | 009 | 4-E10 |
| 91 00 884 | 05 | 007 | 4-A08 |
| 91 01 031 | 06 | 005 | 4-C06 |
| 91 01 049 | 06 | 005 | 4-C06 |
| 91 01 056 | 09 | 005 | 7-D06 |
| 91 01 221 | 05 | 027 | 4-B04 |
| 91 01 239 | 05 | 027 | 4-B04 |
| 91 01 395 | 07 | 017 | 4-E18 |
| 91 01 445 | 05 | 027 | 4-B04 |
| 91 01 502 | 07 | 009 | 4-E10 |
| 91 01 502 | 07 | 023 | 4-E24 |
| 91 01 510 | 07 | 009 | 4-E10 |
| 91 01 510 | 07 | 023 | 4-E24 |
| 91 01 528 | 05 | 027 | 4-B04 |
| 91 01 577 | 06 | 019 | 4-C20 |
| 91 01 577 | 06 | 023 | 4-C24 |
| 91 01 585 | 06 | 021 | 4-C22 |
| 91 01 635 | 05 | 011 | 4-A12 |
| 91 01 643 | 05 | 011 | 4-A12 |
| 91 01 650 | 05 | 017 | 4-A18 |
| 91 01 650 | 05 | 021 | 4-A22 |
| 91 01 726 | 05 | 017 | 4-A18 |
| 91 01 734 | 05 | 017 | 4-A18 |
| 91 01 734 | 05 | 019 | 4-A20 |
| 91 01 767 | 05 | 017 | 4-A18 |
| 91 01 783 | 05 | 017 | 4-A18 |
| 91 01 817 | 05 | 027 | 4-B04 |
| 91 01 833 | 05 | 027 | 4-B04 |
| 91 01 858 | 06 | 013 | 4-C14 |
| 91 01 882 | 07 | 005 | 4-E06 |
| 91 01 932 | 07 | 005 | 4-E06 |
| 91 01 940 | 07 | 013 | 4-E14 |
| 91 02 096 | 06 | 005 | 4-C06 |
| 91 02 104 | 06 | 005 | 4-C06 |
| 91 02 203 | 05 | 017 | 4-A18 |
| 91 02 245 | 05 | 017 | 4-A18 |
| 91 02 427 | 07 | 019 | 4-E20 |
| 91 02 435 | 07 | 023 | 4-E24 |
| 91 02 484 | 07 | 009 | 4-E10 |
| 91 02 492 | 07 | 009 | 4-E10 |
| 91 02 559 | 06 | 021 | 4-C22 |
| 91 02 575 | 05 | 013 | 4-A14 |
| 91 02 591 | 05 | 013 | 4-A14 |
| 91 02 609 | 05 | 013 | 4-A14 |
| 91 02 765 | 05 | 009 | 4-A10 |
| 91 02 773 | 05 | 009 | 4-A10 |
| 91 02 781 | 07 | 005 | 4-E06 |
| 91 02 781 | 07 | 019 | 4-E20 |
| 91 02 799 | 07 | 013 | 4-E14 |
| 91 02 799 | 07 | 023 | 4-E24 |
| 91 02 807 | 05 | 005 | 4-A06 |
| 91 02 815 | 05 | 005 | 4-A06 |
| 91 02 823 | 04 | 053 | 3-J06 |
| 91 02 831 | 04 | 053 | 3-J06 |
| 91 02 849 | 05 | 013 | 4-A14 |
| 91 02 856 | 05 | 007 | 4-A08 |
| 91 02 864 | 05 | 007 | 4-A08 |
| 91 02 880 | 04 | 053 | 3-J06 |
| 91 02 971 | 05 | 007 | 4-A08 |





| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 91 02 989 | 05 | 007 | 4-A08 |
| 91 02 997 | 05 | 007 | 4-A08 |
| 91 03 037 | 05 | 007 | 4-A08 |
| 91 03 102 | 07 | 017 | 4-E18 |
| 91 03 110 | 07 | 017 | 4-E18 |
| 91 03 201 | 06 | 021 | 4-C22 |
| 91 03 219 | 07 | 009 | 4-E10 |
| 91 03 425 | 07 | 009 | 4-E10 |
| 91 03 458 | 05 | 005 | 4-A06 |
| 91 03 466 | 05 | 005 | 4-A06 |
| 91 03 474 | 05 | 005 | 4-A06 |
| 91 03 474 | 05 | 033 | 4-B10 |
| 91 03 524 | 07 | 009 | 4-E10 |
| 91 03 565 | 07 | 009 | 4-E10 |
| 91 03 607 | 05 | 005 | 4-A06 |
| 91 03 623 | 05 | 005 | 4-A06 |
| 91 03 672 | 04 | 053 | 3-J06 |
| 91 03 680 | 07 | 009 | 4-E10 |
| 91 03 870 | 07 | 009 | 4-E10 |
| 91 03 888 | 07 | 009 | 4-E10 |
| 91 03 995 | 05 | 005 | 4-A06 |
| 91 04 043 | 03A | 083 | 2-D12 |
| 91 04 050 | 05 | 023 | 4-A24 |
| 91 04 118 | 06 | 013 | 4-C14 |
| 91 04 126 | 06 | 013 | 4-C14 |
| 91 04 134 | 05 | 027 | 4-B04 |
| 91 04 159 | 05 | 007 | 4-A08 |
| 91 04 209 | 06 | 005 | 4-C06 |
| 91 04 233 | 03A | 083 | 2-D12 |
| 91 04 241 | 05 | 019 | 4-A20 |
| 91 04 266 | 05 | 019 | 4-A20 |
| 91 04 282 | 05 | 019 | 4-A20 |
| 91 04 308 | 05 | 019 | 4-A20 |
| 91 04 324 | 05 | 019 | 4-A20 |
| 91 04 340 | 05 | 019 | 4-A20 |
| 91 04 365 | 05 | 019 | 4-A20 |
| 91 04 399 | 05 | 019 | 4-A20 |
| 91 04 407 | 05 | 015 | 4-A16 |
| 91 04 472 | 05 | 023 | 4-A24 |
| 91 04 738 | 05 | 035 | 4-B12 |
| 91 04 746 | 05 | 035 | 4-B12 |
| 91 04 753 | 05 | 035 | 4-B12 |
| 91 04 787 | 05 | 037 | 4-B14 |
| 91 04 795 | 05 | 015 | 4-A16 |
| 91 04 811 | 05 | 035 | 4-B12 |
| 91 04 829 | 05 | 035 | 4-B12 |
| 91 04 837 | 05 | 015 | 4-A16 |
| 91 04 944 | 05 | 035 | 4-B12 |
| 91 04 951 | 05 | 019 | 4-A20 |
| 91 04 993 | 05 | 035 | 4-B12 |
| 91 05 016 | 05 | 021 | 4-A22 |
| 91 05 032 | 05 | 021 | 4-A22 |
| 91 05 115 | 05 | 019 | 4-A20 |
| 91 05 115 | 05 | 021 | 4-A22 |
| 91 05 115 | 05 | 037 | 4-B14 |
| 91 05 123 | 05 | 015 | 4-A16 |
| 91 05 131 | 05 | 019 | 4-A20 |
| 91 05 149 | 05 | 019 | 4-A20 |
| 91 05 255 | 07 | 019 | 4-E20 |
| 91 05 263 | 07 | 021 | 4-E22 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 91 05 297 | 05 | 015 | 4-A16 |
| 91 05 305 | 05 | 021 | 4-A22 |
| 91 05 313 | 05 | 021 | 4-A22 |
| 91 05 354 | 05 | 021 | 4-A22 |
| 91 05 388 | 05 | 021 | 4-A22 |
| 91 05 396 | 05 | 021 | 4-A22 |
| 91 05 479 | 07 | 005 | 4-E06 |
| 91 05 479 | 07 | 019 | 4-E20 |
| 91 05 487 | 07 | 013 | 4-E14 |
| 91 05 487 | 07 | 021 | 4-E22 |
| 91 05 529 | 04 | 007 | 3-H08 |
| 91 05 560 | 05 | 023 | 4-A24 |
| 91 05 651 | 05 | 027 | 4-B04 |
| 91 05 701 | 05 | 015 | 4-A16 |
| 91 05 719 | 05 | 015 | 4-A16 |
| 91 05 735 | 06 | 023 | 4-C24 |
| 91 05 768 | 05 | 023 | 4-A24 |
| 91 05 859 | 07 | 017 | 4-E18 |
| 91 05 891 | 04 | 007 | 3-H08 |
| 91 05 925 | 05 | 023 | 4-A24 |
| 91 05 933 | 04 | 007 | 3-H08 |
| 91 06 022 | 06 | 013 | 4-C14 |
| 91 06 030 | 06 | 013 | 4-C14 |
| 91 06 097 | 05 | 019 | 4-A20 |
| 91 06 121 | 05 | 019 | 4-A20 |
| 91 06 139 | 05 | 019 | 4-A20 |
| 91 06 147 | 05 | 019 | 4-A20 |
| 91 06 154 | 06 | 013 | 4-C14 |
| 91 06 212 | 06 | 017 | 4-C18 |
| 91 06 220 | 06 | 015 | 4-C16 |
| 91 06 279 | 06 | 015 | 4-C16 |
| 91 06 287 | 06 | 017 | 4-C18 |
| 91 06 295 | 06 | 013 | 4-C14 |
| 91 06 295 | 06 | 023 | 4-C24 |
| 91 06 303 | 06 | 013 | 4-C14 |
| 91 06 741 | 05 | 019 | 4-A20 |
| 91 06 758 | 05 | 019 | 4-A20 |
| 91 06 766 | 05 | 019 | 4-A20 |
| 91 06 774 | 05 | 019 | 4-A20 |
| 91 14 455 | 03A | 017 | 2-A18 |
| 91 14 596 | 02 | 113 | 1-F18 |
| 91 14 679 | 02 | 133 | 1-G14 |
| 91 14 703 | 02 | 089 | 1-E18 |
| 91 14 752 | 02 | 115 | 1-F20 |
| 91 14 869 | 02 | 105 | 1-F10 |
| 91 14 877 | 02 | 175 | 1-I08 |
| 91 14 885 | 02 | 019 | 1-B20 |
| 91 15 841 | 02 | 033 | 1-C10 |
| 91 15 858 | 02 | 033 | 1-C10 |
| 91 15 866 | 02 | 033 | 1-C10 |
| 91 15 874 | 02 | 033 | 1-C10 |
| 91 15 882 | 02 | 033 | 1-C10 |
| 91 15 973 | 02 | 019 | 1-B20 |
| 91 16 062 | 02 | 019 | 1-B20 |
| 91 16 088 | 02 | 101 | 1-F06 |
| 91 16 385 | 02 | 197 | 1-J06 |
| 91 16 385 | 03A | 015 | 2-A16 |
| 91 16 443 | 02 | 035 | 1-C12 |
| 91 16 757 | 02 | 021 | 1-B22 |
| 91 16 856 | 02 | 021 | 1-B22 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 91 16 864 | 02 | 035 | 1-C12 |
| 91 17 060 | 02 | 025 | 1-C02 |
| 91 17 839 | 02 | 187 | 1-I20 |
| 91 17 847 | 02 | 187 | 1-I20 |
| 91 17 979 | 03A | 015 | 2-A16 |
| 91 18 084 | 02 | 029 | 1-C06 |
| 91 18 092 | 02 | 029 | 1-C06 |
| 91 18 100 | 02 | 029 | 1-C06 |
| 91 18 118 | 02 | 029 | 1-C06 |
| 91 18 126 | 02 | 031 | 1-C08 |
| 91 18 233 | 02 | 029 | 1-C06 |
| 91 18 241 | 02 | 029 | 1-C06 |
| 91 18 258 | 02 | 029 | 1-C06 |
| 91 18 266 | 02 | 029 | 1-C06 |
| 91 18 274 | 02 | 031 | 1-C08 |
| 91 18 415 | 02 | 123 | 1-G04 |
| 91 18 423 | 02 | 123 | 1-G04 |
| 91 19 330 | 02 | 185 | 1-I18 |
| 91 19 561 | 03A | 025 | 2-B02 |
| 91 19 934 | 02 | 013 | 1-B14 |
| 91 20 130 | 03A | 029 | 2-B06 |
| 91 20 148 | 03A | 029 | 2-B06 |
| 91 20 155 | 03A | 029 | 2-B06 |
| 91 20 163 | 03A | 029 | 2-B06 |
| 91 20 171 | 03A | 029 | 2-B06 |
| 91 20 189 | 03A | 029 | 2-B06 |
| 91 20 197 | 03A | 029 | 2-B06 |
| 91 20 205 | 03A | 029 | 2-B06 |
| 91 20 239 | 03A | 069 | 2-C22 |
| 91 20 247 | 03A | 069 | 2-C22 |
| 91 20 551 | 03A | 141 | 2-F22 |
| 91 20 668 | 03B | 013 | 3-A14 |
| 91 20 668 | 03B | 017 | 3-A18 |
| 91 20 668 | 03B | 021 | 3-A22 |
| 91 20 668 | 03B | 025 | 3-B02 |
| 91 20 668 | 03B | 037 | 3-B14 |
| 91 20 668 | 03B | 041 | 3-B18 |
| 91 20 668 | 03B | 047 | 3-B24 |
| 91 20 668 | 03B | 049 | 3-C02 |
| 91 20 668 | 03B | 051 | 3-C04 |
| 91 20 668 | 03B | 059 | 3-C12 |
| 91 20 668 | 03B | 061 | 3-C14 |
| 91 20 668 | 03B | 063 | 3-C16 |
| 91 20 668 | 03B | 065 | 3-C18 |
| 91 20 668 | 03B | 067 | 3-C20 |
| 91 20 668 | 03B | 071 | 3-C24 |
| 91 20 668 | 03B | 075 | 3-D04 |
| 91 20 668 | 03B | 083 | 3-D12 |
| 91 20 668 | 03B | 085 | 3-D14 |
| 91 20 668 | 03B | 087 | 3-D16 |
| 91 20 668 | 03B | 091 | 3-D20 |
| 91 20 668 | 03B | 095 | 3-D24 |
| 91 20 668 | 03B | 099 | 3-E04 |
| 91 20 668 | 03B | 103 | 3-E08 |
| 91 20 668 | 03B | 111 | 3-E16 |
| 91 20 668 | 03B | 121 | 3-F02 |
| 91 20 668 | 03B | 133 | 3-F14 |
| 91 20 668 | 03B | 147 | 3-G04 |
| 91 20 767 | 03B | 021 | 3-A22 |
| 91 20 767 | 03B | 045 | 3-B22 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 91 20 767 | 03B | 111 | 3-E16 |
| 91 20 767 | 03B | 123 | 3-F04 |
| 91 20 775 | 03B | 013 | 3-A14 |
| 91 20 775 | 03B | 021 | 3-A22 |
| 91 20 775 | 03B | 037 | 3-B14 |
| 91 20 775 | 03B | 045 | 3-B22 |
| 91 20 775 | 03B | 049 | 3-C02 |
| 91 20 775 | 03B | 059 | 3-C12 |
| 91 20 775 | 03B | 067 | 3-C20 |
| 91 20 775 | 03B | 111 | 3-E16 |
| 91 20 775 | 03B | 121 | 3-F02 |
| 91 20 775 | 03B | 133 | 3-F14 |
| 91 20 775 | 03B | 145 | 3-G02 |
| 91 20 783 | 03B | 013 | 3-A14 |
| 91 20 783 | 03B | 021 | 3-A22 |
| 91 20 783 | 03B | 025 | 3-B02 |
| 91 20 783 | 03B | 037 | 3-B14 |
| 91 20 783 | 03B | 045 | 3-B22 |
| 91 20 783 | 03B | 047 | 3-B24 |
| 91 20 783 | 03B | 059 | 3-C12 |
| 91 20 783 | 03B | 067 | 3-C20 |
| 91 20 783 | 03B | 071 | 3-C24 |
| 91 20 783 | 03B | 099 | 3-E04 |
| 91 20 783 | 03B | 111 | 3-E16 |
| 91 20 783 | 03B | 121 | 3-F02 |
| 91 20 783 | 03B | 133 | 3-F14 |
| 91 20 783 | 03B | 145 | 3-G02 |
| 91 20 791 | 03B | 021 | 3-A22 |
| 91 20 791 | 03B | 025 | 3-B02 |
| 91 20 791 | 03B | 039 | 3-B16 |
| 91 20 791 | 03B | 045 | 3-B22 |
| 91 20 791 | 03B | 047 | 3-B24 |
| 91 20 791 | 03B | 059 | 3-C12 |
| 91 20 791 | 03B | 063 | 3-C16 |
| 91 20 791 | 03B | 067 | 3-C20 |
| 91 20 791 | 03B | 083 | 3-D12 |
| 91 20 791 | 03B | 087 | 3-D16 |
| 91 20 791 | 03B | 111 | 3-E16 |
| 91 20 791 | 03B | 121 | 3-F02 |
| 91 20 791 | 03B | 133 | 3-F14 |
| 91 20 791 | 03B | 145 | 3-G02 |
| 91 20 882 | 03A | 057 | 2-C10 |
| 91 20 882 | 03A | 149 | 2-G06 |
| 91 21 528 | 03A | 005 | 2-A06 |
| 91 21 757 | 03A | 115 | 2-E20 |
| 91 22 086 | 03A | 121 | 2-F02 |
| 91 22 557 | 03B | 025 | 3-B02 |
| 91 22 557 | 03B | 047 | 3-B24 |
| 91 22 557 | 03B | 067 | 3-C20 |
| 91 22 581 | 03A | 145 | 2-G02 |
| 91 23 258 | 03A | 133 | 2-F14 |
| 91 23 274 | 03A | 133 | 2-F14 |
| 91 23 282 | 03A | 133 | 2-F14 |
| 91 23 399 | 03B | 025 | 3-B02 |
| 91 23 399 | 03B | 047 | 3-B24 |
| 91 23 399 | 03B | 067 | 3-C20 |
| 91 23 548 | 03B | 085 | 3-D14 |
| 91 23 555 | 03B | 091 | 3-D20 |
| 91 23 555 | 03B | 095 | 3-D24 |
| 91 24 090 | 03B | 021 | 3-A22 |



MASTER INDEX


0 General 1-A02
2 Engine 1-B02
3A Electrical general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 7-A02
9 Tools, labels 7-D02
10 Numerical register 7-E02

# 7–F19 *Numerical register* *Nummerregister*

| Part No<br>Art nr | Gr<br>Gr | Page<br>Sida | Grid<br>Koord |
|---|---|---|---|
| 91 24 090 | 03B | 045 | 3-B22 |
| 91 24 090 | 03B | 067 | 3-C20 |
| 91 24 132 | 03A | 049 | 2-C02 |
| 91 24 140 | 03A | 049 | 2-C02 |
| 91 24 157 | 03B | 013 | 3-A14 |
| 91 24 157 | 03B | 037 | 3-B14 |
| 91 24 157 | 03B | 059 | 3-C12 |
| 91 24 157 | 03B | 083 | 3-D12 |
| 91 24 165 | 03B | 041 | 3-B18 |
| 91 24 165 | 03B | 063 | 3-C16 |
| 91 24 165 | 03B | 087 | 3-D16 |
| 91 24 181 | 03B | 047 | 3-B24 |
| 91 24 181 | 03B | 067 | 3-C20 |
| 91 24 199 | 03A | 139 | 2-F20 |
| 91 24 199 | 03B | 025 | 3-B02 |
| 91 24 199 | 03B | 047 | 3-B24 |
| 91 24 199 | 03B | 071 | 3-C24 |
| 91 24 199 | 03B | 099 | 3-E04 |
| 91 24 603 | 03A | 131 | 2-F12 |
| 91 24 611 | 03A | 083 | 2-D12 |
| 91 25 055 | 03A | 123 | 2-F04 |
| 91 25 063 | 03A | 123 | 2-F04 |
| 91 25 212 | 03A | 065 | 2-C18 |
| 91 25 220 | 03A | 145 | 2-G02 |
| 91 25 238 | 03A | 145 | 2-G02 |
| 91 25 543 | 03A | 083 | 2-D12 |
| 91 25 543 | 03B | 099 | 3-E04 |
| 91 36 243 | 02 | 047 | 1-C24 |
| 91 36 243 | 02 | 049 | 1-D02 |
| 91 36 243 | 02 | 051 | 1-D04 |
| 91 36 243 | 02 | 091 | 1-E20 |
| 91 36 243 | 02 | 095 | 1-E24 |
| 91 36 243 | 02 | 097 | 1-F02 |
| 91 36 243 | 02 | 099 | 1-F04 |
| 91 36 243 | 02 | 101 | 1-F06 |
| 91 36 243 | 02 | 129 | 1-G10 |
| 91 36 243 | 02 | 133 | 1-G14 |
| 91 36 243 | 02 | 183 | 1-I16 |
| 91 36 243 | 02 | 185 | 1-I18 |
| 91 36 243 | 03A | 019 | 2-A20 |
| 91 36 243 | 03A | 021 | 2-A22 |
| 91 36 243 | 03A | 069 | 2-C22 |
| 91 36 243 | 03A | 073 | 2-D02 |
| 91 36 243 | 03A | 075 | 2-D04 |
| 91 36 243 | 03A | 079 | 2-D08 |
| 91 36 243 | 08C | 013 | 7-A14 |
| 91 36 243 | 08C | 015 | 7-A16 |
| 91 60 003 | 08A | 075 | 5-D04 |
| 91 60 052 | 08B | 193 | 6-I02 |
| 91 60 276 | 08B | 199 | 6-I08 |
| 91 60 664 | 08B | 221 | 6-J06 |
| 91 61 415 | 08A | 135 | 5-F16 |
| 91 61 423 | 08A | 135 | 5-F16 |
| 91 62 199 | 08B | 067 | 6-C20 |
| 91 62 207 | 08B | 067 | 6-C20 |
| 91 62 215 | 08B | 069 | 6-C22 |
| 91 62 223 | 08B | 067 | 6-C20 |
| 91 62 231 | 08B | 067 | 6-C20 |
| 91 62 249 | 08B | 069 | 6-C22 |
| 91 62 256 | 08B | 067 | 6-C20 |

| Part No<br>Art nr | Gr<br>Gr | Page<br>Sida | Grid<br>Koord |
|---|---|---|---|
| 91 62 264 | 08B | 067 | 6-C20 |
| 91 62 272 | 08B | 069 | 6-C22 |
| 91 62 280 | 08B | 067 | 6-C20 |
| 91 62 298 | 08B | 067 | 6-C20 |
| 91 62 306 | 08B | 069 | 6-C22 |
| 91 62 397 | 08B | 067 | 6-C20 |
| 91 62 405 | 08B | 067 | 6-C20 |
| 91 62 413 | 08B | 069 | 6-C22 |
| 91 95 132 | 05 | 017 | 4-A18 |
| 91 95 140 | 05 | 017 | 4-A18 |
| 91 95 512 | 05 | 017 | 4-A18 |
| 91 95 520 | 05 | 017 | 4-A18 |
| 91 96 049 | 05 | 017 | 4-A18 |
| 91 96 056 | 05 | 017 | 4-A18 |
| 91 96 056 | 05 | 019 | 4-A20 |
| 92 06 657 | 08A | 005 | 5-A06 |
| 92 07 911 | 08A | 005 | 5-A06 |
| 92 20 070 | 08A | 015 | 5-A16 |
| 92 20 161 | 08A | 115 | 5-E20 |
| 92 20 161 | 08A | 125 | 5-F06 |
| 92 20 864 | 08A | 015 | 5-A16 |
| 92 20 880 | 08A | 011 | 5-A12 |
| 92 20 898 | 08A | 051 | 5-C04 |
| 92 20 906 | 08A | 051 | 5-C04 |
| 92 20 922 | 08A | 051 | 5-C04 |
| 92 20 930 | 08A | 047 | 5-B24 |
| 92 20 930 | 08A | 051 | 5-C04 |
| 92 20 948 | 08A | 047 | 5-B24 |
| 92 20 948 | 08A | 051 | 5-C04 |
| 92 20 955 | 08A | 047 | 5-B24 |
| 92 20 955 | 08A | 051 | 5-C04 |
| 92 20 963 | 08A | 047 | 5-B24 |
| 92 20 963 | 08A | 051 | 5-C04 |
| 92 20 971 | 08A | 011 | 5-A12 |
| 92 20 989 | 08A | 011 | 5-A12 |
| 92 20 997 | 08A | 047 | 5-B24 |
| 92 20 997 | 08A | 051 | 5-C04 |
| 92 21 276 | 08A | 115 | 5-E20 |
| 92 21 284 | 08A | 115 | 5-E20 |
| 92 21 375 | 08A | 011 | 5-A12 |
| 92 21 383 | 08A | 011 | 5-A12 |
| 92 21 508 | 08A | 007 | 5-A08 |
| 92 21 656 | 08A | 011 | 5-A12 |
| 92 21 664 | 08A | 011 | 5-A12 |
| 92 21 987 | 08A | 083 | 5-D12 |
| 92 21 995 | 08A | 043 | 5-B20 |
| 92 22 001 | 08A | 043 | 5-B20 |
| 92 22 175 | 08A | 045 | 5-B22 |
| 92 22 183 | 08A | 045 | 5-B22 |
| 92 22 613 | 08A | 129 | 5-F10 |
| 92 22 613 | 08A | 165 | 5-G22 |
| 92 22 613 | 08A | 185 | 5-H18 |
| 92 22 670 | 08A | 047 | 5-B24 |
| 92 22 670 | 08A | 051 | 5-C04 |
| 92 22 688 | 08A | 047 | 5-B24 |
| 92 22 688 | 08A | 051 | 5-C04 |
| 92 22 696 | 08A | 047 | 5-B24 |
| 92 22 696 | 08A | 051 | 5-C04 |
| 92 22 704 | 08A | 047 | 5-B24 |
| 92 22 704 | 08A | 051 | 5-C04 |

| Part No<br>Art nr | Gr<br>Gr | Page<br>Sida | Grid<br>Koord |
|---|---|---|---|
| 92 22 795 | 08A | 087 | 5-D16 |
| 92 22 803 | 08A | 087 | 5-D16 |
| 92 22 837 | 08A | 087 | 5-D16 |
| 92 22 902 | 08A | 117 | 5-E22 |
| 92 22 902 | 08A | 127 | 5-F08 |
| 92 22 910 | 08A | 117 | 5-E22 |
| 92 22 910 | 08A | 127 | 5-F08 |
| 92 22 936 | 08A | 117 | 5-E22 |
| 92 22 936 | 08A | 127 | 5-F08 |
| 92 22 951 | 08A | 117 | 5-E22 |
| 92 22 951 | 08A | 127 | 5-F08 |
| 92 22 977 | 08A | 011 | 5-A12 |
| 92 22 977 | 08A | 051 | 5-C04 |
| 92 23 025 | 08A | 011 | 5-A12 |
| 92 23 066 | 08A | 011 | 5-A12 |
| 92 23 074 | 08A | 011 | 5-A12 |
| 92 23 082 | 06 | 021 | 4-C22 |
| 92 23 082 | 08A | 011 | 5-A12 |
| 92 23 124 | 08A | 093 | 5-D22 |
| 92 23 207 | 08A | 093 | 5-D22 |
| 92 23 223 | 08A | 093 | 5-D22 |
| 92 23 298 | 08A | 145 | 5-G02 |
| 92 23 306 | 08A | 145 | 5-G02 |
| 92 23 371 | 08A | 083 | 5-D12 |
| 92 23 439 | 08A | 127 | 5-F08 |
| 92 23 447 | 08A | 127 | 5-F08 |
| 92 23 538 | 08A | 127 | 5-F08 |
| 92 23 686 | 08A | 011 | 5-A12 |
| 92 23 686 | 08A | 047 | 5-B24 |
| 92 23 686 | 08A | 051 | 5-C04 |
| 92 23 694 | 08A | 067 | 5-C20 |
| 92 23 694 | 08A | 167 | 5-G24 |
| 92 23 702 | 08A | 067 | 5-C20 |
| 92 23 702 | 08A | 167 | 5-G24 |
| 92 23 736 | 08A | 017 | 5-A18 |
| 92 23 736 | 08A | 021 | 5-A22 |
| 92 23 744 | 08A | 017 | 5-A18 |
| 92 23 744 | 08A | 021 | 5-A22 |
| 92 23 751 | 08A | 017 | 5-A18 |
| 92 23 751 | 08A | 021 | 5-A22 |
| 92 23 777 | 08A | 043 | 5-B20 |
| 92 23 785 | 08A | 043 | 5-B20 |
| 92 23 926 | 08A | 015 | 5-A16 |
| 92 23 967 | 08A | 005 | 5-A06 |
| 92 23 991 | 08A | 011 | 5-A12 |
| 92 23 991 | 08A | 019 | 5-A20 |
| 92 23 991 | 08A | 023 | 5-A24 |
| 92 24 544 | 08A | 075 | 5-D04 |
| 92 24 544 | 08A | 079 | 5-D08 |
| 92 24 676 | 08A | 145 | 5-G02 |
| 92 25 467 | 08A | 053 | 5-C06 |
| 92 25 475 | 08A | 087 | 5-D16 |
| 92 25 483 | 08A | 087 | 5-D16 |
| 92 25 806 | 08A | 005 | 5-A06 |
| 92 25 954 | 08A | 101 | 5-E06 |
| 92 25 954 | 08A | 161 | 5-G18 |
| 92 26 028 | 08A | 133 | 5-F14 |
| 92 26 028 | 08A | 139 | 5-F20 |
| 92 26 473 | 08A | 125 | 5-F06 |
| 92 26 481 | 08A | 117 | 5-E22 |

| Part No<br>Art nr | Gr<br>Gr | Page<br>Sida | Grid<br>Koord |
|---|---|---|---|
| 92 26 481 | 08A | 125 | 5-F06 |
| 92 26 499 | 08A | 117 | 5-E22 |
| 92 26 499 | 08A | 127 | 5-F08 |
| 92 26 523 | 08A | 117 | 5-E22 |
| 92 26 523 | 08A | 127 | 5-F08 |
| 92 26 531 | 08A | 117 | 5-E22 |
| 92 26 531 | 08A | 127 | 5-F08 |
| 92 26 713 | 08A | 145 | 5-G02 |
| 92 26 838 | 08A | 067 | 5-C20 |
| 92 26 846 | 08A | 067 | 5-C20 |
| 92 27 539 | 08A | 099 | 5-E04 |
| 92 27 547 | 08A | 099 | 5-E04 |
| 92 27 554 | 08A | 017 | 5-A18 |
| 92 27 554 | 08A | 021 | 5-A22 |
| 92 27 687 | 08A | 093 | 5-D22 |
| 92 27 695 | 08A | 093 | 5-D22 |
| 92 27 711 | 08A | 093 | 5-D22 |
| 92 27 729 | 08A | 093 | 5-D22 |
| 92 27 745 | 08A | 093 | 5-D22 |
| 92 27 778 | 08A | 093 | 5-D22 |
| 92 27 927 | 08A | 091 | 5-D20 |
| 92 27 927 | 08A | 173 | 5-H06 |
| 92 27 935 | 08A | 089 | 5-D18 |
| 92 27 950 | 08A | 091 | 5-D20 |
| 92 27 968 | 08A | 091 | 5-D20 |
| 92 28 008 | 08A | 091 | 5-D20 |
| 92 28 008 | 08A | 173 | 5-H06 |
| 92 28 040 | 08A | 145 | 5-G02 |
| 92 28 131 | 08A | 013 | 5-A14 |
| 92 28 131 | 08B | 199 | 6-I08 |
| 92 28 149 | 03A | 125 | 2-F06 |
| 92 28 149 | 08A | 017 | 5-A18 |
| 92 28 149 | 08A | 021 | 5-A22 |
| 92 28 156 | 02 | 167 | 1-H24 |
| 92 28 156 | 08A | 017 | 5-A18 |
| 92 28 156 | 08A | 021 | 5-A22 |
| 92 28 180 | 08A | 007 | 5-A08 |
| 92 28 214 | 08A | 045 | 5-B22 |
| 92 28 222 | 08A | 045 | 5-B22 |
| 92 28 230 | 08A | 043 | 5-B20 |
| 92 28 248 | 08A | 043 | 5-B20 |
| 92 28 255 | 08A | 101 | 5-E06 |
| 92 28 255 | 08A | 161 | 5-G18 |
| 92 28 339 | 08A | 011 | 5-A12 |
| 92 28 347 | 08A | 145 | 5-G02 |
| 92 28 503 | 08A | 083 | 5-D12 |
| 92 29 717 | 08A | 043 | 5-B20 |
| 92 29 725 | 08A | 043 | 5-B20 |
| 92 29 949 | 08A | 015 | 5-A16 |
| 92 30 079 | 08A | 007 | 5-A08 |
| 92 30 095 | 08A | 007 | 5-A08 |
| 92 30 194 | 08A | 161 | 5-G18 |
| 92 30 277 | 08A | 071 | 5-C24 |
| 92 30 293 | 02 | 135 | 1-G16 |
| 92 30 293 | 08A | 101 | 5-E06 |
| 92 30 293 | 08A | 103 | 5-E08 |
| 92 30 293 | 08A | 109 | 5-E14 |
| 92 30 293 | 08A | 111 | 5-E16 |
| 92 30 293 | 08A | 143 | 5-F24 |
| 92 30 293 | 08A | 149 | 5-G06 |



# 7–F20 *Numerical register* *Nummerregister*

| Part No<br>Art nr | Gr<br>Gr | Page<br>Sida | Grid<br>Koord |
|---|---|---|---|
| 92 30 293 | 08A | 173 | 5-H06 |
| 92 30 327 | 08A | 101 | 5-E06 |
| 92 30 335 | 08A | 011 | 5-A12 |
| 92 30 350 | 08A | 041 | 5-B18 |
| 92 30 632 | 08A | 071 | 5-C24 |
| 92 30 640 | 08A | 071 | 5-C24 |
| 92 30 889 | 08A | 087 | 5-D16 |
| 92 31 002 | 08A | 091 | 5-D20 |
| 92 31 002 | 08A | 173 | 5-H06 |
| 92 31 010 | 08A | 091 | 5-D20 |
| 92 31 044 | 08B | 223 | 6-J08 |
| 92 31 101 | 08B | 223 | 6-J08 |
| 92 31 150 | 08B | 223 | 6-J08 |
| 92 31 168 | 08A | 013 | 5-A14 |
| 92 31 176 | 08A | 133 | 5-F14 |
| 92 31 184 | 08A | 133 | 5-F14 |
| 92 31 192 | 08A | 137 | 5-F18 |
| 92 31 200 | 08A | 137 | 5-F18 |
| 92 31 218 | 08A | 139 | 5-F20 |
| 92 31 226 | 08A | 139 | 5-F20 |
| 92 31 234 | 08A | 139 | 5-F20 |
| 92 31 242 | 08A | 139 | 5-F20 |
| 92 31 267 | 08A | 087 | 5-D16 |
| 92 31 408 | 08A | 145 | 5-G02 |
| 92 31 499 | 08A | 117 | 5-E22 |
| 92 31 499 | 08A | 125 | 5-F06 |
| 92 31 515 | 08A | 087 | 5-D16 |
| 92 31 523 | 08A | 087 | 5-D16 |
| 92 31 671 | 08A | 075 | 5-D04 |
| 92 31 705 | 08A | 007 | 5-A08 |
| 92 31 796 | 08A | 083 | 5-D12 |
| 92 31 804 | 08A | 011 | 5-A12 |
| 92 31 812 | 08A | 011 | 5-A12 |
| 92 31 820 | 08A | 007 | 5-A08 |
| 92 32 273 | 08A | 087 | 5-D16 |
| 92 32 778 | 08A | 015 | 5-A16 |
| 92 32 786 | 08A | 015 | 5-A16 |
| 92 33 248 | 08A | 117 | 5-E22 |
| 92 33 248 | 08A | 127 | 5-F08 |
| 92 33 255 | 08A | 117 | 5-E22 |
| 92 33 255 | 08A | 127 | 5-F08 |
| 92 33 263 | 08A | 117 | 5-E22 |
| 92 33 263 | 08A | 127 | 5-F08 |
| 92 33 271 | 08A | 117 | 5-E22 |
| 92 33 271 | 08A | 127 | 5-F08 |
| 92 33 297 | 08A | 053 | 5-C06 |
| 92 33 305 | 08A | 053 | 5-C06 |
| 92 33 487 | 08A | 057 | 5-C10 |
| 92 33 495 | 08A | 057 | 5-C10 |
| 92 33 503 | 08A | 061 | 5-C14 |
| 92 33 511 | 08A | 061 | 5-C14 |
| 92 33 537 | 08A | 017 | 5-A18 |
| 92 33 610 | 08A | 087 | 5-D16 |
| 92 33 719 | 08A | 083 | 5-D12 |
| 92 33 917 | 08A | 087 | 5-D16 |
| 92 34 055 | 08A | 039 | 5-B16 |
| 92 34 287 | 08A | 011 | 5-A12 |
| 92 34 378 | 08A | 061 | 5-C14 |
| 92 34 386 | 08A | 061 | 5-C14 |
| 92 34 535 | 08A | 099 | 5-E04 |

| Part No<br>Art nr | Gr<br>Gr | Page<br>Sida | Grid<br>Koord |
|---|---|---|---|
| 92 34 543 | 08A | 099 | 5-E04 |
| 92 35 078 | 08A | 087 | 5-D16 |
| 92 35 094 | 08A | 125 | 5-F06 |
| 92 35 102 | 08A | 125 | 5-F06 |
| 92 35 151 | 08A | 011 | 5-A12 |
| 92 35 342 | 08B | 021 | 6-A22 |
| 92 35 516 | 08A | 117 | 5-E22 |
| 92 35 516 | 08A | 125 | 5-F06 |
| 92 35 573 | 08A | 079 | 5-D08 |
| 92 35 581 | 08A | 079 | 5-D08 |
| 92 35 805 | 08A | 081 | 5-D10 |
| 92 35 813 | 08A | 081 | 5-D10 |
| 92 36 183 | 08A | 093 | 5-D22 |
| 92 36 589 | 03A | 045 | 2-B22 |
| 92 36 589 | 08A | 099 | 5-E04 |
| 92 36 605 | 08A | 133 | 5-F14 |
| 92 36 605 | 08A | 139 | 5-F20 |
| 92 36 654 | 08A | 045 | 5-B22 |
| 92 36 662 | 08A | 045 | 5-B22 |
| 92 36 670 | 08A | 081 | 5-D10 |
| 92 36 688 | 08A | 081 | 5-D10 |
| 92 36 753 | 08A | 101 | 5-E06 |
| 92 36 753 | 08A | 109 | 5-E14 |
| 92 36 894 | 08A | 095 | 5-D24 |
| 92 36 902 | 08A | 095 | 5-D24 |
| 92 36 910 | 08A | 095 | 5-D24 |
| 92 36 928 | 08A | 095 | 5-D24 |
| 92 36 936 | 08A | 095 | 5-D24 |
| 92 36 944 | 08A | 095 | 5-D24 |
| 92 36 951 | 08A | 095 | 5-D24 |
| 92 36 969 | 08A | 095 | 5-D24 |
| 92 36 977 | 08A | 095 | 5-D24 |
| 92 36 985 | 08A | 095 | 5-D24 |
| 92 36 993 | 08A | 095 | 5-D24 |
| 92 37 009 | 08A | 057 | 5-C10 |
| 92 37 033 | 08A | 117 | 5-E22 |
| 92 37 041 | 08A | 117 | 5-E22 |
| 92 37 132 | 08A | 053 | 5-C06 |
| 92 37 140 | 08A | 053 | 5-C06 |
| 92 37 165 | 08A | 141 | 5-F22 |
| 92 37 173 | 08A | 145 | 5-G02 |
| 92 37 272 | 08A | 083 | 5-D12 |
| 92 37 439 | 08A | 021 | 5-A22 |
| 92 37 447 | 08A | 021 | 5-A22 |
| 92 37 512 | 08A | 099 | 5-E04 |
| 92 37 520 | 08A | 099 | 5-E04 |
| 92 37 553 | 08A | 133 | 5-F14 |
| 92 37 678 | 08A | 133 | 5-F14 |
| 92 37 686 | 08A | 137 | 5-F18 |
| 92 37 694 | 08A | 139 | 5-F20 |
| 92 37 751 | 08A | 083 | 5-D12 |
| 92 37 827 | 08A | 137 | 5-F18 |
| 92 37 835 | 08A | 137 | 5-F18 |
| 92 37 975 | 08A | 133 | 5-F14 |
| 92 37 983 | 08A | 133 | 5-F14 |
| 92 38 148 | 08A | 021 | 5-A22 |
| 92 38 171 | 08A | 137 | 5-F18 |
| 92 38 189 | 08A | 139 | 5-F20 |
| 92 38 205 | 08A | 101 | 5-E06 |
| 92 38 528 | 08A | 145 | 5-G02 |

| Part No<br>Art nr | Gr<br>Gr | Page<br>Sida | Grid<br>Koord |
|---|---|---|---|
| 92 39 153 | 08A | 133 | 5-F14 |
| 92 39 161 | 08A | 133 | 5-F14 |
| 92 39 211 | 08A | 137 | 5-F18 |
| 92 39 229 | 08A | 137 | 5-F18 |
| 92 39 237 | 08A | 095 | 5-D24 |
| 92 39 245 | 08A | 095 | 5-D24 |
| 92 39 252 | 08A | 095 | 5-D24 |
| 92 39 260 | 08A | 095 | 5-D24 |
| 92 39 278 | 08A | 095 | 5-D24 |
| 92 39 286 | 08A | 095 | 5-D24 |
| 92 39 294 | 08A | 137 | 5-F18 |
| 92 39 302 | 08A | 137 | 5-F18 |
| 92 39 310 | 08A | 137 | 5-F18 |
| 92 39 328 | 08A | 137 | 5-F18 |
| 92 39 336 | 08A | 133 | 5-F14 |
| 92 39 344 | 08A | 133 | 5-F14 |
| 92 39 351 | 08A | 127 | 5-F08 |
| 92 39 369 | 08A | 127 | 5-F08 |
| 92 39 518 | 08A | 139 | 5-F20 |
| 92 39 526 | 08A | 139 | 5-F20 |
| 92 39 716 | 08A | 139 | 5-F20 |
| 92 39 724 | 08A | 139 | 5-F20 |
| 92 41 035 | 08A | 093 | 5-D22 |
| 92 55 845 | 08A | 101 | 5-E06 |
| 92 55 845 | 08A | 121 | 5-F02 |
| 92 55 845 | 08A | 123 | 5-F04 |
| 92 55 845 | 08A | 169 | 5-H02 |
| 92 57 262 | 08A | 095 | 5-D24 |
| 92 59 532 | 08A | 119 | 5-E24 |
| 92 63 393 | 08A | 035 | 5-B12 |
| 92 64 508 | 08A | 057 | 5-C10 |
| 92 66 545 | 08A | 101 | 5-E06 |
| 92 66 545 | 08A | 109 | 5-E14 |
| 92 78 334 | 08A | 119 | 5-E24 |
| 92 78 334 | 08A | 161 | 5-G18 |
| 92 78 334 | 08A | 163 | 5-G20 |
| 92 80 173 | 08A | 093 | 5-D22 |
| 92 80 256 | 08A | 093 | 5-D22 |
| 92 80 298 | 08A | 093 | 5-D22 |
| 92 80 314 | 08A | 093 | 5-D22 |
| 92 80 330 | 08A | 093 | 5-D22 |
| 92 80 355 | 08A | 115 | 5-E20 |
| 92 80 363 | 08A | 115 | 5-E20 |
| 92 80 371 | 08A | 125 | 5-F06 |
| 92 80 389 | 08A | 125 | 5-F06 |
| 92 80 397 | 08A | 125 | 5-F06 |
| 92 80 405 | 08A | 125 | 5-F06 |
| 92 80 413 | 08A | 125 | 5-F06 |
| 92 80 421 | 08A | 125 | 5-F06 |
| 92 80 439 | 08A | 115 | 5-E20 |
| 92 80 439 | 08A | 125 | 5-F06 |
| 92 80 462 | 08A | 125 | 5-F06 |
| 92 80 470 | 08A | 125 | 5-F06 |
| 92 80 488 | 08A | 115 | 5-E20 |
| 92 80 488 | 08A | 125 | 5-F06 |
| 92 80 496 | 08A | 115 | 5-E20 |
| 92 80 496 | 08A | 125 | 5-F06 |
| 92 80 736 | 08A | 021 | 5-A22 |
| 92 80 835 | 08A | 021 | 5-A22 |
| 92 81 072 | 08A | 021 | 5-A22 |

| Part No<br>Art nr | Gr<br>Gr | Page<br>Sida | Grid<br>Koord |
|---|---|---|---|
| 92 81 098 | 08A | 021 | 5-A22 |
| 92 81 114 | 08A | 075 | 5-D04 |
| 92 81 114 | 08A | 079 | 5-D08 |
| 92 81 130 | 08A | 081 | 5-D10 |
| 92 81 346 | 08A | 071 | 5-C24 |
| 92 81 775 | 08A | 071 | 5-C24 |
| 92 81 783 | 08A | 071 | 5-C24 |
| 92 81 973 | 08A | 041 | 5-B18 |
| 92 81 981 | 08A | 041 | 5-B18 |
| 92 81 999 | 08A | 115 | 5-E20 |
| 92 82 005 | 08A | 115 | 5-E20 |
| 92 82 054 | 08A | 115 | 5-E20 |
| 92 82 062 | 08A | 115 | 5-E20 |
| 92 82 104 | 08A | 133 | 5-F14 |
| 92 82 104 | 08A | 139 | 5-F20 |
| 92 82 138 | 08A | 129 | 5-F10 |
| 92 82 138 | 08A | 185 | 5-H18 |
| 92 82 153 | 08A | 095 | 5-D24 |
| 92 82 211 | 08A | 097 | 5-E02 |
| 92 82 229 | 08A | 097 | 5-E02 |
| 92 82 609 | 08A | 021 | 5-A22 |
| 92 82 716 | 08A | 095 | 5-D24 |
| 92 82 732 | 08A | 097 | 5-E02 |
| 92 82 740 | 08A | 097 | 5-E02 |
| 92 82 773 | 08A | 145 | 5-G02 |
| 92 82 922 | 08A | 095 | 5-D24 |
| 92 82 922 | 08A | 097 | 5-E02 |
| 92 82 971 | 08A | 071 | 5-C24 |
| 92 82 989 | 08A | 071 | 5-C24 |
| 92 83 441 | 08A | 141 | 5-F22 |
| 92 83 573 | 08A | 145 | 5-G02 |
| 92 83 722 | 09 | 007 | 7-D08 |
| 92 84 092 | 08A | 137 | 5-F18 |
| 92 84 100 | 08A | 137 | 5-F18 |
| 92 84 118 | 08A | 139 | 5-F20 |
| 92 84 126 | 08A | 139 | 5-F20 |
| 92 84 159 | 08A | 139 | 5-F20 |
| 92 84 167 | 08A | 139 | 5-F20 |
| 92 84 175 | 08A | 133 | 5-F14 |
| 92 84 183 | 08A | 133 | 5-F14 |
| 92 84 191 | 08A | 133 | 5-F14 |
| 92 84 209 | 08A | 133 | 5-F14 |
| 92 84 217 | 08A | 137 | 5-F18 |
| 92 84 225 | 08A | 137 | 5-F18 |
| 92 84 274 | 08A | 005 | 5-A06 |
| 92 84 282 | 08A | 005 | 5-A06 |
| 92 84 316 | 08A | 005 | 5-A06 |
| 92 84 324 | 08A | 007 | 5-A08 |
| 92 84 373 | 08A | 073 | 5-D02 |
| 92 84 381 | 08A | 071 | 5-C24 |
| 92 84 399 | 08B | 223 | 6-J08 |
| 92 84 480 | 08A | 083 | 5-D12 |
| 92 84 498 | 08A | 083 | 5-D12 |
| 92 84 506 | 08A | 083 | 5-D12 |
| 92 84 514 | 08A | 083 | 5-D12 |
| 92 84 753 | 08A | 145 | 5-G02 |
| 92 84 761 | 08A | 141 | 5-F22 |
| 92 85 180 | 08A | 005 | 5-A06 |
| 92 85 404 | 08A | 099 | 5-E04 |
| 92 85 602 | 08A | 075 | 5-D04 |



MASTER INDEX


0 General 1-A02
2 Engine 1-B02
3A Electrical general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 7-A02
9 Tools, labels 7-D02
10 Numerical register 7-E02

| Part No<br>Art nr | Gr<br>Gr | Page<br>Sida | Grid<br>Koord |
|---|---|---|---|
| 92 85 602 | 08A | 079 | 5-D08 |
| 92 85 859 | 08A | 109 | 5-E14 |
| 92 85 867 | 08A | 109 | 5-E14 |
| 92 85 867 | 08A | 111 | 5-E16 |
| 92 85 875 | 08A | 109 | 5-E14 |
| 92 85 875 | 08A | 111 | 5-E16 |
| 92 85 891 | 08A | 109 | 5-E14 |
| 92 85 909 | 08A | 109 | 5-E14 |
| 92 86 188 | 08A | 097 | 5-E02 |
| 92 86 188 | 08A | 099 | 5-E04 |
| 92 86 253 | 08A | 041 | 5-B18 |
| 92 86 261 | 08A | 041 | 5-B18 |
| 92 86 634 | 08A | 095 | 5-D24 |
| 92 86 642 | 08A | 095 | 5-D24 |
| 92 86 675 | 08A | 095 | 5-D24 |
| 92 86 683 | 08A | 095 | 5-D24 |
| 92 86 717 | 08A | 095 | 5-D24 |
| 92 86 725 | 08A | 095 | 5-D24 |
| 92 86 931 | 08A | 013 | 5-A14 |
| 92 86 949 | 08A | 013 | 5-A14 |
| 92 87 012 | 08A | 063 | 5-C16 |
| 92 87 020 | 08A | 063 | 5-C16 |
| 92 87 038 | 08A | 063 | 5-C16 |
| 92 87 038 | 08A | 165 | 5-G22 |
| 92 87 046 | 08A | 063 | 5-C16 |
| 92 87 046 | 08A | 165 | 5-G22 |
| 92 87 079 | 08A | 125 | 5-F06 |
| 92 87 087 | 08A | 125 | 5-F06 |
| 92 87 111 | 08A | 117 | 5-E22 |
| 92 87 111 | 08A | 125 | 5-F06 |
| 92 87 392 | 08A | 079 | 5-D08 |
| 92 87 392 | 08A | 081 | 5-D10 |
| 92 88 119 | 08C | 011 | 7-A12 |
| 92 88 127 | 08A | 099 | 5-E04 |
| 92 88 150 | 08C | 011 | 7-A12 |
| 92 88 168 | 08C | 011 | 7-A12 |
| 92 88 192 | 08A | 117 | 5-E22 |
| 92 88 200 | 08A | 117 | 5-E22 |
| 92 88 259 | 08A | 095 | 5-D24 |
| 92 88 267 | 08A | 095 | 5-D24 |
| 92 88 432 | 02 | 047 | 1-C24 |
| 92 88 432 | 02 | 049 | 1-D02 |
| 92 88 515 | 08A | 145 | 5-G02 |
| 92 88 523 | 08A | 101 | 5-E06 |
| 92 88 523 | 08A | 161 | 5-G18 |
| 92 88 812 | 08A | 103 | 5-E08 |
| 92 88 812 | 08A | 109 | 5-E14 |
| 92 88 812 | 08A | 161 | 5-G18 |
| 92 88 846 | 08A | 143 | 5-F24 |
| 92 89 059 | 08A | 043 | 5-B20 |
| 92 89 083 | 08A | 051 | 5-C04 |
| 92 89 166 | 08A | 007 | 5-A08 |
| 92 89 224 | 08A | 097 | 5-E02 |
| 92 89 232 | 08A | 097 | 5-E02 |
| 92 89 273 | 08A | 097 | 5-E02 |
| 92 89 281 | 08A | 097 | 5-E02 |
| 92 89 299 | 08A | 097 | 5-E02 |
| 92 89 307 | 08A | 097 | 5-E02 |
| 92 89 356 | 08A | 071 | 5-C24 |
| 92 89 356 | 08A | 169 | 5-H02 |

| Part No<br>Art nr | Gr<br>Gr | Page<br>Sida | Grid<br>Koord |
|---|---|---|---|
| 92 89 364 | 08A | 071 | 5-C24 |
| 92 89 364 | 08A | 169 | 5-H02 |
| 92 89 372 | 08A | 071 | 5-C24 |
| 92 89 380 | 08A | 071 | 5-C24 |
| 92 89 414 | 08A | 117 | 5-E22 |
| 92 89 414 | 08A | 127 | 5-F08 |
| 92 89 471 | 08A | 017 | 5-A18 |
| 92 89 471 | 08A | 021 | 5-A22 |
| 92 89 505 | 08A | 017 | 5-A18 |
| 92 89 505 | 08A | 021 | 5-A22 |
| 92 89 570 | 08A | 095 | 5-D24 |
| 92 89 588 | 08A | 095 | 5-D24 |
| 92 89 604 | 08A | 021 | 5-A22 |
| 92 89 612 | 08A | 059 | 5-C12 |
| 92 89 844 | 08A | 115 | 5-E20 |
| 92 89 869 | 08A | 059 | 5-C12 |
| 92 89 877 | 08A | 099 | 5-E04 |
| 92 89 885 | 08A | 099 | 5-E04 |
| 92 89 919 | 08A | 099 | 5-E04 |
| 92 90 149 | 08A | 039 | 5-B16 |
| 92 90 230 | 09 | 015 | 7-D16 |
| 92 90 255 | 09 | 017 | 7-D18 |
| 92 90 271 | 09 | 017 | 7-D18 |
| 92 90 297 | 09 | 017 | 7-D18 |
| 92 90 339 | 09 | 017 | 7-D18 |
| 92 90 347 | 09 | 017 | 7-D18 |
| 92 90 362 | 08A | 101 | 5-E06 |
| 92 90 362 | 08A | 161 | 5-G18 |
| 92 90 594 | 08A | 099 | 5-E04 |
| 92 90 750 | 08A | 005 | 5-A06 |
| 92 90 768 | 08A | 005 | 5-A06 |
| 92 90 776 | 08A | 005 | 5-A06 |
| 92 90 784 | 08A | 005 | 5-A06 |
| 92 90 933 | 08A | 165 | 5-G22 |
| 92 90 941 | 08A | 165 | 5-G22 |
| 92 91 121 | 08A | 101 | 5-E06 |
| 92 91 121 | 08A | 109 | 5-E14 |
| 92 91 139 | 04 | 081 | 3-K10 |
| 92 91 139 | 08A | 101 | 5-E06 |
| 92 91 139 | 08A | 109 | 5-E14 |
| 92 91 345 | 08A | 115 | 5-E20 |
| 92 91 378 | 08A | 137 | 5-F18 |
| 92 91 386 | 08A | 137 | 5-F18 |
| 92 91 428 | 08A | 133 | 5-F14 |
| 92 91 436 | 08A | 137 | 5-F18 |
| 92 91 444 | 08A | 095 | 5-D24 |
| 92 91 592 | 08A | 059 | 5-C12 |
| 92 91 923 | 08A | 145 | 5-G02 |
| 92 91 923 | 08A | 173 | 5-H06 |
| 92 91 998 | 08A | 141 | 5-F22 |
| 92 91 998 | 08A | 173 | 5-H06 |
| 92 92 202 | 08A | 141 | 5-F22 |
| 92 92 202 | 08A | 173 | 5-H06 |
| 92 92 228 | 08A | 141 | 5-F22 |
| 92 92 228 | 08A | 145 | 5-G02 |
| 92 92 228 | 08A | 173 | 5-H06 |
| 92 92 236 | 08A | 141 | 5-F22 |
| 92 92 244 | 08A | 141 | 5-F22 |
| 92 92 269 | 08A | 145 | 5-G02 |
| 92 92 442 | 08A | 015 | 5-A16 |

| Part No<br>Art nr | Gr<br>Gr | Page<br>Sida | Grid<br>Koord |
|---|---|---|---|
| 92 92 459 | 08A | 047 | 5-B24 |
| 92 92 467 | 08A | 047 | 5-B24 |
| 92 92 475 | 08A | 047 | 5-B24 |
| 92 92 483 | 08A | 047 | 5-B24 |
| 92 92 491 | 08A | 047 | 5-B24 |
| 92 92 509 | 08A | 047 | 5-B24 |
| 92 92 517 | 08A | 047 | 5-B24 |
| 92 92 525 | 08A | 047 | 5-B24 |
| 92 92 533 | 08A | 047 | 5-B24 |
| 92 92 541 | 08A | 047 | 5-B24 |
| 92 92 640 | 08A | 011 | 5-A12 |
| 92 92 699 | 08A | 013 | 5-A14 |
| 92 92 699 | 08A | 059 | 5-C12 |
| 92 92 756 | 08A | 083 | 5-D12 |
| 92 92 855 | 08A | 063 | 5-C16 |
| 92 92 863 | 08A | 063 | 5-C16 |
| 92 92 913 | 08A | 021 | 5-A22 |
| 92 92 954 | 08A | 133 | 5-F14 |
| 92 92 954 | 08A | 137 | 5-F18 |
| 92 93 010 | 08A | 017 | 5-A18 |
| 92 93 051 | 08A | 117 | 5-E22 |
| 92 93 051 | 08A | 125 | 5-F06 |
| 92 93 069 | 08A | 117 | 5-E22 |
| 92 93 069 | 08A | 127 | 5-F08 |
| 92 93 085 | 08A | 117 | 5-E22 |
| 92 93 085 | 08A | 127 | 5-F08 |
| 92 93 358 | 08A | 053 | 5-C06 |
| 92 93 366 | 08A | 053 | 5-C06 |
| 92 93 382 | 08A | 099 | 5-E04 |
| 92 93 473 | 08A | 061 | 5-C14 |
| 92 93 481 | 08A | 061 | 5-C14 |
| 92 93 499 | 08A | 099 | 5-E04 |
| 92 93 523 | 08A | 035 | 5-B12 |
| 92 93 523 | 08A | 083 | 5-D12 |
| 92 93 549 | 08A | 099 | 5-E04 |
| 92 93 580 | 08A | 083 | 5-D12 |
| 92 93 630 | 08A | 109 | 5-E14 |
| 92 93 648 | 08A | 109 | 5-E14 |
| 92 93 697 | 08A | 109 | 5-E14 |
| 92 93 697 | 08A | 111 | 5-E16 |
| 92 93 739 | 08A | 109 | 5-E14 |
| 92 93 739 | 08A | 111 | 5-E16 |
| 92 93 838 | 08A | 079 | 5-D08 |
| 92 93 846 | 08A | 079 | 5-D08 |
| 92 93 853 | 08A | 079 | 5-D08 |
| 92 93 861 | 08A | 079 | 5-D08 |
| 92 93 879 | 08A | 075 | 5-D04 |
| 92 93 887 | 08A | 075 | 5-D04 |
| 92 93 895 | 08A | 075 | 5-D04 |
| 92 93 903 | 08A | 075 | 5-D04 |
| 92 93 911 | 08A | 093 | 5-D22 |
| 92 93 937 | 08A | 093 | 5-D22 |
| 92 93 986 | 08A | 093 | 5-D22 |
| 92 94 059 | 08A | 093 | 5-D22 |
| 92 94 075 | 08A | 093 | 5-D22 |
| 92 94 083 | 08A | 093 | 5-D22 |
| 92 94 174 | 08A | 099 | 5-E04 |
| 92 94 182 | 08A | 099 | 5-E04 |
| 92 94 265 | 08A | 103 | 5-E08 |
| 92 94 281 | 08A | 143 | 5-F24 |

| Part No<br>Art nr | Gr<br>Gr | Page<br>Sida | Grid<br>Koord |
|---|---|---|---|
| 92 94 331 | 08A | 143 | 5-F24 |
| 92 94 349 | 08A | 143 | 5-F24 |
| 92 94 471 | 08A | 147 | 5-G04 |
| 92 94 539 | 08A | 149 | 5-G06 |
| 92 94 547 | 08A | 149 | 5-G06 |
| 92 94 646 | 09 | 015 | 7-D16 |
| 92 95 163 | 08A | 137 | 5-F18 |
| 92 95 171 | 08A | 137 | 5-F18 |
| 92 95 189 | 08A | 139 | 5-F20 |
| 92 95 197 | 08A | 139 | 5-F20 |
| 92 95 437 | 08A | 139 | 5-F20 |
| 92 95 445 | 08A | 139 | 5-F20 |
| 92 95 635 | 08A | 081 | 5-D10 |
| 92 95 643 | 08A | 081 | 5-D10 |
| 92 95 650 | 08A | 081 | 5-D10 |
| 92 95 833 | 08A | 139 | 5-F20 |
| 92 96 534 | 08A | 137 | 5-F18 |
| 92 96 542 | 08A | 137 | 5-F18 |
| 92 96 559 | 08A | 137 | 5-F18 |
| 92 96 567 | 08A | 137 | 5-F18 |
| 92 96 575 | 08A | 137 | 5-F18 |
| 92 96 583 | 08A | 137 | 5-F18 |
| 92 96 658 | 08A | 139 | 5-F20 |
| 92 96 666 | 08A | 139 | 5-F20 |
| 92 97 037 | 08A | 079 | 5-D08 |
| 92 97 045 | 08A | 079 | 5-D08 |
| 92 97 151 | 08A | 015 | 5-A16 |
| 92 97 532 | 08A | 015 | 5-A16 |
| 92 97 540 | 08A | 015 | 5-A16 |
| 92 97 698 | 08A | 095 | 5-D24 |
| 92 97 706 | 08A | 095 | 5-D24 |
| 92 97 714 | 08A | 095 | 5-D24 |
| 92 97 839 | 08A | 125 | 5-F06 |
| 92 97 847 | 08A | 125 | 5-F06 |
| 92 97 854 | 08A | 125 | 5-F06 |
| 92 97 862 | 08A | 125 | 5-F06 |
| 92 98 175 | 08A | 137 | 5-F18 |
| 92 98 183 | 08A | 139 | 5-F20 |
| 92 98 522 | 08A | 139 | 5-F20 |
| 92 99 173 | 08A | 071 | 5-C24 |
| 92 99 181 | 08A | 071 | 5-C24 |
| 92 99 678 | 08A | 129 | 5-F10 |
| 92 99 686 | 08A | 129 | 5-F10 |
| 93 00 203 | 04 | 075 | 3-K04 |
| 93 00 211 | 04 | 075 | 3-K04 |
| 93 00 286 | 04 | 069 | 3-J22 |
| 93 00 302 | 02 | 093 | 1-E22 |
| 93 00 369 | 02 | 063 | 1-D16 |
| 93 00 476 | 02 | 189 | 1-I22 |
| 93 00 591 | 02 | 037 | 1-C14 |
| 93 00 625 | 02 | 085 | 1-E14 |
| 93 00 625 | 02 | 105 | 1-F10 |
| 93 01 177 | 02 | 099 | 1-F04 |
| 93 01 383 | 02 | 169 | 1-I02 |
| 93 01 425 | 04 | 079 | 3-K08 |
| 93 01 482 | 02 | 193 | 1-J02 |
| 93 01 508 | 02 | 163 | 1-H20 |
| 93 01 508 | 02 | 165 | 1-H22 |
| 93 01 508 | 02 | 167 | 1-H24 |
| 93 01 508 | 02 | 169 | 1-I02 |





| Part No<br>Art nr | Gr<br>Gr | Page<br>Sida | Grid<br>Koord |
|---|---|---|---|
| 93 01 532 | 02 | 163 | 1-H20 |
| 93 01 532 | 02 | 167 | 1-H24 |
| 93 01 532 | 02 | 169 | 1-I02 |
| 93 01 532 | 02 | 193 | 1-J02 |
| 93 01 532 | 04 | 081 | 3-K10 |
| 93 01 540 | 02 | 037 | 1-C14 |
| 93 01 631 | 04 | 075 | 3-K04 |
| 93 01 698 | 04 | 075 | 3-K04 |
| 93 01 706 | 02 | 181 | 1-I14 |
| 93 01 706 | 02 | 183 | 1-I16 |
| 93 01 706 | 02 | 193 | 1-J02 |
| 93 01 714 | 02 | 193 | 1-J02 |
| 93 01 722 | 02 | 193 | 1-J02 |
| 93 01 797 | 04 | 075 | 3-K04 |
| 93 02 787 | 02 | 157 | 1-H14 |
| 93 02 803 | 02 | 157 | 1-H14 |
| 93 02 936 | 02 | 083 | 1-E12 |
| 93 02 944 | 02 | 083 | 1-E12 |
| 93 02 951 | 02 | 083 | 1-E12 |
| 93 03 181 | 02 | 049 | 1-D02 |
| 93 03 207 | 02 | 049 | 1-D02 |
| 93 03 413 | 02 | 057 | 1-D10 |
| 93 03 678 | 04 | 079 | 3-K08 |
| 93 03 751 | 04 | 063 | 3-J16 |
| 93 03 892 | 02 | 049 | 1-D02 |
| 93 03 900 | 02 | 049 | 1-D02 |
| 93 04 775 | 02 | 093 | 1-E22 |
| 93 05 053 | 03A | 019 | 2-A20 |
| 93 06 317 | 02 | 041 | 1-C18 |
| 93 06 705 | 02 | 055 | 1-D08 |
| 93 06 721 | 02 | 015 | 1-B16 |
| 93 06 721 | 02 | 055 | 1-D08 |
| 93 06 747 | 02 | 027 | 1-C04 |
| 93 06 804 | 02 | 199 | 1-J08 |
| 93 06 812 | 02 | 121 | 1-G02 |
| 93 06 812 | 02 | 123 | 1-G04 |
| 93 06 812 | 02 | 125 | 1-G06 |
| 93 06 812 | 02 | 199 | 1-J08 |
| 93 06 820 | 02 | 121 | 1-G02 |
| 93 06 820 | 02 | 123 | 1-G04 |
| 93 06 820 | 02 | 125 | 1-G06 |
| 93 06 820 | 02 | 199 | 1-J08 |
| 93 07 257 | 02 | 097 | 1-F02 |
| 93 07 265 | 02 | 099 | 1-F04 |
| 93 07 356 | 02 | 013 | 1-B14 |
| 93 07 497 | 02 | 175 | 1-I08 |
| 93 07 778 | 02 | 041 | 1-C18 |
| 93 07 935 | 08C | 033 | 7-B10 |
| 93 07 935 | 08C | 039 | 7-B16 |
| 93 07 935 | 08C | 043 | 7-B20 |
| 93 08 180 | 02 | 037 | 1-C14 |
| 93 08 453 | 02 | 013 | 1-B14 |
| 93 08 537 | 02 | 021 | 1-B22 |
| 93 08 693 | 02 | 015 | 1-B16 |
| 93 08 719 | 08C | 035 | 7-B12 |
| 93 08 719 | 08C | 039 | 7-B16 |
| 93 08 719 | 08C | 043 | 7-B20 |
| 93 08 792 | 02 | 041 | 1-C18 |
| 93 08 792 | 02 | 191 | 1-I24 |
| 93 08 941 | 02 | 105 | 1-F10 |

| Part No<br>Art nr | Gr<br>Gr | Page<br>Sida | Grid<br>Koord |
|---|---|---|---|
| 93 08 974 | 02 | 111 | 1-F16 |
| 93 08 982 | 02 | 105 | 1-F10 |
| 93 08 990 | 03A | 021 | 2-A22 |
| 93 09 204 | 02 | 025 | 1-C02 |
| 93 09 204 | 02 | 187 | 1-I20 |
| 93 09 261 | 02 | 043 | 1-C20 |
| 93 09 261 | 02 | 103 | 1-F08 |
| 93 09 261 | 02 | 107 | 1-F12 |
| 93 09 261 | 02 | 113 | 1-F18 |
| 93 09 303 | 03A | 019 | 2-A20 |
| 93 09 386 | 02 | 037 | 1-C14 |
| 93 09 576 | 02 | 037 | 1-C14 |
| 93 09 576 | 02 | 197 | 1-J06 |
| 93 09 956 | 03A | 025 | 2-B02 |
| 93 09 998 | 02 | 037 | 1-C14 |
| 93 10 004 | 02 | 037 | 1-C14 |
| 93 10 004 | 02 | 121 | 1-G02 |
| 93 10 004 | 02 | 175 | 1-I08 |
| 93 10 152 | 02 | 085 | 1-E14 |
| 93 10 186 | 02 | 043 | 1-C20 |
| 93 11 481 | 02 | 175 | 1-I08 |
| 93 11 697 | 02 | 175 | 1-I08 |
| 93 11 895 | 02 | 103 | 1-F08 |
| 93 11 895 | 02 | 107 | 1-F12 |
| 93 12 042 | 02 | 175 | 1-I08 |
| 93 12 059 | 02 | 195 | 1-J04 |
| 93 12 471 | 02 | 103 | 1-F08 |
| 93 12 471 | 02 | 107 | 1-F12 |
| 93 12 802 | 02 | 097 | 1-F02 |
| 93 12 802 | 02 | 099 | 1-F04 |
| 93 12 802 | 02 | 101 | 1-F06 |
| 93 12 927 | 02 | 055 | 1-D08 |
| 93 13 008 | 02 | 043 | 1-C20 |
| 93 13 131 | 02 | 043 | 1-C20 |
| 93 13 222 | 02 | 173 | 1-I06 |
| 93 13 909 | 02 | 105 | 1-F10 |
| 93 13 909 | 02 | 111 | 1-F16 |
| 93 13 909 | 02 | 117 | 1-F22 |
| 93 14 048 | 02 | 181 | 1-I14 |
| 93 14 139 | 02 | 187 | 1-I20 |
| 93 14 162 | 02 | 129 | 1-G10 |
| 93 14 162 | 02 | 131 | 1-G12 |
| 93 14 501 | 02 | 115 | 1-F20 |
| 93 14 881 | 02 | 035 | 1-C12 |
| 93 15 151 | 02 | 083 | 1-E12 |
| 93 15 177 | 02 | 083 | 1-E12 |
| 93 15 185 | 02 | 083 | 1-E12 |
| 93 15 193 | 02 | 083 | 1-E12 |
| 93 15 201 | 02 | 083 | 1-E12 |
| 93 15 219 | 02 | 083 | 1-E12 |
| 93 15 227 | 02 | 083 | 1-E12 |
| 93 15 235 | 02 | 083 | 1-E12 |
| 93 15 243 | 02 | 083 | 1-E12 |
| 93 15 292 | 02 | 083 | 1-E12 |
| 93 15 466 | 02 | 043 | 1-C20 |
| 93 15 466 | 02 | 045 | 1-C22 |
| 93 15 953 | 02 | 099 | 1-F04 |
| 93 16 142 | 02 | 179 | 1-I12 |
| 93 16 407 | 02 | 149 | 1-H06 |
| 93 16 407 | 02 | 151 | 1-H08 |

| Part No<br>Art nr | Gr<br>Gr | Page<br>Sida | Grid<br>Koord |
|---|---|---|---|
| 93 16 407 | 02 | 201 | 1-J10 |
| 93 16 415 | 02 | 009 | 1-B10 |
| 93 16 662 | 02 | 195 | 1-J04 |
| 93 16 910 | 04 | 049 | 3-J02 |
| 93 16 977 | 04 | 075 | 3-K04 |
| 93 17 058 | 02 | 149 | 1-H06 |
| 93 17 058 | 02 | 151 | 1-H08 |
| 93 17 165 | 04 | 057 | 3-J10 |
| 93 17 231 | 02 | 083 | 1-E12 |
| 93 17 249 | 02 | 083 | 1-E12 |
| 93 17 256 | 02 | 083 | 1-E12 |
| 93 17 272 | 02 | 083 | 1-E12 |
| 93 17 348 | 04 | 069 | 3-J22 |
| 93 17 439 | 04 | 069 | 3-J22 |
| 93 17 694 | 04 | 073 | 3-K02 |
| 93 17 785 | 04 | 073 | 3-K02 |
| 93 17 793 | 04 | 073 | 3-K02 |
| 93 17 801 | 04 | 073 | 3-K02 |
| 93 17 991 | 02 | 049 | 1-D02 |
| 93 18 197 | 04 | 075 | 3-K04 |
| 93 18 304 | 02 | 153 | 1-H10 |
| 93 18 361 | 02 | 057 | 1-D10 |
| 93 18 502 | 02 | 047 | 1-C24 |
| 93 18 502 | 02 | 049 | 1-D02 |
| 93 18 908 | 04 | 075 | 3-K04 |
| 93 19 047 | 02 | 137 | 1-G18 |
| 93 19 047 | 02 | 139 | 1-G20 |
| 93 19 047 | 02 | 143 | 1-G24 |
| 93 19 047 | 02 | 145 | 1-H02 |
| 93 19 047 | 02 | 147 | 1-H04 |
| 93 19 047 | 02 | 149 | 1-H06 |
| 93 19 047 | 02 | 151 | 1-H08 |
| 93 19 153 | 04 | 079 | 3-K08 |
| 93 19 526 | 02 | 047 | 1-C24 |
| 93 19 526 | 02 | 049 | 1-D02 |
| 93 19 955 | 02 | 075 | 1-E04 |
| 93 19 971 | 02 | 075 | 1-E04 |
| 93 20 268 | 02 | 165 | 1-H22 |
| 93 20 268 | 04 | 079 | 3-K08 |
| 93 20 284 | 02 | 175 | 1-I08 |
| 93 20 284 | 02 | 195 | 1-J04 |
| 93 20 383 | 02 | 197 | 1-J06 |
| 93 20 987 | 04 | 075 | 3-K04 |
| 93 20 987 | 04 | 079 | 3-K08 |
| 93 21 241 | 04 | 029 | 3-I06 |
| 93 21 241 | 04 | 079 | 3-K08 |
| 93 21 266 | 04 | 035 | 3-I12 |
| 93 21 266 | 04 | 081 | 3-K10 |
| 93 21 308 | 04 | 009 | 3-H10 |
| 93 21 555 | 02 | 137 | 1-G18 |
| 93 21 555 | 02 | 141 | 1-G22 |
| 93 21 555 | 02 | 145 | 1-H02 |
| 93 21 555 | 02 | 147 | 1-H04 |
| 93 21 555 | 02 | 201 | 1-J10 |
| 93 21 563 | 02 | 149 | 1-H06 |
| 93 21 563 | 02 | 151 | 1-H08 |
| 93 21 563 | 02 | 201 | 1-J10 |
| 93 21 589 | 02 | 035 | 1-C12 |
| 93 21 720 | 02 | 183 | 1-I16 |
| 93 21 761 | 03A | 021 | 2-A22 |

| Part No<br>Art nr | Gr<br>Gr | Page<br>Sida | Grid<br>Koord |
|---|---|---|---|
| 93 21 795 | 02 | 021 | 1-B22 |
| 93 21 795 | 02 | 025 | 1-C02 |
| 93 21 795 | 04 | 015 | 3-H16 |
| 93 21 795 | 04 | 023 | 3-H24 |
| 93 21 837 | 02 | 027 | 1-C04 |
| 93 22 660 | 02 | 075 | 1-E04 |
| 93 22 785 | 04 | 049 | 3-J02 |
| 93 22 785 | 04 | 075 | 3-K04 |
| 93 23 361 | 04 | 079 | 3-K08 |
| 93 23 742 | 02 | 009 | 1-B10 |
| 93 23 759 | 02 | 009 | 1-B10 |
| 93 24 021 | 02 | 059 | 1-D12 |
| 93 24 021 | 02 | 061 | 1-D14 |
| 93 24 021 | 02 | 067 | 1-D20 |
| 93 24 021 | 02 | 069 | 1-D22 |
| 93 24 138 | 02 | 061 | 1-D14 |
| 93 24 138 | 02 | 069 | 1-D22 |
| 93 24 211 | 02 | 075 | 1-E04 |
| 93 24 260 | 04 | 049 | 3-J02 |
| 93 24 591 | 04 | 081 | 3-K10 |
| 93 24 609 | 02 | 155 | 1-H12 |
| 93 24 658 | 02 | 155 | 1-H12 |
| 93 24 666 | 02 | 155 | 1-H12 |
| 93 24 708 | 04 | 049 | 3-J02 |
| 93 24 708 | 04 | 075 | 3-K04 |
| 93 24 815 | 02 | 063 | 1-D16 |
| 93 24 914 | 06 | 019 | 4-C20 |
| 93 24 914 | 06 | 023 | 4-C24 |
| 93 24 930 | 02 | 009 | 1-B10 |
| 93 25 481 | 02 | 095 | 1-E24 |
| 93 25 663 | 08C | 017 | 7-A18 |
| 93 25 663 | 08C | 039 | 7-B16 |
| 93 25 663 | 08C | 049 | 7-C02 |
| 93 25 705 | 06 | 019 | 4-C20 |
| 93 25 705 | 06 | 023 | 4-C24 |
| 93 25 713 | 06 | 019 | 4-C20 |
| 93 25 713 | 06 | 023 | 4-C24 |
| 93 26 216 | 02 | 193 | 1-J02 |
| 93 26 380 | 04 | 049 | 3-J02 |
| 93 26 448 | 02 | 143 | 1-G24 |
| 93 26 752 | 02 | 095 | 1-E24 |
| 93 28 105 | 02 | 137 | 1-G18 |
| 93 28 105 | 02 | 139 | 1-G20 |
| 93 28 105 | 02 | 143 | 1-G24 |
| 93 28 105 | 02 | 145 | 1-H02 |
| 93 28 105 | 02 | 147 | 1-H04 |
| 93 28 105 | 02 | 149 | 1-H06 |
| 93 28 105 | 02 | 151 | 1-H08 |
| 93 28 105 | 02 | 197 | 1-J06 |
| 93 28 105 | 02 | 199 | 1-J08 |
| 93 28 105 | 02 | 201 | 1-J10 |
| 93 28 105 | 02 | 205 | 1-J14 |
| 93 28 519 | 02 | 063 | 1-D16 |
| 93 28 824 | 02 | 085 | 1-E14 |
| 93 28 824 | 04 | 013 | 3-H14 |
| 93 28 824 | 04 | 019 | 3-H20 |
| 93 28 857 | 02 | 059 | 1-D12 |
| 93 28 857 | 02 | 061 | 1-D14 |
| 93 28 857 | 02 | 067 | 1-D20 |
| 93 28 857 | 02 | 069 | 1-D22 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

# 7-F23 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 93 28 873 | 02 | 059 | 1-D12 |
| 93 28 899 | 02 | 063 | 1-D16 |
| 93 28 899 | 02 | 067 | 1-D20 |
| 93 29 210 | 02 | 063 | 1-D16 |
| 93 29 442 | 02 | 121 | 1-G02 |
| 93 29 483 | 08A | 091 | 5-D20 |
| 93 29 491 | 02 | 059 | 1-D12 |
| 93 29 491 | 02 | 061 | 1-D14 |
| 93 29 491 | 02 | 067 | 1-D20 |
| 93 29 491 | 02 | 069 | 1-D22 |
| 93 29 855 | 02 | 059 | 1-D12 |
| 93 29 855 | 02 | 063 | 1-D16 |
| 93 29 855 | 02 | 071 | 1-D24 |
| 93 30 184 | 02 | 025 | 1-C02 |
| 93 30 184 | 08C | 033 | 7-B10 |
| 93 30 184 | 08C | 037 | 7-B14 |
| 93 30 184 | 08C | 039 | 7-B16 |
| 93 30 184 | 08C | 043 | 7-B20 |
| 93 30 184 | 08C | 045 | 7-B22 |
| 93 30 184 | 08C | 049 | 7-C02 |
| 93 30 184 | 08C | 051 | 7-C04 |
| 93 30 440 | 04 | 079 | 3-K08 |
| 93 30 515 | 02 | 153 | 1-H10 |
| 93 31 174 | 02 | 049 | 1-D02 |
| 93 31 521 | 04 | 075 | 3-K04 |
| 93 31 539 | 04 | 049 | 3-J02 |
| 93 31 554 | 02 | 075 | 1-E04 |
| 93 31 554 | 02 | 079 | 1-E08 |
| 93 31 562 | 08C | 017 | 7-A18 |
| 93 31 562 | 08C | 027 | 7-B04 |
| 93 31 562 | 08C | 033 | 7-B10 |
| 93 31 562 | 08C | 043 | 7-B20 |
| 93 31 596 | 02 | 121 | 1-G02 |
| 93 31 612 | 02 | 121 | 1-G02 |
| 93 31 893 | 02 | 049 | 1-D02 |
| 93 32 057 | 02 | 049 | 1-D02 |
| 93 32 081 | 02 | 049 | 1-D02 |
| 93 32 453 | 02 | 151 | 1-H08 |
| 93 32 461 | 02 | 139 | 1-G20 |
| 93 32 461 | 02 | 143 | 1-G24 |
| 93 32 818 | 02 | 153 | 1-H10 |
| 93 32 826 | 02 | 153 | 1-H10 |
| 93 32 826 | 08C | 037 | 7-B14 |
| 93 32 826 | 08C | 039 | 7-B16 |
| 93 32 826 | 08C | 043 | 7-B20 |
| 93 32 826 | 08C | 045 | 7-B22 |
| 93 32 826 | 08C | 049 | 7-C02 |
| 93 32 826 | 08C | 051 | 7-C04 |
| 93 33 600 | 02 | 059 | 1-D12 |
| 93 33 600 | 02 | 063 | 1-D16 |
| 93 33 600 | 02 | 067 | 1-D20 |
| 93 33 600 | 02 | 071 | 1-D24 |
| 93 33 790 | 02 | 063 | 1-D16 |
| 93 33 790 | 02 | 071 | 1-D24 |
| 93 33 840 | 02 | 139 | 1-G20 |
| 93 33 840 | 02 | 143 | 1-G24 |
| 93 33 857 | 02 | 151 | 1-H08 |
| 93 33 857 | 02 | 201 | 1-J10 |
| 93 34 632 | 02 | 059 | 1-D12 |
| 93 34 665 | 04 | 057 | 3-J10 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 93 34 681 | 04 | 057 | 3-J10 |
| 93 34 699 | 04 | 057 | 3-J10 |
| 93 34 707 | 04 | 057 | 3-J10 |
| 93 34 749 | 04 | 071 | 3-J24 |
| 93 34 756 | 04 | 063 | 3-J16 |
| 93 34 764 | 04 | 063 | 3-J16 |
| 93 34 772 | 04 | 057 | 3-J10 |
| 93 34 780 | 04 | 059 | 3-J12 |
| 93 34 780 | 04 | 077 | 3-K06 |
| 93 34 806 | 04 | 059 | 3-J12 |
| 93 34 814 | 04 | 071 | 3-J24 |
| 93 34 822 | 04 | 071 | 3-J24 |
| 93 34 863 | 04 | 073 | 3-K02 |
| 93 34 889 | 04 | 065 | 3-J18 |
| 93 34 913 | 04 | 065 | 3-J18 |
| 93 34 939 | 04 | 065 | 3-J18 |
| 93 34 947 | 04 | 065 | 3-J18 |
| 93 34 962 | 04 | 065 | 3-J18 |
| 93 34 970 | 04 | 065 | 3-J18 |
| 93 34 988 | 04 | 065 | 3-J18 |
| 93 34 996 | 04 | 063 | 3-J16 |
| 93 35 001 | 04 | 063 | 3-J16 |
| 93 35 019 | 04 | 063 | 3-J16 |
| 93 35 027 | 04 | 063 | 3-J16 |
| 93 35 035 | 04 | 063 | 3-J16 |
| 93 35 050 | 04 | 063 | 3-J16 |
| 93 35 118 | 02 | 057 | 1-D10 |
| 93 35 118 | 02 | 201 | 1-J10 |
| 93 35 118 | 02 | 203 | 1-J12 |
| 93 35 118 | 02 | 205 | 1-J14 |
| 93 35 241 | 04 | 071 | 3-J24 |
| 93 35 266 | 04 | 071 | 3-J24 |
| 93 35 290 | 04 | 071 | 3-J24 |
| 93 35 308 | 04 | 071 | 3-J24 |
| 93 35 324 | 04 | 071 | 3-J24 |
| 93 35 340 | 04 | 071 | 3-J24 |
| 93 35 357 | 04 | 071 | 3-J24 |
| 93 35 365 | 04 | 071 | 3-J24 |
| 93 35 373 | 04 | 071 | 3-J24 |
| 93 35 381 | 04 | 071 | 3-J24 |
| 93 35 407 | 04 | 057 | 3-J10 |
| 93 35 407 | 04 | 077 | 3-K06 |
| 93 35 423 | 04 | 057 | 3-J10 |
| 93 35 423 | 04 | 077 | 3-K06 |
| 93 35 431 | 04 | 059 | 3-J12 |
| 93 35 449 | 04 | 059 | 3-J12 |
| 93 35 456 | 04 | 059 | 3-J12 |
| 93 35 456 | 04 | 077 | 3-K06 |
| 93 35 472 | 04 | 063 | 3-J16 |
| 93 35 472 | 04 | 079 | 3-K08 |
| 93 35 514 | 04 | 065 | 3-J18 |
| 93 35 522 | 04 | 065 | 3-J18 |
| 93 35 563 | 04 | 061 | 3-J14 |
| 93 35 563 | 04 | 077 | 3-K06 |
| 93 35 670 | 04 | 057 | 3-J10 |
| 93 35 688 | 04 | 057 | 3-J10 |
| 93 35 696 | 04 | 063 | 3-J16 |
| 93 35 738 | 04 | 059 | 3-J12 |
| 93 35 753 | 04 | 059 | 3-J12 |
| 93 35 787 | 04 | 059 | 3-J12 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 93 35 795 | 04 | 059 | 3-J12 |
| 93 35 803 | 04 | 059 | 3-J12 |
| 93 35 811 | 04 | 059 | 3-J12 |
| 93 35 829 | 04 | 059 | 3-J12 |
| 93 36 041 | 04 | 063 | 3-J16 |
| 93 36 074 | 04 | 065 | 3-J18 |
| 93 36 116 | 04 | 065 | 3-J18 |
| 93 36 132 | 04 | 065 | 3-J18 |
| 93 36 140 | 04 | 065 | 3-J18 |
| 93 36 157 | 04 | 065 | 3-J18 |
| 93 36 207 | 04 | 073 | 3-K02 |
| 93 36 835 | 02 | 175 | 1-I08 |
| 93 36 835 | 02 | 195 | 1-J04 |
| 93 36 868 | 02 | 197 | 1-J06 |
| 93 37 213 | 02 | 015 | 1-B16 |
| 93 37 213 | 02 | 187 | 1-I20 |
| 93 37 221 | 02 | 015 | 1-B16 |
| 93 37 221 | 02 | 187 | 1-I20 |
| 93 37 239 | 02 | 015 | 1-B16 |
| 93 37 239 | 02 | 187 | 1-I20 |
| 93 37 247 | 02 | 015 | 1-B16 |
| 93 37 247 | 02 | 187 | 1-I20 |
| 93 37 254 | 02 | 015 | 1-B16 |
| 93 37 254 | 02 | 187 | 1-I20 |
| 93 37 270 | 02 | 165 | 1-H22 |
| 93 37 270 | 02 | 193 | 1-J02 |
| 93 37 346 | 03A | 017 | 2-A18 |
| 93 37 346 | 03A | 147 | 2-G04 |
| 93 37 437 | 04 | 035 | 3-I12 |
| 93 37 437 | 04 | 079 | 3-K08 |
| 93 37 445 | 04 | 049 | 3-J02 |
| 93 37 445 | 04 | 079 | 3-K08 |
| 93 37 510 | 02 | 075 | 1-E04 |
| 93 37 510 | 02 | 079 | 1-E08 |
| 93 37 528 | 02 | 077 | 1-E06 |
| 93 37 528 | 02 | 079 | 1-E08 |
| 93 37 551 | 02 | 175 | 1-I08 |
| 93 37 551 | 02 | 195 | 1-J04 |
| 93 37 734 | 02 | 085 | 1-E14 |
| 93 38 005 | 04 | 063 | 3-J16 |
| 93 38 013 | 04 | 063 | 3-J16 |
| 93 38 542 | 06 | 019 | 4-C20 |
| 93 38 542 | 06 | 023 | 4-C24 |
| 93 39 243 | 04 | 075 | 3-K04 |
| 93 39 375 | 02 | 095 | 1-E24 |
| 93 39 433 | 08C | 033 | 7-B10 |
| 93 39 615 | 08C | 017 | 7-A18 |
| 93 39 615 | 08C | 021 | 7-A22 |
| 93 39 615 | 08C | 027 | 7-B04 |
| 93 39 615 | 08C | 033 | 7-B10 |
| 93 39 615 | 08C | 037 | 7-B14 |
| 93 39 615 | 08C | 039 | 7-B16 |
| 93 39 615 | 08C | 043 | 7-B20 |
| 93 39 615 | 08C | 045 | 7-B22 |
| 93 39 615 | 08C | 049 | 7-C02 |
| 93 39 615 | 08C | 051 | 7-C04 |
| 93 39 623 | 08C | 017 | 7-A18 |
| 93 39 623 | 08C | 027 | 7-B04 |
| 93 39 623 | 08C | 033 | 7-B10 |
| 93 39 623 | 08C | 043 | 7-B20 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 93 39 805 | 02 | 057 | 1-D10 |
| 93 39 979 | 04 | 057 | 3-J10 |
| 93 39 987 | 04 | 057 | 3-J10 |
| 93 41 009 | 04 | 065 | 3-J18 |
| 93 41 017 | 04 | 065 | 3-J18 |
| 93 41 025 | 04 | 065 | 3-J18 |
| 93 41 033 | 04 | 065 | 3-J18 |
| 93 41 041 | 04 | 065 | 3-J18 |
| 93 41 058 | 04 | 065 | 3-J18 |
| 93 41 066 | 04 | 065 | 3-J18 |
| 93 41 074 | 04 | 065 | 3-J18 |
| 93 41 082 | 04 | 065 | 3-J18 |
| 93 41 090 | 04 | 065 | 3-J18 |
| 93 41 108 | 04 | 065 | 3-J18 |
| 93 41 116 | 04 | 065 | 3-J18 |
| 93 41 124 | 04 | 065 | 3-J18 |
| 93 41 173 | 02 | 047 | 1-C24 |
| 93 41 173 | 02 | 049 | 1-D02 |
| 93 41 215 | 02 | 095 | 1-E24 |
| 93 41 215 | 02 | 133 | 1-G14 |
| 93 41 330 | 04 | 059 | 3-J12 |
| 93 41 439 | 09 | 007 | 7-D08 |
| 93 41 629 | 02 | 085 | 1-E14 |
| 93 41 637 | 02 | 085 | 1-E14 |
| 93 41 652 | 02 | 085 | 1-E14 |
| 93 41 769 | 02 | 095 | 1-E24 |
| 93 41 793 | 02 | 087 | 1-E16 |
| 93 41 801 | 02 | 087 | 1-E16 |
| 93 42 064 | 02 | 185 | 1-I18 |
| 93 42 221 | 02 | 085 | 1-E14 |
| 93 42 239 | 02 | 185 | 1-I18 |
| 93 42 270 | 02 | 185 | 1-I18 |
| 93 42 338 | 04 | 049 | 3-J02 |
| 93 42 338 | 04 | 075 | 3-K04 |
| 93 42 346 | 04 | 049 | 3-J02 |
| 93 42 346 | 04 | 075 | 3-K04 |
| 93 42 353 | 04 | 049 | 3-J02 |
| 93 42 353 | 04 | 075 | 3-K04 |
| 93 42 361 | 04 | 049 | 3-J02 |
| 93 42 361 | 04 | 075 | 3-K04 |
| 93 42 619 | 02 | 185 | 1-I18 |
| 93 42 734 | 04 | 049 | 3-J02 |
| 93 42 734 | 04 | 075 | 3-K04 |
| 93 42 734 | 04 | 079 | 3-K08 |
| 93 44 078 | 04 | 079 | 3-K08 |
| 93 44 102 | 04 | 065 | 3-J18 |
| 93 44 110 | 04 | 063 | 3-J16 |
| 93 44 110 | 04 | 079 | 3-K08 |
| 93 44 177 | 09 | 015 | 7-D16 |
| 93 44 219 | 04 | 063 | 3-J16 |
| 93 44 227 | 04 | 063 | 3-J16 |
| 93 44 250 | 04 | 065 | 3-J18 |
| 93 44 276 | 03A | 019 | 2-A20 |
| 93 44 300 | 04 | 049 | 3-J02 |
| 93 44 524 | 02 | 155 | 1-H12 |
| 93 44 524 | 04 | 081 | 3-K10 |
| 93 44 623 | 08C | 019 | 7-A20 |
| 93 44 623 | 08C | 027 | 7-B04 |
| 93 44 623 | 08C | 033 | 7-B10 |
| 93 44 623 | 08C | 043 | 7-B20 |



# 7-F24 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 93 44 896 | 02 | 083 | 1-E12 |
| 93 45 091 | 02 | 153 | 1-H10 |
| 93 45 091 | 08C | 053 | 7-C06 |
| 93 45 190 | 08C | 017 | 7-A18 |
| 93 45 190 | 08C | 043 | 7-B20 |
| 93 45 257 | 02 | 049 | 1-D02 |
| 93 45 257 | 02 | 055 | 1-D08 |
| 93 45 257 | 04 | 073 | 3-K02 |
| 93 45 778 | 02 | 083 | 1-E12 |
| 93 45 786 | 02 | 083 | 1-E12 |
| 93 45 984 | 04 | 065 | 3-J18 |
| 93 45 984 | 04 | 079 | 3-K08 |
| 93 46 057 | 04 | 057 | 3-J10 |
| 93 46 206 | 02 | 049 | 1-D02 |
| 93 46 354 | 04 | 013 | 3-H14 |
| 93 46 354 | 04 | 019 | 3-H20 |
| 93 46 354 | 04 | 061 | 3-J14 |
| 93 46 362 | 04 | 013 | 3-H14 |
| 93 46 362 | 04 | 019 | 3-H20 |
| 93 46 362 | 04 | 061 | 3-J14 |
| 93 46 370 | 02 | 011 | 1-B12 |
| 93 46 370 | 04 | 013 | 3-H14 |
| 93 46 370 | 04 | 019 | 3-H20 |
| 93 46 370 | 04 | 061 | 3-J14 |
| 93 46 388 | 04 | 013 | 3-H14 |
| 93 46 388 | 04 | 019 | 3-H20 |
| 93 46 388 | 04 | 059 | 3-J12 |
| 93 46 461 | 02 | 049 | 1-D02 |
| 93 46 487 | 02 | 049 | 1-D02 |
| 93 46 685 | 02 | 085 | 1-E14 |
| 93 46 693 | 02 | 085 | 1-E14 |
| 93 46 701 | 02 | 085 | 1-E14 |
| 93 46 719 | 02 | 085 | 1-E14 |
| 93 47 758 | 04 | 079 | 3-K08 |
| 93 47 808 | 02 | 057 | 1-D10 |
| 93 47 816 | 04 | 049 | 3-J02 |
| 93 47 816 | 04 | 075 | 3-K04 |
| 93 47 949 | 04 | 071 | 3-J24 |
| 93 47 956 | 02 | 179 | 1-I12 |
| 93 48 004 | 02 | 179 | 1-I12 |
| 93 48 087 | 02 | 075 | 1-E04 |
| 93 48 103 | 02 | 075 | 1-E04 |
| 93 48 178 | 04 | 071 | 3-J24 |
| 93 48 533 | 04 | 051 | 3-J04 |
| 93 48 541 | 04 | 049 | 3-J02 |
| 93 48 558 | 04 | 049 | 3-J02 |
| 93 48 616 | 04 | 049 | 3-J02 |
| 93 48 665 | 04 | 049 | 3-J02 |
| 93 48 731 | 02 | 085 | 1-E14 |
| 93 48 764 | 09 | 015 | 7-D16 |
| 93 48 913 | 02 | 083 | 1-E12 |
| 93 48 988 | 04 | 059 | 3-J12 |
| 93 49 002 | 04 | 063 | 3-J16 |
| 93 49 143 | 02 | 137 | 1-G18 |
| 93 49 143 | 02 | 139 | 1-G20 |
| 93 49 143 | 02 | 145 | 1-H02 |
| 93 49 143 | 02 | 147 | 1-H04 |
| 93 49 143 | 02 | 201 | 1-J10 |
| 93 49 176 | 02 | 137 | 1-G18 |
| 93 49 176 | 02 | 147 | 1-H04 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 93 49 192 | 02 | 149 | 1-H06 |
| 93 49 192 | 02 | 151 | 1-H08 |
| 93 49 192 | 02 | 201 | 1-J10 |
| 93 49 382 | 02 | 153 | 1-H10 |
| 93 49 408 | 04 | 049 | 3-J02 |
| 93 49 549 | 04 | 075 | 3-K04 |
| 93 49 564 | 04 | 075 | 3-K04 |
| 93 49 614 | 02 | 075 | 1-E04 |
| 93 49 614 | 02 | 079 | 1-E08 |
| 93 49 655 | 02 | 075 | 1-E04 |
| 93 49 671 | 02 | 075 | 1-E04 |
| 93 49 671 | 02 | 079 | 1-E08 |
| 93 49 804 | 02 | 139 | 1-G20 |
| 93 49 804 | 02 | 143 | 1-G24 |
| 93 49 804 | 02 | 147 | 1-H04 |
| 93 49 804 | 02 | 149 | 1-H06 |
| 93 49 804 | 02 | 151 | 1-H08 |
| 93 49 804 | 02 | 203 | 1-J12 |
| 93 49 804 | 02 | 205 | 1-J14 |
| 93 49 812 | 02 | 179 | 1-I12 |
| 93 49 838 | 02 | 057 | 1-D10 |
| 93 49 929 | 02 | 059 | 1-D12 |
| 93 49 929 | 02 | 061 | 1-D14 |
| 93 49 929 | 02 | 067 | 1-D20 |
| 93 49 929 | 02 | 071 | 1-D24 |
| 93 49 937 | 02 | 059 | 1-D12 |
| 93 49 937 | 02 | 063 | 1-D16 |
| 93 49 937 | 02 | 067 | 1-D20 |
| 93 49 937 | 02 | 071 | 1-D24 |
| 93 49 945 | 02 | 059 | 1-D12 |
| 93 49 945 | 02 | 063 | 1-D16 |
| 93 49 945 | 02 | 067 | 1-D20 |
| 93 49 945 | 02 | 071 | 1-D24 |
| 93 50 158 | 02 | 021 | 1-B22 |
| 93 50 158 | 02 | 187 | 1-I20 |
| 93 50 208 | 02 | 129 | 1-G10 |
| 93 50 216 | 02 | 129 | 1-G10 |
| 93 50 216 | 02 | 133 | 1-G14 |
| 93 50 224 | 02 | 129 | 1-G10 |
| 93 50 224 | 02 | 131 | 1-G12 |
| 93 50 224 | 02 | 133 | 1-G14 |
| 93 50 372 | 02 | 181 | 1-I14 |
| 93 50 372 | 02 | 183 | 1-I16 |
| 93 50 380 | 02 | 181 | 1-I14 |
| 93 50 380 | 02 | 183 | 1-I16 |
| 93 50 471 | 02 | 181 | 1-I14 |
| 93 50 471 | 02 | 183 | 1-I16 |
| 93 50 505 | 02 | 181 | 1-I14 |
| 93 50 505 | 02 | 183 | 1-I16 |
| 93 50 505 | 02 | 193 | 1-J02 |
| 93 50 570 | 02 | 181 | 1-I14 |
| 93 50 570 | 02 | 183 | 1-I16 |
| 93 50 588 | 02 | 121 | 1-G02 |
| 93 50 588 | 02 | 123 | 1-G04 |
| 93 50 588 | 02 | 125 | 1-G06 |
| 93 50 588 | 02 | 199 | 1-J08 |
| 93 50 604 | 02 | 197 | 1-J06 |
| 93 50 620 | 02 | 197 | 1-J06 |
| 93 50 653 | 02 | 105 | 1-F10 |
| 93 50 653 | 02 | 111 | 1-F16 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 93 50 653 | 02 | 117 | 1-F22 |
| 93 50 653 | 02 | 119 | 1-F24 |
| 93 50 661 | 02 | 175 | 1-I08 |
| 93 50 687 | 02 | 175 | 1-I08 |
| 93 50 745 | 08C | 035 | 7-B12 |
| 93 50 745 | 08C | 039 | 7-B16 |
| 93 50 745 | 08C | 043 | 7-B20 |
| 93 50 752 | 02 | 115 | 1-F20 |
| 93 50 752 | 08C | 033 | 7-B10 |
| 93 50 752 | 08C | 039 | 7-B16 |
| 93 50 760 | 08C | 035 | 7-B12 |
| 93 50 760 | 08C | 039 | 7-B16 |
| 93 50 760 | 08C | 043 | 7-B20 |
| 93 51 438 | 02 | 175 | 1-I08 |
| 93 51 495 | 02 | 129 | 1-G10 |
| 93 51 495 | 02 | 131 | 1-G12 |
| 93 51 503 | 02 | 129 | 1-G10 |
| 93 51 594 | 03A | 019 | 2-A20 |
| 93 51 610 | 03A | 019 | 2-A20 |
| 93 51 636 | 03A | 019 | 2-A20 |
| 93 51 750 | 03A | 019 | 2-A20 |
| 93 51 800 | 02 | 013 | 1-B14 |
| 93 52 055 | 02 | 191 | 1-I24 |
| 93 52 063 | 02 | 191 | 1-I24 |
| 93 52 071 | 02 | 041 | 1-C18 |
| 93 52 105 | 02 | 041 | 1-C18 |
| 93 52 378 | 03A | 019 | 2-A20 |
| 93 53 442 | 02 | 173 | 1-I06 |
| 93 53 442 | 02 | 195 | 1-J04 |
| 93 53 673 | 03A | 013 | 2-A14 |
| 93 53 905 | 03A | 015 | 2-A16 |
| 93 54 705 | 02 | 015 | 1-B16 |
| 93 54 770 | 03A | 007 | 2-A08 |
| 93 54 770 | 03A | 009 | 2-A10 |
| 93 54 960 | 02 | 025 | 1-C02 |
| 93 54 960 | 03A | 007 | 2-A08 |
| 93 54 960 | 03A | 009 | 2-A10 |
| 93 54 978 | 02 | 173 | 1-I06 |
| 93 54 978 | 02 | 195 | 1-J04 |
| 93 55 181 | 02 | 173 | 1-I06 |
| 93 55 389 | 02 | 037 | 1-C14 |
| 93 55 470 | 03A | 019 | 2-A20 |
| 93 55 488 | 03A | 019 | 2-A20 |
| 93 55 496 | 03A | 019 | 2-A20 |
| 93 55 504 | 03A | 019 | 2-A20 |
| 93 55 512 | 03A | 019 | 2-A20 |
| 93 55 777 | 02 | 041 | 1-C18 |
| 93 55 884 | 03A | 013 | 2-A14 |
| 93 55 892 | 03A | 013 | 2-A14 |
| 93 55 900 | 03A | 013 | 2-A14 |
| 93 55 918 | 03A | 013 | 2-A14 |
| 93 55 926 | 03A | 013 | 2-A14 |
| 93 55 926 | 03A | 147 | 2-G04 |
| 93 55 934 | 03A | 013 | 2-A14 |
| 93 55 934 | 03A | 147 | 2-G04 |
| 93 55 942 | 03A | 013 | 2-A14 |
| 93 55 942 | 03A | 147 | 2-G04 |
| 93 55 959 | 03A | 013 | 2-A14 |
| 93 55 959 | 03A | 147 | 2-G04 |
| 93 55 991 | 02 | 015 | 1-B16 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 93 55 991 | 02 | 187 | 1-I20 |
| 93 56 114 | 02 | 041 | 1-C18 |
| 93 56 304 | 02 | 181 | 1-I14 |
| 93 56 312 | 02 | 181 | 1-I14 |
| 93 56 312 | 02 | 183 | 1-I16 |
| 93 56 338 | 02 | 181 | 1-I14 |
| 93 56 338 | 02 | 183 | 1-I16 |
| 93 56 486 | 02 | 091 | 1-E20 |
| 93 57 021 | 02 | 101 | 1-F06 |
| 93 57 716 | 02 | 017 | 1-B18 |
| 93 58 037 | 02 | 185 | 1-I18 |
| 93 58 045 | 02 | 015 | 1-B16 |
| 93 58 086 | 03A | 013 | 2-A14 |
| 93 58 094 | 03A | 013 | 2-A14 |
| 93 58 102 | 03A | 015 | 2-A16 |
| 93 58 177 | 02 | 101 | 1-F06 |
| 93 58 391 | 02 | 017 | 1-B18 |
| 93 58 672 | 02 | 027 | 1-C04 |
| 93 58 672 | 02 | 199 | 1-J08 |
| 93 58 680 | 02 | 027 | 1-C04 |
| 93 58 680 | 02 | 199 | 1-J08 |
| 93 58 854 | 02 | 027 | 1-C04 |
| 93 58 870 | 02 | 017 | 1-B18 |
| 93 59 050 | 02 | 103 | 1-F08 |
| 93 59 050 | 02 | 107 | 1-F12 |
| 93 59 050 | 02 | 113 | 1-F18 |
| 93 59 142 | 02 | 041 | 1-C18 |
| 93 59 480 | 02 | 097 | 1-F02 |
| 93 59 605 | 03A | 021 | 2-A22 |
| 93 59 605 | 03A | 149 | 2-G06 |
| 93 59 647 | 02 | 019 | 1-B20 |
| 93 59 647 | 02 | 189 | 1-I22 |
| 93 59 688 | 02 | 129 | 1-G10 |
| 93 59 779 | 02 | 027 | 1-C04 |
| 93 61 015 | 02 | 075 | 1-E04 |
| 93 61 064 | 04 | 069 | 3-J22 |
| 93 61 072 | 04 | 069 | 3-J22 |
| 93 61 163 | 04 | 049 | 3-J02 |
| 93 61 163 | 04 | 075 | 3-K04 |
| 93 61 452 | 04 | 013 | 3-H14 |
| 93 61 452 | 04 | 021 | 3-H22 |
| 93 61 452 | 04 | 059 | 3-J12 |
| 93 61 544 | 04 | 013 | 3-H14 |
| 93 61 544 | 04 | 021 | 3-H22 |
| 93 61 544 | 04 | 059 | 3-J12 |
| 93 61 551 | 04 | 065 | 3-J18 |
| 93 61 627 | 04 | 015 | 3-H16 |
| 93 61 627 | 04 | 021 | 3-H22 |
| 93 61 627 | 04 | 061 | 3-J14 |
| 93 61 627 | 04 | 085 | 3-K14 |
| 93 61 650 | 04 | 013 | 3-H14 |
| 93 61 650 | 04 | 021 | 3-H22 |
| 93 61 650 | 04 | 059 | 3-J12 |
| 93 61 668 | 02 | 075 | 1-E04 |
| 93 61 668 | 02 | 079 | 1-E08 |
| 93 61 791 | 06 | 019 | 4-C20 |
| 93 61 791 | 06 | 023 | 4-C24 |
| 93 61 957 | 02 | 059 | 1-D12 |
| 93 61 965 | 02 | 061 | 1-D14 |
| 93 61 965 | 02 | 069 | 1-D22 |



MASTER INDEX


0 General 1-A02
2 Engine 1-B02
3A Electrical general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 7-A02
9 Tools, labels 7-D02
10 Numerical register 7-E02

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 93 62 153 | 02 | 075 | 1-E04 |
| 93 62 211 | 02 | 061 | 1-D14 |
| 93 62 211 | 02 | 069 | 1-D22 |
| 93 62 260 | 02 | 075 | 1-E04 |
| 93 62 260 | 02 | 079 | 1-E08 |
| 93 62 286 | 04 | 063 | 3-J16 |
| 93 62 294 | 04 | 063 | 3-J16 |
| 93 62 310 | 04 | 065 | 3-J18 |
| 93 62 328 | 04 | 071 | 3-J24 |
| 93 62 419 | 09 | 011 | 7-D12 |
| 93 62 427 | 09 | 011 | 7-D12 |
| 93 62 435 | 09 | 011 | 7-D12 |
| 93 62 443 | 09 | 011 | 7-D12 |
| 93 62 450 | 09 | 011 | 7-D12 |
| 93 62 468 | 09 | 011 | 7-D12 |
| 93 62 534 | 09 | 015 | 7-D16 |
| 93 62 542 | 02 | 047 | 1-C24 |
| 93 62 542 | 04 | 015 | 3-H16 |
| 93 62 542 | 04 | 021 | 3-H22 |
| 93 62 542 | 04 | 061 | 3-J14 |
| 93 62 617 | 02 | 135 | 1-G16 |
| 93 62 658 | 04 | 005 | 3-H06 |
| 93 62 666 | 04 | 057 | 3-J10 |
| 93 62 781 | 02 | 057 | 1-D10 |
| 93 62 781 | 02 | 059 | 1-D12 |
| 93 62 781 | 02 | 065 | 1-D18 |
| 93 62 781 | 02 | 067 | 1-D20 |
| 93 62 781 | 02 | 071 | 1-D24 |
| 93 62 781 | 02 | 093 | 1-E22 |
| 93 62 856 | 04 | 073 | 3-K02 |
| 93 62 864 | 04 | 065 | 3-J18 |
| 93 62 880 | 04 | 065 | 3-J18 |
| 93 62 898 | 04 | 057 | 3-J10 |
| 93 62 906 | 04 | 063 | 3-J16 |
| 93 62 914 | 04 | 063 | 3-J16 |
| 93 62 997 | 02 | 169 | 1-I02 |
| 93 63 243 | 02 | 057 | 1-D10 |
| 93 63 250 | 02 | 059 | 1-D12 |
| 93 63 276 | 08C | 007 | 7-A08 |
| 93 63 284 | 02 | 055 | 1-D08 |
| 93 63 284 | 02 | 057 | 1-D10 |
| 93 63 359 | 02 | 059 | 1-D12 |
| 93 63 359 | 02 | 061 | 1-D14 |
| 93 63 359 | 02 | 069 | 1-D22 |
| 93 63 359 | 02 | 191 | 1-I24 |
| 93 63 383 | 02 | 057 | 1-D10 |
| 93 63 524 | 02 | 061 | 1-D14 |
| 93 63 524 | 02 | 069 | 1-D22 |
| 93 63 540 | 02 | 075 | 1-E04 |
| 93 63 540 | 02 | 079 | 1-E08 |
| 93 63 557 | 02 | 153 | 1-H10 |
| 93 63 615 | 02 | 169 | 1-I02 |
| 93 63 631 | 02 | 145 | 1-H02 |
| 93 63 649 | 02 | 149 | 1-H06 |
| 93 63 656 | 02 | 085 | 1-E14 |
| 93 64 373 | 04 | 065 | 3-J18 |
| 93 64 407 | 02 | 147 | 1-H04 |
| 93 64 431 | 04 | 069 | 3-J22 |
| 93 64 498 | 04 | 063 | 3-J16 |
| 93 64 514 | 04 | 063 | 3-J16 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 93 64 522 | 04 | 063 | 3-J16 |
| 93 64 530 | 04 | 063 | 3-J16 |
| 93 64 589 | 04 | 063 | 3-J16 |
| 93 64 605 | 04 | 065 | 3-J18 |
| 93 64 613 | 04 | 065 | 3-J18 |
| 93 64 613 | 04 | 083 | 3-K12 |
| 93 64 647 | 04 | 065 | 3-J18 |
| 93 64 795 | 02 | 153 | 1-H10 |
| 93 65 164 | 03A | 125 | 2-F06 |
| 93 65 172 | 04 | 067 | 3-J20 |
| 93 65 172 | 04 | 085 | 3-K14 |
| 93 65 404 | 02 | 137 | 1-G18 |
| 93 65 404 | 02 | 139 | 1-G20 |
| 93 65 404 | 02 | 143 | 1-G24 |
| 93 65 404 | 02 | 145 | 1-H02 |
| 93 65 404 | 02 | 147 | 1-H04 |
| 93 65 404 | 02 | 149 | 1-H06 |
| 93 65 404 | 02 | 151 | 1-H08 |
| 93 65 404 | 02 | 197 | 1-J06 |
| 93 65 404 | 02 | 199 | 1-J08 |
| 93 65 404 | 02 | 201 | 1-J10 |
| 93 65 404 | 02 | 205 | 1-J14 |
| 93 65 727 | 02 | 143 | 1-G24 |
| 93 65 727 | 02 | 197 | 1-J06 |
| 93 65 727 | 02 | 205 | 1-J14 |
| 93 65 834 | 08C | 017 | 7-A18 |
| 93 65 834 | 08C | 021 | 7-A22 |
| 93 65 834 | 08C | 039 | 7-B16 |
| 93 65 909 | 06 | 021 | 4-C22 |
| 93 65 917 | 06 | 021 | 4-C22 |
| 93 65 917 | 08A | 035 | 5-B12 |
| 93 65 958 | 02 | 075 | 1-E04 |
| 93 67 020 | 08C | 019 | 7-A20 |
| 93 67 020 | 08C | 021 | 7-A22 |
| 93 67 020 | 08C | 037 | 7-B14 |
| 93 67 020 | 08C | 039 | 7-B16 |
| 93 67 020 | 08C | 045 | 7-B22 |
| 93 67 020 | 08C | 049 | 7-C02 |
| 93 67 020 | 08C | 051 | 7-C04 |
| 93 67 046 | 04 | 049 | 3-J02 |
| 93 67 483 | 02 | 105 | 1-F10 |
| 93 67 483 | 02 | 111 | 1-F16 |
| 93 67 525 | 02 | 105 | 1-F10 |
| 93 67 525 | 02 | 111 | 1-F16 |
| 93 67 525 | 08C | 039 | 7-B16 |
| 93 67 731 | 02 | 079 | 1-E08 |
| 93 67 756 | 02 | 079 | 1-E08 |
| 93 67 798 | 02 | 079 | 1-E08 |
| 93 67 988 | 02 | 009 | 1-B10 |
| 93 67 996 | 02 | 009 | 1-B10 |
| 93 68 093 | 02 | 137 | 1-G18 |
| 93 68 093 | 02 | 143 | 1-G24 |
| 93 68 093 | 02 | 147 | 1-H04 |
| 93 68 093 | 02 | 149 | 1-H06 |
| 93 68 093 | 02 | 151 | 1-H08 |
| 93 68 093 | 02 | 197 | 1-J06 |
| 93 68 093 | 02 | 205 | 1-J14 |
| 93 68 200 | 04 | 013 | 3-H14 |
| 93 68 200 | 04 | 021 | 3-H22 |
| 93 68 200 | 04 | 059 | 3-J12 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 93 68 218 | 02 | 139 | 1-G20 |
| 93 68 218 | 02 | 143 | 1-G24 |
| 93 68 218 | 02 | 147 | 1-H04 |
| 93 68 218 | 02 | 149 | 1-H06 |
| 93 68 218 | 02 | 151 | 1-H08 |
| 93 68 218 | 02 | 203 | 1-J12 |
| 93 68 218 | 02 | 205 | 1-J14 |
| 93 68 572 | 02 | 147 | 1-H04 |
| 93 68 838 | 02 | 061 | 1-D14 |
| 93 68 838 | 02 | 069 | 1-D22 |
| 93 68 846 | 02 | 059 | 1-D12 |
| 93 68 846 | 02 | 061 | 1-D14 |
| 93 68 846 | 02 | 069 | 1-D22 |
| 93 69 109 | 08C | 017 | 7-A18 |
| 93 69 109 | 08C | 043 | 7-B20 |
| 93 69 208 | 04 | 065 | 3-J18 |
| 93 69 216 | 04 | 065 | 3-J18 |
| 93 69 307 | 02 | 009 | 1-B10 |
| 93 69 315 | 02 | 009 | 1-B10 |
| 93 69 364 | 09 | 011 | 7-D12 |
| 93 69 521 | 04 | 019 | 3-H20 |
| 93 69 661 | 04 | 019 | 3-H20 |
| 93 69 729 | 04 | 067 | 3-J20 |
| 93 69 844 | 06 | 021 | 4-C22 |
| 93 69 950 | 02 | 161 | 1-H18 |
| 93 69 976 | 04 | 057 | 3-J10 |
| 93 69 992 | 04 | 057 | 3-J10 |
| 93 75 601 | 02 | 053 | 1-D06 |
| 93 75 643 | 02 | 089 | 1-E18 |
| 93 76 735 | 03A | 011 | 2-A12 |
| 93 77 920 | 02 | 053 | 1-D06 |
| 93 78 357 | 02 | 059 | 1-D12 |
| 93 82 870 | 02 | 071 | 1-D24 |
| 93 83 076 | 02 | 089 | 1-E18 |
| 93 83 522 | 02 | 079 | 1-E08 |
| 93 86 491 | 02 | 075 | 1-E04 |
| 93 86 491 | 02 | 079 | 1-E08 |
| 93 86 798 | 02 | 079 | 1-E08 |
| 93 87 697 | 02 | 171 | 1-I04 |
| 93 88 352 | 02 | 185 | 1-I18 |
| 93 90 022 | 02 | 183 | 1-I16 |
| 93 90 220 | 03A | 015 | 2-A16 |
| 93 90 840 | 03A | 013 | 2-A14 |
| 93 90 840 | 03A | 147 | 2-G04 |
| 93 90 964 | 09 | 011 | 7-D12 |
| 93 91 111 | 09 | 015 | 7-D16 |
| 93 92 689 | 02 | 059 | 1-D12 |
| 93 92 689 | 02 | 061 | 1-D14 |
| 93 92 689 | 02 | 067 | 1-D20 |
| 93 92 689 | 02 | 069 | 1-D22 |
| 93 92 705 | 02 | 057 | 1-D10 |
| 93 92 762 | 02 | 135 | 1-G16 |
| 93 92 911 | 02 | 079 | 1-E08 |
| 93 93 935 | 02 | 079 | 1-E08 |
| 93 93 950 | 02 | 059 | 1-D12 |
| 93 93 950 | 02 | 061 | 1-D14 |
| 93 93 950 | 02 | 067 | 1-D20 |
| 93 93 950 | 02 | 071 | 1-D24 |
| 93 94 503 | 02 | 081 | 1-E10 |
| 93 94 529 | 02 | 081 | 1-E10 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 93 94 602 | 02 | 081 | 1-E10 |
| 93 94 628 | 02 | 081 | 1-E10 |
| 93 97 845 | 02 | 149 | 1-H06 |
| 93 97 845 | 02 | 151 | 1-H08 |
| 93 98 207 | 02 | 089 | 1-E18 |
| 93 98 215 | 04 | 049 | 3-J02 |
| 94 00 151 | 08B | 141 | 6-F22 |
| 94 00 169 | 08B | 141 | 6-F22 |
| 94 00 334 | 08B | 075 | 6-D04 |
| 94 00 334 | 08B | 089 | 6-D18 |
| 94 00 334 | 08B | 101 | 6-E06 |
| 94 00 334 | 08B | 113 | 6-E18 |
| 94 00 623 | 08C | 007 | 7-A08 |
| 94 00 714 | 08C | 007 | 7-A08 |
| 94 00 805 | 08C | 007 | 7-A08 |
| 94 00 896 | 08C | 013 | 7-A14 |
| 94 00 896 | 08C | 037 | 7-B14 |
| 94 00 896 | 08C | 039 | 7-B16 |
| 94 00 896 | 08C | 043 | 7-B20 |
| 94 00 896 | 08C | 047 | 7-B24 |
| 94 00 896 | 08C | 049 | 7-C02 |
| 94 00 896 | 08C | 053 | 7-C06 |
| 94 00 946 | 08C | 009 | 7-A10 |
| 94 00 961 | 08C | 009 | 7-A10 |
| 94 00 979 | 08C | 009 | 7-A10 |
| 94 00 987 | 08C | 009 | 7-A10 |
| 94 01 001 | 08C | 005 | 7-A06 |
| 94 01 076 | 08C | 005 | 7-A06 |
| 94 01 084 | 08C | 005 | 7-A06 |
| 94 01 126 | 08C | 007 | 7-A08 |
| 94 01 159 | 08C | 007 | 7-A08 |
| 94 01 167 | 08C | 007 | 7-A08 |
| 94 01 282 | 08C | 007 | 7-A08 |
| 94 01 332 | 08C | 011 | 7-A12 |
| 94 01 332 | 08C | 055 | 7-C08 |
| 94 01 340 | 08C | 011 | 7-A12 |
| 94 01 357 | 08B | 009 | 6-A10 |
| 94 01 373 | 08C | 011 | 7-A12 |
| 94 01 381 | 08B | 009 | 6-A10 |
| 94 01 431 | 08C | 011 | 7-A12 |
| 94 01 449 | 08C | 011 | 7-A12 |
| 94 01 712 | 08C | 011 | 7-A12 |
| 94 01 944 | 08C | 023 | 7-A24 |
| 94 01 951 | 08C | 023 | 7-A24 |
| 94 01 951 | 08C | 039 | 7-B16 |
| 94 01 951 | 08C | 043 | 7-B20 |
| 94 01 951 | 08C | 047 | 7-B24 |
| 94 02 983 | 08B | 197 | 6-I06 |
| 94 03 007 | 08B | 201 | 6-I10 |
| 94 03 056 | 08A | 075 | 5-D04 |
| 94 03 064 | 08A | 075 | 5-D04 |
| 94 03 072 | 08A | 075 | 5-D04 |
| 94 03 080 | 08A | 075 | 5-D04 |
| 94 03 098 | 08A | 077 | 5-D06 |
| 94 03 106 | 08A | 077 | 5-D06 |
| 94 03 197 | 08B | 201 | 6-I10 |
| 94 03 726 | 08B | 205 | 6-I14 |
| 94 04 831 | 08B | 153 | 6-G10 |
| 94 04 831 | 08B | 159 | 6-G16 |
| 94 07 453 | 08A | 075 | 5-D04 |





| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 94 07 461 | 08A | 075 | 5-D04 |
| 94 11 232 | 08A | 075 | 5-D04 |
| 94 11 562 | 08B | 203 | 6-I12 |
| 94 11 661 | 08B | 013 | 6-A14 |
| 94 12 636 | 08A | 083 | 5-D12 |
| 94 15 480 | 08B | 201 | 6-I10 |
| 94 16 181 | 08B | 149 | 6-G06 |
| 94 16 181 | 08B | 161 | 6-G18 |
| 94 16 181 | 08B | 185 | 6-H18 |
| 94 16 181 | 08B | 191 | 6-H24 |
| 94 16 181 | 08B | 225 | 6-J10 |
| 94 16 793 | 08A | 075 | 5-D04 |
| 94 17 551 | 08B | 011 | 6-A12 |
| 94 17 874 | 08C | 007 | 7-A08 |
| 94 17 908 | 08C | 007 | 7-A08 |
| 94 17 916 | 08C | 007 | 7-A08 |
| 94 17 924 | 08C | 013 | 7-A14 |
| 94 17 940 | 08C | 007 | 7-A08 |
| 94 17 973 | 08C | 013 | 7-A14 |
| 94 17 981 | 08C | 009 | 7-A10 |
| 94 18 013 | 08C | 009 | 7-A10 |
| 94 18 021 | 08C | 009 | 7-A10 |
| 94 18 039 | 08C | 005 | 7-A06 |
| 94 18 054 | 08C | 007 | 7-A08 |
| 94 18 062 | 08C | 007 | 7-A08 |
| 94 18 070 | 08C | 007 | 7-A08 |
| 94 18 088 | 08C | 009 | 7-A10 |
| 94 18 138 | 08C | 011 | 7-A12 |
| 94 18 146 | 08C | 011 | 7-A12 |
| 94 18 237 | 08B | 009 | 6-A10 |
| 94 18 310 | 08B | 009 | 6-A10 |
| 94 18 328 | 08B | 009 | 6-A10 |
| 94 18 344 | 08C | 011 | 7-A12 |
| 94 18 351 | 08B | 009 | 6-A10 |
| 94 18 427 | 08B | 009 | 6-A10 |
| 94 18 435 | 08B | 009 | 6-A10 |
| 94 18 450 | 08C | 011 | 7-A12 |
| 94 18 468 | 08C | 011 | 7-A12 |
| 94 18 476 | 08B | 009 | 6-A10 |
| 94 18 492 | 08B | 009 | 6-A10 |
| 94 18 559 | 08B | 009 | 6-A10 |
| 94 19 060 | 08B | 009 | 6-A10 |
| 94 20 035 | 08B | 005 | 6-A06 |
| 94 20 035 | 08B | 229 | 6-J14 |
| 94 20 043 | 08B | 005 | 6-A06 |
| 94 20 043 | 08B | 229 | 6-J14 |
| 94 20 092 | 08C | 013 | 7-A14 |
| 94 20 241 | 08C | 023 | 7-A24 |
| 94 20 241 | 08C | 037 | 7-B14 |
| 94 20 241 | 08C | 039 | 7-B16 |
| 94 20 241 | 08C | 043 | 7-B20 |
| 94 20 241 | 08C | 047 | 7-B24 |
| 94 20 241 | 08C | 049 | 7-C02 |
| 94 20 241 | 08C | 053 | 7-C06 |
| 94 20 266 | 08C | 013 | 7-A14 |
| 94 20 266 | 08C | 037 | 7-B14 |
| 94 20 266 | 08C | 039 | 7-B16 |
| 94 20 266 | 08C | 043 | 7-B20 |
| 94 20 266 | 08C | 047 | 7-B24 |
| 94 20 266 | 08C | 049 | 7-C02 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 94 20 266 | 08C | 053 | 7-C06 |
| 94 20 274 | 08C | 013 | 7-A14 |
| 94 20 274 | 08C | 037 | 7-B14 |
| 94 20 274 | 08C | 039 | 7-B16 |
| 94 20 274 | 08C | 043 | 7-B20 |
| 94 20 274 | 08C | 047 | 7-B24 |
| 94 20 274 | 08C | 049 | 7-C02 |
| 94 20 274 | 08C | 053 | 7-C06 |
| 94 20 282 | 08C | 013 | 7-A14 |
| 94 20 282 | 08C | 037 | 7-B14 |
| 94 20 282 | 08C | 039 | 7-B16 |
| 94 20 282 | 08C | 043 | 7-B20 |
| 94 20 282 | 08C | 047 | 7-B24 |
| 94 20 282 | 08C | 049 | 7-C02 |
| 94 20 282 | 08C | 053 | 7-C06 |
| 94 20 290 | 08C | 013 | 7-A14 |
| 94 20 308 | 08C | 015 | 7-A16 |
| 94 20 308 | 08C | 049 | 7-C02 |
| 94 20 308 | 08C | 053 | 7-C06 |
| 94 20 340 | 08B | 009 | 6-A10 |
| 94 20 365 | 08B | 009 | 6-A10 |
| 94 20 399 | 08C | 011 | 7-A12 |
| 94 20 407 | 08C | 011 | 7-A12 |
| 94 20 415 | 08B | 009 | 6-A10 |
| 94 20 431 | 08B | 009 | 6-A10 |
| 94 20 464 | 08C | 011 | 7-A12 |
| 94 20 472 | 08C | 011 | 7-A12 |
| 94 21 314 | 08B | 185 | 6-H18 |
| 94 21 793 | 08B | 005 | 6-A06 |
| 94 21 934 | 08B | 201 | 6-I10 |
| 94 21 959 | 08B | 201 | 6-I10 |
| 94 22 056 | 08B | 009 | 6-A10 |
| 94 22 346 | 08B | 215 | 6-I24 |
| 94 22 403 | 08C | 023 | 7-A24 |
| 94 22 403 | 08C | 037 | 7-B14 |
| 94 22 403 | 08C | 039 | 7-B16 |
| 94 22 403 | 08C | 043 | 7-B20 |
| 94 22 403 | 08C | 047 | 7-B24 |
| 94 22 403 | 08C | 049 | 7-C02 |
| 94 22 403 | 08C | 053 | 7-C06 |
| 94 22 411 | 08B | 221 | 6-J06 |
| 94 22 676 | 08B | 009 | 6-A10 |
| 94 22 684 | 08B | 009 | 6-A10 |
| 94 22 767 | 08C | 007 | 7-A08 |
| 94 22 858 | 08B | 007 | 6-A08 |
| 94 22 874 | 08B | 007 | 6-A08 |
| 94 22 882 | 08B | 007 | 6-A08 |
| 94 22 890 | 08B | 007 | 6-A08 |
| 94 22 908 | 08B | 005 | 6-A06 |
| 94 22 940 | 08C | 013 | 7-A14 |
| 94 22 965 | 08C | 011 | 7-A12 |
| 94 23 112 | 08C | 011 | 7-A12 |
| 94 23 526 | 08B | 013 | 6-A14 |
| 94 23 658 | 08B | 011 | 6-A12 |
| 94 23 666 | 08B | 011 | 6-A12 |
| 94 25 174 | 08A | 075 | 5-D04 |
| 94 25 232 | 08B | 071 | 6-C24 |
| 94 25 232 | 08B | 085 | 6-D14 |
| 94 25 232 | 08B | 097 | 6-E02 |
| 94 25 232 | 08B | 109 | 6-E14 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 94 25 240 | 08B | 149 | 6-G06 |
| 94 25 406 | 08B | 011 | 6-A12 |
| 94 25 422 | 08B | 009 | 6-A10 |
| 94 25 430 | 08B | 013 | 6-A14 |
| 94 25 612 | 08B | 011 | 6-A12 |
| 94 25 653 | 08B | 023 | 6-A24 |
| 94 25 661 | 08B | 023 | 6-A24 |
| 94 25 679 | 08B | 007 | 6-A08 |
| 94 25 828 | 08B | 011 | 6-A12 |
| 94 25 844 | 08B | 005 | 6-A06 |
| 94 25 844 | 08B | 229 | 6-J14 |
| 94 25 851 | 08B | 005 | 6-A06 |
| 94 25 869 | 08B | 005 | 6-A06 |
| 94 26 008 | 08C | 007 | 7-A08 |
| 94 26 198 | 08C | 013 | 7-A14 |
| 94 26 206 | 08C | 011 | 7-A12 |
| 94 26 214 | 08C | 011 | 7-A12 |
| 94 26 404 | 08A | 077 | 5-D06 |
| 94 26 420 | 08A | 017 | 5-A18 |
| 94 26 420 | 08A | 021 | 5-A22 |
| 94 26 495 | 08B | 013 | 6-A14 |
| 94 26 644 | 08C | 013 | 7-A14 |
| 94 26 651 | 08C | 013 | 7-A14 |
| 94 26 693 | 08C | 011 | 7-A12 |
| 94 26 701 | 08C | 011 | 7-A12 |
| 94 26 727 | 08C | 011 | 7-A12 |
| 94 26 784 | 08C | 011 | 7-A12 |
| 94 26 792 | 08C | 011 | 7-A12 |
| 94 26 909 | 08C | 007 | 7-A08 |
| 94 27 014 | 03A | 041 | 2-B18 |
| 94 27 014 | 08B | 009 | 6-A10 |
| 94 27 014 | 08B | 011 | 6-A12 |
| 94 29 721 | 08B | 007 | 6-A08 |
| 94 30 968 | 08C | 013 | 7-A14 |
| 94 32 030 | 08B | 123 | 6-F04 |
| 94 32 030 | 08B | 129 | 6-F10 |
| 94 32 030 | 08B | 133 | 6-F14 |
| 94 32 030 | 08B | 137 | 6-F18 |
| 94 32 048 | 08B | 123 | 6-F04 |
| 94 32 048 | 08B | 129 | 6-F10 |
| 94 32 048 | 08B | 133 | 6-F14 |
| 94 32 048 | 08B | 137 | 6-F18 |
| 94 32 964 | 08C | 007 | 7-A08 |
| 94 34 499 | 08B | 005 | 6-A06 |
| 94 34 606 | 08B | 007 | 6-A08 |
| 94 34 614 | 08B | 007 | 6-A08 |
| 94 34 614 | 08B | 229 | 6-J14 |
| 94 34 622 | 08B | 007 | 6-A08 |
| 94 35 686 | 08B | 023 | 6-A24 |
| 94 35 694 | 08B | 023 | 6-A24 |
| 94 36 015 | 08B | 011 | 6-A12 |
| 94 36 478 | 08A | 039 | 5-B16 |
| 94 36 965 | 08C | 009 | 7-A10 |
| 94 37 021 | 08B | 151 | 6-G08 |
| 94 37 021 | 08B | 161 | 6-G18 |
| 94 37 906 | 08C | 013 | 7-A14 |
| 94 37 955 | 08C | 013 | 7-A14 |
| 94 38 193 | 08B | 023 | 6-A24 |
| 94 38 201 | 08B | 023 | 6-A24 |
| 94 38 250 | 08C | 023 | 7-A24 |

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 94 38 250 | 08C | 037 | 7-B14 |
| 94 38 250 | 08C | 039 | 7-B16 |
| 94 38 250 | 08C | 043 | 7-B20 |
| 94 38 250 | 08C | 047 | 7-B24 |
| 94 38 250 | 08C | 049 | 7-C02 |
| 94 38 250 | 08C | 053 | 7-C06 |
| 94 40 405 | 08C | 009 | 7-A10 |
| 94 41 213 | 08C | 011 | 7-A12 |
| 94 41 221 | 08C | 013 | 7-A14 |
| 94 41 221 | 08C | 037 | 7-B14 |
| 94 41 221 | 08C | 041 | 7-B18 |
| 94 41 221 | 08C | 043 | 7-B20 |
| 94 41 221 | 08C | 047 | 7-B24 |
| 94 41 221 | 08C | 049 | 7-C02 |
| 94 41 221 | 08C | 053 | 7-C06 |
| 94 41 239 | 08C | 007 | 7-A08 |
| 94 41 270 | 08B | 151 | 6-G08 |
| 94 41 270 | 08B | 161 | 6-G18 |
| 94 42 203 | 08C | 007 | 7-A08 |
| 94 43 920 | 08B | 023 | 6-A24 |
| 94 44 605 | 08C | 013 | 7-A14 |
| 94 44 738 | 08C | 011 | 7-A12 |
| 94 44 811 | 08C | 013 | 7-A14 |
| 94 45 438 | 08C | 005 | 7-A06 |
| 94 45 651 | 08A | 063 | 5-C16 |
| 94 45 651 | 08A | 067 | 5-C20 |
| 94 45 651 | 08A | 071 | 5-C24 |
| 94 45 776 | 08C | 011 | 7-A12 |
| 94 45 800 | 08C | 009 | 7-A10 |
| 94 45 875 | 08B | 013 | 6-A14 |
| 94 45 909 | 08B | 191 | 6-H24 |
| 94 45 917 | 08A | 063 | 5-C16 |
| 94 45 917 | 08A | 067 | 5-C20 |
| 94 45 917 | 08A | 071 | 5-C24 |
| 94 45 990 | 08B | 009 | 6-A10 |
| 94 46 022 | 08A | 075 | 5-D04 |
| 94 46 022 | 08A | 079 | 5-D08 |
| 94 46 022 | 08A | 081 | 5-D10 |
| 94 46 881 | 08B | 013 | 6-A14 |
| 94 46 899 | 08B | 013 | 6-A14 |
| 94 49 489 | 08C | 035 | 7-B12 |
| 94 49 489 | 08C | 037 | 7-B14 |
| 94 49 489 | 08C | 041 | 7-B18 |
| 94 49 489 | 08C | 047 | 7-B24 |
| 94 49 752 | 08A | 013 | 5-A14 |
| 94 49 877 | 08B | 019 | 6-A20 |
| 94 49 885 | 08B | 019 | 6-A20 |
| 94 50 487 | 08C | 013 | 7-A14 |
| 94 50 685 | 08B | 149 | 6-G06 |
| 94 50 685 | 08B | 157 | 6-G14 |
| 94 50 685 | 08B | 165 | 6-G22 |
| 94 50 685 | 08B | 173 | 6-H06 |
| 94 50 685 | 08B | 185 | 6-H18 |
| 94 50 685 | 08B | 189 | 6-H22 |
| 94 50 685 | 08B | 223 | 6-J08 |
| 94 50 685 | 08B | 225 | 6-J10 |
| 94 50 974 | 08B | 023 | 6-A24 |
| 94 50 990 | 08B | 219 | 6-J04 |
| 94 51 253 | 08C | 007 | 7-A08 |
| 94 56 765 | 08B | 151 | 6-G08 |



MASTER INDEX


0 General 1-A02
2 Engine 1-B02
3A Electrical general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 7-A02
9 Tools, labels 7-D02
10 Numerical register 7-E02

# 7-G03 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 94 56 765 | 08B | 161 | 6-G18 |
| 94 56 773 | 08B | 151 | 6-G08 |
| 94 56 773 | 08B | 161 | 6-G18 |
| 94 56 856 | 08B | 147 | 6-G04 |
| 94 57 490 | 08B | 221 | 9-J06 |
| 94 57 565 | 08B | 013 | 6-A14 |
| 94 58 878 | 08A | 067 | 5-C20 |
| 94 58 894 | 08B | 013 | 6-A14 |
| 94 59 025 | 08B | 013 | 6-A14 |
| 94 59 850 | 08B | 207 | 6-I16 |
| 94 59 868 | 08B | 149 | 6-G06 |
| 94 59 868 | 08B | 161 | 6-G18 |
| 94 59 868 | 08B | 165 | 6-G22 |
| 94 59 868 | 08B | 183 | 6-H16 |
| 94 59 868 | 08B | 225 | 8-J10 |
| 94 59 868 | 08B | 227 | 6-J12 |
| 94 59 975 | 08B | 079 | 6-D08 |
| 94 59 975 | 08B | 083 | 6-D12 |
| 94 59 975 | 08B | 149 | 6-G06 |
| 94 59 975 | 08B | 157 | 6-G14 |
| 94 59 975 | 08B | 223 | 8-J08 |
| 94 59 975 | 08B | 225 | 8-J10 |
| 94 60 742 | 03A | 125 | 2-F06 |
| 94 60 742 | 08C | 033 | 7-B10 |
| 94 61 047 | 08B | 009 | 6-A10 |
| 94 61 070 | 08C | 009 | 7-A10 |
| 94 61 088 | 08C | 029 | 7-B06 |
| 94 61 088 | 08C | 033 | 7-B10 |
| 94 61 096 | 04 | 049 | 3-J02 |
| 94 61 260 | 08C | 007 | 7-A08 |
| 94 61 278 | 08C | 007 | 7-A08 |
| 94 61 435 | 08B | 009 | 6-A10 |
| 94 62 557 | 08C | 007 | 7-A08 |
| 94 64 736 | 08C | 033 | 7-B10 |
| 94 64 843 | 08B | 121 | 6-F02 |
| 94 64 876 | 08B | 121 | 6-F02 |
| 94 64 884 | 08B | 121 | 6-F02 |
| 94 64 926 | 08B | 121 | 6-F02 |
| 94 64 942 | 08B | 197 | 6-I06 |
| 94 65 113 | 08A | 079 | 5-D08 |
| 94 65 113 | 08A | 081 | 5-D10 |
| 94 65 121 | 08A | 079 | 5-D08 |
| 94 65 139 | 08A | 079 | 5-D08 |
| 94 65 303 | 08C | 009 | 7-A10 |
| 94 65 436 | 08A | 105 | 5-E10 |
| 94 65 444 | 08A | 107 | 5-E12 |
| 94 65 600 | 08C | 023 | 7-A24 |
| 94 65 600 | 08C | 029 | 7-B06 |
| 94 65 600 | 08C | 033 | 7-B10 |
| 94 65 600 | 08C | 037 | 7-B14 |
| 94 65 600 | 08C | 041 | 7-B18 |
| 94 65 600 | 08C | 043 | 7-B20 |
| 94 65 600 | 08C | 047 | 7-B24 |
| 94 65 600 | 08C | 049 | 7-C02 |
| 94 65 600 | 08C | 053 | 7-C06 |
| 94 65 816 | 08B | 071 | 6-C24 |
| 94 65 816 | 08B | 083 | 6-D12 |
| 94 65 816 | 08B | 085 | 6-D14 |
| 94 65 816 | 08B | 095 | 6-D24 |
| 94 65 816 | 08B | 097 | 6-E02 |
| 94 65 816 | 08B | 107 | 6-E12 |
| 94 65 956 | 08B | 151 | 6-G08 |
| 94 65 956 | 08B | 159 | 6-G16 |
| 94 68 885 | 08B | 007 | 6-A08 |
| 94 68 893 | 06A | 105 | 5-E10 |
| 94 68 893 | 08A | 169 | 5-H02 |
| 94 68 901 | 08A | 105 | 5-E10 |
| 94 69 156 | 08C | 009 | 7-A10 |
| 94 70 394 | 08B | 215 | 6-I24 |
| 94 70 410 | 08B | 215 | 6-I24 |
| 94 71 178 | 08B | 185 | 6-H18 |
| 94 71 210 | 08B | 185 | 6-H18 |
| 94 71 897 | 08B | 123 | 6-F04 |
| 94 71 897 | 08B | 129 | 6-F10 |
| 94 71 897 | 08B | 133 | 6-F14 |
| 94 71 897 | 08B | 137 | 6-F18 |
| 94 71 905 | 08B | 123 | 6-F04 |
| 94 71 905 | 08B | 129 | 6-F10 |
| 94 71 905 | 08B | 133 | 6-F14 |
| 94 71 905 | 08B | 137 | 6-F18 |
| 94 72 408 | 08A | 105 | 5-E10 |
| 94 72 416 | 08A | 105 | 5-E10 |
| 94 72 424 | 08A | 105 | 5-E10 |
| 94 72 424 | 08A | 169 | 5-H02 |
| 94 72 432 | 08A | 105 | 5-E10 |
| 94 72 432 | 08A | 169 | 5-H02 |
| 94 72 572 | 08A | 105 | 5-E10 |
| 94 73 117 | 08B | 121 | 6-F02 |
| 94 73 349 | 08B | 151 | 6-G08 |
| 94 73 349 | 08B | 159 | 6-G16 |
| 94 73 364 | 08B | 153 | 6-G10 |
| 94 73 364 | 08B | 159 | 6-G16 |
| 94 73 406 | 08B | 075 | 6-D04 |
| 94 73 406 | 08B | 089 | 6-D18 |
| 94 73 406 | 08B | 101 | 6-E06 |
| 94 73 802 | 08A | 081 | 5-D10 |
| 94 73 810 | 08A | 081 | 5-D10 |
| 94 73 828 | 08C | 013 | 7-A14 |
| 94 73 851 | 08C | 023 | 7-A24 |
| 94 73 869 | 08B | 079 | 6-D08 |
| 94 73 869 | 08B | 093 | 6-D22 |
| 94 73 869 | 08B | 105 | 6-E10 |
| 94 73 869 | 08B | 117 | 6-E22 |
| 94 73 869 | 08B | 121 | 6-F02 |
| 94 73 877 | 08B | 121 | 6-F02 |
| 94 73 901 | 08C | 011 | 7-A12 |
| 94 73 919 | 08C | 011 | 7-A12 |
| 94 73 943 | 08C | 011 | 7-A12 |
| 94 75 393 | 08B | 187 | 6-H20 |
| 94 75 666 | 08A | 107 | 5-E12 |
| 94 75 914 | 08B | 189 | 6-H22 |
| 94 75 955 | 08B | 185 | 6-H18 |
| 94 76 169 | 08B | 153 | 6-G10 |
| 94 76 169 | 08B | 159 | 6-G16 |
| 94 76 177 | 08B | 153 | 6-G10 |
| 94 76 177 | 08B | 159 | 6-G16 |
| 94 76 185 | 08B | 153 | 6-G10 |
| 94 76 185 | 08B | 159 | 6-G16 |
| 94 77 209 | 08B | 023 | 6-A24 |
| 94 77 217 | 08B | 023 | 6-A24 |
| 94 77 860 | 08B | 191 | 6-H24 |
| 94 77 878 | 08B | 191 | 6-H24 |
| 94 78 066 | 08B | 151 | 6-G08 |
| 94 78 066 | 08B | 161 | 6-G18 |
| 94 79 213 | 08C | 005 | 7-A06 |
| 94 79 213 | 08C | 031 | 7-B08 |
| 94 79 221 | 08C | 005 | 7-A06 |
| 94 79 221 | 08C | 031 | 7-B08 |
| 94 79 353 | 08C | 009 | 7-A10 |
| 94 79 452 | 08C | 017 | 7-A18 |
| 94 79 460 | 08C | 017 | 7-A18 |
| 94 79 478 | 08C | 017 | 7-A18 |
| 94 79 478 | 08C | 021 | 7-A22 |
| 94 79 486 | 08C | 017 | 7-A18 |
| 94 79 486 | 08C | 021 | 7-A22 |
| 94 79 536 | 08C | 023 | 7-A24 |
| 94 79 627 | 08C | 023 | 7-A24 |
| 94 79 643 | 08C | 011 | 7-A12 |
| 94 79 650 | 08C | 011 | 7-A12 |
| 94 79 668 | 08C | 011 | 7-A12 |
| 94 79 726 | 08C | 017 | 7-A18 |
| 94 79 726 | 08C | 021 | 7-A22 |
| 94 79 734 | 08C | 017 | 7-A18 |
| 94 79 734 | 08C | 021 | 7-A22 |
| 94 79 742 | 08C | 017 | 7-A18 |
| 94 79 742 | 08C | 021 | 7-A22 |
| 94 79 759 | 08C | 017 | 7-A18 |
| 94 79 783 | 08C | 035 | 7-B12 |
| 94 79 783 | 08C | 041 | 7-B18 |
| 94 79 783 | 09 | 007 | 7-D08 |
| 94 79 841 | 08B | 005 | 6-A06 |
| 94 79 866 | 03A | 063 | 2-C16 |
| 94 79 908 | 08C | 011 | 7-A12 |
| 94 79 916 | 08C | 011 | 7-A12 |
| 94 79 924 | 08C | 013 | 7-A14 |
| 94 79 940 | 08C | 023 | 7-A24 |
| 94 79 973 | 08C | 007 | 7-A08 |
| 94 79 981 | 08C | 007 | 7-A08 |
| 94 79 999 | 08C | 009 | 7-A10 |
| 94 80 005 | 08C | 023 | 7-A24 |
| 94 80 039 | 08C | 037 | 7-B14 |
| 94 80 104 | 08C | 007 | 7-A08 |
| 94 80 153 | 08C | 011 | 7-A12 |
| 94 80 153 | 08C | 055 | 7-C08 |
| 94 80 187 | 08C | 011 | 7-A12 |
| 94 80 187 | 08C | 055 | 7-C08 |
| 94 80 211 | 08C | 009 | 7-A10 |
| 94 80 245 | 08C | 023 | 7-A24 |
| 94 80 252 | 08C | 009 | 7-A10 |
| 94 80 252 | 08C | 055 | 7-C08 |
| 94 80 278 | 08C | 015 | 7-A16 |
| 94 80 278 | 08C | 033 | 7-B10 |
| 94 80 278 | 08C | 035 | 7-B12 |
| 94 80 278 | 08C | 041 | 7-B18 |
| 94 80 278 | 08C | 043 | 7-B20 |
| 94 80 278 | 08C | 047 | 7-B24 |
| 94 80 278 | 08C | 049 | 7-C02 |
| 94 80 278 | 08C | 053 | 7-C06 |
| 94 80 278 | 08C | 055 | 7-C08 |
| 94 80 534 | 08C | 013 | 7-A14 |
| 94 80 542 | 08C | 035 | 7-B12 |
| 94 80 542 | 08C | 041 | 7-B18 |
| 94 80 542 | 08C | 043 | 7-B20 |
| 94 80 542 | 08C | 047 | 7-B24 |
| 94 80 542 | 08C | 049 | 7-C02 |
| 94 80 542 | 08C | 053 | 7-C06 |
| 94 80 559 | 08C | 015 | 7-A16 |
| 94 80 559 | 08C | 037 | 7-B14 |
| 94 80 559 | 08C | 041 | 7-B18 |
| 94 80 559 | 08C | 043 | 7-B20 |
| 94 80 559 | 08C | 047 | 7-B24 |
| 94 80 567 | 08C | 015 | 7-A16 |
| 94 80 567 | 08C | 033 | 7-B10 |
| 94 80 567 | 08C | 041 | 7-B18 |
| 94 80 567 | 08C | 043 | 7-B20 |
| 94 80 567 | 08C | 047 | 7-B24 |
| 94 80 567 | 08C | 049 | 7-C02 |
| 94 80 567 | 08C | 053 | 7-C06 |
| 94 80 575 | 08C | 015 | 7-A16 |
| 94 80 575 | 08C | 033 | 7-B10 |
| 94 80 575 | 08C | 035 | 7-B12 |
| 94 80 575 | 08C | 037 | 7-B14 |
| 94 80 575 | 08C | 041 | 7-B18 |
| 94 80 575 | 08C | 043 | 7-B20 |
| 94 80 575 | 08C | 047 | 7-B24 |
| 94 80 575 | 08C | 049 | 7-C02 |
| 94 80 575 | 08C | 053 | 7-C06 |
| 94 80 641 | 08C | 013 | 7-A14 |
| 94 80 666 | 08C | 015 | 7-A16 |
| 94 80 666 | 08C | 033 | 7-B10 |
| 94 80 666 | 08C | 037 | 7-B14 |
| 94 80 666 | 08C | 041 | 7-B18 |
| 94 80 666 | 08C | 043 | 7-B20 |
| 94 80 666 | 08C | 047 | 7-B24 |
| 94 80 773 | 08C | 023 | 7-A24 |
| 94 80 856 | 08C | 017 | 7-A18 |
| 94 80 856 | 08C | 021 | 7-A22 |
| 94 80 898 | 08C | 023 | 7-A24 |
| 94 80 898 | 08C | 029 | 7-B06 |
| 94 80 898 | 08C | 033 | 7-B10 |
| 94 80 914 | 08C | 023 | 7-A24 |
| 94 80 955 | 08C | 023 | 7-A24 |
| 94 80 955 | 08C | 037 | 7-B14 |
| 94 80 955 | 08C | 041 | 7-B18 |
| 94 80 955 | 08C | 043 | 7-B20 |
| 94 80 955 | 08C | 047 | 7-B24 |
| 94 80 955 | 08C | 049 | 7-C02 |
| 94 80 955 | 08C | 053 | 7-C06 |
| 94 80 997 | 08C | 031 | 7-B08 |
| 94 81 037 | 08C | 017 | 7-A18 |
| 94 81 037 | 08C | 021 | 7-A22 |
| 94 81 052 | 08C | 017 | 7-A18 |
| 94 81 052 | 08C | 021 | 7-A22 |
| 94 81 060 | 08C | 007 | 7-A08 |
| 94 81 110 | 04 | 081 | 3-K10 |
| 94 81 128 | 08C | 037 | 7-B14 |
| 94 81 185 | 08C | 023 | 7-A24 |
| 94 81 193 | 08C | 023 | 7-A24 |
| 94 81 391 | 08C | 023 | 7-A24 |



# 7-G04 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 94 81 391 | 08C | 037 | 7-B14 |
| 94 81 425 | 08B | 005 | 6-A06 |
| 94 81 425 | 08B | 229 | 6-J14 |
| 94 81 441 | 08C | 023 | 7-A24 |
| 94 81 441 | 08C | 029 | 7-B06 |
| 94 81 441 | 08C | 037 | 7-B14 |
| 94 81 441 | 08C | 041 | 7-B18 |
| 94 81 441 | 08C | 043 | 7-B20 |
| 94 81 441 | 08C | 047 | 7-B24 |
| 94 81 441 | 08C | 049 | 7-C02 |
| 94 81 458 | 08C | 023 | 7-A24 |
| 94 81 458 | 08C | 029 | 7-B06 |
| 94 81 458 | 08C | 037 | 7-B14 |
| 94 81 458 | 08C | 041 | 7-B18 |
| 94 81 458 | 08C | 043 | 7-B20 |
| 94 81 458 | 08C | 047 | 7-B24 |
| 94 81 458 | 08C | 049 | 7-C02 |
| 94 81 458 | 08C | 053 | 7-C06 |
| 94 81 466 | 08C | 023 | 7-A24 |
| 94 81 466 | 08C | 037 | 7-B14 |
| 94 81 482 | 08C | 023 | 7-A24 |
| 94 81 508 | 08C | 017 | 7-A18 |
| 94 81 508 | 08C | 043 | 7-B20 |
| 94 81 516 | 08C | 017 | 7-A18 |
| 94 81 516 | 08C | 021 | 7-A22 |
| 94 81 532 | 08C | 023 | 7-A24 |
| 94 81 532 | 08C | 037 | 7-B14 |
| 94 81 540 | 08C | 023 | 7-A24 |
| 94 81 607 | 08C | 013 | 7-A14 |
| 94 81 631 | 08C | 007 | 7-A08 |
| 94 81 649 | 08C | 013 | 7-A14 |
| 94 81 664 | 08C | 023 | 7-A24 |
| 94 81 664 | 08C | 037 | 7-B14 |
| 94 81 664 | 08C | 041 | 7-B18 |
| 94 81 664 | 08C | 043 | 7-B20 |
| 94 81 664 | 08C | 047 | 7-B24 |
| 94 81 664 | 08C | 049 | 7-C02 |
| 94 81 664 | 08C | 053 | 7-C06 |
| 94 81 680 | 08C | 023 | 7-A24 |
| 94 81 680 | 08C | 037 | 7-B14 |
| 94 81 680 | 08C | 041 | 7-B18 |
| 94 81 680 | 08C | 043 | 7-B20 |
| 94 81 680 | 08C | 047 | 7-B24 |
| 94 81 680 | 08C | 049 | 7-C02 |
| 94 81 680 | 08C | 053 | 7-C06 |
| 94 81 698 | 08C | 037 | 7-B14 |
| 94 81 706 | 08C | 037 | 7-B14 |
| 94 81 722 | 08C | 005 | 7-A06 |
| 94 81 789 | 08C | 007 | 7-A08 |
| 94 81 839 | 08C | 007 | 7-A08 |
| 94 81 847 | 08C | 031 | 7-B08 |
| 94 81 854 | 08C | 031 | 7-B08 |
| 94 81 862 | 08C | 031 | 7-B08 |
| 94 81 904 | 08C | 007 | 7-A08 |
| 94 81 912 | 08C | 007 | 7-A08 |
| 94 81 920 | 08C | 007 | 7-A08 |
| 94 81 938 | 08C | 009 | 7-A10 |
| 94 81 946 | 08C | 009 | 7-A10 |
| 94 81 953 | 08C | 009 | 7-A10 |
| 94 81 961 | 08C | 023 | 7-A24 |
| 94 81 961 | 08C | 037 | 7-B14 |
| 94 81 961 | 08C | 041 | 7-B18 |
| 94 81 961 | 08C | 043 | 7-B20 |
| 94 81 961 | 08C | 047 | 7-B24 |
| 94 81 961 | 08C | 049 | 7-C02 |
| 94 81 961 | 08C | 053 | 7-C06 |
| 94 81 979 | 08C | 017 | 7-A18 |
| 94 81 979 | 08C | 021 | 7-A22 |
| 94 81 979 | 08C | 041 | 7-B18 |
| 94 81 979 | 08C | 047 | 7-B24 |
| 94 81 979 | 08C | 049 | 7-C02 |
| 94 81 979 | 08C | 053 | 7-C06 |
| 94 81 987 | 08C | 017 | 7-A18 |
| 94 81 987 | 08C | 021 | 7-A22 |
| 94 81 995 | 08C | 017 | 7-A18 |
| 94 81 995 | 08C | 021 | 7-A22 |
| 94 82 001 | 08C | 023 | 7-A24 |
| 94 82 001 | 08C | 041 | 7-B18 |
| 94 82 001 | 08C | 047 | 7-B24 |
| 94 82 019 | 08C | 023 | 7-A24 |
| 94 82 019 | 08C | 043 | 7-B20 |
| 94 82 027 | 08C | 023 | 7-A24 |
| 94 82 027 | 08C | 041 | 7-B18 |
| 94 82 027 | 08C | 043 | 7-B20 |
| 94 82 027 | 08C | 047 | 7-B24 |
| 94 82 027 | 08C | 049 | 7-C02 |
| 94 82 027 | 08C | 053 | 7-C06 |
| 94 82 035 | 08C | 023 | 7-A24 |
| 94 82 035 | 08C | 041 | 7-B18 |
| 94 82 035 | 08C | 043 | 7-B20 |
| 94 82 035 | 08C | 047 | 7-B24 |
| 94 82 035 | 08C | 049 | 7-C02 |
| 94 82 035 | 08C | 053 | 7-C06 |
| 94 82 043 | 08C | 019 | 7-A20 |
| 94 82 043 | 08C | 021 | 7-A22 |
| 94 82 068 | 08C | 023 | 7-A24 |
| 94 82 068 | 08C | 041 | 7-B18 |
| 94 82 068 | 08C | 043 | 7-B20 |
| 94 82 118 | 08C | 009 | 7-A10 |
| 94 82 175 | 08C | 007 | 7-A08 |
| 94 82 209 | 08C | 017 | 7-A18 |
| 94 82 209 | 08C | 021 | 7-A22 |
| 94 82 217 | 08C | 017 | 7-A18 |
| 94 82 217 | 08C | 021 | 7-A22 |
| 94 82 225 | 08C | 017 | 7-A18 |
| 94 82 225 | 08C | 021 | 7-A22 |
| 94 82 357 | 08C | 017 | 7-A18 |
| 94 82 357 | 08C | 021 | 7-A22 |
| 94 82 357 | 08C | 031 | 7-B08 |
| 94 82 365 | 08C | 025 | 7-B02 |
| 94 82 365 | 08C | 049 | 7-C02 |
| 94 82 365 | 08C | 053 | 7-C06 |
| 94 82 381 | 08C | 017 | 7-A18 |
| 94 82 381 | 08C | 021 | 7-A22 |
| 94 82 399 | 08C | 023 | 7-A24 |
| 94 82 399 | 08C | 049 | 7-C02 |
| 94 82 399 | 08C | 053 | 7-C06 |
| 94 82 522 | 08C | 009 | 7-A10 |
| 94 82 548 | 09 | 017 | 7-D18 |
| 94 82 555 | 08C | 005 | 7-A06 |
| 94 82 563 | 08C | 015 | 7-A16 |
| 94 82 563 | 08C | 037 | 7-B14 |
| 94 82 571 | 08C | 015 | 7-A16 |
| 94 82 571 | 08C | 037 | 7-B14 |
| 94 82 589 | 08C | 015 | 7-A16 |
| 94 85 020 | 08B | 215 | 6-I24 |
| 94 85 020 | 08B | 221 | 6-J06 |
| 94 85 038 | 08B | 215 | 6-I24 |
| 94 85 574 | 08B | 005 | 6-A06 |
| 94 85 657 | 08B | 215 | 6-I24 |
| 94 85 657 | 08B | 219 | 6-J04 |
| 94 85 657 | 08B | 221 | 6-J06 |
| 94 85 897 | 08B | 213 | 6-I22 |
| 94 86 168 | 08B | 201 | 6-I10 |
| 94 86 176 | 08B | 201 | 6-I10 |
| 94 86 879 | 08B | 081 | 6-D10 |
| 94 86 903 | 08B | 081 | 6-D10 |
| 94 87 810 | 08B | 151 | 6-G08 |
| 94 87 810 | 08B | 161 | 6-G18 |
| 94 87 828 | 08B | 151 | 6-G08 |
| 94 87 828 | 08B | 161 | 6-G18 |
| 94 87 836 | 08B | 189 | 6-H22 |
| 94 87 844 | 08B | 189 | 6-H22 |
| 94 87 950 | 08B | 189 | 6-H22 |
| 94 88 131 | 08B | 151 | 6-G08 |
| 94 88 131 | 08B | 159 | 6-G16 |
| 94 88 370 | 08B | 151 | 6-G08 |
| 94 88 370 | 08B | 159 | 6-G16 |
| 94 89 337 | 08B | 159 | 6-G16 |
| 94 89 485 | 08B | 191 | 6-H24 |
| 94 89 758 | 08A | 143 | 5-F24 |
| 94 89 758 | 08B | 153 | 6-G10 |
| 94 89 758 | 08B | 159 | 6-G16 |
| 94 89 766 | 08B | 153 | 6-G10 |
| 94 89 766 | 08B | 159 | 6-G16 |
| 94 90 764 | 08B | 193 | 6-I02 |
| 94 90 954 | 08B | 121 | 6-F02 |
| 94 91 325 | 08B | 191 | 6-H24 |
| 94 91 739 | 08B | 189 | 6-H22 |
| 94 92 026 | 08B | 197 | 6-I06 |
| 94 92 117 | 08B | 187 | 6-H20 |
| 94 92 257 | 08B | 023 | 6-A24 |
| 94 92 455 | 03A | 125 | 2-F06 |
| 94 92 471 | 02 | 203 | 1-J12 |
| 94 92 471 | 02 | 205 | 1-J14 |
| 94 92 471 | 08A | 007 | 5-A08 |
| 94 92 471 | 08B | 153 | 6-G10 |
| 94 92 471 | 08B | 161 | 6-G18 |
| 94 92 612 | 08B | 199 | 6-I08 |
| 94 92 885 | 08B | 019 | 6-A20 |
| 94 92 885 | 08B | 121 | 6-F02 |
| 94 93 743 | 08B | 189 | 6-H22 |
| 94 93 750 | 08B | 017 | 6-A18 |
| 94 93 800 | 08B | 017 | 6-A18 |
| 94 93 842 | 08B | 017 | 6-A18 |
| 94 94 691 | 08B | 191 | 6-H24 |
| 94 94 709 | 08B | 191 | 6-H24 |
| 94 94 725 | 08B | 191 | 6-H24 |
| 94 94 725 | 08B | 193 | 6-I02 |
| 94 94 733 | 08B | 199 | 6-I08 |
| 94 98 957 | 08B | 201 | 6-I10 |
| 94 98 965 | 08B | 201 | 6-I10 |
| 94 98 973 | 08B | 201 | 6-I10 |
| 94 98 981 | 08B | 201 | 6-I10 |
| 95 00 273 | 03A | 049 | 2-C02 |
| 95 01 685 | 03B | 013 | 3-A14 |
| 95 01 685 | 03B | 039 | 3-B16 |
| 95 01 685 | 03B | 061 | 3-C14 |
| 95 01 685 | 03B | 085 | 3-D14 |
| 95 01 685 | 08A | 173 | 5-H06 |
| 95 01 685 | 08A | 175 | 5-H08 |
| 95 01 685 | 08A | 177 | 5-H10 |
| 95 01 685 | 08A | 179 | 5-H12 |
| 95 01 685 | 08A | 181 | 5-H14 |
| 95 01 685 | 08A | 183 | 5-H16 |
| 95 01 859 | 03A | 065 | 2-C18 |
| 95 01 859 | 08A | 165 | 5-G22 |
| 95 01 859 | 09A | 167 | 5-G24 |
| 95 01 867 | 03A | 065 | 2-C18 |
| 95 01 867 | 08A | 167 | 5-G24 |
| 95 01 875 | 03A | 065 | 2-C18 |
| 95 01 875 | 08A | 167 | 5-G24 |
| 95 01 891 | 03A | 065 | 2-C18 |
| 95 01 891 | 08A | 165 | 5-G22 |
| 95 01 891 | 08A | 167 | 5-G24 |
| 95 01 909 | 03A | 065 | 2-C18 |
| 95 01 909 | 08A | 169 | 5-H02 |
| 95 01 917 | 03A | 065 | 2-C18 |
| 95 01 917 | 08A | 165 | 5-G22 |
| 95 01 917 | 08A | 167 | 5-G24 |
| 95 02 535 | 03A | 051 | 2-C04 |
| 95 02 543 | 03A | 051 | 2-C04 |
| 95 02 998 | 03B | 013 | 3-A14 |
| 95 02 998 | 03B | 039 | 3-B16 |
| 95 02 998 | 03B | 061 | 3-C14 |
| 95 02 998 | 03B | 085 | 3-D14 |
| 95 03 012 | 03B | 041 | 3-B18 |
| 95 03 012 | 03B | 063 | 3-C16 |
| 95 03 012 | 03B | 087 | 3-D16 |
| 95 03 046 | 03A | 005 | 2-A06 |
| 95 03 053 | 03A | 005 | 2-A06 |
| 95 03 152 | 03A | 049 | 2-C02 |
| 95 03 277 | 03B | 015 | 3-A16 |
| 95 03 277 | 03B | 039 | 3-B16 |
| 95 03 277 | 03B | 063 | 3-C16 |
| 95 03 277 | 03B | 087 | 3-D16 |
| 95 03 277 | 08A | 173 | 5-H06 |
| 95 03 277 | 08A | 175 | 5-H08 |
| 95 03 277 | 08A | 177 | 5-H10 |
| 95 03 277 | 08A | 179 | 5-H12 |
| 95 03 277 | 08A | 181 | 5-H14 |
| 95 03 277 | 08A | 183 | 5-H16 |
| 95 03 319 | 03B | 011 | 3-A12 |
| 95 03 319 | 03B | 035 | 3-B12 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

## Numerical register / Nummerregister

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 95 03 319 | 03B | 057 | 3-C10 |
| 95 03 319 | 03B | 083 | 3-D12 |
| 95 03 319 | 08A | 173 | 5-H06 |
| 95 03 319 | 08A | 175 | 5-H08 |
| 95 03 319 | 08A | 177 | 5-H10 |
| 95 03 319 | 08A | 179 | 5-H12 |
| 95 03 319 | 08A | 181 | 5-H14 |
| 95 03 319 | 08A | 183 | 5-H16 |
| 95 03 327 | 03B | 017 | 3-A18 |
| 95 03 327 | 03B | 041 | 3-B18 |
| 95 03 327 | 03B | 063 | 3-C16 |
| 95 03 327 | 03B | 087 | 3-D16 |
| 95 03 327 | 08A | 173 | 5-H06 |
| 95 03 327 | 08A | 175 | 5-H08 |
| 95 03 327 | 08A | 177 | 5-H10 |
| 95 03 327 | 08A | 179 | 5-H12 |
| 95 03 327 | 08A | 181 | 5-H14 |
| 95 03 327 | 08A | 183 | 5-H16 |
| 95 03 418 | 03B | 007 | 3-A08 |
| 95 03 418 | 03B | 031 | 3-B08 |
| 95 03 418 | 03B | 055 | 3-C08 |
| 95 03 418 | 03B | 079 | 3-D08 |
| 95 03 418 | 08C | 041 | 7-B18 |
| 95 03 418 | 08C | 043 | 7-B20 |
| 95 03 418 | 08C | 049 | 7-C02 |
| 95 03 426 | 03B | 007 | 3-A08 |
| 95 03 426 | 03B | 033 | 3-B10 |
| 95 03 426 | 03B | 055 | 3-C08 |
| 95 03 426 | 03B | 079 | 3-D08 |
| 95 03 426 | 08C | 041 | 7-B18 |
| 95 03 426 | 08C | 043 | 7-B20 |
| 95 03 426 | 08C | 047 | 7-B24 |
| 95 03 426 | 08C | 049 | 7-C02 |
| 95 03 426 | 08C | 053 | 7-C06 |
| 95 03 434 | 03B | 017 | 3-A18 |
| 95 03 434 | 03B | 041 | 3-B18 |
| 95 03 434 | 03B | 063 | 3-C16 |
| 95 03 434 | 03B | 089 | 3-D18 |
| 95 03 434 | 08A | 169 | 5-H02 |
| 95 03 442 | 08A | 169 | 5-H02 |
| 95 03 475 | 03B | 021 | 3-A22 |
| 95 03 475 | 03B | 043 | 3-B20 |
| 95 03 475 | 03B | 065 | 3-C18 |
| 95 03 475 | 03B | 091 | 3-D20 |
| 95 03 475 | 03B | 095 | 3-D24 |
| 95 03 525 | 08A | 169 | 5-H02 |
| 95 05 652 | 03A | 073 | 2-D02 |
| 95 05 694 | 03A | 073 | 2-D02 |
| 95 06 080 | 03A | 049 | 2-C02 |
| 95 06 379 | 03A | 059 | 2-C12 |
| 95 06 668 | 03B | 021 | 3-A22 |
| 95 06 668 | 03B | 043 | 3-B20 |
| 95 06 668 | 03B | 065 | 3-C18 |
| 95 06 668 | 03B | 093 | 3-D22 |
| 95 06 668 | 03B | 097 | 3-E02 |
| 95 07 658 | 03B | 017 | 3-A18 |
| 95 07 658 | 03B | 041 | 3-B18 |
| 95 07 658 | 03B | 063 | 3-C16 |
| 95 07 658 | 03B | 087 | 3-D16 |
| 95 08 706 | 03B | 047 | 3-B24 |
| 95 08 706 | 03B | 049 | 3-C02 |
| 95 08 706 | 03B | 121 | 3-F02 |
| 95 08 714 | 03B | 047 | 3-B24 |
| 95 08 714 | 03B | 067 | 3-C20 |
| 95 08 714 | 03B | 085 | 3-D14 |
| 95 08 714 | 03B | 121 | 3-F02 |
| 95 08 714 | 03B | 135 | 3-F16 |
| 95 08 714 | 03B | 147 | 3-G04 |
| 95 08 748 | 03B | 041 | 3-B18 |
| 95 08 748 | 03B | 047 | 3-B24 |
| 95 08 748 | 03B | 121 | 3-F02 |
| 95 08 813 | 03A | 067 | 2-C20 |
| 95 09 076 | 03A | 077 | 2-D06 |
| 95 09 118 | 03A | 057 | 2-C10 |
| 95 09 126 | 03A | 057 | 2-C10 |
| 95 09 480 | 03A | 071 | 2-C24 |
| 95 09 522 | 03A | 047 | 2-B24 |
| 95 09 639 | 03A | 049 | 2-C02 |
| 95 12 229 | 03A | 081 | 2-D10 |
| 95 12 252 | 03A | 049 | 2-C02 |
| 95 12 294 | 03A | 067 | 2-C20 |
| 95 12 302 | 03A | 067 | 2-C20 |
| 95 12 310 | 03A | 065 | 2-C18 |
| 95 12 310 | 08A | 165 | 5-G22 |
| 95 12 310 | 08A | 167 | 5-G24 |
| 95 12 328 | 03A | 033 | 2-B10 |
| 95 12 393 | 03A | 033 | 2-B10 |
| 95 12 401 | 03A | 033 | 2-B10 |
| 95 12 583 | 03A | 059 | 2-C12 |
| 95 12 641 | 03A | 063 | 2-C16 |
| 95 12 658 | 03A | 063 | 2-C16 |
| 95 12 666 | 03A | 065 | 2-C18 |
| 95 12 674 | 03A | 065 | 2-C18 |
| 95 12 682 | 03A | 063 | 2-C16 |
| 95 12 823 | 03A | 135 | 2-F16 |
| 95 12 823 | 03A | 137 | 2-F18 |
| 95 12 823 | 08A | 165 | 5-G22 |
| 95 12 823 | 08A | 167 | 5-G24 |
| 95 12 849 | 03A | 135 | 2-F16 |
| 95 12 880 | 03A | 047 | 2-B24 |
| 95 12 880 | 03A | 049 | 2-C02 |
| 95 12 898 | 03A | 049 | 2-C02 |
| 95 12 906 | 03A | 049 | 2-C02 |
| 95 13 128 | 03A | 009 | 2-A10 |
| 95 13 144 | 03A | 009 | 2-A10 |
| 95 13 169 | 03A | 009 | 2-A10 |
| 95 13 177 | 03A | 009 | 2-A10 |
| 95 13 185 | 03A | 009 | 2-A10 |
| 95 13 193 | 03A | 009 | 2-A10 |
| 95 13 219 | 03A | 135 | 2-F16 |
| 95 13 219 | 08C | 037 | 7-B14 |
| 95 13 219 | 08C | 041 | 7-B18 |
| 95 13 219 | 08C | 043 | 7-B20 |
| 95 13 219 | 08C | 047 | 7-B24 |
| 95 13 219 | 08C | 049 | 7-C02 |
| 95 13 219 | 08C | 053 | 7-C06 |
| 95 13 235 | 03A | 079 | 2-D08 |
| 95 13 599 | 03A | 007 | 2-A08 |
| 95 13 599 | 03A | 009 | 2-A10 |
| 95 13 763 | 03A | 009 | 2-A10 |
| 95 14 019 | 03A | 063 | 2-C16 |
| 95 14 027 | 03A | 063 | 2-C16 |
| 95 14 233 | 03A | 047 | 2-B24 |
| 95 14 803 | 03B | 041 | 3-B18 |
| 95 14 803 | 03B | 063 | 3-C16 |
| 95 14 803 | 03B | 087 | 3-D16 |
| 95 14 811 | 03A | 033 | 2-B10 |
| 95 14 811 | 03B | 041 | 3-B18 |
| 95 14 811 | 03B | 063 | 3-C16 |
| 95 14 811 | 03B | 087 | 3-D16 |
| 95 14 860 | 03A | 081 | 2-D10 |
| 95 15 099 | 03A | 137 | 2-F18 |
| 95 15 180 | 03A | 009 | 2-A10 |
| 95 15 180 | 03A | 149 | 2-G06 |
| 95 16 071 | 03A | 137 | 2-F18 |
| 95 18 424 | 03A | 005 | 2-A06 |
| 95 18 481 | 03A | 135 | 2-F16 |
| 95 18 515 | 03A | 129 | 2-F10 |
| 95 18 713 | 03B | 085 | 3-D14 |
| 95 18 739 | 03B | 091 | 3-D20 |
| 95 18 739 | 03B | 095 | 3-D24 |
| 95 18 747 | 03A | 133 | 2-F14 |
| 95 18 820 | 03A | 063 | 2-C16 |
| 95 18 820 | 03A | 065 | 2-C18 |
| 95 19 133 | 03A | 135 | 2-F16 |
| 95 19 257 | 03A | 065 | 2-C18 |
| 95 19 380 | 03A | 133 | 2-F14 |
| 95 19 380 | 03A | 139 | 2-F20 |
| 95 19 380 | 03B | 039 | 3-B16 |
| 95 19 679 | 03B | 041 | 3-B18 |
| 95 19 679 | 03B | 063 | 3-C16 |
| 95 19 679 | 03B | 087 | 3-D16 |
| 95 19 695 | 03A | 083 | 2-D12 |
| 95 19 737 | 02 | 093 | 1-E22 |
| 95 19 737 | 03A | 131 | 2-F12 |
| 95 19 877 | 08B | 173 | 6-H06 |
| 95 21 188 | 03A | 079 | 2-D08 |
| 95 21 832 | 03A | 049 | 2-C02 |
| 95 21 857 | 03A | 049 | 2-C02 |
| 95 21 972 | 03B | 025 | 3-B02 |
| 95 21 972 | 03B | 041 | 3-B18 |
| 95 21 972 | 03B | 047 | 3-B24 |
| 95 21 972 | 03B | 063 | 3-C16 |
| 95 21 972 | 03B | 071 | 3-C24 |
| 95 21 972 | 03B | 087 | 3-D16 |
| 95 21 972 | 03B | 099 | 3-E04 |
| 95 21 972 | 03B | 111 | 3-E16 |
| 95 21 972 | 03B | 123 | 3-F04 |
| 95 21 972 | 03B | 135 | 3-F16 |
| 95 21 972 | 03B | 147 | 3-G04 |
| 95 21 980 | 03B | 025 | 3-B02 |
| 95 21 980 | 03B | 037 | 3-B14 |
| 95 21 980 | 03B | 041 | 3-B18 |
| 95 21 980 | 03B | 049 | 3-C02 |
| 95 21 980 | 03B | 063 | 3-C16 |
| 95 21 980 | 03B | 111 | 3-E16 |
| 95 21 980 | 03B | 123 | 3-F04 |
| 95 21 980 | 03B | 135 | 3-F16 |
| 95 21 998 | 03B | 049 | 3-C02 |
| 95 21 998 | 03B | 123 | 3-F04 |
| 95 21 998 | 03B | 135 | 3-F16 |
| 95 21 998 | 03B | 147 | 3-G04 |
| 95 22 061 | 03A | 135 | 2-F16 |
| 95 22 822 | 03A | 083 | 2-D12 |
| 95 22 855 | 03A | 067 | 2-C20 |
| 95 23 184 | 03A | 009 | 2-A10 |
| 95 23 721 | 03A | 063 | 2-C16 |
| 95 23 747 | 03A | 065 | 2-C18 |
| 95 23 762 | 03A | 065 | 2-C18 |
| 95 23 788 | 03A | 063 | 2-C16 |
| 95 23 788 | 08C | 037 | 7-B14 |
| 95 23 788 | 08C | 041 | 7-B18 |
| 95 23 788 | 08C | 043 | 7-B20 |
| 95 23 788 | 08C | 047 | 7-B24 |
| 95 23 788 | 08C | 049 | 7-C02 |
| 95 23 788 | 08C | 053 | 7-C06 |
| 95 23 804 | 03A | 065 | 2-C18 |
| 95 23 820 | 03A | 063 | 2-C16 |
| 95 23 846 | 03A | 063 | 2-C16 |
| 95 23 846 | 08C | 037 | 7-B14 |
| 95 23 846 | 08C | 041 | 7-B18 |
| 95 23 846 | 08C | 043 | 7-B20 |
| 95 23 846 | 08C | 047 | 7-B24 |
| 95 23 846 | 08C | 051 | 7-C04 |
| 95 23 846 | 08C | 053 | 7-C06 |
| 95 24 745 | 08B | 149 | 6-G06 |
| 95 24 745 | 08B | 157 | 6-G14 |
| 95 24 745 | 08B | 165 | 6-G22 |
| 95 24 745 | 08B | 175 | 6-H08 |
| 95 26 419 | 03A | 077 | 2-D06 |
| 95 26 518 | 02 | 153 | 1-H10 |
| 95 26 518 | 02 | 199 | 1-J08 |
| 95 26 526 | 02 | 153 | 1-H10 |
| 95 26 526 | 08C | 037 | 7-B14 |
| 95 26 526 | 08C | 045 | 7-B22 |
| 95 26 526 | 08C | 047 | 7-B24 |
| 95 26 526 | 08C | 051 | 7-C04 |
| 95 26 526 | 08C | 053 | 7-C06 |
| 95 26 534 | 02 | 153 | 1-H10 |
| 95 26 963 | 09 | 005 | 7-D06 |
| 95 27 698 | 08B | 165 | 6-G22 |
| 95 27 698 | 08B | 175 | 6-H08 |
| 95 27 698 | 08B | 223 | 6-J08 |
| 95 27 706 | 08B | 165 | 6-G22 |
| 95 27 706 | 08B | 175 | 6-H08 |
| 95 27 961 | 03A | 077 | 2-D06 |
| 95 27 979 | 03A | 077 | 2-D06 |
| 95 28 209 | 03A | 077 | 2-D06 |
| 95 28 217 | 03A | 077 | 2-D06 |
| 95 28 704 | 08B | 173 | 6-H06 |
| 95 28 712 | 08B | 175 | 6-H08 |
| 95 28 795 | 03A | 059 | 2-C12 |
| 95 29 231 | 03A | 143 | 2-F24 |
| 95 29 355 | 03A | 079 | 2-D08 |
| 95 29 413 | 03A | 051 | 2-C04 |
| 95 29 421 | 03A | 051 | 2-C04 |
| 95 29 975 | 03A | 061 | 2-C14 |
| 95 29 975 | 08A | 173 | 5-H06 |
| 95 29 975 | 08A | 175 | 5-H08 |
| 95 29 975 | 08A | 177 | 5-H10 |





## Numerical register / Nummerregister

| Part No / Art nr | Gr / Gr | Page / Sida | Grid / Koord |
|---|---|---|---|
| 95 29 975 | 08A | 179 | 5-H12 |
| 95 29 975 | 08A | 181 | 5-H14 |
| 95 29 975 | 08A | 183 | 5-H16 |
| 95 30 023 | 08B | 155 | 6-G12 |
| 95 30 031 | 08B | 155 | 6-G12 |
| 95 30 049 | 08B | 155 | 6-G12 |
| 95 30 056 | 08B | 155 | 6-G12 |
| 95 30 064 | 08B | 173 | 6-H06 |
| 95 30 072 | 08B | 173 | 6-H06 |
| 95 30 098 | 03A | 105 | 5-E10 |
| 95 30 106 | 08A | 105 | 5-E10 |
| 95 30 155 | 08B | 155 | 6-G12 |
| 95 30 155 | 08B | 223 | 6-J08 |
| 95 30 163 | 08B | 173 | 6-H06 |
| 95 30 163 | 08B | 225 | 6-J10 |
| 95 30 262 | 08B | 177 | 6-H10 |
| 95 30 296 | 08B | 047 | 6-B24 |
| 95 30 304 | 08B | 047 | 6-B24 |
| 95 30 312 | 08B | 047 | 6-B24 |
| 95 30 320 | 08B | 047 | 6-B24 |
| 95 30 338 | 08B | 047 | 6-B24 |
| 95 30 346 | 08B | 047 | 6-B24 |
| 95 30 361 | 08B | 055 | 6-C08 |
| 95 30 361 | 08B | 067 | 6-C20 |
| 95 30 379 | 08B | 055 | 6-C08 |
| 95 30 379 | 08B | 067 | 6-C20 |
| 95 30 387 | 08B | 055 | 6-C08 |
| 95 30 387 | 08B | 067 | 6-C20 |
| 95 30 635 | 08B | 047 | 6-B24 |
| 95 30 643 | 08B | 047 | 6-B24 |
| 95 30 650 | 08B | 055 | 6-C08 |
| 95 30 650 | 08B | 067 | 6-C20 |
| 95 30 668 | 08B | 047 | 6-B24 |
| 95 30 676 | 08B | 047 | 6-B24 |
| 95 30 684 | 08B | 047 | 6-B24 |
| 95 30 692 | 08B | 047 | 6-B24 |
| 95 30 700 | 08B | 055 | 6-C08 |
| 95 30 700 | 08B | 067 | 6-C20 |
| 95 30 718 | 08B | 047 | 6-B24 |
| 95 30 726 | 08B | 047 | 6-B24 |
| 95 30 734 | 08B | 055 | 6-C08 |
| 95 30 734 | 08B | 067 | 6-C20 |
| 95 30 742 | 08B | 047 | 6-B24 |
| 95 30 759 | 08B | 055 | 6-C08 |
| 95 30 759 | 08B | 067 | 6-C20 |
| 95 31 336 | 08B | 121 | 6-F02 |
| 95 31 377 | 08B | 133 | 6-F14 |
| 95 31 377 | 08B | 137 | 6-F18 |
| 95 31 401 | 08B | 013 | 6-A14 |
| 95 31 468 | 08B | 097 | 6-E02 |
| 95 31 468 | 08B | 109 | 6-E14 |
| 95 31 476 | 08B | 097 | 6-E02 |
| 95 31 476 | 08B | 109 | 6-E14 |
| 95 31 591 | 08B | 173 | 6-H06 |
| 95 31 617 | 08B | 173 | 6-H06 |
| 95 31 674 | 08B | 061 | 6-C14 |
| 95 31 690 | 08B | 061 | 6-C14 |
| 95 31 997 | 08B | 167 | 6-G24 |
| 95 31 997 | 08B | 179 | 6-H12 |
| 95 32 003 | 08B | 167 | 6-G24 |
| 95 32 003 | 08B | 179 | 6-H12 |
| 95 32 011 | 08B | 167 | 6-G24 |
| 95 32 011 | 08B | 179 | 6-H12 |
| 95 32 029 | 08B | 167 | 6-G24 |
| 95 32 029 | 08B | 179 | 6-H12 |
| 95 32 243 | 08B | 023 | 6-A24 |
| 95 32 250 | 08B | 023 | 6-A24 |
| 95 32 284 | 08B | 005 | 6-A06 |
| 95 32 300 | 08B | 005 | 6-A06 |
| 95 32 334 | 08A | 107 | 5-E12 |
| 95 32 342 | 08A | 107 | 5-E12 |
| 95 32 466 | 08B | 189 | 6-H22 |
| 95 32 896 | 08B | 059 | 6-C12 |
| 95 32 904 | 08B | 059 | 6-C12 |
| 95 32 938 | 08B | 061 | 6-C14 |
| 95 32 946 | 08B | 061 | 6-C14 |
| 95 32 979 | 08B | 061 | 6-C14 |
| 95 32 987 | 08B | 061 | 6-C14 |
| 95 33 019 | 08B | 061 | 6-C14 |
| 95 33 027 | 08B | 061 | 6-C14 |
| 95 33 134 | 08B | 011 | 6-A12 |
| 95 33 167 | 08B | 011 | 6-A12 |
| 95 33 233 | 08B | 015 | 6-A16 |
| 95 33 282 | 08B | 015 | 6-A16 |
| 95 33 332 | 08B | 015 | 6-A16 |
| 95 33 613 | 08B | 199 | 6-I08 |
| 95 33 621 | 08B | 199 | 6-I08 |
| 95 33 902 | 08B | 025 | 6-B02 |
| 95 33 902 | 08B | 035 | 6-B12 |
| 95 33 902 | 08B | 039 | 6-B16 |
| 95 33 902 | 08B | 047 | 6-B24 |
| 95 33 902 | 08B | 051 | 6-C04 |
| 95 33 910 | 08B | 025 | 6-B02 |
| 95 33 910 | 08B | 035 | 6-B12 |
| 95 33 910 | 08B | 039 | 6-B16 |
| 95 33 910 | 08B | 047 | 6-B24 |
| 95 33 910 | 08B | 051 | 6-C04 |
| 95 33 928 | 08B | 039 | 6-B16 |
| 95 33 928 | 08B | 047 | 6-B24 |
| 95 33 928 | 08B | 053 | 6-C06 |
| 95 33 936 | 08B | 055 | 6-C08 |
| 95 33 944 | 08B | 057 | 6-C10 |
| 95 33 944 | 08B | 067 | 6-C20 |
| 95 33 951 | 08B | 055 | 6-C08 |
| 95 33 977 | 08B | 197 | 6-I06 |
| 95 33 985 | 08B | 197 | 6-I06 |
| 95 34 025 | 08B | 141 | 6-F22 |
| 95 34 033 | 08B | 141 | 6-F22 |
| 95 34 439 | 08B | 019 | 6-A20 |
| 95 34 611 | 08B | 109 | 6-E14 |
| 95 34 629 | 08B | 109 | 6-E14 |
| 95 34 637 | 08B | 109 | 6-E14 |
| 95 34 637 | 08B | 119 | 6-E24 |
| 95 34 793 | 08B | 109 | 6-E14 |
| 95 34 801 | 08B | 109 | 6-E14 |
| 95 34 843 | 08B | 117 | 6-E22 |
| 95 34 850 | 08B | 117 | 6-E22 |
| 95 35 030 | 08B | 117 | 6-E22 |
| 95 35 048 | 08B | 117 | 6-E22 |
| 95 35 261 | 08B | 161 | 6-G18 |
| 95 35 279 | 08B | 161 | 6-G18 |
| 95 35 287 | 08B | 161 | 6-G18 |
| 95 35 303 | 08B | 181 | 6-H14 |
| 95 35 311 | 08B | 181 | 6-H14 |
| 95 35 345 | 08B | 181 | 6-H14 |
| 95 35 352 | 08B | 181 | 6-H14 |
| 95 35 360 | 08B | 181 | 6-H14 |
| 95 35 378 | 08B | 119 | 6-E24 |
| 95 35 386 | 08B | 119 | 6-E24 |
| 95 35 584 | 08B | 119 | 6-E24 |
| 95 35 592 | 08B | 119 | 6-E24 |
| 95 35 659 | 08B | 143 | 6-F24 |
| 95 35 667 | 08B | 143 | 6-F24 |
| 95 35 675 | 08B | 145 | 6-G02 |
| 95 35 683 | 08B | 145 | 6-G02 |
| 95 35 691 | 08B | 145 | 6-G02 |
| 95 35 709 | 08B | 211 | 6-I20 |
| 95 35 717 | 08B | 211 | 6-I20 |
| 95 35 816 | 08B | 177 | 6-H10 |
| 95 35 824 | 08B | 177 | 6-H10 |
| 95 35 840 | 08B | 069 | 6-C22 |
| 95 35 857 | 06B | 069 | 6-C22 |
| 95 35 865 | 08B | 069 | 6-C22 |
| 95 36 194 | 08B | 191 | 6-H24 |
| 95 36 236 | 08B | 139 | 6-F20 |
| 95 36 251 | 08B | 139 | 6-F20 |
| 95 36 277 | 08B | 139 | 6-F20 |
| 95 36 293 | 08B | 139 | 6-F20 |
| 95 36 319 | 08B | 139 | 6-F20 |
| 95 36 335 | 08B | 139 | 6-F20 |
| 95 36 350 | 08B | 139 | 6-F20 |
| 95 36 376 | 08B | 139 | 6-F20 |
| 95 36 392 | 08B | 139 | 6-F20 |
| 95 36 418 | 08B | 143 | 6-F24 |
| 95 36 434 | 08B | 143 | 6-F24 |
| 95 36 459 | 08B | 143 | 6-F24 |
| 95 36 475 | 08B | 143 | 6-F24 |
| 95 36 517 | 08B | 141 | 6-F22 |
| 95 36 533 | 08B | 141 | 6-F22 |
| 95 36 590 | 08B | 141 | 6-F22 |
| 95 36 616 | 08B | 141 | 6-F22 |
| 95 36 673 | 08B | 141 | 6-F22 |
| 95 36 699 | 08B | 141 | 6-F22 |
| 95 36 772 | 08B | 141 | 6-F22 |
| 95 36 822 | 08B | 111 | 6-E16 |
| 95 36 830 | 08B | 111 | 6-E16 |
| 95 36 863 | 08B | 111 | 6-E16 |
| 95 36 871 | 08B | 111 | 6-E16 |
| 95 36 905 | 08B | 117 | 6-E22 |
| 95 36 913 | 08B | 117 | 6-E22 |
| 95 36 921 | 08B | 119 | 6-E24 |
| 95 36 939 | 08B | 119 | 6-E24 |
| 95 36 988 | 08B | 113 | 6-E18 |
| 95 36 996 | 08B | 113 | 6-E18 |
| 95 37 002 | 08B | 113 | 6-E18 |
| 95 37 051 | 08B | 113 | 6-E18 |
| 95 37 069 | 08B | 113 | 6-E18 |
| 95 37 135 | 08B | 137 | 6-F18 |
| 95 37 143 | 08B | 137 | 6-F18 |
| 95 37 150 | 08B | 137 | 6-F18 |
| 95 37 168 | 08B | 137 | 6-F18 |
| 95 37 184 | 08B | 137 | 6-F18 |
| 95 37 382 | 08B | 137 | 6-F18 |
| 95 37 390 | 08B | 137 | 6-F18 |
| 95 37 408 | 08B | 137 | 6-F18 |
| 95 37 432 | 08B | 209 | 6-I18 |
| 95 37 440 | 08B | 207 | 6-I16 |
| 95 37 473 | 08B | 209 | 6-I18 |
| 95 37 481 | 08B | 207 | 6-I16 |
| 95 37 499 | 08B | 207 | 6-I16 |
| 95 37 515 | 08B | 209 | 6-I18 |
| 95 37 572 | 08B | 141 | 6-F22 |
| 95 37 606 | 08B | 199 | 6-I08 |
| 95 37 838 | 08B | 069 | 6-C22 |
| 95 37 846 | 08B | 069 | 6-C22 |
| 95 37 853 | 08B | 069 | 6-C22 |
| 95 37 861 | 08B | 069 | 6-C22 |
| 95 38 687 | 08B | 177 | 6-H10 |
| 95 38 695 | 08B | 059 | 6-C12 |
| 95 38 703 | 08B | 059 | 6-C12 |
| 95 38 711 | 08B | 059 | 6-C12 |
| 95 38 752 | 08B | 059 | 6-C12 |
| 95 38 760 | 08B | 059 | 6-C12 |
| 95 38 778 | 08B | 059 | 6-C12 |
| 95 38 794 | 08B | 059 | 6-C12 |
| 95 38 802 | 08B | 059 | 6-C12 |
| 95 38 810 | 08B | 059 | 6-C12 |
| 95 38 836 | 08B | 059 | 6-C12 |
| 95 38 844 | 08B | 059 | 6-C12 |
| 95 38 851 | 08B | 059 | 6-C12 |
| 95 38 976 | 08B | 063 | 6-C16 |
| 95 38 984 | 08B | 065 | 6-C18 |
| 95 38 992 | 08B | 063 | 6-C16 |
| 95 39 008 | 08B | 063 | 6-C16 |
| 95 39 024 | 08B | 063 | 6-C16 |
| 95 39 032 | 08B | 065 | 6-C18 |
| 95 39 040 | 08B | 063 | 6-C16 |
| 95 39 057 | 08B | 063 | 6-C16 |
| 95 39 271 | 08B | 063 | 6-C16 |
| 95 39 289 | 08B | 065 | 6-C18 |
| 95 39 297 | 08B | 063 | 6-C16 |
| 95 39 305 | 08B | 063 | 6-C16 |
| 95 39 321 | 08B | 063 | 6-C16 |
| 95 39 339 | 08B | 065 | 6-C18 |
| 95 39 354 | 08B | 063 | 6-C16 |
| 95 39 370 | 08B | 063 | 6-C16 |
| 95 39 388 | 08B | 065 | 6-C18 |
| 95 39 396 | 08B | 063 | 6-C16 |
| 95 39 404 | 08B | 063 | 6-C16 |
| 95 39 420 | 08B | 059 | 6-C12 |
| 95 39 420 | 08B | 063 | 6-C16 |
| 95 39 438 | 08B | 059 | 6-C12 |
| 95 39 438 | 08B | 065 | 6-C18 |
| 95 39 446 | 08B | 059 | 6-C12 |
| 95 39 446 | 08B | 063 | 6-C16 |
| 95 39 453 | 08B | 059 | 6-C12 |
| 95 39 453 | 08B | 063 | 6-C16 |
| 95 39 495 | 08B | 059 | 6-C12 |
| 95 39 503 | 08B | 059 | 6-C12 |
| 95 39 511 | 08B | 059 | 6-C12 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

# 7-G07 Numerical register / Nummerregister

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 95 39 529 | 08B | 059 | 6-C12 |
| 95 39 545 | 08B | 059 | 6-C12 |
| 95 39 552 | 08B | 059 | 6-C12 |
| 95 39 560 | 08B | 059 | 6-C12 |
| 95 39 578 | 08B | 059 | 6-C12 |
| 95 39 594 | 08B | 059 | 6-C12 |
| 95 39 594 | 08B | 063 | 6-C16 |
| 95 39 602 | 08B | 059 | 6-C12 |
| 95 39 602 | 08B | 065 | 6-C18 |
| 95 39 610 | 08B | 059 | 6-C12 |
| 95 39 610 | 08B | 063 | 6-C16 |
| 95 39 628 | 08B | 059 | 6-C12 |
| 95 39 628 | 08B | 063 | 6-C16 |
| 95 39 644 | 08B | 063 | 6-C16 |
| 95 39 651 | 08B | 065 | 6-C18 |
| 95 39 669 | 08B | 063 | 6-C16 |
| 95 39 677 | 08B | 063 | 6-C16 |
| 95 39 693 | 08B | 063 | 6-C16 |
| 95 39 701 | 08B | 065 | 6-C18 |
| 95 39 719 | 08B | 063 | 6-C16 |
| 95 39 727 | 08B | 063 | 6-C16 |
| 95 39 792 | 08B | 063 | 6-C16 |
| 95 39 800 | 08B | 065 | 6-C18 |
| 95 39 818 | 08B | 063 | 6-C16 |
| 95 39 826 | 08B | 063 | 6-C16 |
| 95 39 842 | 08B | 063 | 6-C16 |
| 95 39 859 | 08B | 065 | 6-C18 |
| 95 39 867 | 08B | 063 | 6-C16 |
| 95 39 875 | 08B | 063 | 6-C16 |
| 95 39 891 | 08B | 063 | 6-C16 |
| 95 39 891 | 08B | 067 | 6-C20 |
| 95 39 909 | 08B | 065 | 6-C18 |
| 95 39 909 | 08B | 069 | 6-C22 |
| 95 39 917 | 08B | 063 | 6-C16 |
| 95 39 925 | 08B | 063 | 6-C16 |
| 95 39 925 | 08B | 067 | 6-C20 |
| 95 40 139 | 08B | 211 | 6-I20 |
| 95 40 147 | 08B | 211 | 6-I20 |
| 95 40 154 | 08B | 211 | 6-I20 |
| 95 40 162 | 08B | 211 | 6-I20 |
| 95 40 188 | 08B | 211 | 6-I20 |
| 95 40 287 | 08B | 011 | 6-A12 |
| 95 40 295 | 08B | 011 | 6-A12 |
| 95 40 303 | 08B | 011 | 6-A12 |
| 95 40 311 | 08B | 011 | 6-A12 |
| 95 40 493 | 08B | 061 | 6-C14 |
| 95 40 501 | 08B | 061 | 6-C14 |
| 95 40 519 | 08B | 061 | 6-C14 |
| 95 40 527 | 08B | 061 | 6-C14 |
| 95 40 576 | 08B | 211 | 6-I20 |
| 95 40 592 | 08B | 005 | 6-A06 |
| 95 40 667 | 08B | 013 | 6-A14 |
| 95 40 675 | 08B | 011 | 6-A12 |
| 95 40 691 | 08B | 013 | 6-A14 |
| 95 40 774 | 02 | 201 | 1-J10 |
| 95 40 774 | 02 | 203 | 1-J12 |
| 95 40 774 | 02 | 205 | 1-J14 |
| 95 40 774 | 08B | 023 | 6-A24 |
| 95 40 782 | 08B | 023 | 6-A24 |
| 95 40 790 | 08B | 023 | 6-A24 |
| 95 40 840 | 08B | 011 | 6-A12 |
| 95 40 857 | 08B | 013 | 6-A14 |
| 95 40 865 | 08B | 013 | 6-A14 |
| 95 40 873 | 08B | 013 | 6-A14 |
| 95 40 881 | 08B | 173 | 6-H06 |
| 95 40 899 | 08B | 173 | 6-H06 |
| 95 40 907 | 08B | 013 | 6-A14 |
| 95 40 956 | 08B | 063 | 6-C16 |
| 95 40 964 | 08B | 065 | 6-C18 |
| 95 40 972 | 08B | 063 | 6-C16 |
| 95 40 980 | 08B | 063 | 6-C16 |
| 95 41 004 | 08B | 063 | 6-C16 |
| 95 41 012 | 08B | 065 | 6-C18 |
| 95 41 020 | 08B | 063 | 6-C16 |
| 95 41 038 | 08B | 063 | 6-C16 |
| 95 41 160 | 08B | 055 | 6-C08 |
| 95 41 178 | 08B | 055 | 6-C08 |
| 95 41 186 | 08B | 055 | 6-C08 |
| 95 41 194 | 08B | 055 | 6-C08 |
| 95 41 210 | 08B | 055 | 6-C08 |
| 95 41 228 | 08B | 055 | 6-C08 |
| 95 41 228 | 08B | 067 | 6-C20 |
| 95 41 236 | 08B | 055 | 6-C08 |
| 95 41 236 | 08B | 067 | 6-C20 |
| 95 41 244 | 08B | 055 | 6-C08 |
| 95 41 384 | 08B | 059 | 6-C12 |
| 95 41 392 | 08B | 059 | 6-C12 |
| 95 41 400 | 08B | 059 | 6-C12 |
| 95 41 418 | 08B | 059 | 6-C12 |
| 95 41 533 | 08B | 177 | 6-H10 |
| 95 41 574 | 08B | 069 | 6-C22 |
| 95 41 657 | 08B | 019 | 6-A20 |
| 95 42 077 | 08B | 177 | 6-H10 |
| 95 42 093 | 08B | 011 | 6-A12 |
| 95 42 168 | 08B | 161 | 6-G18 |
| 95 42 168 | 08B | 183 | 6-H16 |
| 95 42 242 | 08B | 133 | 6-F14 |
| 95 42 242 | 08B | 137 | 6-F18 |
| 95 44 826 | 08B | 023 | 6-A24 |
| 95 44 842 | 08B | 023 | 6-A24 |
| 95 45 104 | 08B | 163 | 6-G20 |
| 95 45 104 | 08B | 183 | 6-H16 |
| 95 45 898 | 08B | 141 | 6-F22 |
| 95 46 946 | 08B | 179 | 6-H12 |
| 95 46 946 | 08B | 229 | 6-J14 |
| 95 47 688 | 08B | 183 | 6-H16 |
| 95 50 468 | 03A | 073 | 2-D02 |
| 95 50 468 | 08C | 037 | 7-B14 |
| 95 50 468 | 08C | 041 | 7-B18 |
| 95 50 468 | 08C | 043 | 7-B20 |
| 95 50 468 | 08C | 047 | 7-B24 |
| 95 50 468 | 08C | 051 | 7-C04 |
| 95 50 468 | 08C | 053 | 7-C06 |
| 95 50 476 | 03A | 077 | 2-D06 |
| 95 50 583 | 09 | 011 | 7-D12 |
| 95 50 617 | 03A | 065 | 2-C18 |
| 95 50 914 | 03A | 143 | 2-F24 |
| 95 50 922 | 03A | 143 | 2-F24 |
| 95 50 948 | 03A | 135 | 2-F16 |
| 95 51 151 | 03A | 061 | 2-C14 |
| 95 51 151 | 08A | 177 | 5-H10 |
| 95 51 151 | 08A | 179 | 5-H12 |
| 95 51 151 | 08A | 181 | 5-H14 |
| 95 51 169 | 03A | 129 | 2-F10 |
| 95 51 219 | 03A | 029 | 2-B06 |
| 95 51 235 | 03A | 077 | 2-D06 |
| 95 51 896 | 03A | 145 | 2-G02 |
| 95 51 904 | 03A | 073 | 2-D02 |
| 95 51 953 | 03A | 047 | 2-B24 |
| 95 51 979 | 03A | 047 | 2-B24 |
| 95 51 987 | 03A | 065 | 2-C18 |
| 95 52 100 | 03B | 025 | 3-B02 |
| 95 52 100 | 03B | 047 | 3-B24 |
| 95 52 100 | 03B | 067 | 3-C20 |
| 95 52 100 | 03B | 111 | 3-E16 |
| 95 52 100 | 03B | 123 | 3-F04 |
| 95 52 100 | 03B | 135 | 3-F16 |
| 95 52 100 | 03B | 147 | 3-G04 |
| 95 52 126 | 03B | 047 | 3-B24 |
| 95 52 126 | 03B | 067 | 3-C20 |
| 95 52 126 | 03B | 085 | 3-D14 |
| 95 52 126 | 03B | 091 | 3-D20 |
| 95 52 126 | 03B | 095 | 3-D24 |
| 95 52 126 | 03B | 123 | 3-F04 |
| 95 52 126 | 03B | 135 | 3-F16 |
| 95 52 126 | 03B | 147 | 3-G04 |
| 95 52 209 | 03A | 085 | 2-D14 |
| 95 52 217 | 03A | 085 | 2-D14 |
| 95 52 225 | 03A | 085 | 2-D14 |
| 95 52 233 | 03A | 085 | 2-D14 |
| 95 52 241 | 03A | 085 | 2-D14 |
| 95 52 258 | 03A | 085 | 2-D14 |
| 95 52 266 | 03A | 085 | 2-D14 |
| 95 52 274 | 03A | 085 | 2-D14 |
| 95 52 282 | 03A | 085 | 2-D14 |
| 95 52 290 | 03A | 085 | 2-D14 |
| 95 52 308 | 03A | 085 | 2-D14 |
| 95 52 316 | 03A | 085 | 2-D14 |
| 95 52 324 | 03A | 085 | 2-D14 |
| 95 52 332 | 03A | 085 | 2-D14 |
| 95 52 340 | 03A | 085 | 2-D14 |
| 95 52 365 | 03A | 089 | 2-D18 |
| 95 52 373 | 03A | 089 | 2-D18 |
| 95 52 399 | 03A | 089 | 2-D18 |
| 95 52 407 | 03A | 089 | 2-D18 |
| 95 52 423 | 03A | 089 | 2-D18 |
| 95 52 431 | 03A | 089 | 2-D18 |
| 95 52 506 | 03A | 089 | 2-D18 |
| 95 52 514 | 03A | 089 | 2-D18 |
| 95 52 530 | 03A | 089 | 2-D18 |
| 95 52 555 | 03A | 089 | 2-D18 |
| 95 52 563 | 03A | 089 | 2-D18 |
| 95 52 571 | 03A | 089 | 2-D18 |
| 95 52 597 | 03A | 089 | 2-D18 |
| 95 52 605 | 03A | 089 | 2-D18 |
| 95 52 639 | 03A | 027 | 2-B04 |
| 95 52 647 | 03A | 027 | 2-B04 |
| 95 52 878 | 02 | 153 | 1-H10 |
| 95 52 878 | 08C | 041 | 7-B18 |
| 95 52 969 | 03A | 133 | 2-F14 |
| 95 53 132 | 03A | 047 | 2-B24 |
| 95 53 140 | 03A | 085 | 2-D14 |
| 95 53 157 | 03A | 085 | 2-D14 |
| 95 53 173 | 03A | 085 | 2-D14 |
| 95 53 181 | 03A | 085 | 2-D14 |
| 95 53 199 | 03A | 085 | 2-D14 |
| 95 53 199 | 03A | 095 | 2-D24 |
| 95 53 199 | 03A | 105 | 2-E10 |
| 95 53 207 | 03A | 085 | 2-D14 |
| 95 53 207 | 03A | 095 | 2-D24 |
| 95 53 280 | 03A | 129 | 2-F10 |
| 95 53 306 | 03A | 055 | 2-C08 |
| 95 53 314 | 03A | 055 | 2-C08 |
| 95 53 454 | 03A | 089 | 2-D18 |
| 95 53 470 | 03A | 143 | 2-F24 |
| 95 53 488 | 03A | 143 | 2-F24 |
| 95 53 496 | 03A | 005 | 2-A06 |
| 95 53 504 | 03A | 005 | 2-A06 |
| 95 53 512 | 03A | 047 | 2-B24 |
| 95 53 520 | 03A | 089 | 2-D18 |
| 95 53 546 | 03A | 135 | 2-F16 |
| 95 53 553 | 03A | 091 | 2-D20 |
| 95 53 553 | 03A | 101 | 2-E06 |
| 95 53 553 | 03A | 111 | 2-E16 |
| 95 53 553 | 03A | 121 | 2-F02 |
| 95 53 751 | 03A | 093 | 2-D22 |
| 95 53 751 | 03A | 103 | 2-E08 |
| 95 53 751 | 03A | 113 | 2-E18 |
| 95 53 751 | 03A | 123 | 2-F04 |
| 95 54 411 | 03A | 049 | 2-C02 |
| 95 54 429 | 03A | 073 | 2-D02 |
| 95 54 833 | 03A | 087 | 2-D16 |
| 95 54 841 | 03A | 087 | 2-D16 |
| 95 54 841 | 03A | 097 | 2-E02 |
| 95 54 841 | 03A | 105 | 2-E10 |
| 95 54 841 | 03A | 117 | 2-E22 |
| 95 54 841 | 08C | 041 | 7-B18 |
| 95 54 841 | 08C | 045 | 7-B22 |
| 95 54 858 | 03A | 087 | 2-D16 |
| 95 54 858 | 03A | 097 | 2-E02 |
| 95 54 866 | 03A | 133 | 2-F14 |
| 95 54 874 | 03A | 133 | 2-F14 |
| 95 54 882 | 03A | 133 | 2-F14 |
| 95 54 890 | 03A | 133 | 2-F14 |
| 95 55 194 | 03A | 067 | 2-C20 |
| 95 55 202 | 03A | 055 | 2-C08 |
| 95 55 251 | 03A | 007 | 2-A08 |
| 95 55 277 | 03A | 009 | 2-A10 |
| 95 55 293 | 03A | 009 | 2-A10 |
| 95 55 301 | 03A | 007 | 2-A08 |
| 95 55 327 | 03A | 047 | 2-B24 |
| 95 55 541 | 03A | 141 | 2-F22 |
| 95 55 608 | 03A | 005 | 2-A06 |
| 95 55 624 | 03A | 005 | 2-A06 |
| 95 55 632 | 03A | 005 | 2-A06 |
| 95 55 764 | 03A | 005 | 2-A06 |
| 95 55 772 | 03A | 005 | 2-A06 |
| 95 55 897 | 03A | 085 | 2-D14 |
| 95 55 897 | 03A | 095 | 2-D24 |
| 95 55 905 | 03A | 085 | 2-D14 |



# 7-G08 Numerical register / Nummerregister

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 95 55 905 | 03A | 095 | 2-D24 |
| 95 55 905 | 03A | 105 | 2-E10 |
| 95 55 905 | 03A | 115 | 2-E20 |
| 95 55 913 | 08C | 041 | 7-B18 |
| 95 55 913 | 08C | 045 | 7-B22 |
| 95 55 913 | 08C | 051 | 7-C04 |
| 95 55 913 | 08C | 053 | 7-C06 |
| 95 55 962 | 03A | 055 | 2-C08 |
| 95 55 962 | 03A | 147 | 2-G04 |
| 95 55 970 | 03A | 029 | 2-B06 |
| 95 55 988 | 03A | 029 | 2-B06 |
| 95 55 996 | 03A | 029 | 2-B06 |
| 95 56 002 | 03A | 029 | 2-B06 |
| 95 56 010 | 03A | 033 | 2-B10 |
| 95 56 028 | 03A | 033 | 2-B10 |
| 95 56 051 | 03A | 037 | 2-B14 |
| 95 56 069 | 03A | 037 | 2-B14 |
| 95 56 077 | 03A | 037 | 2-B14 |
| 95 56 085 | 03A | 037 | 2-B14 |
| 95 56 093 | 03A | 037 | 2-B14 |
| 95 56 101 | 03A | 037 | 2-B14 |
| 95 56 135 | 03A | 071 | 2-C24 |
| 95 56 143 | 03A | 071 | 2-C24 |
| 95 56 176 | 03A | 131 | 2-F12 |
| 95 56 184 | 03A | 137 | 2-F18 |
| 95 56 200 | 03A | 057 | 2-C10 |
| 95 56 218 | 03A | 057 | 2-C10 |
| 95 56 242 | 03A | 057 | 2-C10 |
| 95 56 283 | 03A | 057 | 2-C10 |
| 95 56 291 | 03A | 057 | 2-C10 |
| 95 56 309 | 03A | 057 | 2-C10 |
| 95 56 309 | 03A | 149 | 2-G06 |
| 95 56 333 | 08B | 147 | 6-G04 |
| 95 56 341 | 08B | 147 | 6-G04 |
| 95 56 358 | 08B | 149 | 6-G06 |
| 95 56 390 | 03A | 137 | 2-F18 |
| 95 56 424 | 03A | 131 | 2-F12 |
| 95 56 655 | 03A | 029 | 2-B06 |
| 95 56 663 | 03A | 029 | 2-B06 |
| 95 56 671 | 03A | 029 | 2-B06 |
| 95 56 689 | 03A | 029 | 2-B06 |
| 95 56 697 | 03A | 029 | 2-B06 |
| 95 56 705 | 03A | 029 | 2-B06 |
| 95 56 713 | 03A | 029 | 2-B06 |
| 95 56 721 | 03A | 029 | 2-B06 |
| 95 56 812 | 03A | 029 | 2-B06 |
| 95 56 812 | 03A | 033 | 2-B10 |
| 95 56 820 | 03A | 029 | 2-B06 |
| 95 56 820 | 03A | 033 | 2-B10 |
| 95 56 986 | 03A | 037 | 2-B14 |
| 95 56 994 | 03A | 037 | 2-B14 |
| 95 57 018 | 03A | 033 | 2-B10 |
| 95 57 026 | 03A | 033 | 2-B10 |
| 95 57 075 | 03A | 033 | 2-B10 |
| 95 57 083 | 03A | 033 | 2-B10 |
| 95 57 158 | 03A | 033 | 2-B10 |
| 95 57 190 | 03A | 143 | 2-F24 |
| 95 57 240 | 03A | 059 | 2-C12 |
| 95 57 257 | 03A | 095 | 2-D24 |
| 95 57 265 | 03A | 095 | 2-D24 |
| 95 57 281 | 03A | 095 | 2-D24 |
| 95 57 299 | 03A | 095 | 2-D24 |
| 95 57 307 | 03A | 095 | 2-D24 |
| 95 57 315 | 03A | 095 | 2-D24 |
| 95 57 364 | 03A | 095 | 2-D24 |
| 95 57 372 | 03A | 095 | 2-D24 |
| 95 57 380 | 03A | 095 | 2-D24 |
| 95 57 398 | 03A | 095 | 2-D24 |
| 95 57 406 | 03A | 095 | 2-D24 |
| 95 57 414 | 03A | 095 | 2-D24 |
| 95 57 422 | 03A | 095 | 2-D24 |
| 95 57 430 | 03A | 095 | 2-D24 |
| 95 57 448 | 03A | 095 | 2-D24 |
| 95 57 455 | 03A | 095 | 2-D24 |
| 95 57 463 | 03A | 095 | 2-D24 |
| 95 57 471 | 03A | 095 | 2-D24 |
| 95 57 489 | 03A | 095 | 2-D24 |
| 95 57 497 | 03A | 095 | 2-D24 |
| 95 57 505 | 03A | 097 | 2-E02 |
| 95 57 505 | 03A | 105 | 2-E10 |
| 95 57 505 | 03A | 117 | 2-E22 |
| 95 57 505 | 08C | 041 | 7-B18 |
| 95 57 505 | 08C | 045 | 7-B22 |
| 95 57 505 | 08C | 051 | 7-C04 |
| 95 57 521 | 03A | 099 | 2-E04 |
| 95 57 539 | 03A | 099 | 2-E04 |
| 95 57 554 | 03A | 099 | 2-E04 |
| 95 57 562 | 03A | 099 | 2-E04 |
| 95 57 588 | 03A | 099 | 2-E04 |
| 95 57 596 | 03A | 099 | 2-E04 |
| 95 57 646 | 03A | 099 | 2-E04 |
| 95 57 653 | 03A | 099 | 2-E04 |
| 95 57 679 | 03A | 099 | 2-E04 |
| 95 57 695 | 03A | 099 | 2-E04 |
| 95 57 703 | 03A | 099 | 2-E04 |
| 95 57 711 | 03A | 099 | 2-E04 |
| 95 57 729 | 03A | 099 | 2-E04 |
| 95 57 737 | 03A | 099 | 2-E04 |
| 95 57 745 | 03A | 099 | 2-E04 |
| 95 57 752 | 03A | 099 | 2-E04 |
| 95 57 760 | 03A | 099 | 2-E04 |
| 95 57 760 | 03A | 109 | 2-E14 |
| 95 57 760 | 03A | 119 | 2-E24 |
| 95 57 778 | 03A | 059 | 2-C12 |
| 95 57 885 | 03A | 051 | 2-C04 |
| 95 57 893 | 03A | 103 | 2-E08 |
| 95 57 901 | 03A | 103 | 2-E08 |
| 95 57 919 | 03A | 101 | 2-E06 |
| 95 57 935 | 03A | 101 | 2-E06 |
| 95 57 935 | 03A | 111 | 2-E16 |
| 95 57 935 | 03A | 121 | 2-F02 |
| 95 58 008 | 03A | 131 | 2-F12 |
| 95 58 024 | 08B | 149 | 6-G06 |
| 95 58 032 | 03A | 029 | 2-B06 |
| 95 58 040 | 03A | 029 | 2-B06 |
| 95 58 057 | 03A | 029 | 2-B06 |
| 95 58 065 | 03A | 029 | 2-B06 |
| 95 58 073 | 03A | 135 | 2-F16 |
| 95 58 149 | 03A | 057 | 2-C10 |
| 95 58 784 | 08C | 007 | 7-A08 |
| 95 58 875 | 03A | 137 | 2-F18 |
| 95 59 345 | 03A | 055 | 2-C08 |
| 95 59 352 | 03A | 055 | 2-C08 |
| 95 59 378 | 03A | 099 | 2-E04 |
| 95 59 378 | 03A | 109 | 2-E14 |
| 95 59 378 | 03A | 119 | 2-E24 |
| 95 59 386 | 03A | 099 | 2-E04 |
| 95 59 386 | 03A | 109 | 2-E14 |
| 95 59 386 | 03A | 119 | 2-E24 |
| 95 59 469 | 03B | 117 | 3-E22 |
| 95 59 469 | 03B | 129 | 3-F10 |
| 95 59 469 | 03B | 141 | 3-F22 |
| 95 59 493 | 03A | 133 | 2-F14 |
| 95 59 501 | 03A | 133 | 2-F14 |
| 95 59 659 | 03A | 133 | 2-F14 |
| 95 59 667 | 03A | 133 | 2-F14 |
| 95 59 766 | 03A | 073 | 2-D02 |
| 95 59 782 | 03A | 005 | 2-A06 |
| 95 59 790 | 03A | 133 | 2-F14 |
| 95 59 840 | 03A | 073 | 2-D02 |
| 95 59 931 | 03A | 073 | 2-D02 |
| 95 60 137 | 03A | 141 | 2-F22 |
| 95 60 145 | 03A | 143 | 2-F24 |
| 95 60 152 | 03A | 143 | 2-F24 |
| 95 60 293 | 03A | 143 | 2-F24 |
| 95 60 301 | 03A | 097 | 2-E02 |
| 95 60 319 | 08B | 147 | 6-G04 |
| 95 60 327 | 08B | 147 | 6-G04 |
| 95 60 343 | 03A | 101 | 2-E06 |
| 95 60 343 | 03A | 111 | 2-E16 |
| 95 60 343 | 03A | 121 | 2-F02 |
| 95 60 350 | 03A | 101 | 2-E06 |
| 95 60 350 | 03A | 111 | 2-E16 |
| 95 60 350 | 03A | 121 | 2-F02 |
| 95 60 384 | 08A | 075 | 5-D04 |
| 95 60 491 | 03A | 143 | 2-F24 |
| 95 60 509 | 03A | 143 | 2-F24 |
| 95 60 517 | 03A | 141 | 2-F22 |
| 95 60 525 | 03A | 143 | 2-F24 |
| 95 60 665 | 03A | 143 | 2-F24 |
| 95 60 731 | 03A | 143 | 2-F24 |
| 95 60 749 | 03A | 143 | 2-F24 |
| 95 60 772 | 03A | 143 | 2-F24 |
| 95 60 780 | 03A | 143 | 2-F24 |
| 95 60 889 | 03A | 135 | 2-F16 |
| 95 60 905 | 03A | 067 | 2-C20 |
| 95 60 939 | 03A | 137 | 2-F18 |
| 95 60 962 | 03A | 073 | 2-D02 |
| 95 61 044 | 03A | 137 | 2-F18 |
| 95 61 093 | 03B | 075 | 3-D04 |
| 95 61 093 | 03B | 103 | 3-E08 |
| 95 61 135 | 03A | 105 | 2-E10 |
| 95 61 143 | 03A | 105 | 2-E10 |
| 95 61 150 | 03A | 105 | 2-E10 |
| 95 61 176 | 03A | 105 | 2-E10 |
| 95 61 184 | 03A | 105 | 2-E10 |
| 95 61 192 | 03A | 105 | 2-E10 |
| 95 61 200 | 03A | 105 | 2-E10 |
| 95 61 218 | 03A | 105 | 2-E10 |
| 95 61 242 | 03A | 105 | 2-E10 |
| 95 61 259 | 03A | 105 | 2-E10 |
| 95 61 267 | 03A | 105 | 2-E10 |
| 95 61 275 | 03A | 105 | 2-E10 |
| 95 61 283 | 03A | 105 | 2-E10 |
| 95 61 291 | 03A | 105 | 2-E10 |
| 95 61 309 | 03A | 105 | 2-E10 |
| 95 61 317 | 03A | 105 | 2-E10 |
| 95 61 333 | 03B | 065 | 3-C18 |
| 95 61 333 | 03B | 091 | 3-D20 |
| 95 61 333 | 03B | 095 | 3-D24 |
| 95 61 341 | 03B | 065 | 3-C18 |
| 95 61 341 | 03B | 091 | 3-D20 |
| 95 61 341 | 03B | 095 | 3-D24 |
| 95 61 366 | 03A | 073 | 2-D02 |
| 95 61 424 | 03A | 097 | 2-E02 |
| 95 61 432 | 08B | 147 | 6-G04 |
| 95 61 432 | 08B | 157 | 6-G14 |
| 95 61 440 | 08B | 149 | 6-G06 |
| 95 61 440 | 08B | 157 | 6-G14 |
| 95 61 614 | 03A | 105 | 2-E10 |
| 95 61 630 | 03A | 105 | 2-E10 |
| 95 61 648 | 03A | 105 | 2-E10 |
| 95 61 655 | 03A | 107 | 2-E12 |
| 95 61 655 | 03A | 117 | 2-E22 |
| 95 61 655 | 08C | 051 | 7-C04 |
| 95 61 689 | 03A | 109 | 2-E14 |
| 95 61 697 | 03A | 109 | 2-E14 |
| 95 61 713 | 03A | 109 | 2-E14 |
| 95 61 739 | 03A | 109 | 2-E14 |
| 95 61 762 | 03A | 109 | 2-E14 |
| 95 61 770 | 03A | 109 | 2-E14 |
| 95 61 788 | 03A | 109 | 2-E14 |
| 95 61 796 | 03A | 109 | 2-E14 |
| 95 61 804 | 03A | 087 | 2-D16 |
| 95 61 804 | 03A | 097 | 2-E02 |
| 95 61 804 | 03A | 107 | 2-E12 |
| 95 61 804 | 03A | 117 | 2-E22 |
| 95 61 994 | 03A | 109 | 2-E14 |
| 95 62 000 | 03A | 109 | 2-E14 |
| 95 62 026 | 03A | 109 | 2-E14 |
| 95 62 034 | 03A | 109 | 2-E14 |
| 95 62 042 | 03A | 109 | 2-E14 |
| 95 62 059 | 03A | 109 | 2-E14 |
| 95 62 067 | 03A | 109 | 2-E14 |
| 95 62 125 | 03A | 105 | 2-E10 |
| 95 62 141 | 03A | 067 | 2-C20 |
| 95 62 158 | 03A | 067 | 2-C20 |
| 95 62 273 | 03A | 113 | 2-E18 |
| 95 62 281 | 03A | 113 | 2-E18 |
| 95 62 752 | 03A | 009 | 2-A10 |
| 95 63 081 | 03B | 051 | 3-C04 |
| 95 63 081 | 03B | 071 | 3-C24 |
| 95 63 081 | 03B | 099 | 3-E04 |
| 95 63 099 | 03A | 067 | 2-C20 |
| 95 63 099 | 03A | 081 | 2-D10 |
| 95 63 099 | 03A | 137 | 2-F18 |
| 95 63 107 | 08B | 157 | 6-G14 |
| 95 63 115 | 08B | 157 | 6-G14 |
| 95 63 123 | 08B | 157 | 6-G14 |
| 95 63 149 | 03A | 067 | 2-C20 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

# 7-G09 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 95 63 164 | 03A | 083 | 2-D12 |
| 95 63 313 | 03A | 137 | 2-F18 |
| 95 63 354 | 03A | 131 | 2-F12 |
| 95 63 412 | 03A | 009 | 2-A10 |
| 95 63 719 | 03A | 133 | 2-F14 |
| 95 63 735 | 03A | 133 | 2-F14 |
| 95 63 750 | 03A | 133 | 2-F14 |
| 95 63 776 | 03A | 133 | 2-F14 |
| 95 64 014 | 03A | 131 | 2-F12 |
| 95 64 170 | 03A | 061 | 2-C14 |
| 95 64 170 | 08A | 175 | 5-H08 |
| 95 64 170 | 08A | 177 | 5-H10 |
| 95 64 170 | 08A | 179 | 5-H12 |
| 95 64 170 | 08A | 181 | 5-H14 |
| 95 64 170 | 08A | 183 | 5-H16 |
| 95 64 204 | 03B | 051 | 3-C04 |
| 95 64 204 | 03B | 073 | 3-D02 |
| 95 64 204 | 03B | 103 | 3-E08 |
| 95 64 345 | 03A | 061 | 2-C14 |
| 95 64 345 | 08A | 175 | 5-H08 |
| 95 64 345 | 08A | 177 | 5-H10 |
| 95 64 345 | 08A | 179 | 5-H12 |
| 95 64 345 | 08A | 181 | 5-H14 |
| 95 64 345 | 08A | 183 | 5-H16 |
| 95 64 477 | 03A | 111 | 2-E16 |
| 95 64 477 | 03A | 121 | 2-F02 |
| 95 64 675 | 03A | 113 | 2-E18 |
| 95 64 675 | 03A | 123 | 2-F04 |
| 95 64 683 | 03A | 113 | 2-E18 |
| 95 64 683 | 03A | 123 | 2-F04 |
| 95 64 691 | 03A | 123 | 2-F04 |
| 95 64 709 | 03A | 123 | 2-F04 |
| 95 64 733 | 03A | 071 | 2-C24 |
| 95 64 733 | 03A | 073 | 2-D02 |
| 95 64 816 | 03A | 107 | 2-E12 |
| 95 64 857 | 03A | 079 | 2-D08 |
| 95 64 865 | 03A | 069 | 2-C22 |
| 95 64 949 | 03A | 067 | 2-C20 |
| 95 65 623 | 03A | 063 | 2-C16 |
| 95 65 698 | 03A | 143 | 2-F24 |
| 95 65 896 | 03A | 143 | 2-F24 |
| 95 65 904 | 03A | 143 | 2-F24 |
| 95 66 019 | 03A | 141 | 2-F22 |
| 95 66 027 | 03A | 141 | 2-F22 |
| 95 66 035 | 03A | 143 | 2-F24 |
| 95 66 043 | 03A | 143 | 2-F24 |
| 95 66 050 | 03A | 141 | 2-F22 |
| 95 66 068 | 03A | 141 | 2-F22 |
| 95 66 076 | 03A | 141 | 2-F22 |
| 95 66 084 | 03A | 141 | 2-F22 |
| 95 66 092 | 03A | 143 | 2-F24 |
| 95 66 332 | 03A | 059 | 2-C12 |
| 95 66 381 | 03A | 067 | 2-C20 |
| 95 66 381 | 03A | 069 | 2-C22 |
| 95 66 399 | 03A | 067 | 2-C20 |
| 95 66 415 | 03A | 067 | 2-C20 |
| 95 66 415 | 03A | 069 | 2-C22 |
| 95 66 423 | 03A | 069 | 2-C22 |
| 95 66 548 | 03A | 067 | 2-C20 |
| 95 66 647 | 03A | 135 | 2-F16 |
| 95 66 902 | 03A | 059 | 2-C12 |
| 95 67 017 | 03A | 139 | 2-F20 |
| 95 67 082 | 03A | 141 | 2-F22 |
| 95 67 181 | 03A | 141 | 2-F22 |
| 95 67 215 | 03A | 089 | 2-D18 |
| 95 67 215 | 03A | 151 | 2-G08 |
| 95 67 223 | 03A | 047 | 2-B24 |
| 95 67 454 | 03A | 145 | 2-G02 |
| 95 67 462 | 03A | 145 | 2-G02 |
| 95 68 064 | 03A | 051 | 2-C04 |
| 95 68 122 | 03A | 063 | 2-C16 |
| 95 68 163 | 03A | 119 | 2-E24 |
| 95 68 171 | 03A | 119 | 2-E24 |
| 95 68 197 | 03A | 119 | 2-E24 |
| 95 68 205 | 03A | 119 | 2-E24 |
| 95 68 239 | 03A | 119 | 2-E24 |
| 95 68 254 | 03A | 119 | 2-E24 |
| 95 68 288 | 03A | 107 | 2-E12 |
| 95 68 288 | 03A | 117 | 2-E22 |
| 95 68 346 | 03A | 115 | 2-E20 |
| 95 68 353 | 03A | 115 | 2-E20 |
| 95 68 379 | 03A | 115 | 2-E20 |
| 95 68 387 | 03A | 115 | 2-E20 |
| 95 68 395 | 03A | 115 | 2-E20 |
| 95 68 403 | 03A | 115 | 2-E20 |
| 95 68 411 | 03A | 115 | 2-E20 |
| 95 68 429 | 03A | 115 | 2-E20 |
| 95 68 445 | 03A | 115 | 2-E20 |
| 95 68 452 | 03A | 115 | 2-E20 |
| 95 68 478 | 03A | 115 | 2-E20 |
| 95 68 486 | 03A | 115 | 2-E20 |
| 95 68 494 | 03A | 115 | 2-E20 |
| 95 68 502 | 03A | 115 | 2-E20 |
| 95 68 510 | 03A | 115 | 2-E20 |
| 95 68 528 | 03A | 115 | 2-E20 |
| 95 68 536 | 03A | 067 | 2-C20 |
| 95 68 551 | 03A | 115 | 2-E20 |
| 95 68 577 | 03A | 115 | 2-E20 |
| 95 68 585 | 03A | 115 | 2-E20 |
| 95 68 627 | 03A | 119 | 2-E24 |
| 95 68 635 | 03A | 119 | 2-E24 |
| 95 68 650 | 03A | 119 | 2-E24 |
| 95 68 676 | 03A | 119 | 2-E24 |
| 95 68 684 | 03A | 119 | 2-E24 |
| 95 68 692 | 03A | 119 | 2-E24 |
| 95 68 700 | 03A | 119 | 2-E24 |
| 95 68 718 | 03A | 119 | 2-E24 |
| 95 68 726 | 03A | 115 | 2-E20 |
| 95 68 734 | 03A | 119 | 2-E24 |
| 95 68 742 | 03A | 067 | 2-C20 |
| 95 68 759 | 03A | 067 | 2-C20 |
| 95 68 783 | 03A | 071 | 2-C24 |
| 95 68 809 | 03A | 071 | 2-C24 |
| 95 68 817 | 03A | 111 | 2-E16 |
| 95 68 817 | 03A | 121 | 2-F02 |
| 95 68 825 | 03A | 115 | 2-E20 |
| 95 68 833 | 03A | 115 | 2-E20 |
| 95 68 882 | 03A | 067 | 2-C20 |
| 95 69 013 | 03A | 059 | 2-C12 |
| 95 69 799 | 03A | 131 | 2-F12 |
| 95 69 864 | 03A | 073 | 2-D02 |
| 95 69 948 | 03A | 049 | 2-C02 |
| 95 69 955 | 08B | 157 | 6-G14 |
| 95 69 955 | 08B | 173 | 6-H06 |
| 95 69 955 | 08B | 223 | 6-J08 |
| 95 71 696 | 08B | 161 | 6-G18 |
| 95 71 696 | 08B | 183 | 6-H16 |
| 95 72 975 | 08B | 055 | 6-C08 |
| 95 72 975 | 08B | 067 | 6-C20 |
| 95 78 501 | 08B | 055 | 6-C08 |
| 95 78 519 | 08B | 057 | 6-C10 |
| 95 78 519 | 08B | 067 | 6-C20 |
| 95 78 527 | 08B | 055 | 6-C08 |
| 95 79 244 | 08B | 189 | 6-H22 |
| 95 79 509 | 08B | 029 | 6-B06 |
| 95 79 509 | 08B | 031 | 6-B08 |
| 95 79 509 | 08B | 041 | 6-B18 |
| 95 79 509 | 08B | 051 | 6-C04 |
| 95 79 517 | 08B | 029 | 6-B06 |
| 95 79 517 | 08B | 041 | 6-B18 |
| 95 79 517 | 08B | 053 | 6-C06 |
| 95 79 525 | 08B | 029 | 6-B06 |
| 95 79 525 | 08B | 031 | 6-B08 |
| 95 79 525 | 08B | 041 | 6-B18 |
| 95 79 525 | 08B | 051 | 6-C04 |
| 95 79 533 | 08B | 029 | 6-B06 |
| 95 79 533 | 08B | 031 | 6-B08 |
| 95 79 533 | 08B | 043 | 6-B20 |
| 95 79 533 | 08B | 053 | 6-C06 |
| 95 79 541 | 08B | 053 | 6-C06 |
| 95 79 558 | 08B | 033 | 6-B10 |
| 95 79 558 | 08B | 043 | 6-B20 |
| 95 79 558 | 08B | 055 | 6-C08 |
| 95 79 566 | 08B | 055 | 6-C08 |
| 95 79 566 | 08B | 067 | 6-C20 |
| 95 79 574 | 08B | 033 | 6-B10 |
| 95 79 574 | 08B | 045 | 6-B22 |
| 95 79 574 | 08B | 057 | 6-C10 |
| 95 79 574 | 08B | 067 | 6-C20 |
| 95 79 582 | 08B | 043 | 6-B20 |
| 95 79 582 | 08B | 055 | 6-C08 |
| 95 80 408 | 08B | 183 | 6-H16 |
| 95 84 715 | 08B | 225 | 6-J10 |
| 95 84 723 | 08B | 225 | 6-J10 |
| 95 84 731 | 08B | 157 | 6-G14 |
| 95 84 731 | 08B | 185 | 6-H18 |
| 95 84 731 | 08B | 225 | 6-J10 |
| 95 84 749 | 08B | 173 | 6-H06 |
| 95 84 749 | 08B | 223 | 6-J08 |
| 95 84 749 | 08B | 225 | 6-J10 |
| 95 86 975 | 08B | 179 | 6-H12 |
| 95 86 983 | 08B | 179 | 6-H12 |
| 95 88 849 | 08B | 063 | 6-C16 |
| 95 88 856 | 08B | 065 | 6-C18 |
| 95 88 864 | 08B | 063 | 6-C16 |
| 95 88 872 | 08B | 063 | 6-C16 |
| 95 89 045 | 08B | 179 | 6-H12 |
| 95 89 045 | 08B | 229 | 6-J14 |
| 95 89 110 | 08B | 203 | 6-I12 |
| 95 89 201 | 08B | 069 | 6-C22 |
| 95 91 488 | 08A | 105 | 5-E10 |
| 95 91 496 | 08A | 107 | 5-E12 |
| 95 91 660 | 08A | 107 | 5-E12 |
| 95 91 736 | 08A | 107 | 5-E12 |
| 95 91 744 | 08A | 105 | 5-E10 |
| 95 91 868 | 08A | 107 | 5-E12 |
| 95 93 245 | 08B | 173 | 6-H06 |
| 95 93 245 | 08B | 225 | 6-J10 |
| 95 93 260 | 08B | 189 | 6-H22 |
| 95 93 278 | 08B | 189 | 6-H22 |
| 95 93 534 | 08B | 199 | 6-I08 |
| 95 93 542 | 08B | 195 | 6-I04 |
| 95 93 930 | 08B | 173 | 6-H06 |
| 95 93 930 | 08B | 225 | 6-J10 |
| 95 94 607 | 08B | 059 | 6-C12 |
| 95 94 607 | 08B | 063 | 6-C16 |
| 95 94 615 | 08B | 059 | 6-C12 |
| 95 94 615 | 08B | 063 | 6-C16 |
| 95 94 623 | 08B | 059 | 6-C12 |
| 95 94 623 | 08B | 063 | 6-C16 |
| 95 94 631 | 08B | 059 | 6-C12 |
| 95 94 631 | 08B | 065 | 6-C18 |
| 95 96 560 | 03A | 137 | 2-F18 |
| 95 96 578 | 03A | 089 | 2-D18 |
| 95 96 586 | 03A | 091 | 2-D20 |
| 95 96 586 | 03A | 101 | 2-E06 |
| 95 96 586 | 03A | 111 | 2-E16 |
| 95 96 586 | 03A | 121 | 2-F02 |
| 95 96 594 | 03A | 077 | 2-D06 |
| 95 96 875 | 03A | 081 | 2-D10 |
| 95 96 891 | 03A | 081 | 2-D10 |
| 95 96 909 | 03A | 081 | 2-D10 |
| 95 96 917 | 03A | 081 | 2-D10 |
| 95 96 925 | 03A | 081 | 2-D10 |
| 95 97 006 | 03A | 049 | 2-C02 |
| 95 97 048 | 03A | 099 | 2-E04 |
| 95 97 055 | 03A | 099 | 2-E04 |
| 95 97 063 | 03A | 093 | 2-D22 |
| 95 97 071 | 03A | 093 | 2-D22 |
| 95 97 089 | 03A | 085 | 2-D14 |
| 95 97 147 | 03A | 081 | 2-D10 |
| 95 97 154 | 03A | 081 | 2-D10 |
| 95 97 170 | 03A | 081 | 2-D10 |
| 95 97 188 | 03A | 081 | 2-D10 |
| 95 97 196 | 03A | 081 | 2-D10 |
| 95 97 204 | 03A | 077 | 2-D06 |
| 95 97 212 | 03A | 077 | 2-D06 |
| 95 97 220 | 09 | 013 | 7-D14 |
| 95 97 238 | 09 | 013 | 7-D14 |
| 95 97 253 | 03A | 095 | 2-D24 |
| 95 97 352 | 03A | 081 | 2-D10 |
| 95 97 360 | 03A | 103 | 2-E08 |
| 95 97 378 | 03A | 103 | 2-E08 |
| 95 97 386 | 03A | 065 | 2-C18 |
| 95 97 410 | 03A | 109 | 2-E14 |



# 7-G10 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 95 97 428 | 03A | 109 | 2-E14 |
| 95 97 436 | 03A | 105 | 2-E10 |
| 95 97 444 | 03A | 113 | 2-E18 |
| 95 97 444 | 03A | 123 | 2-F04 |
| 95 97 451 | 03A | 113 | 2-E18 |
| 95 97 451 | 03A | 123 | 2-F04 |
| 95 97 550 | 03A | 115 | 2-E20 |
| 95 97 568 | 03A | 119 | 2-E24 |
| 95 97 576 | 03A | 119 | 2-E24 |
| 95 98 038 | 09 | 017 | 7-D18 |
| 95 98 103 | 03A | 081 | 2-D10 |
| 96 10 411 | 08B | 127 | 6-F08 |
| 96 10 429 | 08B | 127 | 6-F08 |
| 96 10 437 | 08B | 127 | 6-F08 |
| 96 10 445 | 08B | 127 | 6-F08 |
| 96 10 823 | 08B | 127 | 6-F08 |
| 96 10 841 | 08B | 127 | 6-F08 |
| 96 10 858 | 08B | 127 | 6-F08 |
| 96 10 866 | 08B | 127 | 6-F08 |
| 96 11 328 | 08B | 005 | 6-A06 |
| 96 11 336 | 08B | 005 | 6-A06 |
| 96 11 336 | 08B | 229 | 6-J14 |
| 96 11 526 | 08B | 139 | 6-F20 |
| 96 11 526 | 08B | 229 | 6-J14 |
| 96 11 534 | 08B | 139 | 6-F20 |
| 96 11 534 | 08B | 229 | 6-J14 |
| 96 11 542 | 08B | 139 | 6-F20 |
| 96 11 542 | 08B | 229 | 6-J14 |
| 96 11 559 | 08B | 139 | 6-F20 |
| 96 11 559 | 08B | 229 | 6-J14 |
| 96 11 674 | 08B | 221 | 6-J06 |
| 96 11 682 | 08B | 005 | 6-A06 |
| 96 11 708 | 08B | 005 | 6-A06 |
| 96 11 724 | 08B | 215 | 6-I24 |
| 96 11 724 | 08B | 217 | 6-J02 |
| 96 11 724 | 08B | 219 | 6-J04 |
| 96 11 732 | 08B | 215 | 6-I24 |
| 96 11 732 | 08B | 219 | 6-J04 |
| 96 11 740 | 08B | 215 | 6-I24 |
| 96 11 740 | 08B | 217 | 6-J02 |
| 96 11 740 | 08B | 219 | 6-J04 |
| 96 11 765 | 08B | 197 | 6-I06 |
| 96 11 773 | 08B | 217 | 6-J02 |
| 96 11 799 | 08B | 167 | 6-G24 |
| 96 11 799 | 08B | 177 | 6-H10 |
| 96 11 815 | 08B | 035 | 6-B12 |
| 96 11 823 | 08B | 035 | 6-B12 |
| 96 11 823 | 08B | 047 | 6-B24 |
| 96 11 831 | 08B | 035 | 6-B12 |
| 96 11 831 | 08B | 047 | 6-B24 |
| 96 11 849 | 08B | 035 | 6-B12 |
| 96 11 864 | 08B | 035 | 6-B12 |
| 96 11 872 | 08B | 035 | 6-B12 |
| 96 11 872 | 08B | 047 | 6-B24 |
| 96 11 880 | 08B | 035 | 6-B12 |
| 96 11 880 | 08B | 047 | 6-B24 |
| 96 11 898 | 08B | 035 | 6-B12 |
| 96 12 110 | 08B | 035 | 6-B12 |
| 96 12 128 | 08B | 035 | 6-B12 |
| 96 12 128 | 08B | 047 | 6-B24 |
| 96 12 136 | 08B | 035 | 6-B12 |
| 96 12 136 | 08B | 047 | 6-B24 |
| 96 12 144 | 08B | 035 | 6-B12 |
| 96 12 250 | 08B | 043 | 6-B20 |
| 96 12 250 | 08B | 055 | 6-C08 |
| 96 12 268 | 08B | 043 | 6-B20 |
| 96 12 268 | 08B | 055 | 6-C08 |
| 96 12 276 | 08B | 043 | 6-B20 |
| 96 12 276 | 08B | 055 | 6-C08 |
| 96 12 730 | 08B | 043 | 6-B20 |
| 96 12 730 | 08B | 055 | 6-C08 |
| 96 12 953 | 08B | 201 | 6-I10 |
| 96 12 961 | 08B | 201 | 6-I10 |
| 96 12 979 | 08B | 043 | 6-B20 |
| 96 12 979 | 08B | 055 | 6-C08 |
| 96 13 068 | 08B | 043 | 6-B20 |
| 96 13 068 | 08B | 055 | 6-C08 |
| 96 13 225 | 08B | 043 | 6-B20 |
| 96 13 399 | 08B | 089 | 6-D18 |
| 96 13 407 | 08B | 089 | 6-D18 |
| 96 13 415 | 08B | 089 | 6-D18 |
| 96 13 415 | 08B | 101 | 6-E06 |
| 96 13 423 | 08B | 089 | 6-D18 |
| 96 13 423 | 08B | 101 | 6-E06 |
| 96 13 431 | 08B | 089 | 6-D18 |
| 96 13 449 | 08B | 089 | 6-D18 |
| 96 13 456 | 08B | 089 | 6-D18 |
| 96 13 456 | 08B | 101 | 6-E06 |
| 96 13 456 | 08B | 113 | 6-E18 |
| 96 13 464 | 08B | 089 | 6-D18 |
| 96 13 464 | 08B | 101 | 6-E06 |
| 96 13 464 | 08B | 113 | 6-E18 |
| 96 13 712 | 08B | 015 | 6-A16 |
| 96 13 720 | 08B | 015 | 6-A16 |
| 96 13 738 | 08B | 015 | 6-A16 |
| 96 13 746 | 08B | 015 | 6-A16 |
| 96 14 009 | 08B | 011 | 6-A12 |
| 96 14 017 | 08B | 013 | 6-A14 |
| 96 14 025 | 08B | 013 | 6-A14 |
| 96 14 033 | 08B | 013 | 6-A14 |
| 96 14 512 | 08B | 157 | 6-G14 |
| 96 14 512 | 08B | 225 | 6-J10 |
| 96 14 520 | 08B | 155 | 6-G12 |
| 96 14 520 | 08B | 223 | 6-J08 |
| 96 14 546 | 08B | 157 | 6-G14 |
| 96 14 546 | 08B | 225 | 6-J10 |
| 96 14 561 | 08B | 157 | 6-G14 |
| 96 14 629 | 08B | 185 | 6-H18 |
| 96 14 637 | 08B | 185 | 6-H18 |
| 96 14 686 | 08B | 189 | 6-H22 |
| 96 15 188 | 08B | 019 | 6-A20 |
| 96 15 196 | 08B | 019 | 6-A20 |
| 96 15 287 | 08A | 107 | 5-E12 |
| 96 15 295 | 08A | 107 | 5-E12 |
| 96 15 303 | 08A | 107 | 5-E12 |
| 96 15 311 | 08A | 107 | 5-E12 |
| 96 15 329 | 08A | 107 | 5-E12 |
| 96 15 337 | 08A | 107 | 5-E12 |
| 96 15 345 | 08A | 107 | 5-E12 |
| 96 15 352 | 08A | 107 | 5-E12 |
| 96 15 493 | 08B | 121 | 6-F02 |
| 96 15 568 | 08B | 033 | 6-B10 |
| 96 16 111 | 08B | 033 | 6-B10 |
| 96 16 731 | 08B | 035 | 6-B12 |
| 96 16 731 | 08B | 039 | 6-B16 |
| 96 17 085 | 08B | 019 | 6-A20 |
| 96 17 226 | 08A | 107 | 5-E12 |
| 96 17 234 | 08A | 107 | 5-E12 |
| 96 17 242 | 08A | 107 | 5-E12 |
| 96 17 259 | 08A | 107 | 5-E12 |
| 96 17 267 | 08A | 107 | 5-E12 |
| 96 17 275 | 08A | 107 | 5-E12 |
| 96 17 283 | 08A | 107 | 5-E12 |
| 96 17 341 | 08B | 021 | 6-A22 |
| 96 17 358 | 08B | 021 | 6-A22 |
| 96 17 366 | 08B | 021 | 6-A22 |
| 96 17 374 | 08B | 021 | 6-A22 |
| 96 17 382 | 08B | 021 | 6-A22 |
| 96 17 390 | 08B | 021 | 6-A22 |
| 96 17 432 | 08B | 205 | 6-I14 |
| 96 17 440 | 08B | 205 | 6-I14 |
| 96 17 523 | 08B | 035 | 6-B12 |
| 96 17 531 | 08B | 035 | 6-B12 |
| 96 17 531 | 08B | 047 | 6-B24 |
| 96 17 549 | 08B | 035 | 6-B12 |
| 96 17 549 | 08B | 047 | 6-B24 |
| 96 17 556 | 08B | 035 | 6-B12 |
| 96 17 572 | 08B | 035 | 6-B12 |
| 96 17 580 | 08B | 035 | 6-B12 |
| 96 17 580 | 08B | 047 | 6-B24 |
| 96 17 598 | 08B | 035 | 6-B12 |
| 96 17 598 | 08B | 047 | 6-B24 |
| 96 17 606 | 08B | 035 | 6-B12 |
| 96 17 820 | 08B | 141 | 6-F22 |
| 96 17 838 | 08B | 141 | 6-F22 |
| 96 17 879 | 08B | 199 | 6-I08 |
| 96 17 895 | 08B | 141 | 6-F22 |
| 96 17 903 | 08B | 141 | 6-F22 |
| 96 17 952 | 08B | 165 | 6-G22 |
| 96 17 952 | 08B | 173 | 6-H06 |
| 96 17 960 | 08B | 165 | 6-G22 |
| 96 17 960 | 08B | 173 | 6-H06 |
| 96 17 986 | 08B | 141 | 6-F22 |
| 96 17 994 | 08B | 141 | 6-F22 |
| 96 18 034 | 08B | 047 | 6-B24 |
| 96 18 042 | 08B | 047 | 6-B24 |
| 96 18 232 | 08B | 167 | 6-G24 |
| 96 18 232 | 08B | 179 | 6-H12 |
| 96 18 232 | 08B | 227 | 6-J12 |
| 96 18 273 | 08B | 191 | 6-H24 |
| 96 18 281 | 08B | 007 | 6-A08 |
| 96 18 281 | 08B | 229 | 6-J14 |
| 96 18 299 | 08B | 007 | 6-A08 |
| 96 18 299 | 08B | 229 | 6-J14 |
| 96 18 315 | 08B | 007 | 6-A08 |
| 96 18 315 | 08B | 229 | 6-J14 |
| 96 18 372 | 08B | 207 | 6-I16 |
| 96 18 380 | 08B | 207 | 6-I16 |
| 96 18 398 | 08B | 209 | 6-I18 |
| 96 18 406 | 08B | 207 | 6-I16 |
| 96 18 414 | 08B | 209 | 6-I18 |
| 96 18 521 | 08B | 207 | 6-I16 |
| 96 18 539 | 08B | 207 | 6-I16 |
| 96 18 547 | 08B | 207 | 6-I16 |
| 96 18 554 | 08B | 207 | 6-I16 |
| 96 18 562 | 08B | 209 | 6-I18 |
| 96 18 570 | 08B | 209 | 6-I18 |
| 96 18 588 | 08B | 209 | 6-I18 |
| 96 18 596 | 08B | 209 | 6-I18 |
| 96 18 604 | 08B | 209 | 6-I18 |
| 96 18 612 | 08B | 209 | 6-I18 |
| 96 18 661 | 08B | 197 | 6-I06 |
| 96 18 679 | 08B | 197 | 6-I06 |
| 96 18 679 | 08B | 199 | 6-I08 |
| 96 18 687 | 08B | 165 | 6-G22 |
| 96 18 687 | 08B | 177 | 6-H10 |
| 96 18 695 | 08B | 165 | 6-G22 |
| 96 18 695 | 08B | 177 | 6-H10 |
| 96 18 729 | 08B | 175 | 6-H08 |
| 96 18 729 | 08B | 225 | 6-J10 |
| 96 18 737 | 08B | 173 | 6-H06 |
| 96 18 737 | 08B | 225 | 6-J10 |
| 96 18 752 | 08B | 175 | 6-H08 |
| 96 18 752 | 08B | 229 | 6-J14 |
| 96 18 836 | 08B | 167 | 6-G24 |
| 96 18 836 | 08B | 177 | 6-H10 |
| 96 19 032 | 08B | 171 | 6-H04 |
| 96 19 032 | 08B | 179 | 6-H12 |
| 96 19 032 | 08B | 227 | 6-J12 |
| 96 19 040 | 08B | 171 | 6-H04 |
| 96 19 040 | 08B | 179 | 6-H12 |
| 96 19 040 | 08B | 227 | 6-J12 |
| 96 19 073 | 08B | 169 | 6-H02 |
| 96 19 073 | 08B | 181 | 6-H14 |
| 96 19 081 | 08B | 169 | 6-H02 |
| 96 19 081 | 08B | 181 | 6-H14 |
| 96 19 099 | 08B | 169 | 6-H02 |
| 96 19 107 | 08B | 169 | 6-H02 |
| 96 19 107 | 08B | 181 | 6-H14 |
| 96 19 123 | 08B | 169 | 6-H02 |
| 96 19 123 | 08B | 181 | 6-H14 |
| 96 19 131 | 08B | 169 | 6-H02 |
| 96 19 131 | 08B | 181 | 6-H14 |
| 96 19 149 | 08B | 169 | 6-H02 |
| 96 19 156 | 08B | 169 | 6-H02 |
| 96 19 156 | 08B | 181 | 6-H14 |
| 96 19 172 | 08B | 169 | 6-H02 |
| 96 19 172 | 08B | 181 | 6-H14 |
| 96 19 180 | 08B | 169 | 6-H02 |
| 96 19 180 | 08B | 181 | 6-H14 |
| 96 19 198 | 08B | 169 | 6-H02 |
| 96 19 206 | 08B | 169 | 6-H02 |
| 96 19 206 | 08B | 181 | 6-H14 |
| 96 19 222 | 08B | 169 | 6-H02 |
| 96 19 222 | 08B | 181 | 6-H14 |
| 96 19 230 | 08B | 169 | 6-H02 |
| 96 19 230 | 08B | 181 | 6-H14 |
| 96 19 248 | 08B | 169 | 6-H02 |
| 96 19 255 | 08B | 169 | 6-H02 |
| 96 19 255 | 08B | 181 | 6-H14 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

# 7-G11 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 96 19 271 | 08B | 169 | 6-H02 |
| 96 19 271 | 08B | 181 | 6-H14 |
| 96 19 289 | 08B | 169 | 6-H02 |
| 96 19 289 | 08B | 181 | 6-H14 |
| 96 19 297 | 08B | 169 | 6-H02 |
| 96 19 305 | 08B | 169 | 6-H02 |
| 96 19 305 | 08B | 181 | 6-H14 |
| 96 19 313 | 08B | 173 | 6-H06 |
| 96 19 321 | 08B | 173 | 6-H06 |
| 96 19 404 | 09 | 015 | 7-D16 |
| 96 19 560 | 08B | 043 | 6-B20 |
| 96 19 560 | 08B | 055 | 6-C08 |
| 96 19 578 | 08B | 043 | 6-B20 |
| 96 19 578 | 08B | 055 | 6-C08 |
| 96 19 586 | 08B | 043 | 6-B20 |
| 96 19 792 | 08B | 043 | 6-B20 |
| 96 19 792 | 08B | 055 | 6-C08 |
| 96 19 800 | 08B | 043 | 6-B20 |
| 96 19 800 | 08B | 055 | 6-C08 |
| 96 19 818 | 08B | 043 | 6-B20 |
| 96 19 818 | 08B | 055 | 6-C08 |
| 96 19 826 | 08B | 043 | 6-B20 |
| 96 19 826 | 08B | 055 | 6-C08 |
| 96 21 897 | 08C | 011 | 7-A12 |
| 96 26 771 | 08C | 021 | 7-A22 |
| 96 26 771 | 08C | 035 | 7-B12 |
| 96 29 197 | 08C | 023 | 7-A24 |
| 96 31 300 | 08C | 037 | 7-B14 |
| 96 31 300 | 08C | 043 | 7-B20 |
| 96 31 300 | 08C | 047 | 7-B24 |
| 96 31 300 | 08C | 049 | 7-C02 |
| 96 31 300 | 08C | 053 | 7-C06 |
| 96 31 300 | 09 | 007 | 7-D08 |
| 96 45 003 | 08B | 223 | 6-J08 |
| 96 45 011 | 08B | 223 | 6-J08 |
| 96 45 110 | 08B | 193 | 6-I02 |
| 96 45 235 | 08B | 221 | 6-J06 |
| 96 45 250 | 08B | 221 | 6-J06 |
| 96 45 268 | 08B | 221 | 6-J06 |
| 96 45 334 | 08B | 193 | 6-I02 |
| 96 45 367 | 08B | 121 | 6-F02 |
| 96 45 391 | 08B | 193 | 6-I02 |
| 96 45 615 | 08B | 197 | 6-I06 |
| 96 45 698 | 08B | 199 | 6-I08 |
| 96 45 730 | 08B | 199 | 6-I08 |
| 96 46 068 | 08B | 085 | 6-D14 |
| 96 46 076 | 08B | 085 | 6-D14 |
| 96 46 084 | 08B | 085 | 6-D14 |
| 96 46 092 | 08B | 085 | 6-D14 |
| 96 46 100 | 08B | 085 | 6-D14 |
| 96 46 118 | 08B | 085 | 6-D14 |
| 96 46 134 | 08B | 055 | 6-C08 |
| 96 46 134 | 08B | 067 | 6-C20 |
| 96 46 142 | 08B | 055 | 6-C08 |
| 96 46 142 | 08B | 067 | 6-C20 |
| 96 46 167 | 08B | 057 | 6-C10 |
| 96 46 167 | 08B | 067 | 6-C20 |
| 96 46 217 | 08B | 055 | 6-C08 |
| 96 46 282 | 08B | 043 | 6-B20 |
| 96 46 290 | 08B | 221 | 6-J06 |
| 96 46 308 | 08B | 221 | 6-J06 |
| 96 46 647 | 08B | 055 | 6-C08 |
| 96 46 647 | 08B | 067 | 6-C20 |
| 96 46 738 | 08B | 101 | 6-E06 |
| 96 46 738 | 08B | 113 | 6-E18 |
| 96 46 746 | 08B | 101 | 6-E06 |
| 96 46 746 | 08B | 113 | 6-E18 |
| 96 46 753 | 08B | 101 | 6-E06 |
| 96 46 761 | 08B | 101 | 6-E06 |
| 96 46 795 | 08B | 101 | 6-E06 |
| 96 46 795 | 08B | 113 | 6-E18 |
| 96 46 803 | 08B | 101 | 6-E06 |
| 96 46 803 | 08B | 113 | 6-E18 |
| 96 47 074 | 08B | 055 | 6-C08 |
| 96 47 074 | 08B | 067 | 6-C20 |
| 96 47 132 | 08B | 193 | 6-I02 |
| 96 47 140 | 08B | 221 | 6-J06 |
| 96 47 165 | 08B | 131 | 6-F12 |
| 96 47 165 | 08B | 135 | 6-F16 |
| 96 47 173 | 08B | 131 | 6-F12 |
| 96 47 181 | 08B | 131 | 6-F12 |
| 96 47 181 | 08B | 135 | 6-F16 |
| 96 47 272 | 08B | 193 | 6-I02 |
| 96 47 348 | 08B | 193 | 6-I02 |
| 96 47 439 | 08B | 055 | 6-C08 |
| 96 47 447 | 08B | 057 | 6-C10 |
| 96 47 447 | 08B | 067 | 6-C20 |
| 96 47 454 | 08B | 055 | 6-C08 |
| 96 47 462 | 08B | 057 | 6-C10 |
| 96 47 462 | 08B | 067 | 6-C20 |
| 96 47 629 | 08B | 097 | 6-E02 |
| 96 47 637 | 08B | 097 | 6-E02 |
| 96 47 728 | 08B | 055 | 6-C08 |
| 96 47 736 | 08B | 101 | 6-E06 |
| 96 47 744 | 08B | 101 | 6-E06 |
| 96 47 793 | 08B | 101 | 6-E06 |
| 96 47 801 | 08B | 101 | 6-E06 |
| 96 47 835 | 08A | 135 | 5-F16 |
| 96 47 843 | 08A | 135 | 5-F16 |
| 96 47 850 | 08B | 097 | 6-E02 |
| 96 47 850 | 08B | 109 | 6-E14 |
| 96 47 868 | 08B | 097 | 6-E02 |
| 96 47 868 | 08B | 109 | 6-E14 |
| 96 47 876 | 08B | 097 | 6-E02 |
| 96 47 876 | 08B | 109 | 6-E14 |
| 96 47 884 | 08B | 097 | 6-E02 |
| 96 47 884 | 08B | 109 | 6-E14 |
| 96 47 991 | 08B | 137 | 6-F18 |
| 96 48 023 | 08B | 137 | 6-F18 |
| 96 48 031 | 08B | 137 | 6-F18 |
| 96 48 072 | 08B | 113 | 6-E18 |
| 96 48 080 | 08B | 113 | 6-E18 |
| 96 48 239 | 08B | 069 | 6-C22 |
| 96 48 486 | 08B | 069 | 6-C22 |
| 96 48 734 | 08B | 203 | 6-I12 |
| 96 48 858 | 08B | 113 | 6-E18 |
| 96 48 866 | 08B | 113 | 6-E18 |
| 96 48 874 | 08B | 113 | 6-E18 |
| 96 48 882 | 08B | 113 | 6-E18 |
| 96 48 890 | 08B | 113 | 6-E18 |
| 96 48 908 | 08B | 113 | 6-E18 |
| 96 48 999 | 08B | 215 | 6-I24 |
| 96 49 005 | 08B | 215 | 6-I24 |
| 96 49 138 | 08B | 193 | 6-I02 |
| 96 49 146 | 08B | 193 | 6-I02 |
| 96 49 195 | 08B | 193 | 6-I02 |
| 96 49 500 | 08B | 193 | 6-I02 |
| 96 49 732 | 09 | 011 | 7-D12 |
| 96 49 799 | 08B | 193 | 6-I02 |
| 96 49 807 | 08B | 203 | 6-I12 |
| 96 49 815 | 08B | 203 | 6-I12 |
| 96 49 823 | 08B | 203 | 6-I12 |
| 96 49 831 | 08B | 109 | 6-E14 |
| 96 49 849 | 08B | 109 | 6-E14 |
| 96 57 123 | 08B | 199 | 6-I08 |
| 96 57 131 | 08B | 167 | 6-G24 |
| 96 57 131 | 08B | 177 | 6-H10 |
| 96 58 584 | 08B | 167 | 6-G24 |
| 96 58 584 | 08B | 177 | 6-H10 |
| 96 59 012 | 08B | 167 | 6-G24 |
| 96 59 012 | 08B | 177 | 6-H10 |
| 96 59 020 | 08B | 167 | 6-G24 |
| 96 59 020 | 08B | 177 | 6-H10 |
| 96 60 192 | 08B | 217 | 6-J02 |
| 96 60 853 | 08B | 177 | 6-H10 |
| 96 68 153 | 08B | 141 | 6-F22 |
| 96 69 458 | 08B | 183 | 6-H16 |
| 96 69 482 | 08B | 169 | 6-H02 |
| 96 69 482 | 08B | 181 | 6-H14 |
| 96 69 524 | 08B | 169 | 6-H02 |
| 96 69 524 | 08B | 181 | 6-H14 |
| 96 70 027 | 08B | 217 | 6-J02 |
| 96 71 835 | 08B | 167 | 6-G24 |
| 96 71 835 | 08B | 177 | 6-H10 |
| 96 73 146 | 08B | 167 | 6-G24 |
| 96 73 146 | 08B | 177 | 6-H10 |
| 96 73 179 | 08B | 177 | 6-H10 |
| 96 73 435 | 08B | 167 | 6-G24 |
| 96 73 435 | 08B | 177 | 6-H10 |
| 96 73 443 | 08B | 167 | 6-G24 |
| 96 73 443 | 08B | 177 | 6-H10 |
| 96 73 450 | 08B | 167 | 6-G24 |
| 96 73 450 | 08B | 177 | 6-H10 |
| 96 74 847 | 08B | 019 | 6-A20 |
| 96 76 248 | 08B | 019 | 6-A20 |
| 96 76 255 | 08B | 019 | 6-A20 |
| 96 76 891 | 08B | 183 | 6-H16 |
| 96 76 925 | 08B | 181 | 6-H14 |
| 96 76 966 | 08B | 181 | 6-H14 |
| 96 78 434 | 08B | 167 | 6-G24 |
| 96 78 434 | 08B | 177 | 6-H10 |
| 96 80 224 | 08B | 007 | 6-A08 |
| 96 80 224 | 08B | 229 | 6-J14 |
| 96 80 414 | 08B | 167 | 6-G24 |
| 96 80 414 | 08B | 177 | 6-H10 |
| 96 80 430 | 08B | 169 | 6-H02 |
| 96 80 430 | 08B | 181 | 6-H14 |
| 96 80 448 | 08B | 169 | 6-H02 |
| 96 80 448 | 08B | 181 | 6-H14 |
| 96 80 455 | 08B | 169 | 6-H02 |
| 96 80 463 | 08B | 169 | 6-H02 |
| 96 80 463 | 08B | 181 | 6-H14 |
| 96 80 489 | 08B | 039 | 6-B16 |
| 96 80 497 | 08B | 039 | 6-B16 |
| 96 80 505 | 08B | 039 | 6-B16 |
| 96 80 513 | 08B | 039 | 6-B16 |
| 96 80 521 | 08B | 039 | 6-B16 |
| 96 80 547 | 08B | 039 | 6-B16 |
| 96 80 554 | 08B | 039 | 6-B16 |
| 96 80 562 | 08B | 039 | 6-B16 |
| 96 80 570 | 08B | 039 | 6-B16 |
| 96 80 588 | 08B | 039 | 6-B16 |
| 96 80 596 | 08B | 039 | 6-B16 |
| 96 80 596 | 08B | 047 | 6-B24 |
| 96 80 596 | 08B | 053 | 6-C06 |
| 96 80 612 | 08B | 039 | 6-B16 |
| 96 80 620 | 08B | 039 | 6-B16 |
| 96 80 638 | 08B | 039 | 6-B16 |
| 96 80 646 | 08B | 039 | 6-B16 |
| 96 80 653 | 08B | 039 | 6-B16 |
| 96 80 679 | 08B | 039 | 6-B16 |
| 96 80 687 | 08B | 039 | 6-B16 |
| 96 80 695 | 08B | 039 | 6-B16 |
| 96 80 703 | 08B | 039 | 6-B16 |
| 96 80 711 | 08B | 039 | 6-B16 |
| 96 80 737 | 08B | 039 | 6-B16 |
| 96 80 745 | 08B | 039 | 6-B16 |
| 96 80 752 | 08B | 039 | 6-B16 |
| 96 80 760 | 08B | 039 | 6-B16 |
| 96 80 778 | 08B | 039 | 6-B16 |
| 96 80 794 | 08B | 039 | 6-B16 |
| 96 80 802 | 08B | 039 | 6-B16 |
| 96 80 802 | 08B | 051 | 6-C04 |
| 96 80 810 | 08B | 039 | 6-B16 |
| 96 80 810 | 08B | 051 | 6-C04 |
| 96 80 828 | 08B | 039 | 6-B16 |
| 96 80 836 | 08B | 039 | 6-B16 |
| 96 80 836 | 08B | 053 | 6-C06 |
| 96 80 885 | 08B | 211 | 6-I20 |
| 96 80 893 | 08B | 211 | 6-I20 |
| 96 80 901 | 08B | 207 | 6-I16 |
| 96 81 198 | 08B | 025 | 6-B02 |
| 96 81 198 | 08B | 035 | 6-B12 |
| 96 81 198 | 08B | 039 | 6-B16 |
| 96 81 222 | 08B | 025 | 6-B02 |
| 96 81 222 | 08B | 039 | 6-B16 |
| 96 81 339 | 08B | 023 | 6-A24 |
| 96 81 347 | 08B | 023 | 6-A24 |
| 96 81 610 | 08B | 041 | 6-B18 |
| 96 81 628 | 08B | 041 | 6-B18 |
| 96 81 636 | 08B | 041 | 6-B18 |
| 96 81 644 | 08B | 043 | 6-B20 |
| 96 81 677 | 08B | 041 | 6-B18 |
| 96 81 685 | 08B | 041 | 6-B18 |
| 96 81 693 | 08B | 041 | 6-B18 |
| 96 81 701 | 08B | 043 | 6-B20 |
| 96 81 735 | 08B | 215 | 6-I24 |
| 96 81 735 | 08B | 219 | 6-J04 |
| 96 81 826 | 09 | 015 | 7-D16 |
| 96 81 834 | 09 | 015 | 7-D16 |



# 7-G12 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 96 81 842 | 09 | 015 | 7-D16 |
| 96 81 859 | 09 | 015 | 7-D16 |
| 96 81 867 | 09 | 015 | 7-D16 |
| 96 81 891 | 08B | 161 | 6-G18 |
| 96 81 909 | 08B | 161 | 6-G18 |
| 96 81 917 | 08B | 163 | 6-G20 |
| 96 81 925 | 08B | 181 | 6-H14 |
| 96 81 933 | 08B | 181 | 6-H14 |
| 96 81 941 | 08B | 181 | 6-H14 |
| 96 81 958 | 08B | 181 | 6-H14 |
| 96 81 966 | 08B | 181 | 6-H14 |
| 96 81 974 | 08B | 181 | 6-H14 |
| 96 82 006 | 08B | 147 | 6-G04 |
| 96 82 014 | 08B | 147 | 6-G04 |
| 96 82 014 | 08B | 159 | 6-G16 |
| 96 82 386 | 08B | 015 | 6-A16 |
| 96 82 394 | 08B | 015 | 6-A16 |
| 96 82 402 | 08B | 015 | 6-A16 |
| 96 82 451 | 08B | 099 | 6-E04 |
| 96 82 469 | 08B | 099 | 6-E04 |
| 96 82 493 | 08B | 099 | 6-E04 |
| 96 82 501 | 08B | 099 | 6-E04 |
| 96 82 535 | 02 | 201 | 1-J10 |
| 96 82 535 | 02 | 203 | 1-J12 |
| 96 82 535 | 02 | 205 | 1-J14 |
| 96 82 535 | 08B | 007 | 6-A08 |
| 96 82 543 | 08B | 007 | 6-A08 |
| 96 82 550 | 08B | 007 | 6-A08 |
| 96 82 592 | 08B | 011 | 6-A12 |
| 96 82 600 | 08B | 011 | 6-A12 |
| 96 82 618 | 08B | 013 | 6-A14 |
| 96 82 709 | 08B | 099 | 6-E04 |
| 96 82 709 | 08B | 111 | 6-E16 |
| 96 82 717 | 08B | 099 | 6-E04 |
| 96 82 717 | 08B | 111 | 6-E16 |
| 96 82 725 | 08B | 099 | 6-E04 |
| 96 82 725 | 08B | 111 | 6-E16 |
| 96 82 733 | 08B | 099 | 6-E04 |
| 96 82 733 | 08B | 111 | 6-E16 |
| 96 82 881 | 08B | 155 | 6-G12 |
| 96 82 899 | 08B | 155 | 6-G12 |
| 96 82 907 | 08B | 155 | 6-G12 |
| 96 82 915 | 08B | 155 | 6-G12 |
| 96 82 964 | 08B | 151 | 6-G08 |
| 96 82 964 | 08B | 159 | 6-G16 |
| 96 82 972 | 08B | 151 | 6-G08 |
| 96 82 972 | 08B | 159 | 6-G16 |
| 96 83 261 | 08B | 131 | 6-F12 |
| 96 83 269 | 08B | 135 | 6-F16 |
| 96 83 301 | 08B | 131 | 6-F12 |
| 96 83 343 | 08B | 131 | 6-F12 |
| 96 83 343 | 08B | 135 | 6-F16 |
| 96 83 384 | 08B | 133 | 6-F14 |
| 96 83 384 | 08B | 135 | 6-F16 |
| 96 83 434 | 08B | 131 | 6-F12 |
| 96 83 434 | 08B | 135 | 6-F16 |
| 96 83 442 | 08B | 131 | 6-F12 |
| 96 83 459 | 08B | 131 | 6-F12 |
| 96 83 459 | 08B | 135 | 6-F16 |
| 96 83 467 | 08B | 133 | 6-F14 |
| 96 83 467 | 08B | 135 | 6-F16 |
| 96 83 822 | 08B | 207 | 6-I16 |
| 96 83 830 | 08B | 209 | 6-I18 |
| 96 83 848 | 08B | 207 | 6-I16 |
| 96 83 863 | 08B | 209 | 6-I18 |
| 96 83 897 | 08B | 209 | 6-I18 |
| 96 83 913 | 08B | 209 | 6-I18 |
| 96 83 921 | 08B | 207 | 6-I16 |
| 96 83 939 | 08B | 207 | 6-I16 |
| 96 83 988 | 08B | 209 | 6-I18 |
| 96 84 044 | 08B | 143 | 6-F24 |
| 96 84 051 | 08B | 143 | 6-F24 |
| 96 84 069 | 08B | 143 | 6-F24 |
| 96 84 077 | 08B | 143 | 6-F24 |
| 96 84 085 | 08B | 143 | 6-F24 |
| 96 84 093 | 08B | 143 | 6-F24 |
| 96 84 101 | 08B | 143 | 6-F24 |
| 96 84 119 | 08B | 143 | 6-F24 |
| 96 84 127 | 08B | 145 | 6-G02 |
| 96 84 135 | 08B | 145 | 6-G02 |
| 96 84 143 | 08B | 145 | 6-G02 |
| 96 84 150 | 08B | 145 | 6-G02 |
| 96 84 408 | 08B | 145 | 6-G02 |
| 96 84 432 | 08B | 141 | 6-F22 |
| 96 84 440 | 08B | 141 | 6-F22 |
| 96 84 481 | 08B | 105 | 6-E10 |
| 96 84 481 | 08B | 117 | 6-E22 |
| 96 84 499 | 08B | 105 | 6-E10 |
| 96 84 499 | 08B | 117 | 6-E22 |
| 96 84 507 | 08B | 107 | 6-E12 |
| 96 84 507 | 08B | 119 | 6-E24 |
| 96 84 515 | 08B | 107 | 6-E12 |
| 96 84 515 | 08B | 119 | 6-E24 |
| 96 84 549 | 08B | 101 | 6-E06 |
| 96 84 549 | 08B | 113 | 6-E18 |
| 96 84 556 | 08B | 113 | 6-E18 |
| 96 84 564 | 08B | 101 | 6-E06 |
| 96 84 564 | 08B | 113 | 6-E18 |
| 96 84 572 | 08B | 101 | 6-E06 |
| 96 84 572 | 08B | 113 | 6-E18 |
| 96 84 580 | 08B | 101 | 6-E06 |
| 96 84 580 | 08B | 113 | 6-E18 |
| 96 84 630 | 08B | 107 | 6-E12 |
| 96 84 648 | 08B | 107 | 6-E12 |
| 96 84 697 | 08B | 107 | 6-E12 |
| 96 84 705 | 08B | 107 | 6-E12 |
| 96 84 762 | 08B | 107 | 6-E12 |
| 96 84 762 | 08B | 119 | 6-E24 |
| 96 84 770 | 08B | 107 | 6-E12 |
| 96 84 770 | 08B | 119 | 6-E24 |
| 96 84 838 | 08B | 107 | 6-E12 |
| 96 84 838 | 08B | 119 | 6-E24 |
| 96 84 846 | 08B | 107 | 6-E12 |
| 96 84 846 | 08B | 119 | 6-E24 |
| 96 84 895 | 08B | 105 | 6-E10 |
| 96 84 903 | 08B | 105 | 6-E10 |
| 96 84 978 | 08B | 105 | 6-E10 |
| 96 84 986 | 08B | 105 | 6-E10 |
| 96 85 033 | 08B | 101 | 6-E06 |
| 96 85 033 | 08B | 113 | 6-E18 |
| 96 85 041 | 08B | 101 | 6-E06 |
| 96 85 041 | 08B | 113 | 6-E18 |
| 96 85 058 | 08B | 101 | 6-E06 |
| 96 85 058 | 08B | 113 | 6-E18 |
| 96 85 066 | 08B | 101 | 6-E06 |
| 96 85 066 | 08B | 113 | 6-E18 |
| 96 85 132 | 08B | 097 | 6-E02 |
| 96 85 132 | 08B | 107 | 6-E12 |
| 96 85 132 | 08B | 109 | 6-E14 |
| 96 85 132 | 08B | 119 | 6-E24 |
| 96 85 264 | 08B | 105 | 6-E10 |
| 96 85 264 | 08B | 117 | 6-E22 |
| 96 85 272 | 08B | 105 | 6-E10 |
| 96 85 272 | 08B | 117 | 6-E22 |
| 96 85 413 | 08B | 105 | 6-E10 |
| 96 85 413 | 08B | 117 | 6-E22 |
| 96 85 421 | 08B | 105 | 6-E10 |
| 96 85 421 | 08B | 117 | 6-E22 |
| 96 85 520 | 08B | 017 | 6-A18 |
| 96 85 694 | 08B | 019 | 6-A20 |
| 96 85 702 | 08B | 023 | 6-A24 |
| 96 85 819 | 08B | 097 | 6-E02 |
| 96 85 819 | 08B | 109 | 6-E14 |
| 96 85 827 | 08B | 097 | 6-E02 |
| 96 85 827 | 08B | 109 | 6-E14 |
| 96 85 835 | 08B | 097 | 6-E02 |
| 96 85 835 | 08B | 109 | 6-E14 |
| 96 85 843 | 08B | 097 | 6-E02 |
| 96 85 843 | 08B | 109 | 6-E14 |
| 96 86 023 | 08B | 019 | 6-A20 |
| 96 86 031 | 08B | 019 | 6-A20 |
| 96 86 049 | 08B | 097 | 6-E02 |
| 96 86 049 | 08B | 109 | 6-E14 |
| 96 86 056 | 08B | 097 | 6-E02 |
| 96 86 056 | 08B | 109 | 6-E14 |
| 96 86 064 | 08B | 097 | 6-E02 |
| 96 86 064 | 08B | 109 | 6-E14 |
| 96 86 072 | 08B | 097 | 6-E02 |
| 96 86 072 | 08B | 109 | 6-E14 |
| 96 86 221 | 08B | 097 | 6-E02 |
| 96 86 239 | 08B | 097 | 6-E02 |
| 96 86 247 | 08B | 097 | 6-E02 |
| 96 86 254 | 08B | 097 | 6-E02 |
| 96 86 379 | 08B | 131 | 6-F12 |
| 96 86 379 | 08B | 135 | 6-F16 |
| 96 86 387 | 08B | 131 | 6-F12 |
| 96 86 387 | 08B | 135 | 6-F16 |
| 96 86 395 | 08B | 131 | 6-F12 |
| 96 86 395 | 08B | 135 | 6-F16 |
| 96 86 403 | 08B | 131 | 6-F12 |
| 96 86 403 | 08B | 135 | 6-F16 |
| 96 86 478 | 08B | 133 | 6-F14 |
| 96 86 478 | 08B | 135 | 6-F16 |
| 96 86 486 | 08B | 133 | 6-F14 |
| 96 86 486 | 08B | 135 | 6-F16 |
| 96 86 510 | 08B | 131 | 6-F12 |
| 96 86 528 | 08B | 131 | 6-F12 |
| 96 86 528 | 08B | 135 | 6-F16 |
| 96 86 536 | 08B | 131 | 6-F12 |
| 96 86 544 | 08B | 131 | 6-F12 |
| 96 86 544 | 08B | 135 | 6-F16 |
| 96 86 551 | 08B | 131 | 6-F12 |
| 96 86 569 | 08B | 131 | 6-F12 |
| 96 86 569 | 08B | 135 | 6-F16 |
| 96 86 577 | 08B | 131 | 6-F12 |
| 96 86 585 | 08B | 131 | 6-F12 |
| 96 86 585 | 08B | 135 | 6-F16 |
| 96 86 684 | 08B | 131 | 6-F12 |
| 96 86 700 | 08B | 131 | 6-F12 |
| 96 86 700 | 08B | 135 | 6-F16 |
| 96 86 726 | 08B | 131 | 6-F12 |
| 96 86 742 | 08B | 131 | 6-F12 |
| 96 86 742 | 08B | 135 | 6-F16 |
| 96 86 767 | 08B | 131 | 6-F12 |
| 96 86 783 | 08B | 131 | 6-F12 |
| 96 86 783 | 08B | 135 | 6-F16 |
| 96 86 809 | 08B | 131 | 6-F12 |
| 96 86 825 | 08B | 131 | 6-F12 |
| 96 86 825 | 08B | 135 | 6-F16 |
| 96 86 841 | 08B | 167 | 6-G24 |
| 96 86 841 | 08B | 179 | 6-H12 |
| 96 86 841 | 08B | 227 | 6-J12 |
| 96 87 401 | 08B | 211 | 6-I20 |
| 96 87 443 | 08B | 199 | 6-I08 |
| 96 87 450 | 08B | 199 | 6-I08 |
| 96 87 476 | 08B | 197 | 6-I06 |
| 96 87 484 | 08B | 197 | 6-I06 |
| 96 87 625 | 08B | 169 | 6-H02 |
| 96 87 625 | 08B | 179 | 6-H12 |
| 96 87 633 | 08B | 169 | 6-H02 |
| 96 87 633 | 08B | 179 | 6-H12 |
| 96 87 682 | 08B | 185 | 6-H18 |
| 96 87 690 | 08B | 185 | 6-H18 |
| 96 87 708 | 08B | 189 | 6-H22 |
| 96 88 003 | 08B | 051 | 6-C04 |
| 96 88 011 | 08B | 053 | 6-C06 |
| 96 88 029 | 08B | 051 | 6-C04 |
| 96 88 037 | 08B | 053 | 6-C06 |
| 96 88 045 | 08B | 053 | 6-C06 |
| 96 88 078 | 08B | 051 | 6-C04 |
| 96 88 086 | 08B | 053 | 6-C06 |
| 96 88 094 | 08B | 051 | 6-C04 |
| 96 88 102 | 08B | 053 | 6-C06 |
| 96 88 110 | 08B | 053 | 6-C06 |
| 96 88 177 | 08B | 051 | 6-C04 |
| 96 88 185 | 08B | 051 | 6-C04 |
| 96 88 193 | 08B | 051 | 6-C04 |
| 96 88 201 | 08B | 053 | 6-C06 |
| 96 88 219 | 08B | 053 | 6-C06 |
| 96 88 227 | 08B | 051 | 6-C04 |
| 96 88 235 | 08B | 051 | 6-C04 |
| 96 88 243 | 08B | 051 | 6-C04 |
| 96 88 250 | 08B | 053 | 6-C06 |
| 96 88 268 | 08B | 053 | 6-C06 |
| 96 88 276 | 08B | 047 | 6-B24 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

# 7-G13 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 96 88 276 | 08B | 053 | 6-C06 |
| 96 88 334 | 08B | 051 | 6-C04 |
| 96 88 342 | 08B | 053 | 6-C06 |
| 96 88 359 | 08B | 051 | 6-C04 |
| 96 88 367 | 08B | 053 | 6-C06 |
| 96 88 375 | 08B | 053 | 6-C06 |
| 96 88 383 | 08B | 051 | 6-C04 |
| 96 88 391 | 08B | 053 | 6-C06 |
| 96 88 409 | 08B | 051 | 6-C04 |
| 96 88 417 | 08B | 053 | 6-C06 |
| 96 88 425 | 08B | 053 | 6-C06 |
| 96 88 441 | 08B | 159 | 6-G16 |
| 96 88 458 | 08B | 157 | 6-G14 |
| 96 88 458 | 08B | 223 | 6-J08 |
| 96 88 482 | 08B | 185 | 6-H18 |
| 96 88 516 | 08B | 185 | 6-H18 |
| 96 88 540 | 08B | 185 | 6-H18 |
| 96 88 557 | 08B | 189 | 6-H22 |
| 96 88 565 | 08B | 053 | 6-C06 |
| 96 88 581 | 08B | 189 | 6-H22 |
| 96 88 672 | 08B | 019 | 6-A20 |
| 96 88 714 | 08B | 047 | 6-B24 |
| 96 88 714 | 08B | 051 | 6-C04 |
| 96 88 797 | 08B | 047 | 6-B24 |
| 96 88 797 | 08B | 053 | 6-C06 |
| 96 88 813 | 08B | 185 | 6-H18 |
| 96 88 821 | 08B | 185 | 6-H18 |
| 96 88 839 | 08B | 189 | 6-H22 |
| 96 89 357 | 08B | 051 | 6-C04 |
| 96 89 365 | 08B | 051 | 6-C04 |
| 96 89 373 | 08B | 051 | 6-C04 |
| 96 89 381 | 08B | 053 | 6-C06 |
| 96 89 399 | 08B | 053 | 6-C06 |
| 96 89 407 | 08B | 051 | 6-C04 |
| 96 89 415 | 08B | 051 | 6-C04 |
| 96 89 423 | 08B | 051 | 6-C04 |
| 96 89 431 | 08B | 053 | 6-C06 |
| 96 89 449 | 08B | 053 | 6-C06 |
| 96 89 456 | 08B | 051 | 6-C04 |
| 96 89 464 | 08B | 051 | 6-C04 |
| 96 89 472 | 08B | 051 | 6-C04 |
| 96 89 480 | 08B | 053 | 6-C06 |
| 96 89 498 | 08B | 053 | 6-C06 |
| 96 89 506 | 08B | 051 | 6-C04 |
| 96 89 514 | 08B | 053 | 6-C06 |
| 96 89 522 | 08B | 051 | 6-C04 |
| 96 89 530 | 08B | 053 | 6-C06 |
| 96 89 548 | 08B | 053 | 6-C06 |
| 96 89 563 | 08B | 053 | 6-C06 |
| 96 89 571 | 08B | 051 | 6-C04 |
| 96 89 589 | 08B | 053 | 6-C06 |
| 96 89 597 | 08B | 051 | 6-C04 |
| 96 89 605 | 08B | 053 | 6-C06 |
| 96 89 613 | 08B | 053 | 6-C06 |
| 96 89 621 | 08B | 051 | 6-C04 |
| 96 89 639 | 08B | 053 | 6-C06 |
| 96 89 647 | 08B | 051 | 6-C04 |
| 96 89 654 | 08B | 053 | 6-C06 |
| 96 89 662 | 08B | 053 | 6-C06 |
| 96 89 696 | 08B | 053 | 6-C06 |
| 96 89 753 | 08B | 047 | 6-B24 |
| 96 89 753 | 08B | 051 | 6-C04 |
| 96 89 761 | 08B | 051 | 6-C04 |
| 96 89 795 | 08B | 011 | 6-A12 |
| 96 89 803 | 08B | 011 | 6-A12 |
| 96 89 811 | 08B | 011 | 6-A12 |
| 96 92 732 | 08B | 037 | 6-B14 |
| 96 94 969 | 08B | 223 | 6-J08 |
| 96 94 969 | 08B | 225 | 6-J10 |
| 96 95 172 | 08B | 061 | 6-C14 |
| 96 95 214 | 08B | 053 | 6-C06 |
| 96 96 600 | 08B | 177 | 6-H10 |
| 96 96 618 | 08B | 177 | 6-H10 |
| 96 97 525 | 08B | 167 | 6-G24 |
| 96 97 525 | 08B | 177 | 6-H10 |
| 96 98 002 | 08C | 021 | 7-A22 |
| 96 98 002 | 08C | 045 | 7-B22 |
| 96 98 010 | 08C | 019 | 7-A20 |
| 96 98 010 | 08C | 037 | 7-B14 |
| 96 98 028 | 08C | 019 | 7-A20 |
| 96 98 028 | 08C | 041 | 7-B18 |
| 96 98 044 | 08A | 157 | 5-G14 |
| 96 98 051 | 08A | 157 | 5-G14 |
| 96 98 069 | 08A | 157 | 5-G14 |
| 96 98 085 | 08A | 157 | 5-G14 |
| 96 98 093 | 08A | 157 | 5-G14 |
| 96 98 101 | 08A | 157 | 5-G14 |
| 96 98 119 | 08A | 157 | 5-G14 |
| 96 98 135 | 08A | 151 | 5-G08 |
| 96 98 143 | 08A | 151 | 5-G08 |
| 96 98 150 | 08A | 155 | 5-G12 |
| 96 98 168 | 08A | 151 | 5-G08 |
| 96 98 176 | 08A | 151 | 5-G08 |
| 96 98 184 | 08A | 155 | 5-G12 |
| 96 98 267 | 08B | 165 | 6-G22 |
| 96 98 275 | 08B | 165 | 6-G22 |
| 96 98 283 | 08C | 021 | 7-A22 |
| 96 98 283 | 08C | 051 | 7-C04 |
| 96 98 291 | 08C | 019 | 7-A20 |
| 96 98 291 | 08C | 047 | 7-B24 |
| 96 98 325 | 08B | 075 | 6-D04 |
| 96 98 325 | 08B | 223 | 6-J08 |
| 96 98 333 | 08B | 075 | 6-D04 |
| 96 98 333 | 08B | 223 | 6-J08 |
| 96 98 366 | 08A | 151 | 5-G08 |
| 96 98 382 | 08A | 129 | 5-F10 |
| 96 98 382 | 08A | 185 | 5-H18 |
| 96 98 390 | 08A | 129 | 5-F10 |
| 96 98 390 | 08A | 185 | 5-H18 |
| 96 98 408 | 08A | 129 | 5-F10 |
| 96 98 408 | 08A | 185 | 5-H18 |
| 96 98 465 | 08A | 157 | 5-G14 |
| 96 98 481 | 08A | 151 | 5-G08 |
| 96 98 499 | 08A | 151 | 5-G08 |
| 96 98 507 | 08A | 155 | 5-G12 |
| 96 98 531 | 08A | 131 | 5-F12 |
| 96 98 531 | 08A | 185 | 5-H18 |
| 96 98 549 | 08A | 131 | 5-F12 |
| 96 98 549 | 08A | 185 | 5-H18 |
| 96 98 564 | 08B | 155 | 6-G12 |
| 96 98 572 | 08B | 155 | 6-G12 |
| 96 98 580 | 08B | 155 | 6-G12 |
| 96 98 598 | 08B | 155 | 6-G12 |
| 96 98 606 | 08B | 155 | 6-G12 |
| 96 98 614 | 08B | 155 | 6-G12 |
| 96 98 622 | 08B | 155 | 6-G12 |
| 96 98 630 | 08B | 155 | 6-G12 |
| 96 98 648 | 08B | 155 | 6-G12 |
| 96 98 655 | 08B | 155 | 6-G12 |
| 96 98 663 | 08B | 155 | 6-G12 |
| 96 98 671 | 08B | 155 | 6-G12 |
| 96 98 689 | 08B | 155 | 6-G12 |
| 96 98 697 | 08B | 155 | 6-G12 |
| 96 98 705 | 08B | 155 | 6-G12 |
| 96 98 713 | 08B | 155 | 6-G12 |
| 96 98 721 | 08B | 155 | 6-G12 |
| 96 98 739 | 08B | 155 | 6-G12 |
| 96 98 747 | 08B | 155 | 6-G12 |
| 96 98 754 | 08B | 155 | 6-G12 |
| 96 98 762 | 08B | 155 | 6-G12 |
| 96 98 770 | 08B | 155 | 6-G12 |
| 96 98 788 | 08B | 155 | 6-G12 |
| 96 98 796 | 08B | 155 | 6-G12 |
| 96 98 804 | 08B | 173 | 6-H06 |
| 96 98 812 | 08B | 173 | 6-H06 |
| 96 98 853 | 08A | 151 | 5-G08 |
| 96 98 861 | 08A | 151 | 5-G08 |
| 96 98 879 | 08A | 155 | 5-G12 |
| 96 99 224 | 08B | 189 | 6-H22 |
| 96 99 232 | 08B | 185 | 6-H18 |
| 96 99 240 | 08B | 185 | 6-H18 |
| 96 99 257 | 08B | 007 | 6-A08 |
| 96 99 257 | 08B | 229 | 6-J14 |
| 96 99 273 | 08B | 189 | 6-H22 |
| 96 99 273 | 08B | 189 | 6-H22 |
| 96 99 331 | 08B | 173 | 6-H06 |
| 96 99 349 | 08B | 173 | 6-H06 |
| 96 99 778 | 08B | 007 | 6-A08 |
| 96 99 778 | 08B | 229 | 6-J14 |
| 97 02 465 | 08B | 151 | 6-G08 |
| 97 02 465 | 08B | 157 | 6-G14 |
| 97 02 465 | 08B | 223 | 6-J08 |
| 97 02 465 | 08B | 225 | 6-J10 |
| 97 03 414 | 08B | 019 | 6-A20 |
| 97 04 511 | 08B | 151 | 6-G08 |
| 97 04 511 | 08B | 161 | 6-G18 |
| 97 04 727 | 08B | 141 | 6-F22 |
| 97 04 735 | 08B | 141 | 6-F22 |
| 97 04 883 | 08B | 071 | 6-C24 |
| 97 04 883 | 08B | 083 | 6-D12 |
| 97 04 883 | 08B | 085 | 6-D14 |
| 97 04 883 | 08B | 091 | 6-D20 |
| 97 04 883 | 08B | 095 | 6-D24 |
| 97 04 883 | 08B | 097 | 6-E02 |
| 97 04 883 | 08B | 103 | 6-E08 |
| 97 04 883 | 08B | 107 | 6-E12 |
| 97 04 883 | 08B | 109 | 6-E14 |
| 97 04 883 | 08B | 115 | 6-E20 |
| 97 04 883 | 08B | 119 | 6-E24 |
| 97 05 054 | 08B | 219 | 6-J04 |
| 97 05 062 | 08B | 219 | 6-J04 |
| 97 05 567 | 08B | 081 | 6-D10 |
| 97 05 567 | 08B | 095 | 6-D24 |
| 97 05 567 | 08B | 107 | 6-E12 |
| 97 05 575 | 08B | 081 | 6-D10 |
| 97 05 575 | 08B | 095 | 6-D24 |
| 97 05 575 | 08B | 107 | 6-E12 |
| 97 05 765 | 08B | 077 | 6-D06 |
| 97 05 765 | 08B | 081 | 6-D10 |
| 97 05 765 | 08B | 093 | 6-D22 |
| 97 05 765 | 08B | 105 | 6-E10 |
| 97 05 773 | 08B | 077 | 6-D06 |
| 97 05 773 | 08B | 081 | 6-D10 |
| 97 05 773 | 08B | 093 | 6-D22 |
| 97 05 773 | 08B | 105 | 6-E10 |
| 97 05 781 | 08B | 081 | 6-D10 |
| 97 05 799 | 08B | 081 | 6-D10 |
| 97 05 906 | 08B | 075 | 6-D04 |
| 97 05 906 | 08B | 089 | 6-D18 |
| 97 05 906 | 08B | 101 | 6-E06 |
| 97 05 906 | 08B | 113 | 6-E18 |
| 97 06 383 | 05 | 025 | 4-B02 |
| 97 06 466 | 08B | 153 | 6-G10 |
| 97 06 466 | 08B | 161 | 6-G18 |
| 97 06 573 | 08B | 019 | 6-A20 |
| 97 06 805 | 08B | 017 | 6-A18 |
| 97 07 019 | 08B | 201 | 6-I10 |
| 97 07 027 | 08B | 201 | 6-I10 |
| 97 07 217 | 08A | 079 | 5-D08 |
| 97 07 217 | 08A | 081 | 5-D10 |
| 97 08 066 | 05 | 025 | 4-B02 |
| 97 08 066 | 05 | 027 | 4-B04 |
| 97 08 108 | 08B | 005 | 6-A06 |
| 97 08 421 | 08B | 121 | 6-F02 |
| 97 08 561 | 08B | 025 | 6-B02 |
| 97 08 561 | 08B | 049 | 6-C02 |
| 97 09 494 | 08B | 185 | 6-H18 |
| 97 09 502 | 08B | 185 | 6-H18 |
| 97 11 961 | 08B | 071 | 6-C24 |
| 97 11 961 | 08B | 083 | 6-D12 |
| 97 11 961 | 08B | 085 | 6-D14 |
| 97 11 961 | 08B | 091 | 6-D20 |
| 97 11 961 | 08B | 095 | 6-D24 |
| 97 11 961 | 08B | 097 | 6-E02 |
| 97 11 961 | 08B | 103 | 6-E08 |
| 97 11 961 | 08B | 107 | 6-E12 |
| 97 11 961 | 08B | 115 | 6-E20 |
| 97 12 845 | 08B | 075 | 6-D04 |
| 97 12 845 | 08B | 089 | 6-D18 |
| 97 12 845 | 08B | 101 | 6-E06 |
| 97 13 496 | 08A | 005 | 5-A06 |
| 97 14 122 | 08B | 013 | 6-A14 |
| 97 14 775 | 08B | 005 | 6-A06 |
| 97 14 783 | 08B | 005 | 6-A06 |
| 97 14 791 | 08B | 007 | 6-A08 |
| 97 14 809 | 08B | 007 | 6-A08 |
| 97 14 817 | 08B | 007 | 6-A08 |
| 97 14 817 | 08B | 015 | 6-A16 |
| 97 14 825 | 08B | 005 | 6-A06 |
| 97 14 833 | 08B | 005 | 6-A06 |



# 7-G14 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 97 15 525 | 08B | 151 | 6-G08 |
| 97 15 525 | 08B | 161 | 6-G18 |
| 97 15 525 | 08B | 225 | 6-J10 |
| 97 16 556 | 08B | 015 | 6-A16 |
| 97 16 598 | 08B | 015 | 6-A16 |
| 97 16 614 | 08B | 015 | 6-A16 |
| 97 18 131 | 08B | 151 | 6-G08 |
| 97 18 131 | 08B | 153 | 6-G10 |
| 97 18 131 | 08B | 159 | 6-G16 |
| 97 18 131 | 08B | 225 | 6-J10 |
| 97 18 255 | 08B | 081 | 6-D10 |
| 97 18 263 | 08B | 081 | 6-D10 |
| 97 18 297 | 08B | 151 | 6-G08 |
| 97 18 297 | 08B | 159 | 6-G16 |
| 97 18 305 | 08B | 151 | 6-G08 |
| 97 18 305 | 08B | 159 | 6-G16 |
| 97 18 479 | 08B | 153 | 6-G10 |
| 97 18 479 | 08B | 159 | 6-G16 |
| 97 18 487 | 08B | 153 | 6-G10 |
| 97 18 487 | 08B | 159 | 6-G16 |
| 97 18 511 | 08B | 149 | 6-G06 |
| 97 18 529 | 08B | 149 | 6-G06 |
| 97 18 560 | 08B | 147 | 6-G04 |
| 97 18 602 | 08B | 151 | 6-G08 |
| 97 18 602 | 08B | 159 | 6-G16 |
| 97 18 610 | 08B | 151 | 6-G08 |
| 97 18 610 | 08B | 159 | 6-G16 |
| 97 19 717 | 08B | 185 | 6-H18 |
| 97 19 790 | 08B | 185 | 6-H18 |
| 97 19 808 | 08B | 187 | 6-H20 |
| 97 19 816 | 08B | 185 | 6-H18 |
| 97 19 824 | 08B | 185 | 6-H18 |
| 97 19 832 | 08B | 185 | 6-H18 |
| 97 19 840 | 08B | 185 | 6-H18 |
| 97 20 889 | 08B | 153 | 6-G10 |
| 97 20 889 | 08B | 161 | 6-G18 |
| 97 21 481 | 08B | 185 | 6-H18 |
| 97 21 481 | 08B | 189 | 6-H22 |
| 97 21 499 | 08B | 193 | 6-I02 |
| 97 21 523 | 08B | 185 | 6-H18 |
| 97 21 531 | 08B | 185 | 6-H18 |
| 97 22 075 | 08B | 019 | 6-A20 |
| 97 23 263 | 08B | 015 | 6-A16 |
| 97 23 313 | 08B | 015 | 6-A16 |
| 97 23 321 | 08B | 009 | 6-A10 |
| 97 23 347 | 08B | 015 | 6-A16 |
| 97 23 354 | 08B | 015 | 6-A16 |
| 97 23 701 | 08B | 019 | 6-A20 |
| 97 23 735 | 08B | 125 | 6-F06 |
| 97 23 735 | 08B | 129 | 6-F10 |
| 97 24 063 | 08B | 215 | 6-I24 |
| 97 24 063 | 08B | 219 | 6-J04 |
| 97 24 071 | 08B | 215 | 6-I24 |
| 97 24 071 | 08B | 219 | 6-J04 |
| 97 24 089 | 08B | 215 | 6-I24 |
| 97 24 089 | 08B | 219 | 6-J04 |
| 97 24 626 | 08B | 185 | 6-H18 |
| 97 24 634 | 08B | 185 | 6-H18 |
| 97 24 717 | 08B | 219 | 6-J04 |
| 97 24 717 | 08B | 221 | 6-J06 |
| 97 24 733 | 08B | 187 | 6-H20 |
| 97 26 779 | 08B | 151 | 6-G08 |
| 97 26 779 | 08B | 163 | 6-G20 |
| 97 26 779 | 08B | 225 | 6-J10 |
| 97 26 795 | 08B | 149 | 6-G06 |
| 97 26 795 | 08B | 157 | 6-G14 |
| 97 26 795 | 08B | 223 | 6-J08 |
| 97 26 795 | 08B | 225 | 6-J10 |
| 97 27 165 | 08B | 149 | 6-G06 |
| 97 27 496 | 08B | 017 | 6-A18 |
| 97 27 504 | 08B | 017 | 6-A18 |
| 97 27 827 | 08B | 033 | 6-B10 |
| 97 27 827 | 08B | 043 | 6-B20 |
| 97 27 892 | 08B | 191 | 6-H24 |
| 97 28 676 | 08B | 035 | 6-B12 |
| 97 29 716 | 08B | 187 | 6-H20 |
| 97 29 724 | 08B | 151 | 6-G08 |
| 97 29 724 | 08B | 159 | 6-G16 |
| 97 30 995 | 08A | 173 | 5-H06 |
| 97 30 995 | 08A | 175 | 5-H08 |
| 97 30 995 | 08A | 155 | 5-H10 |
| 97 30 995 | 08A | 179 | 5-H12 |
| 97 30 995 | 08A | 181 | 5-H14 |
| 97 30 995 | 08A | 183 | 5-H16 |
| 97 30 995 | 08B | 143 | 6-F24 |
| 97 31 084 | 08B | 221 | 6-J06 |
| 97 31 092 | 08B | 221 | 6-J06 |
| 97 31 498 | 08A | 075 | 5-D04 |
| 97 31 498 | 08A | 079 | 5-D08 |
| 97 31 498 | 08A | 081 | 5-D10 |
| 97 31 506 | 08B | 221 | 6-J06 |
| 97 31 969 | 08B | 221 | 6-J06 |
| 97 31 977 | 08B | 221 | 6-J06 |
| 97 32 231 | 08B | 187 | 6-H20 |
| 97 32 249 | 08B | 017 | 6-A18 |
| 97 33 338 | 08B | 199 | 6-I08 |
| 97 33 569 | 08B | 211 | 6-I20 |
| 97 33 577 | 08B | 211 | 6-I20 |
| 97 34 104 | 08B | 145 | 6-G02 |
| 97 34 112 | 08B | 145 | 6-G02 |
| 97 34 575 | 08B | 145 | 6-G02 |
| 97 34 583 | 08B | 145 | 6-G02 |
| 97 35 010 | 08B | 209 | 6-I18 |
| 97 35 028 | 08B | 209 | 6-I18 |
| 97 35 861 | 08B | 185 | 6-H18 |
| 97 36 075 | 08B | 185 | 6-H18 |
| 97 36 190 | 08B | 187 | 6-H20 |
| 97 36 216 | 08B | 187 | 6-H20 |
| 97 36 273 | 08B | 017 | 6-A18 |
| 97 36 935 | 08A | 083 | 5-D12 |
| 97 36 950 | 08A | 105 | 5-E10 |
| 97 37 347 | 08B | 145 | 6-G02 |
| 97 37 354 | 08B | 145 | 6-G02 |
| 97 37 404 | 08B | 145 | 6-G02 |
| 97 40 663 | 08B | 225 | 6-J10 |
| 97 40 663 | 08B | 227 | 6-J12 |
| 97 40 739 | 08B | 121 | 6-F02 |
| 97 40 838 | 08B | 025 | 6-B02 |
| 97 40 838 | 08B | 035 | 6-B12 |
| 97 40 838 | 08B | 049 | 6-C02 |
| 97 40 853 | 08B | 047 | 6-B24 |
| 97 41 018 | 08B | 025 | 6-B02 |
| 97 41 018 | 08B | 035 | 6-B12 |
| 97 41 018 | 08B | 049 | 6-C02 |
| 97 41 042 | 08B | 027 | 6-B04 |
| 97 41 489 | 08B | 025 | 6-B02 |
| 97 41 489 | 08B | 035 | 6-B12 |
| 97 41 489 | 08B | 049 | 6-C02 |
| 97 41 489 | 08B | 061 | 6-C14 |
| 97 41 612 | 08B | 019 | 6-A20 |
| 97 41 794 | 08B | 207 | 6-I16 |
| 97 41 802 | 08B | 207 | 6-I16 |
| 97 41 877 | 08B | 211 | 6-I20 |
| 97 41 885 | 08B | 211 | 6-I20 |
| 97 41 893 | 08B | 211 | 6-I20 |
| 97 41 901 | 08B | 211 | 6-I20 |
| 97 41 919 | 08B | 211 | 6-I20 |
| 97 41 927 | 08B | 211 | 6-I20 |
| 97 41 950 | 08B | 207 | 6-I16 |
| 97 41 968 | 08B | 207 | 6-I16 |
| 97 41 976 | 08B | 207 | 6-I16 |
| 97 41 984 | 08B | 211 | 6-I20 |
| 97 41 992 | 08B | 211 | 6-I20 |
| 97 42 008 | 08B | 207 | 6-I16 |
| 97 42 107 | 08B | 077 | 6-D06 |
| 97 42 107 | 08B | 093 | 6-D22 |
| 97 42 115 | 08B | 077 | 6-D06 |
| 97 42 115 | 08B | 093 | 6-D22 |
| 97 42 123 | 08B | 081 | 6-D10 |
| 97 42 123 | 08B | 095 | 6-D24 |
| 97 42 131 | 08B | 081 | 6-D10 |
| 97 42 131 | 08B | 095 | 6-D24 |
| 97 42 149 | 08B | 071 | 6-C24 |
| 97 42 149 | 08B | 083 | 6-D12 |
| 97 42 149 | 08B | 085 | 6-D14 |
| 97 42 149 | 08B | 095 | 6-D24 |
| 97 45 472 | 08B | 147 | 6-G04 |
| 97 45 480 | 08B | 147 | 6-G04 |
| 97 45 498 | 08B | 147 | 6-G04 |
| 97 45 506 | 08B | 147 | 6-G04 |
| 97 45 514 | 08B | 147 | 6-G04 |
| 97 45 530 | 08B | 147 | 6-G04 |
| 97 45 555 | 08B | 147 | 6-G04 |
| 97 45 563 | 08B | 147 | 6-G04 |
| 97 45 571 | 08B | 147 | 6-G04 |
| 97 45 589 | 08B | 147 | 6-G04 |
| 97 45 605 | 08B | 147 | 6-G04 |
| 97 45 613 | 08B | 147 | 6-G04 |
| 97 45 621 | 08B | 147 | 6-G04 |
| 97 45 639 | 08B | 147 | 6-G04 |
| 97 45 688 | 08B | 147 | 6-G04 |
| 97 45 704 | 08B | 147 | 6-G04 |
| 97 45 720 | 08B | 147 | 6-G04 |
| 97 45 738 | 08B | 147 | 6-G04 |
| 97 45 746 | 08B | 147 | 6-G04 |
| 97 45 753 | 08B | 147 | 6-G04 |
| 97 46 082 | 08B | 151 | 6-G08 |
| 97 46 124 | 08B | 151 | 6-G08 |
| 97 46 124 | 08B | 161 | 6-G18 |
| 97 46 249 | 08C | 055 | 7-C08 |
| 97 46 264 | 08A | 155 | 5-G12 |
| 97 46 272 | 08B | 021 | 6-A22 |
| 97 46 272 | 08B | 223 | 6-J08 |
| 97 46 280 | 08B | 021 | 6-A22 |
| 97 46 280 | 08B | 223 | 6-J08 |
| 97 46 298 | 08A | 159 | 5-G16 |
| 97 46 306 | 08A | 159 | 5-G16 |
| 97 46 314 | 08A | 159 | 5-G16 |
| 97 46 322 | 08C | 005 | 7-A06 |
| 97 46 322 | 08C | 031 | 7-B08 |
| 97 46 363 | 08A | 157 | 5-G14 |
| 97 46 553 | 08A | 159 | 5-G16 |
| 97 46 587 | 08A | 157 | 5-G14 |
| 97 46 595 | 08A | 157 | 5-G14 |
| 97 46 652 | 08A | 159 | 5-G16 |
| 97 46 694 | 08B | 007 | 6-A08 |
| 97 46 694 | 08B | 229 | 6-J14 |
| 97 46 710 | 08C | 027 | 7-B04 |
| 97 46 710 | 08C | 053 | 7-C06 |
| 97 46 744 | 08A | 151 | 5-G08 |
| 97 46 751 | 08A | 151 | 5-G08 |
| 97 46 769 | 08A | 155 | 5-G12 |
| 97 46 777 | 08A | 151 | 5-G08 |
| 97 46 785 | 08A | 151 | 5-G08 |
| 97 46 793 | 08A | 155 | 5-G12 |
| 97 46 801 | 08A | 157 | 5-G14 |
| 97 46 819 | 08A | 157 | 5-G14 |
| 97 46 827 | 08C | 017 | 7-A18 |
| 97 46 827 | 08C | 021 | 7-A22 |
| 97 46 827 | 08C | 031 | 7-B08 |
| 97 46 835 | 08A | 159 | 5-G16 |
| 97 46 843 | 08A | 159 | 5-G16 |
| 97 46 850 | 08A | 159 | 5-G16 |
| 97 46 884 | 08A | 159 | 5-G16 |
| 97 46 892 | 08A | 159 | 5-G16 |
| 97 46 900 | 08A | 159 | 5-G16 |
| 97 46 926 | 08A | 159 | 5-G16 |
| 97 46 934 | 08A | 159 | 5-G16 |
| 97 46 942 | 08A | 159 | 5-G16 |
| 97 46 959 | 08A | 159 | 5-G16 |
| 97 46 967 | 08A | 159 | 5-G16 |
| 97 46 975 | 08A | 157 | 5-G14 |
| 97 46 975 | 08A | 159 | 5-G16 |
| 97 53 419 | 08A | 107 | 5-E12 |
| 97 53 427 | 08A | 107 | 5-E12 |
| 97 56 974 | 08B | 139 | 6-F20 |
| 97 57 691 | 08B | 023 | 6-A24 |
| 97 58 947 | 08B | 177 | 6-H10 |
| 97 59 051 | 08B | 167 | 6-G24 |
| 97 59 069 | 08B | 167 | 6-G24 |
| 97 59 069 | 08B | 177 | 6-H10 |
| 97 59 077 | 08B | 167 | 6-G24 |
| 97 59 077 | 08B | 177 | 6-H10 |
| 97 60 497 | 08B | 019 | 6-A20 |
| 97 62 030 | 08A | 075 | 5-D04 |
| 97 62 048 | 08A | 075 | 5-D04 |
| 97 64 853 | 08B | 199 | 6-I08 |
| 97 65 132 | 08B | 167 | 6-G24 |
| 97 65 132 | 08B | 179 | 6-H12 |
| 97 67 518 | 08B | 177 | 6-H10 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

# 7-G15 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 97 67 815 | 08B | 165 | 6-G22 |
| 97 67 815 | 08B | 183 | 6-H16 |
| 97 67 815 | 08B | 227 | 6-J12 |
| 97 69 209 | 08B | 157 | 6-G14 |
| 97 69 209 | 08B | 165 | 6-G22 |
| 97 69 209 | 08B | 223 | 6-J08 |
| 97 69 209 | 08B | 225 | 6-J10 |
| 97 69 217 | 08B | 149 | 6-G06 |
| 97 69 217 | 08B | 157 | 6-G14 |
| 97 69 217 | 08B | 165 | 6-G22 |
| 97 69 217 | 08B | 173 | 6-H06 |
| 97 69 217 | 08B | 223 | 6-J08 |
| 97 69 217 | 08B | 225 | 6-J10 |
| 97 69 225 | 08B | 149 | 6-G06 |
| 97 69 225 | 08B | 165 | 6-G22 |
| 97 69 225 | 08B | 173 | 6-H06 |
| 97 69 225 | 08B | 225 | 6-J10 |
| 97 71 205 | 08B | 177 | 6-H10 |
| 97 74 282 | 08B | 199 | 6-I08 |
| 97 75 230 | 08B | 197 | 6-I06 |
| 97 75 230 | 08B | 199 | 6-I08 |
| 97 75 453 | 08B | 041 | 6-B18 |
| 97 75 453 | 08B | 053 | 6-C06 |
| 97 75 461 | 08B | 041 | 6-B18 |
| 97 75 461 | 08B | 051 | 6-C04 |
| 97 75 479 | 08B | 041 | 6-B18 |
| 97 75 594 | 08B | 169 | 6-H02 |
| 97 75 594 | 08B | 181 | 6-H14 |
| 97 75 610 | 08B | 169 | 6-H02 |
| 97 75 636 | 08B | 169 | 6-H02 |
| 97 75 636 | 08B | 181 | 6-H14 |
| 97 75 651 | 08B | 169 | 6-H02 |
| 97 76 584 | 08A | 107 | 5-E12 |
| 97 77 327 | 08B | 167 | 6-G24 |
| 97 77 327 | 08B | 177 | 6-H10 |
| 97 78 952 | 03A | 081 | 2-D10 |
| 97 81 204 | 08B | 169 | 6-H02 |
| 97 81 204 | 08B | 179 | 6-H12 |
| 97 81 204 | 08B | 225 | 6-J10 |
| 97 81 592 | 08B | 165 | 6-G22 |
| 97 81 592 | 08B | 173 | 6-H06 |
| 97 81 592 | 08B | 225 | 6-J10 |
| 97 92 391 | 08B | 169 | 6-H02 |
| 97 92 391 | 08B | 183 | 6-H16 |
| 97 92 391 | 08B | 227 | 6-J12 |
| 97 94 264 | 08B | 197 | 6-I06 |
| 97 95 006 | 08B | 183 | 6-H16 |
| 97 95 949 | 08B | 149 | 6-G06 |
| 97 95 949 | 08B | 165 | 6-G22 |
| 97 96 848 | 08B | 149 | 6-G06 |
| 97 96 848 | 08B | 161 | 6-G18 |
| 97 96 848 | 08B | 165 | 6-G22 |
| 97 96 848 | 08B | 183 | 6-H16 |
| 97 96 848 | 08B | 225 | 6-J10 |
| 97 96 848 | 08B | 227 | 6-J12 |
| 97 97 036 | 08B | 197 | 6-I06 |
| 97 97 093 | 08A | 105 | 5-E10 |
| 97 97 093 | 08A | 107 | 5-E12 |
| 97 97 101 | 08A | 105 | 5-E10 |
| 97 97 101 | 08A | 107 | 5-E12 |
| 97 97 127 | 08B | 197 | 6-I06 |
| 97 98 356 | 08B | 167 | 6-G24 |
| 97 98 356 | 08B | 179 | 6-H12 |
| 98 03 834 | 08B | 121 | 6-F02 |
| 98 04 113 | 08B | 023 | 6-A24 |
| 98 04 121 | 08B | 023 | 6-A24 |
| 98 04 139 | 08B | 023 | 6-A24 |
| 98 04 147 | 08B | 023 | 6-A24 |
| 98 04 170 | 08B | 023 | 6-A24 |
| 98 04 188 | 08B | 023 | 6-A24 |
| 98 04 691 | 08B | 023 | 6-A24 |
| 98 05 052 | 08B | 151 | 6-G08 |
| 98 05 326 | 08A | 077 | 5-D06 |
| 98 07 215 | 08B | 189 | 6-H22 |
| 98 07 355 | 08B | 031 | 6-B08 |
| 98 07 355 | 08B | 041 | 6-B18 |
| 98 07 363 | 08B | 031 | 6-B08 |
| 98 07 363 | 08B | 041 | 6-B18 |
| 98 07 439 | 08B | 031 | 6-B08 |
| 98 07 439 | 08B | 041 | 6-B18 |
| 98 07 439 | 08B | 053 | 6-C06 |
| 98 07 447 | 08B | 031 | 6-B08 |
| 98 07 447 | 08B | 041 | 6-B18 |
| 98 07 447 | 08B | 051 | 6-C04 |
| 98 07 454 | 08B | 031 | 6-B08 |
| 98 07 454 | 08B | 041 | 6-B18 |
| 98 07 637 | 08B | 031 | 6-B08 |
| 98 07 637 | 08B | 041 | 6-B18 |
| 98 07 645 | 08B | 031 | 6-B08 |
| 98 07 645 | 08B | 041 | 6-B18 |
| 98 07 710 | 08B | 031 | 6-B08 |
| 98 07 710 | 08B | 041 | 6-B18 |
| 98 07 728 | 08B | 031 | 6-B08 |
| 98 07 728 | 08B | 041 | 6-B18 |
| 98 07 751 | 08B | 031 | 6-B08 |
| 98 07 751 | 08B | 041 | 6-B18 |
| 98 07 769 | 08B | 031 | 6-B08 |
| 98 07 769 | 08B | 041 | 6-B18 |
| 98 07 975 | 08B | 037 | 6-B14 |
| 98 07 975 | 08B | 049 | 6-C02 |
| 98 07 975 | 08B | 061 | 6-C14 |
| 98 08 106 | 08B | 075 | 6-D04 |
| 98 08 106 | 08B | 089 | 6-D18 |
| 98 08 338 | 08B | 145 | 6-G02 |
| 98 08 528 | 08B | 123 | 6-F04 |
| 98 08 528 | 08B | 127 | 6-F08 |
| 98 08 536 | 08B | 123 | 6-F04 |
| 98 08 536 | 08B | 127 | 6-F08 |
| 98 08 544 | 08B | 123 | 6-F04 |
| 98 08 544 | 08B | 127 | 6-F08 |
| 98 08 551 | 08B | 123 | 6-F04 |
| 98 08 551 | 08B | 127 | 6-F08 |
| 98 09 260 | 08B | 207 | 6-I16 |
| 98 09 278 | 08B | 207 | 6-I16 |
| 98 09 286 | 08B | 207 | 6-I16 |
| 98 09 575 | 08B | 029 | 6-B06 |
| 98 09 575 | 08B | 031 | 6-B08 |
| 98 09 575 | 08B | 035 | 6-B12 |
| 98 09 575 | 08B | 041 | 6-B18 |
| 98 09 641 | 08B | 033 | 6-B10 |
| 98 09 641 | 08B | 045 | 6-B22 |
| 98 09 690 | 08B | 149 | 6-G06 |
| 98 09 690 | 08B | 161 | 6-G18 |
| 98 09 690 | 08B | 225 | 6-J10 |
| 98 09 732 | 08B | 121 | 6-F02 |
| 98 09 740 | 08B | 121 | 6-F02 |
| 98 10 326 | 08B | 023 | 6-A24 |
| 98 10 961 | 08B | 221 | 6-J06 |
| 98 11 001 | 08B | 221 | 6-J06 |
| 98 11 019 | 08B | 221 | 6-J06 |
| 98 12 033 | 08B | 073 | 6-D02 |
| 98 12 033 | 08B | 087 | 6-D16 |
| 98 12 033 | 08B | 099 | 6-E04 |
| 98 12 033 | 08B | 111 | 6-E16 |
| 98 12 058 | 08B | 073 | 6-D02 |
| 98 12 058 | 08B | 087 | 6-D16 |
| 98 12 058 | 08B | 099 | 6-E04 |
| 98 12 058 | 08B | 111 | 6-E16 |
| 98 12 249 | 08B | 155 | 6-G12 |
| 98 12 256 | 08B | 155 | 6-G12 |
| 98 12 264 | 08B | 155 | 6-G12 |
| 98 12 272 | 08B | 155 | 6-G12 |
| 98 12 322 | 08B | 151 | 6-G08 |
| 98 12 322 | 08B | 161 | 6-G18 |
| 98 12 660 | 08B | 033 | 6-B10 |
| 98 12 660 | 08B | 045 | 6-B22 |
| 98 12 686 | 08B | 033 | 6-B10 |
| 98 12 686 | 08B | 045 | 6-B22 |
| 98 12 694 | 08B | 033 | 6-B10 |
| 98 12 694 | 08B | 045 | 6-B22 |
| 98 12 744 | 08B | 033 | 6-B10 |
| 98 12 744 | 08B | 045 | 6-B22 |
| 98 13 254 | 08B | 153 | 6-G10 |
| 98 13 254 | 08B | 161 | 6-G18 |
| 98 13 262 | 08B | 153 | 6-G10 |
| 98 13 262 | 08B | 161 | 6-G18 |
| 98 13 270 | 08B | 153 | 6-G10 |
| 98 13 270 | 08B | 161 | 6-G18 |
| 98 13 288 | 08B | 153 | 6-G10 |
| 98 13 288 | 08B | 161 | 6-G18 |
| 98 13 296 | 08B | 153 | 6-G10 |
| 98 13 296 | 08B | 161 | 6-G18 |
| 98 13 304 | 08B | 153 | 6-G10 |
| 98 13 304 | 08B | 161 | 6-G18 |
| 98 14 302 | 08B | 021 | 6-A22 |
| 98 14 310 | 08B | 021 | 6-A22 |
| 98 14 328 | 08B | 021 | 6-A22 |
| 98 14 336 | 08B | 021 | 6-A22 |
| 98 14 344 | 08B | 021 | 6-A22 |
| 98 14 351 | 08B | 021 | 6-A22 |
| 98 15 026 | 08B | 123 | 6-F04 |
| 98 15 374 | 08B | 123 | 6-F04 |
| 98 15 465 | 08B | 147 | 6-G04 |
| 98 15 473 | 08B | 147 | 6-G04 |
| 98 15 580 | 08B | 147 | 6-G04 |
| 98 15 598 | 08B | 147 | 6-G04 |



# 7-G16 *Numerical register* *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 98 24 376 | 08B | 069 | 6-C22 |
| 98 24 434 | 08B | 121 | 6-F02 |
| 98 24 483 | 08B | 199 | 6-I08 |
| 98 24 574 | 08A | 027 | 5-B04 |
| 98 24 673 | 08B | 089 | 6-D18 |
| 98 24 673 | 08B | 103 | 6-E08 |
| 98 24 673 | 08B | 113 | 6-E18 |
| 98 24 681 | 08B | 089 | 6-D18 |
| 98 24 681 | 08B | 103 | 6-E08 |
| 98 24 681 | 08B | 113 | 6-E18 |
| 98 24 699 | 08B | 089 | 6-D18 |
| 98 24 699 | 08B | 103 | 6-E08 |
| 98 24 699 | 08B | 113 | 6-E18 |
| 98 24 707 | 08B | 089 | 6-D18 |
| 98 24 707 | 08B | 103 | 6-E08 |
| 98 24 707 | 08B | 113 | 6-E18 |
| 98 24 715 | 08B | 089 | 6-D18 |
| 98 24 715 | 08B | 103 | 6-E08 |
| 98 24 715 | 08B | 113 | 6-E18 |
| 98 24 723 | 08B | 091 | 6-D20 |
| 98 24 723 | 08B | 103 | 6-E08 |
| 98 24 723 | 08B | 113 | 6-E18 |
| 98 24 830 | 08B | 215 | 6-I24 |
| 98 24 848 | 08B | 215 | 6-I24 |
| 98 24 897 | 08B | 121 | 6-F02 |
| 98 24 905 | 08A | 135 | 5-F16 |
| 98 24 939 | 03A | 049 | 2-C02 |
| 98 24 954 | 08B | 121 | 6-F02 |
| 98 24 988 | 08B | 223 | 6-J08 |
| 98 26 314 | 08B | 147 | 6-G04 |
| 98 26 322 | 08B | 147 | 6-G04 |
| 98 26 330 | 08B | 147 | 6-G04 |
| 98 26 348 | 08B | 147 | 6-G04 |
| 98 26 355 | 08B | 147 | 6-G04 |
| 98 26 363 | 08B | 147 | 6-G04 |
| 98 26 371 | 08B | 147 | 6-G04 |
| 98 26 389 | 08B | 147 | 6-G04 |
| 98 26 512 | 08B | 185 | 6-H18 |
| 98 26 520 | 08B | 185 | 6-H18 |
| 98 26 595 | 08B | 199 | 6-I08 |
| 98 27 247 | 08B | 049 | 6-C02 |
| 98 27 254 | 08B | 025 | 6-B02 |
| 98 27 254 | 08B | 035 | 6-B12 |
| 98 27 254 | 08B | 047 | 6-B24 |
| 98 27 262 | 08B | 025 | 6-B02 |
| 98 27 262 | 08B | 035 | 6-B12 |
| 98 27 635 | 08B | 015 | 6-A16 |
| 98 27 668 | 08B | 015 | 6-A16 |
| 98 27 718 | 08B | 191 | 6-H24 |
| 98 28 096 | 08B | 015 | 6-A16 |
| 98 28 161 | 08B | 153 | 6-G10 |
| 98 28 179 | 08B | 153 | 6-G10 |
| 98 28 187 | 08B | 153 | 6-G10 |
| 98 28 203 | 08B | 123 | 6-F04 |
| 98 28 203 | 08B | 127 | 6-F08 |
| 98 28 203 | 08B | 131 | 6-F12 |
| 98 28 203 | 08B | 135 | 6-F16 |
| 98 28 211 | 08B | 123 | 6-F04 |
| 98 28 211 | 08B | 127 | 6-F08 |
| 98 28 211 | 08B | 131 | 6-F12 |
| 98 28 211 | 08B | 135 | 6-F16 |
| 98 28 229 | 08B | 123 | 6-F04 |
| 98 28 229 | 08B | 127 | 6-F08 |
| 98 28 237 | 08B | 123 | 6-F04 |
| 98 28 237 | 08B | 127 | 6-F08 |
| 98 28 435 | 08B | 017 | 6-A18 |
| 98 29 136 | 08B | 019 | 6-A20 |
| 98 29 201 | 08B | 015 | 6-A16 |
| 98 29 219 | 08B | 015 | 6-A16 |
| 98 29 409 | 08B | 153 | 6-G10 |
| 98 29 409 | 08B | 163 | 6-G20 |
| 98 29 672 | 08B | 189 | 6-H22 |
| 98 29 755 | 08B | 029 | 6-B06 |
| 98 29 763 | 08B | 029 | 6-B06 |
| 98 29 813 | 08B | 029 | 6-B06 |
| 98 29 821 | 08B | 029 | 6-B06 |
| 98 29 839 | 08B | 029 | 6-B06 |
| 98 30 050 | 08B | 073 | 6-D02 |
| 98 30 050 | 08B | 087 | 6-D16 |
| 98 30 050 | 08B | 099 | 6-E04 |
| 98 30 050 | 08B | 111 | 6-E16 |
| 98 30 100 | 08B | 029 | 6-B06 |
| 98 30 118 | 08B | 029 | 6-B06 |
| 98 30 134 | 08B | 029 | 6-B06 |
| 98 30 142 | 08B | 029 | 6-B06 |
| 98 30 167 | 08B | 029 | 6-B06 |
| 98 30 175 | 08B | 029 | 6-B06 |
| 98 30 282 | 08B | 123 | 6-F04 |
| 98 30 282 | 08B | 127 | 6-F08 |
| 98 30 308 | 08B | 123 | 6-F04 |
| 98 30 308 | 08B | 127 | 6-F08 |
| 98 30 324 | 08B | 123 | 6-F04 |
| 98 30 324 | 08B | 127 | 6-F08 |
| 98 30 340 | 08B | 123 | 6-F04 |
| 98 30 340 | 08B | 127 | 6-F08 |
| 98 31 587 | 08B | 029 | 6-B06 |
| 98 31 587 | 08B | 031 | 6-B08 |
| 98 31 587 | 08B | 041 | 6-B18 |
| 98 31 587 | 08B | 053 | 6-C06 |
| 98 31 595 | 08B | 029 | 6-B06 |
| 98 31 595 | 08B | 031 | 6-B08 |
| 98 31 595 | 08B | 041 | 6-B18 |
| 98 31 595 | 08B | 051 | 6-C04 |
| 98 31 728 | 08B | 033 | 6-B10 |
| 98 31 728 | 08B | 045 | 6-B22 |
| 98 31 991 | 08B | 071 | 6-C24 |
| 98 31 991 | 08B | 085 | 6-D14 |
| 98 31 991 | 08B | 097 | 6-E02 |
| 98 31 991 | 08B | 109 | 6-E14 |
| 98 32 007 | 08B | 071 | 6-C24 |
| 98 32 007 | 08B | 085 | 6-D14 |
| 98 32 007 | 08B | 097 | 6-E02 |
| 98 32 007 | 08B | 109 | 6-E14 |
| 98 33 104 | 08A | 105 | 5-E10 |
| 98 33 112 | 08A | 105 | 5-E10 |
| 98 33 120 | 08A | 105 | 5-E10 |
| 98 33 138 | 08A | 105 | 5-E10 |
| 98 33 146 | 08A | 105 | 5-E10 |
| 98 33 153 | 08A | 105 | 5-E10 |
| 98 33 161 | 08A | 105 | 5-E10 |
| 98 33 179 | 08A | 105 | 5-E10 |
| 98 33 187 | 08A | 105 | 5-E10 |
| 98 33 195 | 08A | 105 | 5-E10 |
| 98 33 203 | 08A | 105 | 5-E10 |
| 98 33 203 | 08A | 169 | 5-H02 |
| 98 33 211 | 08A | 105 | 5-E10 |
| 98 33 211 | 08A | 169 | 5-H02 |
| 98 33 229 | 08A | 105 | 5-E10 |
| 98 33 245 | 08A | 105 | 5-E10 |
| 98 33 245 | 08A | 169 | 5-H02 |
| 98 33 252 | 08A | 105 | 5-E10 |
| 98 33 260 | 08A | 105 | 5-E10 |
| 98 33 278 | 08A | 105 | 5-E10 |
| 98 33 286 | 08A | 105 | 5-E10 |
| 98 33 302 | 08A | 105 | 5-E10 |
| 98 33 328 | 08A | 105 | 5-E10 |
| 98 33 344 | 08A | 105 | 5-E10 |
| 98 33 369 | 08A | 105 | 5-E10 |
| 98 33 385 | 08A | 105 | 5-E10 |
| 98 33 476 | 08B | 153 | 6-G10 |
| 98 33 476 | 08B | 159 | 6-G16 |
| 98 33 484 | 08B | 153 | 6-G10 |
| 98 33 484 | 08B | 159 | 6-G16 |
| 98 33 492 | 08B | 153 | 6-G10 |
| 98 33 492 | 08B | 159 | 6-G16 |
| 98 33 500 | 08B | 153 | 6-G10 |
| 98 33 500 | 08B | 159 | 6-G16 |
| 98 33 518 | 08A | 105 | 5-E10 |
| 98 33 526 | 08A | 105 | 5-E10 |
| 98 33 534 | 08A | 105 | 5-E10 |
| 98 33 542 | 08B | 189 | 6-H22 |
| 98 33 559 | 08A | 105 | 5-E10 |
| 98 33 575 | 08A | 105 | 5-E10 |
| 98 33 591 | 08A | 105 | 5-E10 |
| 98 33 617 | 08A | 105 | 5-E10 |
| 98 33 773 | 08B | 189 | 6-H22 |
| 98 33 781 | 08B | 189 | 6-H22 |
| 98 33 799 | 08B | 189 | 6-H22 |
| 98 33 849 | 08B | 019 | 6-A20 |
| 98 33 856 | 08B | 019 | 6-A20 |
| 98 33 971 | 08B | 151 | 6-G08 |
| 98 33 971 | 08B | 159 | 6-G16 |
| 98 33 971 | 08B | 225 | 6-J10 |
| 98 33 997 | 08B | 203 | 6-I12 |
| 98 34 011 | 08B | 189 | 6-H22 |
| 98 34 243 | 08B | 015 | 6-A16 |
| 98 34 318 | 08B | 025 | 6-B02 |
| 98 34 318 | 08B | 035 | 6-B12 |
| 98 34 334 | 08B | 047 | 6-B24 |
| 98 34 342 | 08B | 025 | 6-B02 |
| 98 34 342 | 08B | 035 | 6-B12 |
| 98 34 342 | 08B | 047 | 6-B24 |
| 98 34 375 | 08B | 025 | 6-B02 |
| 98 34 458 | 08B | 025 | 6-B02 |
| 98 34 458 | 08B | 035 | 6-B12 |
| 98 35 042 | 08B | 017 | 6-A18 |
| 98 35 059 | 08B | 017 | 6-A18 |
| 98 35 190 | 08B | 151 | 6-G08 |
| 98 35 190 | 08B | 161 | 6-G18 |
| 98 35 208 | 08B | 151 | 6-G08 |
| 98 35 208 | 08B | 161 | 6-G18 |
| 98 35 596 | 08B | 005 | 6-A06 |
| 98 35 620 | 08B | 009 | 6-A10 |
| 98 35 638 | 08B | 009 | 6-A10 |
| 98 35 646 | 08B | 033 | 6-B10 |
| 98 35 646 | 08B | 043 | 6-B20 |
| 98 35 679 | 08B | 033 | 6-B10 |
| 98 35 679 | 08B | 043 | 6-B20 |
| 98 35 703 | 08B | 033 | 6-B10 |
| 98 35 703 | 08B | 043 | 6-B20 |
| 98 35 711 | 08B | 033 | 6-B10 |
| 98 35 711 | 08B | 043 | 6-B20 |
| 98 35 729 | 08B | 033 | 6-B10 |
| 98 35 729 | 08B | 043 | 6-B20 |
| 98 35 737 | 04 | 049 | 3-J02 |
| 98 35 737 | 08A | 063 | 5-C16 |
| 98 35 737 | 08A | 067 | 5-C20 |
| 98 35 737 | 08A | 071 | 5-C24 |
| 98 35 752 | 08B | 033 | 6-B10 |
| 98 35 752 | 08B | 043 | 6-B20 |
| 98 35 786 | 08B | 139 | 6-F20 |
| 98 35 794 | 08B | 139 | 6-F20 |
| 98 36 123 | 08B | 139 | 6-F20 |
| 98 36 131 | 08B | 139 | 6-F20 |
| 98 36 149 | 08B | 139 | 6-F20 |
| 98 36 156 | 08B | 139 | 6-F20 |
| 98 36 164 | 08B | 139 | 6-F20 |
| 98 36 172 | 08B | 139 | 6-F20 |
| 98 36 180 | 08B | 139 | 6-F20 |
| 98 36 198 | 08B | 139 | 6-F20 |
| 98 36 305 | 08B | 203 | 6-I12 |
| 98 36 313 | 08B | 205 | 6-I14 |
| 98 36 347 | 08B | 203 | 6-I12 |
| 98 36 354 | 08B | 205 | 6-I14 |
| 98 36 362 | 08B | 205 | 6-I14 |
| 98 36 370 | 08B | 205 | 6-I14 |
| 98 36 388 | 08B | 205 | 6-I14 |
| 98 36 396 | 08B | 203 | 6-I12 |
| 98 36 404 | 08B | 203 | 6-I12 |
| 98 36 412 | 08A | 017 | 5-A18 |
| 98 36 412 | 08A | 021 | 5-A22 |
| 98 36 453 | 08B | 203 | 6-I12 |
| 98 36 461 | 08B | 203 | 6-I12 |
| 98 36 479 | 08B | 203 | 6-I12 |
| 98 36 487 | 08B | 203 | 6-I12 |
| 98 36 495 | 08B | 203 | 6-I12 |
| 98 36 503 | 08B | 203 | 6-I12 |
| 98 36 685 | 08B | 143 | 6-F24 |
| 98 36 693 | 08B | 143 | 6-F24 |
| 98 36 701 | 08B | 143 | 6-F24 |
| 98 36 719 | 08B | 143 | 6-F24 |
| 98 36 727 | 08B | 141 | 6-F22 |
| 98 36 735 | 08B | 141 | 6-F22 |
| 98 36 743 | 08B | 141 | 6-F22 |
| 98 36 750 | 08B | 141 | 6-F22 |
| 98 36 768 | 08B | 141 | 6-F22 |
| 98 36 776 | 08B | 141 | 6-F22 |
| 98 36 784 | 08B | 141 | 6-F22 |
| 98 36 792 | 08B | 141 | 6-F22 |
| 98 36 800 | 08B | 141 | 6-F22 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

# 7-G17 *Numerical register* — *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 98 36 818 | 08B | 141 | 6-F22 |
| 98 36 826 | 08B | 141 | 6-F22 |
| 98 36 834 | 08B | 141 | 6-F22 |
| 98 37 022 | 08B | 151 | 6-G08 |
| 98 37 022 | 08B | 161 | 6-G18 |
| 98 37 170 | 08B | 019 | 6-A20 |
| 98 37 188 | 08B | 019 | 6-A20 |
| 98 37 196 | 08A | 105 | 5-E10 |
| 98 37 196 | 08A | 169 | 5-H02 |
| 98 37 204 | 08A | 105 | 5-E10 |
| 98 37 246 | 08A | 105 | 5-E10 |
| 98 37 253 | 08A | 105 | 5-E10 |
| 98 37 402 | 08B | 151 | 6-G08 |
| 98 37 402 | 08B | 159 | 6-G16 |
| 98 37 410 | 08B | 151 | 6-G08 |
| 98 37 410 | 08B | 161 | 6-G18 |
| 98 37 428 | 08B | 151 | 6-G08 |
| 98 37 428 | 08B | 161 | 6-G18 |
| 98 37 436 | 08B | 151 | 6-G08 |
| 98 37 436 | 08B | 161 | 6-G18 |
| 98 37 444 | 08B | 151 | 6-G08 |
| 98 37 444 | 08B | 161 | 6-G18 |
| 98 37 451 | 08B | 139 | 6-F20 |
| 98 37 469 | 08B | 139 | 6-F20 |
| 98 37 477 | 08B | 005 | 6-A06 |
| 98 37 485 | 08B | 009 | 6-A10 |
| 98 37 493 | 08B | 009 | 6-A10 |
| 98 37 642 | 08B | 077 | 6-D06 |
| 98 37 642 | 08B | 093 | 6-D22 |
| 98 37 659 | 08B | 077 | 6-D06 |
| 98 37 659 | 08B | 093 | 6-D22 |
| 98 37 667 | 08B | 077 | 6-D06 |
| 98 37 675 | 08B | 077 | 6-D06 |
| 98 37 683 | 08B | 077 | 6-D06 |
| 98 37 691 | 08B | 077 | 6-D06 |
| 98 37 725 | 08B | 081 | 6-D10 |
| 98 37 725 | 08B | 095 | 6-D24 |
| 98 37 733 | 08B | 081 | 6-D10 |
| 98 37 733 | 08B | 095 | 6-D24 |
| 98 37 741 | 08B | 081 | 6-D10 |
| 98 37 758 | 08B | 081 | 6-D10 |
| 98 37 766 | 08B | 081 | 6-D10 |
| 98 37 774 | 08B | 081 | 6-D10 |
| 98 39 960 | 08B | 075 | 6-D04 |
| 98 39 960 | 08B | 089 | 6-D18 |
| 98 39 960 | 08B | 101 | 6-E06 |
| 98 39 978 | 08B | 075 | 6-D04 |
| 98 39 978 | 08B | 089 | 6-D18 |
| 98 39 978 | 08B | 101 | 6-E06 |
| 98 39 986 | 08B | 075 | 6-D04 |
| 98 39 986 | 08B | 089 | 6-D18 |
| 98 39 994 | 08B | 075 | 6-D04 |
| 98 39 994 | 08B | 089 | 6-D18 |
| 98 40 000 | 08B | 075 | 6-D04 |
| 98 40 000 | 08B | 089 | 6-D18 |
| 98 40 000 | 08B | 101 | 6-E06 |
| 98 40 018 | 08B | 075 | 6-D04 |
| 98 40 018 | 08B | 089 | 6-D18 |
| 98 40 018 | 08B | 101 | 6-E06 |
| 98 40 026 | 08B | 075 | 6-D04 |
| 98 40 026 | 08B | 089 | 6-D18 |
| 98 40 034 | 08B | 075 | 6-D04 |
| 98 40 034 | 08B | 089 | 6-D18 |
| 98 40 257 | 08B | 033 | 6-B10 |
| 98 40 257 | 08B | 045 | 6-B22 |
| 98 41 347 | 08B | 005 | 6-A06 |
| 98 41 404 | 08B | 011 | 6-A12 |
| 98 41 594 | 08B | 005 | 6-A06 |
| 98 41 610 | 08B | 005 | 6-A06 |
| 98 41 685 | 08B | 005 | 6-A06 |
| 98 41 701 | 08B | 005 | 6-A06 |
| 98 41 776 | 08B | 009 | 6-A10 |
| 98 41 784 | 08B | 009 | 6-A10 |
| 98 41 818 | 08B | 009 | 6-A10 |
| 98 41 826 | 08B | 009 | 6-A10 |
| 98 41 891 | 08B | 011 | 6-A12 |
| 98 41 925 | 08B | 141 | 6-F22 |
| 98 41 925 | 08B | 229 | 6-J14 |
| 98 41 933 | 08B | 141 | 6-F22 |
| 98 41 933 | 08B | 229 | 6-J14 |
| 98 41 941 | 08B | 005 | 6-A06 |
| 98 41 958 | 03A | 073 | 2-D02 |
| 98 42 022 | 08B | 139 | 6-F20 |
| 98 42 030 | 08B | 139 | 6-F20 |
| 98 42 063 | 08B | 139 | 6-F20 |
| 98 42 071 | 08B | 139 | 6-F20 |
| 98 42 139 | 08B | 071 | 6-C24 |
| 98 42 139 | 08B | 085 | 6-D14 |
| 98 42 147 | 08B | 071 | 6-C24 |
| 98 42 147 | 08B | 085 | 6-D14 |
| 98 42 154 | 08B | 071 | 6-C24 |
| 98 42 154 | 08B | 085 | 6-D14 |
| 98 42 162 | 08B | 071 | 6-C24 |
| 98 42 162 | 08B | 085 | 6-D14 |
| 98 42 170 | 08B | 071 | 6-C24 |
| 98 42 170 | 08B | 085 | 6-D14 |
| 98 42 170 | 08B | 097 | 6-E02 |
| 98 42 188 | 08B | 071 | 6-C24 |
| 98 42 188 | 08B | 085 | 6-D14 |
| 98 42 188 | 08B | 097 | 6-E02 |
| 98 42 196 | 08B | 071 | 6-C24 |
| 98 42 196 | 08B | 085 | 6-D14 |
| 98 42 204 | 08B | 071 | 6-C24 |
| 98 42 204 | 08B | 085 | 6-D14 |
| 98 42 733 | 08B | 073 | 6-D02 |
| 98 42 733 | 08B | 087 | 6-D16 |
| 98 42 741 | 08B | 073 | 6-D02 |
| 98 42 741 | 08B | 087 | 6-D16 |
| 98 42 774 | 08B | 073 | 6-D02 |
| 98 42 782 | 08B | 073 | 6-D02 |
| 98 42 790 | 08B | 073 | 6-D02 |
| 98 42 808 | 08B | 073 | 6-D02 |
| 98 43 574 | 08B | 033 | 6-B10 |
| 98 43 574 | 08B | 045 | 6-B22 |
| 98 43 608 | 08B | 189 | 6-H22 |
| 98 43 632 | 08B | 025 | 6-B02 |
| 98 43 640 | 08B | 025 | 6-B02 |
| 98 43 673 | 08B | 025 | 6-B02 |
| 98 43 681 | 08B | 025 | 6-B02 |
| 98 43 707 | 08B | 025 | 6-B02 |
| 98 43 707 | 08B | 035 | 6-B12 |
| 98 43 707 | 08B | 039 | 6-B16 |
| 98 43 715 | 08B | 025 | 6-B02 |
| 98 43 715 | 08B | 035 | 6-B12 |
| 98 43 715 | 08B | 039 | 6-B16 |
| 98 43 715 | 08B | 047 | 6-B24 |
| 98 43 715 | 08B | 051 | 6-C04 |
| 98 43 723 | 08B | 025 | 6-B02 |
| 98 44 358 | 08B | 025 | 6-B02 |
| 98 44 366 | 08B | 025 | 6-B02 |
| 98 44 390 | 08B | 025 | 6-B02 |
| 98 44 408 | 08B | 025 | 6-B02 |
| 98 44 432 | 08B | 025 | 6-B02 |
| 98 44 440 | 08B | 025 | 6-B02 |
| 98 44 861 | 08B | 029 | 6-B06 |
| 98 44 887 | 08B | 029 | 6-B06 |
| 98 45 041 | 08B | 029 | 6-B06 |
| 98 45 066 | 08B | 029 | 6-B06 |
| 98 45 082 | 08B | 029 | 6-B06 |
| 98 45 108 | 08B | 029 | 6-B06 |
| 98 45 108 | 08B | 031 | 6-B08 |
| 98 45 108 | 08B | 041 | 6-B18 |
| 98 45 223 | 08B | 191 | 6-H24 |
| 98 45 330 | 08B | 071 | 6-C24 |
| 98 45 330 | 08B | 085 | 6-D14 |
| 98 45 348 | 08B | 071 | 6-C24 |
| 98 45 348 | 08B | 085 | 6-D14 |
| 98 45 371 | 08B | 071 | 6-C24 |
| 98 45 371 | 08B | 085 | 6-D14 |
| 98 45 371 | 08B | 097 | 6-E02 |
| 98 45 389 | 08B | 071 | 6-C24 |
| 98 45 389 | 08B | 085 | 6-D14 |
| 98 45 389 | 08B | 097 | 6-E02 |
| 98 45 397 | 08B | 071 | 6-C24 |
| 98 45 397 | 08B | 085 | 6-D14 |
| 98 45 405 | 08B | 071 | 6-C24 |
| 98 45 405 | 08B | 085 | 6-D14 |
| 98 45 751 | 08B | 031 | 6-B08 |
| 98 45 751 | 08B | 041 | 6-B18 |
| 98 46 080 | 08B | 031 | 6-B08 |
| 98 46 080 | 08B | 041 | 6-B18 |
| 98 46 106 | 08B | 031 | 6-B08 |
| 98 46 106 | 08B | 041 | 6-B18 |
| 98 46 122 | 08B | 031 | 6-B08 |
| 98 46 122 | 08B | 041 | 6-B18 |
| 98 46 833 | 08B | 011 | 6-A12 |
| 98 46 841 | 08B | 011 | 6-A12 |
| 98 46 858 | 08B | 011 | 6-A12 |
| 98 46 866 | 08B | 011 | 6-A12 |
| 98 46 874 | 08B | 011 | 6-A12 |
| 98 46 882 | 08B | 011 | 6-A12 |
| 98 46 890 | 08B | 011 | 6-A12 |
| 98 46 908 | 08B | 011 | 6-A12 |
| 98 47 377 | 08A | 105 | 5-E10 |
| 98 47 385 | 08A | 105 | 5-E10 |
| 98 47 617 | 08B | 123 | 6-F04 |
| 98 47 617 | 08B | 127 | 6-F08 |
| 98 47 617 | 08B | 131 | 6-F12 |
| 98 47 625 | 08B | 123 | 6-F04 |
| 98 47 625 | 08B | 127 | 6-F08 |
| 98 47 625 | 08B | 131 | 6-F12 |
| 98 47 633 | 08B | 123 | 6-F04 |
| 98 47 633 | 08B | 127 | 6-F08 |
| 98 47 641 | 08B | 123 | 6-F04 |
| 98 47 641 | 08B | 127 | 6-F08 |
| 98 47 872 | 08B | 123 | 6-F04 |
| 98 47 872 | 08B | 127 | 6-F08 |
| 98 47 880 | 08B | 123 | 6-F04 |
| 98 47 880 | 08B | 127 | 6-F08 |
| 98 48 029 | 08B | 015 | 6-A16 |
| 98 48 037 | 08B | 015 | 6-A16 |
| 98 48 086 | 08B | 191 | 6-H24 |
| 98 48 094 | 08B | 191 | 6-H24 |
| 98 48 128 | 08B | 191 | 6-H24 |
| 98 48 136 | 08B | 191 | 6-H24 |
| 98 48 169 | 08B | 211 | 6-I20 |
| 98 48 177 | 08B | 211 | 6-I20 |
| 98 48 185 | 08B | 213 | 6-I22 |
| 98 48 417 | 08B | 197 | 6-I06 |
| 98 48 425 | 08B | 197 | 6-I06 |
| 98 49 068 | 08B | 145 | 6-G02 |
| 98 49 076 | 08B | 145 | 6-G02 |
| 98 49 092 | 08B | 209 | 6-I18 |
| 98 49 100 | 08B | 207 | 6-I16 |
| 98 49 498 | 08B | 149 | 6-G06 |
| 98 49 498 | 08B | 189 | 6-H22 |
| 98 49 514 | 08B | 009 | 6-A10 |
| 98 49 514 | 08B | 199 | 6-I08 |
| 98 49 530 | 08B | 149 | 6-G06 |
| 98 49 530 | 08B | 157 | 6-G14 |
| 98 49 795 | 08B | 153 | 6-G10 |
| 98 49 795 | 08B | 159 | 6-G16 |
| 98 49 795 | 08B | 225 | 6-J10 |
| 98 49 811 | 08B | 019 | 6-A20 |
| 98 49 829 | 08B | 019 | 6-A20 |
| 98 49 837 | 08B | 203 | 6-I12 |
| 98 49 845 | 08B | 203 | 6-I12 |
| 98 49 852 | 08B | 203 | 6-I12 |
| 98 49 860 | 08B | 203 | 6-I12 |
| 98 50 009 | 08B | 023 | 6-A24 |
| 98 50 058 | 08B | 143 | 6-F24 |
| 98 50 066 | 08B | 143 | 6-F24 |
| 98 50 074 | 08B | 143 | 6-F24 |
| 98 50 082 | 08B | 143 | 6-F24 |
| 98 50 090 | 08B | 143 | 6-F24 |
| 98 50 108 | 08B | 143 | 6-F24 |
| 98 50 157 | 08B | 143 | 6-F24 |
| 98 50 165 | 08B | 143 | 6-F24 |
| 98 50 173 | 08B | 143 | 6-F24 |
| 98 50 181 | 08B | 143 | 6-F24 |
| 98 50 199 | 08B | 143 | 6-F24 |
| 98 50 207 | 08B | 143 | 6-F24 |
| 98 50 876 | 08B | 221 | 6-J06 |
| 98 50 892 | 08B | 049 | 6-C02 |
| 98 50 900 | 08B | 025 | 6-B02 |
| 98 50 900 | 08B | 035 | 6-B12 |
| 98 50 900 | 08B | 049 | 6-C02 |
| 98 50 967 | 08B | 077 | 6-D06 |
| 98 50 967 | 08B | 093 | 6-D22 |
| 98 50 967 | 08B | 105 | 6-E10 |



# 7-G18 *Numerical register* — *Nummerregister*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 98 50 967 | 08B | 117 | 6-E22 |
| 98 50 975 | 08B | 077 | 6-D06 |
| 98 50 975 | 08B | 093 | 6-D22 |
| 98 50 975 | 08B | 105 | 6-E10 |
| 98 50 975 | 08B | 117 | 6-E22 |
| 98 50 983 | 08B | 081 | 6-D10 |
| 98 50 983 | 08B | 095 | 6-D24 |
| 98 50 983 | 08B | 107 | 6-E12 |
| 98 50 983 | 08B | 119 | 6-E24 |
| 98 50 991 | 08B | 081 | 6-D10 |
| 98 50 991 | 08B | 095 | 6-D24 |
| 98 50 991 | 08B | 107 | 6-E12 |
| 98 50 991 | 08B | 119 | 6-E24 |
| 98 51 031 | 08B | 025 | 6-B02 |
| 98 51 031 | 08B | 035 | 6-B12 |
| 98 51 031 | 08B | 049 | 6-C02 |
| 98 51 049 | 08B | 049 | 6-C02 |
| 98 51 098 | 08B | 025 | 6-B02 |
| 98 51 098 | 08B | 035 | 6-B12 |
| 98 51 098 | 08B | 049 | 6-C02 |
| 98 51 098 | 08B | 061 | 6-C14 |
| 98 51 262 | 08B | 025 | 6-B02 |
| 98 51 262 | 08B | 035 | 6-B12 |
| 98 51 262 | 08B | 047 | 6-B24 |
| 98 51 270 | 08B | 047 | 6-B24 |
| 98 51 411 | 08B | 037 | 6-B14 |
| 98 51 411 | 08B | 061 | 6-C14 |
| 98 51 429 | 08B | 027 | 6-B04 |
| 98 51 429 | 08B | 049 | 6-C02 |
| 98 51 601 | 08B | 151 | 6-G08 |
| 98 51 601 | 08B | 161 | 6-G18 |
| 98 51 619 | 08B | 151 | 6-G08 |
| 98 51 619 | 08B | 161 | 6-G18 |
| 98 51 619 | 08B | 179 | 6-H12 |
| 98 51 619 | 08B | 229 | 6-J14 |
| 98 51 676 | 08B | 191 | 6-H24 |
| 98 51 841 | 08B | 209 | 6-I18 |
| 98 51 858 | 08B | 209 | 6-I18 |
| 98 51 866 | 08B | 209 | 6-I18 |
| 98 57 475 | 08B | 025 | 6-B02 |
| 98 57 475 | 08B | 035 | 6-B12 |
| 98 57 475 | 08B | 049 | 6-C02 |
| 98 57 509 | 08B | 211 | 6-I20 |
| 98 57 517 | 08B | 211 | 6-I20 |
| 98 57 525 | 08B | 209 | 6-I18 |
| 98 57 533 | 08B | 211 | 6-I20 |
| 98 57 590 | 08B | 211 | 6-I20 |
| 98 57 608 | 08B | 141 | 6-F22 |
| 98 57 616 | 08B | 141 | 6-F22 |
| 98 57 624 | 08B | 025 | 6-B02 |
| 98 57 624 | 08B | 049 | 6-C02 |
| 98 57 731 | 08B | 147 | 6-G04 |
| 98 57 731 | 08B | 157 | 6-G14 |
| 98 57 731 | 08B | 225 | 6-J10 |
| 98 57 749 | 08B | 147 | 6-G04 |
| 98 57 830 | 08B | 217 | 6-J02 |
| 98 57 848 | 08B | 217 | 6-J02 |
| 98 57 855 | 08B | 217 | 6-J02 |
| 98 57 863 | 08B | 217 | 6-J02 |
| 98 57 871 | 08B | 217 | 6-J02 |
| 98 57 889 | 08B | 217 | 6-J02 |
| 98 57 921 | 08B | 019 | 6-A20 |
| 98 57 947 | 08B | 015 | 6-A16 |
| 98 57 962 | 08B | 015 | 6-A16 |
| 98 60 305 | 08B | 191 | 6-H24 |
| 98 62 228 | 09 | 015 | 7-D16 |
| 98 62 236 | 09 | 015 | 7-D16 |
| 98 62 244 | 09 | 015 | 7-D16 |
| 98 62 251 | 09 | 015 | 7-D16 |
| 98 62 319 | 09 | 015 | 7-D16 |
| 98 62 327 | 09 | 015 | 7-D16 |
| 98 62 335 | 09 | 015 | 7-D16 |
| 98 62 343 | 09 | 015 | 7-D16 |
| 98 62 350 | 09 | 015 | 7-D16 |
| 98 62 368 | 09 | 015 | 7-D16 |
| 98 62 376 | 09 | 015 | 7-D16 |
| 98 62 384 | 09 | 015 | 7-D16 |
| 98 62 392 | 09 | 015 | 7-D16 |
| 98 62 400 | 09 | 015 | 7-D16 |
| 98 62 418 | 09 | 015 | 7-D16 |
| 98 62 426 | 09 | 015 | 7-D16 |
| 98 62 434 | 09 | 015 | 7-D16 |
| 98 62 582 | 08B | 203 | 6-I12 |
| 98 62 590 | 08B | 203 | 6-I12 |
| 98 62 889 | 08B | 217 | 6-J02 |
| 98 62 897 | 08B | 217 | 6-J02 |
| 98 62 913 | 08B | 217 | 6-J02 |
| 98 62 939 | 08B | 217 | 6-J02 |
| 98 63 044 | 08B | 139 | 6-F20 |
| 98 63 069 | 08B | 139 | 6-F20 |
| 98 63 085 | 08B | 139 | 6-F20 |
| 98 63 101 | 08B | 139 | 6-F20 |
| 98 63 143 | 08B | 139 | 6-F20 |
| 98 63 168 | 08B | 139 | 6-F20 |
| 98 63 184 | 08B | 139 | 6-F20 |
| 98 63 200 | 08B | 139 | 6-F20 |
| 98 63 259 | 08B | 217 | 6-J02 |
| 98 63 291 | 08B | 035 | 6-B12 |
| 98 63 416 | 08B | 211 | 6-I20 |
| 98 63 424 | 08B | 211 | 6-I20 |
| 98 63 432 | 08B | 211 | 6-I20 |
| 98 63 440 | 08B | 211 | 6-I20 |
| 98 63 515 | 08B | 037 | 6-B14 |
| 98 63 598 | 08B | 211 | 6-I20 |
| 98 63 838 | 08B | 217 | 6-J02 |
| 98 63 846 | 08B | 217 | 6-J02 |
| 98 63 853 | 08B | 139 | 6-F20 |
| 98 64 109 | 08B | 197 | 6-I06 |
| 98 64 141 | 08B | 199 | 6-I08 |
| 98 64 372 | 08B | 217 | 6-J02 |
| 98 64 414 | 08B | 143 | 6-F24 |
| 98 64 422 | 08B | 143 | 6-F24 |
| 98 64 430 | 08B | 129 | 6-F10 |
| 98 64 430 | 08B | 133 | 6-F14 |
| 98 64 430 | 08B | 137 | 6-F18 |
| 98 64 448 | 08B | 087 | 6-D16 |
| 98 64 448 | 08B | 099 | 6-E04 |
| 98 64 455 | 08B | 087 | 6-D16 |
| 98 64 455 | 08B | 099 | 6-E04 |
| 98 64 463 | 08B | 087 | 6-D16 |
| 98 64 463 | 08B | 099 | 6-E04 |
| 98 64 471 | 08B | 087 | 6-D16 |
| 98 64 471 | 08B | 099 | 6-E04 |
| 98 64 521 | 08B | 087 | 6-D16 |
| 98 64 539 | 08B | 087 | 6-D16 |
| 98 64 547 | 08B | 087 | 6-D16 |
| 98 64 554 | 08B | 087 | 6-D16 |
| 98 64 604 | 08B | 093 | 6-D22 |
| 98 64 604 | 08B | 105 | 6-E10 |
| 98 64 612 | 08B | 093 | 6-D22 |
| 98 64 612 | 08B | 105 | 6-E10 |
| 98 64 620 | 08B | 093 | 6-D22 |
| 98 64 620 | 08B | 105 | 6-E10 |
| 98 64 638 | 08B | 093 | 6-D22 |
| 98 64 638 | 08B | 105 | 6-E10 |
| 98 64 687 | 08B | 093 | 6-D22 |
| 98 64 695 | 08B | 093 | 6-D22 |
| 98 64 703 | 08B | 093 | 6-D22 |
| 98 64 711 | 08B | 093 | 6-D22 |
| 98 64 760 | 08B | 095 | 6-D24 |
| 98 64 760 | 08B | 107 | 6-E12 |
| 98 64 778 | 08B | 095 | 6-D24 |
| 98 64 778 | 08B | 107 | 6-E12 |
| 98 64 786 | 08B | 095 | 6-D24 |
| 98 64 786 | 08B | 107 | 6-E12 |
| 98 64 794 | 08B | 095 | 6-D24 |
| 98 64 794 | 08B | 107 | 6-E12 |
| 98 64 844 | 08B | 095 | 6-D24 |
| 98 64 851 | 08B | 095 | 6-D24 |
| 98 64 869 | 08B | 095 | 6-D24 |
| 98 64 877 | 08B | 095 | 6-D24 |
| 98 65 767 | 08B | 153 | 6-G10 |
| 98 65 767 | 08B | 163 | 6-G20 |
| 98 65 775 | 08B | 153 | 6-G10 |
| 98 65 775 | 08B | 161 | 6-G18 |
| 98 65 783 | 08B | 153 | 6-G10 |
| 98 65 783 | 08B | 161 | 6-G18 |
| 98 65 791 | 08B | 025 | 6-B02 |
| 98 65 825 | 08B | 029 | 6-B06 |
| 98 65 874 | 08B | 029 | 6-B06 |
| 98 65 908 | 08B | 031 | 6-B08 |
| 98 65 908 | 08B | 043 | 6-B20 |
| 98 65 999 | 08B | 031 | 6-B08 |
| 98 66 120 | 08B | 207 | 6-I16 |
| 98 66 138 | 08B | 207 | 6-I16 |
| 98 66 161 | 08B | 209 | 6-I18 |
| 98 66 179 | 08B | 209 | 6-I18 |
| 98 66 203 | 08B | 209 | 6-I18 |
| 98 66 211 | 08B | 209 | 6-I18 |
| 98 66 237 | 08B | 211 | 6-I20 |
| 98 66 351 | 08B | 033 | 6-B10 |
| 98 66 351 | 08B | 045 | 6-B22 |
| 98 66 351 | 08B | 055 | 6-C08 |
| 98 66 351 | 08B | 067 | 6-C20 |
| 98 66 500 | 08B | 031 | 6-B08 |
| 98 66 500 | 08B | 041 | 6-B18 |
| 98 66 591 | 08B | 031 | 6-B08 |
| 98 66 617 | 08B | 025 | 6-B02 |
| 98 66 674 | 08B | 025 | 6-B02 |
| 98 66 682 | 08B | 025 | 6-B02 |
| 98 66 765 | 08B | 029 | 6-B06 |
| 98 66 773 | 08B | 029 | 6-B06 |
| 98 66 898 | 08B | 031 | 6-B08 |
| 98 66 898 | 08B | 041 | 6-B18 |
| 98 66 906 | 08B | 031 | 6-B08 |
| 98 66 906 | 08B | 043 | 6-B20 |
| 98 67 235 | 08B | 025 | 6-B02 |
| 98 67 235 | 08B | 035 | 6-B12 |
| 98 67 235 | 08B | 039 | 6-B16 |
| 98 67 235 | 08B | 047 | 6-B24 |
| 98 67 235 | 08B | 051 | 6-C04 |
| 98 67 243 | 08B | 029 | 6-B06 |
| 98 67 250 | 08B | 029 | 6-B06 |
| 98 67 268 | 08B | 031 | 6-B08 |
| 98 67 268 | 08B | 041 | 6-B18 |
| 98 67 268 | 08B | 051 | 6-C04 |
| 98 67 276 | 08B | 031 | 6-B08 |
| 98 67 276 | 08B | 043 | 6-B20 |
| 98 67 276 | 08B | 053 | 6-C06 |
| 98 67 284 | 08B | 033 | 6-B10 |
| 98 67 284 | 08B | 045 | 6-B22 |
| 98 67 425 | 08B | 077 | 6-D06 |
| 98 67 425 | 08B | 093 | 6-D22 |
| 98 67 425 | 08B | 105 | 6-E10 |
| 98 67 433 | 08B | 077 | 6-D06 |
| 98 67 433 | 08B | 093 | 6-D22 |
| 98 67 433 | 08B | 105 | 6-E10 |
| 98 67 441 | 08B | 081 | 6-D10 |
| 98 67 441 | 08B | 095 | 6-D24 |
| 98 67 441 | 08B | 107 | 6-E12 |
| 98 67 458 | 08B | 081 | 6-D10 |
| 98 67 458 | 08B | 095 | 6-D24 |
| 98 67 458 | 08B | 107 | 6-E12 |
| 98 67 789 | 08B | 033 | 6-B10 |
| 98 67 789 | 08B | 045 | 6-B22 |
| 98 67 789 | 08B | 055 | 6-C08 |
| 98 67 789 | 08B | 067 | 6-C20 |
| 98 67 805 | 08B | 075 | 6-D04 |
| 98 67 805 | 08B | 089 | 6-D18 |
| 98 67 805 | 08B | 101 | 6-E06 |
| 98 67 805 | 08B | 113 | 6-E18 |
| 98 67 813 | 08B | 075 | 6-D04 |
| 98 67 813 | 08B | 089 | 6-D18 |
| 98 67 813 | 08B | 101 | 6-E06 |
| 98 67 813 | 08B | 113 | 6-E18 |
| 98 67 821 | 08B | 075 | 6-D04 |
| 98 67 821 | 08B | 089 | 6-D18 |
| 98 67 821 | 08B | 101 | 6-E06 |
| 98 67 821 | 08B | 113 | 6-E18 |
| 98 67 870 | 08B | 071 | 6-C24 |
| 98 67 870 | 08B | 085 | 6-D14 |
| 98 67 870 | 08B | 097 | 6-E02 |
| 98 67 870 | 08B | 109 | 6-E14 |
| 98 67 888 | 08B | 071 | 6-C24 |
| 98 67 888 | 08B | 085 | 6-D14 |
| 98 67 888 | 08B | 097 | 6-E02 |
| 98 67 888 | 08B | 109 | 6-E14 |
| 98 67 896 | 08B | 071 | 6-C24 |
| 98 67 896 | 08B | 075 | 6-D04 |
| 98 67 896 | 08B | 083 | 6-D12 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

## Numerical register — Nummerregister

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 98 67 896 | 08B | 085 | 6-D14 |
| 98 67 896 | 08B | 091 | 6-D20 |
| 98 67 896 | 08B | 095 | 6-D24 |
| 98 67 896 | 08B | 097 | 6-E02 |
| 98 67 896 | 08B | 103 | 6-E08 |
| 98 67 896 | 08B | 107 | 6-E12 |
| 98 67 896 | 08B | 109 | 6-E14 |
| 98 67 896 | 08B | 115 | 6-E20 |
| 98 67 896 | 08B | 119 | 6-E24 |
| 98 67 946 | 08B | 071 | 6-C24 |
| 98 67 946 | 08B | 085 | 6-D14 |
| 98 67 953 | 08B | 071 | 6-C24 |
| 98 67 953 | 08B | 085 | 6-D14 |
| 98 68 019 | 08B | 077 | 6-D06 |
| 98 68 019 | 08B | 093 | 6-D22 |
| 98 68 019 | 08B | 105 | 6-E10 |
| 98 68 019 | 08B | 117 | 6-E22 |
| 98 68 027 | 08B | 077 | 6-D06 |
| 98 68 027 | 08B | 093 | 6-D22 |
| 98 68 027 | 08B | 105 | 6-E10 |
| 98 68 027 | 08B | 117 | 6-E22 |
| 98 68 134 | 08B | 077 | 6-D06 |
| 98 68 134 | 08B | 093 | 6-D22 |
| 98 68 134 | 08B | 105 | 6-E10 |
| 98 68 134 | 08B | 117 | 6-E22 |
| 98 68 142 | 08B | 077 | 6-D06 |
| 98 68 142 | 08B | 093 | 6-D22 |
| 98 68 142 | 08B | 105 | 6-E10 |
| 98 68 142 | 08B | 117 | 6-E22 |
| 98 68 423 | 08B | 073 | 6-D02 |
| 98 68 423 | 08B | 087 | 6-D16 |
| 98 68 423 | 08B | 099 | 6-E04 |
| 98 68 423 | 08B | 111 | 6-E16 |
| 98 68 431 | 08B | 073 | 6-D02 |
| 98 68 431 | 08B | 087 | 6-D16 |
| 98 68 431 | 08B | 099 | 6-E04 |
| 98 68 431 | 08B | 111 | 6-E16 |
| 98 68 449 | 08B | 073 | 6-D02 |
| 98 68 449 | 08B | 087 | 6-D16 |
| 98 68 449 | 08B | 099 | 6-E04 |
| 98 68 449 | 08B | 111 | 6-E16 |
| 98 68 456 | 08B | 073 | 6-D02 |
| 98 68 456 | 08B | 087 | 6-D16 |
| 98 68 456 | 08B | 099 | 6-E04 |
| 98 68 456 | 08B | 111 | 6-E16 |
| 98 68 571 | 08B | 081 | 6-D10 |
| 98 68 571 | 08B | 095 | 6-D24 |
| 98 68 571 | 08B | 107 | 6-E12 |
| 98 68 571 | 08B | 119 | 6-E24 |
| 98 68 589 | 08B | 081 | 6-D10 |
| 98 68 589 | 08B | 095 | 6-D24 |
| 98 68 589 | 08B | 107 | 6-E12 |
| 98 68 589 | 08B | 119 | 6-E24 |
| 98 68 597 | 08B | 083 | 6-D12 |
| 98 68 597 | 08B | 095 | 6-D24 |
| 98 68 597 | 08B | 107 | 6-E12 |
| 98 68 597 | 08B | 119 | 6-E24 |
| 98 68 605 | 08B | 083 | 6-D12 |
| 98 68 605 | 08B | 095 | 6-D24 |
| 98 68 605 | 08B | 107 | 6-E12 |
| 98 68 605 | 08B | 119 | 6-E24 |
| 98 68 977 | 08B | 077 | 6-D06 |
| 98 68 977 | 08B | 083 | 6-D12 |
| 98 68 977 | 08B | 093 | 6-D22 |
| 98 68 977 | 08B | 105 | 6-E10 |
| 98 68 977 | 08B | 117 | 6-E22 |
| 98 68 985 | 08B | 077 | 6-D06 |
| 98 68 985 | 08B | 083 | 6-D12 |
| 98 68 985 | 08B | 093 | 6-D22 |
| 98 68 985 | 08B | 105 | 6-E10 |
| 98 68 985 | 08B | 117 | 6-E22 |
| 98 68 993 | 08B | 083 | 6-D12 |
| 98 68 993 | 08B | 095 | 6-D24 |
| 98 68 993 | 08B | 107 | 6-E12 |
| 98 68 993 | 08B | 119 | 6-E24 |
| 98 69 009 | 08B | 083 | 6-D12 |
| 98 69 009 | 08B | 095 | 6-D24 |
| 98 69 009 | 08B | 107 | 6-E12 |
| 98 69 009 | 08B | 119 | 6-E24 |
| 98 69 140 | 08B | 123 | 6-F04 |
| 98 69 140 | 08B | 127 | 6-F08 |
| 98 69 140 | 08B | 131 | 6-F12 |
| 98 69 157 | 08B | 123 | 6-F04 |
| 98 69 157 | 08B | 127 | 6-F08 |
| 98 69 157 | 08B | 131 | 6-F12 |
| 98 69 157 | 08B | 135 | 6-F16 |
| 98 69 165 | 08B | 123 | 6-F04 |
| 98 69 165 | 08B | 127 | 6-F08 |
| 98 69 165 | 08B | 131 | 6-F12 |
| 98 69 173 | 08B | 123 | 6-F04 |
| 98 69 173 | 08B | 127 | 6-F08 |
| 98 69 173 | 08B | 131 | 6-F12 |
| 98 69 173 | 08B | 135 | 6-F16 |
| 98 69 223 | 08B | 123 | 6-F04 |
| 98 69 223 | 08B | 127 | 6-F08 |
| 98 69 231 | 08B | 123 | 6-F04 |
| 98 69 231 | 08B | 127 | 6-F08 |
| 98 69 249 | 08B | 123 | 6-F04 |
| 98 69 249 | 08B | 127 | 6-F08 |
| 98 69 256 | 08B | 123 | 6-F04 |
| 98 69 256 | 08B | 127 | 6-F08 |
| 98 69 322 | 08B | 123 | 6-F04 |
| 98 69 330 | 08B | 123 | 6-F04 |
| 98 69 348 | 08B | 125 | 6-F06 |
| 98 69 355 | 08B | 125 | 6-F06 |
| 98 69 504 | 08B | 123 | 6-F04 |
| 98 69 504 | 08B | 127 | 6-F08 |
| 98 69 512 | 08B | 123 | 6-F04 |
| 98 69 512 | 08B | 127 | 6-F08 |
| 98 69 520 | 08B | 123 | 6-F04 |
| 98 69 520 | 08B | 127 | 6-F08 |
| 98 69 538 | 08B | 123 | 6-F04 |
| 98 69 538 | 08B | 127 | 6-F08 |
| 98 69 660 | 08B | 077 | 6-D06 |
| 98 69 660 | 08B | 093 | 6-D22 |
| 98 69 678 | 08B | 077 | 6-D06 |
| 98 69 678 | 08B | 093 | 6-D22 |
| 98 69 686 | 08B | 077 | 6-D06 |
| 98 69 686 | 08B | 093 | 6-D22 |
| 98 69 686 | 08B | 105 | 6-E10 |
| 98 69 686 | 08B | 117 | 6-E22 |
| 98 69 694 | 08B | 077 | 6-D06 |
| 98 69 694 | 08B | 093 | 6-D22 |
| 98 69 694 | 08B | 105 | 6-E10 |
| 98 69 694 | 08B | 117 | 6-E22 |
| 98 69 702 | 08B | 077 | 6-D06 |
| 98 69 710 | 08B | 077 | 6-D06 |
| 98 69 728 | 08B | 077 | 6-D06 |
| 98 69 736 | 08B | 077 | 6-D06 |
| 98 69 744 | 08B | 077 | 6-D06 |
| 98 69 744 | 08B | 093 | 6-D22 |
| 98 69 744 | 08B | 105 | 6-E10 |
| 98 69 744 | 08B | 117 | 6-E22 |
| 98 69 751 | 08B | 077 | 6-D06 |
| 98 69 751 | 08B | 093 | 6-D22 |
| 98 69 751 | 08B | 105 | 6-E10 |
| 98 69 751 | 08B | 117 | 6-E22 |
| 98 70 080 | 08B | 017 | 6-A18 |
| 98 70 098 | 08B | 017 | 6-A18 |
| 98 70 106 | 08B | 017 | 6-A18 |
| 98 70 114 | 08B | 017 | 6-A18 |
| 98 70 346 | 08B | 081 | 6-D10 |
| 98 70 346 | 08B | 095 | 6-D24 |
| 98 70 353 | 08B | 081 | 6-D10 |
| 98 70 353 | 08B | 095 | 6-D24 |
| 98 70 361 | 08B | 081 | 6-D10 |
| 98 70 361 | 08B | 095 | 6-D24 |
| 98 70 361 | 08B | 107 | 6-E12 |
| 98 70 361 | 08B | 119 | 6-E24 |
| 98 70 379 | 08B | 081 | 6-D10 |
| 98 70 379 | 08B | 095 | 6-D24 |
| 98 70 379 | 08B | 107 | 6-E12 |
| 98 70 379 | 08B | 119 | 6-E24 |
| 98 70 387 | 08B | 081 | 6-D10 |
| 98 70 395 | 08B | 081 | 6-D10 |
| 98 70 403 | 08B | 081 | 6-D10 |
| 98 70 411 | 08B | 081 | 6-D10 |
| 98 70 429 | 08B | 083 | 6-D12 |
| 98 70 429 | 08B | 095 | 6-D24 |
| 98 70 429 | 08B | 107 | 6-E12 |
| 98 70 429 | 08B | 119 | 6-E24 |
| 98 70 437 | 08B | 083 | 6-D12 |
| 98 70 437 | 08B | 095 | 6-D24 |
| 98 70 437 | 08B | 107 | 6-E12 |
| 98 70 437 | 08B | 119 | 6-E24 |
| 98 70 833 | 08B | 073 | 6-D02 |
| 98 70 833 | 08B | 087 | 6-D16 |
| 98 70 841 | 08B | 073 | 6-D02 |
| 98 70 841 | 08B | 087 | 6-D16 |
| 98 70 858 | 08B | 073 | 6-D02 |
| 98 70 858 | 08B | 087 | 6-D16 |
| 98 70 858 | 08B | 099 | 6-E04 |
| 98 70 858 | 08B | 111 | 6-E16 |
| 98 70 866 | 08B | 073 | 6-D02 |
| 98 70 866 | 08B | 087 | 6-D16 |
| 98 70 866 | 08B | 099 | 6-E04 |
| 98 70 866 | 08B | 111 | 6-E16 |
| 98 70 874 | 08B | 073 | 6-D02 |
| 98 70 882 | 08B | 073 | 6-D02 |
| 98 70 890 | 08B | 073 | 6-D02 |
| 98 70 908 | 08B | 073 | 6-D02 |
| 98 70 916 | 08B | 073 | 6-D02 |
| 98 70 916 | 08B | 087 | 6-D16 |
| 98 70 916 | 08B | 099 | 6-E04 |
| 98 70 916 | 08B | 111 | 6-E16 |
| 98 70 924 | 08B | 073 | 6-D02 |
| 98 70 924 | 08B | 087 | 6-D16 |
| 98 70 924 | 08B | 099 | 6-E04 |
| 98 70 924 | 08B | 111 | 6-E16 |
| 98 71 088 | 08B | 015 | 6-A16 |
| 98 71 146 | 08B | 015 | 6-A16 |
| 98 71 203 | 08B | 015 | 6-A16 |
| 98 71 260 | 08B | 015 | 6-A16 |
| 98 72 490 | 08B | 025 | 6-B02 |
| 98 72 508 | 08B | 025 | 6-B02 |
| 98 72 524 | 08B | 025 | 6-B02 |
| 98 72 532 | 08B | 025 | 6-B02 |
| 98 72 540 | 08B | 025 | 6-B02 |
| 98 72 557 | 08B | 025 | 6-B02 |
| 98 72 573 | 08B | 029 | 6-B06 |
| 98 72 581 | 08B | 029 | 6-B06 |
| 98 72 615 | 08B | 029 | 6-B06 |
| 98 72 623 | 08B | 029 | 6-B06 |
| 98 72 656 | 08B | 029 | 6-B06 |
| 98 72 664 | 08B | 029 | 6-B06 |
| 98 72 714 | 08B | 031 | 6-B08 |
| 98 72 714 | 08B | 041 | 6-B18 |
| 98 72 722 | 08B | 031 | 6-B08 |
| 98 72 722 | 08B | 043 | 6-B20 |
| 98 72 854 | 08B | 031 | 6-B08 |
| 98 72 854 | 08B | 041 | 6-B18 |
| 98 72 862 | 08B | 031 | 6-B08 |
| 98 72 862 | 08B | 043 | 6-B20 |
| 98 72 953 | 08B | 031 | 6-B08 |
| 98 72 953 | 08B | 041 | 6-B18 |
| 98 72 961 | 08B | 031 | 6-B08 |
| 98 72 961 | 08B | 043 | 6-B20 |
| 98 73 092 | 08B | 029 | 6-B06 |
| 98 73 092 | 08B | 031 | 6-B08 |
| 98 73 092 | 08B | 041 | 6-B18 |
| 98 73 092 | 08B | 051 | 6-C04 |
| 98 73 100 | 08B | 029 | 6-B06 |
| 98 73 100 | 08B | 031 | 6-B08 |
| 98 73 100 | 08B | 043 | 6-B20 |
| 98 73 100 | 08B | 053 | 6-C06 |
| 98 73 118 | 08B | 031 | 6-B08 |
| 98 73 126 | 08B | 031 | 6-B08 |
| 98 73 357 | 08B | 217 | 6-J02 |
| 98 73 365 | 08B | 217 | 6-J02 |
| 98 74 041 | 08B | 011 | 6-A12 |
| 98 74 082 | 08B | 011 | 6-A12 |
| 98 74 504 | 08B | 167 | 6-G24 |
| 98 74 504 | 08B | 177 | 6-H10 |
| 98 74 777 | 08B | 167 | 6-G24 |
| 98 74 785 | 08B | 177 | 6-H10 |
| 98 74 801 | 08B | 167 | 6-G24 |
| 98 74 801 | 08B | 179 | 6-H12 |
| 98 74 801 | 08B | 227 | 6-J12 |
| 98 74 819 | 08B | 167 | 6-G24 |
| 98 74 819 | 08B | 179 | 6-H12 |





## Numerical register — Nummerregister

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 98 74 819 | 08B | 227 | 6-J12 |
| 98 76 483 | 08B | 167 | 6-G24 |
| 98 76 483 | 08B | 177 | 6-H10 |
| 98 76 541 | 08B | 033 | 6-B10 |
| 98 76 541 | 08B | 045 | 6-B22 |
| 98 76 541 | 08B | 057 | 6-C10 |
| 98 76 541 | 08B | 067 | 6-C20 |
| 98 76 558 | 08B | 033 | 6-B10 |
| 98 76 558 | 08B | 045 | 6-B22 |
| 98 76 558 | 08B | 057 | 6-C10 |
| 98 76 558 | 08B | 067 | 6-C20 |
| 98 76 566 | 08B | 033 | 6-B10 |
| 98 76 574 | 08B | 033 | 6-B10 |
| 98 76 574 | 08B | 045 | 6-B22 |
| 98 76 574 | 08B | 057 | 6-C10 |
| 98 76 574 | 08B | 067 | 6-C20 |
| 98 76 582 | 08B | 033 | 6-B10 |
| 98 76 582 | 08B | 045 | 6-B22 |
| 98 76 582 | 08B | 057 | 6-C10 |
| 98 76 582 | 08B | 067 | 6-C20 |
| 98 77 325 | 08B | 143 | 6-F24 |
| 98 77 333 | 08B | 143 | 6-F24 |
| 98 77 341 | 08B | 143 | 6-F24 |
| 98 77 358 | 08B | 145 | 6-G02 |
| 98 77 366 | 08B | 143 | 6-F24 |
| 98 77 374 | 08B | 143 | 6-F24 |
| 98 77 382 | 08B | 145 | 6-G02 |
| 98 77 390 | 08B | 145 | 6-G02 |
| 98 77 408 | 08B | 145 | 6-G02 |
| 98 77 416 | 08B | 145 | 6-G02 |
| 98 77 424 | 08B | 145 | 6-G02 |
| 98 77 432 | 08B | 145 | 6-G02 |
| 98 77 457 | 08B | 145 | 6-G02 |
| 98 77 457 | 08B | 213 | 6-I22 |
| 98 77 606 | 08B | 211 | 6-I20 |
| 98 77 614 | 08B | 211 | 6-I20 |
| 98 78 141 | 08B | 049 | 6-C02 |
| 98 78 158 | 08B | 035 | 6-B12 |
| 98 78 158 | 08B | 049 | 6-C02 |
| 98 78 265 | 08B | 049 | 6-C02 |
| 98 78 273 | 08B | 049 | 6-C02 |
| 98 78 307 | 08B | 049 | 6-C02 |
| 98 78 315 | 08B | 049 | 6-C02 |
| 98 78 463 | 08B | 017 | 6-A18 |
| 98 78 562 | 08B | 151 | 6-G08 |
| 98 78 562 | 08B | 159 | 6-G16 |
| 98 78 570 | 08B | 151 | 6-G08 |
| 98 78 570 | 08B | 161 | 6-G18 |
| 98 78 588 | 08B | 121 | 6-F02 |
| 98 78 612 | 08B | 197 | 6-I06 |
| 98 78 851 | 08B | 049 | 6-C02 |
| 98 79 206 | 08B | 217 | 6-J02 |
| 98 79 321 | 08B | 199 | 6-I08 |
| 98 79 461 | 08B | 199 | 6-I08 |
| 98 79 479 | 08B | 199 | 6-I08 |
| 98 79 545 | 08B | 197 | 6-I06 |
| 98 79 651 | 08B | 207 | 6-I16 |
| 98 79 669 | 08B | 207 | 6-I16 |
| 98 79 685 | 08B | 207 | 6-I16 |
| 98 79 701 | 08B | 207 | 6-I16 |
| 98 79 719 | 08B | 209 | 6-I18 |
| 98 79 735 | 08B | 209 | 6-I18 |
| 98 79 743 | 08B | 209 | 6-I18 |
| 98 79 826 | 08B | 165 | 6-G22 |
| 98 79 826 | 08B | 173 | 6-H06 |
| 98 79 826 | 08B | 225 | 6-J10 |
| 98 79 909 | 08B | 049 | 6-C02 |
| 98 79 909 | 08B | 061 | 6-C14 |
| 98 80 345 | 08B | 193 | 6-I02 |
| 98 80 378 | 08B | 193 | 6-I02 |
| 98 80 444 | 08B | 043 | 6-B20 |
| 98 80 444 | 08B | 055 | 6-C08 |
| 98 80 451 | 08B | 045 | 6-B22 |
| 98 80 477 | 08B | 043 | 6-B20 |
| 98 80 485 | 08B | 045 | 6-B22 |
| 98 80 493 | 08B | 193 | 6-I02 |
| 98 80 519 | 08B | 193 | 6-I02 |
| 98 80 535 | 08B | 193 | 6-I02 |
| 98 80 584 | 08B | 193 | 6-I02 |
| 98 80 600 | 08B | 193 | 6-I02 |
| 98 80 618 | 08B | 193 | 6-I02 |
| 98 80 634 | 08B | 123 | 6-F04 |
| 98 80 634 | 08B | 129 | 6-F10 |
| 98 80 634 | 08B | 133 | 6-F14 |
| 98 80 634 | 08B | 137 | 6-F18 |
| 98 80 642 | 08B | 123 | 6-F04 |
| 98 80 642 | 08B | 129 | 6-F10 |
| 98 80 642 | 08B | 133 | 6-F14 |
| 98 80 642 | 08B | 137 | 6-F18 |
| 98 80 691 | 08B | 127 | 6-F08 |
| 98 80 691 | 08B | 131 | 6-F12 |
| 98 80 709 | 08B | 127 | 6-F08 |
| 98 80 709 | 08B | 131 | 6-F12 |
| 98 80 709 | 08B | 135 | 6-F16 |
| 98 80 725 | 08B | 127 | 6-F08 |
| 98 80 725 | 08B | 131 | 6-F12 |
| 98 80 733 | 08B | 127 | 6-F08 |
| 98 80 733 | 08B | 131 | 6-F12 |
| 98 80 733 | 08B | 135 | 6-F16 |
| 98 80 808 | 08B | 201 | 6-I10 |
| 98 80 832 | 08B | 127 | 6-F08 |
| 98 80 840 | 08B | 127 | 6-F08 |
| 98 80 931 | 08B | 089 | 6-D18 |
| 98 80 931 | 08B | 101 | 6-E06 |
| 98 80 949 | 08B | 089 | 6-D18 |
| 98 80 949 | 08B | 101 | 6-E06 |
| 98 80 956 | 08B | 089 | 6-D18 |
| 98 80 964 | 08B | 089 | 6-D18 |
| 98 81 111 | 08B | 141 | 6-F22 |
| 98 81 129 | 08B | 141 | 6-F22 |
| 98 81 210 | 08B | 145 | 6-G02 |
| 98 81 251 | 08B | 203 | 6-I12 |
| 98 81 269 | 08B | 203 | 6-I12 |
| 98 81 277 | 08B | 203 | 6-I12 |
| 98 81 285 | 08B | 203 | 6-I12 |
| 98 81 624 | 08B | 197 | 6-I06 |
| 98 81 657 | 08B | 121 | 6-F02 |
| 98 81 665 | 08B | 121 | 6-F02 |
| 98 81 707 | 08A | 135 | 5-F16 |
| 98 81 715 | 08A | 135 | 5-F16 |
| 98 81 731 | 08B | 075 | 6-D04 |
| 98 81 731 | 08B | 089 | 6-D18 |
| 98 81 749 | 08B | 075 | 6-D04 |
| 98 81 749 | 08B | 089 | 6-D18 |
| 98 81 764 | 08B | 121 | 6-F02 |
| 98 81 806 | 08B | 193 | 6-I02 |
| 98 81 913 | 08A | 135 | 5-F16 |
| 98 81 921 | 08A | 135 | 5-F16 |
| 98 82 051 | 08B | 123 | 6-F04 |
| 98 82 051 | 08B | 127 | 6-F08 |
| 98 82 051 | 08B | 131 | 6-F12 |
| 98 82 051 | 08B | 135 | 6-F16 |
| 98 82 093 | 08A | 107 | 5-E12 |
| 98 82 119 | 08B | 123 | 6-F04 |
| 98 82 119 | 08B | 127 | 6-F08 |
| 98 82 127 | 08A | 135 | 5-F16 |
| 98 82 143 | 08B | 193 | 6-I02 |
| 98 82 291 | 08B | 215 | 6-I24 |
| 98 82 309 | 08B | 215 | 6-I24 |
| 98 82 358 | 08B | 221 | 6-J06 |
| 98 82 366 | 08B | 221 | 6-J06 |
| 98 82 630 | 08B | 193 | 6-I02 |
| 98 82 648 | 08B | 193 | 6-I02 |
| 98 82 655 | 08B | 203 | 6-I12 |
| 98 82 929 | 08B | 221 | 6-J06 |
| 98 82 960 | 08B | 089 | 6-D18 |
| 98 82 960 | 08B | 101 | 6-E06 |
| 98 82 978 | 08B | 089 | 6-D18 |
| 98 82 978 | 08B | 101 | 6-E06 |
| 98 82 986 | 08B | 089 | 6-D18 |
| 98 82 986 | 08B | 101 | 6-E06 |
| 98 82 994 | 08B | 089 | 6-D18 |
| 98 82 994 | 08B | 101 | 6-E06 |
| 98 83 083 | 08B | 043 | 6-B20 |
| 98 83 091 | 08B | 045 | 6-B22 |
| 98 83 174 | 08B | 193 | 6-I02 |
| 98 83 224 | 08B | 193 | 6-I02 |
| 98 83 232 | 08A | 107 | 5-E12 |
| 98 83 240 | 08A | 107 | 5-E12 |
| 98 83 257 | 08B | 203 | 6-I12 |
| 98 83 331 | 08A | 107 | 5-E12 |
| 98 83 349 | 08A | 107 | 5-E12 |
| 98 83 380 | 08A | 027 | 5-B04 |
| 98 83 422 | 08B | 075 | 6-D04 |
| 98 83 422 | 08B | 091 | 6-D20 |
| 98 83 422 | 08B | 103 | 6-E08 |
| 98 83 422 | 08B | 113 | 6-E18 |
| 98 83 430 | 08B | 075 | 6-D04 |
| 98 83 430 | 08B | 091 | 6-D20 |
| 98 83 430 | 08B | 103 | 6-E08 |
| 98 83 430 | 08B | 113 | 6-E18 |
| 98 83 489 | 08B | 203 | 6-I12 |
| 98 83 661 | 08B | 221 | 6-J06 |
| 98 83 976 | 08B | 043 | 6-B20 |
| 98 83 984 | 08B | 045 | 6-B22 |
| 98 84 057 | 08B | 149 | 6-G06 |
| 98 84 107 | 08B | 091 | 6-D20 |
| 98 84 107 | 08B | 103 | 6-E08 |
| 98 84 107 | 08B | 113 | 6-E18 |
| 98 84 230 | 08B | 033 | 6-B10 |
| 98 84 230 | 08B | 045 | 6-B22 |
| 98 84 289 | 08B | 045 | 6-B22 |
| 98 84 289 | 08B | 057 | 6-C10 |
| 98 84 289 | 08B | 067 | 6-C20 |
| 98 84 297 | 08B | 045 | 6-B22 |
| 98 84 321 | 08B | 033 | 6-B10 |
| 98 84 321 | 08B | 045 | 6-B22 |
| 98 84 396 | 08B | 071 | 6-C24 |
| 98 84 412 | 08B | 071 | 6-C24 |
| 98 84 529 | 08B | 075 | 6-D04 |
| 98 84 529 | 08B | 089 | 6-D18 |
| 98 84 529 | 08B | 101 | 6-E06 |
| 98 84 537 | 08B | 075 | 6-D04 |
| 98 84 537 | 08B | 089 | 6-D18 |
| 98 84 537 | 08B | 101 | 6-E06 |
| 98 84 578 | 08B | 075 | 6-D04 |
| 98 84 578 | 08B | 091 | 6-D20 |
| 98 84 578 | 08B | 103 | 6-E08 |
| 98 84 578 | 08B | 113 | 6-E18 |
| 98 84 586 | 08B | 075 | 6-D04 |
| 98 84 586 | 08B | 089 | 6-D18 |
| 98 84 586 | 08B | 103 | 6-E08 |
| 98 84 586 | 08B | 113 | 6-E18 |
| 98 84 594 | 08B | 075 | 6-D04 |
| 98 84 594 | 08B | 089 | 6-D18 |
| 98 84 594 | 08B | 103 | 6-E08 |
| 98 84 594 | 08B | 113 | 6-E18 |
| 98 84 636 | 08A | 075 | 5-D04 |
| 98 84 800 | 08B | 197 | 6-I06 |
| 98 92 647 | 08B | 183 | 6-H16 |
| 98 92 654 | 08B | 183 | 6-H16 |
| 98 93 009 | 08B | 169 | 6-H02 |
| 98 93 009 | 08B | 181 | 6-H14 |
| 98 93 033 | 08B | 169 | 6-H02 |
| 98 93 033 | 08B | 181 | 6-H14 |
| 98 95 129 | 08B | 051 | 6-C04 |
| 98 95 137 | 08B | 043 | 6-B20 |
| 98 95 137 | 08B | 053 | 6-C06 |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

| Part No<br>Art nr | Gr<br>Gr | Page<br>Sida | Grid<br>Koord |
|---|---|---|---|
| 40 00 667 | | | |
| 40 00 667 | | | |
| 40 04 123 | | | |
| 40 04 123 | | | |
| 40 74 944 | | | |
| 40 74 944 | | | |
| 40 84 554 | | | |
| 40 84 554 | | | |
| 41 05 433 | | | |
| 41 07 116 | | | |
| 41 07 116 | | | |
| 41 53 003 | | | |
| 41 53 755 | | | |
| 41 60 099 | | | |
| 41 60 123 | | | |
| 41 60 149 | | | |
| 41 61 493 | | | |
| 41 61 766 | | | |
| 41 95 822 | | | |
| 41 95 822 | | | |
| 41 99 873 | | | |
| 42 95 176 | | | |
| 43 18 200 | | | |
| 43 82 396 | | | |
| 43 93 476 | | | |
| 44 24 172 | | | |
| 44 40 038 | | | |
| 44 40 046 | | | |
| 44 40 053 | | | |
| 44 40 061 | | | |
| 45 21 209 | | | |
| 45 21 340 | | | |
| 69 27 198 | | | |
| 69 27 198 | | | |
| 69 27 222 | | | |
| 69 27 222 | | | |
| 69 28 998 | | | |
| 69 36 306 | | | |
| 74 96 268 | | | |
| 74 96 268 | | | |
| 74 96 268 | | | |
| 74 96 268 | | | |
| 74 96 276 | | | |
| 74 96 276 | | | |
| 74 96 276 | | | |
| 74 96 284 | | | |
| 74 96 284 | | | |
| 74 96 284 | | | |
| 74 96 284 | | | |
| 74 96 284 | | | |
| 74 96 284 | | | |
| 74 96 292 | | | |
| 74 97 001 | | | |
| 74 97 019 | | | |
| 74 97 019 | | | |
| 75 32 328 | | | |
| 75 37 418 | | | |
| 78 56 172 | | | |
| 79 75 329 | | | |

| Part No<br>Art nr | Gr<br>Gr | Page<br>Sida | Grid<br>Koord |
|---|---|---|---|
| 79 77 622 | | | |
| 82 83 970 | | | |
| 82 83 970 | | | |
| 82 85 231 | | | |
| 82 85 231 | | | |
| 82 85 231 | | | |
| 82 85 231 | | | |
| 82 85 249 | | | |
| 82 85 256 | | | |
| 82 85 264 | | | |
| 82 85 462 | | | |
| 82 85 462 | | | |
| 82 85 470 | | | |
| 82 85 470 | | | |
| 82 85 488 | | | |
| 82 85 488 | | | |
| 82 85 488 | | | |
| 82 85 496 | | | |
| 82 85 496 | | | |
| 82 85 496 | | | |
| 85 48 133 | | | |
| 85 48 133 | | | |
| 85 48 133 | | | |
| 85 48 141 | | | |
| 85 48 141 | | | |
| 85 48 141 | | | |
| 85 48 802 | | | |
| 85 48 802 | | | |
| 85 48 992 | | | |
| 86 78 070 | | | |
| 87 31 804 | | | |
| 87 87 228 | | | |
| 88 19 278 | | | |
| 88 19 278 | | | |
| 88 19 294 | | | |
| 88 19 302 | | | |
| 88 19 310 | | | |
| 89 36 304 | | | |
| 89 72 846 | | | |
| 89 72 853 | | | |
| 89 72 986 | | | |
| 89 93 297 | | | |
| 89 93 297 | | | |
| 89 93 297 | | | |
| 89 93 719 | | | |
| 89 93 727 | | | |
| 89 93 727 | | | |
| 89 93 776 | | | |
| 89 93 776 | | | |
| 89 93 792 | | | |
| 89 93 792 | | | |
| 91 02 427 | | | |
| 91 02 435 | | | |
| 91 05 560 | | | |
| 91 05 891 | | | |
| 91 05 925 | | | |
| 91 16 443 | | | |
| 91 16 864 | | | |
| 91 36 243 | | | |
| 91 36 243 | | | |

| Part No<br>Art nr | Gr<br>Gr | Page<br>Sida | Grid<br>Koord |
|---|---|---|---|
| 91 36 243 | | | |
| 91 36 243 | | | |
| 91 36 243 | | | |
| 91 36 243 | | | |
| 91 36 243 | | | |
| 91 36 243 | | | |
| 91 36 243 | | | |
| 91 36 243 | | | |
| 91 36 243 | | | |
| 91 36 243 | | | |
| 91 36 243 | | | |
| 91 36 243 | | | |
| 91 36 243 | | | |
| 91 36 243 | | | |
| 92 94 059 | | | |
| 93 21 589 | | | |
| 93 21 720 | | | |
| 93 21 761 | | | |
| 93 21 795 | | | |
| 93 21 795 | | | |
| 93 21 795 | | | |
| 93 21 795 | | | |
| 93 21 837 | | | |
| 94 73 364 | | | |
| 94 73 364 | | | |
| 94 89 337 | | | |
| 95 37 515 | | | |
| 95 57 893 | | | |
| 95 57 901 | | | |
| 95 62 273 | | | |
| 95 62 281 | | | |
| 96 84 549 | | | |
| 96 84 549 | | | |
| 96 99 778 | | | |
| 96 99 778 | | | |
| 97 46 652 | | | |
| 97 46 850 | | | |

| Part No<br>Art nr | Gr<br>Gr | Page<br>Sida | Grid<br>Koord |
|---|---|---|---|



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventiiation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |

# 7-G24 *Deleted parts* *Utgångna artiklar*

| Part No Art nr | Gr Gr | Page Sida | Grid Koord |
|---|---|---|---|
| 40 16 747 | | | |
| 40 70 660 | | | |
| 40 70 769 | | | |
| 69 42 965 | | | |
| 69 42 973 | | | |
| 75 04 236 | | | |
| 75 04 442 | | | |
| 75 04 764 | | | |
| 75 15 075 | | | |
| 75 21 578 | | | |
| 75 22 287 | | | |
| 75 23 228 | | | |
| 75 23 236 | | | |
| 75 23 244 | | | |
| 75 25 678 | | | |
| 75 34 894 | | | |
| 75 60 212 | | | |
| 75 64 701 | | | |
| 75 85 425 | | | |
| 79 69 967 | | | |
| 82 43 990 | | | |
| 82 44 006 | | | |
| 82 50 573 | | | |
| 82 50 581 | | | |
| 83 26 563 | | | |
| 83 27 843 | | | |
| 83 27 868 | | | |
| 83 32 249 | | | |
| 83 37 305 | | | |
| 83 60 539 | | | |
| 83 88 514 | | | |
| 84 02 190 | | | |
| 84 87 613 | | | |
| 84 87 654 | | | |
| 84 87 662 | | | |
| 84 87 720 | | | |
| 84 87 878 | | | |
| 88 12 810 | | | |
| 88 16 423 | | | |
| 89 31 743 | | | |
| 89 42 823 | | | |
| 89 63 662 | | | |
| 89 67 077 | | | |
| 89 68 018 | | | |
| 89 76 847 | | | |
| 89 85 236 | | | |
| 89 93 149 | | | |
| 89 93 263 | | | |
| 91 01 916 | | | |
| 91 02 443 | | | |
| 91 02 450 | | | |
| 91 02 690 | | | |
| 91 02 708 | | | |
| 91 02 716 | | | |
| 91 12 434 | | | |
| 92 20 849 | | | |
| 93 06 069 | | | |
| 93 06 077 | | | |
| 93 13 057 | | | |
| 93 18 205 | | | |
| 93 25 499 | | | |
| 93 25 531 | | | |
| 93 25 549 | | | |
| 93 25 556 | | | |
| 93 25 564 | | | |
| 93 25 572 | | | |
| 93 33 824 | | | |
| 93 44 342 | | | |
| 93 44 375 | | | |
| 93 45 521 | | | |
| 93 46 560 | | | |
| 94 08 089 | | | |
| 94 08 295 | | | |
| 94 22 213 | | | |
| 94 65 808 | | | |
| 94 87 182 | | | |
| 95 05 462 | | | |
| 95 60 848 | | | |
| 95 60 855 | | | |
| 97 46 256 | | | |
| 97 46 546 | | | |
| 97 46 561 | | | |
| 97 46 579 | | | |
| 97 46 918 | | | |
| 97 59 689 | | | |
| 98 78 760 | | | |
| 98 78 778 | | | |



MASTER INDEX


| | | |
|---|---|---|
| 0 | General | 1-A02 |
| 2 | Engine | 1-B02 |
| 3A | Electrical general | 2-A02 |
| 3B | Electrical, contact housing | 3-A02 |
| 4 | Transmission | 3-H02 |
| 5 | Brakes | 4-A02 |
| 6 | Front assembly, Steering | 4-C02 |
| 7 | Suspension, Wheels | 4-E02 |
| 8A | Body, external | 5-A02 |
| 8B | Body, internal | 6-A02 |
| 8C | Body, heating and ventilation | 7-A02 |
| 9 | Tools, labels | 7-D02 |
| 10 | Numerical register | 7-E02 |